VOLUME II

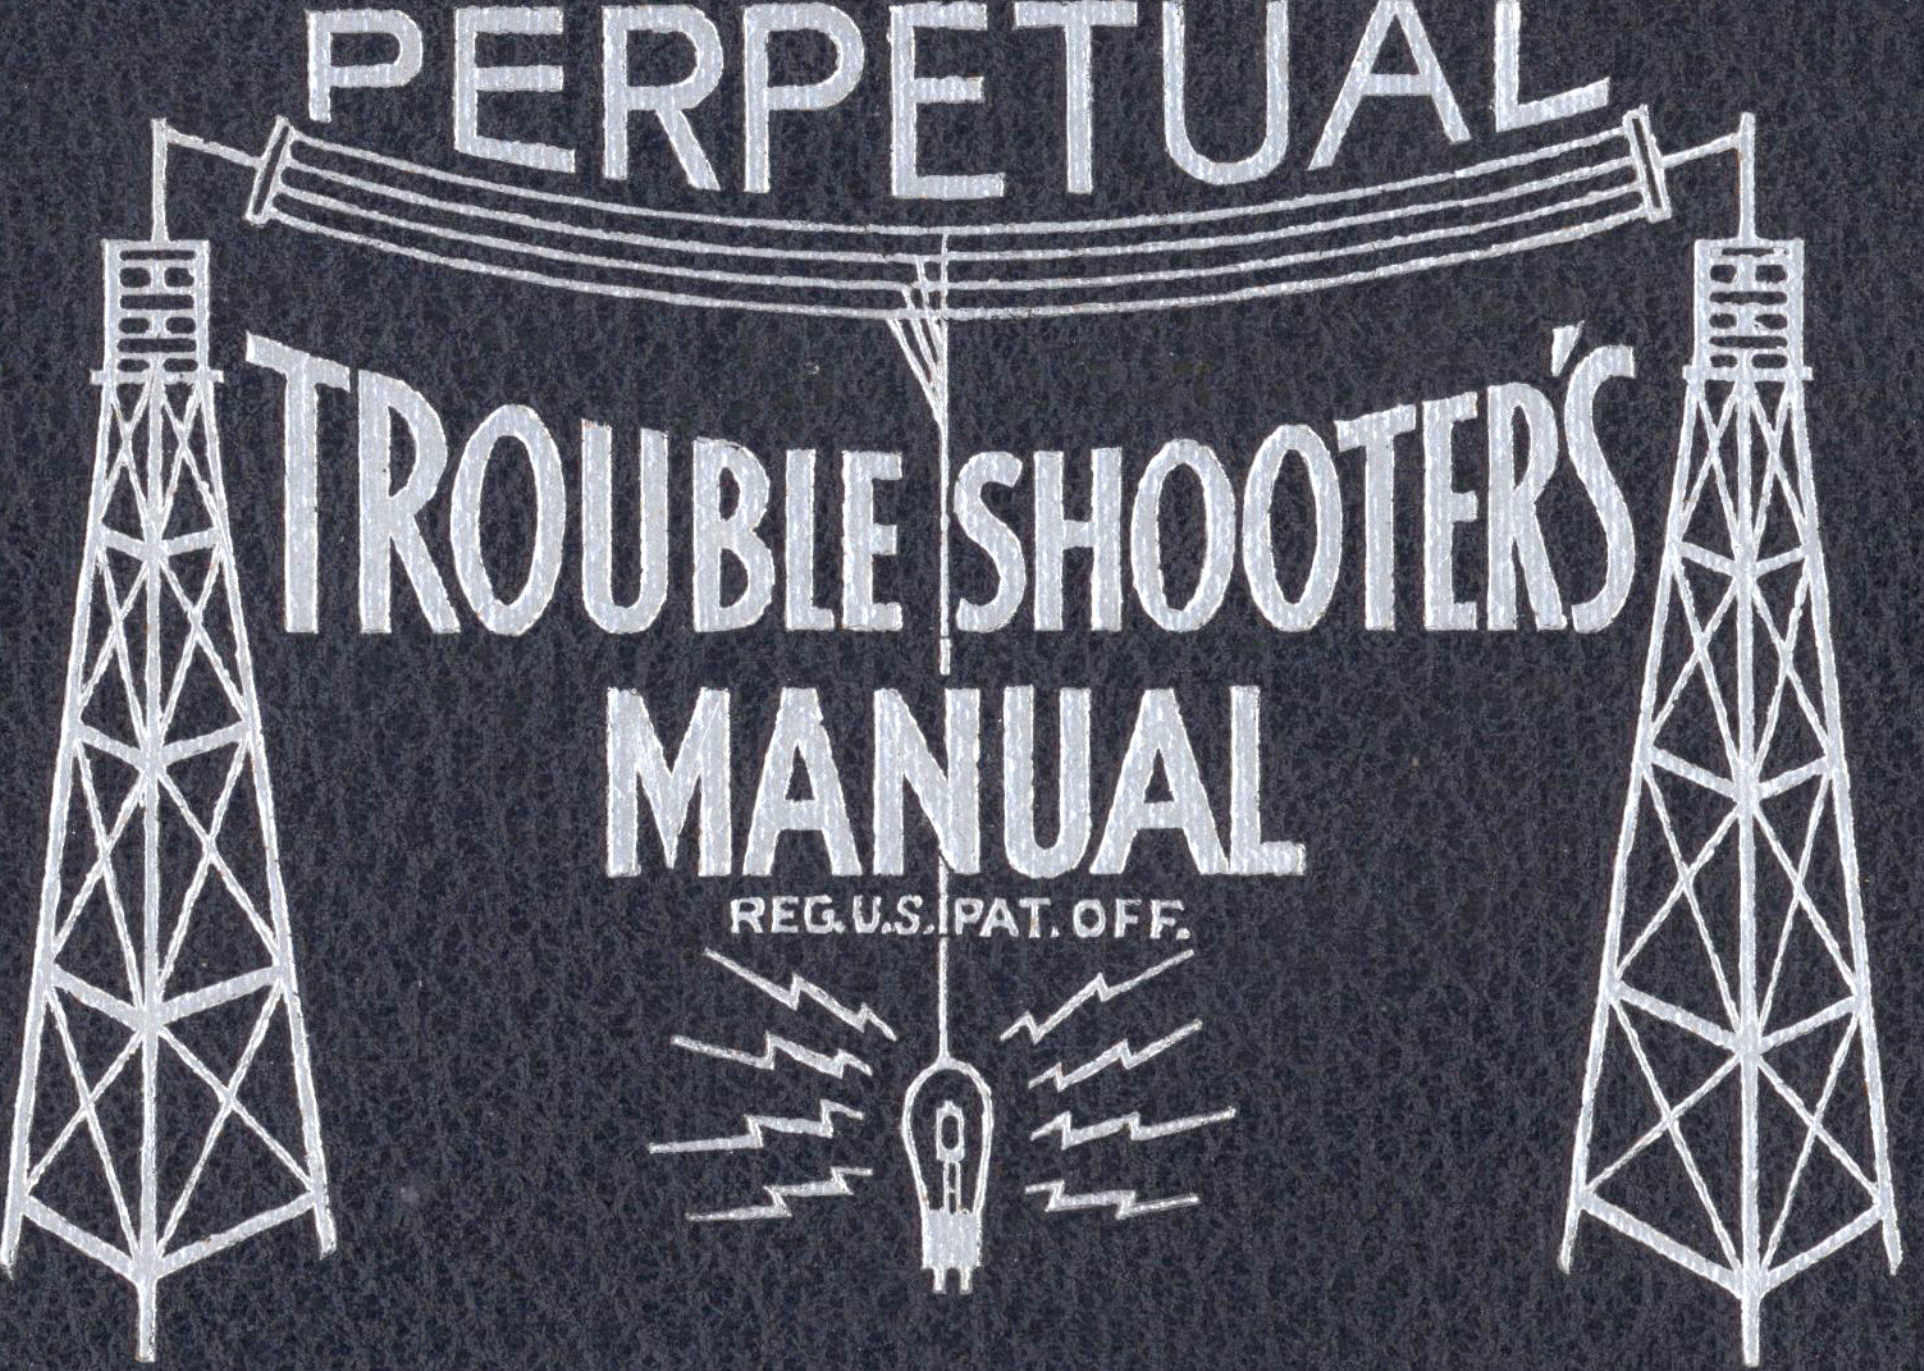

PERPETUAL TROUBLE SHOOTER'S MANUAL

REG. U.S. PAT. OFF.

JOHN F. RIDER

Perpetual TROUBLE SHOOTER'S MANUAL

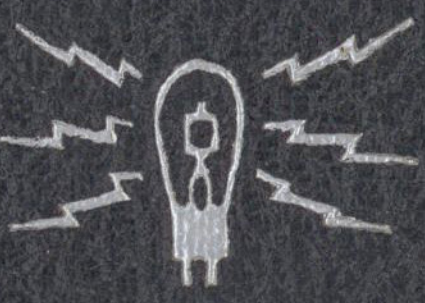

RIDER

VOLUME II

PERPETUAL

TROUBLE SHOOTER'S MANUAL

Reg. U. S. Pat. Off.

VOLUME II

by

JOHN F. RIDER

JOHN F. RIDER

1440 Broadway New York City

Other Manuals by John F. Rider

Perpetual Trouble Shooter's Manual	**Volume I**
Perpetual Trouble Shooter's Manual	**Volume II**
Perpetual Trouble Shooter's Manual	**Volume III**
Specialized Auto Radio Manual	**Volume I**

◆

These manuals are the "standard" in the radio service industry the world over. Their absolute superiority is proved by their use, sale and recommendation by the world's most famous tube companies such as

E. T. Cunningham, Inc.
National Union Radio Corp.
RCA Radiotron Co.
Raytheon Products Corp.

and the test instrument manufacturers such as

Weston, Hickok, Supreme and Readrite

also all the radio receiver manufacturers.

Entire contents copyright 1933 by John F. Rider
Printed in U.S.A.

AUTHOR'S FOREWORD

●

THIS issue of Volume II is slightly different from earlier printings. One of the changes is the method of numbering the pages. You will note that it is the same as used in Volumes I and III, as recently issued.

The reason for this change is that the method of folio or page numbering originally introduced in Volume III proved so much more popular and simple to use than that previously employed in Volumes I and II, that it was deemed most advantageous to establish a uniform method of page numbering and indexing, which would serve best over a period of years.

Present owners of Volume III, that is owners of this manual, purchased prior to November 15, 1933, will find that the index which accompanies Volume III does not conform with the folio or page numbering in this edition of Volume II. This arrangement will cause a slight inconvenience, but we feel that it is for the better, with respect to the use of the manuals in the field.

The complete index contained in Volume III manuals, purchased prior to November 15 or thereabouts, can be used to determine if the information desired is in Volumes I or II or III. If in either of the first two named, further reference to the indices in these two manuals will show the correct page. The same method can be used in connection with this and all future issues of Volume II and Volume I.

Another change is that the point-to-point data, originally contained in one section in the front of the volume, now has been distributed among the respective manufacturers. In every other respect, this issue of Volume II is fully the equal of the earlier printings and in very many cases, has much information not contained in earlier printings.

The pages in this issue have been printed from engravings and we trust that the increased legibility of type, the increased number of cases where electrical values have been elaborated upon, the increased number of socket layouts—in general, more data—will be received with favor.

JOHN F. RIDER

INDEX

HOW TO USE THIS INDEX ● The numeral 1 before the page number indicates that the page is in Vol. I. The numeral 2 indicates that the page is in this volume.

THE A-C DAYTON CO.

MODEL		PAGE
XL-5	Schematic	1-1
XL-10	Schematic	1-3
XL-20	Schematic	1-1
XL-25	Schematic	1-1
XL-30	Schematic	1-4
XL-50	Schematic, socket	1-2
XL-60	Schematic	1-2
XL-61 Battery	Schematic, socket	1-4
AC-63	Schematic, socket, voltage	1-5
AC-65	Schematic, socket, voltage	1-6
AC-66	Schematic, socket, voltage	1-7
XL-70	Schematic	1-3
Navigator	Schematic, socket, voltage	1-8

ACME APPARATUS CO.

5-Tube Reflex	Schematic	1-1
B Eliminator	Schematic	1-1

ACME ELECTRIC & MFG. CO.

AC-7	Schematic, socket	1-1
SG-88	Schematic, socket	1-1

ADVANCE ELECTRIC CO.

Falck Superhet "B"	Schematic	2-1
E	Schematic	2-1
Falck 77, 88, 89	Schematic	2-2

ALL-AMERICAN MOHAWK CORP.

Navajo	Schematic, chassis	1-1
VA	Schematic, socket	1-1
115-1926 All-Electric	Schematic	1-2
115-1926 Battery	Schematic, socket	1-2
Mohawk 226	Schematic, socket, cable	1-3
Mohawk 226, 12 Contact	Schematic	1-4
A-10 Eliminator	Schematic	1-4
44	Schematic, socket	1-5
Forte, 1926	Schematic, socket	1-5
60, 61, 62, 65, 66	Schematic, socket, voltage	1-6
60, 61, 62, 65, 66 Power Pack	Schematic, wiring, plug	1-7
70, 73, 75	Schematic, socket, voltage, data	1-8
80, 83, 84, 85, 86, 88	Schematic, socket, voltage	1-9
90, 25-cycle	Schematic, voltage	1-10
90, 60-cycle	Schematic, voltage, socket	1-11
96, 60-cycle	Schematic, socket	1-12
90, 25- & 60-cycle SPU	Chassis, plug connections	1-13
Lyric D	Schematic, socket, voltage	1-14
H	Schematic, socket, voltage	1-15
J	Schematic, socket, data	1-16
J	Voltage, values	1-17
K	Schematic, socket	1-18
P	Schematic, socket, data	1-19
C-6 Studio	Schematic, socket, data	1-20
S-6	Schematic, socket, data	1-21
S-6	Voltage, data	1-22
S-7	Schematic, socket, data	1-23
S-7	Voltage, data	1-24
S-8	Schematic, socket, data	1-25
S-8	Voltage, data	1-26
DC	Schematic	1-27

ALLIED RADIO CORP.

Knight SG-8 (1930)	Chassis wiring, voltage	2-1
Knight SG-8 (1930)	Schematic	2-2
Knight 118 AVC Super (1930)	Schematic, socket	2-3
Knight 118	Voltage, alignment data, chassis	2-4
Knight 7-Tube Superhet '32	Schematic, voltage	2-5
Knight 7-Tube Superhet '32	Service data	2-6

AMERICAN TRANSFORMER CO.

25-A Power Amplifier (A Unit)	Schematic	1-1
25-A Power Amplifier (PA Unit)	Schematic	1-1
25-A Power Amplifier (P Unit)	Schematic	1-1
210 Power Amplifier	Schematic	1-1
Amertran Power Pack	Schematic	1-1
250 Amertran Power Amplifier	Schematic	1-2

AMRAD CORPORATION

S-522	Schematic	1-1
3500-1, Tuner #3475, Amplifier #2634	Schematic	1-1
3500-2, Tuner #3730, Amplifier #2634	Schematic	1-1
171 ABC Power Pack	Schematic	1-2
AC-5 and Power Pack	Schematic	1-4
80, 82, 83	Schematic, socket	1-4
Inductrol	Schematic	1-4
84	Schematic, socket	1-5
S-733	Schematic, socket	1-5
3590	Schematic	1-5
AC-6, AC-6C	Schematic, socket	1-6
DC-6, DC-6C	Schematic, socket	1-6
AC-7 AC-7C	Schematic, socket	1-3
DC-7, DC-7C	Schematic, socket	1-3
7100	Schematic	1-7
7191	Schematic	1-7
70	Schematic, socket, voltage	1-8
Bel-Canto 81	Schematic, socket, voltage	1-9
Bel-Canto 81	Condenser data	1-10

ANSLEY RADIO LABORATORIES

MODEL		PAGE
DC Electric Set	Schematic	2-1
MD-1	Schematic, socket, chassis	2-2
U-1, AC-DC	Schematic	2-3
U-2, AC-DC	Schematic	2-4

APPEL-HENDERSON

Silver King DC combination	Schematic, notes	2-1
Silver King AC combination	Schematic	2-2
4-Tube AC	Schematic	2-3
5-Tube AC	Schematic	2-3
4-Tube Portable	Schematic	2-4
5-Tube Battery Midget	Schematic	2-4

ARGUS RADIO CORP.

B-125	Schematic	1-1
B-195	Schematic	1-1
B-195	Chassis	1-2

ATWATER KENT MFG. CO.

10	Schematic, socket	1-1
10-B	Schematic, socket	1-1
12	Schematic, socket	1-1
19 #4880	Schematic, socket	1-2
20 #4640	Schematic	1-2
20 #7570	Schematic, socket	1-2
20 #7960	Schematic, socket	1-3
21 #7780	Schematic, socket	1-3
30, 35, 48	Schematic, socket	1-4
32	Schematic, socket	1-4
36, Early, late Power Pack	Schematic	1-6
37, Early, late	Data	1-5
37, 37-F, 37-C	Schematic, socket	1-7
37 Power Pack, early, late	Schematic, data	1-8
38	Schematic, socket	1-7
40, 42, 52, 56, 57	Schematic, socket, voltage	1-9
40, 42, 52 Power Pack	Schematic	1-9
40, 42, 44, 52 Power Pack	Chassis layout	1-10
40, 45 Power Pack (2nd Type)	Chassis layout	1-10
41 DC	Schematic, socket	1-11
41 Power Pack, 3 types	Schematic, voltage	1-12
43	Schematic, chassis	1-13
43 Power Pack	Schematic, wiring	1-14
44, 45	Schematic, data	1-15
46, 47, 53	Description, data	2-2
50	Schematic, socket, data	1-16
55, 55-C Early	Schematic, voltage, data	1-17
55, 55-C Early	Chassis wiring	1-18
55, 55-C Late	Schematic, chassis	1-19
55-F, 55-FC Early	Schematic, voltage, data	1-20
55-F, 55-FC Early	Chassis wiring	1-21
55-F, 55-FC Late	Schematic, chassis	1-22
55-F, 55-FC Late	Chassis wiring	1-23
60, 60-C 1st & 2nd Types	Voltage, service, data	1-24
60, 60-C Early	Schematic, data	1-25
60, 60-C Late	Schematic, chassis	1-27
61, 61-C DC, Early	Schematic, data	1-26
61, 61-C Late	Schematic, socket, voltage	1-28
66	Chassis wiring	1-29
66	Schematic, data	1-30
66	Voltage, socket	1-32
67, 67-C Battery, Early, Late	Schematics	1-31
67, 67-C	Voltage, socket	1-32
70, 74, 76, Chassis D	Schematic, data	1-33
70, 74, 76, Chassis D-1	Chassis wiring	1-34
70, 74, 76, Chassis D-2	Schematic, voltage	1-35
70, 74, 76, Chassis D-2	Chassis wiring	1-36
70, 74, 76, Chassis F	Chassis wiring	1-37
70, 74, 76, Chassis F	Schematic, data	1-38
70, 74, 76, Chassis L-1	Chassis wiring	1-39
70, 74, 76, Chassis L-1	Schematic, data	1-40
70, 74, 76, Chassis L-2	Schematic, data	1-41
70, 74, 76, Chassis L-2	Chassis wiring	1-42
70, 74, 76, Chassis L-2 and P	Voltage, notes	1-44
76, Chassis P	Schematic, data	1-43
70, 76, Chassis Q	Voltage, socket, notes	1-45
70, 76, Chassis Q	Schematic, chassis	1-46
72, Chassis H-1	Schematic	1-47
72, Chassis H-1	Voltage, chassis	1-48
72, Chassis H-1, below #5,855,201	Chassis layout, data	1-49
72, Chassis H-2	Chassis, voltage	1-50
72, Chassis H-2	Schematic	1-51
72, Chassis H-2, above #5,855,201	Chassis layout, data	1-52
80, 80-F, 83, 83-F	Schematic	1-53
80, 80-F, 83, 83-F	Chassis, socket, voltage, data	1-54
81, 81-B 81-C	Schematic	1-55
80, 81, 82, 82-D, 84-D, 85	Voltage, data	1-56
82-D	Schematic	1-57
82-D	Chassis, socket, data	1-58
82-D, 2nd Type	Schematic	2-1
82, 82-F	Schematic	1-59
82, 82-F	Chassis, socket, data	1-60
82-Q, 1st Types, below #2,550,940	Schematic	2-3
82-Q, 1st Type	Chassis wiring, data	2-4
84-D	Schematic	1-61
84-D	Chassis, data	1-62
84, 84-F Early	Schematic	2-6
84, 84-F Late	Schematic	2-7
84, 84-F, Early, Late	Chassis layouts, data	2-8
84-Q, Early and Late	Schematic	2-9

ATWATER KENT—Continued

MODEL		PAGE
84-Q, Early and Late	Chassis layout, data	2-10
85, 85-F	Schematic	1-63
85, 85-F	Chassis, socket, data	1-64
85-Q, 1st Type, below $163,767	Schematic	2-11
85-Q, 1st Type	Chassis, socket, data	2-12
86, 86-F, 1st Type, below $5,876,861	Schematic	2-13
86, 86-F, 1st Type	Chassis, data	2-14
87, 1st Type, below $2,525,871	Schematic	2-15
87, 1st Type	Chassis, data	2-16
89, 89-F, 89-P, 1st Type	Schematic	2-17
89, 89-F, 89-P	Chassis, data	2-18
Phonograph Pickup	Sketches, adjustments	2-19
Phonograph Pickup	Schematic, data	2-20
80, 81, 82, 84, 85, 86, 87, 89	Voltage, data	2-5

ATCHISON RADIO MFG. CO.

5-AC	Schematic	1-1
5-DC	Schematic	1-1
6-AC	Schematic, power unit chassis	1-2
5	Chassis layout	1-3
6	Chassis layout	1-3

AUDIOLA RADIO CO.

527	Schematic	1-1
627	Schematic	1-1
6-T (1927)	Schematic	1-2
8-T (1927)	Schematic	1-2
8430	Schematic, socket, voltage	1-3
30-B, 7330	Schematic, socket	1-4
31 Series	Schematic, voltage	1-5
31 Super	Schematic, voltage	1-6
Audiola Jr.	Schematic, socket	1-7
6-Tube Pentode 31	Schematic, socket	1-7
7-Tube Super Pentode 31	Schematic, socket	2-1
4-Tube Pentode 31	Schematic, socket	2-2
5-Tube Pentode 31	Schematic, socket	2-2
31 Super	Service notes	2-5
6-Tube Jr. #1	Schematic	2-6
6-Tube Jr. #2	Schematic	2-6
8-Tube Super Pentode 31	Schematic, socket	1-8
9-Tube Super Pentode 31	Schematic	1-9
889	Schematic	1-10
9-T-45 Super 31	Schematic	2-3
10-Tube Super 31	Schematic	2-3
9-Tube Super (2) Pentode 31	Schematic	2-4

AUTOMATIC RADIO MFG. CO.

Tom Thumb Screen-Grid 4, Battery	Schematic	1-1
44, V-45, V-46, C-45, P-46	Schematic	2-1
P-35, 34	Schematic	2-2

NATHANIEL BALDWIN & CO.

80	Schematic, Misc.	1-1

BALKEIT RADIO CO.

B-7, B-9	Schematic, chassis, data	1-1
A-3, A-5, A-7	Schematic, voltage, chassis	1-2
C	Schematic, socket, voltage, parts list	1-3
F	Schematic socket, voltage, parts list	1-4

BALKITE PRODUCTS CO.

Specifications	Voltages, charging rates, etc.	1-1
H, J, K, N Chargers	Schematic	1-2
B-180 Form A	Schematic, wiring	1-3
AB-6-180 Form A	Schematic, wiring	1-4
B-180 Form B	Schematic, wiring	1-4
AB-6-135 Form A	Schematic, wiring	1-5
AB-6 Form B	Schematic, wiring	1-6
BY	Schematic, wiring	1-7
A-6	Schematic	1-8
B-X	Schematic, wiring	1-8
B-135 Form A	Schematic, wiring	1-9
B-W	Schematic	1-9
B-H	Schematic	1-10
B Form D	Schematic	1-10
B-W Form D	Schematic	1-10
K-X	Schematic, wiring	1-11

BRANDES PRODUCTS CORP.

B-10	Schematic	1-1
B-10	Voltage, socket, data	1-2
B-15, B-16	Schematic	1-3
B-15, B-16	Voltage, socket, data	1-4

BREMER-TULLY MFG. CO.

B-T 6	Schematic	2-1
6-40, 6-41	Schematic, socket, voltage	1-4
6-40 Power Converter	Schematic	1-5
7-70	Schematic, chassis wiring	1-1
7-70 Power Converter	Schematic, socket, voltage	1-2
8-12 Counterphase	Schematic, socket	2-1
8-20, 8-21	Schematic, socket, voltage	1-3
8 Counterphase	Schematic	1-3
80	Schematic, socket	2-2
81-A	Schematic, socket	1-5
81, 82	Schematic, socket, voltage	1-6
S-81, S-82	Schematic, socket	1-7
S-81, S-82 RF	Chassis wiring	2-3
83-A	Schematic	2-2

BROWNING-DRAKE CORP.

5-Tube AC Kit	Schematic	1-1
34, 36, 38	Schematic	1-1
69	Schematic	1-2
70, 71	Schematic	1-3

BRUNSWICK RADIO CORP.

MODEL		PAGE
Radiola Super, UV Catacomb	Schematic	1-1
Superheterodyne	Panel wiring	1-2
PR-6, 6-Tube 1-B Panel	Schematic	1-3
PR-6, 6-Tube 1-C Panel	Schematic	1-4
6-Tube Cordova	Schematic	1-5
8-Tube Cordova	Schematic	1-6
8-Tube, 2-D Battery	Schematic	1-7
P-3	See RPA-5	2-22
P-11, P-13	Cabinet wiring	1-9
3-KR8, RF	Schematic, voltage	1-10
3-KR8, SPU	Chassis wiring, voltage	1-11
5-KR, 5-KRO, 5-KR6, 2-KRO, RF	Schematic, socket, voltage	1-12
5-KR, 5-KRO, 2-KRO, 3-KRO, SPU	Schematic	1-13
3-KRO, 3-KR6, RF	Schematic	1-14
5-NO, RF	Schematic, socket, voltage	1-15
5-NO, SPU	Chassis wiring	1-16
5-NC8, RF	Schematic, voltage	1-17
3-NC8, 5-NC8, AF	Chassis wiring	1-18
3-NC8, 5-NC8, AF	Schematic	1-19
3-NC8, 5-NC8	Alignment data	2-21
5-NO, 5-NC8, 3-NC8	Trimmer locations	1-20
PR-17-8, 2 types (BRP-5)	Wiring diagrams	1-21
B-17 for PR-17-8	Schematic	1-22
SPU-18 for PR-17-8	Schematic	1-22
SPU-18 for PR-17-8	Chassis wiring	1-23
P-14	Schematic, cabinet wiring	1-24
RPA-3A	Chassis wiring	1-25
RPA-4A	Schematic	1-25
RPA-5 used in P-3	Schematic	2-22
RPA-5A, Panatrope Connections	Schematic, wiring	1-8
PR-6	Schematic	1-26
R-1	Schematic, data	1-27
R-1	Chassis wiring	1-28
S-14, S-21, S-31, RF	Schematic	1-29
S-14, S-21, 60-cycle AF and SPU	Schematic	1-29
S-14, S-21, S-31, S-81 RF	Chassis wiring	1-30
S-14, S-21, S-81, S-82, 25-cycle AF	Chassis wiring	1-31
S-14, S-21, S-81, S-82, 25-cycle AF	Schematic	1-32
S-14, S-21, S-81, S-82, 60-cycle AF	Chassis wiring	1-33
15, 22 AC, also 32, 42 AC	Schematic	1-34
15, 22, 32 DC, used in 42 DC	Schematic	2-11
15, 22, 32 DC	Chassis, voltage, data	2-10
S-31, 60-cycle AF	Chassis wiring	1-35
10	Schematic, voltage, data	2-1
10	Chassis layout and wiring	2-2
11, 12, 16, 33 AC	Schematic	2-3
11, 12, 16, 33 AC	Voltage, socket, data	2-4
11, 12, 16, 18, 33, AVC, Chassis D	Schematic, socket, voltage	2-5
14, 21, 31 DC	Socket, voltage, data	2-6
14, 21, 31 DC	Schematic	2-7
15-B	Schematic	2-8
15-B	Voltage, socket	2-9
42 AC-DC	Data	2-13
42 AC-DC	Adjustment notes	2-14
42 AC-DC	Sketches of details	2-15
42 AC-DC	Wiring diagram, notes	2-16
42 AC-DC	Notes, continued	2-17
42 AC-DC	Notes, concluded	2-18
42 AC-DC	Schematic, wiring diagram	2-19
42 AC-DC	Details of assembly, wiring diagram	2-20
100, SW Converter	Schematic	2-12

BUCKINGHAM RADIO CORP.

80, 80-B	Schematic, socket, voltage, Misc.	1-2

BULOVA WATCH CO.

M-501	Schematic, test data	2-1
M-501	Chassis layout, assembly wiring, voltage	2-2
M-701, G-781	Schematic, chassis, voltage	2-3
M-701, G-781	Test data	2-4
Automatic Clock Control	Chassis wiring	2-4
C-751	Schematic, socket	2-5
C-751	Voltage, service data	2-6

BUSH & LANE PIANO CO.

10	Schematic	1-1
12	Schematic, socket, voltage	1-2

CAPEHART CORPORATION

10, 12-C	Chassis, service notes, part 1	2-1
10, 12-C	Service notes, part 2	2-2
10, 12-C	Service notes, part 3	2-3
10, 12-C	Service notes, part 4	2-4
400, 401, 402	Schematic	1-1
400 Series, PZ Amplifier	Chassis wiring	1-2
400 Series, RF	Chassis wiring	1-3
400, 401, 402	Complete wiring diagram	1-4

CLEARTONE RADIO CORPORATION

60 Goldcrest	Schematic	1-1
70 Clearodyne	Schematic	1-1
80 (Improved)	Schematic	1-2
100 Series	Schematic	1-2
110	Schematic	1-3
112	Schematic	1-3

COLONIAL RADIO CORP.

16-6	Schematic	1-1
16-5	Schematic	1-2
17-5	Schematic	1-2
20	Schematic	1-3
21	Schematic	1-3
25	Schematic, socket	1-4
26	Schematic, socket	1-5

COLONIAL RADIO—Continued

MODEL		PAGE
28 AC, Serial $90,001	Schematic, socket	1-6
28 DC, Serial $85,001	Schematic, socket	1-7
31 DC	Schematic, socket, voltage	1-8
31 DC	Chassis wiring, data	1-9
31 AC	Voltage	1-9
31 AC	Schematic, socket	1-10
32 DC, Issue A	Chassis wiring	1-11
32 DC, Issue A	Schematic, socket, voltage	1-12
32 DC, Issue J	Chassis wiring	1-13
32 AC, Issue J	Schematic, socket, voltage	1-14
33, 34 DC	Schematic, socket, voltage	1-16
33, 34, 35 AC	Schematic	1-15
33, 34, 35 Remote Control	Schematic, wiring, cable	1-17
33, 34, 35 AC	Chassis layouts	2-1
33, 34, 35 AC	Remote Control notes	2-2
33, 34, 35 AC	Parts list	2-3
36 DC	Schematic, socket	2-4
36-P	Schematic	1-19
36, 114	Schematic	1-19
36, 114	Chassis wiring, parts list	2-6
36, 114	Data on parts	2-5
37	Schematic, socket	2-7
37	Chassis wiring	2-8
37	Parts coding, voltage	2-9
37-P	Schematic	2-10
38, 117	Schematic	2-11
39, 125	Schematic	1-18
39, 125	Chassis wiring	2-13
39, 125	Voltage, parts coding	2-12
40, 43	Schematic, socket, data	2-16
40, 43, Battery	Chassis wiring	2-14
41, 42	Schematic	1-18
41, 42	Parts coding	2-19
41	Chassis wiring, voltage	2-17
42	Chassis wiring	2-18
41-P	Schematic	2-16
44 Super	Chassis wiring	2-20
44 Super	Schematic, voltage, data	2-21
44 Super	Parts coding	2-22
46 Midget	Chassis wiring, parts coding	2-23
46 Midget	Schematic, voltage, data	2-24
47	Chassis wiring	2-25
47, 48	Schematic, socket, voltage	2-26
47, 48	Parts coding	2-27
48	Chassis wiring	2-28
49 Midget	Chassis wiring, voltage	2-29
49 Midget	Schematic, socket, parts coding	2-30
50 AVC	Chassis wiring	2-31
50 AVC	Schematic, socket	2-32
50 AVC	Voltage, parts coding	2-33

COLUMBIA PHONOGRAPH CO.

C-1, C-3	Schematic, socket	1-1
C-2, C-4	Schematic, socket	1-2
C-5 (205)	Schematic, socket, voltage	1-3
C-5 (310)	Schematic, socket	1-3
C-6, C-7	Schematic, socket	1-4
31, 33	Schematic, socket, voltage	2-2
31, 33	Chassis, test data	2-1
32, 34	Chassis layouts	2-3
900, 901	Schematic, socket	1-4
902	Schematic, socket	1-5
920, 990	Schematic	1-6
930	Schematic, socket	1-6
930-300	Schematic, socket	1-7
931	Schematic, socket	1-7
940	Schematic, socket	2-4
950	Schematic, socket	1-8
961	Schematic, socket	1-9
980	Schematic, socket	1-10

COLUMBIA RADIO CORPORATION

SG-8	Chassis wiring, voltage	1-1
SG-8	Schematic	1-2

CONTINENTAL RADIO CORPORATION

Slagle 9 with '71-A	Schematic, socket, voltage	1-1
Slagle 10, A and B with '71-A Power Pack	Schematic, socket	1-2
Slagle 29-C with '71-A Power Pack	Schematic, socket	1-3
Slagle 29-A and 29-B with '50 Power Pack	Schematic, socket	1-4
Slagle 29-C and 29-D with '50 Power Pack	Schematic, socket	1-5
Star Raider, R-20, R-30, R-40	Schematic	1-6

CROSLEY RADIO CORP.

MODEL		PAGE
XJ, XL	Schematic, socket, chassis wiring	1-1
V	Schematic	2-7
2-Step A-F. Amplifier	Schematic	2-7
3-B, 3-C	Schematic, chassis wiring	1-1
4-29	Schematic, socket	1-2
RFL 60, 75	Schematic, socket	1-2
RFL 90	Schematic, socket	1-3
6-60, 6-85	Schematic, socket	1-3
401 Bandbox Jr.	Schematic, socket, chassis	1-4
401-A Bandbox Jr.	Schematic, socket	1-4
601 Bandbox	Schematic, socket, voltage, chassis	1-5
AC Power Unit for AC-7	Schematic	1-5
602 AC Power Converter for Models 104, 105, 106	Schematic, data	1-6
602 AC Bandbox	Schematic, socket	1-7
602 Power Pack	Schematic	1-7
104, 105, 106 Power Converter	Schematic	1-7
104-R, 105-R Power Converter	Schematic	1-7
608 Gembox	Schematic, socket, voltage, chassis	1-8
609 Gembox, 610 Gembox	Schematic, socket, voltage, chassis	1-9
704 Jewellbox	Schematic, socket	1-10
704-A Jewellbox	Voltage	1-10
704-A Jewellbox	Schematic, socket, chassis	1-11
704-B	Schematic, socket, voltage, chassis	1-12
705	Schematic, socket, chassis, data	1-13
706	Schematic, socket, voltage, chassis	1-14
804	Schematic, socket, voltage, chassis	1-15
Trirdyn	Schematic, socket	1-16
51	Schematic, socket	1-16
5-38	Schematic, socket	1-16
Buddy, Chum	Schematic, socket, voltage, data	1-17
7	Schematic, socket, data	2-1
7-1	Schematic, socket, data	2-1
7-1	Voltage	2-2
7-2	Schematic, data, socket	2-3
AC-7, AC-7C	Schematic, socket	1-18
20, 21, 22	Schematic, socket, voltage, data	1-19
26	Schematic, socket, voltage, parts list	2-3
27, 28	Schematic, socket, voltage, data	2-4
30S, 31S, 33S, 34S	Schematic, socket, voltage, data	1-20
40S, 41S, 42S, 82S	Schematic, socket, voltage, data	1-21
41, 41-A, 42	Schematic, socket, voltage	1-22
48	Schematic, socket, voltage, data	1-23
53, 54, 57	Schematic, socket, voltage, data	1-24
55	Schematic, socket, voltage	1-25
56	Schematic, socket, voltage	1-25
55, 56	Parts list	1-26
58	Schematic, socket, parts list	1-27
59 AC	Voltage, parts list, data	2-5
59 AC	Schematic, socket, chassis	2-6
60S, 61S, 62S, 63S	Schematic, socket, voltage	1-28
76	Schematic, socket, voltage, chassis	1-29
77-1	Schematic, socket, chassis	1-30
77-A, 77-B, 77-L	Schematic, socket, voltage, data	1-31
84-C, 84-D	Schematic, socket, voltage, data	1-32
90, Roamio	Schematic, socket, voltage, chassis	1-33
120	Schematic, socket, voltage, changes	1-34
121 Series A	Schematic, socket	2-8
121 Series B	Schematic, socket	2-8
122	Schematic, socket, voltage	2-9
123	Schematic, socket, voltage	2-10
124	Schematic, socket, voltage	2-11
122, 123, 124	Condenser notes, data	2-12
125	Schematic, socket, voltage, data	2-13
126	Schematic, socket	2-14
126-1	Schematic, socket	2-14
127	Schematic, socket, voltage, data	2-15
127	Parts list, data	2-16

DE FOREST RADIO CORPORATION

F-5	Schematic, Misc	1-3
D-10	Schematic, Misc	1-3
CS-5	Schematic, Misc	1-3
D-17	Schematic, Misc	1-3

DELCO RADIO CORP.

3002	Schematic, socket, chassis wiring, voltage	1-1
3002	Chassis layout, control wiring, data	1-2

DEWALD RADIO

AC-145	Schematic	2-1
AC-245	Schematic	2-1
AC 14-45	Schematic	2-2
AC 24-45	Schematic	2-2
AC 171-2	Schematic	2-3
DC 173-4	Schematic	2-3
DC 273	Schematic	2-3
AC 524	Schematic, chassis	2-4
AC 447-M	Schematic	2-5
DC 532-3	Schematic	2-5
AC 535-6	Schematic	2-6
AC 547	Schematic	2-6
AC 547-A	Schematic	2-7
DC 637-8	Schematic	2-7
DC 632	Schematic, socket	2-8
AC 724	Schematic	2-9
AC 724	Chassis views	2-10

EARL RADIO CORP.

21-DC, 22-DC	Schematic, socket	1-1
121	Schematic	1-1
21, 22 AC	Schematic, socket, voltage	1-2
21, 22 AC	Data	2-1
24-DC, 31-DC, 32-DC	Schematic, socket	1-3
31, 32 AC	Schematic, socket, voltage	1-4
31, 32 AC	Data	2-2
33-S, AC	Schematic	1-3
41, 42 AC	Schematic, socket, voltage	1-5
41, 42 AC	Data	2-3

ECHOPHONE RADIO MFG. CO.

S-3	Schematic	1-1
S-3 Revised	Schematic	1-1
S-3	Voltage, data	1-2
S-3	Chassis views	1-3
S-4	Schematic	1-4
S-4	Voltage, data	1-5
S-4	Chassis views	1-6
S-5 Dynatron	Schematic, socket, data	1-7
S-5 Revised	Schematic, socket, data	1-8
S-5	Voltage, chassis layout	1-9
F	Voltage	2-1
F	Schematic, socket, data	2-2
40	Schematic, socket, data	2-3
40	Voltage	2-1
60	Schematic, socket, data	2-4
60	Voltage	2-6
80	Schematic, socket, data	2-5
80	Voltage	2-6
90	Schematic, socket, data	2-7
90	Voltage, notes	2-8

THOMAS A. EDISON, INC.

MODEL		PAGE
C-1, Chassis SC	Schematic, socket, voltage	1-1
C-1, Chassis SC, Power Unit	Chassis wiring	1-2
R1, R2, C2, Chassis Jr. and Jc, 25 cycles	Chassis wiring	1-3
R1, R2, C2, Chassis Jr. and Jc	Schematic, socket, voltage	1-4
R1, R2, C2, 60 cycles	Schematic, chassis wiring	1-5
R4, R5, C4 (Unit Type 7R)	Chassis wiring	1-6
R4, R5, C4	Schematic, socket, voltage	1-7
R4, R5, C4	Chassis views	2-1
R4, R5, C4	Parts list	1-8
R4, R5, C4, (Power Unit Type 8P)	Chassis wiring	1-9
R4, R5, C4 Power Unit	Chassis views	2-2
R6, R7	Schematic, socket, voltage	1-10
Splitdorf Abbey Jr.	Schematic, socket	1-11
Splitdorf Abbey Battery	Schematic, socket	1-11
Splitdorf R-100	Schematic, socket	1-12
Splitdorf R-200	Schematic, socket	1-12
Splitdorf RV-695	Schematic, socket	1-12
Splitdorf E-175	Schematic	1-13

ELECTRAD, INC.

Loftin-White '45	Schematic	1-1
A-250	Schematic	2-1
C-250	Schematic	2-1
D-250	Schematic	2-2
E-250	Schematic	2-2

ELECTRICAL RESEARCH LABORATORIES, INC.

R-1	Schematic, socket	1-1
R-2, RF Unit	Schematic, socket	1-2
A-2, AF Unit	Schematic, socket	1-2
30, 31, 32, AR-3 (224)	Schematic, socket, voltage	2-1
35, 37, 38, 39 (230)	Schematic, socket	2-5
S-61	Schematic, socket	1-1
74, 76 (210)	Schematic, socket	2-2
75, 77 (231)	Schematic, socket	2-6
81, 82 (245)	Schematic, socket	1-5
224 AC	Schematic, socket	1-3
224 AC	Chassis, voltage	1-4
224-B	Schematic, socket	2-3
225	Schematic	2-4
271-A	Schematic	2-7
335	Schematic, socket	1-6
336	Schematic	2-8

EMERSON RADIO AND PHONOGRAPH CORP.

F	Schematic, socket, voltage, parts list	1-1
65	Schematic, condenser data	1-2

EXPERIMENTERS INFORMATION SERVICE

Navy C-10	Schematic, Misc.	1-4

FADA RADIO & TELEVISION CORP.

460-A, R-60 Unit	Schematic, socket	1-1
475-A, SF 45-75	Schematic, socket, data	1-2
R-80-A Unit, 480-A, SF 50-80 A	Schematic, socket	1-3
480-B, SF 50-80-B	Schematic, socket	1-4
472UA, 475UA, 472CA, 475CA	Schematic, socket, parts list	1-5
262UA, 265UA, 262CA, 265CA	Schematic, socket, data	1-6
C Electric Unit	Schematic, chassis wiring	1-7
ABC SPU, Types 66-Q and 62-R	Schematic	1-8
ABC SPU, 86-V, 82-W	Schematic	1-9
10, 11, 30, 31, 10Z, 11Z, 30Z, 31Z	Schematic, socket, parts list	1-10
10, 11, 30, 31, 10Z, 11Z, 30Z, 31Z	Service notes	2-1
16, 17, 32, 16Z, 32Z	Schematic, socket, voltage	1-11
16, 17, 32, 16Z, 32Z	Service notes	2-2
18 DC	Schematic, socket	1-12
20, 20Z	Schematic, socket, voltage	1-13
22 Battery	Schematic, socket	1-14
25, 25Z	Schematic, socket, voltage, data	1-15
25, 25Z (M-250 and M-250Z Units)	Schematic, socket, voltage	1-16
35-B	Schematic, voltage, data	1-17
25, 35-B	Sensitivity adjustments	2-3
35, 35Z	Schematic, socket, voltage, data	1-18
40	Schematic, socket, voltage, data	1-19
40	Service notes	2-4
41, 42, 44, 46, 47 (KA)	Schematic, socket	1-20
41, 42, 44, 46, 47 (KA)	Voltage, data	2-5
KF (43), KG (761, 762, 764, 766)	Schematic, data	1-21
45, 45Z (KU)	Schematic, socket, data	1-22
48, 49 (KW)	Schematic, socket, data	1-23
45, 48, 49	Service notes	1-24
50, 70, 71, 72, 50Z, 70Z	Schematic, socket, voltage	1-25
51 (KO), 53, 57 (KOC)	Schematic, socket, data	1-30
61, 66 (KX)	Schematic	2-6
75, 77	Schematic, socket, voltage, data	1-29
81, 82, 84, 86 DC (KB)	Schematic, socket	2-7
122 (KE)	Schematic, socket	2-8
160 Neutrodyne Reflex	Schematic	1-28
171, 173 (KOC), 110-volt DC	Schematic	2-9
E-180, E-180Z	Schematic, chassis wiring, data	1-26
192-A (192S, 192BS Units)	Schematic, socket	1-28
E-420, E-420Z	Schematic, chassis wiring, data	1-27

FARRAND MFG. CO.

B Eliminator	Schematic, Misc.	1-5

FEDERAL RADIO CORP.

MODEL		PAGE
A-10, 59, 102	Schematic, socket	1-1
A-10	Chassis wiring	1-2
B	Schematic	1-3
B	Chassis wiring	1-4
C	Schematic, socket	1-5
C	Chassis wiring	1-6
D Code 68-070	Schematic, socket	1-7
D Battery	Chassis wiring	1-8
D Code 79-070	Schematic, socket, data	1-9
D (60 cycles)	Chassis wiring	1-10
E Code 68-060	Schematic, socket	1-11
E DC	Schematic, socket	1-12
F Code 79-080	Chassis wiring	1-13
F Code 79-080	Schematic, socket	1-14
F-10 DC, F-11 DC	Schematic, socket, data	1-15
F (25 cycles)	Schematic, socket	1-16
G (25 cycles)	Schematic, socket, data	1-17
H Code 71-030	Schematic, socket, voltage	1-18
H Receiver	Chassis wiring	1-19
H Power Unit	Chassis wiring	1-20
K	Schematic, socket	1-21
M	Schematic, socket, voltage	1-22

FEDERATED PURCHASER

Cathedral Tone	Schematic	1-1
Acratone 2	Schematic	2-1
Acratone 5	Schematic	2-2

FENWAY

Superheterodyne, Early, Late	Schematic Misc.	1-5

FERRANTI, INC.

250, B-3	Schematic, Misc.	1-6
250-C	Schematic, Misc.	1-6

FREED TELEVISION & RADIO CORP.

NR-5	Schematic	1-1
NR-6	Schematic	1-1
NR-7	Schematic, socket	1-2
NR-8, NR-8A	Schematic, socket	1-2
NR-9, NR-9A	Schematic, socket	1-3
NR-10	Schematic, socket	1-3
NR-11	Schematic, socket	1-4
NR-12	Schematic	1-4
NR-11 Power Pack	Schematic	1-5
ABC Power Pack	Schematic	1-5
FE-15	Schematic	1-6
FE-18	Schematic	1-6
NR-20	Schematic	1-6
FE-30	Schematic	1-7
40N, 48N	Schematic	1-7
50	Schematic	1-8
NR-53	Schematic	1-22
NR-55 DC	Schematic, socket	1-9
NR-55, NR-56 AC	Schematic, socket, voltage	1-10
NR-57	Schematic, socket	1-11
NR-457 Power Unit	Schematic	1-11
NR-60 DC	Schematic	1-12
NR-60 AC	Schematic, socket	1-13
NR-460 AC Power Unit	Schematic	1-13
NR-66, 66-A	Schematic, socket	1-14
NR-70 AC	Schematic, socket	1-15
NR-470 AC	Schematic	1-15
NR-77	Schematic, socket	1-16
800	Schematic	1-16
NR-78 DC, NR-79 DC	Schematic, socket, voltage	1-17
NR-78 AC, NR-79 AC	Schematic, socket, voltage	1-18
NR-80 DC	Schematic, socket, voltage	1-19
NR-80 AC	Schematic, socket, voltage	1-20
NR-85 AC	Schematic, socket, voltage	1-21
NR-90-S	Schematic	1-22
NR-95 AC	Schematic, socket, voltage	1-23

JESSE FRENCH & SONS PIANO CO.

8-Tube AC	Schematic, socket, voltage, data	1-1
5-093	Schematic, socket, voltage	1-2
"G" Junior	Schematic	2-1
"G" Junior	Voltage, service notes	2-2
H-2 Pentode AC	Schematic	2-3
H-2 Special, 110-volt DC	Schematic	2-3
H-1	Schematic	2-4
H-1	Service notes, voltage	2-6
U-1	Schematic	2-5
U-1	Service notes, voltage	2-6

CHARLES FRESHMAN CO., INC.

Masterpiece	Schematic	1-1
Equaphase	Schematic	1-1
G	Schematic, socket, voltage	1-2
G with G-60-S Power Unit, 2 Types	Schematic, socket, voltage	1-3
H	Schematic, socket, voltage	1-4
ABC Power Unit	Schematic	1-4
K	Schematic, socket, voltage	1-5
L	Schematic, socket	1-7
M	Schematic, socket, voltage	1-6
N	Schematic, socket, voltage	1-7
2N with 2N-60-S Power Unit	Schematic	1-8
Q-15, Q-16	Schematic, socket	1-9
3-Q-15, 3-Q-16	Schematic, socket, voltage	1-10
QD-16-S	Schematic, socket, voltage	1-11

GALVIN MFG. CO.

Motorola Auto Set	Schematic	
Motorola Auto Set	Special notes for Buick and Ford "A"	

DAVID GRIMES, INC.

New Yorker, 110-volt DC	Schematic, Misc.	1-9
Inverse Duplex, type 4-DL	Schematic, Misc.	1-9
Inverse Duplex, 1927	Schematic, Misc.	1-9

GENERAL ELECTRIC CO.

A-60	See RCA-Victor M-32	
A-90	See RCA-Victor M-30	
H-31	See RCA-Victor R-80	
H-32	See RCA-Victor R-50	
H-51	See RCA-Victor R-32	

GENERAL ELECTRIC—Continued

MODEL		PAGE
H-71	See RCA-Victor R-86	
H-72	See RCA-Victor RAE 59	
J-70	See RCA-Victor R-4	
J-75	See RCA-Victor R-6	
J-80	See RCA-Victor R-8	
J-85	See RCA-Victor R-12	
K-50, K-51	See RCA-Victor R-28	
K-62	See RCA-Victor R-11	
S-22	See RCA-Victor R-7	
S-42	See RCA-Victor R-9	
S-42-B	See RCA-Victor R-43	
S-132	See RCA-Victor R-10	
T-12	See RCA-Victor R-5	
T-12E	See RCA-Victor R-5-X	
T-41	See RCA-Victor 48	

GENERAL MOTORS RADIO CORP.

OEM-7 (4 Tube)	Schematic, socket	1-1
OEM-7 Super-Sel.	Schematic, socket	1-1
OEM-11 (3 Tube)	Schematic, socket	1-1
5044 (5 Tube)	Schematic, socket	1-2
527 (5 Tube)	Schematic, socket	1-2
Day-Fan 5-AC	Schematic	1-3
Day-Fan 5-AC SPU	Schematic, data	1-3
Day-Fan 6	Schematic, socket	1-3
Day-Fan 6 Jr.	Schematic, socket	1-4
Day-Fan 6-61 (5050)	Schematic, socket, data	1-4
Day-Fan A-5003, A-5010	Schematic, socket	1-12
Day-Fan A-5005, A-5020	Schematic, socket, voltage	2-1
Day-Fan A-5005, A-5020	Chassis wiring, parts list	2-2
Day-Fan 5524, 5525 SPU	Schematic	1-7
Day-Fan 5050 Battery	Schematic	1-9
Day-Fan 5050-7	Schematic, socket	1-9
Day-Fan 5051 (MG set)	Schematic, socket, data	1-5
Day-Fan 5052 (110-volt DC)	Schematic, socket	1-8
Day-Fan 5053	Schematic, socket	1-6
Day-Fan 5057	Schematic, data	1-6
Day-Fan 5057 SPU	Schematic	1-6
Day-Fan 5060 (32-volt DC)	Schematic, socket	1-8
Day-Fan 5065 AC	Schematic, socket, data	1-7
Day-Fan 5066	Schematic, data	1-7
Day-Fan 5077	Schematic	1-11
Day-Fan 5080	Schematic, socket, voltage	1-11
Day-Fan 5091	Schematic, socket, voltage	1-13
B and C SPU	Schematic	1-9
Day-Fan 25, 26, 27, 28, 43, 48	Schematic, socket, voltage	1-10
Day-Fan 35	Schematic, socket	1-10
110, 180, 190, Little General	Schematic, socket, data	1-19
120, 130, 140 Below #29100A-1700B	Schematic, socket, voltage	1-14
120, 130, 140 Between #29100A-62100A and 1700B-1964B	Schematic, socket, voltage	1-15
120, 130, 140 Above #62100A-1964B	Schematic, socket, voltage	1-16
120, 130, 140	Service notes	2-3
150, 160, Pick-up	Service notes	2-4
150, 160, Induction Motor	Service notes, Part 1	2-5
150, 160, Induction Motor	Service notes, Part 2	2-6
170-E	Schematic, socket, voltage	1-17
170-E	Chassis wiring, data	1-18
216, 217, 219, 250 (S-1A, S-1B)	Schematic, socket	2-7
216, 217, 219, 250 (S-1A, S-1B)	Voltage, data	2-8
220 (S-10A, S-10B)	Schematic, socket, voltage	2-13
220 (S-10A, S-10B)	Chassis layout, service data	2-14
251 (S-2A, S-2B)	Schematic, socket	2-9
251 (S-2A, S-2B)	Voltage, data	2-10
252, 253, 254, 255, 256, 257, 258 (S-3A, S-3B)	Schematic, socket	2-11
252, 253, 254, 255, 256, 257, 258 (S-3A, S-3B)	Voltage, data	2-12

GENERAL RADIO CO.

210 Amplifier	Schematic	1-1
250 Amplifier	Schematic	1-1
390 Eliminator	Schematic	1-1
320 Oscillator	Schematic	1-3
360 Oscillator	Schematic	1-3
360-A Oscillator	Schematic	1-3
361-B	Schematic, diagrams	1-2
403-C	Schematic	1-2

GILFILLAN BROS.

33	Schematic, socket	1-1
60	Schematic, socket,	1-2
66	Schematic, socket,	1-2
100	Schematic, socket	1-1

GRAYBAR ELECTRIC CO.

GB-4	See RCA-Victor R-5	
GB-8	See RCA-Victor R-7	
GB-9	See RCA-Victor R-11	
GB-678	See RCA-Victor 48	
GB-700	See RCA-Victor R-80	
GB-770	See RCA-Victor R-82	
GB-900	See RCA-Victor R-86	
GB-989	See RCA-Victor R-10	
GG-15	See RCA-Victor R-6	
GT-7	See RCA-Victor R-4	
GT-8	See RCA-Victor R-8	
GC-14	See RCA-Victor R-12	
311	See RCA-Victor 33	
500	See RCA-Victor 44	
550	See RCA-Victor 46	
340	See RCA-Victor 62	
600	See RCA-Victor 66	

A. H. GREBE & CO.

MODEL		PAGE
RORB	Schematic	1-1
RORD	Schematic	1-1
RORE	Schematic	1-1
RORF	Schematic	1-1
RORG	Schematic	1-2
RORH	Schematic	1-2
RORJ	Schematic	1-2
RORK	Schematic	1-2
RORL	Schematic	1-2
RORN	Schematic	1-3
RORO	Schematic	1-3
RORQ	Schematic	1-3
CR-1	Schematic	1-4
CR-2	Schematic	1-4
CR-3	Schematic	1-4
CR-4	Schematic	1-4
CR-5	Schematic	1-5
CR-6	Schematic	1-5
CR-7	Schematic	1-5
CR-8	Schematic	1-5
CR-9	Schematic	1-7
CR-12	Schematic, socket	1-6
CR-13	Schematic	1-8
CR-14	Schematic, socket	1-8
Broadcast Receiver	Schematic	1-6
CR-18 (Special)	Schematic, socket	1-7
CR-18 (1 AF Stage)	Schematic	1-9
Synchrophase 5,671 SPU	Schematic, socket, voltage	1-10
Synchrophase 1925	Schematic	1-11
Synchrophase MU-1	Schematic	1-11
Synchrophase MU-2	Schematic, socket, voltage	1-12
Synchrophase MU-1	Socket layout	1-12
Synchrophase AC-6	Schematic, socket, voltage	1-15
Synchrophase AC-6 SPU	Chassis wiring (2 types)	1-16
412 Pushpull Amplifier	Schematic, chassis wiring	1-13
428 DeLuxe Console	Schematic	1-14
Synchrophase 7 Battery	Schematic, socket	1-17
Synchrophase 7 AC	Schematic, socket, voltage	1-18
671-B Power Unit	Schematic	1-17
Synchrophase SK-4, Early	Schematic, socket, voltage	1-19
AH-1	Schematic, socket, voltage	1-20
HS-4, 1 Pentode	Schematic, socket, voltage	1-21
HS-4 with '45 Pushpull	Schematic, socket, voltage	1-22
HS-5	Schematic, socket, voltage	1-23

GRIGSBY-GRUNOW CO.

7-P-6, 7-P-3 (2 types)	Schematic	1-2
7-P-6, 7-P-3 (Old wiring)	Chassis wiring	1-3
7-P-6, 7-P-3	Chassis wiring	1-4
7-BP-6, 7-BP-3	Schematic	1-6
7-BP-6, 7-BP-3	Chassis wiring	1-7
8-P-6, 8-P-3	Schematic, chassis wiring	1-9
9-P-3, 9-P-6	Schematic, socket, voltage, data	1-24
70	Schematic, socket, voltage	1-1
70-B	Schematic, socket, voltage	1-5
70-B	Chassis views	2-1
90	Schematic	1-11
90	Chassis	2-3
90-B	Schematic, socket, voltage	1-12
100	Schematic	1-11
100	Chassis	2-3
100-B	Schematic	1-12
130-A	Schematic, socket, voltage	1-13
180	Schematic, socket, voltage	1-8
180	Chassis views	2-2
230-A	Schematic, socket	1-13
15 Below Serial #65,149	Schematic, data	2-4
15	Voltage, chassis views	2-5
15, 15-B Above #65,150	Schematic	2-6
15-B	Chassis views	2-7
20, 21, 22, 23	Schematic, socket, voltage, data	1-14
20	Chassis views	1-15
25	Schematic	2-8
25	Voltage, chassis views	2-9
25-B, 251, 253, 254	Schematic, voltage, data	2-10
25-B, 251, 253, 254	Chassis views, parts list	2-11
25-B	Alignment data	2-13
25-B	Speaker connections	2-15
30, 31	Schematic, socket	1-16
30	Voltage, data	1-17
35, 351, 353	Schematic, voltage, data	2-12
35	Alignment data, chassis	2-13
35, 351, 353	Chassis views	2-14
35	Speaker connections	2-15
353 Record Changer	Notes	2-16
50, 52	Schematic, socket, voltage	1-18
50	Chassis views	1-19
60, 61, 62	Schematic, socket	1-20
60, 61, 62 (160, 163)	Voltage, data	1-21
60, 61	Chassis views	1-22
110 (Auto Set)	Schematic, chassis, data	2-17
120	Schematic, voltage	2-18
120	Chassis	2-19
120	Chassis, service notes	2-20
150	Schematic	2-21
160, 163	Schematic, socket	1-23

GULBRANSEN CO.

13	Schematic, socket	2-1
13	Chassis wiring	2-2
13	Voltage, data, phonograph schematic	2-3
13	Color code, installation data	2-4
13	Alignment data	2-13
20 Series, Early and Late	Schematic	2-5
20 Series	Voltage, alignment data	2-6
20 Series	Chassis layout, parts list	2-7
23	Schematic, socket	2-9
23	Chassis wiring	2-8
23	Voltage, notes, phonograph schematic	2-11
23	Parts list, phonograph data	2-10
23	Alignment data	2-13
23	Chassis layout, revisions	2-12
60, 63	Schematic, socket, voltage	1-1
60, 63	Chassis wiring, data	1-2
160, 161 (60 cycles)	Schematic, data	1-3
160, 163 (25 cycles)	Schematic, voltage	1-4
200, 291, 292, 295, 9950	Voltage, socket, data	1-5
200, 291, 292, 295, 9950	Schematic, socket	1-6
362 (Auto Set)	Schematic, socket, voltage, assembly wiring	2-14

HAMMARLUND-ROBERTS, INC.

MODEL		PAGE
H-R 5 Tube	Schematic	1-1
H-R "Hi-Q"	Schematic	1-1
H-R "Hi-Q" 6	Schematic, chassis wiring, data.	1-2
H-R "Hi-Q" 29 Jr. (3 Types)	Schematic, socket, data	1-3
H-R "Hi-Q" 29 Master (3 Types)	Schematic, socket, data	1-4
H-R "Hi-Q" 30 (30-R Battery)	Schematic	1-5
H-R "Hi-Q" 30 AC	Schematic, socket	1-5
H-R "Hi-Q" 30 DC	Schematic, socket, voltage	1-6
H-R "Hi-Q" 31	Schematic	1-6

HAMMARLUND MFG. CO.

Hawk	Schematic	1-1
DeLuxe	Schematic	1-1
Z-4 Commander	Schematic	1-1
Trans-Oceanic Two	Schematic	1-1
AC & DC Converters	Schematic	1-1
Comet Pro, February, 1933	Schematic	2-1

HATRY & YOUNG

H-Y 7	Schematic, parts list, Misc.	1-10
H-Y 7, Battery	Schematic Misc.	1-10
H-Y, 7-B	Schematic Misc.	1-10

HIGH FREQUENCY LABORATORIES

A-C Special	Schematic	1-1
9-in-Line	Schematic	1-1
Mastertone 1929	Schematic	1-2
Isotone 10	Schematic	1-2

CHARLES HOODWIN CO.

Aero Auto	Schematic	2-1
Aero 1932 Converter	Schematic	2-1

HERBERT H. HORN

Tiffany Tone 101, 110	Schematic, socket, data	2-1
Tiffany Tone 101, 110	Voltage, alignment data	2-2

HOWARD RADIO CO.

A-5	Schematic, socket	1-1
A-6	Schematic, socket	1-1
SN-7	Schematic, socket	1-2
Green Diamond 8 (Magnetic Spkr.)	Schematic, socket, voltage, data.	1-3
Green Diamond 8 (Dynm. Spkr. '71)	Schematic, socket, voltage, data.	1-4
Green Diamond 8 (Dynm. Spkr. '45)	Schematic, socket, voltage, data.	1-5
SG "A" RF Chassis	Schematic	1-6
SG "C" RF Chassis	Schematic	1-6
SG "A" AF Chassis	Schematic	1-7
SG "C" AF Chassis	Schematic	1-7
F Pentode	Schematic	2-1
H Chassis	Chassis views	2-5
K	Schematic	1-2
O	Chassis views	2-13
Miniature (SG-B)	Schematic, socket	2-14
Cable-Nelson D-4	Schematic, socket, voltage	2-12
10 (T)	Schematic, socket	2-10
10 (T)	Chassis views, parts list, data.	2-11
20, 25, 30, 32 (O)	Schematic, socket	2-8
20, 25, 30, 32 (O)	Voltage, servicing data	2-9
35, 40 (H)	Schematic, socket	2-3
35, 40 (H)	Adjustment data	2-4
45, 60 (AVH)	Schematic, socket	2-7
45, 60 (AVH)	Alignment data	2-6
135 DC	Schematic, socket, data	2-2
395, 445, 470, 495 (135 AC Chassis)	Schematic, socket	1-8

INSULINE CORP. OF AMERICA

Envoy, 6-Tube AC	Schematic	2-1
Envoy Midget	Schematic	2-1
Envoy Midget DC (Revised) 2 Types	Schematic	2-2
Envoy, Broadcast-Long Wave DC	Schematic	2-3
Envoy Broadcast-Long Wave AC	Schematic	2-4
Insulette & Mascot, 4-Tube Midget AC	Schematic	2-5
Insulette & Mascot, Broadcast-Long Wave 4-Tube Midget AC	Schematic	2-5
Conquerer Short-Wave AC	Schematic	2-6
Super-Conquerer, Short & Long Wave AC	Schematic	2-7
Universal Companion, AC-DC-Battery	Schematic	2-8
Universal Companion, AC-DC-Battery (Revised)	Schematic	2-9
Conquerer, SW Battery	Schematic	2-10

JACKSON-BELL CO., LTD.

33	Schematic, data	2-1

J. E. JENKINS & S. E. ADAIR

3B Mixing Panel	Schematic	1-1
3C Mixing Panel	Schematic	1-1
A (2 Types)	Schematic	1-2
Pushpull Amplifier	Schematic	1-2
Monitor Amplifier	Schematic	1-2
Level Indicator	Schematic	1-2

KELLOGG SWITCHBOARD & SUPPLY CO.

MODEL		PAGE
6-Tube Battery	Schematic	1-1
7-Tube Cascade	Schematic	1-1
Wave Master	Schematic	1-1
RFL 701	Schematic	1-2
AC-7-Tube	Schematic, voltage	1-2
Chassis B	Schematic, voltage	1-2
523, 524, 525, 526, 527, 528 RF	Schematic	1-3
523, 526 Power Unit	Schematic, socket, voltage	1-4
524, 525, 527, 528 Power Unit	Schematic, socket, voltage	1-5
533, 534, 535, 536 RF Chassis	Schematic, socket	1-6

COLIN B. KENNEDY CORP.

5	Schematic	1-2
6, Type 421	Schematic	1-2
6, Type 420	Schematic	1-2
10	Schematic, socket, voltage	1-4
15, 16 (Type 430-43)	Schematic	1-1
175 to 25,000 Meters	Schematic	1-1
7-Coronet DC	Schematic, socket	1-3
20, Type 440	Schematic	1-3
20	Schematic, socket, voltage	1-4
22, 36, 38, 40 DC	Chassis layouts	2-1
22, 36, 38, 40 DC	Schematic, parts list, data	2-2
24	Schematic, voltage, chassis, data.	2-3
26	Schematic, chassis, notes	1-6
30, Type 435	Schematic, voltage	1-3
30, 32	Schematic, chassis	1-7
34	Schematic, voltage	1-8
34	Chassis wiring	1-9
34	Changes, data	1-10
Coronet 42	Schematic, chassis, voltage	1-11
44	Schematic	2-4
48	Schematic	2-5
50	Schematic, chassis, alignment data	2-6
52	Schematic, socket, voltage, data.	2-7
53-SW, 54-SW	Parts list, data	2-8
53-SW, 54-SW	Schematic, chassis, calibration scales	2-9
54 "Globe Trotter"	Schematic, chassis, data	2-10
54-A	Schematic, chassis, data	2-11
56	Schematic, socket, voltage, parts list	2-12
Royal 60	Schematic, socket	1-5
Royal	Schematic	1-5
62	Schematic, voltage, parts list.	2-13
62	Chassis, alignment data	2-14
64	Schematic, data	2-15
64	Chassis, alignment data	2-16
Royal 80	Schematic	1-12
220	Schematic	1-1
281	Schematic	1-1
826-B	Schematic	1-12

KING MFG. CO.

10-K1, 10-SK	Schematic, socket	1-1
25	Schematic, socket	1-1
30	Schematic, socket	1-1
E	Schematic, socket	1-2
F	Schematic, socket	1-2
G	Schematic, socket	1-3
H	Schematic, socket	1-3
J	Schematic, socket	1-4
61	Schematic, socket	1-8
62, 63	Schematic, socket	1-8
71	Schematic, socket	1-8
80	Schematic, socket	1-4
81	Schematic, socket	1-5
82	Schematic, socket	1-5
Royal (97)	Schematic, socket	1-6
Royal (97)	Voltage	1-7
Imperial (98)	Schematic, socket	1-6
Monarch (101)	Schematic, socket, voltage	1-7

KOLSTER RADIO, INC.

6D, 6E, 6G, 6H (1927)	Schematic, socket	1-1
6-F, 6-J, 6-K, 6-L, 6-M, 6-R	Schematic, socket, voltage	1-2
7-A, 7-B (1926)	Schematic, socket	1-1
8-A, 8-B, 8-C (1926)	Schematic, socket	1-1
K-23 Rectifier	Schematic	1-2
K-20, K-22, K-27	Schematic, socket, voltage	1-3
K-21, K-23, K-28	Schematic, socket, voltage	1-4
K-24 (250)	Schematic	1-5
K-24 (210)	Schematic, socket, voltage	1-5
K-30, K-32	Schematic, socket	1-6
K-42	Schematic, socket, voltage	1-7
K-43, K-43A (1929)	Schematic, socket, voltage	1-8
K-44 (1929)	Schematic, socket, voltage	1-9
K-45	Schematic, socket	1-10
K-45	Voltage, alignment data	2-1
K-60, K-62	Schematic	1-11
K-60, K-62	Voltage, test data	2-4
K-70, K-72	Schematic	1-12
K-70, K-72	Voltage, test data	2-5
K-80, K-82	Schematic	1-13
K-80, K-82	Voltage, test data	2-6
K-90, K-92	Schematic	1-14
K-60, K-62, K-70, K-72, K-80, K-82, K-90, K-92	Condenser adjustments, data.	2-3
K-60, K-62, K-70, K72, K-80, K-82, K-90, K-92	Condenser and resistor data.	2-2

R. E. LACAULT

All Wave Electric 9	Schematic, parts list, Misc.	1-11
LR-4	Schematic, Misc.	1-11
L-2 Ultradyne	Schematic, Misc.	1-11

LANG RADIO CO.

BA-5	Schematic, socket	1-1
BA-5-P	Schematic, socket	2-2
BD-5-P	Schematic, socket	1-1
BD-6	Schematic, socket	1-1
BD-6-P	Schematic, socket	1-2
F-7, 110-Volt DC	Schematic, socket	2-1
F-9	Schematic, socket	1-2
J-7	Schematic, socket	1-2
M-7	Schematic, socket	1-3
MA-7	Schematic, socket	2-3
MD-7	Schematic, socket	2-3
R-8	Schematic, socket	1-3
SA-7	Schematic	2-4
SA-8	Schematic, socket	2-4

C. R. LEUTZ, INC.

MODEL		PAGE
C-10, Navy Model	Schematic	1-1
Silver Ghost	Schematic	1-1
C	Schematic	1-1
Trans-Oceanic	Schematic	1-2
Seven Seas	Schematic	1-2

LINCOLN RADIO CORP.

8-80	Schematic	1-1
31	Schematic	1-1

MADISON-MOORE

Superheterodyne	Schematic, Misc.	1-12
One-Spot Super	Schematic, Misc.	1-12

THE MAGNAVOX CO.

One Dial	Schematic, Misc.	1-13
A	Schematic, Misc.	1-13
D	Schematic, Misc.	1-13

MAJOR LABORATORIES

250 Amplifier	Schematic, Misc.	1-14
250 Amplifier, Power Unit	Schematic, Misc.	1-14
12	Schematic, Misc.	1-14
M-210 Amplifier	Schematic, Misc.	1-14

McMILLAN RADIO CO.

8 (2 Types) AC	Schematic, socket, voltage	1-1
Series 900	Schematic, socket, voltage	1-2

MONTGOMERY-WARD & CO.

62-20, 62-26 (62-25)	Chassis layout, servicing data	2-23
62-20, 62-26 (62-25)	Schematic, voltage	2-24
62-030, 62-232, Troubadour	Schematic, socket, voltage, notes	2-1
62-040, Commodore, 62-181, Sovereign	Schematic, socket, voltage, notes	2-2
62-055, 49, 1522, 1922, 1562	Schematic, socket, voltage, chassis, data	1-1
62-055, 49, 1522, 1562 1922	Chassis wiring	2-3
62-11, 62-12, 62-14, 62-27, 62-19 (1st Type)	Schematic, voltage, notes	2-4
62-11, 62-12, 62-14, 62-27	Chassis layout, servicing data	2-5
62-11, 62-14, 62-9, 62-27 (2nd Type)	Schematic, notes	2-6
62-070, Princess, 62-060, Challenger, Jr. (1800)	Schematic, socket, voltage, notes	2-7
500, Dictator, 10,000 Serenader	Chassis wiring	2-8
500, Dictator, 10,000 Serenader	Schematic, socket, voltage, notes	2-9
921, 923, 924, 839 (Radiola 21, 22)	Schematic, socket, notes	2-11
921, 923, 924, 839 (Radiola 21, 22)	Conversion data, battery wiring	2-10
1111 (62-1611) Fantasy, 811 (62-1711) Solo	Voltage, socket, parts list, notes	2-12
1111 (62-1611), Fantasy, 811 (62-1711) Solo	Schematic, chassis wiring	2-13
1238 (62-1838)	Schematic, chassis layout, voltage, data	2-14
1355 (62-1955) Minstrel	Schematic, voltage, notes	2-15
1355 (62-1955) Minstrel	Chassis layout, servicing data	2-16
1500 (27-W, 15,000) Collegian	Schematic, servicing data	2-17
2655, AE-10	Voltage, socket, data	2-18
2655, AE-10 (1st and 2nd Types)	Schematic, socket	2-19
2822, 2827, Balboa, 2895, 2897 DeSoto	Schematic, socket, voltage, data	2-20
11,000, Challenger (2 Types)	Schematic, socket, voltage	2-21
14,000 Commander, 62,000 Cavalier	Schematic, socket, voltage, notes	2-22

WILLIAM J. MURDOCK CO.

Neutrodyne, 3 Control	Schematic, Misc.	1-15
7-Tube, Single Control	Schematic, socket, Misc.	1-15

NATIONAL CARBON CO.

1, 2, 3	Schematic, socket	1-1
20, 21	Schematic, socket	1-1
31, 32, 33, 34	Schematic, socket, voltage, parts list	1-2
42, 43, 44	Schematic, socket, voltage, parts list	1-3
52, 53, 54	Schematic, socket, voltage, parts list	1-4

THE NATIONAL COMPANY

S-G 5	Schematic	1-1
S-G SW Tuner	Schematic	1-1
S-G SW Tuner with '71	Schematic	1-1
Auto Box Connections	Wiring diagram	1-1
MB-29	Schematic	1-2
MB-30	Schematic, chassis	1-2
Thrill Box AC, SW	Schematic	1-2
Auto Box	Schematic	1-2

NORDEN-HAUCK, INC.

Super DX-5	Schematic	1-1
Super-DX-5A	Schematic	1-1
Admiralty Super 12	Schematic	1-2
C-7	Schematic	1-3
Super 10	Schematic	1-3

OPERADIO CORP.

1925	Schematic, Misc.	1-16
1926	Schematic, Misc.	1-16
7	Schematic, Misc.	1-16

OZARKA, INC.

MODEL		PAGE
Viking 5-A	Schematic	2-1
S-5	Schematic	2-1
S-7	Schematic	2-1
78 Battery	Schematic, socket	2-2
89 AC	Schematic, socket, voltage	2-2
SW-Converter	Schematic, chassis views	2-3
Viking 90 AC	Schematic, chassis, socket, voltage	1-2
91 Battery	Schematic, chassis	1-1
91 AC	Schematic, socket, chassis, voltage	2-4
92 AC	Schematic, socket, voltage, chassis	2-5
93 Battery, Superheterodyne	Schematic, socket, voltage	2-6
93-A	Schematic, chassis	2-7
93-B	Schematic, socket, voltage	2-8
94-AVC	Schematic, socket, voltage	2-9

PHILCO RADIO & TELEVISION CORP.

B-253 Power Unit	Schematic, data	1-1
B-603 Power Unit	Schematic, data	1-1
180-B Power Unit	Schematic	1-2
B Part of AB Unit	Chassis layout	1-2
AB-423, AB-463, AB-623, AB-663	Schematics and layouts of power units	1-3
DB, AB-463, AB-623, AB-663	Specifications	1-4
3 Transitone	Schematic, compensating data, parts list	1-5
4 SW Converter	Chassis layout, parts list, data	2-1
4 SW Converter	Schematic, socket, voltage, data	2-2
20, 20-A	Schematic, chassis view	1-6
20, 20-A	Voltage, socket, values	2-3
20, 20-A	Circuit changes, chassis view	2-4
30	Schematic, socket, chassis view	1-7
30	Voltage, values, data	2-5
Coils, Compensating Condensers	Values, coding	2-6
35	Schematic, voltage, data	1-8
35	Chassis, data	1-9
35	Test data	2-7
40 DC	Schematic, voltage, data	1-10
41 DC, 42 DC	Schematic, socket, voltage, data	1-11
41 DC, 42 DC	Chassis, data	2-8
46, 46-E DC	Chassis, voltage, parts list	1-12
46, 46-E DC	Schematic, voltage, data	1-13
50, 50-A	Schematic, chassis, data	1-14
50, 50-A	Voltage, values	1-15
50, 50-A	Adjustments, parts list	2-9
50, 50-A	Test data	2-10
51, 51-A	Schematic, socket, data	2-11
51, 51-A	Voltage, data	2-12
51, 51-A	Chassis, adjustment, parts list, notes	2-13
Standard Bypass Condensers	Data	2-14
65	Schematic, socket, voltage	2-18
70, 70-A (Below #B-22,000)	Schematic, socket, voltage, data	1-16
70, 70-A	Chassis, parts values	1-17
70, 70-A	Parts list, data	2-15
70, 70-A	Chassis layout	2-16
76	Schematic, socket, voltage, data	2-19
77, 77-A	Schematic, socket, data	1-20
82, 86	Schematic, socket, voltage	1-21
87	Schematic, socket	2-21
87	Voltage, data	2-20
Superheterodynes	Adjustment notes	2-17
90, 90-A (with two '45s)	Chassis layout, parts values, data	2-27
90, 90-A (with two '45s)	Schematic, socket, voltage	2-23
90, 90-A (with two '45s)	Parts list, data	2-24
90, 90-A (with one '47)	Schematic, socket, voltage	2-26
90, 90-A (with one '47)	Chassis layout, parts values, data	2-27
90, 90-A (with one '47)	Socket, test data	2-28
90, 90-A (with one '47)	Parts list	2-29
90, 90-A	Alignment data with Jewell 560 Oscillator	2-30
Condensers	Connections, color code	2-25
95	Schematic, socket, voltage, data	1-23
96, 96-A	Schematic, socket	1-24
96, 96-A	Chassis	2-31
111, 111-A	Voltage, values, data	2-32
111, 111-A	Schematic, socket, data	2-33
111, 111-A	Chassis	2-34
112, 112-A (Below #174,001)	Voltage, parts values	1-25
112, 112-A	Schematic, socket	1-26
112, 112-A	Parts list	2-35
112, 112-A (Above and Below #174,001)	Chassis layouts	2-36
112, 112-A	Alignment notes	2-37
112, 112-A (Above #174,001)	Parts values, voltage	2-38
112, 112-A	Schematic, socket, parts list	2-39
211, 211-A	Schematic, socket, data	1-27
212, 212-A Radio Phonograph	Schematic	1-26
270, 270-A	Schematic, data	1-28
296, 296-A	Schematic, socket, data	1-30
470, 470-A	Schematic, socket, chassis	2-40
470, 470-A	Voltage, parts values	2-41
470, 470-A	Parts list	2-42
490	Schematic, socket, voltage	2-43
490	Chassis layouts, data	2-44
490	Parts list	2-45
500 Series	Schematic, chassis wiring	1-29

PILOT RADIO & TUBE CORP.

171 Power Amplifier	Schematic	1-1
Public-Address System	Schematic	1-1
K-111 ABC Pack	Schematic	1-2
Pilotone B Pack	Schematic	1-2
ABC Pack for SP5	Schematic	1-2
Jumbo Power Pack	Schematic	1-2
Jumbo ABC	Schematic	1-2
Air Hound (All Electric)	Schematic	1-3

PILOT—Continued

MODEL		PAGE
Air Scout (All Electric)	Schematic	1-3
Pilotone (Electric)	Schematic, socket	1-3
K-110, Super-Wasp, Battery	Schematic, socket	1-4
K-115, AC Super-Wasp	Schematic, socket	1-4
K-117, Twin Screen-Grid 8	Schematic	1-4
K-121, K-121X, Country Special	Schematic, socket	1-5
PE-6 SG, K-122, K-123, K-124	Schematic, socket	1-5
K-126, K-128	Schematic, socket	1-5
K-136 AC Universal	Chassis wiring, two views	2-2
K-139 Power Pack	Schematic	2-1
140 Auto Set	Schematic, socket, wiring, data	1-6
S-141	Schematic	2-1
Dual-Wave Midget (200-2,000 Meters)	Schematic	2-1
S-W Converter	Schematic	1-6
C-153, C-154 (with two '45s)	Schematic, socket	2-3
C-153, C-154 (with two '47s)	Schematic, socket	2-4
V-191	Schematic, socket	2-4
AC Midget, S-155, S-155-A, S-155-B, S-155-F, C-157, C-157-A, C-157-B, C-157-F (2 Types)	Schematic, socket	1-7
DC Midget, S-156, S-158	Schematic, socket, data	2-5

RCA-VICTOR CO., INC.

MODEL		PAGE
AP-736	Schematic	1-1
AP-736-B	Schematic, chassis wiring	1-1
AP-777-C	Schematic	1-2
AP-935	Schematic	1-3
AP-937	Schematic	1-3
AP-947	Schematic	1-2
AP-951	Schematic	1-2
AP-951-A, 974-A, AP-997-A	Schematic	1-2
AP-995	Schematic	1-4
AP-997, AP-952	Schematic	1-4
AP-997-C	Schematic	1-4
AP-1080	Schematic	1-3
12-25 Tuscany	Socket layout	1-4
8-60	Socket layout	1-4
Radiola Grand	Schematic, socket	1-5
Radiola Senior	Schematic, socket	1-5
Radiola AR	Schematic, socket	1-5
Radiola RS	Schematic, socket	1-5
Radiola II	Schematic, socket	1-6
Radiola III	Schematic, socket	1-6
Radiola Balanced Amplifier	Schematic, socket	1-6
Radiola Senior Amplifier	Schematic, socket	1-6
Radiola III-A	Schematic, socket	1-7
Radiola IV	Schematic, socket	1-7
Radiola V	Schematic, socket	1-7
Radiola VI	Schematic, socket	1-7
Radiola VII	Schematic, socket	1-8
Radiola VII-B	Schematic, socket	1-8
Radiola Super VIII	Schematic, socket, data	1-9
Radiola IX	Schematic, socket	1-8
R-4, R-6	Chassis wiring, voltage, data	2-1
R-4, R-6	Schematic, parts list	2-2
R-4, R-6	Test data	2-3
R-5, AC	Parts list, notes	1-10
R-5, AC	Schematic, chassis wiring, voltage	1-11
R-5	Test data, voltage	2-5
R-5-X	Schematic, chassis wiring, voltage	2-4
R-5-X	Parts list, socket, notes	2-6
R-5-X	Test data, voltage	2-5
R-7, R-9, AC Superette	Chassis wiring	1-12
R-7, R-9, AC Superette	Schematic, voltage, service notes	1-13
R-7, R-9, AC Superette	Resistance data, socket	2-7
R-7, R-9, DC Superette	Schematic, socket, voltage, data	2-8
R-7, R-9, DC Superette	Chassis wiring, parts list	2-9
R-7, R-9, DC Superette	Resistance data, voltage, socket	2-10
R-7-A AC	Schematic, chassis wiring, voltage	2-11
R-7-A AC	Resistance data, voltage, socket	2-12
R-8, R-12, AC	Schematic, socket, voltage	2-13
R-8, R-12, AC	Chassis wiring, parts list	2-14
R-8, R-12, AC	Resistance data, socket, voltage	2-15
R-10 AC	Schematic, chassis wiring, voltage, data	2-16
R-10 AC	Resistance data, socket, voltage	2-17
R-11 AC, Early	Schematic, socket, voltage	2-18
R-11 AC, Early	Chassis wiring, data	2-19
R-11 AC, Late	Chassis wiring	2-20
R-11 AC	Parts list, notes	2-21
R-11 AC	Resistance data, socket, voltage	2-22
R-15	Schematic, socket, voltage, data	1-14
Radiola 16	Schematic, socket, data	1-15
Radiola 17	Schematic, socket, voltage, data	1-15
Radiola 18 DC	Schematic, socket, voltage	1-16
Radiola 18 AC	Schematic, socket	1-16
RE-18	Schematic, socket, data	2-23
RE-18	Assembly wiring	2-24
RE-18	Resistance data, socket, voltage	2-25
RE-18-A	Parts list, specifications	2-26
RE-18-A	Parts list concluded	2-27
RE-19 AC (AVC)	Schematic, socket, chassis wiring, data	2-28
RE-19 AC (AVC)	Assembly wiring, parts list	2-29
Radiola 20	Schematic, socket, data	1-17
RE-20 Electrola	Chassis wiring, parts list	2-30
RE-20 Electrola SPU	Chassis wiring, parts list	2-33
RE-20 Electrola	Schematic, socket, data	2-31
RE-20 Electrola	Assembly wiring, parts list	2-32
Radiola 21, 22	Schematic, socket, voltage	1-18
R-21	Schematic, changes, parts list	2-34
R-21	Chassis wiring, parts list	2-35
R-21	Resistance data, socket, voltage	2-36
RO-23	Schematic, socket	2-37
RO-23	Chassis wiring, data	2-38
RO-23	Converter chassis wiring, data	2-39
RO-23	Alignment notes	2-40
RO-23	Assembly wiring, voltage, notes	2-41
RO-23	Parts list	2-42
Radiola 24	Schematic, socket	1-19
Radiola 25	Schematic, socket, wiring	1-20
Radiola 25 (104 Power Pack)	Schematic, voltage	1-21
Radiola 26	Schematic, socket	1-19
RAE-26	Assembly wiring	2-43
RAE-26	Schematic, socket, data	2-44
RAE-26	Resistance, data, socket, voltage	2-45
Radiola 28 Battery	Schematic, wiring	1-22
Radiola 28 AC (104 SPU)	Schematic, socket	1-23
Radiola 30 AC (104 SPU)	Schematic, wiring, data	1-24
Radiola 30-A	Schematic, socket, voltage	1-25
Radiola 30-A Power Pack	Schematic	1-25
M-30 Auto Radio	Schematic, socket	2-46
M-30	Chassis wiring	2-47
M-30	Notes, Part 1	2-48
M-30	Notes, Part 2	2-49
M-30	Notes, Part 3	2-50
M-30	Notes, Part 4	2-51
M-30	Notes, Part 5	2-52
M-30	Notes, Part 6	2-53
M-30	Notes, Part 7	2-54
M-30	Notes, Part 8, voltage	2-55
M-30	Installation wiring, Notes, Part 9	2-56
M-30	Parts list	2-57
M-30	Resistance data, voltage, socket	2-58
P-31, Portable	Schematic, chassis, socket, voltage	2-59
P-31, Portable	Chassis wiring, data	2-60
Victor R-32, RE-45, R-52	Schematic, socket, voltage, data	1-26
Radiola 32 AC	Schematic, socket, data	1-27
M-32 Auto Radio	Notes, Part 1	2-61
M-32	Notes, Part 2	2-62
M-32	Notes, Part 3	2-63
M-32	Notes, Part 4	2-64
M-32 Battery-Operated	Terminal data	2-65
M-32	Service data, voltage	2-66
M-32	Chassis wiring	2-67
M-32	Schematic, control box wiring	2-68
M-32	Parts list	2-69
Radiola 33 AC	Schematic, socket, voltage	1-28
Radiola 33 DC	Schematic, socket	1-28
Victor R-35, R-39, RE-57	AF chassis wiring, socket, voltage, data	1-29
Victor R-35, R-39, RE-57	Schematic, data	1-30
Radiola 41 DC, AF and SPU	Chassis wiring, voltage	1-31
Radiola 41 AC RF	Schematic, socket, data	1-32
Sterling SPU	Schematic, voltage	1-32
Receptor SPU	Schematic, voltage	1-32
Radiola 42	Schematic, notes	1-34
R-43	Schematic, socket, voltage, chassis wiring	1-33
R-43	Service notes	1-34
Radiola 44 AC	Terminal voltage	1-35
Radiola 46 DC	Schematic	1-35
Radiola 46 AC	Terminal voltage	1-35
44, 46 RF Chassis	Schematic, socket, voltage	1-36
44, Early SPU	Schematic	1-36
44, Late SPU	Schematic	1-36
46, SPU	Schematic	1-36
Radiola 47	Schematic, socket, voltage	1-37
Radiola 48	Schematic, socket, voltage, data	1-38
Radiola 48	Resistance data, voltage, chassis	2-70
R-50, R-55	Schematic, chassis wiring	2-71
R-50, R-55	Chassis layouts, voltage, socket, notes	2-72
RAE-59	Schematic, socket, data	2-73
RAE-59	Assembly wiring	2-74
Radiola 60	Schematic, socket, voltage, data	1-39
Radiola 62	Schematic, socket, voltage, data	1-40
Radiola 64	Schematic, socket, voltage, data	1-41
Radiola 66	Schematic, socket, voltage, data	1-42
Radiola 67	Schematic, data	1-43
RE-73	Assembly wiring, data	2-75
RE-73	Parts list	2-76
RE-73	Locations of parts	2-77
RE-73	Notes, Part 1	2-79
RE-73	Notes, Part 2	2-80
RE-73	Notes, Part 3	2-81
RE-73	Notes, Part 4	2-82
Tuning Condensers	Realignment data	2-78
RAE-79	Schematic, socket, data	2-83
RAE-79	Receiver chassis wiring, data	2-84
RAE-79	Assembly wiring	2-85
RAE-79	Remote control notes	2-86
RAE-79	Motor adjustments	2-87
RAE-79, SPU-1, SPU-2	Chassis wiring diagrams	2-88
Radiola 80	Schematic, socket, voltage	1-44
Radiola 80	Trimmers, chassis wiring of SPU	2-89
Radiola 80	Assembly wiring	2-90
Radiola 80	Resistance data	2-91
Radiola 82	Schematic, socket	1-45
Radiola 82	Chassis wiring	2-92
Radiola 82 SPU	Chassis wiring	2-93
Radiola 82	Resistance data, socket, voltage	2-94
Radiola 82 (Remote Control)	Schematic, notes	1-47
Radiola 82 and 86 (Remote Control)	Assembly wiring	1-46
Radiola 82 and 86 (Remote Control)	Receiver chassis wiring	1-48
Radiola 82 and 86 (Remote Control)	SPU chassis wiring	1-49
Radiola 82 and 86 (Remote Control)	Remote control units, data	1-50
Radiola 86 AF Circuits	Schematics	1-51
Radiola 86	Schematic, data	1-52
Radiola 86	Assembly wiring	2-95
SW Adaptor, SW-10	Schematic, chassis wiring	1-53
SW-10	Voltage, chassis views, data	1-54
SWA-2, SW Converter	Chassis wiring, parts list, data	2-96
SWA-2, SW Converter	Schematic, data, tuning chart	2-97
100-A, 100-B, 103, 104-AC	Schematic, socket, data	1-55
105, 106	Schematic, socket, wiring	1-56
Victor Alhambra I (7-1)	Schematic, socket	1-57

RCA-VICTOR—Continued

MODEL		PAGE
Victor Alhambra II, Florenza	Schematic, socket	1-57
Victor Borgia I	Schematic, socket	1-58
Victor Electrola Hyperion	Schematic, socket	1-58
2-25 Portable Victrola	Parts list, assembly	2-98
2-25 Portable Victrola	Notes	2-99
2-65 Turntable	Notes	2-100
Victor 7-10, Radiola 16	Schematic, socket	1-59
Victor 7-11, Radiola 18	Schematic, socket, voltage	1-59
Victor 7-25, Radiola 17	Schematic, socket	1-59
Victor Borgia II	Schematic, socket	1-60
Victor Tuscany	Schematic, socket	1-60
Victor Cromwell, 12-1	Schematic, socket	1-60
Victor 12-15	Schematic, socket	1-61
Victor 12-15-C	Schematic, socket	1-61
Victor E-35	Cable Wiring	1-61
Victor 7-3, 7-30, R-20	Schematic, socket	1-62
Victor 7-26	Schematic, socket	1-62
Victor 8-60	Schematic, socket	1-63
Victor 9-15	Schematic, socket	1-63
Victor 9-18	Schematic, socket, voltage	1-64
Victor 9-25	Schematic, socket	1-65
Victor 9-40	Schematic	1-65
Victor 9-54	Schematic, socket, voltage	1-66
Victor 10-51-A	Schematic, socket	1-67
Victor 9-55	Schematic, socket	1-67
Victor 10-69	Schematic, socket, chassis wiring	1-68
Victor 10-70	Schematic, socket	1-69
Victor 10-70-A	Schematic, socket	1-69
Victor 12-25	Schematic, socket	1-69
Theremin	Schematic, data	1-70
Photophone PG-32	Schematic	2-101
Photophone PG-32	Change-over panel wiring	2-102
Photophone PG-32	Voltage, exciter-lamp chassis wiring	2-103
Photophone PG-32, Voltage Amplifier	Panel wiring	2-104
Photophone PG-38	Schematic	2-105
Photophone PG-38	Chassis wiring, voltage	2-106
Photophone PK-25	Schematic, chassis wiring	2-107
Photophone SPU 62	Schematic, chassis	1-71
Photophone SPU 63	Schematic	1-71
Photophone SPU 206	Schematic	1-71
Detector and Amplifier Tubes	Characteristics	2-108
Power Amplifiers, Rectifiers, Photo Tubes	Characteristics	2-109

RADIART LABORATORIES

Magnaformer 918	Schematic, Misc.	1-4

RADIO RECEPTOR CO.

PMA-1	Schematic	2-1
P-50-W	Schematic	2-1

RADOLEK

Monroe-Marvelo 30	Schematic	2-1
Marvelo 6 Midget	Schematic	2-1
Radolek 5-Tube Super	Schematic	2-1

RADIO PRODUCTS CO.

Dayrad 8-80	Schematic	1-1
Dayrad 21 Output Meter	Schematic	1-2
330-Mmf. Oscillator	Schematic	1-2
Dayrad 180	Schematic	1-3
Dayrad HR	Schematic	1-3
Dayrad 870 Test Meter	Schematic	1-3
Dayrad 875	Schematic	1-3

RADIOTROPE

74-R	Schematic, socket, voltage	1-1
27-R, Early and Late	Schematic, socket, voltage	1-2

READRITE METER WORKS

400 Tube Tester	Schematic	2-1
405 Tube Checker	Schematic	2-1
550 Oscillator	Schematic	2-2
600, 700 Testers	Schematic	2-2
800 Capacity Meter	Schematic	2-2
850 Capacity Meter	Schematic	2-2

REMLER CO., LTD.

1927 Infradyne	Schematic	2-1
1928 Infradyne	Schematic	2-1
Remler 40 KC.	Schematic	2-1
10-3	Schematic, socket, voltage	2-2
14	Schematic, socket, chassis, voltage, data	1-1
15-3	Schematic, voltage, data	2-2
Best 115 KC.	Schematic	1-2
Remler 29	Schematic	1-2

SAMSON ELECTRIC CO.

MODEL		PAGE
PAM-1	Schematic	2-1
PABC-2	Schematic	2-2
PABC-3	Schematic	2-2
PAM-3	Schematic	2-2
PAM-5	Schematic	2-3
PAM-5-D	Schematic	2-3
PABC-4	Schematic	1-3
PABC-5	Schematic	1-3
Amplifier	Schematic	1-1
PAM-8, 18	Schematic	2-4
PAM-9	Schematic	2-4
PAM-11, 12, 13, 14	Schematic	2-5
PAM-16, 17	Schematic	2-6
PAM-16-N, 17-N	Schematic	2-6
PAM-19	Schematic	1-1
PAM-19-N	Schematic	2-7
PAM-19-Q	Schematic	2-7
PAM-22	Schematic	2-8
PAM-23	Schematic	2-9
PAM-24	Schematic	2-9
PAM-25	Schematic	2-9
PAM-25-D	Schematic	2-9
PAM-29	Schematic	2-10
PAM-39	Schematic	2-10
PAM-45	Schematic	2-11
PAM-48	Schematic	2-11
PAM-59	Schematic	2-12
S-100	Schematic	1-1
MIK-1	Schematic	2-12
MIK-1-D	Schematic	2-12
HA-2	Schematic	2-12
MIK-80	Schematic	2-13
PAM-80	Schematic	2-13

SCOTT TRANSFORMER CO.

World Record 10	Schematic	2-1
Shield Grid 9	Schematic	2-1
All-Wave Super Receiver	Schematic	2-3
All-Wave Super Receiver	Chassis wiring	2-2
All-Wave Super 145 Power Pack	Schematic, chassis wiring	2-4
All-Wave Super 150 Power Pack	Chassis views, schematic, control box	1-5

SEARS-ROEBUCK & CO.

1150	Schematic	2-1
1150	Voltage, socket, data	2-2
1152, 1420	Schematic, socket	2-3
1152, 1420	Chassis wiring, voltage	2-4
1250	Schematic, socket	2-3
1252	Chassis wiring, voltage	2-5
1252	Schematic, socket, data	2-6
1260	Schematic	2-1
1290, 1300	Chassis wiring	2-7
1290, 1300, 1292, 1302	Schematic, socket, data	2-8
1292, 1302	Chassis wiring	2-7
1310, 1312	Schematic, socket,	2-9
1310, 1312	Voltage, data	2-10
1320, 1322, 1324, 1450	Schematic, socket, voltage	2-11
1320, 1322, 1324	Chassis wiring	2-12
1370	Schematic, socket, voltage	2-13
1390, 1400, 1402, 1404, 1406	Schematic, socket, voltage, data	2-14
1430	Voltage, data	2-15
1430	Schematic, socket	2-16
Silvertone 218	Schematic, socket, voltage	2-17
1462	Schematic, socket	2-18
1462	Voltage	2-19
1480, 1482, 1484	Voltage	2-19
1480, 1482, 1484	Schematic	2-20

SENTINEL RADIO CORP.

11, 12, 15, 16 (104)	Schematic, socket, voltage, parts values	1-1
31, 33	Schematic	2-8
106-B	Schematic	1-2
108	Schematic, socket	1-3
108-A, 110	Schematic, socket	2-1
108-A, 110	Voltage, alignment data	2-2
109	Schematic, voltage, data	2-3
111	Schematic, socket, voltage, data	2-4
114	Voltage, chassis, data	2-5
114	Schematic, socket	2-6
440	Schematic	1-5
444	Schematic, socket, voltage	1-5
518	Schematic	2-7
550	Schematic	2-8
614	Schematic	2-9
660	Schematic	1-6
666-C	Schematic, socket	1-6
1020, 1030	Schematic, chassis wiring	2-10

SILVER-MARSHALL, INC.

30	Schematic, socket, voltage	1-1
440, Time Signal Amplifier	Schematic	1-1
30-B, 60-B, 75-B, 90-B	Schematic, socket, voltage	1-2
30, Circuit B	Schematic, data	1-3
30, Circuit C	Schematic, data	1-3
30, Circuit D	Schematic, data	1-4
30, Circuit E	Schematic, data	1-4
33-A Power Supply, 25 and 60 Cycles	Schematic, socket, voltage	1-5
34-A	Schematic, socket	1-6
35-A	Schematic, socket	1-6
36-A	Schematic, socket, voltage	1-7
Bearcat, 37, 38, 39, 782 Midget	Schematic, voltage	1-8
SM-651 Power Pack	Schematic	1-9
SM-660 Unipack	Schematic	1-9
SM-660-B (Without Push-pull)	Schematic	1-9
SM-650-B	Schematic	1-10
SM-652	Schematic	1-10
SM-669	Schematic, chassis wiring	1-10
670-ABC	Schematic, chassis wiring	1-11
670-B	Schematic, chassis wiring	1-11
675	Schematic, chassis wiring, parts list	1-12
677, 25 and 60 Cycles	Schematics, chassis wiring	1-13
677-B	Schematic, voltage	1-17
678-PD	Schematic, chassis wiring	1-14
679	Schematic	1-14
683	Schematic, socket, data	2-2
684	Schematic	2-1
685	Schematic	1-15
690	Schematic	1-15
692	Schematic	1-15
710, Sargent Raymond 7	Schematic, chassis view, data	1-16
712	Schematic, socket, chassis view	1-17
714	Schematic, socket, voltage, chassis views	1-18
716	Schematic, socket, data	2-2
720 AC	Schematic	1-19
720 Battery	Schematic, chassis view	1-19
722 AC	Schematic, socket, voltage, data	1-20
722DC	Schematic, chassis wiring	1-21
724 AC	Schematic, socket, voltage, chassis view	1-22
724 DC	Schematic, socket	1-23
Long-Wave Receiver	Schematic	1-23

SILVER-MARSHALL—Continued

MODEL		PAGE
726	Schematic, socket, voltage, parts list	1-24
727 SW-ALL Wave	Parts list	2-3
727 SW-ALL Wave	Schematic, socket, data	2-4
730, 731	Schematic	1-25
735 AC	Schematic	1-25
735 DC	Schematic	1-25
737 AC Bearcat	Schematic, socket	1-26
738 AC SW Converter	Schematic, socket	1-26
739 SW Superhet Converter	Schematic, data	1-27
740 DC	Schematic, chassis	1-28
740 AC	Schematic	1-28
770 Auto	Schematic, socket, chassis view	1-29
778, Broadcast-Long Wave	Schematic, data	2-5
A	Schematic, socket	1-30
B	Schematic, socket, data	2-6
C	Schematic, socket	2-7
C	Parts list	2-8
D, E	Schematic, socket, voltage	1-31
F	Schematic, socket	1-30
G	Schematic, socket	2-9
J	Schematic, socket	2-10
Q DeLuxe	Parts list	2-11
Q DeLuxe	Schematic, socket	2-12
R	Parts list	2-13
R	Schematic, socket	2-14
S-C II	Schematic	1-32
620 S-C	Schematic	1-32
635 Kit	Schematic	1-32
642 AC Tuner	Schematic	1-32

SILVERTONE
See SEARS-ROEBUCK CO.

SIMPLEX RADIO CO.

D	Schematic, socket	1-1
F	Schematic	1-2
G	Schematic	1-1
6-A	Schematic, socket	1-2
N DC	Schematic, socket	2-1
P AC	Schematic, socket	2-2
P Battery	Schematic, socket	2-2
P 1931	Schematic	2-3
Q 1931	Schematic, socket	2-3
R AC	Schematic, socket	2-1

M. B. SLEEPER

RX-1	Schematic, Misc	1-18

SONORA PHONOGRAPH CO.

3R, 4R	Schematic	1-1
5R	Schematic	1-2
7P	Schematic	1-3
A-30, A-32	Schematic	1-4
A-30, A-32	Socket, voltage, chassis wiring	1-5
B-31, 25 Cycles	Schematic, socket	1-6
A-36, A-46	Schematic, socket, voltage	1-7
A-40	Schematic	1-8
A-40	Chassis wiring, socket, voltage	1-9
DeLuxe 44	Schematic, voltage	1-10
2-M Automatic Stop	Schematic, parts details	1-11
2-RP, 25 Cycles	Schematic	1-12

SONORA

71, 72, 73	Schematic	2-1
84, 85	Voltage, chassis layout, data	2-2
84, 85	Schematic, data	2-3
86, 87	Voltage, data	2-4
86, 87	Schematic, chassis, data	2-5

SPARKS WITHINGTON CO.

MODEL		PAGE
5, 9	Schematic, chassis layout, data, voltage	2-1
9-A	Schematic, socket, voltage	2-2
5-15, 5-26	Schematic	1-3
6-15, 6-26	Schematic	1-3
10	Chassis, voltage, data	2-3
10	Schematic	2-4
12	Schematic, chassis, voltage	2-5
14	Voltage, chassis, data	2-6
14	Schematic	2-7
15	Chassis, voltage, data	2-8
15	Schematic	2-9
16-AW, 26-AW, SW Receiver	Schematic, voltage	2-10
16, 16-AW	Schematic, voltage	2-11
AR-19	Schematic	1-1
AR-19	Chassis views	2-12
25, 26	Schematic	2-14
25, 26	Chassis, voltage	2-15
26-AW, Revised #2	Schematic	2-16
30	Chassis, voltage	2-17
30	Schematic	2-18
30	Service data, Part 1	2-19
30	Service data, Part 2	2-20
30	Parts list	2-21
30	Chassis views	2-22
31, 32	Schematic	1-4
31, 32	Chassis views	2-23
35	Service data	2-24
35	Service data, continued	2-25
35	Service data, concluded	2-26
35	Chassis views	2-27
Carbon Resistors	Values, color coding	2-28
Carbon, Wire-Wound Resistors	Values, types, color coding, etc.	2-29
39	Schematic	1-4
40	Schematic, voltage, socket	2-30
41	Schematic, socket, voltage	2-31
45	Schematic	2-32
45	Chassis, voltage, data	2-33
49	Schematic	1-5
AR-50	Schematic	1-1
AR-50	Chassis	2-12
51, 52	Schematic, socket, voltage	2-34
51, 52	Service data	2-35
55 AC, Police Desk	Schematic	2-36
56	Schematic	2-37
56	Voltage, chassis, data	2-38
60 SW Converter	Schematic, socket, voltage	2-39
AC-7, 62, 63	Schematic, socket, voltage	1-5
69, 79-A, 89	Schematic, voltage	1-7
89-A	Schematic, voltage	1-7
99	Ensemble wiring	1-10
99	Schematic	1-11
103, 578	Assembly wiring, voltage, chassis	2-40
103, 578	Schematic	2-41
Antenna Trimmer	Service Notes	2-42
109 DeLuxe	Schematic	1-12
110, 111 AC (2 Types)	Schematic	1-13
111-A, 574, 870	Schematic	2-43
235	Schematic	2-44
301 AC	Schematic, voltage	1-14
301 DC	Schematic, voltage	2-45
420 AC	Chassis layout	2-46
420 AC	Schematic	2-47
420 DC	Chassis layout	2-48
420 DC	Schematic	2-49
564, 570, 740, 750 AC	Schematic, voltage	2-50
Resistors	Standard Color Coding	2-51
589 AC	Schematic, voltage	1-19
591, 593 AC	Schematic	2-52
DC 564, 570, 600, 610, 620, 740, 750	Schematic	2-53
600, 610, 620, 737 (Below #6502)	Schematic, voltage	2-54
737 AC (Above #6502)	Schematic	2-55
Power Converters	Chassis views	2-56
Selector Unit	Chassis views	2-57
Amplifier and Connector Units	Chassis views	2-58
Power Converters	Chassis views	2-59
Tubes	Characteristics and data	2-60
930 AC	Schematic, voltage	1-21
931 AC	Schematic, voltage	1-22
931 DC	Schematic	1-22

SPARTON
See SPARKS WITHINGTON CO.

SPLITDORF ELECTRIC MFG. CO.
See THOMAS A. EDISON, INC.

STANDARD RADIO CORP.

Standardyne 29 AC	Schematic, socket, Misc.	1-19

STEINITE RADIO CO.

40, 40-A, 50, 50-A, 102 102-A	Schematic	1-1
40-C, 60-C, 102-C	Schematic, socket, voltage	1-2
40, 45, 40-A, 45-A, 50-A, 102 SPU	Schematic, socket, voltage	1-2
70, 80, 95 (Chassis #10)	Schematic, socket, chassis wiring	1-3
203, 600, 605, 630, 635, 642, 643 (Chassis #22)	Schematic	2-1
261, 262, 263, 264, 265	Schematic, socket, voltage	1-4
420, 450 (Chassis #15)	Schematic, socket	2-3
420, 450 (Chassis #17)	Schematic, socket	2-2
421, 425 (Chassis #21)	Chassis layout, data	2-4
421, 425 (Chassis #21)	Schematic	2-5
423 (Chassis #23)	Schematic	2-6
700, 705, 706, 725, 642-B (Chassis #26)	Schematic	2-7
700, 705, 706, 725, 642-B (Chassis #26)	Voltage, data	2-8
700, 701 (Chassis #28)	Schematic, data, voltage	2-9
990, 991, 992, 993	Schematic, socket, voltage	1-5

STENODE RADIOSTAT

Stenode Radiostat	Schematic, Misc.	1-18

STERLING MFG. CO.

3-A	Schematic	1-1
4	Schematic	1-2
Miniature	Schematic, voltage	1-3
Miniature	Chassis views, data	1-4
F	Schematic	1-5
8-Tube Receiver	Schematic	1-5
R-100 MV	Schematic	2-1
R-402	Schematic	2-1
R-403	Schematic	2-1
R-404	Schematic	2-1
R-406	Schematic	2-1
R-407	Schematic	2-1
R-409	Schematic	2-3
R-410	Schematic	2-3
R-411	Schematic	2-3
R-412	Schematic	2-3
R-509	Schematic	2-3
R-510	Schematic	2-3
R-511	Schematic	1-6
R-522	Schematic	1-6
R-807-A	Schematic	2-2
R-810 (1st Type)	Schematic	2-2
R-810 (2nd Type)	Schematic	2-2
R-880	Schematic	2-2

STEWART-WARNER CORP.

R-100-A, B, E, AC	Schematic	1-10
R-100 Series	Chassis wiring, voltage	1-10
R-100-A	Continuity tests	1-11
R-100-C DC	Schematic, socket, voltage	1-12
R-101-A, R-101-B	Schematic, socket, voltage	2-1
R-101, R-102	Chassis layout, servicing notes	2-2
R-101, R-102	Servicing notes, concluded	2-3
102-A, B, E (1st Type)	Schematic, socket, voltage	2-4
R-102-A, B and E (Revised)	Schematic, socket, voltage	2-5
300, 305	Schematic, socket	1-1
R-301-A, B, E, SW Converter	Schematic, servicing notes	2-6
305, 315, 320	Schematic, socket	1-1
310, 325	Schematic, socket	1-1

STEWART-WARNER—Continued

MODEL		PAGE
330	Schematic, socket	1-1
335, 340	Schematic, socket	1-1
345, 350, 355, 360	Schematic, socket	1-1
385, 390	Schematic, socket	1-2
500, 520, 525	Schematic, socket	1-2
530, 535	Schematic, socket	1-2
530, 535, 715, 720 SPU	Schematic	1-2
700, 705, 710	Schematic, socket	1-3
715, 720	Schematic, socket	1-3
750	Schematic, socket	1-3
801, 802	Schematic, socket	1-4
801, 801-A, 811, 811-A (Series B)	Schematic, socket, voltage	1-4
PU 801, 801-A, 811, 811-A	Schematic	1-4
806 (Series A)	Schematic, socket	1-5
806 (Series B)	Schematic, socket	1-5
950 Series Battery	Schematic, socket, voltage	1-5
950 Series AC	Schematic, socket, chassis	1-6
901, 902, 903, 911, 912, 913	Schematic, socket, voltage, chassis	1-7
950 Series DC	Schematic, socket	1-8
971, 972, 973 DC	Schematic	1-9
980 Battery	Schematic	1-9
Resistors	Variable and fixed, Part 1	1-13
Resistors	Fixed, Part 2	1-14
A-F. Transformers	Data	1-15

STORY & CLARK RADIO CORP.

36	Schematic, socket, chassis	1-1
43, 51	Schematic, socket	1-2

STROMBERG-CARLSON TEL. MFG. CO.

1-A	Schematic, socket	1-1
1-B	Schematic, socket	1-1
301-A	Schematic	1-3
501, 501-A, 501-B, 502, 502-A, 502-B	Schematic, socket	1-1
403-AA	Schematic, socket	1-2
403, 403-A	Schematic	1-3
403-B	Schematic	1-3
404-RA	Schematic, socket	1-11
523, 524 AC	Schematic, socket	1-2
601, 602	Schematic, socket	1-4
633, 634	Schematic, socket	1-4
635, 636 (2 Types)	Schematic, socket, voltage	1-5
638 AC	Chassis wiring	1-6
638 AC	Schematic, socket, voltage	1-7
638 DC	Schematic, socket	1-7
641, 642, 652, 654	Schematic, socket, voltage	1-8
641	Resistance data	2-21
642	Chassis wiring	1-9
645 DC	Chassis wiring	2-22
652, 654	Chassis wiring	1-10
734	Schematic, socket	1-11
744	Schematic, socket	1-11
846 AC	Schematic, socket, voltage	1-12
846	Internal wiring	1-13
846	Chassis, voltage, test data	2-23
10, 11	Schematic, socket, voltage	1-14
10, 11	Chassis wiring	1-15
10, 11	Voltage, socket, resistance data	2-1
12, 14	Schematic, socket, voltage	1-16
12, 14	Chassis wiring	1-17
Phonograph Pick-up	Schematic	1-16
Multiple-Record Phonograph	Chassis wiring	1-16
19, 20 AC	Schematic	1-18
19, 20 AC	Chassis wiring	1-19
19, 20 AC	Voltage, parts values	2-2
19, 20 AC	Chassis views	1-21
19, 20 AC	Test data	2-3
22, 22-A	Chassis wiring	2-4
22, 22-A	Schematic, socket	2-5
22, 22-A	Voltage, values	2-6
22, 22-A	Chassis views	2-7
25, 26 AC	Chassis wiring	2-8
25, 26 AC	Schematic, socket	2-9
25, 26 AC	Voltage	2-10
25, 26 AC	Condenser and resistor values	2-11
27 AC	Chassis wiring	2-12
27 AC	Schematic	2-13
27 AC	Voltage, parts list	2-14
29	Chassis wiring	2-15
29	Schematic, socket, data	2-16
29	Parts list, voltage	2-17
38, 39, 40 (1st Type)	Schematic, socket, data	2-18
38, 39 40	Chassis wiring, data	2-19
38, 39, 40	Parts list, voltage	2-20

SUPREME INSTRUMENTS CORP.

19 Revised Tube Checker	Schematic	1-1
56 Analyzer (Weston Metered)	Schematic	2-3
90 Analyzer	Schematic	1-2
90 Analyzer (Weston Metered 6-J)	Schematic	2-3
Output Meter	Schematic	1-2
99-A Analyzer	Schematic	1-3
400-A Diagonometer	Schematic	1-4
400-B, #4 Series Diagonometer	Schematic	2-1
70 Oscillator	Schematic	1-6
AAA-1 (8-14-31) Diagonometer	Schematic	2-2

TEMPLE CORPORATION

8-60, 8-80, 8-90	Schematic, socket, voltage	1-1
8-61, 8-81, 8-91	Schematic, socket, voltage	1-2

THORDARSON ELECTRIC MFG. CO.

R-171	Schematic, chassis wiring	1-1
PP-171	Schematic, chassis wiring	1-1
210 Power Amplifier	Schematic, chassis wiring	1-2
R-210	Schematic, chassis wiring	1-3
213	Schematic	1-3
Eliminator	Schematic	1-3
250 Power Amplifier	Schematic, chassis wiring	1-4

TODD ELECTRIC CO.

MODEL		PAGE
"A" Unit	Schematic, Misc.	1-18

TRANSFORMER CORP. OF AMERICA

40	Schematic, socket, voltage, chassis	1-1
40	Chassis data	1-2
51, 53, 55 AC	Chassis, socket, voltage	1-3
51, 53, 55 AC	Power pack chassis, receiver breakdown	1-4
AC-60, 25-60	Schematic, socket, voltage, data	1-5
AC-60, 25-60	Chassis, test data	1-6
AC-61, 25-61	Schematic, socket, data	1-7
AC-61	Chassis layout	1-8
AC-61	Voltage, data	1-9
AC 70	Schematic, voltage, data	1-7
AC 70	Chassis layout	1-8
AC 70	Voltage, data	1-9
AC-80, 81	Schematic, socket	1-10
AC-80, 81	Chassis layout	1-11
AC-80, 81	Voltage, breakdown analysis	1-12
AC-84, 85	Schematic, voltage	2-1
AC-84, 85	Chassis layout, speaker	2-2
AC-84, 85	Alignment data	2-3
AC-84, 85	Parts list	2-4
AC-90, 90-A, 91	Schematic, socket	1-10
AC-90, 90-A, 91	Chassis layouts	1-11
AC-90, 90-A, 91	Voltage, breakdown analysis	1-12
AC-94, 95	Speaker	2-2
AC-94, 95	Alignment data	2-3
AC-94, 25-94	Schematic, voltage	2-5
AC-94, 25-94	Chassis layouts, socket, test data	2-6
AC 100 Series	Schematic, socket, voltage	2-7
AC 100 Series	Chassis layout, speaker data, test data	2-8
AC 100 Series	Trimmer notes	2-9
AC 100 Series	Parts list, test data	2-10
120-139	Schematic, chassis layout, data	2-11
AC-240	Schematic, chassis layout, breakdown, data	2-12

TRAV-LER RADIO & TELEVISION CORP.

6, 7	Schematic, socket	1-1
6, 7 AC & DC Power Packs	Schematic, data	1-1
SG-DX, C	Schematic	1-2
K	Schematic	1-2
Trav-Lette	Schematic	1-2

TYRMAN ELECTRIC CORP.

Tyrman 10	Schematic, Misc.	1-20
Shielded Grid 7	Schematic, Misc.	1-20
Imperial 80	Schematic, Misc.	1-20

UNITED AMERICAN BOSCH CORP.

BAN "B" Power Units	Schematics	1-1
5 AC	Schematic, socket, voltage	1-2
5 AC	Parts values	1-3
16	Schematic, socket, voltage	1-4
20-J, 20-K, 20-L	Schematic, socket, voltage	2-1
20-J, 20-K, 20-L	Chassis, values, data	2-2
27	Schematic, socket, voltage	1-4
28 AC (2 Types)	Schematic, socket, voltage	1-5
28 AC Power Pack	Chassis, parts values	1-6
29 AC	Schematic, voltage	1-5
29 AC, 825 Power Pack	Schematic, chassis, voltage	1-7
31, 32 AC	Schematic, socket, chassis, data	2-3
31, 32 AC	Voltage, parts list	2-4
35	Schematic, socket, voltage	1-4
46	Schematic, socket, voltage	1-4
AC 46, 126, 146, 166, 176	Schematic, socket, voltage	1-8
48, 49 AC	Schematic, socket, voltage, data	1-9
48, 49 AC	Chassis wiring views	1-10
54 DC	Schematic, socket, voltage, data	1-11
54 DC	Chassis wiring views	1-12
56 Battery	Schematic, socket, parts list	1-13
56 Battery	Chassis wiring views	1-14
57, 58	Schematic, socket, voltage	1-15
58 AC	Schematic, socket, voltage, parts list	1-17
66, 76, 76-L	Schematic, socket, voltage	1-15
66 AC, 96, 116, 136 AC	Schematic, socket, voltage	1-15
60, 60-D, 60-E, 61	Schematic, socket, parts list	1-16
62 DC	Voltage, parts list	1-18
62 DC	Schematic, socket	1-19
63 DC	Voltage, parts list	1-20
63 DC	Schematic	1-21
73, 74	Parts list, voltage, data	1-22
73, 74	Schematic, socket, chassis wiring	1-23
80	Schematic, socket, voltage, parts list	1-24
80	Installation notes	2-5
91, 92	Voltage, parts list	2-6
91, 92	Schematic, socket, chassis, data	2-7
96, 156 DC	Schematic, socket, voltage	1-8
100 (Advertised 9-20) Auto	Installation data	2-8
100 Auto	Schematic, socket, voltage, assembly wiring	2-9
107 AC	Schematic, socket, voltage	1-15
108 Police Auto Set	Adjustment notes, parts list	2-10
108 Police Auto Set	Schematic, assembly wiring	2-11
205, 206, 5-A, 205-A	Voltage, chassis, socket, data	2-12
205, 206, 5-A, 205-A	Schematic, socket, parts list	2-13
224	Schematic	2-14
226	Schematic	2-15
312, 313	Adjustments	2-16

UNITED REPRODUCERS CORP.

20 Series	Schematic	1-1
65	Schematic, socket, data	1-2
70 Series (71, 72)	Schematic, socket	1-3

U. S. ELECTRIC CORP.

17	Schematic, socket, data, Misc.	1-21
37	Schematic, socket, data, Misc.	1-21

U. S. RADIO & TELEVISION CORP.

MODEL		PAGE
7	Schematic, socket	2-1
7	Chassis, alignment data, voltage, data	2-2
7	Servicing notes, data	2-3
7	Chassis, parts list	2-4
8 Series	Schematic, socket	2-5
8 Series	Chassis layout, voltage, data	2-6
8 Series	Chassis, parts list	2-7
10	Schematic, data	2-8
10	Chassis layout, voltage, data	2-9
10	Chassis view, parts list	2-10
10-C (Chassis 1000-1001)	Schematic, chassis layout, speakers	2-11
10-C (Chassis 1000-1001)	Voltage, speaker notes	2-12
10-C (Chassis 1000-1001)	Chassis view, data	2-13
10-C (Chassis 1000-1001)	Parts list	2-14
20	Schematic, socket	1-1
20	Voltage, servicing notes and data	2-15
20	Alignment data	1-2
26	Schematic, socket, voltage	1-3
26	Chassis wiring	1-4
26-P	Schematic, socket, voltage	1-3
26-P	Parts list, voltage, data	1-4
27 Early	Schematic, socket, voltage	1-5
27 Late	Schematic, socket, voltage	1-5
27-P	Schematic, chassis wiring of motor-board	1-6
28 Early, Below $373,601	Schematic, socket, voltage	1-7
28 Late, Above $373,601	Schematic, socket, voltage	1-7
28	Chassis wiring	1-8
29	Schematic, voltage	1-9
30 Auto Set	Schematic, voltage, assembly wiring	2-16
Apex 31	Schematic, socket, voltage	1-10
30-R (Remote Control)	Schematic	1-10
32 Series	Schematic, socket, voltage	1-11
Apex 36	Schematic, socket, voltage	1-12
Apex 37	Schematic, voltage	1-12
41-60, 43-25	Schematic, socket, voltage	1-13
42-60, 44-25	Schematic, socket	1-13
46, 47 Apex, 46-A, 47-A	Schematic, socket, voltage, data	1-14
48, 48-A, 48-W, 482	Schematic, socket, voltage	1-15
49	Schematic	1-15
80	Schematic, socket, voltage	1-16
99 Series	Schematic, socket, data	2-17
99 Series	Alignment data, voltage, chassis layout	2-18

VALLEY ELECTRIC CO.

MB "A" Power Unit	Schematic, Misc.	1-22

VIKING
See OZARKA, INC.

GEORGE W. WALKER CO.

Victorian Standard	Chassis wiring, Misc.	1-23
Victorian Universal	Chassis wiring, Misc.	1-23

WARE MFG. CO.

T	Schematic	2-1
4-Tube	Schematic	2-1
7-Tube	Schematic	2-1
B-1, B-2 Bantam	Schematic	2-2
SB-45	Schematic	2-3
SBA	Schematic	2-4
S-1	Schematic	2-5
SBF	Schematic	2-5

WELLS-GARDNER & CO.

C, CG (1st and 2nd Types)	Schematic, socket	1-1
C, CG	Voltage, socket, data	1-2
72	Schematic, socket	1-3
80, 82-A	Schematic, socket, data	1-4
052 Series	Schematic, chassis layout, voltage	2-1

WESTERN ELECTRIC CO.

D-95508	Schematic	1-1
8-B	Schematic	1-1
8-C	Schematic	1-1
9-A	Schematic	1-2
10-A	Schematic	1-2
17-B	Schematic	1-2
25-B	Schematic	1-3
32-A	Schematic	1-4
41-A	Schematic	1-3
42-A	Schematic	1-4
43-A	Schematic	1-4
45-A	Schematic	1-3
46-A	Schematic	1-4

WESTINGHOUSE ELECTRIC & MFG. CO.

WR-4	See RCA-Victor 48	
WR-5	See RCA-Victor R-80	
WR-6	See RCA-Victor R-82	
WR-7	See RCA-Victor R-86	
WR-10	See RCA-Victor R-7	
WR-12	See RCA-Victor R-9	
WR-14	See RCA-Victor R-5	
WR-15	See RCA-Victor R-11	

WESTON ELECTRICAL INSTRUMENT CORP.

MODEL		PAGE
Jewell Test Panel	Schematic	1-1
Jewell 133	Schematic	1-2
Jewell 133-A	Schematic	1-2
Jewell 137	Schematic	1-3
Jewell 198, 199 (2nd Type)	Schematic	2-1
Jewell 209	Schematic	2-1
Jewell 214	Schematic	2-2
Jewell 408, 409 (1st Type)	Schematic	1-5
Jewell 408, 409 (2nd Type)	Schematic	1-6
Jewell 444	Schematic	2-3
Weston 526, Type 7	Schematic	1-7
Jewell 533	Schematic	2-4
Jewell 534	Schematic	2-4
Weston 537	Schematic	1-8
Jewell 538	Schematic	2-5
Jewell 540	Schematic	2-6
Weston 547	Schematic	1-10
Jewell 560	Schematic	2-6
Weston 555	Schematic	1-11
Weston 564	Schematic	1-11
Weston 565	Schematic	1-12
Jewell WD 566	Schematic	1-13
Weston 566	Schematic	1-14
Weston 676	Schematic	2-7

WHOLESALE RADIO SERVICE CO., INC.

Duo-Symphonic Junior 1931	Schematic, socket, voltage	1-1
Great Duo-Symphonic	Schematic, socket, voltage	1-1
Duo-Symphonic 1930	Schematic, socket, voltage, data	1-2

WILLARD STORAGE BATTERY CO.

B Unit 3095	Schematic	2-1
AB 3301 G. E. Charger	Schematic	2-2
AB 3301, Westinghouse	Schematic	2-2
B Unit 3310, 4310	Schematic	2-1
B Unit 4095	Schematic	2-1
AB 6301	Schematic	2-2

WORKRITE MFG. CO.
See U. S. ELECTRIC CORP.

THE RUDOLPH WURLITZER CO.
See ALL-AMERICAN MOHAWK CORP.

ZANEY-GILL CORP.

Vitaphone 54	Schematic, notes, Misc.	1-24

ZENITH RADIO CORP.

ZE-3	Schematic	2-1
ZE-4	Schematic	2-1
ZE-5	Schematic	1-4
ZE-6	Schematic	2-1
ZE-9 for Models 11-E, 14-E	Schematic, data	2-2
ZE-10	Schematic	1-5, 1-8
ZE-11	Schematic	1-7
ZE-13	Schematic	1-5, 1-8
11, 12, 14 (1st Type)	Schematic, socket	1-2
12 (2nd Type)	Schematic, socket	1-2
11-E, 14-E	Schematic, socket	1-3
17	Schematic, socket	1-4
27 Super-Zenith	Schematic	1-30
27 Super-Zenith (Series Filament)	Schematic, socket	1-6
31, 32 Battery	Schematic, socket	1-6
ZE-14	Schematic	1-7
33, 34, 35, 35-A, 342, 352, 352-A, 362	Schematic, socket, voltage	1-8
34-P, 342-P	Schematic, socket, voltage	1-7
35-PX, 35-APX, 352-PX, 352-APX	Schematic, socket, voltage	1-9
35-P, 35-AP, 352-P, 352-AP	Schematic, socket, voltage	1-10
37-A	Schematic	1-9
ZE-18	Schematic	1-9
ZE-11 for 35-P, 35-AP, 37-A	Schematic	1-10
ZE-14 for 352-P, 352-AP	Schematic	1-10
39, 39-A, 392, 392-A	Schematic, voltage	1-11
40-A	Schematic, socket	1-11
ZE-12 for 39, 39-A, 40-A	Schematic	1-12
ZE-15 for 392, 392-A	Schematic	1-12
ZE-16 Filter	Schematic	1-12
41, 42	Schematic, socket, voltage	1-13
422	Schematic, socket, voltage	1-13
52, 53	Schematic, socket	1-14
54	Schematic, socket	1-14
52, 53, 54, 55	Voltage data	1-15
ZE-50	Schematic	1-15
60, 61, 62, 64, 67, 602, 613, 622, 642, 672	Schematic, socket, voltage	1-16
ZE-60	Schematic	1-17
ZE-70	Schematic	1-17
71, 72, 73, 77, 712, 722, 732, 777	Schematic, socket, voltage	1-18
70	Tone control installation	1-19
80 Hypermetron	Schematic, socket	1-20
ZE-80	Schematic, parts list	1-21
80 Hypermetron	Parts list	1-22
AH, CH, RH	Schematic, socket, chassis, voltage	1-23
AH, CH, RH	Service data, parts list	1-24
BH (2021)	Schematic, socket, parts list	2-11
LH, MH, WH (2022)	Schematic, socket, data	2-12
LP	Schematic, socket, parts list	1-25
6-Tube Zenette, Chassis A, B, C, D (2004)	Schematic, socket, parts list	1-26
5-Tube Zenette, Type 2009-C	Schematic, parts list	1-27
91, 92 (1st Type)	Schematic, socket, data	2-3
91, 92 (2nd Type)	Schematic	2-4
91, 92 (3rd Type)	Schematic	2-5
91, 92	Circuit data	2-6
91, 92	Balancing notes	2-7
91, 92	Chassis view, voltage, parts list	2-8
10, 11, 12, 102, 112, 122	Schematic, voltage, parts list	2-9
10, 11, 12, 102, 112, 122	Balancing notes, SPU notes and Schematic	2-10
Super Zenith, Battery	Schematic	2-14
103 (2017), Serials $450,001-450,450	Schematic, notes	2-16
103 (2017) Above Serial $450,451	Schematic	2-15
103 (2017) Above Serial $451,260	Schematic, socket	2-18
103	Chassis view, parts list	2-17
103	Chassis layout, voltage	2-19
250, 260, 272 (2031)	Schematic, data	2-20
333, 353-A DC	Schematic, socket	1-29
ZE-17	Schematic	1-29
500, 501, 503, 514, 515, 516, 600, 604, 606, 610, 616, 618 (2037)	Parts list, voltage	2-21
500, 501, 503, 514, 515, 516, 600, 604, 606, 610, 616, 618 (2037)	Schematic, socket	2-22
563 DC	Schematic, socket	1-29

CONTINUITY TESTING

With the exception of the vacuum tube, the units designated by the terms inductance, capacity and resistance represent the three basic physical elements found within a radio receiver. The testing of these devices to determine the state of continuity represents the bulk of all the testing applicable to a radio receiver.

INDUCTANCE.

Common usage has affiliated the term "inductance" with windings of wire of all types. Thus the continuity testing of an inductance is the continuity testing of a winding of wire, irrespective of the type of core, the number of turns, the function or the physical appearance of the unit. Whatever the type of test said to be suitable for application to an inductance can be classed as being suitable with equal facility to any other form of winding which can be classed as an inductance. Thus the same type of test is applicable to radio frequency transformers, audio frequency transformers, power transformers, radio frequency chokes, audio frequency chokes, filter chokes, etc.

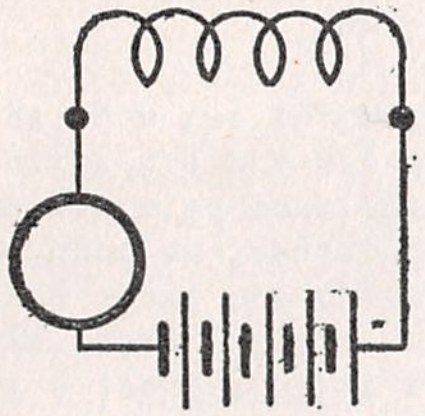

Fig. 1

The actual function of the winding is of very little significance as far as the test is concerned. Whether the winding carries direct or alternating current does not enter into the problem. As a rule all windings are usually designed to be continuous, that is the winding is complete so that a direct current will circulate through the turns when that coil is connected to a source of D.C. potential.

A simple method of testing windings is shown in figure 1. The schematic shows a meter and a battery. This combination may represent the usual voltmeter-battery test circuit or the more accurately calibrated ohmmeter. The terminals of the winding are designated by the two heavy dots. The same points can be considered as the terminals of the test unit.

Current flow through the winding as indicated upon the meter is representative of the state of continuity. If the test circuit is an ohmmeter, the resistance of the coil will be indicated upon the meter. If the test circuit is a voltmeter-battery unit, the magnitude of the deflection is the indication of the approximate resistance of the coil. An open coil will show no deflection because current flow is required to operate the voltmeter or the ohmmeter. Current of D.C. character cannot flow through an open winding.

The number of turns used for the winding and the rated resistance governs the ease of distinguishing between certain states possible in that winding. The ease of resistance approximation is also a matter of the design of the testing system. A test circuit which is capable of recording high resistances is as a rule incapable of recording low values of resistance. Thus if such a test system is connected across a coil of low resistance, the deflection upon the meter will be alike for perfect continuity or for a short circuit across the coil terminals.

If the test system is capable of indicating high values of resistance and is not calibrated when applied to windings of fairly high resistance, the magnitude of the indication affords an idea of the condition of the coil. A high resistance coil will cause a low reading upon the meter. The higher the indication upon the meter, the lower the resistance. A means of gauging the approximate resistance is as follows: Suppose the voltmeter is rated at 8 volts and 1000 ohms per volt. The battery is of 4.5 volts. The total resistance of the meter is 8000 ohms. If the deflection upon the meter is below 2.25 volts the resistance is greater than 8000 ohms. If the deflection upon the meter is greater than 2.25 volts the resistance of the winding is less than 8000 ohms.

To test coils of low resistance it is necessary to use an ohmmeter calibrated for low values of resistance or to employ an A.C. voltmeter rated at about 10 ohms and about 14 ohms per volt in conjunction with a 4.5 volt battery of the flashlight type. This combination assembled as shown in figure 1 will show the presence of a resistance of approximately 1 ohm. Thus a simple low and high range continuity tester would consist of two meters, an A.C. meter and a D.C. meter, either of which may be connected into the circuit by means of a switch. Other types of continuity testers and ohmmeters are to be found in "Practical Testing Systems" written by the author of these lines and available from the Radio Treatise Co. Inc. New York City.

For the guidance of the man who wishes to employ a D.C. voltmeter of 8 volts and 1000 ohms per volt in conjunction with a 4.5 volt battery, the following voltage indications are representative of the following values of resistance. Thus the test circuit becomes an ohmmeter.

0 ohms	4.5 volts				
500 "	4.23 "	5000 ohms	2.77 volts	40000 ohms	0.75 volts
1000 "	4.00 "	6000 "	2.57 "	50000 "	0.62 "
1500 "	3.79 "	7000 "	2.40 "	75000 "	0.46 "
2000 "	3.60 "	8000 "	2.25 "	100000 "	0.33 "
2500 "	3.42 "	9000 "	2.11 "		
3000 "	3.27 "	10000 "	2.00 "		
3500 "	3.13 "	15000 "	1.56 "		
4000 "	3.00 "	20000 "	1.28 "		
4500 "	2.88 "	30000 "	0.94 "		

One precaution must be exercised when testing windings located in radio receivers or which are parts of a complete circuit. This is the guarding against the possibility of a shunt D.C. path across the inductance, which would cause a misleading indication. The operator must check the circuit in question to locate any shunt across the coil.

CONDENSERS.

The continuity checking of condensers is carried out in the manner applied to inductances. The result of the test to indicate a perfect

Continuity Testing

condenser is the reverse of that for a perfect inductance. The perfect solid dielectric condenser will indicate an "open" when the continuity tester is applied. The test circuit is shown in figure 2. The heavy dots indicate the terminals upon the condenser and also the terminals upon the test unit. When testing condensers, resistance measurements are not in order. The purpose of the test is to determine whether the condenser is open, perfect, or shorted. Unfortunately it is difficult to arrange a simple test circuit to indicate an "open" because the indication for a good condenser is very similar to that for an open circuit in the condenser. The difference between the two is that a perfect condenser will cause a momentary deflection upon the test meter. The meter pointer "kicks" upward to indicate the flow of the charging current. However such an indication cannot be obtained when very small values of capacity are being tested, unless a high voltage and a high ohms-per-volt meter are used.

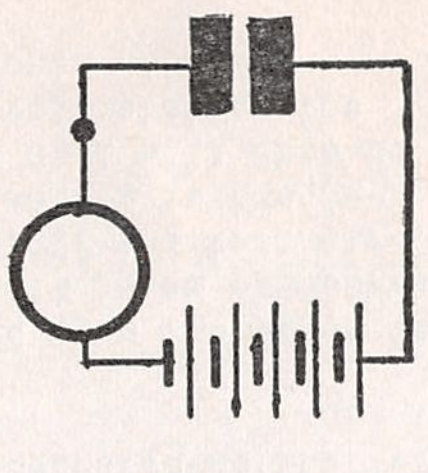
Fig. 2

An indication of some value between zero and maximum is a sign of a leak, that is a steady indication. A steady indication equal to the voltage rating of the battery is a sign of a short circuit in the condenser. During such tests the operator must be certain that the condenser under test is mounted upon an insulated surface and that his hands are not in contact with the uninsulated portions of the test prods. Physical contact with the test prods during the process of the test is apt to cause a misleading indication of leakage upon the voltmeter.

The test as stated is applicable only to solid dielectric condensers. The "dry" and "wet" types of electrolytic condensers must be tested in different fashion. These condensers should be tested for leakage by applying a D.C. potential equal to the rating of the condenser, approximately 350 volts. The polarity of the condenser must be observed. A milliammeter is connected into the test circuit. The correct value of leakage current for the "wet" type of electrolytic condenser is a maximum of about .5 milliampere per microfarad, and for the "dry" type of electrolytic condenser a maximum of about .1 to .25 milliampere per microfarad.

When checking condensers located in receivers be certain that no shunt D.C. path is present across the condensers. Thus it is impossible to check the continuity of tuning condensers in a conventional tuned radio frequency stage without disconnecting the tuned circuit. The same is true when checking the continuity of a fixed condenser connected across an audio frequency transformer. The condenser must be disconnected from the transformer. Opening one lead is sufficient.

RESISTANCES.

Continuity testing of resistances is usually in the form of a resistance test. In view of the fact that the function of the resistance in most cases is to produce a voltage drop, it is equally important to determine the ohmic value as well as the state of continuity. The method of applying the continuity tester-ohmmeter is as shown in figure 1 and repetition of the schematic is unnecessary. A resistance which is intact will show a steady deflection. One that is open will show no deflection. If the rated resistance is known, the observed ohmic value can be compared with the rated value to determine the suitability of the resistor.

In connection with resistance tests or continuity tests upon resistances it is necessary to make mention that the current flow through many resistances is limited to a small value. Thus by employing a test circuit which does not require more than 1 milliampere current flow of maximum indication, one is reasonably certain of causing no damage to the resistor during the test.

In the event that the meter deflection is not steady when the test is made it might be well to investigate all connections in the circuit in order to determine if the unsteady deflection is due to a defect in the resistor. Resistances which are productive of unsteady deflections during a test will be found to be productive of noise when placed into a receiver, eliminator or amplifier.

CONTINUITY TESTING IN A FINISHED RECEIVER.

Perhaps we appear as placing too much stress upon continuity testing and upon circuit structure. We feel that what will follow will offer conclusive proof of the fact that a great deal of time may be saved by correct application of a continuity test and that it is absolutely necessary that the operator be familiar with the circuit under observation.

Basically the modern radio receiver is like its brethren of years gone by, but so many pet ideas are added that the actual testing of the circuit is somewhat more complicated than in the simple days of the past. Of course we still encounter radio receivers of simple yet effective design, in which case the conventional continuity test based upon the most elementary receiver is still applicable. Perhaps it might be well to consider receivers of different types. In view of the fact that voltage tests and the set analyzer have not as yet been discussed there shall be no reference to symptoms or to open circuits as indicated by a voltmeter or current meter test. The reader may if he so wishes imagine each of the circuits mentioned as being open at one point.

Let us start with a simple circuit. Figure 3 is the schematic of the Earl 21-22 receiver. An examination of the circuit shows that the ground is common to all grid circuits and to the B-circuit. Under the circumstances the ground contact can be used as the common point for most tests.

Suppose that we select the ground as the common terminal for the continuity tester and check the respective circuits. We shall call the ground terminal number 1. Other points will bear higher numerical designations. It is understood that the tubes are not in their respective sockets. For the want of more accurate data we will assume that the D.C. resistance of the respective radio frequency transformer secondary windings is 4 ohms each ; of the first stage audio frequency transformer secondary, 4000 ohms, the primary, 1000 ohms, the primary of the second stage audio transformer, 1600 ohms and the complete secondary is 10,000 ohms, 5000 ohms each side of the center tap. The two filter chokes in the power pack are assumed to have a resistance of 300 ohms each. Let us proceed.

From ground (1) to the L.A. binding post (2) would show continuity through the aerial coupling coil. Between L.A.(2) and the grid(3) of the first RF tube with the volume control set at minimum should show continuity of low resistance through the variometer. If this variometer is open the continuity would be high because of the presence of the 250,000 ohm potentiometer. To check the potentiometer it would be necessary to open the variometer circuit and this is the first illustration of parallel D.C.circuits. The possibility of checking the variometer circuit without opening the potentiometer system is present because of the very high resistance of the potentiometer. Yet one cannot feel certain that the potentiometer or the aerial variometer circuits are intact unless they are checked individually.

Circuit continuity between the ground and the 1st RF grid is available between 1 and 3. The circuit between the ground and the 2nd RF grid (4) should indicate a resistance of about 4 ohms. (It is necessary that the reader remember that we have set arbitrary values of resistance and that the actual measurement upon the receiver system may show entirely different values. This change in values will not affect the method of test.)

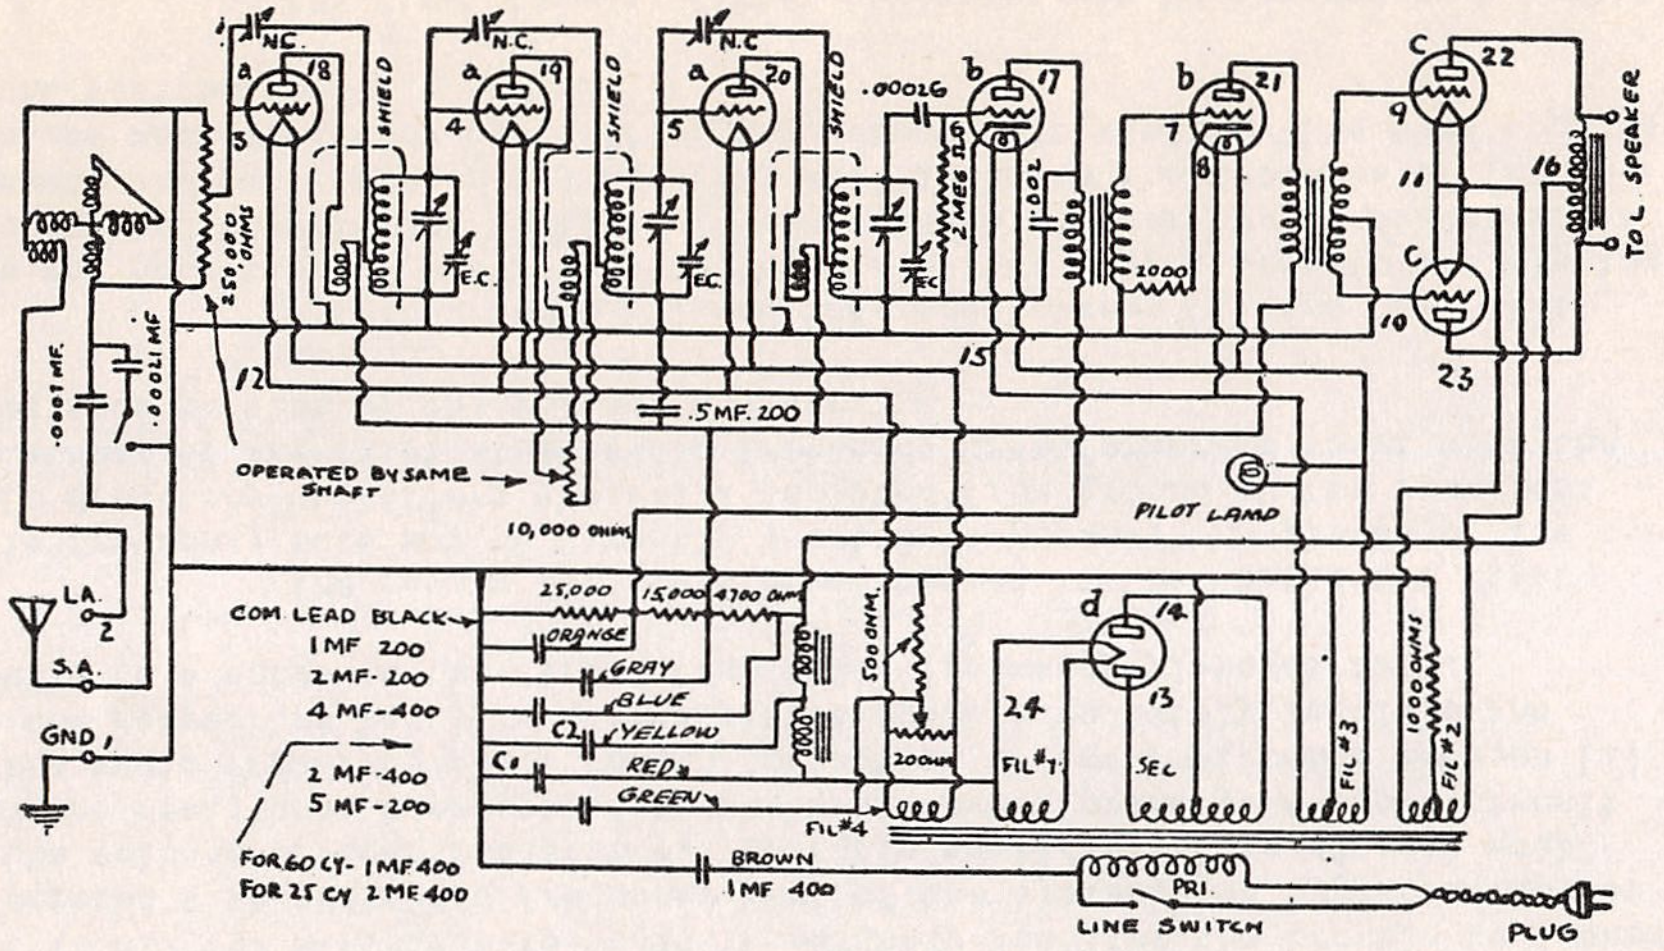

Fig. 3

The circuit between (1) and (5), should show the continuity in the third radio frequency grid circuit. A short circuit in the first neutralizing condenser can be checked by opening the volume control circuit. This is done by inserting a piece of paper between the moving arm and the resistance portion. Then the test is made between(3) and (4) and between (3) and (1). There should be a difference in the readings because the two parts of the radio frequency transformer secondary are checked. A short circuit in the condensers connected across the grid circuits of the second radio frequency tube can be determined by a test between (4) and (5). The elements present between these two points include the two radio frequency transformer secondaries which are then in series. Perfect continuity is indicated by a value of resistance equal to the sum of the individual resistances of these windings.

Obviously a short circuit in the second or third stage condensers will create the same effect. If the presence of a short circuit is noted, it becomes necessary to check directly between (1) and (4) and between (1) and (5) The shorted coil will become evident.

A check between (1) and (6) will show the continuity of the grid leak. To check the tuning condensers the tester is connected across the condenser plates. If the result is not sufficiently clear, a supplementary test is between the terminal of the third neutralizing condenser and the ground and then between the same terminal upon the neutralizing condenser and the stator plate of the condenser. Incidently this test is suitable to determine an open in either section of the winding and at the same time a check of the condensers. If the condensers are shorted there will be no difference in the resistance between the two connections. If the condenser is intact there will be a difference in the resistance of the circuits during the two tests. A short circuit in the detector grid condenser can be checked by a test between (1) and (6). The circuit will indicate a very low value of resistance, that of the radio frequency transformer secondary. The value of the grid leak is so high that it has no effect. If the grid leak is open, the test between (1) and (6) will indicate an open.

The audio frequency system is checked in like manner. The test between (1) and (7) should indicate the resistance of the first audio frequency transformer secondary. The test between the ground and the cathode (8) should show the presence of the bias resistance. A short circuit between (1) and (8) indicates a short circuited bias bypass condenser. An open between (1) and (8) indicates an open bias resistance. The open is located in the transformer secondary if the test between (1) and (7) shows open.

Alternate tests between (1) and (9) and (1) and (10) should show the degree of continuity in the two halves of the second audio frequency transformer secondary. A test between (1) and (11), either side of the output tube filament should show the presence of the output tube bias resistance. A check between (1) and (12) should show the presence of the radio frequency tube bias resistance. If this circuit is open, one of two circuits may be open. One of these is the bias resistance and the other is the center tap connection upon the filament shunt resistance.

Alternate tests between (1) and (13) and (1) and (14) should show the continuity through the halves of the power transformer plate winding. A test between (1) and (15) would show the ground upon the heater winding of the detector and first audio frequency tubes.

It is understood that in the event of a short circuit or a discrepancy in the value of resistance observed that the normal method of determining the reason for the short circuit or the discrepancy would be the logical step. Thus for example a defect in the secondary winding of the second audio frequency transformer can be checked by testing between (9) and (10) to corroberate the tests between the ground and the respective grid circuits.

Continuity Testing

Proceeding into the plate circuit, we can check the total resistance of the voltage divider by contacting between (1) and (16), the center tap upon the speaker plug winding or the center tap upon the output transformer. A simpler method is to check between (1) and (17), the plate of the detector tube. The total resistance should be the sum of the associated part of the divider and the first audio transformer primary. A short circuit in the detector plate bypass condenser would cause zero reading. A short in the voltage divider bypass condenser would cause a reading equal to the resistance of the audio transformer primary.

A test between (1) and (18), (19) and (20) would indicate the continuity in the respective plate circuits. The resistance would be that of the divider sections present in the circuit. The test between (1) and (21) would indicate the continuity in the first audio frequency stage. Since all of these tube plates are tied to a common feeder an open in all the plate circuits would indicate an open in the feeder cable. An open in but one plate circuit would immediately localize the trouble to that particular stage. A short circuit in all the R.F.circuits would immediately localize the trouble to a short associated with the radio frequency part of the system, the bypass condenser or the voltage divider resistance. The audio amplifier plate circuit would show the resistance represented by the transformer primary. A short circuit in the audio frequency plate and an indication of low resistance between (1) and the respective radio frequency plates would immediately localize the trouble to a short in the first stage audio frequency plate circuit.

The reason for the aforementioned is that while the first audio frequency tube may be directly shorted to ground, the plates of the radio frequency amplifiers are still isolated from ground by the resultant resistance of the first stage audio frequency transformer in shunt with the associated portion of the voltage divider.

A test between (1) and (22) and between (1) and (23) will show the condition of the respective halves of the output transformer winding or choke and the divider section. If the voltage divider bypass condenser is shorted, the test between (1) and (22) will indicate the presence of the resistance represented by one half of the output unit winding. The same applies to the test between (1) and (23).

The first (input) filter condenser can be checked by a test between (1) and (24) the filament of the rectifier tube. The correct value of resistance in this circuit should total the complete divider plus the sum of the two filter chokes. A check between the filament of the rectifier and the center tap connection to the output unit(16) should show the resistance of the chokes. If the second filter condenser is shorted and a check is made between (1) and (24), the amount of resistance indicated will be that of the first filter choke. If the output filter condenser is shorted and the test is made between the two points last named, the value of resistance indicated will be the sum of the two chokes. The resistance of the divider does not influence the reading.

No doubt the reader has observed that a large number of tests can be made without removing the chassis from the cabinet. The proper contact with the respective socket terminals can be made by means of plugs or the conventional test prongs. We did not include every possible test. Undoubtedly a number presented themselves to the reader as we progressed through the continuity test of this receiver.

What has been said in these pages is not intended as a definite statement that all forms of test other than continuity should be discarded. The conventional voltage test provides the information necessary for the selection of the circuits to which will be applied whatever form of continuity test is being used by the operator. The continuity test should show whether or not the set can be repaired in the home.

Suppose we refer once more to figure 4. The conventional voltage test indicates that there is no plate voltage being applied to the radio frequency, detector and first audio frequency plate. The plate voltage applied to the output tube appears normal. The probable cause according to the diagram is in the voltage divider, or for that matter such would be the conclusion based upon a knowledge of eliminator systems. Unless a continuity test is made, it is impossible to definitely state whether or not all of the resistances must be replaced or if the connection between the filter choke and the high end of the divider is open or if the 4700 ohm resistance is open. A few minutes spent in a test between (1) and (17) would show if the 15000 ohm unit was intact, and another test between (17) and (20) would show if the 25000 ohm unit was intact. The last named test can also be made by checking between (1) and (18), (20) or (21). Radio frequency socket (19) could be used providing that the volume control unit was adjusted to minimum resistance or maximum signal.

Assuming that the fault is an open between the radio frequency plate voltage tap and the output end of the filter, a temporary repair is possible if the resistance is of the open wire type. If not, the man can call the following day with another replacement unit and make the change right in the home, thus obviating the necessity of carting the chassis, perhaps making entries in a receiving department and other such details.

Reference to the discussion about circuit continuity, with particular attention to the presence of the bleeder unit will show the difference involved during the continuity testing of such circuits. We suggest that the reader consult the section devoted to set analyzer application. The method of determining the presence of such bleeder units is discussed in detail.

Point To Point Resistance Data

The application of the point-to-point data is a matter entirely within your own hands. It has been prepared along the lines which will enable a routine test upon the receiver by working through the tube sockets, thus obviating the necessity for the removal of the chassis, until the defect has been located. The condenser test is in the majority of instances likewise applicable through the sockets.

Tolerance Limits.

One of the precautions which must be exercised in connection with resistance measurement and this applies to the point-to-point test or to the resistance test subsequent to the voltage test is to allow sufficient tolerance.

While it is true that the values shown in circuits are exact and definite, the actual units employed in the receiver do not have the exact values marked upon the diagrams. By this we mean that a certain amount of tolerance is employed in the manufacture of the resistor and this must be recognized during the test. The tolerance limits are in a way determined by the function of the resistor and its location in the circuit. Units used in circuits which do not carry direct current have tolerance values between 10 and 15 percent. Units which carry direct current have tolerance limits which range from about 3 to 10 percent. The lower limit is to be found in filament circuit and in voltage divider resistors. An optimum range of tolerance limits for units which carry current, exclusive of the filament system is from 5 to 10 percent plus or minus.

These tolerance limits are not present in resistance measurement methods of servicing only, but are also present in voltage testing, since the variation in resistance will cause a variation in the voltage. Furthermore, the final test during voltage measurement, is the resistance test, so that the same condition applies to that test.

Tolerance limits pertaining to the resistance of r-f and i-f windings are much closer. In a-f winding, a tolerance of from 5 to 10 percent will be experienced in practice. The exact limits used by the different radio receiver manufacturers are unknown, but this does not complicate matters for the simple reason that the organization which employs a close limit, will use resistors which very closely approximate the rated value.

Voltage Co-efficient in Resistors.

Another item which must be recognized in connection with the measurement of resistors in receivers and amplifiers is the voltage co-efficient of carbon resistors. We specify the type of unit, because the same condition does not as a rule apply to wire wound and metallic coated units.

Carbon resistors should be checked at the voltages employed by the resistor manufacturer. The reason for this is that the nature of the resistor is such that its resistance (d-c) will vary according to the test voltage applied because of the current flow through the unit. This item is not the temperature co-efficient of resistance. Checking at some voltage other than that employed by the resistor manufacturer will result in the determination of some value other than the true rating when the correct voltage is applied.

However, since the correct values of voltage are not known, it is best to employ the lowest possible test voltage required to show a normal indication upon the resistance measuring device. This problem of voltage co-efficient is not native to resistance measurement method of analysis only, but is to be found when resistance is measured subsequent to a voltage test. Perhaps some time in the future, certain standards will be evolved to designate the exact test voltage to be applied to carbon resistors of various values.

By employing the lowest possible test voltage, we at least safeguard the unit against damage by overload. An approximation of the correct voltage (test) can be had by noting the position of the unit in the circuit and the voltage drop across the unit. Thus high resistors used in the plate circuits of audio frequency and detector tubes are subjected to voltages ranging from about 90 to perhaps 150 volts. Low range units used in bias circuits, varying from 10,000 to about 50,000 ohms are usually subjected to voltages ranging from 10 to perhaps 30 volts. Fortunately, the presence of a defective resistor can be detected when a low voltage is applied, despite the fact that the correct test voltage for a resistor of the type and value being checked may be much higher. In this respect, you as the operator must apply your knowledge and make your own interpretations.

Electrolytic Condensers In The Circuit.

Point-to-Point Testing

The presence of an electrolytic condenser across a resistor will influence the resistance between two prescribed points and at the same time influences the voltage which may be applied across those two points. The variation in resistance is due to two conditions. One of these is related to the polarization of the electrolytic condenser. This type of condenser possesses one value of resistance, fairly high when the test is made with the correct polarity and a low value of resistance when checked with incorrect polarity of the testing voltage.

Therefore, it is necessary when checking resistors which may have connected across them some value of capacity, which may or may not be of the electrolytic type, to measure the resistance with the polarity of the testing voltage in both directions. This precaution is unnecessary, if the polarity of the testing voltage is maintained in conformity with the polarity of the circuit being checked. In some cases this is impossible, but it is possible in the majority of instances.

An example of the foregoing is the following. When testing grid bias resistors, the cathode or the filament centre tap are positive with respect to the chassis. The polarity of electrolytic condensers is taken into consideration when they are connected into the circuit. By arranging that the polarity of the resistance measuring system conform with the polarity of the resistor circuit when in operation, the correct polarity with respect to the electrolytic condenser is assured. In the event that the condenser connected across that resistor is not of the electrolytic type, all well and good, but if it is, correct testing circuit is applied.

A similar requirement of polarity is required when checking the resistance of units related to the rectifier filament. This terminal is positive with respect to the balance of the circuit when in operation and when making resistance tests from the rectifier filament to some other point, the polarity of the tester prod connected to the rectifier filament must be positive.

The second factor associated with electrolytic condensers is that of voltage. The usual circuit arrangement of the resistor being tested and its associated condenser is such that the voltage applied across the resistor is also applied across the condenser, since these two units are connected in parallel. Accordingly, the test voltage applied to the resistor for measurement of its ohmic value cannot exceed the operating voltage rating of the condenser. If it does, damage is the consequence.

Fortunately, low voltage electrolytic condensers are used in shunt with low values of resistance, as for example pentode bias units. Consequently, the test voltage required to check resistors of values ranging from 100 to perhaps 1000 ohms, will be sufficiently low so as not to damage the condenser or cause excessive leakage.

Electrolytic type bypass condensers in other circuits are usually within the 200 to 250 volt range, so that normal application of the tester is possible. As far as filter condensers of the electrolytic variety are concerned, the voltage rating is about twice as great as the usual testing voltage applied to the voltage divider circuits.

A third item related to electrolytic condensers and also associated with the measurement of resistance is the normal resistance of the condenser. As is well known, the insulation resistance of an electrolytic condenser is not as great as that of a solid dielectric unit. As a matter of fact, it is only a small fraction of the d-c resistance of a paper dielectric or mica dielectric unit. Accordingly, it will have some effect upon the resistance between any two prescribed points. Just what this resistance will be is not always known, but it is determined by the condition of the condenser and by the testing voltage.

If a receiver or amplifier has been inoperative for a long period of time, the ohmic value of a resistor shunted by an electrolytic condenser cannot be determined unless the condenser is disconnected. The reason for this is that the insulation resistance of an electrolytic condenser which has been inoperative for a long period of time is very low, in fact so low as to greatly influence the resistance across its terminals.

As far as perfect electrolytic condensers are concerned, the fact that leakage current flows through the condenser and that its insulation resistance is much lower than that of the solid dielectric unit must be taken into consideration. The electrolytic condenser connected across a resistor being checked is the equivalent of a shunt resistor of a certain value, determined by the leakage current through the condenser at the testing voltage.

If the voltage rating of the electrolytic condenser is high and the testing voltage applied across the circuit is low, the shunting effect of the condenser will be negligible, particularly if the ohmic value of the resistor being checked is low. It may be necessary to first determine if an electrolytic condenser is present in the circuit by comparing the readings obtained with the polarity of the test circuit, first in one manner and then reversed and then to disconnect the electrolytic unit. By maintaining the testing voltage at the lowest possible value, the effect of the shunt electrolytic condenser is minimized. Experience shows that the most frequent occasion for disconnecting the electrolytic condenser occurs when checking voltage divider circuits.

Fractional microfarad bypass condensers have low leakage. The normal rating of electrolytic condenser is somewhere around .1 to .25 milliampere per microfarad. For a .25 microfarad unit, the leakage current at say 200 volts d-c after a normal period of application would be about .000061 ampere. This means a value of resistance sufficiently high to have very little effect upon whatever units are being bypassed by the condenser.

Because of the nature of the electrolytic condenser, the resistance test voltage applied across a resistor shunted by an electrolytic condenser should be kept across the contact for a short period of time, say at least a minute for fractional microfarad units, unless the measured value of resistance indicates a normal state. In every case, the shunt effect of the condenser will lower the resistance between the test points.

In the case of filter circuits, it may be necessary to keep the resistor test prods connected across the circuit for about 5 minutes, unless the measured value immediately after application shows a normal state. In work of this type, a great deal **depends** upon the operator.

Once more we wish to mention that the facts named, are not native to resistance measurement methods of service analysis, but will be experienced if the resistance test is made subsequent to the voltage test. If you are in the habit of removing the chassis before making the tests, which is not necessary with point-to-point method of operation, you may find it advantageous to disconnect the filter condensers, if they are of the electrolytic type.

Solid and Air Dielectric Condenser Tests.

Solid and air dielectric condensers, unless shorted, have no effect upon shunt resistors, and there is no need for polarity specification. However in certain instances, as for example across bias units and across the voltage divider it is best to always connect the ohmmeter as stated in connection with electrolytic condensers. In this manner, you are certain of having the correct polarity in the event that the condenser in the circuit is of the electrolytic variety.

Open Condensers.

One of the greatest service problems encountered today is the intermittent and permanently open condenser. It is true that condensers become shorted, but when shorted, will indicate that effect by short circuiting the associated resistors. hence will be detected when the resistance test is made.

It has been customary in the past to check for open condensers by connecting a perfect condenser across the terminals of the suspected condenser and noting the effects. However, this requires that the receive be in operation and there is possibility of electrical shocks to the operator and maybe short circuiting of circuits by accidental contacts. Another method is to disconnect the suspect condenser and check it for capacity; the design of the capacity measuring unit being such as to indicate the open.

Point To Point Resistance Data

Point to point resistance data contained in this manual appears in two forms. Where the information was compiled by the writer it appears as a coded tabulation. Where the information was compiled by the receiver manufacturer, it appears as a tabulation of normal order and is referred to as "Resistance Data" in the corner card. The same designation is applied to the writer's tabulation. The resistance test can be applied in any one of a number of ways. It is equally effective with the chassis removed or by operating via the tube sockets with the tubes removed.

The conditions under which these tests are made are as follows.

1. The tubes are tested separately.
2. The line voltage or battery voltage are determined independently of the receiver.
3. In a-c receivers, the a-c voltage applied to the receiver anodes is measured with an a-c meter without the rectifier or the other tubes in their sockets.
4. In a-c receivers the filament voltage is measured.

Additional conditions are named upon the pages giving the resistance details for the various receivers. The following abbreviations are used and the method of application will be described later.

TUBES

RF - rf	Radio Frequency
AF - af	Audio Frequency
IF - if	Intermediate Frequency
Det	Detector
Osc	Oscillator
Rect	Rectifier
AVC	Automatic Volume Control
AVCX	Combination automatic volume control and detector

TUBE ELEMENTS

Cg	Control grid
K	Cathode
F	Filament
H	Heater
Sg	Screen grid
Sup	Suppressor grid
P	Plate

Point-to-Point Testing

CONDENSERS

BC	Bypass condenser
FC	Filter condenser
CC	Coupling condenser
BLC	Blocking condenser

MISCELLANEOUS

Tr	Transformer
Cplg	Coupling
wdg	Winding
Y	Chassis
chk	Choke
mfd.	Microfarad
mmfd.	Micromicrofarad

The data pages are arranged to show the test made between the chassis and the various tube elements or circuits listed in the first column. These points are reached through the tube sockets working from the top of the chassis, or from the load sockets assuming that a plug-cable method contacting the tube circuit is used.

The second column gives the correct value of resistance to be found in the circuit. These figures are the rated values and the tolerance limits must be applied. If the units used in the circuit are exactly as rated, the resistance to be expected is the quoted value. Of course electrolytic condensers must also be recognized.

The third column states probable reason for incorrect resistance between the points named, assuming that the tolerance limits have been applied. No special mention of open resistors is made unless they are in parallel circuits, on the assumption that if the resistance test indicates an open, the subsequent operation will be to locate the open resistor.

The tests have been arranged in such fashion as to enable isolation of the various units employed in the receiver, thereby enabling immediate localization of the defect in the event of a short circuit or an open circuit indication.

The third column states the probable fault and its location. An example is the following.

Tube	Correct	Incorrect
RF Plate	13,026 ohms	BC- rf P wdg- Y (1 mfd.) BC- 2 D AF Tr- 2 D K FC- 2 RF P wdg-Y (8 mfd)
RF Plate to '47 Screen	26 ohms	

Between the r-f tube plate and chassis, the resistance to be expected according to the units used in the circuit is 13,026 ohms, providing that everything is correct. Because of the nature of the circuit, that is, current flow through the system, the tolerance limit is quite low, between 5 and 10 percent. Supposing that it shows a marked difference, which means that the "incorrect" column would be referred to.

The first possible reason for the defect is the "bypass condenser connected between the rf plate winding and the chassis. It is a 1. mfd unit". The abbreviations used are not difficult to comprehend, since they are definitely associated with the names of the units.

The second possible reason for the defect is the "bypass condenser connected between the 2nd Detector tube audio frequency transformer and the 2nd detector cathode"

The third possible reason for tge defect is the "filter condenser connected between the 2nd radio frequency tube plate winding and the chassis, an 8 mfd. condenser".

Because of common circuit connections, the defect will not always be a part of the tube circuit immediately contacted. However, the defect in the circuit may be located in an associate tube.

The subsequent tabulation affords a means of isolating the radio frequency transformer primary winding, which is connected to the plate of the radio frequency tube. Naturally a defect in a resistance (r-f winding) of 26 ohms will have very little effect upon a total circuit resistance of 13,026 ohms, so that it is necessary to isolate the plate winding in order to check its resistance. This is done as stated.

Another example of the application of the abbreviations is as follows:

2 Detector Control Grid	50 ohms	TC- 2 D Cg-Y

This means that the correct resistance between the 2nd detector control grid and the chassis should be 50 ohms. If a defect is indicated, check the "tuning condenser connected between the 2nd detector control grid and the chassis"

All of the items listed under the incorrect heading are those which will influence the resistance between points. As far as open condensers are concerned, the condenser test must be applied. With respect to neutralization, incorrect alignment, etc., the routine operations are required.

ADVANCE ELECTRIC CO.

MODEL
Falck Superhet "B"
MODEL "E"

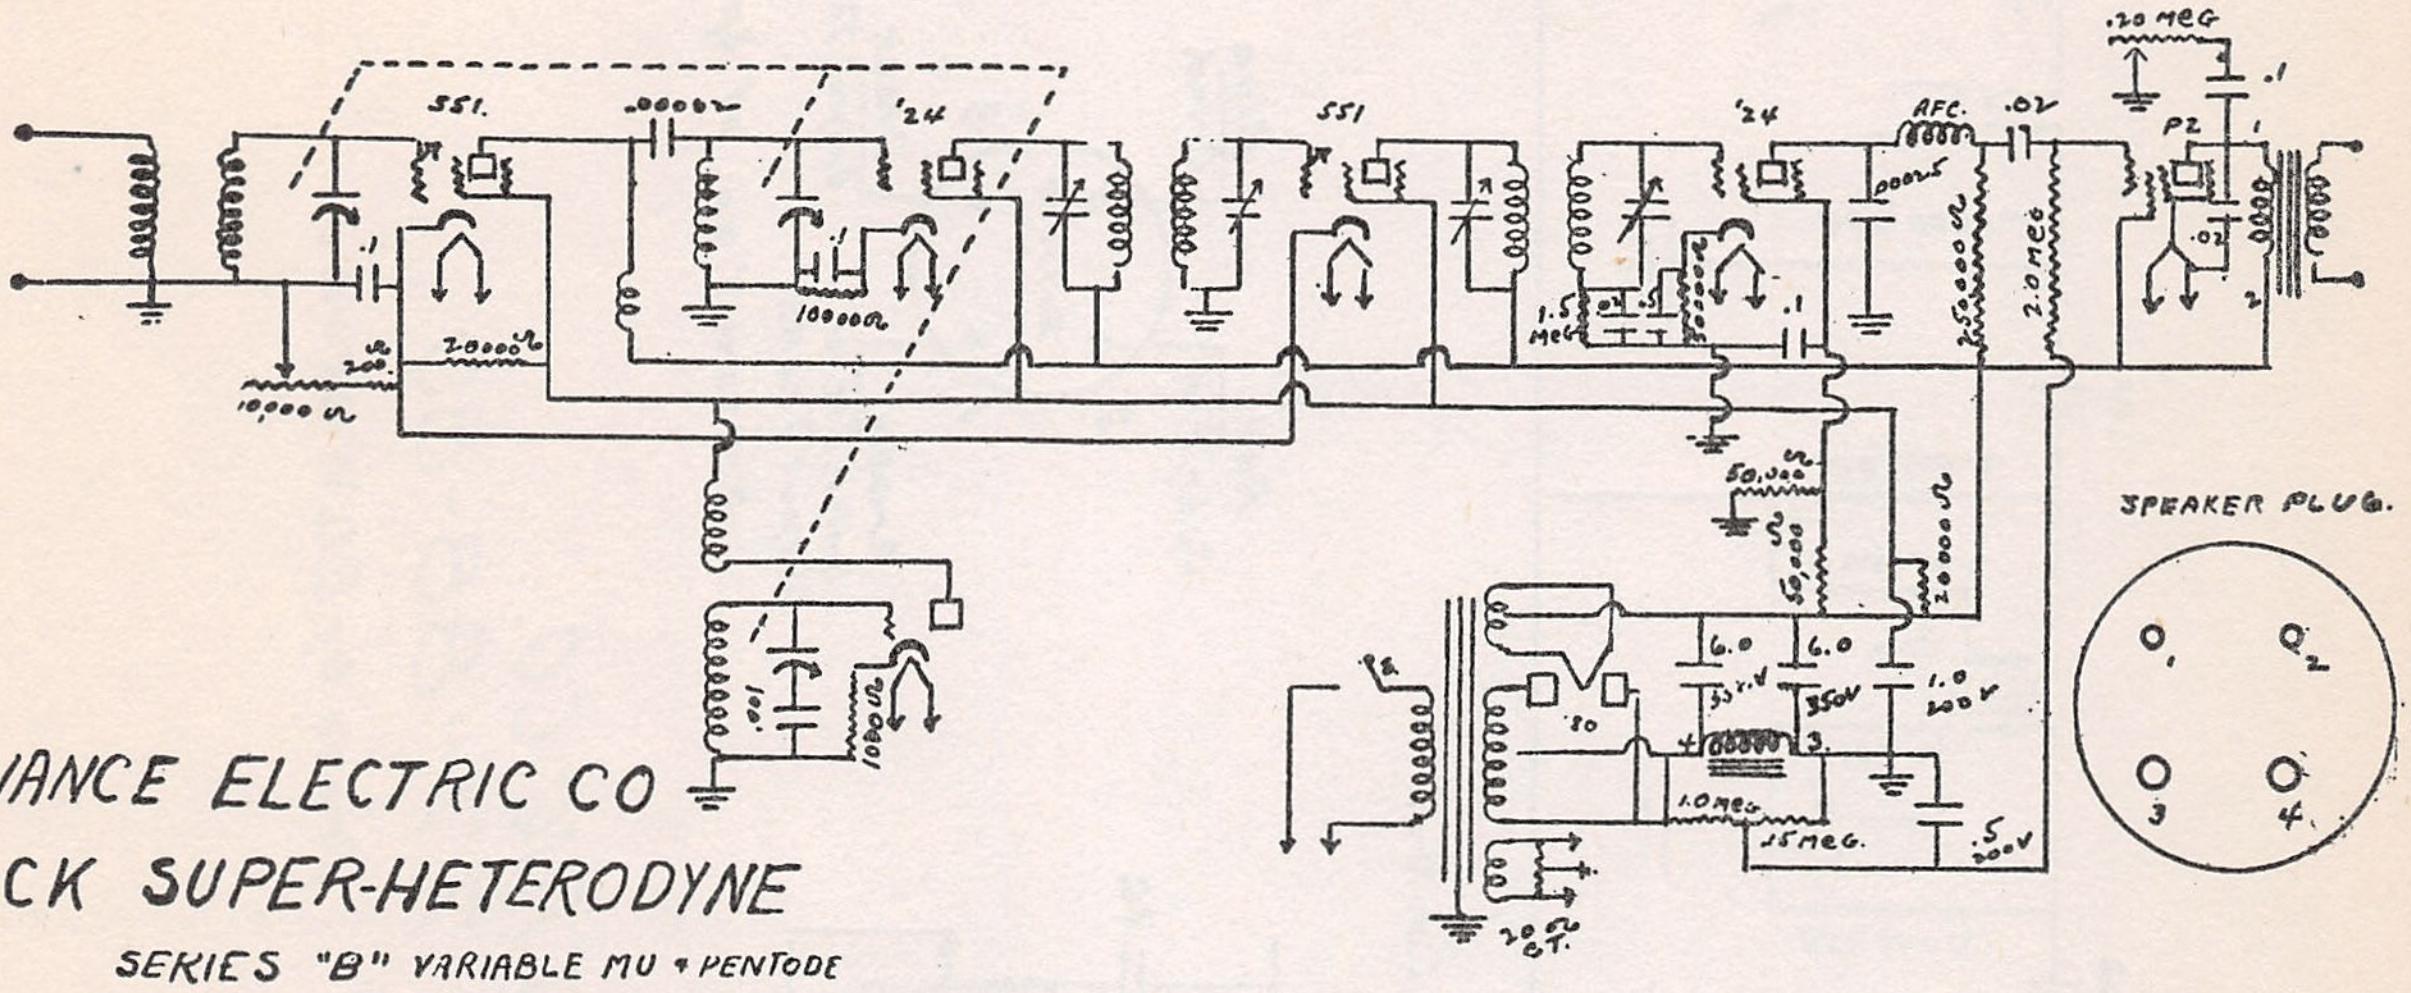
551
.00002
'24
551
'24
AFC
.02
.20 MEG
.1
PZ
20000Ω
200
10,000Ω
10000Ω
.001
1000Ω
1.5 MEG
.0005
25000Ω
2.0 MEG
50,000Ω
50,000
20,000Ω
6.0
350V
6.0
350V
1.0
200V
'80
1.0 MEG
.15 MEG
.5
200V
20 C.T.
SPEAKER PLUG
1
2
3
4

ADVANCE ELECTRIC CO
FALCK SUPER-HETERODYNE
SERIES "B" VARIABLE MU + PENTODE
1931

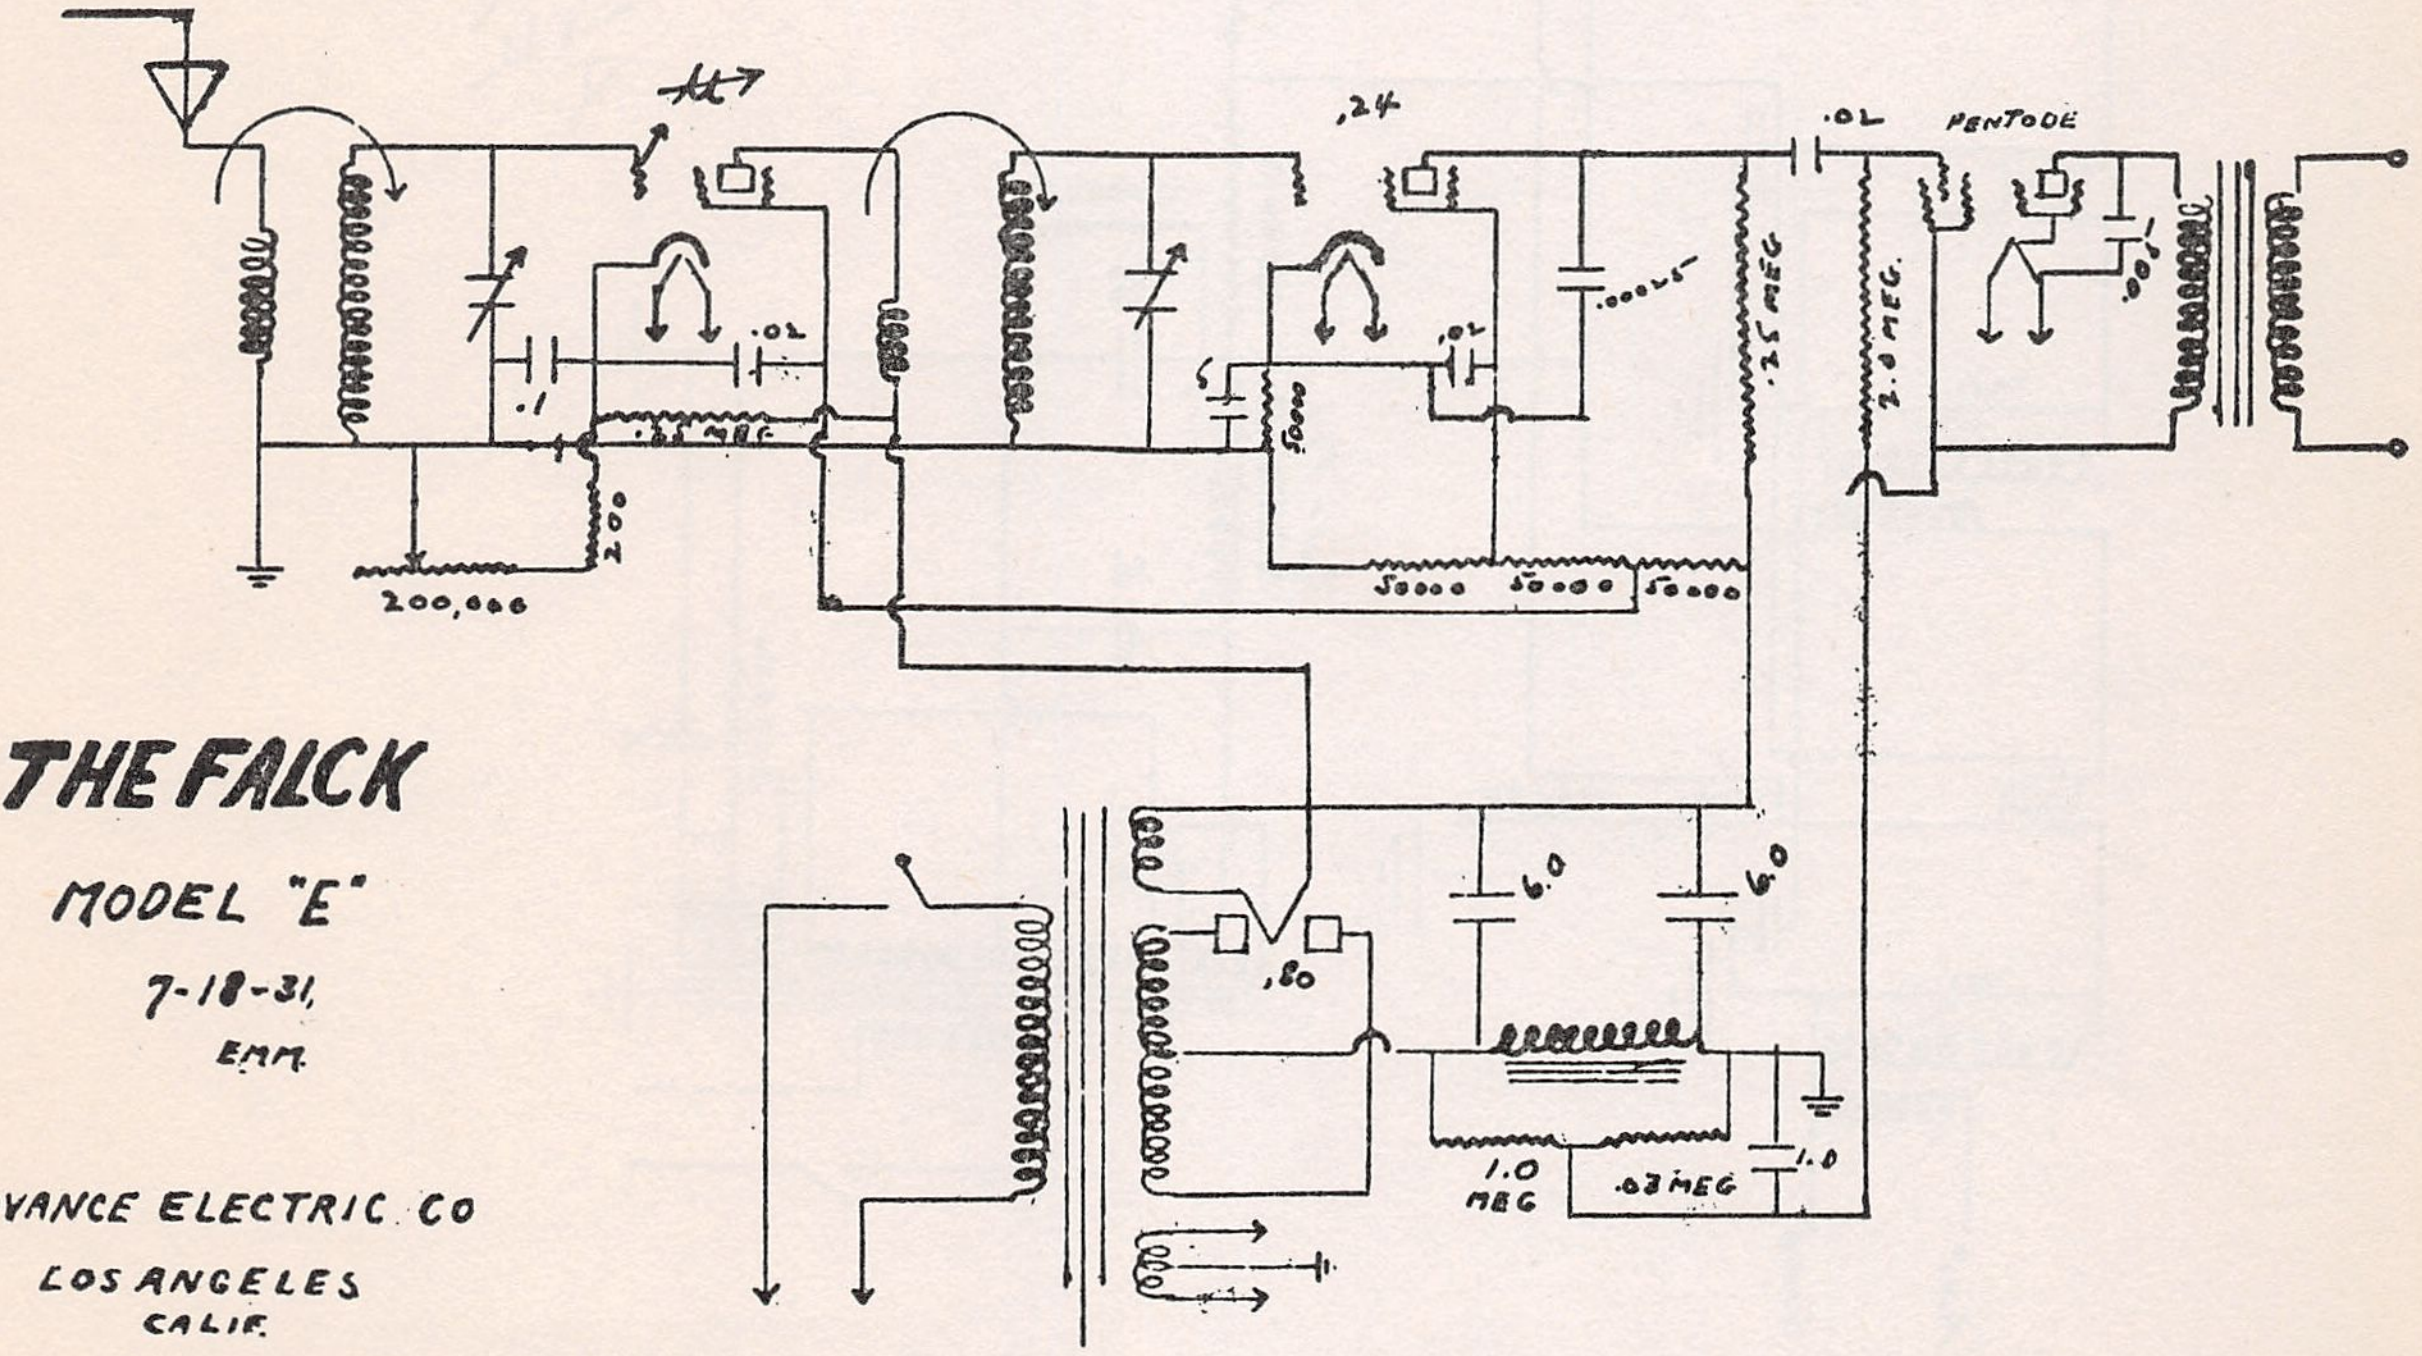
Ant
,24
.02
PENTODE
.1
.02
.25 MEG
.0005
.25 MEG
2.0 MEG
200
200,000
50000
50000
50000
6.0
6.0
,80
1.0 MEG
.03 MEG
1.0

THE FALCK
MODEL "E"
7-18-31.
EMM.

ADVANCE ELECTRIC CO
LOS ANGELES
CALIF.

MODEL Falck 77-88-89

ADVANCE ELECTRIC CO

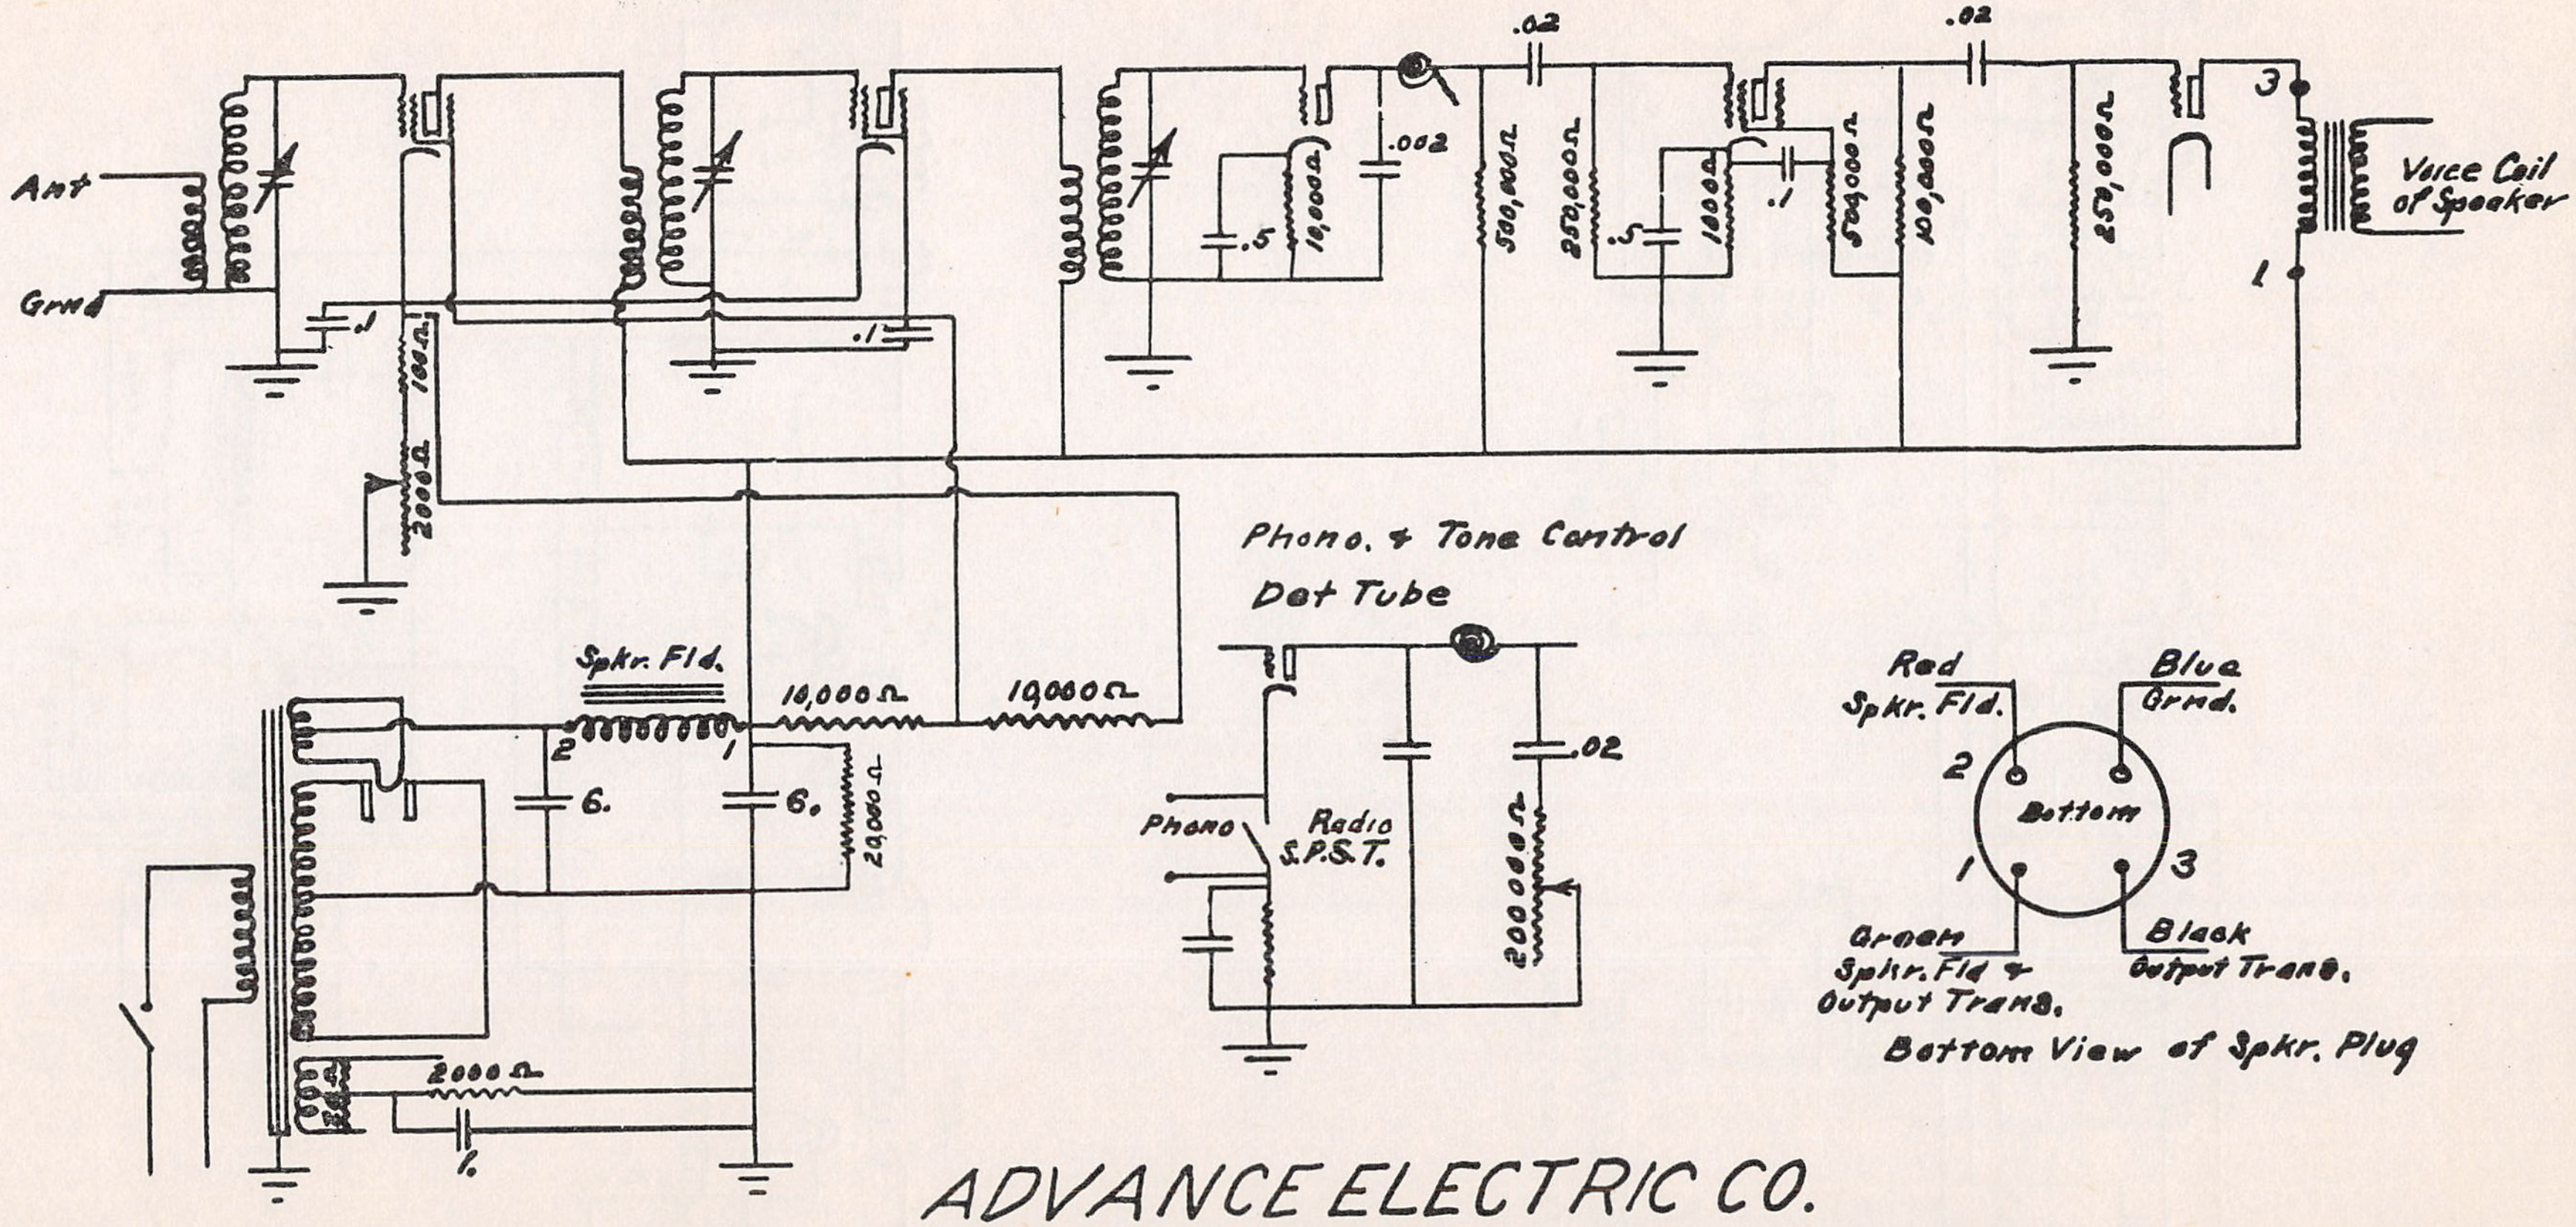
Ant
Grnd
.1
100Ω
2000Ω
.1
.5
10,000Ω
.002
.02
500,000Ω
250,000Ω
.5
1000Ω
.1
250000Ω
100,000Ω
.02
250,000Ω
3
1
Voice Coil of Speaker
Spkr. Fld.
10,000Ω
10,000Ω
2
1
6.
6.
20,000Ω
2000Ω
1.
Phono. & Tone Control
Det Tube
Phono
Radio S.P.S.T.
.02
200000Ω
Red Spkr. Fld.
Blue Grnd.
2
Bottom
1
3
Green Spkr. Fld & Output Trans.
Black Output Trans.
Bottom View of Spkr. Plug

ADVANCE ELECTRIC CO.
FALCK MODELS 77-88-89
Oct., 29, 1930 Drawn by E.O. Woodward

ALLIED RADIO CORP.

MODEL KNIGHT SG-8
Bottom View

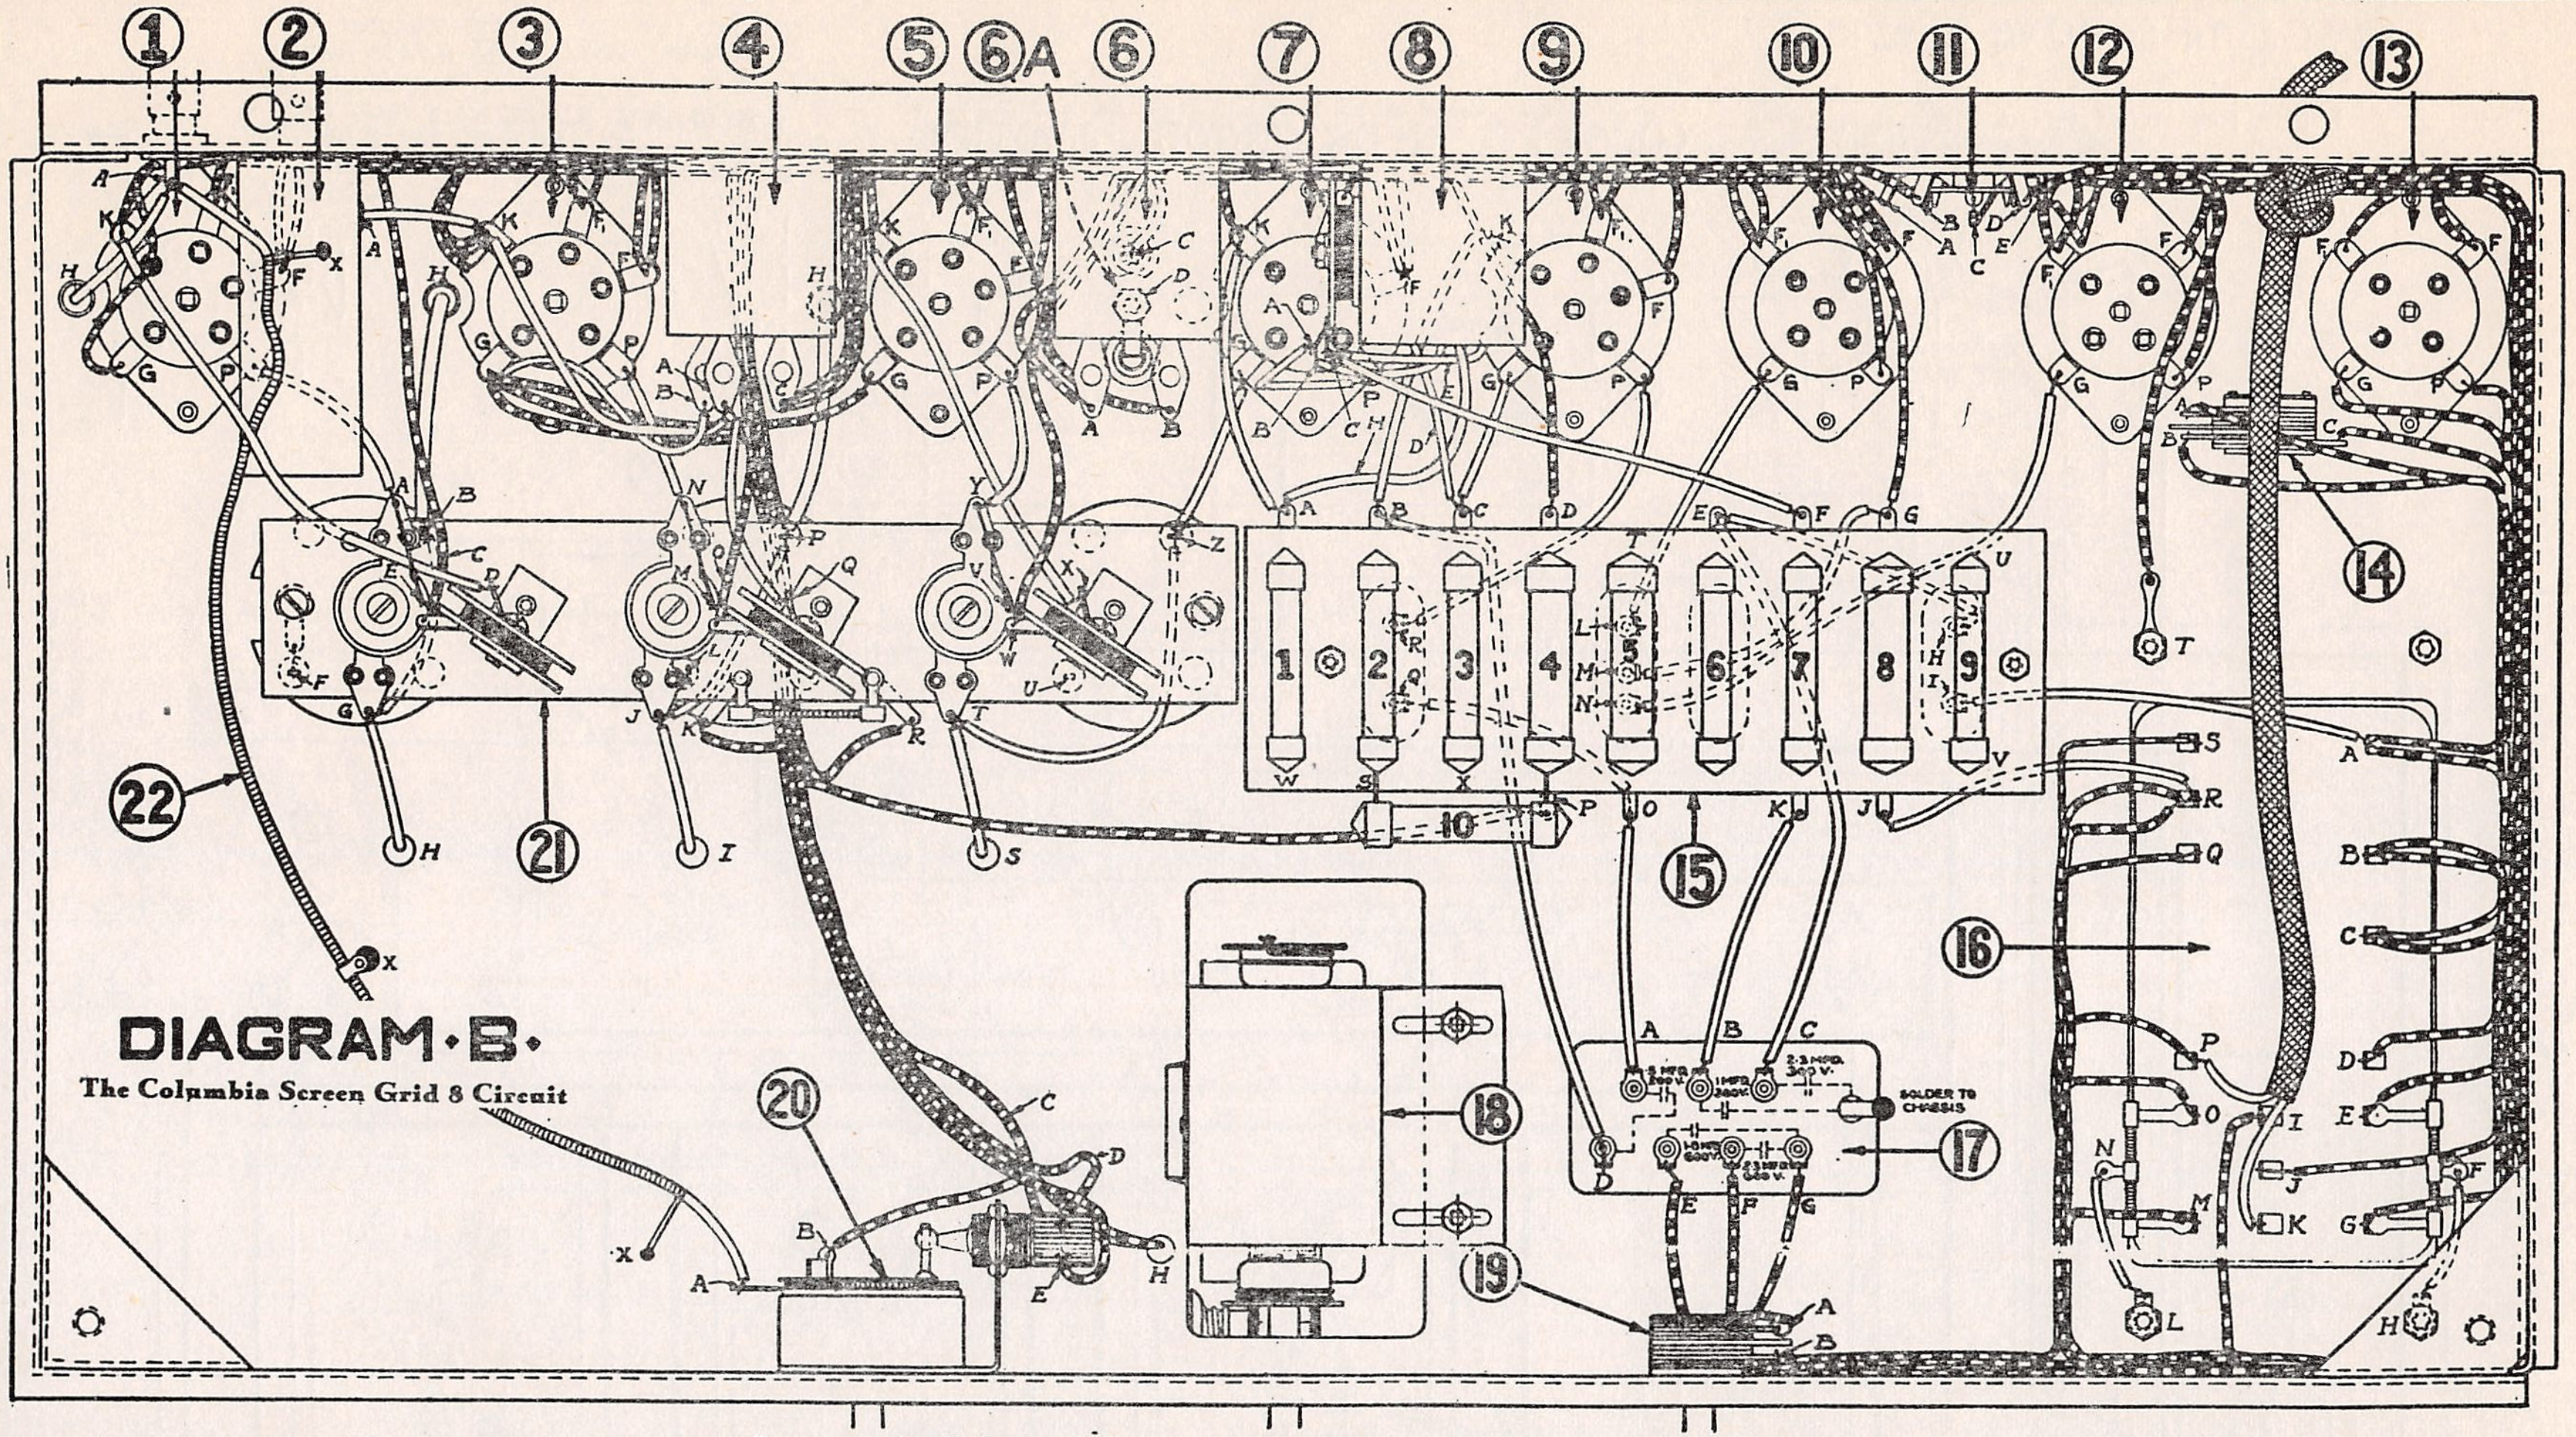
1
2
3
4
5
6A
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
SOLDER TO CHASSIS

DIAGRAM·B·
The Columbia Screen Grid 8 Circuit

Tube No. In Order (1)	Type Of Tube (2)	Position of Tube 1st. R.F. Det., Etc. (3)	Readings, Plug In Socket Of Set — Tube Out — A Volts (4)	B Volts (5)	Tube In Tester — A Volts (6)	B Volts (7)	C Volts (Control Grid) (8)	Cathode —Heater Volts (9)	Normal Plate M.A. (10)	Plate M.A. Grid Test (11)	Plate Change M.A. (12)	Screen Grid Volts (13)
1	224	1st R.F.	2.45	180	2.4	174	—1.5	1.5	4.5	6.7	2.2	80
2	224	2nd R.F.	2.45	180	2.4	174	—1.5	1.5	4.5	6.7	2.2	80
3	224	3rd R.F.	2.45	180	2.4	174	—1.5	1.5	4.5	6.7	2.2	80
4	227	Det.	2.45	106	2.4	106	—14.5	14.5	.2	....	....	
5	227	1st A.F.	2.45	162	2.4	68	—3.	3.	3.2	3.8	.6	
6	245	2nd.A.F.	2.35	230	2.2	212	—3.8	..	20	23	3.	
7	245	2nd A.F.	2.35	230	2.2	212	—3.8	.	19	22	3..	

Line Voltage 115. Set on Low (1) Volt Tap. Volume Control Position Maximum.

KNIGHT MODEL SG-8 BOTTOM VIEW

MODEL KNIGHT SG-8
1930

ALLIED RADIO CORP.

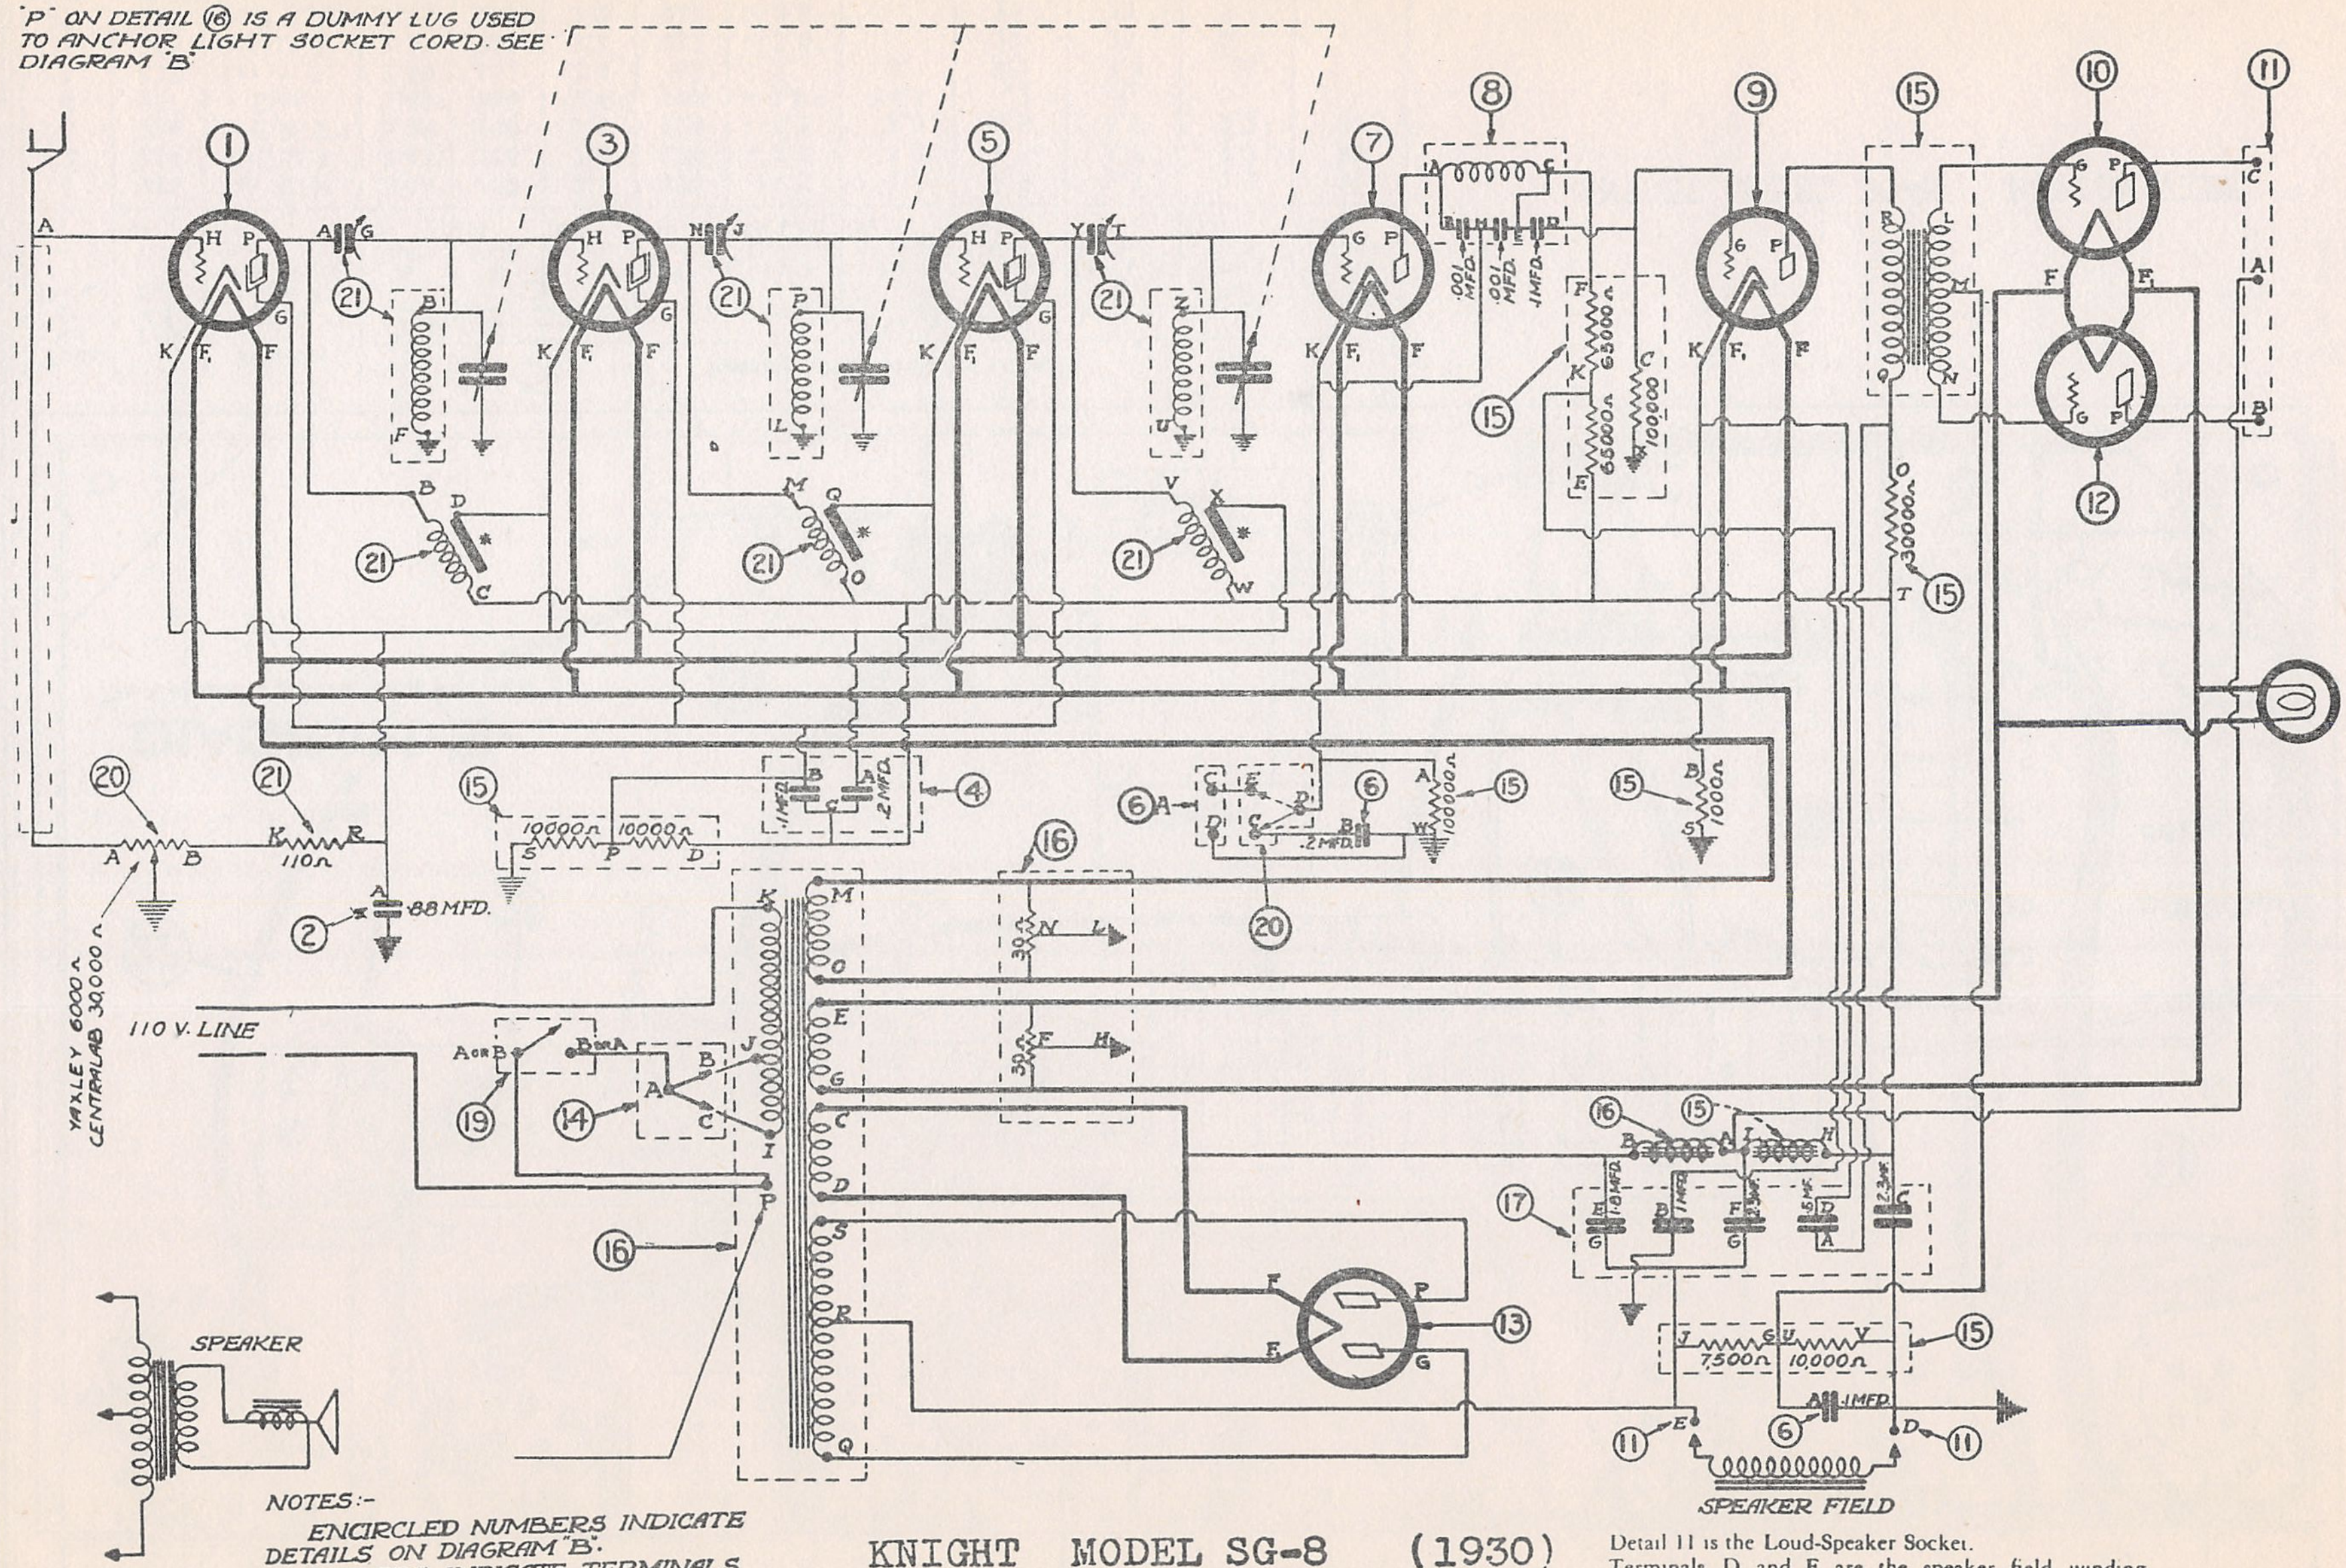

"P" ON DETAIL ⑯ IS A DUMMY LUG USED TO ANCHOR LIGHT SOCKET CORD. SEE DIAGRAM "B"

①
③
⑤
⑦
⑧
⑨
⑩
⑪
⑫
⑬
⑭
⑮
⑯
⑰
⑲
⑳
㉑
H P G K F, F
.001 MFD.
.001 MFD.
.1MFD.
65000Ω
65000Ω
100000
3000Ω
100000Ω
1000Ω
.1MFD.
.2MFD.
.2MFD.
10000Ω
10000Ω
110Ω
.88MFD.
YAXLEY 6000Ω
CENTRALAB 30,000Ω
110 V. LINE
30Ω
30Ω
A or B
B or A
1.8MFD.
1MFD.
2.3MF.
.1MF.
2.3MF.
7500Ω
10000Ω
.1MFD.
SPEAKER
SPEAKER FIELD

NOTES:-
ENCIRCLED NUMBERS INDICATE DETAILS ON DIAGRAM "B".
LETTERS INDICATE TERMINALS ON DETAILS.
* INDICATES MOUNTING BRACKETS ON DETAIL-㉑

KNIGHT MODEL SG-8 (1930)

Detail 11 is the Loud-Speaker Socket.
Terminals D and E are the speaker field winding (1000 ohms.)

VOLTAGE DATA ON NEXT PAGE

MODEL KNIGHT 118
AVC Super 1930

ALLIED RADIO CORP.

PEAK FREQUENCY = 175 K.C.

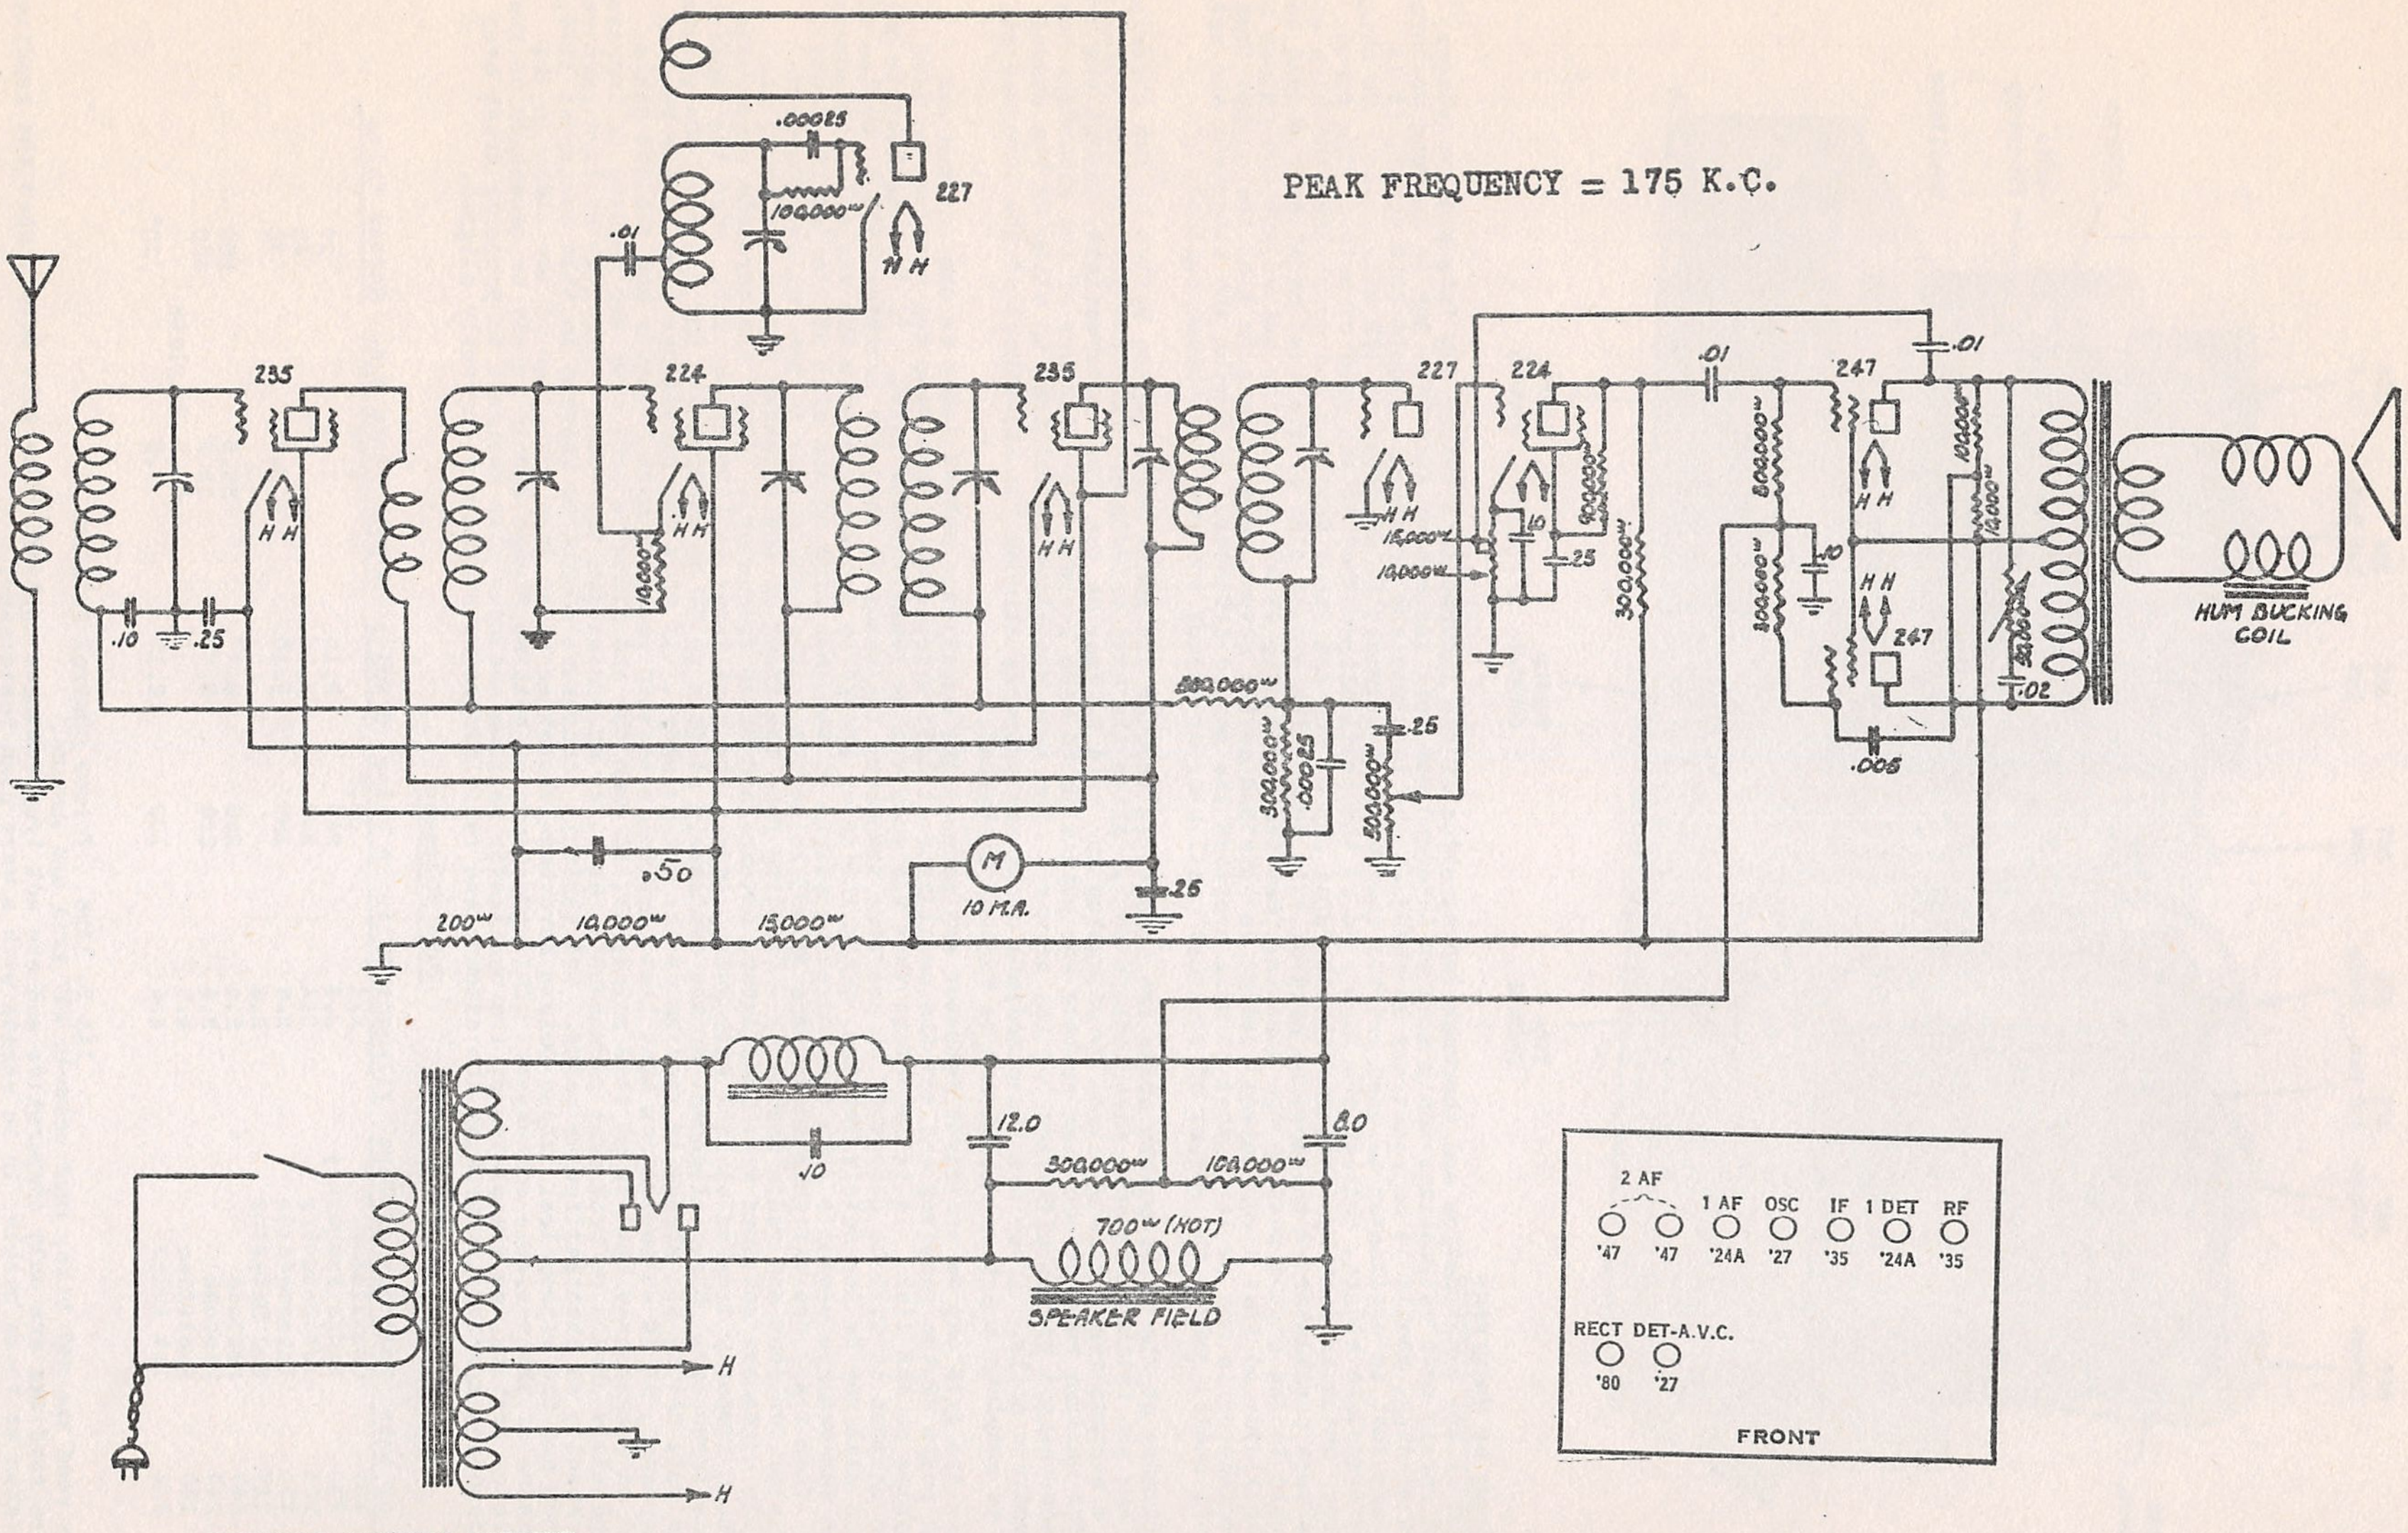
.00025
227
100,000Ω
H H
.01
235
224
235
227
224
H H
.10
.25
10,000Ω
15,000Ω
10,000Ω
300,000Ω
.10
.25
500,000Ω
500,000Ω
300,000Ω
.00025
.25
500,000Ω
.01
.01
247
247
100,000Ω
10,000Ω
300,000Ω
.10
.006
.02
HUM BUCKING COIL
.50
M
10 M.A.
.25
200Ω
10,000Ω
15,000Ω
.10
12.0
8.0
300,000Ω
100,000Ω
700Ω (HOT)
SPEAKER FIELD
H
H
2 AF
'47
'47
1 AF
'24A
OSC
'27
IF
'35
1 DET
'24A
RF
'35
RECT
'80
DET-A.V.C.
'27
FRONT

ELECTRO DYNAMIC SPEAKER:
The electro dynamic speaker field winding, which is 700 ohms, is utilized as an additional choke in the filter circuit. The correct bias for the two 247 output tubes is obtained from the voltage drop across the speaker field shunt resistors.

ALLIED RADIO CORP.

MODEL KNIGHT 118
Service Notes

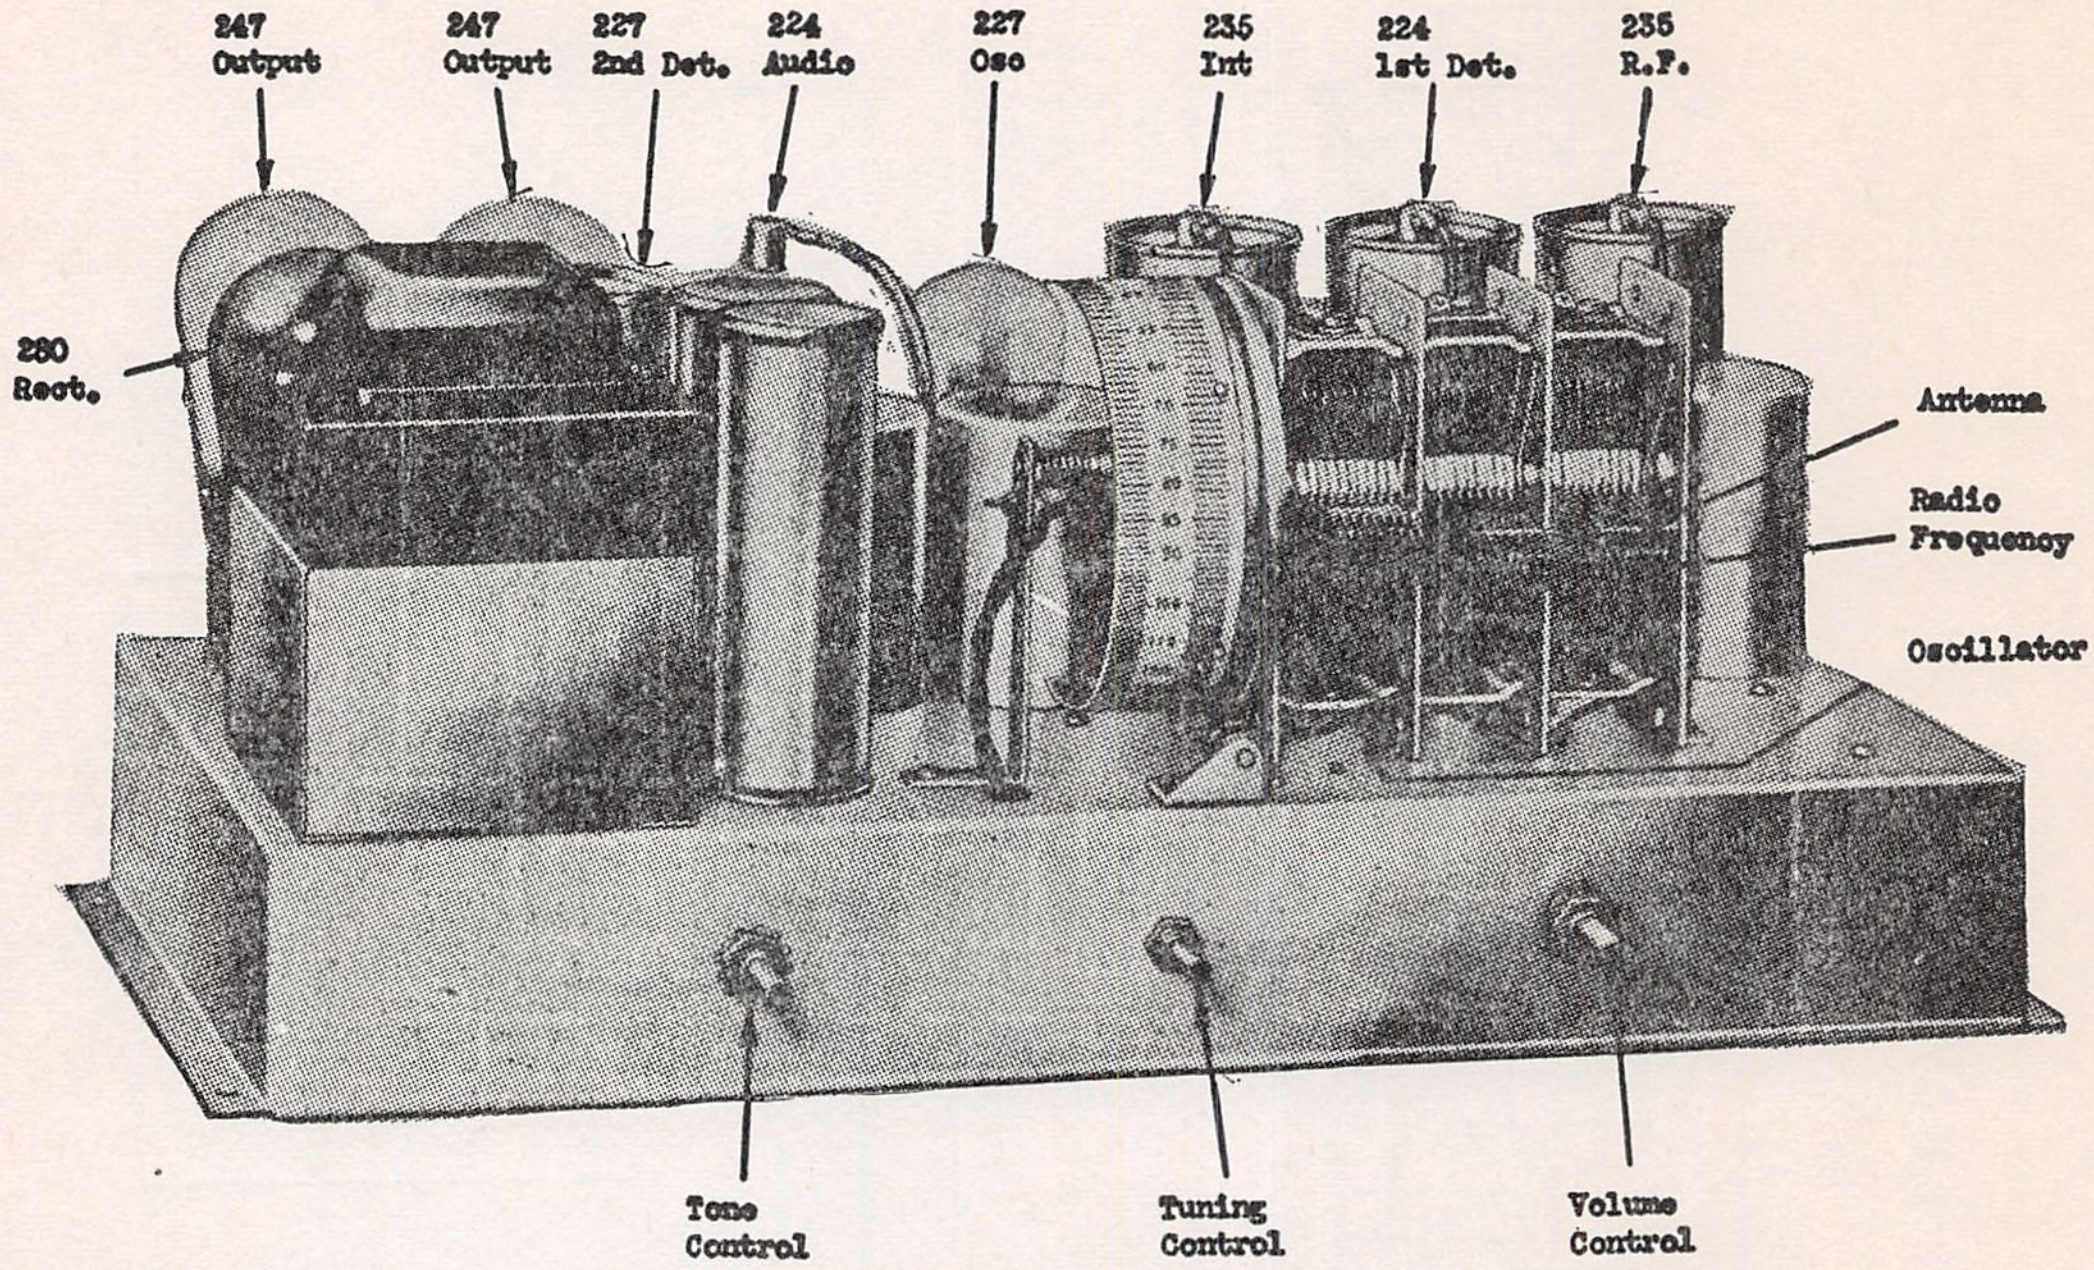

ALIGNMENT OF RECEIVER:
Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need retracking. Only when an intermediate coil has become defective due to an open or burned out winding, should it be necessary to readjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the bottom of the chassis. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then recheck the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocyles on the the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are: Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

Tube Voltages

Type of tube	Position of Tube	Filament Volts	B Volts	C Volts	Normal Plate M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4,35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
227	2nd Detector	2.4				
247	Pentode	2.4	220	8.**	32.5	250
247	Pentode	2.4	220	8.**	32.5	250
280	Rectifier	4.9			47.5 ea.plate	
224	1st Audio	2.4	100	2.1*	.5	35*

115 V. line Volume Control Full On

**To read the 247 bias, read between 247 grid and ground.

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

MODEL KNIGHT 7 Tube
Superhet '32

ALLIED RADIO CORP.

PEAK FREQUENCY = 175 K.C.

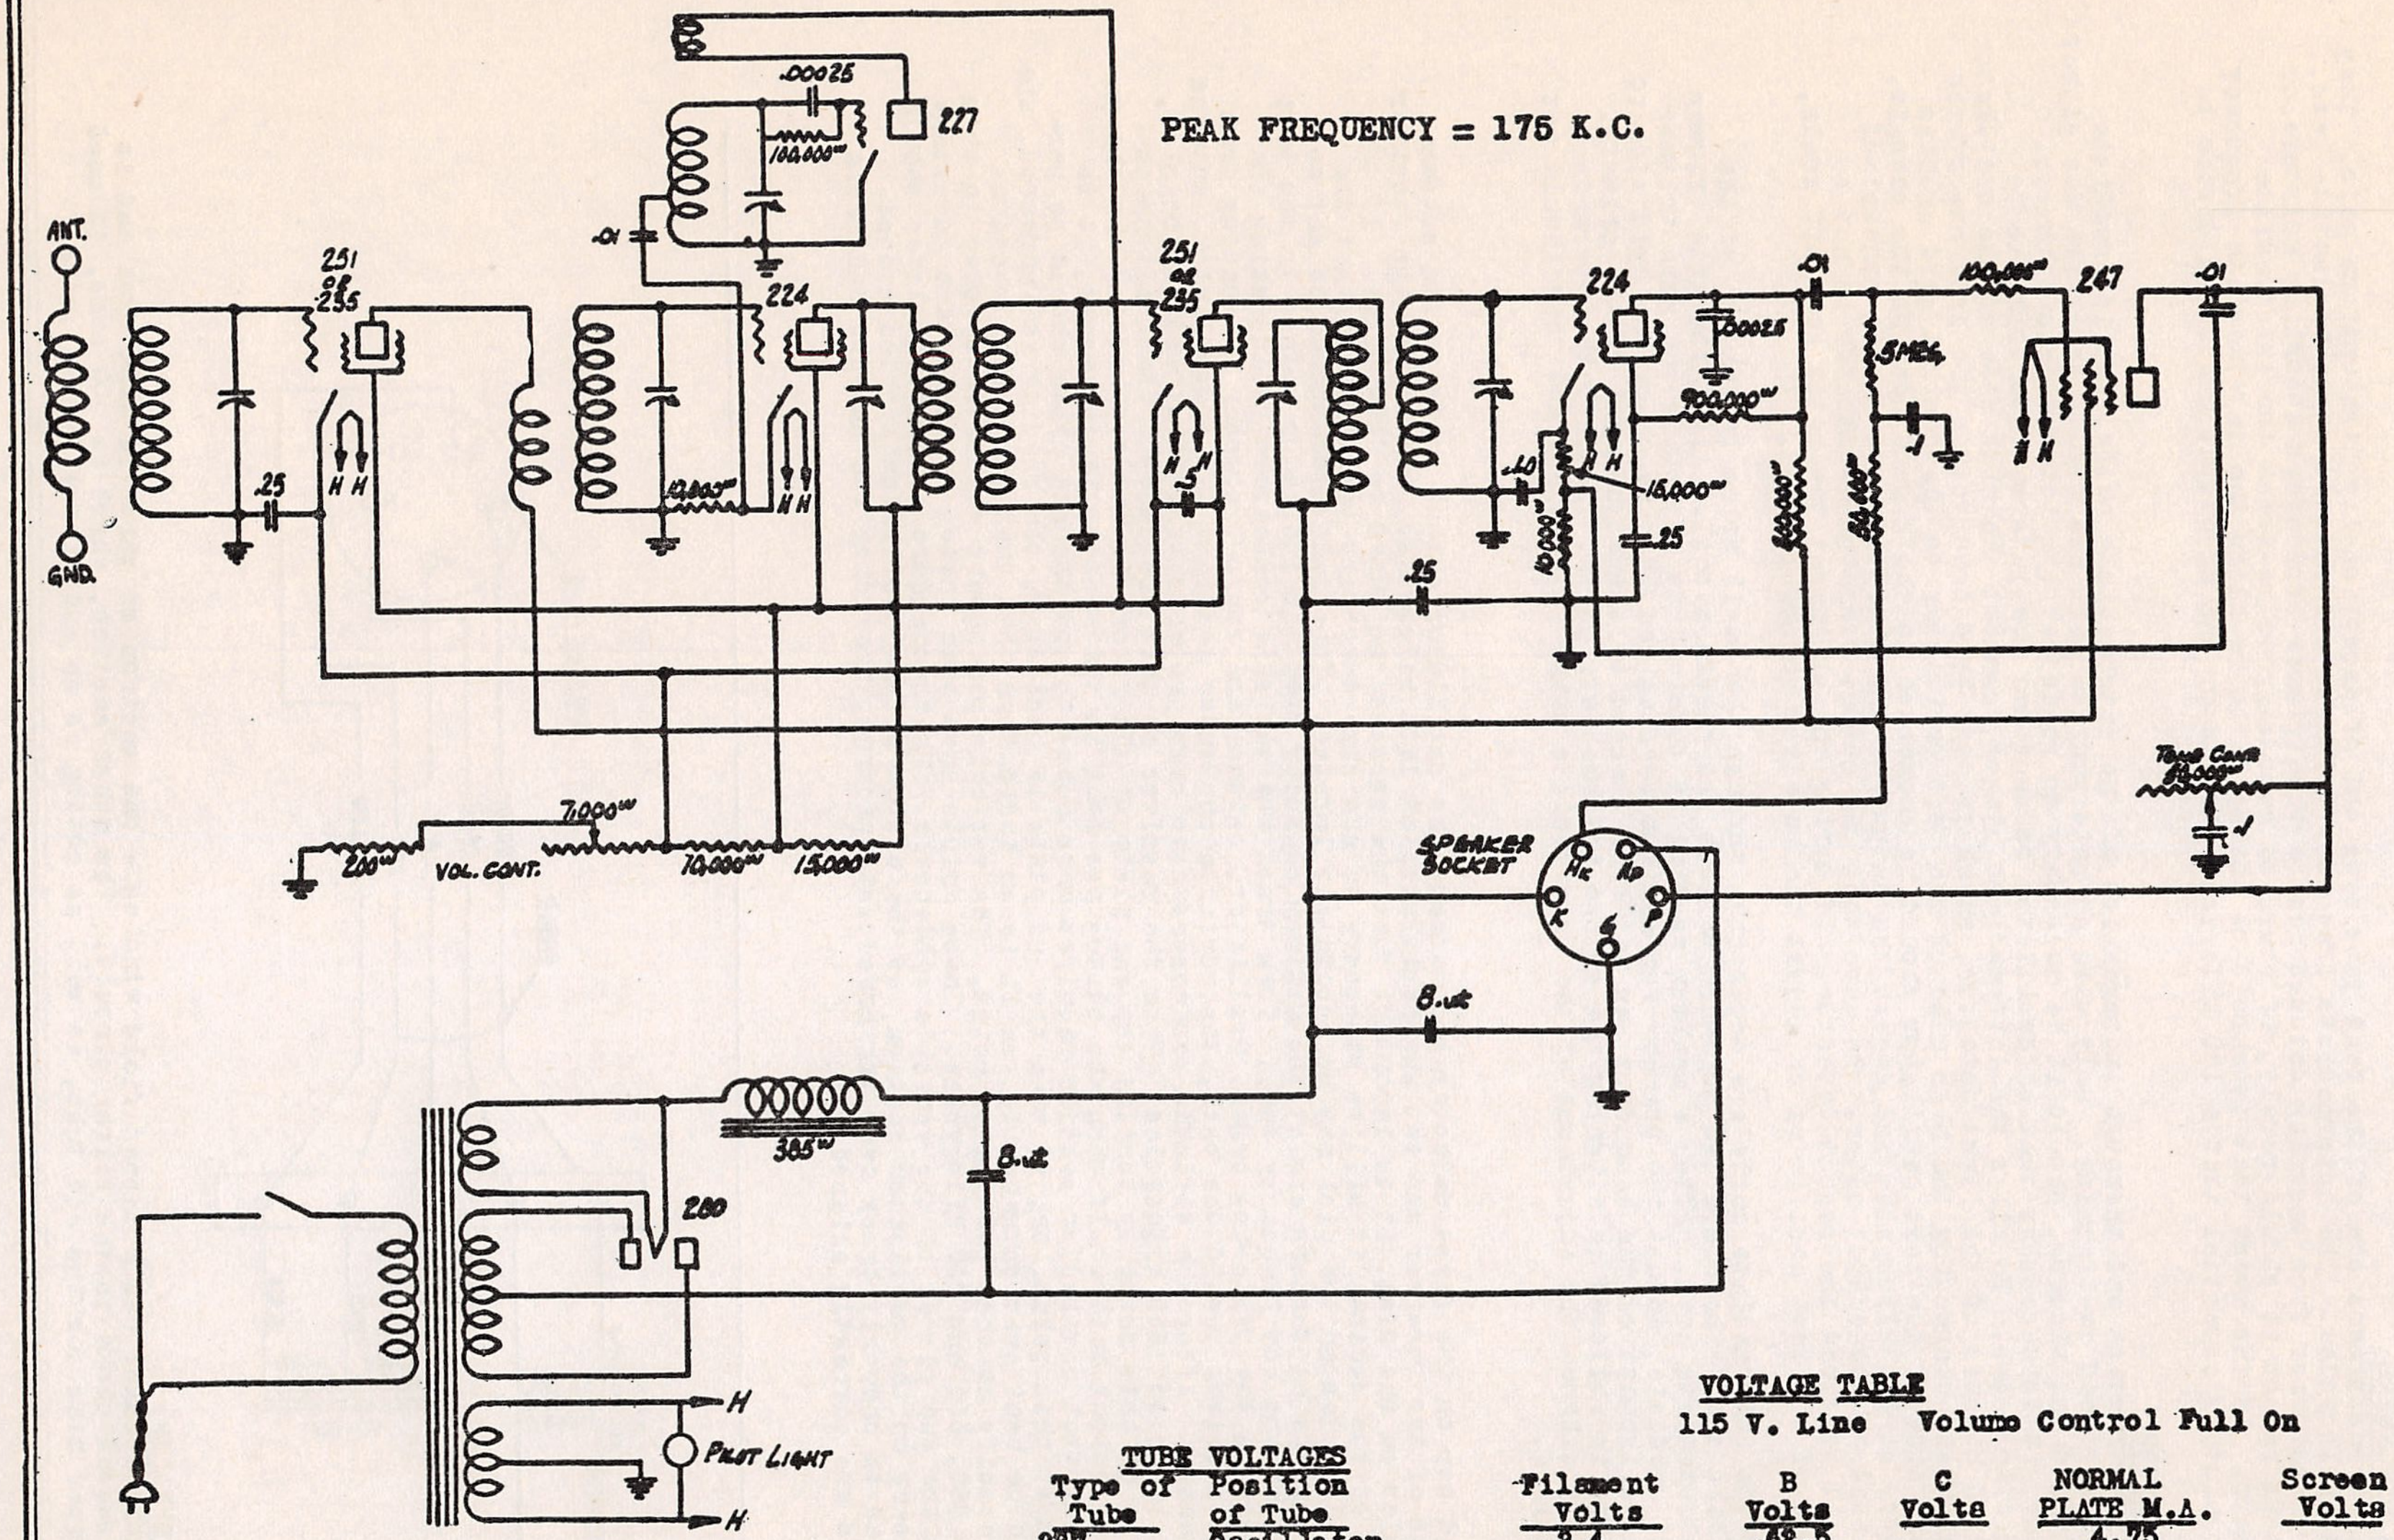
ANT.
GND.
251 or 235
227
.00025
100,000 Ω
.01
224
.25
10,000 Ω
7,000 Ω
200 Ω
VOL. CONT.
15,000 Ω
H H
.10
15,000 Ω
900,000 Ω
5 MEG.
100,000 Ω
247
TONE CONT.
.1
SPEAKER SOCKET
HK
Hp
P
G
K
8 mf
385 Ω
280
PILOT LIGHT
H

KNIGHT 7 TUBE SUPERHETERODYNE
1932 MODEL

VOLTAGE TABLE

115 V. Line   Volume Control Full On

TUBE VOLTAGES

Type of Tube	Position of Tube	Filament Volts	B Volts	C Volts	NORMAL PLATE M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
224	2nd Detector	2.4	100*	2.1*	2.5	35*
247	Pentode	2.4	250	16.5**	32.5	250
280	Rectifier	4.95			27.ea.plate	

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

** To read the 247 bias, read between H.K.speaker socket and ground.

**MODEL Knight 7 Tube
Superhet '32
Service Notes**

ALLIED RADIO CORP.

KNIGHT 7 TUBE SUPERHETERODYNE 1932 MODEL

INTERMEDIATE TRANSFORMERS:
The intermediate transformers are of the band pass type and of exceptionally high uniform gain. They are tuned to 175 kilocycles. The intermediate frequency trimmers are mounted on an isolantite base, preventing the transformer from becoming detuned due to the trimmer condensers absorbing moisture or warping. For this reason it should rarely, if ever, be necessary to re-track the intermediate frequency trimmers. In the event that it should be advisable to re-align the intermediate frequency coils, it is absolutely essential that a 175 kilocycle oscillator and an output measuring device be used.

ALIGNMENT OF RECEIVER:
Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need re-tracking. Only when an intermediate coil has become defective due either to an open or burned out winding, should it be necessary to re-adjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the top of the intermediate shield can. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then re-check the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are : Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away, the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

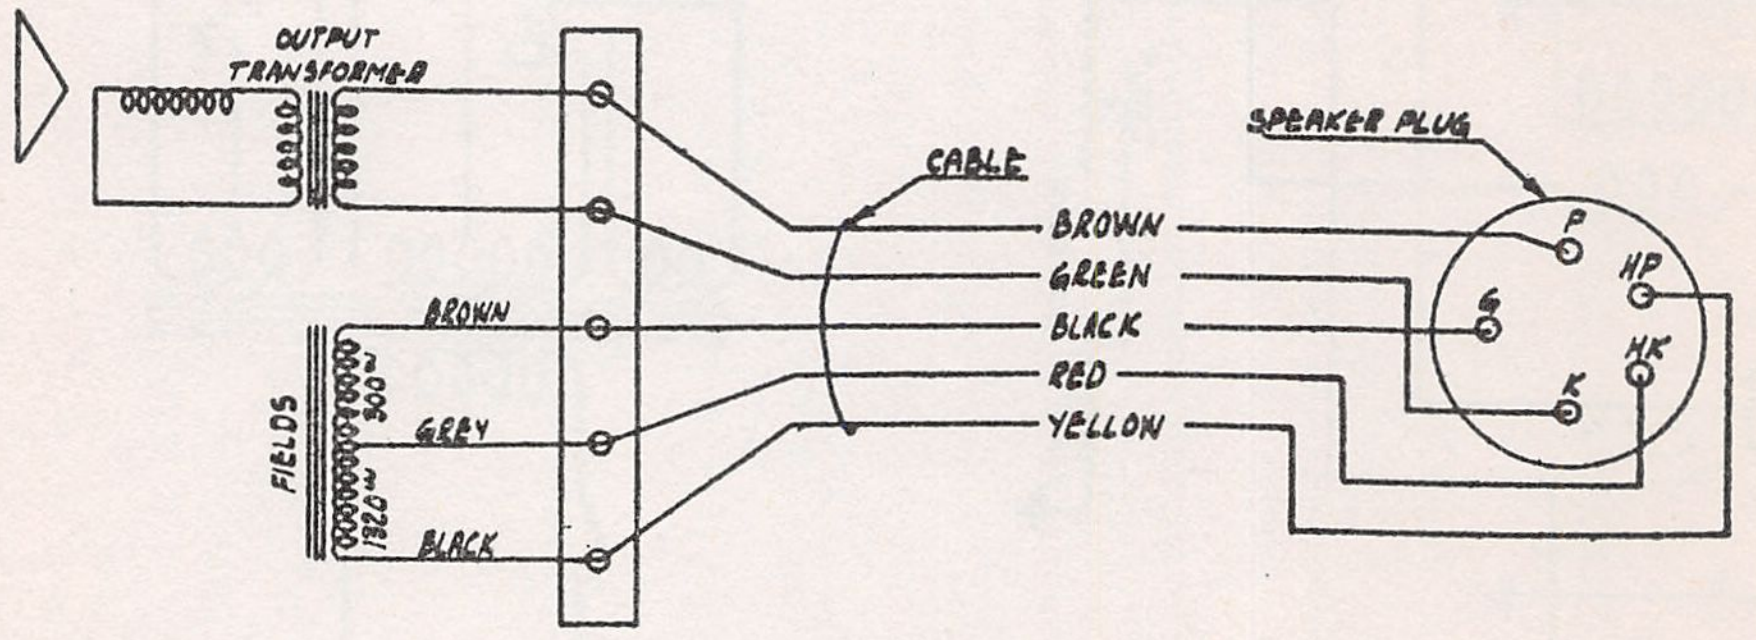

ELECTRO DYNAMIC SPEAKER:
The electro dynamic speaker has a tapped field winding - one section of which is 1320 ohms and is utilized as the second choke in the filter circuit. The other section, which is 300 ohms, is used to obtain the proper bias for the 247 tube, as well as acting as an additional filter choke.

MODEL DC
Electric Set

ANSLEY RADIO LABORATORIES

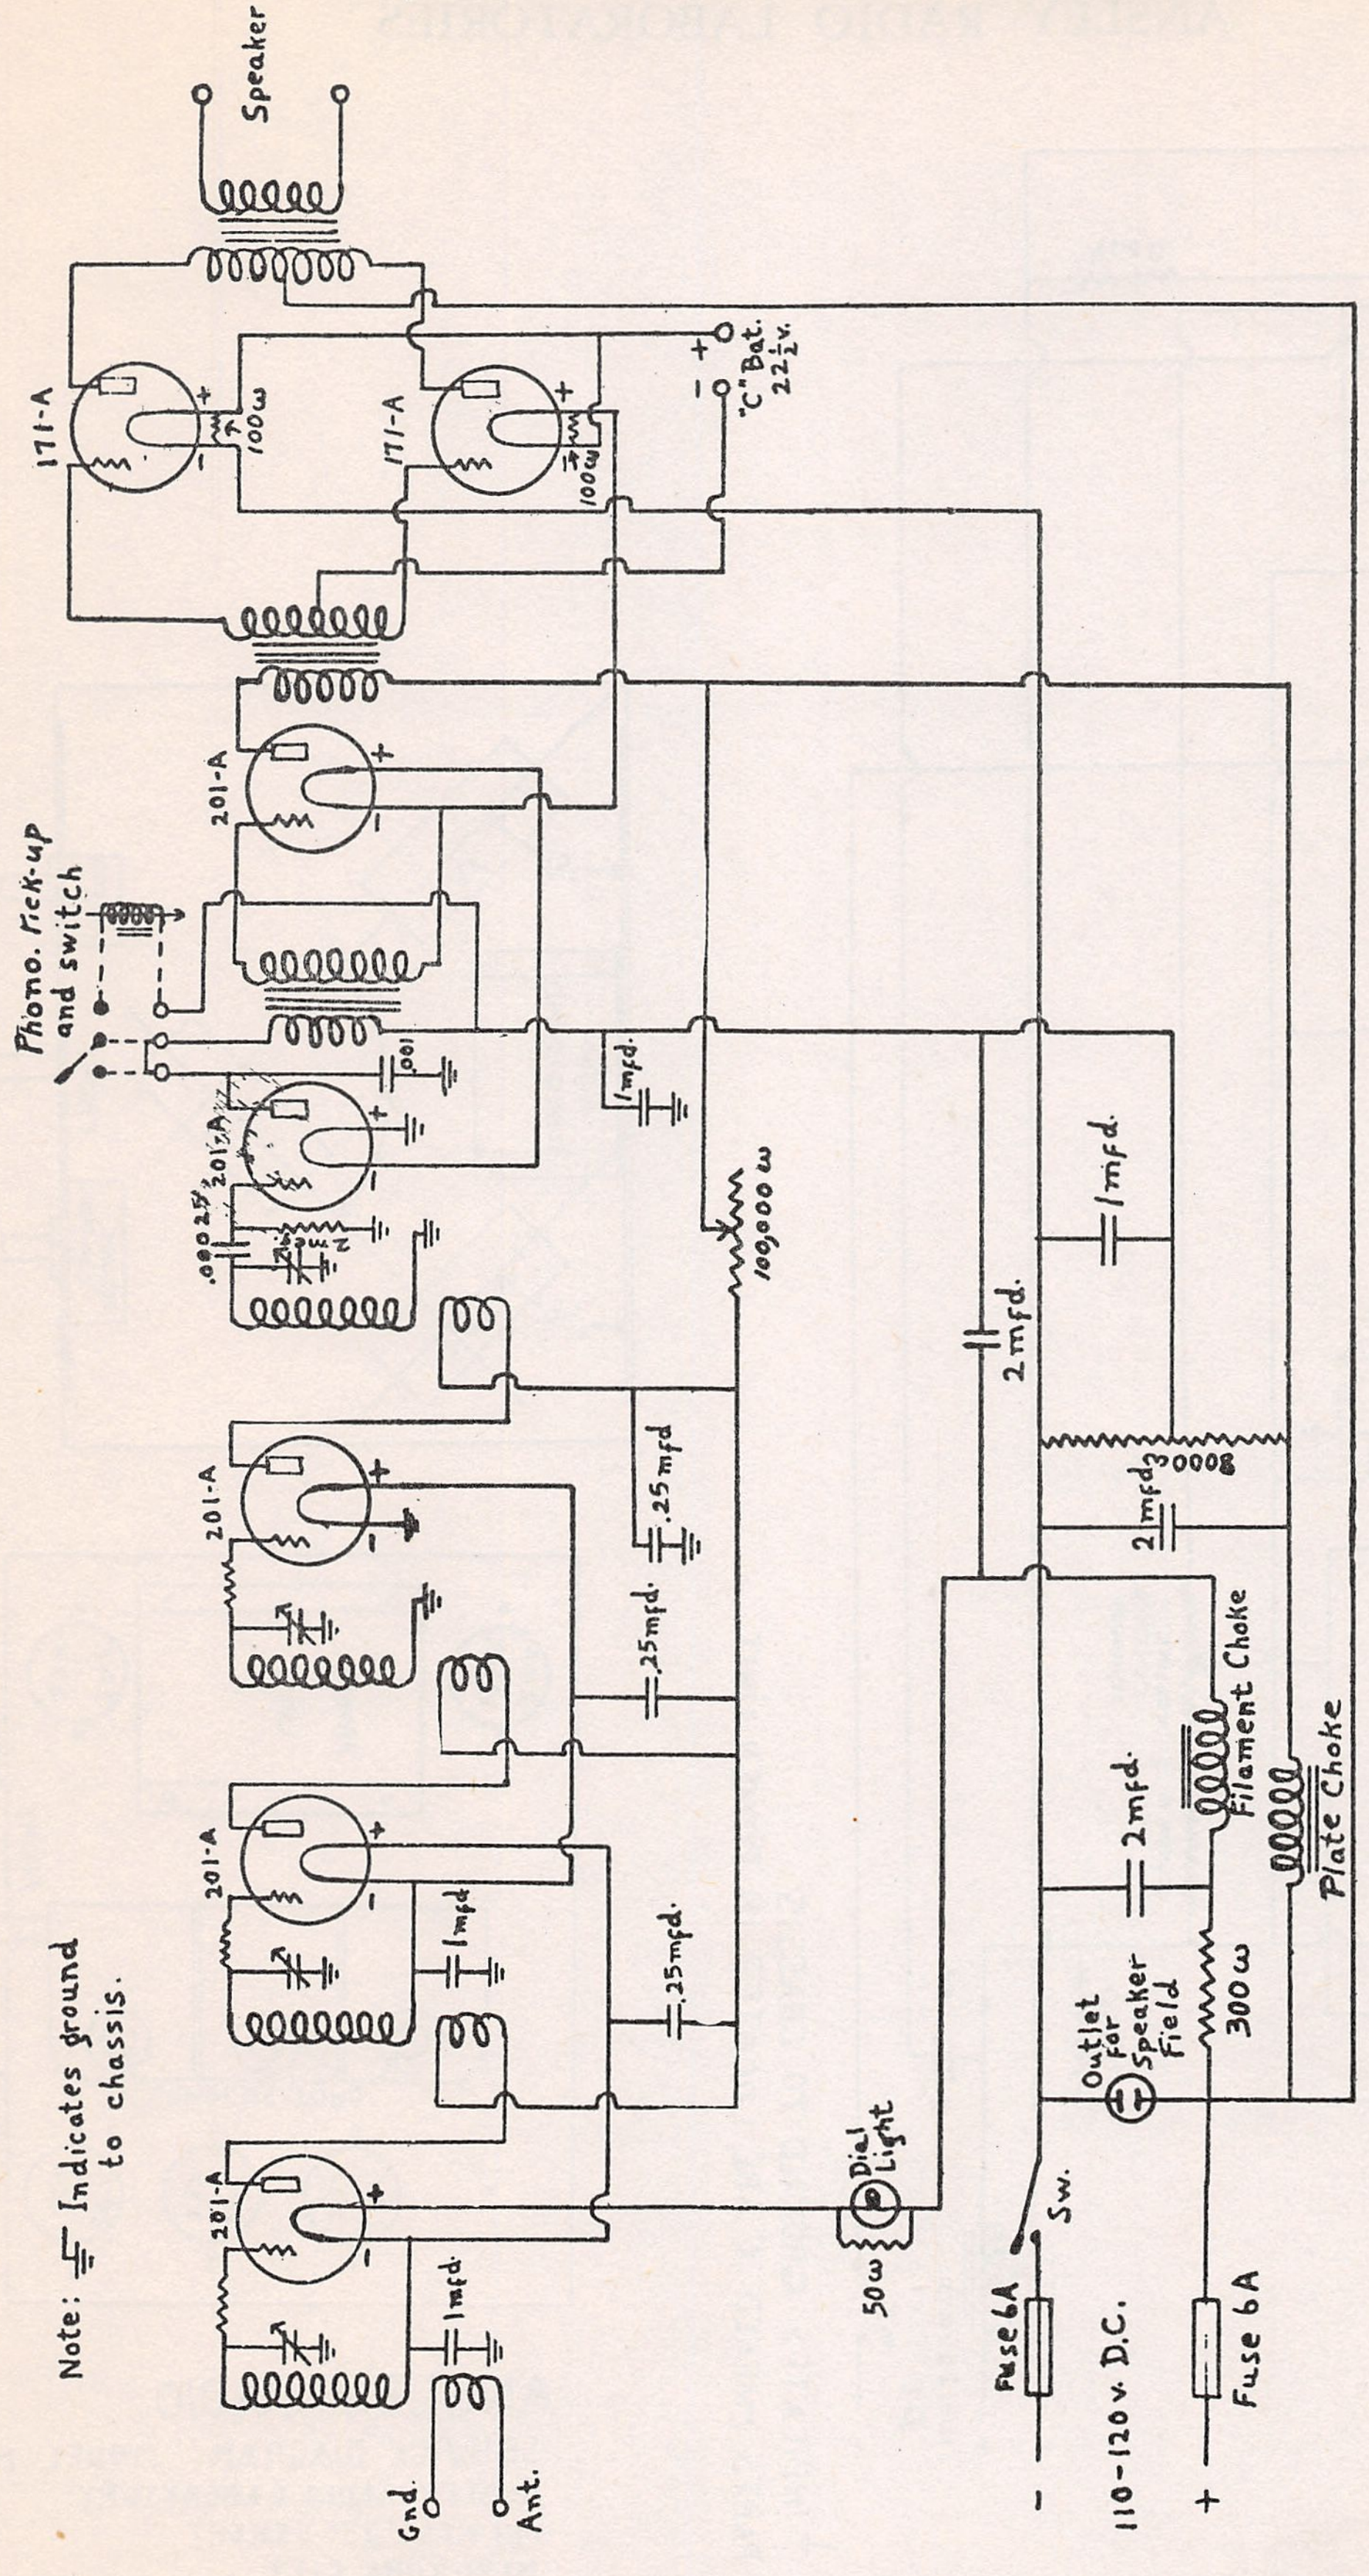
Speaker
171-A
100ω
171-A
100ω
+
−
"C" Bat. 22½ v.
201-A
Phono. Pick-up and switch
.001
1 mfd.
201-A
.00025
2 meg.
100,000 ω
1 mfd.
2 mfd.
2 mfd.
8000
.25 mfd.
201-A
.25 mfd.
201-A
1 mfd.
.25 mfd.
201-A
1 mfd.
Dial Light
50ω
Outlet for Speaker Field
300ω
Filament Choke
Plate Choke
2 mfd.
Sw.
Fuse 6A
Fuse 6A
−
110-120 v. D.C.
+
Gnd.
Ant.

Note: ⏚ Indicates ground to chassis.

Arthur C. Ansley
New York
6/23/30

ANSLEY BUILT RADIO
D.C. ELECTRIC SET

MODEL MD-1

ANSLEY RADIO LABORATORIES

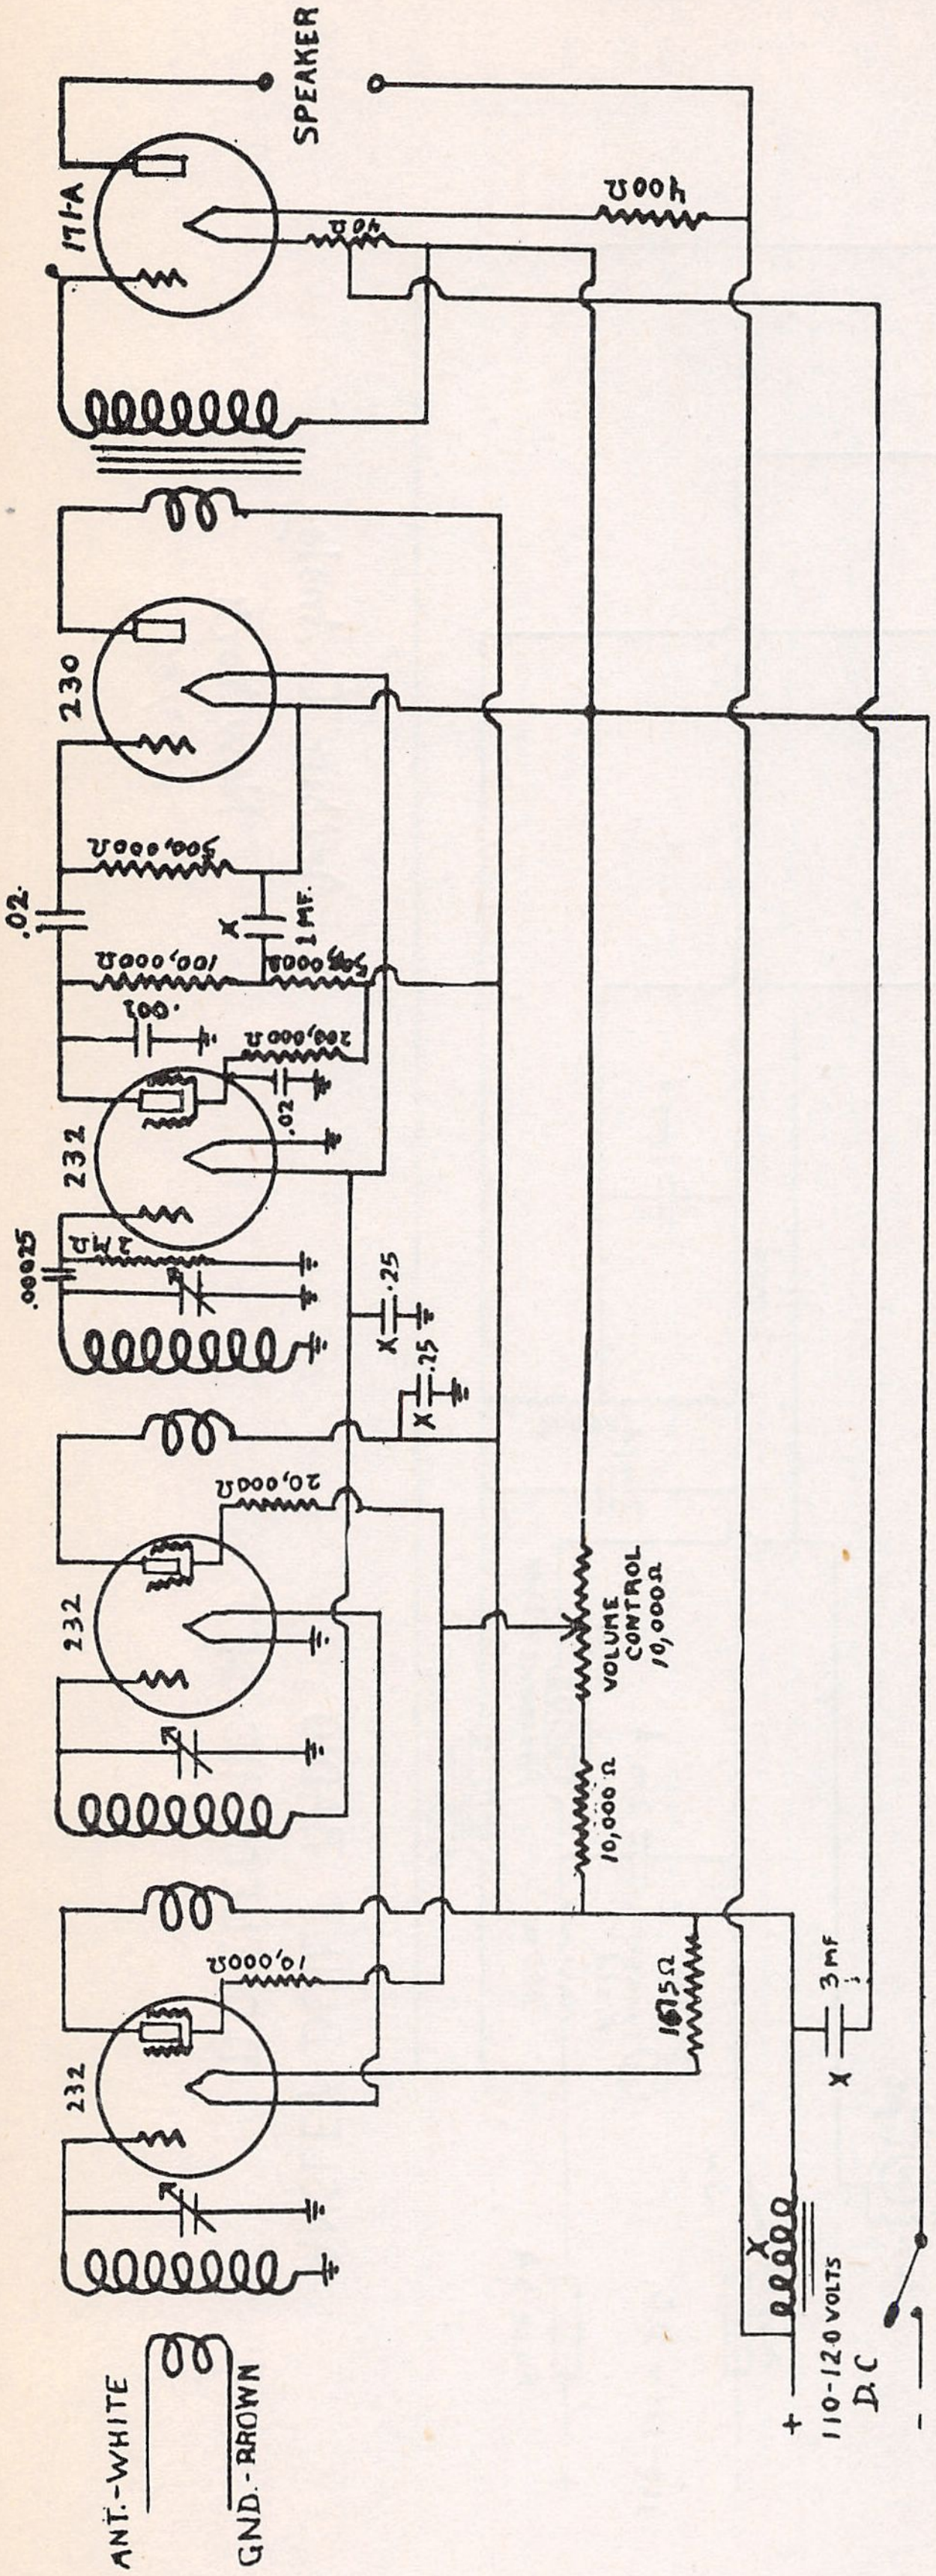
SPEAKER
171-A
400Ω
40Ω
230
500,000Ω
.02
X
1 MF.
100,000Ω
500,000Ω
.001
200,000Ω
.02
232
.00025
3 MΩ
X .25
X .25
20,000Ω
232
VOLUME CONTROL 10,000Ω
10,000 Ω
10,000Ω
161.5Ω
X 3 MF
232
ANT.-WHITE
GND.-BROWN
X
110-120 VOLTS D.C
+
-

⊥ INDICATES GROUND TO CHASSIS
PARTS MARKED "X" ARE LOCATED IN POWER UNIT

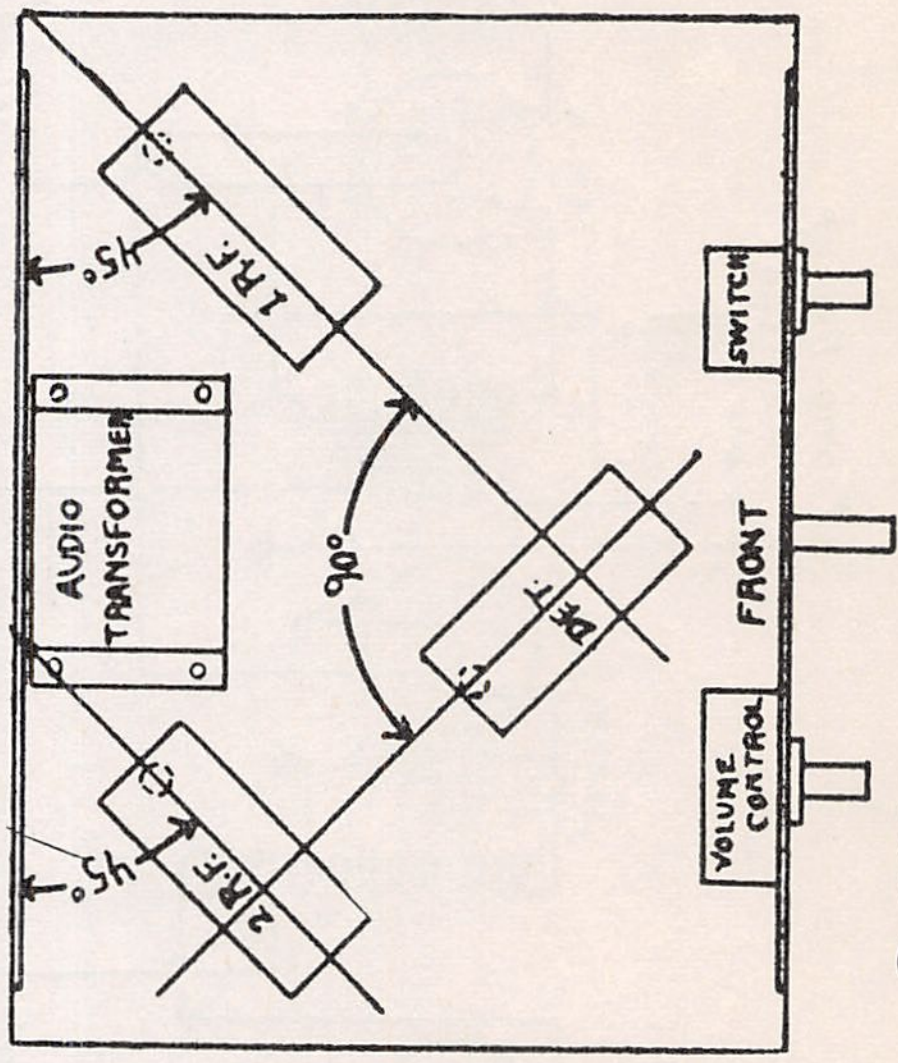
1 R.F.
45°
AUDIO TRANSFORMER
90°
DET
2 R.F.
45°
SWITCH
FRONT
VOLUME CONTROL

BOTTOM VIEW OF CHASSIS
SHOWING CORRECT POSITION OF COILS

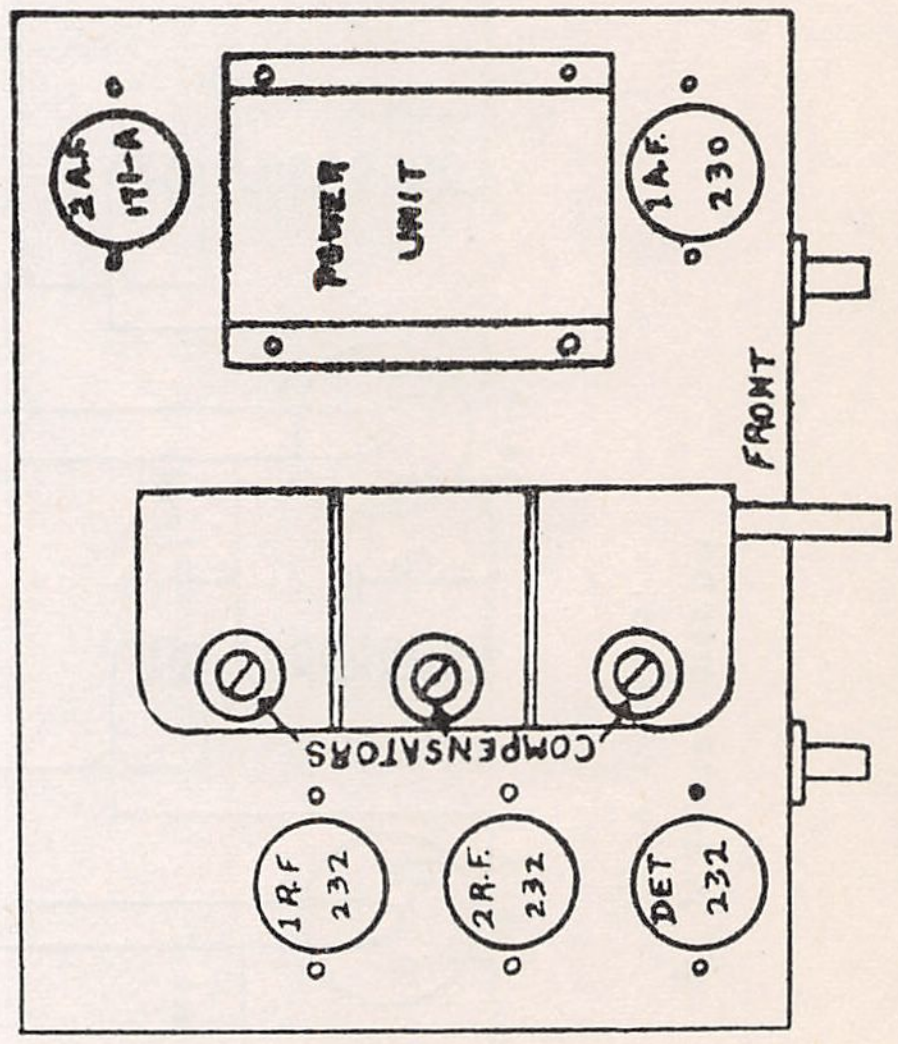
2 A.F. 171-A
POWER UNIT
1 A.F. 230
FRONT
COMPENSATORS
1 R.F. 232
2 R.F. 232
DET 232

TOP VIEW OF CHASSIS

ANSLEY RADIO
SERVICE DIAGRAM MODEL MD1
ANSLEY RADIO LABORATORY
147 WEST 23RD STREET
NEW YORK CITY

MODEL-U-1
AC / DC

ANSLEY RADIO LABORATORIES

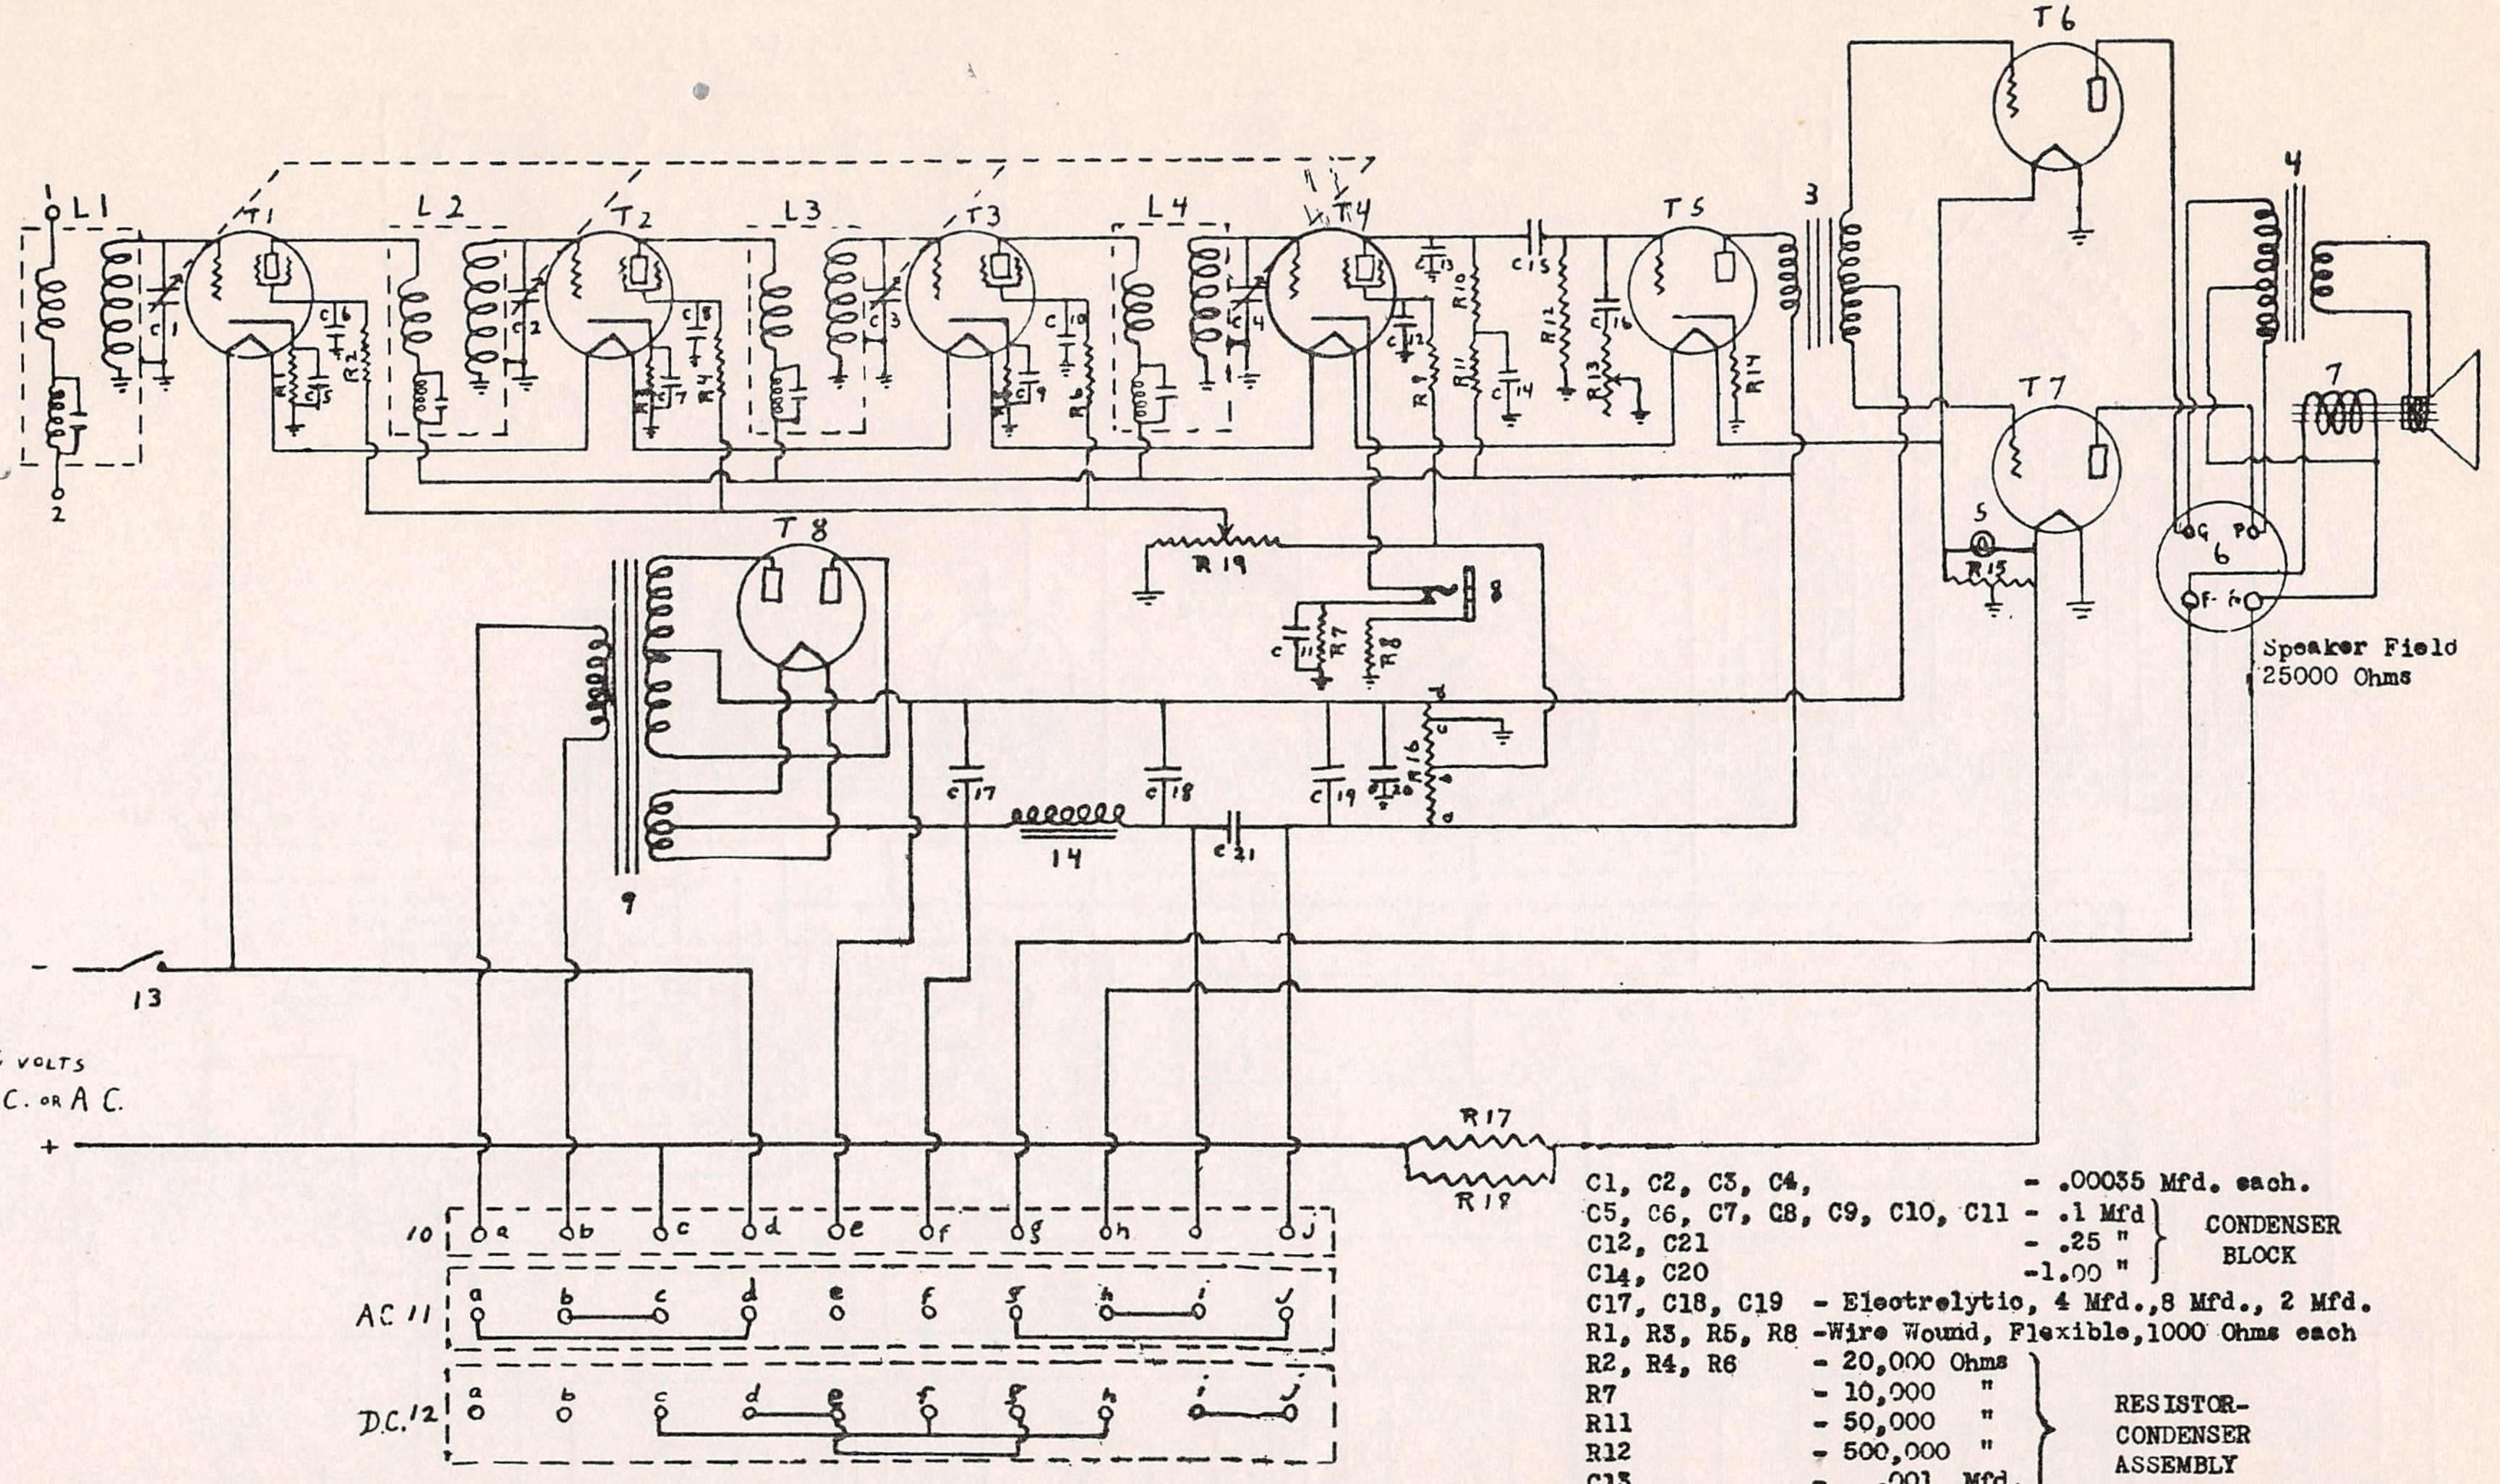
L1
L2
L3
L4
T1
T2
T3
T4
T5
T6
T7
T8
1
2
3
4
5
6
7
8
9
10
13
14
R17
R18
R19
C21
Speaker Field
25000 Ohms
110 VOLTS
DC. or A C.
-
+
AC 11
D.C. 12
a
b
c
d
e
f
g
h
i
j

C1, C2, C3, C4, - .00035 Mfd. each.
C5, C6, C7, C8, C9, C10, C11 - .1 Mfd
C12, C21 - .25 "
C14, C20 -1.00 "
CONDENSER BLOCK
C17, C18, C19 - Electrolytic, 4 Mfd., 8 Mfd., 2 Mfd.
R1, R3, R5, R8 -Wire Wound, Flexible, 1000 Ohms each
R2, R4, R6 - 20,000 Ohms
R7 - 10,000 "
R11 - 50,000 "
R12 - 500,000 "
C13 - .001 Mfd.
C15, C16 - .0006 "
RESISTOR-CONDENSER ASSEMBLY
R13 - Tone Control, 200,000 Ohms
R14 - Flexible, 1,500 "
R15 -Wire Wound, Center Tapped, 20 Ohms
R16 - Tapped, 8,000 Ohms
R17, R18 - Enameled, 110 Ohms, 200 Watt
R19 - Vol. Control 25,000 Ohms

ANSLEY UNIVERSAL RADIO

MODEL U1
ANSLEY RADIO LABORATORY
147 WEST 23rd STREET
NEW YORK CITY

T1, T2, T3, T4, - '24
T5 - '27
T6, T7, - '45
T8, - '80

MODEL U-2
AC / DC

ANSLEY RADIO LABORATORIES

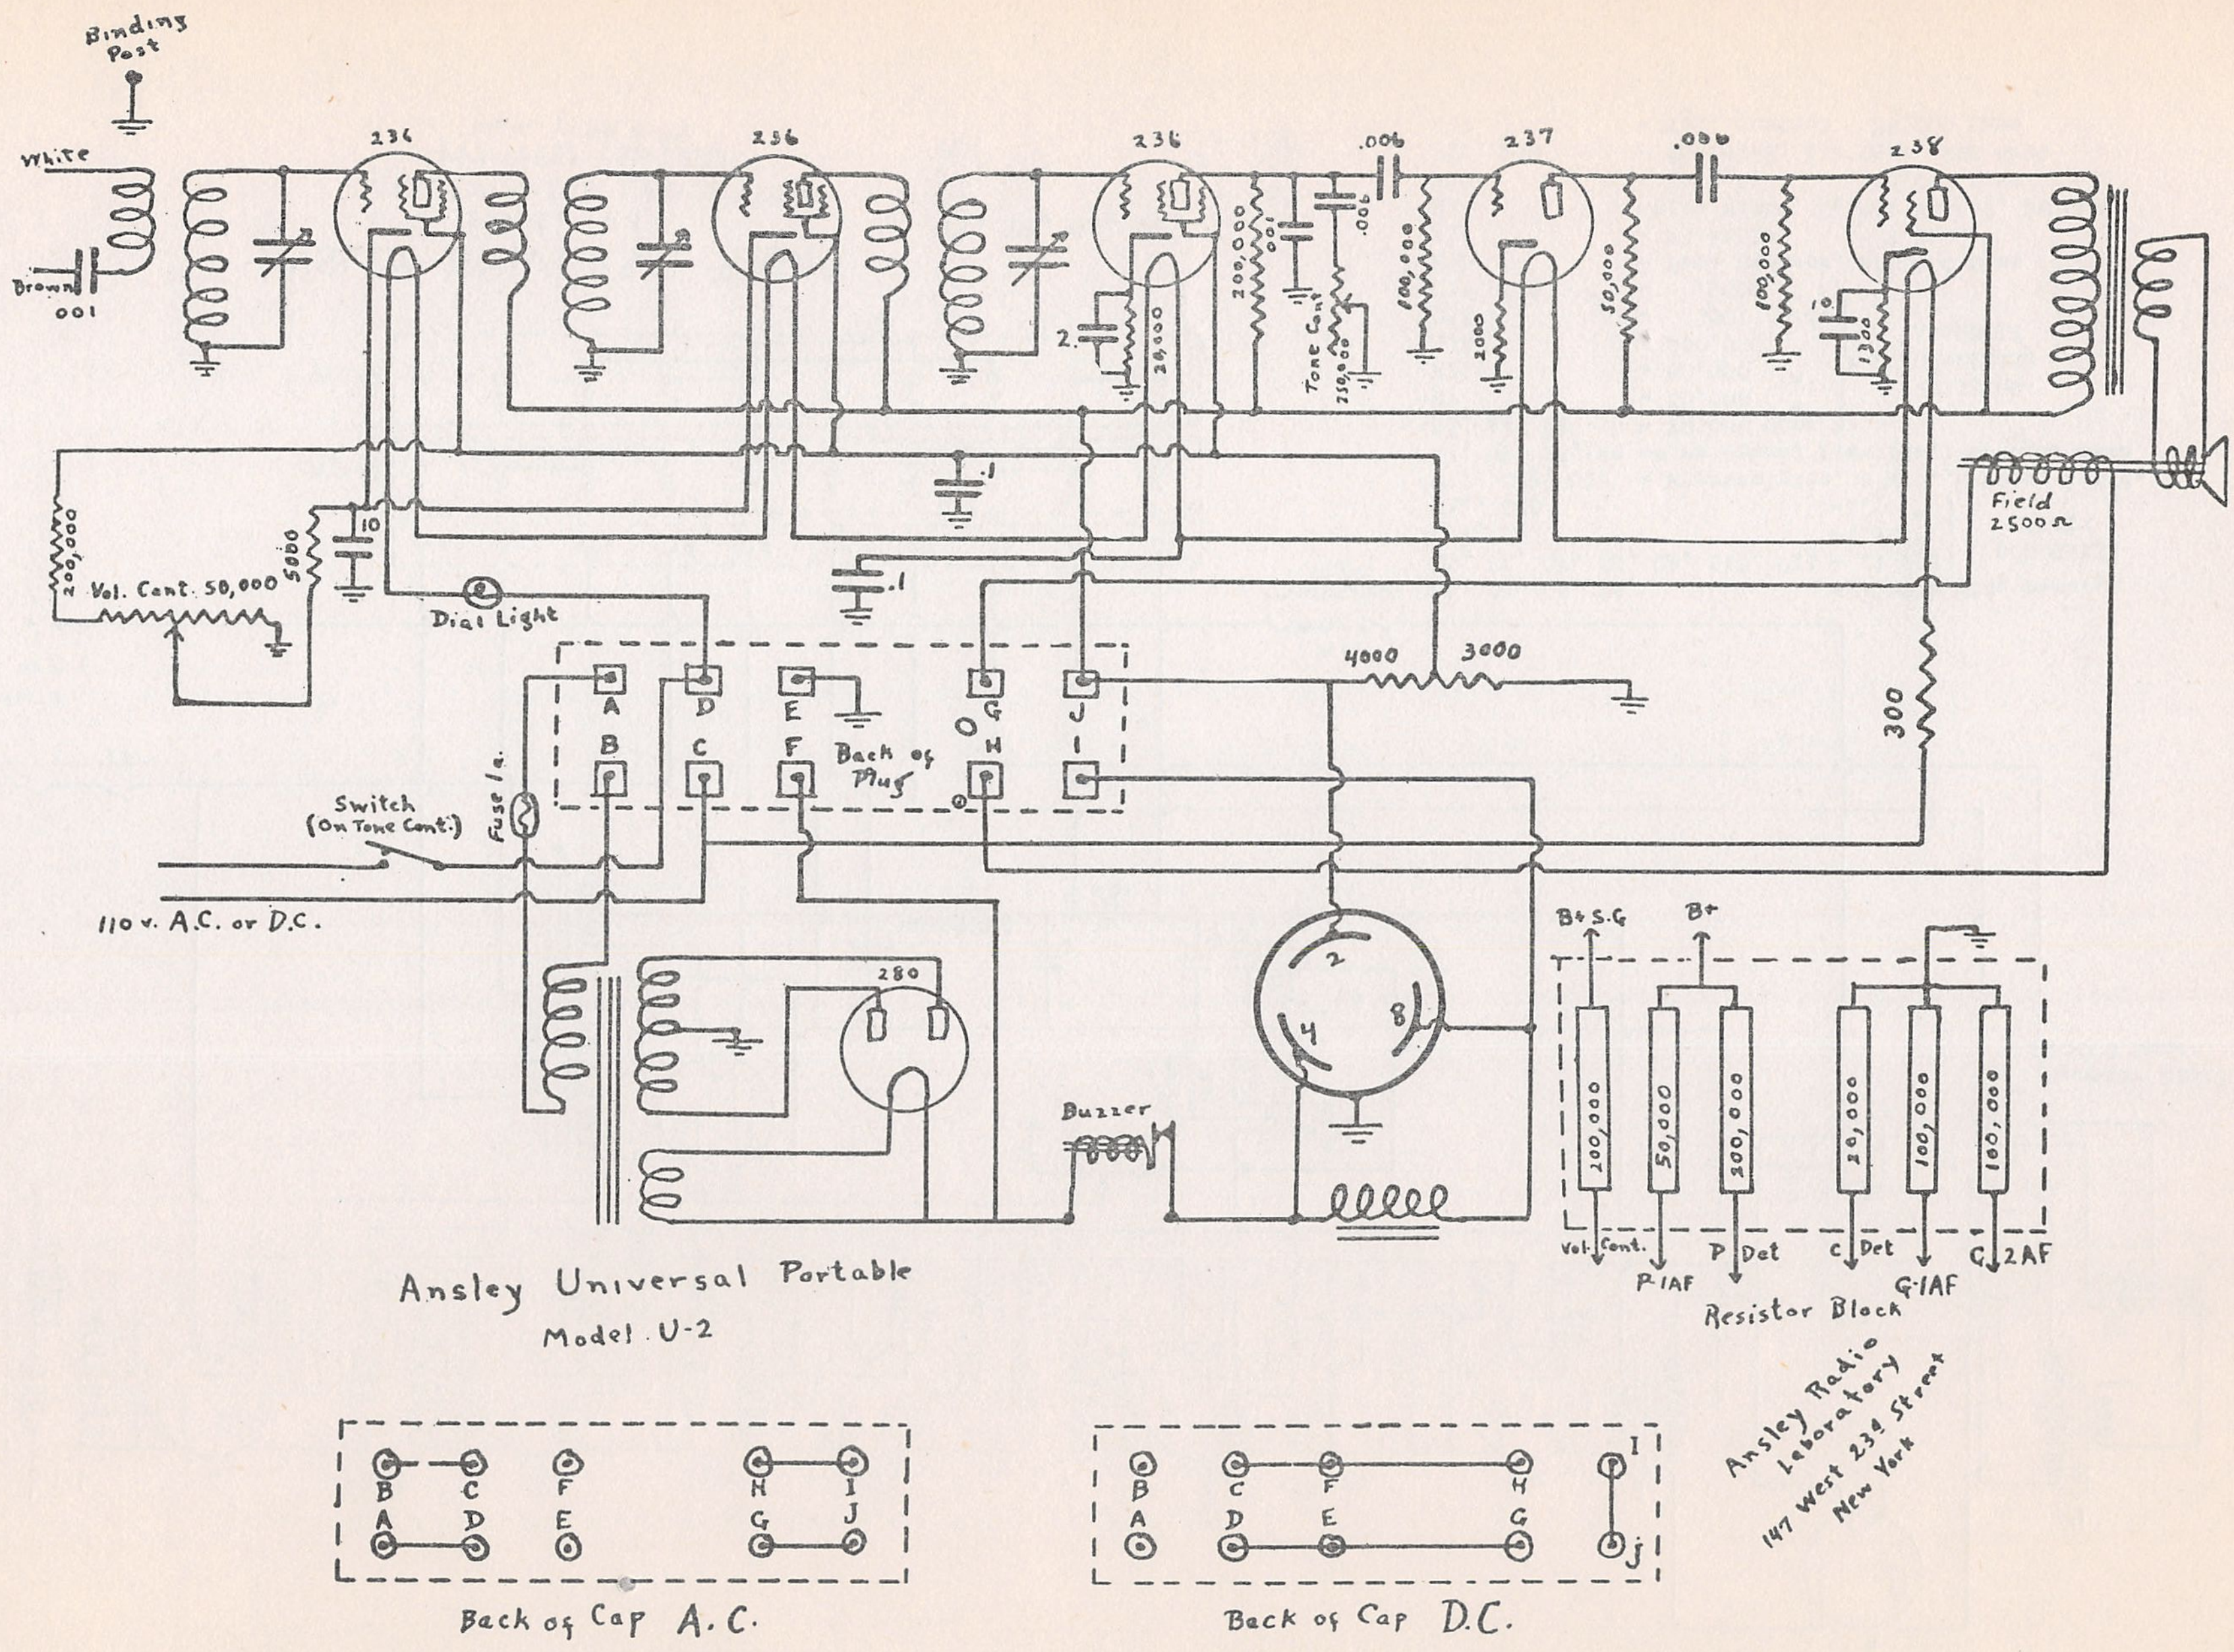
Binding Post
White
Brown
.001
236
236
236
.006
237
.006
238
2.
24,000
200,000
.001
.006
Tone Cont.
250,000
100,000
2000
50,000
100,000
10
1300
.1
.1
10
5000
200,000
Vol. Cont. 50,000
Dial Light
Field
2500 Ω
4000
3000
300
A
B
C
D
E
F
G
H
I
J
Back of Plug
Switch (On Tone Cont.)
Fuse 1a.
110 v. A.C. or D.C.
280
2
4
8
Buzzer
B+ S.G
B+
200,000
50,000
200,000
20,000
100,000
100,000
Vol. Cont.
P 1AF
P Det
C Det
G 1AF
G 2AF
Resistor Block

Ansley Universal Portable
Model U-2

Back of Cap A.C.

Back of Cap D.C.

Ansley Radio
Laboratory
147 West 23rd Street
New York

APPEL-HENDERSON

MODEL Silver King DC Combination

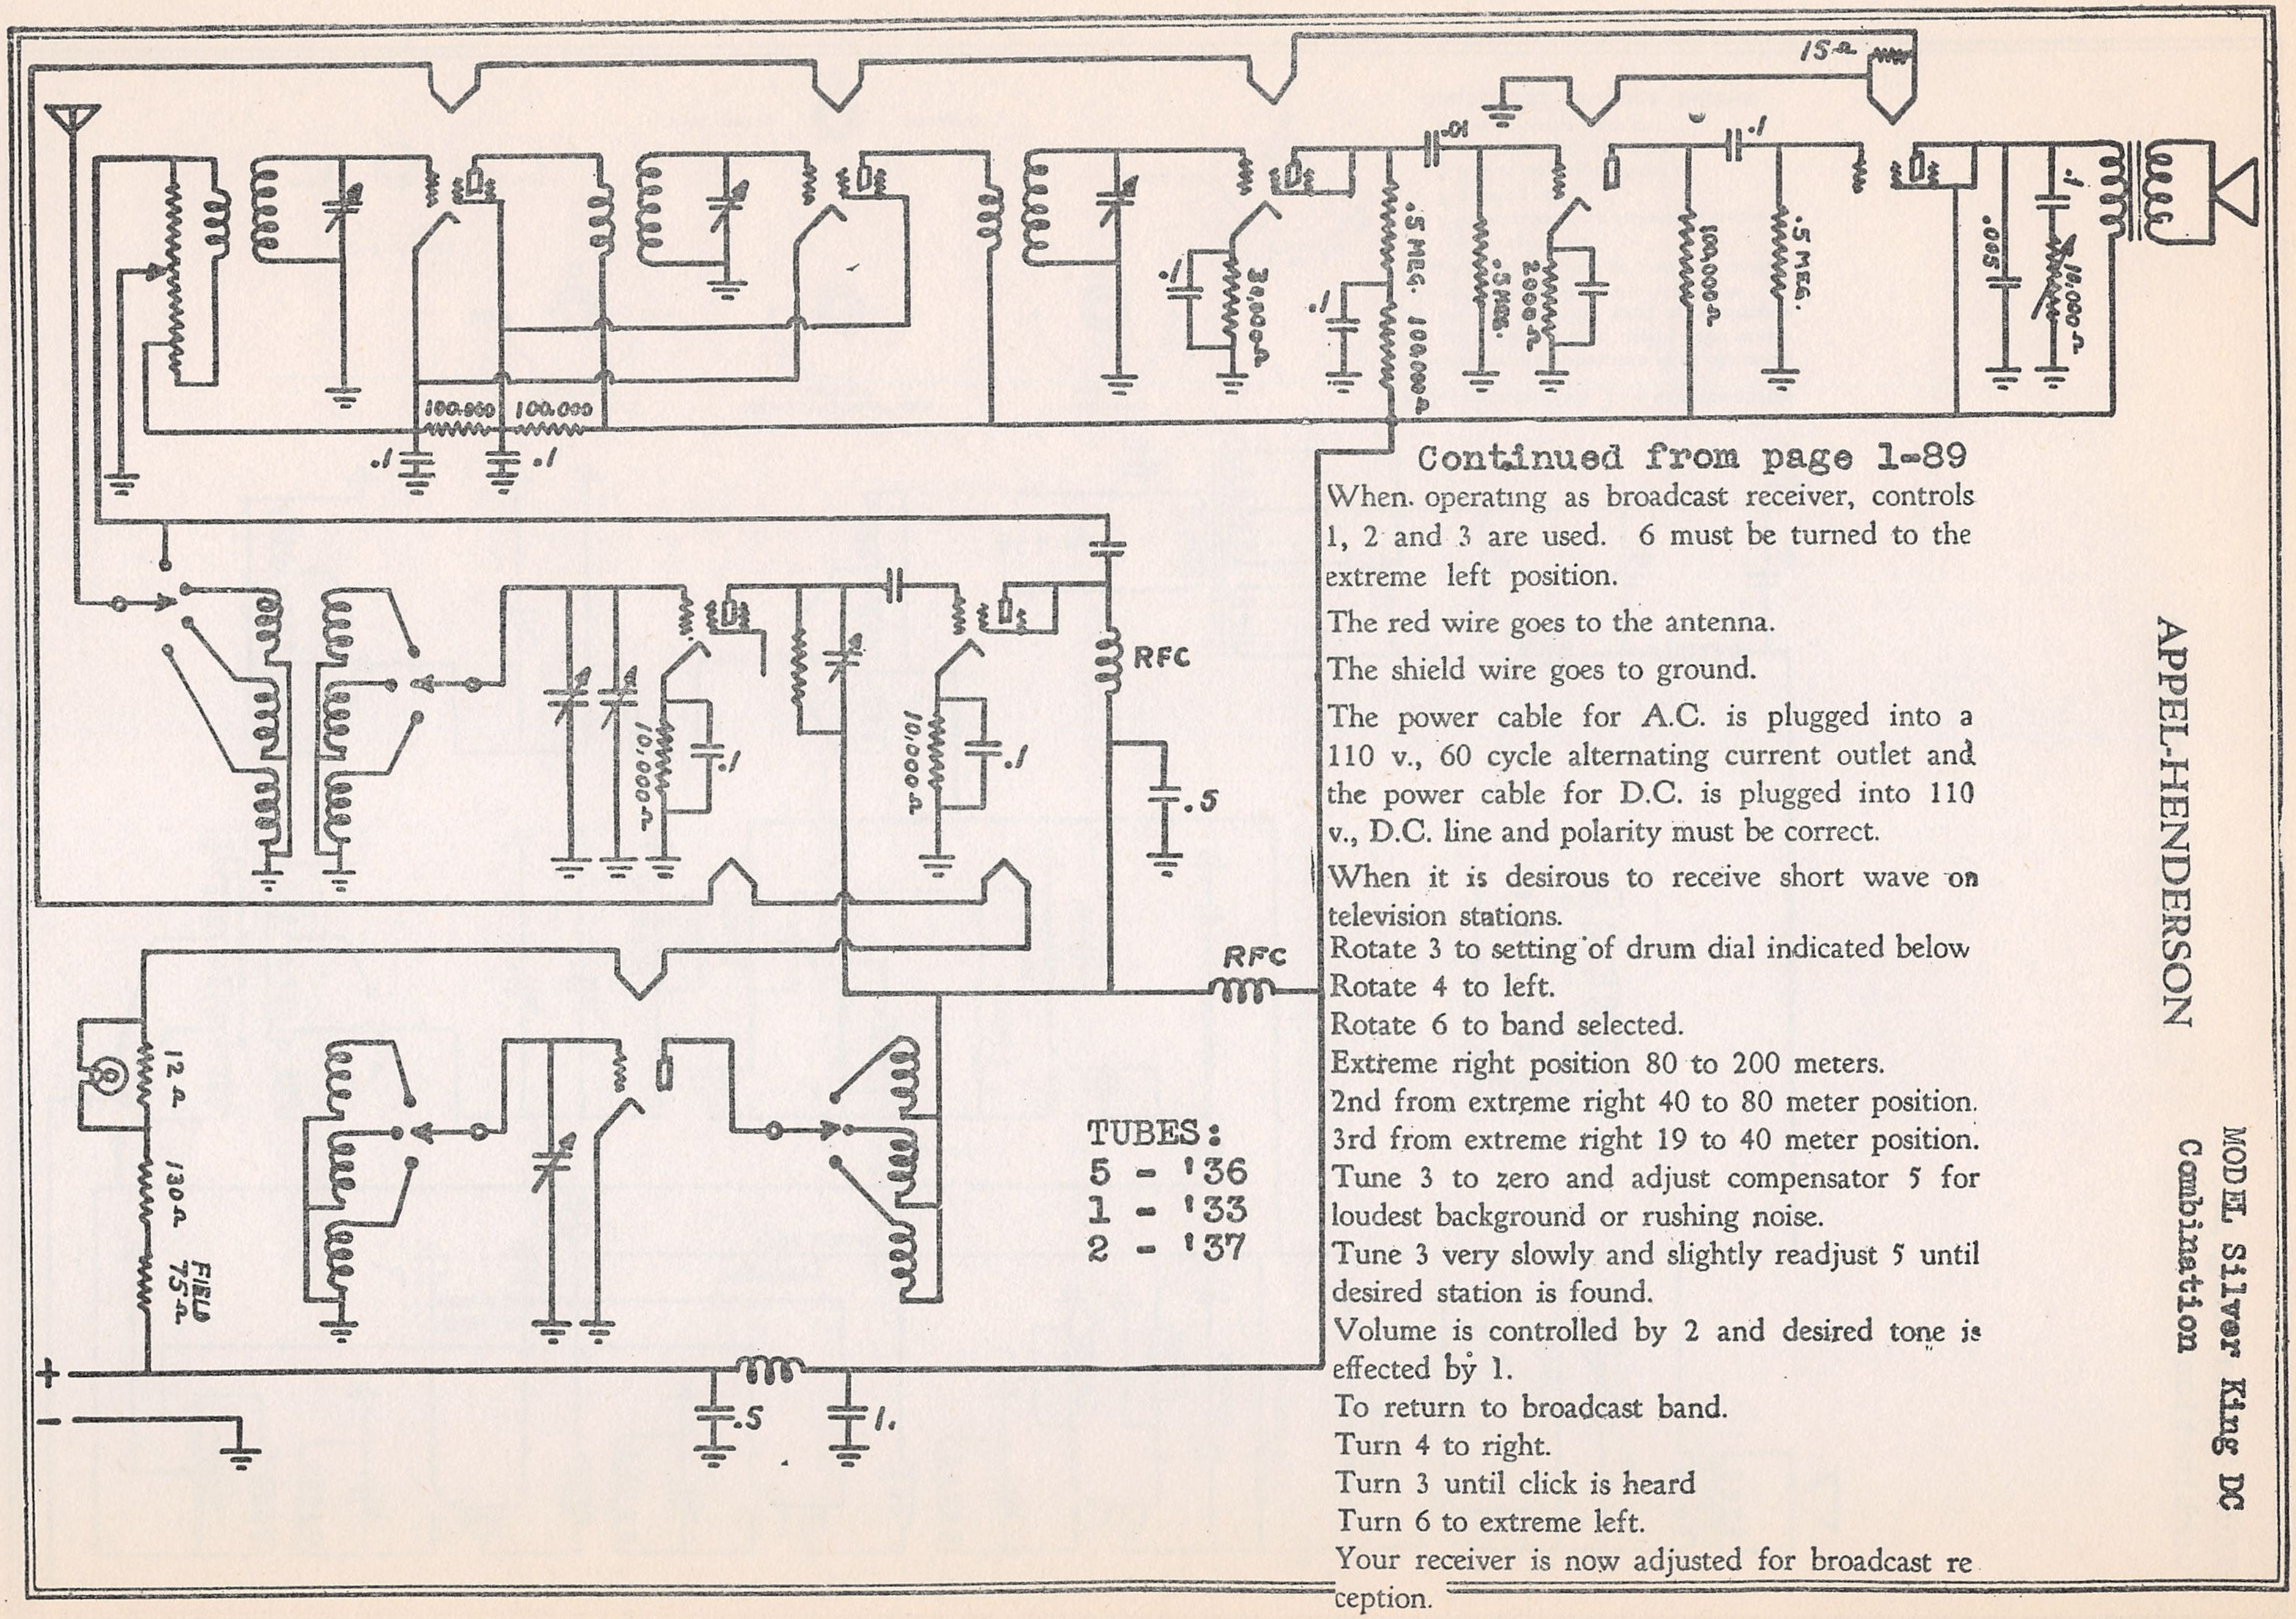

TUBES:
5 - '36
1 - '33
2 - '37

Continued from page 1-89

When operating as broadcast receiver, controls 1, 2 and 3 are used. 6 must be turned to the extreme left position.

The red wire goes to the antenna.

The shield wire goes to ground.

The power cable for A.C. is plugged into a 110 v., 60 cycle alternating current outlet and the power cable for D.C. is plugged into 110 v., D.C. line and polarity must be correct.

When it is desirous to receive short wave on television stations.
Rotate 3 to setting of drum dial indicated below
Rotate 4 to left.
Rotate 6 to band selected.
Extreme right position 80 to 200 meters.
2nd from extreme right 40 to 80 meter position.
3rd from extreme right 19 to 40 meter position.
Tune 3 to zero and adjust compensator 5 for loudest background or rushing noise.
Tune 3 very slowly and slightly readjust 5 until desired station is found.
Volume is controlled by 2 and desired tone is effected by 1.
To return to broadcast band.
Turn 4 to right.
Turn 3 until click is heard
Turn 6 to extreme left.
Your receiver is now adjusted for broadcast reception.

MODEL Silver King AC Combination

APPEL-HENDERSON

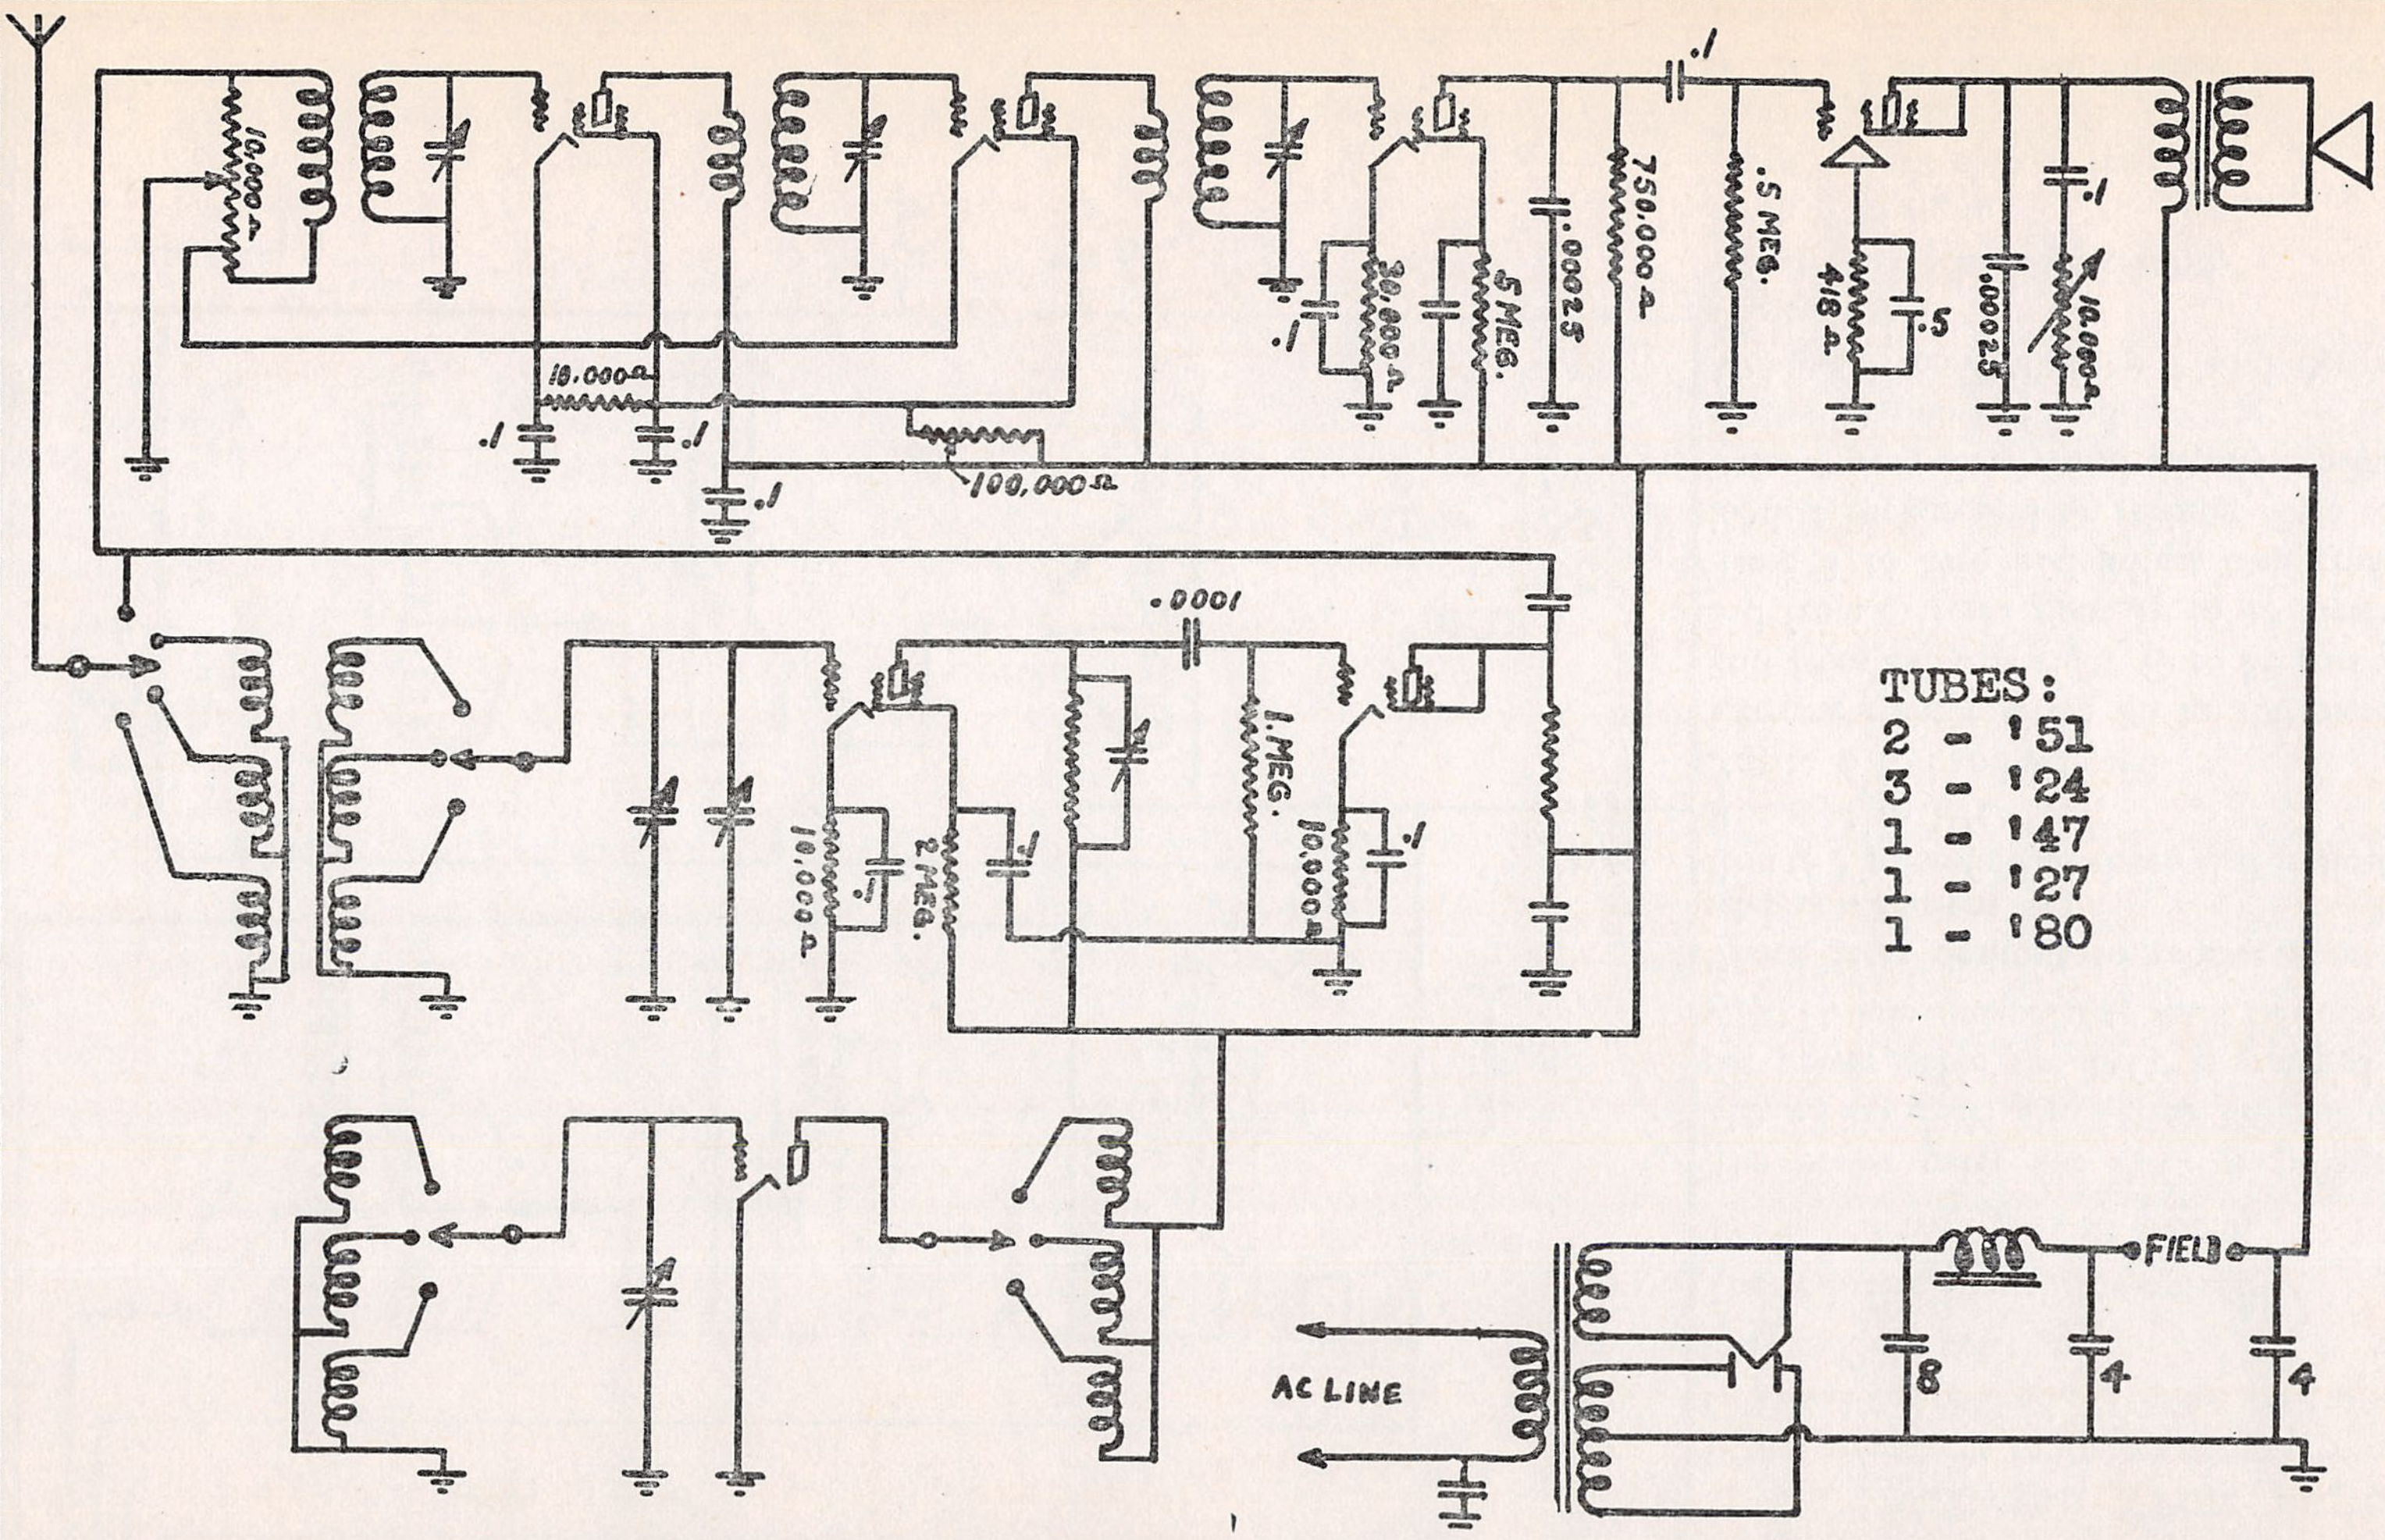
10,000 Ω
.1
.00025
.5
418 Ω
.5 MEG.
.1
750,000 Ω
.00025
.5 MEG.
30,000 Ω
.1
100,000 Ω
.1
.1
10,000 Ω
.1
10,000 Ω
.0001
1. MEG.
10,000 Ω
.1
2 MEG.
.1
10,000 Ω
.1
FIELD
4
4
8
AC LINE

TUBES:
2 - '51
3 - '24
1 - '47
1 - '27
1 - '80

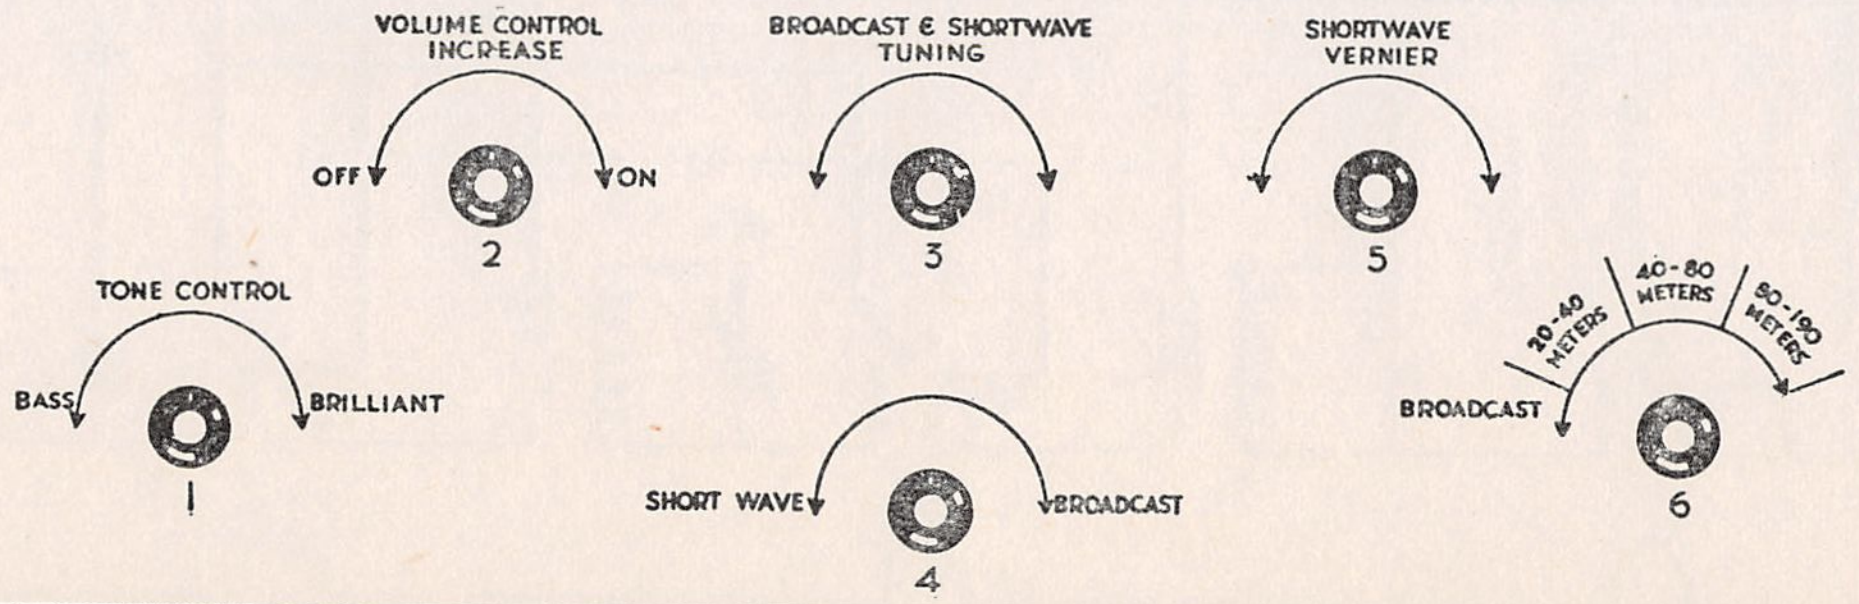
VOLUME CONTROL INCREASE
OFF
ON
2
BROADCAST & SHORTWAVE TUNING
3
SHORTWAVE VERNIER
5
TONE CONTROL
BASS
BRILLIANT
1
SHORT WAVE
BROADCAST
4
20-40 METERS
40-80 METERS
80-190 METERS
BROADCAST
6

A. C. COMBINATION D. C. COMBINATION

This receiver is a combination short and broadcast and television receiver, having only one tuning dial for the entire range of wavelengths covered. It tunes from 19 to 550 meters.

On the panel there will be found six controls.

1 is a tone control.
2 is the on-off switch and volume control.
3 is tuning dial
4 is short-long wave selector
5 is short wave compensator
6 is wave band selector dial

Continued on page 1-89-A

MODEL 5 Tube AC
MODEL 4 Tube AC

APPEL-HENDERSON

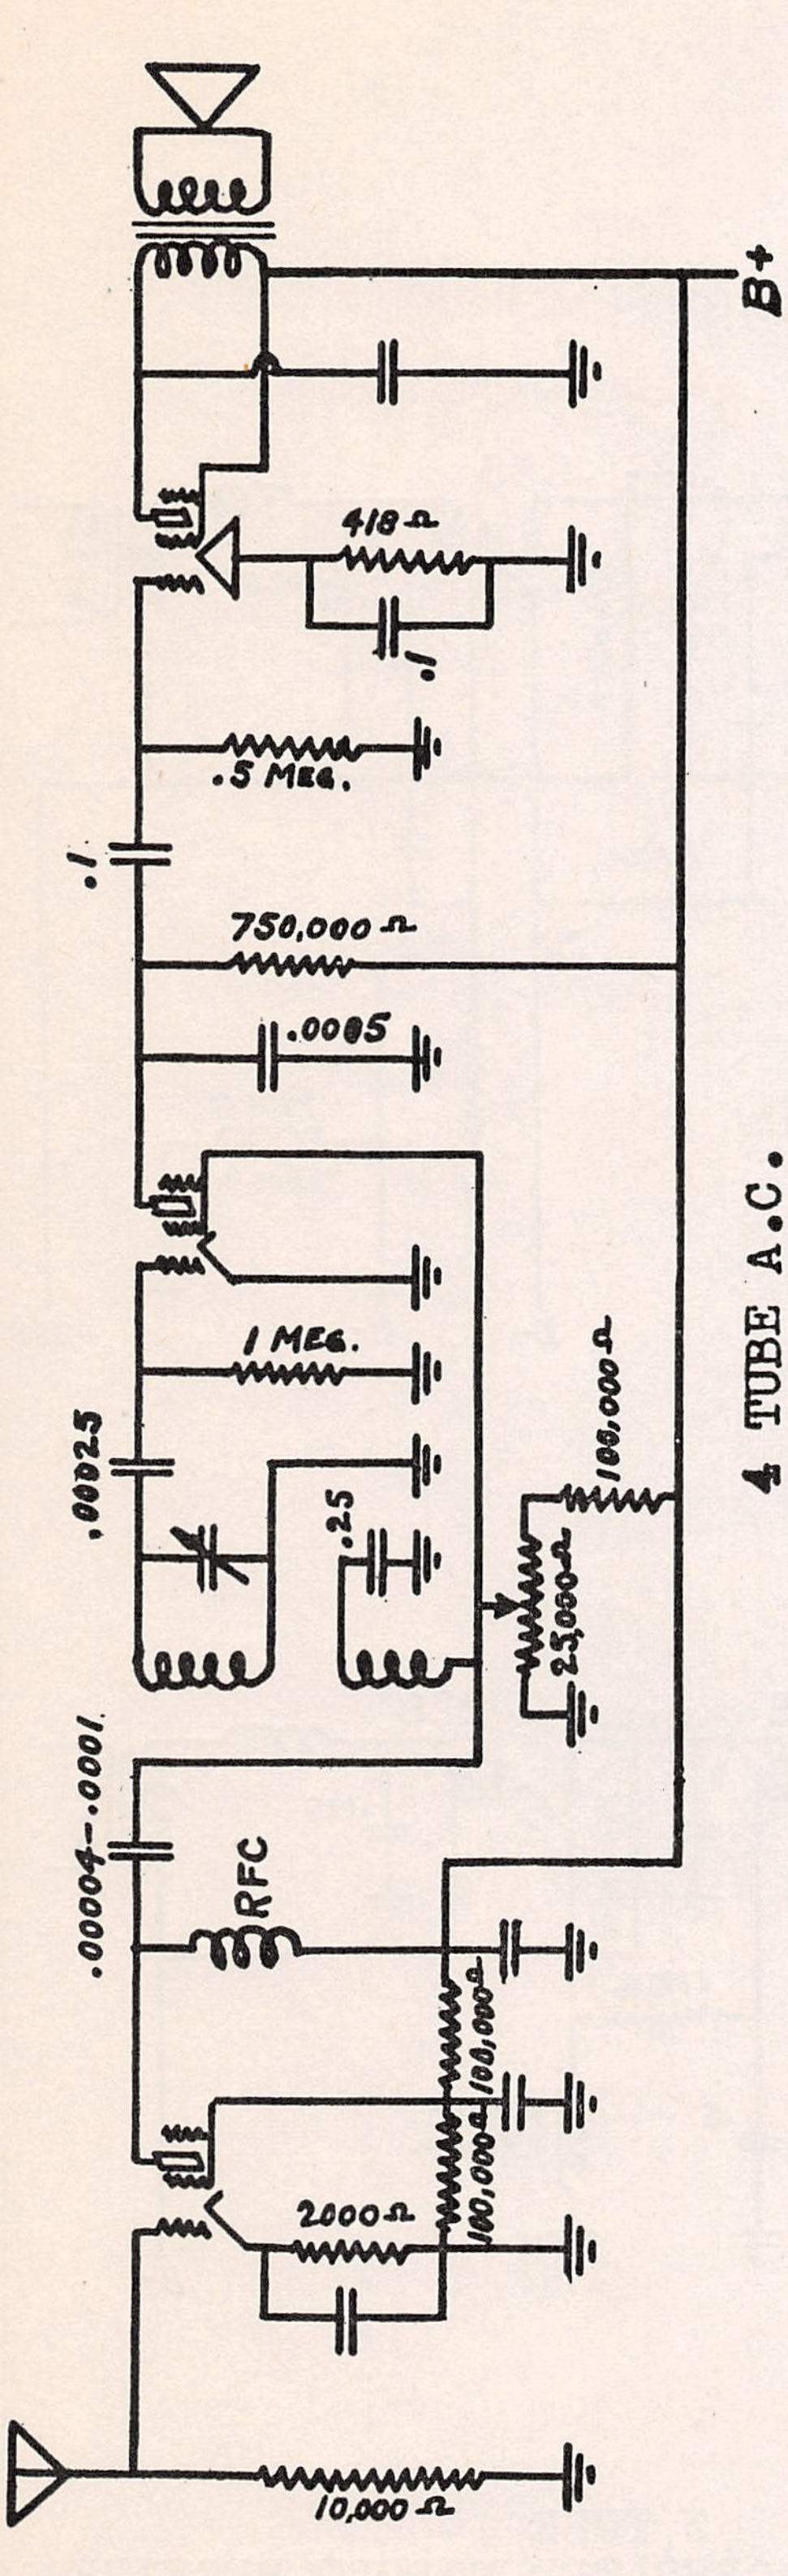
B+
418 Ω
.1
.5 MEG.
.1
750,000 Ω
.0085
1 MEG.
.00025
.25
100,000 Ω
25,000 Ω
.00004-.0001
RFC
100,000 Ω
100,000 Ω
2000 Ω
10,000 Ω

4 TUBE A.C.

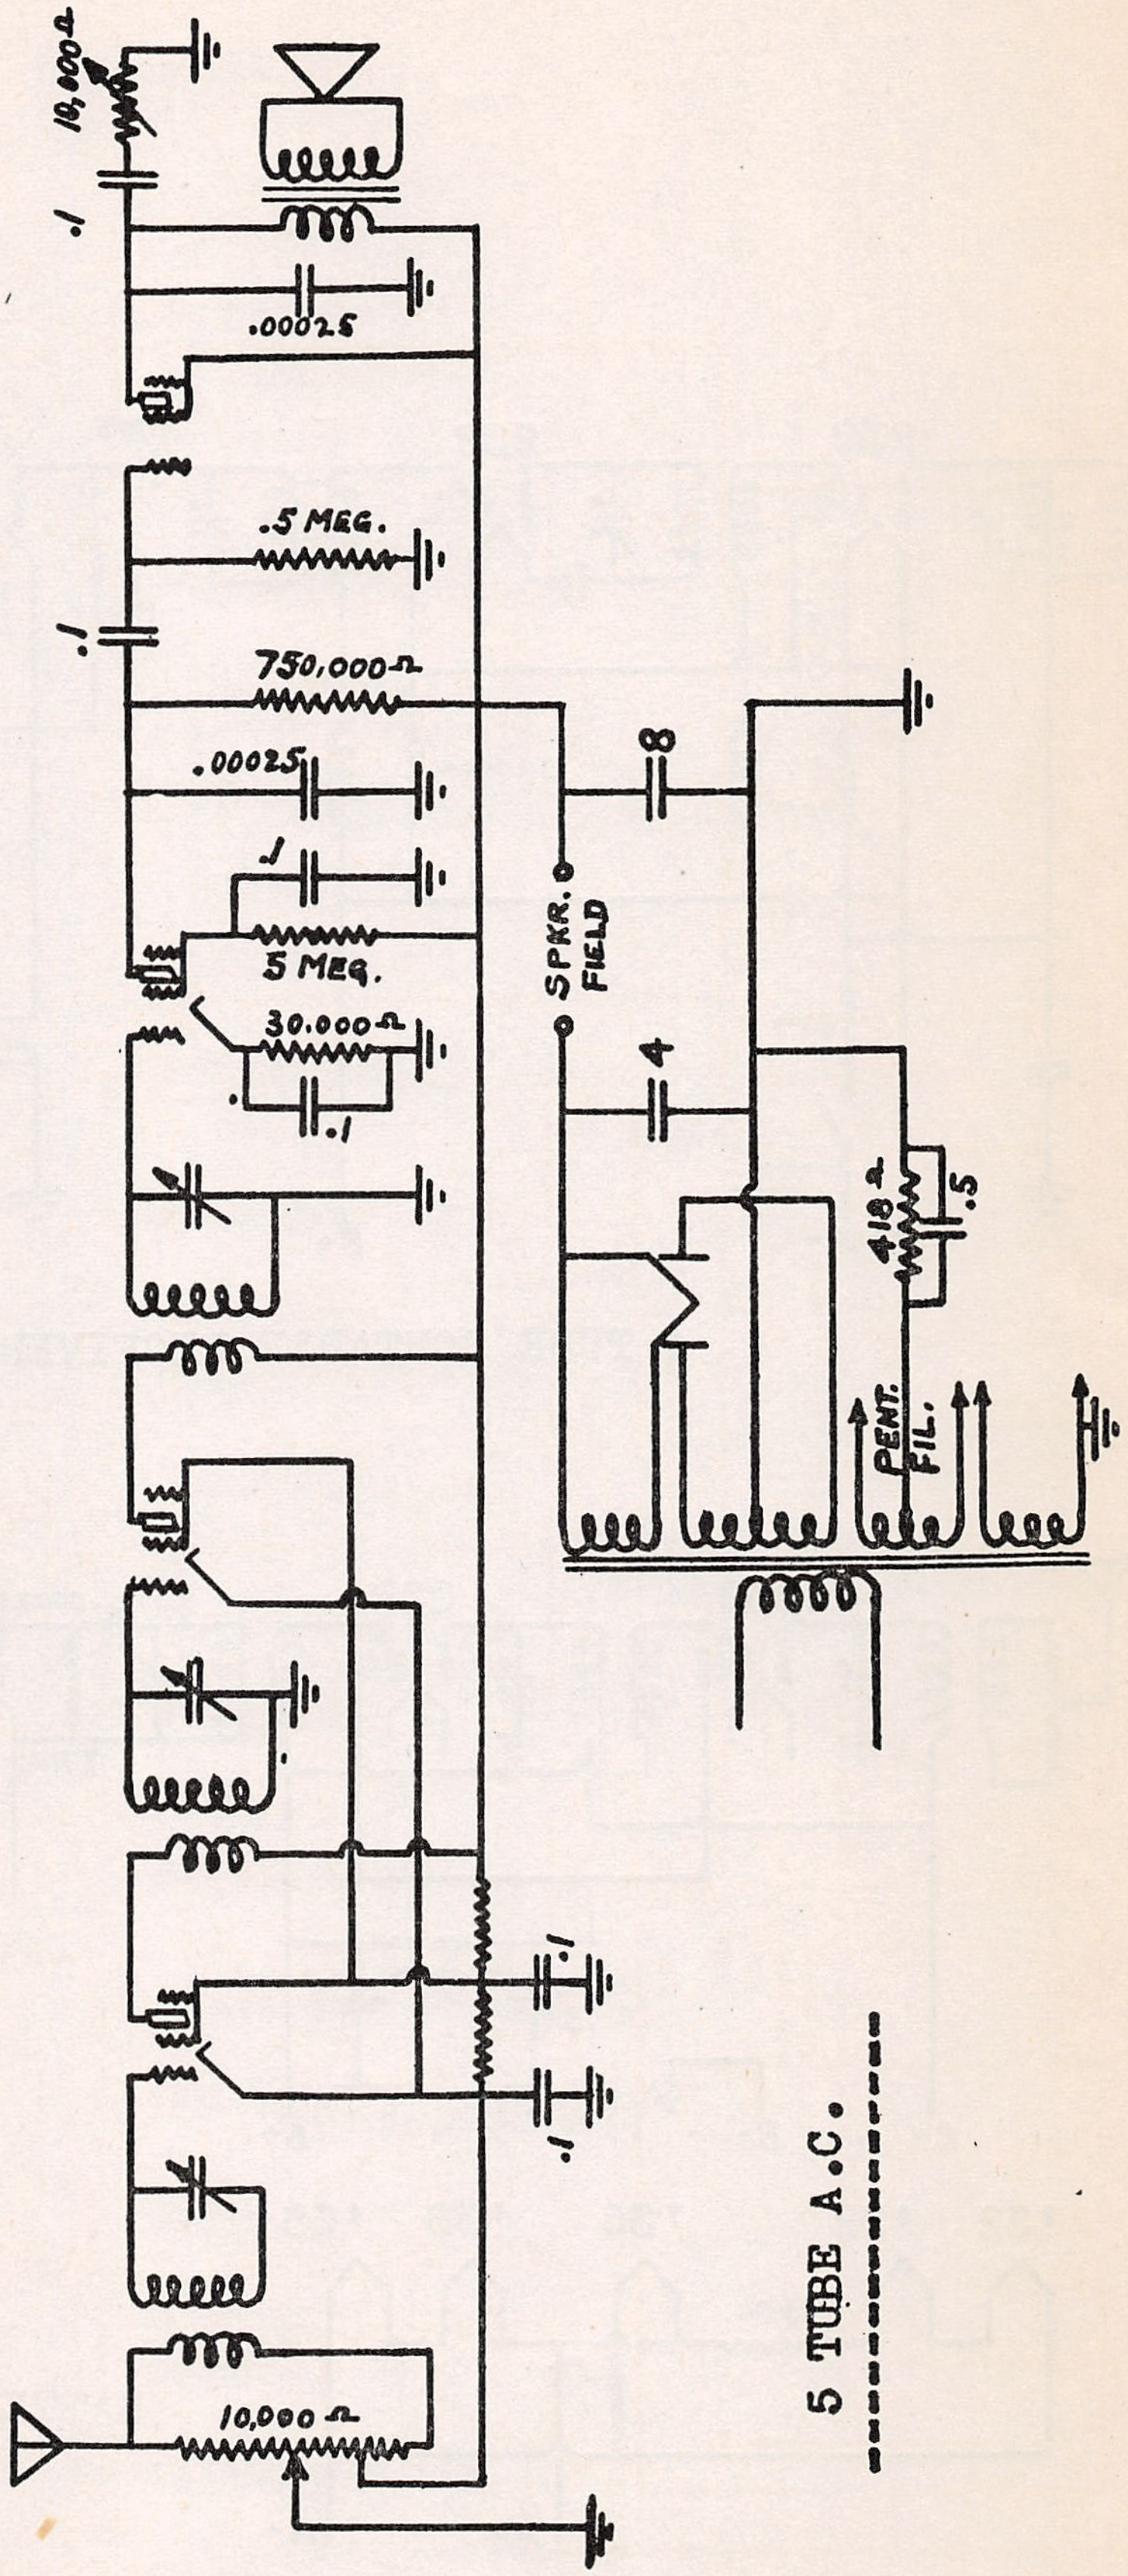
10,000 Ω
.1
.00025
.5 MEG.
.1
750,000 Ω
.00025
.1
5 MEG.
30,000 Ω
.1
8
SPKR. FIELD
4
418 Ω
.5
PENT. FIL.
.1
.1
10,000 Ω

5 TUBE A.C.

MODEL 4-Tube
Portable
MODEL 5-Tube
Battery Midget

APPEL-HENDERSON

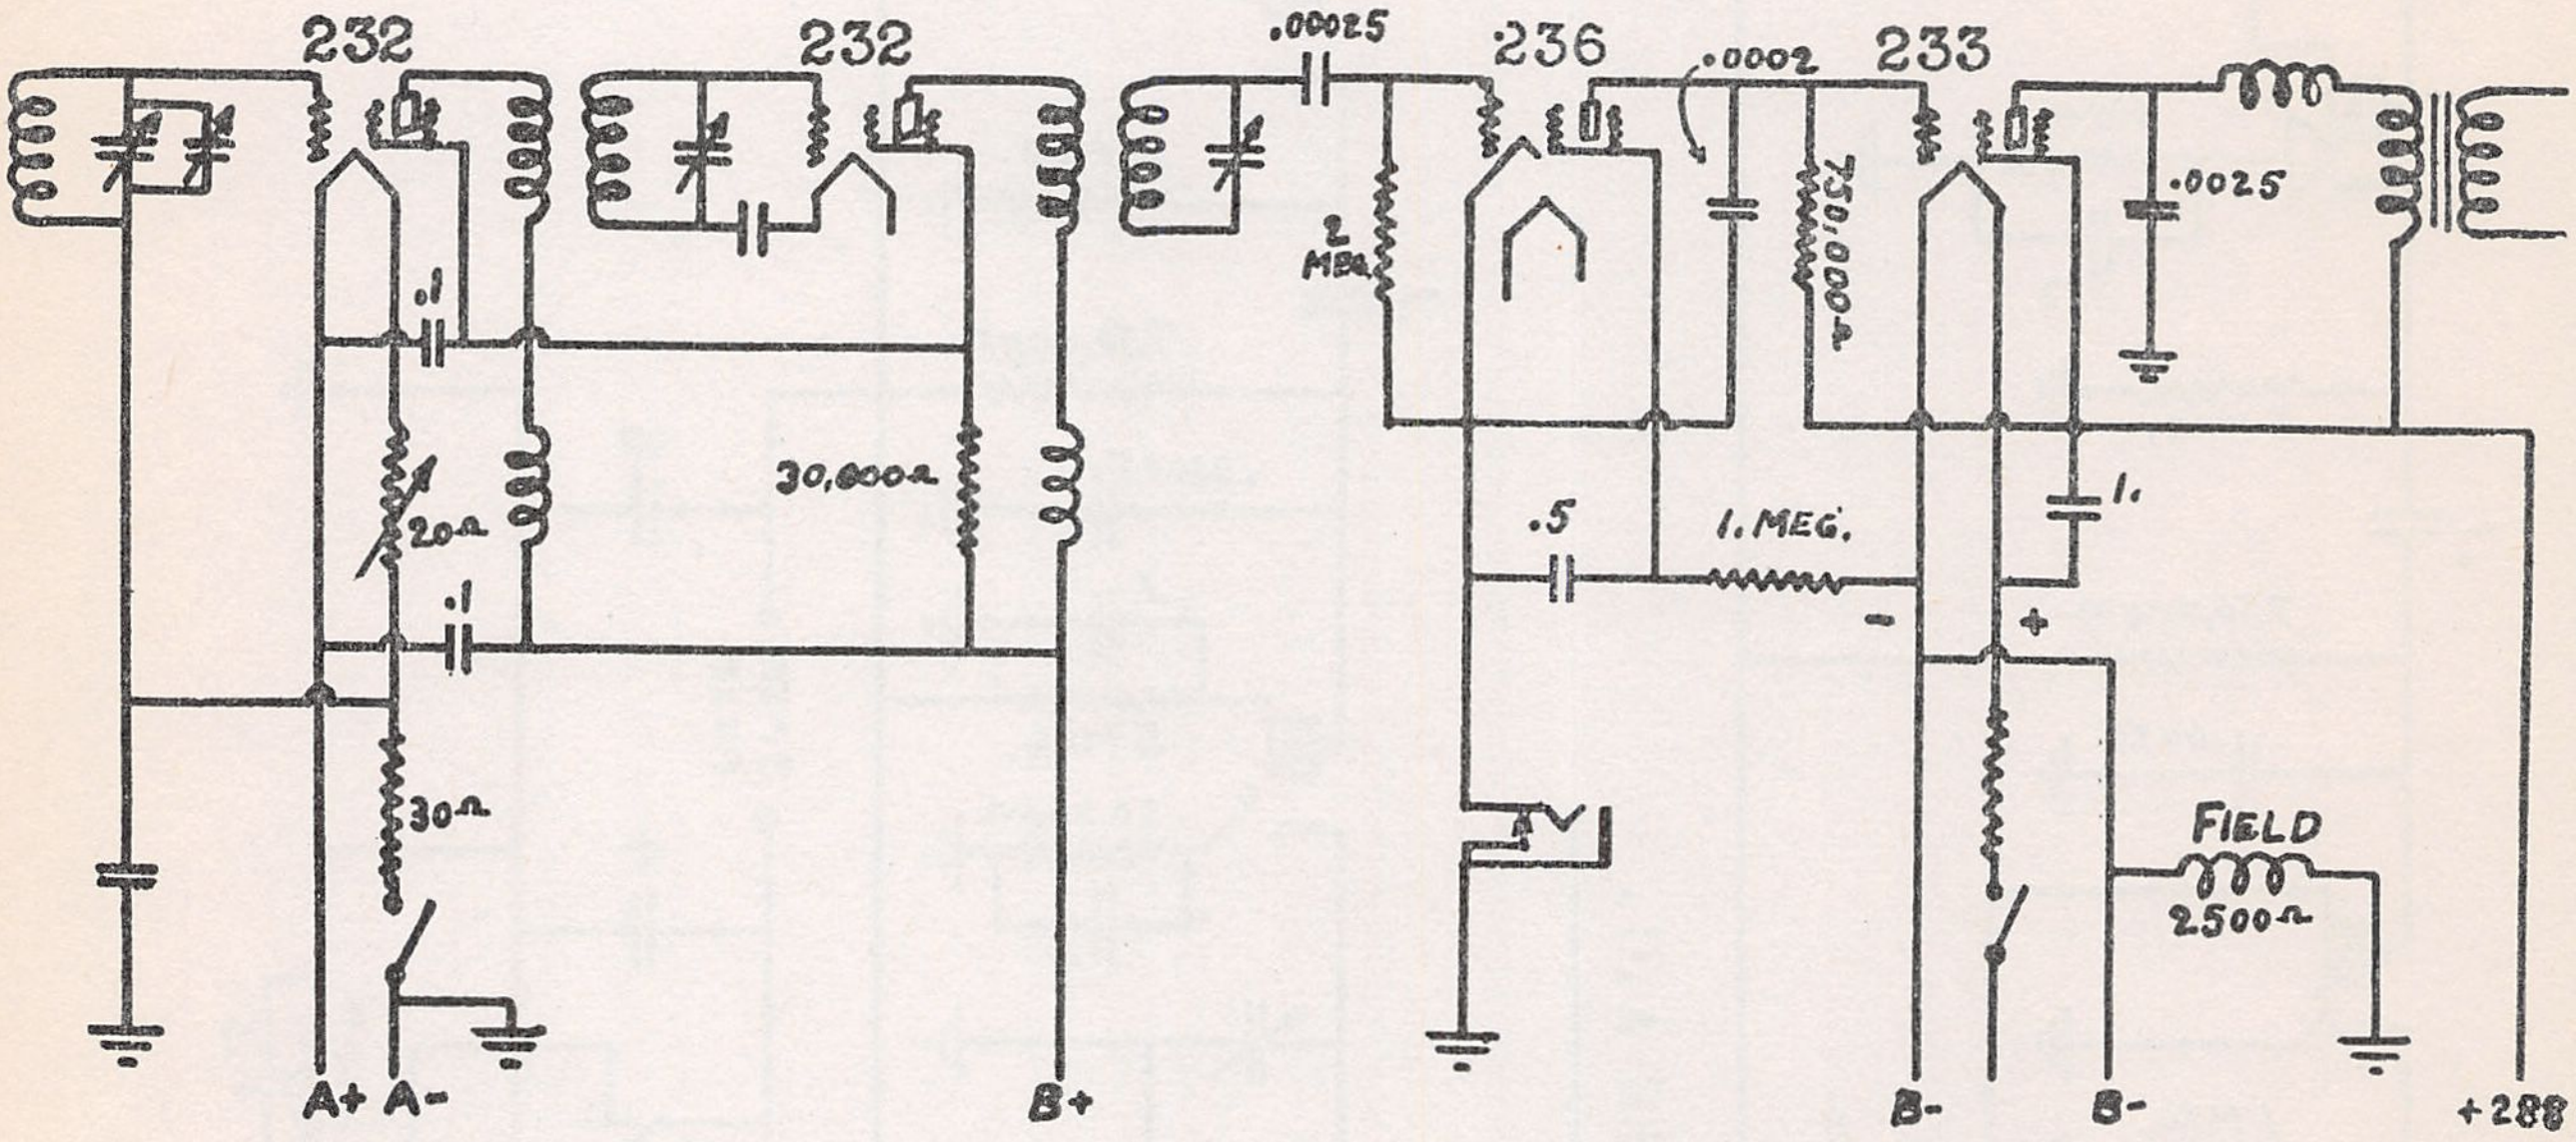
232
232
.00025
236
.0002
233
.1
20Ω
.1
30Ω
30,000Ω
2 MEG.
750,000Ω
.0025
.5
1. MEG.
1.
−
+
FIELD
2500Ω
A+
A−
B+
B−
B−
+288

4 TUBE PORTABLE RECEIVER.

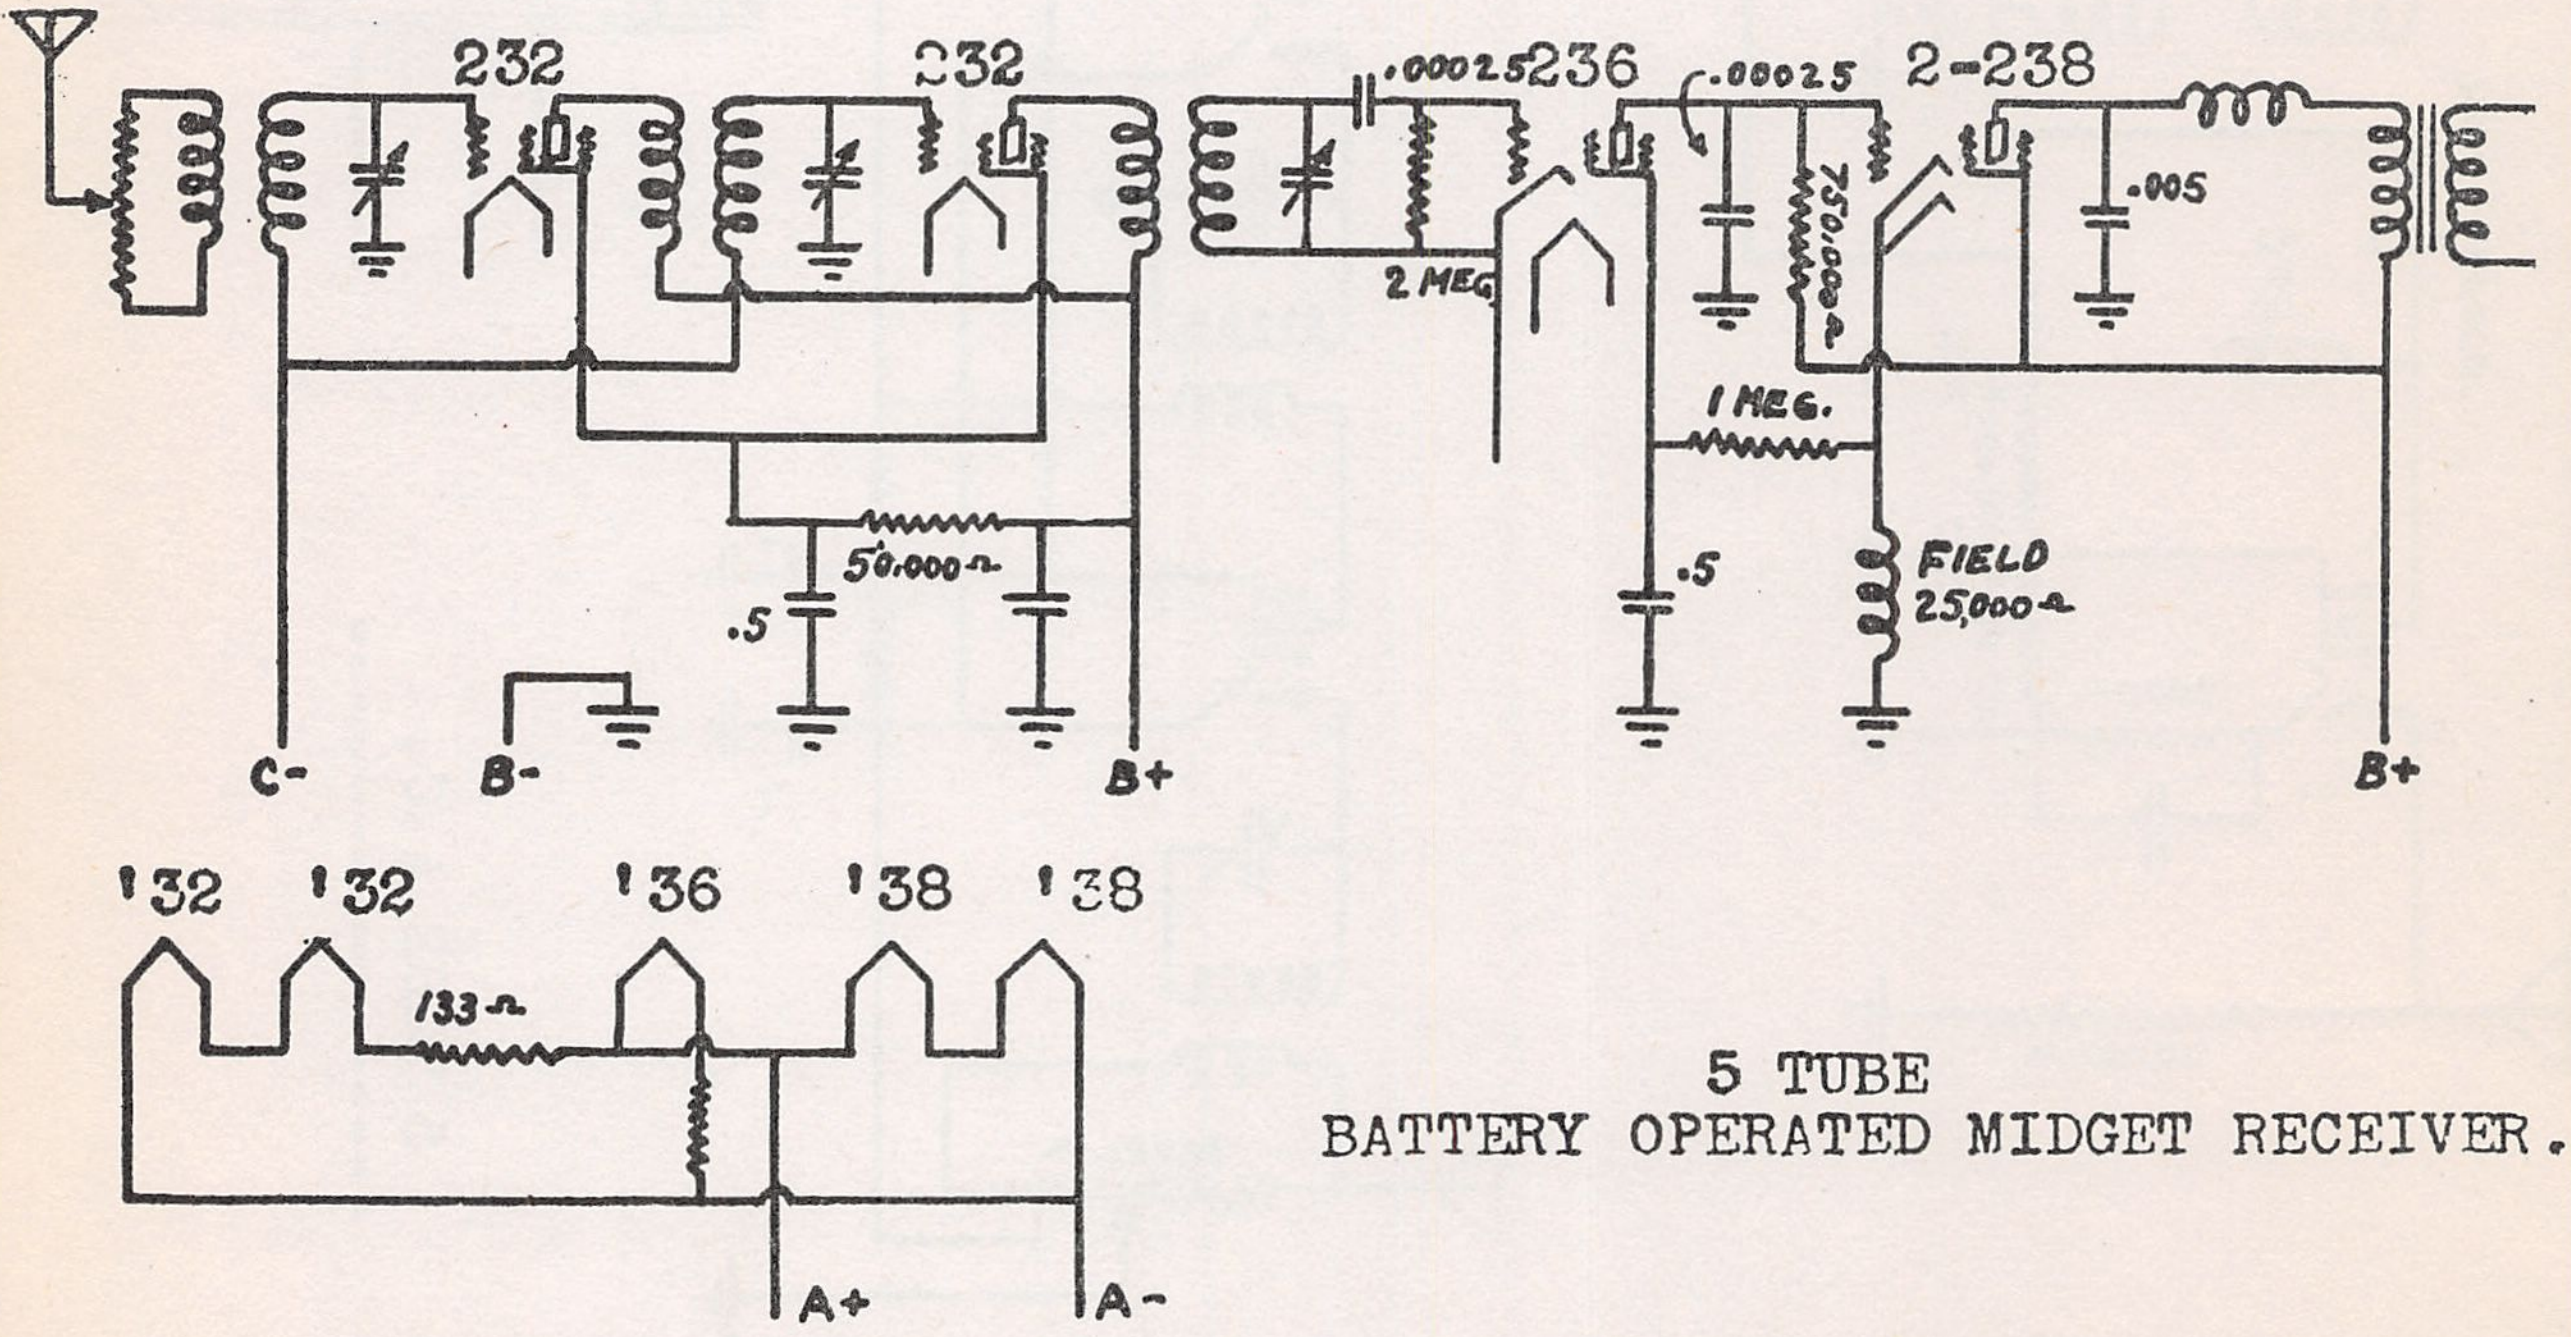
232
232
.00025
236
.00025
2-238
2 MEG
750,000Ω
.005
1 MEG.
.5
FIELD
25,000Ω
50,000Ω
.5
C−
B−
B+
B+
'32
'32
'36
'38
'38
133Ω
A+
A−

5 TUBE
BATTERY OPERATED MIDGET RECEIVER.

ATWATER KENT MFG. CO.

MODEL 82-D
2nd Type
Above serial
5,760,301

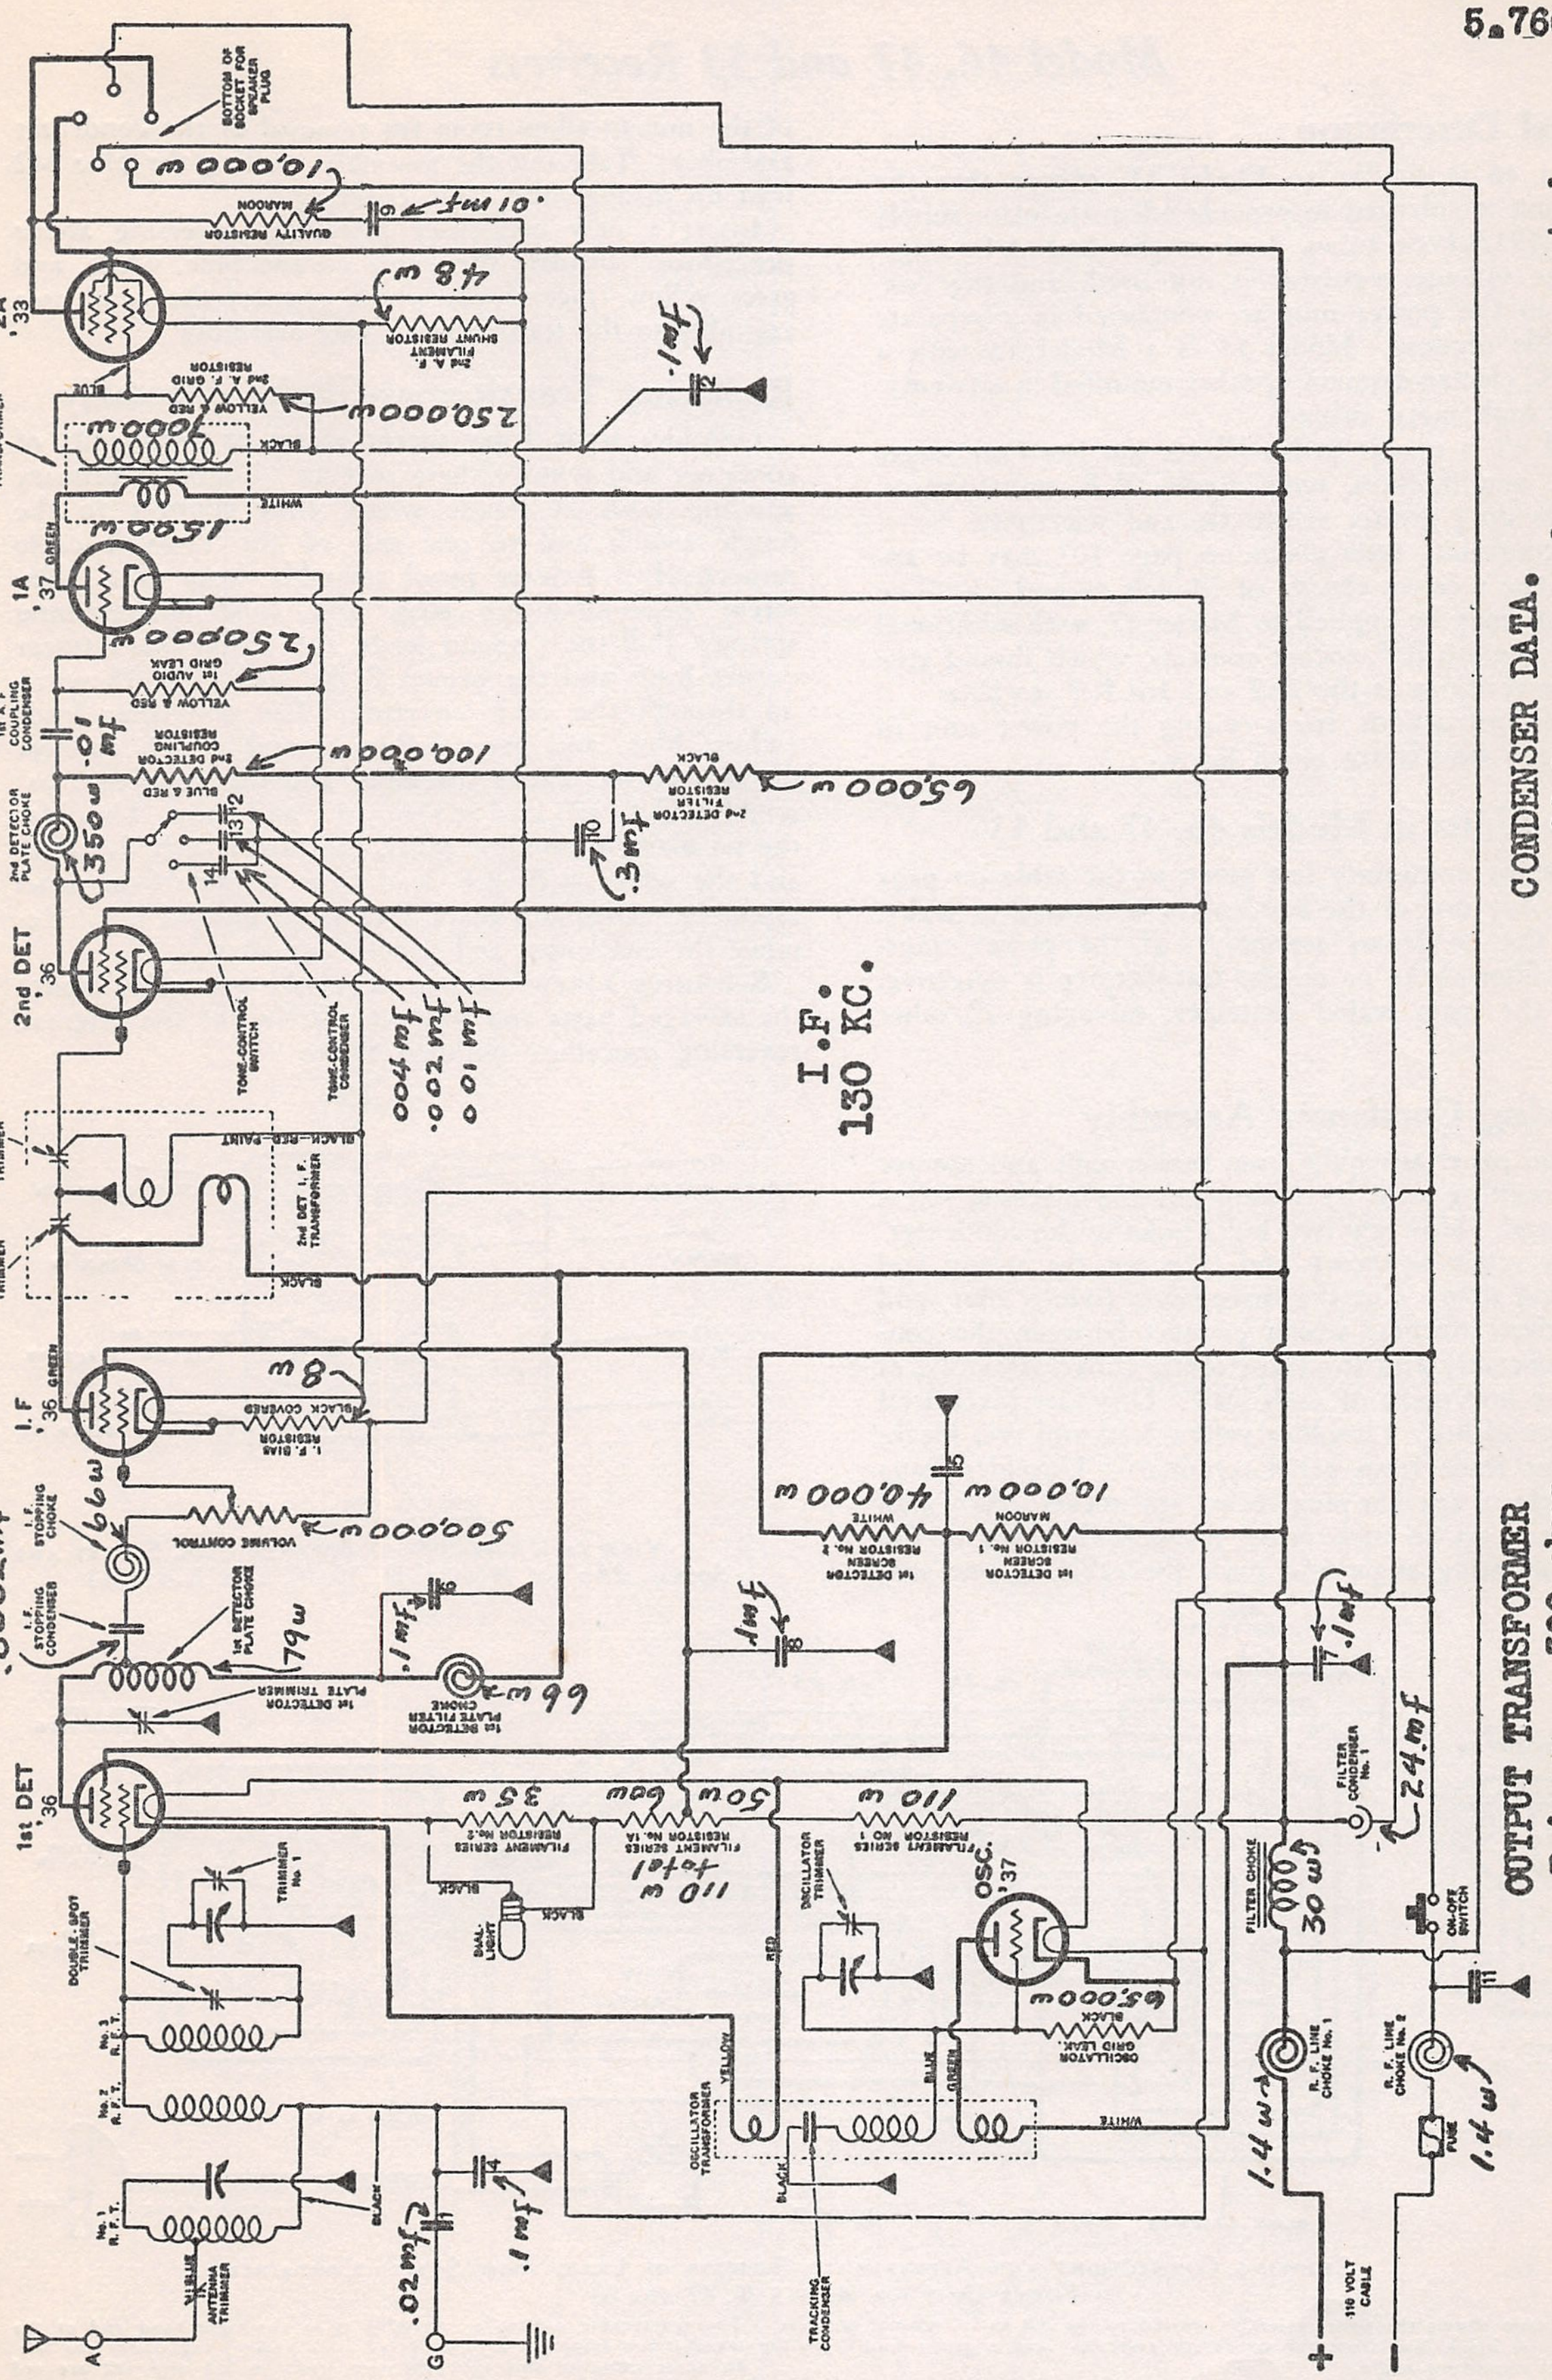
2A '33
1A '37
2nd DET '36
I.F '36
1st DET 36
OSC. '37
I.F. 130 KC.
BOTTOM OF SOCKET FOR SPEAKER PLUG
10,000 w
QUALITY RESISTOR MAROON
.01 mf
48 w
2nd A. F. FILAMENT SHUNT RESISTOR
1 mf
2nd A. F. GRID RESISTOR YELLOW & RED
250,000 w
AUDIO INPUT TRANSFORMER
1000 w
1500 w
BLACK
WHITE
GREEN
BLUE
1st AUDIO GRID LEAK YELLOW & RED
250,000 w
2nd DETECTOR 1st A. F. COUPLING CONDENSER
.01 mf
2nd DETECTOR COUPLING RESISTOR BLUE & RED
100,000 w
2nd DETECTOR FILTER RESISTOR BLACK
65,000 w
.3 mf
2nd DETECTOR PLATE CHOKE
350 w
TONE-CONTROL SWITCH
TONE-CONTROL CONDENSER
.004 mf
.002 mf
.001 mf
2nd DET GRID TRIMMER
BLACK-RED-PAINT
2nd DET I. F. TRANSFORMER
I. F. PLATE TRIMMER
8 w
I. F. BIAS RESISTOR BLACK COVERED
I. F. STOPPING CHOKE
66 w
VOLUME CONTROL
500,000 w
.0002 mf
I. F. STOPPING CONDENSER
1st DETECTOR PLATE CHOKE
79 w
1 mf
1st DETECTOR PLATE TRIMMER
1st DETECTOR PLATE FILTER CHOKE
66 w
1 mf
1st DETECTOR SCREEN RESISTOR No. 2 WHITE
40,000 w
1st DETECTOR SCREEN RESISTOR No. 1 MAROON
10,000 w
.1 mf
FILAMENT SERIES RESISTOR No. 2
35 w
FILAMENT SERIES RESISTOR No. 1A
60 w
50 w
110 w total
FILAMENT SERIES RESISTOR NO 1
110 w
FILTER CONDENSER No. 1
24 mf
DIAL LIGHT
BLACK
TRIMMER No. 1
DOUBLE-SPOT TRIMMER
OSCILLATOR TRIMMER
RED
OSCILLATOR GRID LEAK BLACK
65,000 w
FILTER CHOKE
30 w
ON-OFF SWITCH
No. 3 R. F. T.
No. 2 R. F. T.
No. 1 R. F. T.
ANTENNA TRIMMER
BLUE
BLACK
.02 mf
1 mf
OSCILLATOR TRANSFORMER
YELLOW
TRACKING CONDENSER
R. F. LINE CHOKE No. 1
1.4 w
R. F. LINE CHOKE No. 2
1.4 w
FUSE
110 VOLT CABLE
A
G
+
-

CONDENSER DATA.
All bypass condensers are rated
at 400 volts. Tone control con-
densers are rated at 100 volts.

OUTPUT TRANSFORMER
Primary 300 ohms
Secondary 0.25 ohm
Field coil 1200 ohms

Voltage data on
page 229

Voltage reference to page 2-5

ATWATER KENT MFG. CO.

Model 46, 47 and 53 Receivers

General Description

Model 46 is similar to Model 43, except that the power unit is enlarged to provide adequate plate supply for the 171A-type tubes used in the 2nd A.F. stage. Also, the voltage regulator is not used, and the condensers in the power unit are contained in a separate replaceable section. Model 53 is a Model 46 with a type F-2C electro dynamic speaker mounted in a twenty six inch high metal cabinet.

Model 47 is similar to Model 46, but has four stages of R. F. amplification, with double R.F. transformers, thus providing greater sensitivity and selectivity.

The continuity tests given on page 103 may be applied to the receiver chassis of Models 46 and 53. The same tests may be applied to Model 47, with additional tests for the 4th R.F. socket contacts, which should give the same readings as the 2nd and 3rd R.F. sockets.

Special instructions for servicing the power unit in these three models are given below

Power Units in Models 46, 47 and 53

Apply the continuity test given in the table on page 104. If any one of the condensers is shorted or leaky, replace the condenser assembly. If the power transformer, filter-choke or output transformer is defective, replace the main sealed container, salvaging all other parts.

Replacing Condenser Assembly

Release panel assembly from power unit and remove panel-mounting strip by taking out the machine screw at each end. Unscrew two bolts holding the condenser assembly retaining-spring and take out the spring and supporting strip. Cut the three leads (white, blue, and green-yellow tracer), which connect between the condenser assembly and the transformer-choke assembly, at about the mid-point of each lead. Unsolder black lead from ground lug. Unsolder yellow lead and two black-red tracer leads from panel terminals. Unsolder leads at contacts of speaker-plug socket and socket 2Aa. Pull these leads up an inch or so through the hole in the socket-mounting angle and push the cable to one side of the unit to allow room for removal of the condenser assembly. Take out the assembly, pulling the blue M2 lead up through the cable covering.

Insert a new condenser assembly, reversing above procedure. Insulate the joints on the blue, white, and green-yellow tracer leads which connect the condenser assembly to the transformer-choke assembly

Replacing Transformer-Choke Assembly

Unsolder leads from socket plates at both ends of container and remove these sockets. Unsolder primary winding leads at points where they connect to the toggle switch and to one side of the 110-volt cable respectively. Release panel assembly from unit. Unscrew panel-mounting strip and condenser-retaining spring. Pull the primary leads, the yellow-black tracer output leads and the brown P2Aa lead (No. 18 wire) up through the cable covering. Cut the three leads (white, blue, and green-yellow tracer) which connect the transformer-choke assembly and the condenser assembly. Cut each lead at about the mid-point. Unsolder the six filament winding leads, the brown +B, 2A lead, and the white +B, R.F lead from terminals on panel assembly. Unsolder black lead from ground lug. Remove the condenser and panel assemblies.

Substitute a new transformer-choke assembly, mount the salvaged parts and connect exactly like the original, reversing procedure outlined above

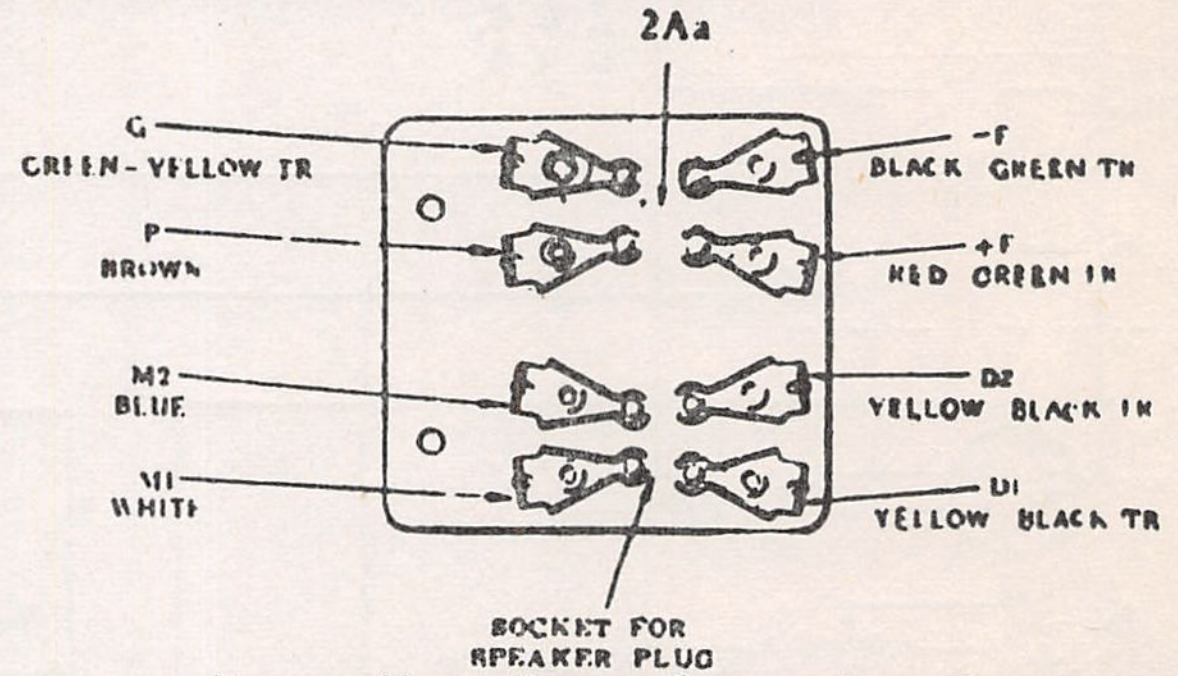
2Aa
G
GREEN-YELLOW TR
P
BROWN
M2
BLUE
M1
WHITE
-F
BLACK GREEN TR
+F
RED GREEN TR
D2
YELLOW BLACK TR
D1
YELLOW BLACK TR
SOCKET FOR SPEAKER PLUG

View of Under-Side of Speaker-Plug Socket and Socket 2Aa on Models 13. 16. 17 and Early 53.

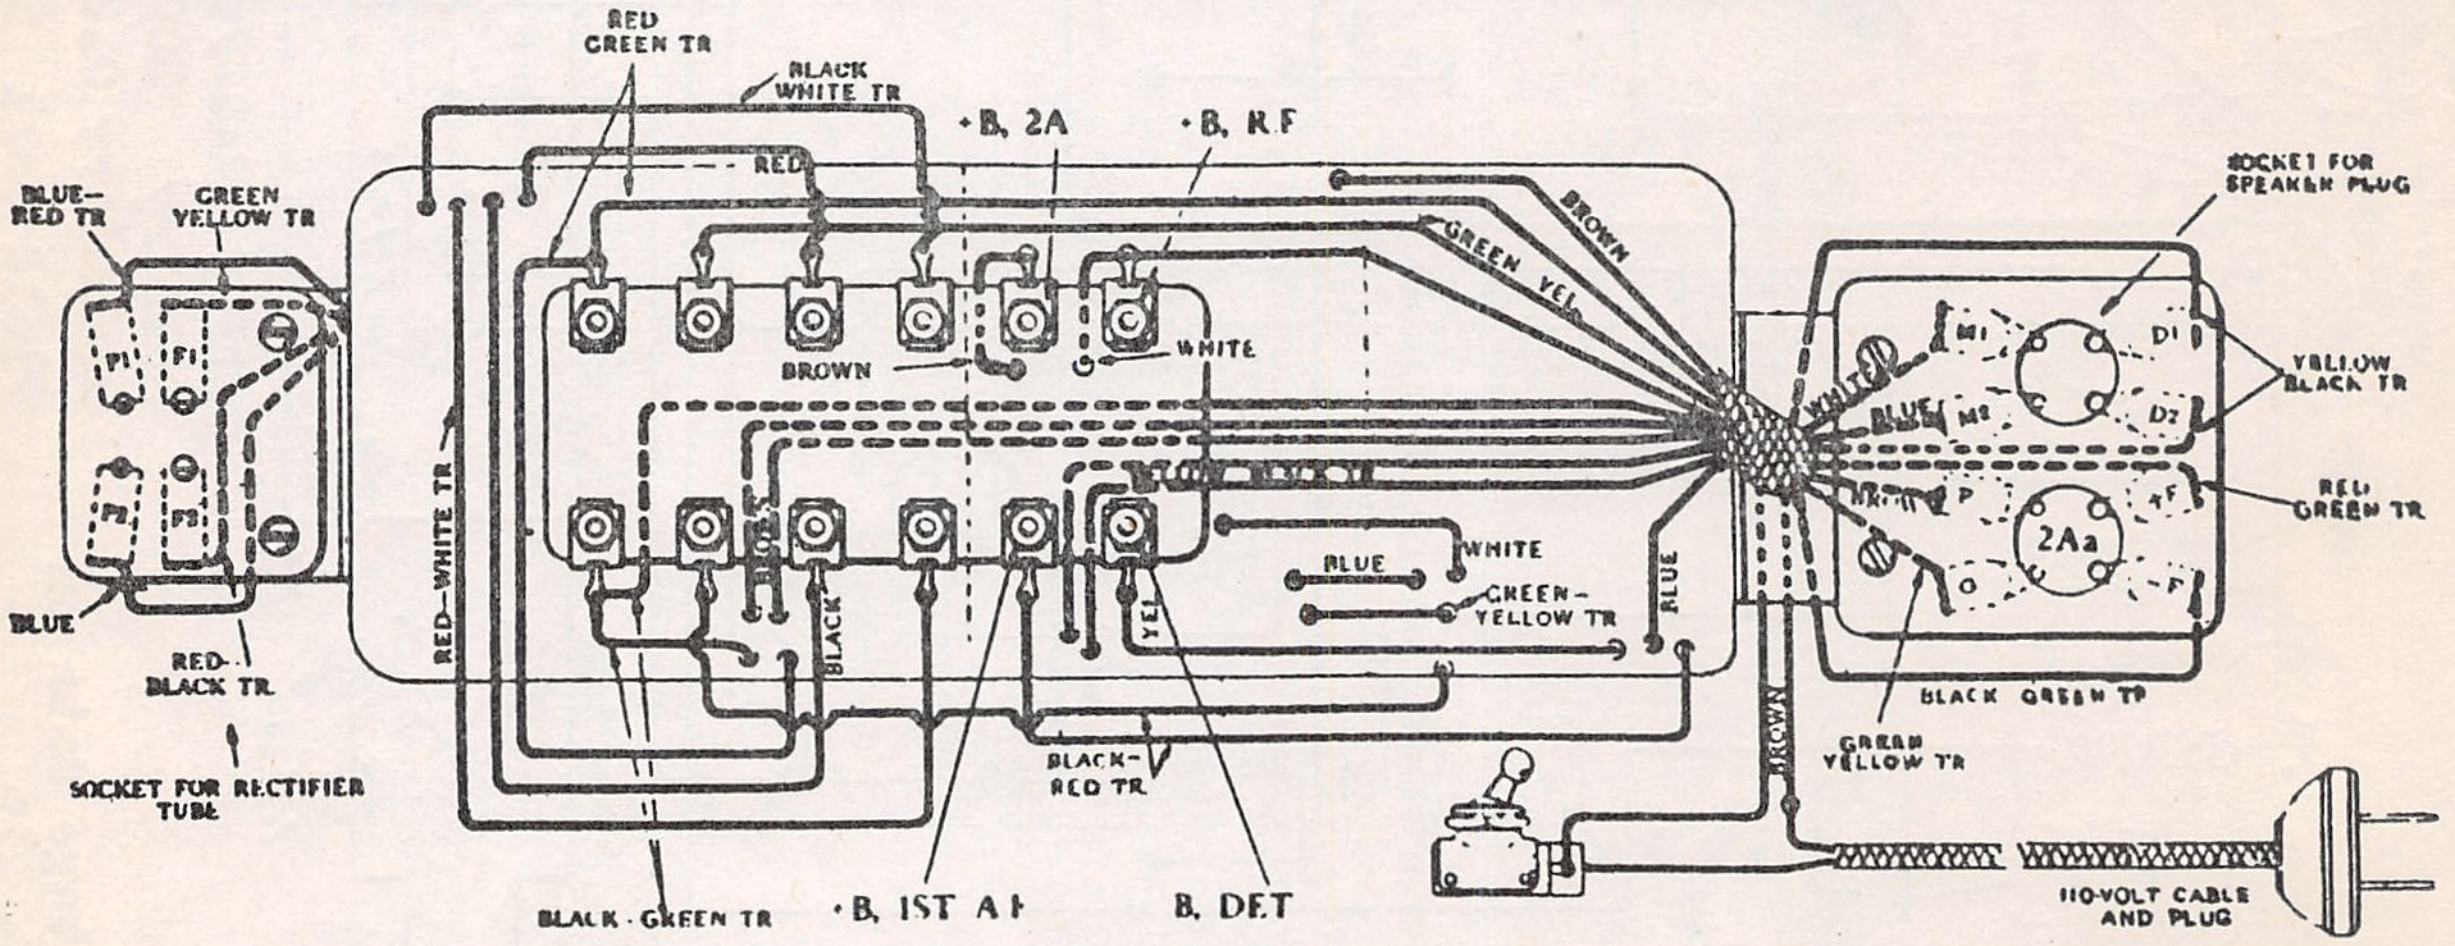
RED GREEN TR
BLACK WHITE TR
+B, 2A
+B, R.F
RED
BLUE-RED TR
GREEN YELLOW TR
F1
F1
F2
F3
BROWN
WHITE
GREEN YEL
BROWN
RED-WHITE TR
BLACK
YEL
BLUE
WHITE
GREEN-YELLOW TR
BLUE
BLUE
RED-BLACK TR
SOCKET FOR RECTIFIER TUBE
BLACK-RED TR
BROWN
BLACK-GREEN TR
+B, 1ST A.F
B, DET
SOCKET FOR SPEAKER PLUG
M1
M2
D1
D2
YELLOW BLACK TR
WHITE
BLUE
P
2Aa
+F
-F
RED GREEN TR
BLACK GREEN TR
GREEN YELLOW TR
110-VOLT CABLE AND PLUG

Showing Connections and Approximate Position of Leads from Sealed Container in Power Unit for Models 46, 47 and 53

This view shows the panel assembly moved to the left of its normal position. The replaceable condenser assembly is in the right hand end of the container. A black lead from the condenser assembly and a green lead from the transformer assembly are connected to a ground lug under the left hand panel mounting angle. In some units of this type the two leads to D1 and D2 are red (No. 18 wire) instead of yellow-with-black-tracer

ATWATER KENT MFG. CO.

MODEL 82-Q
1st Type
Below serial
2,550,940

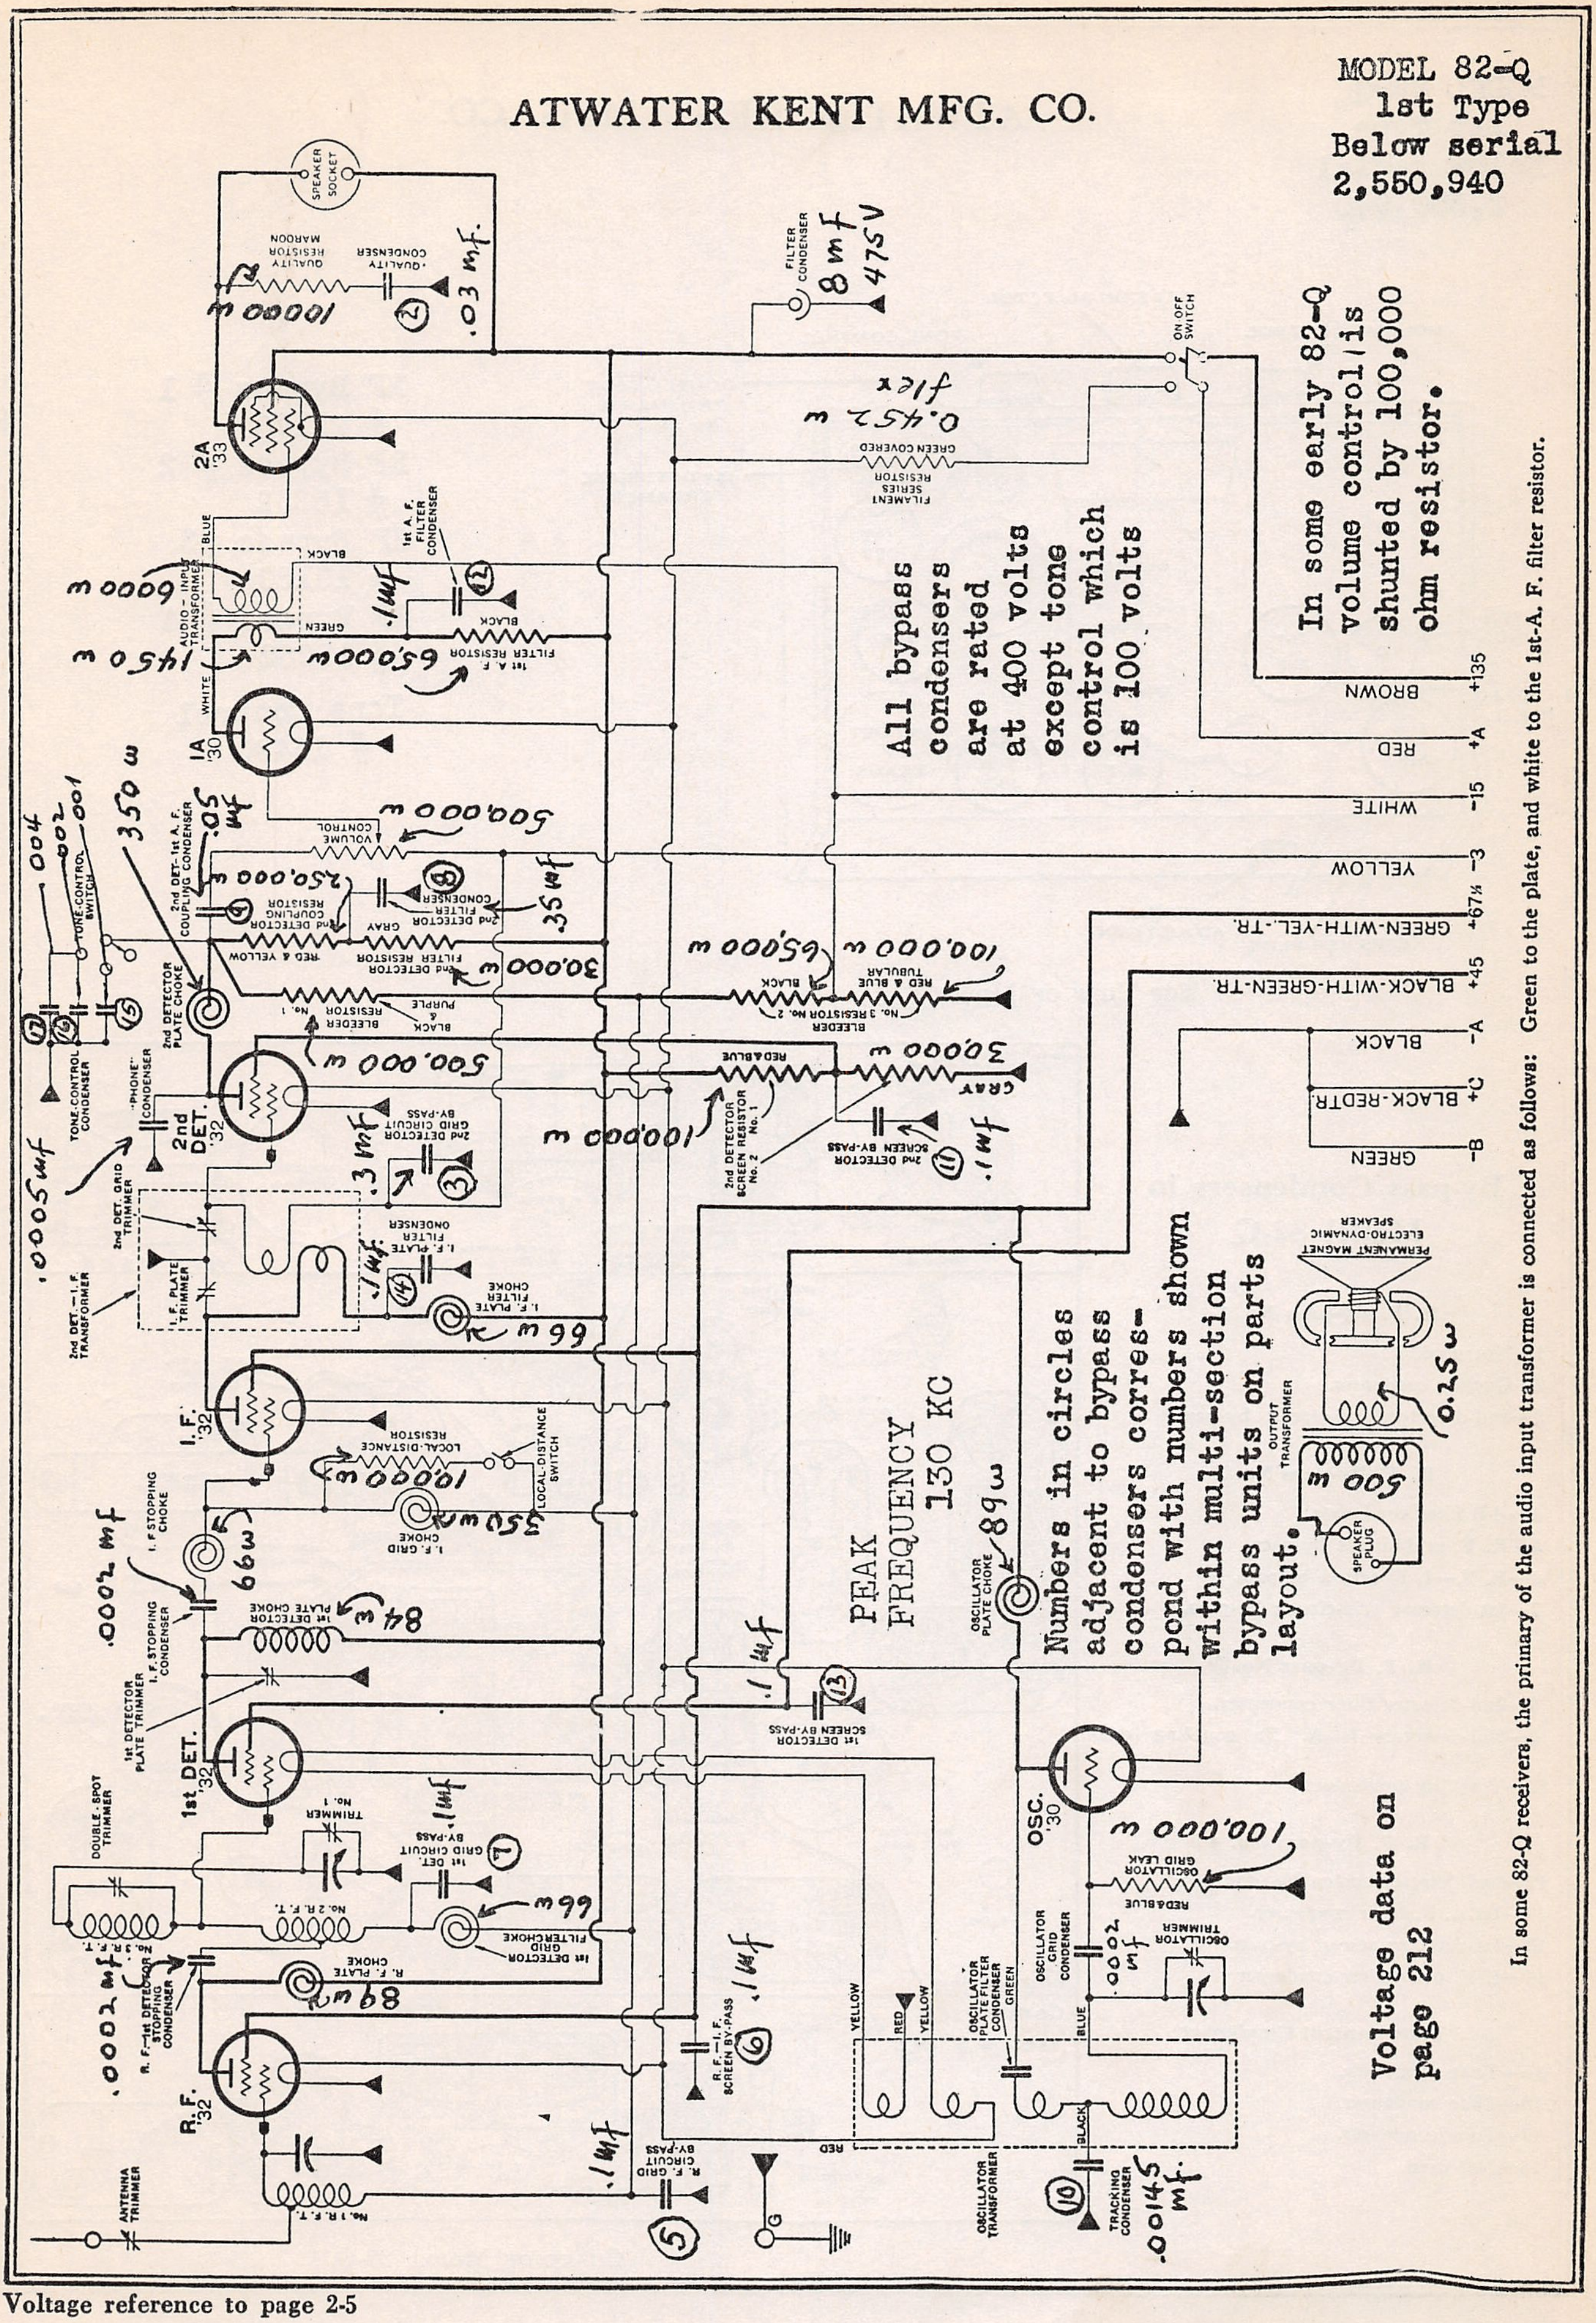
SPEAKER SOCKET
QUALITY RESISTOR MAROON
10000 ω
QUALITY CONDENSER
② .03 mf.
FILTER CONDENSER
8 mf 475V
ON OFF SWITCH
FILAMENT SERIES RESISTOR GREEN COVERED
0.452 ω flex
2A '33
1st A.F. FILTER CONDENSER
⑫ .1 mf
AUDIO-INPUT TRANSFORMER
BLUE
BLACK
GREEN
WHITE
6000 ω
1450 ω
1st A.F. FILTER RESISTOR BLACK
65000 ω
1A '30
VOLUME CONTROL
500,000 ω
2nd DET.-1st A.F. COUPLING CONDENSER
.05 mf
2nd DETECTOR COUPLING RESISTOR
250,000 ω
2nd DETECTOR FILTER CONDENSER
⑧ .35 mf
2nd DETECTOR FILTER RESISTOR GRAY
RED & YELLOW
BLEEDER RESISTOR No. 1 BLACK & PURPLE
30,000 ω
BLEEDER RESISTOR No. 2 BLACK
65,000 ω
No. 3 RED & BLUE TUBULAR
100,000 ω
TONE-CONTROL SWITCH
.004
.002
.001
350 ω
2nd DETECTOR PLATE CHOKE
⑰ ⑯ ⑮
TONE-CONTROL CONDENSER
"PHONE" CONDENSER
2nd DET. '32
500,000 ω
2nd DETECTOR SCREEN RESISTOR No. 2
RED & BLUE
100,000 ω
GRAY
30000 ω
2nd DETECTOR SCREEN BY-PASS
⑪ .1 mf
2nd DETECTOR GRID CIRCUIT BY-PASS
③ .3 mf
2nd DET. GRID TRIMMER
.0005 mf
I.F. PLATE TRIMMER
2nd DET.-I.F. TRANSFORMER
I.F. PLATE FILTER CONDENSER
⑭ .1 mf
I.F. PLATE FILTER CHOKE
66 ω
I.F. '32
LOCAL-DISTANCE RESISTOR
10000 ω
LOCAL-DISTANCE SWITCH
I.F. GRID CHOKE
350 ω
I.F. STOPPING CHOKE
66 ω
.0002 mf
I.F. STOPPING CONDENSER
1st DETECTOR PLATE CHOKE
84 ω
1st DETECTOR PLATE TRIMMER
1st DET. '32
1st DETECTOR SCREEN BY-PASS
⑬ .1 mf
OSCILLATOR PLATE CHOKE
89 ω
OSC. '30
OSCILLATOR GRID LEAK RED & BLUE
100,000 ω
OSCILLATOR GRID CONDENSER
.0002 mf
OSCILLATOR TRIMMER
DOUBLE-SPOT TRIMMER
TRIMMER No. 1
1st DET. GRID CIRCUIT BY-PASS
⑦ .1 mf
No. 3 R.F.T.
No. 2 R.F.T.
1st DETECTOR FILTER CHOKE
66 ω
R.F. PLATE CHOKE
89 ω
R.F.-1st DETECTOR STOPPING CONDENSER
.0002 mf
R.F. '32
R.F.-I.F. SCREEN BY-PASS
⑥ .1 mf
R.F. GRID CIRCUIT BY-PASS
⑤ .1 mf
ANTENNA TRIMMER
No. 1 R.F.T.
G
YELLOW
RED
OSCILLATOR PLATE FILTER CONDENSER GREEN
BLUE
BLACK
OSCILLATOR TRANSFORMER
TRACKING CONDENSER
⑩ .00145 mf.
BROWN +135
RED +A
WHITE -15
YELLOW -3
GREEN-WITH-YEL.-TR. +67½
BLACK-WITH-GREEN-TR. +45
BLACK -A
BLACK-RED-TR. +C
GREEN -B
PERMANENT MAGNET ELECTRO-DYNAMIC SPEAKER
0.25 ω
OUTPUT TRANSFORMER
500 ω
SPEAKER PLUG

In some early 82-Q volume control//is shunted by 100,000 ohm resistor.

All bypass condensers are rated at 400 volts except tone control which is 100 volts

PEAK FREQUENCY 130 KC

Numbers in circles adjacent to bypass condensers correspond with numbers shown within multi-section bypass units on parts layout.

Voltage data on page 212

In some 82-Q receivers, the primary of the audio input transformer is connected as follows: Green to the plate, and white to the 1st-A. F. filter resistor.

Voltage reference to page 2-5

MODEL 82-Q
1st Type
Below serial
2,550,940

ATWATER KENT MFG. CO.

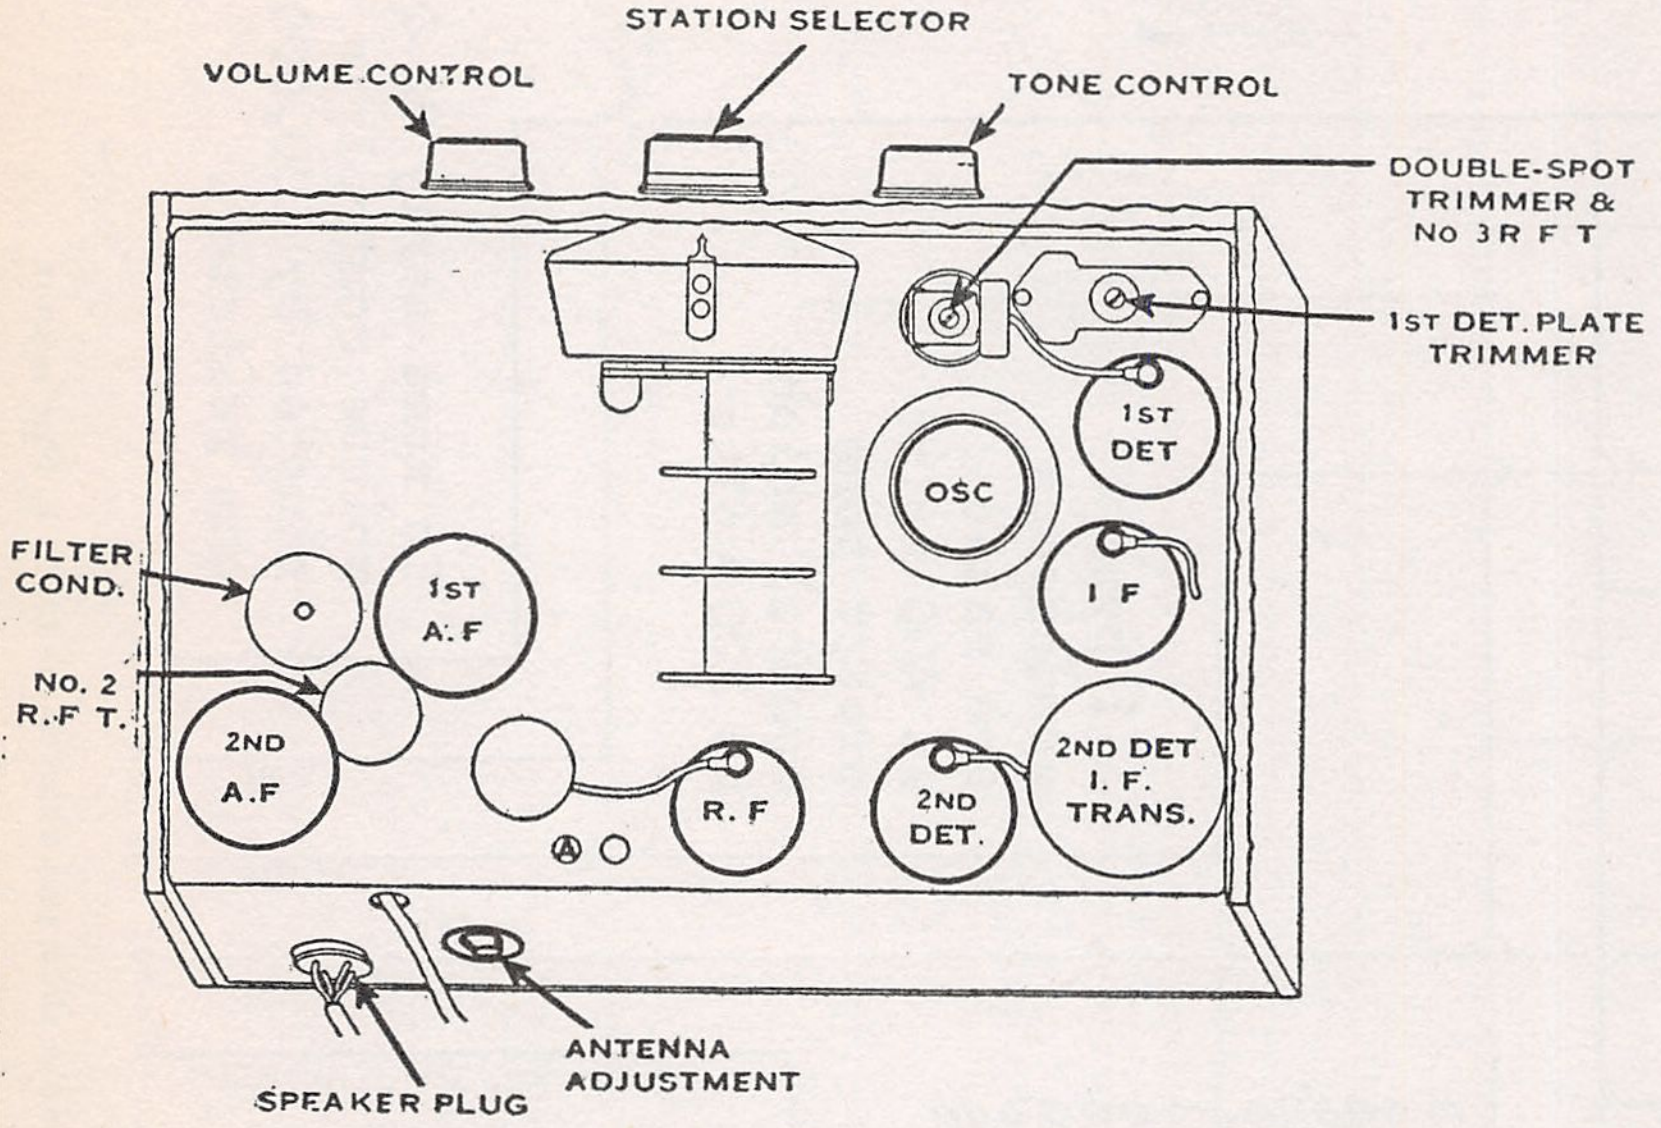
STATION SELECTOR
VOLUME CONTROL
TONE CONTROL
DOUBLE-SPOT TRIMMER & No 3 R F T
1ST DET. PLATE TRIMMER
1ST DET
OSC
I F
FILTER COND.
1ST A.F
NO. 2 R.F T.
2ND A.F
R.F
2ND DET.
2ND DET I. F. TRANS.
SPEAKER PLUG
ANTENNA ADJUSTMENT

TOP VIEW OF MODEL 82-Q.

RF Bypass # 1
# 21170
RF Bypass # 2
# 15262
RF Bypass #3
# 19150
RF Bypass # 4
# 15262
Tone Control
# 16490

By-pass Condensers in Model 82-Q

R. F. By-pass No. 1

1—Not used.
2—Quality condenser.
3—2nd-detector grid-circuit by-pass.

R. F. By-pass No. 2

4—+B filter condenser.
5—R. F. grid-circuit by-pass.
6—R. F.—I. F screen by-pass.
7—1st-detector grid-circuit by-pass.

R. F. By-pass No. 3

8—2nd-detector filter condenser.
9—2nd-detector—1st-A. F. coupling condenser.
10—Tracking condenser.

R. F. By-pass No. 4

11—2nd-detector screen by-pass.
12—1st-A. F. filter condenser.
13—1st-detector screen by-pass.
14—I. F. plate filter condenser.

Tone-control Condenser

15—Tone condenser.
16—Tone condenser.
17—Tone condenser.
18—Not used.

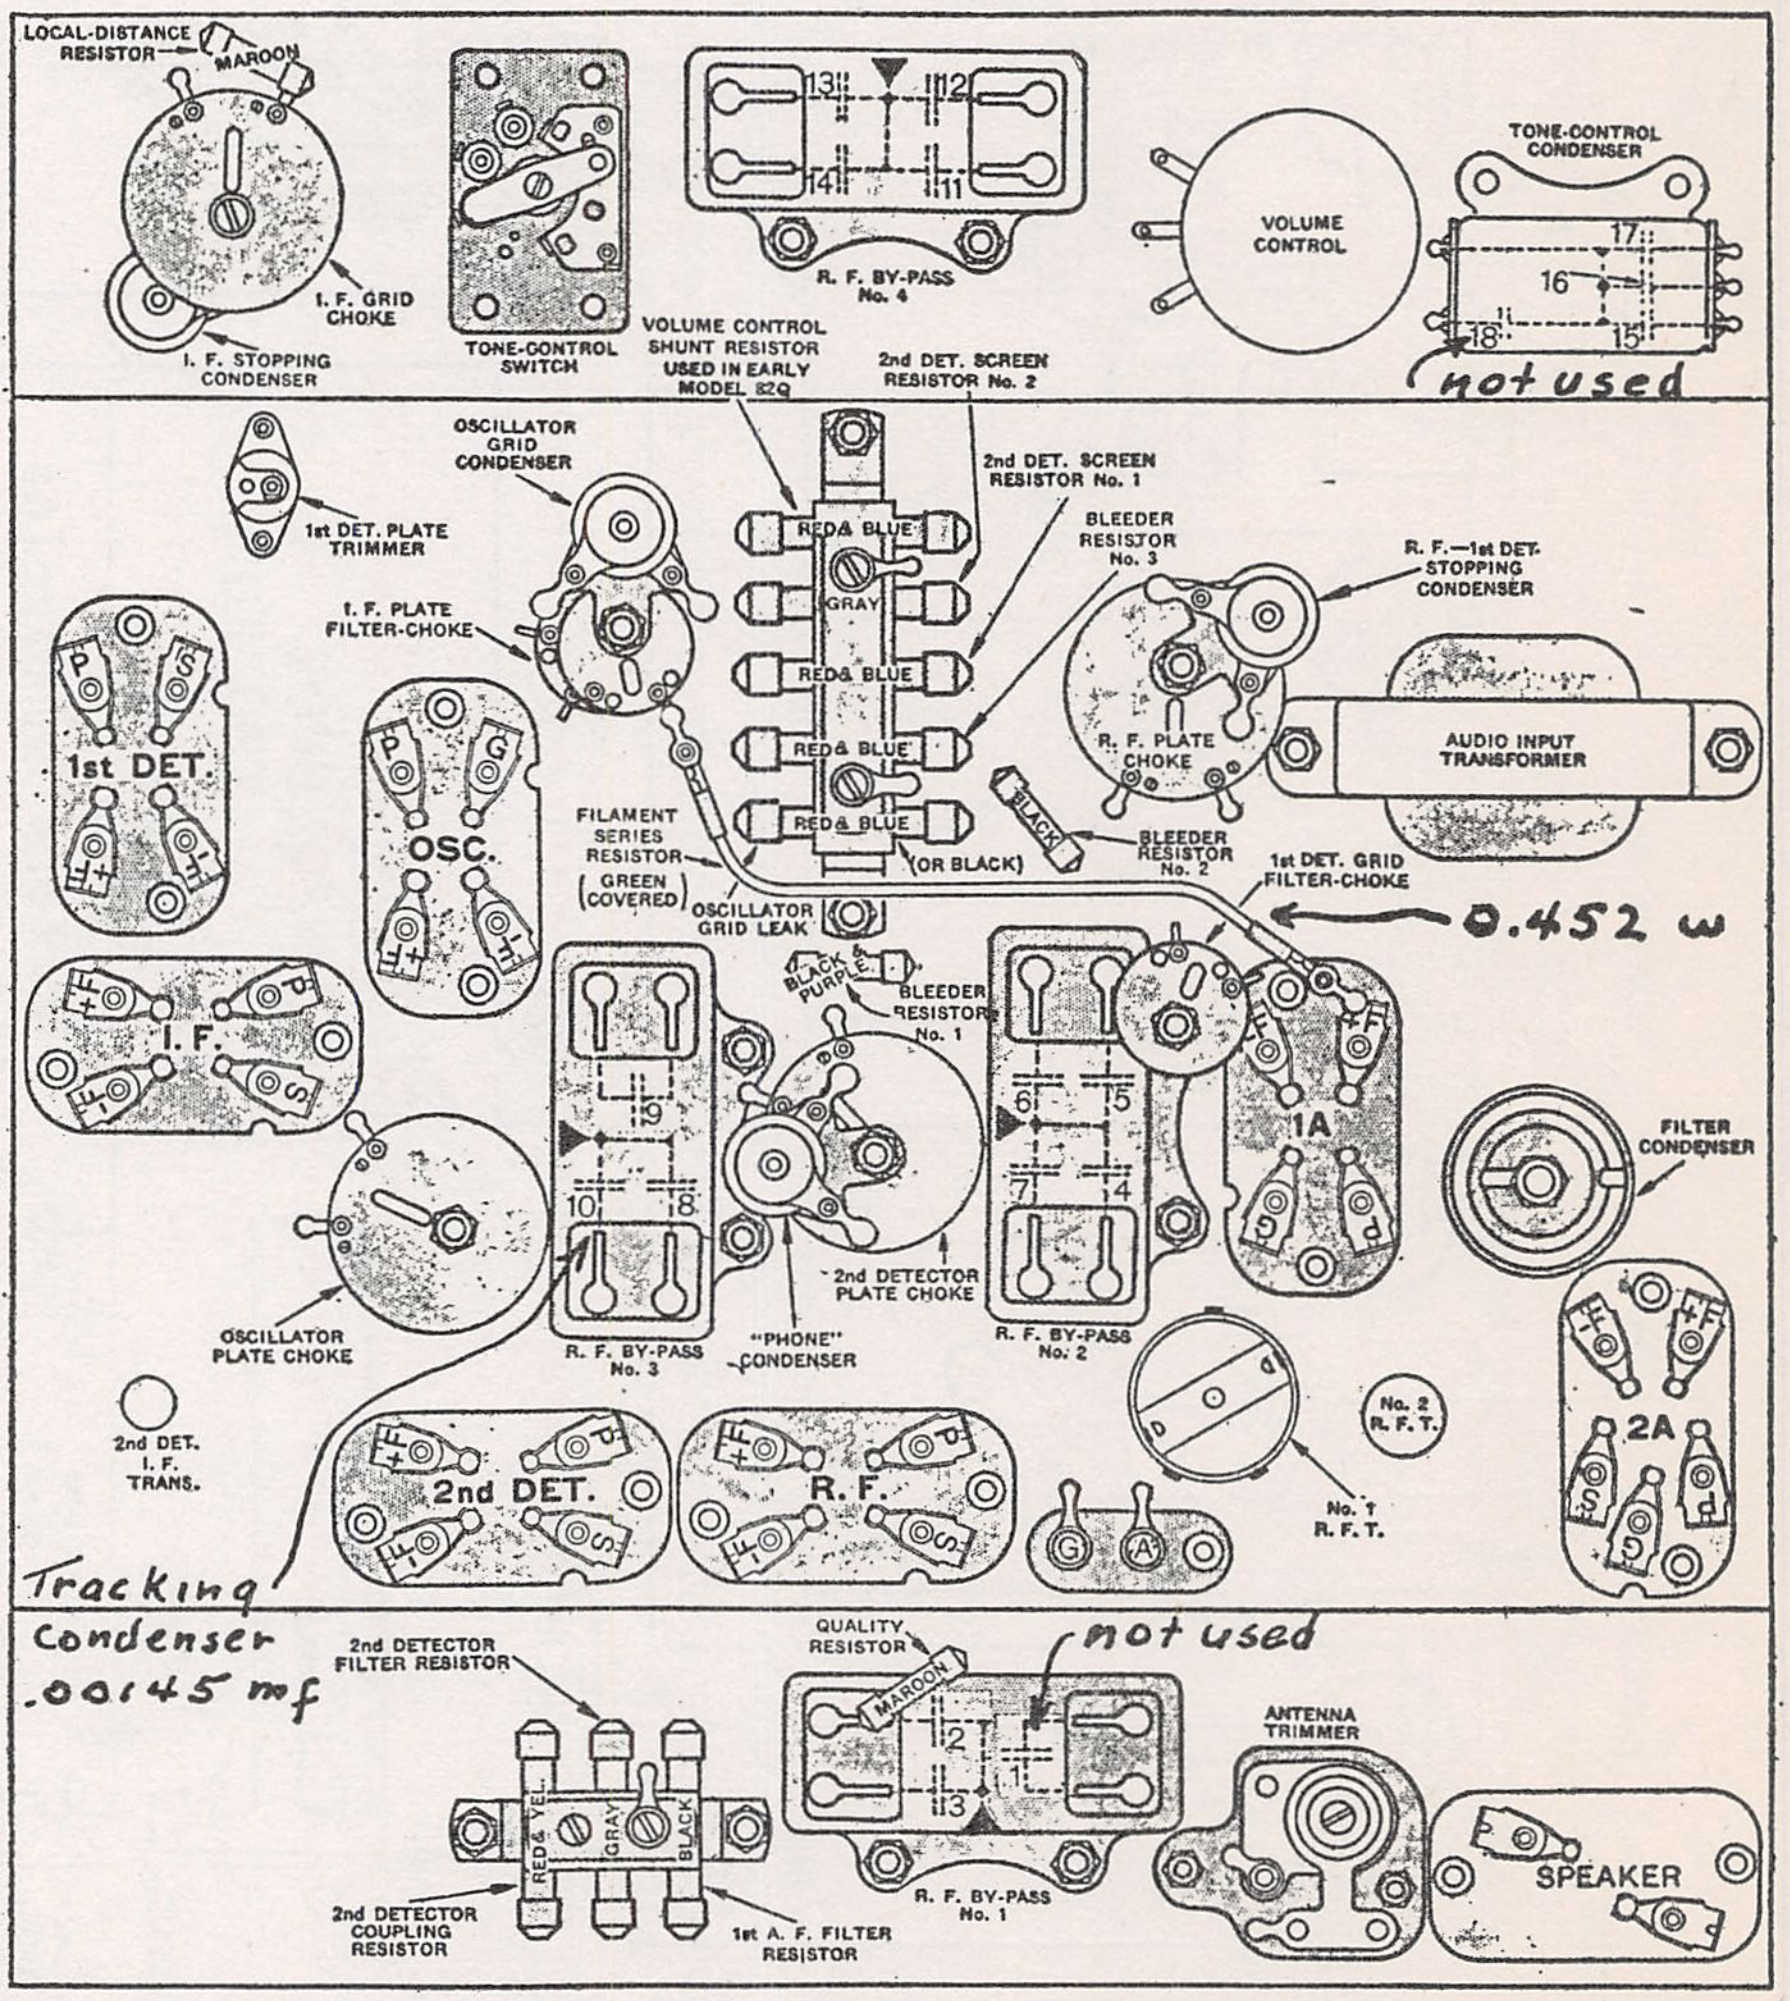
LOCAL-DISTANCE RESISTOR
MAROON
I. F. GRID CHOKE
I. F. STOPPING CONDENSER
TONE-CONTROL SWITCH
13
12
14
11
R. F. BY-PASS No. 4
VOLUME CONTROL SHUNT RESISTOR USED IN EARLY MODEL 82Q
2nd DET. SCREEN RESISTOR No. 2
VOLUME CONTROL
TONE-CONTROL CONDENSER
17
16
18
15
not used
1st DET. PLATE TRIMMER
OSCILLATOR GRID CONDENSER
2nd DET. SCREEN RESISTOR No. 1
BLEEDER RESISTOR No. 3
R. F.—1st DET. STOPPING CONDENSER
I. F. PLATE FILTER-CHOKE
RED & BLUE
GRAY
RED & BLUE
RED & BLUE
RED & BLUE
(OR BLACK)
R. F. PLATE CHOKE
AUDIO INPUT TRANSFORMER
BLACK
BLEEDER RESISTOR No. 2
1st DET.
P
S
+F
-F
OSC.
P
G
+F
-F
FILAMENT SERIES RESISTOR (GREEN COVERED)
OSCILLATOR GRID LEAK
1st DET. GRID FILTER-CHOKE
0.452 w
I. F.
+F
P
-F
S
BLACK & PURPLE
BLEEDER RESISTOR No. 1
9
10
8
6
5
7
4
1A
+F
-F
G
P
FILTER CONDENSER
OSCILLATOR PLATE CHOKE
R. F. BY-PASS No. 3
"PHONE" CONDENSER
2nd DETECTOR PLATE CHOKE
R. F. BY-PASS No. 2
No. 2 R. F. T.
No. 1 R. F. T.
2A
+F
-F
S
G
P
2nd DET. I. F. TRANS.
2nd DET.
+F
P
-F
S
R. F.
+F
P
-F
S
G
A
Tracking condenser .00145 mf
2nd DETECTOR FILTER RESISTOR
QUALITY RESISTOR
MAROON
not used
2
1
3
ANTENNA TRIMMER
RED & YEL.
GRAY
BLACK
2nd DETECTOR COUPLING RESISTOR
1st A. F. FILTER RESISTOR
R. F. BY-PASS No. 1
SPEAKER

CHART OF MODEL 82-Q.

ATWATER KENT MFG. CO.

VOLTAGE TABLE

FOR MODEL 80, 81, 82, 82-D, 82-Q, 83, 84, 84-D, 84-Q, 85, 85-Q, 86, 87 and 89

The voltages listed in this table are only approximate, and are measured values, not actual operating values. Turn volume control to maximum.

Use 250-volt scale of a 1000-ohm-per-volt D. C. voltmeter.

All plate, screen and grid measurements are made from cathode in heater-type tube, and from —F in plain-filament-type tube.

When replacing a tubular resistor, use a resistor of the same identifying color. In a few cases, owing to engineering changes, the color of a resistor in a chassis may not agree with the color specified in the diagram. In such a case, disregard the diagram and use a replacement resistor having the same color as the defective unit. However, if a resistor has been removed, or its identification destroyed, replace it with a resistor having the color that is specified in the diagram for that set.

		MODEL 80	MODEL 81	MODEL 82	MODEL 82-D	MODEL 82 Q	MODEL 83	MODEL 84	MODEL 84 D	MODEL 84 Q	MODEL 85	MODEL 85-Q	MODEL 86	MODEL 87	MODEL 89
	LINE VOLTAGE	110	—	110	112	—	110	110	120	—	110	—	115	110	110
	TOTAL "B" VOLTAGE	—	125	—	—	125	—	—	—	125	—	125	—	—	—
R. F. TUBE**	FILAMENT	—	5.5	—	—	2	—	—	—	2	—	—	2.4	2.4	2.4
	PLATE	—	125	—	—	125	—	—	—	125	—	—	125	170	125
	SCREEN	—	75	—	—	60	—	—	—	65	—	—	40	80	50
	GRID	—	SMALL	—	—	3	—	—	—	3	—	—	2	2	2
1ST DET. TUBE†	FILAMENT	2.4	5.5	2.4	5.5	2	2.4	2.4	5.7	2	2.4	2	2.4	2.4	2.4
	PLATE	225	95	135	70	125	225	205	80	125	135	125	125	160	120
	SCREEN	90	—	50	50	40	90	65	50	25	50	40	35	70	45
	GRID	5	7	4	5	3	5	6	5	3	3	3	4	11	4
I. F. TUBE	FILAMENT	2.4	—	2.4	6	2	2.4	2.4	6.5	2	2.4	2	2.4	2.4	2.4
	PLATE	230	—	140	95	125	230	215	105	125	135	125	125	170	125
	SCREEN	95	—	50	50	60	95	65	55	65	50	65	40	80	50
	GRID	2	—	SMALL	SMALL	3	2	3	SMALL	SMALL	2	3	2	2	2
2ND DET. TUBE	FILAMENT	2.4	—	2.4	5.5	2	2.4	2.4	5	2	2.4	2	2.4	2.4	2.4
	PLATE	110	—	105	55	45	110	90	55	60	100	40	95	90	120
	SCREEN	45	—	65	10	25	45	45	10	25	65	25	60	—	—
	GRID	5	—	8	2	3	5	6	1	3	7	3	8	SMALL	15
1ST A. F. TUBE	FILAMENT	2.4	5.5	2.4	5.5	2	2.4	2.4	6	2	2.4	2	2.4	2.4	2.4
	PLATE	230	120	230	75	55	230	205	80	55	215	55	210	90	120
	SCREEN	240	123	240	—	—	240	215	—	—	225	—	220	—	—
	GRID	4	11	5	3	3	4	5	2.5	3	5	3	5	3	4
2ND A. F. TUBE	FILAMENT	—	—	—	2	2	—	—	2	2	—	2	—	2.4	2.4
	PLATE	—	—	—	85	120	—	—	90	120	—	120	—	200	225
	SCREEN	—	—	—	90	125	—	—	95	125	—	125	—	210	235
	GRID	—	—	—	7	15	—	—	7	5	—	15	—	14	14
OSC. TUBE	FILAMENT	2.4	—	2.4	5	2	2.4	2.4	6	2	2.4	2	2.4	2.4	2.4
	PLATE	95	—	95	100	60	100	70	110	60	100	40	95	85	100
	GRID	*	—	*	*	*	*	*	*	*	*	*	*	*	*
CONTROL TUBE	FILAMENT	—	5 5	2.4	—	—	—	—	—	—	2.4	—	2.4	—	2.4
	PLATE	—	3	15	—	—	—	—	—	—	15	—	30	—	25
	SCREEN	—	—	8	—	—	—	—	—	—	7	—	7	—	5
	GRID	—	2	4	—	—	—	—	—	—	5	—	4	—	3

* The measured oscillator grid voltage will vary dependent on the capacity of the voltmeter leads. In some cases, the presence of the leads will stop oscillation and no reading will be secured for grid bias. In other cases, the reading will be only slight, or it may be as high as 10 volts.

**This includes the 1st, 2rd and 3rd R. F. tubes in Model 81. †This is the detector tube in Model 81.

MODEL 84,84-F
Early

ATWATER KENT MFG. CO.

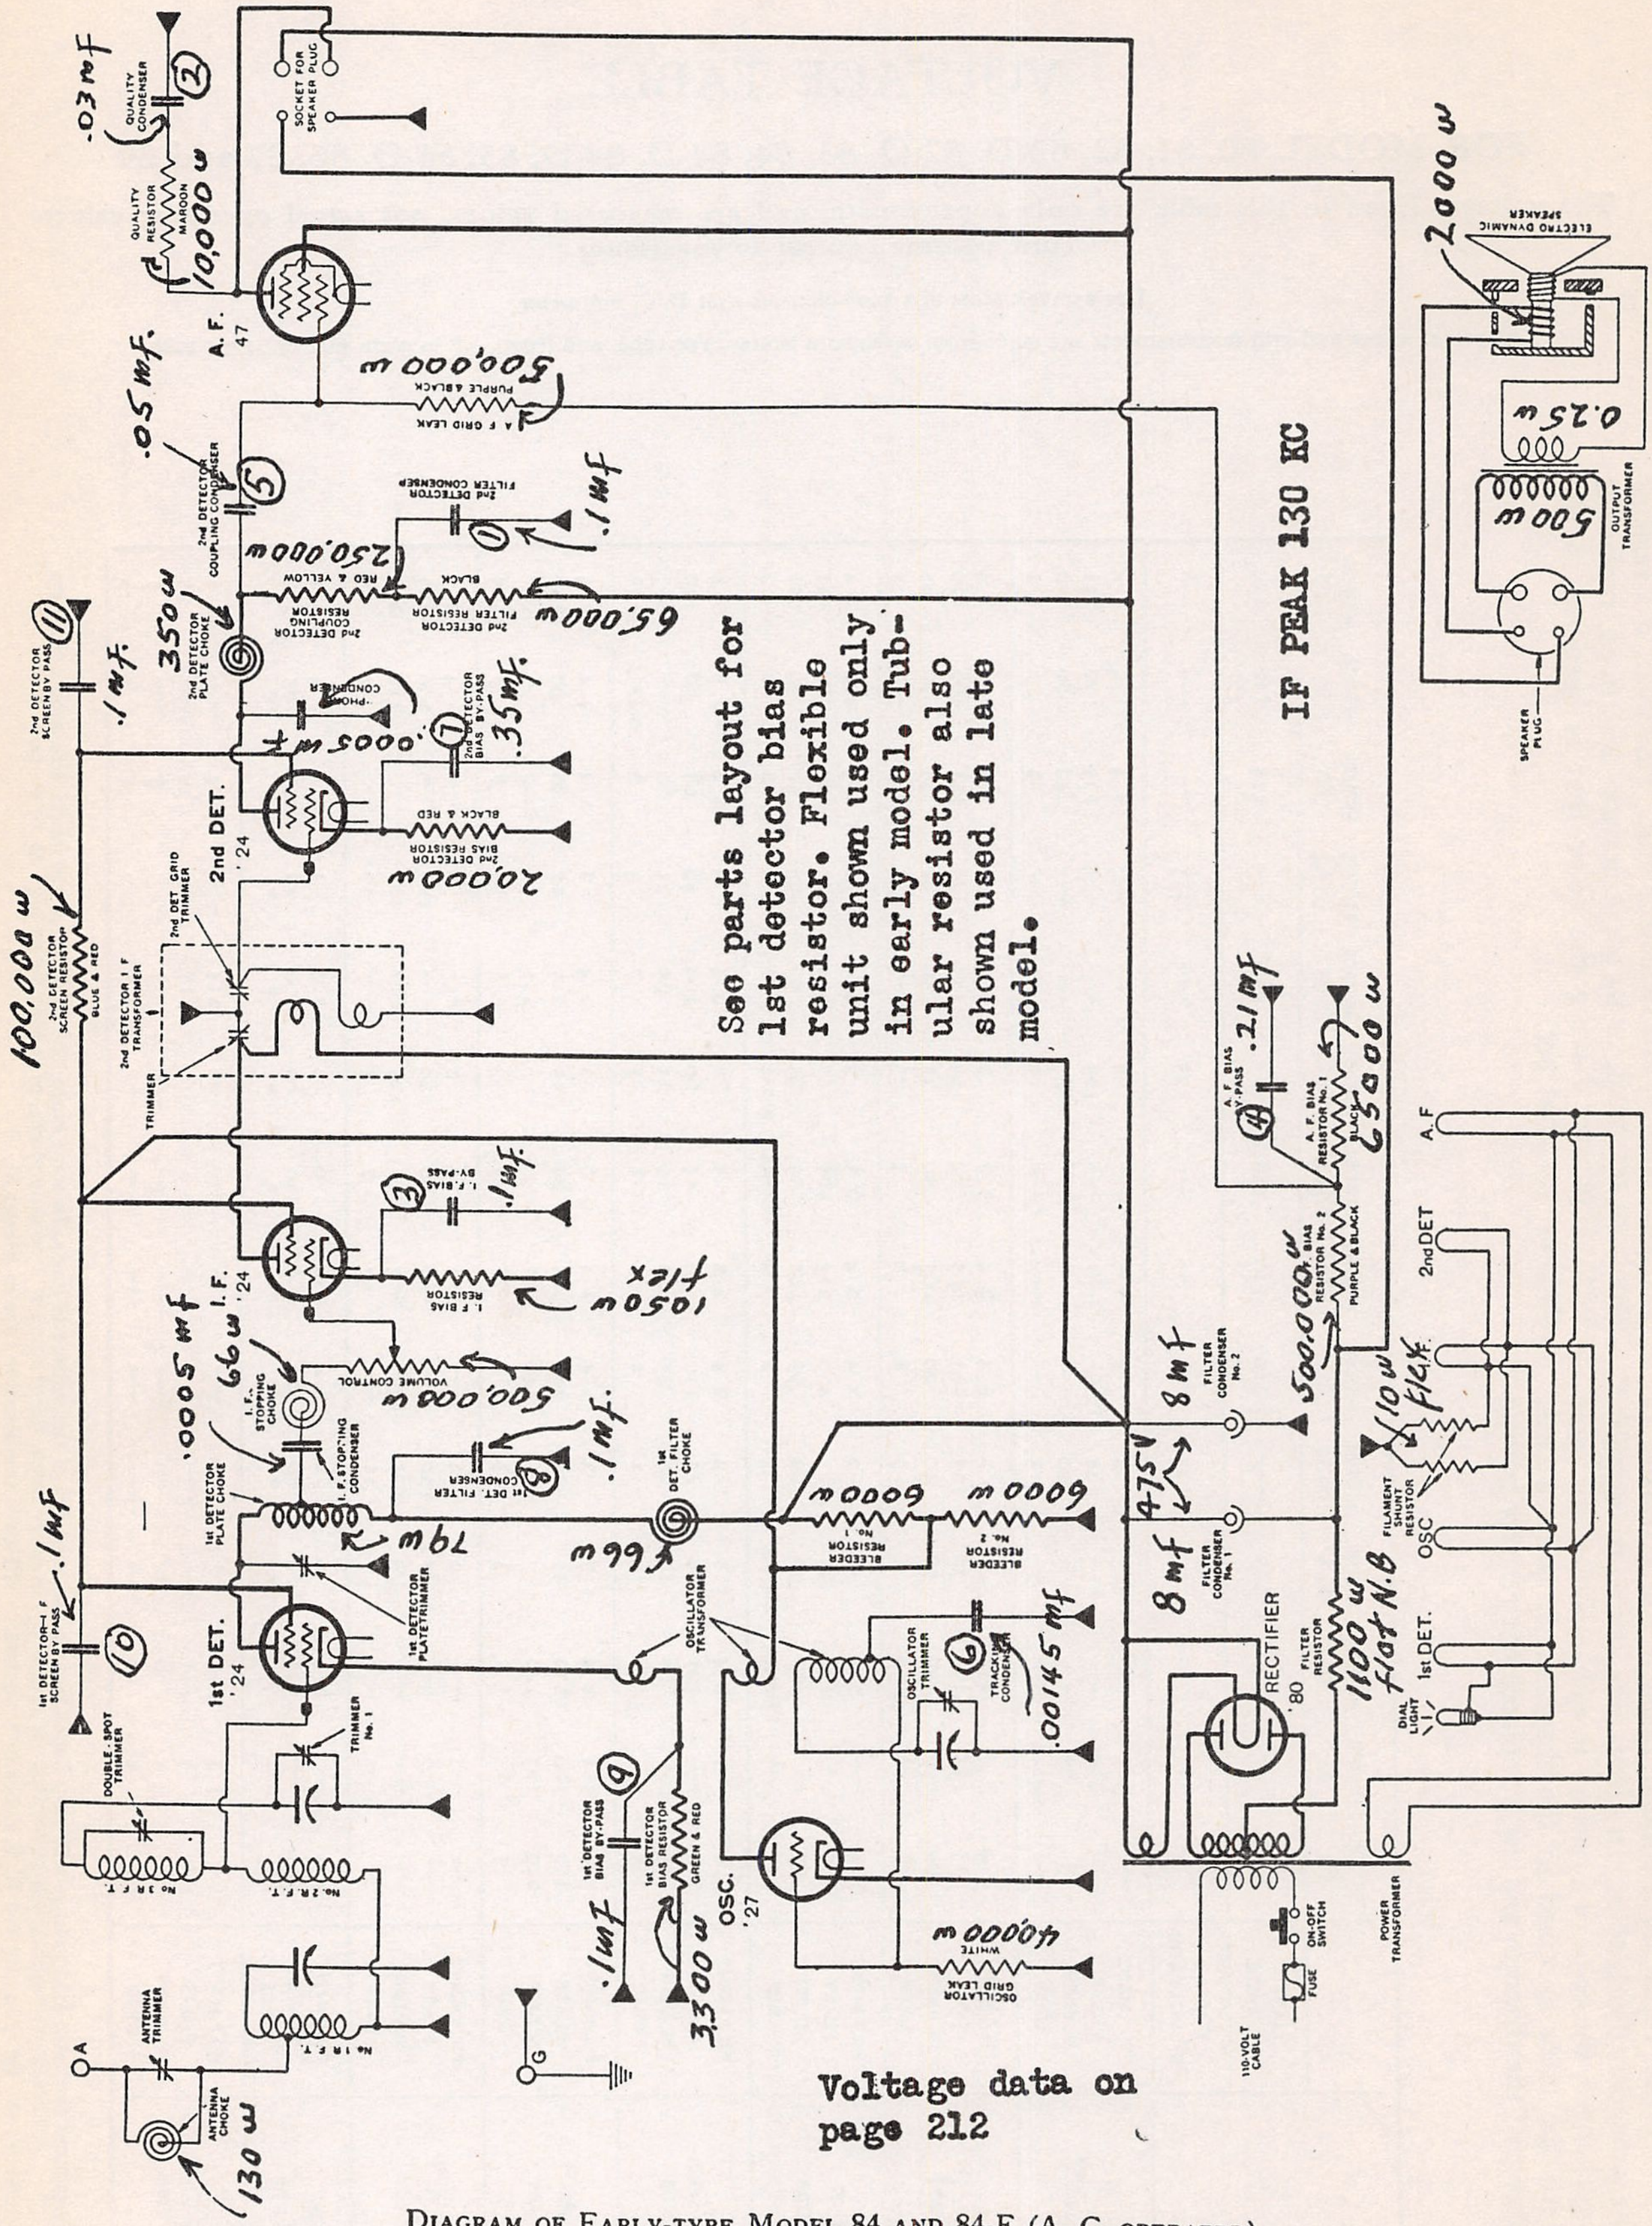

.03 mf
QUALITY CONDENSER
2
QUALITY RESISTOR MAROON
10,000 w
SOCKET FOR SPEAKER PLUG
A.F. 47
500,000 w
A F GRID LEAK PURPLE & BLACK
.05 mf
2nd DETECTOR COUPLING CONDENSER
5
2nd DETECTOR FILTER CONDENSER
1
.1 mf
250,000 w
2nd DETECTOR COUPLING RESISTOR RED & YELLOW
2nd DETECTOR FILTER RESISTOR BLACK
65,000 w
2nd DETECTOR SCREEN BY-PASS
11
.1 mf
350 w
2nd DETECTOR PLATE CHOKE
PHONO CONDENSER
.0005 mf
7
2nd DETECTOR BIAS BY-PASS
.35 mf
2nd DET. '24
2nd DETECTOR BIAS RESISTOR BLACK & RED
20,000 w
2nd DET. GRID TRIMMER
100,000 w
2nd DETECTOR SCREEN RESISTOR BLUE & RED
2nd DETECTOR I F TRANSFORMER
TRIMMER
3
I.F. BIAS BY-PASS
.1 mf
I.F. '24
I. F. BIAS RESISTOR
1050 w flex
.0005 mf
66 w
I.F. STOPPING CHOKE
VOLUME CONTROL
500,000 w
I. F. STOPPING CONDENSER
1st DET. FILTER CONDENSER
8
.1 mf
1st DET FILTER CHOKE
1st DETECTOR PLATE CHOKE
79 w
66 w
1st DETECTOR PLATE TRIMMER
1st DETECTOR-I F SCREEN BY PASS
10
.1 mf
1st DET. '24
DOUBLE-SPOT TRIMMER
TRIMMER No. 1
No. 3 R.F.T.
No. 2 R.F.T.
No. 1 R.F.T.
ANTENNA TRIMMER
A
ANTENNA CHOKE
130 w
G
1st DETECTOR BIAS BY-PASS
9
.1 mf
1st DETECTOR BIAS RESISTOR GREEN & RED
3300 w
OSC. '27
OSCILLATOR TRANSFORMER
BLEEDER RESISTOR No. 1
6000 w
BLEEDER RESISTOR No. 2
6000 w
OSCILLATOR TRIMMER
6
TRACKING CONDENSER
.00145 mf
OSCILLATOR GRID LEAK WHITE
40000 w
ELECTRO DYNAMIC SPEAKER
2000 w
0.25 w
500 w
OUTPUT TRANSFORMER
SPEAKER PLUG
A.F. BIAS BY-PASS
4
.21 mf
A.F. BIAS RESISTOR No. 1 BLACK
65000 w
BIAS RESISTOR No. 2 PURPLE & BLACK
500,000 w
FILTER CONDENSER No. 2
8 mf
475 V
FILTER CONDENSER No. 1
8 mf
RECTIFIER '80
FILTER RESISTOR
1100 w flat N.B
110 w flex
FILAMENT SHUNT RESISTOR
A.F
2nd DET
OSC
1st DET.
DIAL LIGHT
POWER TRANSFORMER
ON-OFF SWITCH
FUSE
110-VOLT CABLE

See parts layout for 1st detector bias resistor. Flexible unit shown used only in early model. Tubular resistor also shown used in late model.

IF PEAK 130 KC

Voltage data on page 212

Diagram of Early-type Model 84 and 84-F (A. C.-operated).

In Model 84-F, the filter resistor (connected in series with the center-tap of the high-voltage winding) is NOT used.

Voltage reference to page 2-5

ATWATER KENT MFG. CO.

MODEL 84, 84-F
Late

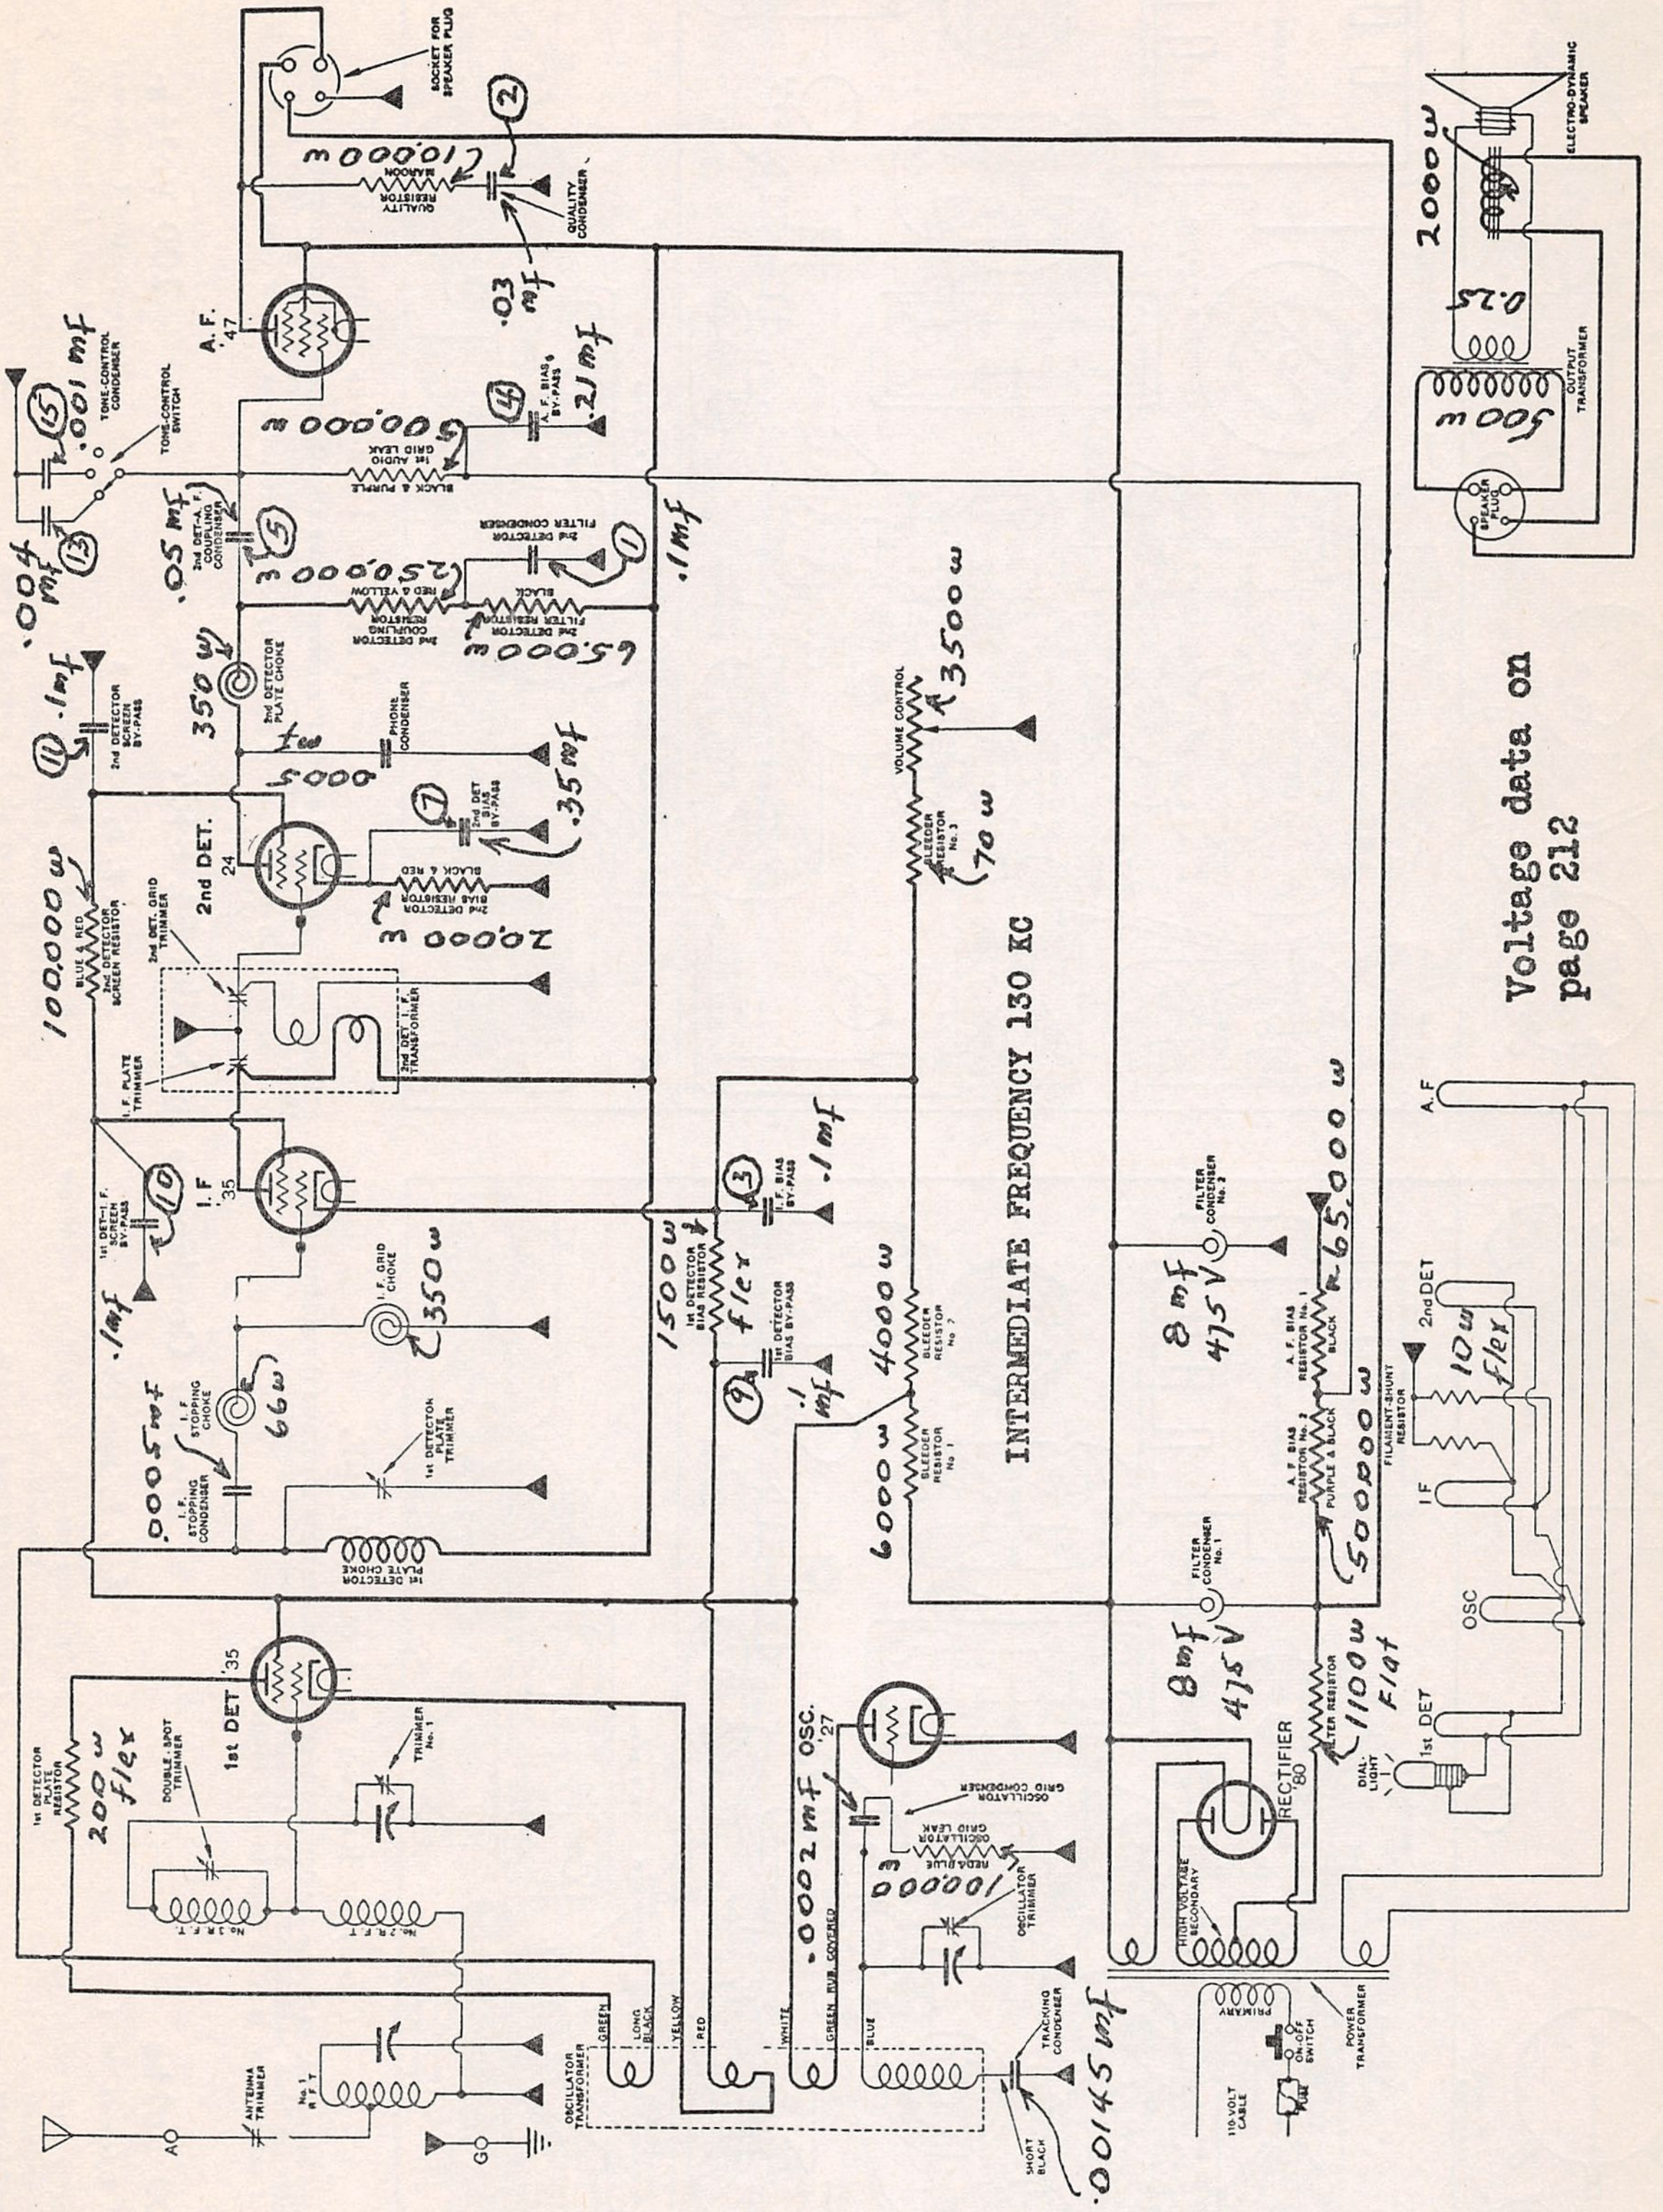
SOCKET FOR SPEAKER PLUG
②
10,000 w
QUALITY RESISTOR MAROON
QUALITY CONDENSER
.03 mf
A.F. 47
TONE-CONTROL CONDENSER
TONE-CONTROL SWITCH
⑮
.001 mf
.004 mf
⑬
500,000 w
1st AUDIO GRID LEAK BLACK & PURPLE
④
A.F. BIAS BY-PASS
.21 mf
.05 mf
2nd DET.-A.F. COUPLING CONDENSER
⑤
250,000 w
2nd DETECTOR COUPLING RESISTOR RED & YELLOW
2nd DETECTOR FILTER CONDENSER
①
2nd DETECTOR FILTER RESISTOR BLACK
65,000 w
.1 mf
350 w
2nd DETECTOR PLATE CHOKE
.1 mf
2nd DETECTOR SCREEN BY-PASS
⑪
PHONE CONDENSER
.35 mf
⑦
2nd DET BIAS BY-PASS
2nd DETECTOR BIAS RESISTOR BLACK & RED
20,000 w
2nd DET. 24
100,000 w
2nd DETECTOR SCREEN RESISTOR BLUE & RED
2nd DET. GRID TRIMMER
I.F. PLATE TRIMMER
2nd DET. TRANSFORMER
VOLUME CONTROL
3500 w
BLEEDER RESISTOR No. 3
70 w
INTERMEDIATE FREQUENCY 130 KC
I.F. 35
1st DET-I.F. SCREEN BY-PASS
⑩
.1 mf
I.F. GRID CHOKE
350 w
1500 w
1st DETECTOR BIAS RESISTOR
flex
③
I.F. BIAS BY-PASS
.1 mf
1st DETECTOR BIAS BY-PASS
⑨
.1 mf
4000 w
BLEEDER RESISTOR No. 2
6000 w
BLEEDER RESISTOR No. 1
I.F. STOPPING CHOKE
66 w
.0005 mf
I.F. STOPPING CONDENSER
1st DETECTOR PLATE TRIMMER
1st DETECTOR PLATE CHOKE
1st DETECTOR PLATE RESISTOR
200 w
flex
1st DET. 35
DOUBLE-SPOT TRIMMER
TRIMMER No. 1
No. 3 R.F.T.
No. 2 R.F.T.
OSC. 27
OSCILLATOR GRID CONDENSER
OSCILLATOR GRID LEAK RED & BLUE
100,000 w
OSCILLATOR TRIMMER
.0002 mf
GREEN RUB. COVERED
ANTENNA TRIMMER
No. 1 R.F.T.
A
G
OSCILLATOR TRANSFORMER
GREEN
LONG BLACK
YELLOW
RED
WHITE
BLUE
TRACKING CONDENSER
SHORT BLACK
.00145 mf
FILTER CONDENSER No. 2
8 mf
475 V
A.F. BIAS RESISTOR No. 1 BLACK
65,000 w
A.F. BIAS RESISTOR No. 2 PURPLE & BLACK
50,000 w
FILTER CONDENSER No. 1
8 mf
475 V
FILTER RESISTOR
1100 w
flat
RECTIFIER '80
HIGH VOLTAGE SECONDARY
PRIMARY
ON-OFF SWITCH
110-VOLT CABLE
POWER TRANSFORMER
DIAL LIGHT
1st DET
OSC
I F
2nd DET
A F
FILAMENT-SHUNT RESISTOR
10 w
flex
ELECTRO-DYNAMIC SPEAKER
2000 w
0.25
OUTPUT TRANSFORMER
500 w
SPEAKER PLUG

Voltage data on page 212

DIAGRAM OF LATE-TYPE MODEL 84 AND 84-F (A. C.-OPERATED).
A few late-type Model 84 and 84-F receivers have slightly different oscillator transformers, as explained in the notes accompanying the parts list for these sets.
The filter resistor shown in the above diagram is NOT used in Model 84-F.
This set has a 1st-detector plate filter choke and condenser not shown in the diagram.

SPECIAL NOTE. Numerals within circles and adjacent to bypass condensers correspond with numbers marked within multi-section bypass condensers shown on parts layout. See next page.

MODELS 84, 84-F
Early and Late

ATWATER KENT MFG. CO.

MODEL 84, 84-F CHARTS

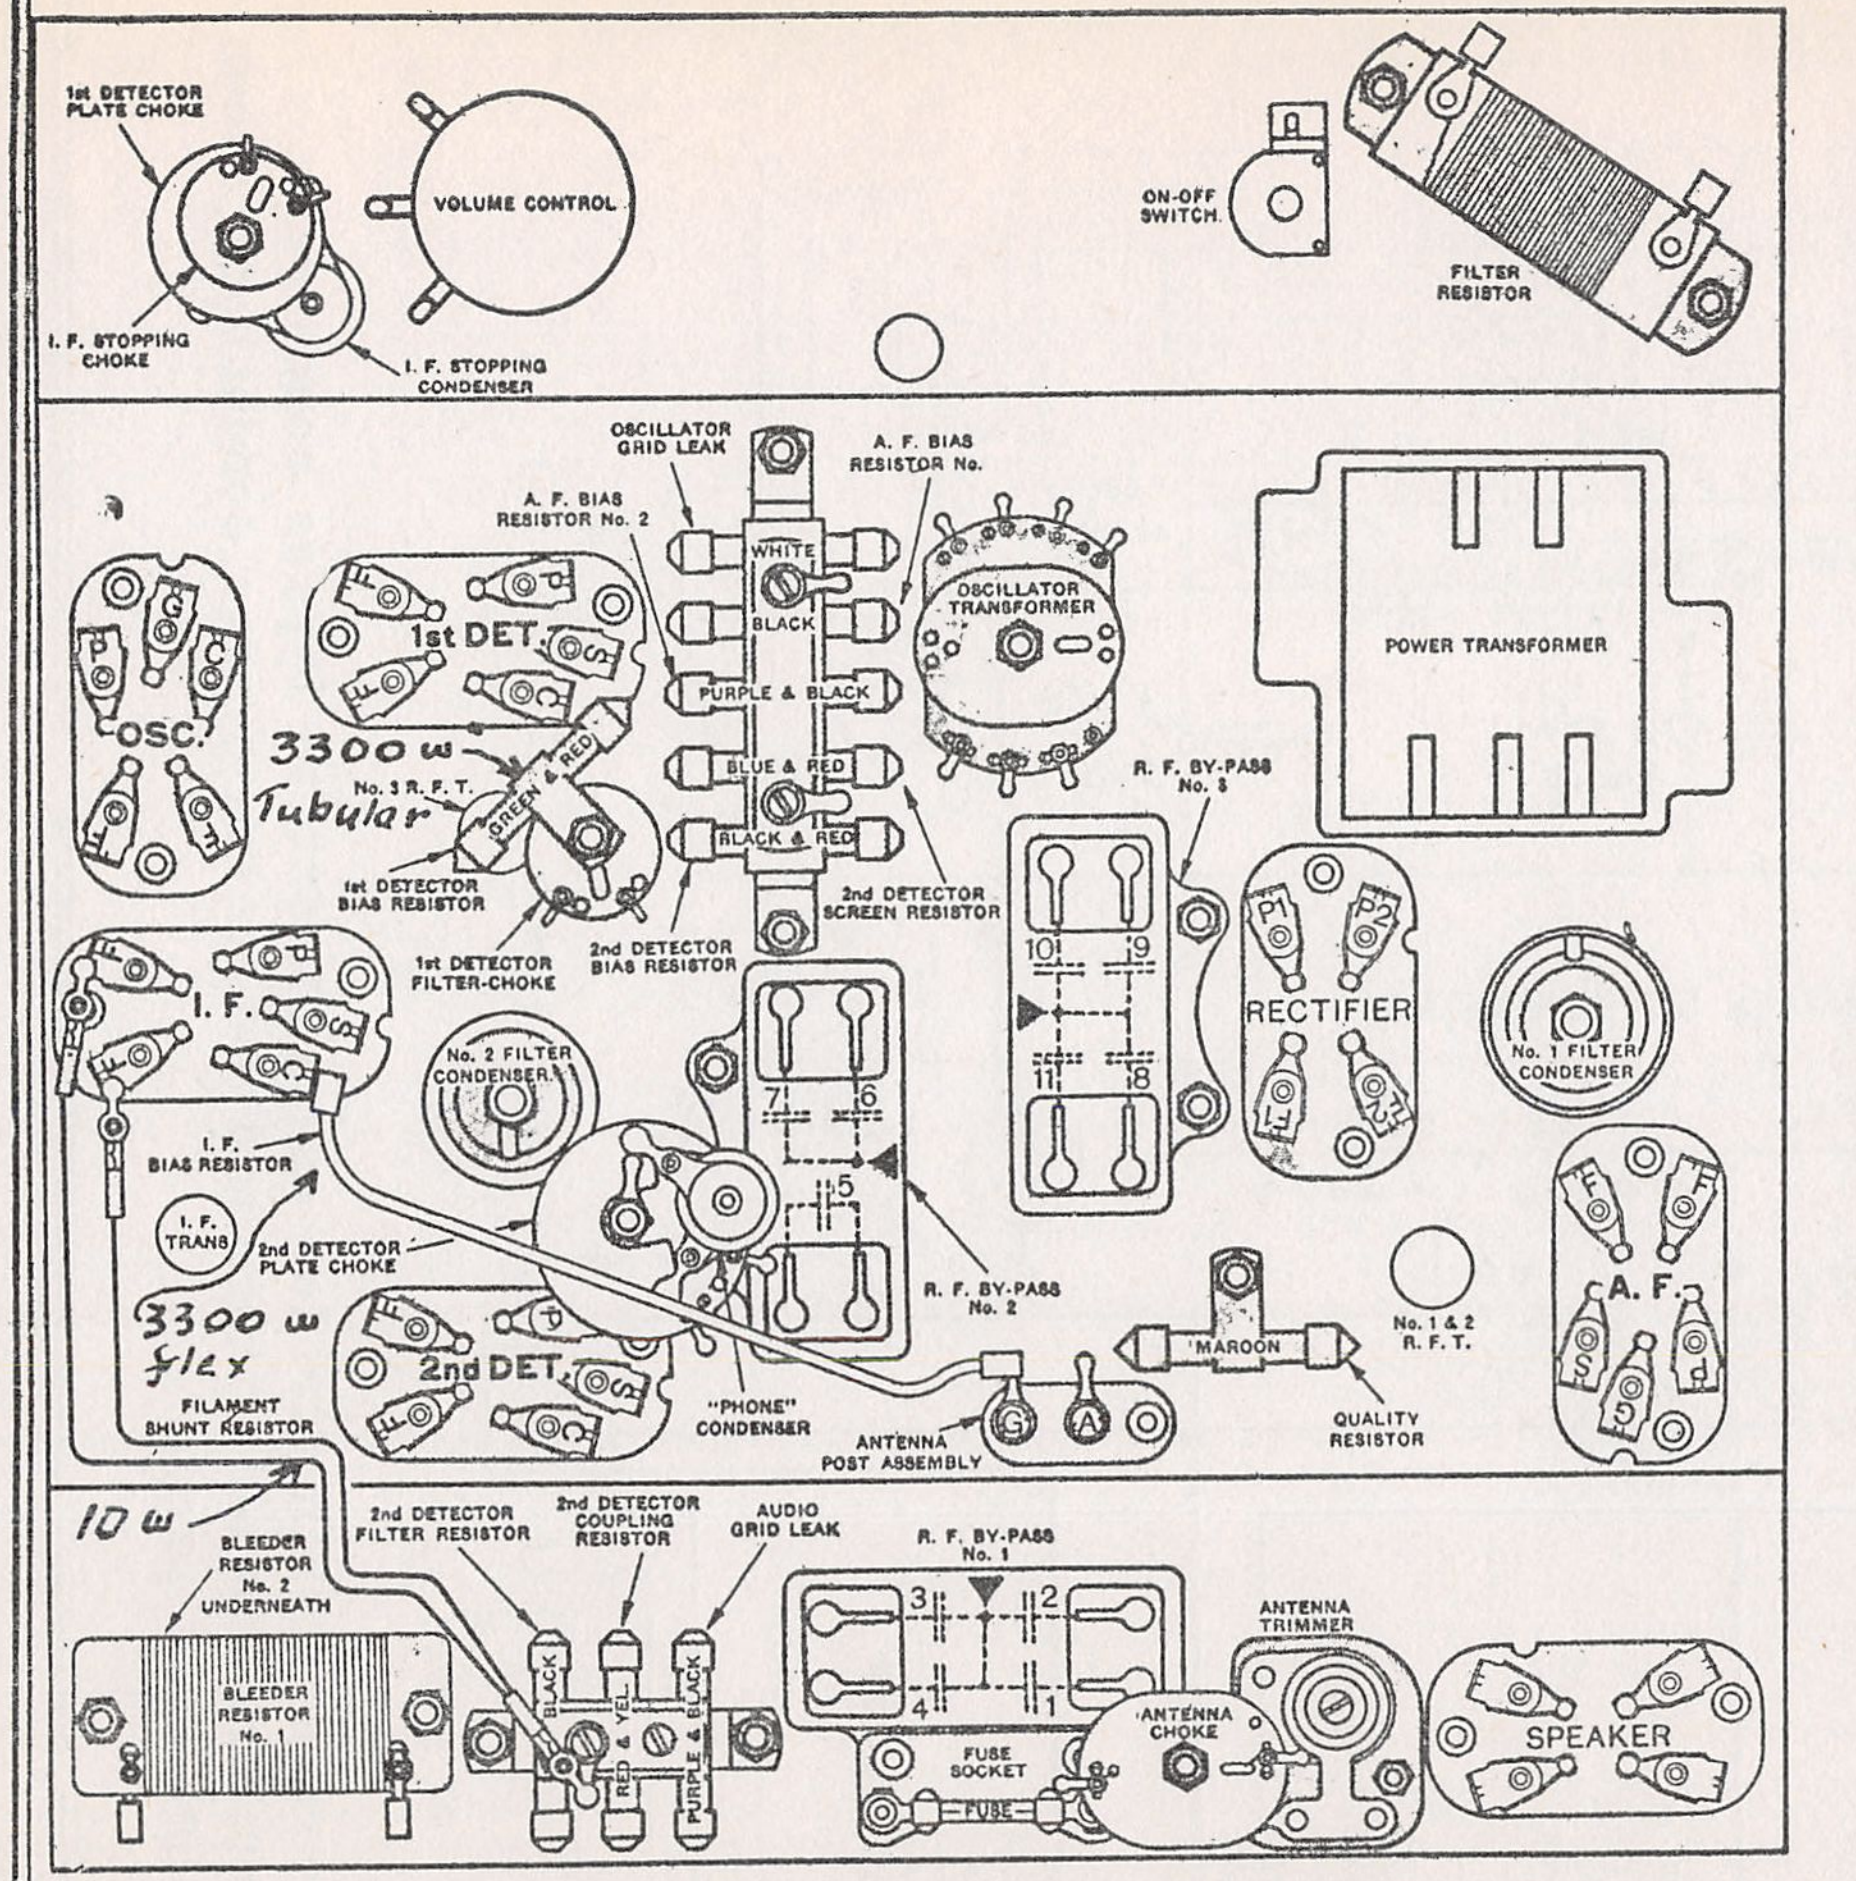
1st DETECTOR PLATE CHOKE
VOLUME CONTROL
I. F. STOPPING CHOKE
I. F. STOPPING CONDENSER
ON-OFF SWITCH
FILTER RESISTOR
OSCILLATOR GRID LEAK
A. F. BIAS RESISTOR No.
A. F. BIAS RESISTOR No. 2
WHITE
BLACK
PURPLE & BLACK
BLUE & RED
BLACK & RED
OSCILLATOR TRANSFORMER
POWER TRANSFORMER
OSC.
1st DET.
3300 w
Tubular
No. 3 R. F. T.
GREEN & RED
1st DETECTOR BIAS RESISTOR
1st DETECTOR FILTER-CHOKE
2nd DETECTOR BIAS RESISTOR
2nd DETECTOR SCREEN RESISTOR
R. F. BY-PASS No. 3
RECTIFIER
No. 1 FILTER CONDENSER
I. F.
No. 2 FILTER CONDENSER
I. F. BIAS RESISTOR
I. F. TRANS
2nd DETECTOR PLATE CHOKE
3300 w
flex
FILAMENT SHUNT RESISTOR
2nd DET.
"PHONE" CONDENSER
R. F. BY-PASS No. 2
ANTENNA POST ASSEMBLY
MAROON
No. 1 & 2 R. F. T.
QUALITY RESISTOR
A. F.
10 w
BLEEDER RESISTOR No. 2 UNDERNEATH
BLEEDER RESISTOR No. 1
2nd DETECTOR FILTER RESISTOR
2nd DETECTOR COUPLING RESISTOR
AUDIO GRID LEAK
RED & YEL
PURPLE & BLACK
R. F. BY-PASS No. 1
FUSE SOCKET
FUSE
ANTENNA CHOKE
ANTENNA TRIMMER
SPEAKER

CHART OF EARLY-TYPE MODEL 84, 84-F.

In some early-type Model 84, 84-F, the 1st-detector bias resistor is a flexible type, and the quality resistor is wire-wound. These are both superseded by the tubular resistors indicated above.
The filter-resistor at top-right is NOT used in any Model 84-F

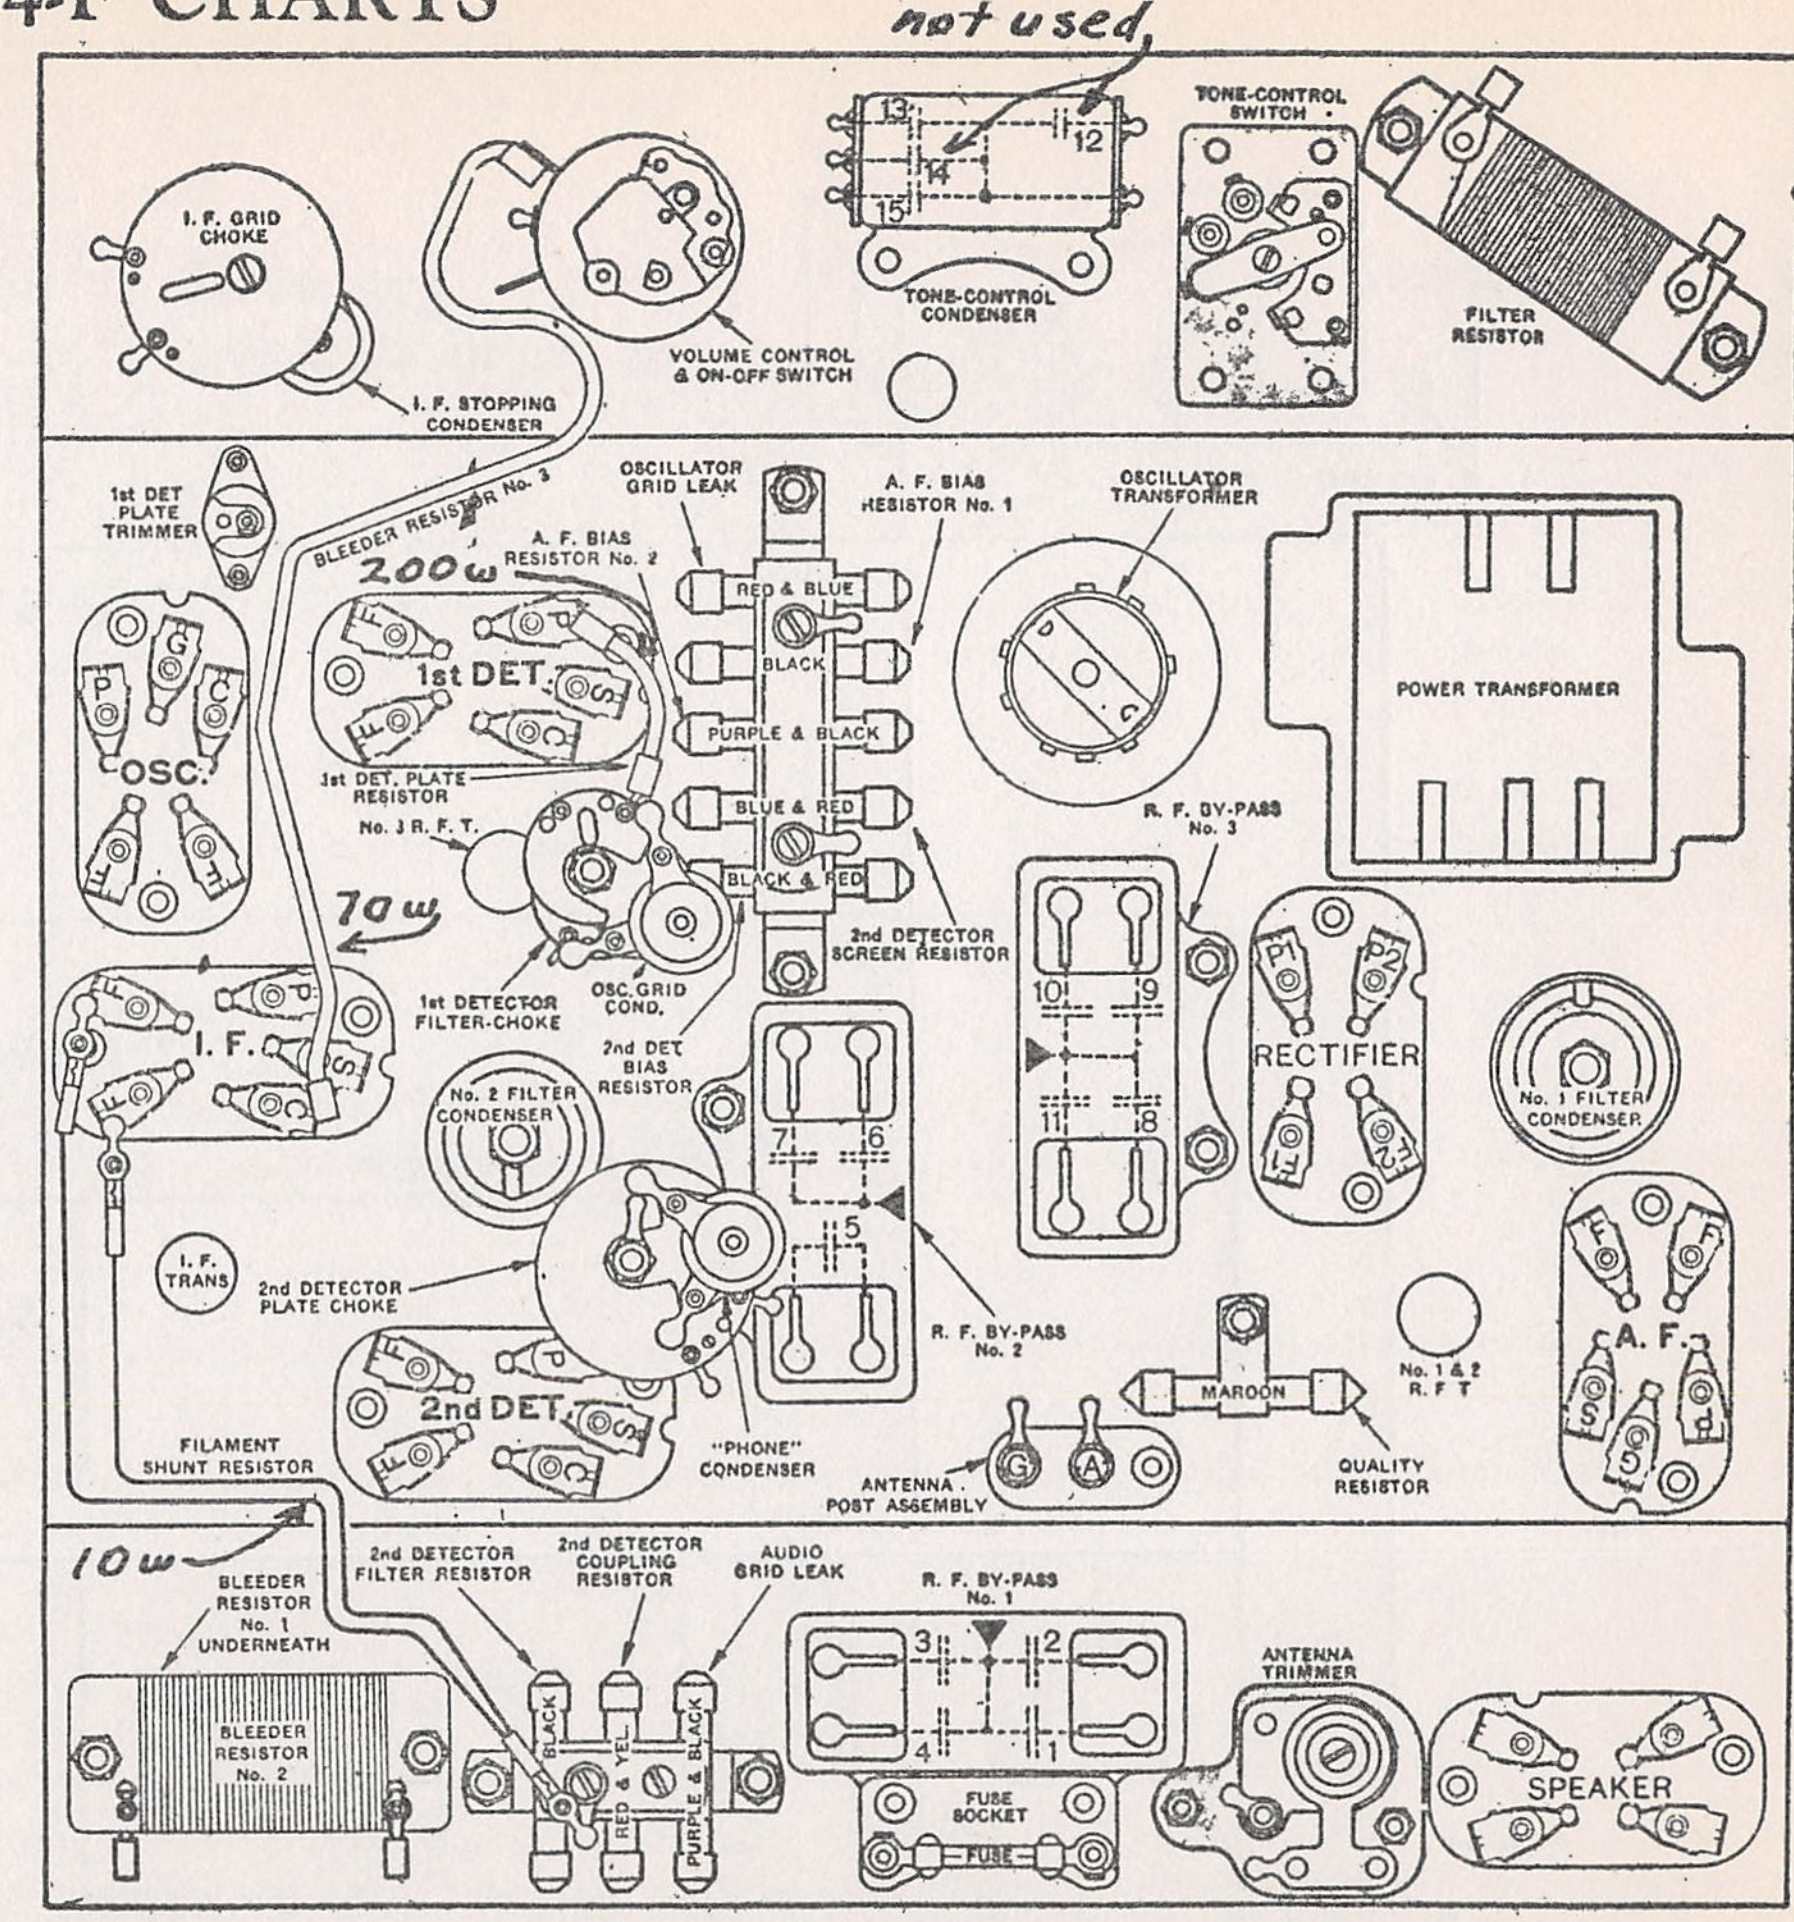
not used
I. F. GRID CHOKE
VOLUME CONTROL & ON-OFF SWITCH
I. F. STOPPING CONDENSER
TONE-CONTROL CONDENSER
TONE-CONTROL SWITCH
FILTER RESISTOR
1st DET PLATE TRIMMER
BLEEDER RESISTOR No. 3
200 w
A. F. BIAS RESISTOR No. 2
OSCILLATOR GRID LEAK
A. F. BIAS RESISTOR No. 1
RED & BLUE
BLACK
PURPLE & BLACK
BLUE & RED
BLACK & RED
OSCILLATOR TRANSFORMER
POWER TRANSFORMER
1st DET.
OSC.
1st DET. PLATE RESISTOR
No. 3 R. F. T.
70 w
1st DETECTOR FILTER-CHOKE
OSC. GRID COND.
2nd DET BIAS RESISTOR
2nd DETECTOR SCREEN RESISTOR
R. F. BY-PASS No. 3
RECTIFIER
No. 1 FILTER CONDENSER
I. F.
No. 2 FILTER CONDENSER
I. F. TRANS
2nd DETECTOR PLATE CHOKE
2nd DET.
"PHONE" CONDENSER
R. F. BY-PASS No. 2
FILAMENT SHUNT RESISTOR
ANTENNA POST ASSEMBLY
MAROON
No. 1 & 2 R. F. T
QUALITY RESISTOR
A. F.
10 w
BLEEDER RESISTOR No. 1 UNDERNEATH
BLEEDER RESISTOR No. 2
2nd DETECTOR FILTER RESISTOR
2nd DETECTOR COUPLING RESISTOR
AUDIO GRID LEAK
RED & YEL
PURPLE & BLACK
R. F. BY-PASS No. 1
FUSE SOCKET
FUSE
ANTENNA TRIMMER
SPEAKER

CHART OF LATE-TYPE MODEL 84, 84-F.

Some late-type Model 84, 84-F receivers have slightly different oscillator transformers and connections than indicated in the diagram When servicing such sets, carefully note and adhere to the original method of wiring. A flexible type 1st-detector bias resistor (not shown above) is connected from condenser 9 to condenser 3.

By-pass Condensers in Model 84, 84-F.

400 Volts

R. F. By-pass No. 1

1—2nd-detector filter condenser.
2—Quality condenser
3—I. F. bias by-pass.
4—A. F. bias by-pass.

R. F. By-pass No. 2

5—2nd-detector—A. F. coupling condenser
6—Tracking condenser
7—2nd-detector bias by-pass.

400 Volts

R. F. By-pass No. 3

8—1st-detector filter condenser.
9—1st-detector bias by-pass.
10—1st-detector—I. F. screen by-pass.
11—2nd-detector screen by-pass.

400 Volts

100 Volts

Tone-control Condenser
(used only in late type)

12—Not used.
13—Tone-control condenser.
14—Not used.
15—Tone-control condenser.

ATWATER KENT MFG. CO.

MODEL 84-Q
Early and Late

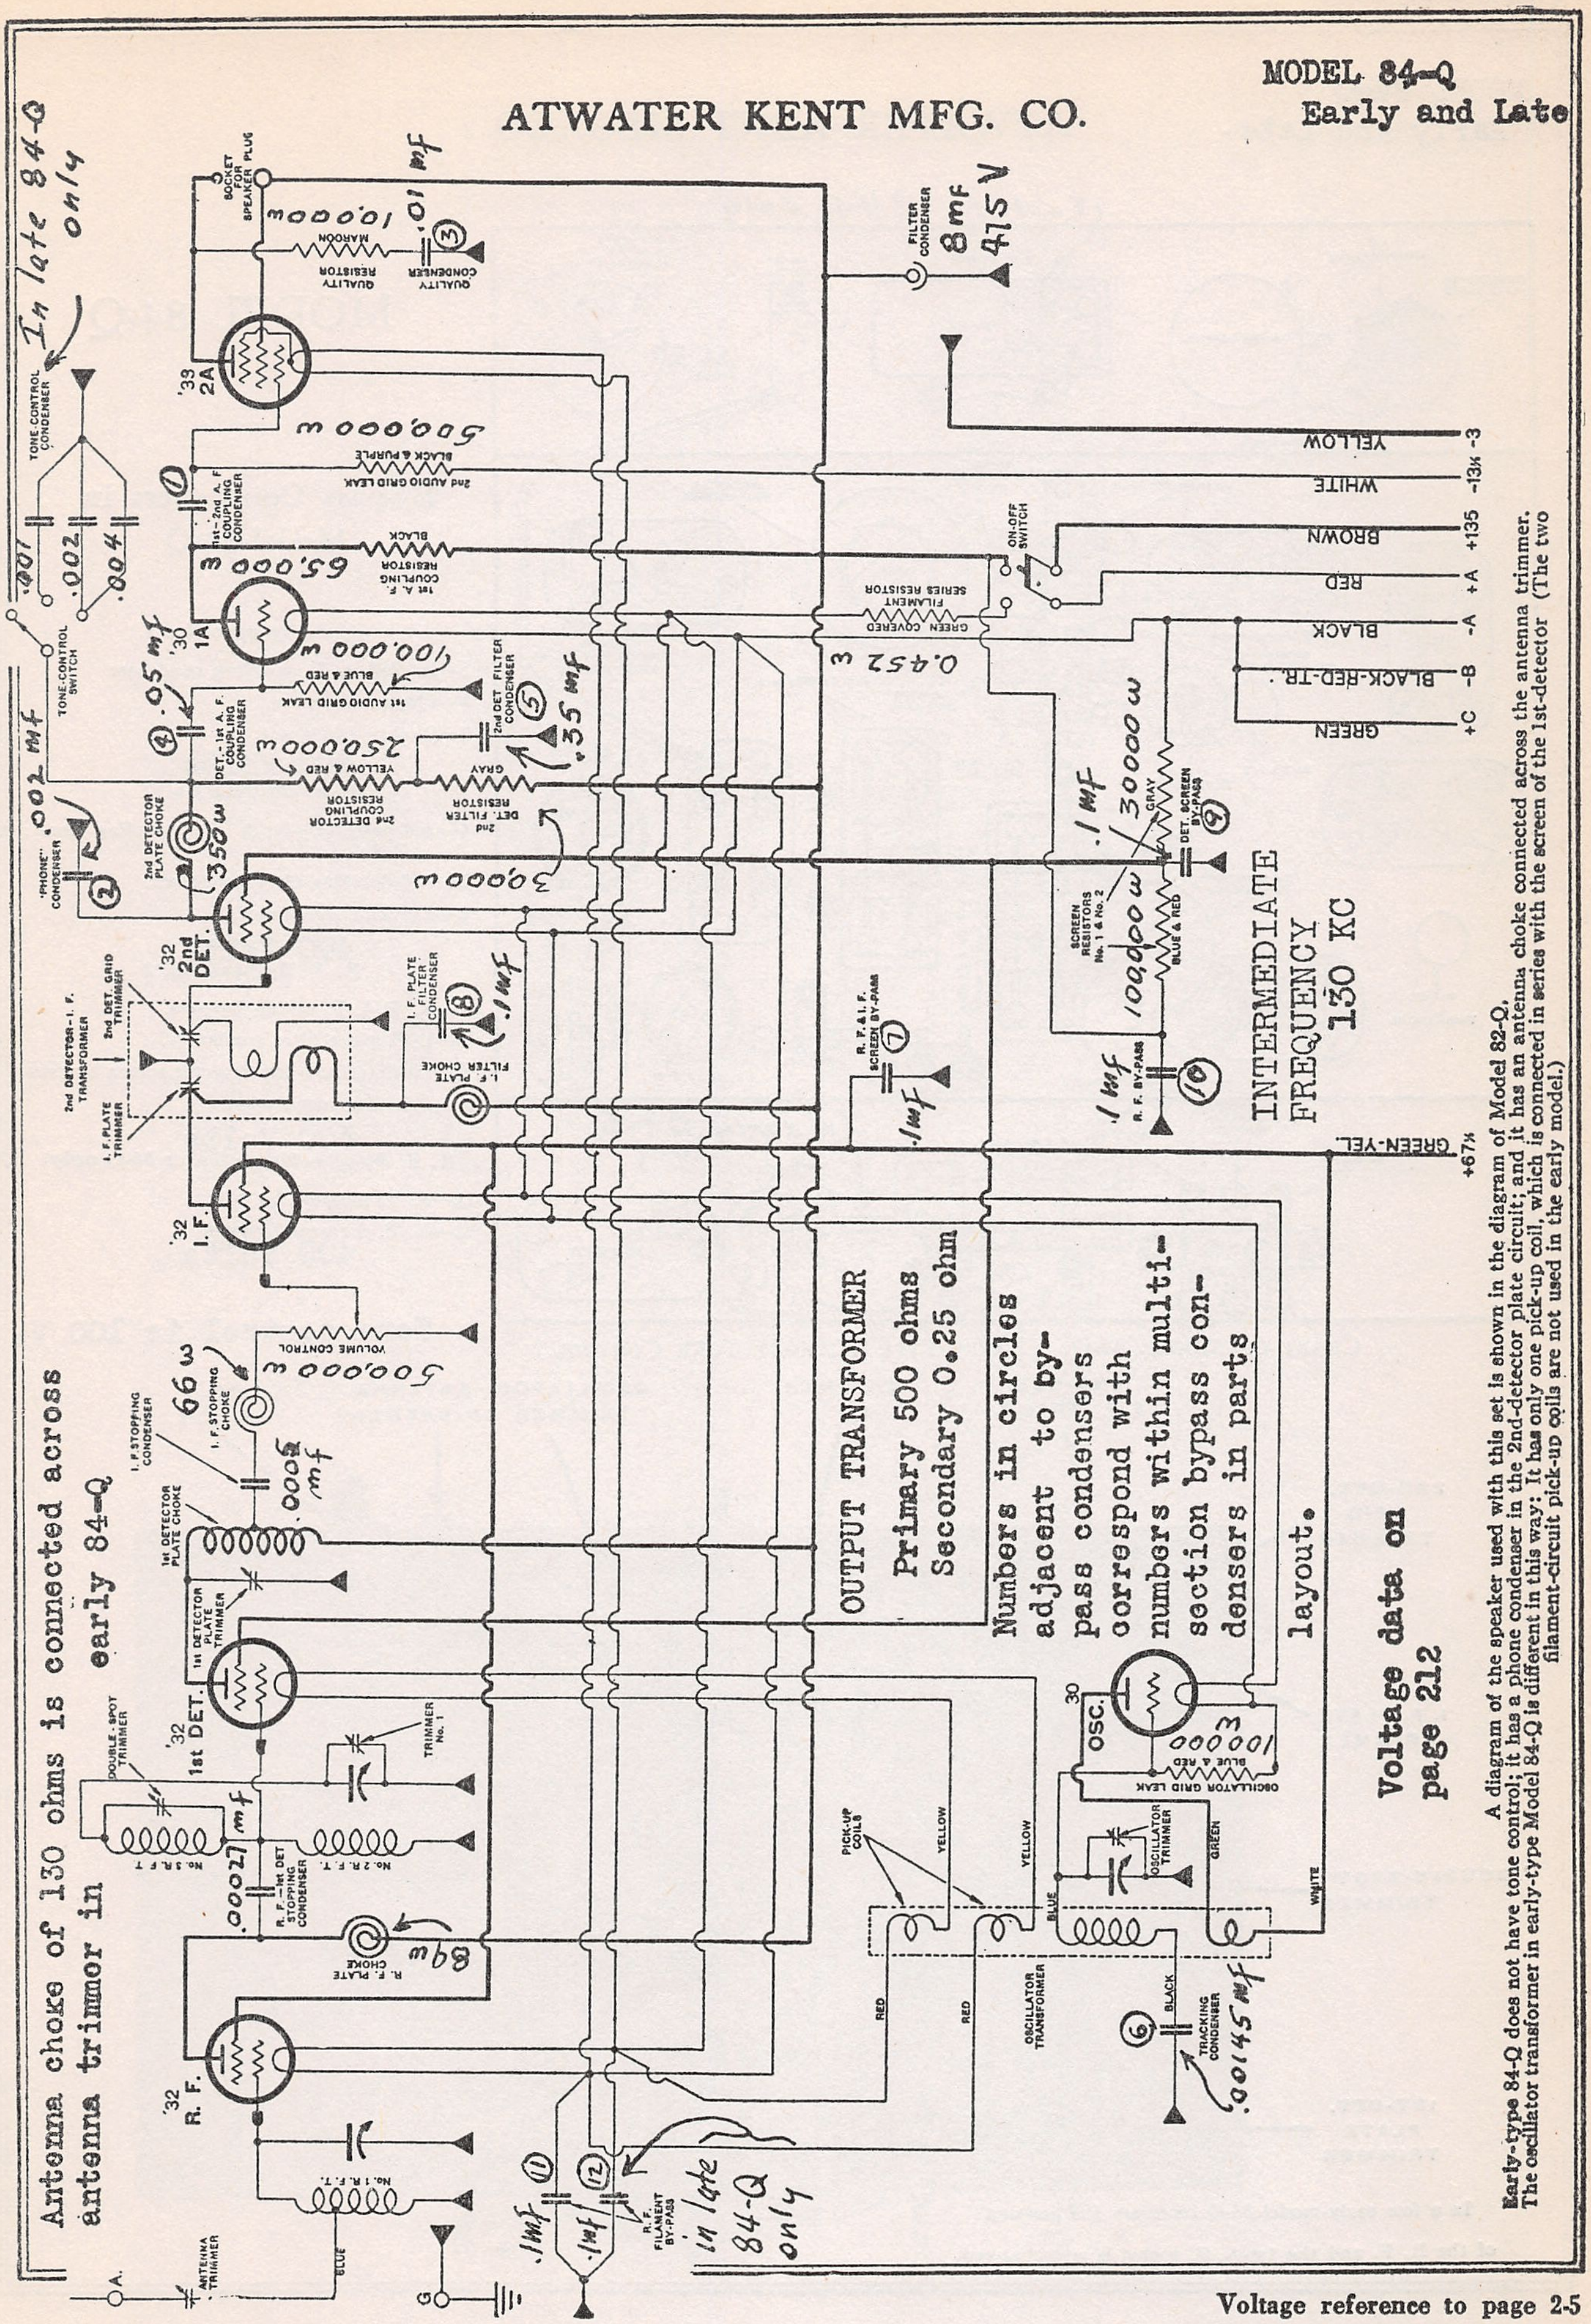
In late 84-Q only
TONE CONTROL CONDENSER
TONE CONTROL SWITCH
.001
.002
.004
SOCKET FOR SPEAKER PLUG
QUALITY RESISTOR
MAROON
10,0000
QUALITY CONDENSER
.01 mf
③
FILTER CONDENSER
8 mf
475V
'33 2A
2nd AUDIO GRID LEAK
BLACK & PURPLE
500,000 w
1st-2nd A. F. COUPLING CONDENSER
①
1st A. F. COUPLING RESISTOR
BLACK
65,000 w
'30 1A
ON-OFF SWITCH
FILAMENT SERIES RESISTOR
GREEN COVERED
0.452 w
1st AUDIO GRID LEAK
BLUE & RED
100,000 w
DET.-1st A. F. COUPLING CONDENSER
.05 mf
④
2nd DETECTOR COUPLING RESISTOR
YELLOW & RED
250,000 w
2nd DET. FILTER CONDENSER
.35 mf
⑤
2nd DET. FILTER RESISTOR
GRAY
30000 w
"PHONE" CONDENSER
.002 mf
②
2nd DETECTOR PLATE CHOKE
350 w
'32 2nd DET.
2nd DETECTOR-I. F. TRANSFORMER
2nd DET. GRID TRIMMER
I. F. PLATE TRIMMER
I. F. PLATE FILTER CONDENSER
.1 mf
⑧
I. F. PLATE FILTER CHOKE
R. F. & I. F. SCREEN BY-PASS
.1 mf
⑦
SCREEN RESISTORS No. 1 & No. 2
BLUE & RED
100,000 w
GRAY
30000 w
.1 mf
DET. SCREEN BY-PASS
⑨
R. F. BY-PASS
.1 mf
⑩
YELLOW -3
WHITE -13½
BROWN +135
RED +A
BLACK -A
BLACK-RED-TR. -B
GREEN +C
GREEN-YEL. +67½
'32 I. F.
VOLUME CONTROL
500,000 w
I. F. STOPPING CONDENSER
I. F. STOPPING CHOKE
66 w
.0005 mf
1st DETECTOR PLATE CHOKE
1st DETECTOR PLATE TRIMMER
'32 1st DET.
DOUBLE-SPOT TRIMMER
TRIMMER No. 1
No. 3 R. F. T.
No. 2 R. F. T.
R. F.-1st DET STOPPING CONDENSER
.00027 mf
R. F. PLATE CHOKE
84 w
'30 OSC.
OSCILLATOR GRID LEAK
BLUE & RED
10000 w
PICK-UP COILS
YELLOW
RED
BLUE
GREEN
WHITE
BLACK
OSCILLATOR TRIMMER
OSCILLATOR TRANSFORMER
TRACKING CONDENSER
⑥
.00145 mf
'32 R. F.
No. 1 R. F. T.
BLUE
A.
ANTENNA TRIMMER
G
⑪
⑫
.1 mf
.1 mf
R. F. FILAMENT BY-PASS
in late 84-Q only

Antenna choke of 130 ohms is connected across antenna trimmor in early 84-Q

INTERMEDIATE FREQUENCY 130 KC

OUTPUT TRANSFORMER
Primary 500 ohms
Secondary 0.25 ohm

Numbers in circles adjacent to by-pass condensers correspond with numbers within multi-section bypass condensers in parts layout.

Voltage data on page 212

A diagram of the speaker used with this set is shown in the diagram of Model 82-Q.

Early-type 84-Q does not have tone control; it has a phone condenser in the 2nd-detector plate circuit; and it has an antenna choke connected across the antenna trimmer. The oscillator transformer in early-type Model 84-Q is different in this way: It has only one pick-up coil, which is connected in series with the screen of the 1st-detector (The two filament-circuit pick-up coils are not used in the early model.)

Voltage reference to page 2-5

MODEL 84-Q
Early and Late.

ATWATER KENT MFG. CO.

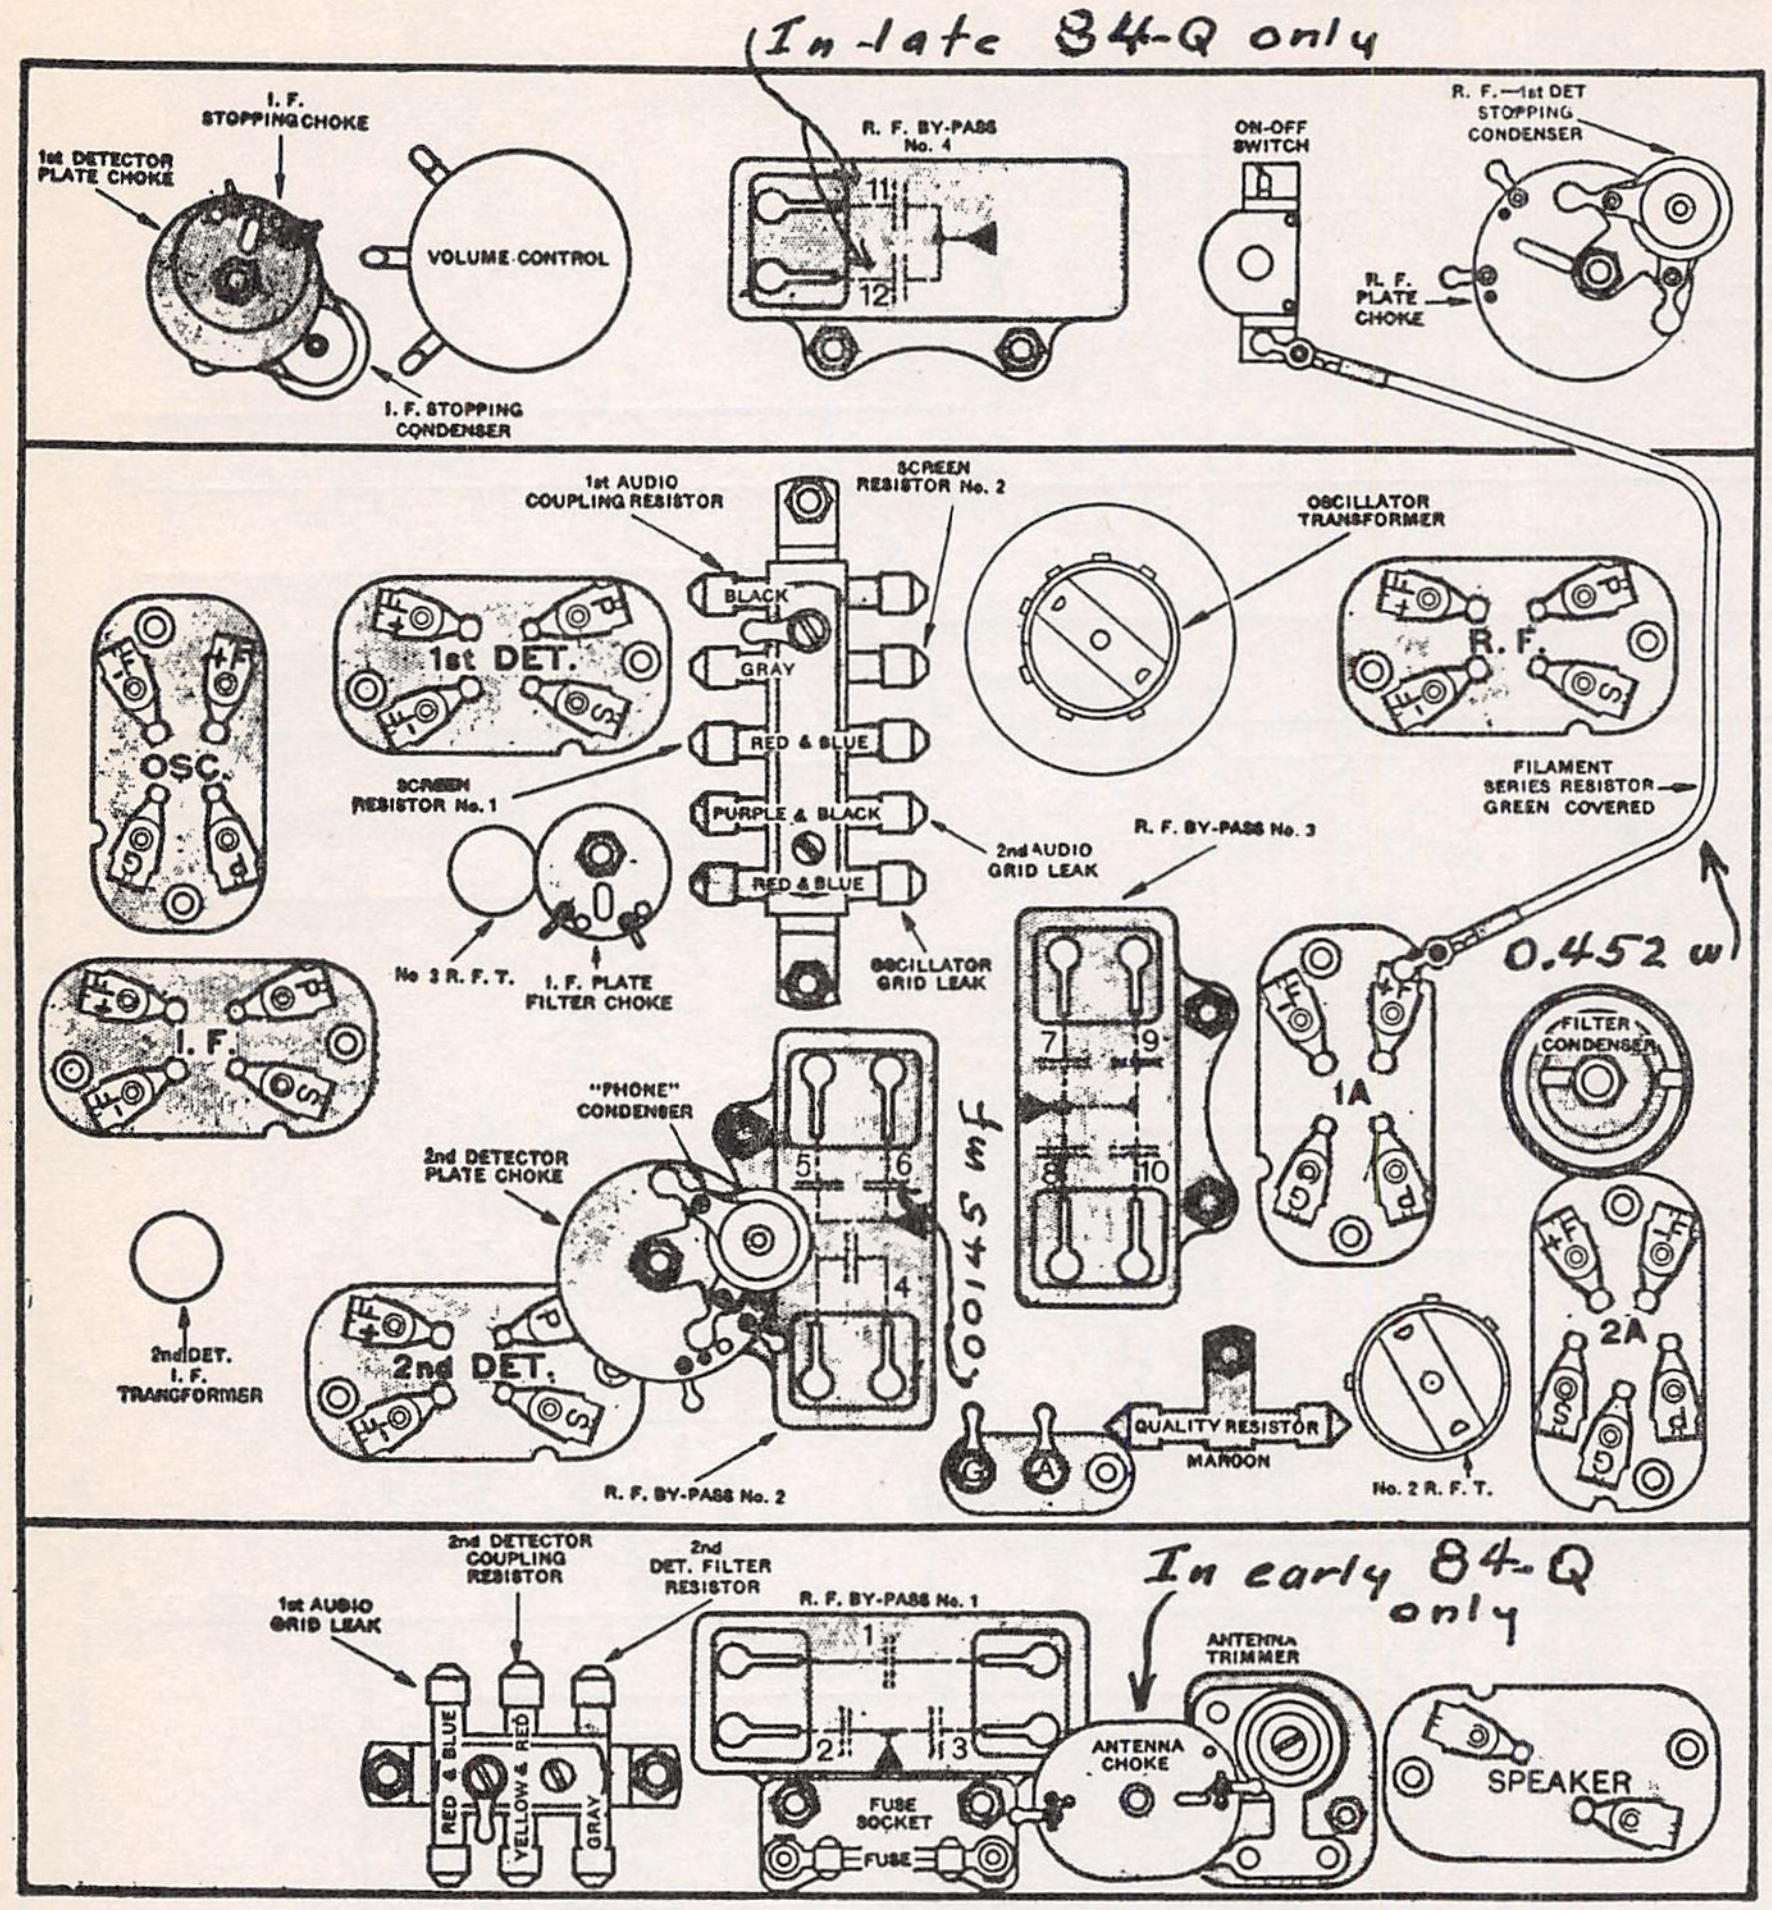
In late 84-Q only
I. F. STOPPING CHOKE
1st DETECTOR PLATE CHOKE
VOLUME CONTROL
I. F. STOPPING CONDENSER
R. F. BY-PASS No. 4
11
12
ON-OFF SWITCH
R. F.—1st DET STOPPING CONDENSER
R. F. PLATE CHOKE
1st AUDIO COUPLING RESISTOR
SCREEN RESISTOR No. 2
OSCILLATOR TRANSFORMER
BLACK
GRAY
RED & BLUE
PURPLE & BLACK
RED & BLUE
1st DET.
OSC.
R. F.
SCREEN RESISTOR No. 1
2nd AUDIO GRID LEAK
FILAMENT SERIES RESISTOR GREEN COVERED
R. F. BY-PASS No. 3
0.452 w
No 3 R. F. T.
I. F. PLATE FILTER CHOKE
OSCILLATOR GRID LEAK
I. F.
"PHONE" CONDENSER
2nd DETECTOR PLATE CHOKE
.00145 mf
5
6
4
7
9
8
10
1A
FILTER CONDENSER
2nd DET. I. F. TRANSFORMER
2nd DET.
QUALITY RESISTOR
MAROON
G
A
No. 2 R. F. T.
2A
R. F. BY-PASS No. 2
2nd DETECTOR COUPLING RESISTOR
2nd DET. FILTER RESISTOR
1st AUDIO GRID LEAK
R. F. BY-PASS No. 1
1
2
3
In early 84-Q only
ANTENNA TRIMMER
ANTENNA CHOKE
RED & BLUE
YELLOW & RED
GRAY
FUSE SOCKET
FUSE
SPEAKER

CHART OF MODEL 84-Q. (EARLY TYPE WITHOUT TONE CONTROL.)

MODEL 84-Q

By-pass Condensers in Model 84-Q

R. F. By-pass No. 1

1—1st-2nd A. F. coupling condenser
2—Phone condenser.
3—Quality condenser.

400 Volts

R. F. By-pass No. 2

4—2nd-detector—1st-A F. coupling condenser.
5—2nd-detector filter condenser.
6—Tracking condenser.

400 Volts

R. F By-pass No. 3

7—R. F.-I. F. screen by-pass.
8—I. F. plate filter condenser.
9—1st-detector—2nd-detector screen by-pass.
10—+B filter condenser.

400 Volts

R. F. By-pass No. 4 (Later 84-Q only)

11—R. F. filament by-pass.
12—R. F. filament by-pass.

400 Volts

Tone control is 100 V.

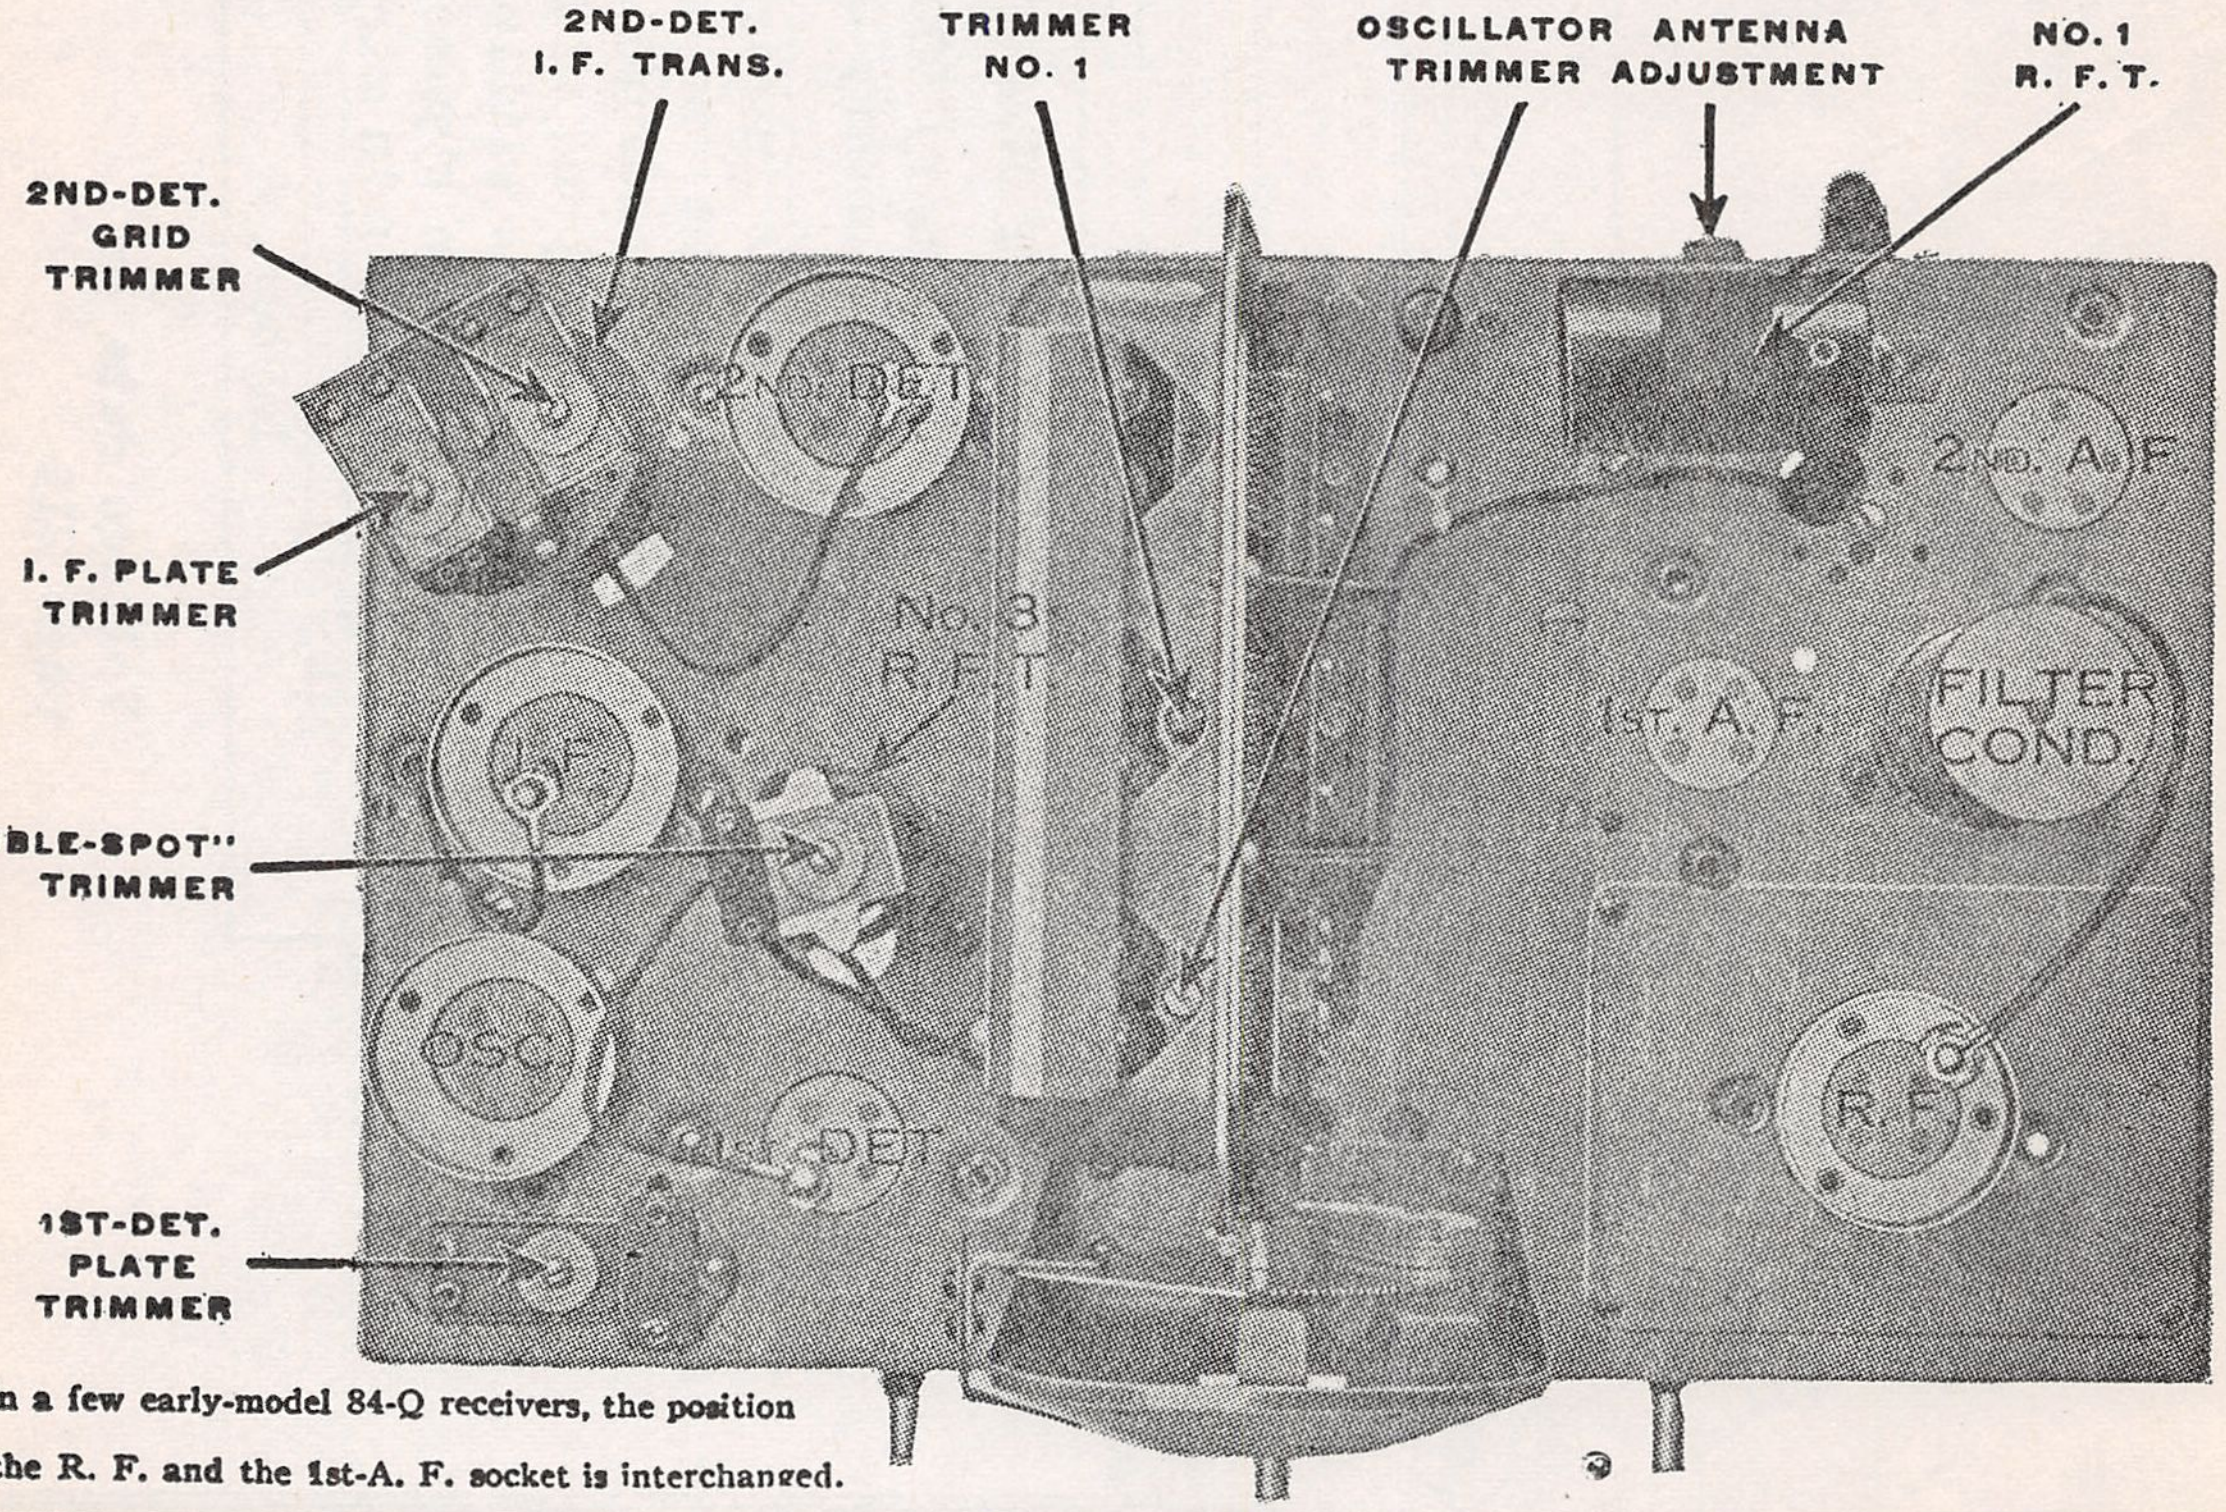
2ND-DET. I. F. TRANS.
TRIMMER NO. 1
OSCILLATOR ANTENNA
TRIMMER ADJUSTMENT
NO. 1 R. F. T.
2ND-DET. GRID TRIMMER
I. F. PLATE TRIMMER
"DOUBLE-SPOT" TRIMMER
1ST-DET. PLATE TRIMMER
2ND. DET.
2ND. A.F.
No. 3 R.F.T.
I.F.
1ST. A.F.
FILTER COND.
OSC.
1ST. DET.
R.F.

In a few early-model 84-Q receivers, the position of the R. F. and the 1st-A. F. socket is interchanged.

ATWATER KENT MFG. CO.

MODEL 85-Q
1st Type
Below serial
163767

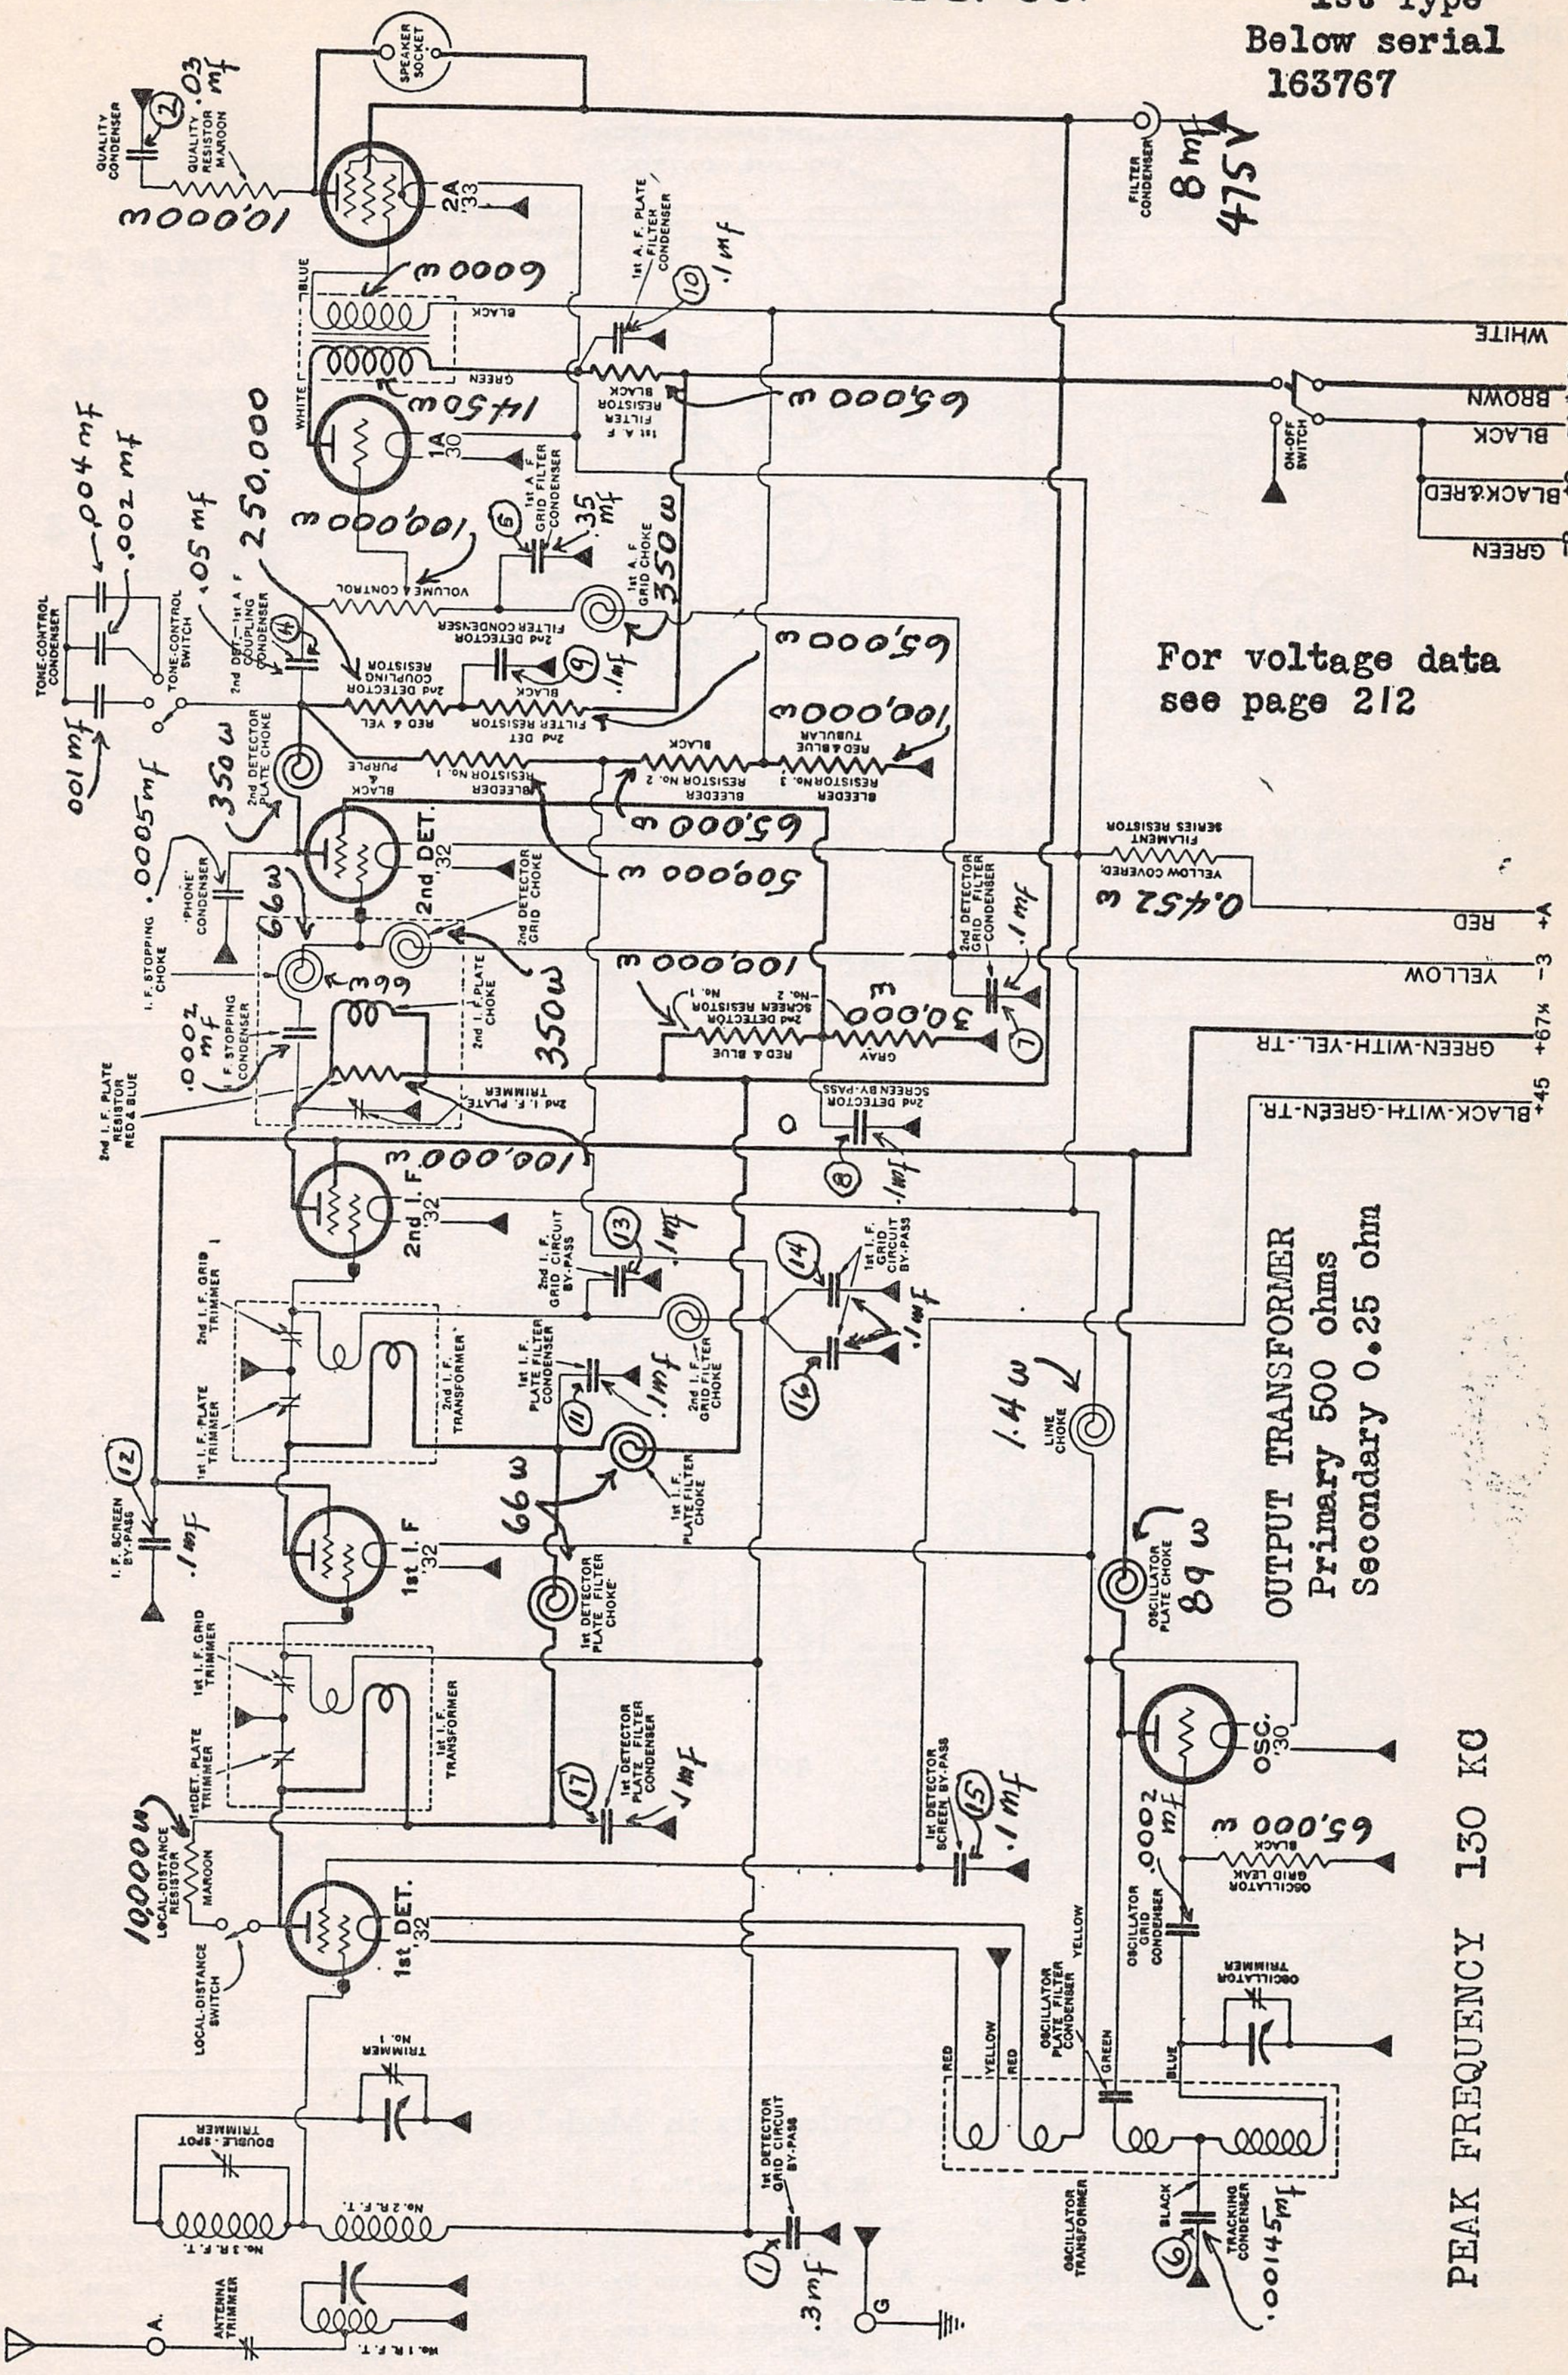
SPEAKER SOCKET
QUALITY CONDENSER
QUALITY RESISTOR MAROON
.03 mf
10,000 w
2A '33
FILTER CONDENSER
8 mf 475 V
1st A. F. PLATE FILTER CONDENSER
.1 mf
6000 w
BLUE
BLACK
GREEN
WHITE
1450 w
1A '30
1st A. F. FILTER RESISTOR BLACK
65,000 w
WHITE -15
BROWN
ON-OFF SWITCH
BLACK -A +135
BLACK & RED +C
GREEN -B
1st A. F. GRID FILTER CONDENSER
.35 mf
100,000 w
VOLUME CONTROL
1st A. F. GRID CHOKE
350 w
2nd DETECTOR FILTER CONDENSER
TONE-CONTROL CONDENSER
TONE-CONTROL SWITCH
.004 mf
.002 mf
.05 mf
250,000
2nd DET.-1st A. F. COUPLING CONDENSER
2nd DETECTOR COUPLING RESISTOR RED & YEL
2nd DET FILTER RESISTOR BLACK
.1 mf
65,000 w
100,000 w
BLEEDER RESISTOR No. 3 TUBULAR RED & BLUE
BLEEDER RESISTOR No. 2 BLACK
BLEEDER RESISTOR No. 1 PURPLE & BLACK
.001 mf
2nd DETECTOR PLATE CHOKE
350 w
.0005 mf
'PHONE' CONDENSER
2nd DET. '32
2nd DETECTOR GRID CHOKE
65,000 w
500,000 w
2nd DETECTOR GRID FILTER CONDENSER
.1 mf
FILAMENT SERIES RESISTOR YELLOW COVERED
0.452 w
RED +A
YELLOW -3
GREEN-WITH-YEL.-TR. +67½
BLACK-WITH-GREEN-TR. +45
I. F. STOPPING CHOKE
66 w
2nd I. F. PLATE CHOKE
350 w
100,000 w
2nd DETECTOR SCREEN RESISTOR No. 1
2nd DETECTOR SCREEN RESISTOR No. 2 GRAY
30,000 w
RED & BLUE
.0002 mf
I. F. STOPPING CONDENSER
2nd I. F. PLATE RESISTOR RED & BLUE
2nd I. F. PLATE TRIMMER
2nd DETECTOR SCREEN BY-PASS
.1 mf
100,000 w
2nd I. F. '32
2nd I. F. GRID CIRCUIT BY-PASS
.1 mf
1st I. F. GRID CIRCUIT BY-PASS
.1 mf
2nd I. F. GRID TRIMMER
2nd I. F. TRANSFORMER
1st I. F. PLATE TRIMMER
1st I. F. PLATE FILTER CONDENSER
.1 mf
2nd I. F. GRID FILTER CHOKE
1st I. F. PLATE FILTER CHOKE
66 w
1.4 w
LINE CHOKE
I. F. SCREEN BY-PASS
.1 mf
1st I. F '32
1st DETECTOR PLATE CHOKE
OSCILLATOR PLATE CHOKE
89 w
1st I. F. GRID TRIMMER
1st I. F. TRANSFORMER
1st DET. PLATE TRIMMER
1st DETECTOR PLATE FILTER CONDENSER
.1 mf
1st DETECTOR SCREEN BY-PASS
.1 mf
OSC. '30
10,000 w
LOCAL-DISTANCE RESISTOR MAROON
LOCAL-DISTANCE SWITCH
1st DET. '32
OSCILLATOR GRID CONDENSER
.0002 mf
OSCILLATOR GRID LEAK BLACK
65,000 w
OSCILLATOR TRIMMER
TRIMMER No. 1
DOUBLE-SPOT TRIMMER
No. 3 R. F. T.
No. 2 R. F. T.
RED
YELLOW
OSCILLATOR PLATE FILTER CONDENSER
GREEN
BLUE
OSCILLATOR TRANSFORMER
1st DETECTOR GRID CIRCUIT BY-PASS
.3 mf
BLACK
TRACKING CONDENSER
.00145 mf
A.
ANTENNA TRIMMER
No. 1 R. F. T.
G
1
2
4
6
7
8
9
10
11
12
13
14
15
16
17

For voltage data see page 212

Numerals within circles adjacent to the bypass condensers correspond with the numbers shown upon the multi-section bypass condensers illustrated in the parts layout on the next page.

OUTPUT TRANSFORMER
Primary 500 ohms
Secondary 0.25 ohm

PEAK FREQUENCY 130 KC

Voltage reference to page 2-5

MODEL 85-Q
1st Type
Below serial
163767

ATWATER KENT MFG. CO.

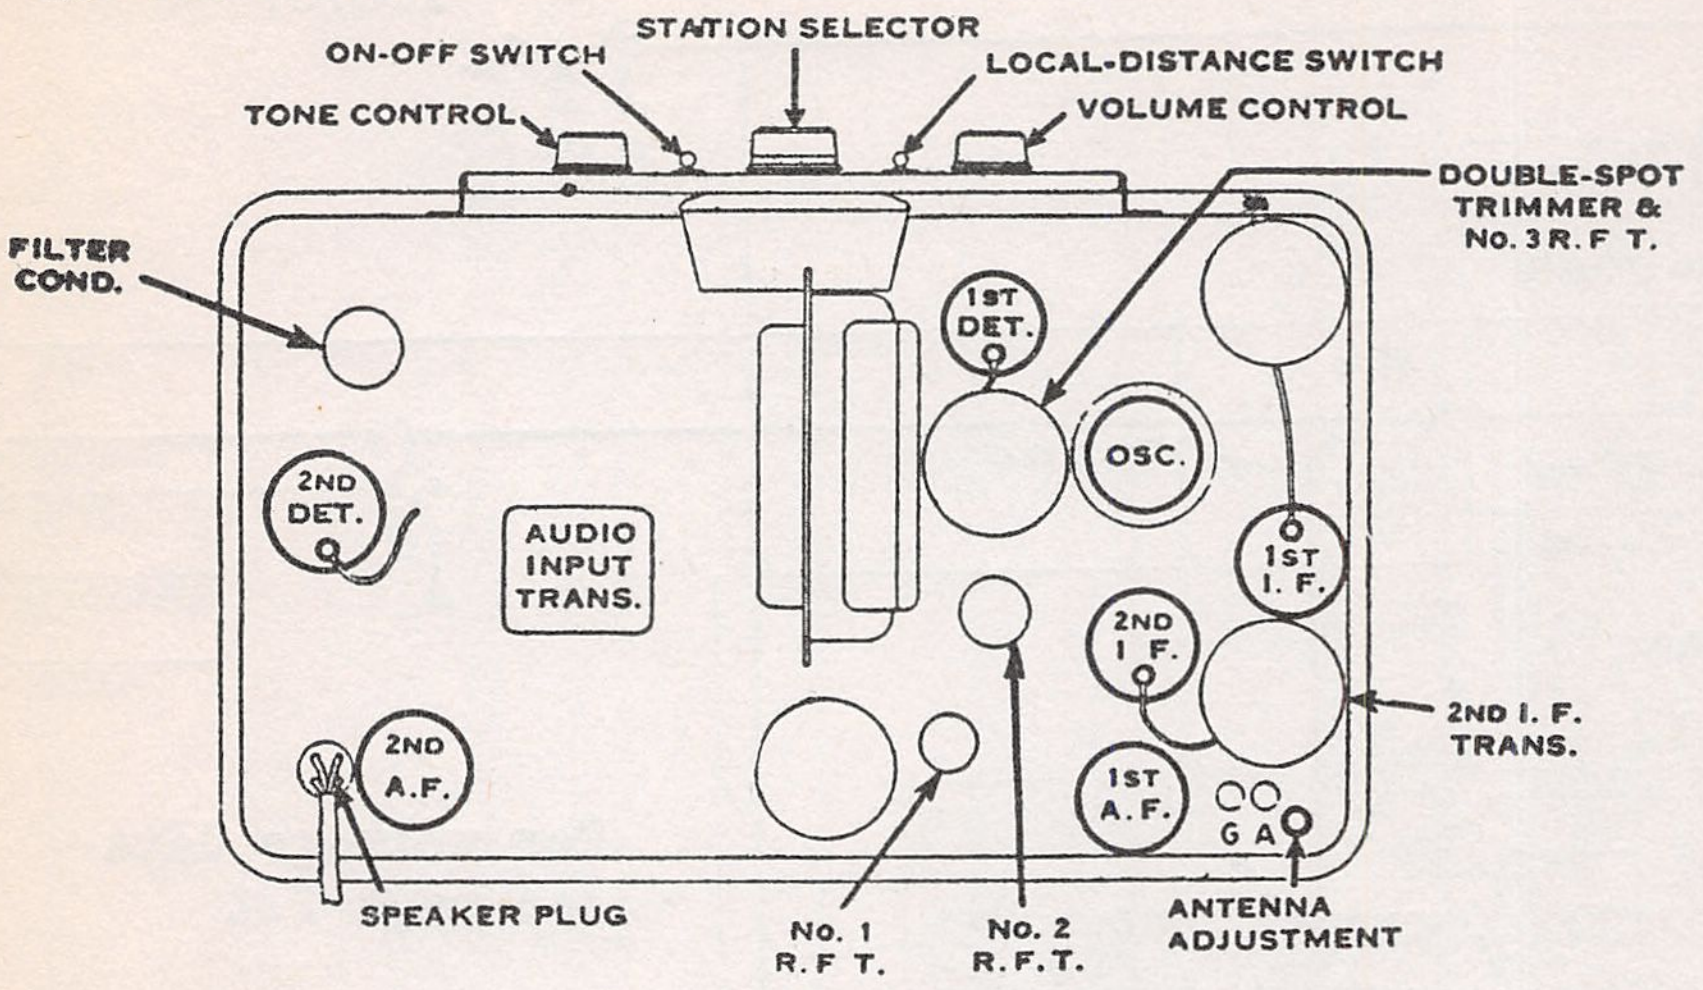
ON-OFF SWITCH
STATION SELECTOR
LOCAL-DISTANCE SWITCH
TONE CONTROL
VOLUME CONTROL
DOUBLE-SPOT TRIMMER & No. 3 R.F.T.
FILTER COND.
1ST DET.
OSC.
2ND DET.
AUDIO INPUT TRANS.
1ST I. F.
2ND I. F.
2ND I. F. TRANS.
2ND A.F.
1ST A.F.
G A
SPEAKER PLUG
No. 1 R.F.T.
No. 2 R.F.T.
ANTENNA ADJUSTMENT

Top View of Model 85-Q.

The circle in the top right corner indicates the shield for the coupling unit between the 1st-detector and the 1st-I. F. tubes. The circle in the bottom center is the shield covering the coupling unit between the 2nd-I. F. and the 2nd-detector tubes.

CONDENSERS

RF Bypass # 1
19980
400 volts
RF Bypass # 2
19150
400 volts
RF Bypass # 3
15262
400 volts
RF Bypass # 4
15262
400 volts
RF Bypass # 5
15262
400 volts

Tone Control condenser # 16490 100 volts

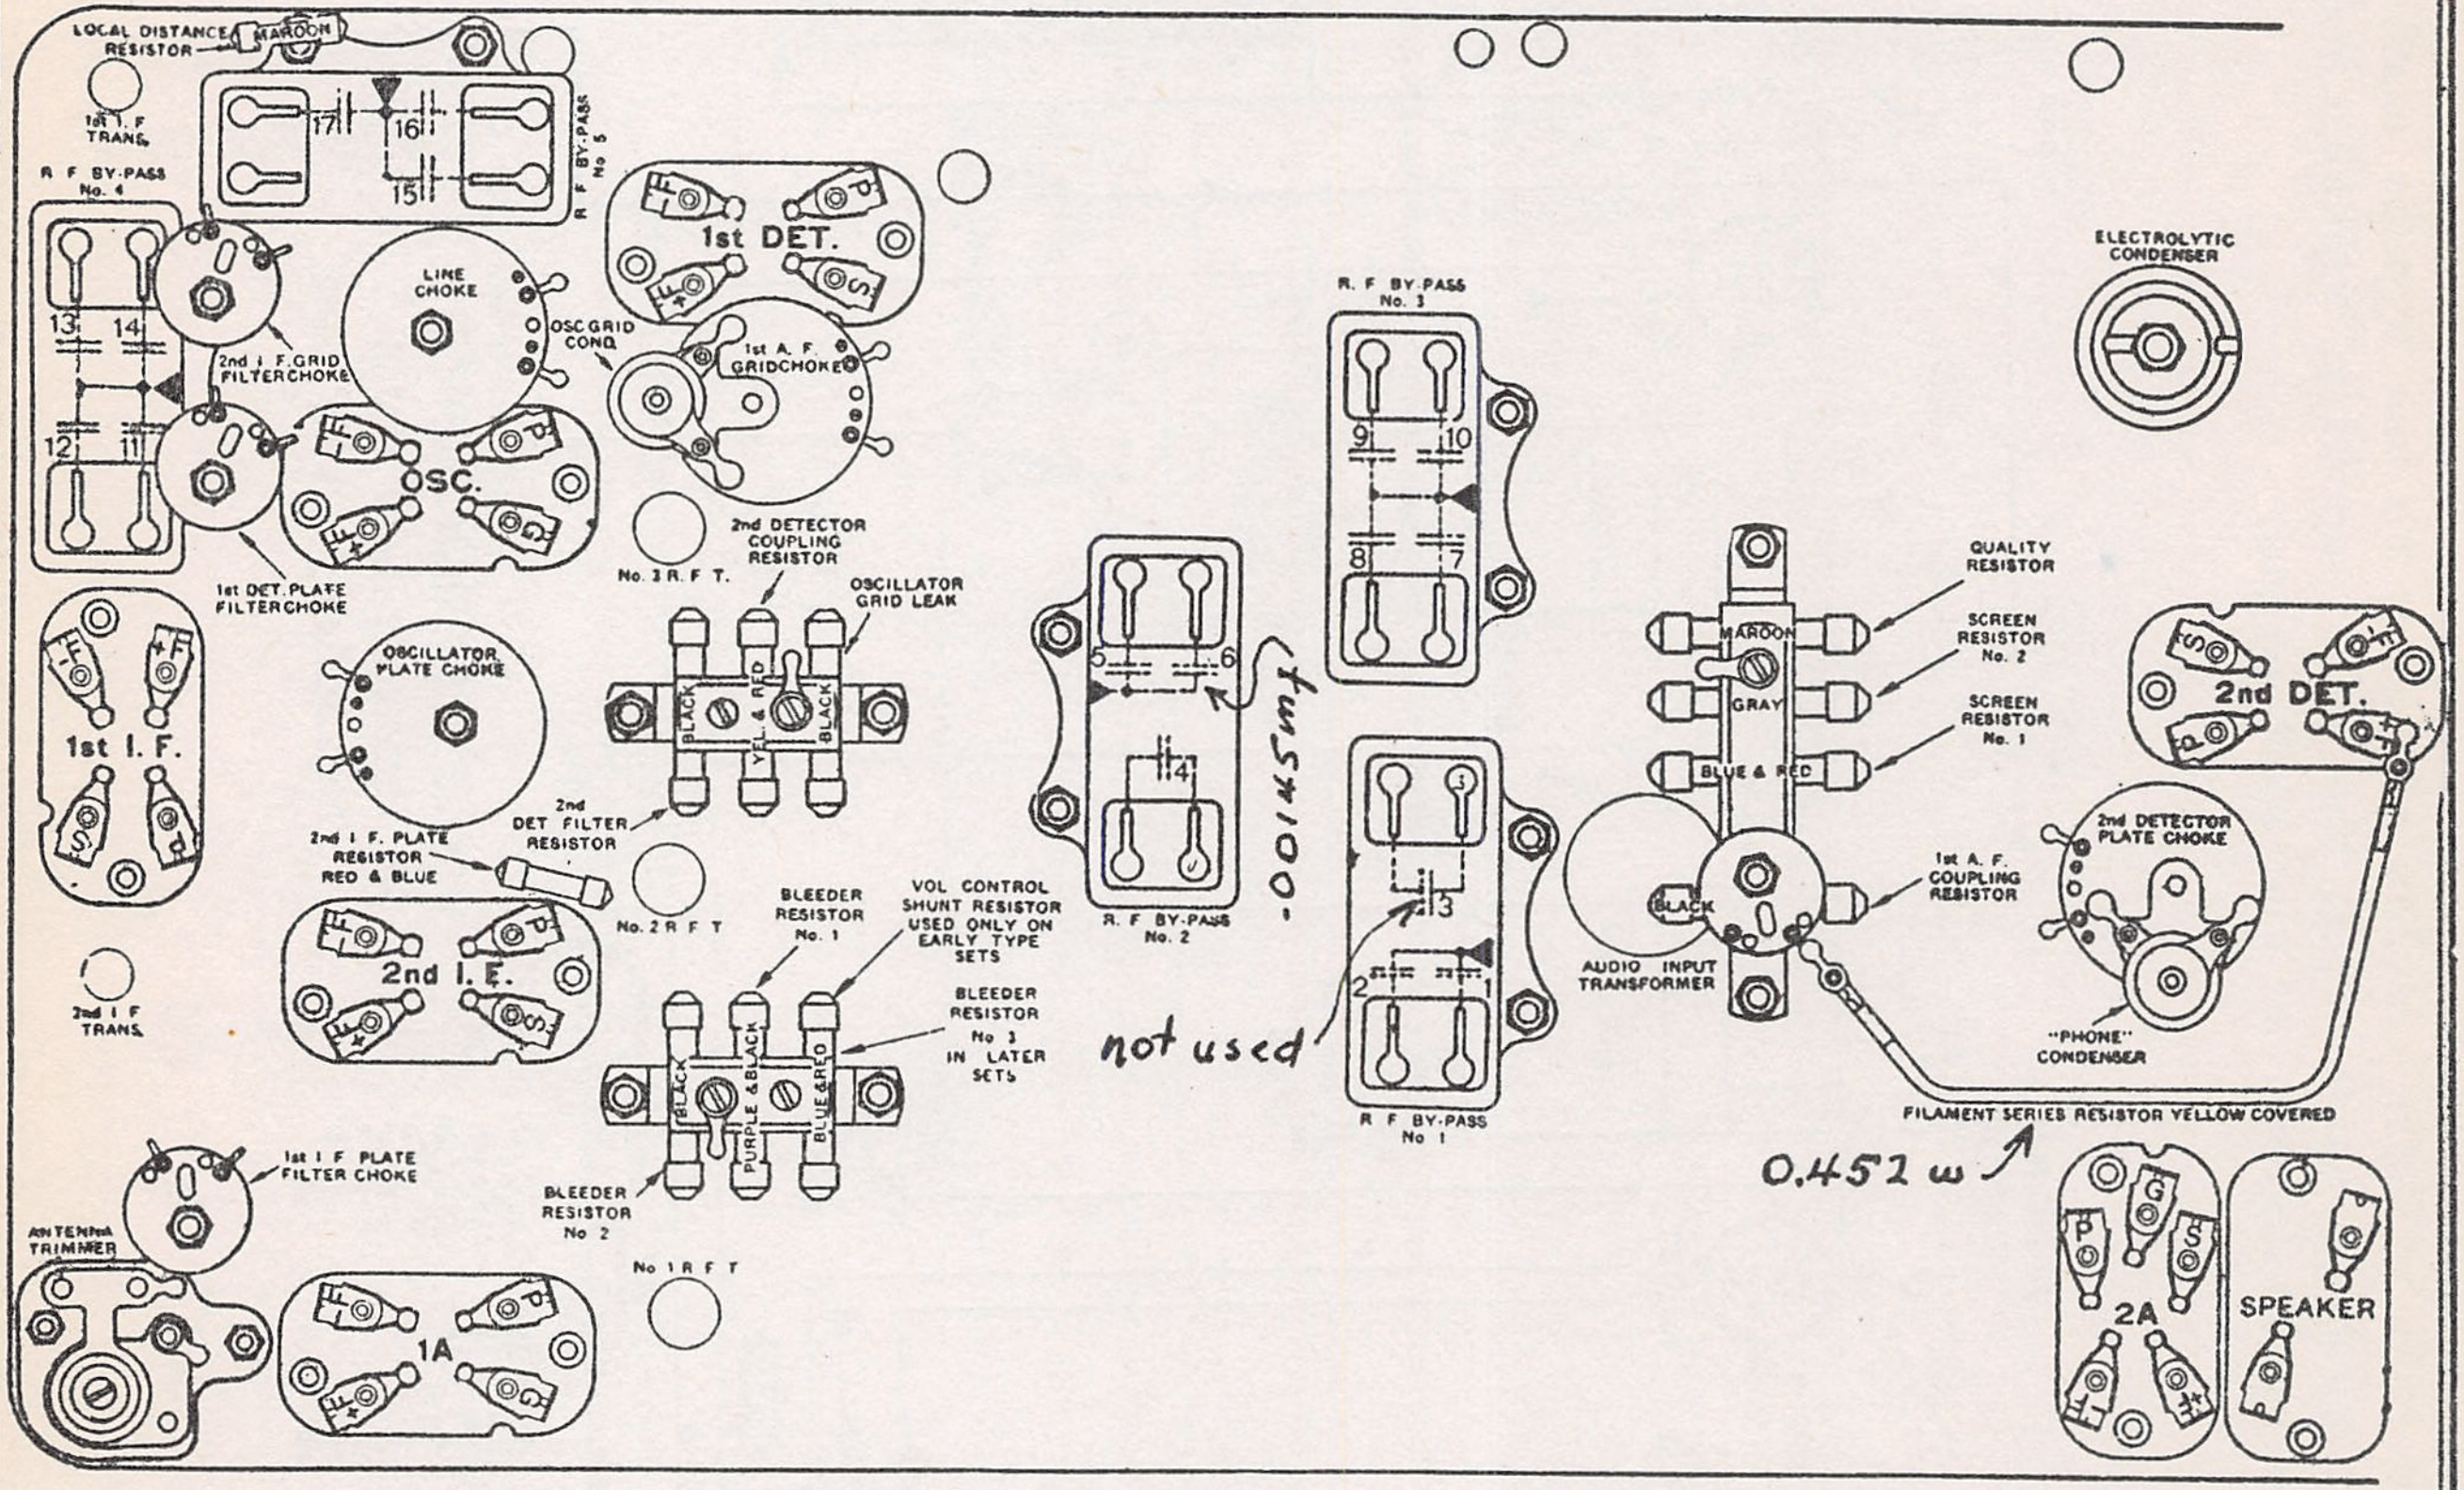
LOCAL DISTANCE RESISTOR
MAROON
1st I. F TRANS.
R F BY-PASS No. 4
R F BY-PASS No 5
17
16
15
13
14
12
11
1st DET.
LINE CHOKE
OSC GRID COND.
1st A. F. GRIDCHOKE
2nd I F. GRID FILTERCHOKE
OSC.
1st DET. PLATE FILTERCHOKE
No. 3 R. F T.
2nd DETECTOR COUPLING RESISTOR
OSCILLATOR GRID LEAK
BLACK
YEL. & RED
BLACK
1st I. F.
OSCILLATOR PLATE CHOKE
2nd DET FILTER RESISTOR
2nd I F. PLATE RESISTOR RED & BLUE
No. 2 R F T
2nd I. F.
2nd I F TRANS.
BLEEDER RESISTOR No. 1
VOL CONTROL SHUNT RESISTOR USED ONLY ON EARLY TYPE SETS
BLEEDER RESISTOR No 3 IN LATER SETS
BLACK
PURPLE & BLACK
BLUE & RED
BLEEDER RESISTOR No 2
1st I F PLATE FILTER CHOKE
ANTENNA TRIMMER
No 1 R F T
1A
5
6
4
R. F BY-PASS No. 2
.00145mf
not used
R. F BY-PASS No. 3
9
10
8
7
3
2
1
R F BY-PASS No 1
ELECTROLYTIC CONDENSER
MAROON
GRAY
BLUE & RED
BLACK
QUALITY RESISTOR
SCREEN RESISTOR No. 2
SCREEN RESISTOR No. 1
1st A. F. COUPLING RESISTOR
AUDIO INPUT TRANSFORMER
2nd DET.
2nd DETECTOR PLATE CHOKE
"PHONE" CONDENSER
FILAMENT SERIES RESISTOR YELLOW COVERED
0.452 w
2A
SPEAKER

By-pass Condensers in Model 85-Q.

R. F. By-pass No. 1

1—1st-detector grid-circuit by-pass.
2—Quality condenser.
3—Not used.

R. F. By-pass No. 2

4—2nd-detector—1st-A. F. coupling condenser.
5—1st-A. F. grid filter condenser.
6—Tracking condenser.

R. F. By-pass No. 3

7—2nd-detector grid filter condenser.
8—2nd-detector screen by-pass.
9—2nd-detector filter condenser.
10—1st-A. F. plate filter condenser.

R. F. By-pass No. 4

11—1st-I. F. plate filter condenser.
12—I. F. screen by-pass.
13—2nd-I. F. grid-circuit by-pass.
14—1st-I. F. grid-circuit by-pass.

R. F. By-pass No. 5

15—1st-detector screen by-pass.
16—1st-I. F. grid-circuit by-pass.
17—1st-detector plate filter condenser.

ATWATER KENT MFG. CO.

MODEL 86, 86-F
1st Type
Below serial
5,876,861

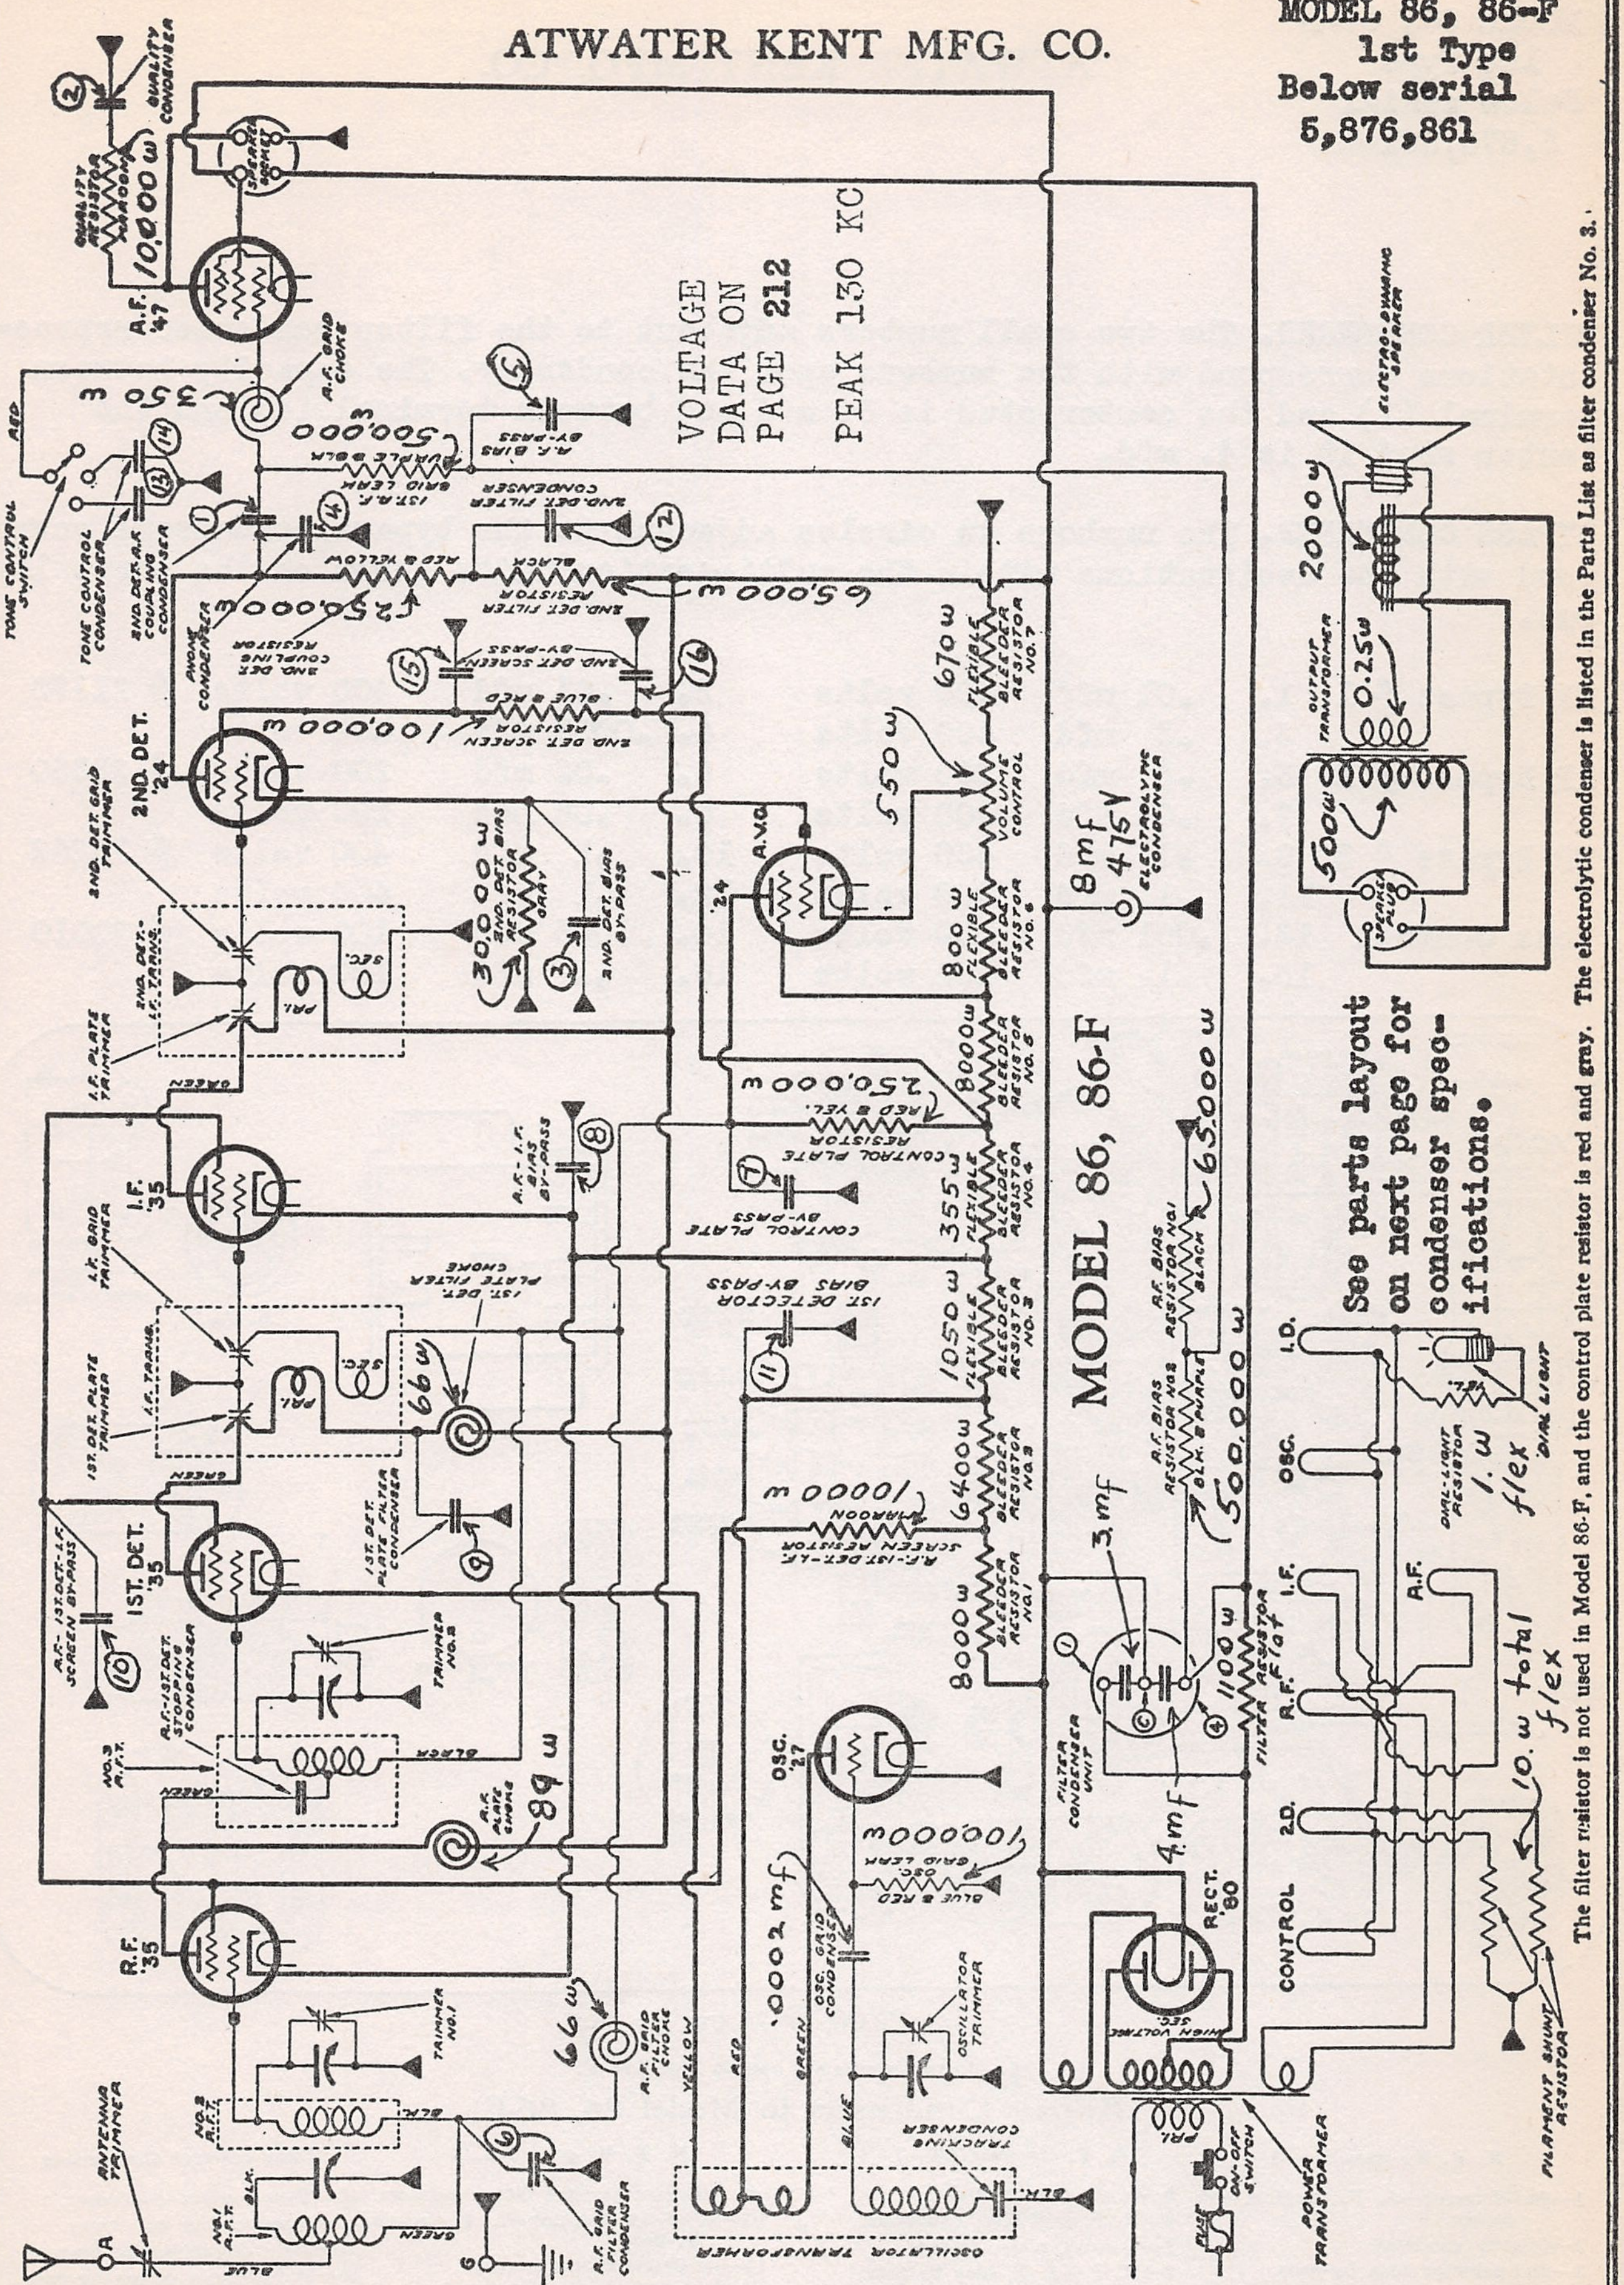
VOLTAGE DATA ON PAGE 212
PEAK 130 KC
MODEL 86, 86-F
A.F. '47
QUALITY RESISTOR
QUALITY CONDENSER
10,000 ω
SPEAKER SOCKET
A.F. GRID CHOKE
350 ω
TONE CONTROL SWITCH
TONE CONTROL CONDENSER
2ND. DET. A.F. COUPLING CONDENSER
PHONE CONDENSER
1ST. A.F. GRID LEAK
500,000 ω
A.F. BIAS BY-PASS
2ND. DET. FILTER CONDENSER
2ND. DET. COUPLING RESISTOR
250,000 ω
RED & YELLOW
2ND. DET. FILTER RESISTOR
BLACK
65,000 ω
2ND. DET. SCREEN BY-PASS
2ND. DET. SCREEN RESISTOR
BLUE & RED
100,000 ω
2ND. DET. '24
2ND. DET. GRID TRIMMER
2ND. DET. BIAS RESISTOR
GRAY
30,000 ω
2ND. DET. BIAS BY-PASS
2ND. DET. I.F. TRANS.
SEC.
PRI.
I.F. PLATE TRIMMER
GREEN
A.V.C. '24
FLEXIBLE BLEEDER RESISTOR NO. 7
670 ω
VOLUME CONTROL
550 ω
8 mf 475 V
ELECTROLYTIC CONDENSER
FLEXIBLE BLEEDER RESISTOR NO. 6
800 ω
FLEXIBLE BLEEDER RESISTOR NO. 5
8000 ω
CONTROL PLATE RESISTOR
RED & YEL.
250,000 ω
CONTROL PLATE BY-PASS
FLEXIBLE BLEEDER RESISTOR NO. 4
355 ω
I.F. '35
I.F. GRID TRIMMER
1ST. DET. PLATE FILTER CHOKE
R.F.-I.F. BIAS BY-PASS
1ST. DETECTOR BIAS BY-PASS
FLEXIBLE BLEEDER RESISTOR NO. 3
1050 ω
I.F. TRANS.
1ST. DET. PLATE TRIMMER
66 ω
1ST. DET. PLATE FILTER CONDENSER
BLEEDER RESISTOR NO. 2
6400 ω
R.F.-1ST. DET.-I.F. SCREEN RESISTOR
MAROON
10000 ω
BLEEDER RESISTOR NO. 1
8000 ω
R.F. BIAS RESISTOR NO. 1
BLACK
65,000 ω
R.F. BIAS RESISTOR NO. 2
BLK. & WHITE
500,000 ω
3 mf
4 mf
FILTER CONDENSER UNIT
FILTER RESISTOR
1100 ω
RECT. '80
1ST. DET. '35
R.F.-1ST. DET.-I.F. SCREEN BY-PASS
R.F.-1ST. DET. STOPPING CONDENSER
TRIMMER NO. 2
NO. 2 R.F.T.
BLACK
R.F. PLATE CHOKE
89 ω
OSC. '27
OSC. GRID LEAK
BLUE & RED
100,000 ω
OSC. GRID CONDENSER
.0002 mf
OSCILLATOR TRIMMER
R.F. '35
TRIMMER NO. 1
R.F. GRID FILTER CHOKE
66 ω
NO. 2 R.F.T.
BLK.
R.F. GRID FILTER CONDENSER
NO. 1 R.F.T.
ANTENNA TRIMMER
A
G
BLUE
GREEN
YELLOW
RED
TRACKING CONDENSER
OSCILLATOR TRANSFORMER
HIGH VOLTAGE SEC.
PRI.
ON-OFF SWITCH
FUSE
POWER TRANSFORMER
FILAMENT SHUNT RESISTOR
CONTROL
2.D.
R.F.
I.F.
A.F.
OSC.
I.D.
10. ω total flex
DIAL-LIGHT RESISTOR
1. ω flex
DIAL LIGHT
OUTPUT TRANSFORMER
0.25 ω
500 ω
SPEAKER PLUG
2000 ω
ELECTRO-DYNAMIC SPEAKER

See parts layout on next page for condenser specifications.

The filter resistor is not used in Model 86-F, and the control plate resistor is red and gray. The electrolytic condenser is listed in the Parts List as filter condenser No. 3.

Voltage reference to page 2-5

MODEL 86, 86-F
1st Type
Below serial
5,876,861

ATWATER KENT MFG. CO.

FILTER CONDENSER. The two small numbers adjacent to the filter condenser representations correspond with the numbers upon the condenser. The capacity between terminal (1) and the center stud is 3. mfd and between terminal (4) and the center stud it is 4. mfd.

BYPASS CONDENSER. The numbers in circles adjacent to the bypass condensers correspond with the designations within the multi-section units shown on the parts layout.

RF Bypass # 1	1.	.01 mfd	400 volts	2.	.03 mfd	400 volts	# 21170
	3.	.3 mfd	400 volts	4.	.0006 mfd	400 volts	
RF Bypass # 2	5.	.3 mfd	200 volts	6.	.02 mfd	200 volts	# 23330
	7.	.04 mfd	200 volts	8.	.05 mfd	200 volts	
RF Bypass # 3	9.	.1 mfd	400 volts	10.	.1 mfd	400 volts	# 15262
	11.	.1 mfd	400 volts	12.	.1 mfd	400 volts	
Tone Control	13.	.001 mfd	100 volts	14.	.003 mfd	100 volts	# 20010
	15.	.1 mfd	100 volts	16.	.1 mfd	100 volts	

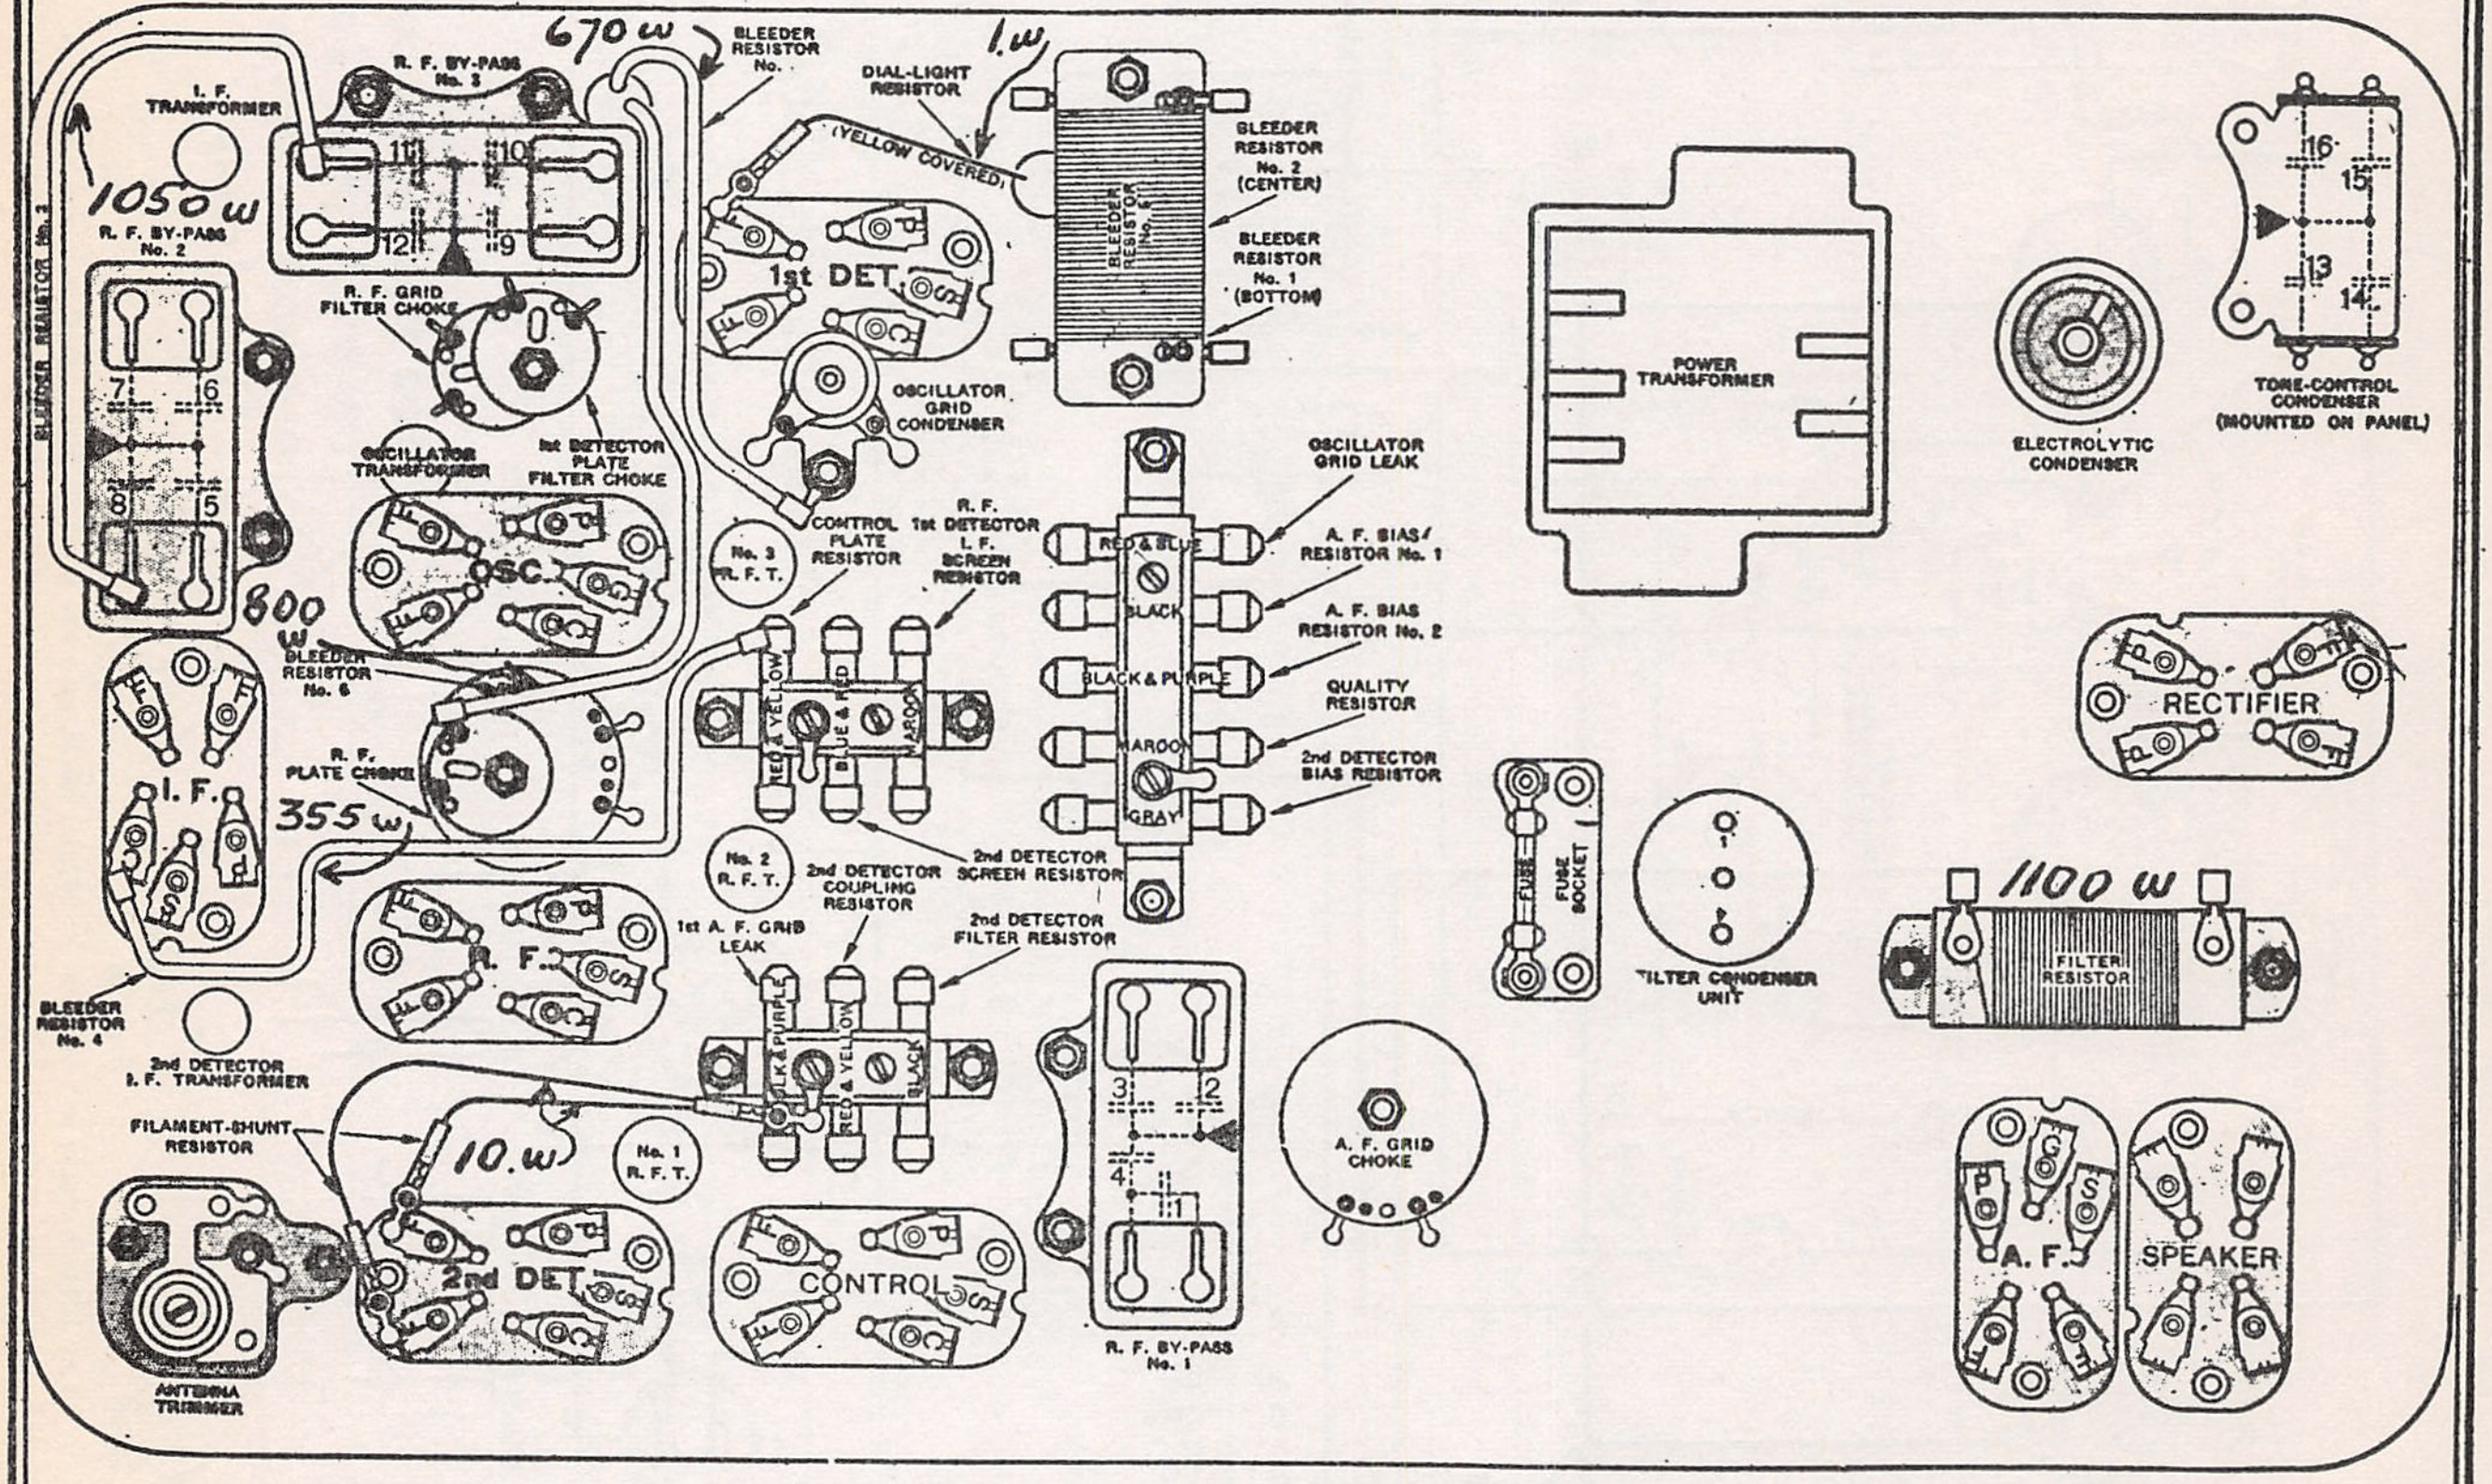
670 w
BLEEDER RESISTOR No.
1.w
DIAL-LIGHT RESISTOR
(YELLOW COVERED)
R. F. BY-PASS No. 3
I. F. TRANSFORMER
1050 w
R. F. BY-PASS No. 2
BLEEDER RESISTOR No. 3
11
10
12
9
R. F. GRID FILTER CHOKE
1st DET.
BLEEDER RESISTOR No. 6
BLEEDER RESISTOR No. 2 (CENTER)
BLEEDER RESISTOR No. 1 (BOTTOM)
OSCILLATOR GRID CONDENSER
7
6
8
5
OSCILLATOR TRANSFORMER
1st DETECTOR PLATE FILTER CHOKE
OSC.
800 w
BLEEDER RESISTOR No. 6
No. 3 R. F. T.
CONTROL PLATE RESISTOR
R. F. 1st DETECTOR I. F. SCREEN RESISTOR
RED & YELLOW
BLUE & RED
MAROON
OSCILLATOR GRID LEAK
RED & BLUE
BLACK
BLACK & PURPLE
MAROON
GRAY
A. F. BIAS/ RESISTOR No. 1
A. F. BIAS RESISTOR No. 2
QUALITY RESISTOR
2nd DETECTOR BIAS RESISTOR
I. F.
R. F. PLATE CHOKE
355 w
No. 2 R. F. T.
2nd DETECTOR COUPLING RESISTOR
2nd DETECTOR SCREEN RESISTOR
2nd DETECTOR FILTER RESISTOR
1st A. F. GRID LEAK
R. F.
BLEEDER RESISTOR No. 4
2nd DETECTOR I. F. TRANSFORMER
BLK & PURPLE
RED & YELLOW
BLACK
FILAMENT-SHUNT RESISTOR
10.w
No. 1 R. F. T.
3
2
4
1
A. F. GRID CHOKE
2nd DET.
CONTROL
ANTENNA TRIMMER
R. F. BY-PASS No. 1
POWER TRANSFORMER
ELECTROLYTIC CONDENSER
16
15
13
14
TONE-CONTROL CONDENSER (MOUNTED ON PANEL)
RECTIFIER
FUSE
FUSE SOCKET
FILTER CONDENSER UNIT
1100 w
FILTER RESISTOR
A. F.
SPEAKER

CHART OF MODEL 86, 86-F.

The filter resistor is not used in Model 86-F.

By-pass Condensers in Model 86, 86-F

R. F. By-pass No. 1

1—2nd-detector—A. F. coupling condenser.
2—Quality condenser.
3—2nd-detector bias by-pass.
4—Phone condenser.

R. F. By-pass No. 2

5—A. F. bias by-pass.
6—R. F. grid filter condenser.
7—Control plate by-pass.
8—R. F.—I. F. bias by-pass.

R. F. By-pass No. 3

9—1st-detector plate filter condenser.
10—R. F.-1st-detector—I. F. screen by-pass.
11—1st-detector bias by-pass.
12—2nd-detector filter condenser.

Tone-control Condenser

13—Tone-control condenser.
14—Tone-control condenser.
15—2nd-detector screen by-pass.
16—2nd-detector screen by-pass.

ATWATER KENT MFG. CO.

MODEL 87
1st Type
Below serial
2,525,871

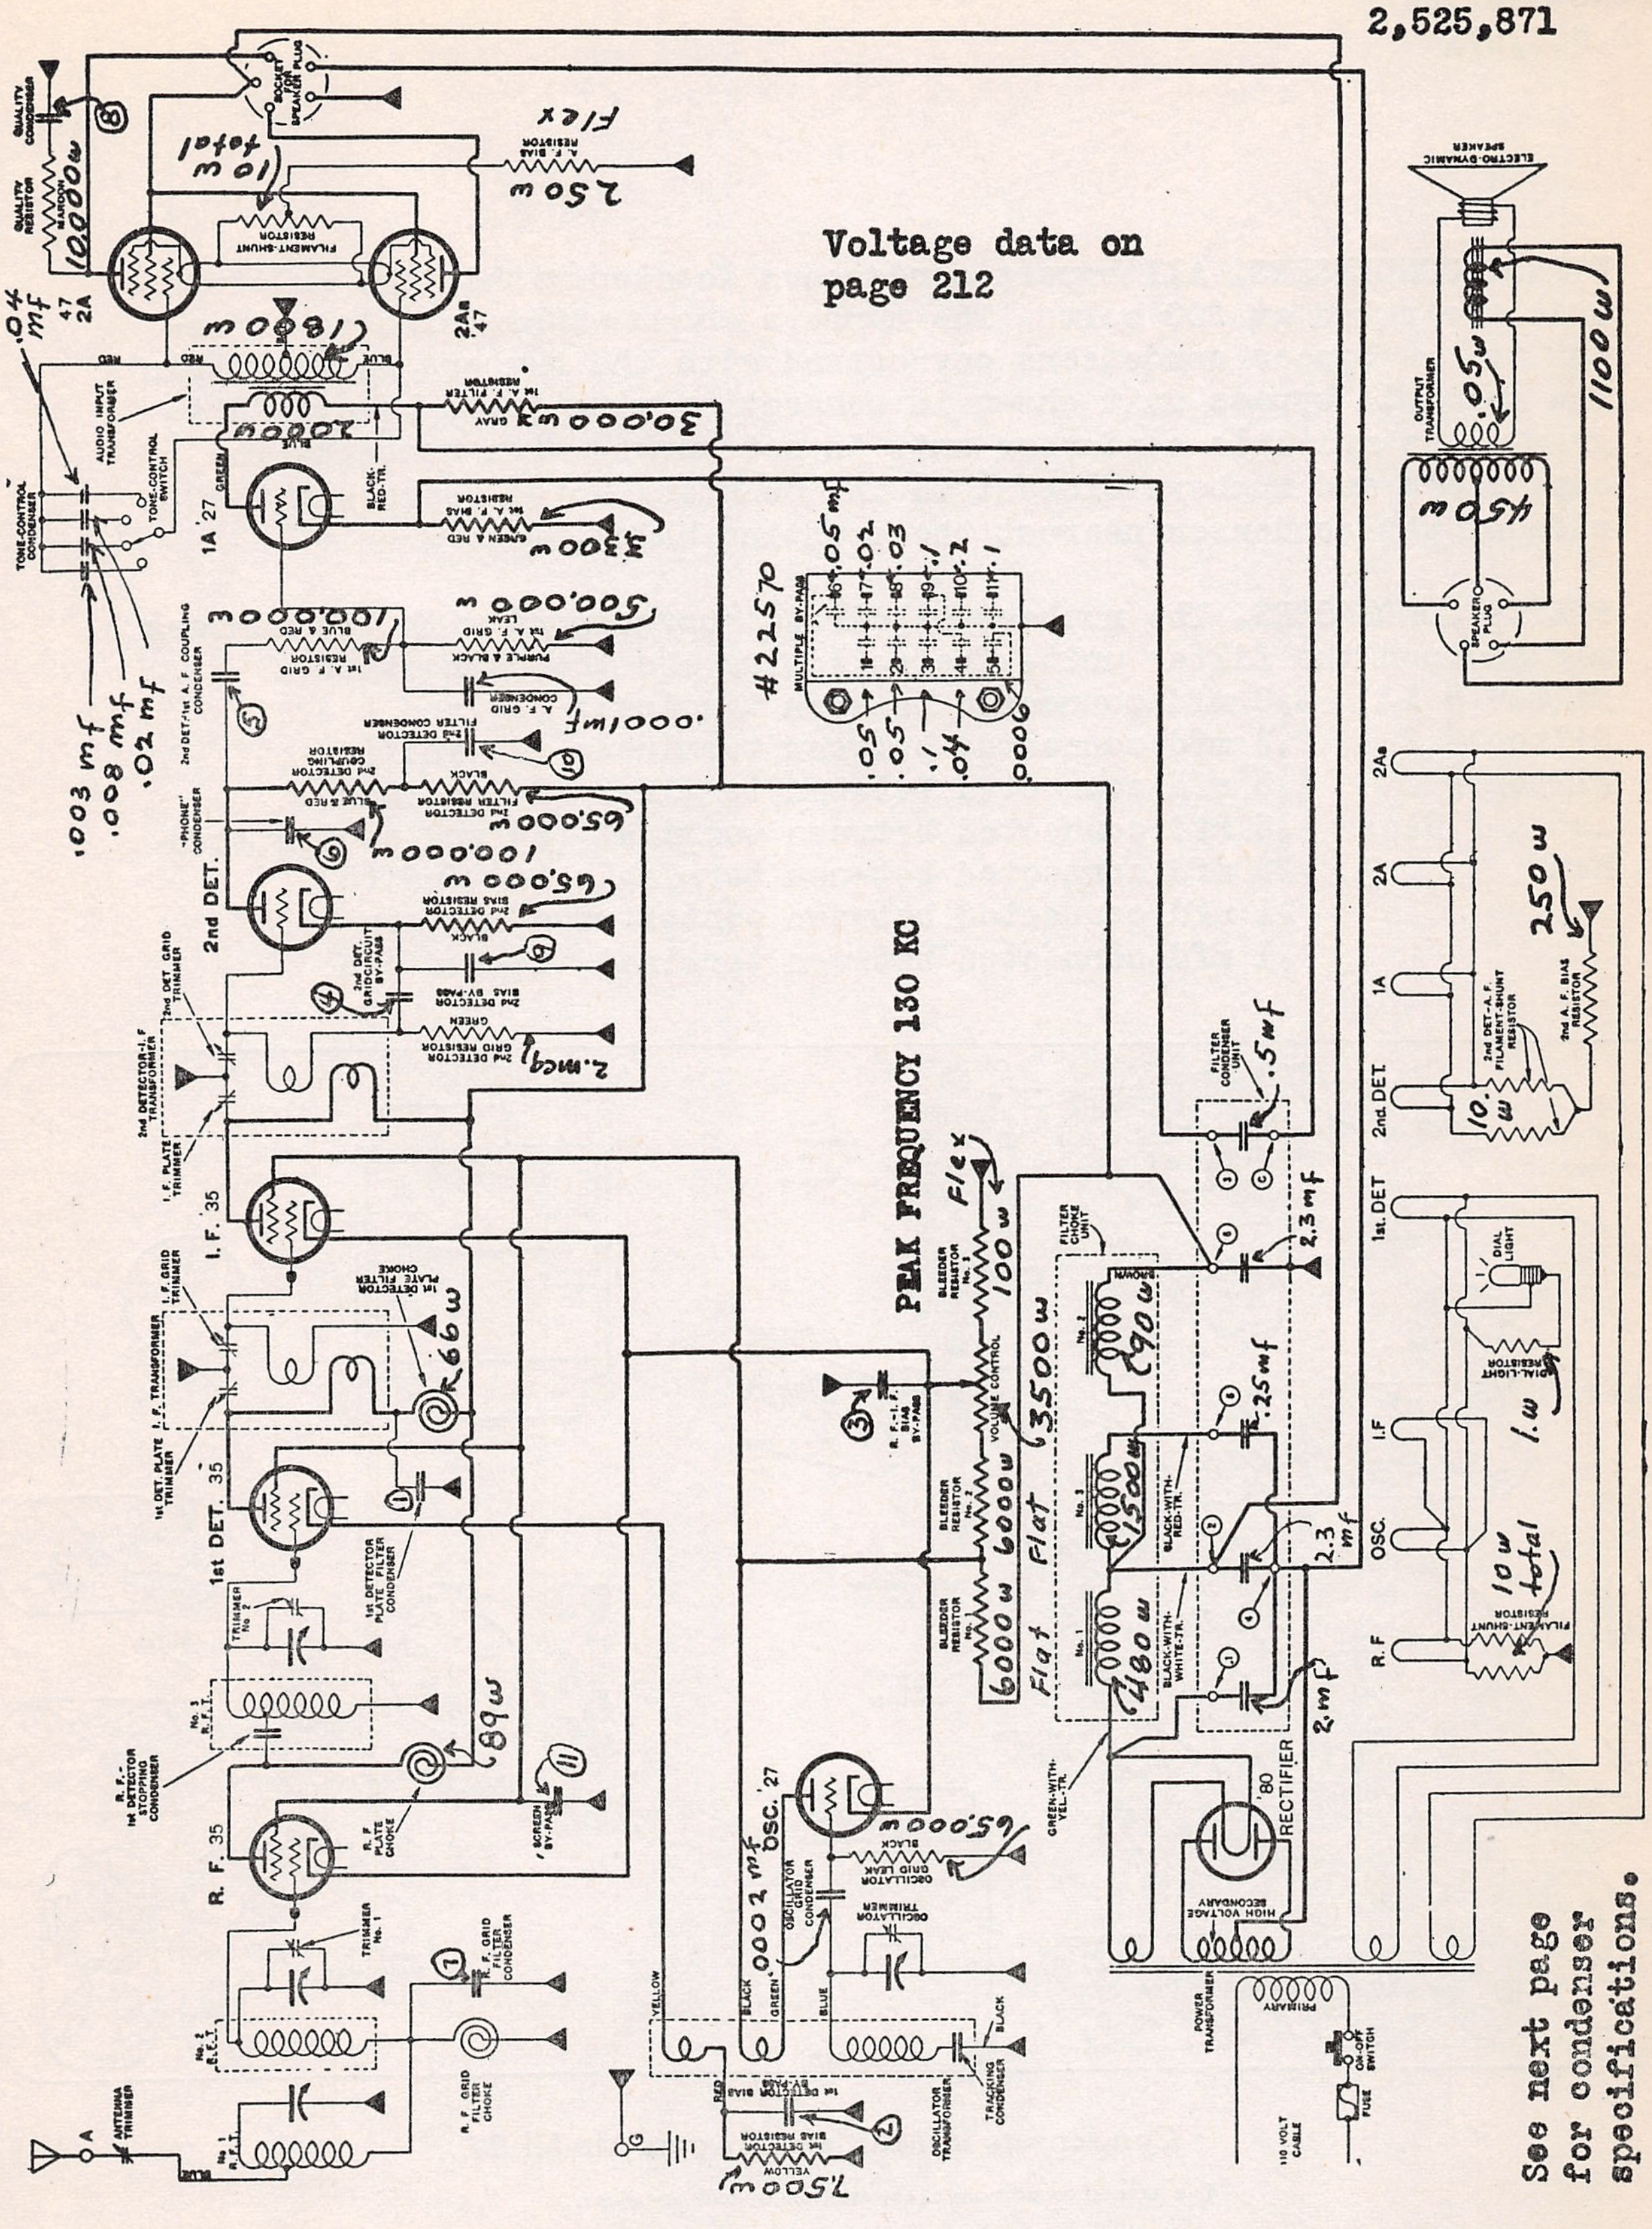
QUALITY CONDENSER
QUALITY RESISTOR
10,000 w
8
SOCKET FOR SPEAKER PLUG
Flex
10 w total
A. F. BIAS RESISTOR
250 w
FILAMENT-SHUNT RESISTOR
47 2A
2A5 47
.04 mf
RED
BLUE
1180 w
AUDIO INPUT TRANSFORMER
1000 w
1st A. F. FILTER RESISTOR
GRAY
30,000 w
TONE-CONTROL CONDENSER
TONE-CONTROL SWITCH
1A '27
GREEN
BLACK-RED-TR.
1st A. F. BIAS RESISTOR
GREEN & RED
3300 w
1st A. F. GRID RESISTOR
BLUE & RED
100,000 w
1st A. F. GRID LEAK
PURPLE & BLACK
500,000 w
A. F. GRID CONDENSER
.0001 mf
2nd DET./1st A. F. COUPLING CONDENSER
.003 mf
.008 mf
.02 mf
5
2nd DETECTOR FILTER CONDENSER
10
2nd DETECTOR COUPLING RESISTOR
BLACK
2nd DETECTOR FILTER RESISTOR
65,000 w
"PHONE" CONDENSER
6
100,000 w
2nd DET.
2nd DETECTOR BIAS RESISTOR
65,000 w
9
2nd DET. GRID CIRCUIT BY-PASS
2nd DET. BIAS BY-PASS
4
2nd DETECTOR GRID RESISTOR
GREEN
2 meg
2nd DET. GRID TRIMMER
2nd DETECTOR I. F. TRANSFORMER
I. F. PLATE TRIMMER
MULTIPLE BY-PASS
#22570
.05 mf
.02
.03
.1
.2
.1
.05
.05
.1
.04
.0006
I. F. 35
I. F. GRID TRIMMER
I. F. TRANSFORMER
1st DETECTOR PLATE FILTER CHOKE
66 w
1st DET. PLATE TRIMMER
1st DET. 35
7
1st DETECTOR PLATE FILTER CONDENSER
TRIMMER No. 2
No. 3 R. F. T.
R. F.-1st DETECTOR STOPPING CONDENSER
89 w
11
SCREEN BY-PASS
R. F. PLATE CHOKE
R. F. 35
TRIMMER No. 1
R. F. GRID FILTER CONDENSER
No. 2 R. F. T.
R. F. GRID FILTER CHOKE
ANTENNA TRIMMER
No. 1 R. F. T.
A
G
BLUE
YELLOW
RED
BLACK
GREEN
.0002 mf
OSC. '27
OSCILLATOR GRID CONDENSER
OSCILLATOR GRID LEAK
BLACK
65,000 w
OSCILLATOR TRIMMER
1st DETECTOR BIAS BY-PASS
1st DETECTOR BIAS RESISTOR
YELLOW
7500 w
OSCILLATOR TRANSFORMER
TRACKING CONDENSER
3
R. F.-I. F. BIAS BY-PASS
BLEEDER RESISTOR No. 3
Flex
100 w
VOLUME CONTROL
3500 w
BLEEDER RESISTOR No. 2
6000 w
Flat
BLEEDER RESISTOR No. 1
6000 w
Flat
FILTER CHOKE UNIT
BROWN
No. 2
90 w
No. 3
1500 w
BLACK-WITH-RED-TR.
No. 1
480 w
BLACK-WITH-WHITE-TR.
GREEN-WITH-YEL.-TR.
FILTER CONDENSER UNIT
.5 mf
2.3 mf
.25 mf
2.3 mf
2 mf
80 RECTIFIER
HIGH VOLTAGE SECONDARY
PRIMARY
POWER TRANSFORMER
ON-OFF SWITCH
FUSE
110 VOLT CABLE
ELECTRO-DYNAMIC SPEAKER
OUTPUT TRANSFORMER
.05 w
1100 w
450 w
SPEAKER PLUG
2A5
2A
1A
2nd. DET
1st. DET
I. F
OSC.
R. F
250 w
2nd A. F. BIAS RESISTOR
2nd DET-A. F. FILAMENT-SHUNT RESISTOR
10 w
DIAL LIGHT
DIAL-LIGHT RESISTOR
1 w
10 w total
FILAMENT-SHUNT RESISTOR

Voltage data on page 212

PEAK FREQUENCY 130 KC

See next page for condenser specifications.

DIAGRAM OF MODEL 87 (A. C.-OPERATED).

In a few early-type Model 87 receivers, No. 2 and No. 3 R. F. transformers are connected between the R. F. tube and the 1st-detector, similar to the arrangement used in early Model 89

Voltage reference to page 2-5

MODEL 87
1st Type
Below serial
2,525,871

ATWATER KENT MFG. CO.

BYPASS CONDENSERS: All bypass condensers located within the multiple unit are rated at 200 volts. The numbers shown within circles adjacent to the bypass condensers correspond with the numbers shown within the multiple bypass unit shown in connection with the schematic diagram. The multiple condenser unit is not marked with numbers. The condensers and numbers closest to the mounting holes represent the side of the condenser nearest the mounting holes.

FILTER CONDENSERS. The numbers in circles correspond with the numbers marked upon the filter unit. The following are the connections.

Filter # 1	2.0 mfd	connected between terminals (1) and (4)
Filter # 2	2.3 mfd	connected between terminals (2) and (4)
Filter # 3	2.3 mfd	connected between terminal (6) and can
1st A-F Bias	.5 mfd	connected between terminal (3) and center stud
Hum	.25 mfd	connected between terminals (4) and (5)
	.1 mfd	connected between center stud and can
	.1 mfd	connected between terminal (2) and can

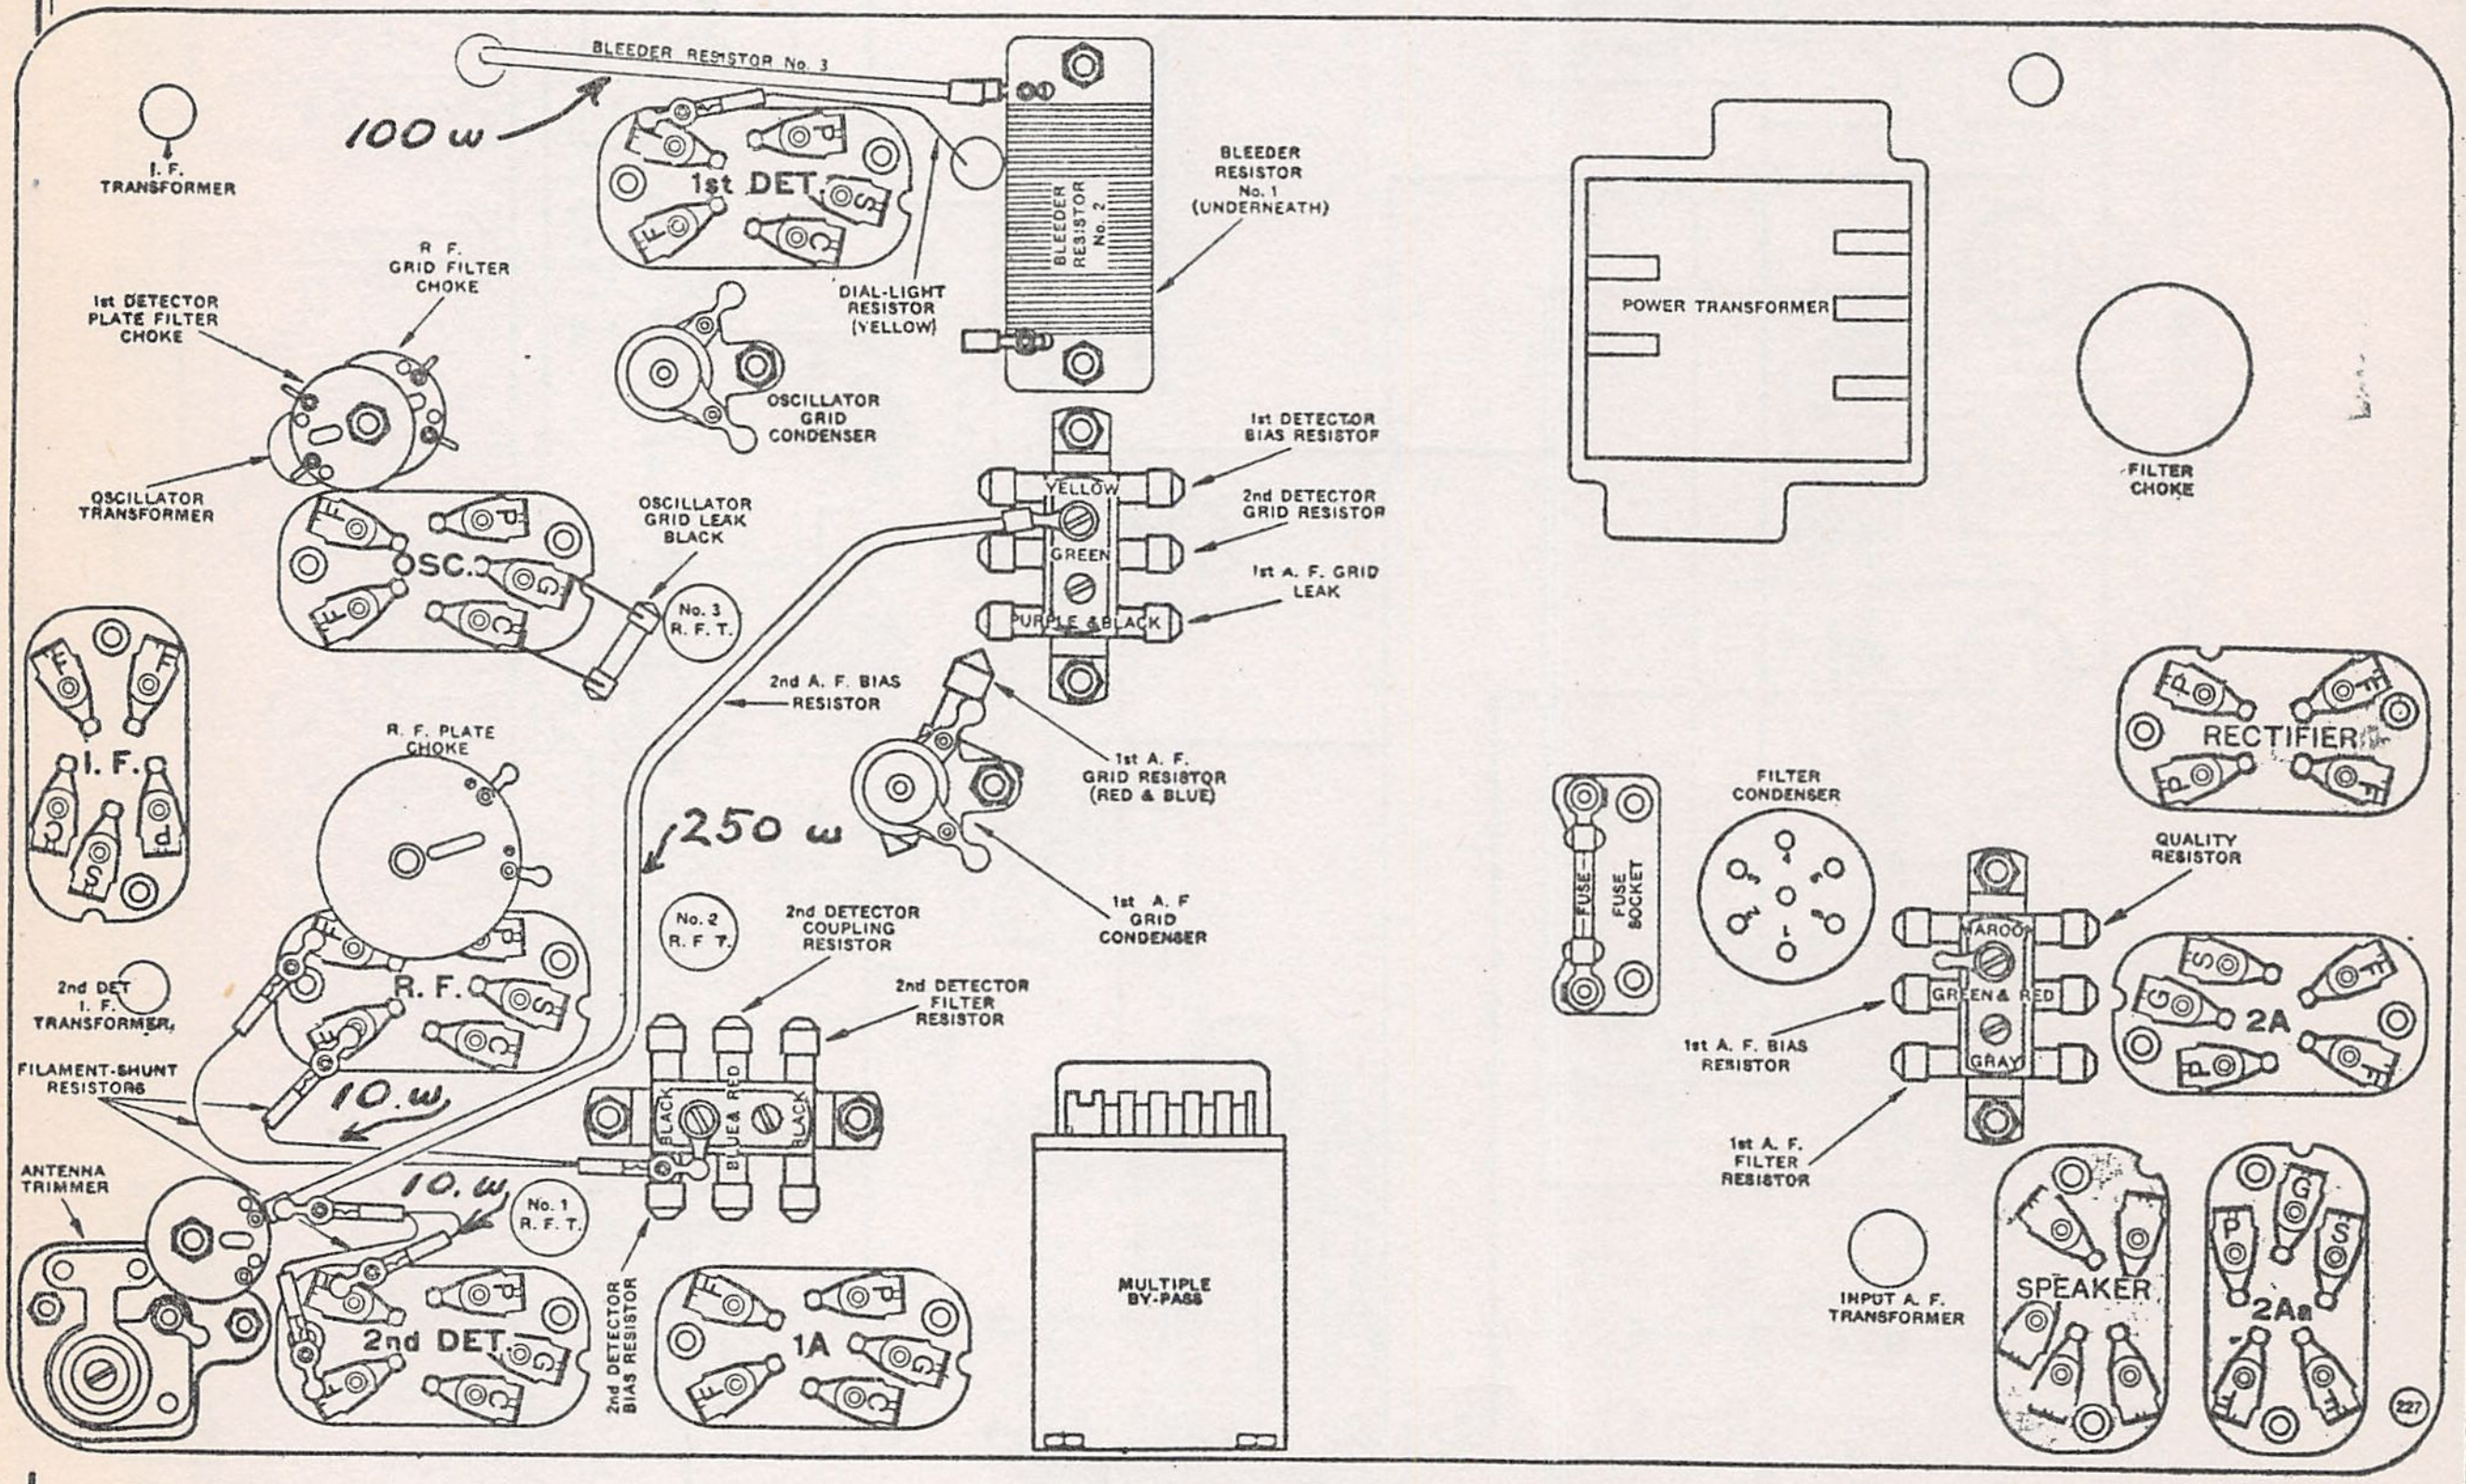
BLEEDER RESISTOR No. 3
100 w
I. F. TRANSFORMER
1st DET.
BLEEDER RESISTOR No. 2
BLEEDER RESISTOR No. 1 (UNDERNEATH)
DIAL-LIGHT RESISTOR (YELLOW)
R F. GRID FILTER CHOKE
1st DETECTOR PLATE FILTER CHOKE
OSCILLATOR GRID CONDENSER
OSCILLATOR TRANSFORMER
OSC.
OSCILLATOR GRID LEAK BLACK
No. 3 R. F. T.
1st DETECTOR BIAS RESISTOP
2nd DETECTOR GRID RESISTOR
1st A. F. GRID LEAK
YELLOW
GREEN
PURPLE & BLACK
POWER TRANSFORMER
FILTER CHOKE
I. F.
R. F. PLATE CHOKE
2nd A. F. BIAS RESISTOR
1st A. F. GRID RESISTOR (RED & BLUE)
250 w
1st A. F GRID CONDENSER
No. 2 R. F. T.
2nd DETECTOR COUPLING RESISTOR
2nd DETECTOR FILTER RESISTOR
R. F.
2nd DET I. F. TRANSFORMER
FILAMENT-SHUNT RESISTORS
10. w
10. w
BLACK
BLUE & RED
BLACK
ANTENNA TRIMMER
No. 1 R. F. T.
2nd DETECTOR BIAS RESISTOR
2nd DET.
1A
MULTIPLE BY-PASS
FUSE
FUSE SOCKET
FILTER CONDENSER
RECTIFIER
QUALITY RESISTOR
MAROON
GREEN & RED
GRAY
1st A. F. BIAS RESISTOR
1st A. F. FILTER RESISTOR
2A
INPUT A. F. TRANSFORMER
SPEAKER
2Aa
227
P
G
S
C
F

Condensers in Multiple By-pass Model 87

The internal connections of the multiple by-pass are shown

1—1st-detector plate filter condenser
2—1st-detector bias by-pass.
3—R. F.—I. F bias by-pass.
4—2nd-detector grid-circuit by-pass.
5—2nd-detector—1st-A. F coupling condenser.
6—Phone condenser
7—R. F. grid filter condenser.
8—Quality condenser.
9—2nd-detector bias by-pass.
10—2nd-detector filter condenser.
11—R. F.—1st-detector—I. F. screen by-pass.

ATWATER KENT MFG. CO.

MODEL 89, 89-F, 89-P
1st Type

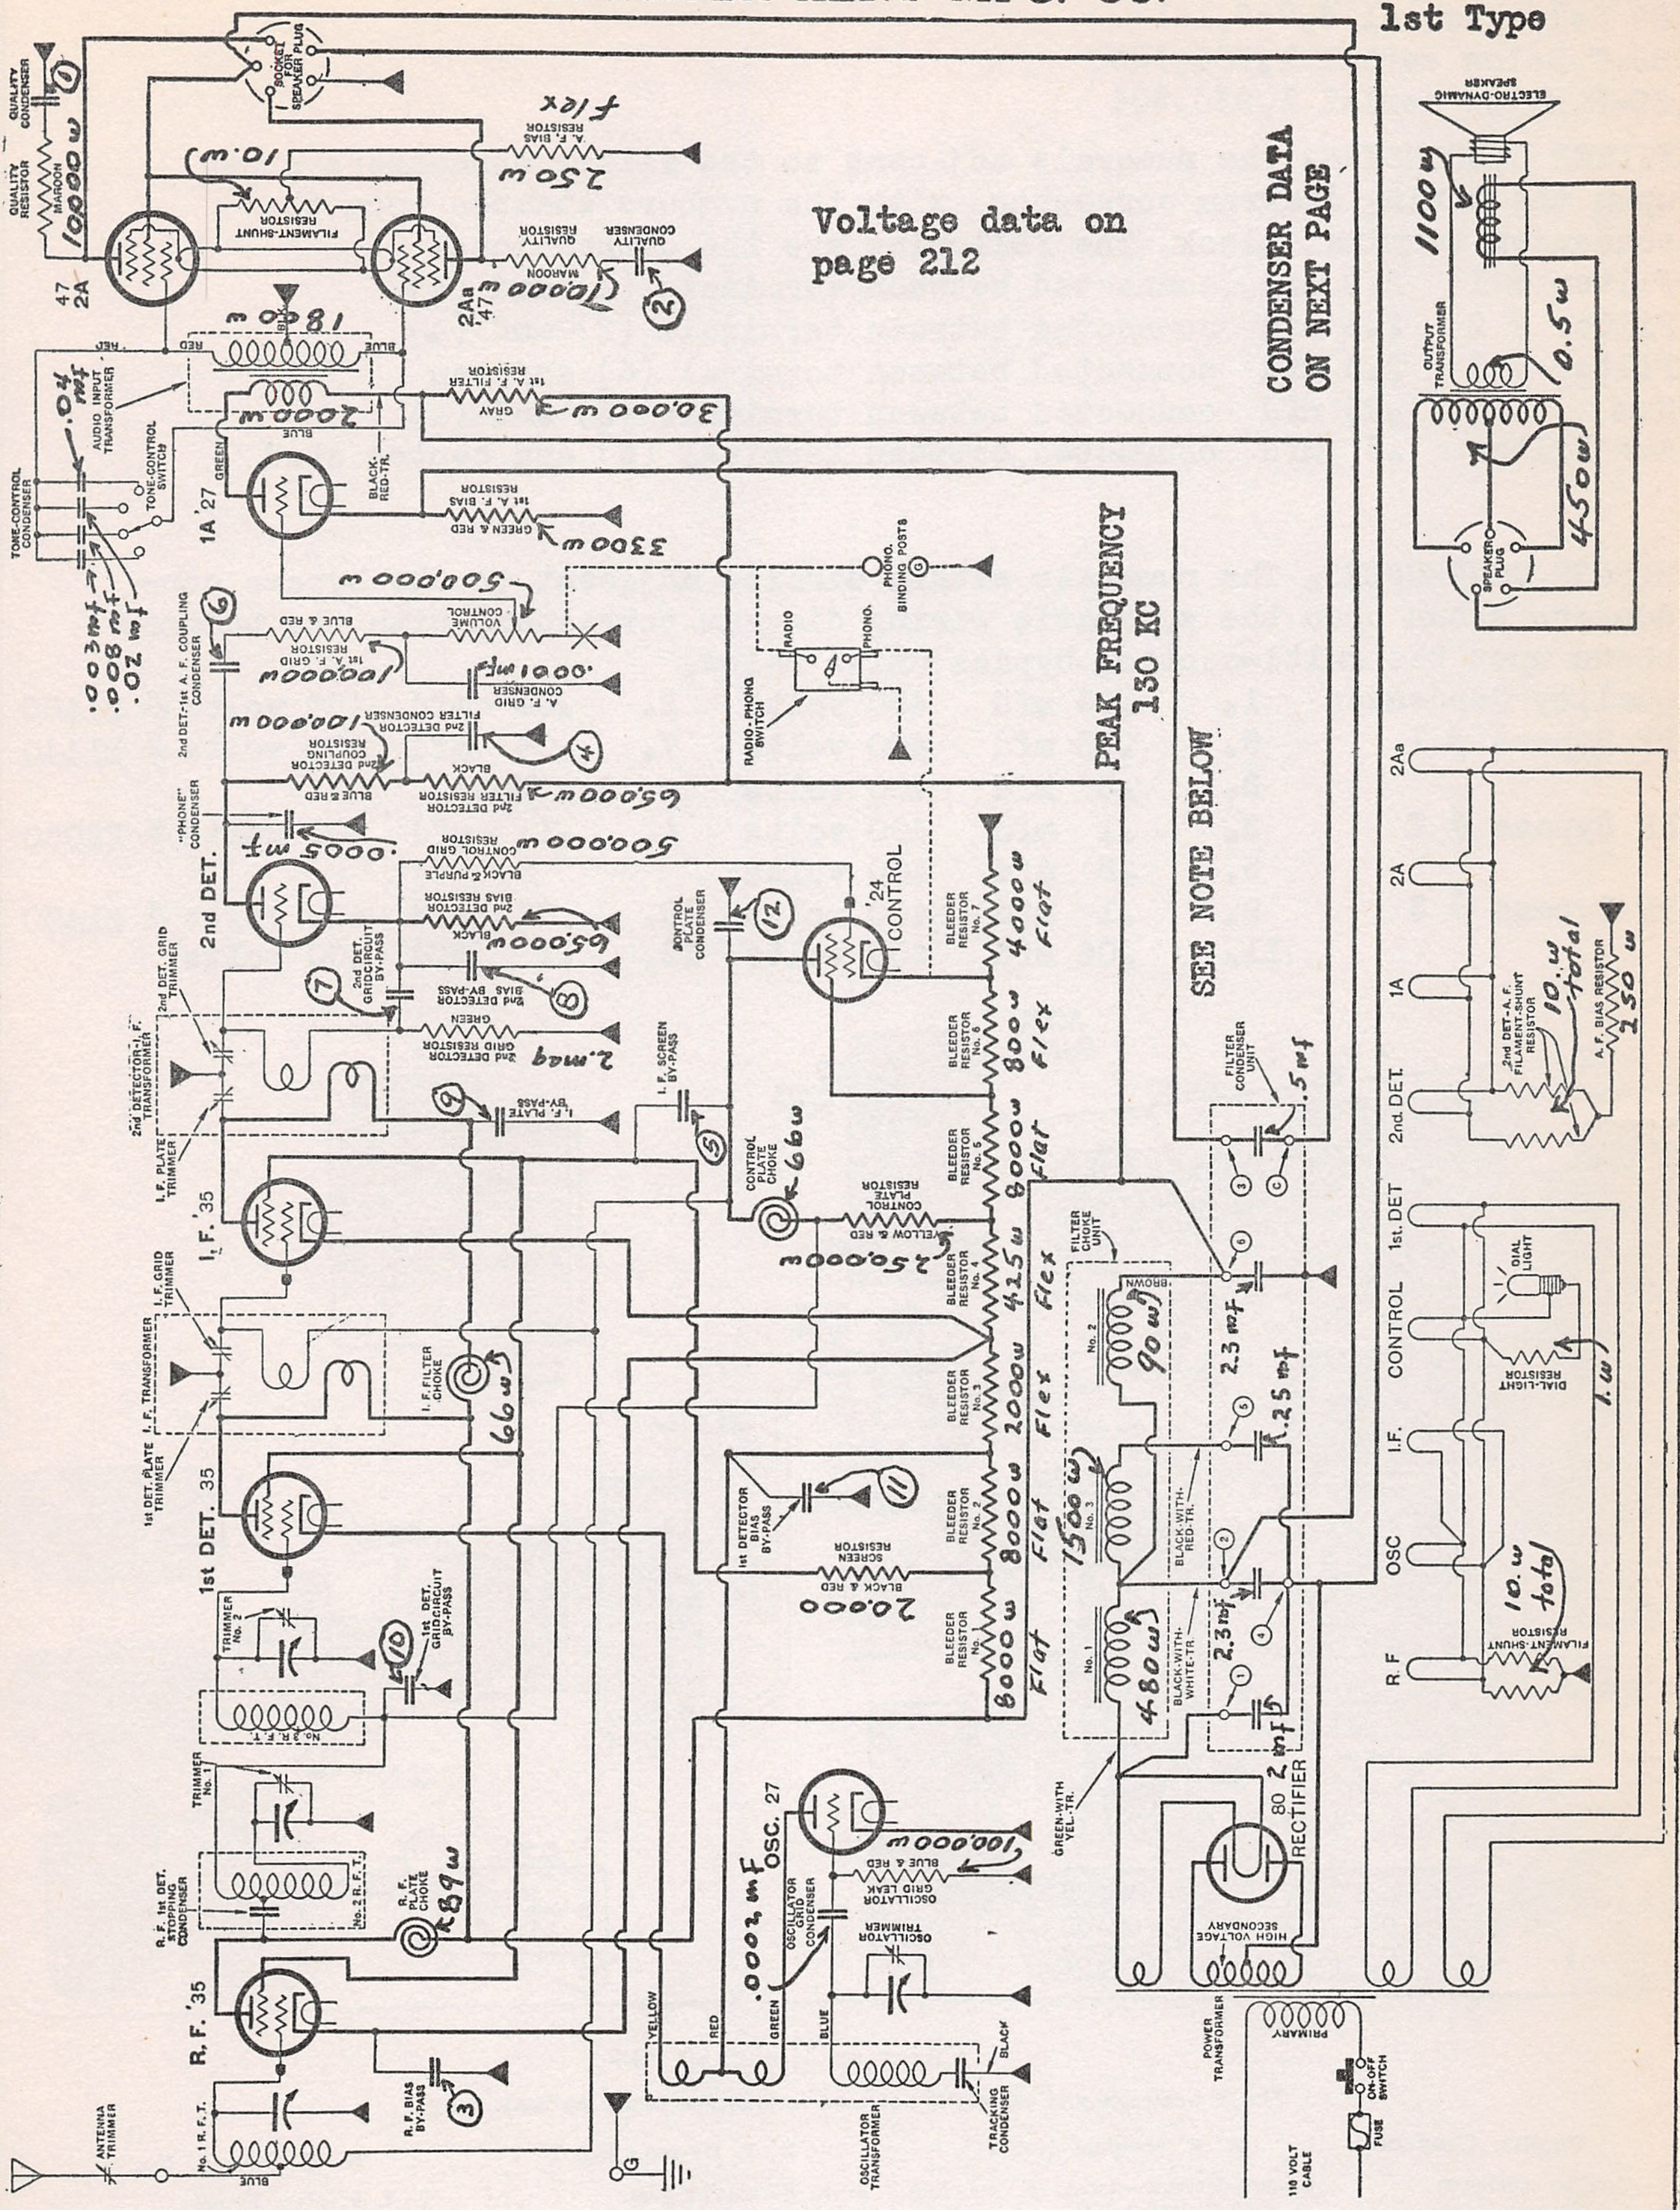
ELECTRO-DYNAMIC SPEAKER
OUTPUT TRANSFORMER
SPEAKER PLUG
1100w
0.5w
450w
QUALITY CONDENSER
QUALITY RESISTOR MAROON
10000 w
FILAMENT-SHUNT RESISTOR
10.w
A. F. BIAS RESISTOR
250w
flex
SOCKET FOR SPEAKER PLUG
47 2A
2Aa 47
QUALITY RESISTOR MAROON
QUALITY CONDENSER
10000 w
AUDIO INPUT TRANSFORMER
180 w
2000 w
TONE-CONTROL SWITCH
TONE-CONTROL CONDENSER
.04 mf
.003 mf
.008 mf
.02 mf
1st A. F. FILTER RESISTOR GRAY
30,000 w
1A '27
1st A. F. BIAS RESISTOR GREEN & RED
3300 w
VOLUME CONTROL
500,000 w
1st A. F. GRID RESISTOR BLUE & RED
100000 w
A. F. GRID CONDENSER
.0001 mf
2nd DET-1st A. F. COUPLING CONDENSER
2nd DETECTOR COUPLING RESISTOR BLUE & RED
100,000 w
2nd DETECTOR FILTER CONDENSER
2nd DETECTOR FILTER RESISTOR BLACK
65,000 w
"PHONE" CONDENSER
.0005 mf
2nd DET.
CONTROL GRID RESISTOR BLACK & PURPLE
500,000 w
2nd DETECTOR BIAS RESISTOR BLACK
65,000 w
2nd DET. GRIDCIRCUIT BY-PASS
2nd DETECTOR BIAS BY-PASS
2nd DETECTOR GRID RESISTOR GREEN
2 meg
2nd DET. GRID TRIMMER
2nd DETECTOR-I.F. TRANSFORMER
I. F. PLATE TRIMMER
I. F. PLATE BY-PASS
I. F. SCREEN BY-PASS
RADIO-PHONO SWITCH
RADIO
PHONO.
PHONO. BINDING POSTS
CONTROL PLATE CONDENSER
'24 CONTROL
CONTROL PLATE CHOKE
66w
CONTROL PLATE RESISTOR YELLOW & RED
250,000 w
I. F. '35
I. F. GRID TRIMMER
I. F. TRANSFORMER
I. F. FILTER CHOKE
66w
1st DET. PLATE TRIMMER
1st DET. 35
TRIMMER No. 2
1st DET. GRIDCIRCUIT BY-PASS
No. 2 R. F. T.
TRIMMER No. 1
No. 2 R. F. T.
R. F. 1st DET. STOPPING CONDENSER
R. F. PLATE CHOKE
89w
R. F. '35
R. F. BIAS BY-PASS
ANTENNA TRIMMER
No. 1 R. F. T.
BLUE
G
1st DETECTOR BIAS BY-PASS
SCREEN RESISTOR BLACK & RED
20,000
BLEEDER RESISTOR No. 1
8000 w Flat
BLEEDER RESISTOR No. 2
8000 w Flat
BLEEDER RESISTOR No. 3
2000 w Flex
BLEEDER RESISTOR No. 4
425 w Flex
BLEEDER RESISTOR No. 5
8000 w Flat
BLEEDER RESISTOR No. 6
800 w Flex
BLEEDER RESISTOR No. 7
4000 w Flat
FILTER CHOKE UNIT
No. 1
480 w
No. 2
90 w
No. 3
1500 w
BROWN
BLACK-WITH-RED-TR.
BLACK-WITH-WHITE-TR.
GREEN-WITH-YEL-TR.
FILTER CONDENSER UNIT
.5 mf
2.3 mf
.25 mf
2 mf
80 RECTIFIER
HIGH VOLTAGE SECONDARY
POWER TRANSFORMER
PRIMARY
ON-OFF SWITCH
FUSE
110 VOLT CABLE
OSC. 27
OSCILLATOR GRID LEAK BLUE & RED
100,000 w
OSCILLATOR GRID CONDENSER
.0002 mf
OSCILLATOR TRIMMER
YELLOW
RED
GREEN
BLUE
BLACK
OSCILLATOR TRANSFORMER
TRACKING CONDENSER
2Aa
2A
1A
2nd. DET.
1st. DET
CONTROL
I.F.
OSC
R F
2nd DET-A. F. FILAMENT-SHUNT RESISTOR
10.w total
A. F. BIAS RESISTOR
250 w
DIAL LIGHT
DIAL-LIGHT RESISTOR
1.w
FILAMENT-SHUNT RESISTOR
10.w total
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫

Voltage data on page 212

CONDENSER DATA ON NEXT PAGE

PEAK FREQUENCY 130 KC

SEE NOTE BELOW

Diagram of Model 89, 89-F, and 89-P (A. C.-operated).

The 2nd-detector grid resistor and the 2nd-detector grid-circuit by-pass are NOT used in this set, and the grid-return of the 2nd-detector connects directly to the chassis.

Later types of this Model have No. 1 and No. 2 R. F. transformers connected ahead of the R. F. tube, as shown in the diagram of Model 87

The phonograph-switching circuit in 89-P is shown above in dotted lines.

Voltage reference to page 2-5

MODEL 89,89-F,89-P ATWATER KENT MFG. CO.

89 Below serial 6,755,181
89-F Below serial 1,585,395
89-P Below serial 1,935,904

FILTER CONDENSERS. The numerals adjacent to the filter condensers shown upon the wiring diagram correspond with the numbers stamped upon the condenser terminal block. The following are the connections:

Filter # 1	2.0 mfd	connected between terminals (1) and (4)
Filter # 2	2.3 mfd	connected between terminals (2) and (4)
Filter # 3	2.3 mfd	connected between terminal (6) and can
Hum	.25 mfd	connected between terminals (5) and (4)
A-F Filter	.5 mfd	connected between terminal (6) and center stud

BYPASS CONDENSERS. The numerals within circles adjacent to the bypass condensers shown upon the schematic wiring diagram correspond with the numbers shown upon the multi-section bypass units below.

Quality Condenser	1.	.03 mfd	450 volts	2.	.03 mfd	450 volts	# 21450
RF Bypass # 1	6.	.05 mfd	400 volts	7.	.04 mfd	400 volts	# 21440
	8.	.3 mfd	400 volts	* See Note.			
RF Bypass # 2	3.	.1 mfd	400 volts	4.	.1 mfd	400 volts	# 22050
	5.	.3 mfd	400 volts				
RF Bypass # 3	9.	.1 mfd	400 volts	10.	.02 mfd	400 volts	# 21430
	11.	.06 mfd	400 volts	12.	.1 mfd	400 volts	

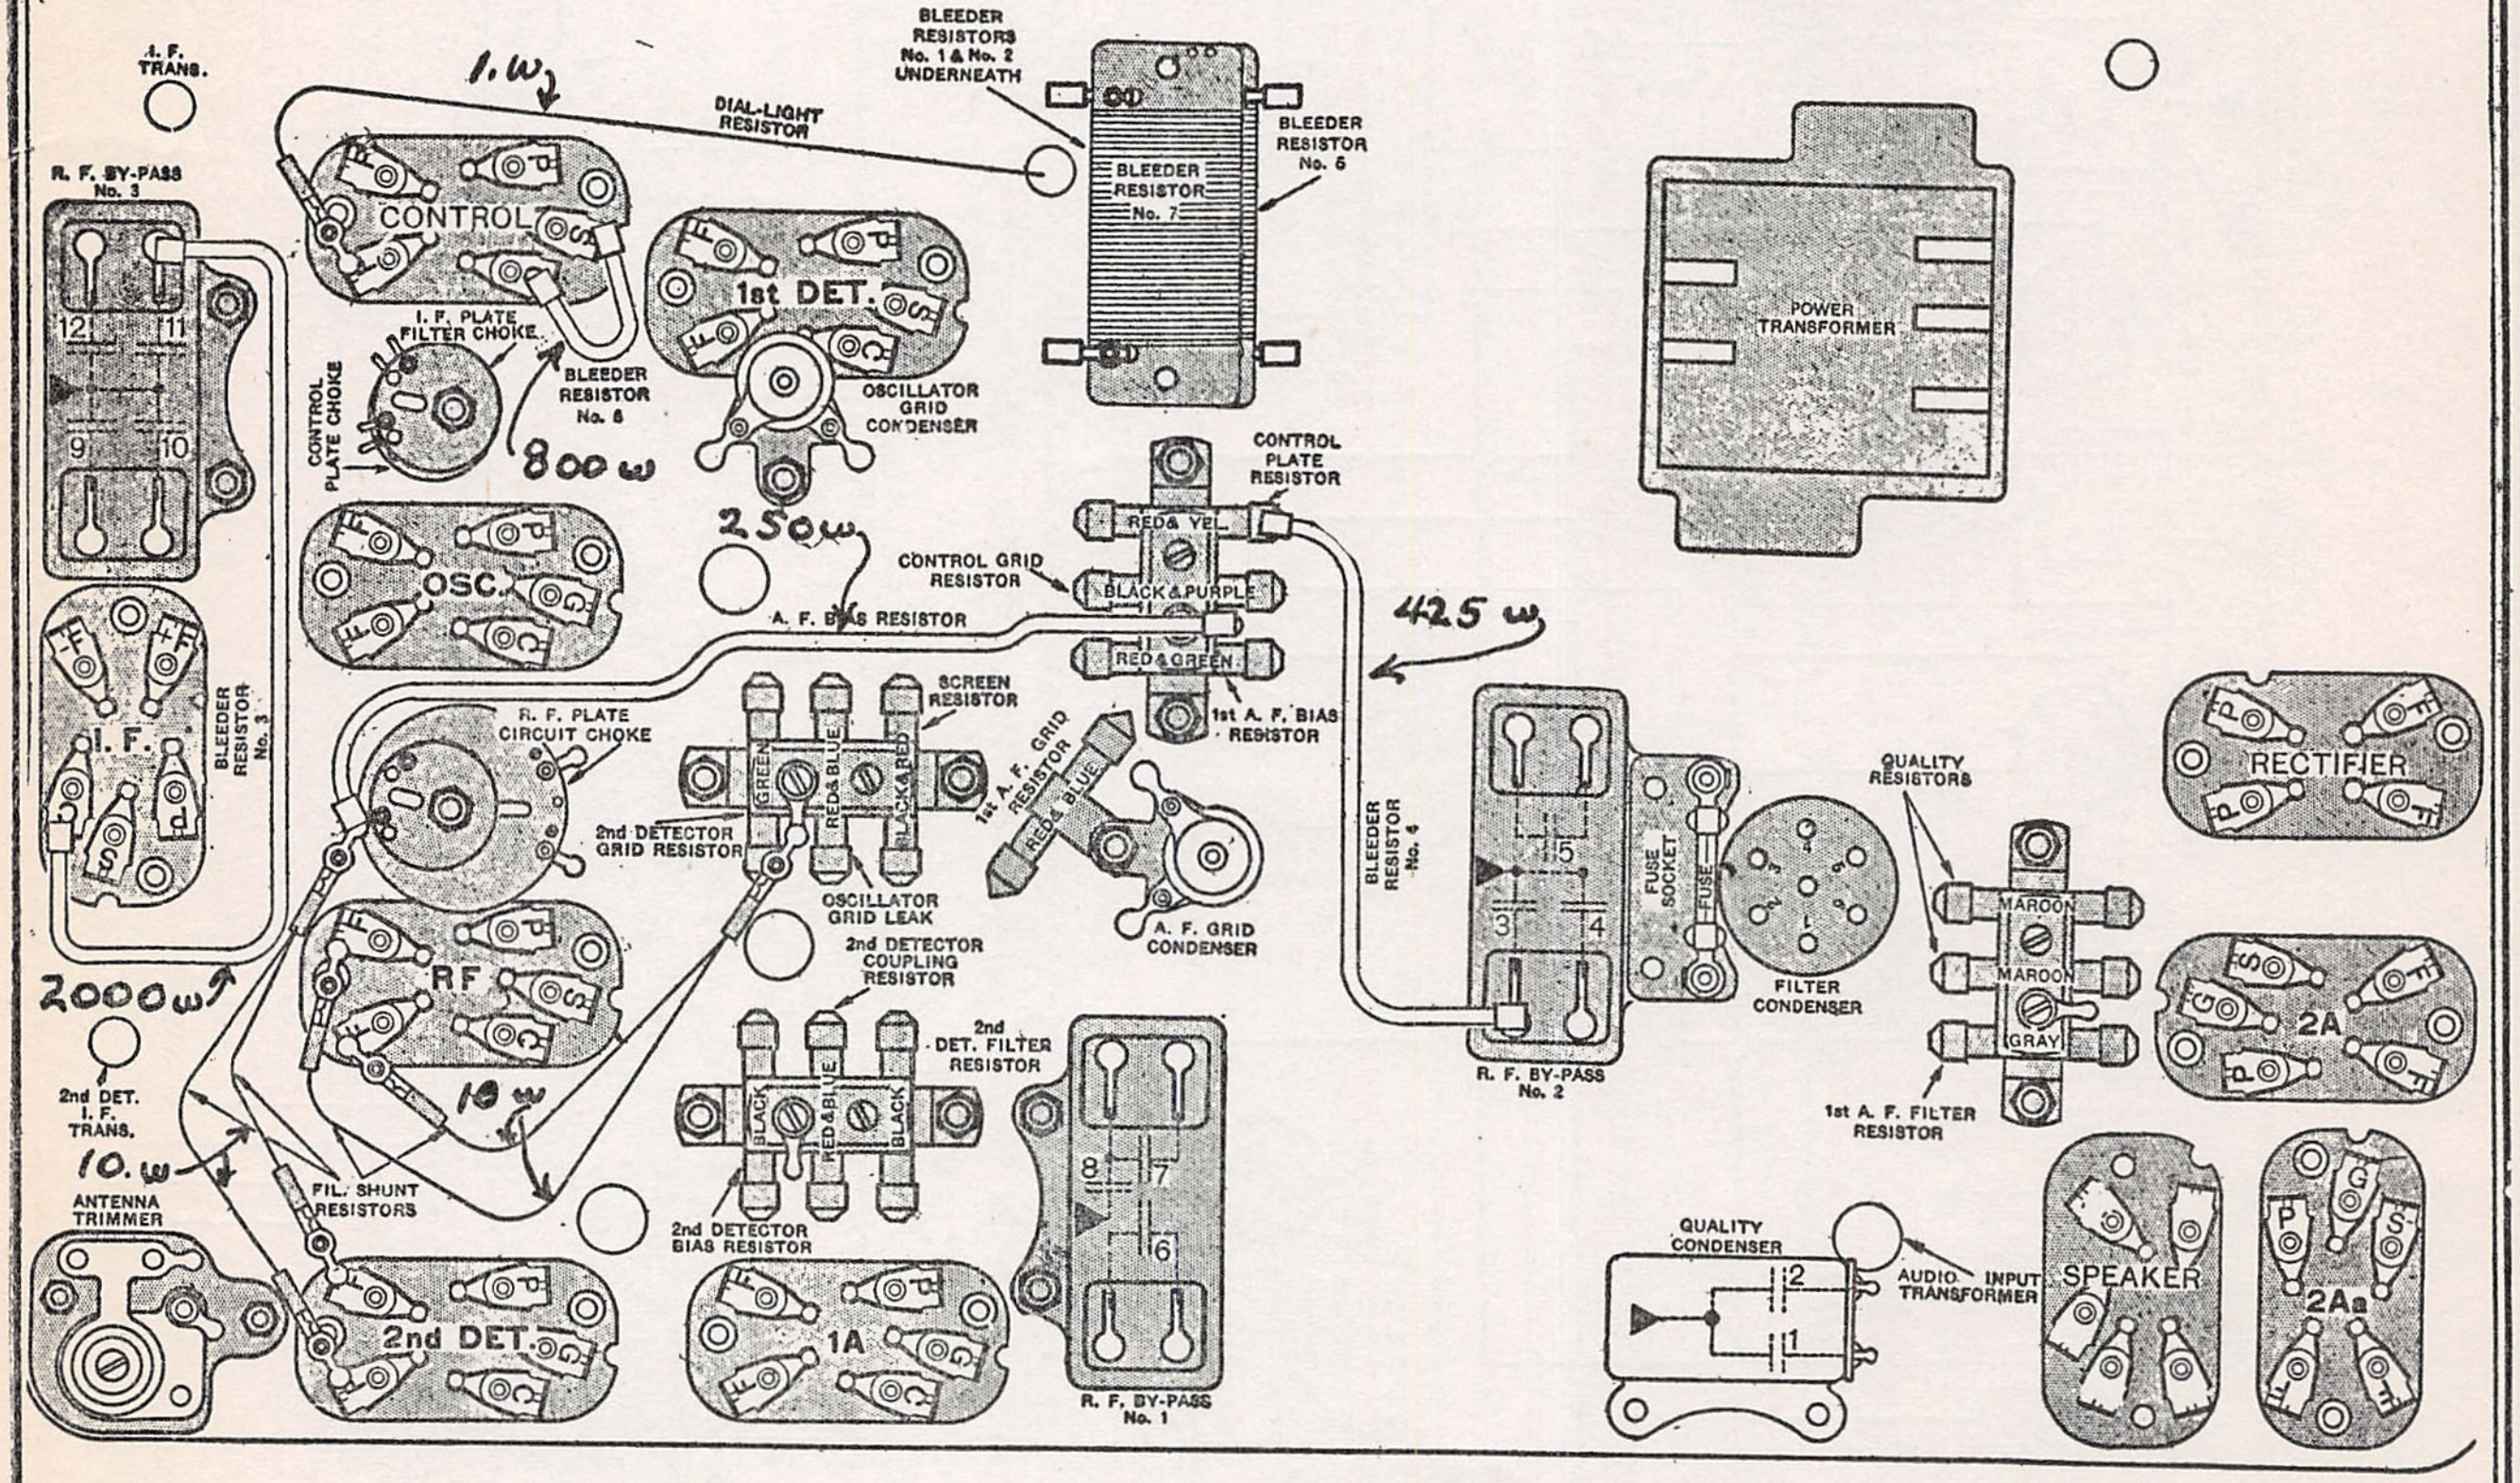
A. F. TRANS.
1.w
DIAL-LIGHT RESISTOR
BLEEDER RESISTORS No. 1 & No. 2 UNDERNEATH
BLEEDER RESISTOR No. 6
BLEEDER RESISTOR No. 7
R. F. BY-PASS No. 3
12
11
9
10
CONTROL
P
S
C
F
1st DET.
I. F. PLATE FILTER CHOKE
BLEEDER RESISTOR No. 8
CONTROL PLATE CHOKE
800 w
OSCILLATOR GRID CONDENSER
CONTROL PLATE RESISTOR
POWER TRANSFORMER
250w
OSC.
G
CONTROL GRID RESISTOR
RED & YEL.
BLACK & PURPLE
RED & GREEN
A. F. BIAS RESISTOR
425 w
1st A. F. BIAS RESISTOR
I. F.
BLEEDER RESISTOR No. 3
R. F. PLATE CIRCUIT CHOKE
SCREEN RESISTOR
GREEN
RED & BLUE
BLACK & RED
1st A. F. GRID RESISTOR
2nd DETECTOR GRID RESISTOR
OSCILLATOR GRID LEAK
A. F. GRID CONDENSER
BLEEDER RESISTOR No. 4
5
3
4
FUSE SOCKET
FUSE
FILTER CONDENSER
QUALITY RESISTORS
MAROON
MAROON
GRAY
1st A. F. FILTER RESISTOR
RECTIFIER
2A
R. F. BY-PASS No. 2
2000w
RF
2nd DETECTOR COUPLING RESISTOR
2nd DET. FILTER RESISTOR
2nd DET. I. F. TRANS.
10 w
10. w
ANTENNA TRIMMER
FIL. SHUNT RESISTORS
BLACK
RED & BLUE
BLACK
8
7
6
2nd DETECTOR BIAS RESISTOR
2nd DET.
1A
R. F. BY-PASS No. 1
QUALITY CONDENSER
2
1
AUDIO INPUT TRANSFORMER
SPEAKER
2Aa

CHART OF MODEL 89, 89-F.

The 2nd-detector grid resistor is not used in late-type Model 89 89-F, 89-P.

Quality Condenser

1—Quality condenser.
2—Quality condenser.

R. F. By-pass No. 1

6—2nd-detector—1st-A. F. coupling condenser.
7—2nd-detector grid-circuit by-pass.
8—2nd-detector bias by-pass.

(A small "phone" condenser, not shown, is connected internally to the lower-left terminal of by-pass No. 1.)

R. F. By-pass No. 2

3—R. F. bias-by-pass.
4—2nd-detector filter condenser.
5—I. F. screen by-pass.

R. F. By-pass No. 3

9—I. F. plate by-pass.
10—1st-detector grid-circuit by-pass.
11—1st-detector bias by-pass.
12—Control-plate condenser.

ATWATER KENT MFG. CO.

PHONOGRAPH PICKUP AND INDUCTION DISC MOTOR
(USED IN MODELS 75 AND 89-P)

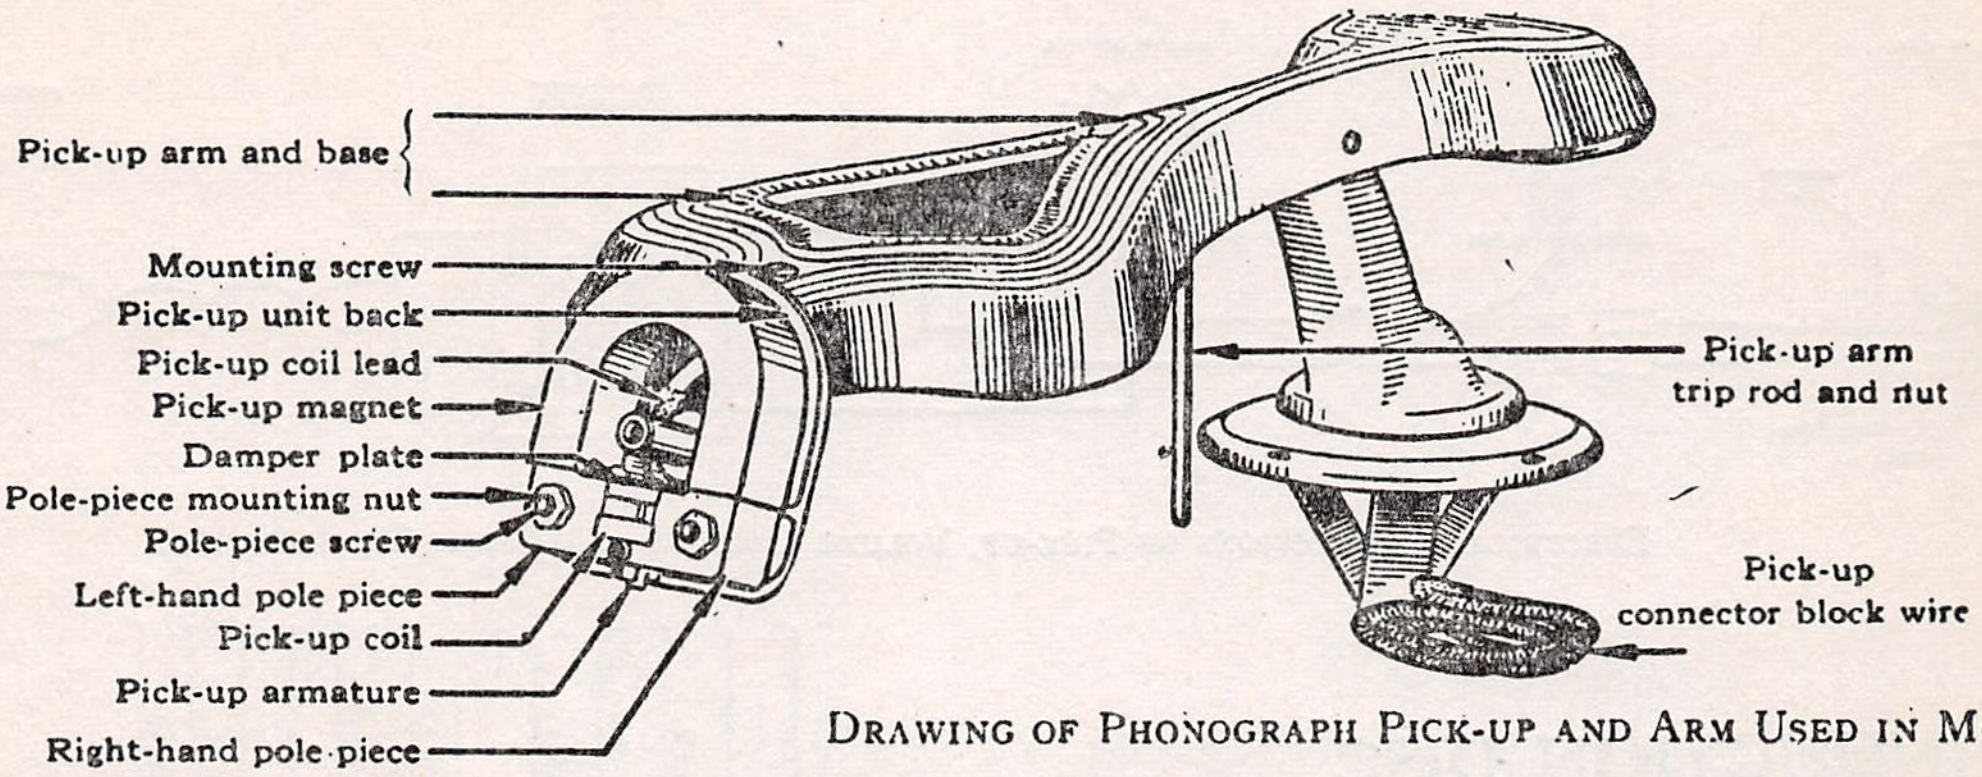
Pick-up arm and base
Mounting screw
Pick-up unit back
Pick-up coil lead
Pick-up magnet
Damper plate
Pole-piece mounting nut
Pole-piece screw
Left-hand pole piece
Pick-up coil
Pick-up armature
Right-hand pole piece
Pick-up arm trip rod and nut
Pick-up connector block wire

Drawing of Phonograph Pick-up and Arm Used in Model 75.

PHONOGRAPH PICK-UP

ARMATURE ADJUSTMENT

The armature-pivot bearings consist of two small strips of rubber (armature spacing cushions) which space the armature from the bearing surfaces on each pole piece.

The top end of the armature fits in a slit in a flat rubber damper. The damper is fastened to a small brass plate that may be adjusted to the right or to the left, in order to center the armature in the magnet gap.

If the armature is off center, as indicated by erratic reproduction, loosen the two round-head screws that hold the damper plate, and move the plate slightly to the right or left to a point where the armature is centered. Tighten the two screws.

When the armature is correctly centered, it should take as much force to move the needle to the left as to the right.

If the rubber damper plate or armature spacing cushions are dried out, or lack life, replace them with new pieces of rubber, which may be secured from your distributor.

If the pick-up magnet must be removed from the pick-up *FIRST* place a steel or iron keeper (a large nail will do across the sides of the magnet poles, *THEN* remove the magnet.

Do *NOT* take off the keeper until *AFTER* the magnet is placed back on its pole pieces in the pick-up.

If the magnet is weak, have it re-magnetized, but be sure to place a keeper across the sides of the magnet poles before removing it from the magnetizer, and do not remove the keeper until after the magnet is placed back on its pole pieces in the pick-up.

CONTINUITY TESTS

Test across the two contacts on the neck of the molded pick-up back. The continuity reading should be nearly full. No reading indicates an open pick-up coil or leads.

Test from either contact on the pick-up to each pole piece, and to the armature. If there is any reading, it indicates that the pick-up coil or leads are grounded. This must be eliminated. Use two small pieces of thin cambric cloth to insulate the pick-up coil from the pole pieces.

AUTOMATIC ELECTRIC SWITCH and FRICTION BRAKE

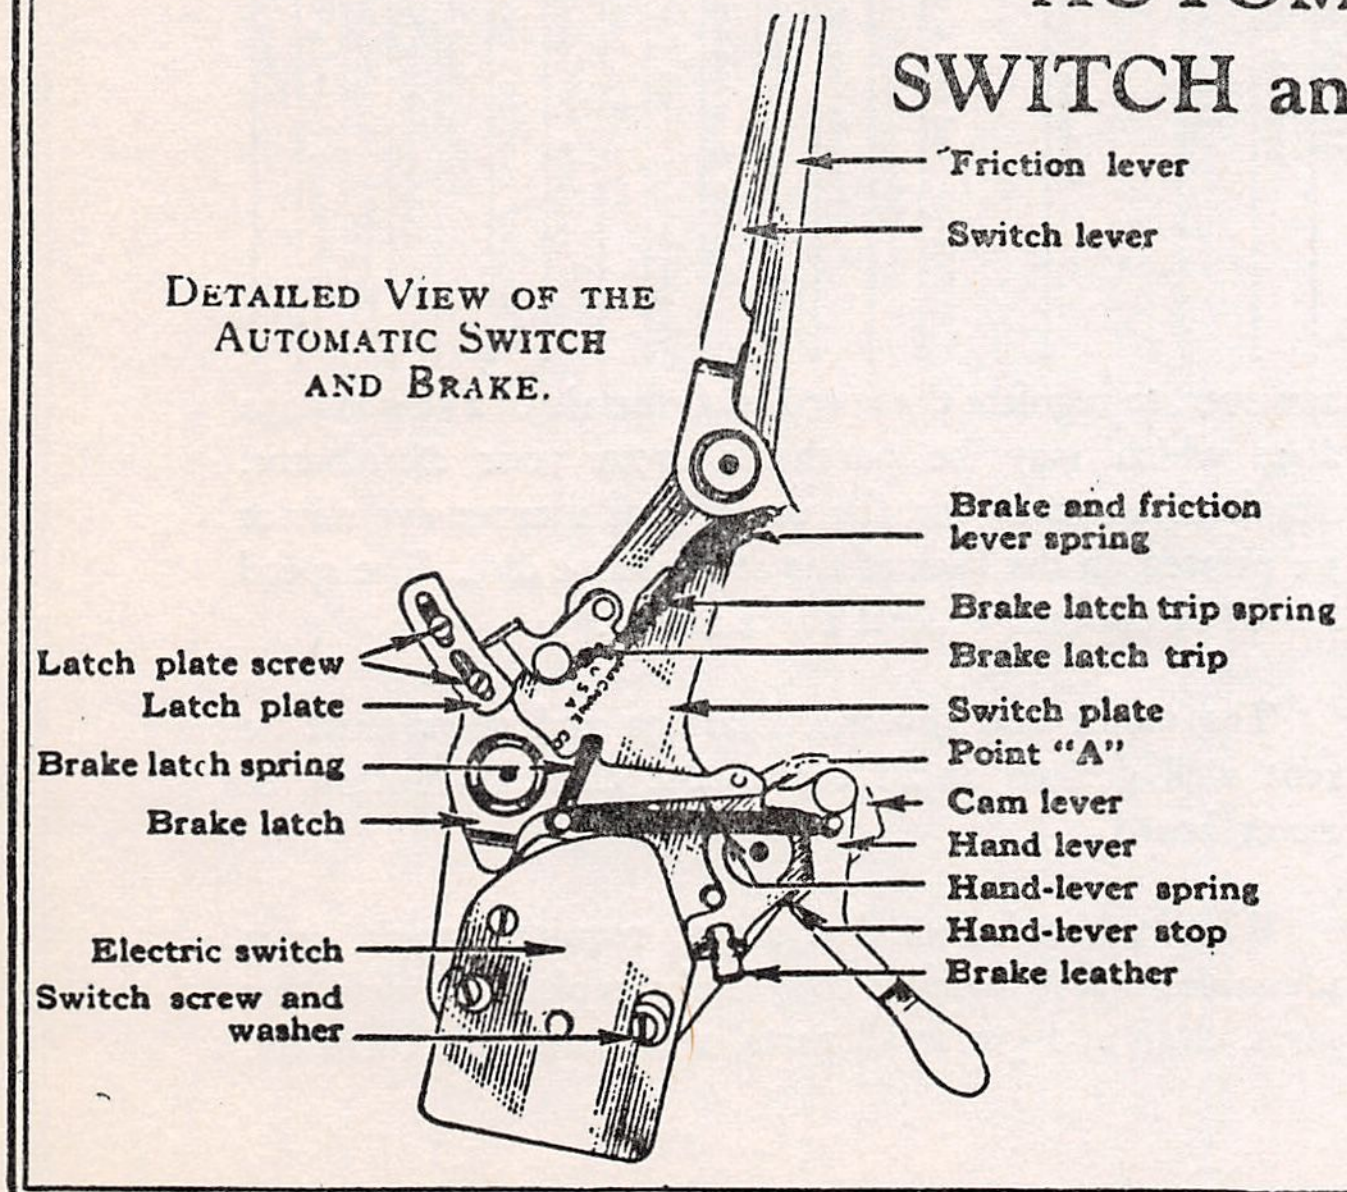
Friction lever
Switch lever
Brake and friction lever spring
Latch plate screw
Brake latch trip spring
Latch plate
Brake latch trip
Switch plate
Brake latch spring
Point "A"
Cam lever
Brake latch
Hand lever
Hand-lever spring
Electric switch
Hand-lever stop
Brake leather
Switch screw and washer

Detailed View of the Automatic Switch and Brake.

ADJUSTMENTS

(1) If the latch does not trip, or trips before completion of a record, bend the hand-lever stop slightly to the right or left, as necessary.

(2) If the latch trip does not engage correctly with the latch-plate, loosen the two latch-plate screws and shift the plate one way or the other, as necessary. Re-tighten the screws Remove any burrs from the teeth of the latch plate with fine emery paper.

(3) If the electric switch does not make and break contact when the hand-lever is turned on and off, it may be necessary to bend the long contact spring, or loosen the two switch screws and move the switch until the correct position is found. In the off position, there should be at least $\frac{1}{16}$'' gap between the contact points.

ATWATER KENT MFG. CO.

PHONOGRAPH PICKUP AND INDUCTION DISC MOTOR
(USED IN MODELS 75 AND 89-P)

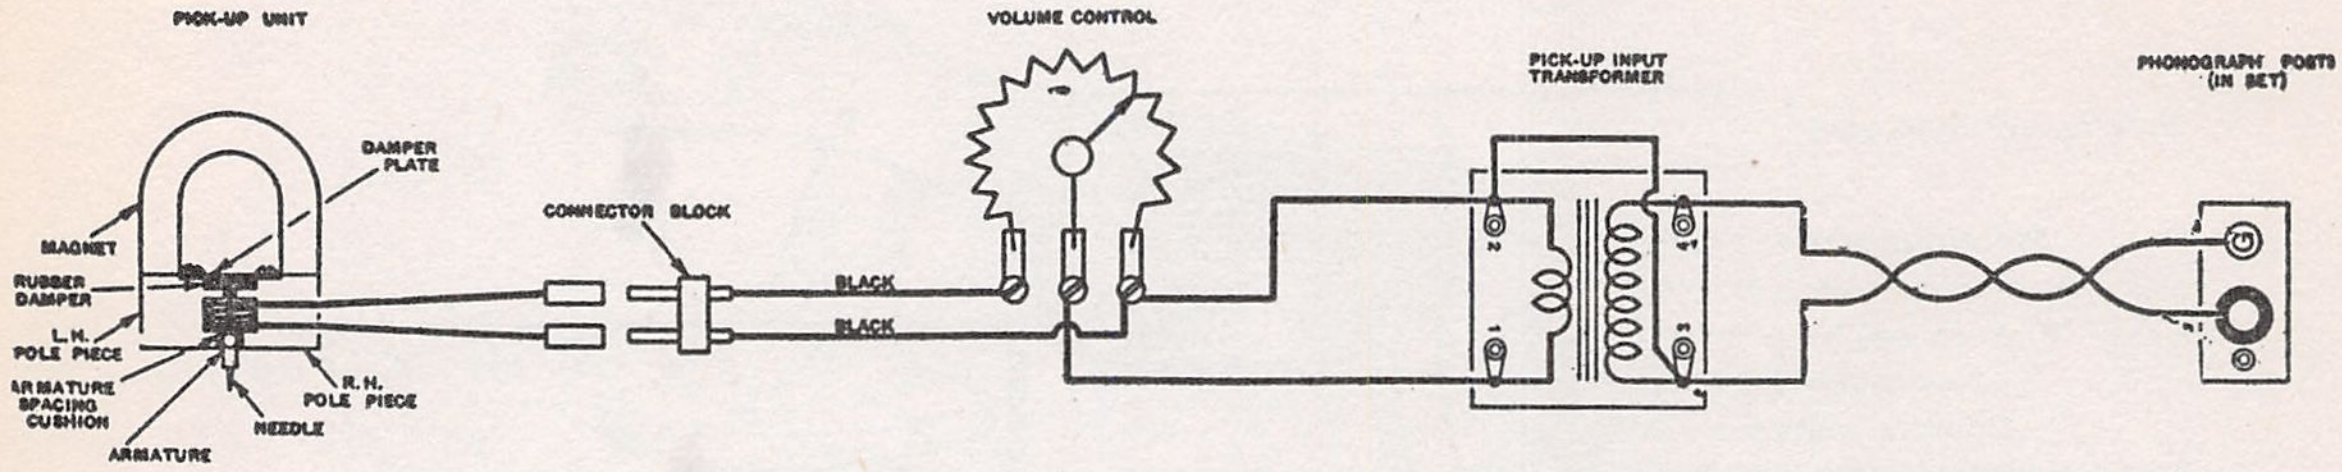
PICK-UP UNIT
MAGNET
DAMPER PLATE
RUBBER DAMPER
L.H. POLE PIECE
ARMATURE SPACING CUSHION
ARMATURE
NEEDLE
R.H. POLE PIECE
CONNECTOR BLOCK
BLACK
BLACK
VOLUME CONTROL
PICK-UP INPUT TRANSFORMER
PHONOGRAPH POSTS (IN SET)

Electrical Connections of Pick-up, Volume Control and Input Transformer.

INDUCTION DISC PHONOGRAPH MOTOR

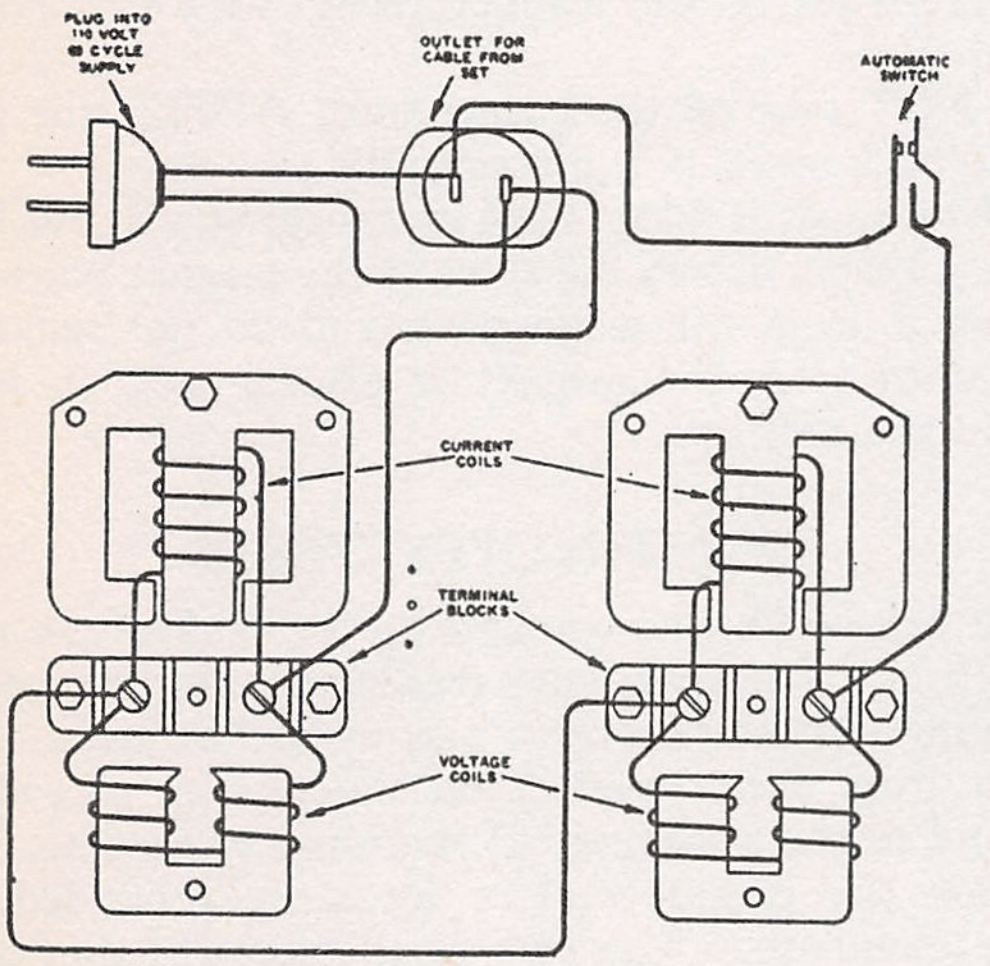
PLUG INTO 110 VOLT 60 CYCLE SUPPLY
OUTLET FOR CABLE FROM SET
AUTOMATIC SWITCH
CURRENT COILS
TERMINAL BLOCKS
VOLTAGE COILS

Electrical Connections of the Induction-disc Phonograph Motor.

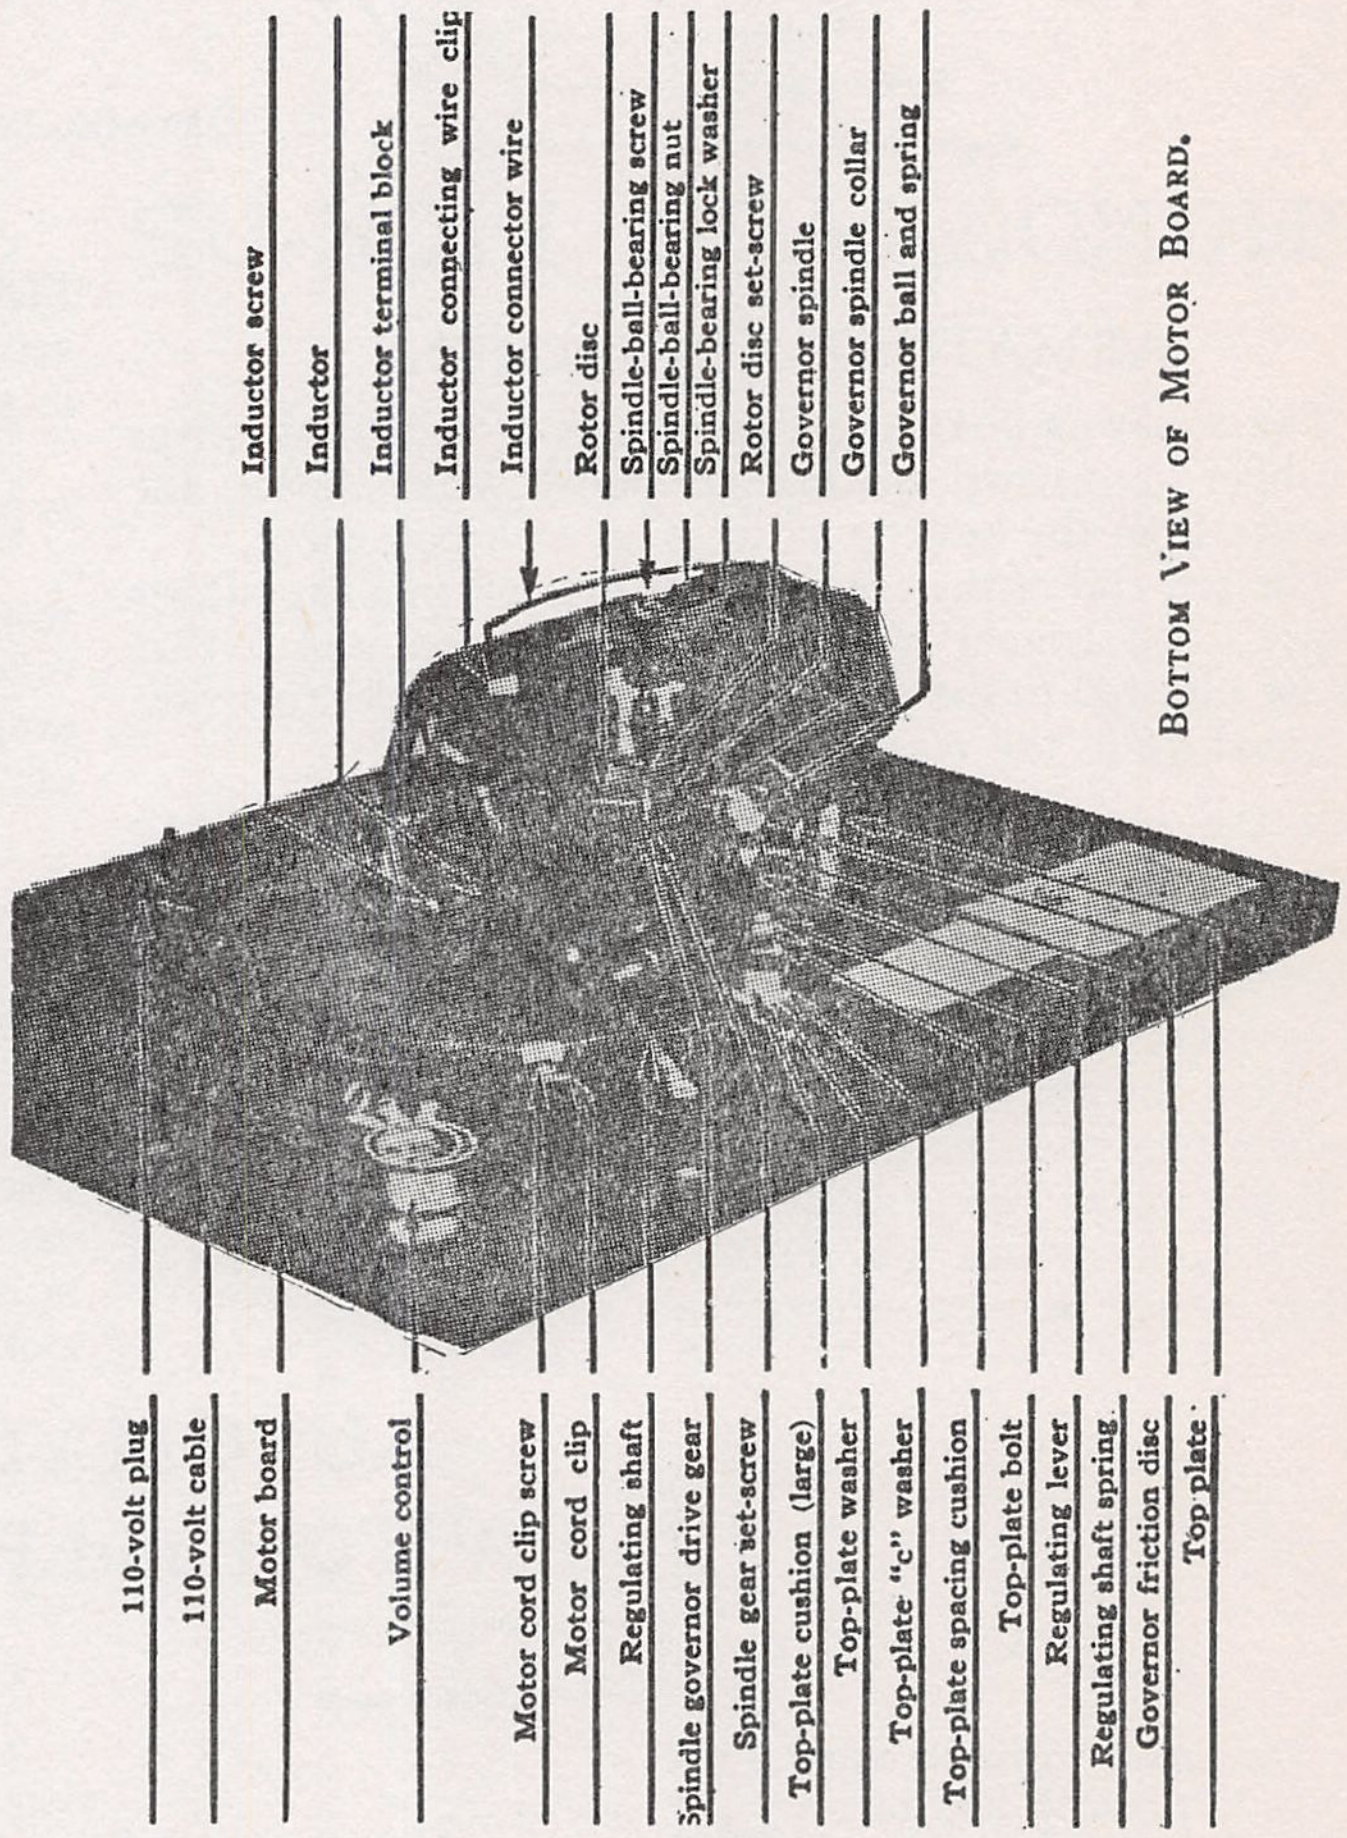
Inductor screw
Inductor
Inductor terminal block
Inductor connecting wire clip
Inductor connector wire
Rotor disc
Spindle-ball-bearing screw
Spindle-ball-bearing nut
Spindle-bearing lock washer
Rotor disc set-screw
Governor spindle
Governor spindle collar
Governor ball and spring
110-volt plug
110-volt cable
Motor board
Volume control
Motor cord clip screw
Motor cord clip
Regulating shaft
Spindle governor drive gear
Spindle gear set-screw
Top-plate cushion (large)
Top-plate washer
Top-plate "c" washer
Top-plate spacing cushion
Top-plate bolt
Regulating lever
Regulating shaft spring
Governor friction disc
Top plate

Bottom View of Motor Board.

The induction-disc phonograph motor has two sets of field coils or "inductors." Each inductor has three coils and five "poles." A magnetic field is produced between the poles by the alternating current flowing through the three coils.

The edge of a non-magnetic rotor disc fits in the narrow gap between the poles on each inductor. The magnetic field between the poles causes the disc to rotate.

The rotor disc itself has no coils, and there are no electrical connections to it.

The speed of the rotor disc is controlled by a governor and a regulating screw device. The correct speed is 78 revolutions per minute (with pick-up on record). The speed may be determined by counting the number of revolutions made by the turntable in one minute. It is preferable, however, to regulate the speed with the aid of a stroboscope disc, which may be purchased from your distributor. Simple instructions for the use of this inexpensive device are printed on the back of the stroboscope disc. The speed should be checked at least twice a year.

The motor and governor bearings and gears must be kept well greased at all times. See chart on bottom of motor board.

When an induction-disc motor requires repair, it is advisable to tear it down completely, replace the defective parts, clean and grease all parts, and reassemble correctly.

MODEL 7 Tube Super
Pentode '31

AUDIOLA RADIO CO.

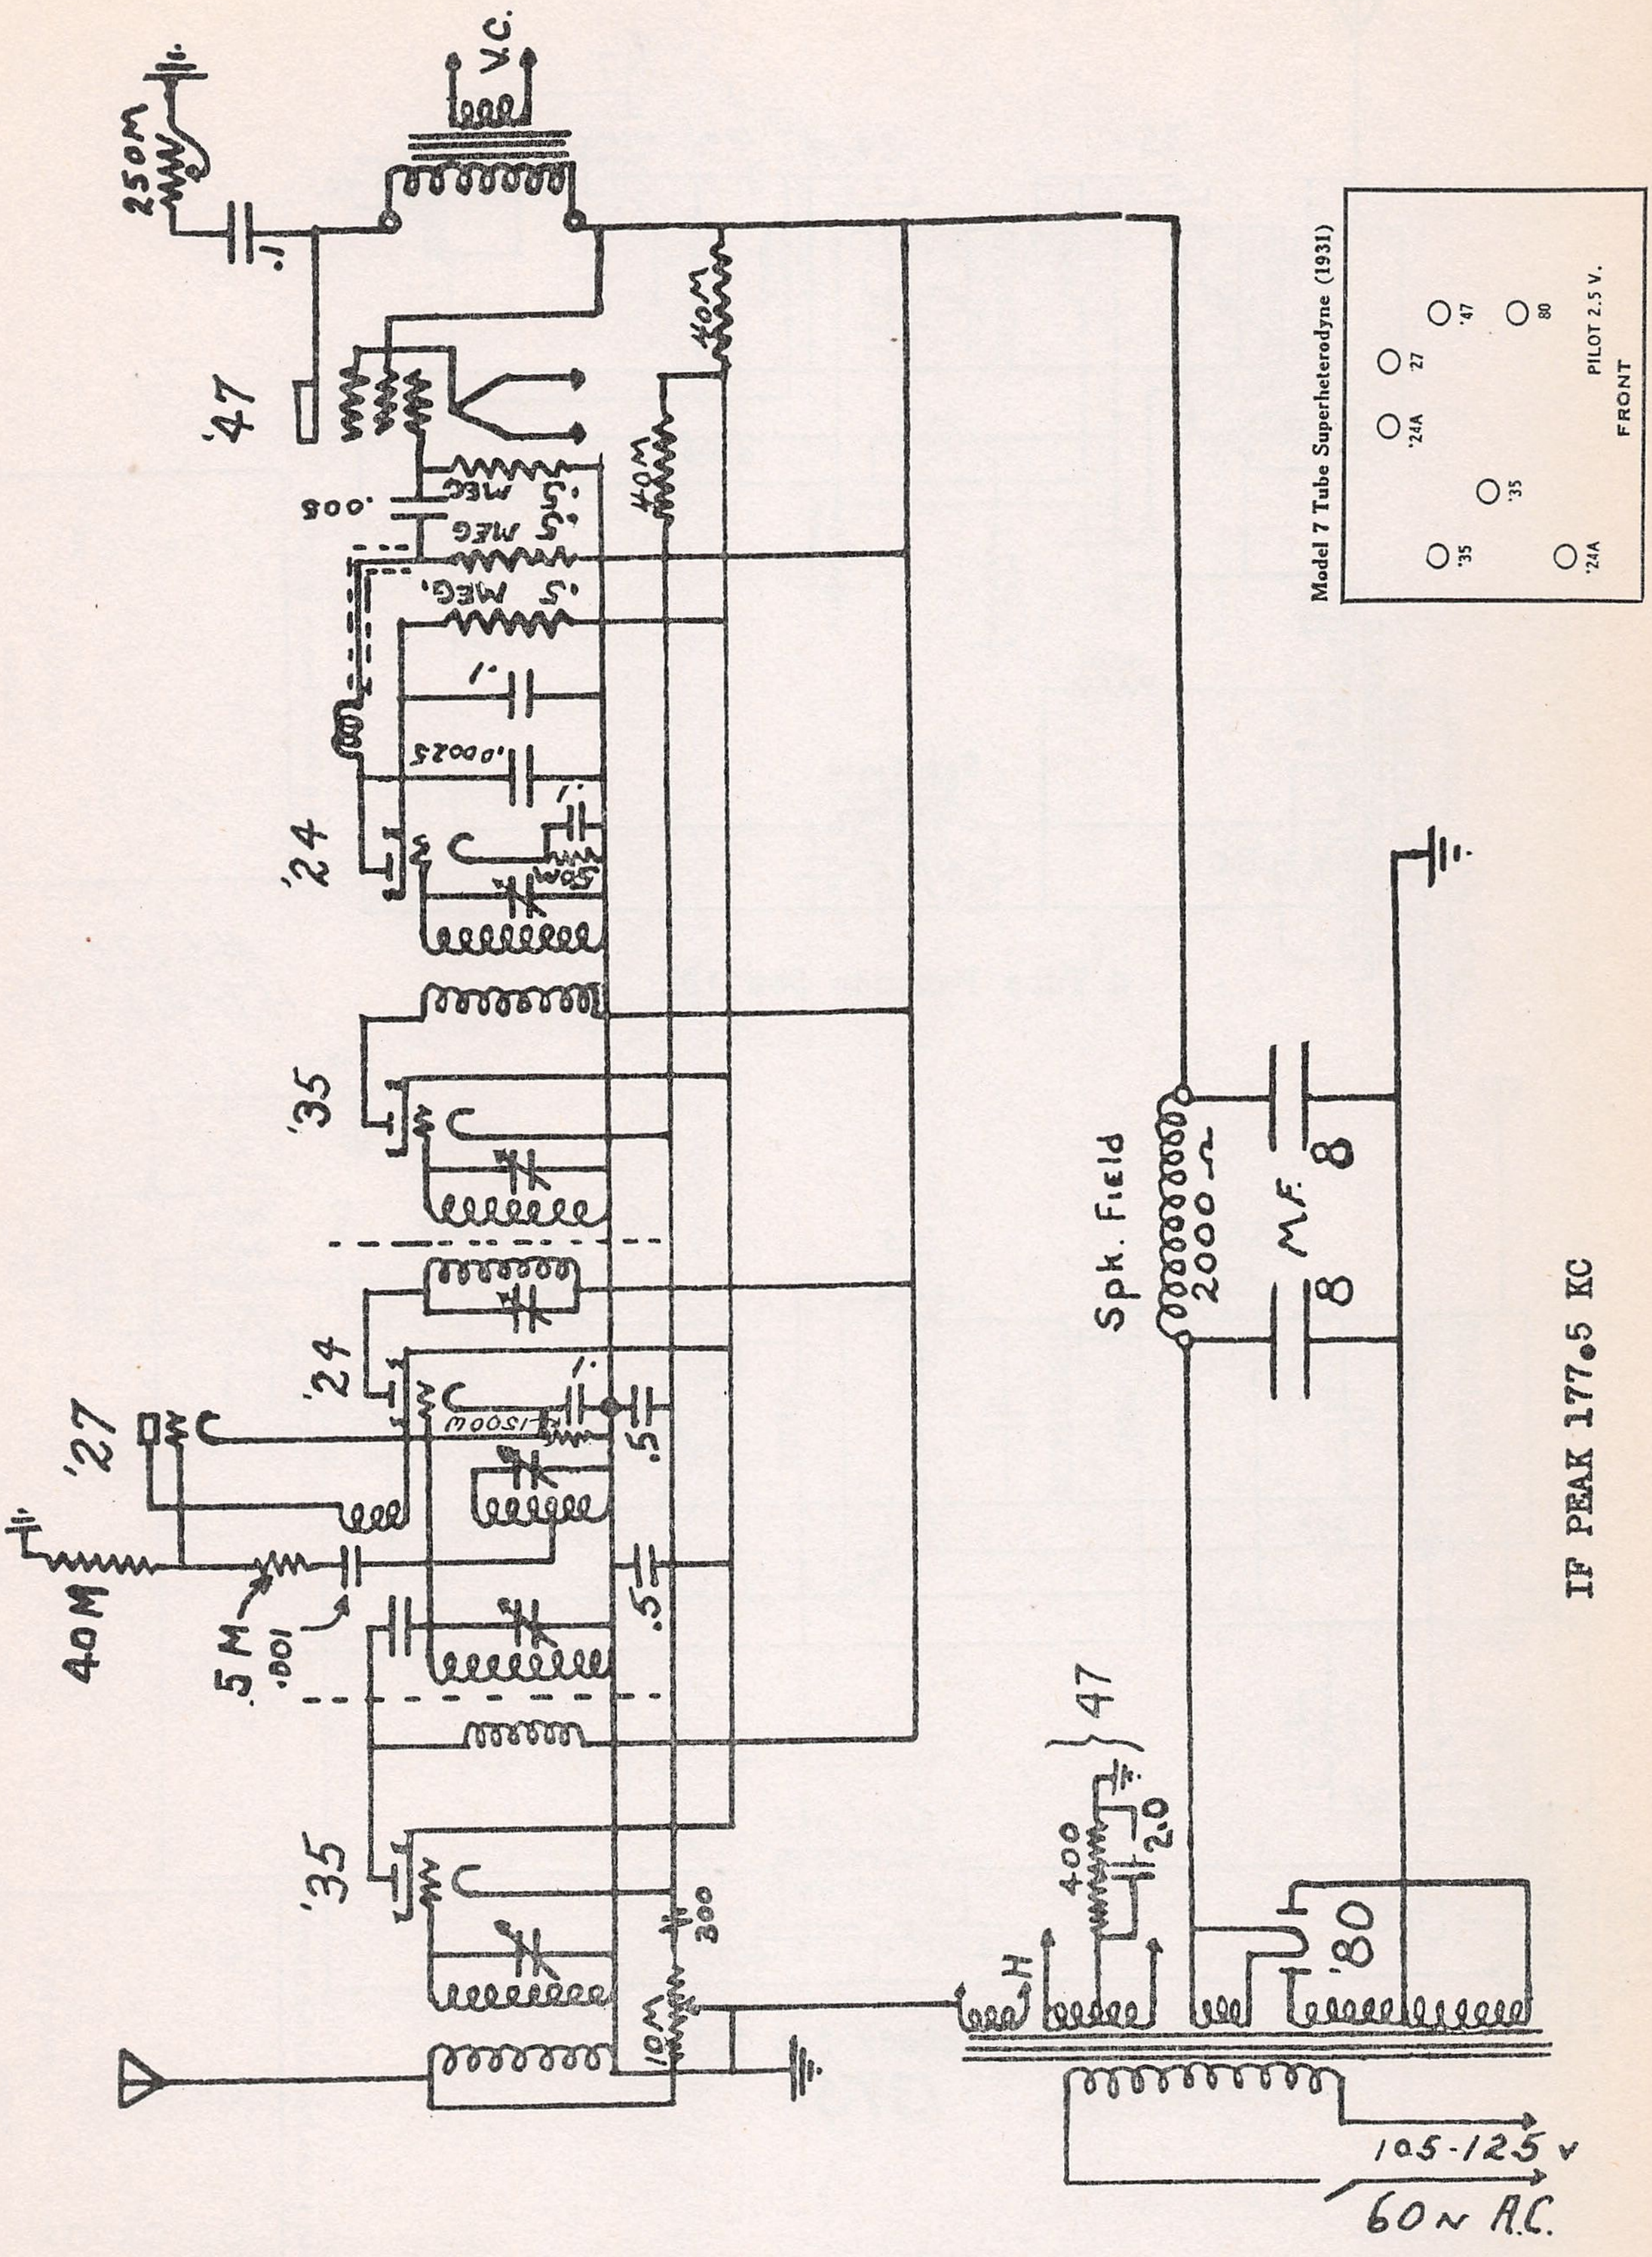
250M
.1
V.C.
'47
.008
1.5 MEG
.5 MEG
.5 MEG.
40M
40M
.1
.00025
'24
.1
50M
'35
'24
'27
.1
1500M
.5
40M
5M
.001
.5
'35
300
10M
Spk. Field
2000Ω
M.F.
8
8
400
2.0
47
H
'80
105-125 v
60~ A.C.
Model 7 Tube Superheterodyne (1931)
'35
'24A
'27
'47
80
'35
'24A
PILOT 2.5 V.
FRONT

IF PEAK 177.5 KC

MODEL 4 Tube Pentode '31
MODEL 5 Tube Pentode '31

AUDIOLA RADIO CO.

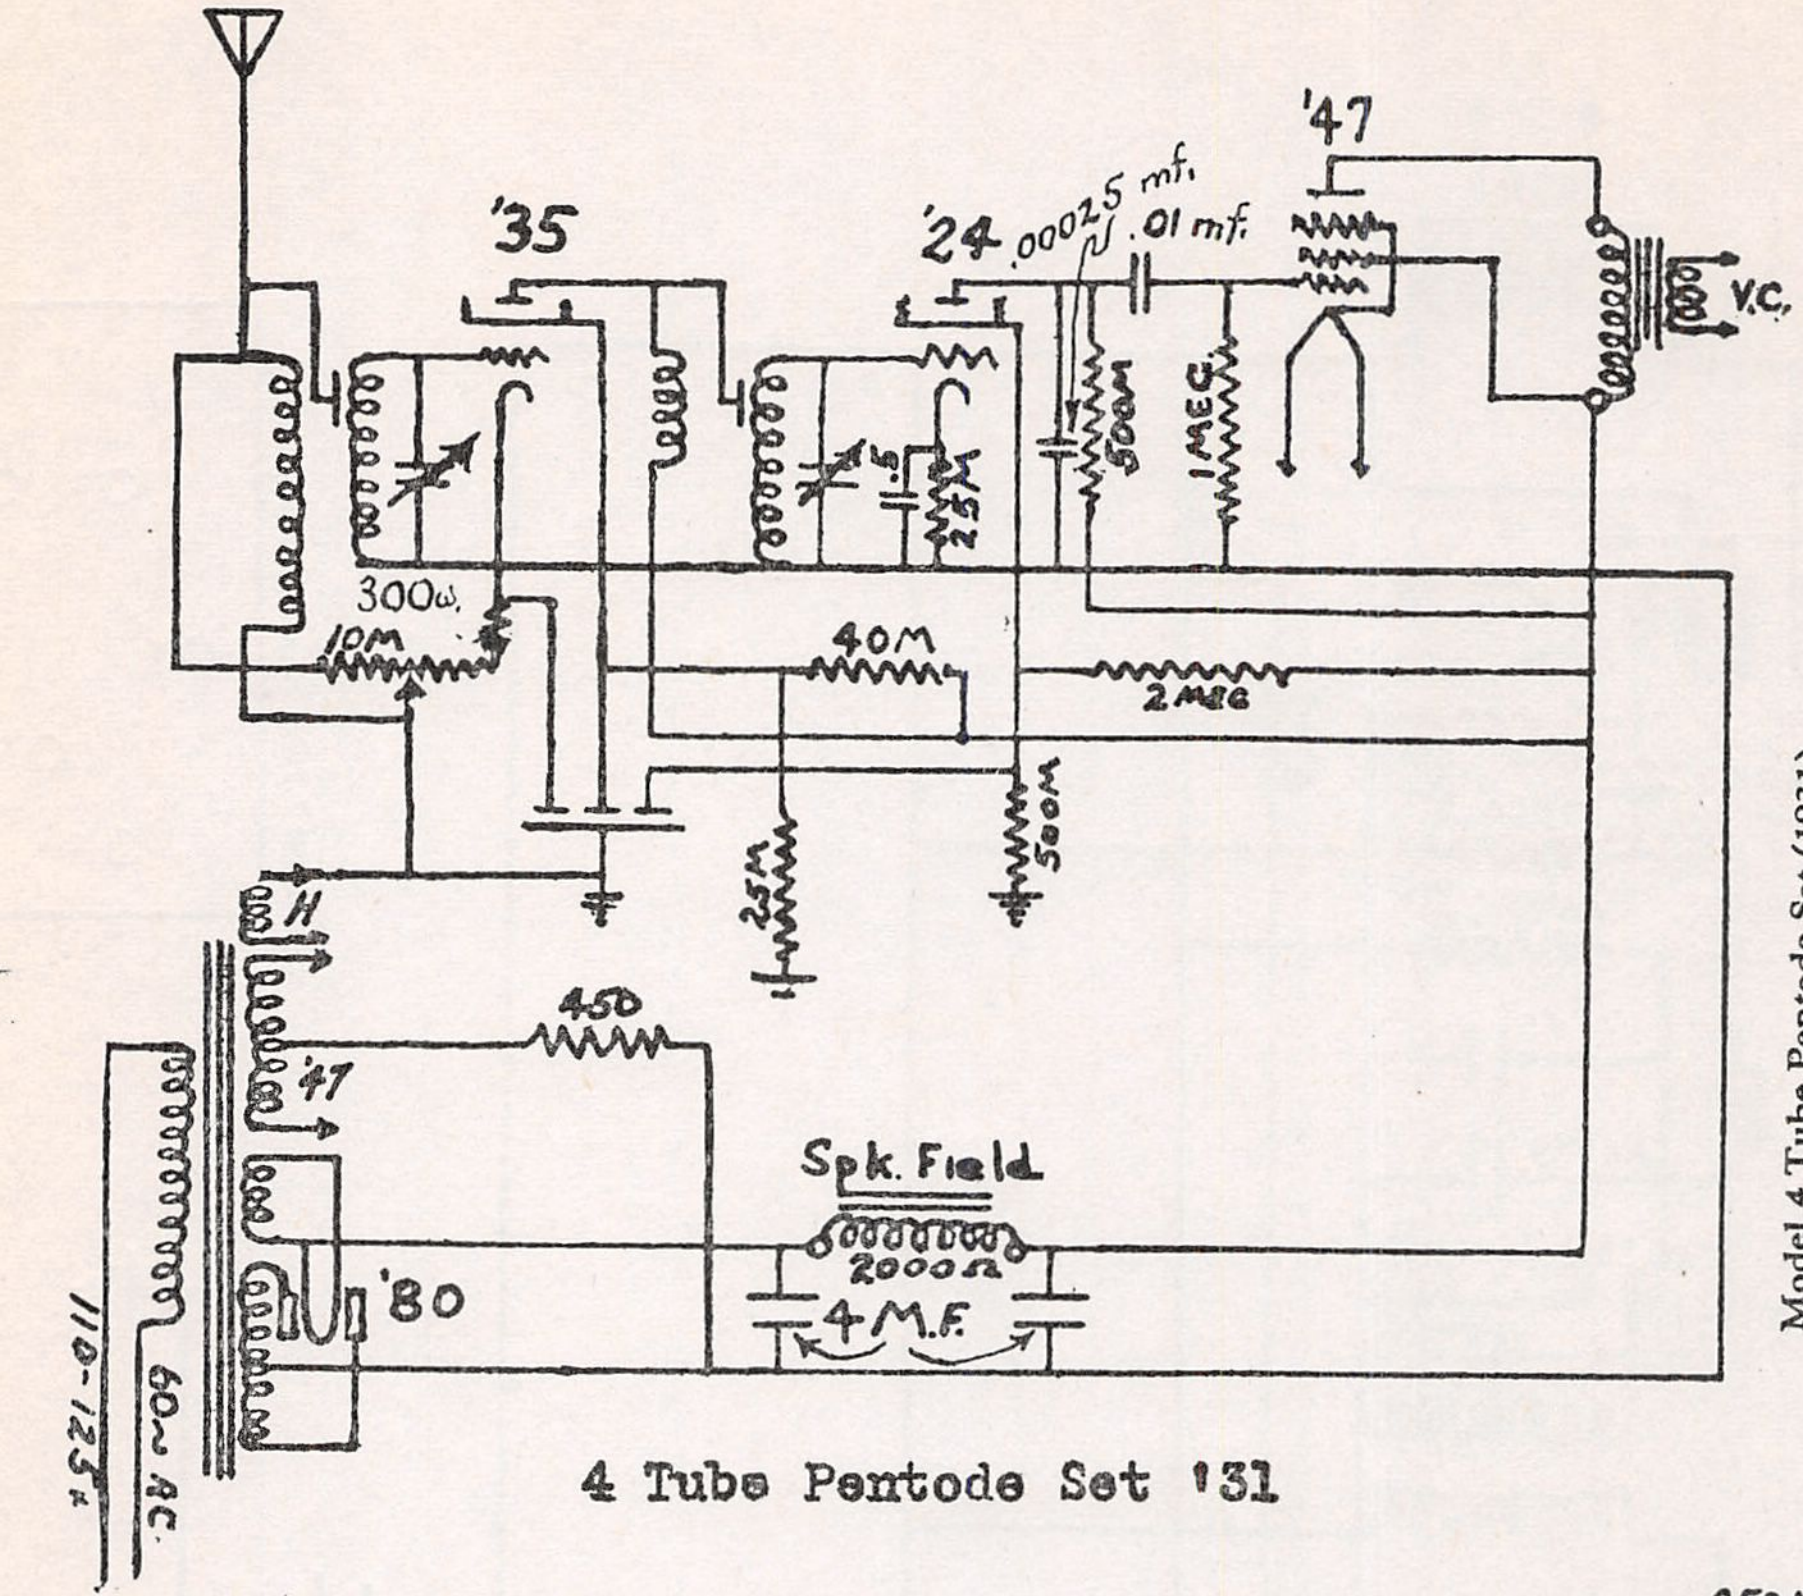
'35
'24
.00025 mf.
.01 mf.
'47
V.C.
.5
25M
500M
1MEG
300w
10M
40M
2MEG
25M
500M
H
450
'47
Spk. Field
2000Ω
4 M.F.
'80
110-123 v
60~ AC

4 Tube Pentode Set '31

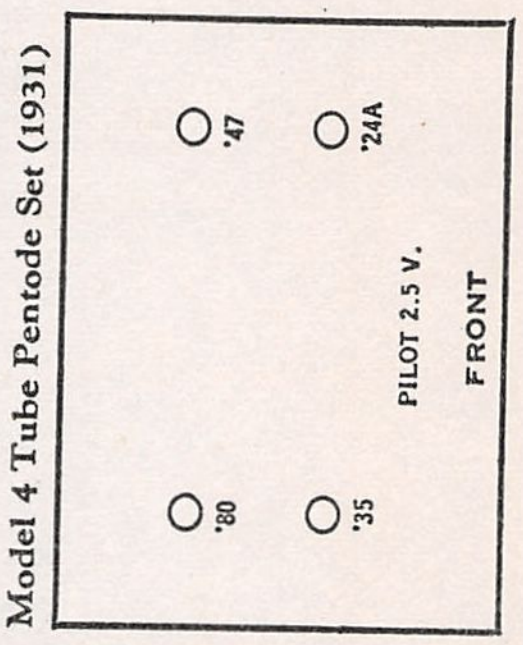
Model 4 Tube Pentode Set (1931)
'47
'24A
'80
'35
PILOT 2.5 V.
FRONT

#62231
4T-31-RF

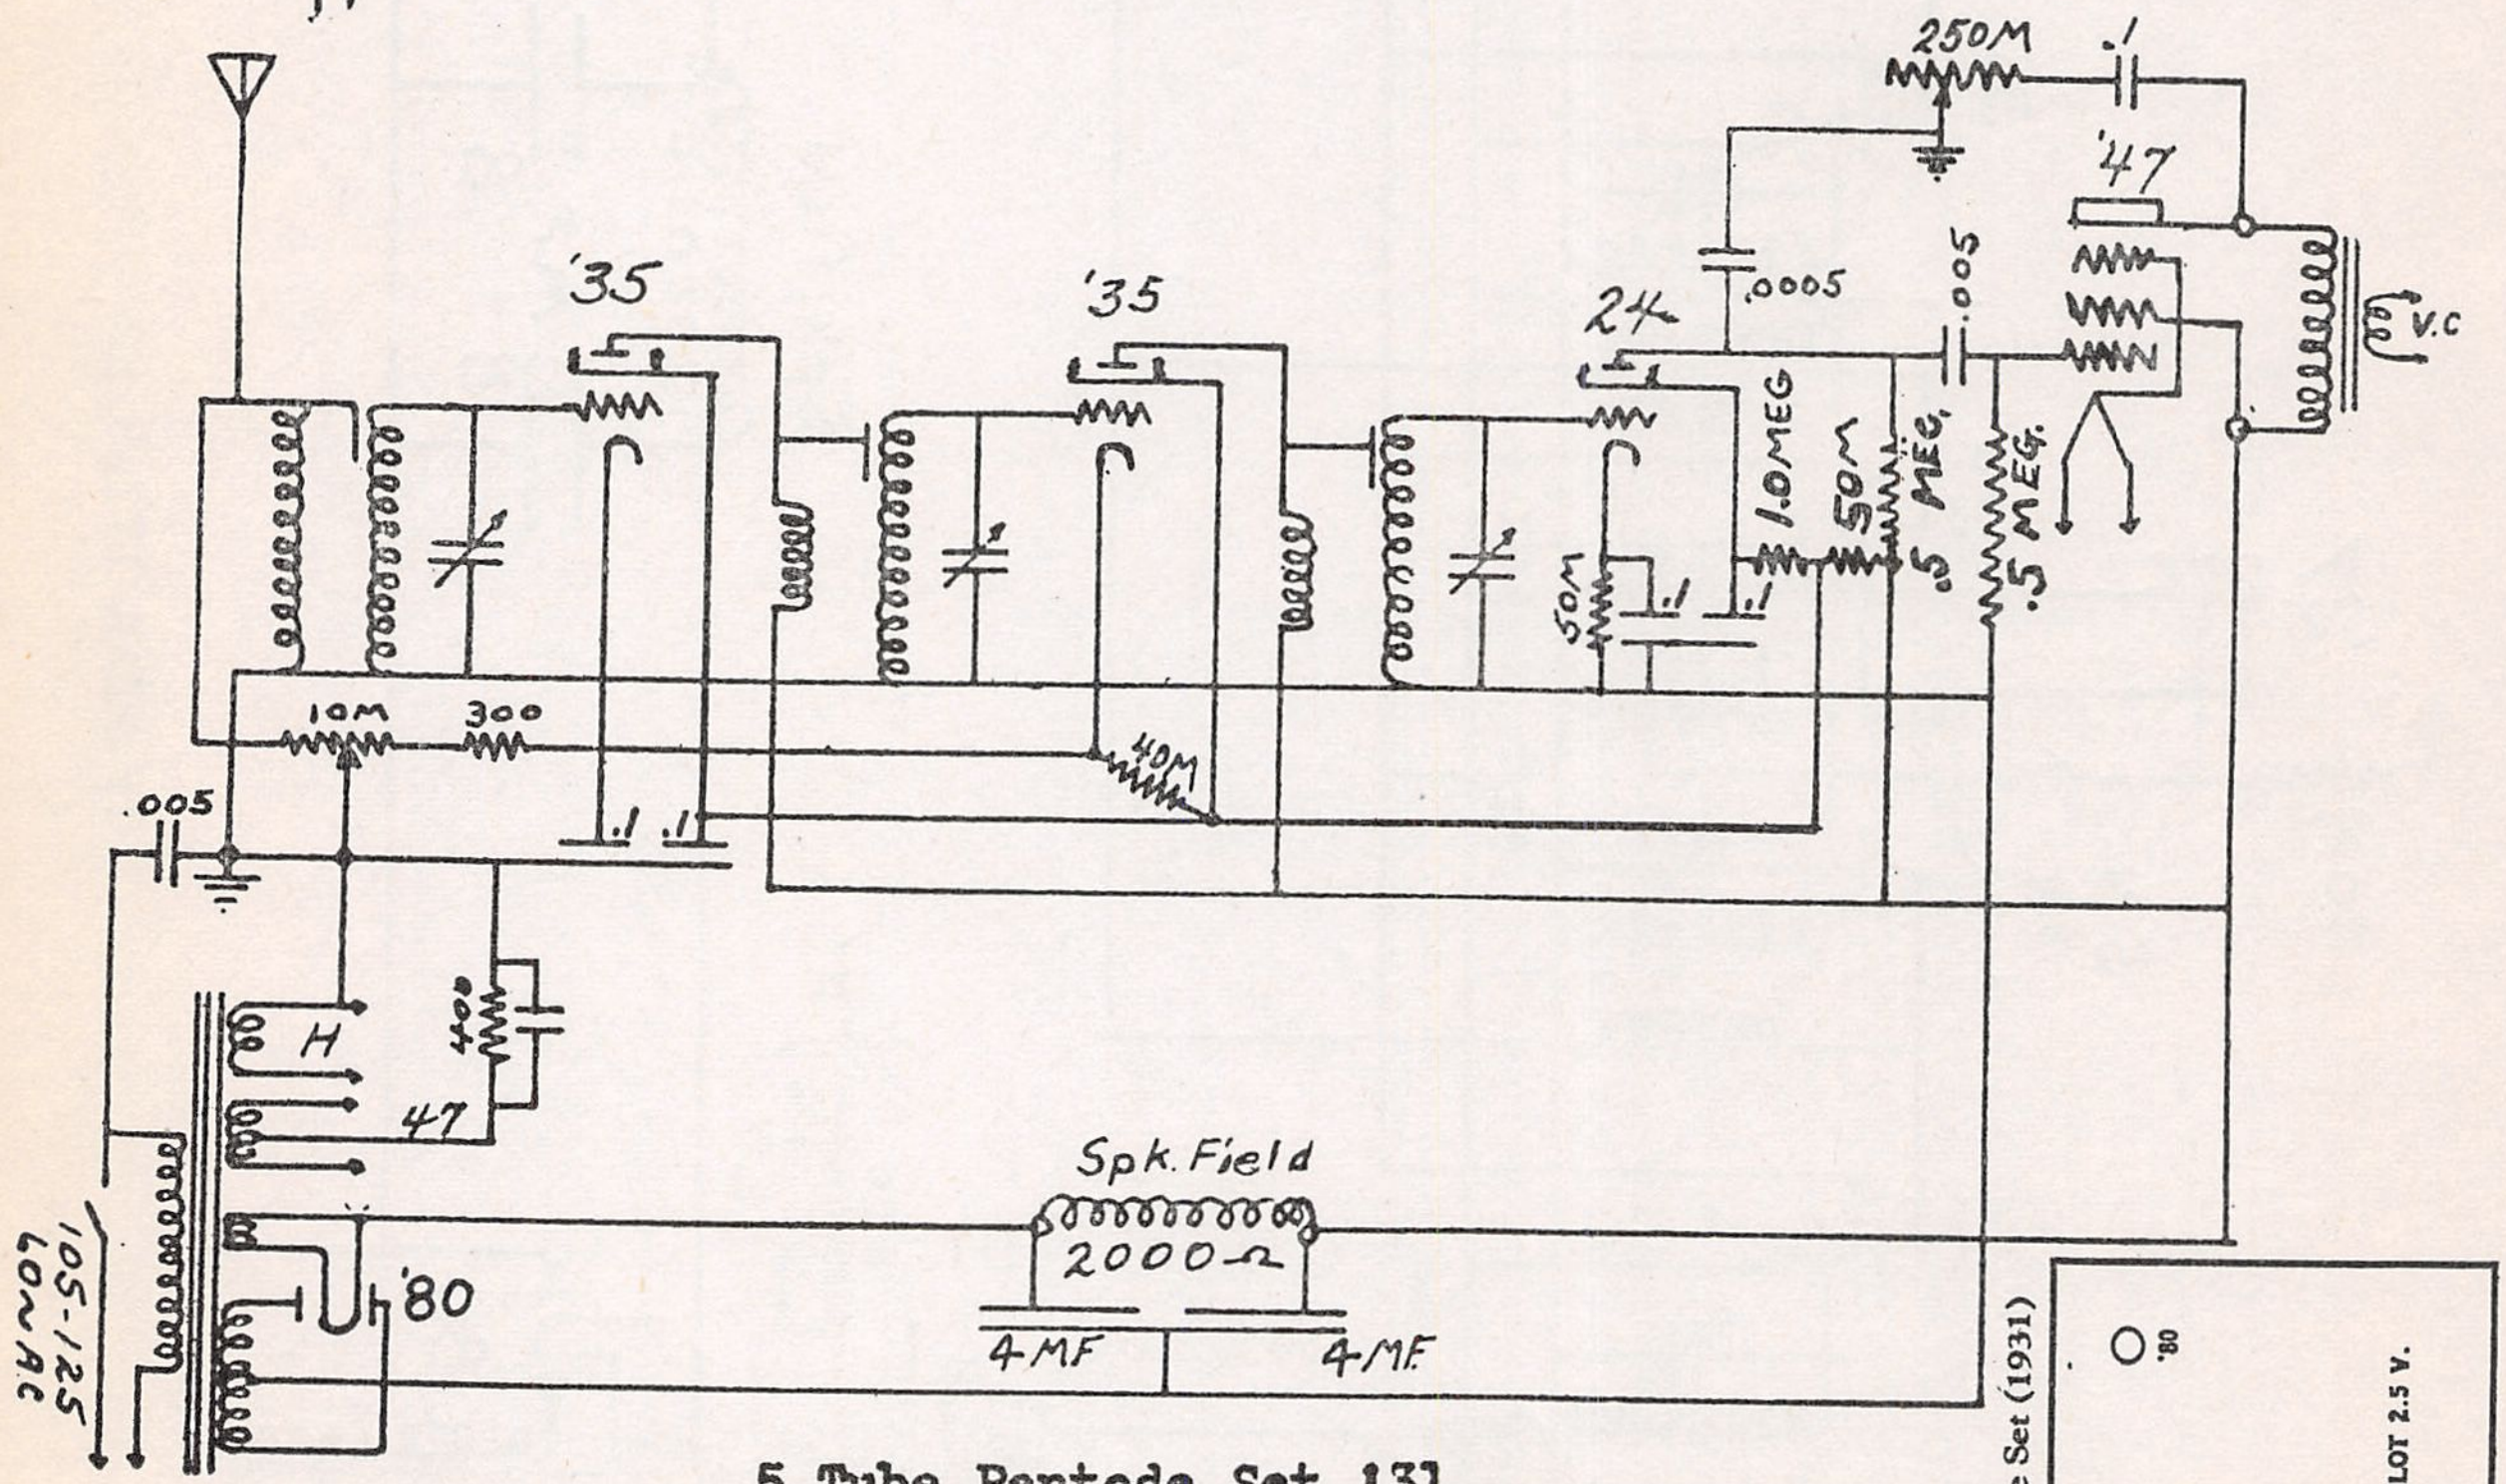
250M
.1
'47
V.C
.0005
24
.005
'35
'35
1.0MEG
50M
.5 MEG
.5 MEG
50M
.1
.1
10M
300
40M
.005
.1
.1
H
400
47
Spk. Field
2000Ω
4MF
4MF
'80
105-125
60~AC

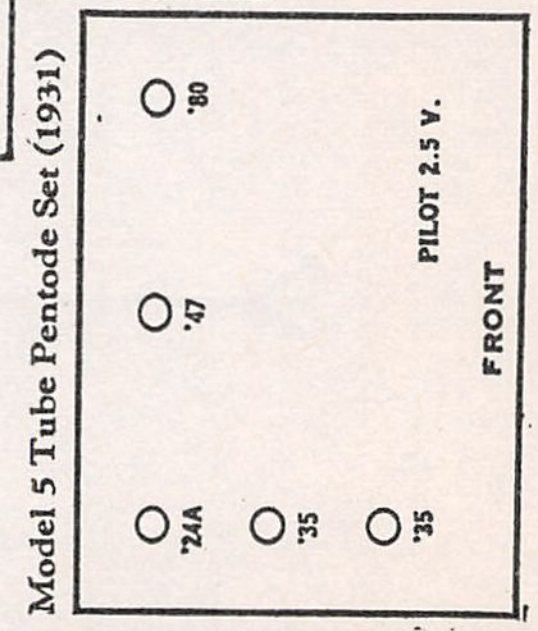
Model 5 Tube Pentode Set (1931)
'80
'47
'24A
'35
'35
PILOT 2.5 V.
FRONT

5 Tube Pentode Set '31
13T5

MODEL 9-T-45 Super
'31

MODEL 10 Tube Super
'31

AUDIOLA RADIO CO.

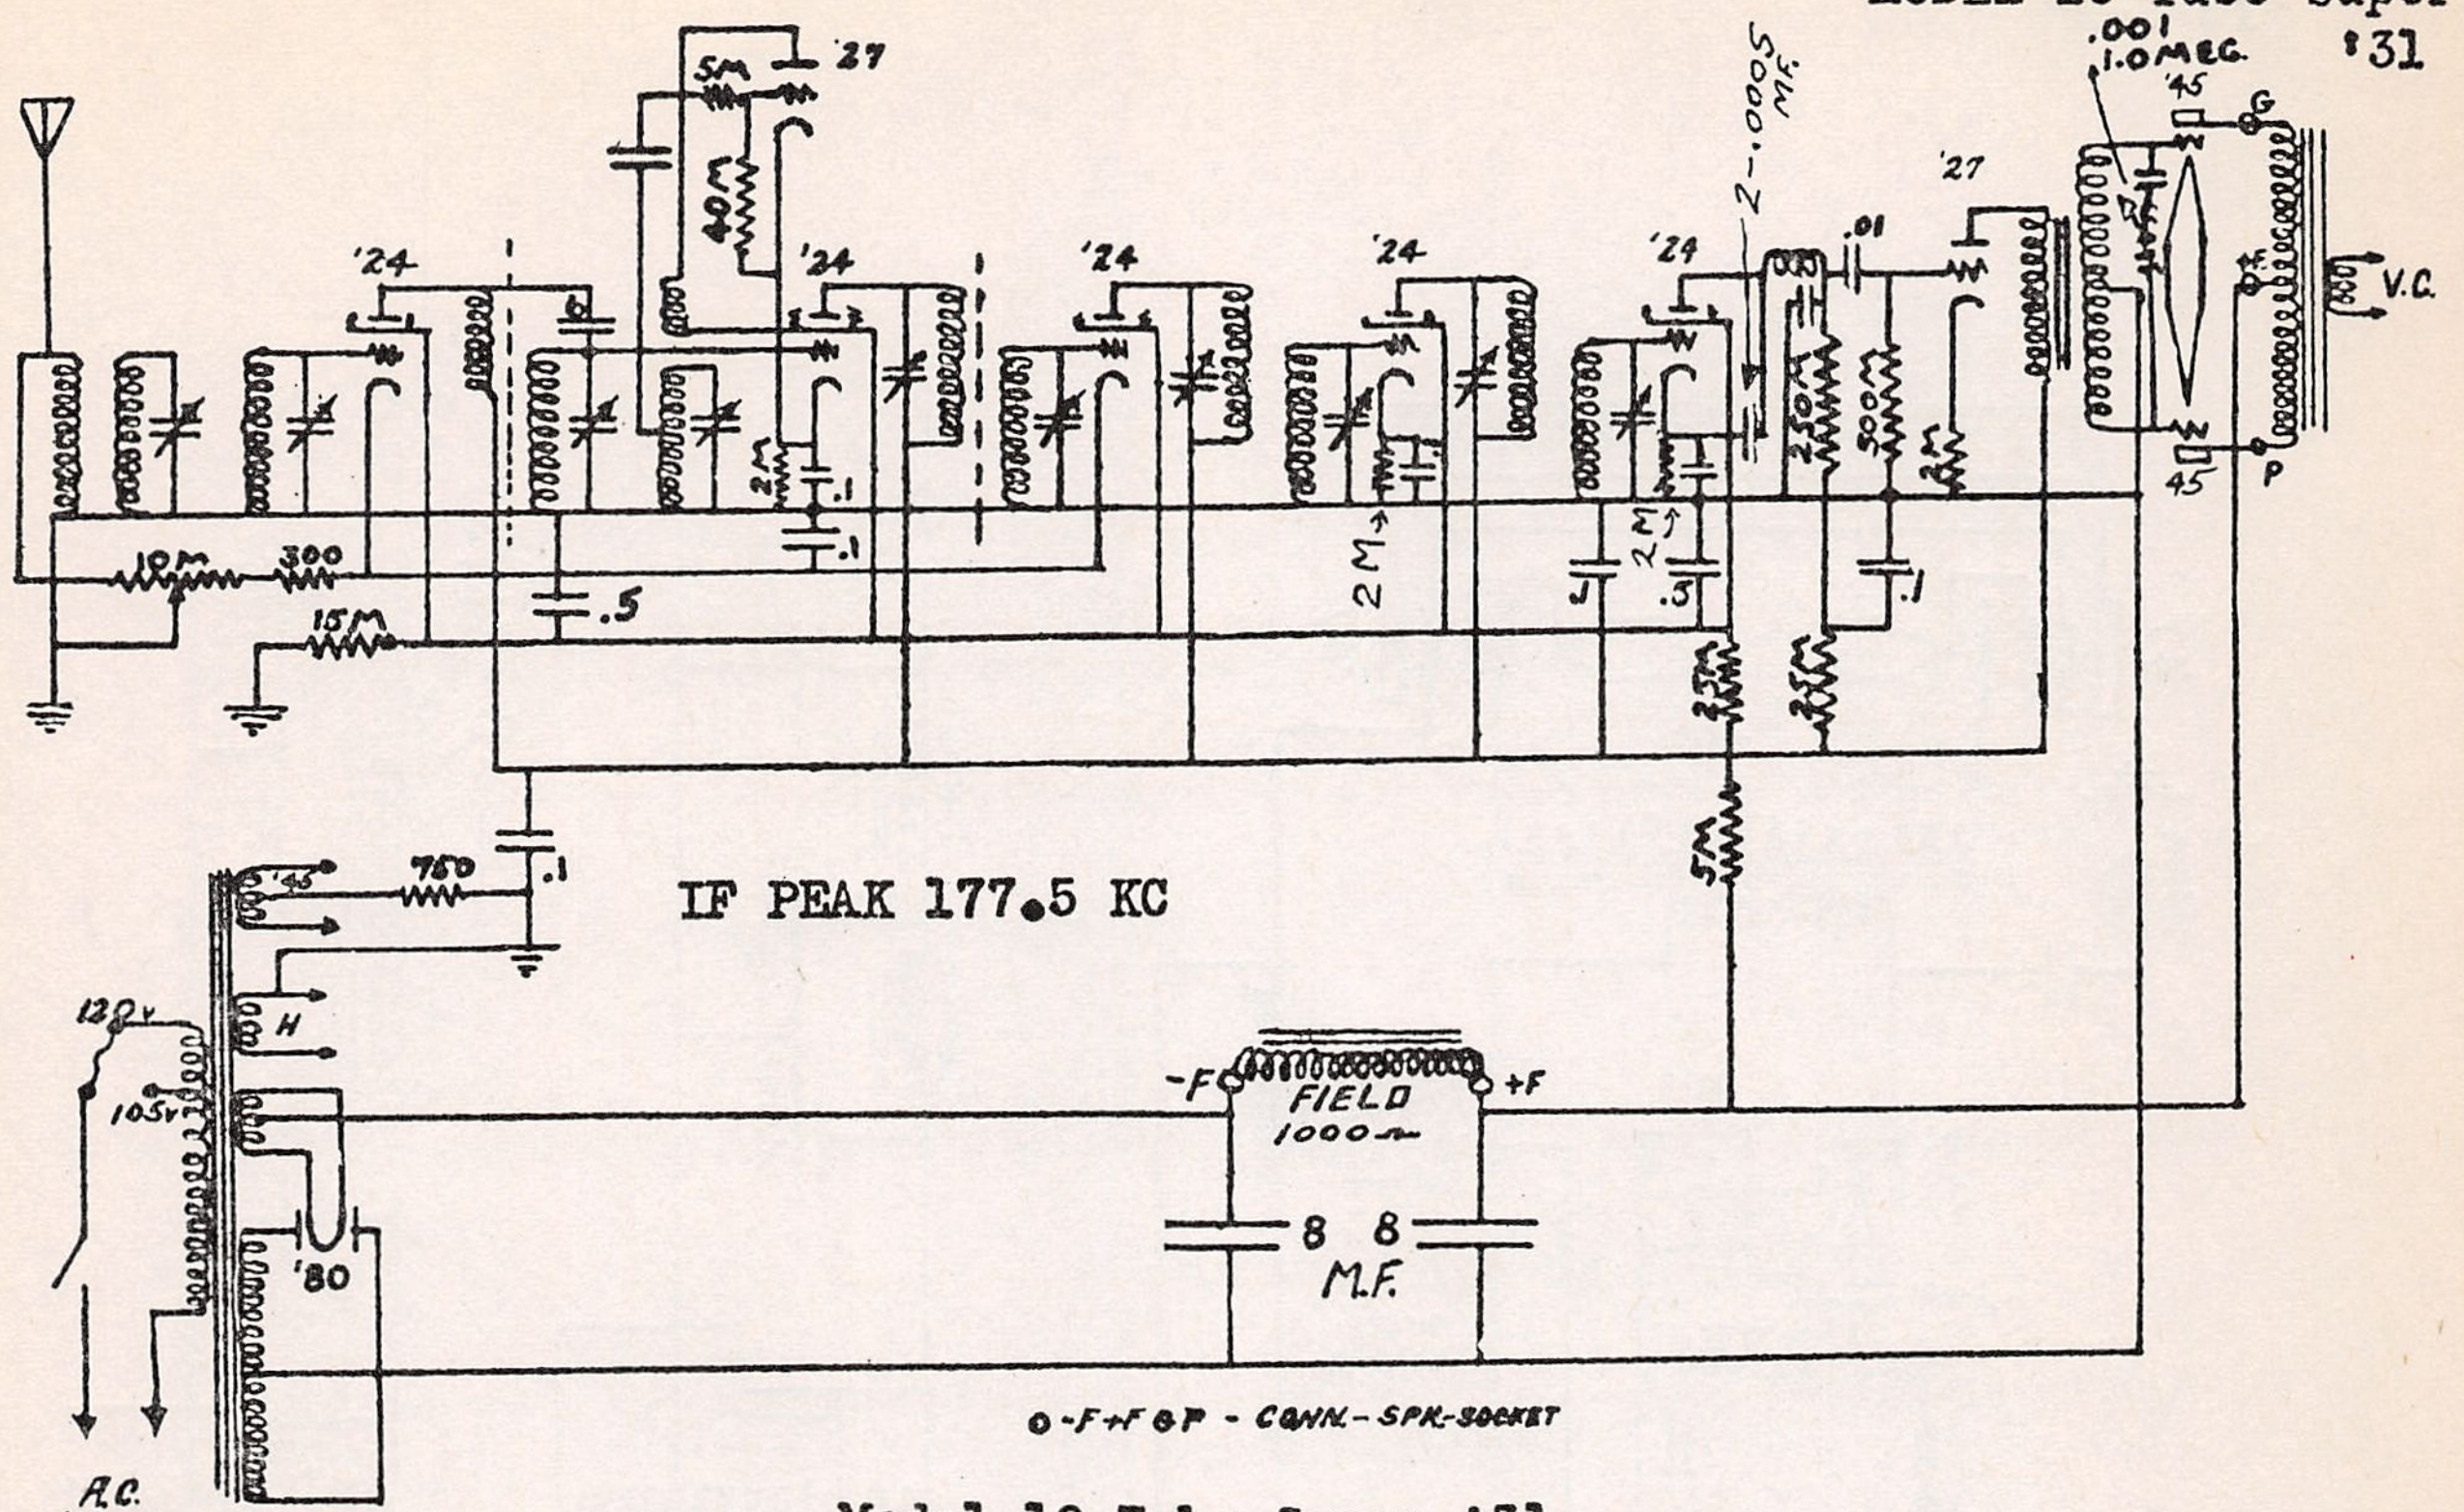
'27
5M
40M
'24
'24
'24
'24
'24
2-.0005 MF.
.001
1.0MEG.
'45
'27
.01
G
P
'45
V.C.
2M
.1
.1
10M
300
15M
.5
2M
2M
250M
500M
2M
.1
.5
.1
25M
25M
5M
'45
750
.1
IF PEAK 177.5 KC
H
120V
105V
'80
-F
FIELD
1000Ω
+F
8
8
M.F.
A.C.
6~
o-F+F&P - CONN.-SPK-SOCKET

Model 10 Tube Super '31

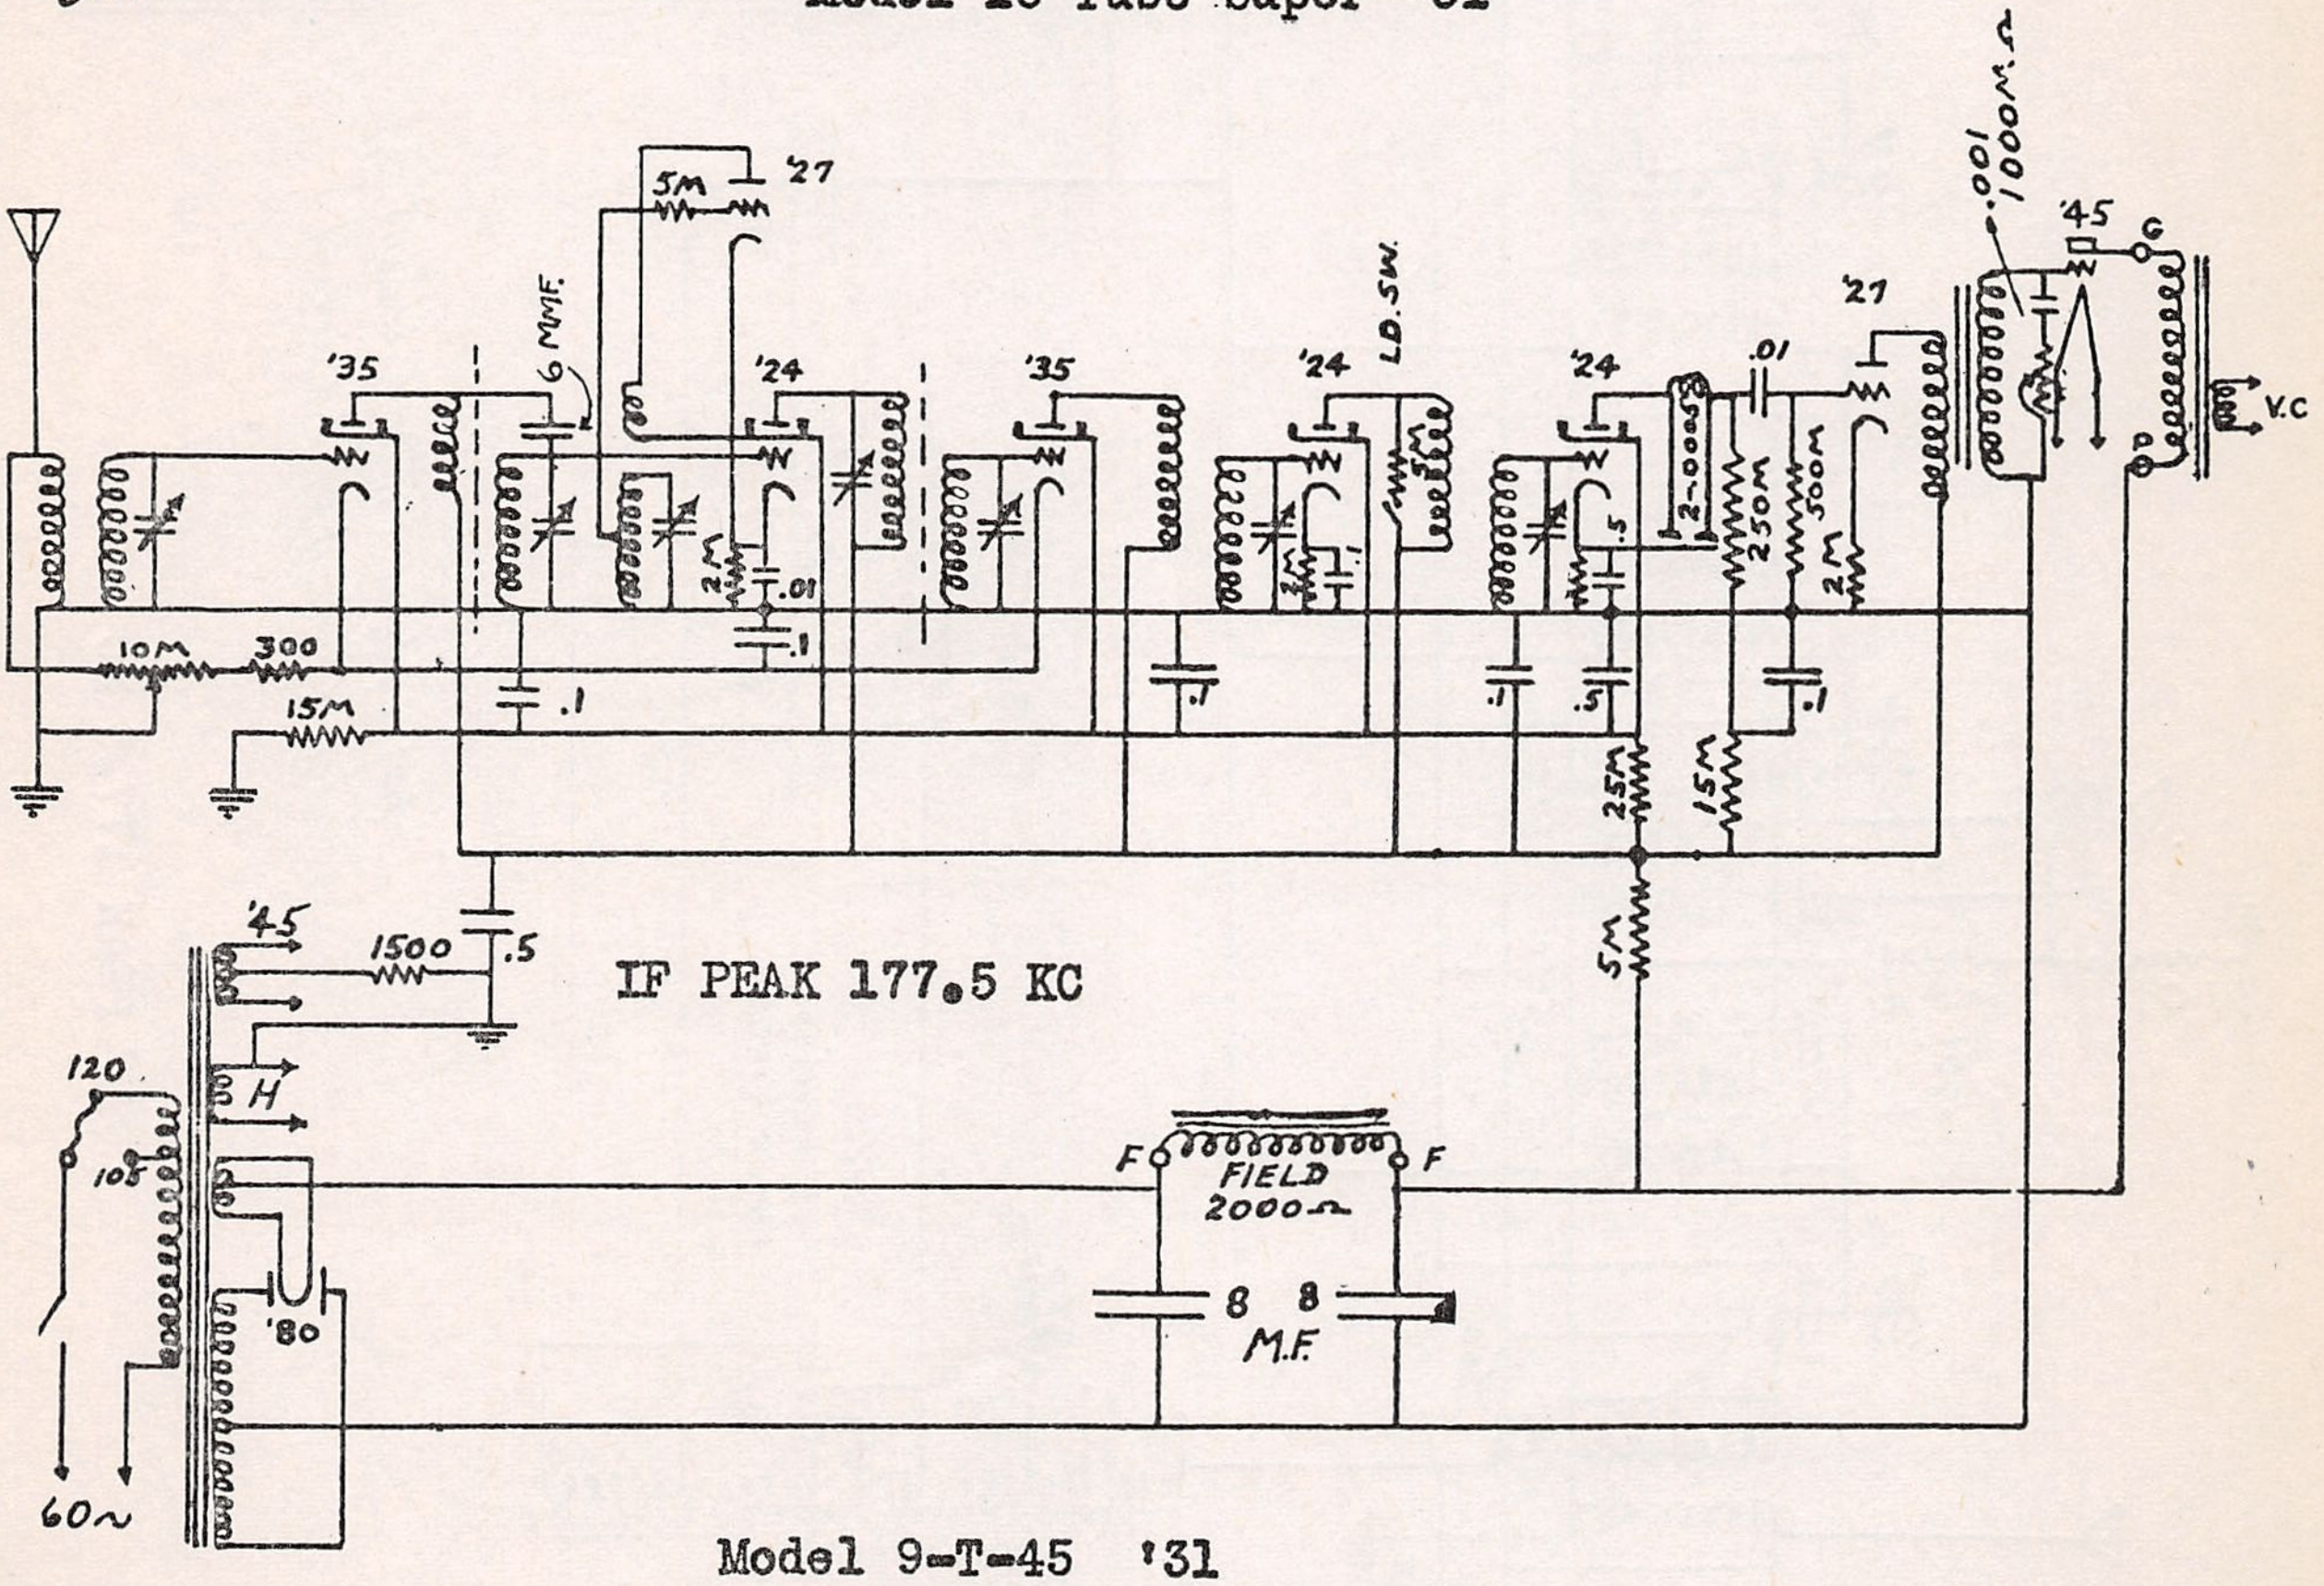
5M
'27
6 MMF.
'35
'24
'35
'24
LD.SW.
'24
.01
'27
.001
1000MΩ
'45
G
P
V.C.
2M
.01
.1
10M
300
15M
.1
.1
.5
2-.0005
250M
500M
2M
.1
.1
.5
25M
15M
5M
'45
1500
.5
IF PEAK 177.5 KC
120
105
H
'80
F
FIELD
2000Ω
F
8
8
M.F.
60~

Model 9-T-45 '31

MODEL 9 Tube Super
(2) Pentode '31
"13-S-9"

AUDIOLA RADIO CO

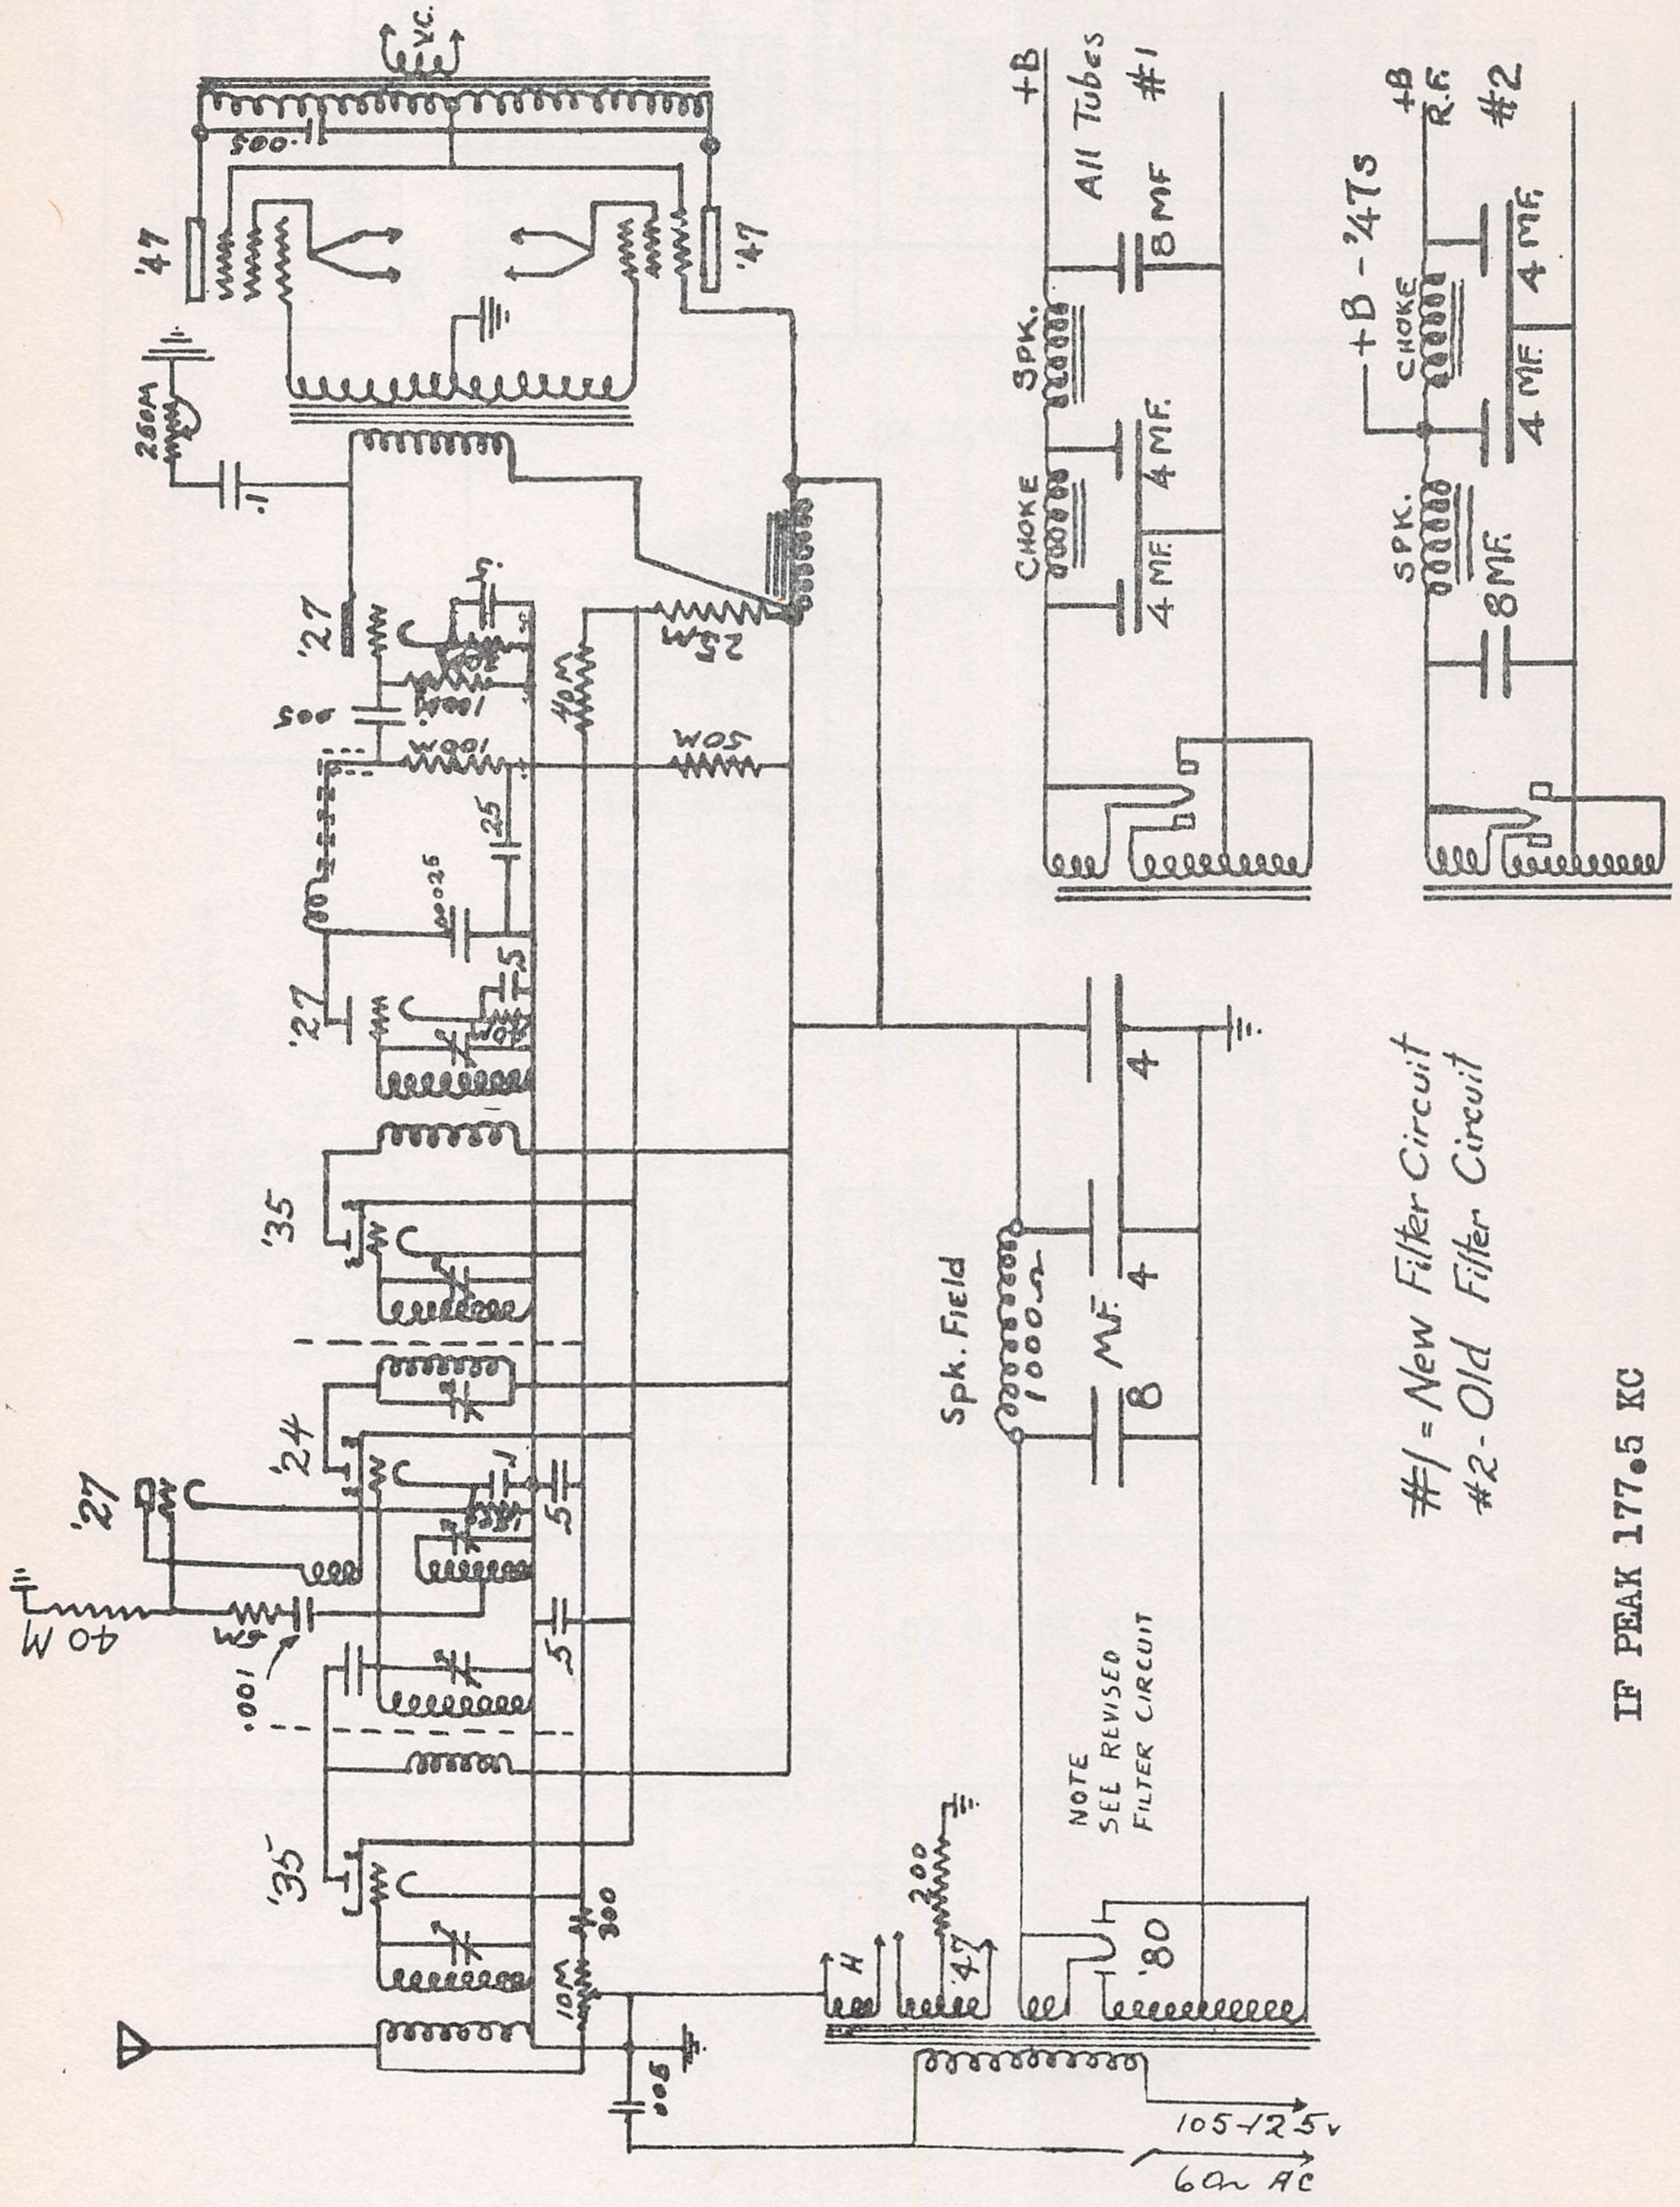
V.C.
500
'47
'47
250M
.1
'27
25M
40M
.005
100M
100M
50M
.25
.0025
.5
'27
'35
'24
'27
.1
.5
.5
40M
.001
'35
300
10M
.05
H
200
47
'80
105-125v
60~ AC
Spk. Field
1000Ω
MF
8
4
4
NOTE
SEE REVISED
FILTER CIRCUIT
+B
All Tubes
#1
8MF
SPK.
4MF
CHOKE
4MF
+B
R.F.
#2
+B - '47s
CHOKE
4MF
4MF
SPK.
8MF
#1 = New Filter Circuit
#2 - Old Filter Circuit

IF PEAK 177.5 KC

AUDIOLA RADIO CO.

MODEL '31 Super
Service Notes

SERVICE NOTES

A There are ten tuned circuits, all of which must be in accurate adjustment in order to allow this receiver to operate at its maximum efficiency These adjustments are made by means of eleven trimming condensers which are carefully set and locked at the factory and should need no further attention provided they are not tampered with. These condensers are all of the compression type and are adjusted by the rotation of the long nut and locked by means of a hardened steel set screw The service man should delicately attempt rotation of these nuts with a special nut wrench to determine if they are loose, and if all are tight and locked they should never be touched unless it is definitely assured that the set is out of alignment after every other service possibility has been exhausted.

A piece of thin fiber tubing about 7" long and with ¼" bore which can be supplied by us for this purpose may form the nut wrench. The locking screw driver should be long and thin enough to slip down thru the fiber tubing and lock the set screw, while the nut is held from turning by the tubing wrench.

By inspection of the service wiring diagram it will be noted that there are six capacity adjustments, one on each primary and one on each secondary of the three intermediate-frequency transformers. These condensers resonate the tuned circuits of the intermediate-frequency amplifier to exactly 175 KC. There are also four trimming condensers, one on each section of the four gang variable condenser. The three trimming condensers associated with the pre-selector, R.F. and detector stages balance these three stages to resonance while the fourth trimming condenser, which is on the oscillator section of the four gang variable condenser, forms part of the network which adjusts the oscillator to its constant frequency difference of 175 KC. There is also another oscillator trimming-condenser located next to the last section of the four gang tuning condenser and adjacent to the first detector tube. In some chassis this is reached thru a hole in the top of the condenser gang near the front and in others thru a hole in the chassis in front of the dial. This condenser is called the 600 KC oscillator trimming condenser, while the one on the oscillator section of the tuning condenser gang is the 1400 KC oscillator trimming condenser.

In order to adjust all of these trimming condensers properly it is necessary that an R. F. oscillator giving a modulated signal at exactly 1400 KC and 600 KC, and also at 175 KC be secured. An output measuring instrument is also necessary. The General Radio Company type 360-A or Radio Products Co., Dayton, Ohio, HR 180 test oscillators are suitable for this purpose.

The output meter leads should be connected across the cone coil connections of the loud speaker. The cone coil may remain connected or be disconnected, satisfactory results being obtained in either case, altho if the cone is left connected an audible check on the instrument readings is obtained.

The receiver must be balanced from back to front or left to right, that is, the last I. F. transformer is adjusted first, then the next to last I. F. transformer, etc., working backwards thru the first detector, oscillator, R. F. and pre-selector.

The following procedure should be followed:

3. Adjust the secondary and then the primary trimming condenser of the last I. F. transformer until a maximum reading is obtained on the output meter. These two circuits must be accurately peaked to 175 KC and will be found quite sharp.

4. After adjusting the third I. F. transformer shift the coupling lead to the control grid connection of the first I. F. tube and place the lead at a greater distance from the oscillator. Be sure the shields are on all tubes except that to which the coupling lead is connected. Turn the volume control up slightly and in exactly the same manner adjust the secondary and primary of the second I. F. transformer until a maximum indication is obtained. The output must be kept low enough to give a sharp peak.

5. Clip the coupling lead on to the control grid cap of the first detector tube, replacing all other shields and proceed to peak the secondary and primary of the first I. F. transformer. If the set oscillates it is due to the coupling lead being connected to the grid of the first detector and the volume control should be slightly reduced to prevent oscillation. Now with a given indication on the output meter proceed to "touch up" all of the adjusted trimming condensers to take advantage of any slight increase in reading that might be obtained by more careful peaking, and after they are all correctly balanced lock them by holding with the nut wrench and tightening the set screw with a long screw driver. The insertion of the metallic screw driver will affect the reading of the output meter but it should return to normal when the screw driver is removed. Note carefully that the locking does not throw the stage out of alignment. It may be easier for the service man who is not familiar with this operation to slightly reduce the capacity of the trimming condenser and lock the screw down fairly tight and then after removing the screw driver, slowly bring the unit up to its peak reading This may be found difficult at first but with a little experience the I F stages can be rapidly balanced.

6. Now set the test oscillator in operation at exactly 1400 KC, place the set in normal operation and replace the oscillator tube and all shields Make sure the receiver is properly grounded and has an average antenna Set the local-distance switch in the distance position thereby connecting the antenna. Couple the test oscillator to the antenna by means of its coupling lead. Locate the 600 KC oscillator trimming condenser and turn it nearly all the way in, about one-half revolution from full in.

7. Tune in the 1400 KC signal, adjusting the volume control to give a good indication on the output meter, then adjust the tuning knob until the scale reads 1400 KC. Now adjust the 1400 KC oscillator trimming condenser (on the oscillator section of the four gang condenser), the first detector, R. F. and pre-selector circuit trimming condensers in the order given until maximum output is obtained. The oscillator section of the gang condenser is the second section from the dial. When the set is not in a cabinet the location of a pointer for dial calibration is determined at maximum capacity of the condensers by a line provided at the low frequency end of the tuning scale.

8. Tune the test oscillator to exactly 600 KC. Tune in the signal on the set and adjust the 600 KC oscillator trimming condenser for maximum output on the output meter while revolving the gang condenser back and forth, by rotating the tuning knob.

9. Set the test oscillator frequency to 1400 KC and set the selector scale at exactly 1400 KC. Adjust the four trimming condensers as in No. 7 in the order given until maximum output is obtained.

10. Place the test oscillator again in operation at 600 KC and tune in the signal and if adjustments have been properly made the signal will be received at maximum output when the scale reads exactly 600 KC. If not the operations described above must be repeated.

11. Now lock all trimmers as described in the instructions for locking the intermediate frequency trimmers (paragraph 5) while carefully watching the output meter to make sure that the locking action does not throw the stage out of alignment.

MODEL 6 Tube Jr. #1
MODEL 6 Tube Jr. #2

AUDIOLA RADIO CO.

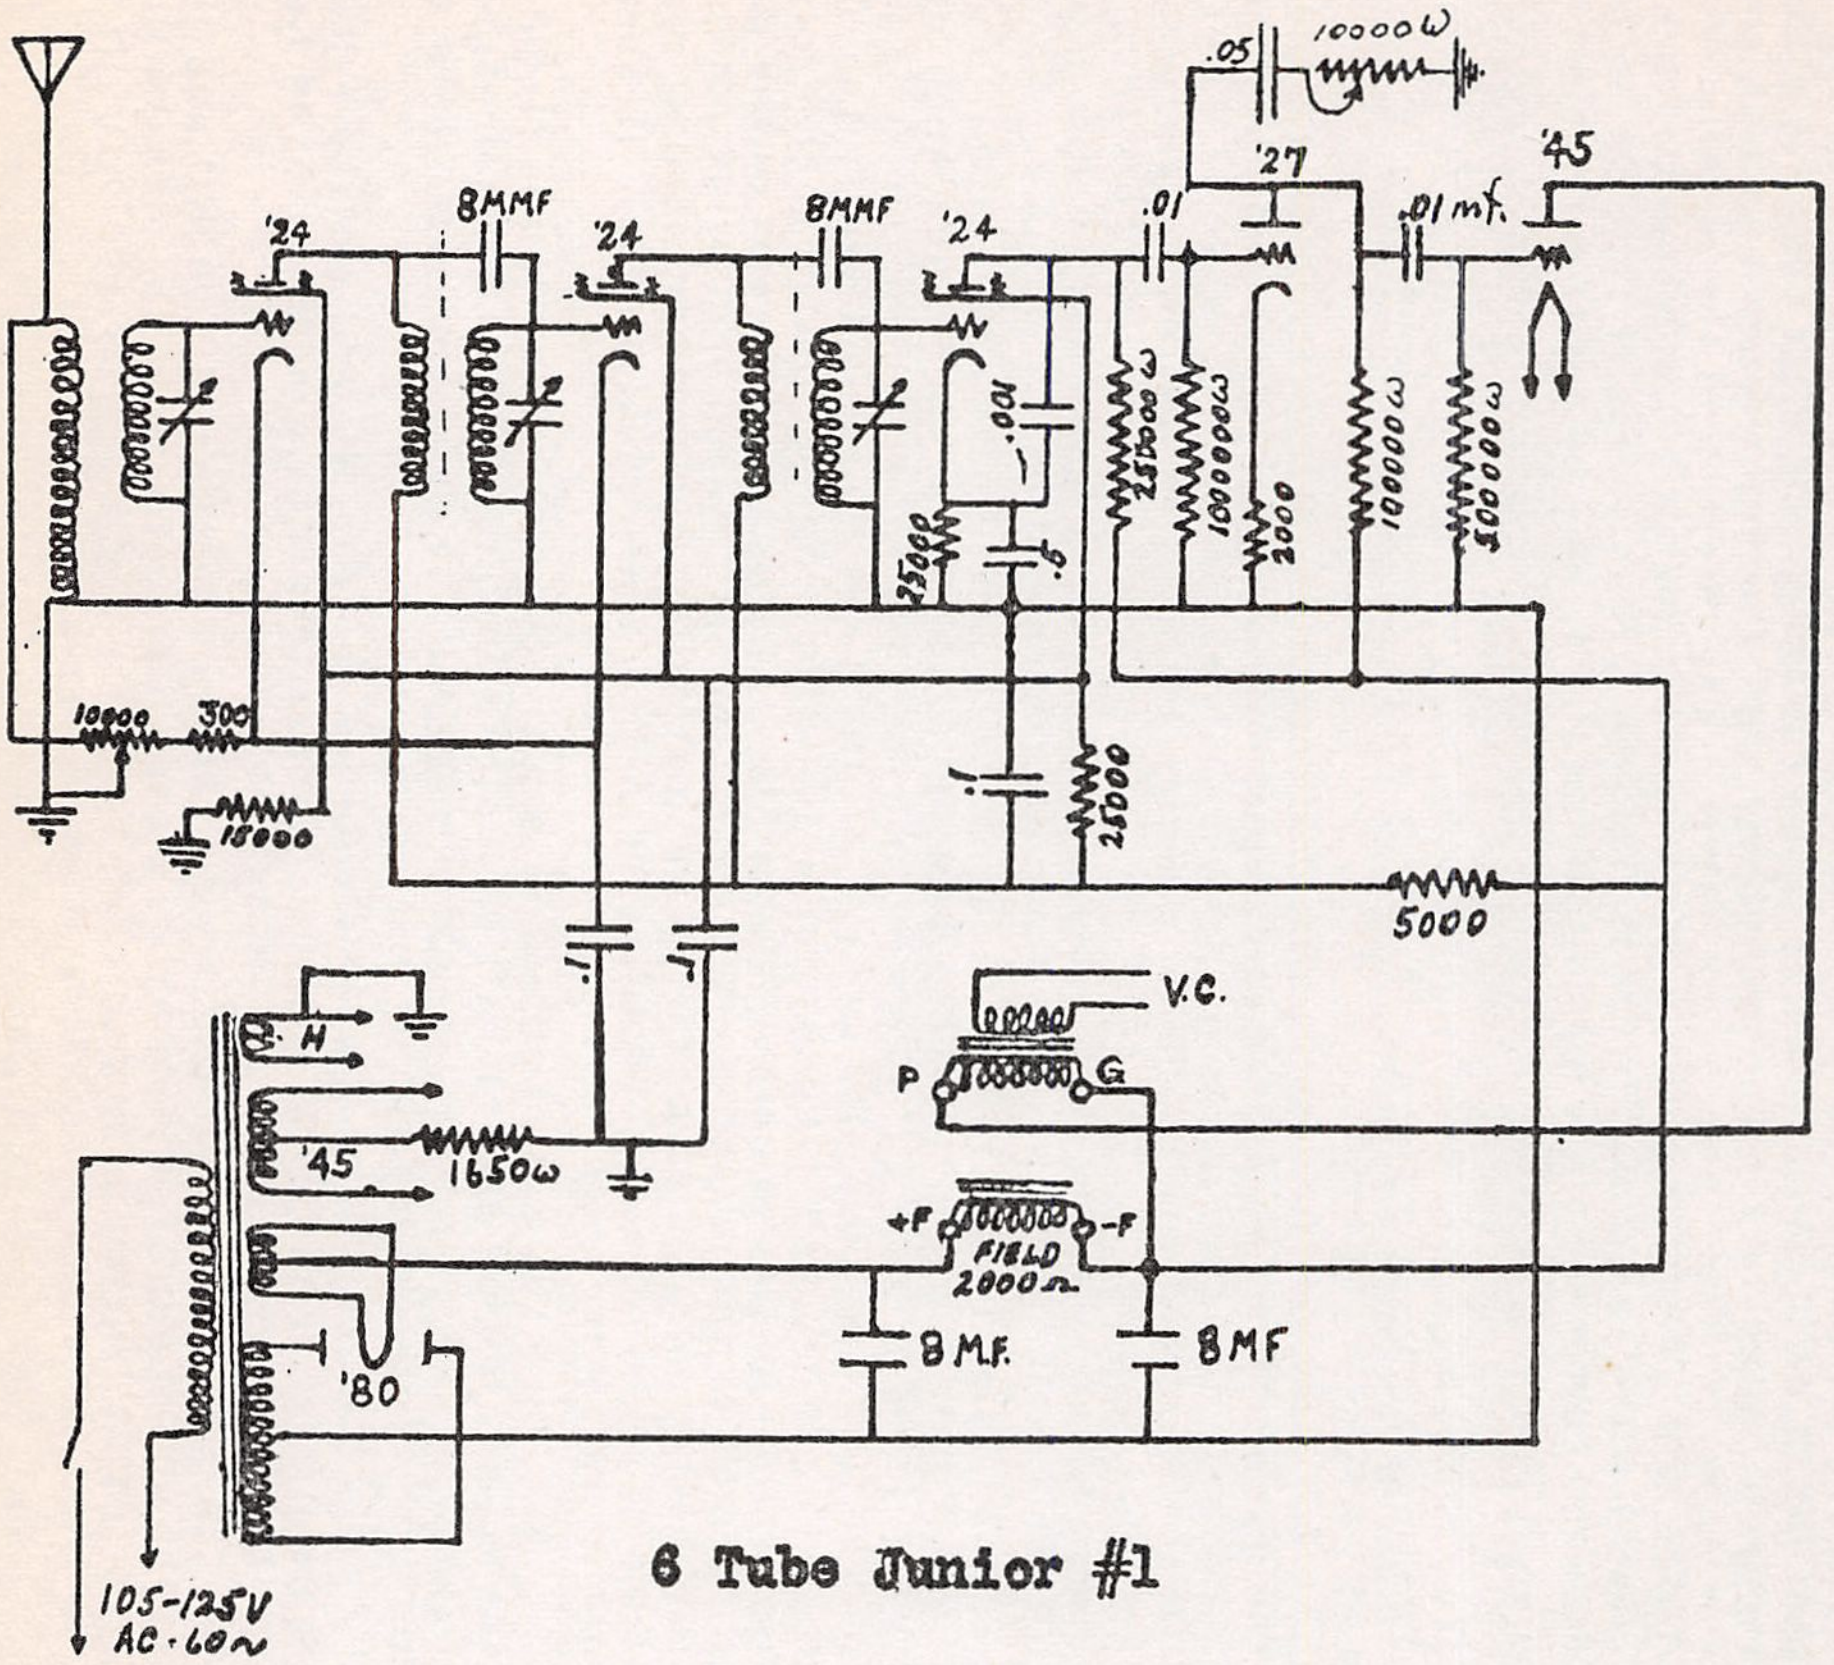
.05
10000 W
'27
'45
'24
8MMF
'24
8MMF
'24
.01
.01 mf.
.001
25000 ω
1000000 ω
2000
100000 ω
1000000 ω
25000
10000
300
15000
25000
5000
.1
.1
V.C.
P
G
H
'45
1650ω
+F
FIELD
2000Ω
-F
8 M.F.
8 MF
'80
105-125V
AC-60~

6 Tube Junior #1

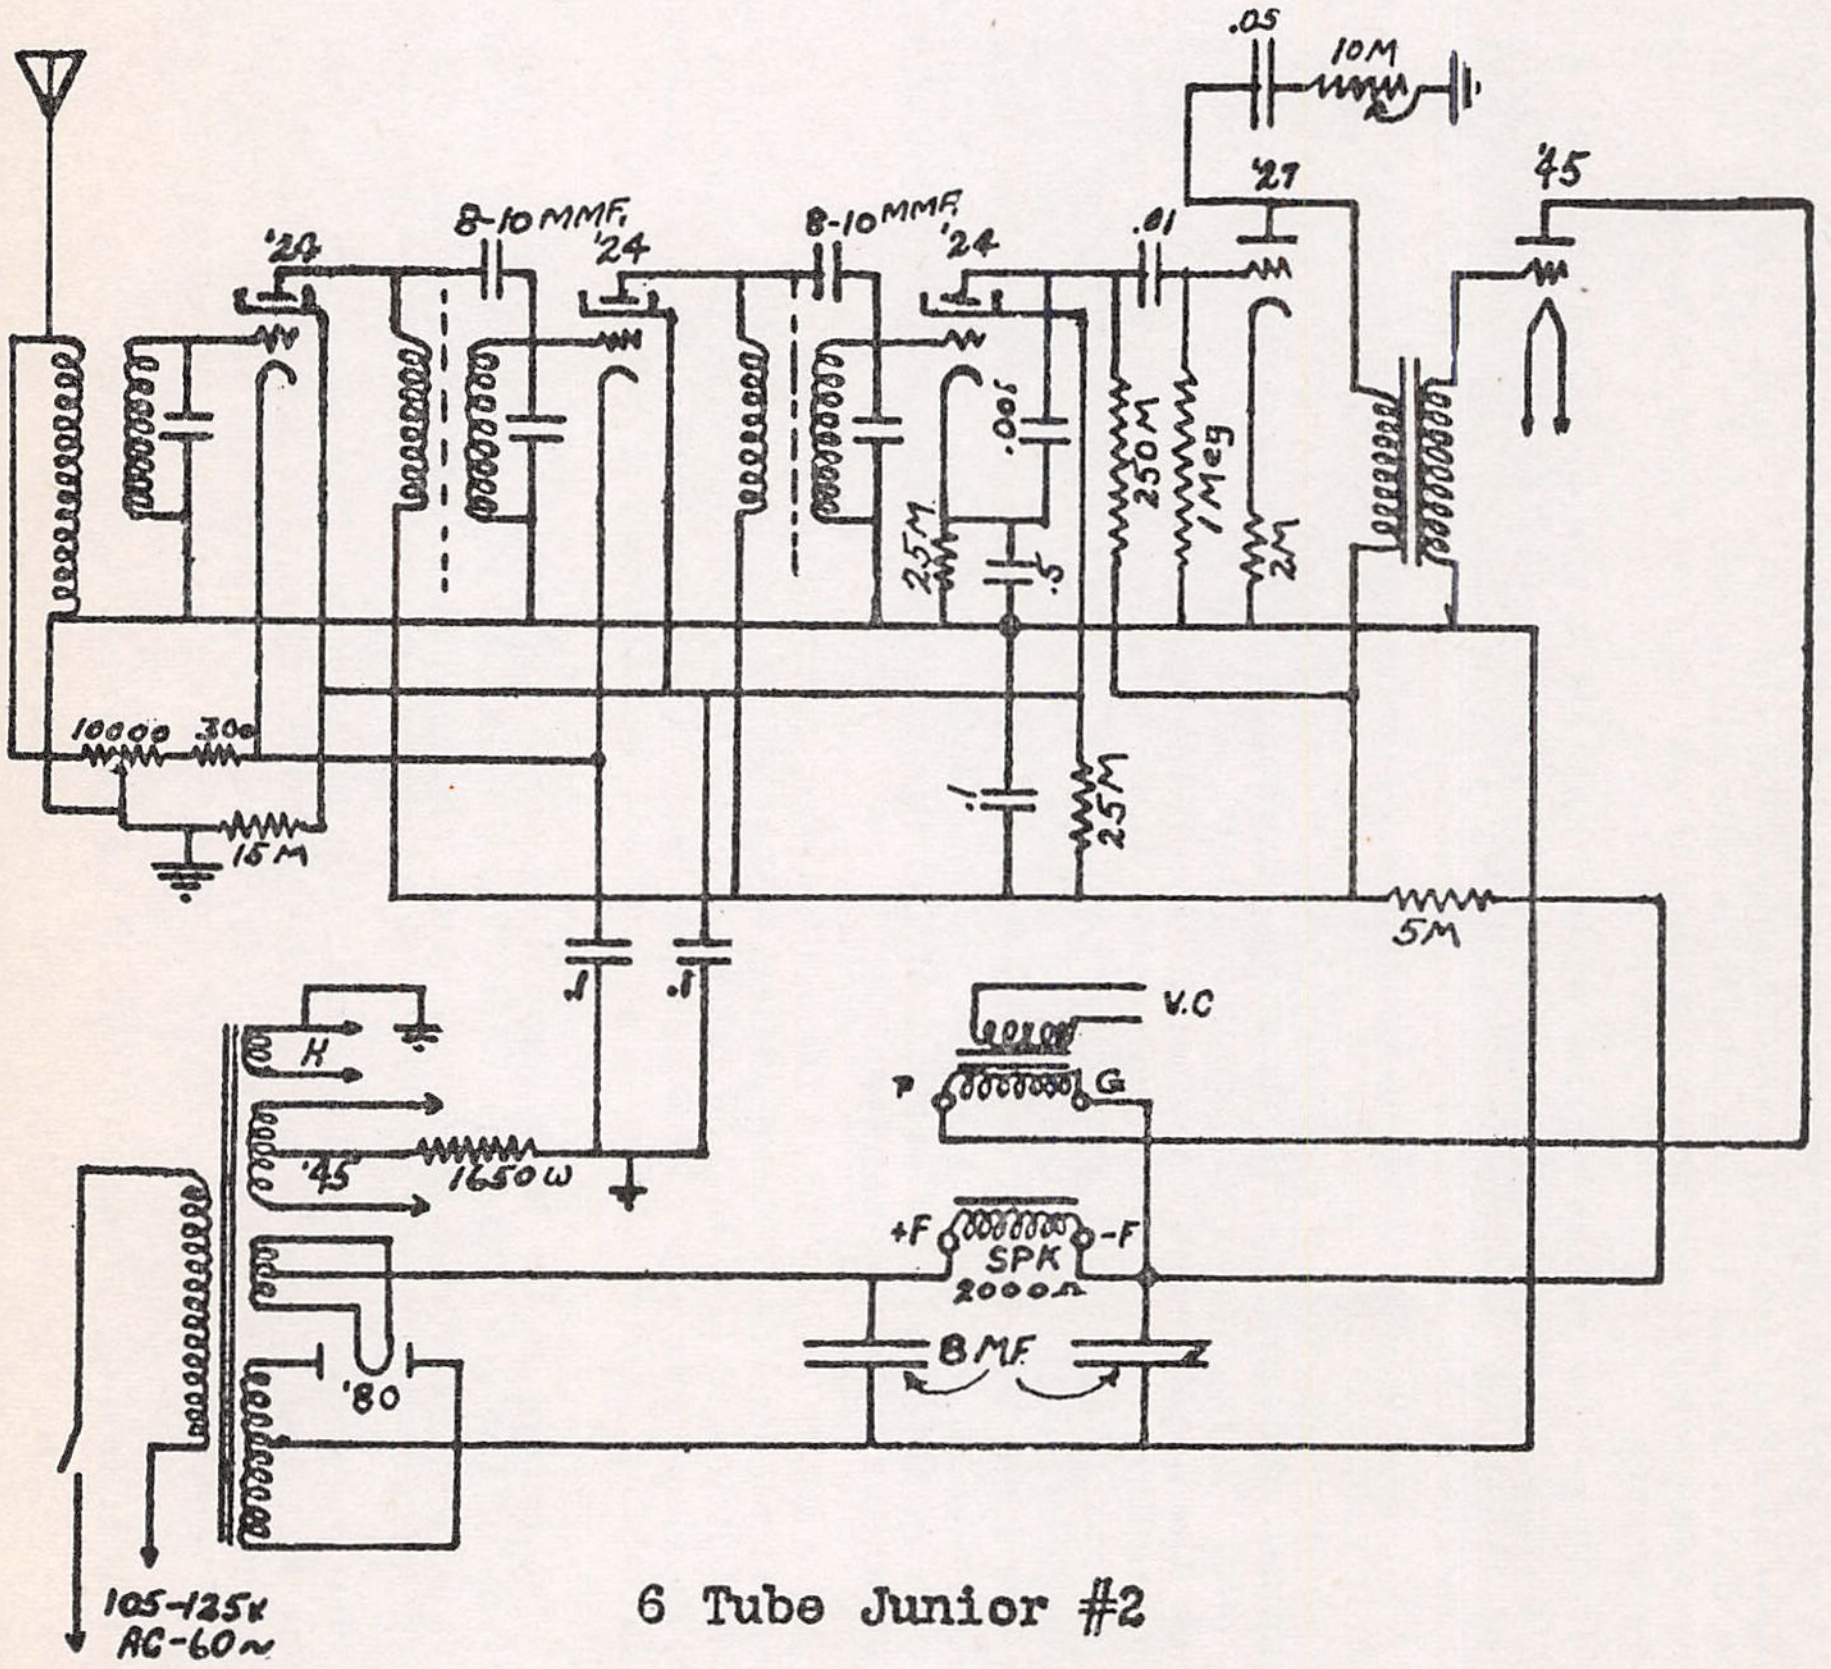
.05
10M
'27
'45
'24
8-10MMF
'24
8-10MMF
'24
.01
.001
250M
1 Meg
2M
2.5M
.5
10000
300
15M
2.5M
5M
.1
.1
V.C
P
G
H
'45
1650 W
+F
SPK
2000Ω
-F
8 MF
'80
105-125V
AC-60~

6 Tube Junior #2

AUTOMATIC RADIO MFG. CO

MODEL 44
MODEL V-45, V-46
MODEL C-45
MODEL P-46

MODELS NO. - 44, V45, V46, C 45, P46.

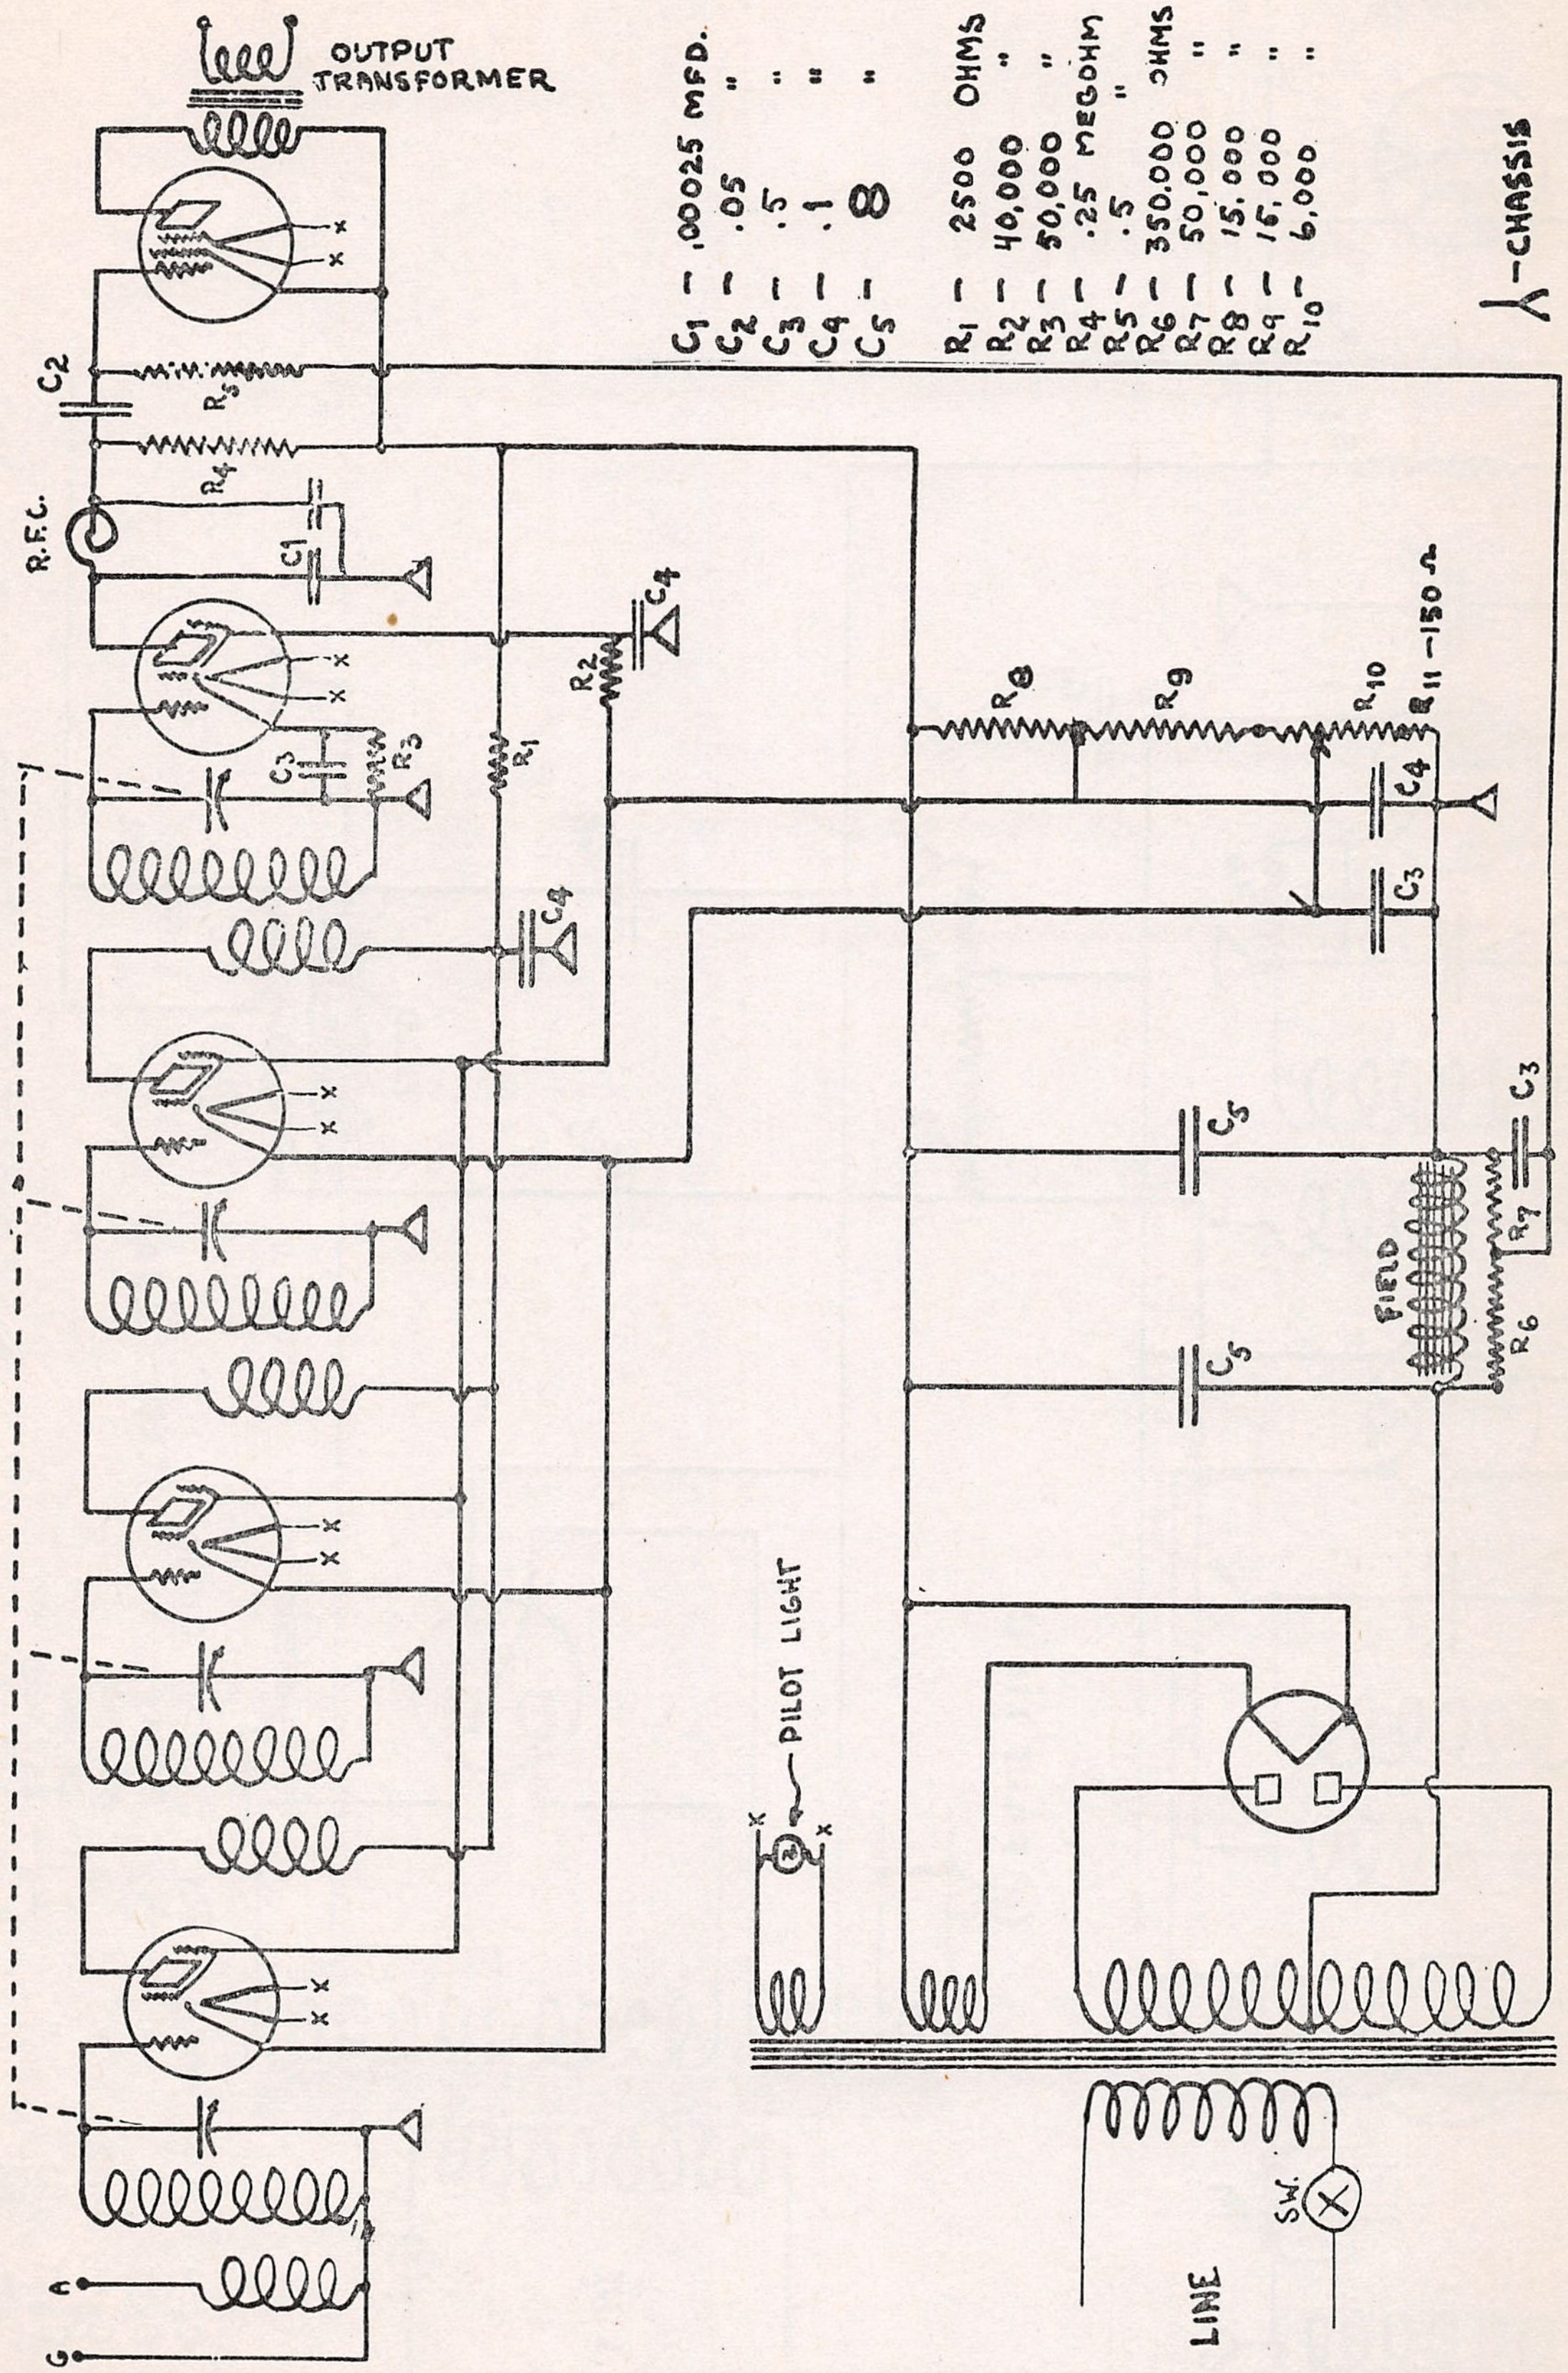

C1 — .00025 MFD.
C2 — .05 "
C3 — .5 "
C4 — .1 "
C5 — 8 "

R1 — 2500 OHMS
R2 — 40,000 "
R3 — 50,000 "
R4 — .25 MEGOHM
R5 — .5 "
R6 — 350,000 OHMS
R7 — 50,000 "
R8 — 15,000 "
R9 — 16,000 "
R10 — 6,000 "

OUTPUT TRANSFORMER
C2
R5
R4
R.F.C.
C1
C4
R2
R1
C3
R3
R8
R9
R10
R11 — 150 Ω
C4
C3
C5
C5
C3
R7
FIELD
R6
⅄ — CHASSIS
PILOT LIGHT
SW.
LINE
A
G
X

AUTOMATIC RADIO CO. INC.
BOSTON, MASS.

MODEL P-35, 34 AUTOMATIC RADIO MFG. CO.

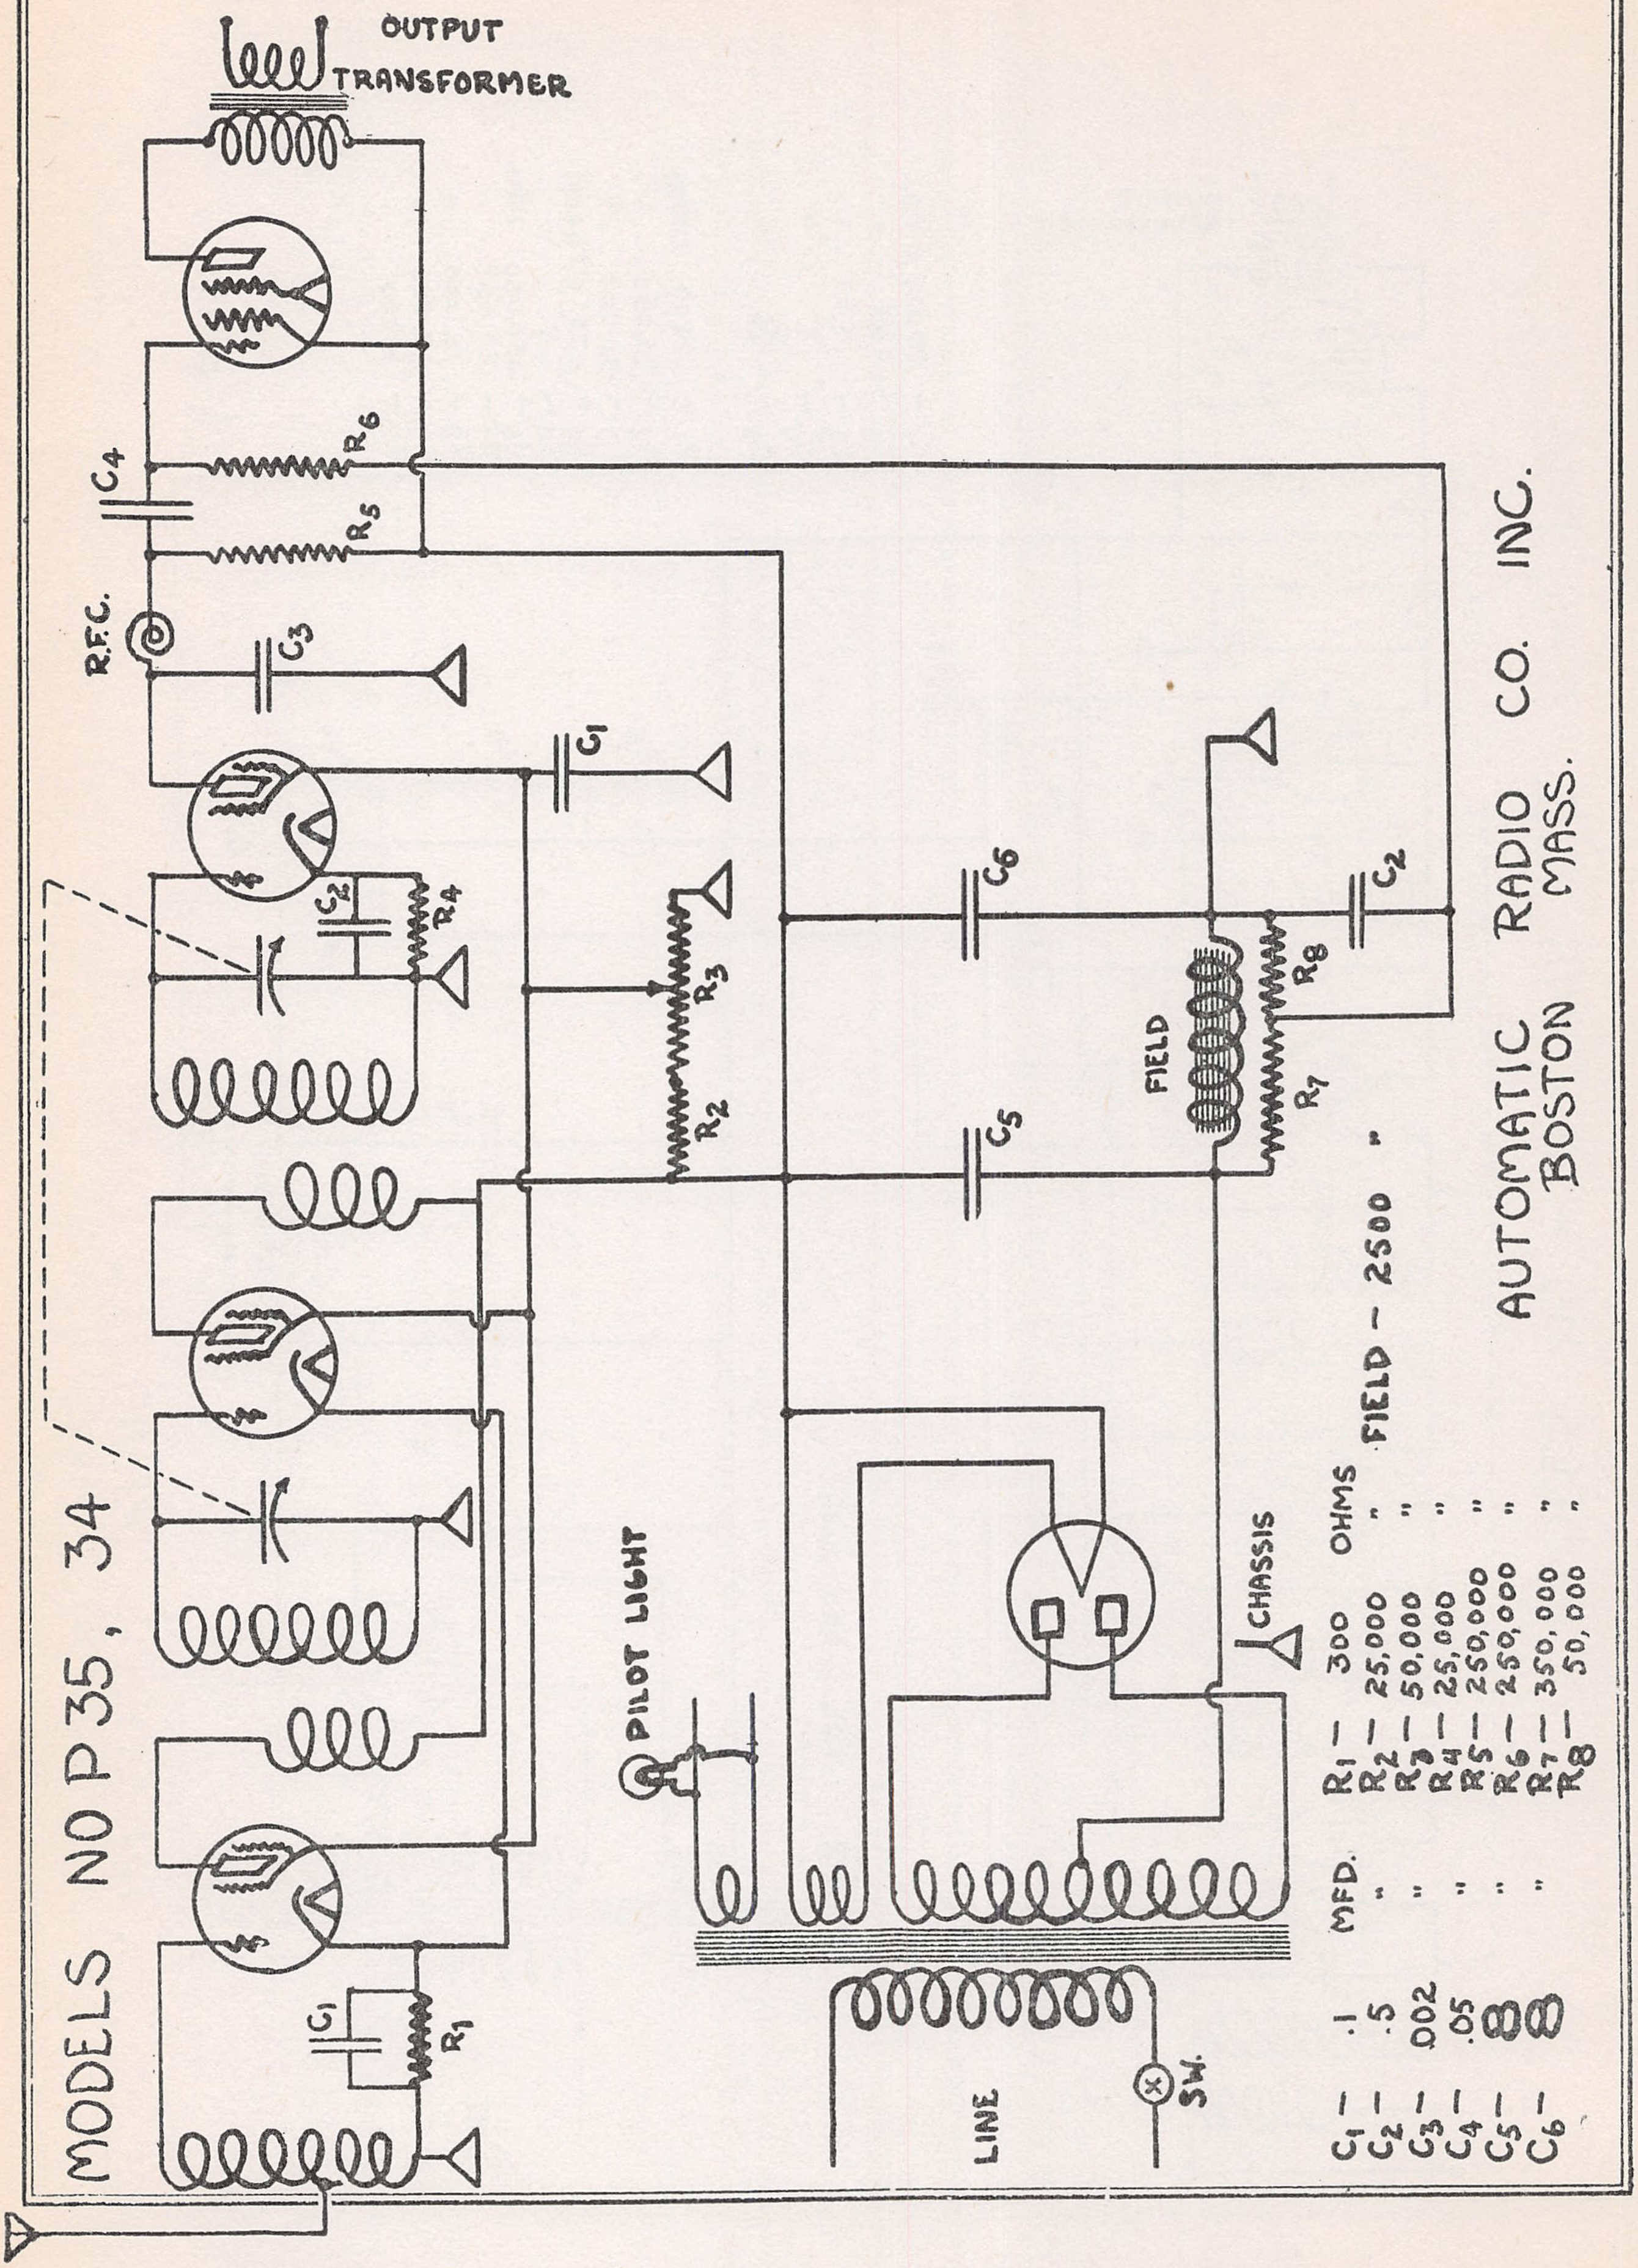
OUTPUT TRANSFORMER
C4
R6
R5
R.F.C.
C3
C1
C2
R4
R3
R2
C6
C5
C2
R8
FIELD
R7
C1
R1
PILOT LIGHT
CHASSIS
LINE
SW.
MODELS NO P35, 34
AUTOMATIC RADIO CO. INC.
BOSTON MASS.
C1 — .1 MFD.
C2 — .5 "
C3 — .002 "
C4 — .05 "
C5 — 8 "
C6 — 8
R1 — 300 OHMS
R2 — 25,000 "
R3 — 50,000 "
R4 — 25,000 "
R5 — 250,000 "
R6 — 250,000 "
R7 — 350,000 "
R8 — 50,000 "
FIELD — 2500 "

BREMER-TULLY MFG. CO

MODEL B-T 6
MODEL 8-12
Counterphase

Models 8-12, 8-16

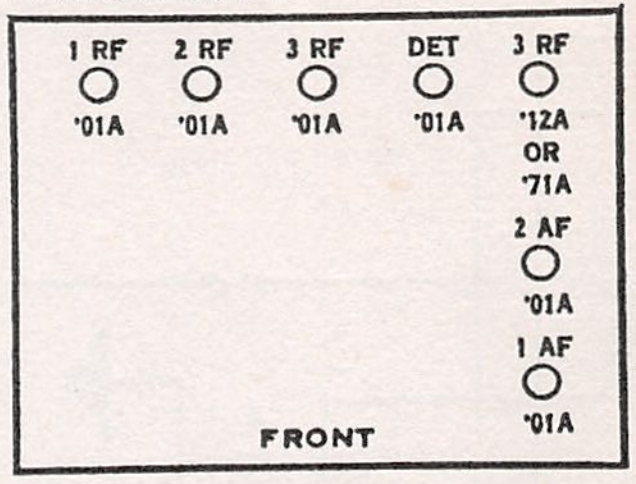
1 RF
'01A
2 RF
'01A
3 RF
'01A
DET
'01A
3 RF
'12A OR '71A
2 AF
'01A
1 AF
'01A
FRONT

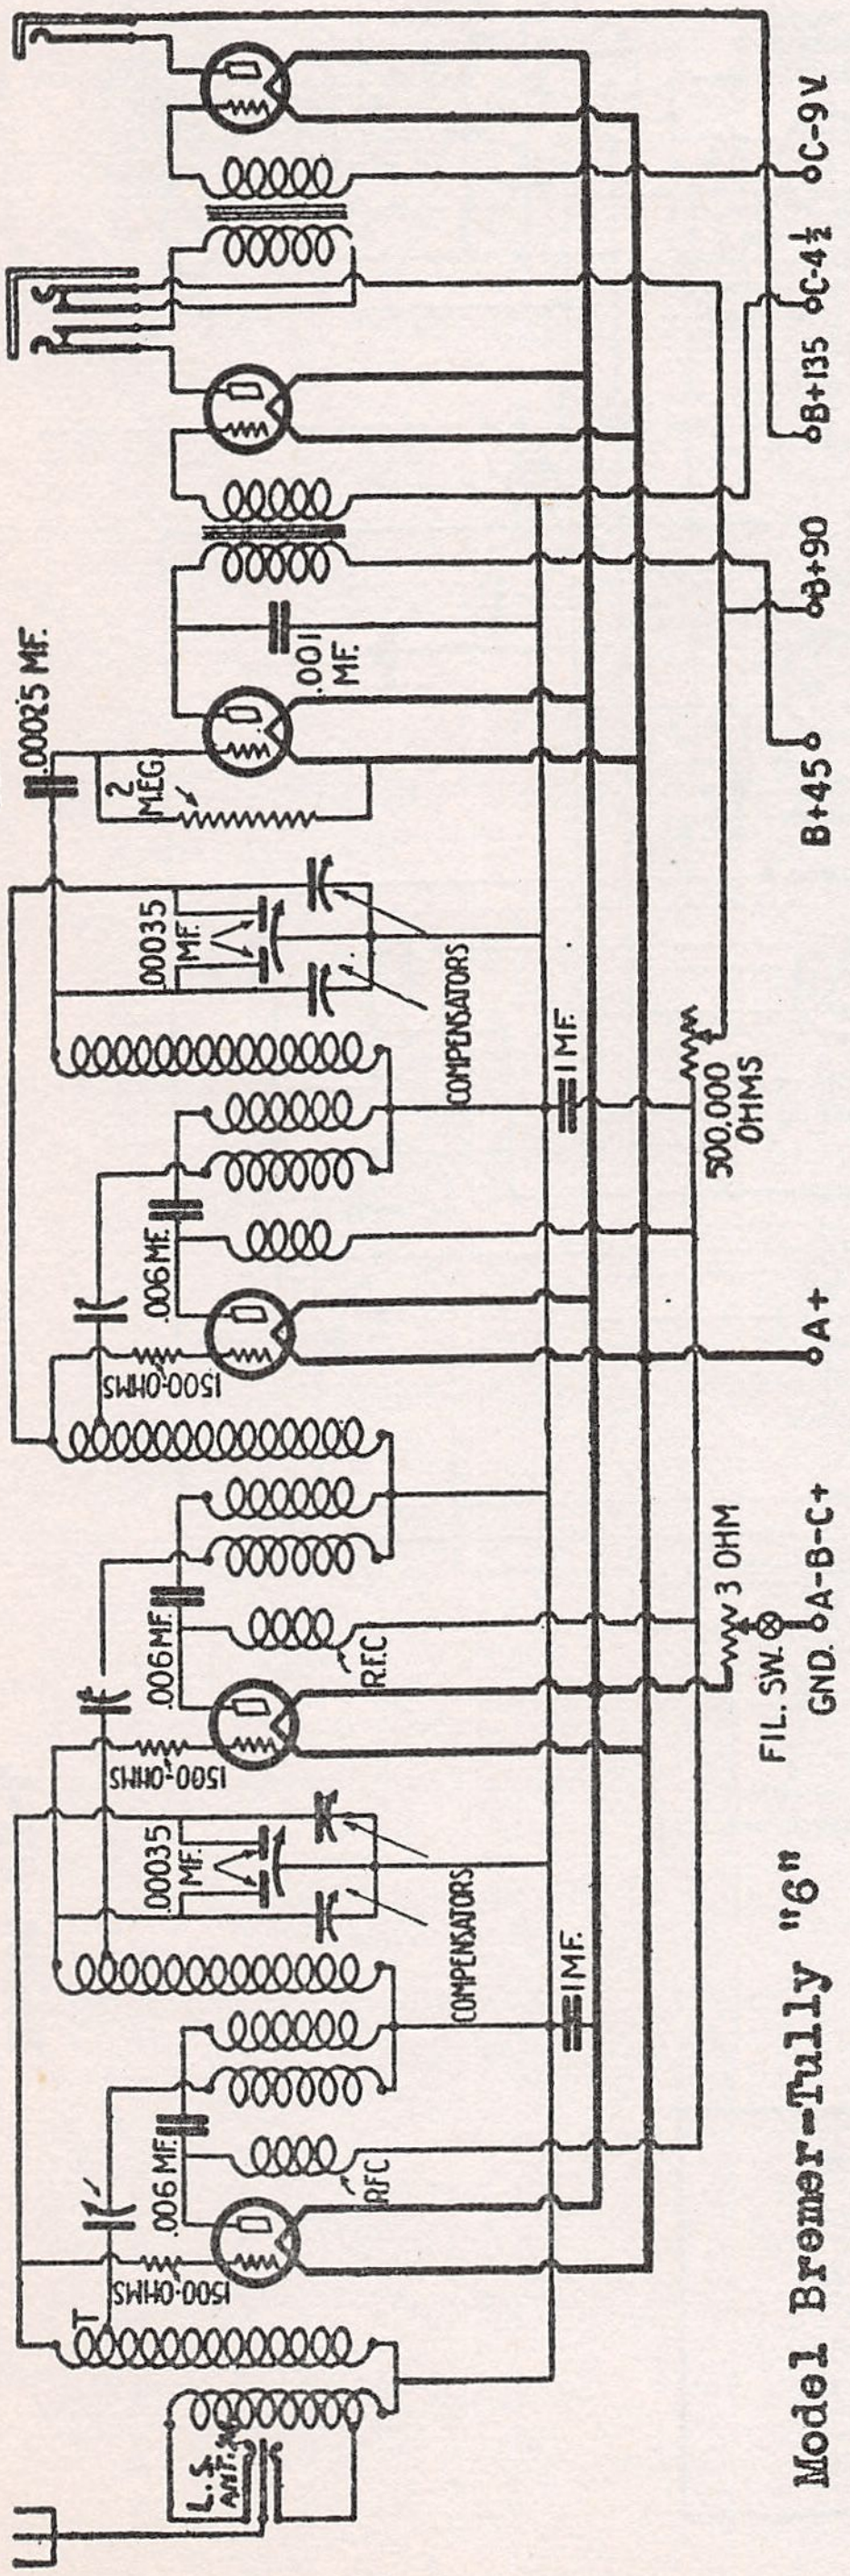
C-9V
C-4½
B+135
B+90
B+45
DET.
.00025 MF.
2 MEG.
.001 MF.
.00035 MF.
COMPENSATORS
1 MF.
500,000 OHMS
.006 MF.
1500-OHMS
A+
R.F.C.
3 OHM
FIL. SW.
GND.
A-B-C+
RFC
L.S.
ANT.

Model Bremer-Tully "6"

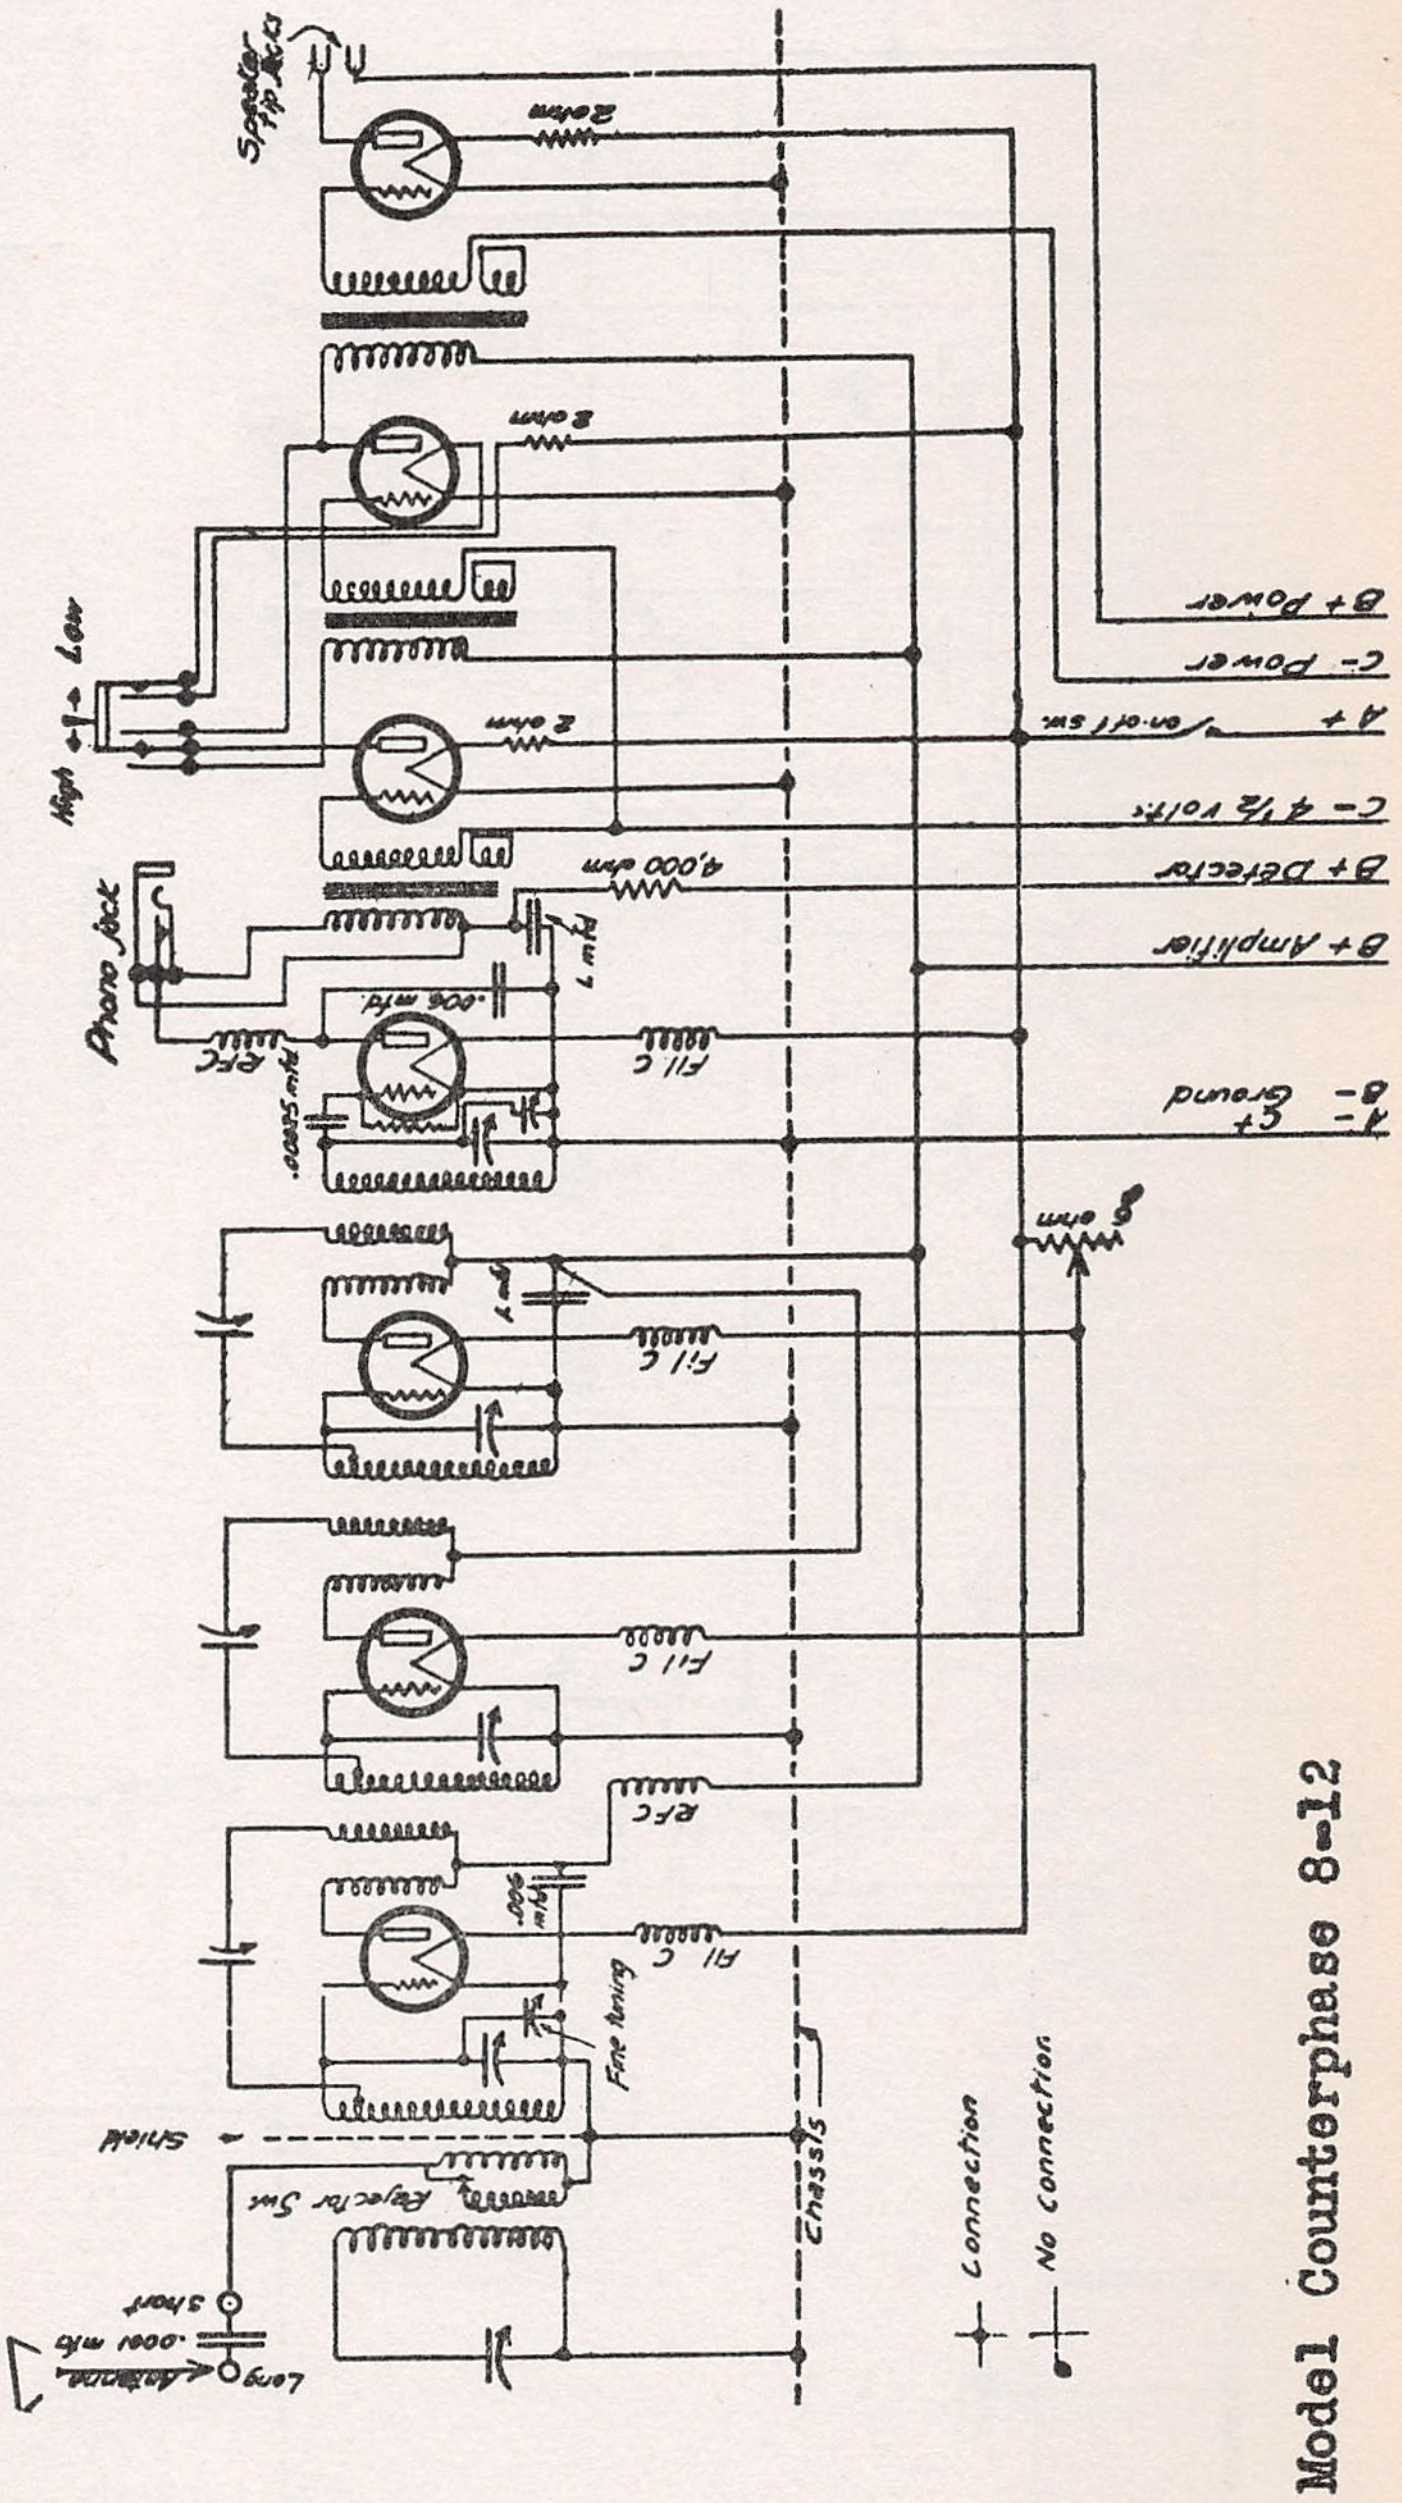
Speaker Tip Jacks
2 ohm
High
Low
Phono Jack
4,000 ohm
1 mfd
RFC
.006 mfd
.00035 mfd
Fil C
B+ Power
C- Power
A+
on-off sw.
C- 4½ volts
B+ Detector
B+ Amplifier
B- Ground
A- C+
6 ohm
Fine tuning
Shield
Chassis
Rejector Sw.
Short
.0001 mfd
Long Antenna
Connection
No connection

Model Counterphase 8-12

MODEL 80
MODEL 83-A

BREMER-TULLY MFG. CO

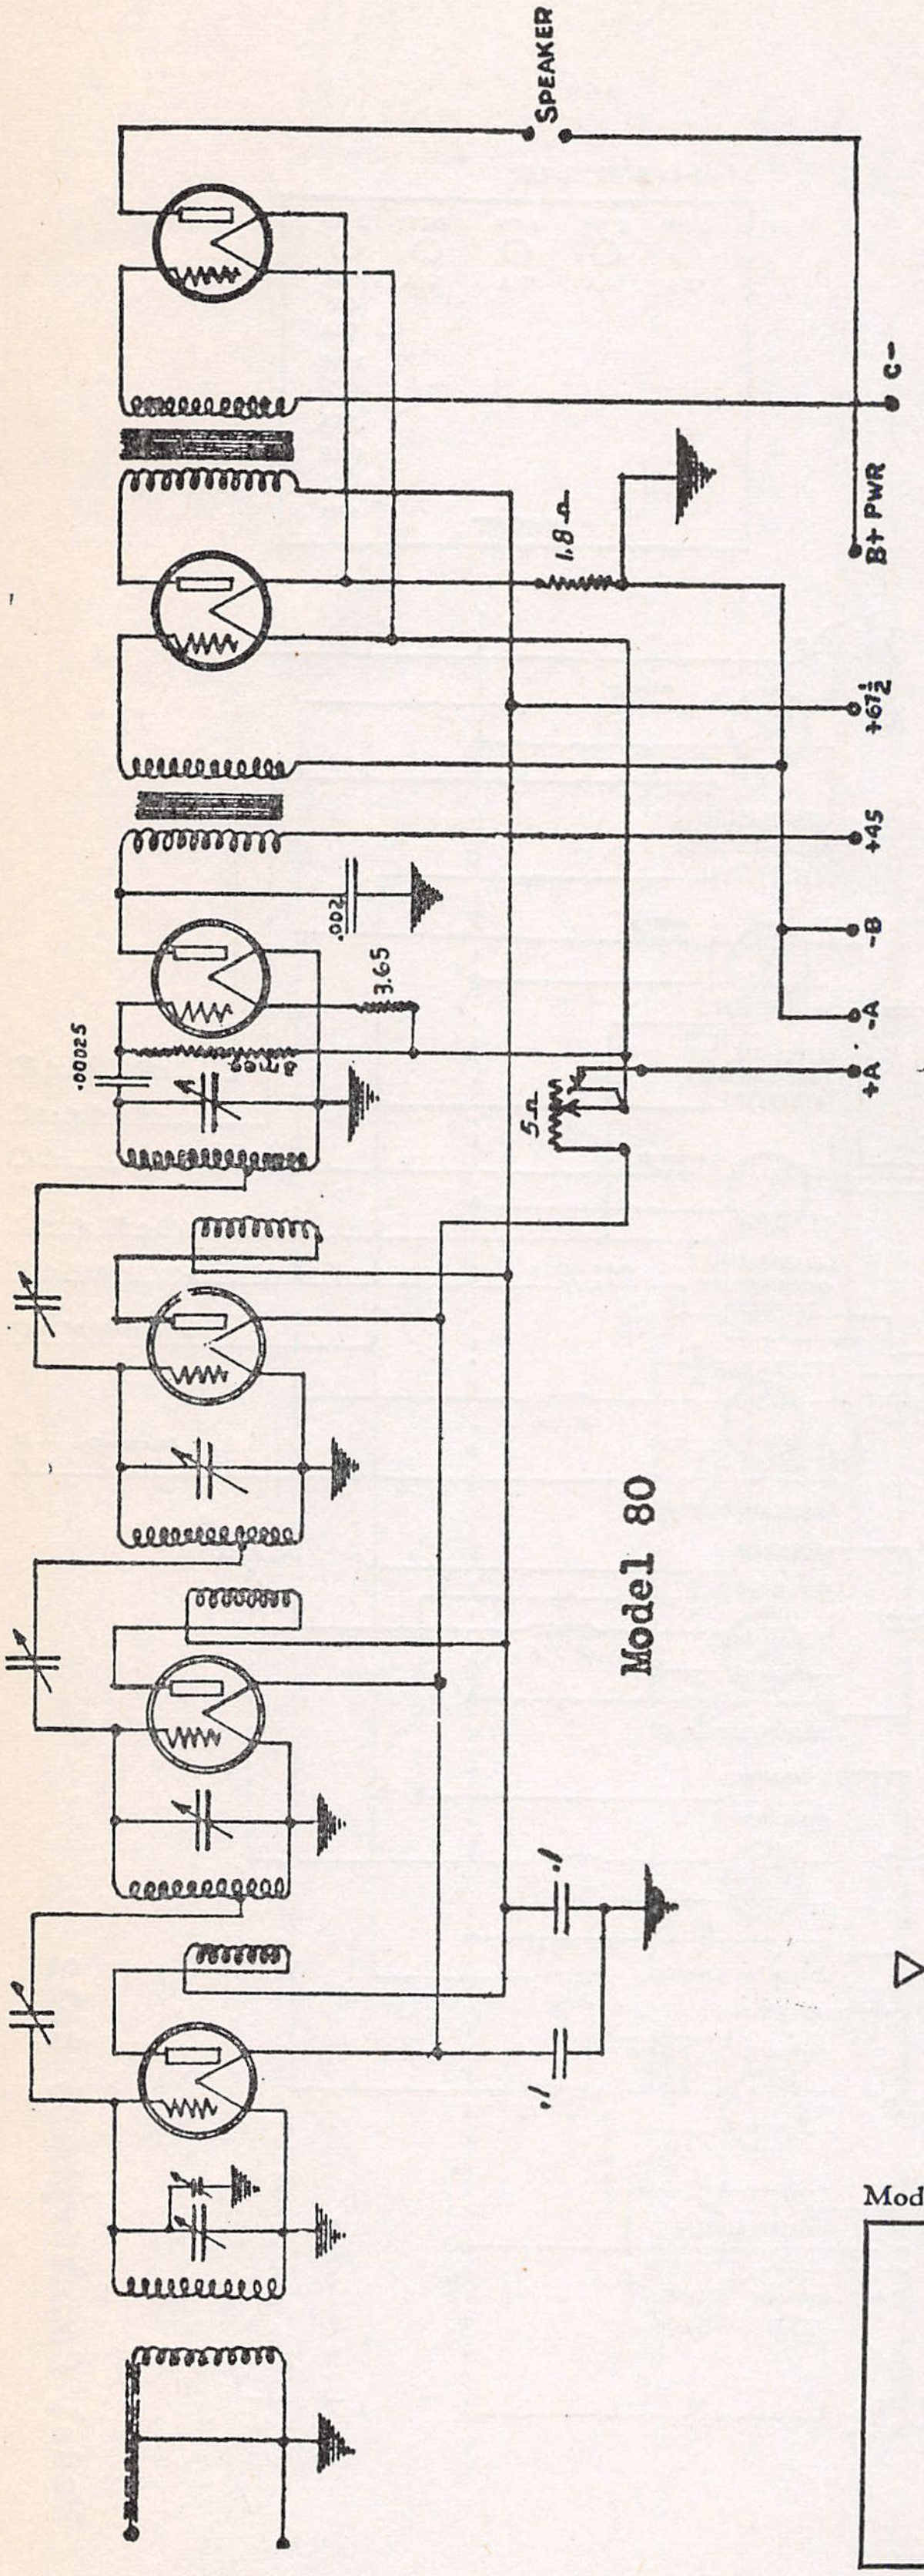
SPEAKER
C-
B+ PWR
+67½
+45
-B
-A
+A
1.8 Ω
.002
3.65
.00025
2 meg
5 Ω
.1
.1

Model 80

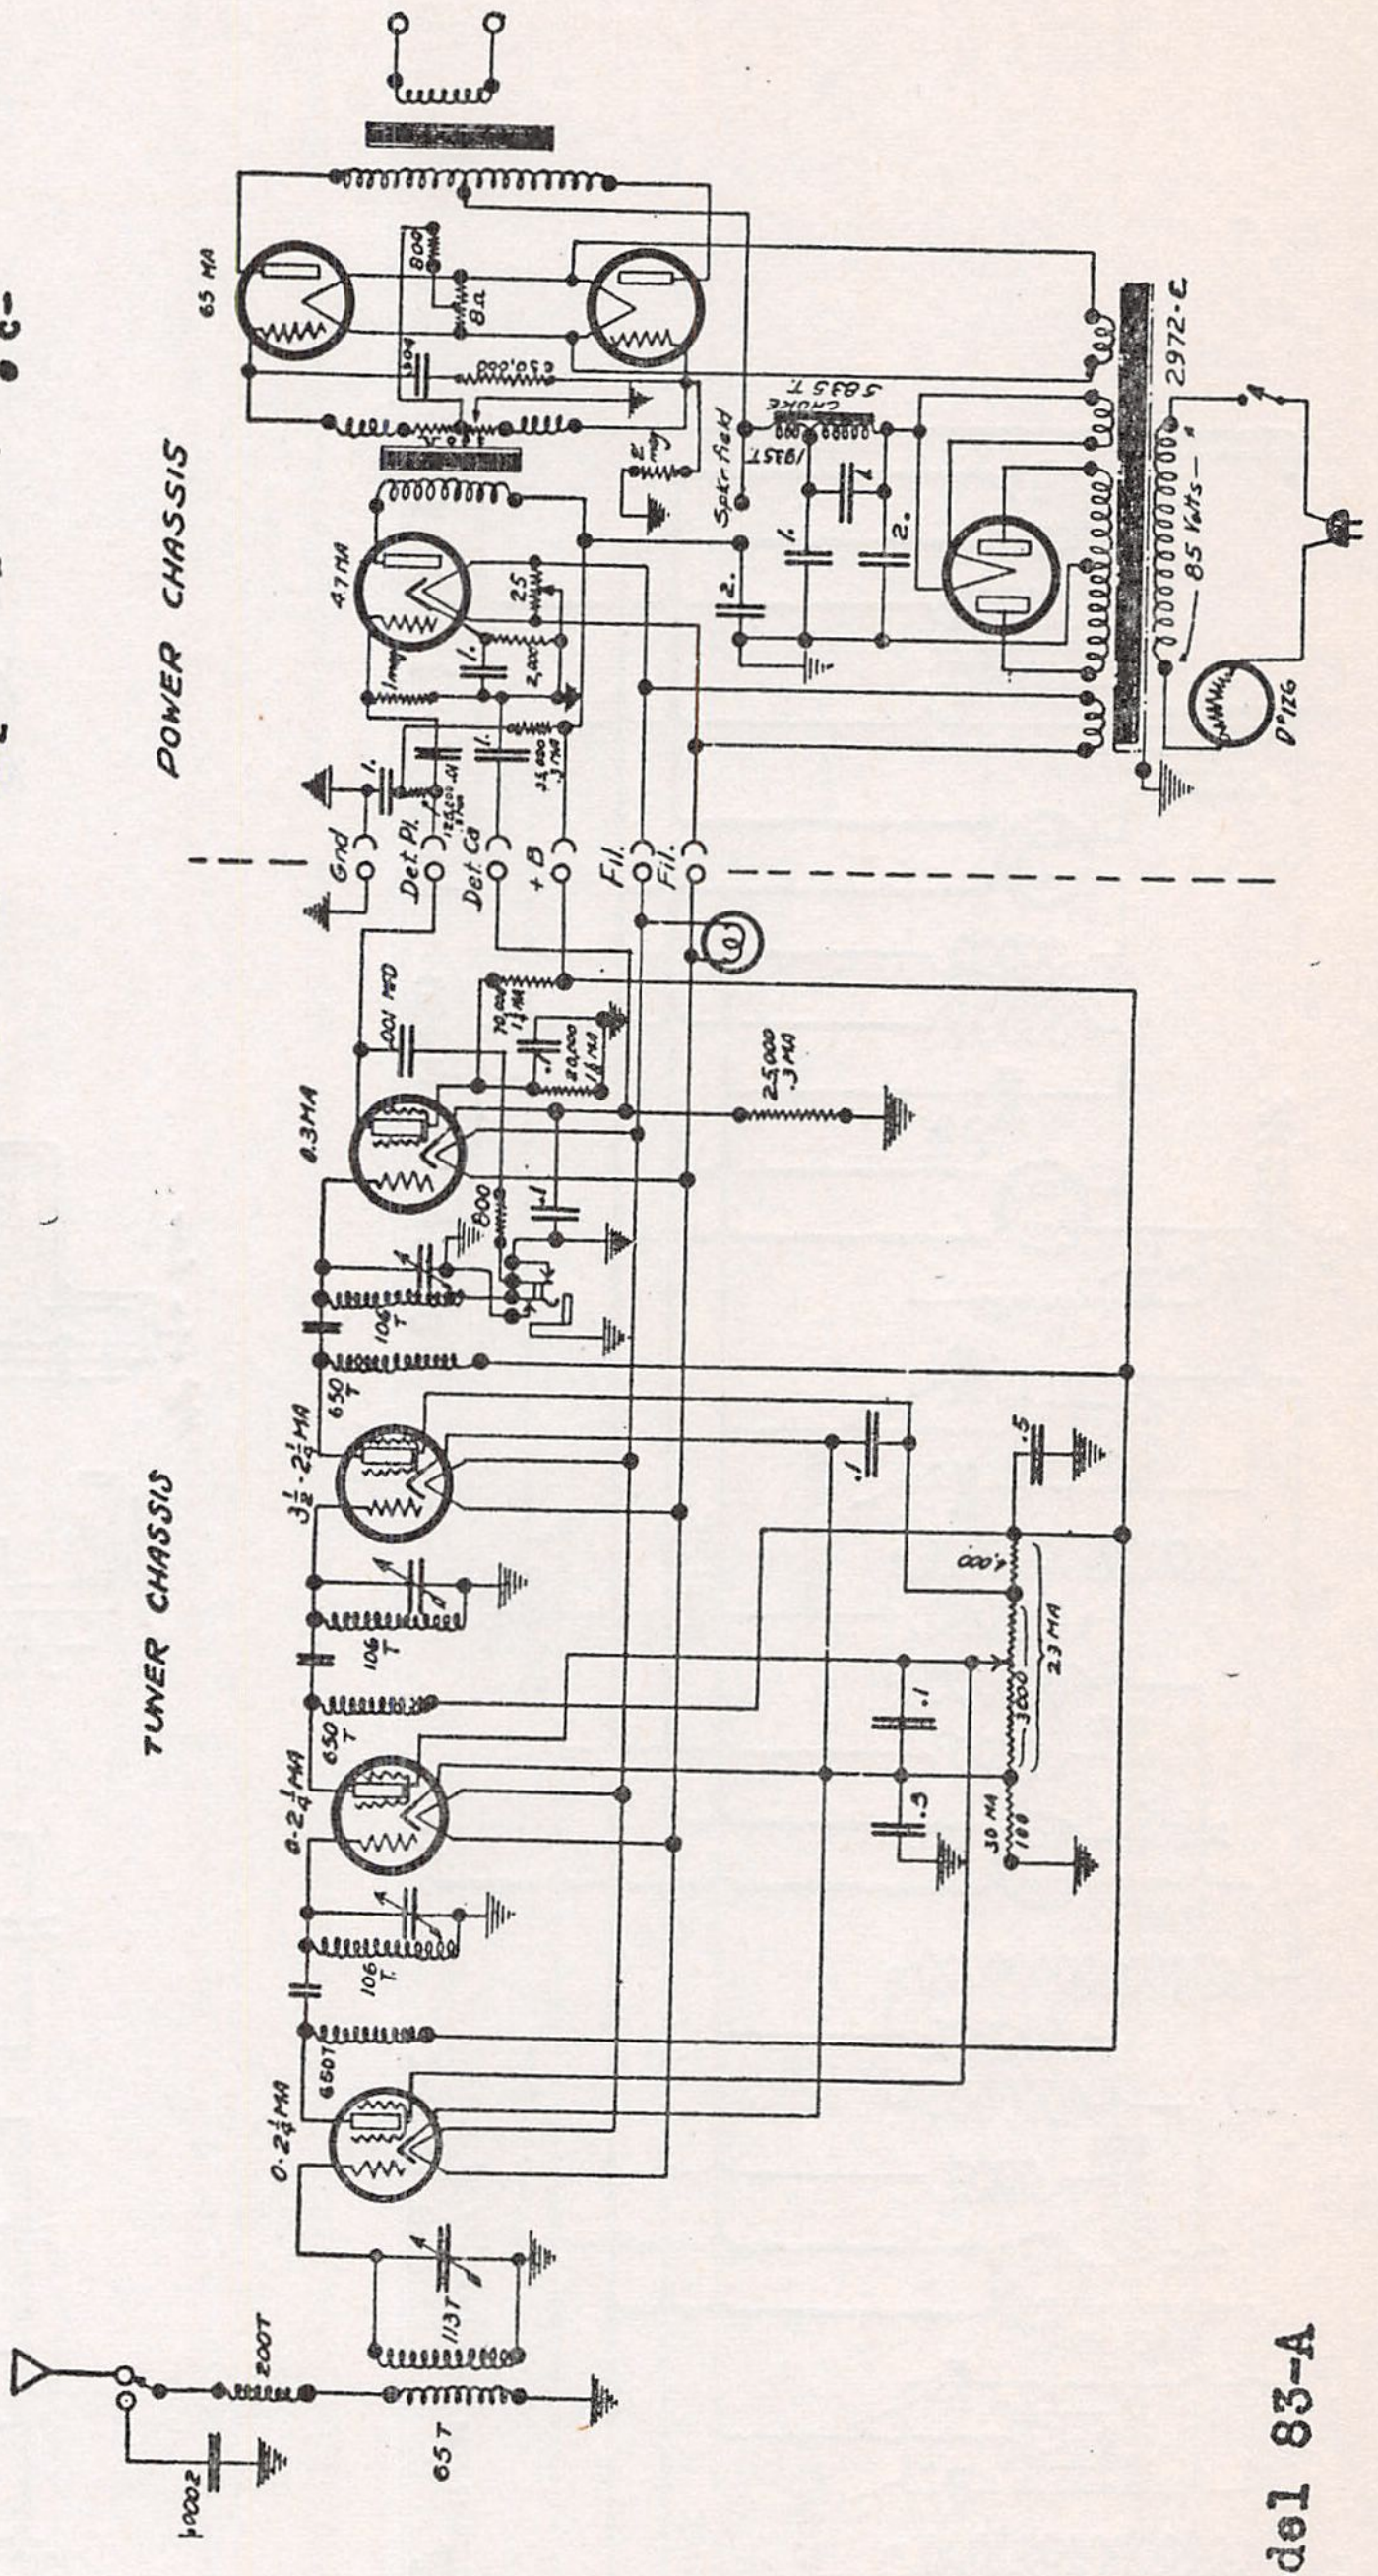
POWER CHASSIS
TUNER CHASSIS
65 MA
800
2972-C
85 Volts
5835 T
Choke
Spkr field
47 MA
Gnd
Det Pl
Det Gd
+B
Fil
Fil
25,000
8.3 MA
650 T
106 T
3½-2½ MA
0-2½ MA
30 MA
23 MA
.5
.1
.3
200 T
65 T
.0002
D'126

Model 83-A

Model 80

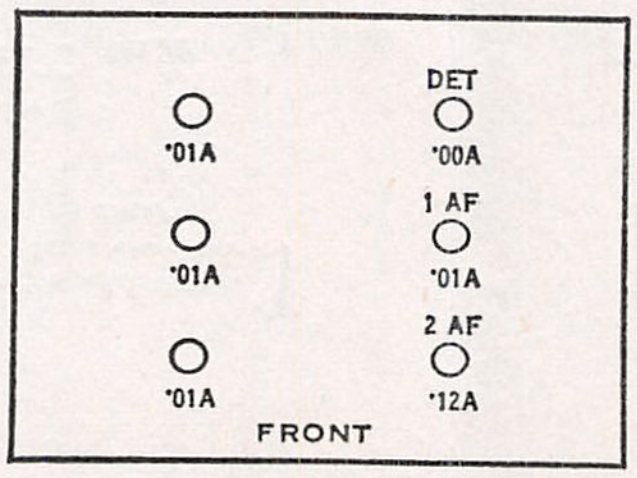
'01A
DET
'00A
'01A
1 AF
'01A
'01A
2 AF
'12A
FRONT

MODEL S-81, S-82
RF Chassis

BREMER-TULLY MFG. CO

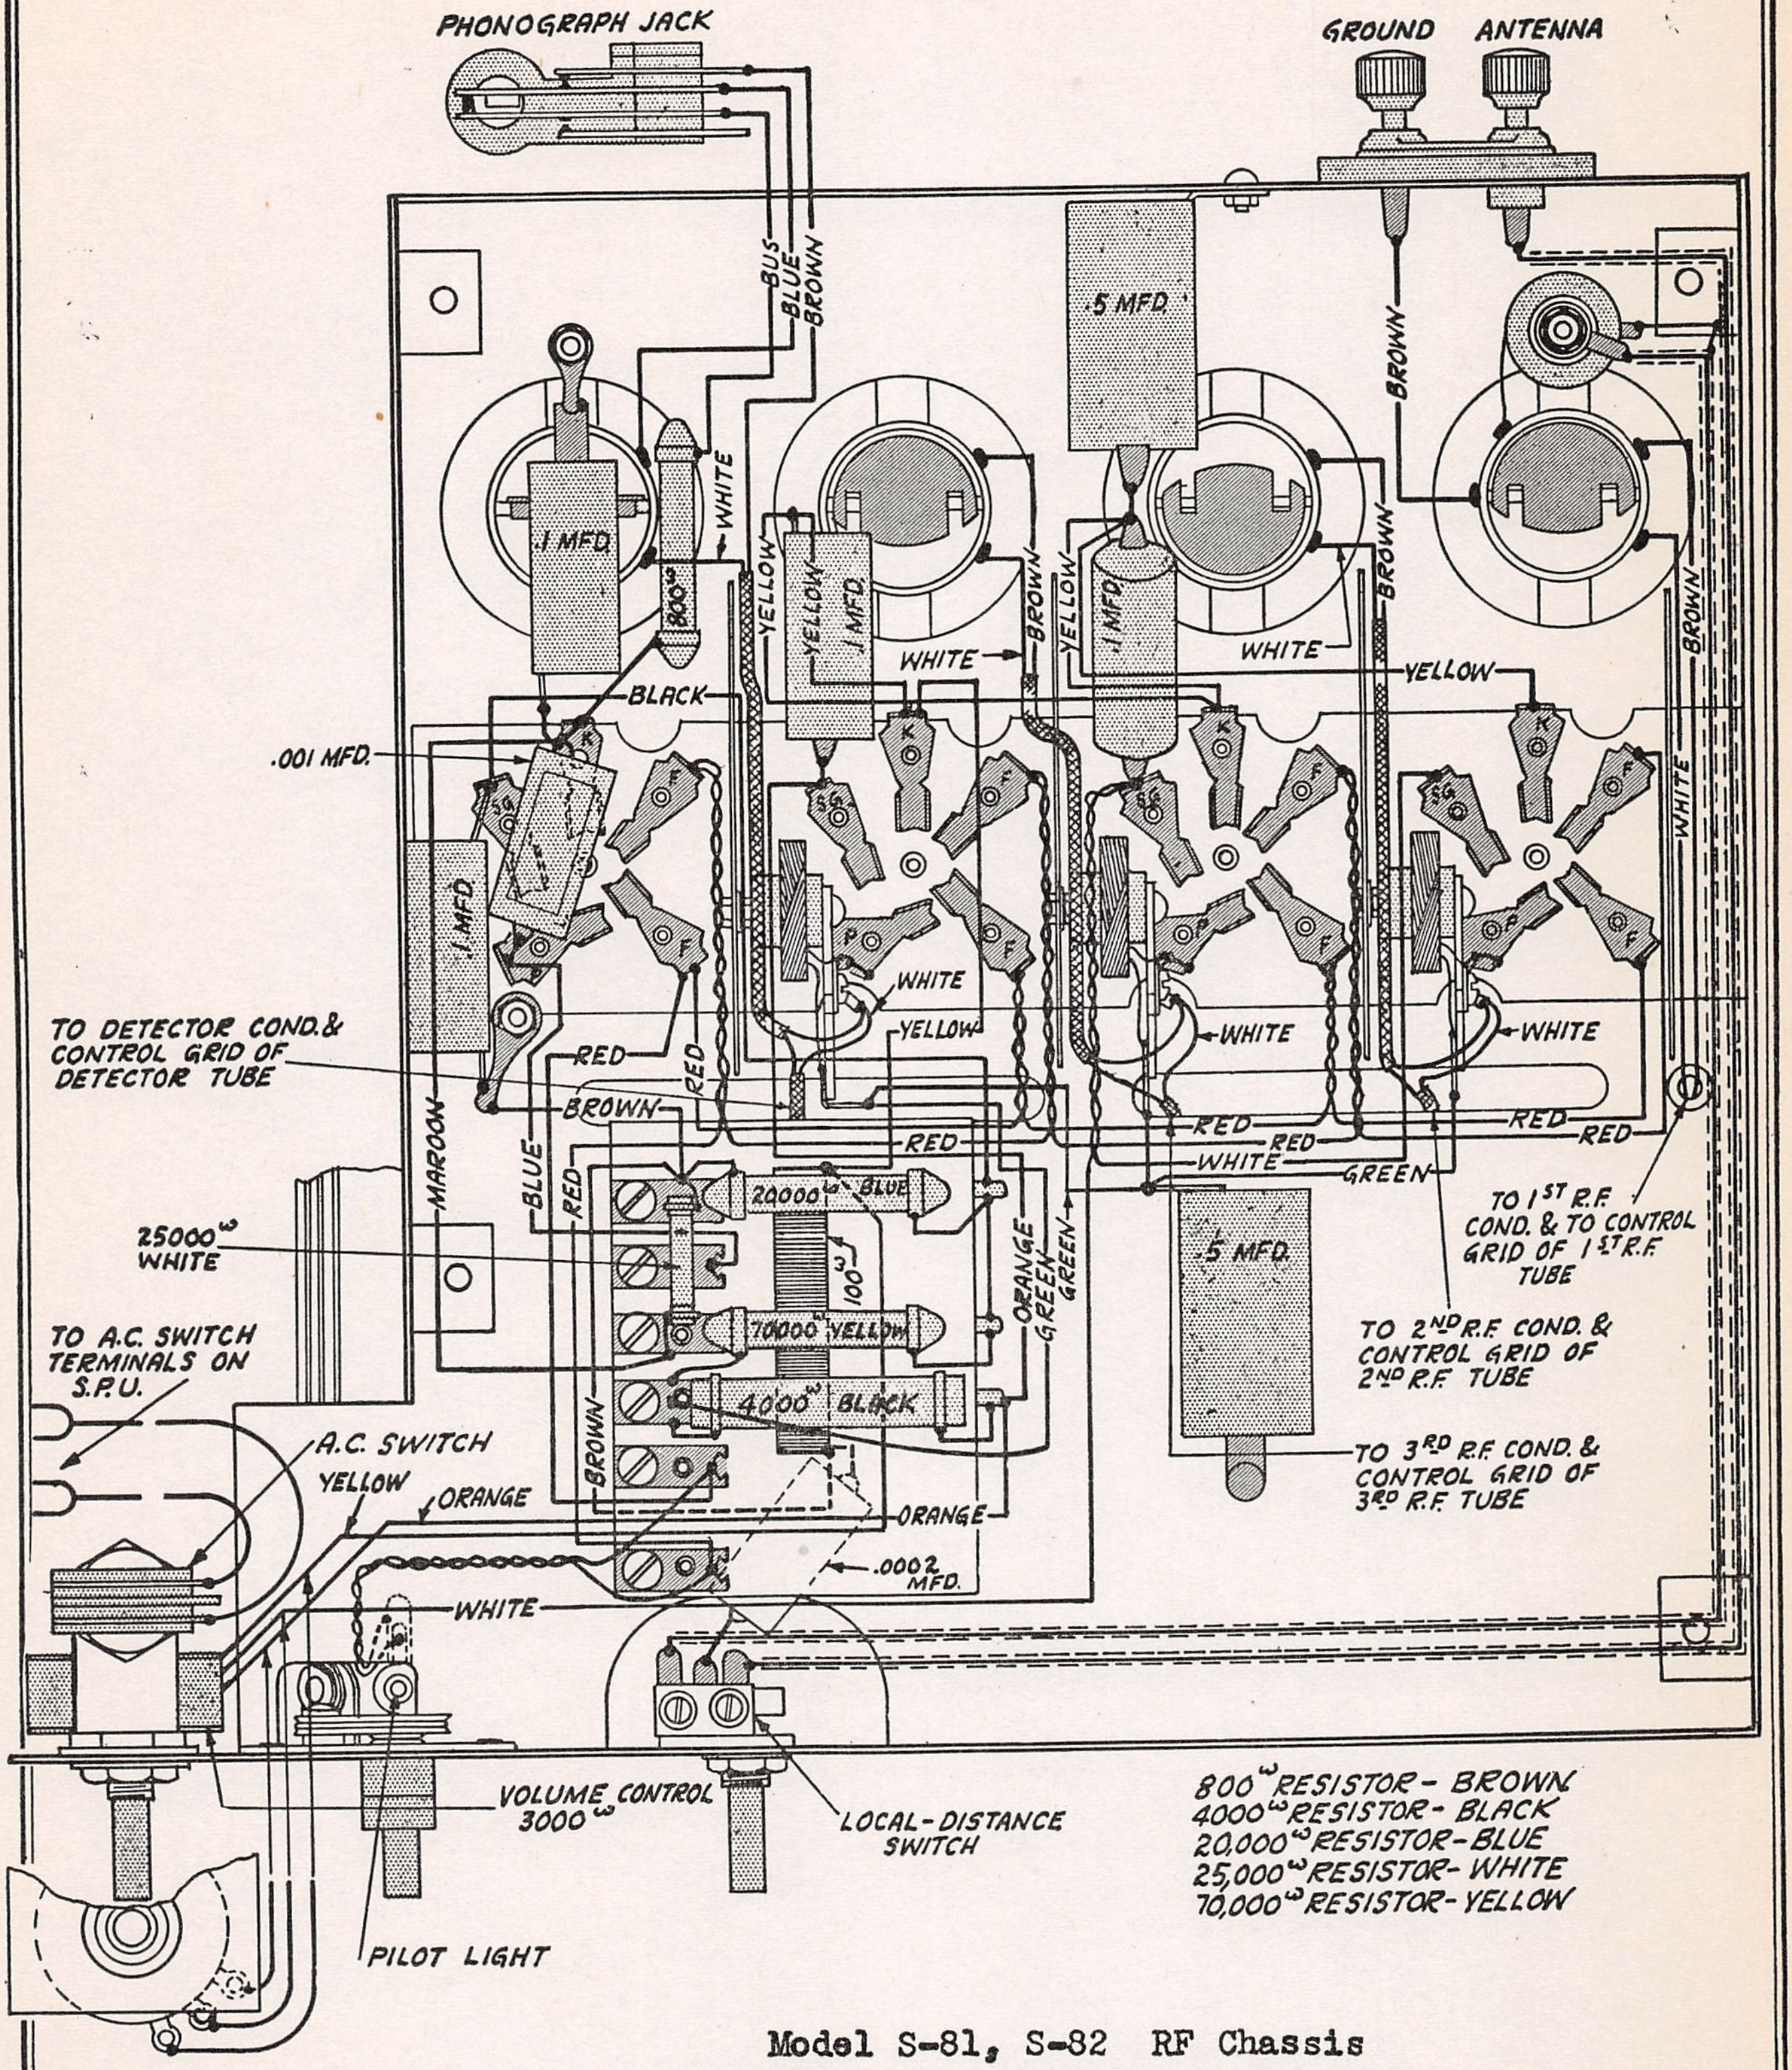
PHONOGRAPH JACK
GROUND
ANTENNA
BUS
BLUE
BROWN
.5 MFD.
BROWN
WHITE
.1 MFD.
800ω
YELLOW
YELLOW
.1 MFD.
WHITE
BROWN
YELLOW
.1 MFD.
WHITE
BROWN
YELLOW
BROWN
BLACK
.001 MFD.
SG
K
F
P
.1 MFD.
WHITE
WHITE
WHITE
YELLOW
TO DETECTOR COND. & CONTROL GRID OF DETECTOR TUBE
RED
RED
BROWN
RED
RED
RED
WHITE
RED
RED
GREEN
MAROON
BLUE
RED
20000ω
BLUE
100ω
70000ω YELLOW
4000ω BLACK
ORANGE
GREEN
GREEN
.5 MFD.
25000ω WHITE
TO 1ST R.F. COND. & TO CONTROL GRID OF 1ST R.F. TUBE
TO 2ND R.F. COND. & CONTROL GRID OF 2ND R.F. TUBE
TO 3RD R.F. COND. & CONTROL GRID OF 3RD R.F. TUBE
TO A.C. SWITCH TERMINALS ON S.P.U.
A.C. SWITCH
YELLOW
ORANGE
BROWN
ORANGE
WHITE
.0002 MFD.
VOLUME CONTROL 3000ω
LOCAL-DISTANCE SWITCH
PILOT LIGHT

800ω RESISTOR - BROWN
4000ω RESISTOR - BLACK
20,000ω RESISTOR - BLUE
25,000ω RESISTOR - WHITE
70,000ω RESISTOR - YELLOW

Model S-81, S-82 RF Chassis

SCHEMATIC CIRCUIT OF RADIO CHASSIS USING UY-224 TUBES

7008

MODEL 10
Schematic and Voltage

BRUNSWICK RADIO CORPORATION

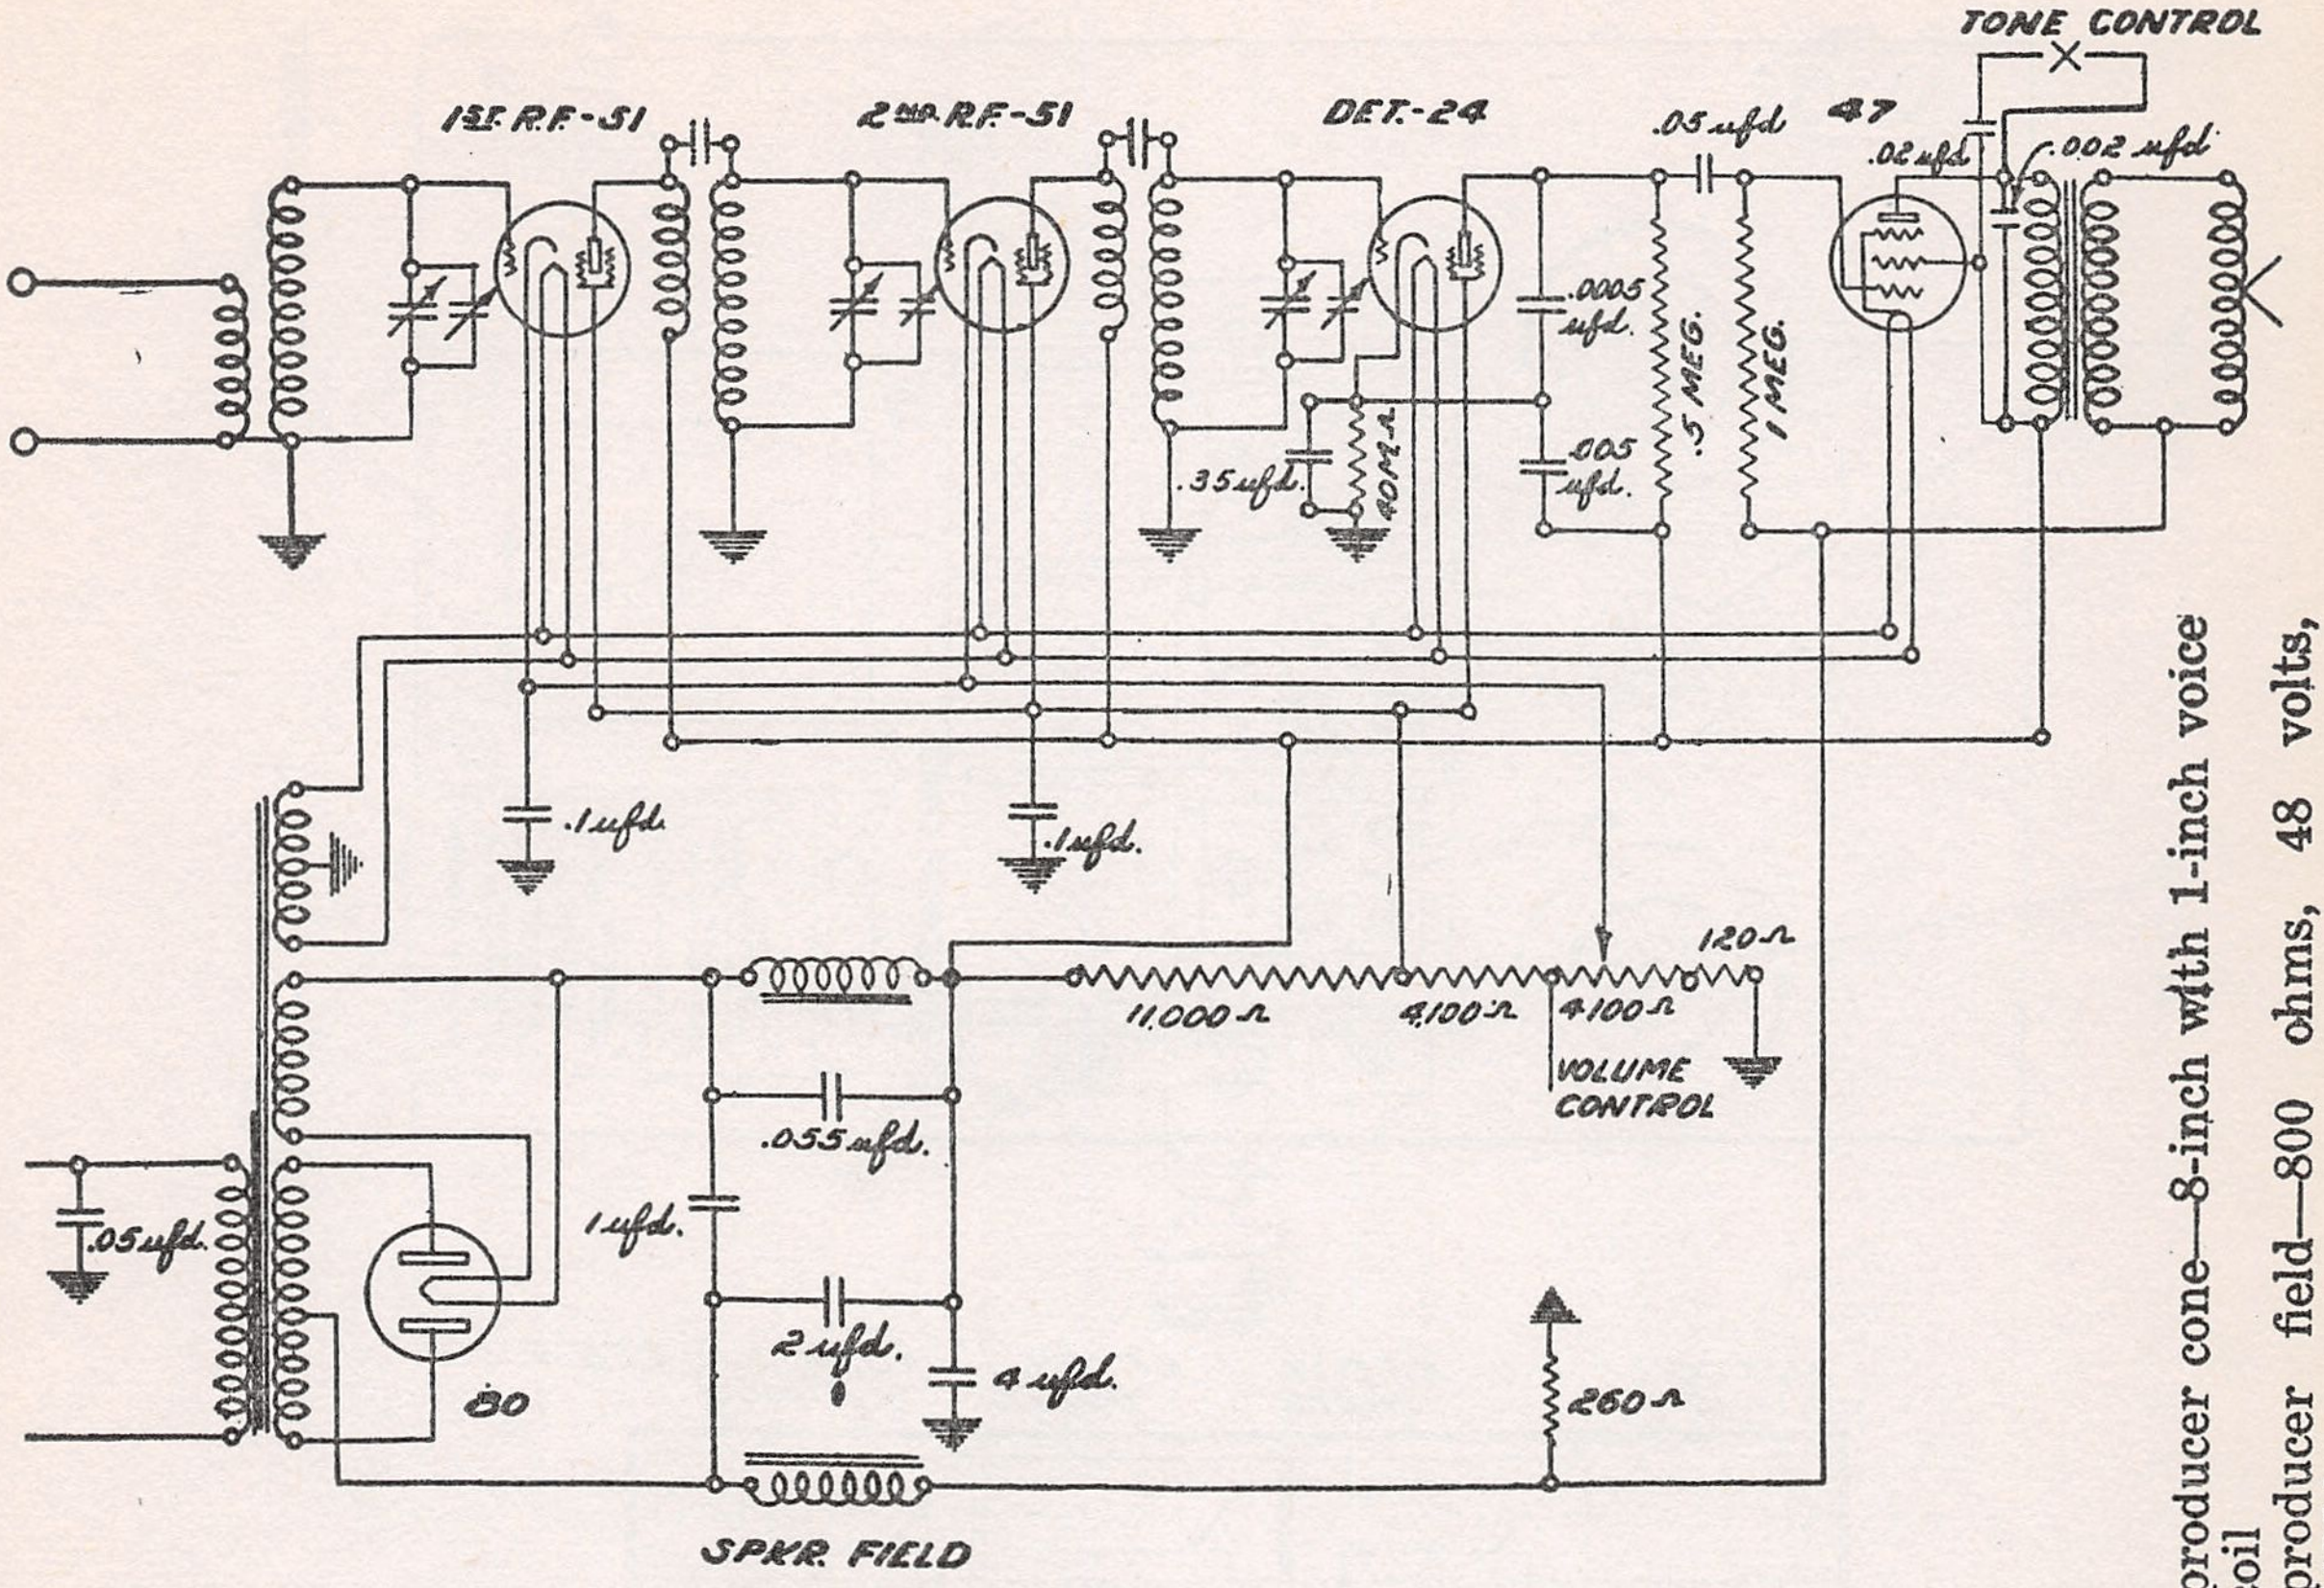
1st R.F.-51
2nd R.F.-51
DET.-24
.05 ufd
47
TONE CONTROL
.02 ufd
.002 ufd
.0005 ufd.
.005 ufd.
.5 MEG.
1 MEG.
.35 ufd.
40MΩ
.1 ufd.
.1 ufd.
120Ω
11,000Ω
4,100Ω
4100Ω
VOLUME CONTROL
.055 ufd.
1 ufd.
2 ufd.
4 ufd.
.05 ufd.
80
260Ω
SPKR. FIELD

Reproducer cone—8-inch with 1-inch voice coil
Reproducer field—800 ohms, 48 volts, 60MA

VOLTAGE ANALYSIS

No.	Stage	Type Tube	Fil. Volts	Plate Volts	Cont. Grid Volts	Cath. Volts	S. G. Volts	Ip. Normal
1	1st R. F.	C. L. 51	2.1	225	2.1	2	75	5
2	2nd R. F.	C. L. 51	2.1	230	2.2	2	75	4.5
3	Det.	C. L. 24	2.1	160*	7	7 5	75	.02
4	Output	C. L. 47	2.1	215	5*	0	225	26.5
5	Rect.	C. L. 80	4.8	280				†30

*Reading dependent upon resistance of meter.

†Reading taken for one anode only: 60 milliamperes would be about correct.

Volume control position full. Line voltage 115—60 cycle.

RESISTANCE TABLE

(Using 10-volt range meter 1,000 ohms per volt and 6-volt battery)

Item	Color Code*	From	To	Reading	Your Reading	Resistance in Ohms
Det. Cath. Resistor	Yel., Blk., Or.	Det. Cath.	Gnd.	1.3		40,000
Pent. Grid Resistor	Br. Blk. Green	Pent Grid	Spkr. Field	Slight Deflection		1,000,000
Wire Wound	Black	Voice Coil. Black	Gnd.	5.9		260
Voltage Divider. Short End	Black	Volume Cont. Green Lead	S. G. Ckt.	4.2		4,100
Voltage Divider. Long End	Black	Plate	S. G. Ckt.	3.		11,000
Det. Plate Resistor	Gr., Blk., Yellow	Det. Plate	Pent. Space Chg. Grid.	.1		500,000
Vol. Control "on"		Gnd.	R. F. Cathode	4.2		4,100

Color code: read body color first, tip second and dot last.

MODEL 10
Chassis

BRUNSWICK RADIO CORPORATION

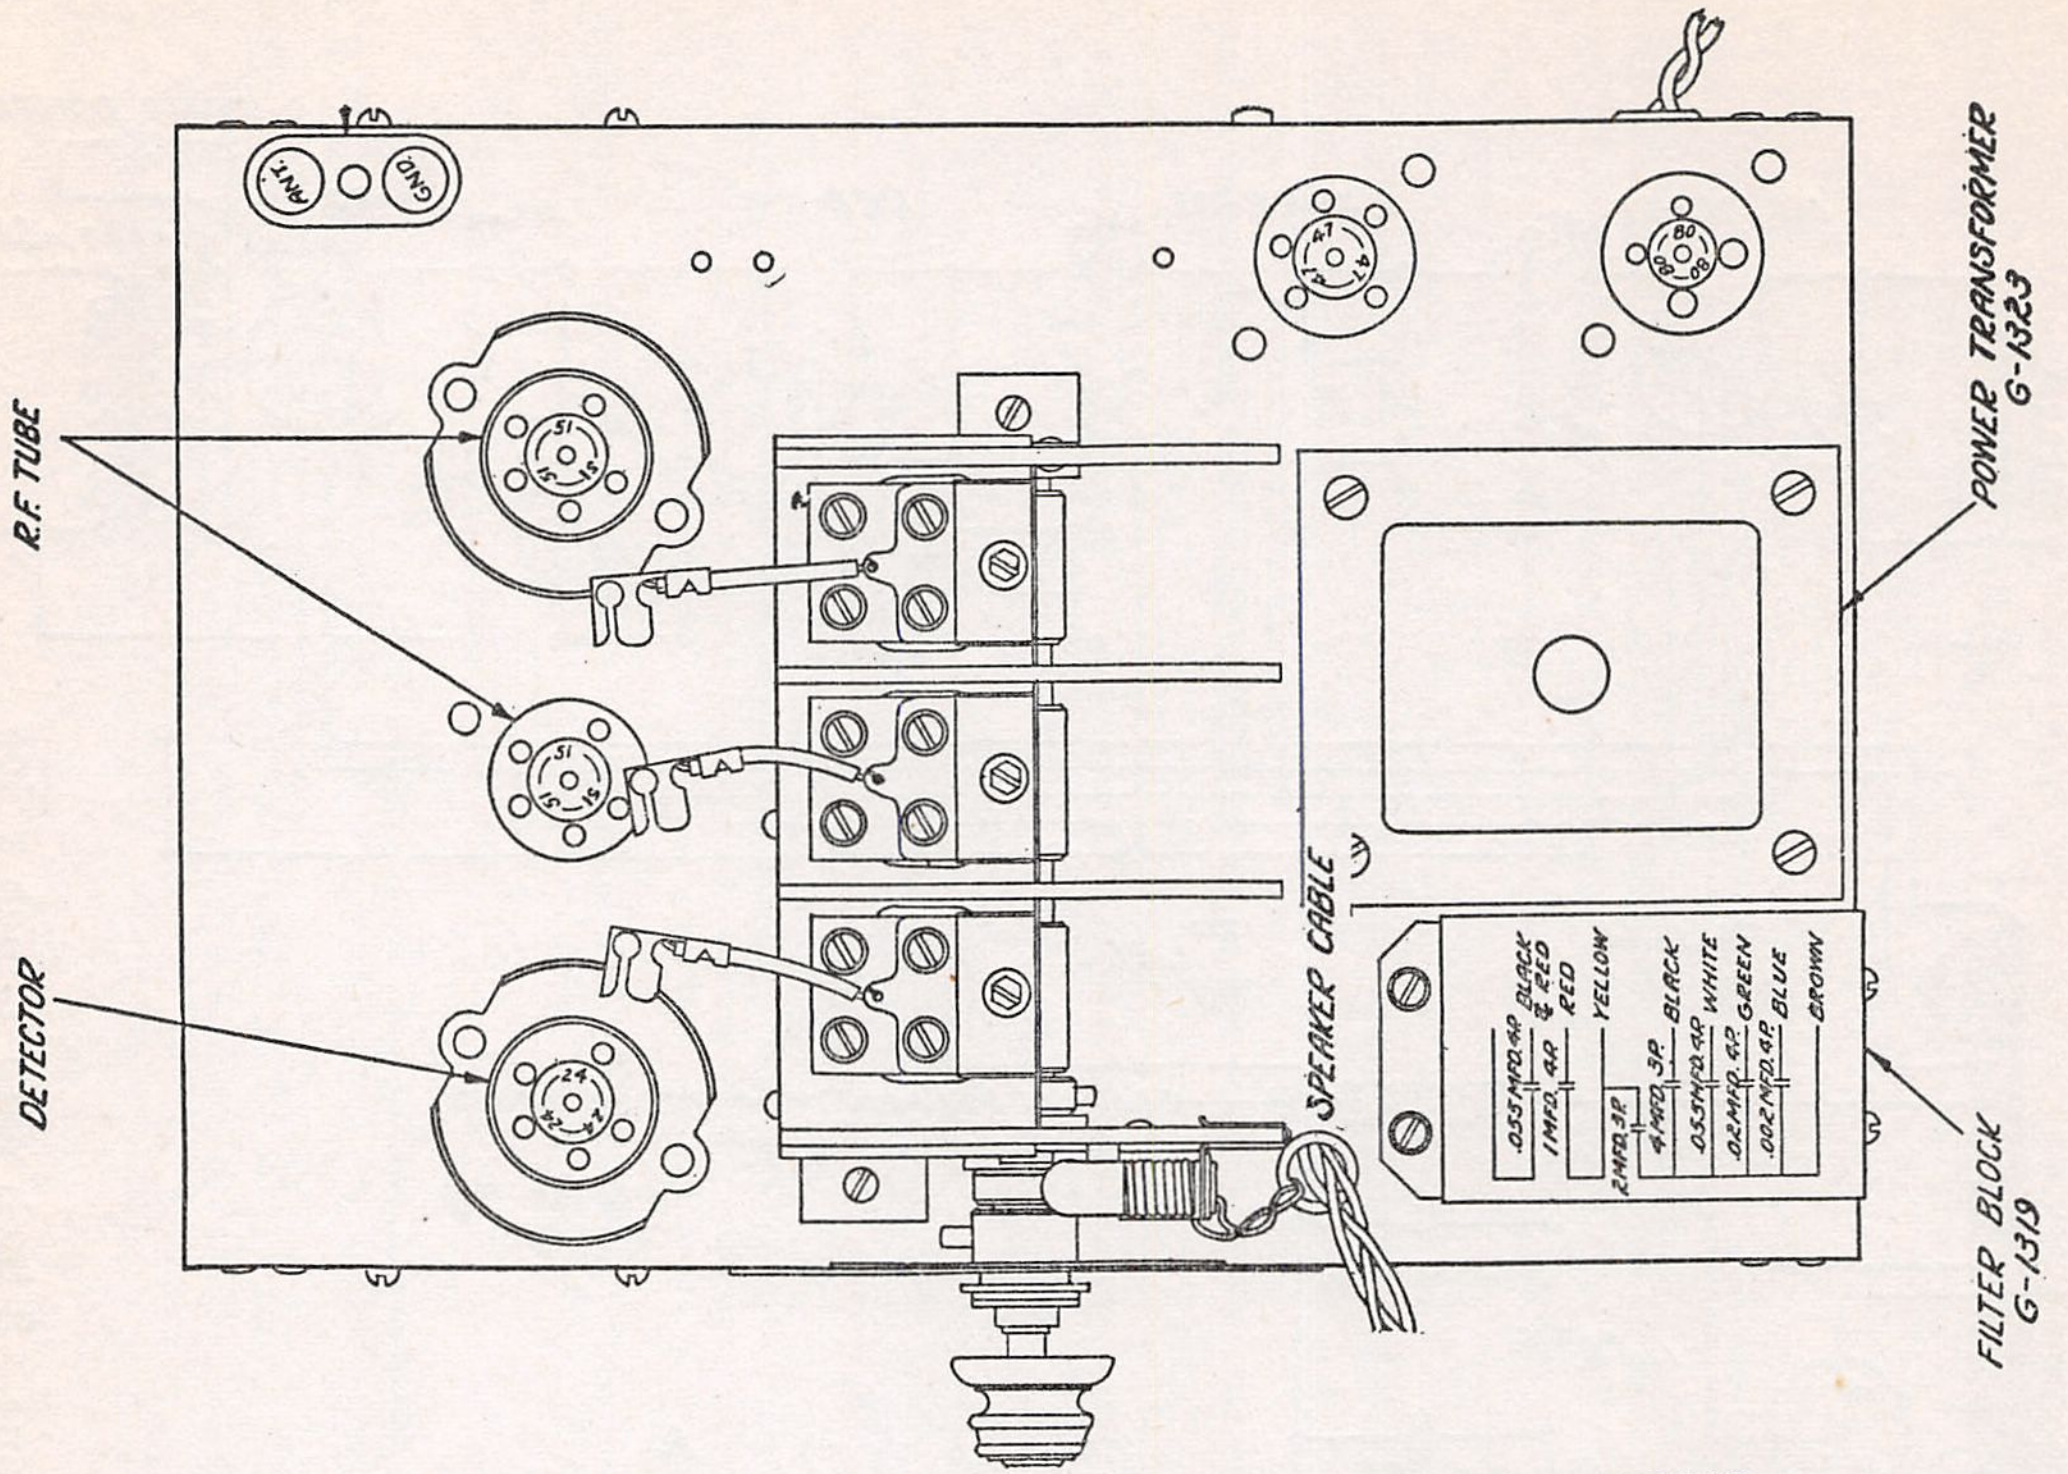
ANT.
GND.
R.F. TUBE
DETECTOR
51
24
47
80
SPEAKER CABLE
POWER TRANSFORMER
G-1323
FILTER BLOCK
G-1319
.055 MFD. 4P.
1 MFD. 4P.
2 MFD. 3P.
4 MFD. 3P.
.055 MFD. 4P.
.02 MFD. 4P.
.002 MFD. 4P.
BLACK & RED
RED
YELLOW
BLACK
WHITE
GREEN
BLUE
BROWN

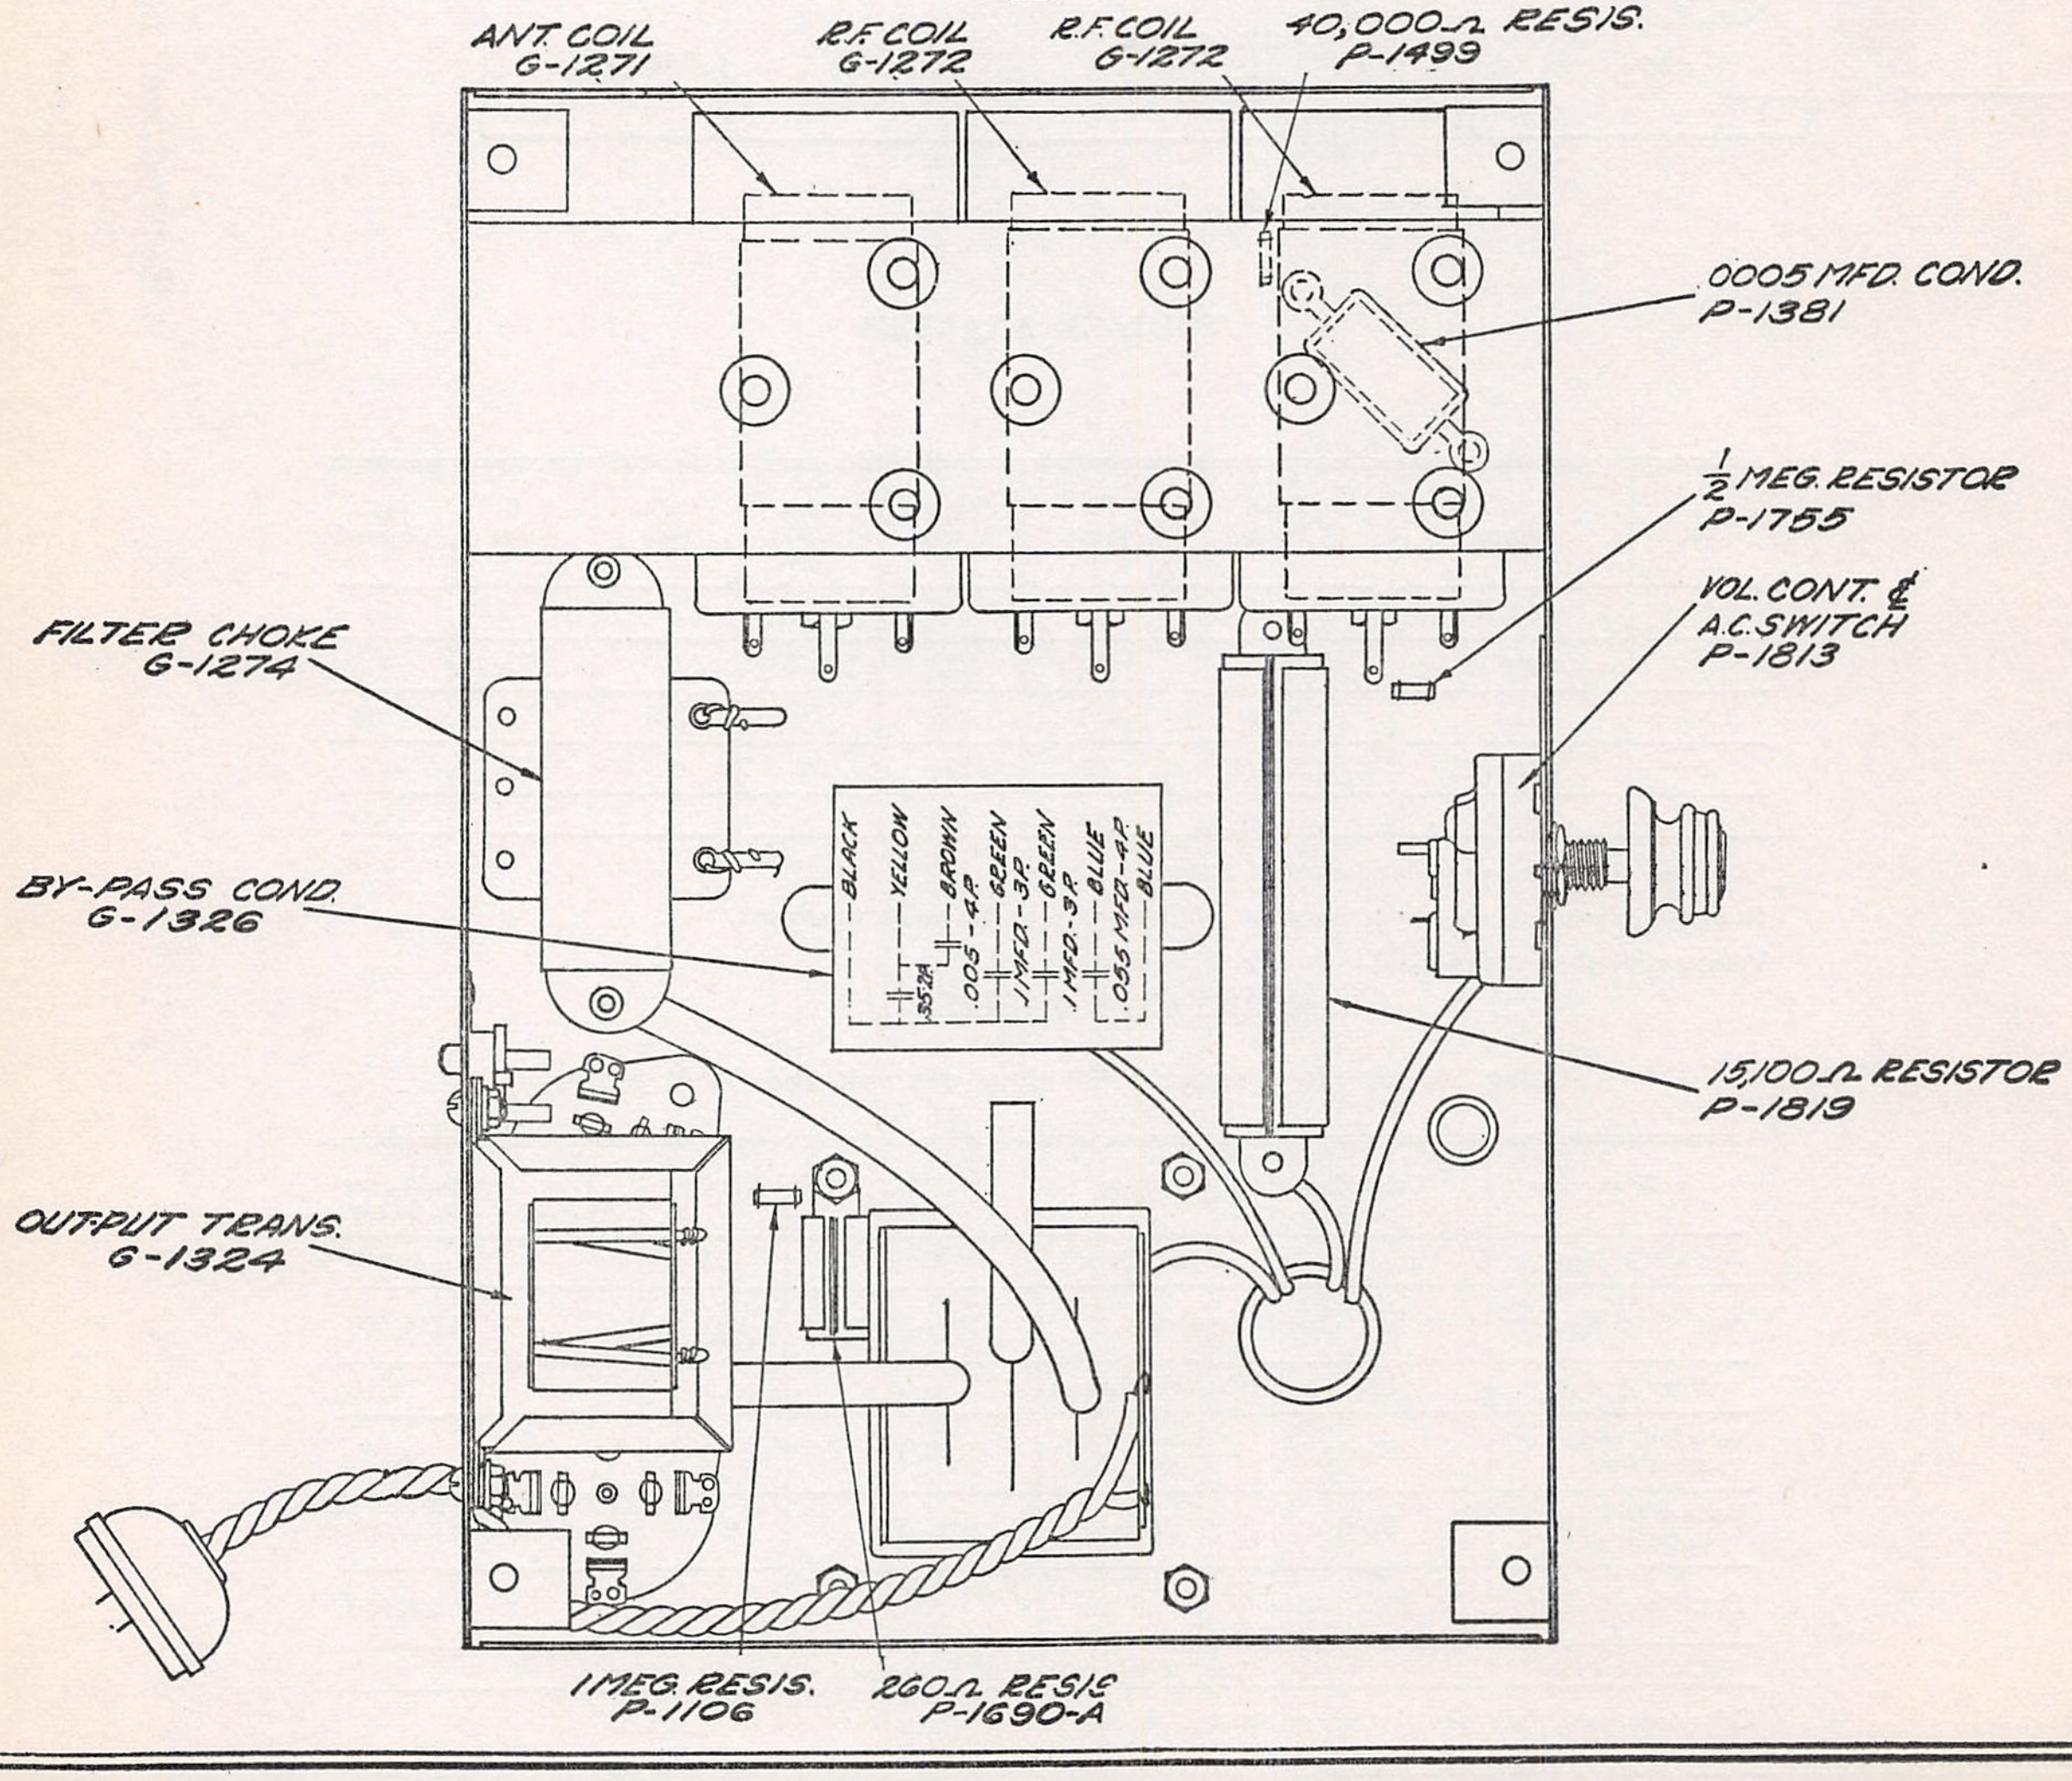
ANT. COIL
G-1271
R.F. COIL
G-1272
R.F. COIL
G-1272
40,000 Ω RESIS.
P-1499
.0005 MFD. COND.
P-1381
½ MEG. RESISTOR
P-1755
VOL. CONT. &
A.C. SWITCH
P-1813
FILTER CHOKE
G-1274
BY-PASS COND.
G-1326
BLACK
YELLOW
BROWN
GREEN
GREEN
BLUE
BLUE
.35 Ω A
.005-4P.
.1 MFD.-3P.
.1 MFD.-3P.
.055 MFD.-4P.
15,100 Ω RESISTOR
P-1819
OUTPUT TRANS.
G-1324
1 MEG. RESIS.
P-1106
260 Ω RESIS.
P-1690-A

BRUNSWICK RADIO CORPORATION

MODEL 11, 12, 16
and 33 AC

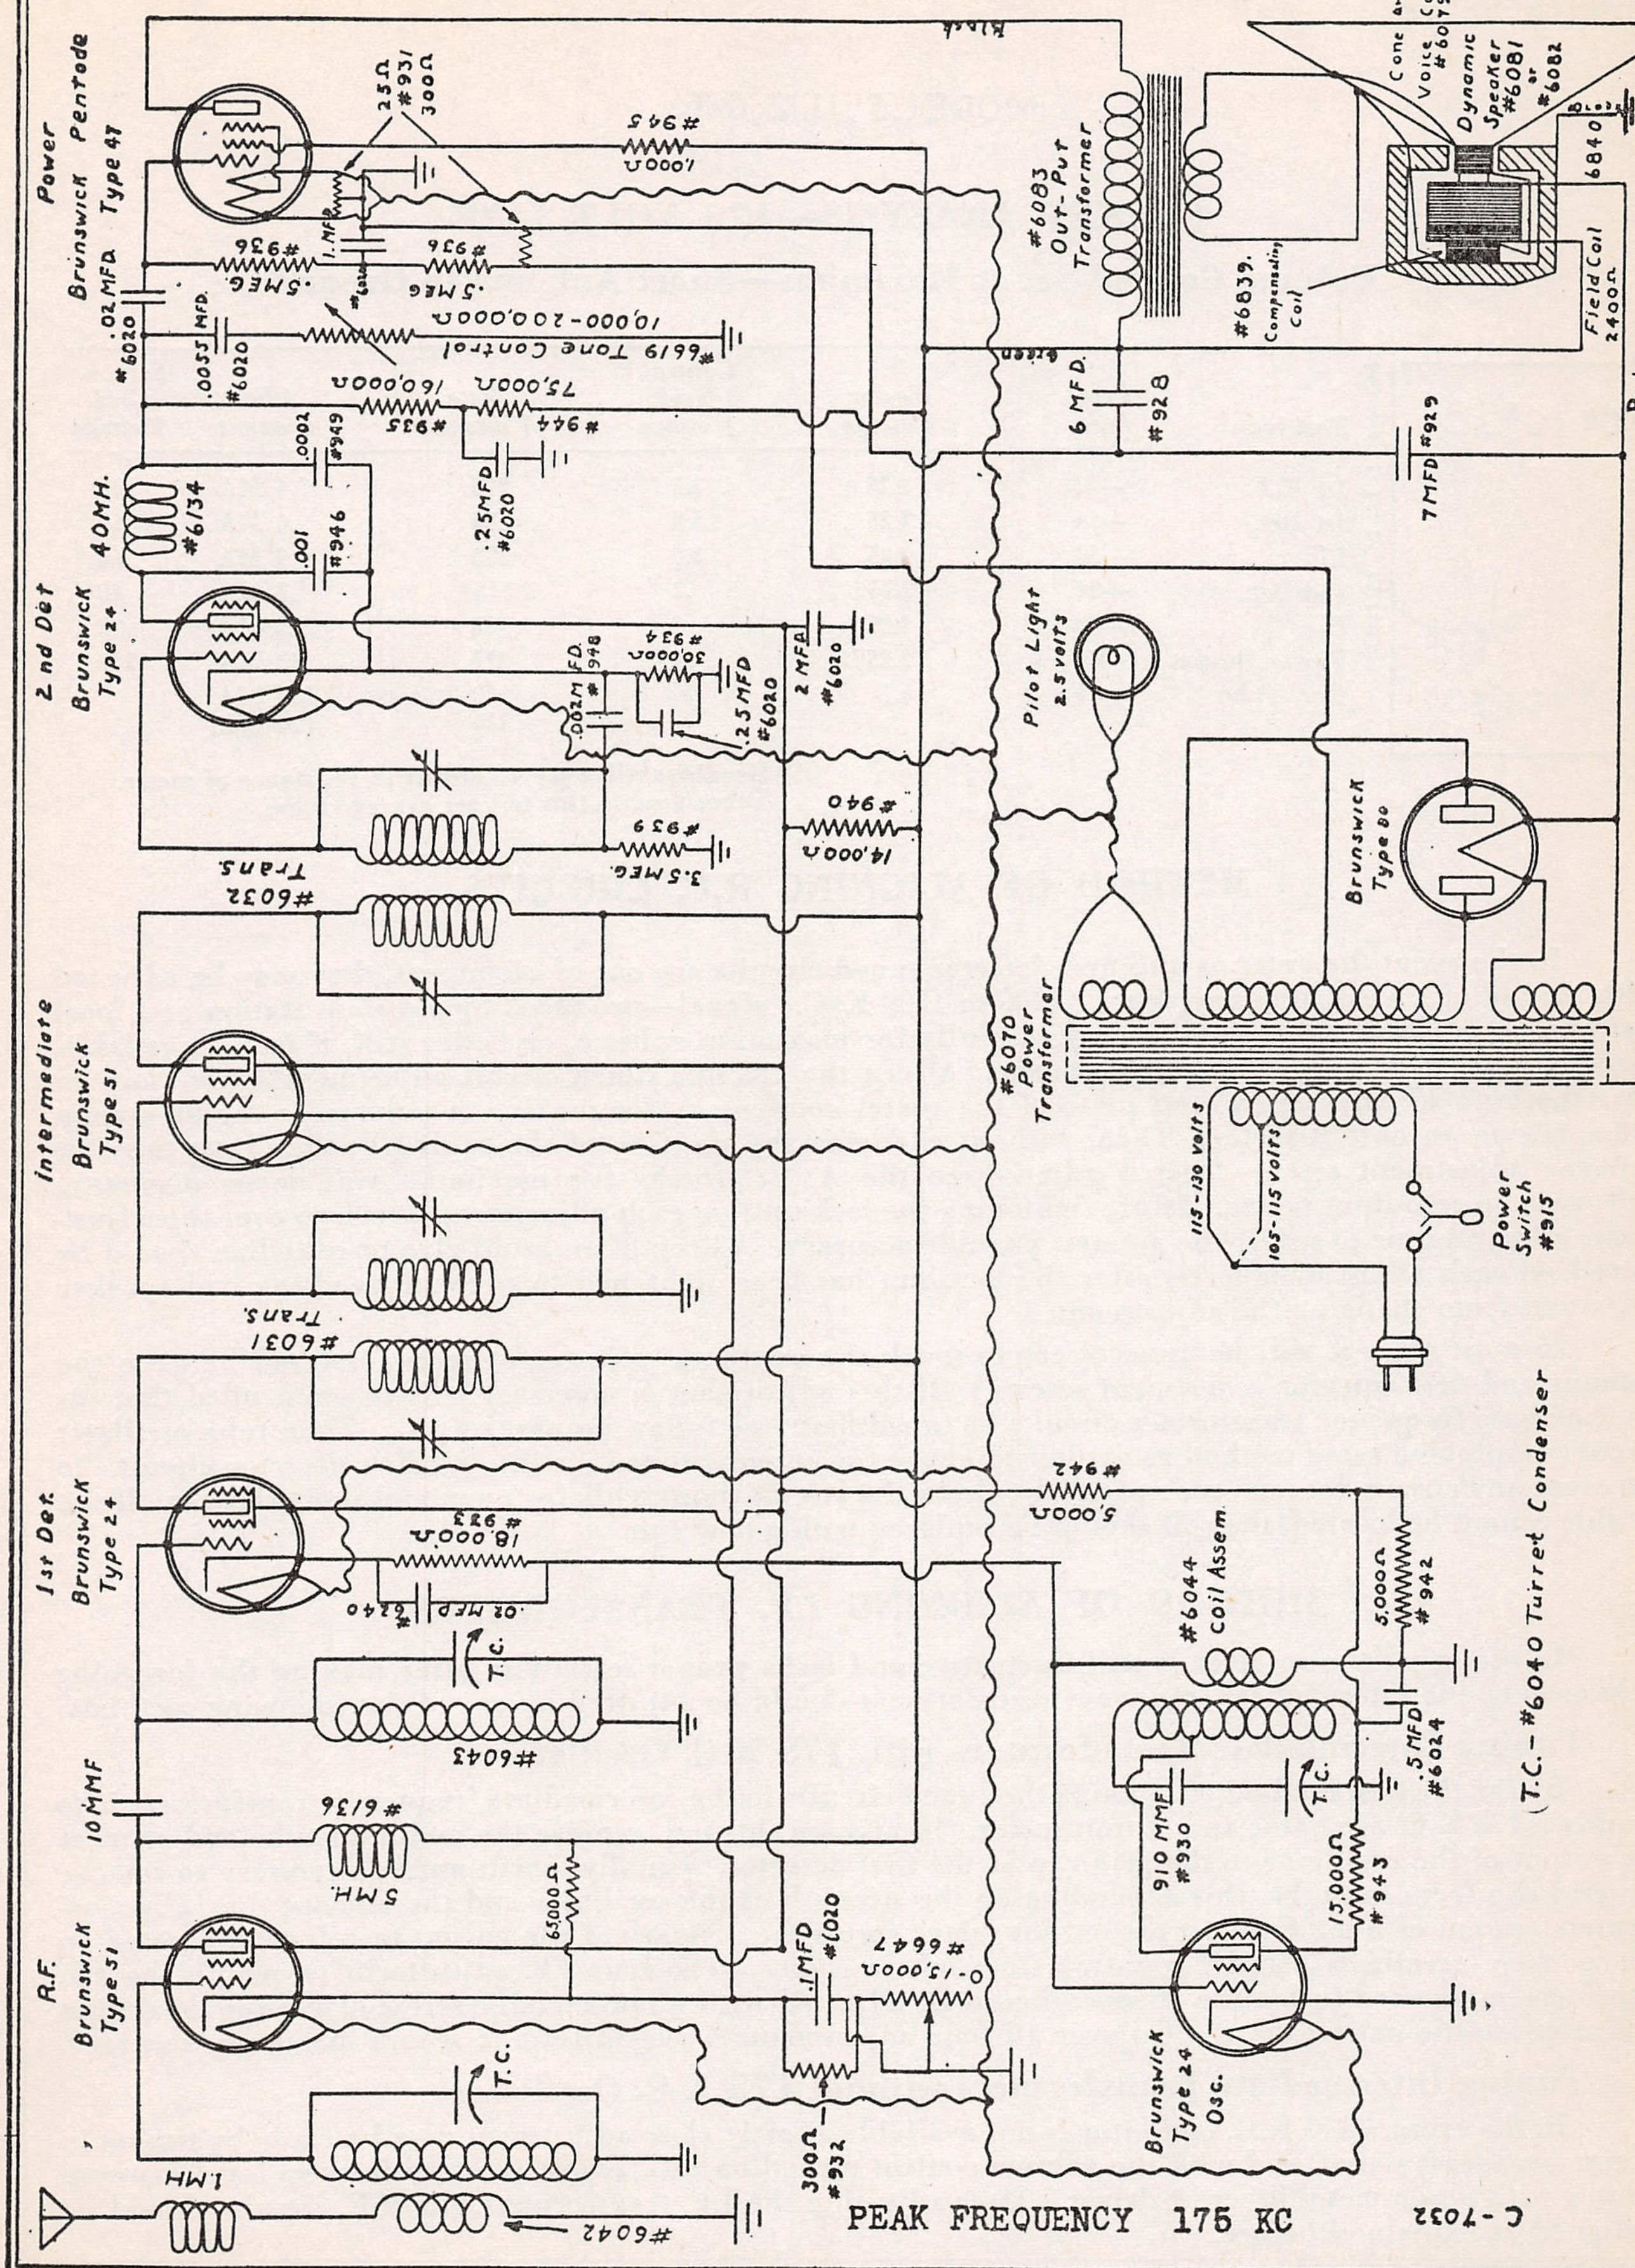
Power Brunswick Pentode Type 47
25Ω
#931
300Ω
#945
1,000Ω
Black
1. MFD
#6020
#936
.5MEG
.02 MFD
#6020
.0055 MFD.
#6020
#6619 Tone Control
10,000-200,000Ω
160,000Ω
#935
75,000Ω
#944
.25MFD
#6020
.0002
#949
40MH.
#6134
.001
#946
2nd Det Brunswick Type 24
.002 MFD.
#948
30,000Ω
#934
.25 MFD
#6020
2 MFD
#6020
#940
14,000Ω
#939
3.5MEG.
#6032 Trans.
Intermediate Brunswick Type 51
#6031 Trans.
1st Det. Brunswick Type 24
#933
18,000Ω
.02 MFD
#6240
T.C.
#6043
10MMF
#6136
5MH.
65,000Ω
.1MFD
#6020
#6647
0-15,000Ω
300Ω
#932
R.F. Brunswick Type 51
T.C.
1MH
#6042
#6083 Out-Put Transformer
Cone and Voice Coil #6079
Dynamic Speaker #6081 or #6082
6840
#6839 Compensating Coil
Field Coil 2400Ω
green
6 MFD
#928
#929
7 MFD
Red
Pilot Light 2.5 volts
Brunswick Type 80
#6070 Power Transformer
115-130 volts
105-115 volts
Power Switch #915
#942
5,000Ω
#6044 Coil Assem.
5,000Ω
#942
.5MFD
#6024
T.C.
910 MMF
#930
15,000Ω
#943
Brunswick Type 24 Osc.
T.C. - #6040 Turret Condenser

PEAK FREQUENCY 175 KC

C-7032

For Voltage an Trimmer alignment Data See Page 186-F

Models 11, 12, 16, (and 33)

MODEL 11,12,16
and 33
Service Notes

BRUNSWICK RADIO CORPORATION

MODELS 11,12,&16.

SOCKET ANALYSIS—120 VOLT LINE

Volume Control Set at Maximum—Short Antenna to Ground

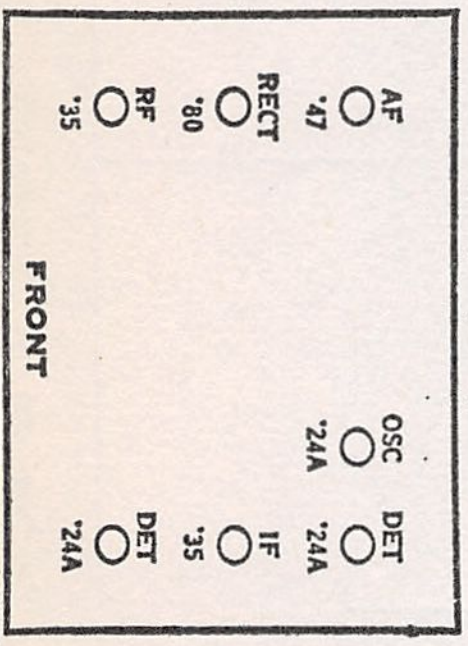

Models 11, 12, 16, 33 (1931)

Position	*Type Tube*	*Heater Voltage*	*Control Grid Voltage*	*Plate Voltage*	*Plate Current*	*Screen Grid Voltage*
1st R.F.	—51	2.25	3.5	230	3.4 MA	70
1st Det.	—24	2.25	5.8	220	.4 MA	62
I.F.	—51	2.25	3.8	220	9 MA	60
2nd Det.	—24	2.25	.2	115*	.3 MA	60
Osc.	—24	2.25	0	35	1.2 MA	22
Power Output	—47	2.25	1	220	33 MA	220
Rec. Tube	—80	4.7		(530 (530	(26 MA (26 MA	

* Readings will vary according to resistance of meter.
Tubes used in this test are average tubes.

METHOD OF ALIGNING R.F. CIRCUITS

In the event the antenna and first detector tuned circuits are out of alignment, they may be adjusted with the aid of a weak high frequency (1300 to 1500 K. C.) signal—produced by a distant station or a local test oscillator. Tune this signal in very carefully for maximum volume, or better still, if one is available, for maximum deflection on an output meter. Adjust the antenna tuned circuit adjustment screw (located near the type 47 tube on the top plate of the turret condenser) for maximum volume or for maximum deflection on an output meter. Then, without changing the position of the tuning knob, adjust the first detector adjustment screw—located adjacent to the A. C. switch—for maximum volume or maximum deflection on an output meter. Before tightening the lock unit on each adjustment screw, go over the adjustments a second time to secure the greatest possible accuracy. A drop of ambroid glue or collodian should be placed on each adjustment screw after the lock nut has been tightened to prevent handling and speaker vibrations from changing the adjustment.

In most cases it will be unnecessary to touch the oscillator adjustment screw (located between the antenna and first detector adjustment screws.) If this adjustment is necessary it is recommended that the intermediate frequency transformer circuits be tuned first (see following paragraph). Then tune oscillator circuit, employing same method as explained above for antenna tuned circuit and first detector circuit. In the event any circuit does not tune properly, check the circuit thoroughly for open and short circuits. If the trouble cannot be located, the coil should be replaced with a new one.

METHOD OF ALIGNING I.F. TRANSFORMERS

In the event the receiver is still insensitive and lacks proper selectivity after making the foregoing adjustments, the intermediate frequency transformers should be adjusted by one of the following methods:

1. Tuning Intermediate Transformers with 175 K.C. Oscillator

By far the best method of aligning the tuned circuits in the intermediate frequency transformers is to employ a 175 K.C. oscillator and output meter. In making this test, remove the oscillator tube and connect the output of the oscillator to the grid cap of the first detector. Usually it will not be necessary to remove the grid cap from the tube, this depending on the strength of the oscillator and the amount the I.F. transformers are out of line. Connect the output meter across the primary of the output transformer located on the speaker (terminals 3 and 7 counting from left to right). The four I.F. adjustment screws on the I.F. transformers, located inside the chassis, should be adjusted with a non-metallic screw driver for maximum deflection on the output meter. Go over all four adjustments a second time to secure maximum accuracy.

2. Tuning Intermediate Transformers without 175 K.C. Oscillator

In the event a 175 K.C. oscillator is not available a fairly close adjustment may be made by tuning in a faint broadcast signal, and with the volume control turned on full, adjust the transformers for maximum volume with a non-metallic screw driver. After adjusting the I.F. transformers, the R.F. circuits should be realigned as explained before.

BRUNSWICK RADIO CORPORATION

**MODEL 11,12,
16,18,33
AVC Chassis D.**

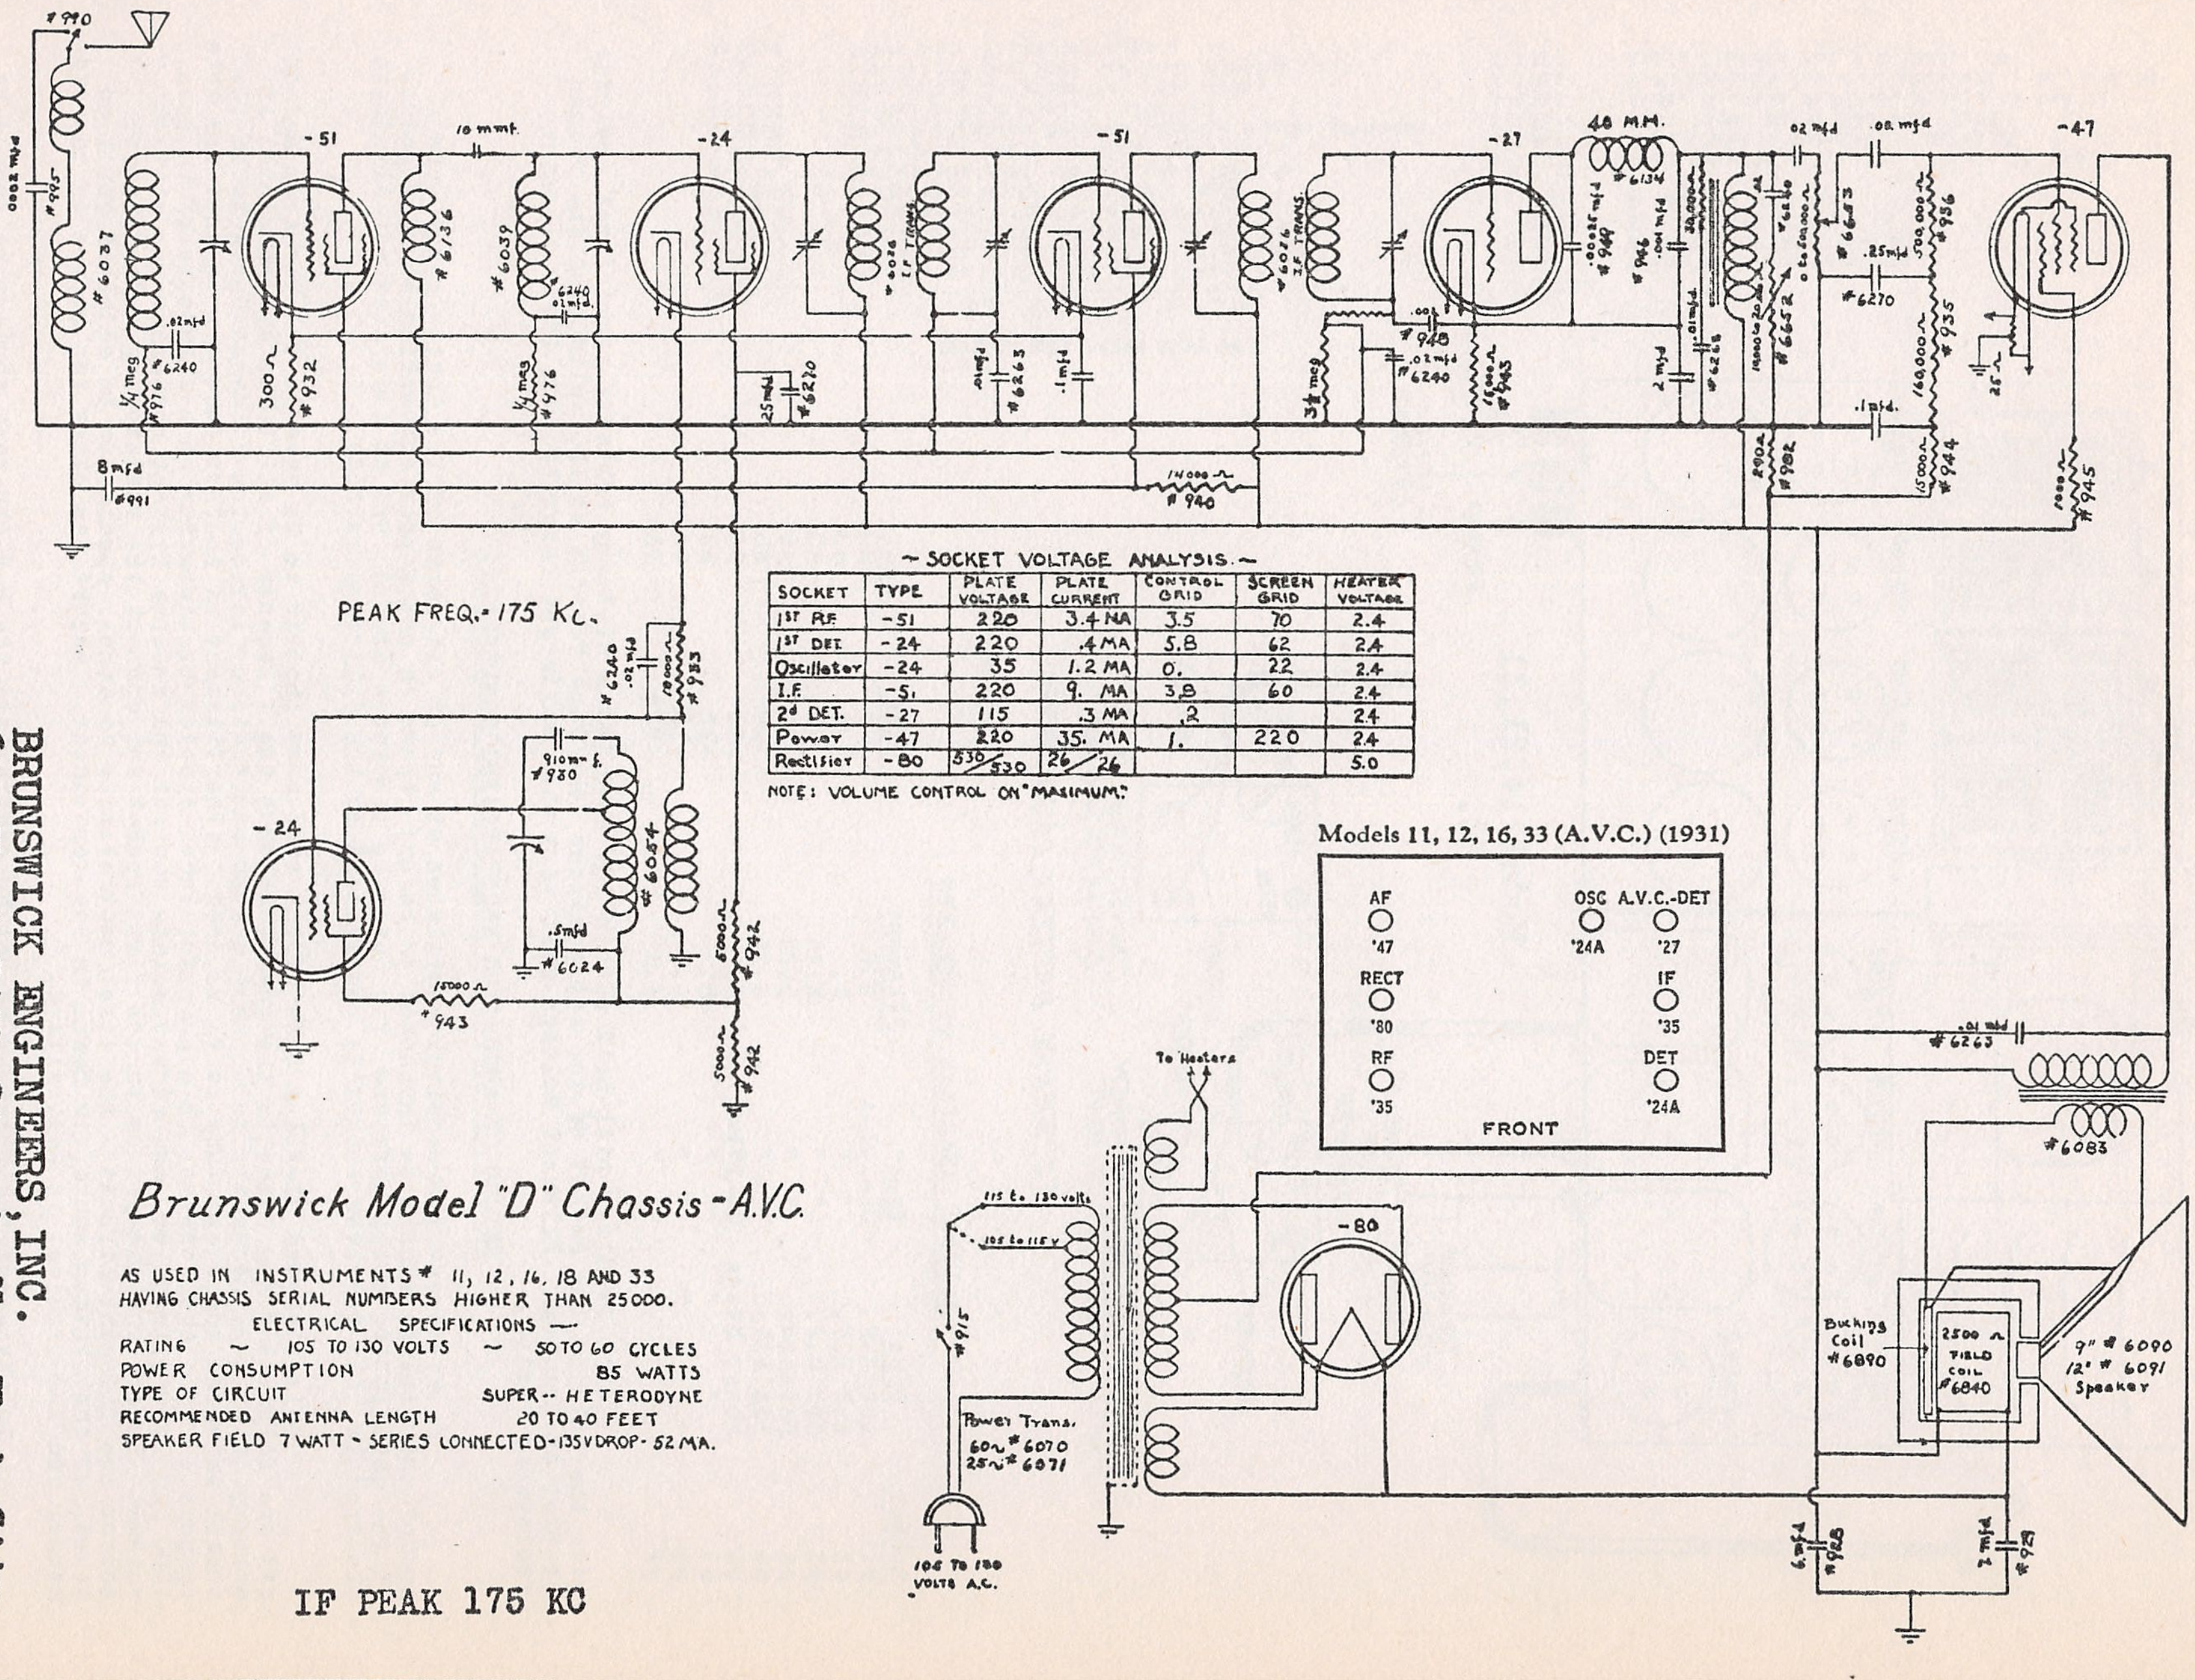
#990
#995
.0002 mfd
#6037
.02 mfd
#6240
1/4 meg
#976
-51
300 Ω
#932
10 mmf.
#6136
#6039
6240
.02 mfd.
1/4 meg
#476
-24
.25 mfd
#6220
#6026
I.F. TRANS.
.01 mfd
#6263
.1 mfd
-51
14000 Ω
#940
8 mfd
#991
3 1/2 meg
.001
#948
.02 mfd
#6240
15000 Ω
#943
-27
48 M.H.
#6134
.00025 mfd
#949
#946
.001 mfd
2 mfd
.01 mfd
#6263
30,000 Ω
10000 to 20000 Ω
#6652
0 to 500,000 Ω
#6653
.02 mfd
.02 mfd
.25 mfd
#6270
500,000 Ω
#956
160,000 Ω
#935
.1 mfd.
15000 Ω
#944
290 Ω
#982
-47
25 Ω
1000 Ω
#945
-24
910 mmf.
#930
#6054
.5 mfd
#6024
15000 Ω
#943
10000 Ω
#933
.02 mfd
#6240
5000 Ω
#942
5000 Ω
#942
To Heaters
115 to 130 volts
105 to 115 V
#915
Power Trans.
60~ #6070
25~ #6071
104 TO 130 VOLTS A.C.
-80
.01 mfd
#6263
#6083
Bucking Coil
#6890
2500 Ω
FIELD COIL
#6840
9" #6090
12" #6091
Speaker
6 mfd
#928
2 mfd
#929
Models 11, 12, 16, 33 (A.V.C.) (1931)
AF
'47
RECT
'80
RF
'35
OSC
'24A
A.V.C.-DET
'27
IF
'35
DET
'24A
FRONT

PEAK FREQ.- 175 KC.

~ SOCKET VOLTAGE ANALYSIS. ~

SOCKET	TYPE	PLATE VOLTAGE	PLATE CURRENT	CONTROL GRID	SCREEN GRID	HEATER VOLTAGE
1ST R.F.	-51	220	3.4 MA	3.5	70	2.4
1ST DET.	-24	220	.4 MA	5.8	62	2.4
Oscillator	-24	35	1.2 MA	0.	22	2.4
I.F.	-51	220	9. MA	3.8	60	2.4
2d DET.	-27	115	.3 MA	.2		2.4
Power	-47	220	35. MA	1.	220	2.4
Rectifier	-80	530/530	26/26			5.0

NOTE: VOLUME CONTROL ON "MAXIMUM."

Brunswick Model "D" Chassis - A.V.C.

AS USED IN INSTRUMENTS # 11, 12, 16, 18 AND 33
HAVING CHASSIS SERIAL NUMBERS HIGHER THAN 25000.

ELECTRICAL SPECIFICATIONS —

RATING ~ 105 TO 130 VOLTS ~	50 TO 60 CYCLES
POWER CONSUMPTION	85 WATTS
TYPE OF CIRCUIT	SUPER-- HETERODYNE
RECOMMENDED ANTENNA LENGTH	20 TO 40 FEET

SPEAKER FIELD 7 WATT - SERIES CONNECTED - 135V DROP - 52 MA.

IF PEAK 175 KC

BRUNSWICK ENGINEERS, INC.
619 West 54th Street, New York City.

MODEL 14,21,31 DC
Socket and Voltage Data and Notes

BRUNSWICK RADIO CORPORATION

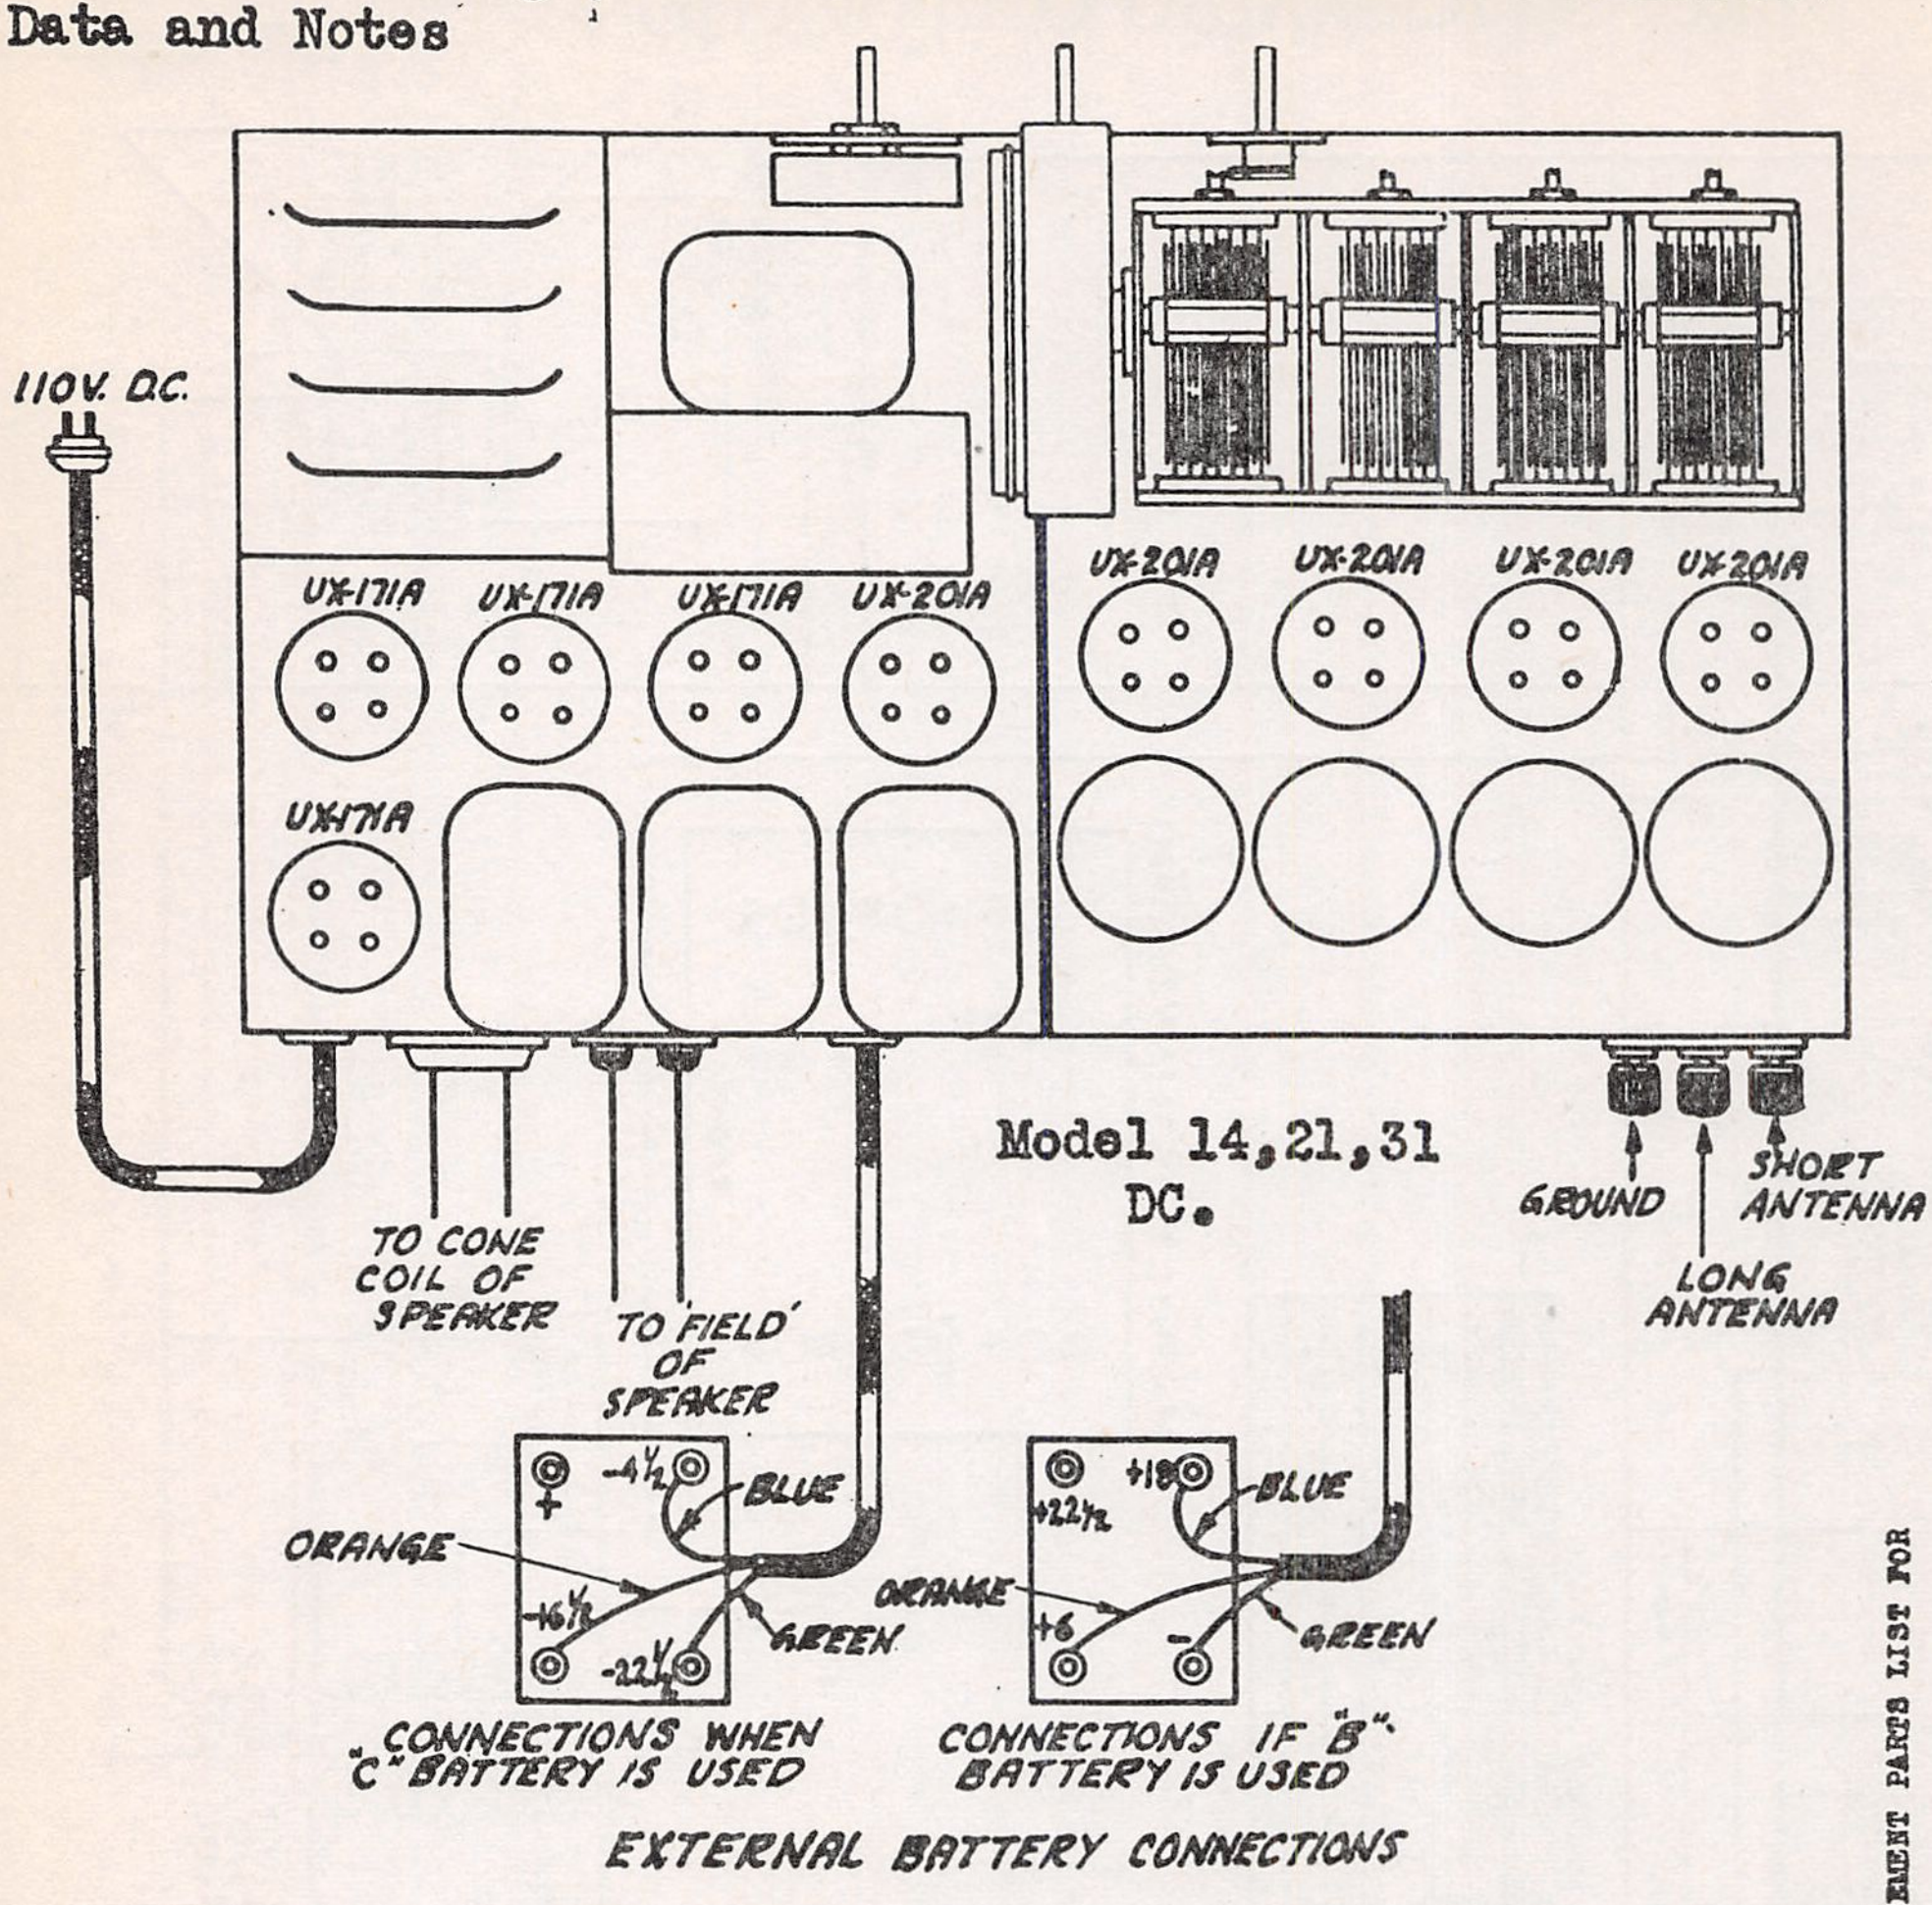

REPLACEMENT PARTS LIST FOR

D.C. MODELS 14. 21. & 31

PART No.	
X-1301	Resistance Unit, 200 ohms (Large Brown)
X-1302	Resistance Unit, 220 ohms (Large Brown)
X-1303	Resistance Unit, 500 ohms (Large Brown)
X-1304	Resistance Unit, 120 ohms (Purple)
X-1305	Resistance Unit, 200 ohms (Grey)
X-673	Resistance Unit, 35,000 ohms (Yellow)
X-1307	Resistance Unit, 40 ohms (Wire Wound)
X-1308	Double Filament By-Pass Cond. - 5 mfd. (W-6428)
X-1309	Series Ground Cond. - .002 mfd.
X-1311	Insulating Bushings for Vol. Cont.
X-1312	Insulating Bushings for Gnd. Binding Post.
X-1313	Heavy Duty Filament Choke

PART No.	
X-1314	Choke Mounting Brackets
X-1315	5" Bolt for Mtg. Resistor
X-1316	R.F. Socket Strip
X-1130	6 Volt Pilot Light
X-1300	D.C. Chassis Complete - Models 14 and 21
X-1310	D.C. Chassis Complete - Model 31
X-1317	D.C. Phono Motor (Gordon Type)
X-1318	Audio Chassis for D.C. Models 14 and 21,
X-1319	R.F. Chassis for D.C. Models 14, 21, and 31
X-1320	Audio Chassis for D.C. Model 31

VOLTAGE READINGS AT SOCKETS

Socket	Tube	Type	Filament	Grid	Plate
#1	1st R.F.	UX-201-A	5.5	-9	80
#2	2nd R.F.	" "	5.	-9	80
#3	3rd R.F.	" "	5.25	-5	80
#4	Detector	" "	5.25	0	32
#5	1st Audio	" "	5.75	-9	88
#6	Power Stage	UX-171-A	5.	-24	96
#7	" "	" "	5.	-15	88
#8	" "	" "	4.3	-15	92
#9	" "	" "	4.3	-22½	96

These readings will hold within 10% when taken with any reliable make of set analyzer with the tube in the socket of the set analyzer, the line voltage at 120 volts, and the volume control on maximum. Filament voltage will vary with different tubes because their filament resistance varies.

METHOD OF ADJUSTING NEUTRALIZING CONDENSERS.

In the event the receiver oscillates at any or all parts of the tuning range, the ground and antenna should be inspected to be sure there is not a poor connection at some point. If the oscillation still persists, try changing the tubes around, and if this does not eliminate the trouble, the receiver should be neutralized by the following method:

Select a good UX-201-A tube of the same make that is to be used in the receiver and cut off one filament prong close to the base. Because the filaments of all tubes are connected in series, it will be necessary to connect a 1.25 ohm resistor across the filament contacts of the socket in which the dummy tube is to be used. (The filament of another tube may be used for this purpose.) Tune the receiver to a powerful local station broadcasting on a frequency of between 1000 and 1500 kilocycles, and adjust volume control and antenna trimmer condenser for maximum volume. Insert the dummy tube in the first socket and connect the resistor or tube filament across the filament circuit - the first neutralizing condenser should now be adjusted until no sound, or the minimum sound, is heard in the reproducer. Adjust the other two stages in the same manner and the receiver is neutralized.

In the event the receiver cannot be neutralized the R.F. by-pass condensers should be tested for open circuits and a different dummy tube should be tried.

MODEL 14,21,31 DC
Schematic

BRUNSWICK RADIO CORPORATION

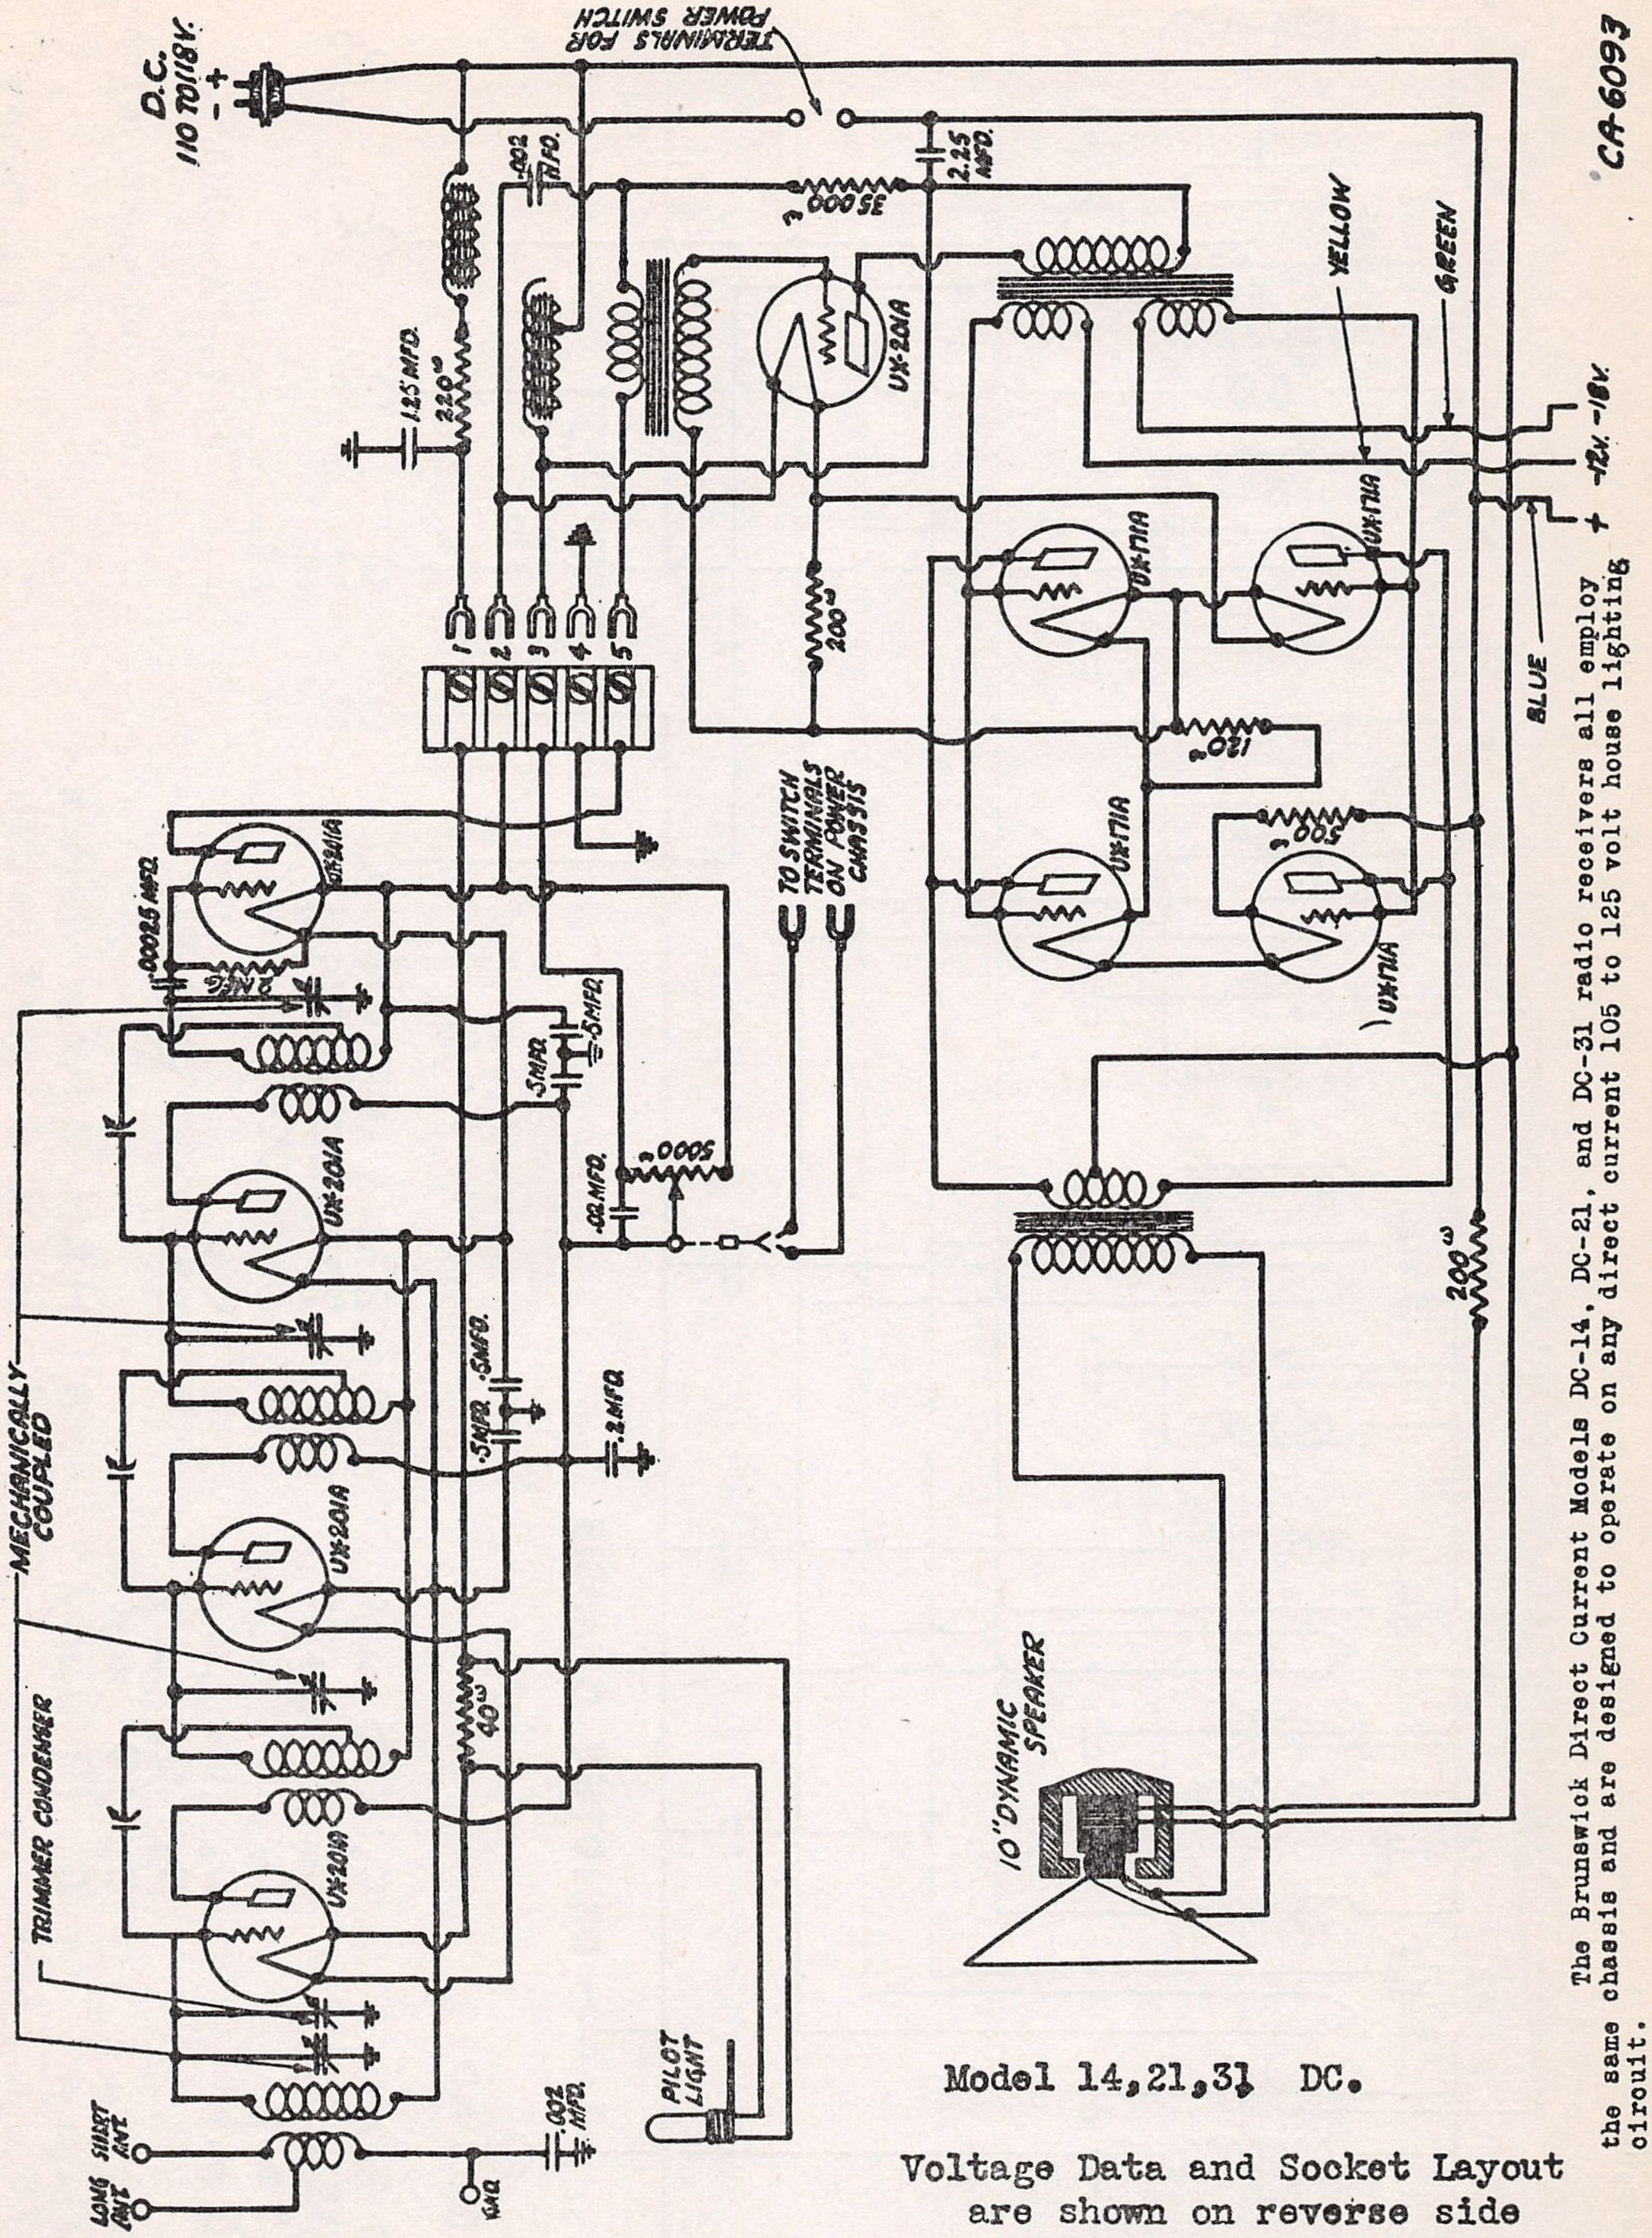
D.C. 110 TO 118 V.
- +
TERMINALS FOR POWER SWITCH
CA-6093
.002 MFD.
3500 Ω
2.25 MFD.
1.25 MFD.
220 Ω
UX-201A
YELLOW
GREEN
-12V. -18V.
+
BLUE
UX-171A
UX-171A
UX-171A
UX-171A
200 Ω
120 Ω
500 Ω
1 2 3 4 5
TO SWITCH TERMINALS ON POWER CHASSIS
UX-201A
.00025 MFD.
2 MEG.
.5 MFD.
.5 MFD.
.5 MFD.
.02 MFD.
.0005
UX-201A
.5 MFD.
.5 MFD.
.5 MFD.
.2 MFD.
MECHANICALLY COUPLED
UX-201A
40 Ω
TRIMMER CONDENSER
UX-201A
200 Ω
10" DYNAMIC SPEAKER
PILOT LIGHT
SHORT ANT.
LONG ANT.
GND.
.002 MFD.

The Brunswick Direct Current Models DC-14, DC-21, and DC-31 radio receivers all employ the same chassis and are designed to operate on any direct current 105 to 125 volt house lighting circuit.

Model 14,21,31 DC.

Voltage Data and Socket Layout are shown on reverse side of this page.

MODEL 15-B
Schematic

BRUNSWICK RADIO CORP.

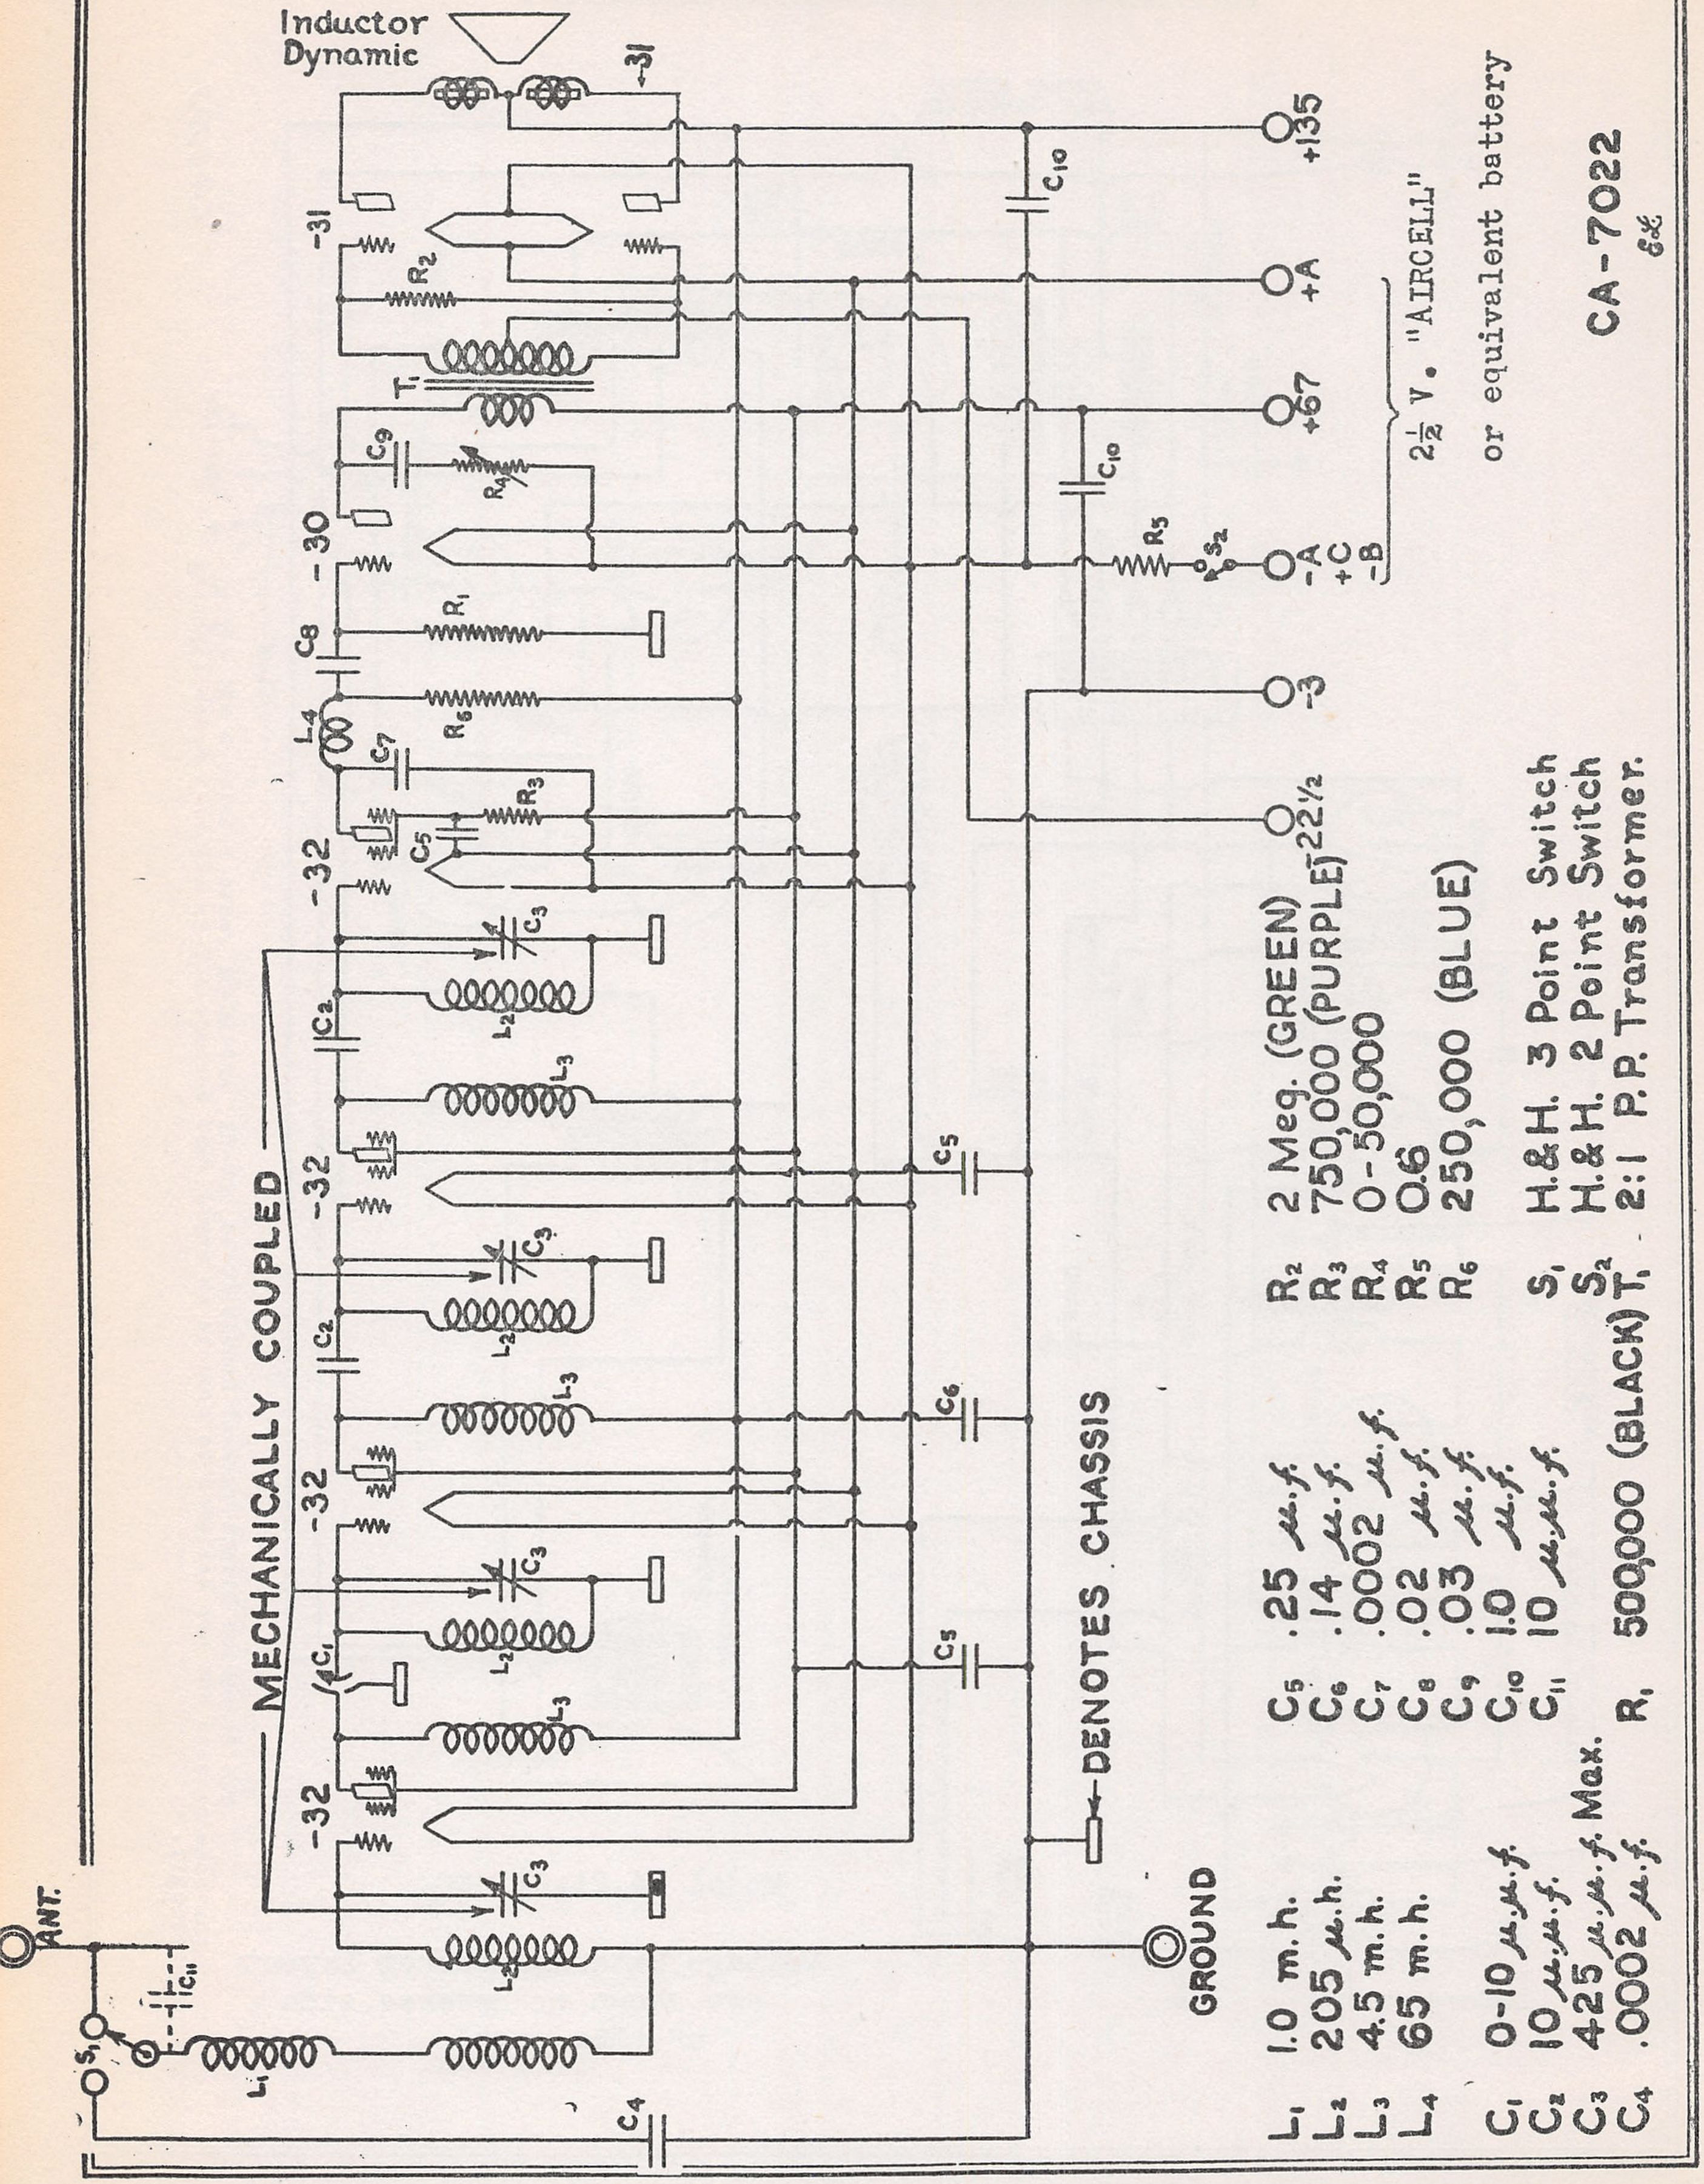
Inductor Dynamic
-31
-31
-30
-32
-32
-32
-32
MECHANICALLY COUPLED
DENOTES CHASSIS
ANT.
GROUND
S₁
S₂
L₁
L₂
L₃
L₄
C₁
C₂
C₃
C₄
C₅
C₆
C₇
C₈
C₉
C₁₀
C₁₁
R₁
R₂
R₃
R₄
R₅
R₆
T₁
+135
+A
+67
-A
+C
-B
-3
22½

2½ V. "AIRCELL" or equivalent battery

L₁	1.0 m.h.
L₂	205 µ.h.
L₃	4.5 m.h.
L₄	65 m.h.
C₁	0-10 µµ.f.
C₂	10 µµ.f.
C₃	425 µµ.f. Max.
C₄	.0002 µ.f.
C₅	.25 µ.f.
C₆	.14 µ.f.
C₇	.0002 µ.f.
C₈	.02 µ.f.
C₉	.03 µ.f.
C₁₀	1.0 µ.f.
C₁₁	10 µµ.f.
R₁	500,000 (BLACK)
R₂	2 Meg. (GREEN)
R₃	750,000 (PURPLE)
R₄	0-50,000
R₅	0.6
R₆	250,000 (BLUE)
S₁	H.&H. 3 Point Switch
S₂	H.&H. 2 Point Switch
T₁	2:1 P.P. Transformer.

CA-7022

MODEL 15-B Voltage and Socket Layout

BRUNSWICK RADIO CORP.

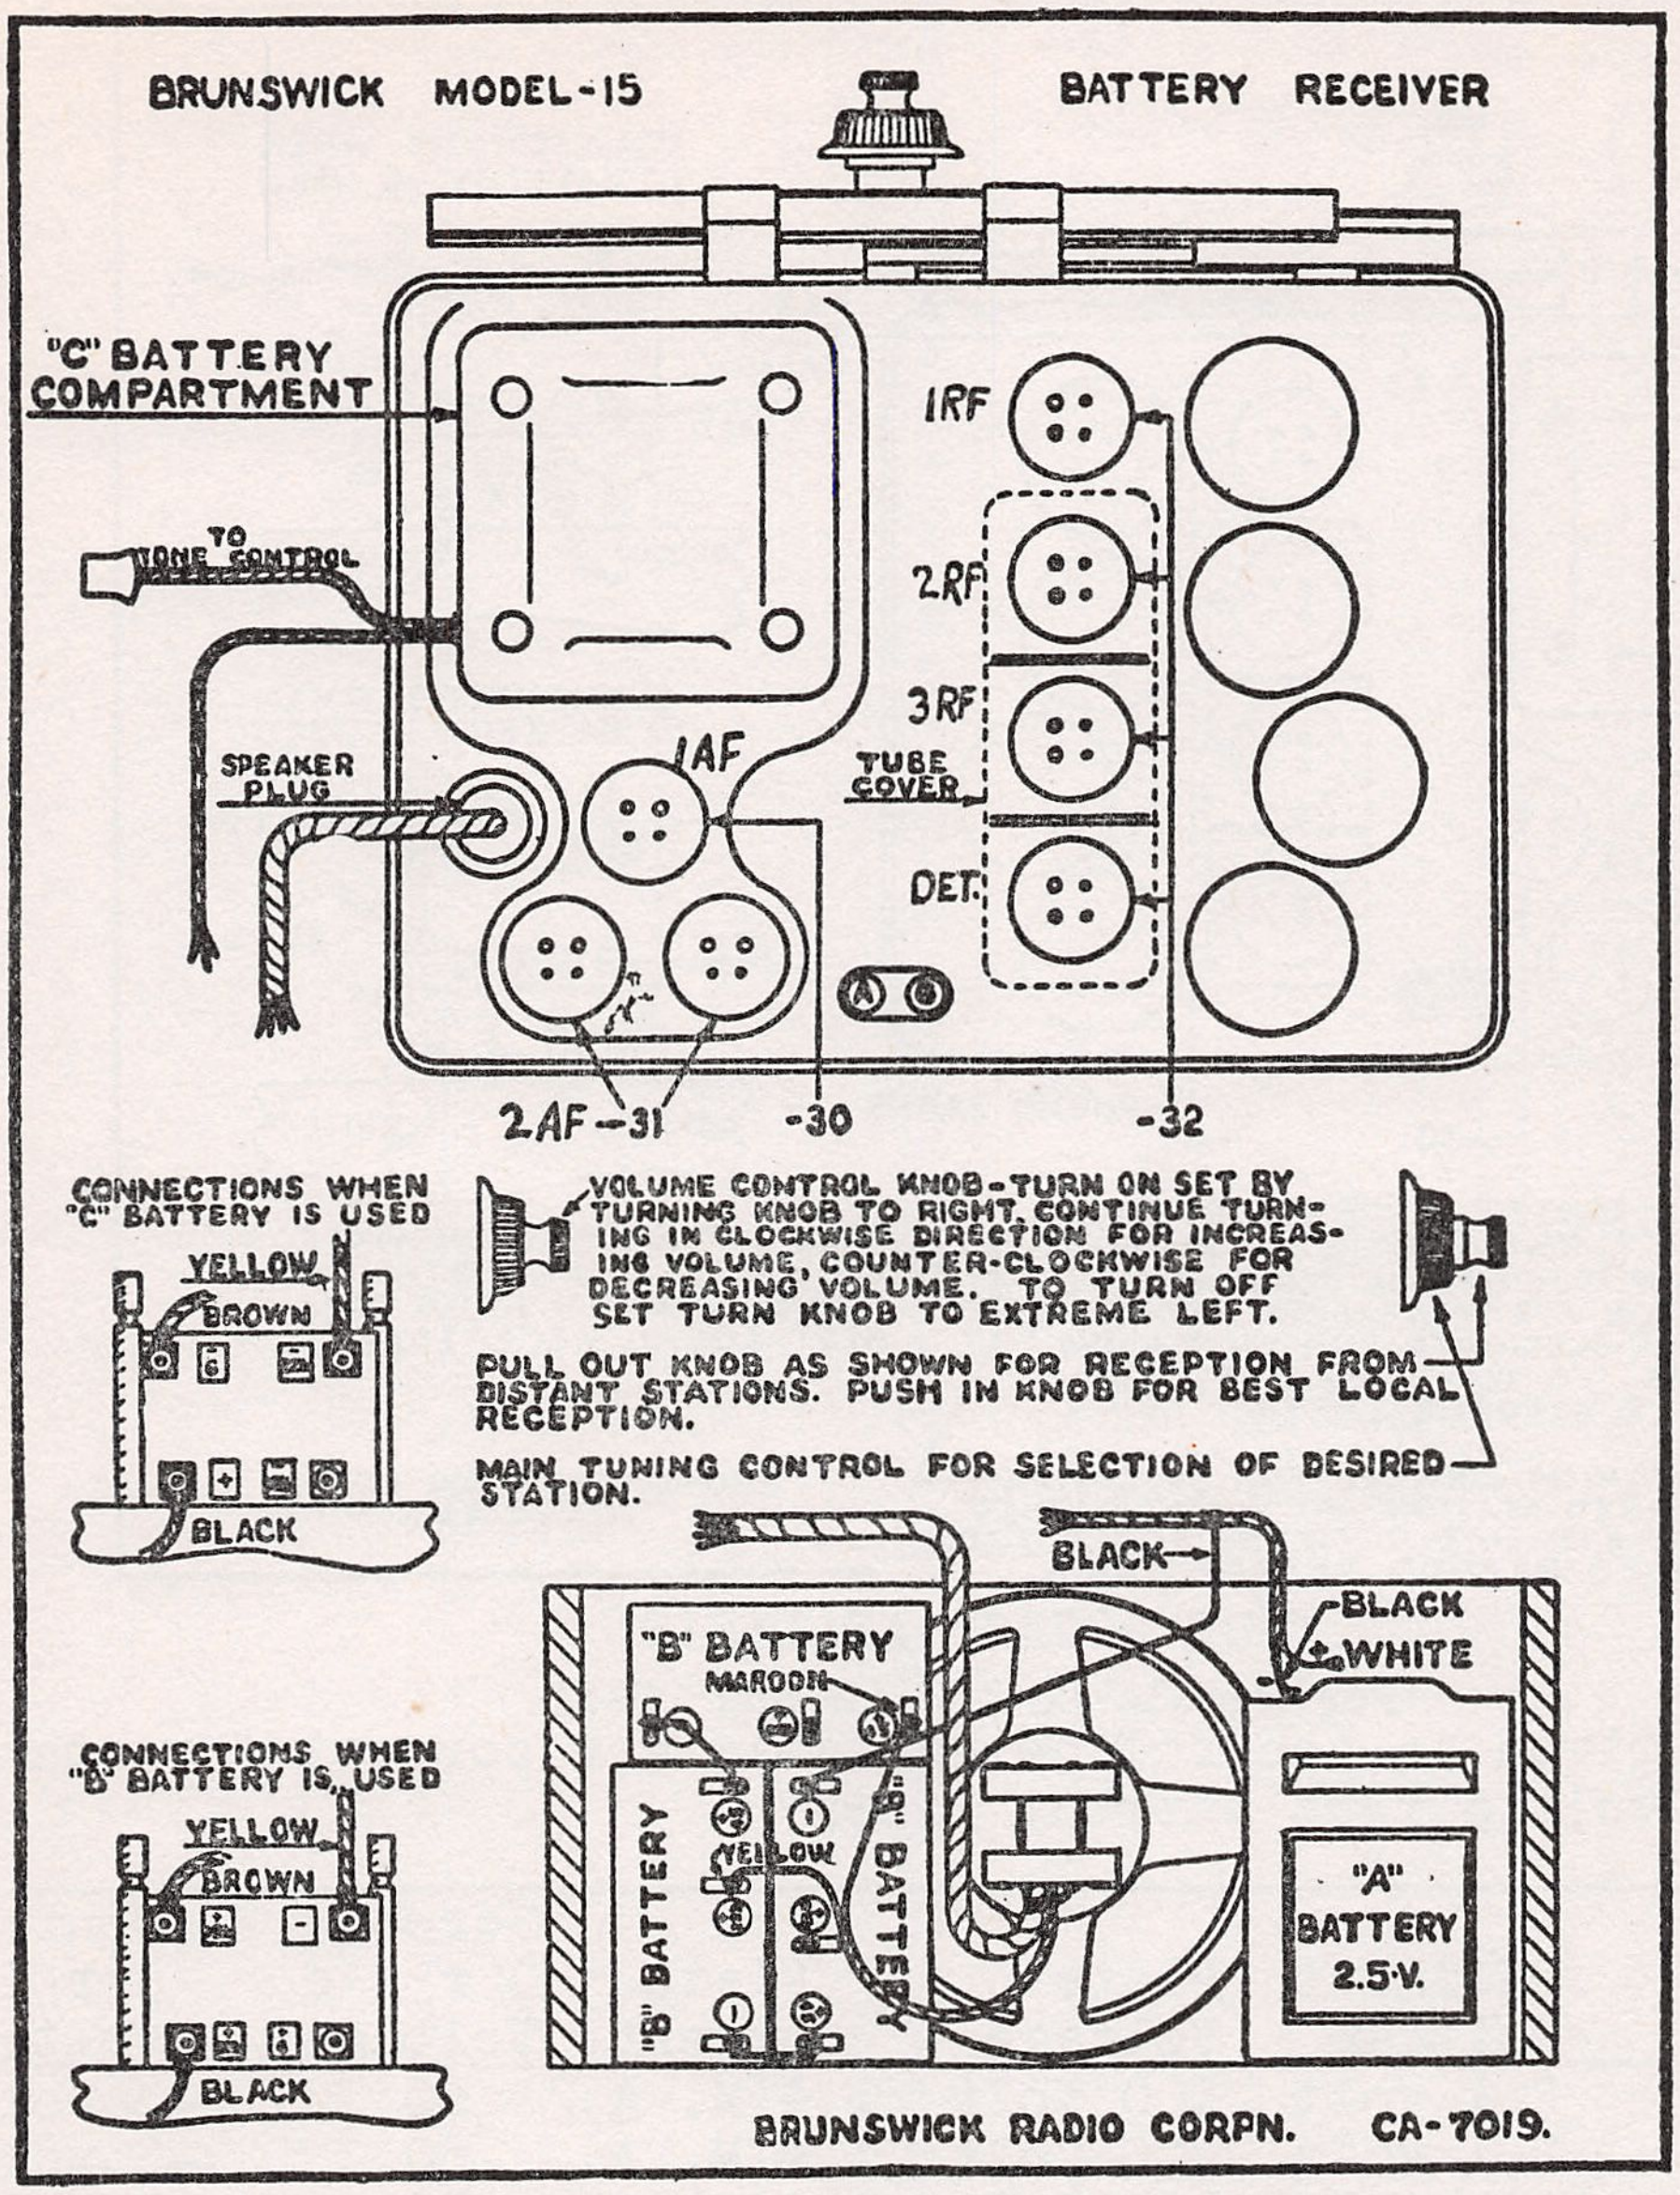
BRUNSWICK MODEL-15 BATTERY RECEIVER
"C" BATTERY COMPARTMENT
TO TONE CONTROL
SPEAKER PLUG
1RF
2RF
3RF
TUBE COVER
DET.
1AF
2AF-31
-30
-32
CONNECTIONS WHEN "C" BATTERY IS USED
YELLOW
BROWN
BLACK
VOLUME CONTROL KNOB-TURN ON SET BY TURNING KNOB TO RIGHT. CONTINUE TURNING IN CLOCKWISE DIRECTION FOR INCREASING VOLUME, COUNTER-CLOCKWISE FOR DECREASING VOLUME. TO TURN OFF SET TURN KNOB TO EXTREME LEFT.
PULL OUT KNOB AS SHOWN FOR RECEPTION FROM DISTANT STATIONS. PUSH IN KNOB FOR BEST LOCAL RECEPTION.
MAIN TUNING CONTROL FOR SELECTION OF DESIRED STATION.
BLACK
BLACK
WHITE
"B" BATTERY
MAROON
YELLOW
"B" BATTERY
"B" BATTERY
"A" BATTERY 2.5·V.
CONNECTIONS WHEN "B" BATTERY IS USED
YELLOW
BROWN
BLACK
BRUNSWICK RADIO CORPN. CA-7019.

Tube Position	Filament Voltage	Plate Voltage	Plate Current	Screen Grid Voltage	Control Grid Voltage
1st R. F.	2. volts	135 volts	1.1 M. A.	69 volts	-3 volt
2nd R. F.	2. "	135 "	1.1 M. A.	69 "	-3 "
3rd R. F.	2. "	135 "	1.1 M. A.	69 "	-3 "
Detector	2. "	67.5 " *	.03 M. A.	69 "	-3 "
1st Audio	2. "	67.5 "	2.4 M. A.	--	-3 "
Power amp.	2. "	135. "	6.2 M. A.	--	-22.5"
" "	2. "	135. "	6.2 M. A.	--	-22.5"

NOTE:

(*) Because of the large resistance in the plate and screen grid circuit of this tube, the voltage reading on most analyzers will be in the neighborhood of 5. volts.

MODEL 15, 22, 32 DC
Socket and Voltage
Data
Used in Model 42 DC

BRUNSWICK RADIO CORP.

MODEL DC - 32

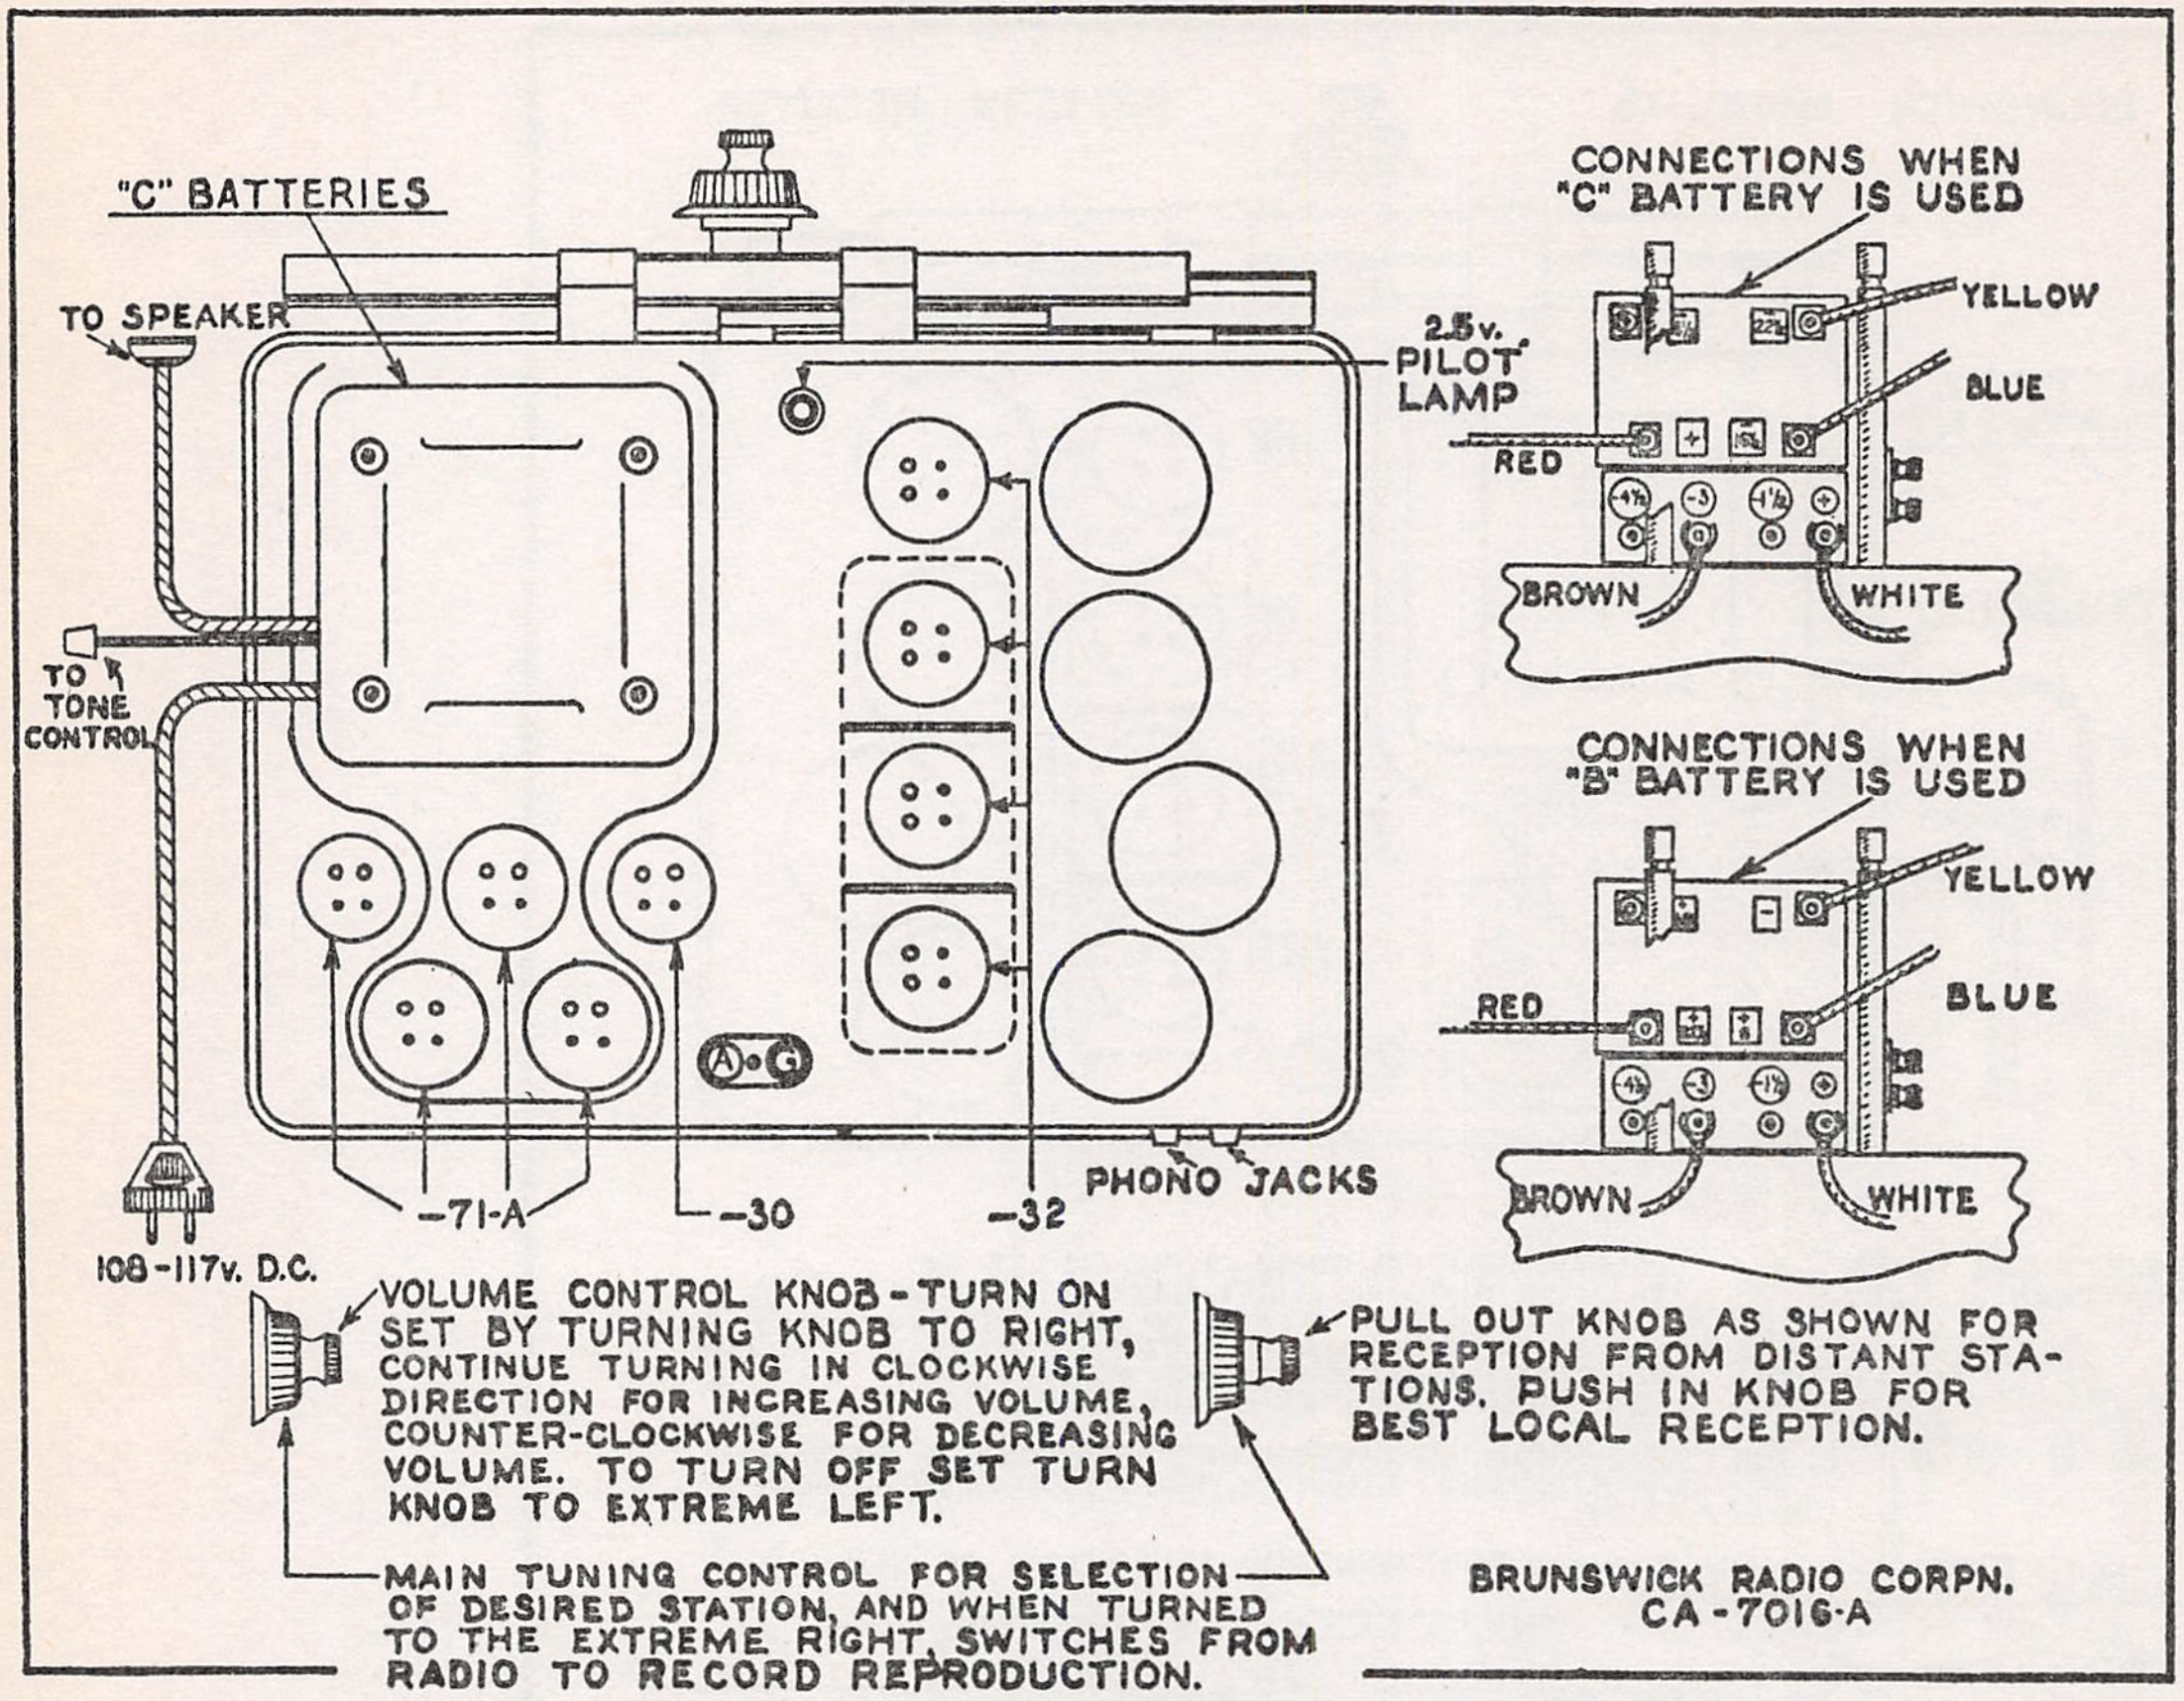
"C" BATTERIES
TO SPEAKER
TO TONE CONTROL
108-117v. D.C.
-71-A
-30
-32
PHONO JACKS
2.5v. PILOT LAMP
CONNECTIONS WHEN "C" BATTERY IS USED
YELLOW
BLUE
RED
BROWN
WHITE
CONNECTIONS WHEN "B" BATTERY IS USED
YELLOW
BLUE
RED
BROWN
WHITE
VOLUME CONTROL KNOB-TURN ON SET BY TURNING KNOB TO RIGHT, CONTINUE TURNING IN CLOCKWISE DIRECTION FOR INCREASING VOLUME, COUNTER-CLOCKWISE FOR DECREASING VOLUME. TO TURN OFF SET TURN KNOB TO EXTREME LEFT.
PULL OUT KNOB AS SHOWN FOR RECEPTION FROM DISTANT STATIONS. PUSH IN KNOB FOR BEST LOCAL RECEPTION.
MAIN TUNING CONTROL FOR SELECTION OF DESIRED STATION, AND WHEN TURNED TO THE EXTREME RIGHT, SWITCHES FROM RADIO TO RECORD REPRODUCTION.
BRUNSWICK RADIO CORPN.
CA-7016-A

TUBE SOCKET ANALYSIS

For Models DC-15, 22 and DC-32

The values given in the following table are correct for standard analyzers on 118-volt direct current lines:

Tube Position	Filament Voltage	Plate Voltage	Plate Current	Screen Grid Voltage	Control Grid Voltage
1st R. F.	2.1 volt	100 Volt	1.4 M. A.	50	-3 volts
2nd R. F.	2.1 volt	100 Volt	1.4 M. A.	50	-3 volts
3rd R. F.	2.1 volt	100 volt	1.4 M. A.	50	-3 volts
Detector	2.1 volt	23 volt	.2 M. A.	50*	-5 volts*
1st Audio	2.1 volt	62 volt	2. M. A.	--	-3 volts**
Pwr. rear right	5.2 volt	112 volt	13. M. A.	--	17. volts
" rear left	5.2 volt	110 volt	14. M. A.	--	22. volts
" front right	5.1 volt	111 volt	11. M. A.	--	22. volts
" front left	5.1 volt	110 volt	11. M. A.	--	17.5 volts

NOTE: (*) Because of the high resistance in this circuit a much lower reading will be obtained on most analyzers.

(**) A potentiometer, located on the under side of the audio panel, varies this grid-bias and should be adjusted to give the above voltage.

MODEL 15, 22, 32 DC
Schematic
Used in Model 42 DC

BRUNSWICK RADIO CORP.

Models DC-15, DC-22 and
Radio With Panatrope Model DC-32

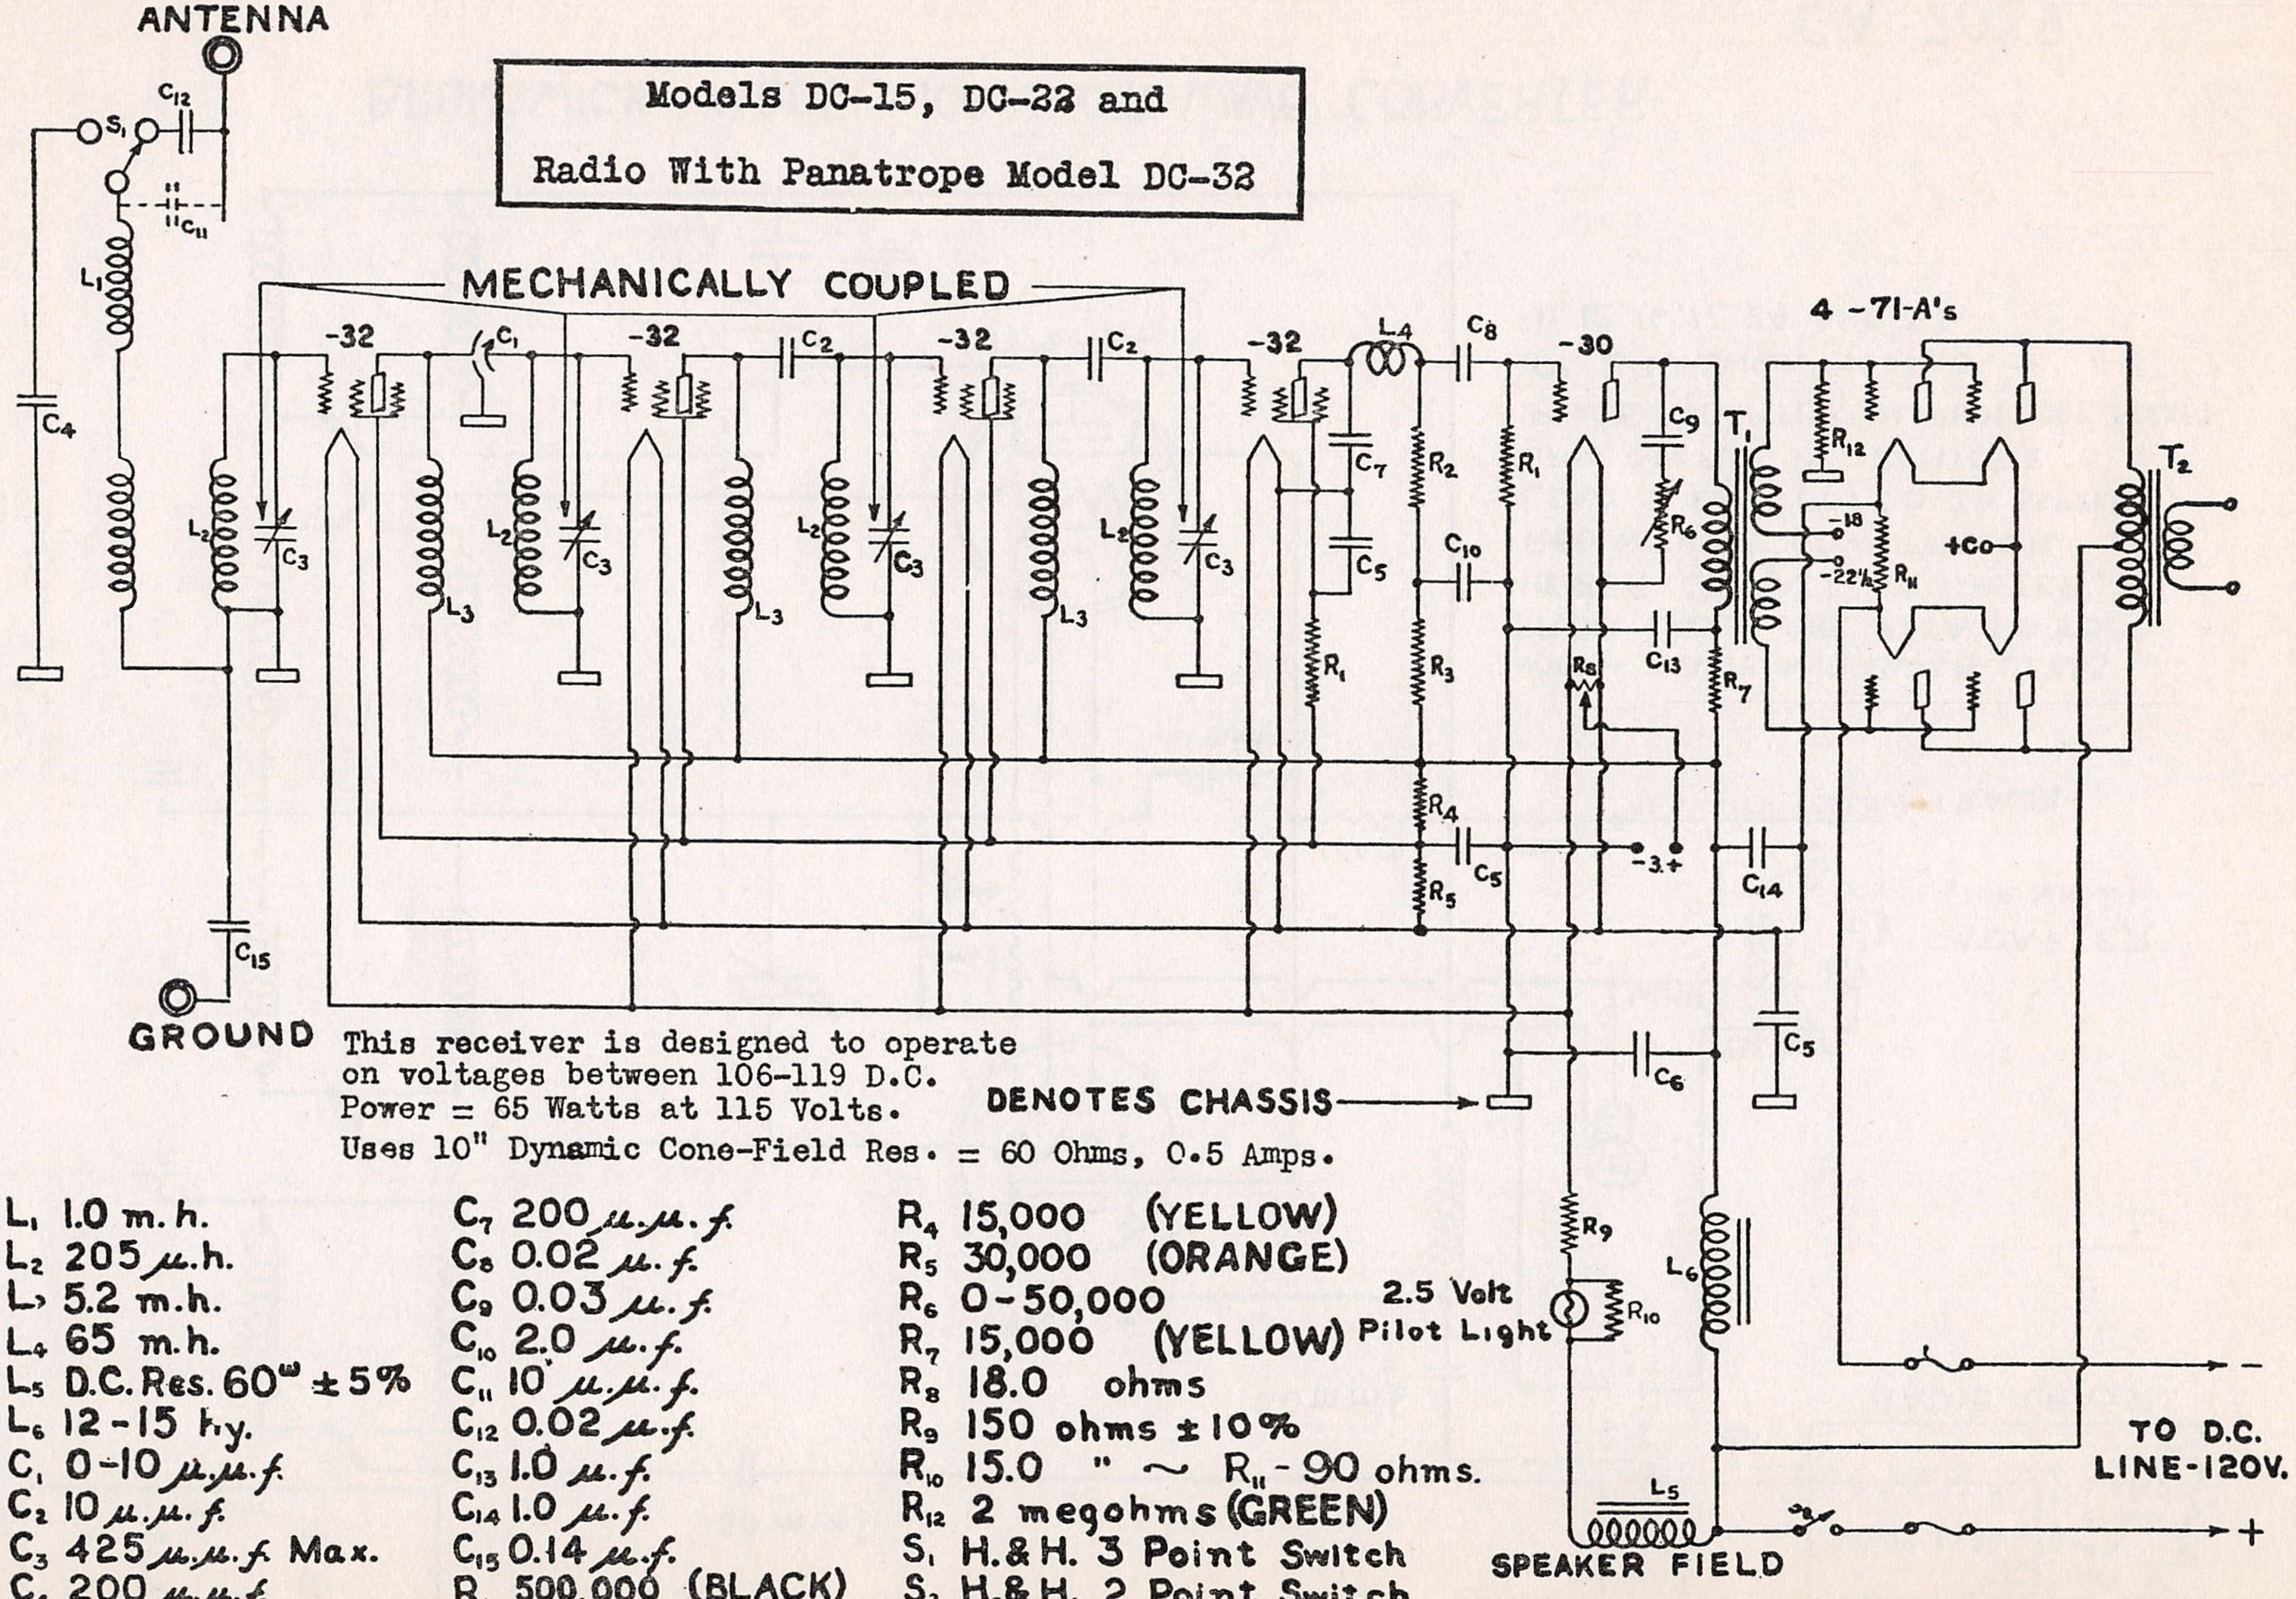
ANTENNA
C12
S1
C11
L1
C4
MECHANICALLY COUPLED
-32
C1
C2
L2
C3
L3
-32
-32
-32
L4
C8
-30
C7
C5
R2
R1
C10
R3
R4
R5
C9
R6
T1
R8
C13
R7
4 -71-A's
R12
-18
-22½
R11
+Co
T2
-3.+
C14
C5
C6
GROUND
C15
DENOTES CHASSIS
R9
R10
2.5 Volt
Pilot Light
L6
L5
SPEAKER FIELD
TO D.C.
LINE-120V.
-
+

This receiver is designed to operate on voltages between 106-119 D.C.
Power = 65 Watts at 115 Volts.
Uses 10" Dynamic Cone-Field Res. = 60 Ohms, 0.5 Amps.

L_1	1.0 m.h.	C_7	200 μ.μ.f.	R_4	15,000 (YELLOW)
L_2	205 μ.h.	C_8	0.02 μ.f.	R_5	30,000 (ORANGE)
L_3	5.2 m.h.	C_9	0.03 μ.f.	R_6	0-50,000
L_4	65 m.h.	C_{10}	2.0 μ.f.	R_7	15,000 (YELLOW)
L_5	D.C. Res. 60ω ±5%	C_{11}	10 μ.μ.f.	R_8	18.0 ohms
L_6	12-15 h.y.	C_{12}	0.02 μ.f.	R_9	150 ohms ±10%
C_1	0-10 μ.μ.f.	C_{13}	1.0 μ.f.	R_{10}	15.0 " ~ R_{11} - 90 ohms.
C_2	10 μ.μ.f.	C_{14}	1.0 μ.f.	R_{12}	2 megohms (GREEN)
C_3	425 μ.μ.f. Max.	C_{15}	0.14 μ.f.	S_1	H.& H. 3 Point Switch
C_4	200 μ.μ.f.	R_1	500,000 (BLACK)	S_2	H.& H. 2 Point Switch
C_5	0.25 μ.f.	R_2	250,000 (BLUE)	T_1	2:1 P.P. Transformer
C_6	0.14 μ.f.	R_3	50,000 (RED)	T_2	60:1 Output "

BRUNSWICK RADIO CORPN.
CA-7023.

BRUNSWICK RADIO CORPORATION

MODEL 100
Short Wave
Converter

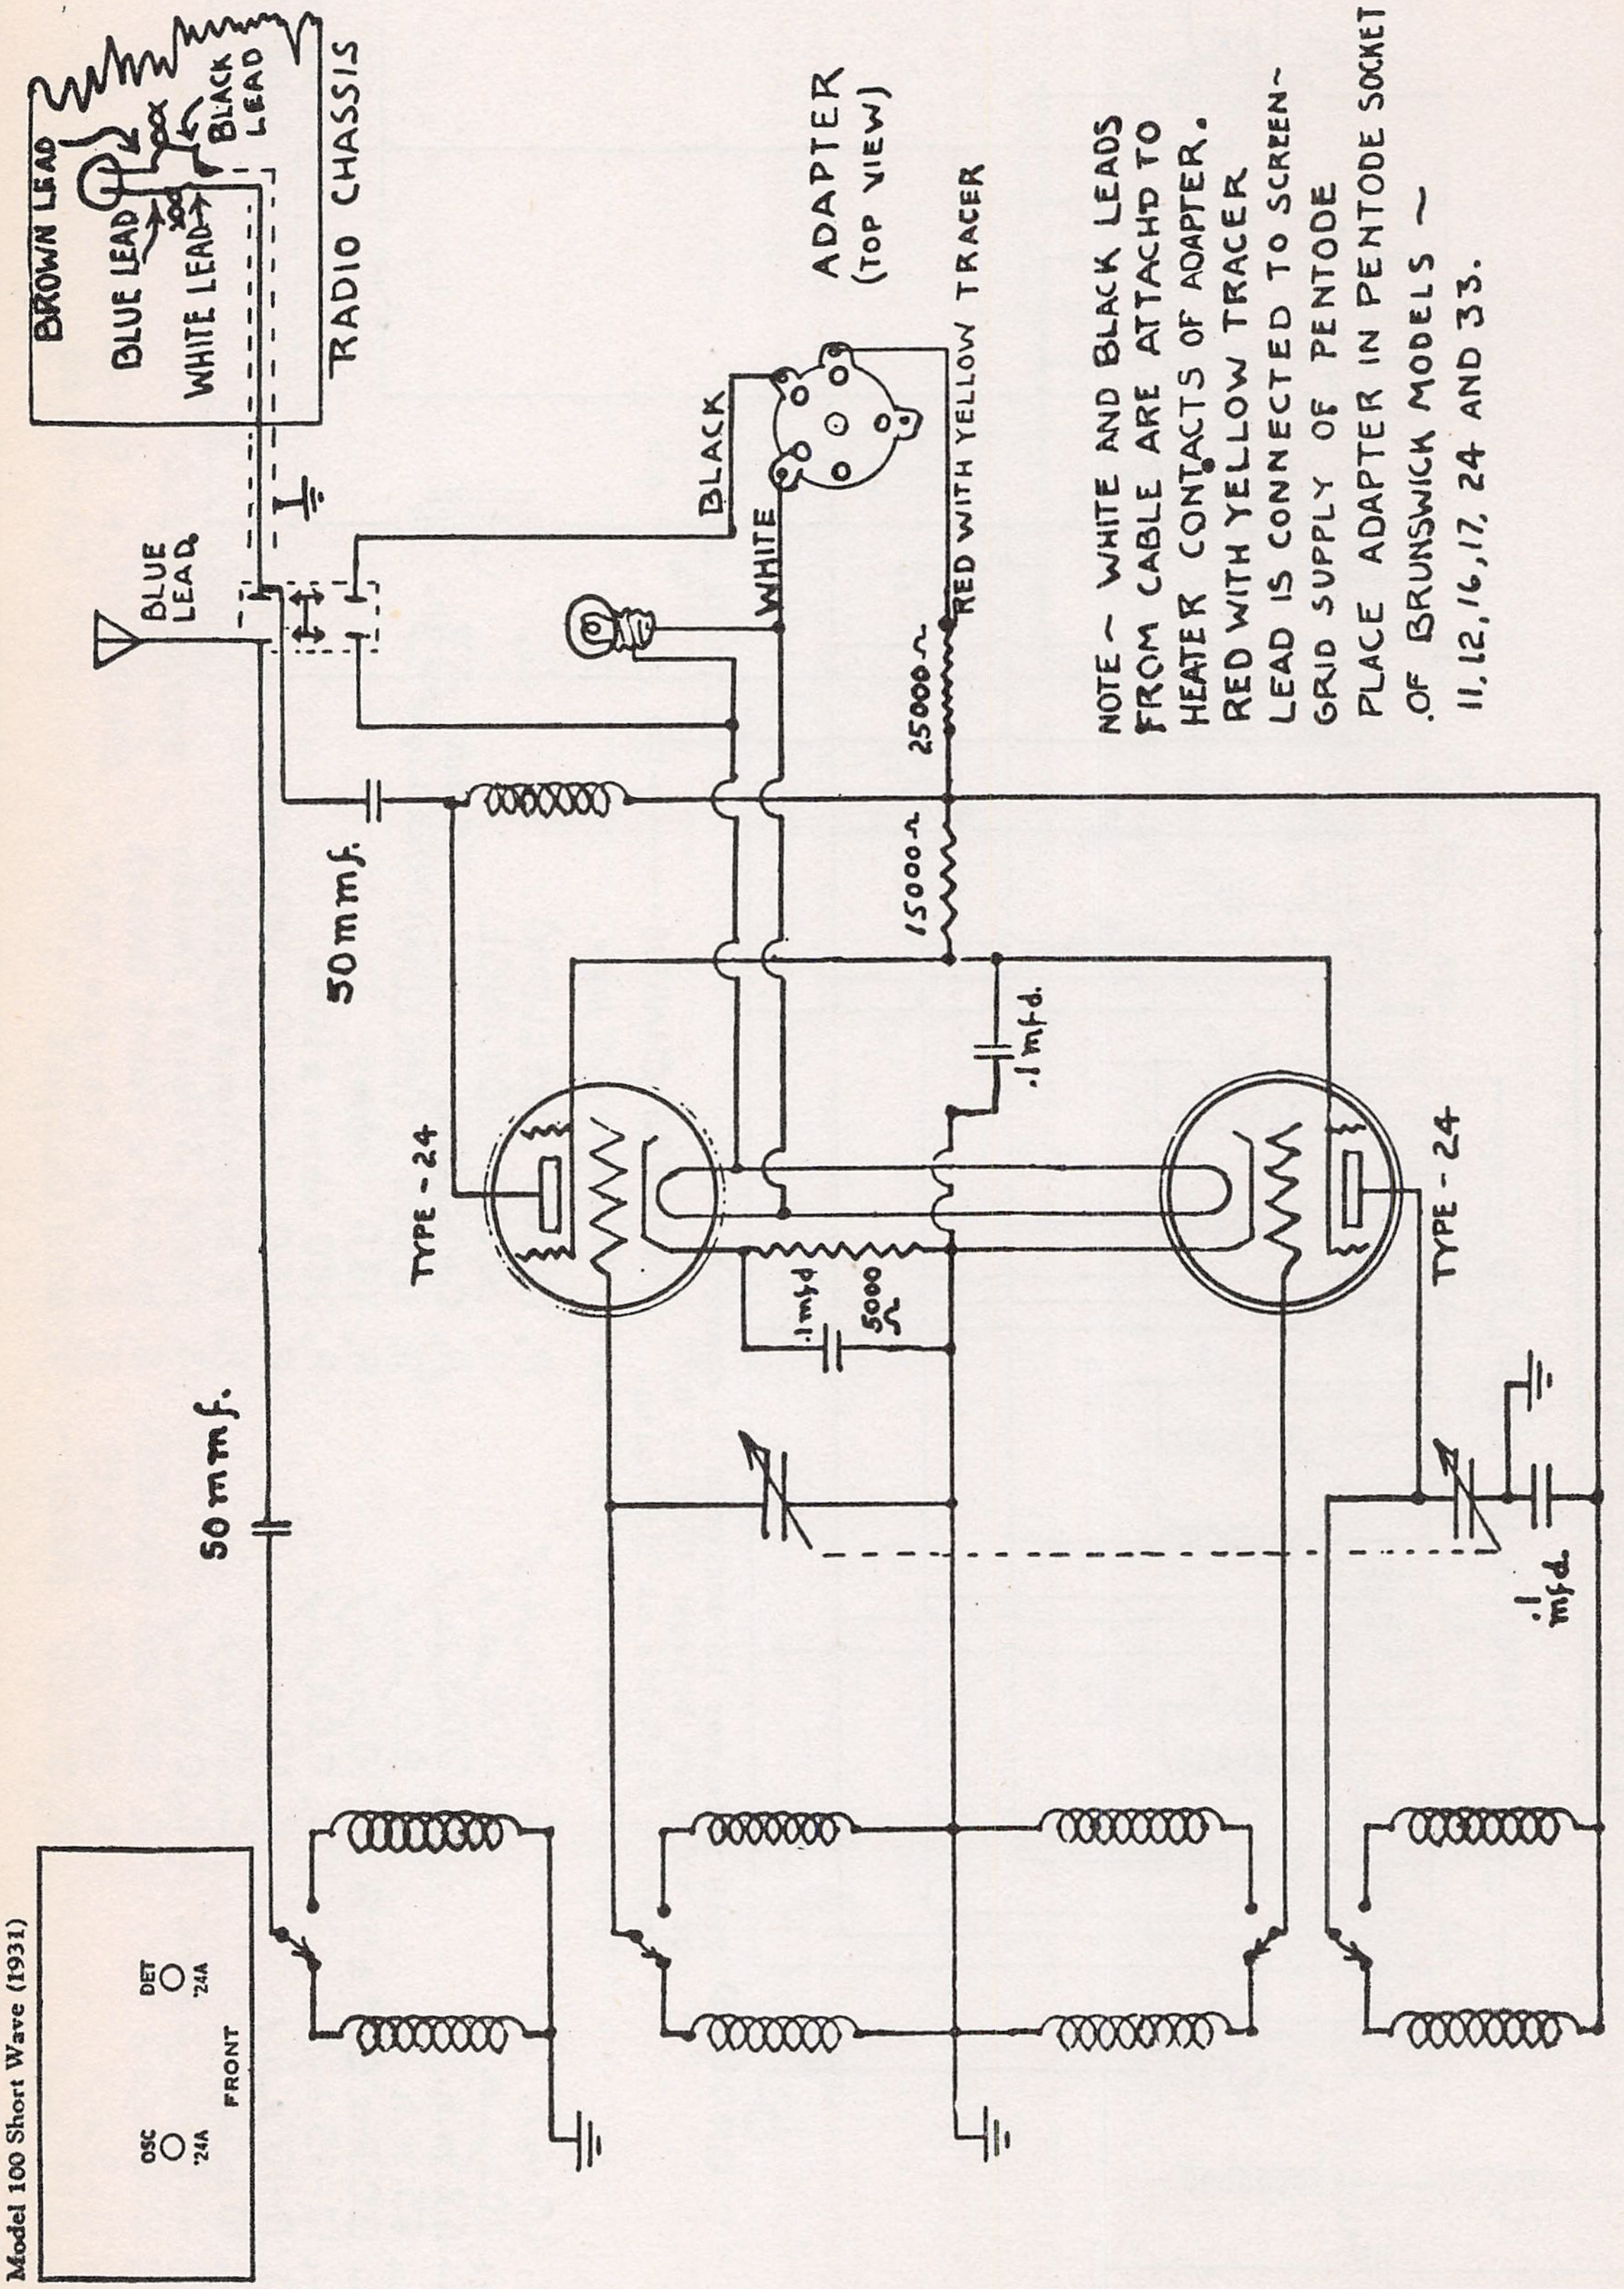
BROWN LEAD
BLUE LEAD
WHITE LEAD
BLACK LEAD
RADIO CHASSIS
BLUE LEAD
ADAPTER (TOP VIEW)
BLACK
WHITE
RED WITH YELLOW TRACER
25000 Ω
15000 Ω
50 mmf.
.1 mfd.
TYPE - 24
.1 mfd
5000 Ω
TYPE - 24
50 mmf.
.1 mfd.
OSC '24A
DET '24A
FRONT

Model 100 Short Wave (1931)

NOTE ~ WHITE AND BLACK LEADS FROM CABLE ARE ATTACHD TO HEATER CONTACTS OF ADAPTER. RED WITH YELLOW TRACER LEAD IS CONNECTED TO SCREEN-GRID SUPPLY OF PENTODE

PLACE ADAPTER IN PENTODE SOCKET OF BRUNSWICK MODELS ~ 11, 12, 16, 17, 24 AND 33.

BRUNSWICK MODEL~100 SHORT-WAVE CONVERTER

CA·7039

BRUNSWICK AUTOMATIC PANATROPE WITH RADIO

PART I

ELECTRICAL SPECIFICATIONS

MODEL 42

Rating	105 to 130 volts—60 cycles
Also available	105 to 130 volts—50 cycles 105 to 130 volts—25 cycles 105 to 125 volts—direct current
Power consumption of radio set—60 cycles	85 watts
Power consumption of Panatrope and Radio	110 watts
Type of circuit	Screen-grid tuned radio frequency
Type of tubes —80	1
—45	2
—24	4
Recommended antenna length	30 to 70 feet
Average sensitivity	4.0 micro volts per meter
Number of radio frequency stages	3
Type of detection	Linear type—power detector
Number of audio stages	1
Type of audio amplification	Parallel operated—45's
Type of rectifier	125 ma. full wave type—80
Type of loudspeaker	10-inch cone—dynamic
Speaker field	Series connected—1600 ohms—100 volts—drop—62.5 ma.—6.25 watts

INTRODUCTION

The Brunswick Model 42 Automatic incorporates the same armored chassis and dynamic speaker that is used in the Models 15 and 22. In addition it has the added feature of the Automatic Panatrope which will play twenty records without attention, and then shut itself off.

It is the purpose of this bulletin to show only those features which deal with the Automatic equipment, its connections to the radio chassis, and also the information dealing with coin operation. All other data on the radio set can be obtained from Service Bulletin No. 71.

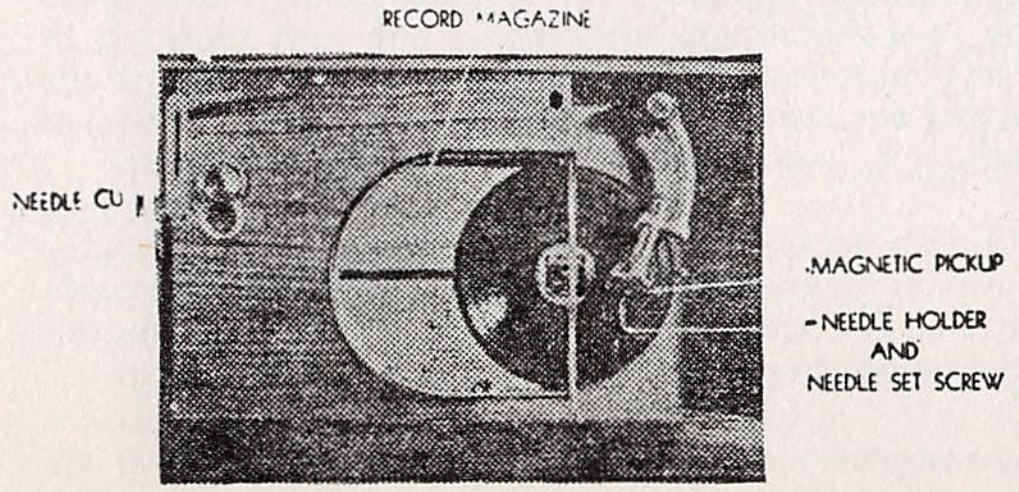

Fig. 1

The operation of the Automatic Panatrope is extremely simple, as will be readily seen by the following explanation:

Figures 1 and 2 show top and front views of the Model 42 and indicate the various components that enter into its use.

With the station selector control turned past the 1500 K. C. mark, and twenty or less records in the record magazine, turn the "off" and "on" switch to the "on" position. Then press the "start" button. This will do the following: connect the power to the radio chassis so that the audio amplifier can be used for record reproduction; starts the motor and automatic mechanism for the cycles of playing the record and ejecting the played record into the reject compartment.

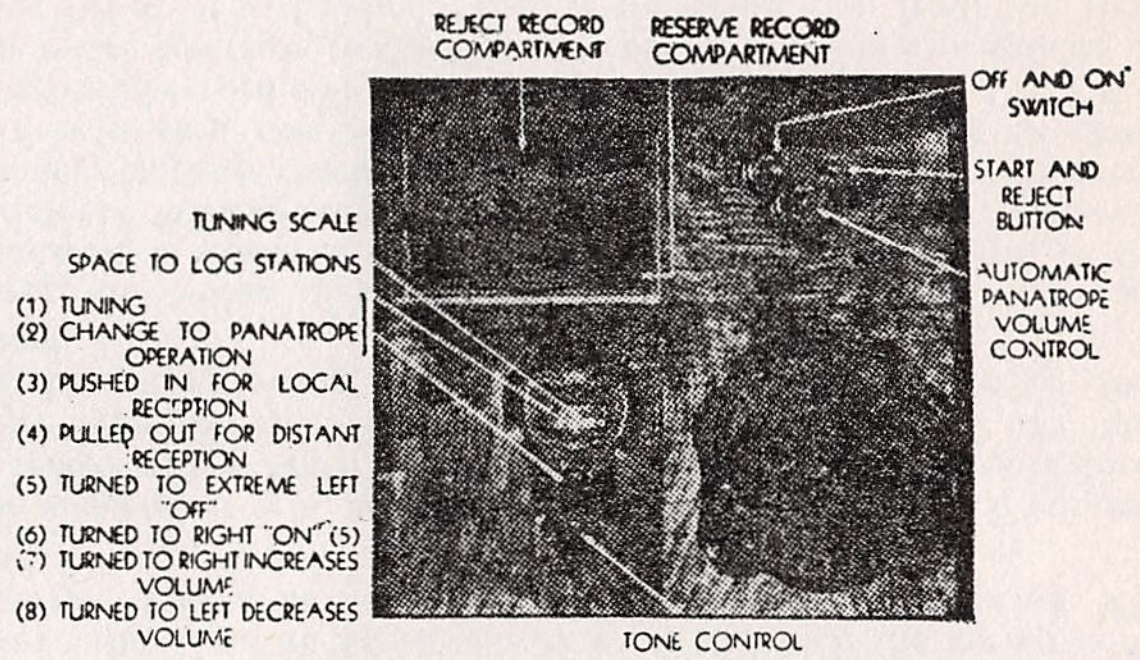
REJECT RECORD COMPARTMENT
RESERVE RECORD COMPARTMENT
OFF AND ON SWITCH
START AND REJECT BUTTON
AUTOMATIC PANATROPE VOLUME CONTROL
TUNING SCALE
SPACE TO LOG STATIONS
(1) TUNING
(2) CHANGE TO PANATROPE OPERATION
(3) PUSHED IN FOR LOCAL RECEPTION
(4) PULLED OUT FOR DISTANT RECEPTION
(5) TURNED TO EXTREME LEFT "OFF"
(6) TURNED TO RIGHT "ON" (5)
(7) TURNED TO RIGHT INCREASES VOLUME
(8) TURNED TO LEFT DECREASES VOLUME
TONE CONTROL

Fig. 2

PART II

THE STORY OF THE AUTOMATIC AND ITS OPERATION THROUGH A COMPLETE CYCLE

The accompanying series of sketches have been prepared in order to present a clear idea of the cycle of operations through which the Automatic mechanism goes during the playing, the rejection of a record, and the starting of a new record. In conjunction with the following explanation, these sketches should make what appears to be a complicated mechanism really a very simple piece of apparatus. An automatic record playing instrument may be made in innumerable ways, but the simplicity of its mechanism reflects the true engineering skill behind it. There should be no more apparatus necessary than that required to accomplish the purpose of the machine. In servicing such a machine, this is a factor to be appreciated.

In Sketch 1 the record is shown in the playing position. As the magnetic pickup moves toward the center of the record, beneath the top plate of the mechanism the suspension arm is pulling a special switch with it. This is shown in Sketch 2. When the end of the record is reached, this switch hits against an adjustable stop, closing the switch contacts.

From this point on, many things occur in a short space of time, ten seconds or less. Reference to the schematic circuit appearing in Figure 6 will also help to clear up a few points. In fact, it will more than pay the person who meets up with this model to sit down and follow out this circuit along with this description.

The switch just mentioned is designated as the "Suspension Arm Switch" in the schematic circuit. When this closes, the line voltage is placed directly across the solenoid coil, also shown in Sketch 3. Immediately the solenoid armature pulls the stop lever from the dotted line to the solid line position. The projection "r" on this lever (follow to Sketch 4) moves out of the way of the clutch pawl, allowing the latter under the tension of the small spring to slip in and engage with the teeth of the clutch. The only revolving parts up to now have been the motor, ejector friction disc, and the turntable. Sketch 5 shows the parts which start revolving when the clutch engages. A little further on, the reason for these gears will become evident.

As the master gear revolves, three cams on its under side function. The first is shown in Sketch 6, operating the cycle switch. This switch closes (refer to scematic circuit and note that the "reset" and "off-on" switches are closed) in order to maintain a closed power circuit to the motor when the "reset" switch opens a little later. Immediately thereafter, the second cam on the master gear, not shown, has revolved to a position where it actuates a lever raising the pickup arm, see Sketch 6.

Referring to Sketch 7—with the pickup raised off the record, the third cam raises the ejector wheel to a position where the friction cone rides on the ejector friction disc. As the ejector wheel comes up and starts to revolve, it also brings up the push rod opening the "reset" switch (see schematic). The revolving ejector wheel sends the finished record out into the reject record compartment.

In Sketch 8, note the lever arm marked "t." Functioning through its mechanical connection to the master gear, it starts moving the pickup suspension arm out of the way of the next record coming down from the magazine. The levers "x" and "y" are also working at the same time and through the connecting rod "z," as the pickup moves to the right, sends a new record down to the turntable. Sketches 8 and 9 show the respective positions of the mechanism and top of the Automatic Panatrope at the middle of the record change operation. The master gear only revolves once. The reasons for the two reduction gears, Sketch 5, should now be apparent; namely, because the turntable shaft revolves at 78 R.P.M., and this speed is entirely too high for direct application to the other moving parts, suspension arm, etc. Even if it were, the size of the motor would have to be much greater to supply all the power required during the record change. The gears serve to keep the power consumption of the Panatrope down to a minimum.

When the new record drops on the turntable, it hits the push rod closing the "reset" switch, thus keeping the power circuit to the motor and chassis closed even though the cycle switch is still closed. The position of the record, ejector wheel and push rod are now shown by Sketch 10.

Going back to Sketch 8, the suspension arm return lever, "w," now comes into play. This is during the last half of the master gear revolution. As the master gear returns to its original position, the suspension arm return lever, "w," catches the projecting pin that was pushed over by "t," carrying the suspension arm back until the other end of "w" hits the stud "s." This releases the pin, leaving the suspension arm and pickup in position over the first grooves of the new record. With the return of the suspension arm, the arm "v" in the record magazine has moved back ready to advance the next record. The pickup is lowered to the record and the master gear, completing its cycle, allows the stop lever arm to drop to the position indicated by the solid lines of Sketch 11 under the tension of the spring "u." The projection "r," Sketch 3, engages the clutch pawl, preventing the gears from revolving further. The cycle switch opens and the new record continues the program.

There is one more point to consider. Had the record magazine been empty, the mechanism would have worked in the same manner with one exception, the push rod would have remained up and the "reset" switch open. From the scematic circuit, it is evident that upon the opening of the cycle switch, the power supply circuit is broken and the whole machine shuts off.

PART III

ADJUSTMENT AND CARE

All initial adjustments are made at the factory so that the instrument is ready for immediate use when properly installed. The turntable speed should be 78 R.P.M., but if for any reason it is thought that this speed is not being maintained, by placing a paper clip at some point on the record's edge for an indicator and timing the turntable, it is possible to check this. The motor speed control is directly above the motor and is readily located when the cabinet back is removed.

The motor should be oiled about once a month; a little oftener if the machine is used steadily. The oil holes are located directly beneath the turntable. A few drops will suffice; do not flood the motor with oil as this can do more harm than good.

The Brunswick Permo-Point needle, which accompanies each instrument, will play in excess of 2.000 records. It is recommended that this needle be used in preference to all other types.

Some of the simple adjustments which may be necessary to accommodate slight differences in records, as well as some suggestions to take care of possible changes caused by shipment, are given below.

We recommend that the first time any of these adjustments are made, that the plate covering the mechanism be removed. This can be accomplished as follows:

(a) Lift off the turntable.

(b) Remove all screws around the edge of plate covering mechanism, as well as those around the suspension arm.

(c) Remove the nut which holds the suspension arm to the cast iron base.

(d) Carefully lift up the suspension arm about three-quarters of an inch and remove the plate by pulling up the front end and gently lifting out—taking care not to mar the cabinet. Removing this plate will bring the mechanism into view, permitting the adjustment of four primary points.

1. Adjustment determining the point at which the magnetic pickup is lowered to edge of record.

   Replace the turntable, re-tighten suspension arm nut, and place a record in the record magazine; press the start button. As the master gear starts through the last half revolution (see Sketch 8) it will be seen that the eccentric stop "s" controls the release of the lever "w," which is pulling the suspension arm toward the record. The adjustment of this "stop" allows the needle of the magnetic pickup to drop on the edge of the record about a sixteenth of an inch from the grooves.

2. Also in Sketch No. 8 there will be seen a spring, "q."

   After the needle has come in contact with the record, this spring pulls the suspension arm over until the needle rides in the starting grooves of the record. If the spring tension be too great, the needle may jump several grooves, or on the other hand, if it is too weak, will not pull the needle into the starting grooves at all. The earlier models with serial numbers up to 2,000 have this spring attached to a fixed stud and the tension can be varied by shortening or stretching the spring. Those with serial numbers above this have an adjustable bracket to which the spring is attached, permitting the tension to be varied without touching the spring. The remedy is obvious.

3. At the base of the suspension arm, see Sketch No. 2, is a switch which controls the rejection of a record at the finish of its playing. There are two types of these switches, the earlier type—on models with serial numbers less than 2,000 (this type is shown on the actual wiring diagram Figure 5)—and the later one that is indicated in Sketch 2.

   Removing the cover, the action of this switch can be observed. As the record plays, the switch casting is slowly carried along with the suspension arm. In the earlier type of switch the floating contact member does not touch either side contact until the magnetic pickup reaches either the inside groove of a concentric grooved record where a stop (see Sketch 2) causes the left contact to close; or on an eccentric grooved record will cause the right contact to be closed. If either of these two contacts are too close to the floating contact there is a possibility of the record rejecting before it is finished. Also, if the separation from the right

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

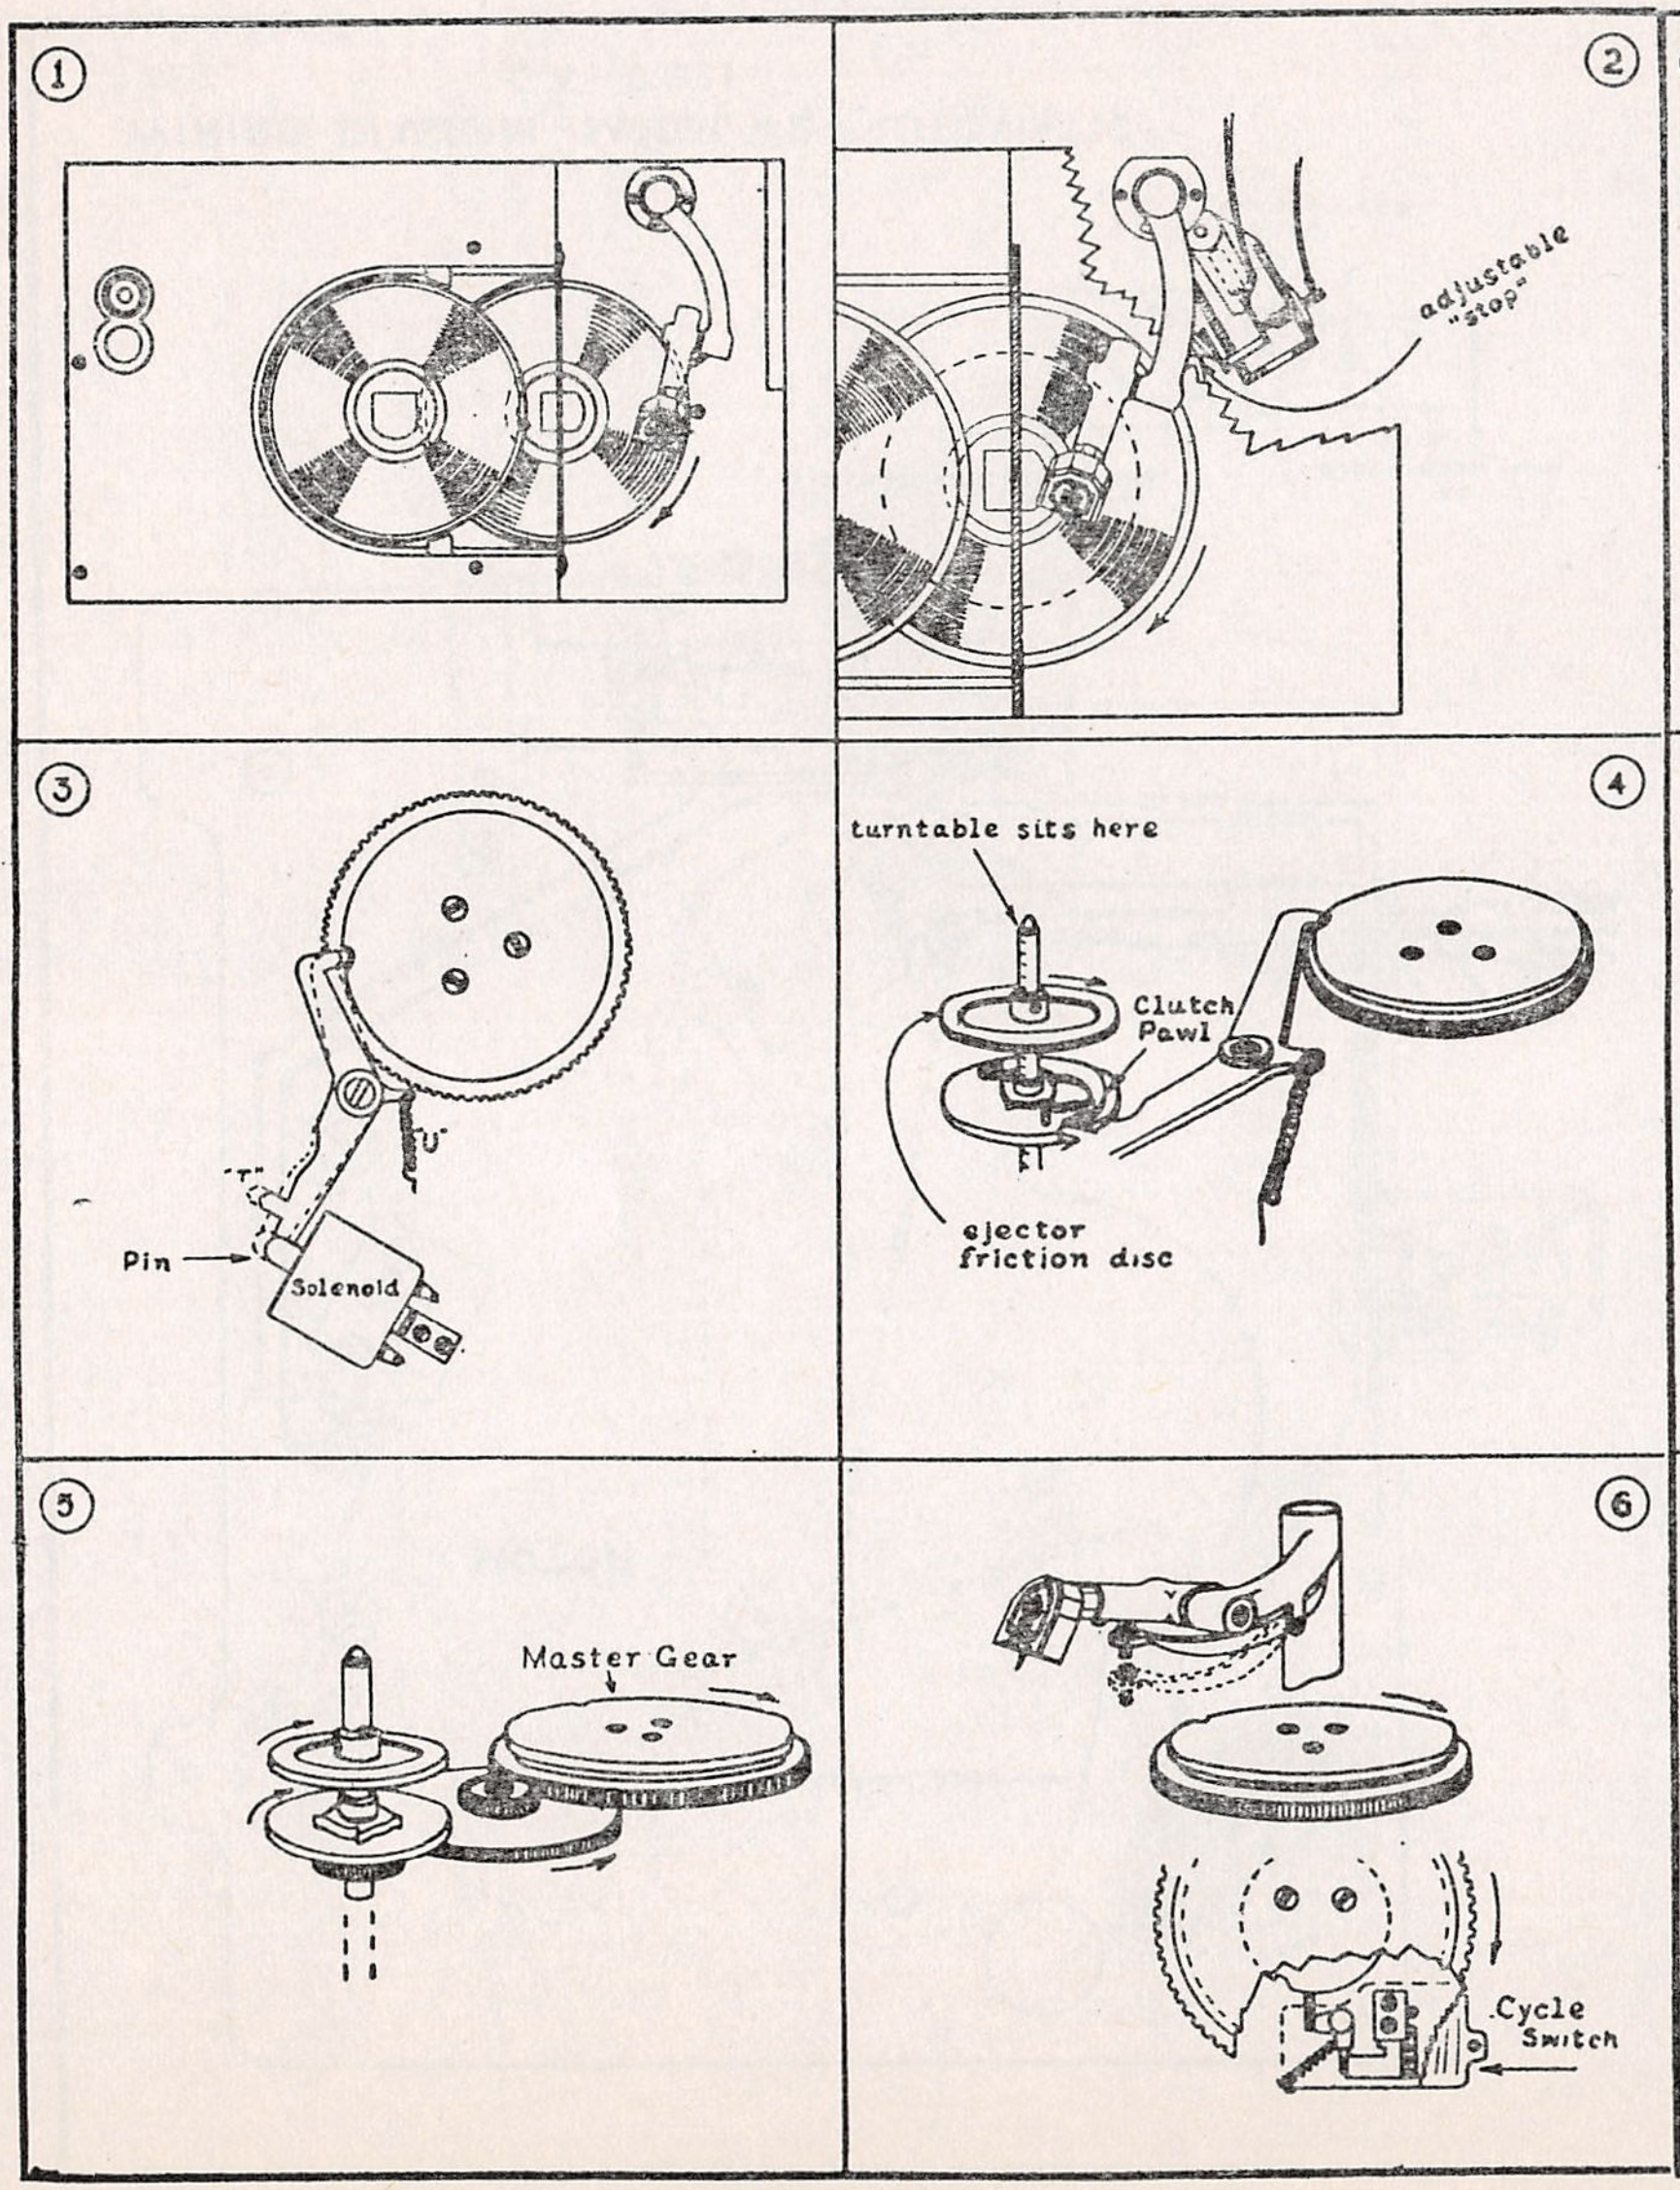
①
②
adjustable "stop"
③
"T"
"U"
Pin
Solenoid
④
turntable sits here
Clutch Pawl
ejector friction disc
⑤
Master Gear
⑥
Cycle Switch

Figure 3

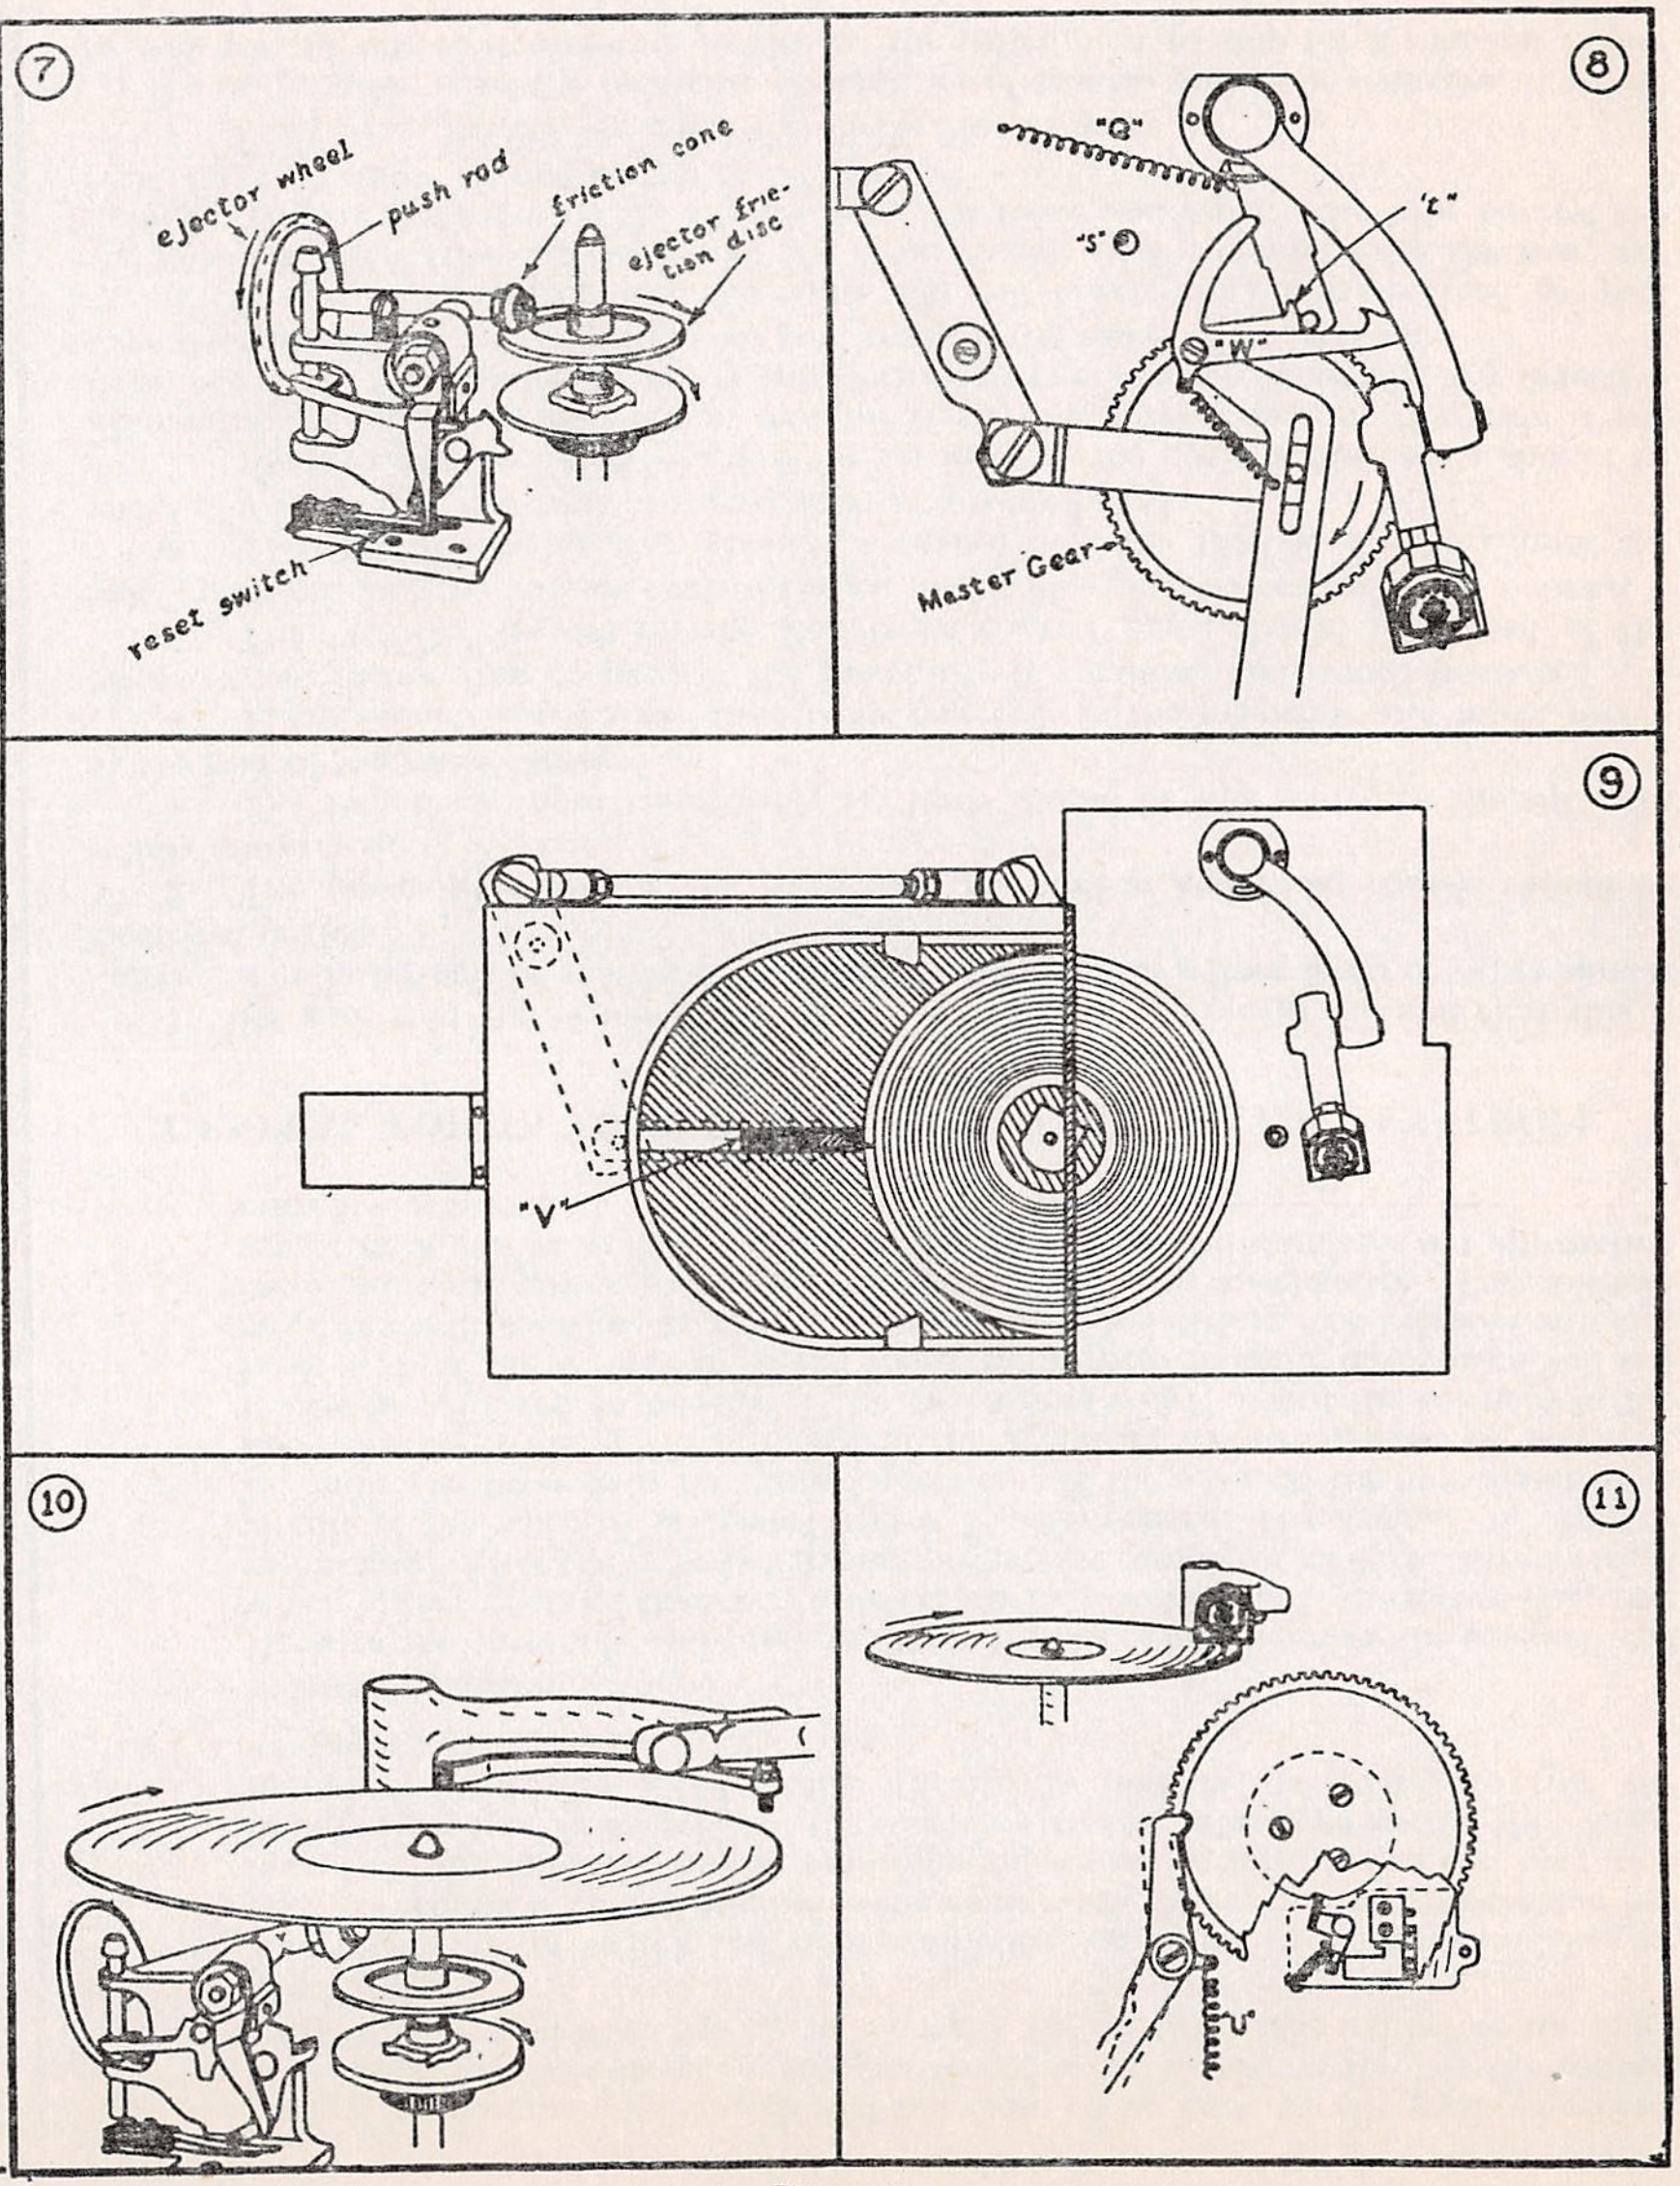
⑦
ejector wheel
push rod
friction cone
ejector friction disc
reset switch
⑧
"Q"
"S"
"t"
"W"
Master Gear
⑨
"V"
⑩
⑪
"U"

Figure 4

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

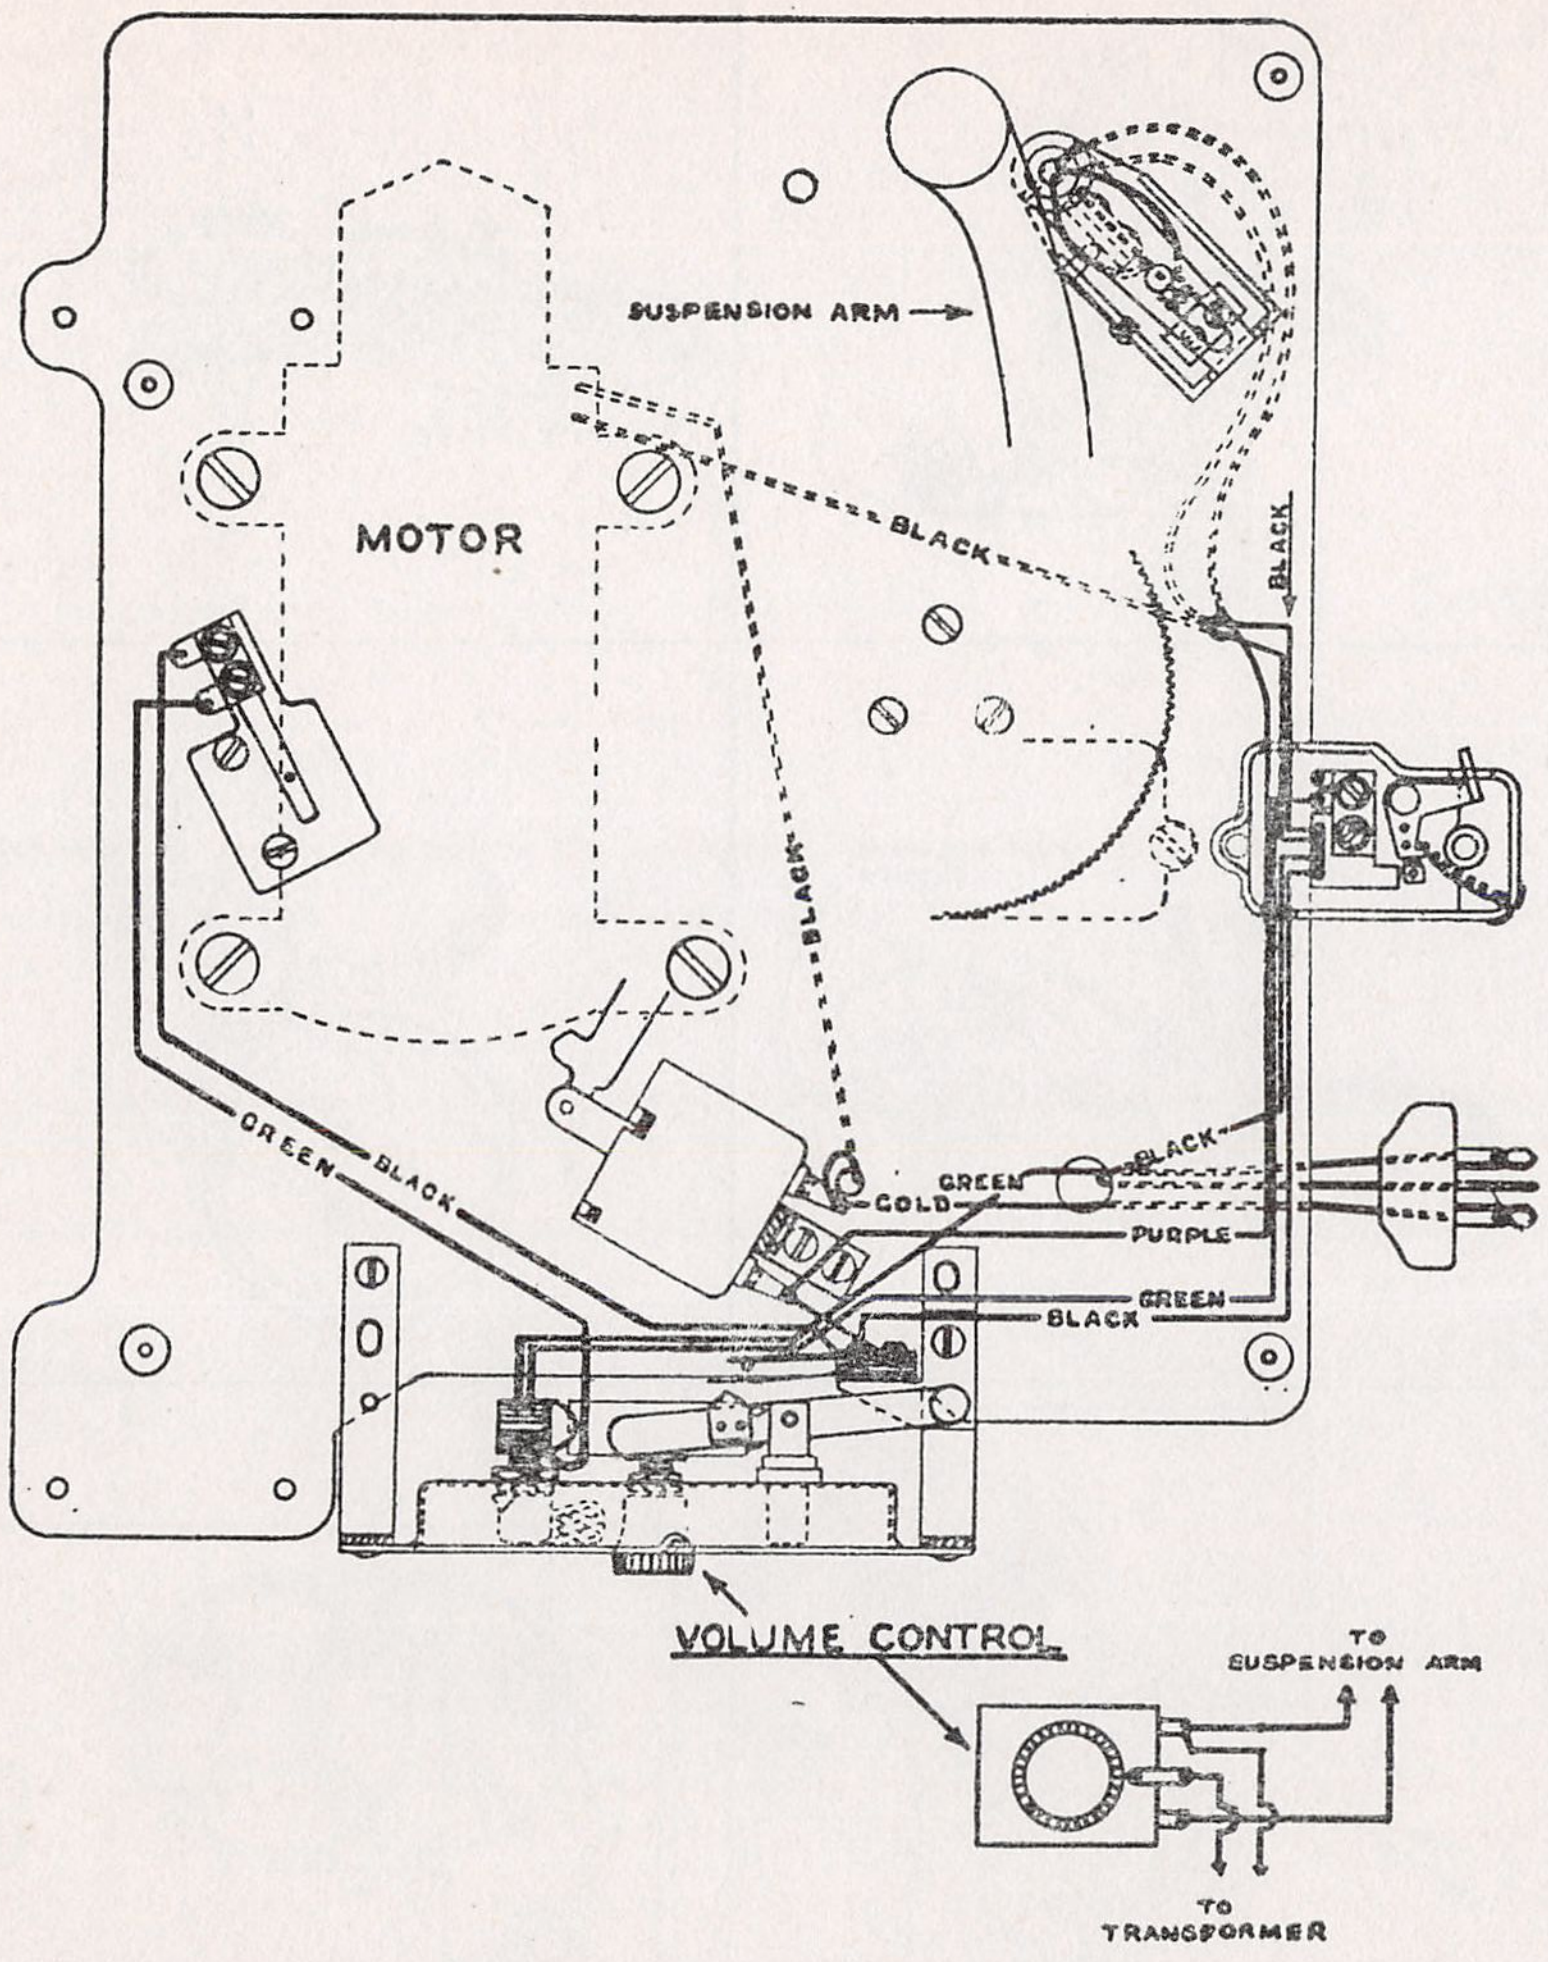

WIRING DIAGRAM - MODEL 42 - AUTOMATIC
CA - 7011

Figure 5

contact is too great, the switch will not close on an eccentrically grooved record. If the stop for the concentric grooved record is set too far to the left the contact will not close, and if set too far to the right, the record is rejected before the selection finishes.

The later type of switch has been simplified somewhat in construction, having only one contact, but accomplishes the same work. If the previous discussion has been carefully followed, similar reasoning applies to the adjustment and operation of this later type of switch. On the models with this later type switch the "stop" previously mentioned is adjustable through a hole in the plate covering the mechanism.

4. Solenoid operation:

Remove the turntable and press the start button. This energizes the solenoid coil which in turn operates the lever, which starts the functioning of the record-changing mechanism. After the record-changing mechanism completes its cycle, the electrical circuit of the solenoid is opened and it is de-energized. The spring, "u," Sketch 11, pulls the lever into its normal position. If the solenoid for any reason does not draw the armature in properly, or the armature vibrates against the solenoid, it can be adjusted by means of the two screws which mount the solenoid to the base. Also, if the spring "u" is too weak, the record-changing mechanism will not stop, but will continue to reject the records. If too strong, the solenoid will not have sufficient power to operate the record-changing mechanism. The solenoid armature is hollow and contains a rubber bumper which dampens out alternating current vibrations.

GENERAL POINTS TO CHECK UP IF THE AUTOMATIC PANATROPE IS INOPERATIVE

1. Be sure that the power line plug is connected to the receptacle and that this is "alive." The latter can be readily determined by plugging in a floor lamp or other similar electrical device.

2. The power plug joining the Automatic mechanism and radio chassis should be solidly connected.

3. The Panatrope input transformer tip leads should be well seated in the tip jacks at the rear of the radio chassis.

4. There should be not more than twenty records in the magazine and reject record compartment at one time to prevent the possibility of jamming and record breakage.

5. The "Off-On" switch on the Panatrope control panel should be placed at the "On" position, and the volume control turned up far enough to insure sufficient volume.

6. The station selector scale should be turned past the 1500 K. C. mark until the clicks of the Radio-Panatrope change-over switches are heard.

7. By pressing the "start" button for an instant, the radio tuning scale should be illuminated and the turntable set in motion. If the latter revolves, but the scale is not illuminated, the fuses under the power transformer cover should be tested and any defective ones replaced. Check the pilot light for continuity if the radio tubes light up.

8. If everything checks up to this point, and still no reproduction is obtained, see that the group of three tubes at the left of the radio chassis (when viewed from the rear) are lighted. Remove the cover on the three screen-grid tubes and replace the tube nearest the rear of the chassis with one known to be okay.

9. For pickup trouble see Service Bulletin No. 70, page 9.

In conjunction with the following possibilities of trouble and their remedies, it would be well for the one contemplating service on the instrument to stop for a moment before

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

delving into the machine and try to analyze the cause of the trouble. This will save much time and unnecessary work.

Records Jamming in Mechanism

There are several conditions which may cause this; the most likely are those due to (a) warped records, (b) the record feed fingers on the record magazine bent, (c) the spring on the record gate (which supports the records while stored in the magazine) adjusted too closely, allowing only thin records to pass through; or the other extreme, too wide, allowing two records to go through, (d) the space under the record feed fingers allows two records to be caught instead of a single one.

Obviously, for (a) the record should be placed on a warm flat surface until it is once more flat. For (b) it will be necessary to remove the mechanism from the cabinet (see paragraph headed "Removal of Mechanism from Cabinet") to get at the small spring which provides tension for this finger. After once seeing how this particular part functions, the average service man can effect the repair by running the mechanism to the middle of a cycle, at which point the record feed finger will be at the edge of the magazine. If the spring is broken and enough remains to permit stretching it, too much tension will not be a serious drawback on the finger; otherwise, it is necessary to replace the spring with a similar one. For (c) refer to Figure 1. This shows the record gate in question, situated immediately over the center of the record on the turntable. This has a spring clip at its center which is adjustable either up or down. To adjust for two records coming through at once, lower the gate, and for a single thick record raise it. If records of standard make, and not warped, are used, very little trouble will be experienced from this point after it is once set. In a few cases (d) it has been found that the space under the record feed finger of the magazine lever permits two records to be caught at once. Should this be the case, the part of the lever which goes under the record first can be raised a small amount, thus lowering the height of the finger when it comes forward to select the next record for reproduction. In case the turntable does not revolve after these troubles have been remedied, turn the motor governor by hand until the mechanism reaches the start position; then it will run as usual.

Adjustment of Feeder Rod

The feeder rod is located at the back of the automatic mechanism, and is made accessible by removing the wooden top cover around the record magazine. Also refer to Sketch 9. Its length controls the distance through which the magazine lever moves. This does not often need attention but can be changed in length as follows: Loosen the lock nuts at either end of the rod. To shorten, turn the rod in a clockwise direction, or in case the rod is to be lengthened, turn in a counter-clockwise direction. Then tighten the lock nuts.

Record Ejector Wheel Not Functioning Properly

Sometimes the record ejector wheel will come up but fail to turn and throw the record out. This may be due to neglect in oiling the shaft to which it is attached. As this is only a friction drive, any opposition to its turning, in addition to the ejection of the record, may be detrimental. Other possibilities are that the friction cone is covered with oil, or is worn down. Clean it off and check before going further. If it has worn down, check the spring in the plunger which pushes this wheel up. See that this spring has some life in it by noting whether the ejector wheel rebounds readily when pushed down. If, after this the trouble is not obvious, try placing a very thin washer behind the friction cone to move it forward a little or replace the cone.

Solenoid Trouble

Vibration during record changing cycle. This may be due to the solenoid being improperly centered, or caused by the rubber bumper in the hollow solenoid armature not functioning properly. Loosen the screws which hold the solenoid to the iron base, and push it forward. Center the plunger pin and tighten the two screws. Check the smoothness of the plunger action by operating it with the finger. It is absolutely essential that the armature be properly centered. It may even be necessary to place a small piece of paper beneath the bracket near either of the two screws, or one side of the bracket to center it, but be sure it is finally centered. If the solenoid rattles after this, take the armature out and determine whether the rubber has lost its elasticity, due to excessive heat or moisture. If so, replace it and center the solenoid again. Also see "Solenoid Operation" at beginning of Part III. For an open winding in the solenoid there is no alternative but to replace the coil.

Gear and Clutch Mechanism--Cycle Switch

This is the heart of the whole mechanism. Once properly set, the likelihood of its causing trouble is small. If for any reason it becomes necessary to remove the gears, the easiest way to reset the timing is to loosen the solenoid, set the solenoid stop lever (see Sketches 3 and 4) in a position such that it has the projection "r" directly over the slot in the clutch disc. To do this it will be necessary to unfasten the solenoid lever. Raise the master gear sufficiently to clear the intermediate gear and rotate it to a position such that the end of the stop lever is in position near the slot in the master gear. Lower the master gear so that it engages the intermediate gear cogs and then drop the stop lever into position. Set the stop lever snugly in place in the slot of the clutch disc. At this point, the clutch pawl is disengaged from the clutch. If this is not possible, raise the stop lever arm and master gear again and move the latter a single cog or two in the direction which will permit the stop lever to fit properly, then set the stop lever in place and fasten down the master gear by means of the nut under the base. It may be necessary to try this procedure several times before getting perfect operation, but once it has been successfully accomplished, it will be an easy point to tackle afterwards. In case it is found that the two gear segments on the intermediate gear have become loose within each other, this part should be replaced.

The cycle switch is shown in Sketch 6, and has only one moving contact. In the event this remains open circuited, the mechanism will stop just after the rejected record has left the turntable and before the next record drops down from the magazine.

Ejector Wheel Push Rod Assembly

The case may arise where the push rod does not come up high enough to open the reset switch. First, check this rod for bends by turning it around with the finger when it is in the upper position. If it is bent, carefully straighten the push rod and apply a slight amount of oil at the guide holes. The spring tension needs very little adjusting, and if the whole assembly is oiled once every six months, it should give no trouble. Also see latter part of paragraph under heading of "Record Ejector Wheel not Functioning Properly."

Removal of Mechanism From Cabinet

Wherever it is necessary to remove the entire mechanism from the cabinet, the following procedure should be followed:

1. Disconnect the instrument from the power line, and also open the power and Panatrope plug connections between the radio chassis and the Automatic mechanism.
2. Four large nuts hold the mechanism in the cabinet, these being located at the four corners of the cast iron base. Remove these and the rubber cushions.
3. Remove the volume control knob on the control panel.
4. Remove the four screws that fasten the lid supports to the top cover of the cabinet, and gently lay the cover back.
5. Remove the wooden top piece which contains the "good" and "used" needle receptacles.

This exposes the entire mechanism and permits its removal from the cabinet.

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

PART IV
COIN OPERATION

A coin operation kit has been made up, designated as Part No. 1000, for use in conjunction with the Automatic Panatrope mechanism. Full instructions accompany each kit showing the connections and physical locations of each part.

This equipment will permit the Panatrope to reproduce one record for each nickel inserted up to the capacity of the magazine—twenty records. The coin control device is actuated by the feeder rod at the back of the mechanism. If the machine is used exclusively for coin operation, the "Off-On" switch should be disconnected from the circuit behind the panel to prevent the whole magazine contents from playing on a single coin.

Connection to the circuit is extremely simple, as all that need be done is to separate the power plug from the chassis to mechanism and insert the extension plug provided with the apparatus. This layout and the connections are given in the accompanying diagram.

As this equipment is of rugged construction, it will give very little trouble. The most important point to check is to be sure the actuating lever is securely fastened to the protruding arm of the lever box. This lever normally assumes a vertical position and the ratchet wheel moves one notch with each record played. An improper placing of this lever results in either too much strain on it, or else it does not move the ratchet wheel.

Complete installation instructions are supplied with each coin operation kit which may be purchased from any Brunswick Distributor or Branch.

PART V
12-INCH RECORD OPERATION

Prior to Serial No. 2500 the Model 42 Automatic Panatrope with Radio was not provided with a means for playing 12-inch records. A demand on the part of music lovers, who already had a library of 12-inch records, however, made it advisable to provide manual operation for 12-inch records. A kit of the necessary parts to make this change may be ordered from any Brunswick Distributor or Branch by specifying Part No. 4464. Directions for attaching these parts are as follows:

DIRECTIONS FOR INSTALLING PART No. 4464 KIT ON MODEL 42 AUTOMATIC PANATROPE WITH RADIO TO PERMIT MANUAL OPERATION OF TWELVE INCH RECORDS

Parts Required:
1 Twelve-inch Record Kit (Part No. 4464) consisting of:
  1 Record guide plate assembly (right).
  1 Record guide plate assembly (left.)
  2 Record guide screw-plates with screws.
  1 Switch cam and record locator assembly.

Tools Required:
1 Hack-saw with proper blades for cutting 3-16-inch steel stock
1 Hand drill and the following drills, sizes:
  1—11-164" drill (a 3-16" drill may be used instead if available)
  1—3-32" drill.
1—12-inch flat file
1—8-inch Bastard file.
  The usual assortment of screwdrivers, pliers, soldering iron, etc., available in every service department.

All of the above tools should be at hand before the installation of this kit is attempted.

METHOD OF PROCEDURE

1. Removal of Record-Change Mechanism from cabinet:
   (a) Slide "oil drip" board out of the back of the cabinet.
   (b) Disconnect the power cable plugs between radio chassis and record-change mechanism.
   (c) Remove the four large nuts and associated rubber cushions located at the four corners of the cast iron base of the record-change mechanism.
   (d) Remove volume control knob on front control panel (fastened to shaft with one set screw).
   (e) Remove the wood panel containing the needle cups located around record hopper (held in place with three wood and three machine screws).
   (f) Remove four screws that fasten lid to lid supports and lay lid gently out of the way.
   (g) Lift record-change mechanism from cabinet by pulling entire assembly straight up.

2. Cut Triangular-Shaped Slot in Record Hopper:
   (a) From the dimensions given in Figure No. 9 Page 16, (see detail "b") mark in pencil the exact shape of the cut to be made on the front record hopper support (note that only the front support is to be so cut). The important dimensions are the base line (1½-inch above the turned in portion of the record hopper leg), the length of the base line (1⅞-inch long as a minimum and 2-inches long as a maximum), the width of the cut at the front (⅞-inch to 1 inch wide) and the angle at which the top of the cut intersects the base line (the easiest way to draw this is to make the cut ½-inch deep at the inside.
   (b) Remove the two record-guide arms from the record hopper cross bar and remove the record hopper cross bar from the record hopper.
   (c) After marking the proposed shape of the cut on the front leg of the record hopper, as directed in paragraph "a" above, saw along the two horizontal lines with a hack-saw until the inside vertical line is reached. Then bend the piece of metal to be removed back and forth until it breaks off. File the edges smooth.
   (d) File the protruding edges of the record hopper (indicated by "e" on the drawing) back at a 30-degree angle so that these points will not scratch the 12-inch records when they are placed on and removed from the turntable.
   (e) Fasten the record hopper cross bar and the two adjustable record guides (supplied with the kit) on the record hopper by means of the four machine screws and the two screw blocks (also supplied with the kit).

3. Fasten New Record Bumper and Switch Assembly to Top Plate:
   (a) Remove the eight machine screws that fasten the right hand top plate to the record-change mechanism; the two machine screws that hold the suspension arm collar to the top plate and remove the top plate.
   (b) Remove the rubber-covered record bumper from the top plate and also remove the rivet 9-16-inch above the record bumper hole.
   (c) Remove the rubber-covered adjustable record bumper and switch throw cam from the switch assembly supplied with the kit so that the base plate may be used as a template.
   (d) Fasten the base plate of the switch to the under side of the top plate (the switch should be mounted toward the outside edge of the top plate) using the two holes provided by the removal of the rubber-covered record bumper and the rivet (these two holes are referred to as "a" and "b" in the diagram).
   (e) Mark the location of the third hole (referred to as "c" in Figure No. 9) with a punch, remove the switch plate and drill this hole with a 11-64-inch or 3-16-inch drill.
   (f) The switch may now be assembled on the top plate.
   (g) Rotate the record bumper lever through its 180-degree arc several times and a ¾-inch circle will be inscribed on the top plate. Turn the record bumper lever half way between its two end positions and mark the two places on the circle that are in line with holes "a" and "c." Use a 3-32-inch drill and drill at these two points two countersunk holes about ¼ of the way through the top plate. These two holes serve as stop positions for the adjustable record bumper.

4. Connect Switch to Solenoid Circuit:
   (a) Remove the black and brown leads from the right hand side of the solenoid and connect them to one of the switch leads. Connect the other switch lead to the solenoid terminal thus left vacant. This permits the operator (by turning the record bumper to the right) to disconnect the solenoid from the circuit so that the record-change mechanism will not function while a 12-inch record is being played.

5. Replace the Record-Change Mechanism in the Cabinet

To Play 12-inch Records Manually:

1. Turn station selector scale past the 1500 kilocycle mark until a click is heard and turn the "off-on" switch on the automatic panatrope control panel to the "on" position.

2. Turn the two 10-inch record guide arms, located on opposite sides of the record hopper, up, and rotate the rubber-covered record bumper (located at the right of the turntable) toward the right-hand side of the cabinet as far as it will go, so as to allow 12-inch record to fit on turntable.

3. Move the magnetic pickup toward the right-hand side of the cabinet as far as it will go and gently slide the 12-inch record on the turntable from the right side of the cabinet.

4. The magnetic pickup can now be freely moved, and by placing it in the first playing groove of the record the 12-inch records can be played.

To Change Back for 10-inch Record Automatic Operation:

Turn the record guide arms, located on the record hopper, down, and rotate the rubber-covered record bumper arm in toward the turntable. The instrument will now play 10-inch records automatically.

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

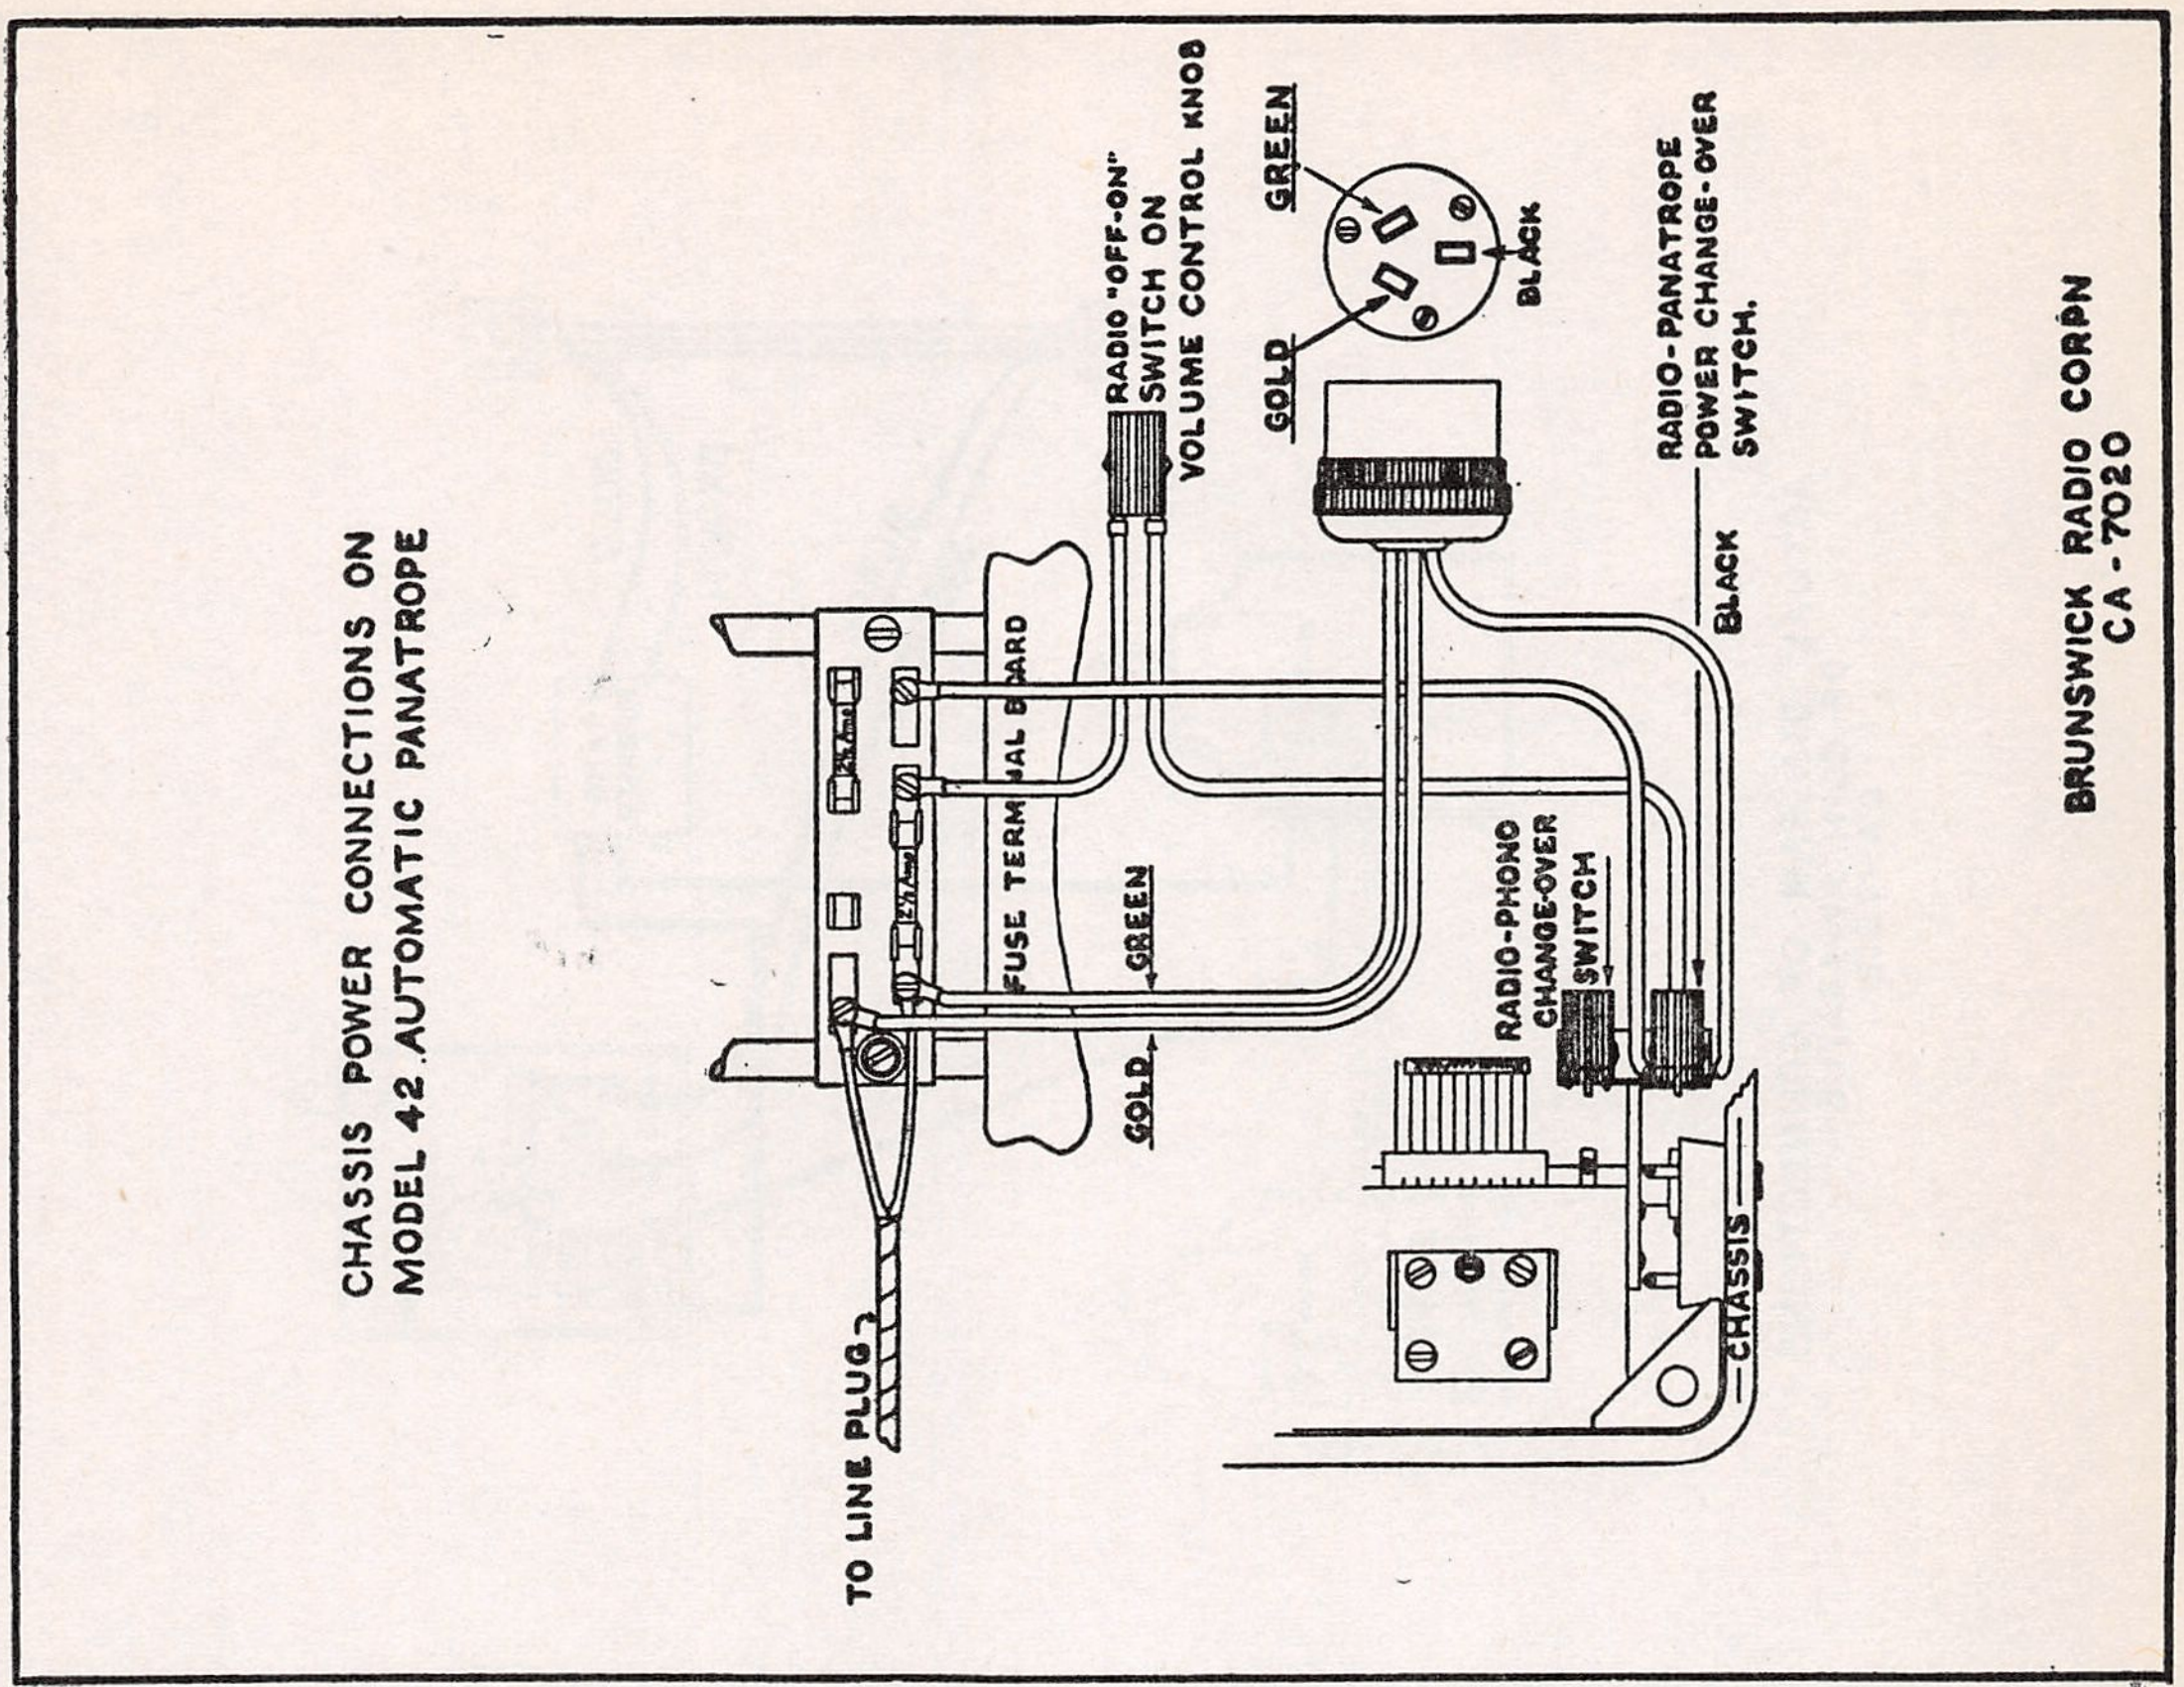
CHASSIS POWER CONNECTIONS ON MODEL 42 AUTOMATIC PANATROPE

TO LINE PLUG
GOLD
GREEN
FUSE TERMINAL BOARD
RADIO "OFF-ON" SWITCH ON VOLUME CONTROL KNOB
GOLD
GREEN
BLACK
RADIO-PHONO CHANGE-OVER SWITCH
BLACK
RADIO-PANATROPE POWER CHANGE-OVER SWITCH.
CHASSIS
BRUNSWICK RADIO CORPN
CA-7020

Figure 7

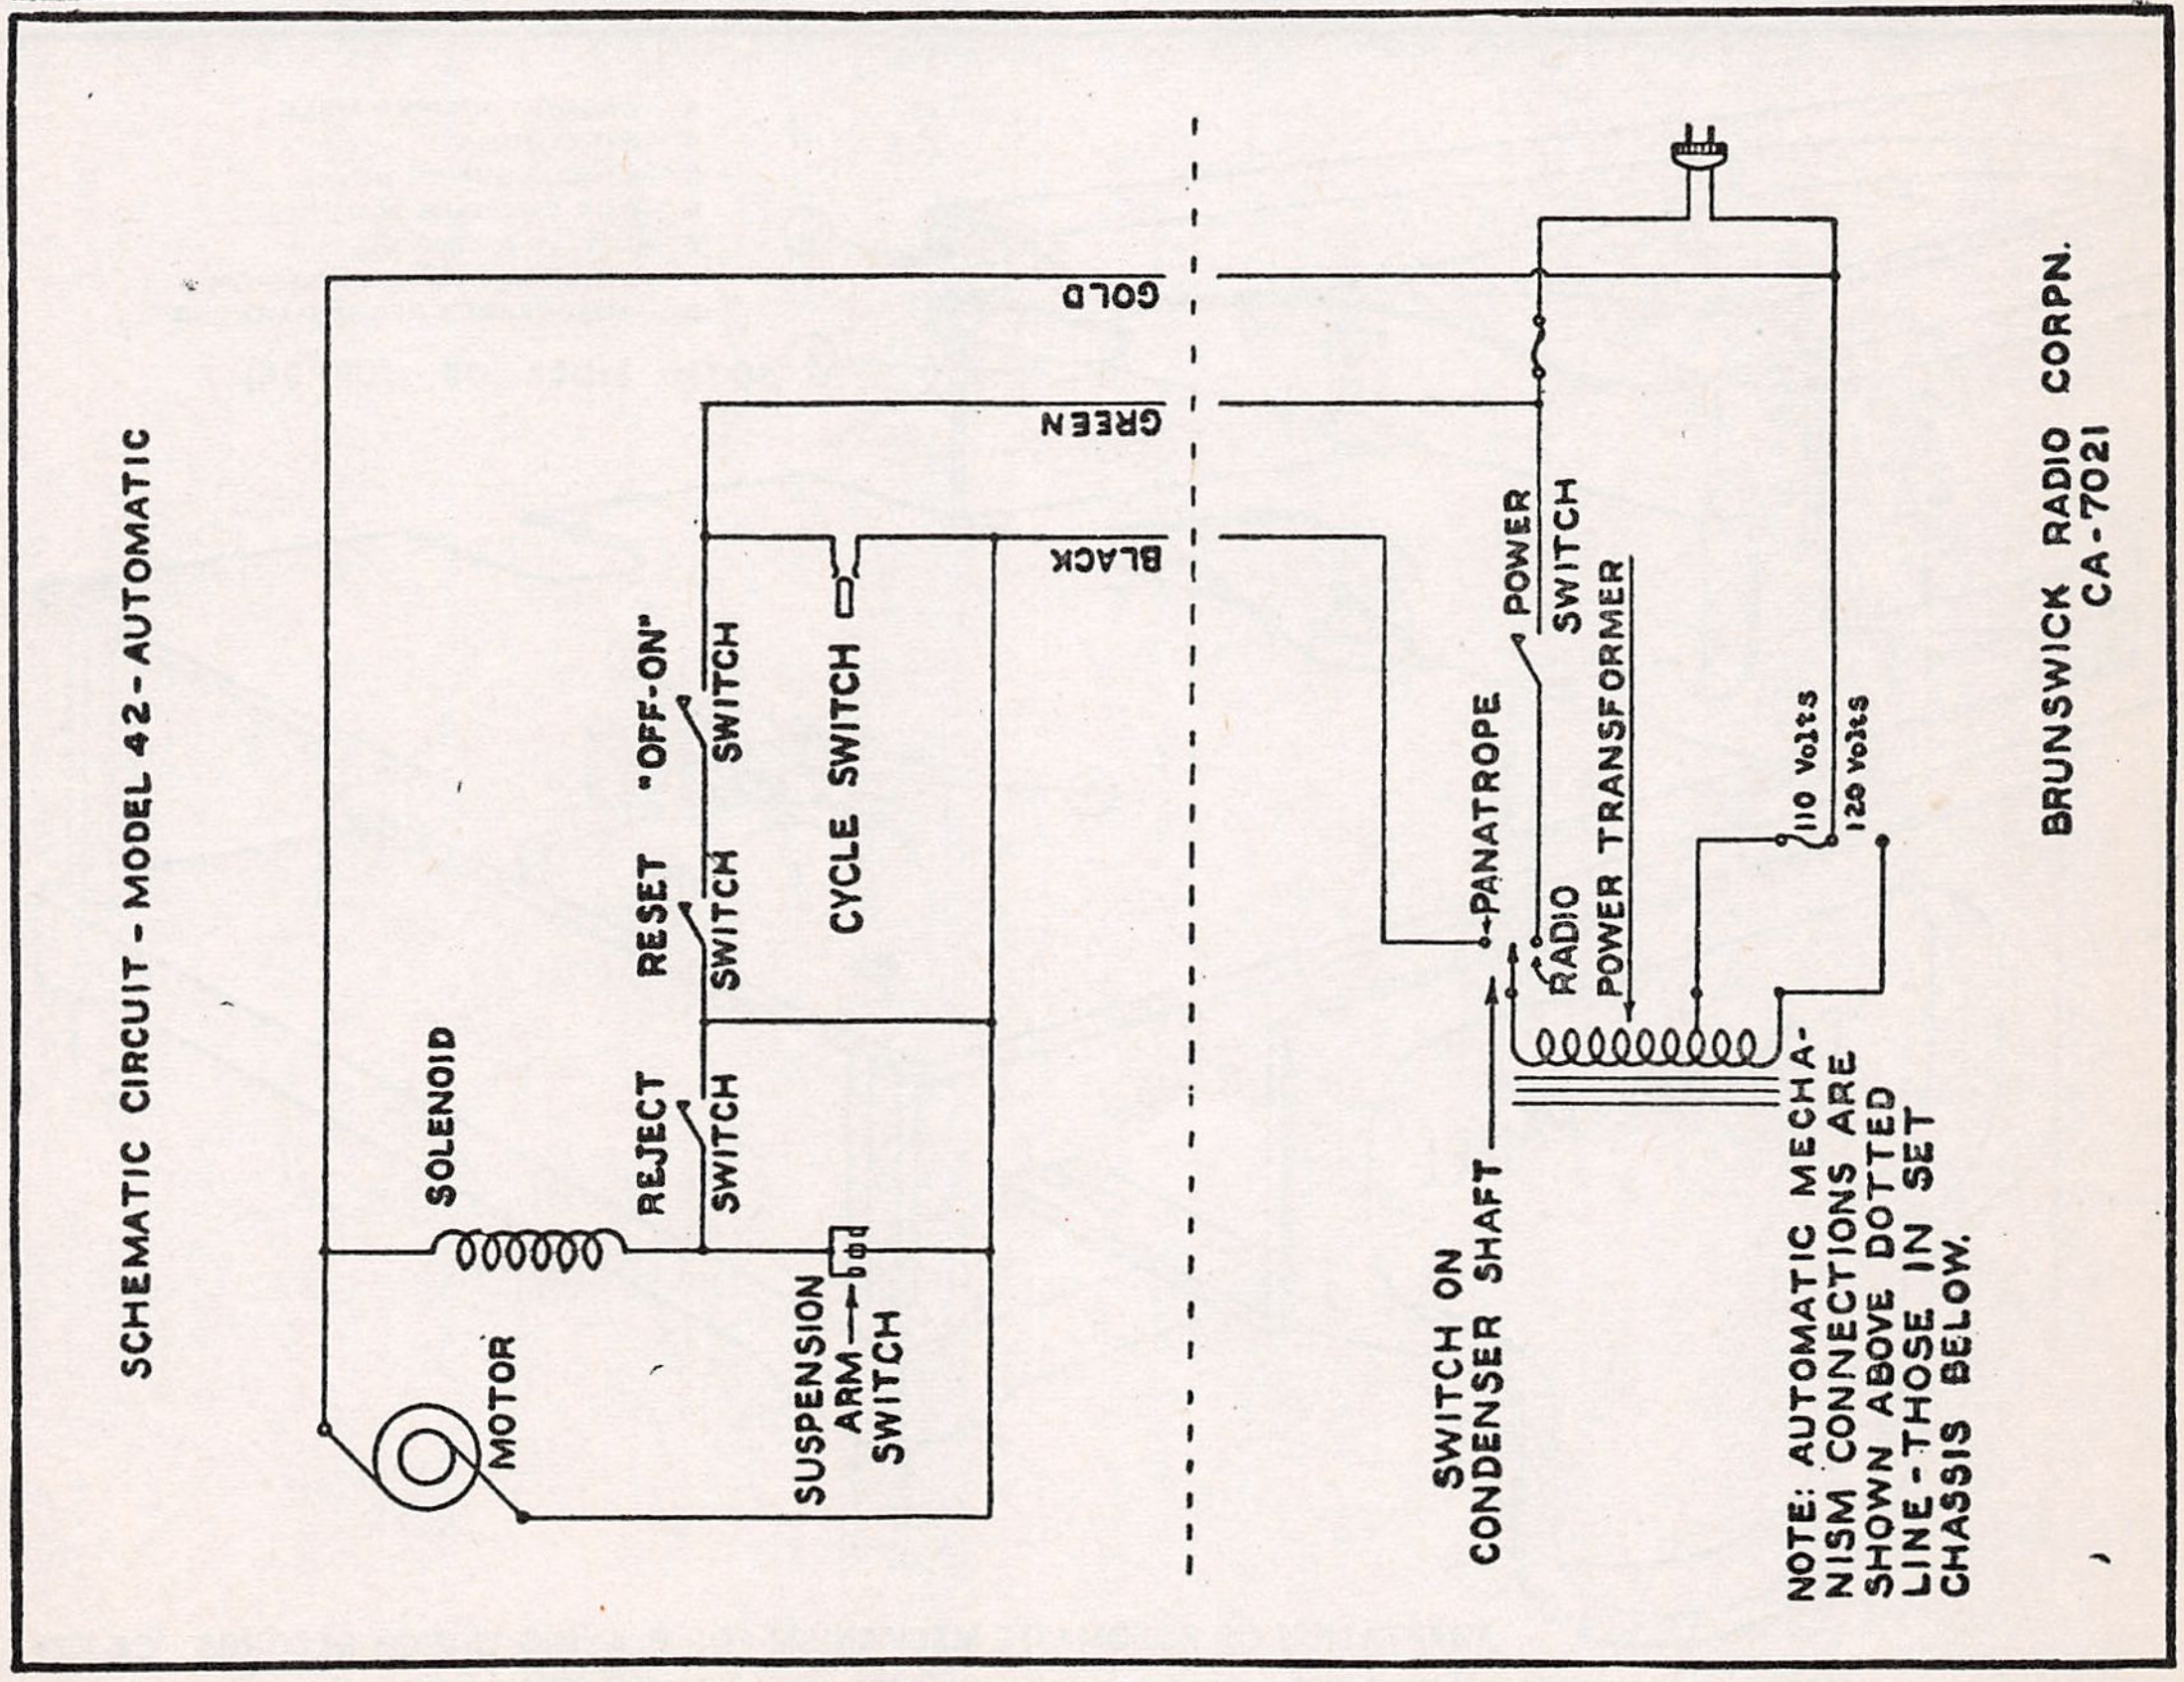
SCHEMATIC CIRCUIT - MODEL 42 - AUTOMATIC

MOTOR
SOLENOID
SUSPENSION ARM SWITCH
REJECT SWITCH
RESET SWITCH
CYCLE SWITCH
"OFF-ON" SWITCH
GOLD
GREEN
BLACK
SWITCH ON CONDENSER SHAFT
PANATROPE
RADIO
POWER SWITCH
POWER TRANSFORMER
110 Volts
120 Volts
BRUNSWICK RADIO CORPN.
CA-7021

NOTE: AUTOMATIC MECHANISM CONNECTIONS ARE SHOWN ABOVE DOTTED LINE - THOSE IN SET CHASSIS BELOW.

Figure 6

MODEL 42
AC-DC

BRUNSWICK RADIO CORP.

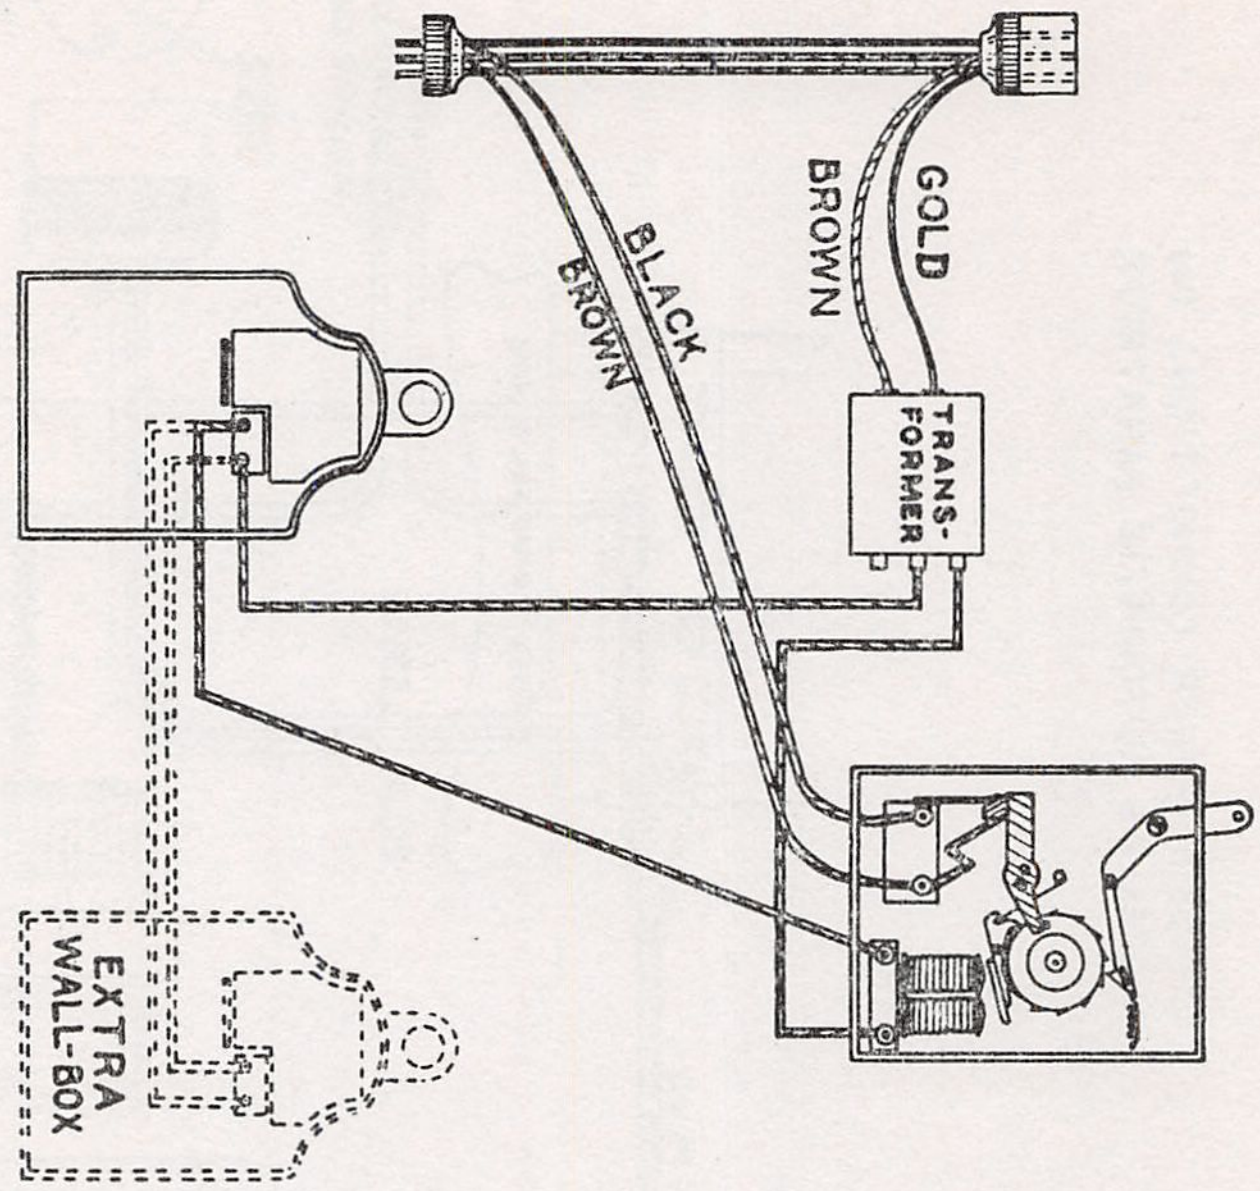
GOLD
BROWN
BLACK
BROWN
TRANS-FORMER
EXTRA WALL-BOX

ACTUAL DIAGRAM OF CONNECTIONS OF COIN APPARATUS
CA-7018

Figure 8

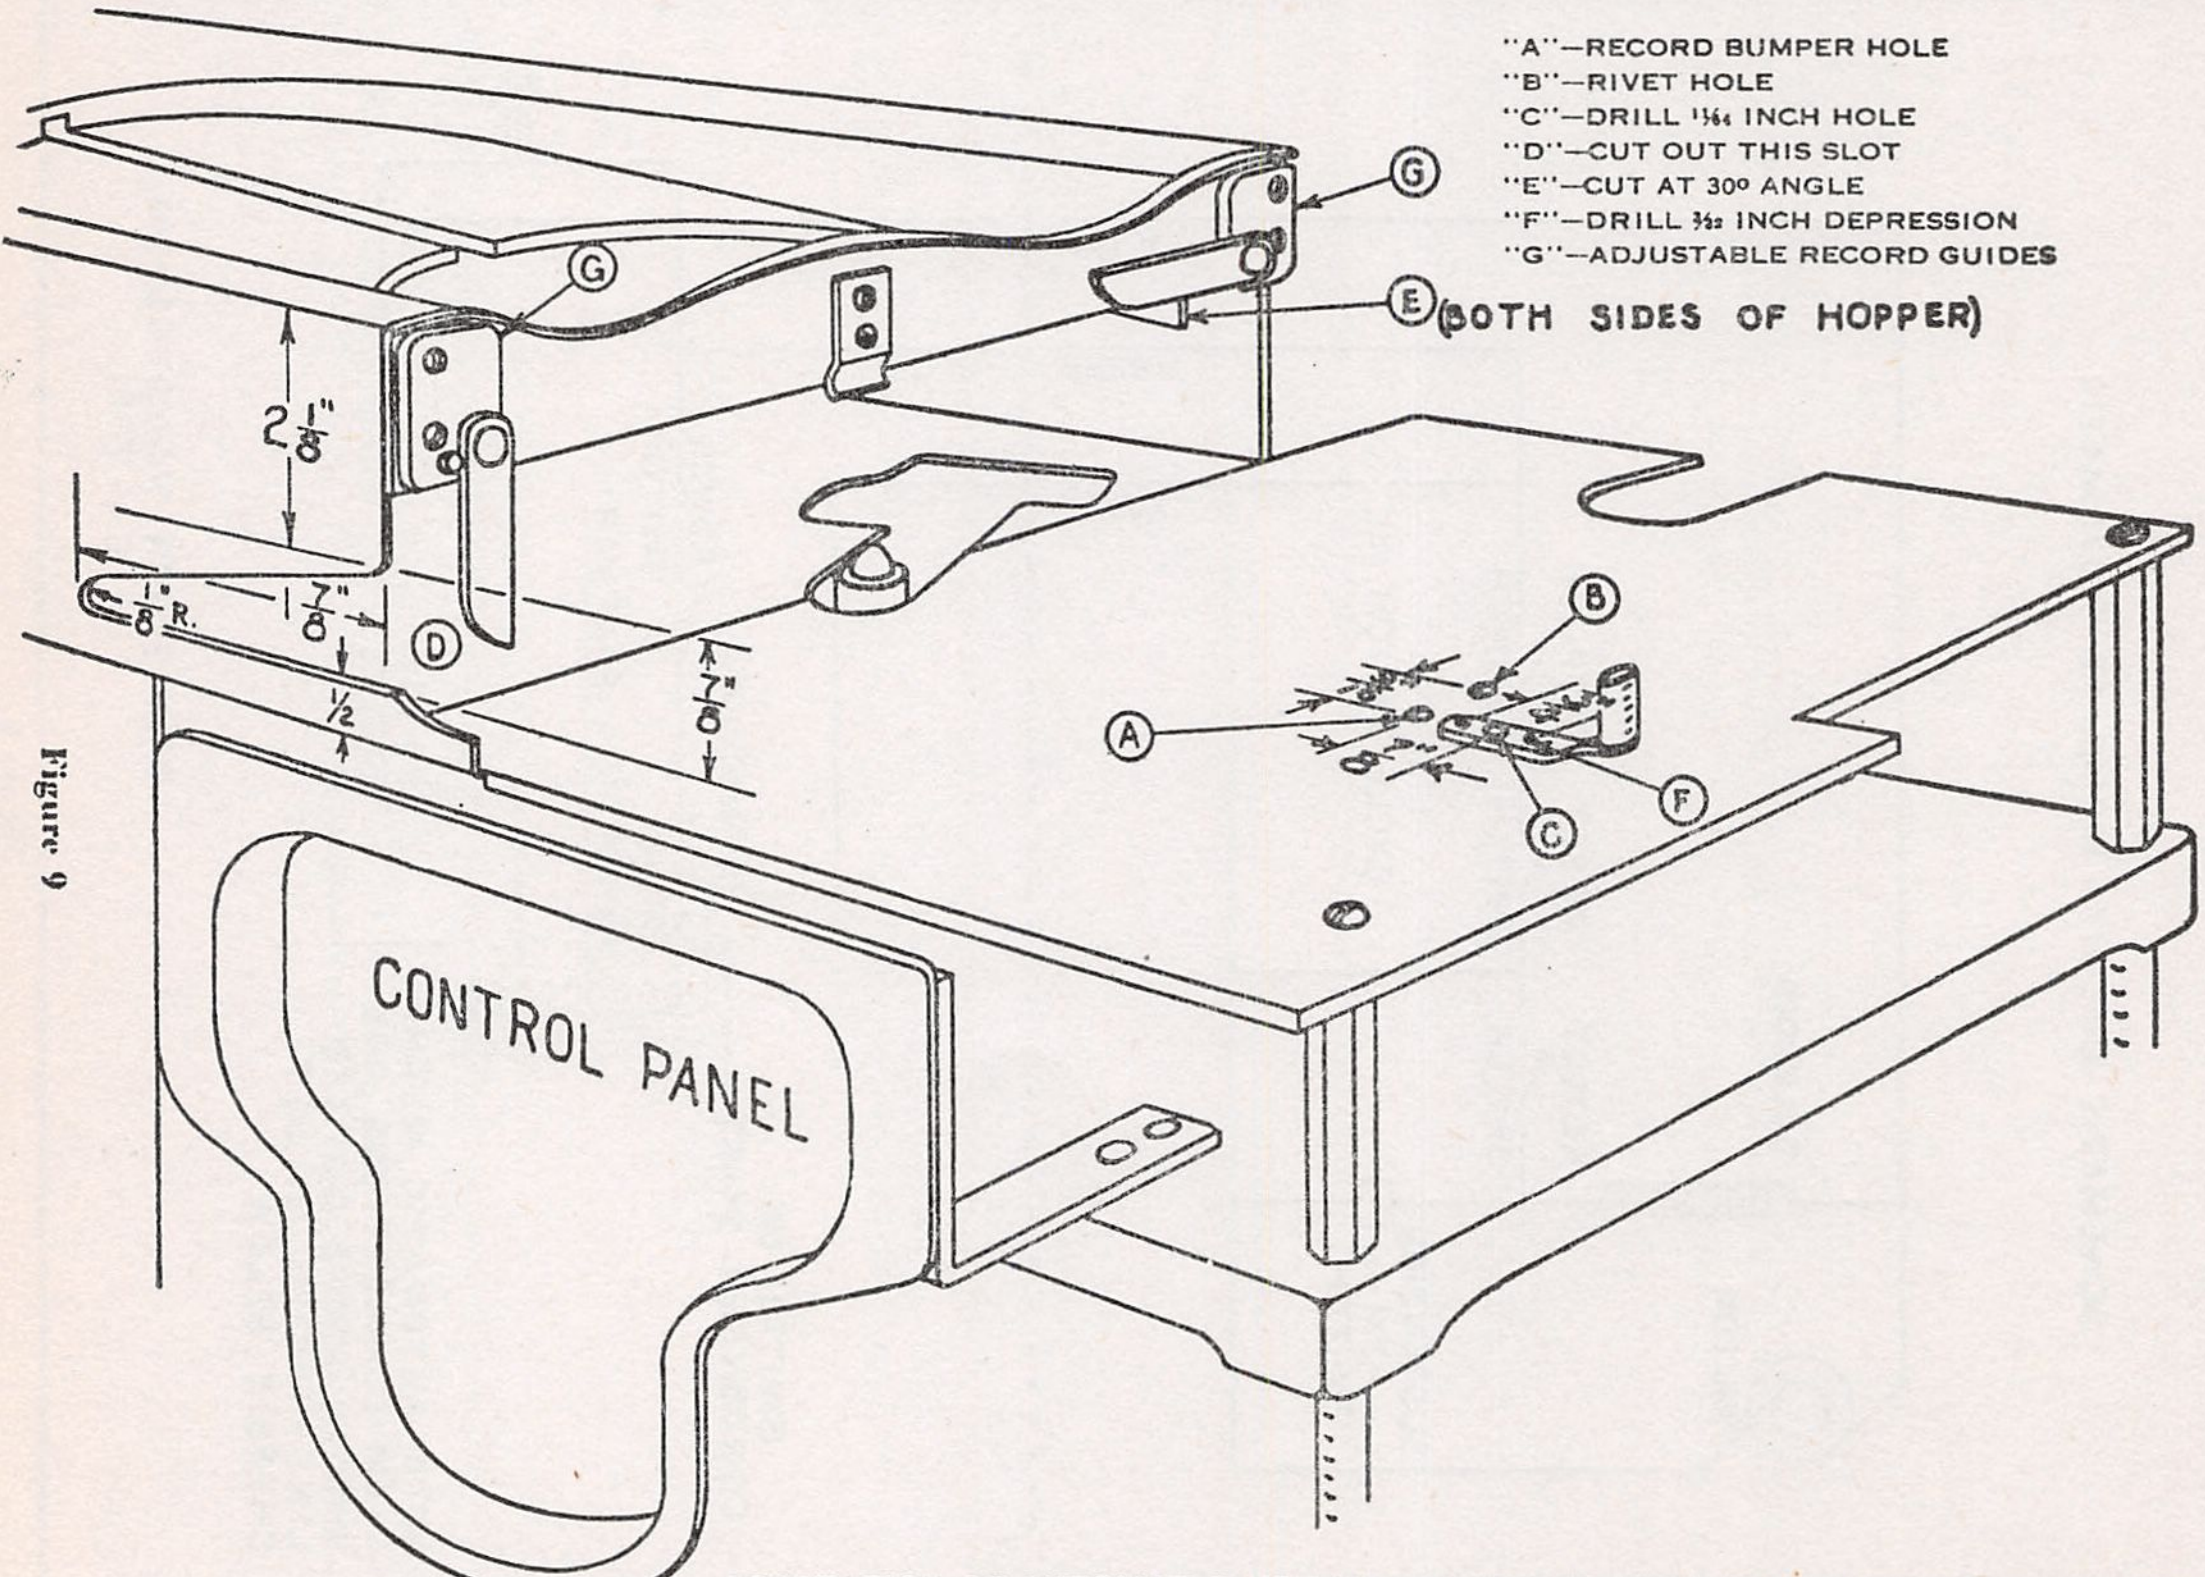
G
G
E
2 1/8"
1/8" R.
1 7/8"
D
1/2
7/8"
A
B
C
F
CONTROL PANEL

"A"—RECORD BUMPER HOLE
"B"—RIVET HOLE
"C"—DRILL 11/64 INCH HOLE
"D"—CUT OUT THIS SLOT
"E"—CUT AT 30° ANGLE
"F"—DRILL 3/32 INCH DEPRESSION
"G"—ADJUSTABLE RECORD GUIDES

(BOTH SIDES OF HOPPER)

Figure 9

ADAPTATION OF AUTOMATIC MECHANISM FOR PLAYING 12-INCH RECORDS CA-7029

MODEL 3 NC8, 5 NC8
Alignment Data

BRUNSWICK RADIO CORP.

Service Operations on X-1102 and X-1103 Chassis.

A. Adjustment of R. F. Compensating Condenser.

If it is definitely known that no other defect exists in the set, antenna or ground and if the receiver is insensitive, distorts or oscillates over any or all portions of the dial then the R. F. compensating condenser should be adjusted as follows:

(a) Tune in a long wavelength station to maximum volume, or use special test oscillator at 600 K. C.

(b) Place non-metallic screw driver in slot of compensating condenser (located beneath panel on right side, see Print CA-6039) and turn screw in a clockwise direction until the receiver goes into oscillation. Then turn screw in opposite direction until set goes out of oscillation, and will not whistle, squeal or howl on local stations. This is the correct position of the compensating condenser.

B. Adjustment of Oscillator Trimming Condenser.

If after above adjustment explained in paragraph "A" the set is still insensitive and distorts the signal, proceed to adjust the oscillator trimming condensers in the following manner:

Material needed: Special radio frequency oscillator equipped with milliammeter, non-metallic screw driver and necessary leads.

(a) Place special oscillator near receiver and secure the transfer of R.F. energy by twisting output lead from oscillator around blue antenna lead of receiver. The receiver ground connection should be connected to ground. In order that the milliammeter on oscillator panel will function as a tube voltmeter it is necessary to place this meter in series with the plate lead of the second detector tube. This is accomplished by removing the red wire from the terminal strip of the Socket Power Unit and connecting the resonance meter in series with this lead and the terminal from which it was removed. So that the current drawn by the power tube shall not flow through the resonance meter remove the red wire from the terminal strip of the Rectox unit and connect a jumper wire from the terminal left vacant to the terminal on the SPU which is now connected to the resonance meter. Turn volume control to minimum on receiver. Turn receiver on, then turn oscillator on and watch needle on resonance meter. If needle goes off scale to the left, reverse meter connections. Adjust oscillator for 1400 kilocycle operation and tune receiver to secure maximum deflection on resonance meter, turning the volume control up just far enough during tuning operation to keep needle at about three-fourths full scale deflection.

(b) Adjust trimming condenser under 2nd detector tube (condenser No. 1 in Print CA-6039) with insulated screw driver, until maximum deflection is obtained on milliammeter.

(c) Tune oscillator to 600 kilocycles and adjust trimming condenser No. 2 (to be found under oscillator tube) to maximum deflection on milliammeter.

(d) Now re-adjust at 1400 kilocycles as in paragraph "B."

Oscillator circuit is now adjusted to give 180 kilocycles beat note over entire tuning range.

C. Part 1—Adjustment and Neutralization of I. F. Transformer.

This operation is only to be attempted when Technician is sure that the lack of sensitivity or oscillation is not due to some other fault or when it is definitely known that one of the transformers is burnt out, shorted or grounded. To test the I. F. transformers, use ohmmeter, resistance bridge or voltmeter, with milliammeter, and Ohms' law, i.e., resistance is equal to the voltage divided by the current in amperes. Primary resistance should be 20 ohms, secondary 100 ohms overall or 50 ohms from grid to center tap

MODEL RPA-5
Used in P-3

BRUNSWICK RADIO CORPORATION

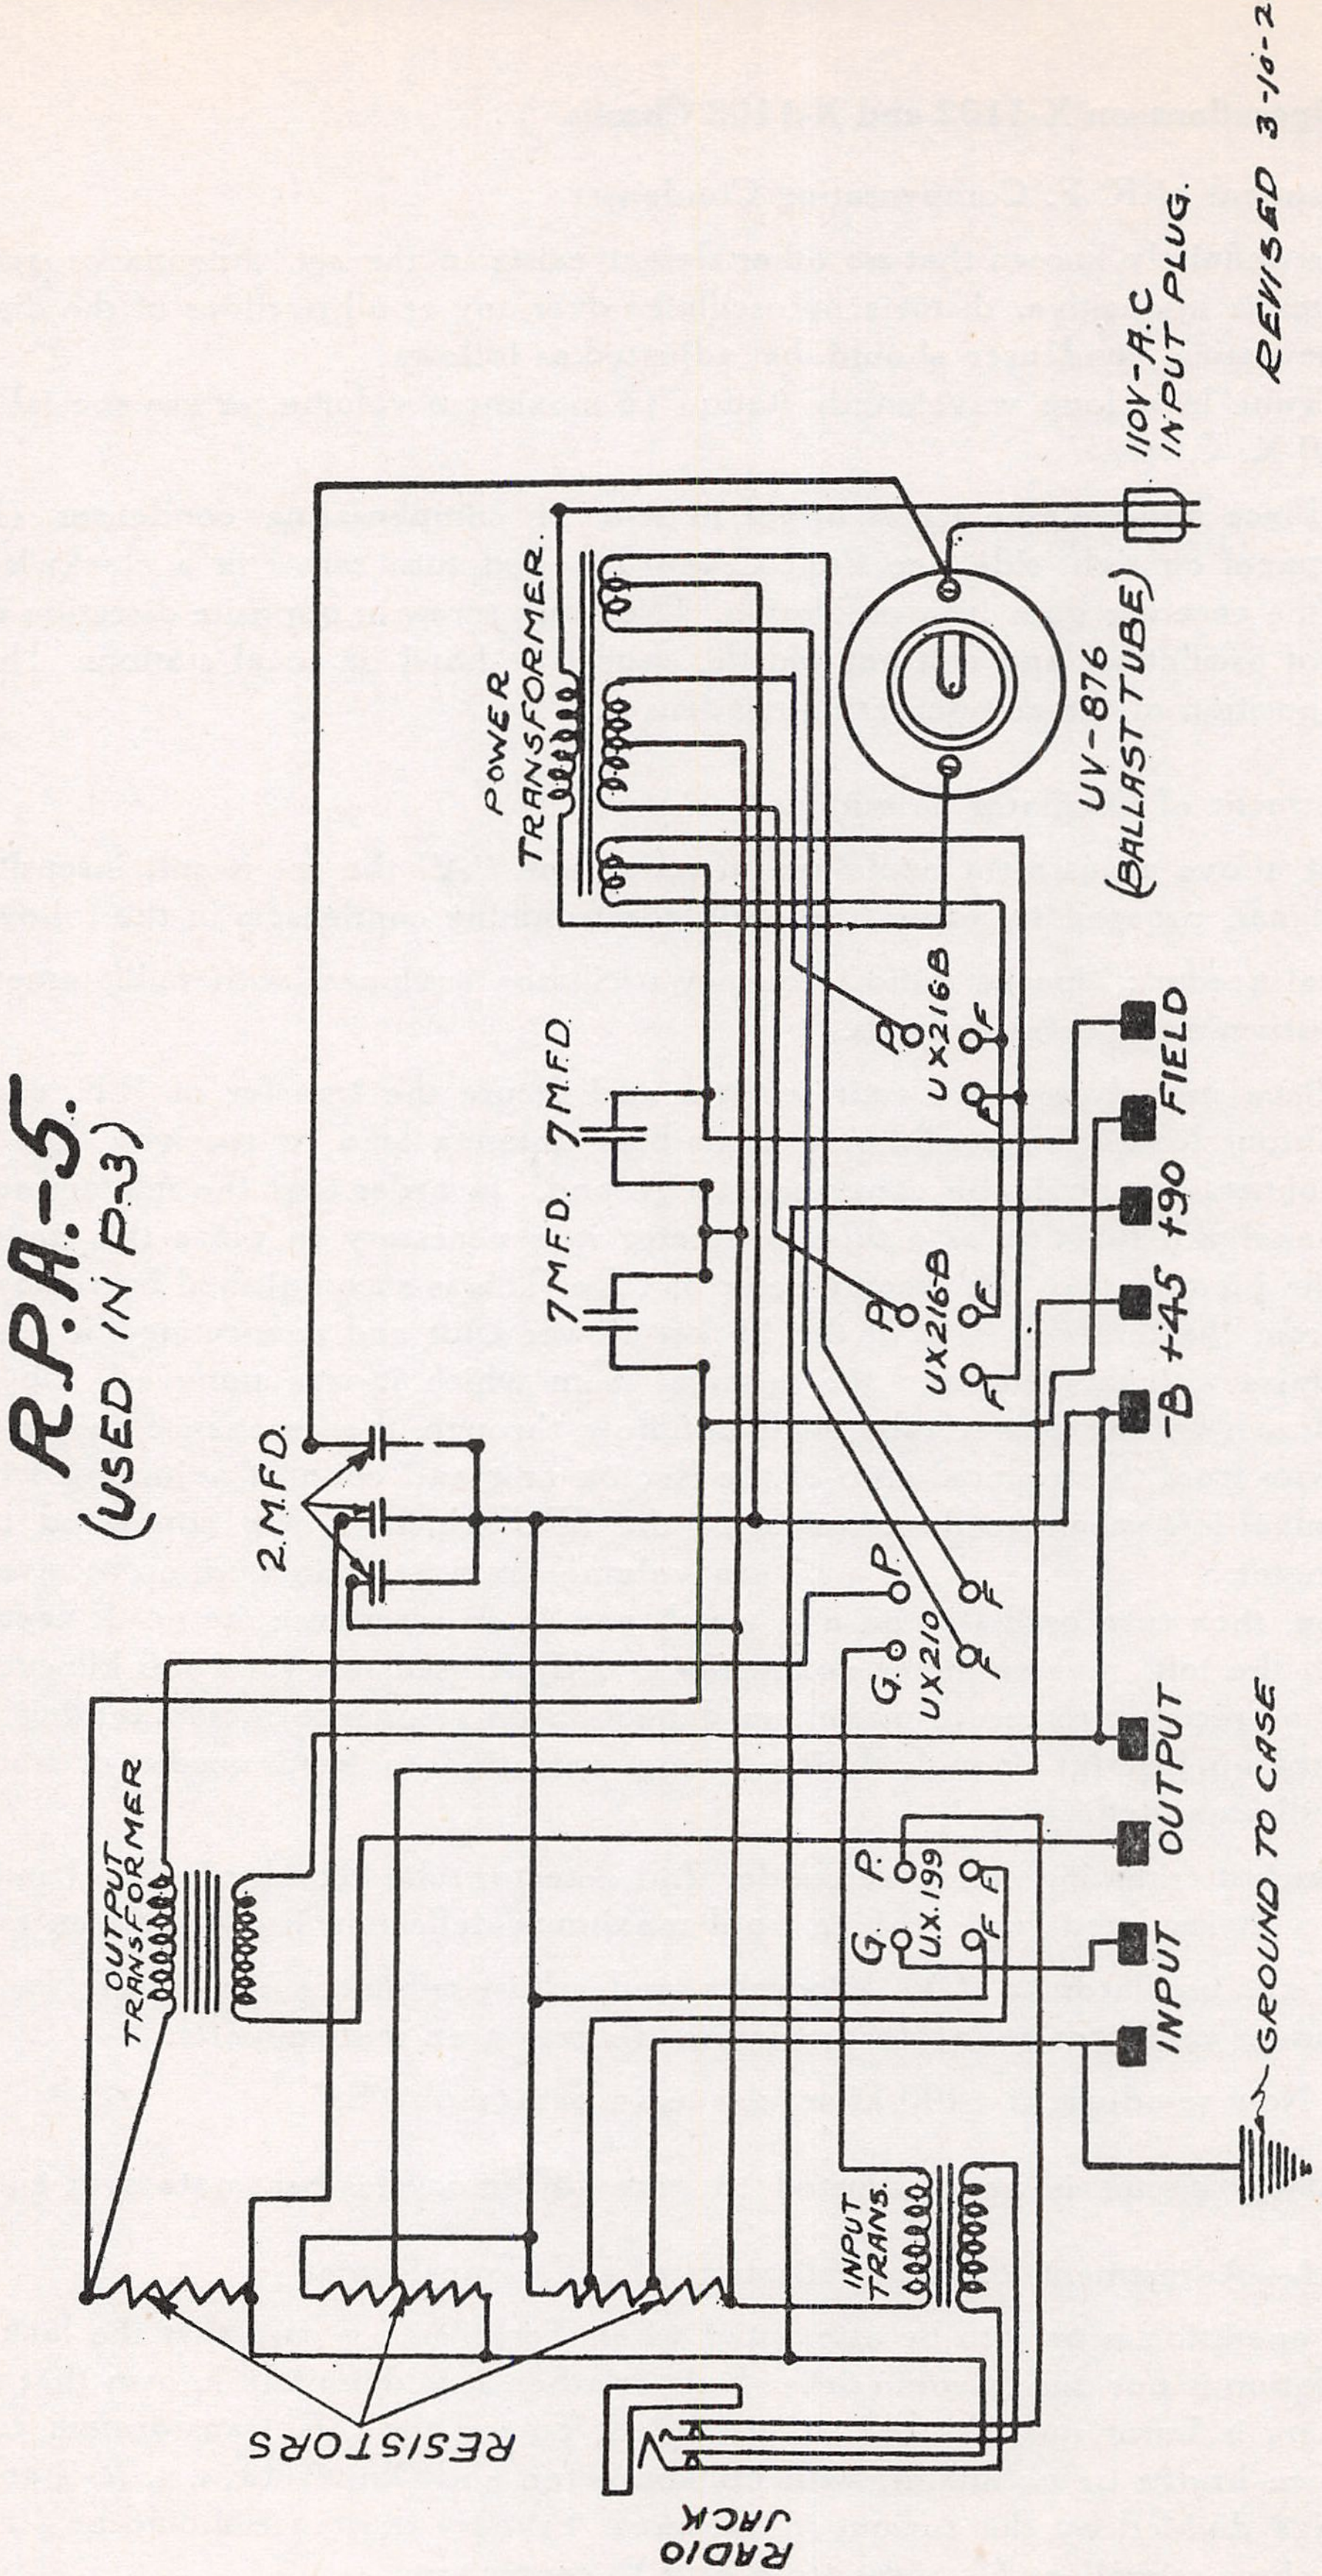
R.P.A.-5.
(USED IN P-3)
REVISED 3-10-26.
110V-A.C INPUT PLUG.
UV-876 (BALLAST TUBE)
POWER TRANSFORMER.
UX216B
P
F
F
7 MFD.
7 MFD.
UX216-B
P
F
F
FIELD
+90
+45
-B
2.MFD.
UX210
G.
P.
F
F
OUTPUT
UX.199
G.
P.
F
F
INPUT
GROUND TO CASE
OUTPUT TRANSFORMER
INPUT TRANS.
RESISTORS
RADIO JACK

MODEL M-501

BULOVA WATCH COMPANY

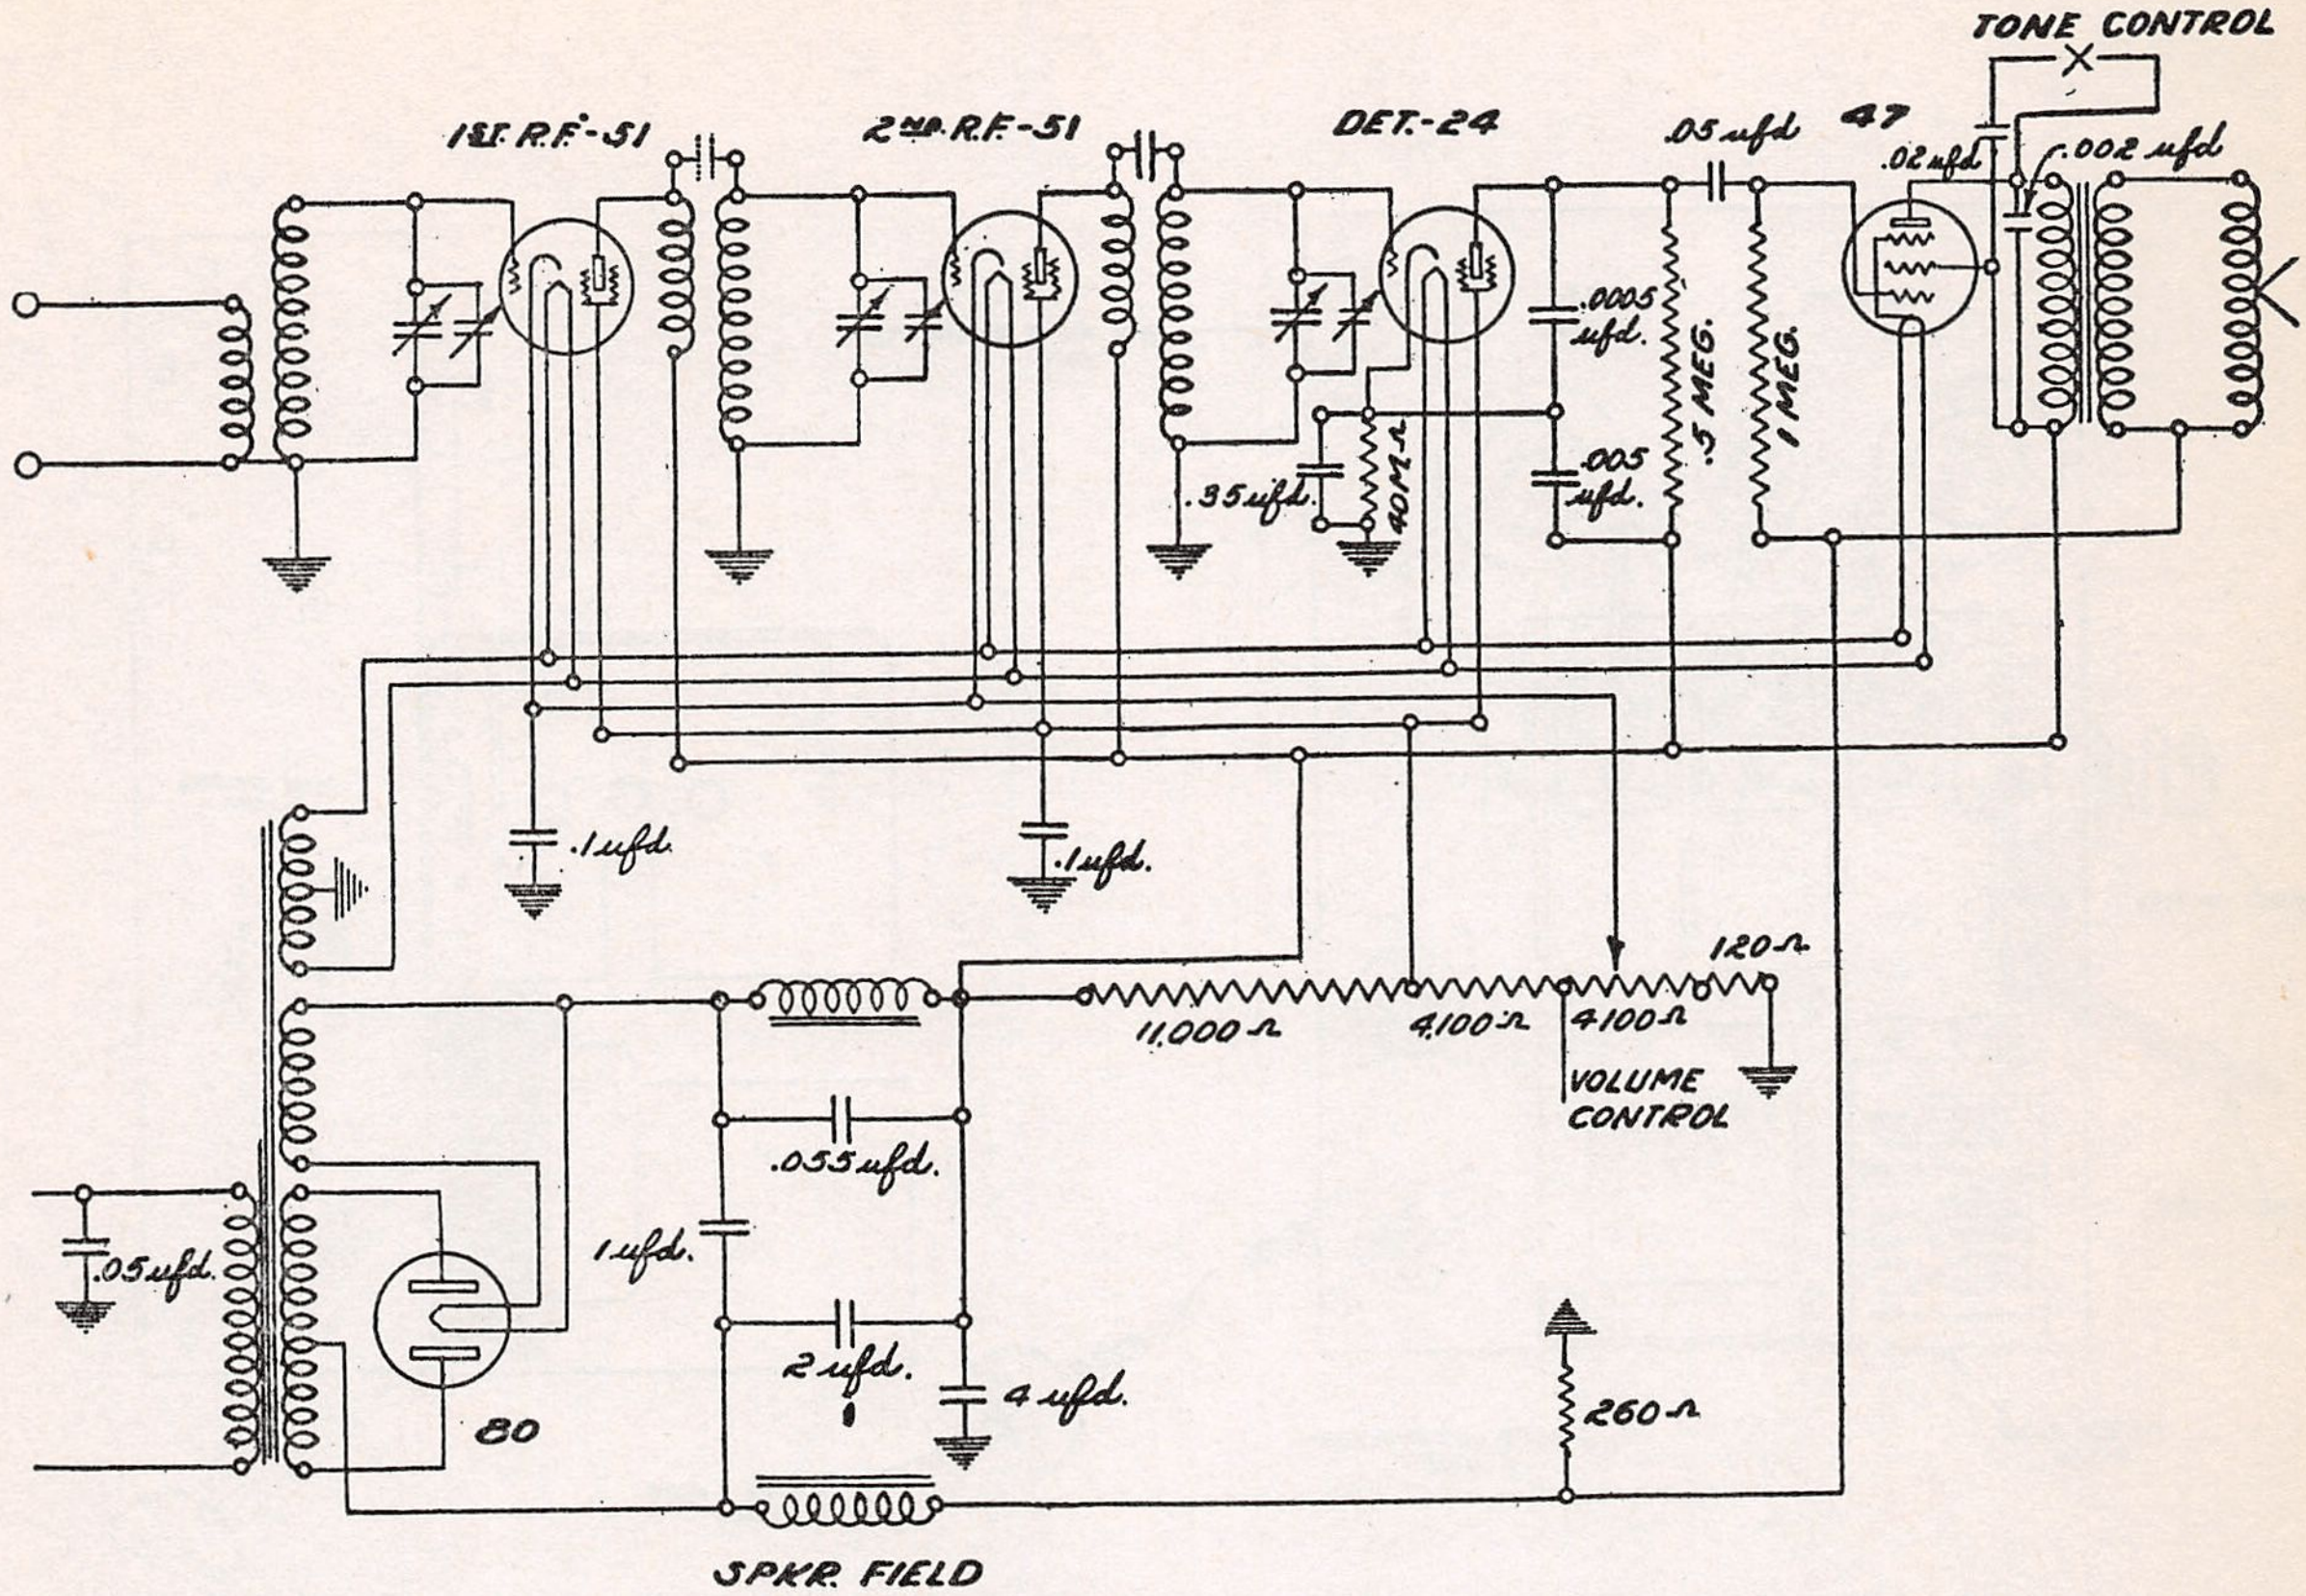

CONTINUITY TEST TABLES

(Using 10-volt scale 1,000 ohms per volt: meter with 6-volt battery)

Circuit Tested	From	To	Reading	Your Reading
Ant. coil pri.	Ant. post	Ground	6.	
Ant. coil sec.	Grid 1st tube	Ground	6.	
1st R. F. Plate ckt.	Plate of tube	Brown lead of filter pack	6.	
1st R. F. Screen ckt.	Screen prong	Center lead Voltage divider	6.	
1st R. F. Cathode ckt	Cath. prong	Center tap Volume Control "ON"	6.	
2nd R. F. Grid ckt.	Grid Clip	Ground	6.	
2nd R. F. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
2nd R. F. Screen ckt.	Screen prong	Center tap Voltage divider	6.	
2nd R. F. Cathode ckt.	Cathode prong	Center tap Volume Control "ON"	6.	
Det. Grid ckt.	Gird Clip	Ground	6.	
Det. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
Det. Screen ckt	Screen prong	Center Voltage divider	6.	
Det. Cathode ckt	Cathode prong	Ground	1.4	
P. Z. cont. grid	Grid prong	Sec output trans. black lead.	(slight deflection)	
P. Z. space chg. grid ckt.	S. C. Grid Prong	Brown lead of filter pack	6.	
P. Z. Plate ckt.	Plate prong	Brown lead of filter pack	5.7	
Output Sec.	One side	Other side	5.9	
Pri Power Trans.	Across A. C. Plug	Switch on	5.9	
Hi volts Sec.	Across 280 plate prongs		5.6	
Speaker field	Red wire	Green Wire	5.4	
Speaker voice coil	Green wire	Black	6.	
Filter Choke	Across red leads		5.6	
Voltage divider	Ground	Brown lead of filter pack	2.2	

RESISTANCE TABLE

(Using 10-volt range meter 1,000 ohms per volt and 6-volt battery)

Item	Color Code*	From	To	Reading	Your Reading	Resistance in Ohms
Det. Cath. Resistor	Yel., Blk., Or.	Det. Cath.	Gnd.	1.3		40,000
Pent. Grid Resistor	Br. Blk. Green	Pent Grid	Spkr. Field	Slight Deflection		1,000,000
Wire-Wound	Black	VoiceCoil.Black	Gnd.	5.9		260
Voltage Divider. Short End	Black	Volume Cont. Green Lead	S. G. Ckt.	4.2		4,100
Voltage Divider, Long End	Black	Plate	S. G. Ckt.	3.		11,000
Det. Plate Resistor	Gr., Blk., Yellow	Det. Plate	Pent. Space Chg. Grid.	.1		500,000
Vol. Control "on"		Gnd.	R. F. Cathode	4.2		4,100

*Color code. read body color first, tip second and dot last.

MODEL M-501

BULOVA WATCH COMPANY

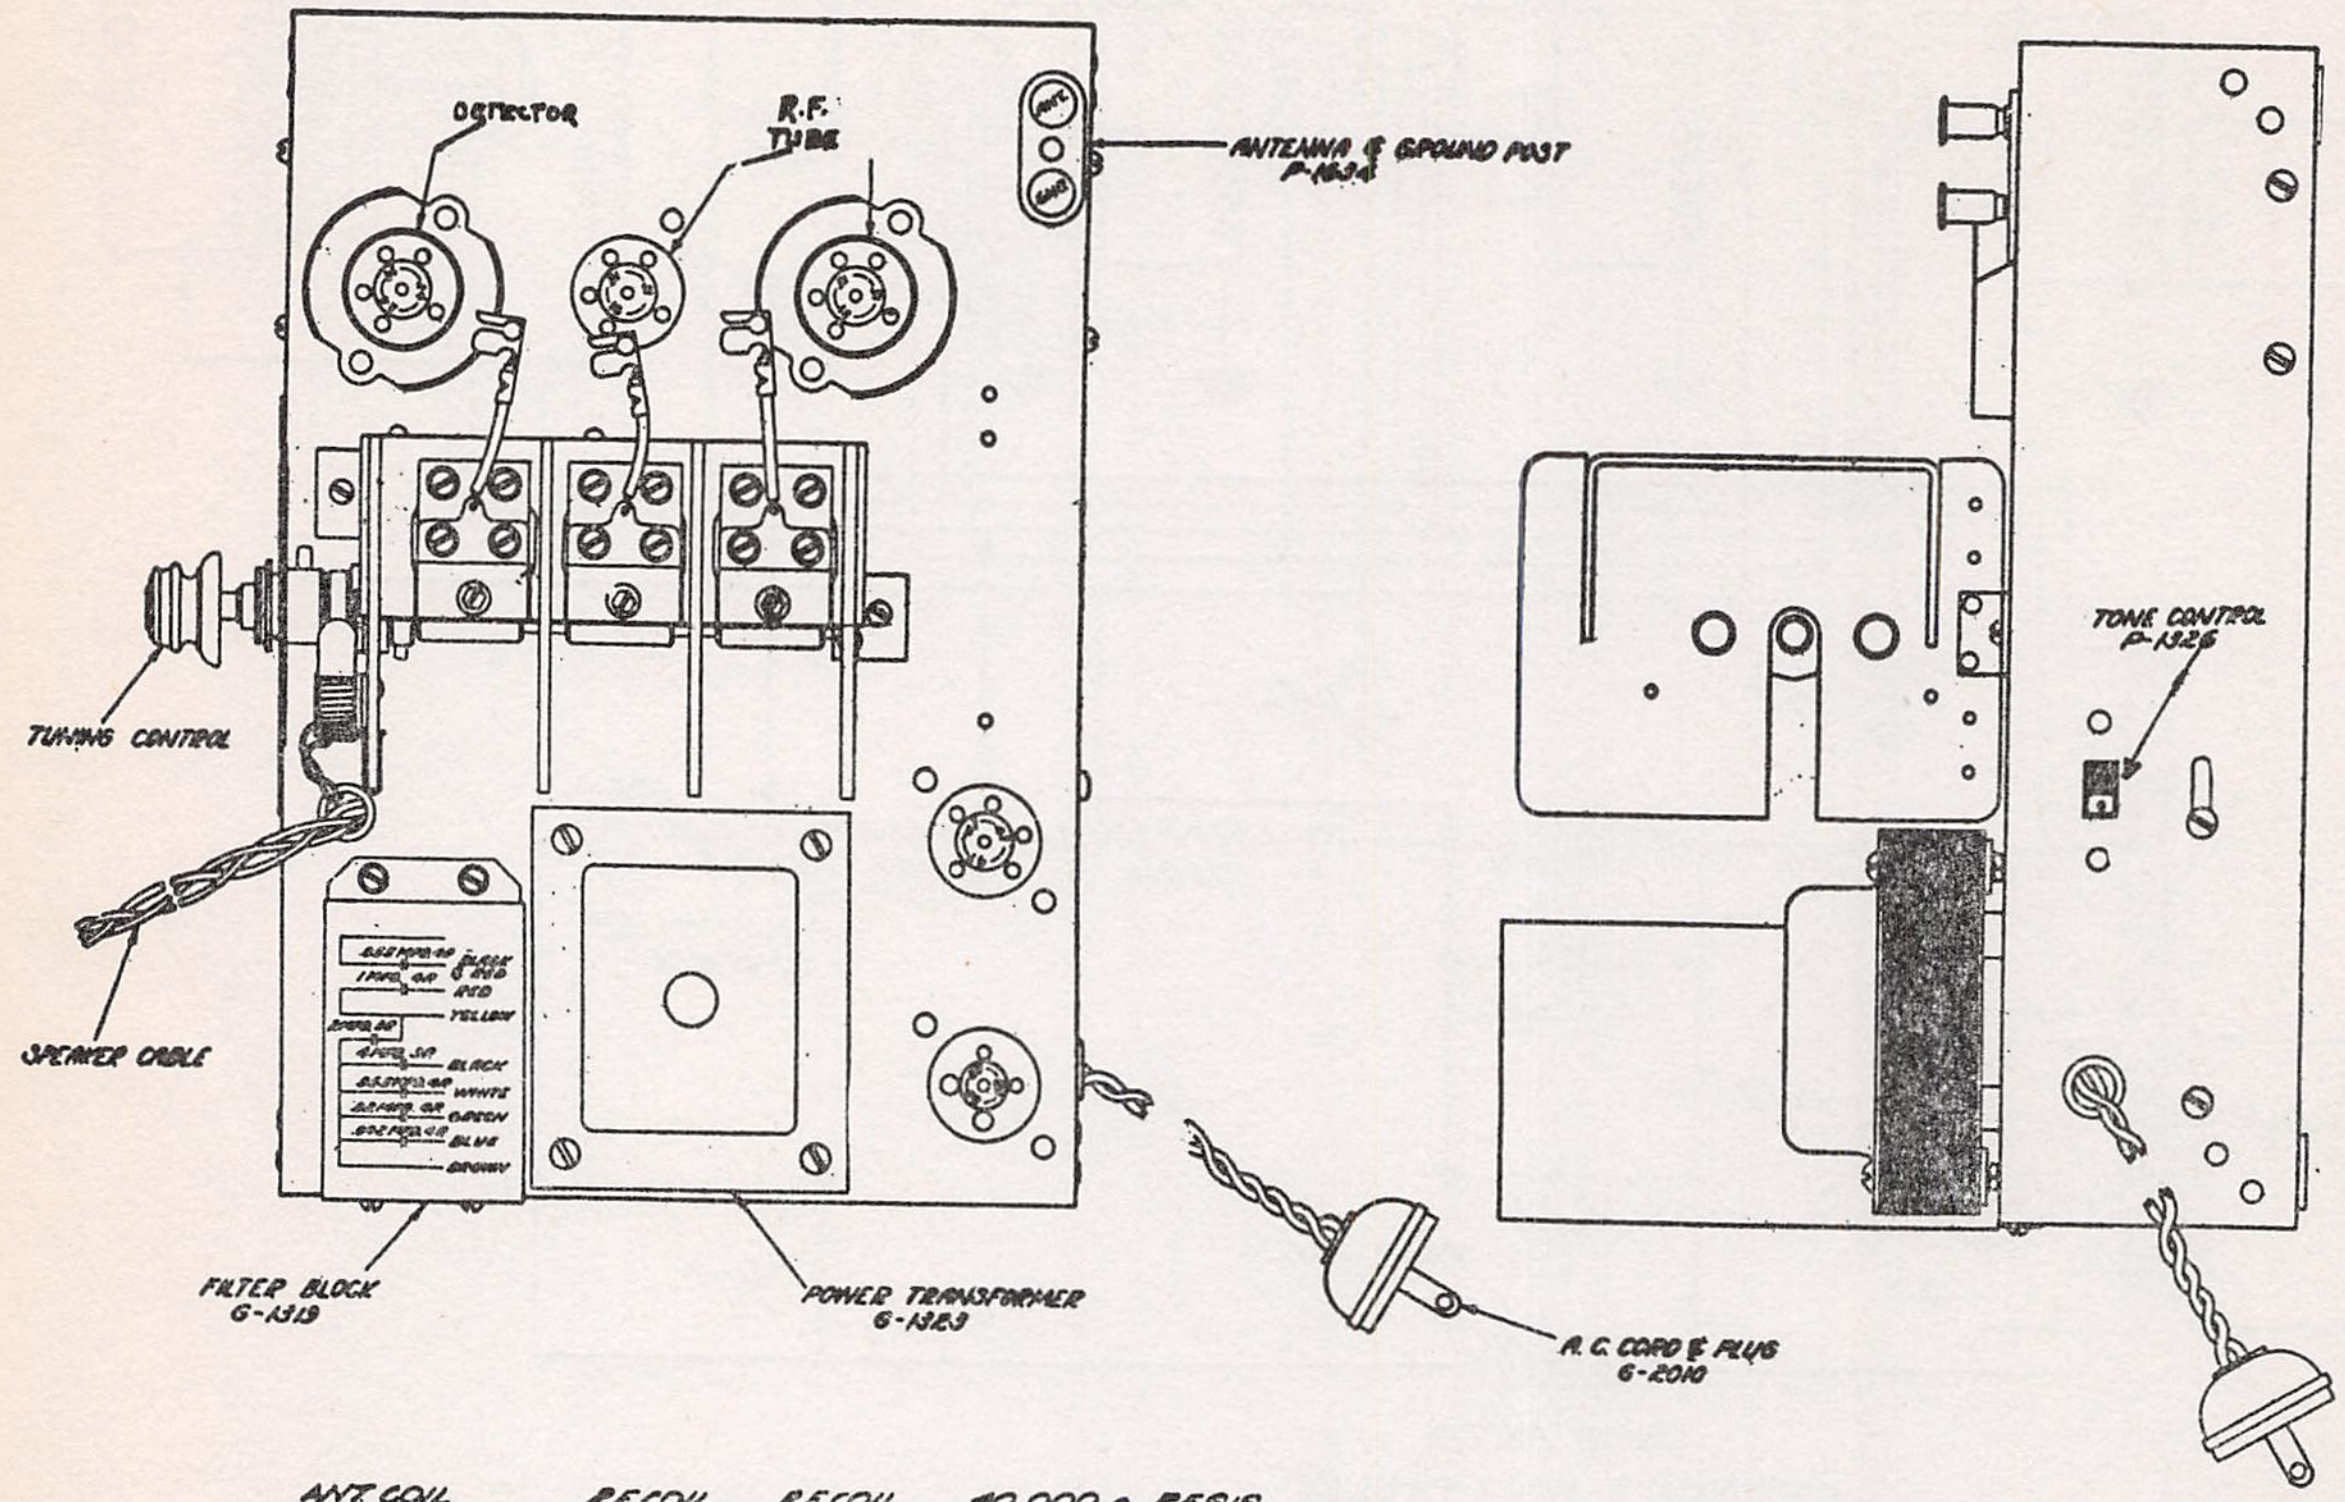
DETECTOR
R.F. TUBE
ANTENNA & GROUND POST P-1634
TUNING CONTROL
SPEAKER CABLE
BLACK & RED
RED
YELLOW
BLACK
WHITE
GREEN
BLUE
BROWN
FILTER BLOCK G-1319
POWER TRANSFORMER G-1323
A.C. CORD & PLUG G-2010
TONE CONTROL P-1326

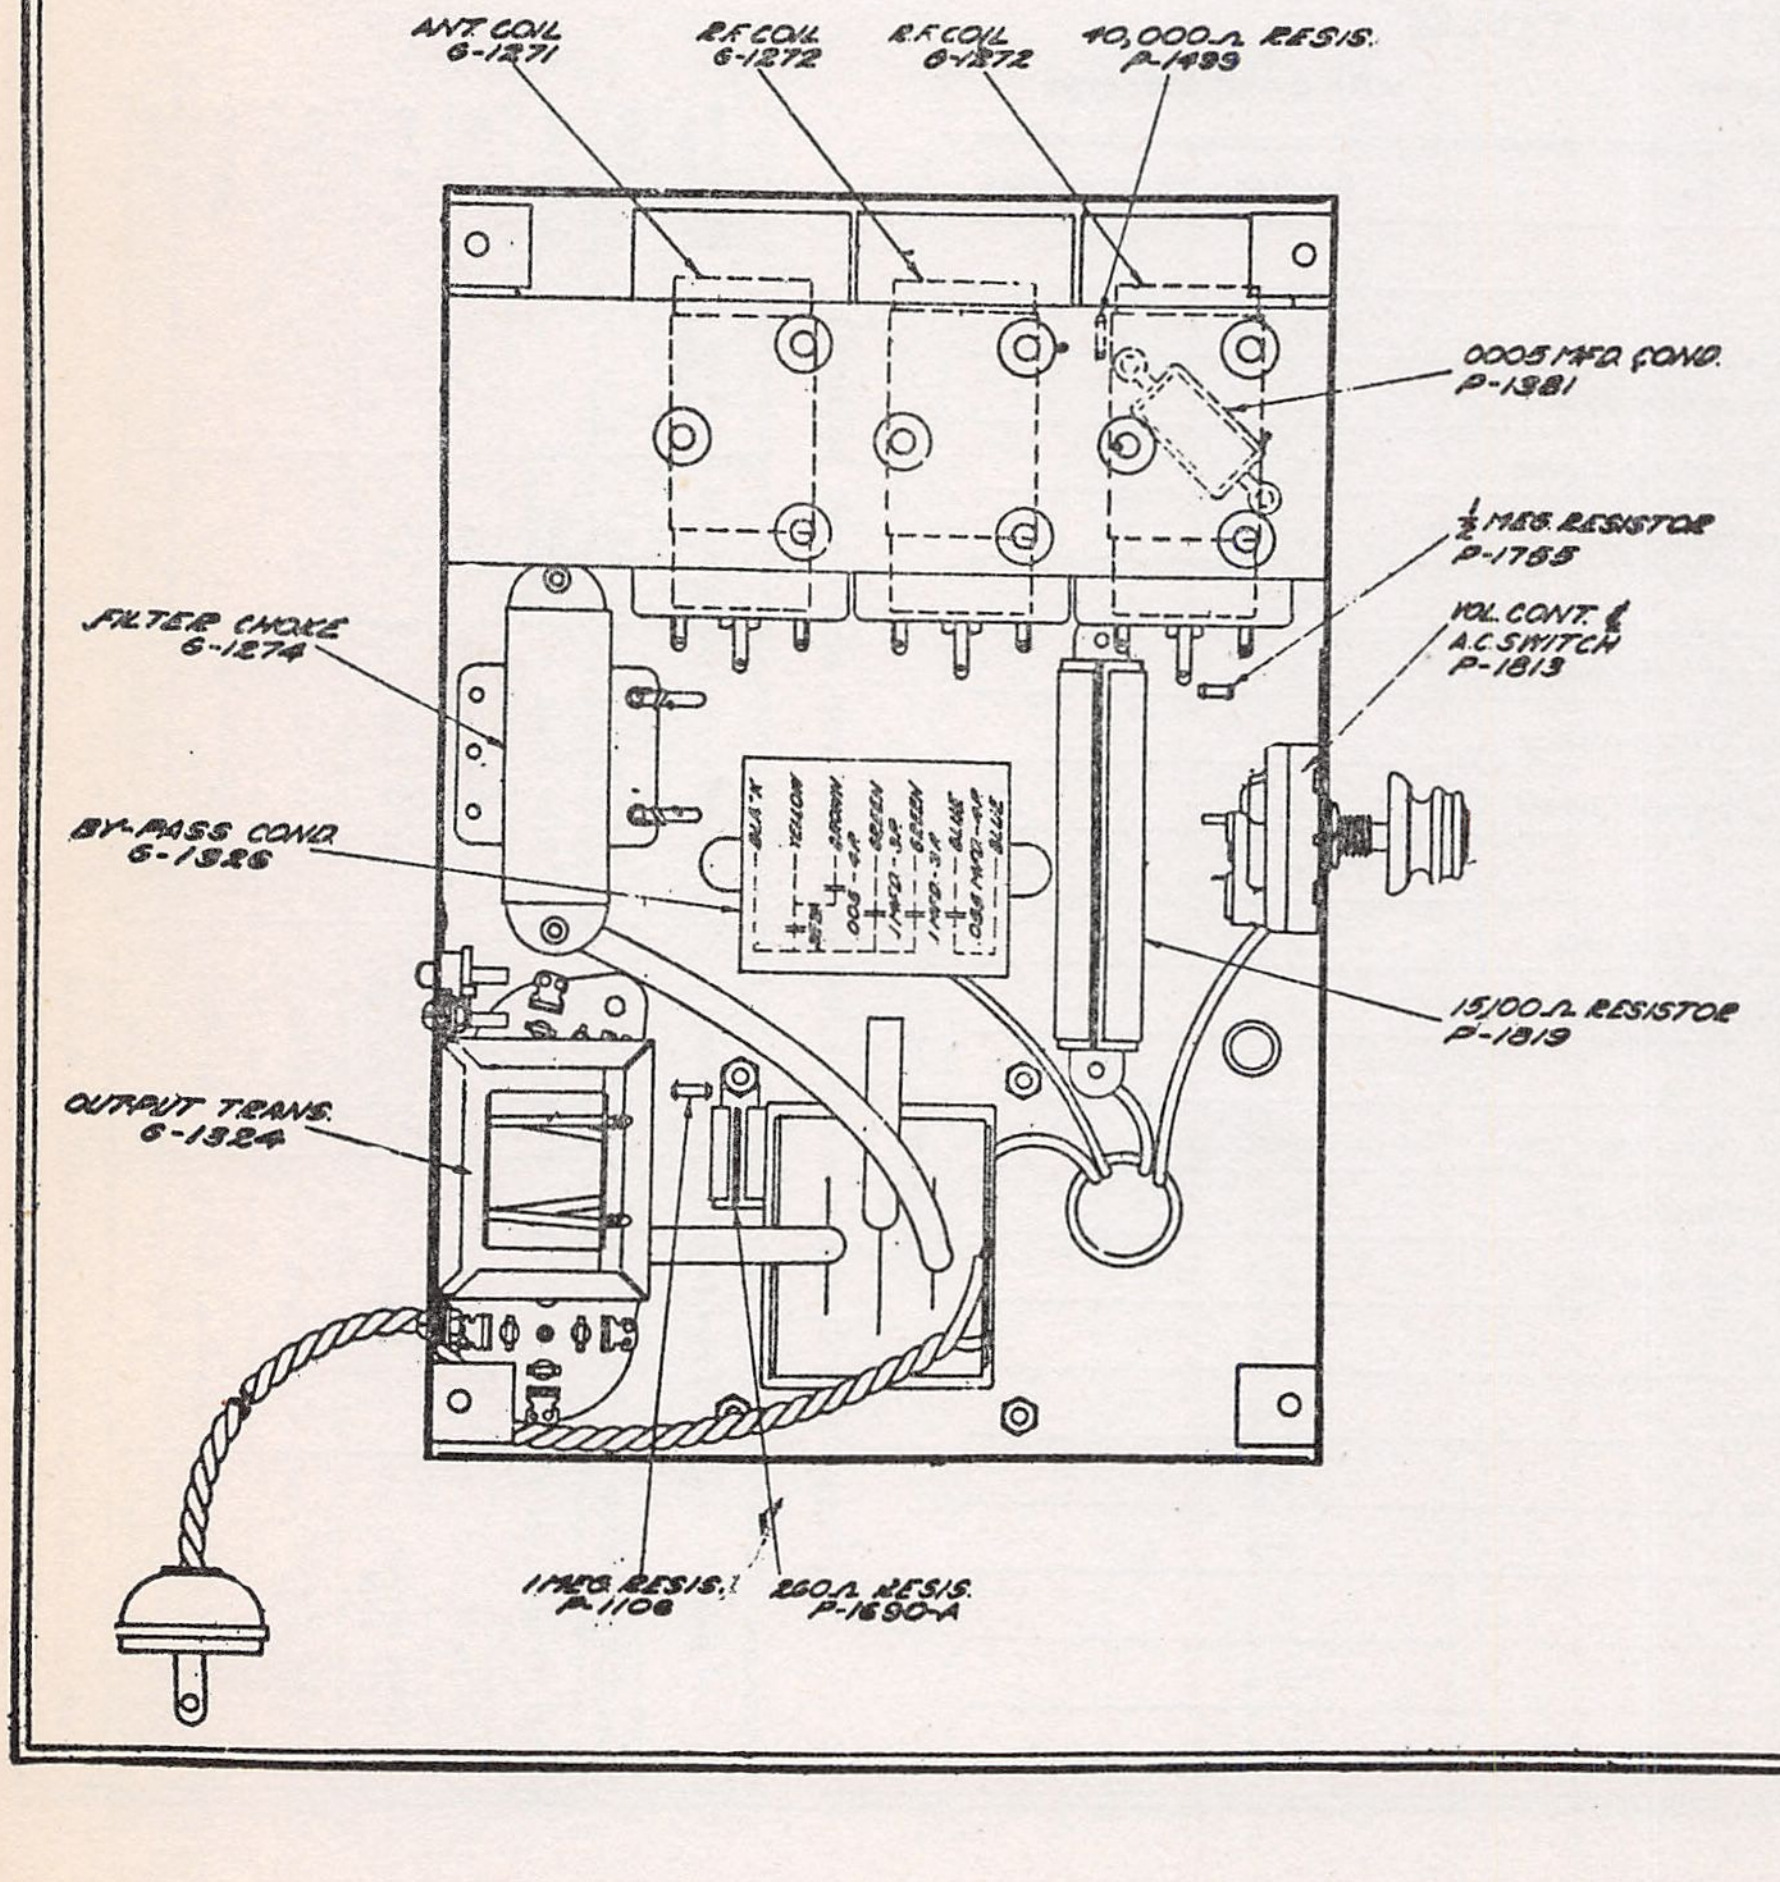
ANT. COIL G-1271
R.F. COIL G-1272
R.F. COIL G-1272
40,000Ω RESIS. P-1439
.0005 MFD. COND. P-1381
½ MEG. RESISTOR P-1765
VOL. CONT. & A.C. SWITCH P-1813
FILTER CHOKE G-1274
BY-PASS COND. G-1326
BLACK
YELLOW
BROWN
GREEN
GREEN
BLUE
BLUE
15,100Ω RESISTOR P-1819
OUTPUT TRANS. G-1324
1 MEG. RESIS. P-1106
260Ω RESIS. P-1690-A

VOLTAGE ANALYSIS

READINGS TAKEN WITH WESTON MODEL 565 ANALYZER

No.	Stage	Type Tube	Fil. Volts	Plate Volts	Cont. Grid Volts	Cath. Volts	S. G. Volts	Ip. Normal
1	1st R. F.	C. L. 51	2.1	225	2.1	2	75	5
2	2nd R. F.	C. L. 51	2.1	230	2.2	2	75	4.5
3	Det.	C. L. 24	2.1	160*	7	7.5	75	02
4	Output	C. L. 47	2.1	215	5*	0	225	26.5
5	Rect.	C. L. 80	4.8	280				†30

*Reading dependent upon resistance of meter.

†Reading taken for one anode only: 60 milliamperes would be about *correct.

Volume control position full. Line voltage 115—60 cycle.

BULOVA WATCH COMPANY

MODEL M-701
MODEL G-781

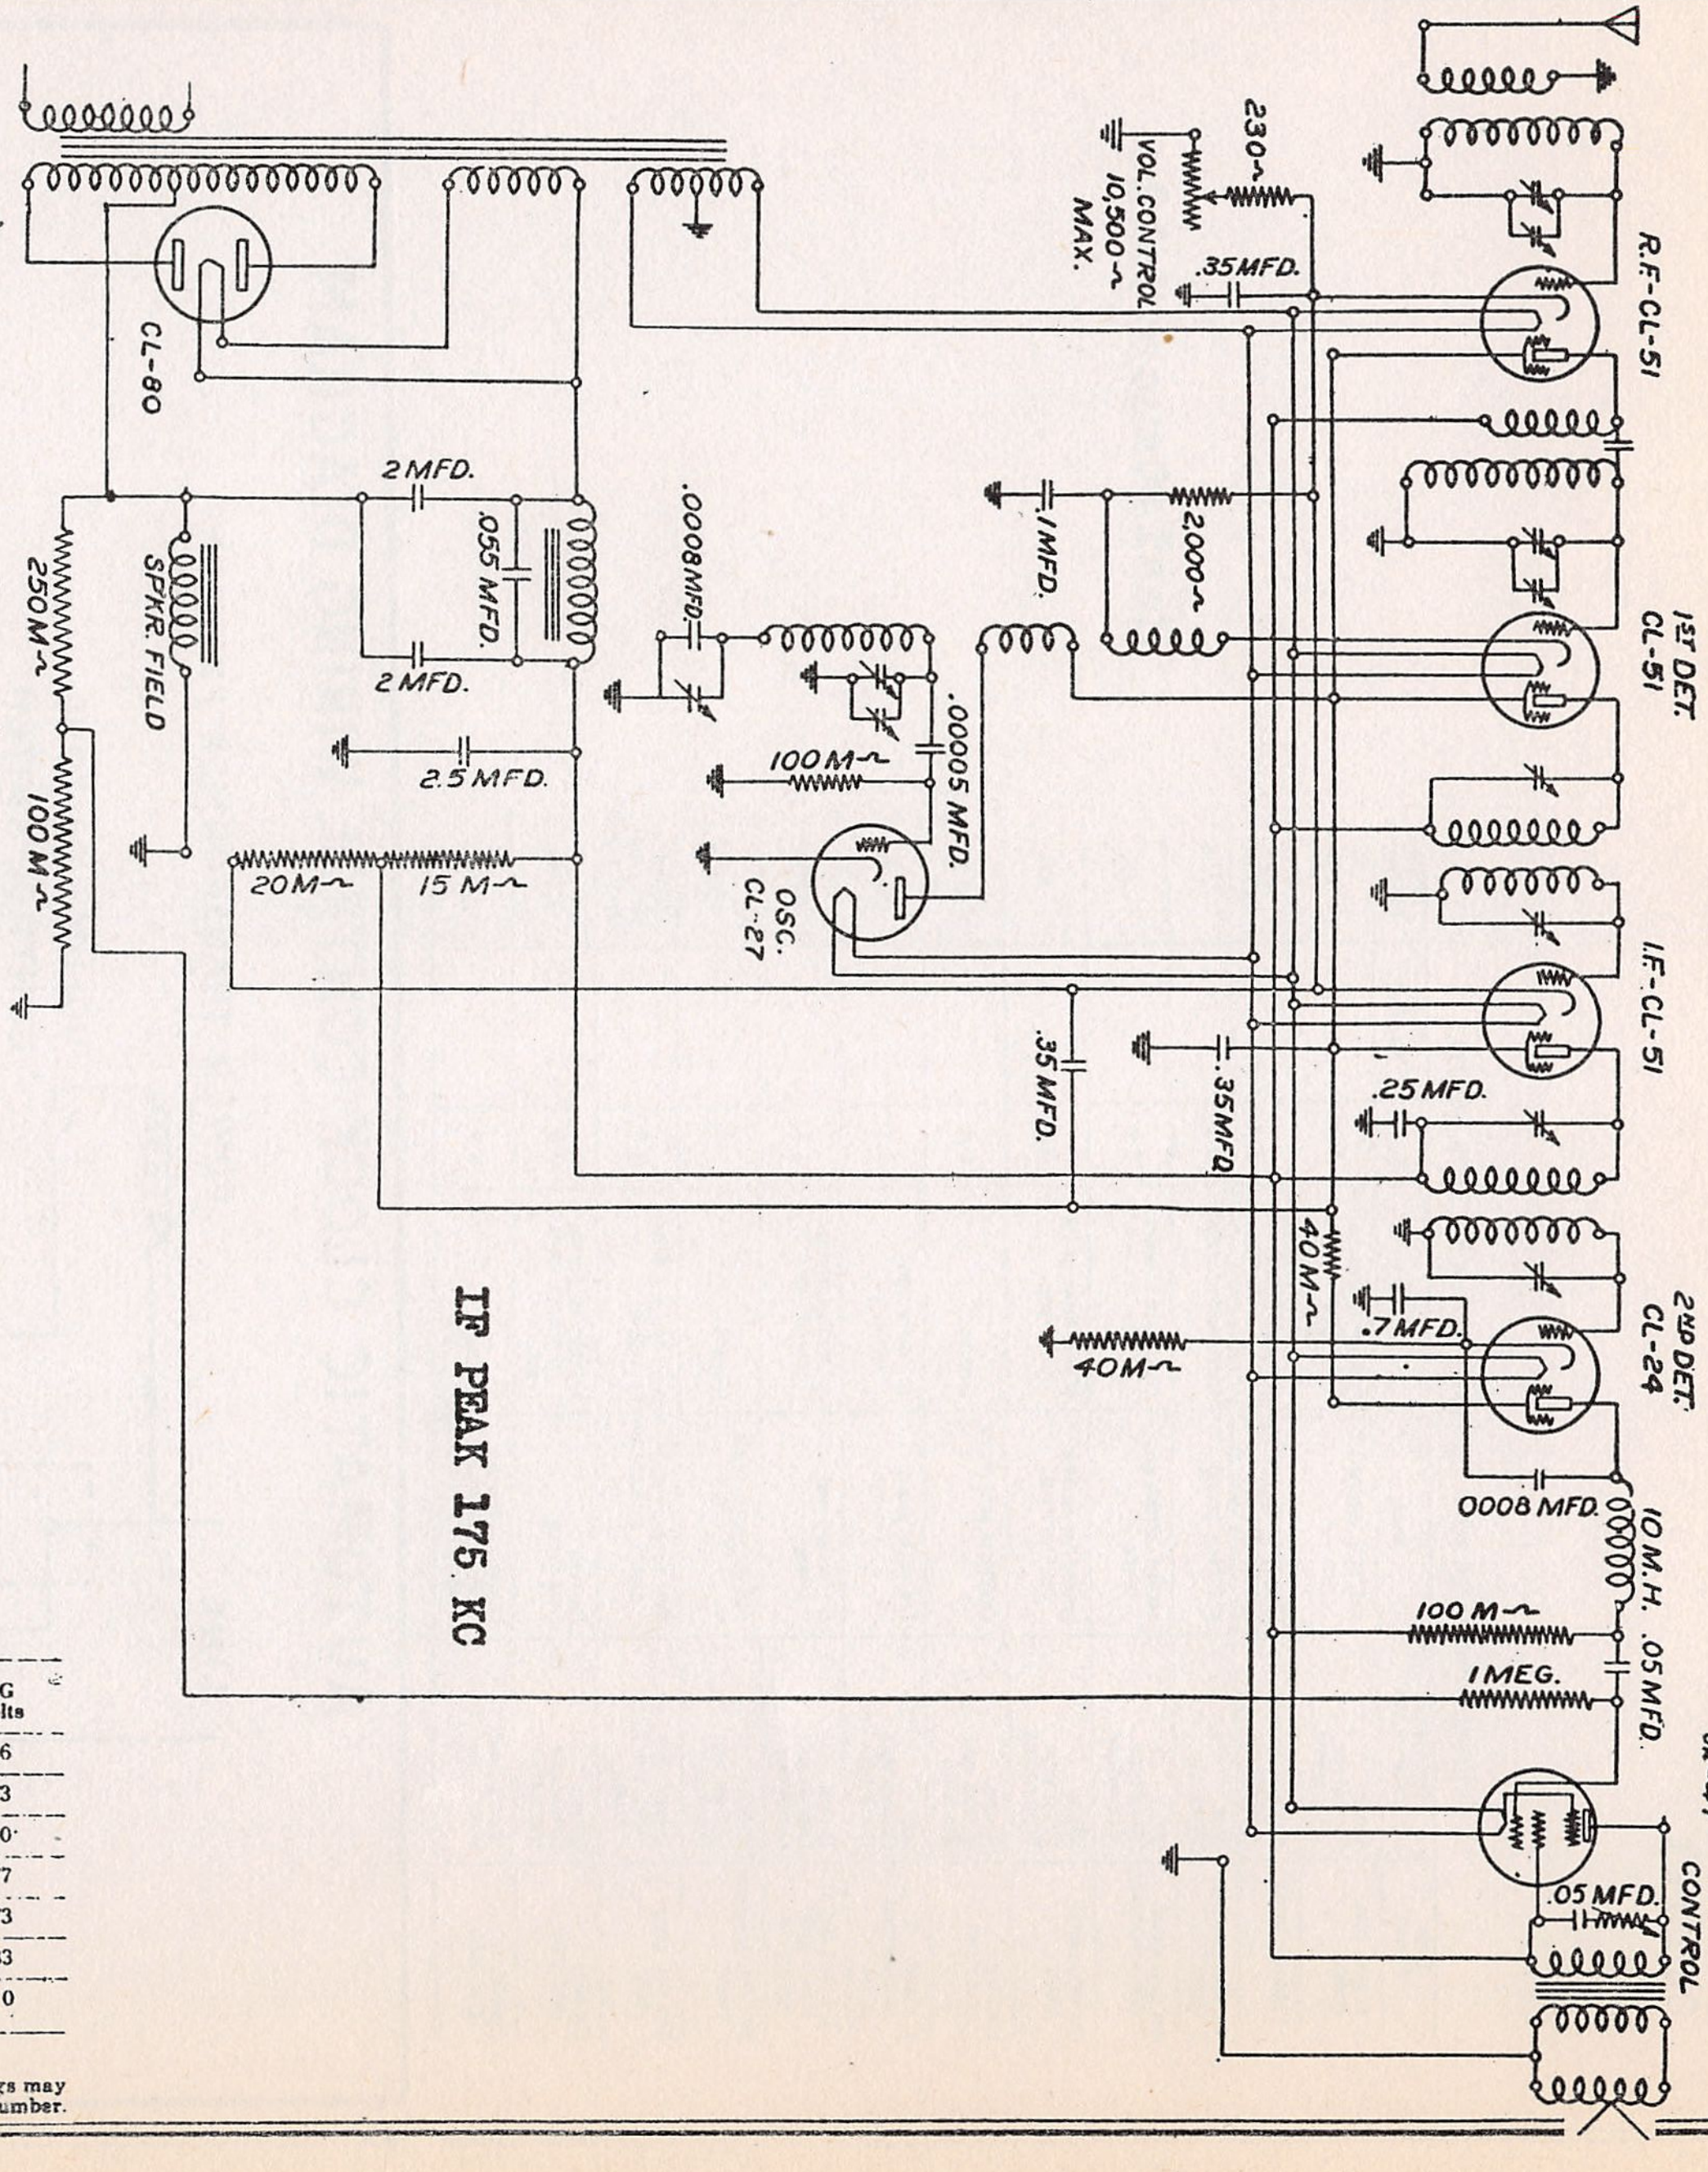
R.F.-CL-51
1ST DET. CL-51
I.F.-CL-51
2ND DET. CL-24
CL-PZ OR -47
TONE CONTROL
10 M.H.
.05 MFD.
.0008 MFD.
100 M-~
1 MEG.
.05 MFD.
.25 MFD.
.7 MFD.
40 M-~
40M-~
230-~
.35 MFD.
VOL. CONTROL 10,500-~ MAX.
2,000-~
1 MFD.
.35 MFD.
.35 MFD.
.00005 MFD.
100 M-~
OSC. CL-27
.0008 MFD.
.055 MFD.
2 MFD.
2 MFD.
2.5 MFD.
15 M-~
20 M-~
CL-80
SPKR. FIELD
250 M-~
100 M-~

IF PEAK 175 KC

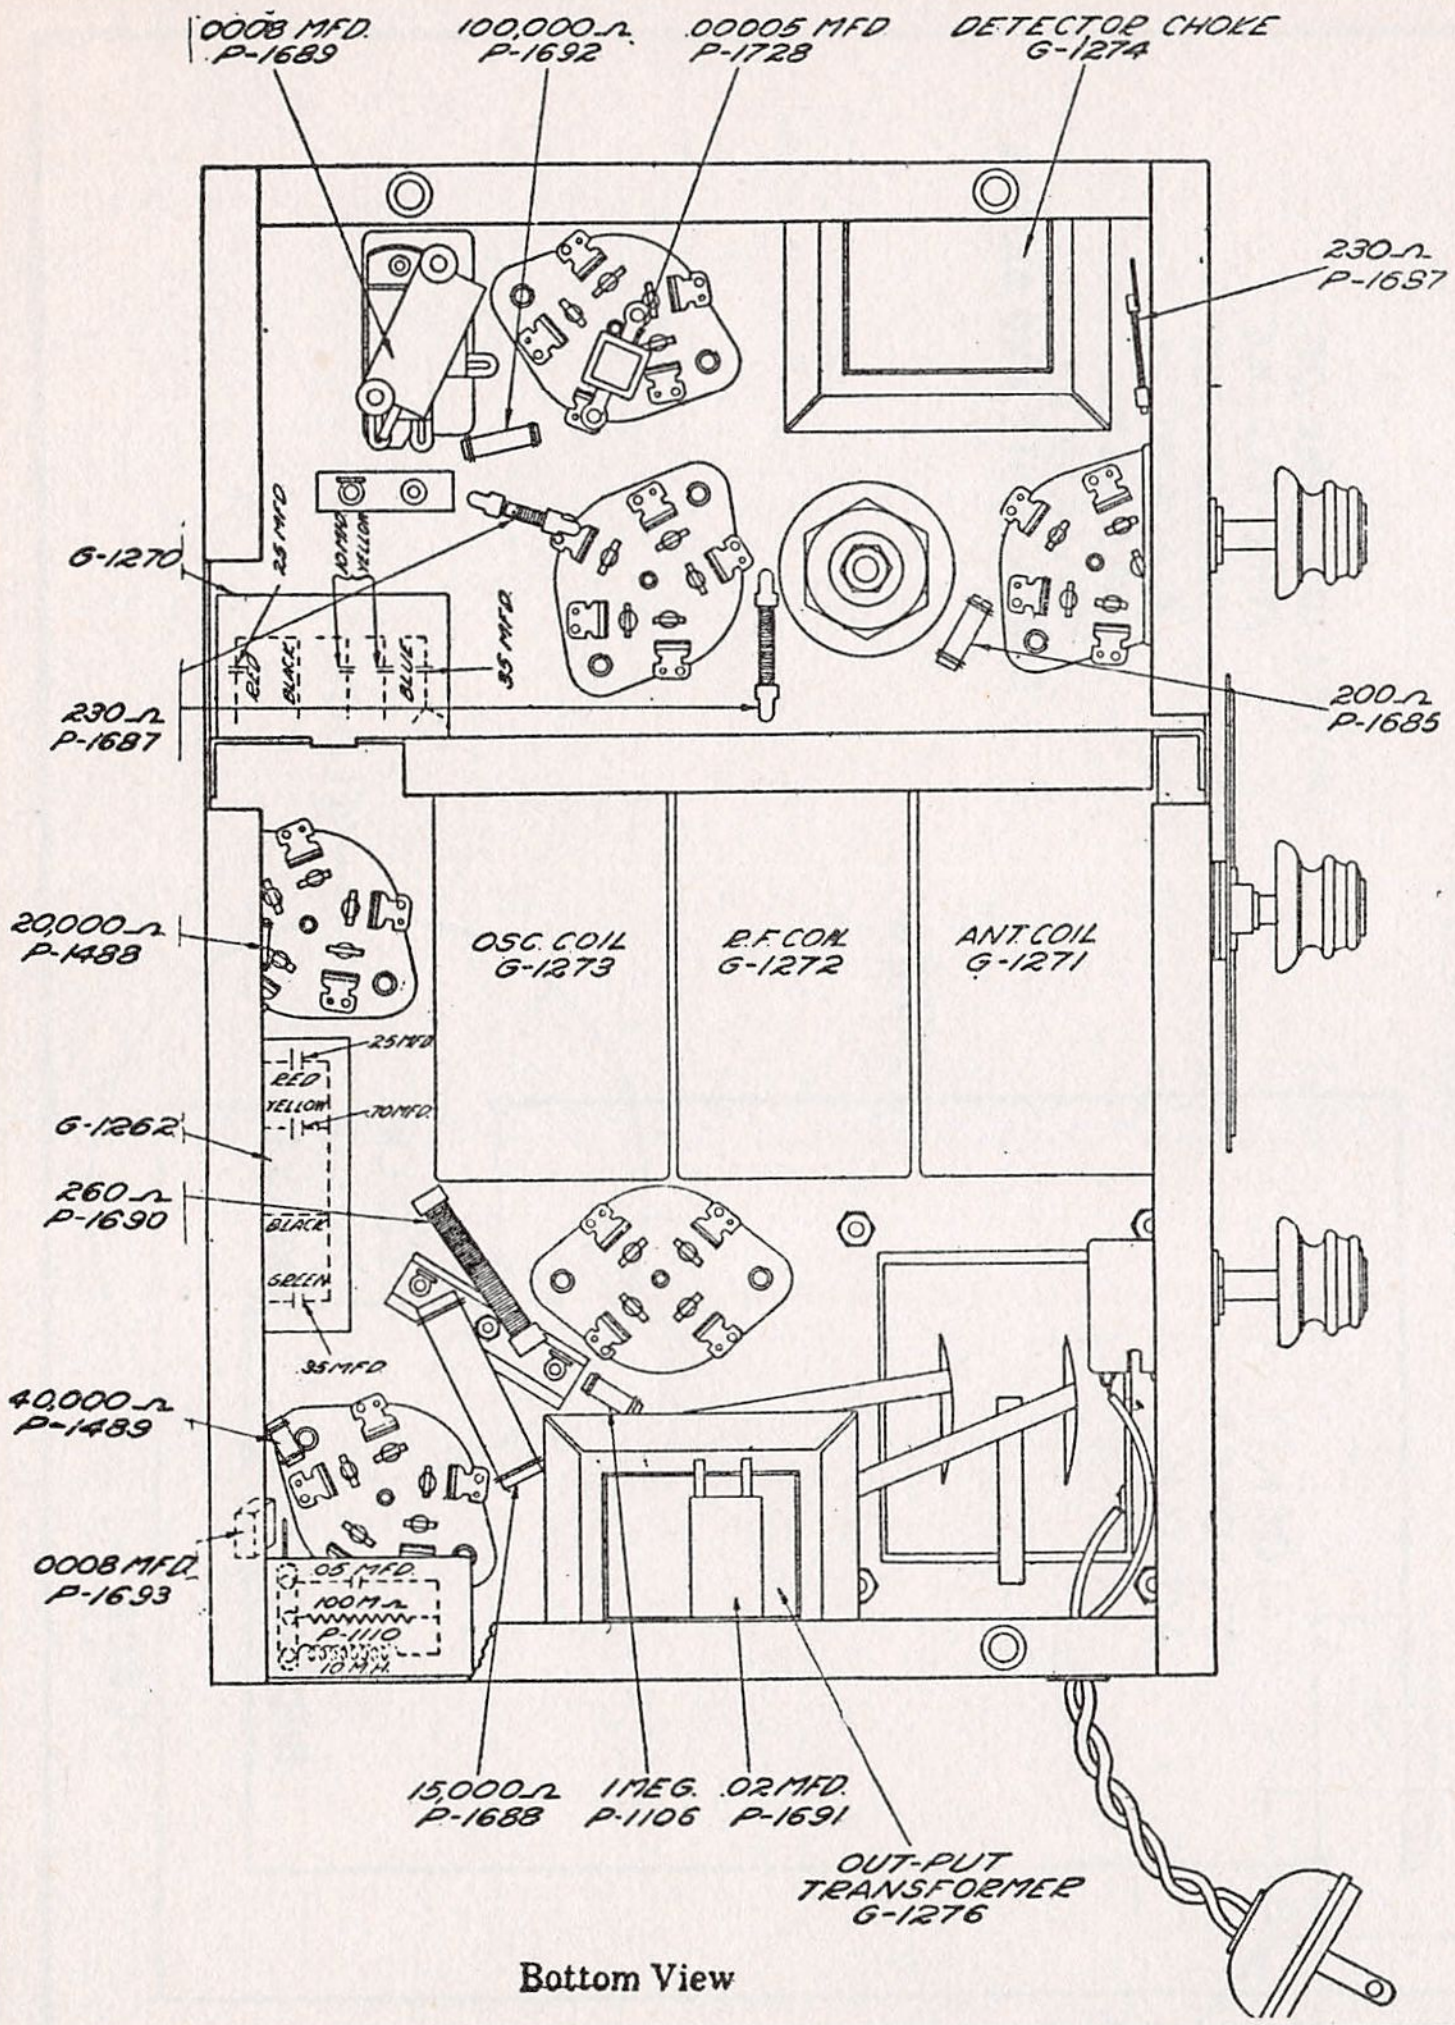
.0008 MFD. P-1689
100,000-~ P-1692
.00005 MFD P-1728
DETECTOR CHOKE G-1274
230-~ P-1657
G-1270
230-~ P-1687
200-~ P-1685
.25 MFD
.35 MFD
.25 MFD
.70 MFD
RED
YELLOW
BLACK
GREEN
BLUE
.35 MFD.
20,000-~ P-1488
OSC. COIL G-1273
R.F. COIL G-1272
ANT. COIL G-1271
G-1262
260-~ P-1690
40,000-~ P-1489
.0008 MFD. P-1693
.05 MFD.
100 M-~
P-1110
15,000-~ P-1688
1 MEG. P-1106
.02 MFD. P-1691
OUT-PUT TRANSFORMER G-1276

Bottom View

No.	Stage	Type Tube	A Volts	B Volts	Cont. Grid Volts	Cath. Volts	Ip' Norm.	SG Volts
1	r. f.	CL-51•	2.2	233	3	3	5	66
2	1st Det.	CL-51	2.2	233	7	7	2 3	73
3	Osc.	CL-27	2 2	80	0	0	4	0
4	I.F.	CL-51	2 2	233	3	3	5	77
5	2nd det.	CL-24	2.2	162	6 2	7.2	.5	73
6	Output	CL-PZ	2.2	228	15	0	27	233
7	Rect	CL-80	4.8	300	0	0	50	0

Volume control position Full Line Voltage 115

Note: Since resistance tolerances in the sets are plus or minus 10%, and tubes may vary over 20%, your readings may disagree with the above by plus or minus 30%. CL-PZ is also known as CL-47, the latter being the final type number.

MODEL M-701
MODEL G-781
Automatic Clock Control

BULOVA WATCH COMPANY

Resistance Table

(Using 10 volt range meter 1000 ohms per volt and 6 volt battery)

Item Tested	Description Color—Code	From	To	Reads	Your Reading	Ohms Resistance
r. f.-grid. bias resist.	Black Strap type Wire wound	r. f. cath. prong	Vol. cont. ungrounded terminal	5.9		230
Volume control	Variable at max. resistance	Test between its two terminals (connected)		3.2		Max. 10,500
1st det. grid bias resist.	Red Black tip	r. f. cath. prong	Other end of resist.	5.1		2,000
1st det. screen grid volts resist.	Black Strap type Wire wound	1st det. screen grid prong	Other end of resist.	5.9		230
1st det. plate resist.	Black Strap type Wire wound	Solder lug on Electrolytic cond.	B plus term. of 1st i. f. trans.	5.9		230
Oscillator grid-resist.	Brown Yellow spot Black tip	Oscillator grid prong	Ground	0.6		43,000
I. f. and r. f. cathode-bias resist.	Red Orange spot Black tip	I. f. cath. prong	I. f.-screen grid prong	2.3		20,000
I. f. and det. screen grid volts resist.	Brown Orange spot Green tip	I. f. screen grid prong	Solder lug on electrolytic cond.	2.7		15,000
2nd det. grid-bias resist.	Yellow Orange spot Black tip	2nd det. cath. prong	Ground	1.3		40,000
2nd det. plate resist.	Inside- 3rd term. det. r. f. filter assem.	Test between solder lugs on det. r. f.-filter assem. with red wires attached		0.6		100,000 in series with 10m.h. choke
Pentode grid-resist.	Brown Green spot Black tip	Pentode Grid prong	Dummy solder lug off output trans. sec.	0.5		1 Meg.
Pentode grid-bias	Wire wound Strap type	Dummy solder lug off-output trans. sec.	Ground	5.9		260

AUTOMATIC CLOCK CONTROL WIRING DIAGRAM

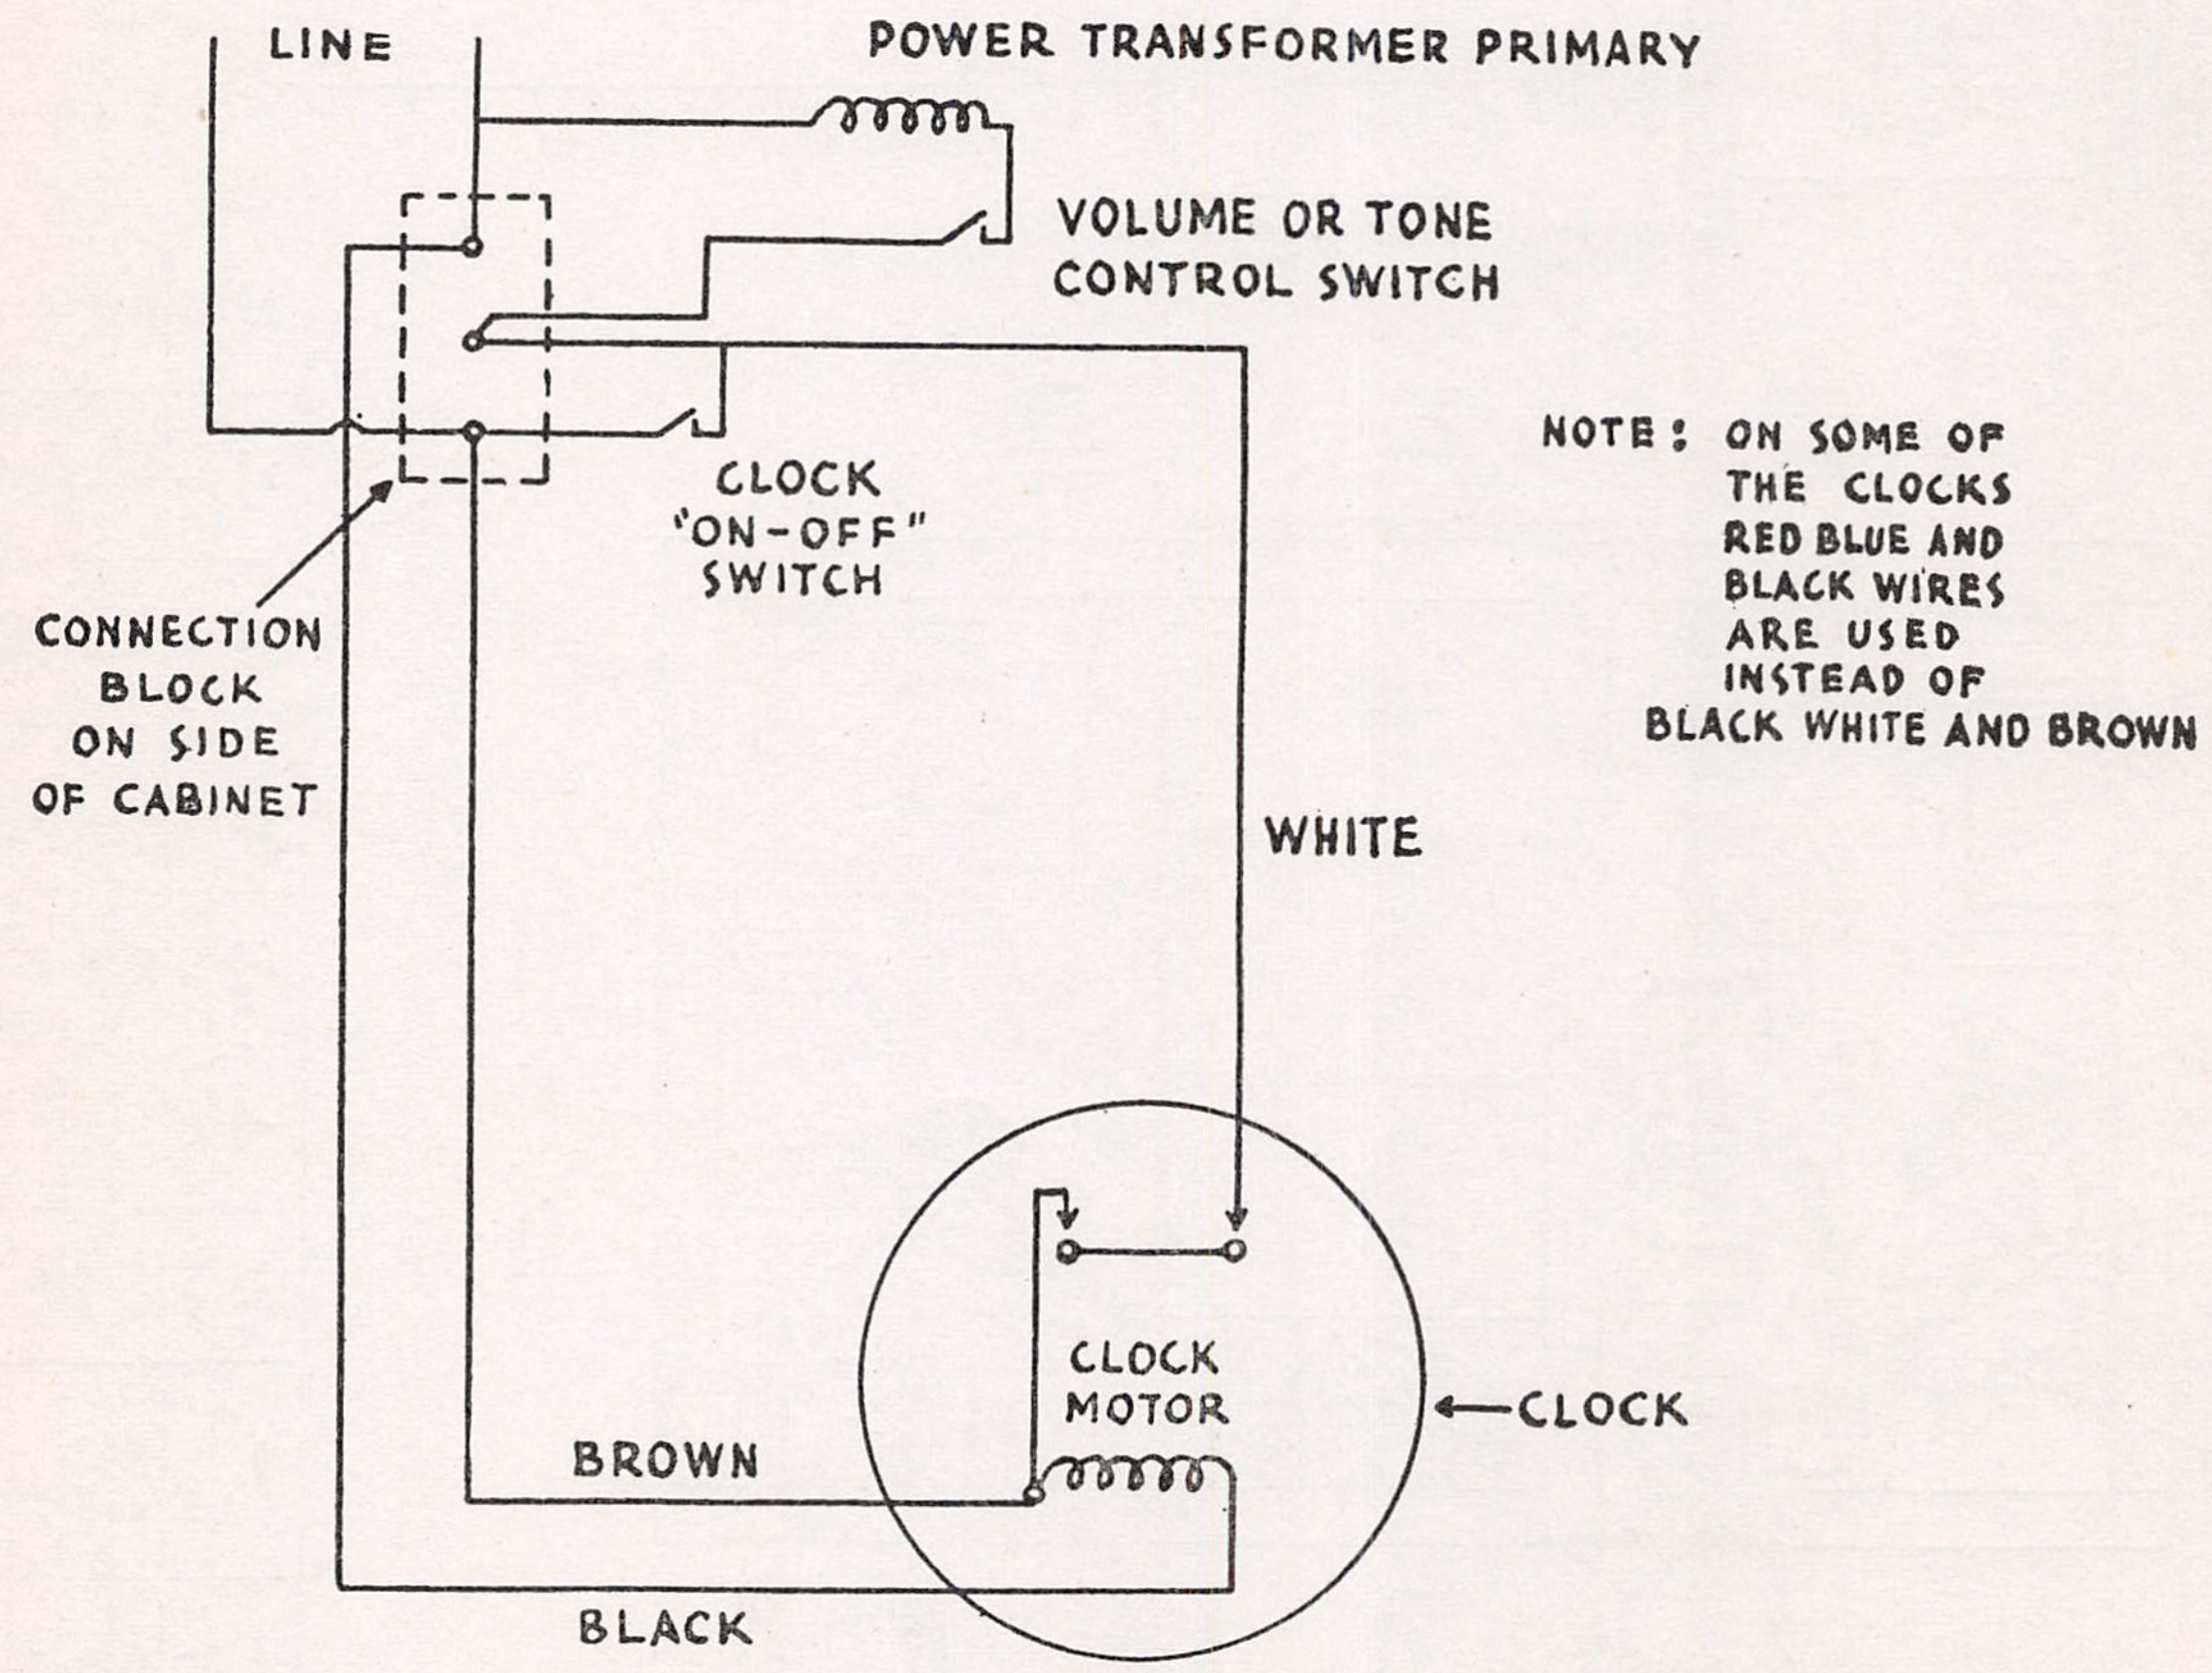
LINE
POWER TRANSFORMER PRIMARY
VOLUME OR TONE CONTROL SWITCH
CLOCK "ON-OFF" SWITCH
CONNECTION BLOCK ON SIDE OF CABINET
WHITE
CLOCK MOTOR
CLOCK
BROWN
BLACK

NOTE: ON SOME OF THE CLOCKS RED BLUE AND BLACK WIRES ARE USED INSTEAD OF BLACK WHITE AND BROWN

BULOVA WATCH COMPANY

MODEL C-751
Schematic

PEAK FREQUENCY - 175 K.C.

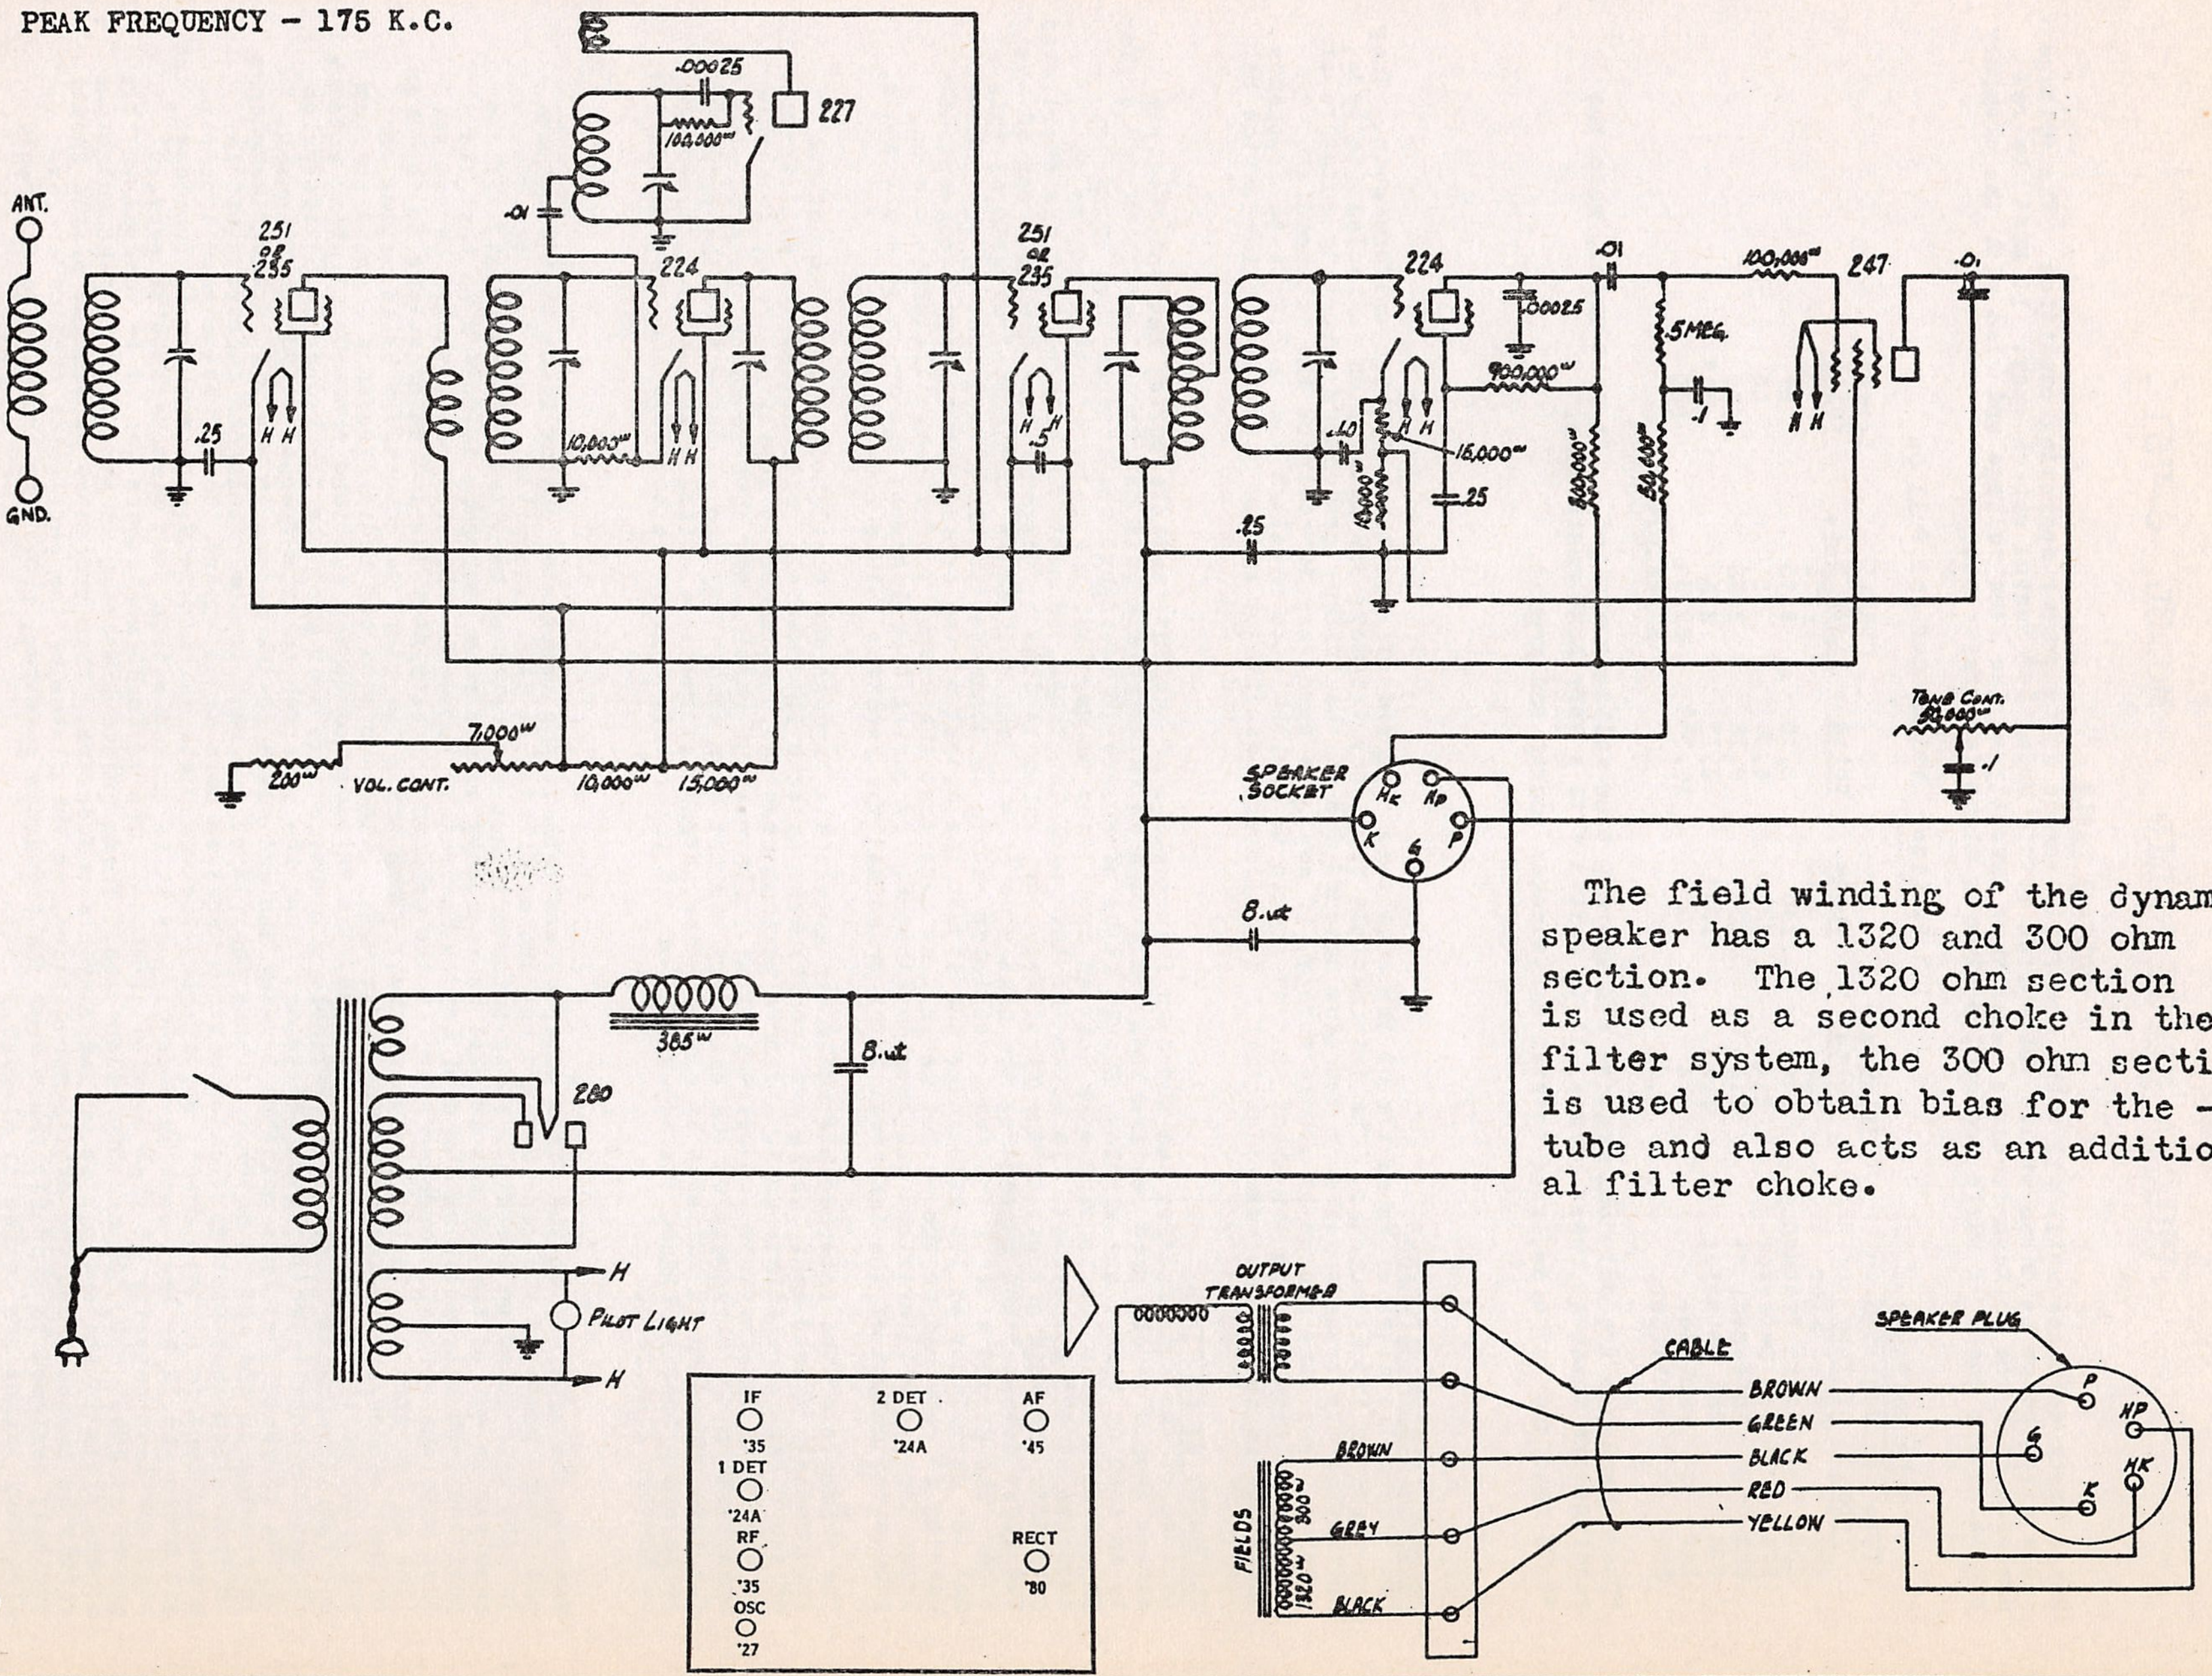
ANT.
GND.
.25
251 or 235
H H
.01
.00025
100,000Ω
227
224
10,000Ω
H H
251 or 235
H .5 H
224
.10
15,000Ω
15,000Ω
.25
.00025
900,000Ω
300,000Ω
.01
5MEG.
.1
50,000Ω
100,000Ω
247
H H
.01
Tone Cont. 50,000Ω
.1
7,000Ω
200Ω
VOL. CONT.
10,000Ω
15,000Ω
SPEAKER SOCKET
HK
HP
K
G
P
8.mf
385Ω
8.mf
280
H
PILOT LIGHT
H
OUTPUT TRANSFORMER
FIELDS
1320Ω
300Ω
BROWN
GREY
BLACK
CABLE
BROWN
GREEN
BLACK
RED
YELLOW
SPEAKER PLUG
P
HP
G
HK
K
IF
'35
1 DET
'24A
RF
'35
OSC
'27
2 DET
'24A
AF
'45
RECT
'80

The field winding of the dynamic speaker has a 1320 and 300 ohm section. The 1320 ohm section is used as a second choke in the filter system, the 300 ohm section is used to obtain bias for the -47 tube and also acts as an additional filter choke.

MODEL C-751
Voltage and
Service Notes

BULOVA WATCH COMPANY

BULOVA CLOCK RADIO MODEL C-751.

VOLTAGE TABLE

'Never check voltages until all tubes are fully warmed up to proper operating condition. The voltage table given below is taken at 115 volts line with a Model 547 Weston set checker. It must be remembered that the voltage readings taken vary directly as the line voltage and also with the accuracy of the meters used. A variation of 10% plus or minus is permissible.

115 V. Line Volume Control Full On

TUBE VOLTAGES

Type of Tube	Position of Tube	Filament Volts	B Volts	C Volts	NORMAL PLATE M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
224	2nd Detector	2.4	100*	2.1*	2.5	35*
247	Pentode	2.4	250	16.5**	32.5	250
280	Rectifier	4.95			27.ea.plate	

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

** To read the 247 bias, read between H.K.speaker socket and ground.

INTERMEDIATE TRANSFORMERS:
The intermediate transformers are of the band pass type and of exceptionally high uniform gain. They are tuned to 175 kilocycles. The intermediate frequency trimmers are mounted on an isolantite base, preventing the transformer from becoming detuned due to the trimmer condensers absorbing moisture or warping. For this reason it should rarely, if ever, be necessary to re-track the intermediate frequency trimmers. In the event that it should be advisable to re-align the intermediate frequency coils, it is absolutely essential that a 175 kilocycle oscillator and an output measuring device be used.

ALIGNMENT OF RECEIVER:
Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need re-tracking. Only when an intermediate coil has become defective due either to an open or burned out winding, should it be necessary to re-adjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the top of the intermediate shield can. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then re-check the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are : Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away, the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

CAPEHART CORPORATION

RECORD CHANGER

Model 10-12-C

ASSEMBLY OF MOTOR TO BASE PLATE

The motor is attached to the base plate by three bolts, and mounted on rubber cushions.

The brace that is over the turntable spindle and bolted to the base plate serves as an excellent gauge for aligning the motor in the center.

When removing the two screws that hold the turntable locating plate over the turntable spindle, preparatory to operating the instrument, be sure that the locating plate lines up with the holes that the screws are just removed from.

If the motor has become shifted in transit there will be a tendency for the holes in the locating plate and base plate to not perfectly line up.

In this case it is necessary to slightly loosen the three bolts holding the motor to the base plate and shift the motor to such position that the holes in the brace and the base plate align perfectly, and while the brace is still in place, tighten the suspension bolts to hold the motor in that particular position. The brace must then be removed before the turntable is mounted on the shaft.

In placing the turntable on the shaft, be certain that the rubber driving washer is in proper place with clips over the spindle pin.

After the turntable is put on the shaft, force it down by hand to be sure that the rubber washer and turntable are making perfect contact.

To level the turntable, place a straight edge across the turntable and adjust the three suspension bolts holding the motor to the base plate until the same distance is obtained from the bottom edge of the straight edge to the base plate near the three points where the suspension bolts are located.

This measurement should be approximately 11/16". This adjustment must be made so that there is no free movement of the motor by either of the suspension bolts being too loose.

TONE ARM ADJUSTMENT FOR TEN INCH AND TWELVE INCH RECORDS

Pickup change lever No. 5509 is for changing the instrument from 10 inch to 12 inch record operation and vice versa.

The lever changes the position of the pickup return lever in such a manner that the needle is let down for the 10 inch or the 12 inch record, as desired.

To adjust for playing 10 inch records, loosen the forward lever stop No. 5526 and hold the lever in such a position that the needle will come down on a 10 inch record exactly 4-11/16" from the edge of the center pin. (A scale should be placed on the record with the end of the scale against the centering pin in such a position that the needle point will come down on the scale at the 4-11/16" inch position.)

When the proper location of lever No. 5509 is ascertained, then the front stop may be set snug against this lever and the screw tightened, which will allow the lever to always be thrown over to that exact position when desiring to play 10 inch records.

To adjust for playing 12 inch records, loosen the back lever stop No. 5527 and hold the lever in such position that the needle will come down exactly 5-11/16" from the edge of the centering pin. (A scale should be placed on the record with the end of the scale against the centering pin in such position that the needle point will come down on the scale at the 5-11/16" position.)

In the event you are unable to properly adjust for either 10 inch or 12 inch records by the above method, make the adjustment as nearly correct as possible then refer to instructions on Page 6 and check Tone Arm Bracket Lever adjustment making certain the adjustment is correct.

Then loosen the lock nut holding the adjustment screw on the tone arm return lever No. CA5687 and turn the adjusting screw either in or out, as the occasion requires, to bring the needle to the proper location for the size record you are unable to adjust for by the lever stop method. It will then be necessary to readjust the lever stop which was originally set in position for the other size record.

The lever stop screws must be set tight so the lever stops will not be jarred out of position as the lever is thrown from one position to the other.

ADJUSTMENT OF PICKUP WEIGHT

Make this adjustment while music is being played, and only one record is on the turntable. With a delicate pair of scales, having a range of 0 to 12 ounces, catch the needle screw and lift the pickup from the record until the audio quality breaks, at which time a reading of 5½ to 6 ounces should be shown on the scales. Raising or lowering the spring support No. 5575 which is affixed to the tone arm lifting rod No. 5553 adjusts the weight of the pickup.

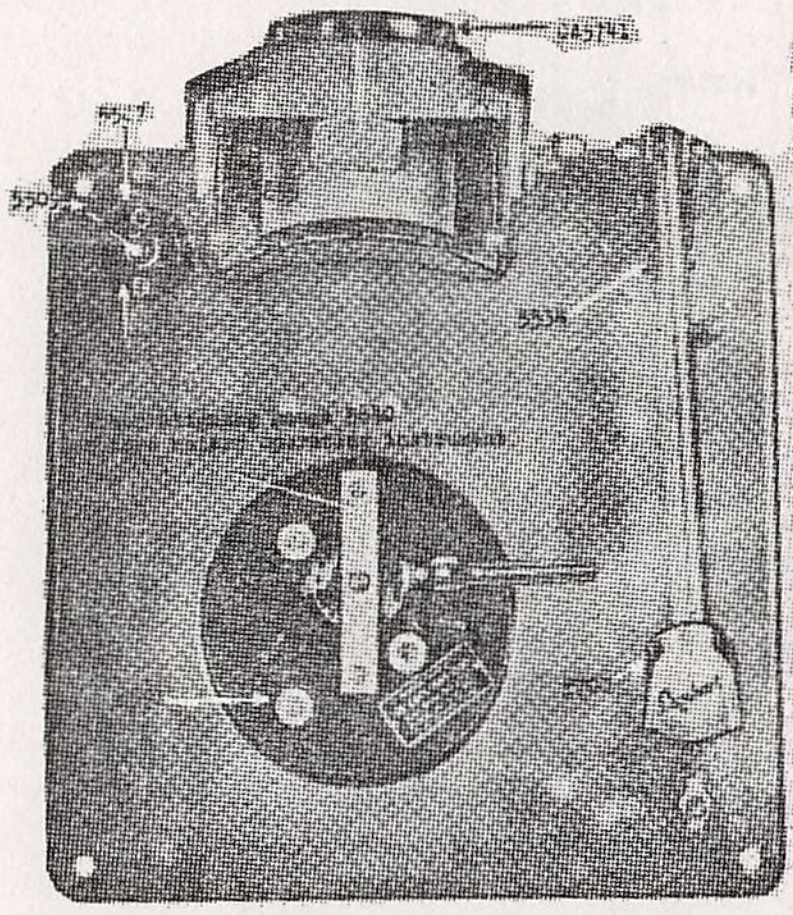

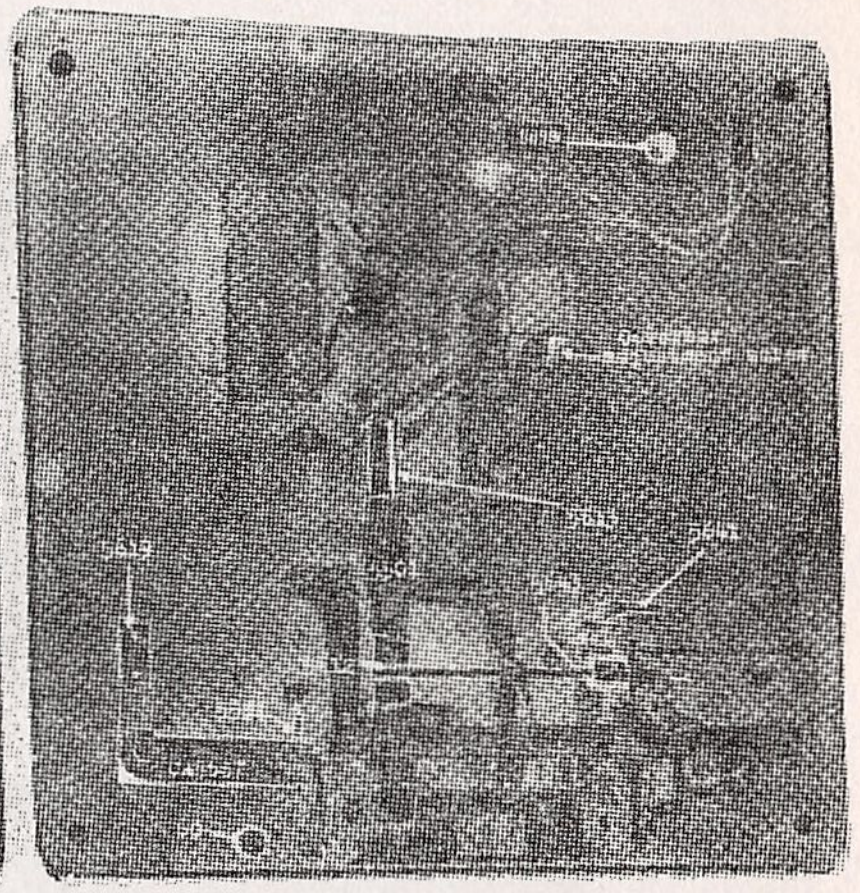

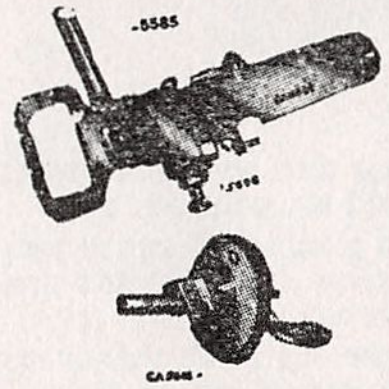

Fig. 1

5509 Eccentric Handle
5526 Eccentric Lever Stop-Front.
5527 Eccentric Lever Stop-Rear
5534 Tone Arm Rest
5585 Tone Arm Lever Return Spring
5591 Motor and Mounter Insulating Washer
5640 Shipping Strap
A5655 Record Shelf & Slide Ass
5700 Pickup
CA5741 Standard Ass.
5509 Eccentric Handle.
5554 Eccentric Pin
CA5642 Eccentric Flange and Lever Ass
CA5687 Tone Arm Return Lever & Fork Assy
5696 Tone Arm Fork Spring

Fig. 2

5619 Eccentric Spring Assy.
5641 Short Circuit Switch Ass.
5643 Trip Lever Rod Collar Ass.
5698 Volume Control.
CA5687 Tone Arm Return Lever & Fork Ass.

50 ¼-20 Hex Head Screw.
5501 Drive Bracket.
5581 Link Spring-Lower.
5612 Trip Lever & Cam Assy.
5613 Drive Sleeve Assy.

GOVERNOR ADJUSTMENT

If the turntable speed cannot be regulated to 78 R. P. M. by the speed control lever located under the turntable, then loosen the set screw holding the governor to the governor shaft and move the governor either in or out, as the case may be, to increase or decrease the speed of the motor.

This adjustment must be made when the speed control lever under the turntable is in the center position.

To increase the speed of the turntable motor, move the governor out, and to decrease the speed of the turntable, move the governor in.

Do not, under any conditions, change the adjustment of the end thrust bearing screws.

An occasional drop of oil on the governor brake will assist in maintaining a constant speed.

OVER

CAPEHART CORPORATION

ASSEMBLY AND ADJUSTMENT OF OSCILLATING AND SPIRAL TRIP LEVER AND PICKUP SILENCER

To time the automatic switch so the instrument will automatically trip and change records, proceed as follows:

First: Thoroughly acquaint yourself with the different part numbers.
Second: Study the photographs carefully and note the relative location of the various parts.
Third: Complete each of the following operations before going on to the next operation.

Operation No. 1.

Turn the master cam No. 5504 until the large timing mark is exactly above the timing mark on the tone arm lifting lever No. 5761.

Operation No. 2.

Hold the switch lever and cam assembly No. 5612 against the driven clutch No. 5616, so the radius of the cam will center against the clutch. (Be sure that cam No. 5612 is directly under the driven clutch No. 5616.)

Operation No. 3.

Set the pickup silencer switch No. 5643 against the casting bearing so the shaft of cam No. 5612 cannot be moved further toward the automatic switch.

Operation No. 4.

Hold the tail of cam No. 5612 against the lug on the inside of the master cam No. 5504 and adjust the trip lever No. 5611 until it is 1/16" beyond the catch in the oscillating trip lever No. 5657. This adjustment is made while the tail of the cam No. 5612 is held against the outside of the lug inside the master cam No. 5504.)

Operation No. 5.

Care must be exercised to have the end play of the oscillating trip shaft just free. This is taken care of in adjusting the pickup silencer switch No. 5643, so a good contact is made on the pickup short circuiting switch WHEN THE NEEDLE IS ON THE RECORD AND THE AUTOMATIC SWITCH HAS BEEN TRIPPED.

After the pickup silencer switch No. 5643 has been set according to the above instructions, the resetting of the automatic trip should allow the contacts on the pickup silencing switch to open.

If the above operations are followed out in detail, and adjustments properly made, the clutch will automatically disengage when the pin on the clutch No. 5616 has travelled approximately one-half of the distance of cam No. 5612.

At the time the pin has travelled one-half of the distance of the clutch release cam, the small timing mark on cam No. 5504 should be exactly above the timing mark on the tone arm lifting lever No. 5761.

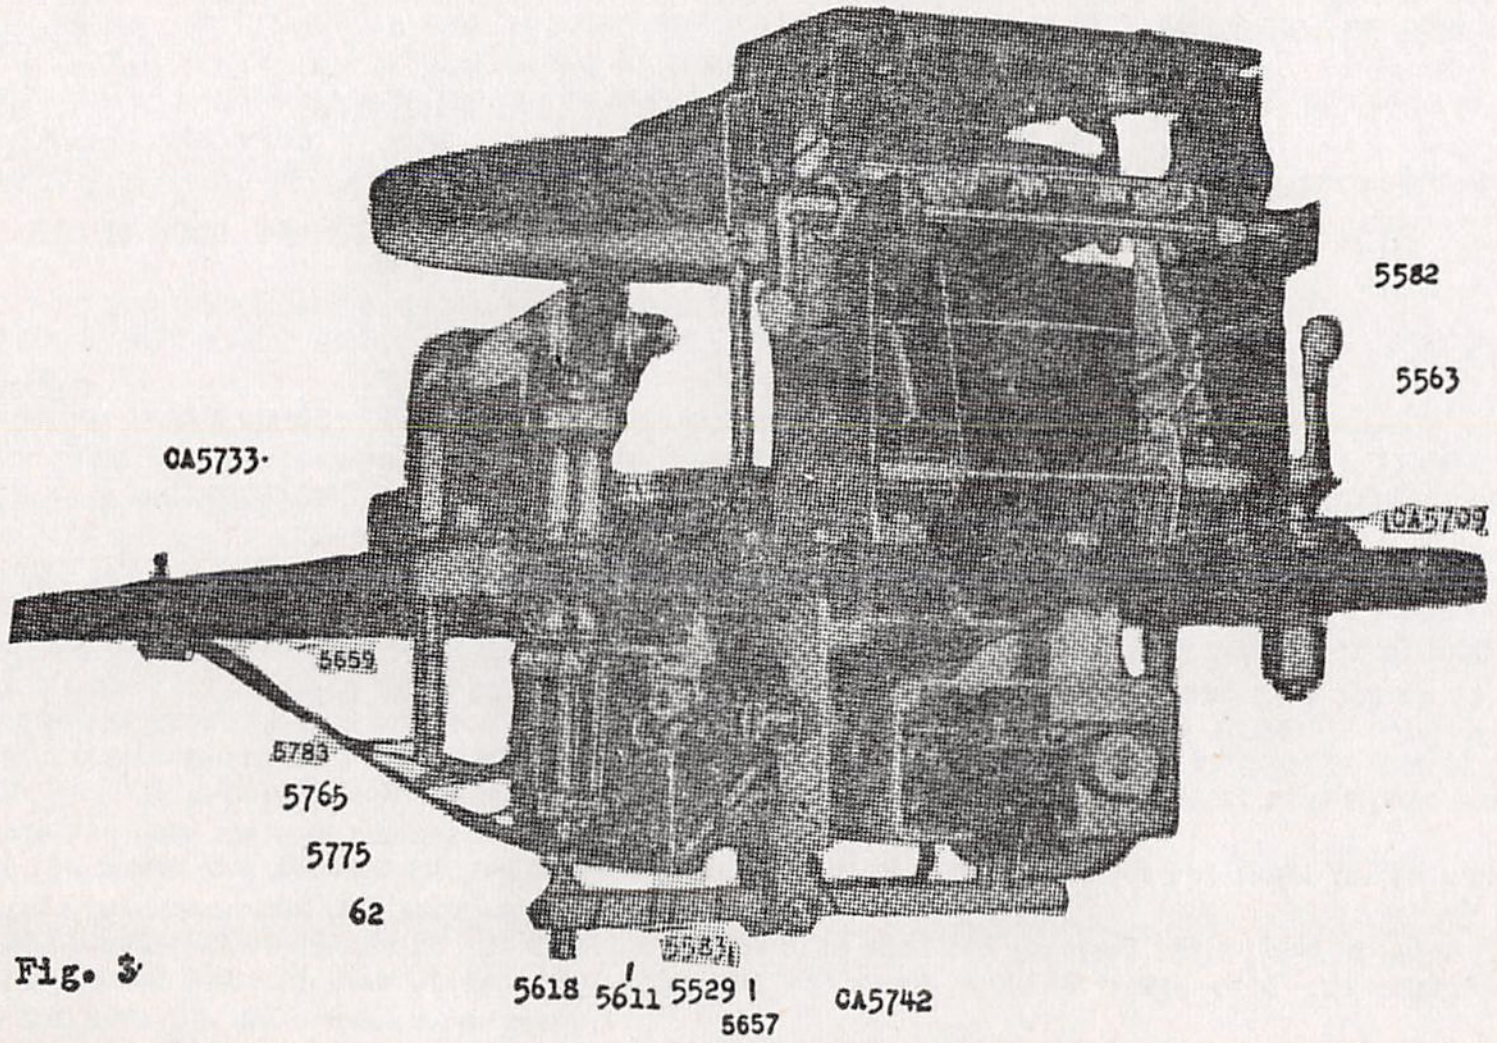

Fig. 3

62	1¼-28 Hex Head Screw.
5529	Spiral Trip Cam.
5783	Tone Arm Lift Rod.
5554	Eccentric Pin.
5563	Slide Finger Eccentric.
5582	Link Spring-Upper.
5583	Trip Lever Spring.
5611	Trip Lever & Hub Assy.
5618	Oscillating Trip Dog Assy.
5659	Tone Arm Bracket Lever & Pin Assy.
5657	Oscillating Trip Lever Assy.
CA5709	Slide Finger & Shaft Assy.
CA5733	Reject Stud Assy.
CA5742	Switch Panel Assy.
5765	Tone Arm Weight Adj. Spring
5775	Tone Arm Spring Hook

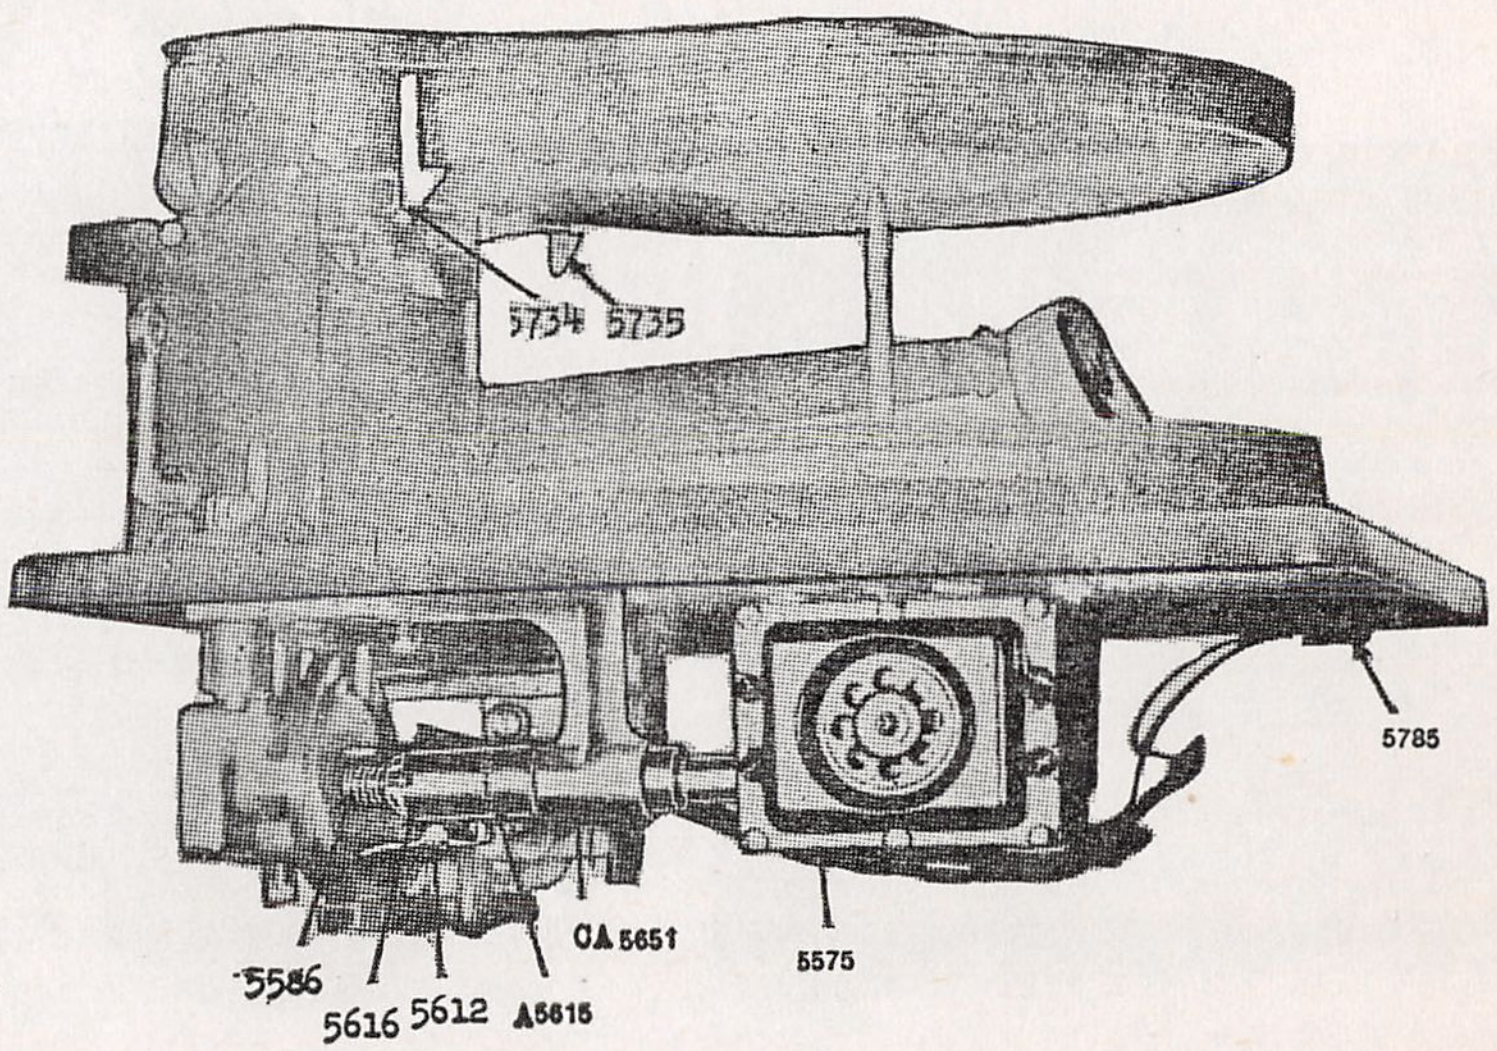

Fig. 4

5612	Trip Lever & Cam Assy.
A5615	Drive Shaft Assy.
5615	Drive Shaft Assy.
5616	Driven Rachet & Pin Assy.
CA5651	Main Drive Assy.
5785	Switch Double Circuit H & H.
5586	Clutch Spring.
5575	Motor, give voltage and cycles.
5690	Governor Assy.
5734	Record Lock Lever & Hook Assy-Left.
5735	Record Lock Lever & Hook Assy-Right.

OVER

CAPEHART CORPORATION

ADJUSTMENT OF THE SPIRAL TRIP CAM

To adjust the spiral trip cam, turn the master cam No. 5504 until the small timing mark is exactly above the timing mark on the tone arm lift lever No. 5761 at which time the automatic trip can be manually reset or tripped at will.

Lay a steel scale, graduated in 64ths, flat on the record under the pickup, with the end of the scale against the turntable spindle in such position that the needle rests on the scale. By sliding the needle toward the center of the record, the spiral cam should cause the automatic trip to operate when the point of the needle is 1-49/64" from the edge of the turntable spindle.

If the automatic trip operates before the needle has come to 1-49/64" position, then the spiral cam is set too far ahead and must be moved very slightly back, while, if the needle comes closer to the turntable spindle than 1-49/64", then the spiral cam is set too far back and must be set ahead to the proper position.

Failure to properly adjust the spiral trip cam so the automatic trip operates when the needle is 1-49/64" from the edge of the turntable spindle will cause the instrument to change records before the music is finished, or to not change records automatically.

To adjust the spiral trip cam No. 5529, slightly loosen the two screws holding the cam to automatic switch lever No. 5657 and pry the cam forward or back as required to obtain the proper setting.

To test the position of the spiral cam, it is necessary to carry the pickup back to the edge of the record each time to manually reset the automatic trip.

ASSEMBLY OF TRIP BRACKET TO BASE PLATE

The automatic trip bracket No. CA 5742 is mounted to the base plate by two nickle plated bolts and lock washers.

The end that the bakelite panel is mounted on is to be mounted toward the front of the base plate in such a manner that the bearing aligns perfectly with the bearing in the drive bracket. The final alignment can be made when the trip lever shaft No. 5612 is being installed and adjusted.

TONE ARM BRACKET LEVER ADJUSTMENT

Set lever No. 5509 to 10 inch record operating position, and slightly loosen the clamp screw holding the bracket lever No. 5704 to the bracket under the tone arm base, and turn the bracket lever to such position that the slot, where the bracket lever clamps together around the bracket, is exactly centered on each side of the aligning notch cut in the lower rim of the bracket.

Then lay a scale, graduated in 64ths, on the turntable, placing the end of the scale against the turntable spindle in such position that when the needle is automatically let down the point of the needle will come to exactly 4-11/16" from the edge of the turntable shaft.

If the needle does not automatically come down at the 4-11/16" position refer to page 2 and make final adjustment at lever stop on lever No. 5509.

Care should be exercised to lock the tone arm return bracket lever, allowing .015 inch clearance between the cork insert and the tone arm base.

After the adjustment is properly made, tighten the clamp holding the tone arm bracket lever No. 5704 in place, which should leave ample clearance between the cork insert and the tone arm housing to allow perfect freedom of the tone arm operation.

If needle fails to feed into music groove, lift tone arm bracket lever No. 5704 tightly against tone arm housing and manually move tone arm back and forth to relieve any uneveness that might occur on the face of the cork insert.

ASSEMBLY AND ADJUSTMENT OF RECORD MAGAZINE

The record magazine pin No. 5555 must be tightened in the elongated hole in the magazine top plate No. A5736 in such a manner that the offset at the bottom of the pin extends directly away from the record support shelf.

The magazine pin must also be adjusted to such a position that exactly 4⅞" clearance is obtained between the back center of the offset at the bottom of the magazine pin, and the extreme right and left corners of the record support shelf. This adjustment is to be made when the record magazine is in 10 inch playing position.

TO ADJUST THE RECORD SUPPORT HOOKS

First, throw lever No. 5509 to the 10 inch position, and place a 10 inch record on the magazine pin, bringing the magazine down to playing position.

The record suport hooks are adjusted by bending to proper position.

The record support hooks must be kept 1/16" from the edge of the record support shelf and must be adjusted far enough back to just clear the edge of a 10 inch record, as the record is released from the record support shelf.

The record support hooks must also be low enough to clear the bottom side of the record, as it is supported on the magazine shelf.

The record support hooks should operate freely in either 10 inch or 12 inch position.

ASSEMBLY OF RECORD MAGAZINE AND STANDARD TO BASE PLATE: AND ALIGNMENT OF TURNTABLE SHAFT

Mount the magazine and standard on the base plate with four bolts, tightening the bolts only tight enough to hold the complete magazine assembly in position. The magazine assembly must be so adjusted by shifting the standard on the base plate to bring the offset at the bottom end of the magazine pin exactly over the center of the point of the turntable spindle.

This adjustment cannot be made until the motor has been aligned according to the instructions on page one.

Enough clearance is allowed in the four bolt holes to take care of this adjustment.

After the adjustment is made perfect, the bolts must be securely tightened with lock washers.

ASSEMBLY AND ADJUSTMENT OF RECORD SLIDE SHELF AND FINGER

First, set the master cam No. 5504 so the lug on the cam at the side of the large timing mark comes directly under the end of the record release finger No. CA 5709.

The eccentric stud No. 5563 affixed to the main record release finger controls the adjustment of record release finger. Turn the eccentric stud No. 5563 until the record slide shelf No. 5521 is 1/64" past the front edge of record support shelf No. 5520 at which time it should be possible to obtain a slight amount of clearance between the end of the record release finger and the point of the lug on the master cam without causing the safety spring, (which is a part of this lever assembly) to give.

The two points on the record slide shelf must come to the edge of the radius on the record support shelf at the same time.

RECORD WEIGHT ADJUSTMENT

The record weight No. 5759 must be so adjusted at the bearing pivot that the lower edge of the record weight does not touch the record slide shelf while in the 10 inch position, but comes low enough to hold one record in proper position for the slide plate to unload it on the turntable.

ASSEMBLY OF DRIVE BRACKET ASSEMBLY TO BASE PLATE AND MOTOR

The drive bracket No. 5651 must be bolted to the base plate in such a manner as to align the drive shaft with motor shaft so the coupling is free. A flexible coupling No. 5613 takes care of any minor lack of alignment between the drive shaft and the motor shaft, because of the motor hanging on rubber cushions.

OVER

CAPEHART CORPORATION

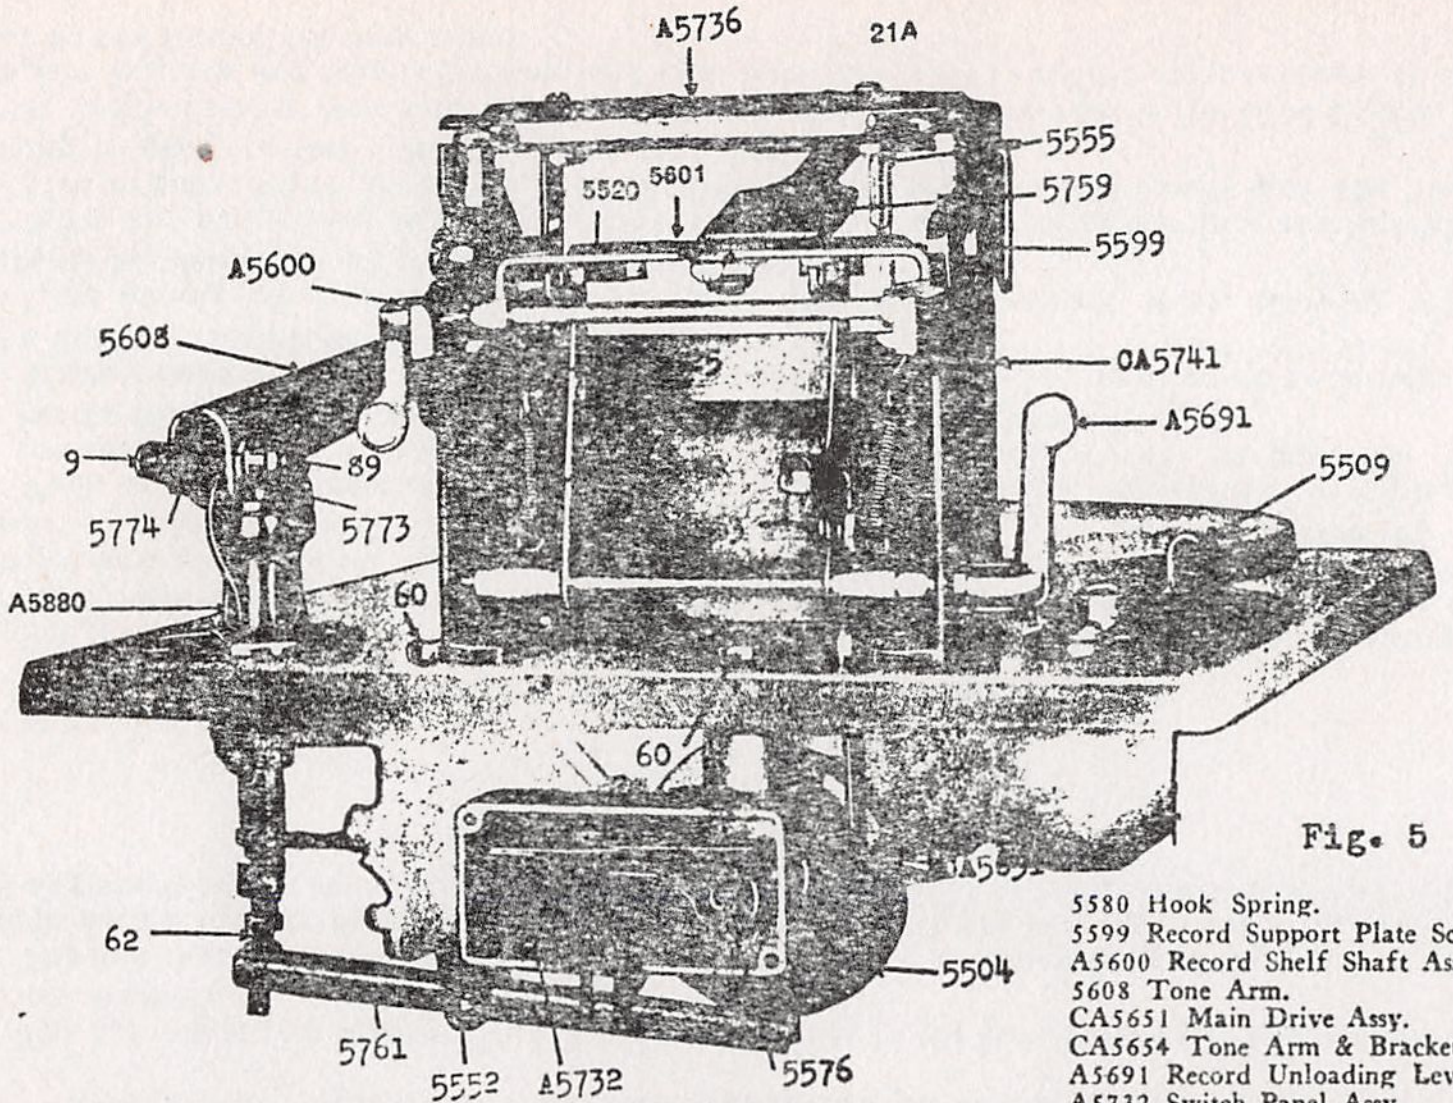

Fig. 5

9	10-32 Hex Head Screw.
21A	Acorn Nut.
60	¼-20 Hex Head Screw.
62	1¼-28 Hex Head Screw.
89	10-32 Headless Set Screw 60 point
5504	Master Cam.
5509	Eccentric Handle.
5520	Record Shelf.
5601	Record Slide.
5525	Spring Hook.
5552	Tone Arm Lift Lever Pin
5555	Record Support Pin.
5563	Slide Finger Eccentric.
5576	Switch Finger Cam.
5580	Hook Spring.
5599	Record Support Plate Screw.
A5600	Record Shelf Shaft Assy.
5608	Tone Arm.
CA5651	Main Drive Assy.
CA5654	Tone Arm & Bracket Assy.
A5691	Record Unloading Lever.
A5732	Switch Panel Assy.
A5736	Record Support Plate Assy.
CA5741	Standard Assy.
5759	Record Weight & Felt Assy.
5761	Tone Arm Lift Lever Assy.
5773	Tone Arm Insulating Bushing.
5774	Tone Arm Pivot Bushing.
A5880	Tone Arm Bracket Assy.

ASSEMBLY OF TONE ARM HOUSING TO BASE PLATE

The tone arm base is attached to the base plate with three screws. This can be mounted only in the proper position.

The two pivot screws holding the tone arm to tone arm bracket must be so adjusted that the pickup is free to come down on to the record by its own weight and still the points of bearing must be in good contact in such a manner that the tone arm cannot be twisted from side to side.

TO ADJUST FOR NEEDLE PLAYING POSITION

Turn the master cam until the small timing mark is exactly above the timing mark on the tone arm lifting lever No. 5761, at which time there will be no pickup weight on the tone arm lifting rod.

Then, without a record on the turntable, and the needle (of the length that is regularly going to be used with the instrument) properly inserted in the pickup, the "T" shaped tone arm rest No. 5534 should be adjusted to allow the tone arm to lower to such a position that the needle just clears the highest point of the turntable surface. THIS ADJUSTMENT PROPERLY MADE WILL ELIMINATE THE POSSIBILITY OF THE NEEDLE DAMAGING THE TURNTABLE SURFACE.

TONE ARM LIFT LEVER AND ITS ADJUSTMENT

Turn the master cam to such position that the small timing mark is directly above the timing mark on the tone arm lifting lever No. 5761.

Without a record on the turntable, and the needle in playing position, adjust the tone arm lift lever screw No. 62 until a visiting card can be slid between the top of the lever screw No. 62 and the lower end of the tone arm lifting rod No. 5553.

TIMING OF CAM No. 5576

To time cam No. 5576, turn the master cam No. 5504 by hand, bringing the lug near the large timing mark on the cam, directly under the end of the record release finger No.CA5709. At this time, hold the master cam in position and turn cam No. 5576 to the right until the corner of the cam touches but does not raise the switch contact lever on switch No. A5732.

Care must be exercised that the switch contacts on switch No. A5732 make perfect contact when cam No. 5576 is away from the switch lever, and when the cam is in the down position 1 32" clearance is maintained between the switch finger and the low side of the cam. This should insure a perfect contact at the switch points.

It is important, in the adjustment of cam No. 5576, that 1 64" clearance be allowed between the back side of this cam and the bearing through which the shaft passes.

After the above adjustment is made, check the instrument with one record on turntable, by shutting current switch off and see that instrument comes to an automatic stop position when the lug on the master cam No. 5504 has completely passed under the end of record release finger No. CA 5709. If the lug has not entirely passed under the end of the record release finger, then move cam No. 5576 to the left as little as possible to allow the lug to clear the cam when instrument stops automatically with one (1) record on turntable.

TONE ARM RETURN LEVER AND ITS ADJUSTMENT

The tone arm return lever No. CA5687 is mounted on an eccentric pin with the bushing extended downward, the tone arm change and adjusting lever No. 5509 is mounted on the same shaft and located on the top back left corner of the chassis.

The sharp point of the cam, which is a part of the eccentric pin is to be mounted toward the tension spring which is affixed to the base plate, so that when the lever is thrown to 10 inch or 12 inch position the spring will hold the cam in that particular position.

The coil spring No. 5585 is attached from the lug on the tone arm return lever to the lug on the automatic trip bracket in such a manner that the spring is held as far down as possible by the lugs.

NOTE: The adjustment screw found on the tone arm return lever is covered in the instructions on page 1, and after once being properly set, should need no further adjustment.

Care must be exercised to have clearance between the high point of the master cam No. 5504 and the tone arm return lever.

MOUNTING AND ADJUSTMENT OF REJECTOR

The reject button is located at the right of the tone arm and is for the purpose of discontinuing a record before it has finished playing. With the automatic trip set and the instrument playing music, there should be 1/16" clearance between the bottom of the reject pin and the lateral pin affixed to the automatic trip lever No. 5657.

If this distance is too great, one will not be able to reject a record. If this distance is too small the automatic trip will not properly reset. Adjustment can be made by CAREFULLY bending the lateral pin to its proper position with relation to the rejector pin.

MODEL 33, 34, 35 AC
Layouts

COLONIAL RADIO CORP..

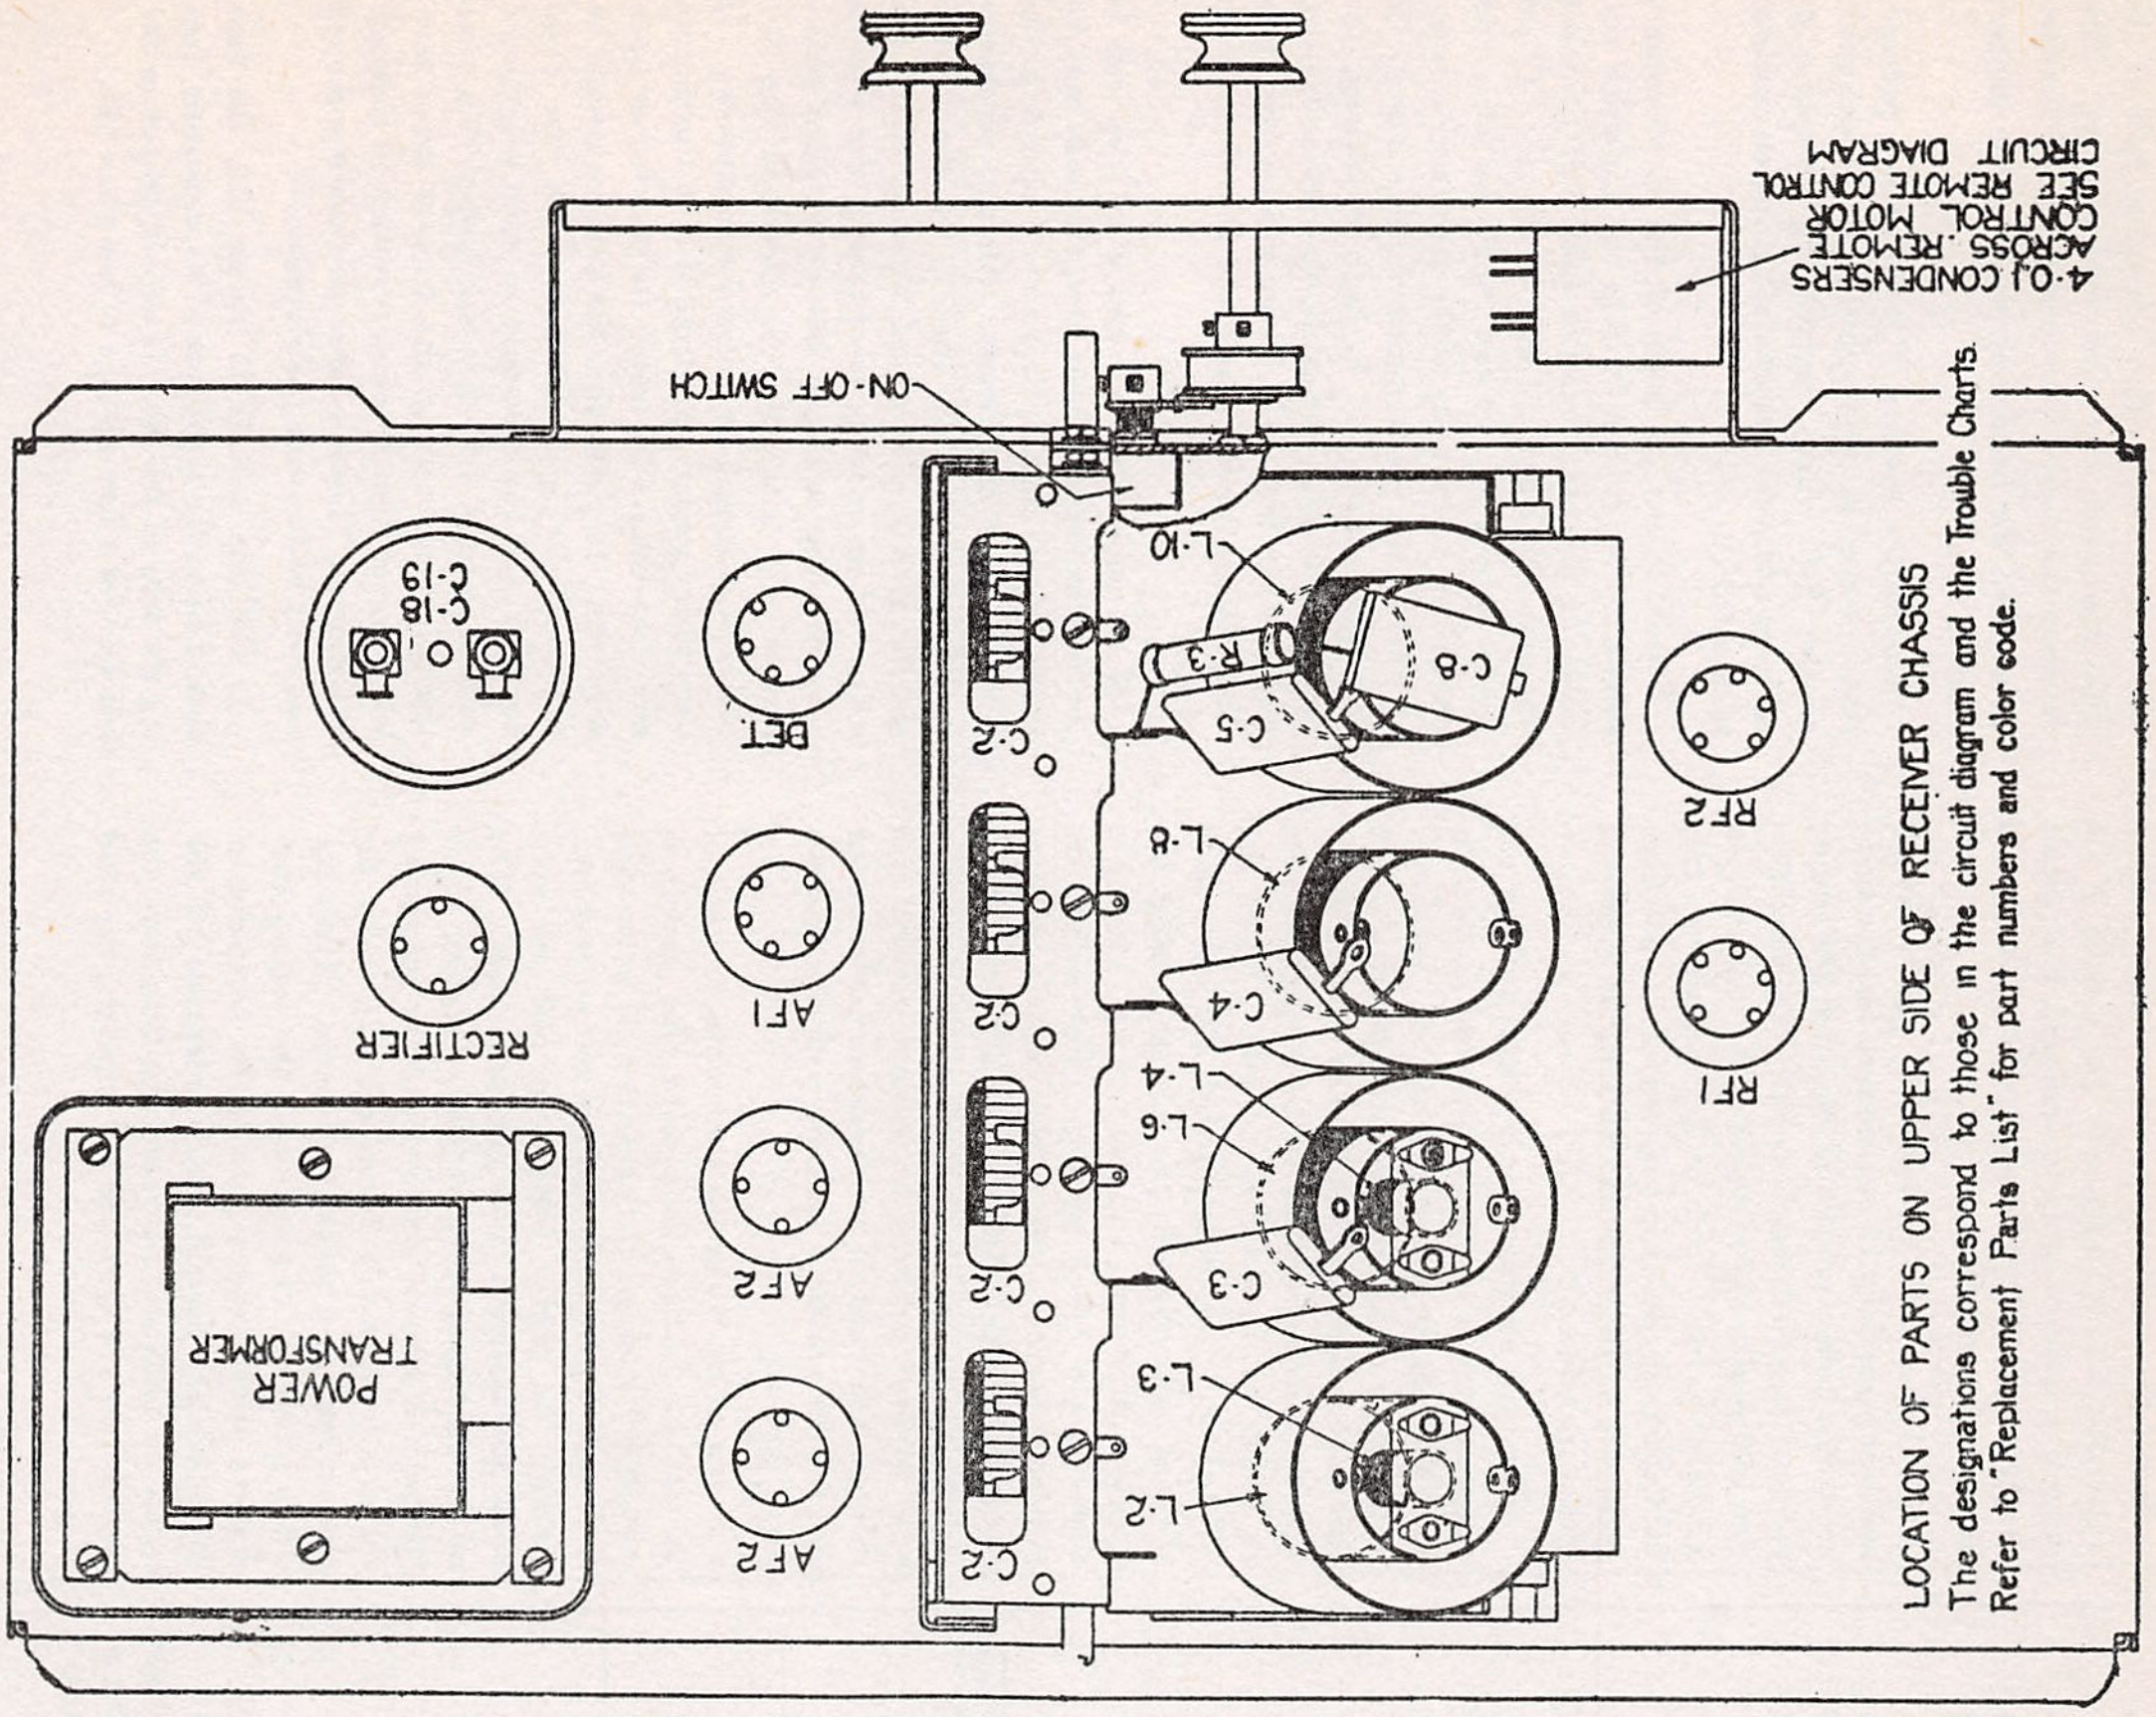

LOCATION OF PARTS ON UPPER SIDE OF RECEIVER CHASSIS
The designations correspond to those in the circuit diagram and the Trouble Charts. Refer to "Replacement Parts List" for part numbers and color code.

4-0.1 CONDENSERS ACROSS REMOTE CONTROL MOTOR SEE REMOTE CONTROL CIRCUIT DIAGRAM
ON-OFF SWITCH
C-19
C-18
C-17
DET.
RECTIFIER
AF1
AF2
AF2
POWER TRANSFORMER
C-2
C-2
C-2
C-2
L-10
R-3
C-8
C-5
L-8
C-4
L-4
L-6
C-3
L-3
L-2
RF2
RF1

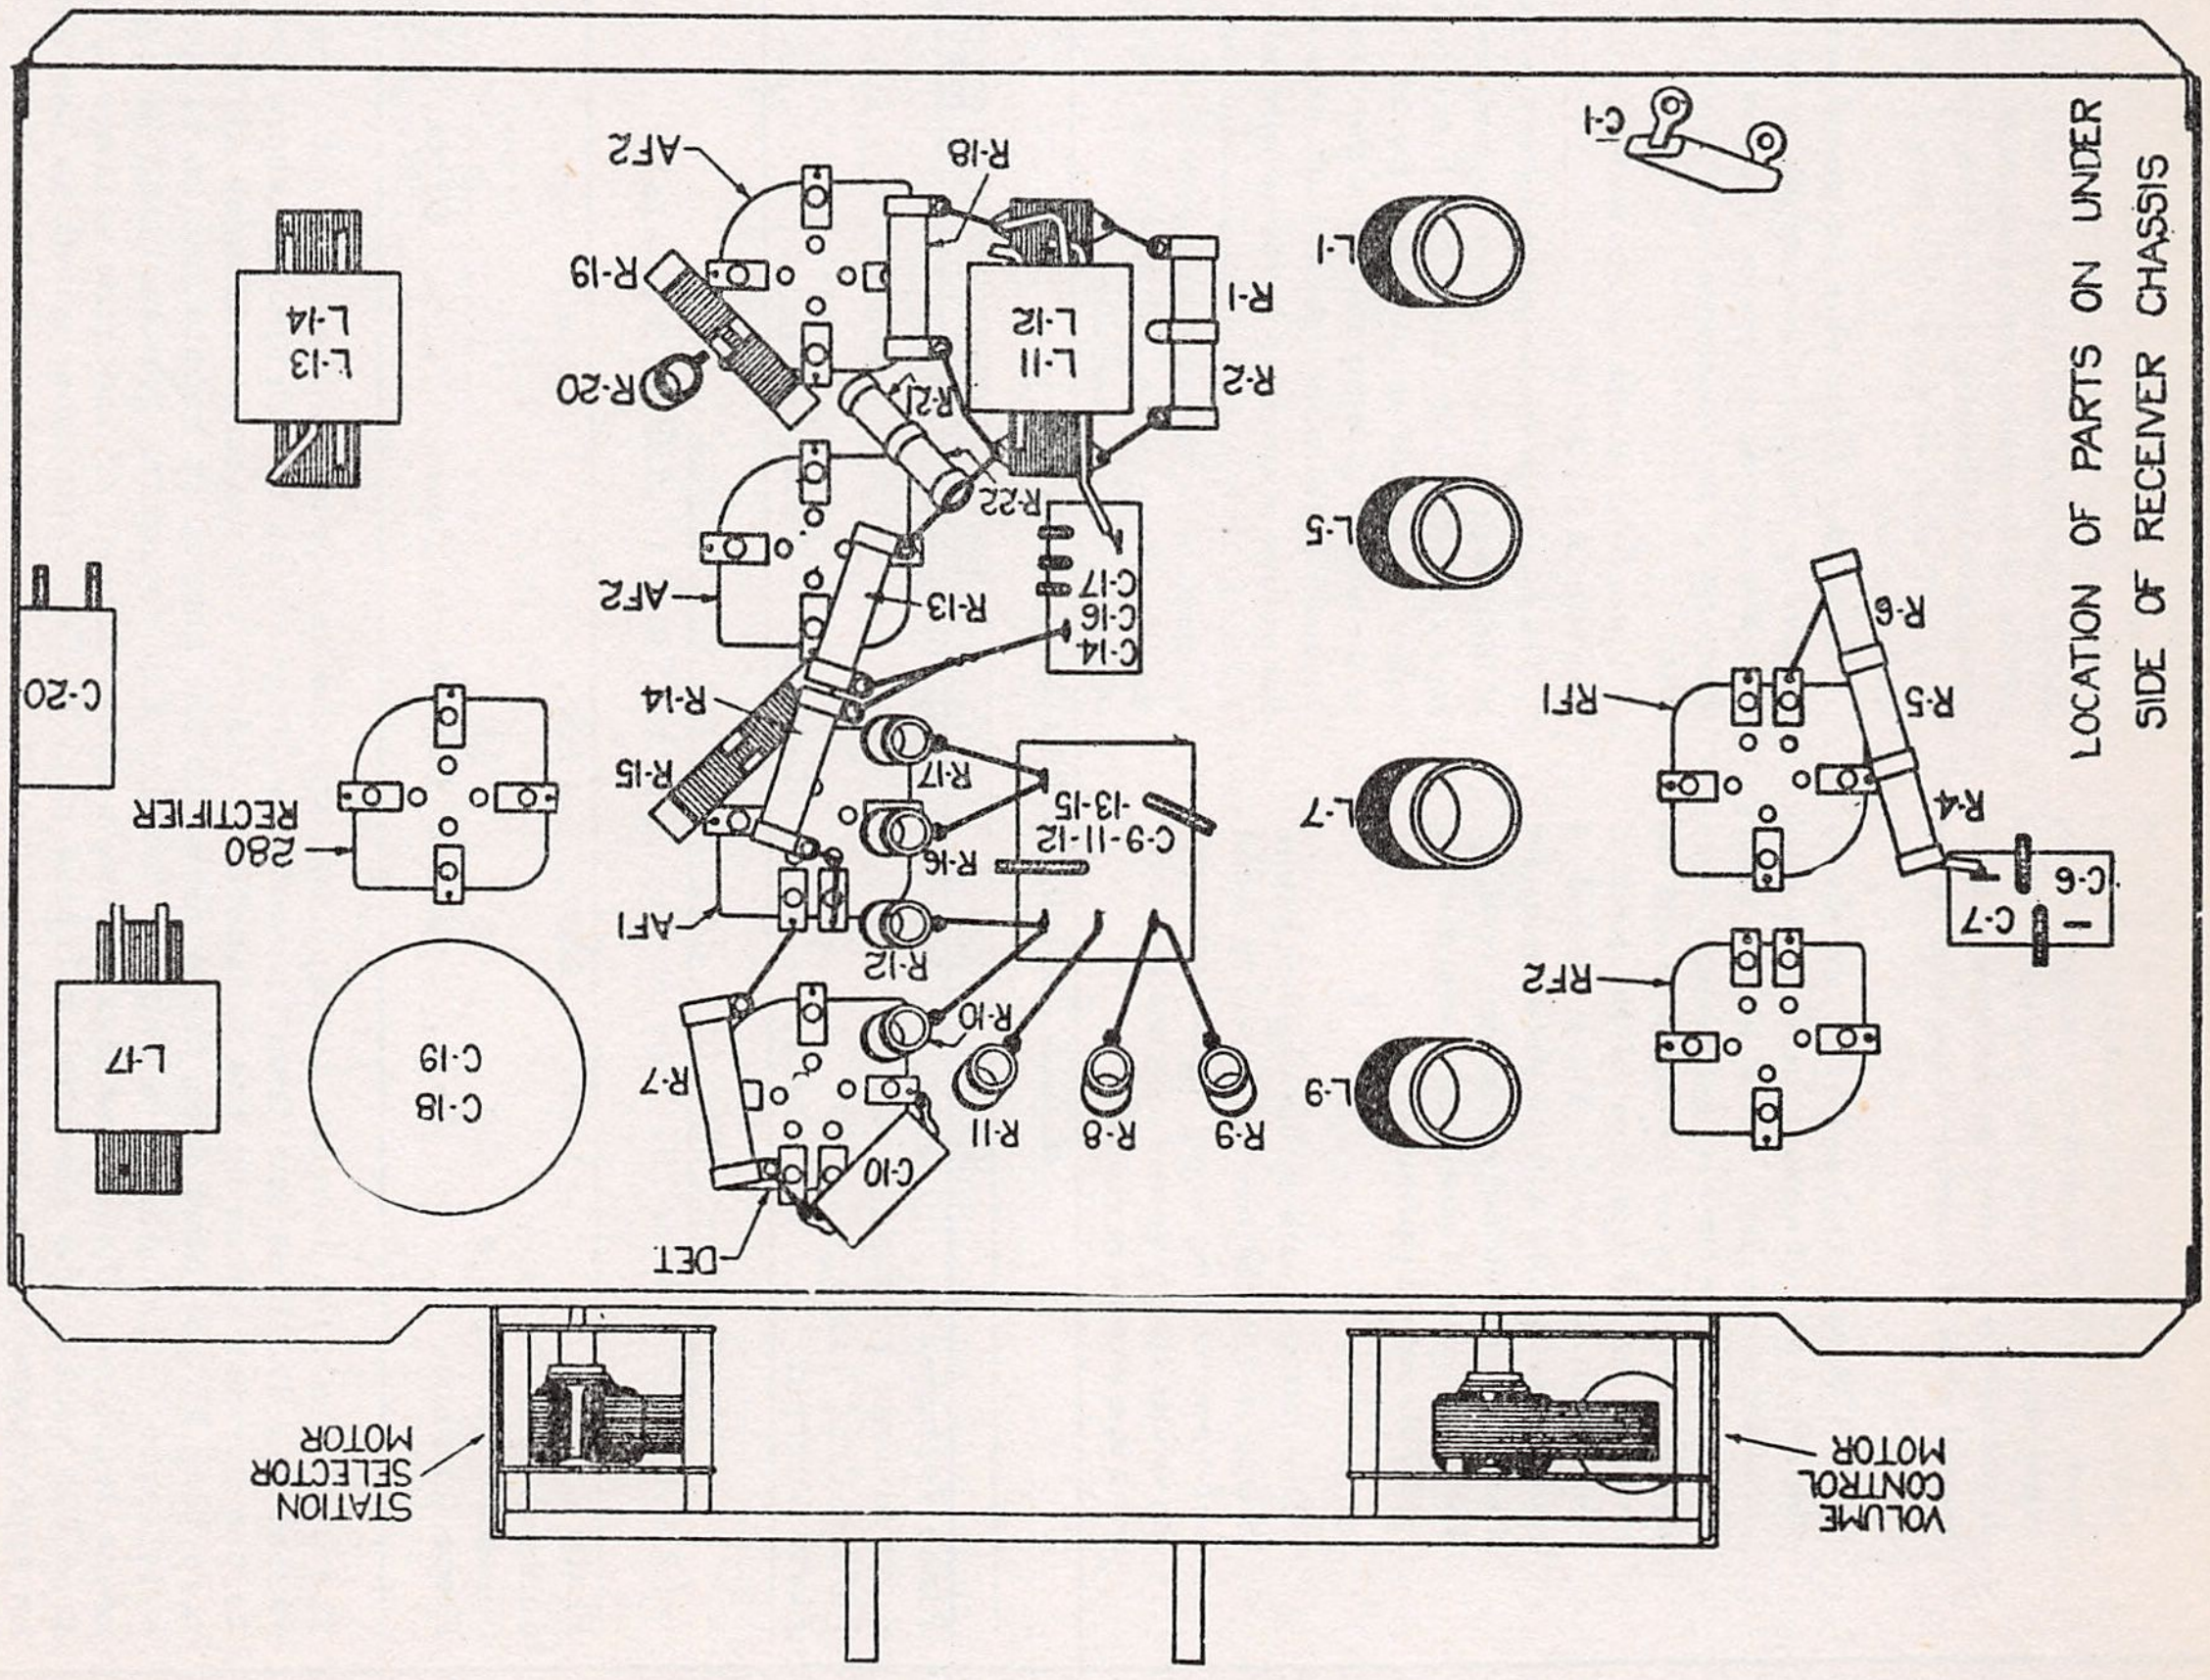

LOCATION OF PARTS ON UNDER SIDE OF RECEIVER CHASSIS

C-1
L-1
R-1
R-2
R-18
AF2
R-19
R-20
L-11
L-12
R-21
R-22
L-13
L-14
L-5
C-14
C-16
C-17
R-13
AF2
C-20
R-14
R-15
R-17
C-9-11-12-13-15
L-7
RF1
R-5
R-6
R-4
C-6
C-7
280 RECTIFIER
R-16
AF1
R-12
R-10
RF2
L-17
C-18
C-19
R-7
R-11
R-8
R-9
L-9
C-10
DET
STATION SELECTOR MOTOR
VOLUME CONTROL MOTOR

MODEL 33,34,35 AC
Remote Control Notes

COLONIAL RADIO CORP.

The two models, 33AC and 34AC, are identical electrically except that Model 34 has a more sensitive loudspeaker, capable of finer reproduction. Further, the push-pull output transformer is mounted on the speaker frame instead of in the receiver chassis, as in the model 33.

The Colonial 33AC and 34AC are obtainable both with and without the remote-control automatic-tuning unit. This unit is easily installed in those receivers not having it as an integral part. It in no way interferes with the ordinary manual operation of the receiver, should that be desired. Either method of control may be used without the necessity for disconnecting, switching or changing anything. The employment of one-control system does not render the other inoperative.

Due to an automatic anti-overloading feature incorporated in the receiver, it will be found that when receiving *strong signals*, *advancing* the volume control beyond a certain point will result in a *decrease* in volume.

Sometimes it is found that volume is better *without a ground connection.* This is due to the electric light wires acting as an antenna and feeding signals to the receiver. Under such conditions reception will usually be noisy. Connection of the ground wire causes the line filter condensers to effectively drain off both unwanted noise and whatever signal there may be picked up by the line.

The spark obtained when the ground wire is touched to the ground binding post or to the chassis is a *normal* occurrence. It is due to the discharge of the condensers used in the line filter.

A poor detector tube will create an objectionable hum in the speaker.

The fuse in the double mounting on the rear of the chassis provides a means for compensating for deviation of the line voltage from normal values. Normally the fuse is in the left side of the mounting, facing the rear of the chassis. It should be put in the right side only when the line voltage is known to be consistently below 110 volts. It is important that ~~this~~ adjustment be made, since excessive voltage will shorten the life of the tubes, and *insufficient* voltage will make the set *insensitive.*

ACTUAL VOLTAGES APPLIED TO TUBES

	RF1	RF2	Det.	AF1	AF2	280 Rectifier
Plate Voltage	180v.	180v.	150v.	100v.	240v.	....
Control-Grid Voltage	-3	-3	-2	-6	-45	....
Screen-Grid Voltage	90	90	35	....	....	....
Plate Current	3m.a.	3m.a.	0.2m.a.	3m.a.	28m.a.	....

VOLTAGES AS READ ON A 1000 OHMS PER VOLT METER
(PLATE VOLTAGES ON THE 250v.scale; GRID VOLTAGES ON THE 50 v.scale)

	RF1	RF2	Det.	AF1	AF2	280 Rectifier
Plate Voltage	180v.	180v.	60v.	70v.	235v.	....
Control-Grid Voltage				-0.5	-22	....
Screen-Grid Voltage	80	80	12	....	....	....
Plate Current	3m.a.	3m.a.	0.2m.a.	3m.a.	....	50 ma. each plate

The discrepancies between the applied and the measured voltages result from variations in tubes and from increased voltage drops in series resistors due to the current taken by the voltmeter. Unless the measured voltages differ by more than 25 por cent from those given in the chart, it should not be taken as a definite indication of a fault. Usually any deviation greater than 25 per cent means trouble. These readings assume a 120v. line. If the line voltage differs from 120 volts, the measured voltages will differ from those given in the chart in approximately the same ratio.

The Remote-Control Automatic-Tuning Unit

Since the servicing of the remote-control automatic-tuning unit will be simple if its operation is thoroughly understood, the circuit diagram and the following explanation should be studied carefully.

*Fig. 4 shows the circuit used. As is seen, it consists essentially of two motors, one for turning the volume control and the other the tuning condensers, and means for controlling the direction and amount of rotation of the motors from a remote point. Each of the motors has two field windings, poled in such way that switching from one to the other reverses the direction of motor rotation.

When the remote-control push buttons are not pressed, the circuit is open and no current flows through the motors. When the "Vol. Inc." button is pressed, the circuit is completed through that field winding of the volume control motor which will cause rotation in the proper direction to secure an increase of volume. When the "Vol. Dec." button is pressed, the other field winding is connected, the motor runs in the opposite direction, and the volume control is turned to a lower setting. Just before its minimum position, the volume control operates the receiver line switch. Since a friction drive is used no damage will result if the button is kept pressed. After the volume control has reached the limit of its movement, the motor will merely continue running with the friction drive slipping.

* Study of fig. 4 reveals that when any one of the station buttons is pressed, the circuit is completed through the contact stud connected to it and the station-selector motor revolves, turning the tuning condensers and the split brass disk fastened to the condenser shaft. The motor continues to drive the condenser shaft (through a friction drive) until the insulating slit in the brass disk comes directly under the contact stud and breaks the circuit. When the slit is under the contact stud, the tuning condensers are in proper position for reception of the station. Should the momentum of the motor be sufficient to carry the disk past the point where the stud and slit coincide, the stud will make contact with the other half of the disk, energizing the other field winding. This reverses the motor direction, bringing the disk back until the insulating slit and the contact stud do coincide.

The button marked "Quiet", when pressed, removes the voltage applied to the screen-grids of the R.F. tubes, preventing reception of stations while the automatic-tuning mechanism is in action.

Should either or both of the drive-motors refuse to run, or run in only one direction the following procedure may be followed: Connect one end of a length of wire to contact "C" of the receptacle (fig 4.) and touch the other end alternately to each lug of the condenser mounted next to the volume control drive motor. If the motors run, and in both directions, the trouble is in either the cable, the remote-control push-button box, or the contacts on the brass disk. A continuity check will reveal the open circuit.

If the motors do not run when the wire is touched to the condenser lugs, the fault may lie in the voltage supply, the motor proper or in the 0.1 mfd filter condensers. An a.c. voltmeter connected from "C" (fig. 4) to the chassis should give a reading of approximately ten volts. If no reading is obtained, the trouble may be either a blown fuse or an open transformer. If a reading is obtained the 0.1 condensers should be tested for breakdown. If they prove perfect, the trouble is in the motors and they should be tested for shorted or open windings. In particular, the brushes should be examined for good contact with the commutator, and the commutator itself brightened with a piece of very fine sandpaper. In time the spider washers in the friction drive may lose some of their tension, resulting in slippage in the drive. These washers are easily removed and bent to increase their tension.

If the line voltage is above 110, the fuse should be in the right side of its mounting, facing the rear of the set. It should be put in the left side for a line voltage of less than 110.

MODEL 33,34,35 AC
Parts List

COLONIAL RADIO CORP.

REPLACEMENT PARTS LIST

Circuit Designation	Value	Part No.	Remarks
R 1	100,000 ohms	4635—P	Center-tapped 200,000 ohm resistor
R 2	100,000	4635—P	
R 3	750,000	4595—P—6	Orange
R 4	11,000	4593—P	
R 5	60,000	4593—P	Tapped resistor
R 6	50,000	4593—P	
R 7	20,000	4595—P—5	Grey
R 8	750,000	4595—P—6	Orange
R 9	750,000	4595—P—6	Orange
R 10	200,000	4595—P—2	Brown
R 11	50,000	4595—P—4	Red
R 12	200,000	4595—P—2	Brown
R 13	400,000	4595—P—1	Yellow
R 14	1,000,000	4595—P—7	Blue
R 15	20	4529—P	Center tapped
R 16	20,000	4595—P—5	Grey
R 17	50,000	4595—P—4	Red
R 18	100,000	4595—P—3	Green
R 19	20	4529—P	Center tapped
R 20	800	4596—P	Blue vitreous enamel type resistor
R 21	210	4594—P	Center tapped 420 ohm resistor
R 22	210	4594—P	
C 1	00025 mfd.	4534—P	Ant. series condenser
C 2	.0003	1842—SA	Tuning condenser
C 3	.2	4527—P	
C 4	.2	4527—P	
C 5	.2	4527—P	
C 6	.5	4514—P	Red lead and adjacent lug
C 7	.2	4514—P	Black lead and adjacent lug
C 8	.2	4527—P	
C 9	.5	4513—P	Black lead and furthest lug in row of three
C 10	.0001	4597—P	
C 11	.005	4513—P	Red lead and middle lug in row of three
C 12	.0001	4513—P	Black lead and middle lug in row of three
C 13	1.	4513—P	Black lead and nearest lug in row of three

Circuit Designation	Value	Part No.	Remarks
L 1		1821—SA	Ant. primary
L 2		1826—SA	R.F. transformer secondary
L 3		1827—SA	Link coil
L 4		1827—SA	Link coil
L 5		1823—SA	R.F. transformer primary
L 6		1826—SA	R.F. transformer secondary
L 7		1823—SA	R.F. transformer primary
L 8		1826—SA	R.F. transformer secondary
L 9		1823—SA	R.F. transformer primary
L 10		1826—SA	R.F. transformer secondary
L 11		1843—SA	Push-pull input transformer
L 12		1843—SA	
L 13		1835—SA	Push-pull output transformer (Model 33)
L 14		1835—SA	
L 15		1866—SA	Cone and voice coil (Model 33
L 16		1904—SA—1	Speaker field coil (Model 33)
		1959—SA	Speaker field coil (Model 34)
L 17	4.5 henries	1829—SA	Filter choke **4.5 henries**
L 18		1830—SA	60 cycle power transformer (Model 33)
L 19			
L 20		1952—SA	60 cycle power transformer (Model 34)
L 21		1946—SA	25 cycle power transformer (Model 33)
L 22		1985—SA	25 cycle power transformer (Model 34)
L 23			
		1964—SA	Model 34—Push-pull output transformer (Primary)
		1960—SA	Model 34—Cone, actuating ring and secondary
		4506—P	Model 33 and 34 line switch
C 14	.2	4521—P	Black lead and adjacent lug
C 15	.25	4513—P	Black lead and solitary lug
C 16	.2	4521—P	Black lead and further lug
C 17	.0005	4521—P	Yellow leads
C 18	8.	4503—P	Mershon condenser
C 19	8.	4503—P	
C 20	.1	4598—P	Line buffer
	.1	4724—P	25 cycle R.F. screen-grid bi-pass condenser

MODEL 36 DC

COLONIAL RADIO CORP.

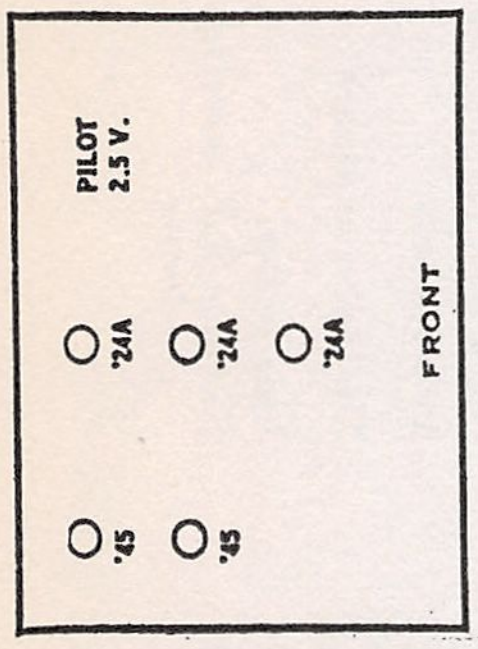
PILOT 2.5 V.
'24A
'24A
'24A
'45
'45
FRONT

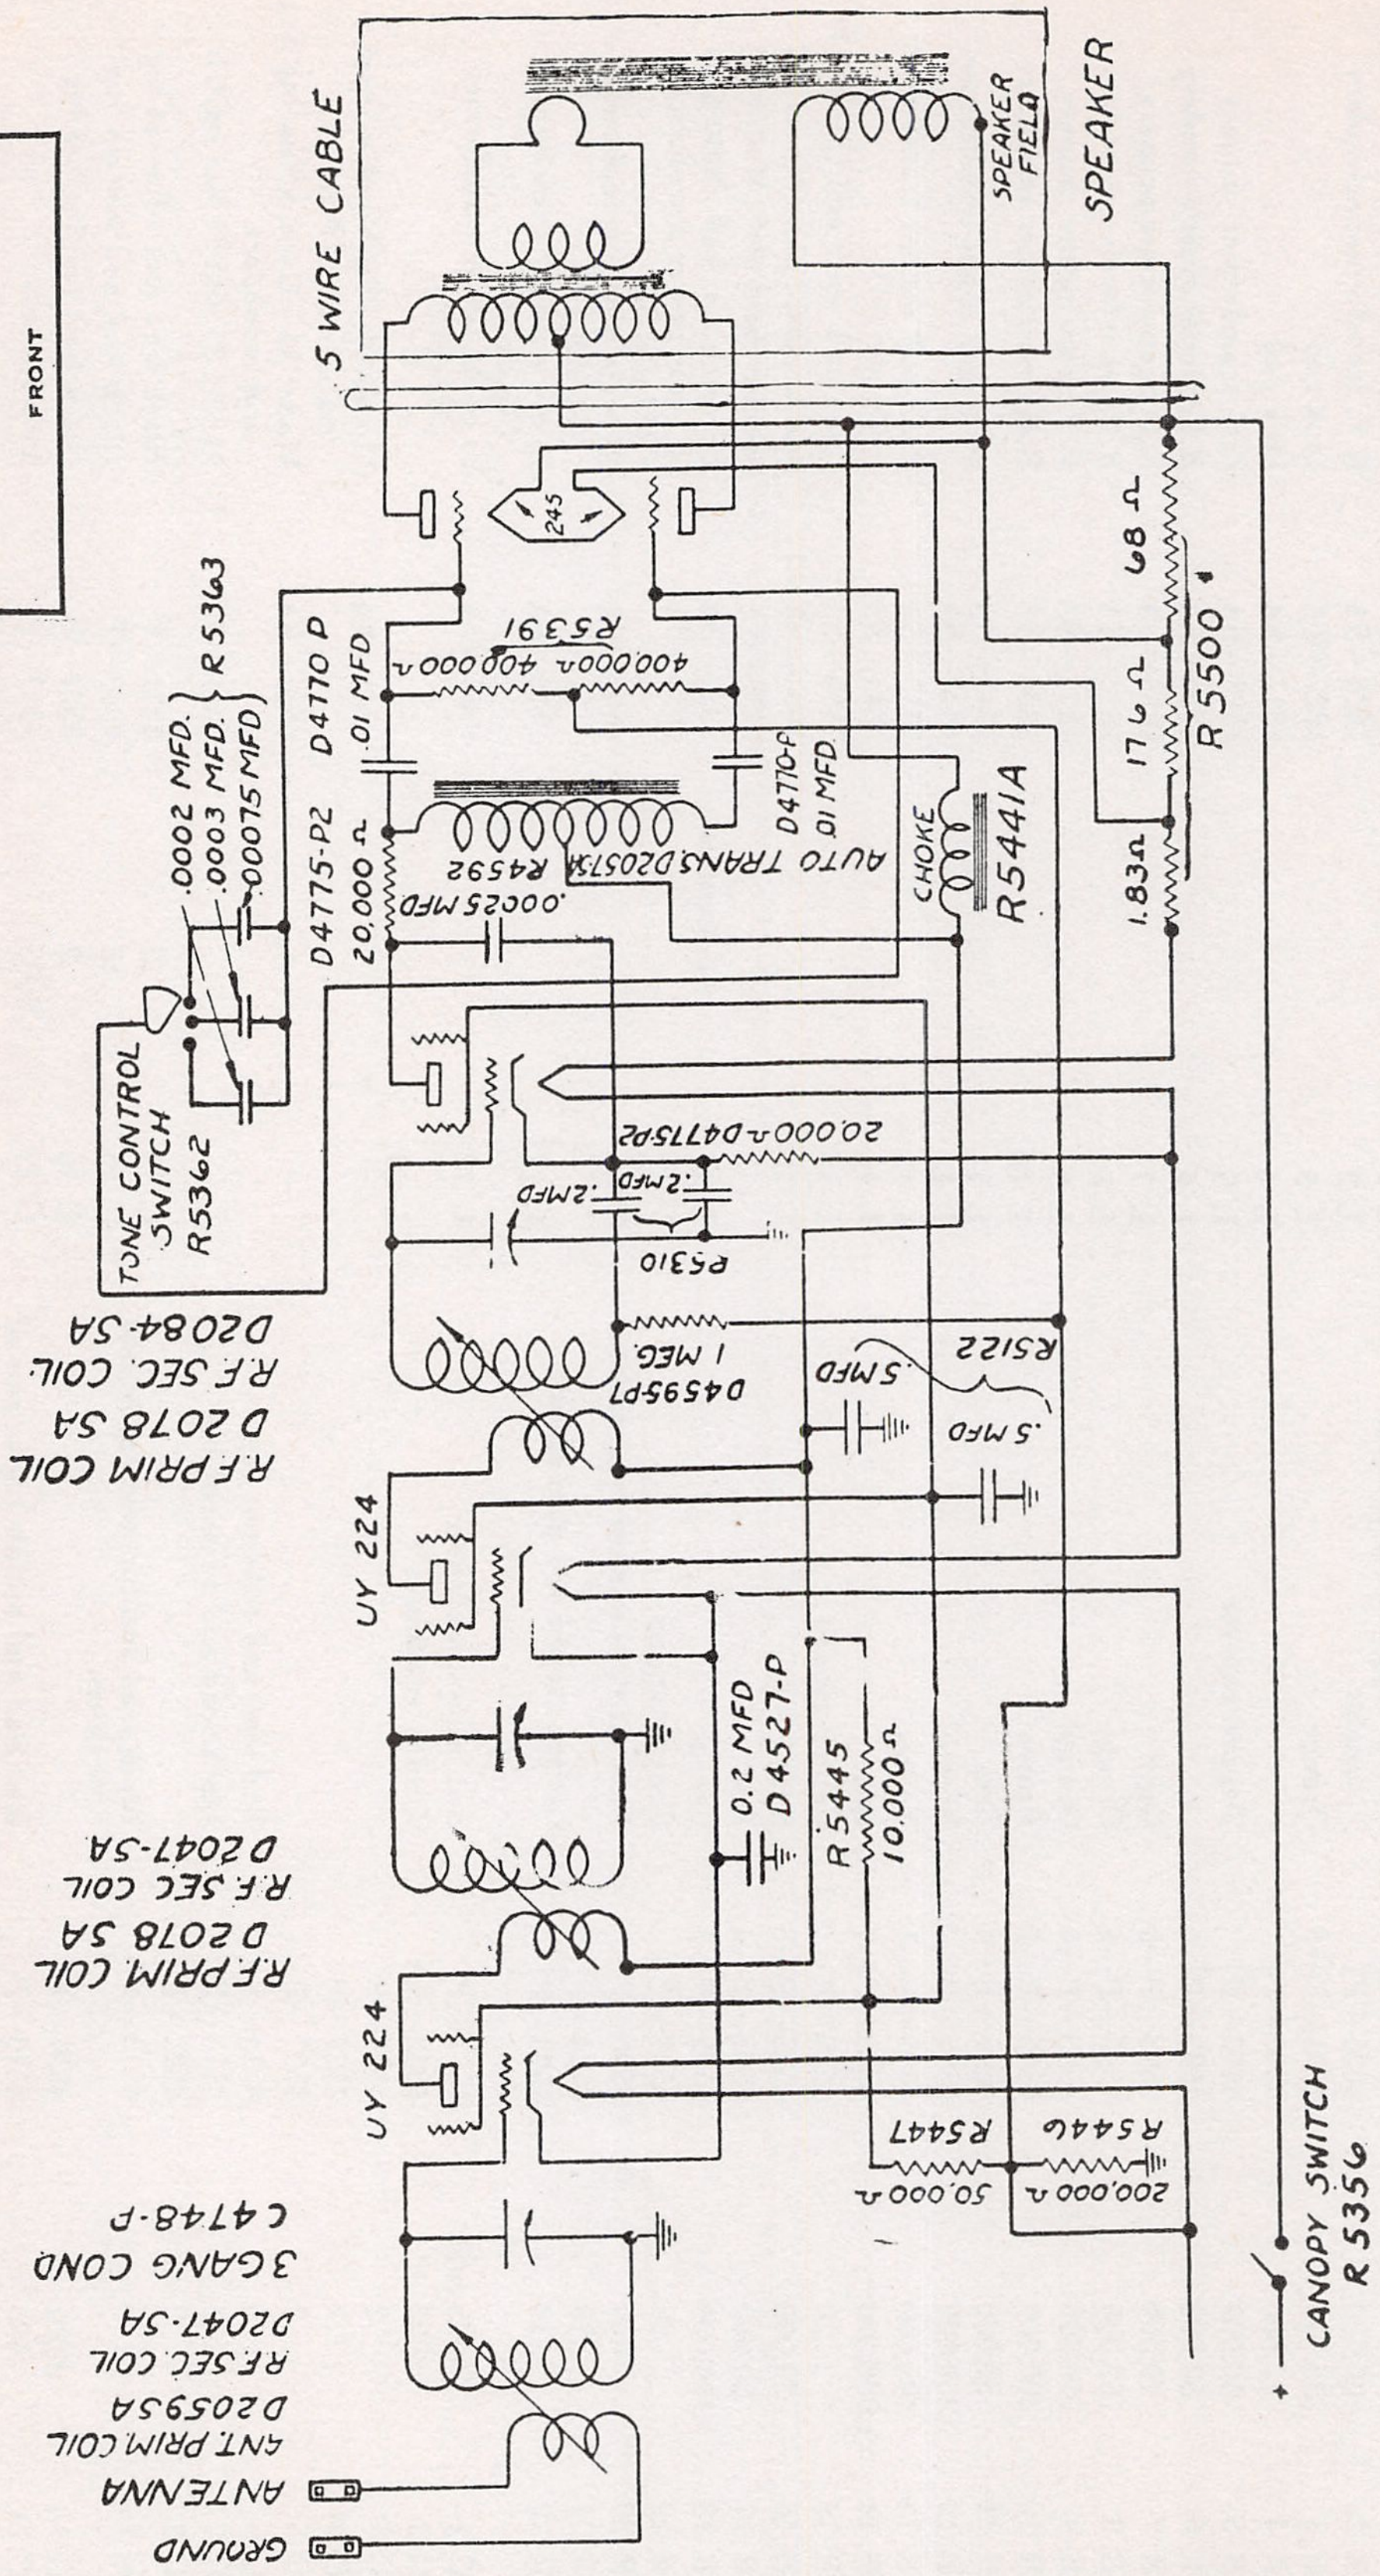
5 WIRE CABLE
SPEAKER FIELD
SPEAKER
245
R5391
400,000 Ω
400,000 Ω
D4770 P
.01 MFD
D4770-P
.01 MFD
AUTO TRANS. D2057A
R4592
CHOKE
R5441A
68 Ω
17.6 Ω
1.83 Ω
R5500
D4775-P2
20,000 Ω
.00025 MFD
.0002 MFD.
.0003 MFD.
.00075 MFD.
R5363
TONE CONTROL SWITCH
R5362
20,000 Ω D4775-P2
.2 MFD
.2 MFD
R5310
R.F. SEC. COIL
D2084-5A
R.F. PRIM COIL
D2078 5A
D4595-P1
1 MEG.
.5 MFD
R5122
.5 MFD
UY 224
0.2 MFD
D4527-P
R5445
10,000 Ω
R.F. SEC COIL
D2047-5A
R.F. PRIM. COIL
D2078 5A
UY 224
R5447
50,000 Ω
R5446
200,000 Ω
CANOPY SWITCH
R5356
+
3 GANG COND
C4748-P
R.F. SEC. COIL
D2047-5A
ANT. PRIM. COIL
D2059-5A
ANTENNA
GROUND

COLONIAL RADIO CORP.

MODEL 36, 114.

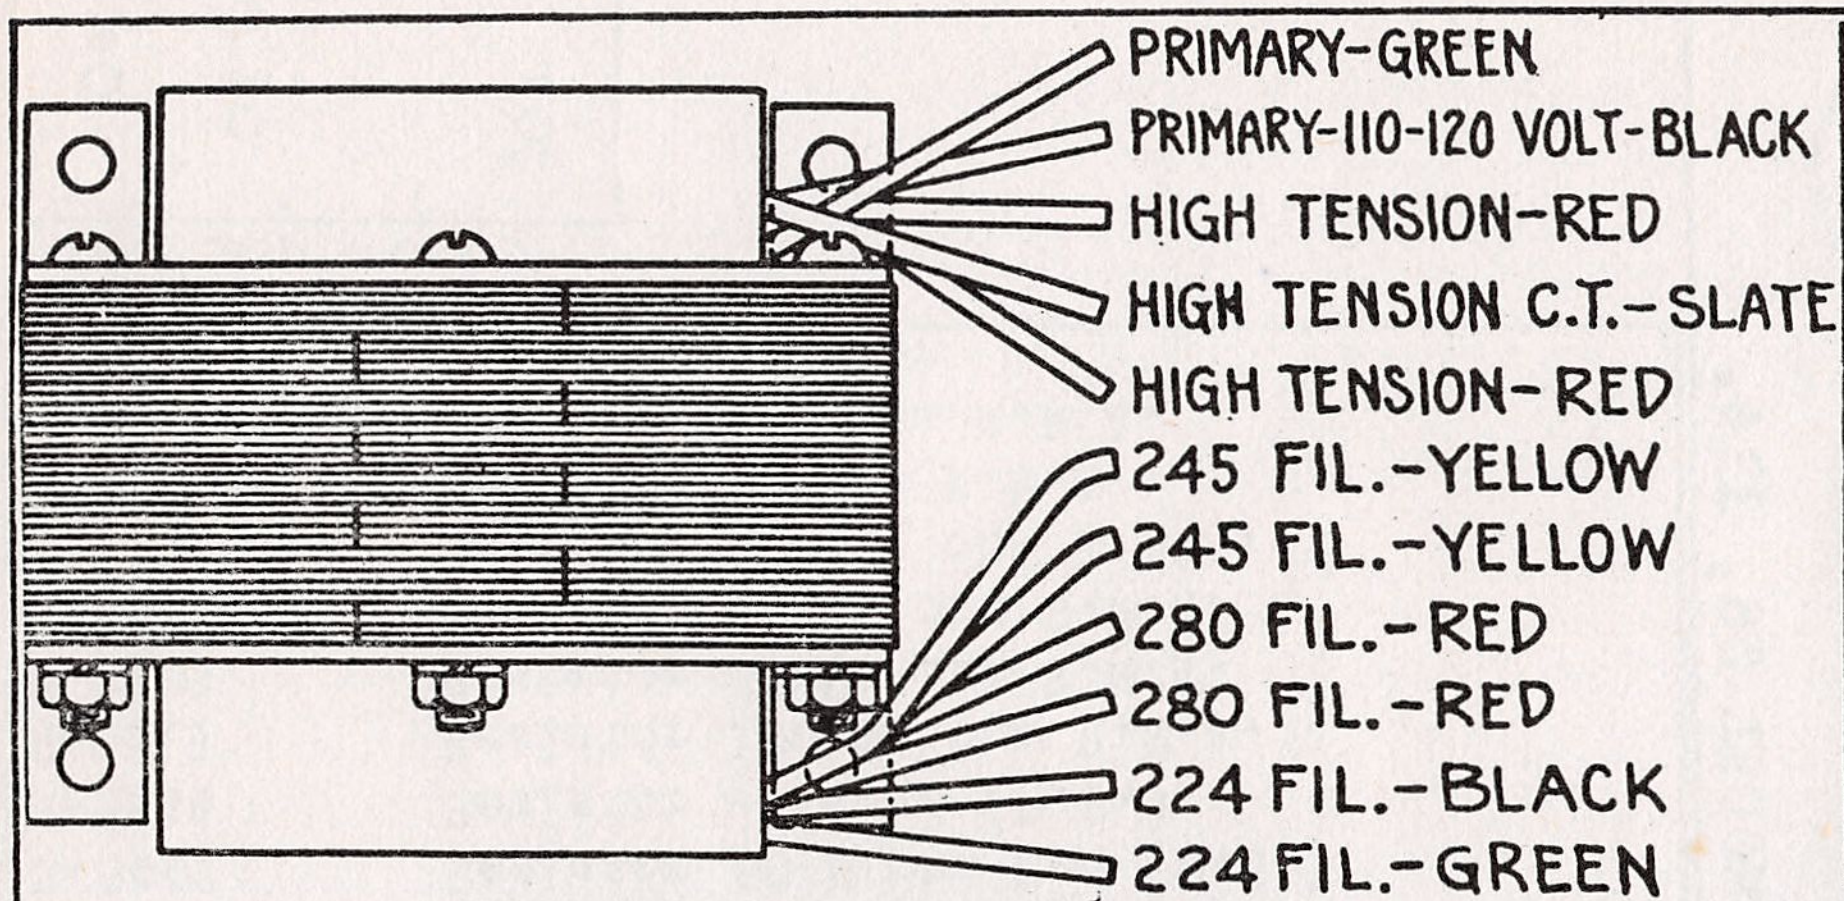
PRIMARY-GREEN
PRIMARY-110-120 VOLT-BLACK
HIGH TENSION-RED
HIGH TENSION C.T.-SLATE
HIGH TENSION-RED
245 FIL.-YELLOW
245 FIL.-YELLOW
280 FIL.-RED
280 FIL.-RED
224 FIL.-BLACK
224 FIL.-GREEN

POWER TRANSFORMER
2050-SA= 60 CYCLE
R-5367-A =25 CYCLE

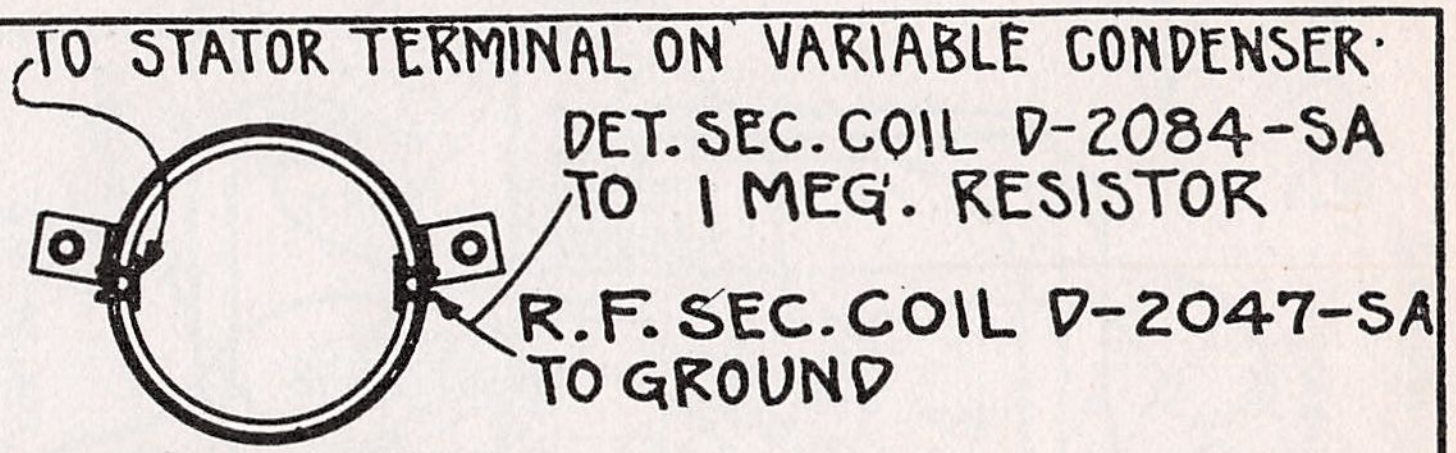
TO STATOR TERMINAL ON VARIABLE CONDENSER
DET. SEC. COIL D-2084-SA TO 1 MEG. RESISTOR
R.F. SEC. COIL D-2047-SA TO GROUND

SECONDARY COIL
DET. SEC. COIL = D-2084-SA (YELLOW SPOT)
R.F. SEC. COIL = D-2047-SA (PLAIN)

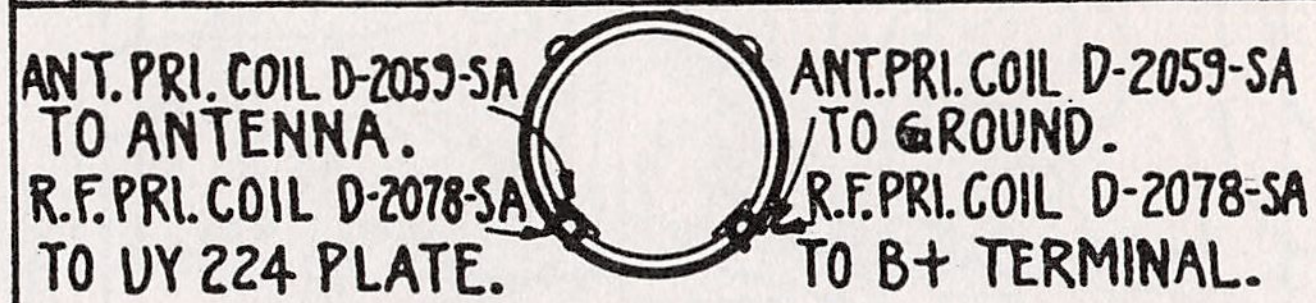
ANT. PRI. COIL D-2059-SA TO ANTENNA.
R.F. PRI. COIL D-2078-SA TO UY 224 PLATE.
ANT. PRI. COIL D-2059-SA TO GROUND.
R.F. PRI. COIL D-2078-SA TO B+ TERMINAL.

PRIMARY COIL
ANT. PRI. COIL = D-2059-SA (YELLOW SPOT)
R.F. PRI. COIL = D-2078-SA (PLAIN)

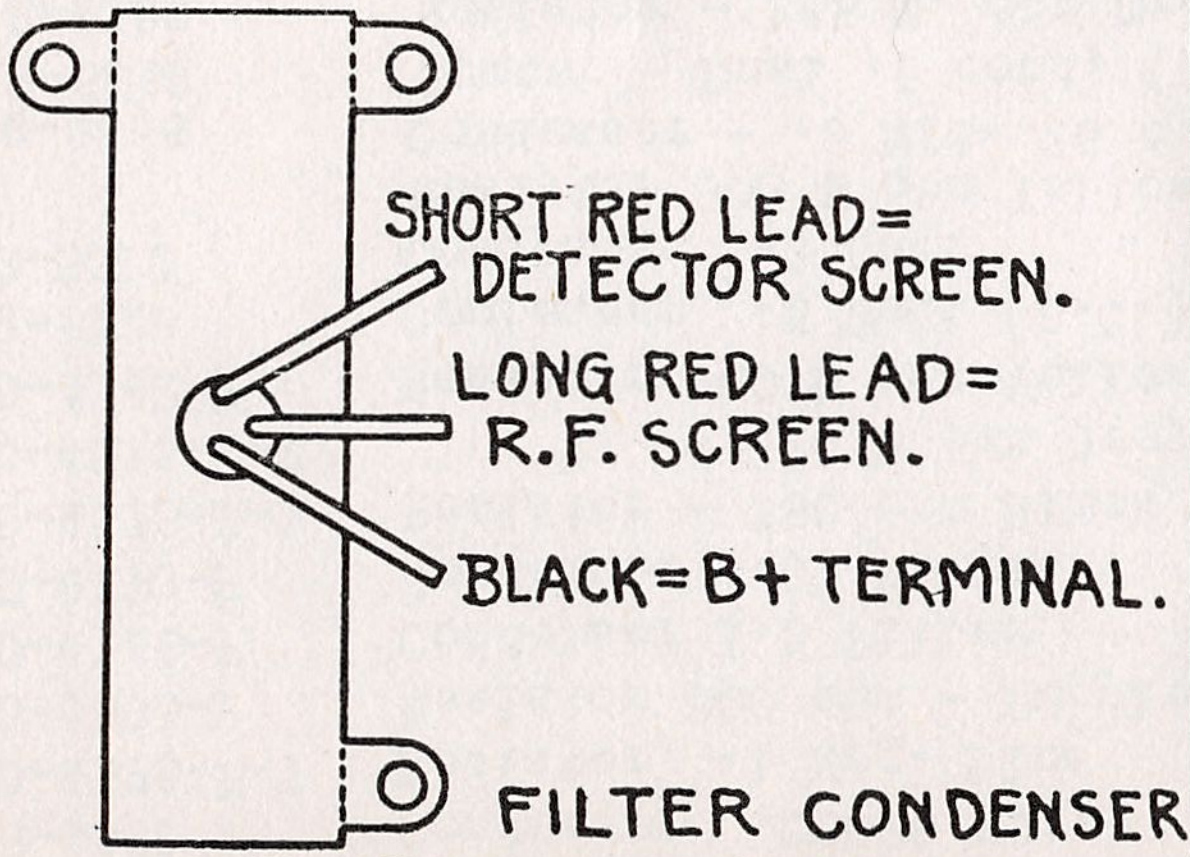
SHORT RED LEAD= DETECTOR SCREEN.
LONG RED LEAD= R.F. SCREEN.
BLACK=B+ TERMINAL.

FILTER CONDENSER
D-4766-P = 60 CYCLE
R-5366 = 25 CYCLE

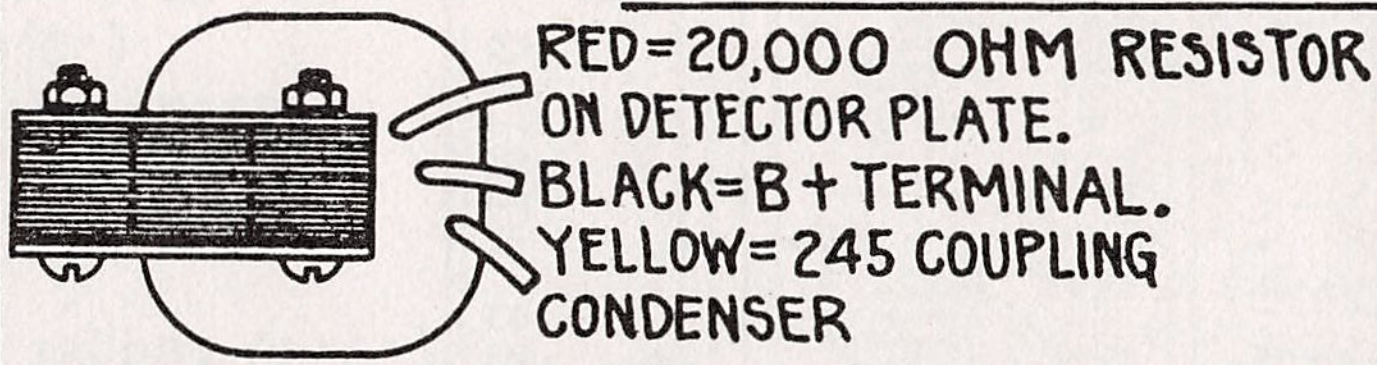
RED=20,000 OHM RESISTOR ON DETECTOR PLATE.
BLACK=B+ TERMINAL.
YELLOW= 245 COUPLING CONDENSER

AUTO TRANSFORMER = 2057-SA

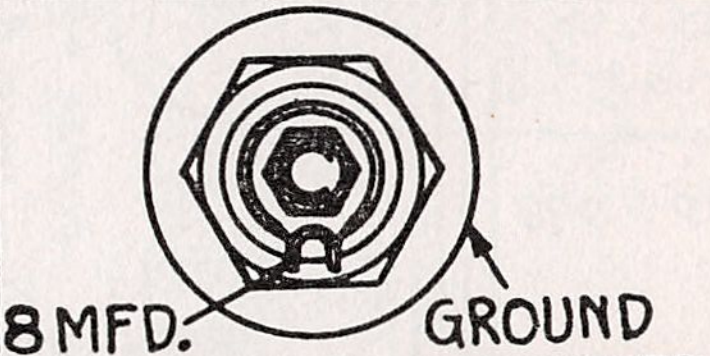
8 MFD.
GROUND

ELECTROLYTIC CONDENSER
D-4758-P

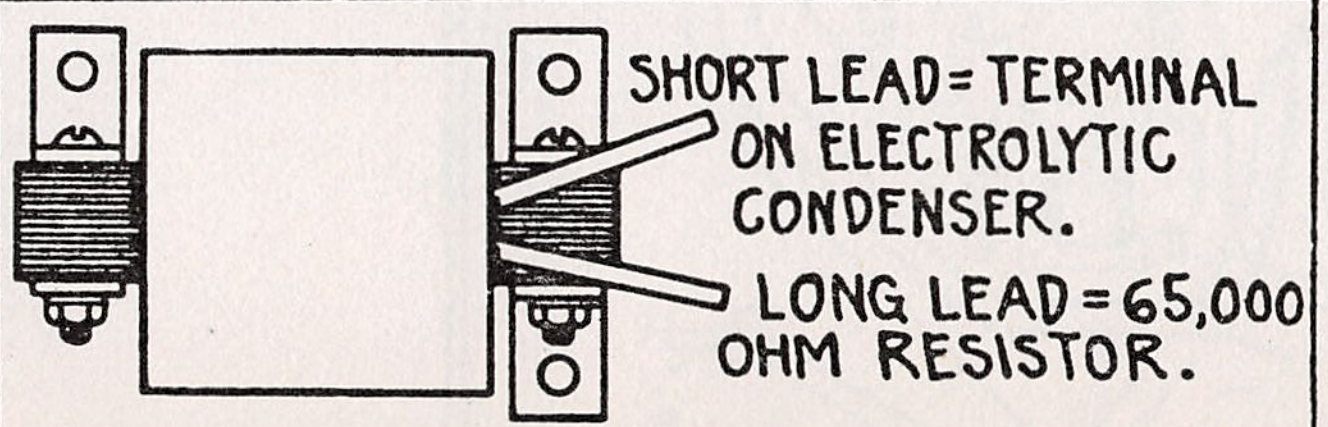
SHORT LEAD= TERMINAL ON ELECTROLYTIC CONDENSER.
LONG LEAD = 65,000 OHM RESISTOR.

CHOKE = D-4809-A

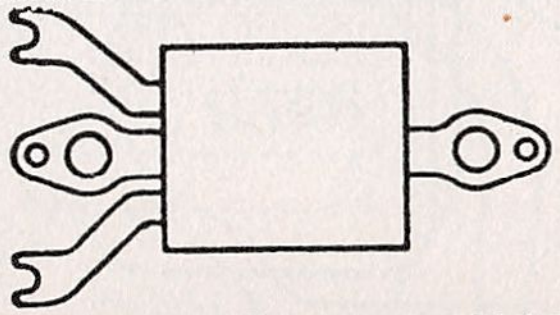

TONE CONTROL CONDENSER
R-5363

LEAD DETAILS OF POWER & AUTO TRANSFORMER, CHOKE, FILTER, TONE CONTROL, & ELECTROLYTIC CONDENSERS-PRIMARY & SECONDARY R.F. COILS.

MODEL 36
114
Chassis and Parts

COLONIAL RADIO CORP.

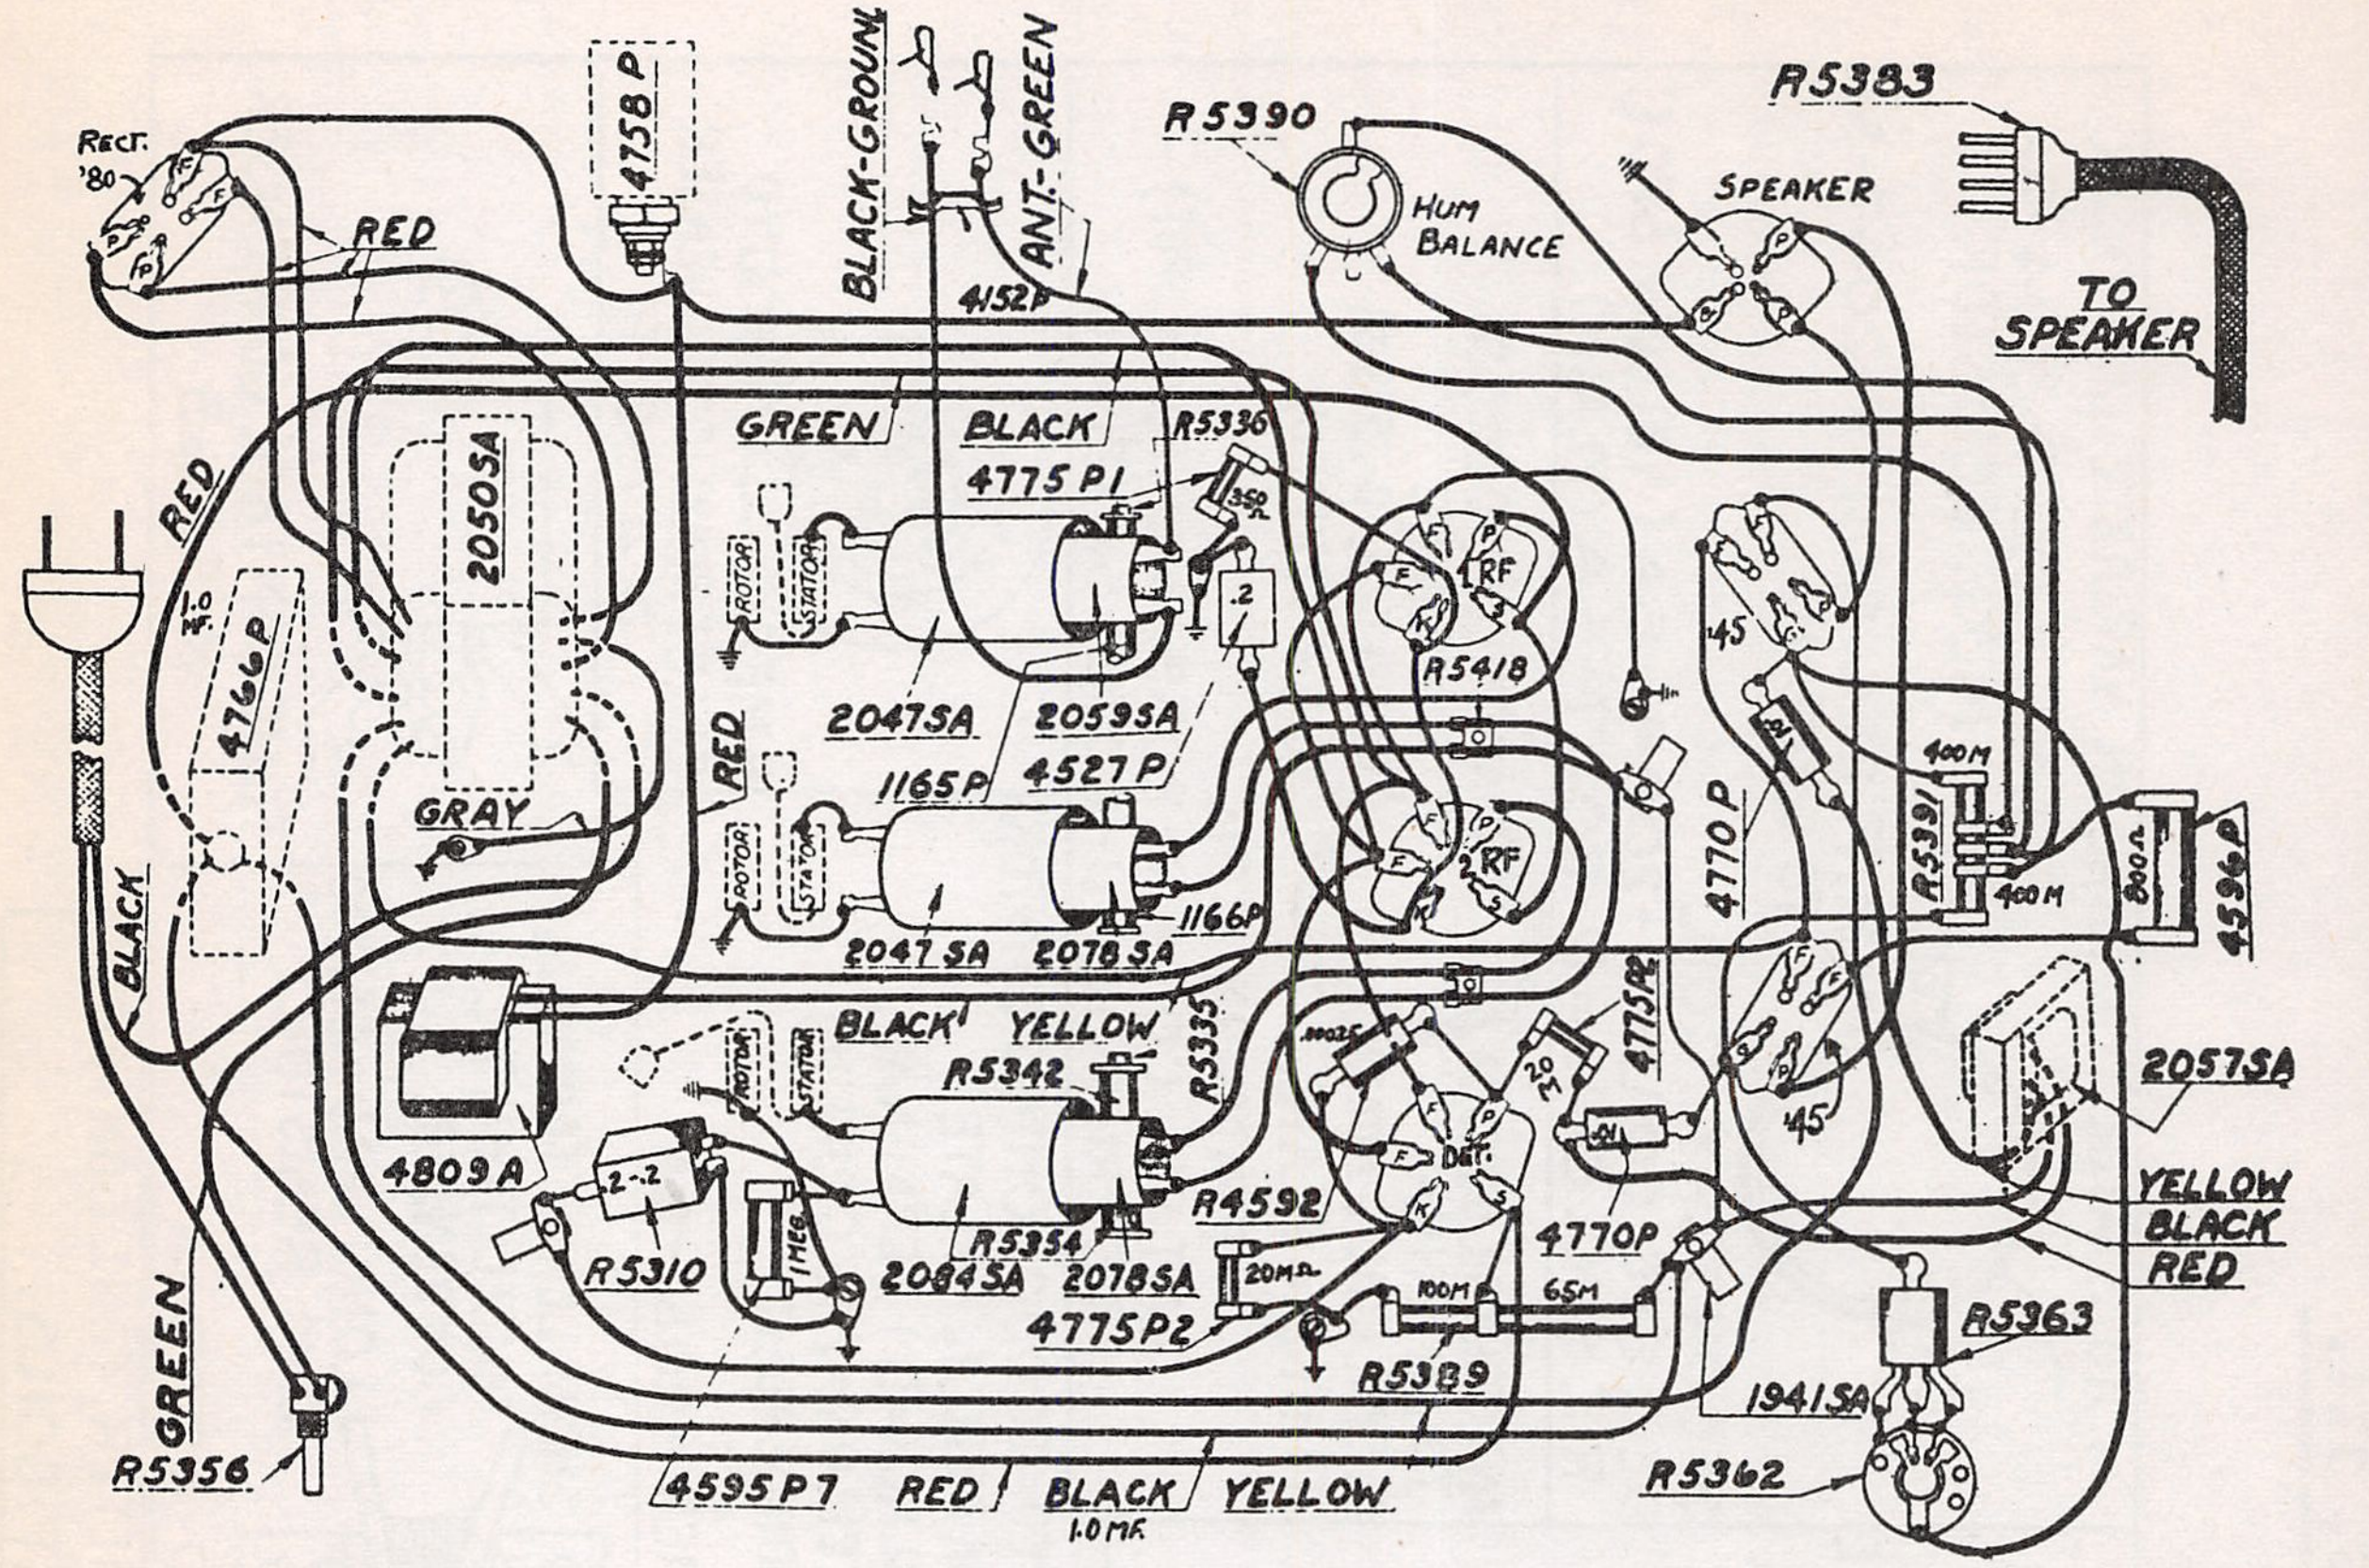
RECT. '80
RED
4158 P
BLACK-GROUND
ANT.-GREEN
4152P
R5390
HUM BALANCE
SPEAKER
R5383
TO SPEAKER
GREEN
BLACK
4775 P1
R5336
350Ω
RF
R5418
'45
RED
1.0 MF.
4766P
2050SA
ROTOR
STATOR
2047SA
2059SA
1165P
4527P
RED
GRAY
1166P
2047 SA
2078 SA
2 RF
4770 P
R5391
400M
400 M
800Ω
4596P
BLACK
YELLOW
R5342
R5335
.00025
20
4775P2
4809A
2-.2
R5310
1MEG.
R5354
2084SA
2078SA
R4592
DET.
4770P
'45
2057SA
YELLOW
BLACK
RED
20MF.
4775P2
100M
65M
R5389
R5363
1941SA
R5362
GREEN
R5356
BLACK
4595 P7
RED
BLACK
1.0MF.
YELLOW

CHASSIS WIRING MODEL 36, 114.

MODELS 36, 36-P & 41-P
Parts list & color code.

R-4354	Resistor 50 M. ohm Grey (D.C.)
D-4527-P	Condenser .2 Midget
R-4592	Condenser .00025 Mfd.
D-4595-P-7	Resistor .1 Meg. Blue
D-4596-P	Resistor 800 ohm - Purple
D-4766-P	Condenser 1.5 Filter
D-4770-P	Condenser .01 Midget
D-4775-P-1	Resistor - 350 ohm Black
D-4775-P-2	" - 20 M ohm Grey
D-4782-P	Resistor 800 M ohm Yellow Tapped (D.C.)
R-5122	Condenser .5 Dual (D.C.)
R-5310	Condenser .2 Dual
	Resistor 800 M ohm Yellow
R-5366	Condenser - .5 Mfd. 25 cycle Filter
R-5369	Spacer - Dual .5 cond. (D.C.)
R-5389	Resistor - 165 M. ohm Green & Black
R-5390	Potentiometer 600 ohm
R-5431	Speaker 10"
R-5445	Resistor 10 M ohm Black (D.C.)
R-5447	Resistor 50 M ohm Red (D.C.)
R-5544	Resistor - large (D.C.)
R-5819	Resistor 100 M. ohm R.M.A.
R-5820	Resistor 65 M. ohm R.M.A.
R-5821	Resistor 20 M. ohm R.M.A.
R-5822	Resistor 400 M. ohm R.M.A.
R-5823	Resistor 1 Meg. R.M.A.
R-5824	Resistor 350 ohm R.M.A.
R-5417	Filter Condenser

Models 36, 38, 41, 42 (1930)

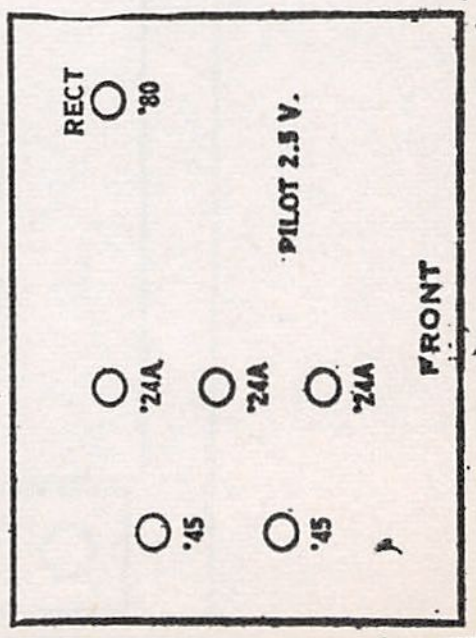
RECT '80
PILOT 2.5 V.
'24A
'24A
'24A
'45
'45
FRONT

MODEL 37
Schematic

COLONIAL RADIO CORP.

Model 37 (1931)

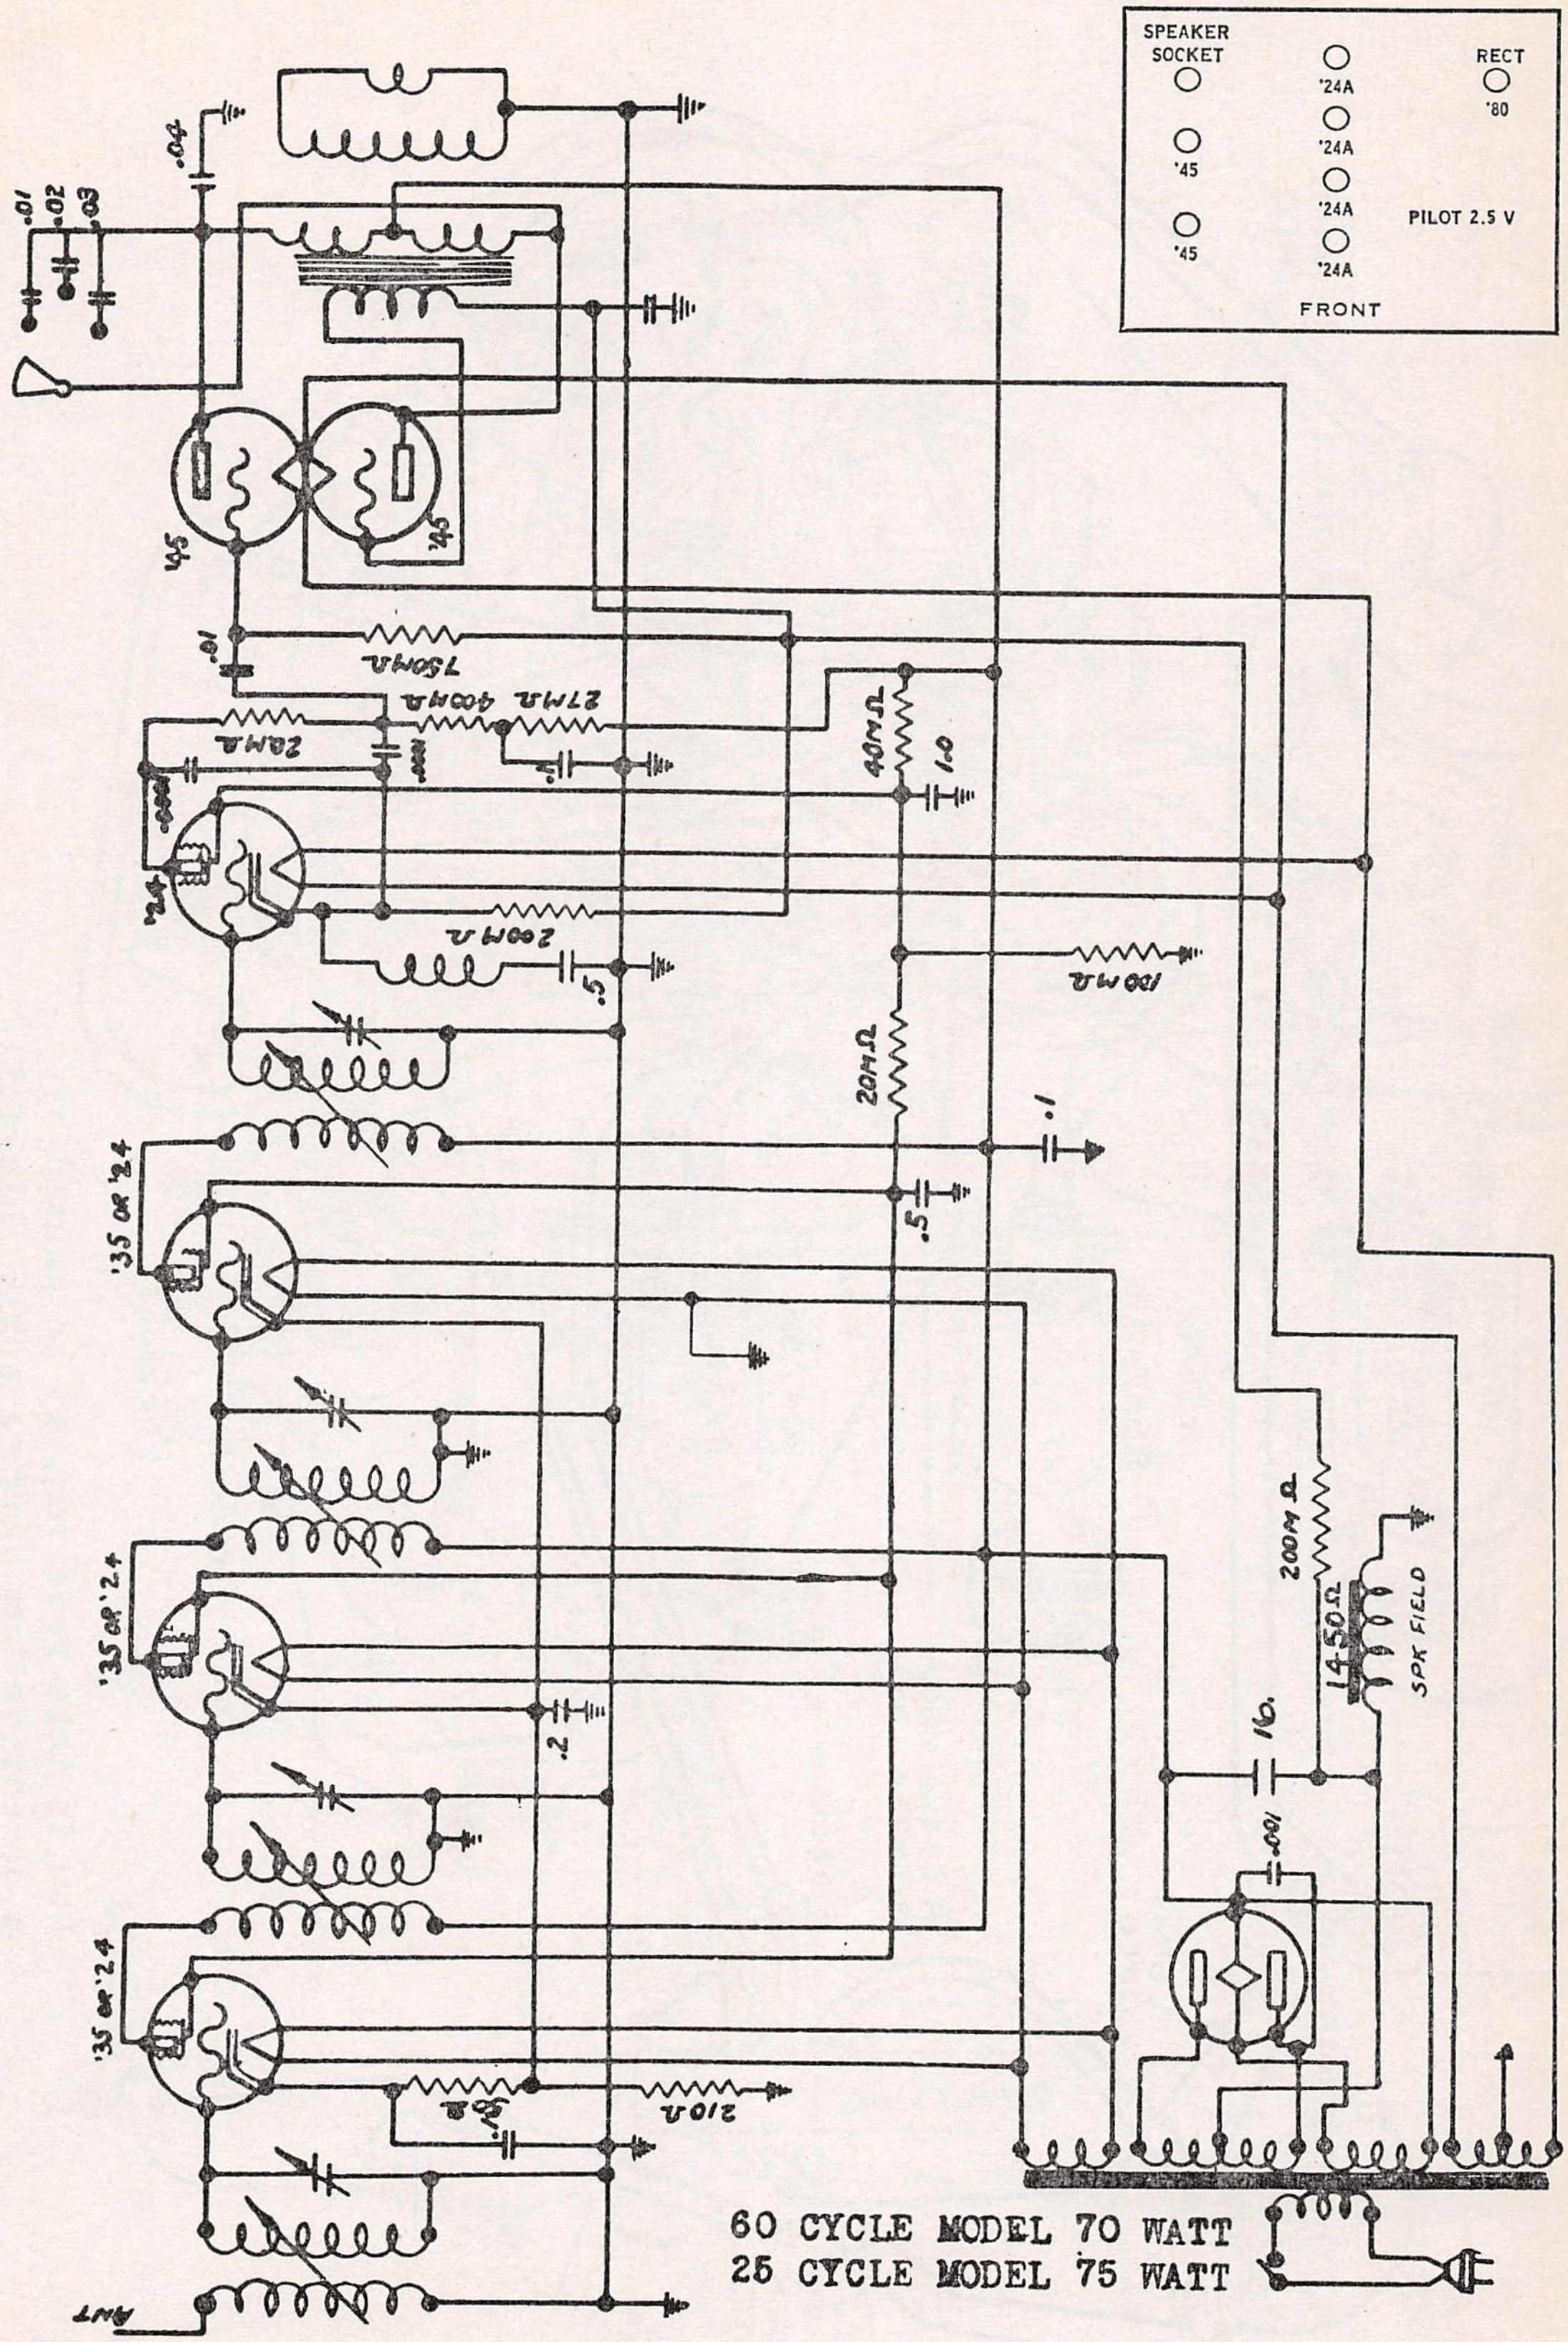
SPEAKER SOCKET
'24A
RECT
'80
'45
'24A
'24A
PILOT 2.5 V
'45
'24A
FRONT
.04
.01
.02
.03
'45
'45
.01
750MΩ
27MΩ
400MΩ
20MΩ
.1
40MΩ
1.0
'24
200MΩ
.5
100MΩ
20MΩ
.1
.5
'35 OR '24
200MΩ
1450Ω
SPK FIELD
16.
.001
'35 OR '24
.2
'35 OR '24
210Ω
ANT

60 CYCLE MODEL 70 WATT
25 CYCLE MODEL 75 WATT

MODEL 37
Chassis

COLONIAL RADIO CORP.

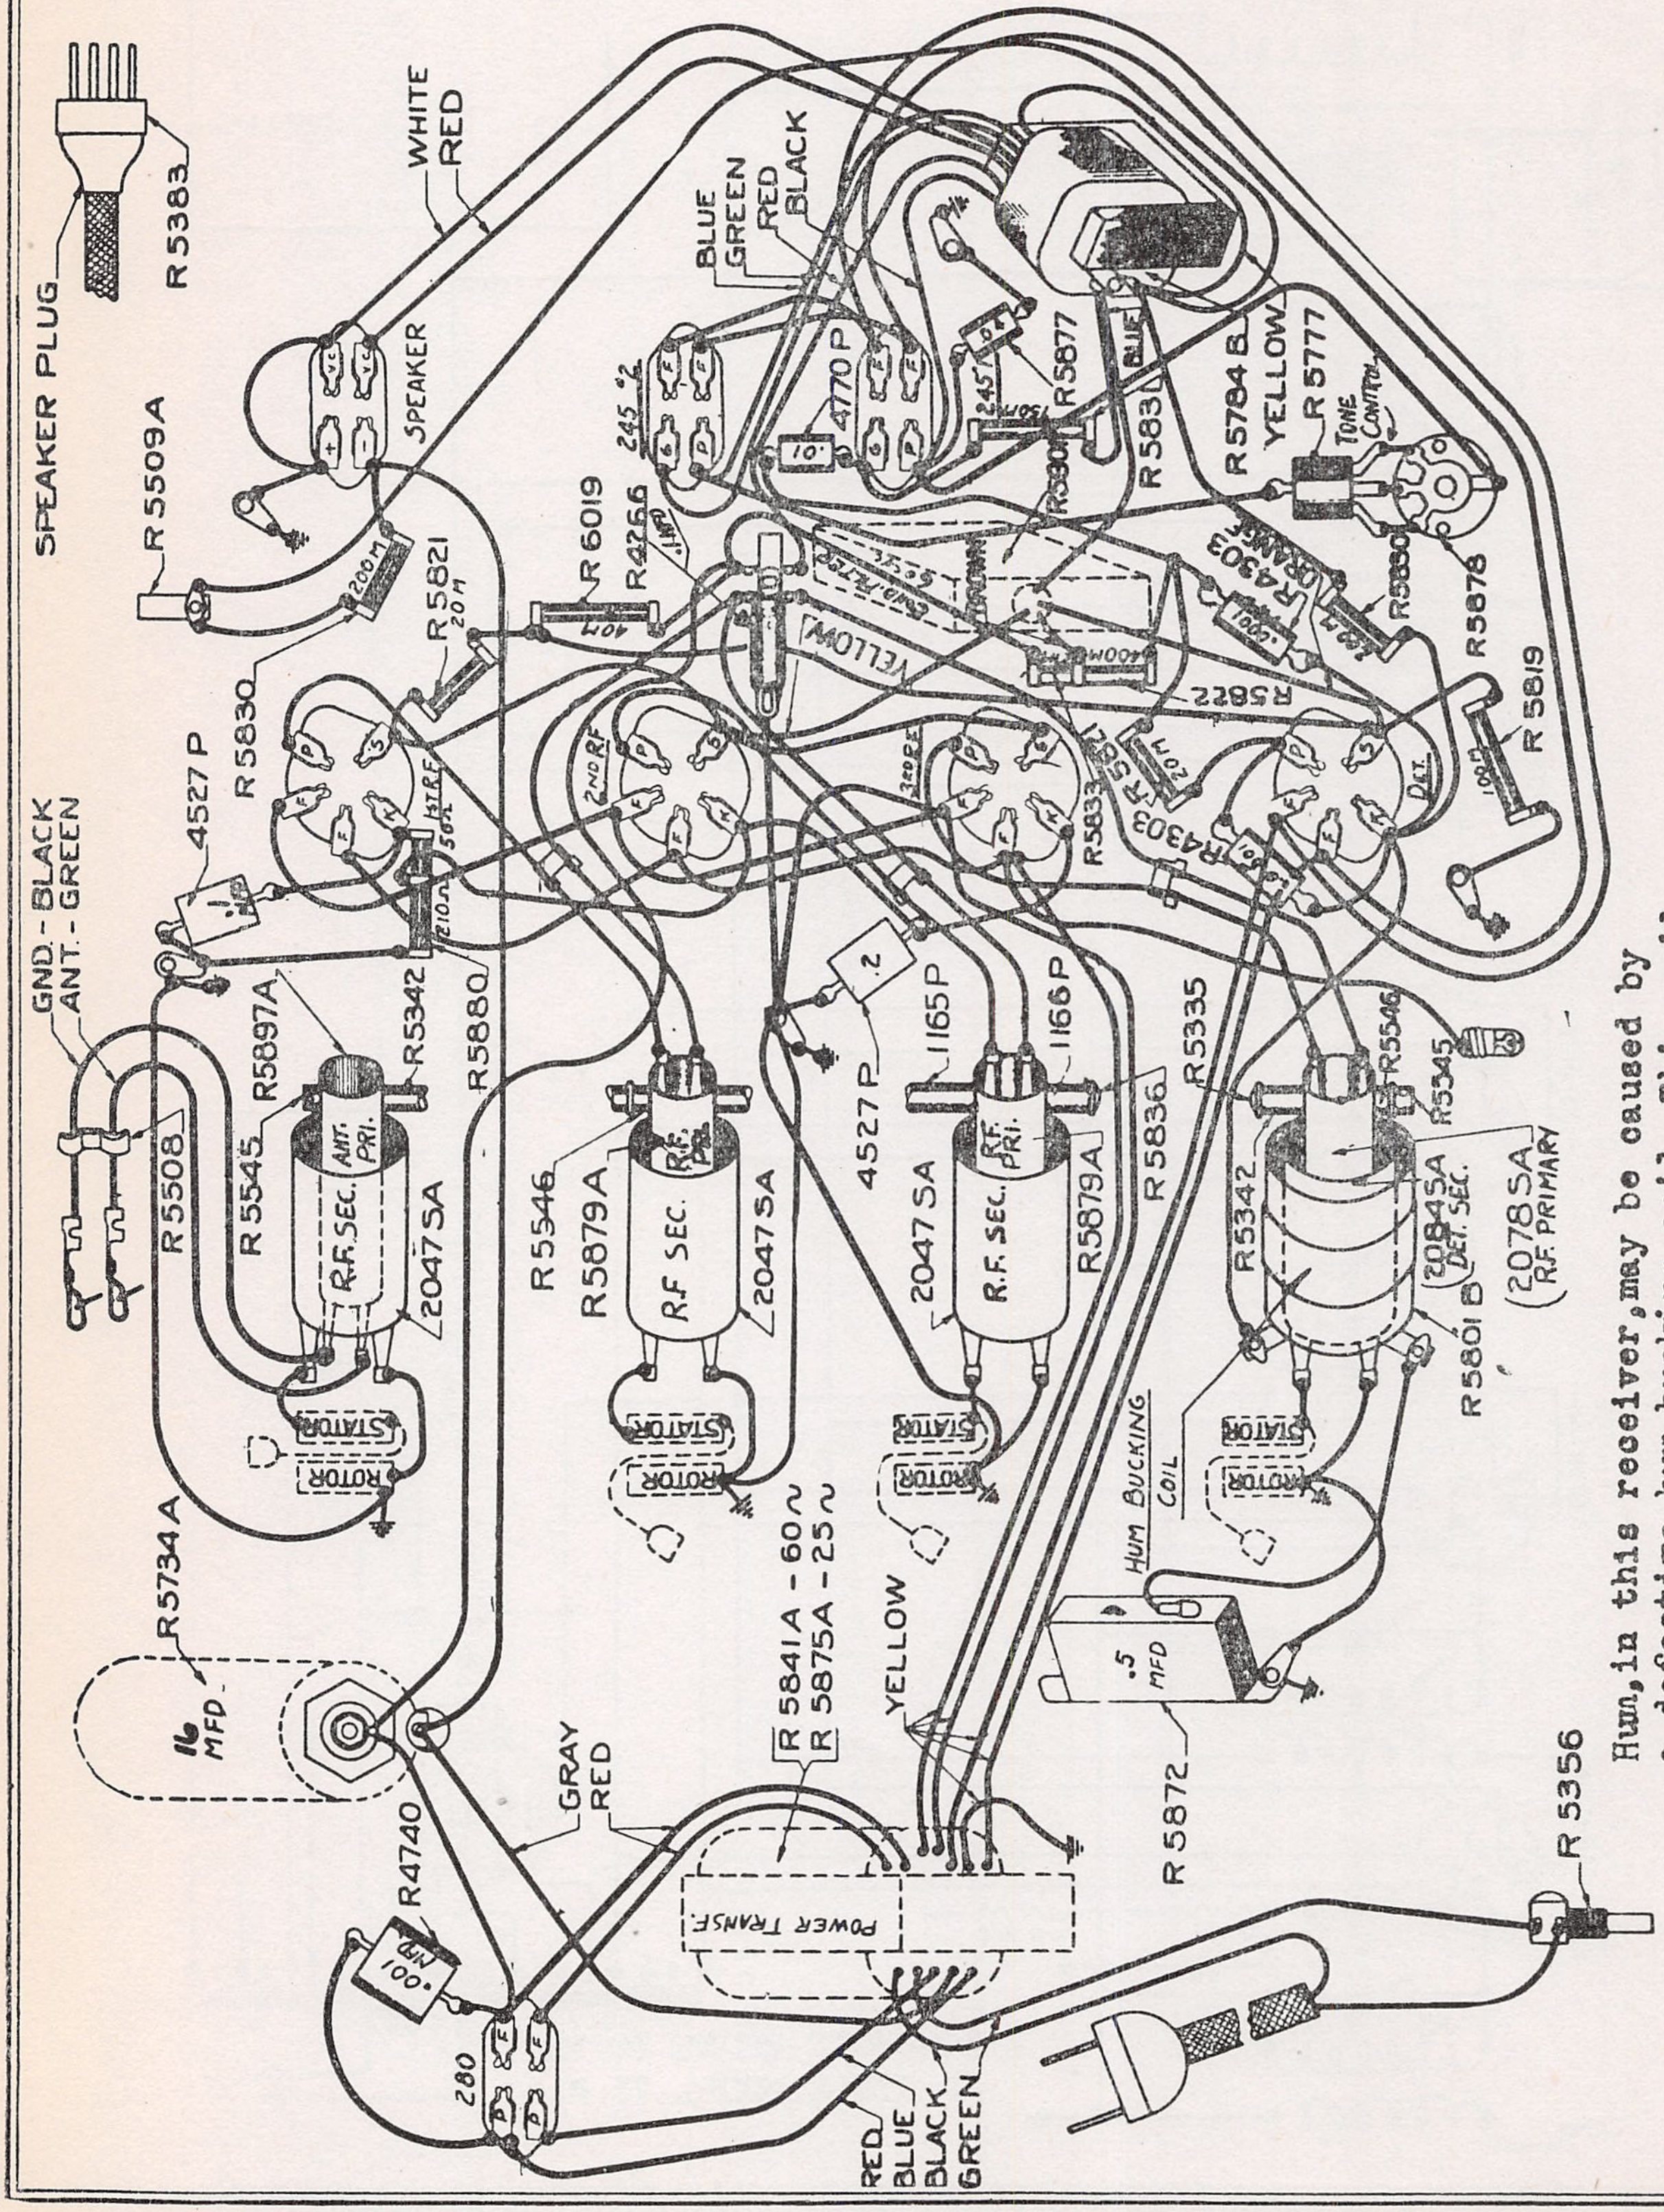
SPEAKER PLUG
R 5383
WHITE
RED
R 5509A
SPEAKER
R 5821
20 M
200 M
R 6019
R 4266
40 M
BLUE
GREEN
RED
BLACK
245 #2
4770 P
10
245 #1
R 5877
R 5301
R 5831
BLUE
R 5784 B
YELLOW
R 5777
TONE CONTROL
R 4303
ORANGE
R 5830
R 5878
R 5819
R 5822
YELLOW
BROWN
GREEN
400 M
100
R 5830
4527 P
GND - BLACK
ANT. - GREEN
1ST R.F.
2ND R.F.
3RD R.F.
DET.
R 5833
R 4303
R 5880
210 M
R 5897A
R 5342
R 5545
R 5508
ANT. PRI.
R.F. SEC.
2047 SA
R 5546
R 5879A
R.F. PRI.
R.F. SEC.
2047 SA
.2
4527 P
1165 P
1166 P
R.F. PRI.
R.F. SEC.
2047 SA
R 5879A
R 5836
R 5335
R 5546
R 5545
R 5342
2084 SA
DET. SEC.
2078 SA
R.F. PRIMARY
R 5801 B
STATOR
ROTOR
HUM BUCKING COIL
.5 MFD
R 5872
R 5734 A
16 MFD
R 5841 A - 60~
R 5875 A - 25~
YELLOW
GRAY
RED
R 4740
100
POWER TRANSF.
280
RED
BLUE
BLACK
GREEN
R 5356

Hum, in this receiver, may be caused by a defective hum bucking coil. This coil is wound on the detector coil shield next to detector socket.

MODEL 37
Parts Coding
Voltage

COLONIAL RADIO CORP

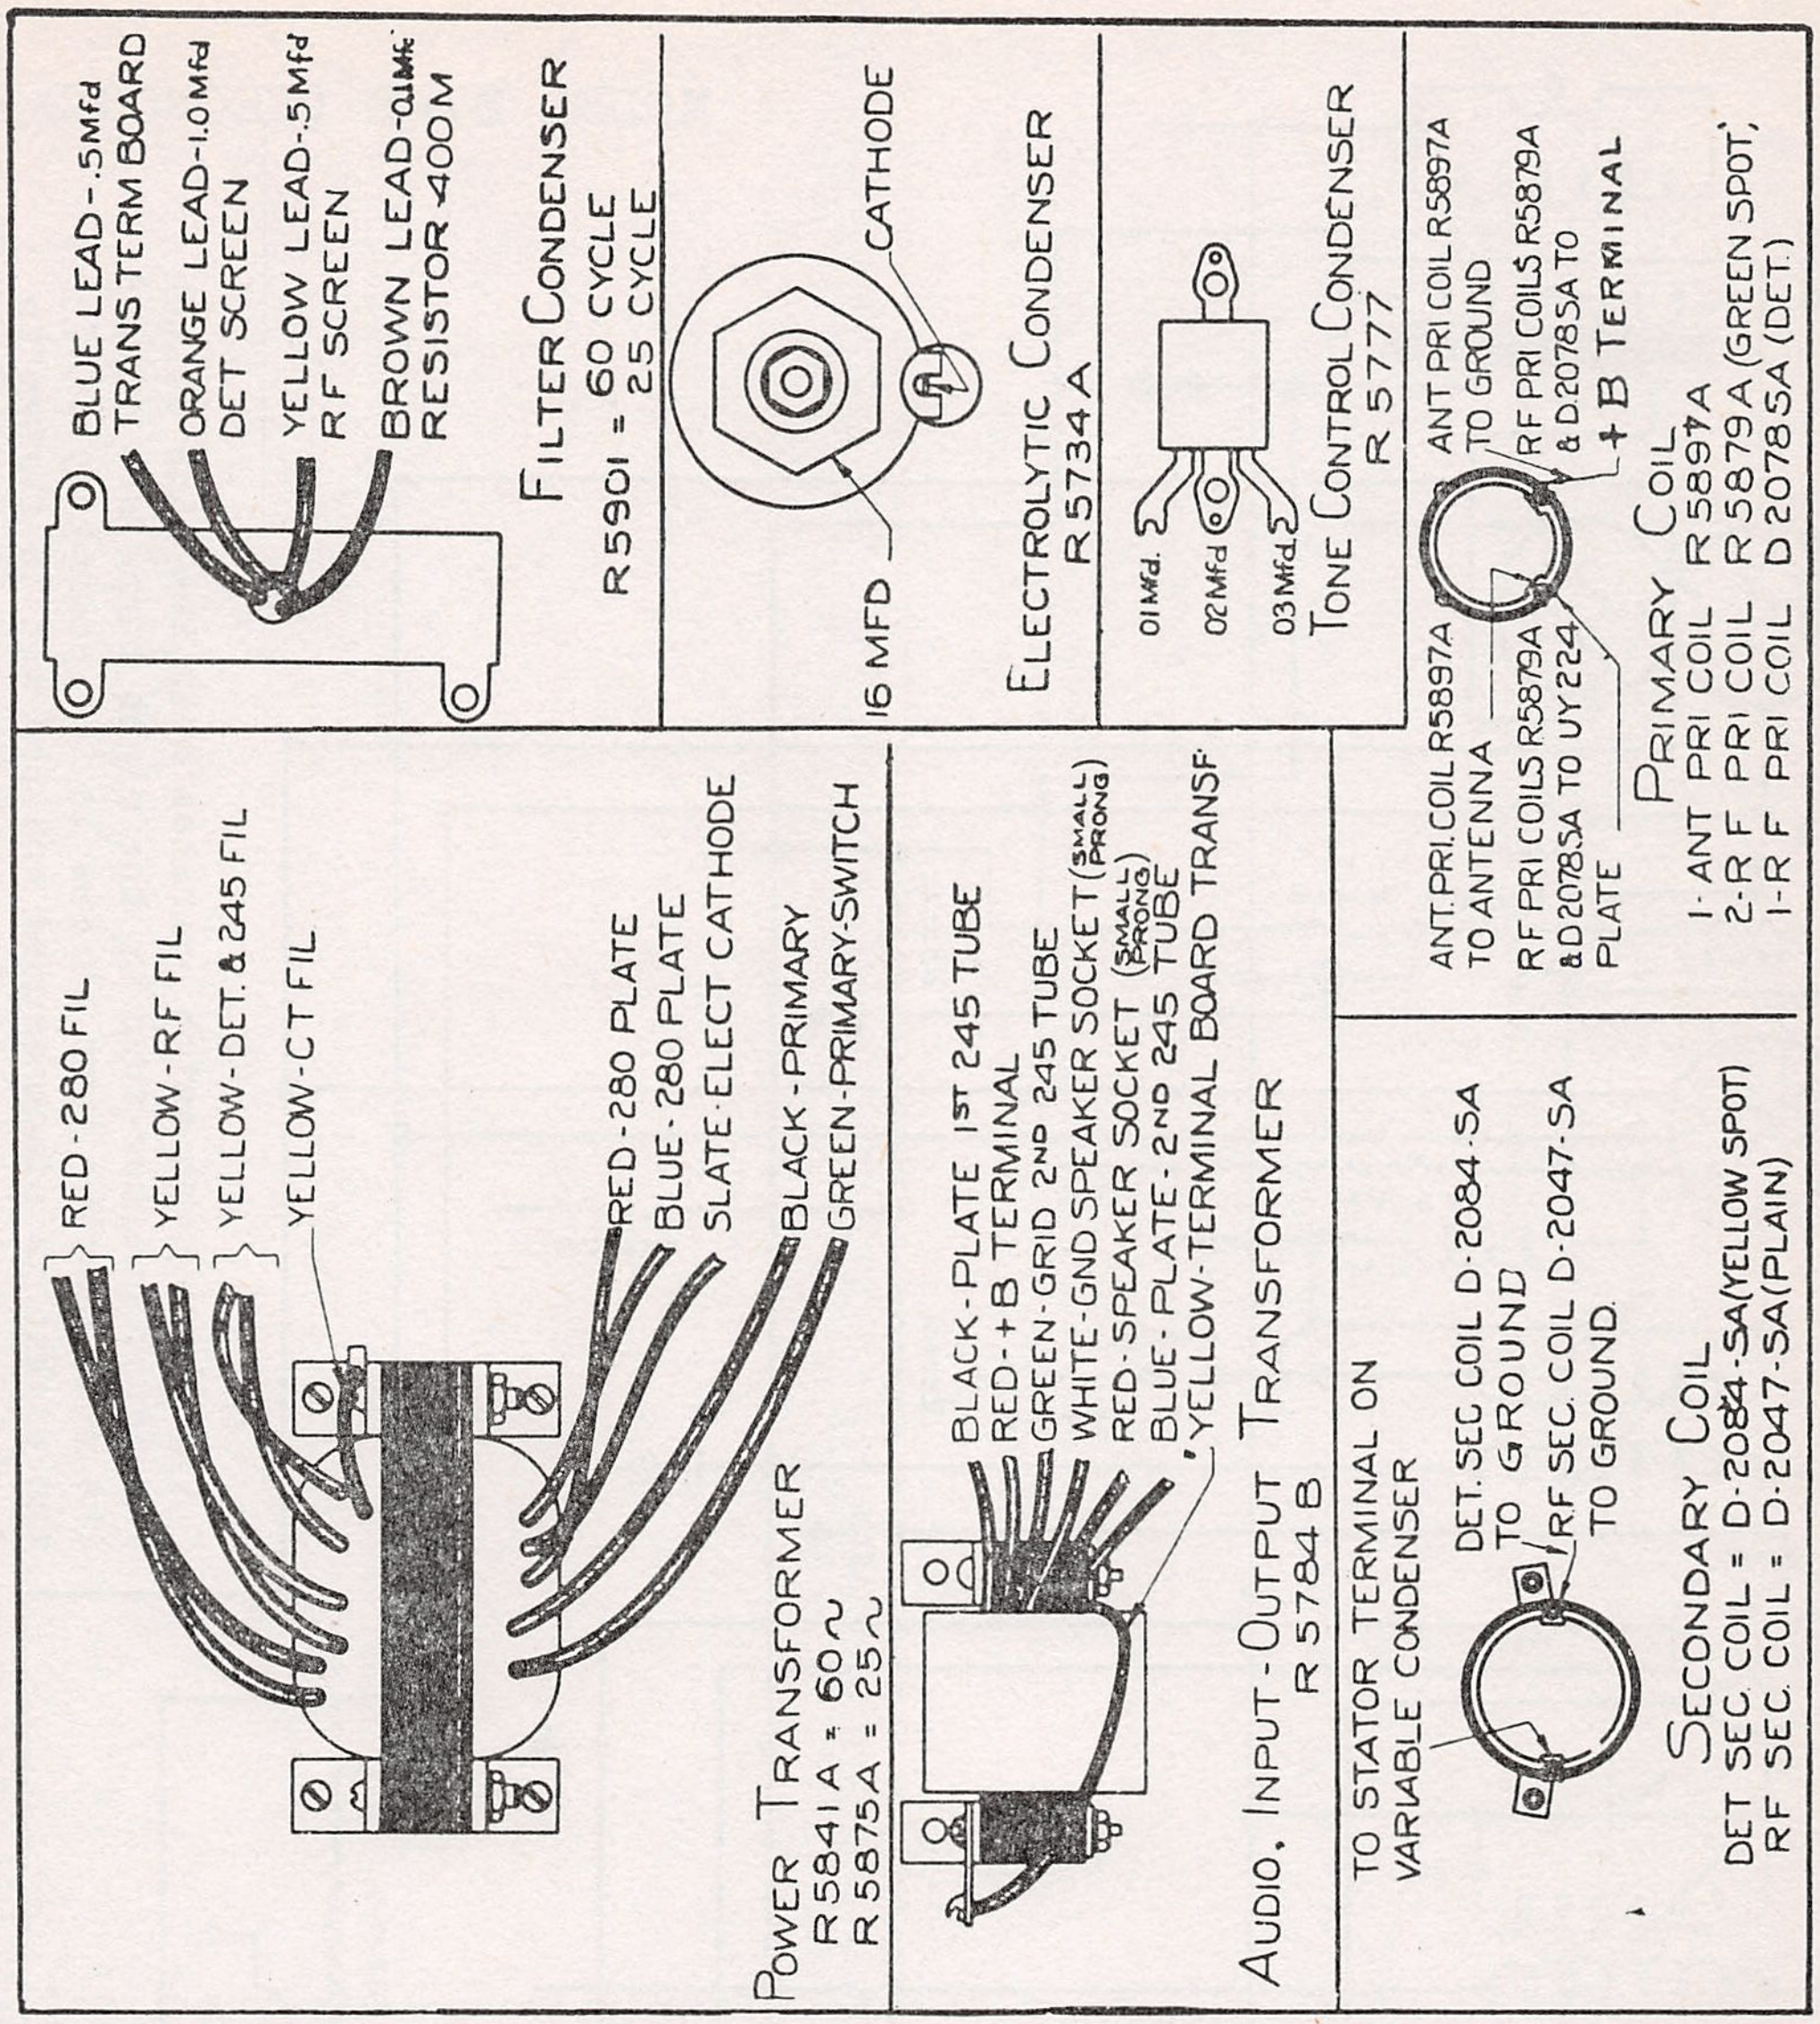
BLUE LEAD - .5 Mfd TRANS TERM BOARD
ORANGE LEAD - 1.0 Mfd DET SCREEN
YELLOW LEAD - .5 Mfd R F SCREEN
BROWN LEAD - CLIMATIC RESISTOR 400 M
FILTER CONDENSER
R 5901 = 60 CYCLE
= 25 CYCLE
CATHODE
16 MFD
ELECTROLYTIC CONDENSER
R 5734 A
.01 Mfd.
.02 Mfd
.03 Mfd.
TONE CONTROL CONDENSER
R 5777
ANT PRI COIL R5897A TO GROUND
RF PRI COILS R5879A & D2078SA TO +B TERMINAL
ANT. PRI. COIL R5897A TO ANTENNA
RF PRI COILS R5879A & D2078SA TO UY224 PLATE
PRIMARY COIL
1 - ANT PRI COIL R 5897A
2 - R F PRI COIL R 5879A (GREEN SPOT)
1 - R F PRI COIL D 2078SA (DET.)
RED - 280 FIL
YELLOW - RF FIL
YELLOW - DET. & 245 FIL
YELLOW - CT FIL
RED - 280 PLATE
BLUE - 280 PLATE
SLATE - ELECT CATHODE
BLACK - PRIMARY
GREEN - PRIMARY - SWITCH
POWER TRANSFORMER
R 5841 A = 60~
R 5875 A = 25~
BLACK - PLATE 1ST 245 TUBE
RED - +B TERMINAL
GREEN - GRID 2ND 245 TUBE
WHITE - GND SPEAKER SOCKET (SMALL PRONG)
RED - SPEAKER SOCKET (SMALL PRONG)
BLUE - PLATE - 2ND 245 TUBE
YELLOW - TERMINAL BOARD TRANSF
AUDIO, INPUT - OUTPUT TRANSFORMER
R 5784 B
TO STATOR TERMINAL ON VARIABLE CONDENSER
DET. SEC COIL D - 2084 - SA TO GROUND
RF SEC. COIL D - 2047 - SA TO GROUND.
SECONDARY COIL
DET SEC. COIL = D - 2084 - SA (YELLOW SPOT)
RF SEC. COIL = D - 2047 - SA (PLAIN)

LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL, ELECTROLYTIC CONDENSERS AND R.F. COILS.

VOLTAGE READINGS - MODELS 37 & 37-P

60 Cycle	Line Voltage 115							
	RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	250	250	250	115	250	250	345	350
Screen Voltage D.C.	65	65	65	100				
Heater Voltage A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage D.C.	2.2	2.4	2.4	10	20	48		
Speaker Field Voltage	100							
Total Rectifier Current	.070							

25 Cycle	Line Voltage 115							
	RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	240	240	240	100	240	240	340	340
Screen Voltage D.C.	65	65	65	100				
Heater Voltage A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage D.C.	2.2	2.4	2.4	10	20	45		
Speaker Field Voltage	100							
Total Rectifier Current MADC	.070							

Control grid voltage measured from cathode to ground or from cathode to filament. 245 grid voltage measured from grid to ground.

MODEL 37-P
Schematic

COLONIAL RADIO CORP.

MODEL 37-P (PHONOGRAPH)

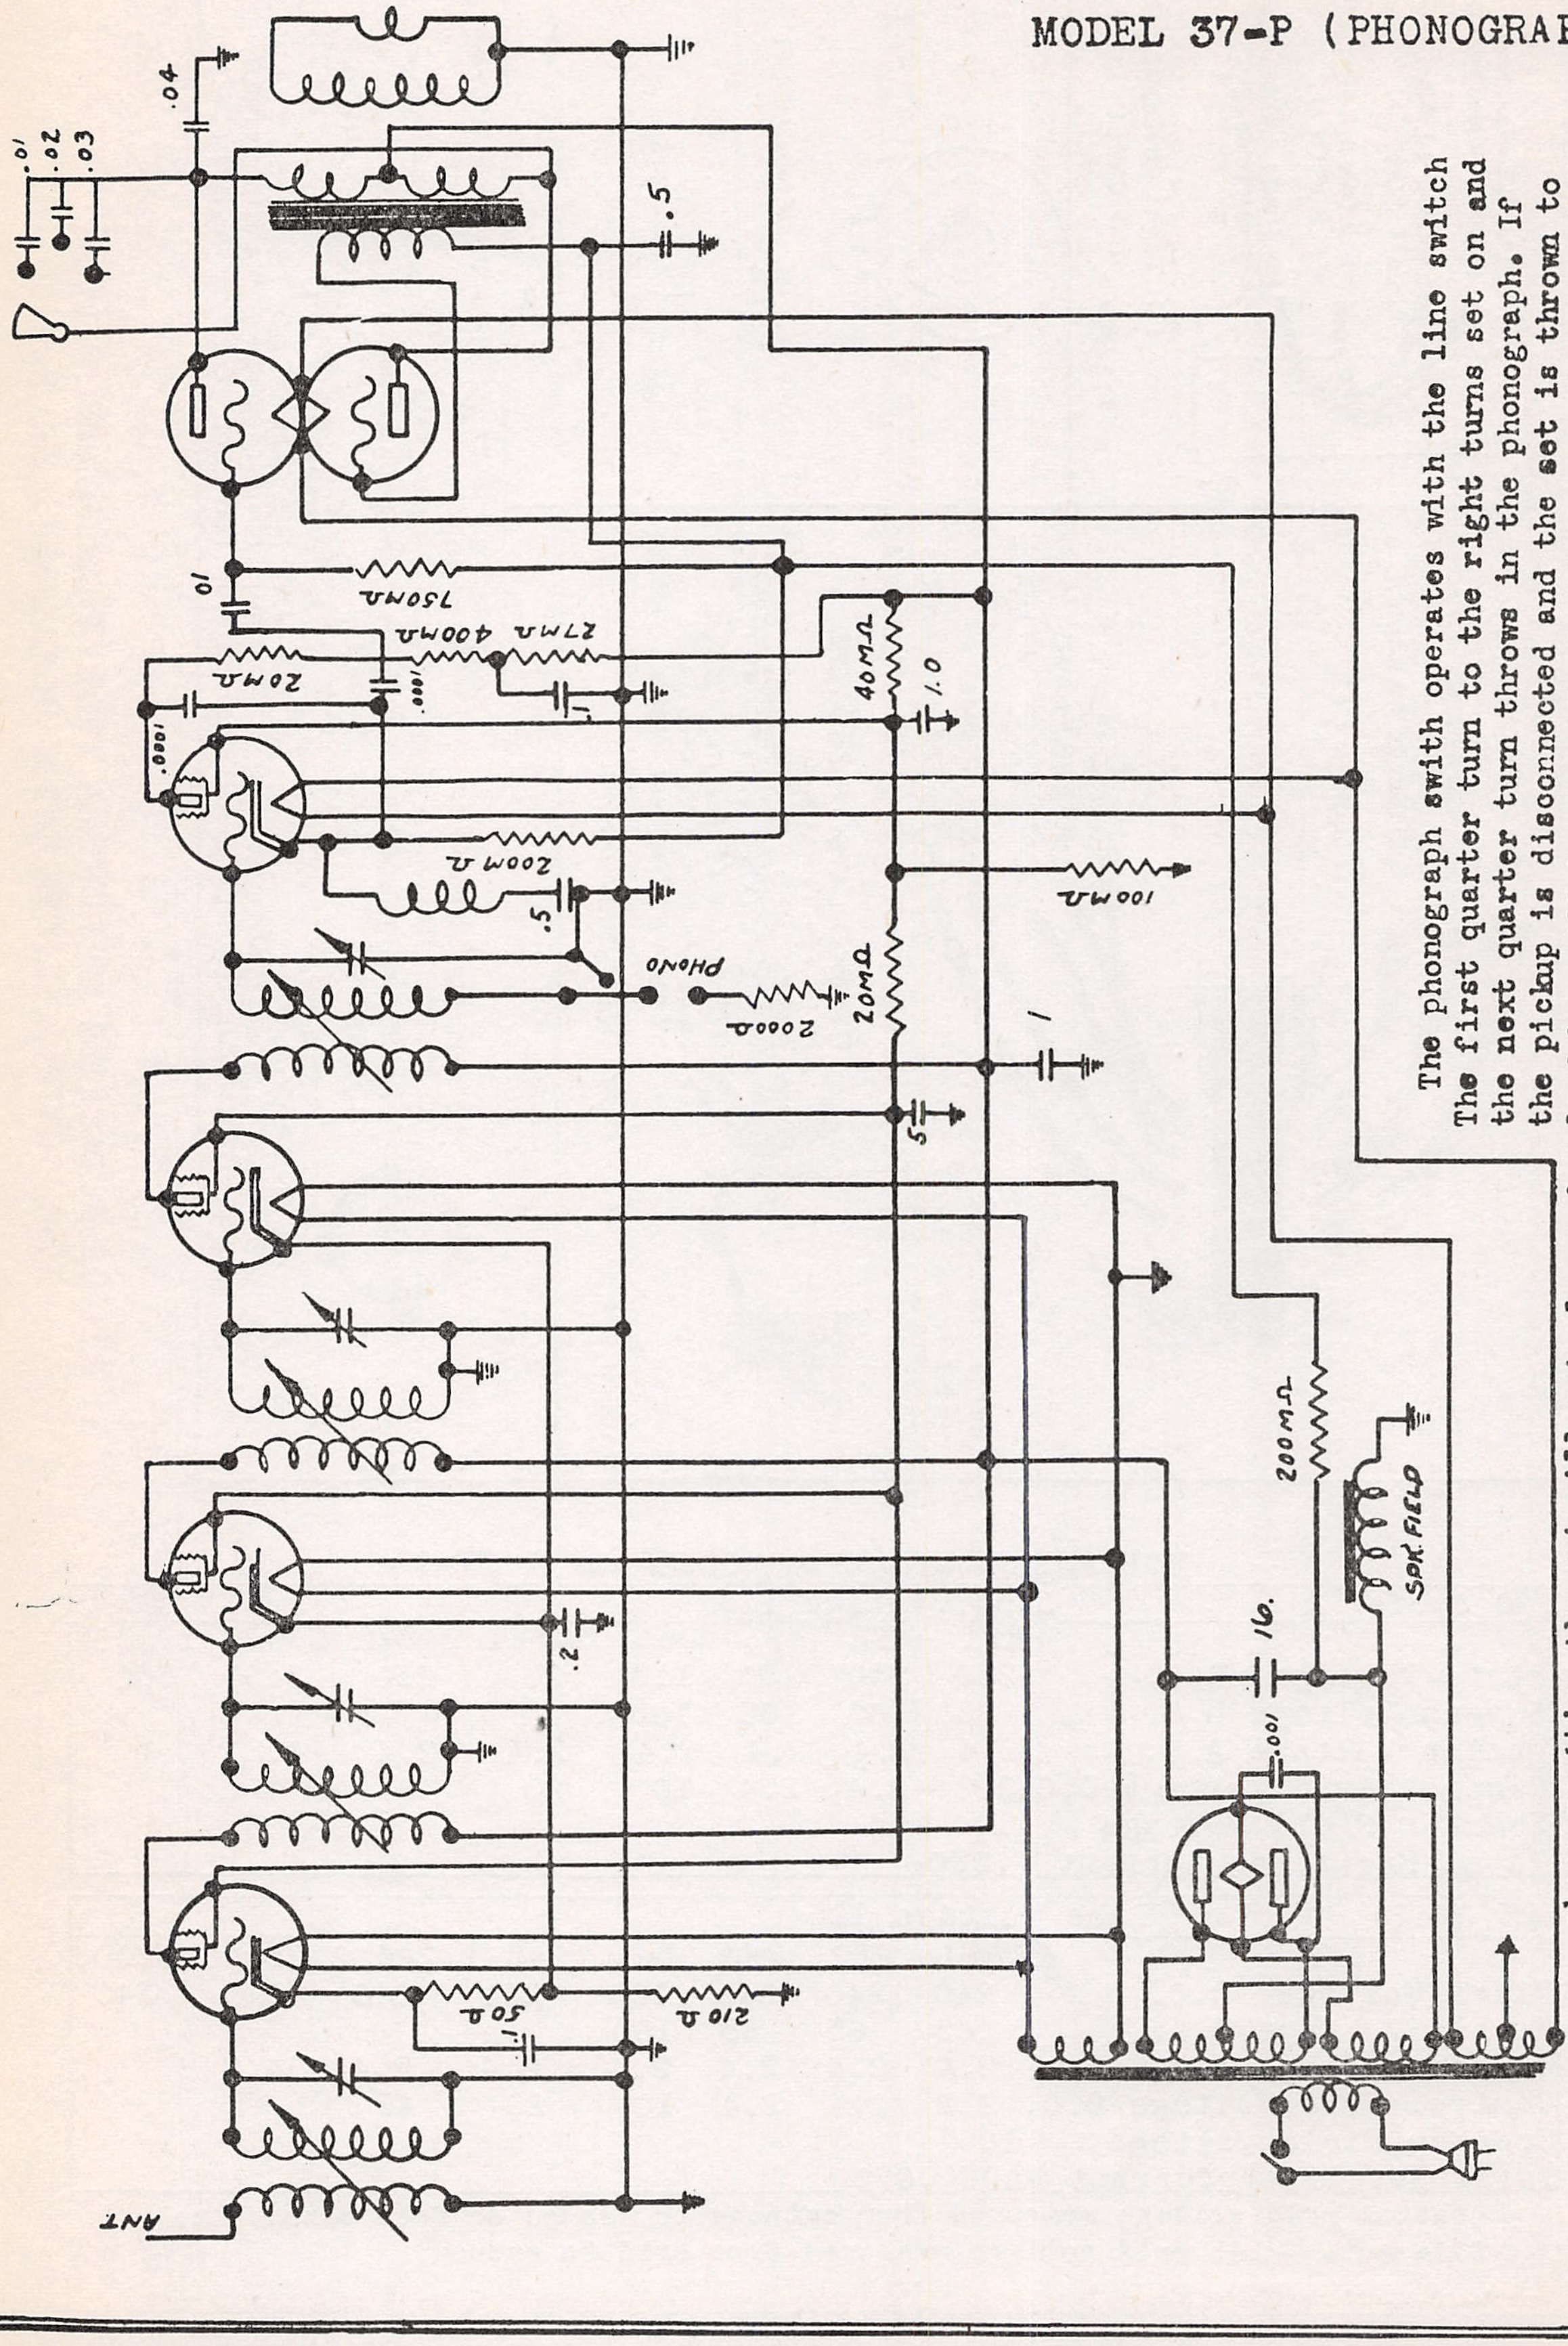
.04
.01
.02
.03
.5
.01
750MΩ
400MΩ
27MΩ
20MΩ
.0001
.0001
40MΩ
1.0
.1
200MΩ
100MΩ
.5
PHONO
2000Ω
20MΩ
1
.5
200MΩ
SPK FIELD
16.
.001
.2
50Ω
210Ω
.1
ANT

The phonograph swith operates with the line switch The first quarter turn to the right turns set on and the next quarter turn throws in the phonograph. If the pickup is disconnected and the set is thrown to phono position, the set will not play and a loud hum will be heard in the loudspeaker. When playing records be sure to turn Radio Volume Control to the minimum position.

*The electrical characteristics of this receiver are identical to model 37.

MODEL 38
117

COLONIAL RADIO CORP.

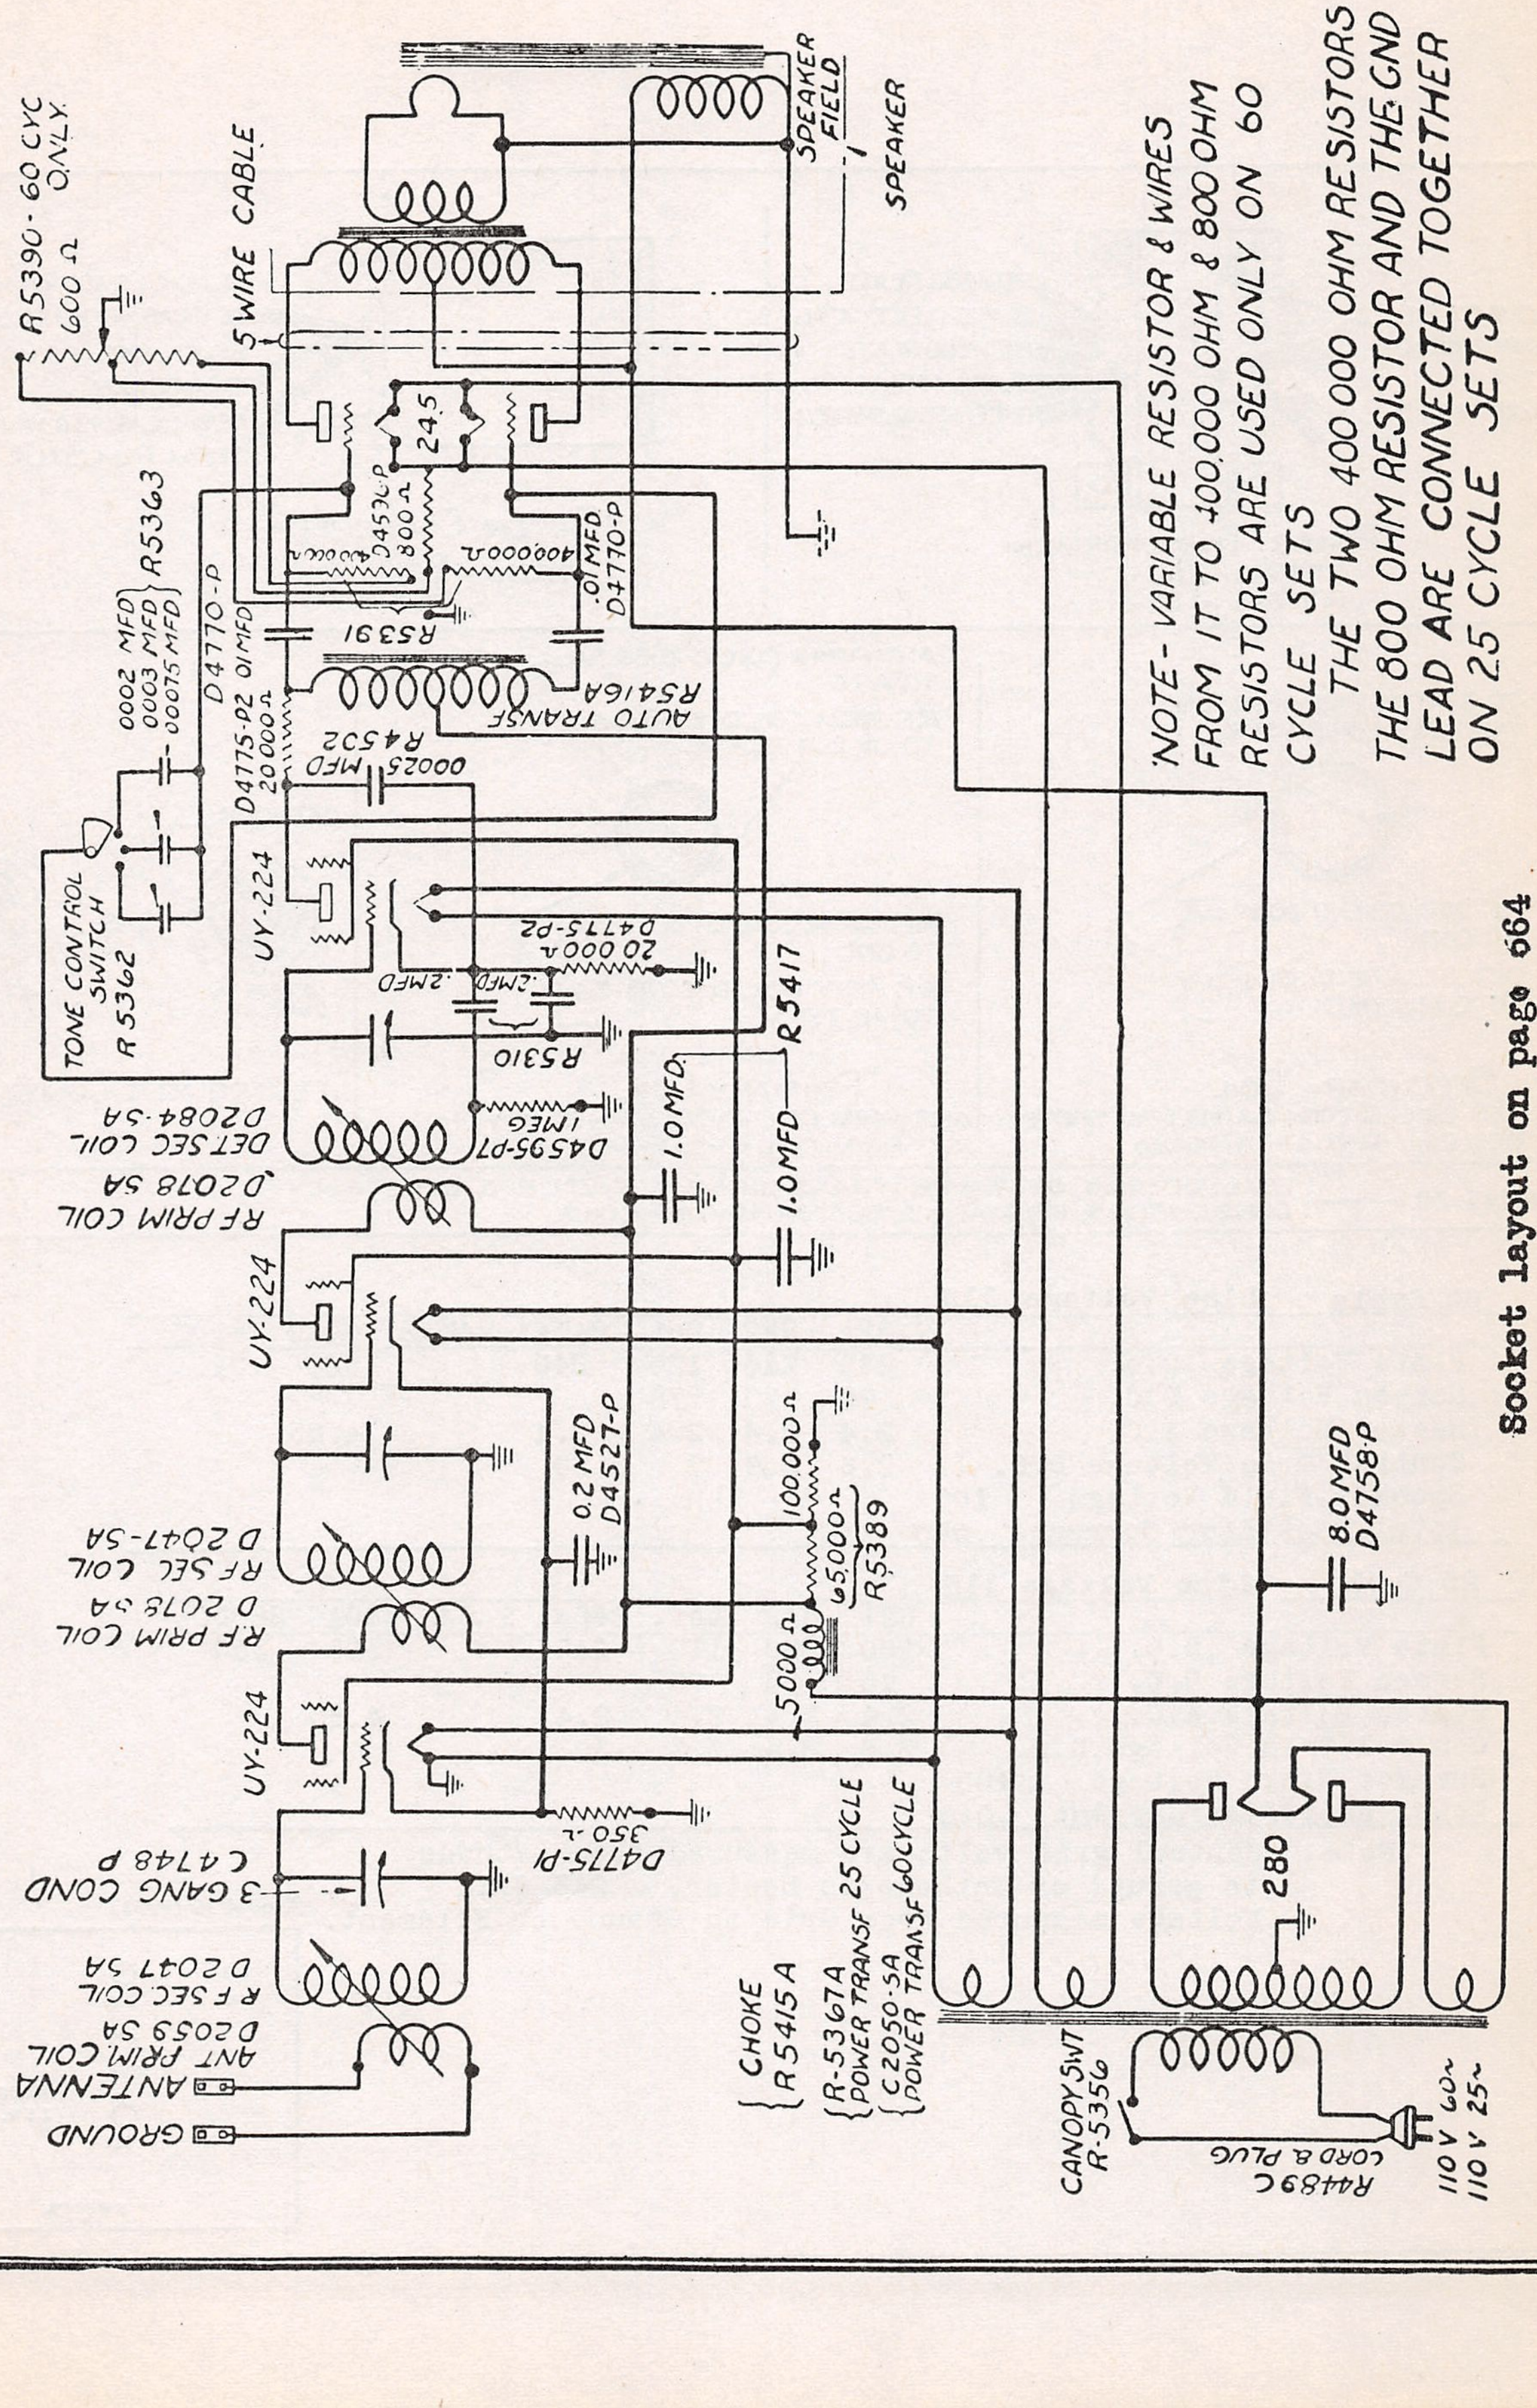
R5390 - 60 CYC ONLY
600 Ω
5 WIRE CABLE
SPEAKER FIELD
SPEAKER
R5363
.0002 MFD
.0003 MFD
.00075 MFD
D4770-P
TONE CONTROL SWITCH R5362
245
D4570-P
800 Ω
400,000 Ω
400,000 Ω
.01 MFD
D4770-P
R5391
AUTO TRANSF
R5416A
D4775-P2
.01 MFD
20000 Ω
R4532
.00025 MFD
UY-224
D4775-P2
20000 Ω
.2 MFD
.2 MFD
R5310
R5417
D4595-P1
1 MEG
1.0 MFD
1.0 MFD
DET SEC COIL
D2084-5A
RF PRIM COIL
D2018 5A
UY-224
0.2 MFD
D4527-P
RF SEC COIL
D 2047-5A
R.F PRIM COIL
D 2018 5A
100,000 Ω
65000 Ω
R5389
5000 Ω
5000 Ω
UY-224
D4775-P1
350 Ω
3 GANG COND
C 4748 P
R F SEC. COIL
D 2047 5A
ANT PRIM COIL
D2059 5A
ANTENNA
GROUND
CHOKE
R 5415 A
R-5367A
POWER TRANSF 25 CYCLE
C2050-5A
POWER TRANSF 60 CYCLE
CANOPY SWT
R-5356
R4489C
CORD & PLUG
110 V 60~
110 V 25~
280
8.0 MFD
D4758-P

NOTE - VARIABLE RESISTOR & WIRES FROM IT TO 400,000 OHM & 800 OHM RESISTORS ARE USED ONLY ON 60 CYCLE SETS
THE TWO 400 000 OHM RESISTORS THE 800 OHM RESISTOR AND THE GND LEAD ARE CONNECTED TOGETHER ON 25 CYCLE SETS

Socket layout on page 664

MODEL 39, 125
Voltage
Parts Coding

COLONIAL RADIO CORP.

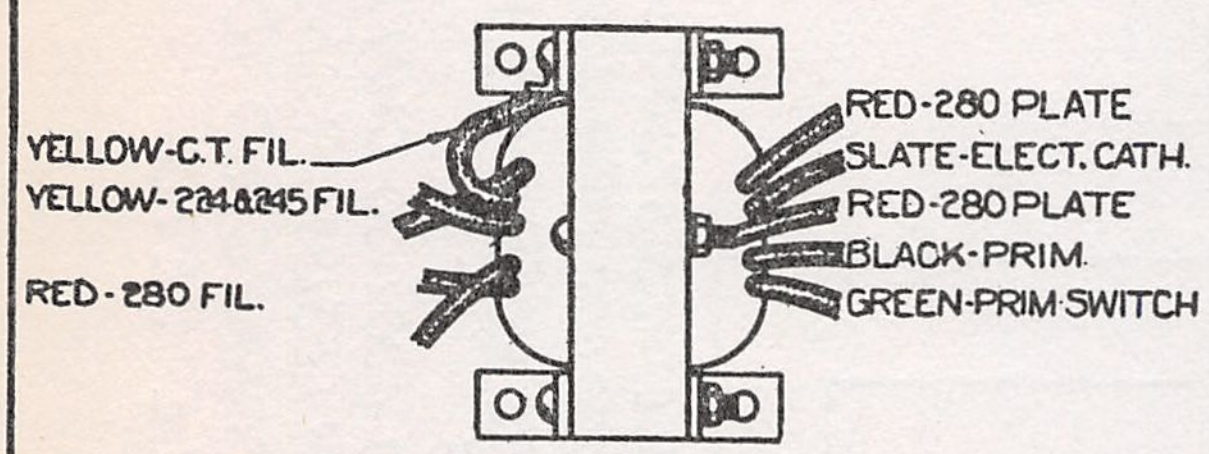
YELLOW-C.T. FIL.
YELLOW-224&245 FIL.
RED-280 FIL.
RED-280 PLATE
SLATE-ELECT. CATH.
RED-280 PLATE
BLACK-PRIM.
GREEN-PRIM. SWITCH

Power Transformer
R5567A - 60~
R5574A - 25~

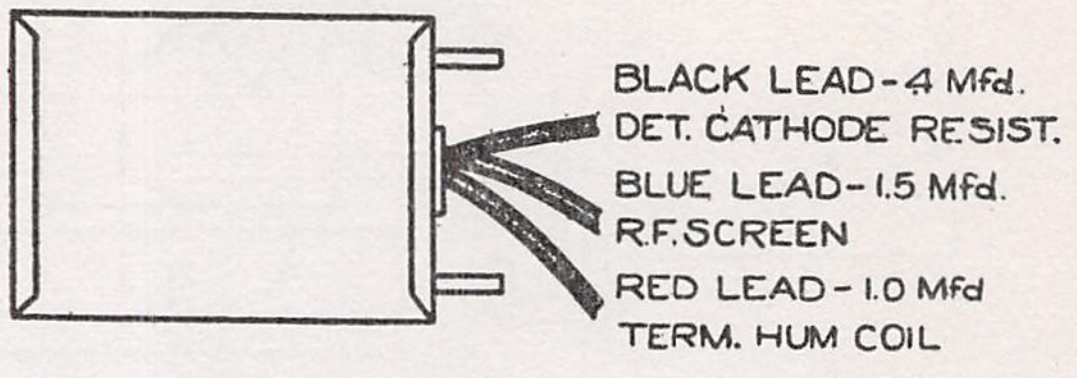
BLACK LEAD-4 Mfd.
DET. CATHODE RESIST.
BLUE LEAD-1.5 Mfd.
R.F. SCREEN
RED LEAD-1.0 Mfd
TERM. HUM COIL

Filter Condenser
R5575 - 60 CYCLE
25 CYCLE

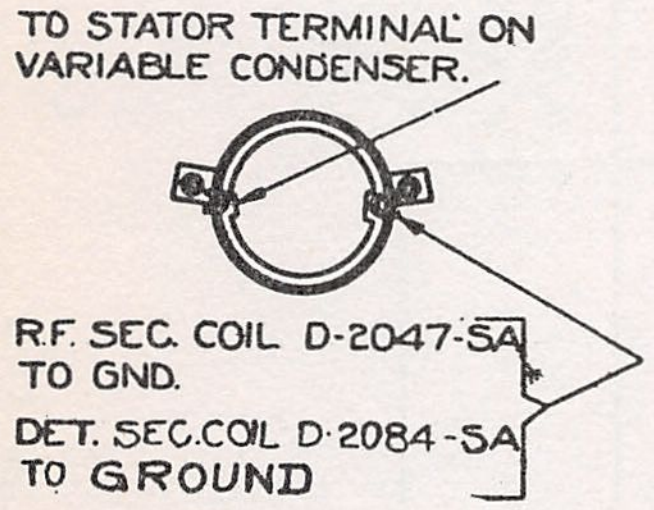
TO STATOR TERMINAL ON VARIABLE CONDENSER.
R.F. SEC. COIL D-2047-SA TO GND.
DET. SEC. COIL D-2084-SA TO GROUND

Secondary Coil
DET. SEC. COIL - D-2084-SA (YELLOW SPOT)
R.F. SEC. COIL - D-2047-SA (PLAIN)

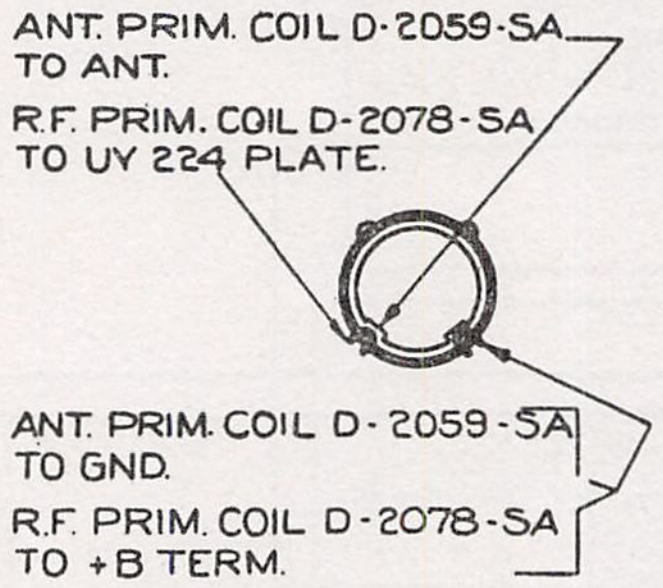
ANT. PRIM. COIL D-2059-SA TO ANT.
R.F. PRIM. COIL D-2078-SA TO UY 224 PLATE.
ANT. PRIM. COIL D-2059-SA TO GND.
R.F. PRIM. COIL D-2078-SA TO +B TERM.

Primary Coil
ANT. PRIM. COIL - D-2059-SA (YELLOW SPOT)
R.F. PRIM. COIL - D-2078-SA (PLAIN)

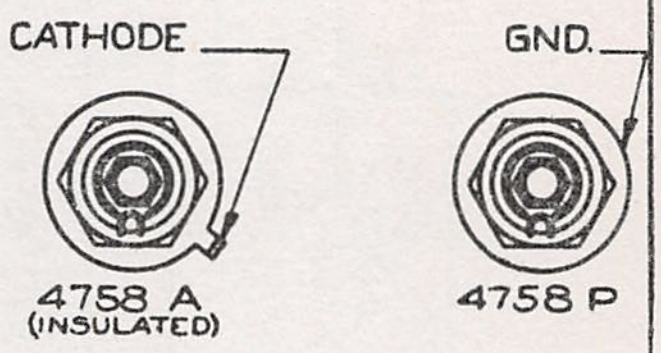
CATHODE
GND.
4758 A (INSULATED)
4758 P

Electrolytic Condensers

Model 39 —— LEAD DETAILS OF POWER TRANSFORMER, FILTER & ELECTROLYTIC CONDENSERS, PRIMARY & SECONDARY R.F. COILS.

60 Cycle   Line Voltage 115

	RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	245	245	120	240		320	340
Screen Voltage D.C.	75	75	75				
Heater Voltage A.C.	2.4	2.4	2.4	2.4		4.85	
Control Grid Voltage D.C.	2.6	2.6	7	30			
Speaker Field Voltage 100							
Total Rectifier Current .040							

25 Cycle   Line Voltage 115

	RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	250	250	110	245		325	350
Screen Voltage D.C.	75	75	75				
Heater Voltage A.C.	2.4	2.4	2.4	2.4		4.85	
Control Grid Voltage D.C.	2.5	2.5	7.5	30			
Speaker Field Voltage 100							
Total Rectifier Current .040							

Note: Control grid volts are measured from Cathode to ground or Cathode to Heater. 245 Grid Voltage measured from Grid to Ground or Filament.

Model 39 (1931)

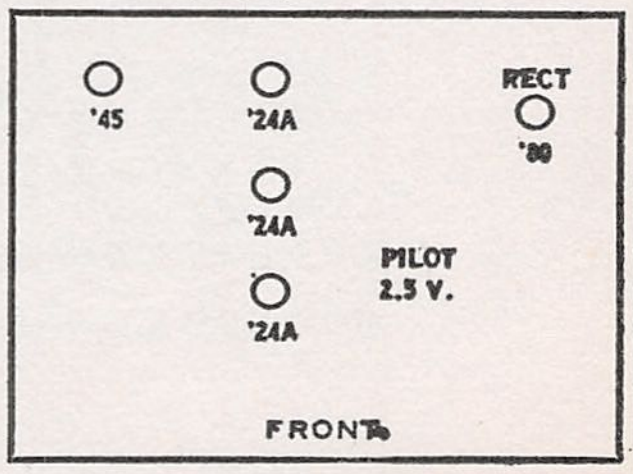
'45
'24A
RECT '80
'24A
PILOT 2.5 V.
'24A
FRONT

MODEL 39
125
Chassis

COLONIAL RADIO CORP.

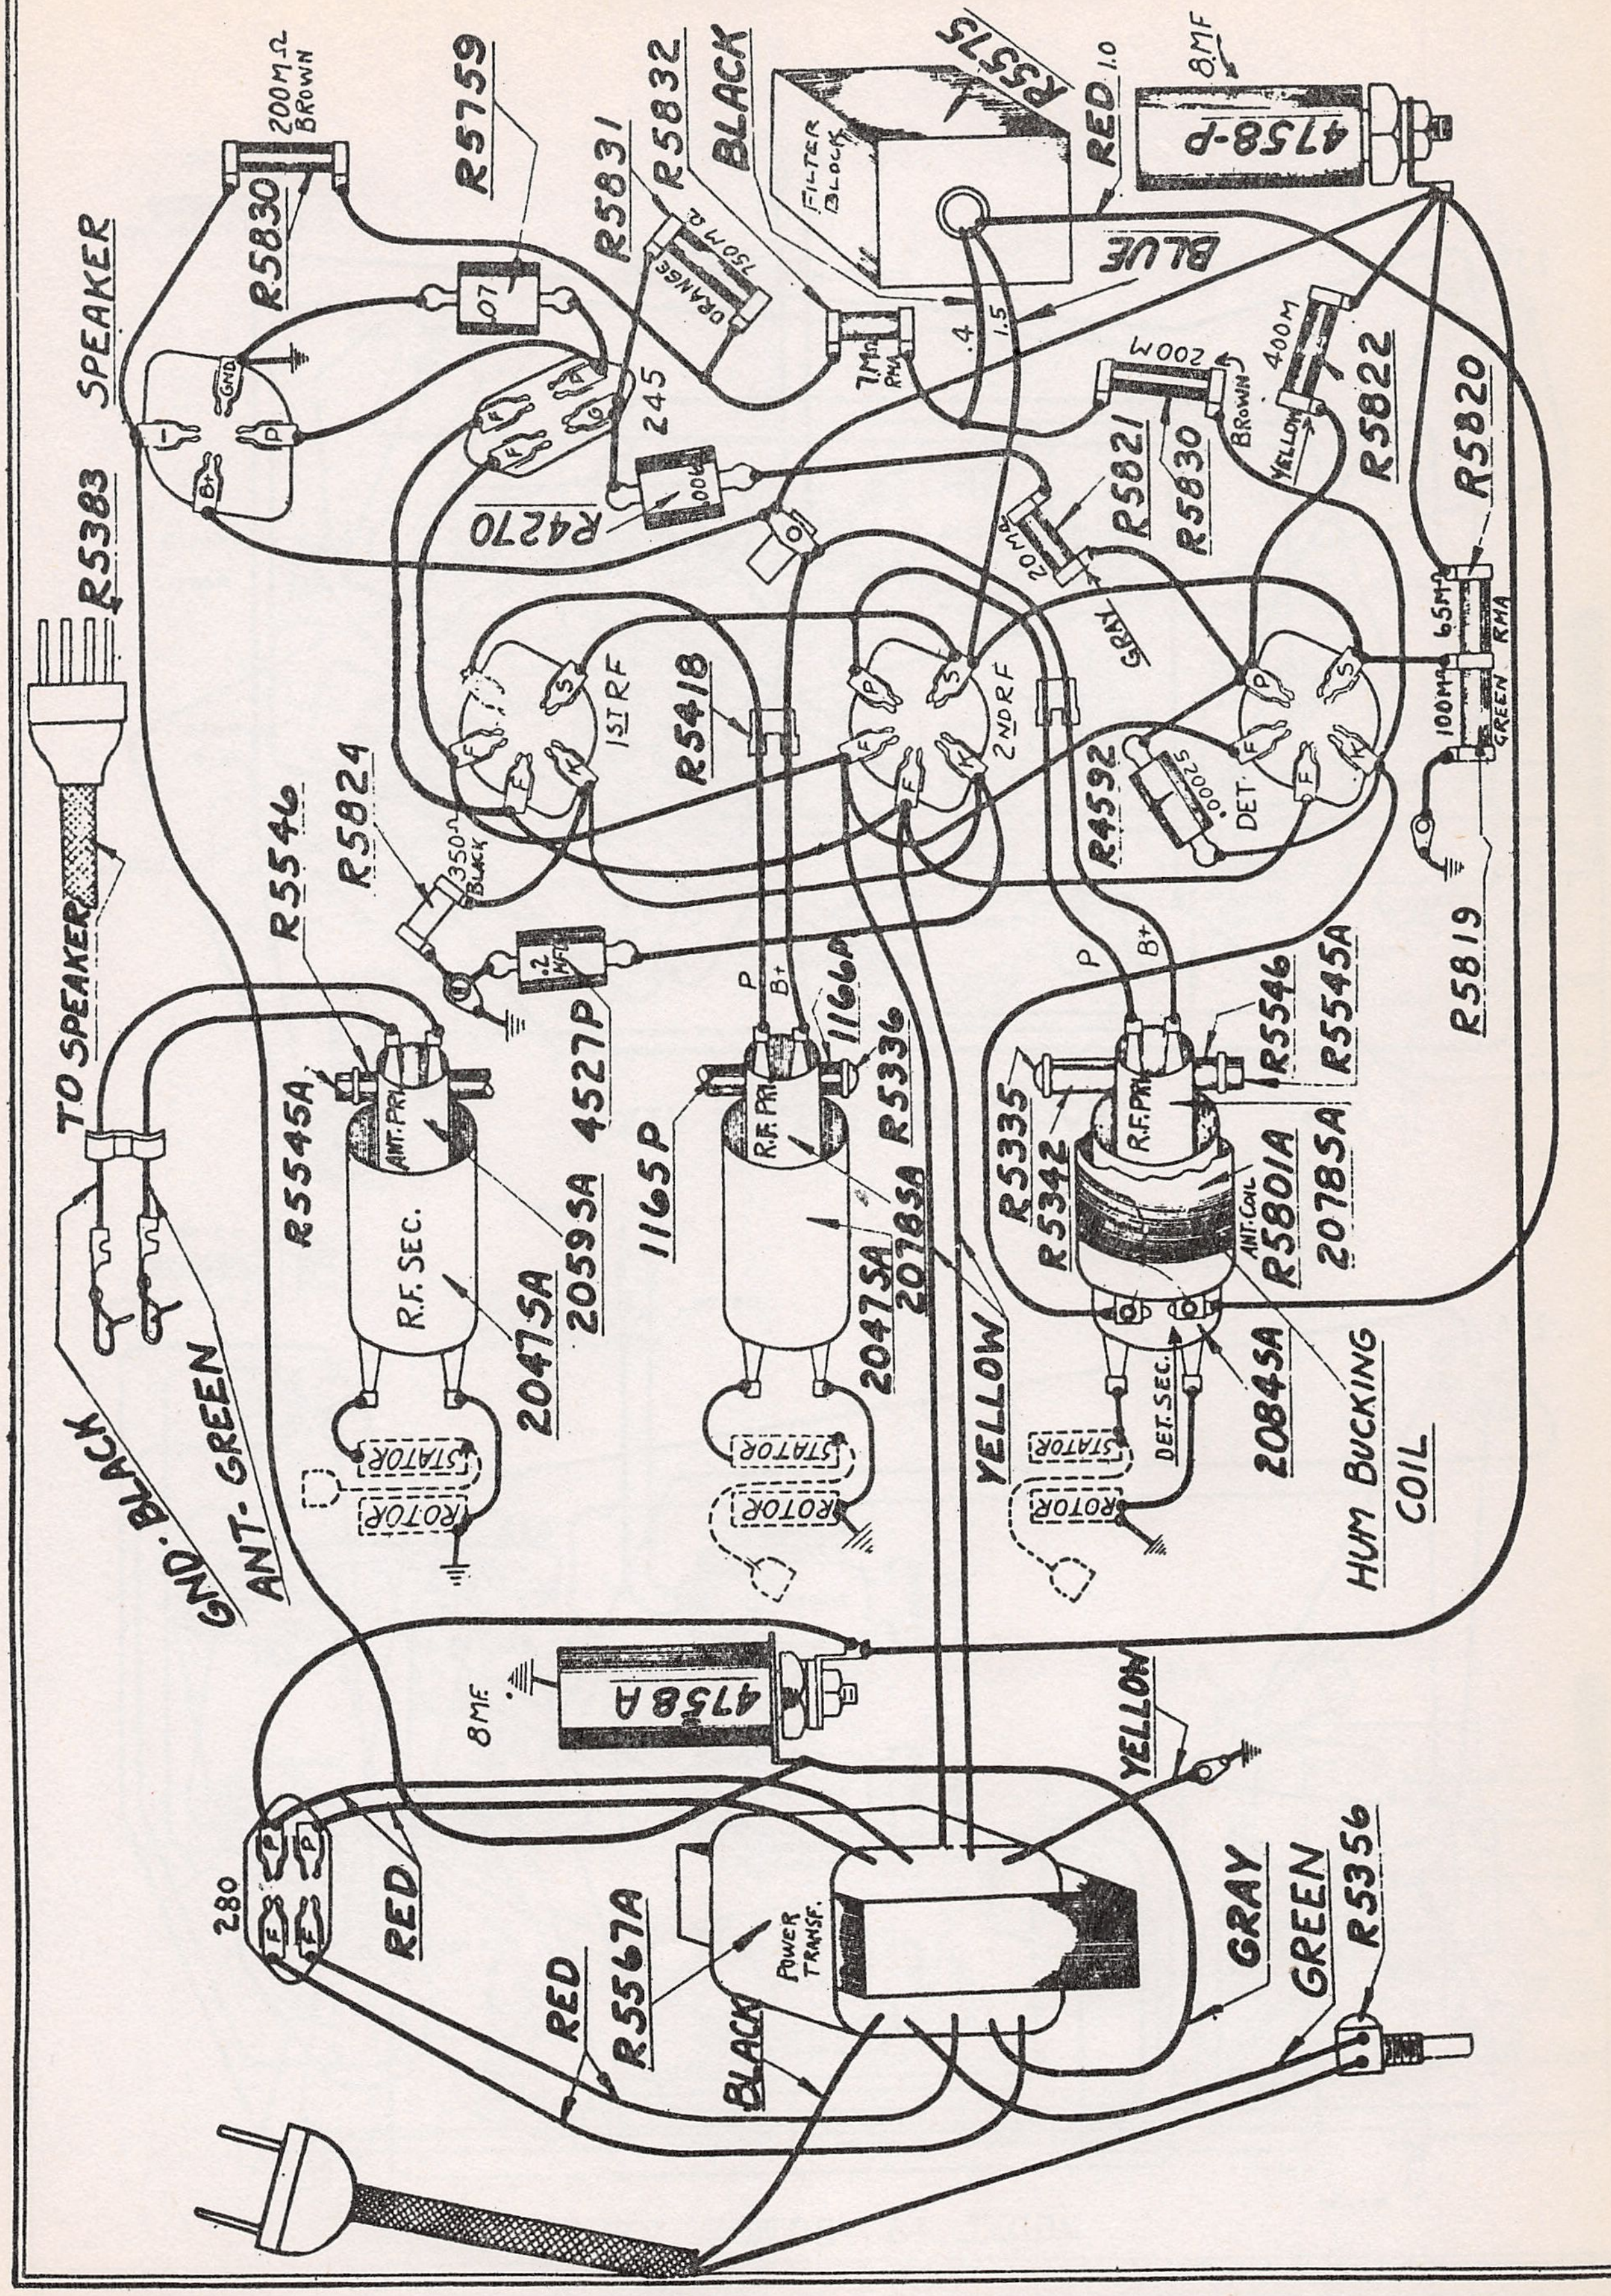
SPEAKER
R5830
200MΩ BROWN
R5759
R5831
R5832
150MΩ ORANGE
BLACK
R5575
FILTER BLOCK
RED 1.0
8MF
4758-P
BLUE
.07
GND
P
B+
245
.4
1.5
7MΩ RMA
200M
400M
BROWN
YELLOW
R5821
R5830
R5822
R5820
.004
R4270
.01
20MΩ
GRAY
R5383
1ST RF
R5418
2ND RF
DET.
.00025
R4592
65MΩ
100MΩ GREEN RMA
R5819
R5824
350Ω BLACK
R5546
.2MF
P
B+
1166A
P
B+
R5546
R5545A
TO SPEAKER
R5545A
ANT. PRI.
2059SA
4527P
1165P
R.F. PRI.
R5336
R5335
R5342
R.F. PRI.
R5801A
ANT. COIL
2078SA
R.F. SEC.
2047SA
2047SA
2078SA
YELLOW
HUM BUCKING COIL
2084SA
DET. SEC.
STATOR
ROTOR
STATOR
ROTOR
STATOR
ROTOR
GND.-BLACK
ANT.-GREEN
8MF
4758A
YELLOW
280
P
P
F
F
RED
POWER TRANSF.
RED
R5567A
BLACK
GRAY
GREEN
R5356

MODELS 39 & 125

MODEL 40, 43
Battery
Chasses

COLONIAL RADIO CORP.

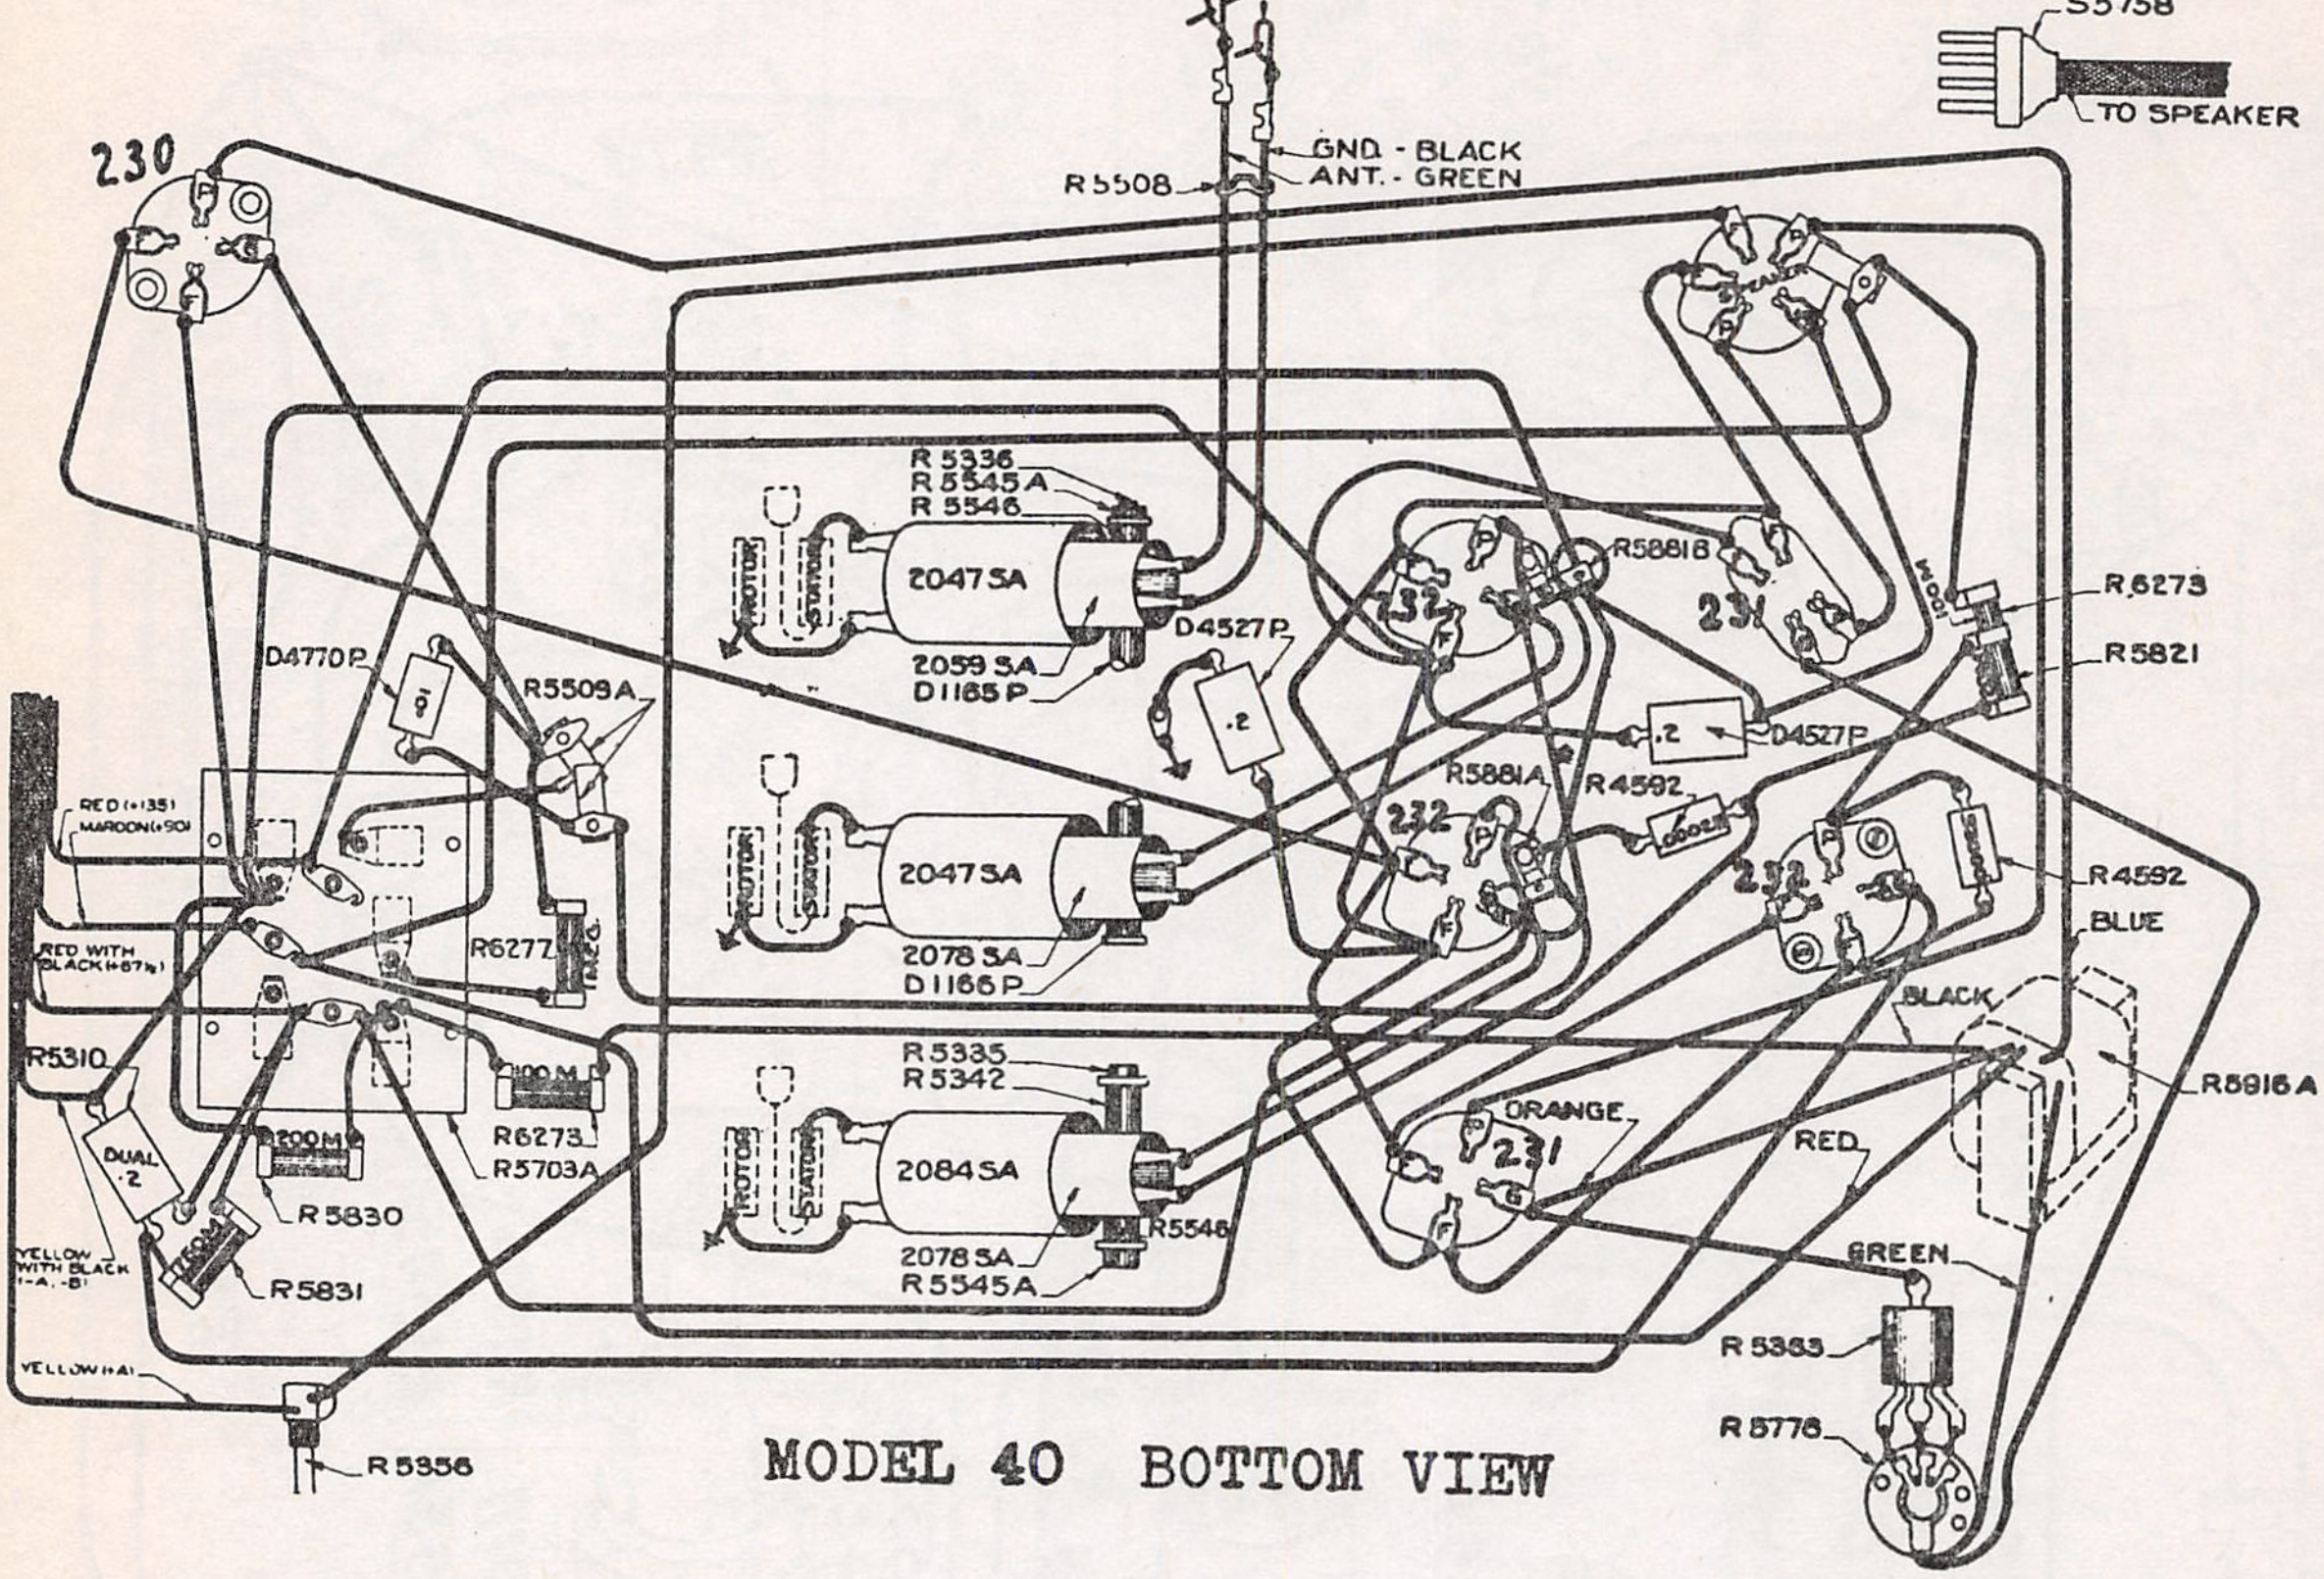
D1218P
S5758
TO SPEAKER
GND. - BLACK
ANT. - GREEN
R5508
230
R5336
R5545A
R5546
ROTOR
STATOR
2047SA
2059SA
D1165P
D4527P
.2
D4770P
.01
R5509A
R5881B
SPEAKER
231
R6273
R5821
R5881A
R4592
232
.2
D4527P
.00025
R4592
BLUE
BLACK
R5916A
2047SA
2078SA
D1166P
RED (+135)
MAROON (+90)
RED WITH BLACK (+67½)
R6277
R5310
DUAL .2
100M
200M
R6273
R5703A
R5830
R5831
YELLOW WITH BLACK (+A, -B)
YELLOW (+A)
R5356
R5335
R5342
2084SA
R5546
2078SA
R5545A
ORANGE
231
RED
GREEN
R5383
R5778

MODEL 40 BOTTOM VIEW

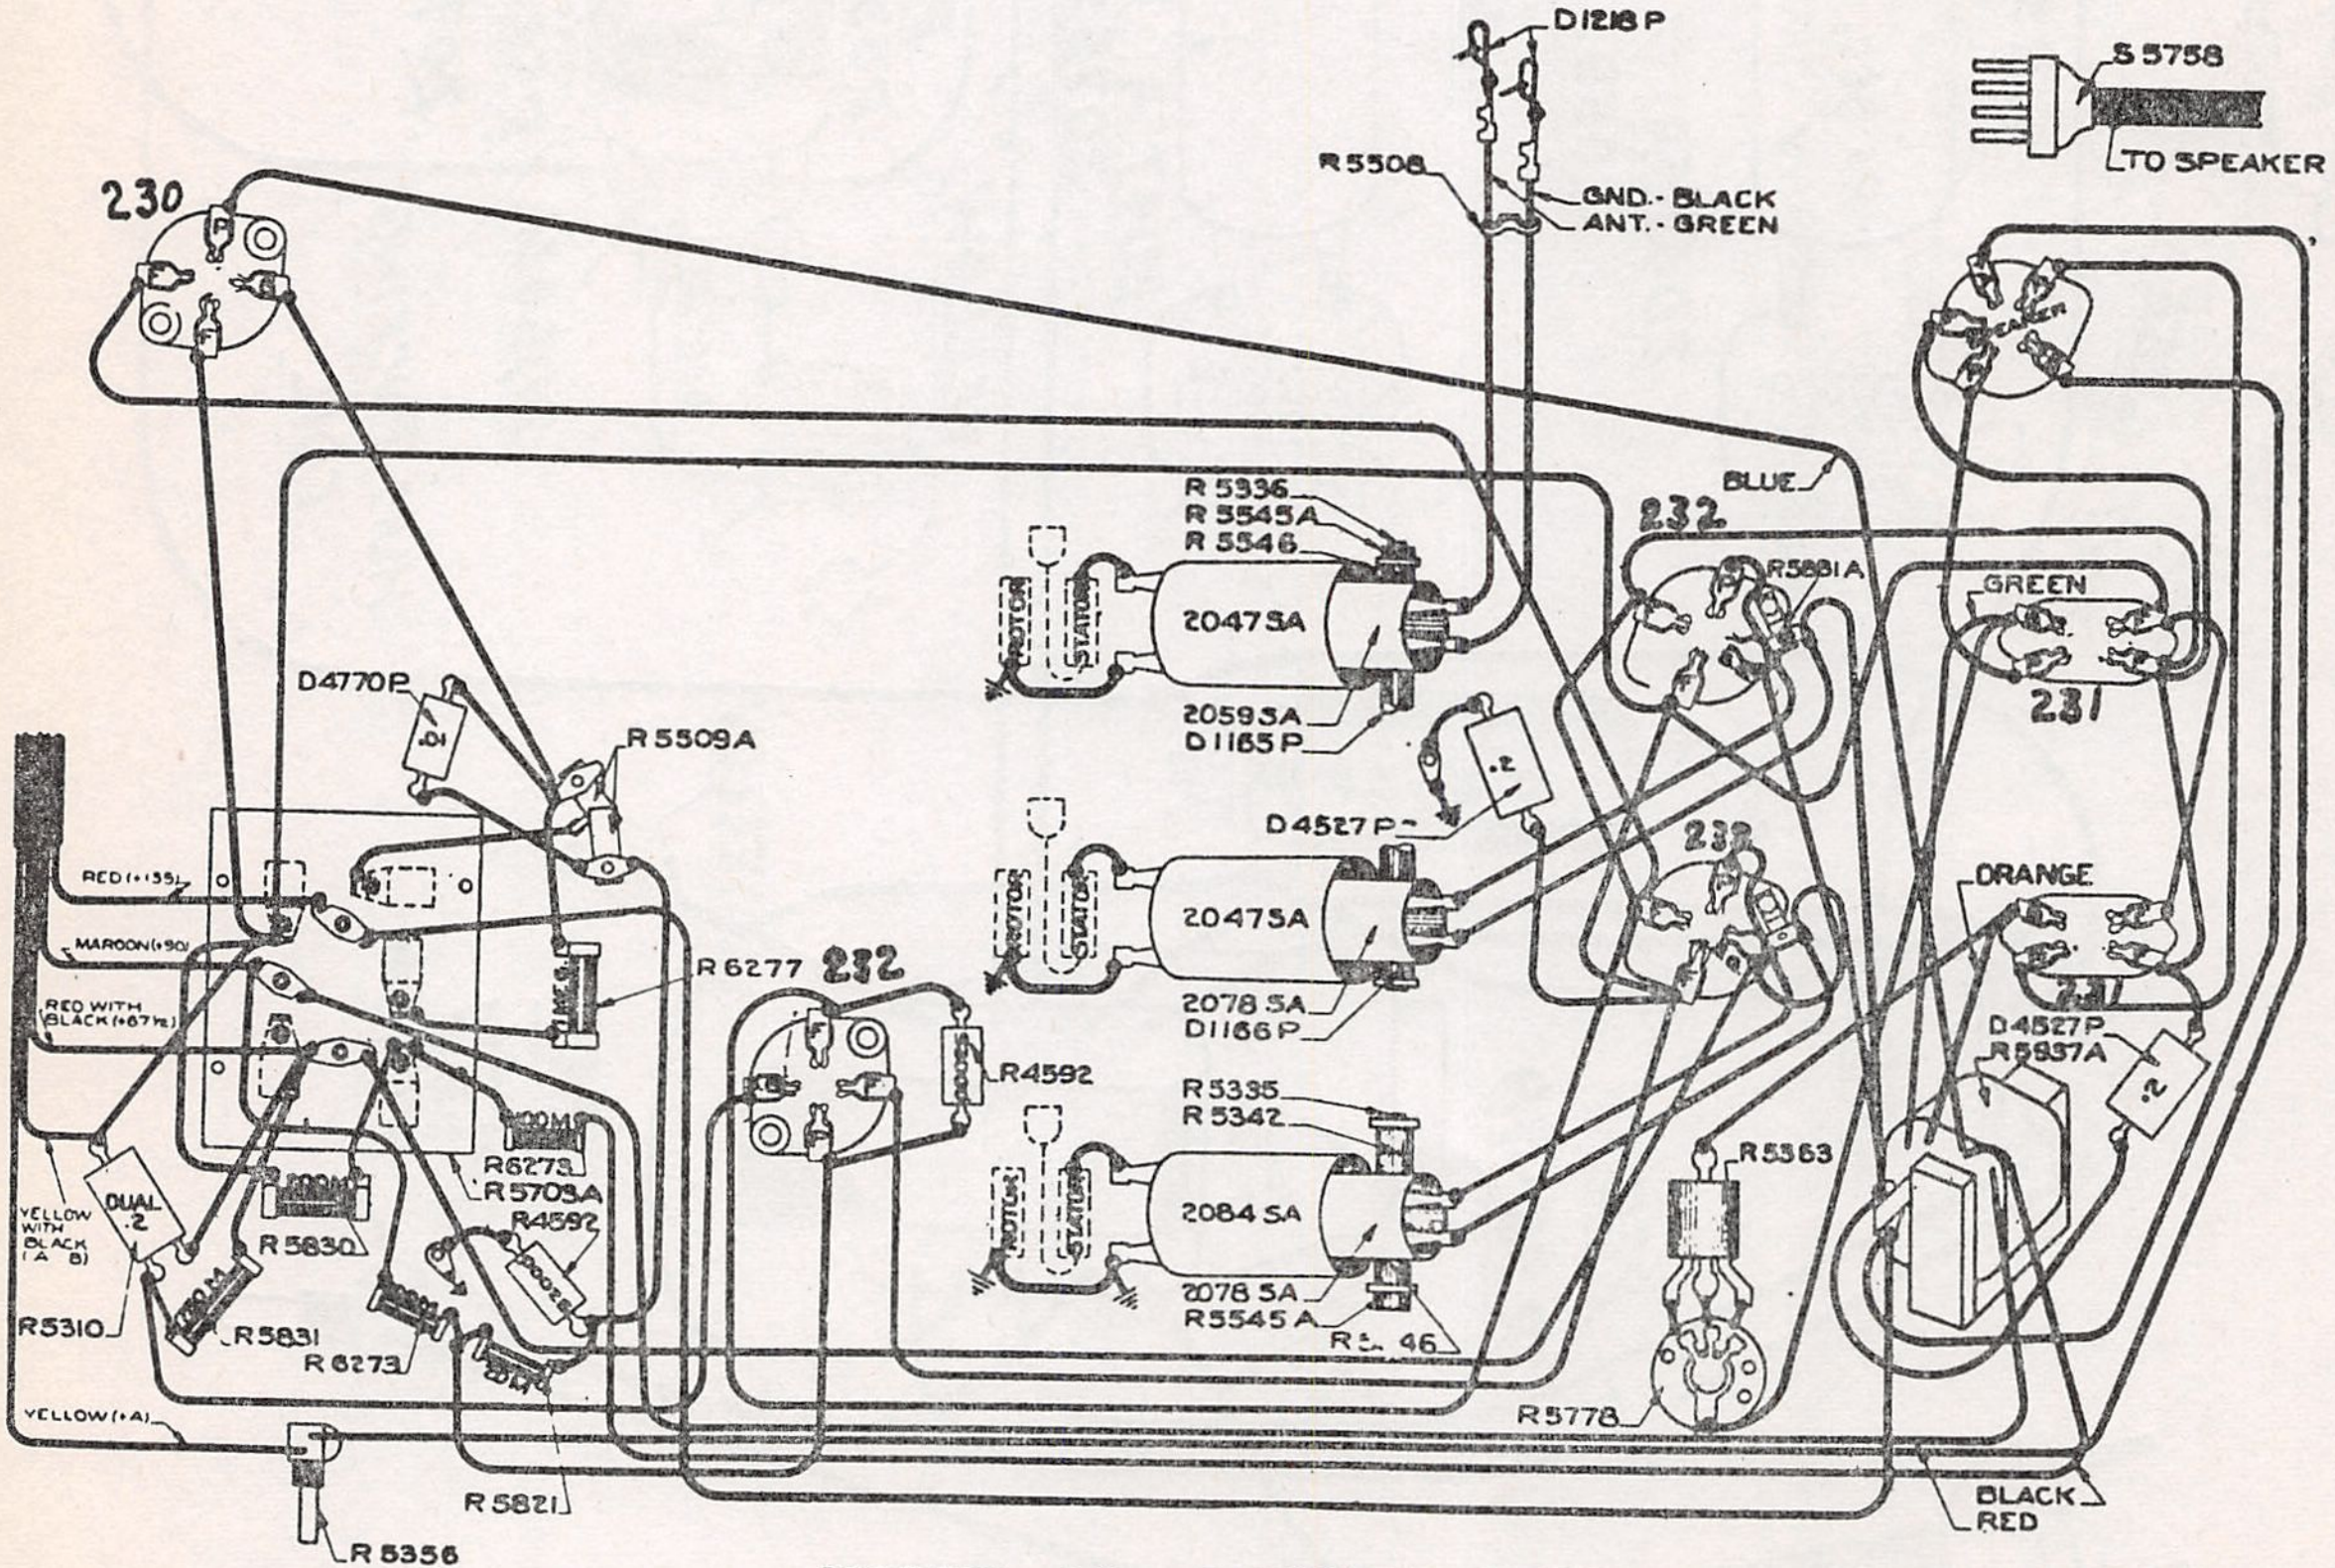
D1218P
S5758
TO SPEAKER
R5508
GND. - BLACK
ANT. - GREEN
230
BLUE
232
R5881A
R5336
R5545A
R5546
ROTOR
STATOR
2047SA
2059SA
D1165P
GREEN
231
SPEAKER
D4770P
.01
R5509A
.2
D4527P
2047SA
2078SA
D1166P
232
RED (+135)
MAROON (+90)
RED WITH BLACK (+67½)
R6277
232
R4592
ORANGE
231
D4527P
R5937A
.2
YELLOW WITH BLACK (-A, B)
DUAL .2
R6273
R5703A
R4592
R5830
R5310
R5831
R6273
R5335
R5342
2084SA
2078SA
R5545A
R5546
R5363
R5778
YELLOW (+A)
R5821
R5356
BLACK
RED

MODEL 43 BOTTOM VIEW

MODEL 40, 43
Battery
Schematic

COLONIAL RADIO CORP.

Model 40	RF1	RF2	Det.	1st Audio	231
Plate Voltage D.C.	135	135	80	90	130
Screen Voltage D.C.	67	67	25		
Filament Voltage D.C.	2.0	2.0	2.0	2.0	2.0
Control Grid Voltage D.C.	3	3		4.5	22.5

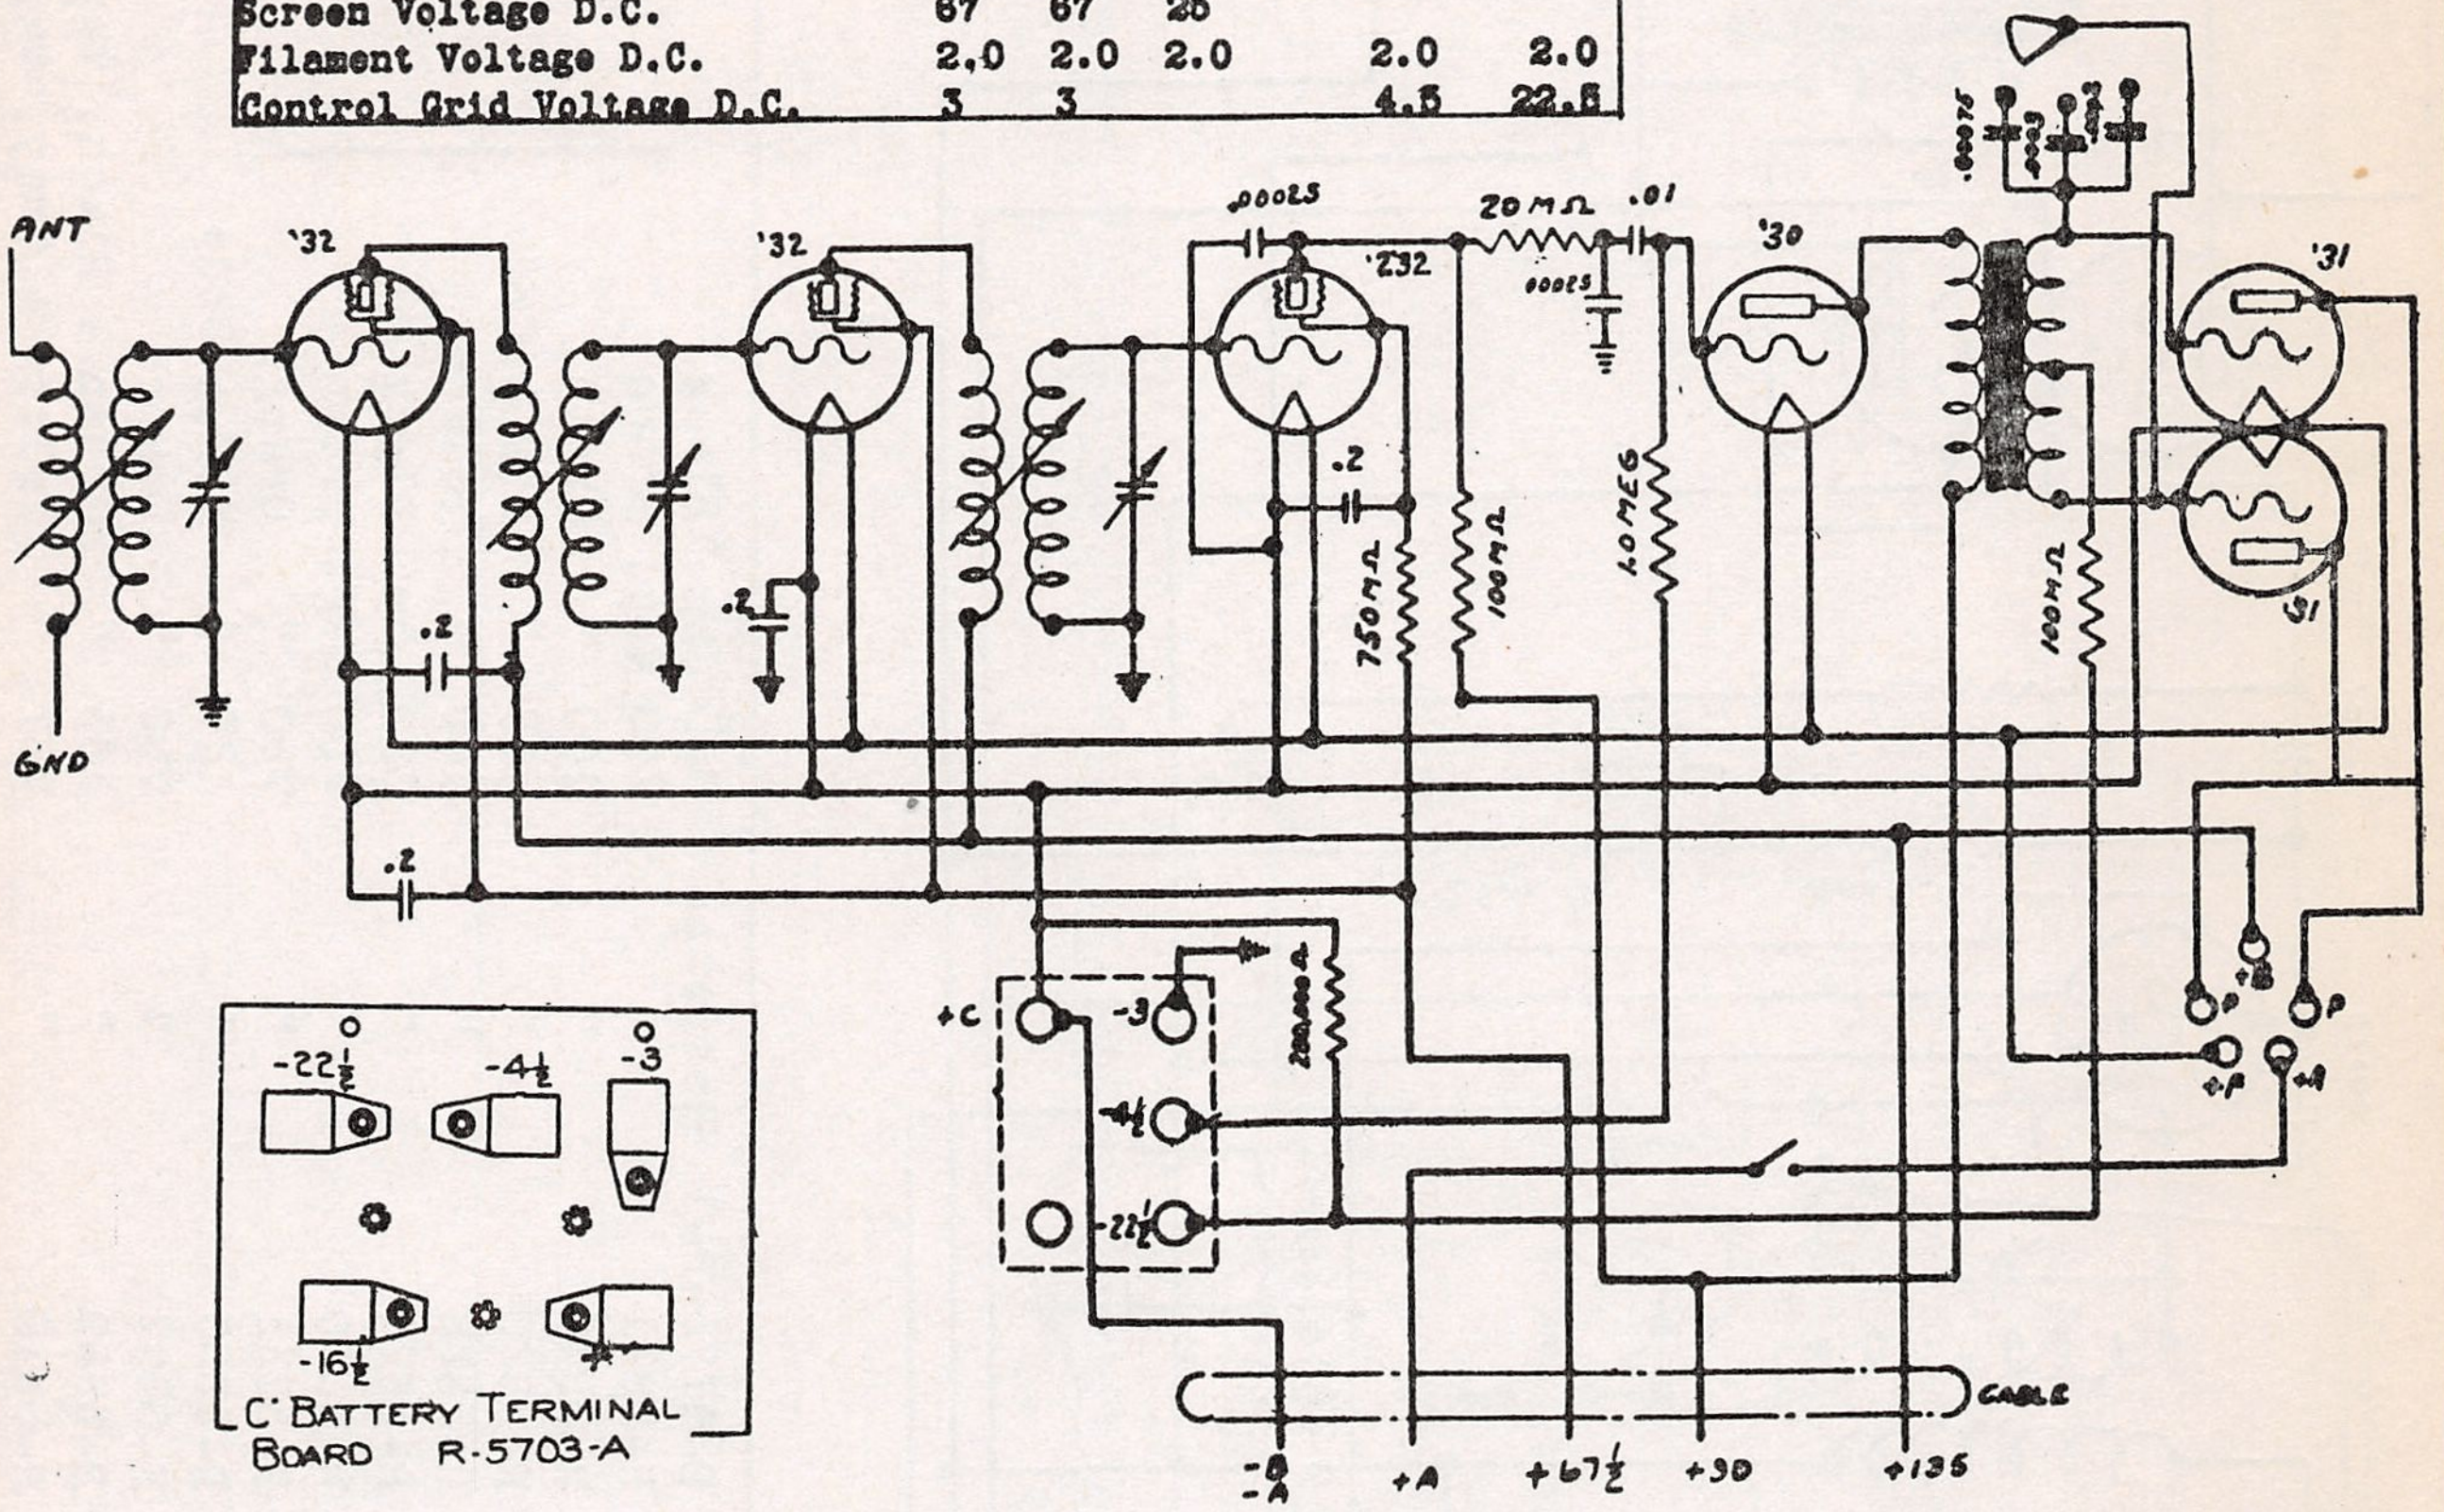
ANT
GND
'32
'32
.00025
'232
20 M Ω
.01
.00025
'30
.00075
'31
'31
.2
.2
.2
.2
750 M Ω
100 M Ω
1.0 MEG
100 M Ω
200,000 Ω
+C
-3
-4½
-22½
P
+B
P
+F
+A
CABLE
-B
-A
+A
+67½
+90
+135
-22½
-4½
-3
-16½

C' Battery Terminal Board R-5703-A

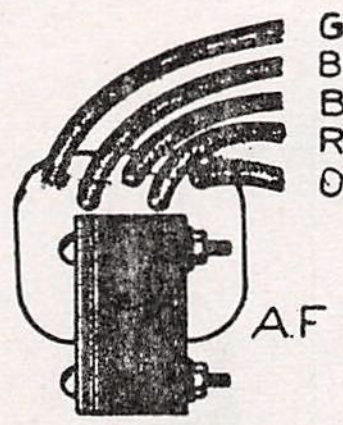

GREEN LEAD - P.P. GRID
BLUE LEAD - 1ST A.F. PLATE
BLACK LEAD - 100M RESISTOR
RED LEAD - +B90
ORANGE LEAD - P.P. GRID

A.F. Input Transformer
R-5916-A Mod. 40
R-5937-A Mod. 43

TO STATOR TERMINAL ON VARIABLE CONDENSER

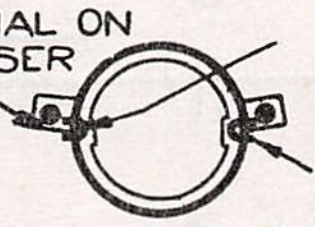

R.F. SEC. COIL D-2047-SA TO GND.
DET SEC COIL D-2084-SA TO GND.

Secondary Coil
DET SEC COIL = D-2084-SA (YELLOW SPOT)
R.F SEC COIL = D-2047-SA (PLAIN)

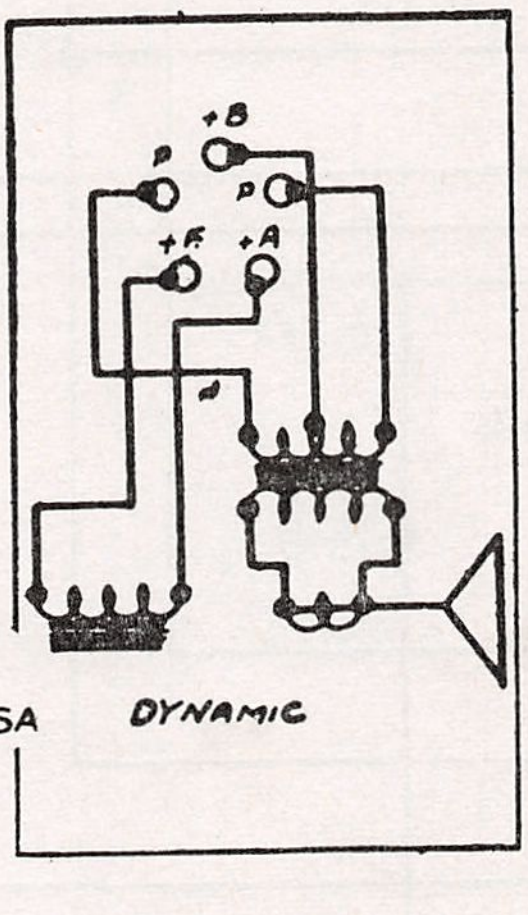
+B
P
P
+F
+A
DYNAMIC

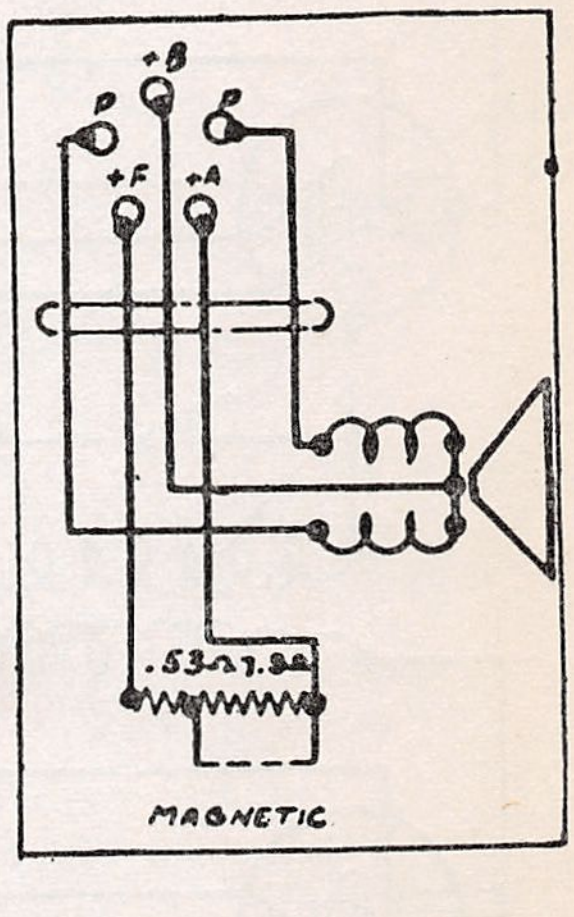
+B
P
P
+F
+A
.53-7.9Ω
MAGNETIC

Model 40 (1931)

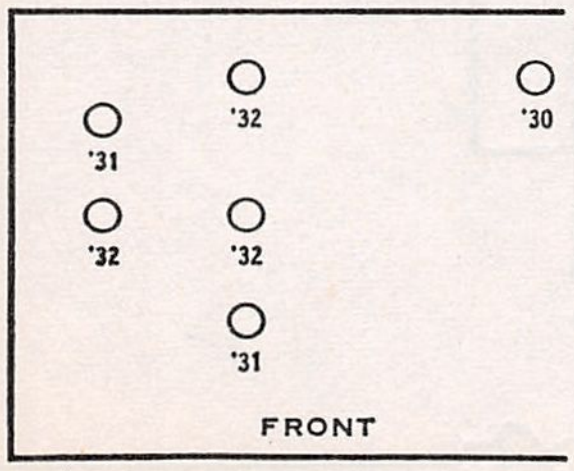
'31
'32
'30
'32
'32
'31
FRONT

ANT. PRIM. COIL D-2059-SA TO ANT.
R.F. PRIM. COIL D-2078-SA TO 232 PLATE

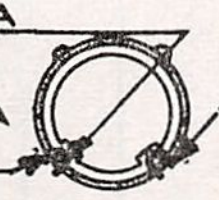

ANT PRIM. COIL D-2059-SA TO GND
R F PRIM COIL D-2078-SA TO + B TERM.

Primary Coil
ANT PRIM. COIL = D-2059-SA (YELLOW SPOT)
R.F. PRIM. COIL = D-2078-SA (PLAIN)

Model 43 (1931)

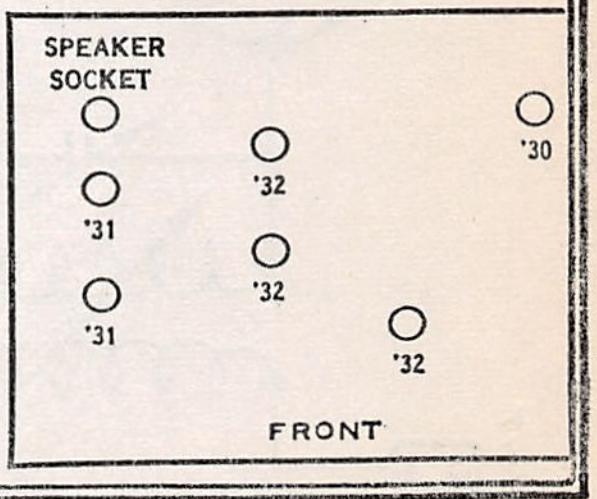
SPEAKER SOCKET
'30
'32
'31
'32
'31
'32
FRONT

MODEL 41-P
Schematic

COLONIAL RADIO CORP.

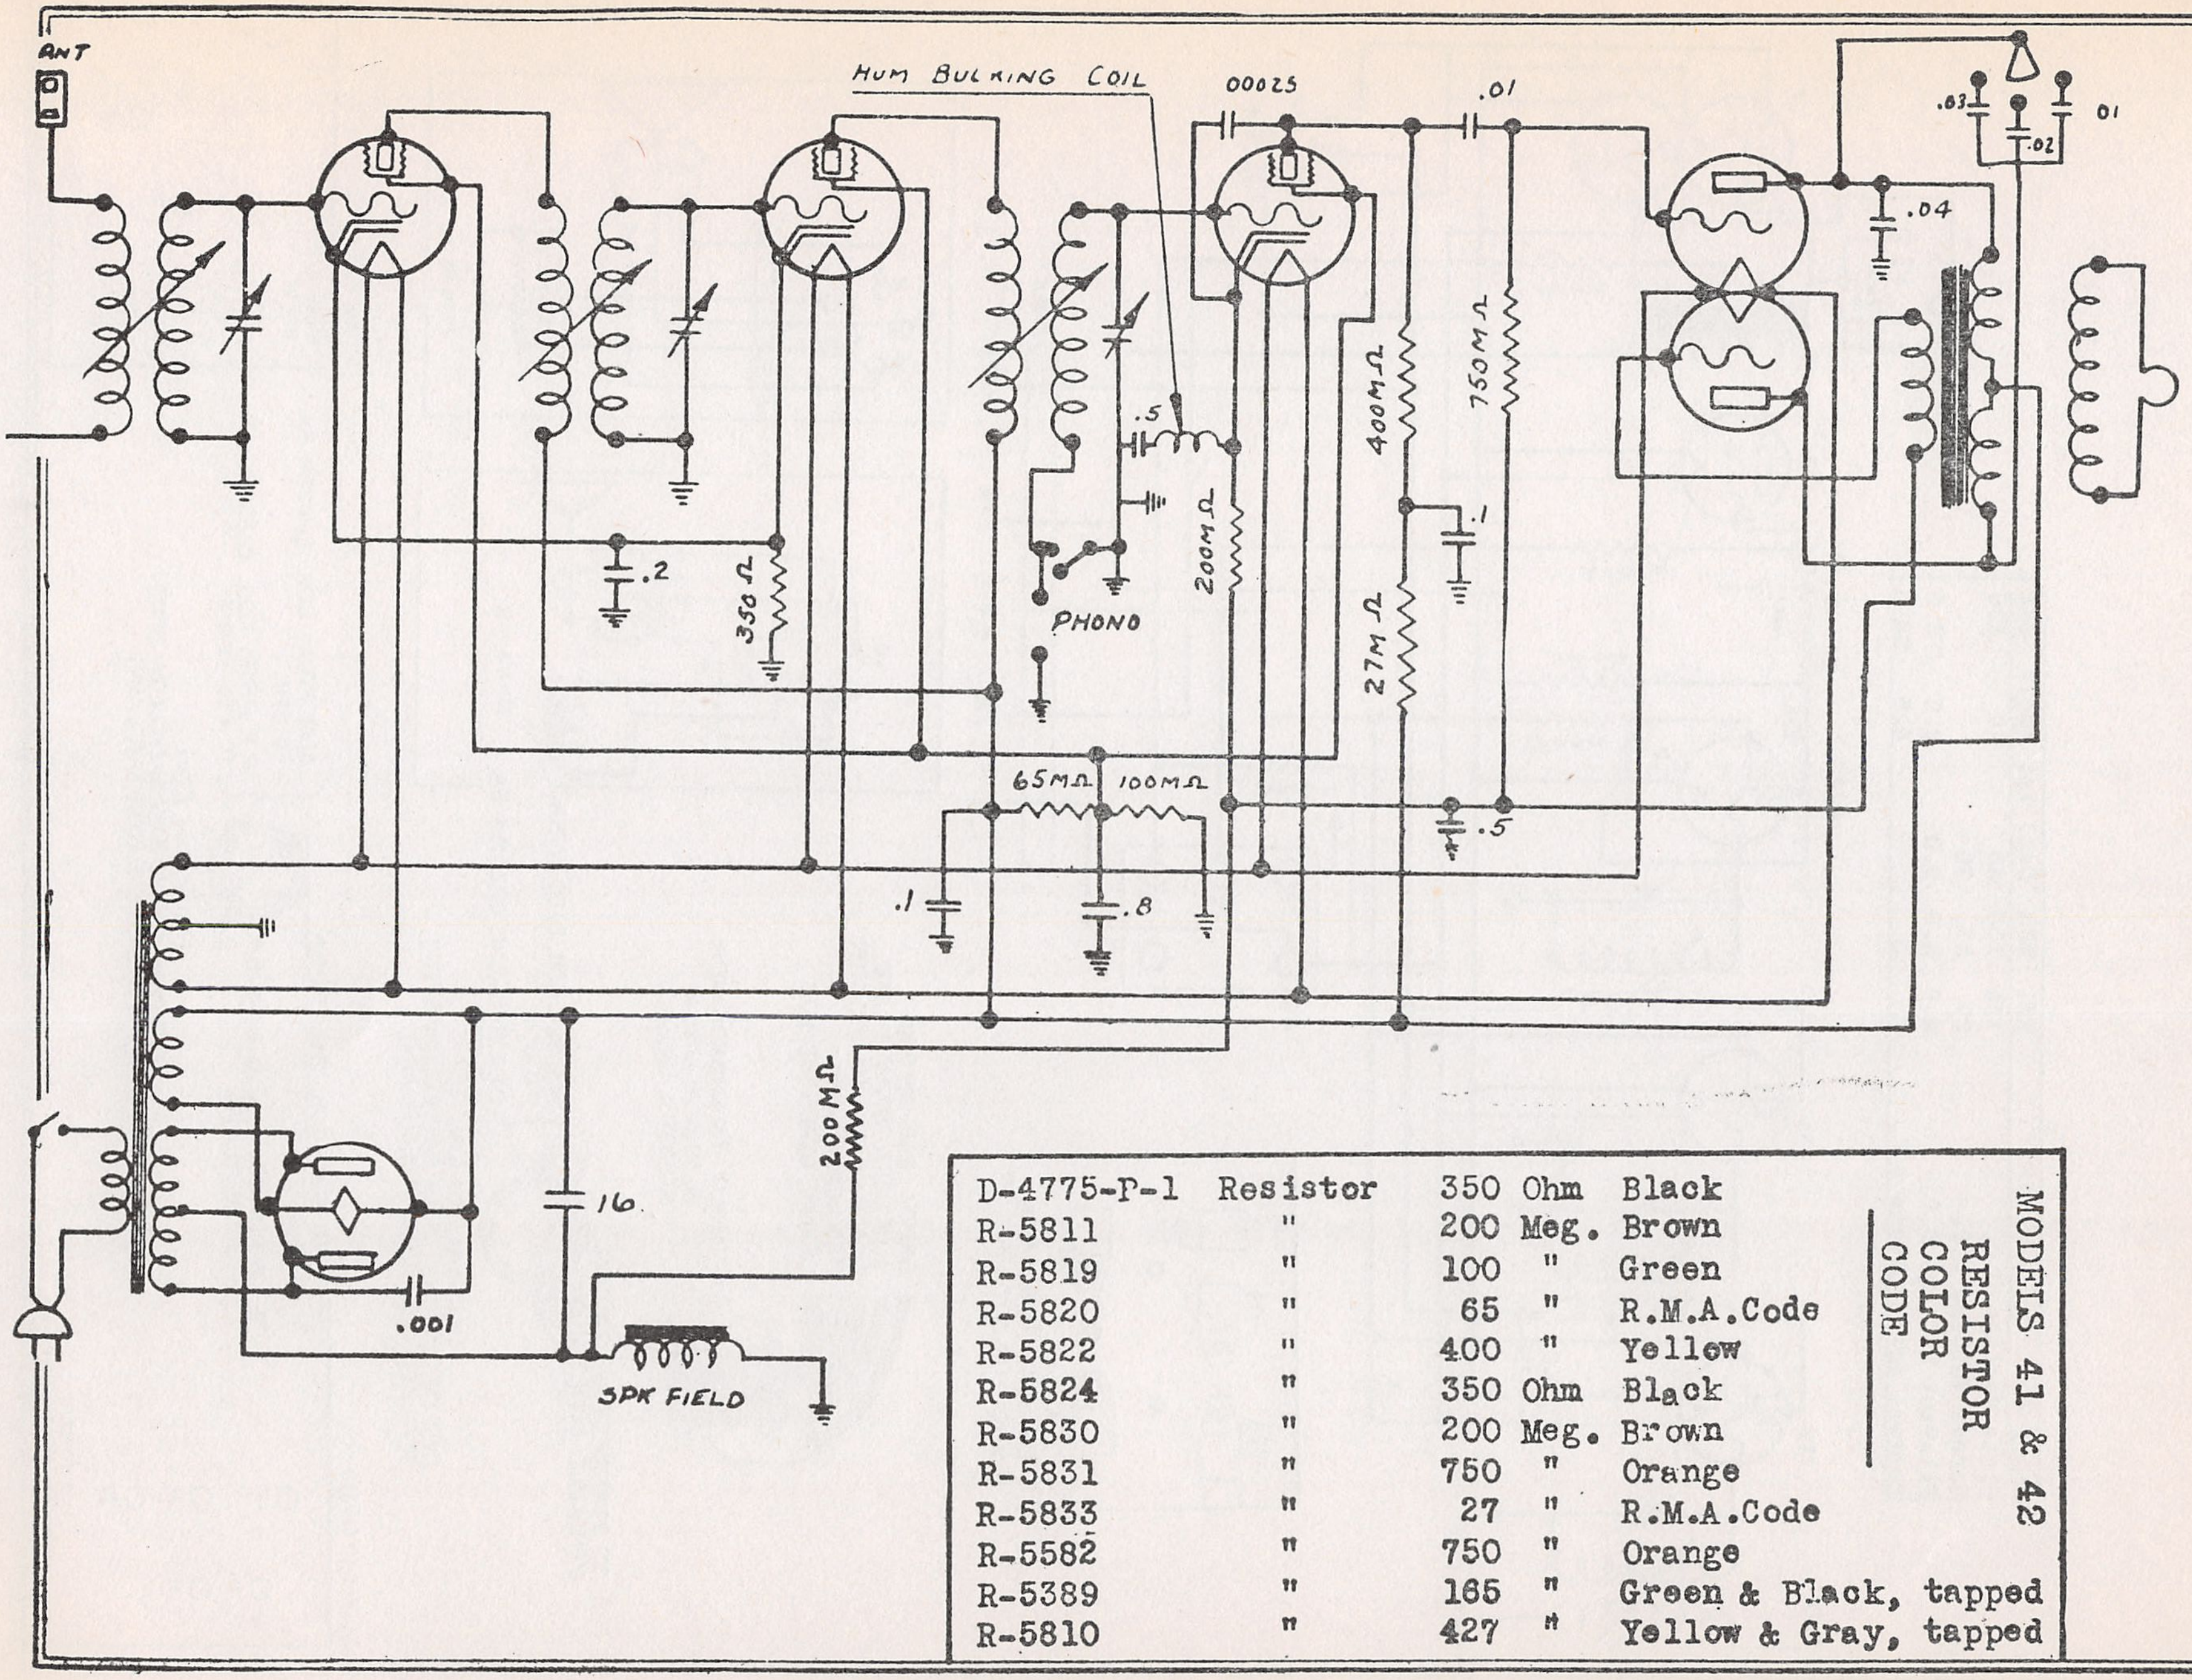
ANT
HUM BULKING COIL
00025
.01
.03
.02
01
.04
.5
200MΩ
PHONO
400MΩ
27MΩ
750MΩ
.1
.5
.2
350Ω
65MΩ
100MΩ
.1
.8
200MΩ
16
.001
SPK FIELD

MODELS 41 & 42
RESISTOR COLOR CODE

D-4775-P-1	Resistor	350 Ohm	Black
R-5811	"	200 Meg.	Brown
R-5819	"	100 "	Green
R-5820	"	65 "	R.M.A.Code
R-5822	"	400 "	Yellow
R-5824	"	350 Ohm	Black
R-5830	"	200 Meg.	Brown
R-5831	"	750 "	Orange
R-5833	"	27 "	R.M.A.Code
R-5582	"	750 "	Orange
R-5389	"	165 "	Green & Black, tapped
R-5810	"	427 "	Yellow & Gray, tapped

COLONIAL RADIO CORP.

MODEL 41
Chassis
Voltage

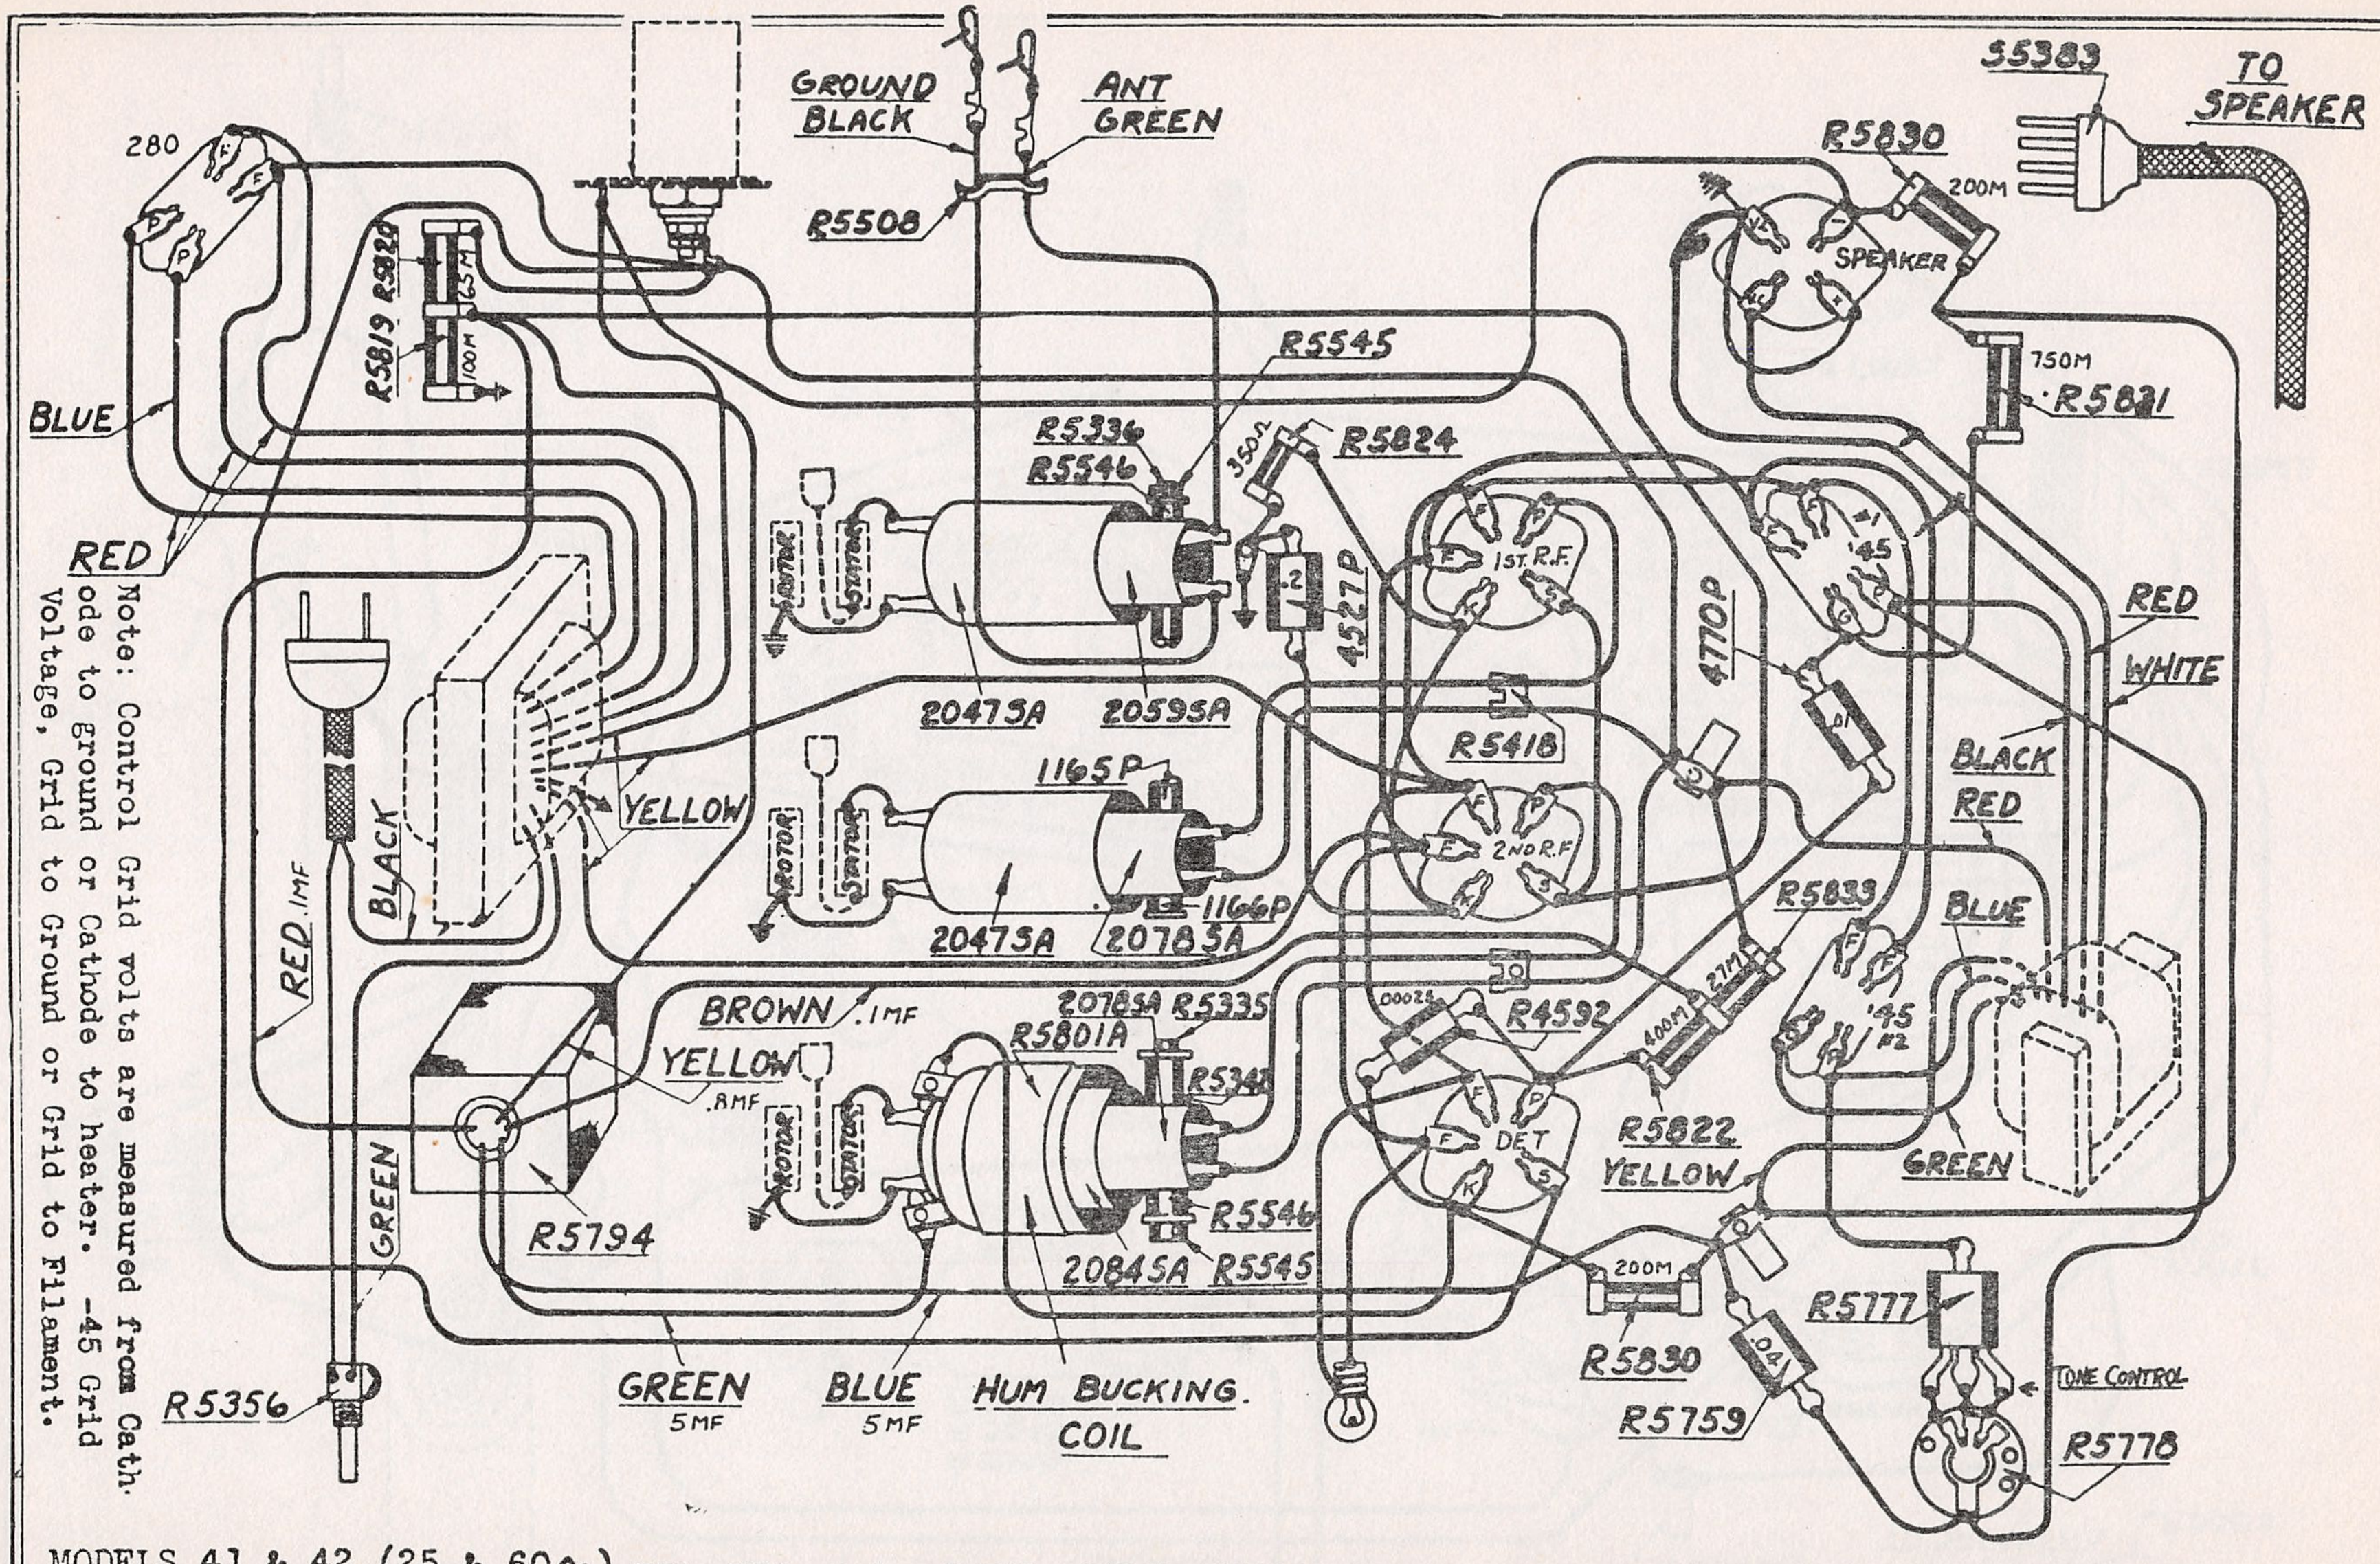
280
GROUND
BLACK
ANT
GREEN
R5508
S5383
TO
SPEAKER
R5830
200M
SPEAKER
750M
R5831
R5819 R5820
100M
65M
BLUE
RED
R5545
R5336
R5546
R5824
350Ω
.2
4527P
1ST. R.F.
4770P
.01
'45 #1
RED
WHITE
BLACK
RED
BLUE
20475A
20595A
R5418
1165P
1166P
20783A
2ND R.F.
ROTOR
STATOR
YELLOW
BLACK
RED .1MF
R5833
27M
'45 #2
BROWN .1MF
YELLOW .8MF
20785A
R5335
R5801A
R5340
.00025
R4592
400M
DET
R5822
YELLOW
GREEN
R5794
R5546
R5545
20845A
R5830
200M
R5777
TONE CONTROL
.04
R5759
R5778
R5356
GREEN
GREEN 5MF
BLUE 5MF
HUM BUCKING.
COIL

Note: Control Grid volts are measured from Cathode to ground or Cathode to heater. -45 Grid Voltage, Grid to Ground or Grid to Filament.

MODELS 41 & 42 (25 & 60~)		RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.		240	240	95	240	240	340	340
Screen Voltage D.C.		85	85	85				
Heater Voltage A.C.		2.4	2.4	2.4	2.4	2.4	4.85	
Control Grid Voltage D.C.		3	3	8	20	45		
Speaker Field Voltage	100							
Total Rectifier Current	.065							

LINE VOLTS 115.

MODELS 41 & 42 - Type '35 tubes may be used in place of '24 type in R.F.stages.
Note that speaker field is in negative side of filter circuit. Voltage drop across field is used to obtain bias.

MODEL 42
Chassis

COLONIAL RADIO CORP.

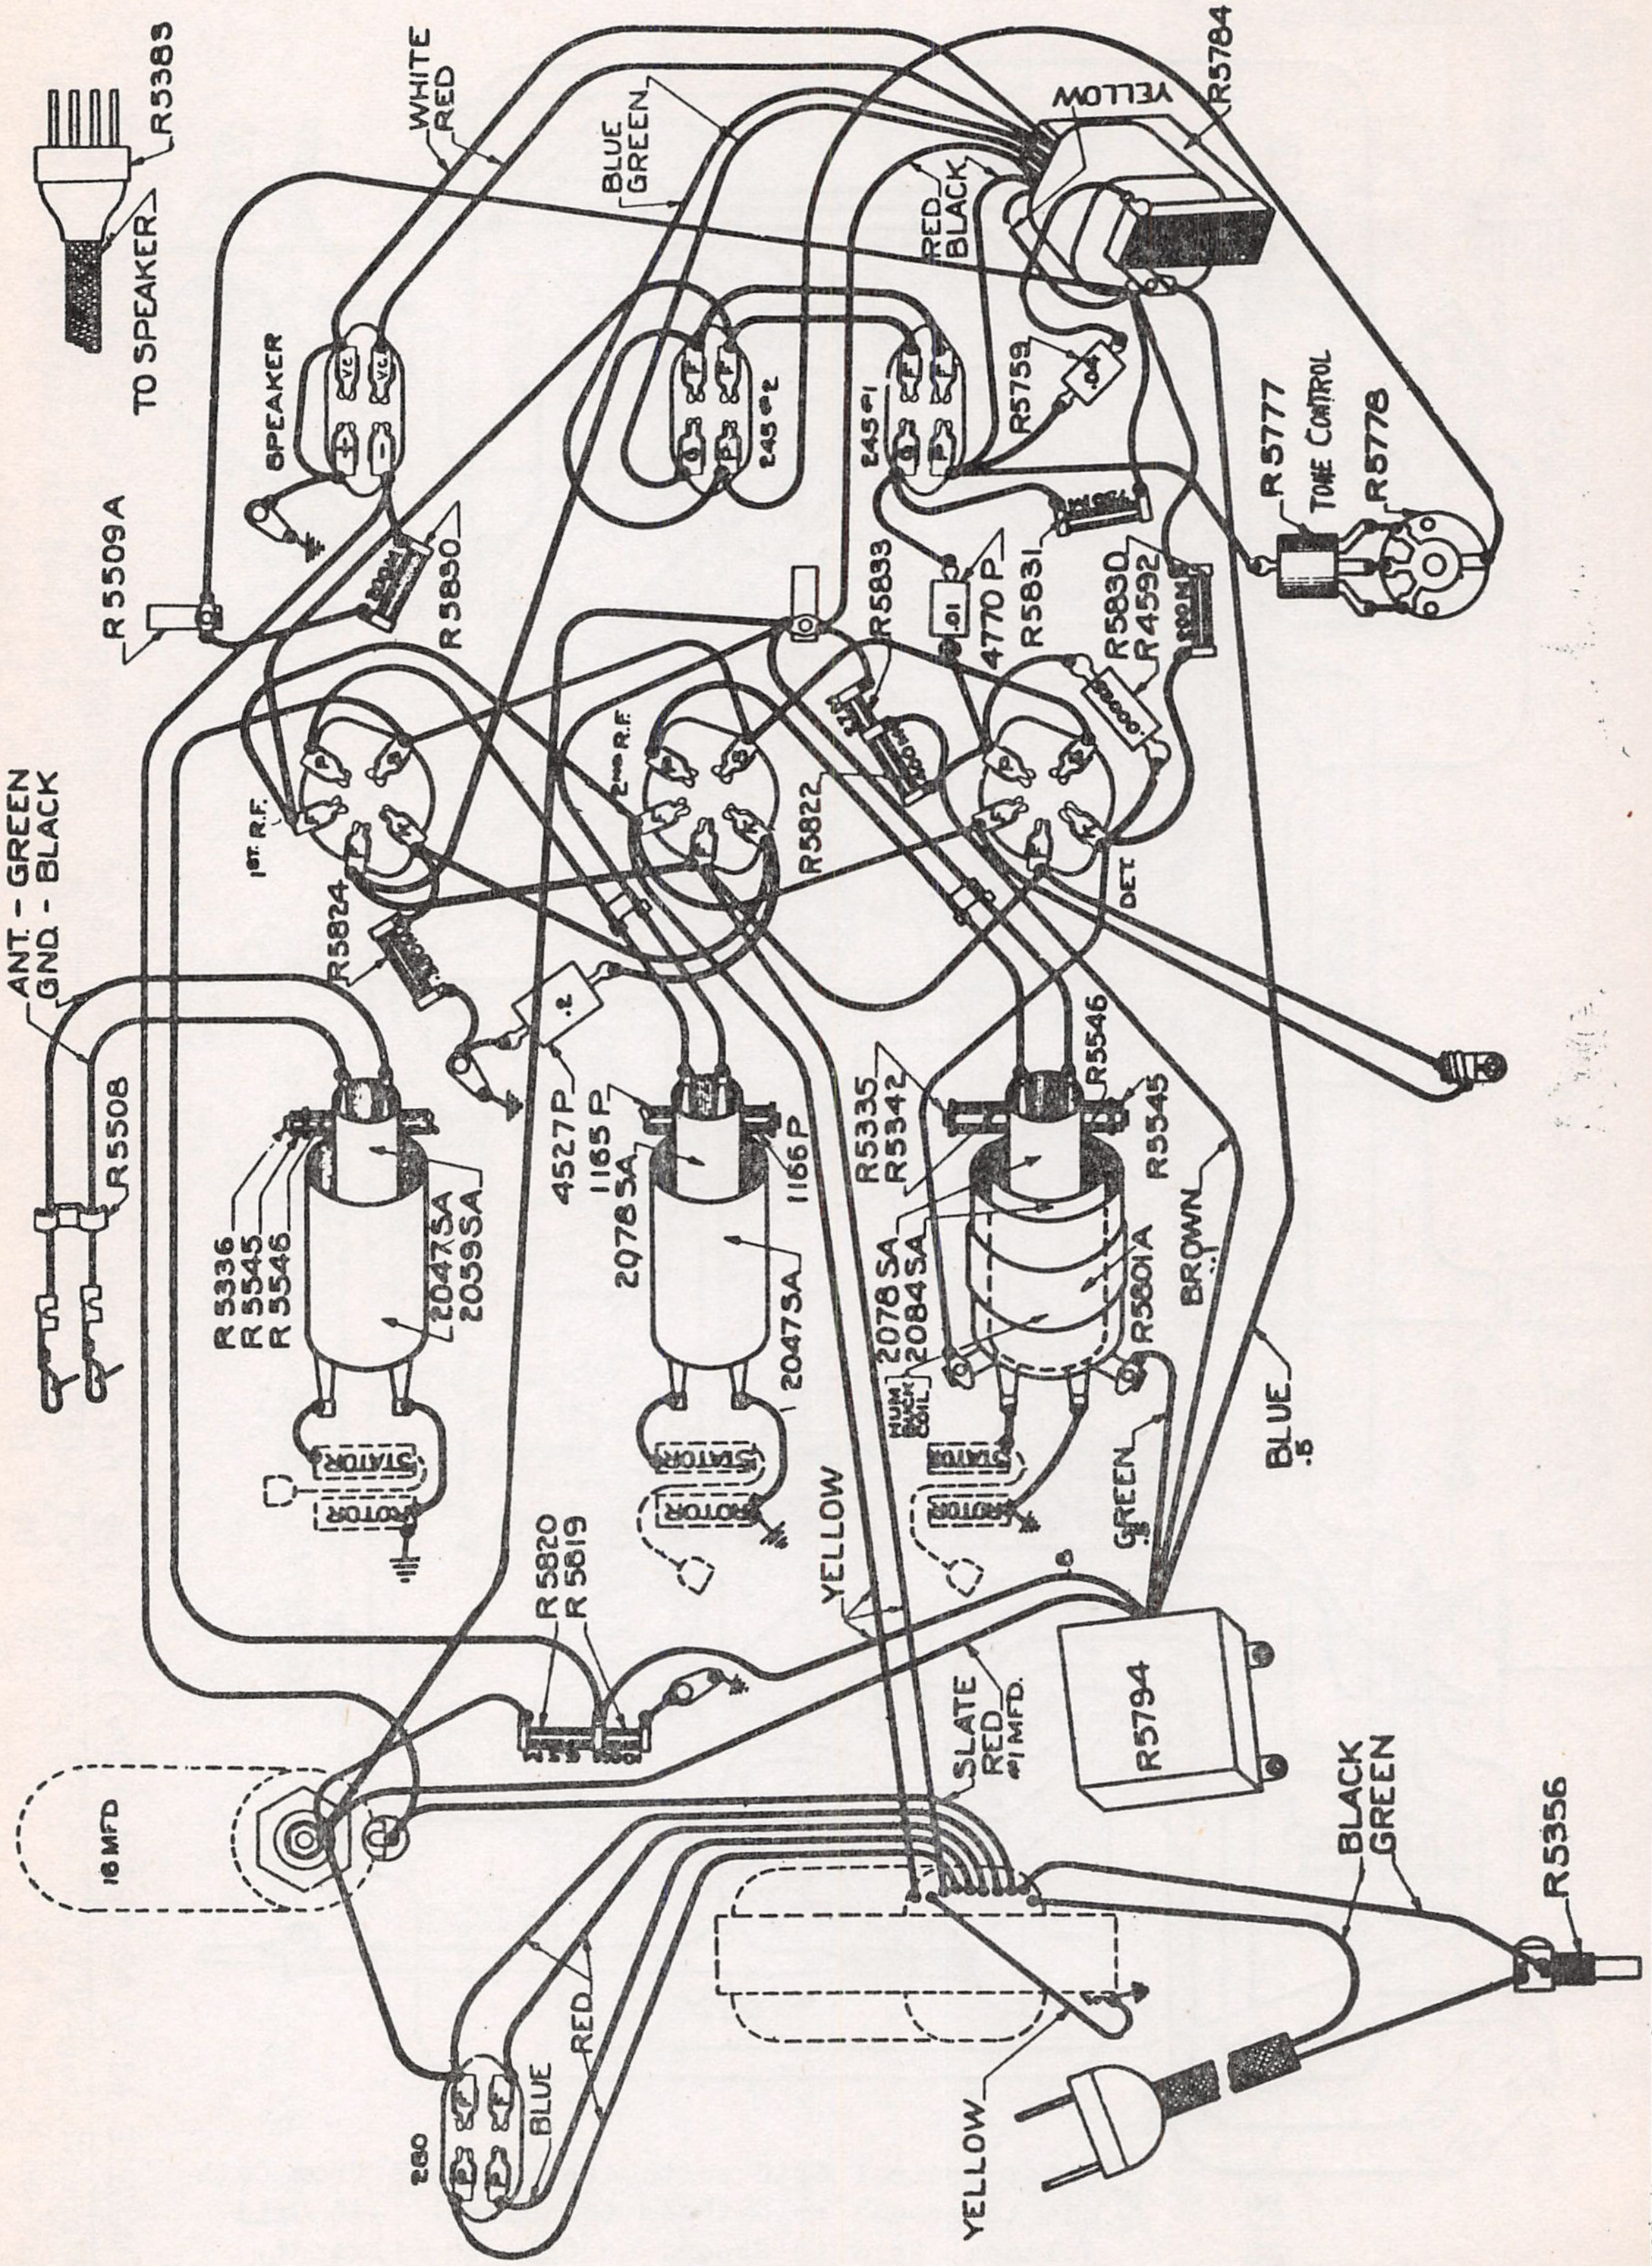
TO SPEAKER
R5383
WHITE
RED
BLUE
GREEN
YELLOW
R5784B
RED
BLACK
SPEAKER
245 #2
245 #1
R5759
.04
R5777
TONE CONTROL
R5778
R5509A
R5890
R5833
.01
4770 P
R5831
R5830
R4592
1ST R.F.
2ND R.F.
R5822
DET.
ANT. - GREEN
GND. - BLACK
R5824
.2
4527 P
1165 P
2078 SA
1166 P
2047 SA
R5335
R5342
R5546
R5545
2078 SA
2084 SA
R5601A
BROWN
HUM BUCK COIL
R5508
R5336
R5545
R5546
2047SA
2059SA
STATOR
ROTOR
YELLOW
R5820
R5819
SLATE
RED
.1 MFD.
R5794
GREEN
BLUE
.5
BLACK
GREEN
R5356
16 MFD
280
BLUE
RED
YELLOW

MODELS 41 and 42
Parts Coding

COLONIAL RADIO CORP.

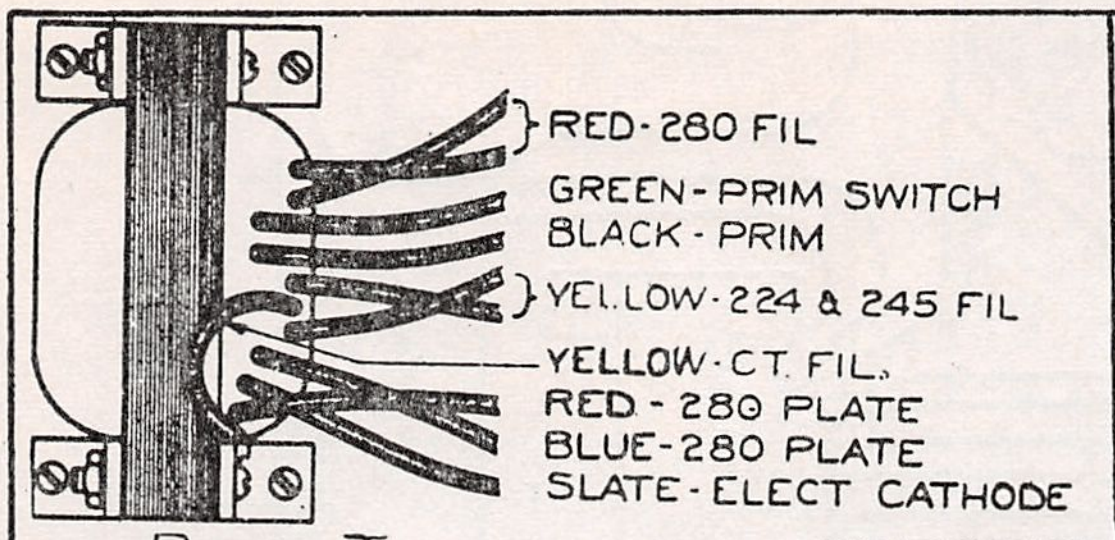
RED-280 FIL
GREEN-PRIM SWITCH
BLACK-PRIM
YELLOW-224 & 245 FIL
YELLOW-C.T. FIL.
RED-280 PLATE
BLUE-280 PLATE
SLATE-ELECT CATHODE

POWER TRANSFORMER
R 5779 A = 60 ~
R 5826 A = 25 ~

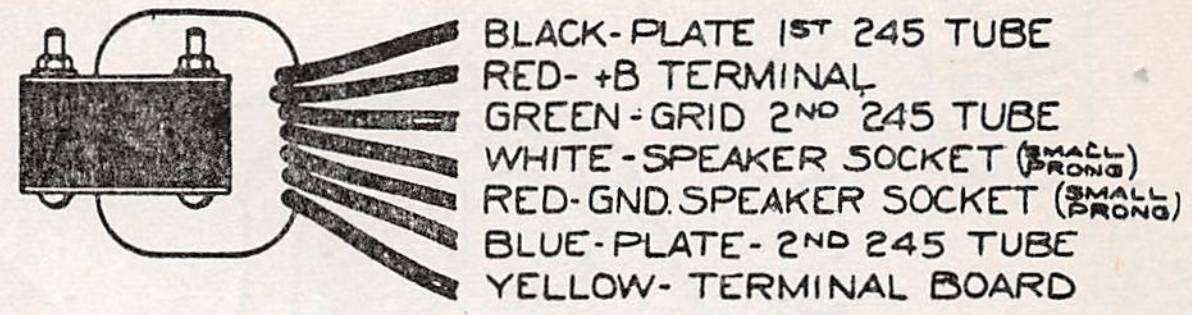
BLACK-PLATE 1ST 245 TUBE
RED-+B TERMINAL
GREEN-GRID 2ND 245 TUBE
WHITE-SPEAKER SOCKET (SMALL PRONG)
RED-GND. SPEAKER SOCKET (SMALL PRONG)
BLUE-PLATE-2ND 245 TUBE
YELLOW-TERMINAL BOARD

AUDIO, INPUT-OUTPUT TRANSFORMER
R 5784 A

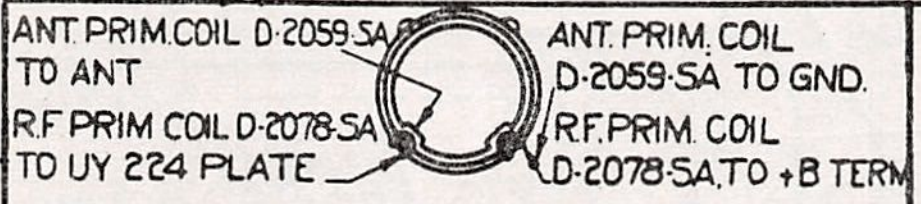
ANT. PRIM. COIL D-2059-SA TO ANT
ANT. PRIM. COIL D-2059-SA TO GND.
R.F. PRIM. COIL D-2078-SA TO UY 224 PLATE
R.F. PRIM. COIL D-2078-SA TO +B TERM

PRIMARY COIL
ANT PRIM. COIL = D-2059-SA (YELLOW SPOT)
R.F. PRIM. COIL = D-2078-SA (PLAIN)

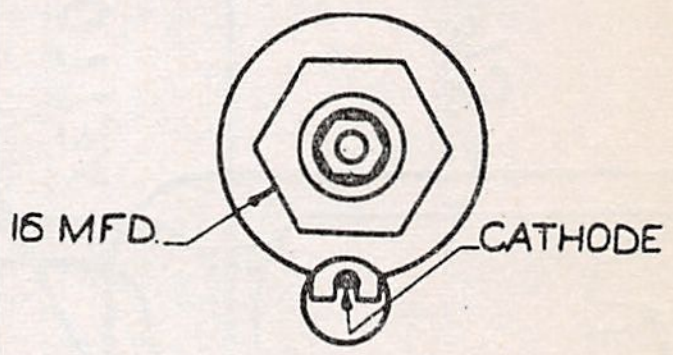
16 MFD.
CATHODE

ELECTROLYTIC CONDENSER
R 5734 A

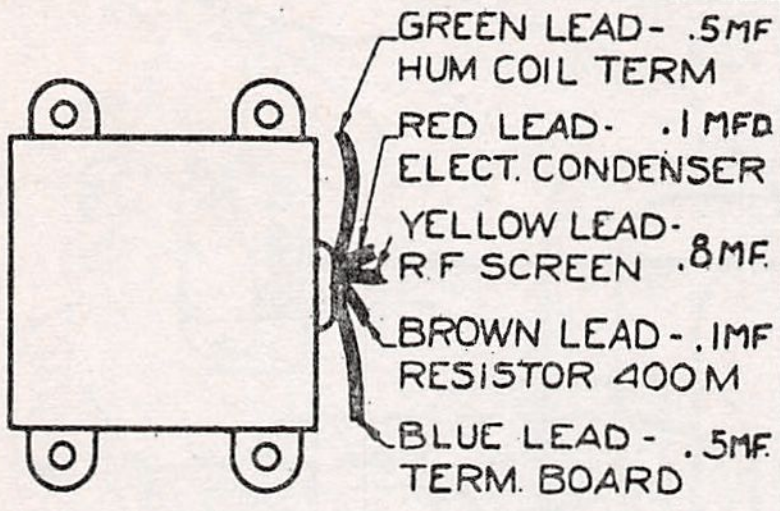
GREEN LEAD-.5MF HUM COIL TERM
RED LEAD-.1 MFD ELECT. CONDENSER
YELLOW LEAD-.8MF. R.F SCREEN
BROWN LEAD-.1MF RESISTOR 400 M
BLUE LEAD-.5MF. TERM. BOARD

FILTER CONDENSER
R 5794 = 60 CYCLE
25 CYCLE

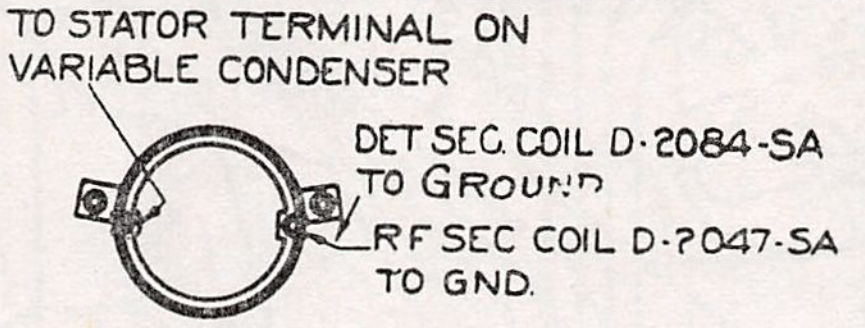
TO STATOR TERMINAL ON VARIABLE CONDENSER
DET SEC COIL D-2084-SA TO GROUND
R.F SEC COIL D-2047-SA TO GND.

SECONDARY COIL
DET SEC. COIL = D 2084 SA (YELLOW SPOT)
R.F. SEC COIL = D 2047 SA (PLAIN)

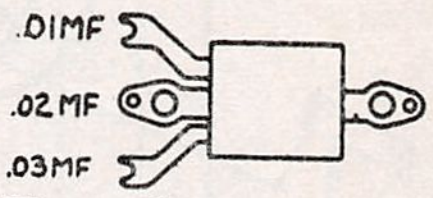
.01MF
.02MF
.03MF

TONE CONTROL CONDENSER
R 5777

LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL & ELECTROLYTIC CONDENSERS, PRIMARY & SECONDARY R F COILS

MODEL 41

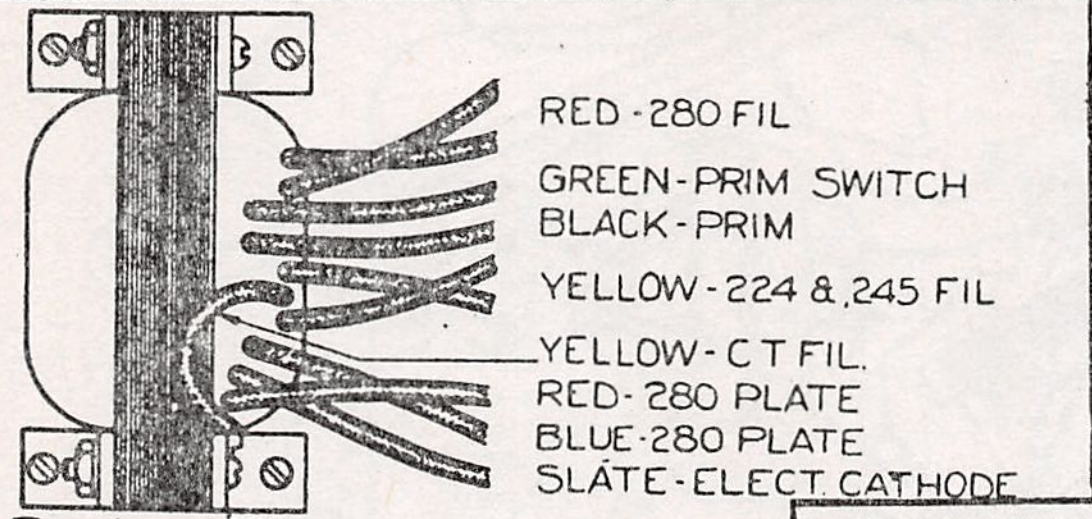
RED-280 FIL
GREEN-PRIM SWITCH
BLACK-PRIM
YELLOW-224 & 245 FIL
YELLOW-C T FIL.
RED-280 PLATE
BLUE-280 PLATE
SLATE-ELECT CATHODE

POWER TRANSFORMER
R 5779 A = 60 ~
R 5826 A = 25 ~

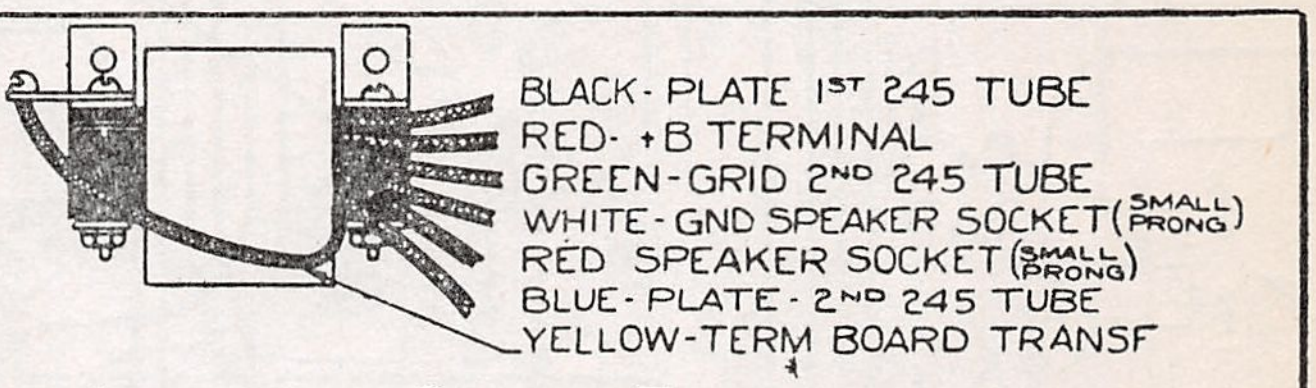
BLACK-PLATE 1ST 245 TUBE
RED-+B TERMINAL
GREEN-GRID 2ND 245 TUBE
WHITE-GND SPEAKER SOCKET (SMALL PRONG)
RED SPEAKER SOCKET (SMALL PRONG)
BLUE-PLATE-2ND 245 TUBE
YELLOW-TERM BOARD TRANSF

AUDIO INPUT-OUTPUT TRANSFORMER
R 5784 B

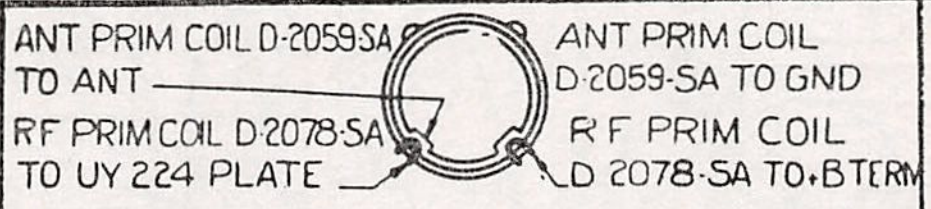
ANT PRIM COIL D-2059-SA TO ANT
ANT PRIM COIL D-2059-SA TO GND
RF PRIM COIL D-2078-SA TO UY 224 PLATE
R F PRIM COIL D 2078-SA TO +B TERM

PRIMARY COIL
ANT PRIM COIL = D-2059-SA (YELLOW SPOT)
R F PRIM COIL = D-2078-SA (PLAIN)

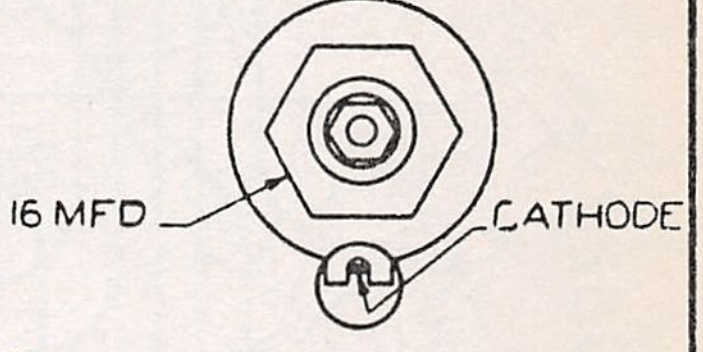
16 MFD
CATHODE

ELECTROLYTIC CONDENSER
R 5734 A

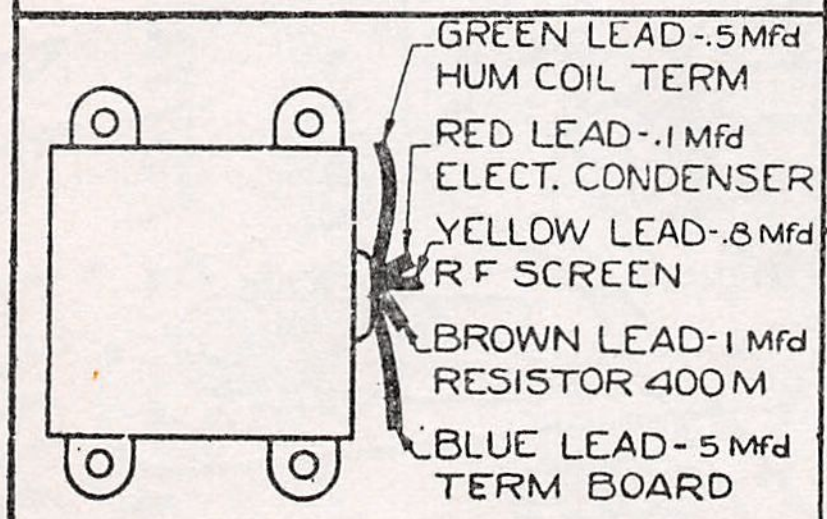
GREEN LEAD-.5 Mfd HUM COIL TERM
RED LEAD-.1 Mfd ELECT. CONDENSER
YELLOW LEAD-.8 Mfd R F SCREEN
BROWN LEAD-1 Mfd RESISTOR 400 M
BLUE LEAD-5 Mfd TERM BOARD

FILTER CONDENSER
R 5794 = 60 CYCLE
25 CYCLE

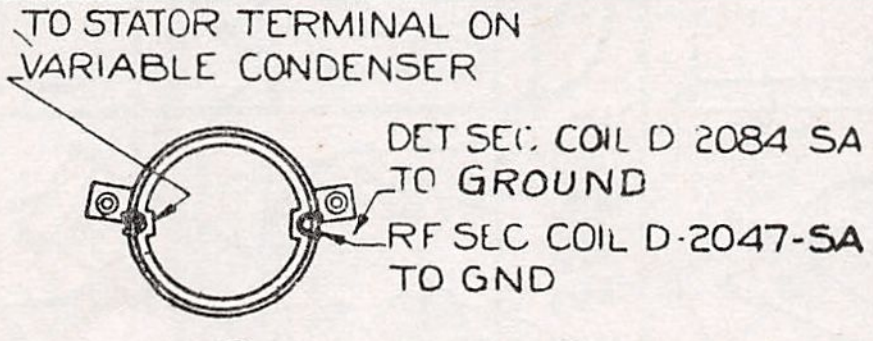
TO STATOR TERMINAL ON VARIABLE CONDENSER
DET SEC COIL D 2084 SA TO GROUND
RF SEC COIL D-2047-SA TO GND

SECONDARY COIL
DET SEC COIL = D-2084 SA (YELLOW SPOT)
R F SEC COIL = D-2047-SA (PLAIN)

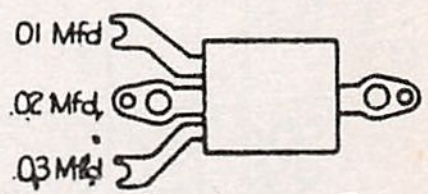
.01 Mfd
.02 Mfd
.03 Mfd

TONE CONTROL CONDENSER
R 5777

LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL & ELECTROLYTIC CONDENSERS, PRIMARY & SECONDARY R F COILS.

MODEL 42

FOR ADDITIONAL DATA (RESISTOR COLOR CODE) SEE PAGE 208-B-16

MODEL 44 Super
Chassis

COLONIAL RADIO CORP.

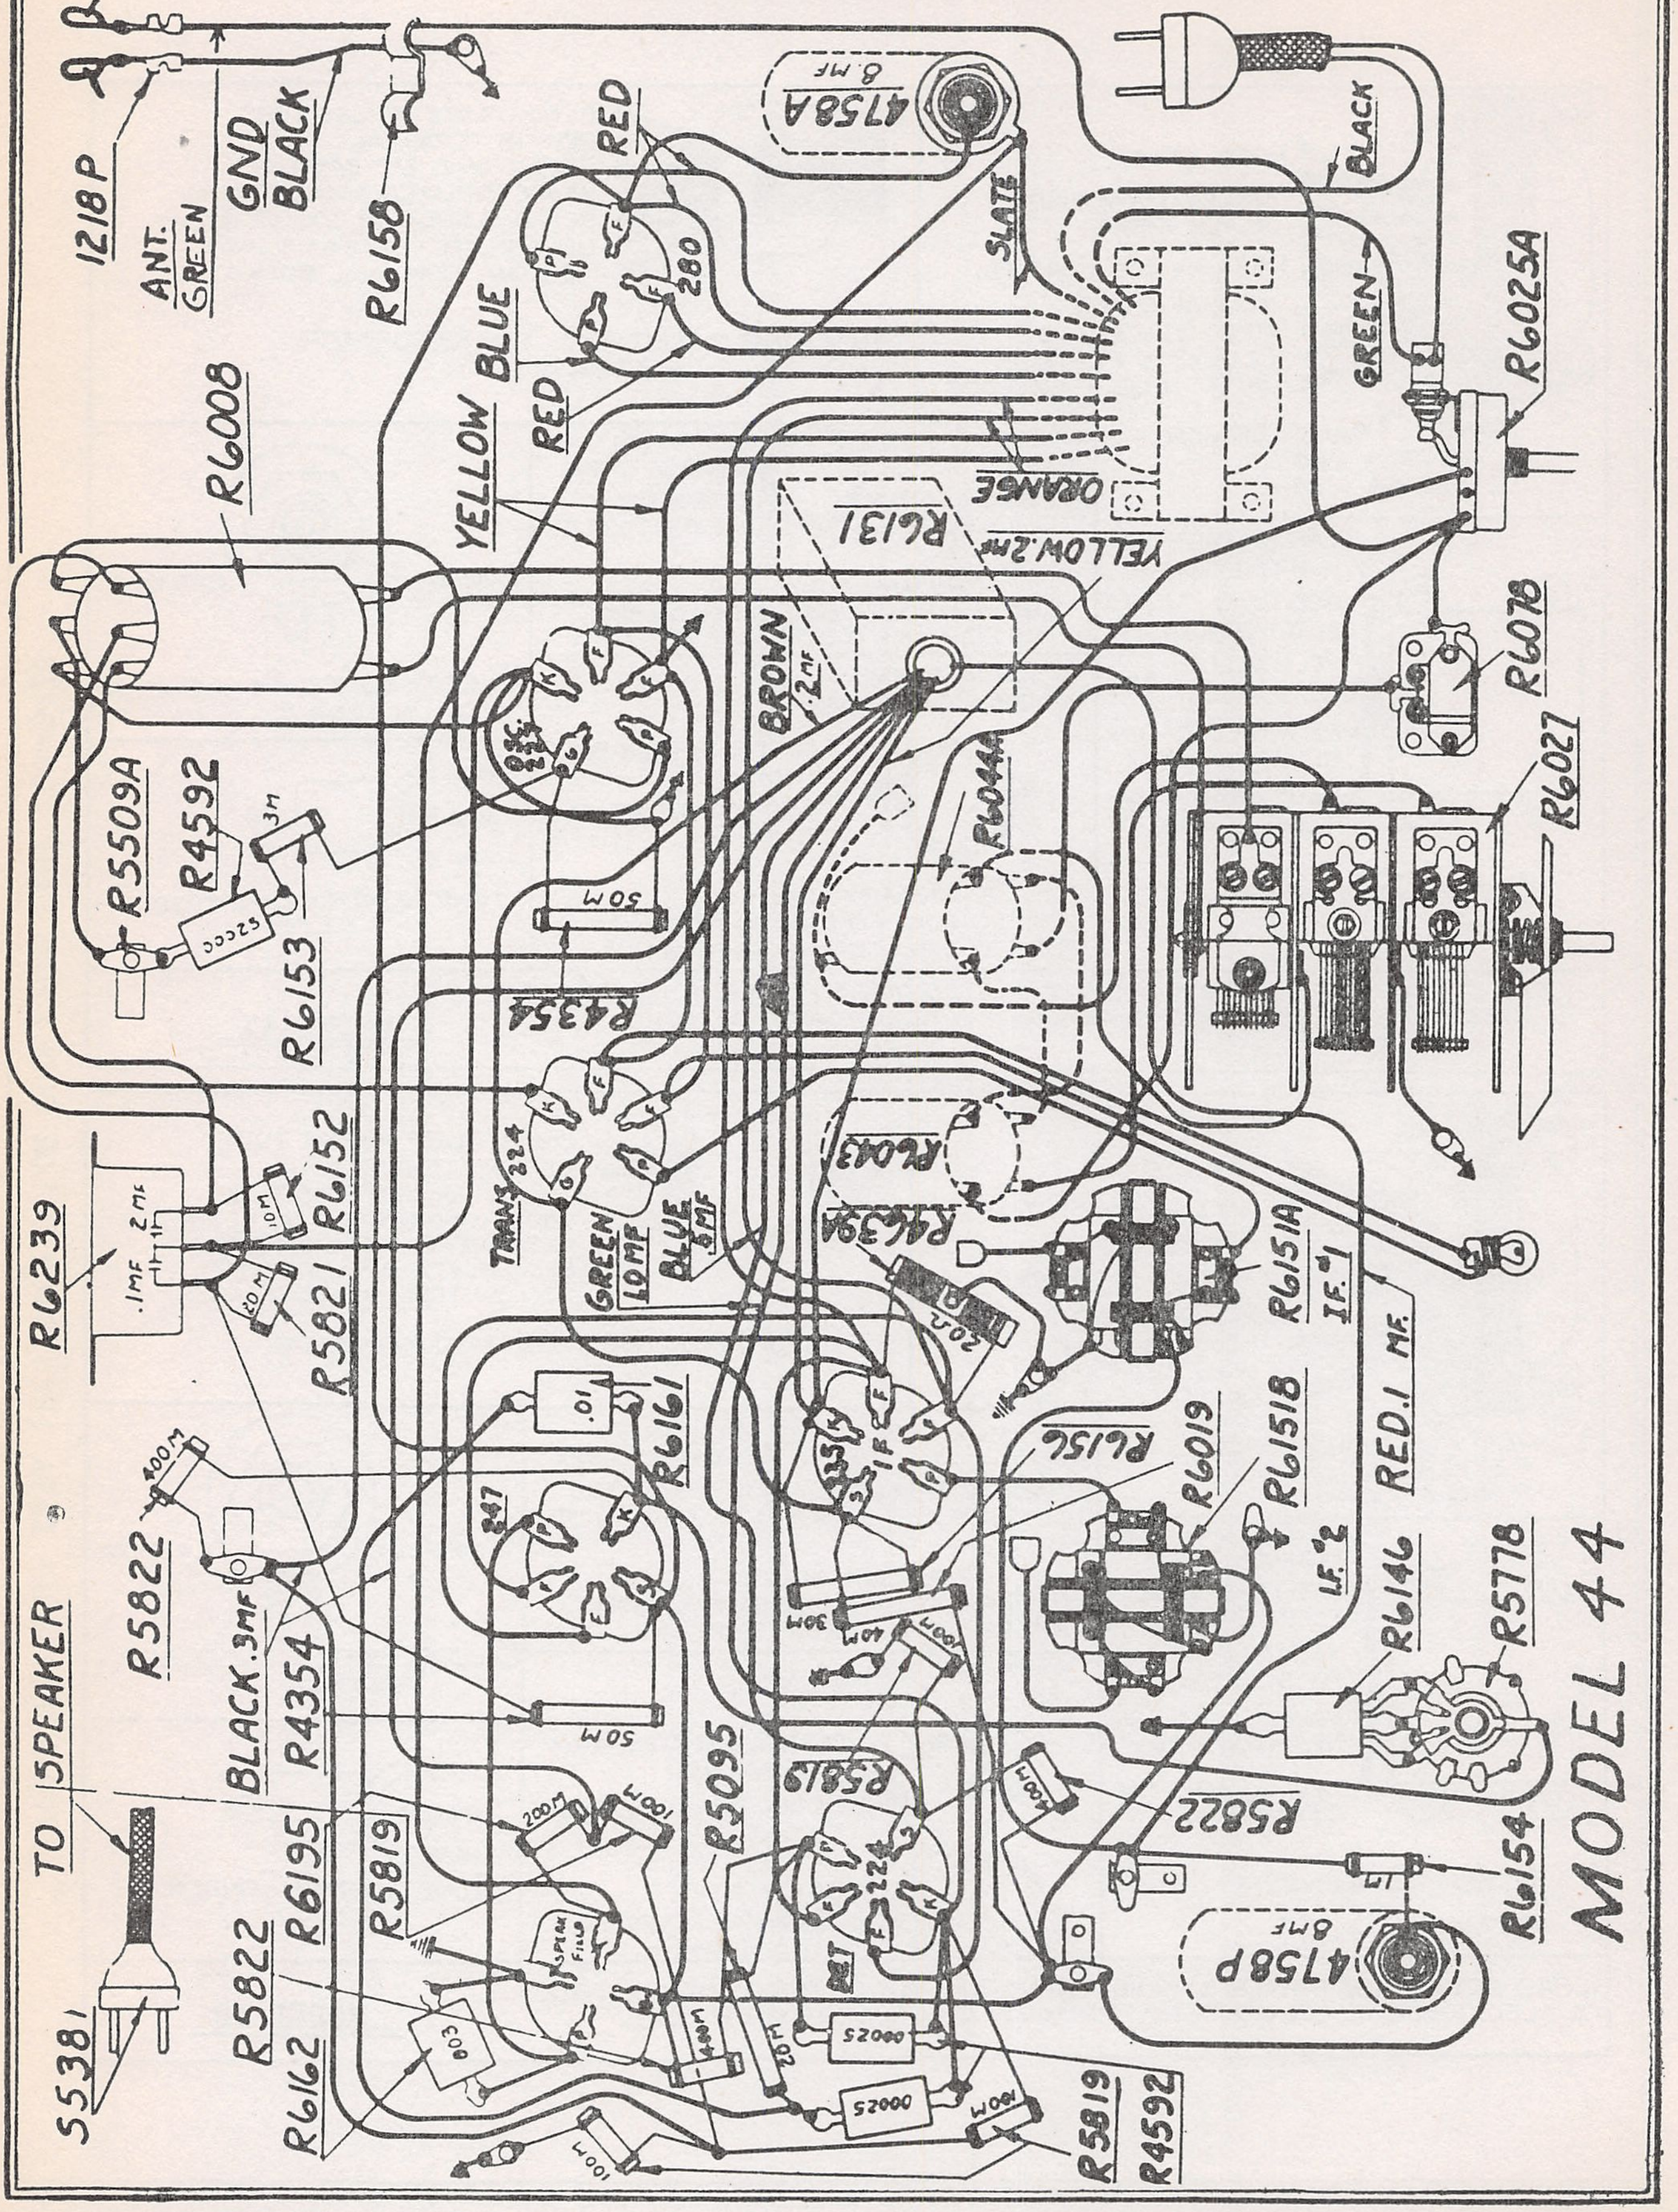
1218P
ANT. GREEN
GND BLACK
R6158
4158A 8.MF
BLACK
SLATE
RED
280
YELLOW
BLUE
RED
R6008
R6025A
GREEN
ORANGE
YELLOW.2MF
R6131
BROWN .2MF
OSC. 224
R5509A
R4592
3M
.00025
R6153
50M
R4354
R6044A
R6078
R6027
R6239
.1MF
2MF
10M
R6152
20M
R5821
224
TRANS
GREEN 1.0MF
BLUE .5MF
R6043
R4639A
20Ω
R6151A
I.F.#1
RED .1 MF
R6161
.01
247
235 1F
R6156
R6019
R6151B
I.F.#2
R5822
400M
BLACK .3MF
R4354
50M
30M
40M
100M
R6146
R5778
TO SPEAKER
R6195
200M
100M
R5095
R5819
224
DET
400M
R5822
R6154
4158P 8MF
MODEL 44
SPEAK FIELD
803
20M
.00025
.00025
100M
R5822
R6162
S5381
R5819
R4592
100M

MODEL 44 Super.
Schematic
Voltage

COLONIAL RADIO CORP.

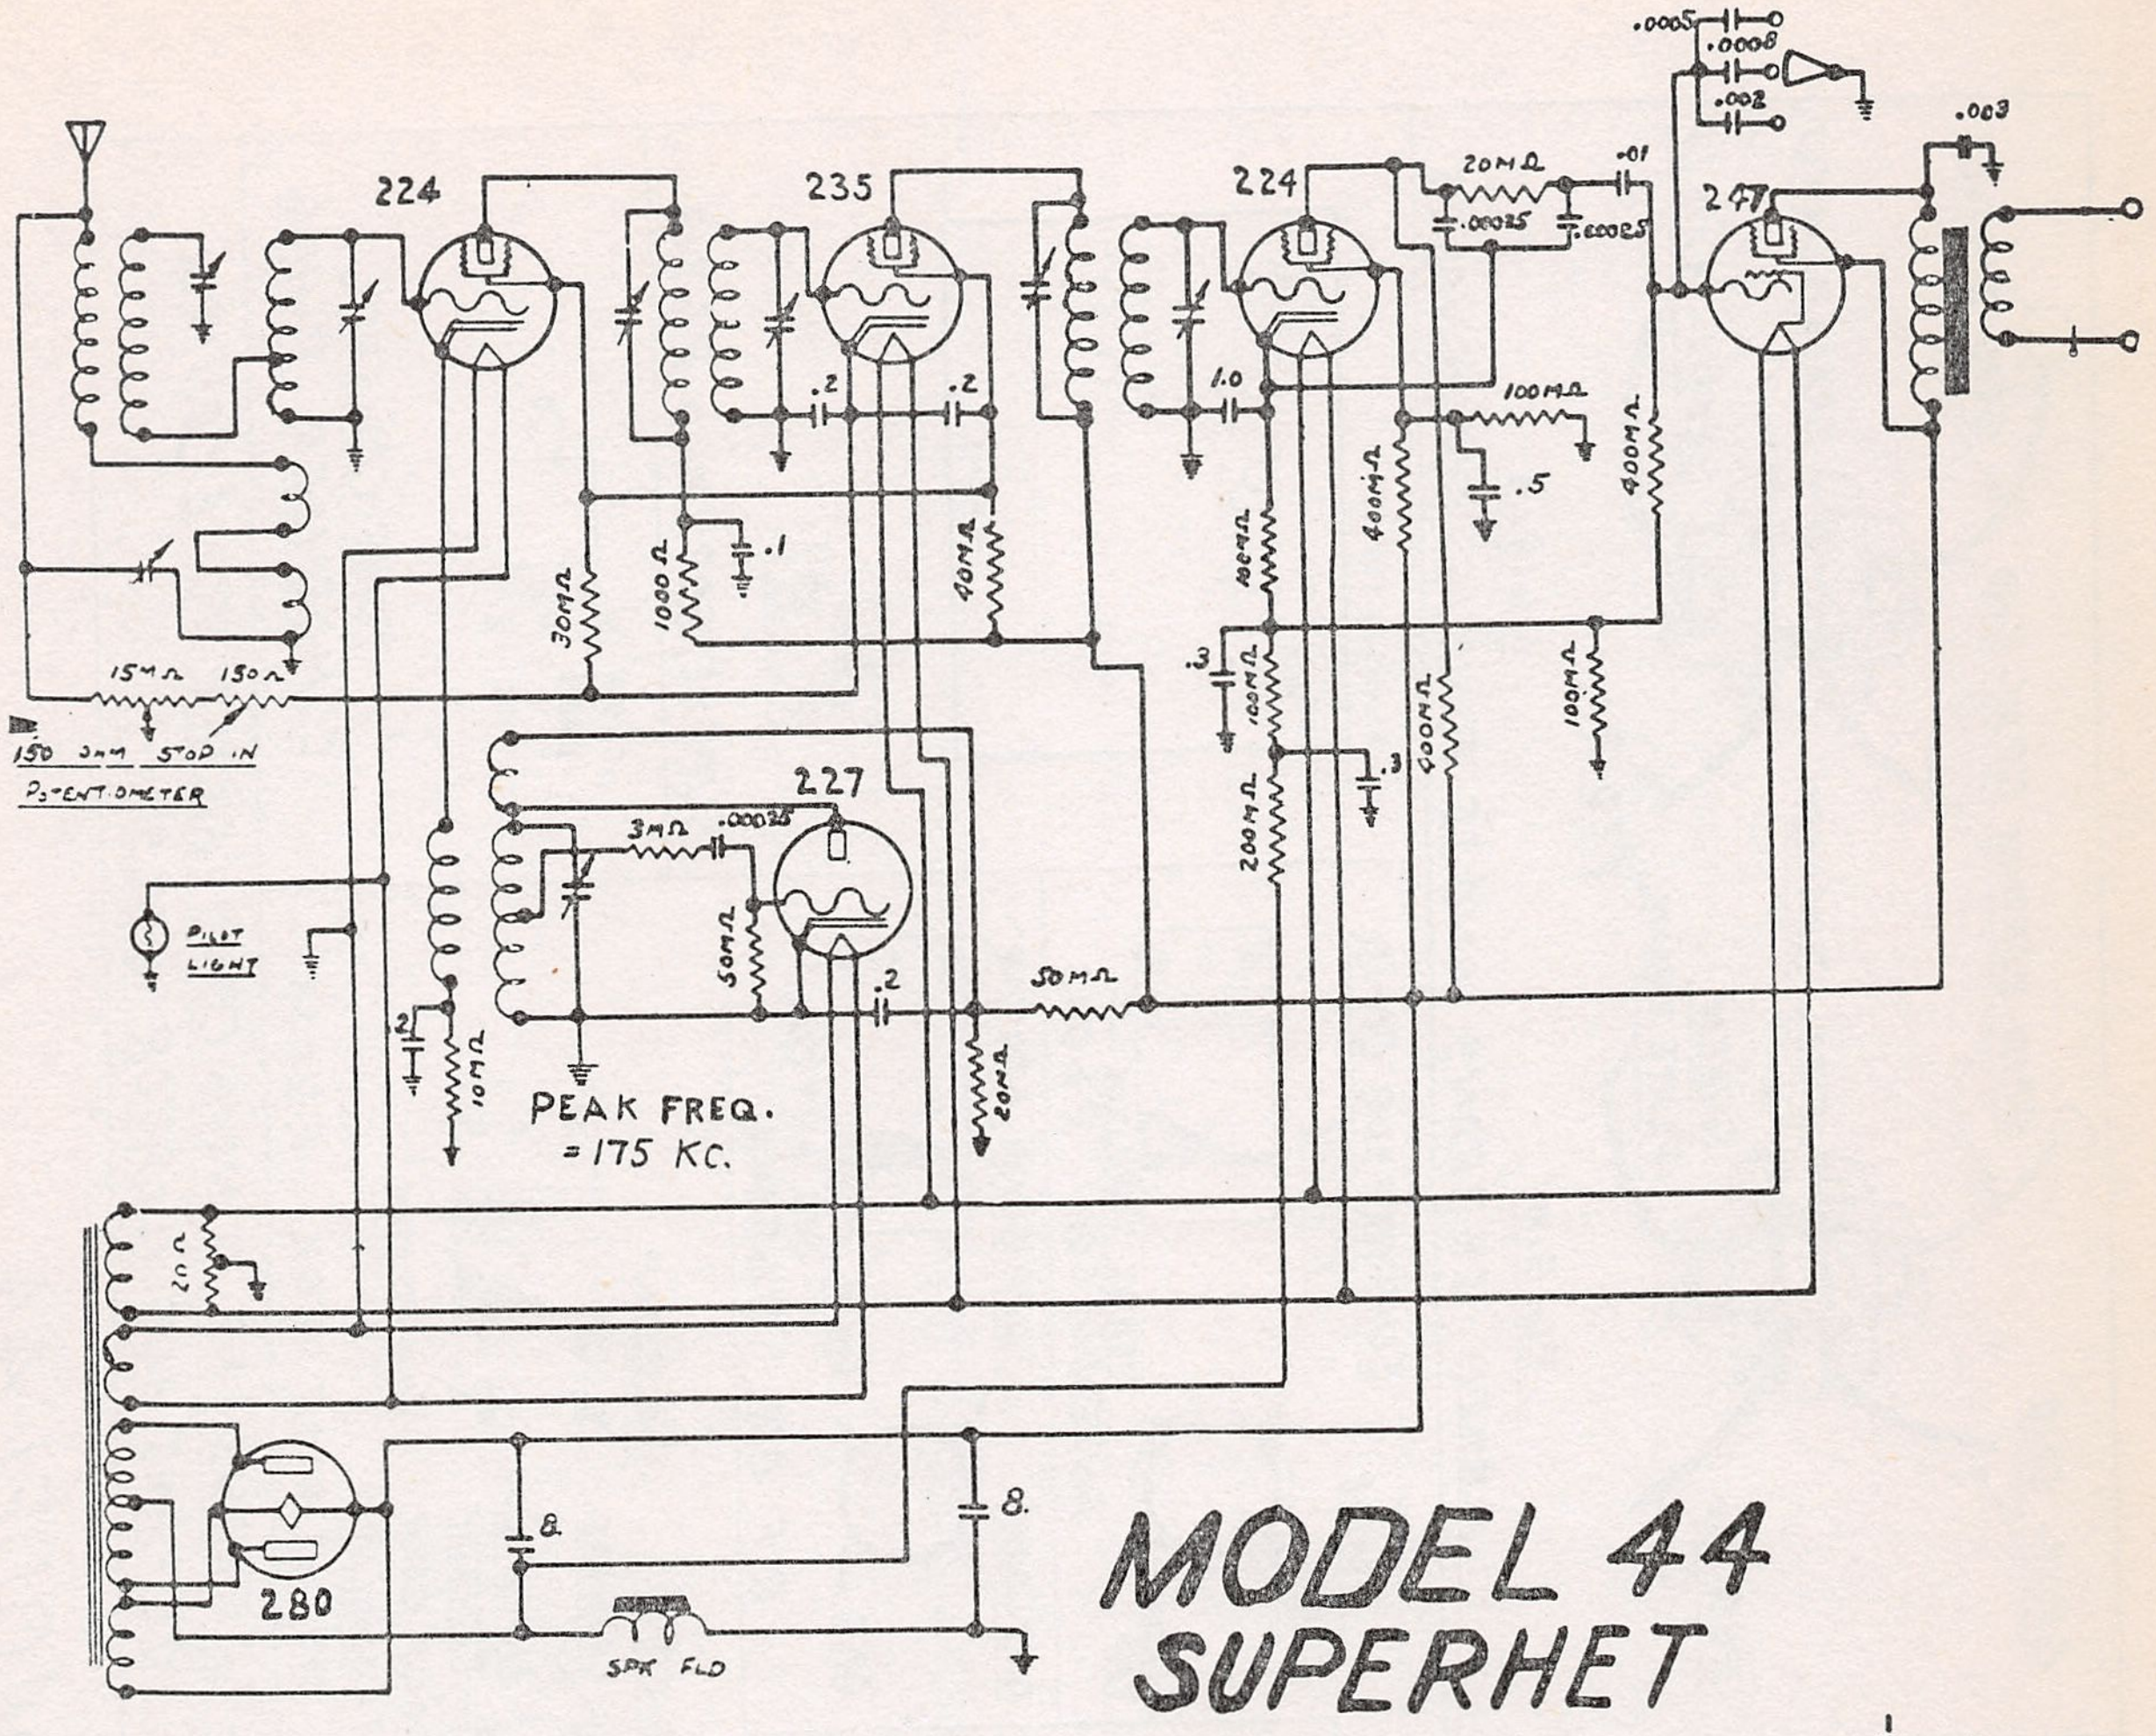
224
235
224
247
227
280
.0005
.0008
.002
.003
20MΩ
.01
.00025
.00025
.2
.2
1.0
100MΩ
.5
400MΩ
.1
30MΩ
1000Ω
40MΩ
100MΩ
400MΩ
.3
100MΩ
.3
200MΩ
400MΩ
100MΩ
15MΩ
150Ω
150 OHM STOP IN POTENTIOMETER
3MΩ
.00025
50MΩ
.2
50MΩ
20MΩ
10MΩ
.2
PILOT LIGHT
PEAK FREQ. =175 KC.
20Ω
8.
8.
SPK FLD

MODEL 44 SUPERHET

60 Cycle
Line Voltage - 115
Total Watts - 66

	Tran.	Osc.	I.F.	Det.	247	280AC	280DC
Plate Voltage DC	230	40	240	120	240	350	370
Screen Voltage DC	80		80	40	245		
Heater Voltage AC	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage DC	10		1.5-30	4	15		
Speaker Field Voltage	125 volts						
Total Plate Current	.050 amperes						

25 Cycle
Line Voltage- 115
Total Watts - 70

	Tran.	Osc.	I.F.	Det.	247	280AC	280DC
Plate Voltage DC	225	45	240	125	235	345	360
Screen Voltage DC	80		80	40	240		
Heater Voltage AC	2.5	2.5	2.35	2.35	2.35	4.75	
Control Grid Voltage DC	10		1.5-30	4	15		
Speaker Field Voltage	120 volts						
Total Plate Current	.050 amperes						

Note:, Control grid volts are measured from cathode to ground or cathode to heater. 247 grid voltage from grid to ground or filament.

The 25 cycle models of this receiver are identical in electrical characteristics to the 60 cycle models.

Note-The term Tran. (translator) refers to what is commonly called the first detector. IF transformer aligning screws are accessible through two holes in the base under each IF transformer. A variation voltage of about 20 percent can be allowed for in the voltage chart.

COLONIAL RADIO CORP

MODEL 44 Super
Parts Coding

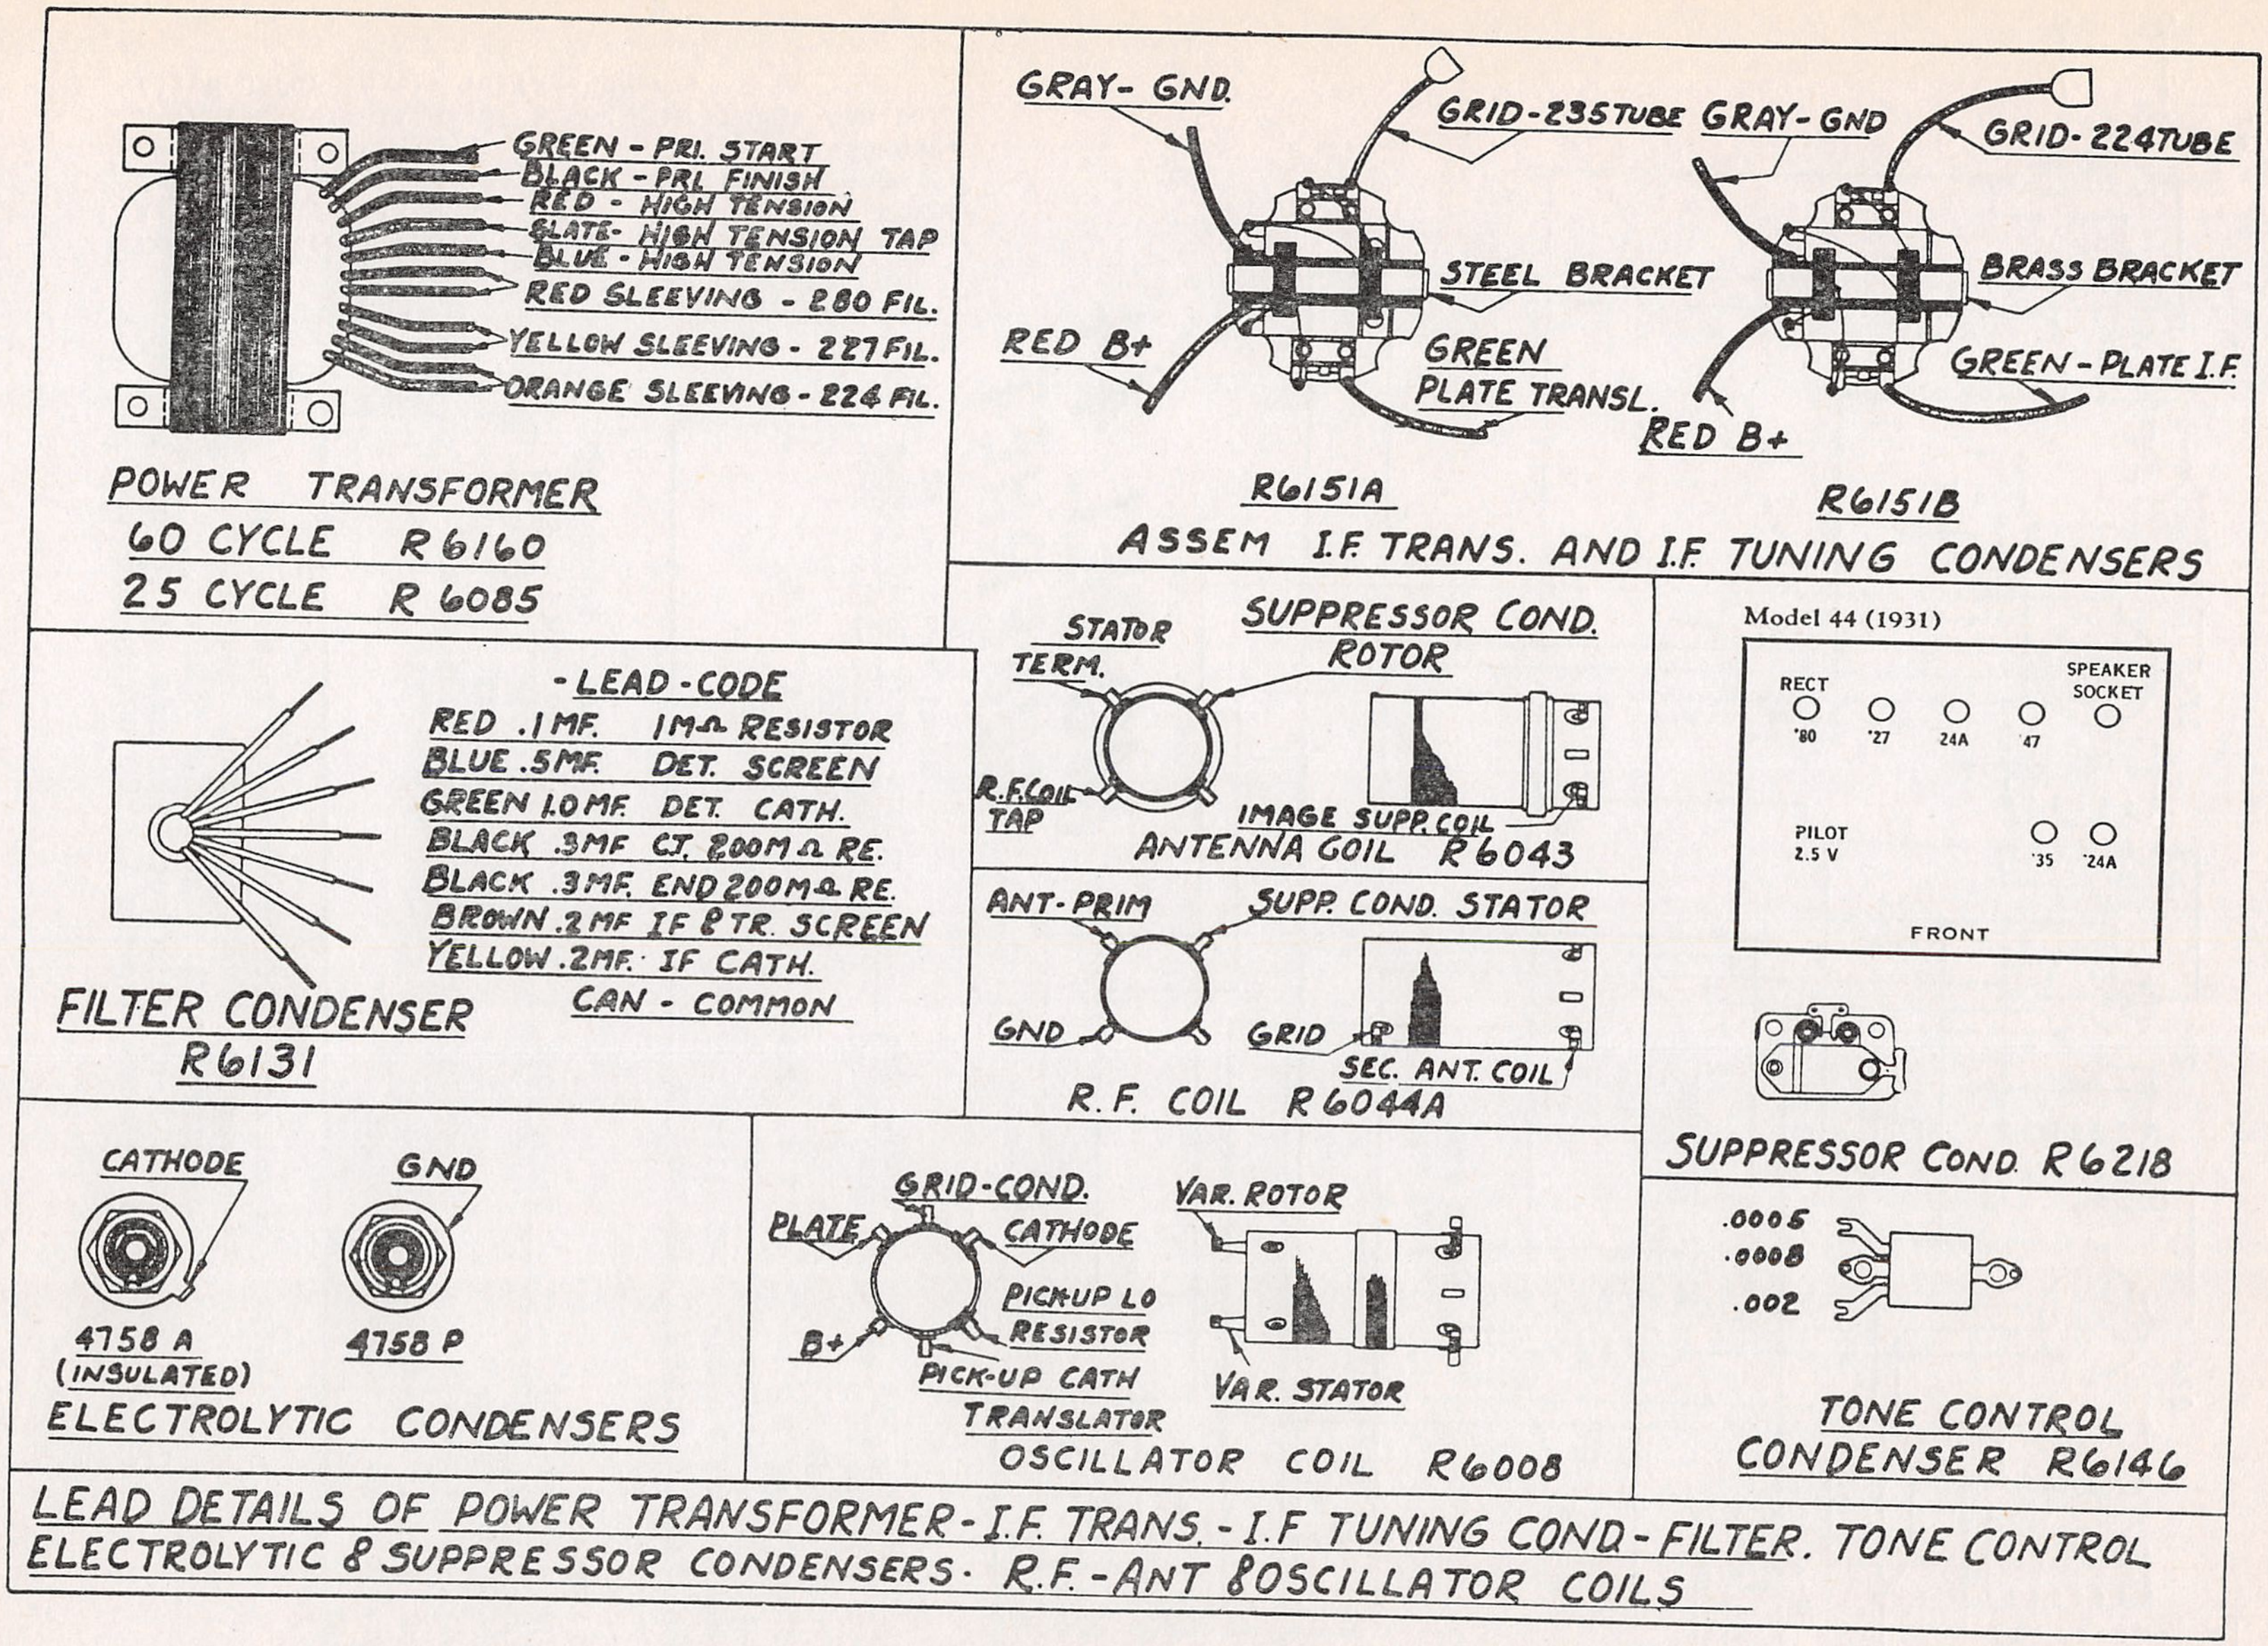
GREEN - PRI. START
BLACK - PRI. FINISH
RED - HIGH TENSION
SLATE - HIGH TENSION TAP
BLUE - HIGH TENSION
RED SLEEVING - 280 FIL.
YELLOW SLEEVING - 227 FIL.
ORANGE SLEEVING - 224 FIL.
POWER TRANSFORMER
60 CYCLE R6160
25 CYCLE R 6085
GRAY- GND.
GRID-235TUBE
RED B+
STEEL BRACKET
GREEN
PLATE TRANSL.
GRAY- GND
GRID-224TUBE
BRASS BRACKET
GREEN - PLATE I.F.
RED B+
R6151A
R6151B
ASSEM I.F. TRANS. AND I.F. TUNING CONDENSERS
-LEAD-CODE
RED .1MF. 1MΩ RESISTOR
BLUE .5MF. DET. SCREEN
GREEN 1.0MF. DET. CATH.
BLACK .3MF CT. 200MΩ RE.
BLACK .3MF. END 200MΩ RE.
BROWN .2MF IF & TR. SCREEN
YELLOW .2MF. IF CATH.
CAN - COMMON
FILTER CONDENSER
R6131
STATOR
TERM.
SUPPRESSOR COND.
ROTOR
R.F. COIL
TAP
IMAGE SUPP. COIL
ANTENNA COIL R6043
ANT-PRIM
SUPP. COND. STATOR
GND
GRID
SEC. ANT. COIL
R.F. COIL R6044A
Model 44 (1931)
RECT
'80
'27
24A
47
SPEAKER
SOCKET
PILOT
2.5 V
'35
'24A
FRONT
SUPPRESSOR COND. R6218
CATHODE
GND
4758 A
(INSULATED)
4758 P
ELECTROLYTIC CONDENSERS
GRID-COND.
PLATE
CATHODE
PICK-UP LO
RESISTOR
B+
PICK-UP CATH
TRANSLATOR
VAR. ROTOR
VAR. STATOR
OSCILLATOR COIL R6008
.0005
.0008
.002
TONE CONTROL
CONDENSER R6146

LEAD DETAILS OF POWER TRANSFORMER - I.F. TRANS. - I.F. TUNING COND. - FILTER. TONE CONTROL ELECTROLYTIC & SUPPRESSOR CONDENSERS. R.F. - ANT & OSCILLATOR COILS

MODEL-44

MODEL 46 Midget
Chassis
Parts Coding

COLONIAL RADIO CORP.

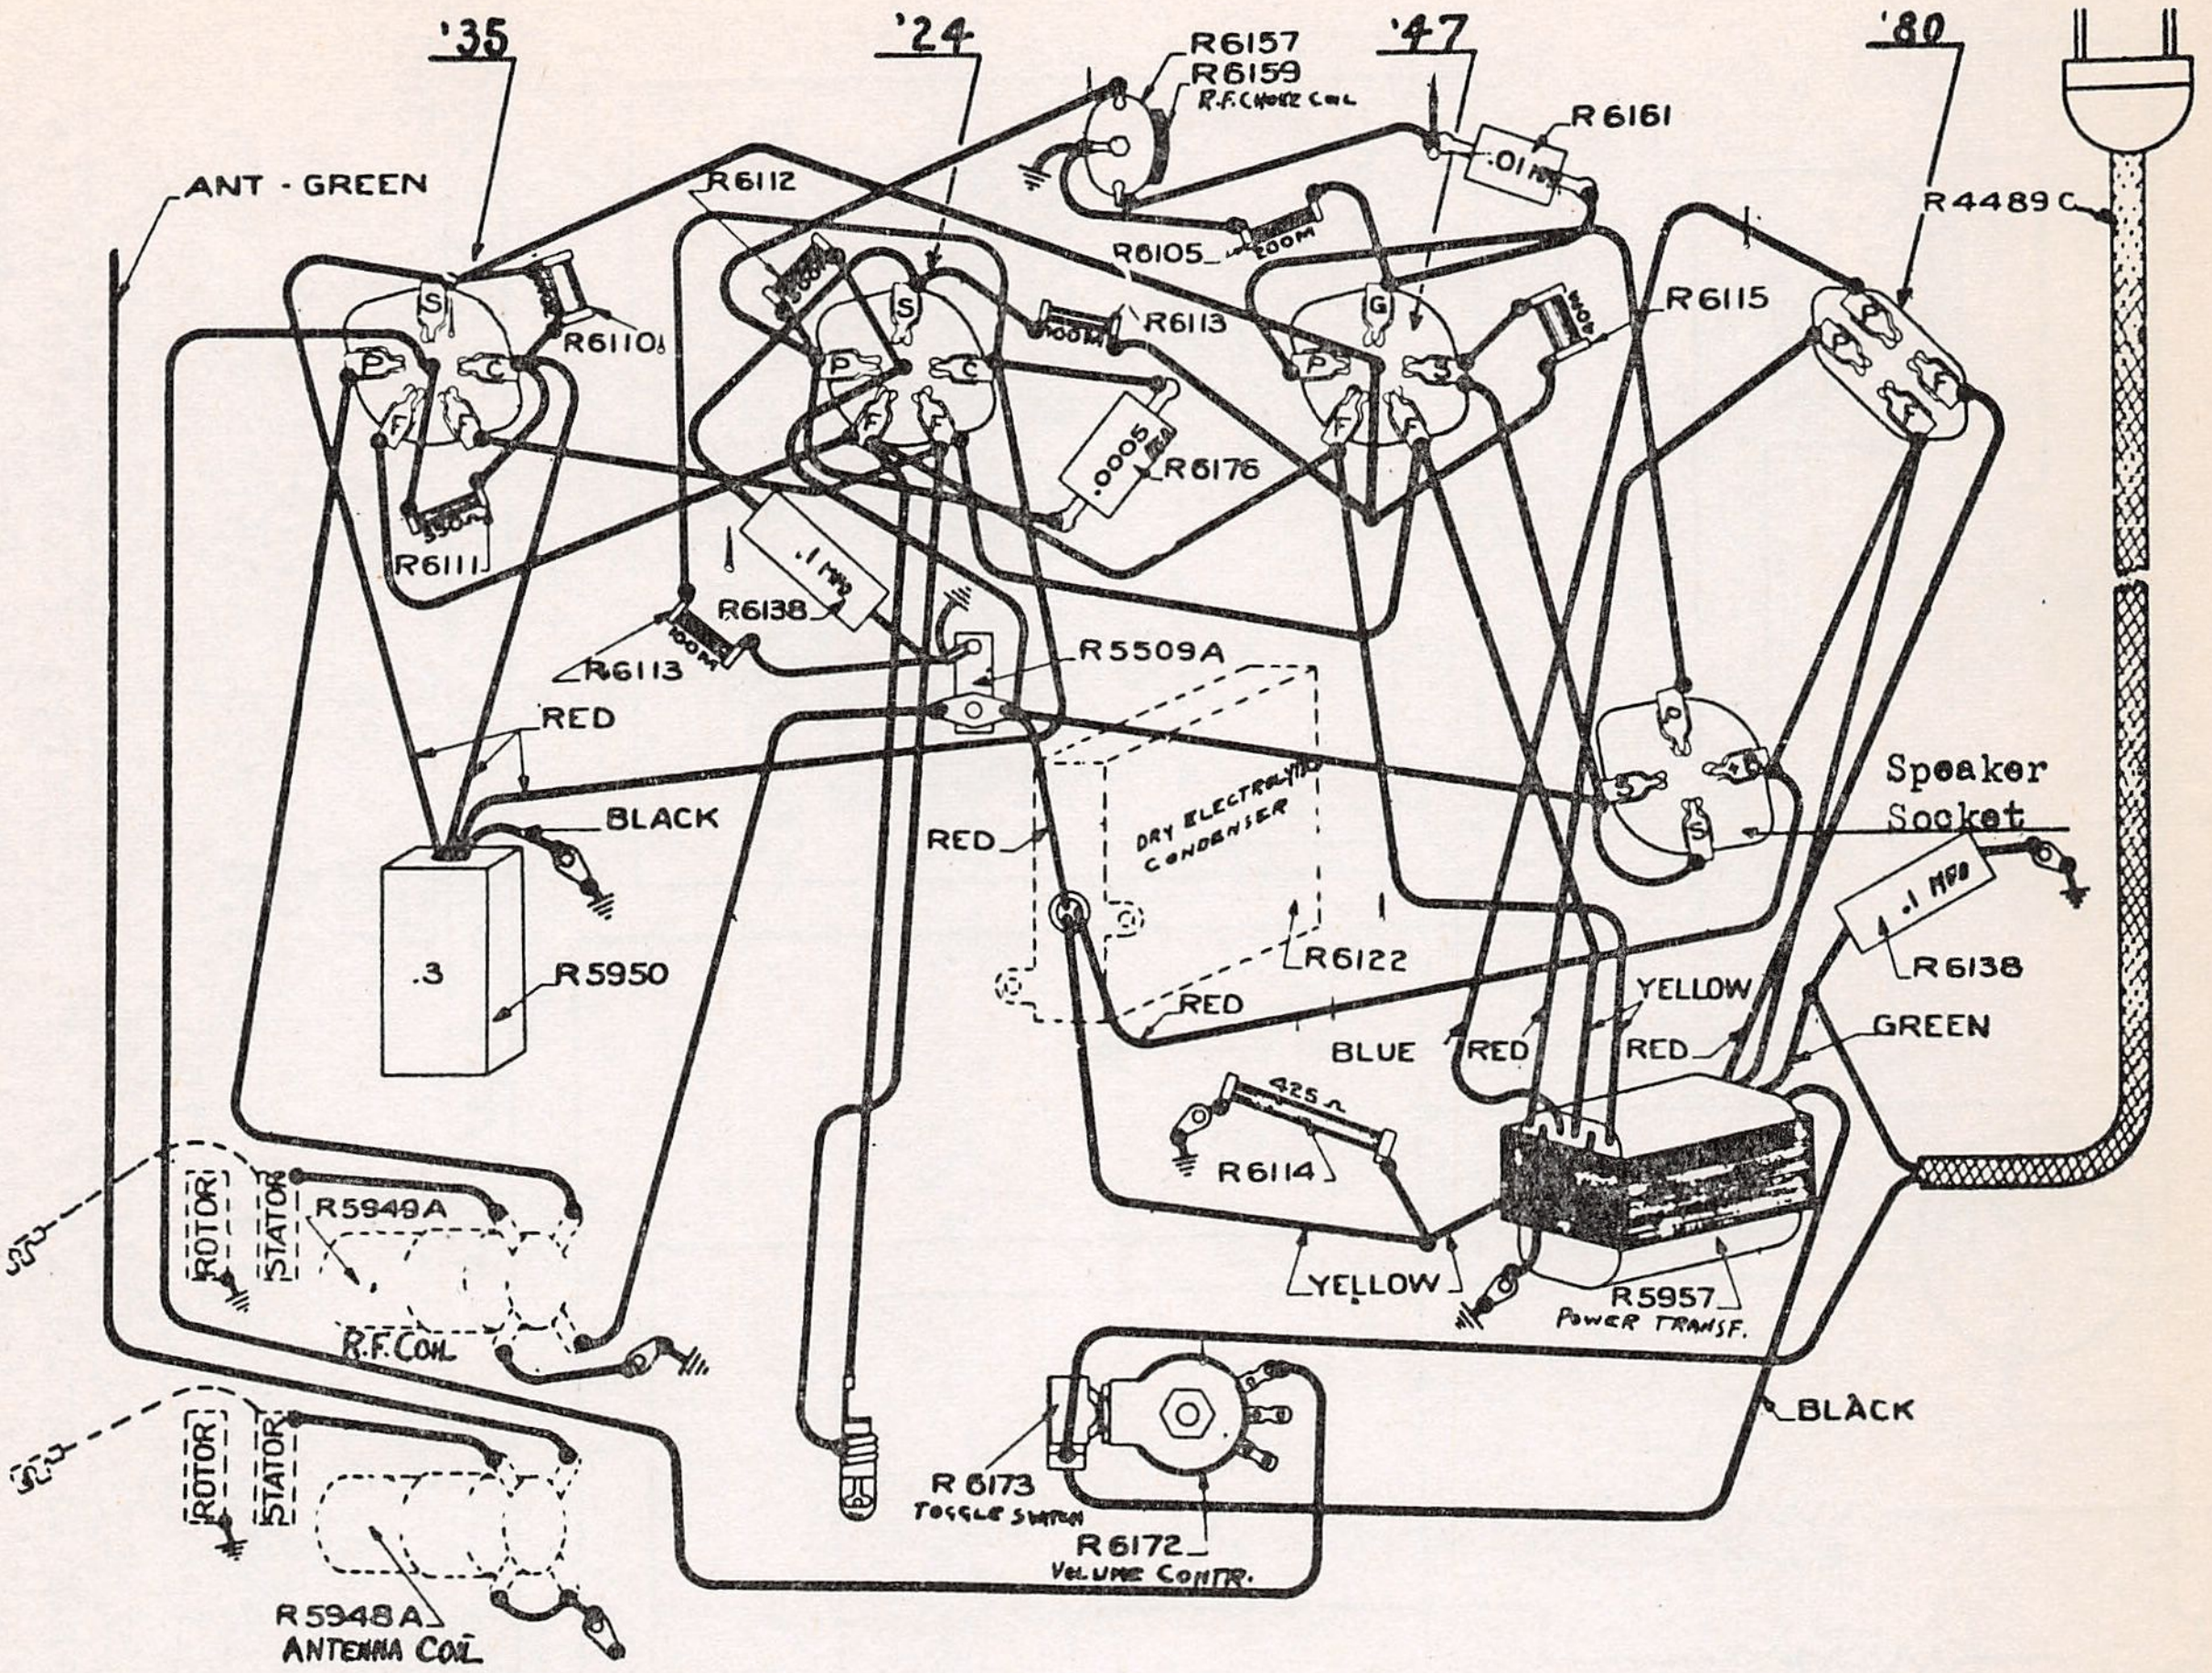
'35
'24
R6157
R6159
R.F. CHOKE COIL
'47
R6161
.01 MF
'80
R4489C
ANT - GREEN
R6112
R6110
S
P
C
F
G
100M
R6105
R6113
R6115
.0005
R6176
R6111
.1 MFD
R6138
R6113
R5509A
RED
BLACK
DRY ELECTROLYTIC CONDENSER
Speaker Socket
.1 MFD
R6138
.3
R5950
RED
R6122
RED
BLUE
RED
YELLOW
RED
GREEN
425 Ω
R6114
YELLOW
R5957
POWER TRANSF.
BLACK
ROTOR
STATOR
R5949A
R.F. COIL
ROTOR
STATOR
R5948A
ANTENNA COIL
R6173
TOGGLE SWITCH
R6172
VOLUME CONTR.

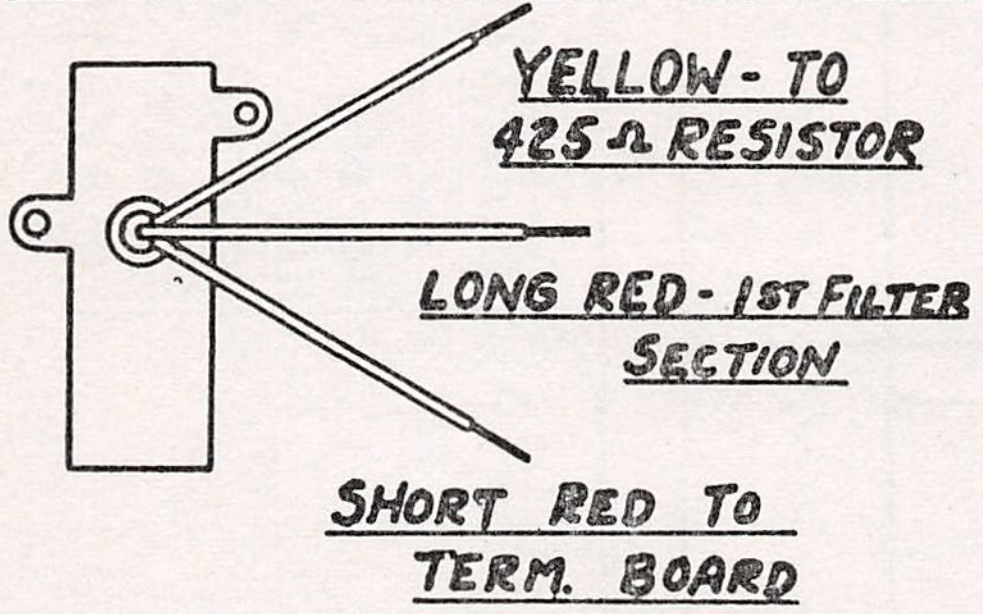
YELLOW - TO 425 Ω RESISTOR
LONG RED - 1ST FILTER SECTION
SHORT RED TO TERM. BOARD

DRY ELECTROLYTIC COND
R6122

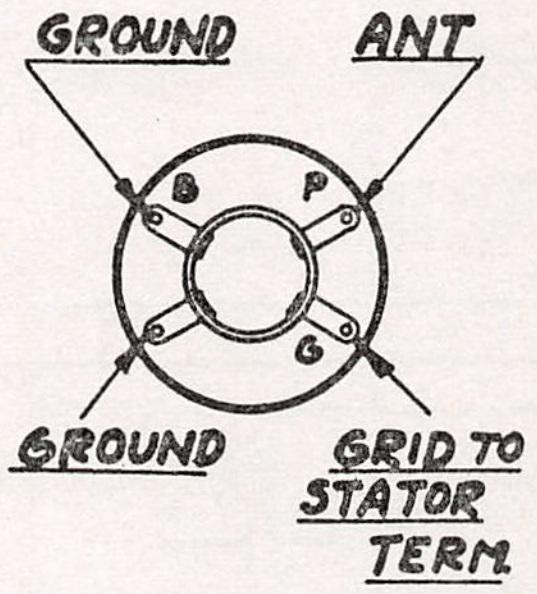
GROUND
ANT
B
P
G
GROUND
GRID TO STATOR TERM

ANT COIL R5948A

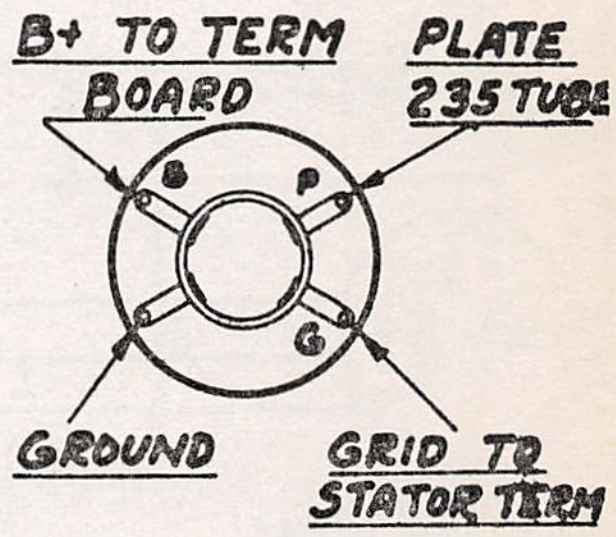
B+ TO TERM BOARD
PLATE 235 TUBE
B
P
G
GROUND
GRID TO STATOR TERM

R.F. COIL R 5949A

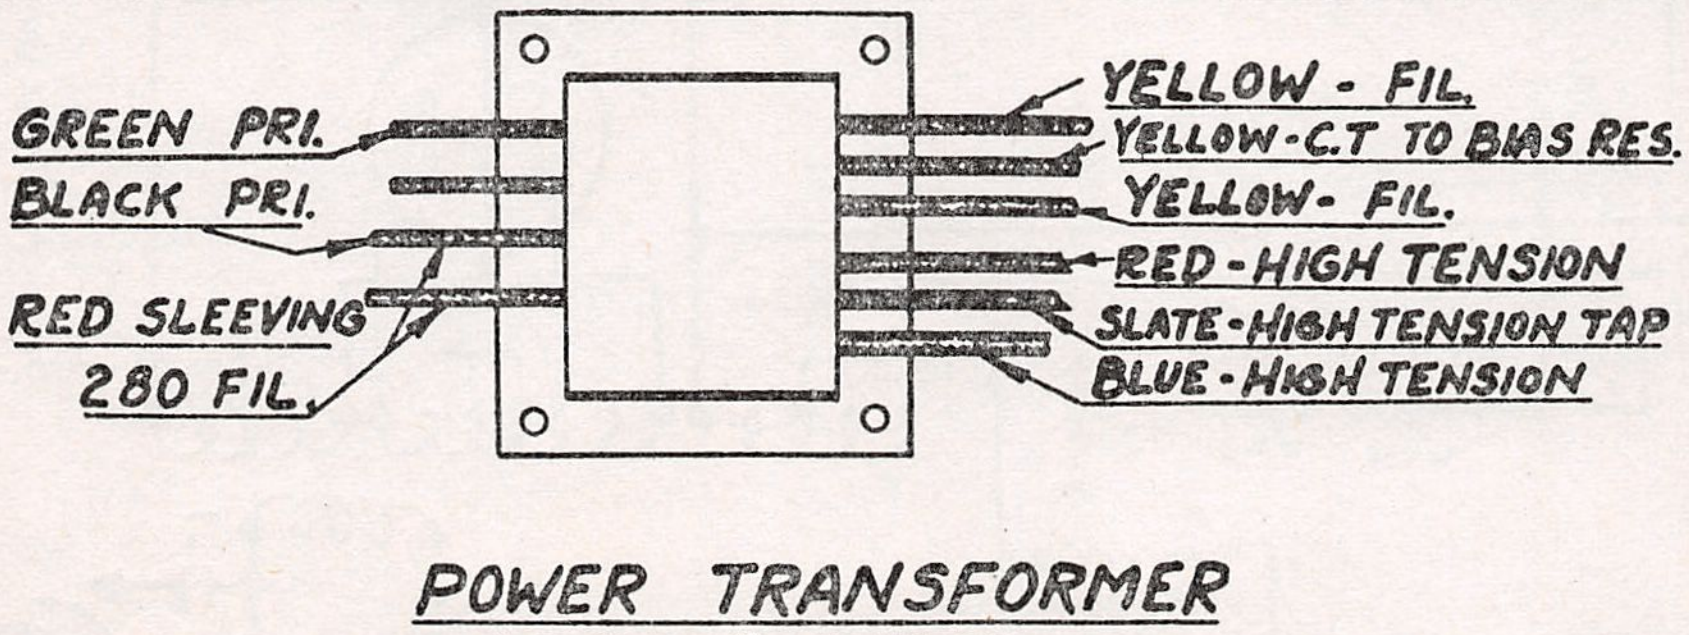
GREEN PRI.
BLACK PRI.
RED SLEEVING
280 FIL.
YELLOW - FIL.
YELLOW-C.T TO BIAS RES.
YELLOW- FIL.
RED-HIGH TENSION
SLATE-HIGH TENSION TAP
BLUE-HIGH TENSION

POWER TRANSFORMER
60 CYCLE R5957

Model 46 (1931)

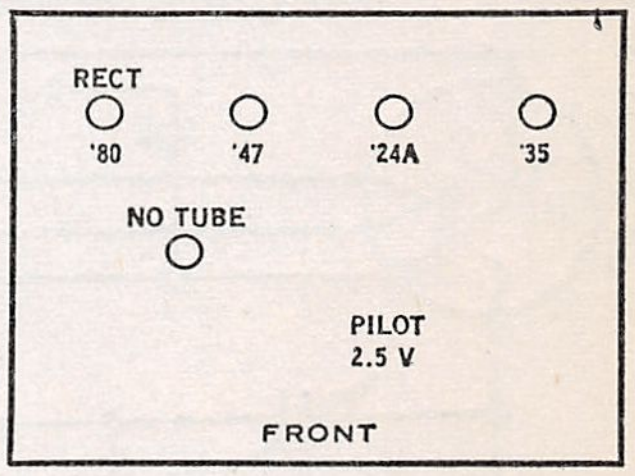
RECT
'80
'47
'24A
'35
NO TUBE
PILOT
2.5 V
FRONT

MODEL 46 Midget
Schematic
Voltage

COLONIAL RADIO CORP.

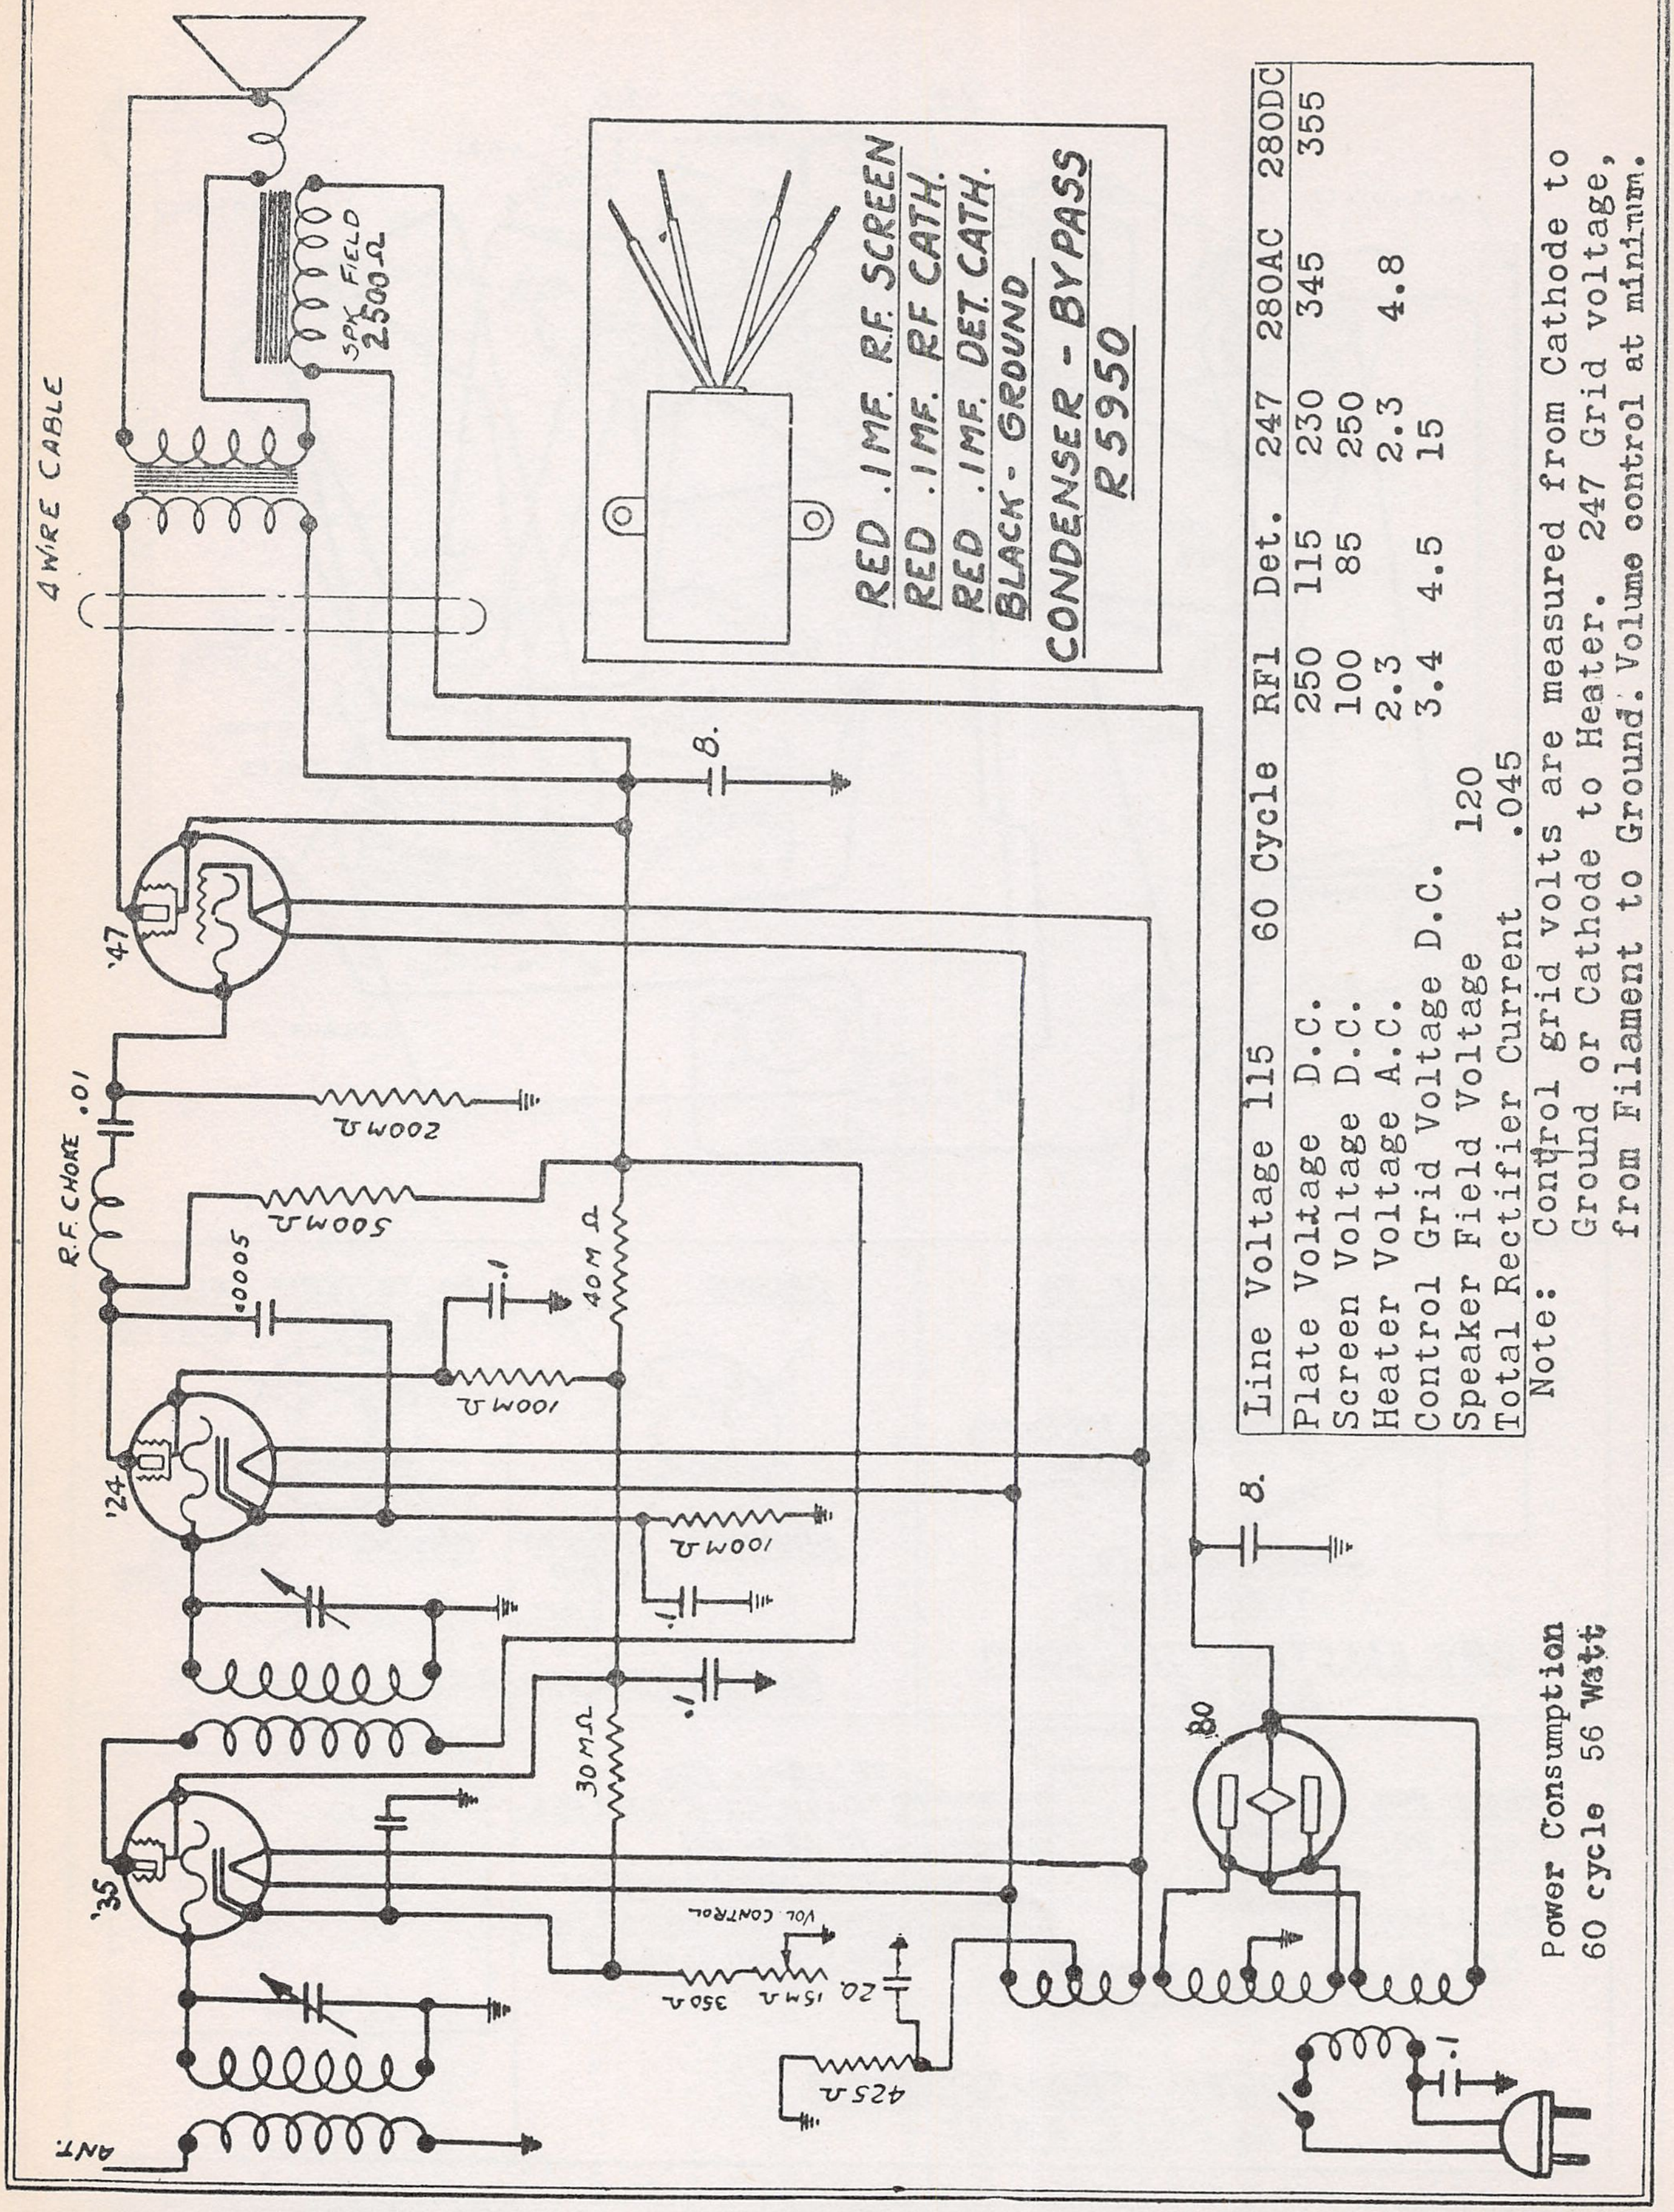
4 WIRE CABLE
SPK. FIELD 2500 Ω
RED .1 MF. R.F. SCREEN
RED .1 MF. RF CATH.
RED .1 MF. DET. CATH.
BLACK - GROUND
CONDENSER - BY PASS
R5950
8.
'47
.01
200 M Ω
R.F. CHOKE
500 M Ω
.0005
.1
40 M Ω
100 M Ω
'24
100 M Ω
.1
.1
8.
'80
30 M Ω
'35
VOL CONTROL
350 Ω
15 M Ω
20.
425 Ω
.1
ANT.

Line Voltage 115	60 Cycle	RF1	Det.	247	280AC	280DC
Plate Voltage D.C.		250	115	230	345	355
Screen Voltage D.C.		100	85	250		
Heater Voltage A.C.		2.3		2.3	4.8	
Control Grid Voltage D.C.		3.4	4.5	15		
Speaker Field Voltage	120					
Total Rectifier Current	.045					

Note: Control grid volts are measured from Cathode to Ground or Cathode to Heater. 247 Grid voltage, from Filament to Ground. Volume control at minimum.

Power Consumption
60 cycle 56 Watt

MODEL 47
Chassis

COLONIAL RADIO CORP.

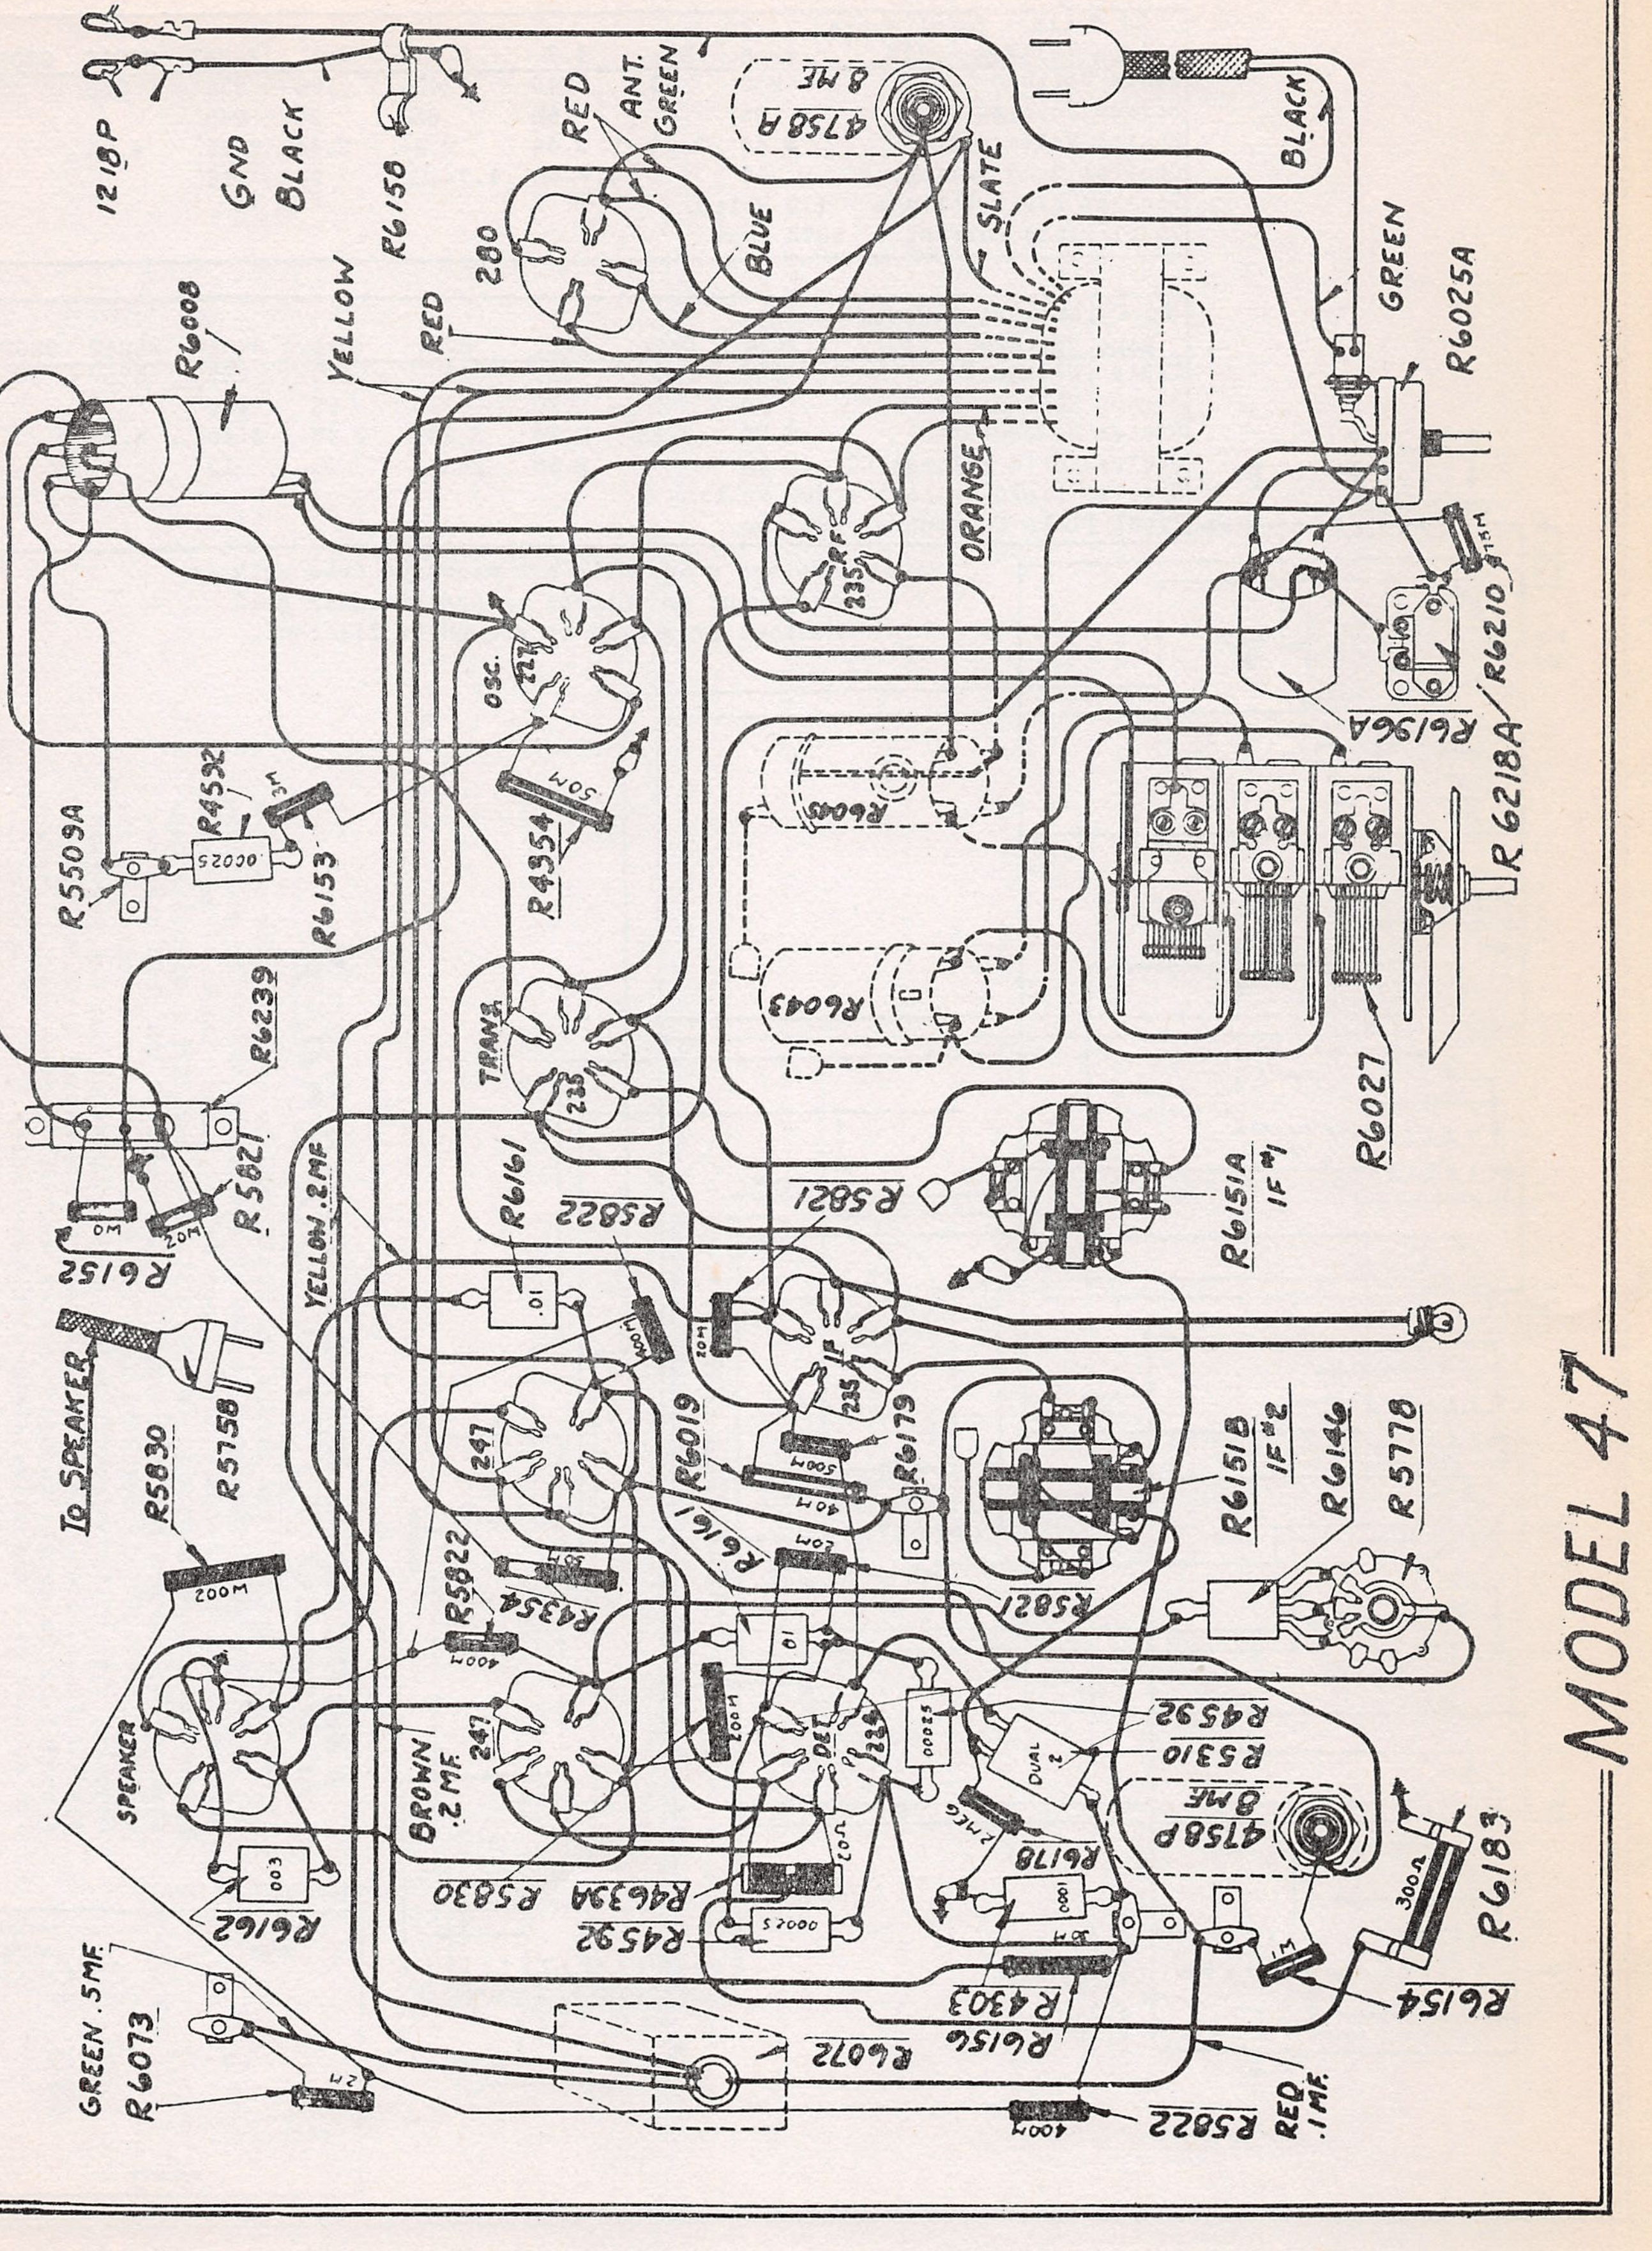
1218P
GND
BLACK
R6158
RED
ANT.
GREEN
4158A
8MF
200
BLUE
SLATE
YELLOW
RED
BLACK
GREEN
R6025A
R6008
ORANGE
RF
235
OSC.
227
50M
R4354
R4532
3M
.00025
R5509A
R6153
R6239
R6045
R6043
R6027
R6218A
R6196A
R6210
TRANS.
235
R5821
10M
20M
R6152
R6161
R5822
R5821
R6151A
IF #1
YELLOW .2MF
.01
400M
20M
IF
235
R6019
500M
40M
R6179
R6151B
IF #2
R6146
R5778
247
R6161
R5821
10M
To SPEAKER
R5830
R5758
200M
R5822
R4354
400M
.01
SPEAKER
247
BROWN .2MF
200M
DET
227
.00025
DUAL .1
R4592
R5310
2MEG
R6178
.0001
4158P
8MF
R6183
300Ω
.003
R6162
R5830
R4633A
R4592
.00025
R4303
R6156
R6154
GREEN .5MF
R6073
2M
R6072
R5822
400M
RED .1MF
MODEL 47

MODEL 47,48 Super
Schematic
Voltage

COLONIAL RADIO CORP.

60 Cycle Total Watts - 80								
Line Voltage - 115	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC
Plate Voltage DC	230	40	240	240	160	235	240	350
Screen Voltage DC	65		65	65	20	240		
Heater Voltage AC	2.44	2.44	2.44	2.44	2.44	2.45	4.85	
Control Grid Voltage DC	10		1.7-40	1.7-40	20	16		
Speaker Field Voltage	110 Volts.							
Total Plate Current	1075 amp.							

25 Cycle Total Watts - 85								
Line Voltage - 115	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC
Plate Voltage DC	220	40	230	230	160	225	325	340
Screen Voltage DC	70		70	70	25	230		
Heater Voltage AC	2.25	2.25	2.25	2.25	2.45	2.45	4.7	
Control Grid Voltage DC	10		2-38	2-38	20	15		
Speaker Field Voltage - 100 Volts								
Total Plate Current - .075 amp.								

Note: Control grid volts are measured from cathode to ground or cathode to heater. 247 grid voltage from grid to ground or filament.

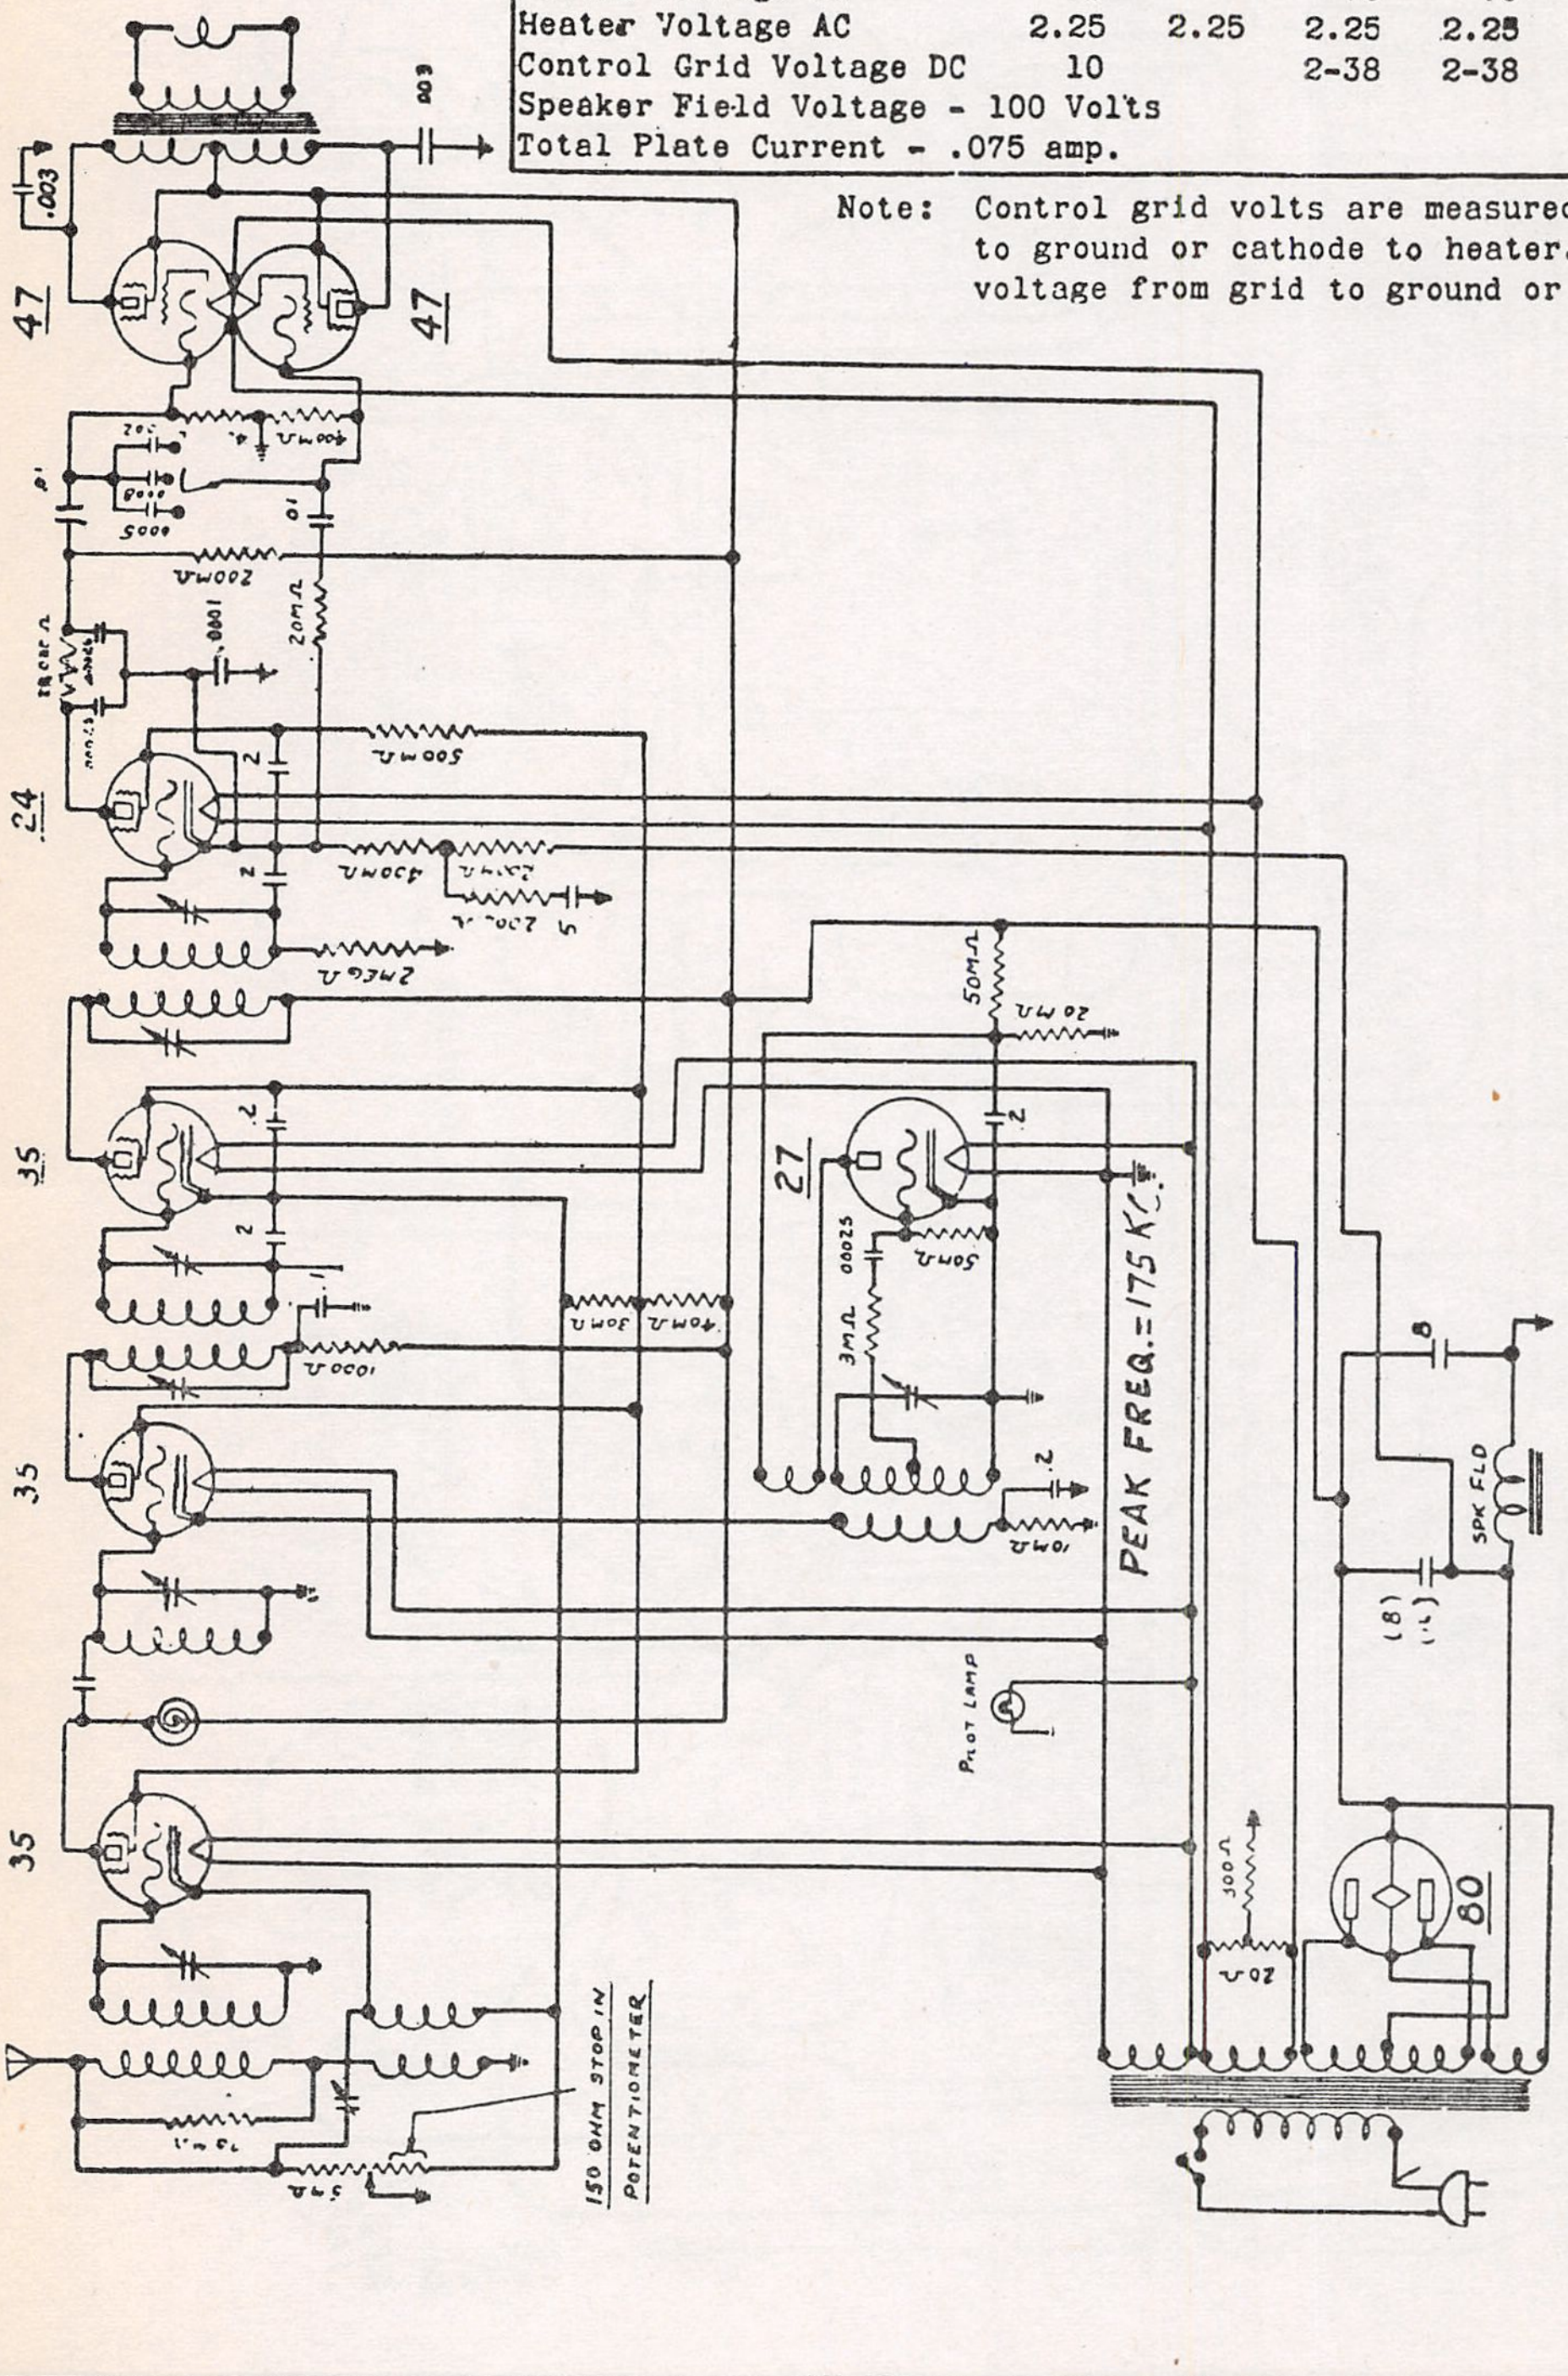

47
47
.003
003
.02
.1
.01
5000
400mΩ
200mΩ
.0001
20mΩ
24
500mΩ
400mΩ
2megΩ
35
27
50mΩ
20mΩ
.00025
3mΩ
50mΩ
PEAK FREQ.=175 KC.
50mΩ
40mΩ
1000Ω
35
10mΩ
.2
8
SPK FLD
(8)
PILOT LAMP
35
300Ω
20Ω
80
5mΩ
150 OHM STOP IN POTENTIOMETER

MODELS 47-48 SUPERHET.

NOTE-In this set the hum across the field coil is used to buck out hum set up in the tube circuits. Causes of hum can be traced to defective detector or output tubes. (interchange output tubes) Shorted condenser or open resistors in hum filter circuit. The hum filter circuits consists of a 2000 ohm resistor and a 0.5 condenser in the grid bias resistor circuit. This connects from the cathode of the detector to the negative side of the speaker field. Other causes of hum are Reversed speaker field, open or shorted condensers in detector circuit, open or grounded 20 ohm center tapped resistor, defective tone control, defective speaker or a defective electrolytic condenser.

Models 47, 48 (1931)

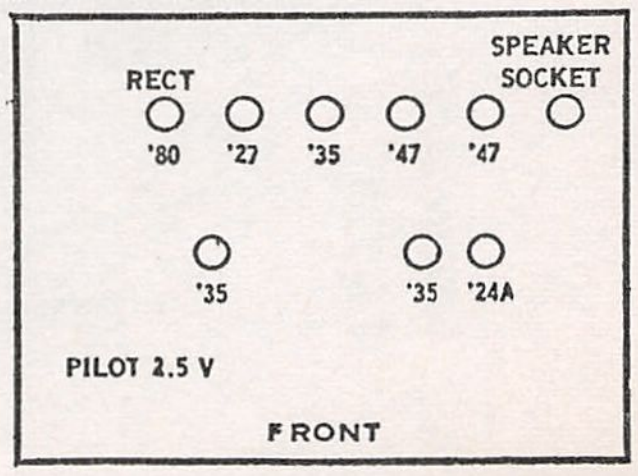

RECT
SPEAKER SOCKET
'80
'27
'35
'47
'47
'35
'35
'24A
PILOT 2.5 V
FRONT

COLONIAL RADIO CORP.

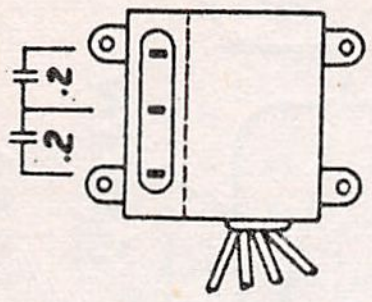

-LEAD CODE-

RED .1MF. 1MΩ RESISTOR I.F.
BROWN .2MF. SCREEN I.F.
YELLOW .2MF CATHODE I.F.
GREEN .5-2MΩ RESISTOR
CAN - COMMON

FILTER CONDENSER
R6081

MODEL 48

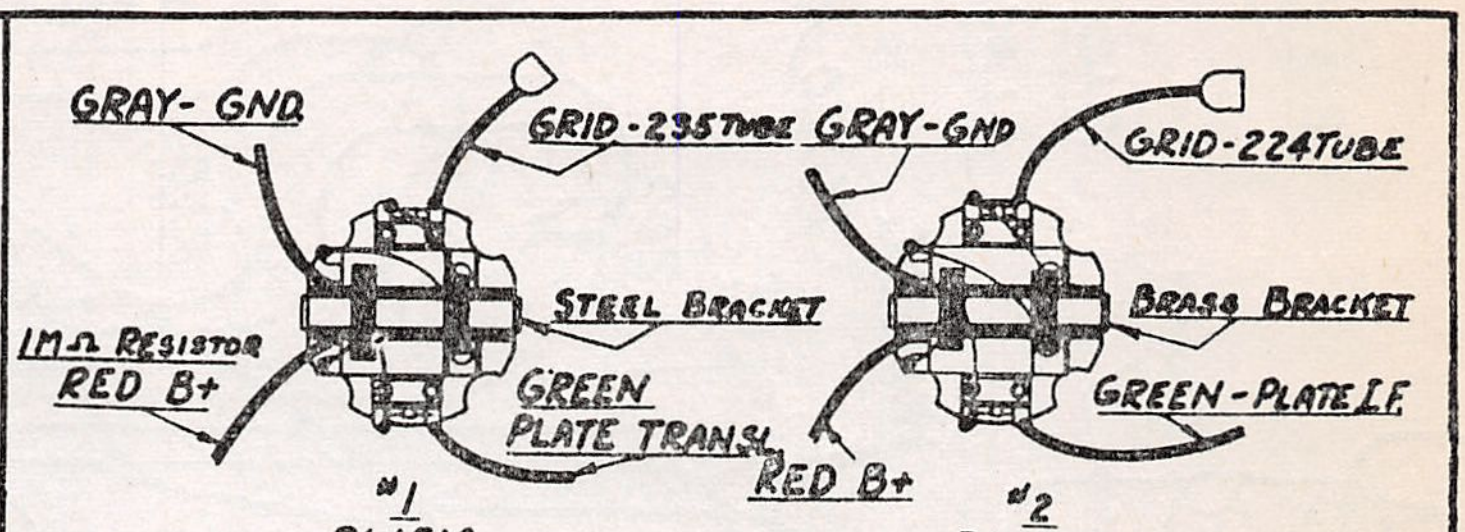
GRAY- GND
GRID-235 TUBE
GRAY-GND
GRID-224 TUBE
STEEL BRACKET
BRASS BRACKET
1MΩ RESISTOR
RED B+
GREEN
PLATE TRANSL
RED B+
GREEN-PLATE I.F.
#1
R6151A
#2
R6151B

ASSEM I.F. TRANS. AND I.F. TUNING CONDENSERS

MODEL 48

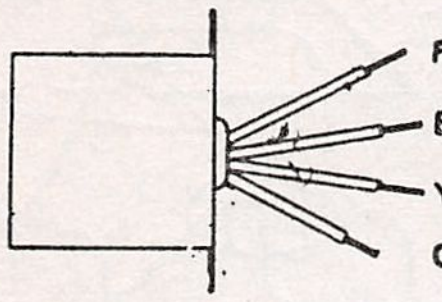

LEAD CODE
RED-.1MF. 1MΩ RESISTOR I.F.
BROWN-.2MF. SCREEN I.F.
YELLOW-.2MF. CATHODE I.F.
GREEN-.5MF. 2MΩ RESISTOR

FILTER CONDENSER - R6072

MODEL 47

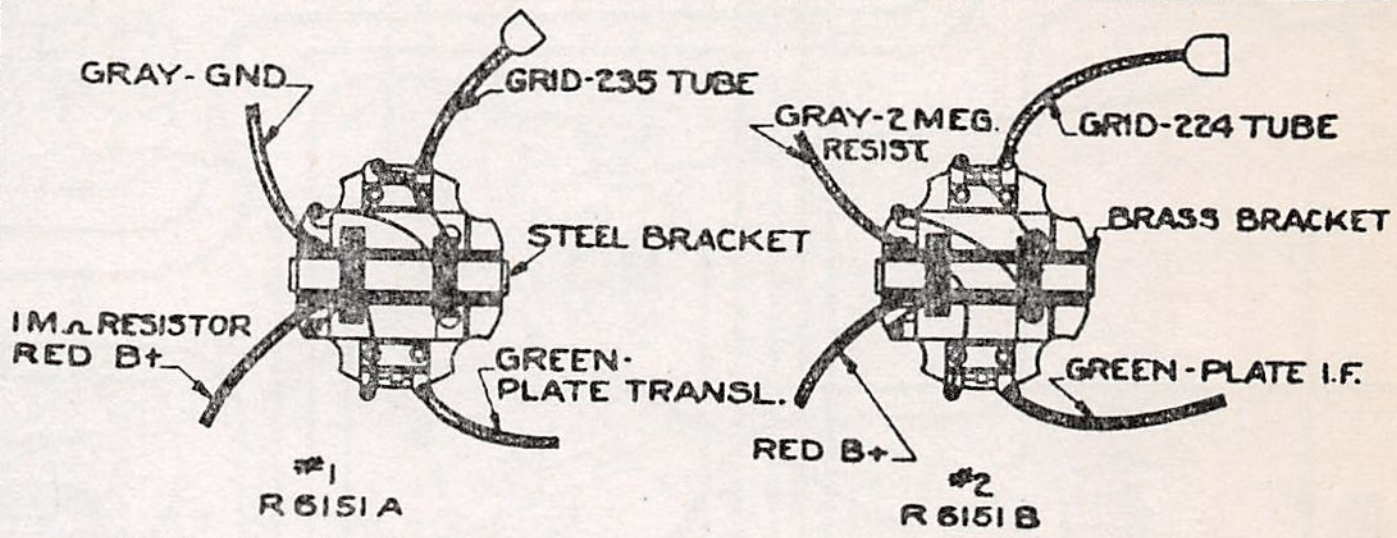
GRAY- GND
GRID-235 TUBE
GRAY-2 MEG. RESIST.
GRID-224 TUBE
STEEL BRACKET
BRASS BRACKET
1MΩ RESISTOR
RED B+
GREEN-
PLATE TRANSL.
RED B+
GREEN-PLATE I.F.
#1
R6151A
#2
R6151B

ASSEM. I.F. TRANS. & I.F. TUNING CONDENSERS

MODEL 47

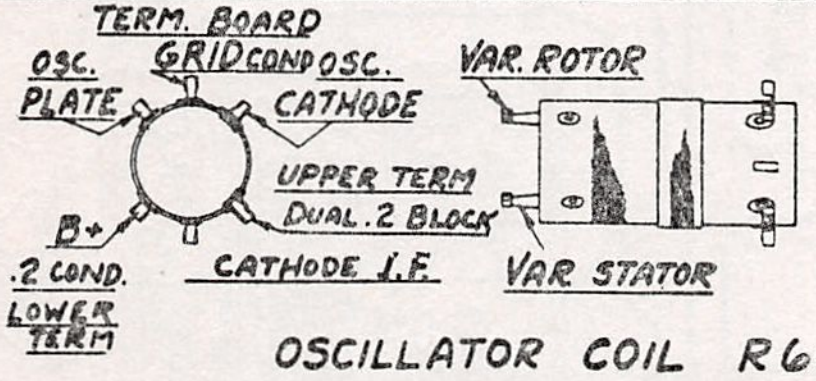
TERM. BOARD
GRID COND
OSC.
PLATE
OSC.
CATHODE
VAR. ROTOR
UPPER TERM
DUAL .2 BLOCK
B+
.2 COND.
LOWER
TERM
CATHODE I.F.
VAR. STATOR

OSCILLATOR COIL R6008

MODEL 48

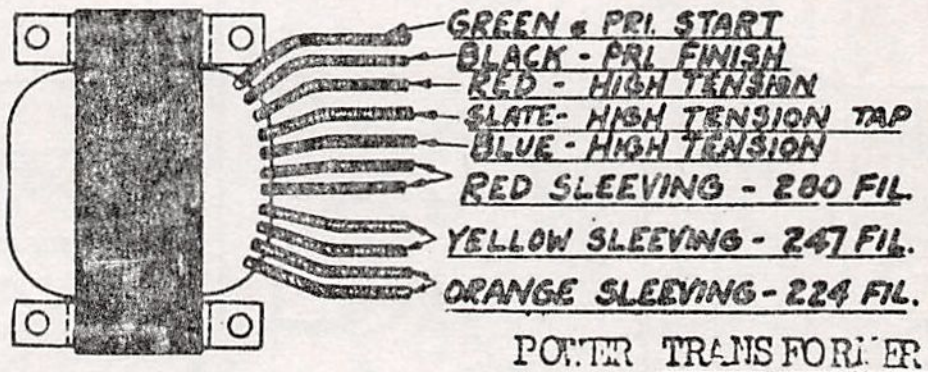
GREEN & PRI. START
BLACK - PRI. FINISH
RED - HIGH TENSION
SLATE - HIGH TENSION TAP
BLUE - HIGH TENSION
RED SLEEVING - 280 FIL.
YELLOW SLEEVING - 247 FIL.
ORANGE SLEEVING - 224 FIL.

POWER TRANSFORMER

Model	48	60 cyc.	- R6085
		25 "	- R6181
Model	47	60 "	- R6080A
		25 "	- R6185A

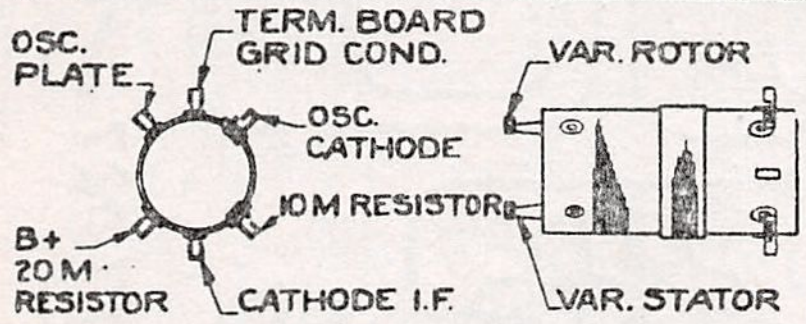
OSC.
PLATE
TERM. BOARD
GRID COND.
OSC.
CATHODE
VAR. ROTOR
10 M RESISTOR
B+
20 M
RESISTOR
CATHODE I.F.
VAR. STATOR

OSCILLATOR COIL R 6008

MODEL 47

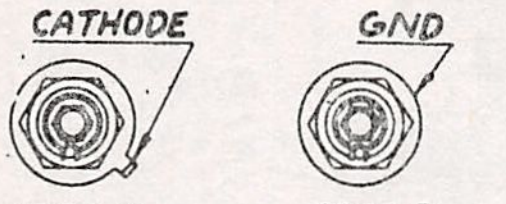
CATHODE
GND
4758 A
(INSULATED)
4758 P

ELECTROLYTIC CONDENSERS

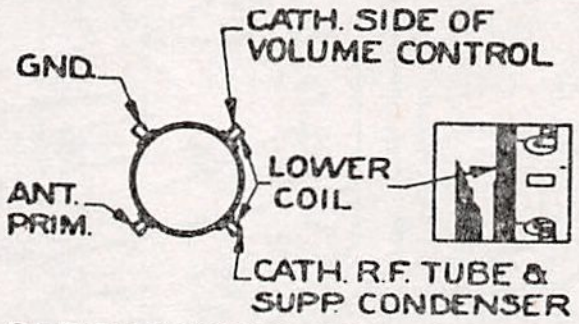
GND.
CATH. SIDE OF
VOLUME CONTROL
LOWER
COIL
ANT.
PRIM.
CATH. R.F. TUBE &
SUPP. CONDENSER

SUPPRESSOR COIL R6196A

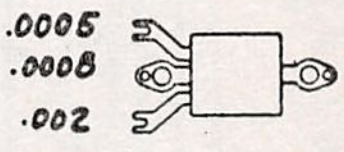
.0005
.0008
.002

TONE CONTROL
CONDENSER R6146

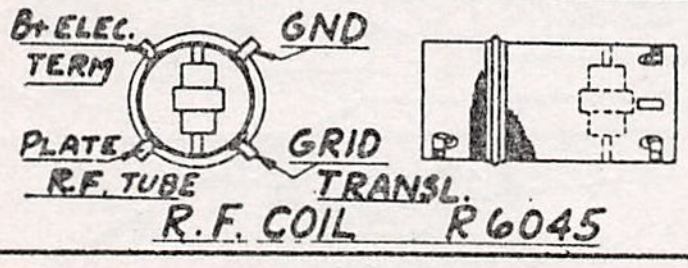
B+ ELEC.
TERM
GND
PLATE
R.F. TUBE
GRID
TRANSL.

R.F. COIL R6045

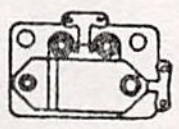

SUPPRESSOR COND R6218

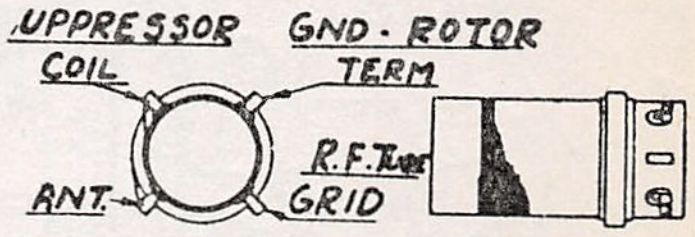
UPPRESSOR
COIL
GND - ROTOR
TERM
R.F. TUBE
GRID
ANT.

ANTENNA COIL R6043

MODELS 47 & 48

MODELS 47 AND 48

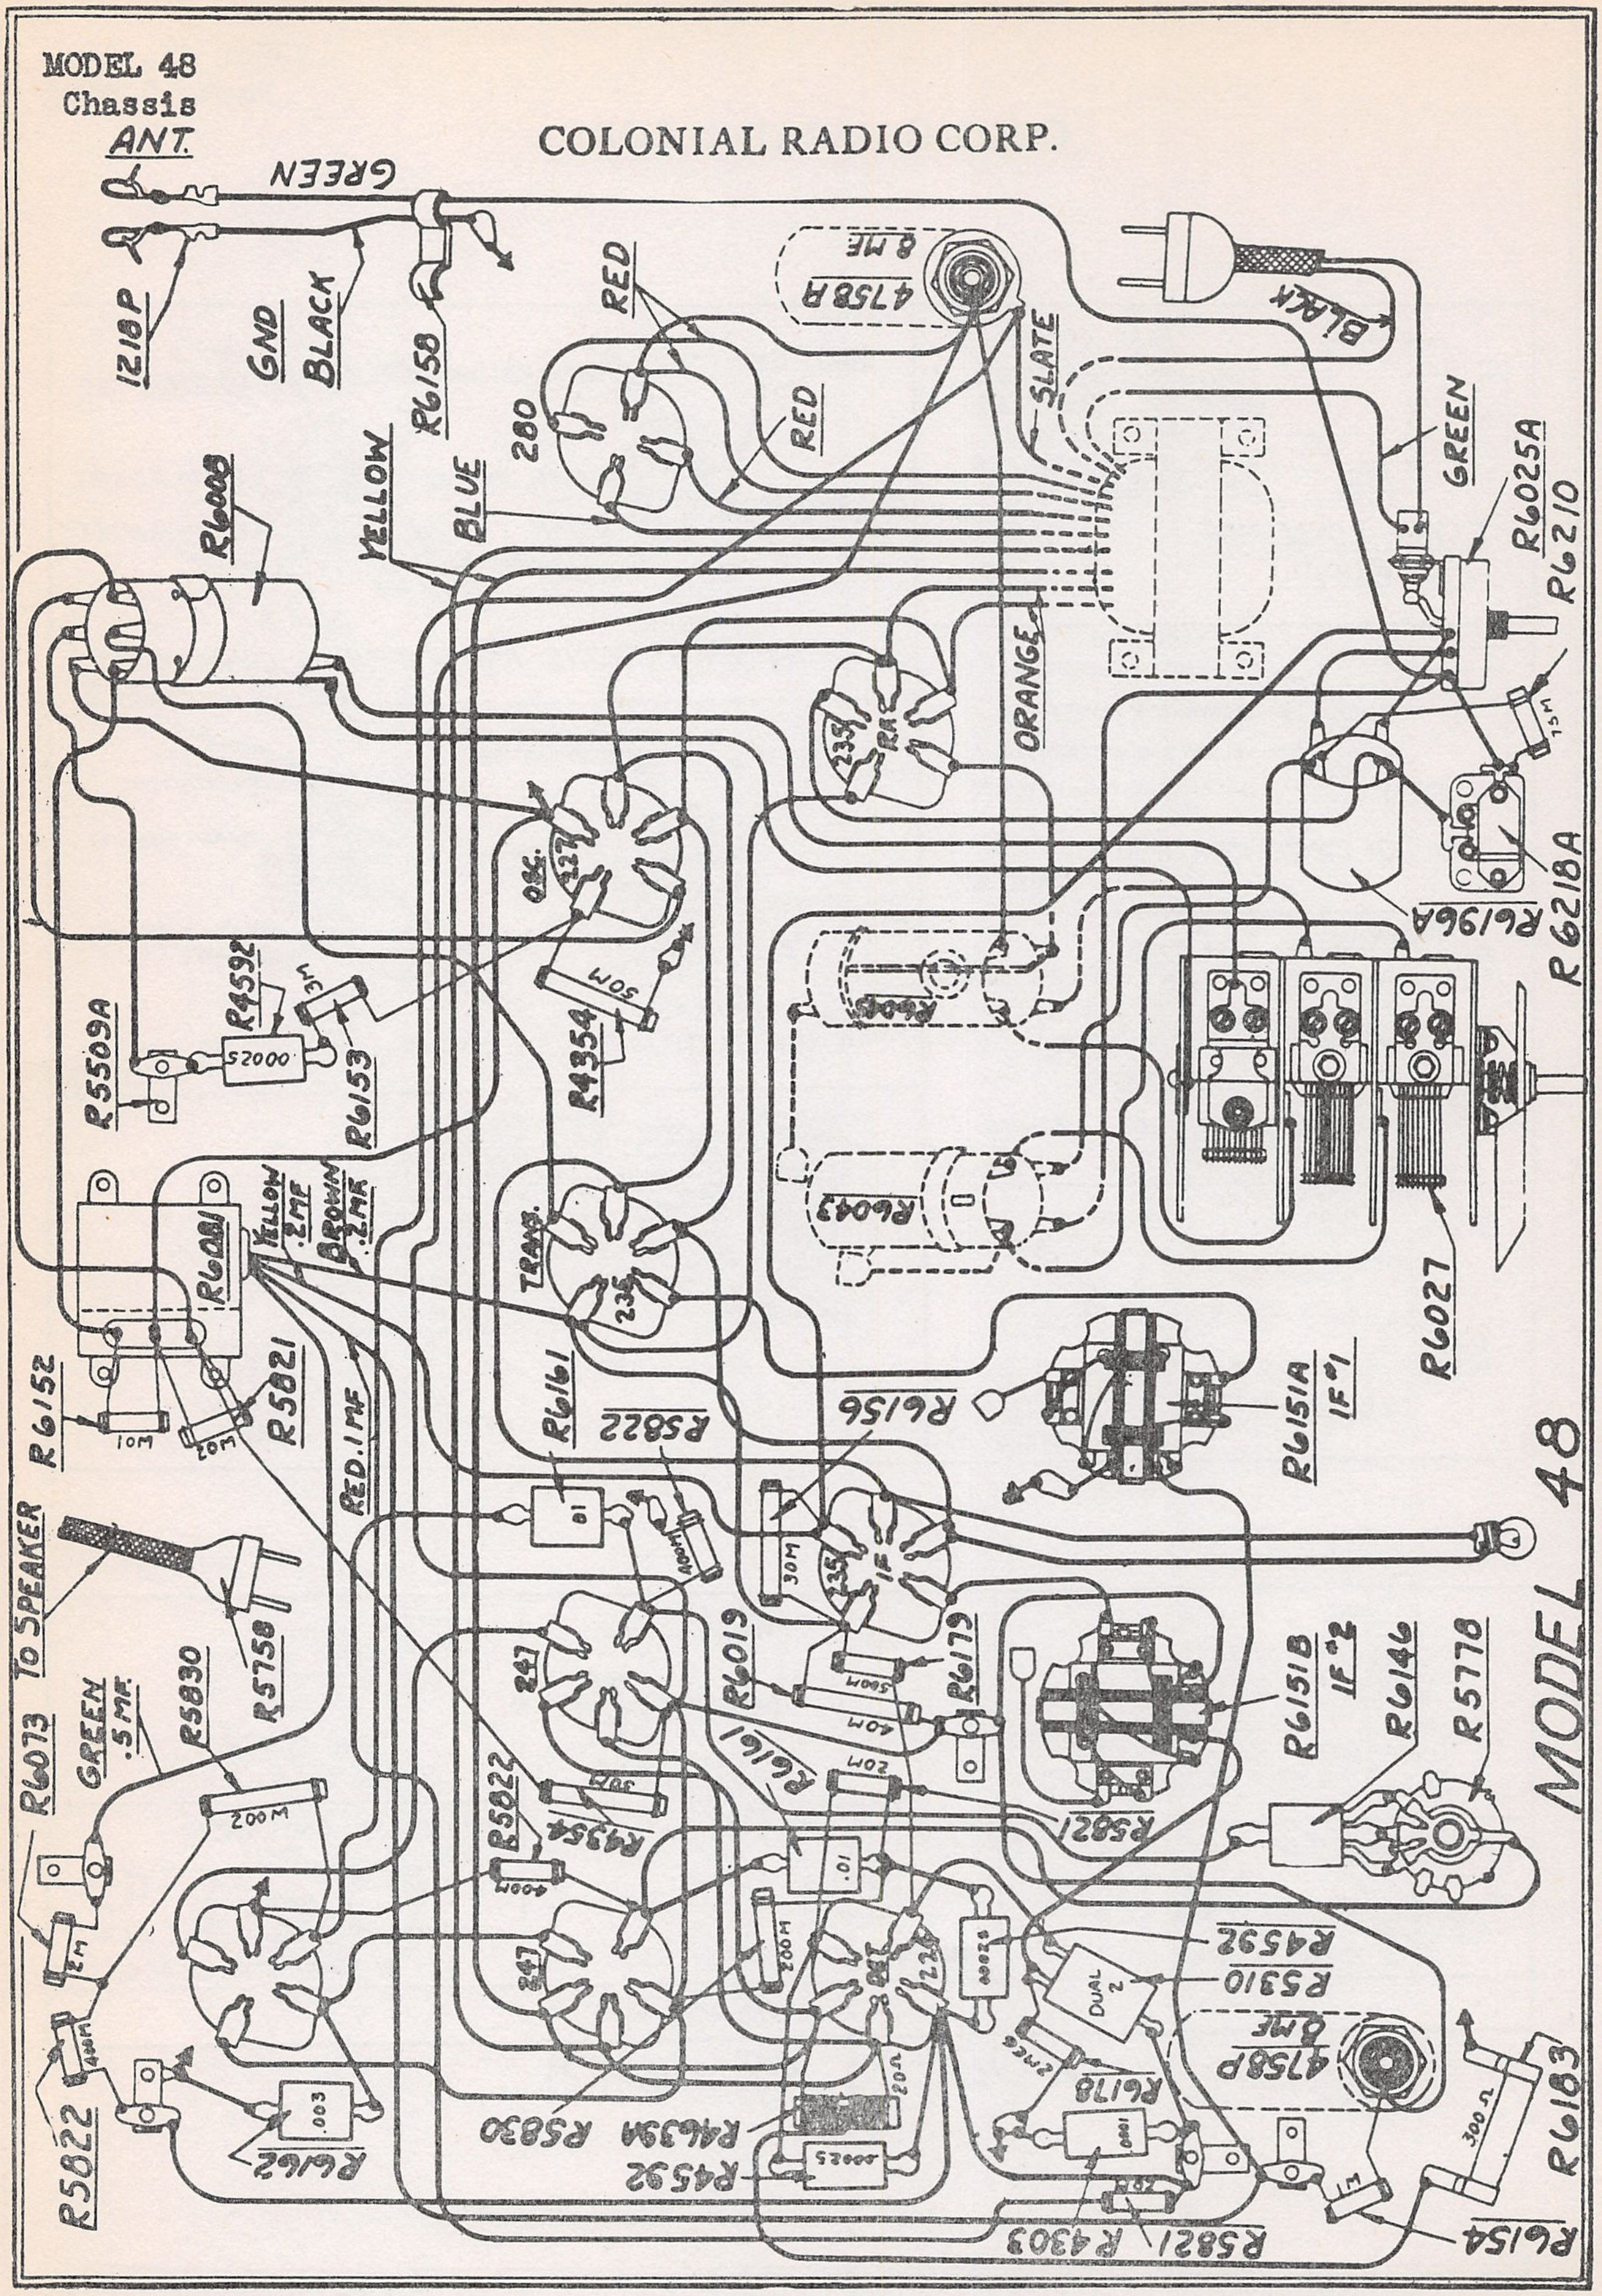

MODEL 48
Chassis

COLONIAL RADIO CORP.

ANT.
GREEN
1218P
GND
BLACK
R6158
4758R
8 MF
RED
280
RED
SLATE
BLACK
GREEN
R6025A
R6210
YELLOW
BLUE
R6008
ORANGE
235
RF
15M
R6218A
R6196A
OSC.
227
30M
R4354
R4592
.00025
3M
R5509A
R6153
R6081
YELLOW .2MF
BROWN .2MF
R6043
TRANS.
235
R6027
R6152
10M
20M
R5821
R6161
R5822
R6156
R6151A
IF#1
MODEL 48
RED .1MF
.01
400M
30M
235
IF
R6019
500M
R6179
40M
R6073
To SPEAKER
R5758
GREEN
.5MF
R5830
247
R6151B
IF#2
R6146
R5778
R6161
20M
R5821
R5822
R4354
30M
200M
2M
400M
247
200M
.01
227
DET.
.00025
DUAL
2
R4592
R5310
4758P
8MF
300Ω
R6183
R6162
.003
R5822
R4639A
R5830
R4592
.00025
20Ω
2MEG
R6178
.0001
3M
R6154
R5821
R4303

MODEL 49 Midget Chassis

COLONIAL RADIO CORP

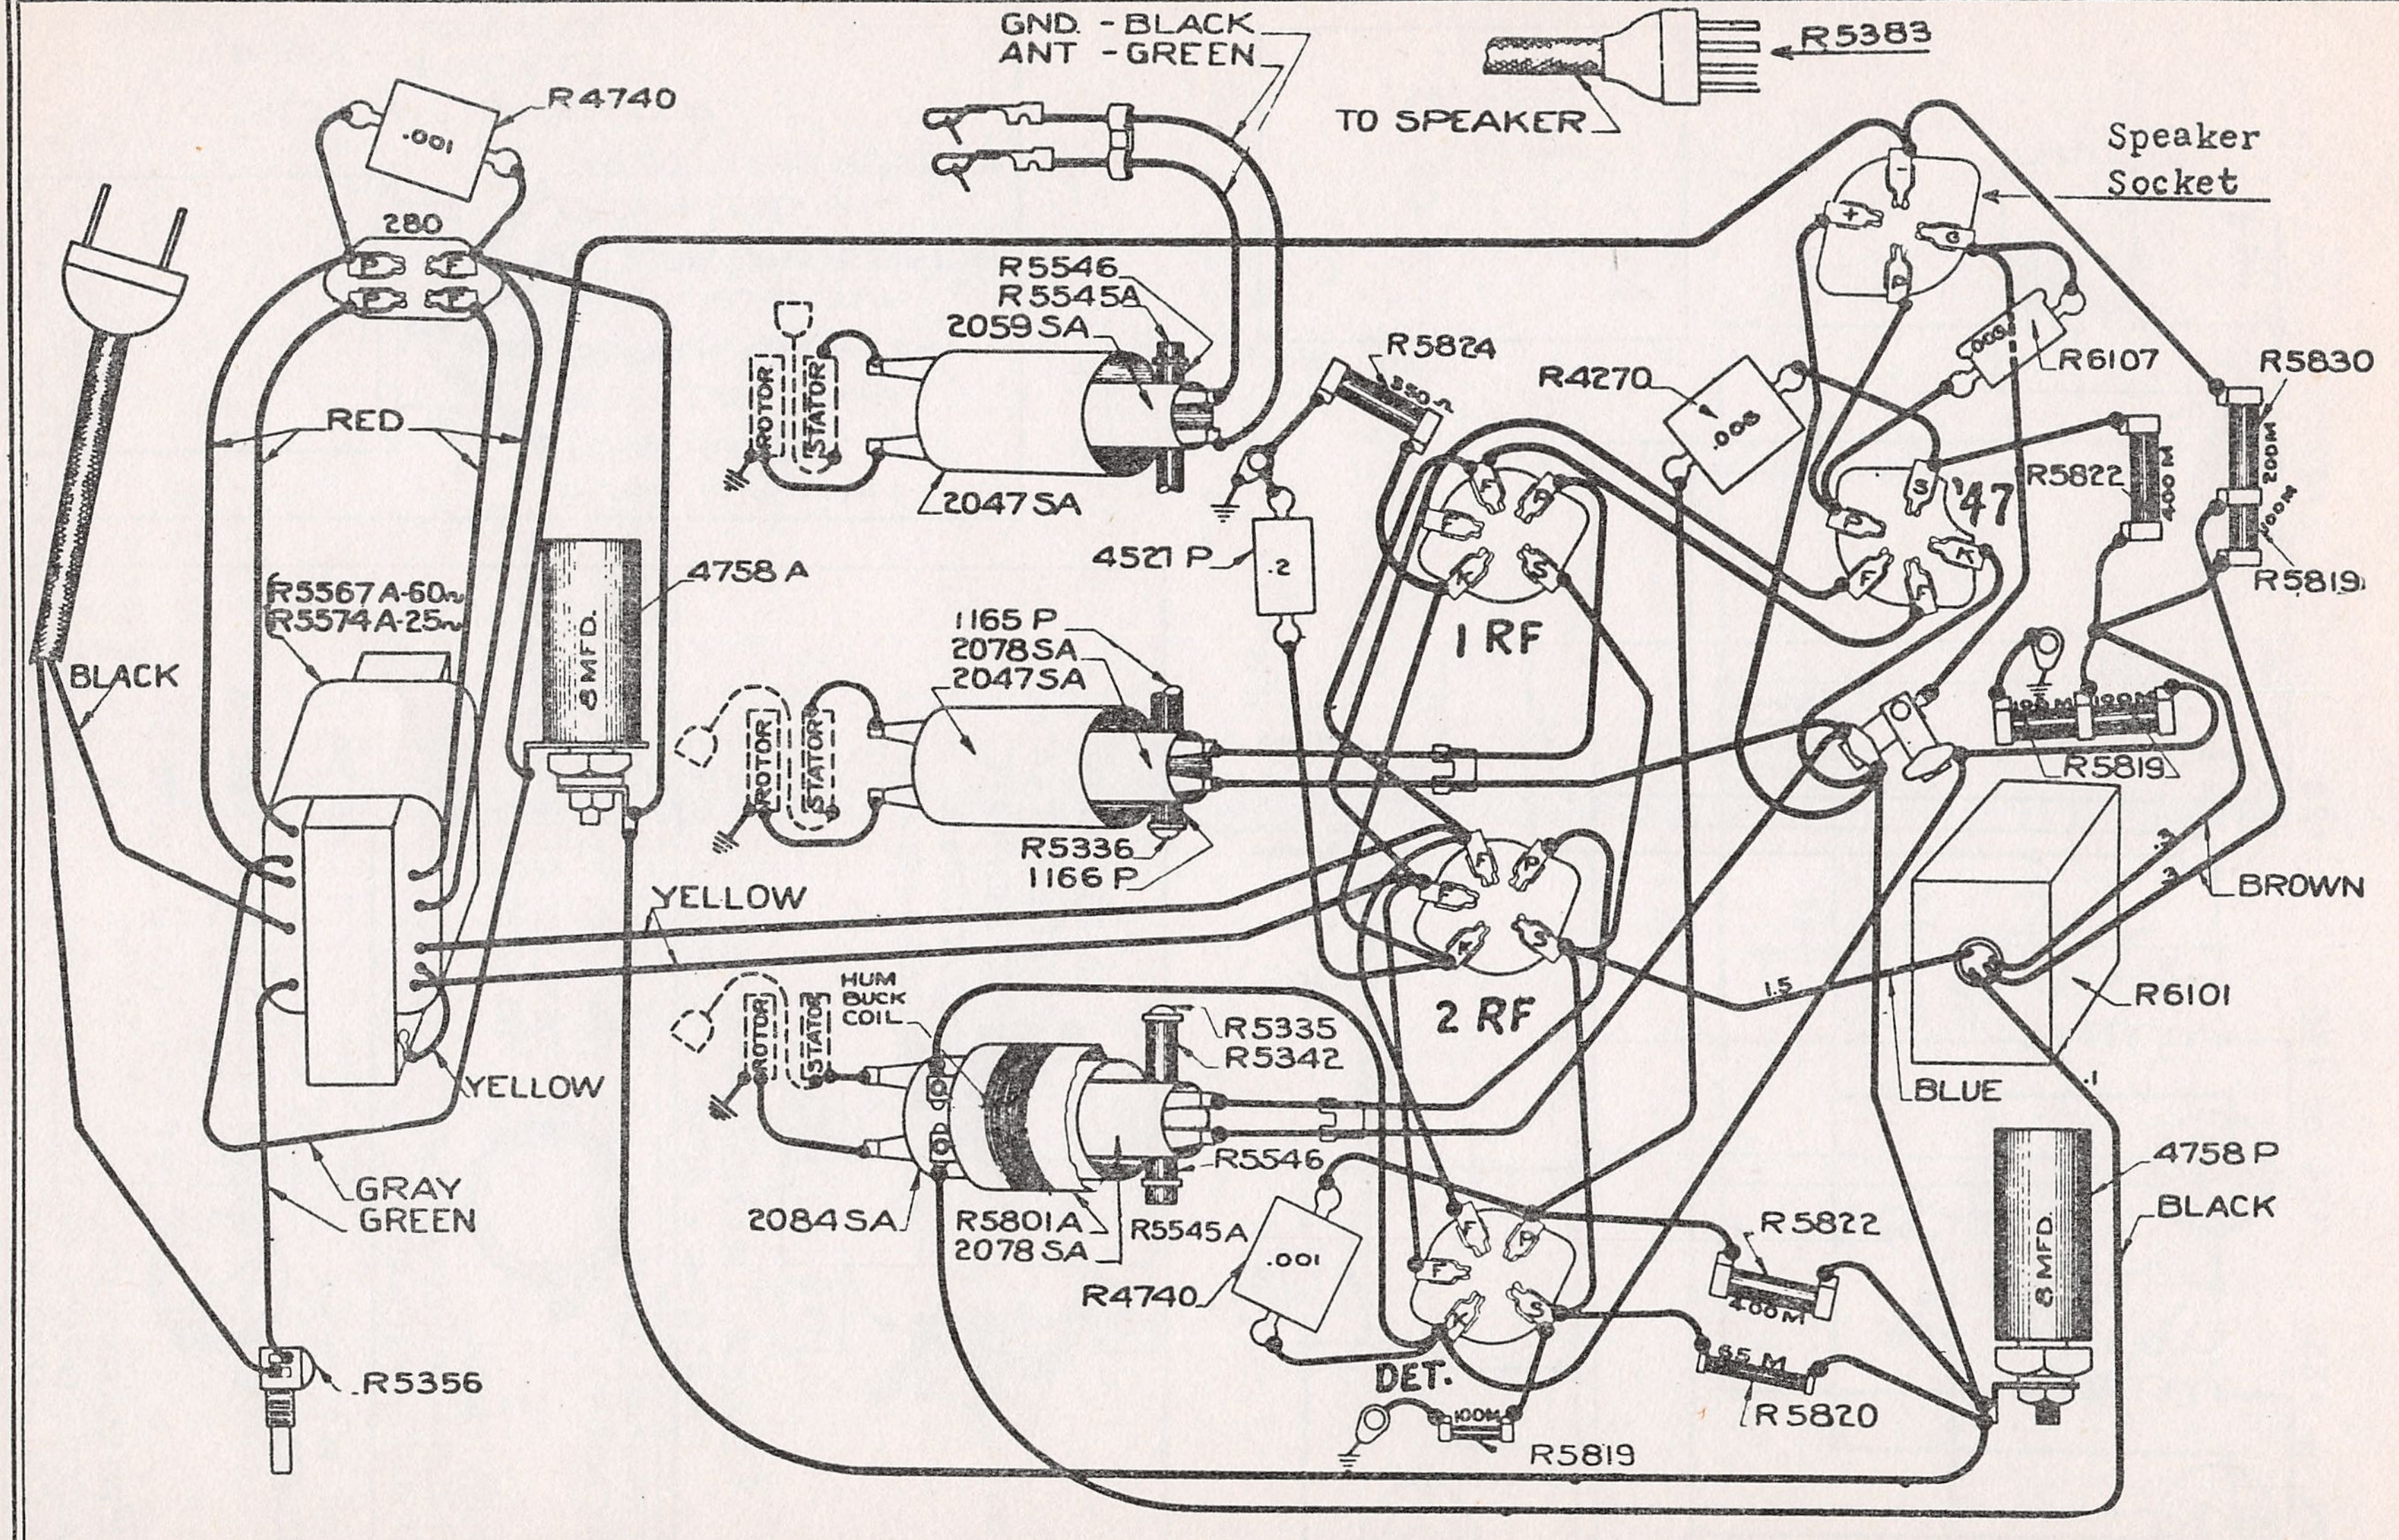
GND. - BLACK
ANT - GREEN
TO SPEAKER
R5383
Speaker Socket
R4740
.001
280
RED
R5546
R5545A
2059 SA
2047 SA
ROTOR
STATOR
R5824
350 Ω
R4270
.008
R6107
.0005
R5830
200M
100M
R5819
R5822
400 M
'47
S
K
P
F
G
1 RF
4521 P
.2
R5567A-60~
R5574A-25~
4758 A
8 MFD.
1165 P
2078 SA
2047 SA
R5336
1166 P
BLACK
YELLOW
2 RF
HUM BUCK COIL
R5335
R5342
R5546
R5545A
2084 SA
R5801A
2078 SA
R4740
.001
DET.
R5819
100M
R5820
85 M
R5822
400M
R6101
BROWN
3
1.5
1
BLUE
4758 P
BLACK
8 MFD.
YELLOW
GRAY
GREEN
R5356

60 Cycle

	RF1	RF2	Det.	247	280AC	280DC
Plate Voltage D.C.	220	220	100	210	340	320
Screen Voltage D.C.	70	70	70			
Heater Voltage A.C.	2.3	2.3	2.3	2.3	4.8	
Control Grid Voltage D.C.	2.4	2.4	7	15		
Speaker Field Voltage 100						
Total Rectifier Current .045						

Line Voltage .115

25 Cycle

	RF1	RF2	Det.	247	280AC	280DC
Plate Voltage D.C.	240	240	100	230	335	340
Screen Voltage D.C.	70	70	70	230		
Heater Voltage A.C.	2.4	2.4	2.4	2.4	5	
Control Grid Voltage D.C.	2.3	2.3	7	15		
Speaker Field Voltage 100						
Total Rectifier Current .045						

Line Voltage 115

Control Grid Volts are measured from Cathode to Ground or Cathode to Filament. 247 Grid Voltage. Grid to Ground or Filament.

MODEL 49 Midget
Schematic
Parts Coding

COLONIAL RADIO CORP.

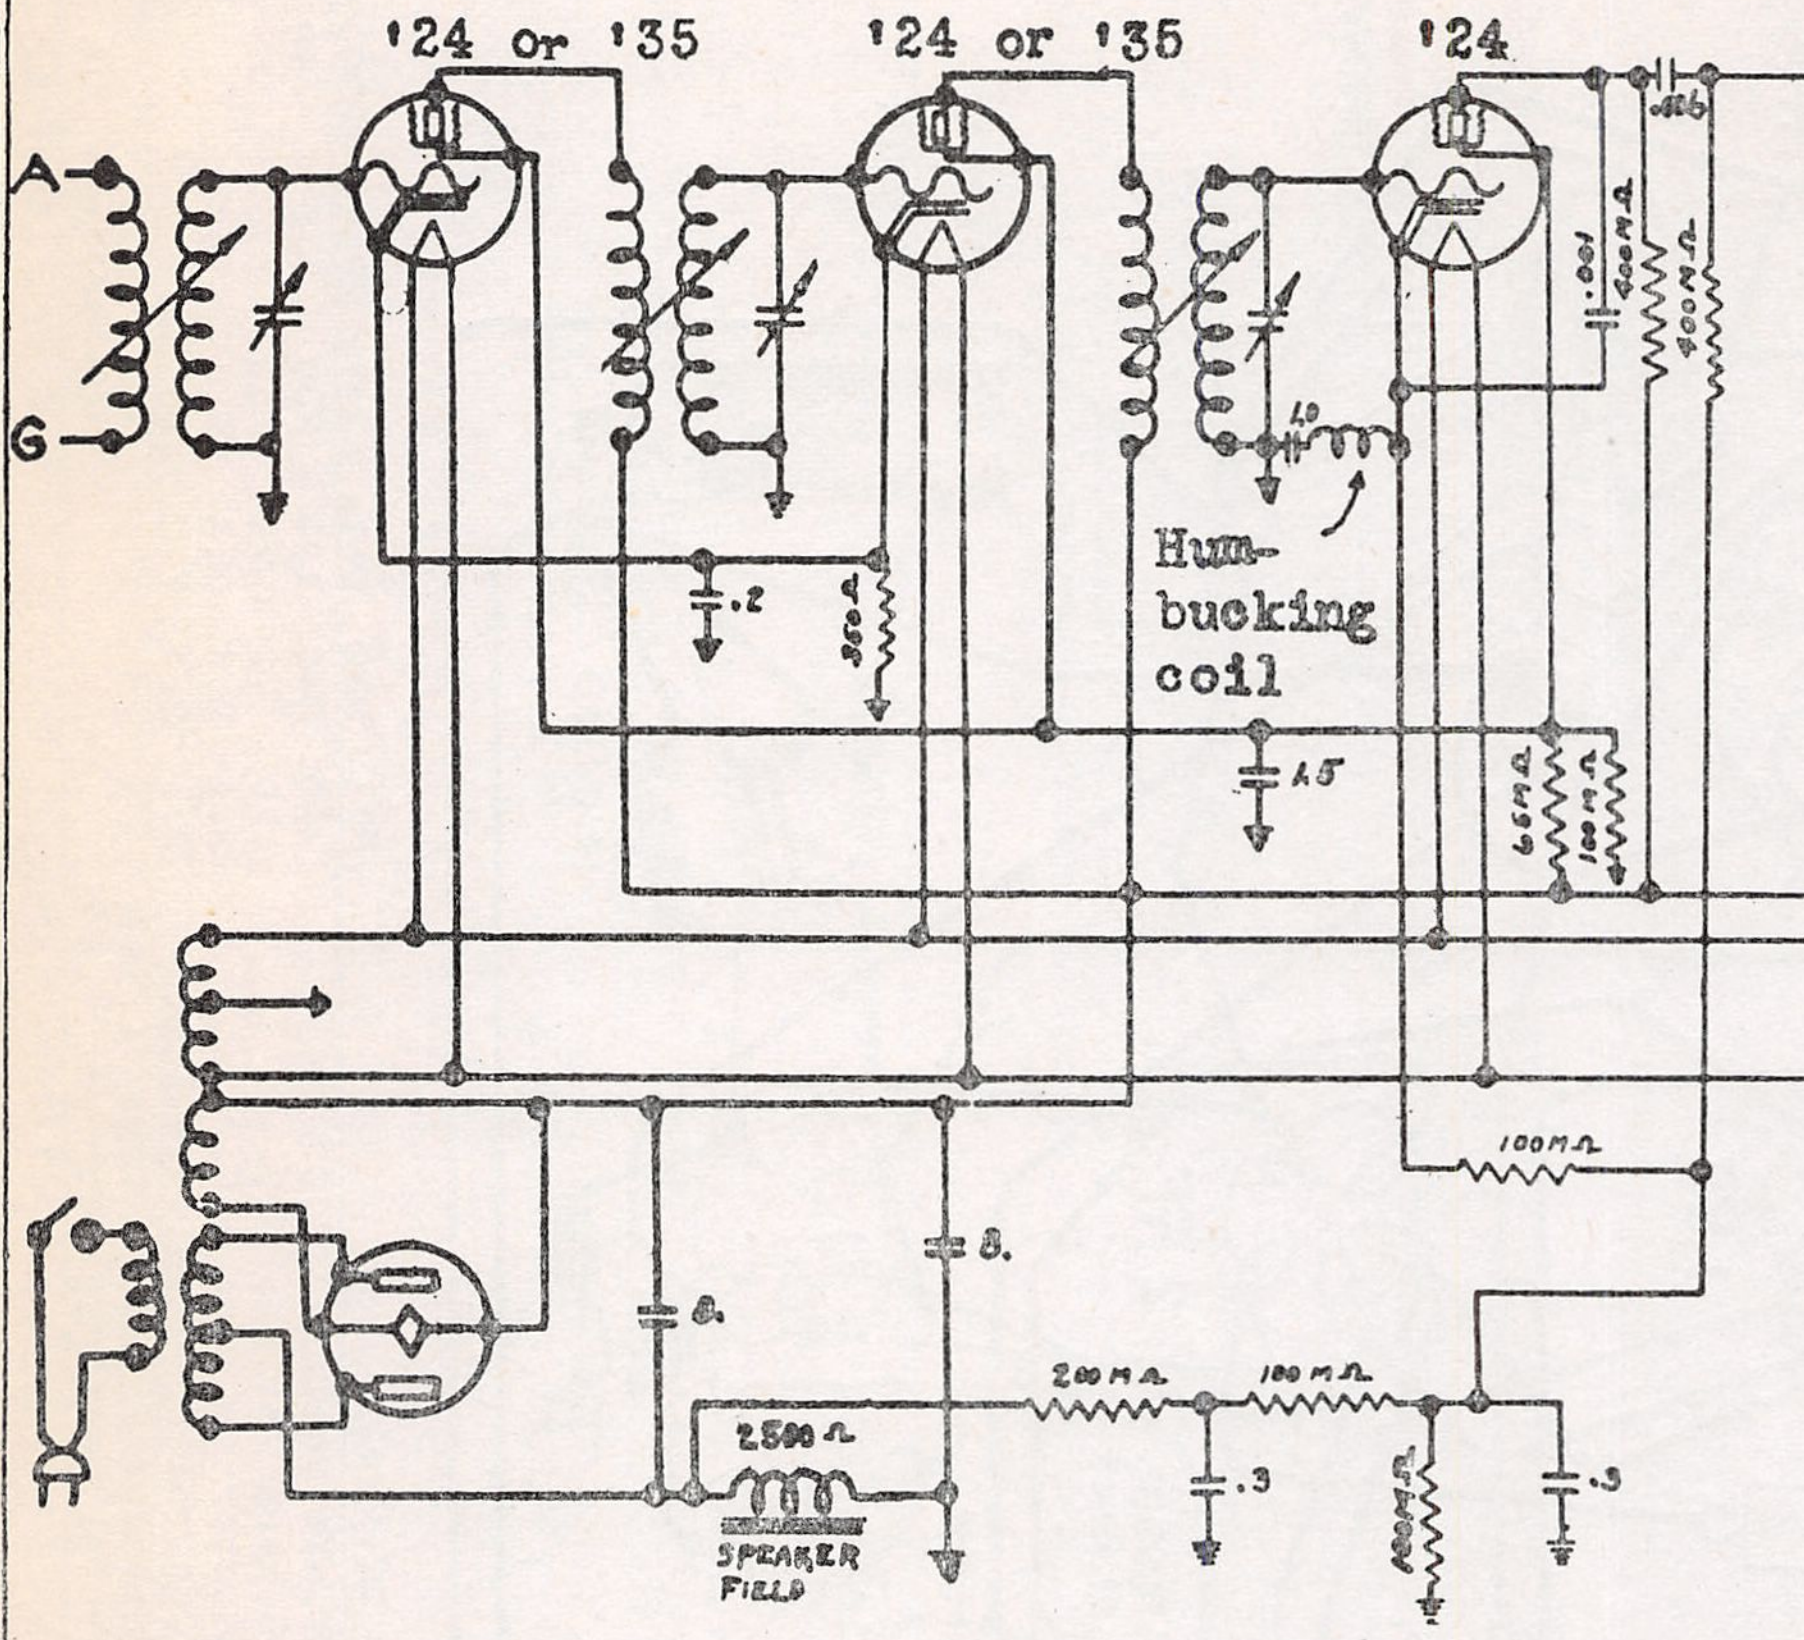
'24 or '35
'24 or '35
'24
'47
A
G
.2
350Ω
.001
400MΩ
400MΩ
.006
.003
40
Hum-bucking coil
1.5
65MΩ
100MΩ
40MΩ
100MΩ
8.
8.
2500Ω
SPEAKER FIELD
200MΩ
100MΩ
.3
.3
400MΩ

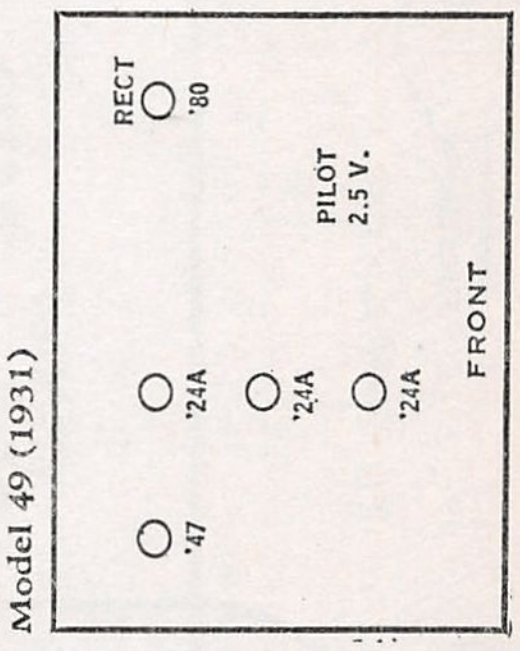
Model 49 (1931)
RECT
'80
PILOT 2.5 V.
FRONT
'24A
'24A
'24A
'47

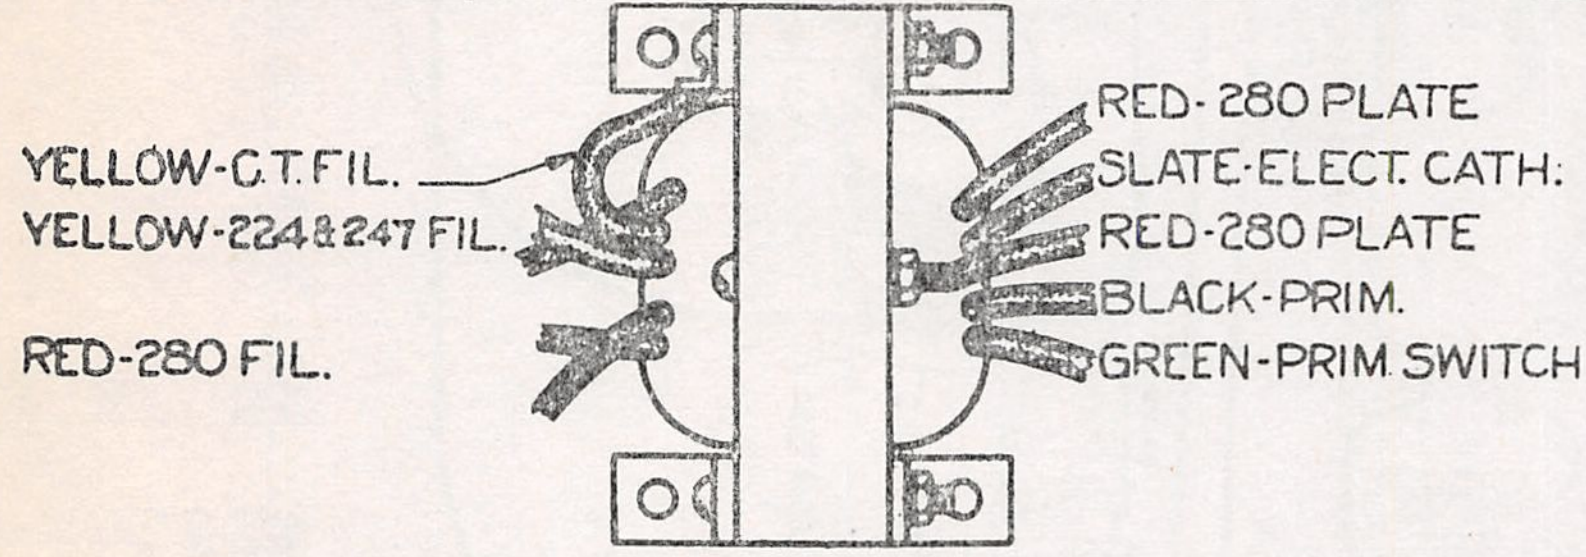
YELLOW-C.T. FIL.
YELLOW-224&247 FIL.
RED-280 FIL.
RED-280 PLATE
SLATE-ELECT. CATH.
RED-280 PLATE
BLACK-PRIM.
GREEN-PRIM. SWITCH

POWER TRANSFORMER
R5567A - 60~   R5574A - 25~

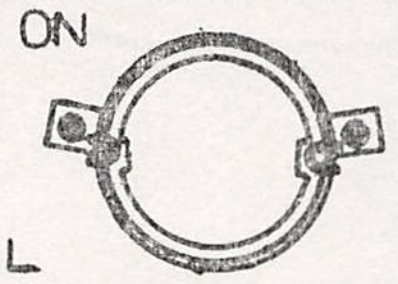

TO STATOR TERMINAL ON VARIABLE CONDENSER

R.F. SEC. COIL D-2047-SA TO GND.

DET. SEC. COIL D-2084-SA TO GROUND

SECONDARY COIL
DET. SEC. COIL = D-2084-SA (YELLOW SPOT)
R.F. SEC. COIL = D-2047-SA (PLAIN)

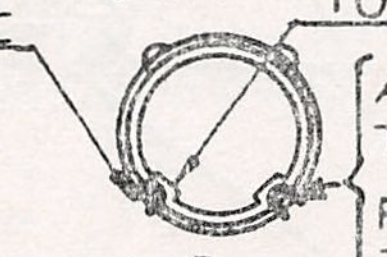

R.F. PRIM. COIL D-2078-SA TO UY 224 PLATE

ANT. PRIM. COIL D-2059 SA TO ANT.

ANT. PRIM. COIL D-2059-SA TO GND.

R.F. PRIM. COIL D-2078-SA TO +B TERM.

PRIMARY COIL
ANT. PRIM. COIL = D-2059-SA (YELLOW SPOT)
R.F. PRIM. COIL = D-2078-SA (PLAIN)

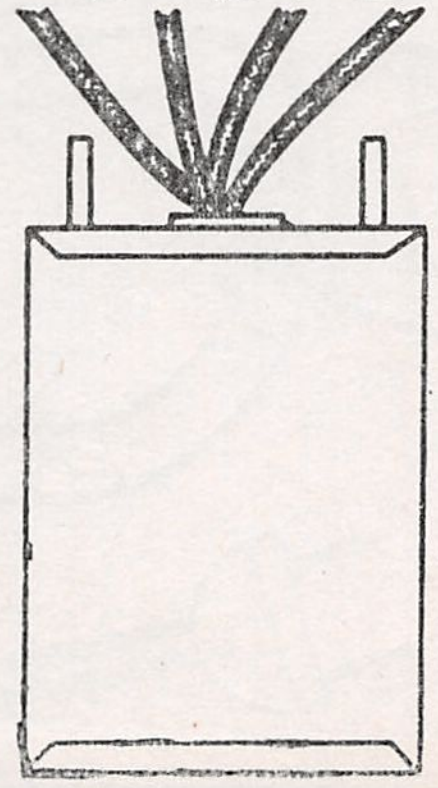

BLACK LEAD - .1 Mfd
TERM. HUM COIL
BLUE LEAD - 1.5 Mfd
SCREEN GRID - 224
BROWN LEAD - .3 Mfd
CT 200M OHM RESISTOR
BROWN LEAD - 3 Mfd.
TAP 300M OHM RESISTOR

FILTER CONDENSER
R-6101 : 60 CYCLE
R-6101 : 25 CYCLE

MODEL 50 AVC
Chassis

COLONIAL RADIO CORP

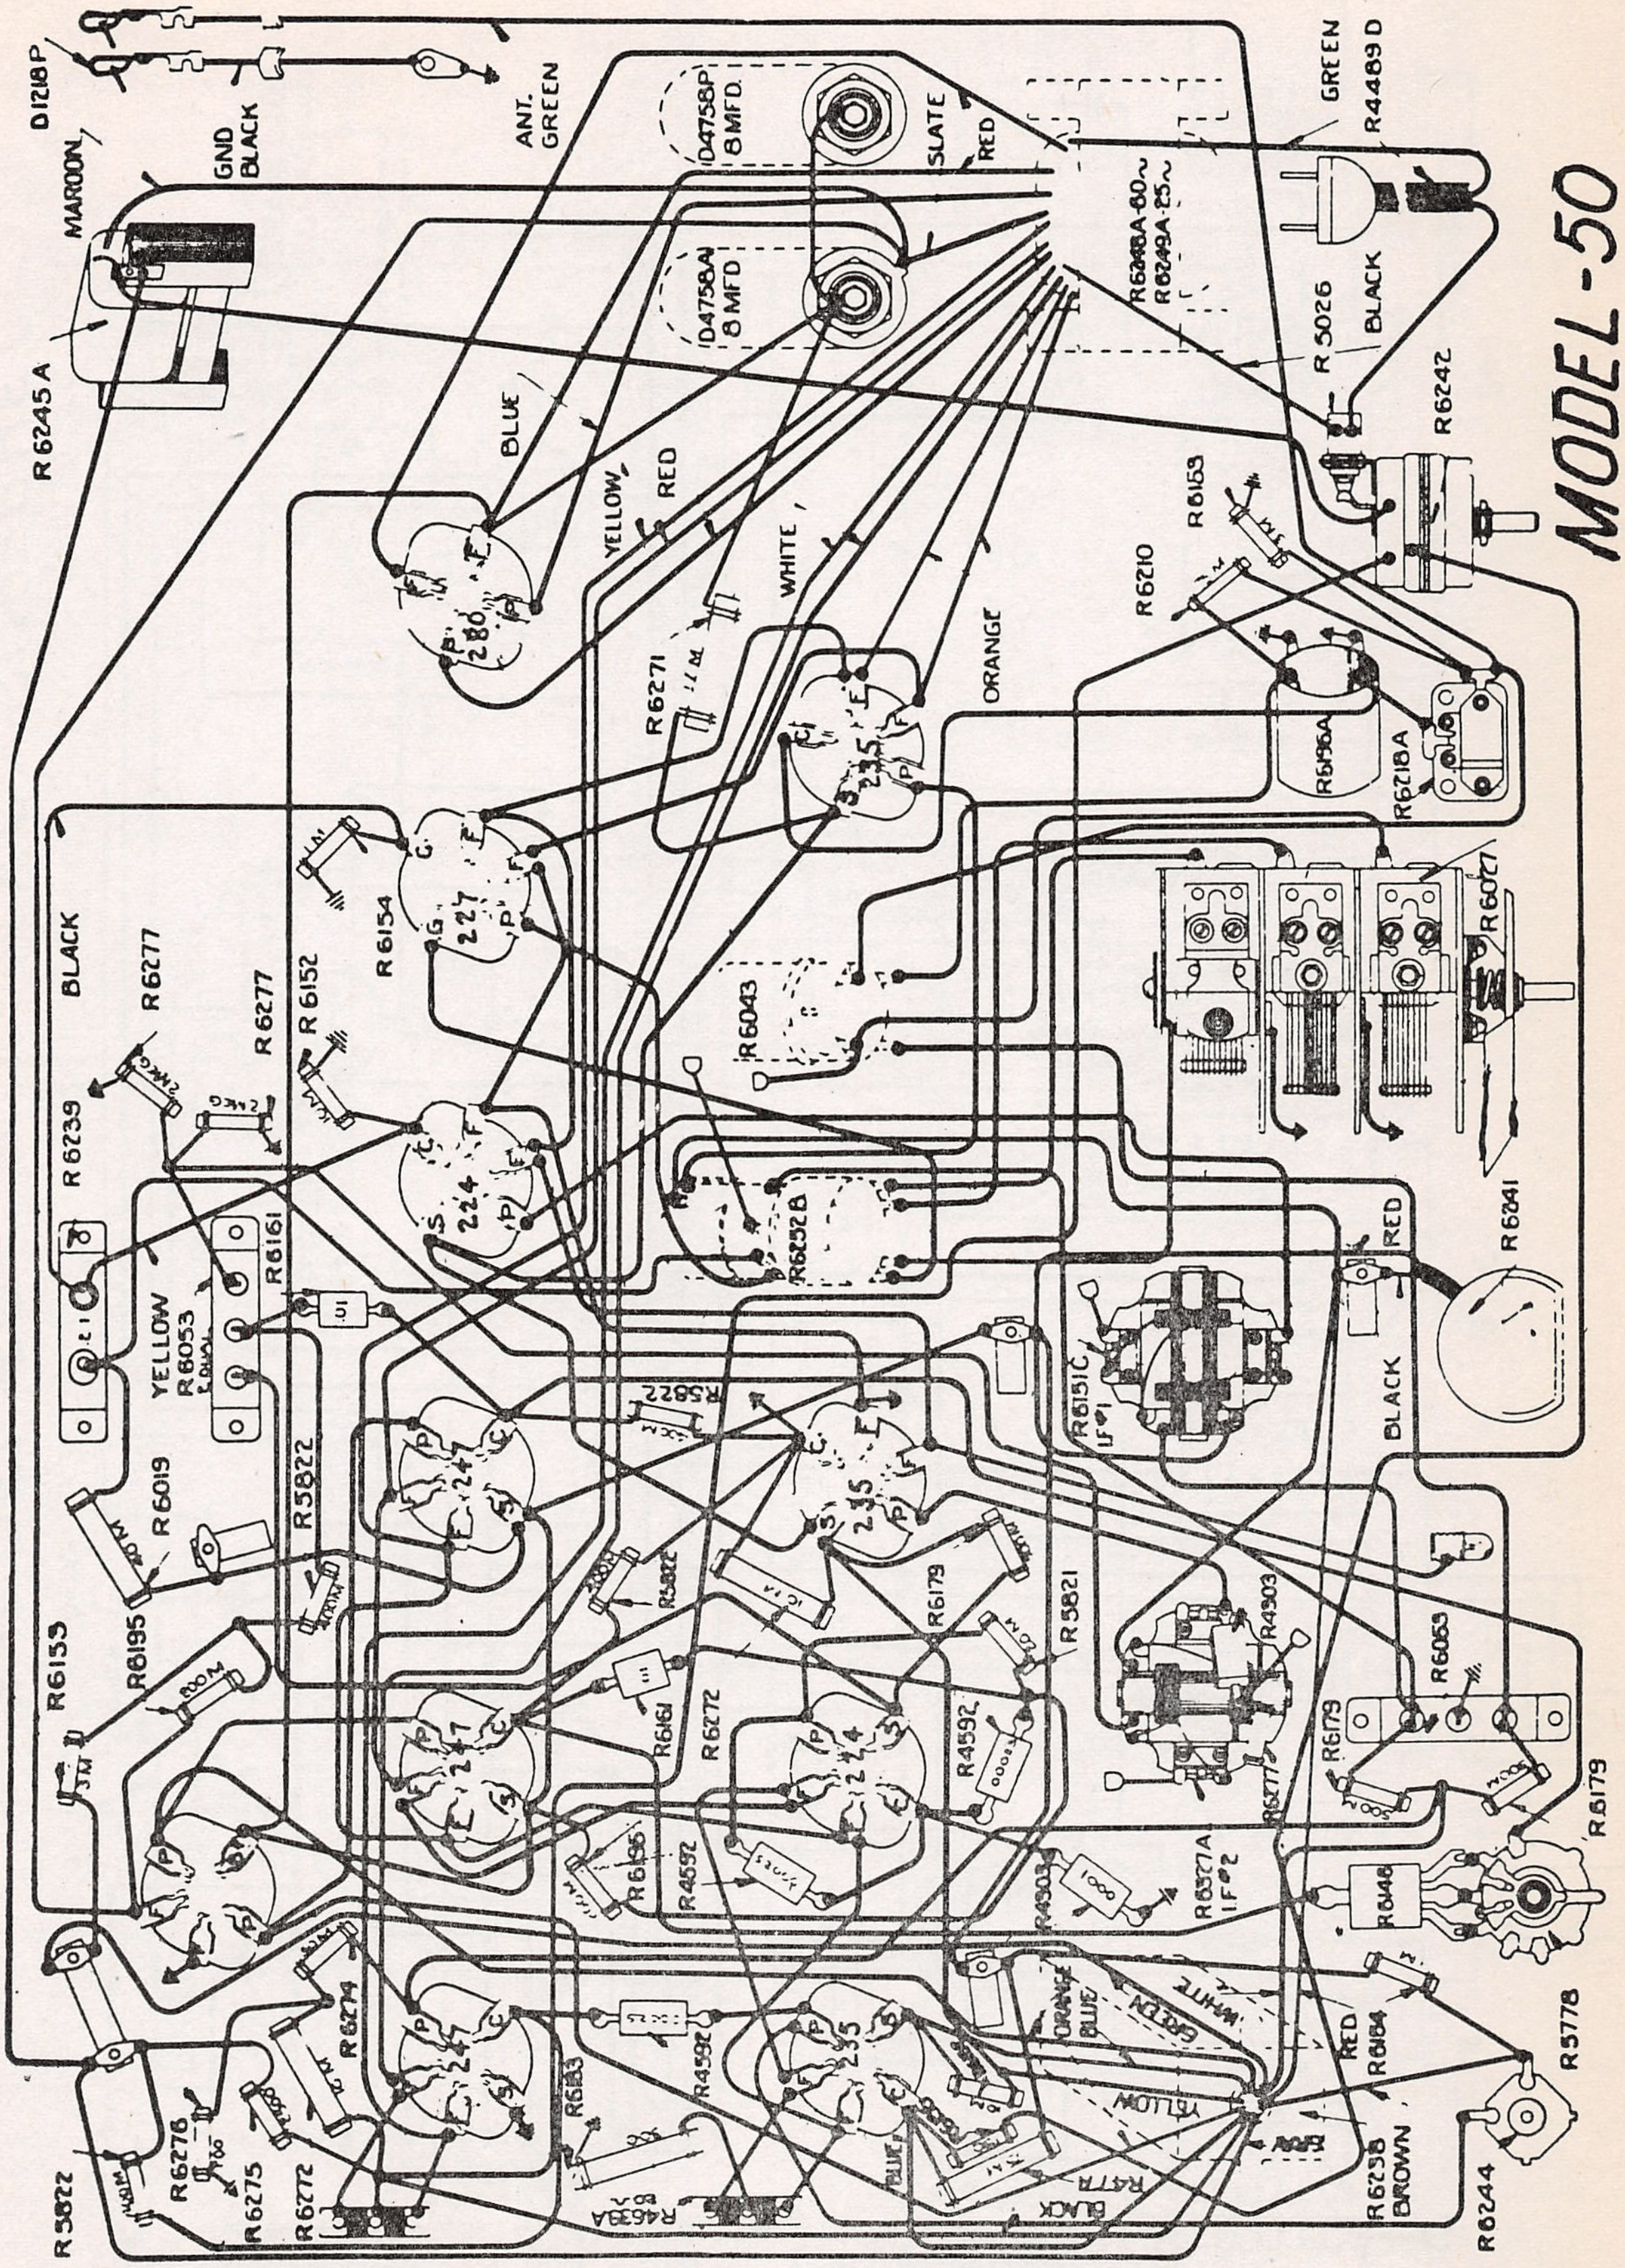
D1218P
MAROON
GND BLACK
ANT. GREEN
D4758P 8 MFD.
SLATE
RED
D4758A 8 MFD
R6248A-60~
R6249A-25~
GREEN
R4489 D
R 5026
BLACK
R6242
MODEL-50
R6245 A
BLUE
YELLOW
RED
WHITE
ORANGE
280
R6271
235
R6210
R6153
R5196A
R6218A
R6077
227
R6154
R6043
BLACK
R6277
R6277
R6152
R6239
224
R6161
R6252B
R6241
RED
YELLOW
R6053
247
R5822
R6019
R5822
235
R6151C IF#1
BLACK
R6133
R6195
R5821
R6179
R4303
R6063
R6161
R6272
224
R4592
R6179
R6179
R6277
R6195
R4592
R4303
R6377A IF#2
R6148
R5778
R6274
247
R6183
R4592
235
ORANGE
BLUE
GREEN
WHITE
RED
R6184
YELLOW
GRAY
R477A
BLACK
BLUE
R4639A
R6238 BROWN
R6244
R6276
R6275
R6272
R5822

MODEL 50 AVC
Schematic

COLONIAL RADIO CORP.

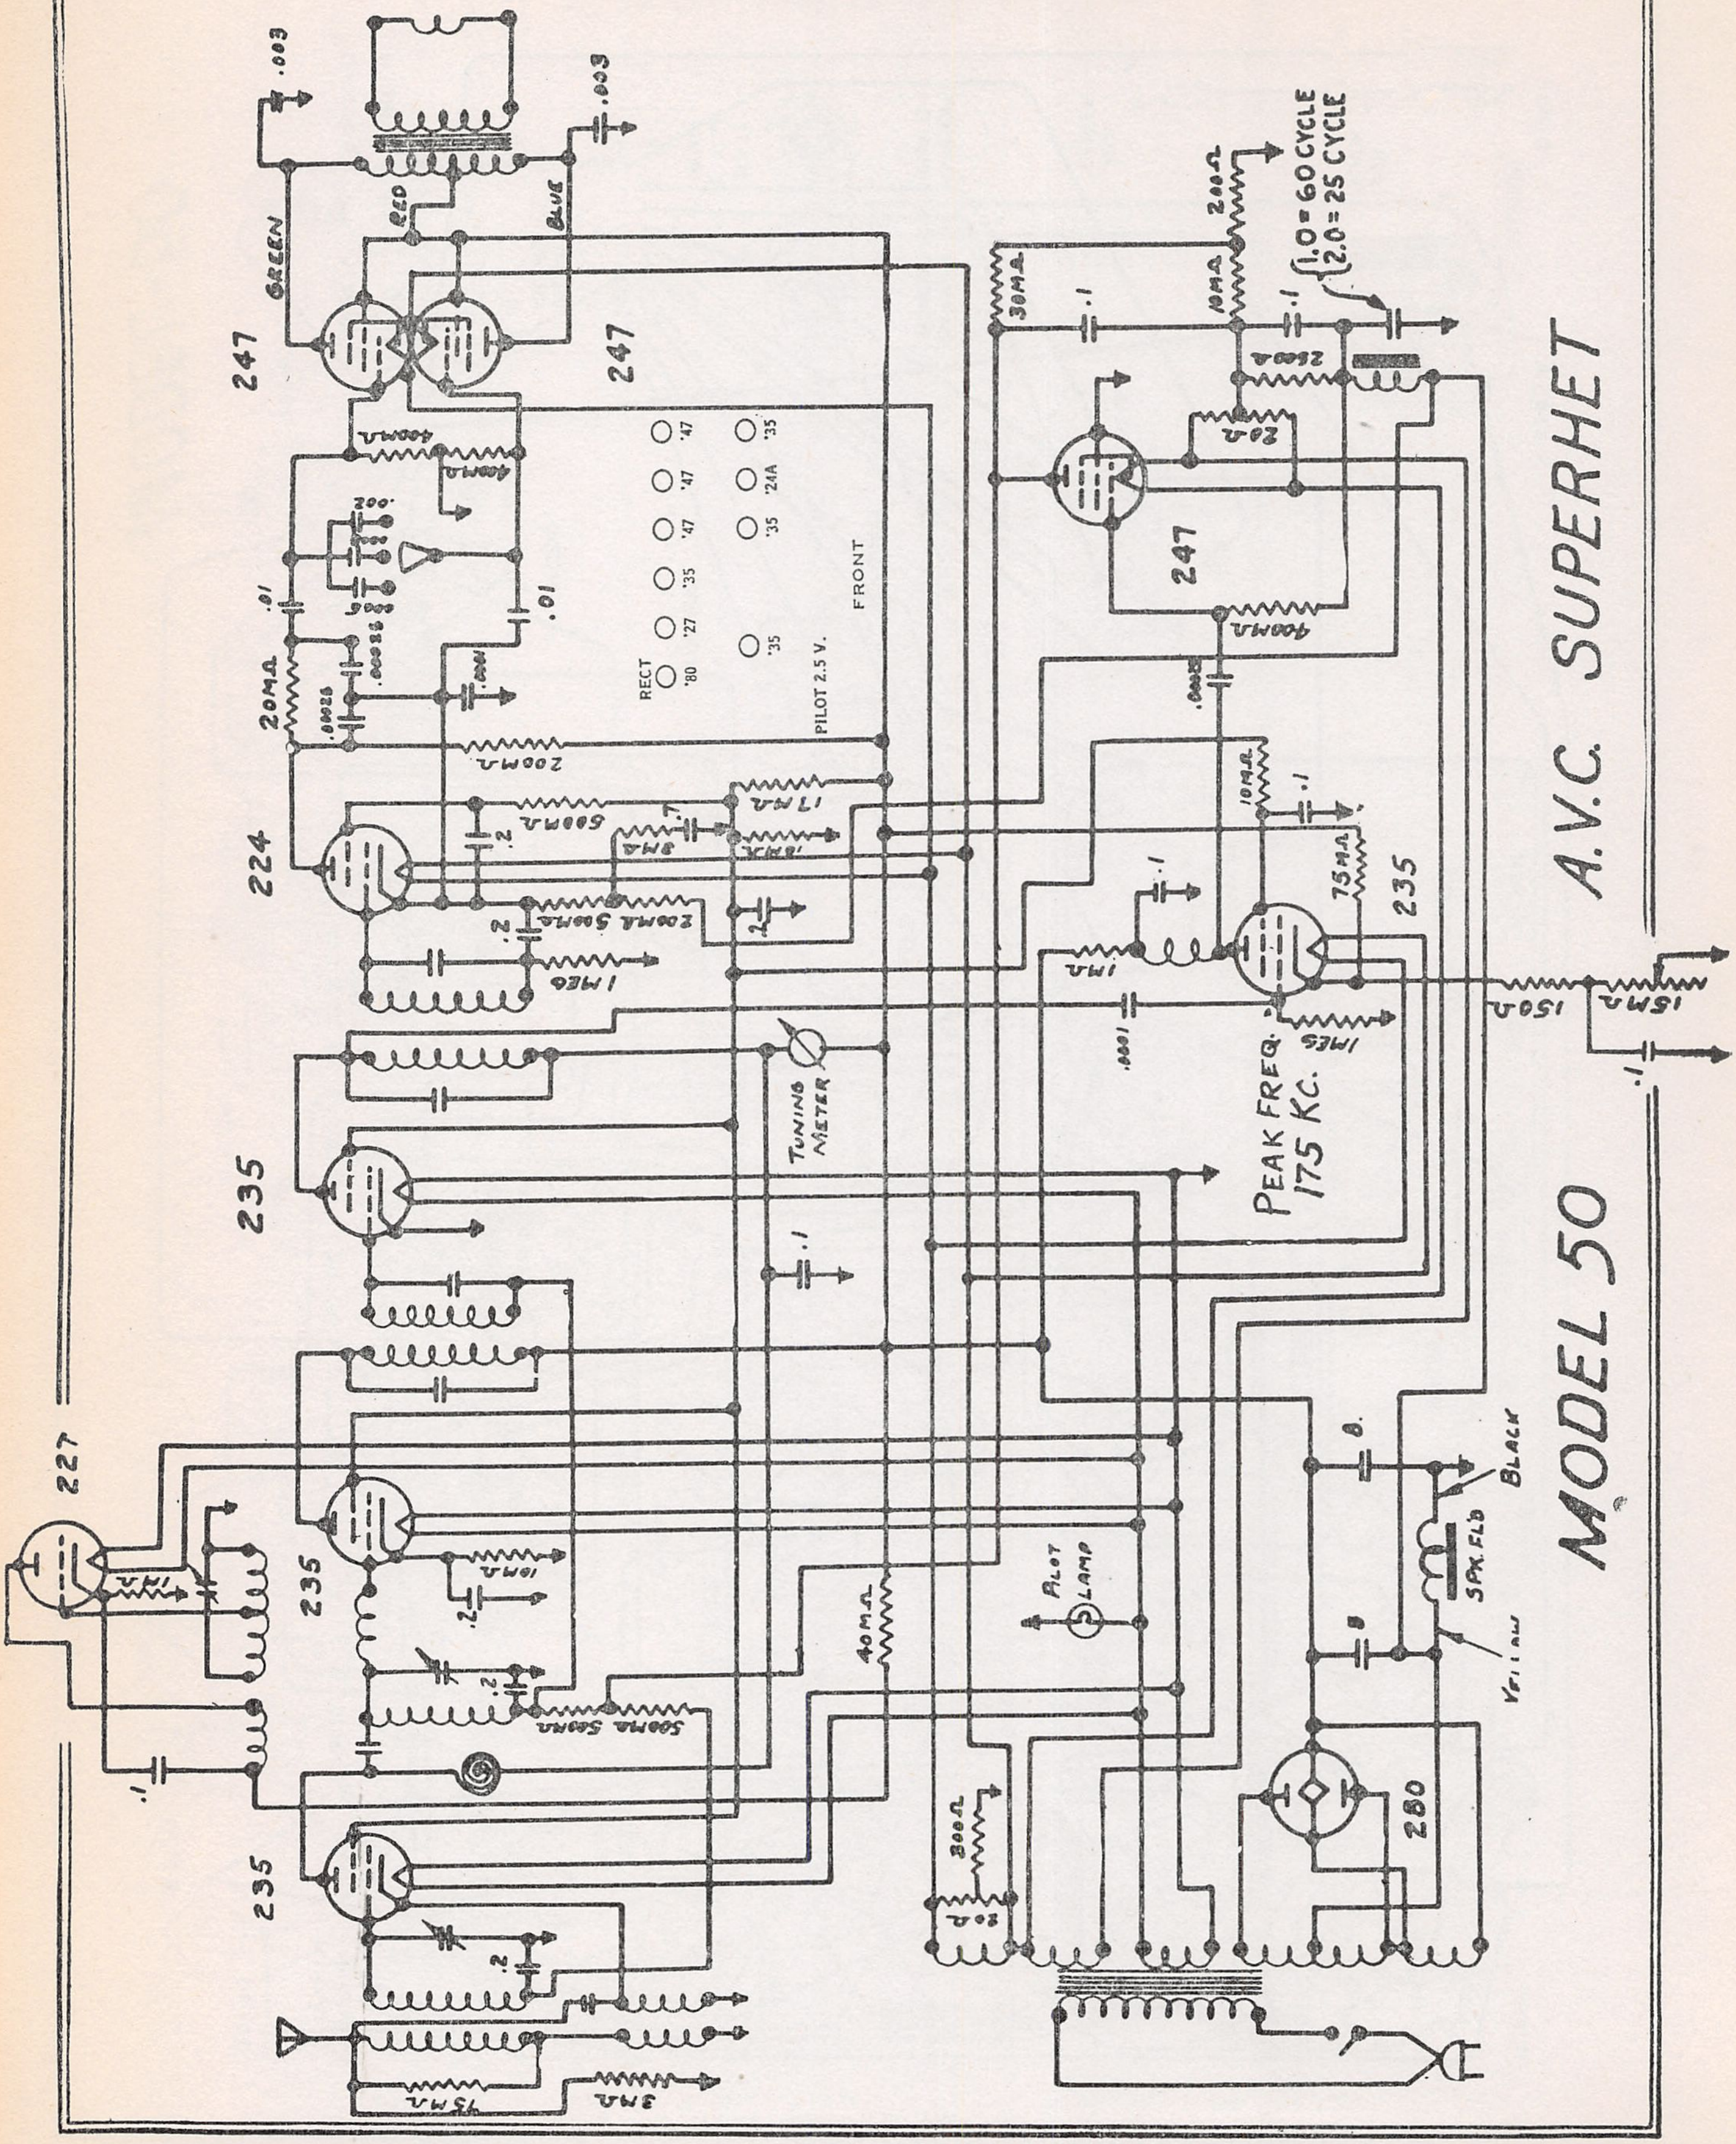
247
247
247
224
235
235
235
235
227
280
GREEN
RED
BLUE
.003
.003
400MΩ
400MΩ
200MΩ
20MΩ
.01
.01
.00025
.0005
500MΩ
8MΩ
17MΩ
10MΩ
1MEG
1MEG
1MEG
500MΩ
200MΩ
.2
.1
30MΩ
10MΩ
200Ω
2000Ω
20Ω
1.0=60 CYCLE
2.0=25 CYCLE
75MΩ
10MΩ
15MΩ
150Ω
.0001
40MΩ
300Ω
20Ω
75MΩ
3MΩ
RECT
'80
'27
'35
'47
'47
'47
'35
'35
'24A
'35
PILOT 2.5 V.
FRONT
TUNING METER
PEAK FREQ. 175 KC.
PILOT LAMP
SPK. FLD
BLACK
YELLOW
8
8
A.V.C. SUPERHET
MODEL 50

MODEL 50 AVC
Voltage
Parts Coding

COLONIAL RADIO CORP.

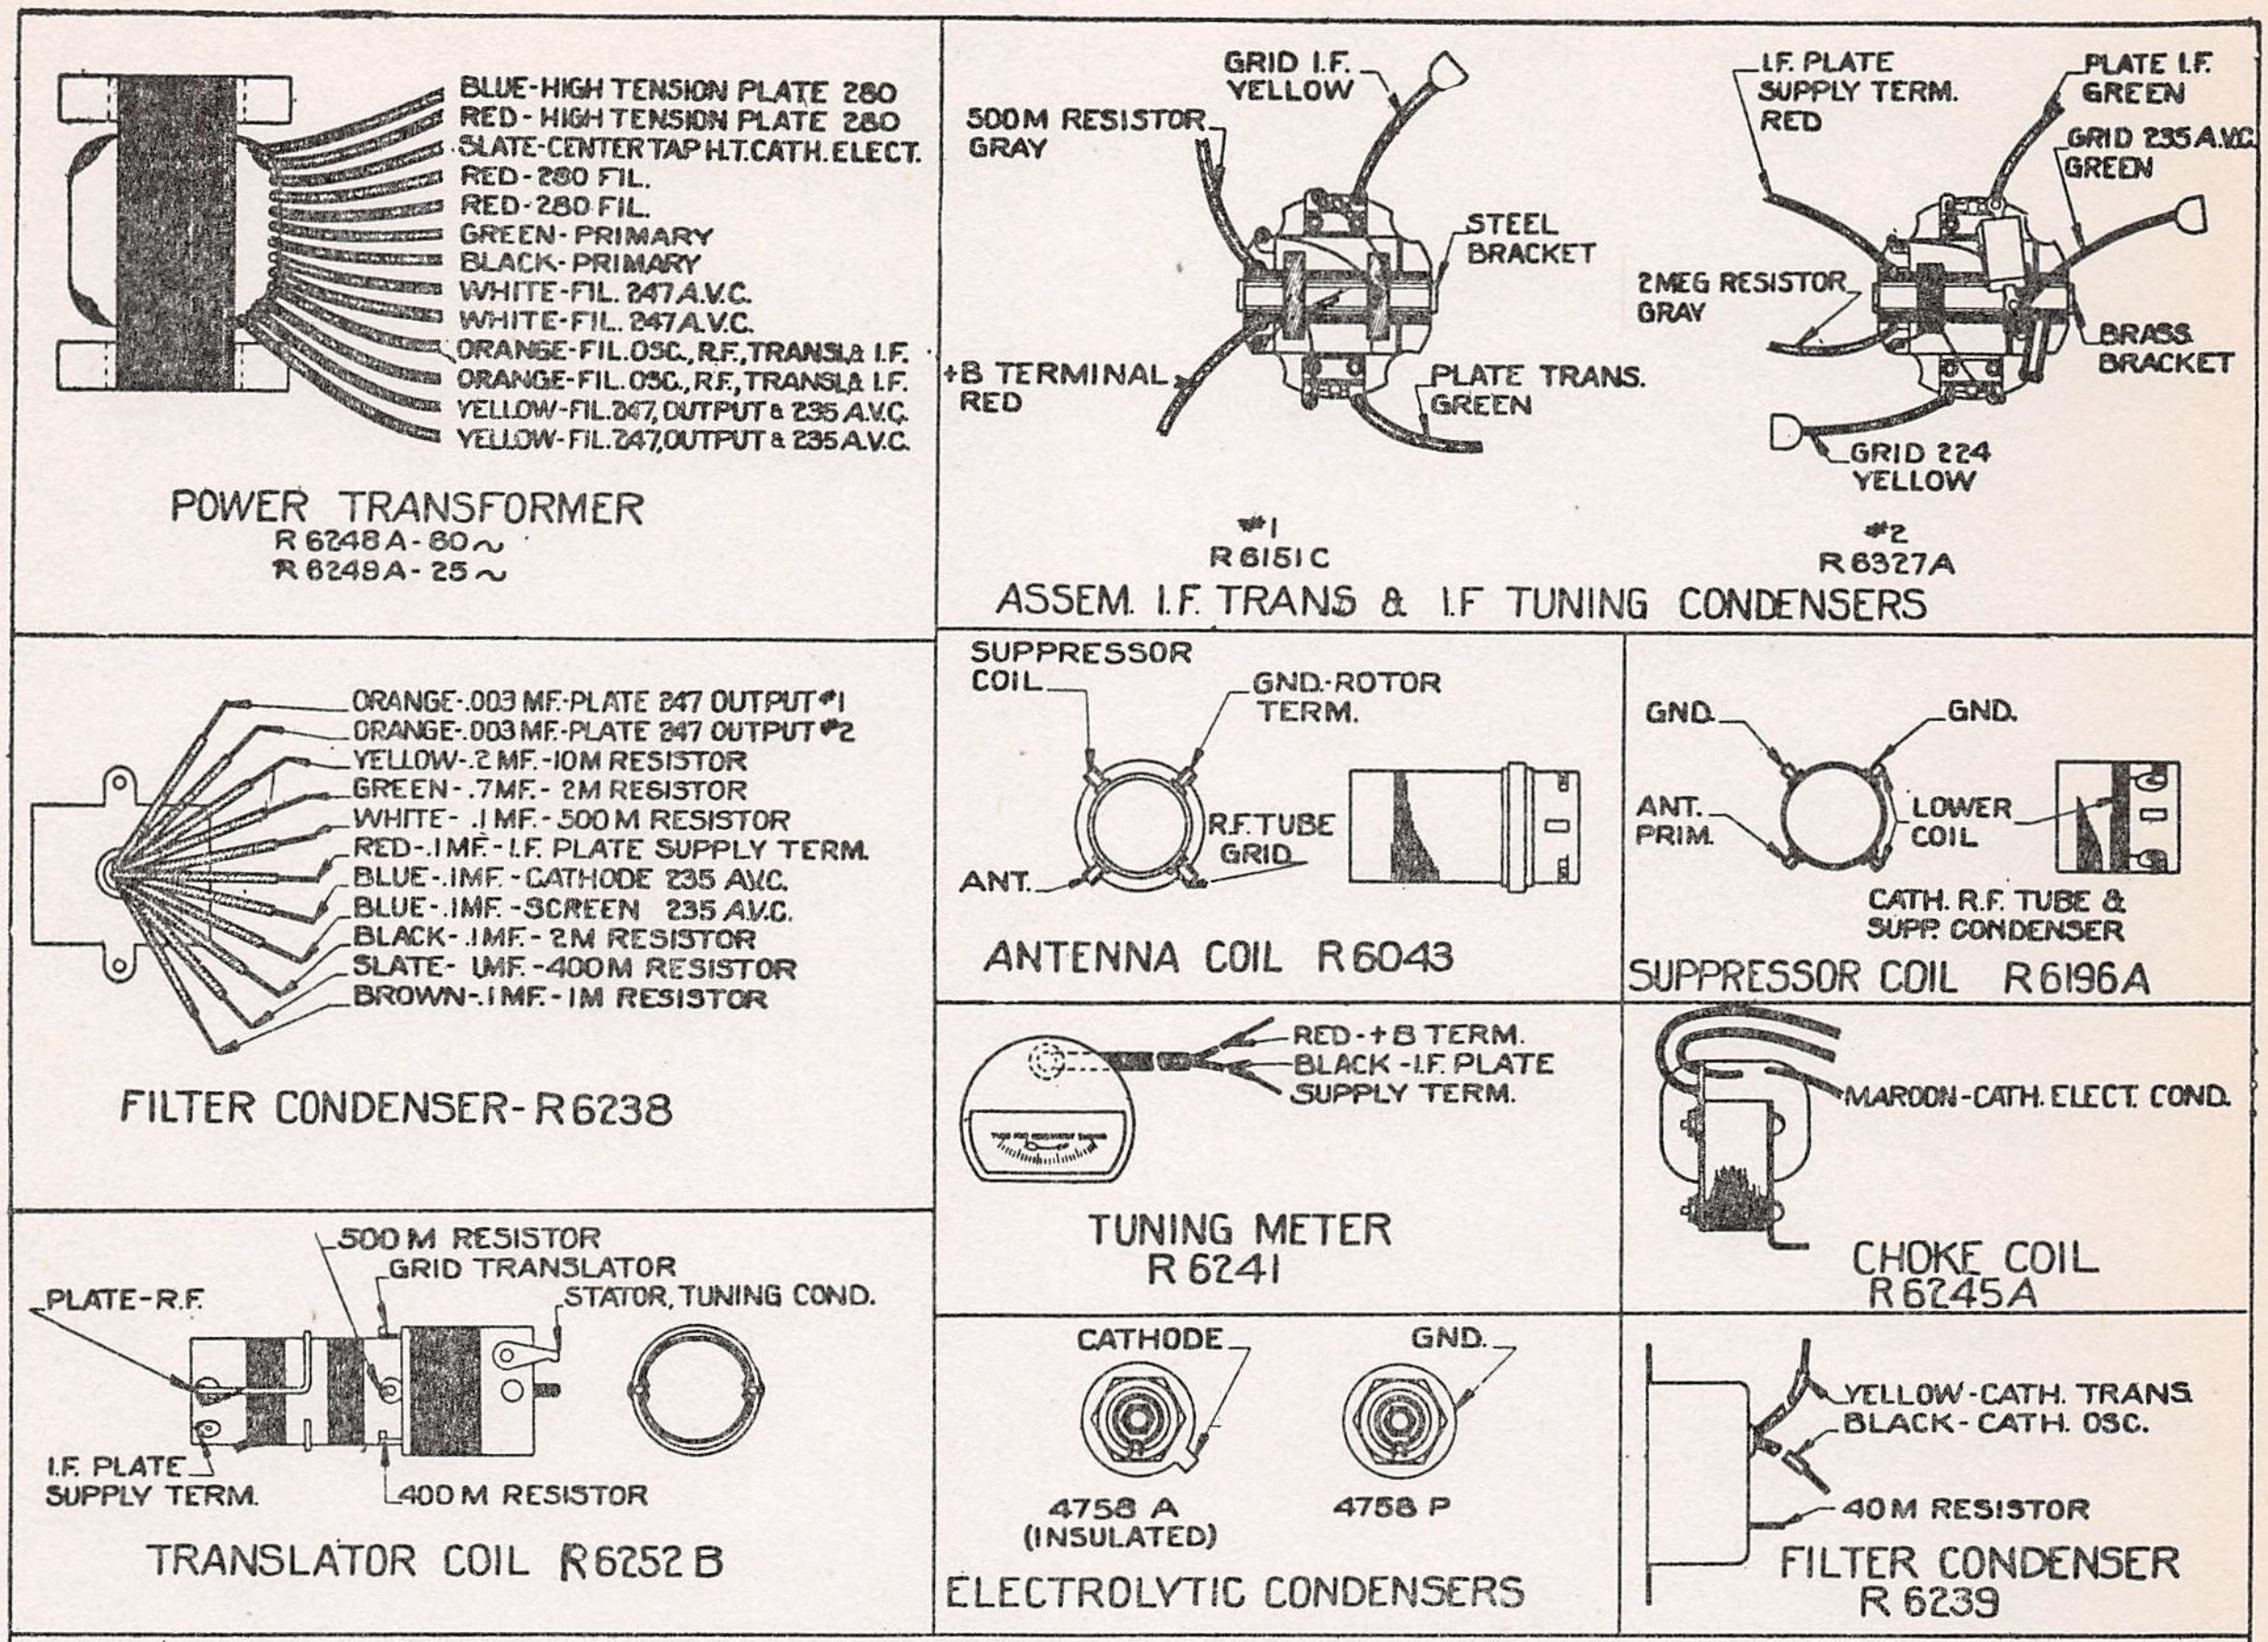
BLUE-HIGH TENSION PLATE 280
RED-HIGH TENSION PLATE 280
SLATE-CENTER TAP H.T. CATH. ELECT.
RED-280 FIL.
RED-280 FIL.
GREEN-PRIMARY
BLACK-PRIMARY
WHITE-FIL. 247 A.V.C.
WHITE-FIL. 247 A.V.C.
ORANGE-FIL. OSC., R.F., TRANSL.& I.F.
ORANGE-FIL. OSC., R.F., TRANSL.& I.F.
YELLOW-FIL. 247, OUTPUT & 235 A.V.C.
YELLOW-FIL. 247, OUTPUT & 235 A.V.C.
POWER TRANSFORMER
R 6248 A - 60 ~
R 6249 A - 25 ~
GRID I.F. YELLOW
500M RESISTOR GRAY
STEEL BRACKET
+B TERMINAL RED
PLATE TRANS. GREEN
#1
R 6151 C
I.F. PLATE SUPPLY TERM. RED
PLATE I.F. GREEN
GRID 235 A.V.C. GREEN
2MEG RESISTOR GRAY
BRASS BRACKET
GRID 224 YELLOW
#2
R 6327 A
ASSEM. I.F. TRANS & I.F TUNING CONDENSERS
ORANGE-.003 MF.-PLATE 247 OUTPUT #1
ORANGE-.003 MF.-PLATE 247 OUTPUT #2
YELLOW-.2 MF.-10M RESISTOR
GREEN-.7 MF.-2M RESISTOR
WHITE-.1 MF.-500 M RESISTOR
RED-.1 MF.-I.F. PLATE SUPPLY TERM.
BLUE-.1 MF.-CATHODE 235 A.V.C.
BLUE-.1 MF.-SCREEN 235 A.V.C.
BLACK-.1 MF.-2M RESISTOR
SLATE-.1 MF.-400 M RESISTOR
BROWN-.1 MF.-1M RESISTOR
FILTER CONDENSER-R 6238
SUPPRESSOR COIL
GND.-ROTOR TERM.
R.F. TUBE GRID
ANT.
ANTENNA COIL R 6043
GND.
GND.
ANT. PRIM.
LOWER COIL
CATH. R.F. TUBE & SUPP. CONDENSER
SUPPRESSOR COIL R 6196 A
RED-+B TERM.
BLACK-I.F. PLATE SUPPLY TERM.
TUNING METER
R 6241
MAROON-CATH. ELECT. COND.
CHOKE COIL
R 6245 A
500 M RESISTOR
GRID TRANSLATOR
PLATE-R.F.
STATOR, TUNING COND.
I.F. PLATE SUPPLY TERM.
400 M RESISTOR
TRANSLATOR COIL R 6252 B
CATHODE
GND.
4758 A
(INSULATED)
4758 P
ELECTROLYTIC CONDENSERS
YELLOW-CATH. TRANS.
BLACK-CATH. OSC.
40 M RESISTOR
FILTER CONDENSER
R 6239

LEAD DETAILS OF POWER TRANSFORMER-I.F. TRANS.-I.F. TUNING COND.-FILTER COND.-ELECTROLYTIC COND.-ANTENNA, SUPPRESSOR, TRANSLATOR AND CHOKE COILS-TUNING METER.

MODEL 1430 - 60 CYCLE
Line Voltage 115
Total Watts 100

	Trans	Osc.	IF	RF	Det	#1 247 Output	#2 247 Output	AVC Amp 235	AVC 247	280 AC	280 DC
Plate Voltage	230	20	230	230	160	230	230	230		340	340
Screen Voltage	70		70	70	25	230	230	70	100		
Grid Voltage	var		var.	var.	20	15	15	var.	18		
Filament Voltage	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	4.85		

Speaker Field Voltage - 110
Total Plate Current - 80 ma.

Note: All voltages measured with a 1000 ohm per volt meter, 250 volt scale, with volume level control at maximum. 247 output grid voltages were measured from filament to ground, and translator grid from cathode to ground. Grid voltages on the RF and IF will be variable when the set is operating. AVC plate voltages will be the grid voltages on RF IF and translator tubes.

Notes-Causes of no signals can be traced to some of the following reasons. Grid clips shorted to tops of tube shields. Open or shorted condensers. Unsoldered leads. Solder under tube socket terminals. Defective tubes. Oscillator not working. Open image suppressor coil. Defective speaker or shorted tone control connection. Poor quality can be traced to defective output or detector tubes. Set not tuned properly. A poor 235 in the IF, RF or translator sockets will give poor quality and unsatisfactory volume control. Shorted or open grid coupling condenser in the audio circuit, or open resistors in the audio circuits will also contribute to poor quality. Oscillation can be traced to defective tubes, grid leads of detector and IF too close, or an open condenser in the plate circuit of the translator.

MODEL-50

COLUMBIA PHONOGRAPH COMPANY

MODEL 31,33
Layout
Notes

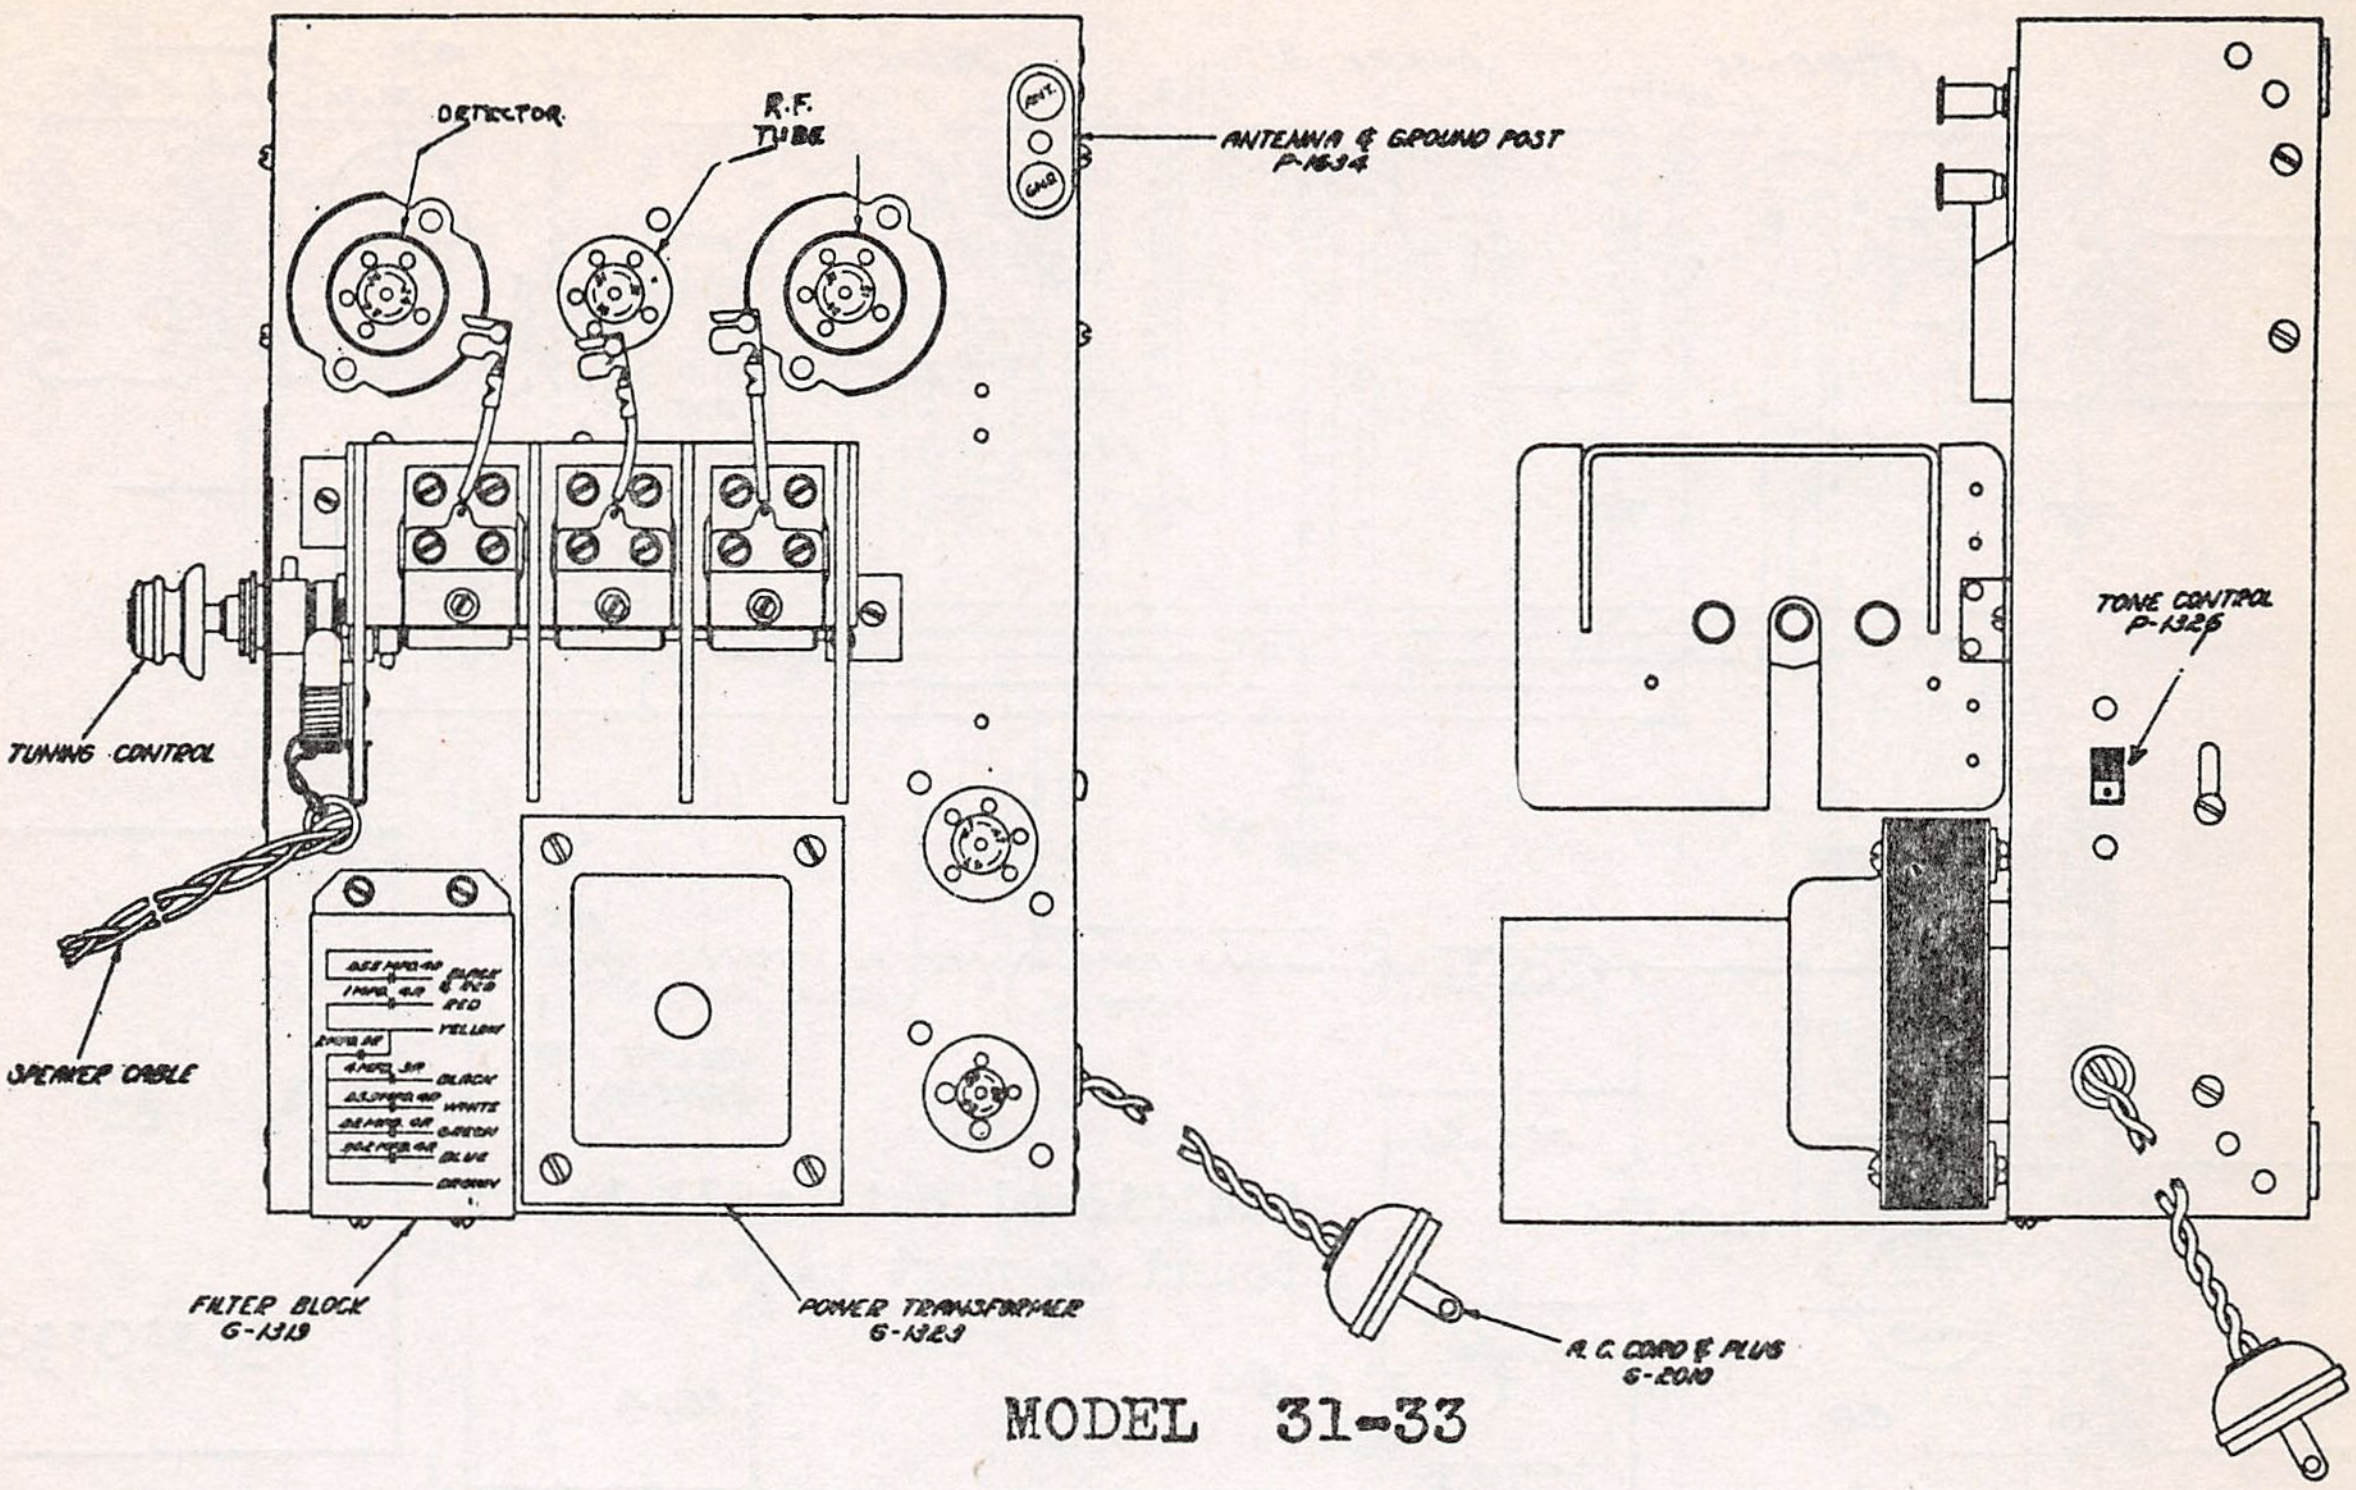
DETECTOR
R.F. TUBE
ANTENNA & GROUND POST P-1634
ANT.
GND
TUNING CONTROL
SPEAKER CABLE
BLACK & RED
RED
YELLOW
BLACK
WHITE
GREEN
BLUE
BROWN
FILTER BLOCK G-1319
POWER TRANSFORMER G-1323
A.C. CORD & PLUG G-2010
TONE CONTROL P-1326

MODEL 31-33

MODEL 40 CONTINUITY TEST TABLES

(Using 10-volt scale 1,000 ohms per volt: meter with 6-volt battery)

Circuit Tested	From	To	Reading	Your Reading
Ant. coil pri.	Ant. post	Ground	6.	
Ant. coil sec.	Grid 1st tube	Ground	6.	
1st R. F. Plate ckt.	Plate of tube	Brown lead of filter pack	6.	
1st R. F. Screen ckt.	Screen prong	Center lead, Voltage divider	6.	
1st R. F. Cathode ckt.	Cath. prong	Center tap Volume Control "ON"	6.	
2nd R. F. Grid ckt.	Grid Clip	Ground	6.	
2nd R. F. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
2nd R. F. Screen ckt.	Screen prong	Center tap Voltage divider	6.	
2nd R. F. Cathode ckt.	Cathode prong	Center tap Volume Control "ON"	6.	
Det. Grid ckt.	Gird Clip	Ground	6.	
Det. Plate ckt.	Plate prong	Brown lead of filter pack	6.	
Det. Screen ckt.	Screen prong	Center Voltage divider	6.	
Det. Cathode ckt.	Cathode prong	Ground	1.4	
P. Z. cont. grid	Grid prong	Sec output trans. black lead	(slight deflection)	
P. Z. space chg. grid ckt.	S. C. Grid Prong	Brown lead of filter pack	6.	
P. Z. Plate ckt.	Plate prong	Brown lead of filter pack	5.7	
Output Sec.	One side	Other side	5.9	
Pri Power Trans.	Across A. C. Plug	Switch on	5.9	
Hi volts Sec.	Across 280 plate prongs		5.6	
Speaker field	Red wire	Green Wire	5.4	
Speaker voice coil	Green wire	Black	6.	
Filter Choke	Across red leads		5.6	
Voltage divider	Ground	Brown lead of filter pack	2.2	

RESISTANCE TABLE MODEL 40

(Using 10-volt range meter 1,000 ohms per volt and 6-volt battery)

Item	Color Code*	From	To	Reading	Your Reading	Resistance in Ohms
Det. Cath. Resistor	Yel., Blk., Or.	Det. Cath.	Gnd.	1.3		40,000
Pent. Grid Resistor	Br. Blk. Green	Pent Grid	Spkr. Field	Slight Deflection		1,000,000
Wire Wound	Black	Voice Coil, Black	Gnd.	5.9		260
Voltage Divider, Short End	Black	Volume Cont. Green Lead	S. G. Ckt.	4.2		4,100
Voltage Divider, Long End	Black	Plate	S. G. Ckt.	3.		11,000
Det. Plate Resistor	Gr., Blk., Yellow	Det. Plate	Pent. Space Chg. Grid.	.1		500,000
Vol. Control "on"		Gnd.	R. F. Cathode	4.2		4,100

*Color code: read body color first, tip second and dot last.

MODEL 31,33
Schematic
Voltage
Layout

COLUMBIA PHONOGRAPH COMPANY

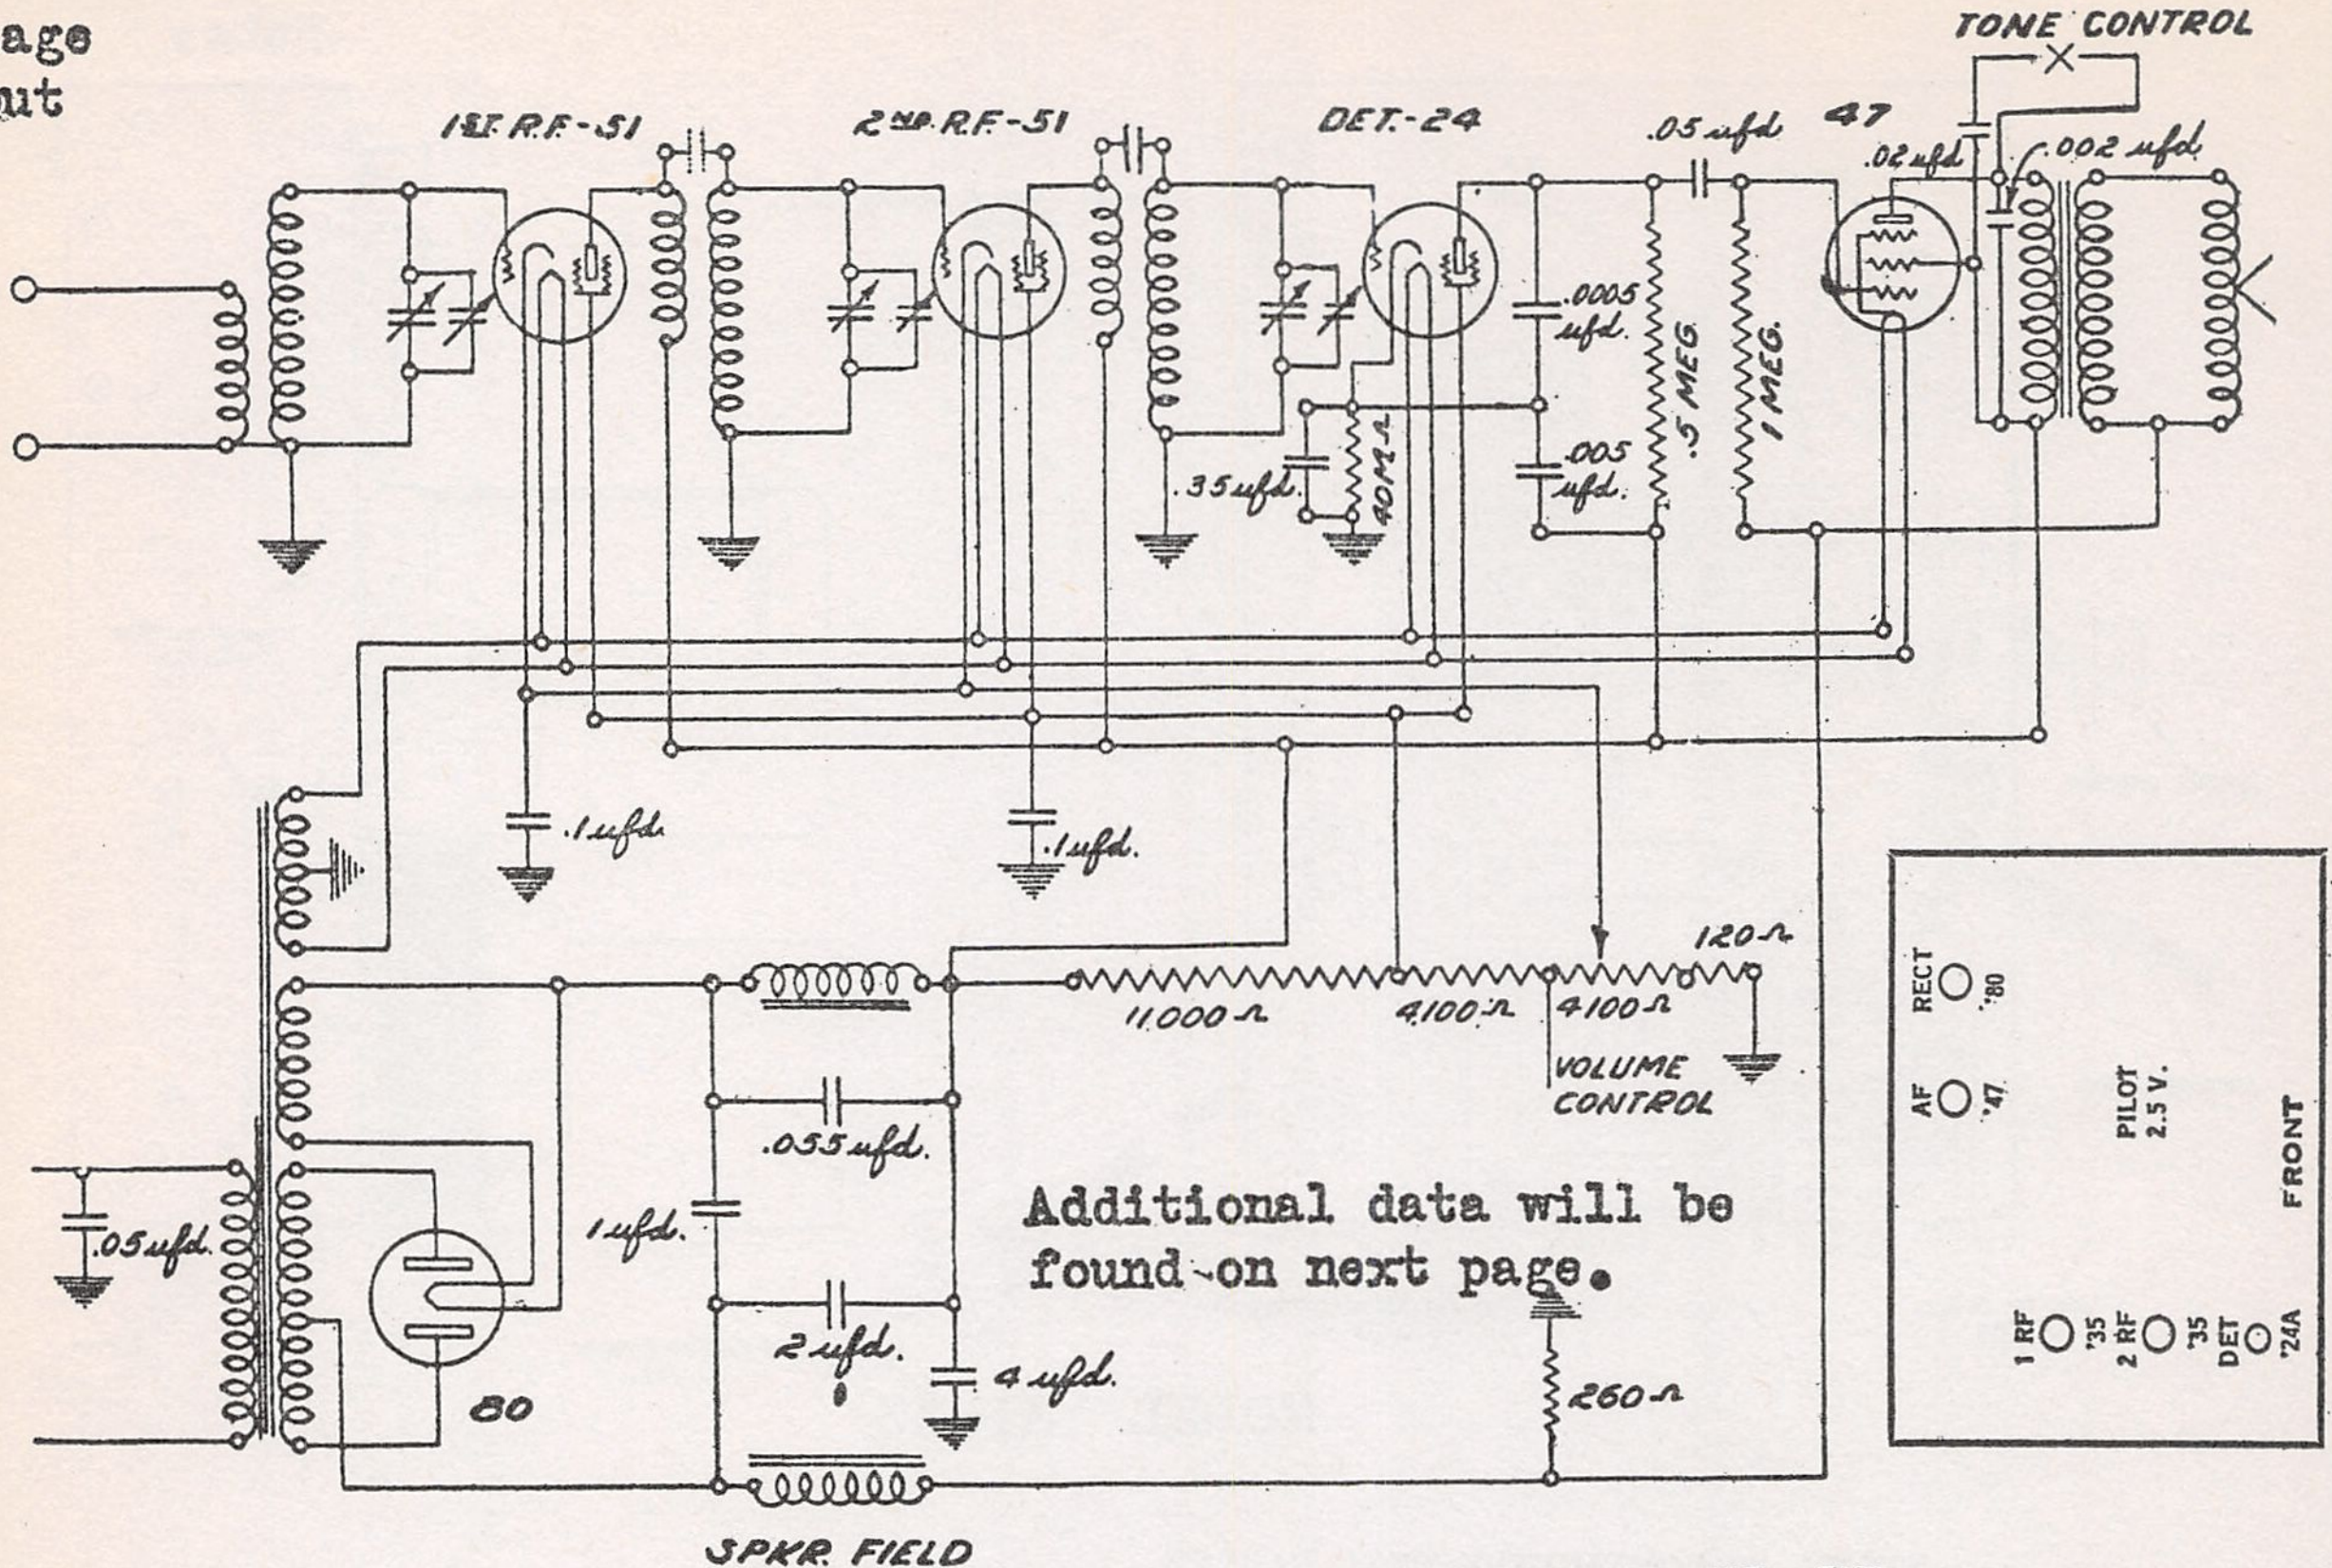
TONE CONTROL
1st. R.F.-51
2nd R.F.-51
DET.-24
.05 ufd.
47
.02 ufd.
.002 ufd.
.0005 ufd.
.005 ufd.
.5 MEG.
1 MEG.
.35 ufd.
40M Ω
.1 ufd.
.1 ufd.
120 Ω
11,000 Ω
4100 Ω
4100 Ω
VOLUME CONTROL
.055 ufd.
1 ufd.
2 ufd.
4 ufd.
.05 ufd.
80
260 Ω
SPKR. FIELD

Additional data will be found on next page.

RECT '80
AF '47
PILOT 2.5 V.
FRONT
1 RF '35
2 RF '35
DET '24A

MODEL 31-33

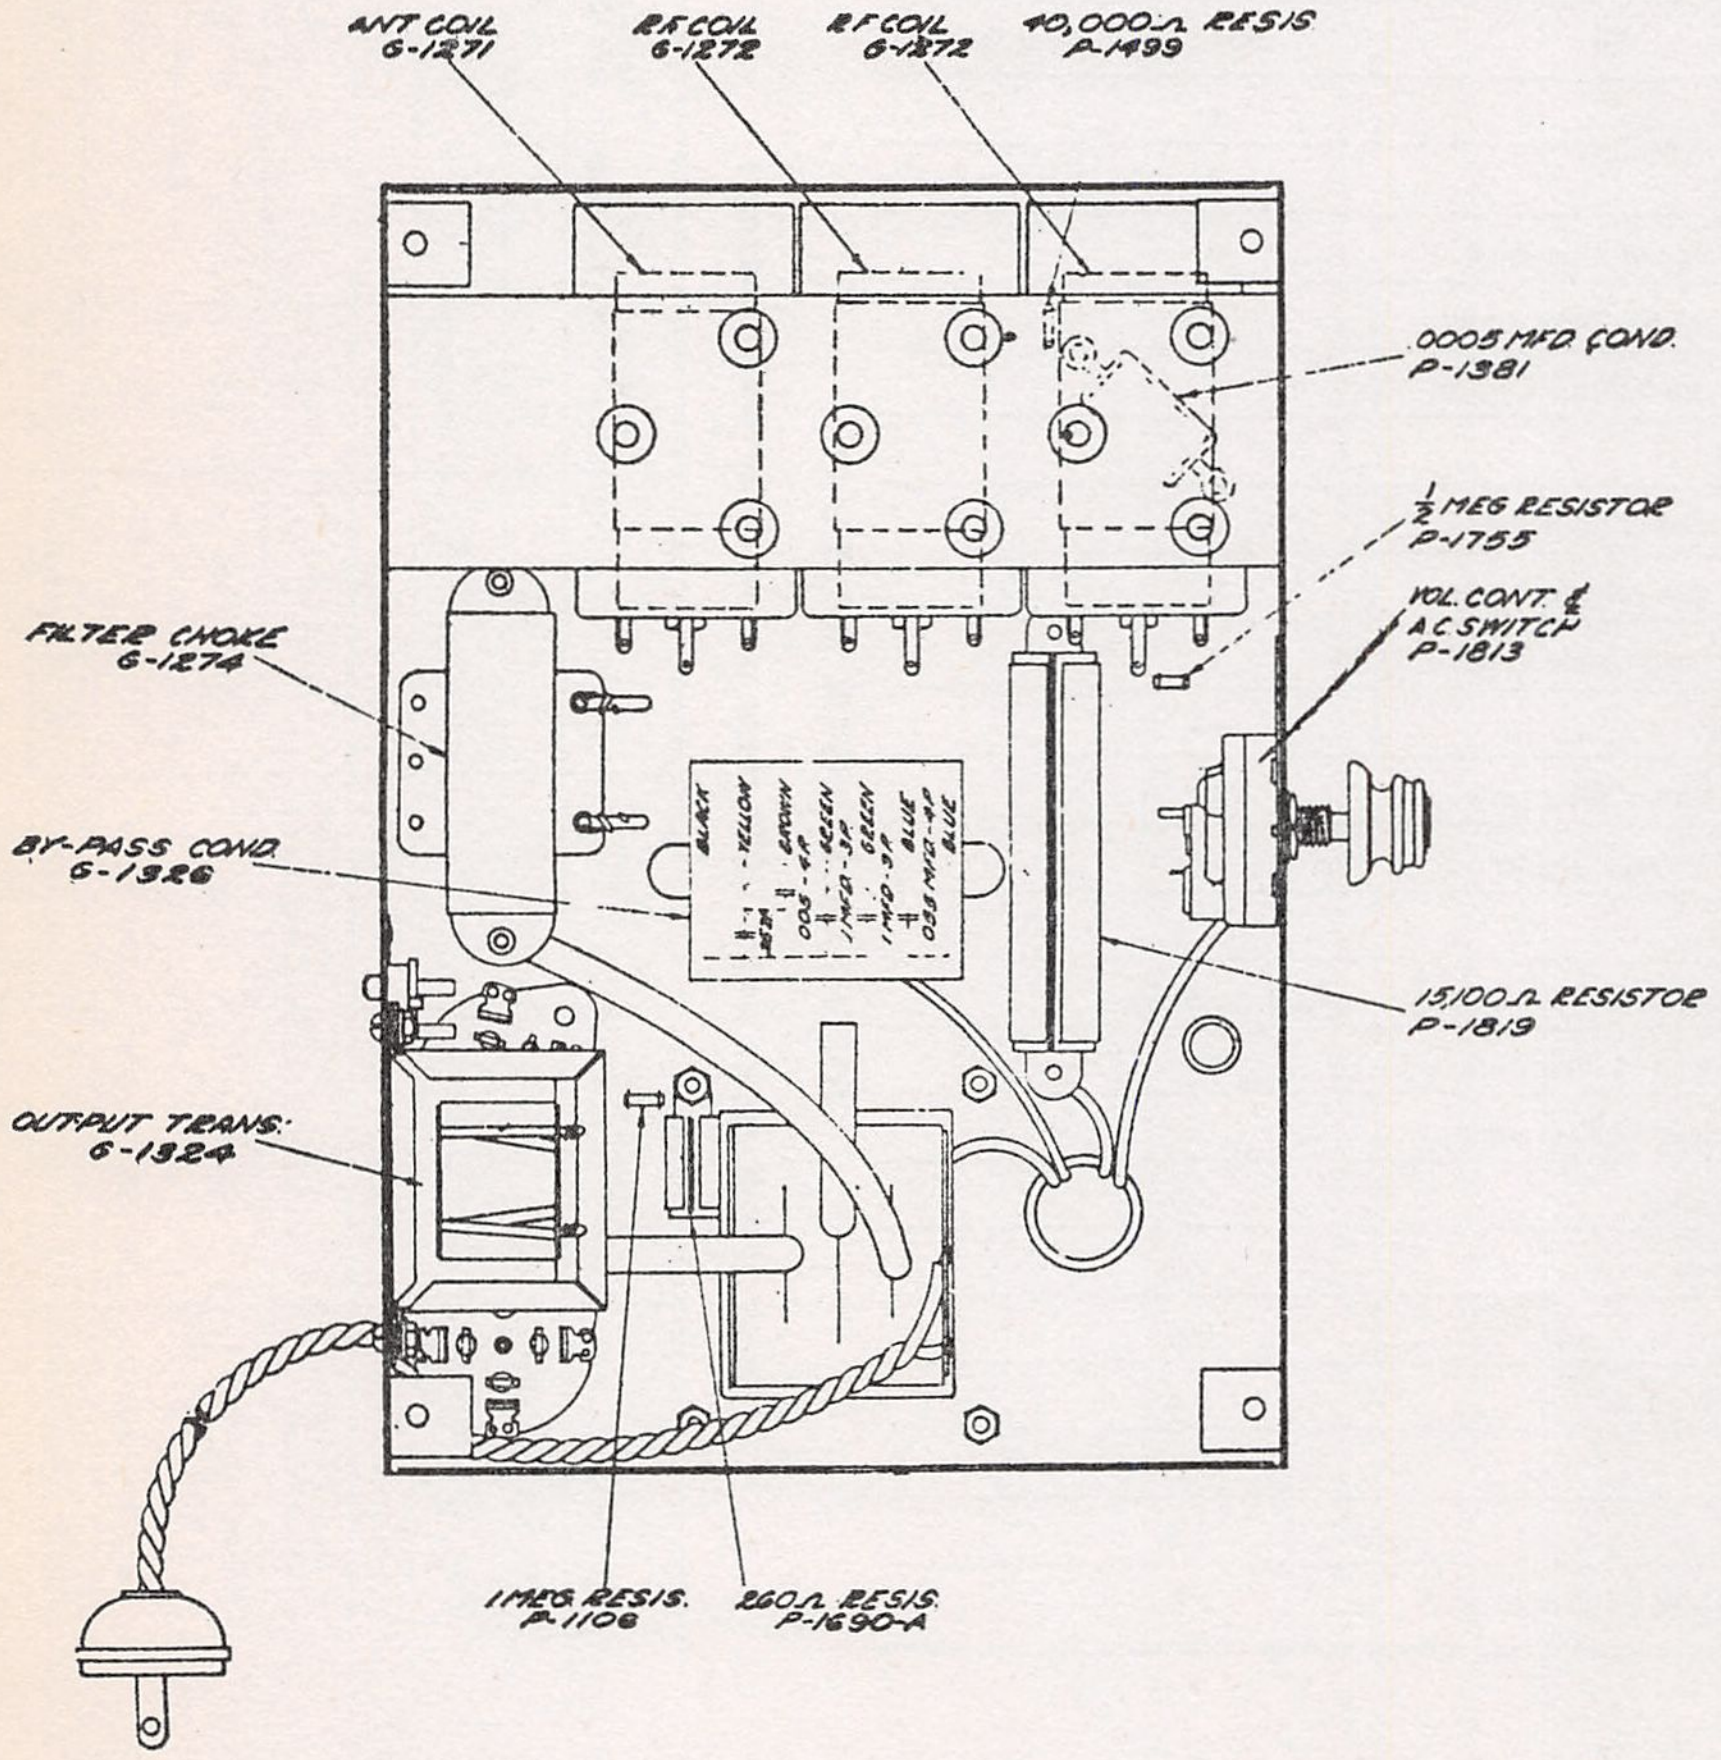
ANT COIL G-1271
R.F. COIL G-1272
R.F. COIL G-1272
40,000 Ω RESIS. P-1499
.0005 MFD COND. P-1381
½ MEG RESISTOR P-1755
VOL. CONT. & A.C. SWITCH P-1813
FILTER CHOKE G-1274
BY-PASS COND. G-1326
15,100 Ω RESISTOR P-1819
OUTPUT TRANS. G-1324
1 MEG. RESIS. P-1106
260 Ω RESIS. P-1690-A

VOLTAGE ANALYSIS

READINGS TAKEN WITH WESTON MODEL 565 ANALYZER

No.	Stage	Type Tube	Fil. Volts	Plate Volts	Cont. Grid Volts	Cath. Volts	S. G. Volts	Ip. Normal
1	1st R. F.	C. L. 51	2.1	225	2.1	2	75	5
2	2nd R. F.	C. L. 51	2.1	230	2.2	2	75	4.5
3	Det.	C. L. 24	2.1	160*	7	7.5	75	.02
4	Output	C. L. 47	2.1	215	5*	0	225	26.5
5	Rect.	C. L. 80	4.8	280				†30

*Reading dependent upon resistance of meter.

†Reading taken for one anode only: 60 milliamperes would be about correct.

Volume control position full. Line voltage 115—60 cycle.

COLUMBIA PHONOGRAPH COMPANY

MODEL 32, 34
Top View
Bottom View

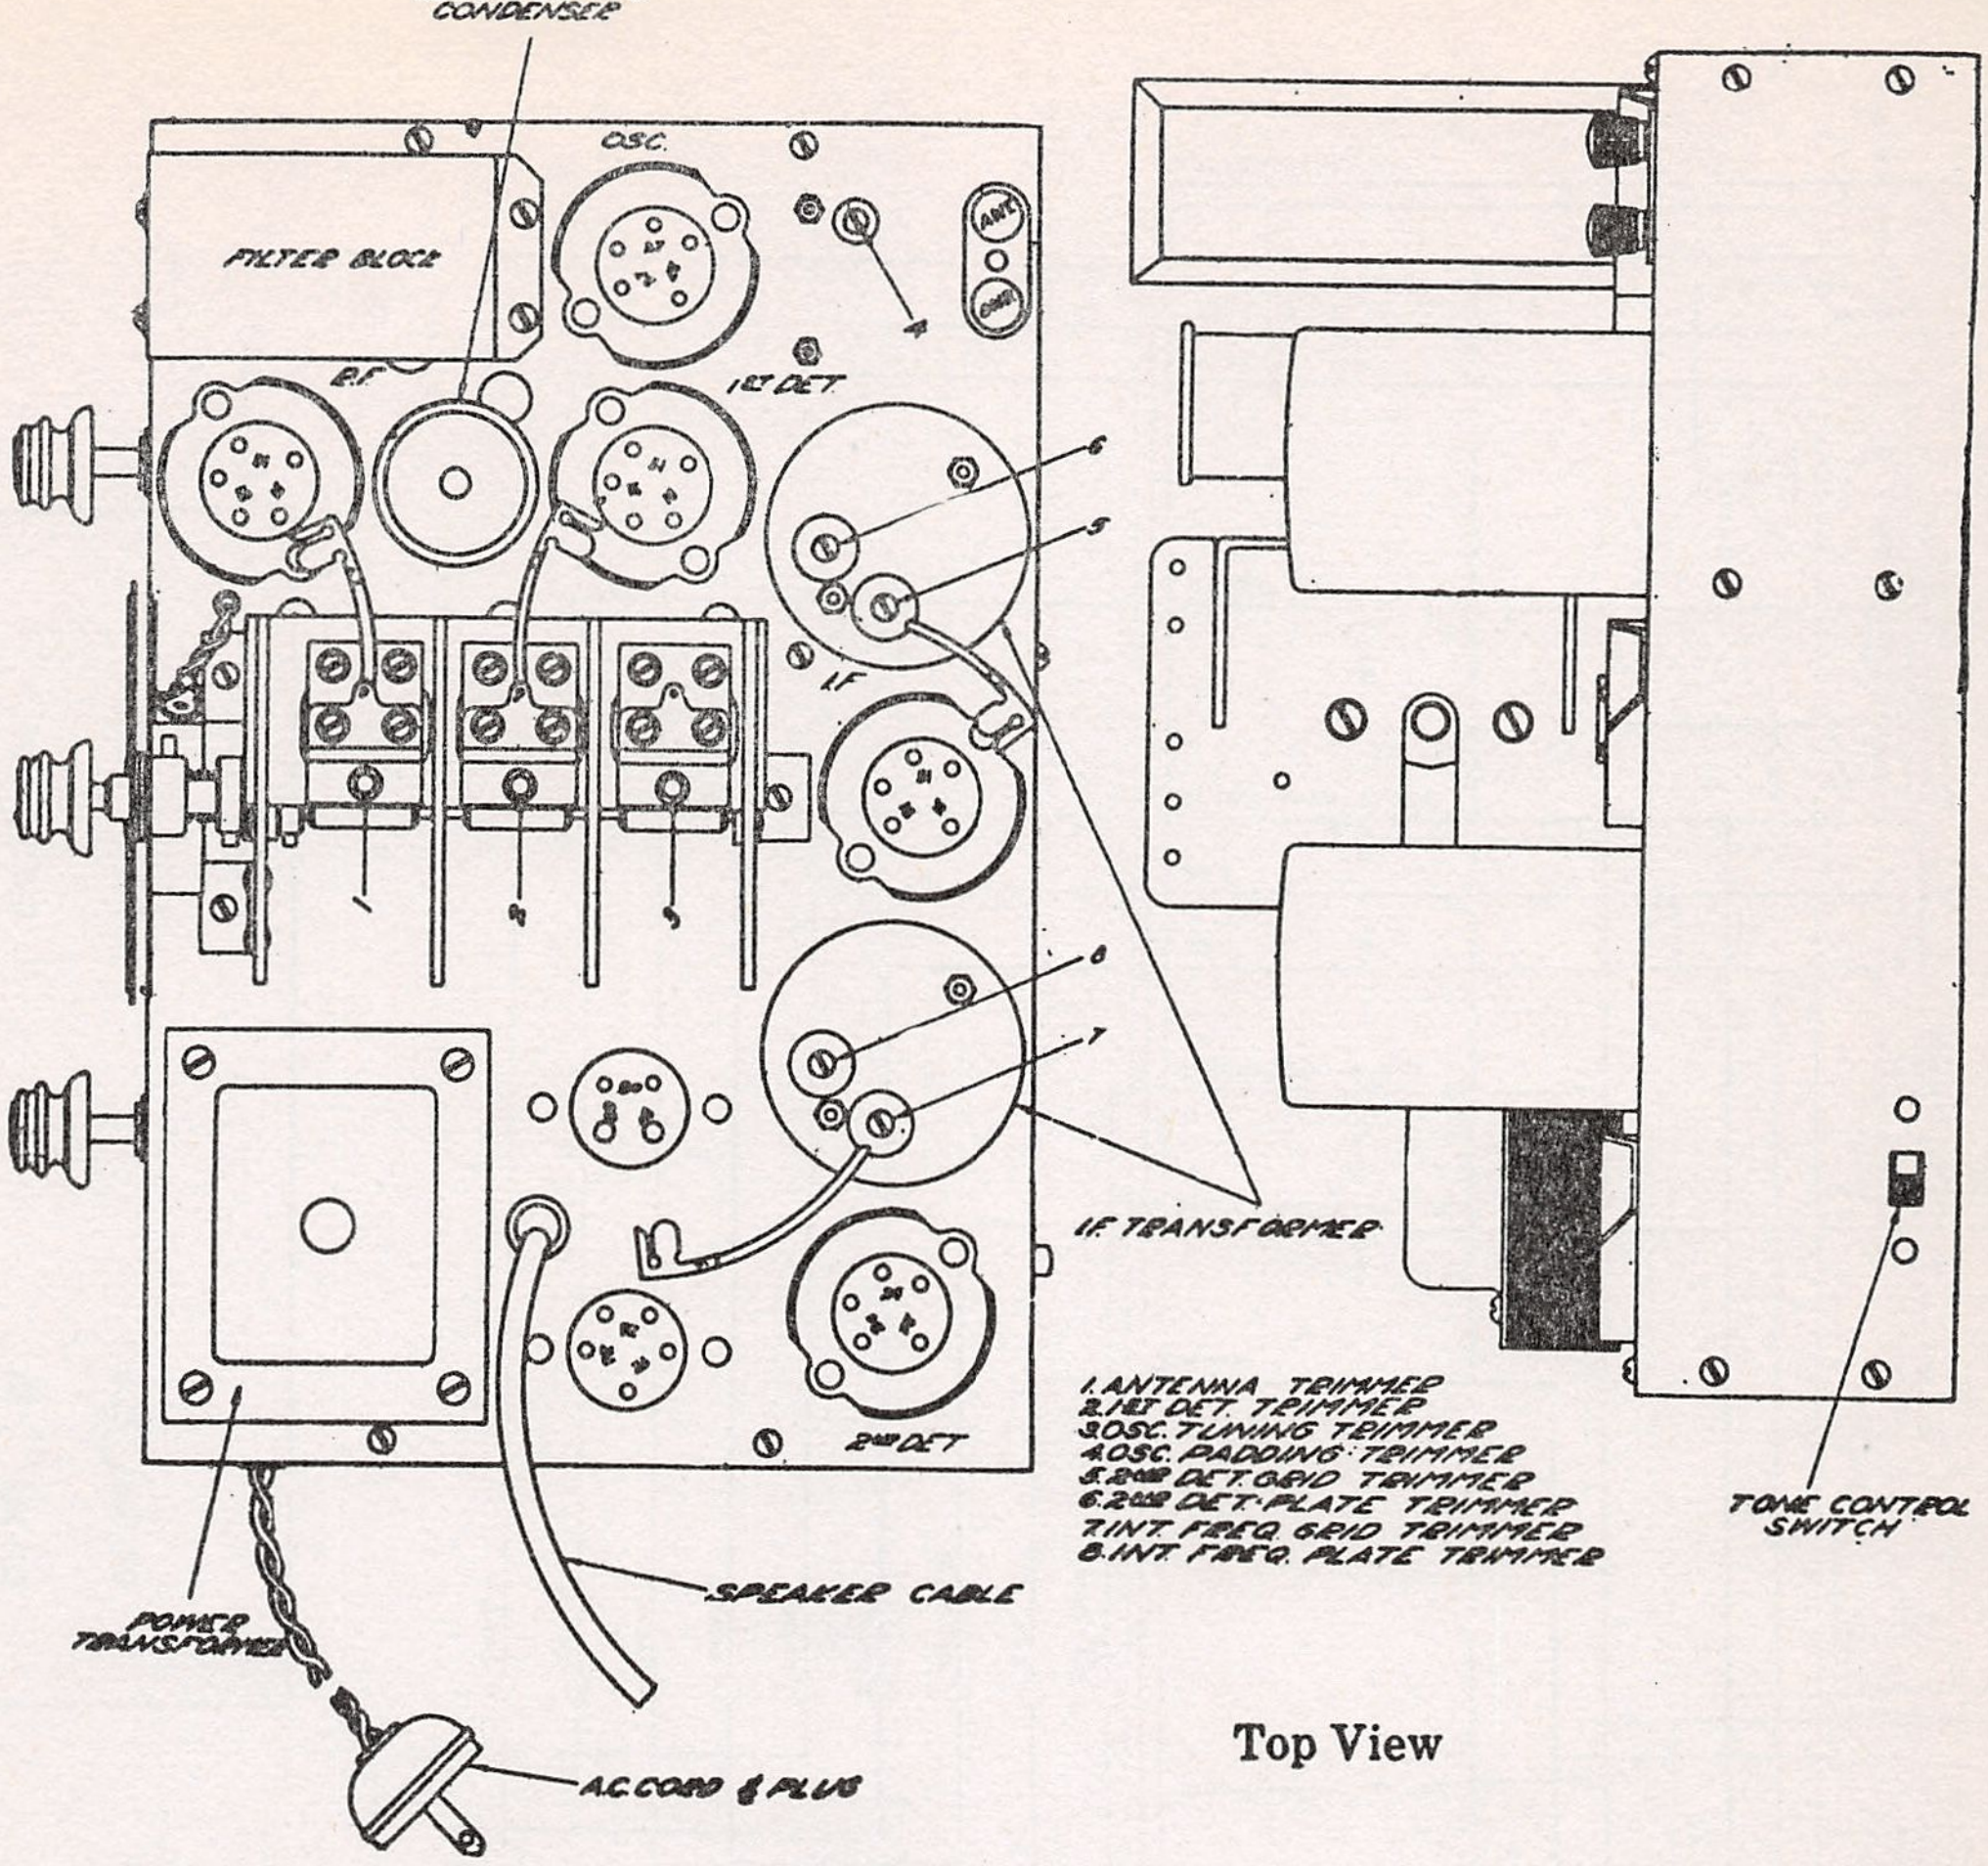
ELECTROLYTIC CONDENSER
FILTER BLOCK
OSC.
R.F.
1ST DET
ANT
GND
I.F.
2ND DET
I.F. TRANSFORMER
POWER TRANSFORMER
SPEAKER CABLE
A.C. CORD & PLUG
TONE CONTROL SWITCH
1
2
3
4
5
6
7
8
1. ANTENNA TRIMMER
2. 1ST DET. TRIMMER
3. OSC. TUNING TRIMMER
4. OSC. PADDING TRIMMER
5. 2ND DET. GRID TRIMMER
6. 2ND DET. PLATE TRIMMER
7. INT. FREQ. GRID TRIMMER
8. INT. FREQ. PLATE TRIMMER

Top View

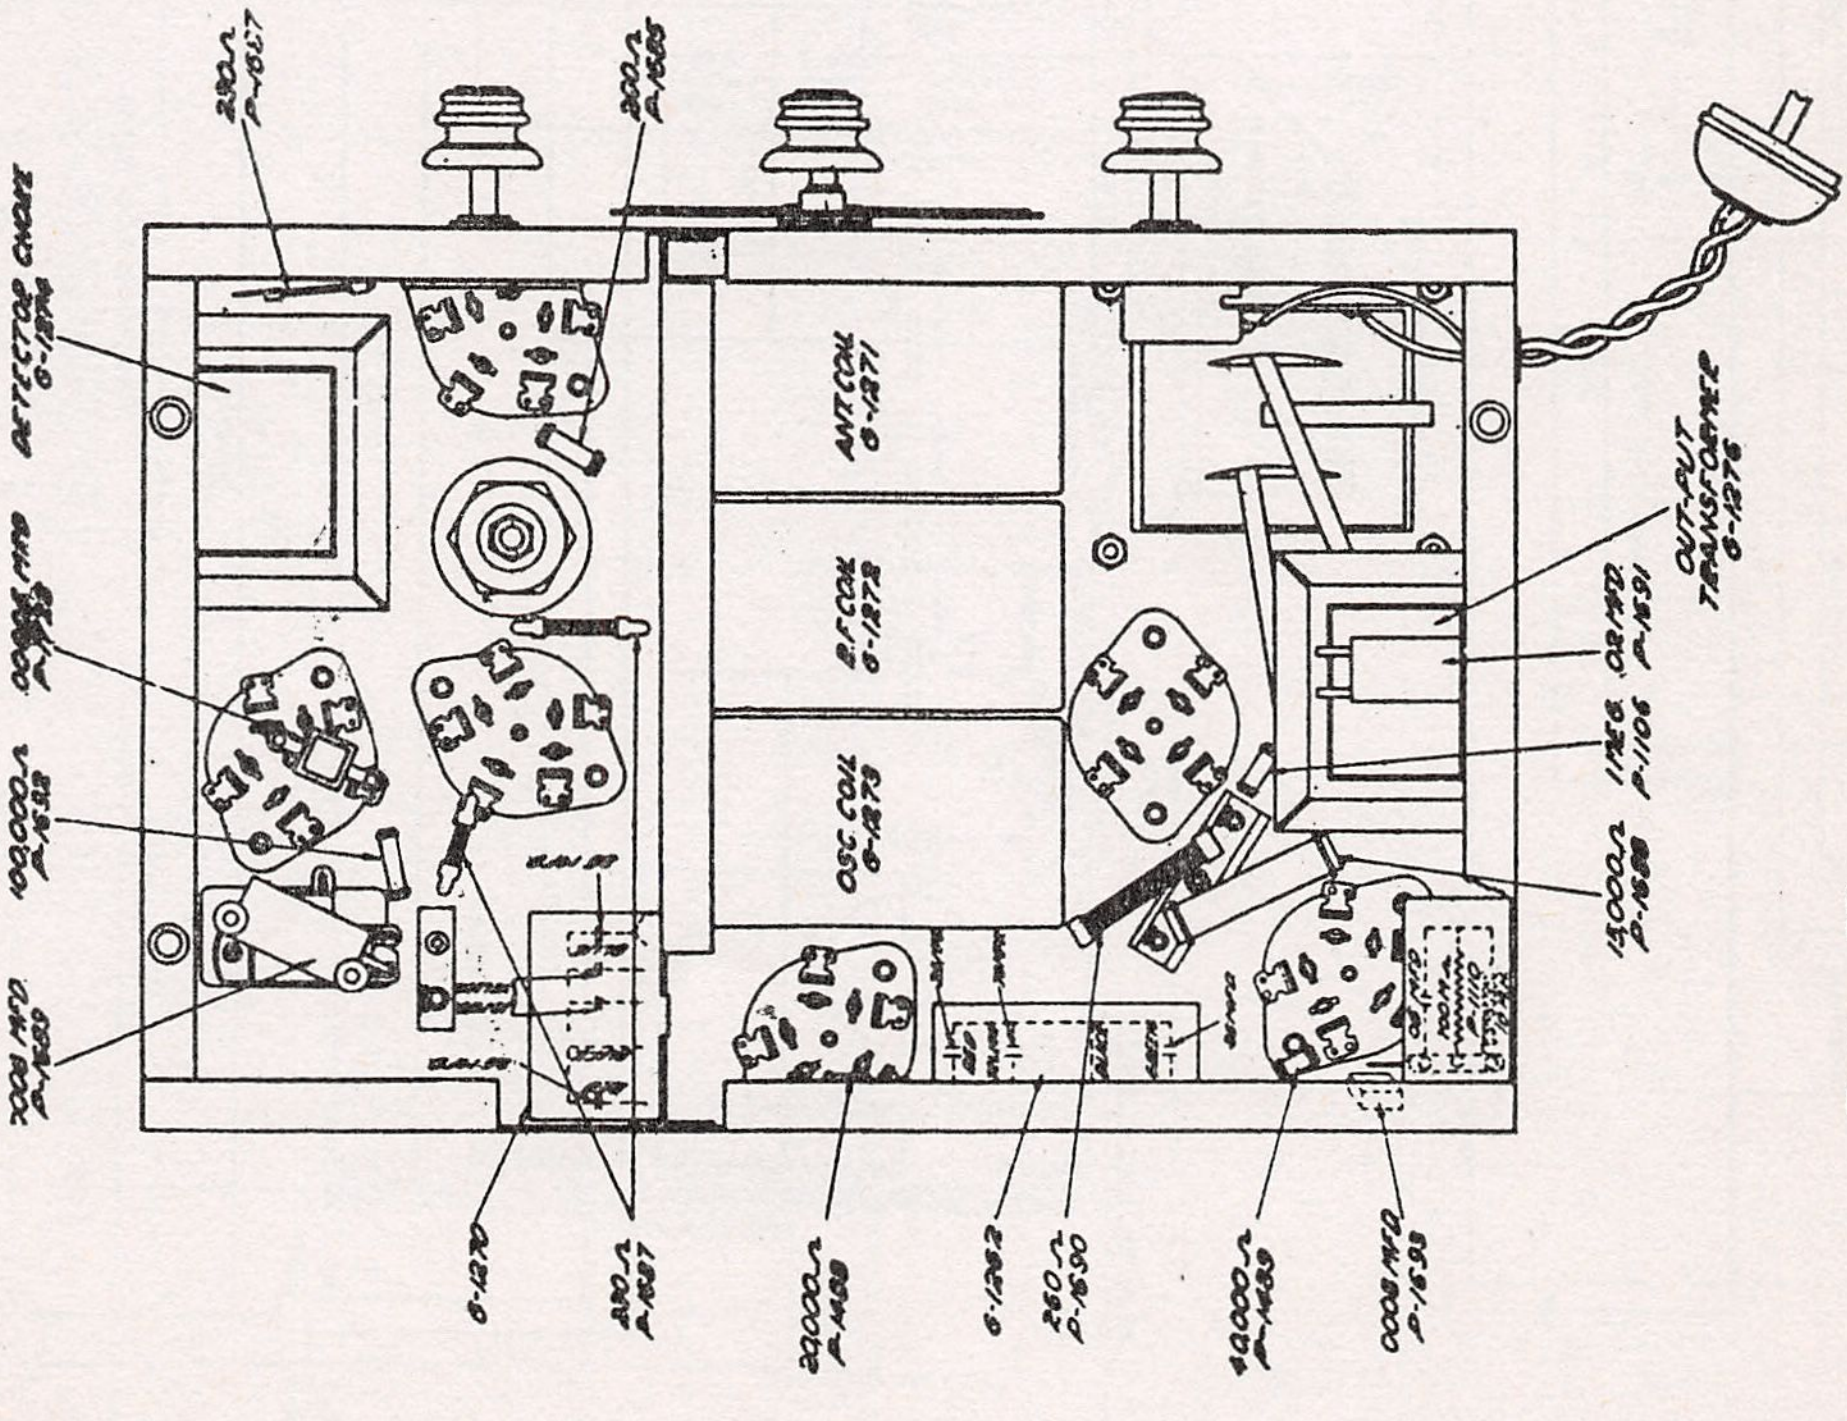
.0008 MFD. P-1689
100,000 Ω P-1632
.00025 MFD P-1733
DETECTOR CHOKE G-1274
230 Ω P-1627
G-1270
230 Ω P-1627
200 Ω P-1685
20,000 Ω P-1488
OSC. COIL G-1273
R.F. COIL G-1272
ANT. COIL G-1271
G-1262
260 Ω P-1690
40,000 Ω P-1489
.0008 MFD. P-1693
.05 MFD.
100 M Ω
P-1110
15,000 Ω P-1688
1 MEG. P-1106
.02 MFD. P-1691
OUT-PUT TRANSFORMER G-1276

Bottom View

MODEL 940
Schematic
Socket

COLUMBIA PHONOGRAPH COMPANY

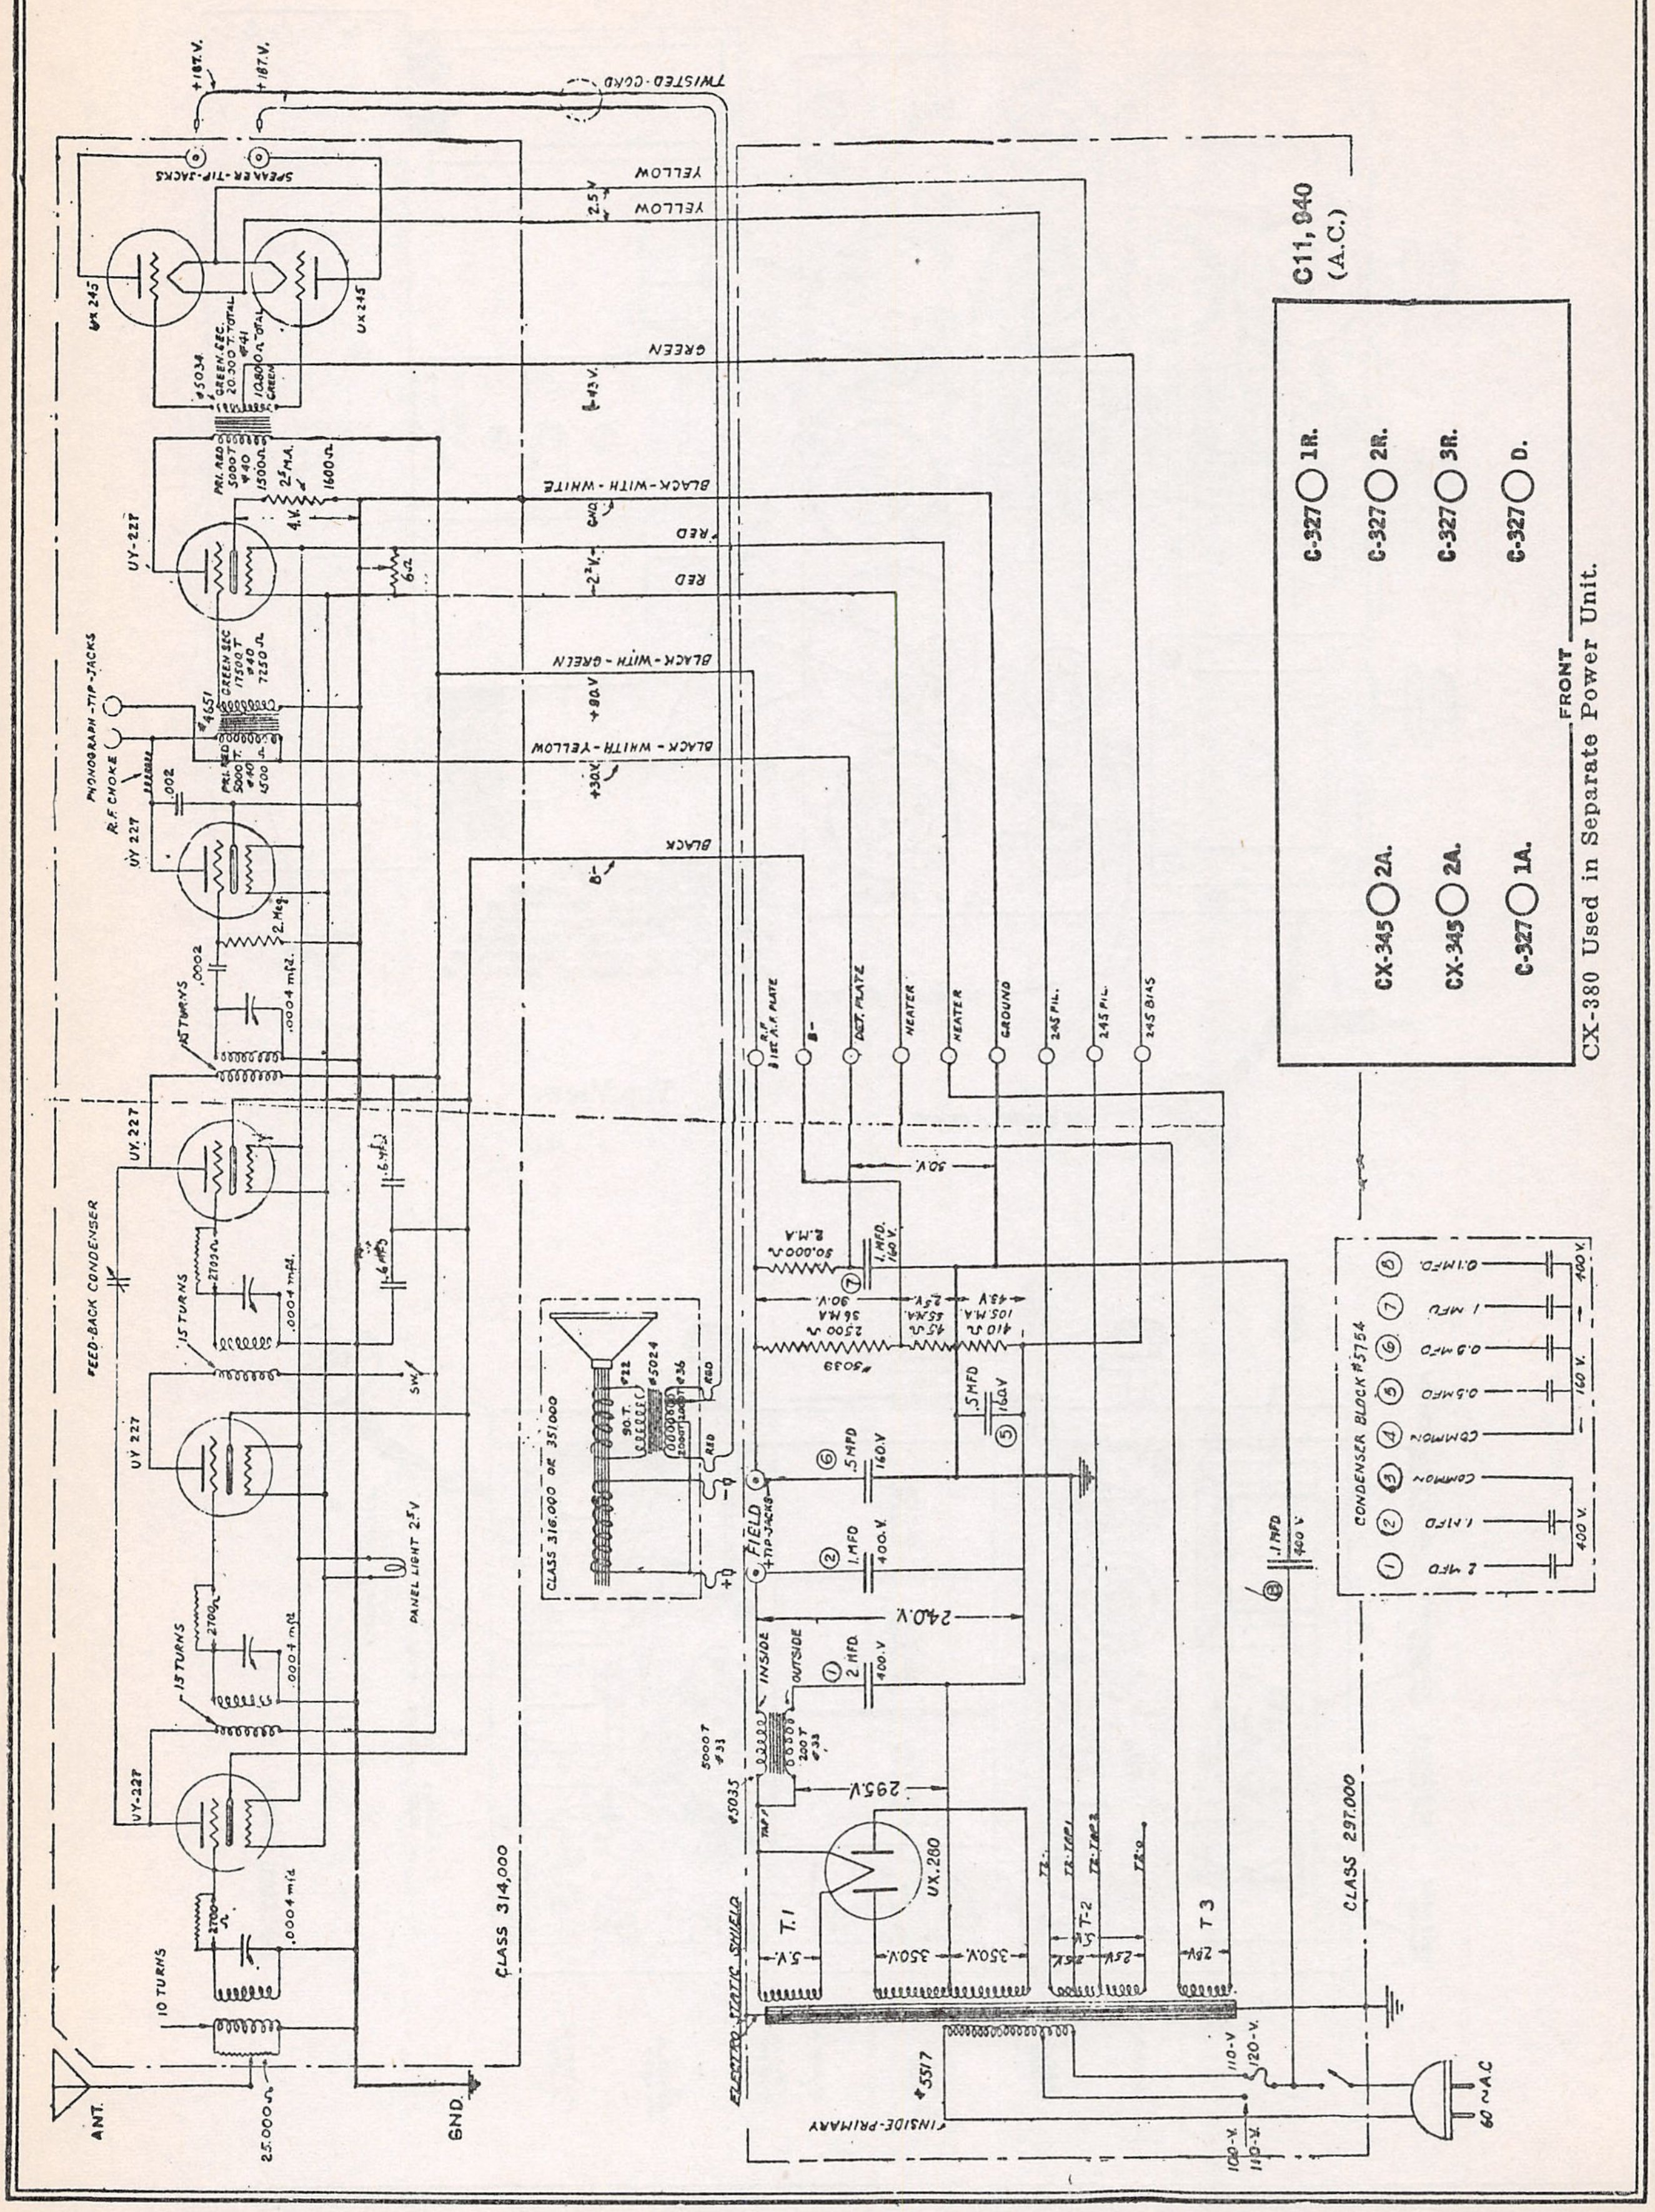
C11, 940
(A.C.)
C-327 1R.
C-327 2R.
C-327 3R.
C-327 D.
CX-345 2A.
CX-345 2A.
C-327 1A.
FRONT
CX-380 Used in Separate Power Unit.
TWISTED-CORD
+187.V.
+187.V.
SPEAKER-TIP-JACKS
YELLOW
YELLOW
2.5 V.
GREEN
UX 245
UX 245
#5034
-43 V.
BLACK-WITH-WHITE
RED
RED
BLACK-WITH-GREEN
+80 V.
BLACK-WITH-YELLOW
+30 V.
BLACK
B-
UY-227
UY 227
UY 227
UY 227
UY-227
PHONOGRAPH-TIP-JACKS
R.F. CHOKE
FEED-BACK CONDENSER
15 TURNS
15 TURNS
10 TURNS
PANEL LIGHT 2.5 V
ANT.
GND.
25,000 Ω
CLASS 314,000
CLASS 316,000 OR 351000
#5024
FIELD + TIP-JACKS
R.F. & 1ST. R.F. PLATE
B-
DET. PLATE
HEATER
HEATER
GROUND
245 FIL.
245 FIL.
245 BIAS
50 V.
50,000 Ω
#5039
CONDENSER BLOCK #5754
2 MFD
1 MFD
COMMON
COMMON
0.5 MFD
0.5 MFD
1 MFD
0.1 MFD
400 V.
160 V.
400 V.
.1 MFD 400 V.
240 V.
295 V.
UX 280
T.1
T-2
T 3
#5035
INSIDE
OUTSIDE
ELECTRO-STATIC SHIELD
5 V.
350 V.
350 V.
2.5 V.
#5517
INSIDE-PRIMARY
110-V.
120-V.
100-V.
110-V.
60 ~ A.C.
CLASS 297,000

CROSLEY RADIO CORP.

MODEL 7
MODEL 7-1
Converters

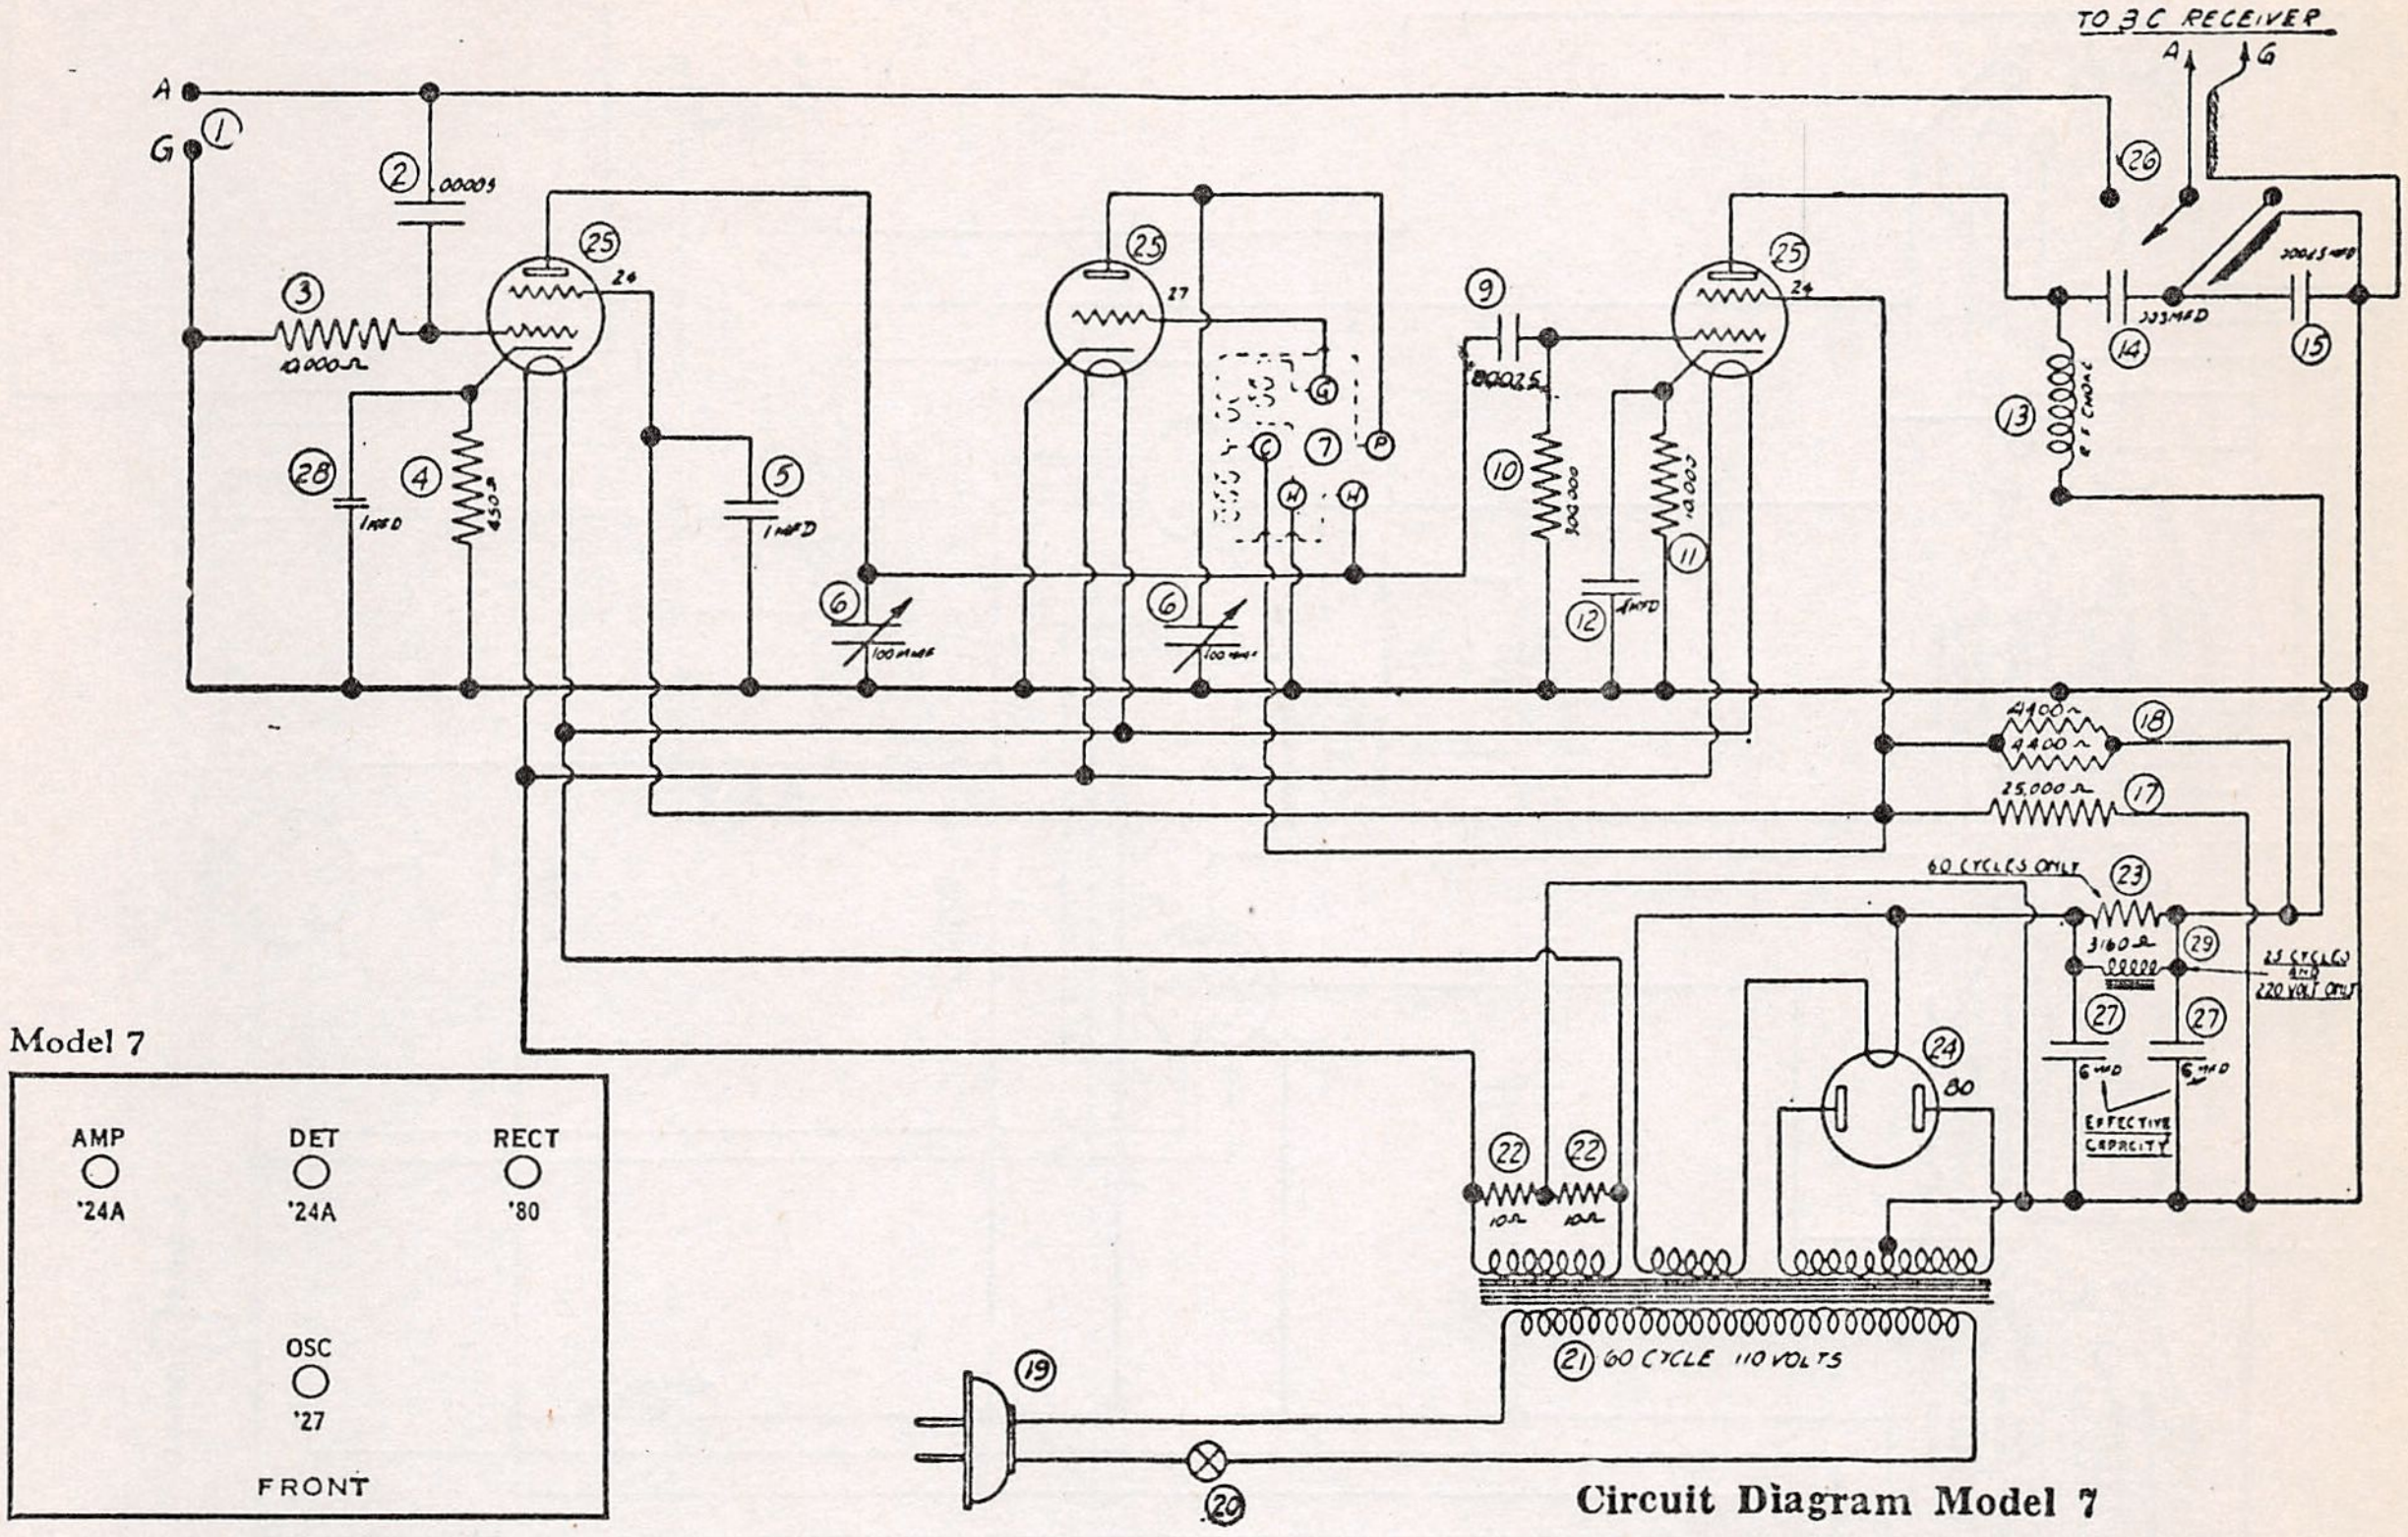
TO 3C RECEIVER
A
G
①
② .00005
③ 10000Ω
㉘ 1MFD
④ 450Ω
⑤ 1MFD
⑥ 100MMF
⑦
⑧
⑨ .00025
⑩ 500000
⑪ 15000
⑫ 1MFD
⑬ R F CHOKE
⑭ .333MFD
⑮ .00025MFD
⑯
⑰ 25000Ω
⑱ 4400Ω
⑲
⑳
㉑ 60 CYCLE 110 VOLTS
㉒ 10Ω
㉓ 60 CYCLES ONLY
㉔ 80
㉕ 24
㉕ 27
㉖
㉗ 6MFD
㉙ 3160Ω
25 CYCLES AND 220 VOLT ONLY
EFFECTIVE CAPACITY
G
P
H
AMP '24A
DET '24A
RECT '80
OSC '27
FRONT

Model 7

Circuit Diagram Model 7

This is a chassis for attaching to any broadcast receiver in order to adapt the latter to the reception of short-wave signals. It is of the superheterodyne type, the incoming signal being converted to a frequency within the regular broadcast range by the use of an oscillator and detector (see Service Bulletin No. A-1 for an explanation of the superheterodyne receiver). After conversion to the appropriate frequency the signal is delivered to the aerial and ground terminals of the broadcast receiver.

The chassis incorporates a -24 type, untuned buffer amplifier, a -27 tuned oscillator, a -24 tuned detector, and a -80 rectifier. Various frequency ranges are obtainable by the use of suitable coils, as explained in the instructions accompanying the chasses.

Model 7-1

Model 7-1 is a short-wave converter similar in general operation to Model 7, which has been described previously, but incorporating one less tube and having a tuned antenna circuit.

The tubes are as follows: a -24 first detector, a -27 oscillator, and a -80 rectifier.

Model 7-1

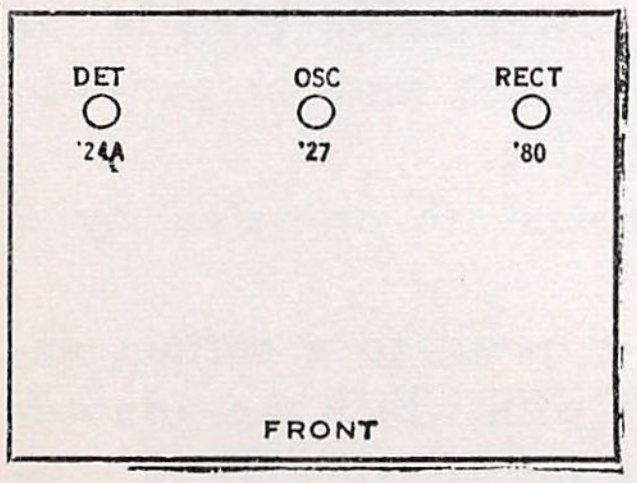
DET '24A
OSC '27
RECT '80
FRONT

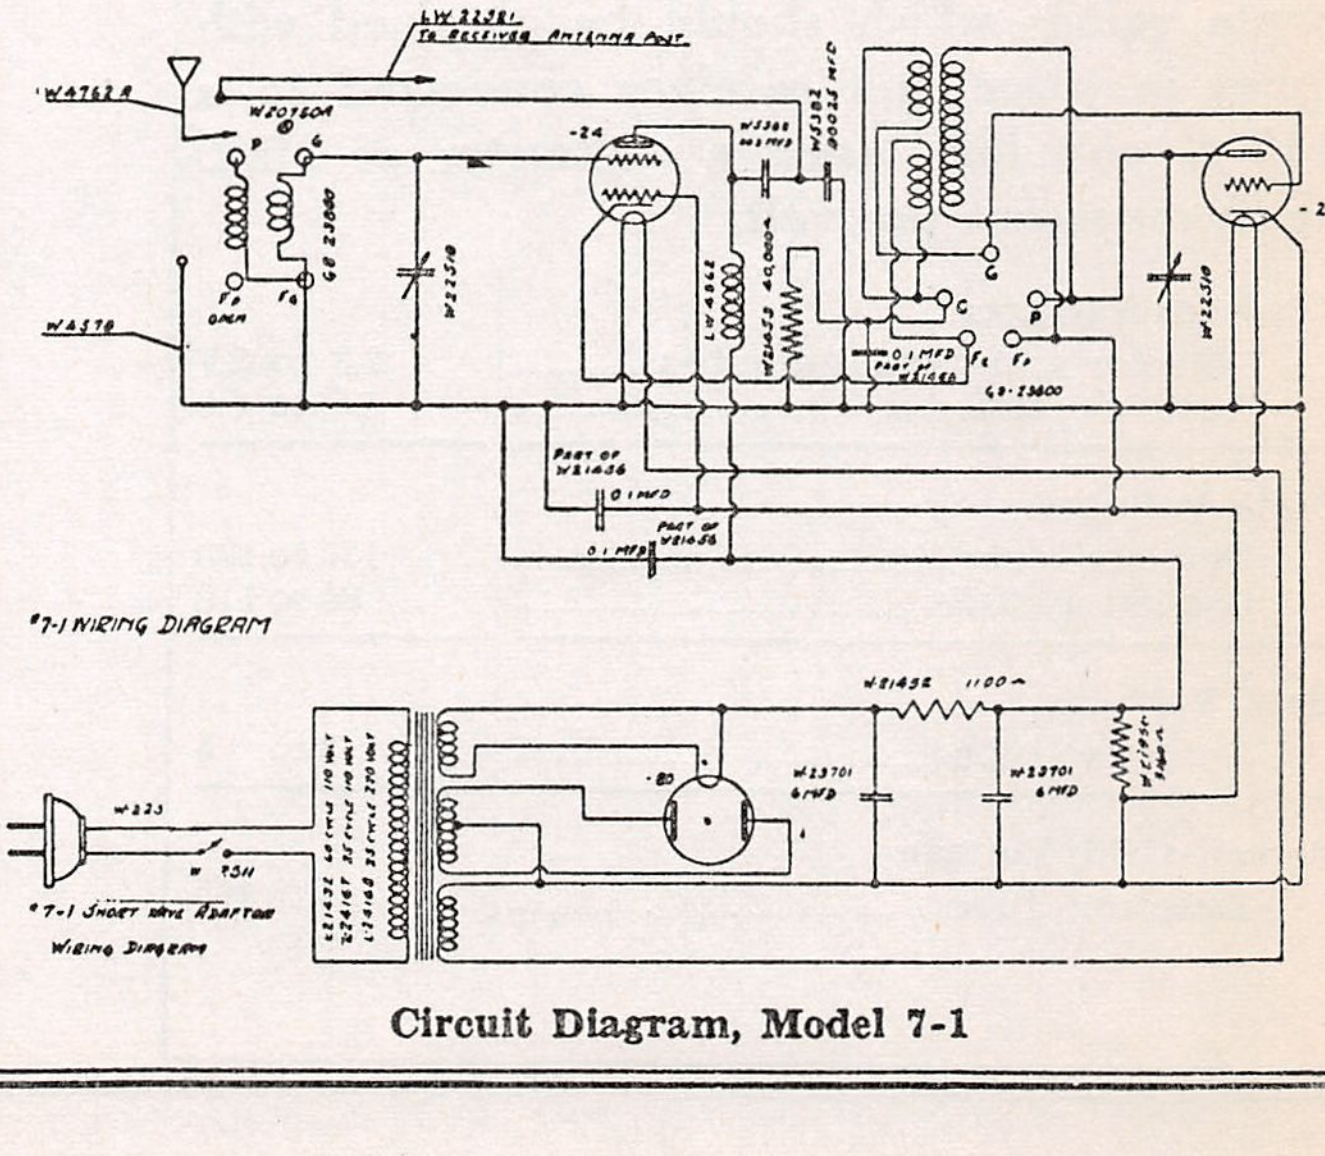
LW 22381 TO RECEIVER ANTENNA POST
W47624
W20760A
W43478
-24
-27
-80
.01MFD
0.1MFD
6MFD
1100Ω
W223
TSH
*7-1 WIRING DIAGRAM
*7-1 SHORT WAVE ADAPTOR WIRING DIAGRAM

Circuit Diagram, Model 7-1

MODEL 7-2 Converter
MODEL 7-1 Voltage

CROSLEY RADIO CORP.

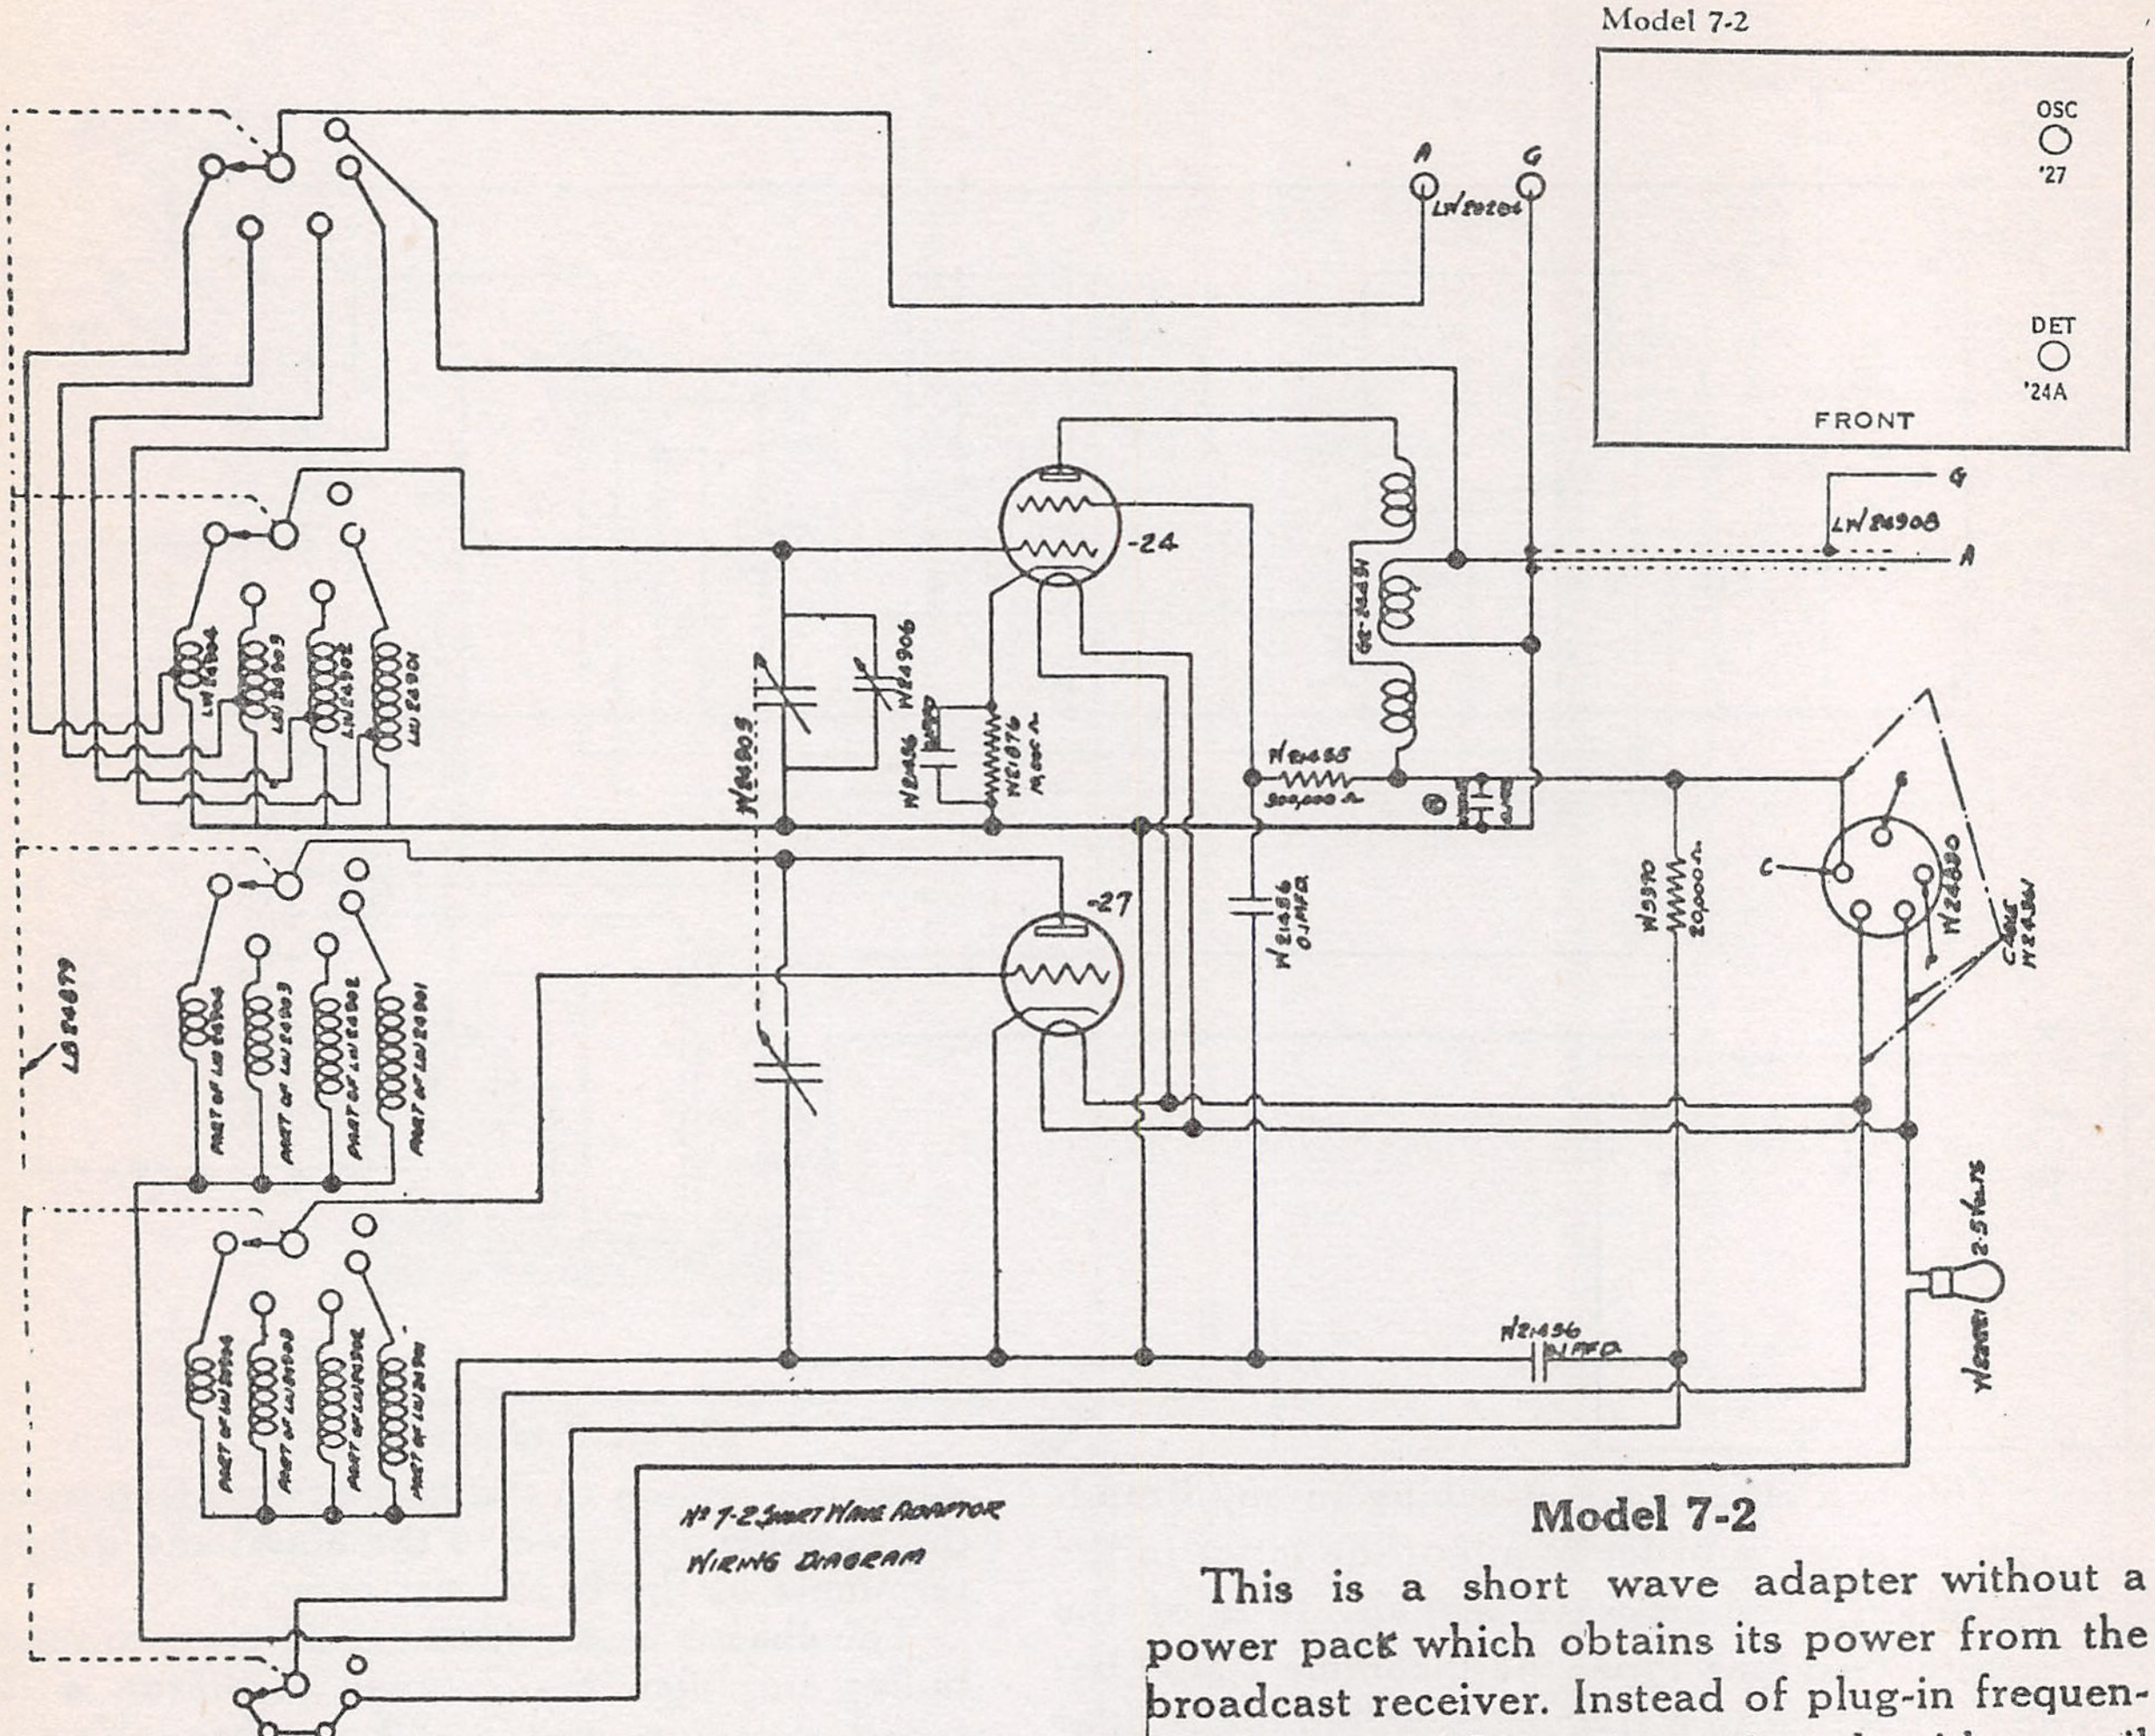
Model 7-2
OSC
'27
DET
'24A
FRONT
A
G
LW26206
LW26908
-24
-27
W24905
W24906
W21456
W21076
W21455
300,000 Ω
W21456
0.1 MFD
W3970
20,000 Ω
C
W26830
CABLE
W24364
2.5 Volts
W21456
.1 MFD
LS24879
PART OF LW26904
PART OF LW26903
PART OF LW26902
PART OF LW26901
No 7-2 Short Wave Adaptor
Wiring Diagram

Circuit Diagram, Model 7-2

Model 7-2

This is a short wave adapter without a power pack which obtains its power from the broadcast receiver. Instead of plug-in frequency change coils, it is equipped with a coil changing switch, the desired frequency range being obtained by choosing the proper switch setting. There are five switch positions, four of which are for short-wave reception, and the fifth for operating the ordinary broadcast receiver.

Two tubes are used, a -27 oscillator and a -24 detector.

The adapter is for use only with receivers having pentode output tubes. On the end of the adapter power cable is a plug. One of the pentode output tubes is removed from the receiver, the adapter power cable plug is inserted in the pentode socket, and the pentode tube is inserted in the plug.

The tuning condensers are operated by a single dial.

The tube voltages depend to a certain extent upon the receiver with which the adapter is used. It is therefore not practicable to give them here.

Voltage Limits, Model 7-1

The following tube voltages are the approximate values which should be obtained with tubes in place and receiver connected to a 117½ volt line, using a voltmeter of 1000 ohms resistance per volt.

Filament Voltages	
Detector and oscillator tubes	2.3 to 2.7
Rectifier tube	4.5 to 5.5
Plate Voltages	
Detector tube	150 to 190
Oscillator tube	90 to 110
Grid Voltages	
Detector tube	3 to 5
Screen-Grid Voltage	
Detector tube	85 to 105

MODEL 26
Schematic, Voltage
Parts List

CROSLEY RADIO CORP.

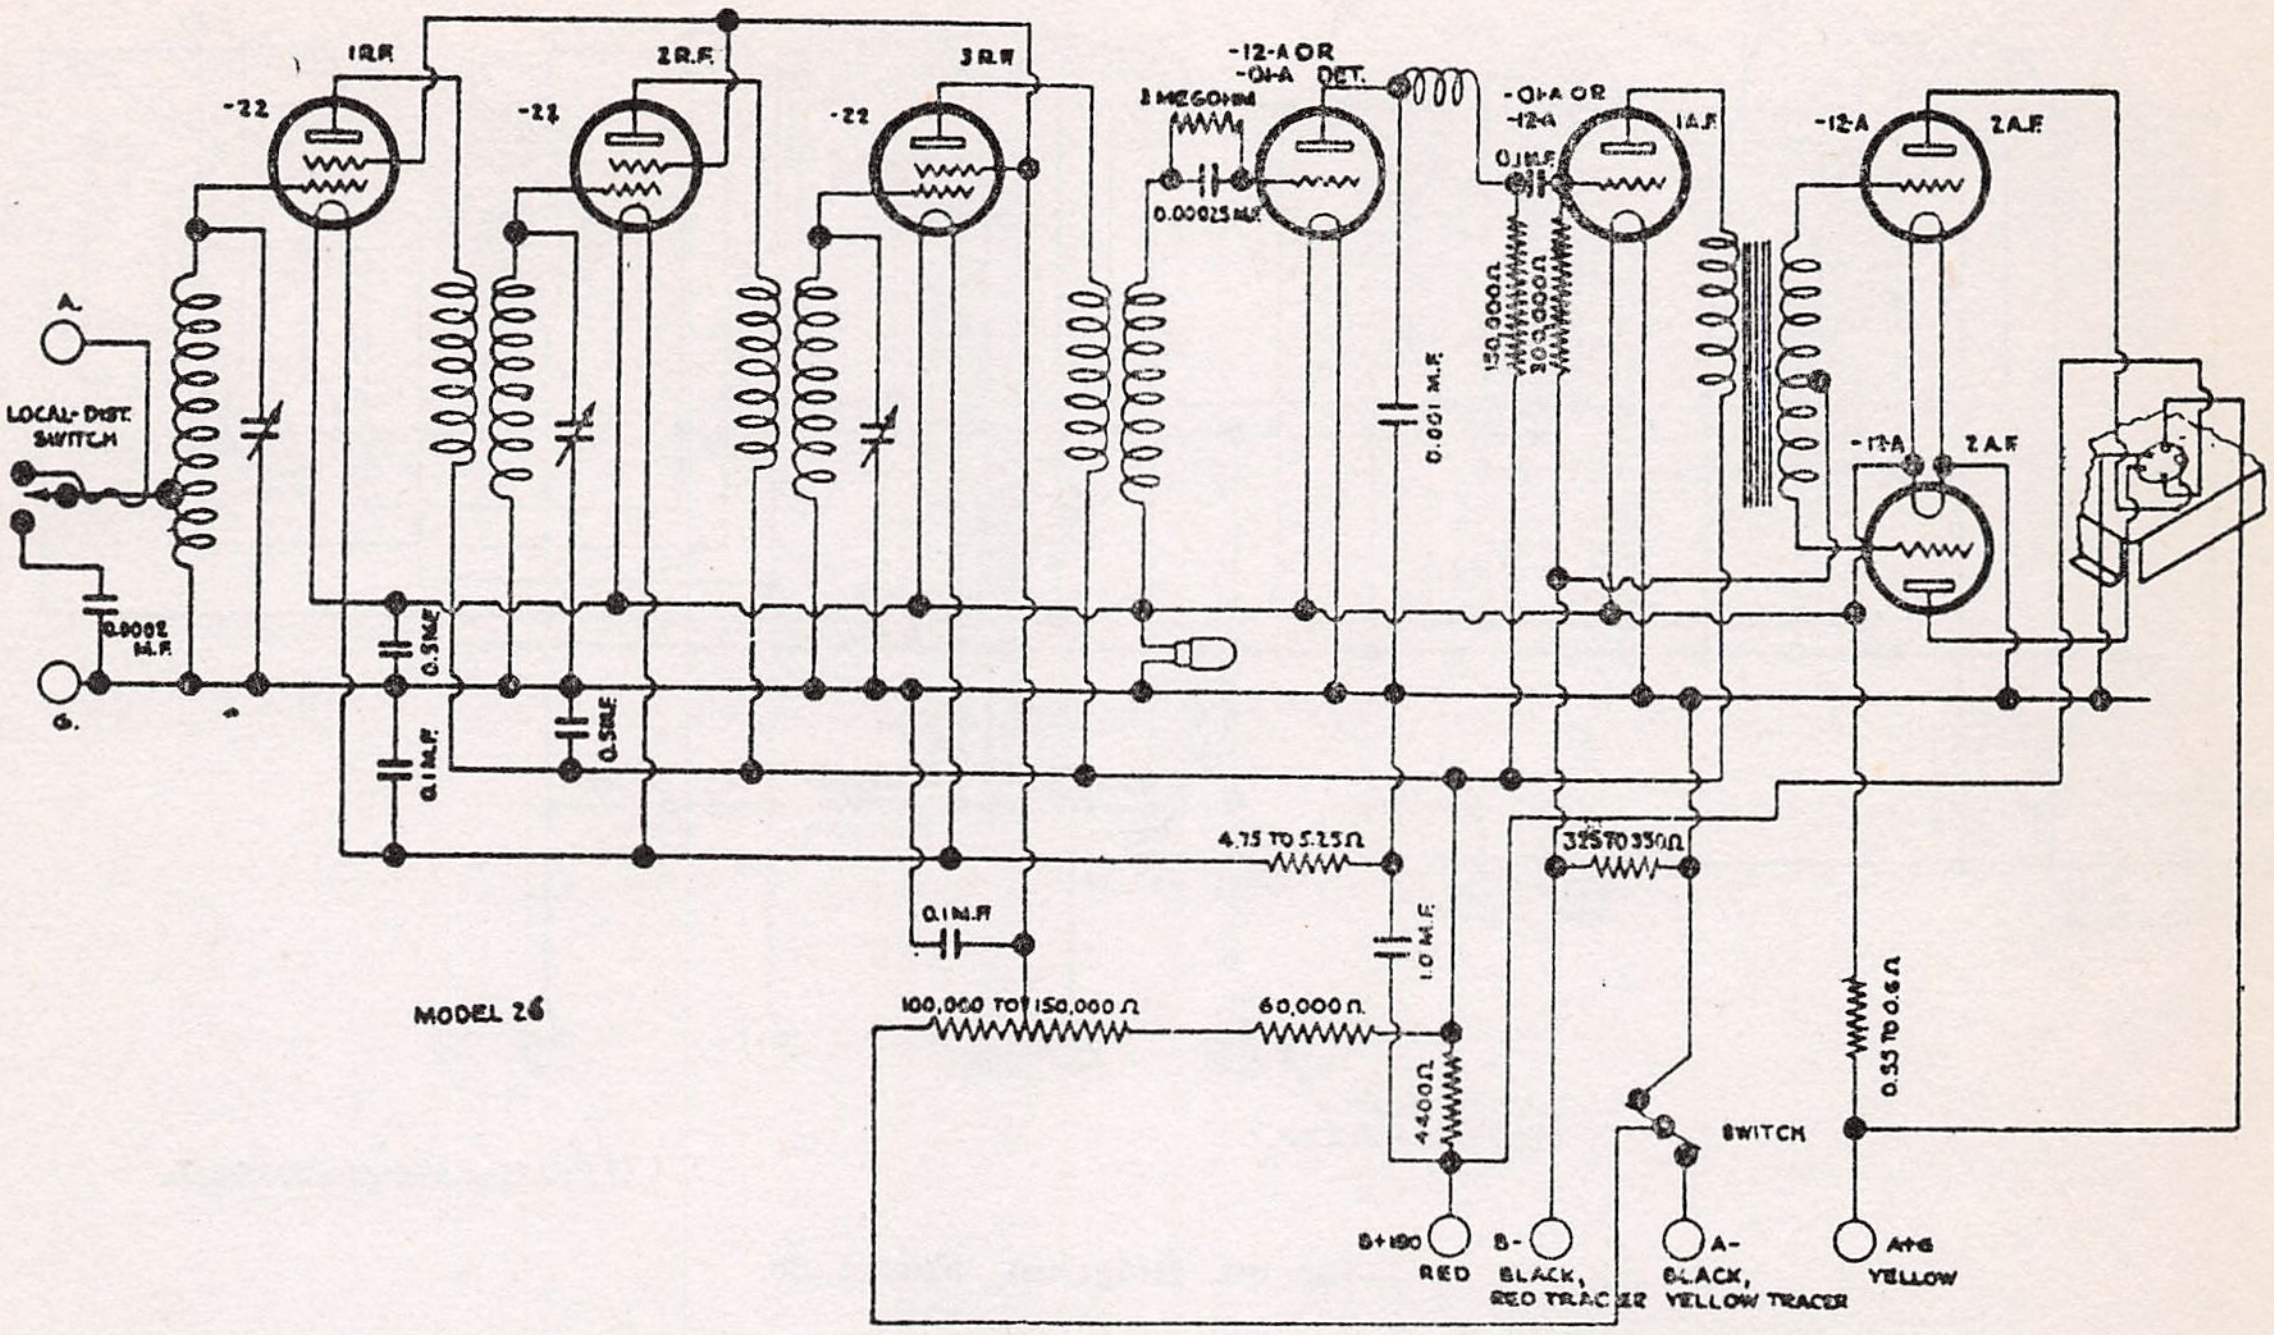
1R.F.
2R.F.
3R.F.
-22
-22
-22
-12-A OR
-01-A DET.
3 MEGOHM
0.00025 M.F.
-01-A OR
-12-A
1A.F.
0.1M.F.
-12-A
2A.F.
-12-A
2A.F.
A.
LOCAL-DIST. SWITCH
0.0002 M.F.
G.
0.5M.F.
0.1M.F.
0.5M.F.
0.001 M.F.
150,000Ω
300,000Ω
4.75 TO 5.25Ω
325 TO 350Ω
0.1M.F.
1.0 M.F.
MODEL 26
100,000 TO 150,000 Ω
60,000 Ω
4400Ω
0.55 TO 0.6Ω
SWITCH
B+190
RED
B-
BLACK,
RED TRACER
A-
BLACK,
YELLOW TRACER
A+G
YELLOW

Qty.	Part No.	Description
1	W-4968	.5 Mfd. Fixed Condenser (2 paper)
1	W-6614	R. F. Choke
1	W-7753	.1 - .5 - .1 Mfd. Fixed Cond.
1	W-4013	1. Mfd. Fixed Condenser
1	W-20829	Mounting Strip
1	W-4924	.00025 Mfd. Fixed Condenser
1	W-5468	3 Meg. (Grid Leak) Resistor
1	W-4923	60000 Ohm Resistor (Blue, Orange Spot)
1	W-6754	.001 Mfd. Fixed Condenser
1	W-20829	Mounting Strip
1	W-7159	4400 Ohm Resistor (Yellow, Red Spot)
1	W-5735	150000 Ohm Resistor (Brown, Green, Yellow Spot)
1	W-4362	Plate Choke
1	W-6471	.1 Mfd. Fixed Condenser (2 paper)
1	W-5713	Mounting Strip
1	W-6704	300000 Ohm Resistor, (Brown, Blk., Yellow Spot)
1	W-20090	.55 to .6 Ohm Resistor
1	W-20100	350 Ohm Resistor

Filament Voltages	
R. F. tubes	2.4 to 2.7
Detector, 1st Audio, and Output tubes	4.3 to 4.8
Plate Voltages	
R. F. and 1st Audio tubes	120 to 130
Detector tube	110 to 120
Output tubes	150 to 160
Control Grid Voltages	
R. F. tubes	1.6 to 2.0
Detector tube	4.3 to 4.6
1st Audio and Output Tubes	4.3 to 4.6
Screen Grid Voltages	
R. F. tubes	48 to 55

The above voltages are to be measured with the speaker connected

Models 26H, 26J, 26K

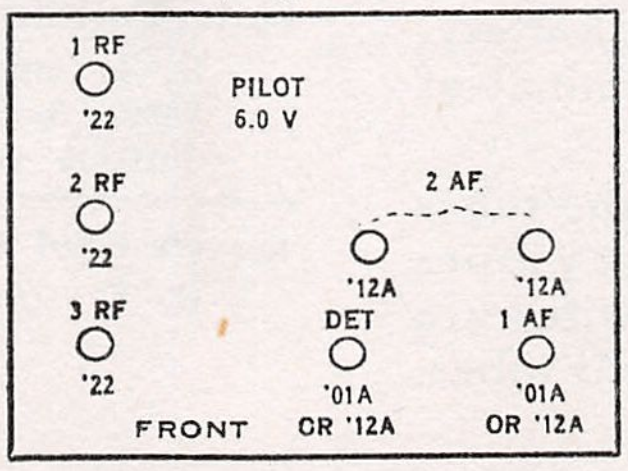
1 RF
'22
PILOT
6.0 V
2 RF
'22
2 AF
'12A
'12A
3 RF
'22
DET
'01A
OR '12A
1 AF
'01A
OR '12A
FRONT

CROSLEY RADIO CORP.

MODEL 28, 27
Schematic, Voltage
Notes

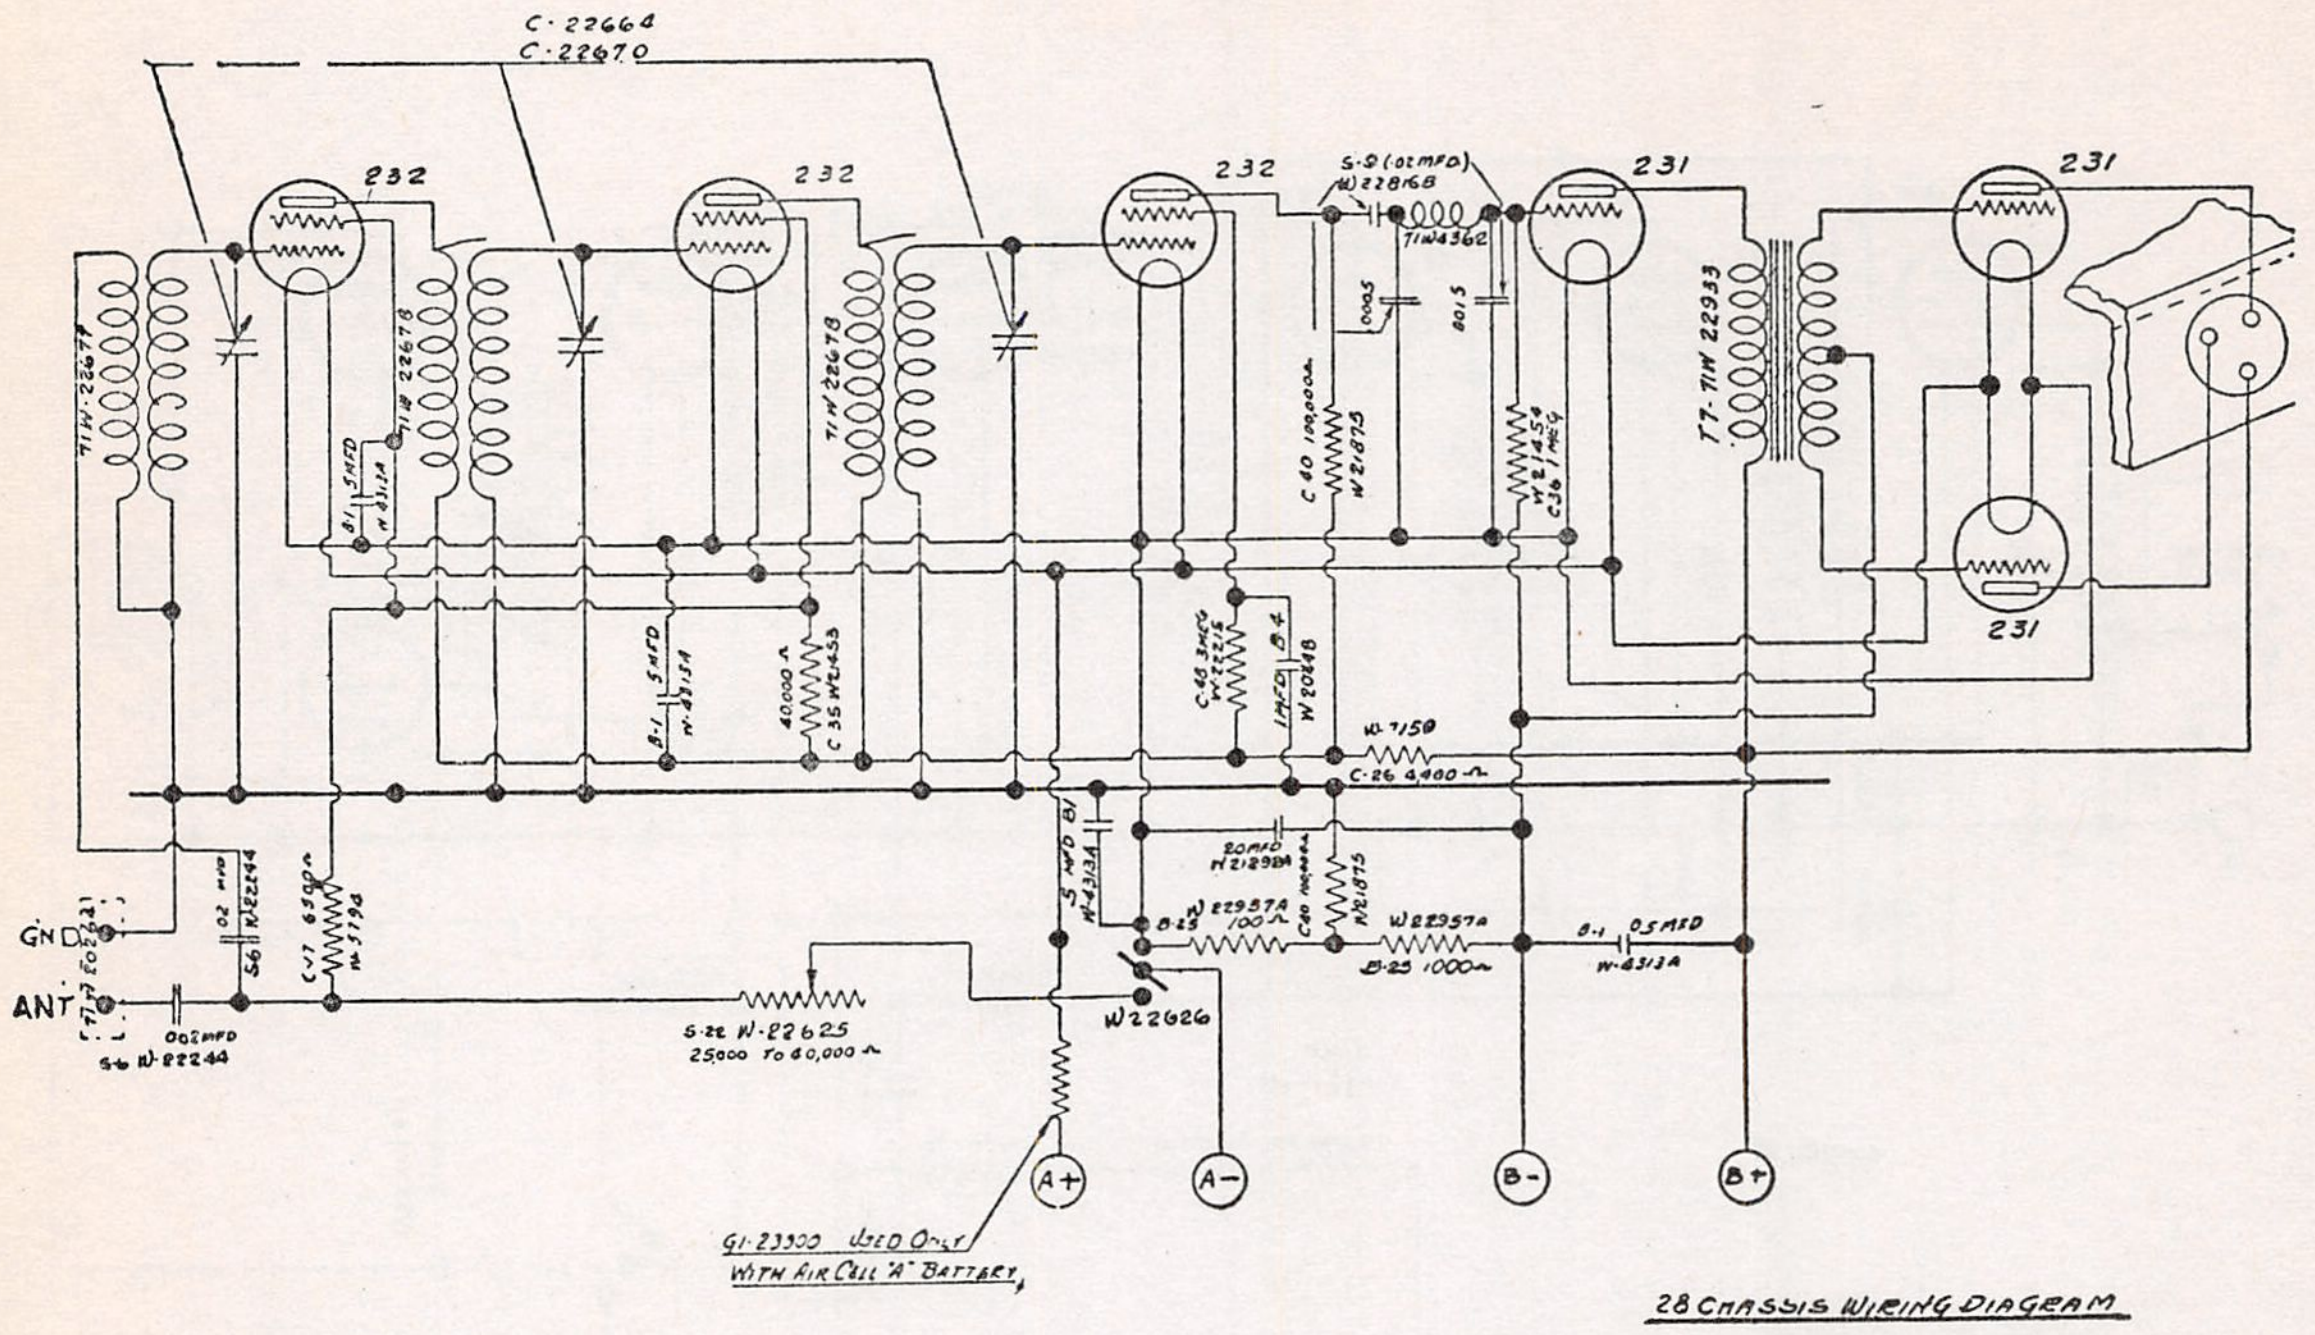
C·22664
C·22670
232
232
232
231
231
231
71W·22677
71W 22678
71W 22678
B·1 .5MFD W·4313A
B·1 .5MFD W·4313A
40000 Ω C 35 W21453
C·48 3MEG W·22215
1MFD B4 W 20248
S·9 (.02MFD) W 228168
71W4362
.0005
.0015
C 40 100,000Ω W 21875
W 21454 C36 1MEG
TT·71W 22933
W·7150
C·26 4,400 Ω
.5 MFD B1 W·4313A
20MFD W21298A
W 22957A 100 Ω B·25
C20 100,000Ω W21875
W22957A B·25 1000 Ω
B·1 .05MFD W·4313A
W22626
S·22 W·22625 25,000 TO 40,000 Ω
C·V7 6500Ω W·5794
.02 MFD W·22244 S6
.002MFD S·6 W·22244
GND
ANT
A+
A−
B−
B+
G1·23300 USED ONLY WITH AIR CELL "A" BATTERY
28 CHASSIS WIRING DIAGRAM

—Circuit Diagram, Model 28.

Model 28

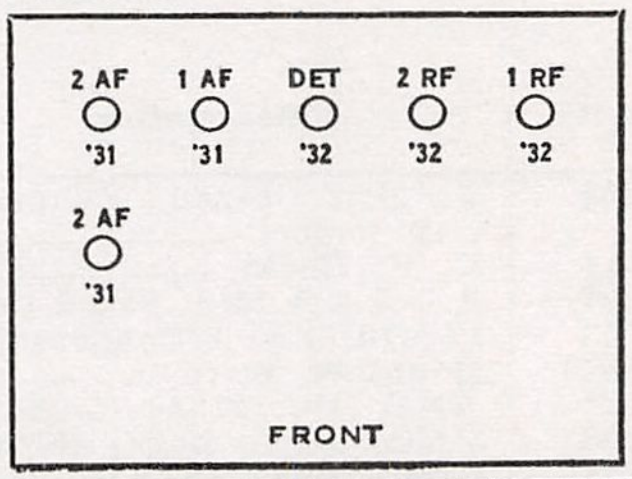
2 AF
'31
1 AF
'31
DET
'32
2 RF
'32
1 RF
'32
2 AF
'31
FRONT

Specifications

Models 27 and 28 are battery receivers identical in circuit and electrical design but differing in mechanical construction. They are six tube receivers, incorporating two -32 r. f. amplifiers, a -32 detector, a -31 intermediate audio amplifier, and -31 push-pull output tubes.

The batteries used are a 2 volt Eveready Air Cell or 2 volt storage battery, and four 45 volt "B" batteries.

Installation Notes

An aerial of moderate size will usually be satisfactory.

There is a battery resistor in the "A" battery cable. This should be removed if a storage battery is used instead of the 2 volt Air Cell.

The color code of the battery cable is as follows: Red lead (B+ 180 volts): to +45 terminal of fourth 45 volt "B" battery. Black lead with red tracer (B-): to minus terminal of first 45 volt "B" battery. Black lead with yellow tracer (A-): to minus terminal of Eveready Air Cell or 2 volt storage battery. Yellow lead (A+2 volts): to plus terminal of Air Cell or 2 volt storage battery.

When installing the receiver, check the tubes to see that they are inserted in their proper sockets, and make sure that the clip wires are connected to the clips of the screen grid tubes.

Filament Voltages	
All tubes	1.8 to 2.0
Plate Voltages	
R. F. tubes	120 to 140
Detector tube	50 to 65
First A. F. tube	125 to 160
Output tubes	130 to 160
Control Grid Voltages	
R. F. and detector tubes	2 to 3.5
First A. F. and output tubes	20 to 28
Screen Grid Voltages	
R. F. tubes	55 to 70
Detector tubes	15 to 22
Plate Current	
R. F. tubes	0.0022 to 0.0025
First A. F.	0.005 to 0.0065
Output tubes	0.007 to 0.0085
Screen Grid Current	
R. F. tubes	0.00055 to 0.0007

CROSLEY RADIO CORP.

MODEL 59 AC

Voltage Limits

Filament Voltages	
All tubes but rectifier	2.3 to 2.4
Rectifier tube	4.5 to 4.9
Plate Voltages	
R. F. Amplifiers	240 to 280
Detector	160 to 190
Output	230 to 270
Rectifier (A. C voltage)	290 to 330 each plate
Screen Grid Voltages	
R F Amplifiers	55 to 65
Detector	125 to 155
Control Grid Voltages	
R F Amplifiers	2.5 to 3.5
Detector	11.0 to 13.0
Output tube	50 to 54

To be measured with speaker connected, volume control on full, and line voltage of 117½ (235 for 220 volt receivers). Measure plate and grid voltages with a high-resistance D. C. voltmeter (600 ohms or more per volt) from plate or grid tube contact to emitter contact. Use a low range A. C. meter for filament voltages.

Specifications

Model 59 is a compact, tuned radio-frequency receiver for operation from 110 volt and 220 volt A. C. house-lighting circuits. It is supplied in several cabinet styles in conjunction with Model 299 dynamic speaker.

The ends of the high-voltage secondary are connected to the plates of the rectifier tube, and the middle tap on it is connected to the negative side of the loudspeaker field ("B-"), and through one megohm and 300,000 ohm resistors to ground. The other side of the speaker field ("G") is connected to ground (chassis).

The positive plate supply circuit originates at the rectifier filament. One branch goes to the "B+" speaker terminal, whence it continues through the primary of the speaker output transformer to speaker terminal "P", and thence to the plate of the pentode tube.

A second branch of the B+ circuit goes through a 1100 ohm resistor to the screen grid of the pentode tube, and to the plates and screen grids of the other tubes. It is connected through a 300,000 ohm detector plate coupling resistor to the plate of the detector tube, through the primaries of the second and third radio-frequency transformers to the plates of the r. f. tubes, through a 100,000 ohm resistor to the screen grids of the r. f. tubes, a branch of the circuit returning to the r. f. cathodes through a 300,000 ohm resistor and through an additional resistor of 3 megohms to the screen grid of the detector tube.

The speaker field coil, in connection with two filter condensers—one (effective capacity 6 m. f.) of which is shunted across the speaker field and the other (effective capacity 12 m. f.) of which is connected from B+ to ground—acts as a filter circuit, eliminating hum.

Biasing of the r. f. tubes is accomplished by the volume control resistor. Adjustment of the volume control simultaneously varies the bias of the r. f. tubes and the value of a resistor shunted across the primary of the antenna coil. A 40,000 ohm biasing resistor is used in the detector emitter circuit. Biasing of the audio tube is accomplished by returning the audio grid to the negative side of the 300,000 ohm resistor in the B- circuit, connected to chassis.

Qty.	Part No.	Description	List Price
1	D-22669A	Chassis	$ .75
4	W-7873	Socket (5 Prong)	.30
1	W-7871	Socket (4 Prong)	.25
1	W-21297	Socket Guide (280)	.10
1	W-22818	Socket Guide (Pen.)	.10
1	W-22819	Socket Guide (224)	.10
2	W-22820	Socket Guide (235)	.10
1	W-22413	Power Trans. 110 V. 60 Cy.	6.00
	W-22666	Power Trans. 110 V. 25 Cy.	6.25
	W-22667	Power Trans. 220 V. 25 Cy.	6.25
1	W-21459	Mershon Condenser 8 Mfd.	2.50
1	W-21485	Mershon Condenser Socket	.25
1	W-22689A	Mershon Condenser 12 Mfd.	3.50
1	W-23147	Insulating Washer	.05
1	W-22664	Tuning Condenser Gang	7.00
3	W-21973	Grid Connectors	.25
		CONDENSER DRIVE	
1	W-22685	Pulley	.25
1	W-22334	Drive Cord (39")	.25
1	W-22682	Idler Bracket Assem. (top)	.15
1	W-22683	Idler Br. Assem (lower)	.15
1	W-22460A	Drive Pulley Bracket	.10
1	W-22827	Drive Shaft	.30
1	W-22463	Stop Washer	.05
1	W-22828	Stop Washer	.05
1	W-22681	Idler Bracket Assem. (Ten.)	.15
1	W-22684	Spacer	.05
1	W-22464B	Spring	.05
1	W-22679	Dial Strip	.15
1	W-22329	Dial Light Bracket Assembly Less Lamp	.25
1	W-22410	Switch	.75
1	W-23117	Volume Control	1.25
1	B-22929	Tube Shield Assembly	.25
		PARTS UNDER CHASSIS	
1	W-22995	.5 - .1 Mfd. Fixed Condenser	1.00
1	W-22677	R. F. Transformer (ant)	1.50
2	W-22678	R. F. Transformer (Int.)	1.50
3	W-7558A	R. F. Coil Shields	.20
1	W-22663	Mounting Plate	.30
1	W-21452	Flexible Resistor 1100 Ohms	.25
1	W-23191	.01 Mfd. Fixed Condenser	.25
1	W-21453	Fixed Resistance 40000 Ohms	.30
2	W-21454	Fixed Resistance 1 Megohm	.30
1	W-21455	Fixed Resist. 300000 Ohms	.30
1	W-4362	R. F. Plate Choke	.50
1	W-22417	Potentiometer 10-10 Ohms	.15
1	W-22816B	.0015 - .02 - .0005 Mfd. Fixed Condenser	.75
1	W-22412	.1 - .1 - .1 - .1 Mfd. Fix. Con.	.75
1	W-21454	Fixed Resistance 1 Megohm	.30
1	W-21455	Fixed Resist. 300000 Ohms	.30
1	W-21875	Fixed Resist. 100000 Ohms	.30
1	W-21455	Fixed Resist. 300000 Ohms	.30
1	W-22395	Speaker Socket	.25
1	W-22397	Insulator	.05
1	W-20264	Terminal A & G	.30
1	W-21466A	Cable & Plug	.50

MODEL 59 AC
Schematic
Bottom View

CROSLEY RADIO CORP.

MODEL 59 AC

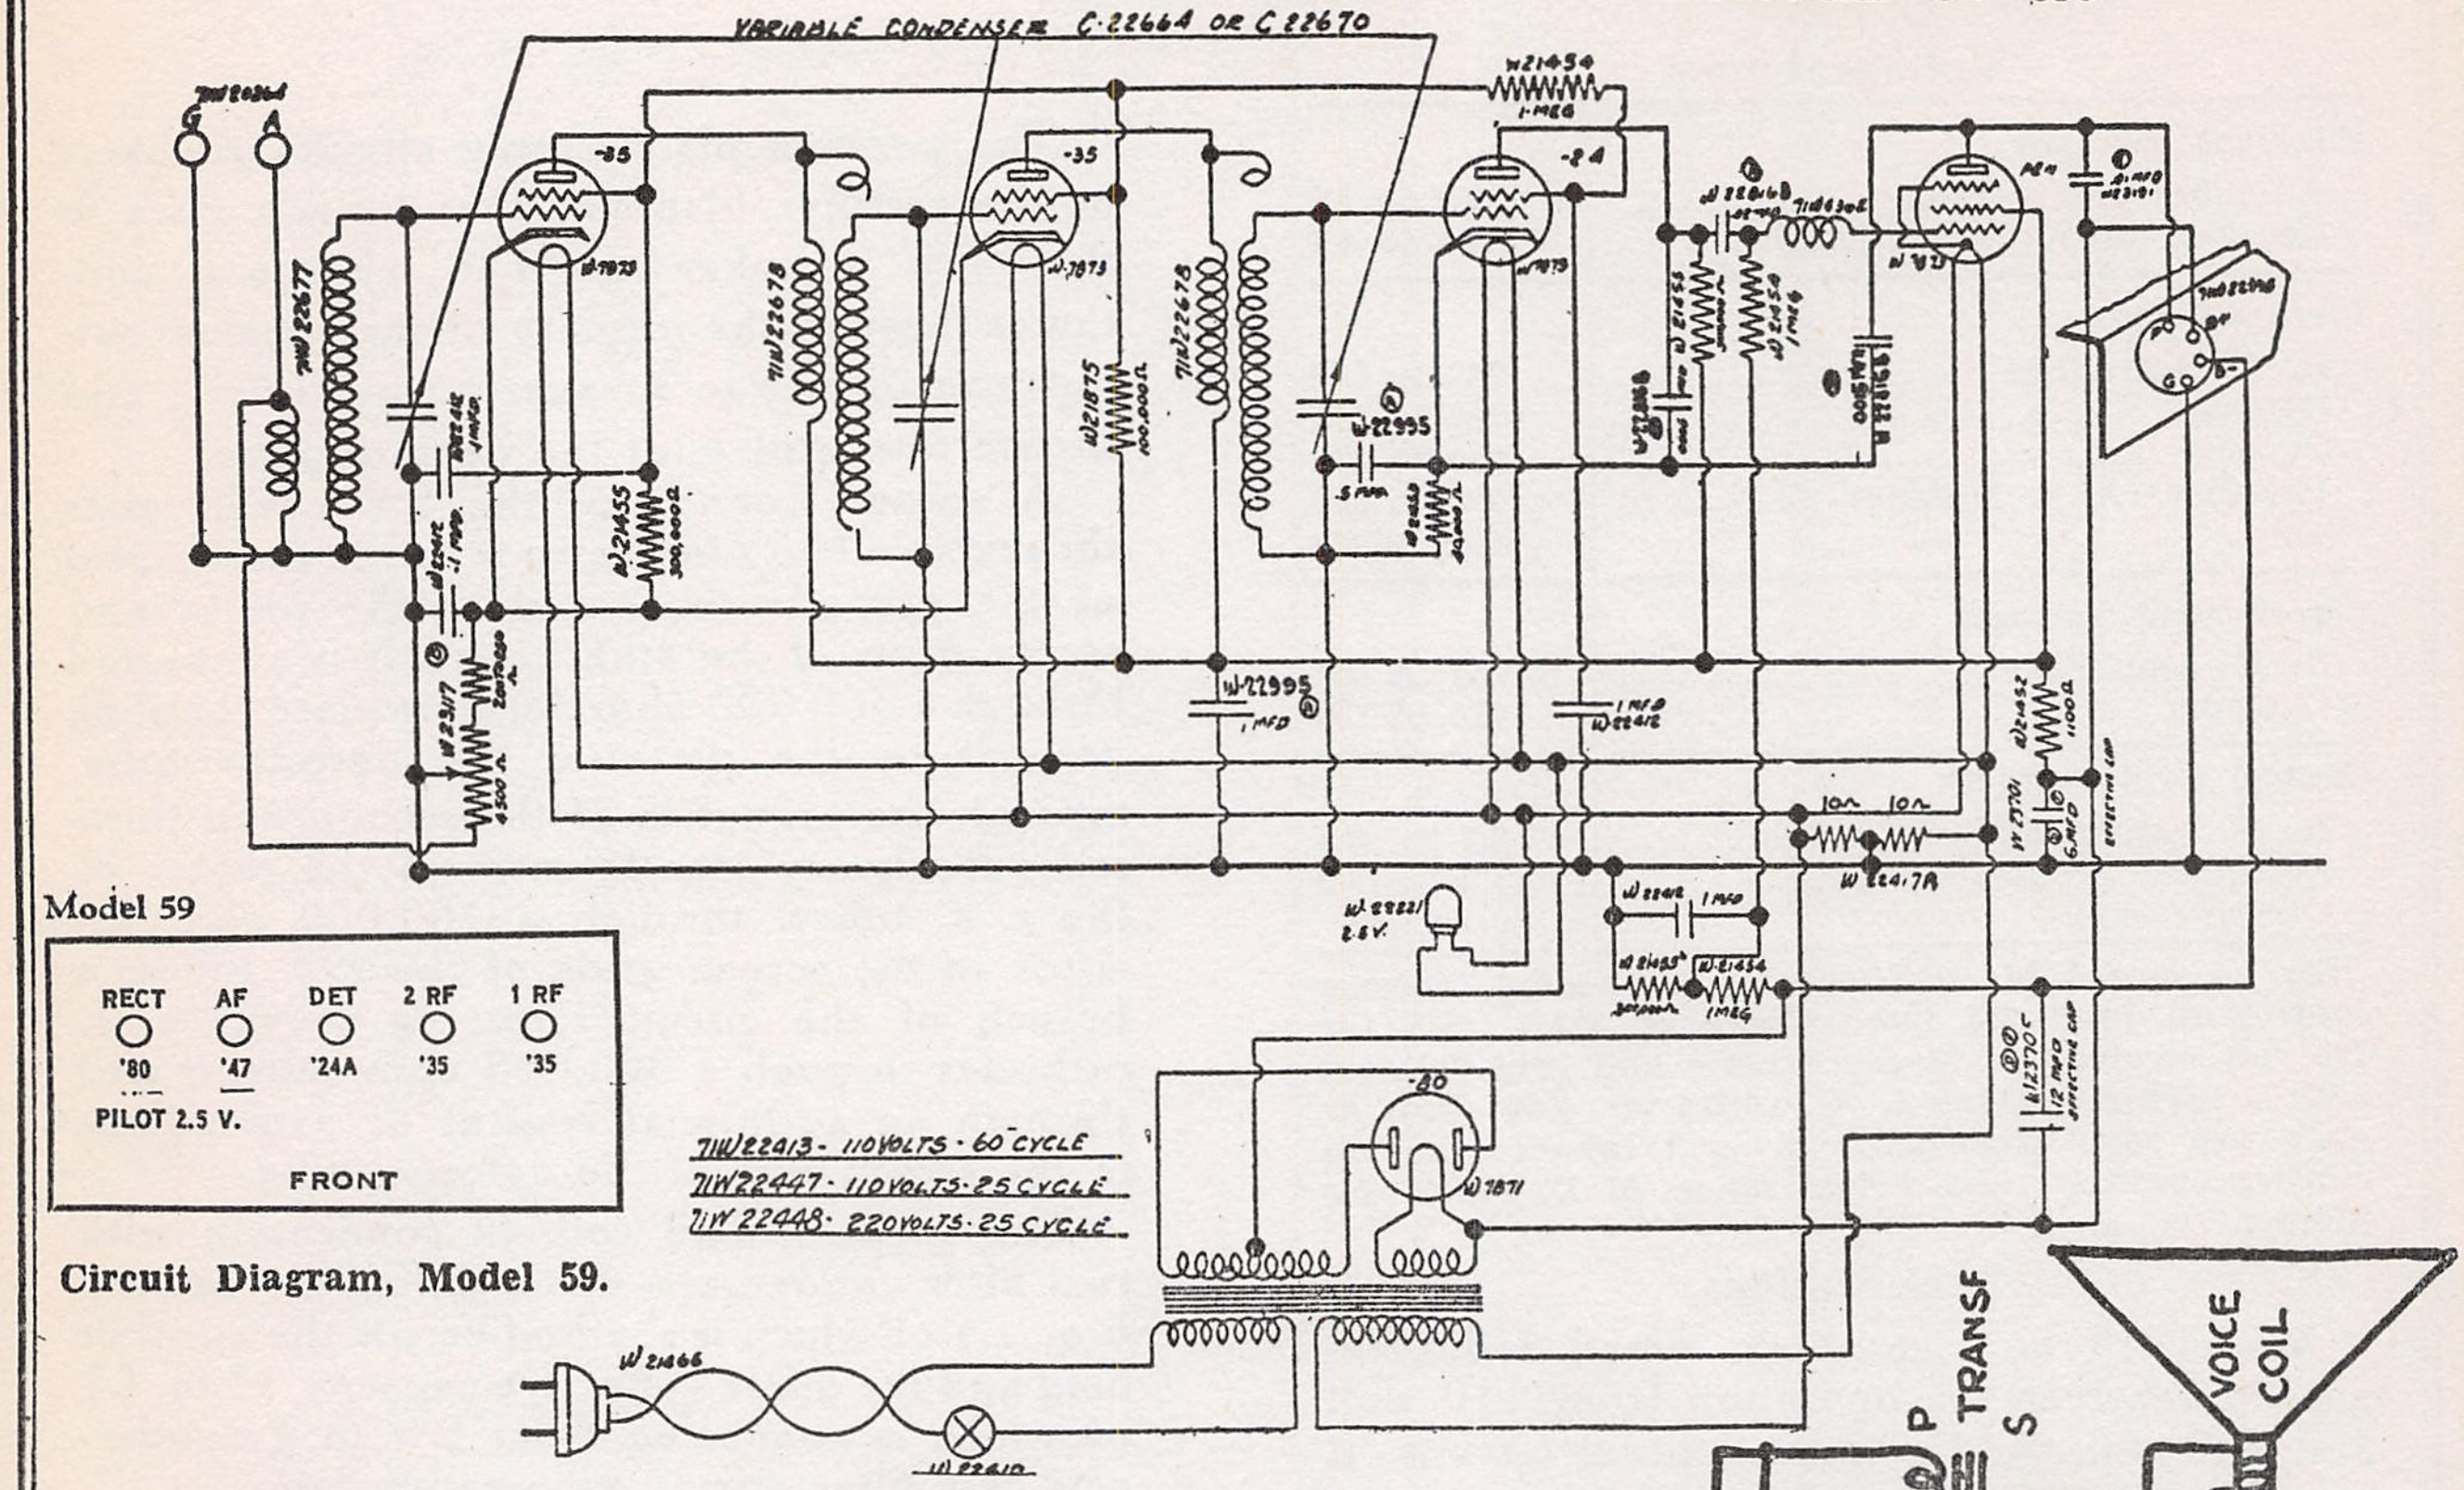
VARIABLE CONDENSER C-22664 OR C-22670
G
A
-35
-35
-24
-47
W-21454 1-MEG
71W22677
71W22678
71W22678
W-21455 300,000Ω
W-21875 100,000Ω
W-22995
W-7873
W-22995 1 MFD
1 MFD W-22412
W-22417 4500Ω
W-21452 1100Ω
10Ω 10Ω
W-22417A
W-22821 2.5V
W-22412 1 MFD
W-21455 300,000Ω
W-21454 1 MEG
6 MFD
12 MFD effective cap.
-80
W-7871
71W22413 - 110 VOLTS - 60 CYCLE
71W22447 - 110 VOLTS - 25 CYCLE
71W22448 - 220 VOLTS - 25 CYCLE
W-21466
W-22610
Model 59
RECT '80
AF '47
DET '24A
2 RF '35
1 RF '35
PILOT 2.5 V.
FRONT

Circuit Diagram, Model 59.

Voltage On Opposite Page

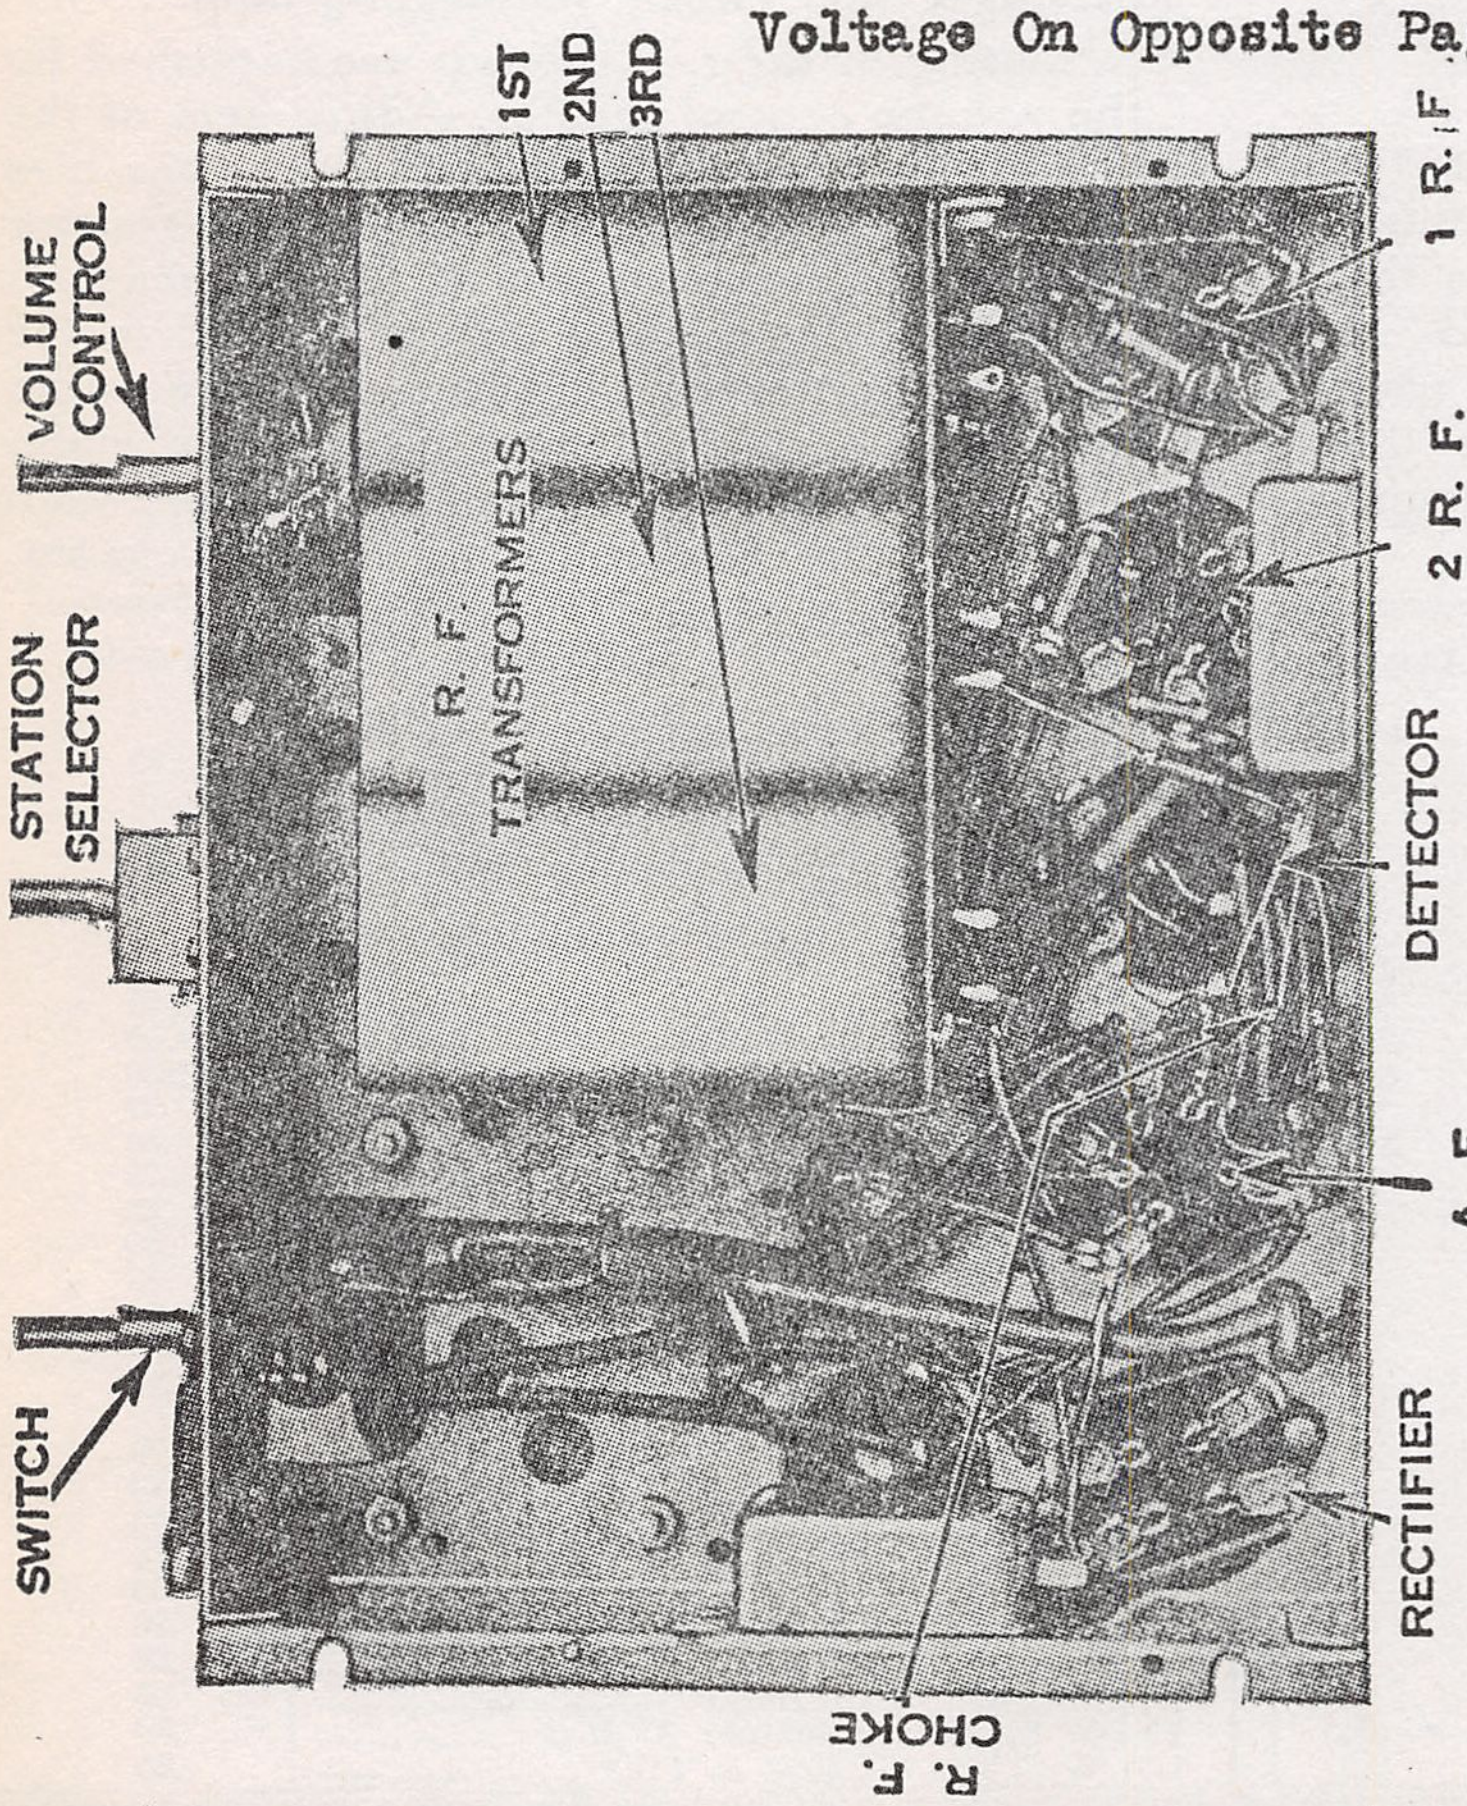
1ST
2ND
3RD
R. F. TRANSFORMERS
VOLUME CONTROL
STATION SELECTOR
SWITCH
1 R. F.
2 R. F.
DETECTOR
A. F
RECTIFIER
R. F. CHOKE

Bottom View Model 59.

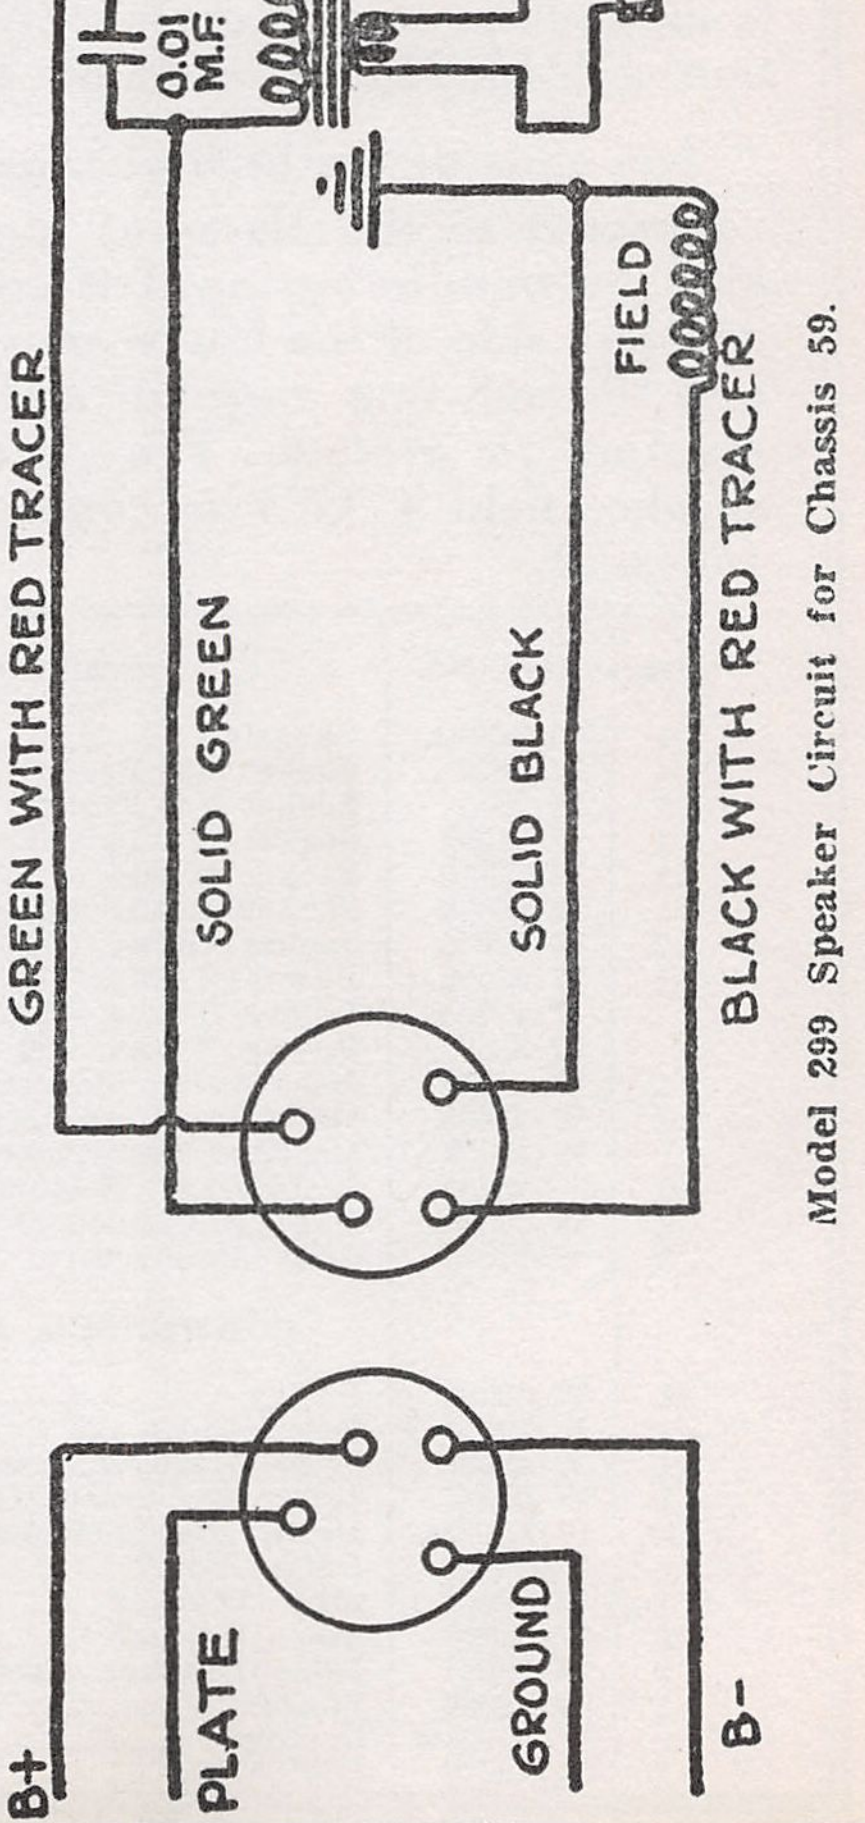
VOICE COIL
TRANSF
P
S
0.01 M.F.
FIELD
GREEN WITH RED TRACER
SOLID GREEN
SOLID BLACK
BLACK WITH RED TRACER
B+
PLATE
GROUND
B-

Model 299 Speaker Circuit for Chassis 59.

CROSLEY RADIO CORP.

MODEL V
MODEL 2-Step A-F. Amp.
Schematic

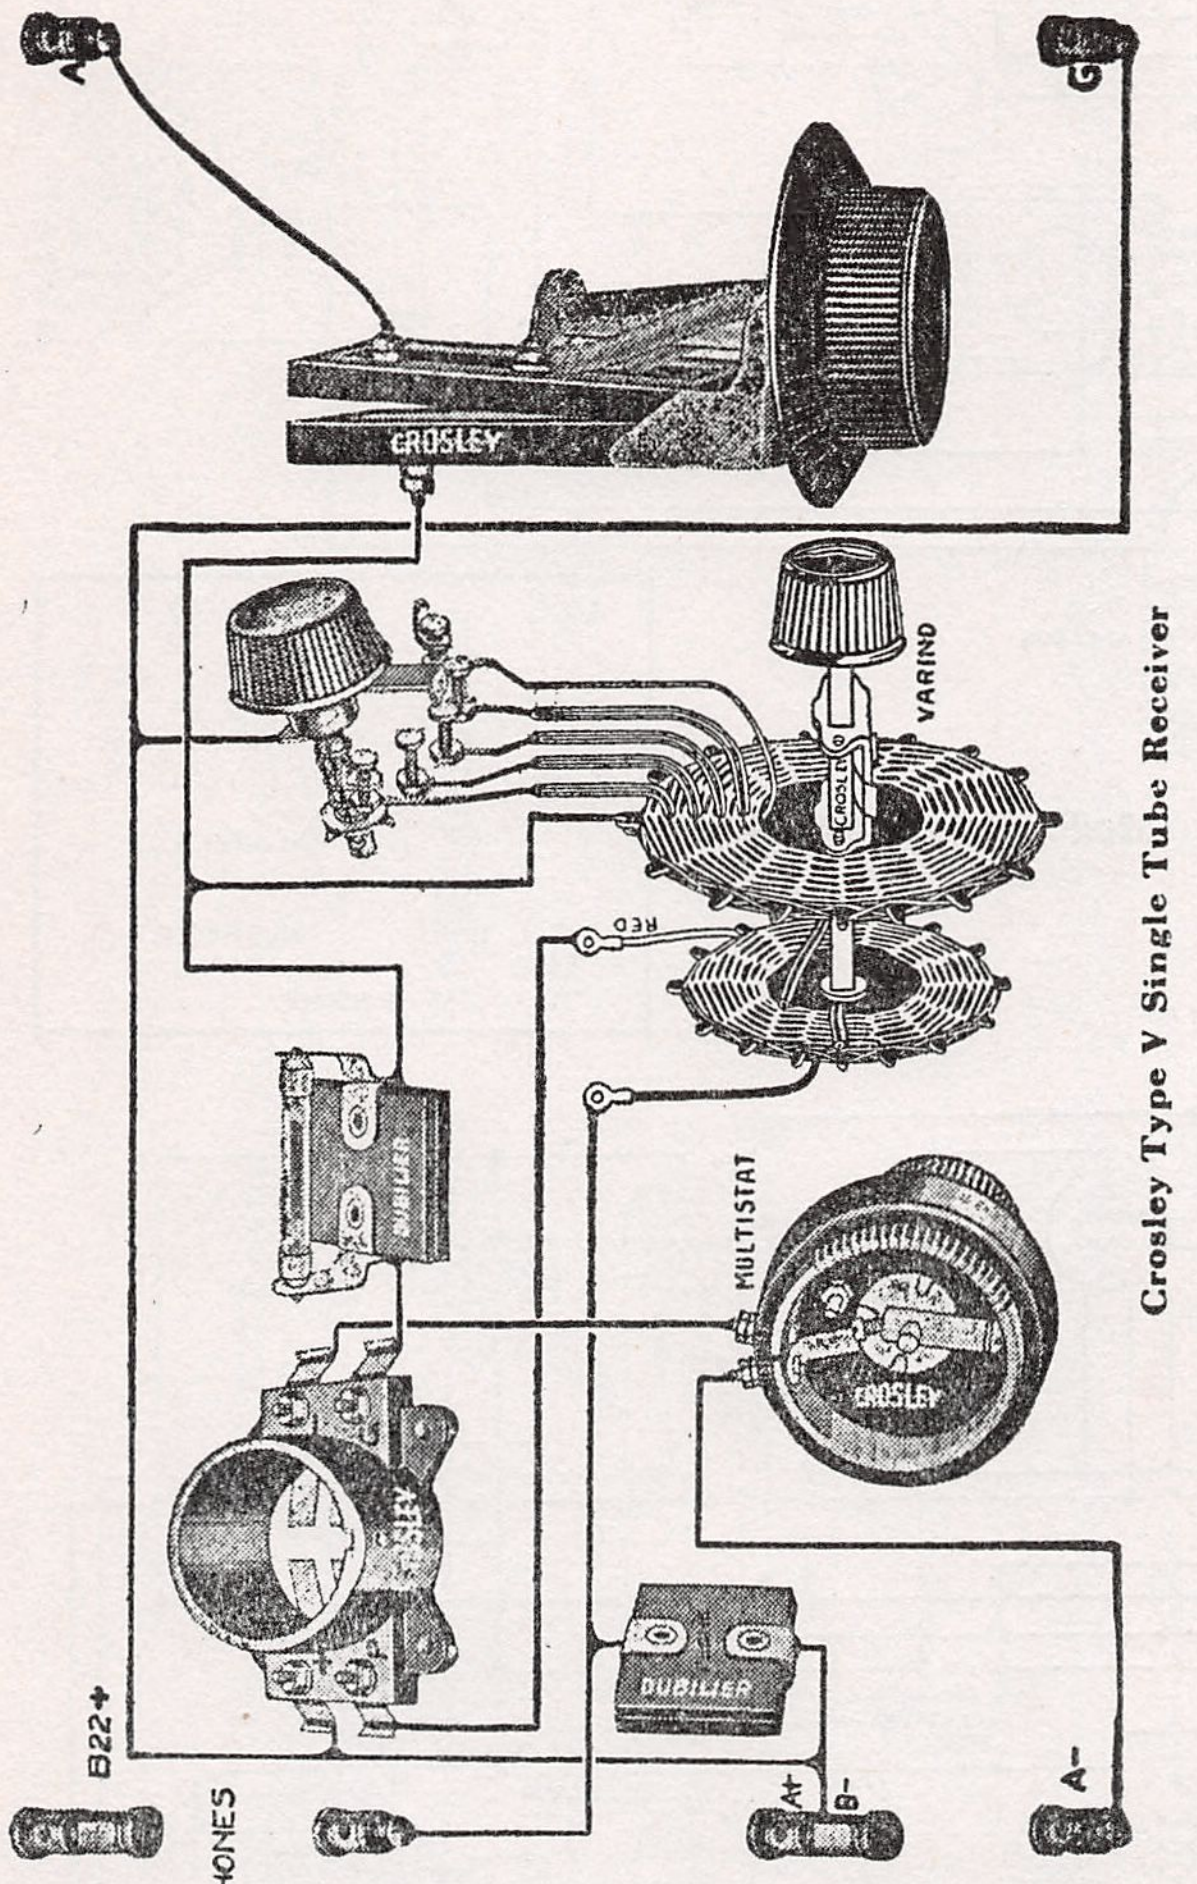
A
G
CROSLEY
VARIND
RED
MULTISTAT
CROSLEY
DUBILIER
B22+
PHONES
A+
B-
A-

Crosley Type V Single Tube Receiver

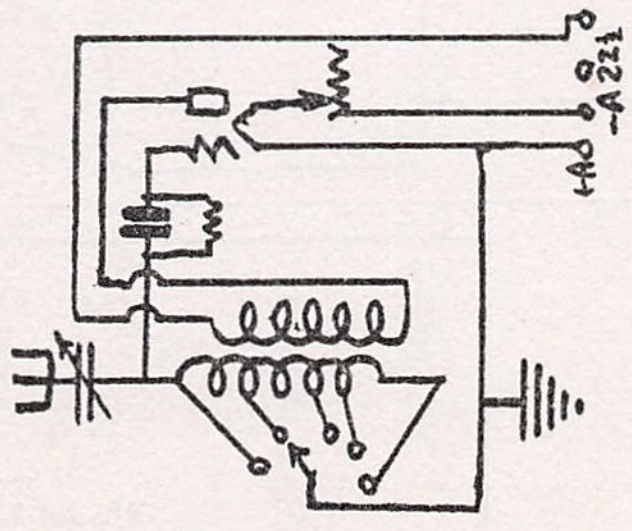

MODEL V

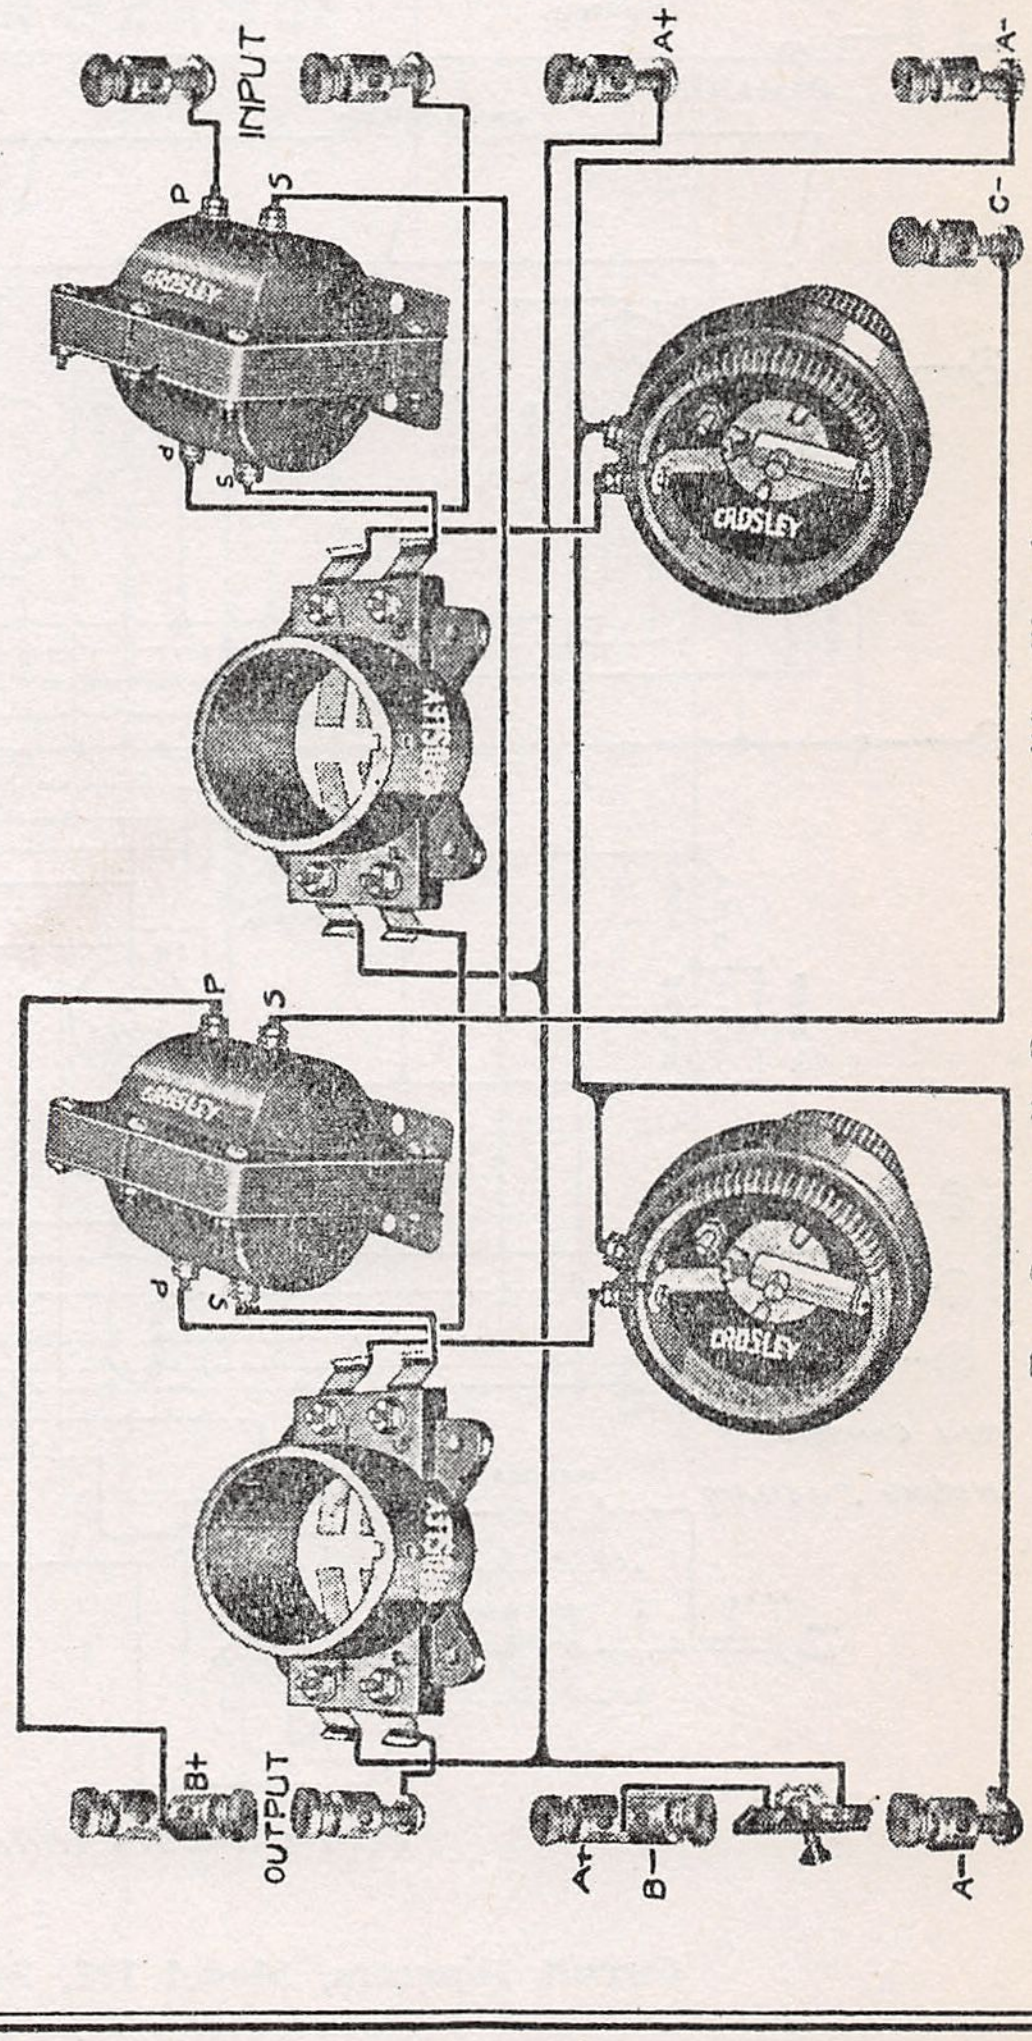
INPUT
P
S
A+
A-
C-
CROSLEY
DUBILIER
B+
OUTPUT
A+
B-
A-

Two Step Audio Frequency Amplifier Circuit

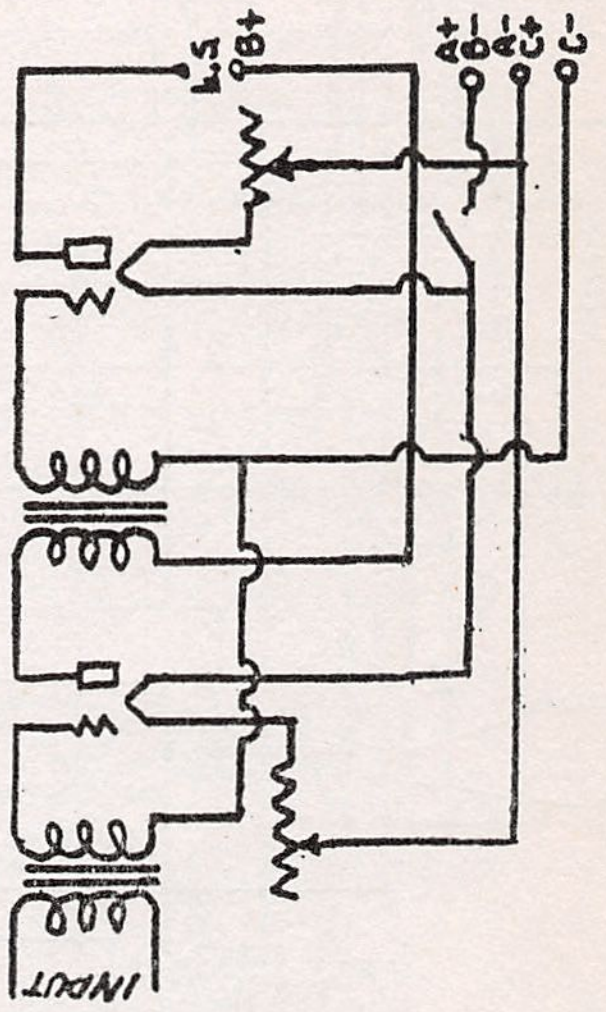
INPUT
L.S
B+
A+
B-
A-
C+
C-

MODEL TWO-STEP A-F. AMPLIFIER

MODEL 121, SERIES A
MODEL 121, SERIES B
Schematic

CROSLEY RADIO CORP.

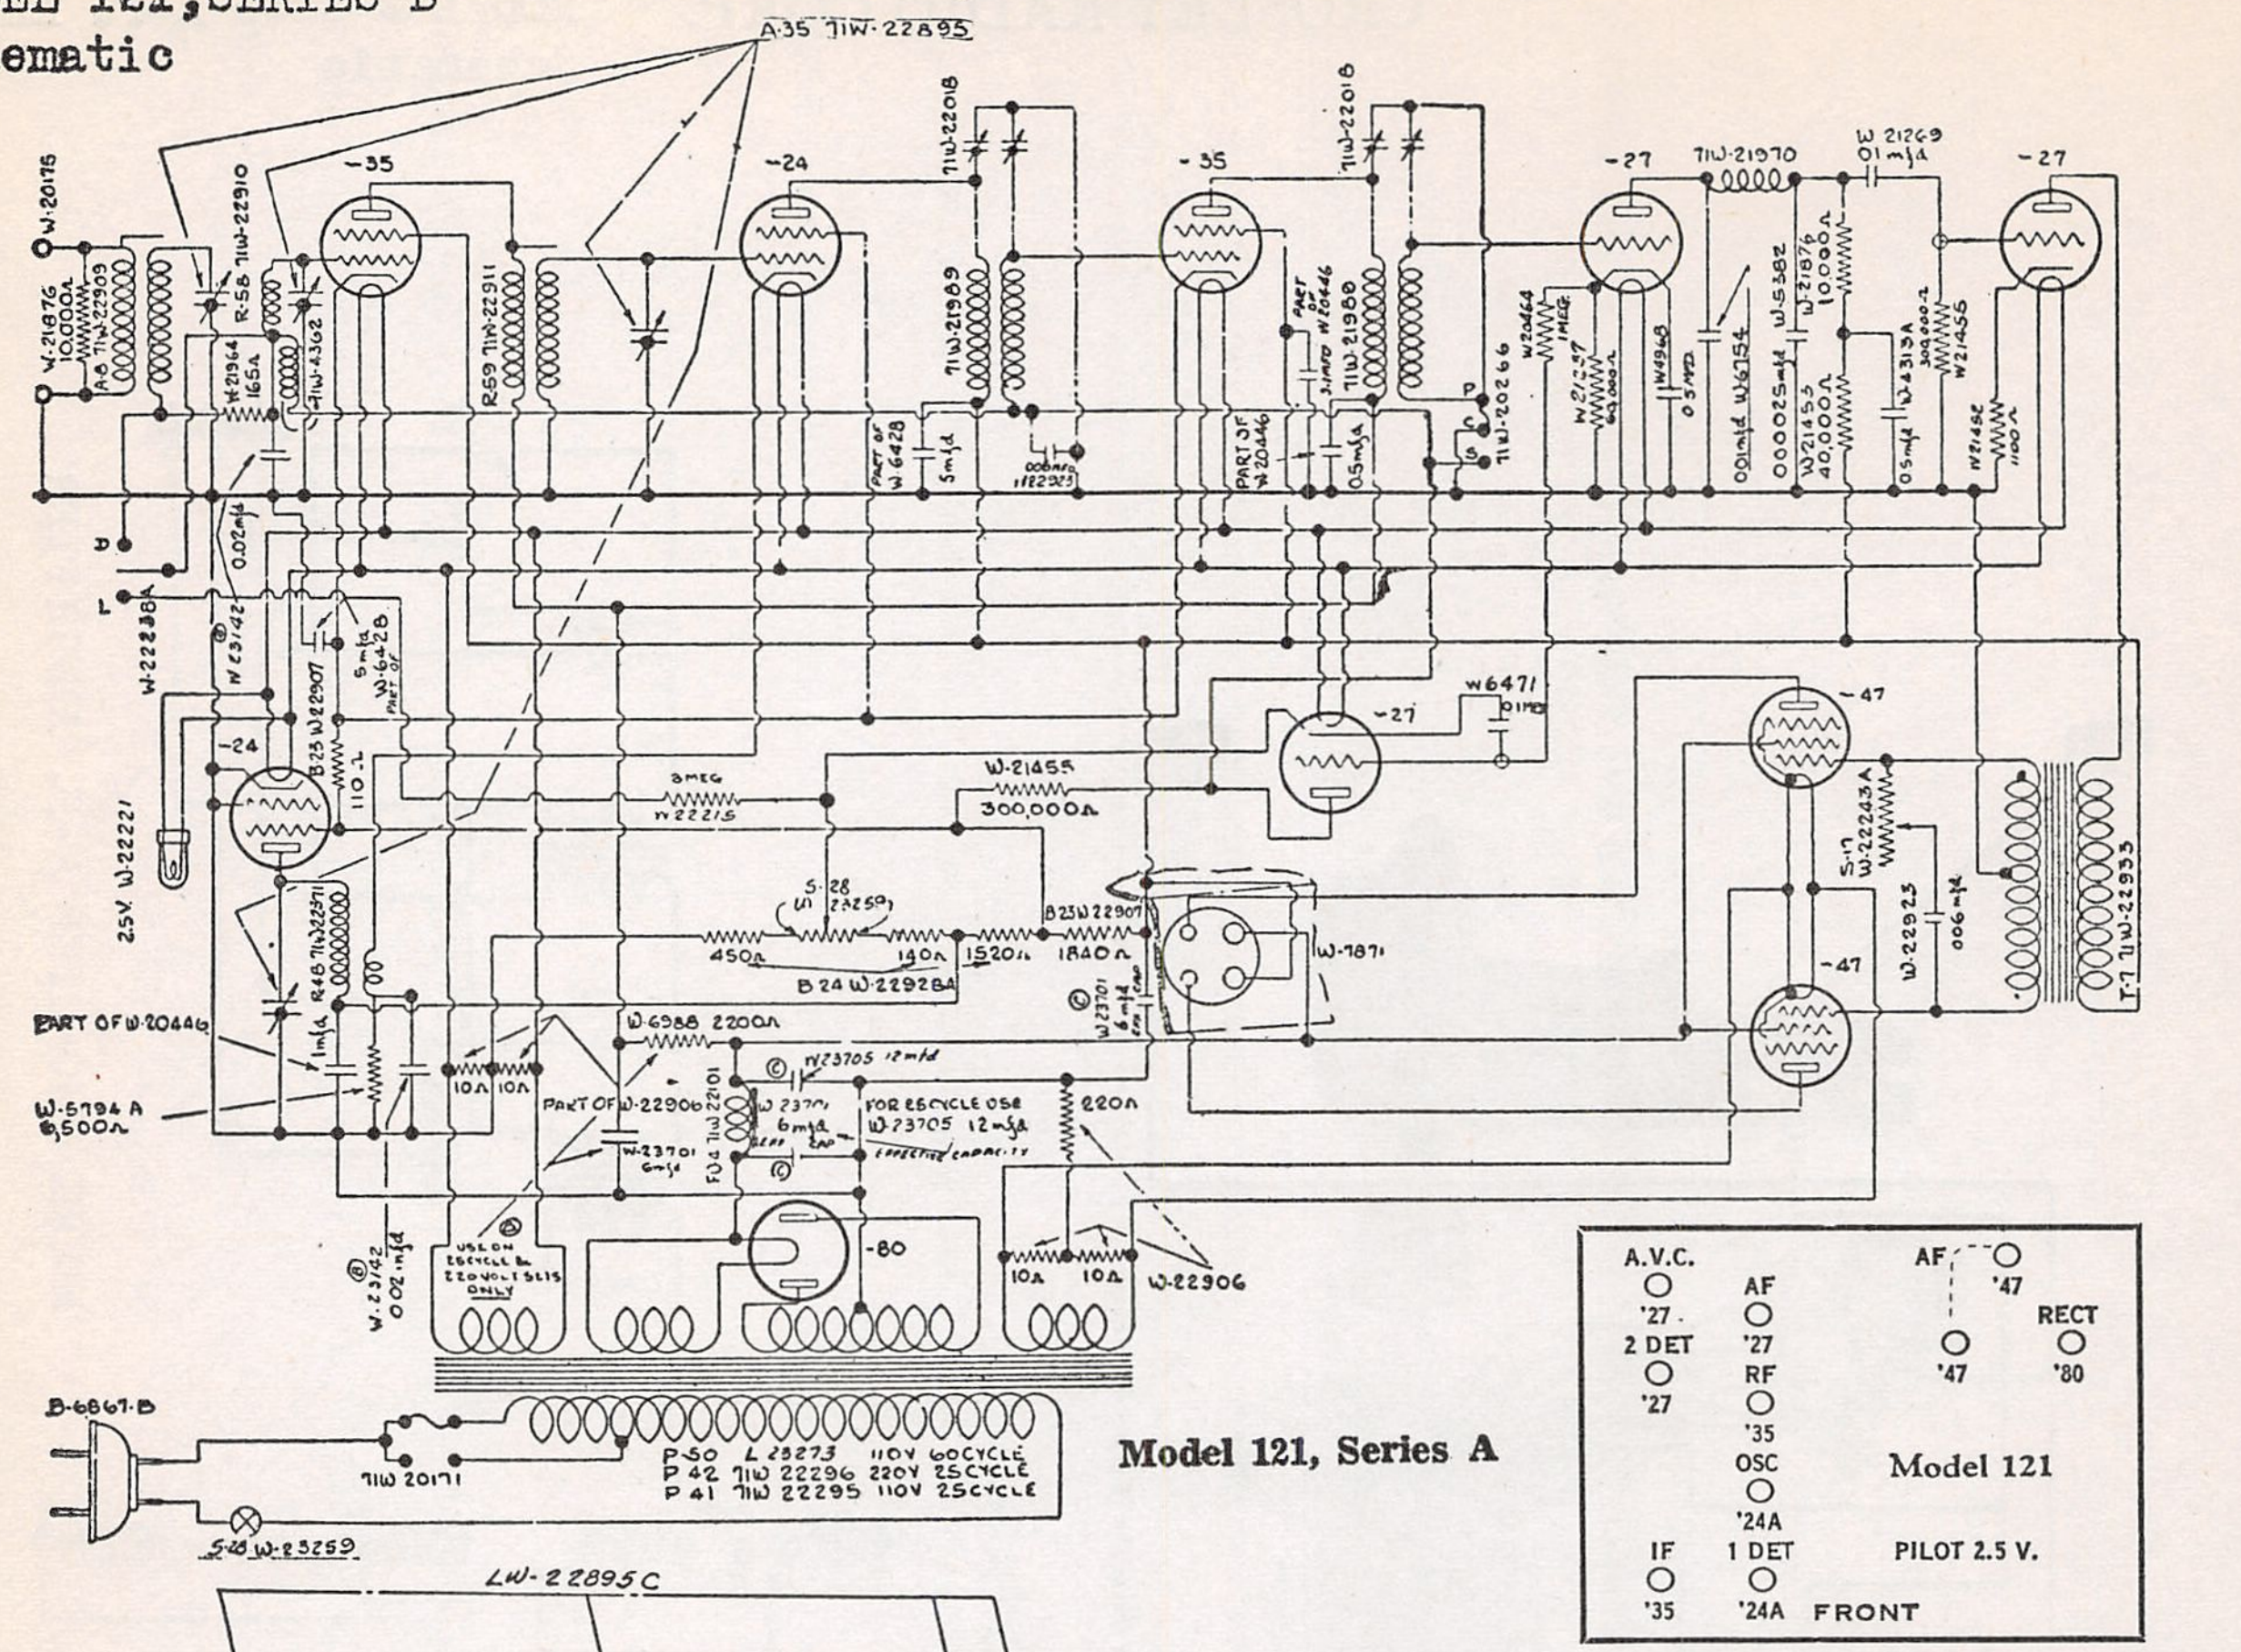
A-35 7IW-22895
-35
-24
-35
-27
-27
7IW-22018
7IW-22018
7IW-21970
W 21269 .01 mfd
W-20175
W-21876 10,000Ω
R-58 7IW-22910
7IW-22911
7IW-21989
7IW-21980
Part of W-6428
5mfd
Part of W-20446
.05mfd
W-22221
W-22238A
W-6471
-27
-47
-47
-24
W-21455 300,000Ω
3 MEG W22215
S-28 22259
450Ω
140Ω
1520Ω
1840Ω
B 24 W-22928A
B 25 W 22907
W-7871
W-22223A
W-22923
.006 mfd
T-7 7IW-22933
PART OF W-20446
W-5794 A 6,500Ω
W-6988 2200Ω
10Ω
10Ω
PART OF W-22906
W-23701 6mfd
W 23705 12 mfd
FOR 25 CYCLE USE W-23705 12 mfd
220Ω
-80
10Ω
10Ω
W-22906
W-23142 .002 mfd
USE ON 25 CYCLE & 220 VOLT SETS ONLY
B-6867-B
7IW 20171
P-50 L 23273 110V 60CYCLE
P 42 7IW 22296 220V 25CYCLE
P 41 7IW 22295 110V 25CYCLE
S-18 W-23259
D
L
A.V.C.
'27
2 DET
'27
AF
'27
RF
'35
OSC
'24A
1 DET
'24A
IF
'35
AF
'47
'47
RECT
'80
Model 121
PILOT 2.5 V.
FRONT

Model 121, Series A

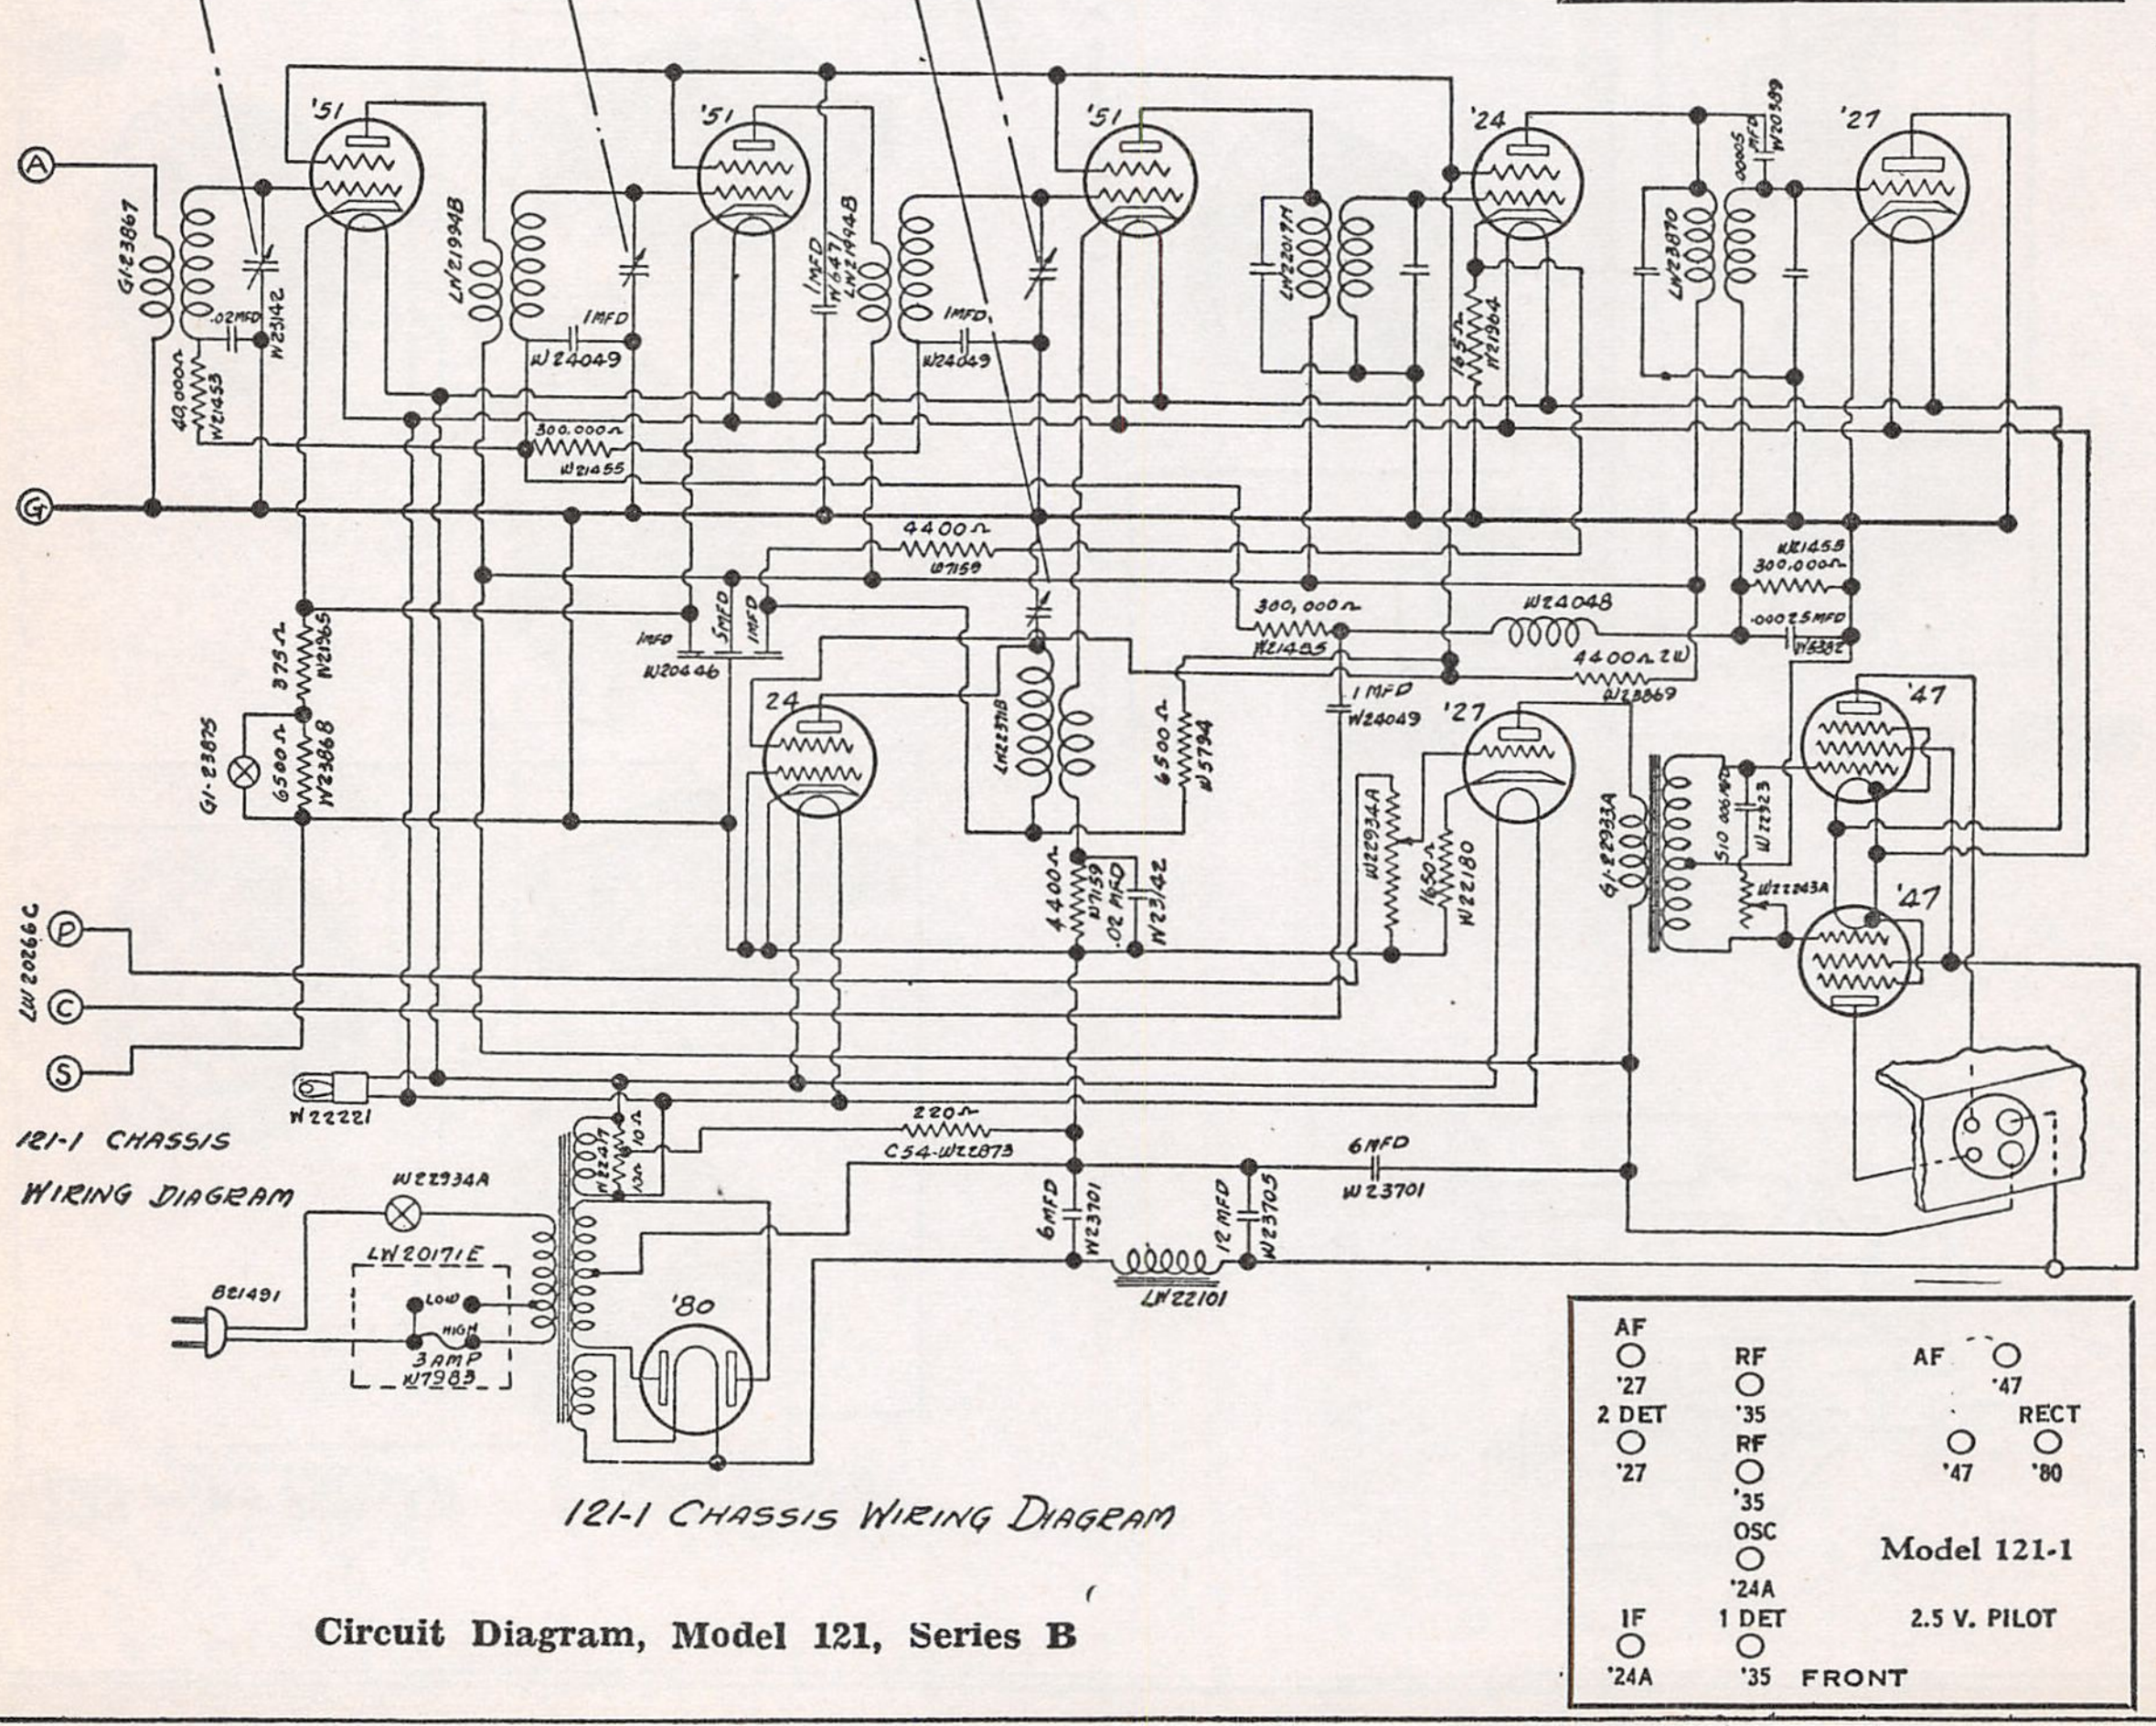
LW-22895C
'51
'51
'51
'24
'27
A
G
G1-23867
LW21934B
LW21944B
LW22017H
LW23870
.02MFD W23142
40,000Ω W21453
1MFD W24049
1MFD W6471
1MFD W24049
300,000Ω W21455
4400Ω W7159
W21455 300,000Ω
.00025MFD W6382
1MFD W20446
5MFD
1MFD
300,000Ω W21455
W24048
4400Ω 2W W23869
1MFD W24049
375Ω W21965
G1-22875
6500Ω W23868
24
LW22871B
6500Ω W5794
'27
W22934A
1650Ω W22180
G1-22933A
510 .006 MFD W22923
W22243A
'47
'47
4400Ω W7159
.02 MFD W23142
LW20266C
P
C
S
W22221
121-1 CHASSIS WIRING DIAGRAM
220Ω C54-W22873
10Ω
10Ω
6MFD W23701
W22934A
LW20171E
LOW
HIGH
3AMP W7989
B21491
6MFD W23701
LW22101
12MFD W23705
'80
AF
'27
2 DET
'27
RF
'35
RF
'35
OSC
'24A
1 DET
'35
IF
'24A
AF
'47
'47
RECT
'80
Model 121-1
2.5 V. PILOT
FRONT

121-1 Chassis Wiring Diagram

Circuit Diagram, Model 121, Series B

CROSLEY RADIO CORP

MODEL 122
Schematic, Voltage

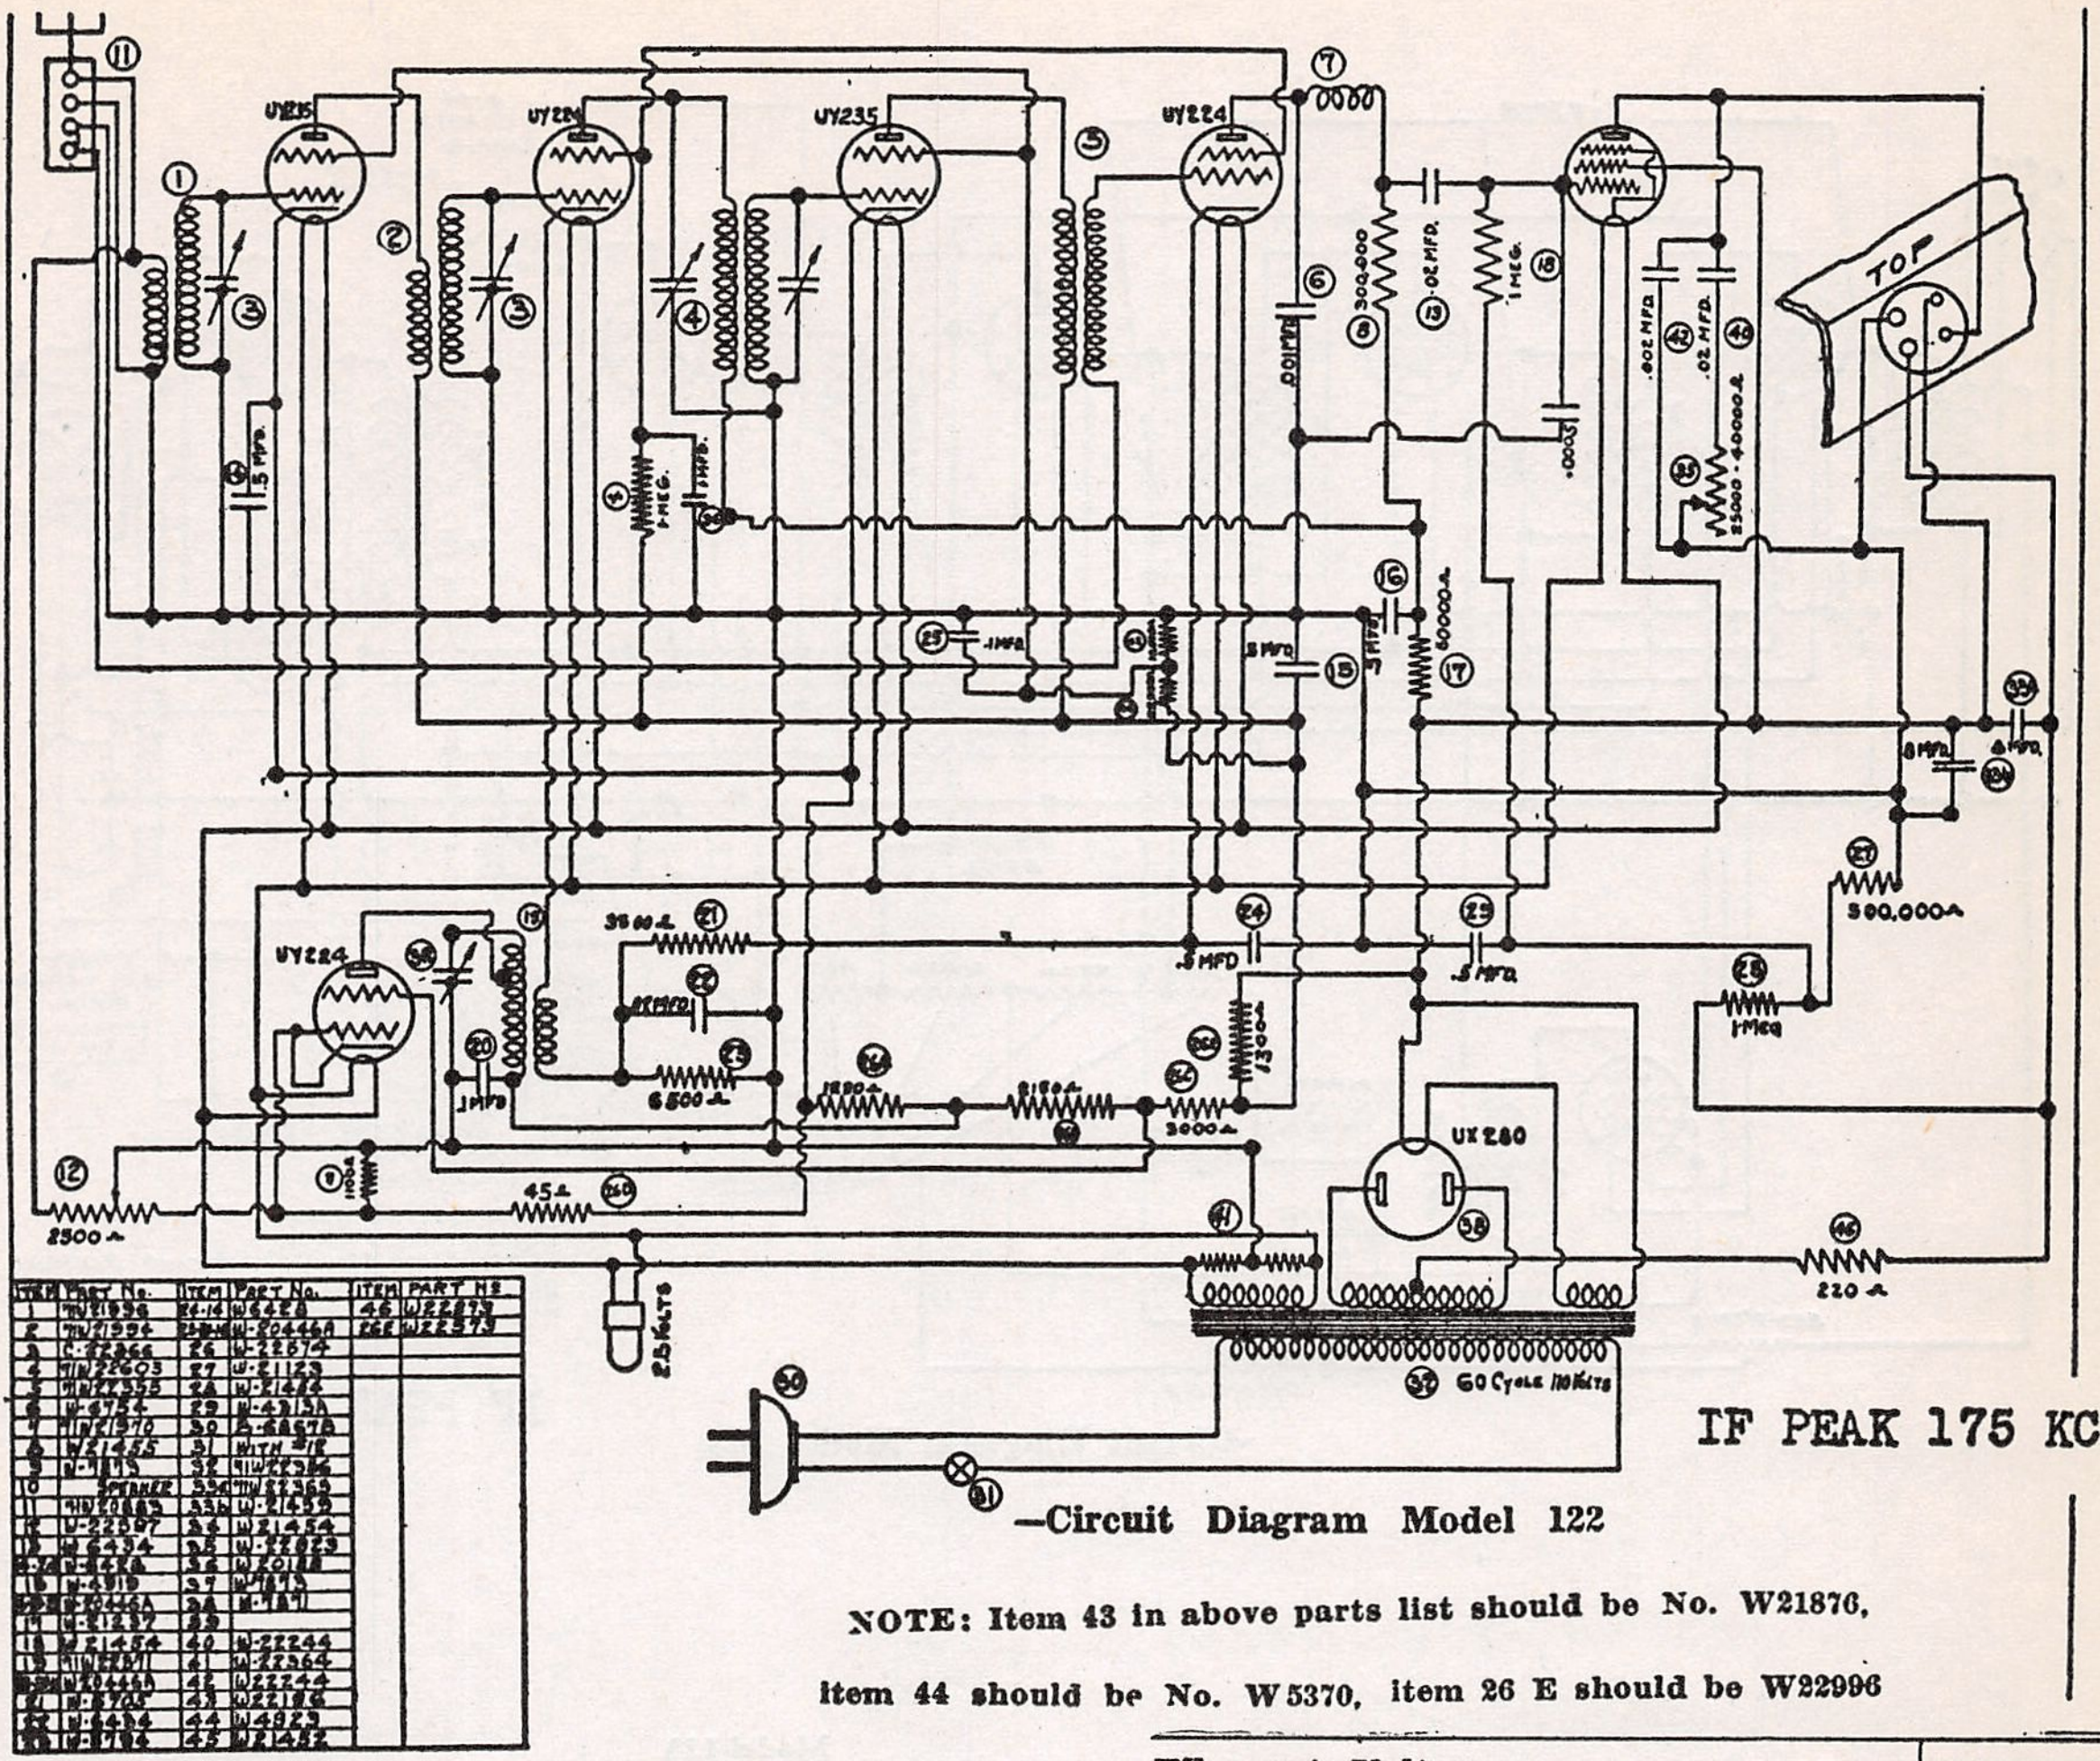
UY224
UY227
UY235
UY224
UY224
UX280
TOP
.5 MFD.
300,000 Ω
.02 MFD.
1 MEG.
.0002
.002 MFD.
.02 MFD.
25000 - 40000 Ω
1 MEG.
1 MFD.
.1 MFD.
50000 Ω
.5 MFD.
8 MFD.
8 MFD.
300,000 Ω
1 Meg
3500 Ω
.002 MFD
6500 Ω
1 MFD
1800 Ω
6150 Ω
3000 Ω
1300 Ω
45 Ω
2500 Ω
2.5 VOLTS
220 Ω
60 Cycle 110 Volts

ITEM	PART No.	ITEM	PART No.	ITEM	PART No.
1	W21896	23-24	W6424A	46	W22287
2	W21894	25-26	W-20446A	26E	W22287
3	C-22866	26	W-22874		
4	W22603	27	W-21123		
5	W22355	28	W-21484		
6	W-6754	29	W-43135A		
7	W21870	30	W-28857B		
8	W21455	31	WITH 21		
9	W-[illegible]	32	W22996		
10	SPEAKER	33a	W22369		
11	W20885	33b	W-21459		
12	W-22297	34	W21454		
13	W-6434	35	W-22823		
14	W-6456	36	W20118		
15	W-4919	37	[illegible]		
16	W20446A	38	W-[illegible]		
17	W-21237	39			
18	W21454	40	W-22244		
19	[illegible]	41	W-22364		
20	W20446A	42	W22244		
21	W-8705	43	W22186		
22	W-6434	44	W4923		
23	[illegible]	45	W21482		

IF PEAK 175 KC

—Circuit Diagram Model 122

NOTE: Item 43 in above parts list should be No. W21876, item 44 should be No. W 5370, item 26 E should be W22996

Model 122

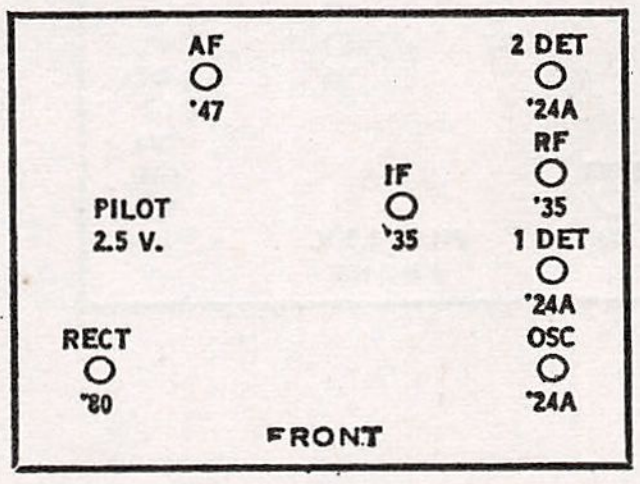
AF
'47
2 DET
'24A
RF
'35
IF
'35
PILOT
2.5 V.
1 DET
'24A
RECT
'80
OSC
'24A
FRONT

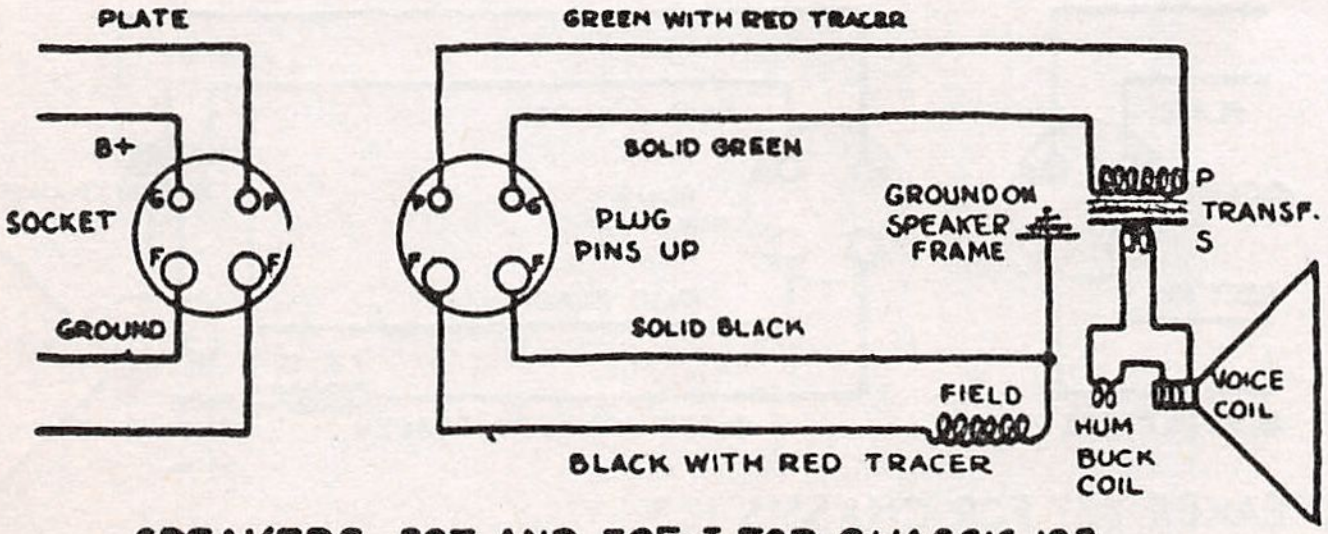
PLATE
B+
SOCKET
GROUND
GREEN WITH RED TRACER
SOLID GREEN
PLUG
PINS UP
SOLID BLACK
GROUND ON SPEAKER FRAME
P
TRANSF.
S
FIELD
HUM
BUCK
COIL
VOICE
COIL
BLACK WITH RED TRACER

SPEAKERS 297 AND 305-J FOR CHASSIS 122

Filament Voltages	
All tubes but rectifier	2.3 to 2.5
Rectifier tube	4.6 to 5.0
Plate Voltages	
1st R. F. and Intermediate Amplifiers	170 to 200
Oscillator	28 to 38
1st Detector and 2nd Detector	185 to 215
Output	260 to 300
Rectifier (A. C. voltage)	280 to 320 each plate
Screen Grid Voltages	
1st R. F. and Intermediate Amplifiers	45 to 55
1st Detector and 2nd Detector	60 to 80
Oscillator	80 to 100
Output	260 to 300
Control Grid Voltages	
1st R. F. and Intermediate Amplifiers	1.5 to 2.5
1st Detector	6.0 to 8.0
2nd Detector	8.0 to 10.0
Output tube	18.0 to 22.0

To be measured with speaker connected, volume control on full, and line voltage of 117½ (235 for 220 volt receivers).

For Alignment, Changes and Chassis Data see next page

MODEL 123
Schematic, Voltage

CROSLEY RADIO CORP.

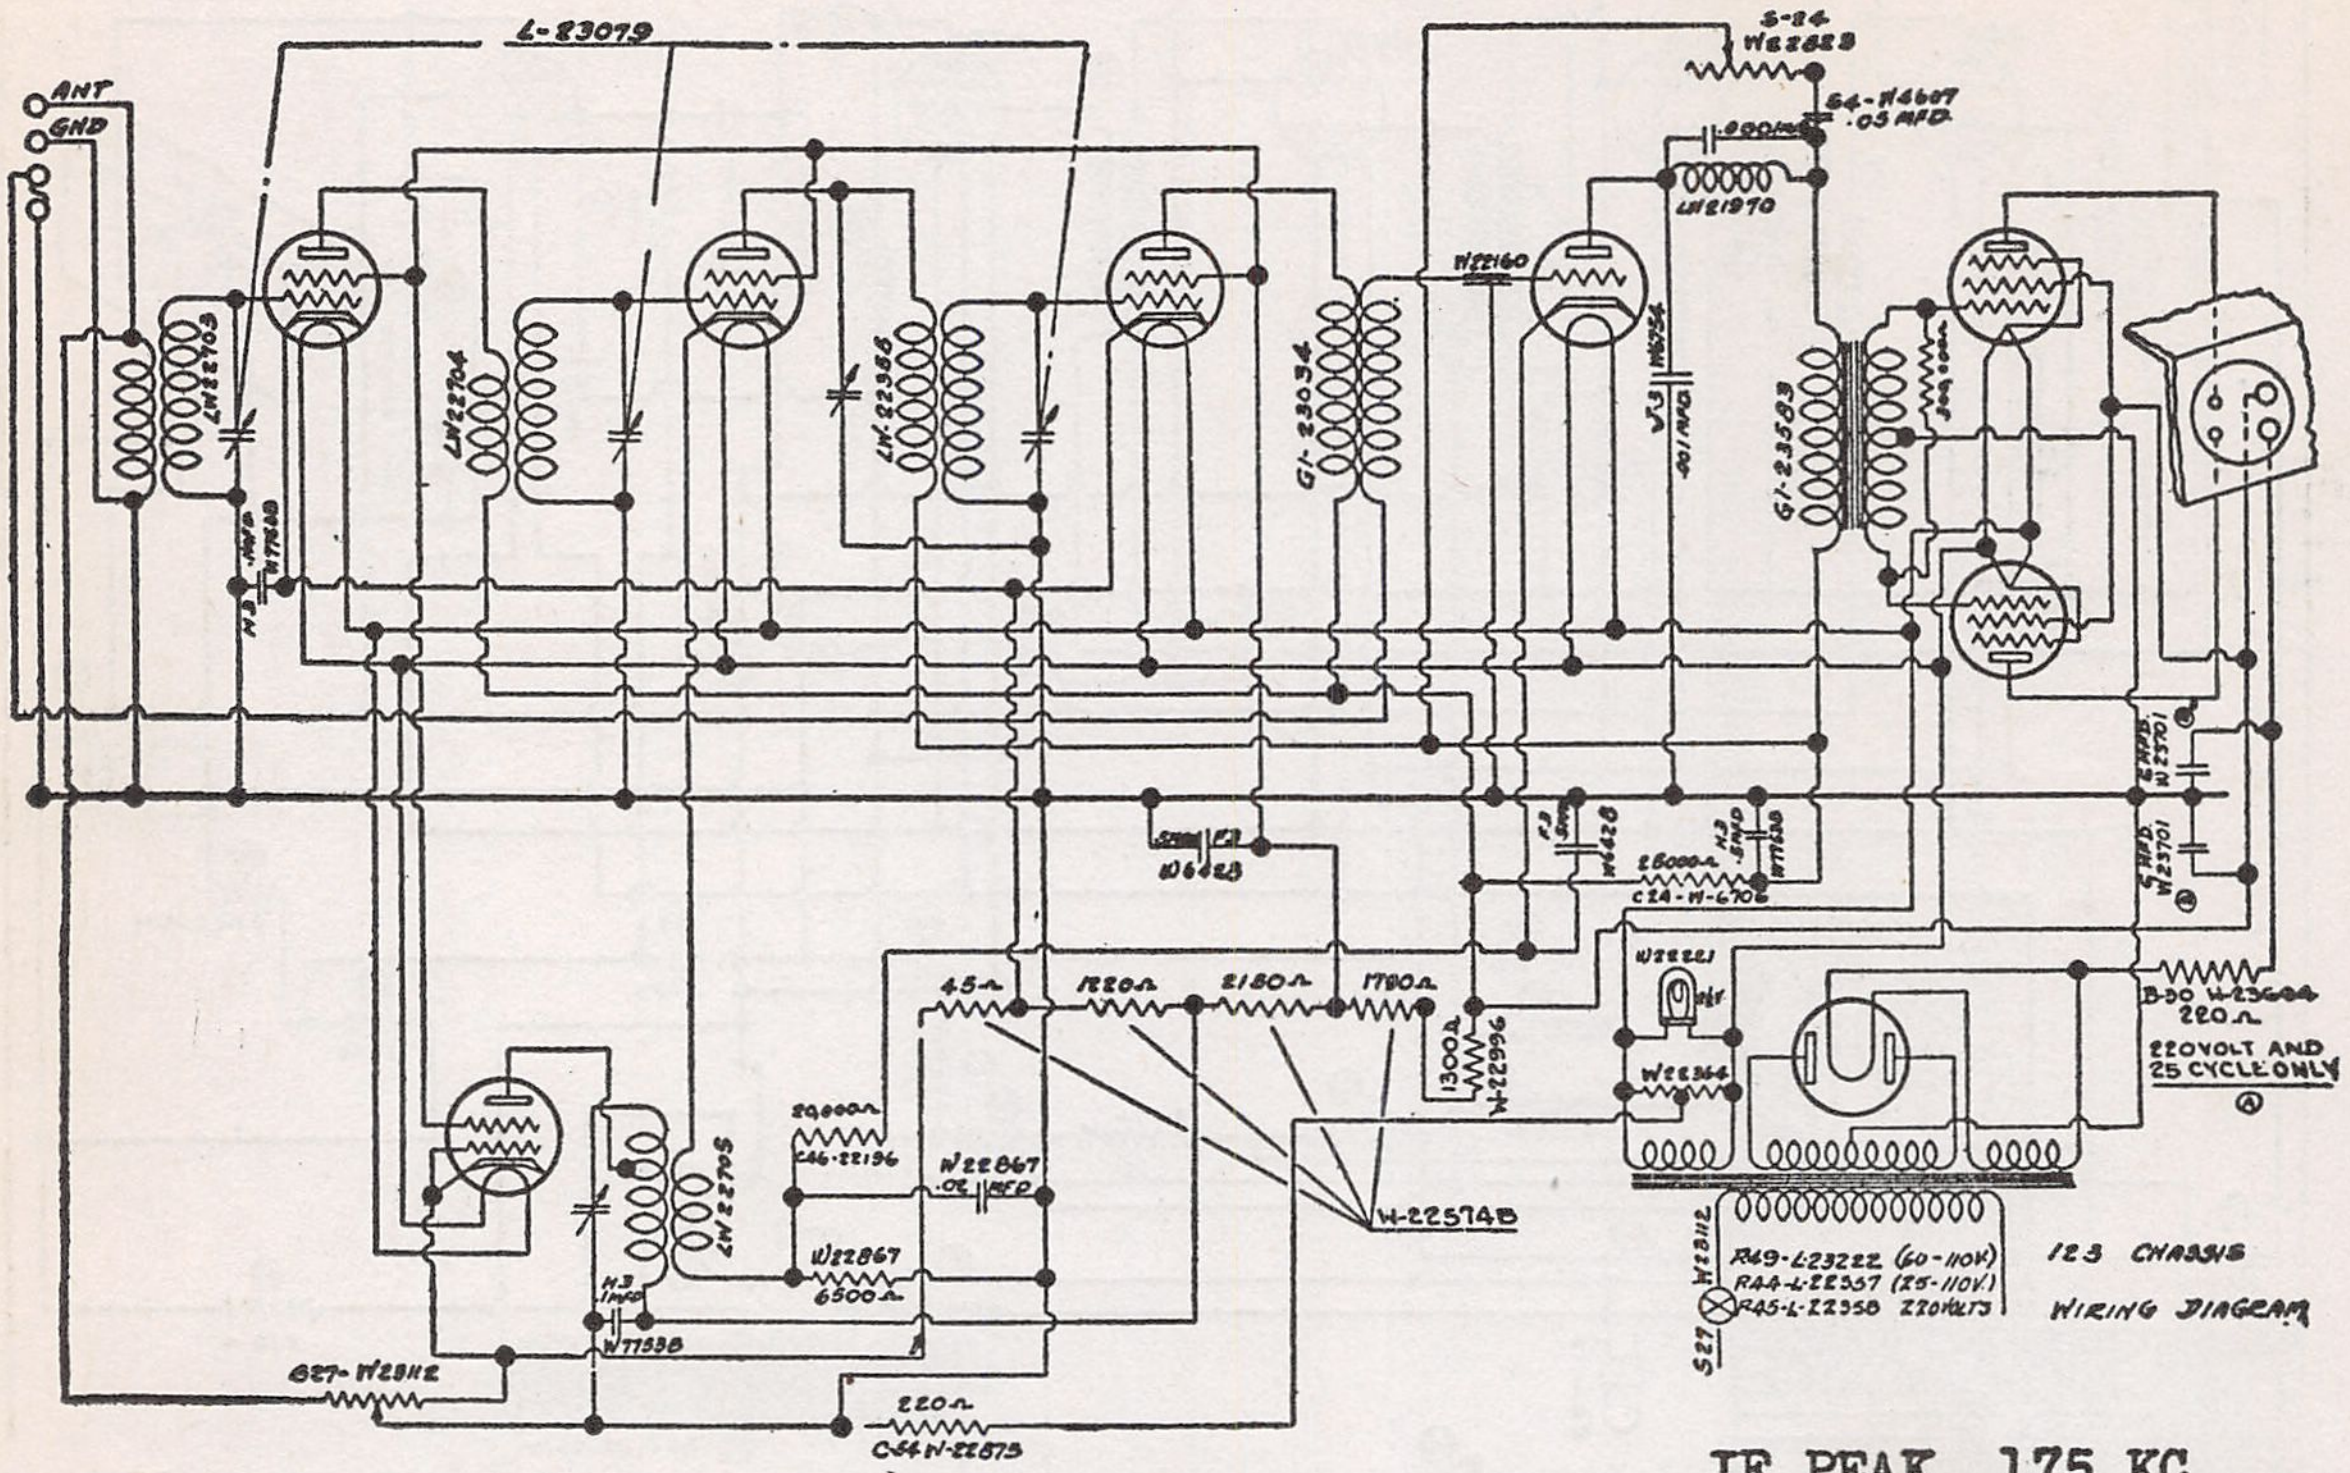
ANT
GND
L-23079
LH22703
H3 1MFD W77538
LH22704
LH-22366
G1-23034
W22160
S-24 W22823
S4-W4607 .05 MFD
.0001MFD
LH21970
V3 W6754 .001 MFD
G1-23583
30,000Ω
5000 F3 W6428
F3 .5MFD W6428
H3 .5MFD W77538
26000Ω C24-W-6706
6 MFD W23701
W22221
W22364
B-30 W-23604 220Ω
220VOLT AND 25 CYCLE ONLY
Ⓐ
Ⓑ
45Ω
1220Ω
2180Ω
1780Ω
1300Ω W-22996
W-22574B
29,000Ω C46-22196
W22867 .02 MFD
W22867 6500Ω
H3 1MFD W77538
B27-W28H2
220Ω C54 W-22873
W28112
S27
R49-L23222 (60-110V)
R44-L-22357 (25-110V.)
R45-L-22358 220VOLTS
123 CHASSIS WIRING DIAGRAM

-Circuit Diagram Model 123

IF PEAK 175 KC

Voltage Limits

Filament Voltages	
R. F., First Detector, Oscillator and Second Detector	2.2 to 2.4
I. F. Amplifier	2.2 to 2.5
Output	2.3 to 2.6
Rectifier	4.9 to 5.3
Plate Voltages	
R. F. and I. F. Amplifiers	215 to 245
First Detector	170 to 190
Oscillator	32 to 42
Second Detector	160 to 180
Output	190 to 230
Rectifier, D. C. voltage	290 to 330
Screen Grid Voltages	
Oscillator, R. F. and I. F. Amplifiers	90 to 110
First Detector	80 to 100
Output	200 to 240
Control Grid Voltages	
R. F. and I. F. Amplifiers	1.5 to 2.5
First Detector	7 to 9
Second Detector	18 to 22
Output	13 to 16

Model 123

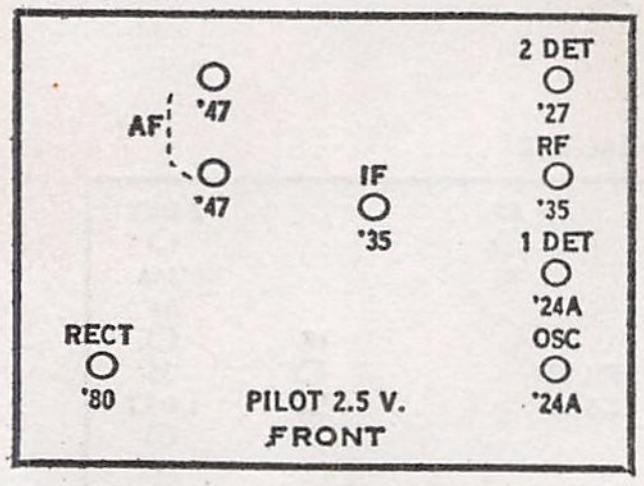
AF
'47
'47
IF
'35
2 DET
'27
RF
'35
1 DET
'24A
OSC
'24A
RECT
'80
PILOT 2.5 V.
FRONT

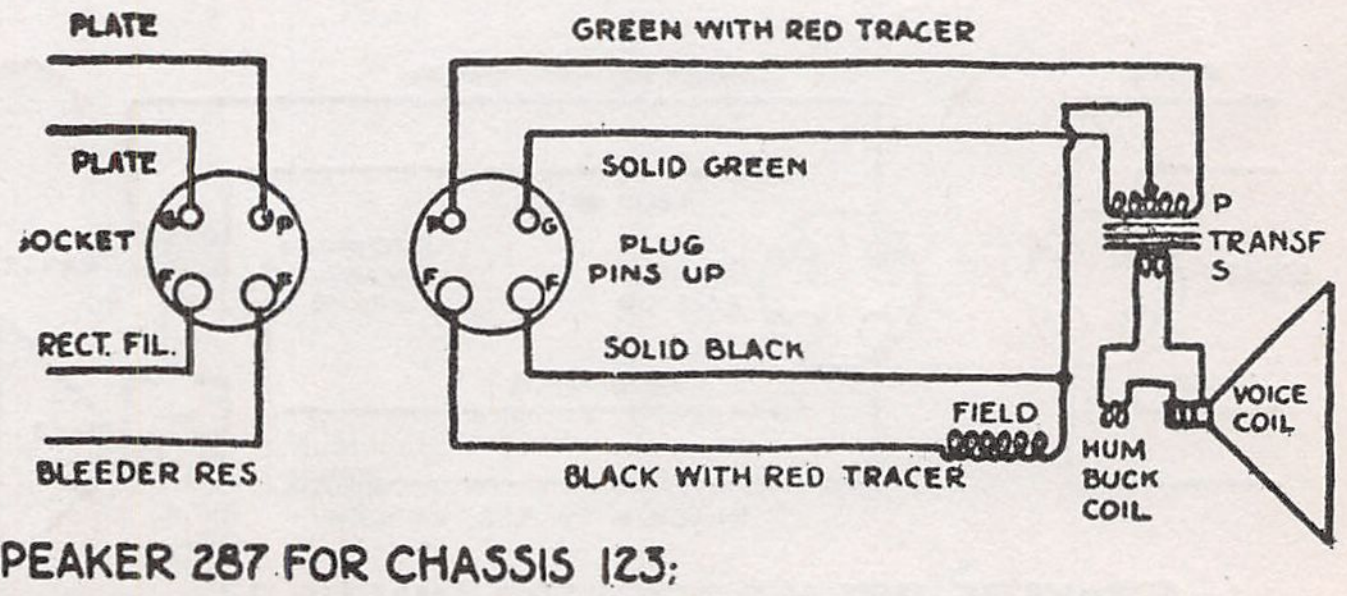
PLATE
PLATE
SOCKET
P
P
F
F
RECT. FIL.
BLEEDER RES
GREEN WITH RED TRACER
SOLID GREEN
PLUG PINS UP
G
F
F
SOLID BLACK
FIELD
BLACK WITH RED TRACER
P
TRANSF
S
VOICE COIL
HUM BUCK COIL

SPEAKER 287 FOR CHASSIS 123;

MODEL 124
Schematic
Voltage

CROSLEY RADIO CORP.

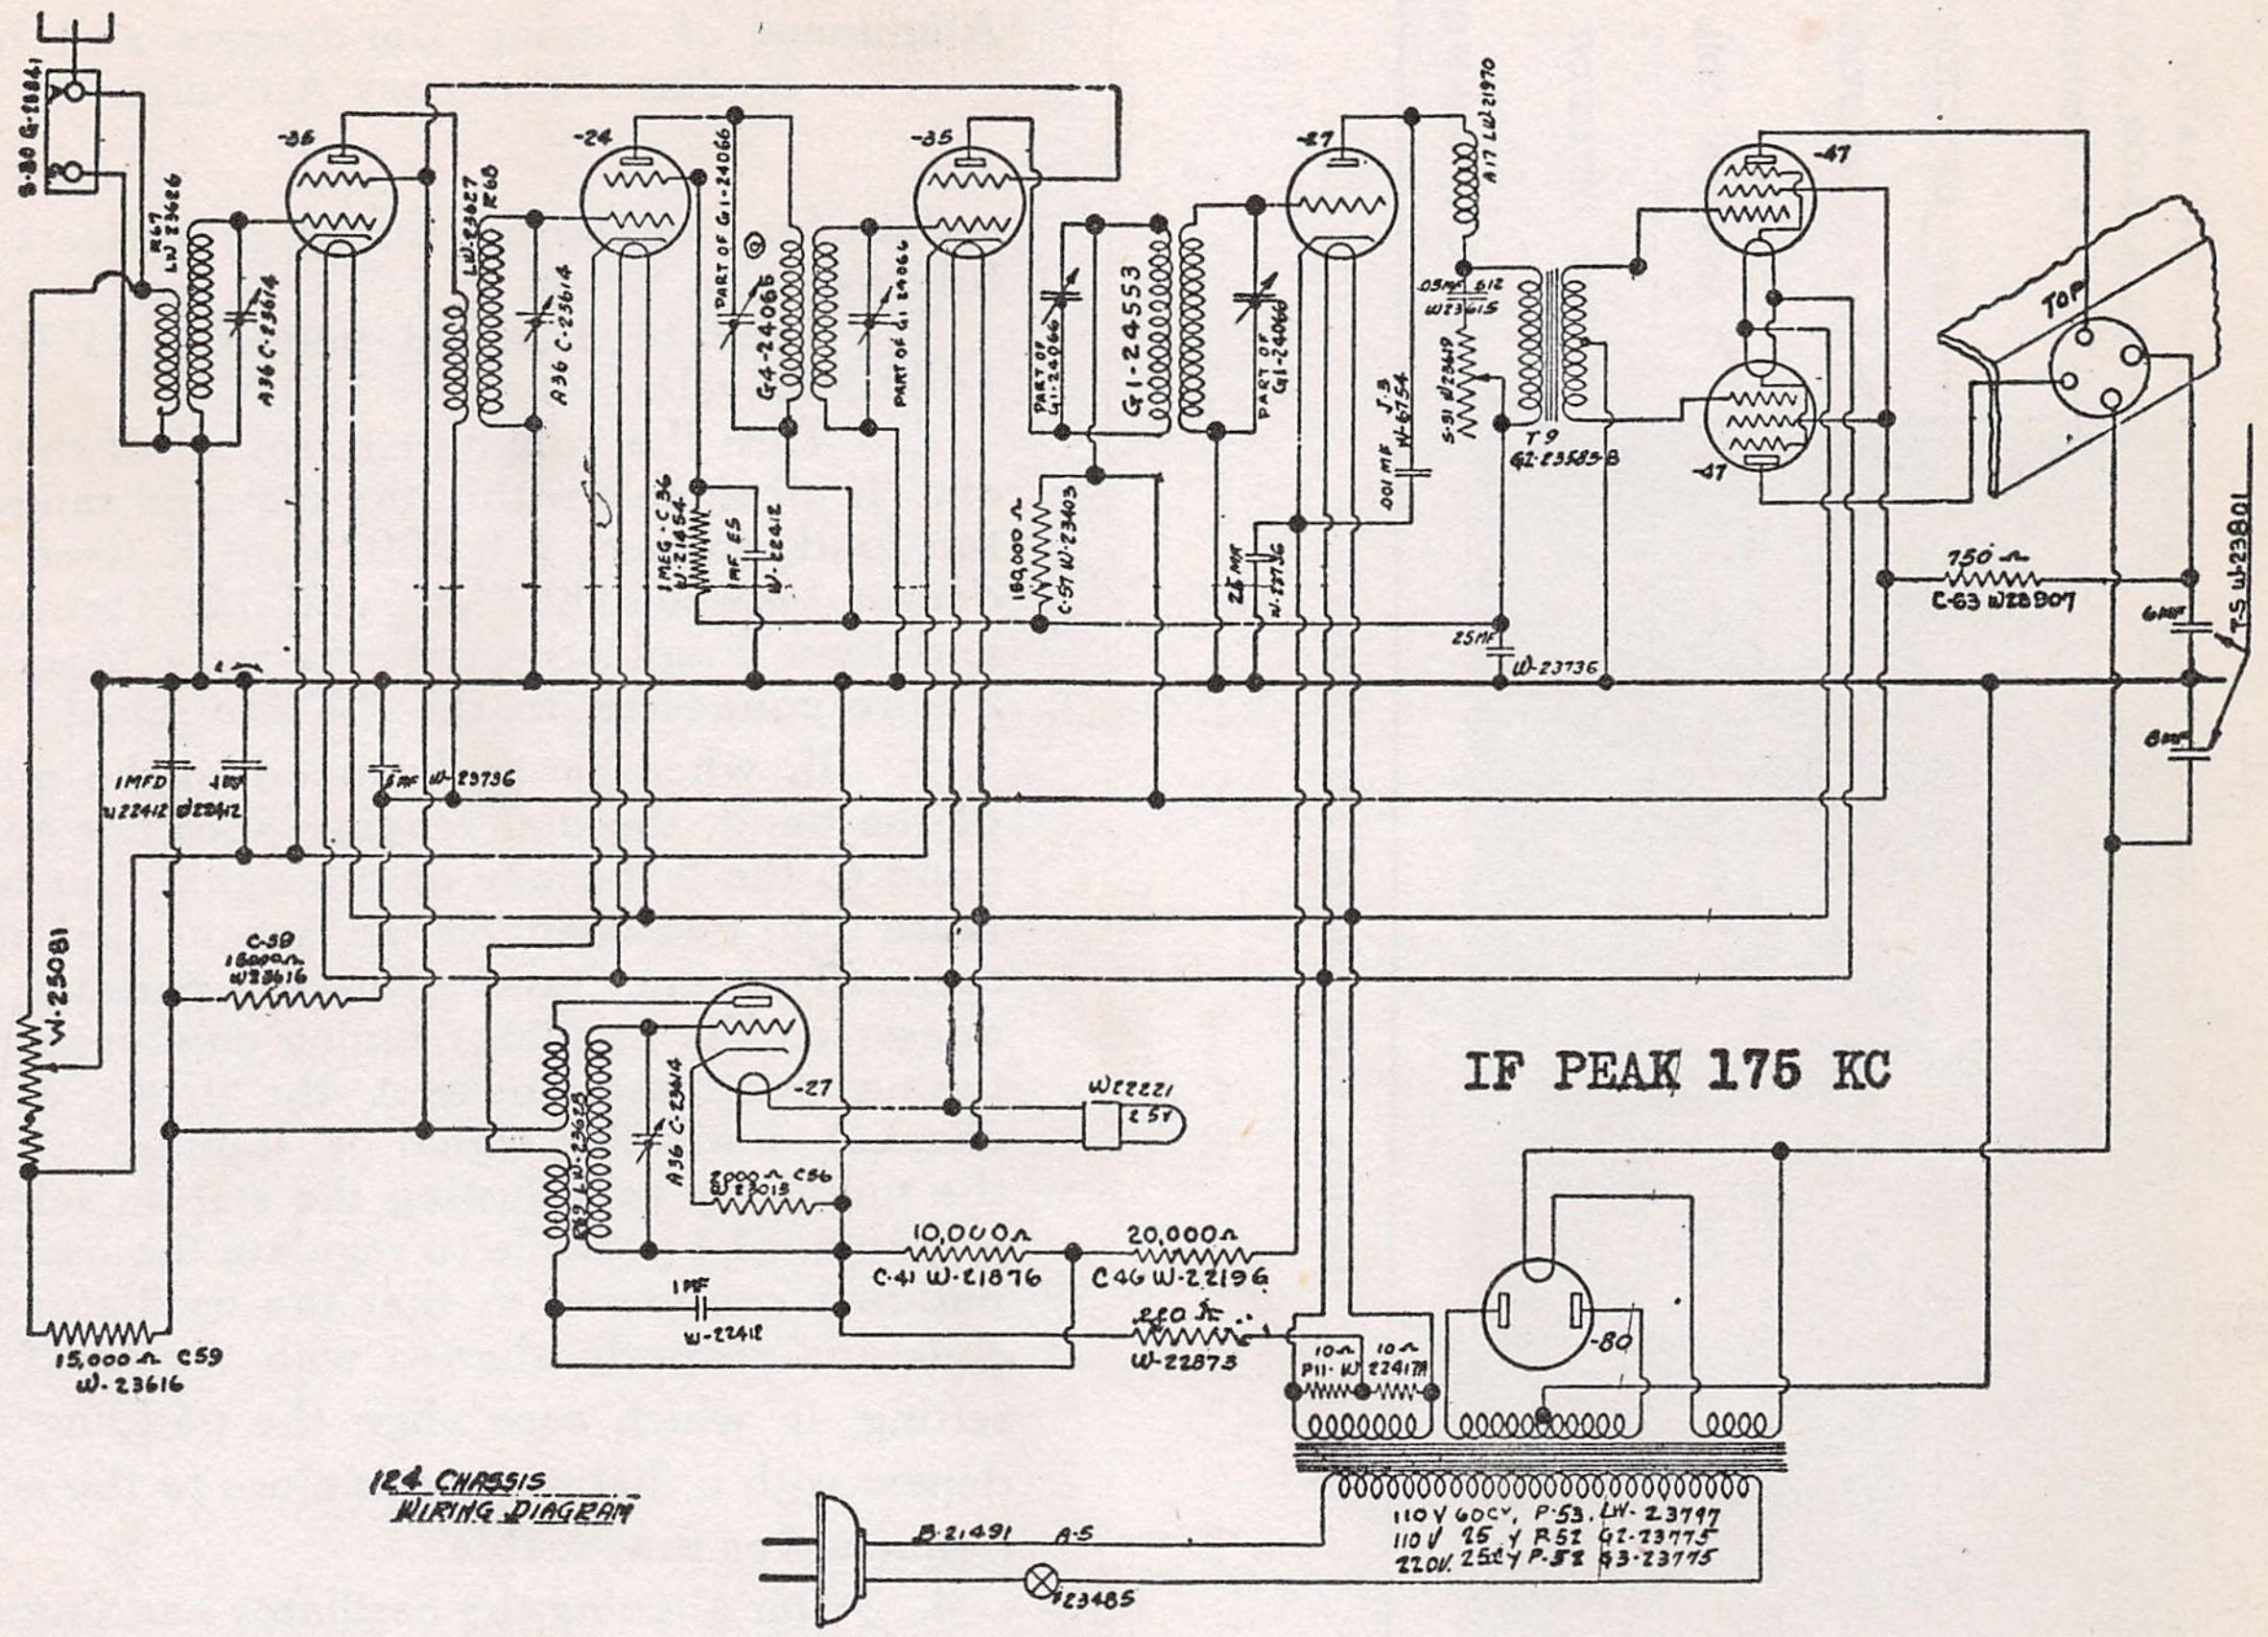
-35
-24
-35
-27
-47
-47
-27
-80
TOP
IF PEAK 175 KC
S-30 G-18841
A36 C-23614
G1-24553
G4-24068
750 Ω C-63 W28907
T-5 W-23801
T9 G2-23585-B
W-25081
C-58 18000 Ω W23616
1 MFD W22412
W-23736
W22221 2.5 V
2000 Ω C56 W23015
A36 C-23614
10,000 Ω C-41 W-21876
20,000 Ω C46 W-22196
1 MF W-22412
220 Ω W-22873
15,000 Ω C59 W-23616
110 V 60 CY. P-53. LW-23797
110 V 25 CY P-52 G1-23775
220 V. 25 CY P-52 G3-23775
B-21491
A-5
W23485
124 CHASSIS WIRING DIAGRAM

Model 124 Circuit

Model 124

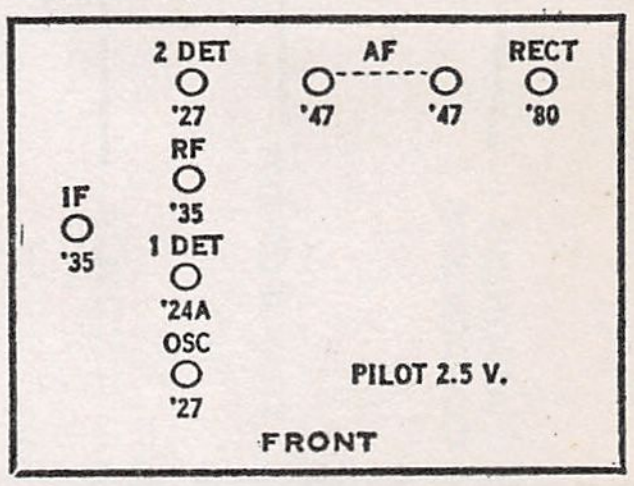
2 DET
'27
AF
'47
'47
RECT
'80
RF
'35
IF
'35
1 DET
'24A
OSC
'27
PILOT 2.5 V.
FRONT

Voltage Limits

Filament Voltages	
All tubes but rectifier	2.3 to 2.5
Rectifier	4.6 to 5.0
Plate Voltages	
R. F. and I. F. Amplifiers and Output	235 to 265 170 to 190
First and Second Detectors	60 to 80
Rectifier, D. C. Voltage	300 to 340
Screen Grid Voltages	
R. F. and I. F. Amplifiers	80 to 100
First Detector	55 to 65
Output	230 to 270
Control Grid Voltages	
R. F. and I. F. Amplifiers	1.5 to 2.5
First Detector and Oscillator	7 to 9
Second Detector	18 to 22
Output	15 to 18

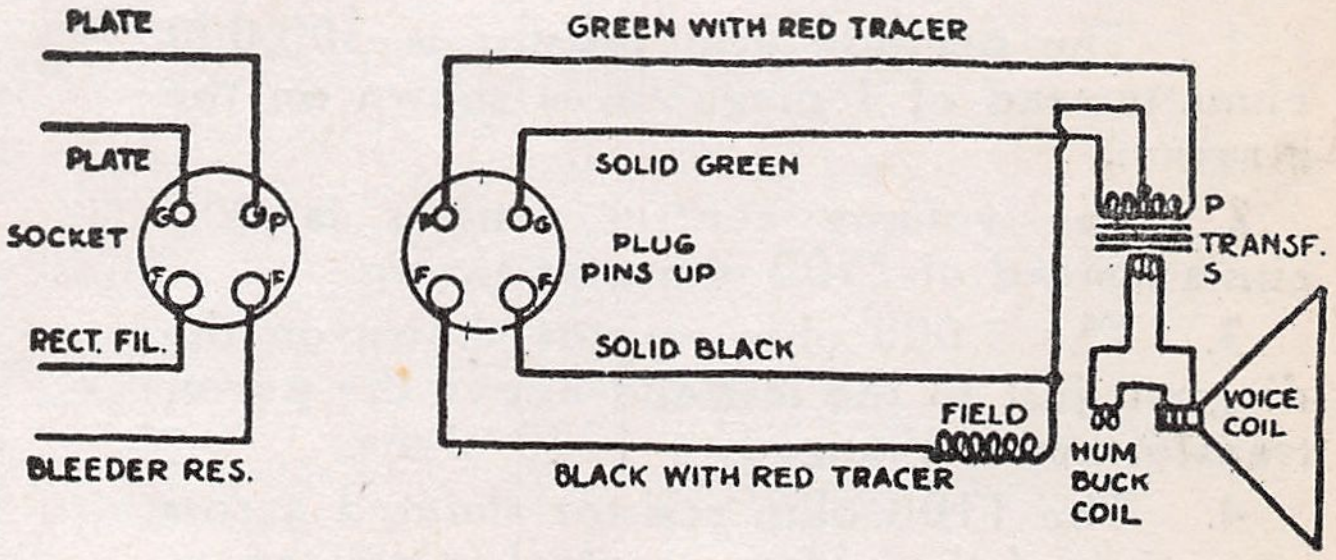
PLATE
PLATE
SOCKET
RECT. FIL.
BLEEDER RES.
G
P
F
F
GREEN WITH RED TRACER
SOLID GREEN
PLUG PINS UP
SOLID BLACK
BLACK WITH RED TRACER
P
TRANSF.
S
FIELD
HUM BUCK COIL
VOICE COIL

For Alignment Data refer to similar information pertaining to Model 122.

Speakers 306-J and 306-M for Chassis 124

MODELS 122,123,124
Condenser Notes

CROSLEY RADIO CORP.

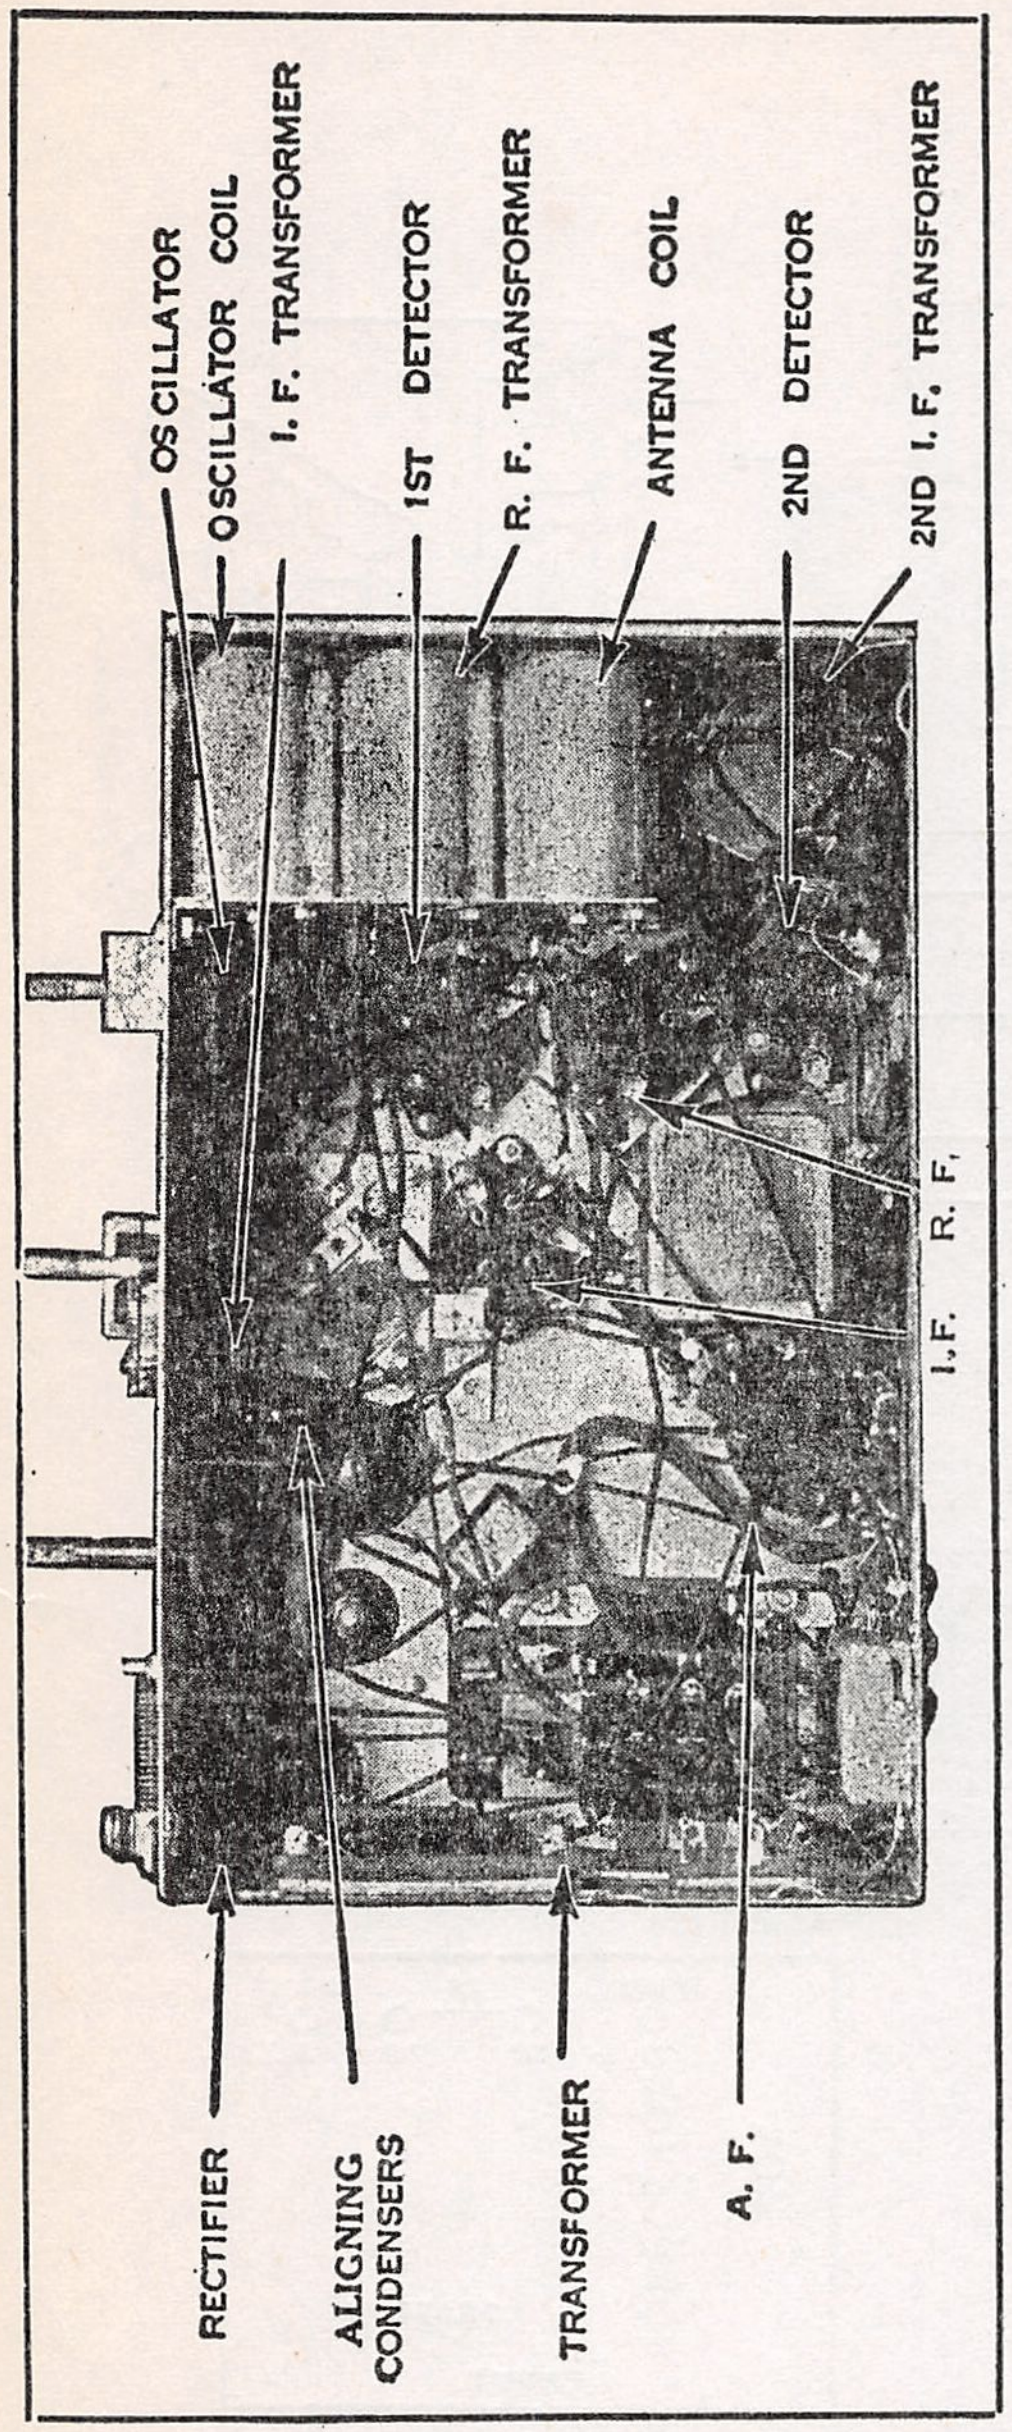

Bottom View, Model 122 Chassis

Changes In Model 122

The following changes as compared with the circuit diagram shown herein will be found in some chasses.

1. The pentode grid resistor is 300,000 ohms instead of 1 megohm as shown on the diagram.
2. The volume control resistor is 650 ohms instead of 2500 ohms, as shown.
3. The 3,000 ohm resistor shown on the diagram just to the left and above the power transformer is changed to 1790 ohms.
4. The 1100 ohm resistor shunted across a portion of the volume control is deleted.
5. The 25,000 ohm resistor in the r. f. screen grid circuit is replaced by a 20,000 ohm resistor.

MODELS 122, 123, 124

Alignment of Tuning Condensers and Intermediate-Frequency Amplifier

The procedure for aligning the tuning condensers is as follows:

1. Tune to a signal between 1300 and 1400 kilocycles.
2. Turn the volume control all of the way on. If all signals within the required range are too loud, connect a 0.00025 m. f. fixed condenser between the "A" and "G" terminals, and then couple the antenna very loosely to a wire connected to the "A" terminal.
3. If, when carefully tuned to the middle of the band, the dial reading does not correspond to the frequency of the signal, but is not more than two channels off, set the dial at the correct frequency, and adjust the padding condenser on the oscillator tuning condenser (the tuning condenser nearest the front of the chassis) until the signal is loudest. Check the tuning by re-adjusting the station selector. It may not be possible to regulate the oscillator padding condenser so that the oscillator condenser is properly aligned with the exact dial setting, in which case align the padding condenser with a dial setting as close to the actual frequency as practicable.
4. After aligning the oscillator padding condenser, re-tune to a frequency between 1300 and 1400 kilocycles and carefully adjust the padding condensers on the other two tuning condensers until the signal is received with greatest volume.

Aligning Intermediate Frequency Stages

The primary and secondary circuits of the intermediate amplifier transformer must be tuned accurately to 175 kilocycles. They are aligned carefully at the factory, and no change should be necessary. In order to align them an accurately tuned local oscillator operating at 175 kilocycles is essential. The procedure is as follows:

1. A local oscillator tuned accurately to 175 kilocycles frequency is required.
2. Remove the oscillator tube from the chassis. Remove the clip wire from the first detector tube. Connect the test oscillator output from the first detector grid to ground, and adjust the two screws at either side of the front I. F. coil for maximum reading on the output meter. Always re-align the tuning condenser after aligning the I. F. amplifier.

MODEL 125
Schematic
Voltage

CROSLEY RADIO CORP.

MODEL 125 SUPERHETERODYNE

PEAK FREQ. 175 KC.

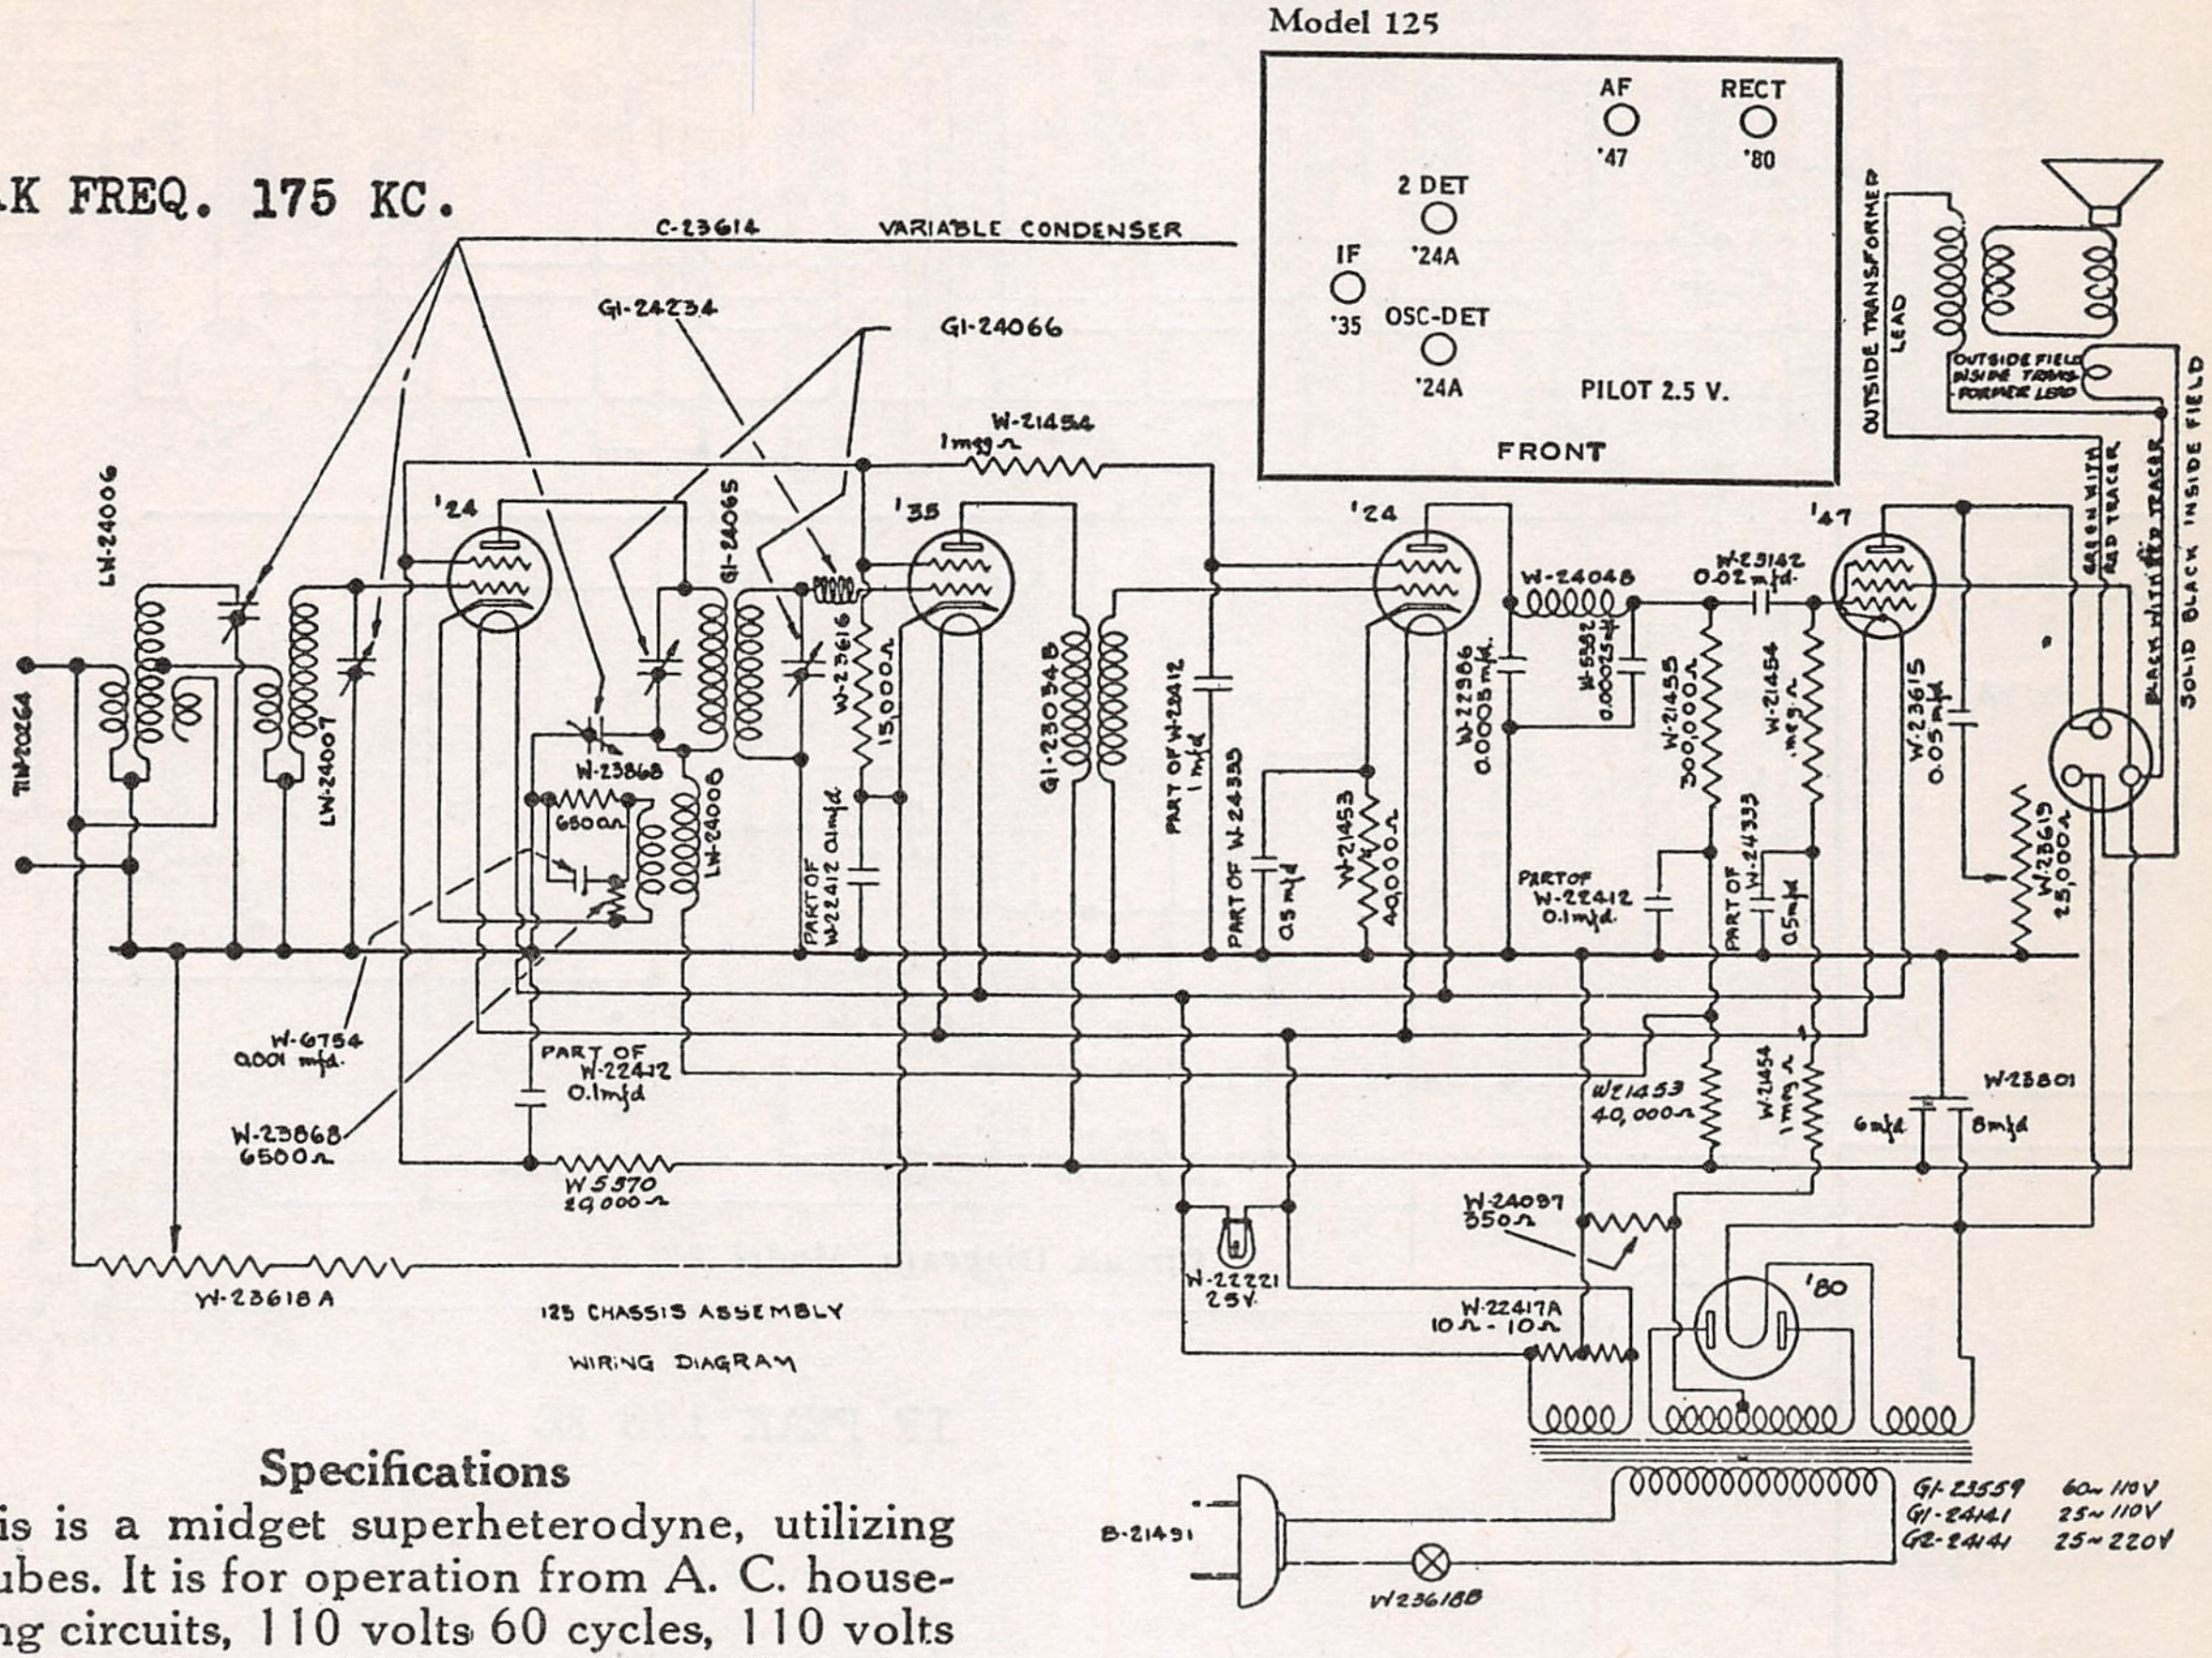
Model 125
AF
'47
RECT
'80
2 DET
'24A
IF
'35
OSC-DET
'24A
PILOT 2.5 V.
FRONT
C-23614
VARIABLE CONDENSER
G1-24234
G1-24066
W-21454
1meg Ω
LW-24006
TW-20264
LW-24007
'24
G1-24065
W-23868
650 Ω
LW-24006
'35
W-23616
15,000 Ω
PART OF W-22412 0.1 mfd
G1-230348
PART OF W-22412 1 mfd
PART OF W-24335
0.5 mfd
'24
W-21453
40,000 Ω
W-22986
0.0005 mfd.
W-24048
W-5582
0.00025 mfd
W-23142
0.02 mfd.
W-21455
300,000 Ω
PART OF W-22412
0.1 mfd.
W-21454
1 meg Ω
PART OF W-24333
0.5 mfd
'47
W-23615
0.05 mfd
W-23619
25,000 Ω
OUTSIDE TRANSFORMER LEAD
OUTSIDE FIELD INSIDE TRANSFORMER LEAD
GREEN WITH RED TRACER
BLACK WITH RED TRACER
SOLID BLACK INSIDE FIELD
W-6754
0.001 mfd.
PART OF
W-22412
0.1 mfd
W-23868
6500 Ω
W 5570
29,000 Ω
W-23618 A
125 CHASSIS ASSEMBLY
WIRING DIAGRAM
W-21453
40,000 Ω
W-21454
1 meg Ω
W-23801
6 mfd
8 mfd
W-24097
350 Ω
W-22221
2.5 V.
W-22417A
10 Ω - 10 Ω
'80
B-21491
W-23618B
G1-23559
G1-24141
G2-24141
60~ 110V
25~ 110V
25~ 220V

Circuit Diagram, Model 125.

Specifications

This is a midget superheterodyne, utilizing five tubes. It is for operation from A. C. house-lighting circuits, 110 volts 60 cycles, 110 volts 25 to 50 cycles, or 220 volts 25 to 60 cycles.

Instead of being coupled directly to the first tube, as in other Crosley models, the antenna-ground system is coupled to the detector-oscillator through a double tuned selector circuit. This increases the selectivity of the circuit.

The first tube acts both as a detector and oscillator. The oscillator circuit is tuned by a variable condenser—one of the three comprising the station selector gang—as shown on the diagram. The other two station selector condensers tune the grid circuit of the detector-oscillator and the pre-selector circuit.

The detector-oscillator is coupled to the intermediate frequency amplifier stage by an I. F. transformer, both primary and secondary of which are tuned to 175 kilocycles by small adjustable condensers shunted across them. These circuits must be tuned accurately to 175 kilocycles for efficient operation. A radio-frequency choke is in the grid circuit of the I. F. tube.

The timing condenser adjustments are made from the top of the chassis through the three holes in the condenser shield; the I. F. transformer adjustments through the holes at the left side of the chassis, near the front, as viewed from the front of the receiver.

Voltage Limits

The following data shows the average voltages which will be obtained when measurements are made on Model 125 Chassis using a voltmeter of 1000 ohms resistance per volt. Some of these voltages do not represent actual voltages present at the tube elements. A typical example of this is the grid voltage of the pentode tube, which is actually about 16 volts, but only shows about 1 volt when measured in this way.

Screen Grid Voltages

Pentode	200 to 230
I. F.	75 to 95
1st Det.	75 to 95
2nd Det.	15 to 25 (250V scale), 3-8 (50V scale)

Plate Voltages

Pentode	200 to 230
I. F.	200 to 230
1st Det.	160 to 180
2nd Det.	75 to 90 (250V scale), 20-30 (50V scale)

Control Grid Voltages

Pentode	0.5 to 1.5
I. F.	1.5 to 2.5 (20-30 vol. cont. off)
1st Det.	5.5 to 7.5
2nd Det.	4.0 to 6.0

Filament Voltages

All tubes but rectifier	2.3 to 2.5
Rectifier tube	4.6 to 5.0

MODEL 126
MODEL 126-1
Schematic

CROSLEY RADIO CORP.

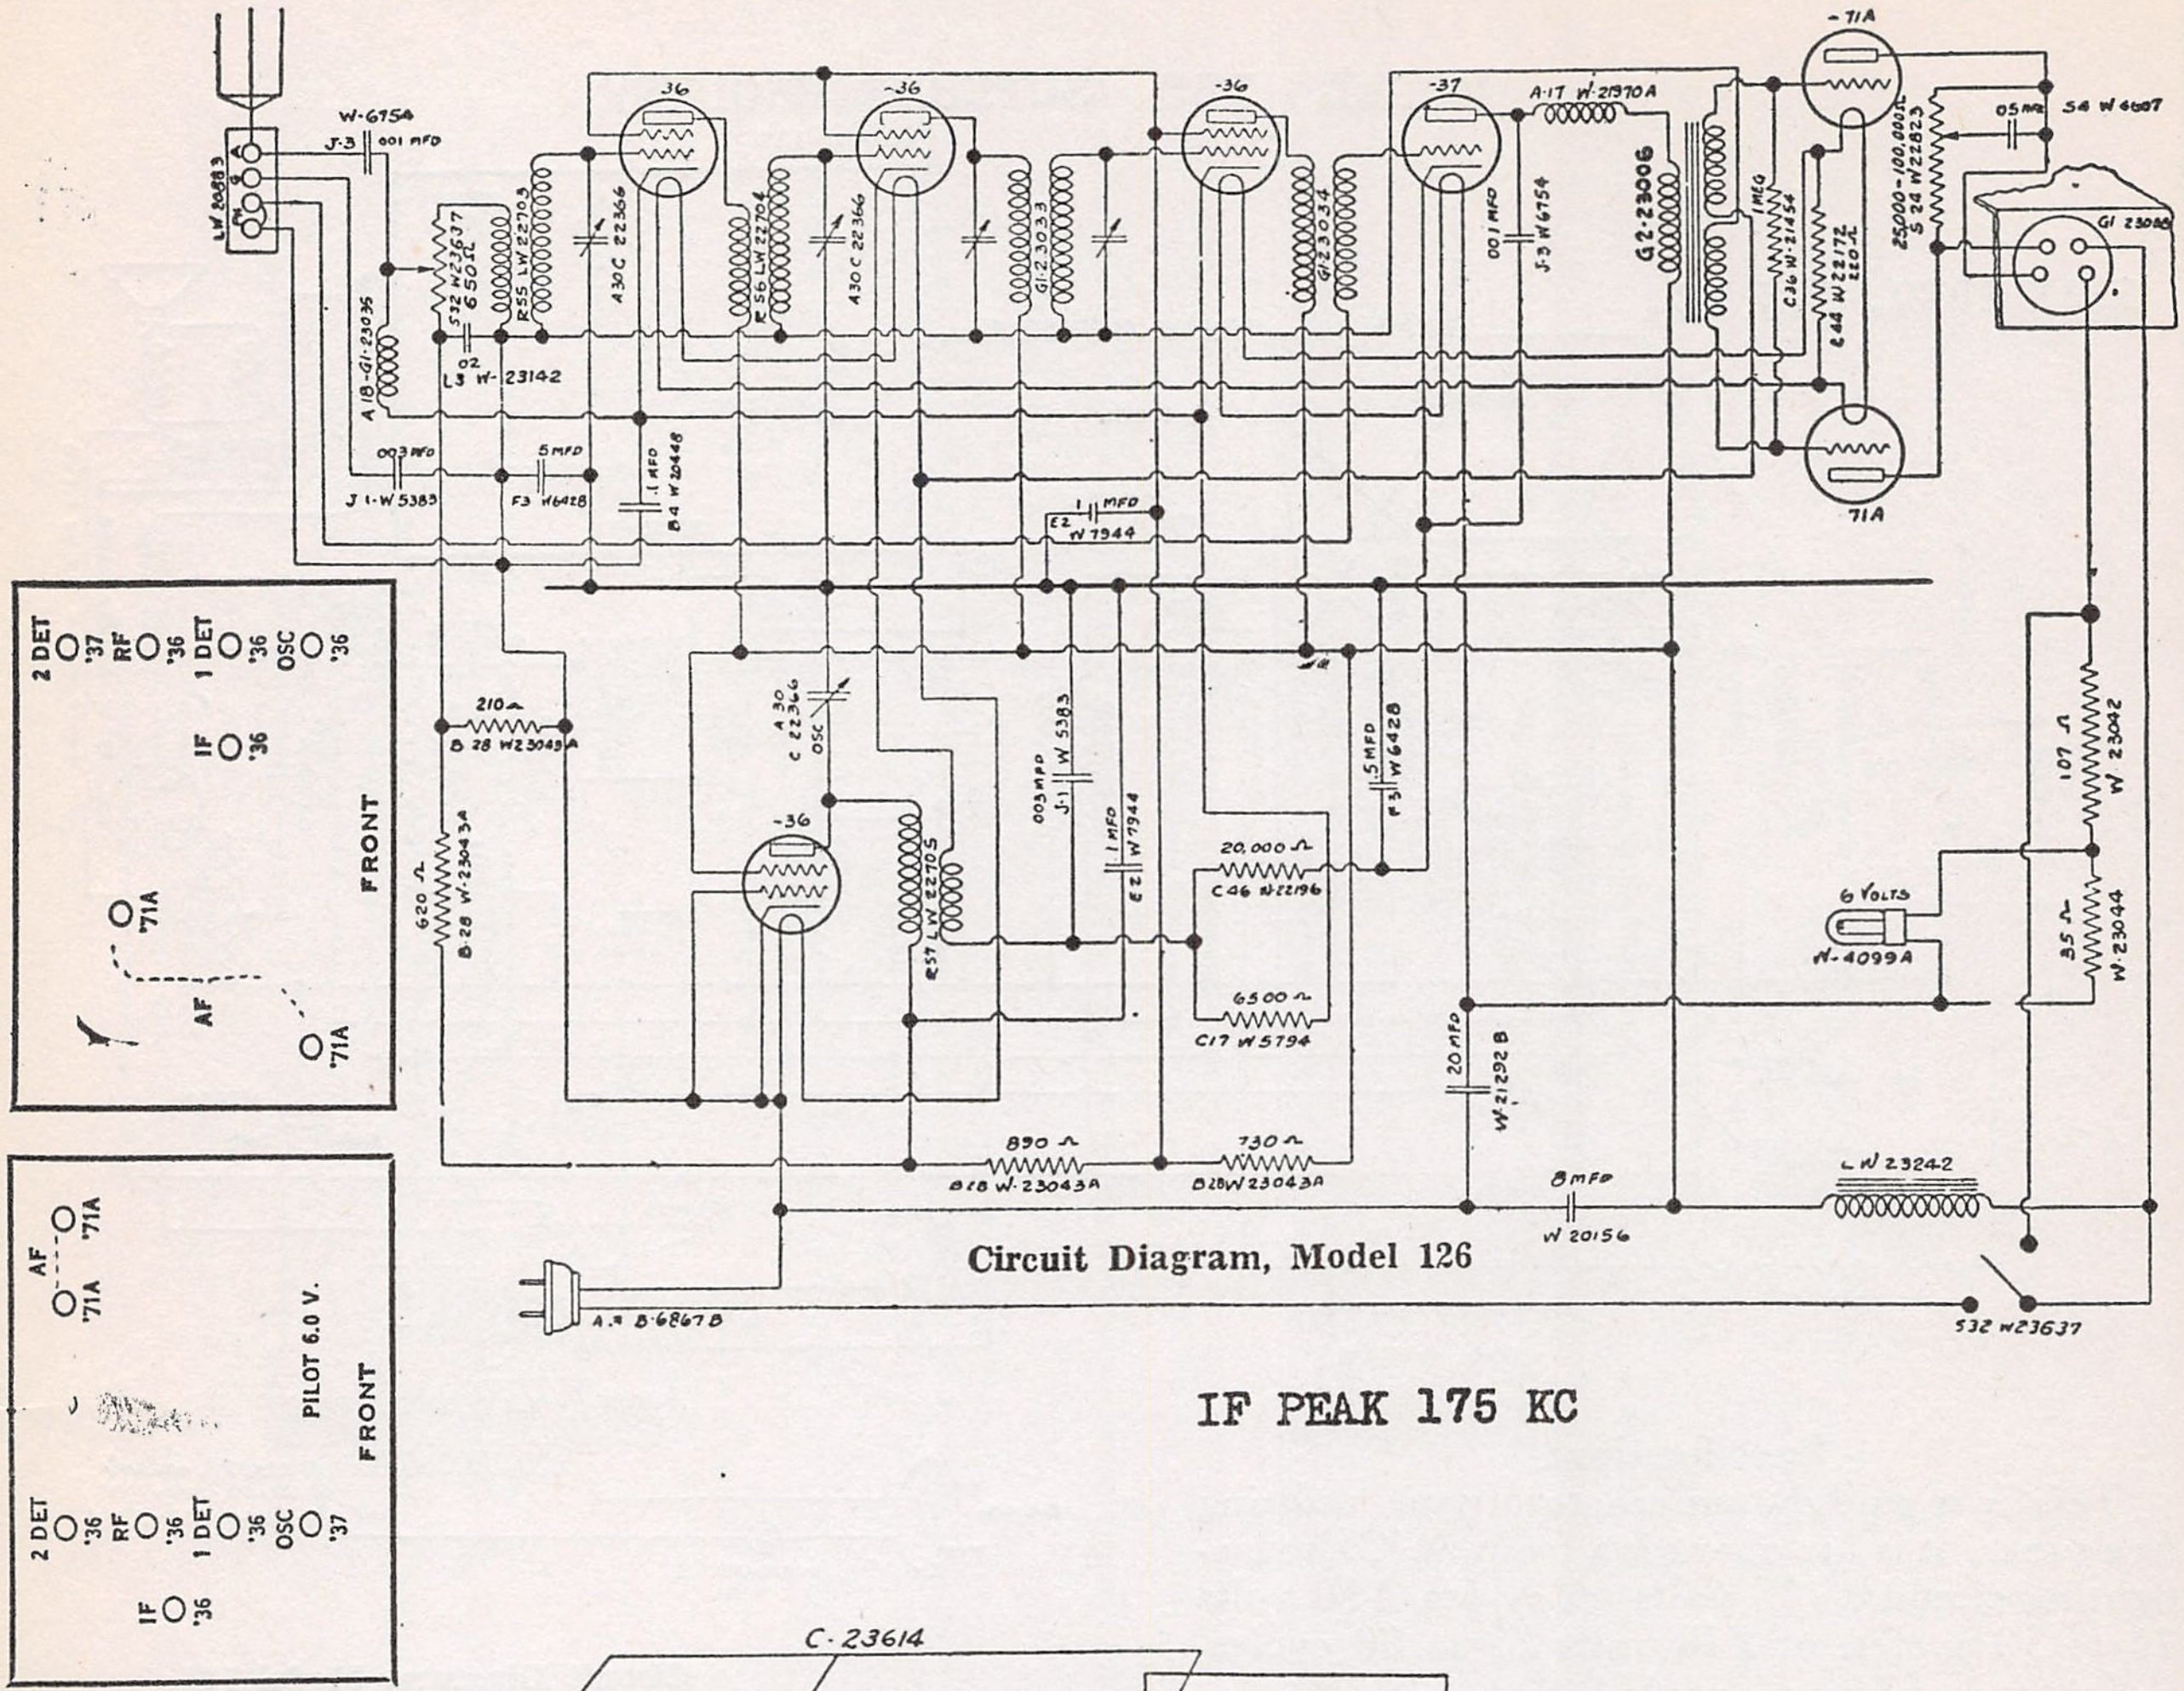
W-6754
J-3 .001 MFD
LW 20883
A 18-GI-23035
S32 W23637 6501Ω
R55 LW 22703
A30C 22366
R56 LW 22704
A30 C 22366
GI-23033
GI 23034
.001 MFD
J-3 W 6754
A-17 W 21970A
G2-23006
1 MEG
C36 W 21854
C44 W 22172 220Ω
25,000-100,000Ω
S 24 W22823
.05 MFD
54 W 4607
GI 23088
-36
-37
-71A
71A
.02
L3 W-23142
.003 MFD
J1-W 5383
.5 MFD
F3 W6428
.1 MFD
B4 W 20448
.1 MFD
E2 W 7944
210Ω
B 28 W23043A
620Ω
B 28 W23043A
A 30 C 22366 OSC
.003 MFD
J-1 W 5383
.1 MFD
E2 W 7944
.5 MFD
F3 W 6428
20,000Ω
C46 W22196
6500Ω
C17 W 5794
R57 LW 22705
20 MFD
W 21292 B
890Ω
B18 W-23043A
730Ω
B28 W23043A
8 MFD
W 20156
LW 23242
107Ω
W 23042
35Ω
W 23044
6 VOLTS
W-4099A
A & B 6867 B
S32 W23637
Model 126
2 DET '37
RF '36
1 DET '36
OSC '36
IF '36
'71A
AF
'71A
FRONT
Model 126-1
2 DET '36
RF '36
1 DET '36
OSC '37
IF '36
AF
'71A
'71A
PILOT 6.0 V.
FRONT

Circuit Diagram, Model 126

IF PEAK 175 KC

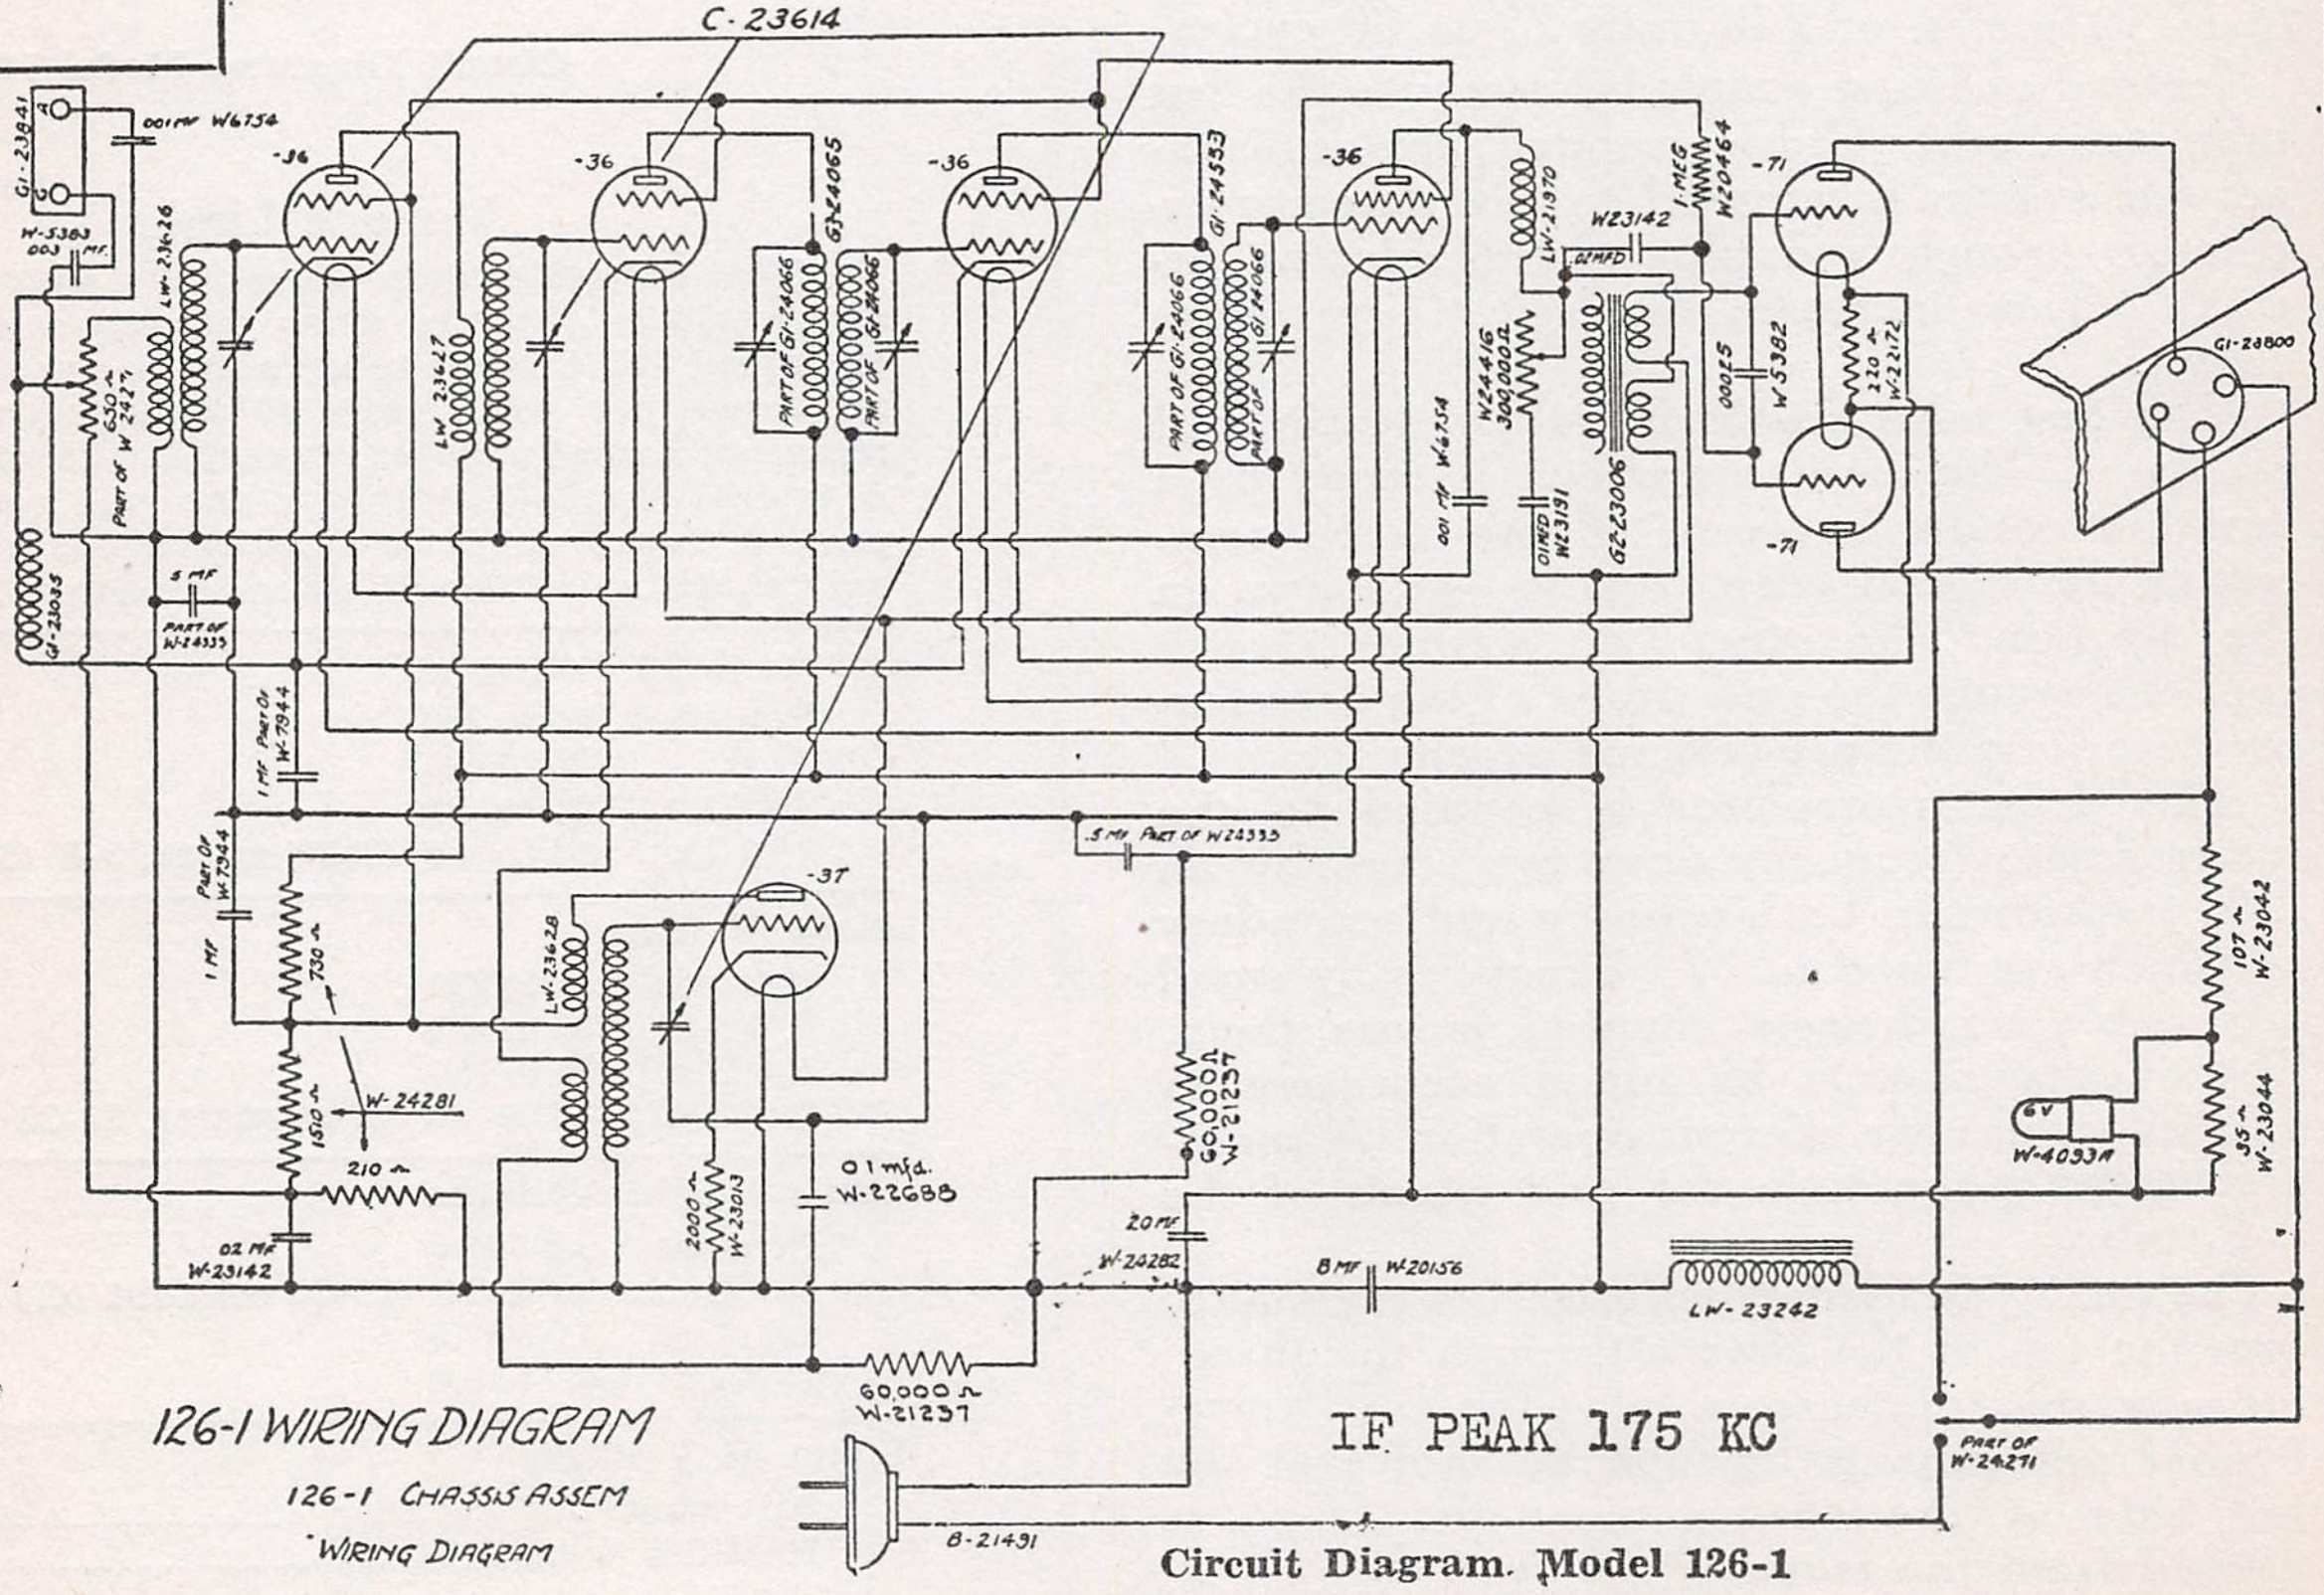
C-23614
GI-23841
.001 MF W6754
W-5383 .003 MF
LW-23626
630Ω Part of W 24277
GI-23035
.5 MF Part of W-24333
-36
-36
-36
-36
-37
-71
-71
LW 23627
GI-24065
Part of GI-24066
GI-24066
GI-24333
Part of GI-24066
LW-21970
W23142
.02 MFD
1 MEG W20464
W24416 300,000Ω
.001 MF W6754
.01 MFD W23131
G2-23006
.00025 W-5382
220Ω W-22172
GI-24800
1 MF Part of W-7944
1 MF Part of W-7944
.5 MF Part of W24333
730Ω
1510Ω
W-24281
210Ω
.02 MF W-23142
LW-23628
2000Ω W-23013
0.1 mfd. W-22688
60,000Ω W-21237
20 MF W-24282
8 MF W-20156
LW-23242
60,000Ω W-21237
107Ω W-23042
6V W-4093A
35Ω W-23044
Part of W-24271
B-21491
126-1 WIRING DIAGRAM
126-1 CHASSIS ASSEM WIRING DIAGRAM
IF PEAK 175 KC

Circuit Diagram. Model 126-1

MODEL 127
Schematic
Voltage
Notes

CROSLEY RADIO CORP.

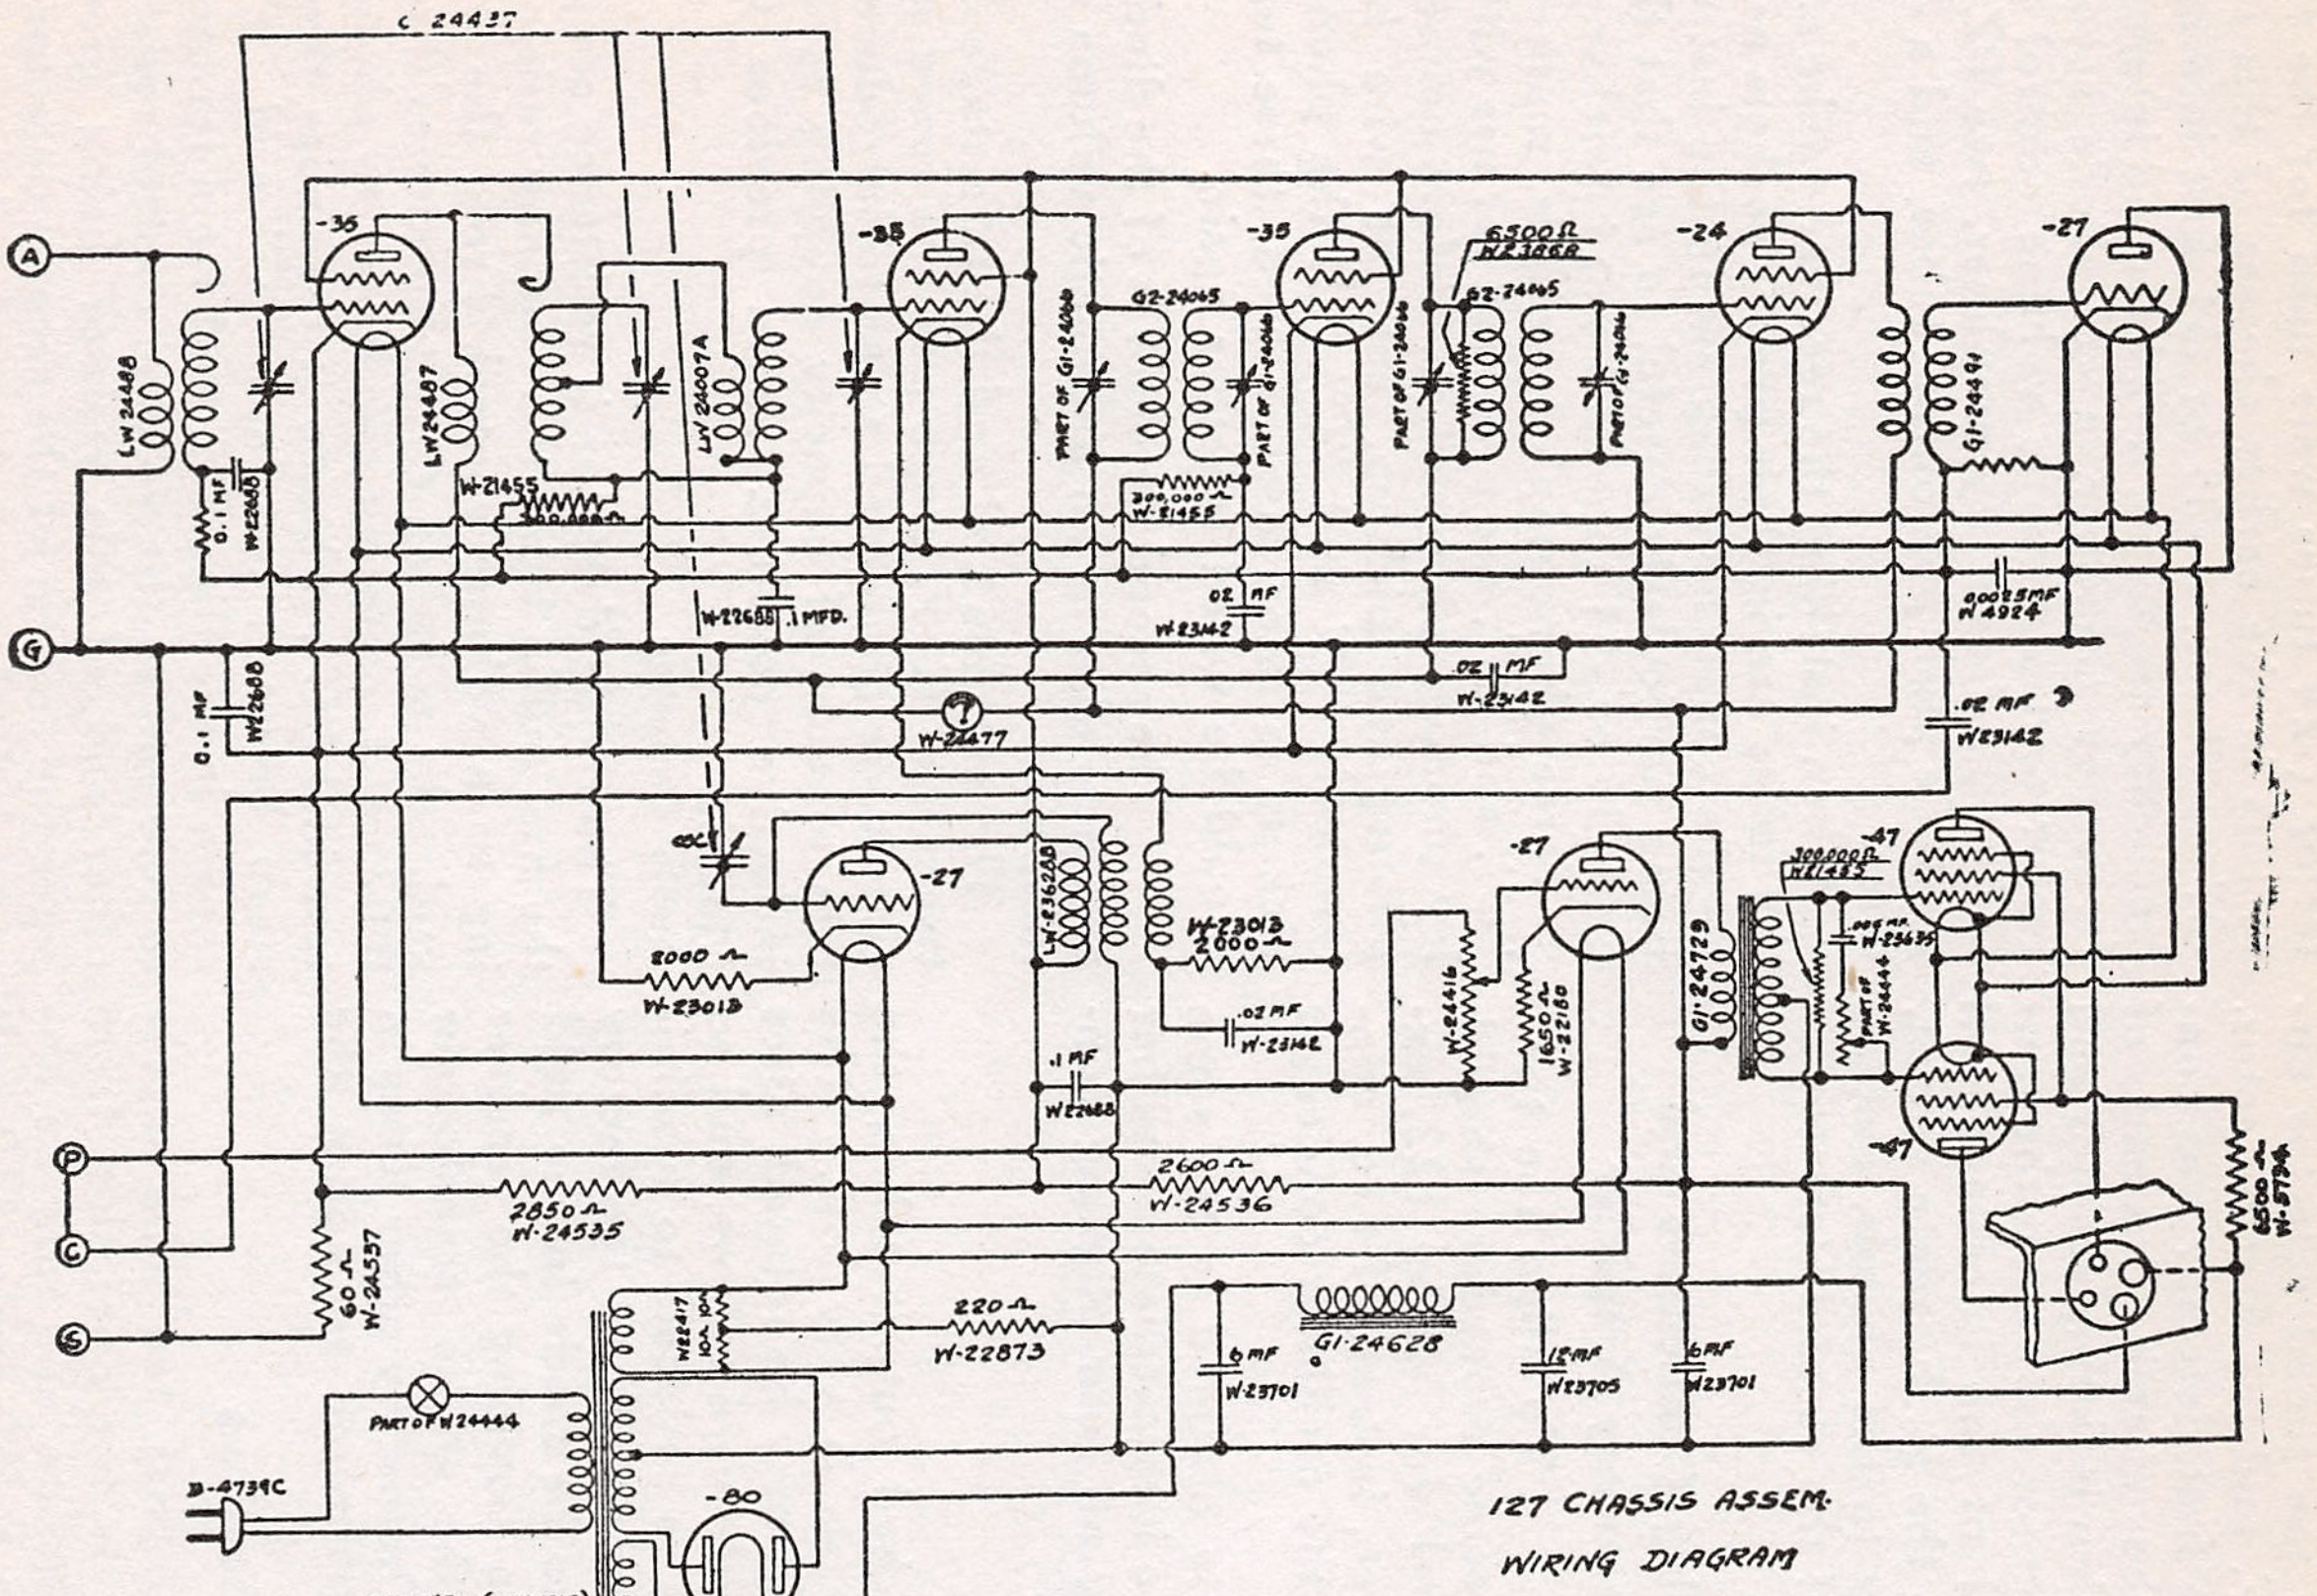
C 24437
A
G
P
C
S
-35
-35
-35
-24
-27
-27
-27
-47
-47
-80
LW 24488
LW 24487
LW 24007A
W-21455
W-22688
W-23142
W-23013
W-24535
W-24536
W-22873
W-24537
W-23701
W-23705
G1-24628
G1-24729
G1-24491
2000 Ω
2600 Ω
2850 Ω
220 Ω
60 Ω
6300 Ω
PART OF W24444
B-4739C
G1-24436 (60CYCLE)
G2-24436 (25CYCLE)
G3-24436 (220 VOLT)
127 CHASSIS ASSEM.
WIRING DIAGRAM

-Circuit Diagram, Model 127.

IF PEAK 175 KC

See Next Page

Model 127

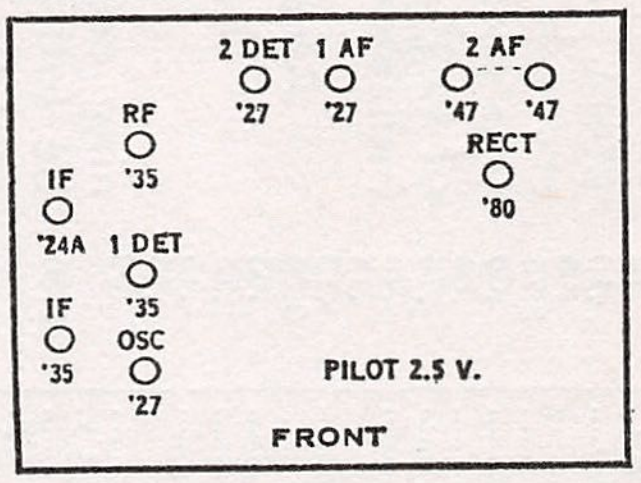
2 DET
'27
1 AF
'27
2 AF
'47
'47
RF
'35
RECT
'80
IF
'24A
1 DET
'35
IF
'35
OSC
'27
PILOT 2.5 V.
FRONT

Voltage Limits

To be measured with tubes in place, speaker connected, and line voltage of 117½ (235 for 220 volt receivers).

Filament Voltages	
All tubes but rectifier	2.3 to 2.5
Rectifier tube	4.6 to 5.0
Plate Voltages	
All tubes but second detector and pentodes	170 to 200
Second detector	0
Pentode output tubes	270 to 300
Screen Grid Voltages	
All screen grid tubes but pentodes	75 to 95
Pentode output tubes	230 to 250
Control Grid Voltages	
R. F. and I. F. amplifiers	2.5 to 3.5
First detector	6 to 10
Oscillator	8 to 12
First A. F. amplifier	8 to 12
Pentode output tubes	14 to 18

Hum Adjustment

With properly matched output tubes, the hum level of this chassis is very low. The audio transformer shield may be rotated, after loosening the three hold-down screws, and so adjusted that the hum is reduced to a minimum. This adjustment is made at the factory and should not have to be made in the field unless it is necessary in servicing the receiver to loosen or remove the audio transformer shield. If the receiver hums, try other tubes in the output before attempting to adjust the transformer shield.

MODEL 127
Parts Lists
Notes

CROSLEY RADIO CORP.

Parts List—Model 127

Qty.	Parts No.	Description	List Price Each
1	D-24442A	Chassis	.80
1	G1-23800	Four Prong Socket (Spk.)	.15
1	G2-23800	Five Prong Socket ('24)	.15
3	G3-23800	Five Prong Socket ('27)	.15
3	G4-23800	Five Prong Socket ('35)	.15
2	G5-23800	Five Prong Socket ('47)	.15
1	G6-23800	Four Prong Socket ('80)	.15
1	G1-23629	Cond. Brkt. Assy.	.05
1	LW-20266C	Terminal Board (P. C. S.)	.15
1	LW-20264D	Terminal Board (A & G)	.10
1	G1-24393	Junction Block	.05
1	LB-24446	R. F. Coil Group Assy.	3.75
1	LW-24488	Antenna Coil Assy.	.60
1	LW-24487	Interstage Coil Assy.	.80
1	LW-23628B	Oscillator Coil Assy.	.75
1	LW-24007A	Coupling Coil Assy.	.75
4	LW-22374	Shield Assy.	.15
1	W-24447	Mounting Plate	.10
1	C-24437	Variable Condenser	5.50
2	G2-23623	Tube Connection Assy.	.05
1	W-22221	Dial Lamp	.15
1	C-24440	Bottom	.15
1	LW-23600	Light Bracket Assy.	.15
1	G1-23686	Dial Drive Assy.	.50
1	G1-24436	Power Transformer (60 Cy. 110 V.)	5.00
	G2-24436	Power Transformer (25 Cy. 110 V.)	6.50
	G3-24436	Power Transformer (25 Cy. 220 V.)	6.50
2	LW-22362	Tube Shield Assy.	.15
2	G2-24065	I. F. Coil Assy.	.60
2	G1-24066.	I. F. Condenser Assy.	.30
1	G1-24491	I. F. Coil	.30
1	W-24416	Volume Control	.70
1	W-24444	Tone Control & Switch	1.00
1	B-4739C	Cable	.30
1	W-24511	Shield	.05
1	W-24477A	Panel Meter	2.00
1	G1-24628	Filter Choke Assy.	1.25
1	W-24476A	Meter Bracket	.05
1	G1-24729	A. F. Transformer	2.00
1	W-22417	(10-10) Ohms	.15
1	W-22180	1650 Ohms	.25
1	W-22873	220 Ohms	.25
1	W-24537	60 Ohms	.25
1	W-24535	2850 Ohms	.25
1	W-24536	2600 Ohms	.25
1	W-5794	6500 Ohms	.25
1	W-23868	6500 Ohms	.25
2	W-23013	2000 Ohms	.25
5	W-21455	300,000 Ohms	.25
2	W-23701	6 Mfd.	1.00
1	W-23705	12 Mfd.	1.25
1	W-4924	.00025 Mfd.	.25
1	W-23635	.006 Mfd.	.25
4	W-23142	.02 Mfd.	.25
4	W-22688	.1 Mfd.	.25
1	C-24452A	Tube & Cond. Shield	.25
1	LB-21932C	Tennaboard Assy.	.15
2	W-22300	Knob	.15
1	W-24556	Knob	.15
	LC-24484	301M Speaker (Magnavox)	8.50
	LC-22982B	304J Speaker (Jensen)	10.00
	L-24461	1Q Cabinet Assembly	8.00
	L-24462	I. T. Cabinet Assembly	36.50

Type -24 Detector in Early Chasses

Earlier series of this chassis used a -24 type first detector tube. Connections were the same throughout, except in the tuned selector circuits between the R. F. and the first detector. The grid circuit of the first detector was connected directly to the chassis, instead of through the 300,000 ohm isolating resistor and 0.1 m.f. by-pass condenser shown on the diagram. The lower end of the interstage coil secondary, coupled to the R. F. plate circuit, was connected directly to the chassis, instead of to the grid circuit of the second detector as indicated here.

Alignment of Tuning Condensers and Intermediate Frequency Amplifier

To align the tuning condensers, the same procedure should be followed as outlined for Model 122, except that there are three, instead of two, condensers in addition to the oscillator condenser to be aligned.

Follow the procedure outlined in the same bulletin for aligning the intermediate amplifier transformers, adjusting all four aligning condensers, one at a time.

Hum Adjustment

With properly matched output tubes, the hum level of this chassis is very low. The audio transformer shield may be rotated, after loosening the three hold-down screws, and so adjusted that the hum is reduced to a minimum. This adjustment is made at the factory and should not have to be made in the field unless it is necessary in servicing the receiver to loosen or remove the audio transformer shield. If the receiver hums, try other tubes in the output before attempting to adjust the transformer shield.

Specifications

Model 127 is a compact, ten tube superheterodyne chassis. It is for operation from A. C. house-lighting circuits, and may be obtained for 110 volt 25 to 50 cycle, 110 volt 60 cycle, or 220 volt 25 to 60 cycle circuits.

The tubes used are as follows: a -35 or -51 radio-frequency amplifier, a-35 or -51 first detector (-24 tubes were used for the first detectors in the earlier chasses of this series, a -27 oscillator, a -35 or -51 first intermediate-frequency amplifier, a -24 second intermediate-frequency amplifier, a -27 diode second detector and automatic volume control tube, a -27 audio-frequency amplifier, two PZ or -47 pentode push-pull output tubes, and a -80 rectifier.

When installing the receiver, make sure that the tubes are in their proper sockets as shown on the connection diagram in the instructions, being particularly careful to see that the -24, and -35 or -51 tubes are not interchanged.

Three phonograph terminals, marked "P", "C", and "S", are provided for use with Crosley phonograph pick-ups. Before connecting a phonograph pick-up, cut the wire between terminals "P" and "C". If the phonograph pick-up is later disconnected, these terminals should be wired together again.

The second detector is of the diode type, and acts also as an automatic volume control tube.

The antenna coil and the interstage coil between the R. F. stage and the tuned selector circuit are connected so as to introduce a certain amount of capacity coupling as well as inductive coupling, as in previous Crosley Models.

Audio Coupling

The diode detector is resistance coupled to the first audio tube, the coupling resistor serving as a volume control. From the detector grid, the coupling circuit continues through a 0.02 m. f. coupling condenser to phonograph terminal "C", whence it continues through a strap between terminals "C" and "P", not shown in the diagram, and from terminal "P" to one end of the volume control resistor, the other end of this resistor being grounded. Since the emitter of the second detector is also grounded, this completes the detector circuit.

DEWALD RADIO

MODEL AC 145
MODEL AC 245

Schematic

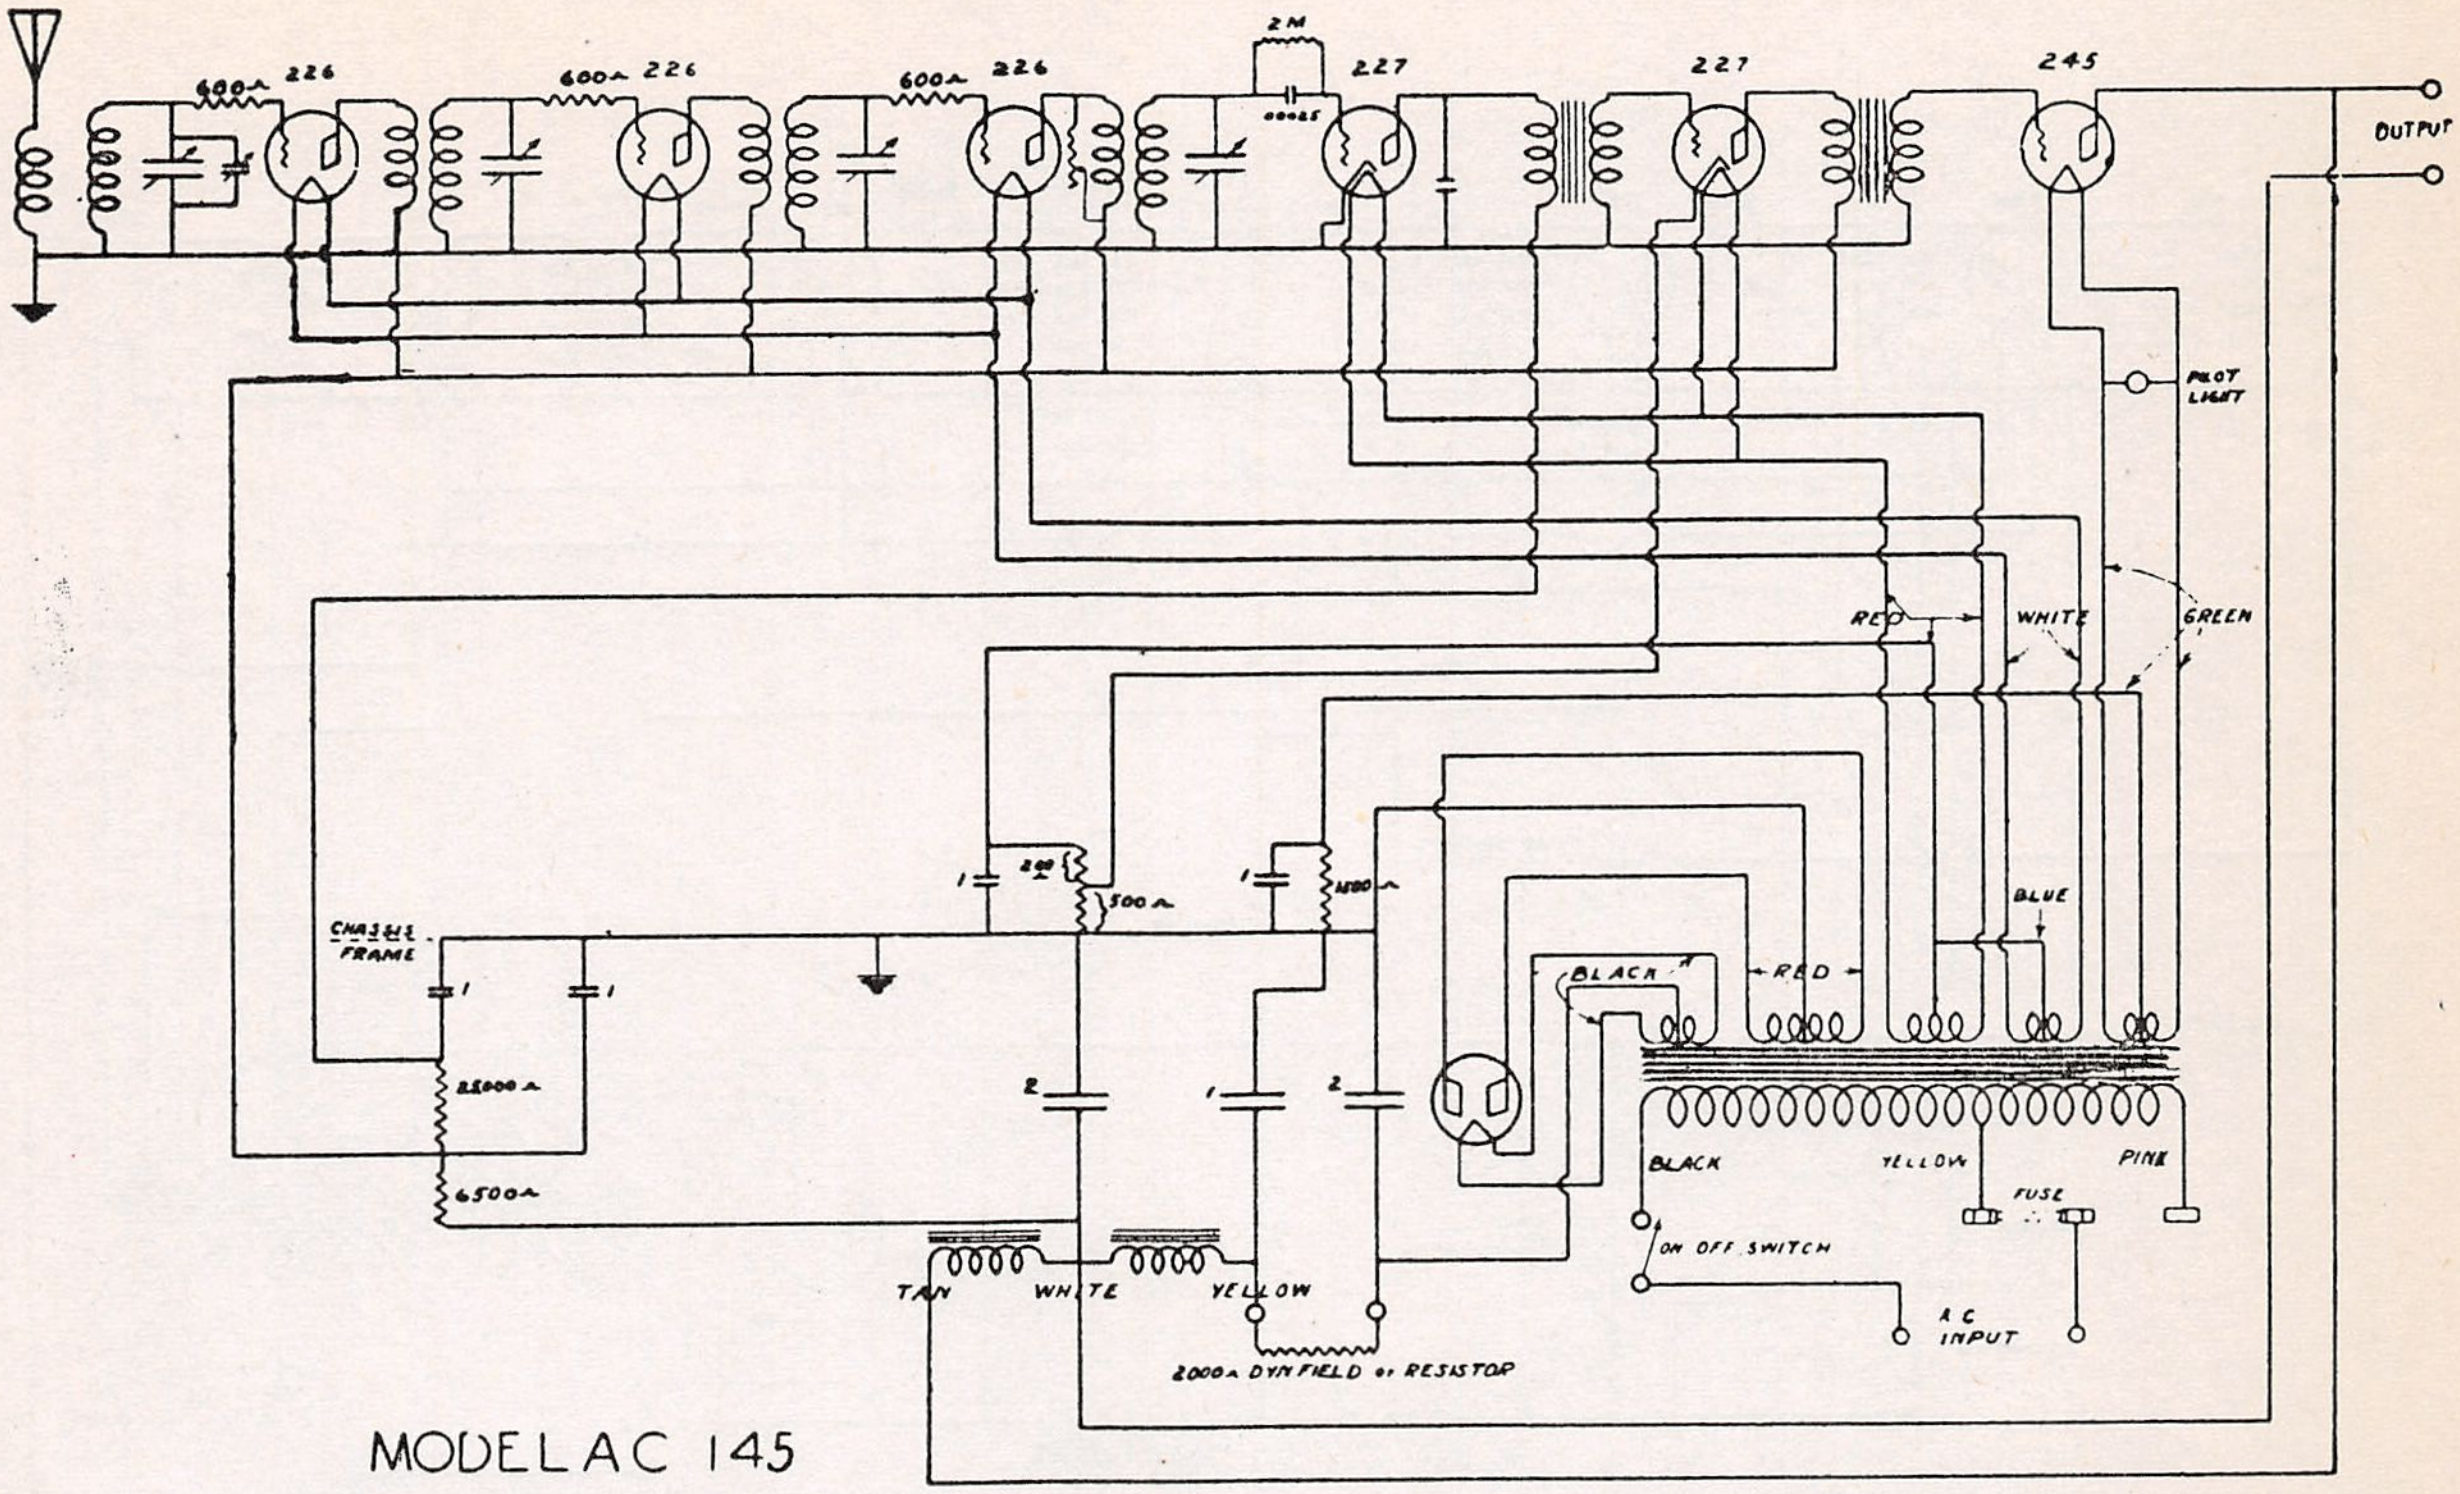
600Ω
226
600Ω
226
600Ω
226
2M
.00025
227
227
245
OUTPUT
PILOT LIGHT
RED
WHITE
GREEN
BLUE
BLACK
RED
CHASSIS FRAME
1
1
1
250Ω
500Ω
1
1800Ω
25000Ω
6500Ω
2
1
2
BLACK
YELLOW
PINK
FUSE
ON OFF SWITCH
A C INPUT
TAN
WHITE
YELLOW
2000Ω DYN FIELD or RESISTOR

MODEL AC 145

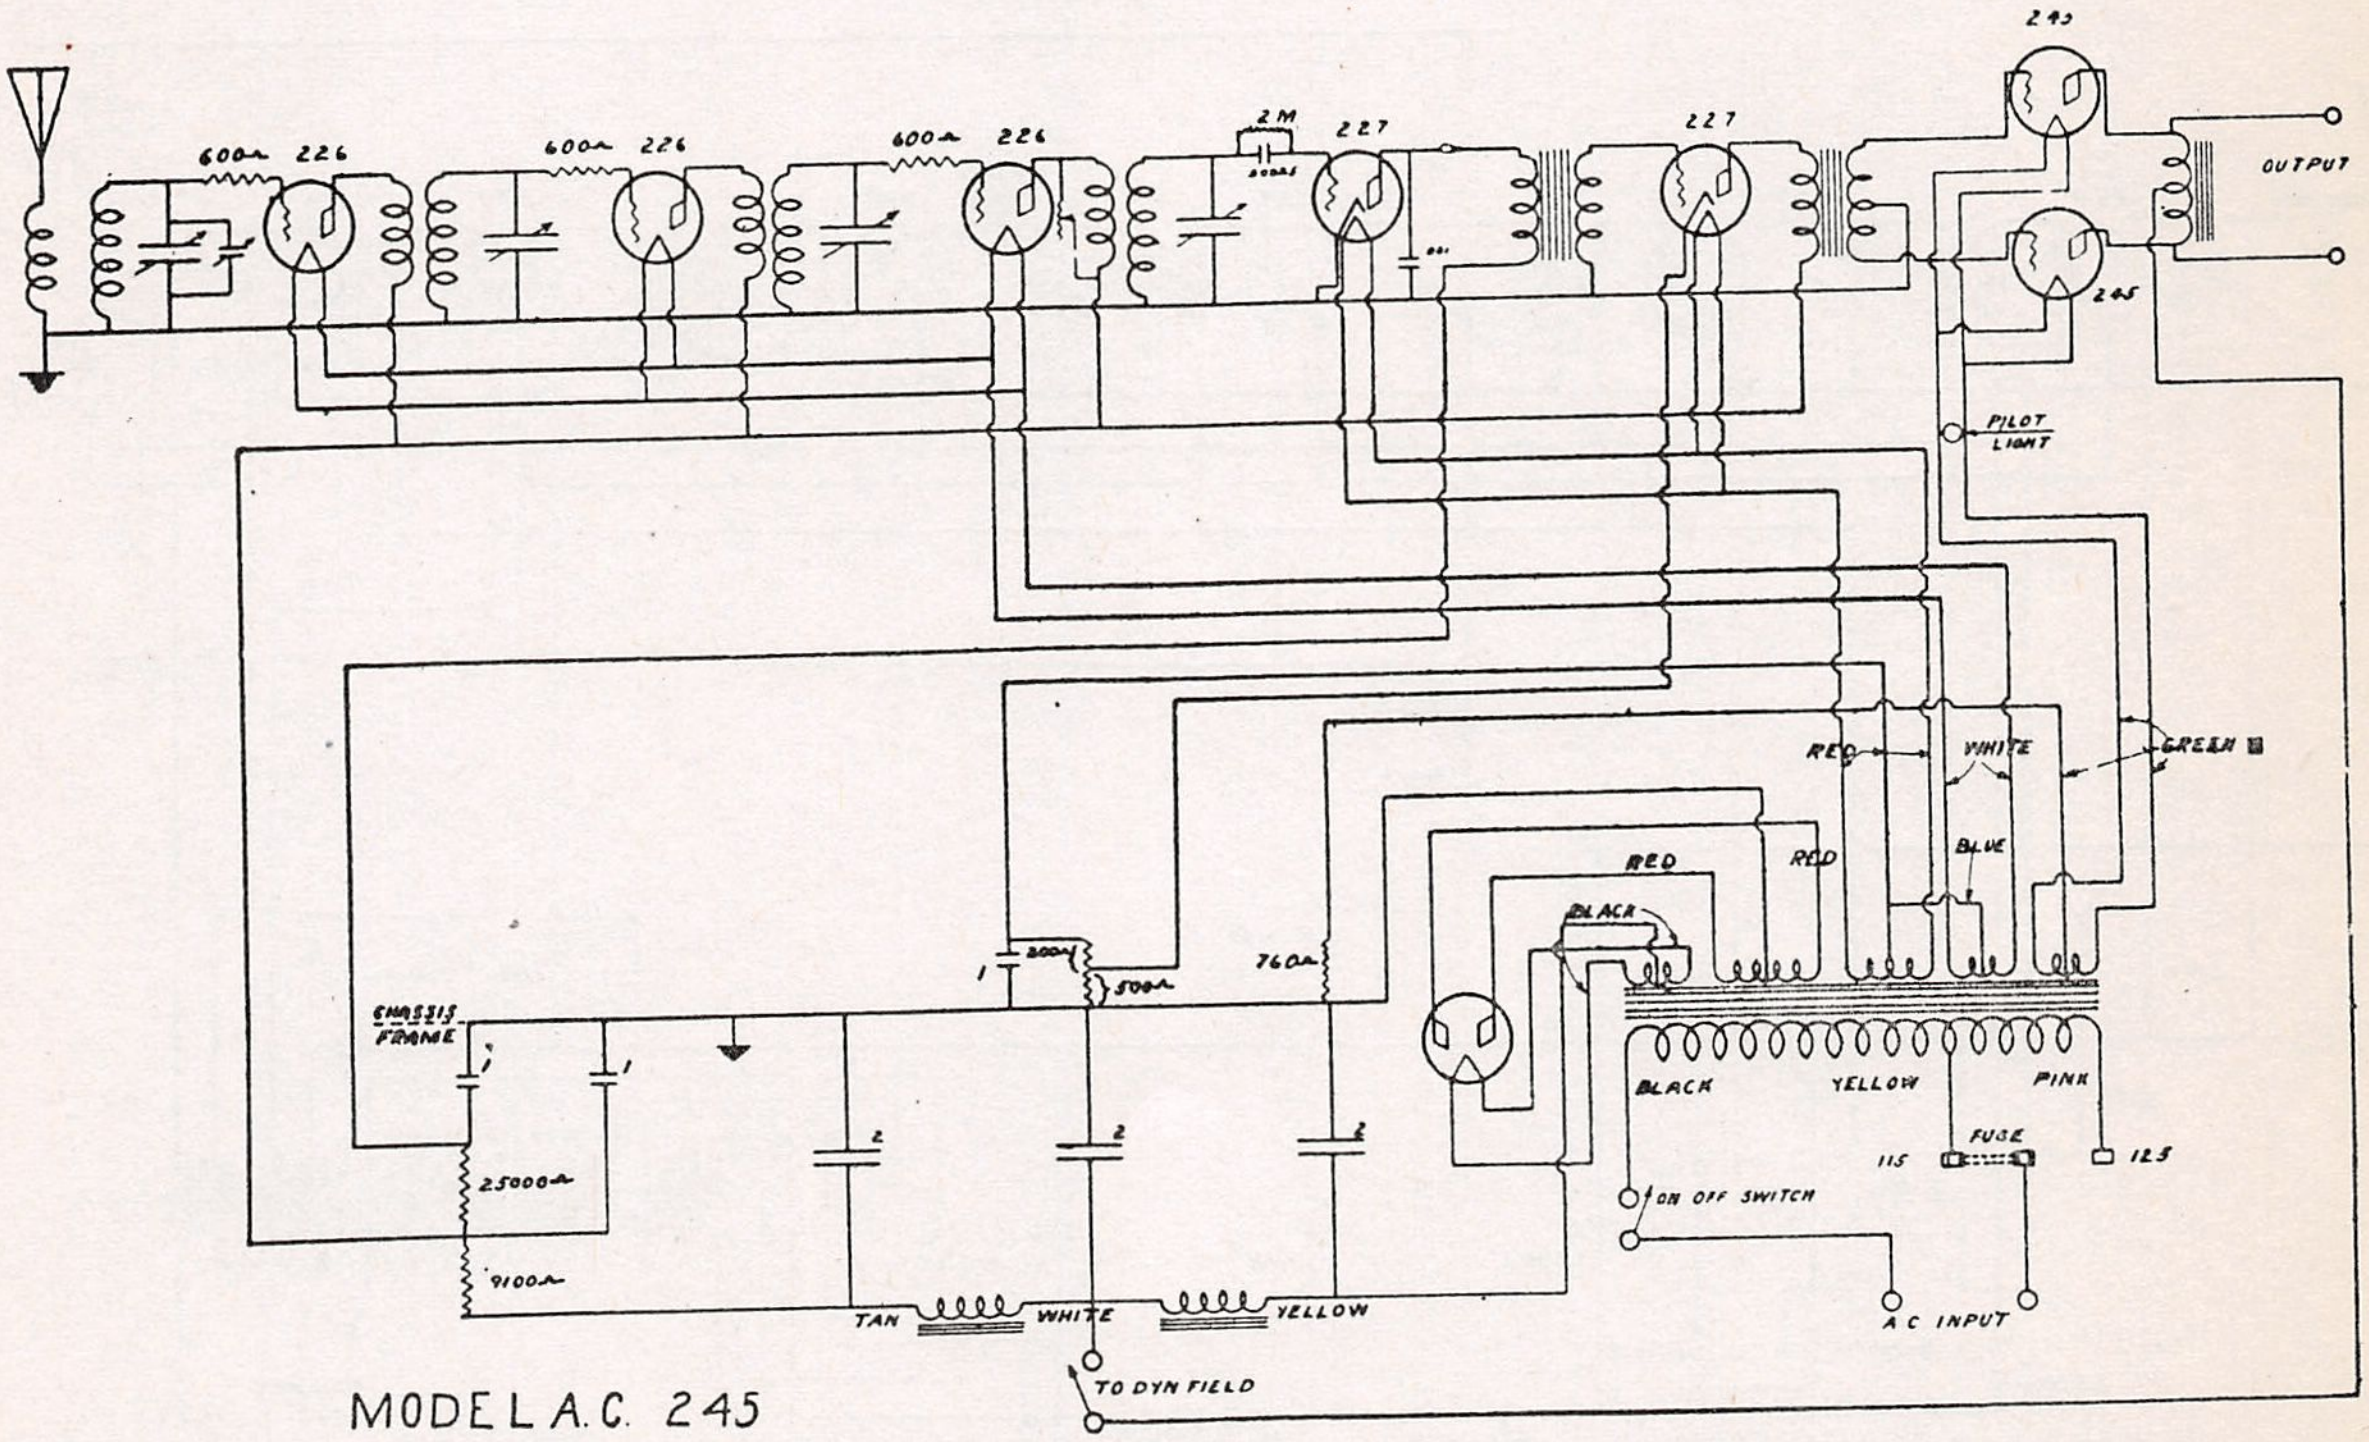
245
600Ω
226
600Ω
226
600Ω
226
2M
.00025
227
.001
227
OUTPUT
245
PILOT LIGHT
RED
WHITE
GREEN
BLUE
RED
RED
BLACK
1
2000Ω
500Ω
760Ω
CHASSIS FRAME
1
1
25000Ω
9100Ω
2
2
2
BLACK
YELLOW
PINK
115
FUSE
125
ON OFF SWITCH
A C INPUT
TAN
WHITE
YELLOW
TO DYN FIELD

MODEL A.C. 245

MODEL AC 14-45
MODEL AC 24-45

DEWALD RADIO

Schematic

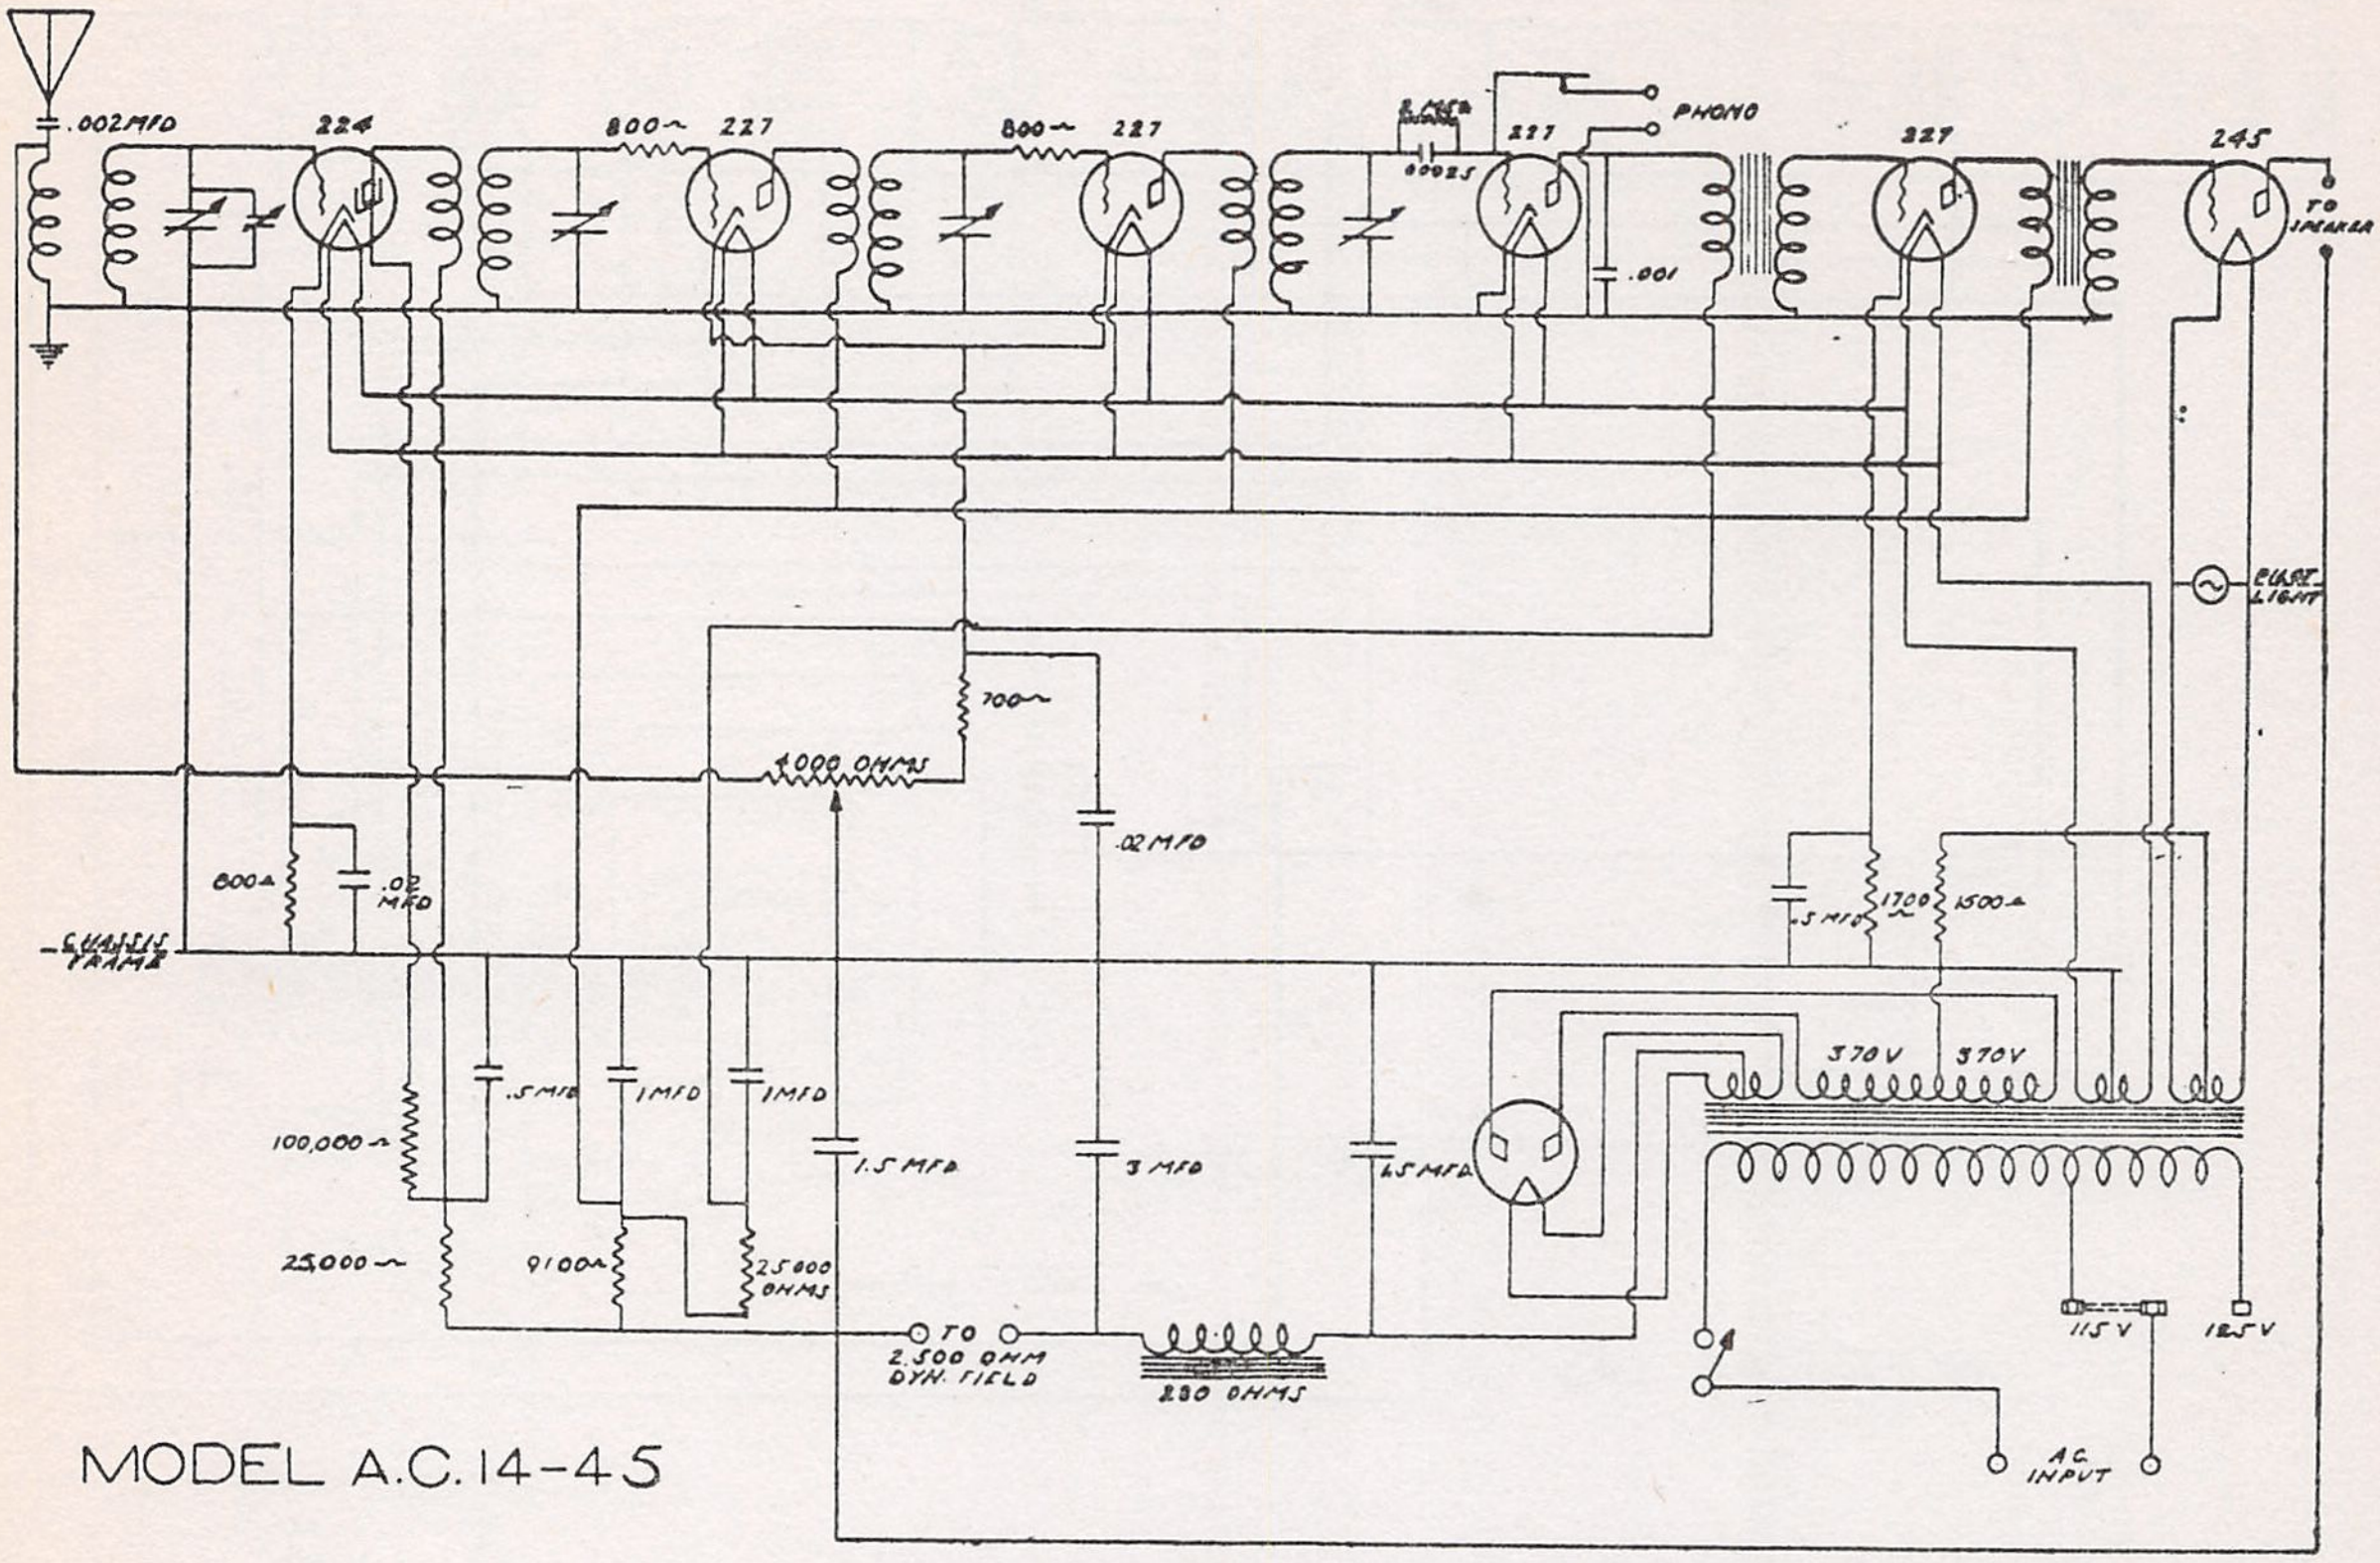
.002 MFD
224
800~
227
800~
227
2 MEG
.00025
227
PHONO
227
245
TO SPEAKER
.001
PILOT LIGHT
700~
4000 OHMS
.02 MFD
800~
.02 MFD
CHASSIS FRAME
.5 MFD
1700~
1500~
370V
370V
.5 MFD
1 MFD
1 MFD
1.5 MFD
3 MFD
1.5 MFD
100,000~
25,000~
9100~
25,000 OHMS
TO 2,500 OHM DYN. FIELD
230 OHMS
115 V
125 V
AC INPUT

MODEL A.C.14-45

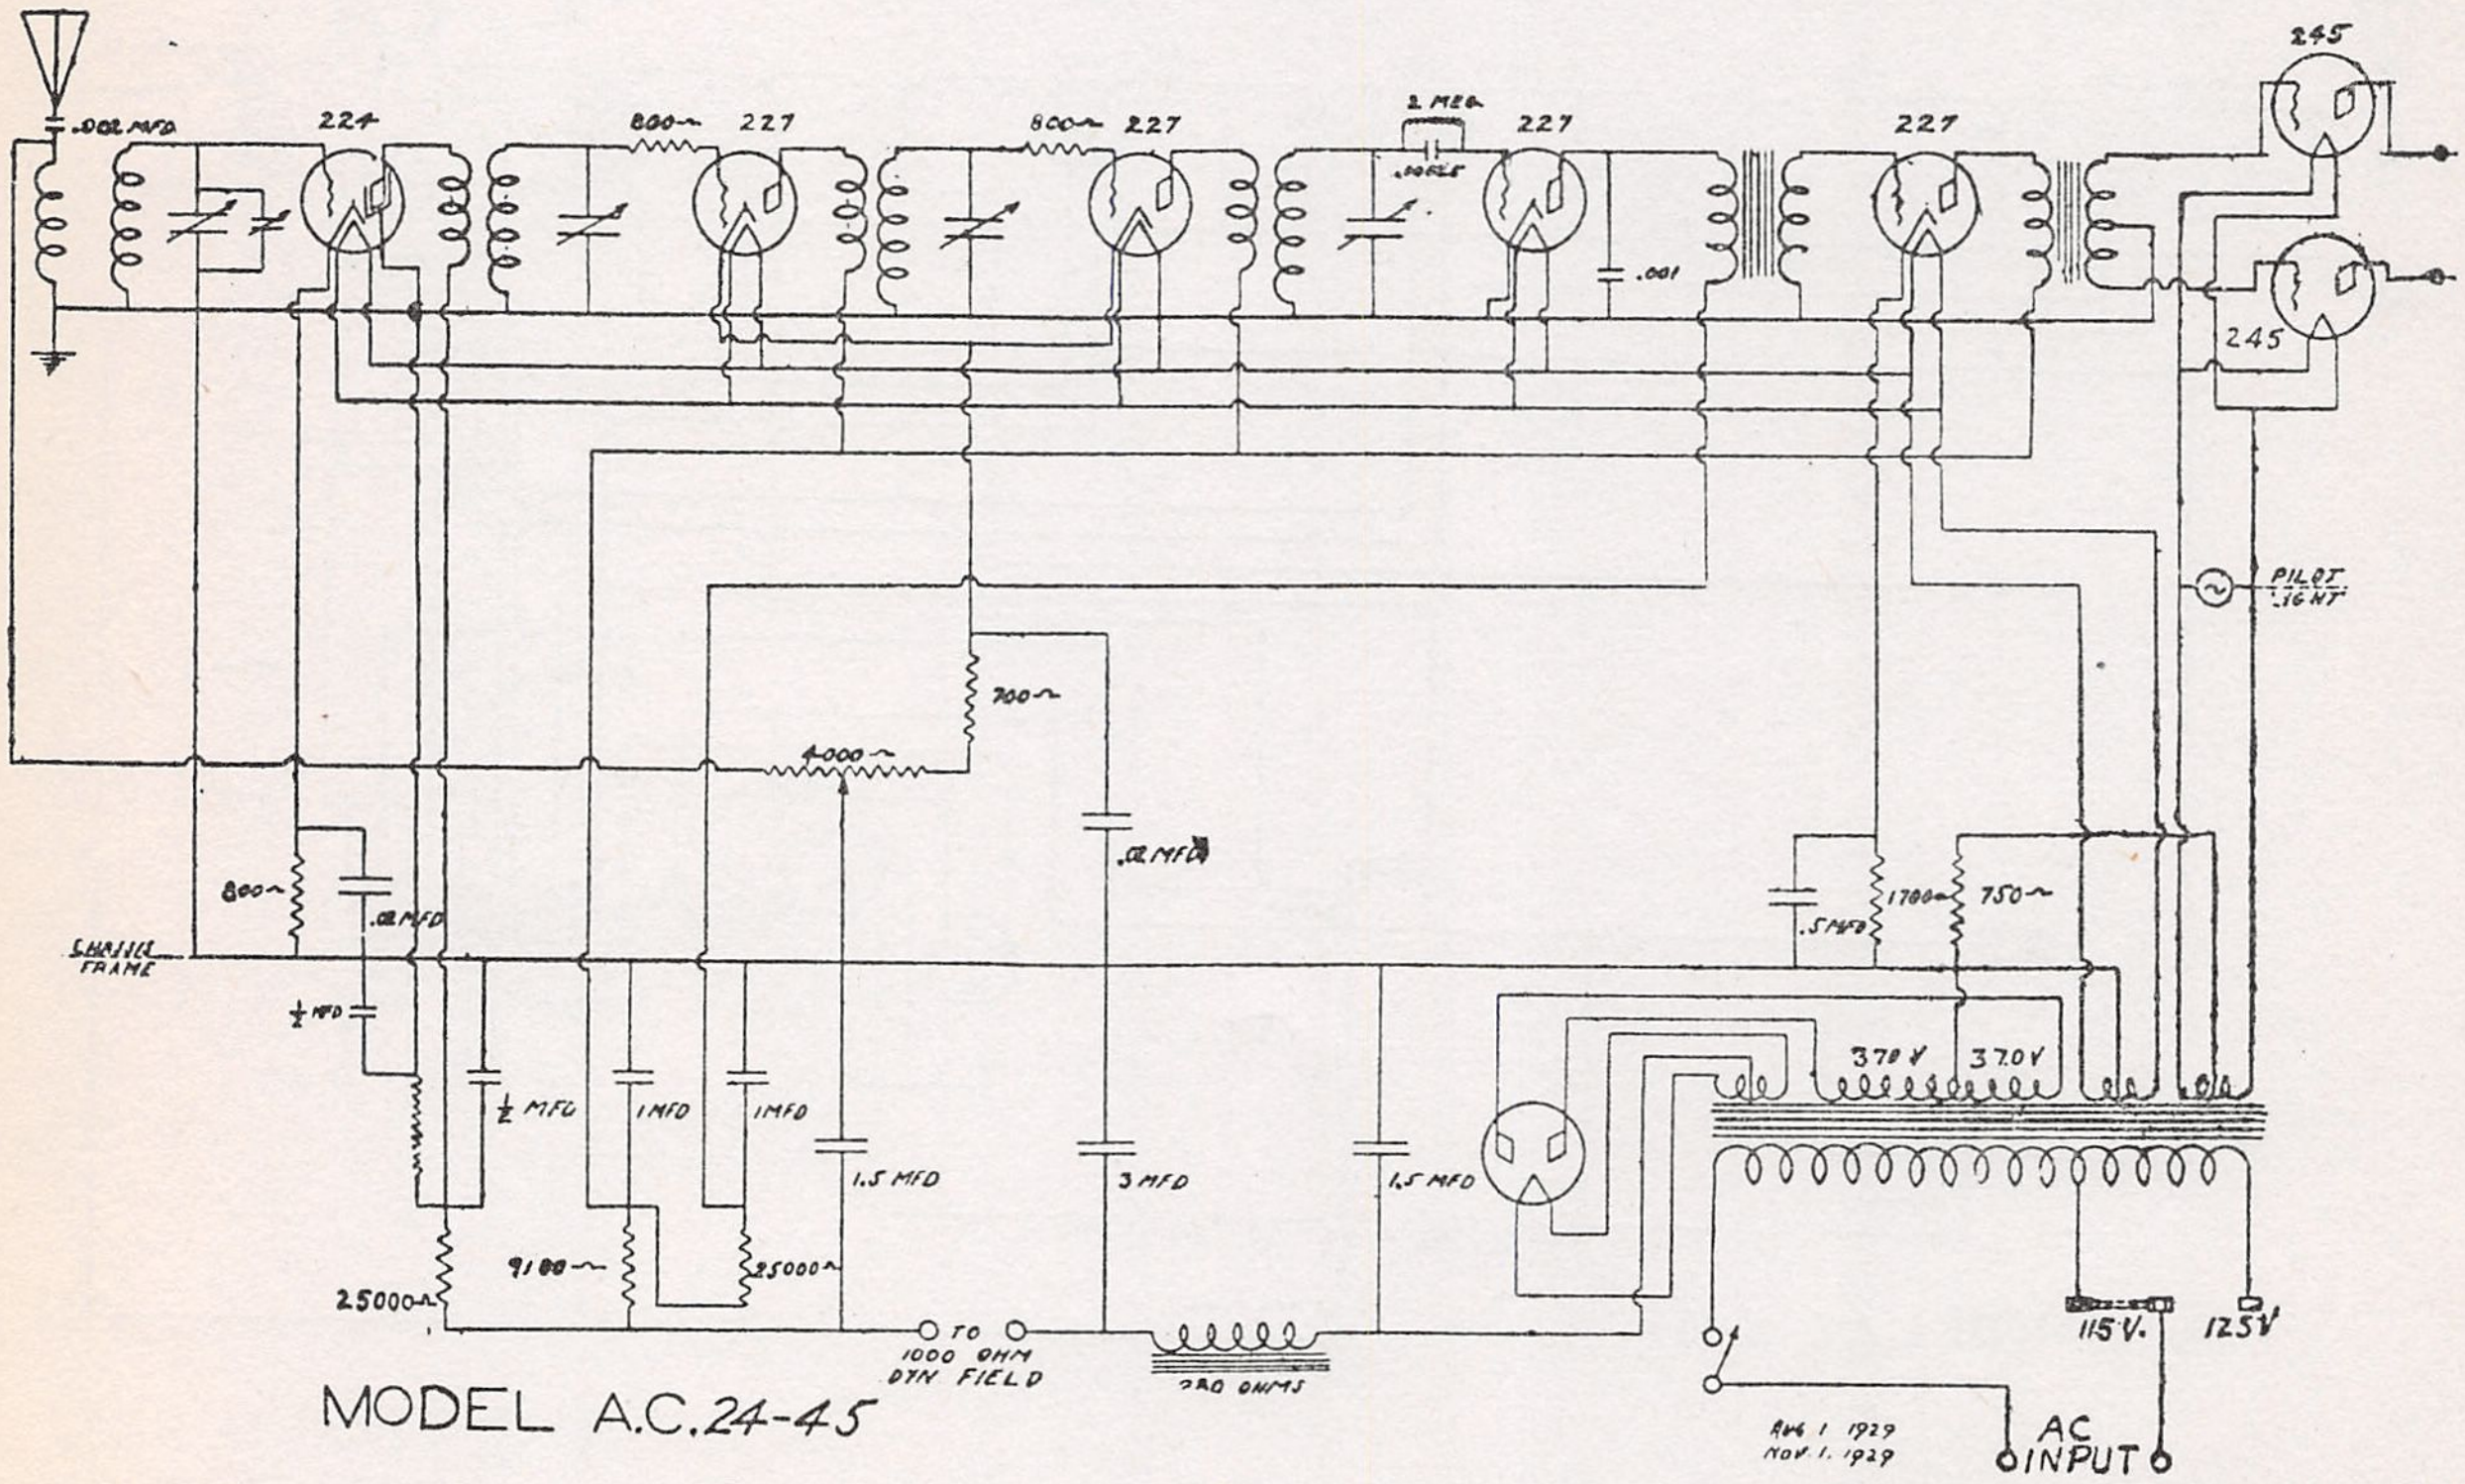
.002 MFD
224
800~
227
800~
227
2 MEG
.00025
227
.001
227
245
245
PILOT LIGHT
700~
4000~
.02 MFD
800~
.02 MFD
CHASSIS FRAME
½ MFD
½ MFD
1 MFD
1 MFD
1.5 MFD
3 MFD
1.5 MFD
.5 MFD
1700~
750~
370V
370V
25000~
9100~
25000~
TO 1000 OHM DYN FIELD
230 OHMS
115V.
125V
Rev. 1 1929
Nov 1, 1929
AC INPUT

MODEL A.C.24-45

DEWALD RADIO

MODEL AC 171-2
MODEL DC 173-4
MODEL DC 273
Schematic

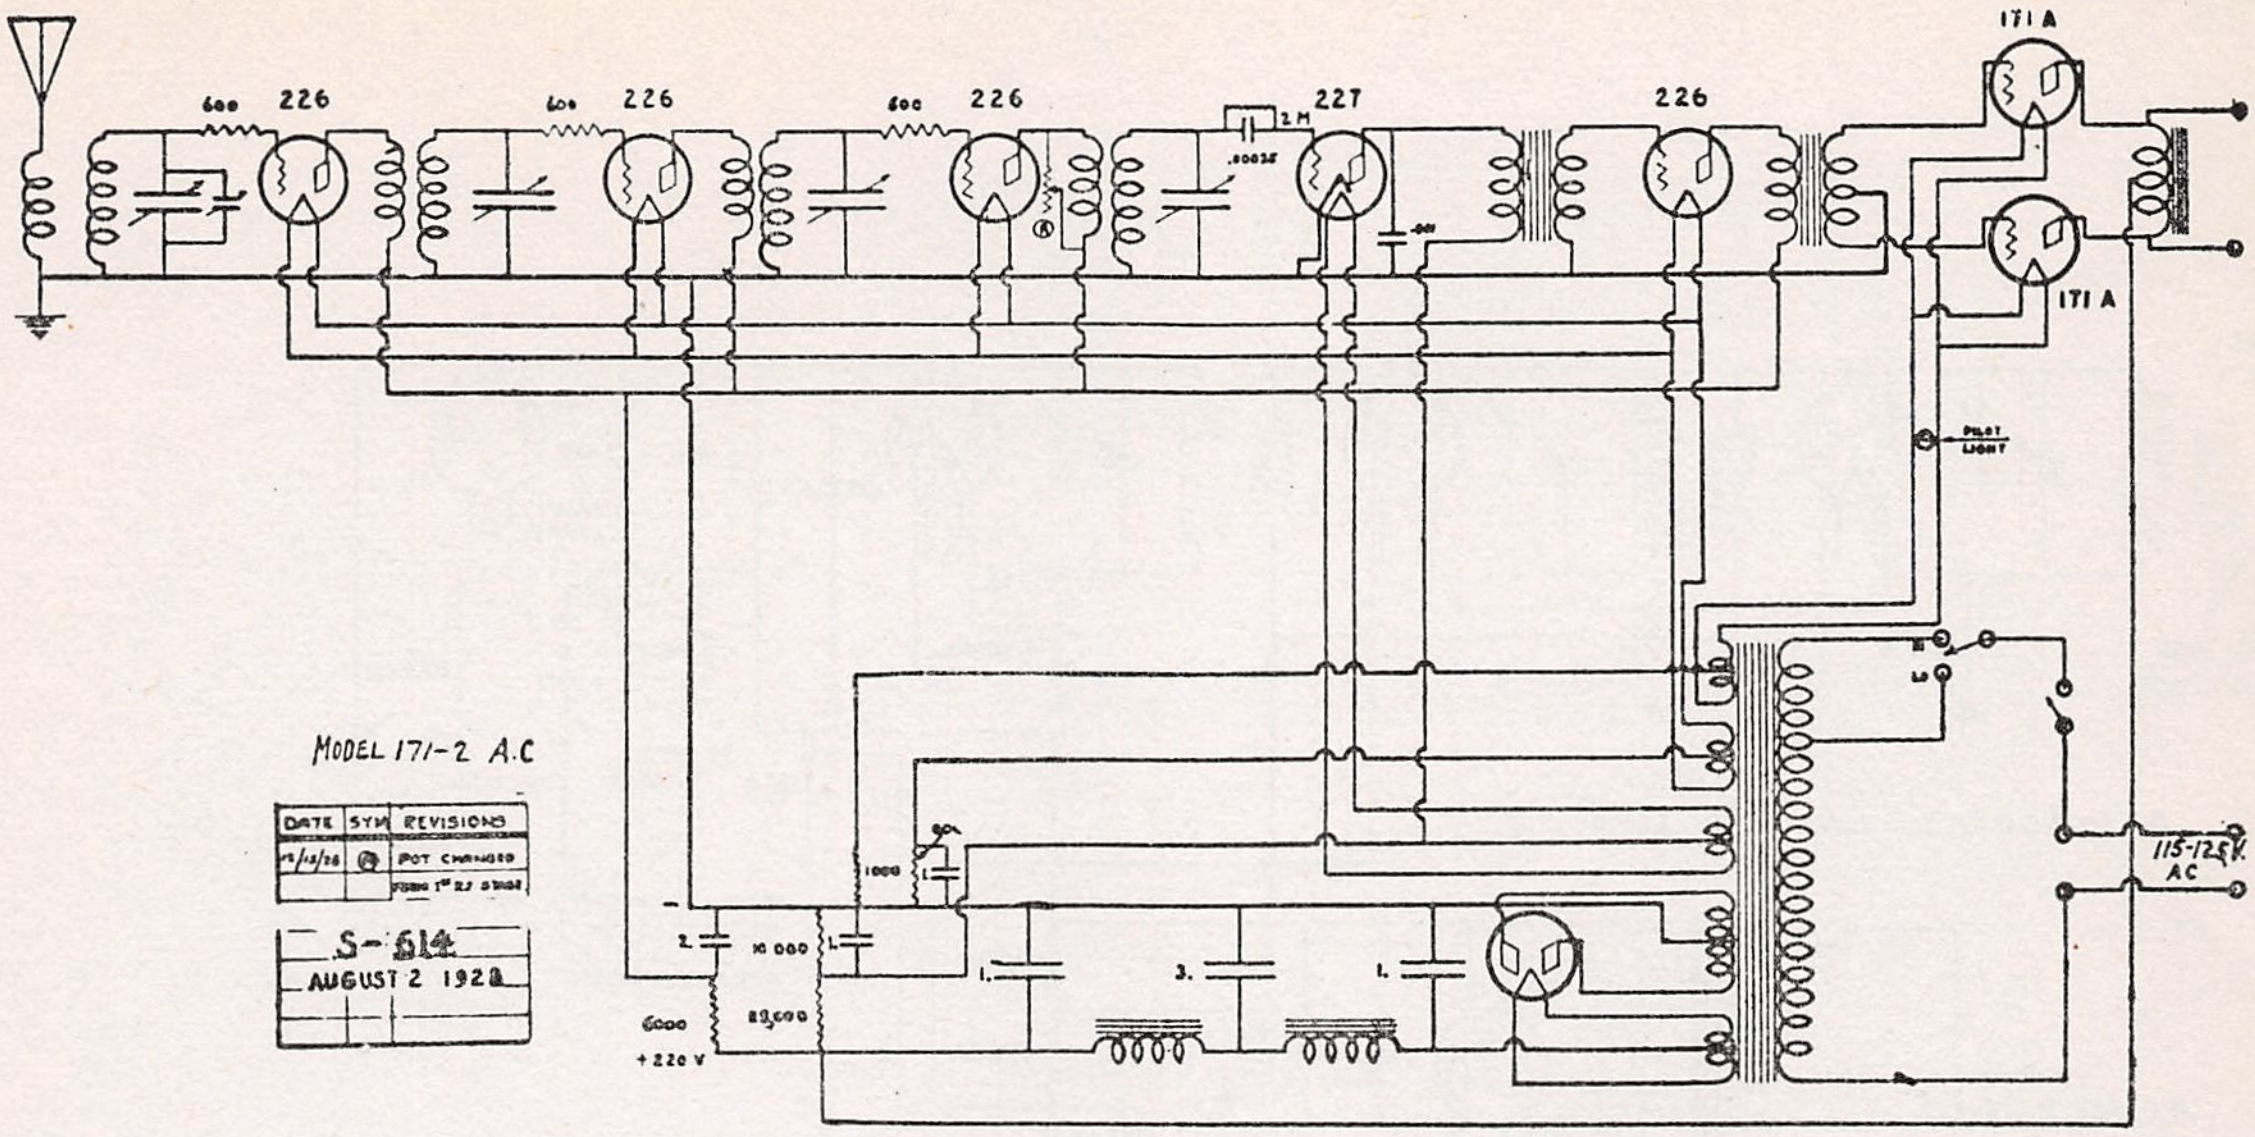
600
226
600
226
600
226
2 M
.00025
227
226
171 A
171 A
.001
PILOT LIGHT
HI
LO
115-125 V. AC
1000
2.
10 000
25,000
6000
+220 V
1.
3.
1.
DATE SYM REVISIONS
12/13/28 Ⓐ POT CHANGED FROM 1st RF STAGE
S-614
AUGUST 2 1928

MODEL 171-2 A.C

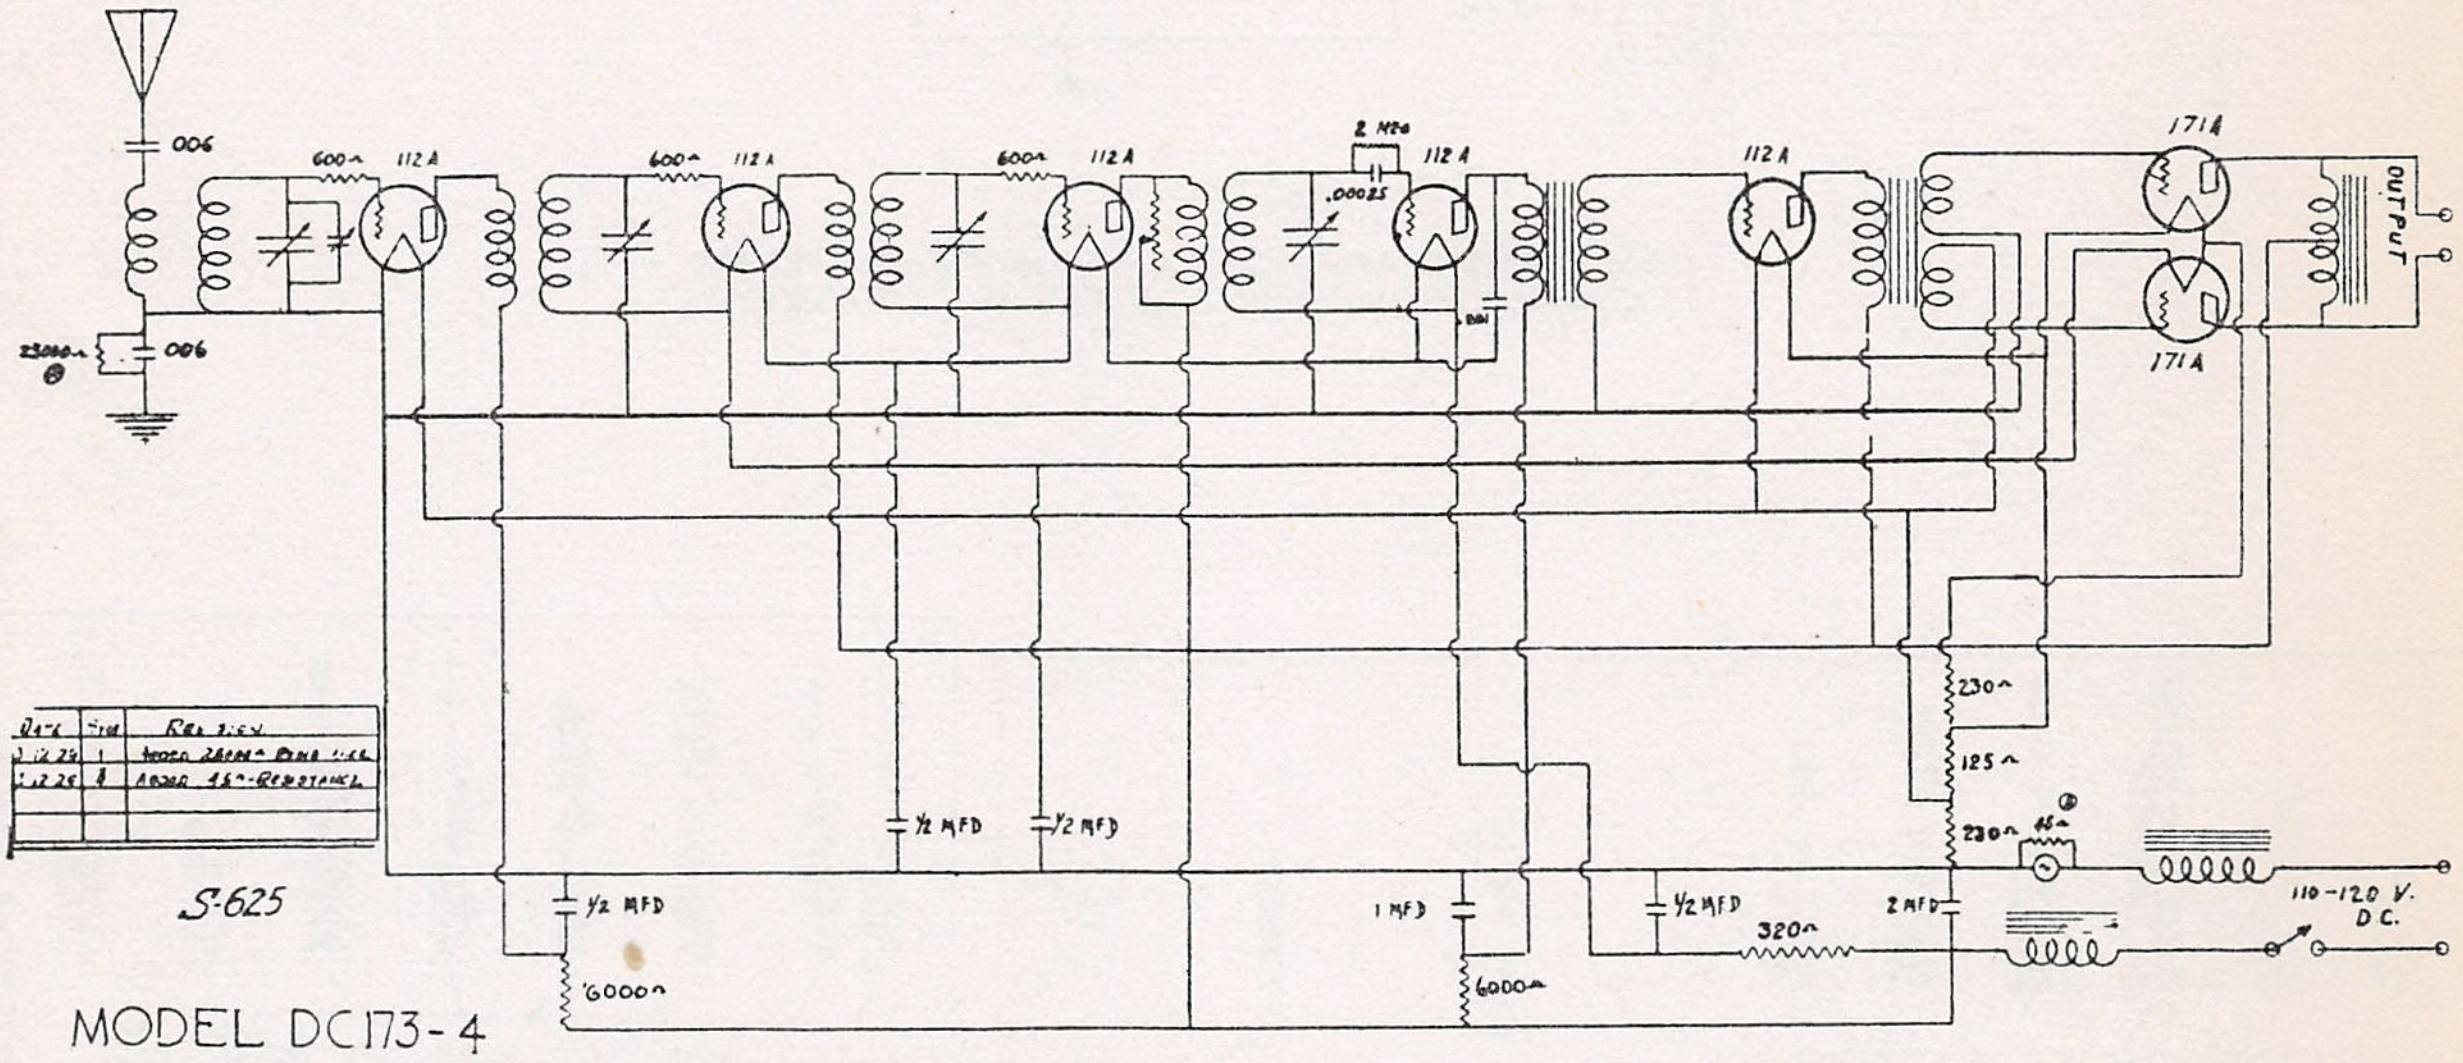
.006
600~
112 A
600~
112 A
600~
112 A
2 MEG
.00025
112 A
112 A
171 A
171 A
OUTPUT
.006
25000~
.001
230~
125~
230~
½ MFD
½ MFD
½ MFD
6000~
1 MFD
6000~
½ MFD
320~
2 MFD
110-120 V. D.C.
S-625

MODEL DC173-4

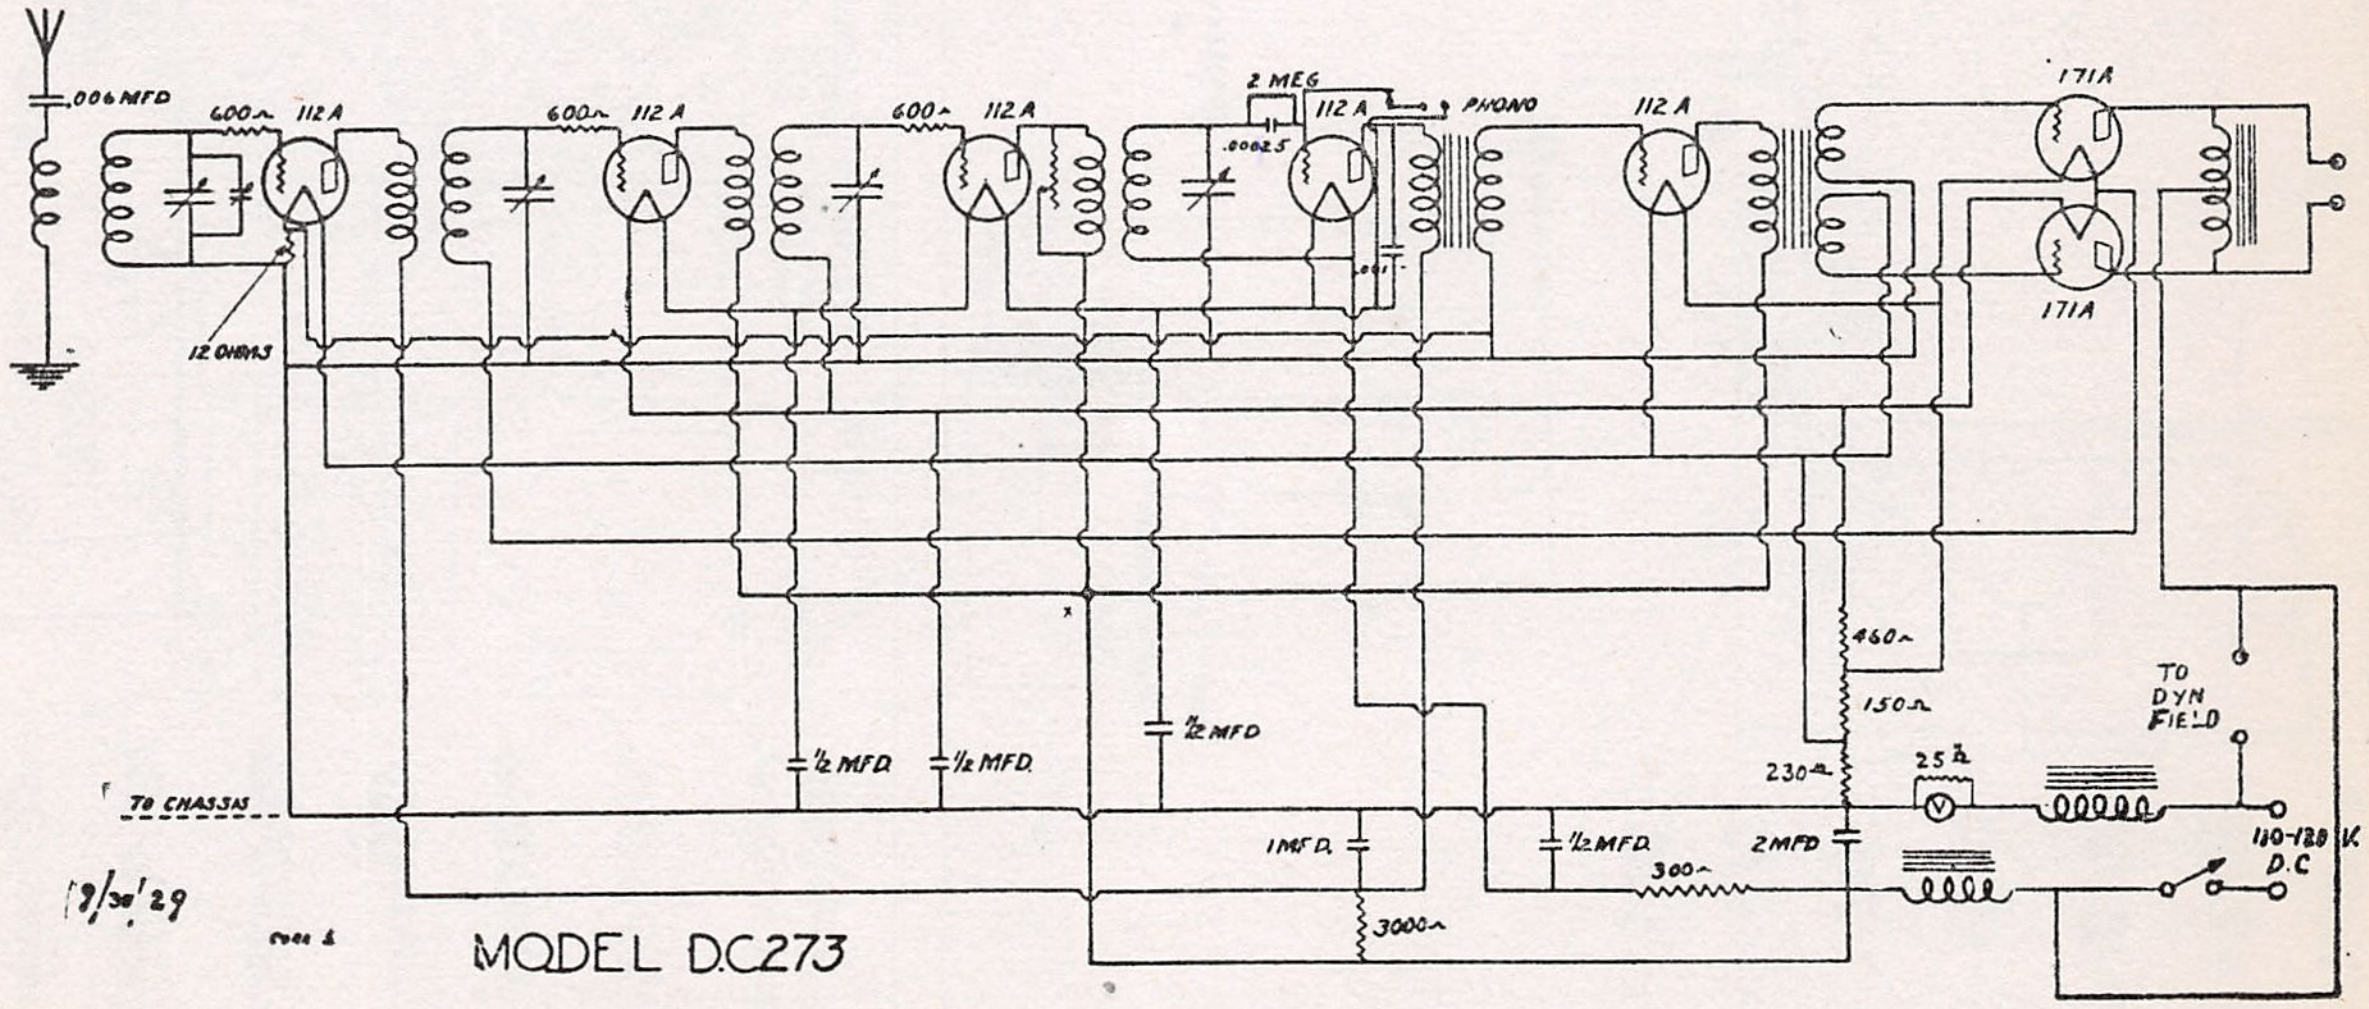
.006 MFD
600~
112 A
12 OHMS
600~
112 A
600~
112 A
2 MEG
.00025
112 A
PHONO
.001
112 A
171 A
171 A
460~
150~
230~
25~
TO DYN FIELD
½ MFD
½ MFD
½ MFD
TO CHASSIS
1 MFD
½ MFD
300~
2 MFD
3000~
110-120 V. D.C
12/30/29

MODEL DC273

MODEL AC-524
Schematic

DEWALD RADIO

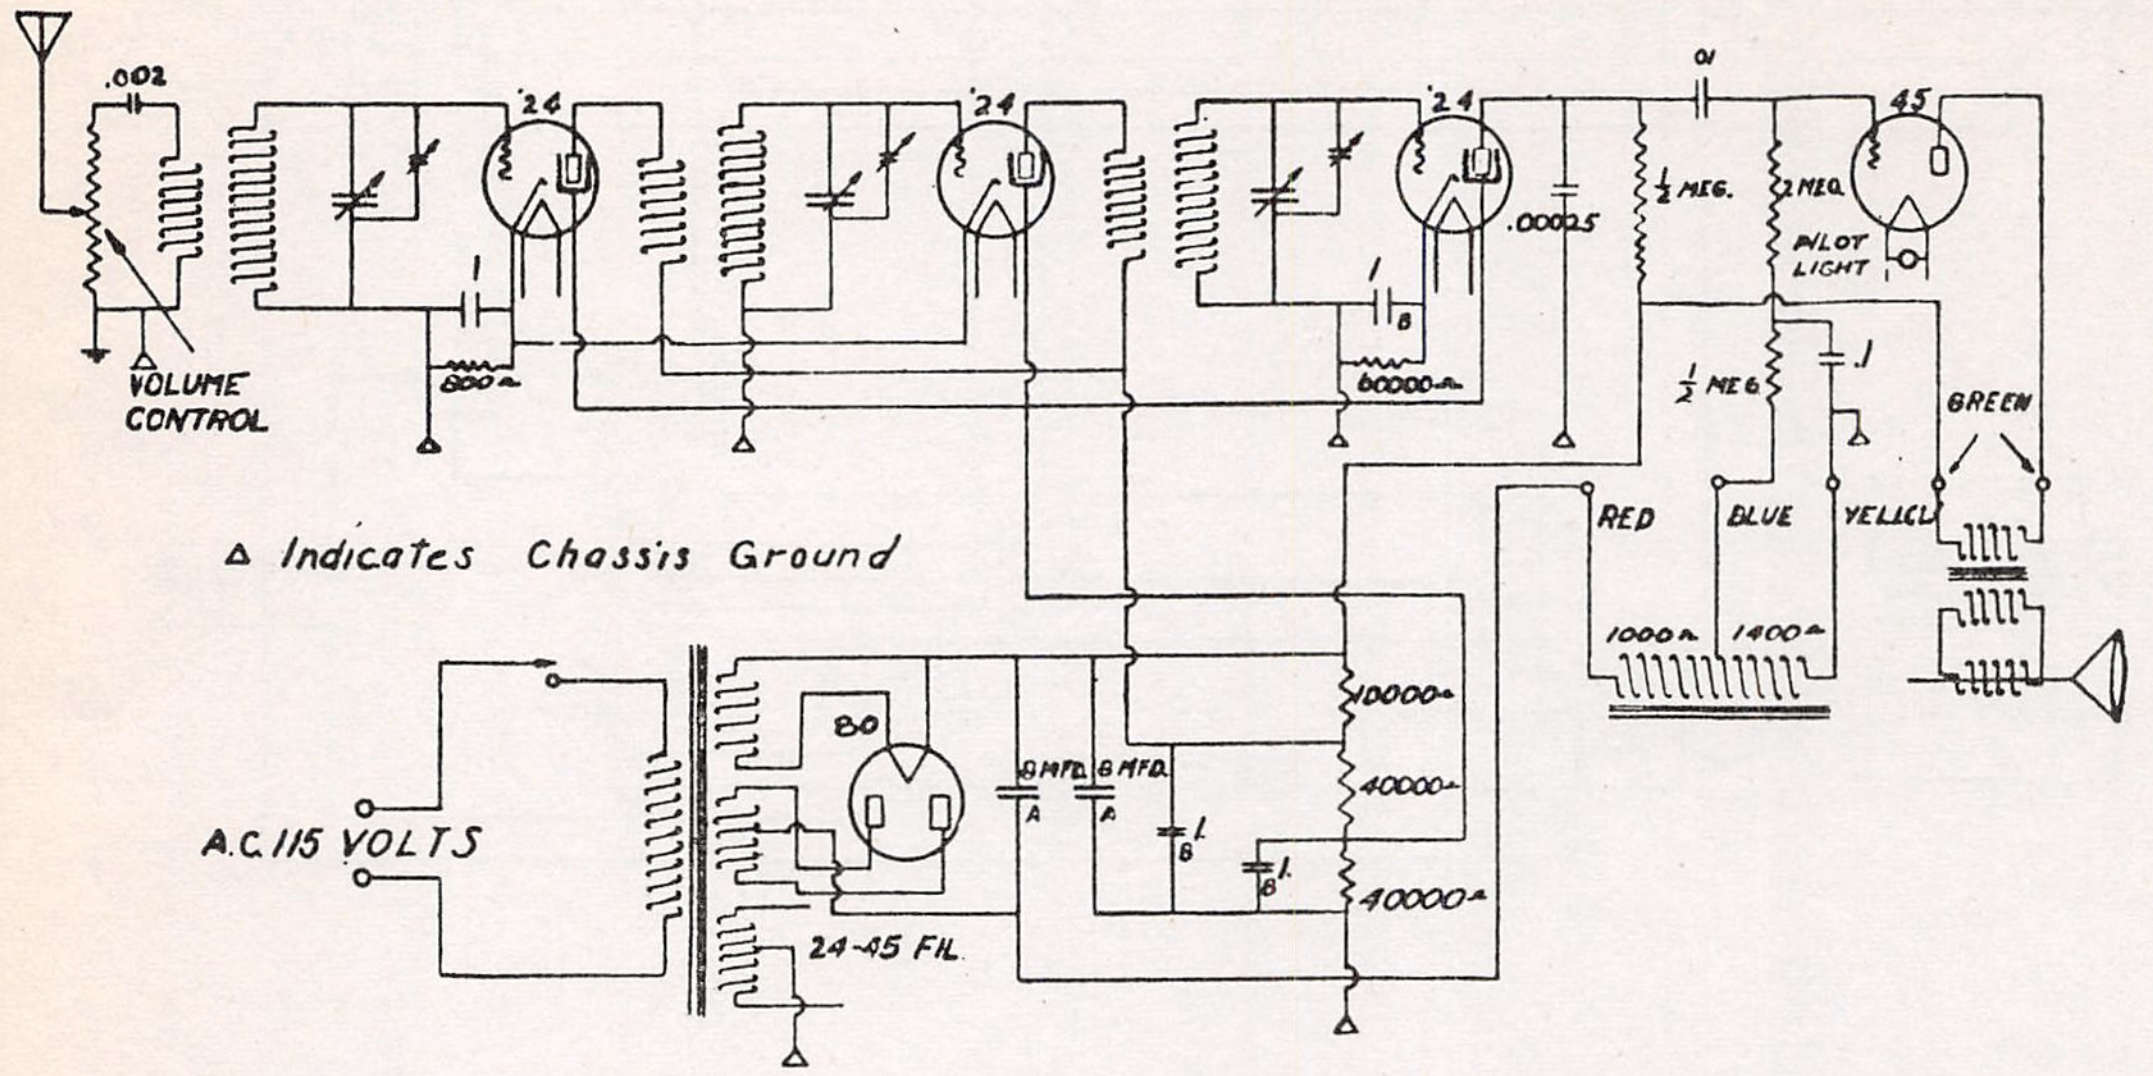
.002
24
24
24
45
.01
.00025
½ MEG.
2 MEG.
PILOT LIGHT
1
1
B
800Ω
60000Ω
VOLUME CONTROL
½ MEG
.1
GREEN
RED
BLUE
YELLOW
1000Ω
1400Ω
△ Indicates Chassis Ground
80
8 MFD. A
8 MFD. A
1. B
1. B
10000Ω
40000Ω
40000Ω
A.C. 115 VOLTS
24-45 FIL.

-NOTE-
CONDENSORS MARKED A, 8 MFD ARE ELECTROLYTIC
CONDENSORS MARKED B ARE IN FILTER BLOCK

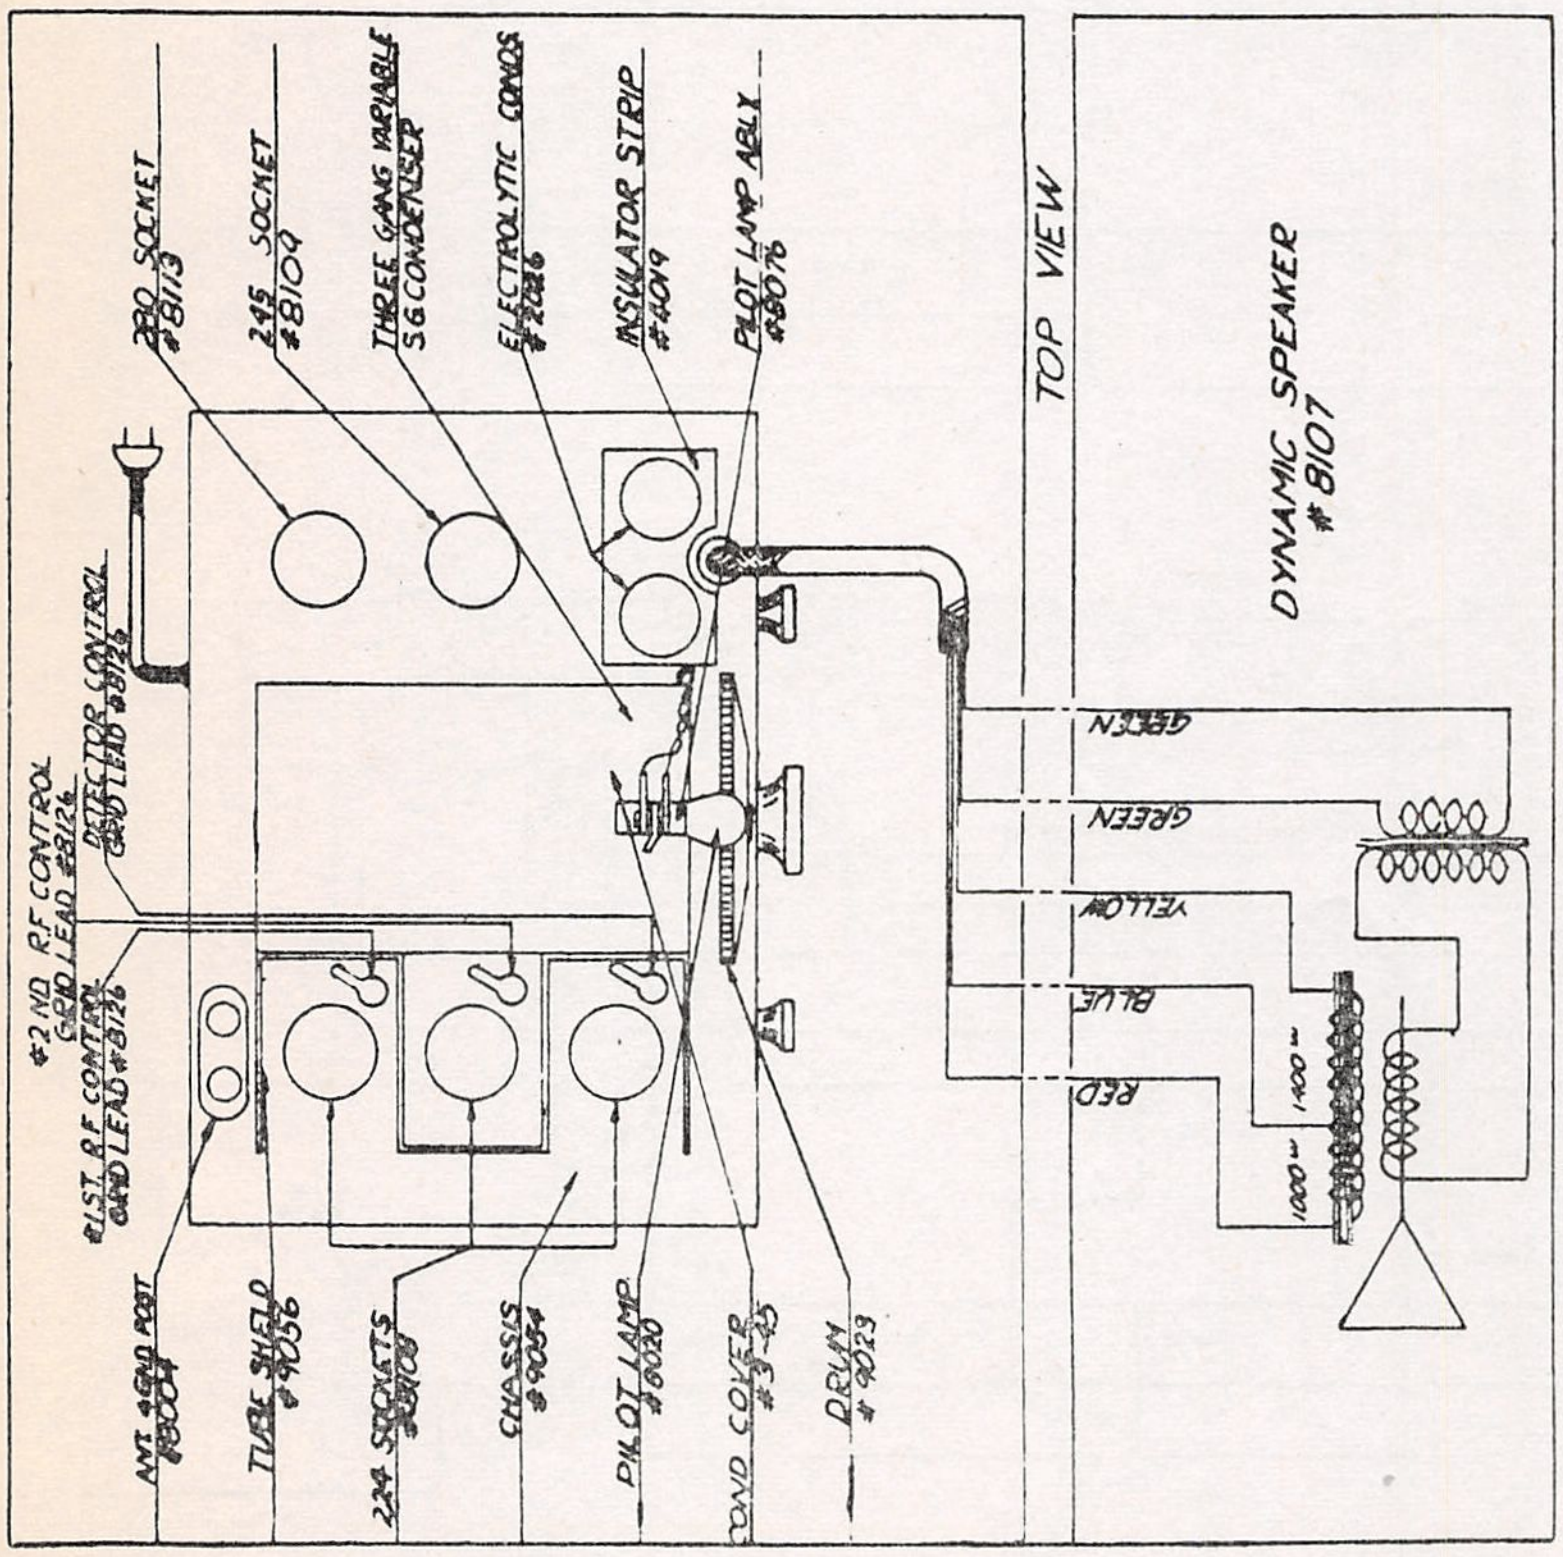
280 SOCKET #8113
245 SOCKET #8109
THREE GANG VARIABLE S6 CONDENSER
ELECTROLYTIC CONDS #2016
INSULATOR STRIP #4019
PILOT LAMP ASLY #8076
TOP VIEW
DYNAMIC SPEAKER #8107
GREEN
GREEN
YELLOW
BLUE
RED
1000Ω
1400Ω
DETECTOR CONTROL GRID LEAD #8125
#2 ND R.F. CONTROL GRID LEAD #8124
#1 ST. R.F. CONTROL GRID LEAD #8126
ANT. & GND POST #8004
TUBE SHIELD #4056
224 SOCKETS #8108
CHASSIS #9054
PILOT LAMP #6020
COND COVER #3-45
DRUM #9023

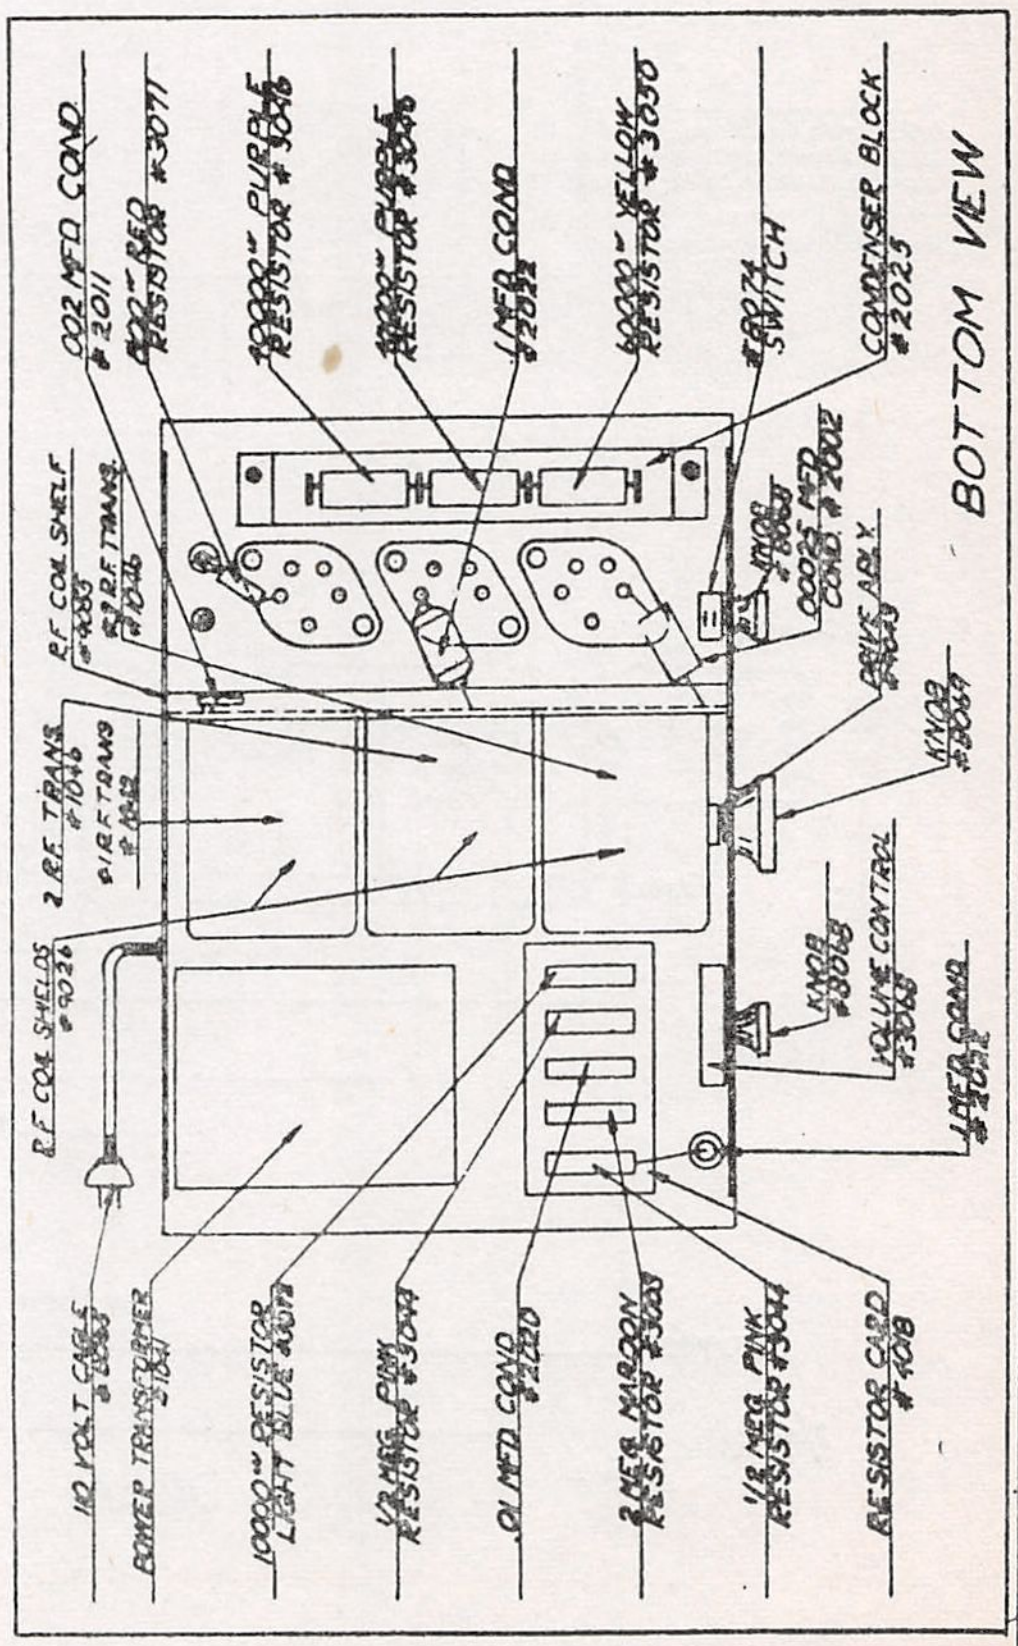
.002 MFD COND #2011
800Ω RED RESISTOR #3077
10000Ω PURPLE RESISTOR #3046
10000Ω PURPLE RESISTOR #3046
1 MFD COND #2022
60000Ω YELLOW RESISTOR #3030
#8074 SWITCH
CONDENSER BLOCK #2025
BOTTOM VIEW
R.F. COIL SHELF #4083
#3 R.F. TRANS #1046
2 R.F. TRANS #1046
DIR.F. TRANS #1042
R.F. COIL SHIELDS #4026
KNOB #3063
.00025 MFD COND. #2002
DRIVE ASLY #8029
KNOB #3064
KNOB #3065
VOLUME CONTROL #3018
1 MFD COND #2012
110 VOLT CABLE #8083
POWER TRANSFORMER #1041
10000Ω RESISTOR LIGHT BLUE #3078
1/2 MEG. PINK RESISTOR #3044
.01 MFD COND #2220
2 MEG. MAROON RESISTOR #3033
1/2 MEG. PINK RESISTOR #3044
RESISTOR CARD #4018

DEWALD RADIO

MODEL AC 447-M
MODEL DC 532-3

Schematic

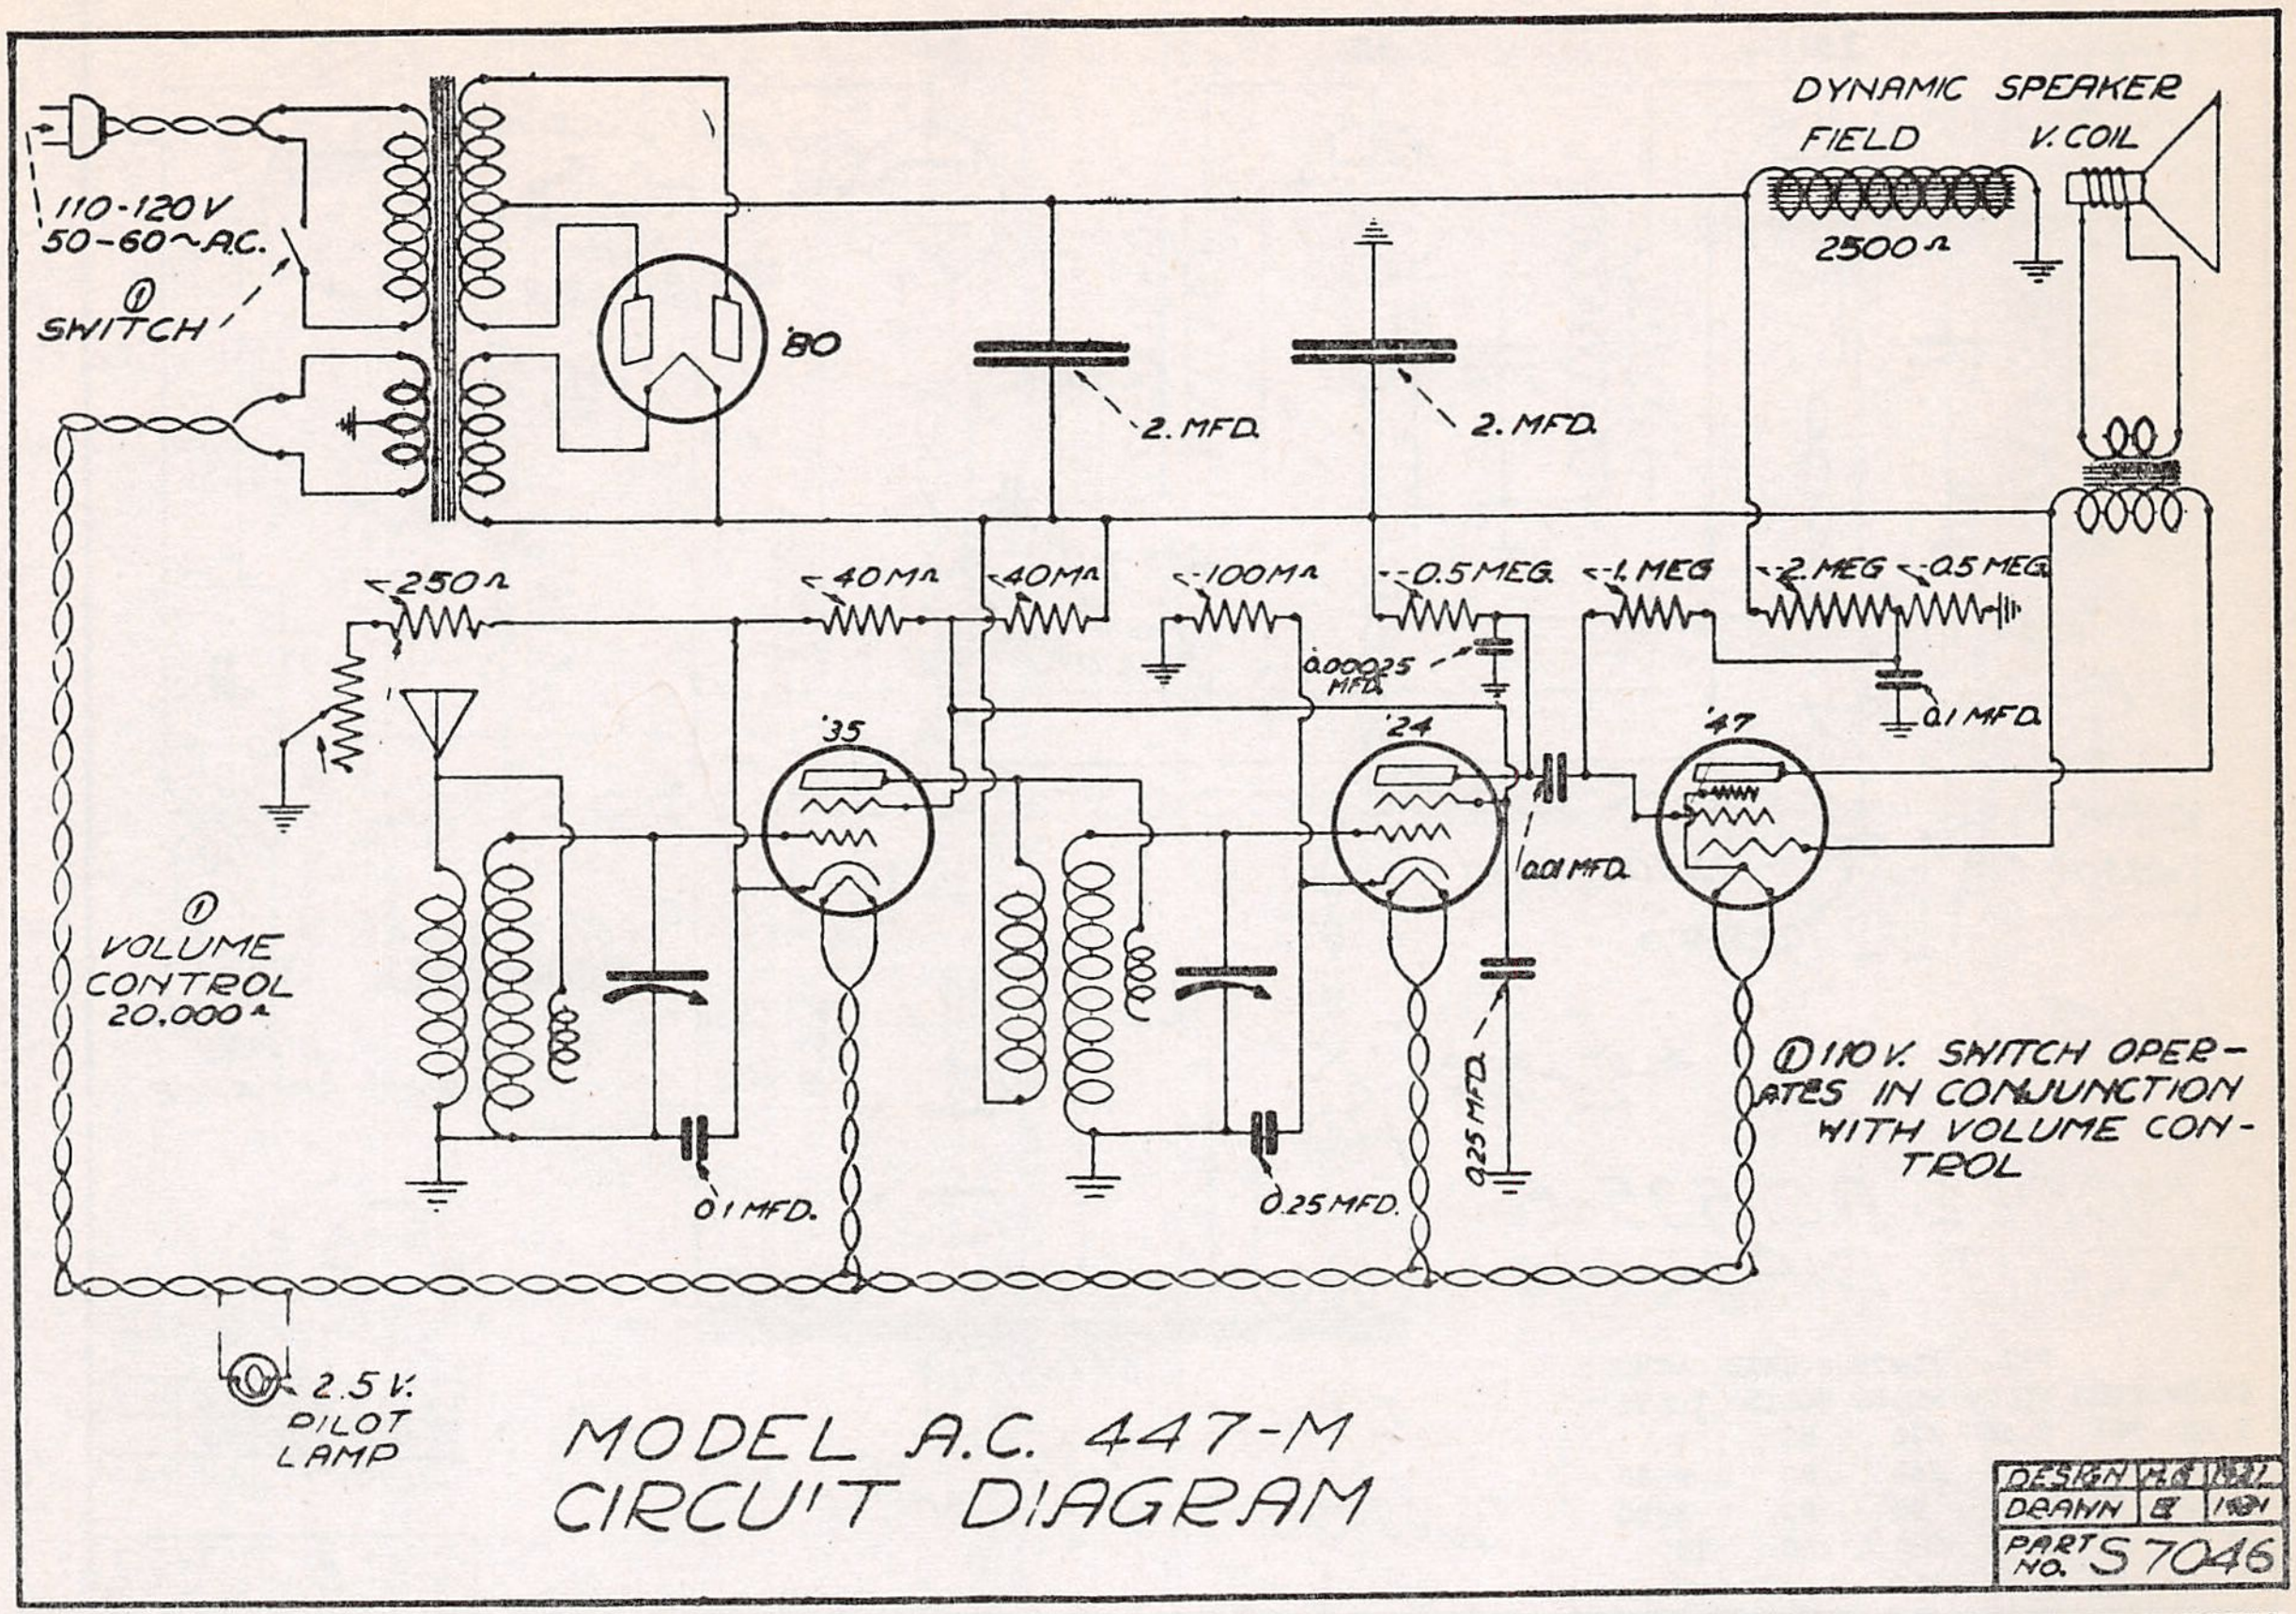
110-120 V
50-60~A.C.
① SWITCH
'80
2. MFD.
2. MFD.
DYNAMIC SPEAKER
FIELD
V. COIL
2500 Ω
250 Ω
40 MΩ
40 MΩ
100 MΩ
0.5 MEG.
.1 MEG.
.2 MEG.
0.5 MEG.
0.00025 MFD.
.01 MFD.
.0.1 MFD.
'35
'24
'47
① VOLUME CONTROL 20,000 Ω
.01 MFD.
0.25 MFD.
.025 MFD.
① 110 V. SWITCH OPERATES IN CONJUNCTION WITH VOLUME CONTROL
2.5 V. PILOT LAMP
DESIGN
DRAWN
1931
PART NO. S 7046

MODEL A.C. 447-M
CIRCUIT DIAGRAM

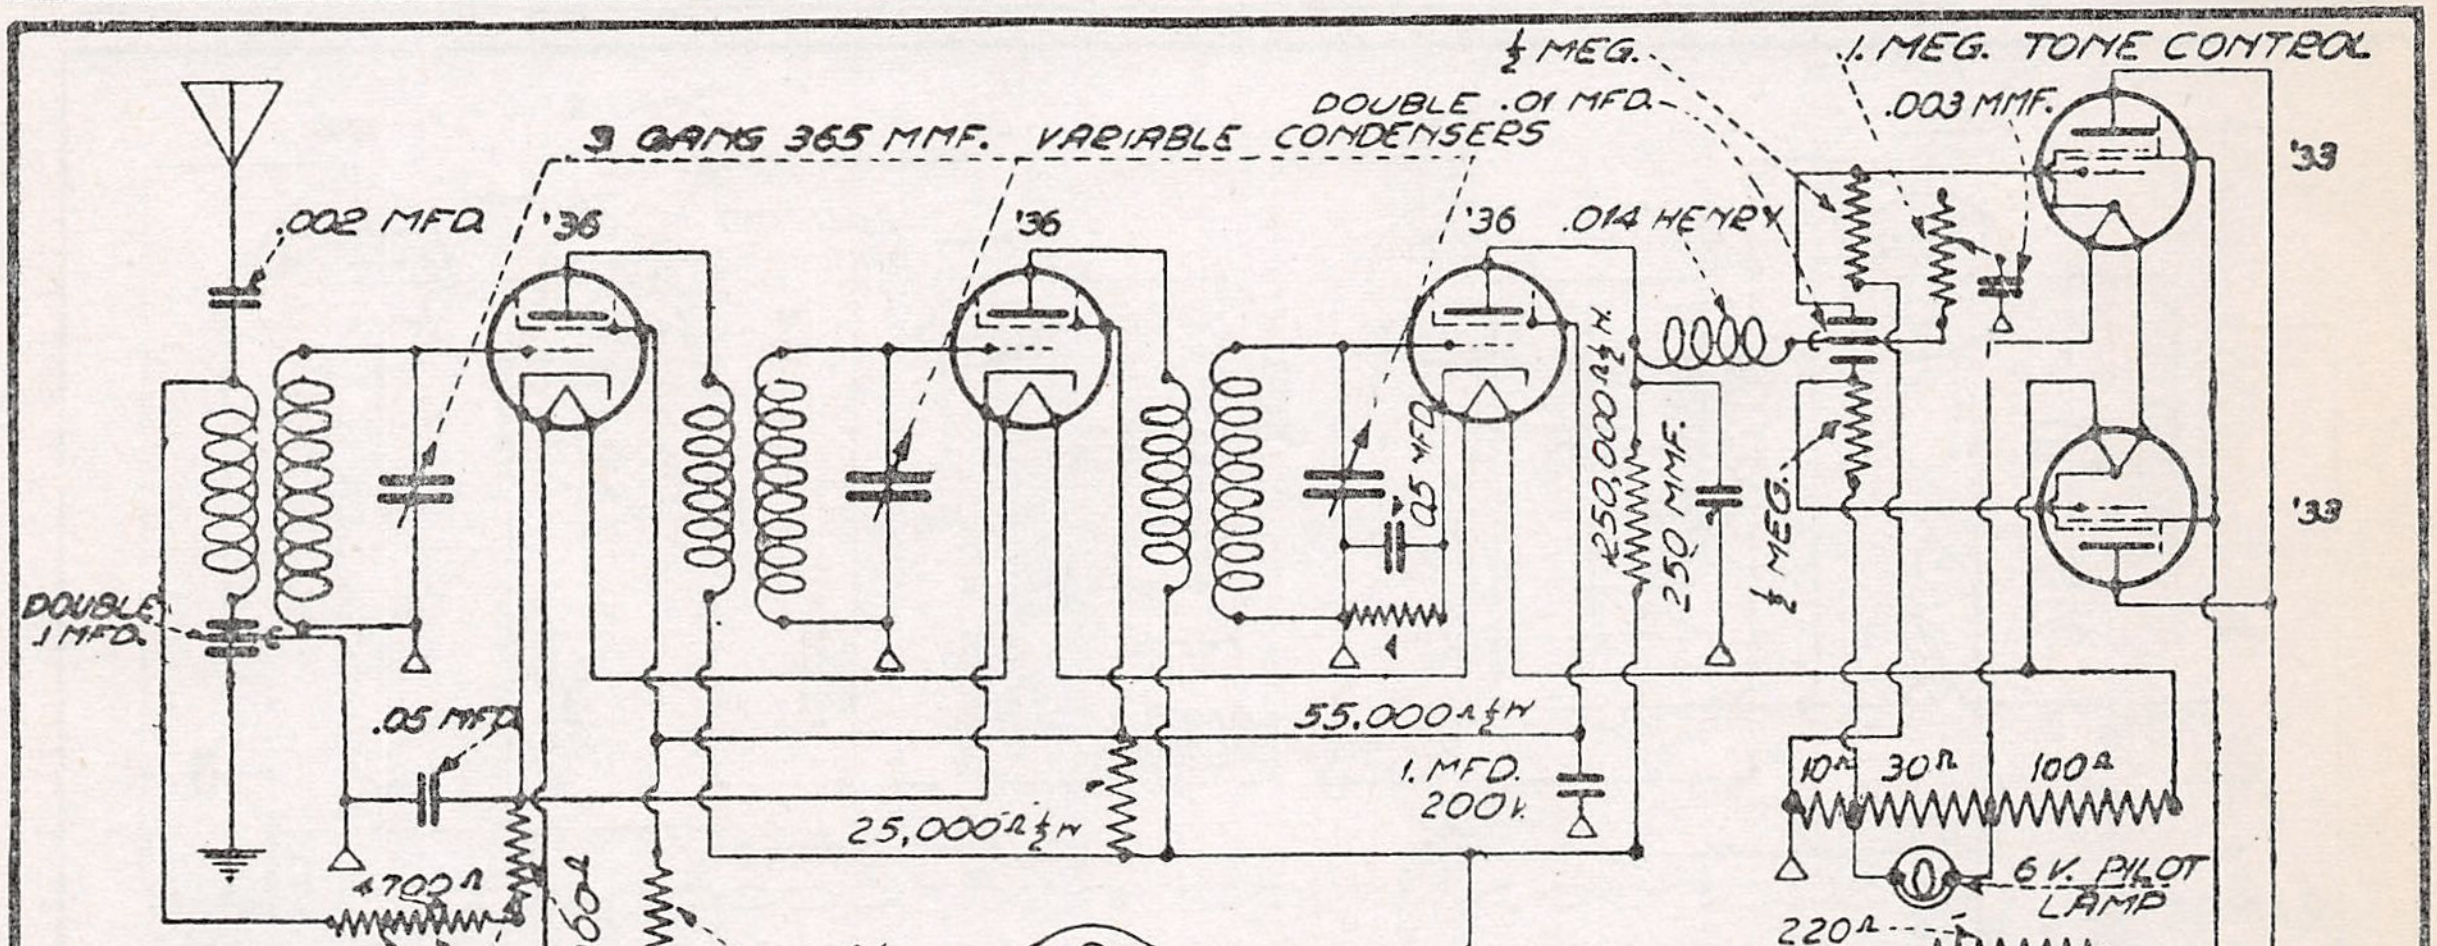
½ MEG.
.1 MEG. TONE CONTROL
DOUBLE .01 MFD.
.003 MMF.
3 GANG 365 MMF. VARIABLE CONDENSERS
.002 MFD.
'36
'36
'36
.014 HENRY
'33
'33
DOUBLE .1 MFD.
.05 MFD.
.05 MFD.
250,000 Ω
250 MMF.
½ MEG.
55,000 Ω ½ W
1. MFD. 200 V.
25,000 Ω ½ W
10 Ω
30 Ω
100 Ω
6 V. PILOT LAMP
4700 Ω
300 Ω
25000 Ω ½ W
220 Ω
TOP
.004 MFD.
VOLUME CONTROL 5000 Ω
SET + SPKR. CONNECTION
TO D.C. 110 V. SUPPLY
ON-OFF SWITCH
250 Ω
PLUG PRONGS POINTING UPWARD
70 Ω
FIELD
V. COIL
DYNAMIC SPEAKER
.25 MFD 400 V.
365 Ω FOR 220 V. D.C. OPERATION
2. MFD. 160 V.
DESIGN MG 1931
DRAWN 1931
PART NO. S 7056

MODEL D.C. 532-3
CIRCUIT DIAGRAM

MODEL AC 535-6
MODEL AC 547
Schematic

DEWALD RADIO

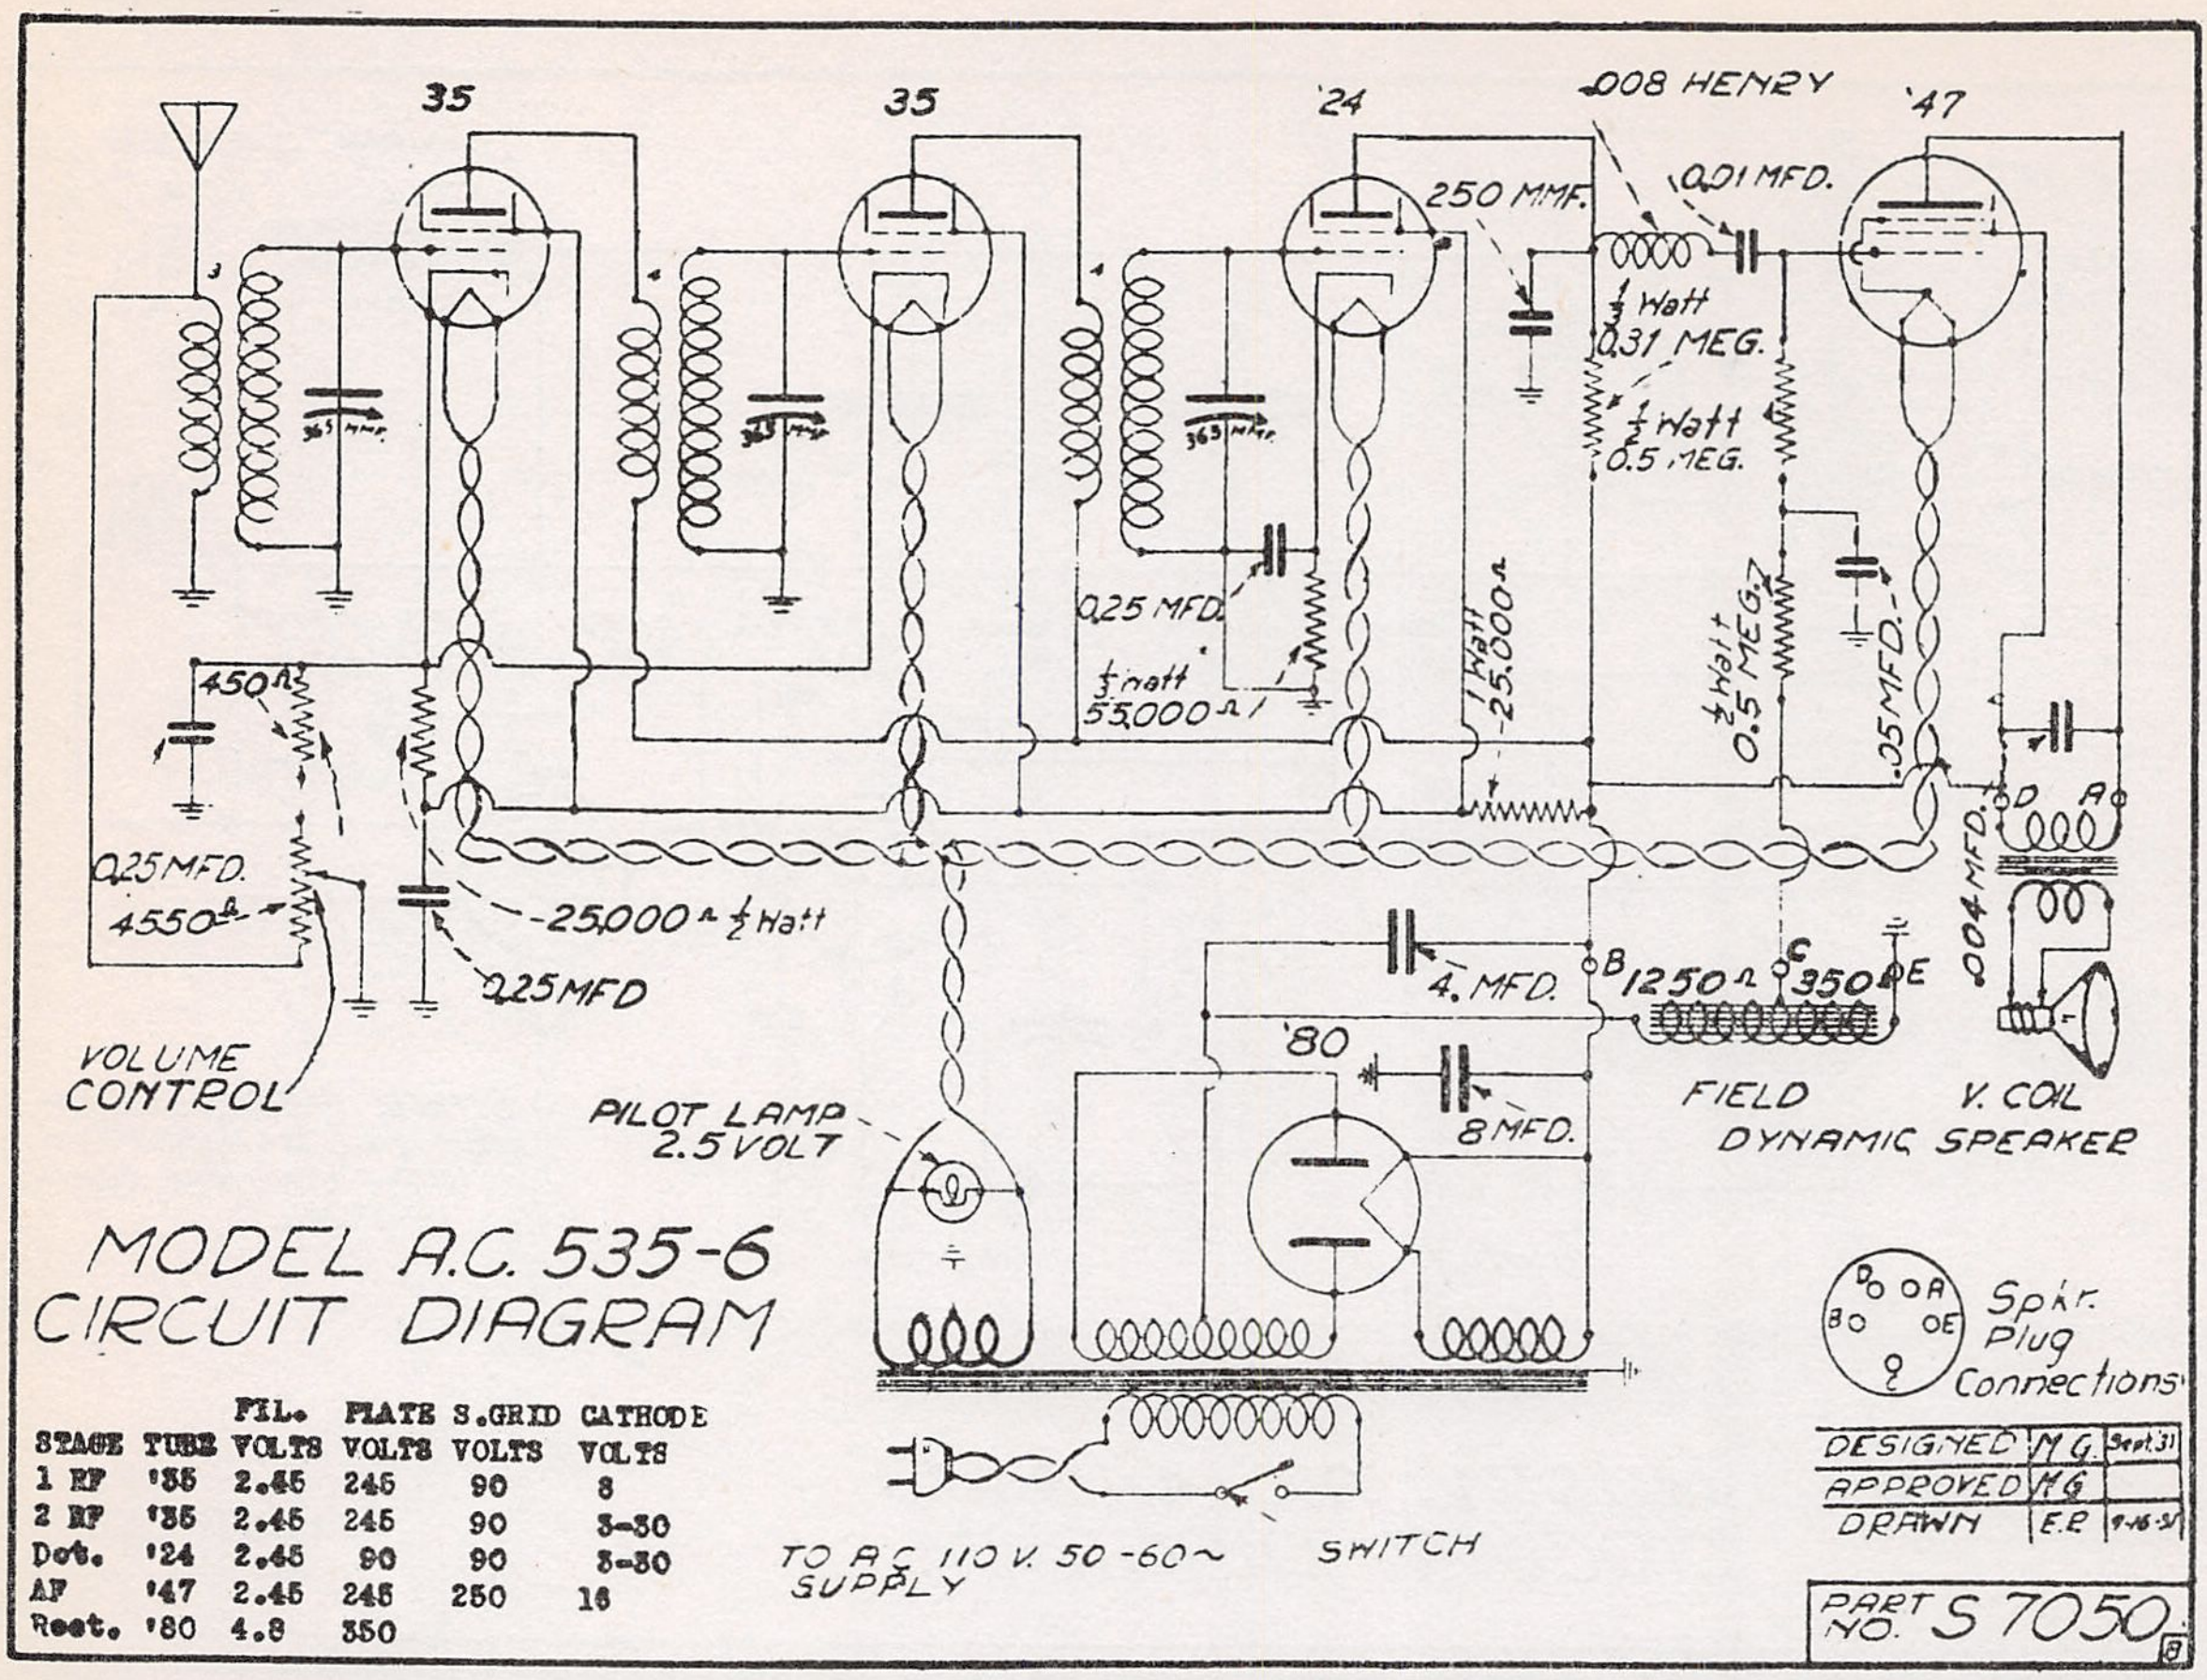
35
35
24
.008 HENRY
'47
250 MMF.
0.01 MFD.
½ Watt
0.31 MEG.
½ Watt
0.5 MEG.
363 MMF.
0.25 MFD.
½ Watt
55,000 Ω
1 Watt
25,000 Ω
½ Watt
0.5 MEG.
.05 MFD.
.004 MFD.
D
A
450 Ω
0.25 MFD.
4550 Ω
25,000 Ω ½ Watt
0.25 MFD
VOLUME CONTROL
4. MFD.
B
1250 Ω
C
350 Ω
E
'80
8 MFD.
FIELD
V. COIL
DYNAMIC SPEAKER
PILOT LAMP 2.5 VOLT
Spkr. Plug Connections
D
A
B
E
TO A.C. 110 V. 50-60~ SUPPLY
SWITCH
DESIGNED M.G. Sept. 31
APPROVED M.G.
DRAWN E.R. 9-16-31
PART NO. S 7050

MODEL A.C. 535-6
CIRCUIT DIAGRAM

STAGE	TUBE	FIL. VOLTS	PLATE VOLTS	S.GRID VOLTS	CATHODE VOLTS
1 RF	'35	2.45	245	90	8
2 RF	'35	2.45	245	90	3-30
Det.	'24	2.45	90	90	3-30
AF	'47	2.45	245	250	16
Rect.	'80	4.8	350		

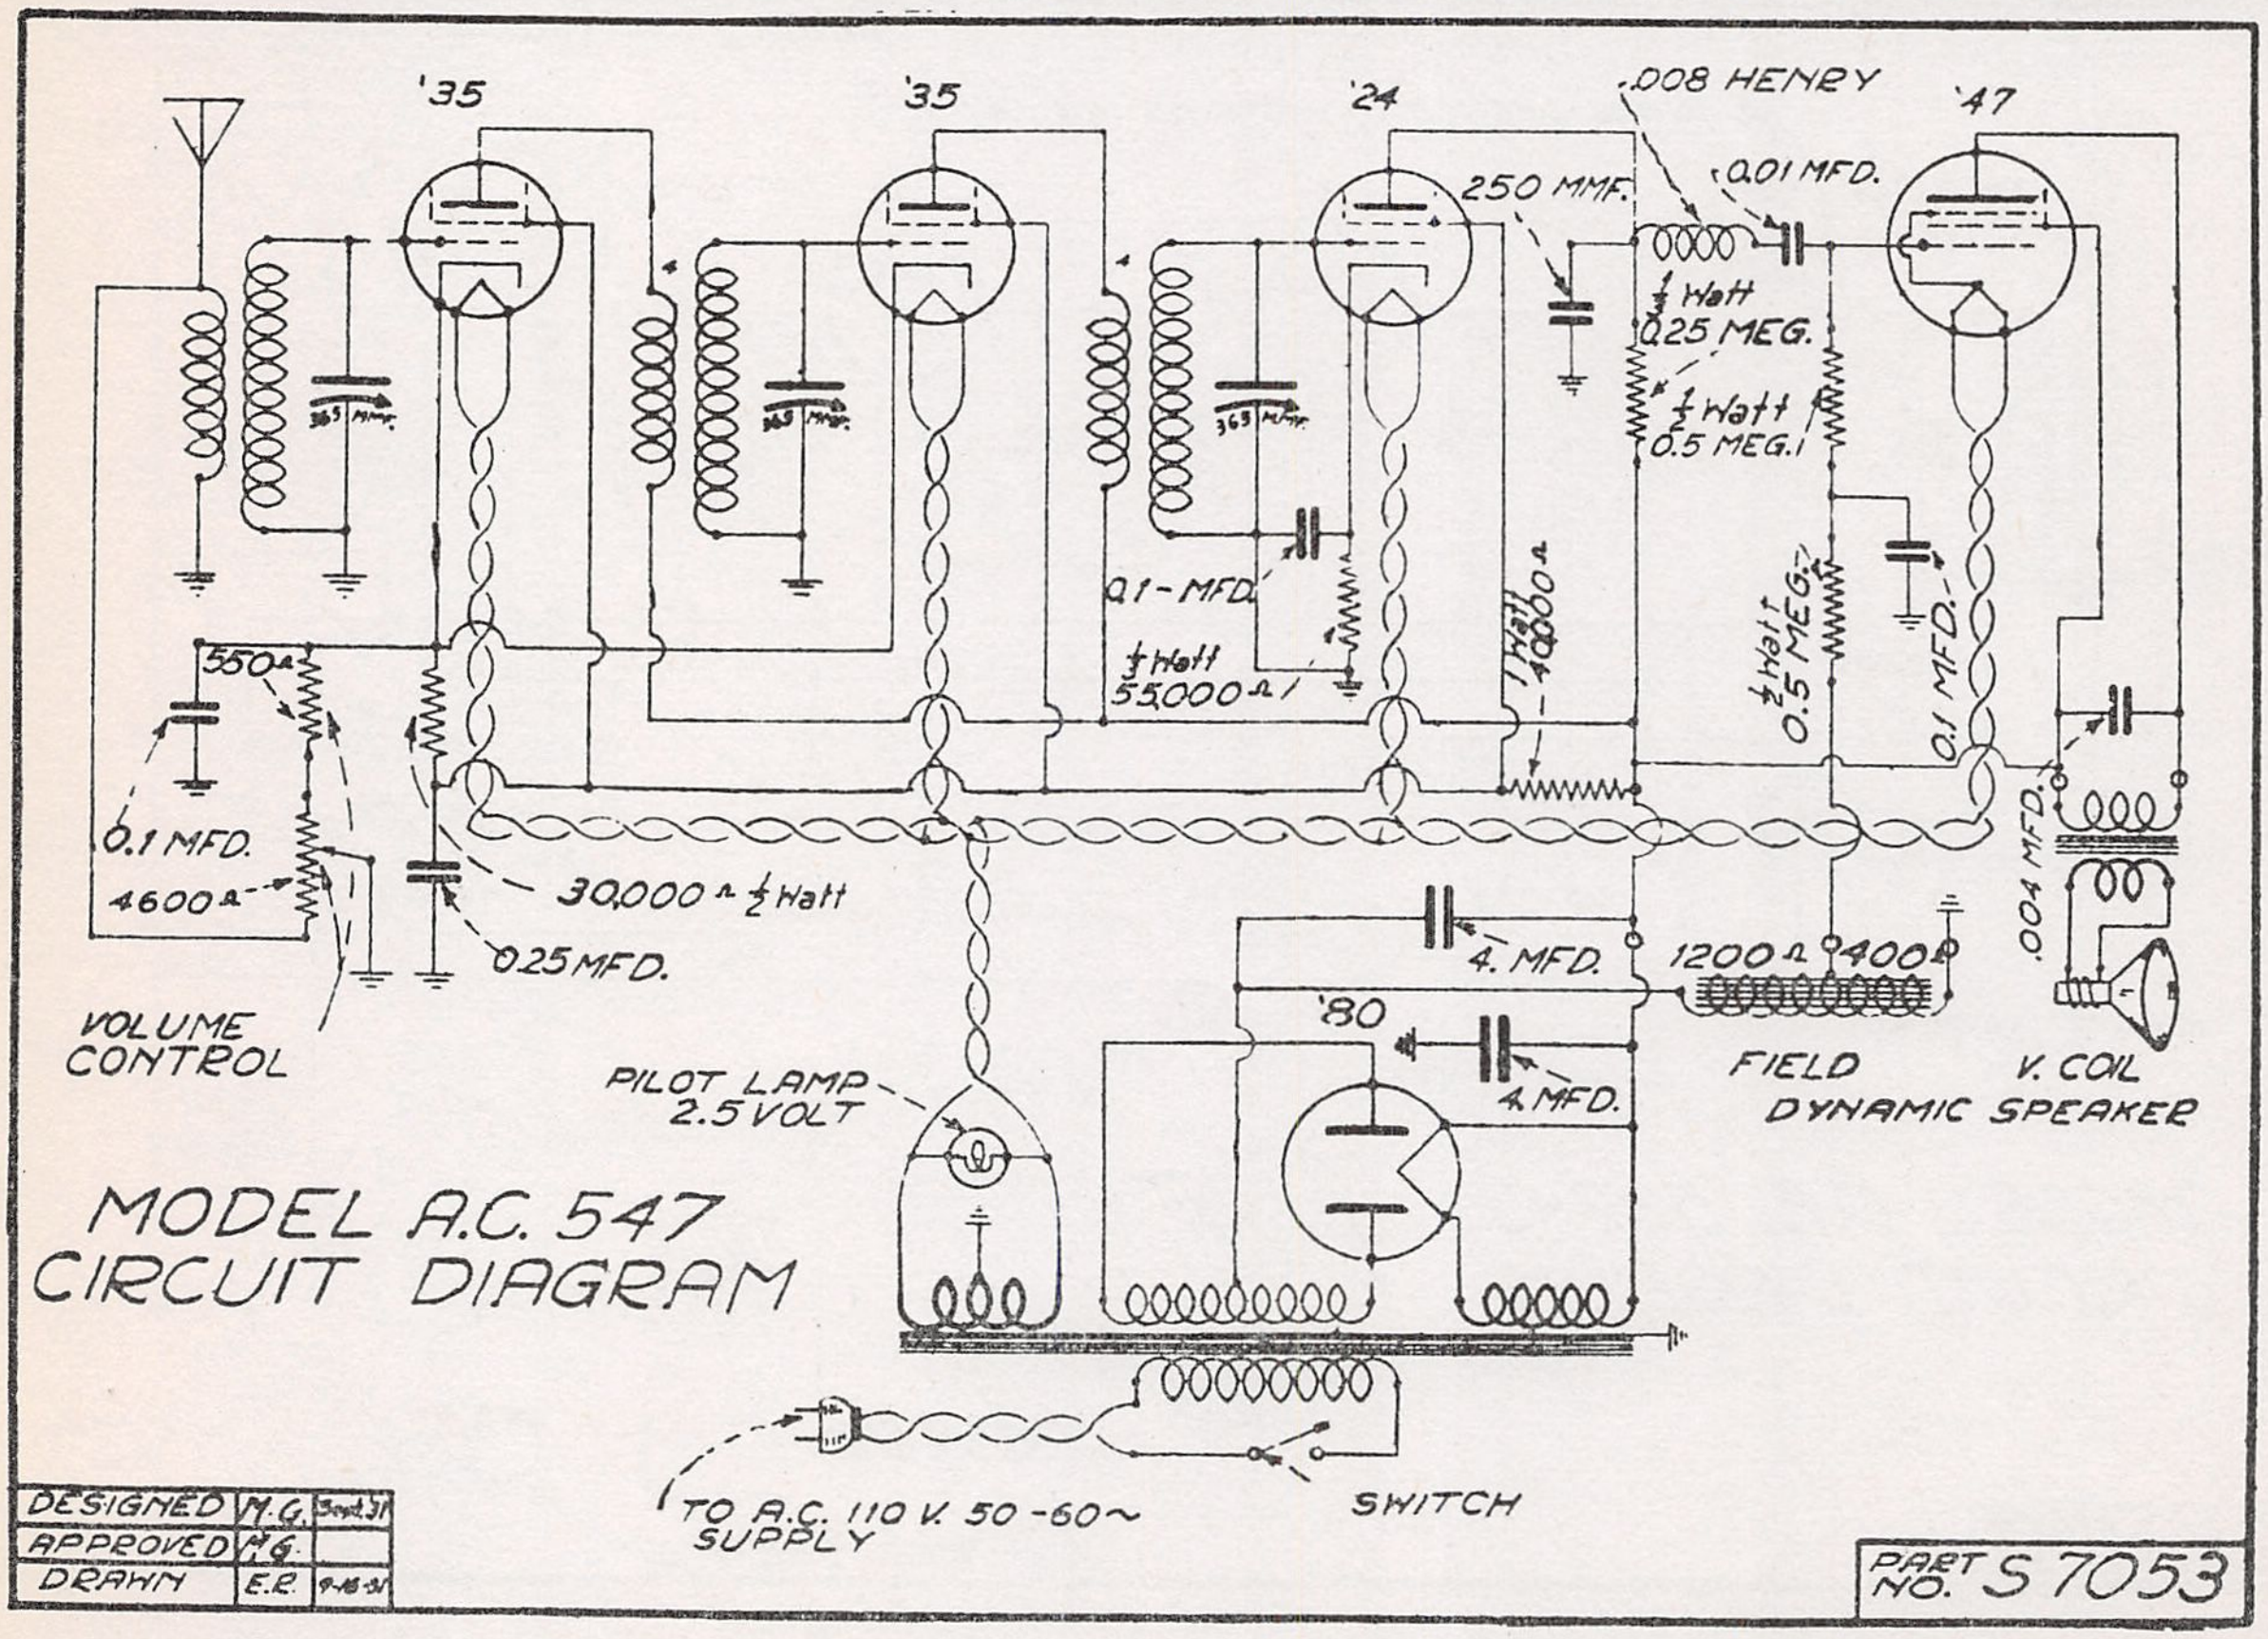
'35
'35
'24
.008 HENRY
'47
250 MMF.
0.01 MFD.
½ Watt
0.25 MEG.
½ Watt
0.5 MEG.
363 MMF.
0.1 MFD.
½ Watt
55,000 Ω
1 Watt
40,000 Ω
½ Watt
0.5 MEG.
0.1 MFD.
.004 MFD.
550 Ω
0.1 MFD.
4600 Ω
30,000 Ω ½ Watt
0.25 MFD.
VOLUME CONTROL
4. MFD.
1200 Ω
400 Ω
'80
4 MFD.
FIELD
V. COIL
DYNAMIC SPEAKER
PILOT LAMP 2.5 VOLT
TO A.C. 110 V. 50-60~ SUPPLY
SWITCH
DESIGNED M.G. Sept. 31
APPROVED M.G.
DRAWN E.R. 9-16-31
PART NO. S 7053

MODEL A.C. 547
CIRCUIT DIAGRAM

DEWALD RADIO

MODEL AC 547-A
MODEL DC 637-8

Schematic

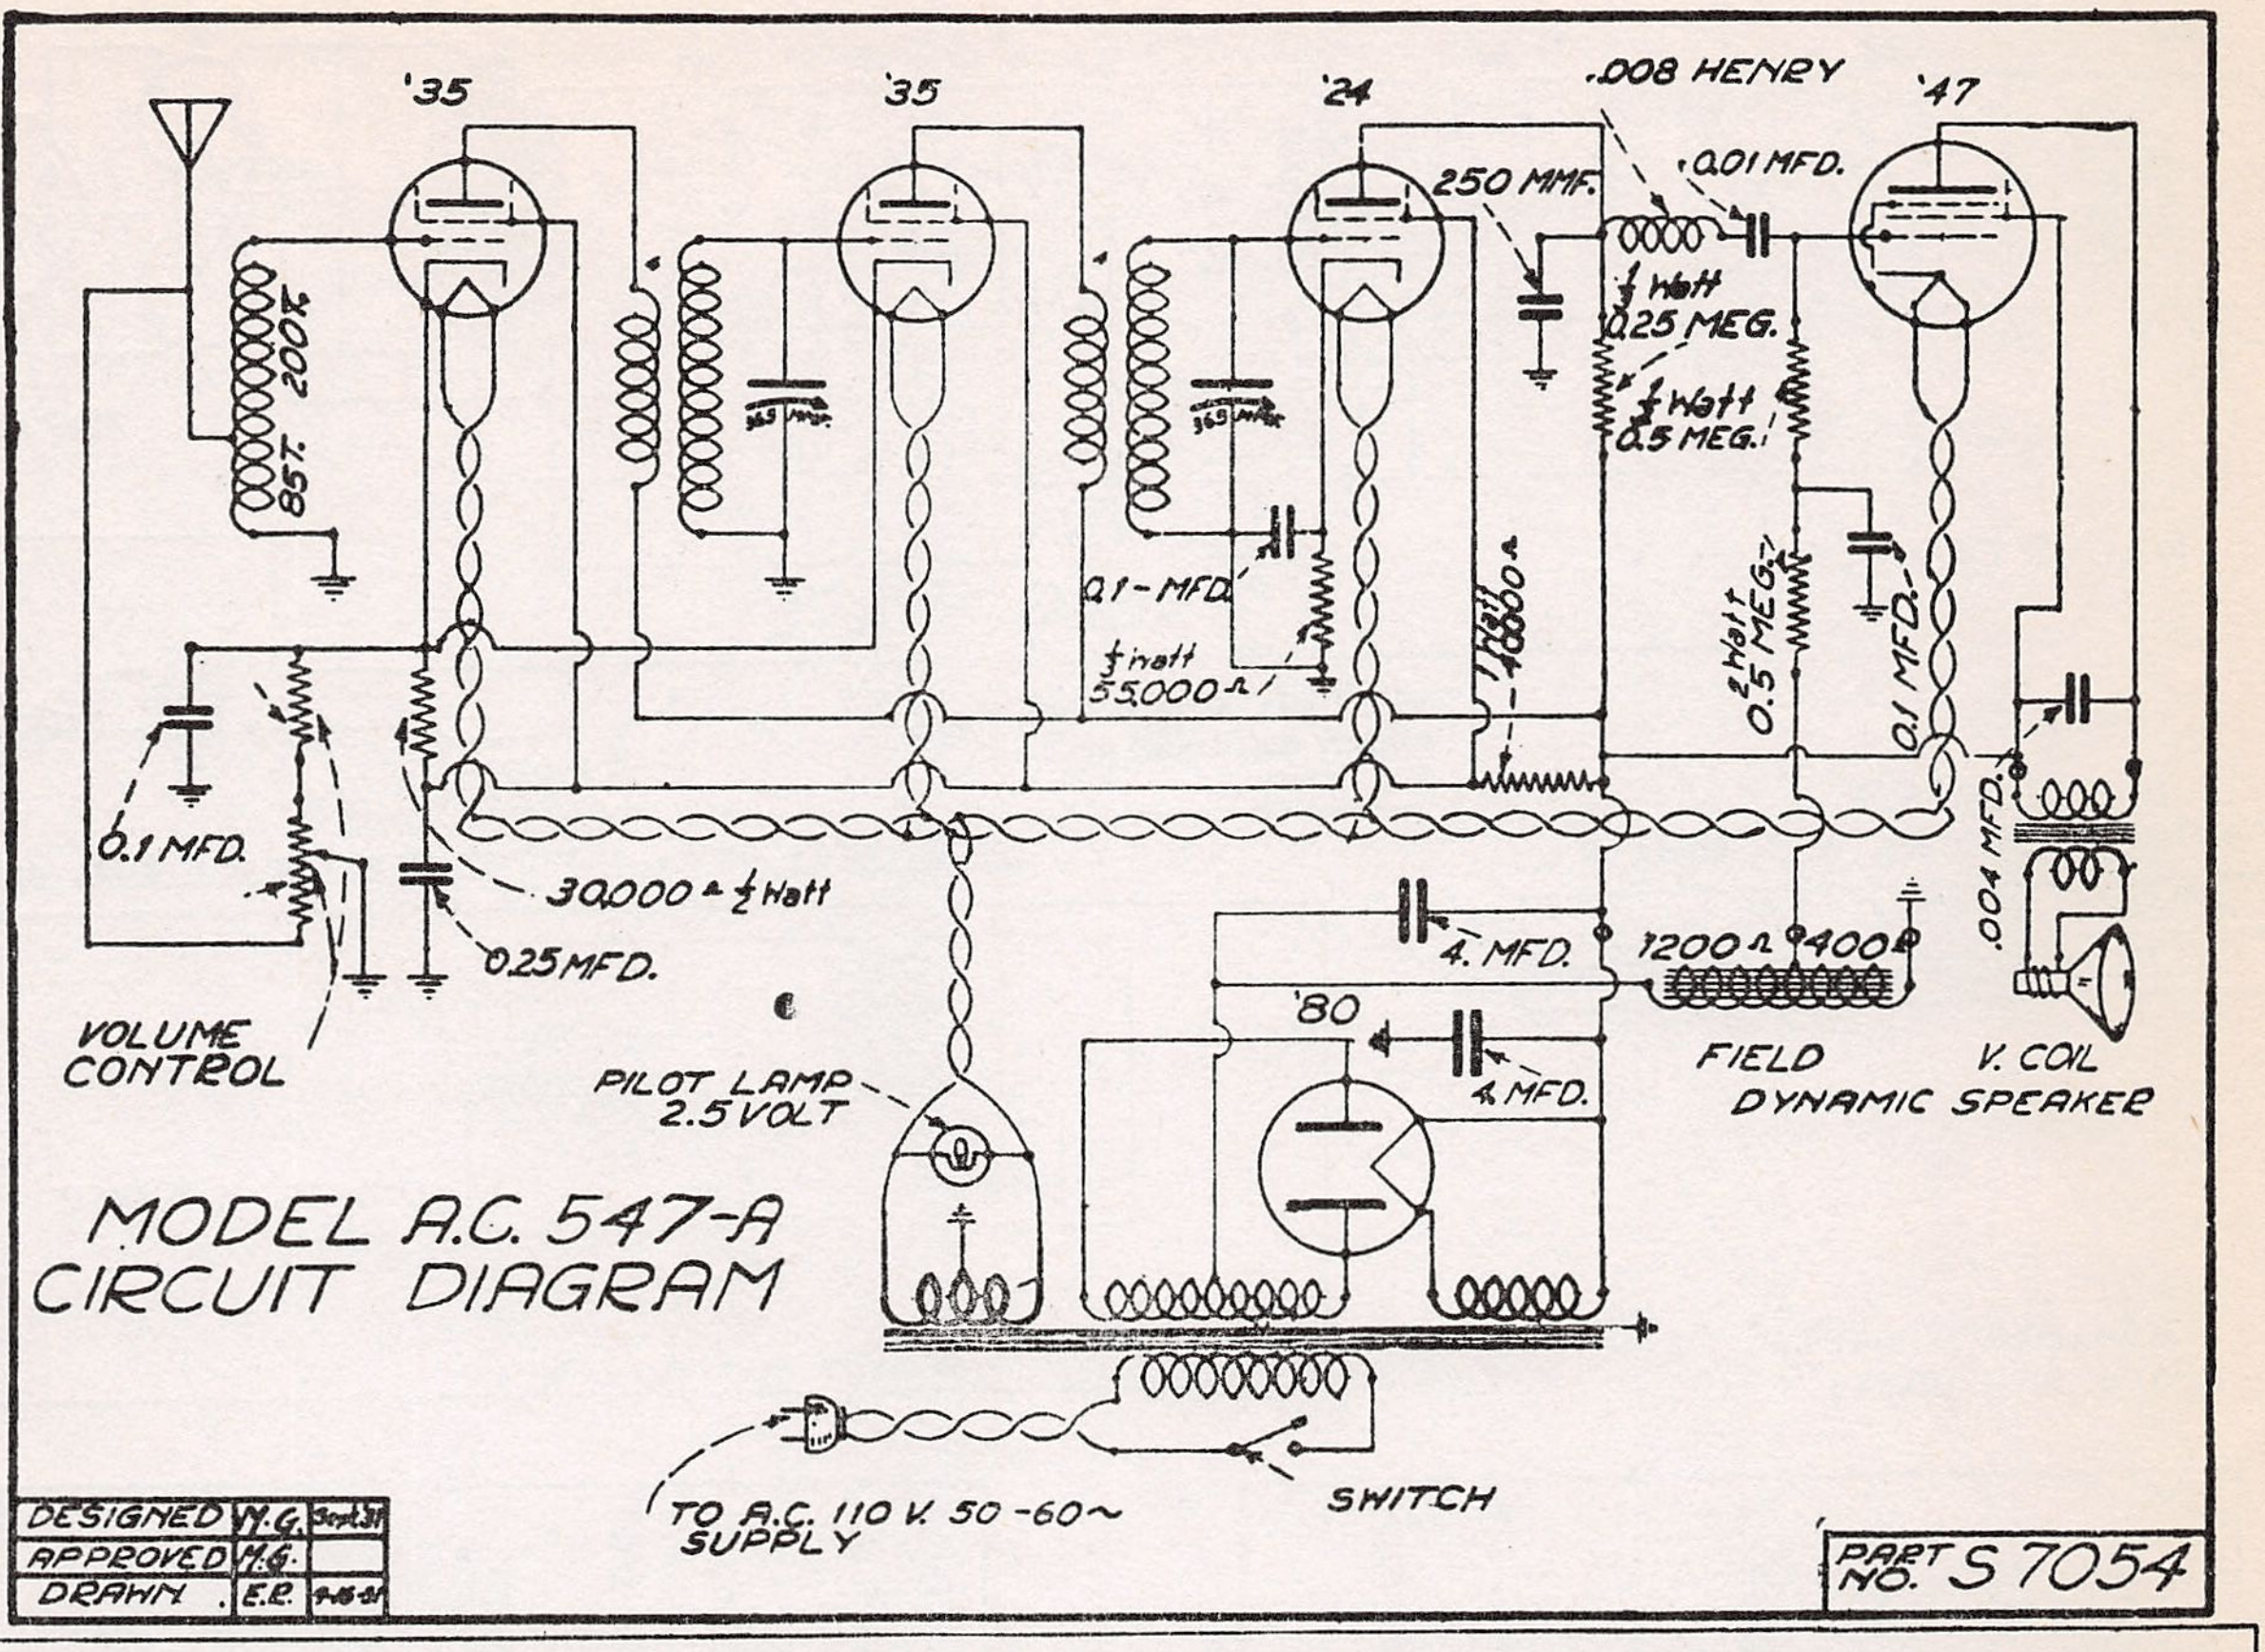
'35
'35
'24
.008 HENRY
'47
250 MMF.
0.01 MFD.
85T. 200K
365 MMF.
365 MMF.
¼ Watt
0.25 MEG.
¼ Watt
0.5 MEG.
0.1-MFD.
¼ watt
55000 Ω
1 Watt
40000 Ω
½ Watt
0.5 MEG.
0.1 MFD.
0.1 MFD.
30,000 Ω ½ Watt
0.25 MFD.
.004 MFD.
4. MFD.
1200 Ω
400 Ω
'80
4. MFD.
FIELD
V. COIL
DYNAMIC SPEAKER
VOLUME CONTROL
PILOT LAMP 2.5 VOLT
MODEL A.C. 547-A
CIRCUIT DIAGRAM
TO A.C. 110 V. 50-60~ SUPPLY
SWITCH
DESIGNED M.G. Sept. 31
APPROVED M.G.
DRAWN E.P. 9-16-31
PART NO. S 7054

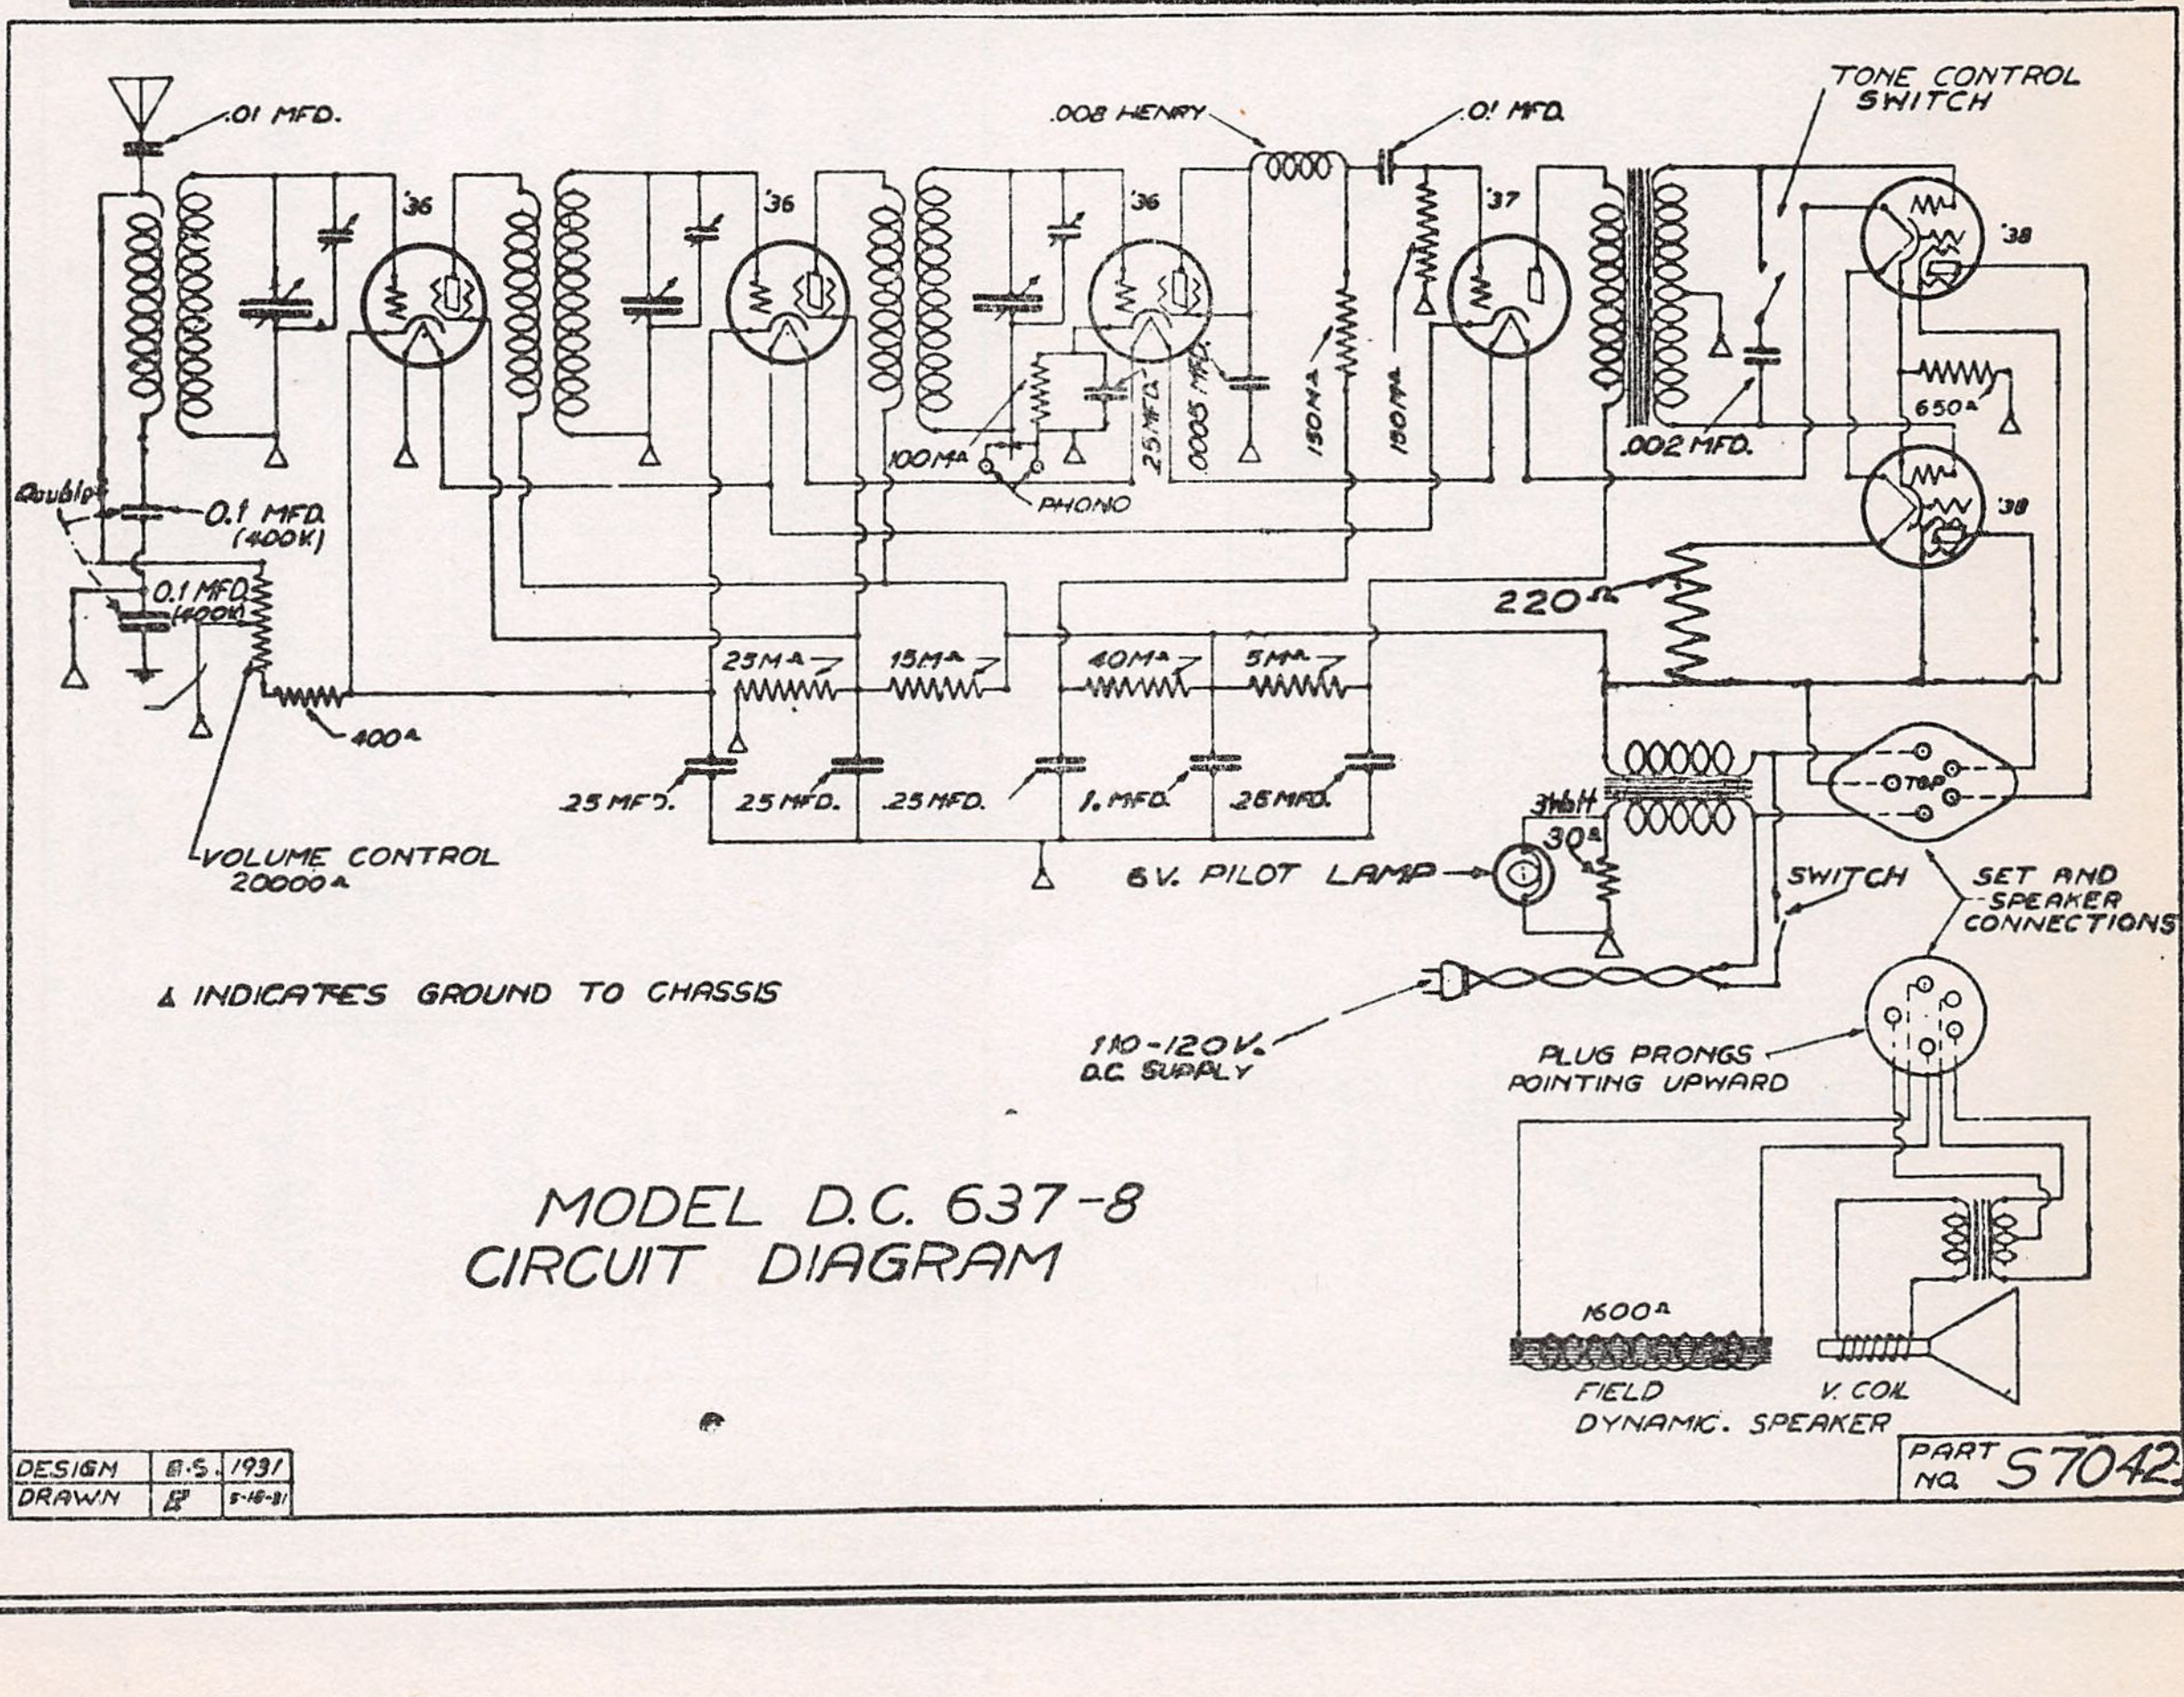
.01 MFD.
.008 HENRY
.01 MFD.
TONE CONTROL SWITCH
'36
'36
'36
'37
'38
'38
650 Ω
.002 MFD.
100 MΩ
PHONO
25 MFD.
.0005 MFD.
150 MΩ
150 MΩ
Double
0.1 MFD. (400V)
0.1 MFD. (400V)
220 Ω
25 MΩ
15 MΩ
40 MΩ
5 MΩ
400 Ω
.25 MFD.
.25 MFD.
.25 MFD.
1. MFD.
.25 MFD.
VOLUME CONTROL 20000 Ω
3 Watt
30 Ω
6 V. PILOT LAMP
TOP
SWITCH
SET AND SPEAKER CONNECTIONS
▲ INDICATES GROUND TO CHASSIS
110-120 V. D.C. SUPPLY
PLUG PRONGS POINTING UPWARD
1600 Ω
FIELD
V. COIL
DYNAMIC. SPEAKER
MODEL D.C. 637-8
CIRCUIT DIAGRAM
DESIGN B.S. 1931
DRAWN 5-18-31
PART NO. S 7042

MODEL DC 632

Schematic

DEWALD RADIO

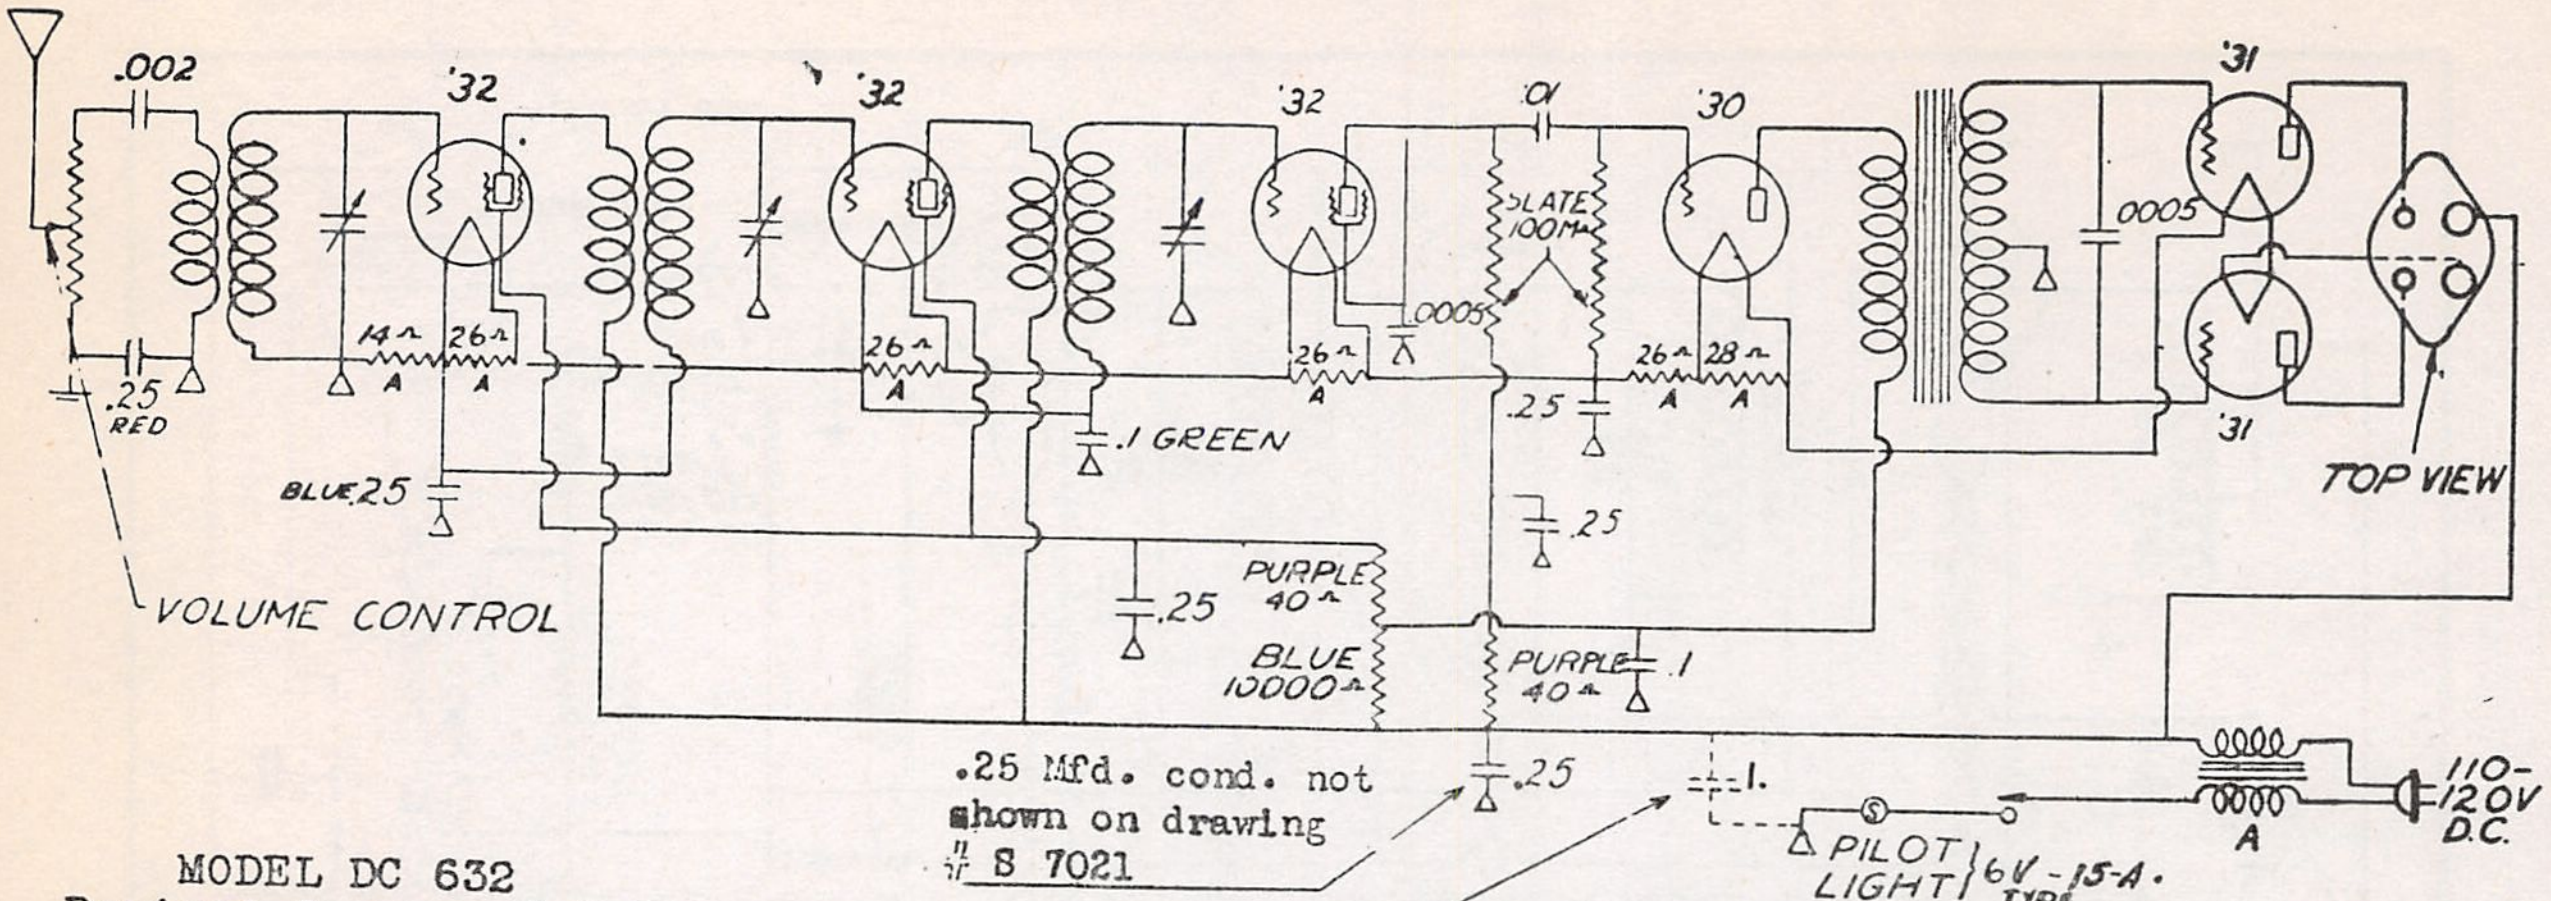
.002
'32
'32
'32
.01
'30
'31
'31
14Ω
26Ω
26Ω
26Ω
26Ω
28Ω
A
.25 RED
BLUE .25
.1 GREEN
SLATE 100M
.0005
.0005
.25
.25
.25
PURPLE 40Ω
BLUE 10000Ω
PURPLE 40Ω
.1
VOLUME CONTROL
TOP VIEW
PILOT LIGHT 6V-.15-A. TYPE
1.
110-120V D.C.

.25 Mfd. cond. not shown on drawing # S 7021

1. mfd. cond. shown on drawing # S 7021 only.

MODEL DC 632
Revised draw ng # S 7021-A

ADDED CHOKE	Ⓐ	11-4-30	B.S.
ALTERATIONS	SYM	DATE	APPR'L

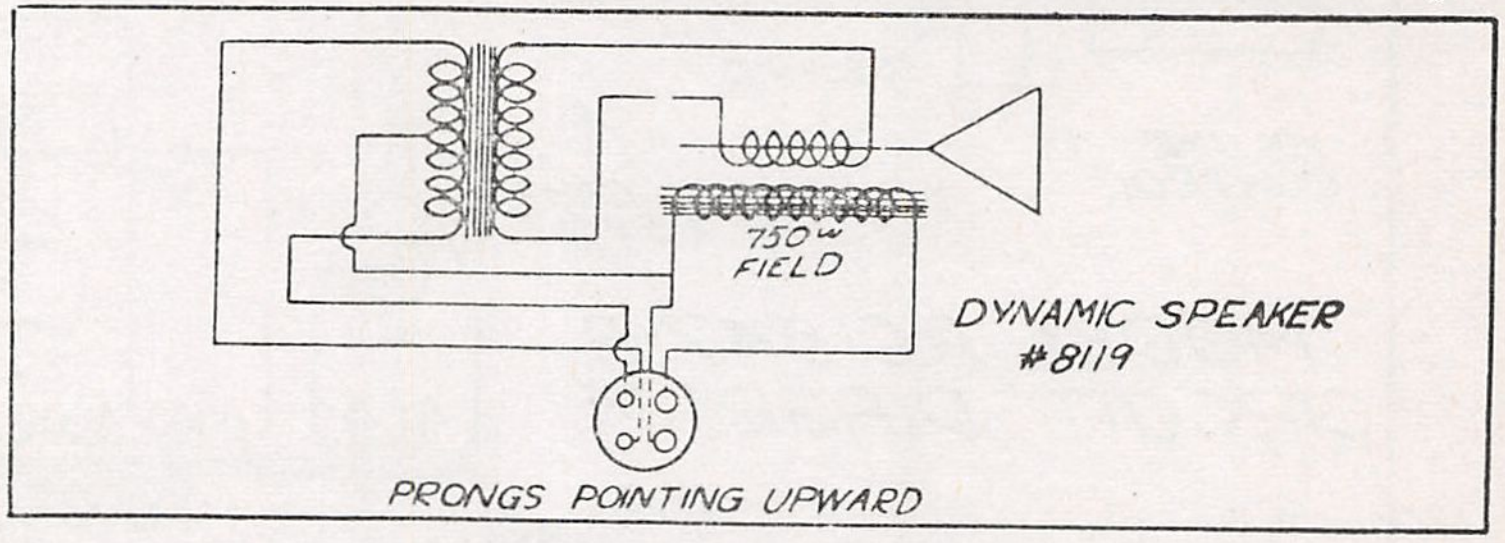
750Ω FIELD
DYNAMIC SPEAKER #8119
PRONGS POINTING UPWARD

NOTE.
Resistors marked "A"
are one unit.

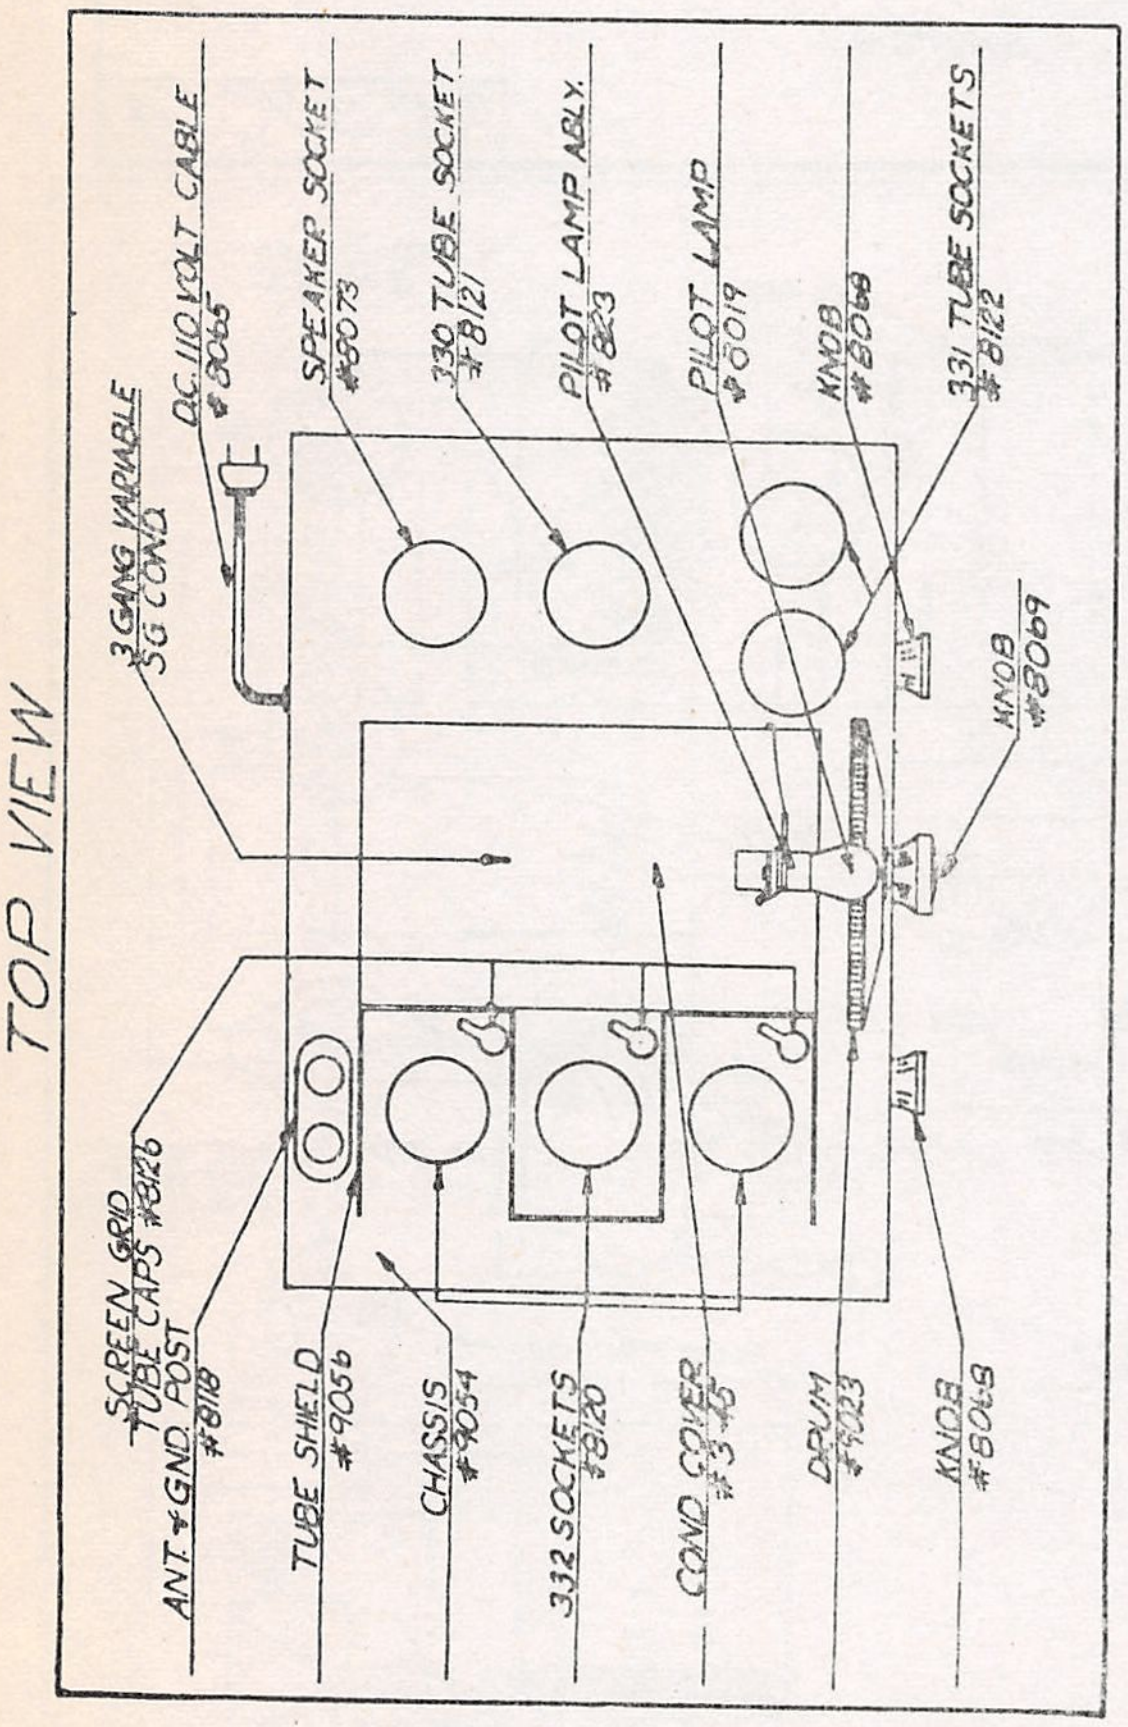
TOP VIEW
3 GANG VARIABLE SG COND
DC 110 VOLT CABLE #8065
SPEAKER SOCKET #8073
330 TUBE SOCKET #8121
PILOT LAMP ABLY. #823
PILOT LAMP #8019
KNOB #8068
331 TUBE SOCKETS #8122
KNOB #8069
SCREEN GRID TUBE CAPS #8126
ANT. + GND. POST #8118
TUBE SHIELD #9056
CHASSIS #9054
332 SOCKETS #8120
COND COVER #3-75
DRUM #9023
KNOB #8068

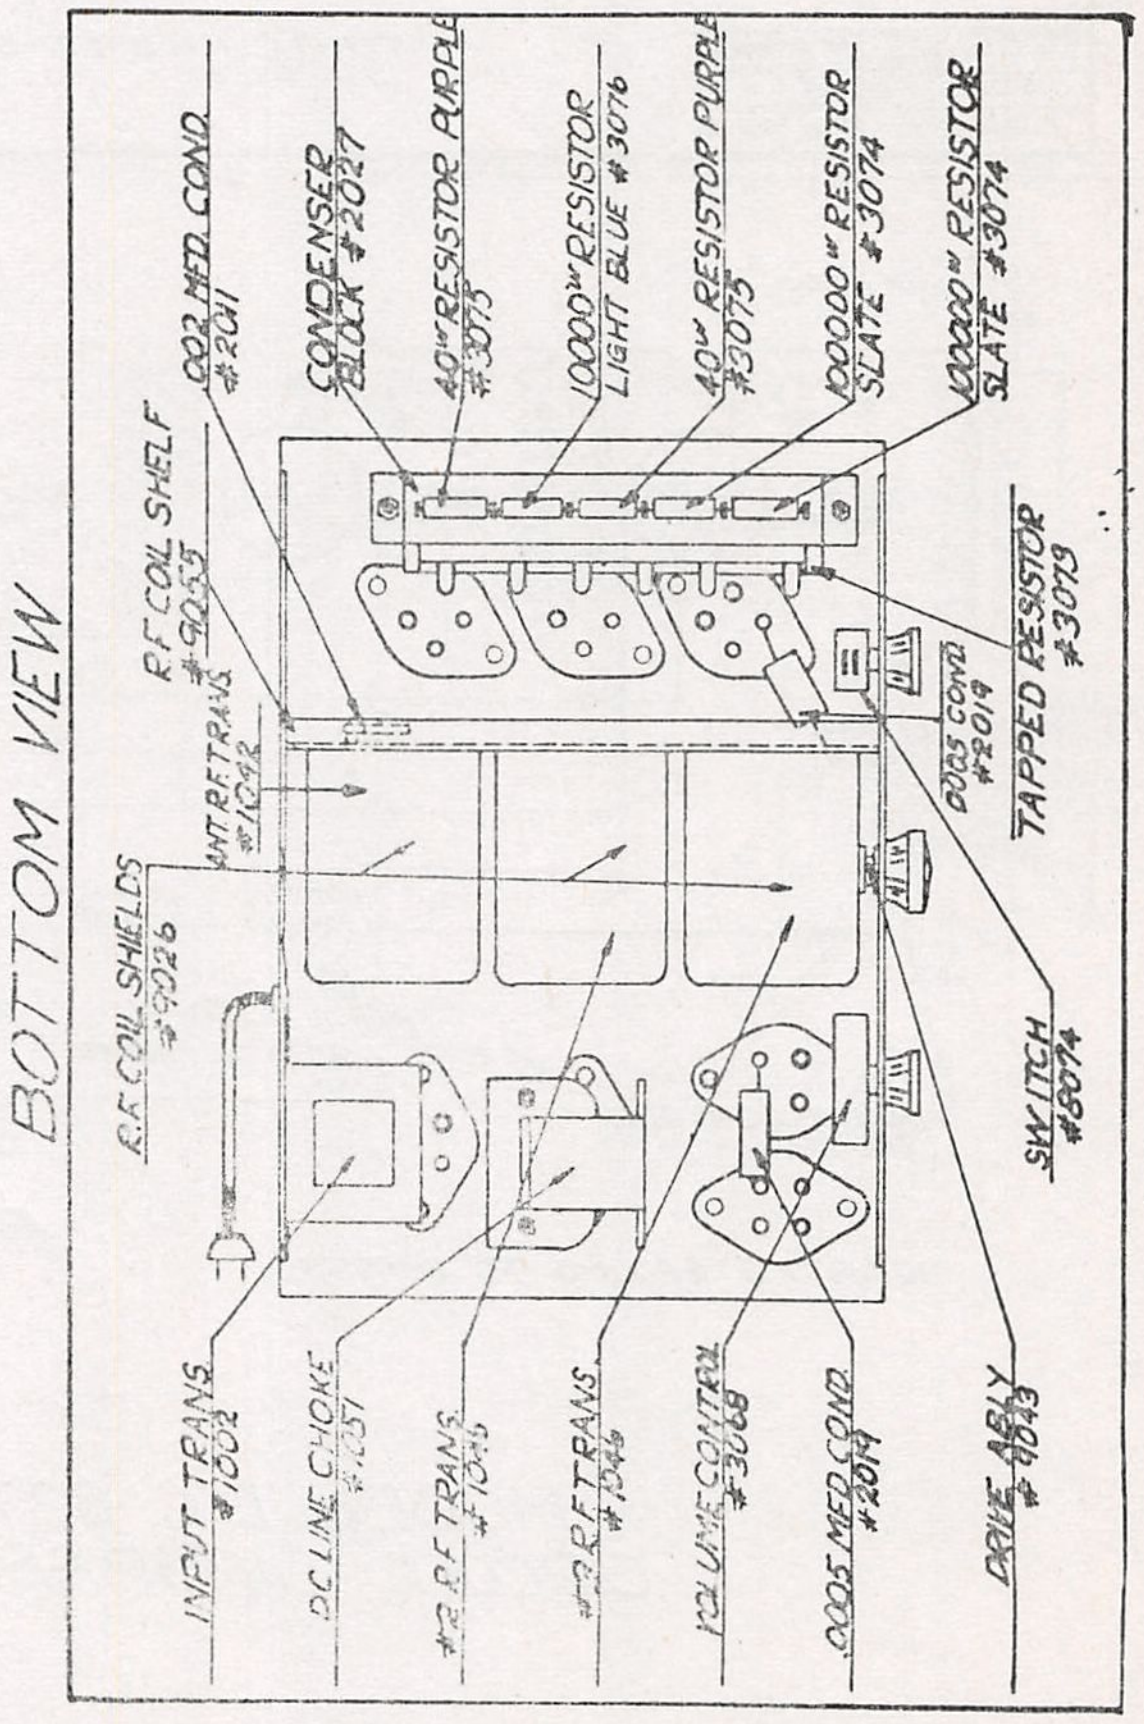
BOTTOM VIEW
R.F. COIL SHIELDS #9026
ANT R.F. TRANS #1042
R.F. COIL SHELF #9055
.002 MED. COND #2011
CONDENSER BLOCK #2027
40Ω RESISTOR PURPLE #3075
10000Ω RESISTOR LIGHT BLUE #3076
40Ω RESISTOR PURPLE #3075
100000Ω RESISTOR SLATE #3074
100000Ω RESISTOR SLATE #3074
TAPPED RESISTOR #3079
.0005 COND #2019
SWITCH #8074
INPUT TRANS #1002
DC LINE CHOKE #1051
#2 R.F. TRANS #1045
#3 R.F. TRANS #1046
VOLUME CONTROL #3068
.0005 MED COND #2019
DRIVE ABLY #4043

DEWALD RADIO

MODEL AC 724
Schematic

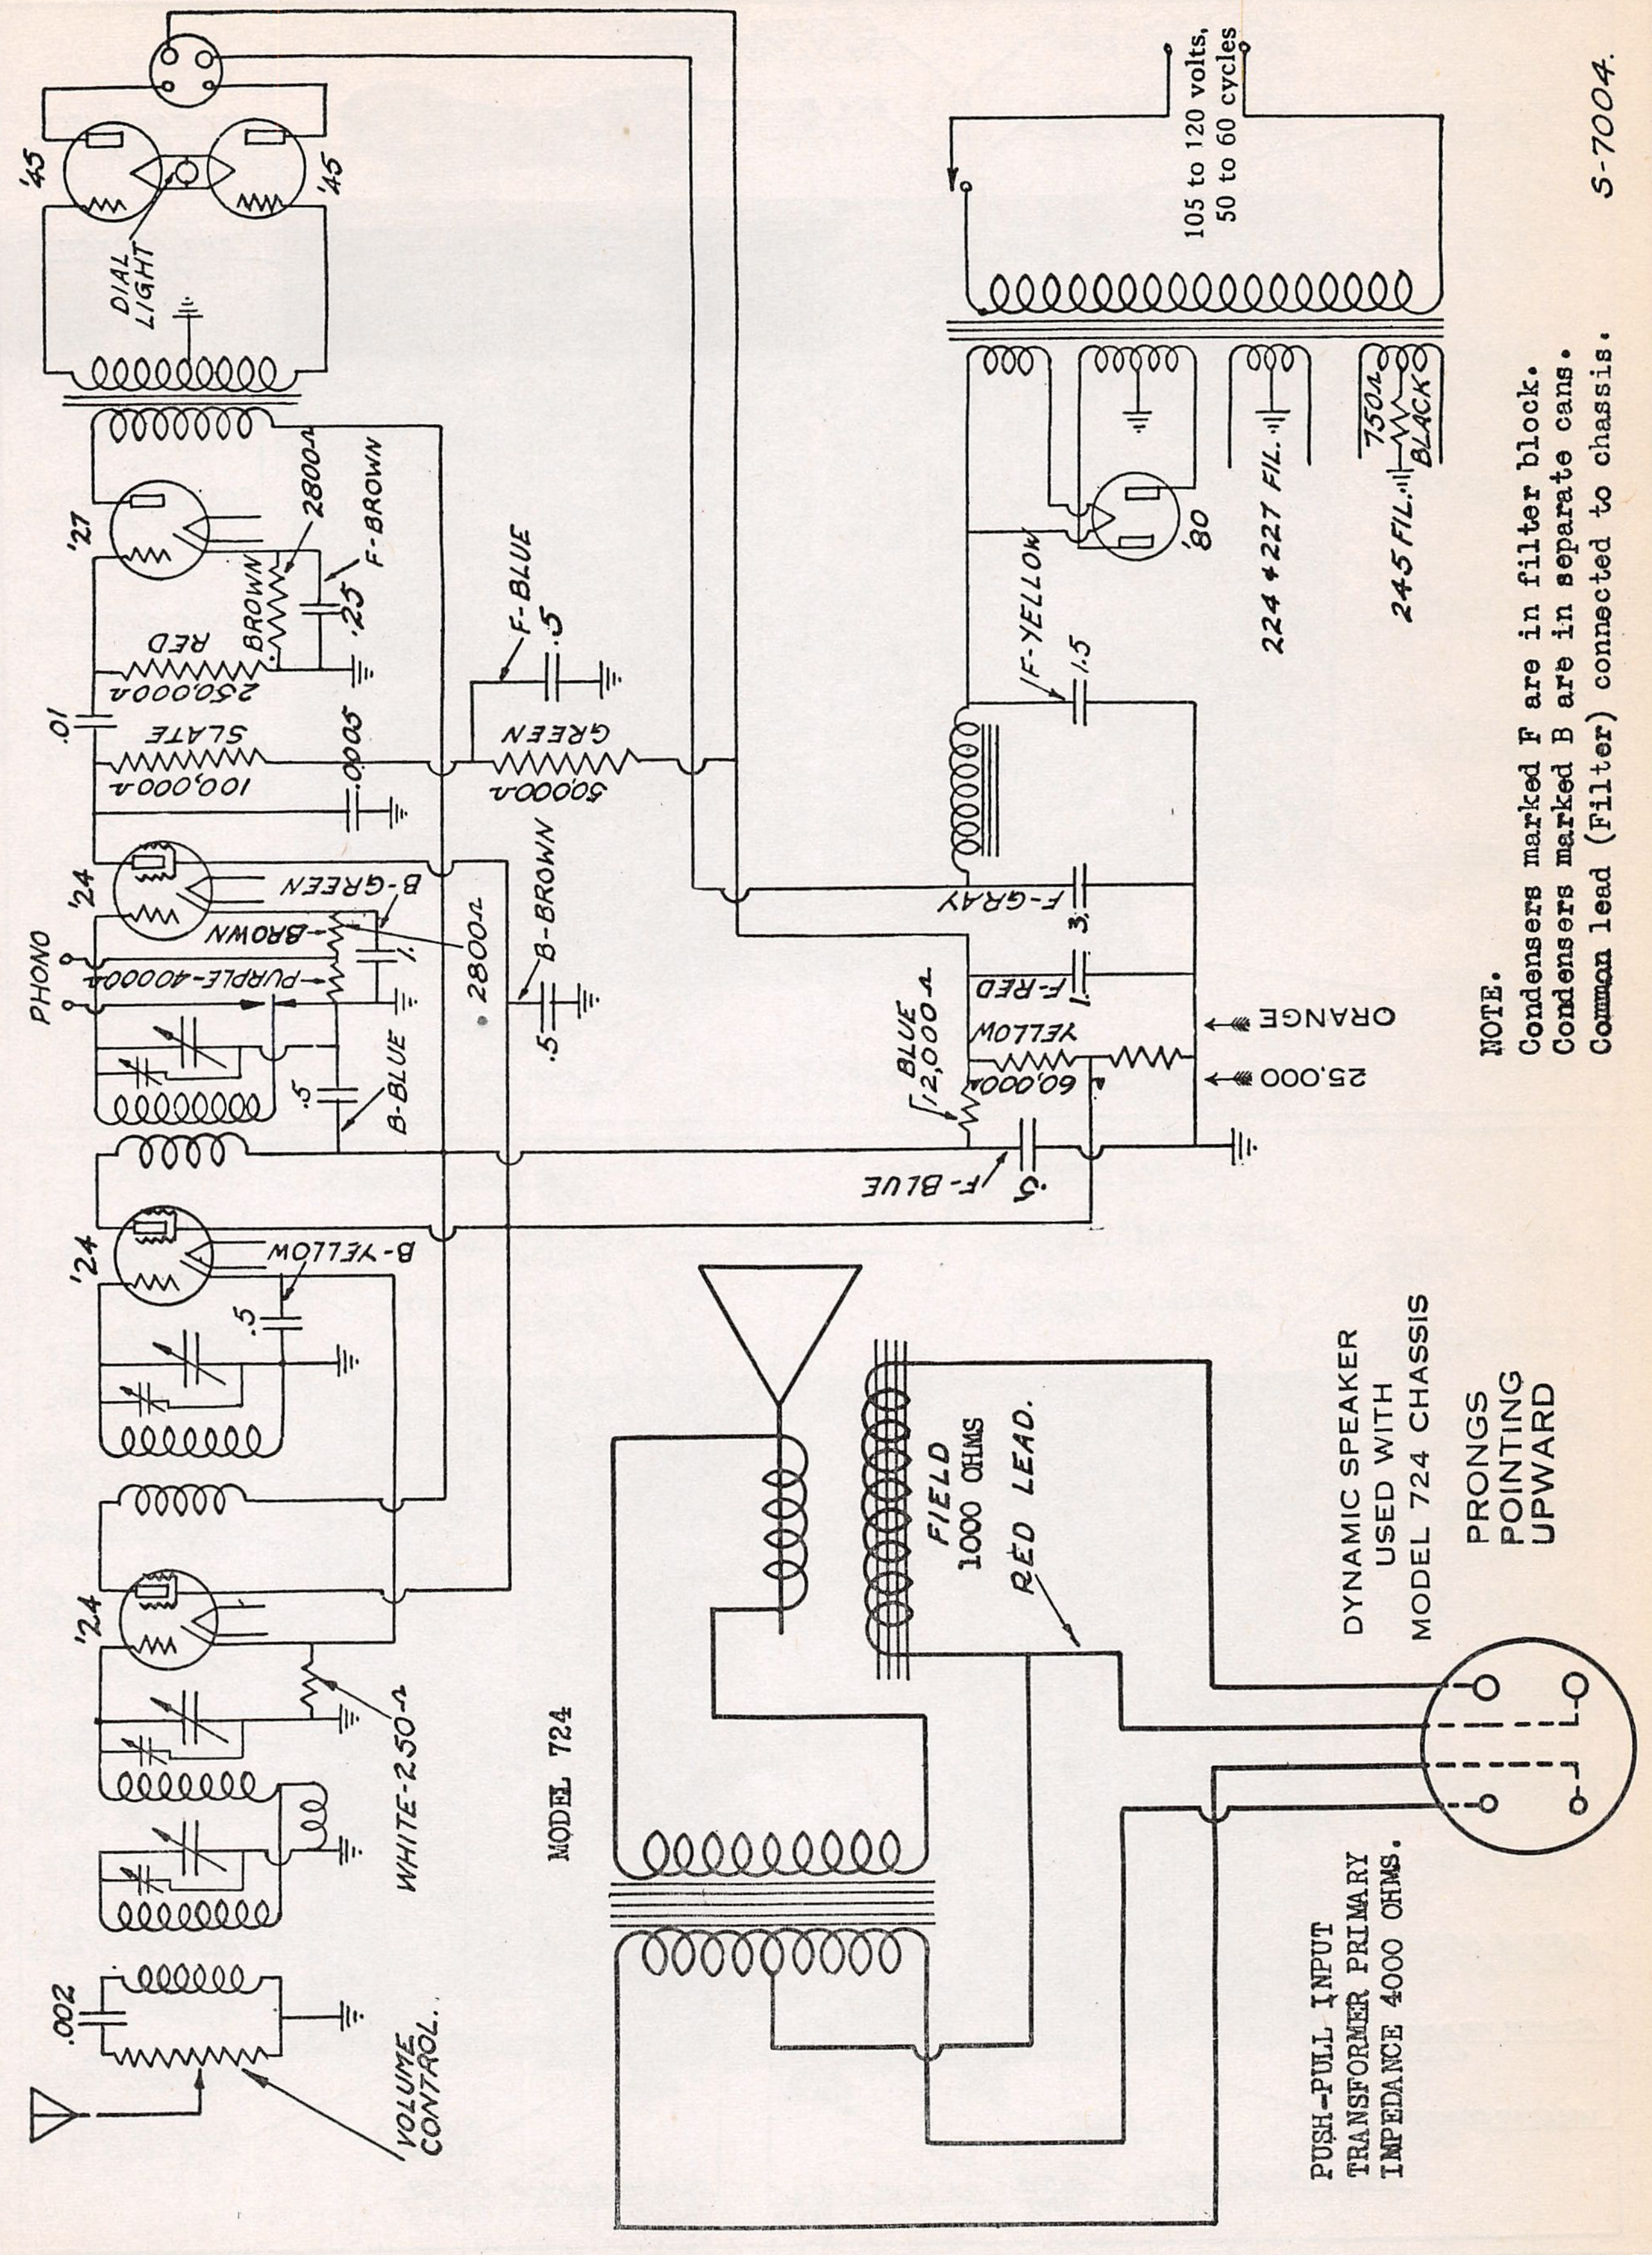
'45
'45
DIAL LIGHT
'27
2800Ω
F-BROWN
.25
BROWN
RED
250,000Ω
.01
SLATE
.0005
100,000Ω
F-BLUE
.5
GREEN
50,000Ω
'24
B-GREEN
BROWN
2800Ω
.1
PHONO
PURPLE-40000Ω
B-BROWN
.5
.5
B-BLUE
'24
B-YELLOW
.5
'24
WHITE-250Ω
.002
VOLUME CONTROL.
105 to 120 volts,
50 to 60 cycles
'80
F-YELLOW
1.5
224 + 227 FIL.
750Ω
BLACK
245 FIL.
F-GRAY
3.
F-RED
1.
BLUE
12,000Ω
YELLOW
60,000Ω
ORANGE
25,000
F-BLUE
.5
FIELD
1000 OHMS
RED LEAD.

S-7004.

MODEL 724

NOTE.
Condensers marked F are in filter block.
Condensers marked B are in separate cans.
Common lead (Filter) connected to chassis.

DYNAMIC SPEAKER
USED WITH
MODEL 724 CHASSIS

PRONGS
POINTING
UPWARD

PUSH-PULL INPUT
TRANSFORMER PRIMARY
IMPEDANCE 4000 OHMS.

MODEL AC 724

Socket Data

DEWALD RADIO

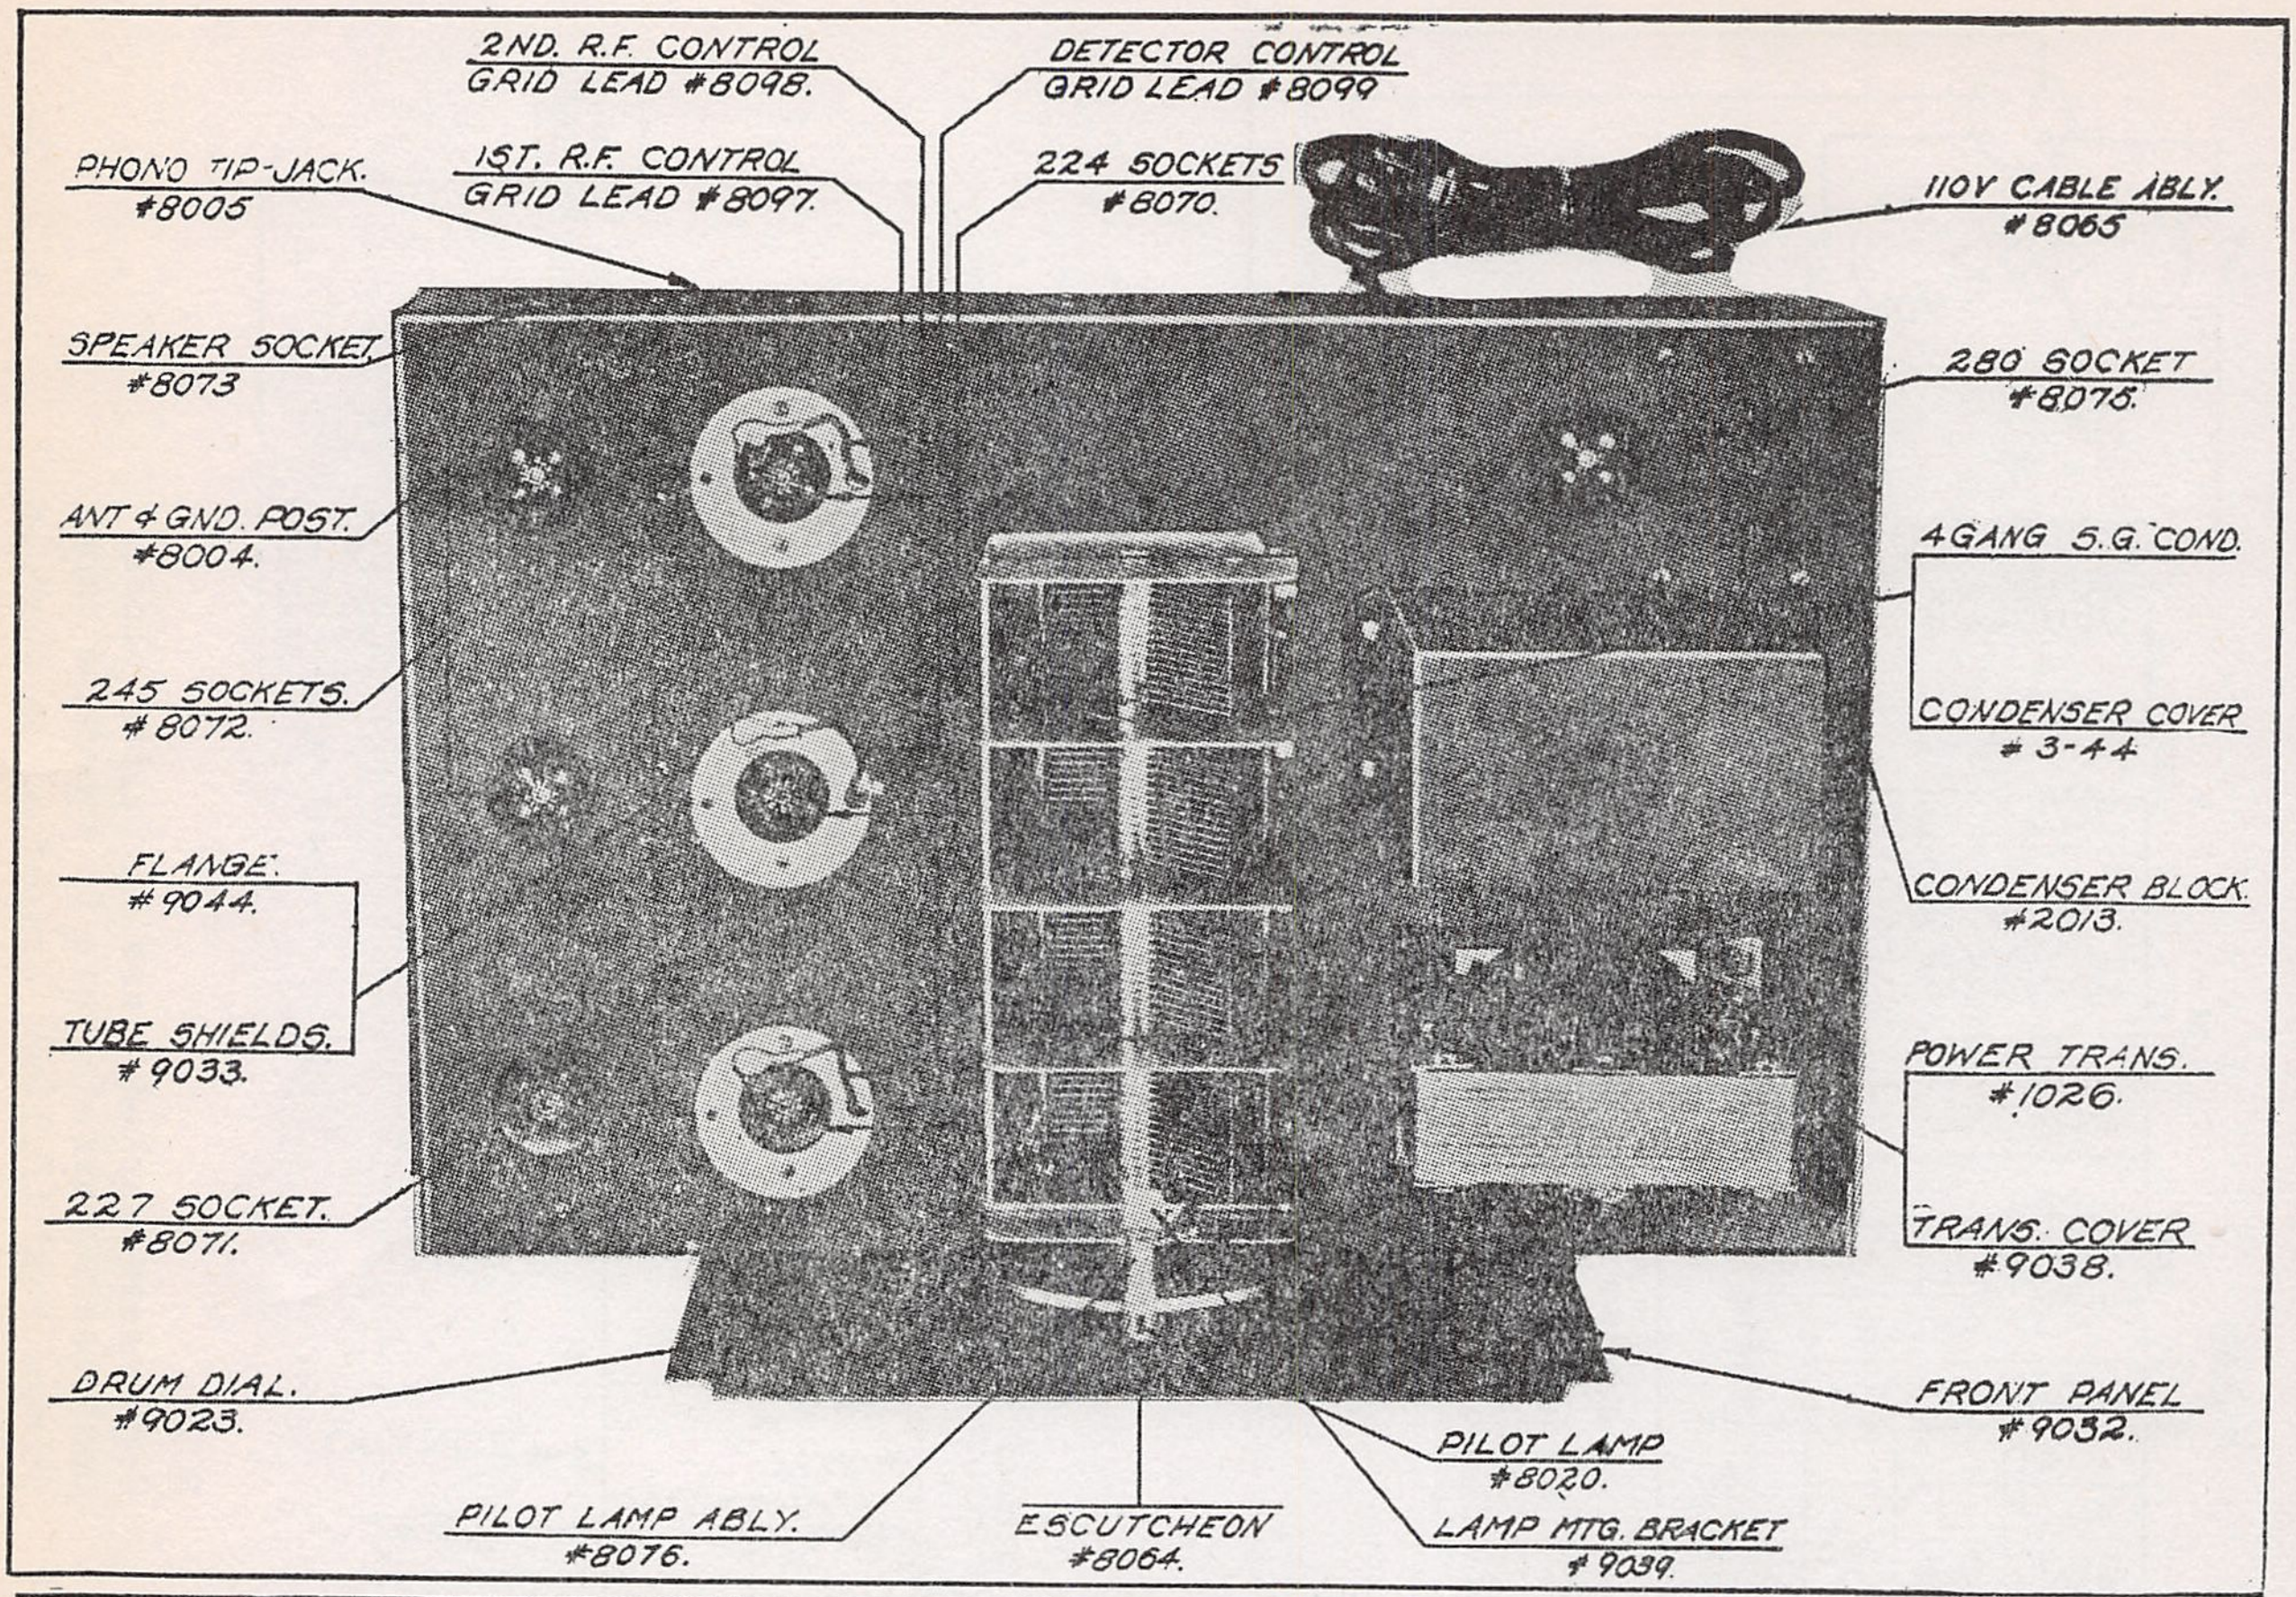
2ND. R.F. CONTROL GRID LEAD #8098.
DETECTOR CONTROL GRID LEAD #8099
PHONO TIP-JACK. #8005
1ST. R.F. CONTROL GRID LEAD #8097.
224 SOCKETS #8070.
110V CABLE ABLY. #8065
SPEAKER SOCKET #8073
280 SOCKET #8075.
ANT & GND. POST. #8004.
4 GANG S.G. COND.
245 SOCKETS. #8072.
CONDENSER COVER # 3-44
FLANGE. #9044.
CONDENSER BLOCK. #2013.
TUBE SHIELDS. #9033.
POWER TRANS. #1026.
227 SOCKET. #8071.
TRANS. COVER #9038.
DRUM DIAL. #9023.
FRONT PANEL #9032.
PILOT LAMP #8020.
PILOT LAMP ABLY. #8076.
ESCUTCHEON #8064.
LAMP MTG. BRACKET #9039.

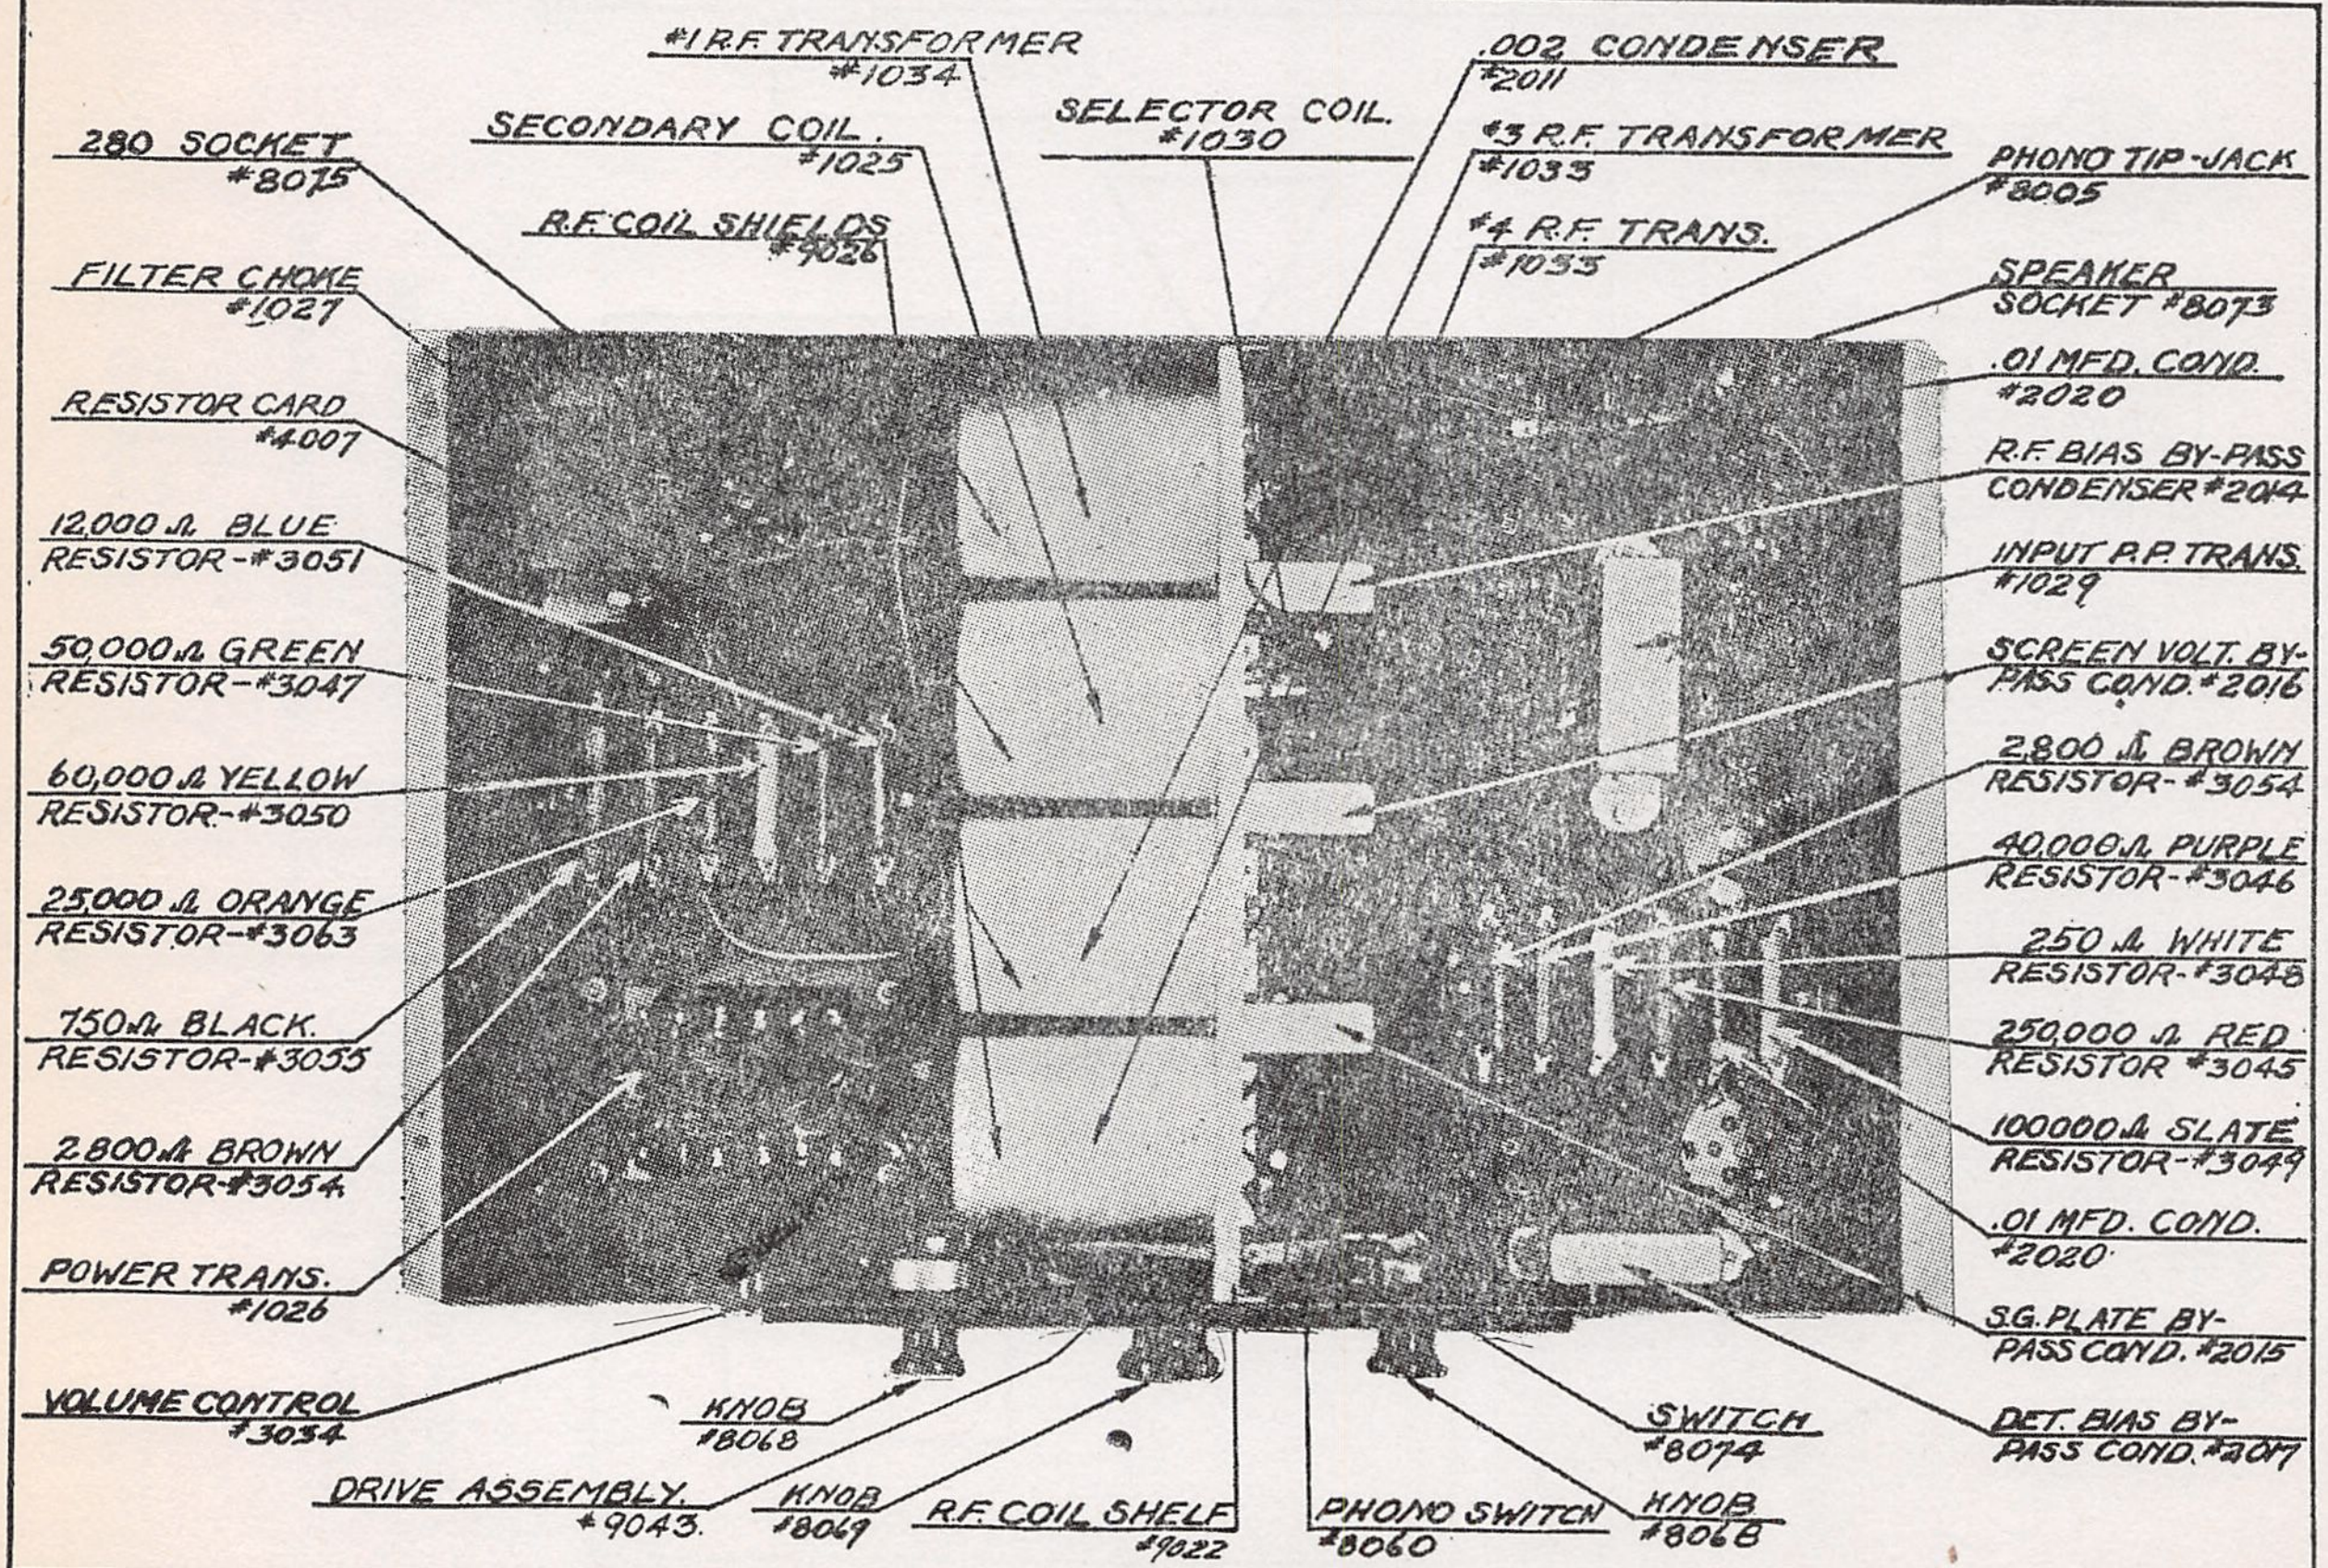
#1 R.F. TRANSFORMER #1034
.002 CONDENSER #2011
SELECTOR COIL. #1030
280 SOCKET #8075
SECONDARY COIL. #1025
#3 R.F. TRANSFORMER #1033
PHONO TIP-JACK #8005
R.F. COIL SHIELDS #9026
#4 R.F. TRANS. #1033
FILTER CHOKE #1027
SPEAKER SOCKET #8073
.01 MFD. COND. #2020
RESISTOR CARD #4007
R.F. BIAS BY-PASS CONDENSER #2014
12,000 Ω BLUE RESISTOR-#3051
INPUT P.P. TRANS. #1029
50,000 Ω GREEN RESISTOR-#3047
SCREEN VOLT. BY-PASS COND. #2016
60,000 Ω YELLOW RESISTOR-#3050
2,800 Ω BROWN RESISTOR-#3054
40,000 Ω PURPLE RESISTOR-#3046
25,000 Ω ORANGE RESISTOR-#3063
250 Ω WHITE RESISTOR-#3048
750 Ω BLACK. RESISTOR-#3055
250,000 Ω RED RESISTOR #3045
2,800 Ω BROWN RESISTOR-#3054
100000 Ω SLATE RESISTOR-#3049
.01 MFD. COND. #2020
POWER TRANS. #1026
S.G. PLATE BY-PASS COND. #2015
VOLUME CONTROL #3034
KNOB #8068
SWITCH #8074
DET. BIAS BY-PASS COND. #2017
DRIVE ASSEMBLY. #9043.
KNOB #8069
R.F. COIL SHELF #9022
PHONO SWITCH #8060
KNOB #8068

PARTS IDENTIFICATION BY COLOR

Resistances:

Large carbon resistances:

Black — 500 Ohms
Yellow—4700 Ohms
Green —1000 Ohms

Small carbon resistances:

Yellow—25000 Ohms
Gray — 2000 Ohms
Brown—15000 Ohms
Green —2 Megohms

Condensers:

Moulded bakelite fixed condensers:

These condensers can be identified by a colored spot as follows:

Red spot —.0001 mfd.
Yellow spot—.00021 mfd.
Green spot —.00025 mfd.
Blue spot —.002 mfd.

Bypass condenser:

This condenser is equipped with one terminal lug and one lead, and may be identified by the color of the latter.

Green—0.5 mfd.—200 V.

Filter condenser block:

The individual sections of this condenser block can be identified by the color lead as follows:

Orange—1 mfd.—200 V.
Gray—2 mfd.—200 V.
Blue—4 mfd.—400 V.
Yellow—1 mfd.—400 V. for 60 cycles
2 mfd.—400 V. for 25 cycles

Red—1 mfd.—400 V.
Green—0.5 mfd.—200 V.
Brown—0.1 mfd.—400 V.

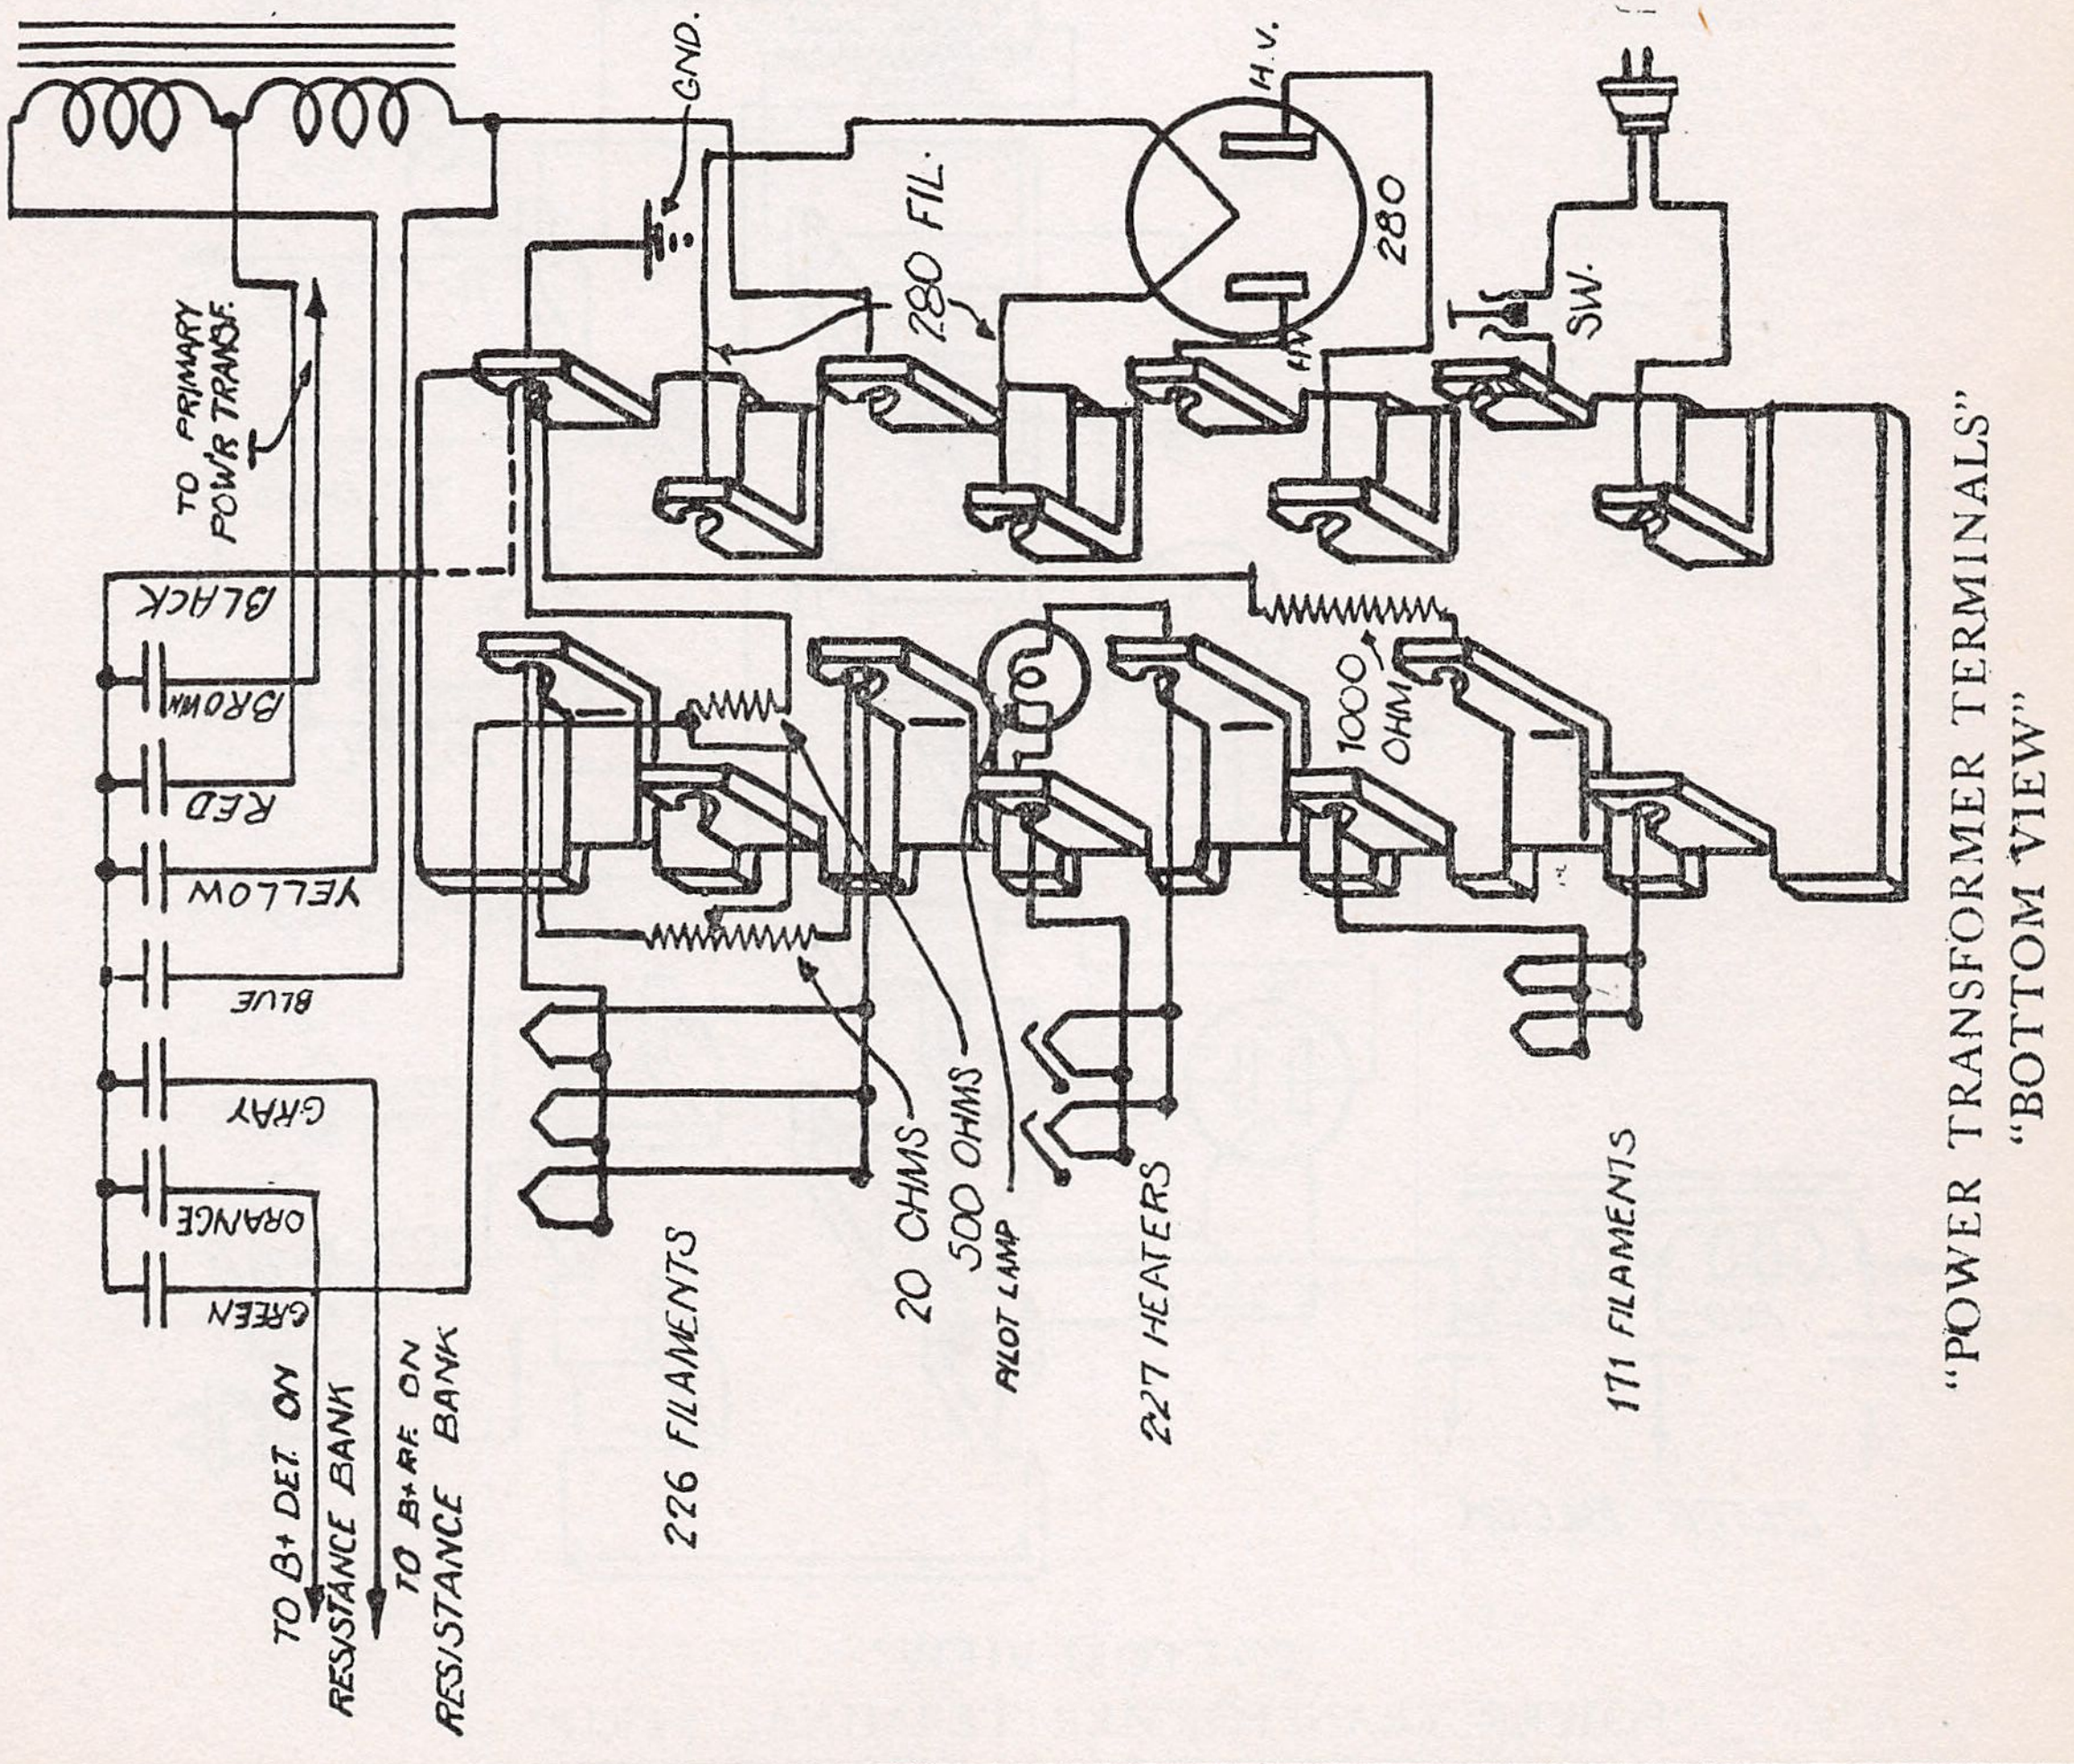
GND.
280 FIL.
H.V.
280
SW.
TO PRIMARY POW'R TRANSF.
BLACK
BROWN
RED
YELLOW
BLUE
GRAY
ORANGE
GREEN
1000 OHM
TO B+ DET. ON RESISTANCE BANK
TO B+ R.F. ON RESISTANCE BANK
226 FILAMENTS
20 OHMS
500 OHMS
PILOT LAMP
227 HEATERS
171 FILAMENTS

"POWER TRANSFORMER TERMINALS"
"BOTTOM VIEW"

PARTS IDENTIFICATION BY COLOR

Resistances:

Large enameled wire-wound resistances:

Green—4000-750 Ohms
Red —5000 Ohms

Small carbon resistances:

Gray — 2000 Ohms
Brown—15000 Ohms
Yellow—25000 Ohms
Green —2 Megohms
Red — 375 Ohms
Black — 500 Ohms

Condensers:

Moulded bakelite fixed condensers:

These condensers can be identified by a colored spot as follows:

Blue spot —.002 mfd.
Green spot —.00025 mfd.
Red spot —.0001 mfd.
Yellow spot—.00021 mfd.

Bypass condensers:

These condensers are equipped with one terminal lug and one lead, and may be identified by the color of the latter.

Red —0.1 mfd.
Green—0.5 mfd.—200 V.

Filter condenser block:

The individual sections of this condenser block can be identified by the color lead as follows:

Black—Common lead to all sections except 0.1 mfd.

Brown (2 leads)—0.1 mfd.—400 V.
Blue—4 mfd.—400 V.
Green—1 mfd.—600 V. for 60 cycles
2 mfd.—600 V. for 25 cycles
Red —1 mfd.—600 V.
Yellow—1 mfd.—400 V.
Orange—1 mfd.—400 V.

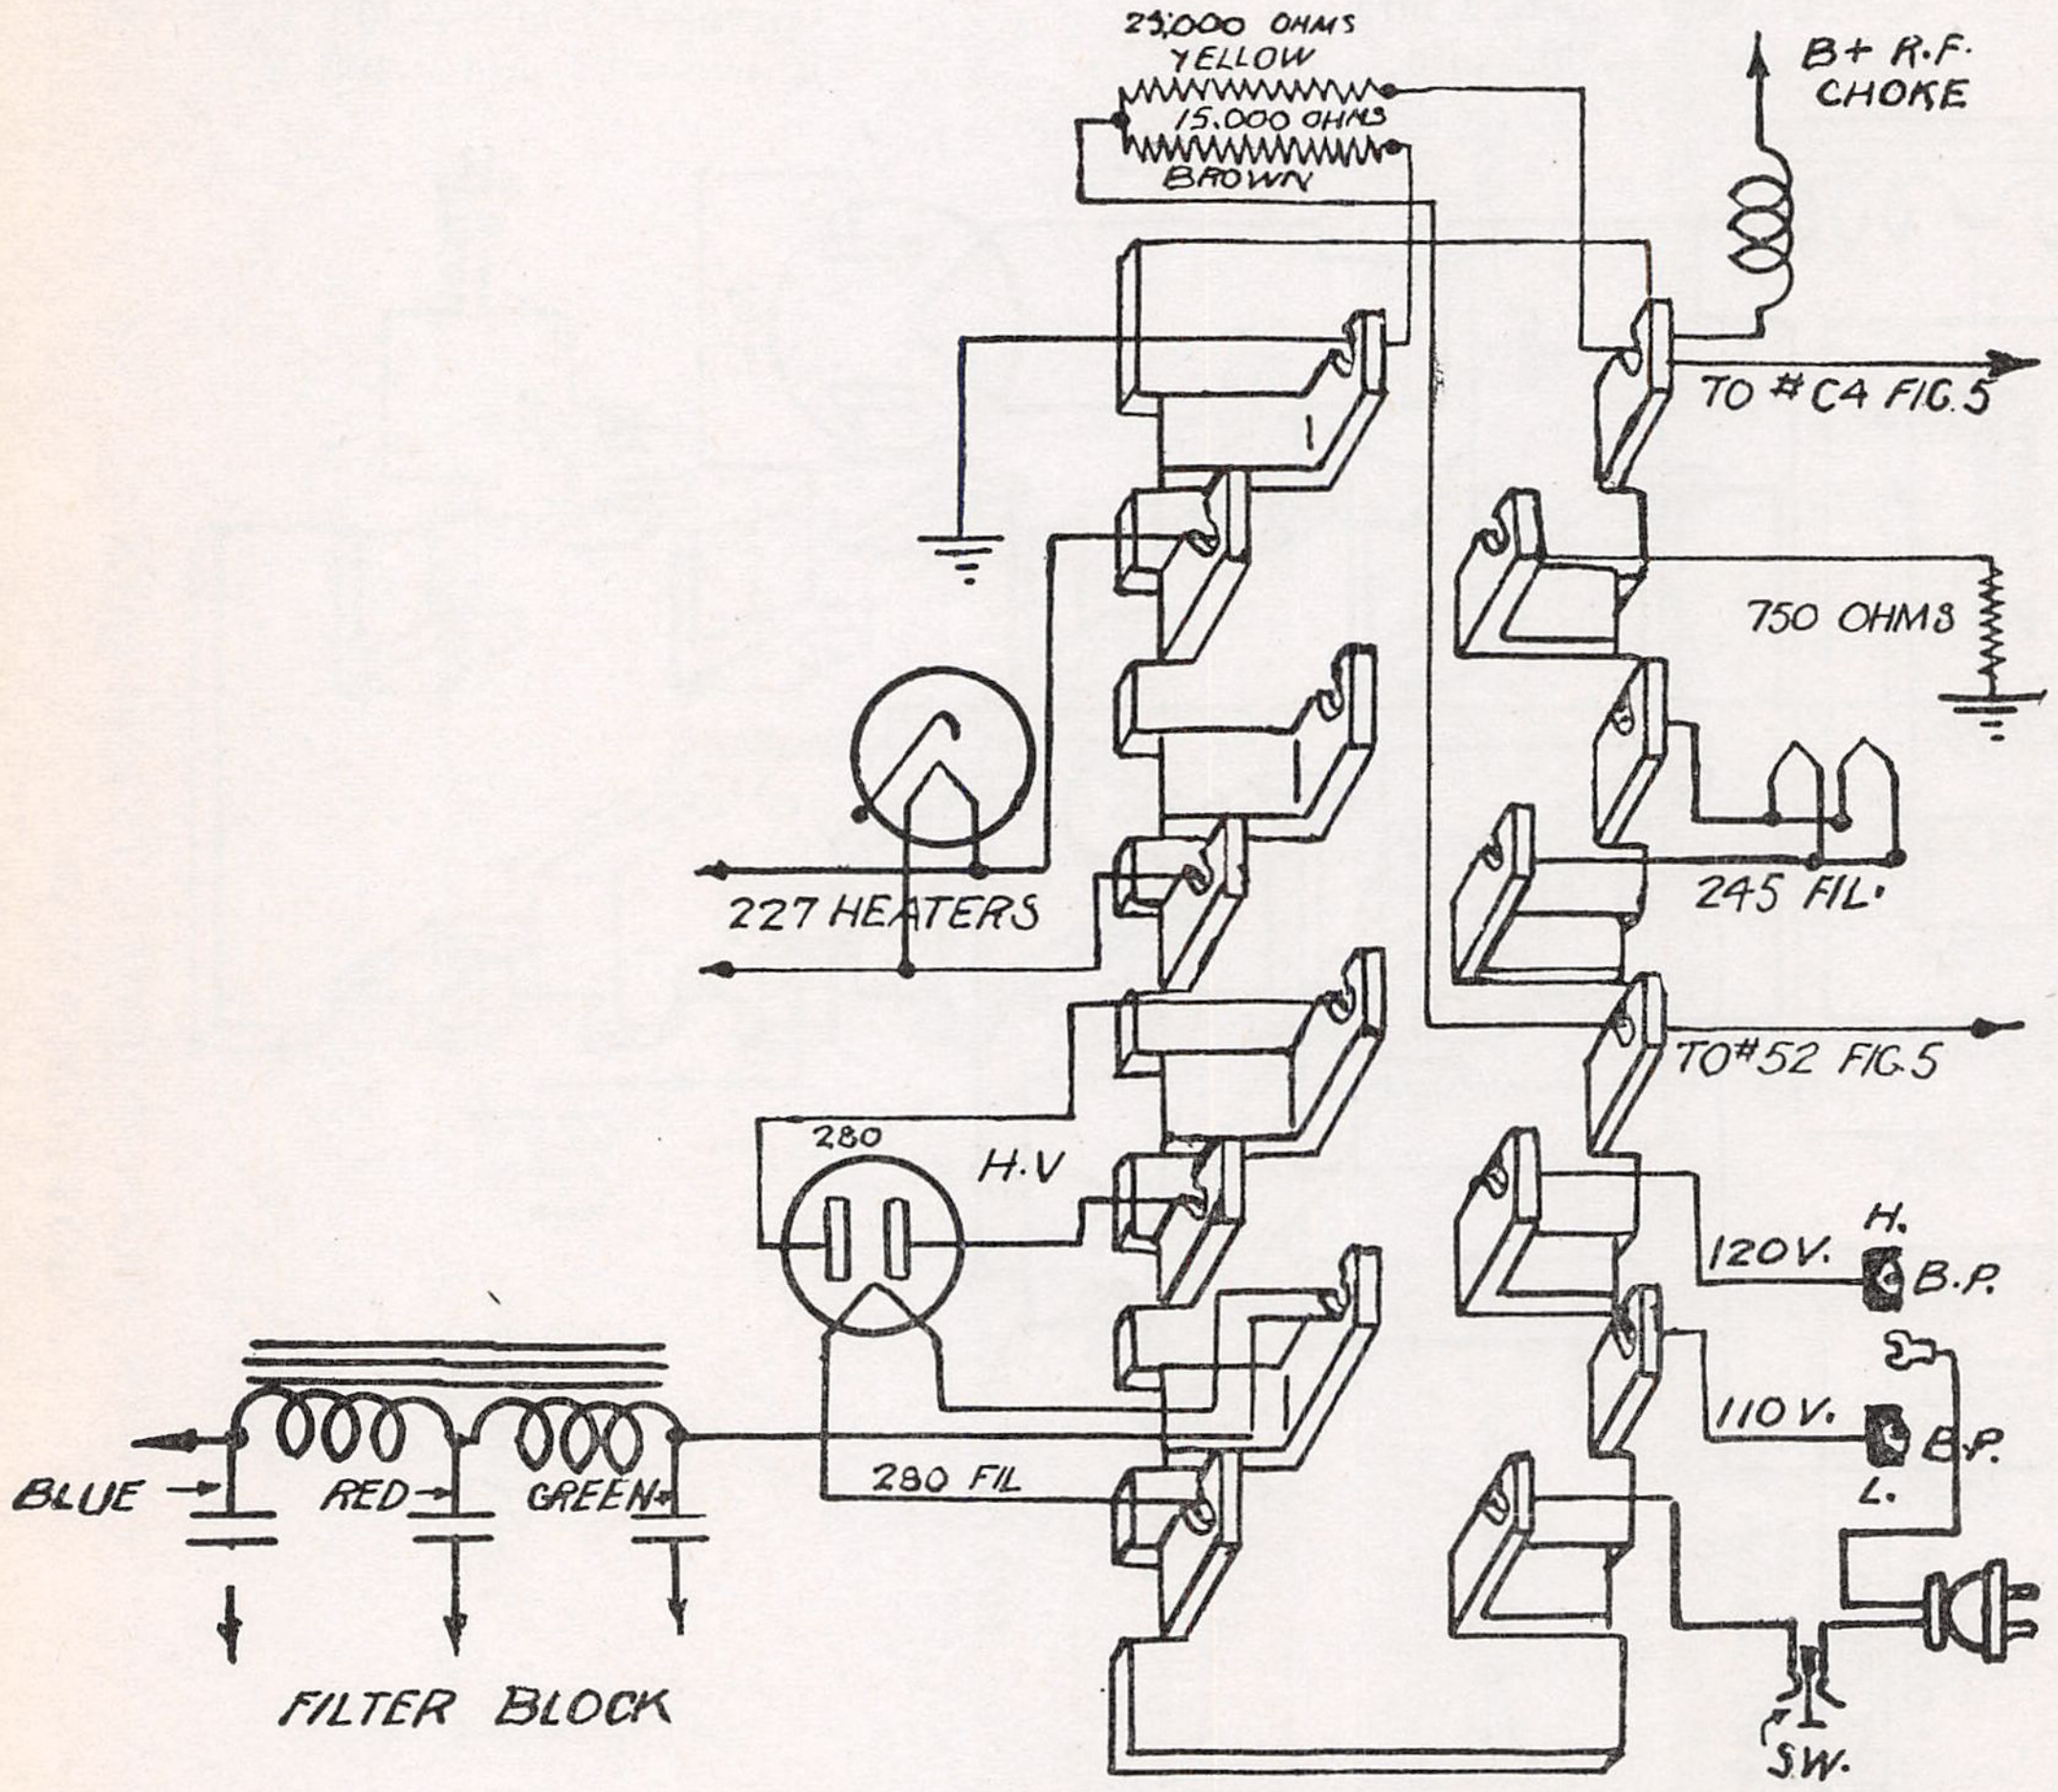
25,000 OHMS
YELLOW
15,000 OHMS
BROWN
B+ R.F. CHOKE
TO #C4 FIG.5
750 OHMS
245 FIL.
227 HEATERS
TO #52 FIG.5
280
H.V
120V.
H.
B.P.
110V.
B.P.
L.
SW.
280 FIL
BLUE
RED
GREEN
FILTER BLOCK

"BOTTOM VIEW"
"POWER TRANSFORMER TERMINAL STRIP"

MODEL 41, 42 AC
Data

EARL RADIO CORP.

PARTS IDENTIFICATION BY COLOR

Resistances:

Large enameled wire-wound resistances:

Green—4000-750 Ohms
Red —5000 Ohms

Small carbon resistances:

Gray — 2000 Ohms
Brown—15000 Ohms
Yellow—25000 Ohms
Green —2 Megohms
Red — 375 Ohms
Black — 500 Ohms

Condensers:

Moulded bakelite fixed condensers:

These condensers can be identified by a colored spot as follows:

Blue spot —.002 mfd.
Green spot —.00025 mfd.
Red spot —.0001 mfd.
Yellow spot—.00021 mfd.

Bypass condensers:

These condensers are equipped with one terminal lug and one lead, and may be identified by the color of the latter.

Red —0.1 mfd.
Green—0.5 mfd.—200 V.

Filter condenser block:

The individual sections of this condenser block can be identified by the color lead as follows:

Black—Common lead to all sections except 0.1 mfd. section.

Brown (2 leads)—0.1 mfd.—400 V.
Blue—4 mfd.—400 V.
Green—1 mfd.—600 V. for 60 cycles
2 mfd.—600 V. for 25 cycles
Red —1 mfd.—600 V.
Yellow—1 mfd.—400 V.
Orange—1 mfd.—400 V.

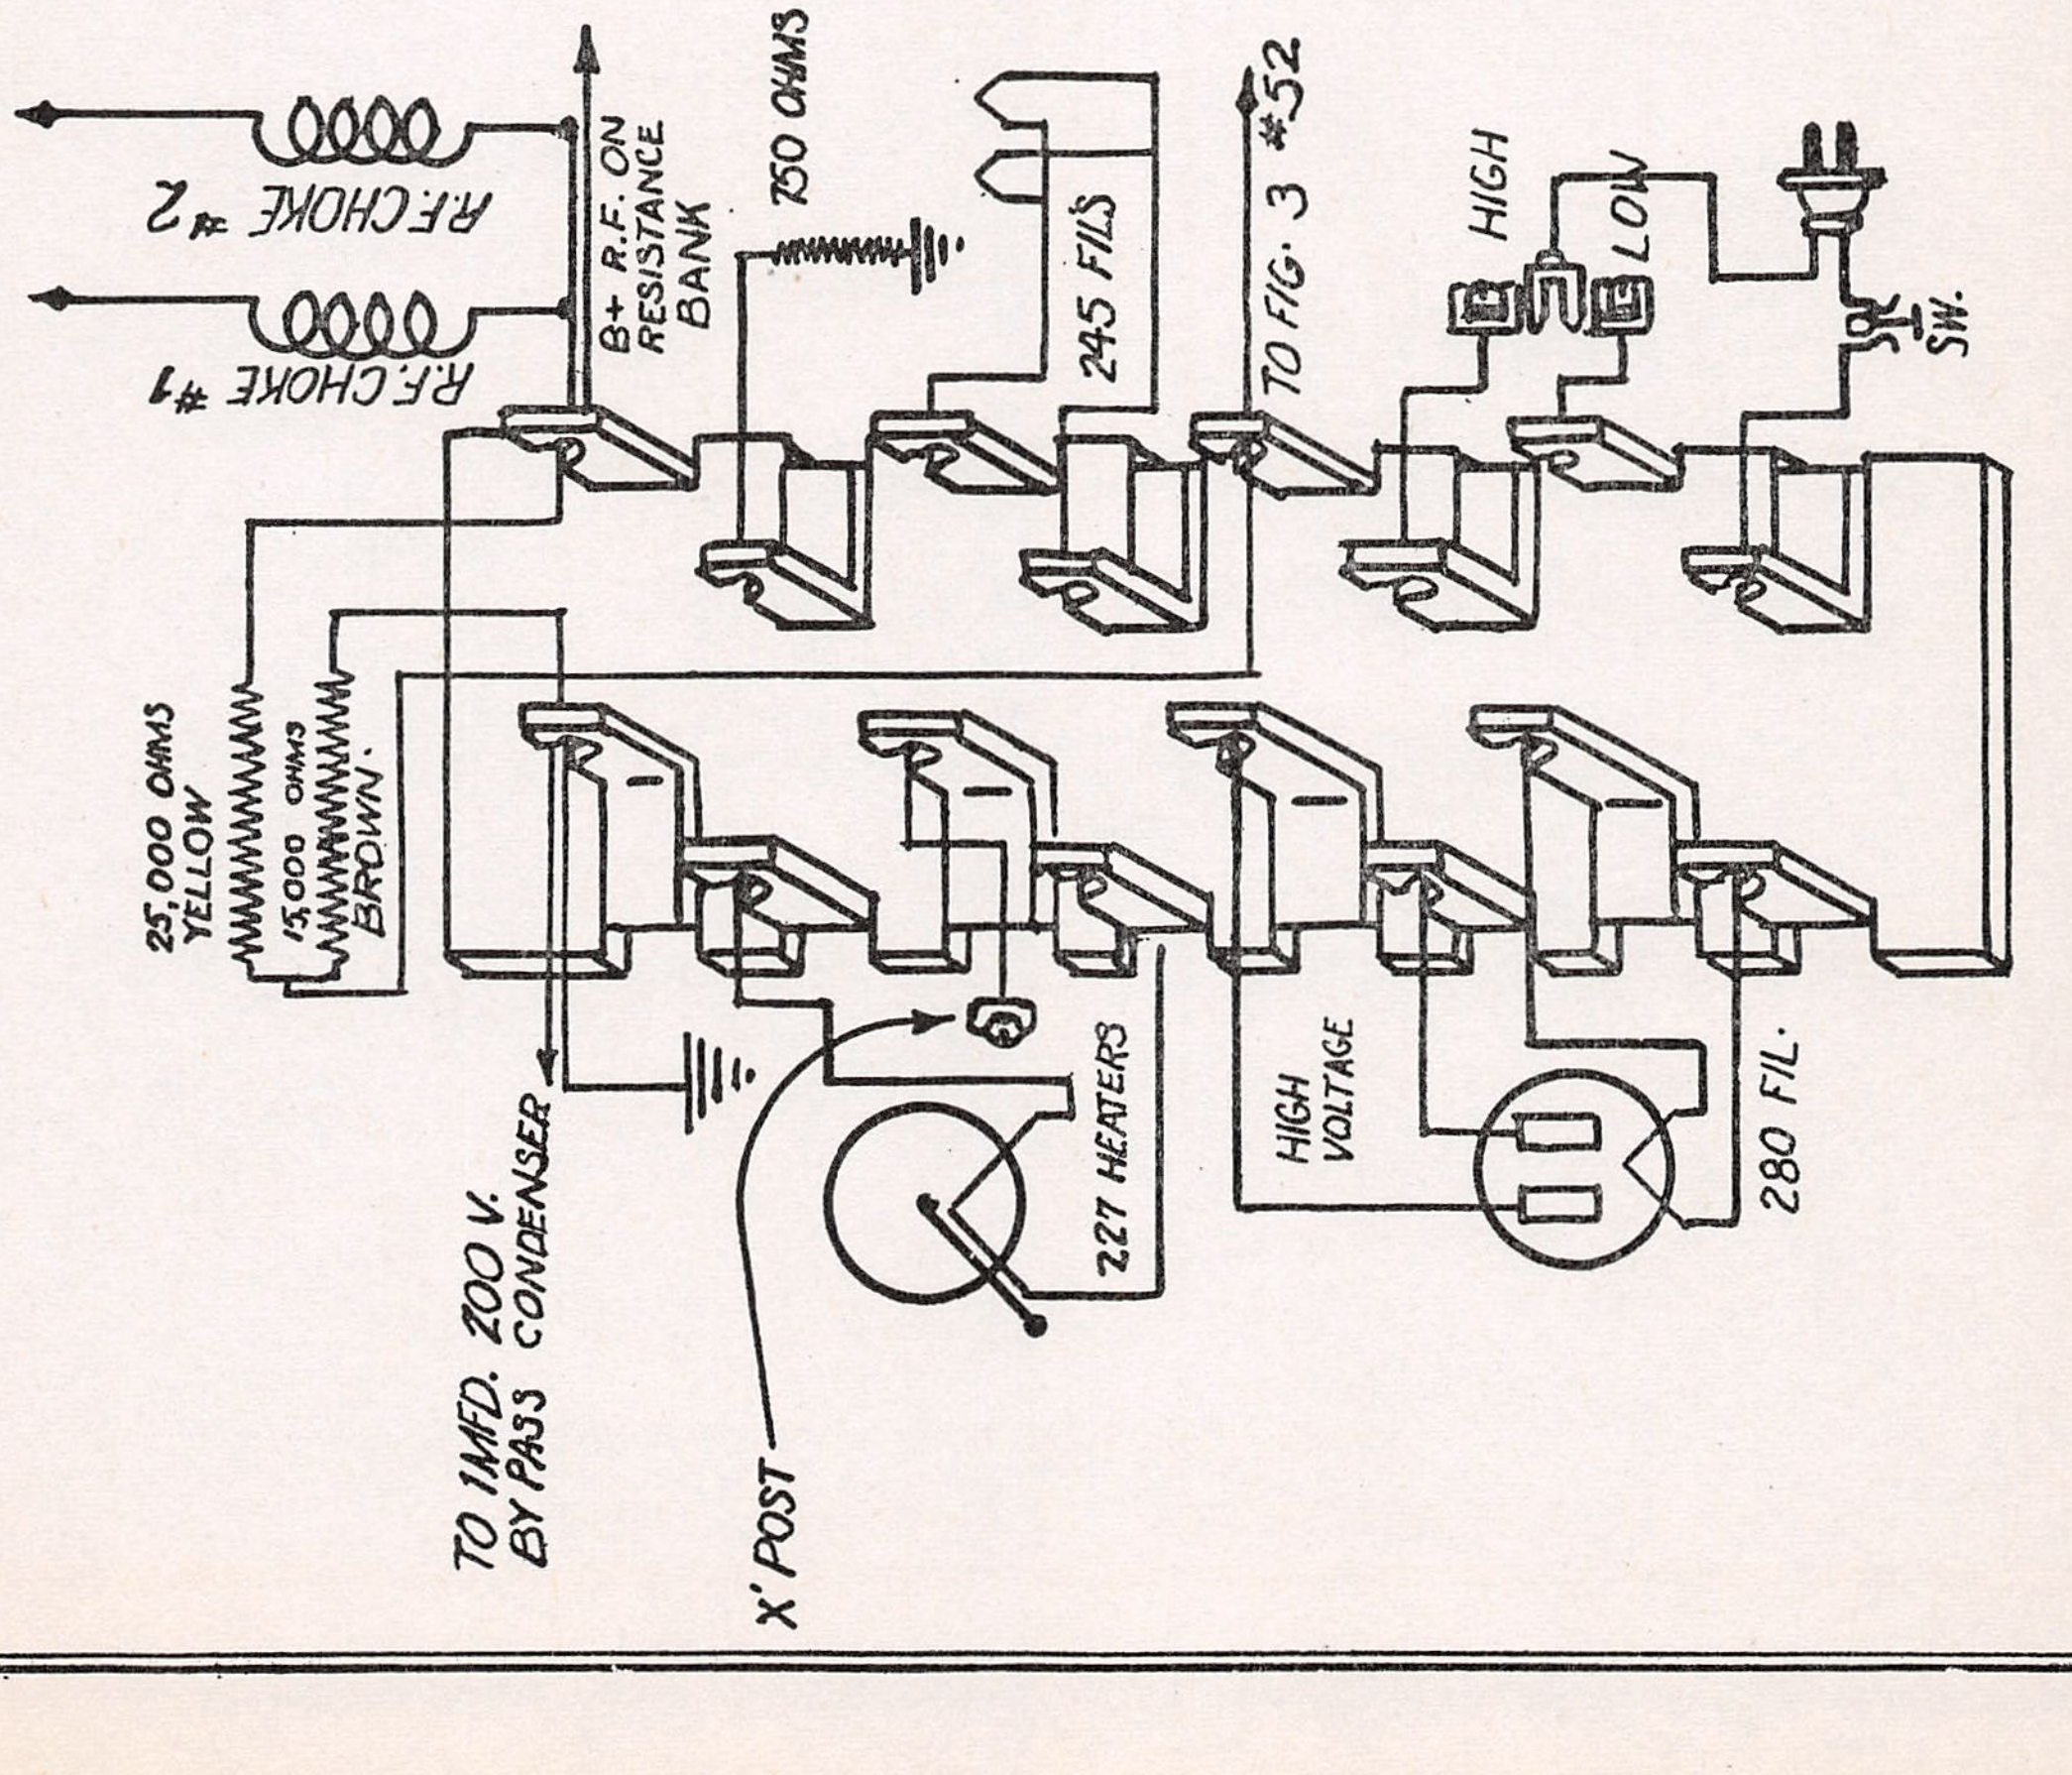
R.F. CHOKE #2
R.F. CHOKE #1
B+ R.F. ON RESISTANCE BANK
750 OHMS
245 FILS
TO FIG. 3 #52
HIGH
LOW
SW.
25,000 OHMS YELLOW
15,000 OHMS BROWN
TO 1MFD. 200 V. BY PASS CONDENSER
X' POST
227 HEATERS
HIGH VOLTAGE
280 FIL.

Power Transformer Terminal Strip

Bottom View

Model F

VOLTAGE TESTS

Voltages given are tested on 250 volt scale of 1000 ohms per volt meter.

All voltage tests were made with volume control on full and tone control in off position, no signal in receiver, line voltage 115 volts. Speaker must be connected to receiver.

R. F. Plate	
Low	210 volts
Normal	220 “
High	230 “
R. F. Screen	
Low	75 volts
Normal	80 “
High	90 “
R. F. Cathode	1.5 to 2.5 volts
Detector Plate	
Low	55 volts
Normal	65 “
High	75 “
Detector Screen	
Low	25 volts
Normal	30 “
High	35 “
Detector Cathode	3 to 6 volts
245 Plate	
Low	210 volts
Normal	220 “
High	230 “
245 Bias	20 to 40 volts
280 Filament	4.5 to 5.2 volts
Filaments for all 2.5 Volt Tubes	2.2 to 2.5 volts
Speaker Field Voltage Drop	90 to 110 volts

Model 40 Echoette

VOLTAGE TESTS

All voltages given were tested on 250 volt scale of 1000 ohms per volt meter.

All voltage tests were made with volume on full and no signal in receiver, line voltage 115 volts with A. C. line connected to tap of transformer as shipped from factory.

247 Plate to ground	230 to 250 volts
247 Screen to ground	240 to 260 volts
247 Grid to ground	6 to 8 volts
Det. Plate to ground	25 to 35 volts
Det. Screen to ground	30 to 40 volts
Det. Bias cathode to ground	7 to 9 volts
R. F. Plate to ground	240 to 260 volts
R. F. Screen to ground	70 to 85 volts
R. F. Bias—Cathode to ground	2.5 to 3.5 volts
Filament All 2.5 volt tubes	2.4 to 2.6
Filament 280 tube	4.8 to 5 volts
R. F. Cathode volume control in off position	40 to 50 volts
Voltage across speaker field	90 to 110 volts.

MODEL F
Schematic

ECHOPHONE RADIO MFG. CO.

Model F (1931)

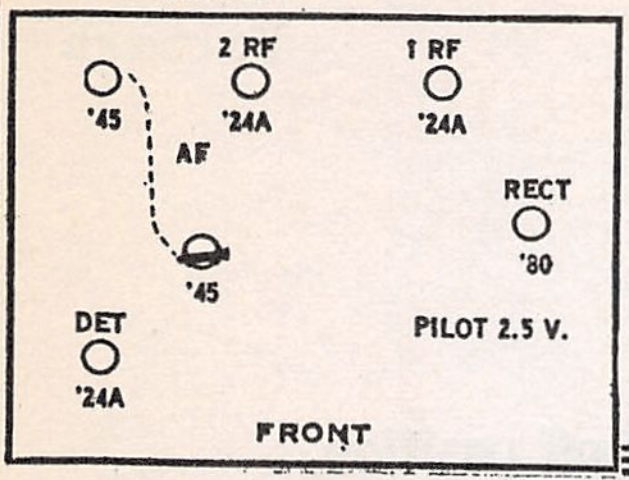
'45
2 RF
'24A
1 RF
'24A
AF
RECT
'80
'45
DET
'24A
PILOT 2.5 V.
FRONT

The bias for the 45 tubes is obtained through a one megohm resistor connected to the midpoint of the two resistors across the dynamic speaker field which is in the negative lead.

ECHOPHONE - Model F

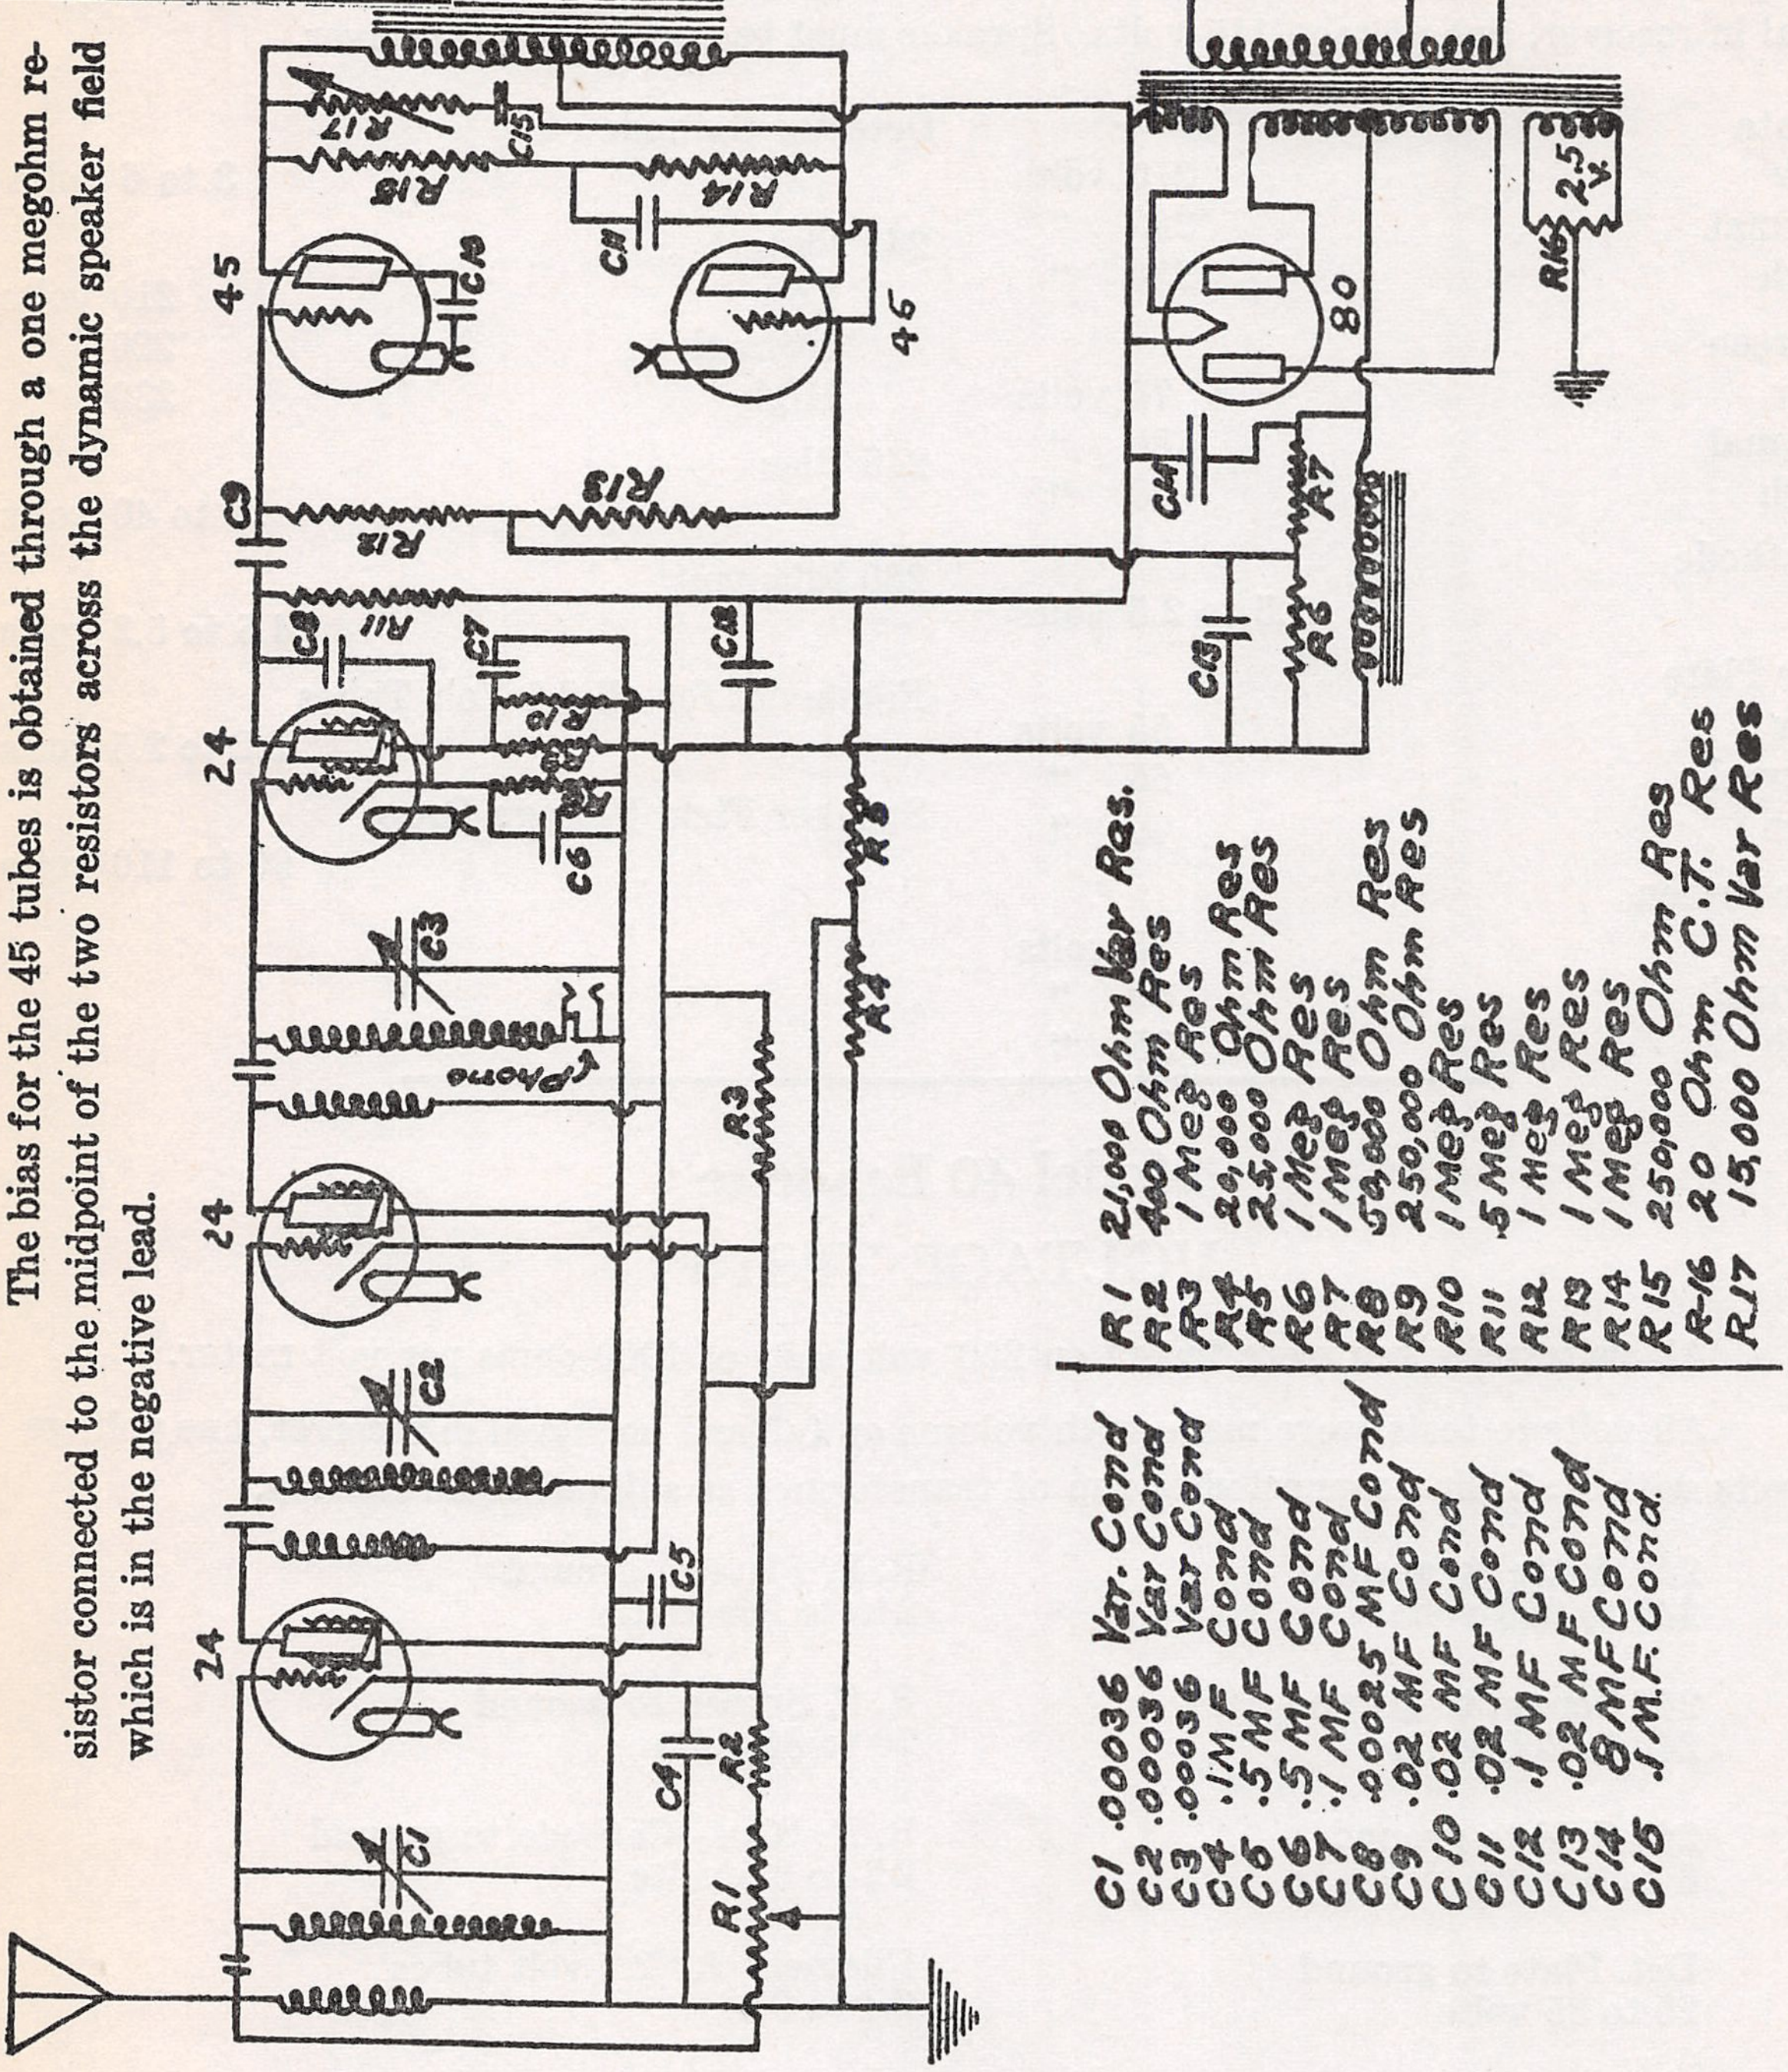
Line
45
45
80
2.5 V.
R16
24
24
24
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R17
Phono

C1	.00036	Var. Cond
C2	.00036	Var Cond
C3	.00036	Var Cond
C4	.1 MF	Cond
C5	.5 MF	Cond
C6	.5 MF	Cond
C7	.1 MF	Cond
C8	.00025 MF	Cond
C9	.02 MF	Cond
C10	.02 MF	Cond
C11	.02 MF	Cond
C12	.1 MF	Cond
C13	.02 MF	Cond
C14	8 MF	Cond
C15	.1 M.F.	Cond.

R1	21,000 Ohm	Var Res.
R2	400 Ohm	Res
R3	1 Meg	Res
R4	20,000 Ohm	Res
R5	25,000 Ohm	Res
R6	1 Meg	Res
R7	1 Meg	Res
R8	50,000 Ohm	Res
R9	250,000 Ohm	Res
R10	1 Meg	Res
R11	.5 Meg	Res
R12	1 Meg	Res
R13	1 Meg	Res
R14	1 Meg	Res
R15	250,000 Ohm	Res
R-16	20 Ohm	C.T. Res
R17	15,000 Ohm	Var Res

The filter circuit consists of an 8 M. F. electrolytic condenser and the 1500 ohm field of the dynamic speaker. The hum balance is used in connection with the bias resistors of the 45 tubes, a condenser of proper capacity being connected from the midpoint of these resistors to ground.

MODEL 40
Schematic

ECHOPHONE RADIO MFG. CO.

ECHOPHONE
Model 40 Echoette

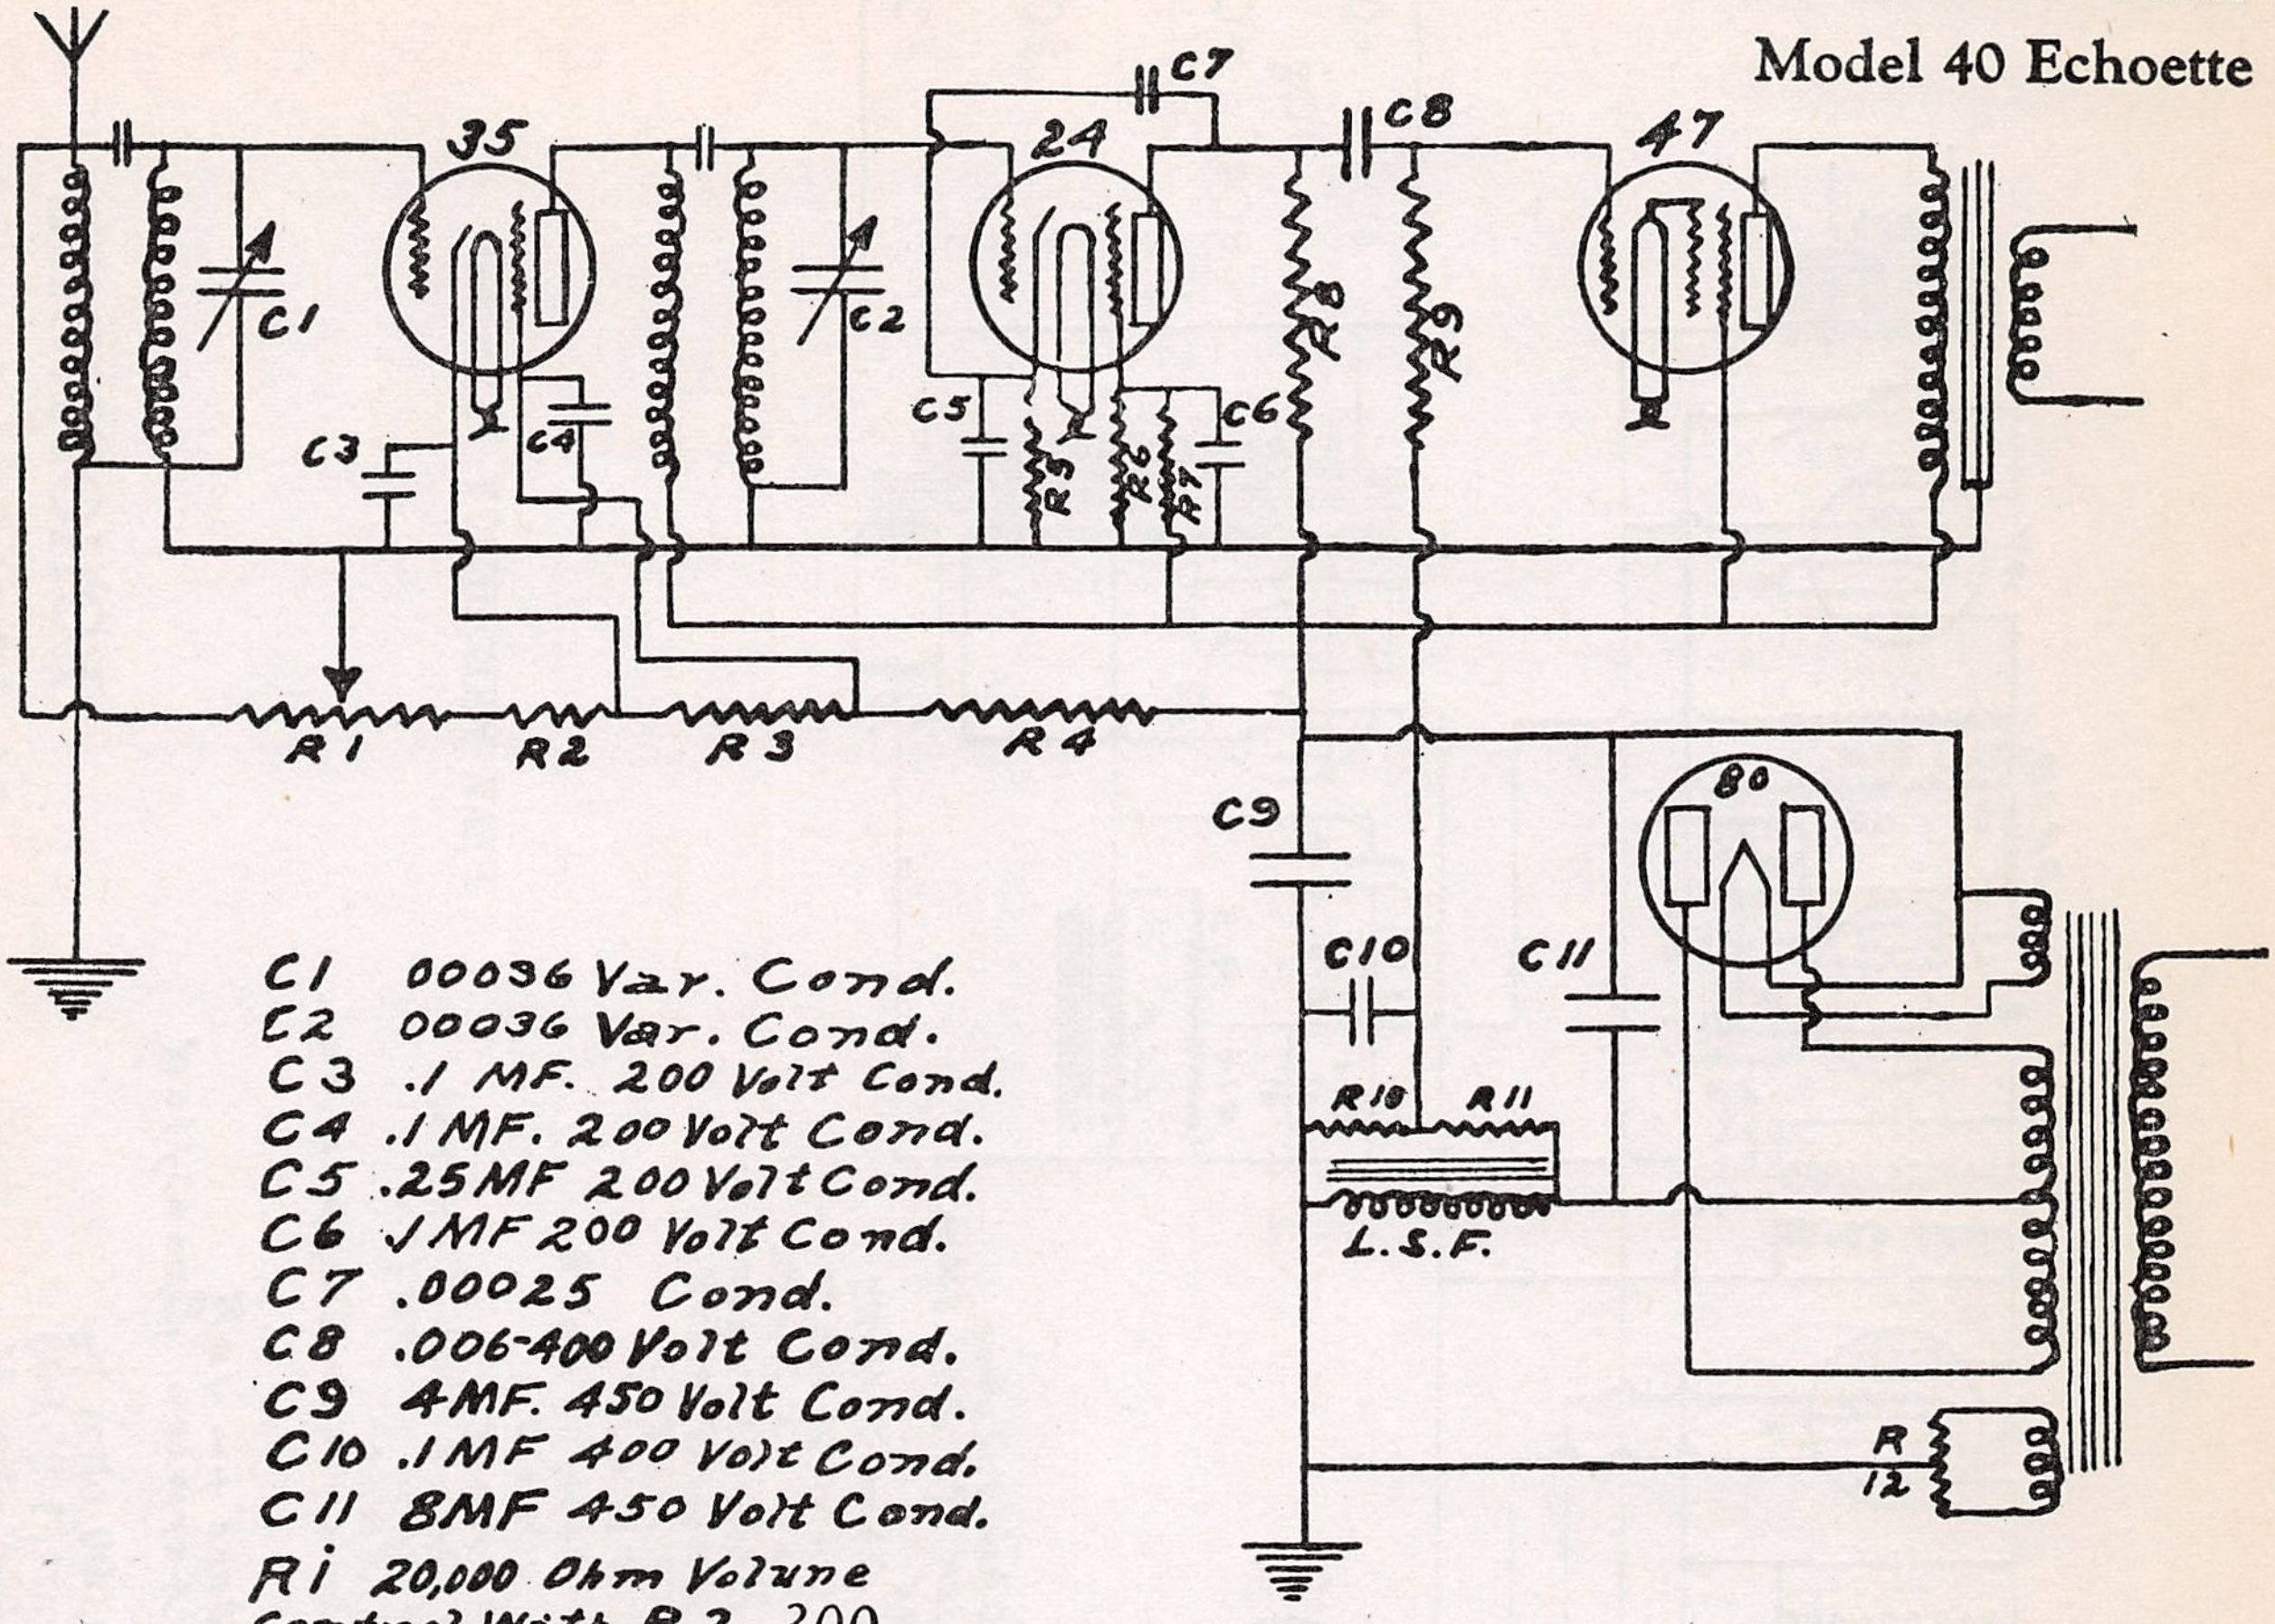

C1 00036 Var. Cond.
C2 00036 Var. Cond.
C3 .1 MF. 200 Volt Cond.
C4 .1 MF. 200 Volt Cond.
C5 .25 MF 200 Volt Cond.
C6 .1 MF 200 Volt Cond.
C7 .00025 Cond.
C8 .006-400 Volt Cond.
C9 4 MF. 450 Volt Cond.
C10 .1 MF 400 Volt Cond.
C11 8 MF 450 Volt Cond.
R1 20,000 Ohm Volune Control With R2 300 Ohm Fixed Bias
R3 35000 Ohm .5 Watt
R4 50000 Ohm 1 Watt
R5 50000 Ohm 1 Watt
R6 .5 Meg 1 Watt
R7 1 Meg .5 Watt
R8 1.5 Meg .5 Watt
R9 .5 Meg 1 Watt
R10 .2 Meg .5 Watt
R11 1 Meg .5 Watt
R12 20 Ohm C.T. Resistor - 10 %

Model 40 (1931)

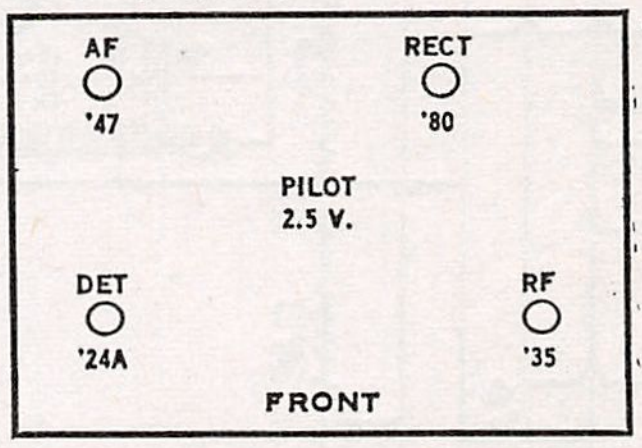

In the later models the speaker field is in the negative lead and part of the drop across it is used to bias the grid of the power tube. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

The R. F. stage is impedence coupled and there is a small coupling condenser fastened on the lower end of the R. F. coil. If the set is weak or oscillates at the high frequency end of the band a slight adjustment of this condenser will remedy the trouble. After adjusting this condenser the gang condenser should be checked for alignment with the rotor plates nearly open.

The filter circuit consists of an 8 M. F. and 4 M. F. electrolytic condenser and the 2000 ohm speaker field. The speaker field is in the positive lead and the power tube is self biased by a resistor from the filament circuit to ground. This resistor is by-passed by an 8 M. F. condenser.

ECHOPHONE RADIO MFG. CO.

MODEL 60
Schematic

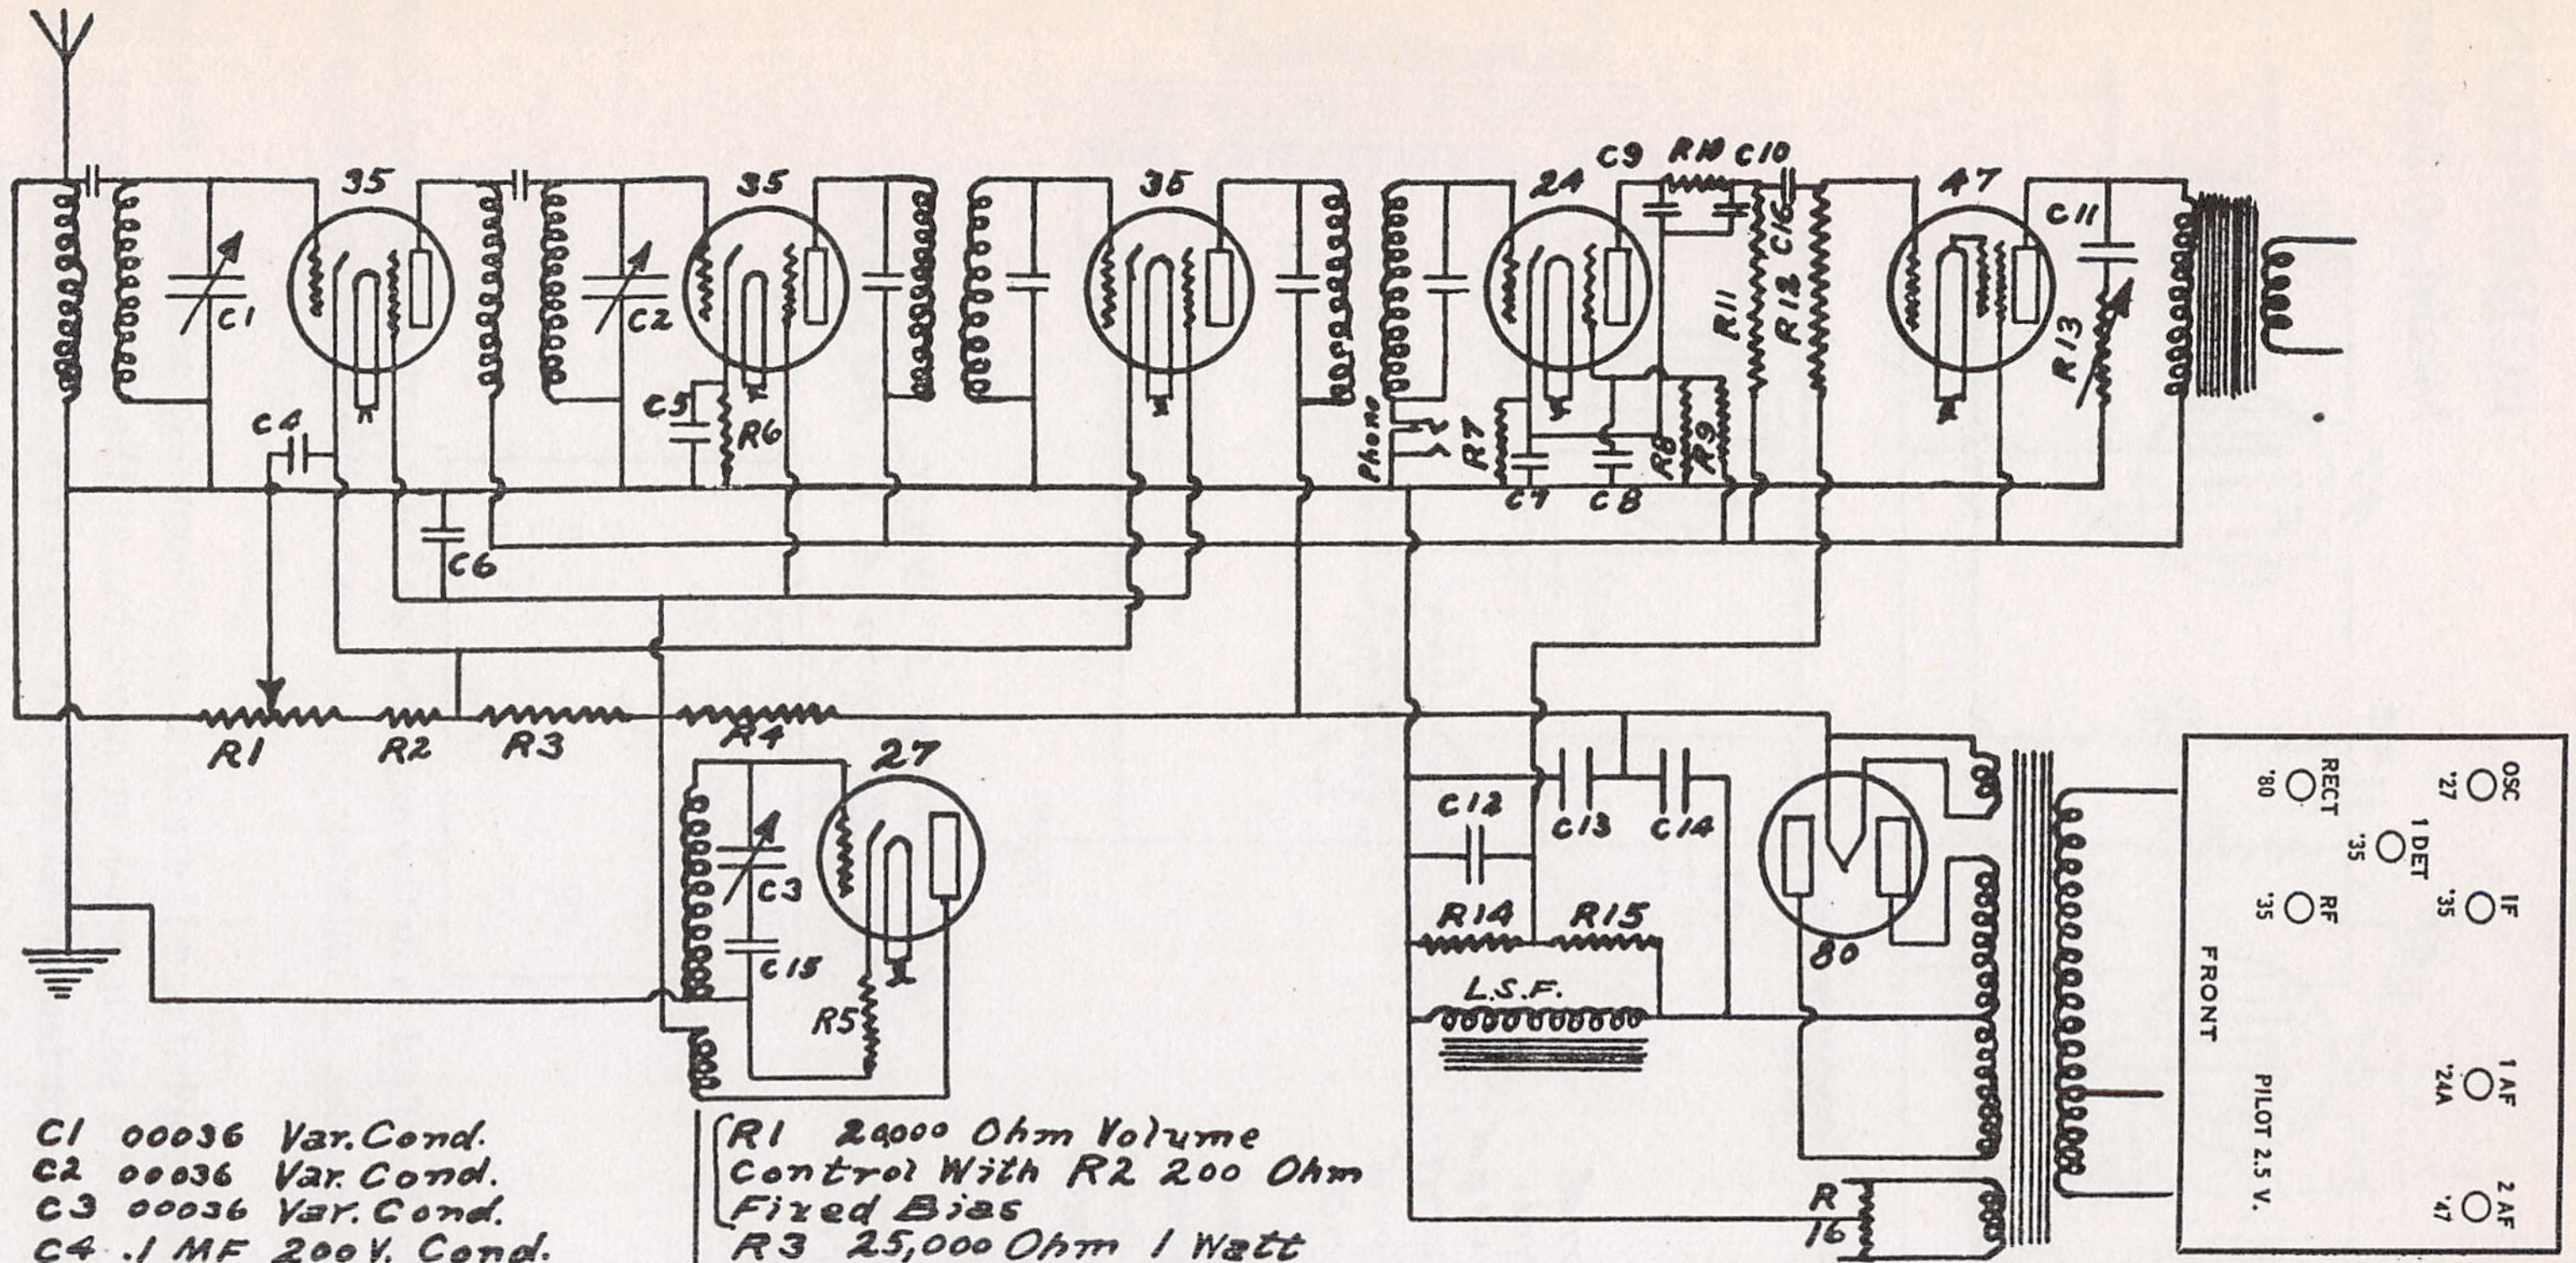
35
35
35
24
47
27
80
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
Phono
L.S.F.
Model 60 (1931)
OSC
'27
IF
'35
1 DET
'35
RECT
'80
RF
'35
1 AF
'24A
2 AF
'47
PILOT 2.5 V.
FRONT

C1 00036 Var. Cond.
C2 00036 Var. Cond.
C3 00036 Var. Cond.
C4 .1 MF 200 V. Cond.
C5 .1 MF 200 V. Cond.
C6 .1 MF '200 V. Cond.
C7 .5 MF 200 V. Cond
C8 .1 MF 200 V. Cond.
C9 .00025 Cond.
C10 .0001 Cond.
C11 .05 MF 400 V. Cond.
C12 .1 MF 400 V. Cond.
C13 8 MF 450 V. Cond.
C14 8 MF 450 V. Cond.
C15 .001 Cond +- 3%
C16 .006 MF 400 V. Cond.

All Condensers +- 10%
Unless Otherwise
Specified

R1 20000 Ohm Volume
Control With R2 200 Ohm
Fixed Bias
R3 25,000 Ohm 1 Watt
R4 20,000 Ohm 2 Watt
R5 1000 Ohm .5 Watt
R6 1500 Ohm .5 Watt
R7 50,000 Ohm .5 Watt
R8 .5 Meg .5 Watt
R9 1. Meg .5 Watt
R10 150,000 Ohm .5 Watt
R11 .5 Meg 1 Watt
R12 .5 Meg 1 Watt
R13 20,000 Ohm Tone Control
R14 200,000 Ohm .5 Watt
R15 1. Meg .5 Watt
R16 20 Ohm Center tapped Res.

All Resistors +- 10%
Unless Otherwise Speosfied

PEAK FREQUENCY 175 KC

ECHOPHONE

Model 60 Superheterodyne

Resistor Panel-2-1 Meg. ½ watt, 1-200,000 ohm ½ watt-2 ½ Meg. 1 watt, 1-20,000 ohm 2 watt, 1-25,000 ohm 1 watt, 1-½ Meg. ½ watt, 1-50,000 ohm ½ watt, 1-1500 ohm ½ watt

The filter circuit consists of two 8 MF electrolytic condensers and the 1500 ohm speaker field. The hum balance circuit is used in connection with the power tube bias resistors. The speaker field is in the negative lead and part of the voltage drop across it is used for biasing the power tube. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

ECHOPHONE RADIO MFG. CO.

MODEL 80
Schematic

The volume control acts as a dual control by varying the bias on the RF and IF tubes and by varying the antenna input to the antenna stage.

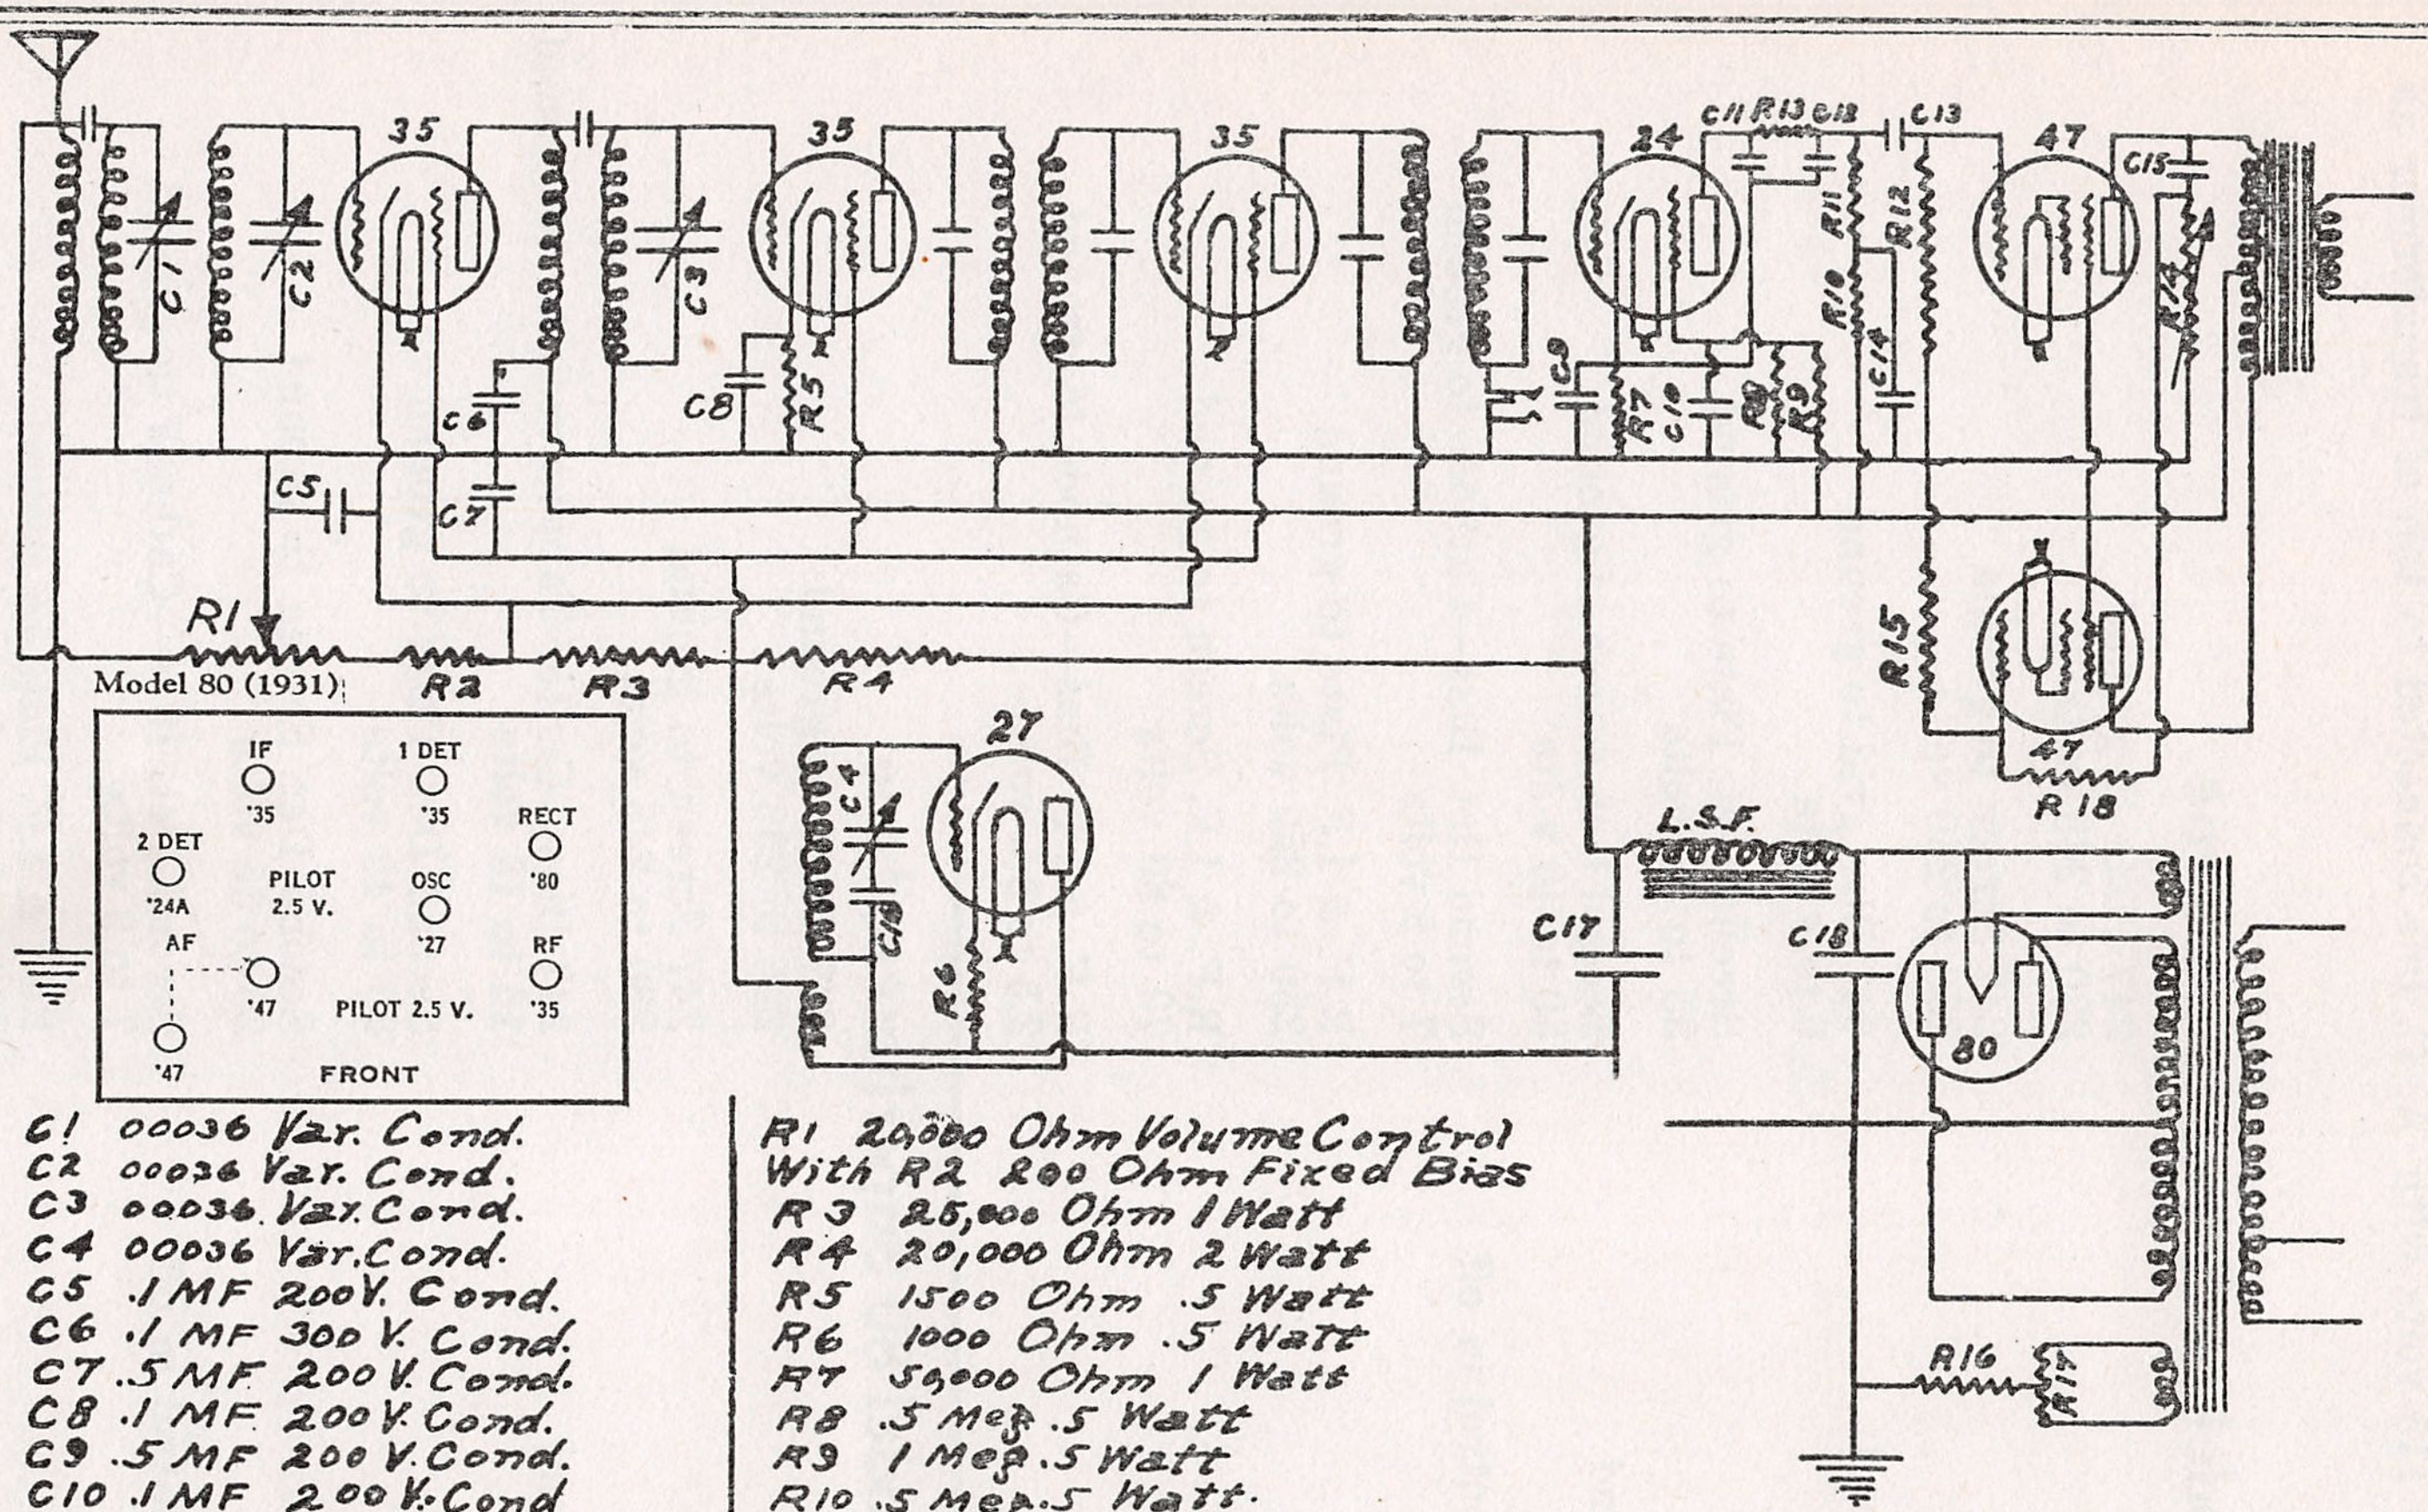
35
35
35
24
47
47
27
80
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
R13
C12
C13
C14
C15
C17
C18
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R14
R15
R16
R17
R18
L.S.F.
Model 80 (1931)
IF '35
1 DET '35
RECT '80
2 DET '24A
PILOT 2.5 V.
OSC '27
AF
'47
PILOT 2.5 V.
RF '35
'47
FRONT

C1 00036 Var. Cond.
C2 00036 Var. Cond.
C3 00036 Var. Cond.
C4 00036 Var. Cond.
C5 .1 MF 200V. Cond.
C6 .1 MF 300 V. Cond.
C7 .5 MF 200 V. Cond.
C8 .1 MF 200 V. Cond.
C9 .5 MF 200 V. Cond.
C10 .1 MF 200 V. Cond
C11 .00025 Cond.
C12 .0001 Cond.
C13 .006 MF 400 V. Cond.
C14 .1 MF 200 V. Cond.
C15 .05 MF 400 V. Cond
C16 .001 Cond. +- 3%
C17 4 MF 450 V. Cond.
C18 8 MF 450 V. Cond

All Cond. +- 10%
Unless Otherwise Specified.

R1 20,000 Ohm Volume Control
With R2 200 Ohm Fixed Bias
R3 25,000 Ohm 1 Watt
R4 20,000 Ohm 2 Watt
R5 1500 Ohm .5 Watt
R6 1000 Ohm .5 Watt
R7 50,000 Ohm 1 Watt
R8 .5 Meg .5 Watt
R9 1 Meg .5 Watt
R10 .5 Meg .5 Watt.
R11 .5 Meg. .5 Watt
R12 .5 Meg. .5 Watt
R13 150,000 Ohm .5 Watt
R14 20,000 Ohm Tone Control
R15 10,000 Ohm .5 Watt
R16 250 Ohm 2 Watt
R17 20 Ohm Center Tapped Res
R18 .25 Meg 1 Watt
All Resistors +- 10%
Unless Otherwise Specified.

PEAK FREQUENCY 175 KC

ECHOPHONE

Model 80 Superheterodyne

Resistor Panel-4-½ Meg. ½ Watt
1-10,000 Ohm ½ Watt, 1-250,000 Ohm 1 Watt
1-1 Meg. ½ Watt, 1-20,000 Ohm 2 Watt
1-25,000 Ohm 1 Watt, 1-250 Ohm 2 Watt
1-50,000 Ohm 1 Watt

The filter circuit consists of an 8 MF and a 4 MF electrolytic condenser and the 1200 ohm speaker field. The field is in the positive lead and the output tubes are self-biased by a resistor between the filament circuit and ground. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

MODEL 60
Voltage
MODEL 80
Voltage

ECHOPHONE RADIO MFG. CO.

VOLTAGE TESTS

All voltages given were tested on a 250 volt scale of 1000 ohms per volt meter.

All voltage tests were made with volume on full, and tone control in off position, no signal in receiver, line voltage 115 volts with A. C. line connected to tap of transformer as shipped from factory.

Model 60 Superheterodyne

First Det. Plate to ground
230 to 250 volts

First Det. Screen to ground
70 to 80 volts

First Det. Bias—Cathode to ground
4 to 6 volts

Oscillator Plate to ground
70 to 80 volts

Oscillator Bias—Cathode to ground
4 to 6 volts

R.F. & I.F. Bias with volume control in off position
40 to 50 volts

Filament for all 2.5 volt tubes
2.4 to 2.6 volts

Filament of 280 tube
4.8 to 5 volts

Voltage across speaker field
80 to 90 volts

247 Plate to ground
230 to 245 volts

247 Screen to ground
230 to 250 volts

247 Bias grid to ground
6 to 8 volts

Second Det. Plate to ground
35 to 45 volts

Second Det. screen to ground
30 to 40 volts

Second Det. Bias—Cathode to ground
7 to 9 volts

R.F. & I.F. Plate to ground
230 to 250 volts

R.F. & I.F. Screen to ground
70 to 80 volts

R.F. & I.F. Bias—Cathode to ground
2.5 to 3.5 volts

Model 80 Superheterodyne

First Det. Plate to ground
230 to 245 volts

First Det. Screen to ground
70 to 80 volts

First Det. Bias—Cathode to ground
4 to 6 volts

Oscillator plate to ground
70 to 80 volts

Oscillator Bias Cathode to ground
4 to 6 volts

R.F. & I.F. Bias with volume control in off position
40 to 50 volts

Filament for all 2.5 volt tubes
2.4 to 2.6 volts

Filament of 280 tube
4.8 to 5 volts

Voltage across speaker field
90 to 110 volts

247 Plate to ground
225 to 235 volts

247 Screen to ground
230 to 245 volts

247 Bias—Center Tapped resistor to ground
16 to 18 volts

Second Det. Plate to ground
30 to 40 volts

Second Det. Screen to ground
25 to 35 volts

Second Det. Bias—Cathode to ground
7 to 9 volts

R.F. & I.F. Plate to ground
230 to 245 volts

R.F. & I.F. Screen to ground
70 to 80 volts

R.F & I.F. Bias—Cathode to ground
2.5 to 3.5 volts

ECHOPHONE RADIO MFG. CO.

MODEL 90
Schematic

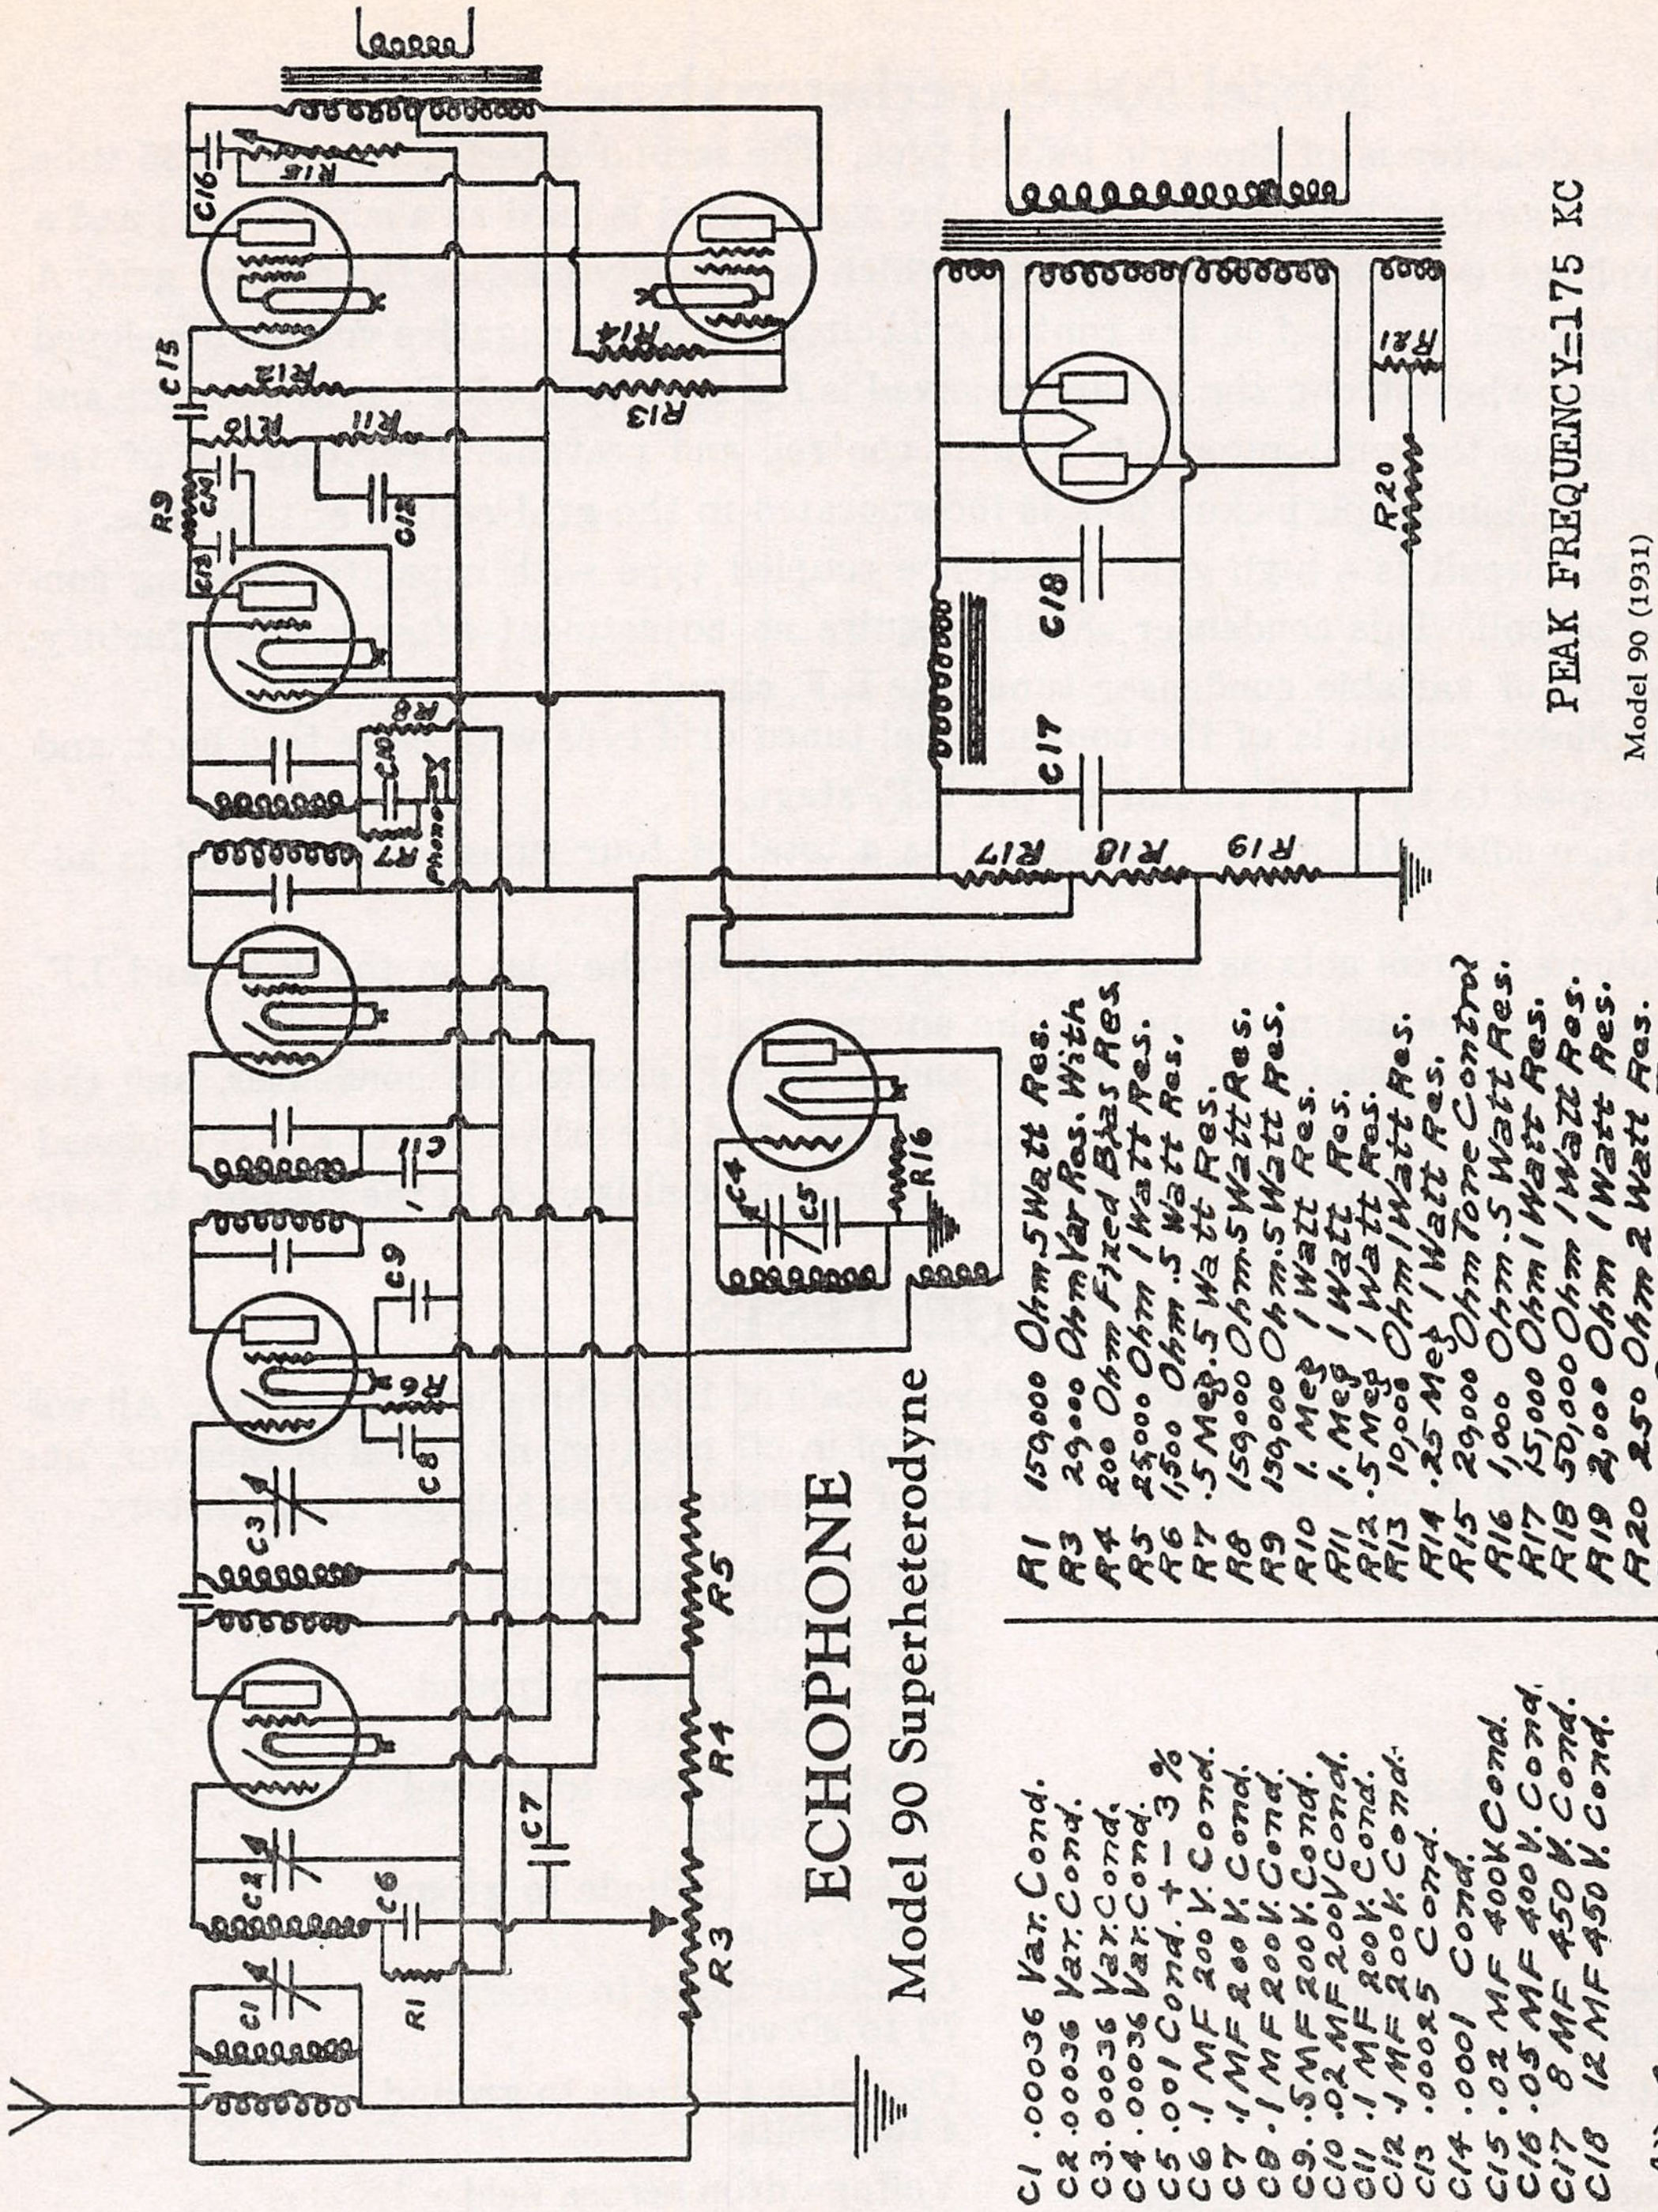
C16
R16
C15
R15
R12
R11
R13
R14
R9
C12
C13
C10
R8
R7
Phono
C11
C9
R6
C8
C4
C5
R10
C3
C2
C1
C6
C7
R1
R3
R4
R5
C17
C18
R17
R18
R19
R20
R21

PEAK FREQUENCY–175 KC

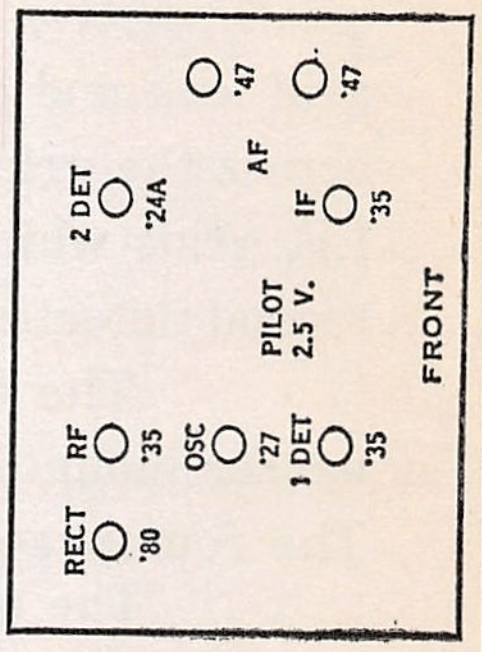
Model 90 (1931)
RECT '80
RF '35
OSC '27
1 DET '35
PILOT 2.5 V.
2 DET '24A
IF '35
AF
'47
'47
FRONT

ECHOPHONE
Model 90 Superheterodyne

C1 .00036 Var. Cond.
C2 .00036 Var. Cond.
C3 .00036 Var. Cond.
C4 .00036 Var. Cond.
C5 .001 Cond. +− 3%
C6 .1 MF 200 V. Cond.
C7 .1 MF 200 V. Cond.
C8 .1 MF 200 V. Cond.
C9 .5 MF 200 V. Cond.
C10 .02 MF 200 V Cond.
C11 .1 MF 200 V. Cond.
C12 .1 MF 200 V. Cond.
C13 .00025 Cond.
C14 .0001 Cond.
C15 .02 MF 400 V. Cond.
C16 .05 MF 400 V. Cond.
C17 8 MF 450 V. Cond.
C18 12 MF 450 V. Cond.

All Condensers +− 10%
Unless Other-Wise
Specified

R1 150,000 Ohm .5 Watt Res.
R3 29,000 Ohm Var Res. With
R4 200 Ohm Fixed Bias Res
R5 25,000 Ohm 1 Watt Res.
R6 1,500 Ohm .5 Watt Res.
R7 .5 Meg .5 Watt Res.
R8 150,000 Ohm .5 Watt Res.
R9 150,000 Ohm .5 Watt Res.
R10 1. Meg 1 Watt Res.
R11 1. Meg 1 Watt Res.
R12 .5 Meg 1 Watt Res.
R13 10,000 Ohm 1 Watt Res.
R14 .25 Meg 1 Watt Res.
R15 29,000 Ohm Tone Control
R16 1,000 Ohm .5 Watt Res.
R17 15,000 Ohm 1 Watt Res.
R18 50,000 Ohm 1 Watt Res.
R19 2,000 Ohm 1 Watt Res.
R20 250 Ohm 2 Watt Res.
R21 20 Ohm Center Tapped Res.

All Resistors +− 10%
Unless Otherwise
Specified

Resistor Panel .5 Meg 1 Watt, 1; 10,000 Ohm 1 Watt, 1; .25 Meg 1 Watt, 1; 250 Ohm 2 Watt, 1; 1 Meg 1 Watt, 2; 15,000 Ohm 1 Watt, 1; 2,000 Ohm 1 Watt, 1

The Echophone, Model 90, is an 8-tube Superheterodyne, employing variable MU and Pentode Tubes.

The circuit consists of a pre-selector; one stage of high gain R.F. amplification using a type 235 tube; a first detector using a type 235 tube; one stage of intermediate frequency amplification using a type 235 tube; a second detector using a type 235 tube; a single audio stage using two type 247 Pentode tubes in a resistance coupled push-pull circuit; an oscillator using a type 227 tube, and a power supply system using a type 280 tube.

The antenna and pre-selector coils are mounted on top of the chassis, and are tuned by the first and second sections of the gang condenser.

MODEL 90
Voltage
Notes

ECHOPHONE RADIO MFG. CO.

Model 90—Superheterodyne

The first detector is of the grid biased type. The second detector is a type 235 tube used as a space charge detector. In this system, the screen grid is used as a control grid and a small positive voltage is applied to the top grid which is normally used as the control grid. A grid leak and condenser are used in the control grid circuit, and the negative voltage developed across the grid leak when strong signals are received is fed back to the R.F., first detector and I.F. grids which gives the semi-automatic volume control, and prevents overloading of the second detector. A phonograph pickup jack is incorporated in the grid return of this tube.

The R.F. Circuit is a high gain impedence coupled type with capacity coupling condenser mounted on coil. This condenser should require no adjustment after leaving factory. The fourth section of variable condenser tunes the R.F. circuit.

The oscillator circuit is of the conventional tuned grid type with plate feed back, and is inductively coupled to the grid circuit of the R.F. stage.

The intermediate frequency amplifier has a total of four tuned circuits, and is adjusted to 175 K.C.

The volume control acts as a dual control by varying the bias on the R.F. and I.F. tubes, and by varying the antenna input to the antenna coil.

The filter circuit consists of an 8 MF and a 12 MF electrolytic condenser, and the 1200 ohm speaker field. The field is in the positive lead, and the power tubes are self-biased by a resistor from the filament circuit to ground. A bucking coil is used in the speaker to keep the field ripple out of the voice coil.

VOLTAGE TESTS

All voltages given were tested on 250-volt scale of 1000 ohms per volt meter. All voltage tests made with volume on full and tone control in off position, no signal in receiver, line voltage 115 volts with A.C. line connected to tap of transformer as shipped from factory.

247 Plate to ground
230 to 240 volts

247 Screen to ground
235 to 250 volts

247 Bias-Center tap resistor to ground
13 to 18 volts

Second Det. Plate to ground
20 to 30 volts

Second Det. Screen Grid to ground
Less than 1 volt negative

Second Det. Control Grid to ground
1 to 2 volts

I.F. Plate to ground
235 to 250 volts

I.F. Screen to ground
70 to 90 volts

I.F. Cathode to ground
2 to 4 volts

R.F. Plate to ground.
235 to 250 volts

R.F. Screen to ground
70 to 90 volts

R.F. Cathode to ground
2 to 4 volts

First Det. Plate to ground
235 to 250 volts

First Det. Screen to ground
70 to 90 volts

First Det. Cathode to ground
4 to 7 volts

Oscillator Plate to ground
70 to 90 volts

Oscillator Cathode to ground
4 to 7 volts

Voltage drop across field
95 to 110 volts

Filament Voltage for all 2.5 volt tubes
2.4 to 2.6 volts

Filament Voltage for 280 tube
4.8 to 5 volts

R.F. and I.F. Cathode with volume control in off position
40 to 50 volts

On very strong signals a small negative voltage can be measured between the R.F., I.F., and first detector grid returns and ground, due to the action of automatic volume control.

THOMAS A. EDISON, INC.

MODELS R4,R5,C4
Chassis Views

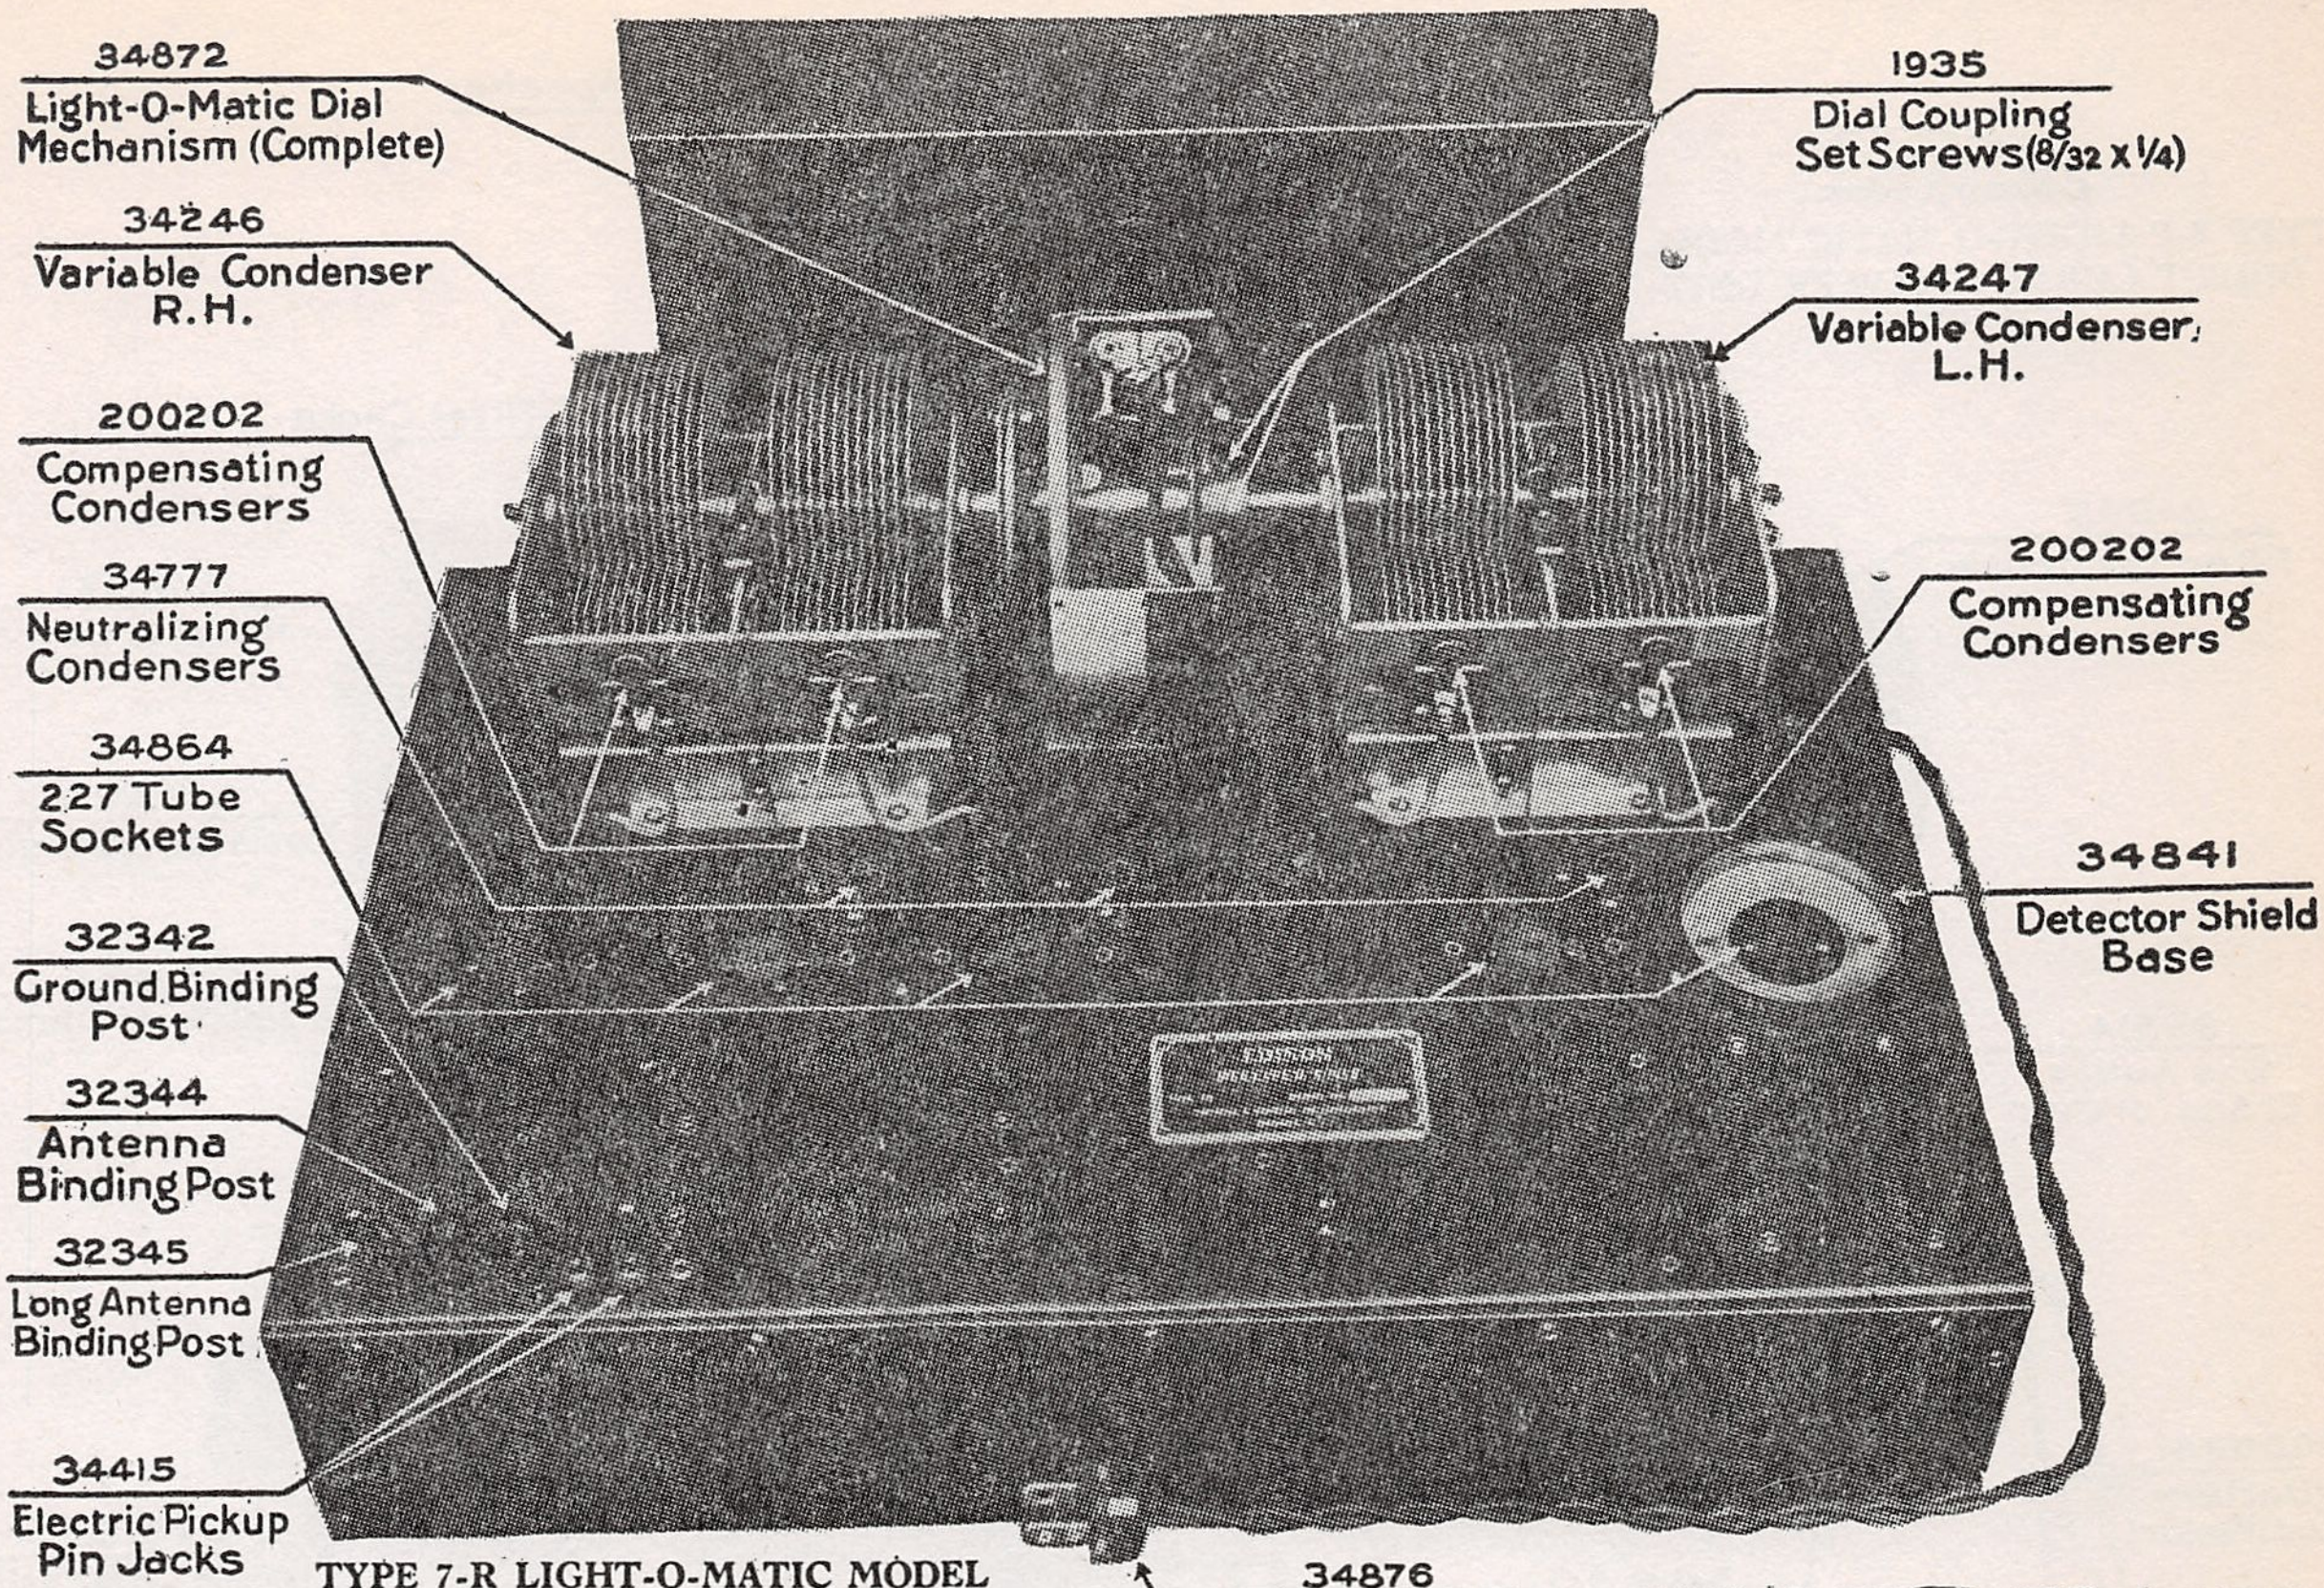
34872
Light-O-Matic Dial Mechanism (Complete)
1935
Dial Coupling Set Screws (8/32 x 1/4)
34246
Variable Condenser R.H.
34247
Variable Condenser L.H.
200202
Compensating Condensers
34777
Neutralizing Condensers
200202
Compensating Condensers
34864
227 Tube Sockets
34841
Detector Shield Base
32342
Ground Binding Post
32344
Antenna Binding Post
32345
Long Antenna Binding Post
34415
Electric Pickup Pin Jacks
34876
Line Switch Plug (Black-Male)

TYPE 7-R LIGHT-O-MATIC MODEL
60 CYCLE A.C. RECEIVER UNIT
(TOP VIEW)

TYPE 7-R LIGHT-O-MATIC MODEL
60 CYCLE A.C. RECEIVER UNIT
(BOTTOM VIEW)

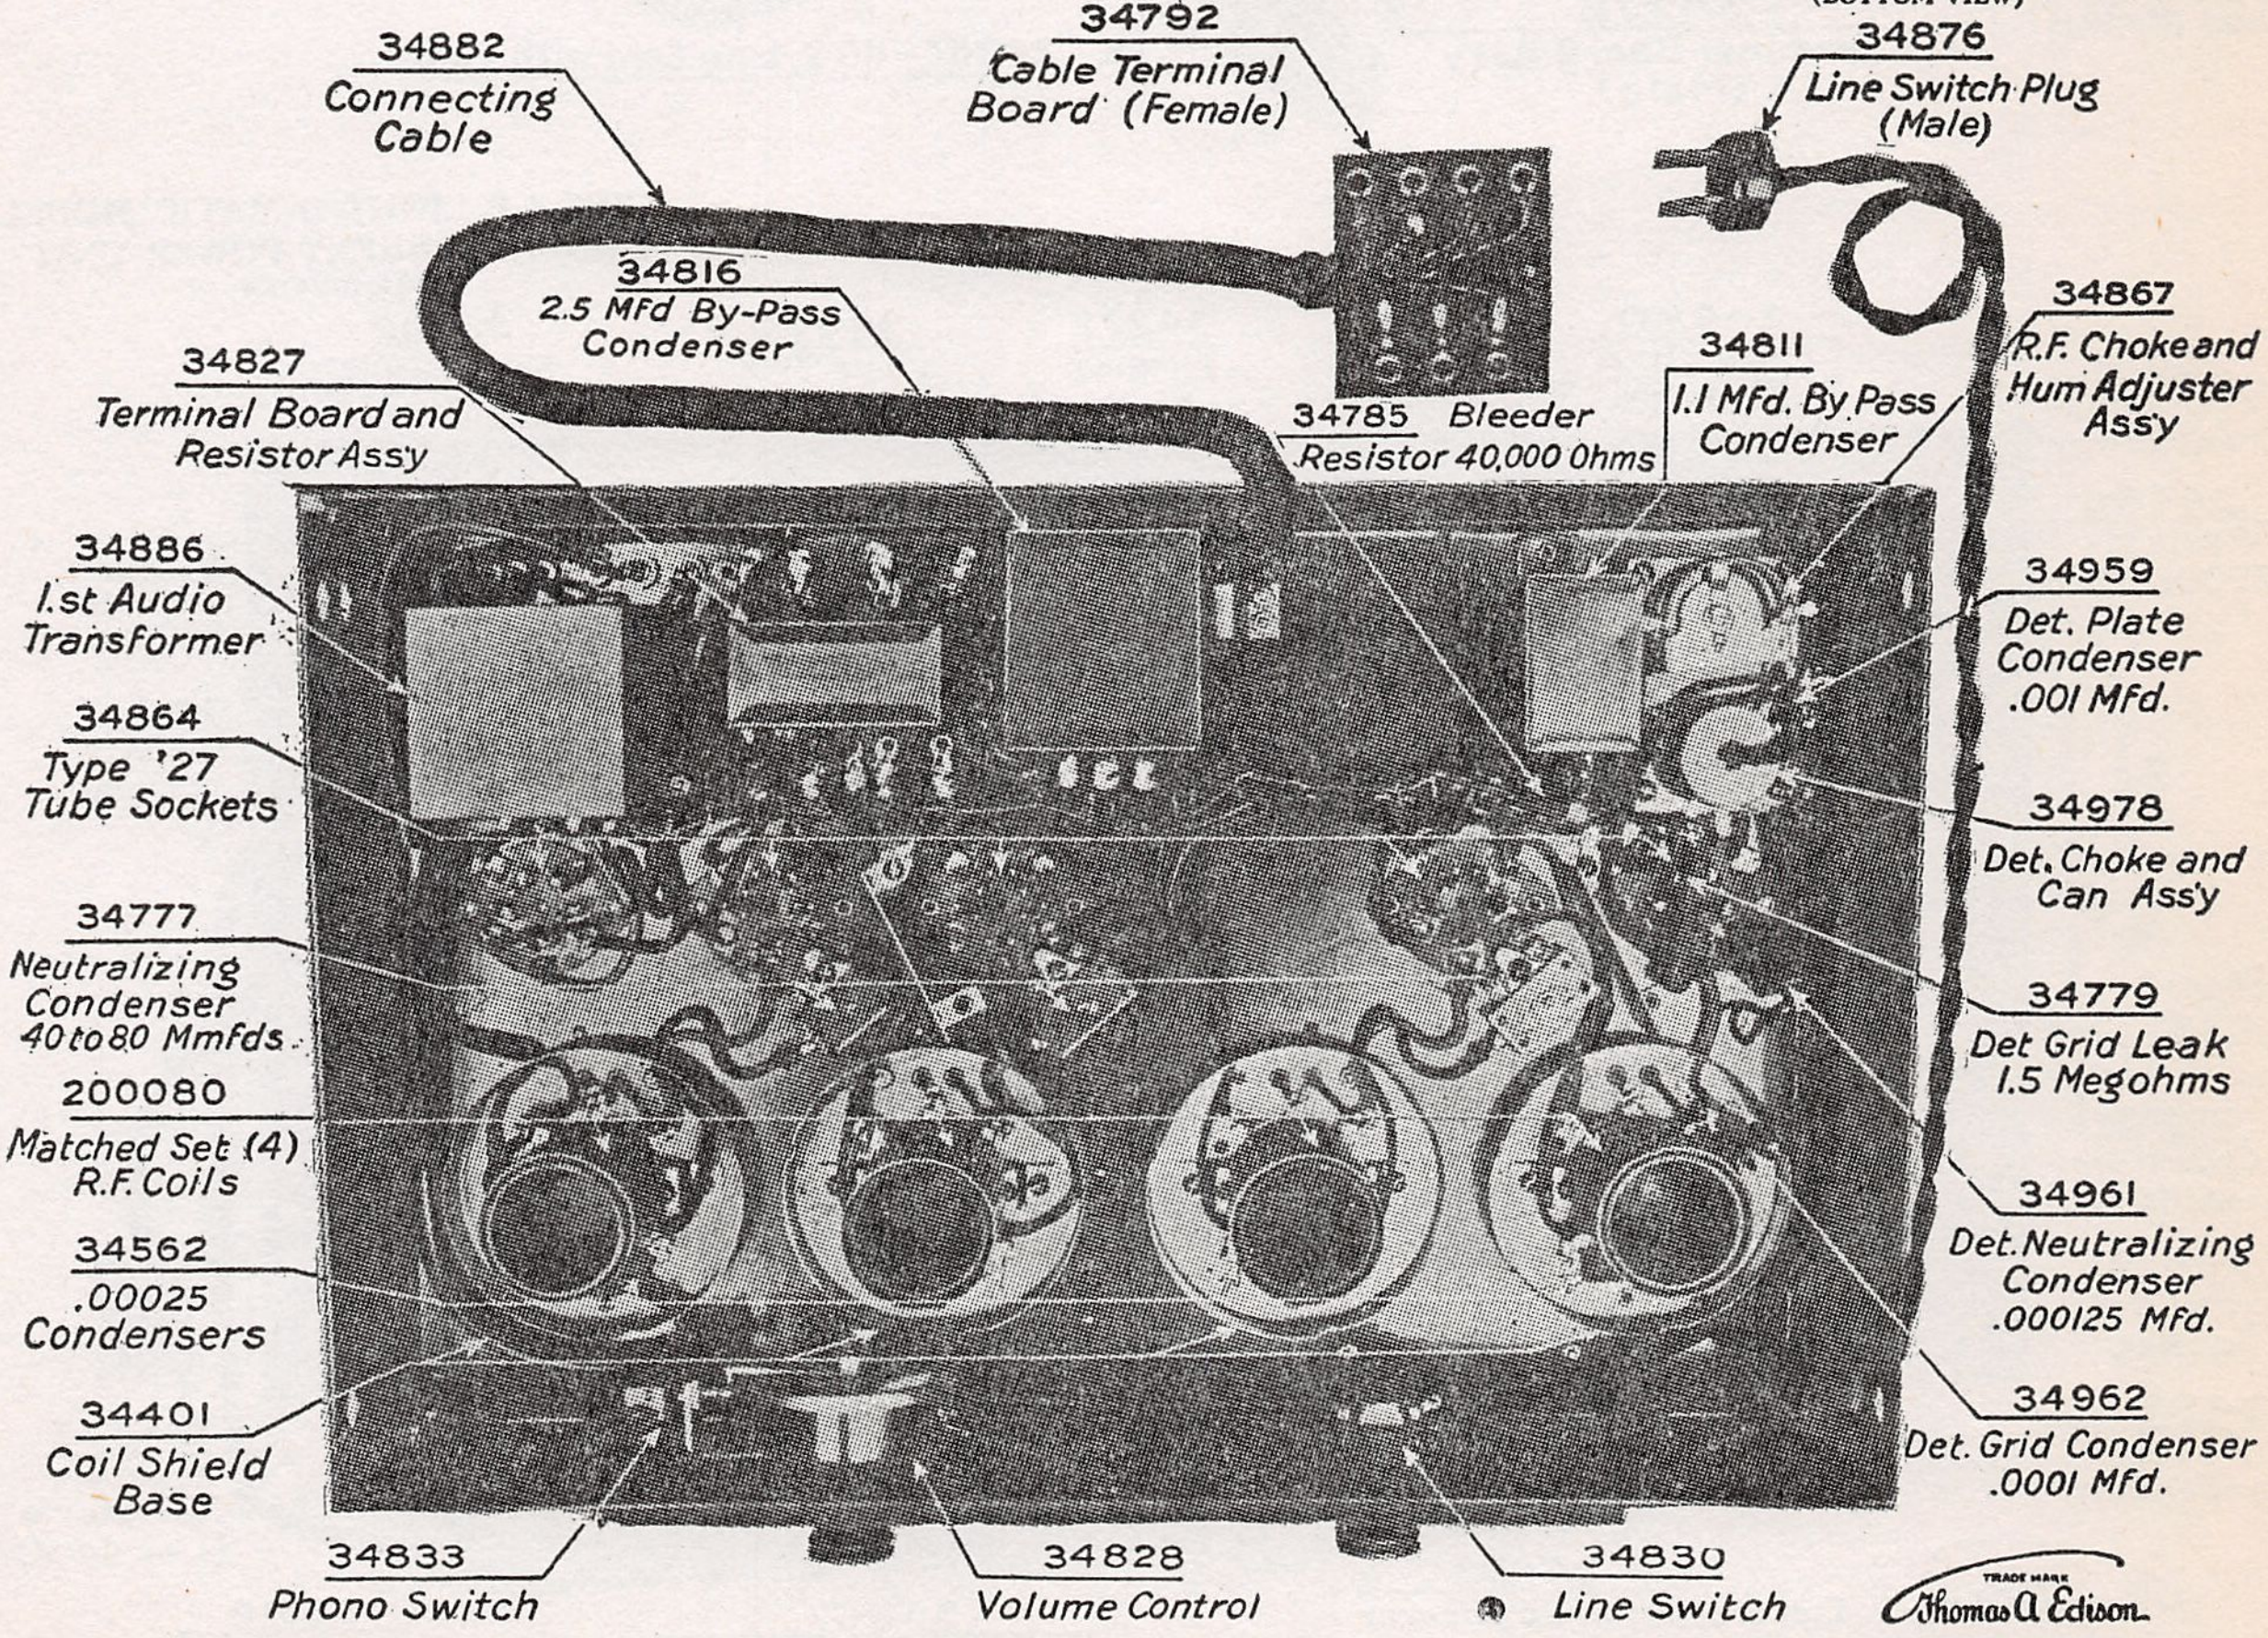
34882
Connecting Cable
34792
Cable Terminal Board (Female)
34876
Line Switch Plug (Male)
34816
2.5 Mfd By-Pass Condenser
34827
Terminal Board and Resistor Ass'y
34785 Bleeder Resistor 40,000 Ohms
34811
1.1 Mfd. By Pass Condenser
34867
R.F. Choke and Hum Adjuster Ass'y
34886
1st Audio Transformer
34959
Det. Plate Condenser .001 Mfd.
34864
Type '27 Tube Sockets
34978
Det. Choke and Can Ass'y
34777
Neutralizing Condenser 40 to 80 Mmfds.
34779
Det Grid Leak 1.5 Megohms
200080
Matched Set (4) R.F. Coils
34961
Det. Neutralizing Condenser .000125 Mfd.
34562
.00025 Condensers
34962
Det. Grid Condenser .0001 Mfd.
34401
Coil Shield Base
34833
Phono Switch
34828
Volume Control
34830
Line Switch

TRADE MARK
Thomas A. Edison

MODELS R4,R5,C4
Power Unit Chassis Views

THOMAS A. EDISON, INC.

Thomas A. Edison

TYPE 8-P LIGHT-O-MATIC MODEL
DIRECT CURRENT POWER UNIT
(TOP VIEW)

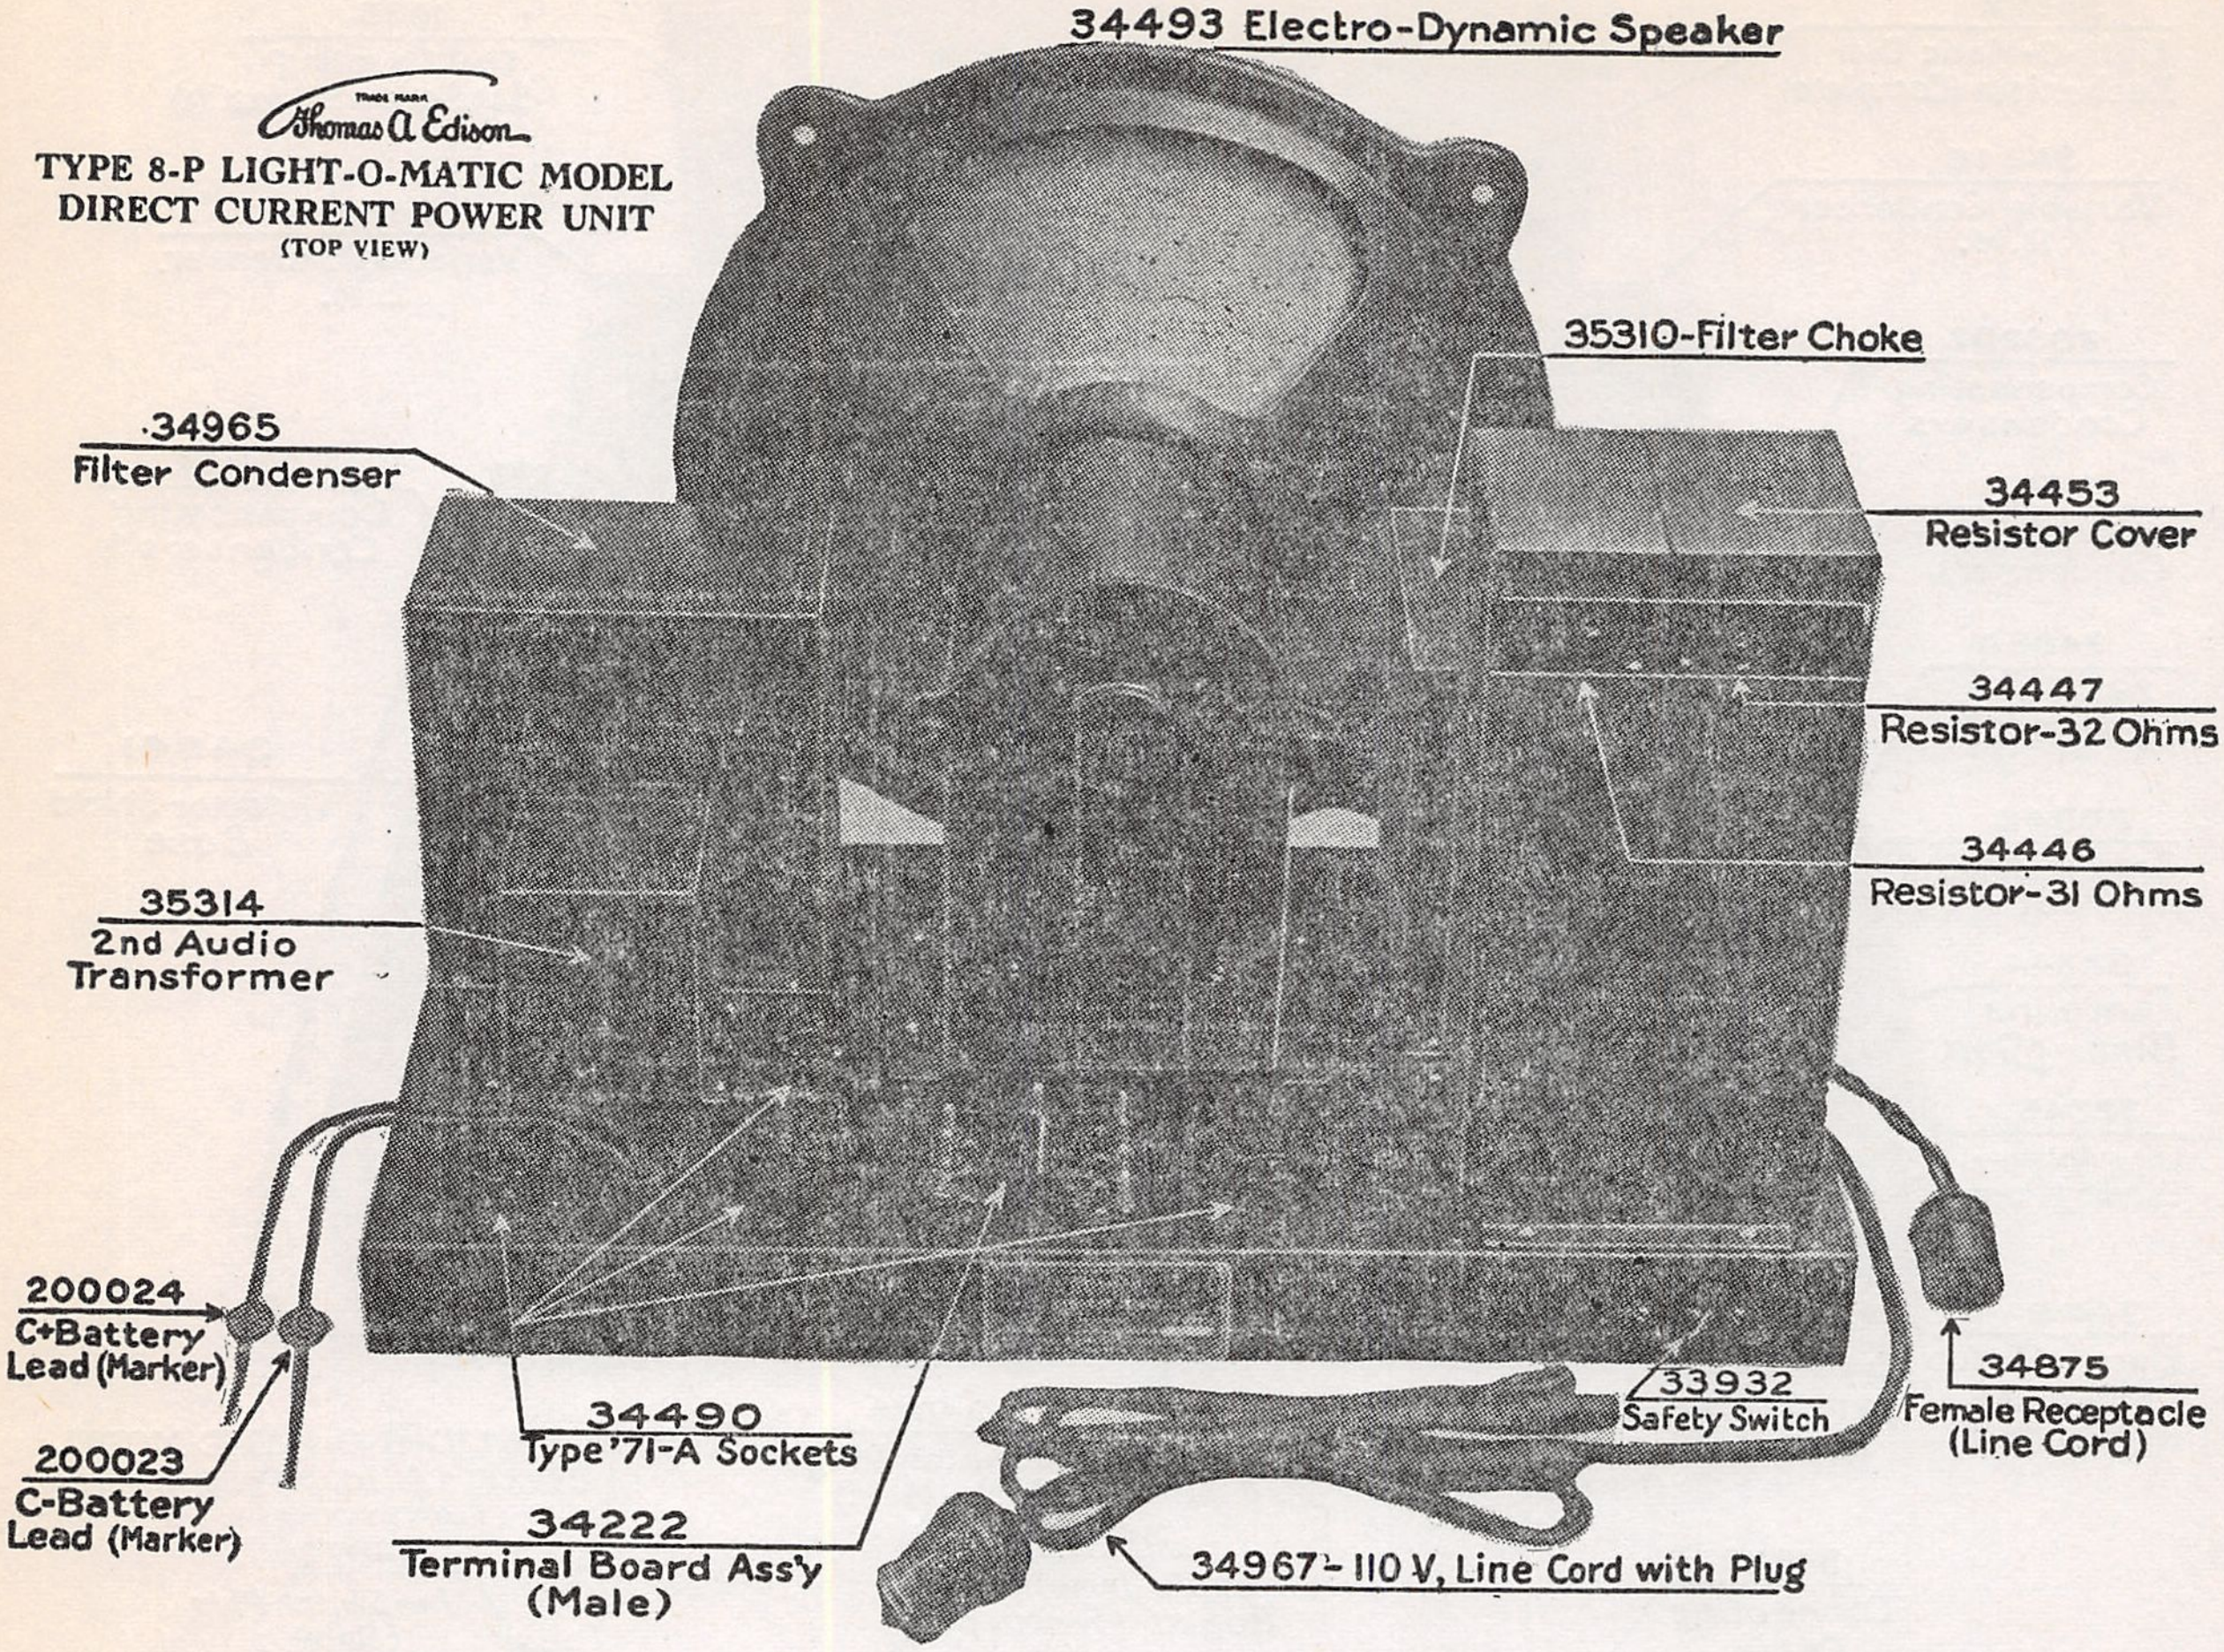
34493 Electro-Dynamic Speaker
35310-Filter Choke
34965 Filter Condenser
34453 Resistor Cover
34447 Resistor-32 Ohms
34446 Resistor-31 Ohms
35314 2nd Audio Transformer
200024 C+Battery Lead (Marker)
200023 C-Battery Lead (Marker)
34490 Type '71-A Sockets
34222 Terminal Board Ass'y (Male)
33932 Safety Switch
34875 Female Receptacle (Line Cord)
34967- 110 V, Line Cord with Plug

TYPE 8-P LIGHT-O-MATIC MODEL
DIRECT CURRENT POWER UNIT
(BOTTOM VIEW)

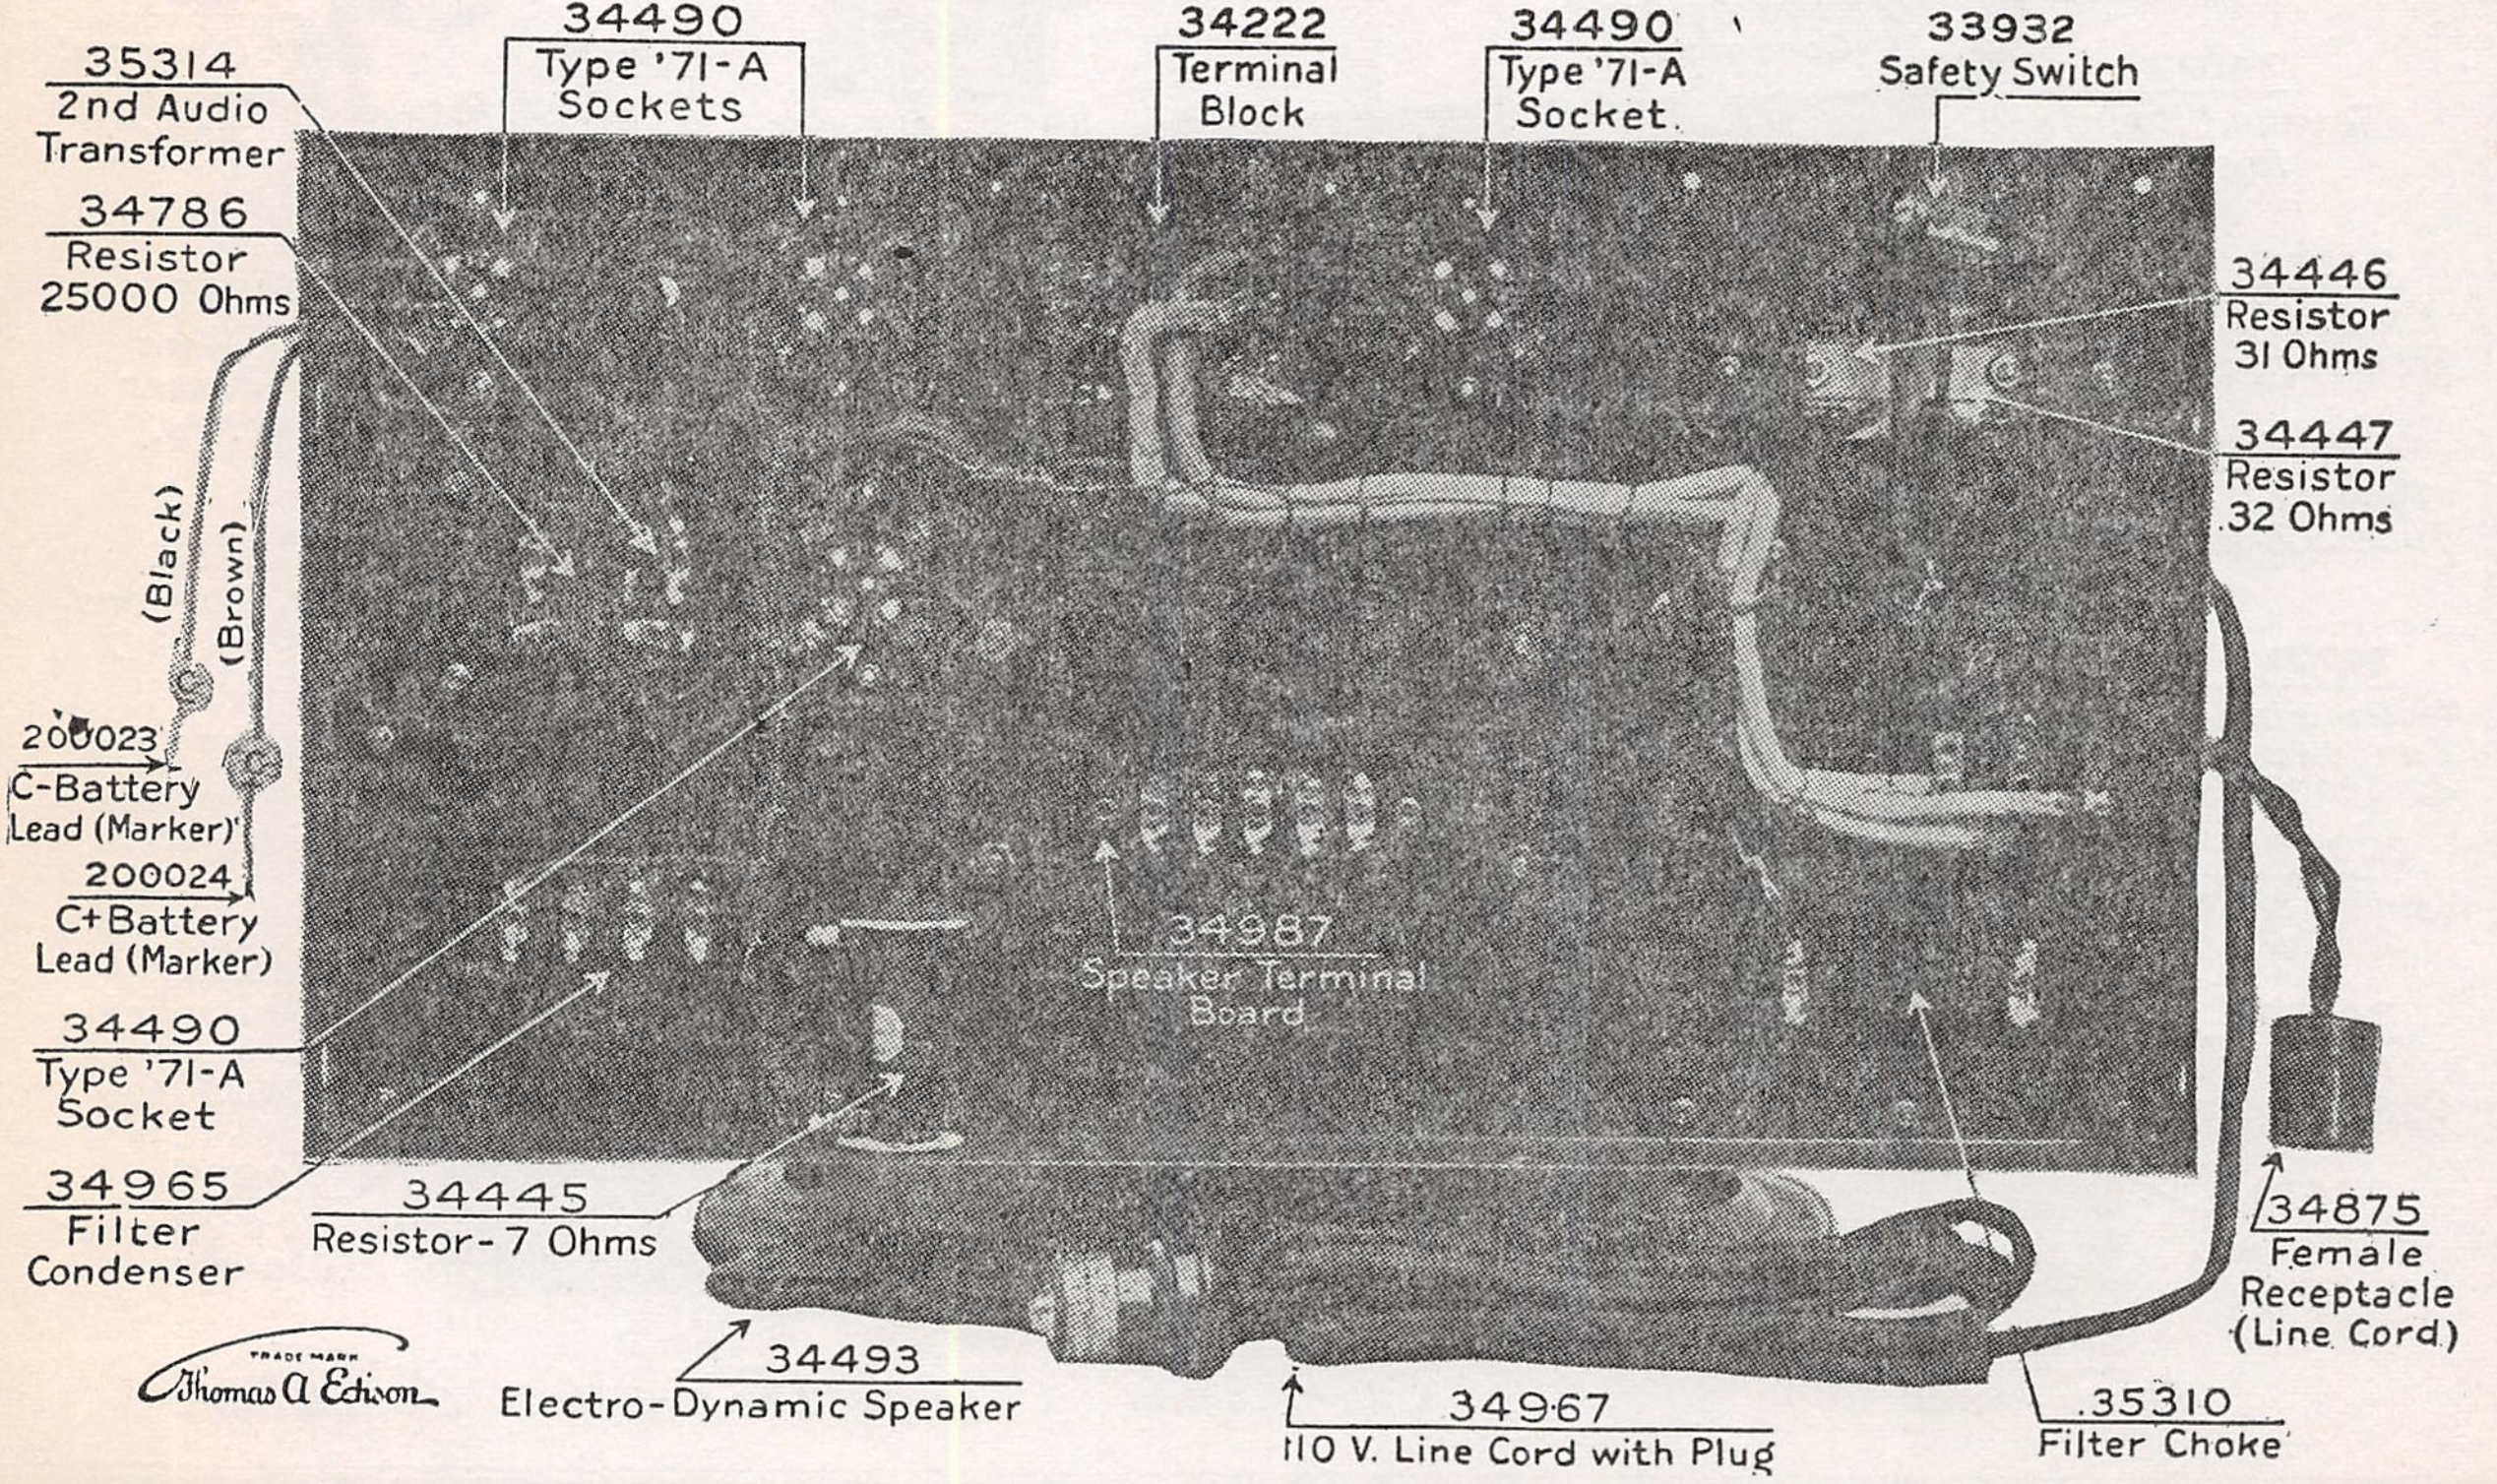
35314 2nd Audio Transformer
34490 Type '71-A Sockets
34222 Terminal Block
34490 Type '71-A Socket
33932 Safety Switch
34786 Resistor 25000 Ohms
34446 Resistor 31 Ohms
34447 Resistor .32 Ohms
(Black)
(Brown)
200023 C-Battery Lead (Marker)
200024 C+Battery Lead (Marker)
34987 Speaker Terminal Board
34490 Type '71-A Socket
34965 Filter Condenser
34445 Resistor-7 Ohms
34875 Female Receptacle (Line Cord)
34493 Electro-Dynamic Speaker
34967 110 V. Line Cord with Plug
35310 Filter Choke
Thomas A. Edison

ELECTRAD, INC.

MODEL A-250
MODEL C-250

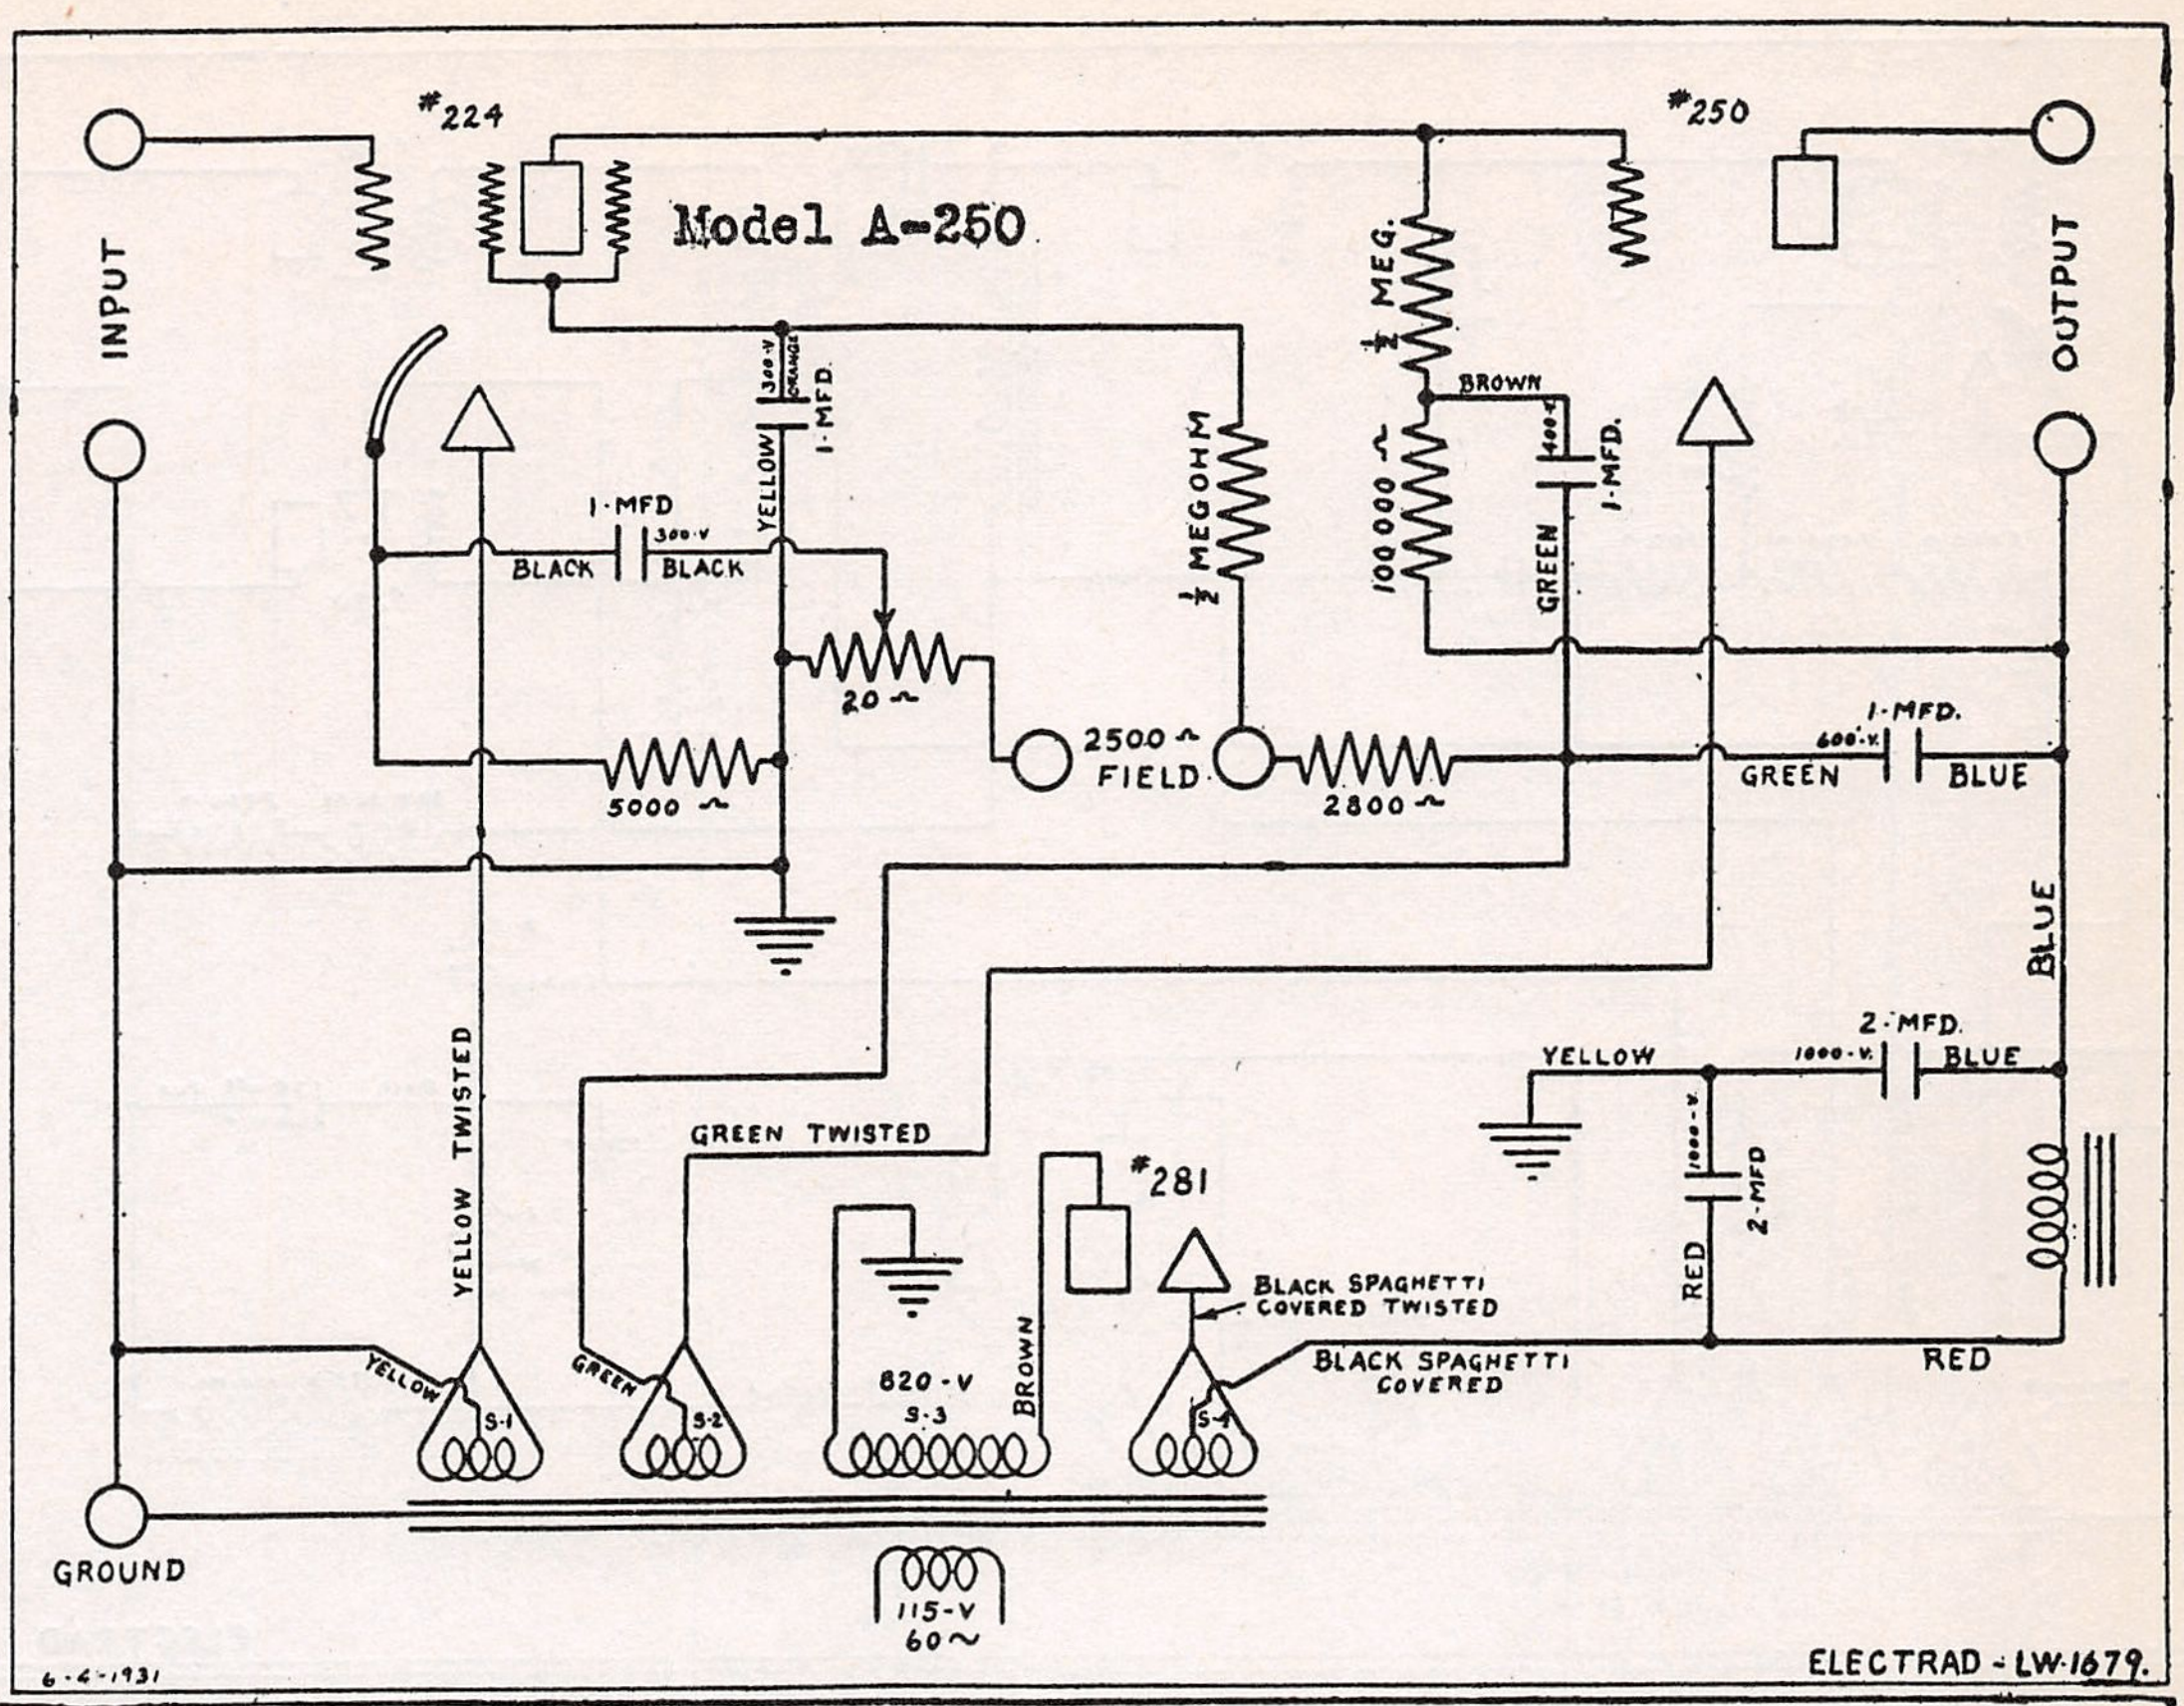
#224
Model A-250
#250
INPUT
OUTPUT
300-V
ORANGE
YELLOW
1-MFD.
1-MFD
300-V
BLACK
BLACK
20 ~
5000 ~
1/2 MEGOHM
1/4 MEG.
BROWN
100 000 ~
GREEN
1-MFD.
2500 ~
FIELD
2800 ~
1-MFD.
600-V
GREEN
BLUE
BLUE
2-MFD.
1000-V
YELLOW
BLUE
1000-V
RED
2-MFD
YELLOW TWISTED
GREEN TWISTED
#281
BLACK SPAGHETTI COVERED TWISTED
BLACK SPAGHETTI COVERED
RED
YELLOW
GREEN
S-1
S-2
820-V
S-3
BROWN
S-4
GROUND
115-V
60~
6-4-1931
ELECTRAD - LW-1679.

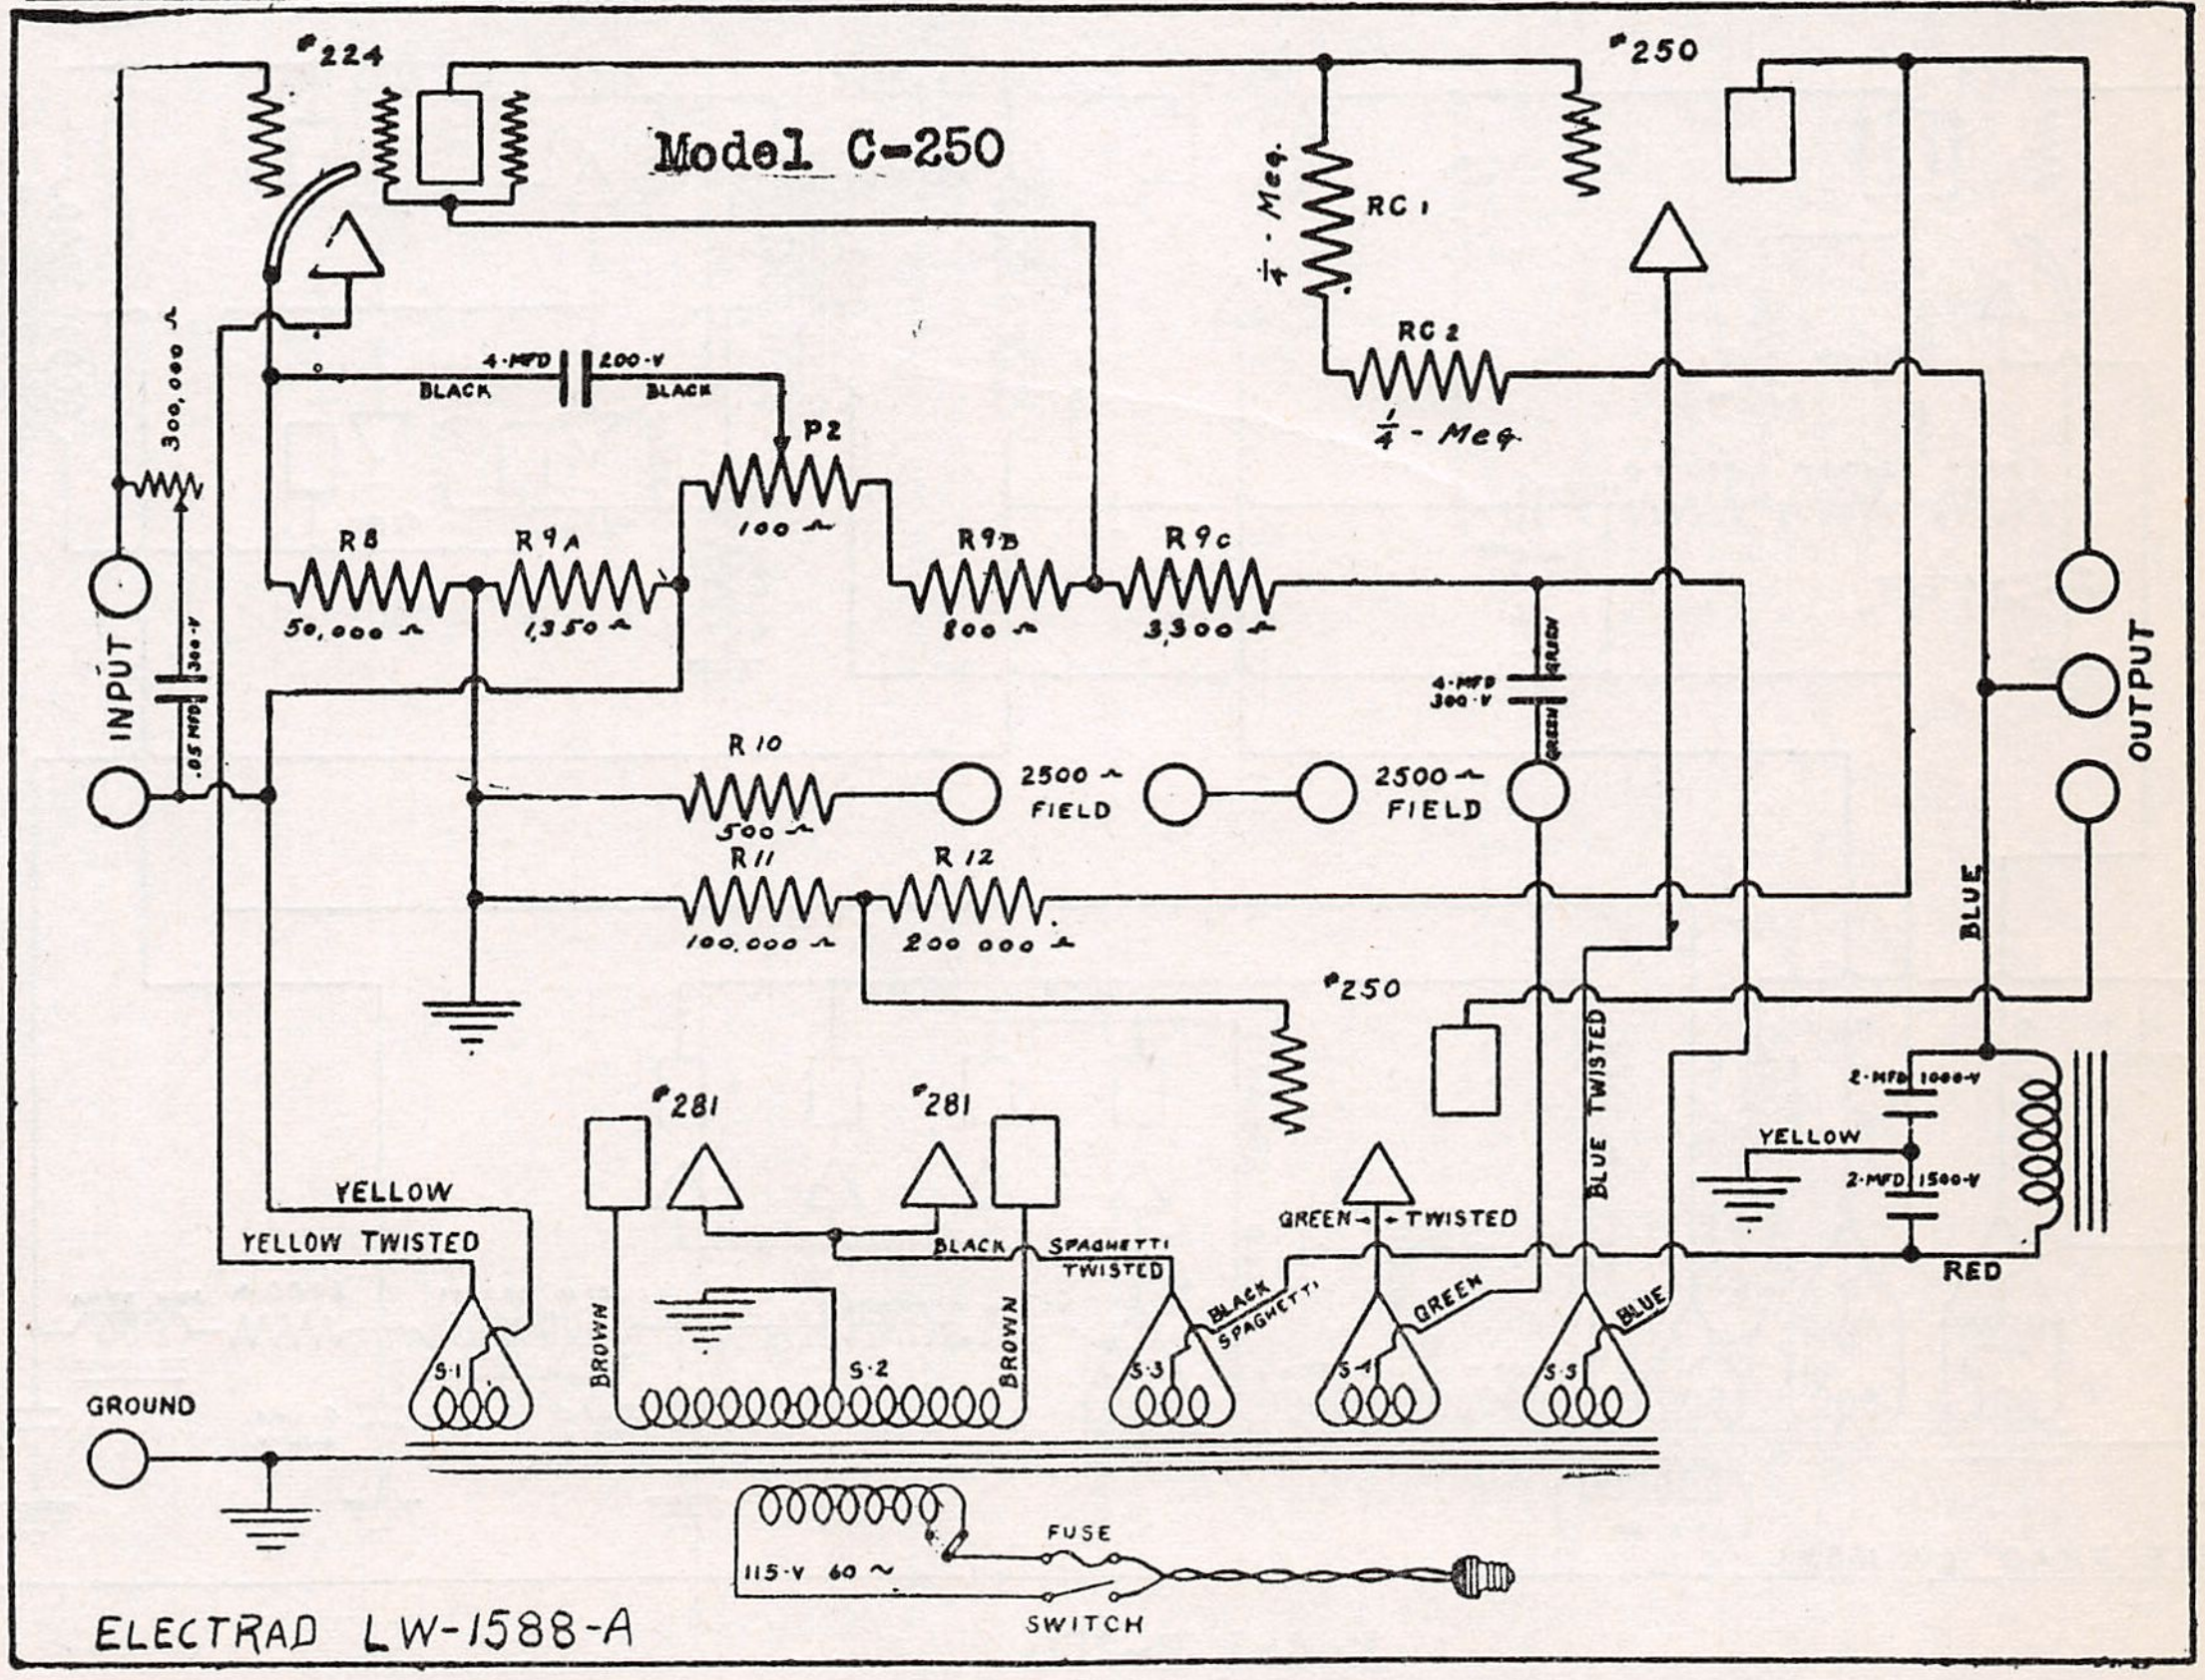
#224
Model C-250
#250
1/4 - Meg.
RC 1
RC 2
1/4 - Meg.
300,000 ~
4-MFD
200-V
BLACK
BLACK
P2
100 ~
R8
50,000 ~
R9A
1,350 ~
R9B
800 ~
R9C
3,300 ~
INPUT
.05 MFD
300-V
4-MFD
300-V
GREEN
GREEN
OUTPUT
R 10
500 ~
2500 ~
FIELD
2500 ~
FIELD
R 11
100,000 ~
R 12
200 000 ~
#250
BLUE
BLUE TWISTED
2-MFD 1000-V
YELLOW
2-MFD 1500-V
RED
#281
#281
YELLOW
YELLOW TWISTED
BLACK
SPAGHETTI
TWISTED
GREEN
TWISTED
BLACK SPAGHETTI
GREEN
BLUE
BROWN
S-1
S-2
BROWN
S-3
S-4
S-5
GROUND
FUSE
115-V 60 ~
SWITCH
ELECTRAD LW-1588-A

MODEL D-250
MODEL E-250

ELECTRAD, INC.

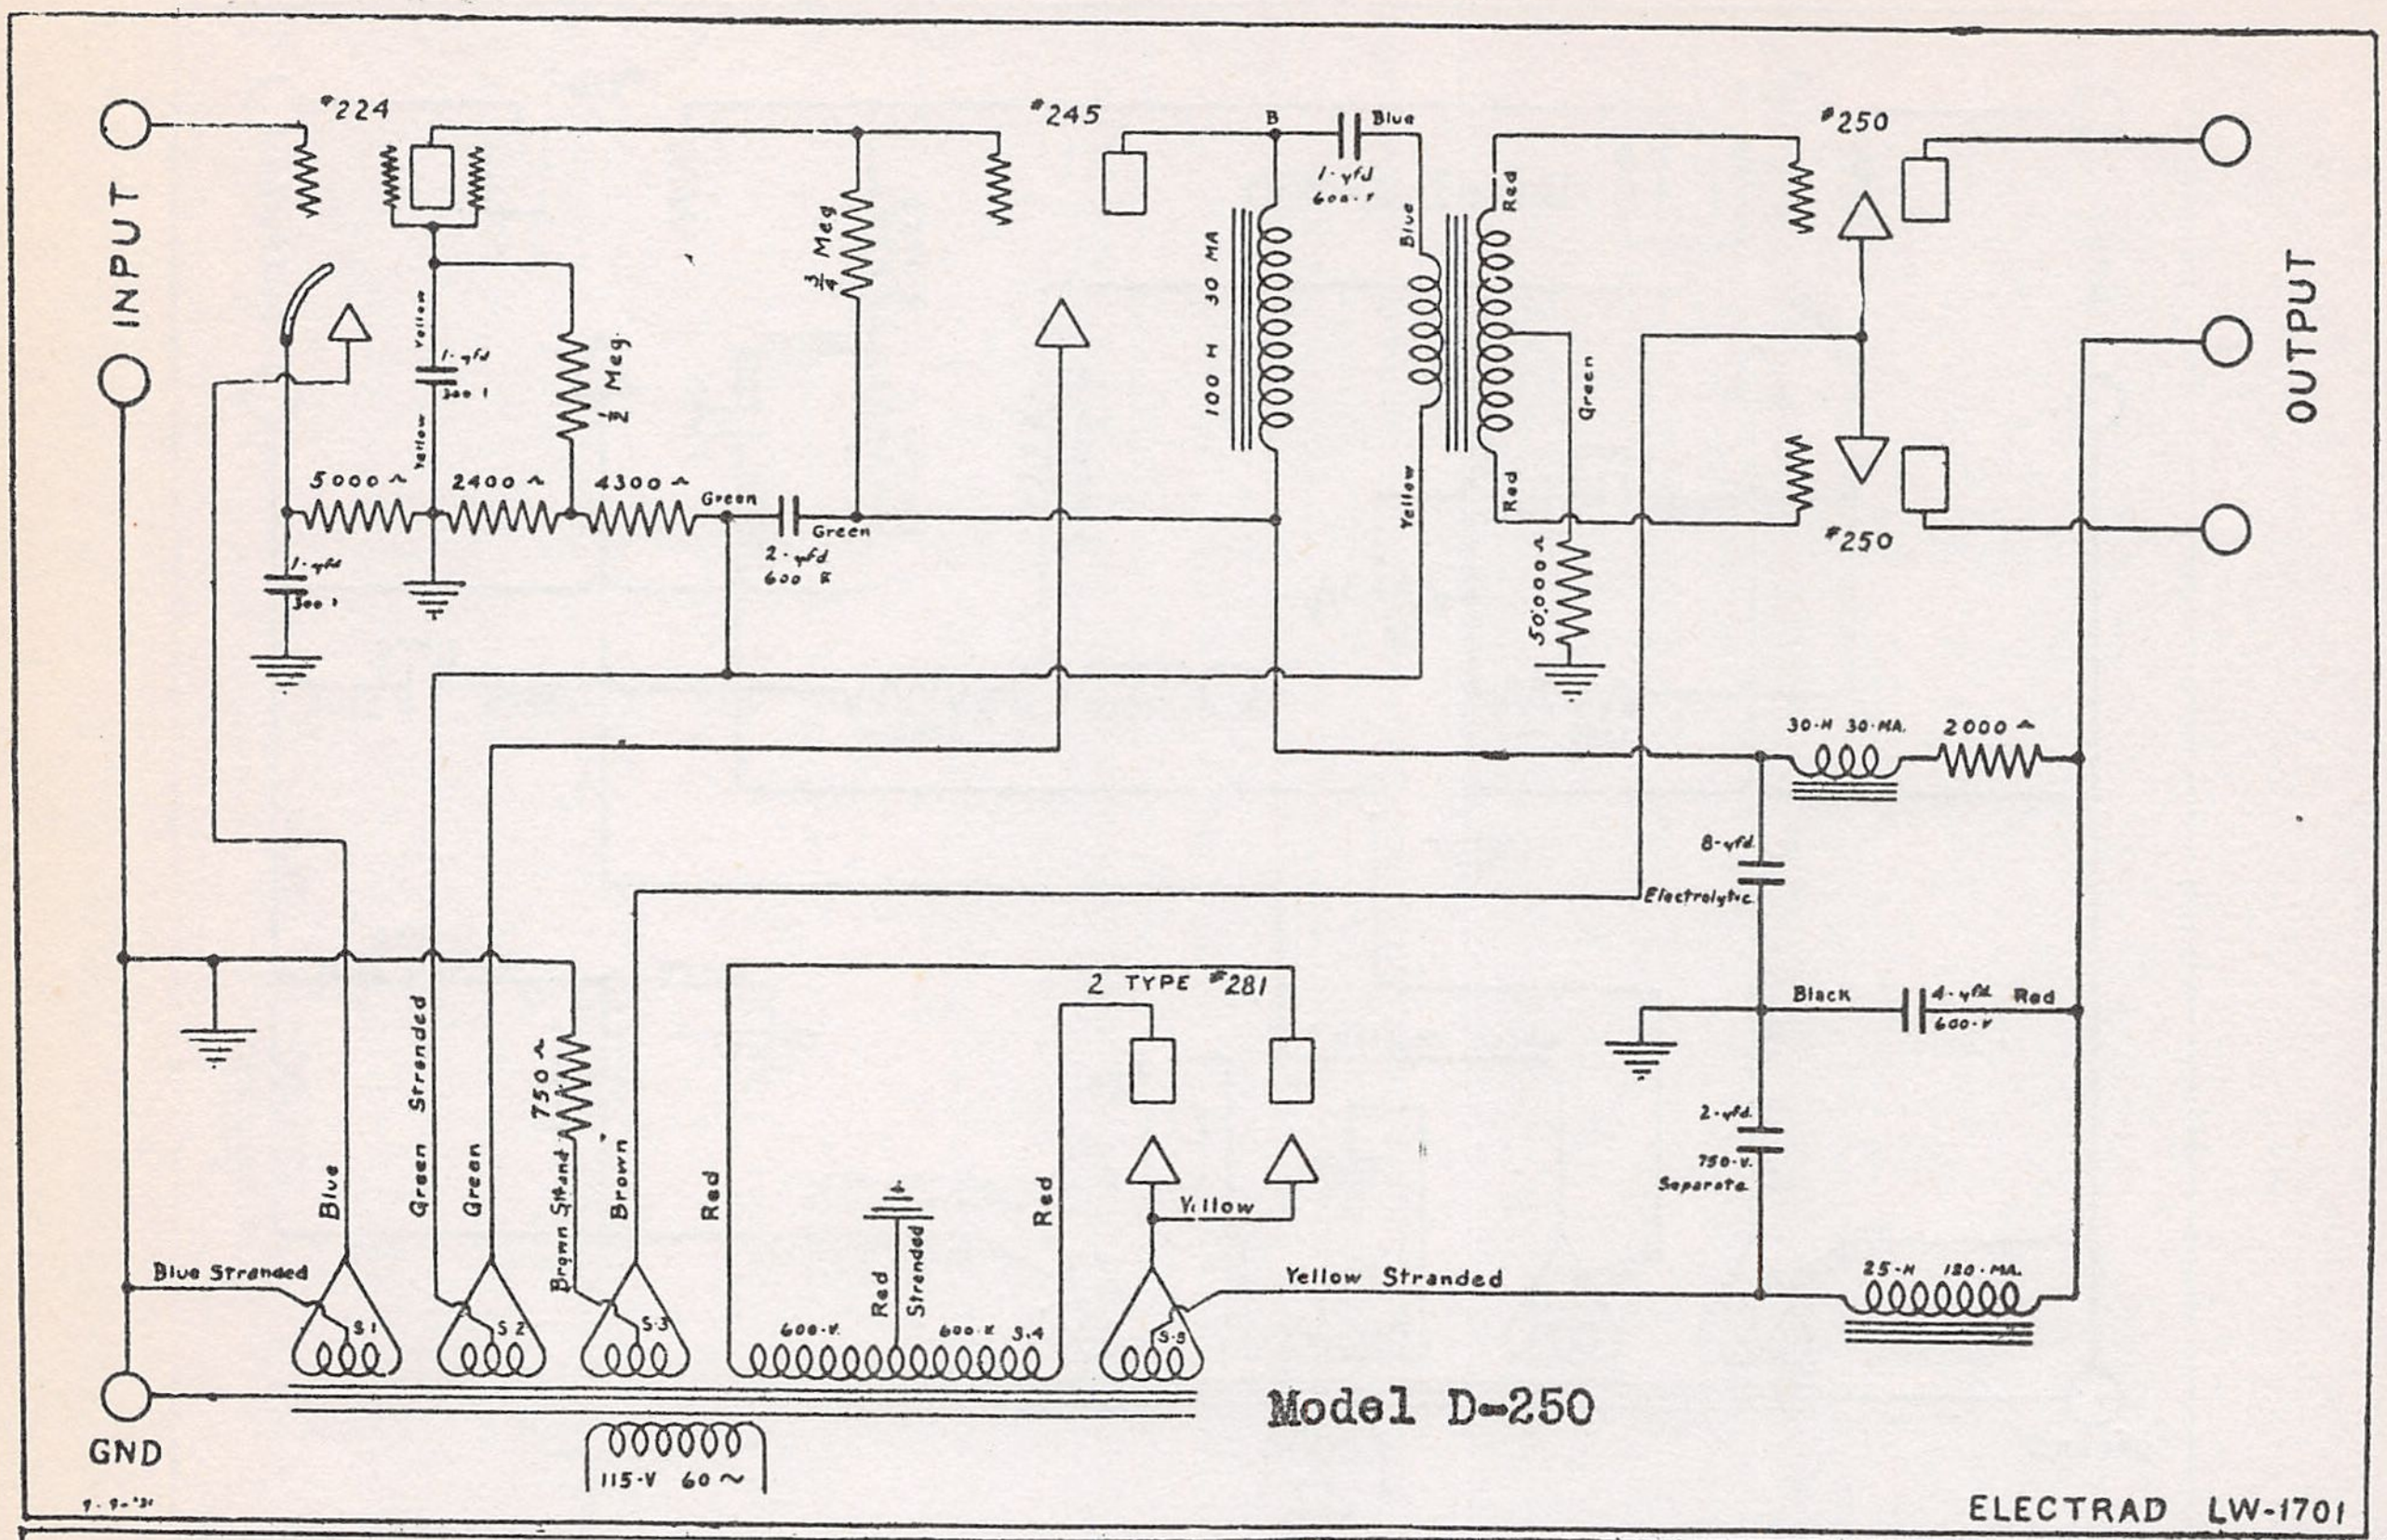
INPUT
#224
#245
B
Blue
1-μfd 600-v
100 H 30 MA
Blue
Red
#250
OUTPUT
1/4 Meg
Yellow
1-μfd 300-v
1/2 Meg
5000 Ω
2400 Ω
4300 Ω
Green
Green
2-μfd 600 v
Yellow
Green
Red
50,000 Ω
#250
30-H 30-MA
2000 Ω
8-μfd Electrolytic
Black
4-μfd 600-v
Red
2-μfd 750-v Separate
25-H 120-MA
Yellow Stranded
2 TYPE #281
Yellow
Blue Stranded
Blue
Green Stranded
Green
750 Ω
Brown Strand
Brown
Red
Red Stranded
600-v
600-v
S-1
S-2
S-3
S-4
S-5
Red
GND
115-V 60 ~
ELECTRAD LW-1701
9-9-'31

Model D-250

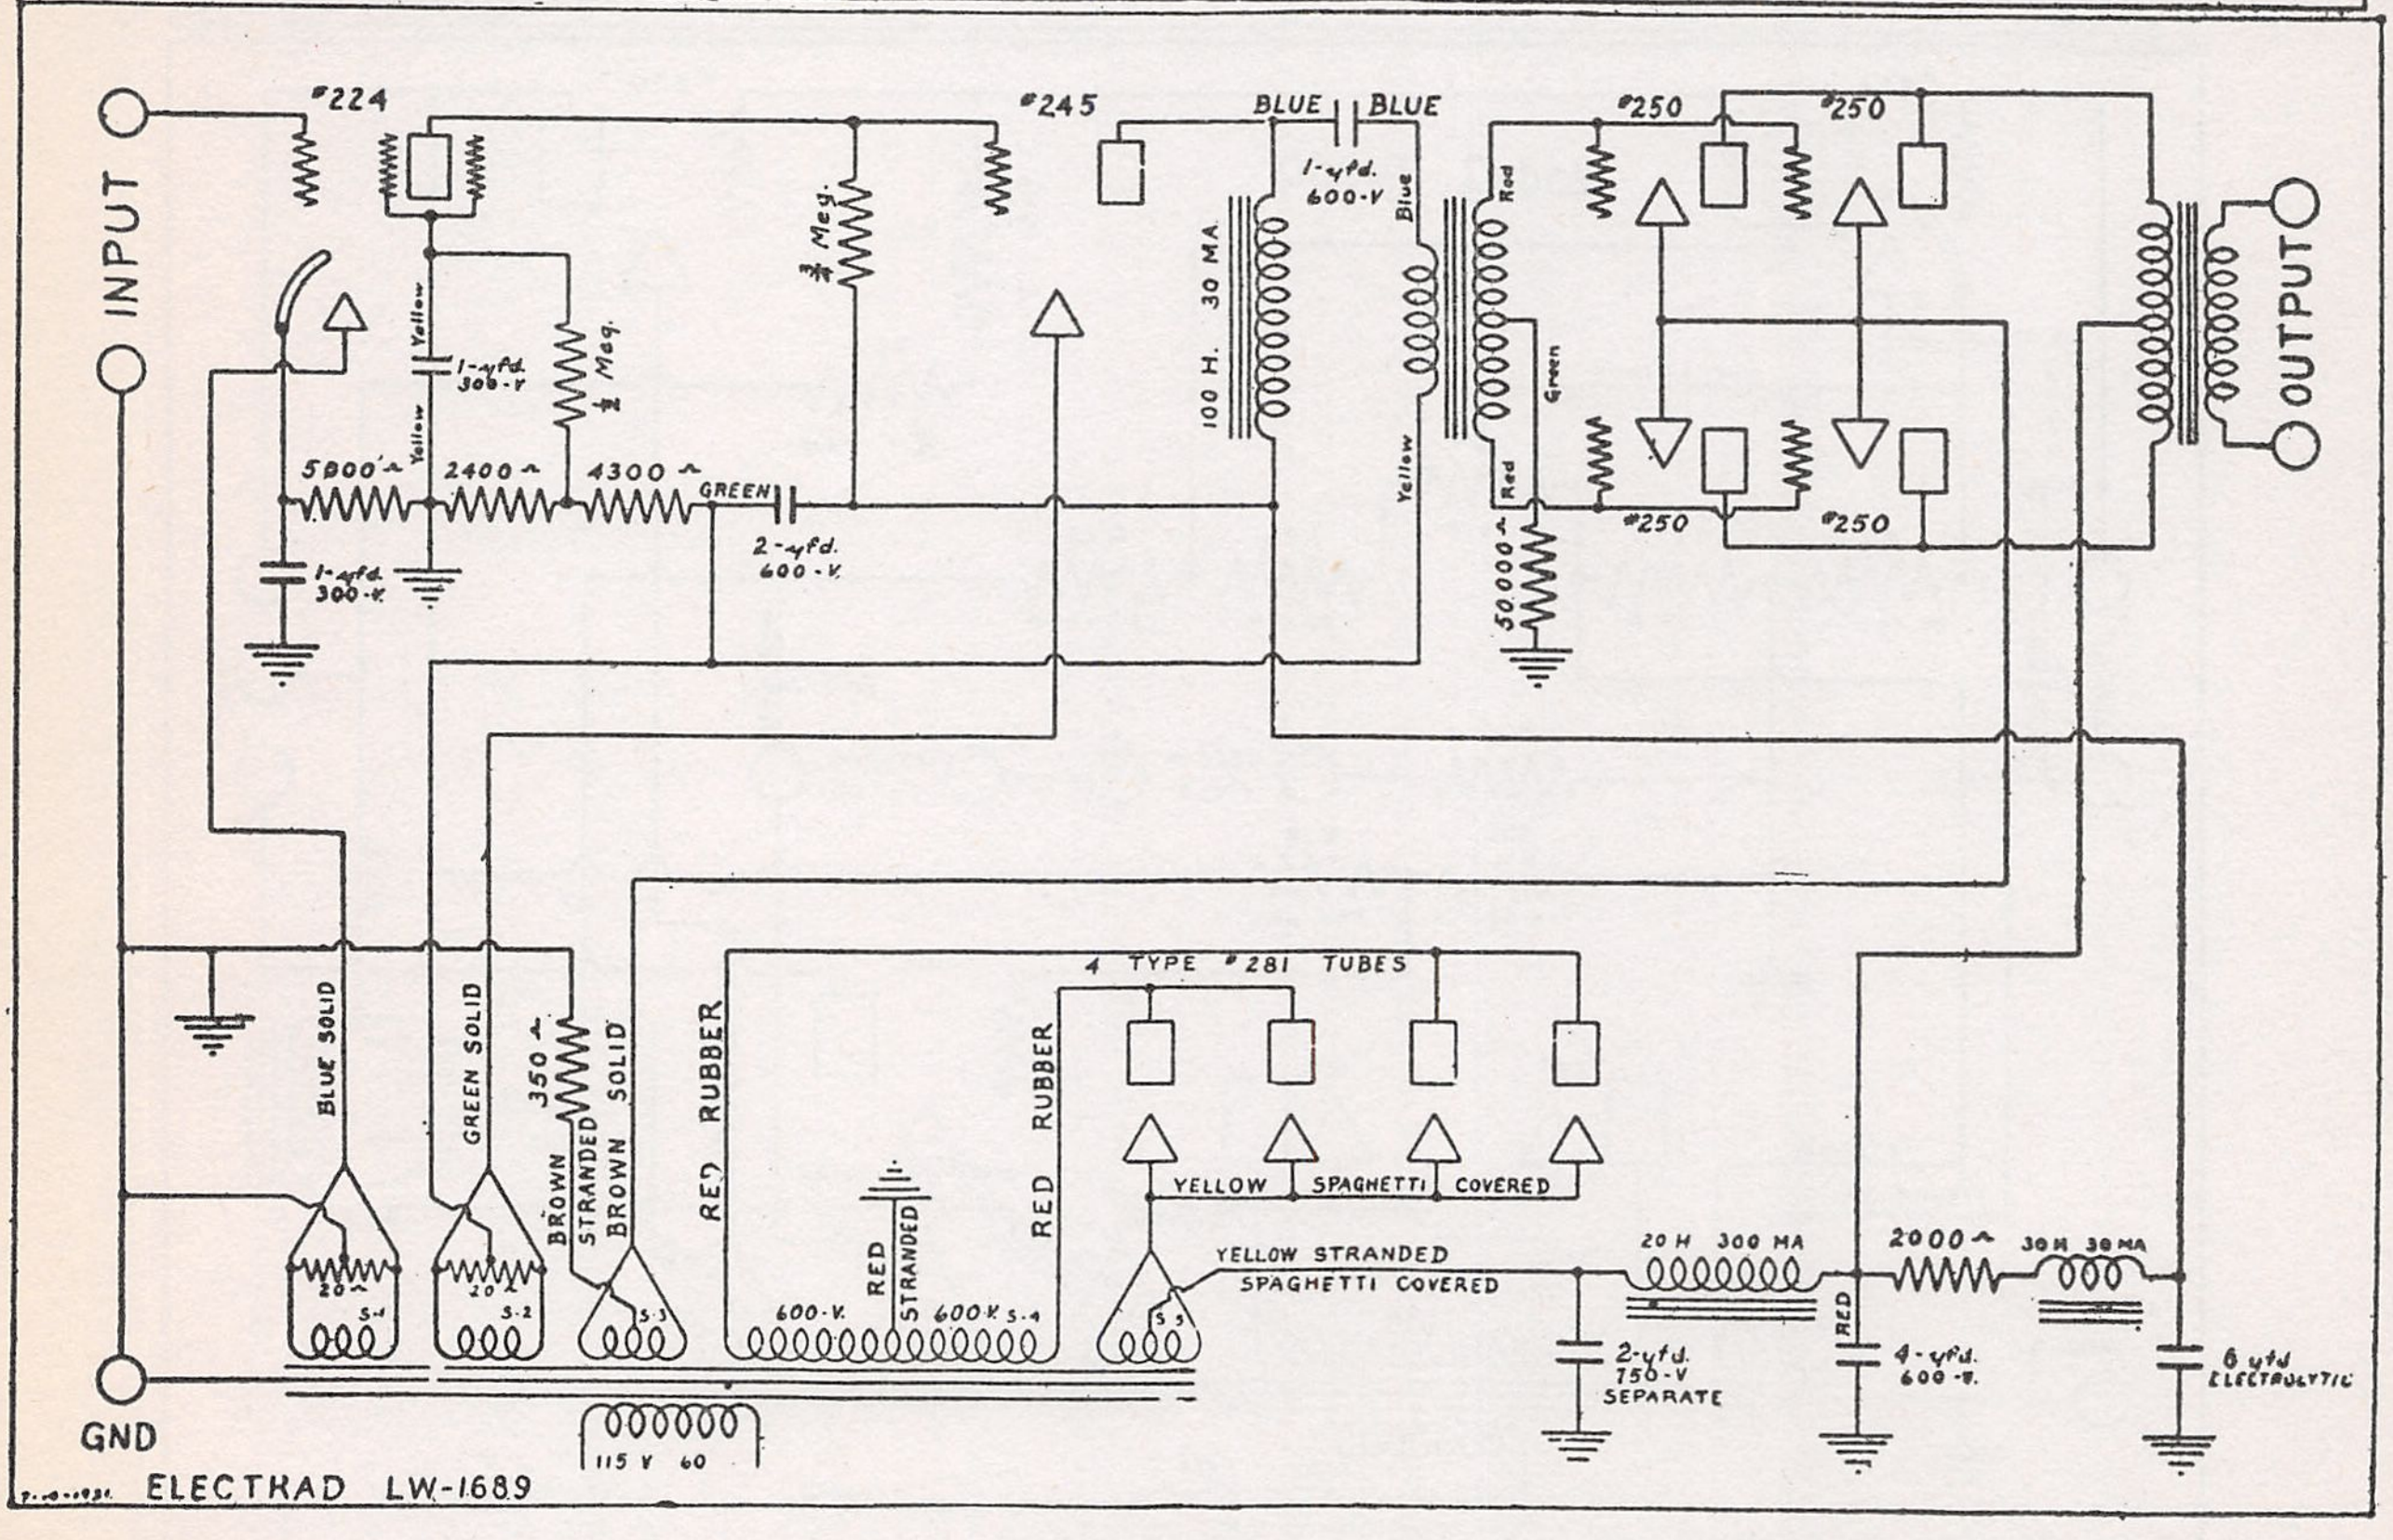
INPUT
#224
#245
BLUE
BLUE
1-μfd 600-V
100 H 30 MA
Blue
Red
#250
#250
OUTPUT
1/4 Meg
Yellow
1-μfd 300-V
Yellow
1/2 Meg
5800 Ω
2400 Ω
4300 Ω
GREEN
1-μfd 300-V
2-μfd 600-V
Yellow
Green
Red
#250
#250
50000 Ω
BLUE SOLID
GREEN SOLID
350 Ω
BROWN STRANDED
BROWN SOLID
RED RUBBER
RED RUBBER
RED STRANDED
600-V
600-V
4 TYPE #281 TUBES
YELLOW SPAGHETTI COVERED
YELLOW STRANDED SPAGHETTI COVERED
20 H 300 MA
2000 Ω
30 H 30 MA
RED
2-μfd 750-V SEPARATE
4-μfd 600-V
6 μfd ELECTROLYTIC
20 Ω
20 Ω
S-1
S-2
S-3
S-4
S-5
GND
115 V 60
7-10-1931
ELECTRAD LW-1689

Model E-250

MODEL 31, 32, 33, AR-3
Schematic

ELECTRICAL RESEARCH LABORATORIES, Inc.

PART No.	20013
DATE	8-26-29
THIS SUPERSEDES DRAWING DATED	

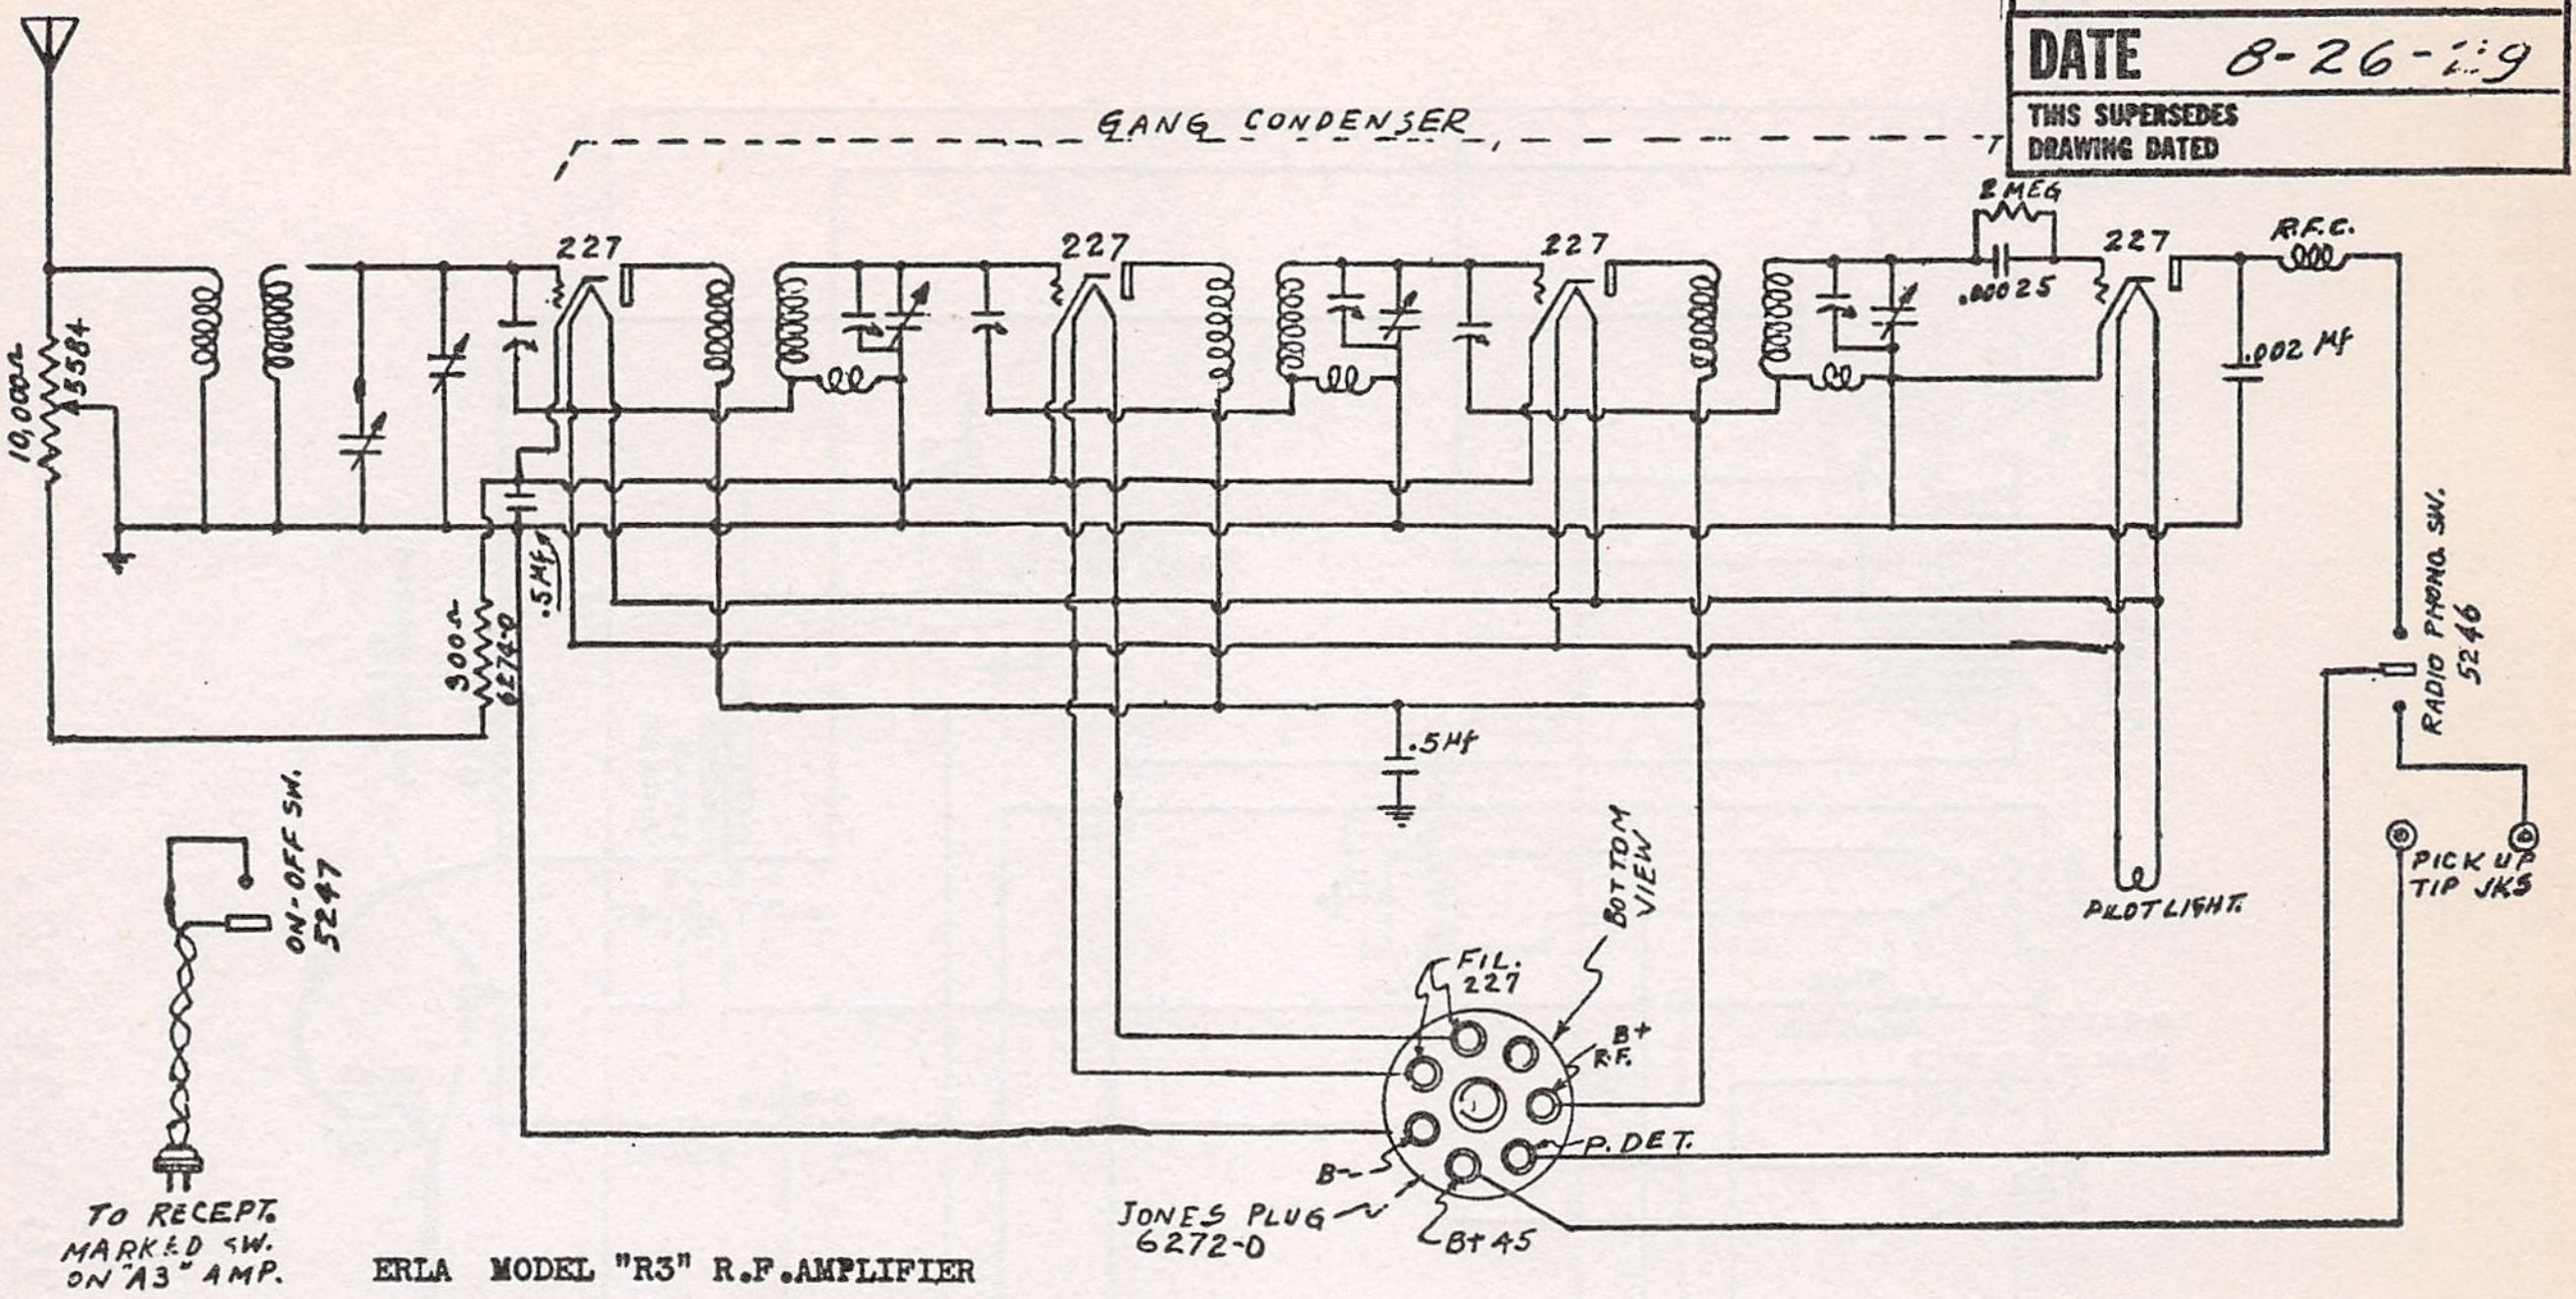
GANG CONDENSER
227
227
227
227
10,000Ω 3584
300Ω 6276-0
.5 Mf
2 MEG
.00025
R.F.C.
.002 Mf
.5 Mf
RADIO PHONO SW. 5246
PICK UP TIP JKS
PILOT LIGHT
BOTTOM VIEW
FIL. 227
B+ RF.
P. DET.
B−
B+45
JONES PLUG 6272-0
ON-OFF SW. 5247
TO RECEPT. MARKED SW. ON "A3" AMP.

ERLA MODEL "R3" R.F.AMPLIFIER

PART No.	20012
DATE	1-6-30
THIS SUPERSEDES DRAWING DATED	8-26-29

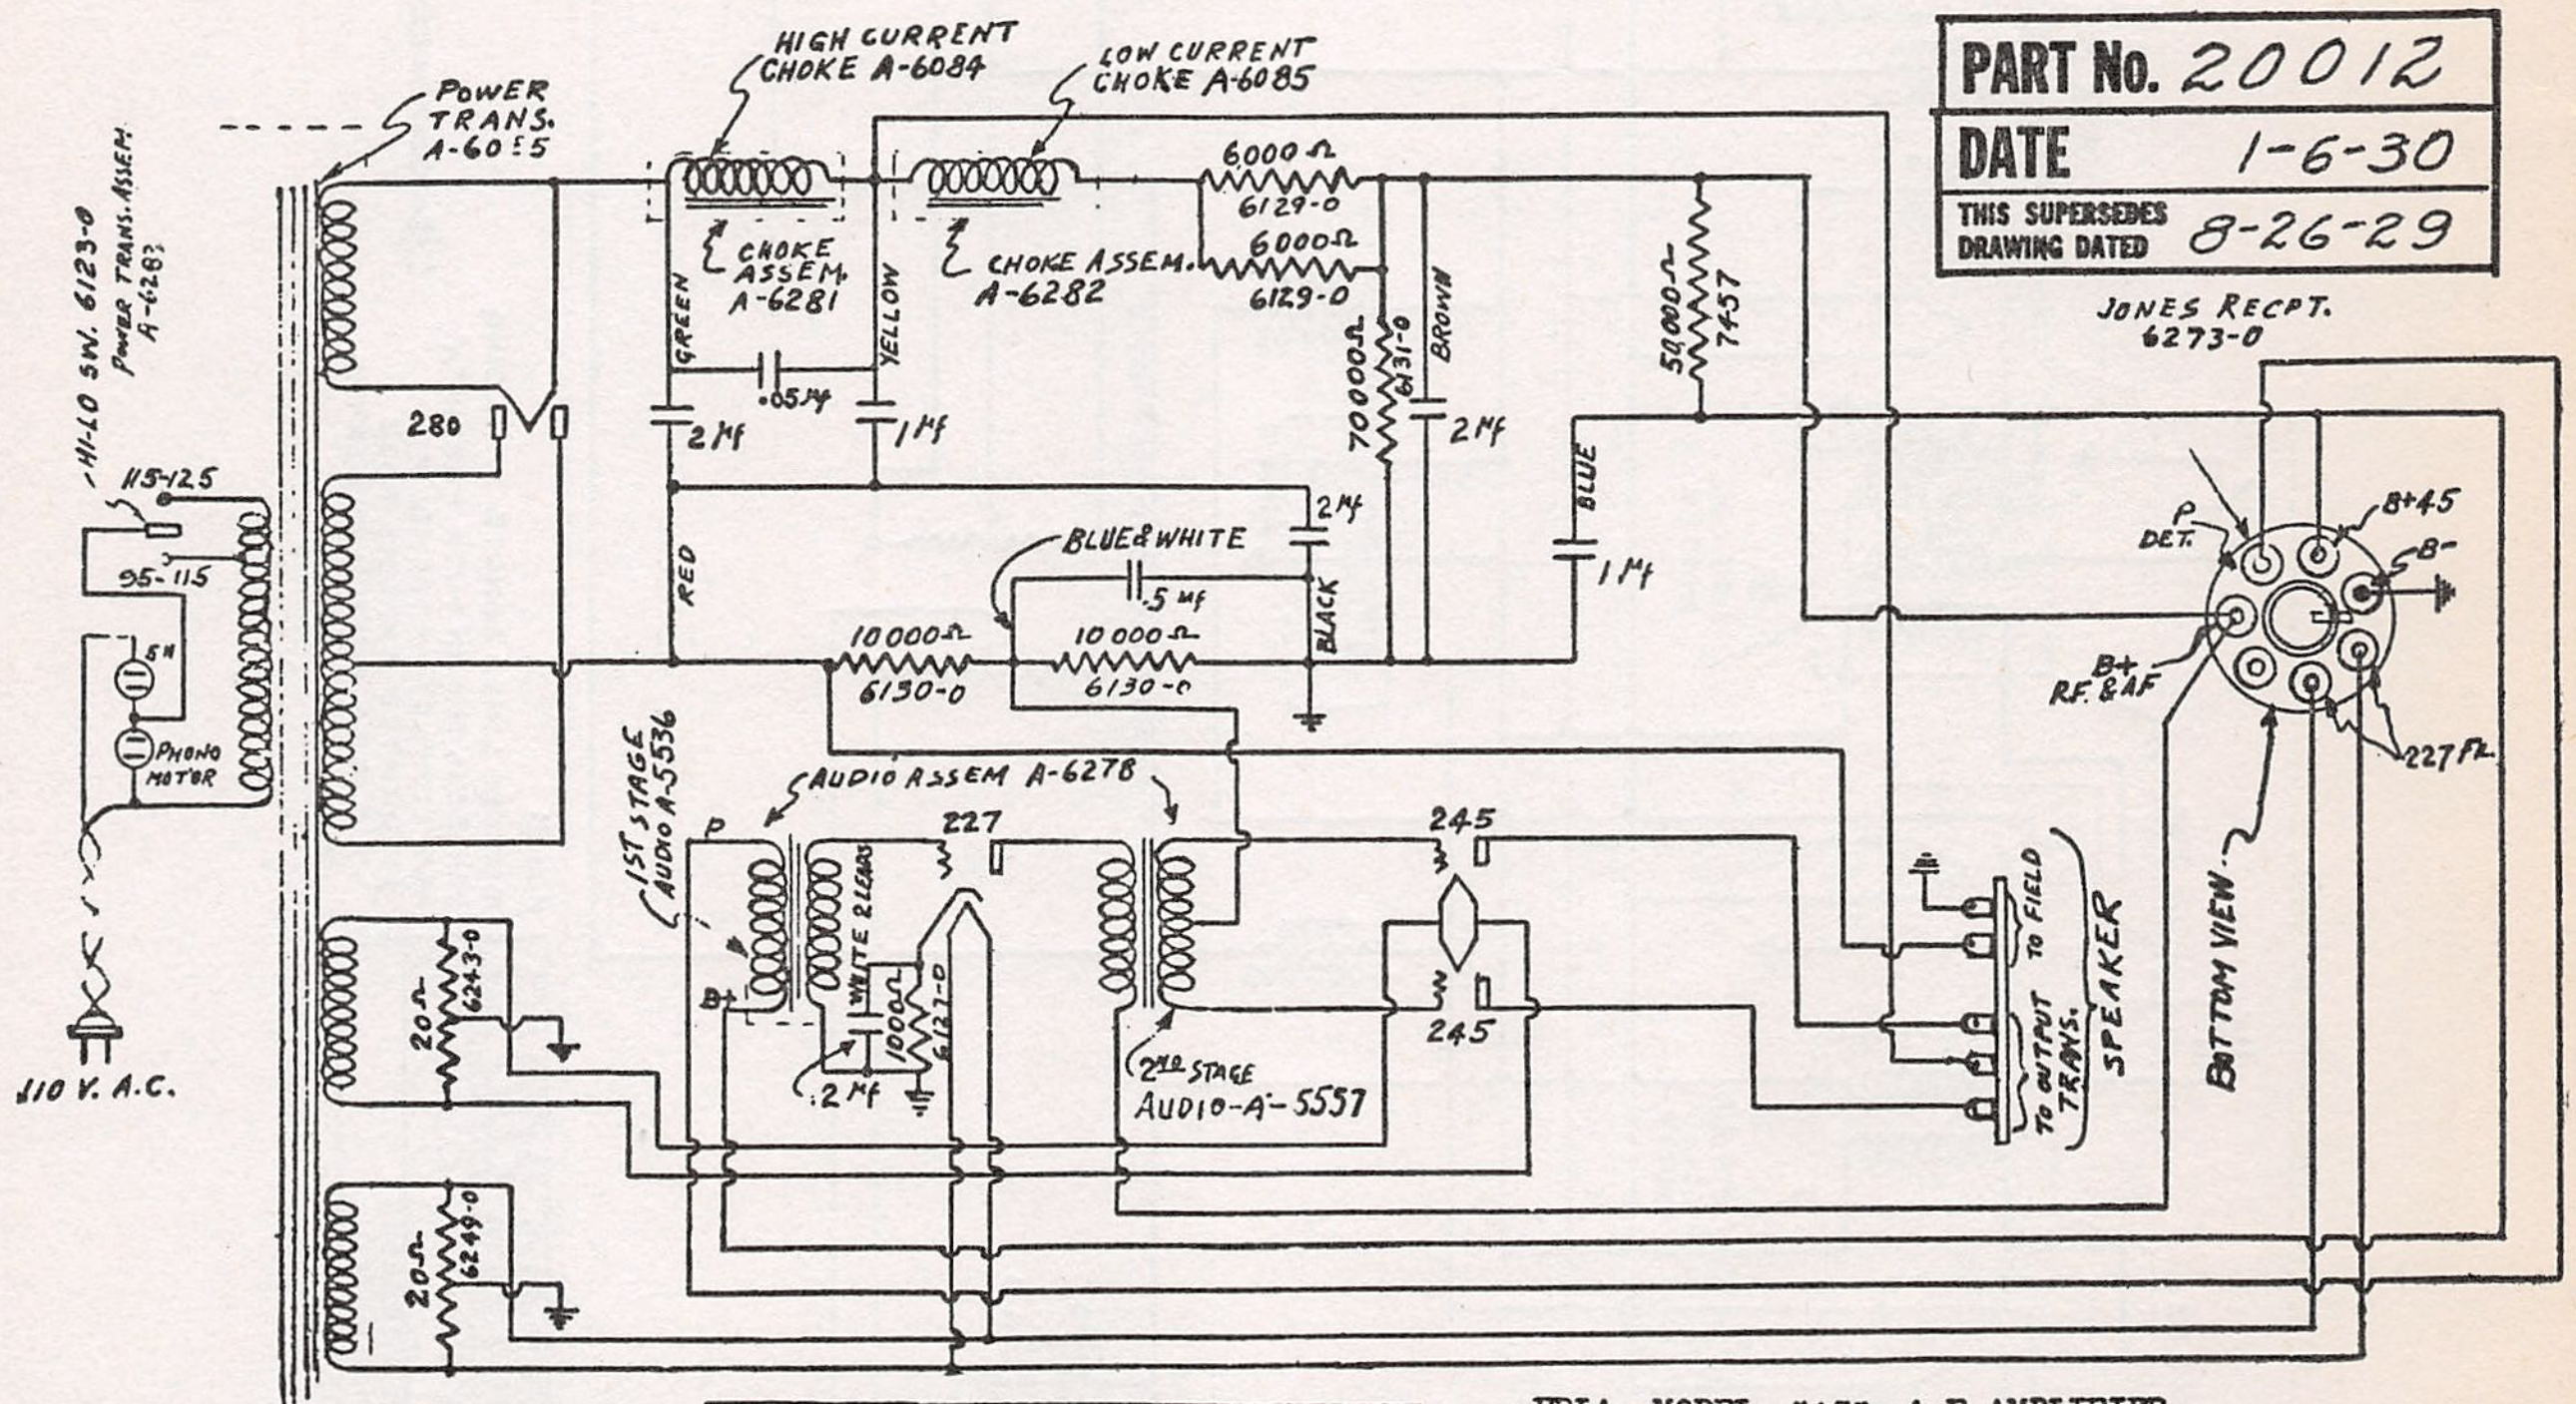
POWER TRANS. A-6055
HIGH CURRENT CHOKE A-6084
LOW CURRENT CHOKE A-6085
CHOKE ASSEM. A-6281
CHOKE ASSEM. A-6282
6000Ω 6129-0
6000Ω 6129-0
GREEN
YELLOW
.05 Mf
2 Mf
1 Mf
BROWN
70000Ω 6131-0
2 Mf
50000Ω 7457
BLUE
1 Mf
280
HI-LO SW. 6123-0
POWER TRANS. ASSEM. A-6283
115-125
95-115
5"
PHONO MOTOR
110 V. A.C.
RED
BLUE & WHITE
.5 Mf
2 Mf
BLACK
10000Ω 6130-0
10 000Ω 6130-0
1ST STAGE AUDIO A-5536
AUDIO ASSEM A-6278
P
B+
WHITE 2 LEADS
227
1000Ω 6127-0
.2 Mf
2ND STAGE AUDIO-A-5557
245
245
20Ω 6243-0
20Ω 6249-0
JONES RECPT. 6273-0
P. DET.
B+45
B−
B+ RF. & AF
227 Fil.
BOTTOM VIEW
TO FIELD
TO OUTPUT TRANS.
SPEAKER

ERLA MODEL "A3" A.F.AMPLIFIER

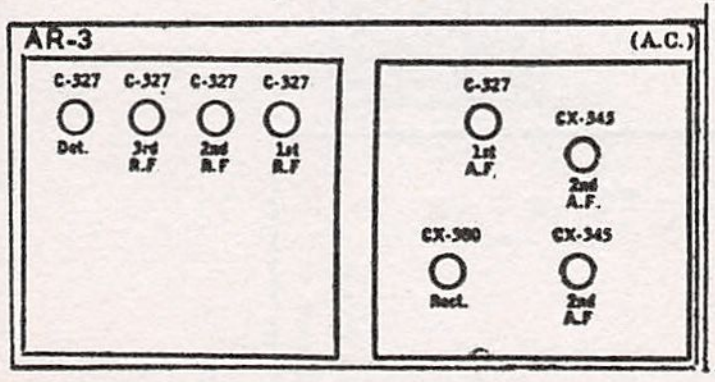
AR-3
(A.C.)
C-327
Det.
C-327
3rd R.F
C-327
2nd R.F
C-327
1st R.F
C-327
1st A.F.
CX-345
2nd A.F.
CX-380
Rect.
CX-345
2nd A.F

ERLA MODELS 30, 31, 32, AR-3
CABLE AND SKY ROVER—MODEL 224

Type Tube	Tube Position	"A" Vts.	"B" Vts.	"C" Vts.	Screen Vts.	Screen Current	Cath. Vts.	Nor'l MA.	Grid Test MA.
'24	1 R.F.	2.25	170	1.75	85	.2	2	3.0	4.4
'24	2 R.F.	2.25	170	1.75	85	.2	2	3.0	4.5
'24	3 R.F	2.25	170	1.75	85	2	2	3.0	4.5
'27	Det.	2.25	90	12.0	----	--	+12	0.5	0.5
'27	1 A.F.	2.25	105	2.0	---	---	+5.5	5.0	6.5
'45	2 A.F.	2.4	250	22.5	---	---	---	30.0	35.0
'45	P.P.	2.4	250	22.5	---	---	---	30.0	35.0
'80	Rect.	4.8	-----	----	---	---	---	37.0 per anode	

LV—1.0. LVS—95-115. Vol. Con. Max.

ERLA MODEL "R3" R.F.AMPLIFIER
ERLA MODEL "A3" A.F.AMPLIFIER

MODEL 74, 76 (210)
Schematic

ELECTRICAL RESEARCH LABORATORIES, Inc.

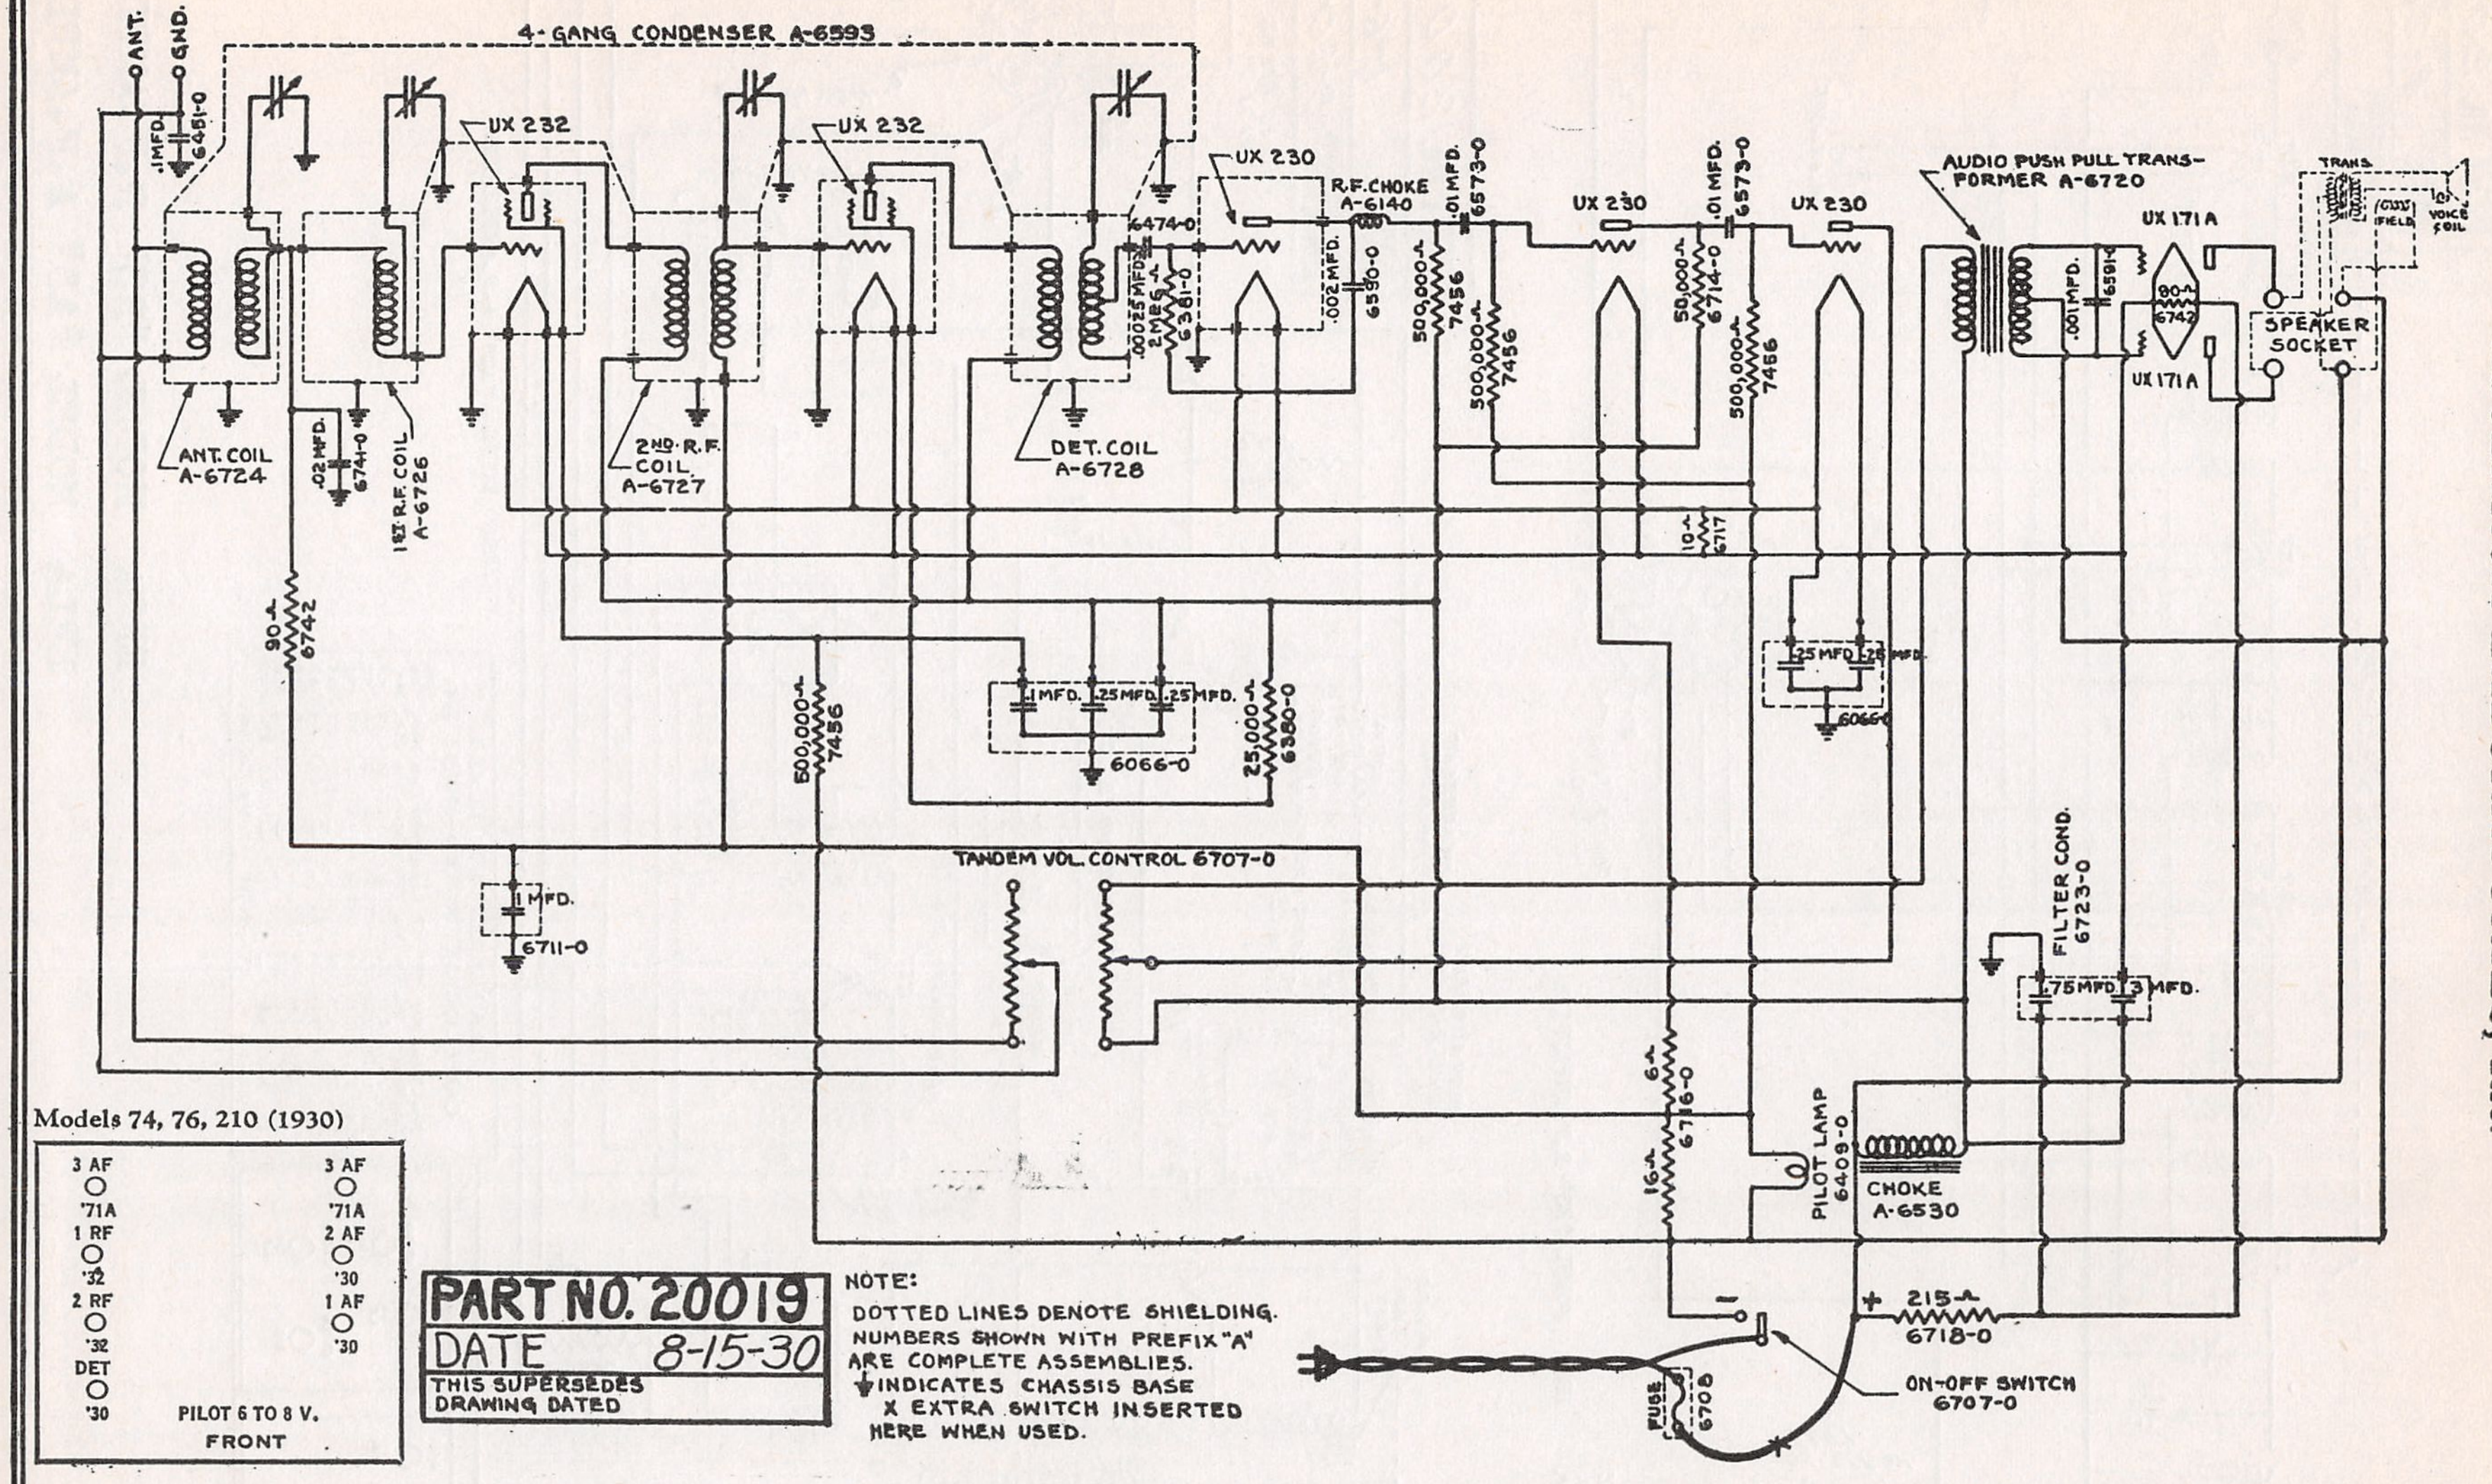
ANT.
GND.
.1MFD.
6451-0
4-GANG CONDENSER A-6593
UX 232
UX 232
UX 230
ANT. COIL A-6724
.02 MFD.
6741-0
1ST R.F. COIL A-6726
2ND R.F. COIL A-6727
DET. COIL A-6728
6474-0
.00025 MFD.
2 MEG Ω
6381-0
R.F. CHOKE A-6140
.002 MFD.
6590-0
.01 MFD.
6573-0
500,000Ω
7456
500,000Ω
7456
UX 230
.01 MFD.
6573-0
50,000Ω
6714-0
500,000Ω
7456
UX 230
10Ω
6717
AUDIO PUSH PULL TRANSFORMER A-6720
.001 MFD.
6591-0
UX 171 A
90Ω
6742
UX 171 A
SPEAKER SOCKET
TRANS.
FIELD
VOICE COIL
90Ω
6742
1 MFD.
.25 MFD.
.25 MFD.
6066-0
500,000Ω
7456
25,000Ω
6380-0
.25 MFD.
.25 MFD.
6066-0
TANDEM VOL. CONTROL 6707-0
1 MFD.
6711-0
FILTER COND. 6723-0
.75 MFD.
3 MFD.
6Ω
16Ω
6716-0
PILOT LAMP 6409-0
CHOKE A-6530
–
+
215Ω
6718-0
ON-OFF SWITCH 6707-0
FUSE
6708
Models 74, 76, 210 (1930)
3 AF
'71A
1 RF
'32
2 RF
'32
DET
'30
3 AF
'71A
2 AF
'30
1 AF
'30
PILOT 6 TO 8 V.
FRONT

PART NO. 20019
DATE 8-15-30
THIS SUPERSEDES DRAWING DATED

NOTE:
DOTTED LINES DENOTE SHIELDING.
NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
⏚ INDICATES CHASSIS BASE
X EXTRA SWITCH INSERTED HERE WHEN USED.

110 Volt DC.

MODEL 224-B
Schematic

ELECTRICAL
RESEARCH LABORATORIES, Inc.

ERLA MODEL 224-B RECEIVER

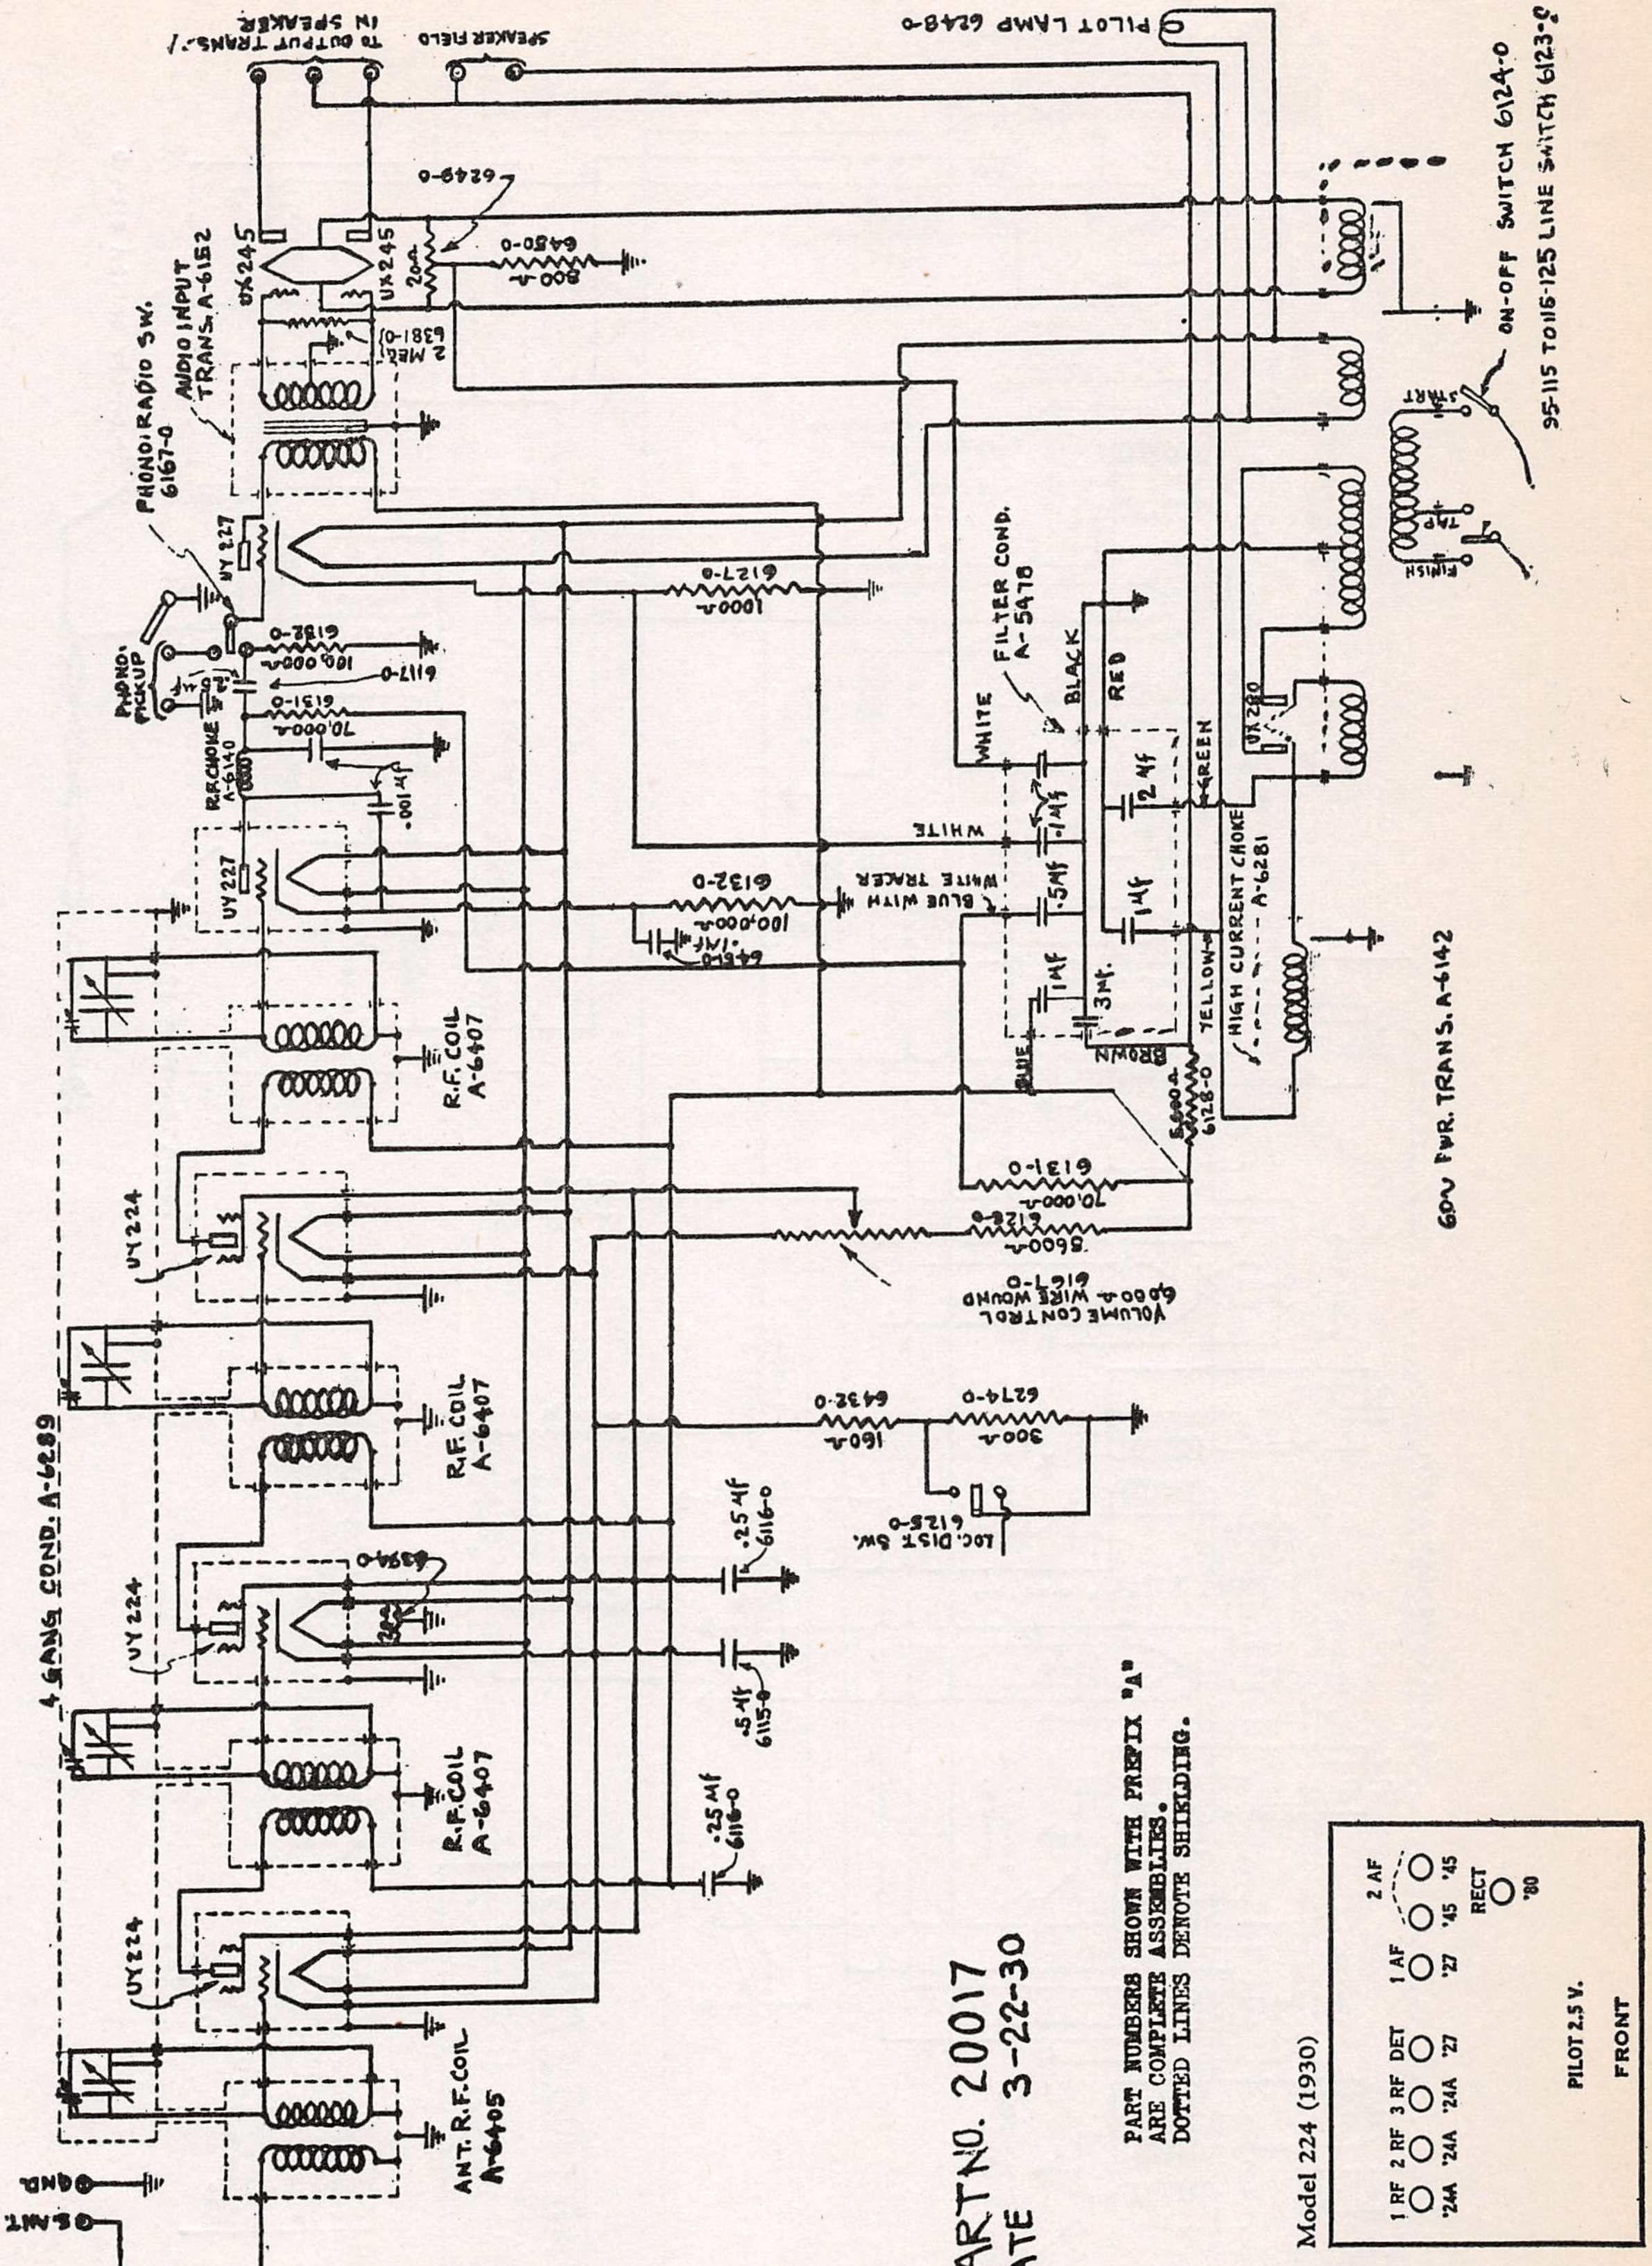
TO OUTPUT TRANS. IN SPEAKER
SPEAKER FIELD
PILOT LAMP 6248-0
ON-OFF SWITCH 6124-0
95-115 TO 115-125 LINE SWITCH 6123-0
START
TAP
FINISH
UX245
UX245
6249-0
6450-0
800Ω
20Ω
AUDIO INPUT TRANS. A-6152
2 MEG. 6381-0
PHONO-RADIO SW. 6167-0
PHONO PICKUP
UY227
6127-0
1000Ω
6182-0
100,000Ω
6117-0
6131-0
70,000Ω
R.F. CHOKE A-6140
.001 Mf
FILTER COND. A-5478
WHITE
BLACK
RED
GREEN
YELLOW
BLUE
BROWN
WHITE
BLUE WITH WHITE TRACER
.1 Mf
.5 Mf
1 Mf
2 Mf
3 Mf
UY227
6132-0
100,000Ω
.1 Mf
6480-0
HIGH CURRENT CHOKE A-6281
UX280
60~ PWR. TRANS. A-6142
5600Ω 6128-0
R.F. COIL A-6407
6131-0
70,000Ω
6129-0
5600Ω
VOLUME CONTROL 6000Ω WIRE WOUND 6161-0
UY224
R.F. COIL A-6407
6432-0
160Ω
6274-0
300Ω
LOC. DIST. SW. 6125-0
4 GANG COND. A-6289
UY224
6394-0
.25 Mf 6116-0
.5 Mf 6115-0
R.F. COIL A-6407
.25 Mf 6116-0
UY224
ANT. R.F. COIL A-6405
GND.
S ANT.
L ANT.
SHIELDING

PART NO. 20017
DATE 3-22-30

PART NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

1 RF
2 RF
3 RF
DET
1 AF
2 AF
'24A
'24A
'24A
'27
'27
'45
'45
RECT
'80
PILOT 2.5 V.
FRONT

Model 224 (1930)

MODEL 225
Schematic

ELECTRICAL RESEARCH LABORATORIES, Inc.

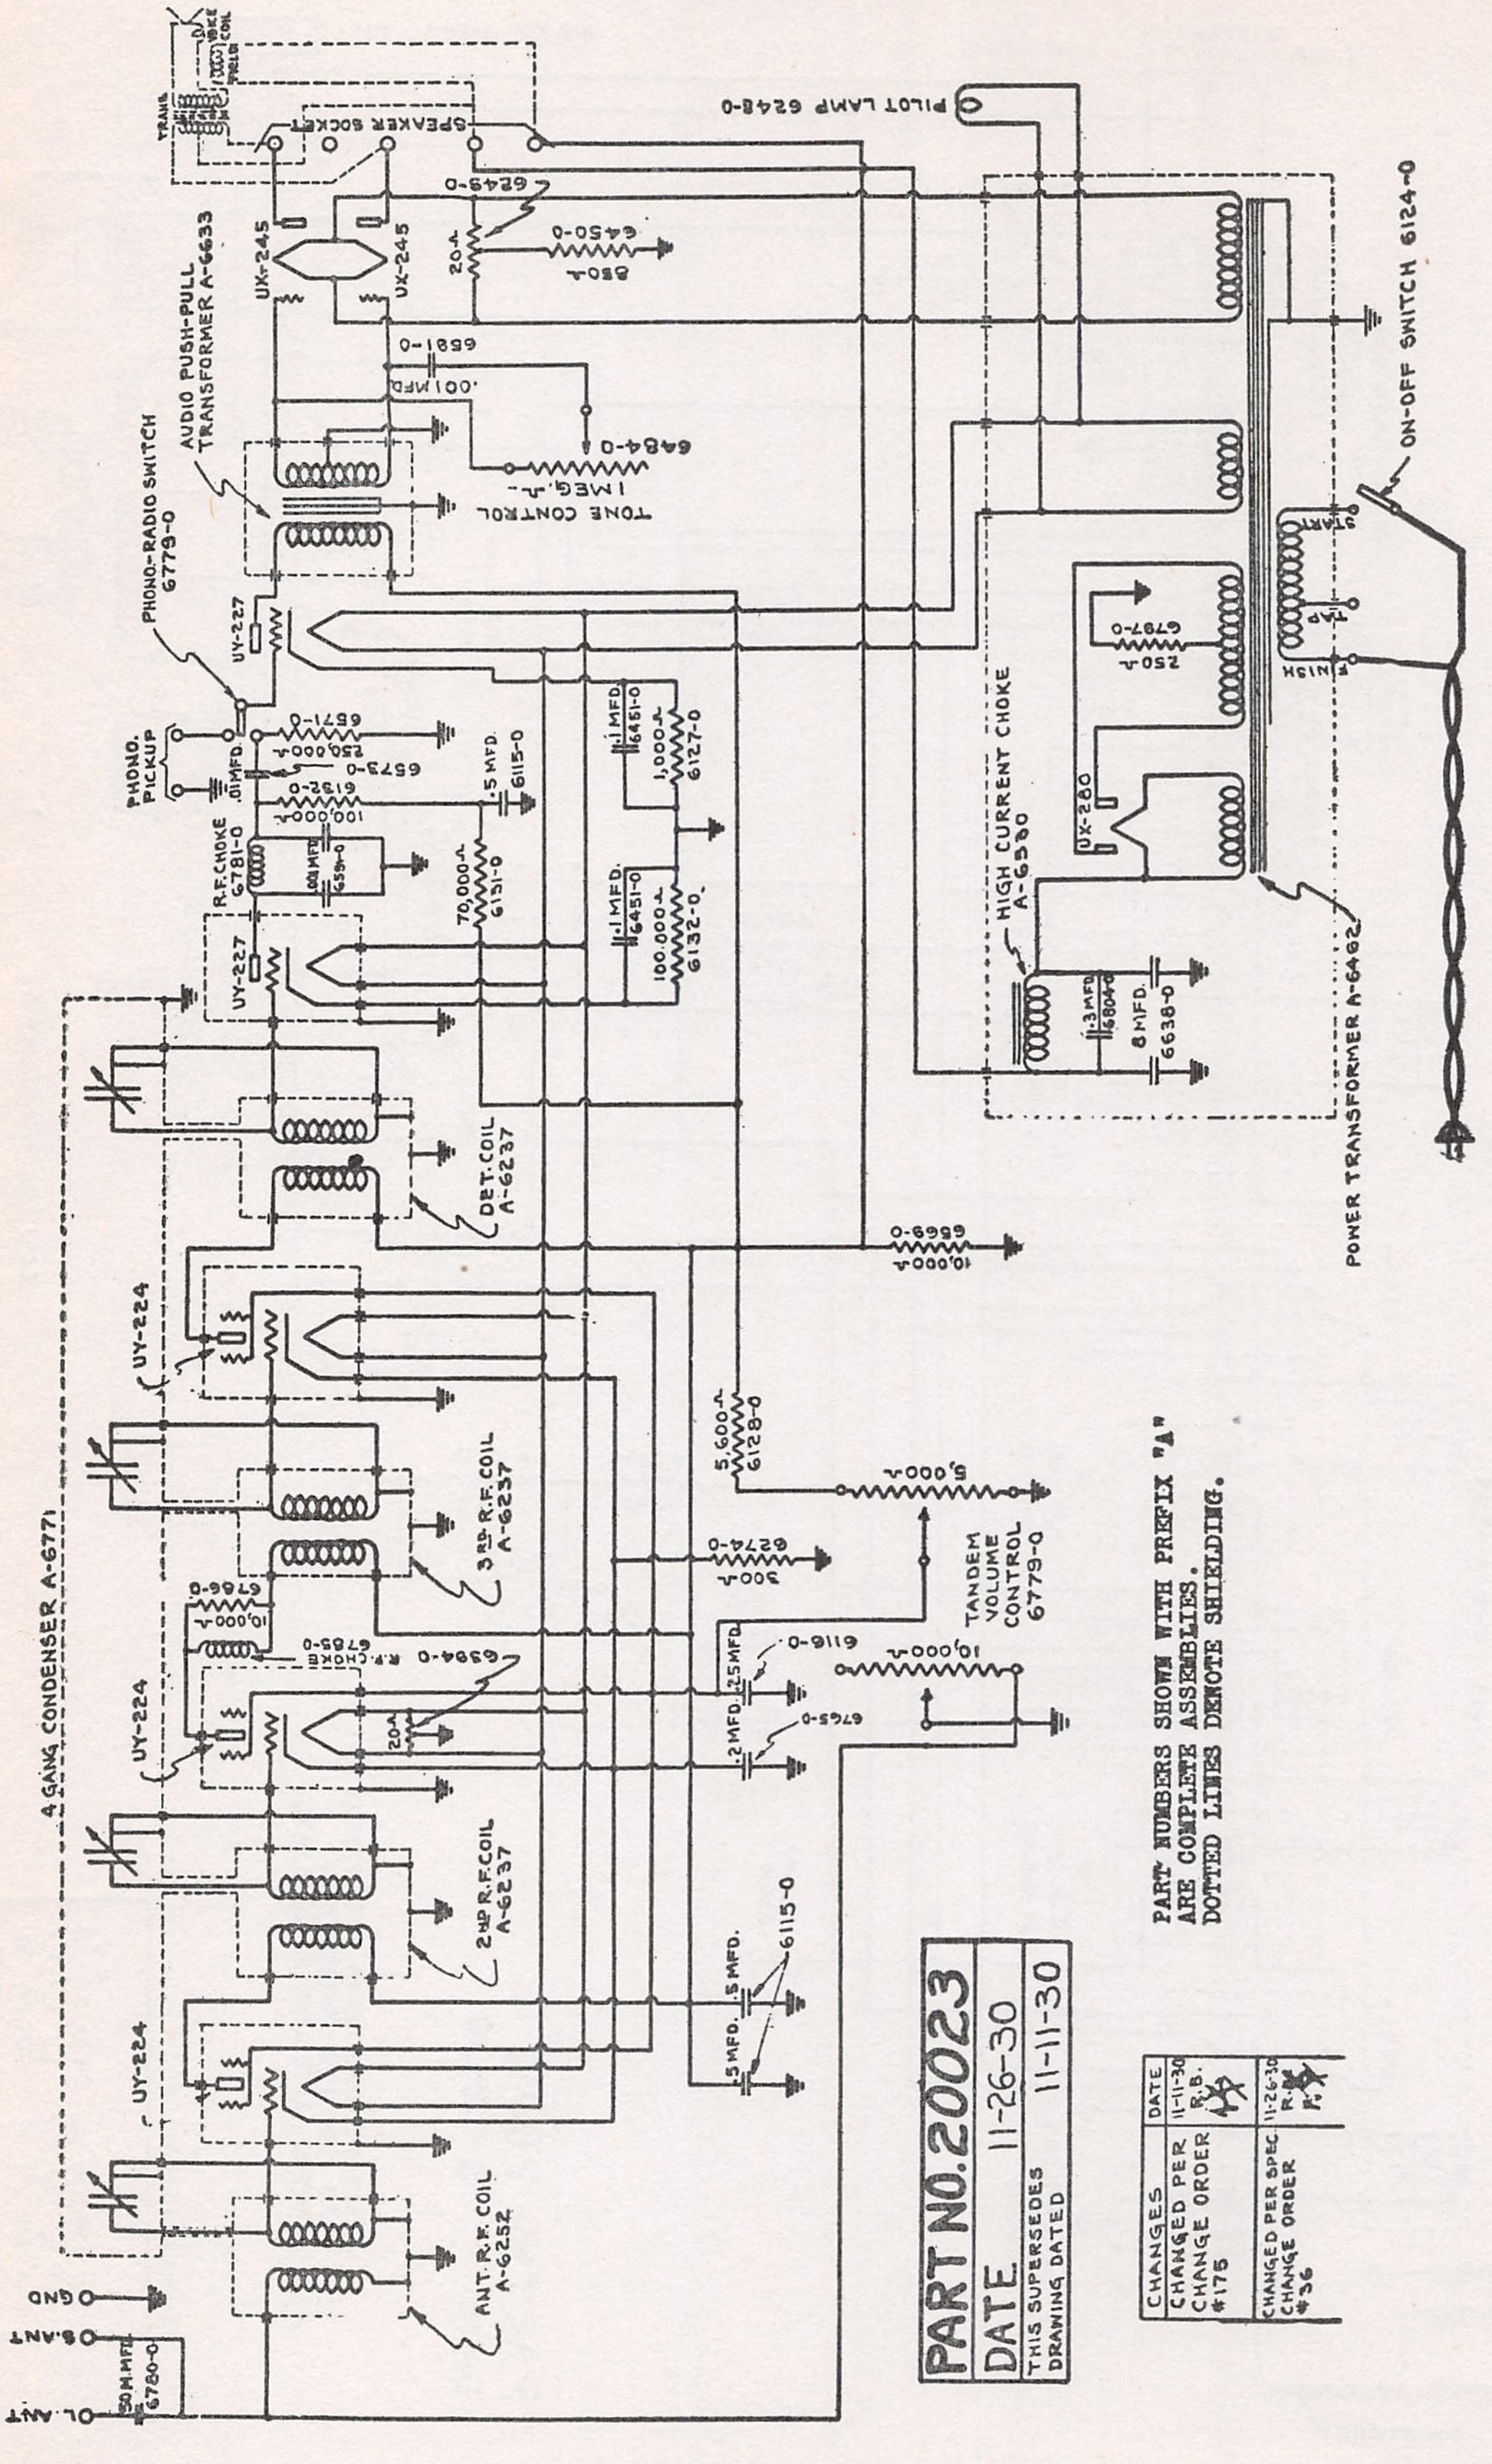
SPEAKER SOCKET
TRANS.
FIELD COIL
PILOT LAMP 6248-0
UX-245
UX-245
6249-0
20Ω
6450-0
850Ω
AUDIO PUSH-PULL TRANSFORMER A-6633
6589-0
.001 MFD.
6484-0
1 MEG. Ω
TONE CONTROL
PHONO-RADIO SWITCH 6779-0
UY-227
PHONO. PICKUP
.01 MFD.
6571-0
250,000Ω
6573-0
6132-0
100,000Ω
.5 MFD. 6115-0
.1 MFD. 6451-0
1,000Ω 6127-0
R.F. CHOKE 6781-0
.001 MFD. 6591-0
70,000Ω 6131-0
.1 MFD. 6451-0
100,000Ω 6132-0
UY-227
HIGH CURRENT CHOKE A-6580
UX-280
6787-0
250Ω
START
TAP
FINISH
ON-OFF SWITCH 6124-0
.3 MFD. 6804-0
8 MFD. 6638-0
POWER TRANSFORMER A-6462
DET. COIL A-6237
6569-0
10,000Ω
UY-224
4 GANG CONDENSER A-6771
3RD R.F. COIL A-6237
5,600Ω 6128-0
5,000Ω
TANDEM VOLUME CONTROL 6779-0
6274-0
300Ω
6786-0
10,000Ω
R.F. CHOKE 6785-0
6594-0
20Ω
UY-224
.25 MFD.
6116-0
10,000Ω
.2 MFD.
6765-0
2ND R.F. COIL A-6237
.5 MFD.
.5 MFD.
.5 MFD.
6115-0
UY-224
ANT. R.F. COIL A-6252
GND
S. ANT
L. ANT
50 MMFD. 6780-0

PART NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

PART NO. 20023
DATE 11-26-30
THIS SUPERSEDES DRAWING DATED 11-11-30

CHANGES	DATE
CHANGED PER CHANGE ORDER #175	11-11-30 R.B.
CHANGED PER SPEC CHANGE ORDER #36	11-26-30 R.B.

ERLA MODEL 225 RECEIVER

MODEL 35, 37, 38, 39
(230)
Schematic

ELECTRICAL RESEARCH LABORATORIES, Inc.

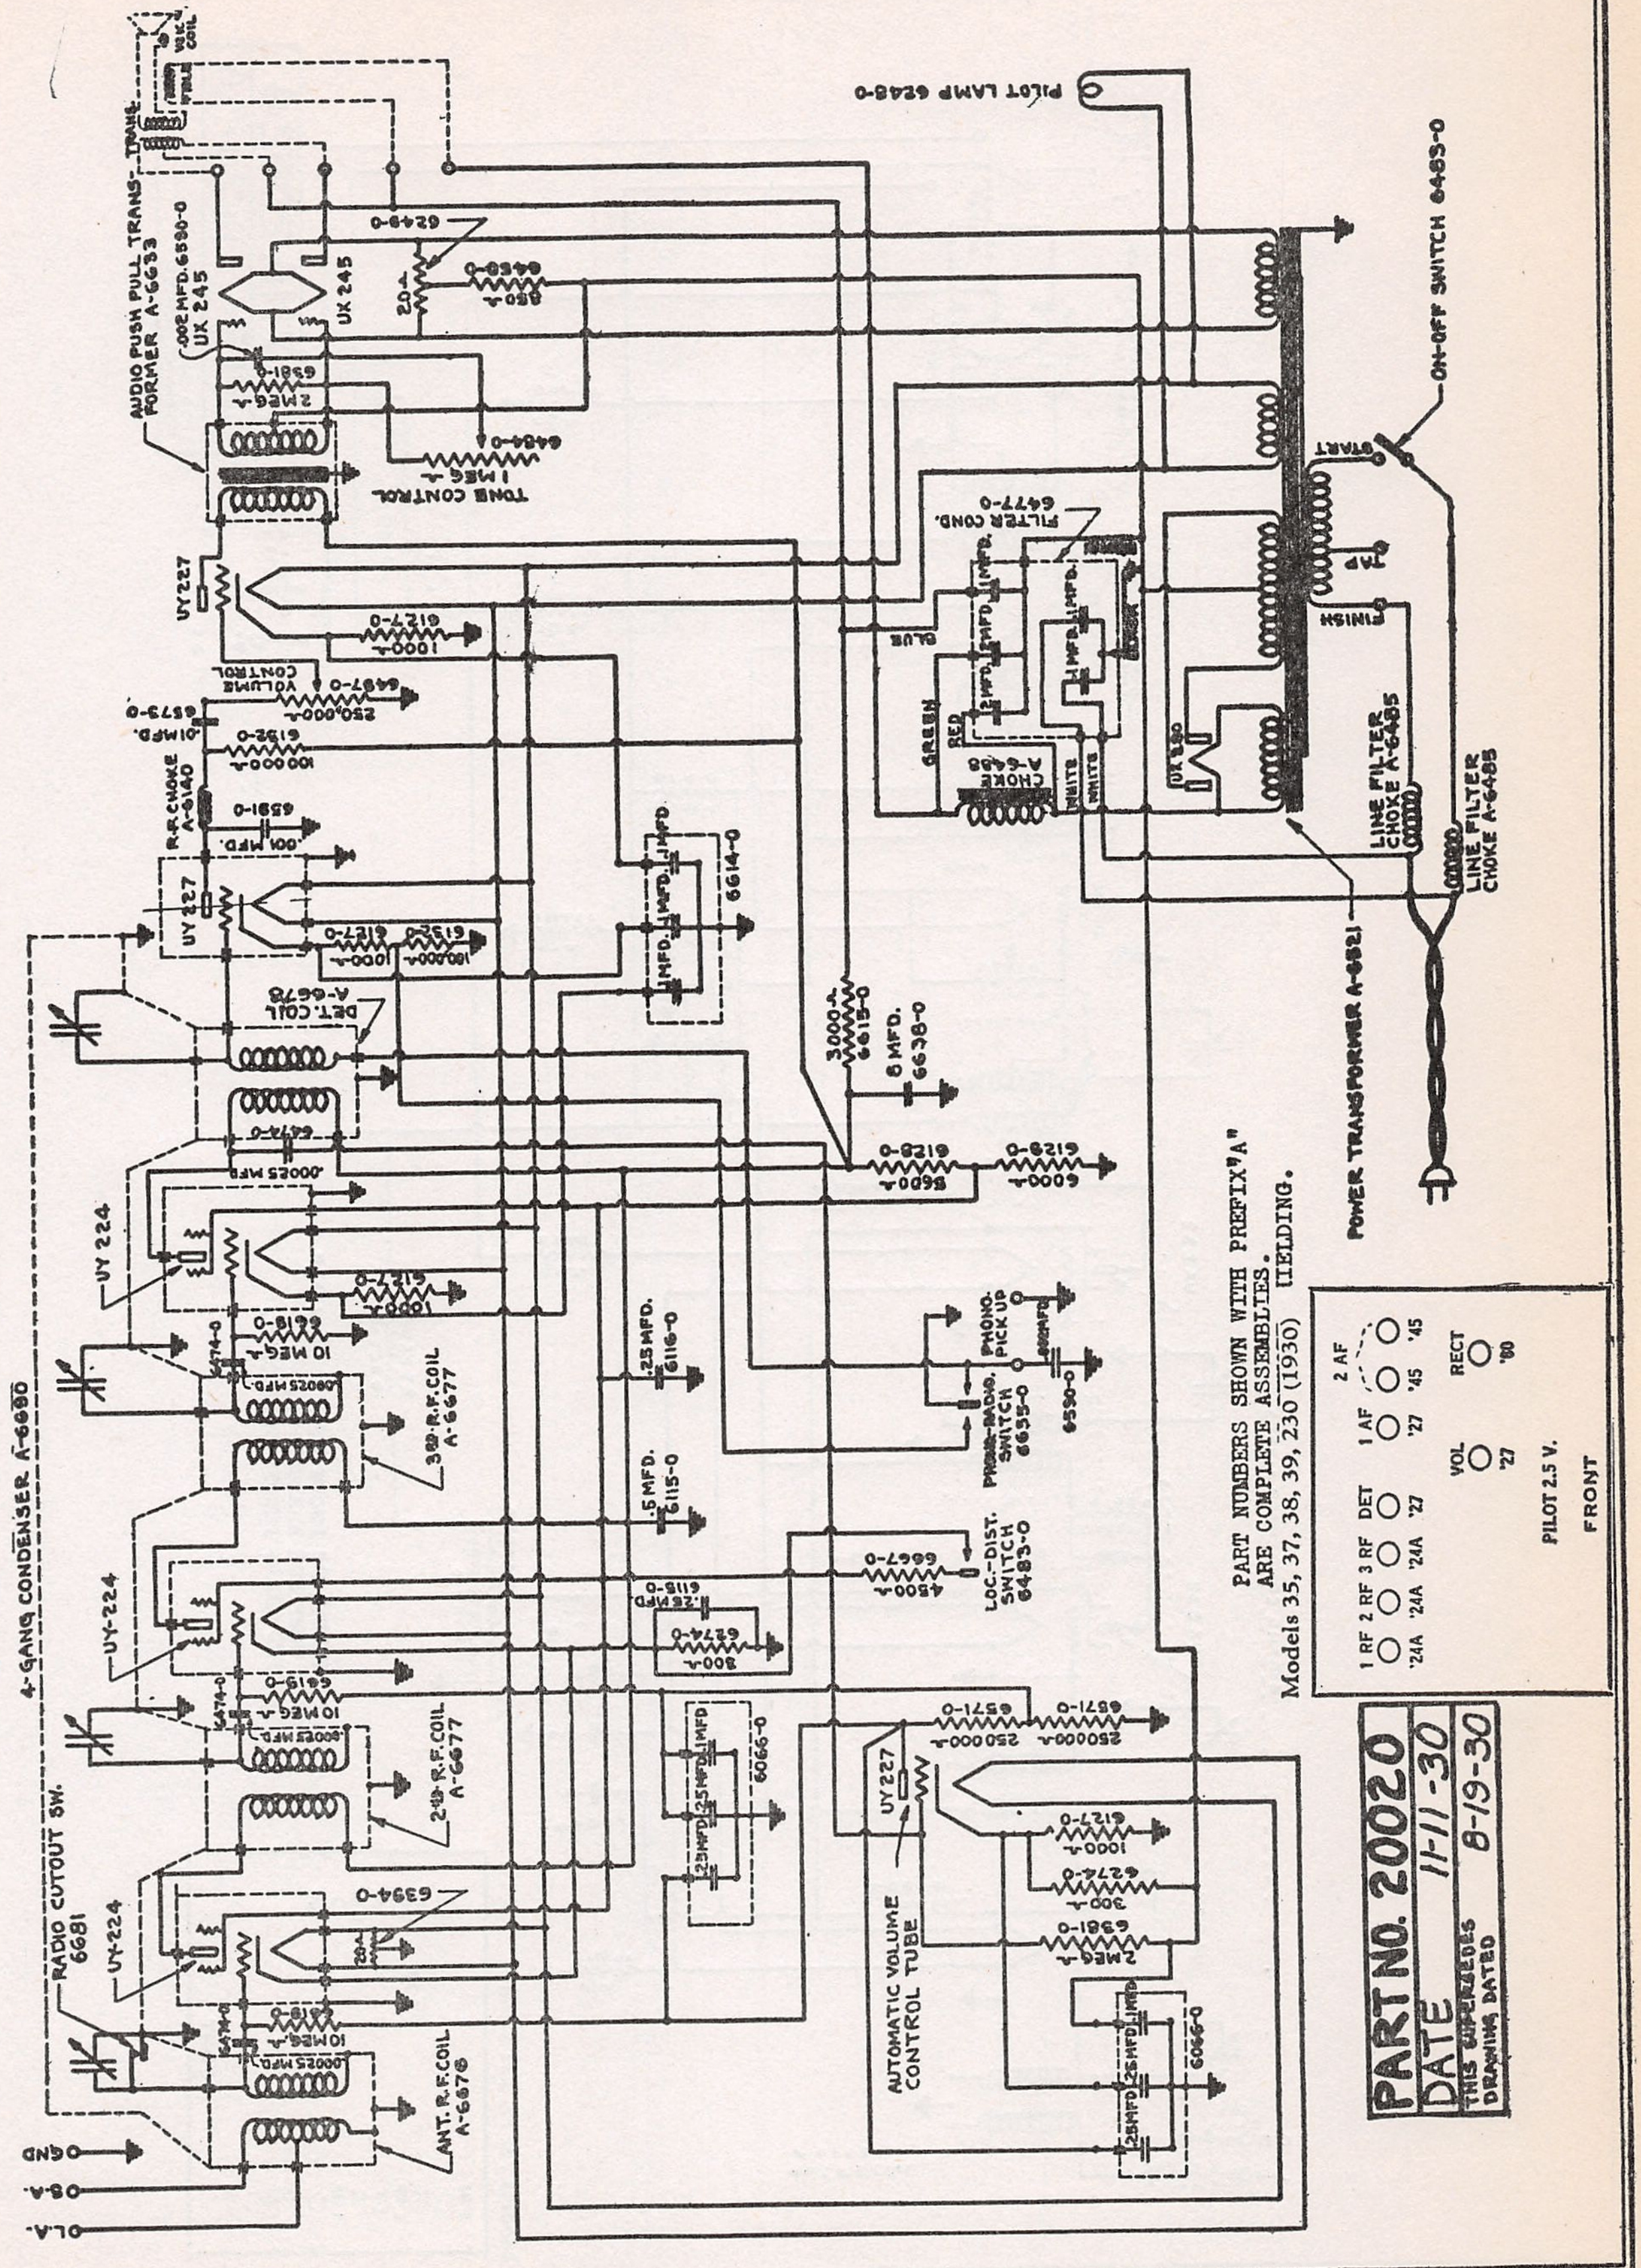
PILOT LAMP 6248-0
VOICE COIL
FIELD
AUDIO PUSH PULL TRANSFORMER A-6653
.002 MFD. 6580-0
UX 245
UX 245
6249-0
20-A
850-A
6496-0
2 MEG-A
6381-0
1 MEG-A
6484-0
TONE CONTROL
UY 227
1000-A
6127-0
250,000-A
6487-0
VOLUME CONTROL
.01 MFD.
6573-0
100000-A
6152-0
R.F. CHOKE A-6140
.001 MFD.
6581-0
UY 227
1000-A
6127-0
100,000-A
6152-0
1 MFD.
6614-0
DET. COIL A-6678
.00025 MFD.
6474-0
UY 224
1000-A
6127-0
10 MEG-A
6188-0
.00025 MFD.
3RD R.F. COIL A-6677
.25 MFD.
6116-0
.5 MFD.
6115-0
UY-224
.25 MFD.
6118-0
300-A
6274-0
10 MEG-A
6188-0
.00025 MFD.
2ND R.F. COIL A-6677
6066-0
UY-224
6394-0
20-A
10 MEG-A
6188-0
.00025 MFD.
ANT. R.F. COIL A-6676
RADIO CUTOUT SW. 6681
4-GANG CONDENSER A-6680
GND
A-80
A-70
3000-A
6615-0
8 MFD.
6638-0
5600-A
6128-0
6000-A
6129-0
PHONO. PICK UP
PHONO.-RADIO SWITCH 6635-0
6590-0
4500-A
6667-0
LOC.-DIST. SWITCH 6485-0
250000-A
6571-0
UY 227
AUTOMATIC VOLUME CONTROL TUBE
1000-A
6127-0
300-A
6274-0
2 MEG-A
6381-0
6066-0
FILTER COND. 6477-0
BLUE
GREEN
RED
CHOKE A-6488
WHITE
WHITE
UX 280
START
TAP
FINISH
ON-OFF SWITCH 6485-0
LINE FILTER CHOKE A-6485
LINE FILTER CHOKE A-6485
POWER TRANSFORMER A-6621
PART NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
Models 35, 37, 38, 39, 230 (1930) FIELDING.
1 RF 2 RF 3 RF DET 1 AF 2 AF
'24A '24A '24A '27 '27 '45 '45
VOL '27
RECT '80
PILOT 2.5 V.
FRONT
PART NO. 20020
DATE 11-11-30
THIS SUPERSEDES DRAWING DATED 8-19-30

MODEL 75, 77 (231)
Schematic

ELECTRICAL RESEARCH LABORATORIES, Inc.

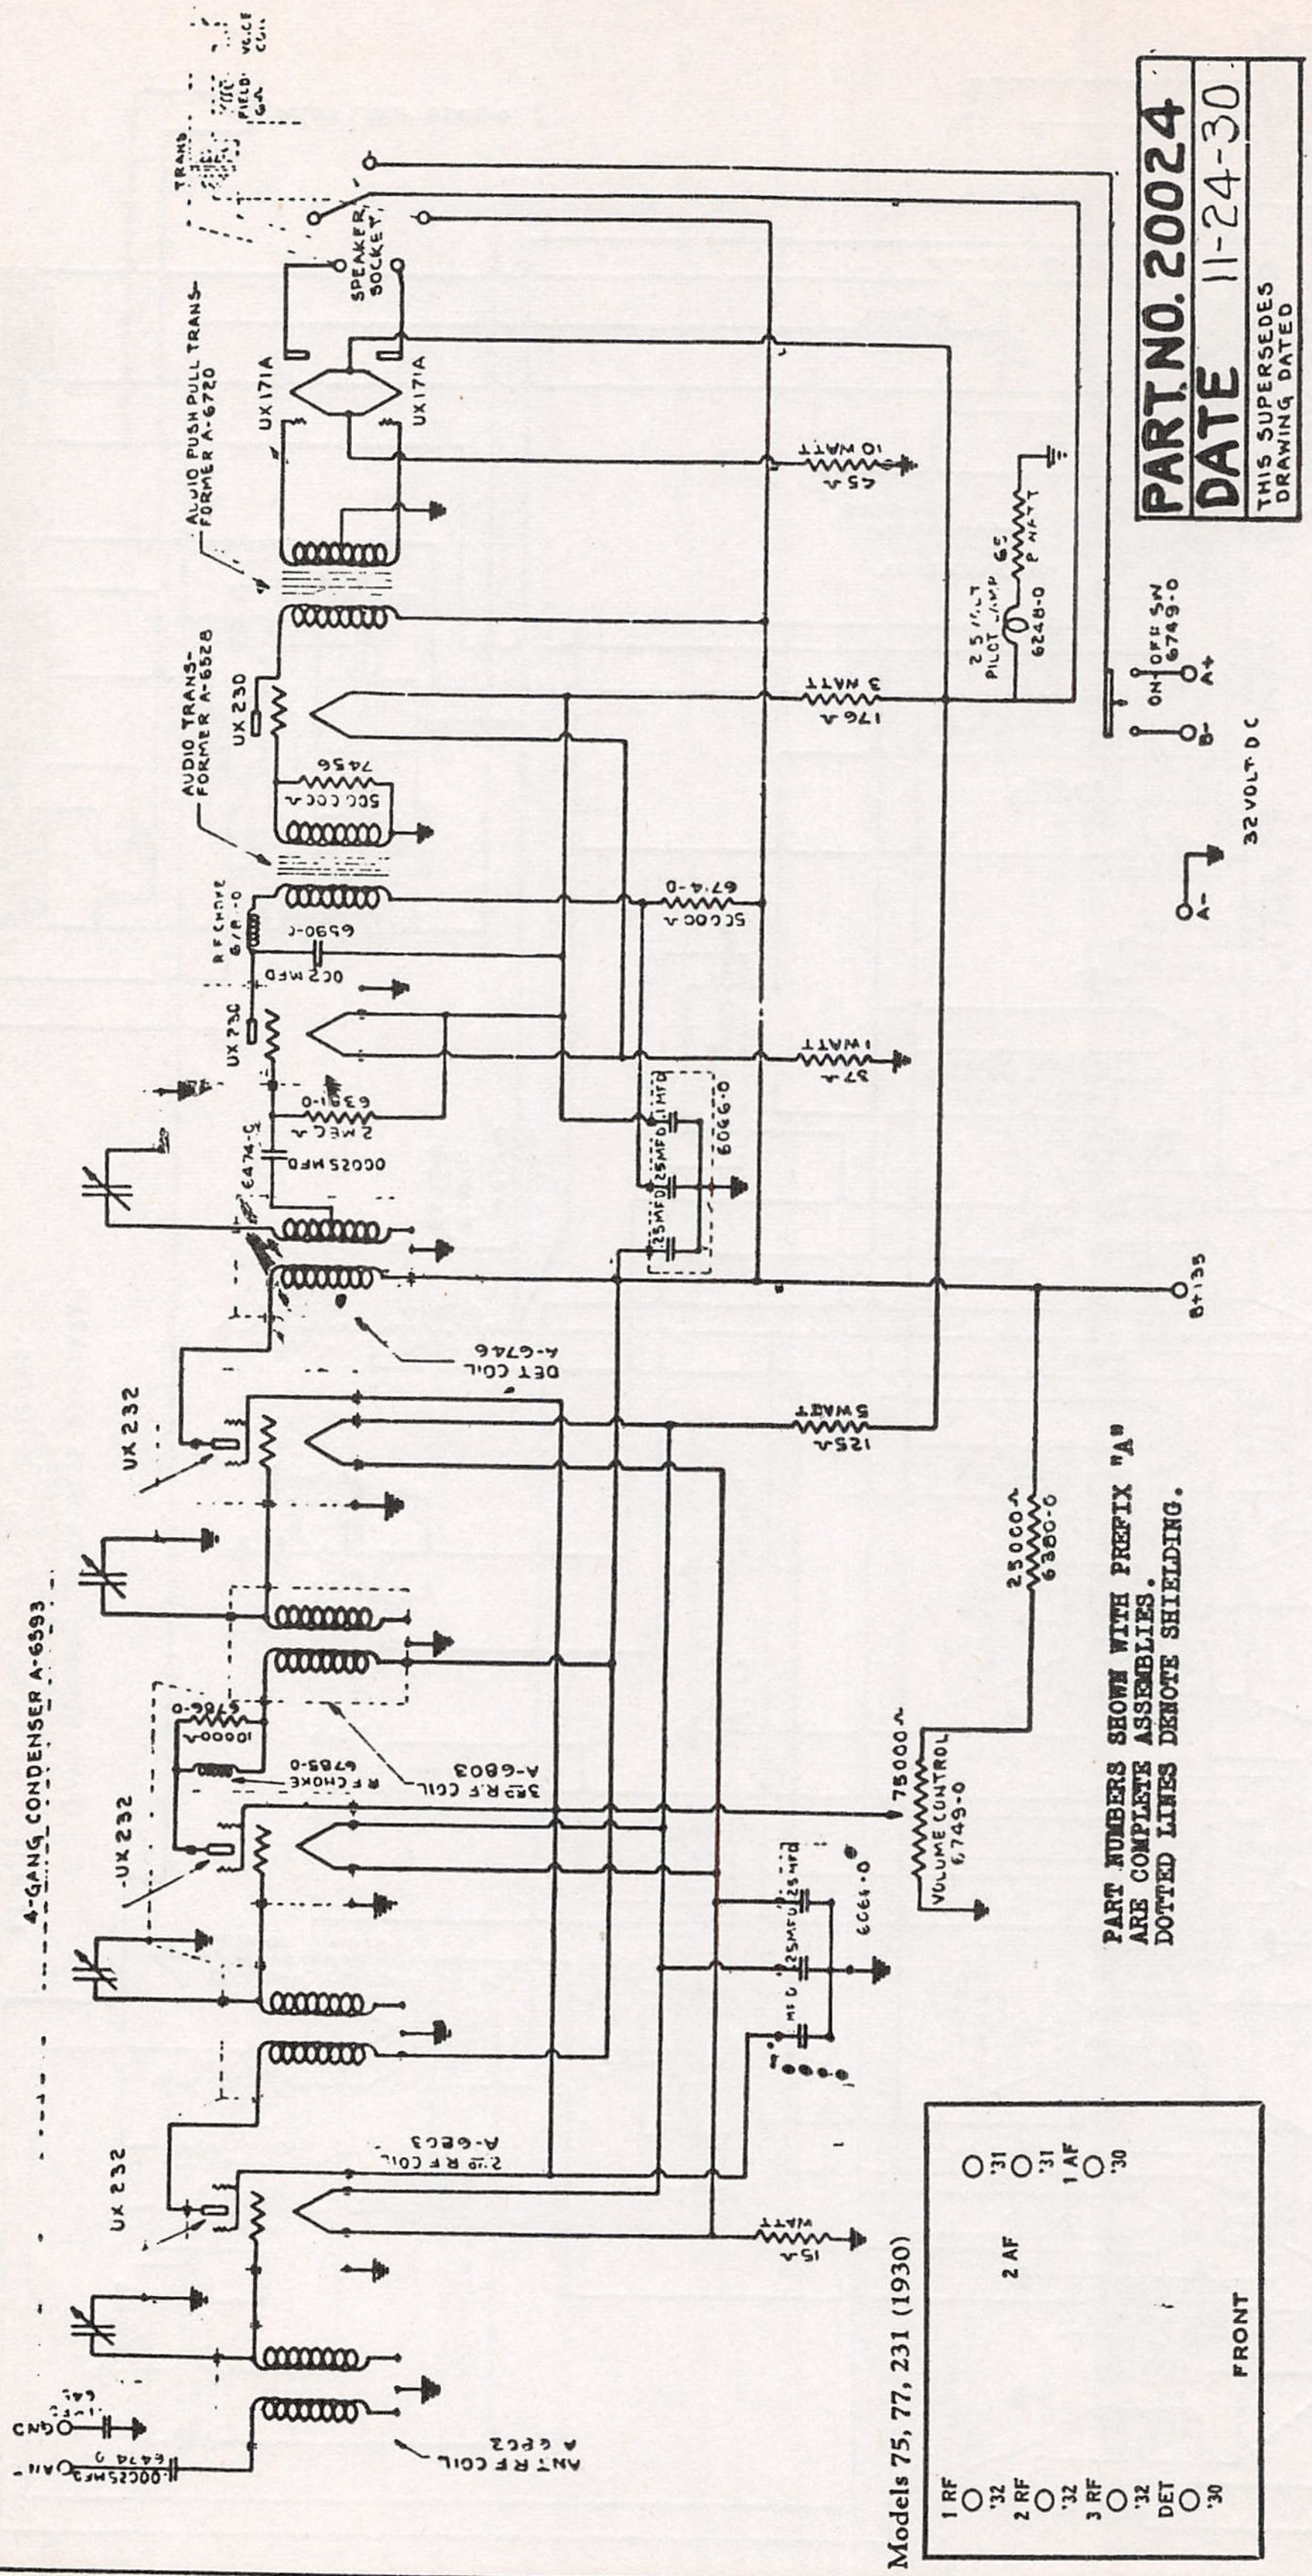
ANT R F COIL A 6903
.00025 MFD 6474-0
ANT
GND
UX 232
2ND R F COIL A-6803
UX 232
3RD R.F. COIL A-6803
R F CHOKE 6785-0
10000
4-GANG CONDENSER A-6593
UX 232
DET COIL A-6746
6474-0
.00025 MFD
2 MEG
6391-0
UX 230
.002 MFD
6590-0
R F CHOKE 6718-0
50000
6741-0
AUDIO TRANSFORMER A-6528
500000
7456
UX 230
AUDIO PUSH PULL TRANSFORMER A-6720
UX 171A
UX 171A
SPEAKER SOCKET
TRANS.
FIELD COIL
VOICE COIL
45
10 WATT
176
3 WATT
37
1 WATT
125
5 WATT
15
1 WATT
.25 MFD
6066-0
6061-0
VOLUME CONTROL 6749-0
75000
25000
6380-0
2.5 VOLT PILOT LAMP
6248-0
65
8 WATT
ON OFF SW 6749-0
A+
B-
A-
32 VOLT DC
B+135
1 RF '32
2 RF '32
3 RF '32
DET '30
2 AF
'31
'31
1 AF '30
FRONT

Models 75, 77, 231 (1930)

PART NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

PART NO. 20024
DATE 11-24-30
THIS SUPERSEDES DRAWING DATED

For 32 volt operation.

MODEL 271-A
Schematic

ELECTRICAL RESEARCH LABORATORIES, Inc.

ERLA MODEL 271-A RECEIVER

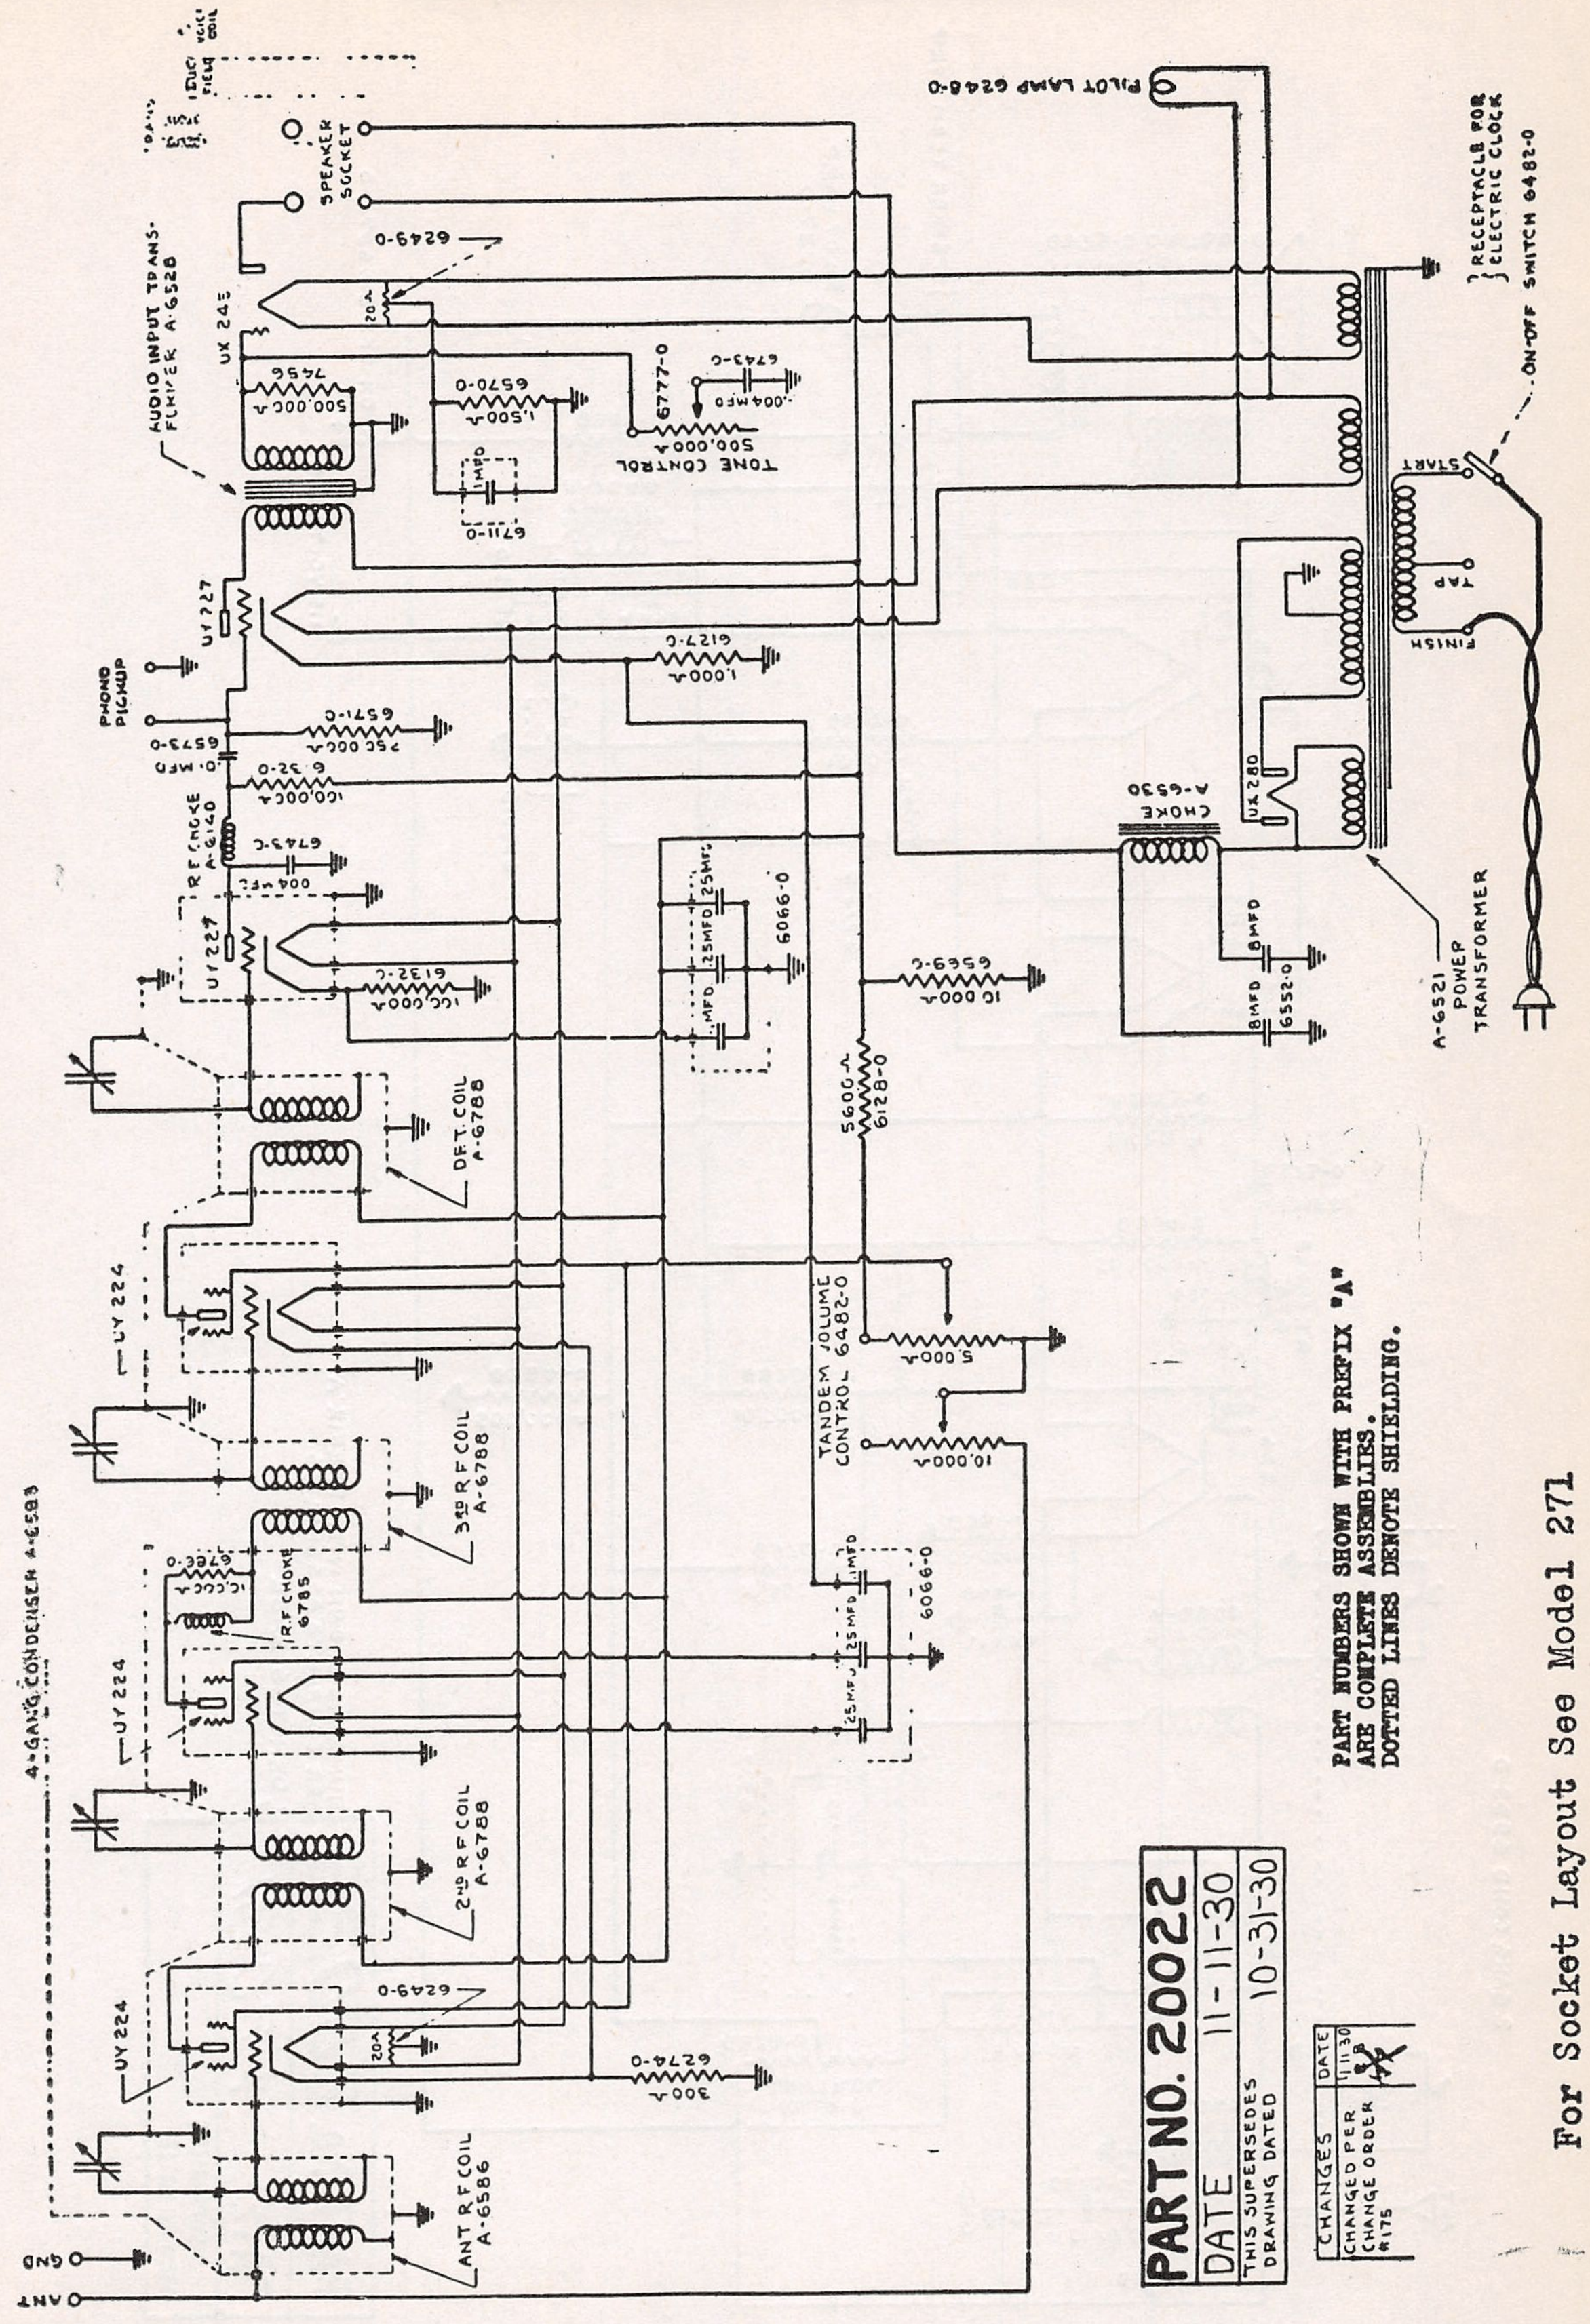
ANT
GND
ANT R.F. COIL A-6586
4-GANG CONDENSER A-6583
UY 224
20A
6249-0
300-Ω
6274-0
2ND R.F. COIL A-6788
R.F. CHOKE 6785
10,000-Ω
6788-0
.25 MFD
6066-0
3RD R.F. COIL A-6788
TANDEM VOLUME CONTROL 6482-0
10,000-Ω
5,000-Ω
DET. COIL A-6788
UY 227
100,000-Ω
6132-0
.25 MFD
5600-Ω
6128-0
10,000-Ω
6569-0
R.F. CHOKE A-6140
.004 MFD
6743-0
100,000-Ω
6520-0
.01 MFD
6573-0
250,000-Ω
6571-0
PHONO PICKUP
1,000-Ω
6127-0
AUDIO INPUT TRANSFORMER A-6528
500,000-Ω
7456
1,500-Ω
6570-0
1 MFD
6711-0
TONE CONTROL
500,000-Ω
6777-0
.004 MFD
6743-0
UX 245
SPEAKER SOCKET
PILOT LAMP 6248-0
RECEPTACLE FOR ELECTRIC CLOCK
ON-OFF SWITCH 6482-0
START
TAP
FINISH
UX 280
CHOKE A-6530
8 MFD
6552-0
A-6521 POWER TRANSFORMER

PART NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
DOTTED LINES DENOTE SHIELDING.

PART NO. 20022
DATE 11-11-30
THIS SUPERSEDES DRAWING DATED 10-31-30

CHANGES	DATE
CHANGED PER CHANGE ORDER #175	11-11-30

For Socket Layout See Model 271

MODEL 336
Schematic

ELECTRICAL RESEARCH LABORATORIES, Inc.

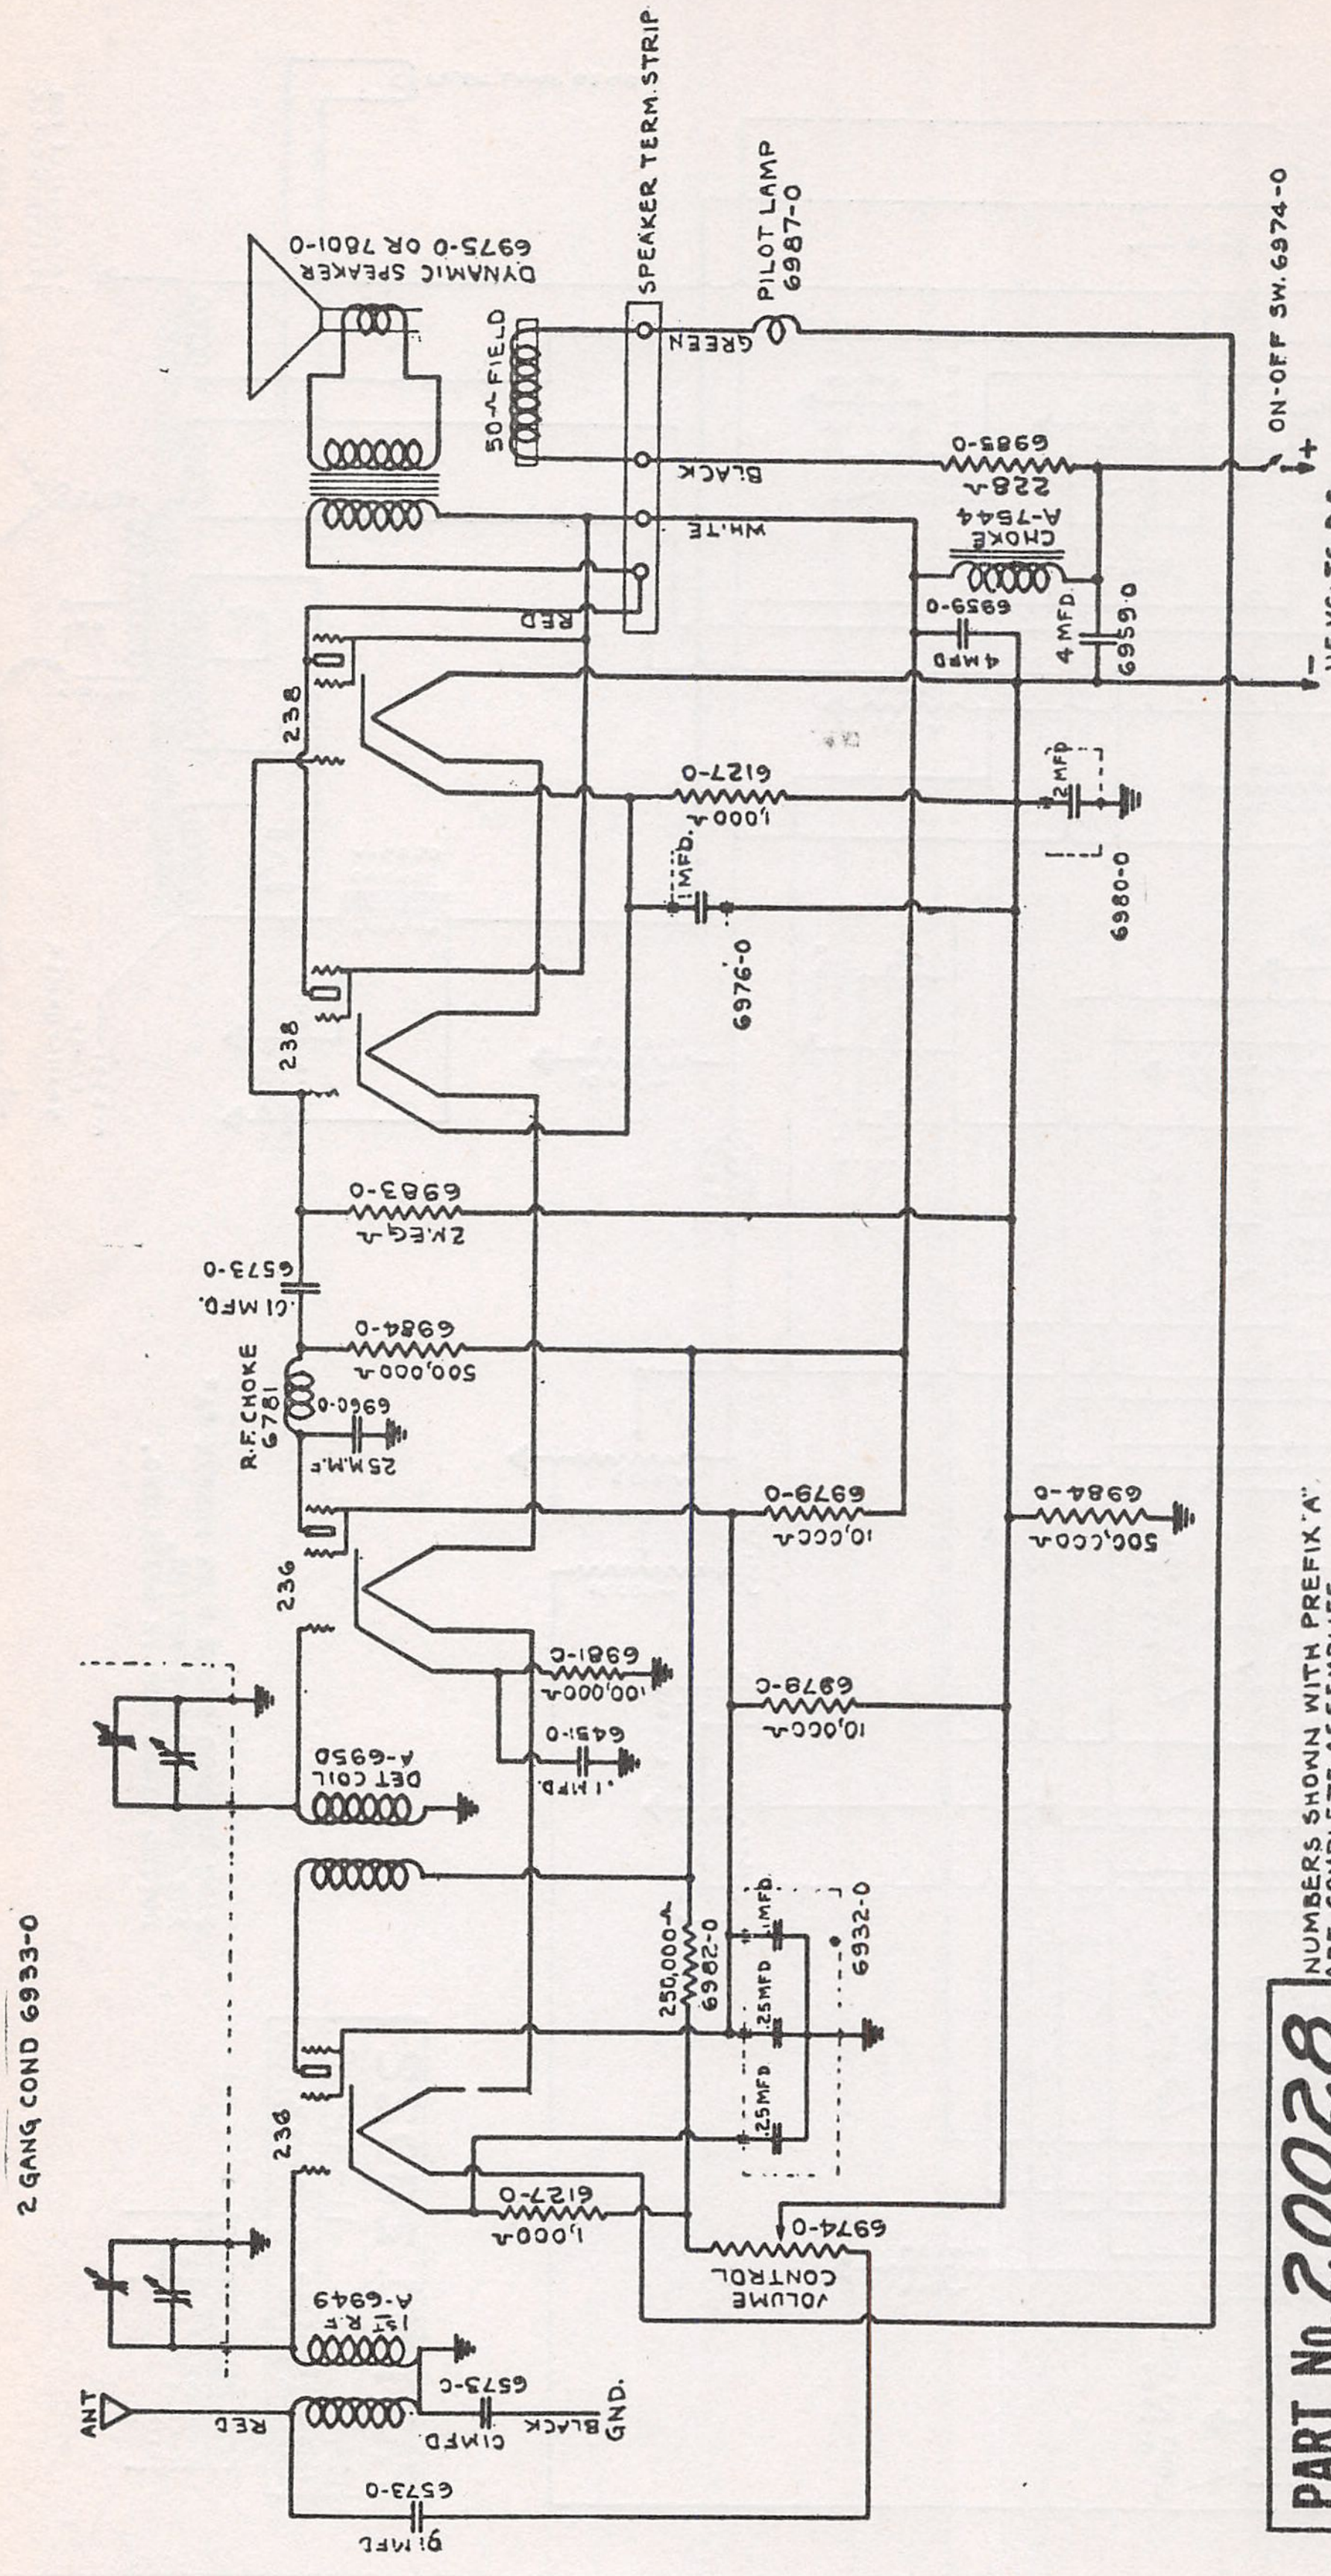
SPEAKER TERM. STRIP
DYNAMIC SPEAKER 6975-0 OR 7801-0
50 Ω FIELD
PILOT LAMP 6987-0
GREEN
BLACK
WH.TE
RED
6985-0 228 Ω
CHOKE A-7544
6959-0
4 MFD
4 MFD
6959-0
ON-OFF SW. 6974-0
+
−
115 VOLTS D.C
238
238
6127-0 1,000 Ω
2 MFD
6980-0
1 MFD.
6976-0
6983-0 2 MEG Ω
.01 MFD. 6573-0
6984-0 500,000 Ω
R.F. CHOKE 6781
6960-0
.25 M.F
236
6979-0 10,000 Ω
6984-0 500,000 Ω
6981-0 100,000 Ω
6451-0 .1 MFD.
DET COIL A-6950
6978-0 10,000 Ω
2 GANG COND 6933-0
250,000 Ω 6982-0
.1 MFD
.25 MFD
.25 MFD
6932-0
236
6127-0 1,000 Ω
6974-0
VOLUME CONTROL
1st R.F A-6949
6573-0
ANT
RED
.01 MFD.
BLACK
GND.
6573-0
.01 MFD.

NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
⏚ DENOTES BASE

PART No.	20028
DATE	4-20-31
THIS SUPERSEDES DRAWING DATED	

ERLA MODEL 336 RECEIVER

NEUTRALIZING AND COMPENSATING INSTRUCTIONS FOR
Fada 10, 11, 30, & 31 Receivers - 60 cycles
Fada 10Z,11Z,30Z,& 31Z Receivers - 25 cycles

NEUTRALIZATION: The first neutrodon is located to the right of the 1st RF tube; the second neutrodon is in front and slightly to the right of the 2nd RF tube; the third neutrodon is directly between the 3rd RF and detector tubes. The neutrodons are numbered according to their respective RF stages. The tube positions are indicated on the card attached to the cabinet lid or back, or back drop door in console model. The use of headphones is strongly recommended.

1. Tune in a strong low wave station or local oscillator of about 250 to 300 meters.
2. Remove the 3rd RF tube and insert a dead tube (a good tube with one heater prong cut off close to base)
3. Using the Fada special adjusting tool (part No. 1356-Ms) turn the third neutrodon to the left or right to point of MINIMUM signal. Replace the live tube.
4. Repeat operations 2 and 3 in the second and first RF stages.

COMPENSATION: Turn the tuning control towards the 100 degree mark until the edges of the rotor plates on tuning condensers two and three (numbered from left to right facing front of set) are exactly flush with the stator plates. Next, using the vernier knob set the rotor plates of the first condenser flush with the stator plates. DO NOT MOVE THE VERNIER KNOB DURING REMAINING OPERATIONS. The compensating condensers are mounted on the top of each tuning condenser. They are adjusted by using a socket wrench on the large nut. After the adjustment has been completed the large nut should be held with a flat open end wrench while the small lock nut is tightened with a socket wrench. These wrenches do not need to be insulated. The small lock nut should be removed before starting to compensate.

1. Using headphones if possible, tune in a weak low wave station of about 250 to 300 meters.
2. Adjust each compensating condenser by turning the large nut either to the left or right to point of MAXIMUM signal. As the signal increases during the compensation it should be reduced by the volume control so that small changes in the compensating condensers will be effective on the ear.

The order of compensating is immaterial. If the maximum points are not pronounced enough, decrease the dial setting by about one or two degrees and bring the signal back to maximum with the compensating condensers. Check the set for performance over entire range. Always recompensate whenever the setting of a neutrodon is changed.

MODEL 16,17,32
MODEL 16-Z, 32-Z
Notes

FADA RADIO & ELECTRIC CORP.

NEUTRALIZING AND COMPENSATING INSTRUCTIONS FOR
FADA 16, 17 & 32 RECEIVERS - 60 CYCLES
FADA 16-Z & 32-Z RECEIVERS - 25 CYCLES

NEUTRALIZATION: There are three neutrodons, one for each rf stage, each numbered to correspond with the stage neutralized, located as follows - 1st between 1st & 2nd rf tubes - front row, that is second and third tubes from electric unit; 2nd between 2nd and 3rd rf tubes, and 3rd between 3rd rf tube and detector.

To neutralize receiver, substitute head phones for loud speaker and proceed as follows: -

- 1st Carefully tune receiver to strong station or local oscillator at 250 to 300 meters.
- 2nd Remove 3rd rf tube and substitute a dead tube (prepared by cutting off one heater prong of a good tube close to base.)
- 3rd Using special Fada adjusting tool (Part No. 1356-Ms) adjust neutrodon to position of minimum signal. Replace live tube.
- 4th Repeat procedure on two remaining rf stages.

COMPENSATION: The compensating condensers are located on the top of their respective tuning condensers. They are adjusted by using a socket wrench on the large nut. After completing the adjustment, the large nut should be held with a flat open-end wrench while the small lock-nut is tightened with a socket wrench. Since the movable plate is at ground potential, it is not necessary to insulate wrenches. The first tuning condenser (nearest electric unit) holds the antenna compensator which is adjusted by means of its knurled nut.

To compensate receiver, substitute head phones for loud speaker and proceed as follows: -

- 1st Carefully tune receiver to weak station or local oscillator at 250 to 300 meters by adjusting tuning control knob.
- 2nd Beginning with antenna compensator carefully adjust each compensator for maximum volume. (It is always good practice to keep the volume control set at maximum when compensating.)
- 3rd After receiver has been compensated in accordance with above instructions, carefully retune and repeat the procedure.

1225-Ms	.25 mfd (across 16-Z speaker field)
1341-Ms	Carbon - 20,000 ohms (green)
1418-Ms	.25-.25 mfd - 200-400 volts (3 term)
1477-Ms	.000125 mfd - grid (Mld.Mica)(green dot)
1478-Ms	.001 mfd - detector (Mld.Mica) (yellow)
1485-Ms	Pilot lamp - 6 volts (orange)
2-1256-Ms	.0125 mfd- tubular (yellow dot)
2-1299-Ms	Carbon- 250 ohms (light brown)
2-1300-Ms	Carbon- 750 ohms (green)
2-1303-Ms	6,000 ohms (3 conn)(antenna circuit)
2-1307-Ms	Condenser - .07 mfd
2-1308-Ms	Carbon - 5,000 ohms (orange)
2-1316-Ms	3,000 ohms (red dot)(cathode circuit)
2094-Y	Choke - 1,400 ohms

FADA RADIO & ELECTRIC CORP. MODELS 25,35-B
Sensitivity Adjustments

Sensitivity Adjustment On Fada 35B

A sensitivity adjustment is incorporated in the FADA 35B. The adjustment appears as a neutrodon (which must be adjusted) with special neutralizing tool part number 1356MS located between the detector tube and the fourth r.f. coil as shown in sketch. The receiver is adjusted at the factory for best operation on an average antenna. Under no circumstances should this adjustment be disturbed until:

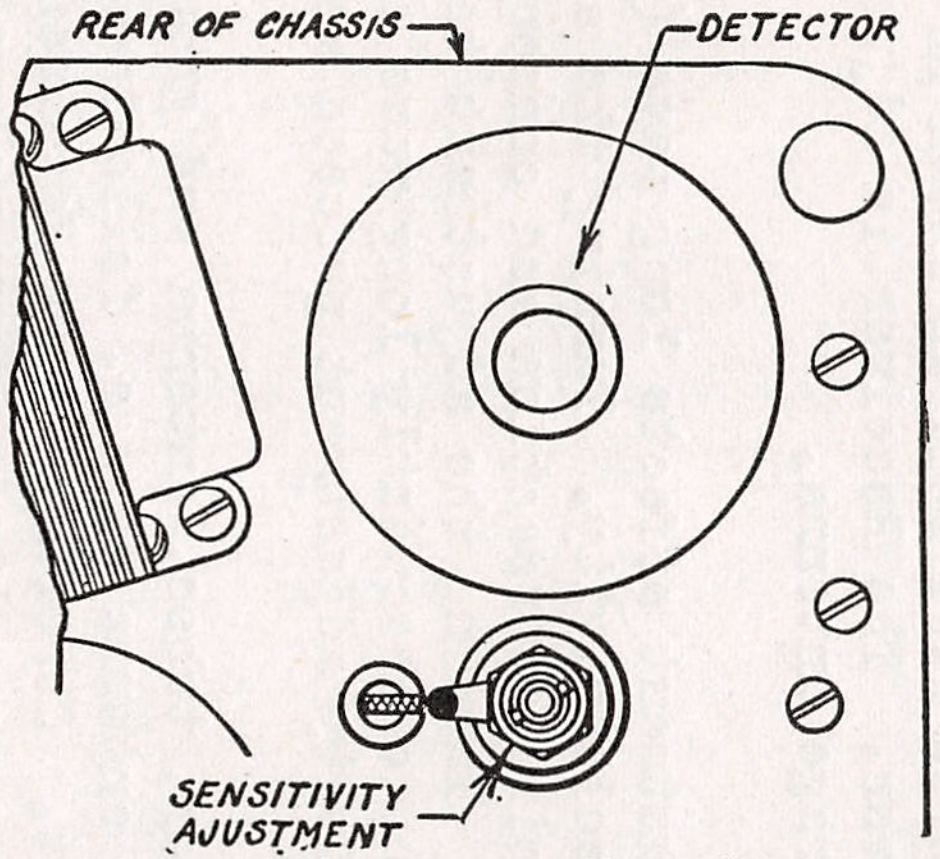

The sensitivity adjustment effects long wave (i. e. 350 meters to 550 meters) sensitivity and selectivity. Turning the adjustment to the right (i. e. down) increases circuit reaction and consequently long wave sensitivity and selectivity. Turning the adjustment to the left (i. e. up) decreases circuit reaction and consequently long wave sensitivity and selectivity. To make sensitivity adjustment proceed as follows:

Make sure the receiver, tubes, antenna and ground are right. Carefully compensate for antenna in use following instructions of receiver instruction sheet. Carefully tune receiver to long wave station (above 500 meters). Turn volume control to maximum. Turn adjustment up or down as required a short distance (say one half turn at a time) and tune thru station noting swish as station is tuned in and out. Adjust to desired point being sure receiver does not squeal (i. e. oscillate).

The Fada 35-B has a hum adjustment located on the rear of the receiver chassis near the phonograph jacks. This adjustment appears as a small shaft with a slot adapted for a screw driver. This is sealed with ambroid after being adjusted at the factory, but the seal may be broken if installation conditions warrant. To adjust receiver for minimum hum, insert screw driver in slot and turn slightly to right and left to position of minimum hum. During this operation the volume control must be turned to zero and the power line plug must be inserted in the socket in the position of minimum hum

Sensitivity Adjustment Fada-25 Receiver

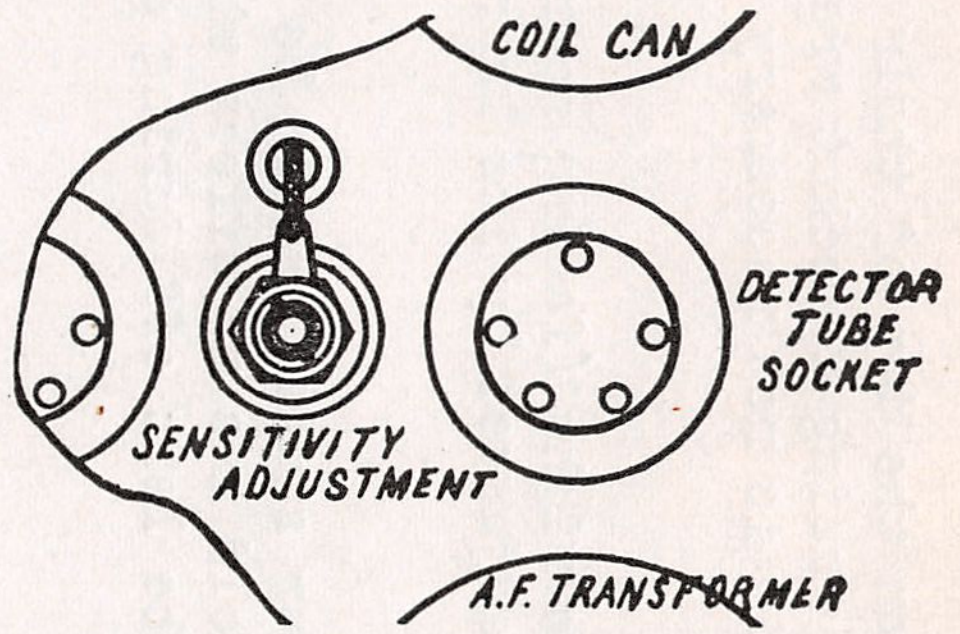

Present production FADA-25 receivers incorporate a sensitivity adjustment. Adjustment is made with a special neutralizing tool part number 1356MS. Facing the rear of the receiver there appears a row of three neutrodons between the r.f. tube sockets. The one on the extreme right, however, is not connected to the usual neutralizing circuits, but is a sensitivity adjustment. Turning this neutrodon up (i.e., to the left) results in minimum circuit reaction and in a more stable receiver. Turning this neutrodon down (i.e., to the right) increases circuit reaction, and consequently sensitivity and selectivity. Advancing this neutrodon too far (i.e., down to the right) will cause long wave oscillation. Maximum sensitivity and selectivity occur when the receiver is adjusted almost to the point of oscillation.

Care should be exercised to insure that everything is in order before the sensitivity adjustment is moved. This adjustment must never be advanced to a point at which sustained oscillation occurs. This adjustment is a useful tool only when carefully used—never attempt to make up for poor compensation or defective tubes.

FADA RADIO & ELECTRIC CORP.

MODEL 40
Notes

COMPENSATING INSTRUCTIONS FOR FADA 40 Receiver - 60 CYCLES ONLY

The compensating condensers are located on the top of their respective turning condensers. They are adjusted by using a socket wrench. Since the movable plates are at ground potential it is not necessary to insulate the wrench.

The first tuning condenser on the extreme right (facing rear of Receiver) holds the antenna compensator which is adjusted by its knurled nut.

The static shield which is mounted on four studs, should be removed by loosening the four thumb nuts. This shield has no effect whatsoever on Receiver adjustment, consequently it may be left off during compensation, etc.

INSTRUCTIONS FOR SENSITIVITY ADJUSTMENT

The sensitivity adjuster appears as a neutrodon (which must be adjusted with special neutralizing tool, part No. 1356-Ms) located between the detector tube and the fourth R.F. coil as shown in instruction sheet which accompanies each Receiver. The Receiver is adjusted at the factory for best operation on an average antenna.

The sensitivity adjustment effects long wave (i.e. 350 meters to 500 meters) sensitivity and selectivity. Turning the adjustment to the right (i.e. down) increases circuit reaction and consequently long wave sensitivity and selectivity. Turning the adjustment to the left (i.e.up) decreases circuit reaction and consequently long wave sensitivity and selectivity. To make sensitivity adjustment proceed as follows:

Make sure the Receiver, tubes, antenna and ground are right. Carefully compensate for the antenna in use, following instructions given in Receiver instruction sheet. Carefully tune Receiver to a long wave station (as near 500 meters as possible). Turn volume control to maximum. Advance the sensitivity adjustment (i.e. tune down to right) a short distance (say one-half turn at a time) and tune through the station, noting the swish as the station is tuned in and out. Continue this procedure until the Receiver squeals (oscillates) and then retard neutrodon until Receiver is just below the point of oscillation (i.e. does not oscillate). This adjusts the Receiver for maximum radio frequency performance. If the Receiver oscillates at long waves before the adjustment of the neutrodon has been altered, the reverse procedure is followed . That is, the neutrodon is retarded (i.e. up to the left) a half turn at a time until the oscillation, noted when turning thru a station, ceases. Oscillation is evidenced by a pronounced squeal or note with changes in pitch as the tuning dial is moved. Do not confuse carrier swish or heterodynes between stations with oscillation.

Model 41,42,44,46,47 (KA)

VOLTAGE READINGS ON 60-CYCLE KA RECEIVER

The following voltage readings are to be taken at points beneath the chassis. Be sure that the overall condenser and tube shield housing cover is fastened in place or else oscillation will occur which will affect voltage readings. The speaker field coil must remain connected in the circuit and all tubes must be in their correct sockets, otherwise extensive damage will be done.

1. General Information
   Volume Control set at any position but no signal
   Voltage regulator tap in high position.

Line Volts	Line Watts	Filament Volts Rect.	Pwr.	Amp.	Plate-Cathode Volts Pwr.	RF	Detector Det.Amp.	Screen Volts RF
100	78	4.2	2.1	2.1				
110	96	4.8	2.35	2.35				
115	100	5.0	2.5	2.5	233	152	**	85
120	114	5.15	2.6	2.6				
130	132	5.5	2.8	2.8				

** A voltage reading cannot be obtained at the plate prong of the two (2) element detector. The plate voltage reading on the detector amplifier should also be ignored, because to take such a reading, it becomes necessary to shunt the voltmeter across several of the resistances in the circuit and the result is a reading of about 20 volts which will vary in accordance with the intensity of the signal received.

Voltages Across Condenser Block Sections (Line Voltage 115)

1st	2nd	3rd	4th
390	352	280	152

Bleeder Circuit Voltages (Line Voltage 115)

Volts Across 100 ohms - 2.5
Volts Across 300 ohms - 10
Volts Across 800 ohms - 47.5
Volts Across 5,000 ohms - 118
Volts Across 6,700 ohms - 53
Volts Across 13,000 ohms - 89
Volts Across Speaker Field - 72
Volts Across 400 ohm choke - 38

NOTE:- Use a high resistance voltmeter (1000 ohms per volt). Readings may vary slightly due to commercial tolerance allowable in the manufacture of electrical equipment and tubes.

FADA RADIO & ELECTRIC CORP. MODEL 61, 66 (KX)

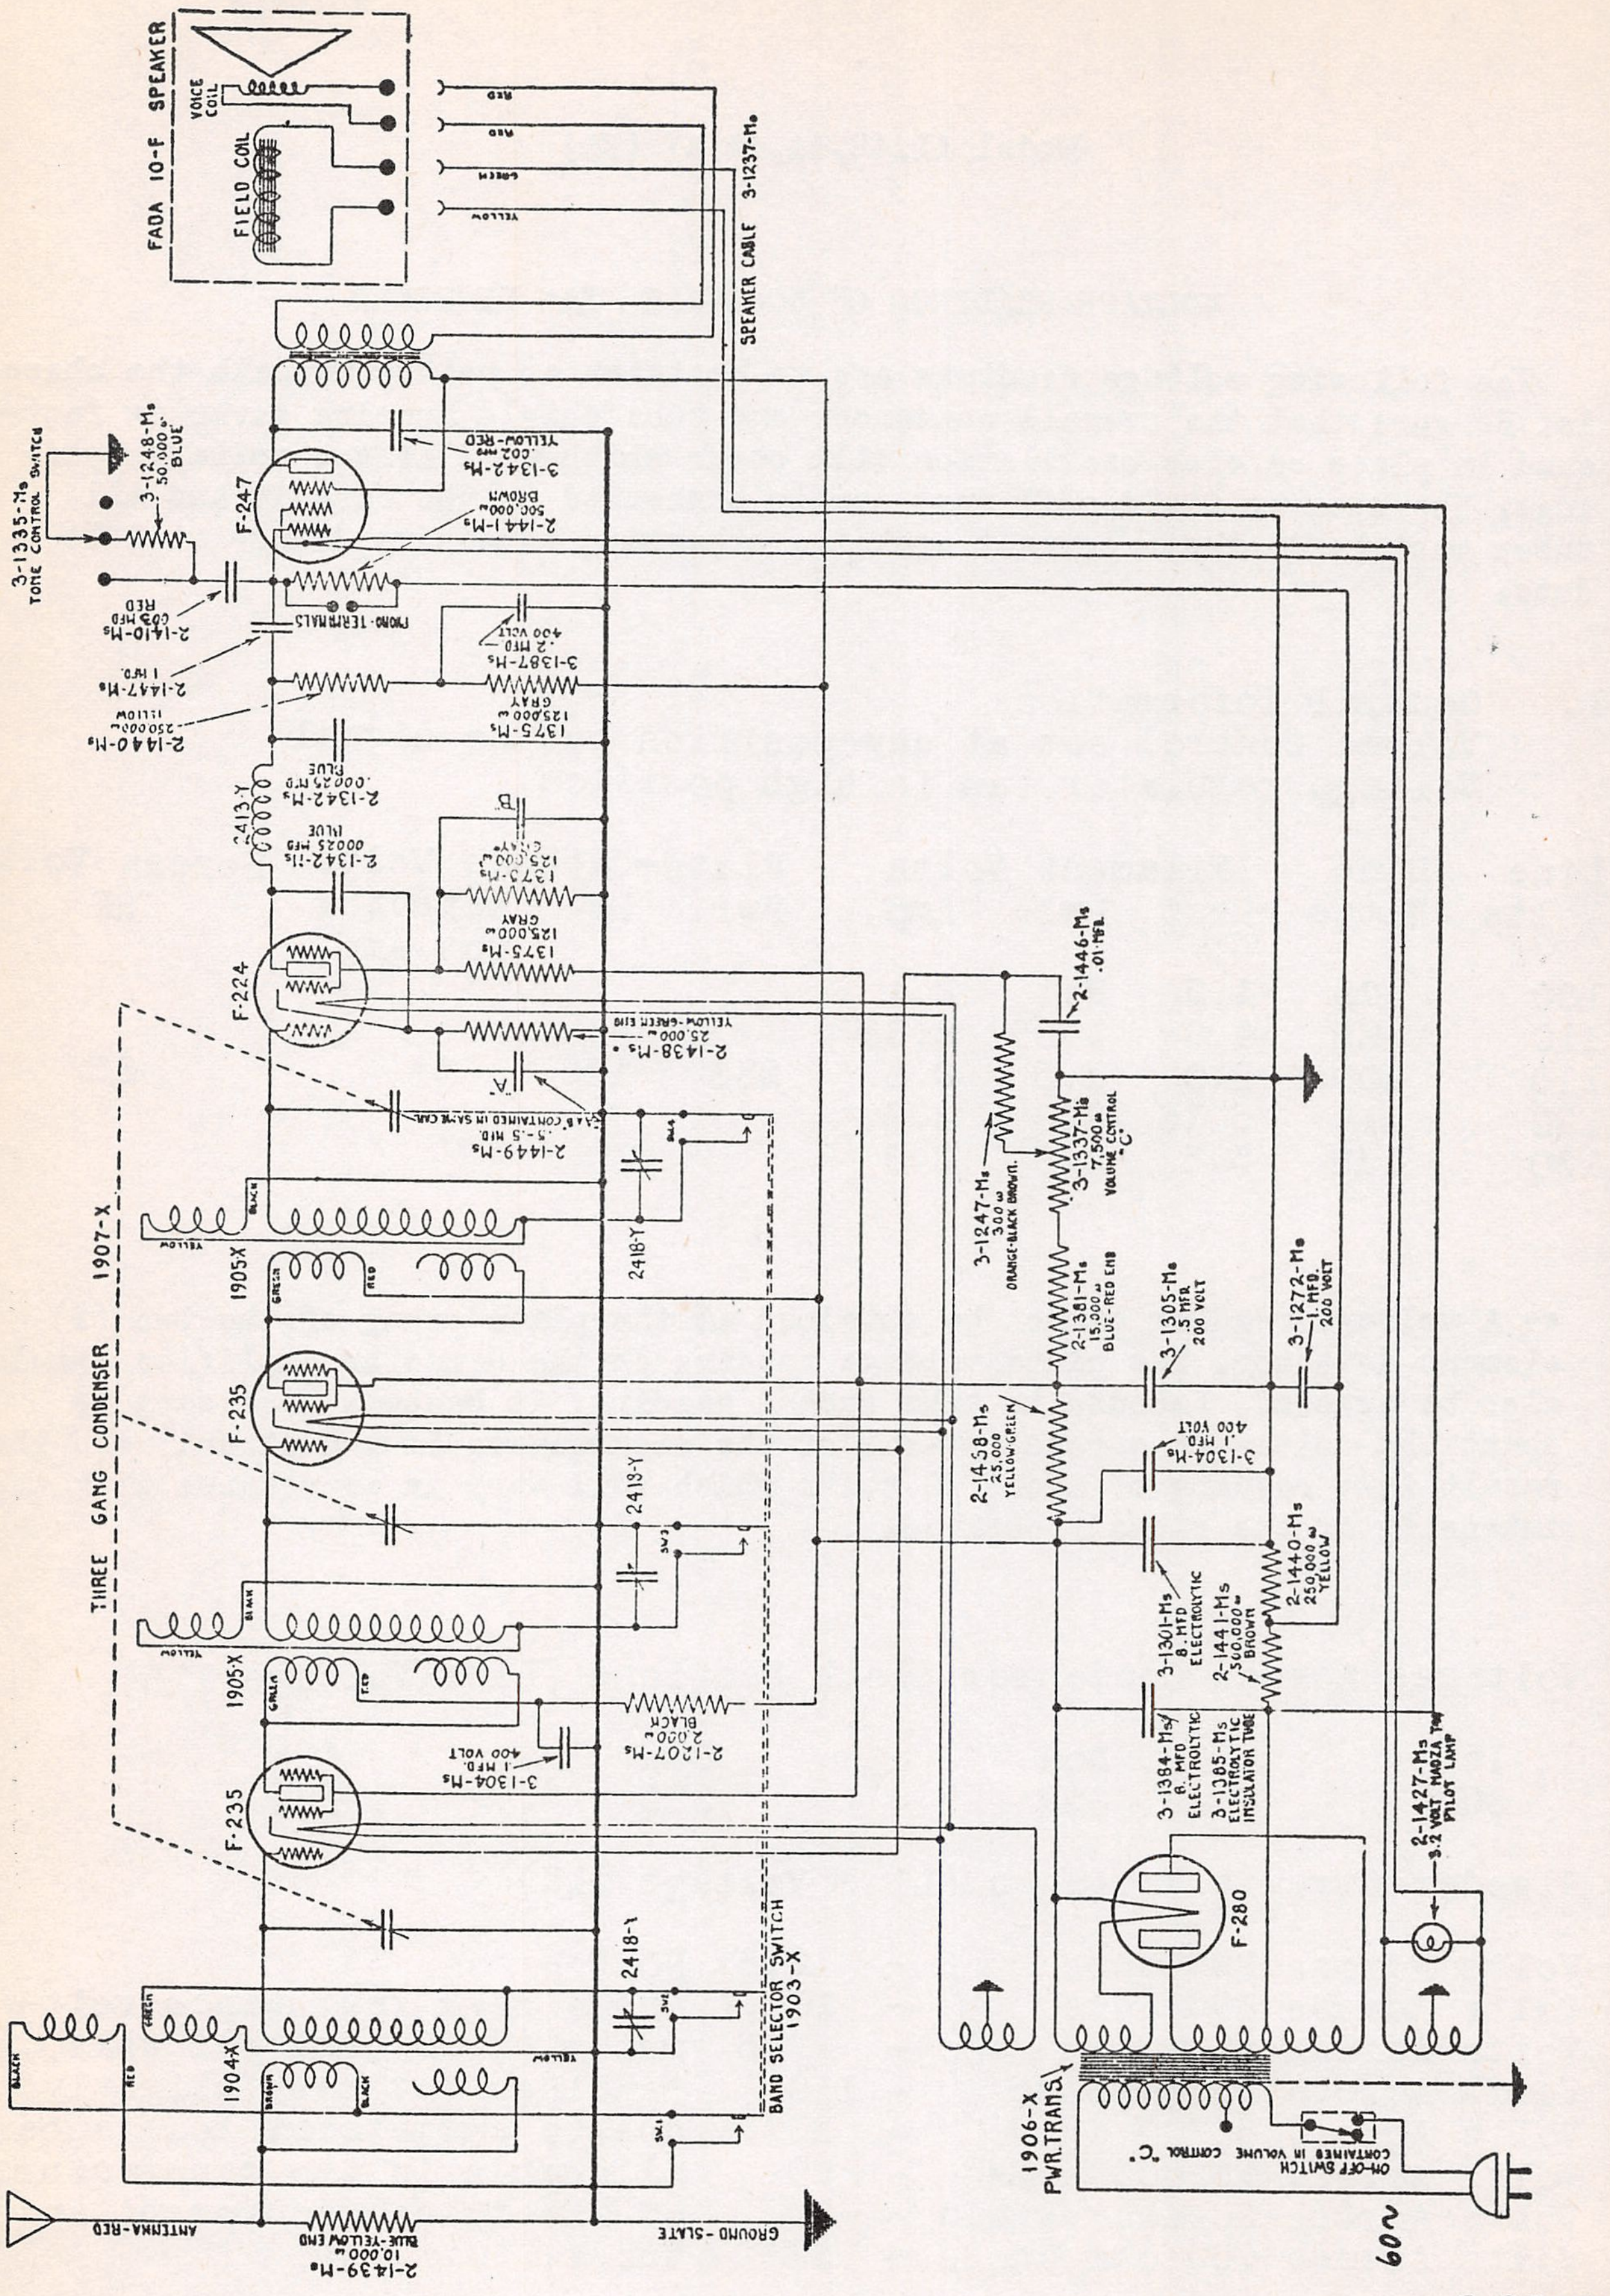
FADA 10-F SPEAKER
VOICE COIL
FIELD COIL
RED
RED
GREEN
YELLOW
SPEAKER CABLE 3-1237-M₆
3-1335-M₆ TONE CONTROL SWITCH
3-1248-M₆ 50,000 ω BLUE
2-1410-M₅ .003 MFD RED
2-1447-M₅ 1 MFD.
2-1440-M₅ 250000 ω YELLOW
F-247
3-1342-M₅ .002 MFD YELLOW-RED
2-1441-M₅ 500,000 ω BROWN
PHONO-TERMINALS
3-1387-M₅ .2 MFD 400 VOLT
1375-M₅ 125,000 ω GRAY
2-1342-M₅ .00025 MFD BLUE
2413-Y
2-1342-M₅ .00025 MFD BLUE
1373-M₅ 125,000 ω GRAY
"B"
1375-M₅ 125,000 ω GRAY
F-224
2-1438-M₅ 25,000 ω YELLOW-GREEN END
"A"
"A&B" CONTAINED IN SAME CAN
2-1449-M₅ .5-.5 MFD.
2-1446-M₅ .01 MFD.
3-1247-M₅ 300 ω ORANGE-BLACK BROWN
3-1337-M₅ 7,500 ω VOLUME CONTROL "C"
2-1381-M₅ 15,000 ω BLUE-RED END
3-1305-M₅ .5 MFD 200 VOLT
3-1272-M₆ 1 MFD. 200 VOLT
THREE GANG CONDENSER 1907-X
1905X
2418-Y
F-235
2-1438-M₅ 25,000 YELLOW-GREEN
3-1304-M₅ .1 MFD 400 VOLT
2418-Y
2-1440-M₅ 250,000 ω YELLOW
3-1301-M₅ 8 MFD ELECTROLYTIC
2-1441-M₅ 500,000 ω BROWN
1905X
2-1207-M₅ 2,000 ω BLACK
3-1304-M₅ .1 MFD. 400 VOLT
3-1384-M₅ 8 MFD ELECTROLYTIC
3-1385-M₅ ELECTROLYTIC INSULATOR TUBE
2-1427-M₅ 3.2 VOLT MAZDA TW PILOT LAMP
F-235
F-280
2418-Y
BAND SELECTOR SWITCH 1903-X
1904X
BLACK
RED
GREEN
BROWN
BLACK
YELLOW
SW1
SW2
SW3
1906-X PWR.TRANS.
ON-OFF SWITCH CONTAINED IN VOLUME CONTROL "C"
60~
ANTENNA-RED
2-1439-M₆ 10,000 ω BLUE-YELLOW END
GROUND-SLATE

S-2038

FADA RADIO & ELECTRIC CORP.

MODEL 81, 82,
84, 86 (KB)

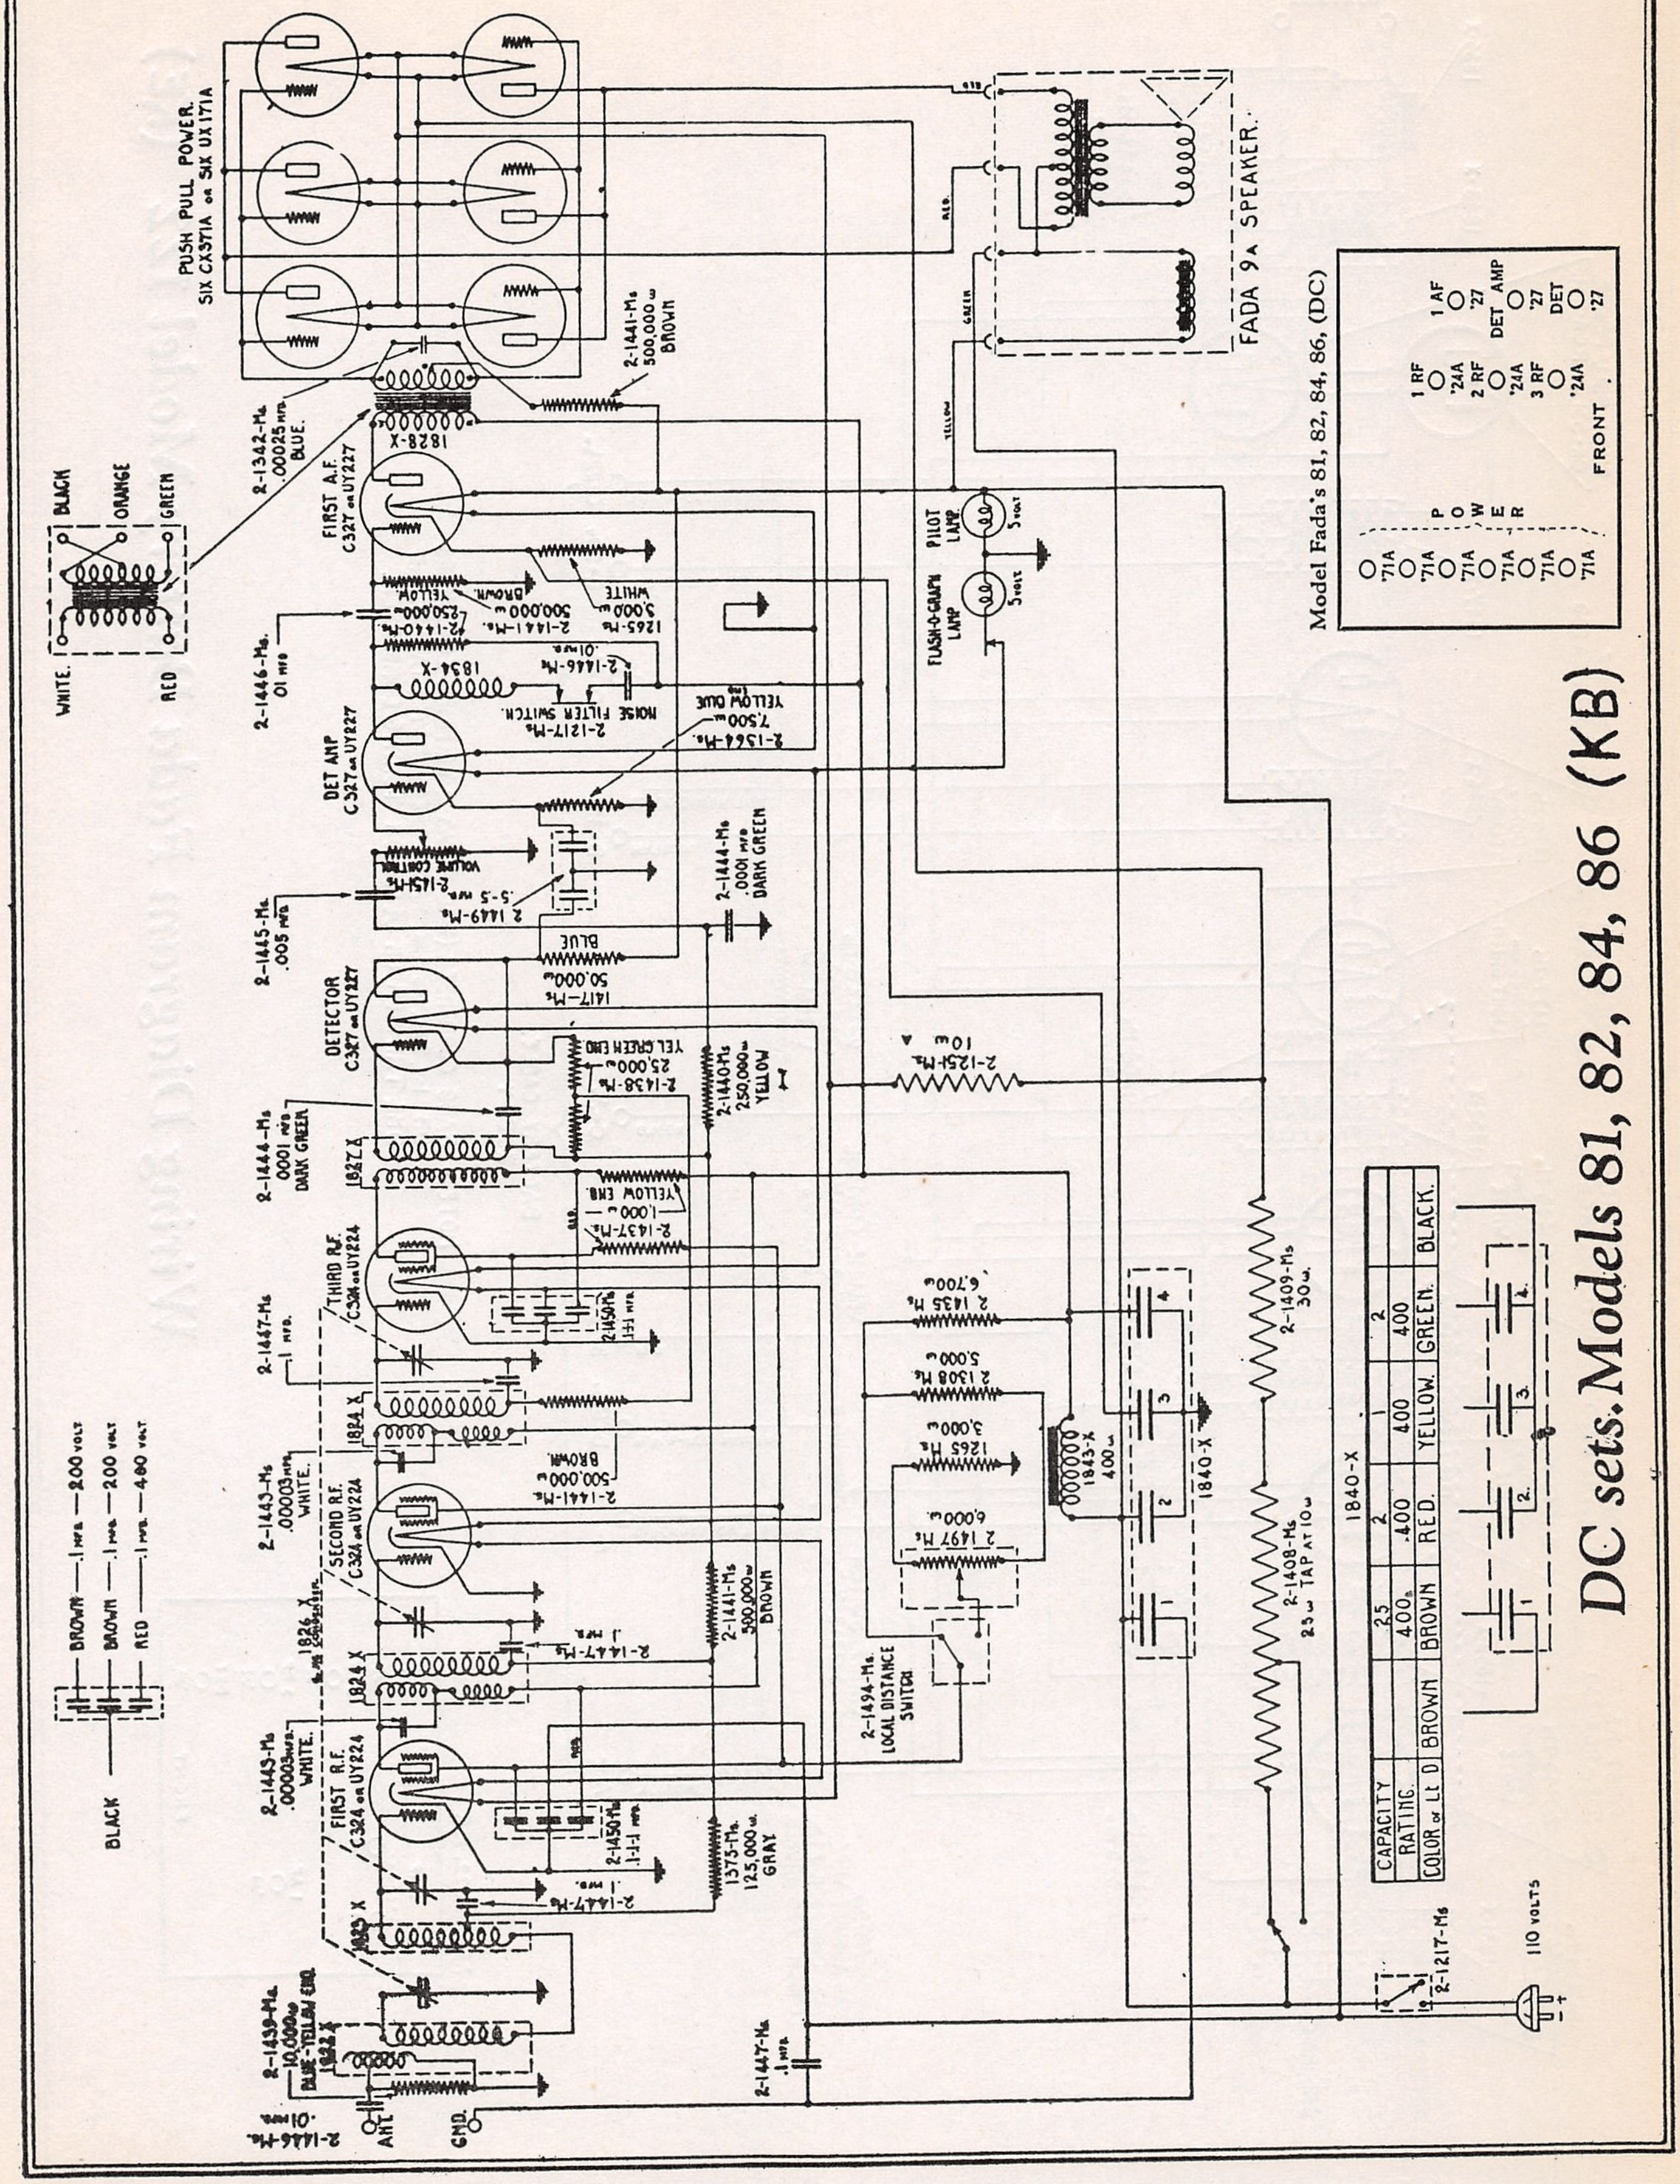
PUSH PULL POWER.
SIX CX371A or SIX UX171A
FADA 9A SPEAKER.
2-1441-Ms 500,000Ω BROWN
2-1342-Ms .00025 mfd. BLUE.
1828-X
BLACK
ORANGE
GREEN
WHITE.
RED
FIRST A.F. C327 or UY227
2-1441-Ms 500,000Ω BROWN.
2-1440-Ms 250,000Ω YELLOW.
1265-Ms 3,000Ω WHITE
2-1446-Ms .01 mfd
2-1446-Ms .01 mfd.
1834-X
2-1217-Ms NOISE FILTER SWITCH.
2-1564-Ms 7,500Ω YELLOW DUE
DET AMP C327 or UY227
2-1451-Ms VOLUME CONTROL
2-1449-Ms .5-.5 mfd.
2-1445-Ms .005 mfd
2-1444-Ms .0001 mfd DARK GREEN
1417-Ms 50,000Ω BLUE
DETECTOR C327 or UY227
2-1438-Ms 25,000Ω YEL GREEN END
2-1440-Ms 250,000Ω YELLOW
2-1444-Ms .0001 mfd DARK GREEN
1827 X
2-1437-Ms 1,000Ω YELLOW END.
THIRD R.F. C324 or UY224
2-1447-Ms .1 mfd.
2-1450-Ms .1-.1-.1 mfd.
1824 X
2-1441-Ms 500,000Ω BROWN.
2-1443-Ms .00003 mfd. WHITE.
SECOND R.F. C324 or UY224
1826 X
2-1447-Ms .1 mfd.
2-1441-Ms 500,000Ω BROWN
2-1443-Ms .00003 mfd. WHITE.
FIRST R.F. C324 or UY224
2-1450-Ms .1-.1-.1 mfd.
1375-Ms 125,000Ω GRAY
2-1447-Ms .1 mfd.
1825 X
2-1439-Ms 10,000Ω BLUE-YELLOW END
1822 X
2-1446-Ms .01 mfd.
ANT.
GND.
2-1447-Ms .1 mfd.
BROWN — .1 mfd. — 200 volt
BROWN — .1 mfd. — 200 volt
RED — .1 mfd. — 400 volt
BLACK
PILOT LAMP 5 volt
FLASH-O-GRAPH LAMP 5 volt
RED
GREEN
YELLOW
2-1251-Ms 10Ω
2-1435-Ms 6,700Ω
2-1308-Ms 5,000Ω
1265-Ms 3,000Ω
2-1497-Ms 6,000Ω
1843-X 400Ω
1840-X
2-1494-Ms LOCAL DISTANCE SWITCH
2-1409-Ms 30Ω
2-1408-Ms 23Ω TAP AT 10Ω
2-1217-Ms
110 VOLTS
1 2 3 4
Model Fada's 81, 82, 84, 86, (DC)
'71A
'71A
'71A
'71A
'71A
'71A
POWER
1 RF '24A
2 RF '24A
3 RF '24A
1 AF '27
DET AMP '27
DET '27
FRONT

1840-X

CAPACITY		.25	2	1	2	
RATING.		400	.400	400	400	
COLOR or Lt D	BROWN	BROWN	RED.	YELLOW.	GREEN.	BLACK.

DC sets. Models 81, 82, 84, 86 (KB)

MODEL 122 (KE)

FADA RADIO & ELECTRIC CORP.

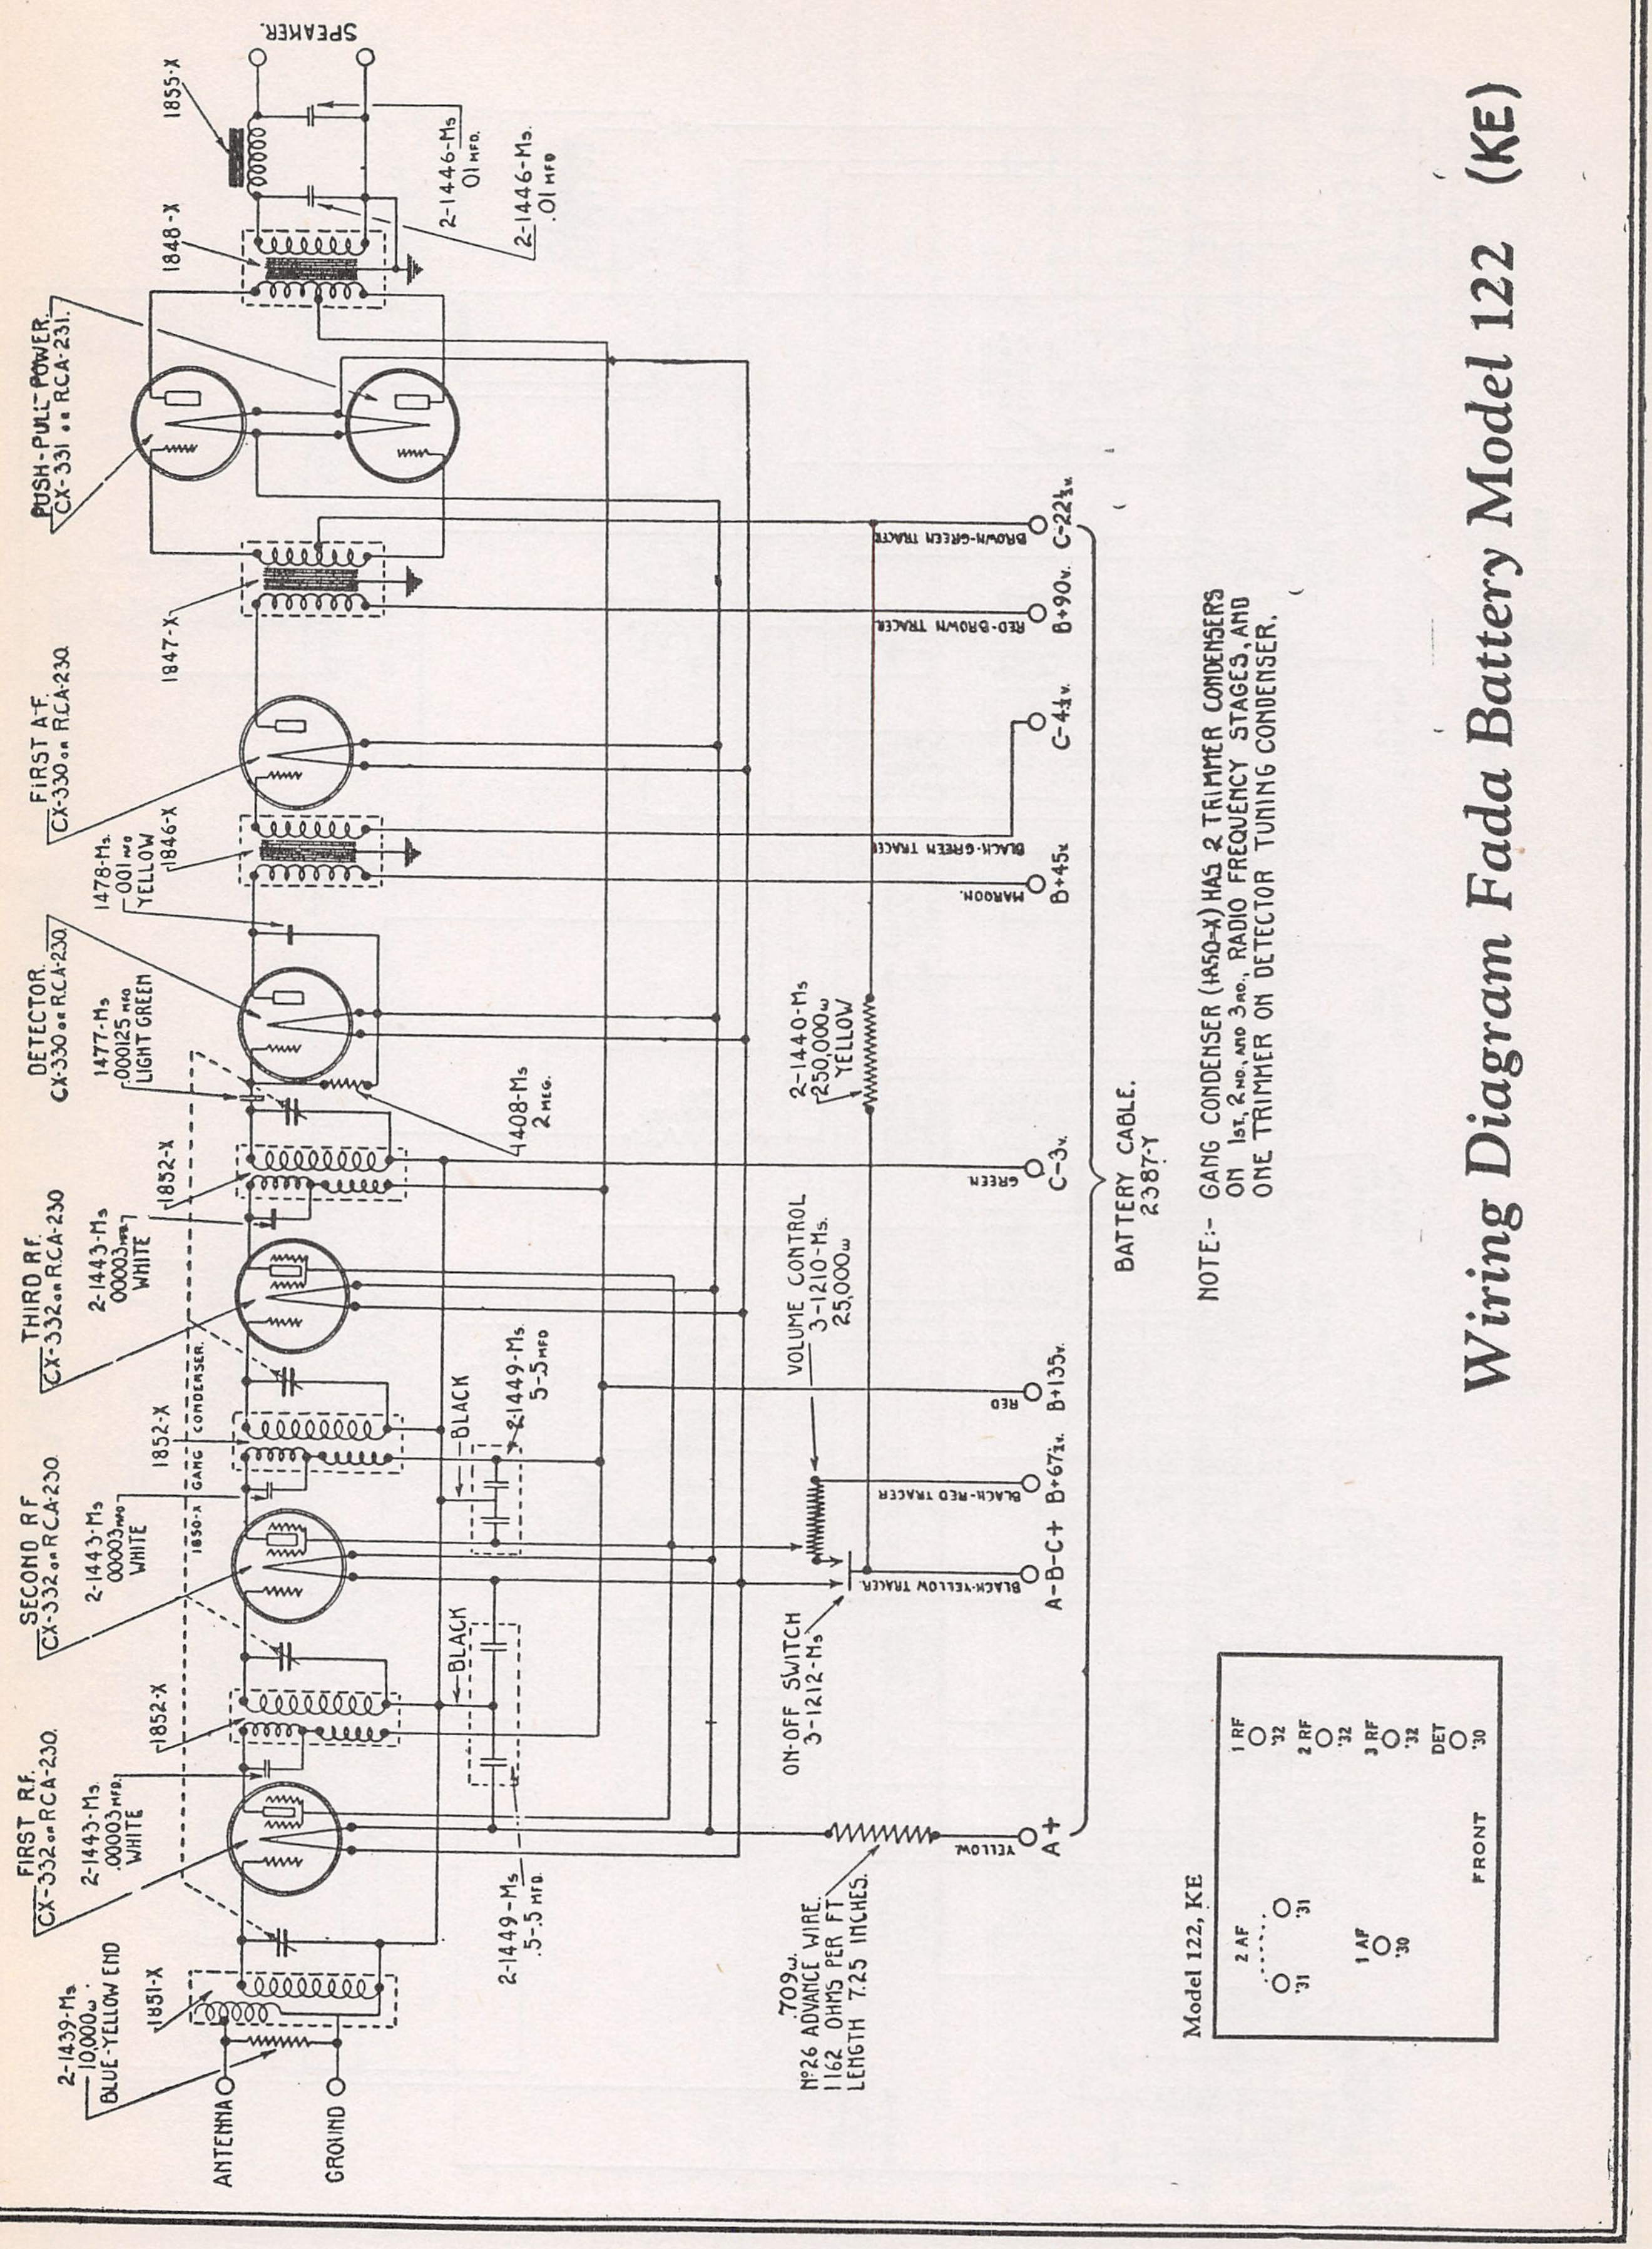
SPEAKER.
1855-X
2-1446-Ms. .01 MFD.
2-1446-Ms. .01 MFD
1848-X
PUSH-PULL POWER CX-331 or RCA-231.
1847-X
FIRST A.F. CX-330 or RCA-230
1478-Ms. .001 MFD YELLOW
1846-X
DETECTOR CX-330 or RCA-230
1477-Ms .000125 MFD LIGHT GREEN
408-Ms 2 MEG.
1852-X
THIRD RF. CX-332 or RCA-230
2-1443-Ms .00003 MFD WHITE
GANG CONDENSER
1850-X
1852-X
SECOND RF CX-332 or RCA-230
2-1443-Ms .00003 MFD WHITE
BLACK
2-1449-Ms .5-.5 MFD
BLACK
1852-X
FIRST RF. CX-332 or RCA-230.
2-1443-Ms. .00003 MFD. WHITE
1851-X
2-1439-Ms. 10,000 Ω BLUE-YELLOW END
ANTENNA
GROUND
2-1449-Ms .5-.5 MFD.
709 Ω. No26 ADVANCE WIRE. 1.162 OHMS PER FT. LENGTH 7.25 INCHES.
ON-OFF SWITCH 3-1212-Ms
VOLUME CONTROL 3-1210-Ms. 25,000 Ω
2-1440-Ms 250,000 Ω YELLOW
BROWN-GREEN TRACER
RED-BROWN TRACER
BLACK-GREEN TRACER
MAROON.
GREEN
RED
BLACK-RED TRACER
BLACK-YELLOW TRACER
YELLOW
C-22½v.
B+90v.
C-4½v.
B+45v.
C-3v.
B+135v.
B+67½v.
A-B-C+
A+
BATTERY CABLE. 2387-Y
Model 122, KE
2 AF
'31
'31
1 AF
'30
1 RF
'32
2 RF
'32
3 RF
'32
DET
'30
FRONT

NOTE:- GANG CONDENSER (1850-X) HAS 2 TRIMMER CONDENSERS ON 1st, 2nd, AND 3rd., RADIO FREQUENCY STAGES, AND ONE TRIMMER ON DETECTOR TUNING CONDENSER.

Wiring Diagram Fada Battery Model 122 (KE)

FADA RADIO & ELECTRIC CORP.

MODEL 171, 173 (KOC)
110 Volt DC

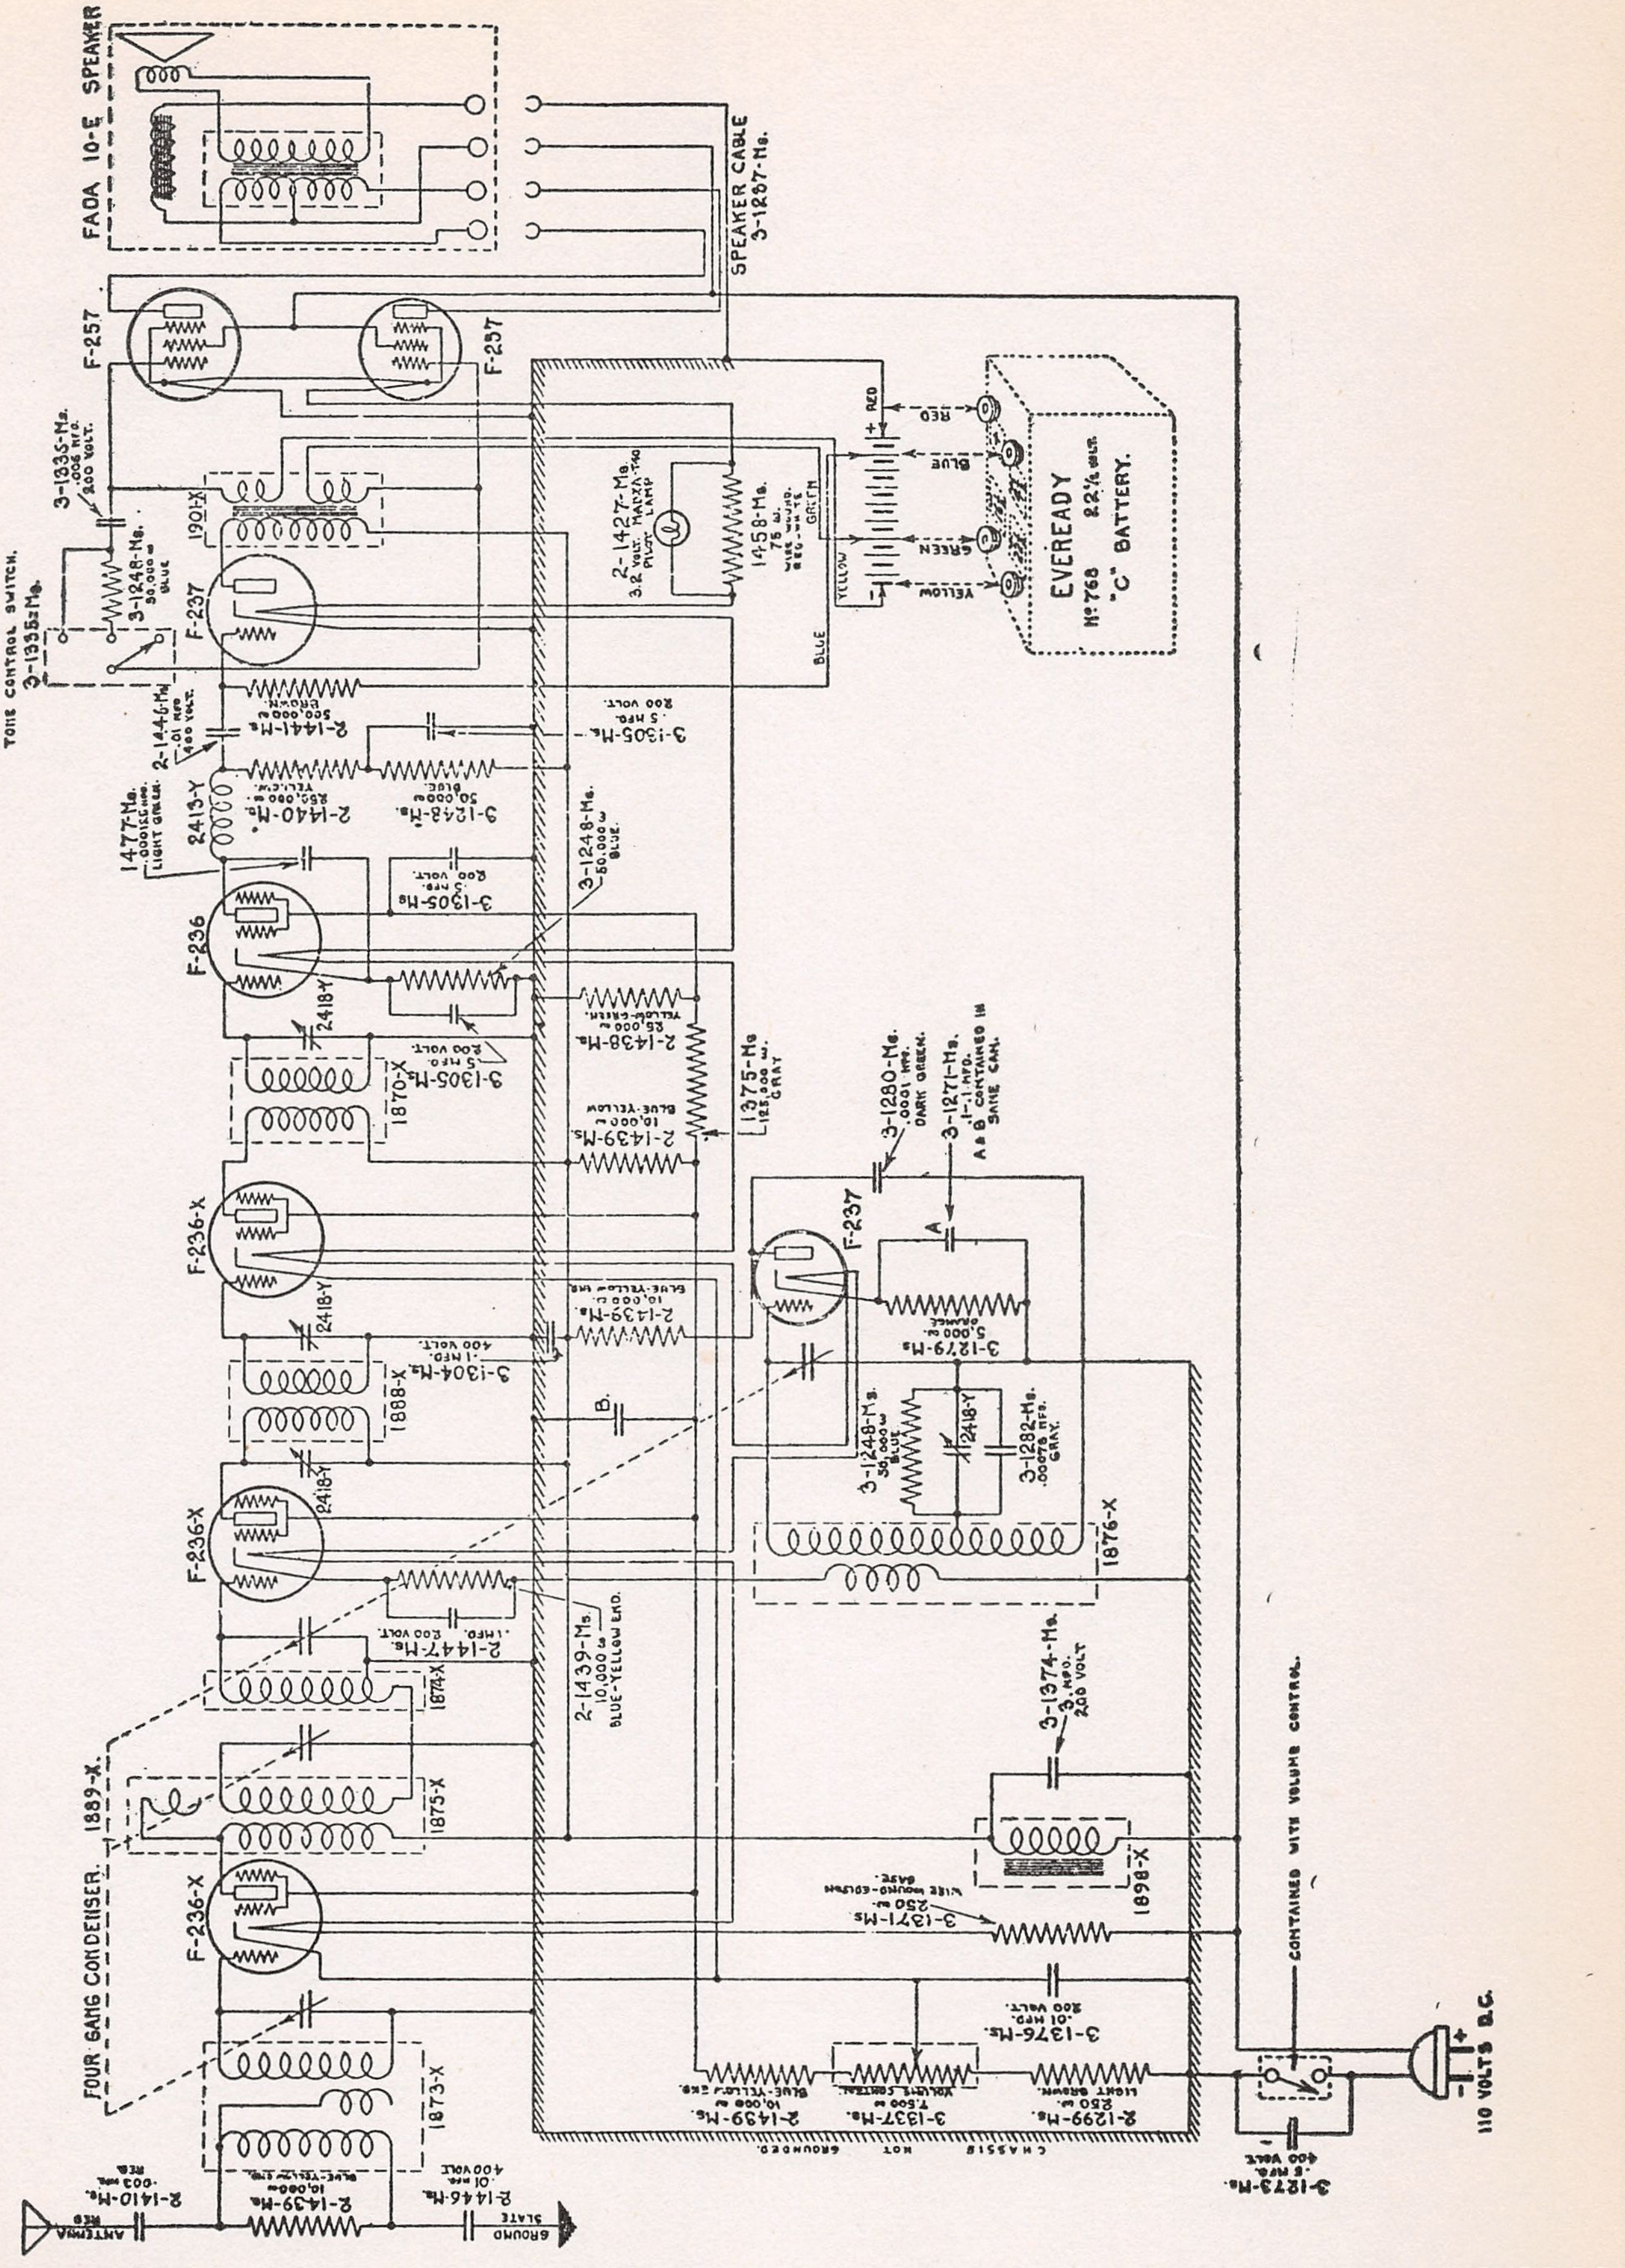
FADA 10-E SPEAKER
SPEAKER CABLE 3-1287-Ms.
F-257
F-237
3-1335-Ms. .006 MFD. 200 VOLT.
TONE CONTROL SWITCH. 3-1335-Ms.
3-1248-Ms. 50,000 ω BLUE
1901-X
F-237
2-1427-Ms. 3.2 VOLT. MAZDA-T40 PILOT LAMP
1458-Ms. 75 ω. WIRE WOUND. RED-WHITE
RED
BLUE
GREEN
YELLOW
EVEREADY No. 768 22½ VOLT "C" BATTERY.
2-1446-Ms. .01 MFD 400 VOLT.
2-1441-Ms. 500,000 ω BROWN.
3-1305-Ms. .5 MFD. 200 VOLT.
1477-Ms. .00015 MFD. LIGHT GREEN.
2413-Y
2-1440-Ms. 250,000 ω YELLOW.
3-1248-Ms. 50,000 ω BLUE.
3-1305-Ms. .5 MFD. 200 VOLT.
3-1248-Ms. 50,000 ω BLUE.
F-236
2418-Y
2-1438-Ms. 25,000 ω YELLOW-GREEN.
3-1305-Ms. .5 MFD. 200 VOLT.
1870-X
1375-Ms. 125,000 ω. GRAY
2-1439-Ms. 10,000 ω BLUE-YELLOW
F-236-X
2418-Y
2-1439-Ms. 10,000 ω BLUE-YELLOW END.
3-1304-Ms. .1 MFD. 400 VOLT.
1888-X
B.
F-237
3-1280-Ms. .0001 MFD. DARK GREEN.
3-1271-Ms. .1-.1 MFD. A & B CONTAINED IN SAME CAN.
A
3-1279-Ms. 5,000 ω. ORANGE
3-1248-Ms. 50,000 ω BLUE
2418-Y
3-1282-Ms. .00075 MFD. GRAY.
1876-X
F-236-X
2418-Y
2-1447-Ms. .1 MFD. 200 VOLT.
2-1439-Ms. 10,000 ω BLUE-YELLOW END.
1874-X
1889-X.
1875-X
FOUR GANG CONDENSER.
F-236-X
3-1374-Ms. 3. MFD. 200 VOLT
1898-X
3-1371-Ms. 250 ω. WIRE WOUND-EDISON BASE.
3-1376-Ms. .01 MFD. 200 VOLT.
CONTAINED WITH VOLUME CONTROL.
1873-X
2-1439-Ms. 10,000 ω BLUE-YELLOW END.
3-1337-Ms. 7,500 ω VOLUME CONTROL.
2-1299-Ms. 250 ω. LIGHT BROWN.
CHASSIS NOT GROUNDED.
110 VOLTS D.C.
3-1273-Ms. .5 MFD. 400 VOLT
ANTENNA RED
2-1410-Ms. .003 MFD. RED
2-1439-Ms. 10,000 ω BLUE-YELLOW END.
2-1446-Ms. .01 MFD. 400 VOLT
GROUND SLATE

S-2039

MODEL Acratone 2
Schematic

FEDERATED PURCHASER

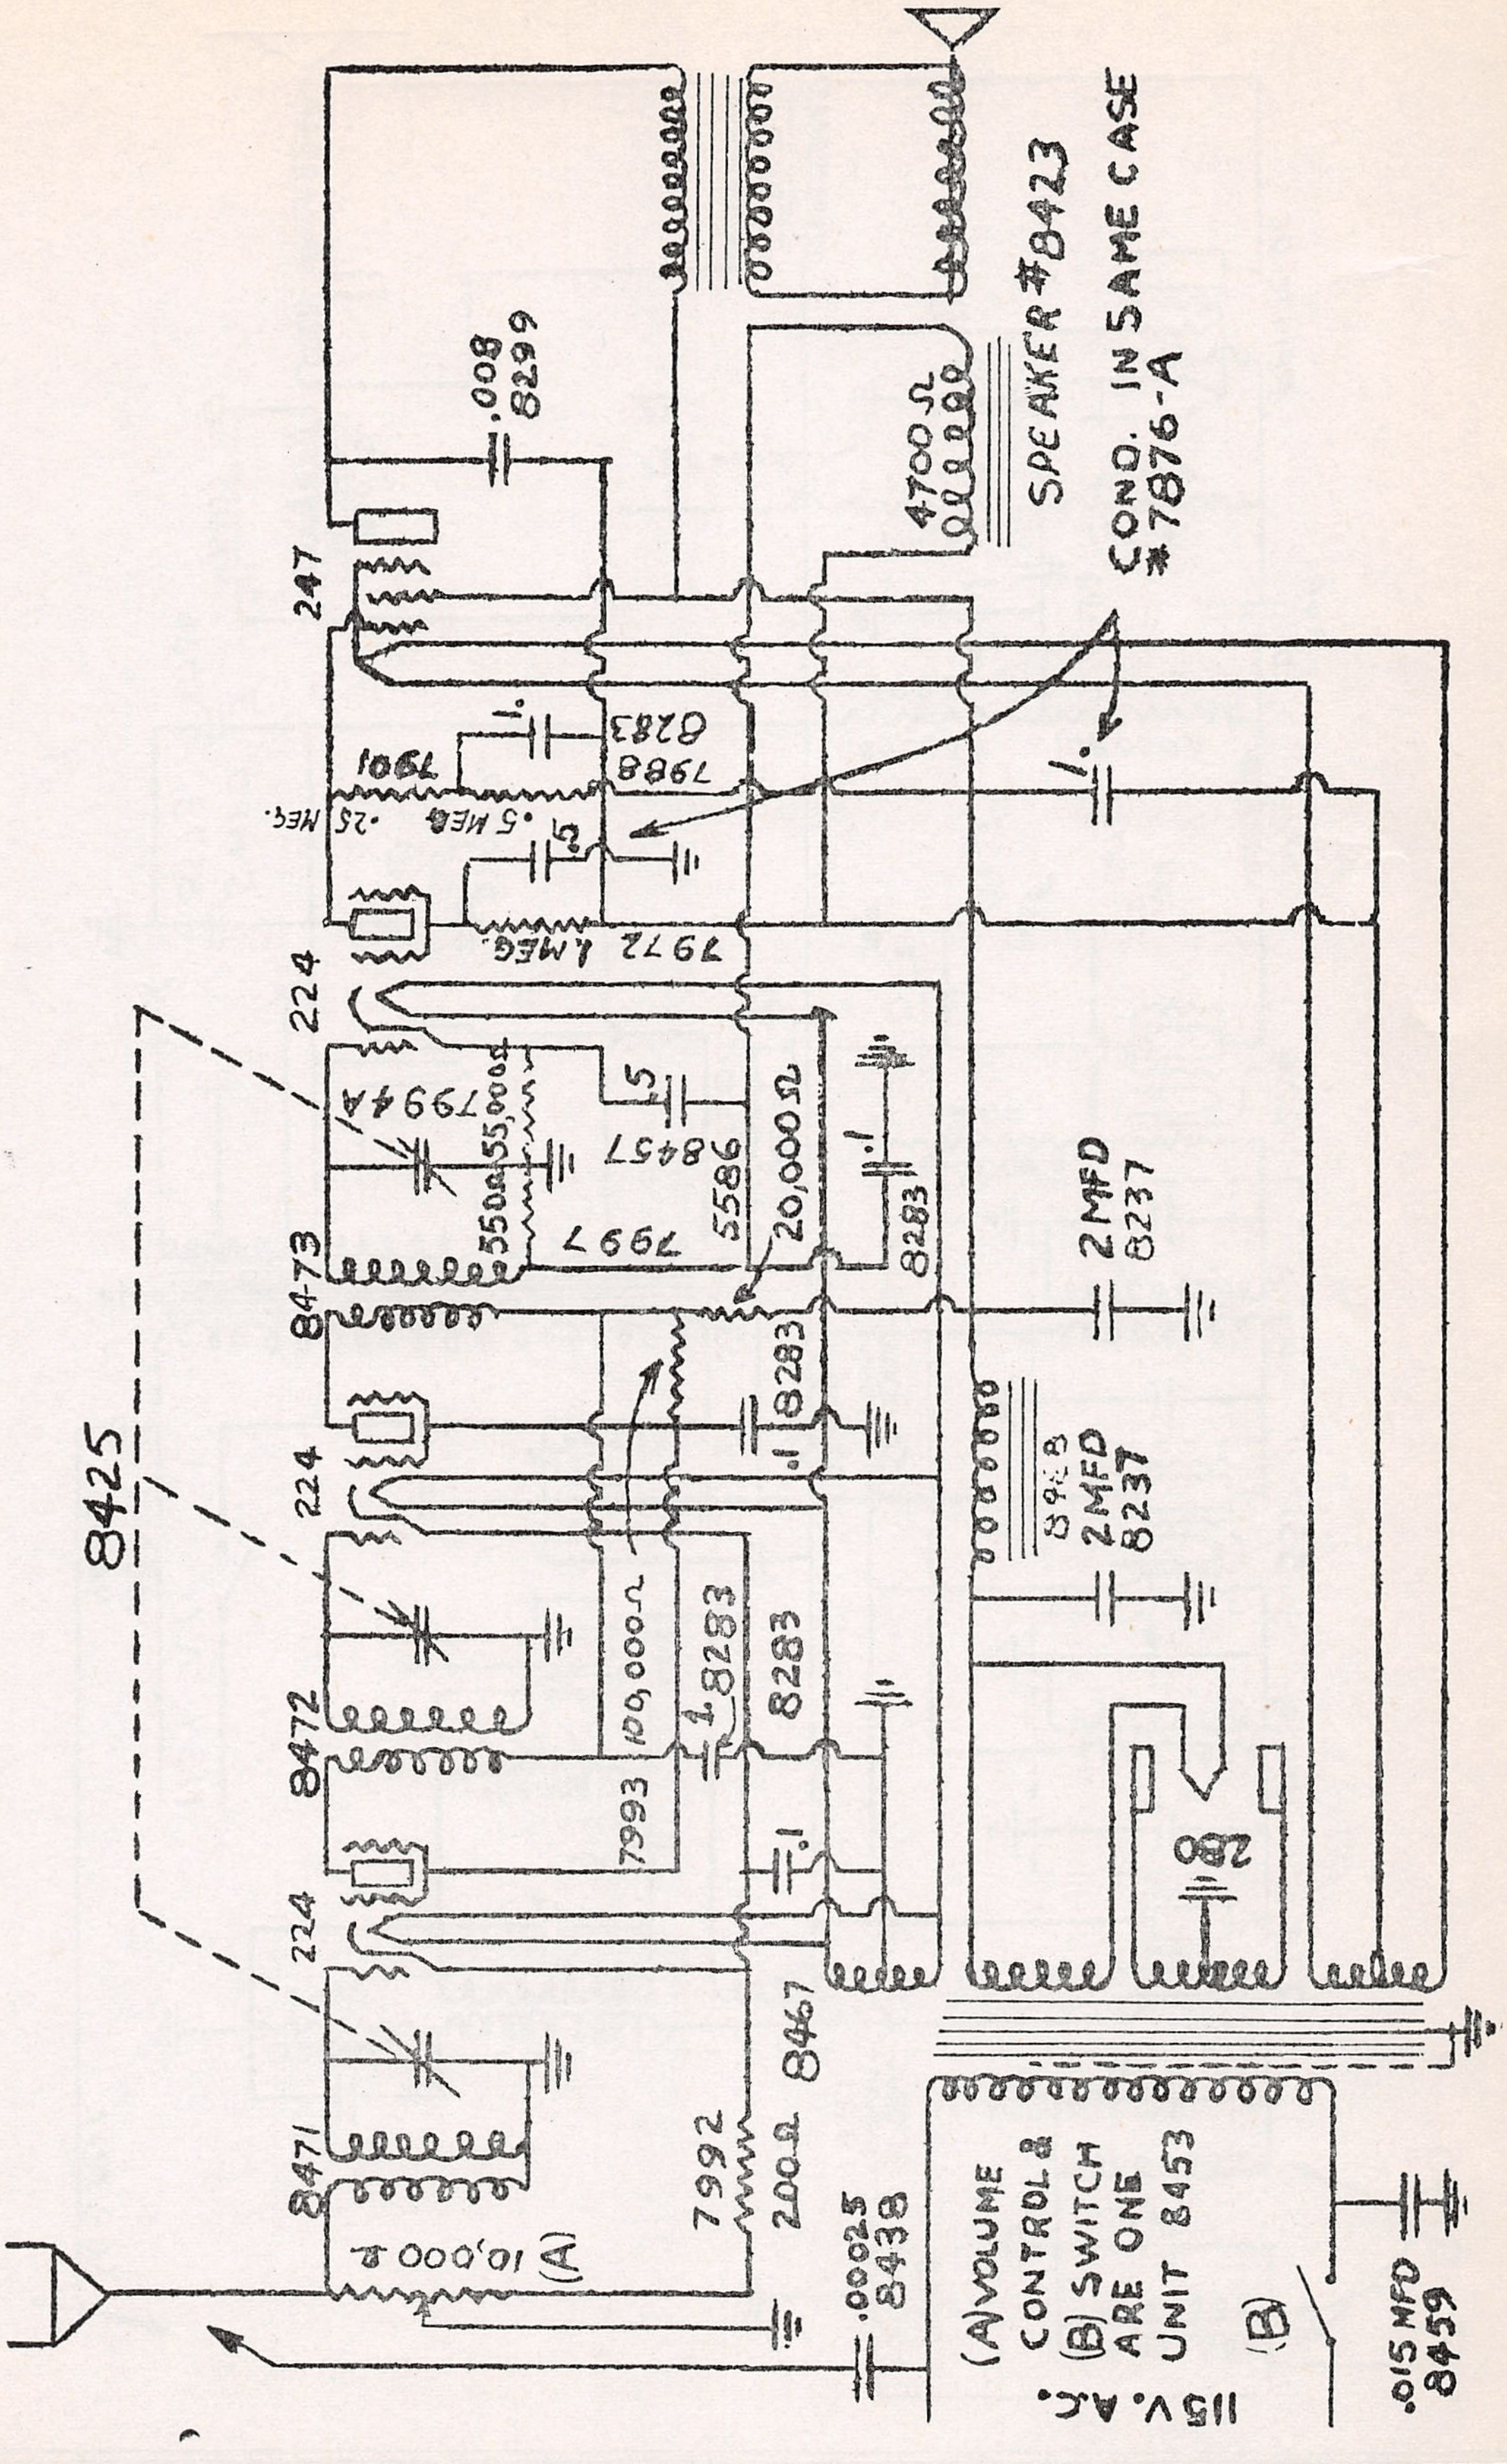

SPEAKER #8423
COND. IN SAME CASE #7876-A
4700 Ω
.008
8299
247
.1
8283
7988
7901
.5 MEG.
.25 MEG.
.5
7972 1 MEG.
224
7994A
550Ω 55,000Ω
8457
7997
5586
20,000 Ω
.5
.1
8283
2MFD
8237
84-73
8283
.1
8425
224
8968
2MFD
8237
100,000 Ω
.1
8283
8283
8472
7993
.1
280
224
8467
8471
7992
200 Ω
10,000 Ω
(A)
.00025
8438
(A) VOLUME CONTROL & (B) SWITCH ARE ONE UNIT 8453
(B)
115 V. A.C.
.015 MFD
8459

MODEL Acratone 5
Schematic

FEDERATED PURCHASER

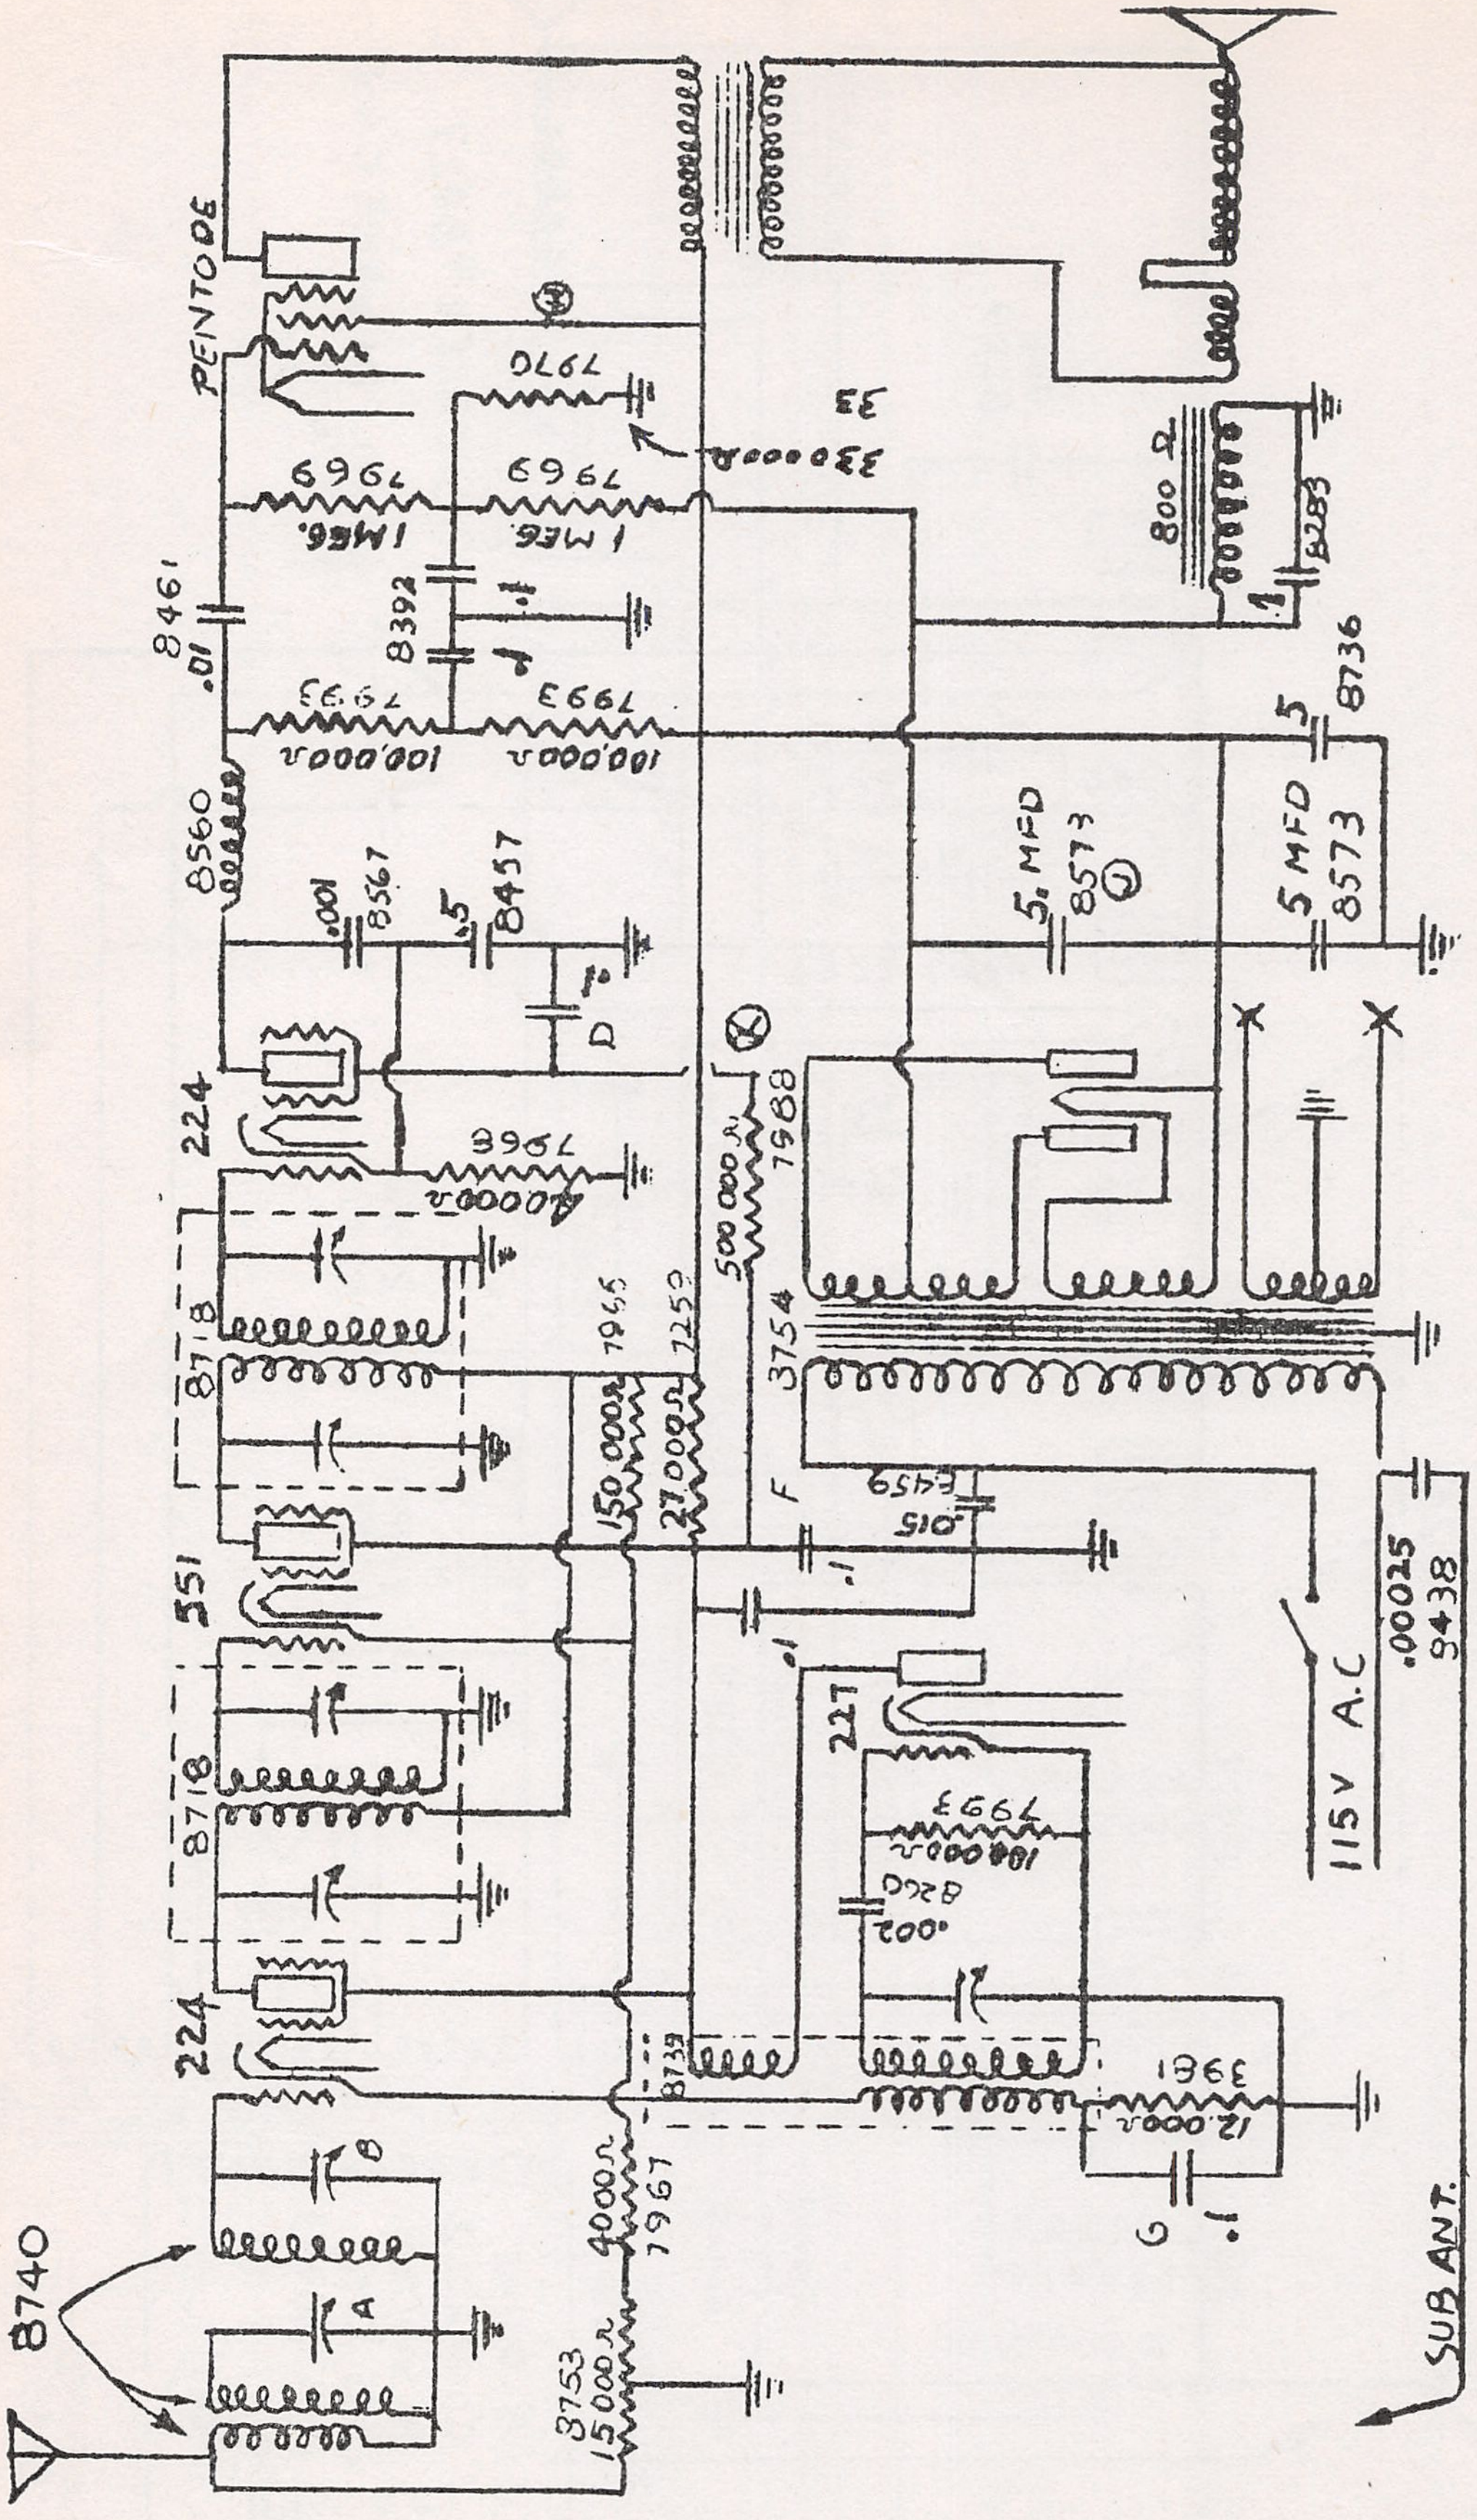
PENTODE
224
551
224
227
33
8740
A
B
8718
8718
3753
15000Ω
4000Ω
7967
8739
3981
12,000Ω
G
.1
7993
100,000Ω
.002
8260
150,000Ω
7965
27,000Ω
7259
500,000Ω
7988
F
.1
.015
E459
.1
3754
7966
40000Ω
D
8560
.001
8567
.5
8457
.01
8461
8392
.1
1 MEG.
7969
100,000Ω
7993
330000Ω
7970
800 Ω
8283
1
.5
8736
5 MFD
8573
.5 MFD
8573
.00025
9438
115V A.C
SUB ANT.

ACRATONE MODEL 5

JESSE FRENCH & SONS PIANO CO.

MODEL "G" Junior
Schematic

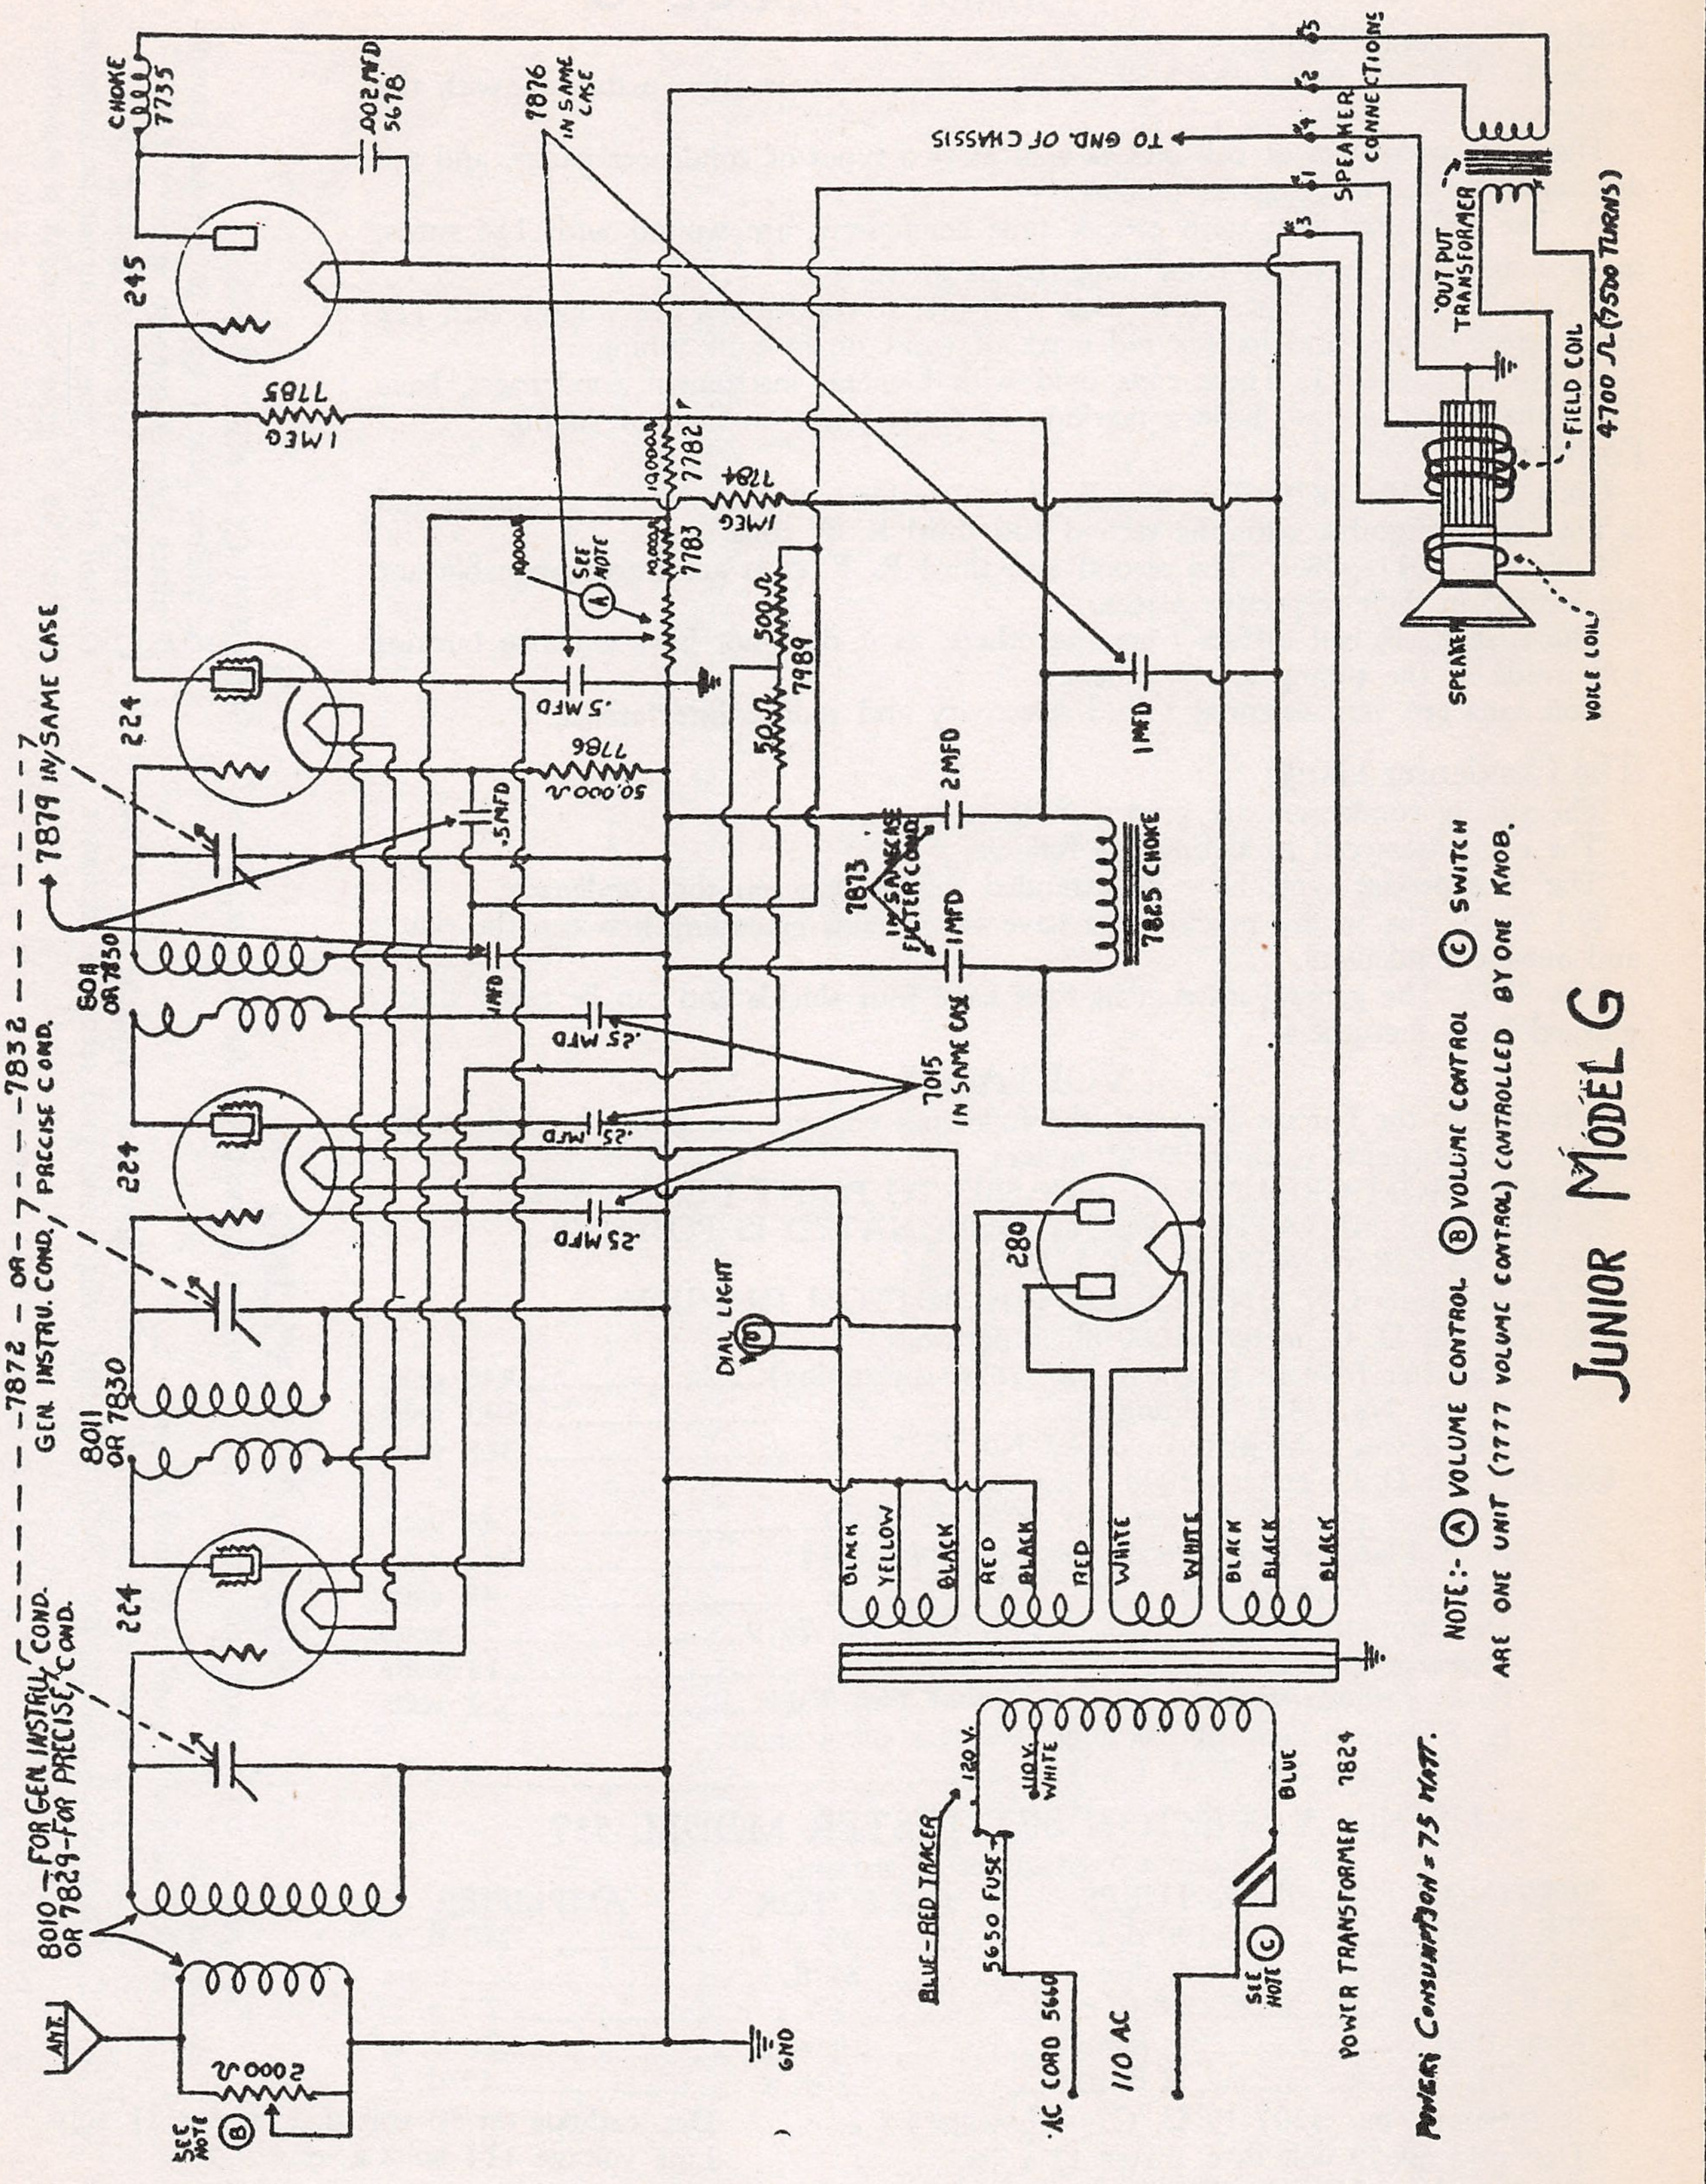
ANT
2000Ω
SEE NOTE Ⓑ
8010 - FOR GEN. INSTRU. COND. OR 7829 - FOR PRECISE COND.
224
8011 OR 7830
7872 - OR - 7832
GEN. INSTRU. COND. PRECISE COND.
224
80A OR 7830
7879 IN SAME CASE
224
245
CHOKE 7735
.002 MFD 5618
7876 IN SAME CASE
1 MEG 7785
10,000Ω 7782
1 MEG 7784
10,000Ω 7783
10,000Ω
SEE NOTE Ⓐ
.5 MFD
500Ω
50Ω 7989
7786 50,000Ω
.5 MFD
1 MFD
.25 MFD
.25 MFD
.25 MFD
7015 IN SAME CASE
7813 IN SAME CASE FILTER COND.
2 MFD
1 MFD
7825 CHOKE
1 MFD
280
DIAL LIGHT
GND
BLACK
YELLOW
BLACK
RED
BLACK
RED
WHITE
WHITE
BLACK
BLACK
BLACK
120 V.
110 V. WHITE
BLUE
BLUE-RED TRACER
5650 FUSE
AC CORD 5660
110 AC
SEE NOTE Ⓒ
POWER TRANSFORMER 1824
TO GND. OF CHASSIS
SPEAKER CONNECTIONS
OUT PUT TRANSFORMER
FIELD COIL 4700 Ω (7500 TURNS)
SPEAKER
VOICE COIL
JUNIOR MODEL G

NOTE:- Ⓐ VOLUME CONTROL Ⓑ VOLUME CONTROL Ⓒ SWITCH
ARE ONE UNIT (7777 VOLUME CONTROL) CONTROLLED BY ONE KNOB.

POWER CONSUMPTION = 75 WATT.

MODEL "G" Junior
Service Notes

JESSE FRENCH & SONS PIANO CO.

JUNIOR MODEL G

Radio Frequency Coils:

The R. F. Coils are of the high reactance type, accurately matched with the condensers.

There are two types of coil sets as well as two types of condenser gangs, and are designated by the markings as follows:

A. The coils used first with precise type condensers, are wound with 116 turns, space wound, and have no color designations on tubing.

B. No. 7829—7830. These coils used with precise condensers, are wound with 122 turns, space wound and have a red mark of paint on base of tubing.

C. No. 8010—8011. These coils used with General instrument condensers, have 126 turns, space wound, have a marking of white paint on base of tubing.

Positions:

Coils No. 8010—7829. The first R. F. coil is located at the front of chassis and is not interchangeable with the second and third R. F. coils.

Coils No. 8011—7830. The second and third R. F. coils are interchangeable and are located in their respective places.

The first R. F. coil differs from the others, as it does not have a choke bucking coil inside of the tubing as the others.

Coil cans are very essential to aid selectivity and reduce interference.

The Condenser Gang:

The tuning condensers are graded in three types.

The condensers can be defined as follows:

The first precise type, have no extended shields between the condensers.

No. 7832. The second precise type have two shields extending between the center and outside condensers.

No. 7872. The general instrument type have four shields and can be easily distinguished from the others.

VOLTAGES

Referring to the Circuit Diagram, the following voltages are given throughout the circuit using straight A. C. or D. C. meters.

CHECK FROM GROUND OF CHASSIS TO POINT DESIGNATED.
GROUND IS NEGATIVE. POINT DESIGNATED IS POSITIVE.
SET VOLUME CONTROL AT MINIMUM.
SET CHASSIS ON ONE END WITH BOTTOM IN VIEW.

Use 600 volt D. C. meter—1000 ohms per volt.

Rectifier filiment or choke No. 7825 (beginning)	440 volts
Choke No. 7825 (ending)	390 volts
245 power tube plate or choke No. 7735	368 volts

Use 300 volt D. C. meter—1000 ohms per volt.

Detector plate or resistor No. 7785 (ending)	48 volts
R. F. Plate or red wire of condenser No. 7015	242 volts
245 grid or resistor No. 7785 (ending)	48 volts
Detector grid or green wire of condenser No. 7879	22 volts
Detector cathode or resistor No. 7786	12 volts
R. F. cathode or black wire condenser No. 7015	2. volts
R. F. Screen Grid at red wire volume control or at Resistor No. 7783 (end)	120 volts

USING A WESTON SET TESTER MODEL 537

Volume control set at maxim.

SETTINGS	*R. F. TUBES*	*DETECTOR*	*AMPLIFIER*
PLATE (300)	190 d. c.	55 d. c.	210 d. c.
CATHODE POS.	2 d. c.	65 d. c.	*none*
FIL. (4)	2.8 a. c.	2.7 a. c.	2.7 a. c.
PL. MA. (30)	*none*	*none*	25 d. c.
BIAS (c60)	2 d. c.	2 d. c.	12 d. c.

Rectifier pl. ma. (30) 19 D. C.—Fil. volts 4.5 a. c.
Det. grid on 50 volt d. c. meter 12 volts.
R. F. grid on 250 volt d. c. meter 89 volts.

Det. cathode on 50 volt d. c. meter 21 volts.
Line voltage 114 volts a. c.

SPEAKER SERVICING

The speaker color chart and the respective wiring connections. As follows: Chassis connections:

A. Yellow No. 4 goes to ground of set.
B. Black No. 3 goes to center tap of 245 tube filament, and resistor No. 7784.
C. Black No. 1 goes to No. 7989, 500 ohm resistor and grid return of detector, at R. F. coil.
D. Red No. 2 goes to No. 7782, 10,000 and 7785 resistors.
E. Red No. 5 goes to plate of 245 or No. 7735 choke coil.

SPEAKER CONNECTIONS:

A. Yellow No. 4 goes to speaker ground.
B. Black No. 3 goes to speaker field.
C. Black No. 1 goes to speaker field.
D. Red No. 2 goes to output transformer.
E. Red No. 5 goes to output transformer.

JESSE FRENCH & SONS PIANO CO.

MODEL H-2 Pentode
110 Volt AC
MODEL H-2 Special
110 Volt DC

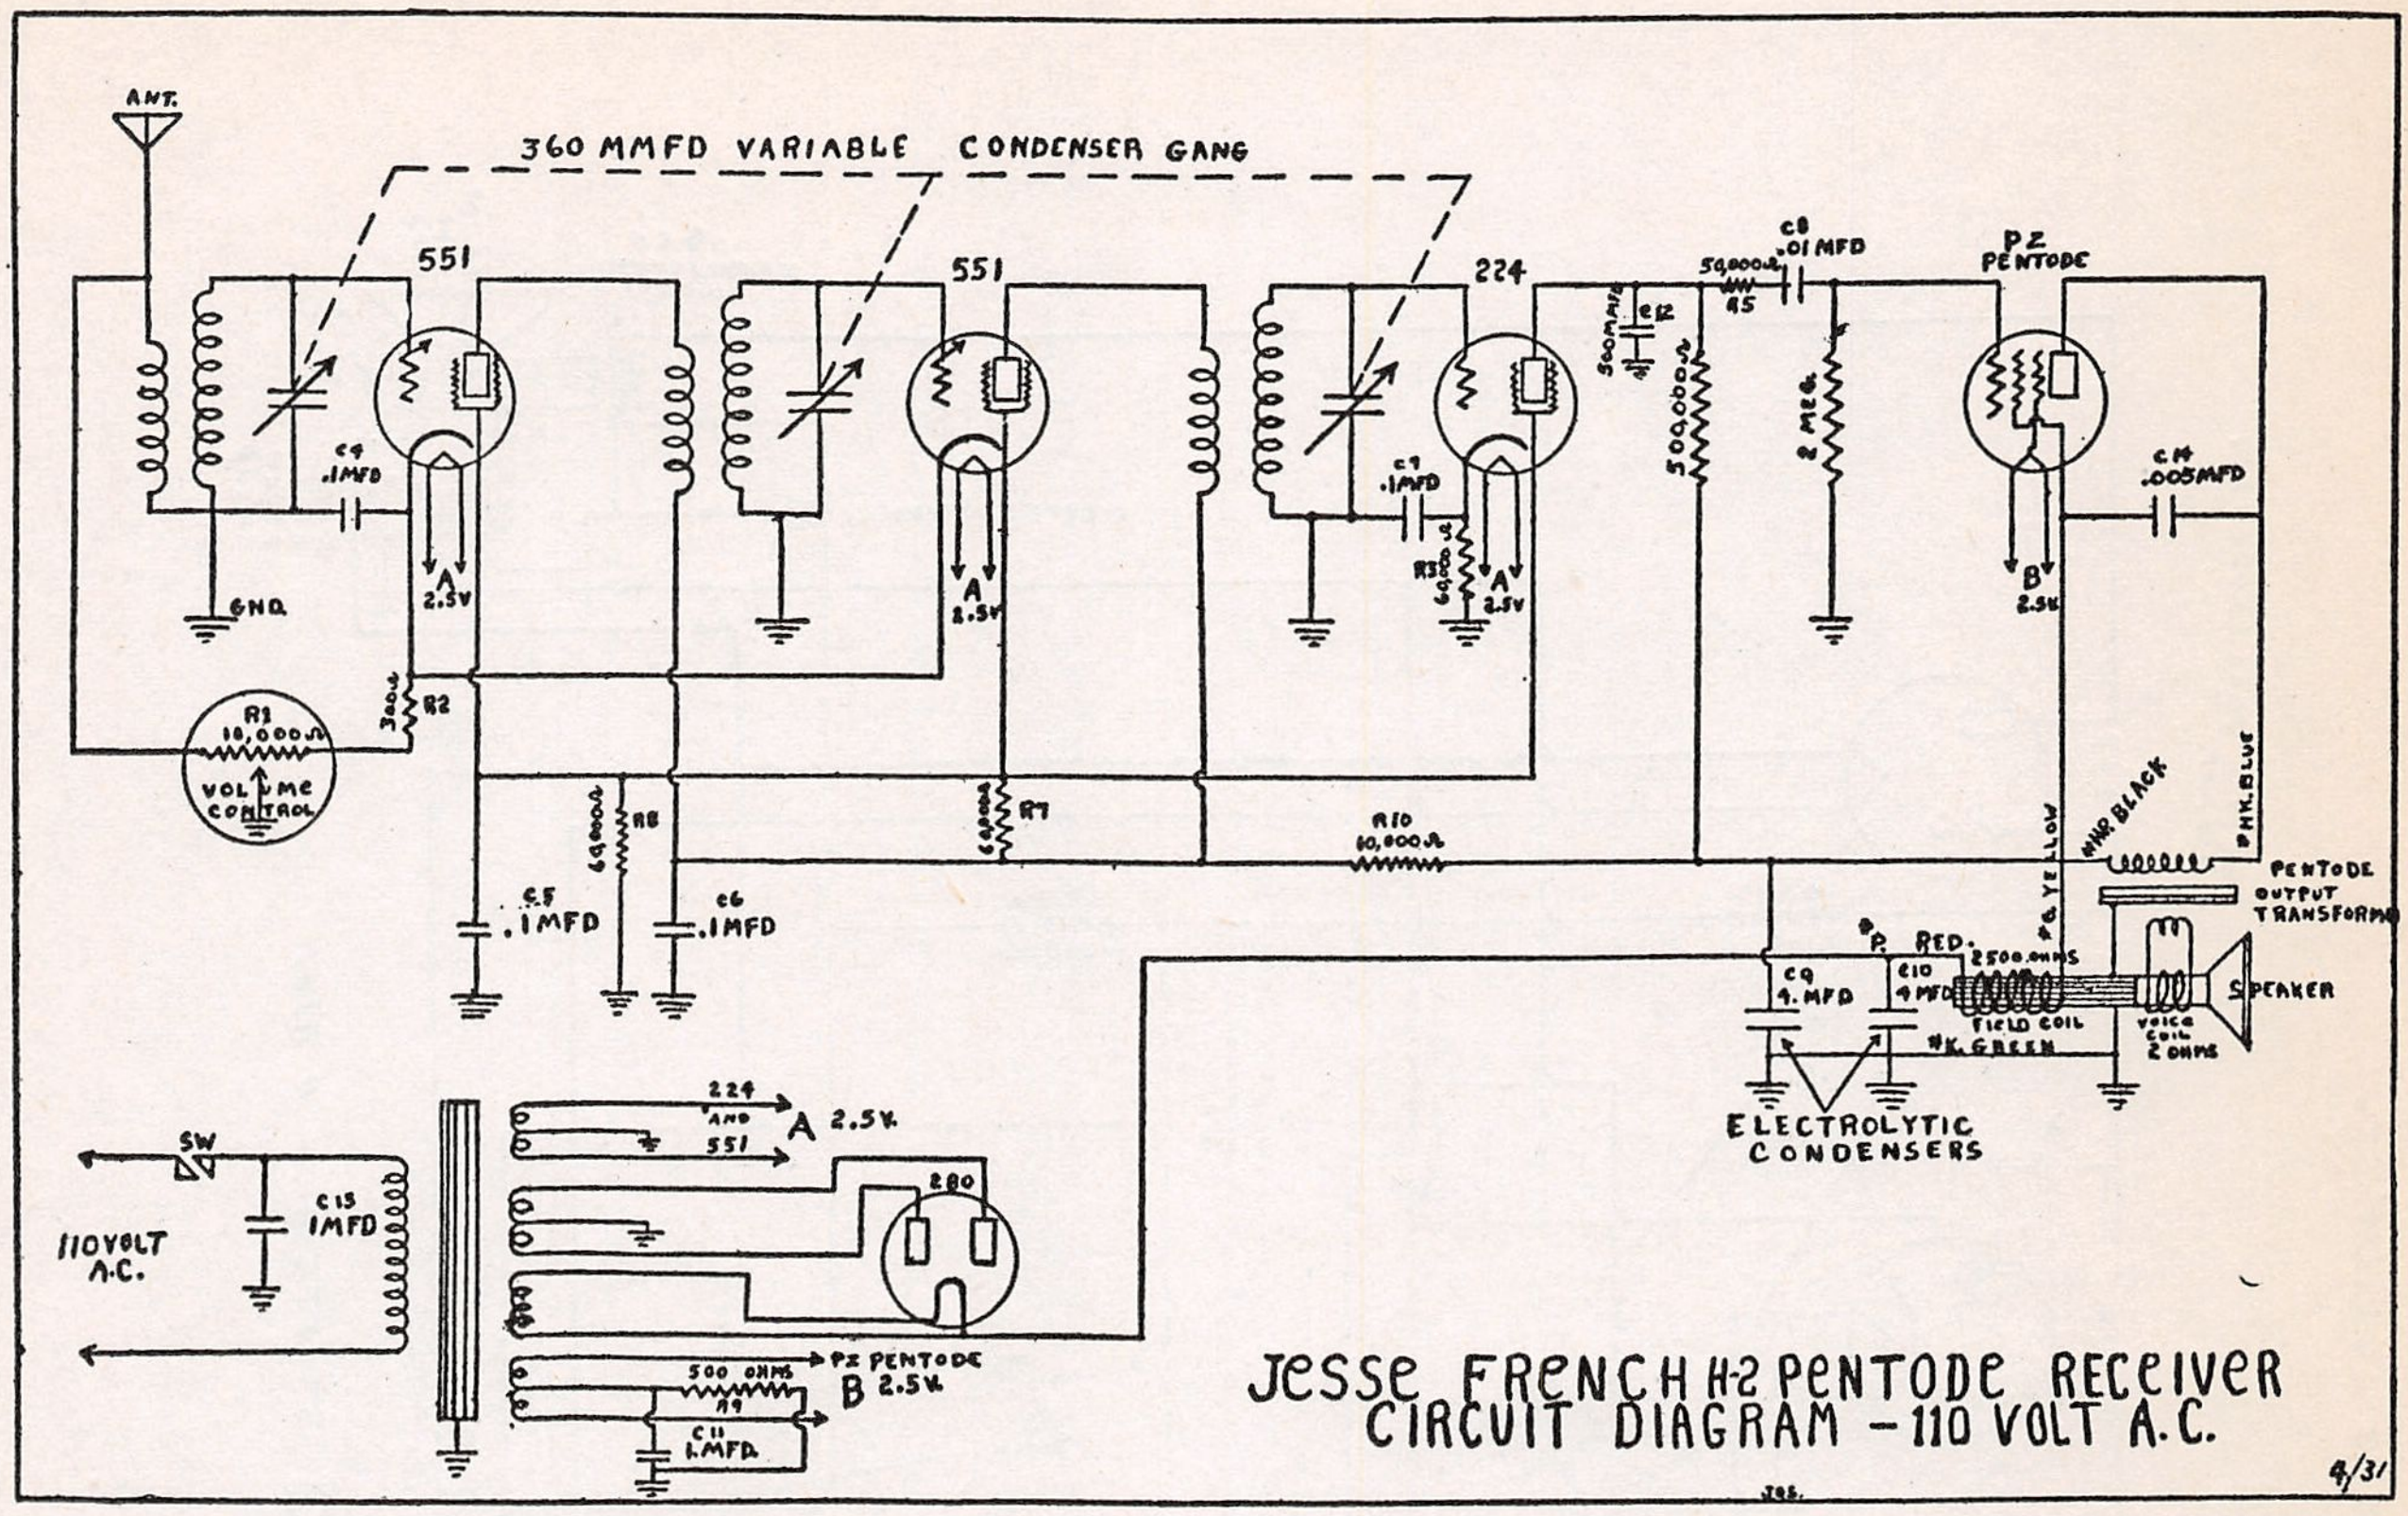
ANT.
360 MMFD VARIABLE CONDENSER GANG
551
551
224
P.Z PENTODE
C4 .1MFD
GND.
A 2.5V
A 2.5V
C7 .1MFD
R3
A 2.5V
C8 .01MFD
50,000Ω R5
500MMF C12
500,000Ω
2 MEG.
C14 .005MFD
B 2.5V
R1 10,000Ω VOLUME CONTROL
300Ω R2
6,000Ω R8
6,000Ω R7
R10 10,000Ω
C5 .1MFD
C6 .1MFD
YELLOW
BLACK
BLUE
PENTODE OUTPUT TRANSFORMER
RED
C9 4.MFD
C10 4MFD
2500 OHMS FIELD COIL
GREEN
VOICE COIL 2 OHMS
SPEAKER
ELECTROLYTIC CONDENSERS
SW
C13 1MFD
110 VOLT A.C.
224 AND 551 A 2.5V.
280
500 OHMS R9
C11 1.MFD
PZ PENTODE B 2.5V.

Jesse French H-2 Pentode Receiver
Circuit Diagram - 110 Volt A.C.

4/31

JOS.

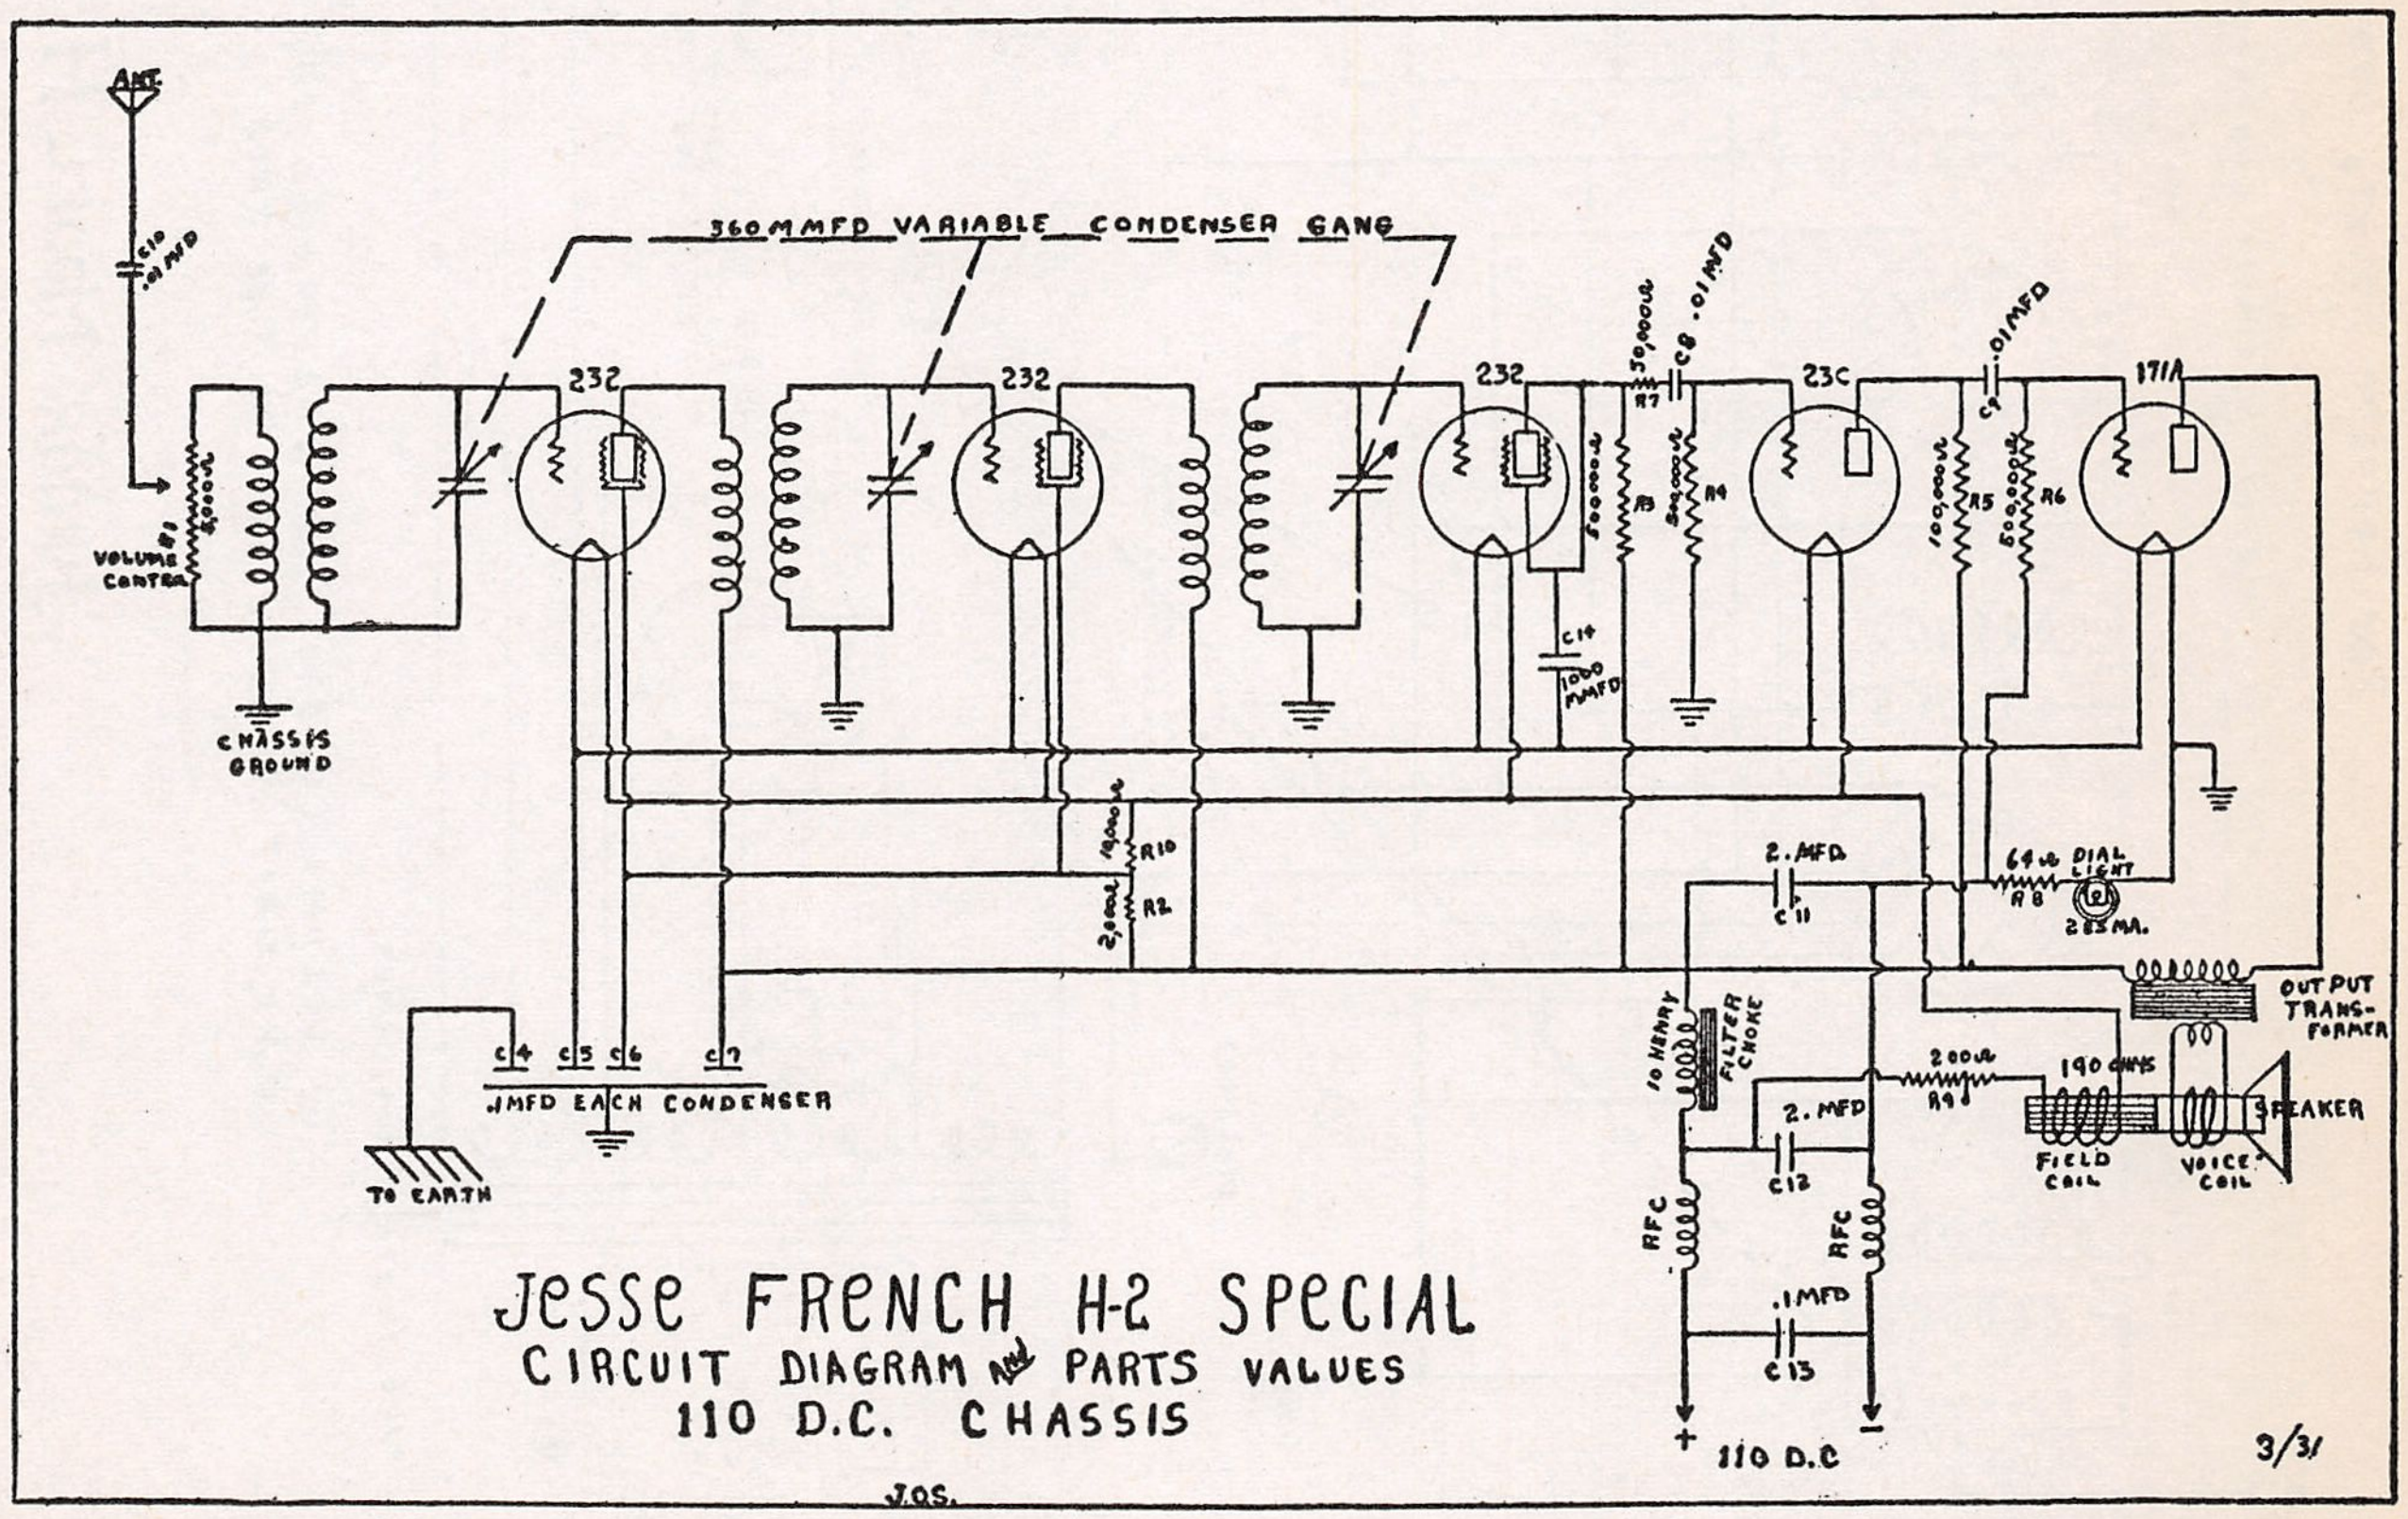
ANT.
C10 .01MFD
360 MMFD VARIABLE CONDENSER GANG
232
232
232
23C
171A
R1 VOLUME CONTROL
CHASSIS GROUND
50,000Ω R7
C8 .01MFD
R3
R4
C14 1000 MMFD
100,000Ω R5
C9 .01MFD
500,000Ω R6
19,000Ω R10
2,000Ω R2
2. MFD C11
64Ω R8
DIAL LIGHT 285MA.
OUTPUT TRANSFORMER
C4 C5 C6 C7
.1MFD EACH CONDENSER
TO EARTH
10 HENRY FILTER CHOKE
200Ω R9
2. MFD C12
190 OHMS FIELD COIL
VOICE COIL
SPEAKER
RFC
RFC
.1MFD C13
+
−
110 D.C

Jesse French H-2 Special
Circuit Diagram and Parts Values
110 D.C. Chassis

3/31

JOS.

JESSE FRENCH & SONS PIANO CO.

MODEL H-1
Schematic

For Service Notes, see page following.

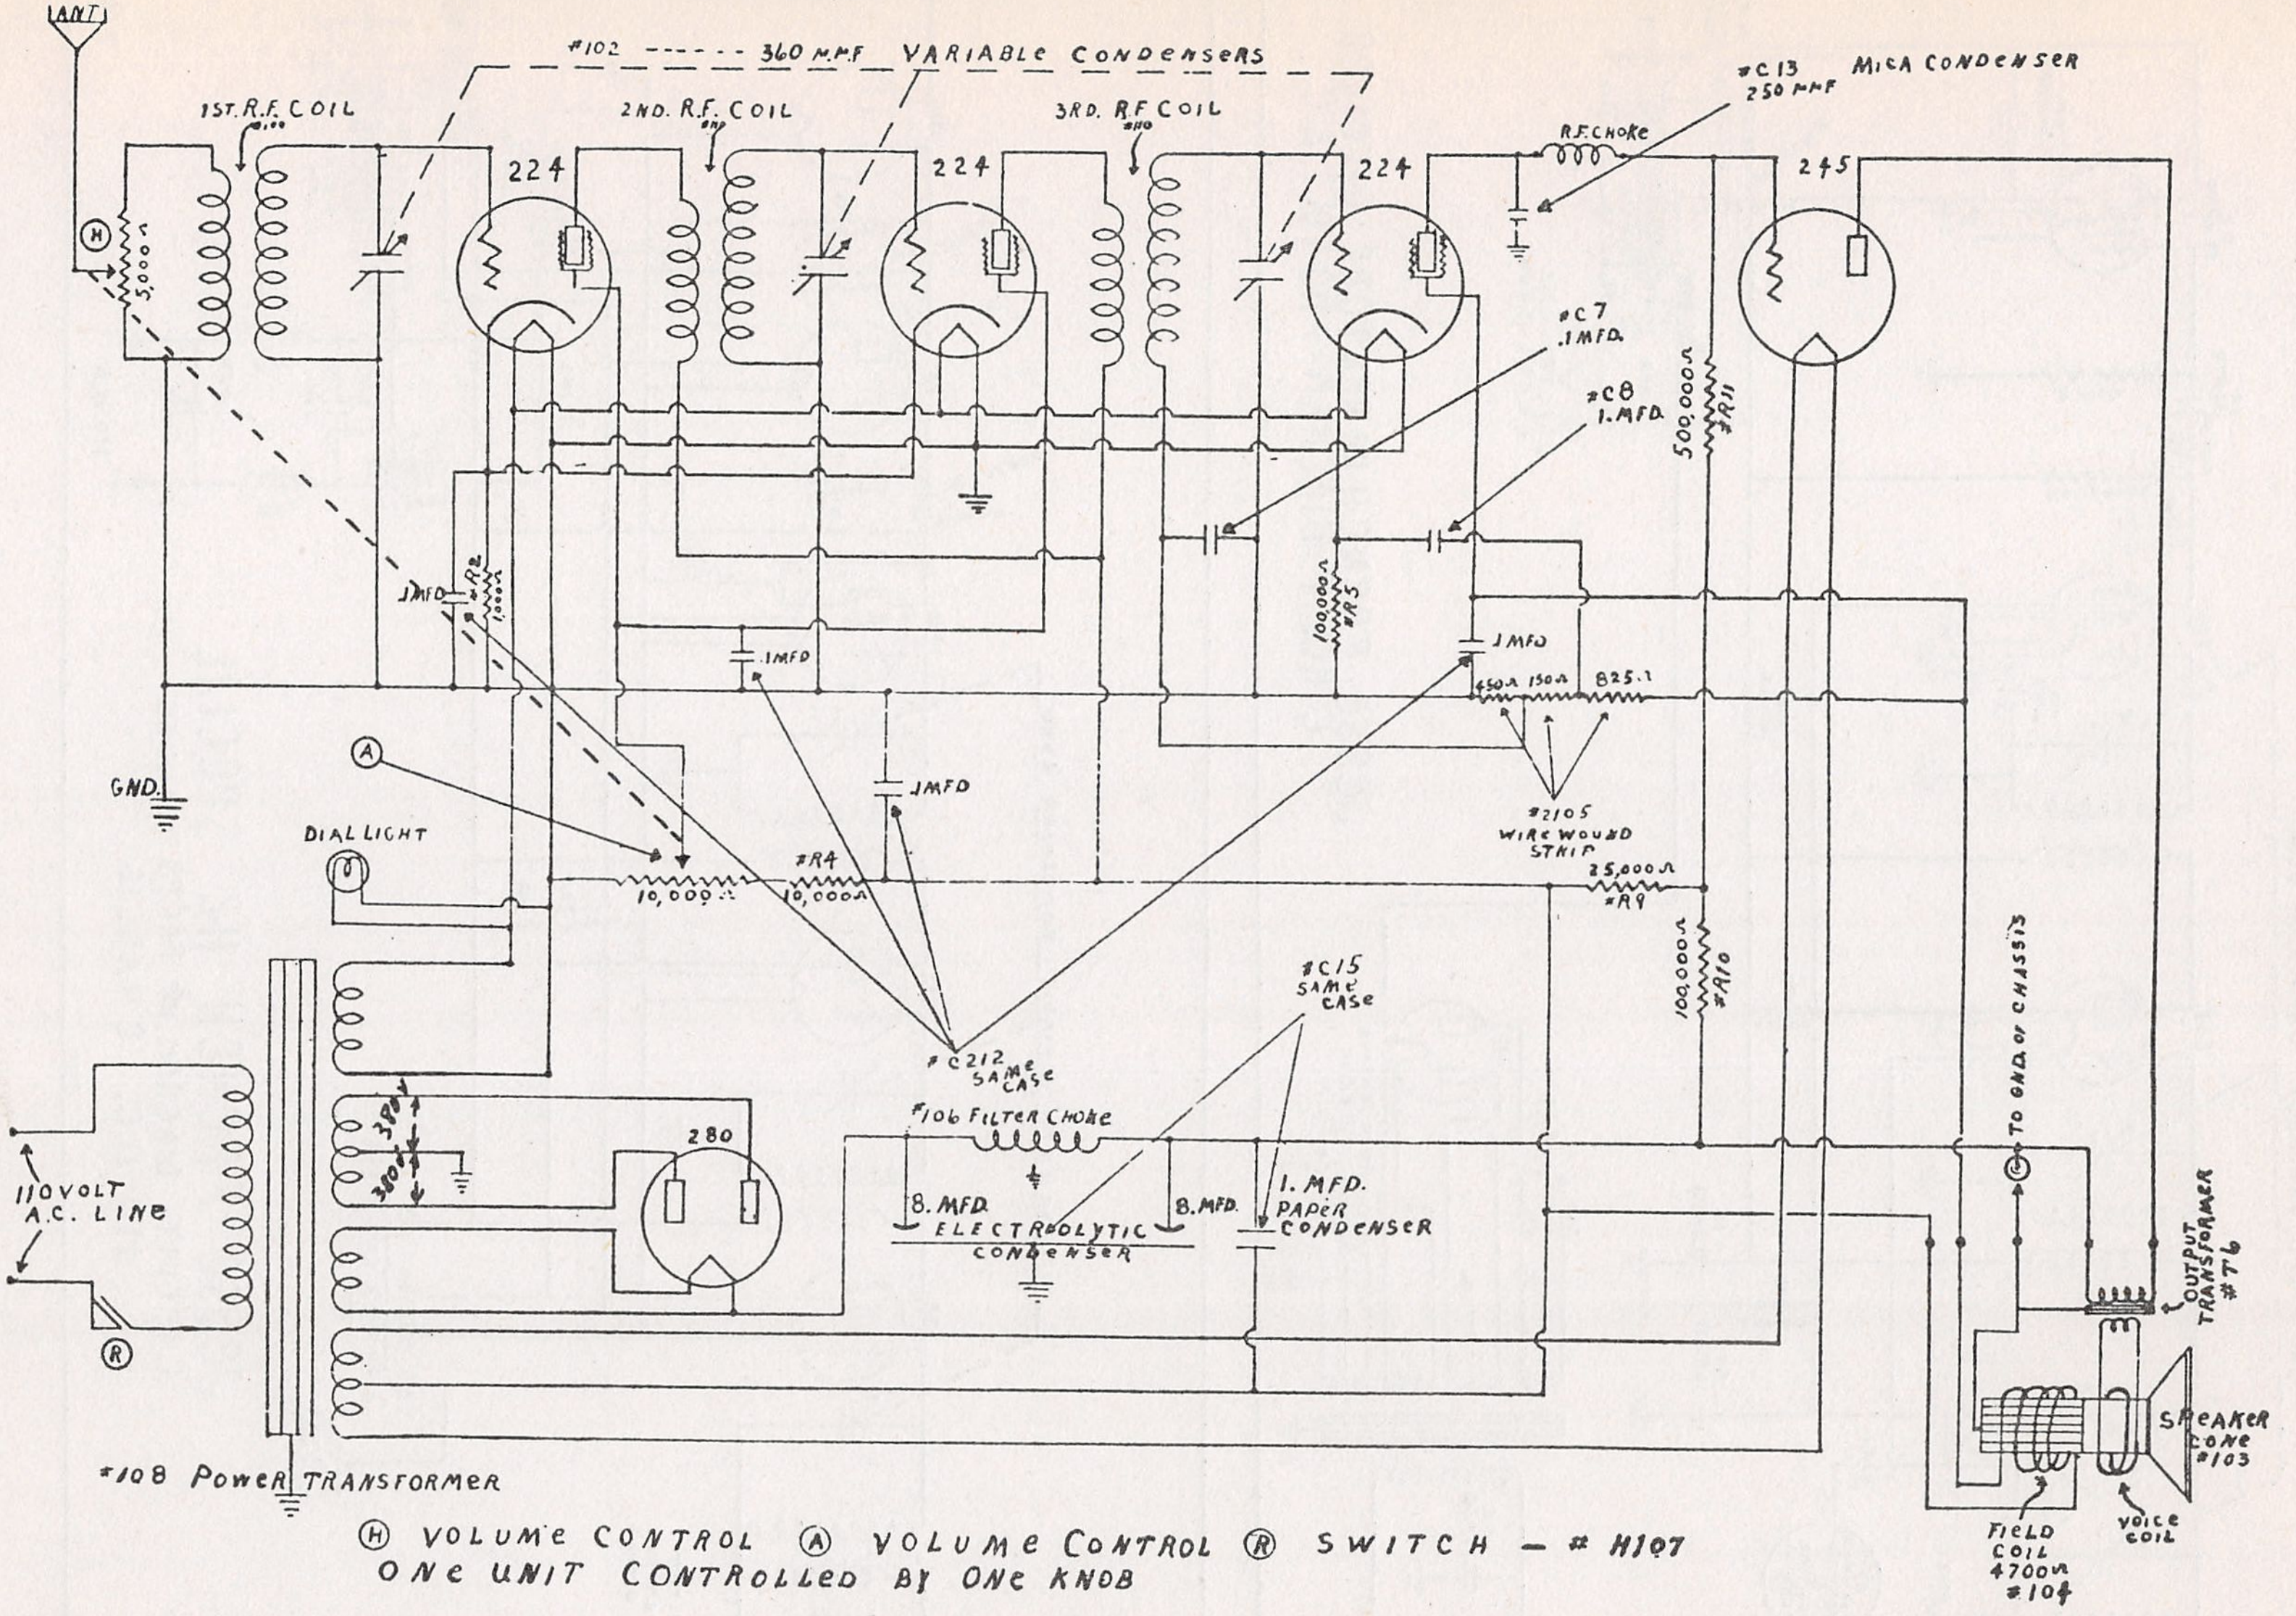
ANT
#102 ------ 360 M.M.F VARIABLE CONDENSERS
1ST. R.F. COIL
2ND. R.F. COIL
3RD. R.F. COIL
#110
224
224
224
245
R.F. CHOKE
#C13 250 MMF
MICA CONDENSER
H
5,000 Ω
.1 MFD
#R2 1,000 Ω
.1 MFD
.1 MFD
#C7 .1 MFD.
#C8 1. MFD.
100,000 Ω #R5
.1 MFD
450 Ω 150 Ω 825 Ω
#2105 WIRE WOUND STRIP
500,000 Ω #R11
25,000 Ω #R9
100,000 Ω #R10
GND.
A
DIAL LIGHT
10,000 Ω
#R4 10,000 Ω
#C212 SAME CASE
#C15 SAME CASE
#106 FILTER CHOKE
280
380 V
380 V
8. MFD.
8. MFD.
ELECTROLYTIC CONDENSER
1. MFD. PAPER CONDENSER
110 VOLT A.C. LINE
R
#108 POWER TRANSFORMER
TO GND. OF CHASSIS
OUTPUT TRANSFORMER #T6
SPEAKER CONE #103
FIELD COIL 4700 Ω #104
VOICE COIL
H VOLUME CONTROL A VOLUME CONTROL R SWITCH — # H107
ONE UNIT CONTROLLED BY ONE KNOB

JUNIOR MODEL H-1

JESSE FRENCH & SONS PIANO CO.

MODEL U-1
Schematic

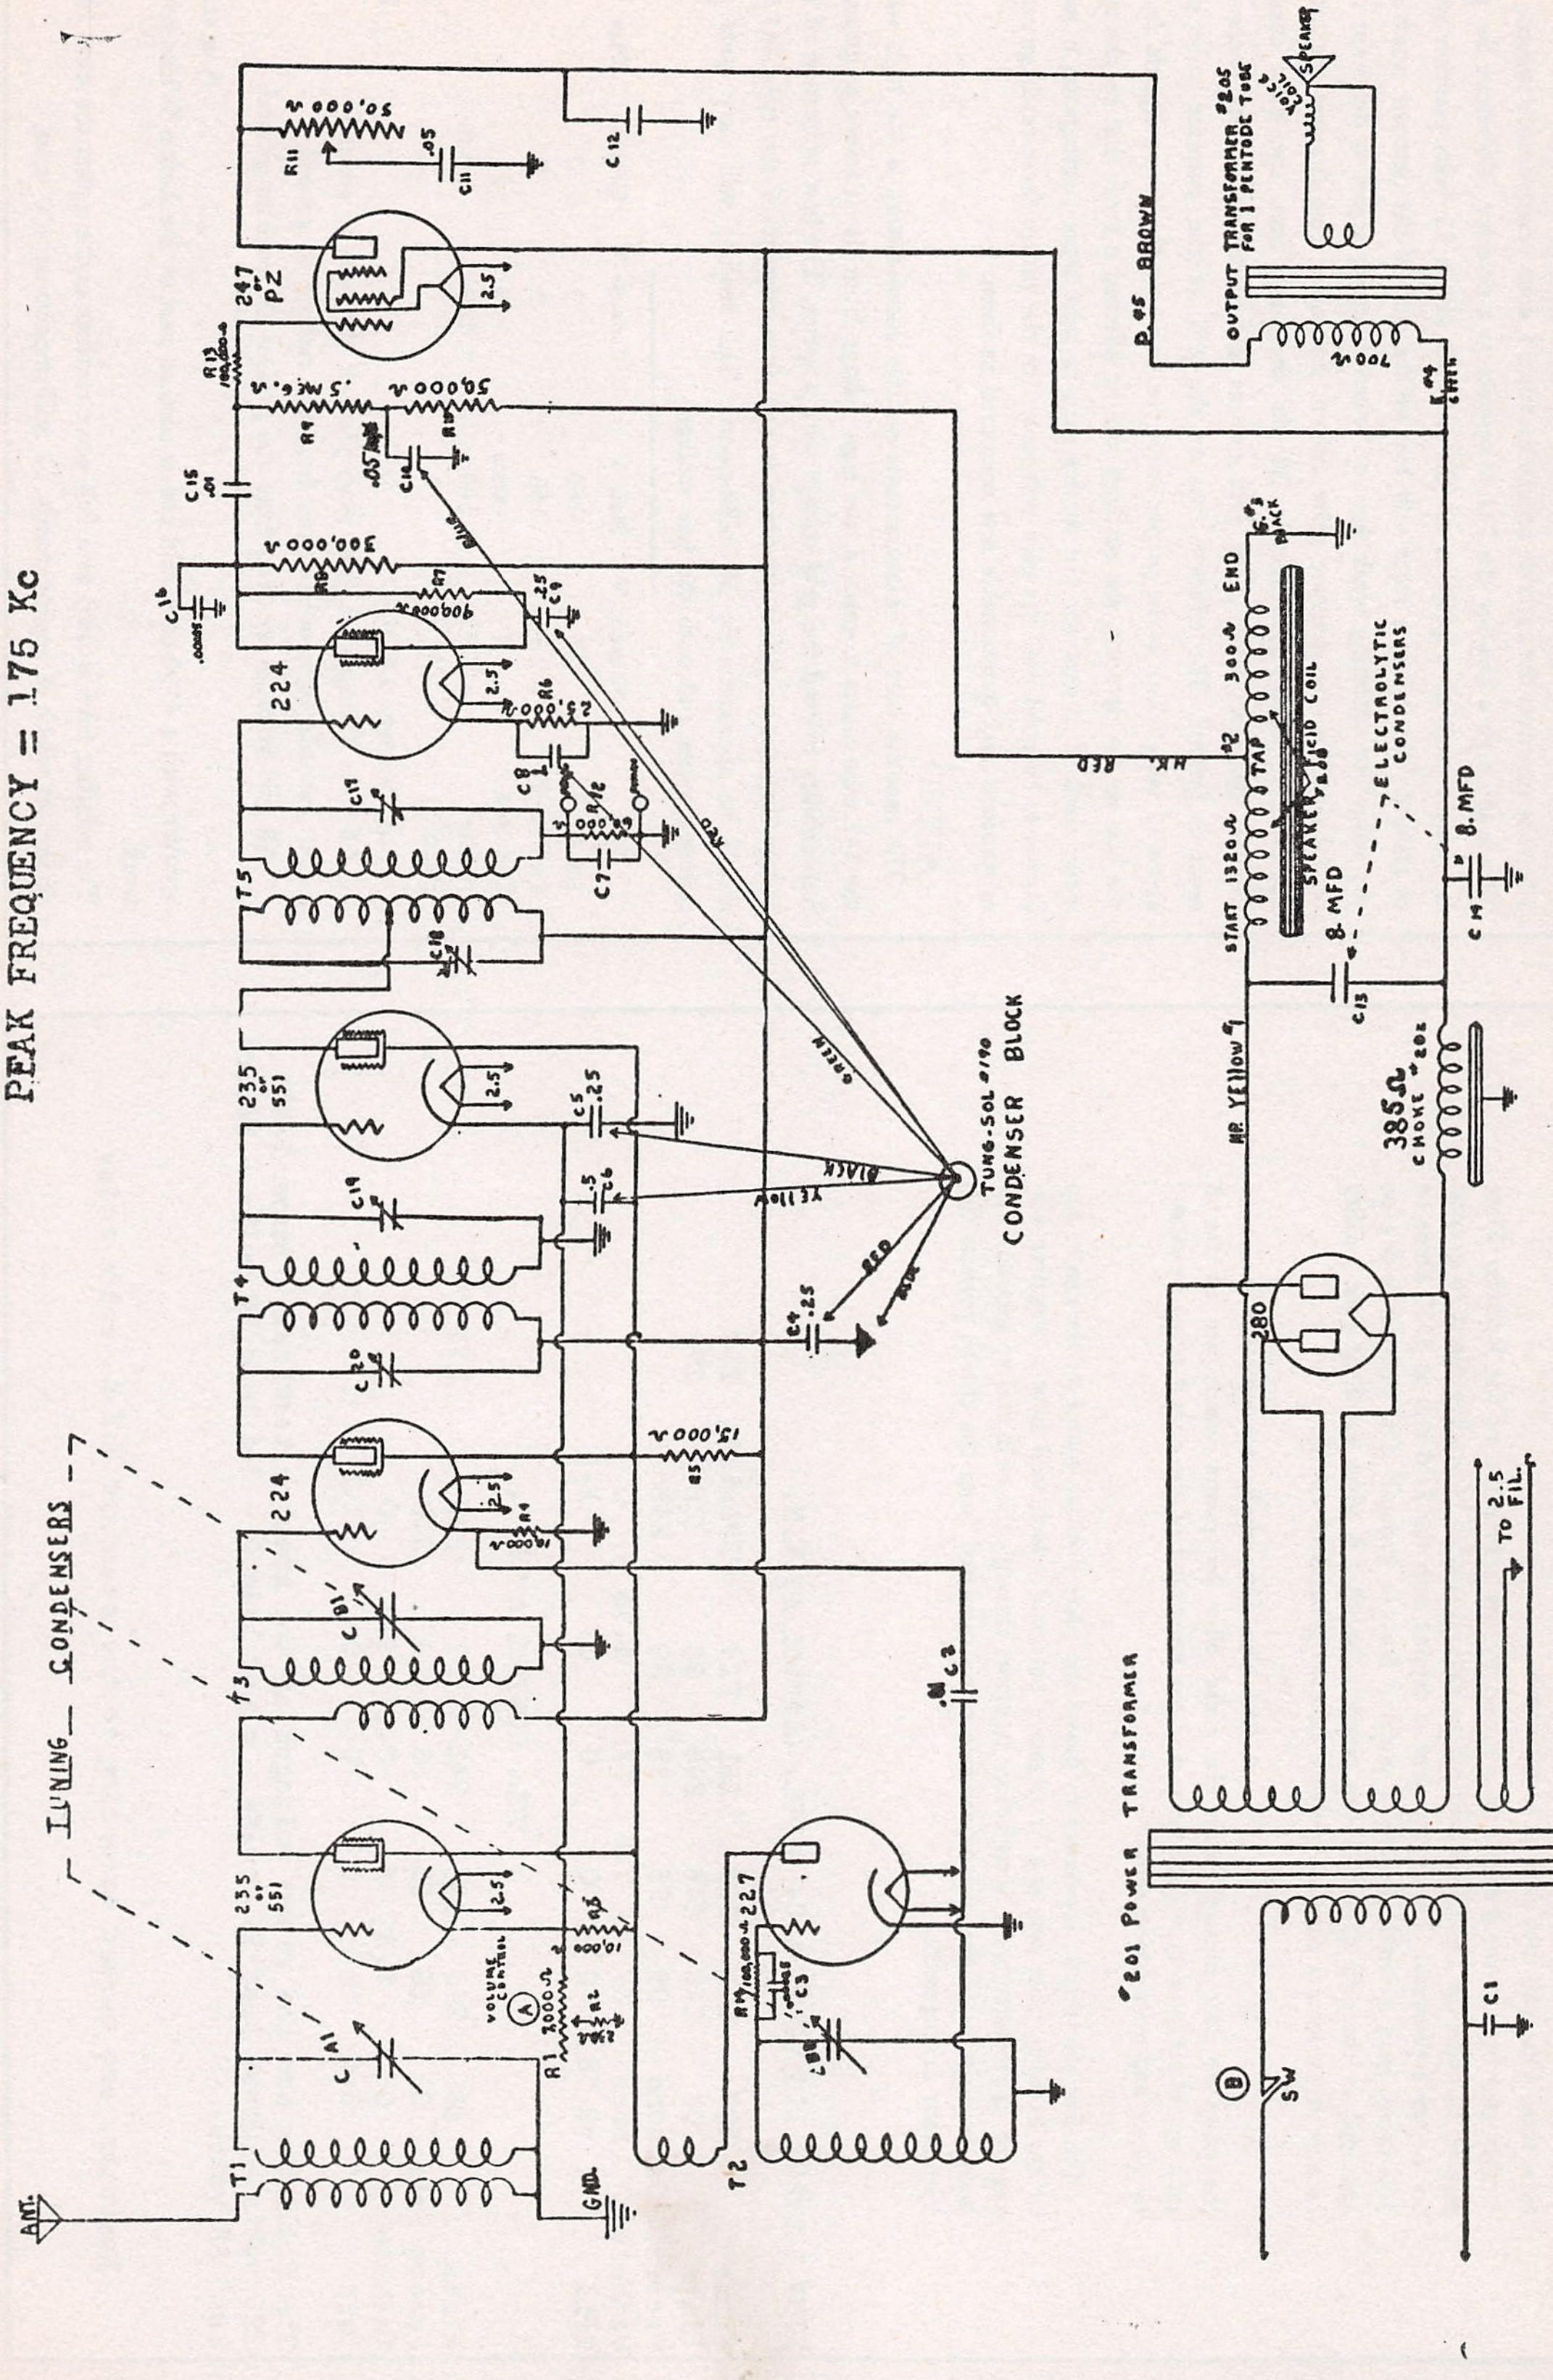
PEAK FREQUENCY = 175 Kc
TUNING CONDENSERS
ANT.
GND.
T1
T2
T3
T4
T5
C A1
C B1
C B1
C 20
C 19
C 18
C 17
235 or 551
224
227
247 or PZ
280
2.5
VOLUME CONTROL
A
R1 2000 Ω
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11 50,000 Ω
R12
R13
15,000 Ω
300,000 Ω
400,000 Ω
.5 MEG. Ω
50,000 Ω
C2 .01
C3
C4 .25
C5 .25
C6 .5
C7
C8
C9 .25
C10 .0001
C11 .05
C12
C14 .05
C15 .01
TUNG-SOL #190 CONDENSER BLOCK
BLACK
YELLOW
RED
BLUE
GREEN
GRAY
#201 POWER TRANSFORMER
C1
B
SW
TO 2.5 FIL.
385 Ω CHOKE #202
C 13
8. MFD
C M
8. MFD
ELECTROLYTIC CONDENSERS
START 1320 Ω
TAP
300 Ω END
SPEAKER FIELD COIL
#2 HK. RED
#1 YELLOW HP
#3 BLACK
P #5 BROWN
#4 GREEN
700 Ω
OUTPUT TRANSFORMER #205 FOR 1 PENTODE TUBE
VOICE COIL
SPEAKER

For Service Notes. see preceding page.

3/31

Jesse French U-1 Superheterodyne
Schematic Wiring Diagram and Parts Designations

J.01

MODEL H-1
Service Notes
MODEL U-1
Service Notes

JESSE FRENCH & SONS PIANO CO.

JUNIOR MODEL H-1

DETECTOR

It is quite a question in the Loftin-White direct coupled amplifier where detection actually takes place, but for the time being, we will call the type 224 tube the detector, and the type 245 tube the audio frequency amplifier. The detector can be considered of the high bias type. A 100,000 ohm resistor in the cathode circuit of the 224 tube connects the cathode approximately 15 volts positive with respect to ground. This is too high a bias for the 224 to operate as a detector. Therefore the grid return is brought back to a position on the network about 12 volts position with respect to ground. This leaves a three volt bias on the grid of the detector which is the proper value for detecting weak signals. When a strong signal is delivered to the grid of the detector, the detector plate current increases. This changes the cathode voltage from 15 volts approximately 20. At the same time, the plate current in the network decreases making the grid returns approximately 8 volts positive with respect to ground. The effective bias on the grid of the detector tube is therefore about 12 volts which is the proper value for detecting the strong signals. In measuring the bias on the detector, the readings will be affected a great deal by the type of volt meter used. It is best for the service man to take these readings on a set which is known to be good with his own volt meter. In the future these readings can be taken as standard and questionable sets compared to them.

AUDIO

The peculiar part of measurements on this audio system is the high voltage from the 245 tube plates to ground, the high voltage from the filament to ground and the impossibility to read the grid voltage with a meter. The best indication of the Loftin-White detector amplifier condition is the plate current of the type 245 tube. This should be approximately 38 milliamperes. This reading will vary quite a bit with different tubes and with the line voltage.

Tube	Filament V	Plate V	Cathode V	Grid V	Plate Current
1st R. F.	2.5	160	3	0	3.
2nd R. F.	2.5	160	3	0	3
Detector	2.5	varies	14	12	.25
Audio	2.5	380	160	varies	40
Rectifier	5				20 ma. per Plate

Line Voltage 120—

All plate voltages are read from plate of the tube to ground.

All cathode voltages are read from the cathode to ground.

All grid voltages are read from the grid of the tube to ground.

A special dynamic speaker with a 4700 ohm field coil is used as part of the Loftin-White resistance network.

The rectifier tube is used as a full wave rectifier and supplies the total plate current of the set which is approximately 38 milliamperes at 400 volts.

THE U-1 SUPERHETERODYNE CIRCUIT

The U-1 Chassis uses seven tubes as follows: one 551 variable Mu tube for the first tuned R. F. stage, one 224 screen grid tube for first tuned detector, with a 227 oscillator tube signal beating into the first detector stage. One 551 Variable Mu tube for the intermediate R. F. stage and a 224 for power detector. This second detector or Power Detector is resistance coupled to the power tube which is a PZ Pentode type tube. One 280 tube is used as a rectifier.

The grid bias of the Pentode is obtained by the center tap of the Rectifier Plate passing through the 1620 ohm field coil to ground instead of leading direct to ground for negative potential. The power grid is tapped into the field coil at 1320 ohms or 300 ohms from ground, making a positive flow to ground. The resistances are so arranged in the grid circuit of this power tube, that it gives excellent tone quality because it presents a constant positive flow to ground of circuit.

A 385 ohm filter choke connects the source of the plate or 280 filament with the plate filter by passes which are of the 8 mfd wet electrolytic type condensers and the remainder of the circuit being by-passed by paper and mica condensers.

The first electrolytic condenser by-passes the plate positive source to the center tap of the rectifier plate winding or negative potential which will have a negative voltage of approximately 83 volts before it passes through the field coil to ground. The body or negative of the electrolytic case being insulated from the chassis permits this by-passing arrangement.

LINE VOLTAGE 110 VOLTS A.C. - VOL. CONTROL AT MIN.

Tubes	227	551	224	551	224	PZPentode	280
Plate	95	246	246	246	98	226	278
Screen Grid	none	95	95	95	30	246	
Cathode	none	37	7.5	37	4.75	0	
Grid	-5.75	0	0	0	0	-1.5	

VOL. CONTROL AT MAX.

Plate	68	240	240	240	94	220	275
Screen Grid	0	68	68	68	28	240	
Cathode	0	3.5	5	3.5	4.5	0	
Grid	3.4	0	0	0	0	1.5	

The following are the given voltages at the speaker terminals: Brown lead 220 volts - Green lead 240 volts - Black lead 0 - Red lead 14 volts - Yellow lead 83 volts.

Resistors are marked according to the standard R.M.A. color code.

GENERAL MOTORS RADIO CORP.

MODEL Day-Fan A-5005
A-5020
Schematic, Voltage

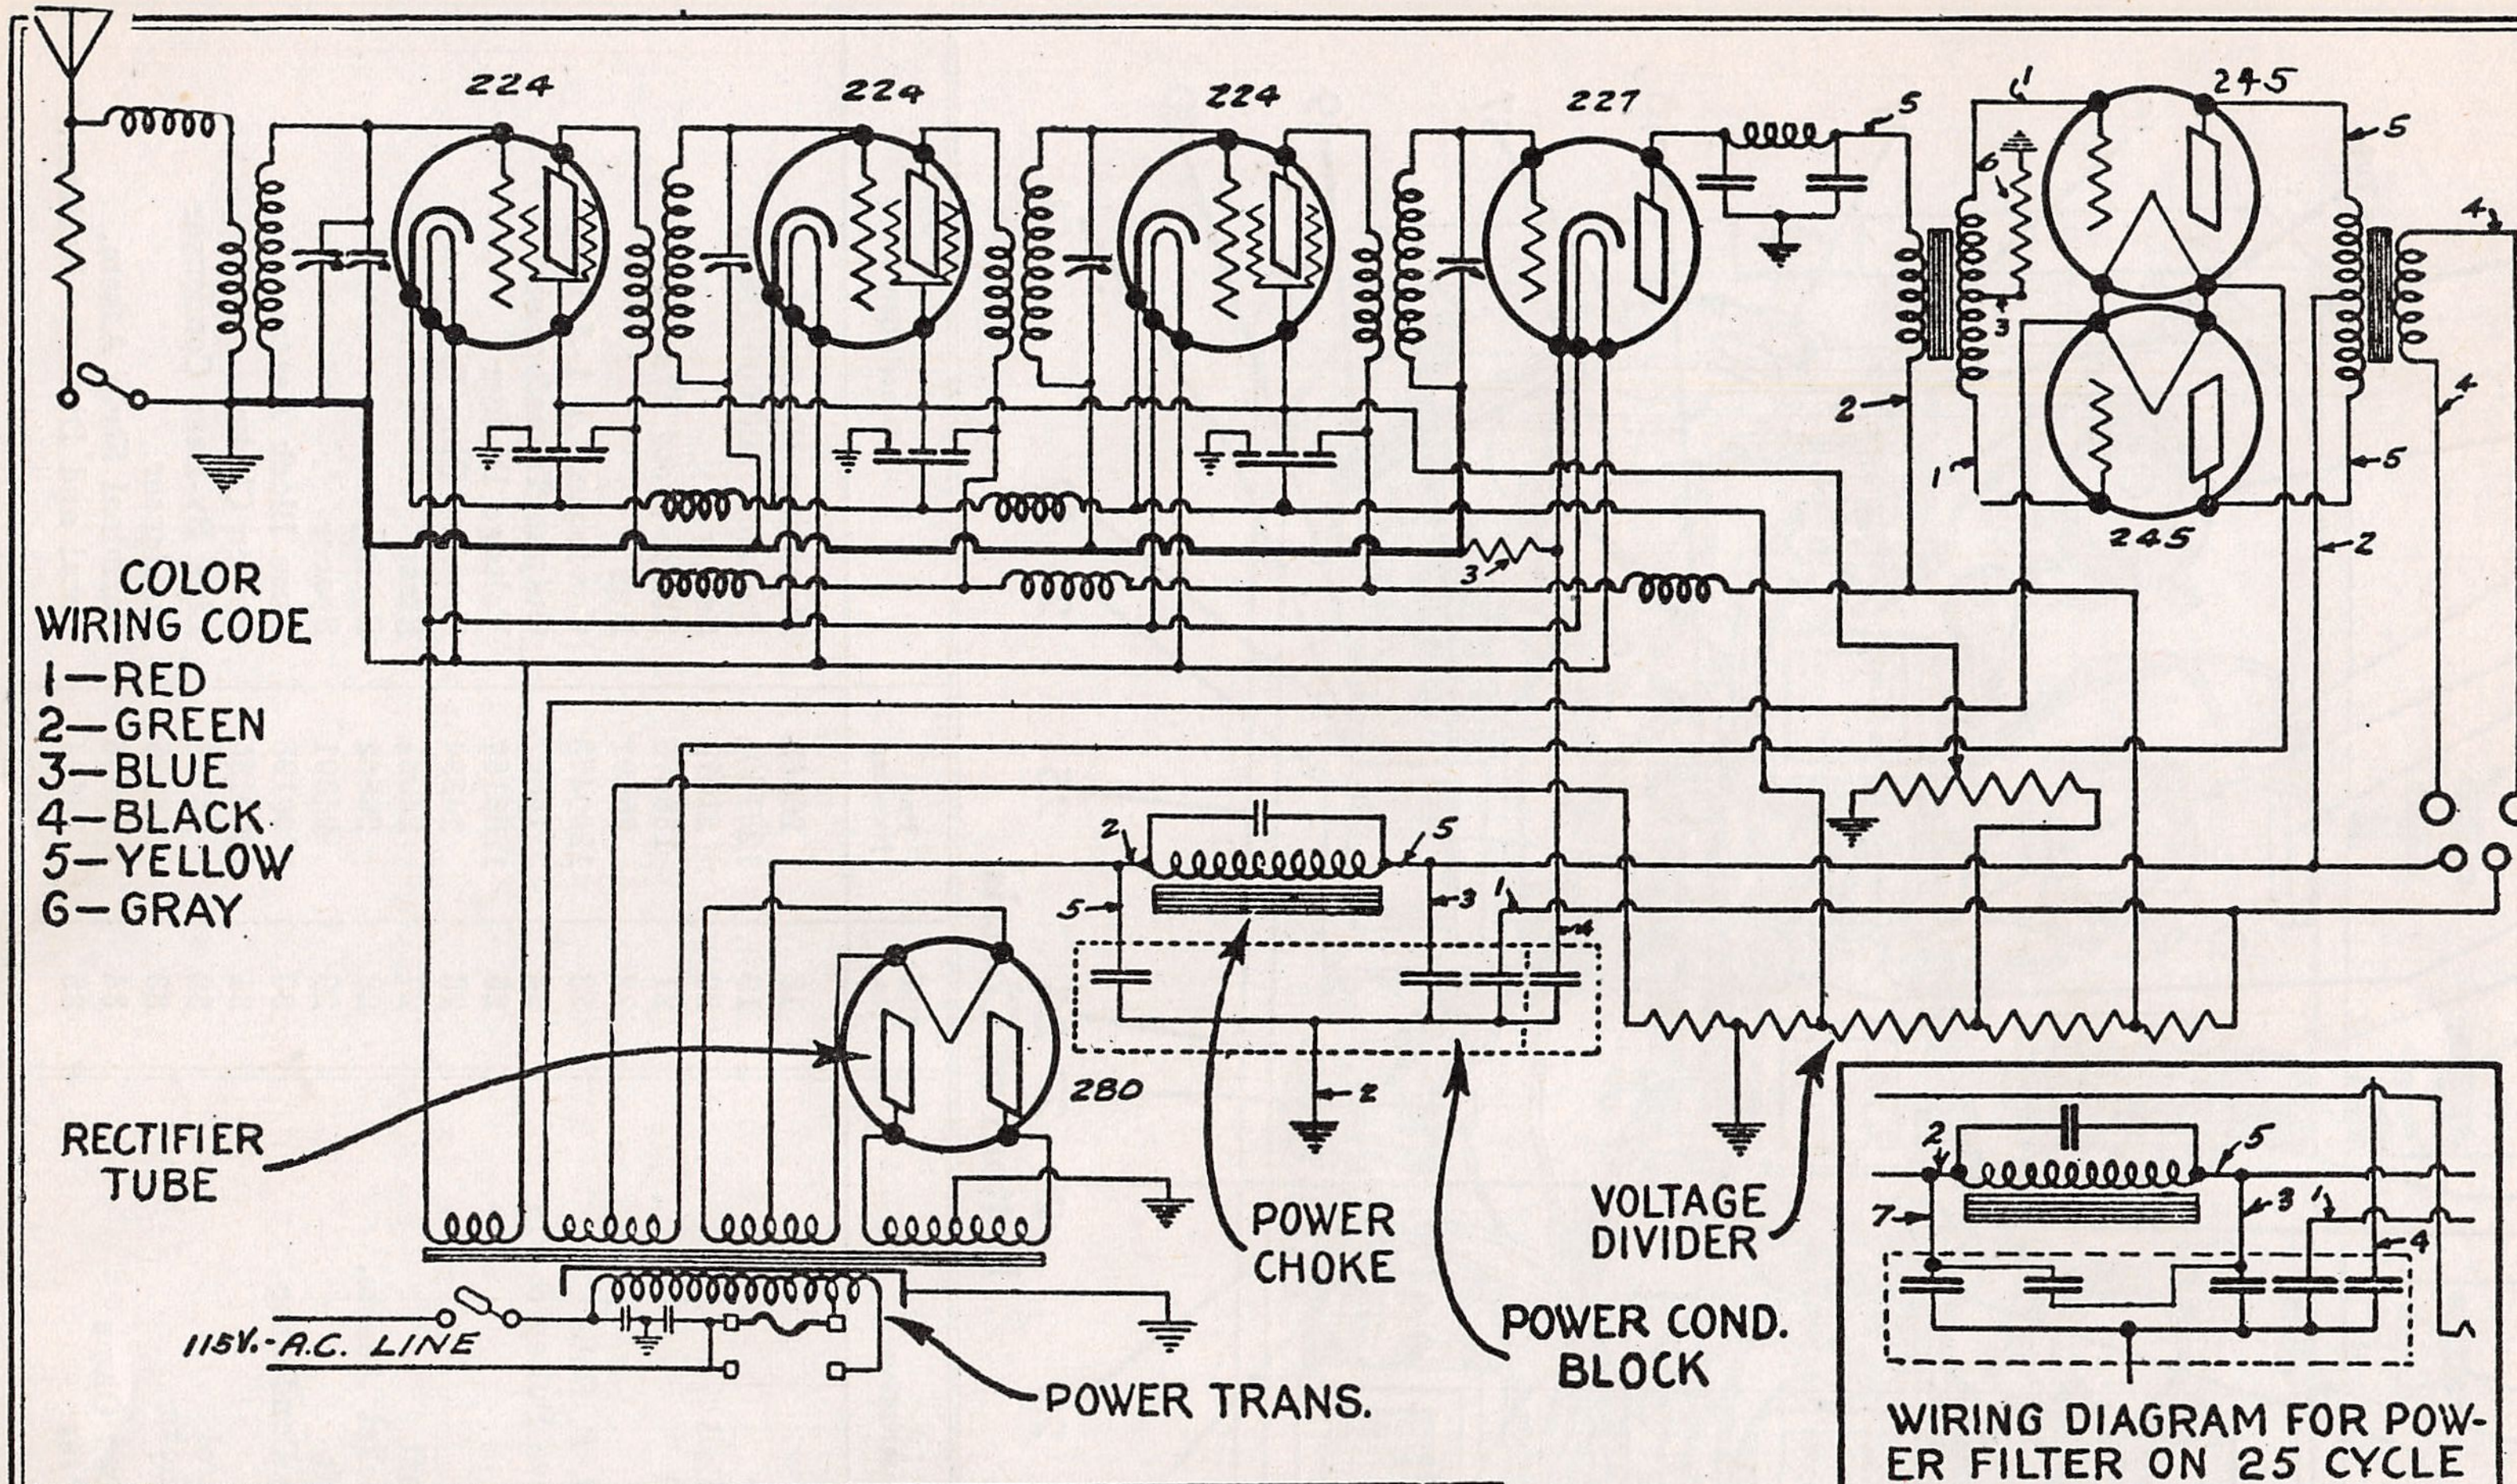
224
224
224
227
245
245
280
COLOR WIRING CODE
1—RED
2—GREEN
3—BLUE
4—BLACK
5—YELLOW
6—GRAY
RECTIFIER TUBE
115V.-A.C. LINE
POWER TRANS.
POWER CHOKE
POWER COND. BLOCK
VOLTAGE DIVIDER
1
2
3
4
5
6
7

WIRING DIAGRAM FOR POWER FILTER ON 25 CYCLE RECEIVER

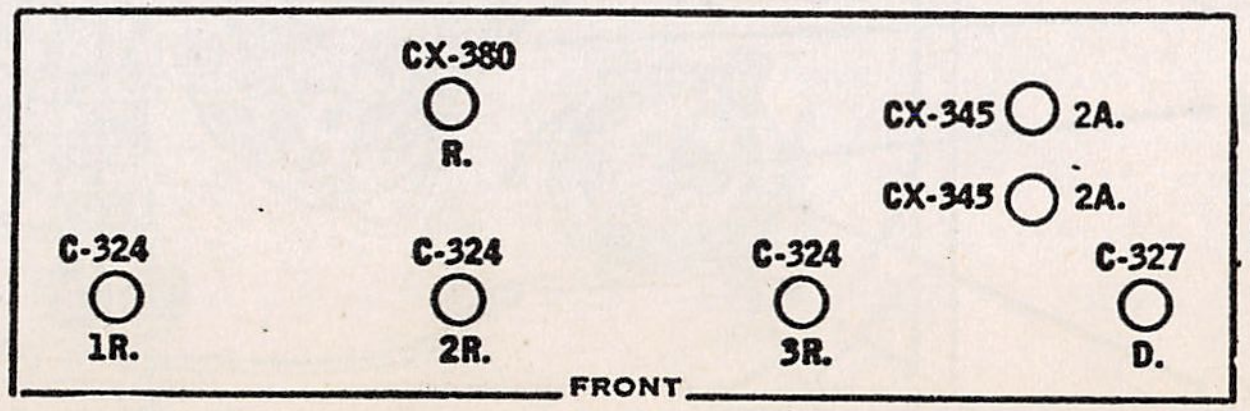
CX-380
R.
CX-345 2A.
CX-345 2A.
C-324
1R.
C-324
2R.
C-324
3R.
C-327
D.
FRONT

A5005
93, 94
(A.C.)

Type of Tube	Position of Tube	TUBE IN SET ANALYZER						
		"A" Volts	"B" Volts	Con. Grid "C" Volts	Screen Volts	Cathode Volts	Normal Plate Ma.	Gd. Test Ma.
224	1-R. F.	2.2	145	— 3	+66	+ 3	2.0	4.0
224	2-R. F.	2.2	145	— 3	+66	+ 3	2.0	4.0
224	3-R. F.	2.2	145	— 3	+66	+ 3	2.0	4.0
227	Det.	2.2	130	—13	....	+13	....	....
245	A. F.	2.2	220	— 8	....	....	32.0	37.0
245	A. F.	2.2	220	— 8	....	....	32.0	37.0
280	Rect.	4.4	....	....	....	....	105.0	....

Line Voltage During Test —110 Volts
Volume Control —On Full
Position of Fuse —115 Volt Clips

MODEL Day-Fan A-5005
A-5020
Chassis

GENERAL MOTORS RADIO CORP.

DAY-FAN
MODEL A-5005
MODEL A-5020

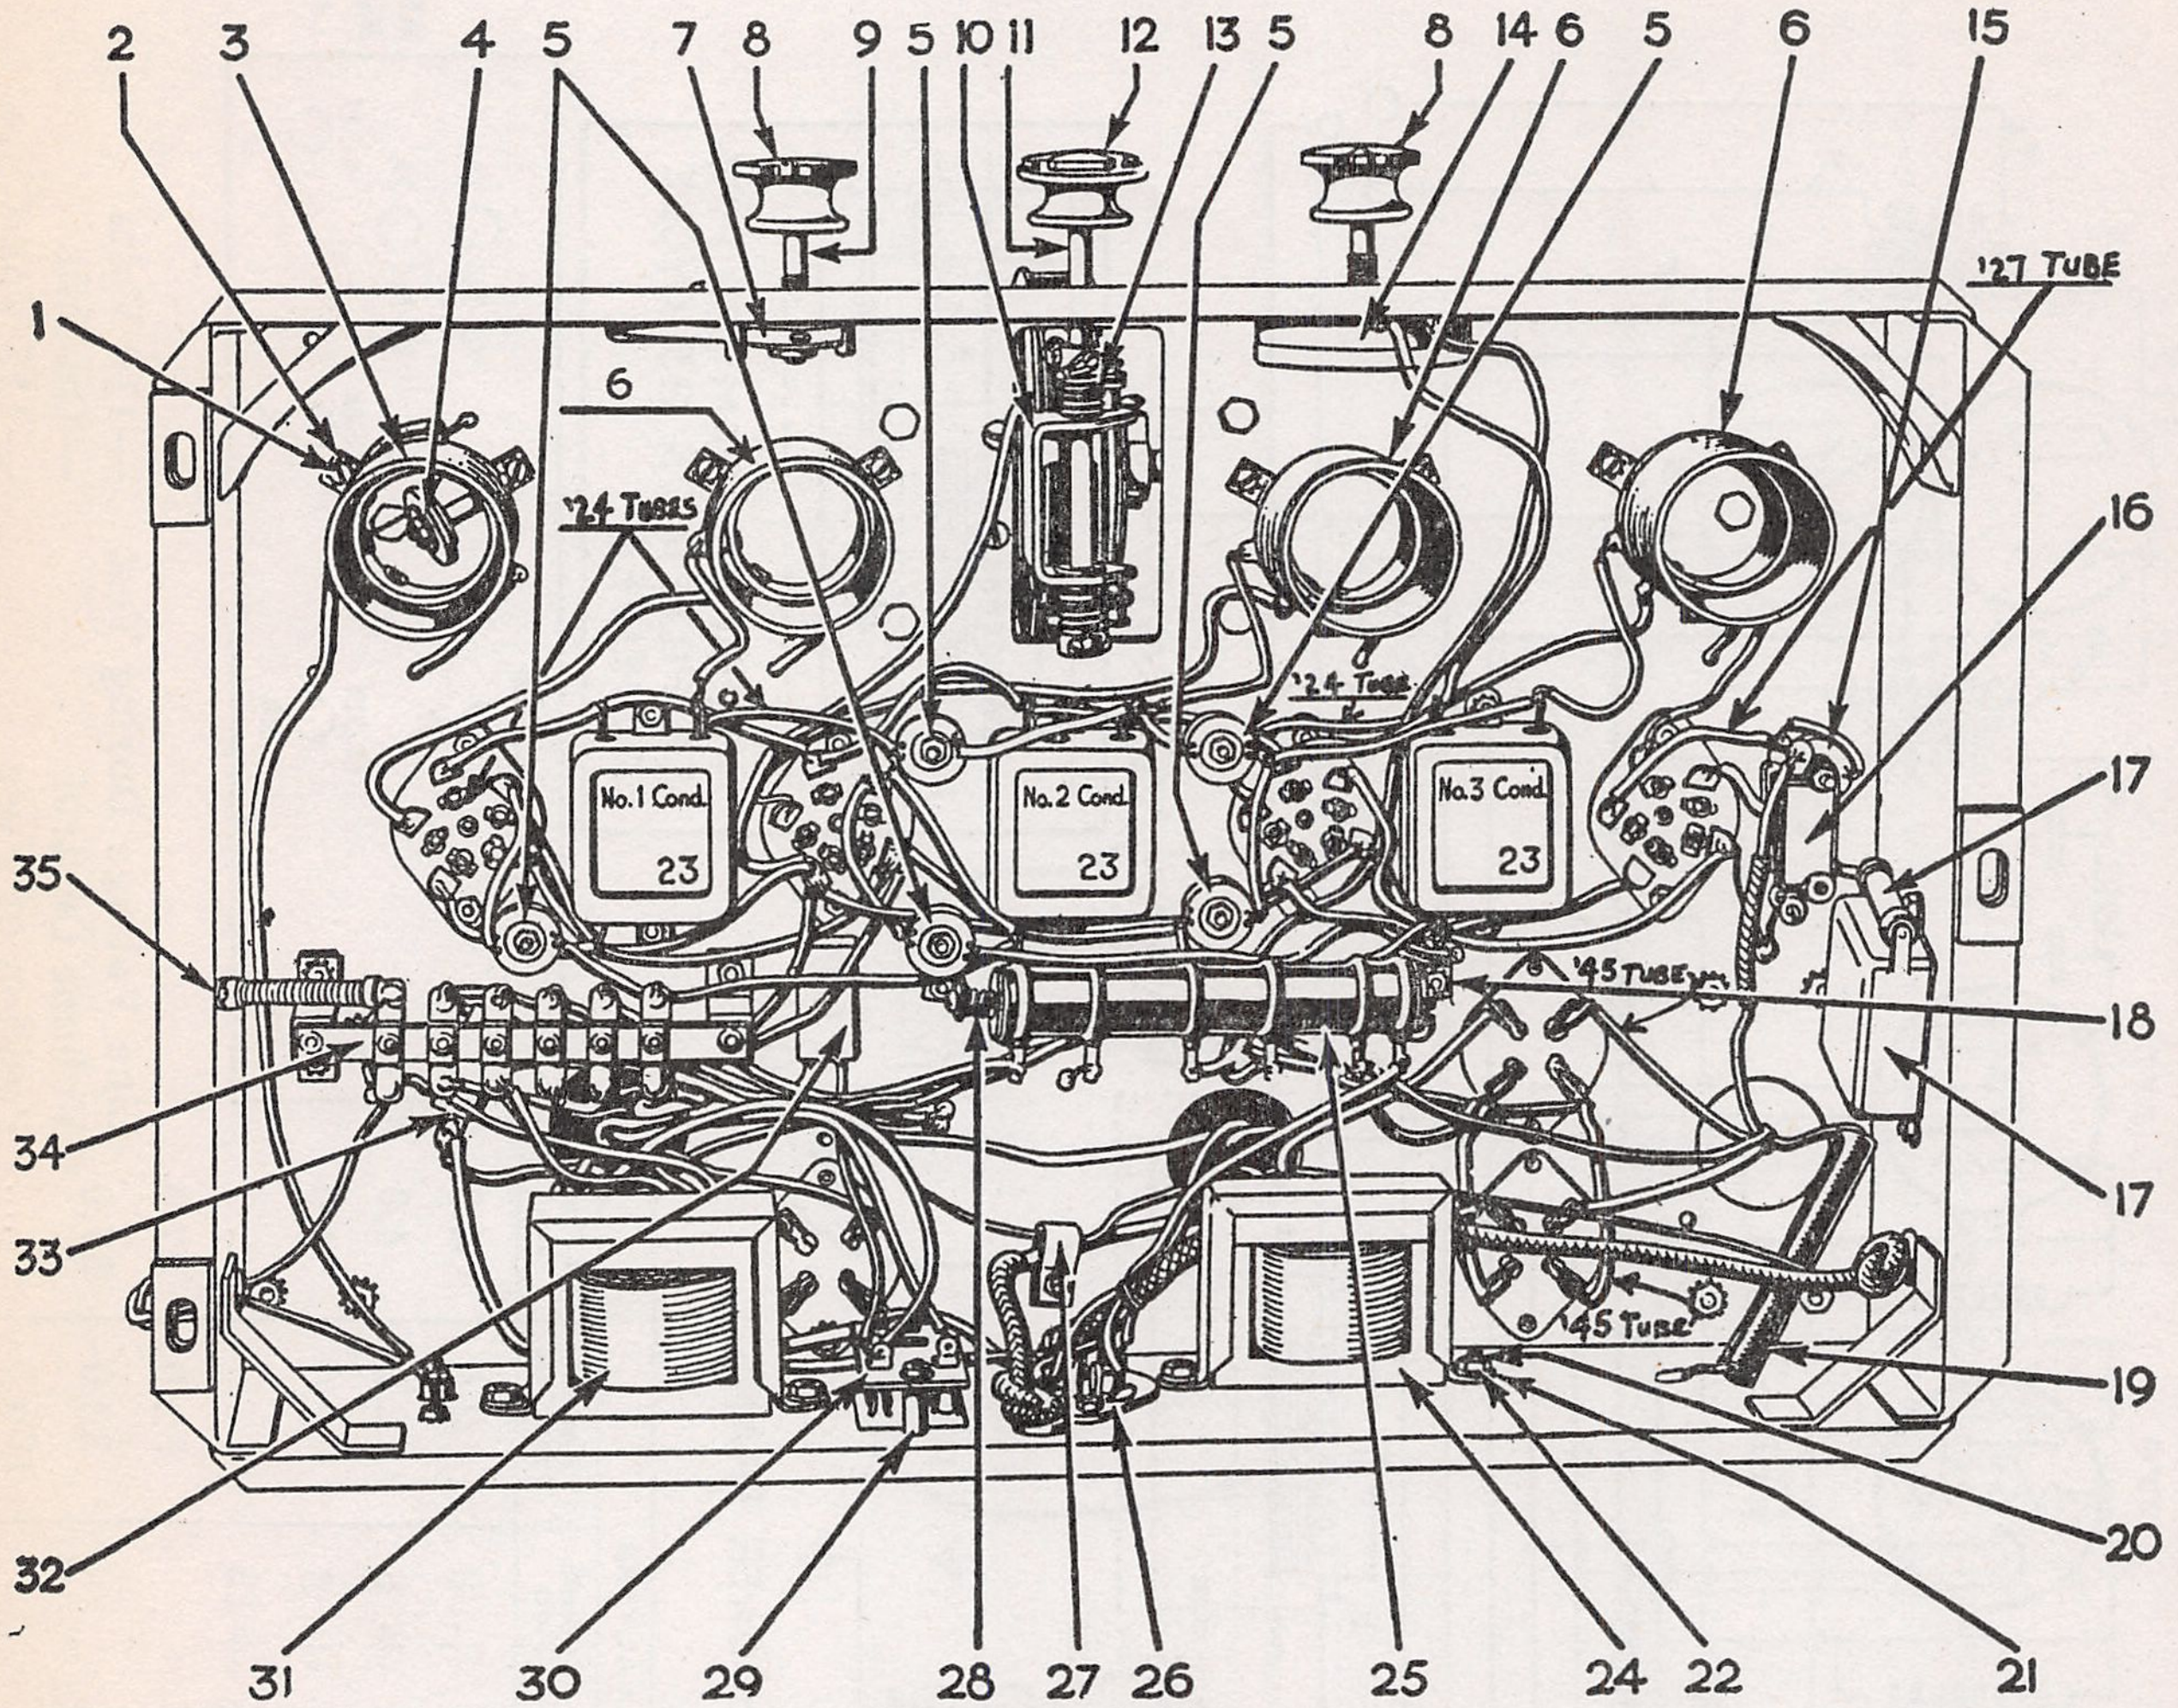
2
3
4
5
7
8
9
5
10
11
12
13
5
8
14
6
5
6
15
'27 TUBE
1
6
'24 TUBES
'24 TUBE
16
No. 1 Cond. 23
No. 2 Cond. 23
No. 3 Cond. 23
17
35
'45 TUBE
18
34
17
33
'45 TUBE
19
32
20
31
30
29
28
27
26
25
24
22
21

Bottom of Chassis

Illus. No.	Part Number	Description	Illus. No.	Part Number	Description
1	26758	Screw	18	26568	Mounting Bracket
2	138164	Lock Washer	19	1201604	Resistor, 500,000 Ohms
3	14609	No. 1 R. F. Coil	20	21678	Screw
4	14650	Antenna Coil	21	138475	Shake-proof Washer
5	14556	Choke Coils	22	25591	Nut
6	14603	No. 2, 3, 4 R. F. Coils	23	1200473	Condenser, .1-.1-.1 Mfd.
7	14766	Trimmer Drive Pulley & Pin	24	14597	Output Transformer
7	26682	Belt	25	1200167	Voltage Divider
8	14351	Knob	26	14594	Speaker Plug Receptacle
9	26679	Trimmer Shaft	27	24981	Strap
10	14591	Selector Bracket Assem.	28	26562	Spring
11	26175	Selector Shaft	29	24901	Spacer
12	14664	Knob-Tuning Condenser	30	1200195	Fuse Block Assem.
13	14662	Windlass	31	1200135	Power Choke
14	14588	Volume Control	32	14738	Line By-Pass Condenser
15	14556	Det. Plate Choke	33	13075	Condenser
16	1200413	Condenser			
17	1201610	Resistor, 25,000 Ohms	34	14566	Terminal Strip Assem.
17	14686	No. 4 Condenser	35	14624	Local and Distance Resistor.

GENERAL MOTORS RADIO CORP.

MODEL 120,130,140
Service Notes

MODELS 120, 130 and 140 CHASSIS MODELS "A" and "B"

The Models "A" and "B" chassis are divided into three groups having slightly different circuits.

Serial Numbers below 29100A and 1700B:

In the original models, with serial numbers below approximately 29100A and 1700B, one side of the Dual Volume Control is in the Antenna circuit between the antenna and the first R. F. coil, with a .0005 mfd. condenser between the antenna and the antenna choke.

The other side of the volume control, together with a 5000 Ohm resistor is in the screen grid circuit of the R. F. stages. In these sets there are two R. F. chokes in the cathode circuit of the R. F. tubes.

Sets with this circuit can be distinguished by the presence of five similar R. F. chokes, one being located near the first 224 tube socket, and four between the second and third 224 tube sockets.

Serial Numbers between 29100A and 62100A, and 1700B and 1964B:

In sets with serial numbers between approximately 29100A and 62100A, and 1700B and 1964B, the .0005 mfd. condenser is not used with the volume control in the antenna circuit.

The other side of the volume control in these sets is in the cathode circuit of the three R. F. Stages. The two R. F. chokes in the 224 cathode circuits are not used, but three 1250 Ohm resistors are used, one in series between the cathode of each 224 tube and the volume control.

Serial Numbers Above 62100A and 1964B:

The circuits of sets with serial numbers above approximately 62100A and 1964B, are practically the same as those in sets with serial numbers between 29100A and 62100A, except that the Audio choke is not used and the Power Condenser Block is replaced by three 8 mfd. Electrolytic Condensers.

Above serial numbers approximately 64372A and 1964B, new R. F. coils are used. These coils have single turn primaries, and are "capacity coupled."

Sets above 62100A and 1964B can be distinguished by the presence of the Electrolytic Condensers.

Sets having the "capacity coupled" R. F. coils can be distinguished by the presence of three R. F. Chokes mounted on brackets at the bases of the R. F. Coil Shields.

Model "B" Chassis:

The circuits of the Model "B" (25 cycle) chassis are the same as those of Model "A" (60 cycle), except that one 1.0 mfd. condenser, Part No. 1200160, is added in parallel with the power choke.

Sets with this circuit can be distinguished by the presence of three resistors between the cathodes of the 224 tubes and the R. F. terminal strip, located between the second and third 224 tube sockets.

Electrolytic Condensers:

To test the Electrolytic condensers used in chassis above 62100A and 1964B use an "Open Test" or "Continuity Test" meter with a 22½ volt battery. The test being made similar to other continuity tests.

It should be noted that by reversing the test leads, different readings will be obtained.

The condenser to be tested should be removed from the chassis and tested as follows:

Pos. Test Point	Neg. Test Point	Correct Reading
Center Terminal	Condenser Can	Hand Should Jump and Return
Condenser Can	Center Terminal	Hand Should Rise Slowly, Almost to Full Scale

If both readings are the same, the condenser is defective and should be replaced. When in doubt try replacing the condenser.

Trimmer Adjustment on Tuning Condensers:

A small Trimmer Condenser is located on each of the four variable condenser units which comprise the Gang Tuning Condenser. The trimmer screws may be adjusted by means of screw-driver, through the holes in the top of condenser shield.

The No. 1 Trimmer (Left side when viewed from the front), should be adjusted when the set is installed as it balances the antenna stage to meet the requirements of the antenna used. This Trimmer should be adjusted by tuning a station whose frequency is at the high end of the scale, near 1400 Kilocycles. No. 2, 3, and 4 Trimmers should be adjusted only when the complaint is very definitely lack of volume or broad tuning.

If the sensitivity or selectivity is not normal, the Trimmers should be adjusted before attempting to calibrate the Tuning Condenser. To adjust the Trimmers, tune in a station around 1400 Kilocycles and turn the volume down by means of the volume control until the station is just audible.

Start with the Trimmer which is on the left side of the chassis, when viewed from the front, and adjust the screw either to the right or left until the loudest signal is obtained. This adjustment should bring the receiver back to normal operation. If not, the Trimmer on the right should be adjusted in the same manner. The two center trimmers should not be adjusted except in rare cases, and extreme care should be taken when adjusting these Trimmers so that the selector Pointer will not be thrown off adjustment and read incorrectly.

Condenser Adjustments:

If the selector pointer will cover only 1500 to 600 Kilocycles on the selector strip, the two-fingered washer has become bent so that the stop washer will slide over it. To correct this, remove the selector shaft assembly and invert the flat, two-fingered washer.

If the Phono-switch will not trip, set the selector pointer at 1460 Kilocycles, loosen the set screws holding the switch lever and turn the switch lever until it just engages the switch. Tighten the set screws in this position.

Selector Strip Adjustment—Mechanical:

If the selector pointer appears to be off mechanically, i. e., if a station close to 700 Kilocycles is off ⅛ inch and a station close to 1400 Kilocycles is also off the same amount, the adjustment of the selector strip to log one station would bring them all into line.

To make such an adjustment, tighten all set screws, then tune in a station of known frequency. Reduce the volume by means of the volume control so that the selector can be set on the exact peak of the incoming wave. Loosen the screws holding the selector strip and shift the strip until it indicates properly the frequency of incoming signal.

If the selector strip cannot be shifted far enough, loosen the set screws by which the selector windlass is attached to the selector shaft and shift the pointer to its approximate position before shifting the selector strip.

Selector Adjustment—Electrical:

The adjustment of the selector electrically, is known as "logging". If it becomes necessary to re-log the set, tune in a station between 550 and 700 Kilocycles, preferably as close to 550 as possible, which is known to be broadcasting exactly on its assigned wave length. Set the selector pointer to log this station accurately as described in the preceeding paragraph.

Then set the pointer on the exact frequency of a station known to be operating at that time between 1350 and 1500 kilocycles. Adjust the volume control until the station is just audible, without moving the pointer, adjust the left trimmer condenser (viewed from the front of the chassis) until maximum volume is obtained. Repeat the operation on the remaining three trimmers, one at a time, going from left to right until the station is peaked exactly on the correct reading.

Now try the station which was used to set the low frequency point and if it logs properly, all other stations will be in line. If the station does not log properly, repeat the above operation.

Hum:

If the No. 245 Tubes are unmatched, or if one or the other is defective, a hum will result which is very similar to what is known as 60 cycle hum. This can be eliminated by replacing one or both of the No. 245 Tubes.

It is to be understood that the No. 245 Tubes may not necessarily be defective. They may operate satisfactorily in another set, but may be merely unmatched with respect to each other.

The No. 227 Detector Tube will sometimes cause a similar trouble, except that the No. 227 Tube causes more of a buzz than a hum. If this buzz or hum cannot be eliminated by switching the 227 Tubes, the defective Tube should be replaced.

Volume Control:

Many complaints of unsatisfactory volume control action are not caused by defective volume controls, but in reality the faulty action is due to variation in the cut-off point of the No. 224 screen grid tubes. It is necessary to have, in the first R. F. stage at least, one tube which has a low cut-off point.

If the complaint is not due to a volume control which is actually defective, it usually can be eliminated by switching the No. 224 tubes from one socket to another until the proper arrangement is obtained.

In chassis with serial numbers between 29100A and 62100A (also 1700B and 1964B) a 7000 Ohm Resistor (Black and Blue) is connected between the cathodes of the screen grid tubes and ground, in parallel with one side of the volume control. When near a powerful local broadcasting station, the volume control, because of this resistor, may not cut the volume down low enough. This can be improved by removing the resistor mentioned. This is resistor No. R-21 shown in the wiring diagram

MODEL 150,160,
Pick Up-Trans.
Service Notes.

COMBINATION MODELS No. 150 & 160.

PART 1. THE ELECTRIC PICK-UP & TRANSFORMER

Description:

The electric pick-up provides an electrical means for sound reproduction. The pick-up is composed of three major parts:

1. A permanent magnet.
2. A small generating coil.
3. A vibrating armature which is caused to vibrate by the phonograph needle.

The generating coil is located in the center of the field of the permanent magnet which causes a constant flow of magnetic lines of force through the coil. In order to generate current in the coil, it is necessary to vary the strength of the magnetic field. This is accomplished by placing a vibrating armature in the center of the coil with a needle inserted in the needle holder.

The needle rides in the grooves on the record and as it vibrates back and forth it also causes the armature to vibrate. By the vibration of the armature in the magnetic field, the field strength is varied accordingly and a pulsating current of electricity is generated in the coil. The pulsations of this current correspond to the sound waves of the music, but they are too weak to be audible in the speaker.

The generating coil is connected, through a volume control, to the radio wiring and the electrical pulsations are amplified many times by means of the radio amplifying tubes.

When the pulsations of current generated in the generating coil have passed through the amplifying tubes, they are carried to the speaker unit where they set the diaphragm in motion which generates audible sound waves in the air.

The advantages of this method of reproduction are the ease with which the volume of sound may be varied by the volume control which varies the strength of the electrical pulsations before delivery to the amplifying tubes, and the truer reproduction through the radio speaker.

Servicing:

Adjusting Vibrating Arm:

Place a good needle in the needle holder and a record on the turntable. Turn the power switch on and the selector pointer to the right until the Phono-switch trips. After the tubes have had sufficient time to heat properly, tap the needle lightly with your finger, first on one side and then on the other. Each time the needle is tapped, a click should be heard in the speaker. If the click is louder when striking the needle on one side than it is on the other, the pick-up is out of adjustment. Remove the metal cover from the pick-up and note whether the vibrating arm, which is operated by the needle, is directly in the center of the space between the two pole pieces.

If the vibrating armature is off center, loosen the two brass round head screws which hold the small brass plate in position on the pole pieces. Center the armature between the pole pieces and tighten the brass screws securely.

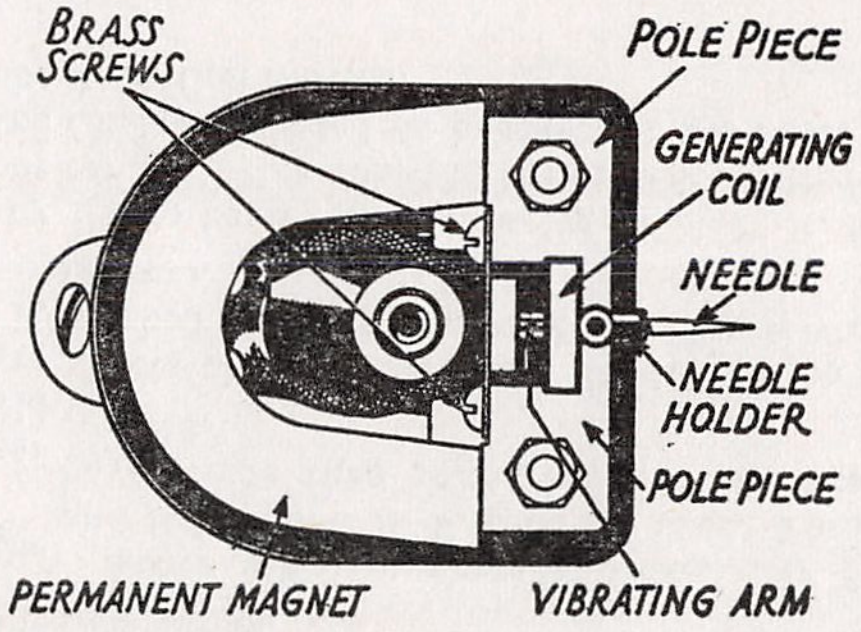

Figure 1

Pick up Transformer	- Part No. 1,200,877
Cord Assembly	- Part No. 1,200,866
Choke Coil	- Part No. 1,200,869
Condenser	- Part No. 1,200,418

(Cord Assembly Part No. 12,001,184 used on Models 150-A and B -)

PART 1. THE ELECTRIC PICK-UP & TRANSFORMER (Continued)

Testing for Open Coil or Wiring:

If there is no click at all, when tapping the needle, put the pick-up in place on the record and allow the record to rotate. Place the terminals of a set of ear phones on the two connections of the volume control to which leads from the pick-up connect. Reproduction of the record should be heard faintly.

Provided no sound is heard, remove the pick-up leads from the volume control and check for open circuit in those leads and the pick-up. (Note: Inspect the contacts on the pick-up end of the leads, to insure good contact in the socket on the pick-up.)

Repair Instruction:

Pick-ups that cannot be adjusted properly or that have open coils, should be replaced with new ones and the old ones returned to the nearest service station for repair.

Next Step if Pick-Up is O. K.:

If reproduction of the record can be heard faintly through the ear phones, check the volume control or the connections between the pick-up and the radio unit for the trouble.

Testing Pick-Up Transformer:

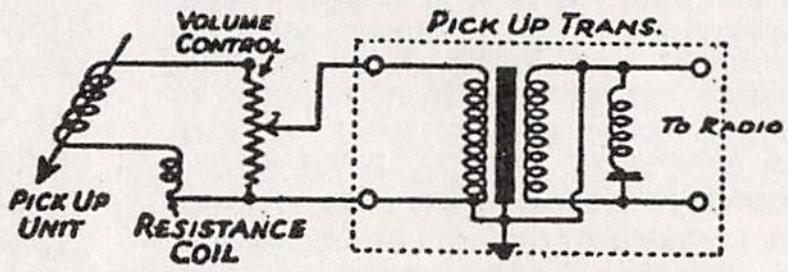

Figure No. 2—Pick-Up Wiring Diagram

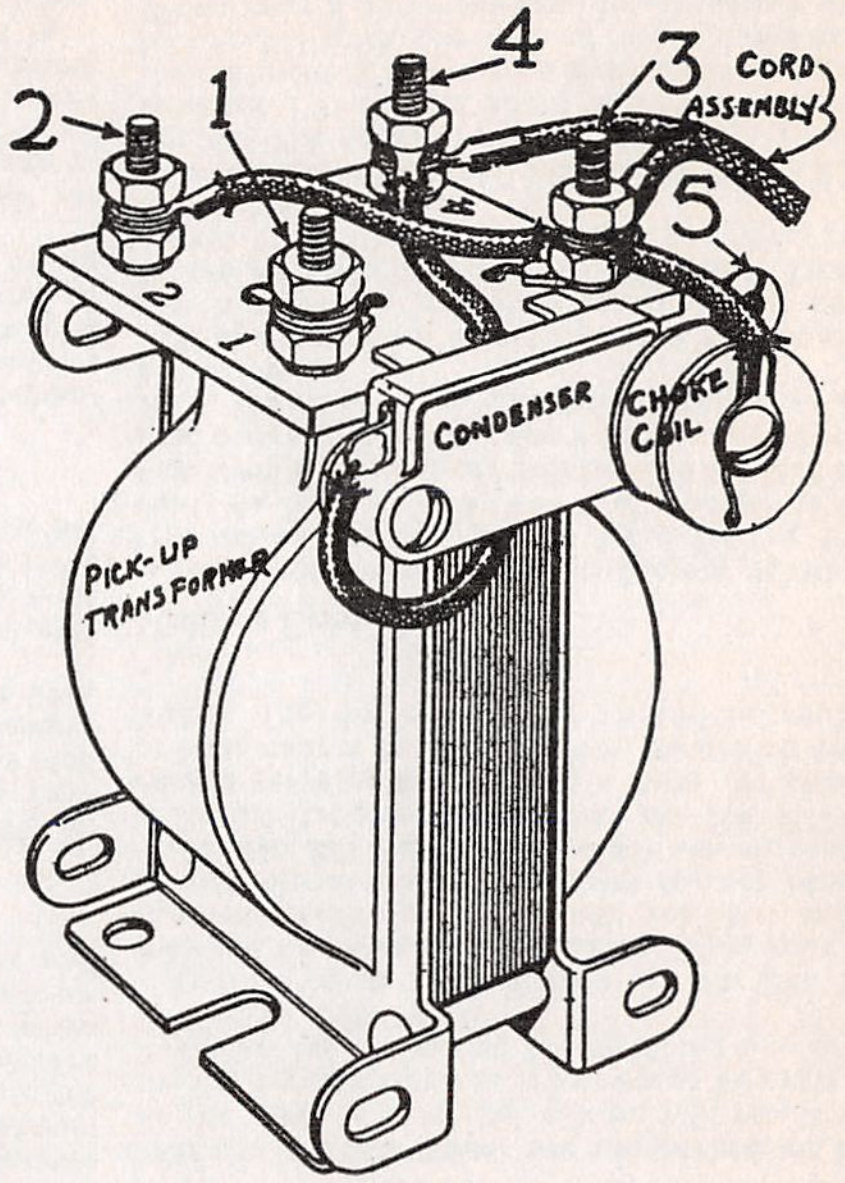

Figure 3

Make the following tests with an open test meter. (See Figure 3 for contact numbers.)

From Contact Number	To Contact Number	Proper Reading	Incorrect Reading Caused by
1	2	Full Scale	Open Winding
3	4	¾ Scale	Open Winding
3	5	Full Scale	Open Choke
Cond. Lead from No. 4	5	*Hand should Jump and Return to Zero	Shorted or Open Condenser

*Blue Condenser Lead must be disconnected from No. 4.

COMBINATION MODELS No.150 & 160

PART 2. INDUCTION DISC MOTOR

Description:

The motor consists of an induction disc of aluminum arranged to revolve between the poles of two sets of field magnets. The coils of the field magnets, commonly called field coils, receive current from the house lighting circuit and are the only parts electrically connected to that circuit.

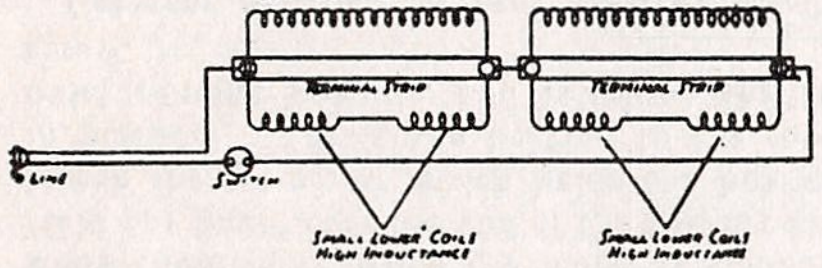

Figure 4—Wiring Diagram of Induction Disc Motor

The main shaft of the motor operates in a vertical position, is supported at the bottom by a single ball bearing, carries the induction disc and turntable, and drives the governor shaft through a set of gears. The speed of the shaft is controlled by a mechanical fly ball governor.

The induction disc motor has no commutator, slip rings, or other moving electrical contacts, and this, with the natural slow speed, makes it very well suited for the service for which it is used.

Servicing:

Any servicing which the motor may require is in general, of a minor nature, and in most cases, adjustments will be mechanical rather than electrical. Two of the most common causes of motor failure are incorrect power voltage and lack of lubrication.

Power Voltage Variation:

High voltage will cause the motor coils to heat excessively and thus destroy the insulation and dry the lubrication.

Low voltage will cause a lack of power and unstable operation. When servicing the induction disc motor, always check the power line voltage at the socket to which the motor is connected and, if possible, while the motor is running. This voltage should be between 105 and 120 volts A. C.

Lubrication:

It is important that the motor be lubricated at least once every six months with the proper lubricants. A motor lubricating chart is shown on the under side of the motor board.

A light grease should be used on the teeth of the drive gear and spiral. The governor bearings, governor friction sleeve and the upper and lower turntable spindle bearings should be lubricated with oil. For lubricating the governor friction leather use Neat's Foot Oil.

Motor Does Not Operate:

If the motor fails to start, first be sure that it is not binding any place and that the turntable turns freely.

If it turns freely, check the wiring for open circuits with an open test meter.

With the switch closed, test across the contacts of the power plug. A full scale reading should be obtained. If not, this will indicate that the switch is defective or some part of the wiring is broken.

A visual inspection of the switch will show whether or not the trouble is in the switch. For information regarding the adjustments of the switch, see page 7.

If the switch is making good contact, check all wiring carefully for broken wires or loose connections.

If a full scale reading of the meter is obtained when testing across the light socket plug points, check the field coils. To determine which coil is defective, if any, it is necessary to test each coil separately.

Continuity Tests:

To do this, remove all connections from the two terminal strips, one located at each end of the motor. Refer to Figure 5 and take a reading across each coil with an open test meter as follows:

No. to No.	Correct Reading	Incorrect Reading Caused by
1A—1B	Full Scale	Open Upper Coil
2A—2B	Full Scale	Open Lower Coil
1C—1D	Full Scale	Open Upper Coil
2C—2D	Full Scale	Open Lower Coil
B— C	Full Scale	Open Wiring

When replacing coils it is necessary to replace both the upper and lower coils as a unit. The core and coil assembly may be taken off by removing the three screws holding the coils to the frame and top plate.

When the coils are replaced, be sure that the wire terminals marked with the same letter are placed together. That is, 1A, 2A and 3A must be attached to the terminal strip at the point "A", etc. See Figure 5.

PART 2. INDUCTION DISC MOTOR (Continued)

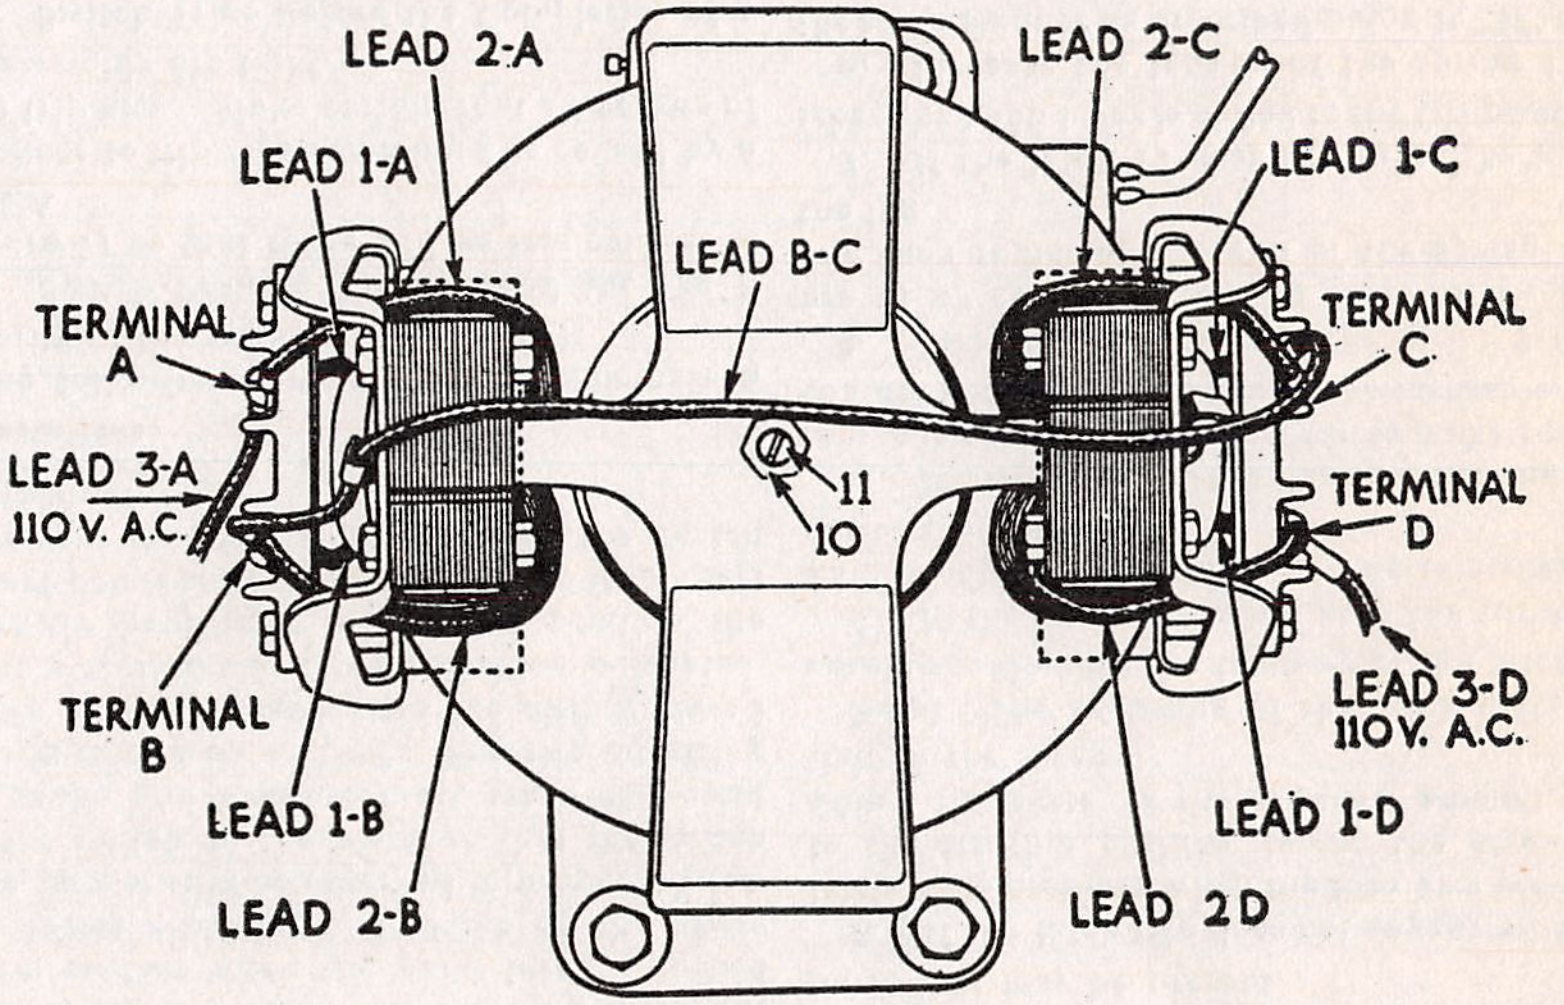

Figure 5

Failure to Maintain Constant Speed:

There are four points to be checked if the motor fails to maintain constant speed.

Hardened or Gummed Lubrication. Examine the moving parts. If necessary, remove them and wash with kerosene. Replace the parts and lubricate them.

Shifting of Motor on Motor Board. In some cases a slight shifting of the motor on the motor board during shipment will cause binding. Loosen the three motor screws, and retighten, alternately, while the motor is running until the binding has been eliminated and the motor runs steadily.

Weak Coils. If the lubrication and mounting of the motor have been examined as described above, and the condition still exists, replace one or both of the motor coils as described under subject "Motor Does Not Operate."

Mechanical Causes. All the points mentioned in subject entitled "Reducing Mechanical Noise" will have a certain effect upon the regulation of speed and should be taken into account even though there is no actual mechanical noise present.

Reducing Hum:

There are a number of causes for hum in the induction disc motor, but in most cases any existing hum can be eliminated by proper adjustment.

Loose Coil Winding on Iron Core. The condition can be corrected by forcing a small wooden wedge between the outside of the coil and the core. It may be necessary to wedge both the upper and lower sections of each coil.

Coil Loose on Top Plate. The three screws holding the coil on the top plate should be tightened securely.

Loose Laminations of Iron Core. The bolts clamping the iron laminations together should be tightened securely. In some cases, however, it may be found that the hum can be minimized by adjusting the tension of these bolts.

COMBINATION MODELS No. 150 & 160

PART 2. INDUCTION DISC MOTOR (Continued)

Motor Not Fastened Securely to Motor Board. Make certain that the nuts holding the motor to the motor board are fastened securely and with equal tension and that the felt washers between the motor and the motor board are not injured.

Motor Not Properly Secured to Cabinet. In many cases motor hum can be eliminated or minimized by adjusting the four screws which hold the motor board to the cabinet. Placing a piece of felt between the motor board and the motor board rail will often help to eliminate hum.

Reducing Mechanical Noise:

There are several features which may cause motor noise other than a hum.

Governor Springs. A noise or rattle may sometimes be caused by loose or broken governor springs. Tighten all the governor spring screws. If this does not stop the noise, loosen the screws on the disc end of the governor springs and allow the motor to run for a minute or so to allow the springs to assume their correct position. Stop the motor and retighten the screws. If any of the springs are broken or badly out of balance, they should be replaced. Removal of the governor can be accomplished by loosening the two governor bearing screws, one at each end of the shaft, and lifting the governor from the frame.

Governor Thrust Bearing The thrust bearing at the disc end of the governor may sometimes cause noise while the motor is running Hold one finger over the end of the bearing and loosen the set screw which holds the bearing in position. Adjust the bearing to the most quiet running position, and retighten the set screw.

Governor Spindle. A bent governor spindle will cause binding in the gears and bearings as well as a noise The bent spindle should be replaced with a new one.

Governor Driving Gear. Remove the turntable spindle as described above and examine the gear for wear. If the wear on the teeth is greater on one side than on the other, the turntable spindle is bent and should be replaced. The gear should also be replaced.

Turntable Spindles and Disc. A bent turntable spindle or a bent or improperly adjusted disc will cause noise. The bent spindle may cause the disc to rub against the iron core of one of the coils as described above. A bent spindle can be detected by placing a pencil flat on the motor board with the point against the spindle. If the pencil point touches the spindle on one side only while the motor is running, the spindle is bent and should be replaced.

Speed Regulation:

The governor will maintain a constant speed of the motor within a range of sudden voltage changes of 15 volts, provided all parts are correctly adjusted.

The speed regulator is adjusted before leaving the factory to that speed which is proper for perfect reproduction, namely 78 revolutions per minute.

However, if this adjustment is altered for any reason it is possible to reset the speed regulator by placing a small piece of white paper on the outer edge of the turntable. By counting the number of times the paper passes a given point per minute, it can be determined whether the speed should be increased or decreased. The motor may be adjusted to the proper speed by turning the speed regulator screw in the direction indicated on the regulator plate.

Removal of Disc:

The motor disc and the governor drive gear are each fastened to the turntable spindle with set screws. When removing the disc loosen the two set screws, and pull the spindle away from the top plate Care should be observed that the ball bearing on which the lower end of the spindle rests is not lost. When replacing the disc, it will be noted that the spindle is spotted for the governor drive gear and disc set screws, and that these spots are in line with the pin on the turntable spindle

Adjusting Position of Disc:

The disc should be properly aligned between the upper and lower section of each coil so that it does not touch the iron core of either and does not cause binding of the governor gears. In case the disc rubs against the iron, it should be adjusted by means of the spindle adjusting screw 11. See Figure 5, page 5. Loosen the lock nut and turn the screw until the disc is evenly spaced between the upper and lower coils.

PART 3. THE AUTOMATIC SWITCH & BRAKE

Description:

The automatic switch and brake consists of a system of cams and levers operating in such a manner that the movements caused by the eccentric groove at the end of the record trips the switch, forcing a friction leather against the turntable and, at the same time, cutting off the power to the motor.

Servicing:

The switch will ordinarily require no adjustment. In some cases, however, the upper spring shown in Figure 6 may become bent upward far enough to prevent the contacts from coming together when the hand lever is turned.

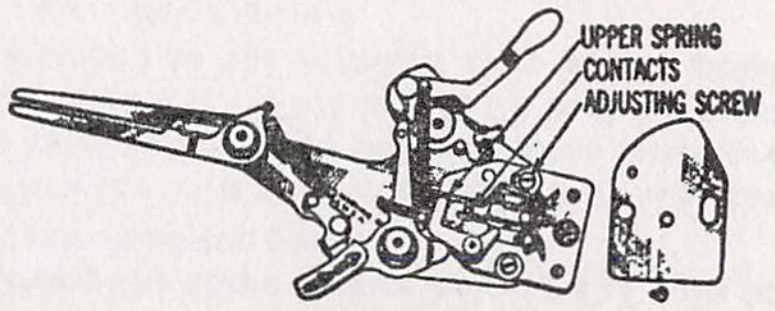

Figure 6

When such a condition is found, bend the upper spring down until the contact points make a firm contact when the hand lever is turned on. When replacing the switch on the brake plate, care should be observed in properly locating the switch on the plate, so that the switch will make and break contact when the hand lever is turned on and off The two adjusting screws can be loosened and the switch moved in the slot until the correct position is located. When the hand lever is in the off position, the contact points should be at least 1/16 inch apart to prevent excessive sparking when the switch is turned off.

Adjustments:

The following adjustments will eliminate a majority of the troubles encountered:

1. **Switch Fails to Trip.** Bend the lug B (Figure 7) so that there will be less contact at point A

Failure to trip may sometimes be caused by a loose trip arm. Make certain that all screws of this assembly are tight.

2. **Switch Trips Before the Completion of a Record.** Bend the lug back, so that there will be more contact at point A. (Figure 7.)

Warning: Do not bend the lug too far, as bending too often in opposite directions will snap off the lug

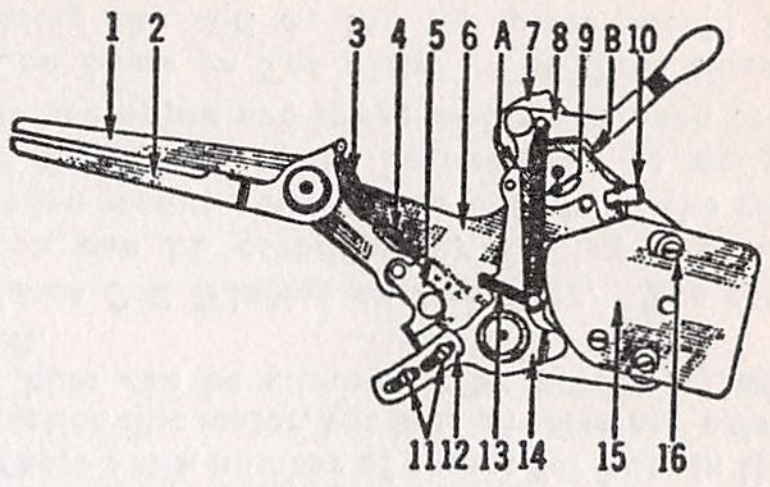

Figure 7

3. The two surfaces at the point A must be square. If they have become worn round, they should be squared with a fine file.

4. If the switch lever 1 swings with the eccentric groove, but the friction lever 2 fails to swing, or swings but slightly, the latch trip 5 is probably caught in a burr on one of the teeth of the latch plate 12. Rub the teeth of the latch plate with a piece of emery cloth, taking off any burrs that may be present.

5. If the latch trip does not engage with the latch plate properly when the tone arm is swung to the starting position, loosen the screw 11, adjust the plate 12 the required amount, and tighten the screws.

Note: The adjusting of the latch plate has nothing to do with the tripping of the latch.

6. If the brake does not stop the turntable soon enough the condition can be remedied by one of the following:

a. Examine the friction leather, making certain it is not worn down too far to make proper contact with the inside rim of the turntable.

b. Increase the tension of the spring 9 (Figure 7) by cutting off one or more of the coils and then replacing the end of the spring over the lug.

7. If the latch 14 does not strike the lug A when the hand lever is pulled to the ON position:

a. Increase the tension of the spring 13 in the same manner as described above in "B" of 6.

b. Decrease the tension of the spring 4 by stretching the coils if necessary

MODEL 216, 217
219, 250
(S-1A, S-1B)
Schematic

GENERAL MOTORS RADIO CORP.

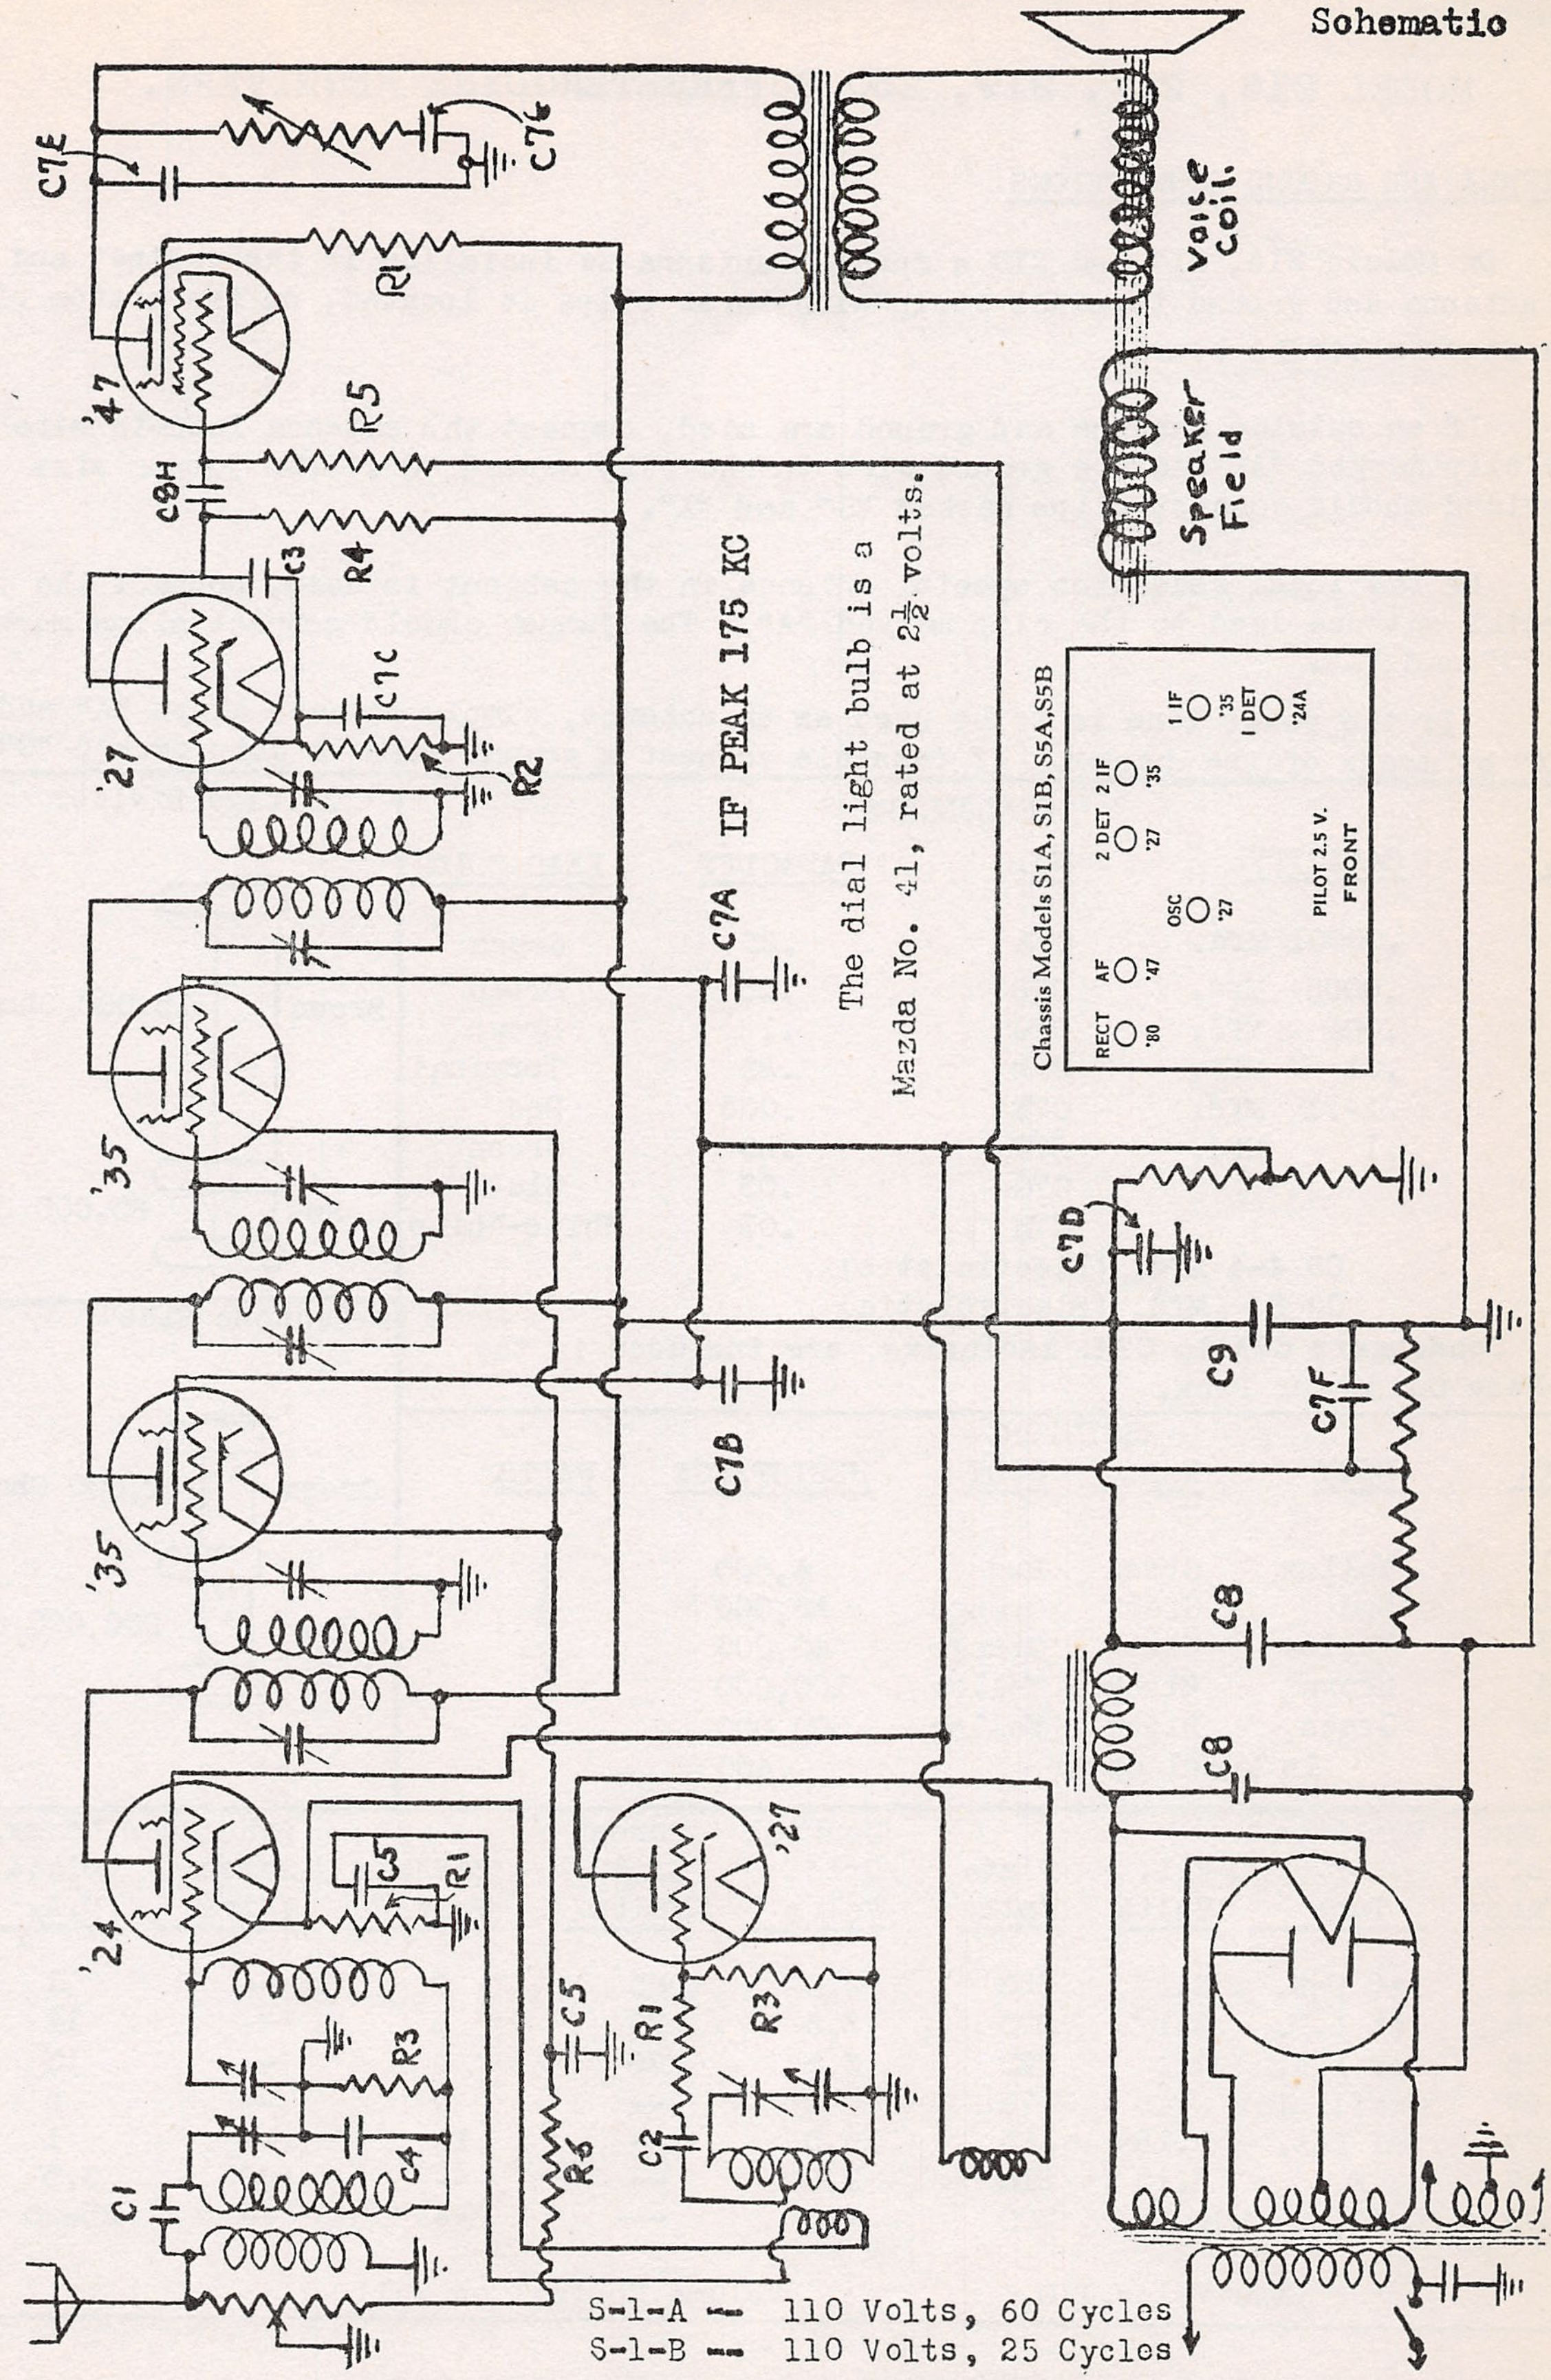
C7E
C7G
R1
'47
R5
C9H
R4
C3
C7C
'27
R2
Voice Coil
Speaker Field
C7A
'35
C7D
C9
C7F
C7B
'35
C8
C8
'24
C5
R1
R3
'27
R1
R3
C1
C4
R6
C2
Chassis Models S1A, S1B, S5A, S5B
RECT '80
AF '47
OSC '27
2 DET '27
2 IF '35
1 IF '35
1 DET '24A
PILOT 2.5 V.
FRONT

IF PEAK 175 KC

The dial light bulb is a Mazda No. 41, rated at 2½ volts.

S-1-A -- 110 Volts, 60 Cycles
S-1-B -- 110 Volts, 25 Cycles

MODEL 216, 217, 219, 250 SUPERHETERODYNE RECEIVERS. (CHASSIS MODELS S1A & S1B)

MODEL 216,217
219,250
(S-1A, S-1B)
Voltage-Data

GENERAL MOTORS RADIO CORP.

MODEL 216, 217, 219, 250 SUPERHETERODYNE RECEIVERS.

ANTENNA AND GROUND CONNECTIONS

On Models 216, 217 and 219 a special antenna is installed in the cabinet and an antenna and ground terminal strip with three clips is located, on the bottom of the speaker baffle board.

If an outside antenna and ground are used, connect the antenna lead-in wire to the clip marked "A" and the ground wire to the clip marked "G". The jumper wire provided should connect clips marked "G" and "X".

If the local reception special antenna in the cabinet is used, connect the special antenna lead to the clip marked "A". The jumper should connect clips marked "G" and "X".

If the power line is to be used as an antenna, simply connect clips "A" and "X" by means of the jumper. If possible connect a ground wire to clip marked "G".

CONDENSERS

NO.	CAPACITY	NO.	CAPACITY	LEAD COLOR
C1	.00001 Mfd.	C7A	.25	Green
C2	.0005 Mfd.	C7B	.25	Green
C3	.002 Mfd.	C7C	.1	Brown
C4	.01 Mfd.	C7D	.25	Terminal
C5	.1-.1 Mfd.	C7E	.006	Red
C6	.1 Mfd.	C7F	.25	Green
		C7G	.03	Blue
		C7H	.03	White-White

C8 4-4 Mfd. (Electrolytic)
C9 8 Mfd. (Electrolytic)

Condensers C7A to C7H, inclusive, are included in the By-Pass Condenser Pack.

Voltage Divider

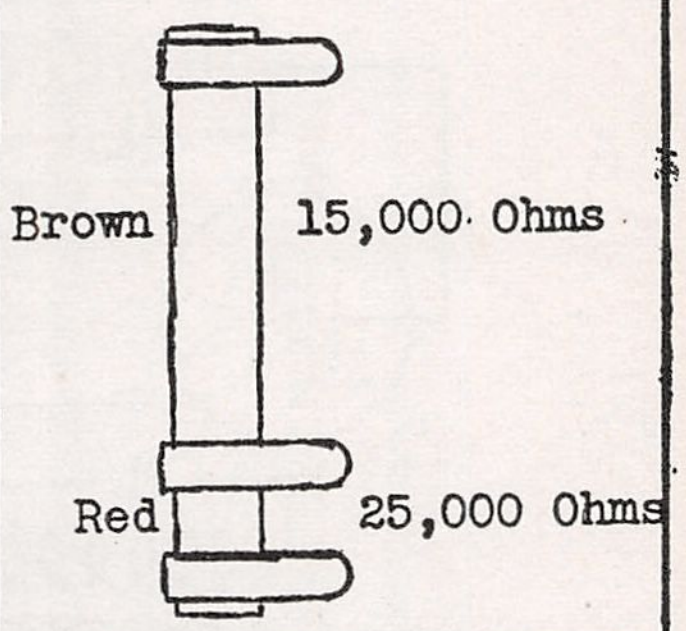

RESISTORS

NO.	BODY	END	SPOT	RESISTANCE	WATTS
R1	Yellow	Green	Red	4,500	1/2
R2	Red	Green	Orange	25,000	1/2
R3	Yellow	Black	Orange	40,000	1/2
R4	Brown	Black	Yellow	100,000	1/2
R5	Green	Black	Yellow	500,000	1/2
R6	In Metal Cover			400	

Pentode Bias

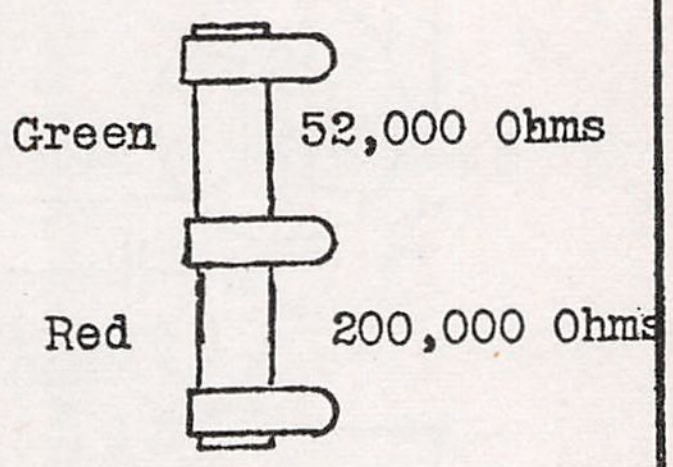

Type of Tube	Position of Tube	Fil. Volts	Plate Volts	Control Grid Volts	Screen Grid Volts	Cathode Volts	Pentode Screen Volts	Normal Plate M.A.
224	1st Det.	2.1	225	2.0	85	7	--	1
235	1st I.F.	2.1	225	3.3	79	5	--	14
235	2nd I.F.	2.1	225	3.3	75	5	--	13
227	Oscillator	2.15	75	0	--	0	--	5
227	2nd Det.	2.15	125	15.0	--	15	--	1
247	A. F.	2.15	210	1.0	--	--	200	3.5
280	Rect.	4.5	300	--	--	--	--	25-25

Line Volts 110. Volume Control on Full.

GENERAL MOTORS RADIO CORP.

MODEL 251
(S-2A,S-2B)
Schematic

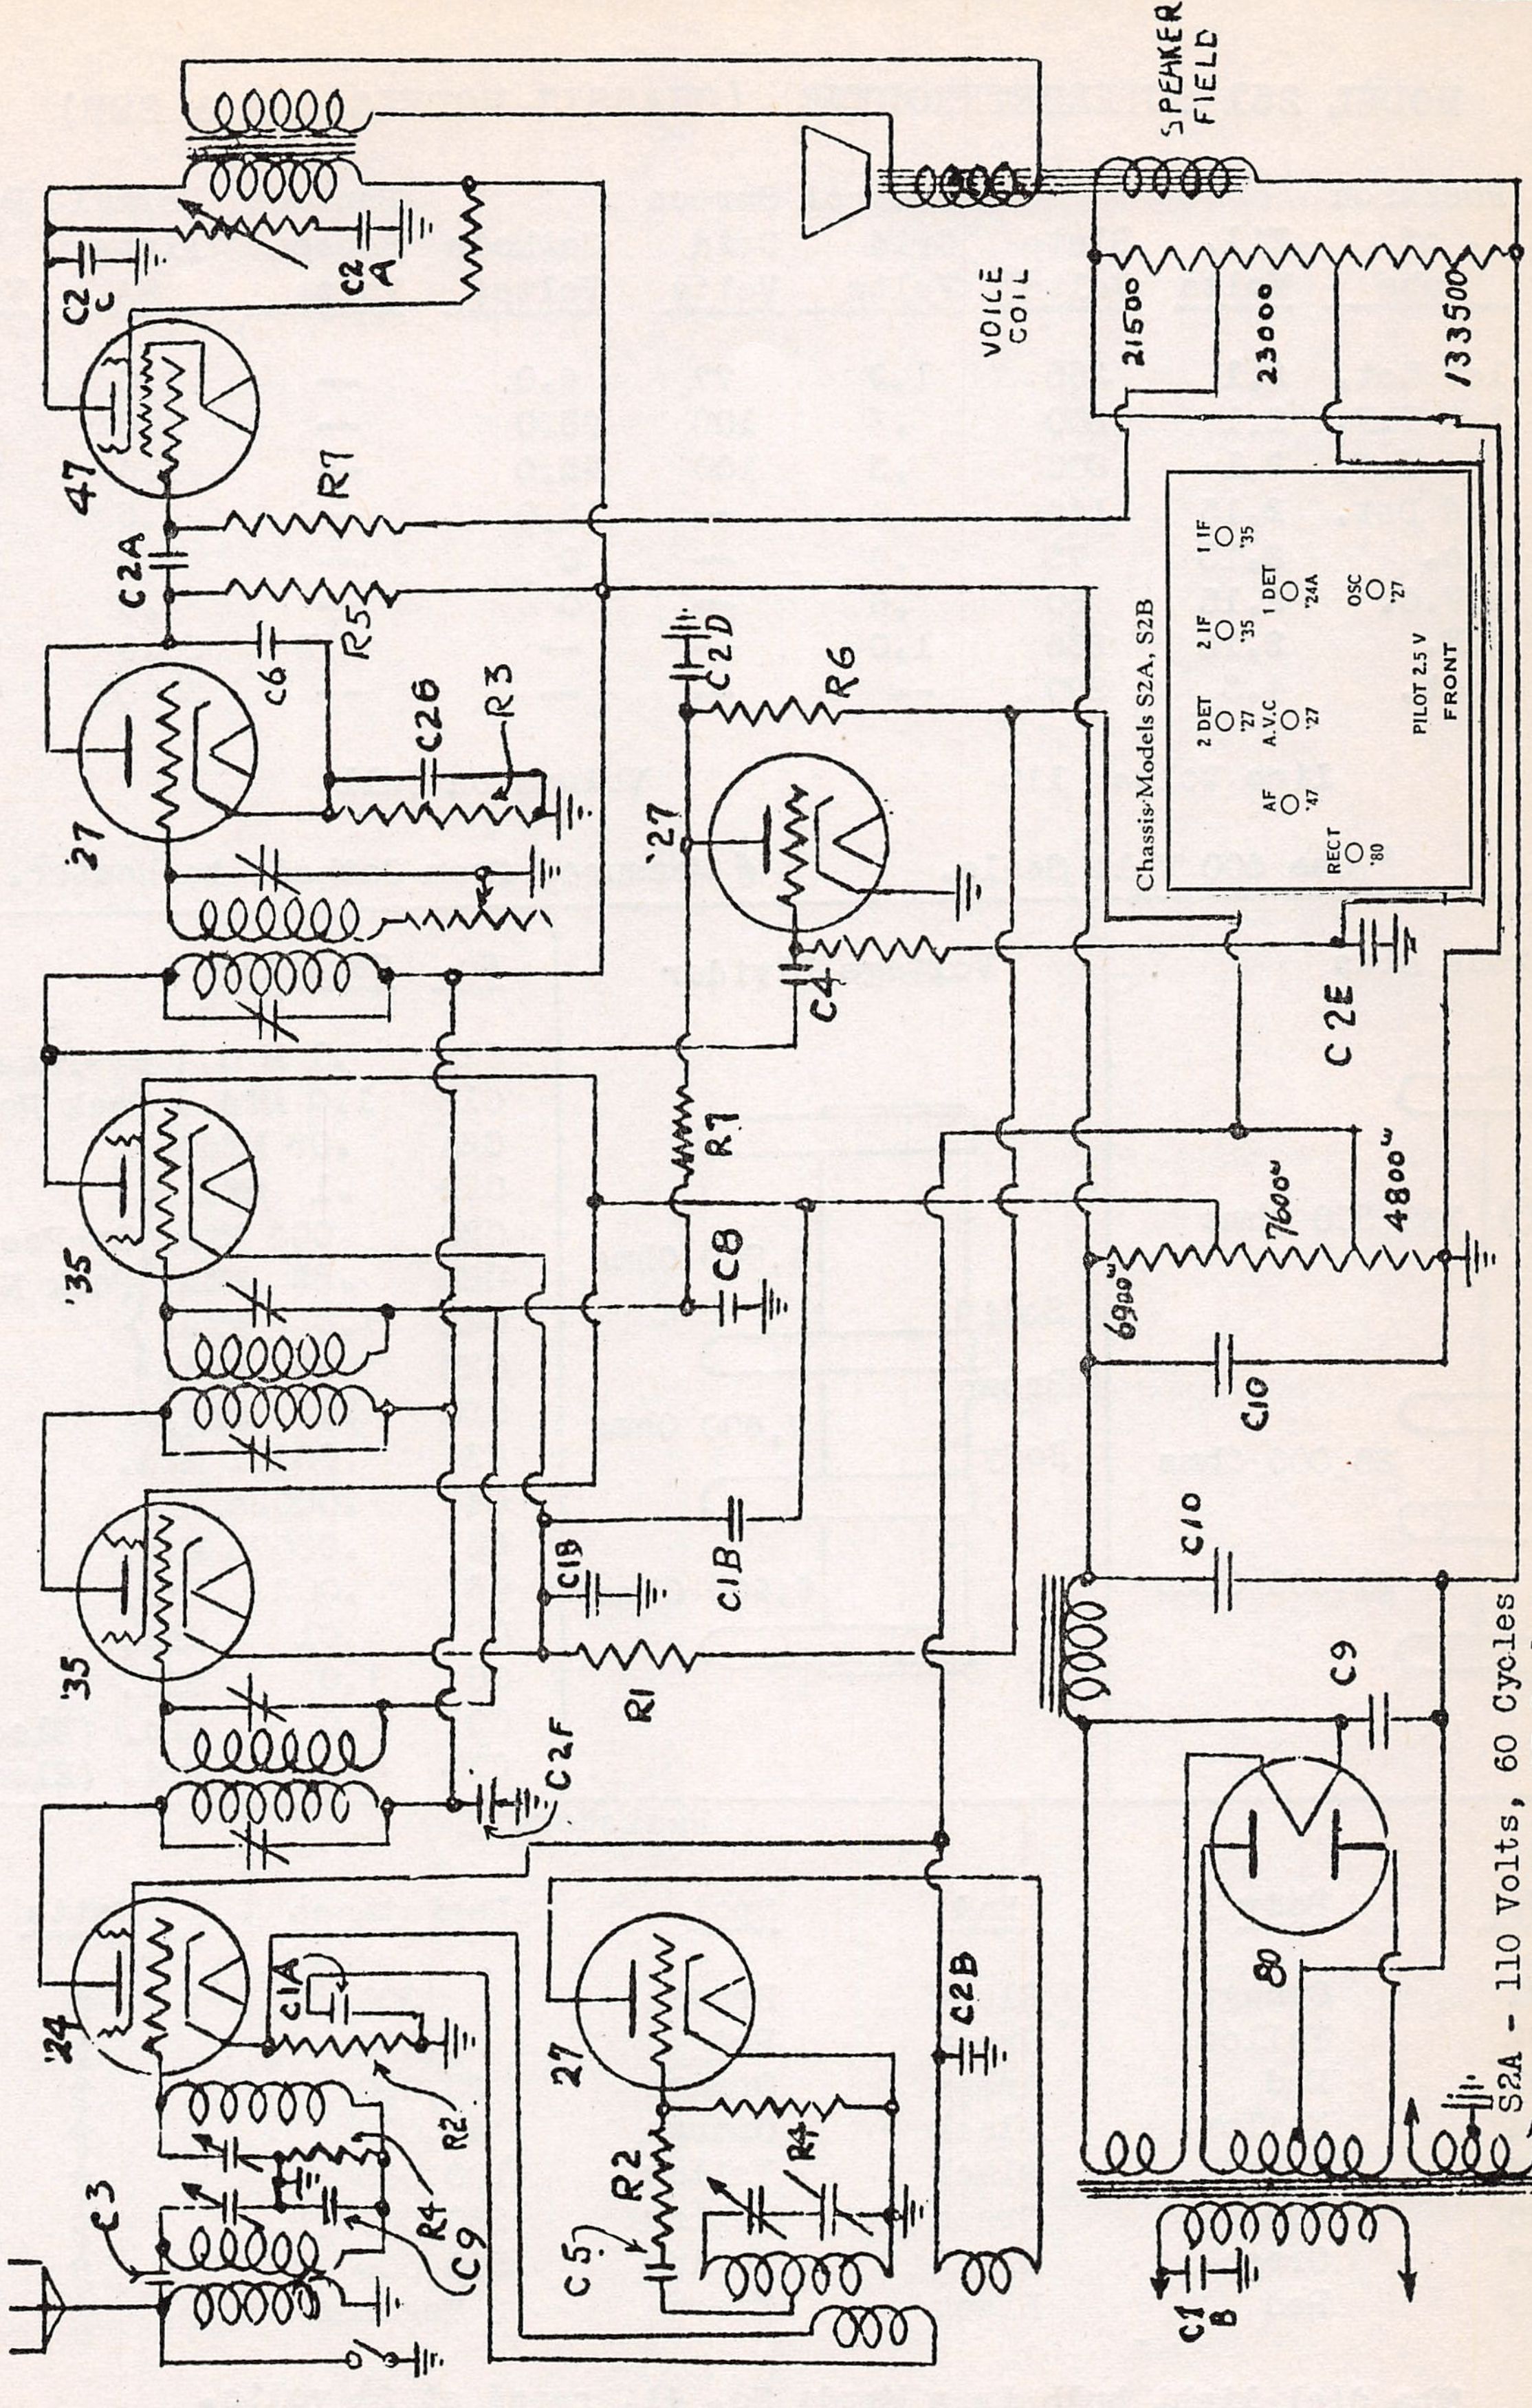
SPEAKER FIELD
VOICE COIL
C2 C
C2 A
47
R1
C2A
R5
C6
C26
R3
27
'35
35
'24
27
C2D
R6
'27
C4
R1
C8
C1B
C1B
R1
C2F
C2B
C1A
R2
R4
C9
C3
C5
R2
R4
21500
23000
133500
7600"
4800"
6900"
C 2E
C10
C10
C9
80
C1 B
Chassis-Models S2A, S2B
1 IF '35
2 IF '35
1 DET '24A
OSC '27
2 DET '27
A.V.C '27
AF '47
RECT '80
PILOT 2.5 V
FRONT

PEAK FREQUENCY - 175 KC

S2A - 110 Volts, 60 Cycles
S2B - 110 Volts, 25 Cycles

MODEL 251
(S-2A,S-2B)
Voltage-Data

GENERAL MOTORS RADIO CORP.

MODEL 251 SUPERHETERODYNE (CHASSIS MODELS S2A & S2B)

Type of Tube	Position of Tube	Fil. Volts	Plate Volts*	Control Grid Volts	Screen Grid Volts	Cathode Volts#	Pentode Screen Volts	Normal Plate MA	Rated Fil. Volts
224	1st Det.	2.1	255	1.9	77	6.0	--	1.0	2.20
235	1st I.F.	2.1	200	.3	100	95.0	--	1.6	2.20
235	2nd I.F.	2.1	200	.3	100	95.0	--	1.6	2.20
227	2nd Det.	2.15	145	.0	--	15.0	--	.5	2.25
227	Osc.	2.15	75	.0	--	0	--	7.0	2.25
227	A.V.C.	2.15	60	.0	--	0	--	.0	2.30
247	A.F.	2.15	235	1.0	--	--	215	30.0	2.30
280	Rect.	4.5	200	--	--	--	--	30-30	4.70

Line Volts 110 Volume on Full

* Use 600 Volt Scale. # Measured from Cathode to Heater.

Pentode Bias

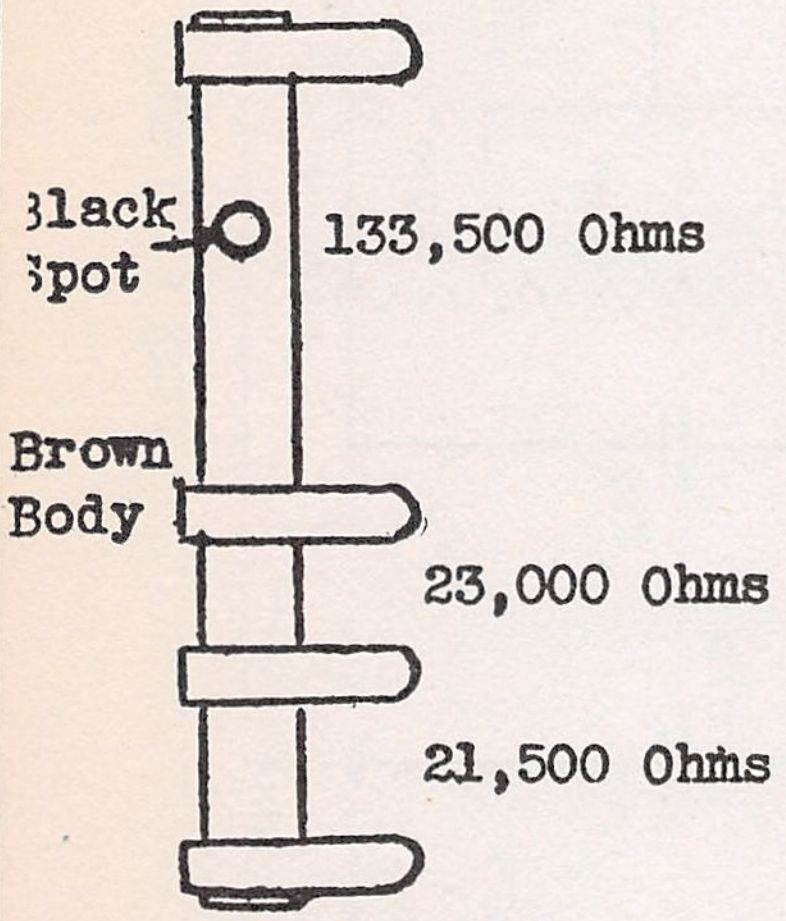

Voltage Divider

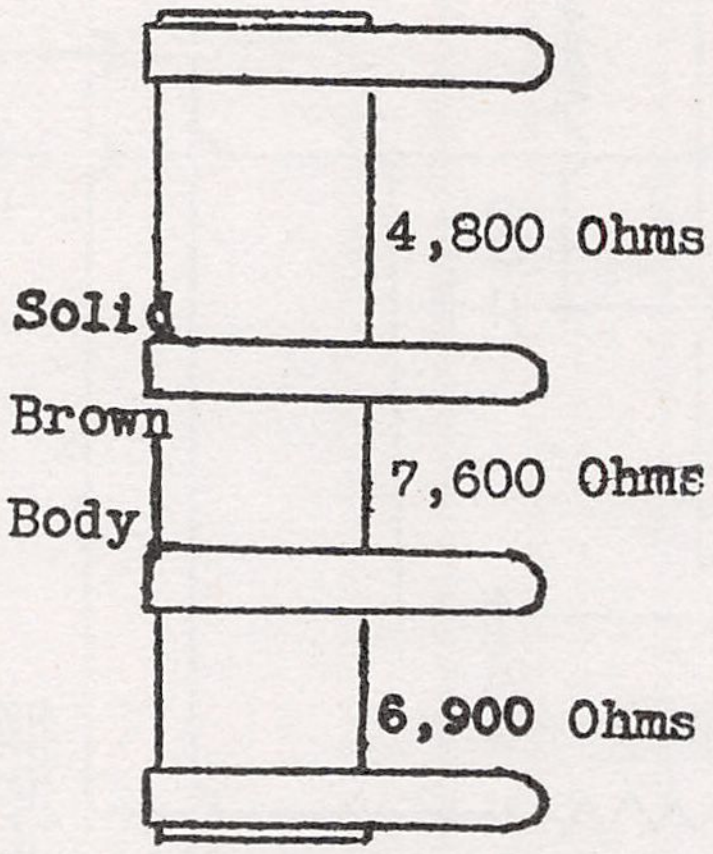

No.	Capacity	
C1A	.1 Mfd.	By-Pass Cond. Pack No. 1
C1B	1.0 Mfd.	
C2A	.03 Mfd.	By-Pass Cond. Pack No. 2
C2B	.1 Mfd.	
C2C	.006 Mfd.	
C2D	.25 Mfd.	
C2E	1.0 Mfd.	
C2F	.25 Mfd.	
C2G	.1 Mfd.	
C3	.00001 Mfd.	
C4	.00025 Mfd.	
C5	.00075 Mfd.	
C6	.002 Mfd.	
C7	.01 Mfd.	
C8	1.0 Mfd.	
C9	4.0 Mfd.	(Electrolyt
C10	8.0 Mfd.	(Electrolyt

Resistors

No.	Body	End	Spot	Resistance	Watts
R1	Orange	Black	Brown	300	½
R2	Yellow	Green	Red	4,500	½
R3	Red	Green	Orange	25,000	½
R4	Yellow	Black	Orange	40,000	½
R5	Brown	Black	Yellow	100,000	½
R6	Red	Green	Yellow	250,000	½
R7	Green	Black	Yellow	500,000	½
R8	Red	Black	Green	2 Megohms	½

The dial light bulb is a Mazda No. 41, rated at 2½ volts.

MODEL 252,253,254,
255,256,257,
258
(S-3A, S-3B)
Schematic

GENERAL MOTORS RADIO CORP.

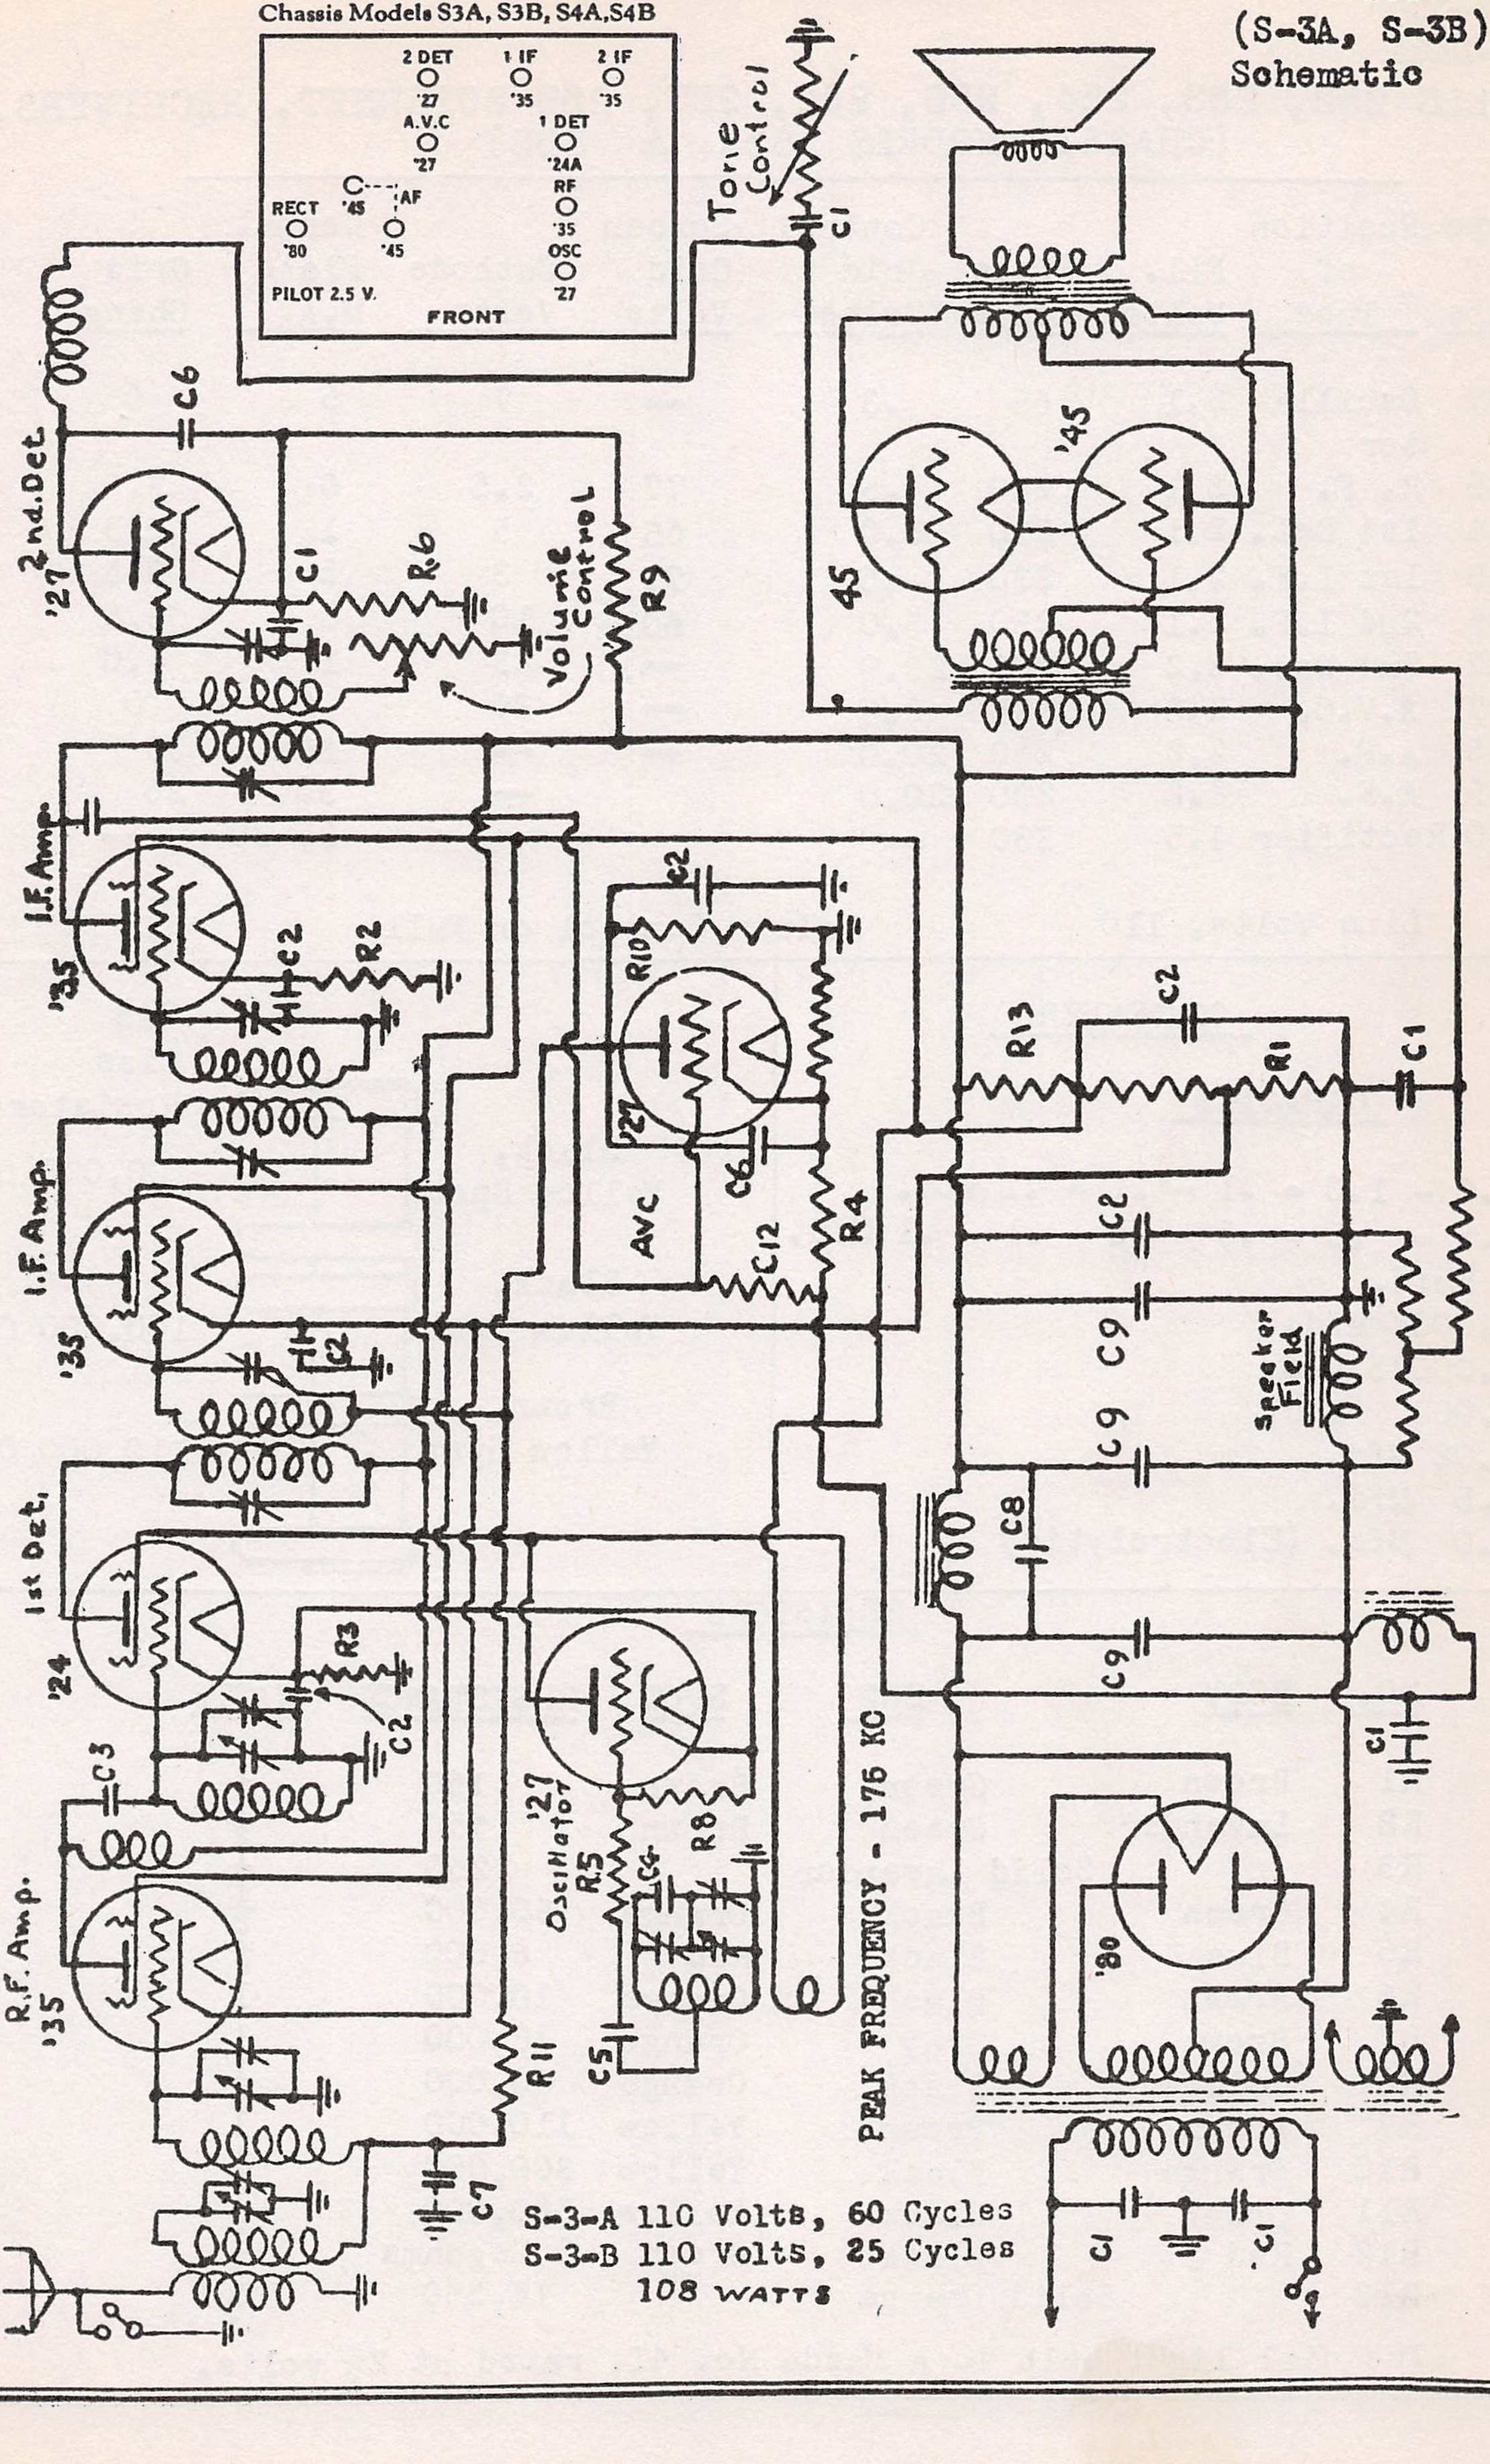
Chassis Models S3A, S3B, S4A, S4B
2 DET
'27
1 IF
'35
2 IF
'35
A.V.C
'27
1 DET
'24A
RF
'35
OSC
'27
RECT
'80
'45
AF
'45
PILOT 2.5 V.
FRONT
Tone Control
C1
C6
2nd. Det.
'27
C1
R6
Volume Control
R9
'45
45
I.F. Amp.
'35
C2
R2
C2
R10
'27
AVC
C6
C12
R4
R13
C2
R1
C1
I.F. Amp.
'35
C2
C9
C9
Speaker Field
C8
C9
1st Det.
'24
R3
C2
C3
'27 Oscillator
R5
C4
R8
C5
C1
R.F. Amp.
'35
R11
C7
'80
C1
C1
PEAK FREQUENCY - 175 KC

S-3-A 110 Volts, 60 Cycles
S-3-B 110 Volts, 25 Cycles
108 WATTS

MODEL 252,253,254,
255,256,257,
258
(S-3A, S-3B)
Voltage-Data

GENERAL MOTORS RADIO CORP.

MODELS 252, 253, 254, 255, 256, 257, 258 SUPERHET. RECEIVERS.
(CHASSIS MODELS S3A & S3B)

Type of Tube	Position of Tube	Fil. Volts	Plate Volts	Control Grid Volts	Screen Grid Volts	Cathode Volts	Normal Plate M.A.	Grid Change
227	Oscillator	2.1	65	.3	—	7	5	0
235	R. F.	2.1	230	.5	77	2.5	6	3.5
224	1st Det.	2.1	230	5.0	65	5	1	.3
235	1st I.F.	2.1	230	.5	77	3	5	3.5
235	2nd I.F.	2.1	230	5.0	60	10	8	3.5
237	2nd Det.	2.2	205	23.0	—	23	1	4.0
227	A.V.C.	2.2	25	2.5	—	30	0	0
245	A.F.	2.2	230	20.0	—	—	30	35
245	A.F.	2.2	230	20.0		—	30	35
280	Rectifier	4.5	330	—		—	30-30	—

Line Volts, 110 Volume Control on Full

CONDENSERS

No.	CAPACITY
C1	1.0 - 1.0 - .1 - .1 - .1 Mfd.
C2	.5 - .5 - .5 - .1 - .1 - .1 Mfd.
C3	5 Mmfd.
C4	.0007 Mfd.
C5	.00075 Mfd.
C6	.002 Mfd.
C7	.02 Mfd.
C8	.5 Mfd.
C9	8.0 Mfd. (Electrolytic)

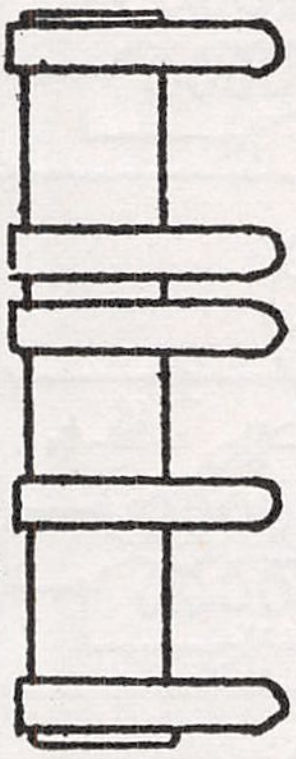

RESISTORS

NO.	BODY	END	SPOT	RESISTANCE	WATTS
R1	Brown	Green	Brown	150	½
R2	Lavender	Green	Brown	750	½
R3	Solid Lavender			1250	½
R4	Green	Black	Orange	50,000	½
R5	Blue	Black	Red	6,000	½
R6	Brown	Black	Orange	10,000	1
R7	Brown	Gray	Orange	18,000	1
R8	Yellow	Black	Orange	40,000	½
R9	Brown	Brown	Yellow	110,000	1
R10	Orange	Black	Yellow	300,000	½
R11	Green	Black	Yellow	500,000	½
R12	Red	Black	Green	2 Megohms	½
R13	Solid Orange			14,550	3

The dial light bulb is a Mazda No. 41, rated at 2½ volts.

MODEL 220
(S-10A,S-10B)
Schematic

GENERAL MOTORS RADIO CORP.

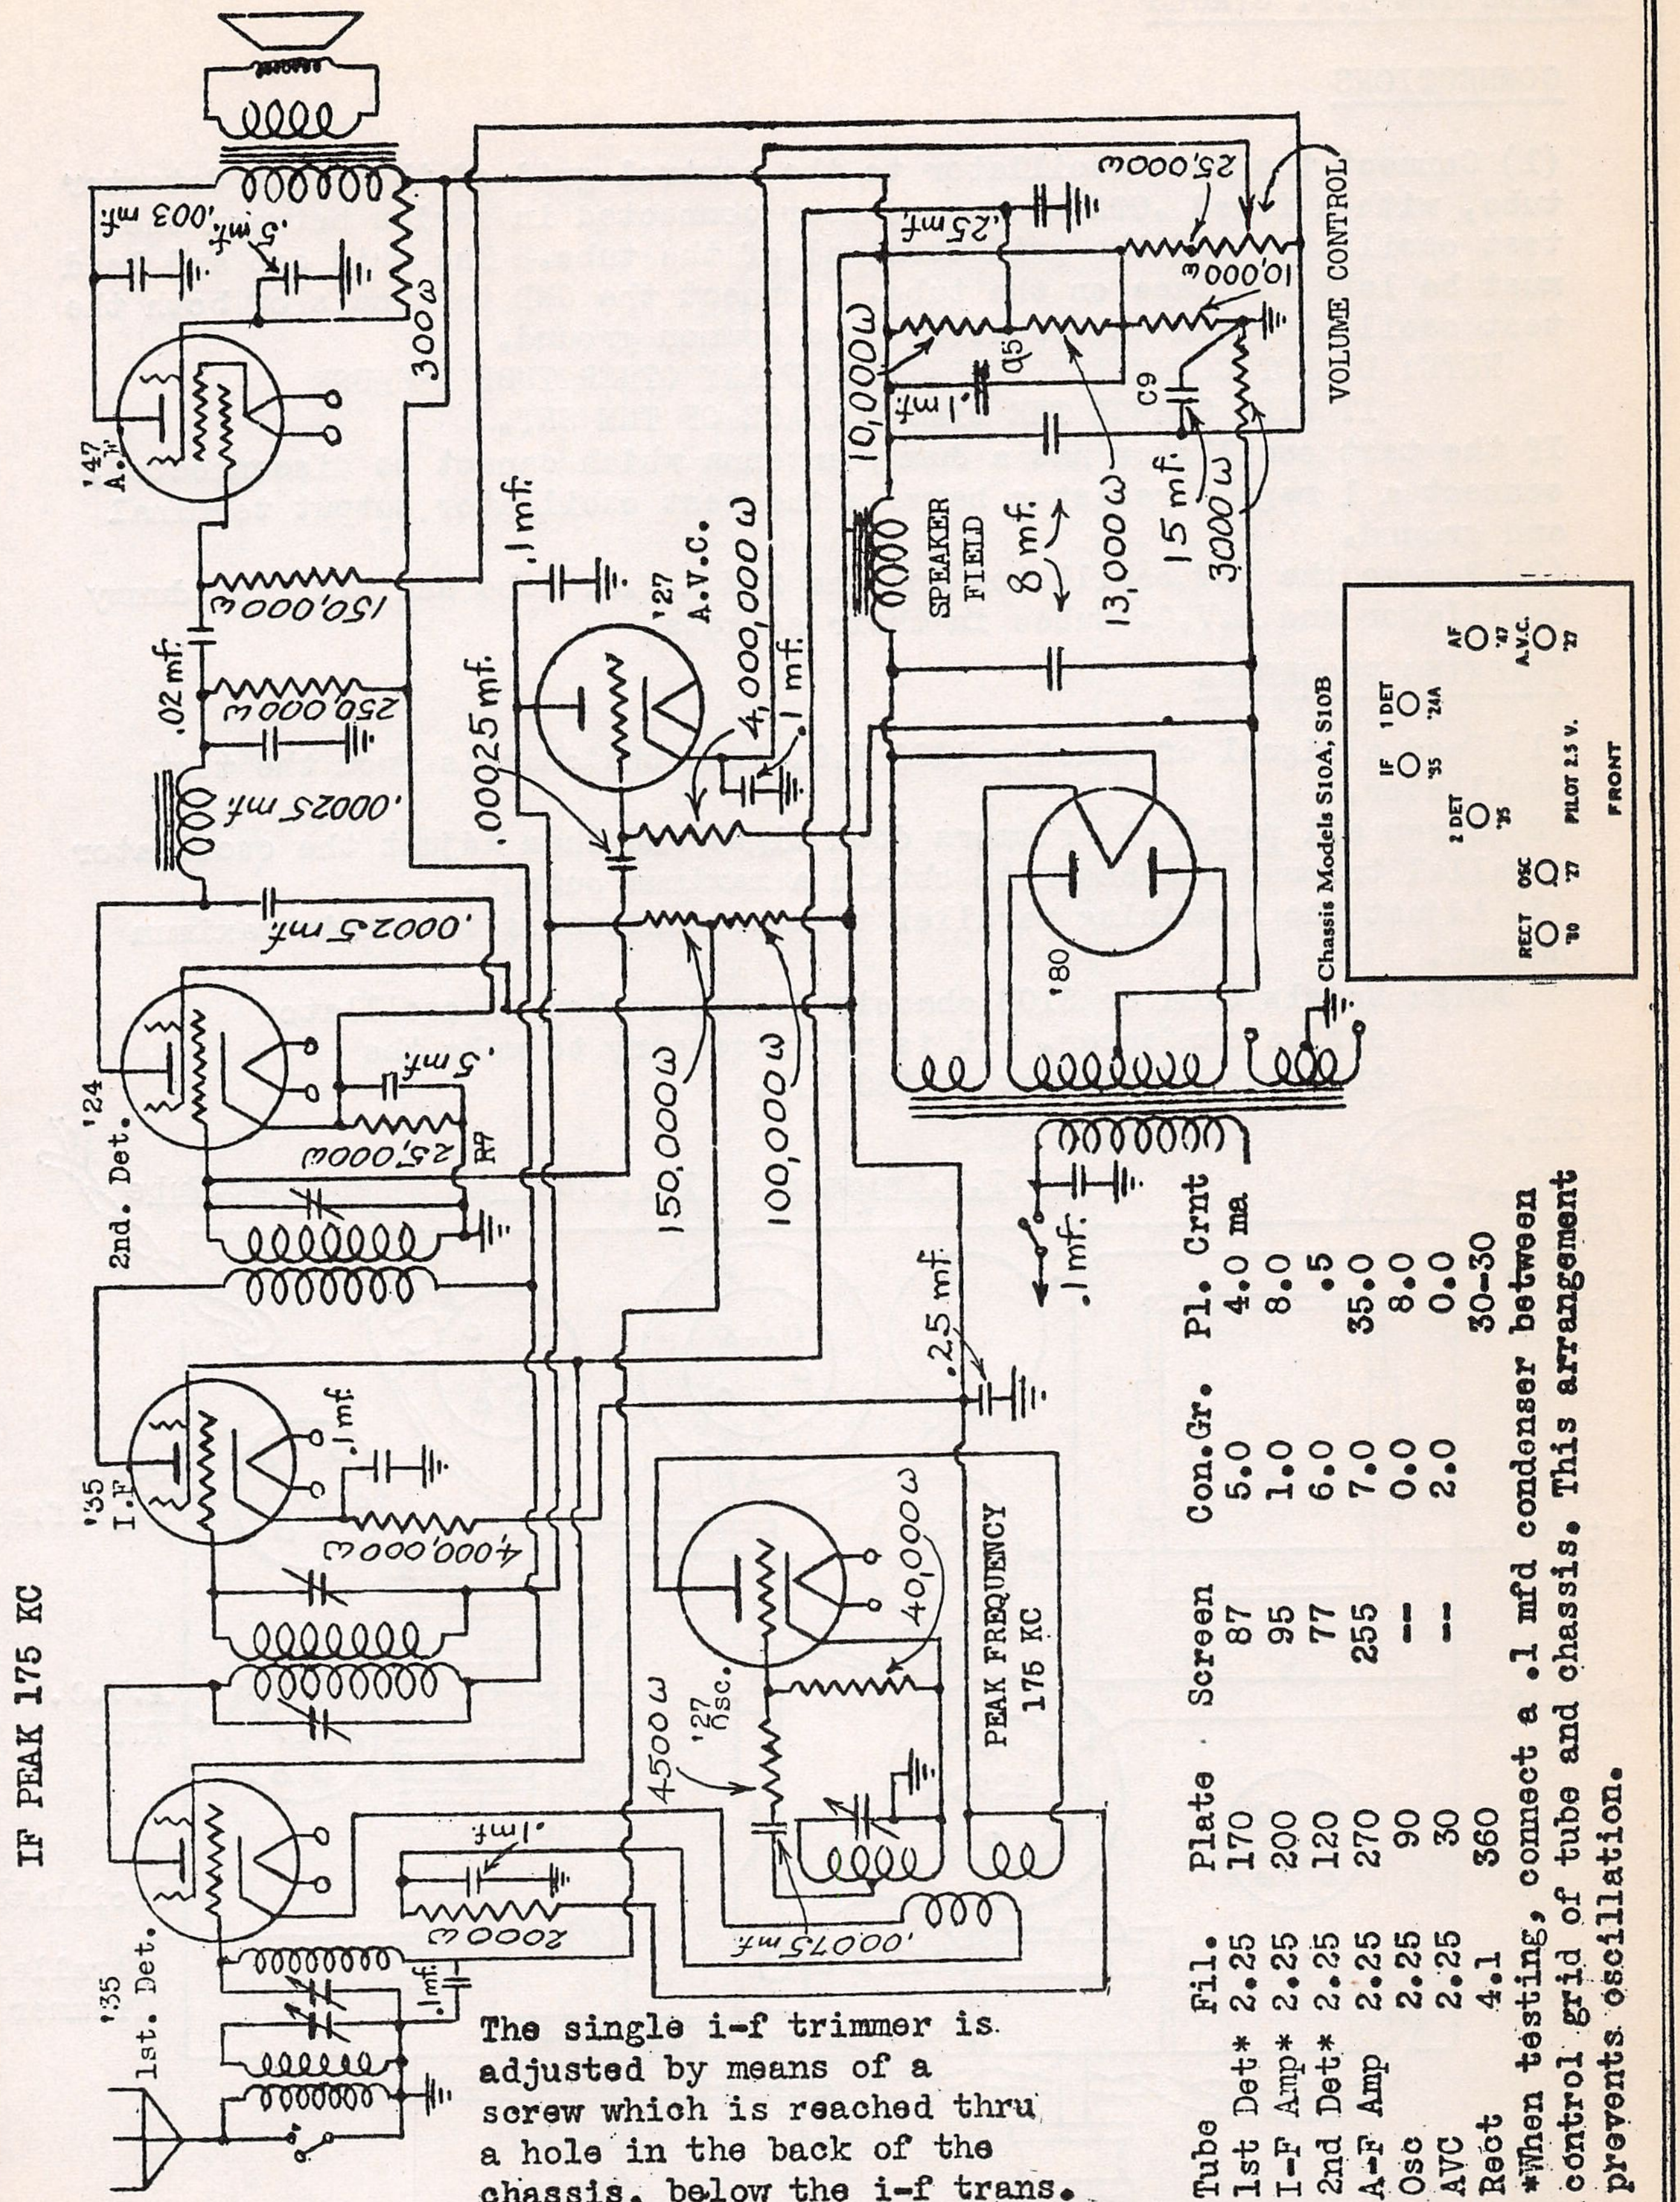

'47 A.F.
.003 mf
.5 mf
300 ω
150,000 ω
.02 mf
250,000 ω
.00025 mf
.00025 mf
'24 2nd. Det.
.5 mf
25,000 ω
.00025 mf
.1 mf
'27 A.V.C.
4,000,000 ω
.1 mf
150,000 ω
100,000 ω
'35 I.F.
.1 mf
4,000,000 ω
IF PEAK 175 KC
'35 1st. Det.
.1 mf
2000 ω
.1 mf
4500 ω
'27 Osc.
40,000 ω
.00075 mf
PEAK FREQUENCY 175 KC
.25 mf
.1 mf
25,000 ω
.25 mf
10,000 ω
10,000 ω
.1 mf
.05
C9
VOLUME CONTROL
SPEAKER FIELD
8 mf
13,000 ω
15 mf
3000 ω
'80
Chassis Models S10A, S10B
RECT '80
OSC '27
1 DET '35
IF '35
1 DET '24A
AF '47
A.V.C. '27
PILOT 2.5 V.
FRONT

The single i-f trimmer is adjusted by means of a screw which is reached thru a hole in the back of the chassis, below the i-f trans.

Tube	Fil.	Plate	Screen	Con.Gr.	Pl. Crnt
1st Det*	2.25	170	87	5.0	4.0 ma
I-F Amp*	2.25	200	95	1.0	8.0
2nd Det*	2.25	120	77	6.0	.5
A-F Amp	2.25	270	255	7.0	35.0
Osc	2.25	90	--	0.0	8.0
AVC	2.25	30	--	2.0	0.0
Rect	4.1	360			30-30

*When testing, connect a .1 mfd condenser between control grid of tube and chassis. This arrangement prevents oscillation.

MODEL 220
(S-10A,S-10B)
Trimmer Notes

GENERAL MOTORS RADIO CORP.

PEAKING THE I.F. STAGES

CONNECTIONS

(1) Connect the test oscillator to the control grid of the first detector tube, with a fixed .002 Mfd. condenser connected in series between the test oscillator and the grid terminal of the tube. The grid cap and lead must be left in place on the tube. Connect the GND terminals of both the test oscillator and the receiver to a common ground.

NOTE: DO NOT CONNECT TO THE GRID OF ANY OTHER TUBE BECAUSE IT WILL CHANGE THE BIAS VOLTAGE OF THE SET.

If the test oscillator has a dummy antenna which cannot be disconnected, connect a 1 megohm resistor between the test oscillator output terminal and ground.

(2) Remove the 227 oscillator and the 227 A.V.C. tube and plug the dummy oscillator and A.V.C. tubes in their sockets.

TRACKING PROCEDURE

(1) Feed a signal of exactly 1400 K.C. into the chassis from the test oscillator.

(2) Screw all parallel trimmers down tight and then adjust the oscillator parallel trimmer condenser to obtain a maximum output.

(3) Adjust the remaining parallel trimmer condensers to obtain maximum output.

NOTE: Models S10A or S10B chassis do not employ an oscillator series condenser. It is not necessary to make the tracking adjustment at 580 K.C.

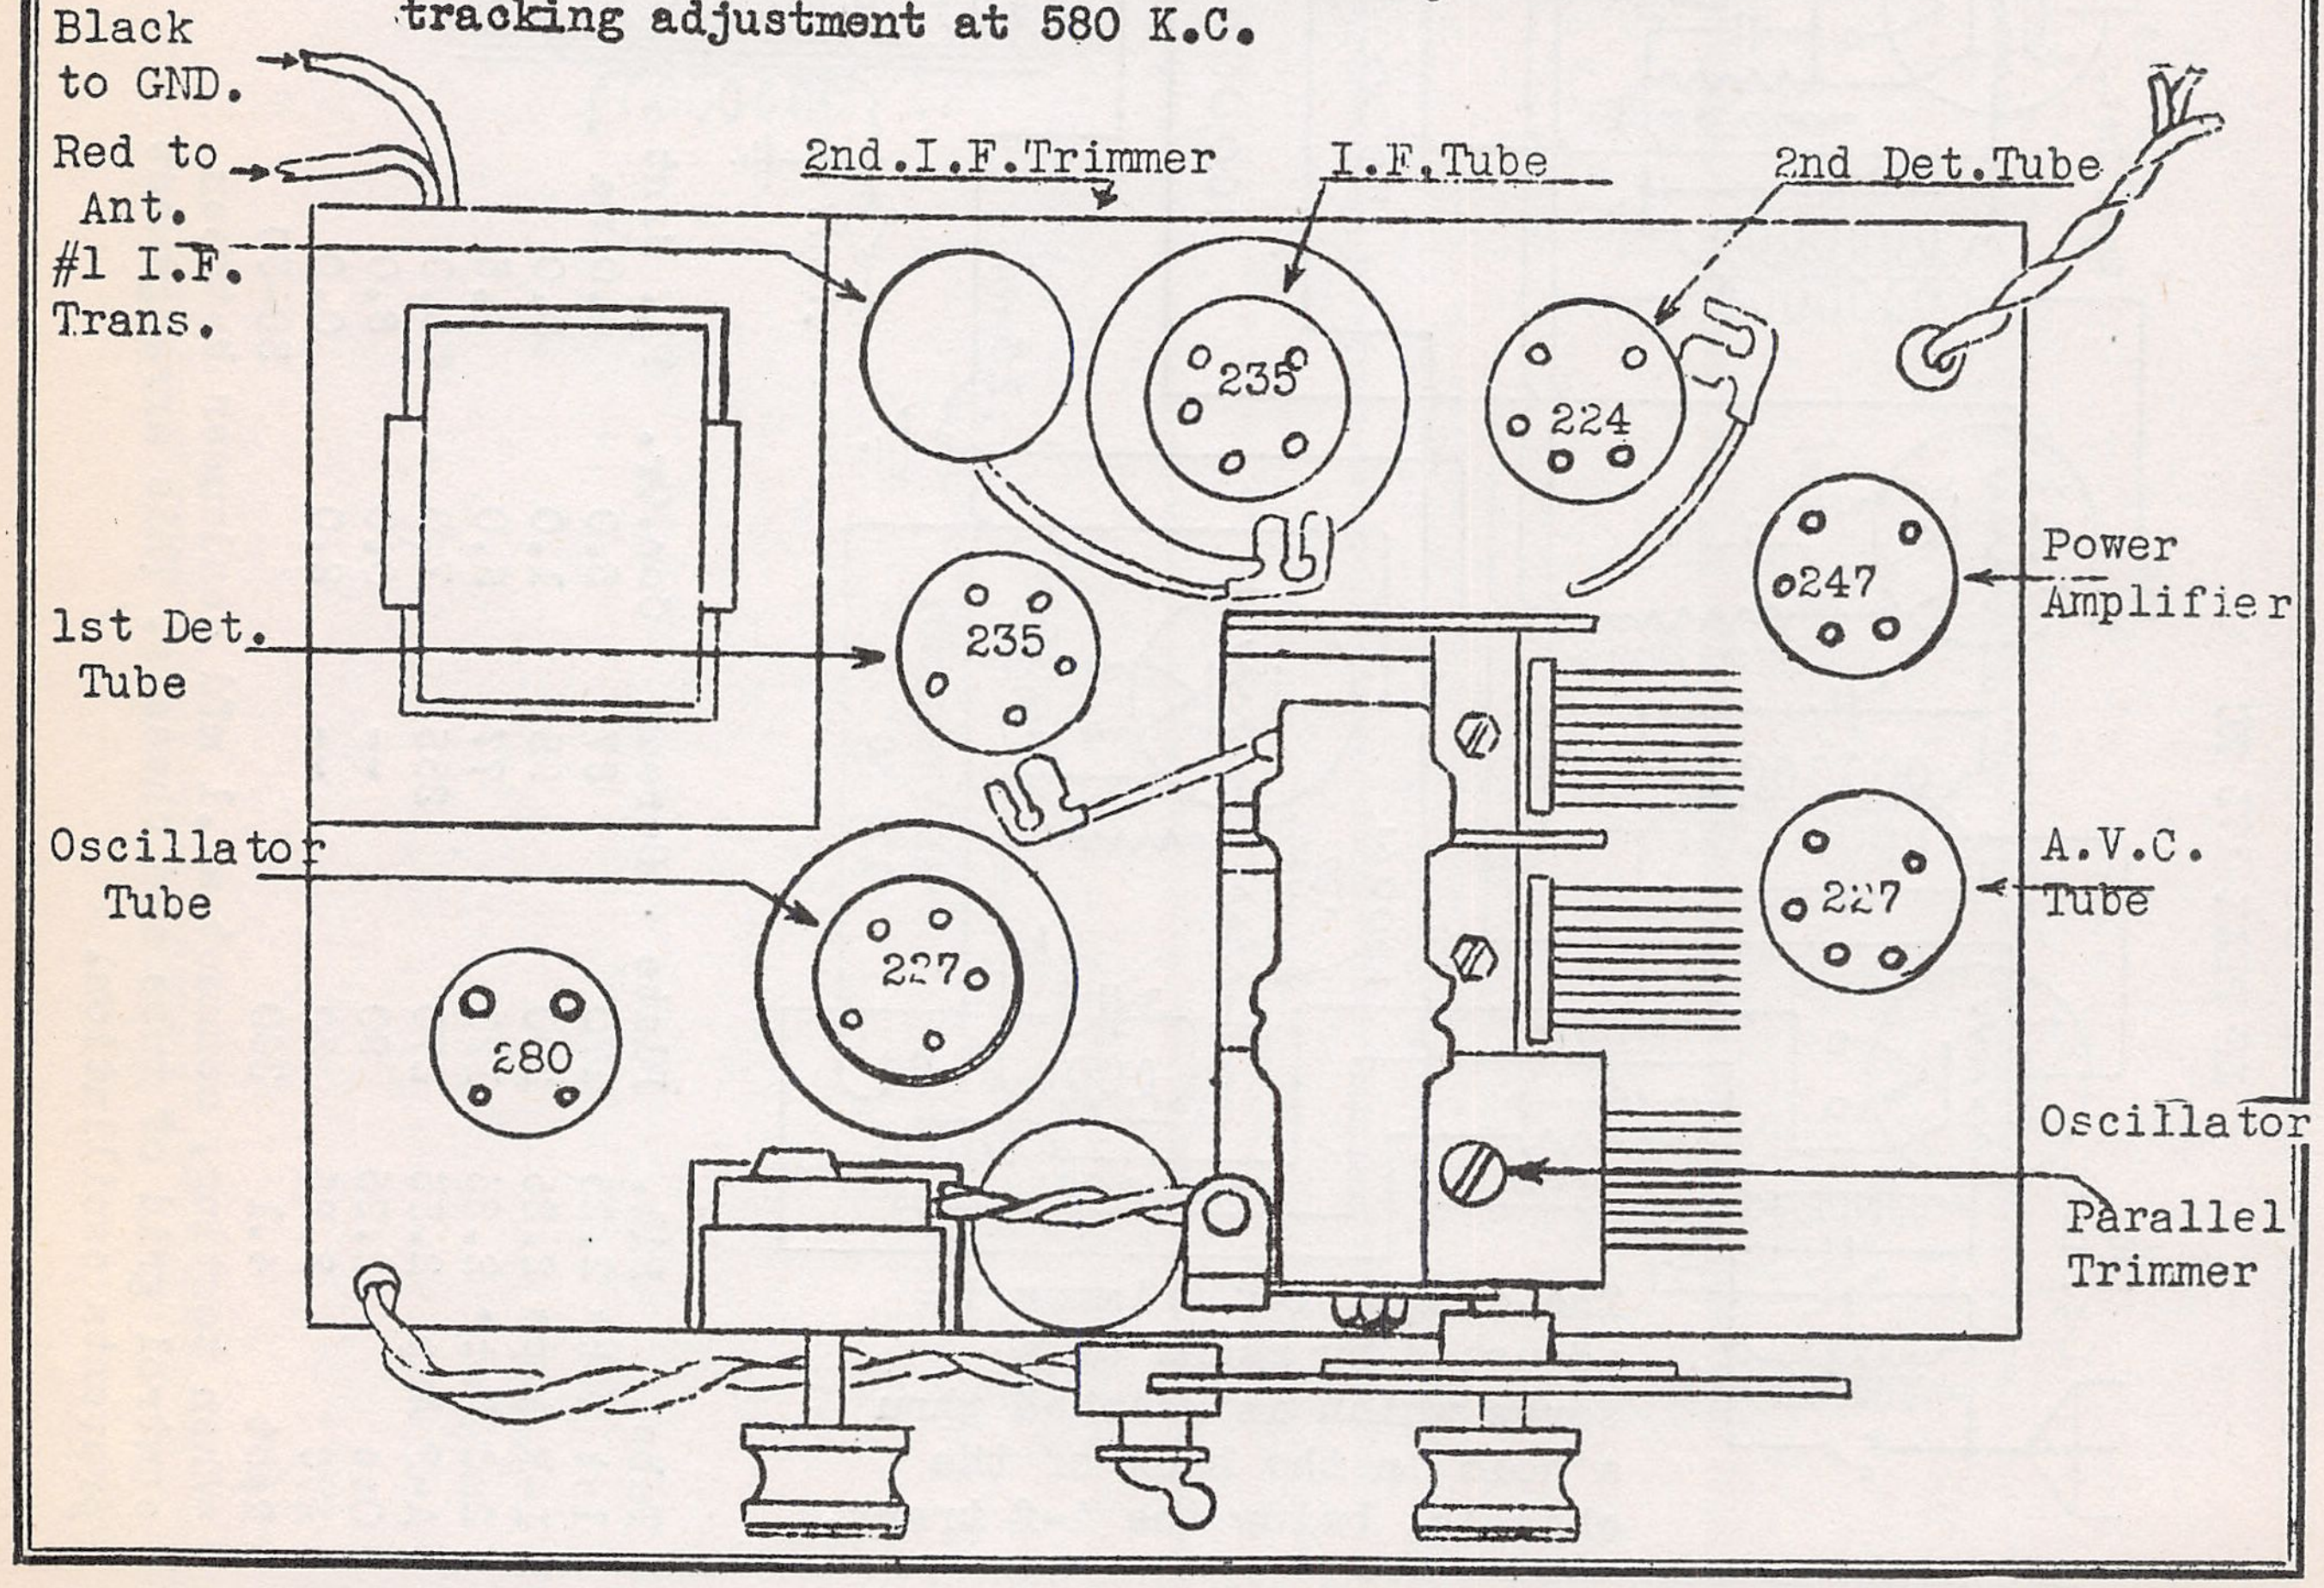
Black to GND.
Red to Ant.
#1 I.F. Trans.
2nd.I.F.Trimmer
I.F.Tube
2nd Det.Tube
235
224
247
Power Amplifier
1st Det. Tube
235
Oscillator Tube
227
280
A.V.C. Tube
227
Oscillator Parallel Trimmer

MODEL 70-B
Chassis

GRIGSBY GRUNOW CO.

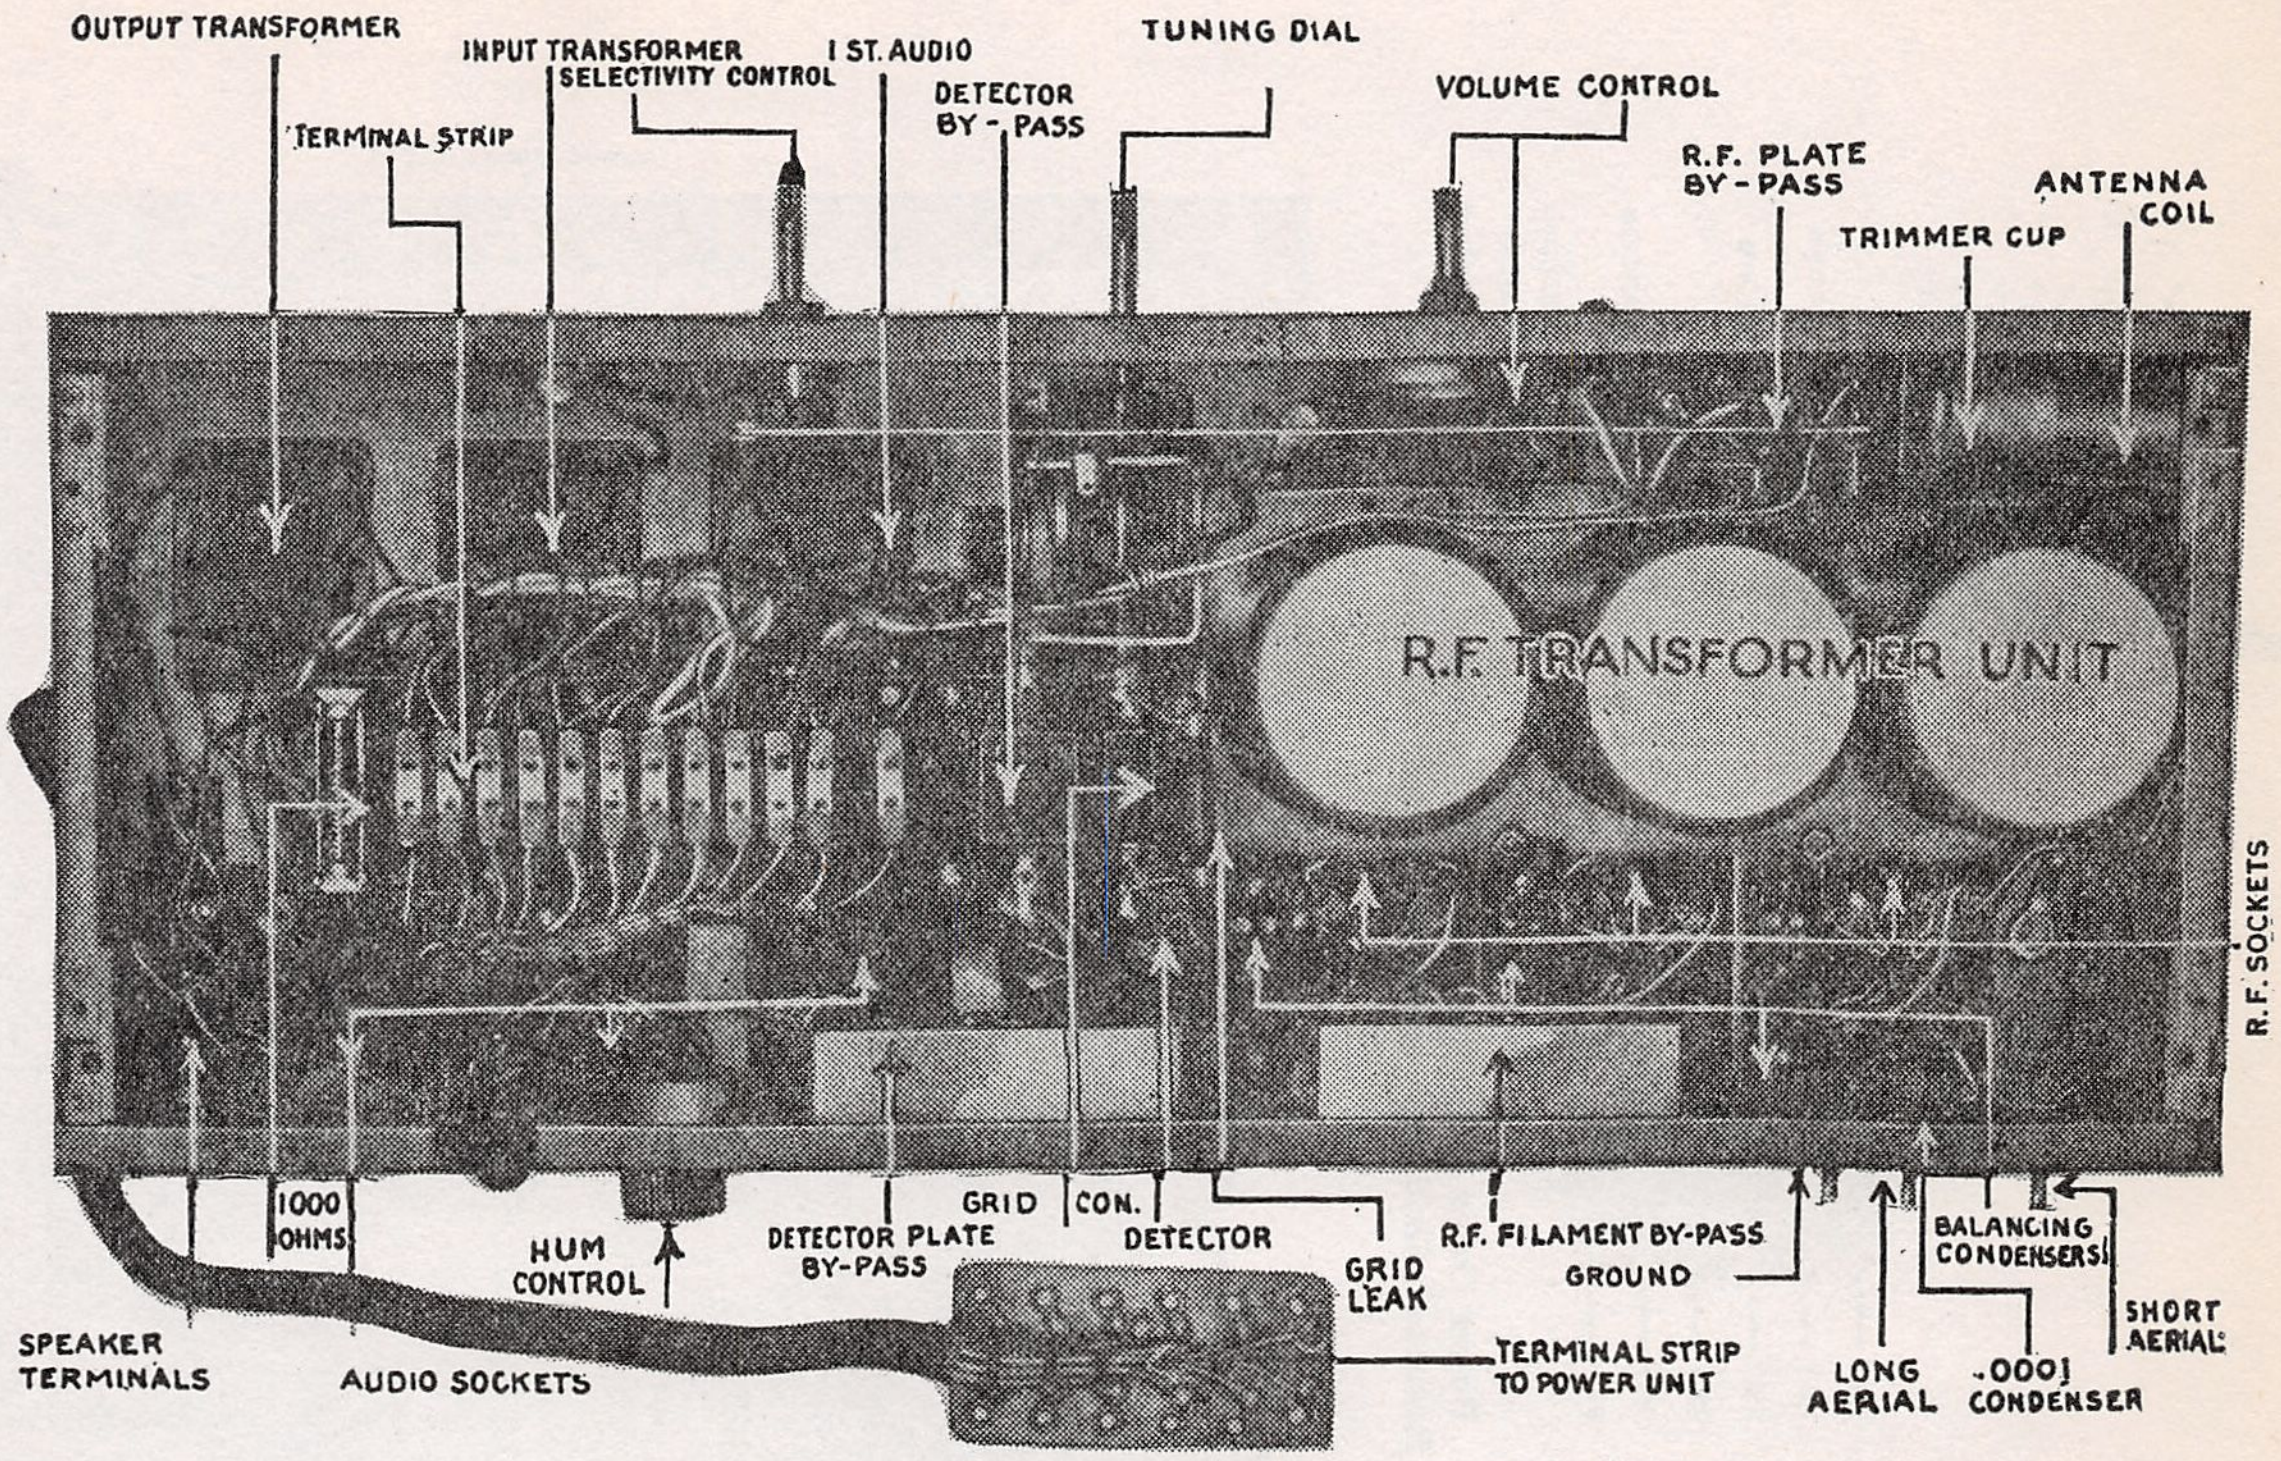
OUTPUT TRANSFORMER
TERMINAL STRIP
INPUT TRANSFORMER
SELECTIVITY CONTROL
1 ST. AUDIO
DETECTOR BY-PASS
TUNING DIAL
VOLUME CONTROL
R.F. PLATE BY-PASS
TRIMMER CUP
ANTENNA COIL
R.F. TRANSFORMER UNIT
R.F. SOCKETS
1000 OHMS
HUM CONTROL
DETECTOR PLATE BY-PASS
GRID CON.
DETECTOR
GRID LEAK
R.F. FILAMENT BY-PASS
GROUND
BALANCING CONDENSERS
SHORT AERIAL
LONG AERIAL
.0001 CONDENSER
SPEAKER TERMINALS
AUDIO SOCKETS
TERMINAL STRIP TO POWER UNIT

Model 70-B Chassis

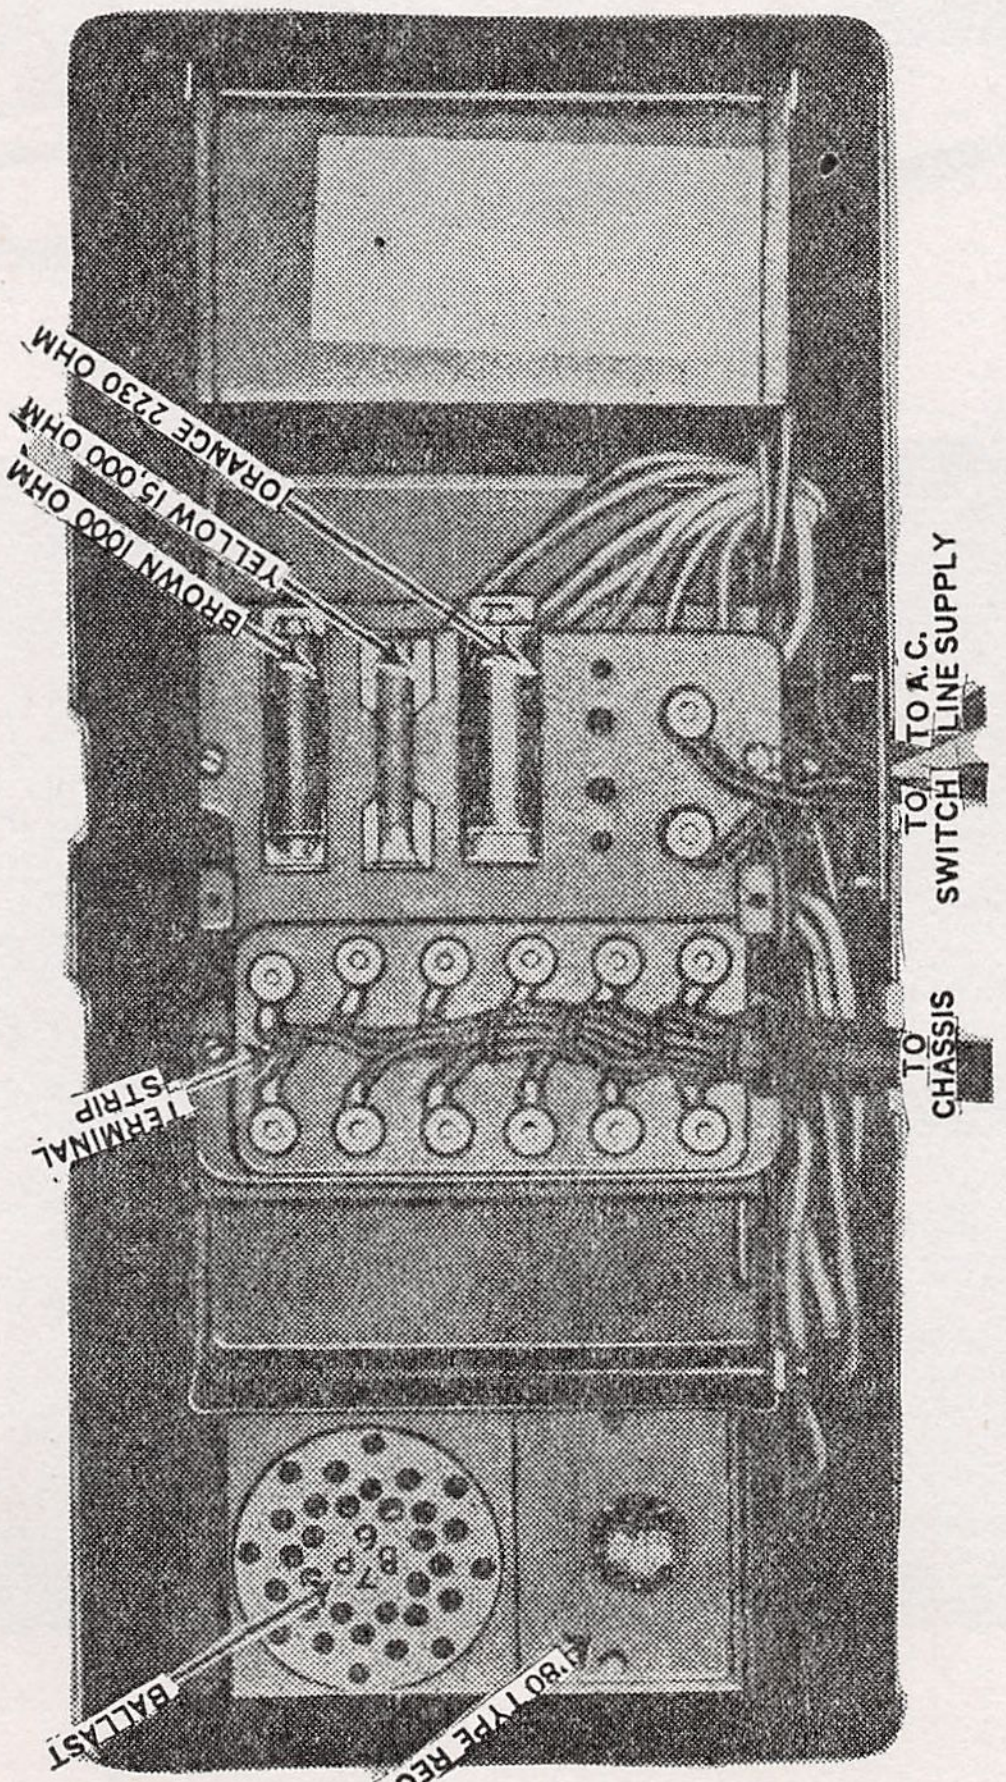
ORANGE 2230 OHM
YELLOW 15,000 OHM
BROWN 1000 OHM
TO A.C. LINE
TO SWITCH
SUPPLY
TO CHASSIS
TERMINAL STRIP
BALLAST
#80 TYPE RECT.
7BP6

7-BP-6—7-BP-3 Power Unit

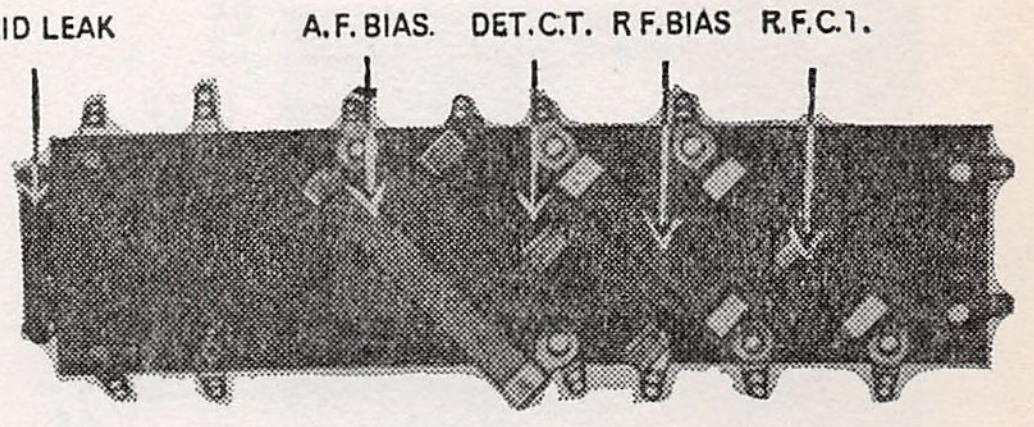
GRID LEAK
A.F. BIAS.
DET. C.T.
R.F. BIAS
R.F.C.1.

Bottom View of Terminal Board in 70-B Chassis, Showing Resistors Employed

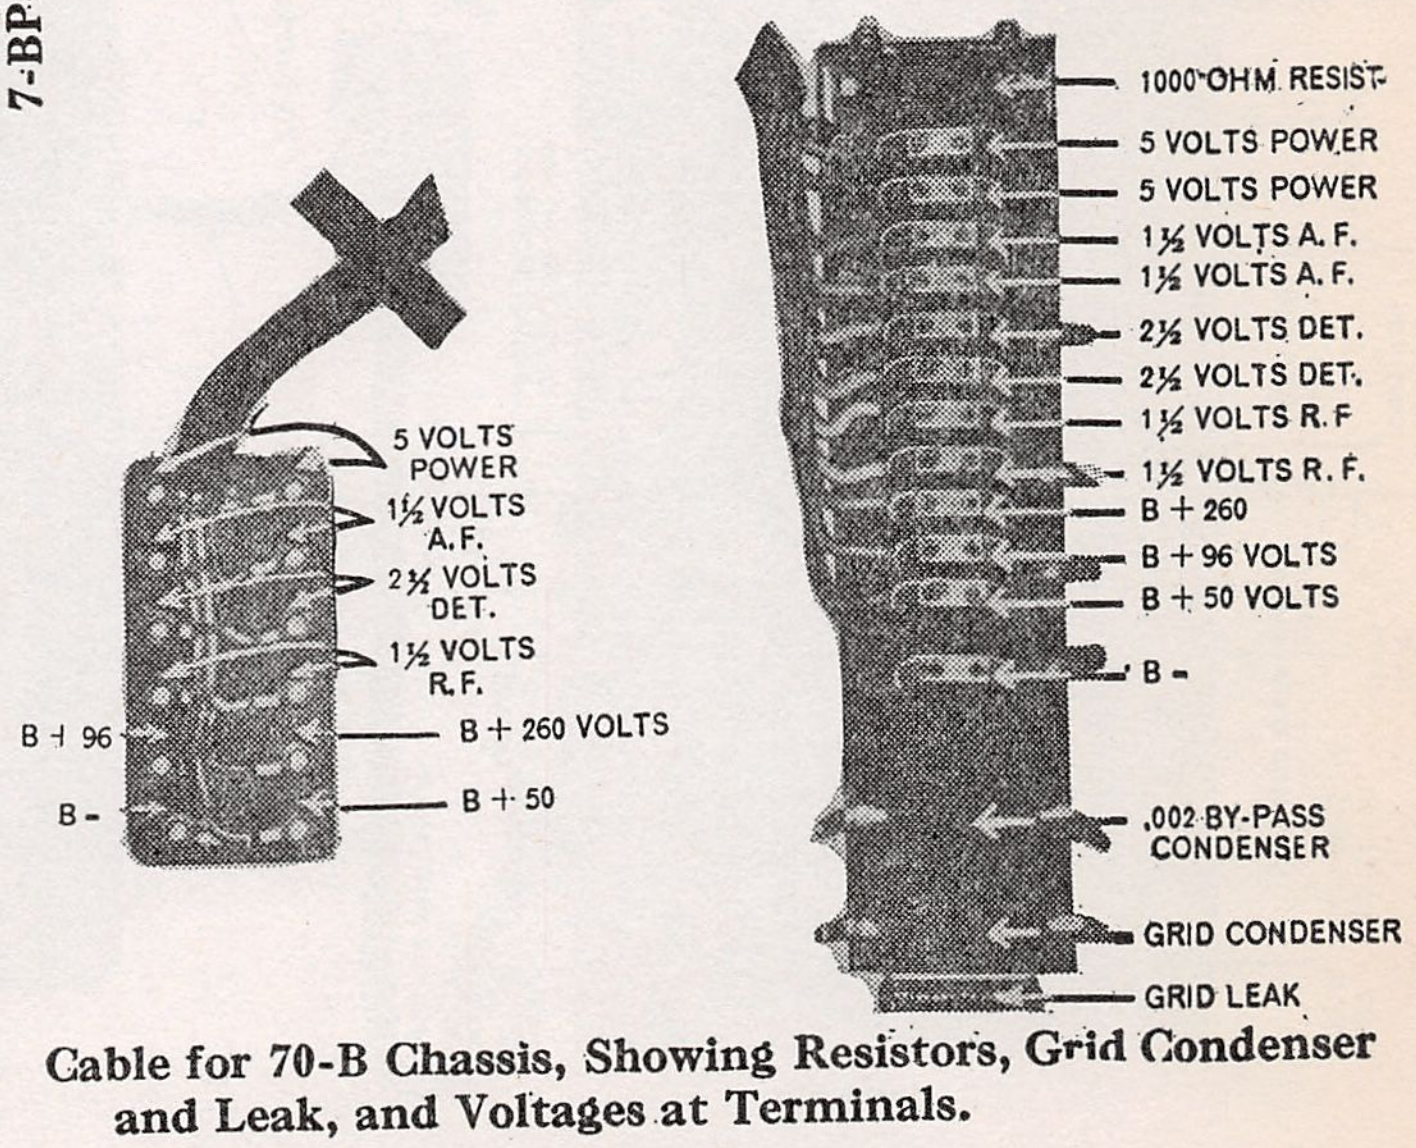
5 VOLTS POWER
1½ VOLTS A.F.
2½ VOLTS DET.
1½ VOLTS R.F.
B + 96
B + 260 VOLTS
B -
B + 50
1000 OHM RESIST.
5 VOLTS POWER
5 VOLTS POWER
1½ VOLTS A. F.
1½ VOLTS A. F.
2½ VOLTS DET.
2½ VOLTS DET.
1½ VOLTS R. F
1½ VOLTS R. F.
B + 260
B + 96 VOLTS
B + 50 VOLTS
B -
.002 BY-PASS CONDENSER
GRID CONDENSER
GRID LEAK

Cable for 70-B Chassis, Showing Resistors, Grid Condenser and Leak, and Voltages at Terminals.

MODEL 180
Chassis

GRIGSBY - GRUNOW CO.

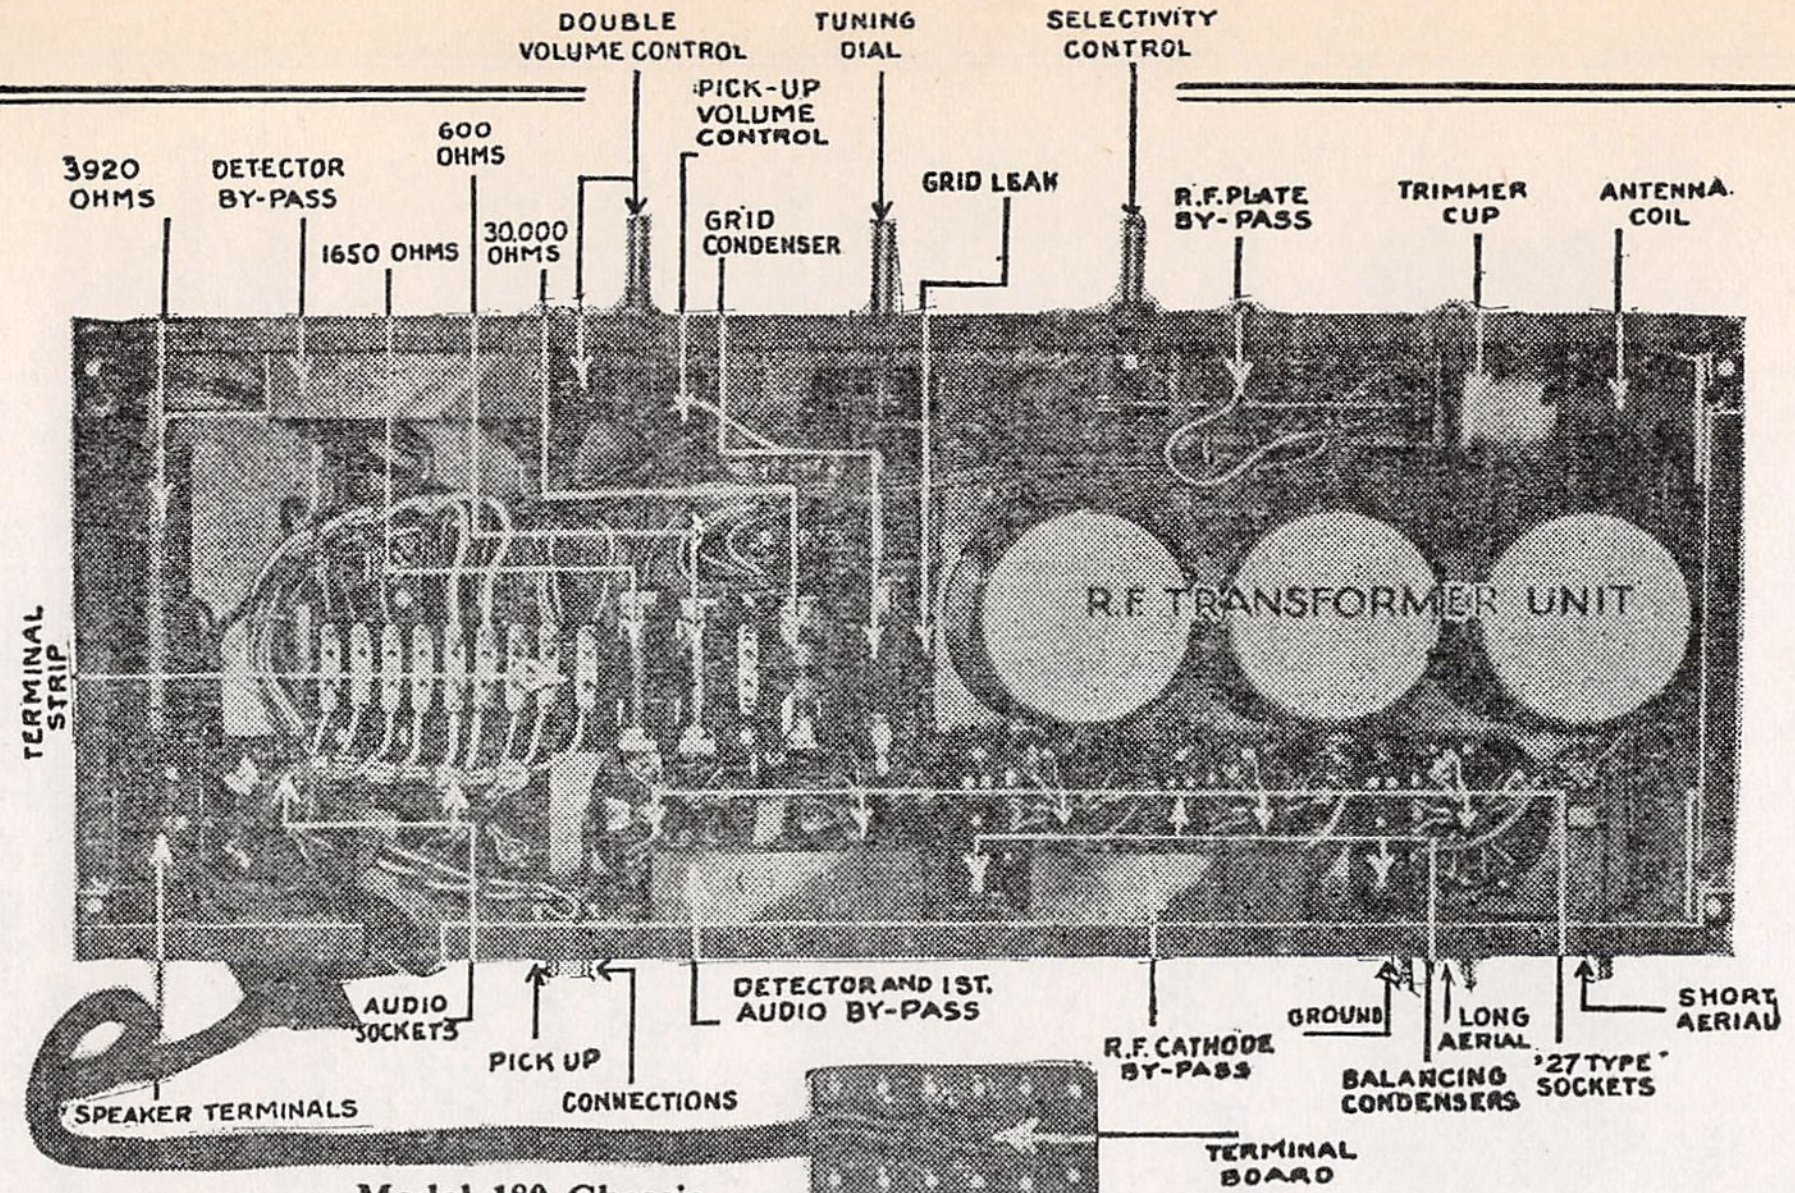
DOUBLE VOLUME CONTROL
TUNING DIAL
SELECTIVITY CONTROL
PICK-UP VOLUME CONTROL
3920 OHMS
DETECTOR BY-PASS
600 OHMS
1650 OHMS
30,000 OHMS
GRID CONDENSER
GRID LEAK
R.F. PLATE BY-PASS
TRIMMER CUP
ANTENNA COIL
R.F. TRANSFORMER UNIT
TERMINAL STRIP
AUDIO SOCKETS
PICK UP
CONNECTIONS
DETECTOR AND 1ST. AUDIO BY-PASS
R.F. CATHODE BY-PASS
GROUND
LONG AERIAL
BALANCING CONDENSERS
'27 TYPE' SOCKETS
SHORT AERIAL
SPEAKER TERMINALS
TERMINAL BOARD

Model 180 Chassis

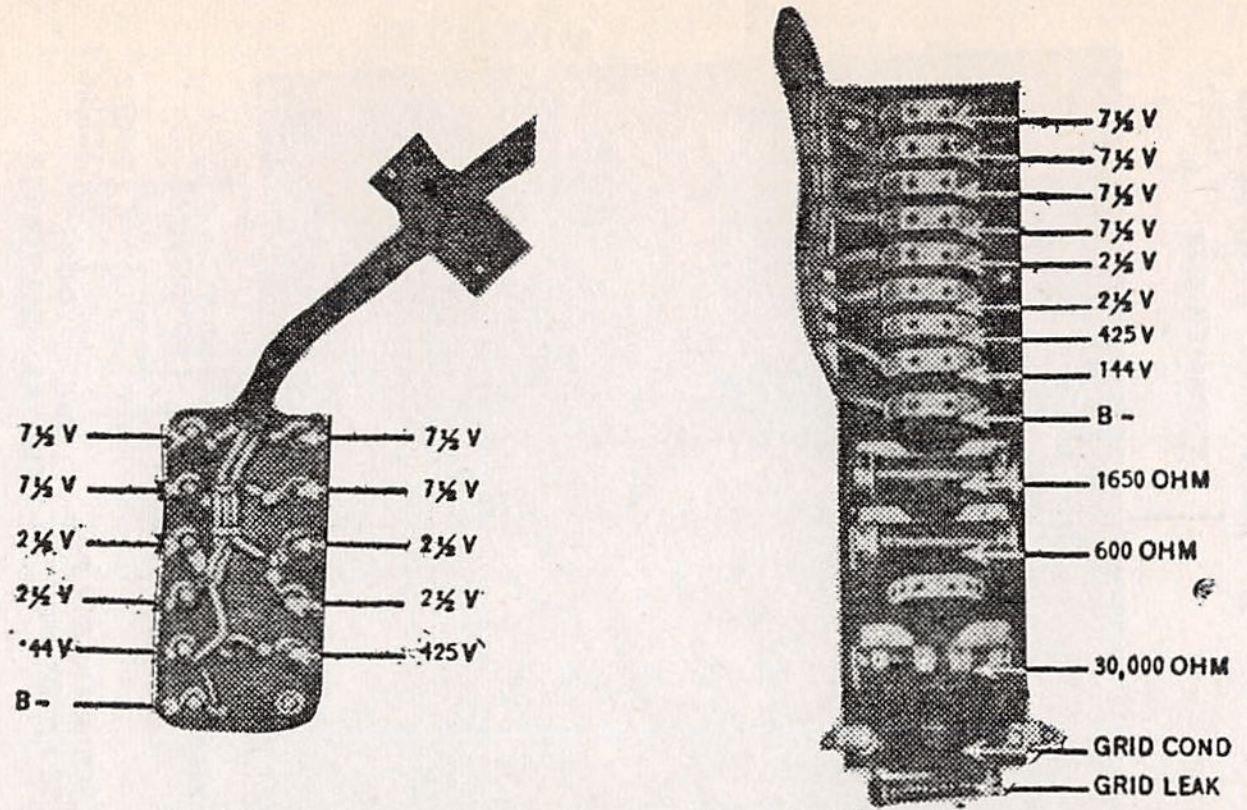
7½ V
7½ V
2½ V
2½ V
144 V
B –
7½ V
7½ V
2½ V
2½ V
425 V
7½ V
7½ V
7½ V
7½ V
2½ V
2½ V
425 V
144 V
B –
1650 OHM
600 OHM
30,000 OHM
GRID COND
GRID LEAK

Power Cable and Terminal Board of Model 180 Chassis, Showing Resistors, Grid Leak and Condenser, and Voltages Supplied.

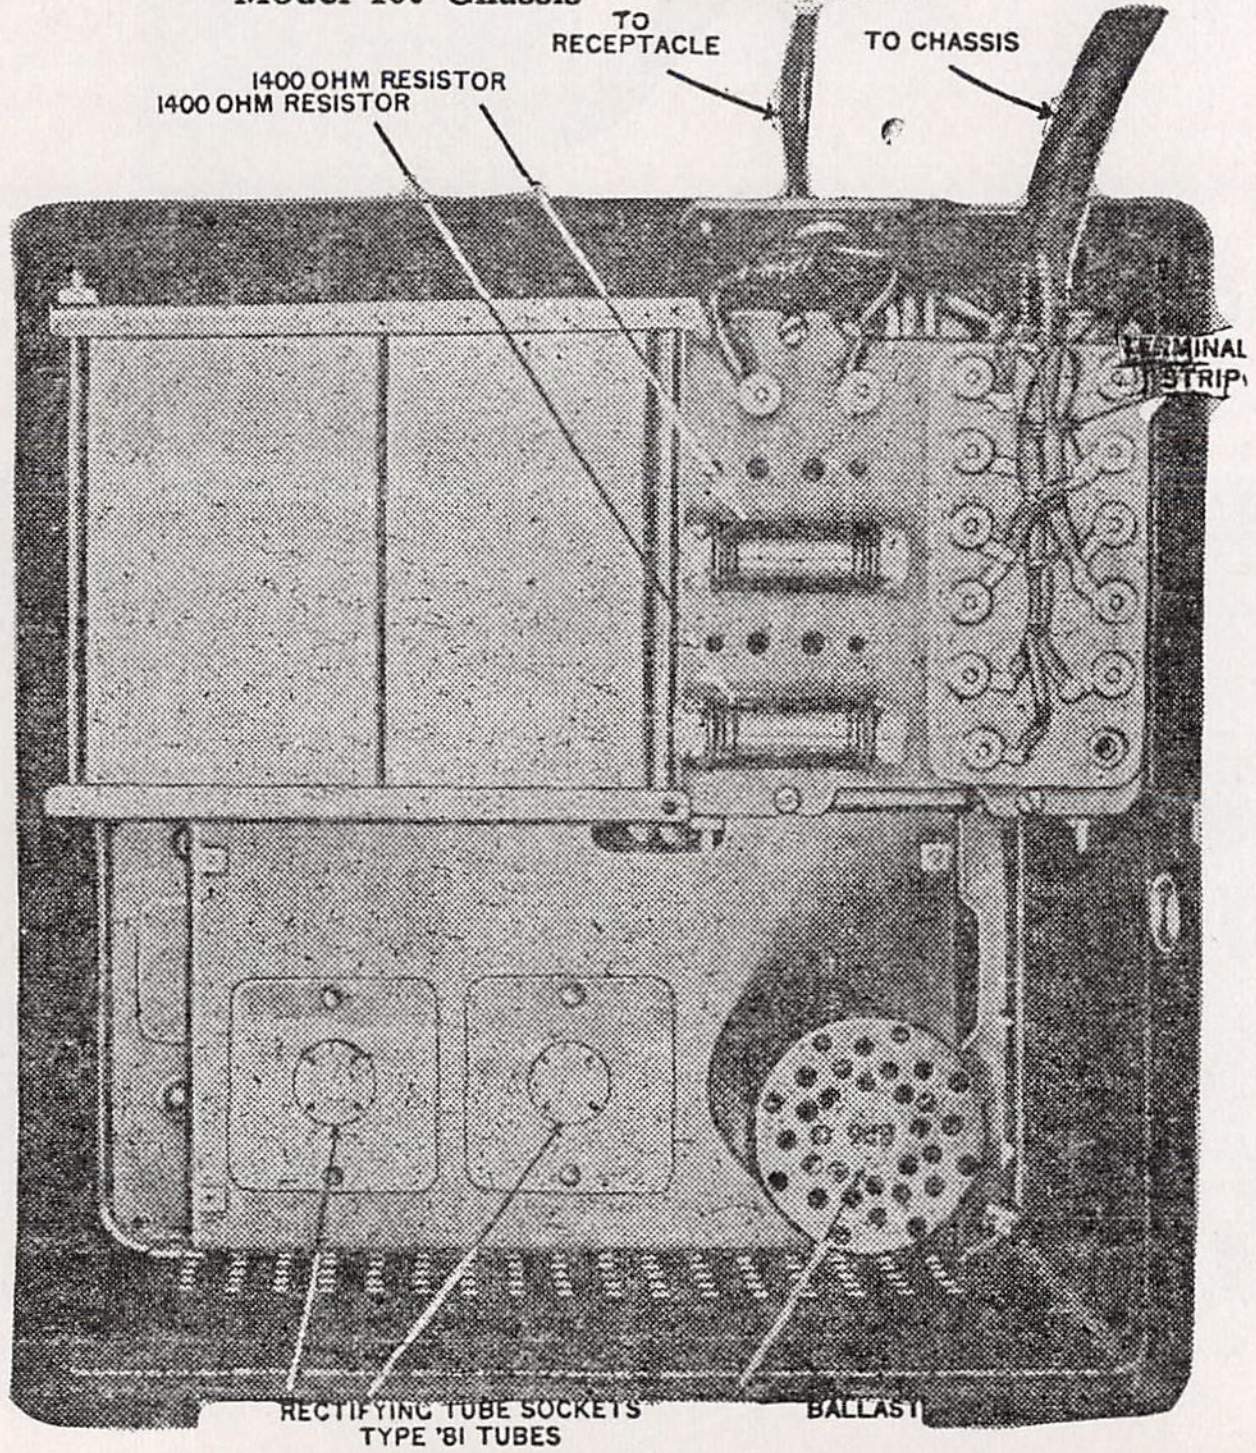
TO RECEPTACLE
TO CHASSIS
1400 OHM RESISTOR
1400 OHM RESISTOR
TERMINAL STRIP
RECTIFYING TUBE SOCKETS TYPE '81 TUBES
BALLAST

Top View of Model 8-P-6—8-P-3 Power Unit

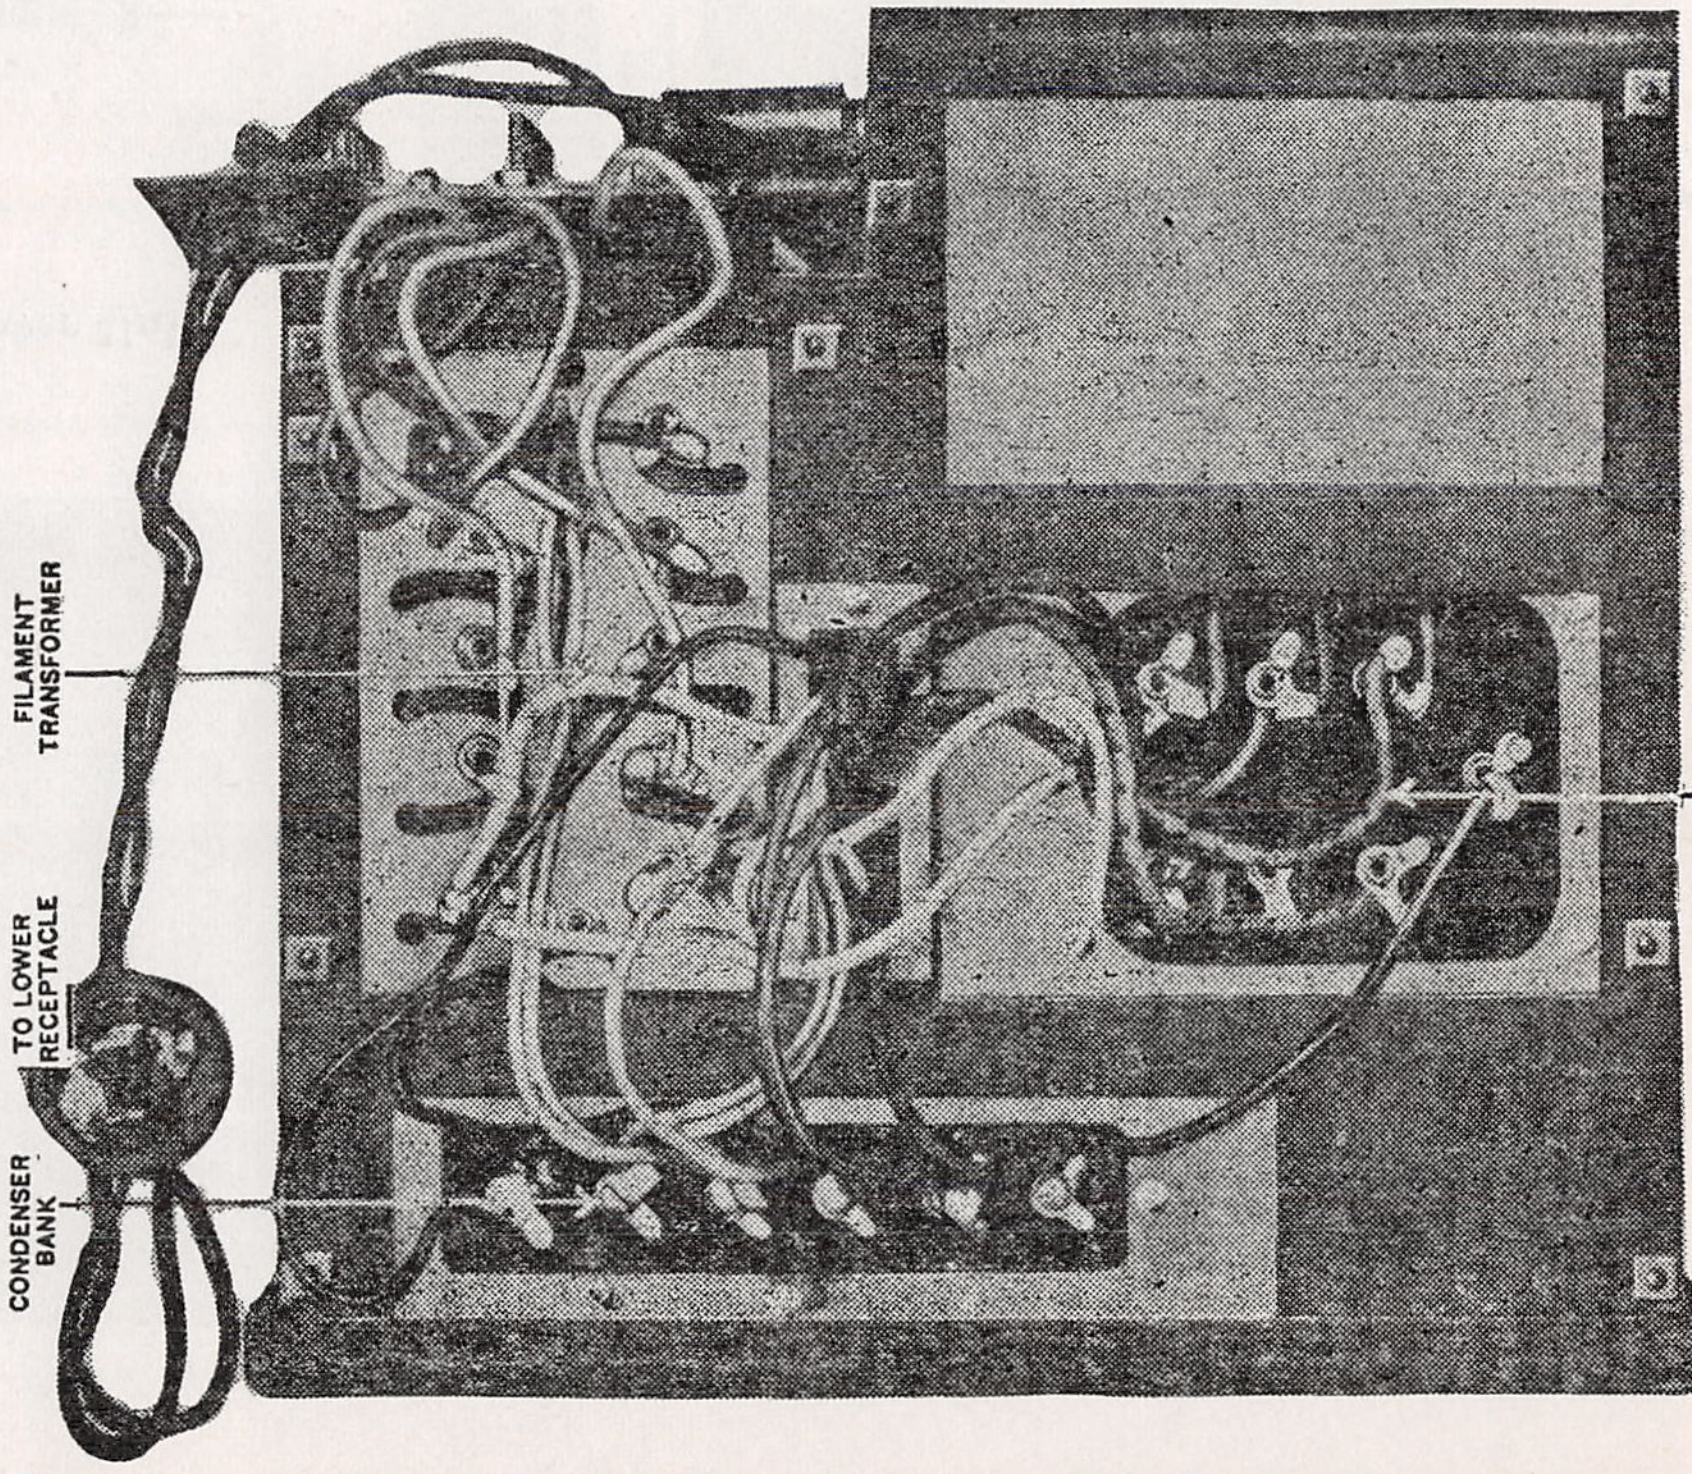
FILAMENT TRANSFORMER
TO LOWER RECEPTACLE
CONDENSER BANK
PLATE TRANSFORMER

Side View of 8-P-6—8-P-3 Power Unit, Showing Internal Wiring

MODEL 90
MODEL 100
Chassis

GRIGSBY - GRUNOW CO.

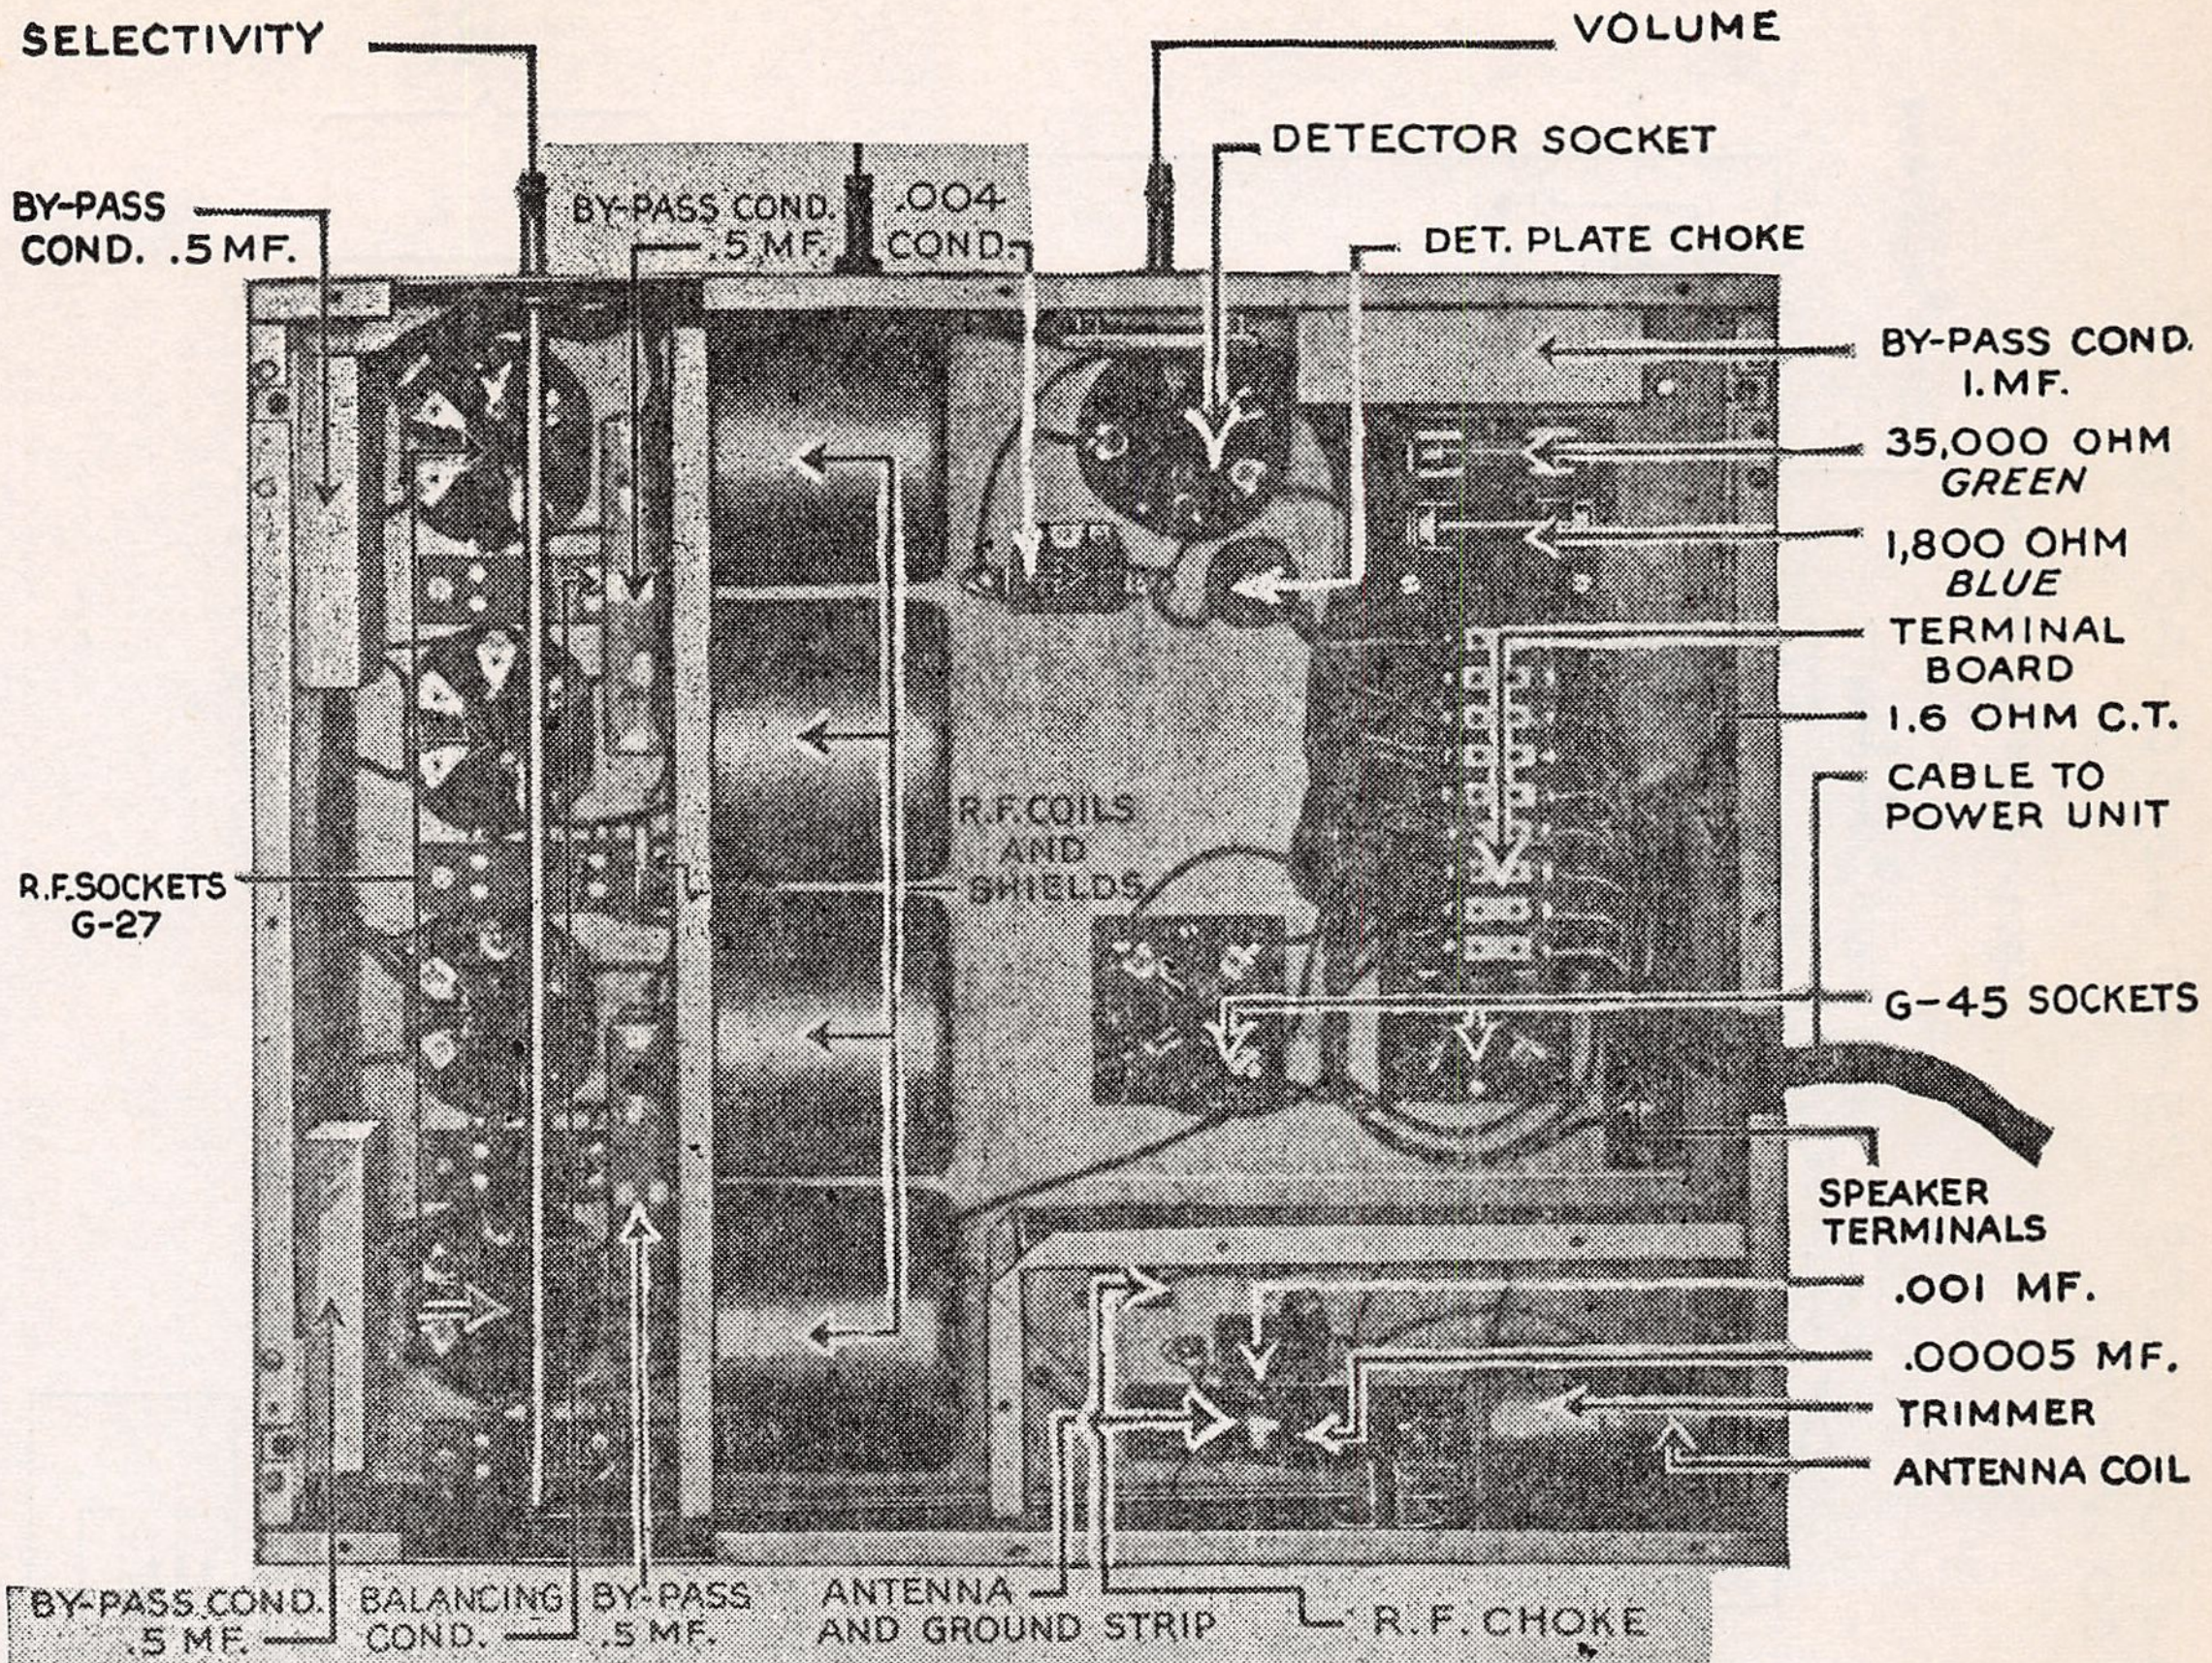
SELECTIVITY
VOLUME
DETECTOR SOCKET
BY-PASS COND. .5 MF.
BY-PASS COND. .5 MF.
.004 COND.
DET. PLATE CHOKE
BY-PASS COND. 1. MF.
35,000 OHM GREEN
1,800 OHM BLUE
TERMINAL BOARD
1.6 OHM C.T.
CABLE TO POWER UNIT
R.F. COILS AND SHIELDS
R.F. SOCKETS G-27
G-45 SOCKETS
SPEAKER TERMINALS
.001 MF.
.00005 MF.
TRIMMER
ANTENNA COIL
BY-PASS COND. .5 MF.
BALANCING COND.
BY-PASS .5 MF.
ANTENNA AND GROUND STRIP
R. F. CHOKE

Position of Parts, and Wiring of Model 90 Receiver

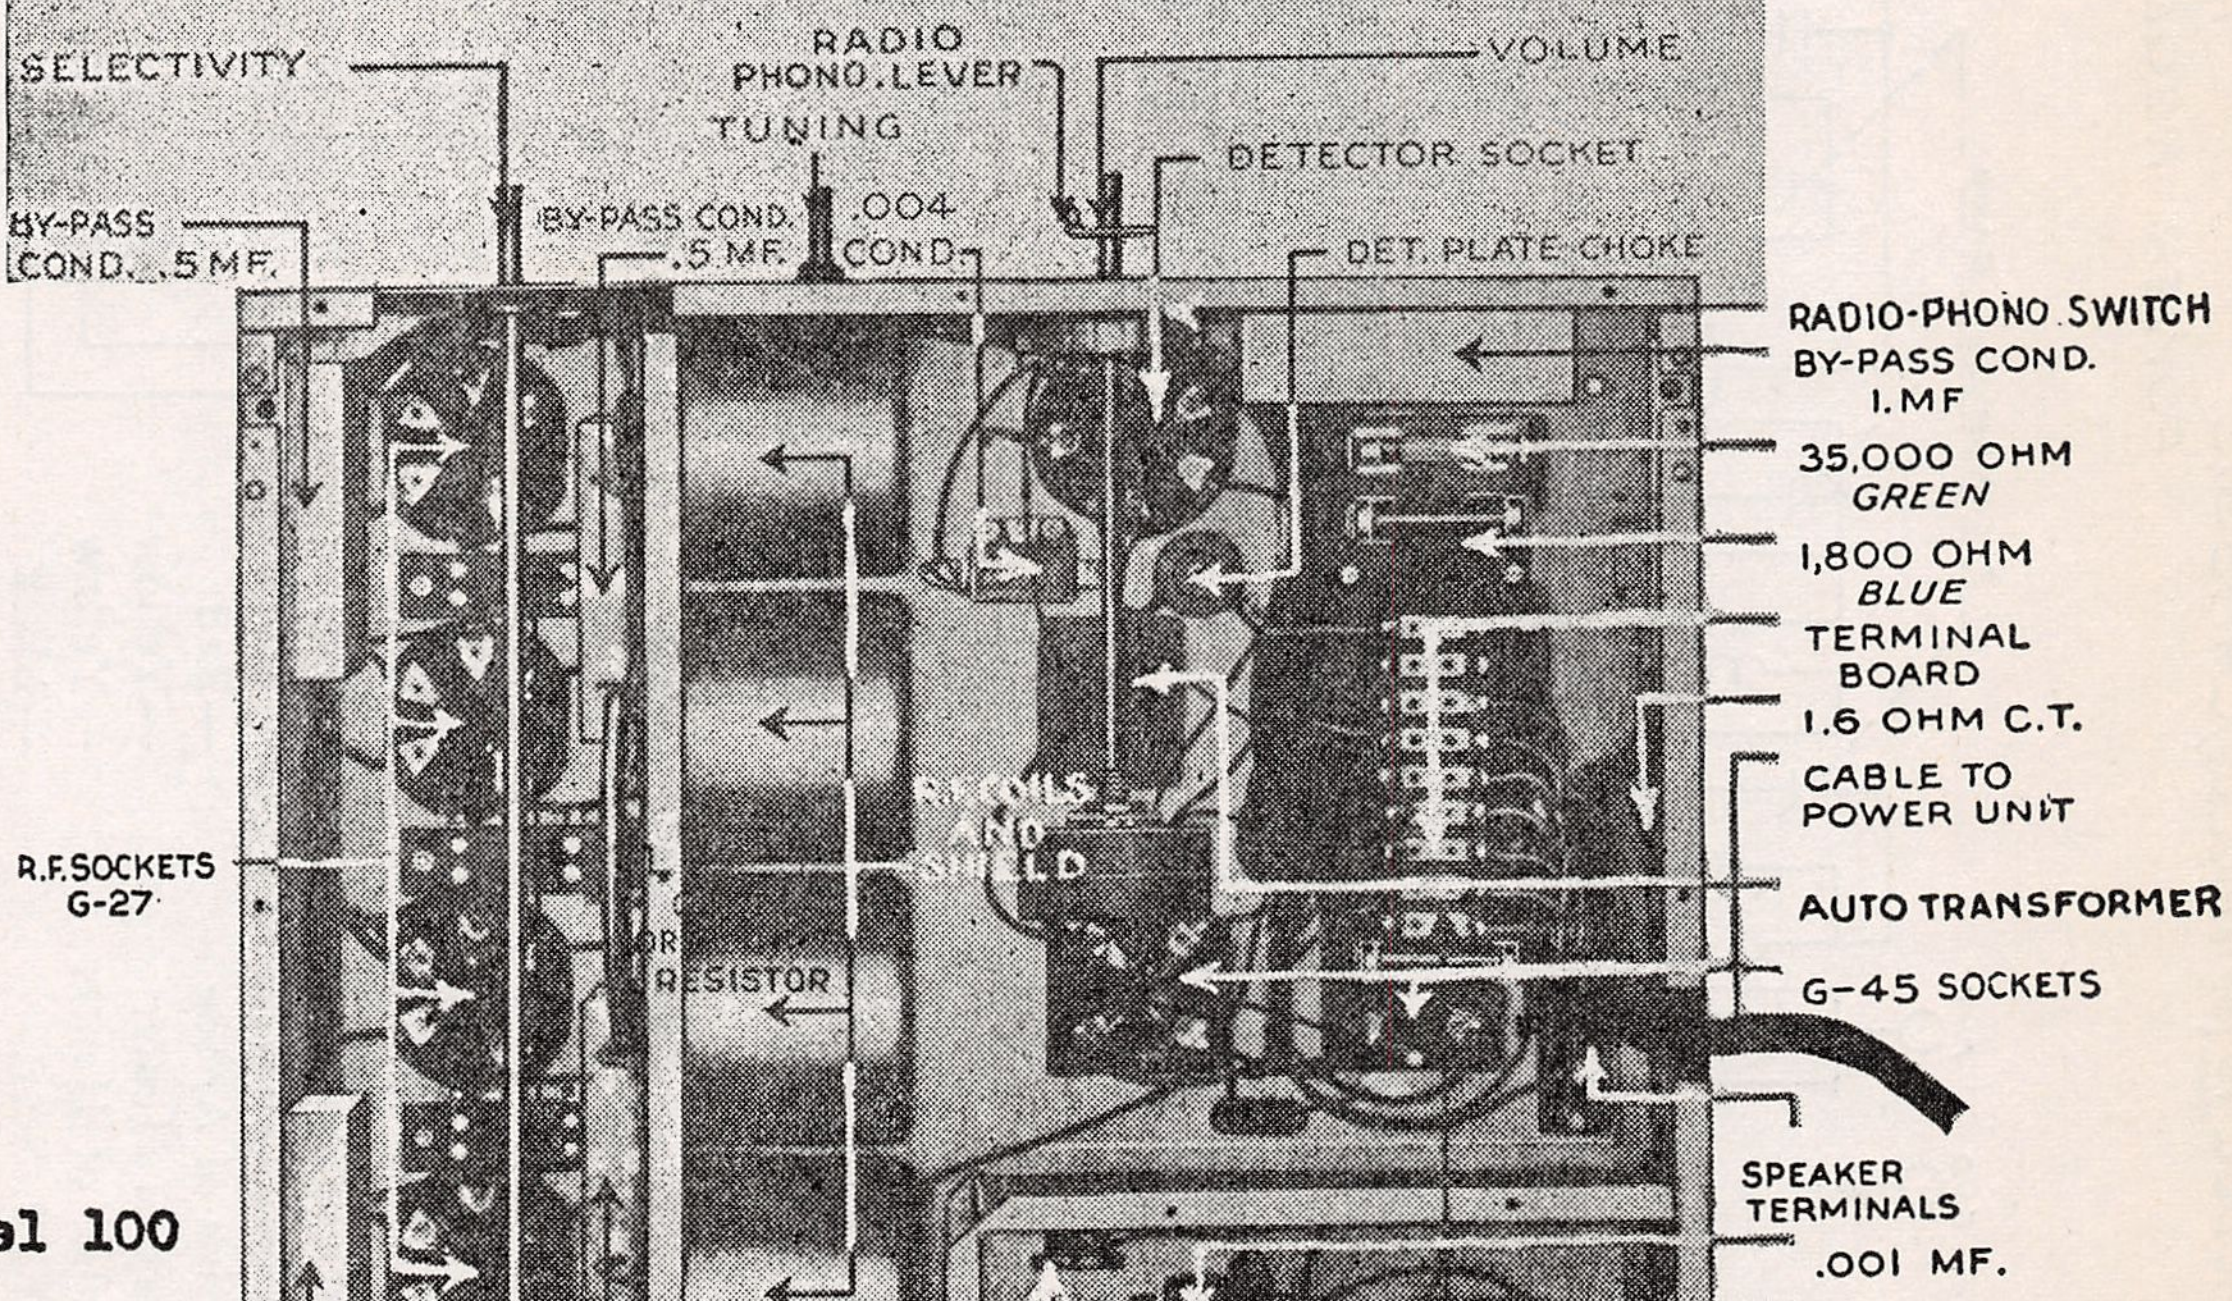
SELECTIVITY
RADIO PHONO. LEVER
VOLUME
TUNING
DETECTOR SOCKET
BY-PASS COND. .5 MF.
BY-PASS COND. .5 MF.
.004 COND.
DET. PLATE CHOKE
RADIO-PHONO SWITCH
BY-PASS COND. 1. MF
35,000 OHM GREEN
1,800 OHM BLUE
TERMINAL BOARD
1.6 OHM C.T.
CABLE TO POWER UNIT
R.F. COILS AND SHIELD
RESISTOR
R.F. SOCKETS G-27
AUTO TRANSFORMER
G-45 SOCKETS
SPEAKER TERMINALS
.001 MF.
.00005 MF.
TRIMMER
ANTENNA COIL
1,800 OHM
BY-PASS COND. .5 MF.
BALANCING COND.
BY-PASS .5 MF.
ANTENNA AND GROUND STRIP
R. F. CHOKE

Model 100

MODEL 15
Schematic
Below Serial
65149

GRIGSBY - GRUNOW CO.

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
MODEL 15 (65,149 UP TO INCLUSIVE) CHASSIS 115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES
POWER REQD.—60 WATTS

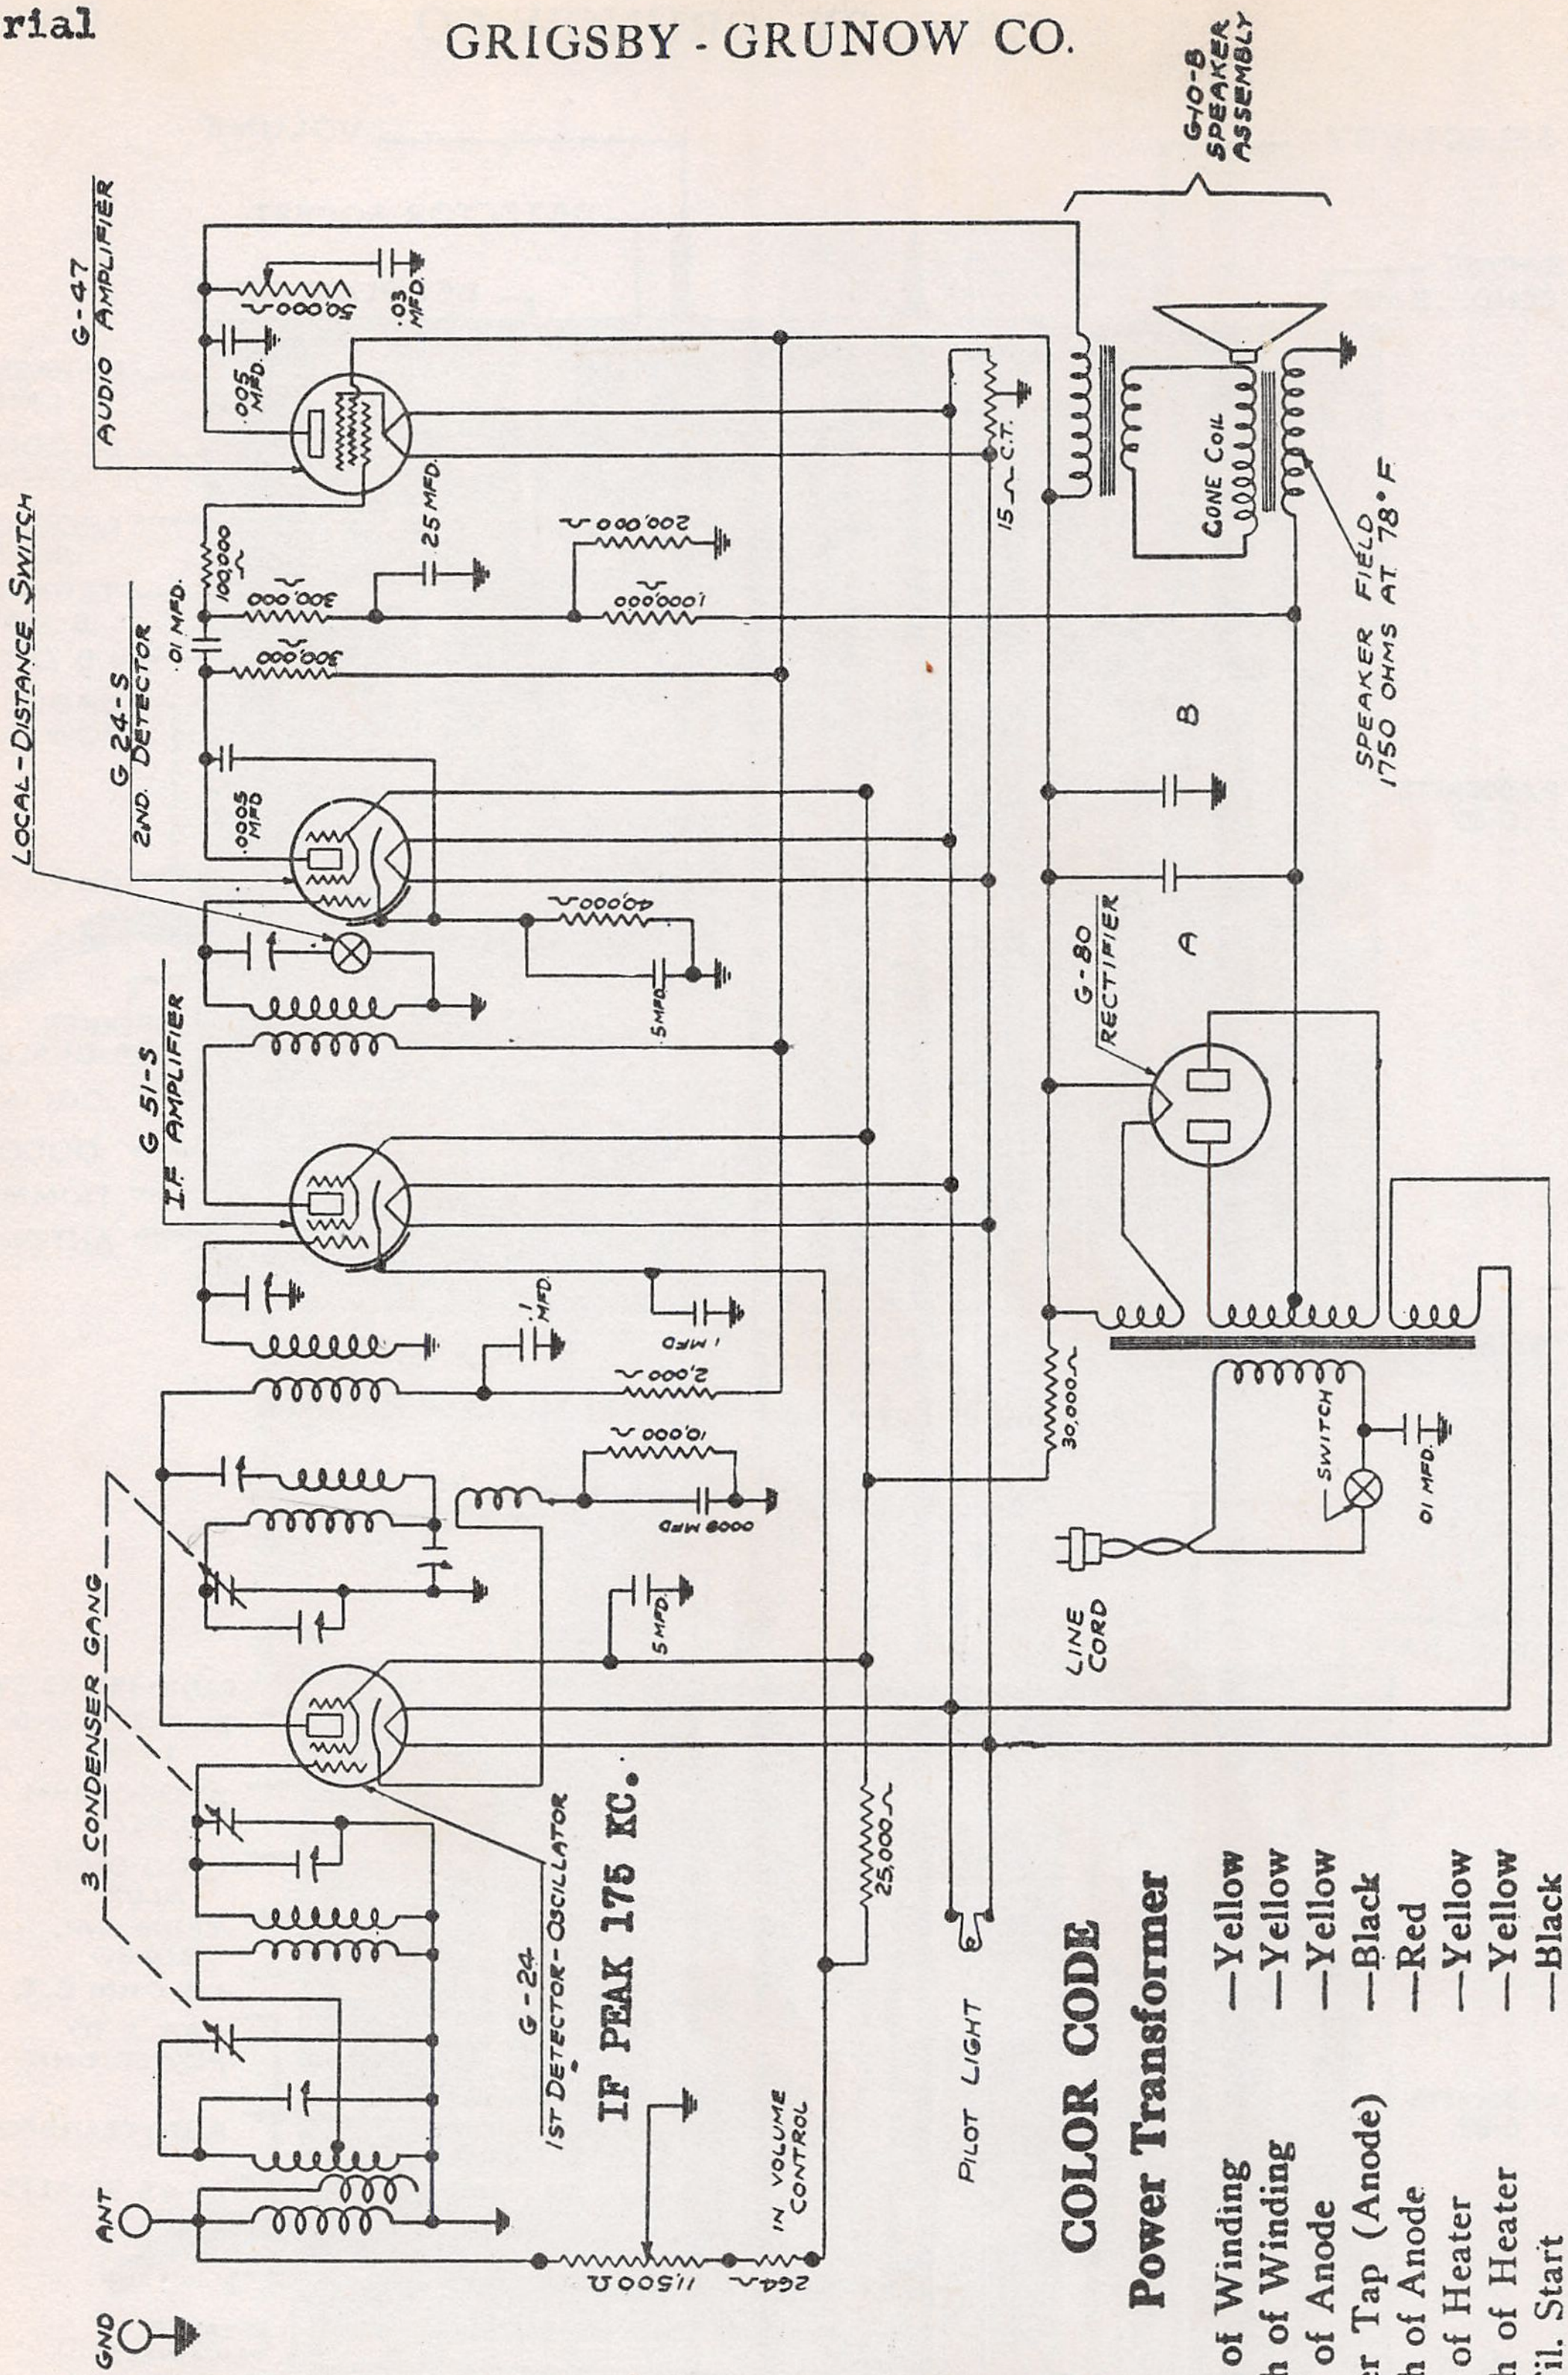
G-10-B SPEAKER ASSEMBLY
G-47 AUDIO AMPLIFIER
.005 MFD.
50,000 Ω
.03 MFD.
25 MFD.
100,000 Ω
200,000 Ω
300,000 Ω
100,000 Ω
.01 MFD.
300,000 Ω
15 Ω C.T.
CONE COIL
SPEAKER FIELD 1750 OHMS AT 78° F
LOCAL-DISTANCE SWITCH
G-24-S 2ND. DETECTOR
.0005 MFD
B
A
40,000 Ω
5 MFD
G-80 RECTIFIER
G 51-S I.F. AMPLIFIER
.1 MFD
.1 MFD
2,000 Ω
10,000 Ω
.0008 MFD
30,000 Ω
SWITCH
.01 MFD
LINE CORD
3 CONDENSER GANG
5 MFD
G-24 1ST DETECTOR-OSCILLATOR
IF PEAK 175 KC.
25,000 Ω
PILOT LIGHT
IN VOLUME CONTROL
ANT
GND
11500 Ω
264 Ω

COLOR CODE

Power Transformer

PRI	Start of Winding	—Yellow
	Finish of Winding	—Yellow
	Start of Anode	—Yellow
	Center Tap (Anode)	—Black
	Finish of Anode	—Red
	Start of Heater	—Yellow
	Finish of Heater	—Yellow
	280 Fil. Start	—Black
	280 Fil. Finish	—Black

MODEL 15 Chassis (up to 65, 149 Incl.) 115-230 V. 25-50 & 50-60 Cycles - 60 Watts.

Model 15 Chassis

Employed in Havenwood, Ellswood and Sherwood Models

MODEL 15
Chassis Views

Tube Purpose	 Type	Fil. Volts A. C.	Plate Volts D. C.	Grid Volts D. C.	Cathode Volts D. C.	Plate Current M. A.—D. C.	Screen Volts D. C.
1st Det.—Osc.	G-24	2.5	250	.....	9	0.9	90
I. F. Amplifier	G-51-S	2.5	250	.....	3.0**	7.0	90
2nd Detector	G-24-S	2.5	250	.....	9	0.17	90
Power Amplifier	G-47	2.5	250	-16.5*	...	32	250
Rectifier	G-80	5.0		.....		54	...

Table of Voltages to Ground

*This cannot be measured with the customary 1000 ohm per volt meter because of the high resistance between the grid and ground. If there is any doubt about the pentode bias, check the 100,000 ohm, 1 megohm, 200,000 and 300,000 ohm resistors and .25 M.F.D. Condenser in this circuit and be sure the speaker field voltage is correct, 112 volts. Also measure the pentode plate and screen voltages and if they are 250 volts, the plate current should be 32 M.A

**This should rise to 42 when the volume control is turned to minimum.

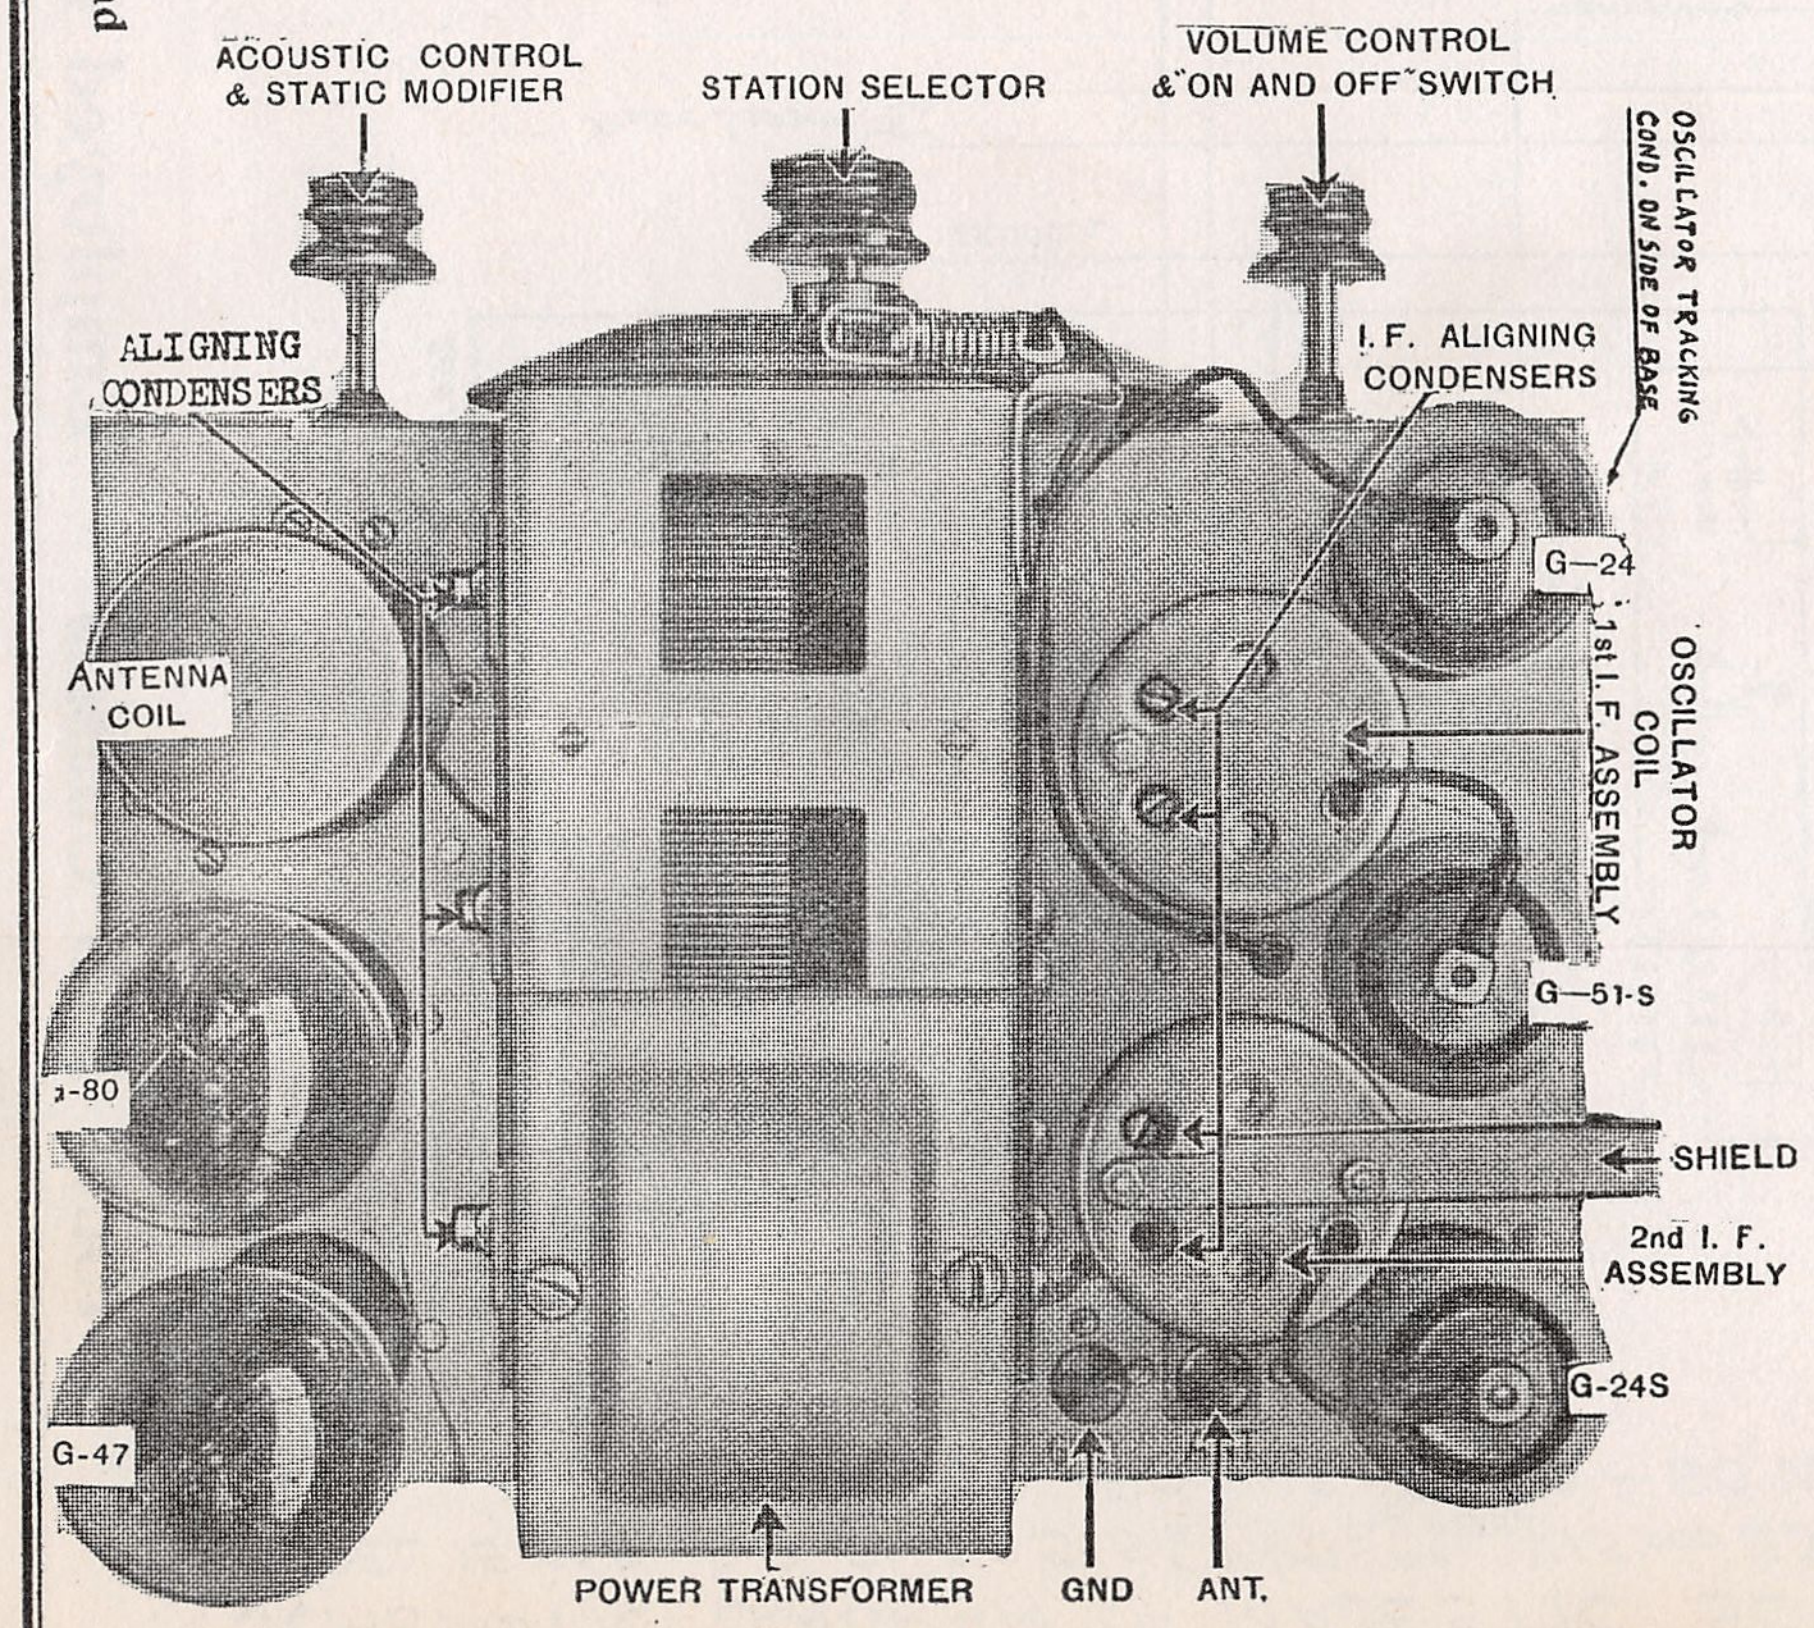
ACOUSTIC CONTROL & STATIC MODIFIER
STATION SELECTOR
VOLUME CONTROL & ON AND OFF SWITCH
OSCILLATOR TRACKING COND. ON SIDE OF BASE
I. F. ALIGNING CONDENSERS
ALIGNING CONDENSERS
G—24
OSCILLATOR COIL
1st I. F. ASSEMBLY
ANTENNA COIL
G—51-S
SHIELD
2nd I. F. ASSEMBLY
G-24S
G-80
G-47
POWER TRANSFORMER
GND
ANT.

Top View

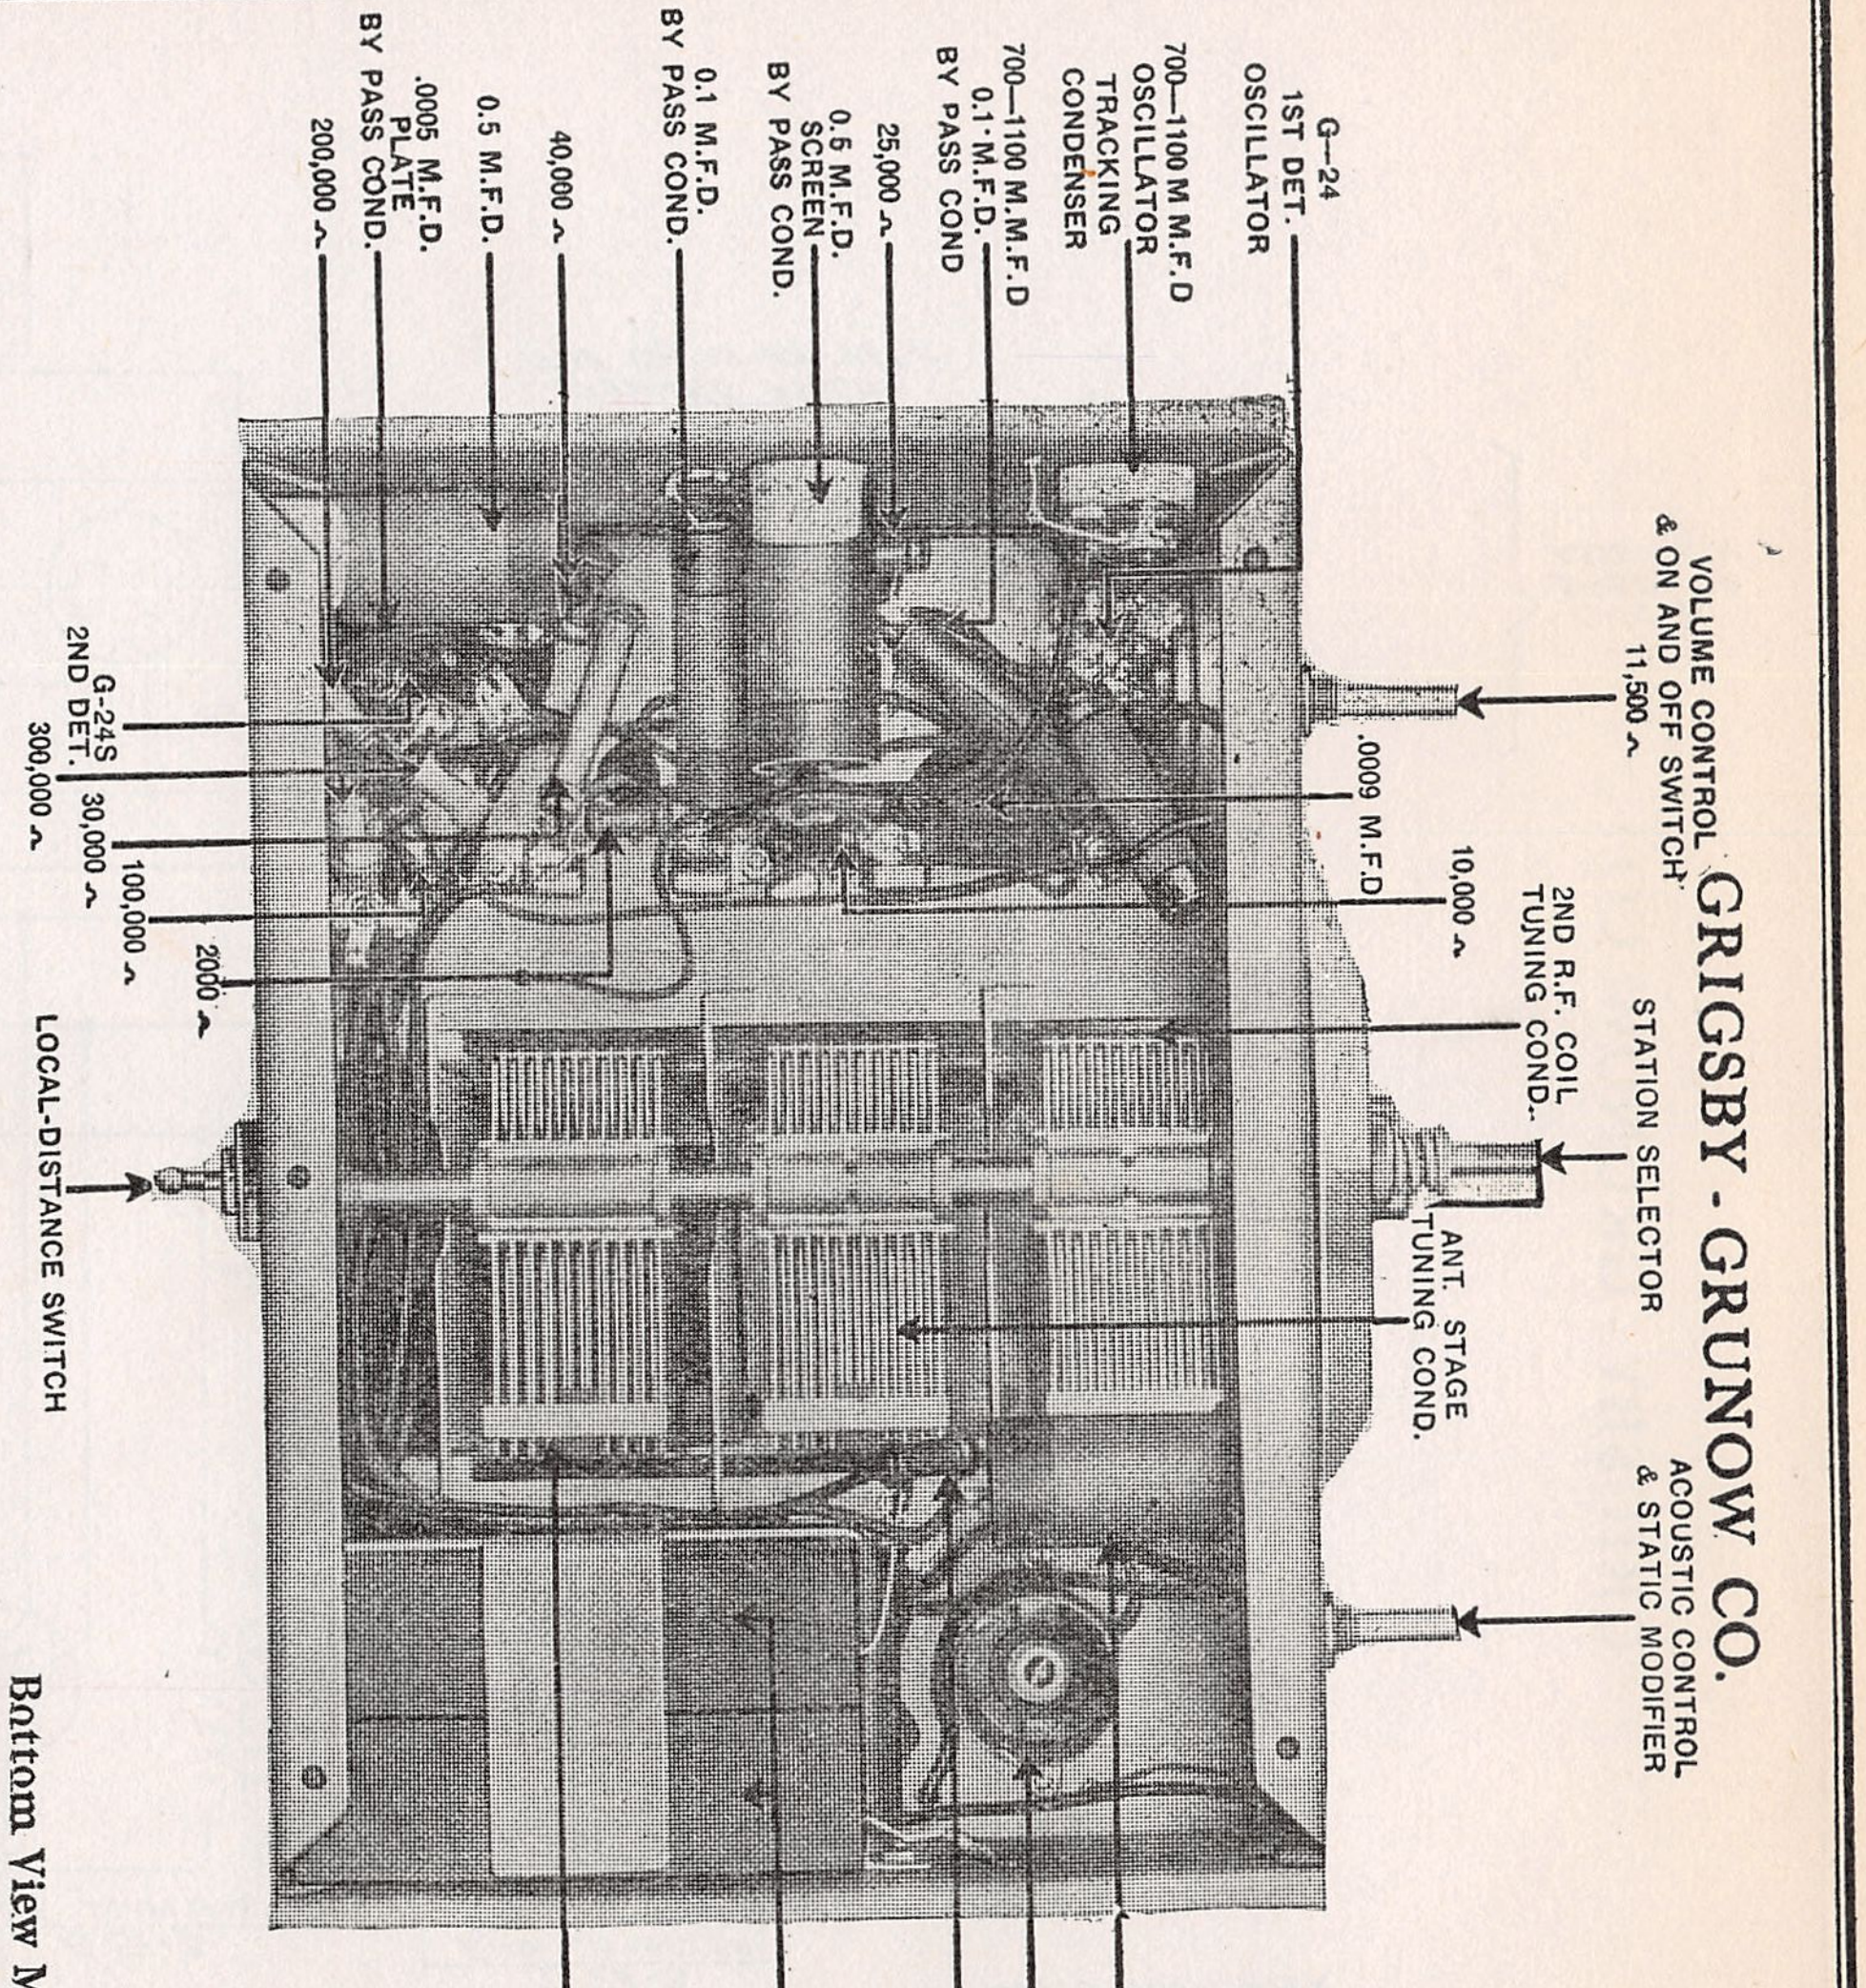
GRIGSBY - GRUNOW CO.
VOLUME CONTROL & ON AND OFF SWITCH 11,500 Ω
STATION SELECTOR
ACOUSTIC CONTROL & STATIC MODIFIER
2ND R.F. COIL TUNING COND.
10,000 Ω
ANT. STAGE TUNING COND.
.0009 M.F.D
G—24 1ST DET. OSCILLATOR
700—1100 M M.F.D OSCILLATOR TRACKING CONDENSER
700—1100 M.M.F.D 0.1 M.F.D. BY PASS COND
25,000 Ω
0.5 M.F.D. SCREEN BY PASS COND.
0.1 M.F.D. BY PASS COND.
40,000 Ω
0.5 M.F.D.
.0005 M.F.D. PLATE BY PASS COND.
200,000 Ω
2ND R.F. COIL
0.25 M.F.D. BY PASS COND
MEG. OHM RESISTOR
8 M.F.D. EACH
OSC. STAGE TUNING COND.
2000 Ω
100,000 Ω
G-24S 2ND DET.
30,000 Ω
300,000 Ω
LOCAL-DISTANCE SWITCH

Bottom View Model 15 Chassis

Model 15 Chassis

MODEL 15,15-B
Schematic
Above Serial
65150

GRIGSBY - GRUNOW CO.

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
MODEL 15 AND 15-B CHASSIS (SERIAL NO. 65,150 AND OVER) 115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES.
POWER REQD. — 60 WATTS.

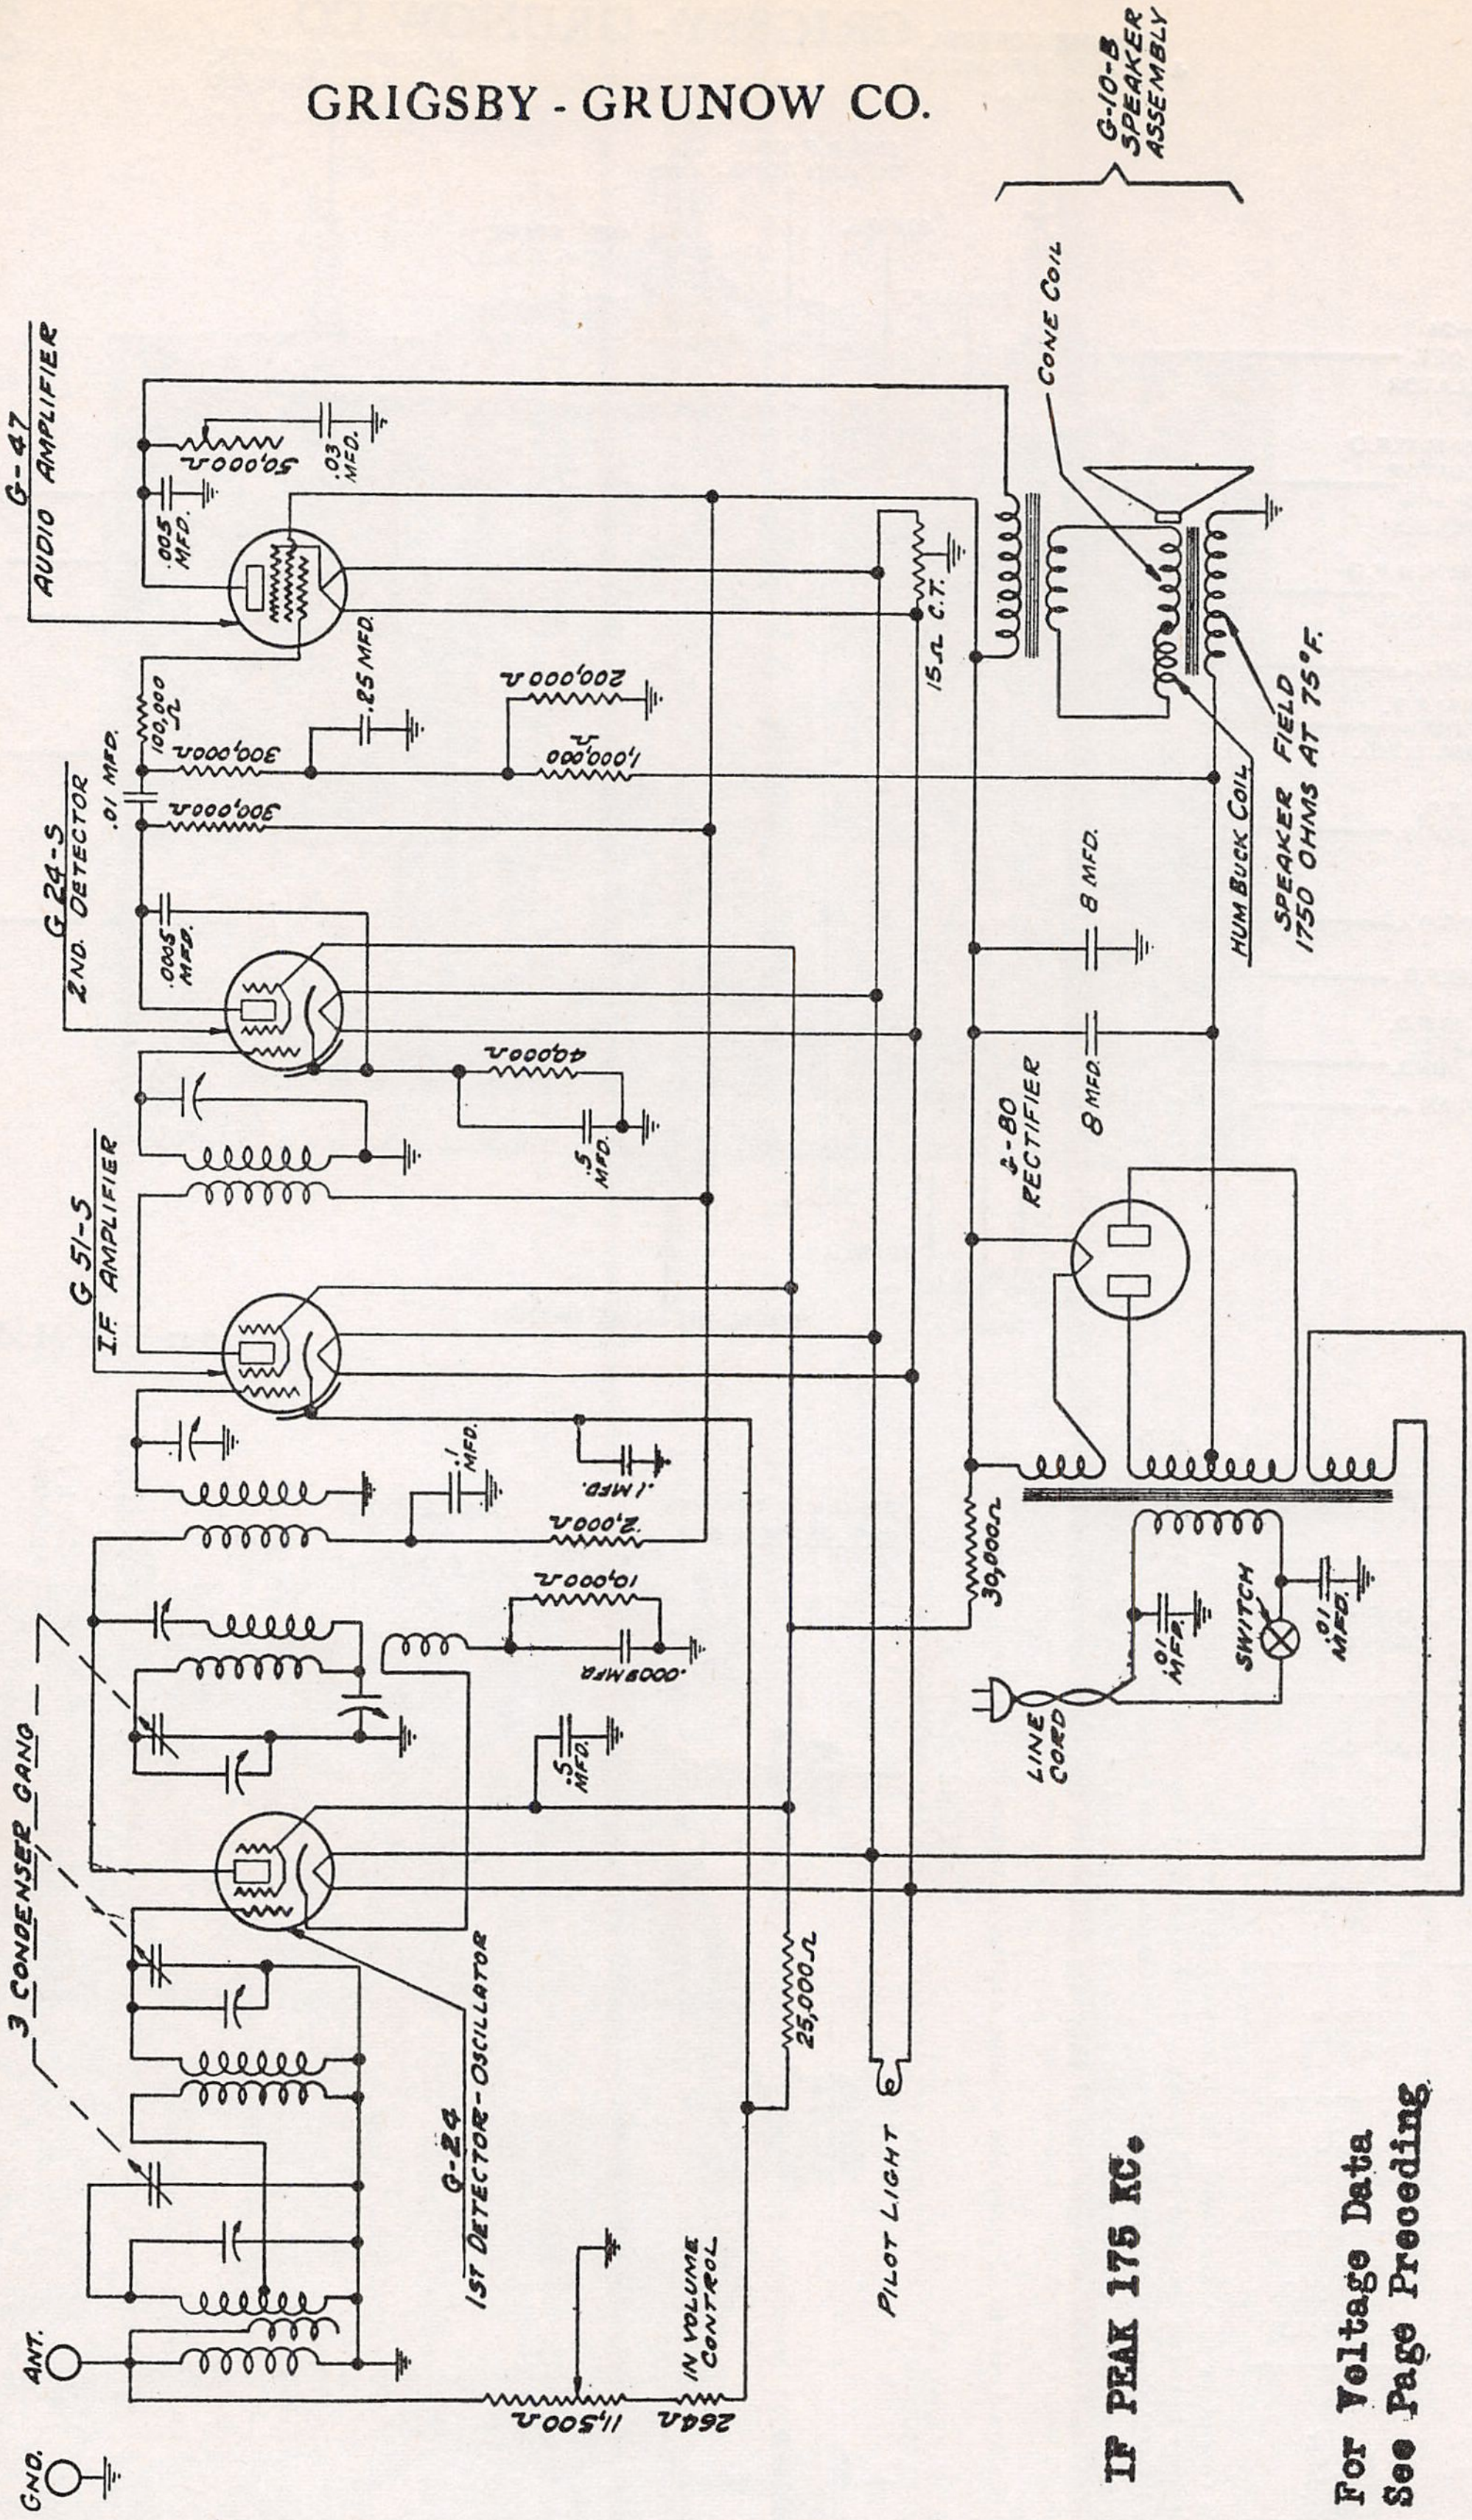
G-10-B SPEAKER ASSEMBLY
CONE COIL
G-47 AUDIO AMPLIFIER
50,000 Ω
.03 MFD.
.005 MFD.
15 Ω C.T.
.25 MFD.
100,000 Ω
.01 MFD.
300,000 Ω
1,000,000 Ω
200,000 Ω
300,000 Ω
HUM BUCK COIL
SPEAKER FIELD 1750 OHMS AT 75°F.
G-24-S 2ND. DETECTOR
.0005 MFD.
8 MFD.
8 MFD.
40,000 Ω
.5 MFD.
2-80 RECTIFIER
G 51-S I.F. AMPLIFIER
.1 MFD.
.1 MFD.
2,000 Ω
10,000 Ω
.0005 MFD.
30,000 Ω
.01 MFD.
SWITCH
.01 MFD.
LINE CORD
.5 MFD.
3 CONDENSER GANG
G-24 1ST DETECTOR-OSCILLATOR
25,000 Ω
PILOT LIGHT
IN VOLUME CONTROL
ANT.
GND.
11,500 Ω
264 Ω

IF PEAK 175 KC.

For Voltage Data See Page Preceding

Model 15 B Chassis Employed in Fyfewood Model

MODEL 15-B
Chassis Views

GRIGSBY - GRUNOW CO.

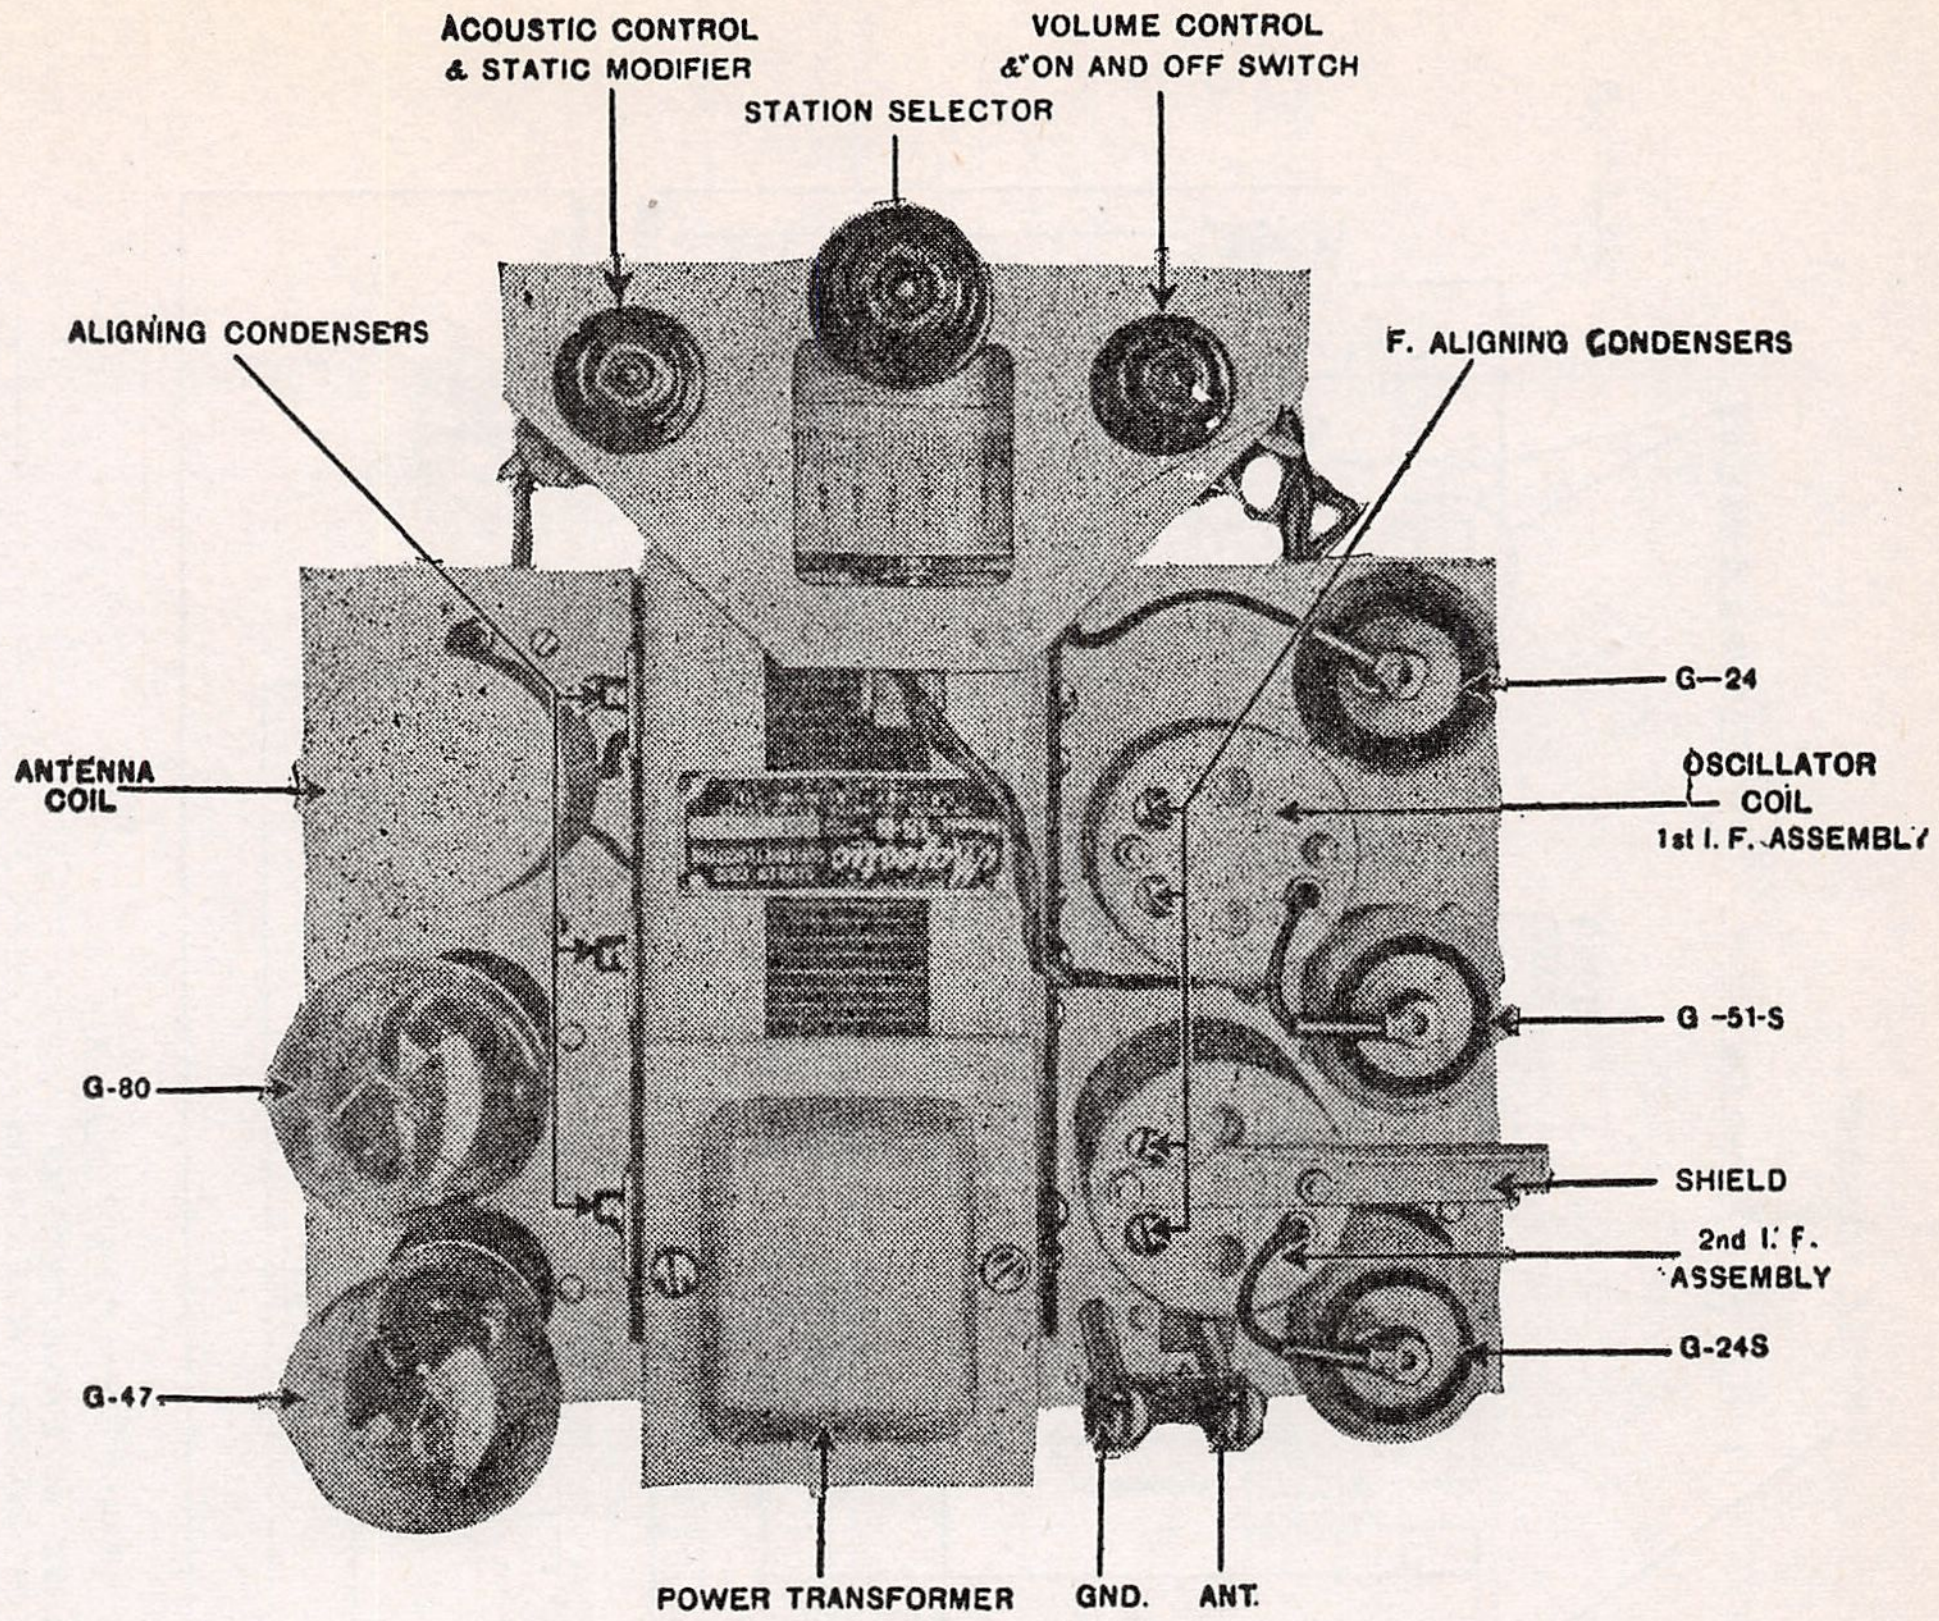
ACOUSTIC CONTROL
& STATIC MODIFIER
STATION SELECTOR
VOLUME CONTROL
& ON AND OFF SWITCH
ALIGNING CONDENSERS
F. ALIGNING CONDENSERS
ANTENNA COIL
G—24
OSCILLATOR COIL
1st I. F. ASSEMBLY
G-80
G-51-S
SHIELD
2nd I. F. ASSEMBLY
G-47
G-24S
POWER TRANSFORMER
GND.
ANT.

Top View Model 15B Chassis

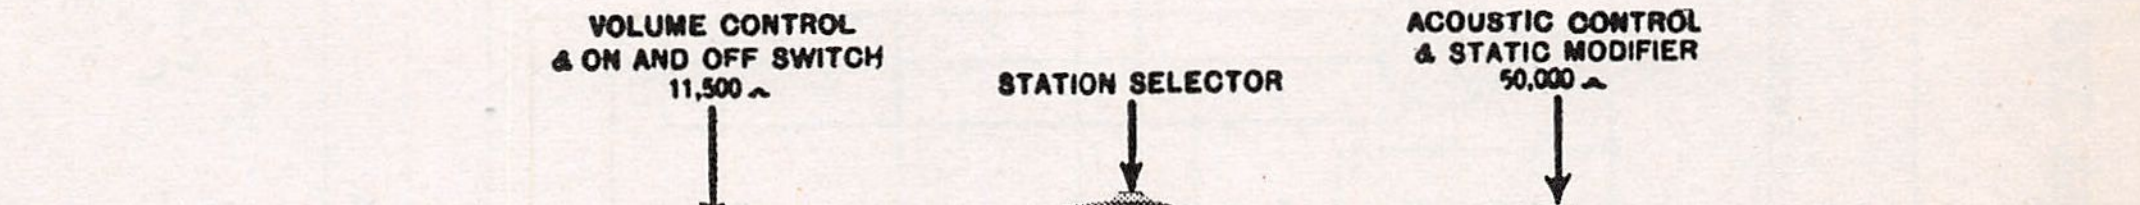
VOLUME CONTROL
& ON AND OFF SWITCH
11,500 ^
STATION SELECTOR
ACOUSTIC CONTROL
& STATIC MODIFIER
50,000 ^
2ND R.F. COIL
TUNING COND.
A.C. LINE COND.
.01 M.F.D. EACH
.03 M.F.D.
TONE CONTROL
700—1100 M.M.F.D
OSCILLATOR
TRACKING
CONDENSER
2ND R.F COIL
0.5 M.F.D.
0.0009 M.F.D.
0.1 M.F.D. CONDS.
2000 ^ RESISTOR
.1 M.F.D.
300,000 ^
RESISTOR
8 M.F.D. EACH
0.25 M.F.D.
200,000 ^
0.5 M.F.D.
OSC. STAGE
COND.
1 MEG ^
300,000 ^
100,000 ^
RESISTOR
.0005 M.F.D.
DETECTOR BY
PASS COND
ANT STAGE
TUNING
COND.

Bottom View Model 15B Chassis

MODEL 25
Schematic

GRIGSBY - GRUNOW CO.

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
MODEL 25 CHASSIS—115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES
POWER REQD.-120 WATTS

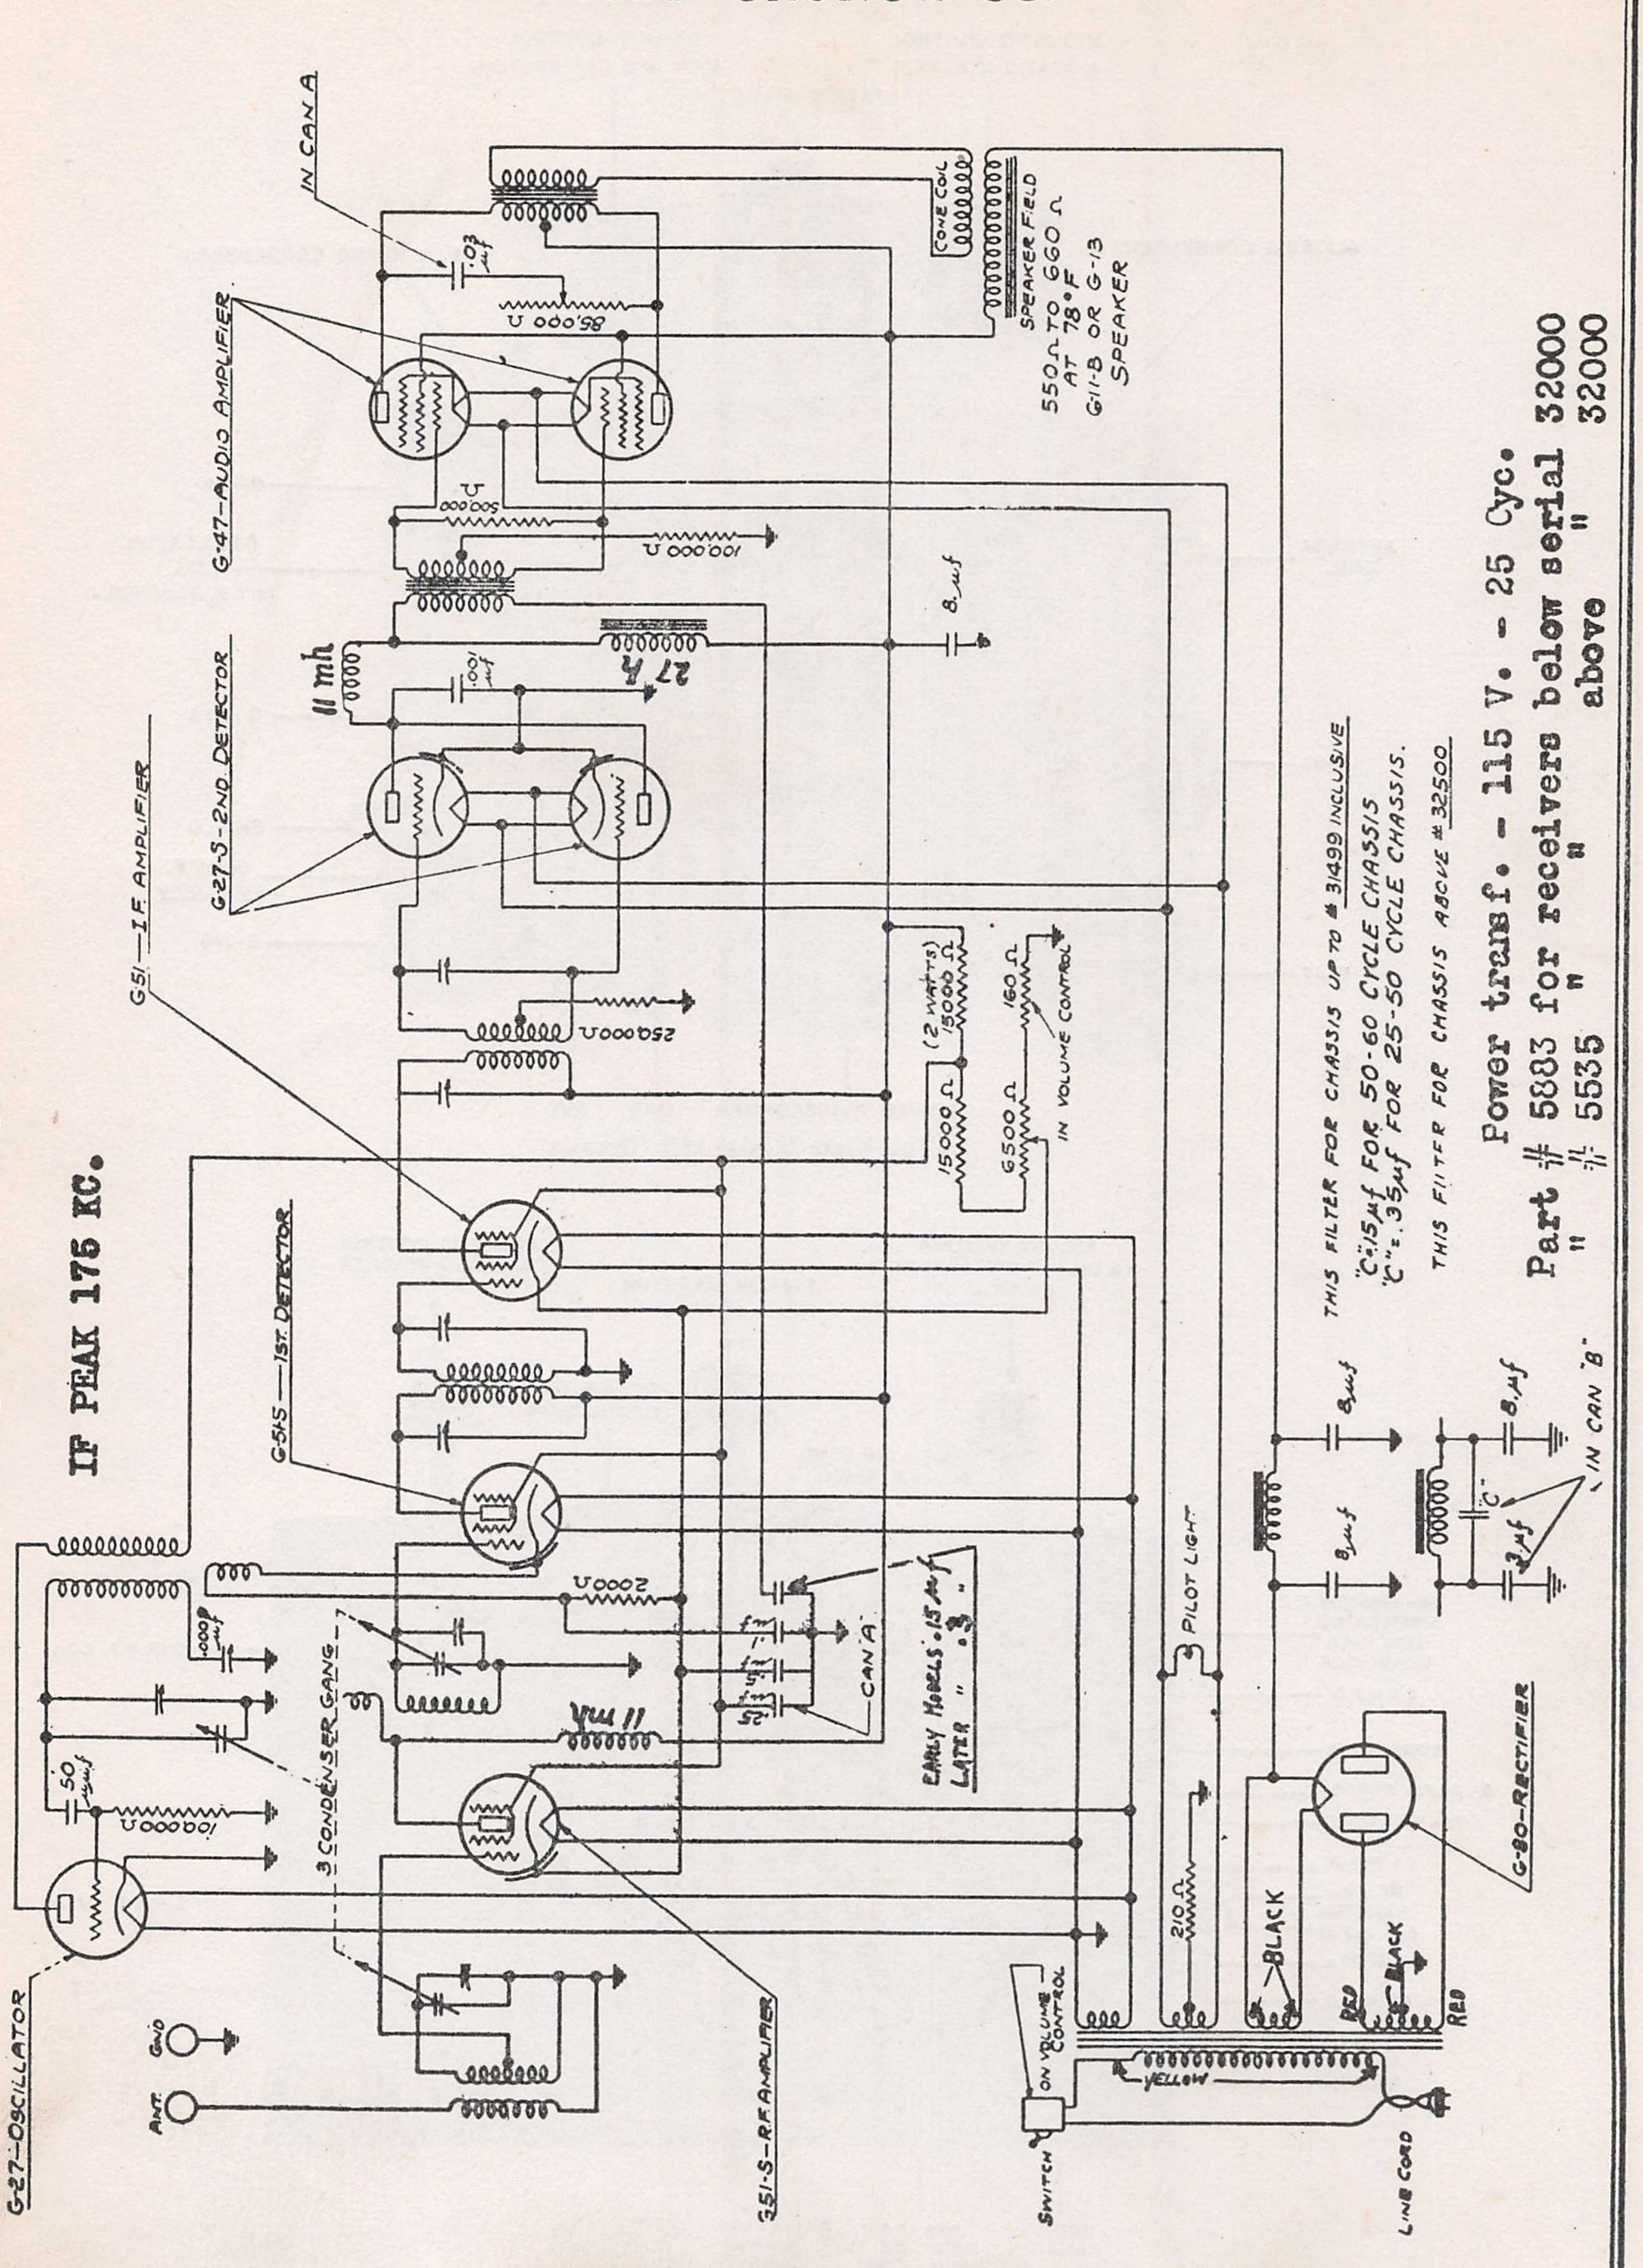
IF PEAK 175 KC.
G-27-OSCILLATOR
ANT.
GND
.50 μf
100,000 Ω
.1000 μf
3 CONDENSER GANG
351-S-RF AMPLIFIER
11 mh
2000 Ω
EARLY MODELS .15 μf
LATER " .3 "
CAN 'A'
G51-S — 1ST DETECTOR
G51 — I.F. AMPLIFIER
250,000 Ω
15000 Ω
(2 WATTS) 3000 Ω
6500 Ω
160 Ω
IN VOLUME CONTROL
G27-S-2ND DETECTOR
.001 μf
11 mh
27 H
8 μf
100,000 Ω
500,000 Ω
G-47-AUDIO AMPLIFIER
85,000 Ω
.03 μf
IN CAN A
CONE COIL
SPEAKER FIELD
550 Ω TO 660 Ω AT 78°F
G11-B OR G-13 SPEAKER
PILOT LIGHT
210 Ω
BLACK
BLACK
RED
RED
YELLOW
SWITCH ON VOLUME CONTROL
LINE CORD
G-80-RECTIFIER
8 μf
8 μf
8 μf
.3 μf
"C"
IN CAN 'B'

THIS FILTER FOR CHASSIS UP TO # 31499 INCLUSIVE
"C"=.15 μf FOR 50-60 CYCLE CHASSIS
"C"=.35 μf FOR 25-50 CYCLE CHASSIS.

THIS FILTER FOR CHASSIS ABOVE # 32500

Power transf. - 115 V. - 25 Cyc.
Part # 5883 for receivers below serial 32000
" # 5535 " " above 32000

Model 25 Chassis
Employed in Brentwood, Cheltenwood and Brucewood Models

MODEL 25
Chassis Views
Voltage

GRIGSBY - GRUNOW CO.

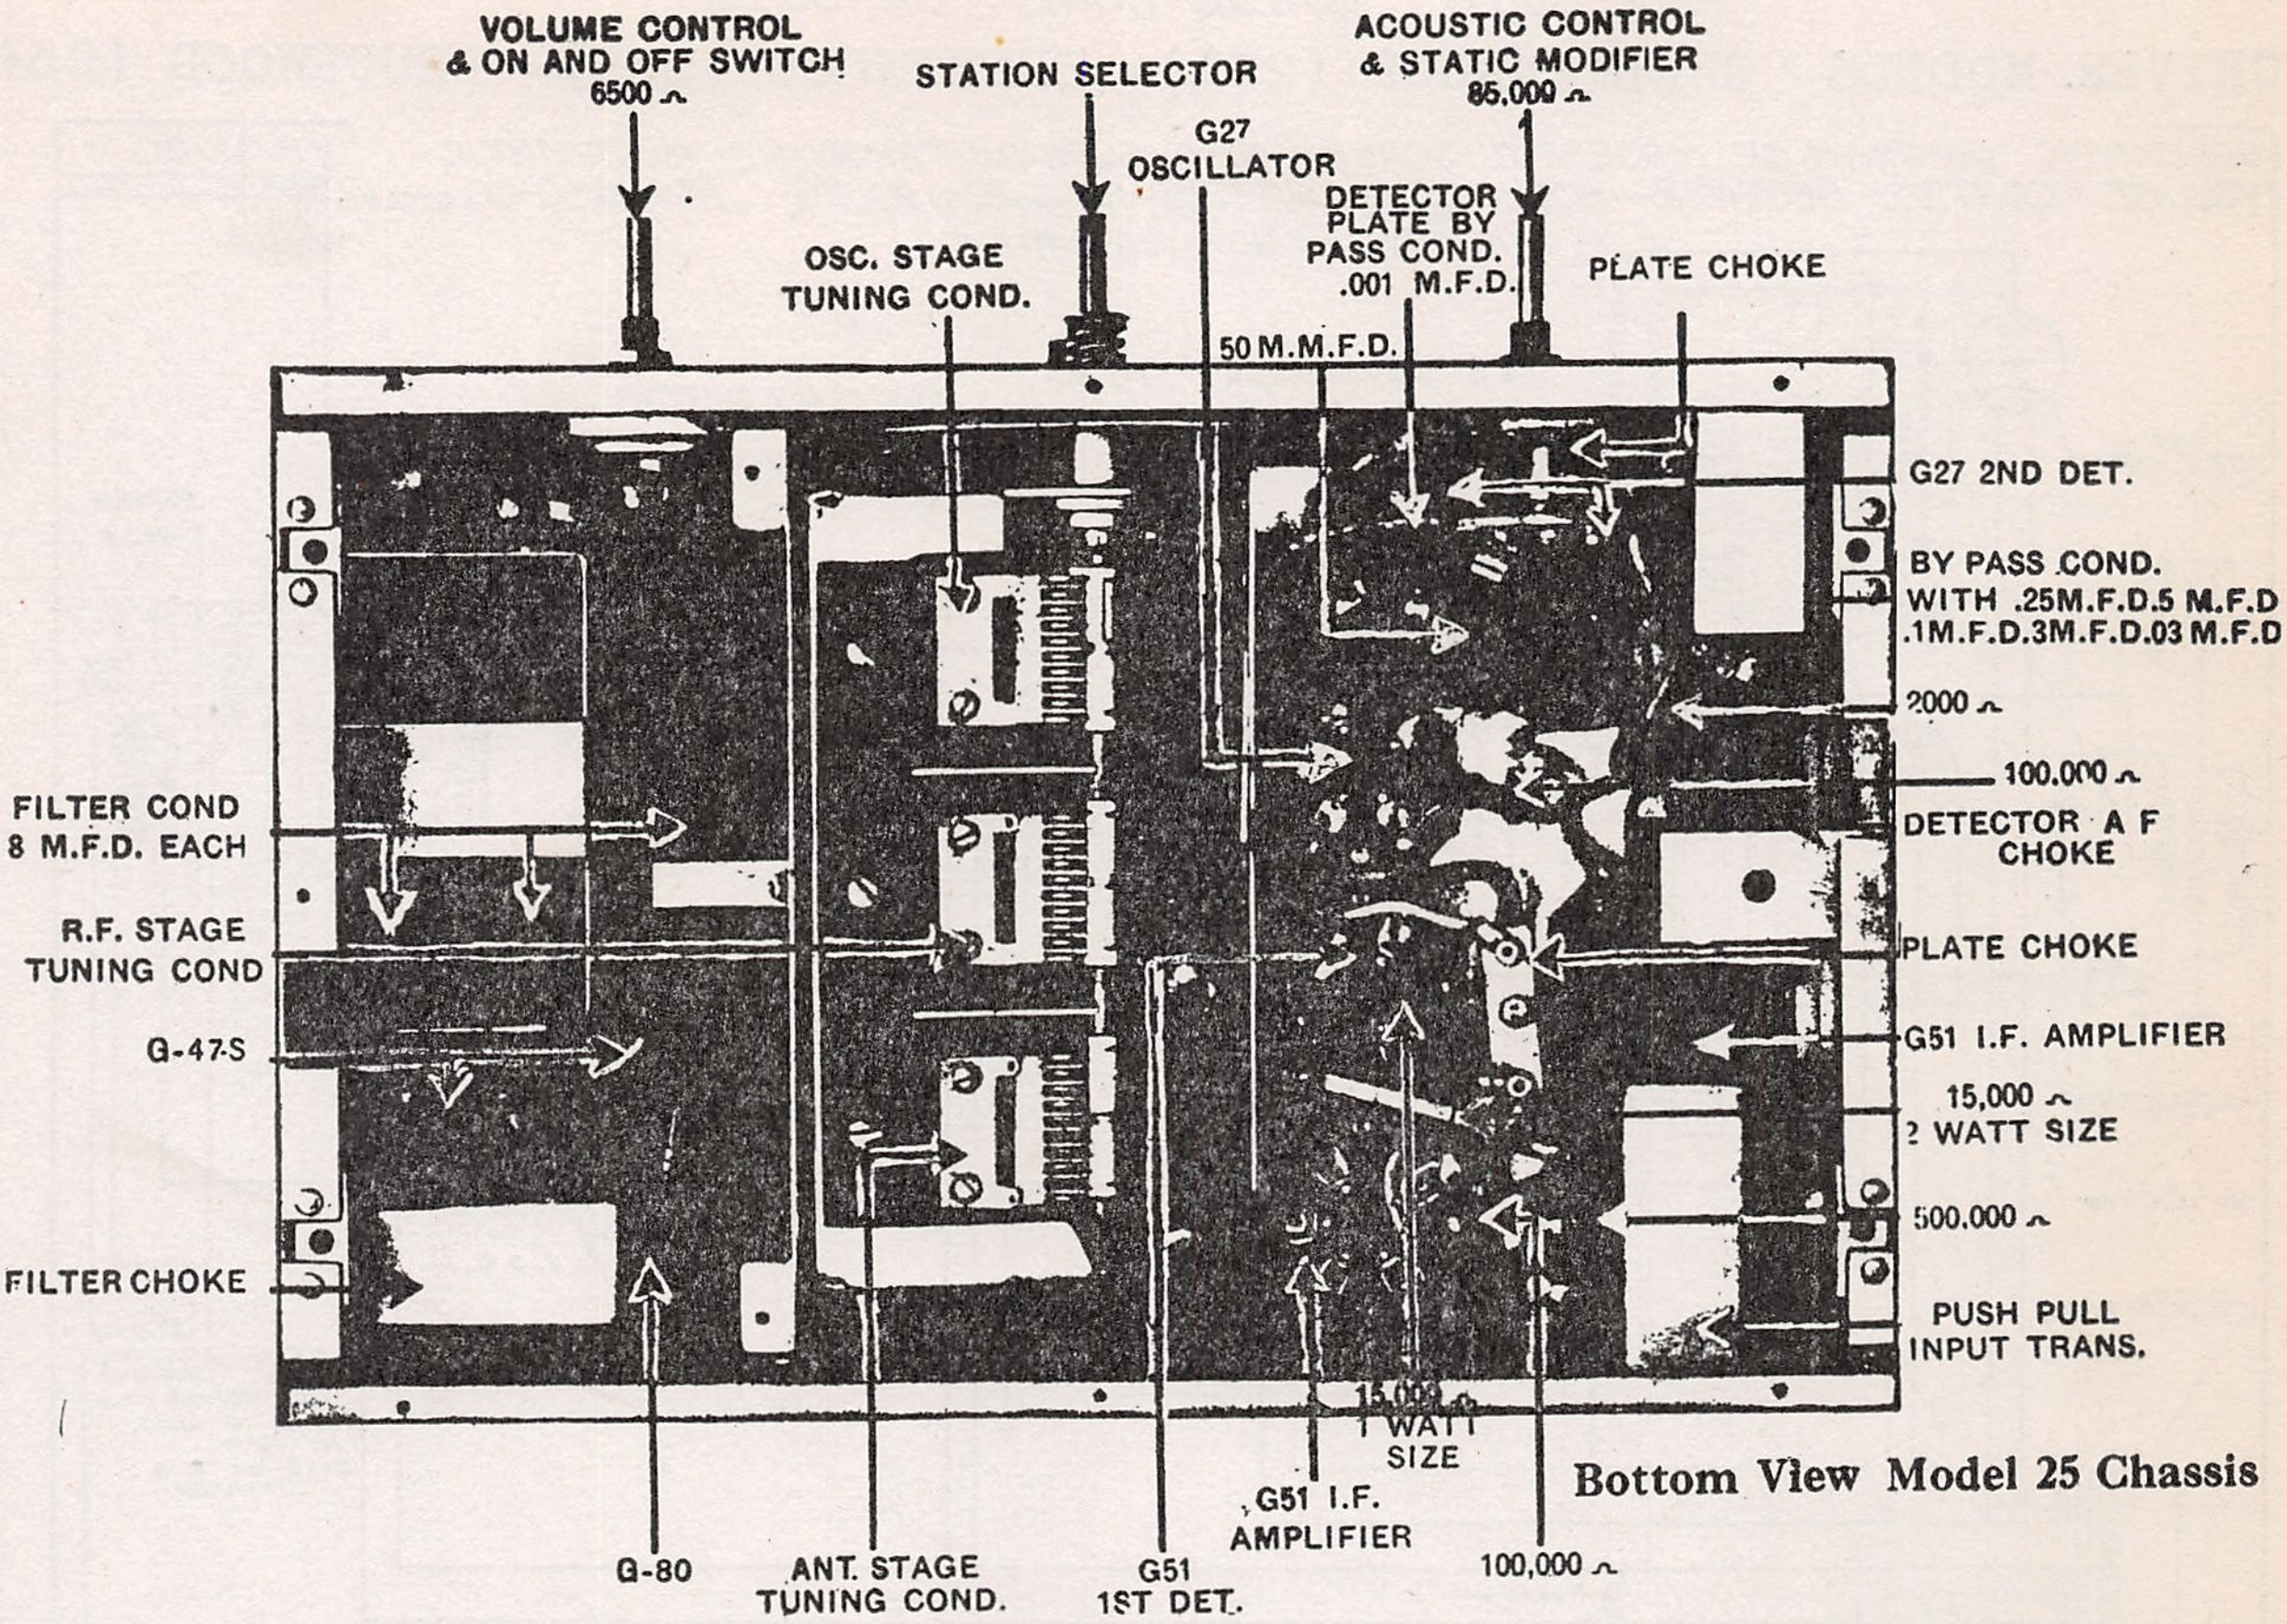
VOLUME CONTROL & ON AND OFF SWITCH 6500 Ω
STATION SELECTOR
ACOUSTIC CONTROL & STATIC MODIFIER 85,000 Ω
G27 OSCILLATOR
OSC. STAGE TUNING COND.
DETECTOR PLATE BY PASS COND. .001 M.F.D.
PLATE CHOKE
50 M.M.F.D.
G27 2ND DET.
BY PASS COND. WITH .25M.F.D.5 M.F.D .1M.F.D.3M.F.D.03 M.F.D
2000 Ω
100,000 Ω
DETECTOR A F CHOKE
FILTER COND 8 M.F.D. EACH
R.F. STAGE TUNING COND
PLATE CHOKE
G-47-S
G51 I.F. AMPLIFIER
15,000 Ω 2 WATT SIZE
500,000 Ω
FILTER CHOKE
PUSH PULL INPUT TRANS.
15,000 Ω 1 WATT SIZE
G51 I.F. AMPLIFIER
G-80
ANT. STAGE TUNING COND.
G51 1ST DET.
100,000 Ω

Bottom View Model 25 Chassis

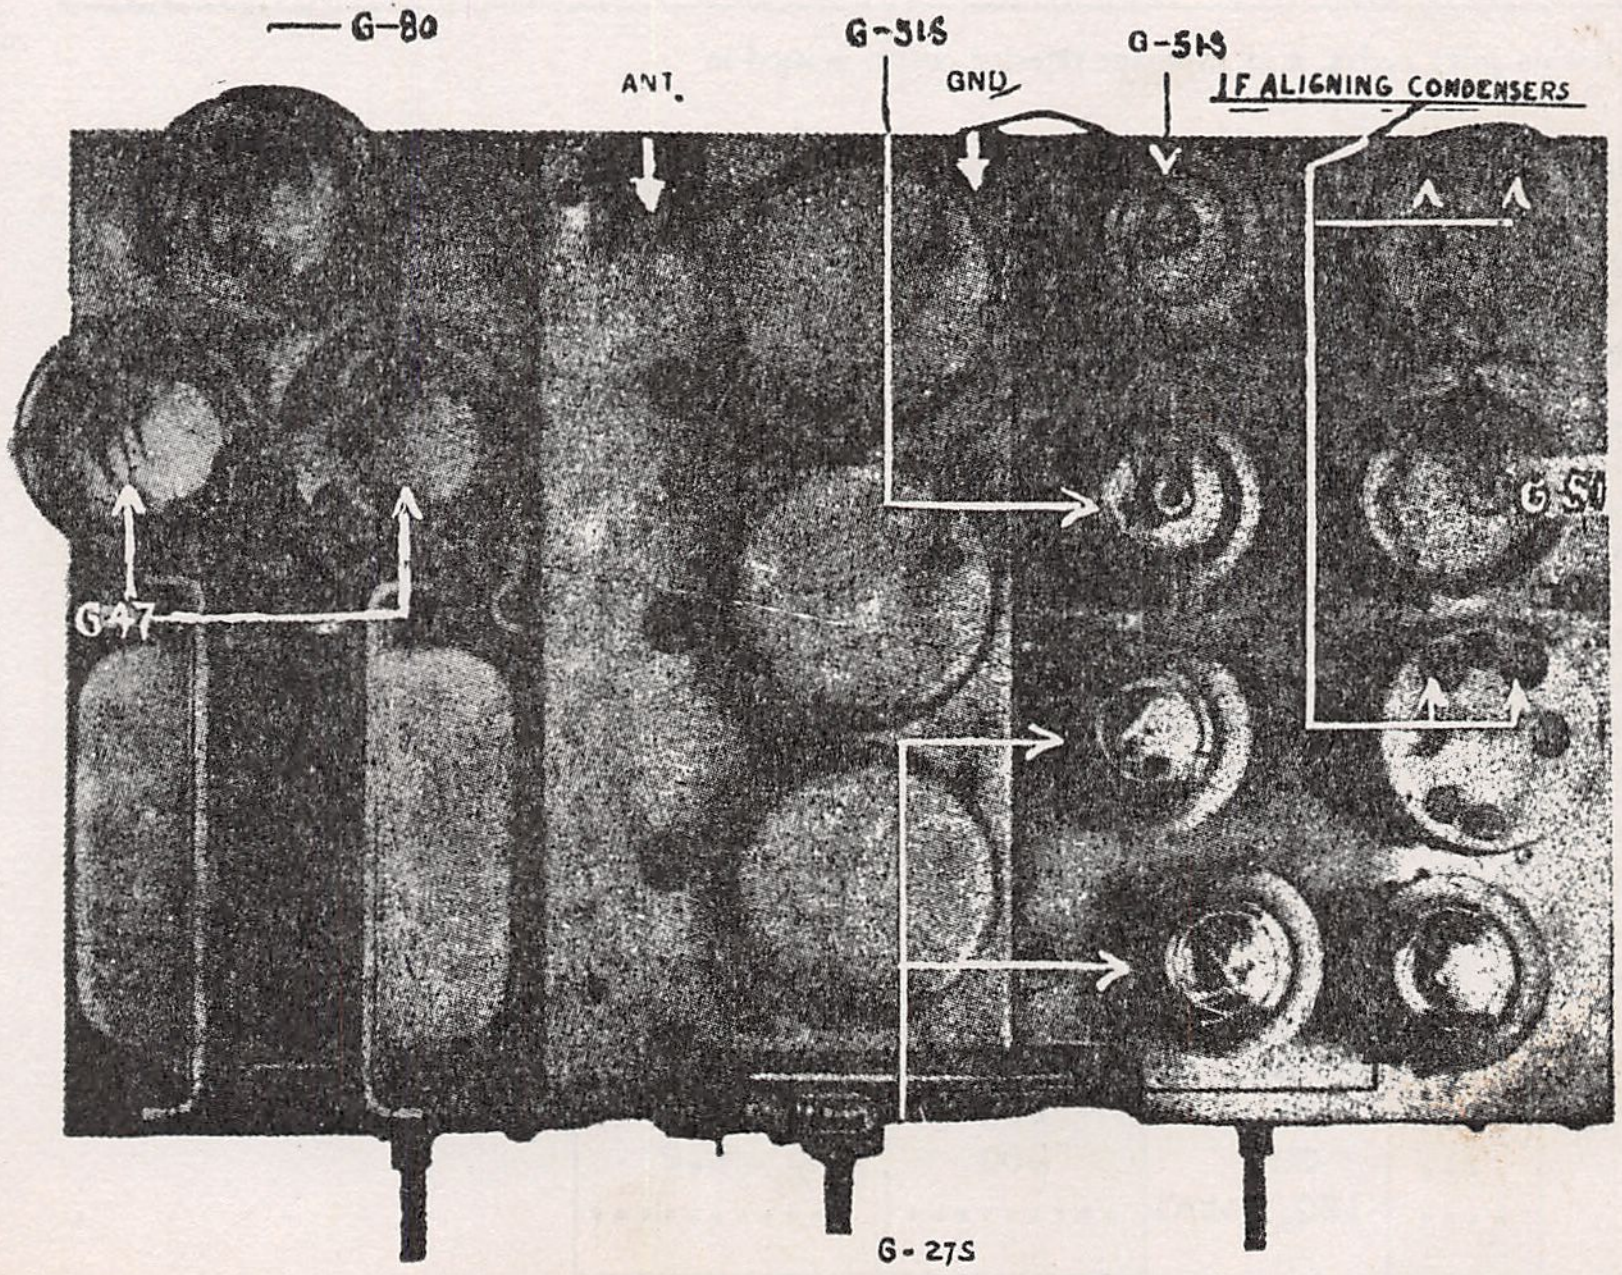
G-80
ANT.
G-51S
GND
G-51S
IF ALIGNING CONDENSERS
G47
G 51
G-27S

Top View Model 25 Chassis

Tube Purpose	Type	Fil. Volts A C.	Plate Volts D C	Fil. to Ground D.C	Cathode Volts	Plate Current M.A.- D.C.	Screen Volts
R F Amp	G-51's	2.5	260	—	3.5	5.0	90
1st Det	G-51's	2.5	260	—	8.0	1.0	90
Osc	G-27	2.5	90	—	—	3.5	—
I. F	G-51's	2.5	260	—	3.5	5.5	90
2nd Det	G-27's	2.5	115	—	—	14	—
2nd Det	G-27's	2.5	115	—	—	14	—
Power Amp.	G-47	2.5	245	-16.5	—	32	260
Power Amp.	G-47	2.5	245	16.5	—	32	260
Rectifier	G-80	5	400	—	—	120 (Total)	—

D C First Condenser 385 Volts
D C Second Condenser 130 Volts
Line Voltage 115 Volts

Speaker Field 70 Volts

Volume Control—Maximum

Table of Voltages to Ground
Model 25

MODEL 25-B
251,253,254
Schematic

GRIGSBY - GRUNOW CO.

MAJESTIC MODEL 25-B CHASSIS
RECEIVER MODELS CHELTENWOOD (251)- BRENTWOOD (253)- BRUCEWOOD (254)

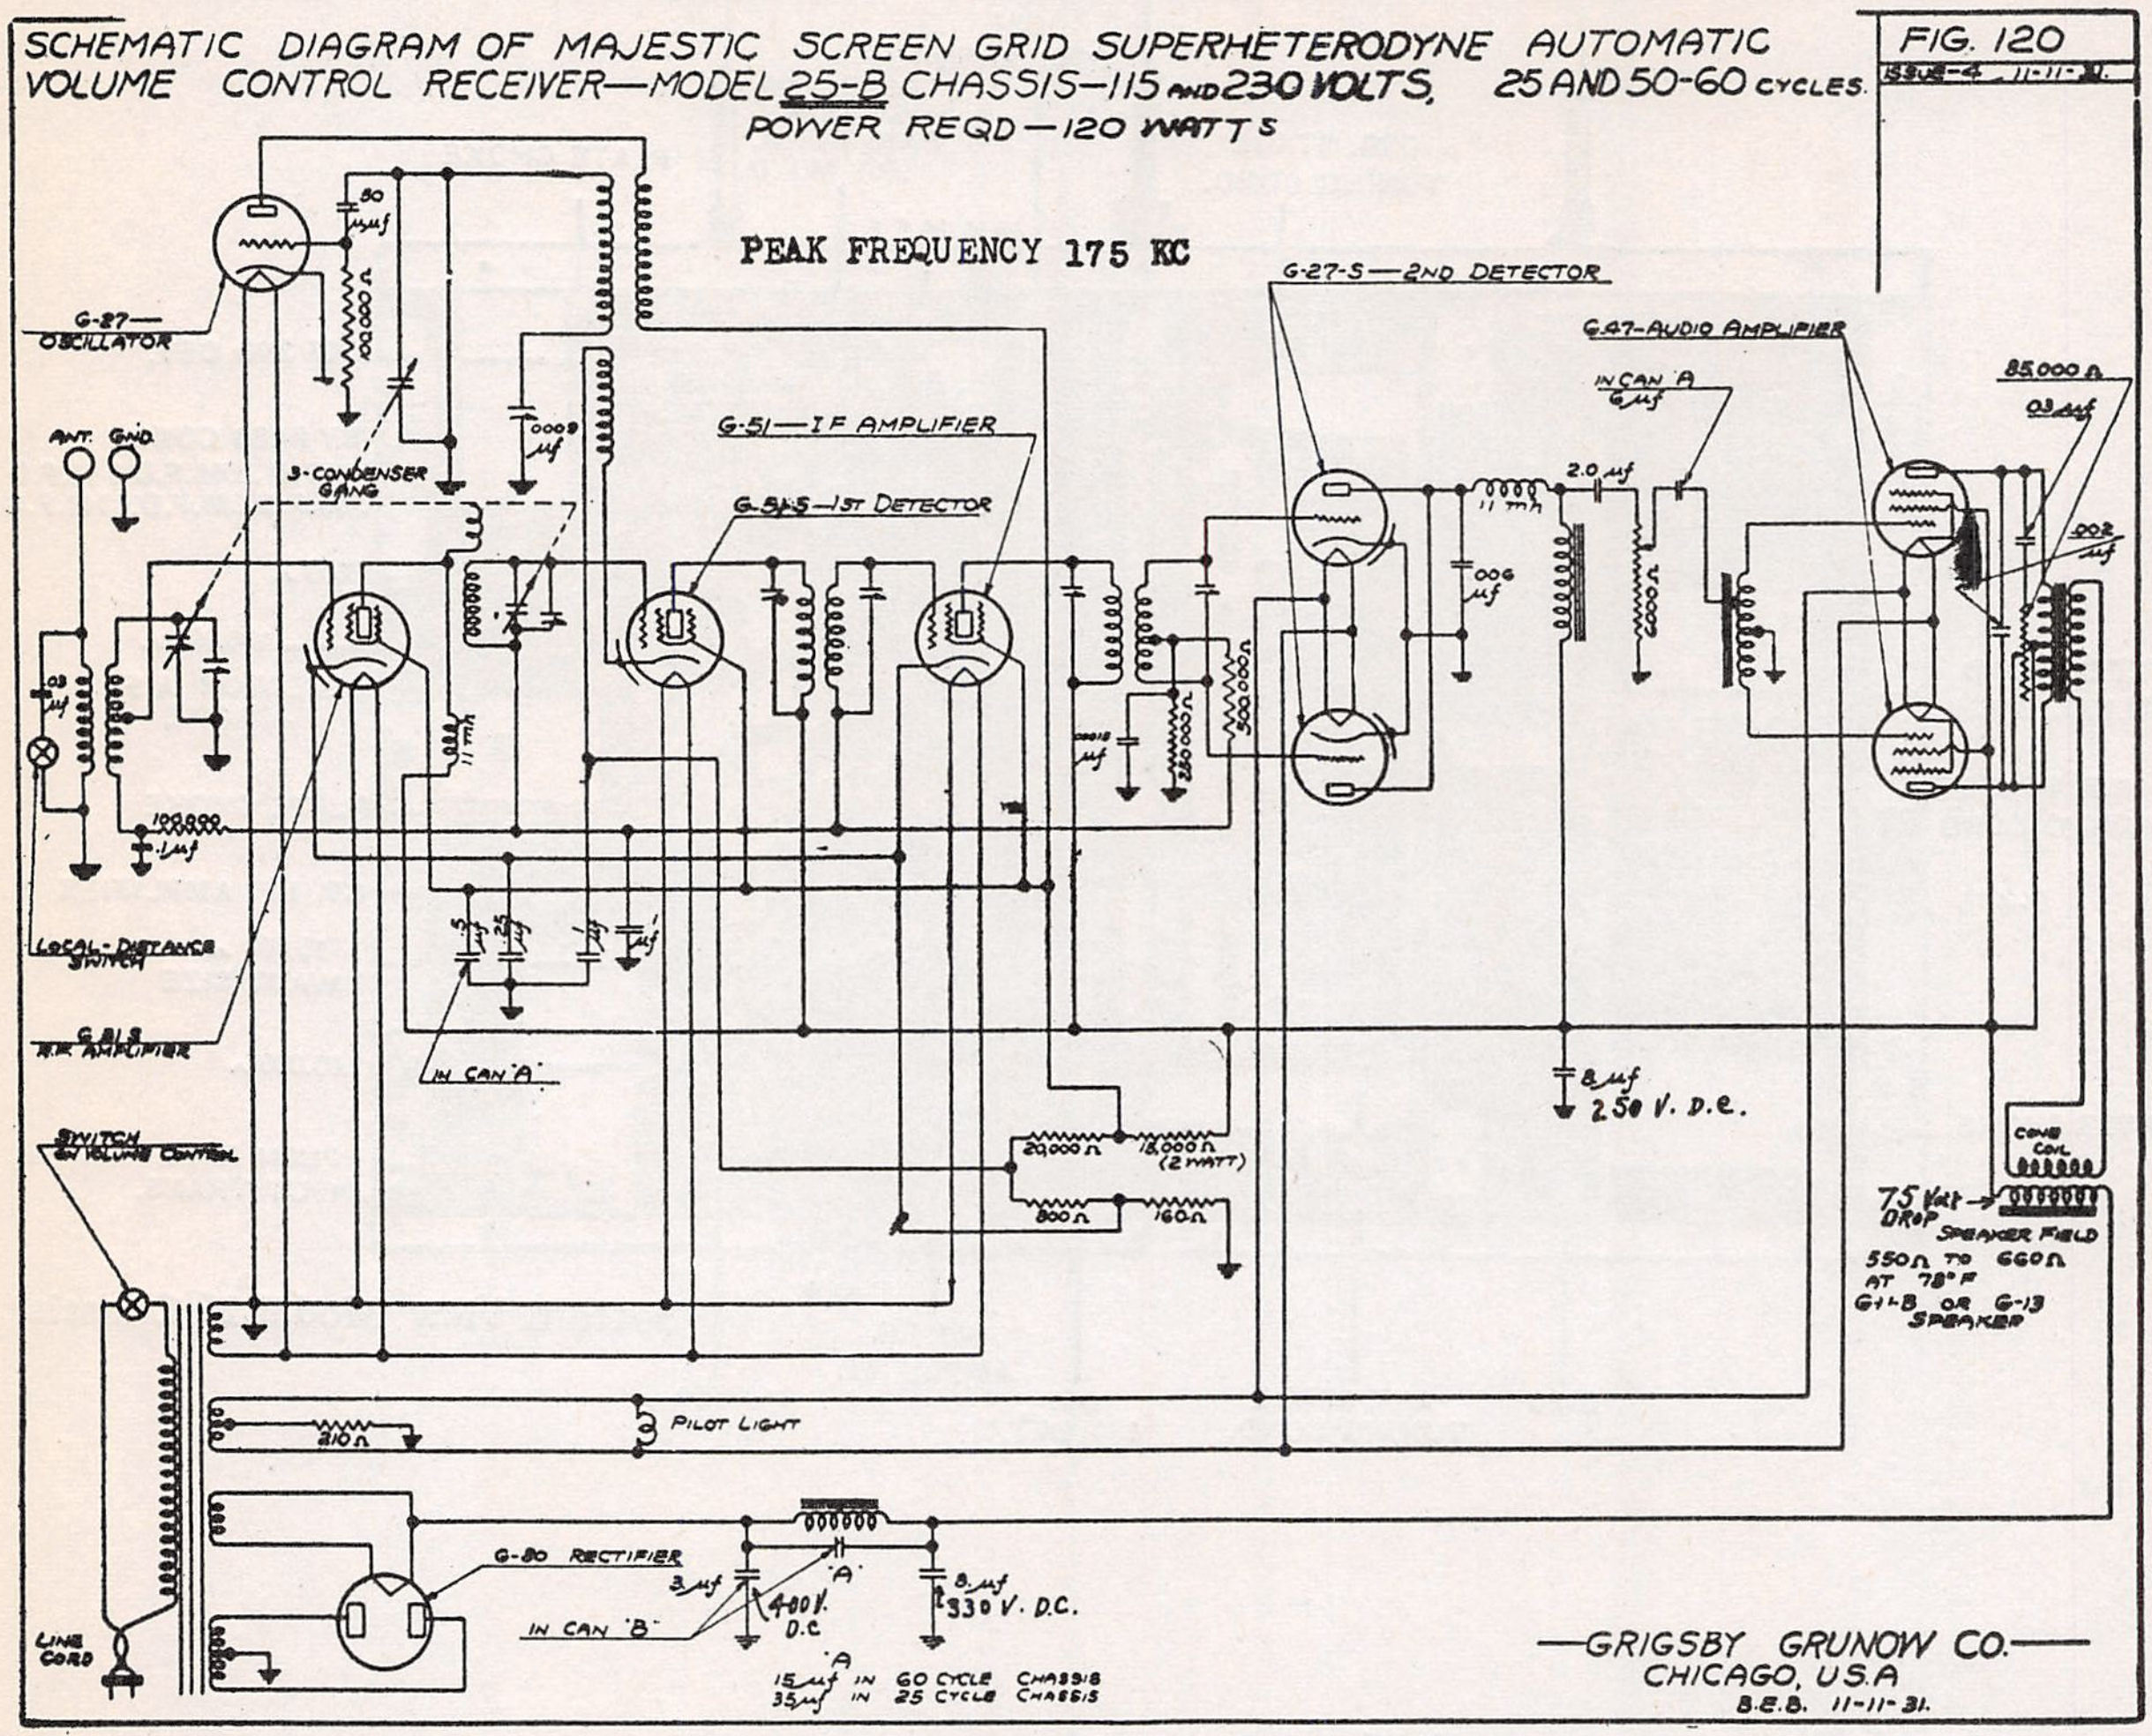
SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE AUTOMATIC VOLUME CONTROL RECEIVER—MODEL 25-B CHASSIS—115 AND 230 VOLTS, 25 AND 50-60 CYCLES.
POWER REQD—120 WATTS
FIG. 120
ISSUE-4 11-11-31.
PEAK FREQUENCY 175 KC
G-27— OSCILLATOR
50 μμf
100,000 Ω
.0009 μf
3-CONDENSER GANG
ANT. GND.
G-51—I F AMPLIFIER
G-51-S—1ST DETECTOR
.03 μf
100,000
.1 μf
11 mh
.5 μf
.25 μf
.1 μf
1 μf
LOCAL-DISTANCE SWITCH
G-51-S R.F. AMPLIFIER
IN CAN 'A'
SWITCH ON VOLUME CONTROL
.00018 μf
250,000 Ω
500,000 Ω
G-27-S—2ND DETECTOR
G-47-AUDIO AMPLIFIER
IN CAN 'A' 6 μf
11 mh
2.0 μf
.006 μf
500,000 Ω
85,000 Ω
.03 μf
.002 μf
8 μf 250 V. D.C.
20,000 Ω
18,000 Ω (2 WATT)
800 Ω
160 Ω
CONE COIL
75 Volt DROP
SPEAKER FIELD
550 Ω TO 660 Ω AT 78° F
G-1-B OR G-13 SPEAKER
PILOT LIGHT
2.10 Ω
G-80 RECTIFIER
3 μf
'A'
400 V. D.C.
8 μf 330 V. D.C.
IN CAN 'B'
15 μf IN 60 CYCLE CHASSIS
35 μf IN 25 CYCLE CHASSIS
LINE CORD
—GRIGSBY GRUNOW CO.—
CHICAGO, U.S.A
B.E.B. 11-11-31.

The audio system is tuned to give full bass response as low as forty cycles, also an image rejector circuit is used in the pre-selector to reduce image response.

Power Supply System

The power supply system on the Model 25B Chassis consists of a power transformer, G80 rectifier, filter choke (tuned) speaker field 3 mfd paper condenser and two 8 mfd. electrolytic condensers.

Color Code for Model 25-B Power Transformer

Start of Primary	Yellow	Center Tap No. 1 Heater	Red
Finish of Primary	Yellow	Finish of No. 1 Heater	Black
Start of Anode	Red	Start of No. 2 Heater	Yellow
Center Tap (Anode)	Black	Finish of No. 2 Heater	Yellow
Finish of Anode	Red	Start 5 v. Fil.	Black
Start of No. 1 Heater	Black	Finish 5 v. Fil.	Black

MODEL 25-B Line 115 Volts Vol. Contr. Max.

TUBE	CIRCUIT	FIL.	PLATE	F.to GRND.	CATH.	CURRENT	S.G.VOLTS	S.G.CURRENT
G-51-S	R.F.Amp.	2.5	260	....	3	4.2	90	1.2
G-51-S	1st Det.	2.5	260	....	7	1.3	90	.4
G-27	Osc.	2.5	90	....	....	3.5	....	....
G-51-S	I.F.	2.5	260	....	3	5.	90	1.6
G-27-S	2nd Det.	2.5	135	16	....	14.	....	....
G-27-S	2nd Det.	2.5	135	16	....	14.	....	....
G-47	Power	2.5	250	16	....	30.	250	7.2
G-47	Power	2.5	250	16	....	30.	250	7.2
G-80	Rect.	5.	....	400	....	120 Total	....	....

MODEL 25-B
251,253,254
Chassis Views

GRIGSBY - GRUNOW CO.

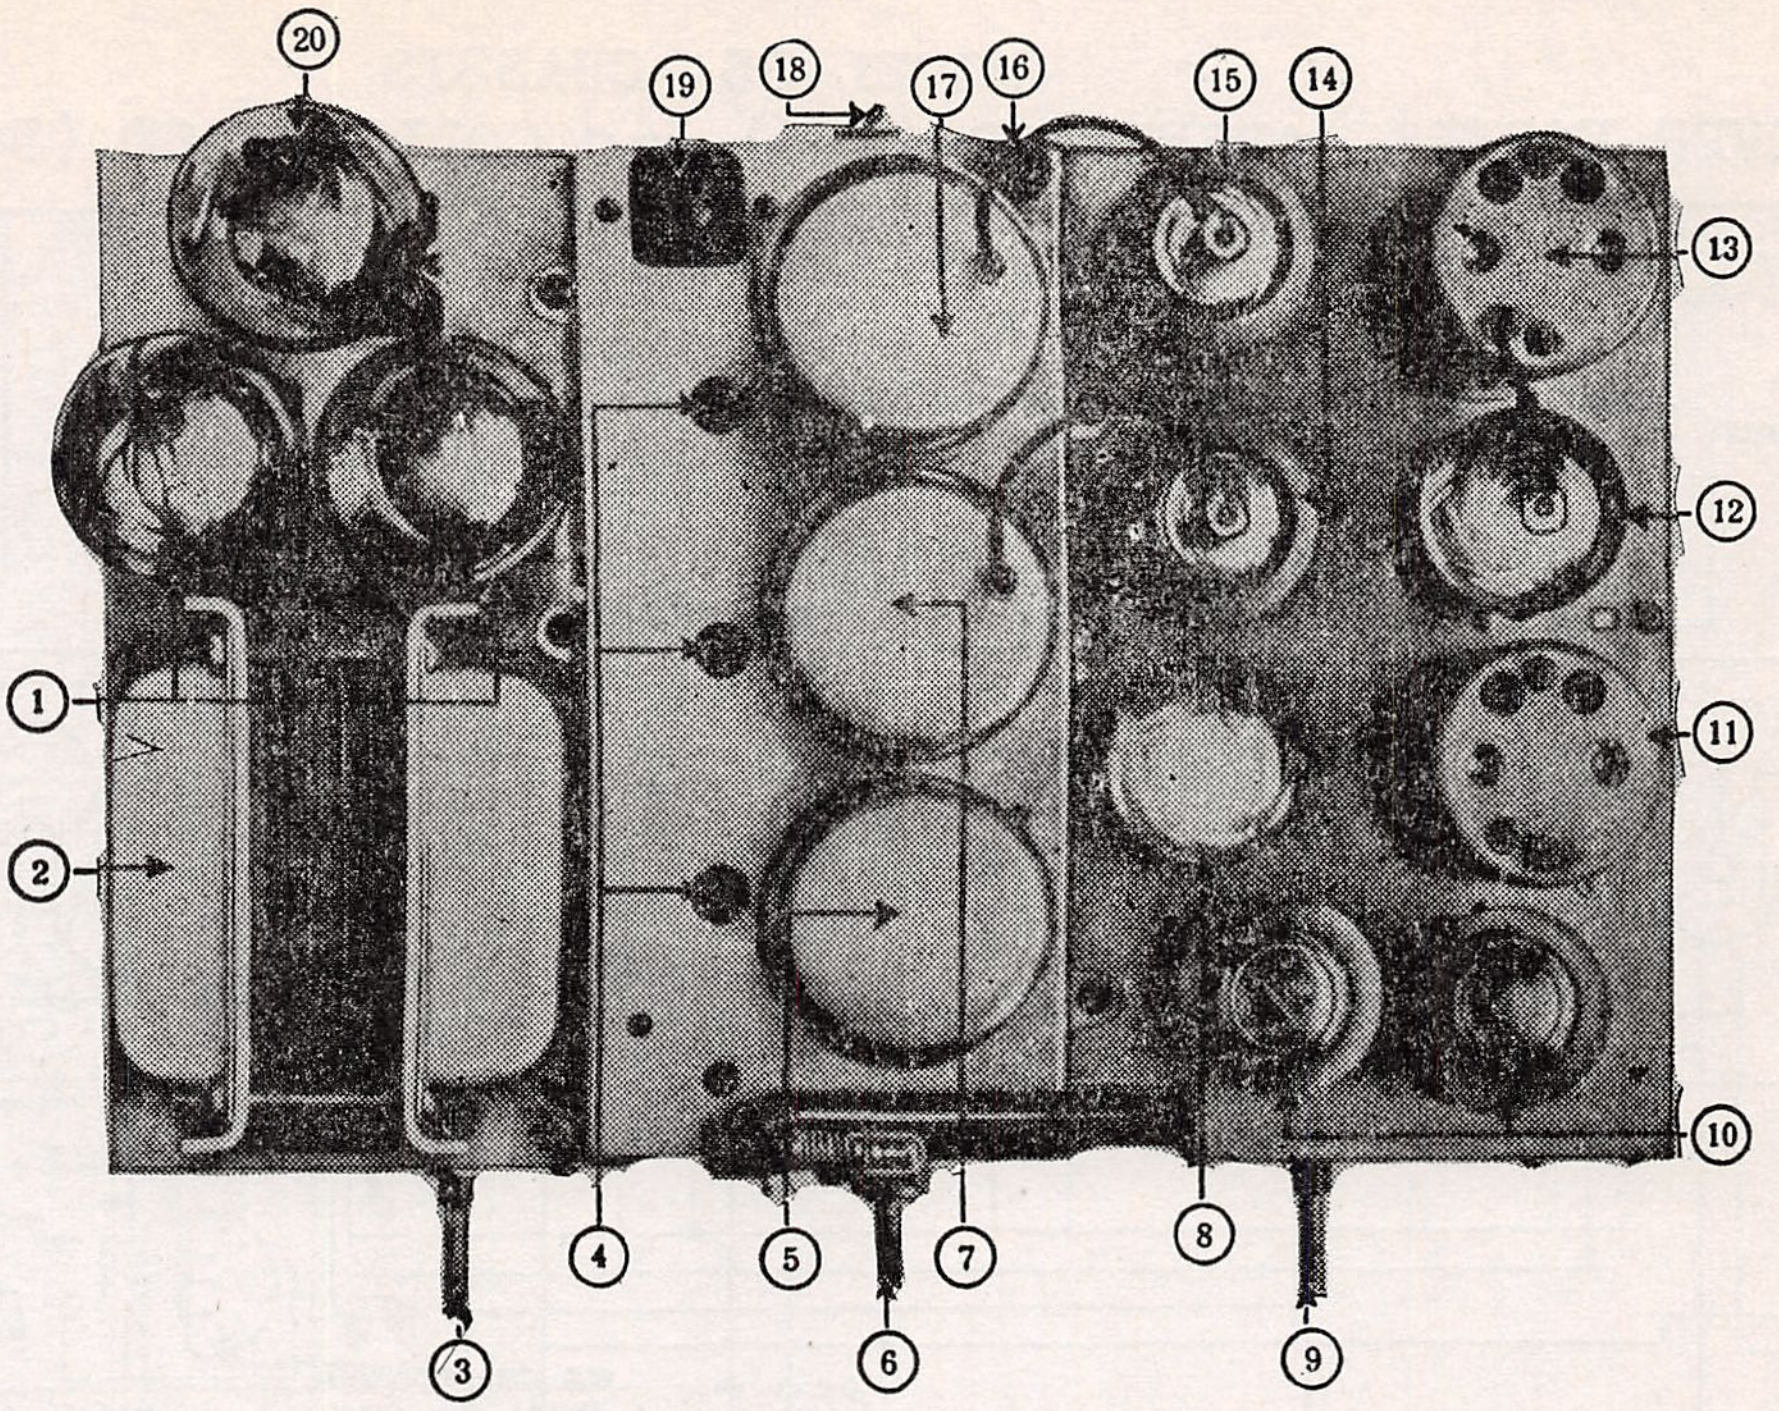

Top View of Model 25B Chassis

1. G47 Pentode Audio Amplifier Tubes
2. Power Transformer
3. Tone Control
4. Aligning Condensers
5. Oscillator Coil
6. Tuning Control
7. R. F. Coil
8. G27 Oscillator Tube
9. Volume Control and Line On-Off Switch
10. G-27-S Second Detector Tubes
11. 2nd I. F. Transformer
12. G-51 I. F. Amplifier Tube
13. First I. F. Transformer
14. G-51-S 1st Detector Tube
15. G-51-S R. F. Amplifier Tube
16. Ground Post
17. Antenna Coil
18. Local-Distance Switch
19. Antenna Post
20. G-80 Rectifier Tube

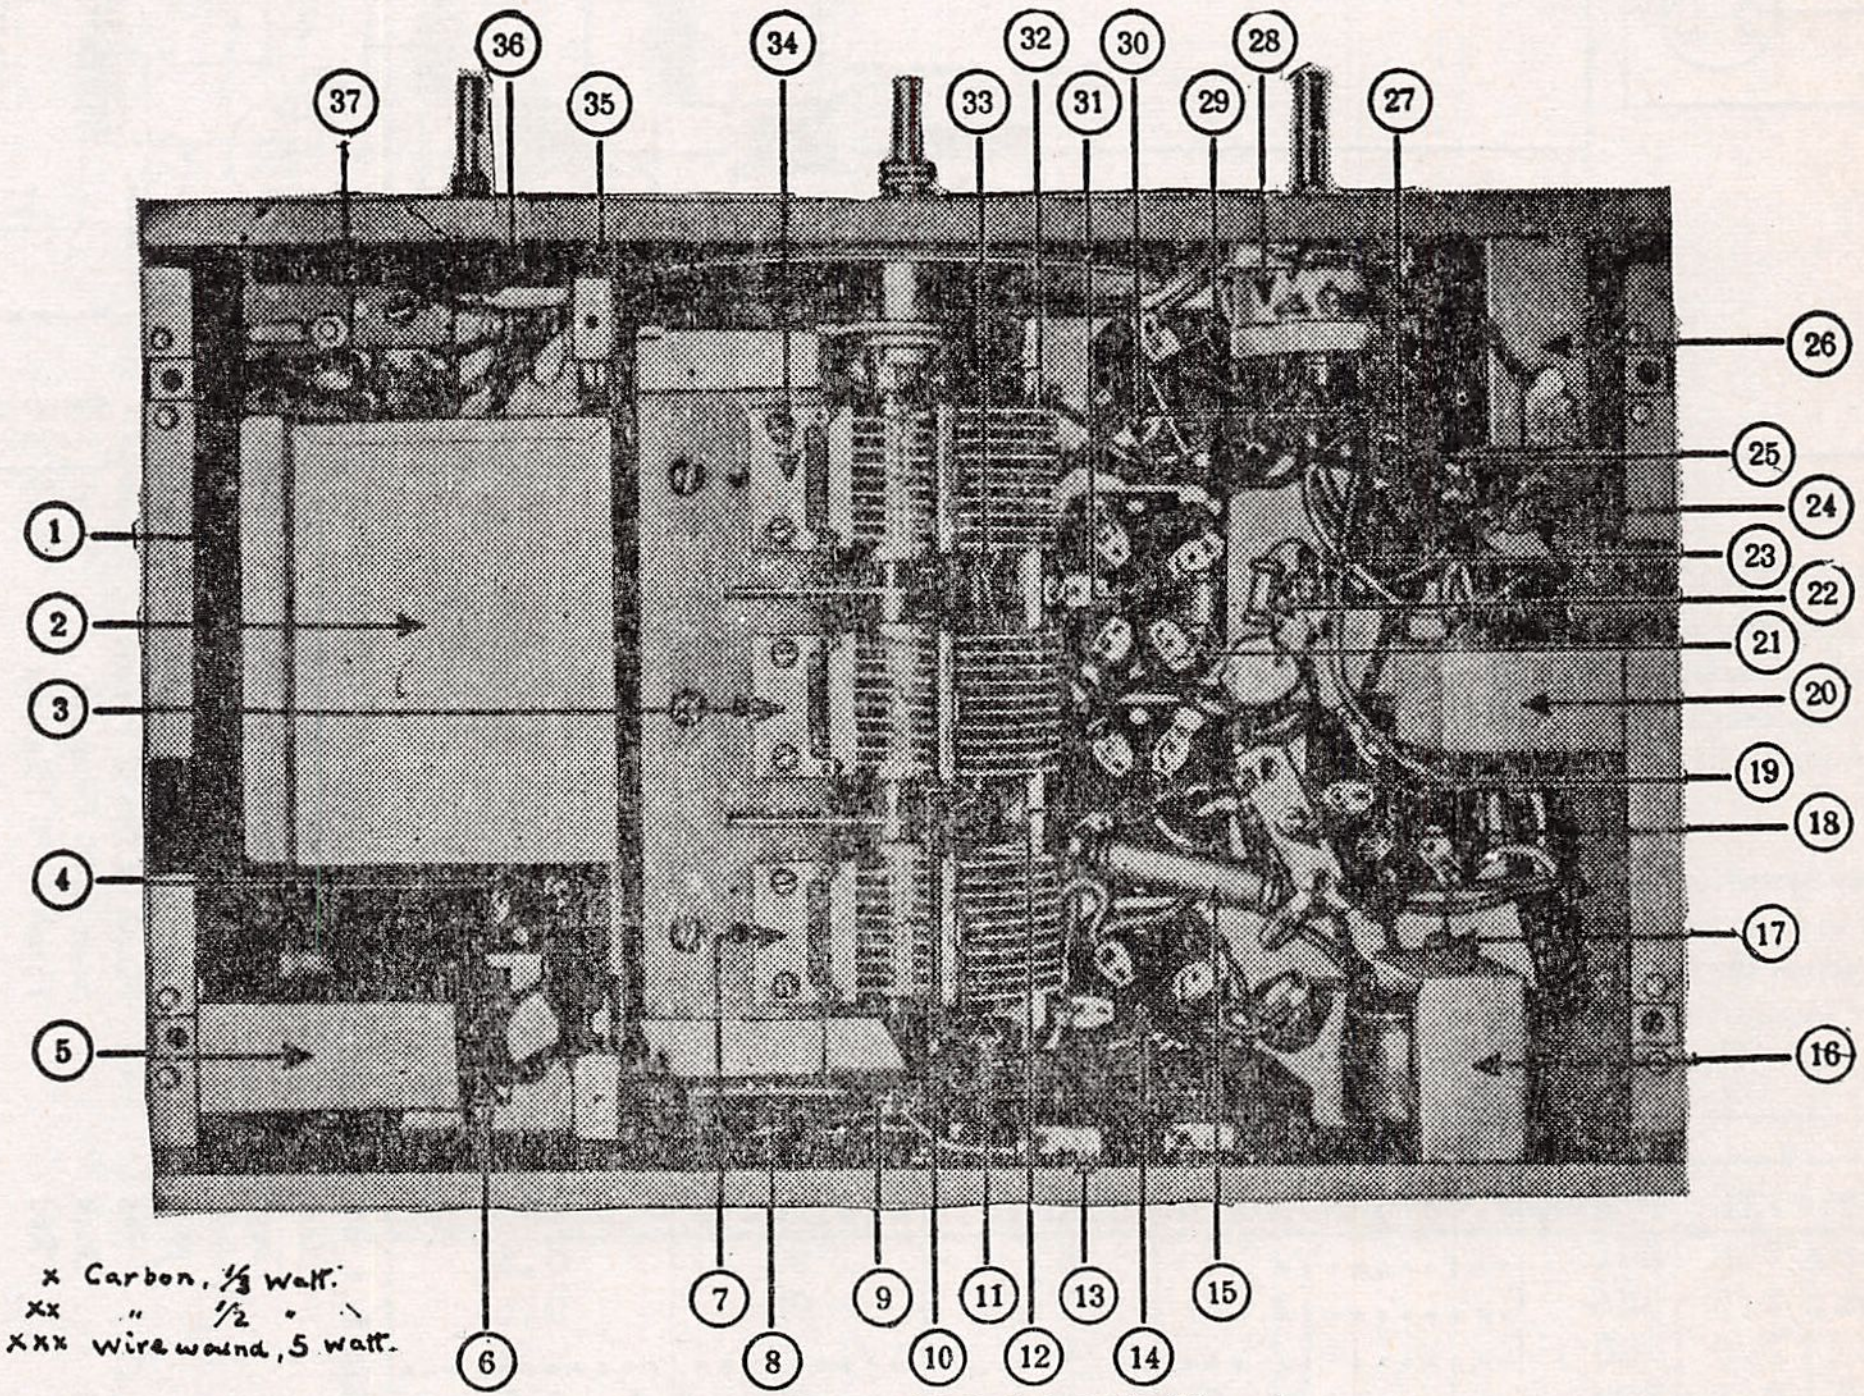

x Carbon, 1/3 watt.
xx " 1/2 "
xxx Wirewound, 5 watt.

Bottom View of Model 25B Chassis

1. 8 mfd. Cond. (2)
2. 3 mfd. and .15 mfd. Cond.
3. R. F. Stage Tuning Cond.
4. G-47 P.P. Audio Sockets
5. Filter Choke
6. G-80 Rectifier Socket
7. Ant. Stage Tuning Cond.
8. .03 mfd. Local-Distance Cond. (Cartridge)
9. Local-Distance Switch
10. 100,000 Ohm Resistor x
11. .1 mfd. Cond. (Cartridge)
12. G-51-S First Det. Socket
13. "Can C" Cond. Assembly
14. G-51-S R. F. Amplifier Socket
15. 15,000 Ohm Resistor xxx
16. Push-Pull Input Choke
17. 160 Ohm Resistor x
18. R. F. Choke
19. G-51-S I. F. Amplifier
20. Det. Plate A. F. Choke
21. 100,000 Ohm Resistor x
22. 250,000 Ohm Resistor x
23. 500,000 Ohm Resistor x
24. 800 Ohm Resistor x
25. 20,000 Ohm Resistor xx
26. "Can A" Cond. Assembly
27. .00015 mfd. Mica Cond.
28. Volume Control and Line Switch
29. .006 Mfd. Mica Cond.
30. G-27-S 2nd Det. Sockets
31. G27 Oscillator Socket
32. .00005 mfd. Mica Cond.
33. .1 mfd. Cond.
34. Oscillator Stage Tuning Cond.
35. Oscillator Tracking Cond.
36. Tone Control
37. .03 mfd. Tone Control Cond.

MODEL 35
351,353
Schematic

GRIGSBY - GRUNOW CO.

MODEL 35 CHASSIS
RECEIVER MODELS ABBEYWOOD (353) and COLLINGWOOD (351)

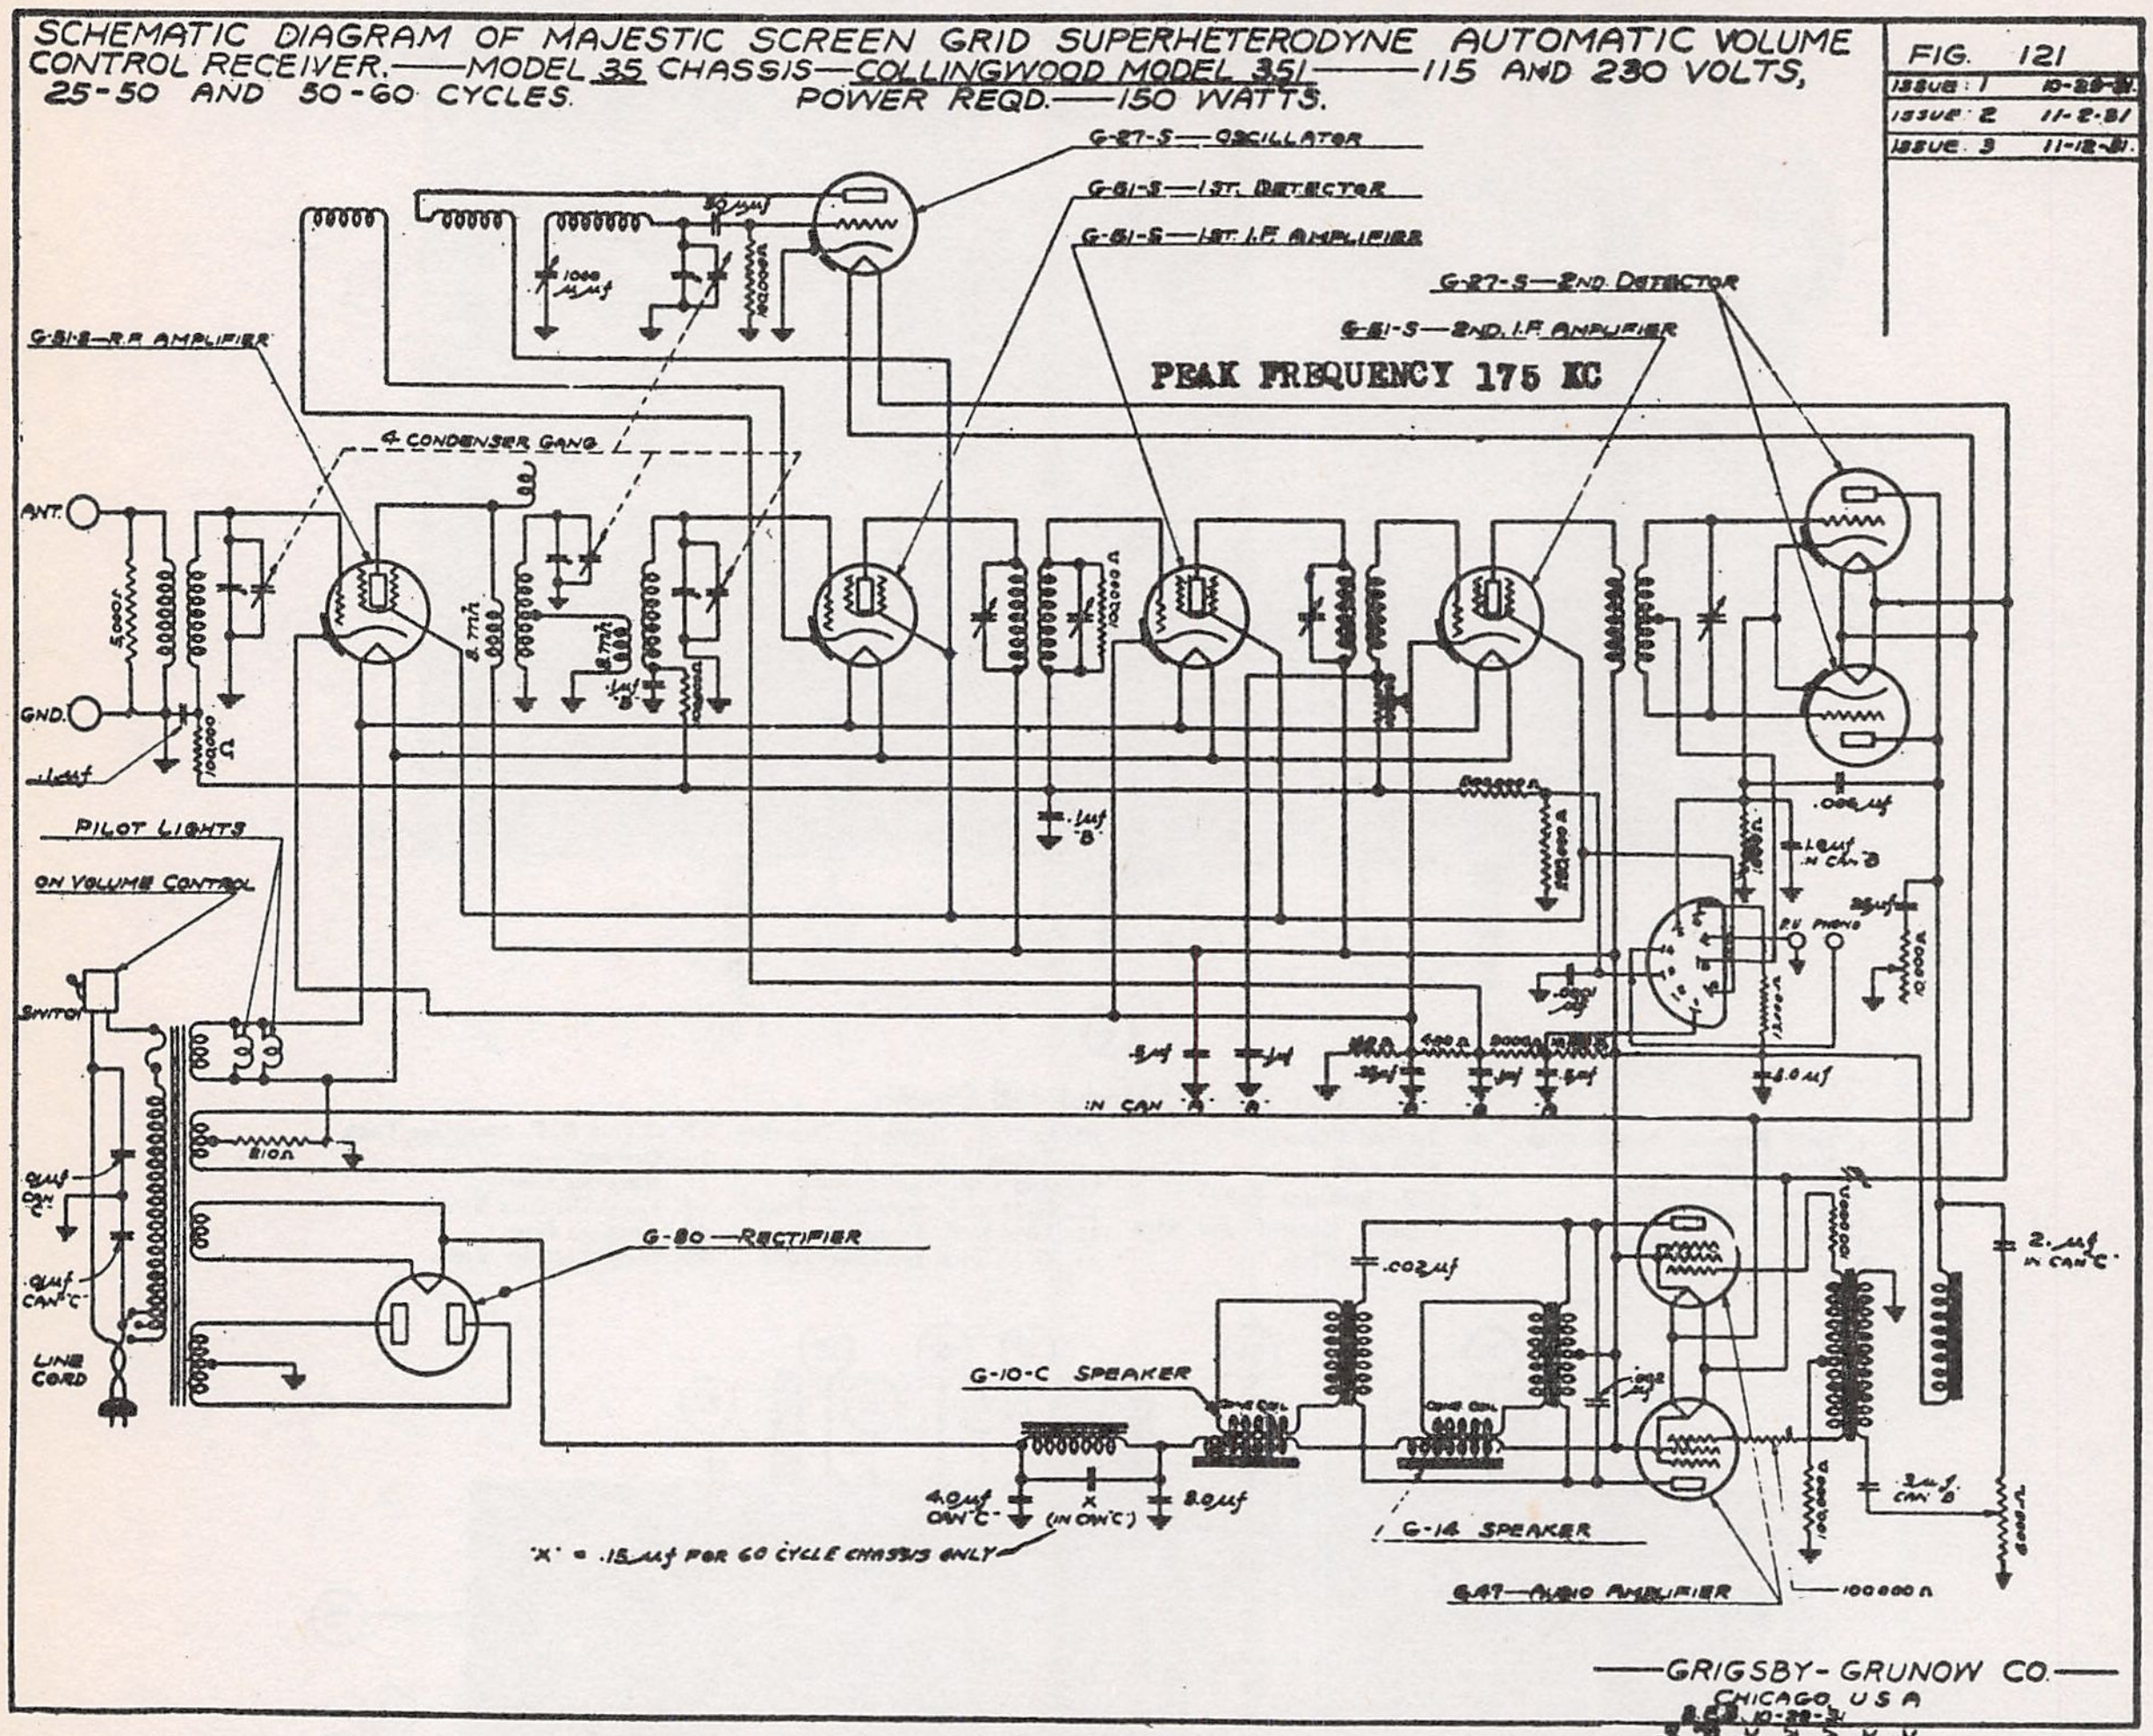
SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE AUTOMATIC VOLUME CONTROL RECEIVER.—MODEL 35 CHASSIS—COLLINGWOOD MODEL 351—115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES. POWER REQD.—150 WATTS.
FIG. 121
ISSUE: 1 10-28-31
ISSUE: 2 11-2-31
ISSUE: 3 11-12-31
G-27-S—OSCILLATOR
G-51-S—1ST. DETECTOR
G-51-S—1ST. I.F. AMPLIFIER
G-27-S—2ND DETECTOR
G-51-S—2ND. I.F. AMPLIFIER
PEAK FREQUENCY 175 KC
G-51-S—R.F. AMPLIFIER
4 CONDENSER GANG
ANT.
GND.
PILOT LIGHTS
ON VOLUME CONTROL
SWITCH
LINE CORD
G-80—RECTIFIER
G-10-C SPEAKER
G-14 SPEAKER
G-47—AUDIO AMPLIFIER
"X" = .15 mf FOR 60 CYCLE CHASSIS ONLY
IN CAN
—GRIGSBY-GRUNOW CO.—
CHICAGO U.S.A.

Radio-Phonograph Switch

Both the COLLINGWOOD and ABBEYWOOD Models have a radio-phonograph switch which is located below the central control or station selector. This switch is turned to the right for radio operation and to the left for phonograph operation. There are pick-up terminals on the Model 35 chassis employed in both these sets, although the COLLINGWOOD Model is not a combination receiver. There should always be a jumper across the pickup terminals when the pickup is not attached.

Power Supply System

The power supply system of the Model 35 chassis consists of a power transformer, G-80 rectifier, a filter choke which is tuned to hum frequency, a 4 mfd. paper condenser, and two 8 mfd. electrolytic condensers. The condenser employed across the filter choke is a .15 mfd. for sixty cycle operation, and a .35 mfd. for twenty-five cycle operation. The output from this filter section passes through the fields of both dynamic speakers which act as additional chokes to the filter circuit.

MODEL 35			Line 115 Volts					
TUBE	CIRCUIT	FIL.	PLATE	F.to GRND.	CATH.	CURRENT	S.G.VOLTS	S.G.CURRENT
G-51-S	R.F.Amp.	2.5	265	....	4	5	90	0.5
G-51-S	1st Det.	2.5	265	....	8	1	90	0.5
G-27	Osc.	2.5	90	....	...	4	....	....
H-51-S	1st I.F.	2.5	265	....	4	5	90	0.5
G-51-S	2nd I.F.	2.5	265	....	4	5	90	0.5
G-27-S	2nd Det.	2.5	115	....	...	12	....	....
G-27-S	2nd Det.	2.5	115	....	...	12	....	....
G-47	Power	2.5	250	16.5	...	32	260	7
G-47	Power	2.5	250	16.5	...	32	260	7
G-80	Rect.	5.0	...	....	...	130 Total	....	....

Color Code for Model 35 Power Transformer

Start of Primary	Black	Start of No. 1 Heater	Black
1st Tap of Primary	Green	Center Tap No. 1 Heater	Red
2nd Tap of Primary	Yellow	Finish of No. 1 Heater	Black
Finish of Primary	Blue	Start of No. 2 Heater	Yellow
Start of Anode	Red	Finish of No. 2 Heater	Yellow
Center Tap (Anode)	Black	Start G-80 Filament	Black
Finish of Anode	Red	Finish G-80 Filament	Black

MODEL 25-B
MODEL 35
Alignment

GRIGSBY - GRUNOW CO.

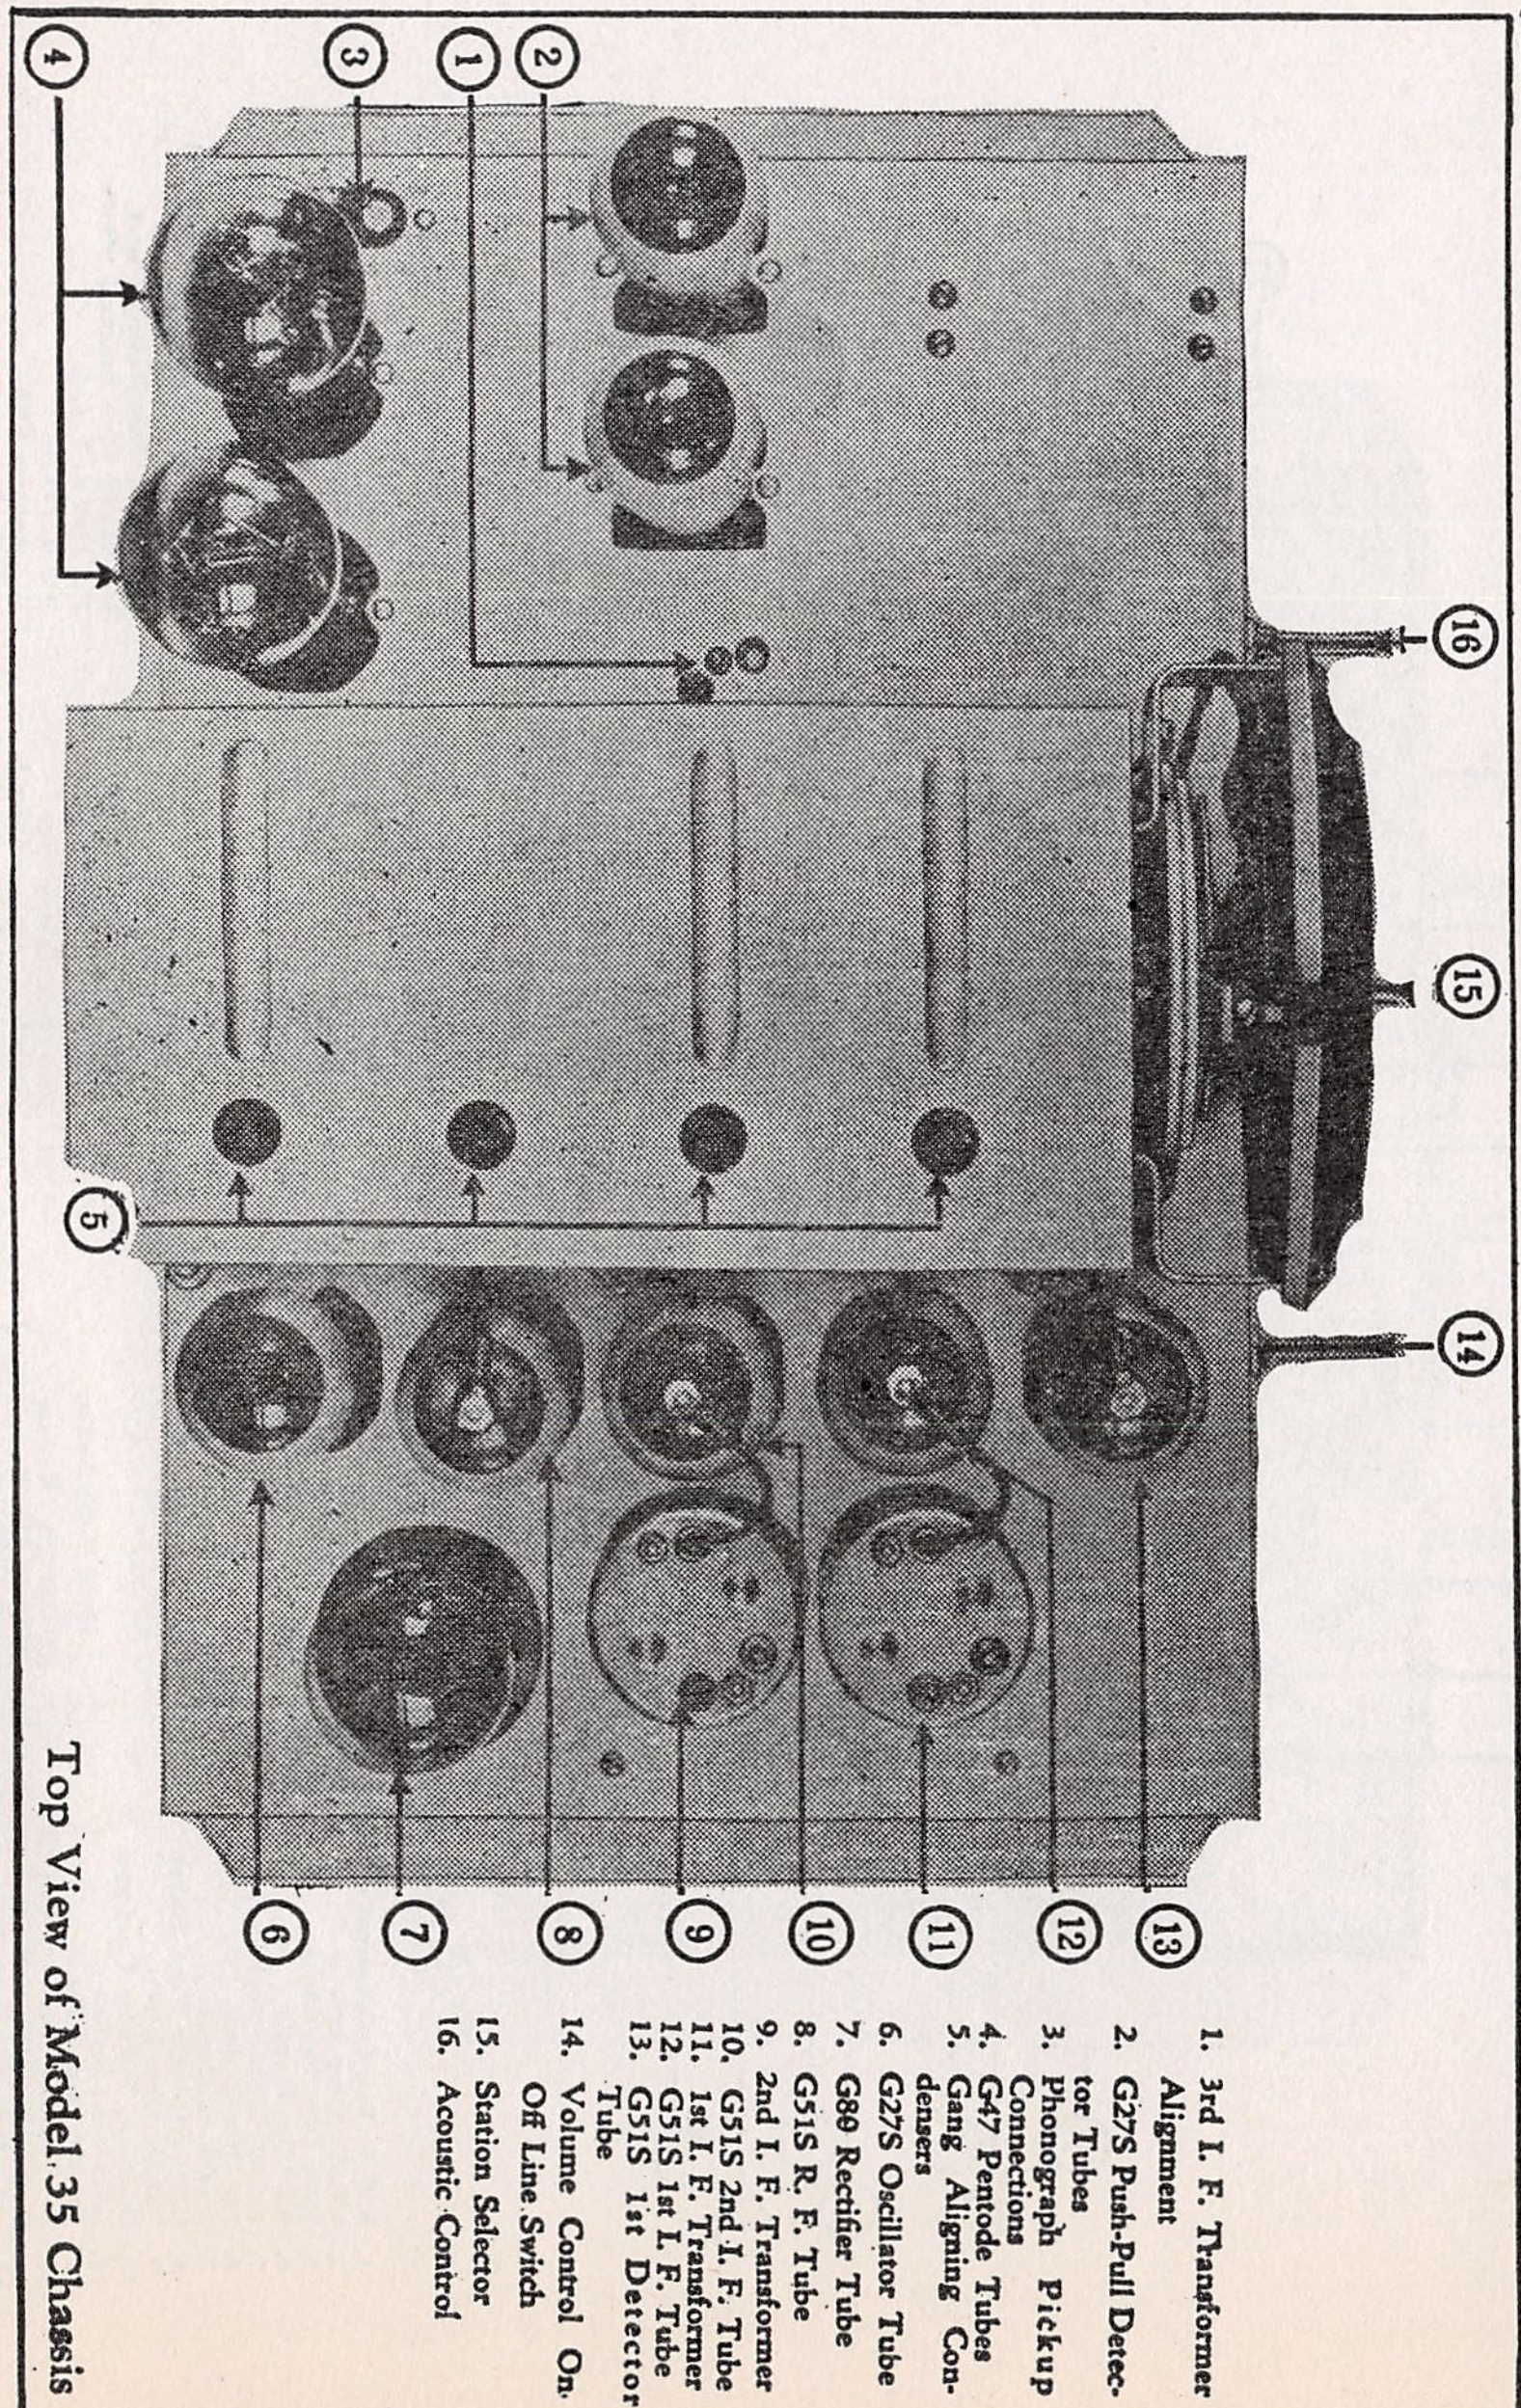

1. 3rd I. F. Transformer Alignment
2. G27S Push-Pull Detector Tubes
3. Phonograph Pickup Connections
4. G47 Pentode Tubes
5. Gang Aligning Condensers
6. G27S Oscillator Tube
7. G80 Rectifier Tube
8. G51S R. F. Tube
9. 2nd I. F. Transformer
10. G51S 2nd I. F. Tube
11. 1st I. F. Transformer
12. G51S 1st I. F. Tube
13. G51S 1st Detector Tube
14. Volume Control On. Off Line Switch
15. Station Selector
16. Acoustic Control

Top View of Model 35 Chassis

Technical Data
Models 25B and 35 Chassis

Procedure for Alignment

WARNING: The Power Line shall never be connected to the receiver until the speaker and tubes are connected in the receiver.

The receiver shall be aligned with the volume control set at maximum and input reduced to keep output below 1 watt.

1. Supply 175 K.C. on 1st detector grid and adjust all I.F. tuning condensers to give maximum sensitivity.

2. Set dial at 1500 K.C. and line up all radio frequency circuits on 1500 K.C. signal for maximum output.

3. Set dial at 550 K.C. and adjust oscillator tracking condenser for maximum sensitivity with 550 K.C. feeding into the set. For each adjustment of the oscillator tracking condenser, there will be a different dial setting for maximum sensitivity. The combination of tracking condenser adjustment and dial setting which gives maximum sensitivity, disregarding calibration is the correct adjustment. If this adjustment falls within 5 K.C. of the 550 K.C. calibration point, readjust trimmers at 1500 K.C. and check dial calibration at 1000 K.C.

Each Receiver Must Be Aligned for Maximum Sensitivity. Check volume control throughout its range for noise, open or short circuit and irregularity of control operation. Check acoustic control over entire range for noise, open, short circuit and operation.

Automatic Volume Control System

The manual control is a 6,000 ohm potentiometer between second detectors and output tubes, operating entirely independent of the automatic control.

Automatic control is accomplished by applying the second detector grid bias on the R.F., Detector and I. F Stages to control their amplification, and by the inherent control of audio amplification in the second detector stage, due to the same bias.

Sensitivity

In cases where low sensitivity is encountered, the first step taken to remedy the condition, should be to check the G51S Tubes, which may be drawing abnormal grid current. This procedure should always be taken prior to any attempt to remedy by aligning the condenser gang.

Method of Biasing

The necessary bias obtained on the R. F., First Detector and I. F. is obtained from a bleeder circuit. The Oscillator is self-biasing with grid current drop across the 100,000 ohm grid resistor. The second detectors are self-biasing from a grid current drop across the 250,000 ohm grid resistor. The pentodes are also self-biasing by the 210 ohm wire-wound resistor in the filament circuit.

"Off" and "On" Line Switch

The "Off" and "On" Line Switch is attached to the volume control shaft. Turning the volume control completely to the left shuts the receiver off. The first fifteen degrees rotation of the control to the right will turn the receiver on. The balance of rotation to the right controls the volume of the receiver.

MODEL 35
351,353
Chassis Views

GRIGSBY - GRUNOW CO.

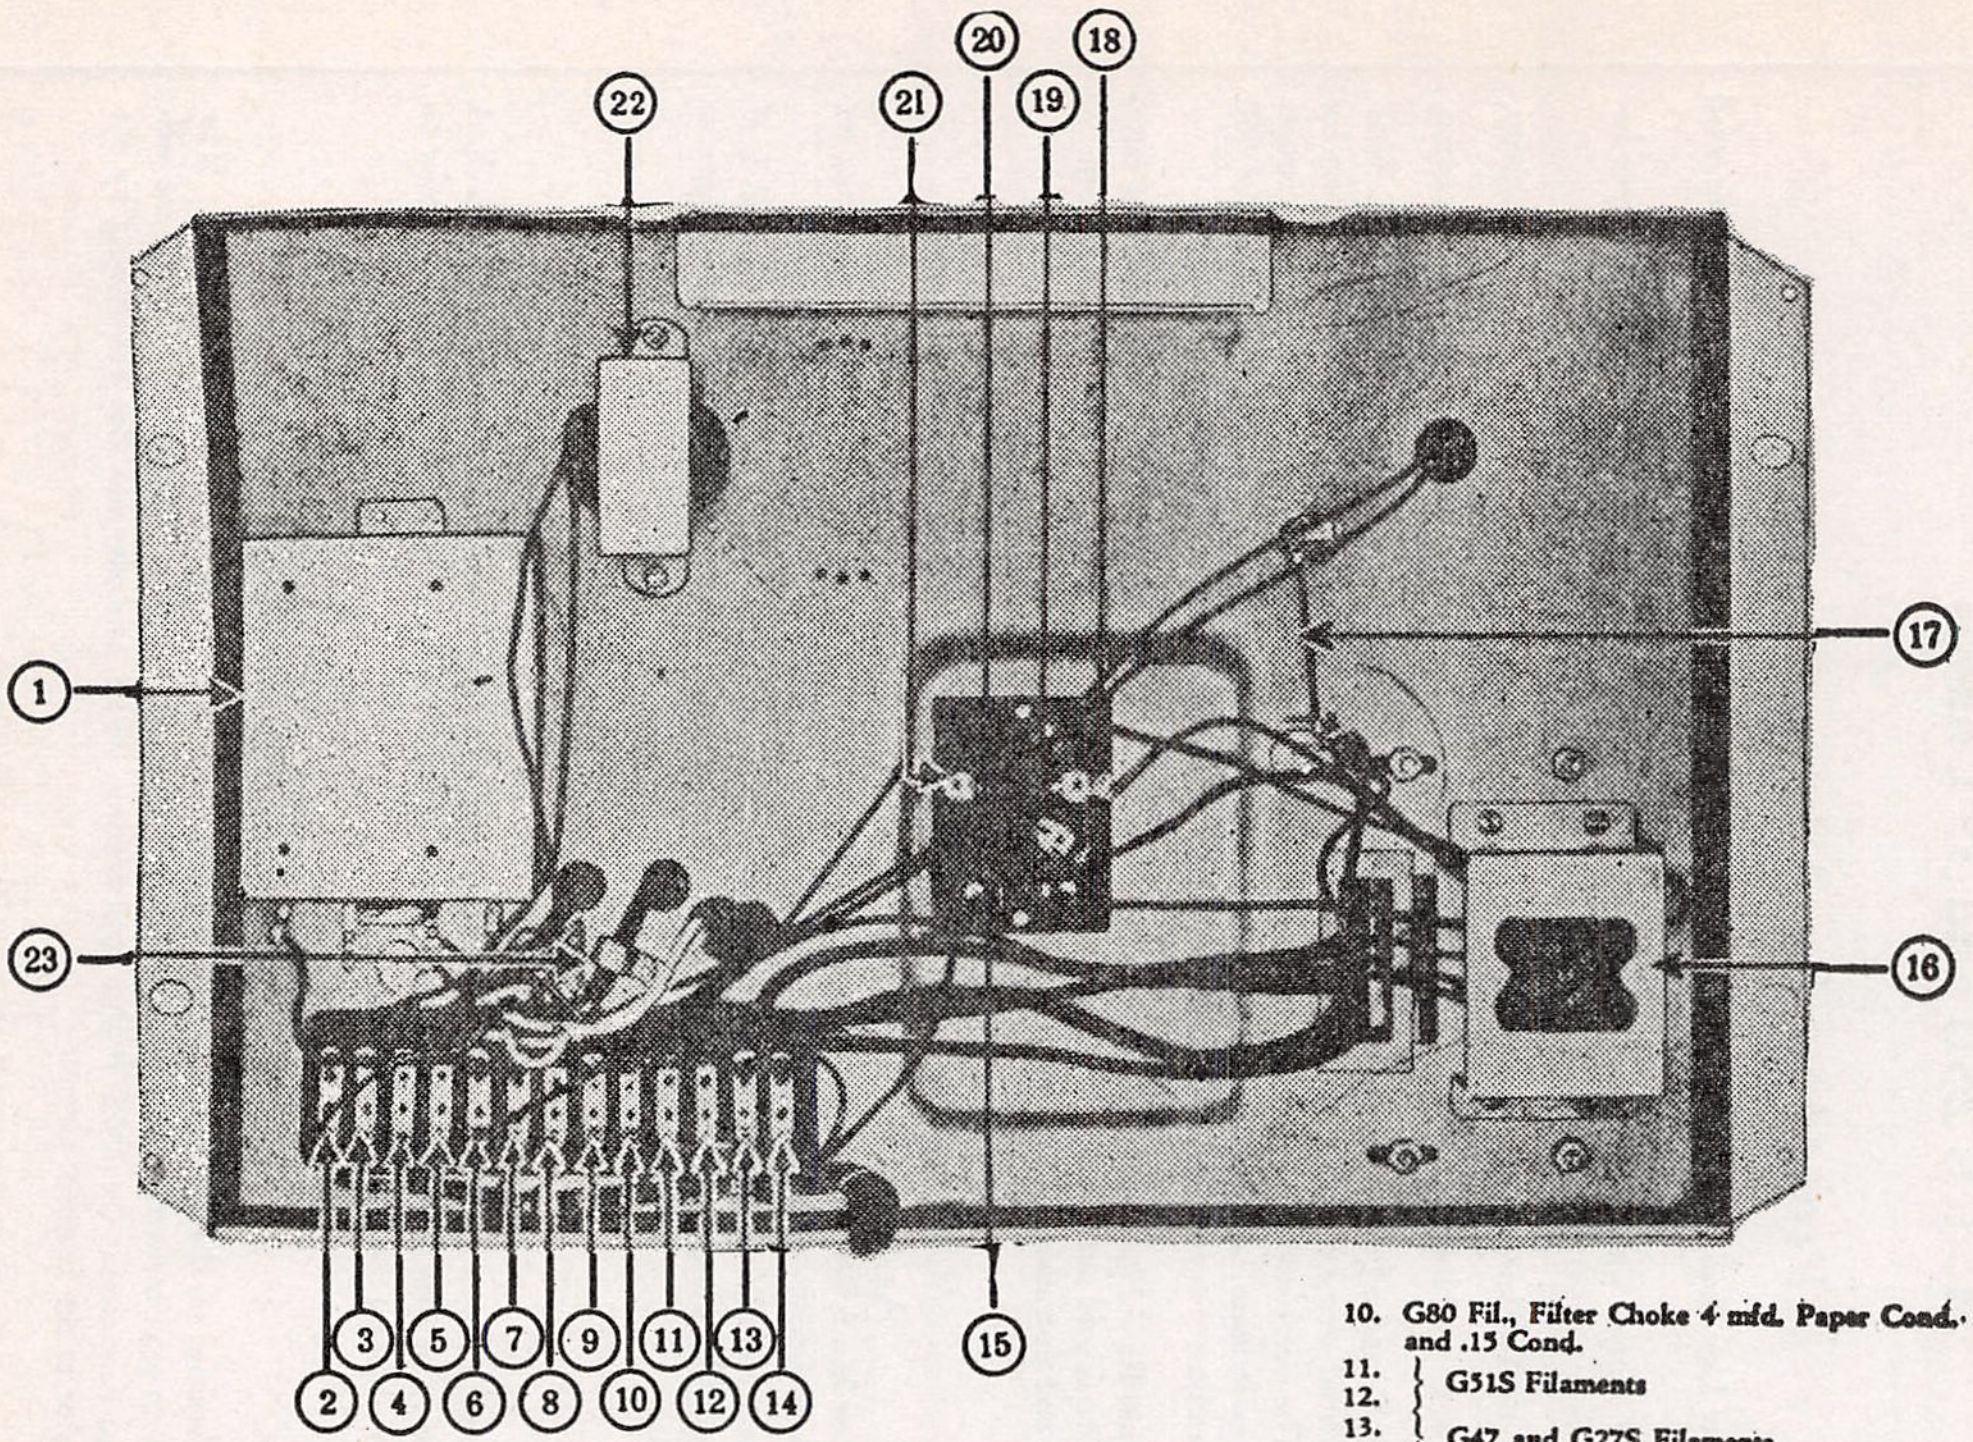

View Showing Power Supply Circuit of Model 35 Chassis

1. 2—8 mfd. Electrolytic Condensers
2. 285 V. to G47 Screens, 8 mfd. Electrolytic Cond. Det. Audio Choke and G14 Speaker Field
3. 2 mfd. Cond. Det. Audio Choke and Second Det. Plates
4. 2 mfd. Cond. and Volume Control
5. 110 V. Line Cord—On and Off Switch and .01 Cond.
6. 110 V. Line Cord—Primary Switch and .01 Cond.
7. G47 Plate and Input to Speakers
8. G47 Plate and Input to Speakers
9. Power Filter Choke G-10C Speaker Field, .15 Cond. and 8 mfd. Electrolytic Cond.
10. G80 Fil., Filter Choke 4 mfd. Paper Cond. and .15 Cond.
11. } G51S Filaments
12. }
13. } G47 and G27S Filaments
14. }
15. Fuse
16. G80 Rectifier Socket
17. 210 Ohm Resistor
18. 125 V. Primary Tap
19. 115 V. Primary Tap
20. 105 V. Primary Tap
21. Line
22. Audio Frequency Choke
23. Junction G10C—G14 Speaker Fields

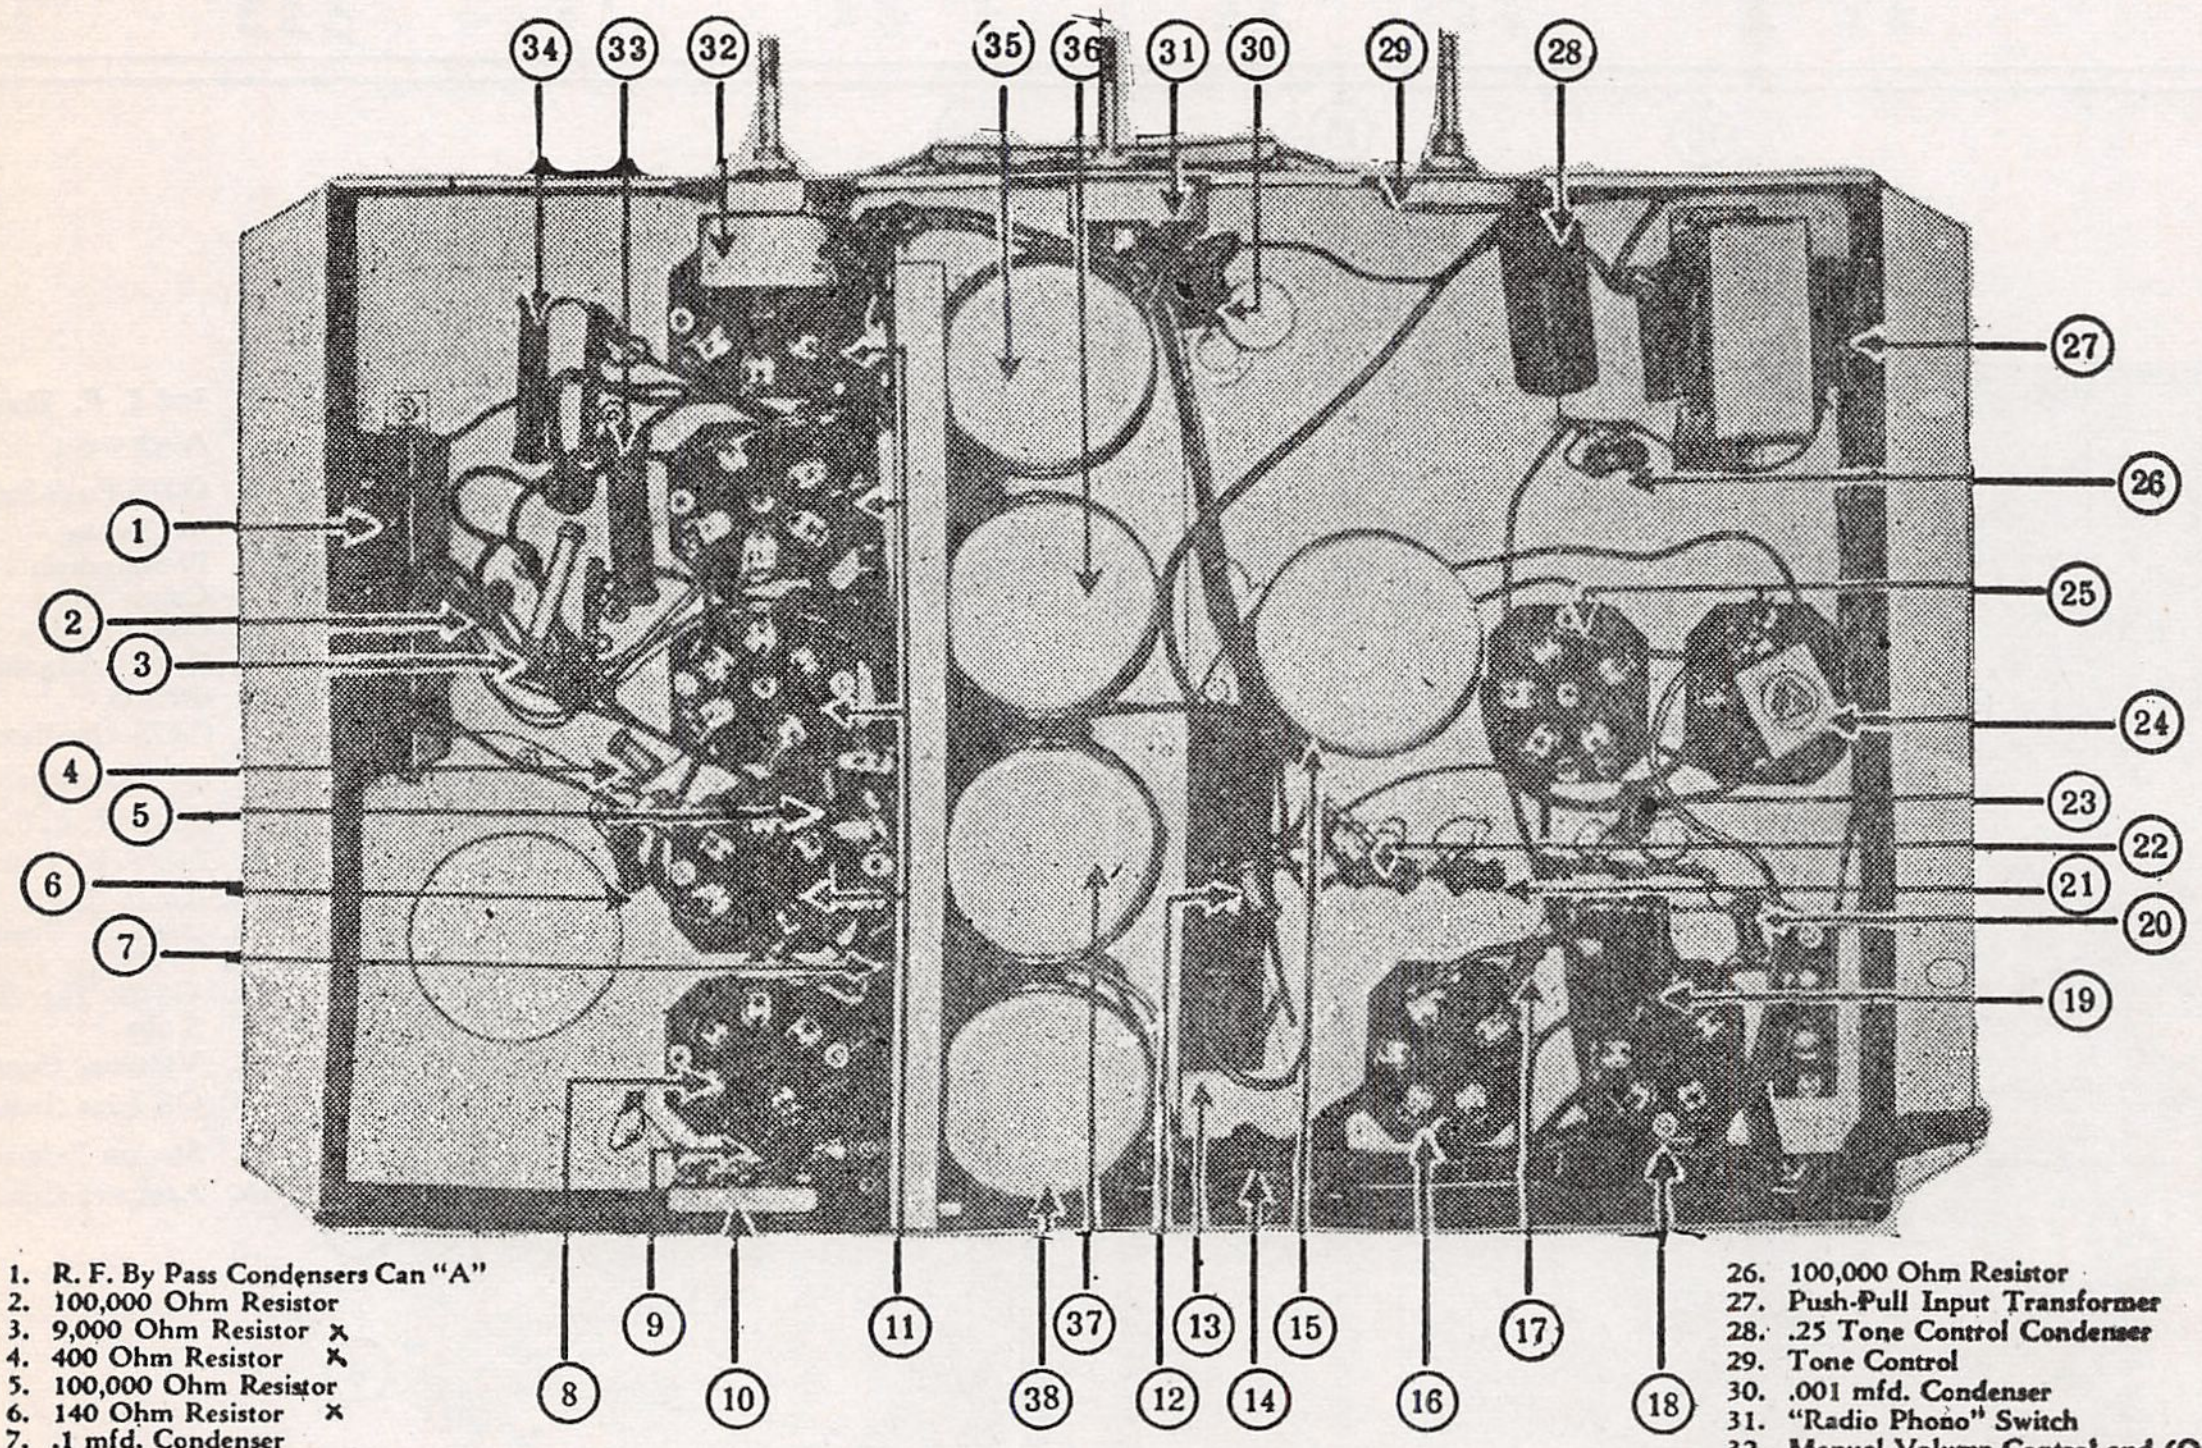

Interior View of Model 35 Chassis

1. R. F. By Pass Condensers Can "A"
2. 100,000 Ohm Resistor
3. 9,000 Ohm Resistor x
4. 400 Ohm Resistor x
5. 100,000 Ohm Resistor
6. 140 Ohm Resistor x
7. .1 mfd. Condenser
8. G27S Oscillator Tube Socket
9. 100,000 Ohm Resistor
10. Oscillator Tracking Condenser
11. G51S Tube Sockets
12. 100,000 Ohm Resistor
13. R. F. By Pass Condenser Can "B"
14. 5000 Ohm Resistor x
15. 3rd I. F. Transformer
16. } G47S Tube Sockets
18. }
17. 100,000 Ohm Resistor
19. .002 mfd. Condenser (Mica)
20. 100,000 Ohm Resistor
21. 250,000 Ohm Resistor x (x Carbon)
22. 500,000 Ohm Resistor x
23. 1000 Ohm Resistor x
24. .006 mfd. Condenser (Mica.)
25. G27S Push-Pull Detector Sockets
26. 100,000 Ohm Resistor
27. Push-Pull Input Transformer
28. .25 Tone Control Condenser
29. Tone Control
30. .001 mfd. Condenser
31. "Radio Phono" Switch
32. Manual Volume Control and (Off and On) Line Switch
33. 10,000 Ohm Resistor } wire wound
34. 13,000 Ohm Resistor }
35. Link R. F. Coil
36. R. F. Coil
37. Antenna Coil
38. Oscillator Coil

MODEL 25-B
MODEL 35
Speaker Conn.

GRIGSBY - GRUNOW CO.

MAJESTIC CHASSIS MODELS 25-B and 35

CHASSIS 25-B
DYNAMIC SPEAKER
MODEL G-10-C
" G-13-B
" " G-14
" G-14-B

CHASSIS 35
DYNAMIC SPEAKER
MODEL G-11-B
" G-13

G-10-C Speaker
COLLINGWOOD Model

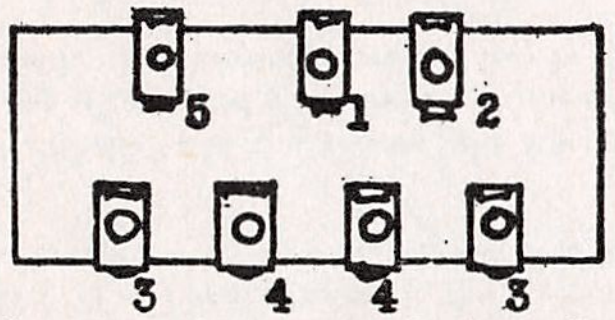

1 Primary Plate Lead Terminal
2 .002 Cond. Plate Terminal
3 Speaker Field Terminals
4 Voice Coil & Secondary Junct.
5 Primary & .002 Cond. Junction

G-14 Speaker
COLLINGWOOD Model

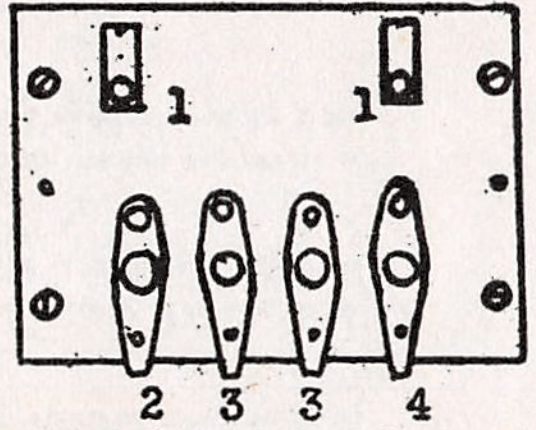

1 Voice Coil & Output Sec. Junct.
2 Field Coil & Primary Tap Junct.
3 Primary Plate Lead Terminals
Field Coil Terminal

G-14-B Speaker
ABBEYWOOD Model

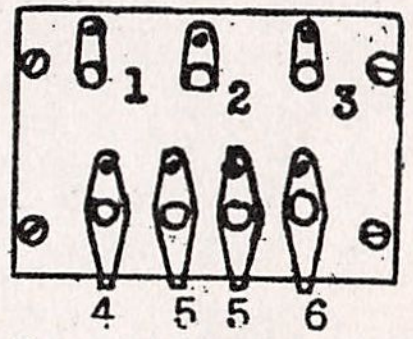

1 Output Sec. & Voice Coil
of G-14-B & G-13-B Junction
2 Voice Coil of G-13-B & Output
Secondary Junction
3 Voice Coil of G-14-B & Output
Secondary Junction
4 Field Coil & Primary Tap Junct.
5 Primary Plate Lead Terminals
6 Field Coil Terminals

G-13-B Speaker
ABBEYWOOD Model

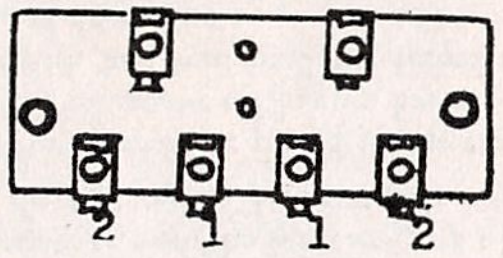

1 Voice Coil & Output Sec. Junct.
2 Field Coil Terminals

Models G-10-C, G-13-B, G-14 and G-14-B Dynamic Speakers Employed in Models Collingwood and Abbeywood

Both the COLLINGWOOD and ABBEYWOOD Models are equipped with twin speakers. The COLLINGWOOD Model employs the G-10-C, a small dynamic speaker (field resistance 200 ohms) for the high notes and the G-14, a large dynamic speaker (field resistance 750 ohms) for the low notes. The ABBEYWOOD Model employs the G-13-B dynamic speaker (field resistance 300 ohms) for the high notes and the G-14-B dynamic speaker (field resistance 550 ohms) for the low notes. The voice coil of the G-14-B is excited by one-half of the secondary of the output transformer which is located in the base of the speaker, and the voice coil of the G-13-B is excited by the other one-half of the same secondary. These speakers operating simulataneously produce an almost flat audio frequency response curve that gives these receivers a truly faithful reproduction.

G-13 Speaker
BRENTWOOD and BRUCEWOOD Models

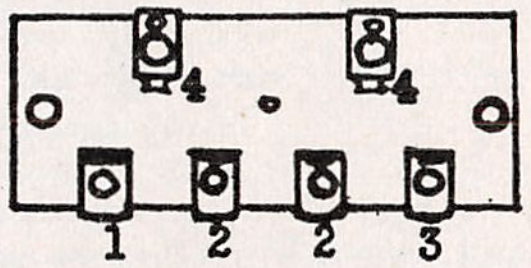

1 Field Coil Terminal
2 Voice Coil & Output Sec. Junct.
3 Field Coil & Primary Tap Junct.
4 Primary Plate Lead Terminals

G-11-B Speaker
CHELTENWOOD Model

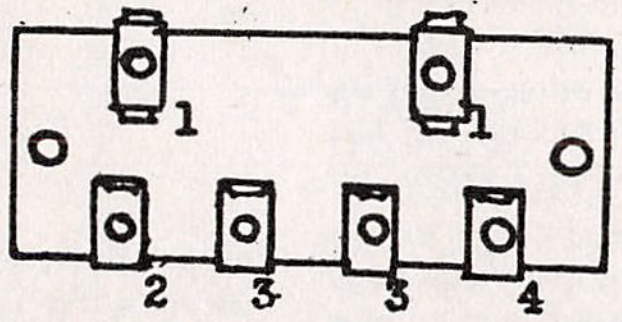

1 Primary Plate Lead Terminals
2 Field Coil Terminal
3 Voice Coil & Output Secondary Junct.
4 Field Coil & Primary Tap Junction

Models G-11-B and G-13 Dynamic Speakers Employed in Models Cheltenwood, Brentwood and Brucewood

The Models G-11-B and G-13 Dynamic Speakers have a field resistance of 570 ohms at 78° F. The G-11-B Speaker which is employed in the Cheltenwood Model, has a field structure of heavy "U" construction, and a 9.5" paper weight cone which responds readily to the slightest excitation. The output transformer with its terminal board is rigidly fastened to the cone housing. The G-13 speaker, which is employed in the Brentwood and Brucewood Models, has a field structure of heavy "U" construction mounted on a 6" base which is also used as a case for the output transformer. The 12" cone is a special made paper weight cone which responds readily to the slightest excitation.

GRIGSBY - GRUNOW CO.

Instructions for Care and Operation of Automatic Record Changer Employed in the Majestic Model 353 Receiver

IMPORTANT.—The following instruction should be used in operating the MAJESTIC Automatic Record Changer employed in the Model 353 Abbeywood Receiver.

WARNING.—Before attempting to operate the automatic record changer, three screws which pass through the base plate of the record changer and the wood shelf, should be loosened so that the chassis is resting freely on the rubber cushions.

WARNING.—At no time for any reason should the turntable be stopped by hand. If this warning is not adhered to, serious damage may result.

RECORDS.—It is possible to play the two types of records available for home entertainment, that is, the ordinary records and the new long playing records. Each of these two types can be obtained in both twelve and ten inch diameter The approximate playing time of these records is as follows:

Ordinary Records.	*New Long Playing Records.*
10 inch—2½ minutes.	10 inch—10 minutes.
12 inch—3½ minutes.	12 inch—15 minutes.

SPEED.—The standard record turns at a speed of 78 revolutions per minute, whereas the long playing record turns at the rate of 33 1/3 revolutions per minute. The mechanism is provided with a speed control lever to give either of these speeds, as required.

SWITCHES.—The line switch for the phonograph motor is located near the front of the turn table.

Directly under the main tuning dial is the "Radio-Phonograph" switch, which should be thrown to phonograph position for record playing. The line switch for the radio receiver is incorporated in the volume control assembly, which is located to the left of the phonograph switch.

NEEDLES.—The long playing records should be played using only the special needles designed for this type of record. After the special needle has once been removed from the pick-up head, do not use it again. Replace with a new one.

Do not play ordinary records with the special needle designed for long playing records.

Instructions for Setting Selector Device

It will be noted that to the right of the turn table there is a selector lever for the purpose of playing ten inch records automatic, ten inch records repeat, twelve inch records repeat, and universal or manual operation.

10" AUTOMATIC.—This is the only position in which the ten inch records are changed automatically.

10" REPEAT.—In this position, the mechanism will repeat the playing of the same record as many times as desired.

12" REPEAT.—The mechanism in this position will keep repeating a 12" standard record. Do not, however, attempt to repeat a 12" long playing record as it should be played manually with the lever in the universal position.

"UNIVERSAL."—In this position, the automatic changing and the repeat mechanism are not in operation, and the playing is controlled manually as with the ordinary phonograph. This position should always be used for playing the 12" long playing record and may be used for playing standard records.

Instructions for Operating Automatic Record Changer

Select the desired records and place them carefully in the record holder or magazine. The record at the bottom of the magazine will be the first one to be played.

The automatic changing magazine handles from one to ten of the 10" records. Do not mix standard records with long playing records in the magazine for automatic playing, as each type requires a different speed and a different type of needle.

It is best to place the first record on the table by hand and start the needle very carefully in the first groove with the selector lever in the "Universal" position; then the lever may be turned to the automatic position if desired, after which the changer will operate as outlined in paragraph II under "Instructions for Setting Selector Device." This procedure protects the needle and the record, and assures longer life for both.

REJECT LEVER.—While playing in the automatic position, if it is desired to interrupt the record and to play the following one, pull forward the reject lever which is located to the right of the turn table. This will cause the mechanism to go through a complete cycle of changing the record.

RELOADING.—When all of the records have been played through, and the magazine is empty, the mechanism will repeat the last record over and over. In reloading the magazine, switch off the motor at the time the magazine has travelled to the extreme left position, and carefully remove the stack of records from the turn table. Then replace them in the magazine in any desired sequence, with the side facing up which you desire to play. ***The magazine may be swung up and down, but do not try to force it sideways manually.***

ARM REST.—When changing records, the pick-up should be placed on the rest, to the right. If it cannot be placed there without straining, this is a sign that the automatic mechanism has not completed its cycle. In this case, hold the pick-up loosely, turn on the motor switch and wait until the record magazine has moved to the extreme left, which will allow the pick-up to be placed on its rest.

Instructions for Operating Manually

By placing the lever in the "UNIVERSAL" position, the records will be played manually. The 12 inch long playing records should always be played in this position.

Oiling

Every two or three months, the turn table should be removed and three or four drops of oil placed in each of the six holes provided.

MODEL 110

GRIGSBY - GRUNOW CO.

All leads marked "A" plus signify the ungrounded side of the car battery, and not necessarily the positive side.

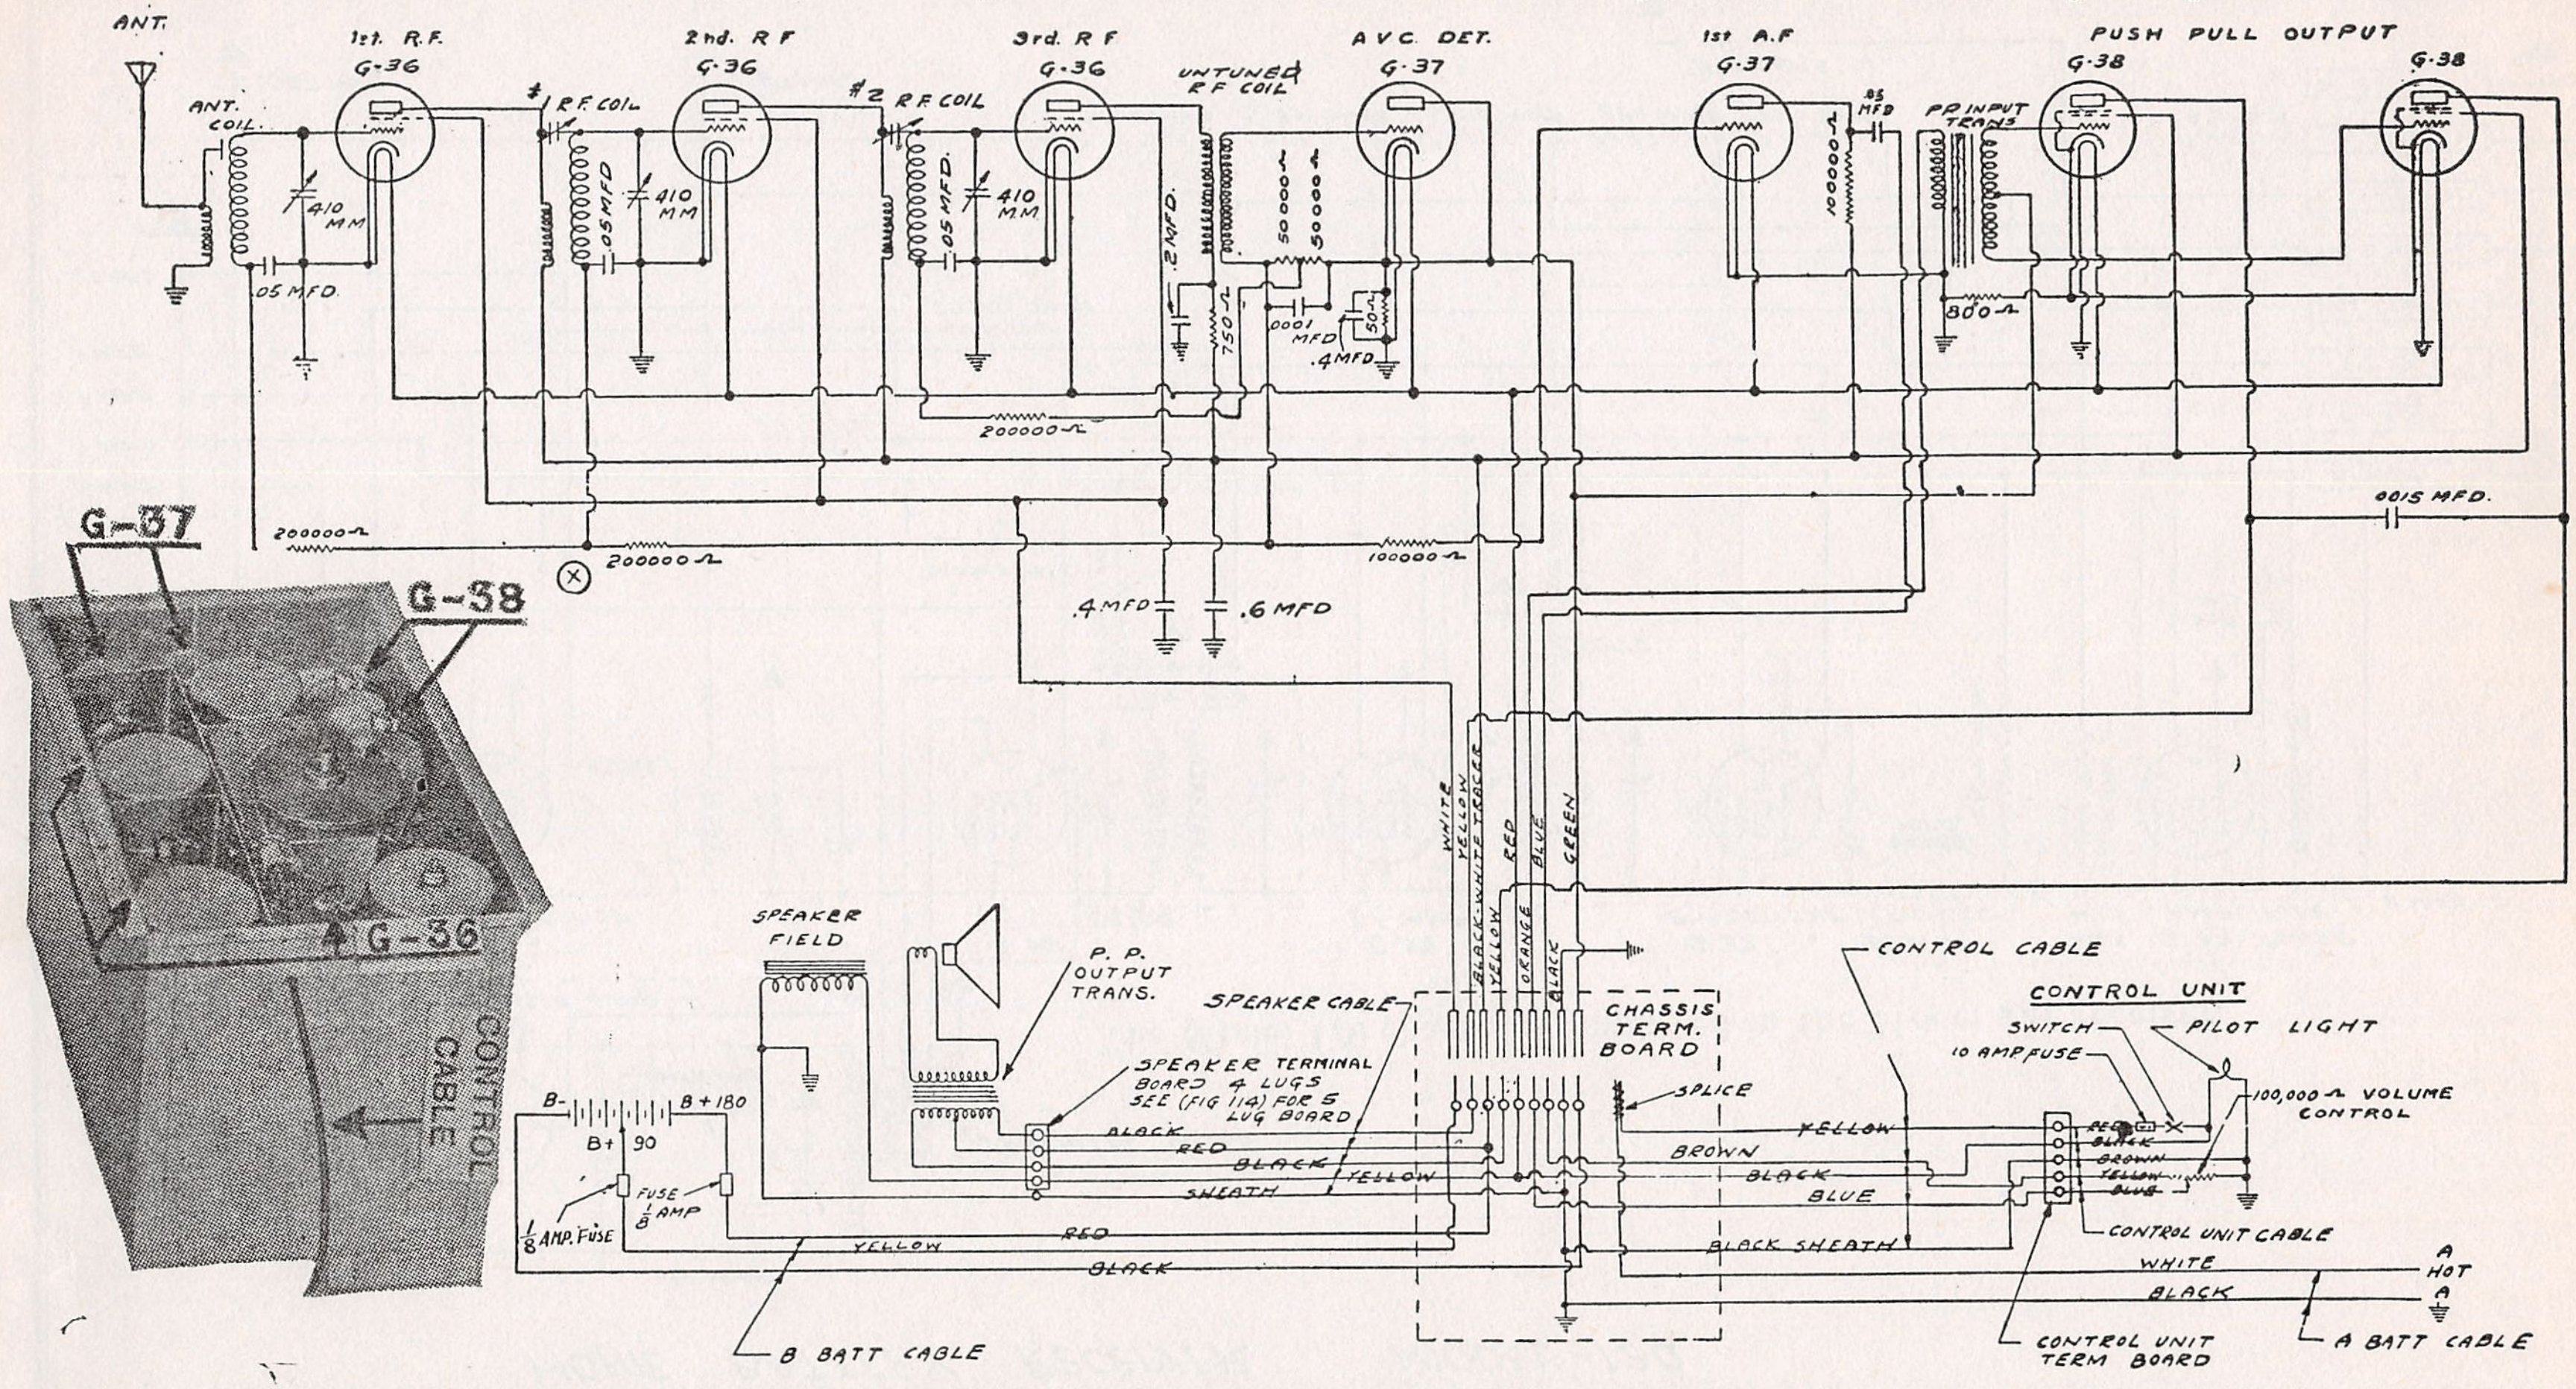
ANT.
ANT. COIL
1st. R.F. G-36
410 MM
.05 MFD.
#1 R.F. COIL
2nd. R.F G-36
.05 MFD
#2 R.F. COIL
3rd. R.F G-36
UNTUNED R.F COIL
.2 MFD.
750 Ω
500000 Ω
.0001 MFD
50 Ω
.4 MFD
A.V.C. DET. G-37
1st A.F G-37
100000 Ω
.5 MFD
P.P. INPUT TRANS
800 Ω
PUSH PULL OUTPUT G-38 G-38
.0015 MFD.
200000 Ω
100000 Ω
.4 MFD
.6 MFD
G-37
G-38
G-36
CONTROL CABLE
WHITE
YELLOW
BLACK-WHITE TRACER
RED
BLUE
GREEN
YELLOW
ORANGE
BLACK
SPEAKER FIELD
P.P. OUTPUT TRANS.
SPEAKER CABLE
SPEAKER TERMINAL BOARD 4 LUGS SEE (FIG 114) FOR 5 LUG BOARD
CHASSIS TERM. BOARD
SPLICE
B- B+90 B+180
FUSE 1/8 AMP
1/8 AMP. FUSE
BLACK
RED
SHEATH
BROWN
BLACK SHEATH
B BATT CABLE
CONTROL CABLE
CONTROL UNIT
SWITCH
10 AMP FUSE
PILOT LIGHT
100,000 Ω VOLUME CONTROL
CONTROL UNIT CABLE
CONTROL UNIT TERM BOARD
A HOT
A
A BATT CABLE

Majestic Model 110
Auto Radio

Note on Alignment of Gang Condenser: Should a receiver need realignment in the field, a station should be tuned in at approximately 1300 kilocycles and the alignment made in the usual manner. In case one alignment condenser will not indicate a peak of sensitivity, slightly advance or retard the tuning control and proceed to readjust the alignment condenser as before.

Note on Automatic Volume Control System: The Model 110 chassis utilizes an automatic volume control system in combination with a diode detector, the G-37 detector serving both functions.

MODEL 120
Schematic

GRIGSBY - GRUNOW CO.

BIAS VOLTAGES

Volume Control at Maximum	
R.F.	3 volts
Osc.	0 volts
1st Det.	8 volts
I. F.	3 volts
2nd Det.	8 volts
Pentode	13.5 volts

Volume Control at Minimum	
R. F.	11 volts
Osc.	0 volts
1st Det.	14 volts
I. F.	3 volts
2nd Det.	8 volts
Pentode	13.5 volts

IF PEAK 175 KC.

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETRODYNE
HOME BATTERY RECEIVER MODEL -120

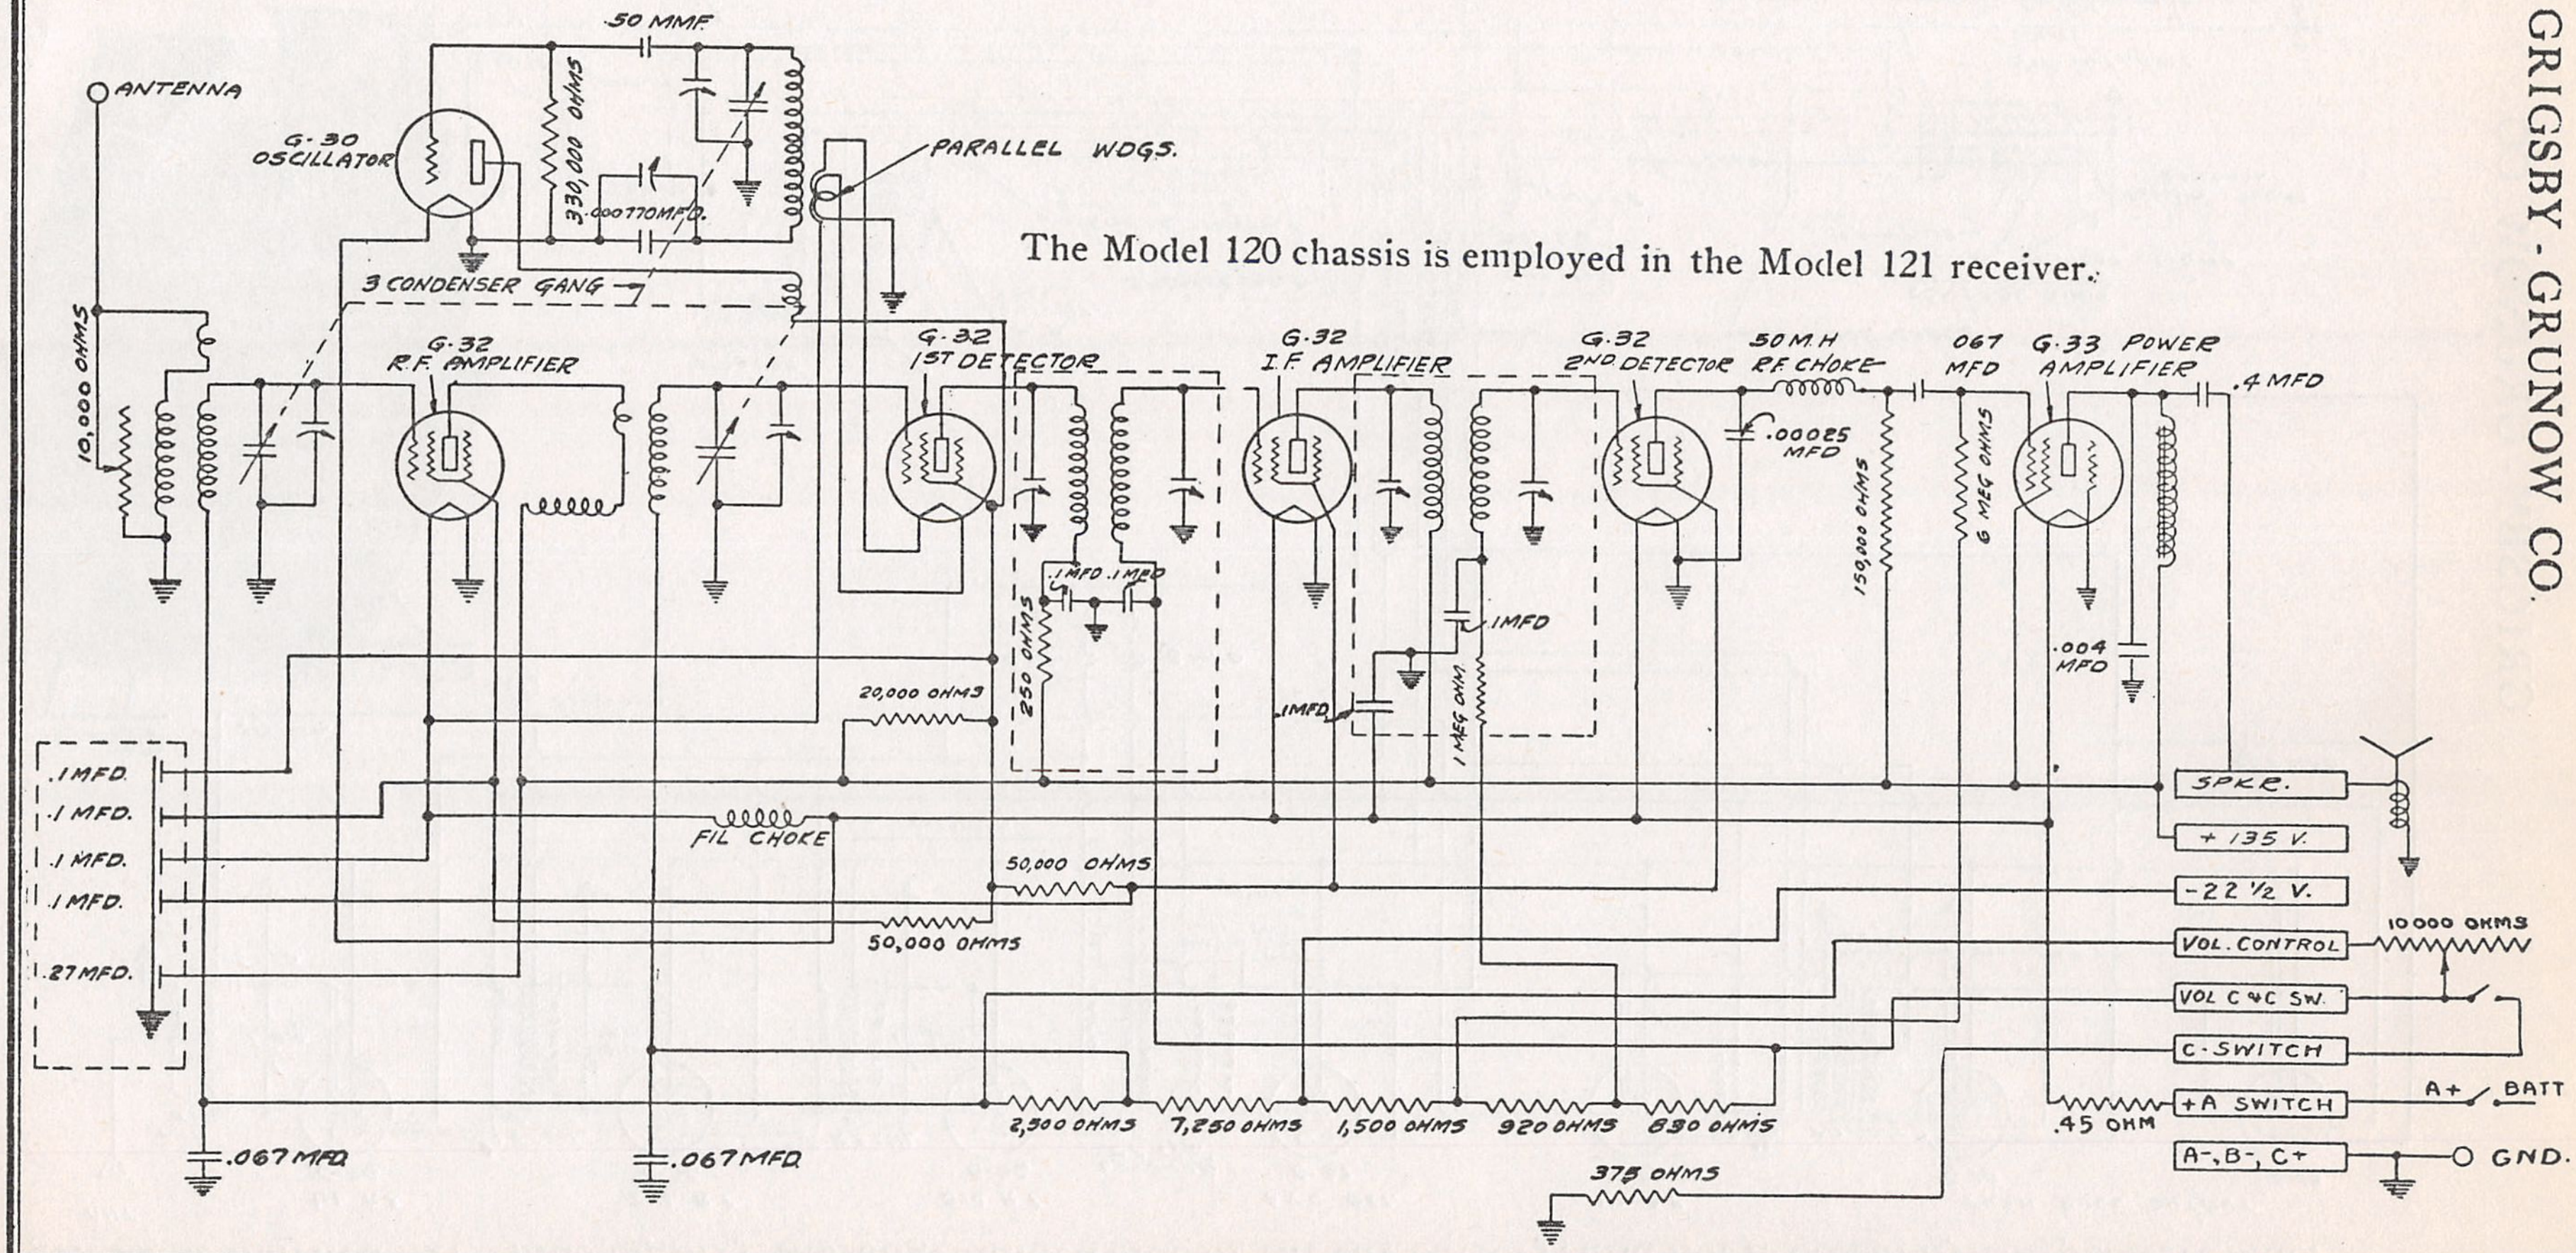
ANTENNA
10,000 OHMS
G-30 OSCILLATOR
50 MMF
330,000 OHMS
.00077 MFD.
PARALLEL WDGS.
3 CONDENSER GANG
G-32 R.F. AMPLIFIER
G-32 1ST DETECTOR
.1MFD .1MFD
250 OHMS
G-32 I.F. AMPLIFIER
.1MFD
.1MFD
1 MEG OHM
G-32 2ND DETECTOR
50 M.H R.F. CHOKE
.00025 MFD
150,000 OHMS
.067 MFD
6 MEG OHMS
G-33 POWER AMPLIFIER
.4 MFD
.004 MFD
20,000 OHMS
FIL CHOKE
50,000 OHMS
50,000 OHMS
.1 MFD.
.1 MFD.
.1 MFD.
.1 MFD.
.27 MFD.
.067 MFD
.067 MFD
2,500 OHMS
7,250 OHMS
1,500 OHMS
920 OHMS
830 OHMS
375 OHMS
.45 OHM
SPKR.
+ 135 V.
- 22 ½ V.
VOL. CONTROL
10000 OHMS
VOL C & C SW.
C-SWITCH
+A SWITCH
A+ BATT
A-, B-, C+
GND.

The Model 120 chassis is employed in the Model 121 receiver.

GRIGSBY - GRUNOW CO.

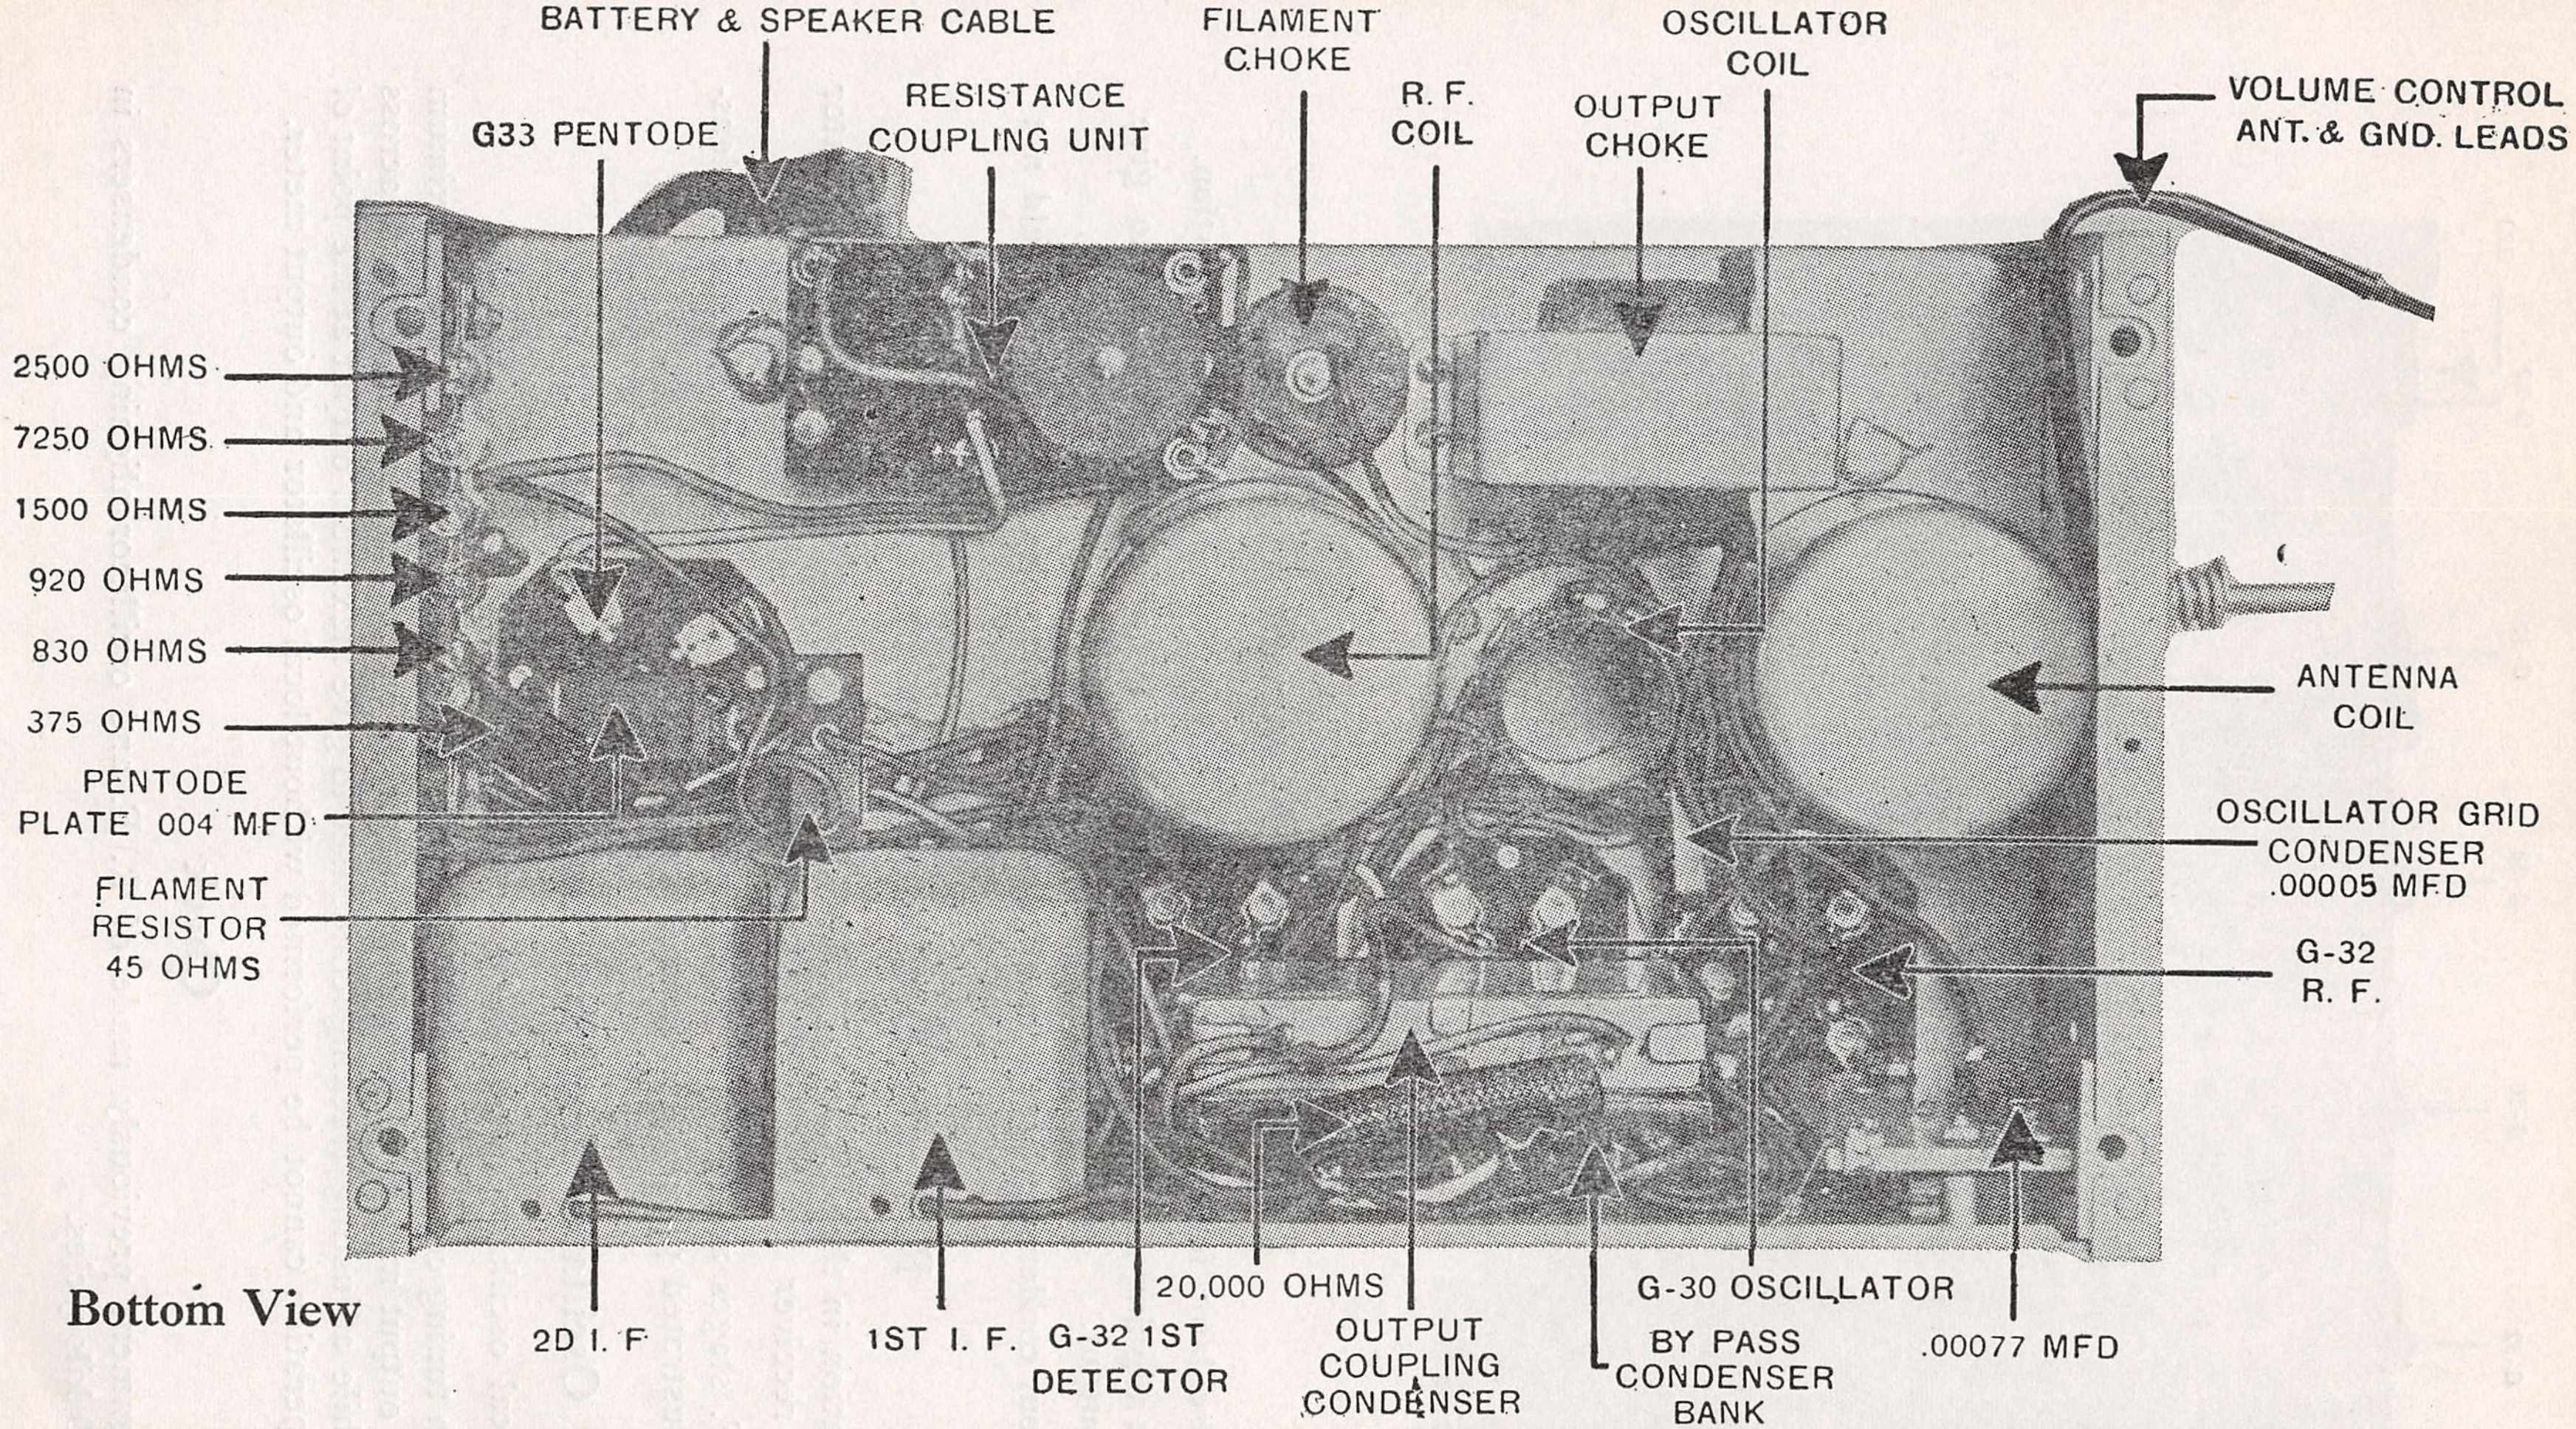
BATTERY & SPEAKER CABLE
G33 PENTODE
RESISTANCE COUPLING UNIT
FILAMENT CHOKE
R. F. COIL
OUTPUT CHOKE
OSCILLATOR COIL
VOLUME CONTROL ANT. & GND. LEADS
2500 OHMS
7250 OHMS
1500 OHMS
920 OHMS
830 OHMS
375 OHMS
PENTODE PLATE 004 MFD
FILAMENT RESISTOR 45 OHMS
ANTENNA COIL
OSCILLATOR GRID CONDENSER .00005 MFD
G-32 R. F.
2D I. F
1ST I. F.
G-32 1ST DETECTOR
20,000 OHMS
OUTPUT COUPLING CONDENSER
G-30 OSCILLATOR
BY PASS CONDENSER BANK
.00077 MFD

Bottom View

Volume Control and Switch Connections

Antenna section of volume control—Red and Black.
"C" bias section of volume control—Blue and Yellow.
"A" battery side of switch—Red.
Jumper switch to volume control—Blue.
Switch to "C" bias—White.

Battery Connections

3 wire cable plus 135 volts—Red.
minus 22½ volts—Green.
plus "C" minus "B"—Black.

2 wire cable to speaker—Red and Black and Red.
minus "A" Black.

Model 120 Chassis

MODEL 120
Notes

GRIGSBY - GRUNOW CO.

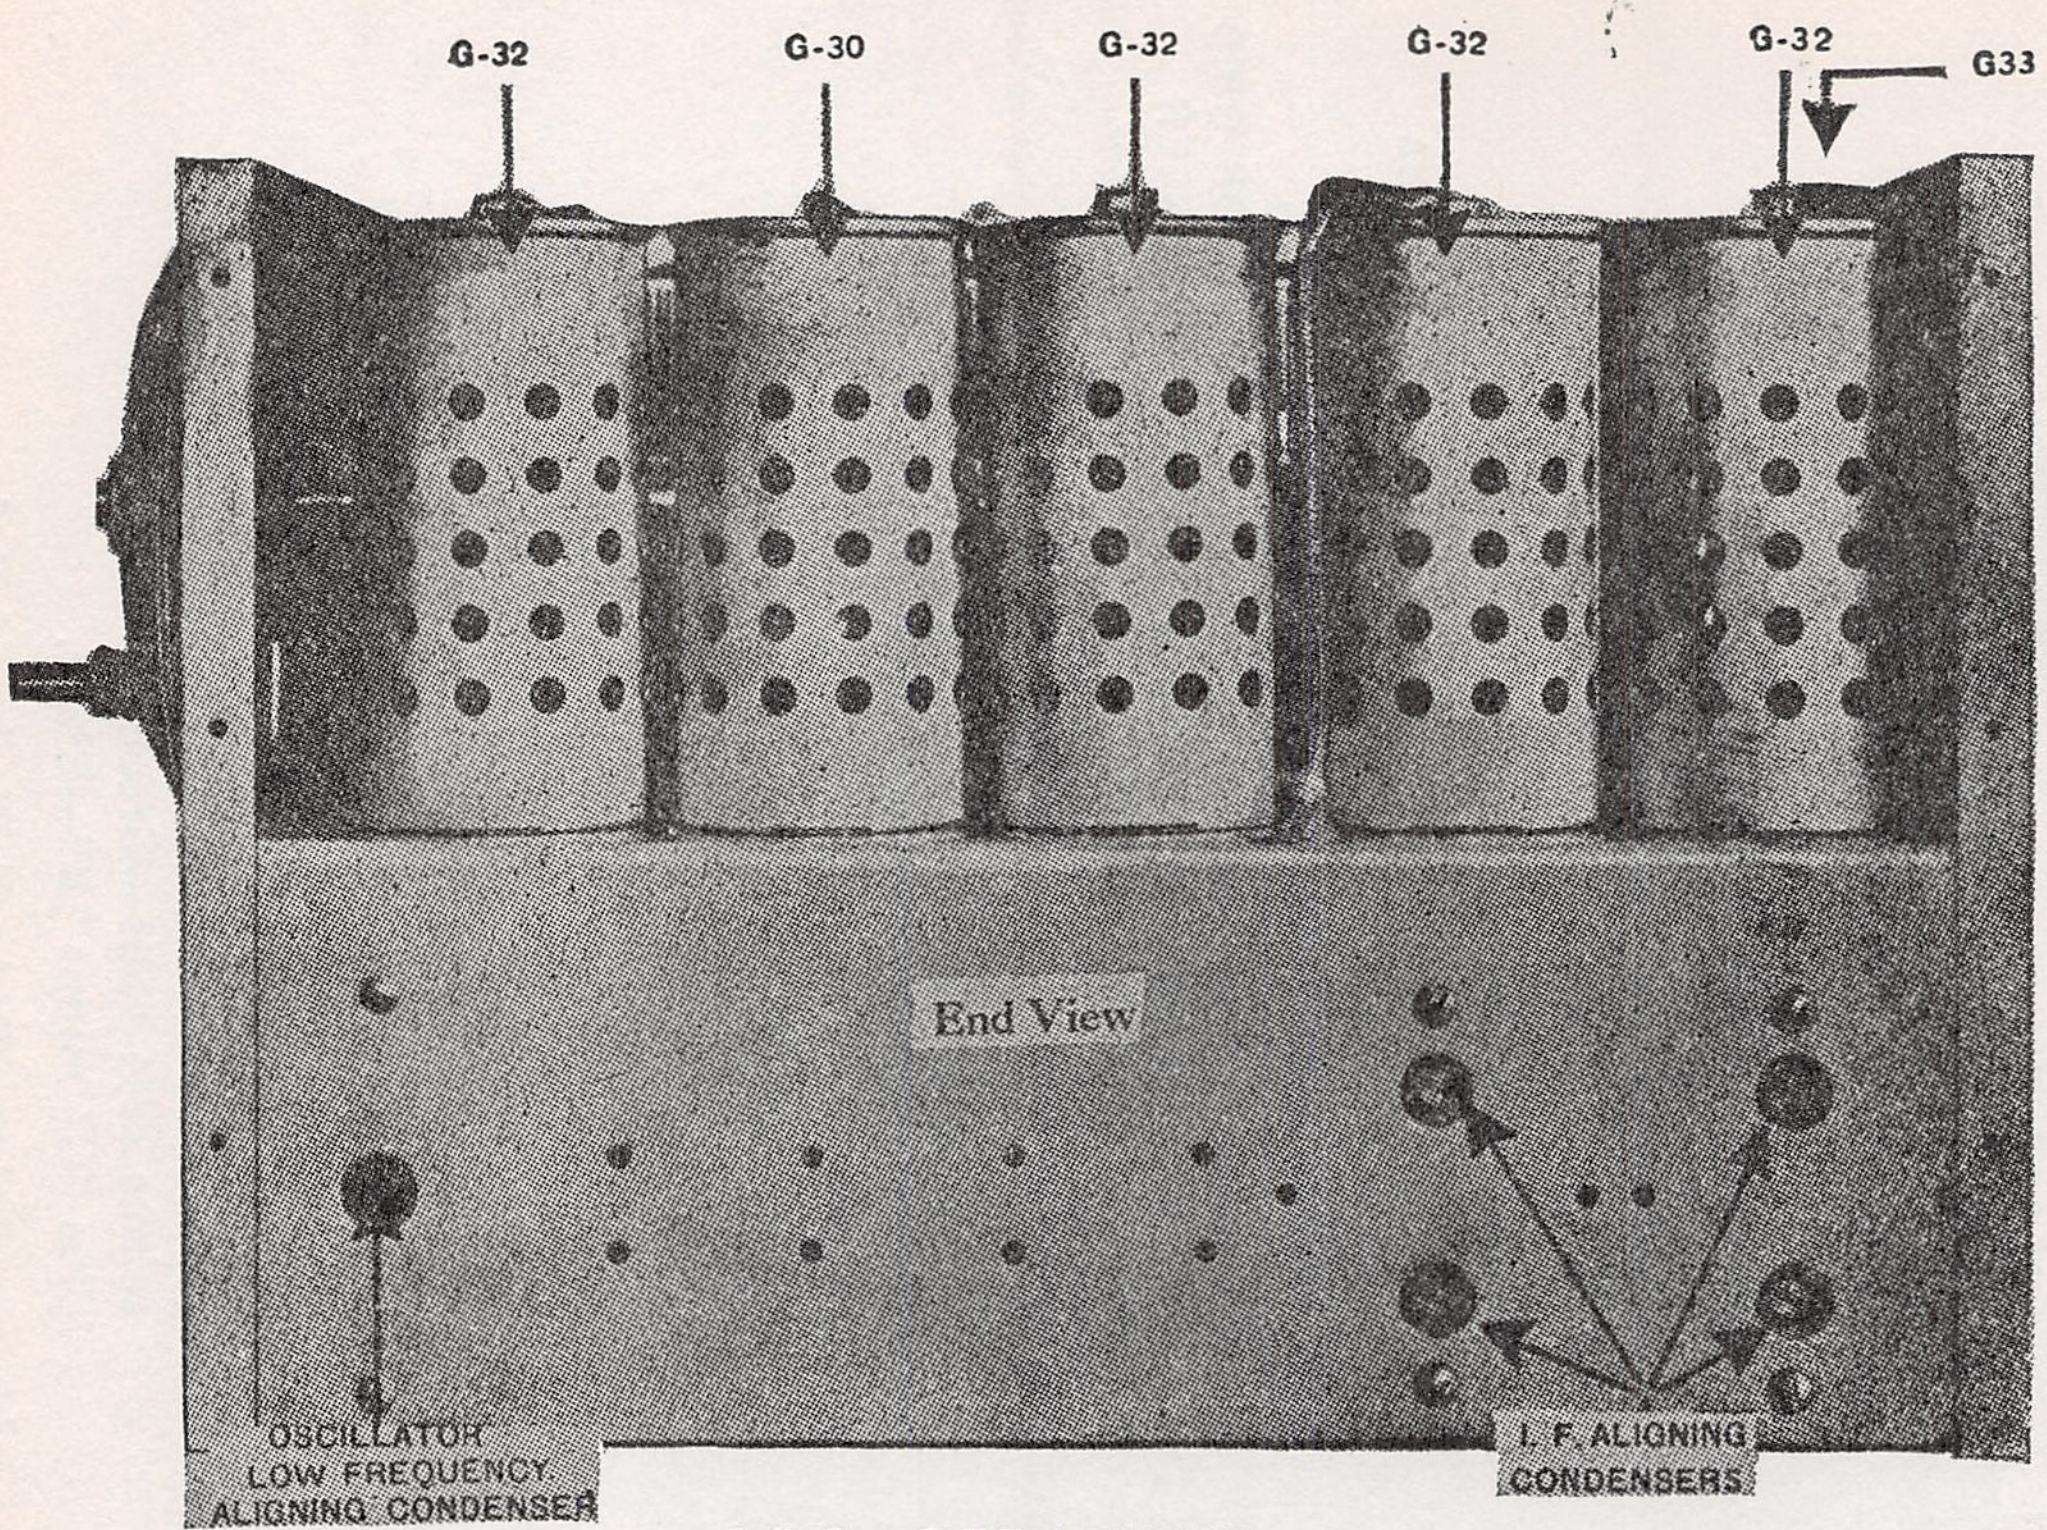
G-32
G-30
G-32
G-32
G-32
G33
End View
OSCILLATOR LOW FREQUENCY ALIGNING CONDENSER
I. F. ALIGNING CONDENSERS

120 CHASSIS

I. F. Transformers Alignment

1. Connect oscillator for intermediate frequency alignment and set it in operation.

2. Align each aligning condenser on the intermediate frequency transformers to give maximum signal output.

3. After all four condensers have been aligned at 175 kilocycles, this stage should not be again adjusted.

R. F. and Oscillator Alignment

1. Tune in station in the vicinity of 1,500 kilocycles, or put output of local oscillator (if available) into receiver

2. Align R. F. stages and oscillator tuning condenser The position of these condensers is shown on illustrated photograph in this manual.

Oscillator Tracking Condenser Alignment

1. Tune in local oscillator to 600 kilocycles.

2. Adjust both tuning control and tracking condenser simultaneously to give maximum signal as noted on output meter. This will be obtained by rocking tuning control across resonance point while adjusting tracking condenser to give maximum output at the point of resonance. This operation cannot be performed without local oscillator and output meter.

Check

Check the alignment previously made of R. F. and oscillator aligning condensers in the vicinity of 1,500 kilocycles.

GRIGSBY GRUNOW CO.

MODEL 150
Schematic

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER AND ELECTRIC PHONOGRAPH COMBINATION. MODEL 150 CHASSIS—
115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES.
POWER REQD. — 90 WATTS WITH MOTOR.

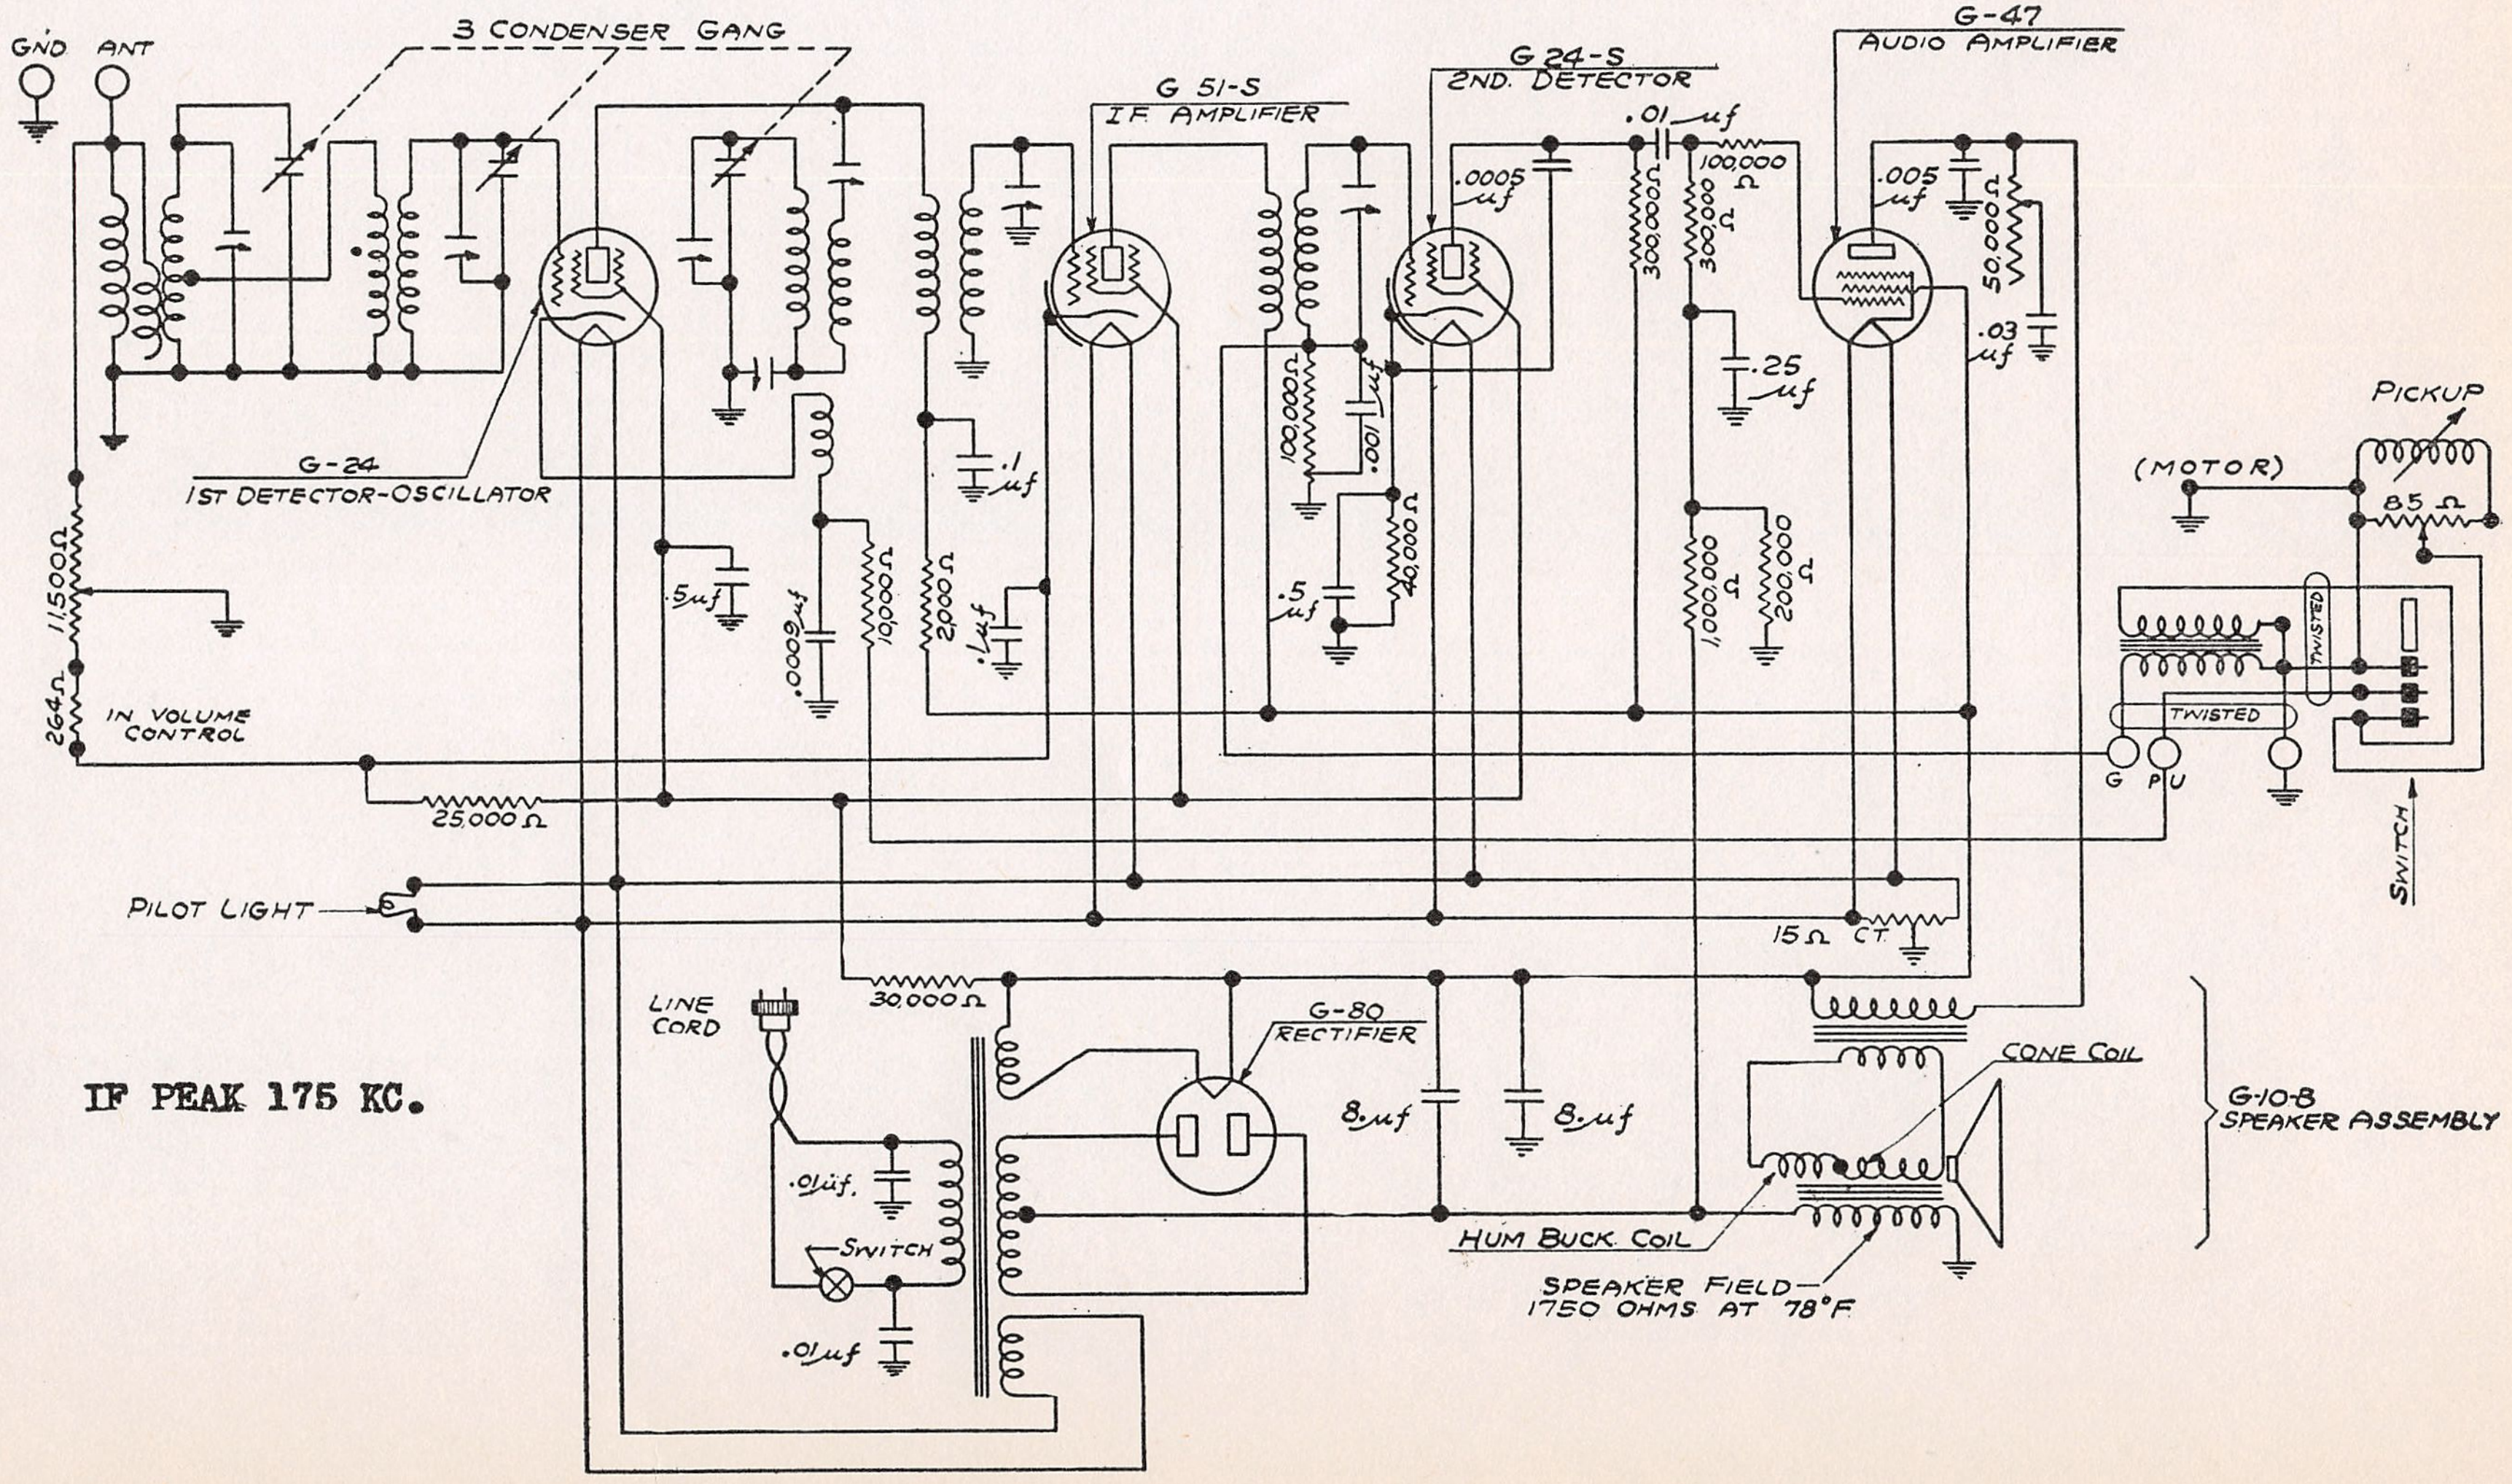
GND
ANT
3 CONDENSER GANG
G-24
1ST DETECTOR-OSCILLATOR
G 51-S
I.F. AMPLIFIER
G 24-S
2ND. DETECTOR
G-47
AUDIO AMPLIFIER
11500Ω
264Ω
IN VOLUME CONTROL
25,000Ω
.5μf
.0006μf
10,000Ω
2000Ω
.1μf
.1μf
100,000Ω
.001μf
40,000Ω
.5μf
.0005μf
.01μf
300,000Ω
300,000Ω
100,000Ω
.25μf
1,000,000Ω
200,000Ω
.005μf
50,000Ω
.03μf
(MOTOR)
PICKUP
85Ω
TWISTED
TWISTED
G
PU
SWITCH
PILOT LIGHT
15Ω CT
30,000Ω
LINE CORD
.01μf
SWITCH
.01μf
G-80
RECTIFIER
8μf
8μf
CONE COIL
HUM BUCK COIL
SPEAKER FIELD—1750 OHMS AT 78°F
G-10-B SPEAKER ASSEMBLY

IF PEAK 175 KC.

Model 150 Chassis Employed in Castlewood Phonograph Combination Model

MODEL 13
Schematic

GULBRANSEN CO.

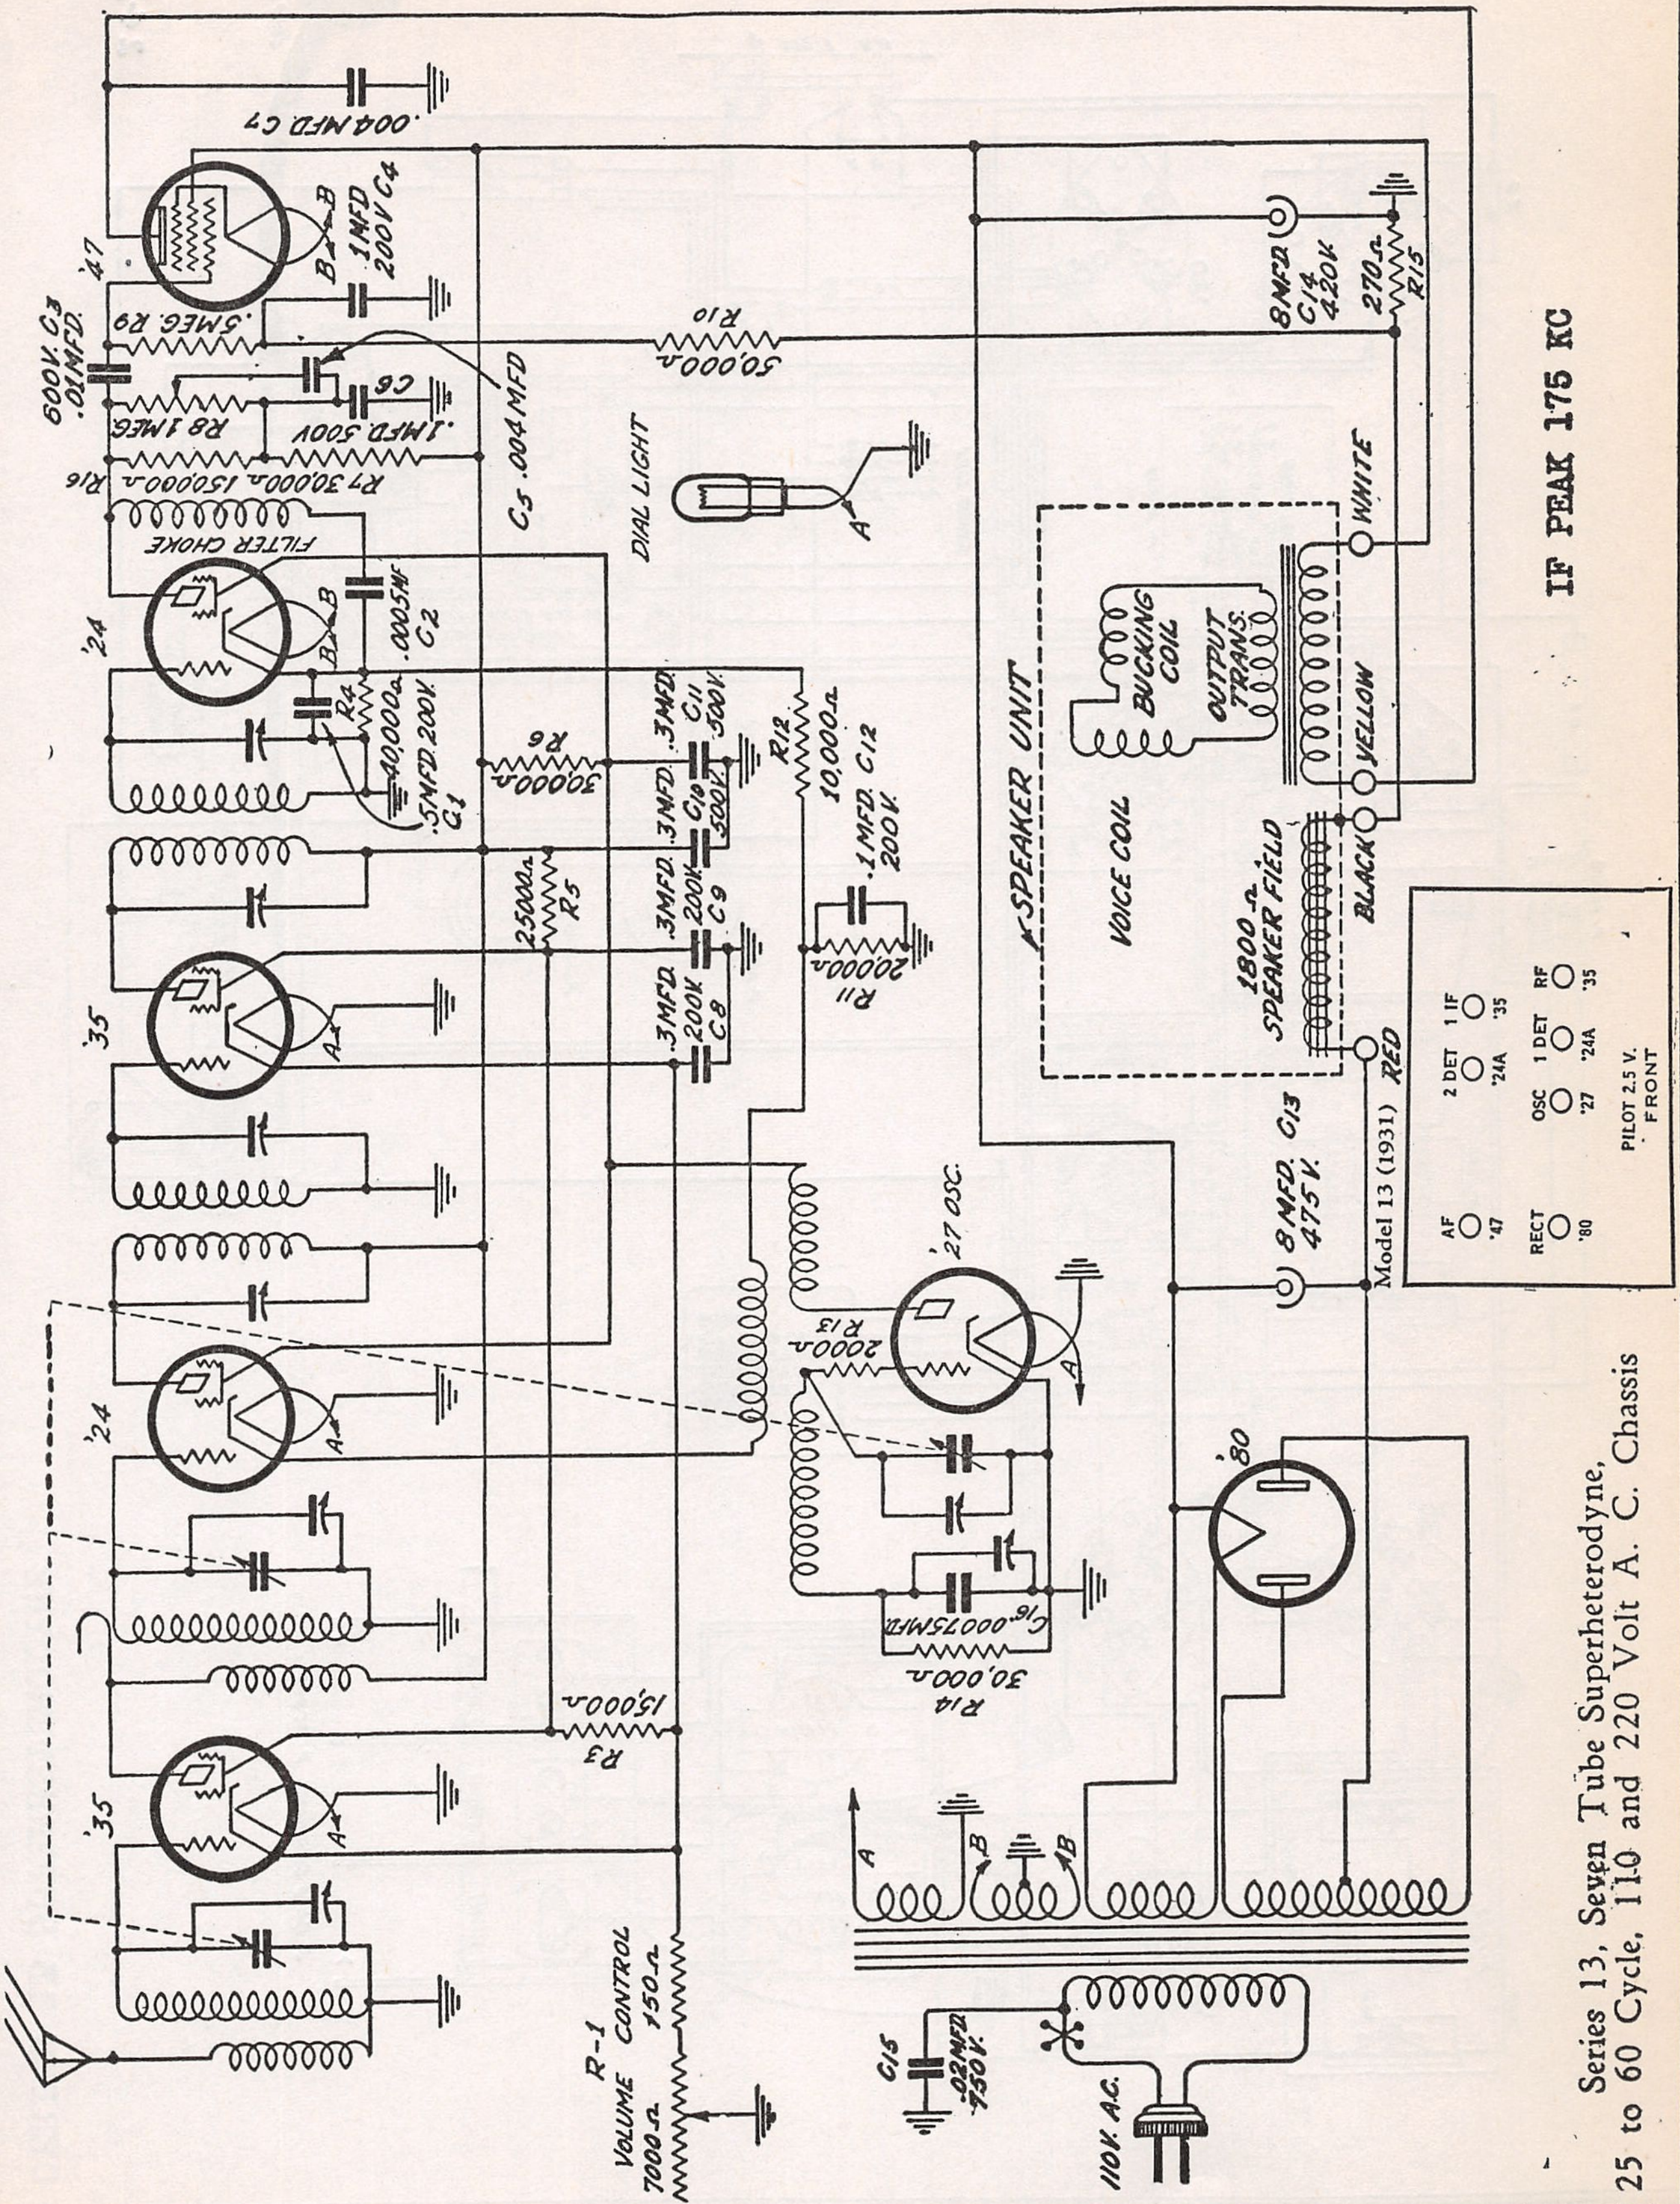
'47
.004 MFD. C7
1 MFD 200V C4
600V. C3 .01 MFD.
.5MEG. R9
R8 1MEG
C6
.1MFD. 500V
R7 30,000Ω 150,000Ω R16
C5 .004 MFD
R10 50,000Ω
DIAL LIGHT
FILTER CHOKE
'24
.0005MF C2
R4 40,000Ω
.5MFD. 200V. C1
R6 30000Ω
.3MFD C11 300V.
.3MFD C10 300V.
R12 10,000Ω
.1MFD. C12 200V.
R11 20,000Ω
25000Ω R5
.3MFD. 200V C9
.3MFD 200V C8
'35
'24
'35
'27 OSC.
R13 2000Ω
C16 .00075MFD
R14 30,000Ω
R3 15,000Ω
R-1 VOLUME CONTROL 7000Ω 450Ω
'80
8 MFD. C13 475V.
8 MFD C14 420V
270Ω R15
SPEAKER UNIT
VOICE COIL
BUCKING COIL
OUTPUT TRANS.
1800Ω SPEAKER FIELD
WHITE
YELLOW
BLACK
RED
C15 .02 MFD 750V.
110V. A.C.
A
B
Model 13 (1931)
AF '47
RECT '80
2 DET '24A
OSC '27
1 IF '35
1 DET '24A
RF '35
PILOT 2.5 V. FRONT

IF PEAK 175 KC

Series 13, Seven Tube Superheterodyne,
25 to 60 Cycle, 110 and 220 Volt A. C. Chassis

MODEL 13
Chassis

GULBRANSEN CO.

249-J

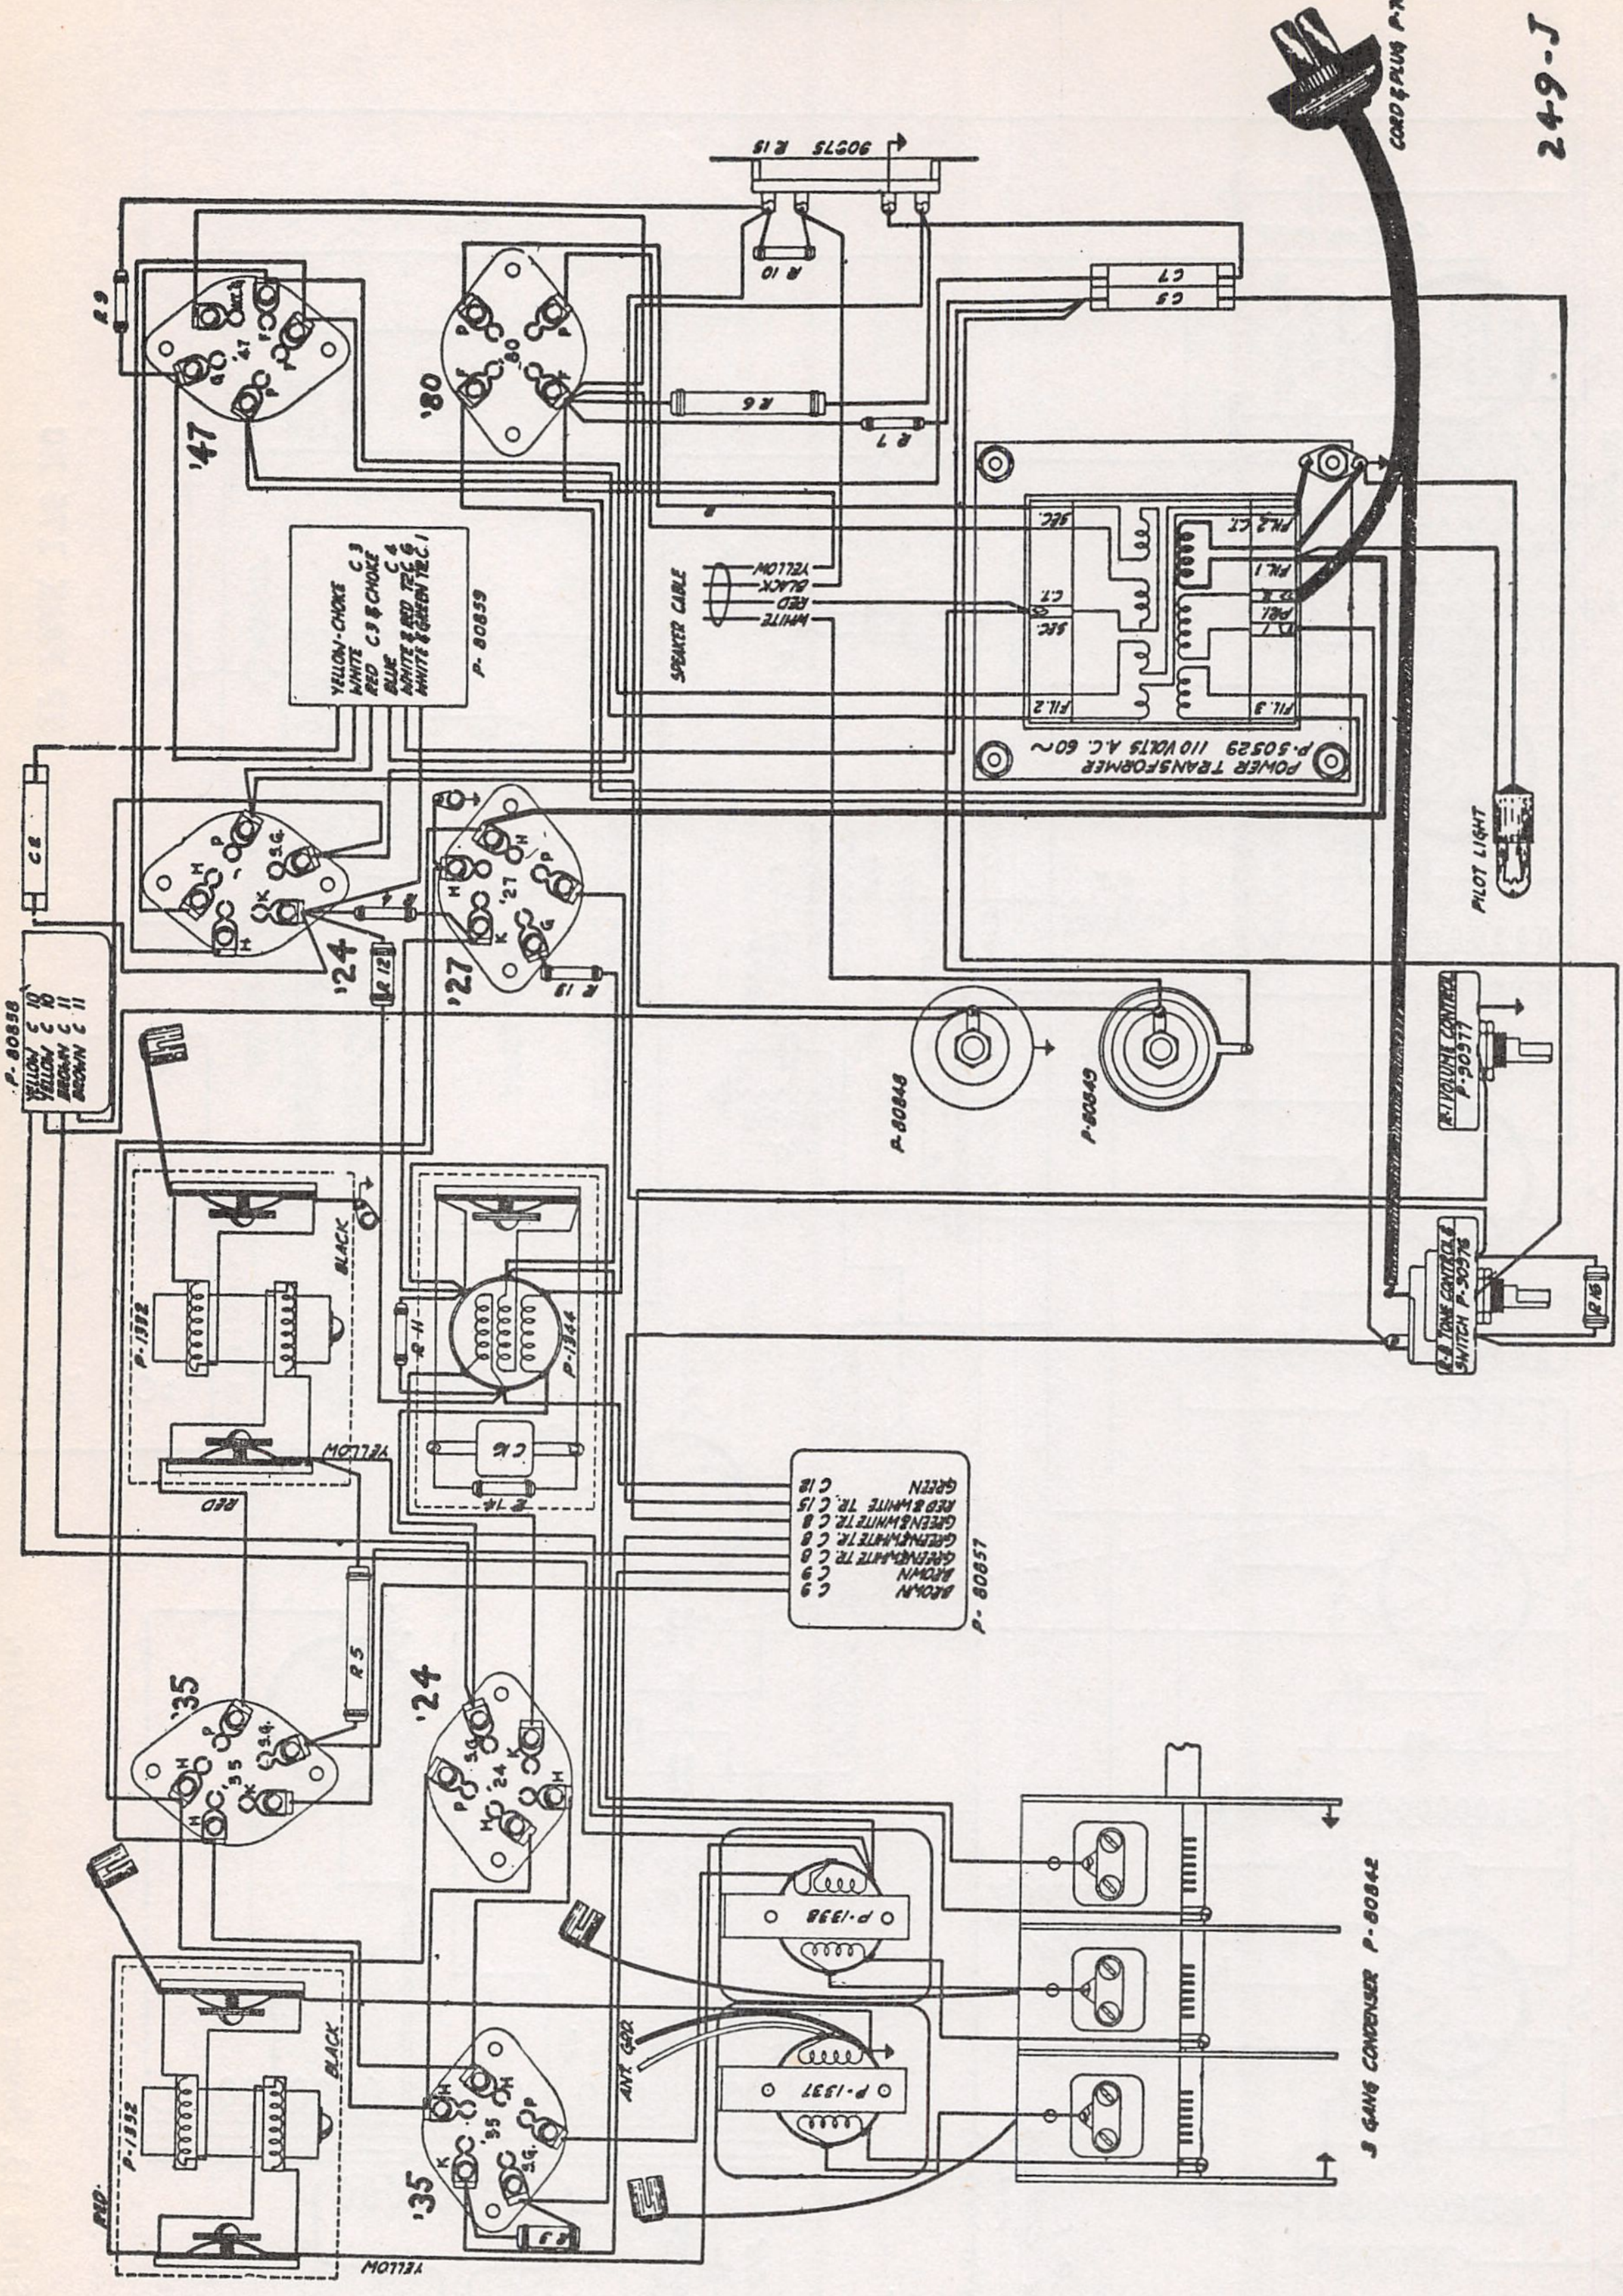
R 15 50975
R 10
C 7
C 8
R 9
'47
'80
R 6
R 7
YELLOW-CHOKE C 3
WHITE C3 & CHOKE
RED C 4
BLUE C 6
WHITE & RED TR. C 6
WHITE & GREEN TR. C 1
P-80839
SPEAKER CABLE
WHITE
RED
BLACK
YELLOW
SEC.
C.T.
FIL.1
FIL.2
FIL.2 C.T.
FIL.3
PRI.
POWER TRANSFORMER
P-50529 110 VOLTS A.C. 60~
CORD & PLUG P-70902
PILOT LIGHT
C 2
'24
'27
R 12
R 13
YELLOW C 10
YELLOW C 10
BROWN C 11
BROWN C 11
P-80858
P-80848
P-80849
R-1 VOLUME CONTROL P-30977
R-8 TONE CONTROL & SWITCH P-30976
R 16
BLACK
P-1932
R 11
P-1344
CK
R 14
YELLOW
RED
GREEN C 12
RED & WHITE TR. C 15
GREEN & WHITE TR. C 8
GREEN & WHITE TR. C 8
BROWN C 9
BROWN C 9
P-80857
R 5
'35
'24
P-1338
P-1337
ANT.
GND.
3 GANG CONDENSER P-80842
BLACK
P-1932
RED
YELLOW
'35
R 3

SERIES 13 SUPERHETERODYNE

GULBRANSEN CO.

POWER TRANSFORMER

One side of the 110 volt line is connected to the terminal marked Pri. 2" and the other side to one switch terminal on the receiver. The switch completes the circuit to the "Pri. 1" terminal.

The 25 cycle transformer is especially designed for operation on 110 volt, 25 cycle current but may also be used on any 110 volt, A.C. supply having a higher frequency.

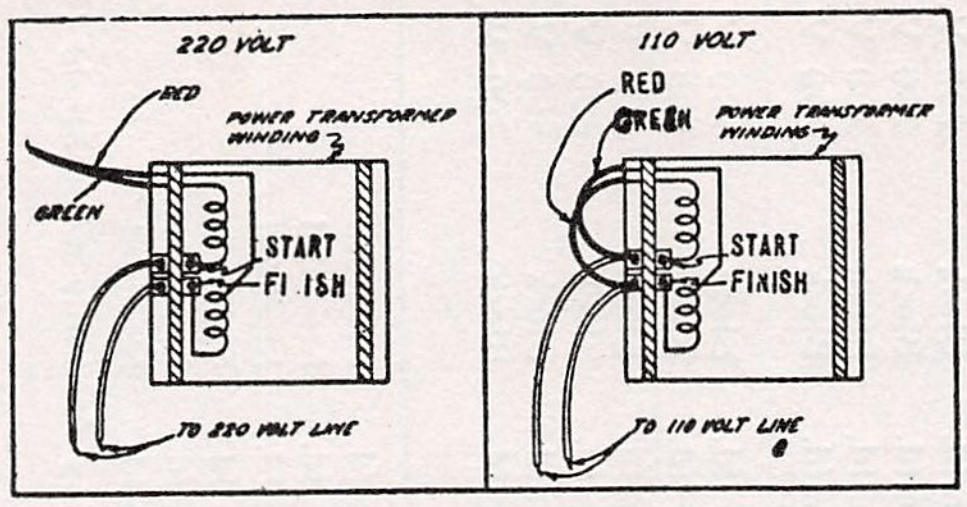
220 VOLT
RED
POWER TRANSFORMER WINDING
GREEN
START
FI ISH
TO 220 VOLT LINE
110 VOLT
RED
GREEN
POWER TRANSFORMER WINDING
START
FINISH
TO 110 VOLT LINE

Receivers having a 220 volt, 40 to 60 cycle power transformer may also be operated on 110 volt, 40 to 60 cycle current when connections on the primary of the transformer have been changed.

The red and green wires shown in the sketch, (220 volt) must be disconnected and then connected as shown in the 110 volt sketch. No other changes are necessary.

CONDENSERS AND RESISTORS

Three blocks contain the majority of condensers. The choke in the plate circuit of the second detector tube is also contained in one of these blocks. The common leads of condenser blocks No. 1 and No. 2 are grounded. C1, C4, and C6 in block No. 3 have a common lead which is grounded, and the choke and C3 in this block have a common lead connected to the plate of the 2nd detector.

ANALYZER CHART

All voltages taken with a 1,000 ohm per volt voltmeter on the scale indicated in the column headed "Meter Scale." Turn the volume all the way on and connect the antenna and ground leads together. The grid, plate, and screen grid voltages are measured to cathode of the '24 and '35 tubes and to filament of the '47 tube.

The grid voltage on the '27 oscillator cannot be taken except with a very sensitive, low scale voltmeter. The voltage is approximately .05 volts when the A.C. line voltage is 110 volts.

Tube	Circuit	Meter Scale	110 V.
R.F. (Ant.) '35	Grid Screen Grid Plate	0—10 0—100 0—250	1.9 63. 225.
1st Det. '24	Grid Screen Grid Plate	0—25 0—100 0—250	14.5 65. 220.
Int. '35	Grid Screen Grid Plate	0—10 0—100 0—250	1.9 63. 225.
2nd Det. '24	Grid Screen Grid Plate	0—25 0—100 0—250	14.5 65. 135.
Osc. '27	Grid Plate	 0—100	 80.
Aud. '47 (See Caution Above)	Grid Accelerating Grid Plate	0—10 0—250 0—250	2.7 225. 205.
'80 Rect.	Filament to Ground	0—1000	233.

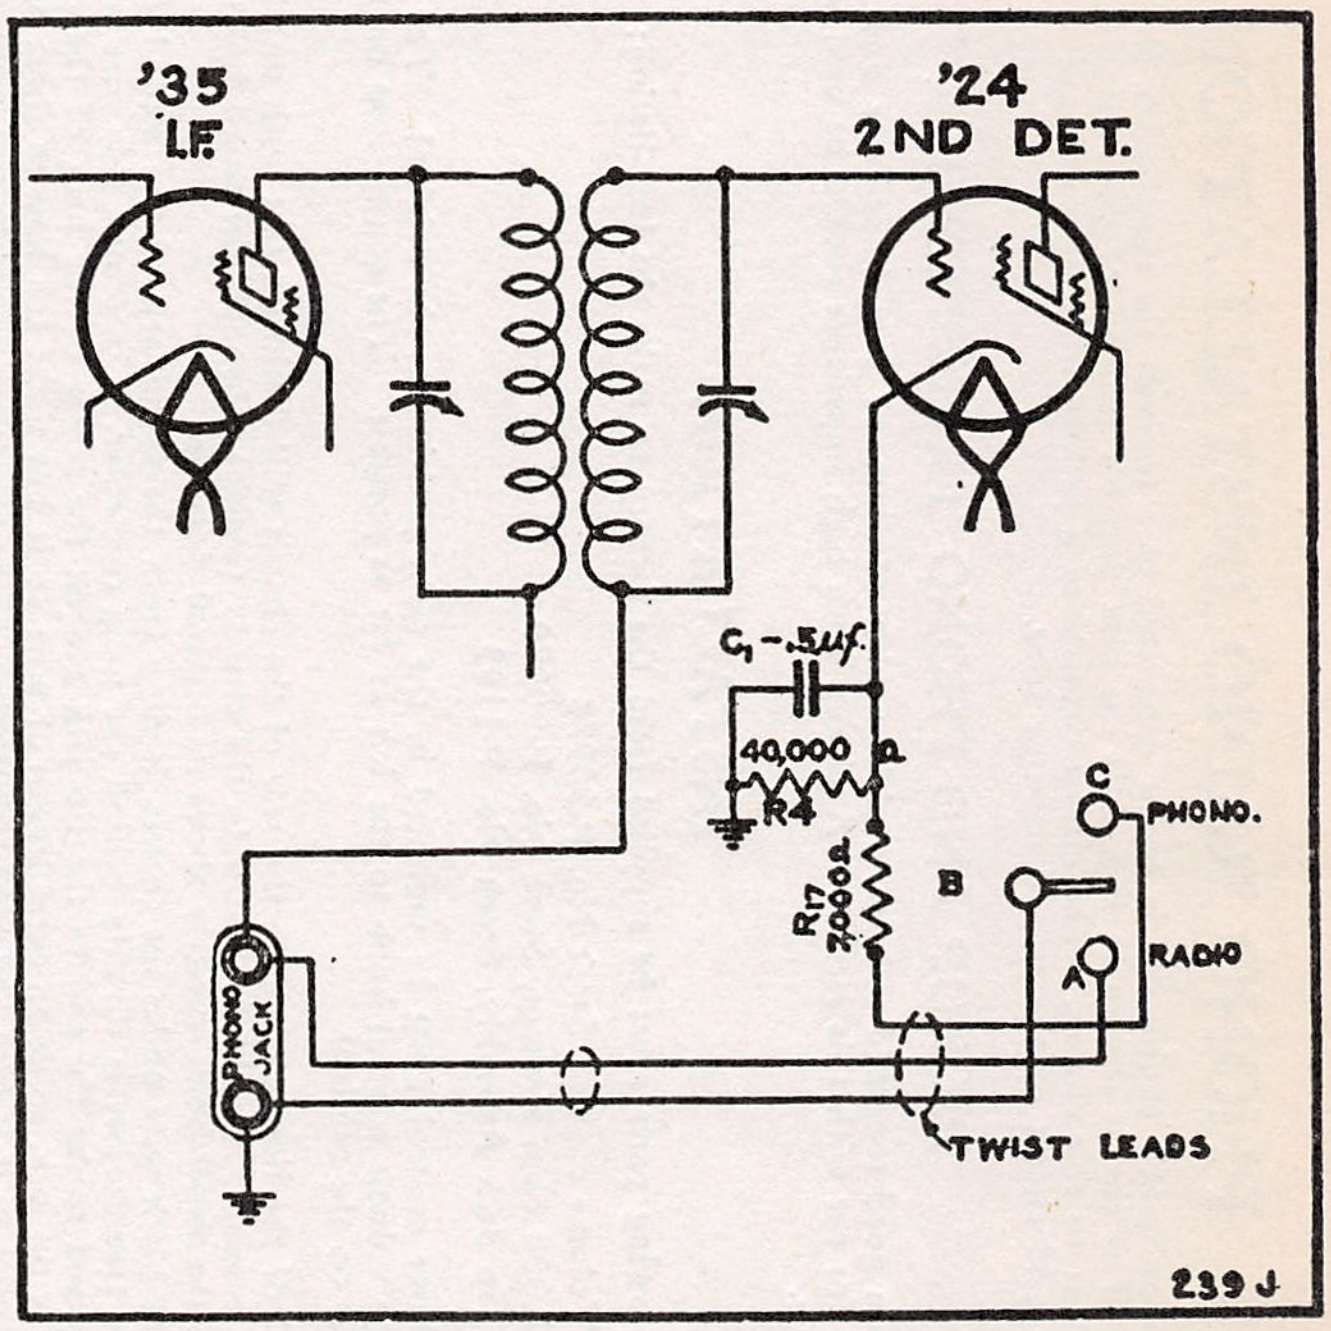
'35
I.F.
'24
2ND DET.
C1 -.5uf.
40,000 Ω
R4
R17
7000Ω
C
PHONO.
B
A
RADIO
PHONO JACK
TWIST LEADS
239 J

Phonograph Hook-up

MODEL 13
Color Code
Data

PHONO RADIO INSTALLATION

When phonograph equipment is to be connected to a receiver, the installation should be of a permanent nature. The circuit shown in Fig. 2 is the best possible method of permanently connecting phonograph equipment to this chassis. The circuit consists of a pickup with self-contained volume control, connected in the grid circuit of the second detector tube.

PICKUP AND PHONO TRANSFORMER

To obtain good tone and volume, a pickup with medium or low impedance and a transformer are recommended for use with this receiver. A pickup with high impedance should be used when a transformer is not available.

INSTALLATION

The following parts must be supplied from the factory to make the installation:

1 Volume control, Stock No. P-90978
1 7,000 ohm Resistor, Stock No. P-90979
1 Tip Jack Assembly, Stock No. P-1193

The volume control must be mounted in the same position as the original. The switch is operated by turning the volume control knob to the left as far as possible. The connections on the volume control are the same as on the original.

Removal of the license plate on the rear of the chassis will disclose a slot with small holes at each end. The tip jack assembly should be bolted to the chassis (inside), through the small holes. Bolt the license plate through the small holes, directly above its original position.

Locate the black wire under the chassis, leading from the secondary of the second intermediate transformer. This transformer is directly behind the gang condenser. Disconnect this wire where it is grounded on the chassis and solder the end to the tip jack nearest the center of the back of the chassis. If it does not reach to the tip jack, splice an extra length of wire to it but make the lead as short as possible. Solder and tape the splice so it is firm and well insulated.

Ground the OPPOSITE tip jack on the chassis by soldering one end of a short length of wire on the jack and the opposite end on a lug placed under the nut on the bolt holding the nearest end of the tip jack assembly.

Solder one end of the 7,000 ohm resistor (R17, Fig. 2) to the cathode connection on the second detector tube socket.

Three wires, twisted together and long enough to reach from the switch on the volume control (around the closed ends of the R.F. transformer shields), to the tip jacks are connected as shown in Fig. 2.

Wire No. 1 connects the grounded tip jack and the switch terminal farthest from the center of the volume control.

Wire No. 2 connects the jack on which the black lead from the I.F. transformer is connected, and the raised switch terminal near the center.

Wire No. 3 connects one end of the 7,000 ohm resistor and the remaining open lug on the switch.

When the receiver volume control is turned to the left as far as possible, the S.P.D.T. switch is thrown and opens the circuit from "A" (Fig. 2) to "B" and closes the circuit from "B" to "C."

This action places the pickup in the circuit and connects the 7,000 ohm resistor so that a proper grid bias is obtained for phonograph reproduction.

If a transformer is used, a ratio of 4 to 1 will prove satisfactory. The secondary is connected to the tip jacks and the primary to the pickup cords.

Reversing the pickup leads will determine the correct position in which they should be left. Some pickups have one side grounded and that side should be connected to the grounded pickup jack in the receiver.

If the pickup is disconnected, a wire "jumper" MUST be placed across the tip jacks before broadcast signals may be received. *The receiver must never be turned on for even a moment without the jumper in place.* A jumper will close the circuit between "A" and "B." This grounds the circuit, thereby placing the proper grid bias on the detector tube, even though the volume control may be thrown to the phonograph position. This jumper may be a piece of solid wire, the ends of which are bent at right angles and plugged into the tip jacks.

GULBRANSEN CO.

RESISTORS

Diagram Key	Part No.	Resistance in ohms	Type	IDENTIFICATION Base	End	Dot
R1	P-90976		Vol. Cont.			
R1	P-90978		Vol. Cont.	With Phonograph Switch		
R3	P-90905-B	15,000	Carbon	Brown	Green	Orange
R4	P-90916-B	40,000	Carbon	Yellow	Black	Orange
R5	P-90927-A	25,000	Carbon	Red	Green	Orange
R6	P-90926-A	30,000	Carbon	Orange	Black	Orange
R7	P-90956	30,000	Carbon	Orange	Black	Orange
R8	P-90977	1 Meg.	Tone Cont.			
R9	P-90938-A	500,000	Carbon	Green	Black	Yellow
R10	P-90941-A	50,000	Carbon	Green	Black	Orange
R11	P-90959-A	20,000	Carbon	Red	Black	Orange
R12	P-90930-C	10,000	Carbon	Brown	Black	Orange
R13	P-90906-B	2,000	Carbon	Red	Black	Red
R14	P-90956-A	30,000	Carbon	Orange	Black	Orange
R15	P-90975-A	270	Candohm			
R16	P-90963-A	150,000	Carbon	Brown	Green	Yellow
R17	P-90979	7,000	Carbon	Lavender	Black	Red
				For phonograph installation		

CONDENSERS

Key No.	Part No.	Capacity		Type	Voltage Rating	Indentification Mark
C12	P-80857-A	1	mfd.	Block	200 V.	White, Green Tr.
C8	Block	3	mfd.	Block	200 V	Brown
C9	No. 1	3	mfd.	Block	200 V	White, Red Tr
C15		02	mfd.	Block	750 V	Green
C10	P-80858	3	mfd.	Block	500 V	Brown
C11	Block No. 2	.3	mfd.	Block	500 V.	Yellow
C1	P-80859-C	5	mfd.	Block	200 V	White and Red
C3	Block	01	mfd.	Block	600 V	White, Red Tr
C6	No. 3	1	mfd.	Block	500 V	Blue
C4		1	mfd.	Block	200 V	Yellow and Red
Choke						White, Green Tr
C2	P-80855	0005	mfd.	Moulded		Red
C5	P-80860	.004	mfd.	Moulded		Tan
C7	P-80860	.004	mfd.	Moulded		Tan
C13	P-80848-Hi.	8.0	mfd.	Electrolytic		Red
C14	P-80849-Lo.	8.0	mfd.	Electrolytic		Green
C16	P-80856	00075	mfd	Moulded		Violet
	P-80842-D	Complete Gang Assembly with Shield (No Dial Assembly)				

SERIES 13 SUPERHETERODYNE

GULBRANSEN CO.

MODEL 20 Series.
Schematic
Early-Late

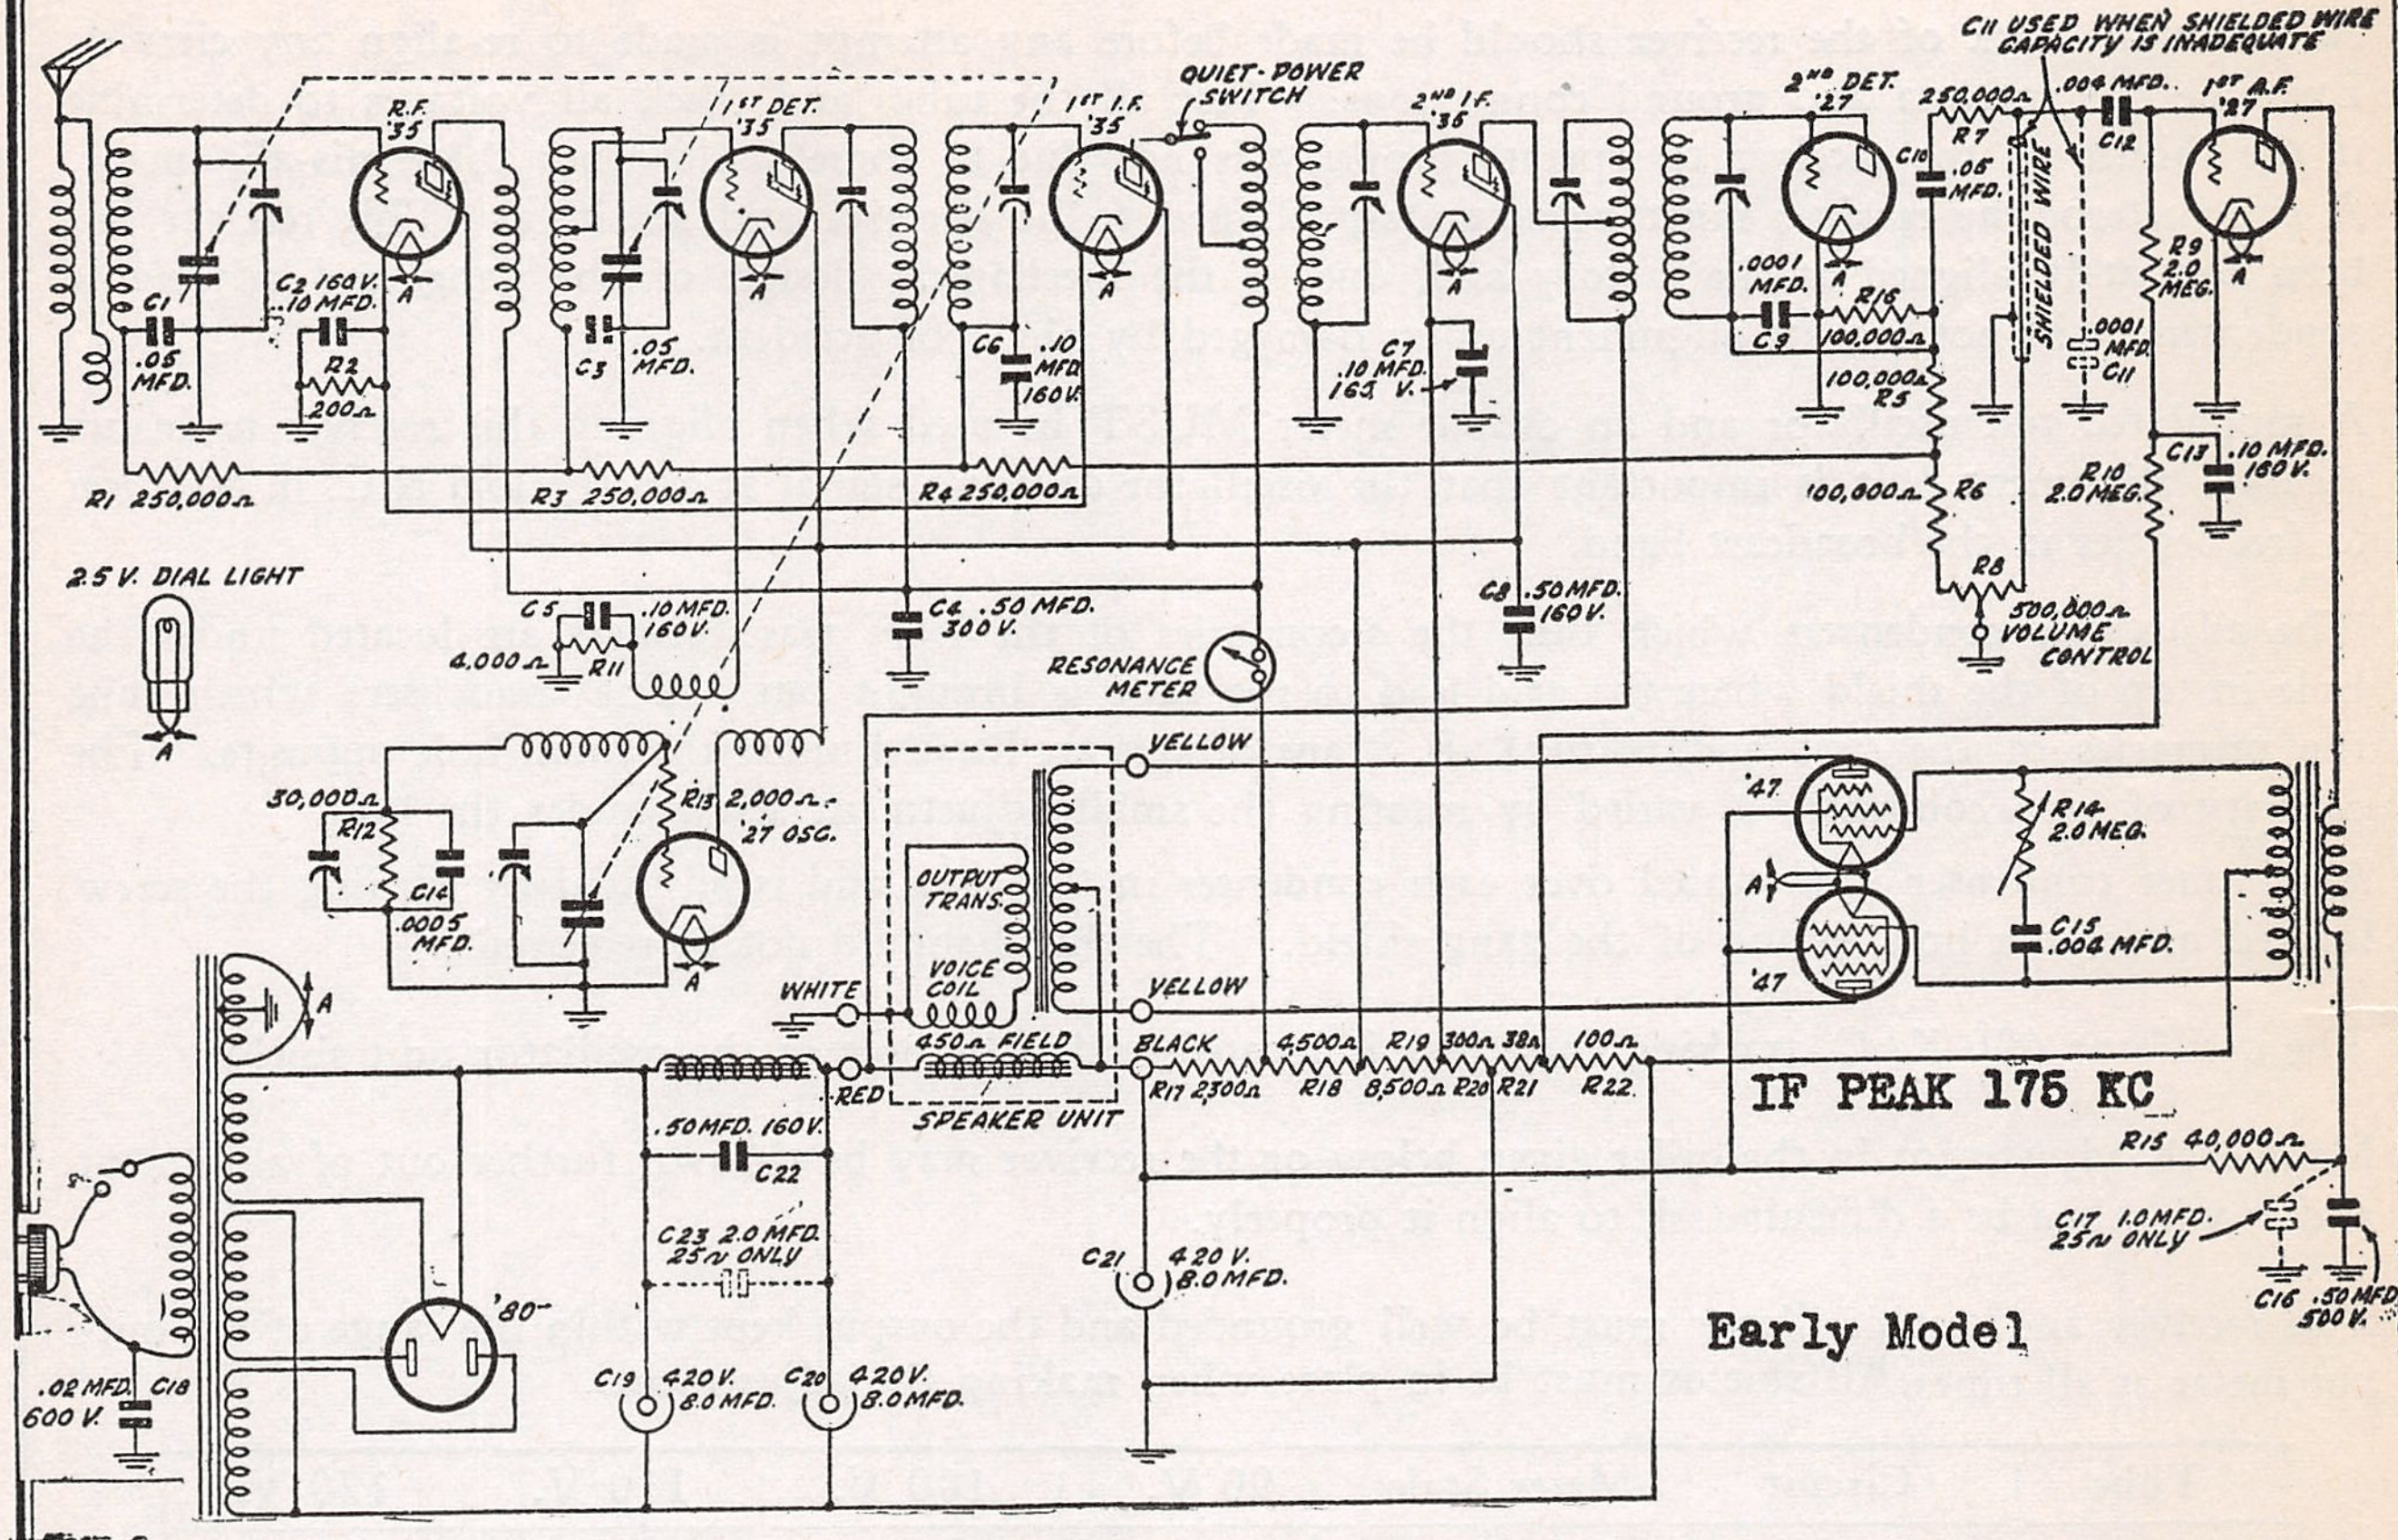
C11 USED WHEN SHIELDED WIRE CAPACITY IS INADEQUATE
R.F. '35
1ST DET. '35
1ST I.F. '35
QUIET-POWER SWITCH
2ND I.F. '35
2ND DET. '27
1ST A.F. '27
C1 .05 MFD.
C2 160 V. .10 MFD.
R2 200Ω
R1 250,000Ω
C3 .05 MFD.
R3 250,000Ω
C6 .10 MFD 160 V.
R4 250,000Ω
C7 .10 MFD. 160 V.
C10 .05 MFD.
R7 250,000Ω
.004 MFD. C12
.0001 MFD. C9
R16 100,000Ω
100,000Ω R5
SHIELDED WIRE
.0001 MFD. C11
R9 2.0 MEG.
100,000Ω R6
R8
500,000Ω VOLUME CONTROL
R10 2.0 MEG.
C13 .10 MFD. 160 V.
2.5 V. DIAL LIGHT
C5 .10 MFD. 160 V.
4,000Ω R11
C4 .50 MFD. 300 V.
C8 .50 MFD. 160 V.
RESONANCE METER
30,000Ω R12
C14 .0005 MFD.
R13 2,000Ω '27 OSC.
YELLOW
OUTPUT TRANS.
VOICE COIL
WHITE
YELLOW
450Ω FIELD
BLACK
RED
SPEAKER UNIT
R17 2300Ω
4,500Ω R18
R19 8,500Ω
300Ω R20
38Ω R21
100Ω R22
'47
R14 2.0 MEG.
C15 .002 MFD.
'47
R15 40,000Ω
C17 1.0 MFD. 25~ ONLY
C16 .50 MFD. 500 V.
.50 MFD. 160 V. C22
C23 2.0 MFD. 25~ ONLY
C21 420 V. 8.0 MFD.
'80
.02 MFD. C18 600 V.
C19 420 V. 8.0 MFD.
C20 420 V. 8.0 MFD.
A

IF PEAK 175 KC

Early Model

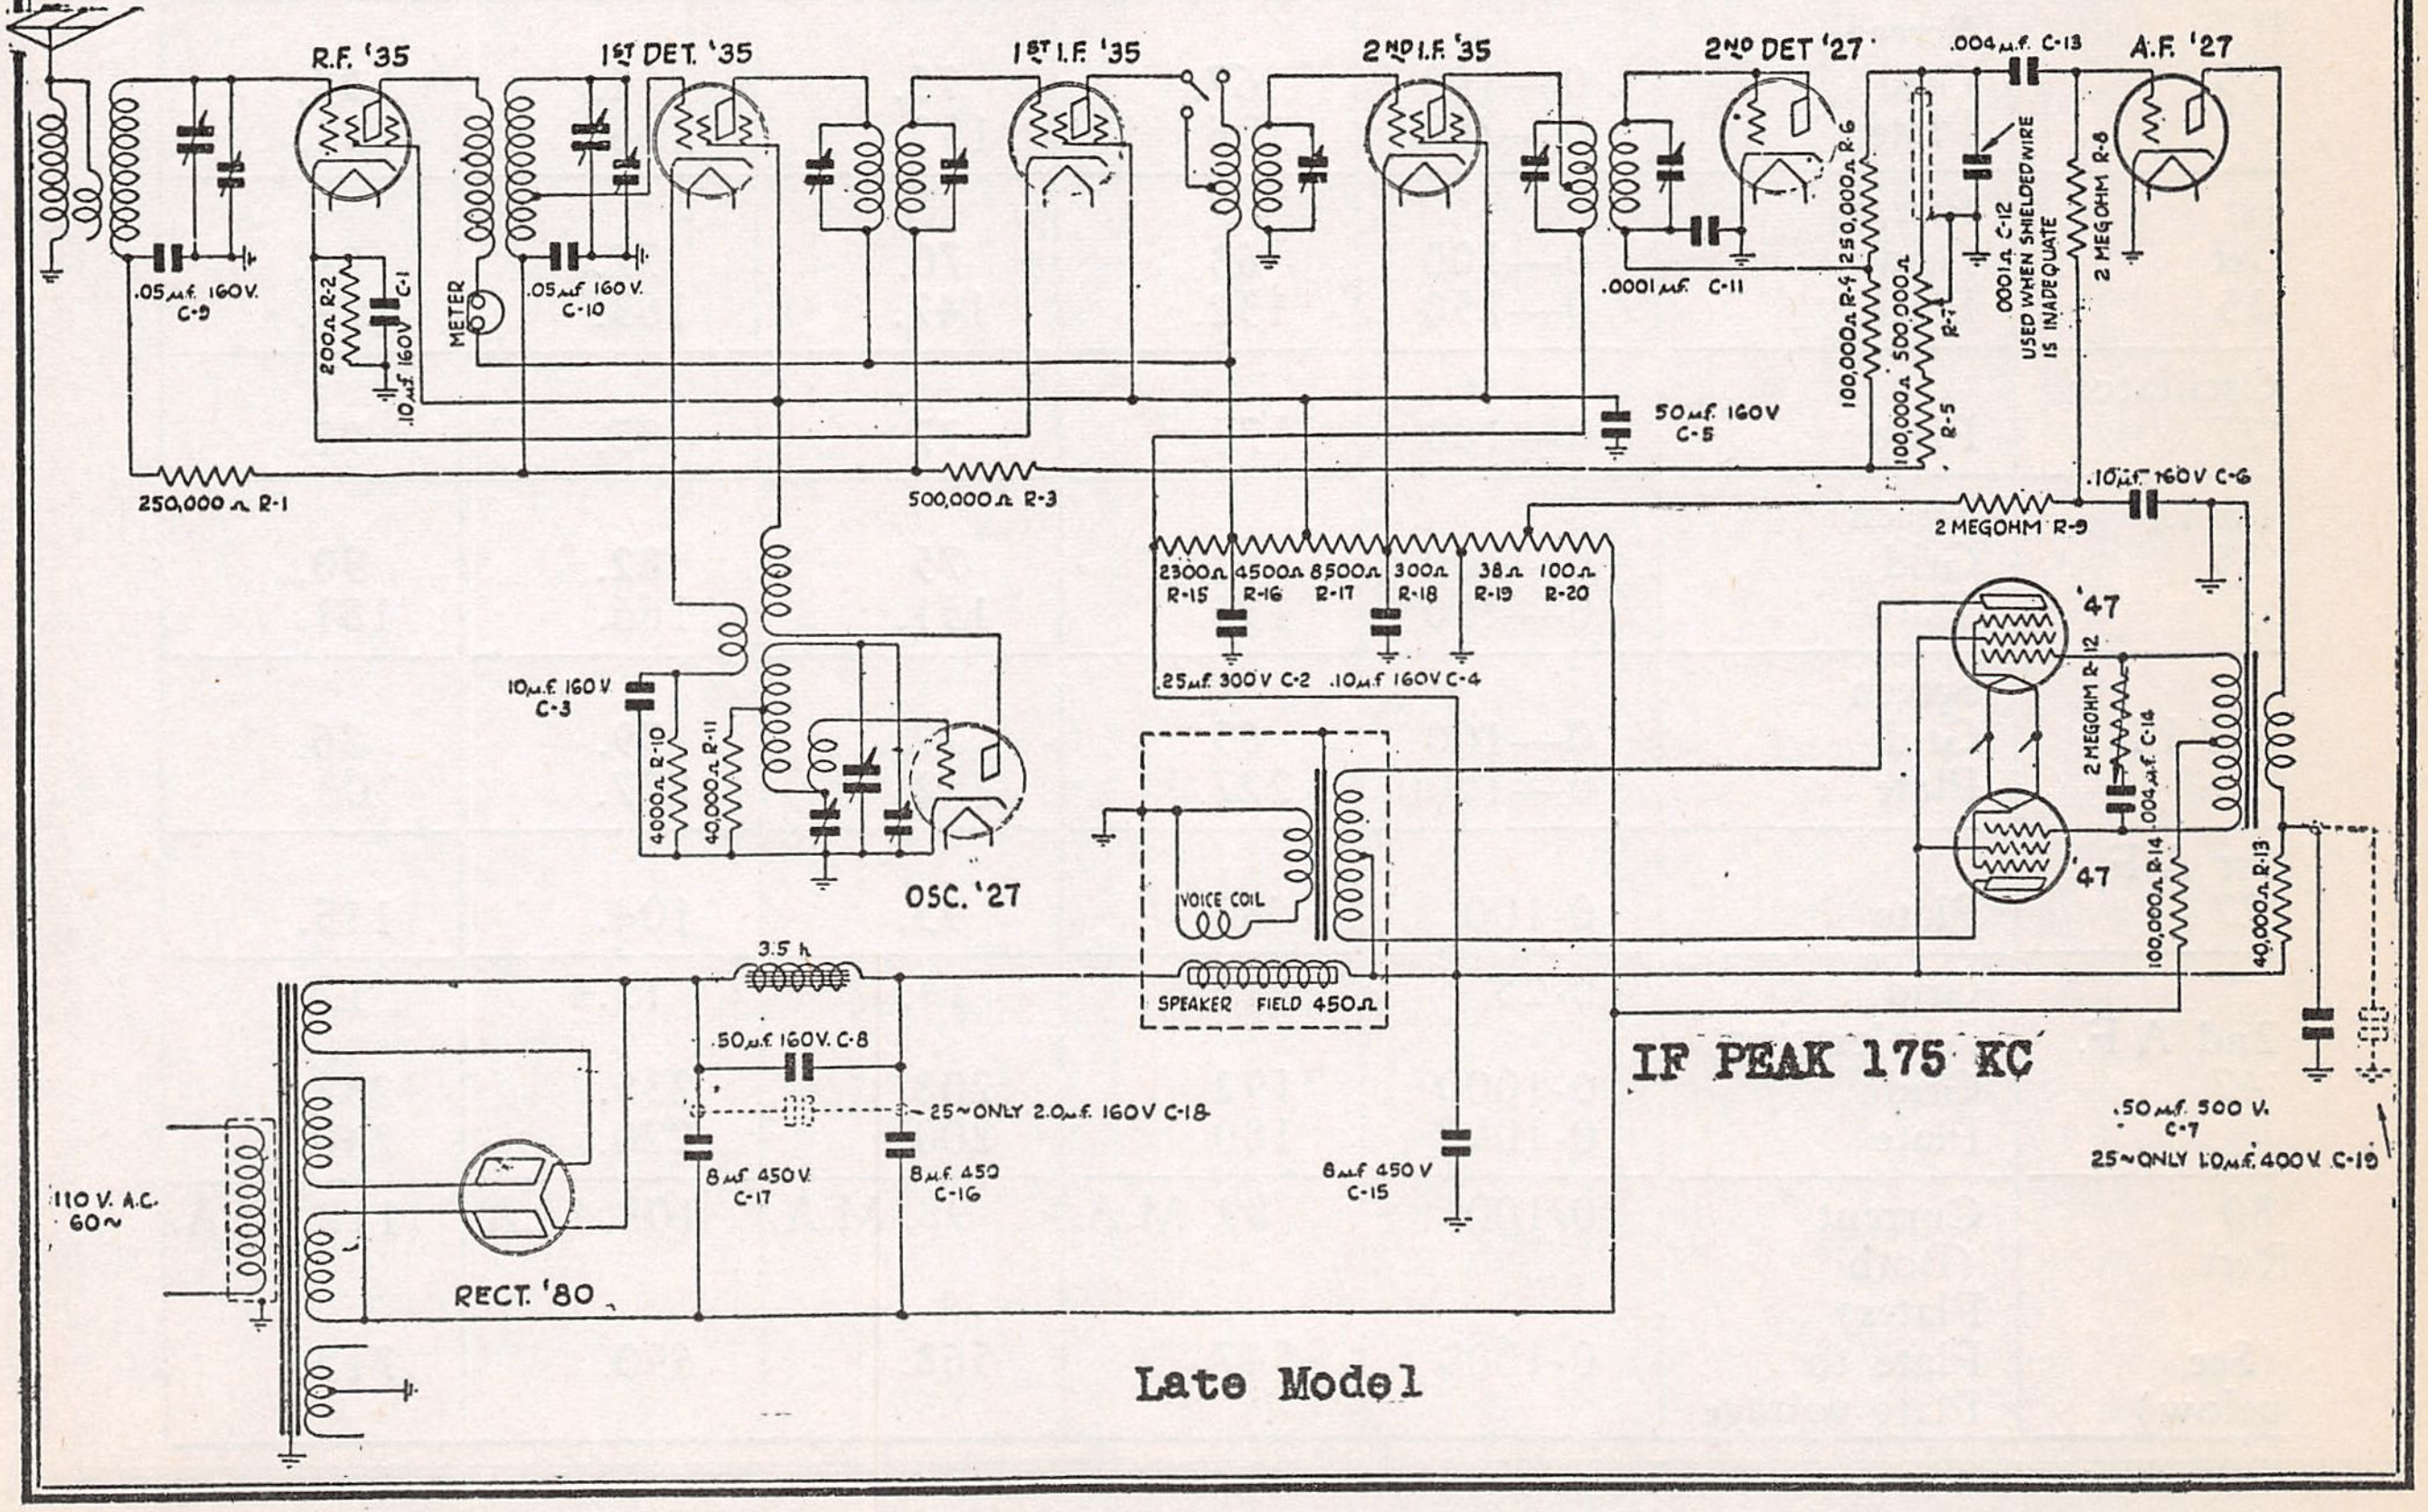
R.F. '35
1ST DET. '35
1ST I.F. '35
2ND I.F. '35
2ND DET '27
.004 µf. C-13
A.F. '27
.05 µf. 160 V. C-9
200Ω R-2
.10 µf 160 V C-1
METER
.05 µf 160 V. C-10
.0001 µf. C-11
250,000Ω R-6
100,000Ω R-4
500,000Ω R-7
100,000Ω R-5
.0001 µf. C-12 USED WHEN SHIELDED WIRE IS INADEQUATE
2 MEGOHM R-8
.50 µf. 160 V C-5
250,000Ω R-1
500,000Ω R-3
.10 µf 160 V C-6
2 MEGOHM R-9
2300Ω R-15
4500Ω R-16
8500Ω R-17
300Ω R-18
38Ω R-19
100Ω R-20
.25 µf. 300 V C-2
.10 µf 160 V C-4
.10 µf 160 V C-3
4000Ω R-10
40,000Ω R-11
OSC. '27
'47
2 MEGOHM R-12
.004 µf C-14
'47
VOICE COIL
SPEAKER FIELD 450Ω
100,000Ω R-14
40,000Ω R-13
3.5 h.
.50 µf. 160 V. C-8
25~ ONLY 2.0 µf. 160 V C-18
8 µf 450 V. C-17
8 µf 450 C-16
8 µf 450 V C-15
110 V. A.C. 60~
RECT. '80
.50 µf. 500 V. C-7
25~ ONLY 1.0 µf. 400 V. C-19

IF PEAK 175 KC

Late Model

MODEL 20 Series
Voltage
Alignment

GULBRANSEN CO.

ALIGNMENT

A thorough check of the receiver should be made before any attempt is made to re-align any circuits. Examine the antenna and ground connections. Test all the tubes and check all voltages to determine if the failure of the receiver to operate properly is not due to some fault other than mis-alignment. A superheterodyne receiver must be accurately aligned to be selective and sensitive. This receiver has been accurately aligned at the factory and, due to the mechanical design of the gang and adjustable condensers, will not lose its alignment unless damaged by abuse or accident.

A modulated test oscillator and an output meter MUST be used when aligning this receiver to insure accurate alignment. It is important that the oscillator deliver a signal at exactly 175 K.C. in addition to frequencies in the broadcast band.

The adjustable condensers which tune the secondaries of the I. F. transformers are located under the hole in top of the shield where the grid lead to the tube is brought out. The condensers which tune the primaries of the first and third I. F. transformers are located under the small hole opposite. The capacity of each condenser is varied by rotating the small adjustment screw under the hole.

A trimmer condenser is mounted over each condenser in the gang and is adjusted by turning the screw located under the hole in top of the gang shield. The shield should not be removed.

The oscillator 600 K C. tracking condenser is located under the hole in the oscillator unit shield.

Make each adjustment in the order given below or the receiver may be thrown further out of alignment and it will then be a difficult task to align it properly.

The receiver and test oscillator must be well grounded and the output kept within the range of the output meter at all times. All shields must be in place when making the adjustments.

Tube	Circuit	Meter Scale	90 V.	100 V.	110 V.	120 V.
R.F '35	Screen Grid	0—100	67.	75.	82.	90.
	Plate	0—250	136.	151.	166.	181.
1st Det '35	Screen Grid	0—100	63	70.	77.	84.
	Plate	0—250	132.	147.	163.	179.
Oscillator '27	Plate	0—100	70	77	85.	92.
1st I.F '35	Screen Grid	0—100	67	75	82.	90.
	Plate	0—250	136.	151.	166.	181.
2nd I.F '35	Screen Grid	0—100	65.	72.	79.	86.
	Plate	0—1000	227.	252.	277.	303.
1st A.F. '27	Plate	0-100	87.	95.	104.	115.
2nd A F. '47	Grid	0-25	12.7	14.	15.4	17.
	Accelerating Grid	0-1000	192	208.	235.	252.
	Plate	0-1000	180	200.	220.	240.
80 Rect.	Current (Both Plates)	0-100	89. M.A.	98. M.A.	108. M.A.	118. M.A.
(See below)	Plate to Plate voltage	0-1000	547	568.	690.	712.

GULBRANSEN CO.

MODEL 20 Series
Parts List
Socket- Data

Part No.	Name	List Price
P-20408	Tube Shield Base	.10
P-1193	Laminated Phono Jack	.15
P-1336	Control Knob	.25
P-1092	Grid Clip Assembly	.10
P-20365	Wire Clamp	.10
P-1273	Dial Light Bulb, 2.5 volts	.25
P-1011	S. P. D. T. Switch (Quiet-Power or Phono)	.70
P-1384	Resonance Meter	2.75
P-50534	Power Supply Choke	1.40
P-10180	Rubber Chassis Support (Large)	.10
P-10181	Rubber Chassis Support (Small)	.10
P-1146	Terminal Strip (Large)	.15
P-1173	Terminal Strip (Small)	.10
P-20422	Chassis Mounting Stud	.10
P-1388	Dial Escutcheon Plate (Give Model number of set)	.60
P-20286	Resistor Spring Mtg. Bracket	.10
P-1054	On-Off Toggle Switch	.75
P-80889	3 Gang Condenser less drive for rubber pinion drive only	6.40
P-1383-B	Drive Bracket & Bearing Assembly	.30
P-30365	Bushing for rubber pinion	.10
P-10182	Rubber pinion	.10
P-20473	Drive Shaft	.10
P-1394	Dial Strip & Bracket Assembly	.45
P-1382	Drive Disc Hub & Fulcrum Assembly	.25
P-1393	Indicator Assembly	.25
P-80866	3 Gang Condenser less drive for friction drive models	6.40
*P-1128	Drive Bracket & Bearing Assembly	.15
*P-1197-B	Friction Drive Shaft Assembly	.25
*P-1340	Dial Strip	.20
*P-20283	Dial Drum	.40

*Asterisk refers to parts used on drum dial models.

RESISTORS

Part No.	Key No.	Resistance	Type	List Price
P-90954-B	R1	250,000	Carbon	$ .25
P-90935-A	R2	200	Carbon	.25
P-90938	R3	500,000	Carbon	.25
P-90912-A	R4	100,000	Carbon	.25
P-90912-A	R5	100,000	Carbon	.25
P-90954-B	R6	250,000	Carbon	.25
P-90980	R7	0—500,000	Volume Control	1.35
P-90923-A	R8	2 meg.	Carbon	.25
P-90923-A	R9	2 meg.	Carbon	.25
P-90947	R10	4,000	Carbon	.20
P-90916	R11	40,000	Carbon	.25
P-90986-B	R12	0—2 meg.	Tone Control	.95
P-90945	R13	40,000	Carbon	.30
P-90912-A	R14	100,000	Carbon	.25
P-91000	R15	2,300	Vitreous Enamel Resistor	1.80
	R16	4,500		
	R17	8,500		
	R18	300		
	R19	38		
	R20	100		

CONDENSERS

Part No.	Key No.	Capacity	Type	Voltage Rating			List Price
P-80862	C9	.05	Tubular	160 V.			$0.30
P-80862	C10	.05	Tubular	160 V.			.30
P-80865	C11	.0001	Molded				.20
P-80865	C12	.0001	Molded				.20
P-80863	C13	.004	Tubular				.25
P-80863	C14	.004	Tubular				.25
P-80901	C15	8.0	Electrolytic	450 V.			1.50
P-80900	C16	8.0	Electrolytic	450 V.			1.60
P-80900	C17	8.0	Electrolytic	450 V.			1.60
P-80861-F (Block)	C1	.1	Block	160 V.	White, Green Tr.	Common Black Lead	3.20
	C2	.25		300 V.	Blue		
	C3	.1		160 V.	White, Green Tr.		
	C4	.1		160 V.	White, Red Tr.		
	C5	.5		160 V.	Brown		
	C6	.1		160 V.	White		
	C7	.5		500 V.	Red		
	C8	.5		160 V.	Yellow (2 Leads)		
P-80879	C18	2.0	Block	160 V.	25 cy. only		2.20
	C19	1.0		400 V.	25 cy. only		

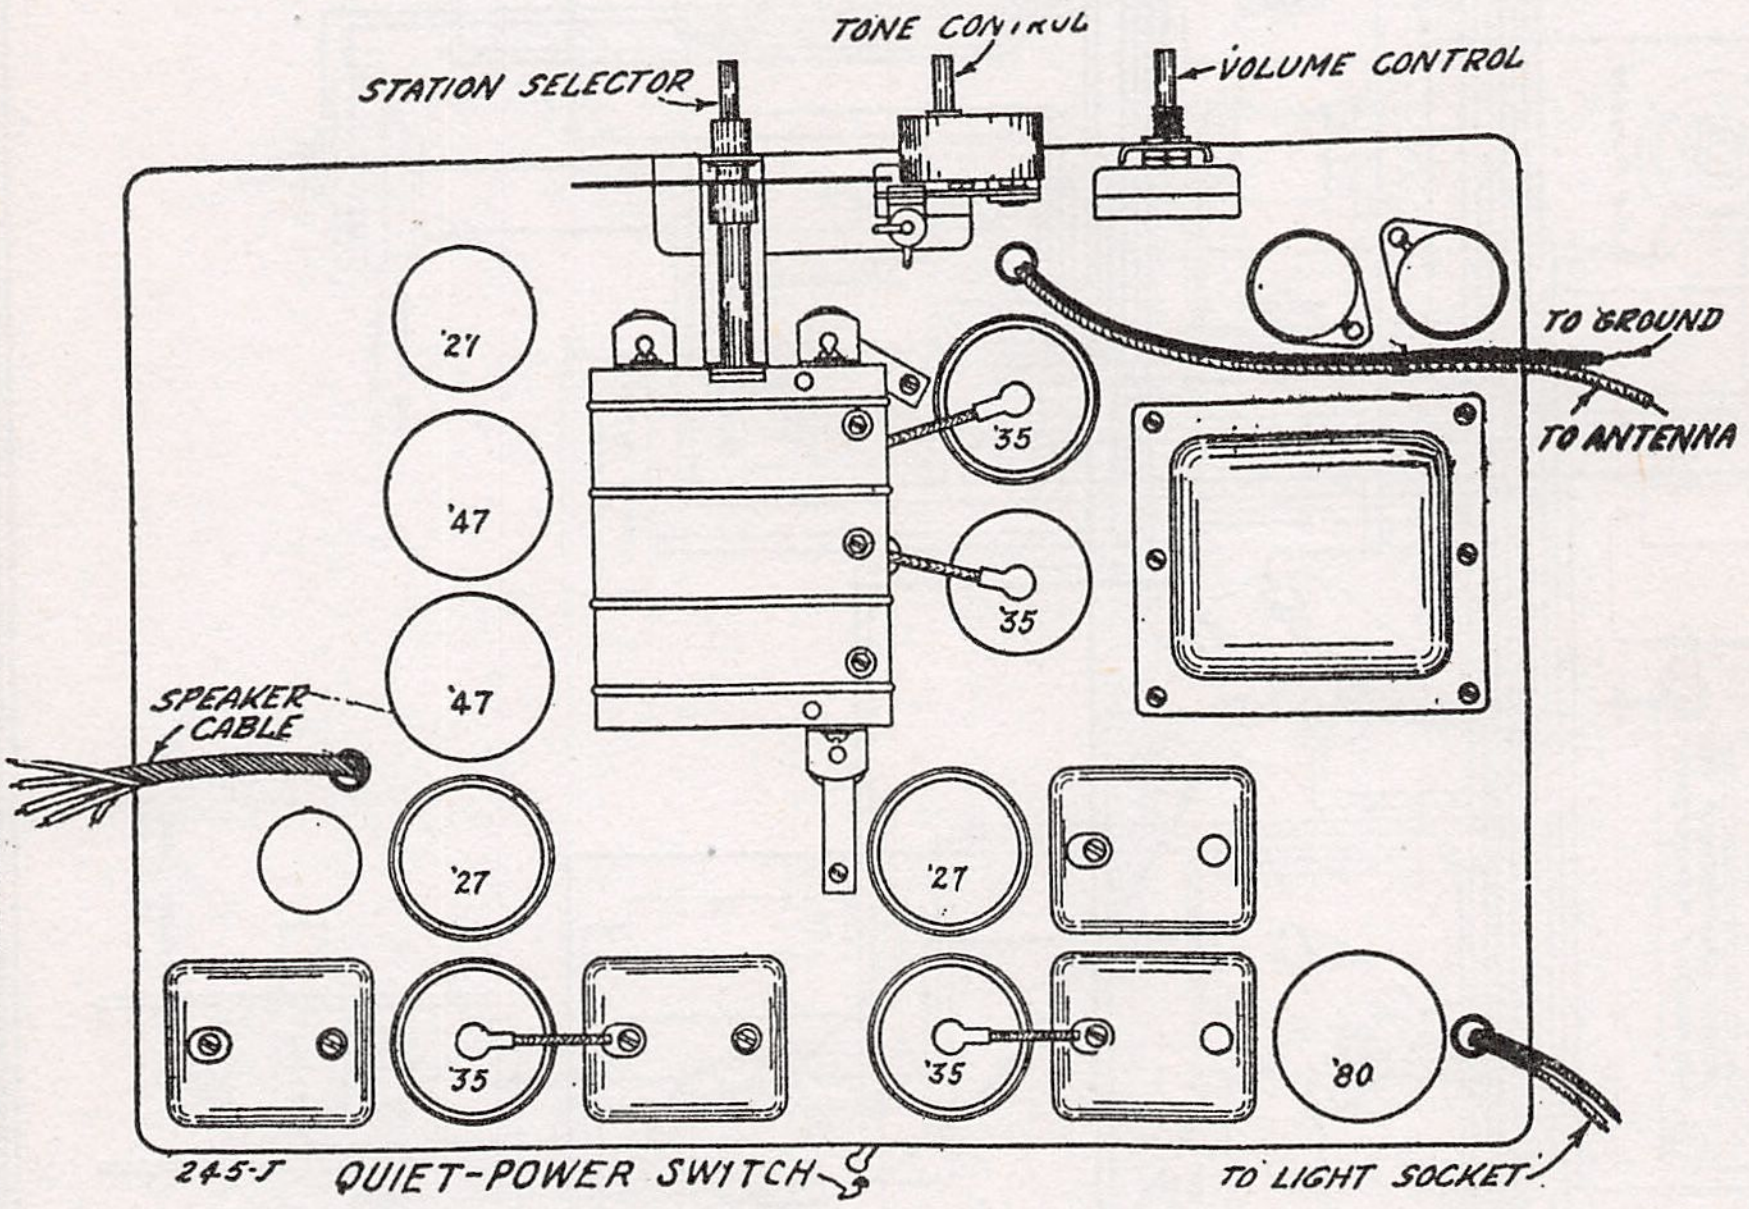

Key No.	Capacity	Lead Color	Lead Color
C22	.5 mfd.	Yellow	Yellow
C16	.5 mfd.	Red	Common Black
C4	.5 mfd.	Blue	Common Black
C8	.5 mfd.	Brown	Common Black
C5	.1 mfd.	White, Green Tr.	Common Black
C2	.1 mfd.	White, Green Tr.	Common Black
C7	.1 mfd.	White, Red Tr.	Common Black
C6	.1 mfd.	Black, White Tr.	Black, White Tr.
C13	.1 mfd.	White	White . .

Referring to sections C6 and C13 in the above list, it will be noted that these have two leads each with the same color code. This was changed in a later model to one lead each, the other lead of each section being connected to the common black lead.

At a later date, two further changes in this condenser block were made. Section C6 which bypassed the grid return of the first I.F. tube to ground was discontinued and section C4 was changed to .25 mfd. These changes bring the block up to date.

The key numbers (C5, etc.) in the above description of the condenser block refer to the key numbers as shown in the schematic circuit diagram of the early chassis, The key numbers of the condenser block as shown in the parts list in the foregoing service manual conform with the key numbers as shown in the schematic of the present chassis, Fig. 1 As explained at the beginning of this supplement, the two sets of key numbers do not coincide.

MODEL 23
Chassis

GULBRANSEN CO.

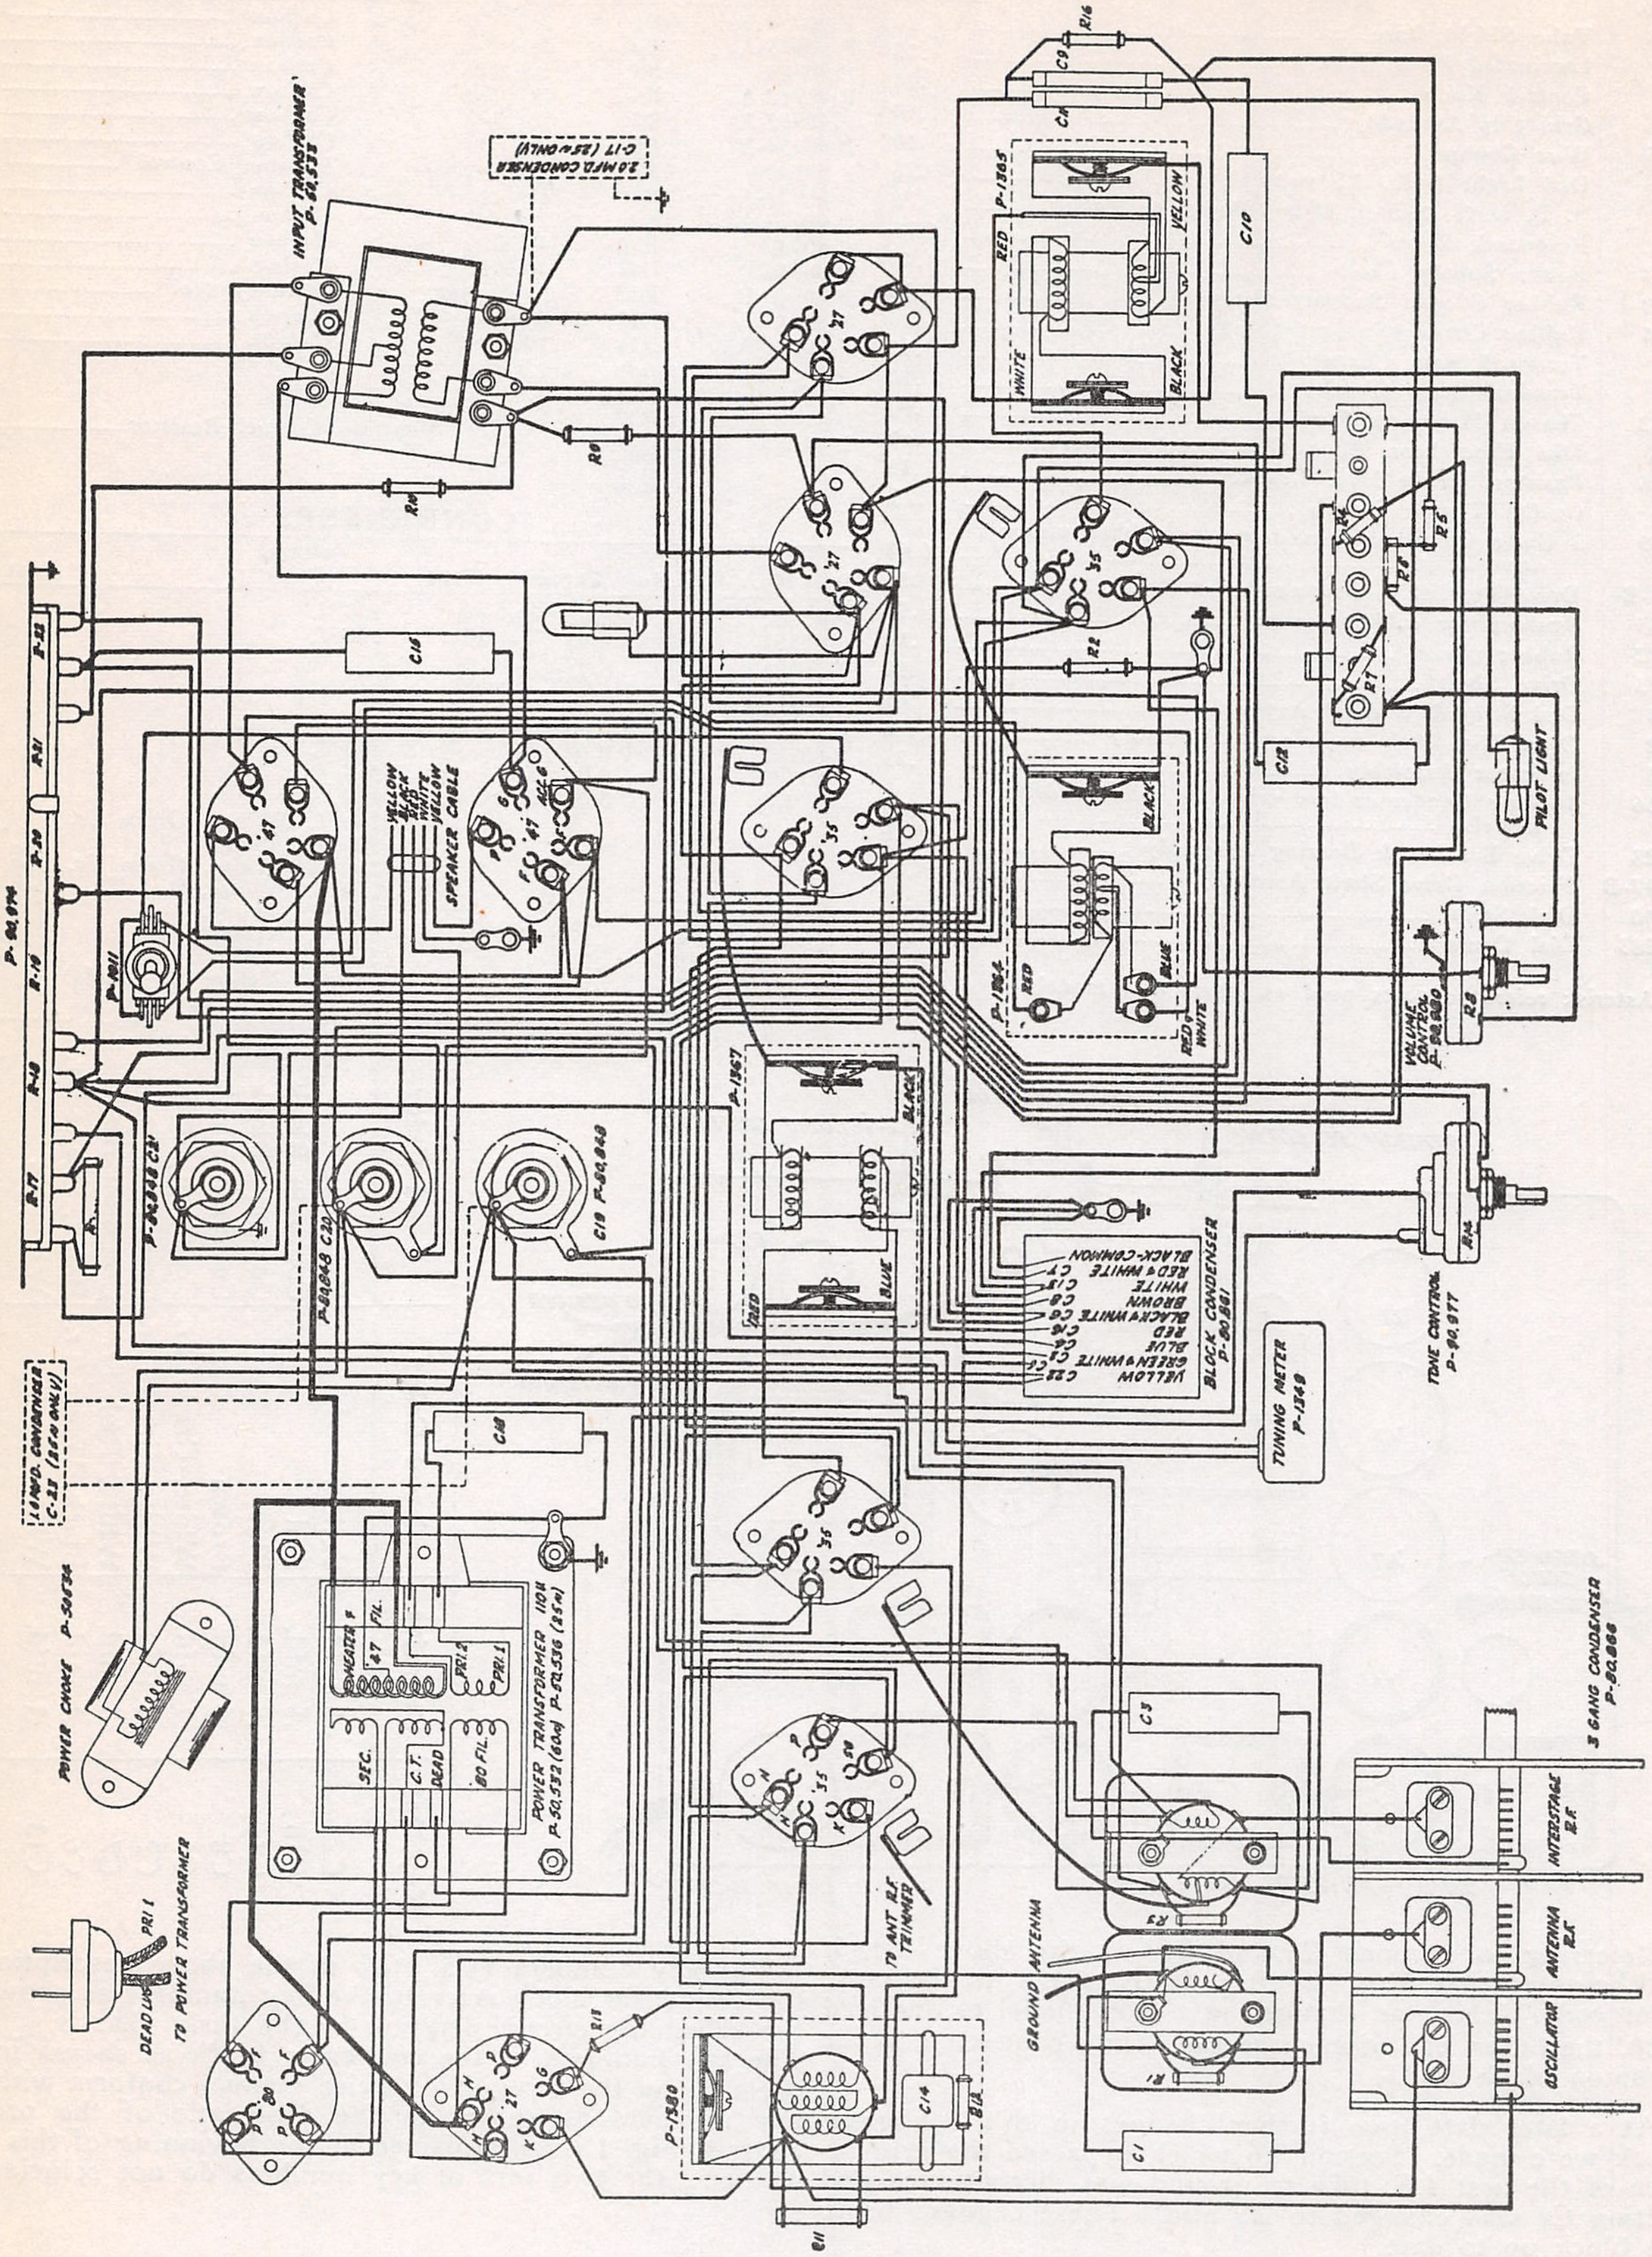
INPUT TRANSFORMER P-81,533
20 MFD CONDENSER C-17 (25∼ ONLY)
R16
C9
C8
C10
P-1305
RED
YELLOW
WHITE
BLACK
'27
'27
'35
'47
'47
'35
'35
'35
'80
'27
R9
R10
C15
R-22
R-21
R-20
R-19
R-18
R-17
P-90,974
P-1011
YELLOW
BLACK
WHITE
YELLOW
SPEAKER CABLE
R2
R4
R5
R6
R7
C12
PILOT LIGHT
VOLUME CONTROL P-90,960
R3
P-1364
RED
BLUE
RED & WHITE
P-1367
BLACK
RED
BLUE
P-90,848 C21
P-90,848 C20
C19 P-90,848
BLOCK CONDENSER P-90,861
BLACK-COMMON
RED & WHITE C7
WHITE C13
BROWN C8
BLACK & WHITE C6
RED C16
BLUE C4
GREEN & WHITE C3
C5
YELLOW C22
TONE CONTROL P-90,977
R14
TUNING METER P-1349
16 MFD CONDENSER C-22 (25∼ ONLY)
C18
POWER CHOKE P-90,936
POWER TRANSFORMER 110V P-50,532 (60∼) P-50,536 (25∼)
HEATER '27 FIL.
PRI 2
PRI 1
SEC.
C.T.
DEAD
'80 FIL.
PRI 1
DEAD LUG
TO POWER TRANSFORMER
R13
P-1380
C14
B19
C11
TO ANT R.F TRIMMER
GROUND
ANTENNA
C3
R3
R1
C1
3 GANG CONDENSER P-90,888
INTERSTAGE R.F
ANTENNA R.F
OSCILLATOR

SERIES 23 SUPERHETERODYNE

MODEL 23
Schematic

GULBRANSEN CO.

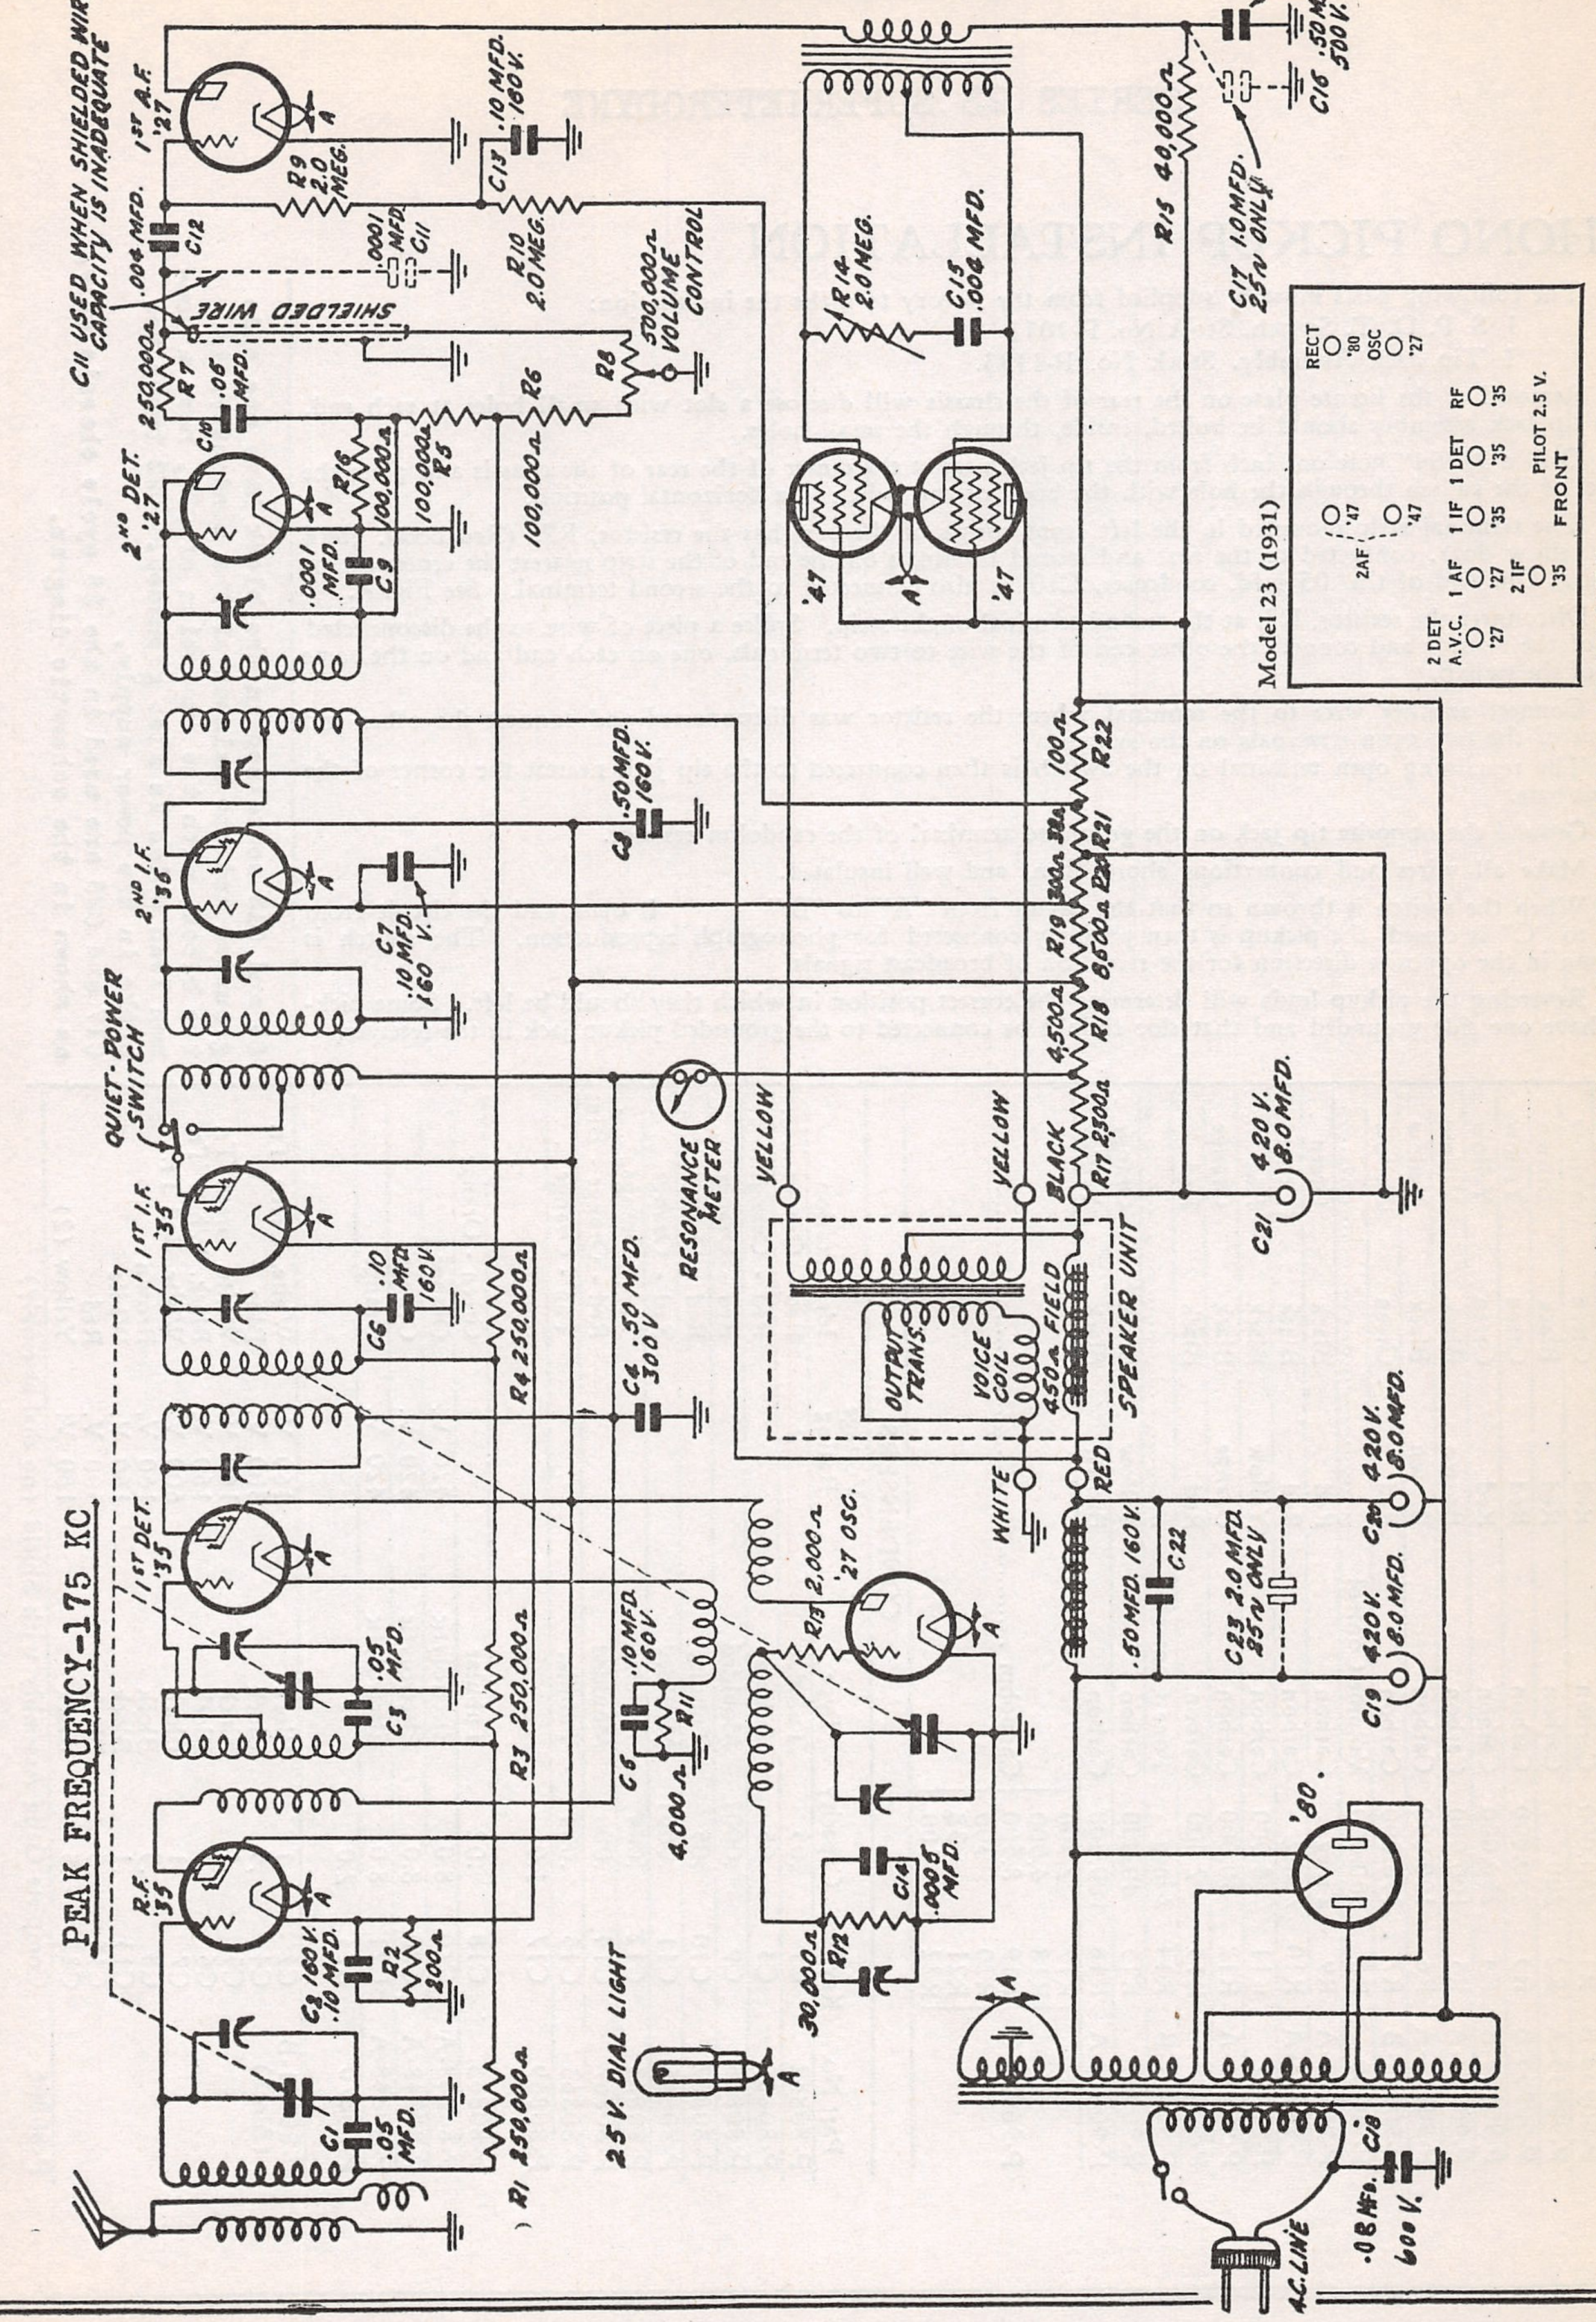
PEAK FREQUENCY–175 KC
R.F. '35
1ST DET. '35
1ST I.F. '35
2ND I.F. '35
2ND DET. '27
1ST A.F. '27
'27 OSC.
'47
'47
'80
C11 USED WHEN SHIELDED WIRE CAPACITY IS INADEQUATE
SHIELDED WIRE
QUIET-POWER SWITCH
RESONANCE METER
25 V. DIAL LIGHT
A.C. LINE
C1 .05 MFD.
C2 160 V. .10 MFD.
R2 200Ω
C3 .05 MFD.
C5 .10 MFD. 160 V.
R11 4,000Ω
C4 .50 MFD. 300 V.
C6 .10 MFD. 160 V.
C7 .10 MFD. 160 V.
C8 .50 MFD. 160 V.
C9 .0001 MFD.
C10 .05 MFD.
C11 .0001 MFD.
C12 .004 MFD.
C13 .10 MFD. 160 V.
C14 .0005 MFD.
C15 .006 MFD.
C16 .50 MFD. 500 V.
C17 1.0 MFD. 25Ω ONLY
C18 .08 MFD. 600 V.
C19 420 V. 8.0 MFD.
C20 420 V. 8.0 MFD.
C21 420 V. 8.0 MFD.
C22 .50 MFD. 160 V.
C23 2.0 MFD. 25Ω ONLY
R1 250,000Ω
R3 250,000Ω
R4 250,000Ω
R5 100,000Ω
R6 100,000Ω
R7 250,000Ω
R8 500,000Ω VOLUME CONTROL
R9 2.0 MEG.
R10 2.0 MEG.
R12 30,000Ω
R13 2,000Ω
R14 2.0 MEG.
R15 40,000Ω
R16 100,000Ω
R17 2,300Ω
R18 8,500Ω
R19 4,500Ω
R20 300Ω
R21 38Ω
R22 100Ω
YELLOW
YELLOW
BLACK
WHITE
RED
OUTPUT TRANS.
VOICE COIL
450Ω FIELD
SPEAKER UNIT
A
Model 23 (1931)
RECT '80
OSC '27
RF '35
1 DET '35
1 IF '35
2 IF '35
1 AF '27
2 DET A.V.C. '27
2AF '47 '47
PILOT 2.5 V.
FRONT

SERIES 23, TEN TUBE SUPERHETERODYNE CHASSIS
110 and 220 volt, 25 to 60 cycle.

MODEL 23
Parts List
Phono Data

GULBRANSEN CO.

SERIES 23 SUPERHETERODYNE

PHONO PICKUP INSTALLATION

The following parts must be supplied from the factory to make the installation:

1 S. P. D. T. Switch, Stock No. P-1011
1 Tip Jack Assembly, Stock No. P-1193.

Removal of the license plate on the rear of the chassis will disclose a slot with small holes at each end. The tip jack assembly should be bolted, inside, through the small holes.

Drill a 31/64″ hole one inch from the tip jack nearest the center of the rear of the chassis and place the barrel of the switch through the hole with the body of the switch in a horizontal position.

The terminal strip mounted in the left front corner of the base has the resistor, R7, (Red body, green end, yellow dot), connected to the first and second terminals on the end of the strip nearest the center of the chassis. One end of the .05 mfd. condenser, C10, is also connected to the second terminal. See Fig. 4.

Disconnect the resistor, R7, at the second terminal of the strip. Splice a piece of wire to the disconnected end of the resistor and connect the other end of the wire to two terminals, one on each end and on the same side of the switch.

Connect another wire to the terminal where the resistor was disconnected and connect the other end to one of the two open terminals on the switch.

The remaining open terminal on the switch is then connected to the tip jack nearest the corner of the chassis base.

Ground the opposite tip jack on the grounded terminal of the candohm resistor.

Make all wires and connections short, firm, and well insulated.

When the switch is thrown so that the circuit from "A" to "B," is open and the circuit from "B" to "C" is closed, the pickup is then properly connected for phonograph reproduction. The switch is thrown in the opposite direction for the reception of broadcast signals.

Reversing the pickup leads will determine the correct position in which they should be left. Some pickups have one side grounded and that side should be connected to the grounded pickup jack in the receiver.

**C6 and C13 contained in the block have one side grounded and the balance of the condensers in the block, with the exception of C22, have a common lead which is also grounded. C22 tunes the choke in the power supply.
C17 and C23 are used in the 25 cycle chassis only, as shown in the schematic diagram.**

RESISTORS

Part No.	Key No.	Resistance	Type	Base	End	Dot
P-90954-B	R1	250.000	Carbon	Red	Green	Yellow
P-90935-A	R2	200	Carbon	Red	Black	Brown
P-90954-B	R3	250.000	Carbon	Red	Green	Yellow
P-90954-B	R4	250,000	Carbon	Red	Green	Yellow
P-90912-A	R5	100,000	Carbon	Brown	Black	Yellow
P-90912-A	R6	100,000	Carbon	Brown	Black	Yellow
P-90954-B	R7	250,000	Carbon	Red	Green	Yellow
P-90980	R8	500,000	Volume Control			
P-90923-A	R9	2 meg.	Carbon	Red	Black	Green
P-90923-A	R10	2 meg.	Carbon	Red	Black	Green
P-90947	R11	4,000	Carbon	Yellow	Black	Red
P-90956-A	R12	30,000	Carbon	Orange	Black	Orange
P-90906-C	R13	2,000	Carbon	Red	Black	Red
P-90977-B	R14	2 meg.	Tone Control			
P-90945	R15	40,000	Carbon	Yellow	Black	Orange
P-90912-A	R16	100,000	Carbon	Brown	Black	Yellow
P-90974-C	R17 R18 R19 R20 R21 R22	2,300 4,500 8,500 300 38 100	Candohm			

CONDENSERS

Part No.	Key No.	Capacity	Type	Voltage Rating	Identification
P-80862	C1	.05	Tubular		Red - Orange
P-80862	C3	.05	Tubular		Red - Orange
P-80865	C9	.0001	Moulded		Red - Orange
P-80862	C10	.05	Tubular		Red - Orange
P-80865	C11	.0001	Moulded		Red - Orange
P-80863	C12	.004	Tubular		Tan - Orange
P-80867	C14	.0005	Moulded		Red - Orange - Blue
P-80863	C15	.004	Tubular		Tan - Orange
P-80869	C17	1.0			
P-80868	C18	.02	Tubular		Green - Orange
P-80848-A	C19	8.0	Electrolytic	420 V.	Orange
P-80848-A	C20	8.0	Electrolytic	420 V.	Orange
P-80848-A	C21	8.0	Electrolytic	420 V.	Orange
P-80870	C23	2.0			
P-80861-B (Block)	C2	.1	Block	160 V.	White, Green Tr.
	C4	.5	Block	300 V.	Blue
	C5	.1	Block	160 V.	White, Green Tr.
	C6	.1	Block	160 V.	Black, White Tr.
	C7	.1	Block	600 V.	White, Red Tr.
	C8	.5	Block	160 V.	Brown
	C13	.1	Block	160 V.	White
	C16	.5	Block	500 V.	Red
	C22	.5	Block	160 V.	Yellow (2)
P-80866	Complete Gang Assembly with Shield (no dial assembly)				

MODEL 23
Voltage
Phono Data

GULBRANSEN CO.

SERIES 23 SUPERHETERODYNE

POWER TRANSFORMER

Fig. 4 shows the 110 volt power transformer connections. One side of the 110 volt A. C. line is connected to the terminal marked "Pri. 1" and the other side to the open terminal, on the opposite side of the winding, which is in turn connected to one terminal of the switch on the receiver. The switch completes the circuit to the "Pri. 2" terminal.

The 25 cycle transformer is especially designed to operate on 110 volt, 25 cycle current, but may also be operated on any 110 v. A. C. supply having a higher frequency, after the condensers C17 and C23 have been disconnected.

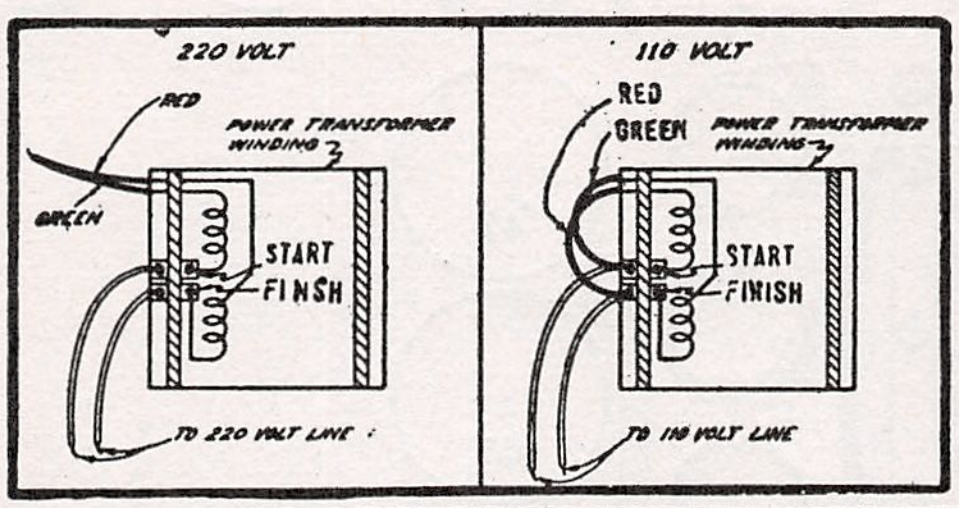

Receivers having a 220 volt, 40 to 60 cycle power transformer may also be operated on 110 volt, 40 to 60 cycle current when connections on the primary of the transformer have been changed.

The red and green wires shown in the 220 volt sketch, must be disconnected and then connected as shown in the 110 volt sketch. No other changes are necessary.

Tube	Circuit	Meter Scale	110 V.
R.F. '35	Screen Grid Plate	0—100 0—250	82. 166.
1st Det. '35	Screen Grid Plate	0—100 0—250	77. 163.
Oscillator '27	Plate	0—100	85.
1st I.F. '35	Screen Grid Plate	0—100 0—250	82. 166.
2nd I.F. '35	Screen Grid Plate	0—100 0—1000	79. 277.
1st A.F. '27	Plate	0-100	104.
2nd A.F. '47	Grid Accelerating Grid Plate	0-25 0-1000 0-1000	15.4 235. 220.
'80 Rect. (See below)	Current (Both Plates) Plate to Plate voltage	0-100 0-1000	108. M.A. 690.

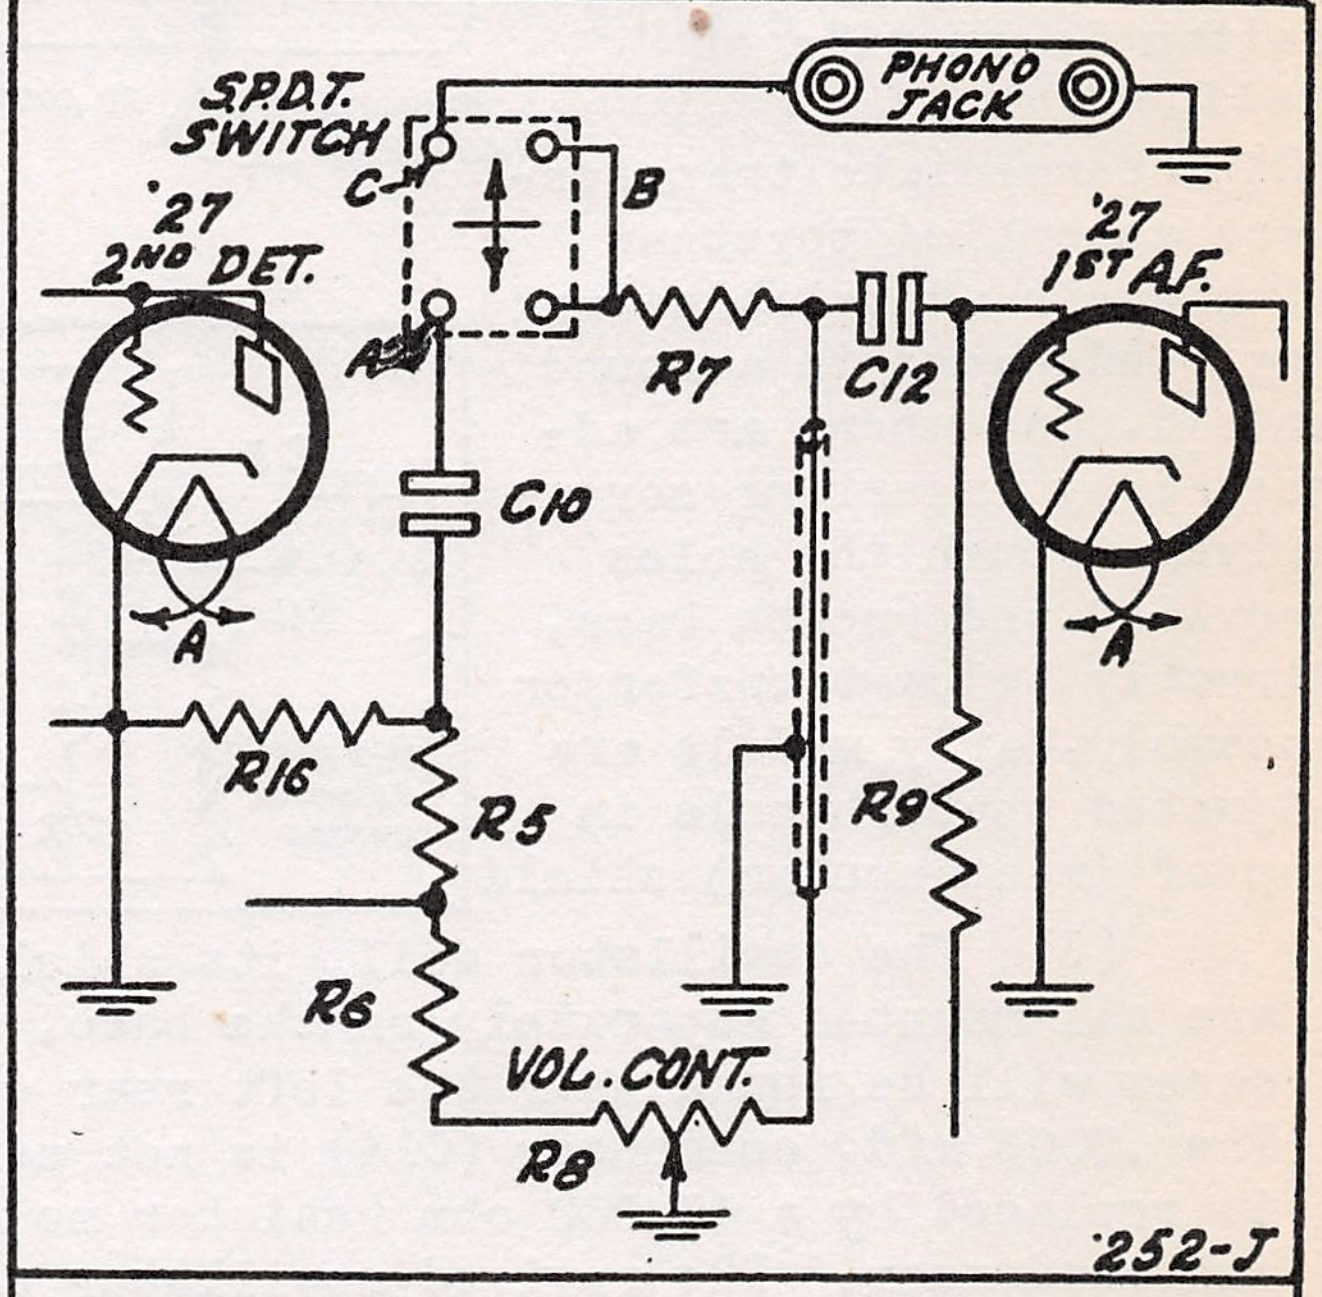

Phonograph Hook-up

The '80 rectifier plate voltages shown are the totals of both plates, measured from each plate to center tap of high voltage secondary

All voltages taken with a 1,000 ohm per volt voltmeter on the scale in the column headed "Meter Scale." Turn the volume all the way on, connect the antenna and ground leads together and turn the gang condenser plates all the way out. CHECK THE LINE VOLTAGE.

The measurement of grid bias voltages (except on the 47 pentodes) is not recommended, as this causes an abnormal rise in plate current which is injurious to the tube. Further, the measurement of actual grid bias voltages is impossible due to the high resistance in the grid circuits. When the receiver does not function properly and the trouble is apparently due to improper grid bias on any tube or tubes, the cause of the trouble may be determined by applying the proper continuity tests.

CAUTION: IN ORDER THAT THE EFFICIENCY OF EACH TUBE MAY BE COMPARED WITH THAT OF OTHER TUBES OF THE SAME TYPE, THEY MUST NOT BE TESTED IN THE SOCKET IN WHICH THEY ARE USED. TEST ALL '35 TUBES IN THE SECOND I. F. SOCKET AND TEST THE '27 TUBES IN THE FIRST A. F. SOCKET. TAKE THE VOLTAGE READINGS AT THE SOCKET IN WHICH THE TUBE IS USED.

MODEL 23
Data

GULBRANSEN CO.

SERIES 23
SUPERHETERODYNE

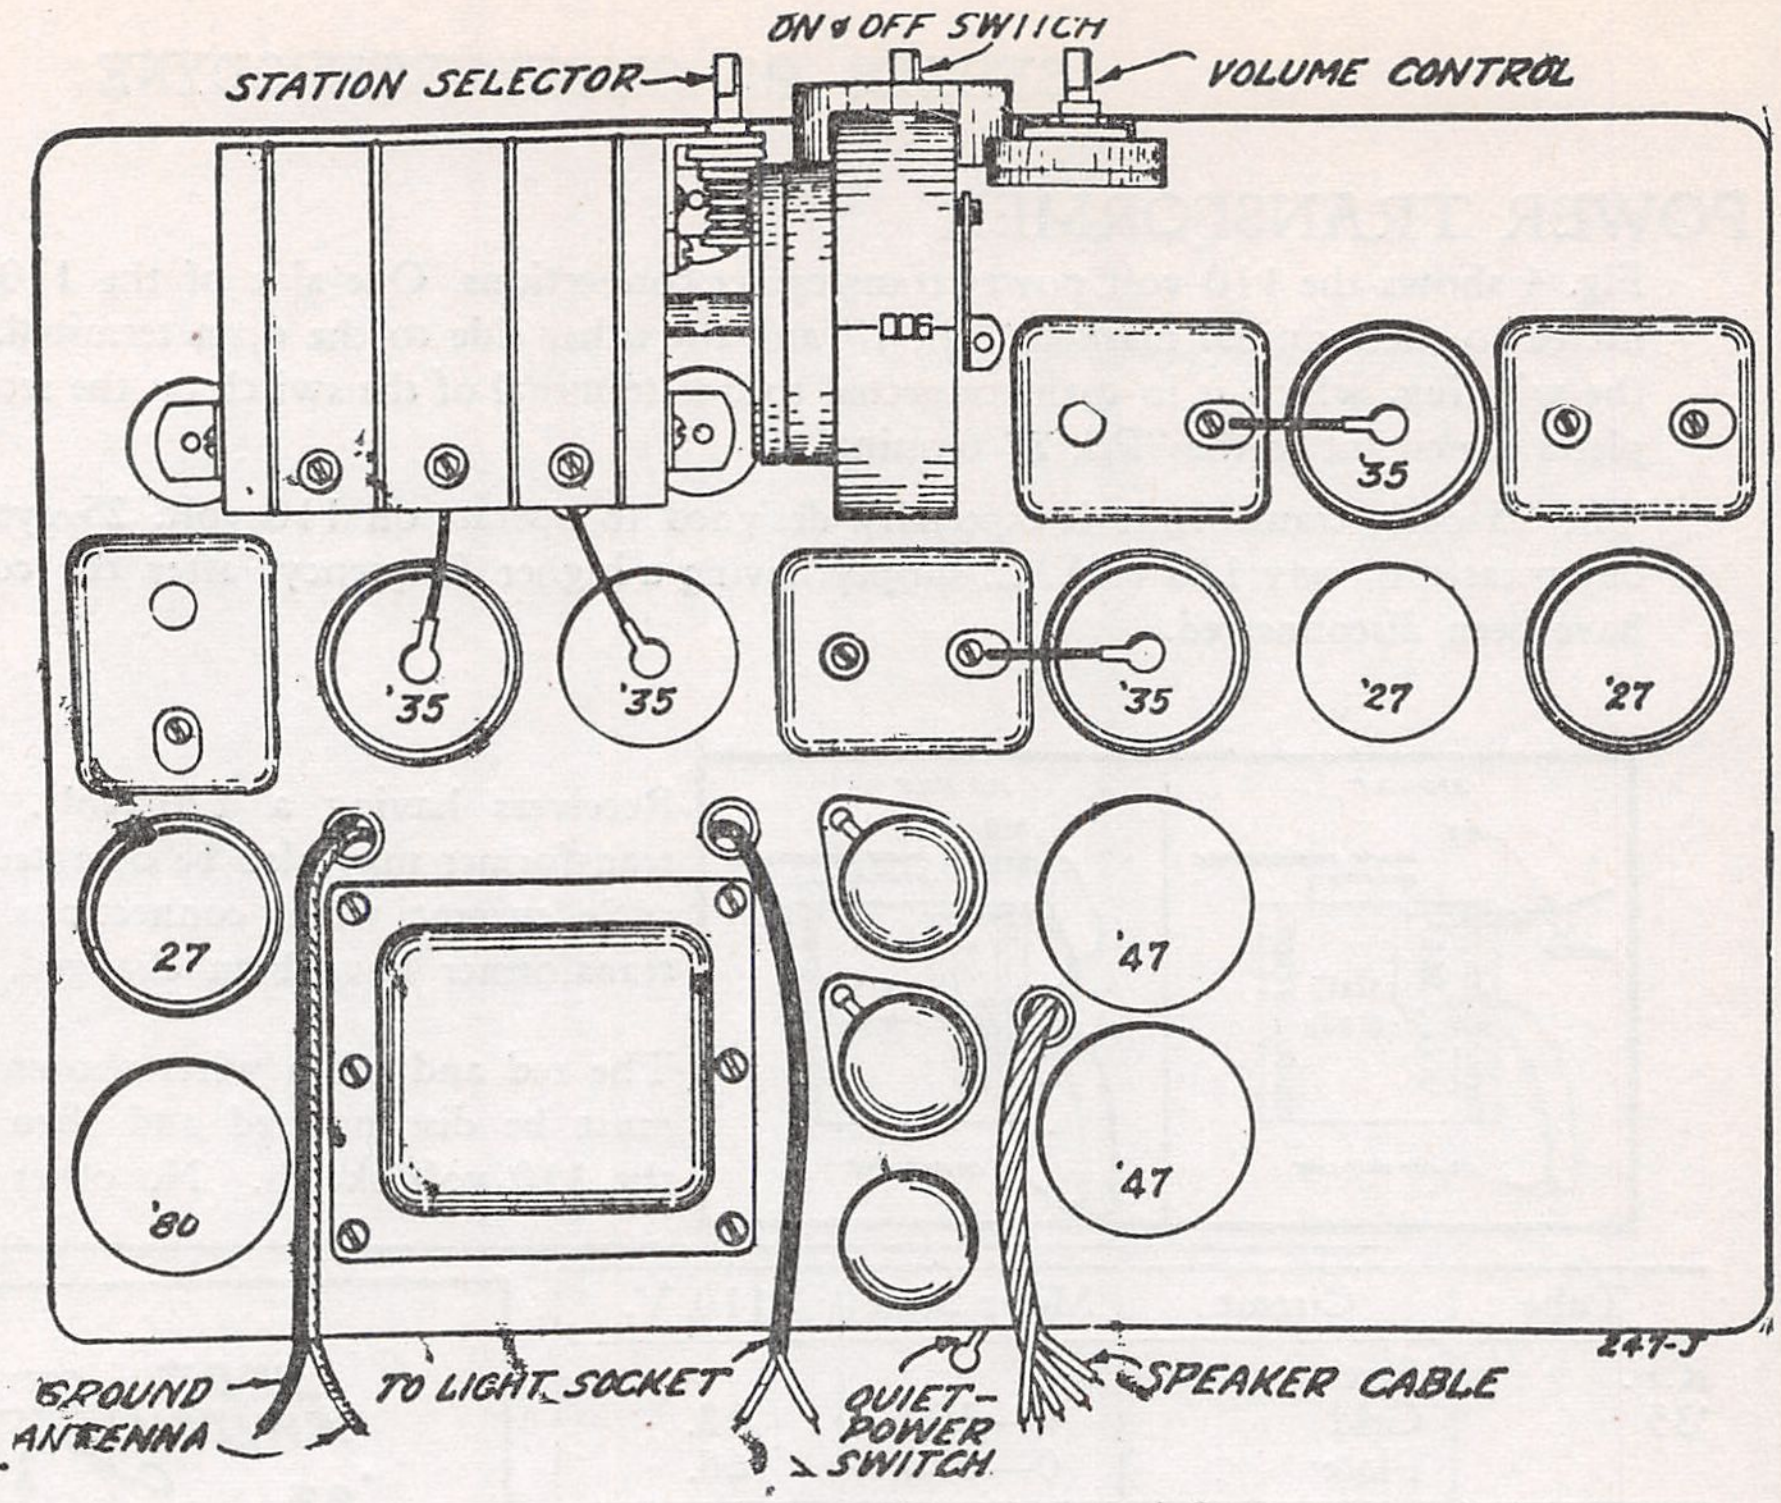
ON & OFF SWITCH
STATION SELECTOR
VOLUME CONTROL
'35
'35
'35
'35
'27
'27
27
'47
'47
'80
GROUND
ANTENNA
TO LIGHT SOCKET
QUIET-POWER SWITCH
SPEAKER CABLE
247-J

TOP VIEW OF EARLY MODEL RECEIVER

REVISED MODEL

A green paint mark on the left rear corner of a chassis indicates the following changes:

(1) Combination tone control and "On-Off" switch replaced by two separate units. The tone control is mounted and connected as previously but "On-Off switch is on side of cabinet.

(2) Intermediate transformers assembled together with their adjustable tuning condensers in a round shield. Condensers are adjusted by inserting screwdriver trough the holes provided underneath base, directly below transformer assembly. Early models are adjusted through hole in top of (rectangular) shield

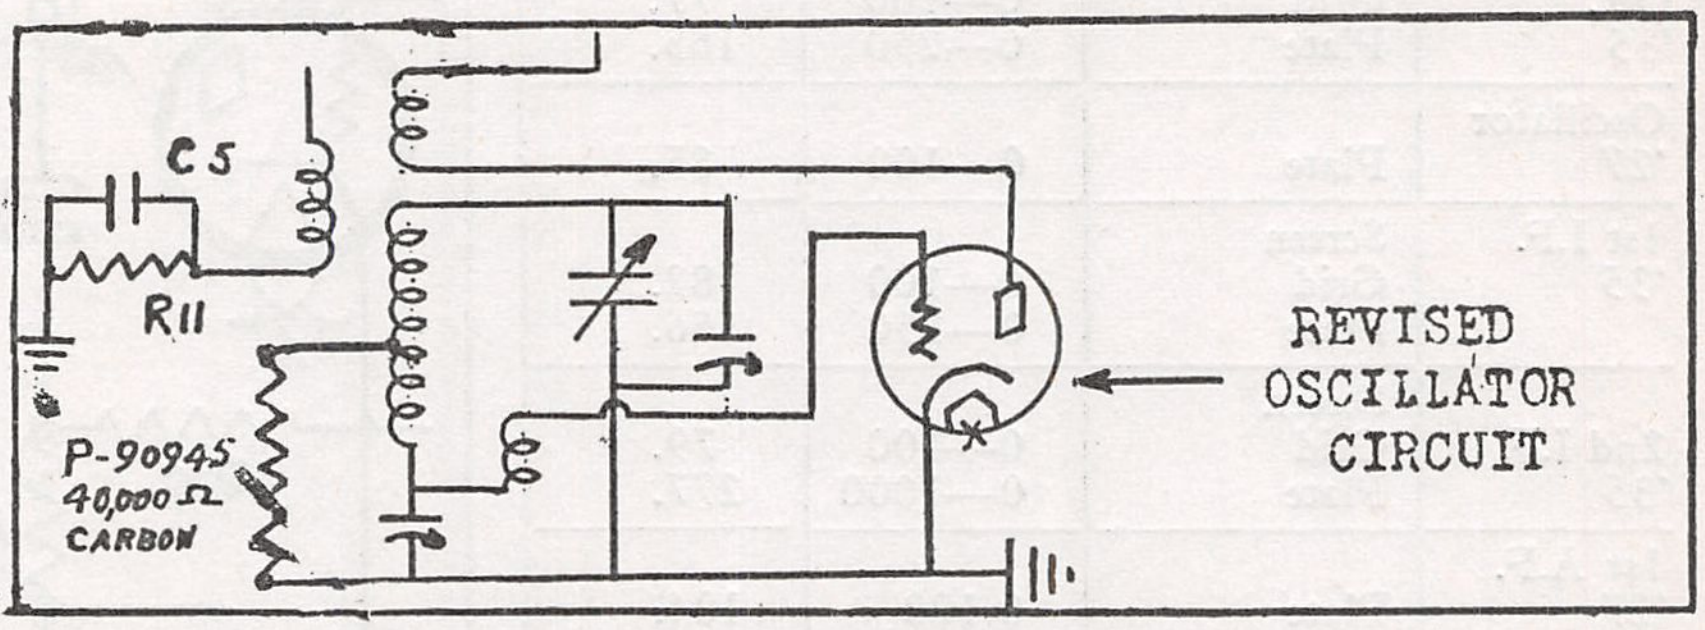
C5
R11
P-90945
40,000 Ω
CARBON
REVISED
OSCILLATOR
CIRCUIT

(3) The oscillator coil, its shield, and the 600 K.C. tracking condensor are all mounted separately on the base. The tracking condensor adjustment screw will be found near the left rear corner of the oscillator coil shield. The .0005 mfd. condensor (C14) is not used and the 30,000 ohm resistor (R12) is replaced by a 40,000 ohm resistor mounted between a coil lug and the tracking condensor. The revised oscillator circuit is shown herewith:

The parts affected by the change, are listed below with corresponding parts numbers:

OLD NUMBER		NEW NUMBER
Tone Control & "On-Off"		"On-Off" Switch-------------P-1054
Switch----------------	P-90977	Tone Control---------------P-90986-A
1st I.F. Transformer		1st I.F. Assembly-----------P-1424
Assembly--------------	P-1367	2nd I.F. Assembly-----------P-1425
2nd I.F. Transformer		3rd I.F. Assembly-----------P-1426
Assembly--------------	P-1364	Oscillator Coil-------------P-1400
3rd I.F. Transformer		Coil Shield-----------------P-40412
Assembly--------------	P-1365	600 K.C. Tracking Conden.--P-1385-A
Oscillator Unit		40,000 Ohm Carbon Resistor-P-90945
Assembly--------------	P-1366	

GULBRANSEN CO.
ALIGNMENT

A thorough check of the receiver should be made before any attempt is made to re-align any circuits. Examine the antenna and ground connections. Test all the tubes and check all voltages to determine if the failure of the receiver to operate properly is not due to some fault other than mis-alignment. A superheterodyne receiver must be accurately aligned to be selective and sensitive. This receiver has been accurately aligned at the factory and, due to the mechanical design of the gang and adjustable condensers, will not lose its alignment unless damaged by abuse or accident.

A modulated test oscillator and an output meter MUST be used when aligning this receiver to insure accurate alignment. It is important that the oscillator deliver a signal at exactly 175 K.C. in addition to frequencies in the broadcast band.

The adjustable condensers which tune the secondaries of the intermediate transformers are located under the hole in top of the shield where the grid lead to the tube is brought out. The condensers which tune the primaries are located under the small hole opposite. The capacity of each condenser is varied by rotating the small adjustment screw under the hole.

Make each adjustment in the order given below or the receiver may be thrown further out of alignment and it will then be a difficult task to align it properly.

The receiver and test oscillator must be well grounded and the output kept within the range of the output meter at all times.

All shields must be in place when making the adjustments.

INTERMEDIATE CIRCUITS

Tune the test oscillator to exactly 175 K.C. and connect its output to the grid of the first detector tube after removing the clip on the lead from the gang condenser.

Adjust the primary and secondary of the first intermediate transformer for greatest volume.

Follow the same procedure on the second intermediate transformer and then turn the receiver off.

Disconnect one end of the speaker voice coil and connect the output meter across the secondary of the speaker coupling transformer. Short the oscillator tuning condenser (in the gang) by grounding the stator plates with a screw driver.

Turn the receiver on and adjust the output until the output meter shows a small or medium scale deflection.

Adjust the primary of the first intermediate transformer for the greatest deflection on the output meter.

Adjust the secondary in the same manner.

Follow the same procedure on the second intermediate transformer and then check the settings of all condensers to make certain the maximum output has been obtained.

When the above instructions have been followed, remove the test oscillator coupling and replace the grid lead on the first detector, and also remove the screw driver shorting the oscillator tuning condenser.

GANG CONDENSERS

Couple the test oscillator output to the antenna, (white wire), on the receiver.

Tune the oscillator to 1400 K.C. and carefully tune the receiver to the signal.

A trimmer condenser is mounted over each condenser in the gang and is adjusted by turning the screw located under the hole in top of the gang shield. The shield should not be removed. Adjust each trimmer condenser for maximum deflection on the output meter.

OSCILLATOR

Tune the test oscillator to 600 K.C. and tune the receiver to the signal. Then after turning the receiver off, disconnect the output meter and replace the voice coil lead which was disconnected.

Turn the receiver on and rotate the adjusting screw on the 600 K.C. tracking condenser under the hole in top of the oscillator transformer shield. Rock the gang condenser back and forth across the signal at the same time and listen closely until the maximum volume is obtained. The tracking condenser is then properly adjusted and remains fixed thereafter.

The receiver should be accurately aligned if the above instructions have been followed and no further adjustments need be made.

MODEL 362

GULBRANSEN CO.

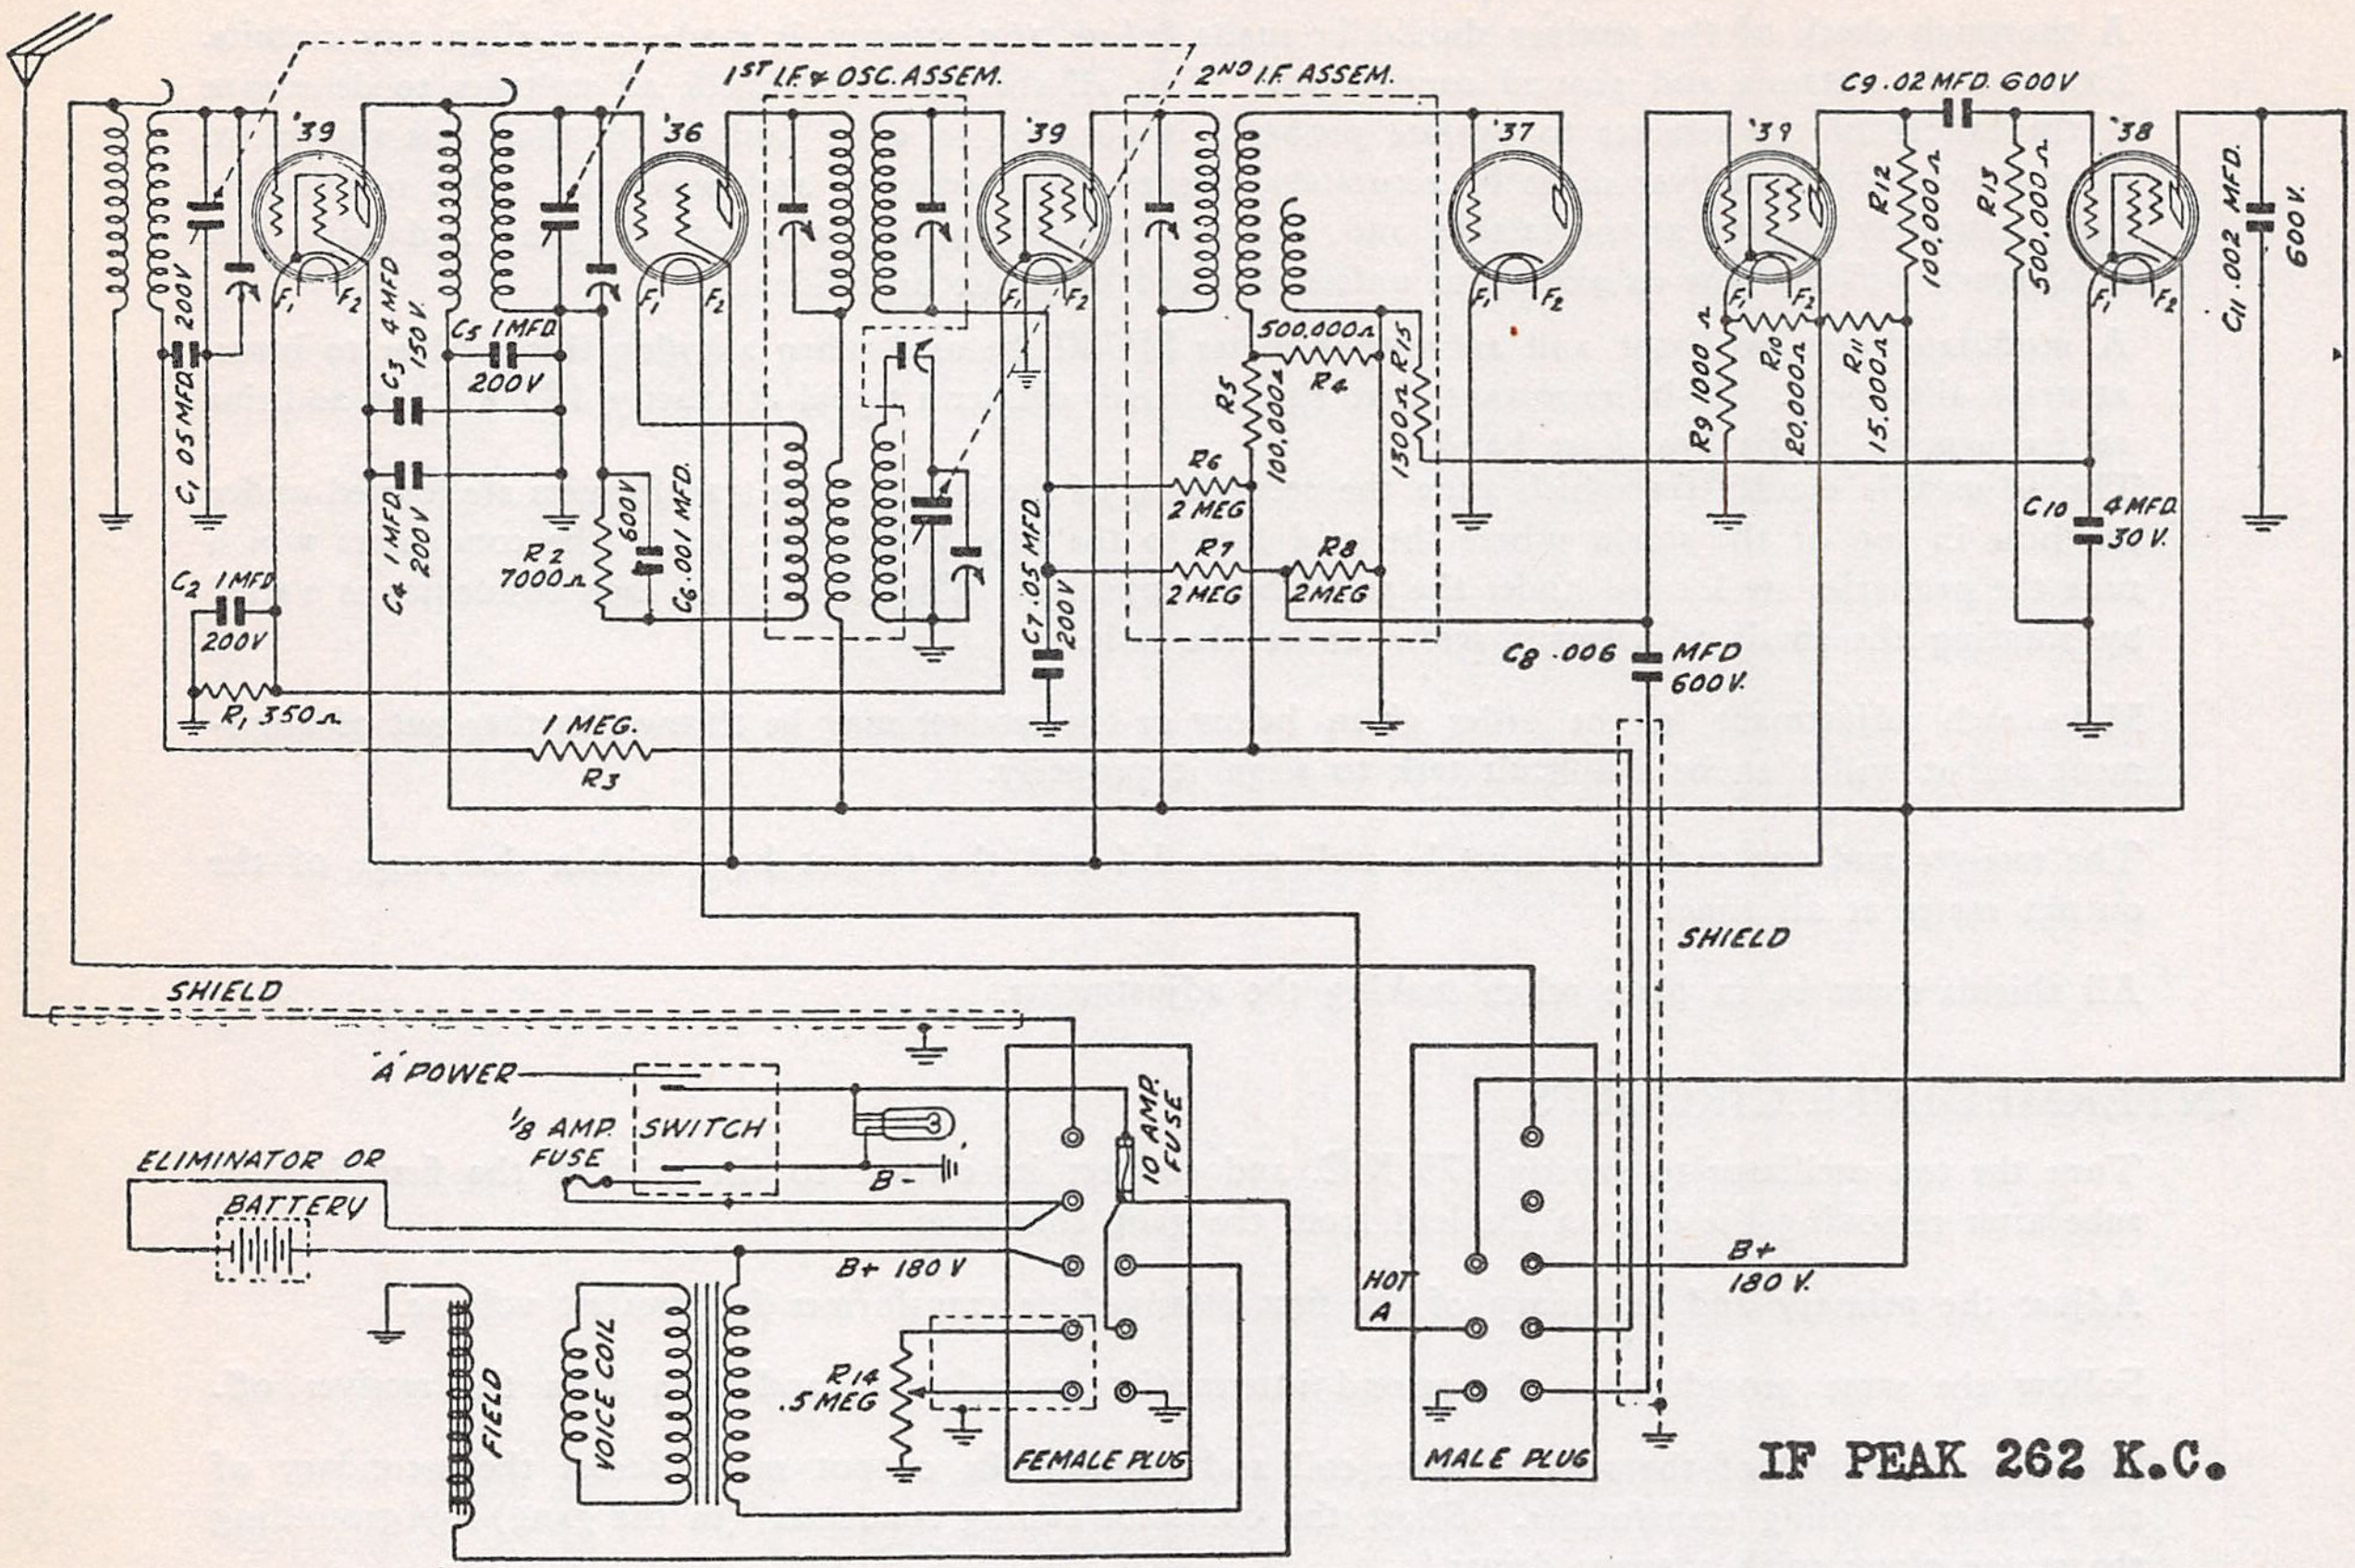
1ST I.F. & OSC. ASSEM.
2ND I.F. ASSEM.
'39
'36
'39
'37
'39
'38
C9 .02 MFD. 600V
C1 .05 MFD. 200V
C2 1 MFD 200V
R1 350 Ω
C3 4 MFD 150V
C5 1 MFD 200V
C4 1 MFD 200V
R2 7000 Ω
600V
C6 .001 MFD.
C7 .05 MFD. 200V
500,000 Ω R4
R5 100,000 Ω
R15 1500 Ω
R6 2 MEG
R7 2 MEG
R8 2 MEG
R9 1000 Ω
R10 20,000 Ω
R11 15,000 Ω
R12 100,000 Ω
R13 500,000 Ω
C11 .002 MFD. 600V.
C10 4 MFD. 30V.
C8 .006 MFD 600V.
1 MEG. R3
SHIELD
SHIELD
"A" POWER
1/8 AMP. FUSE
SWITCH
B-
10 AMP. FUSE
ELIMINATOR OR BATTERY
B+ 180 V
R14 .5 MEG
FIELD
VOICE COIL
FEMALE PLUG
HOT A
B+ 180 V.
MALE PLUG

IF PEAK 262 K.C.

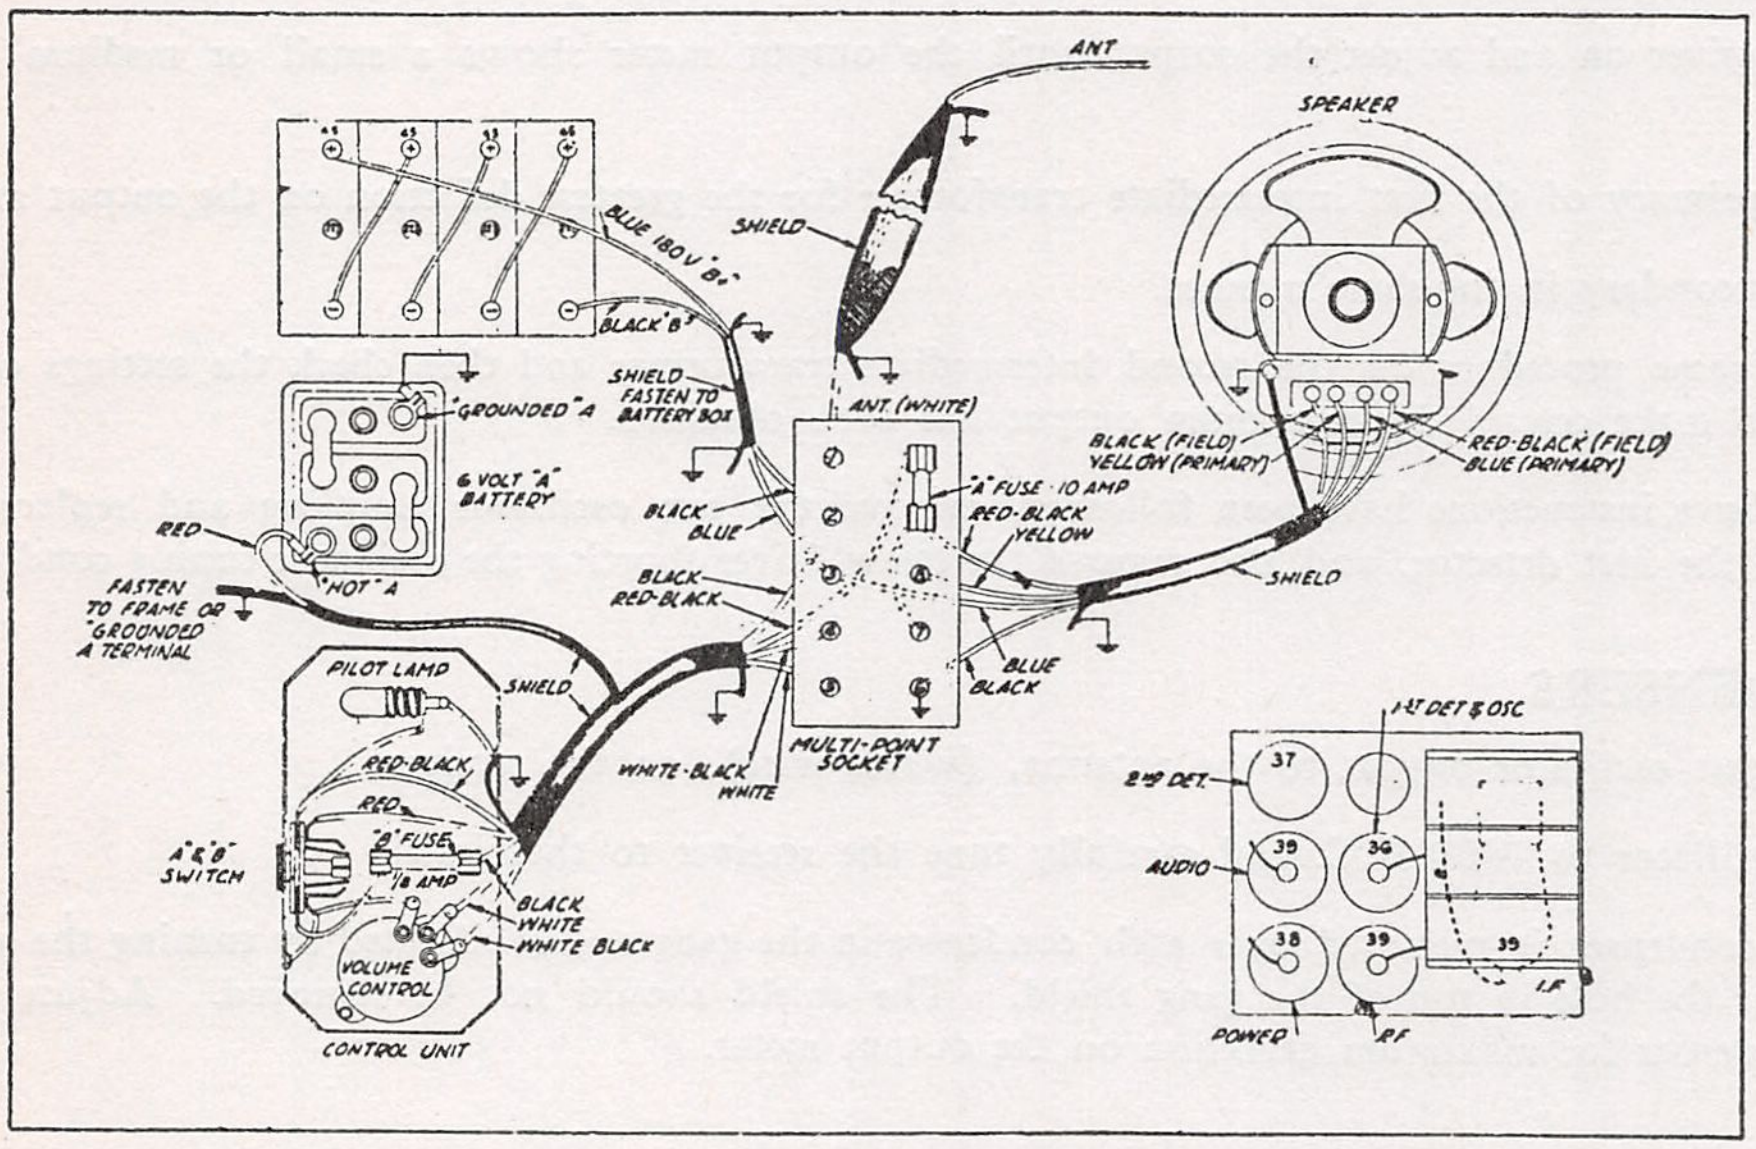
ANT
SHIELD
BLUE 180V "B+"
BLACK "B-"
SHIELD FASTEN TO BATTERY BOX
"GROUNDED" A
6 VOLT "A" BATTERY
RED
"HOT" A
FASTEN TO FRAME OR "GROUNDED" A TERMINAL
ANT. (WHITE)
BLACK
BLUE
BLACK
RED-BLACK
"A" FUSE 10 AMP
RED-BLACK
YELLOW
BLUE
BLACK
MULTI-POINT SOCKET
WHITE-BLACK
WHITE
SHIELD
PILOT LAMP
RED-BLACK
RED
"A" & "B" SWITCH
"B" FUSE 1/8 AMP
BLACK
WHITE
WHITE BLACK
VOLUME CONTROL
CONTROL UNIT
SPEAKER
BLACK (FIELD)
YELLOW (PRIMARY)
RED-BLACK (FIELD)
BLUE (PRIMARY)
SHIELD
1ST DET & OSC
2ND DET.
37
AUDIO
39
36
38
39
39
I.F.
POWER
RF

VOLTAGE DATA

Tube	*Plate*	*Screen*	*Grid*	*Plate MA.*
R-F.	177	80	3	3.6
1st Det.	173	76	7*	.9*
I-F.	177	80	3	3.6
2nd Det.	0	0	0	0
1st A-F.	54	77	6	1.2
Output	159	165	15.5	10.0

* Will vary with dial setting.

HAMMARLUND MFG. CO.

MODEL Comet Pro
February 1933

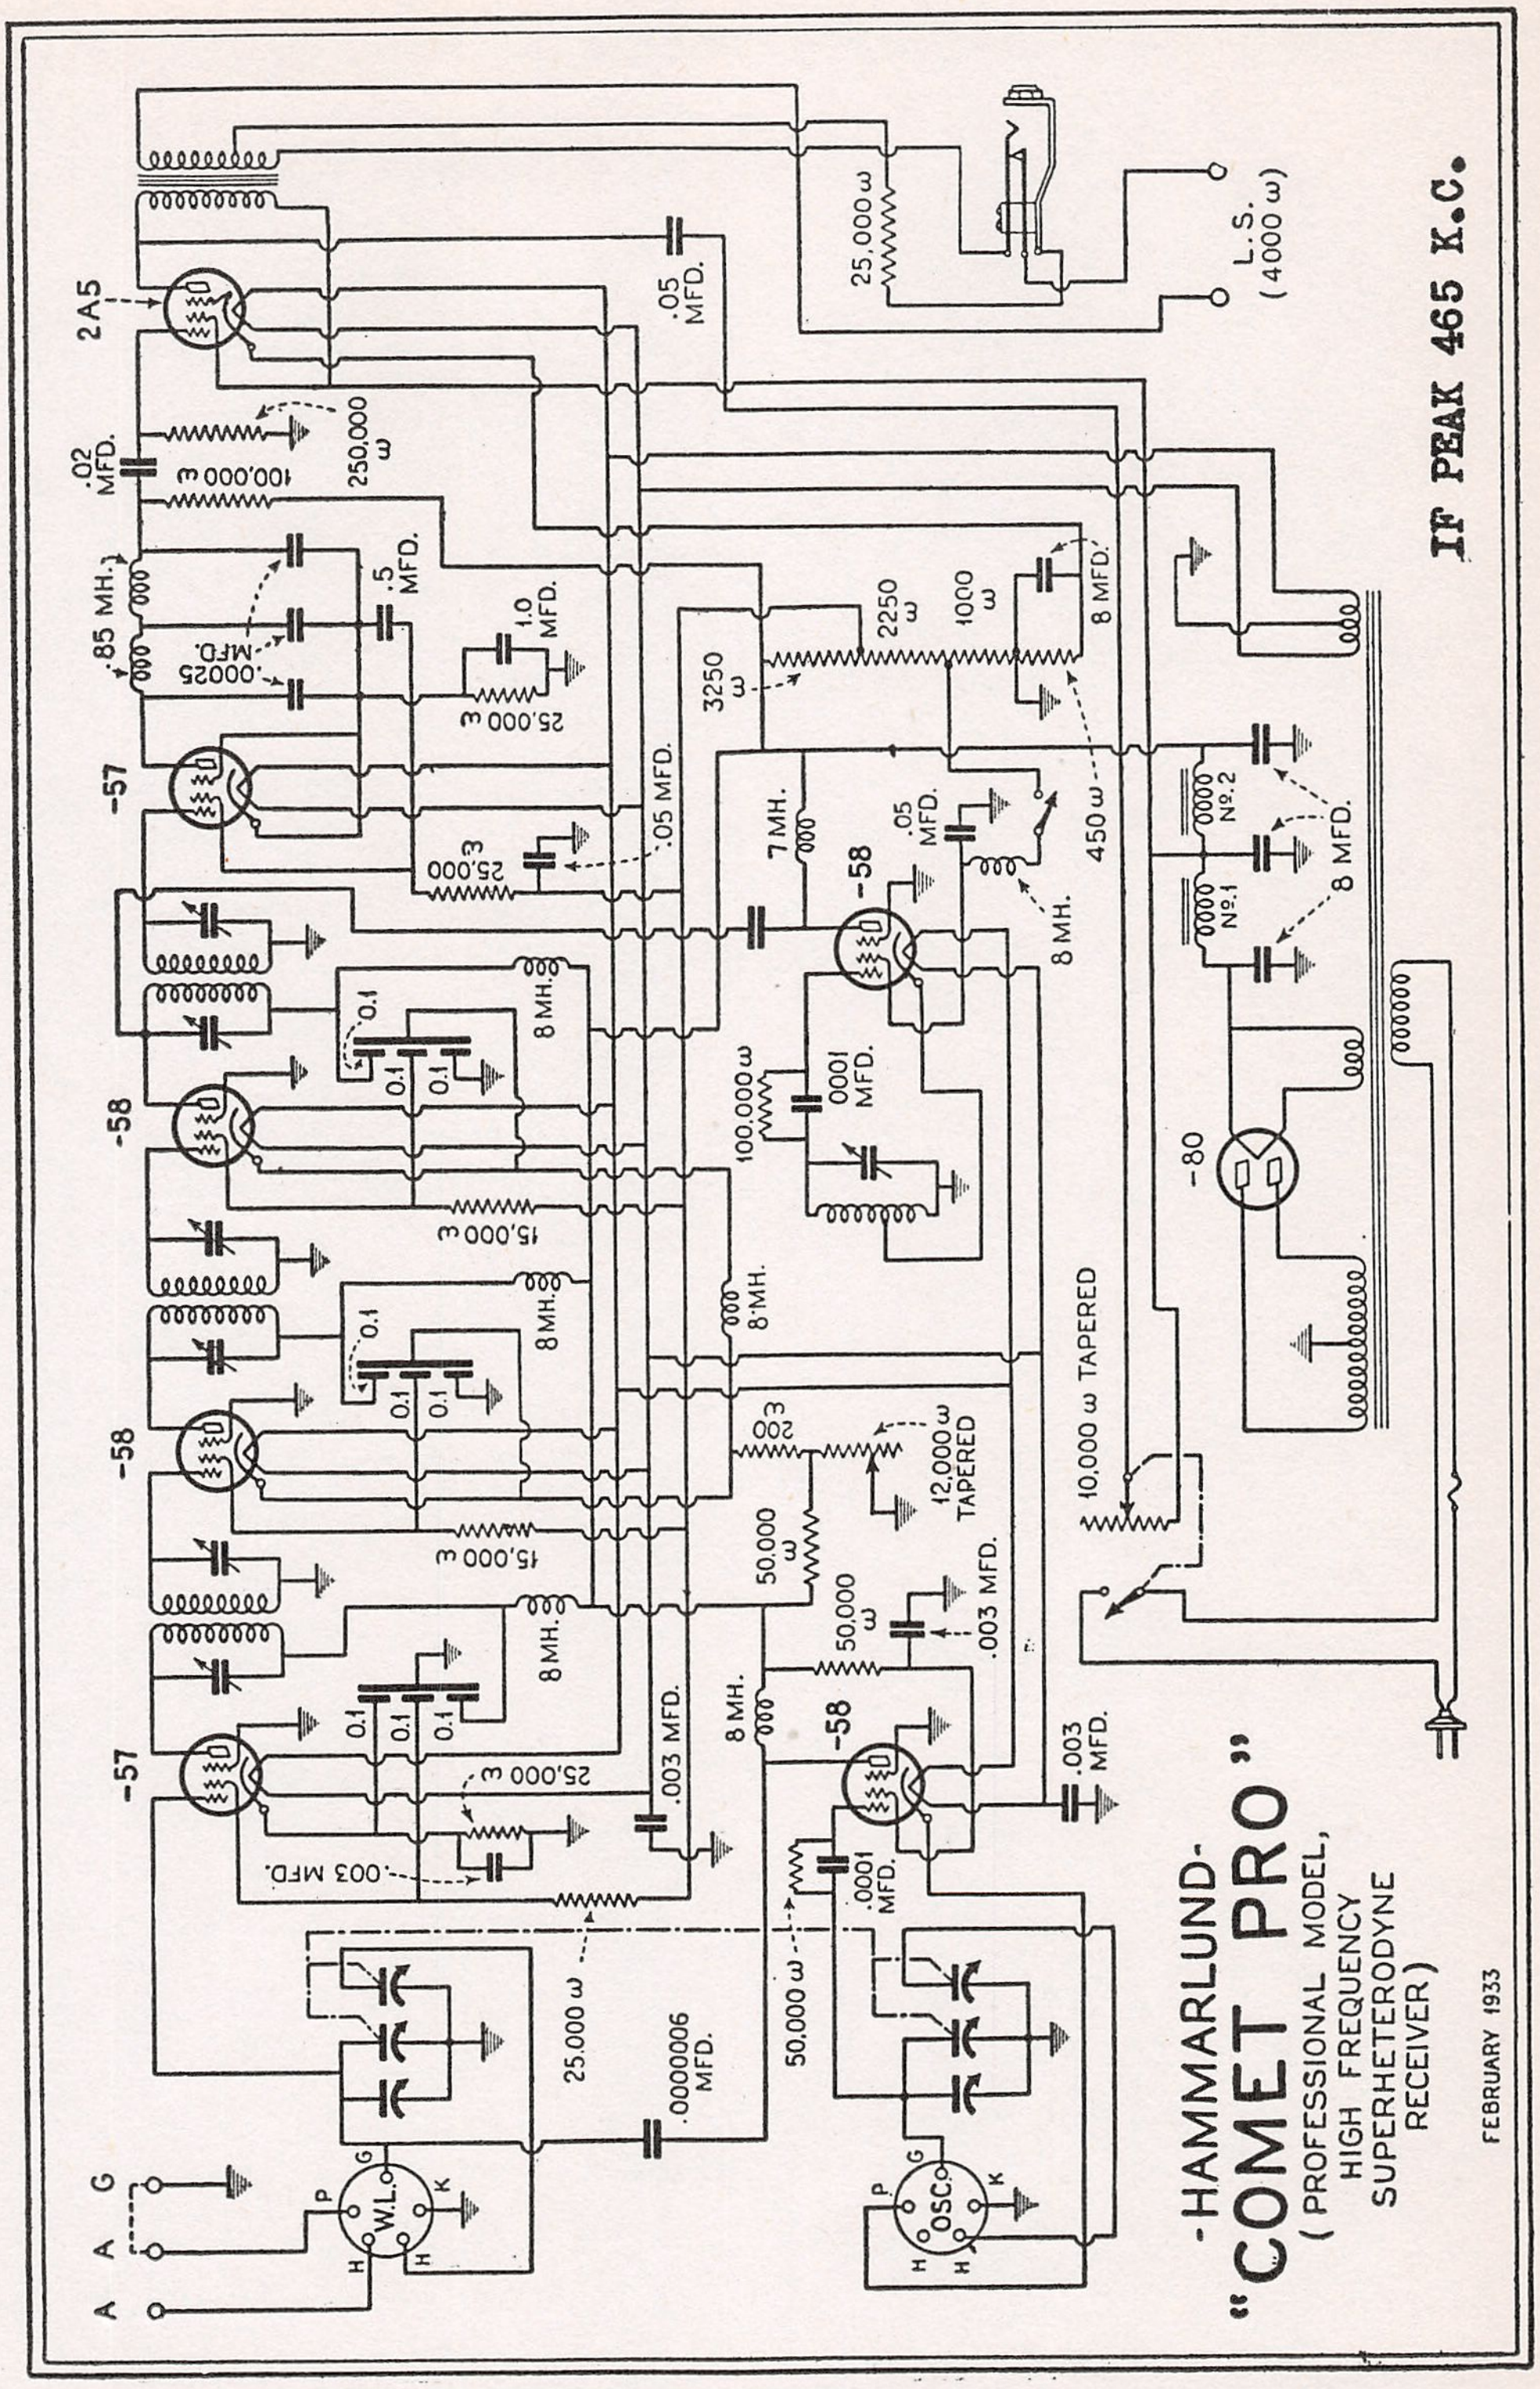
2A5
25,000 ω
L.S.
(4000 ω)
.05 MFD.
.02 MFD.
100,000 ω
250,000 ω
.85 MH.
.00025 MFD.
.5 MFD.
1.0 MFD.
25,000 ω
-57
25,000 ω
.05 MFD.
3250 ω
2250 ω
1000 ω
8 MFD.
7 MH.
.05 MFD.
-58
450 ω
8 MH.
No.2
No.1
8 MFD.
0.1
0.1
0.1
8 MH.
-58
100,000 ω
.0001 MFD.
-80
15,000 ω
8 MH.
8 MH.
10,000 ω TAPERED
0.1
0.1
0.1
-58
200 ω
12,000 ω TAPERED
15,000 ω
50,000 ω
50,000 ω
.003 MFD.
8 MH.
8 MH.
-58
.003 MFD.
0.1
0.1
0.1
-57
25,000 ω
.003 MFD.
.003 MFD.
25,000 ω
.0000006 MFD.
50,000 ω
.0001 MFD.
A
A
G
P
G
K
H
H
W.L.
OSC.

IF PEAK 465 K.C.

-HAMMARLUND-
"COMET PRO"
(PROFESSIONAL MODEL, HIGH FREQUENCY SUPERHETERODYNE RECEIVER)

FEBRUARY 1933

CHARLES HOODWIN CO. MODEL Aero Auto Radio
MODEL Aero 1932 Converter

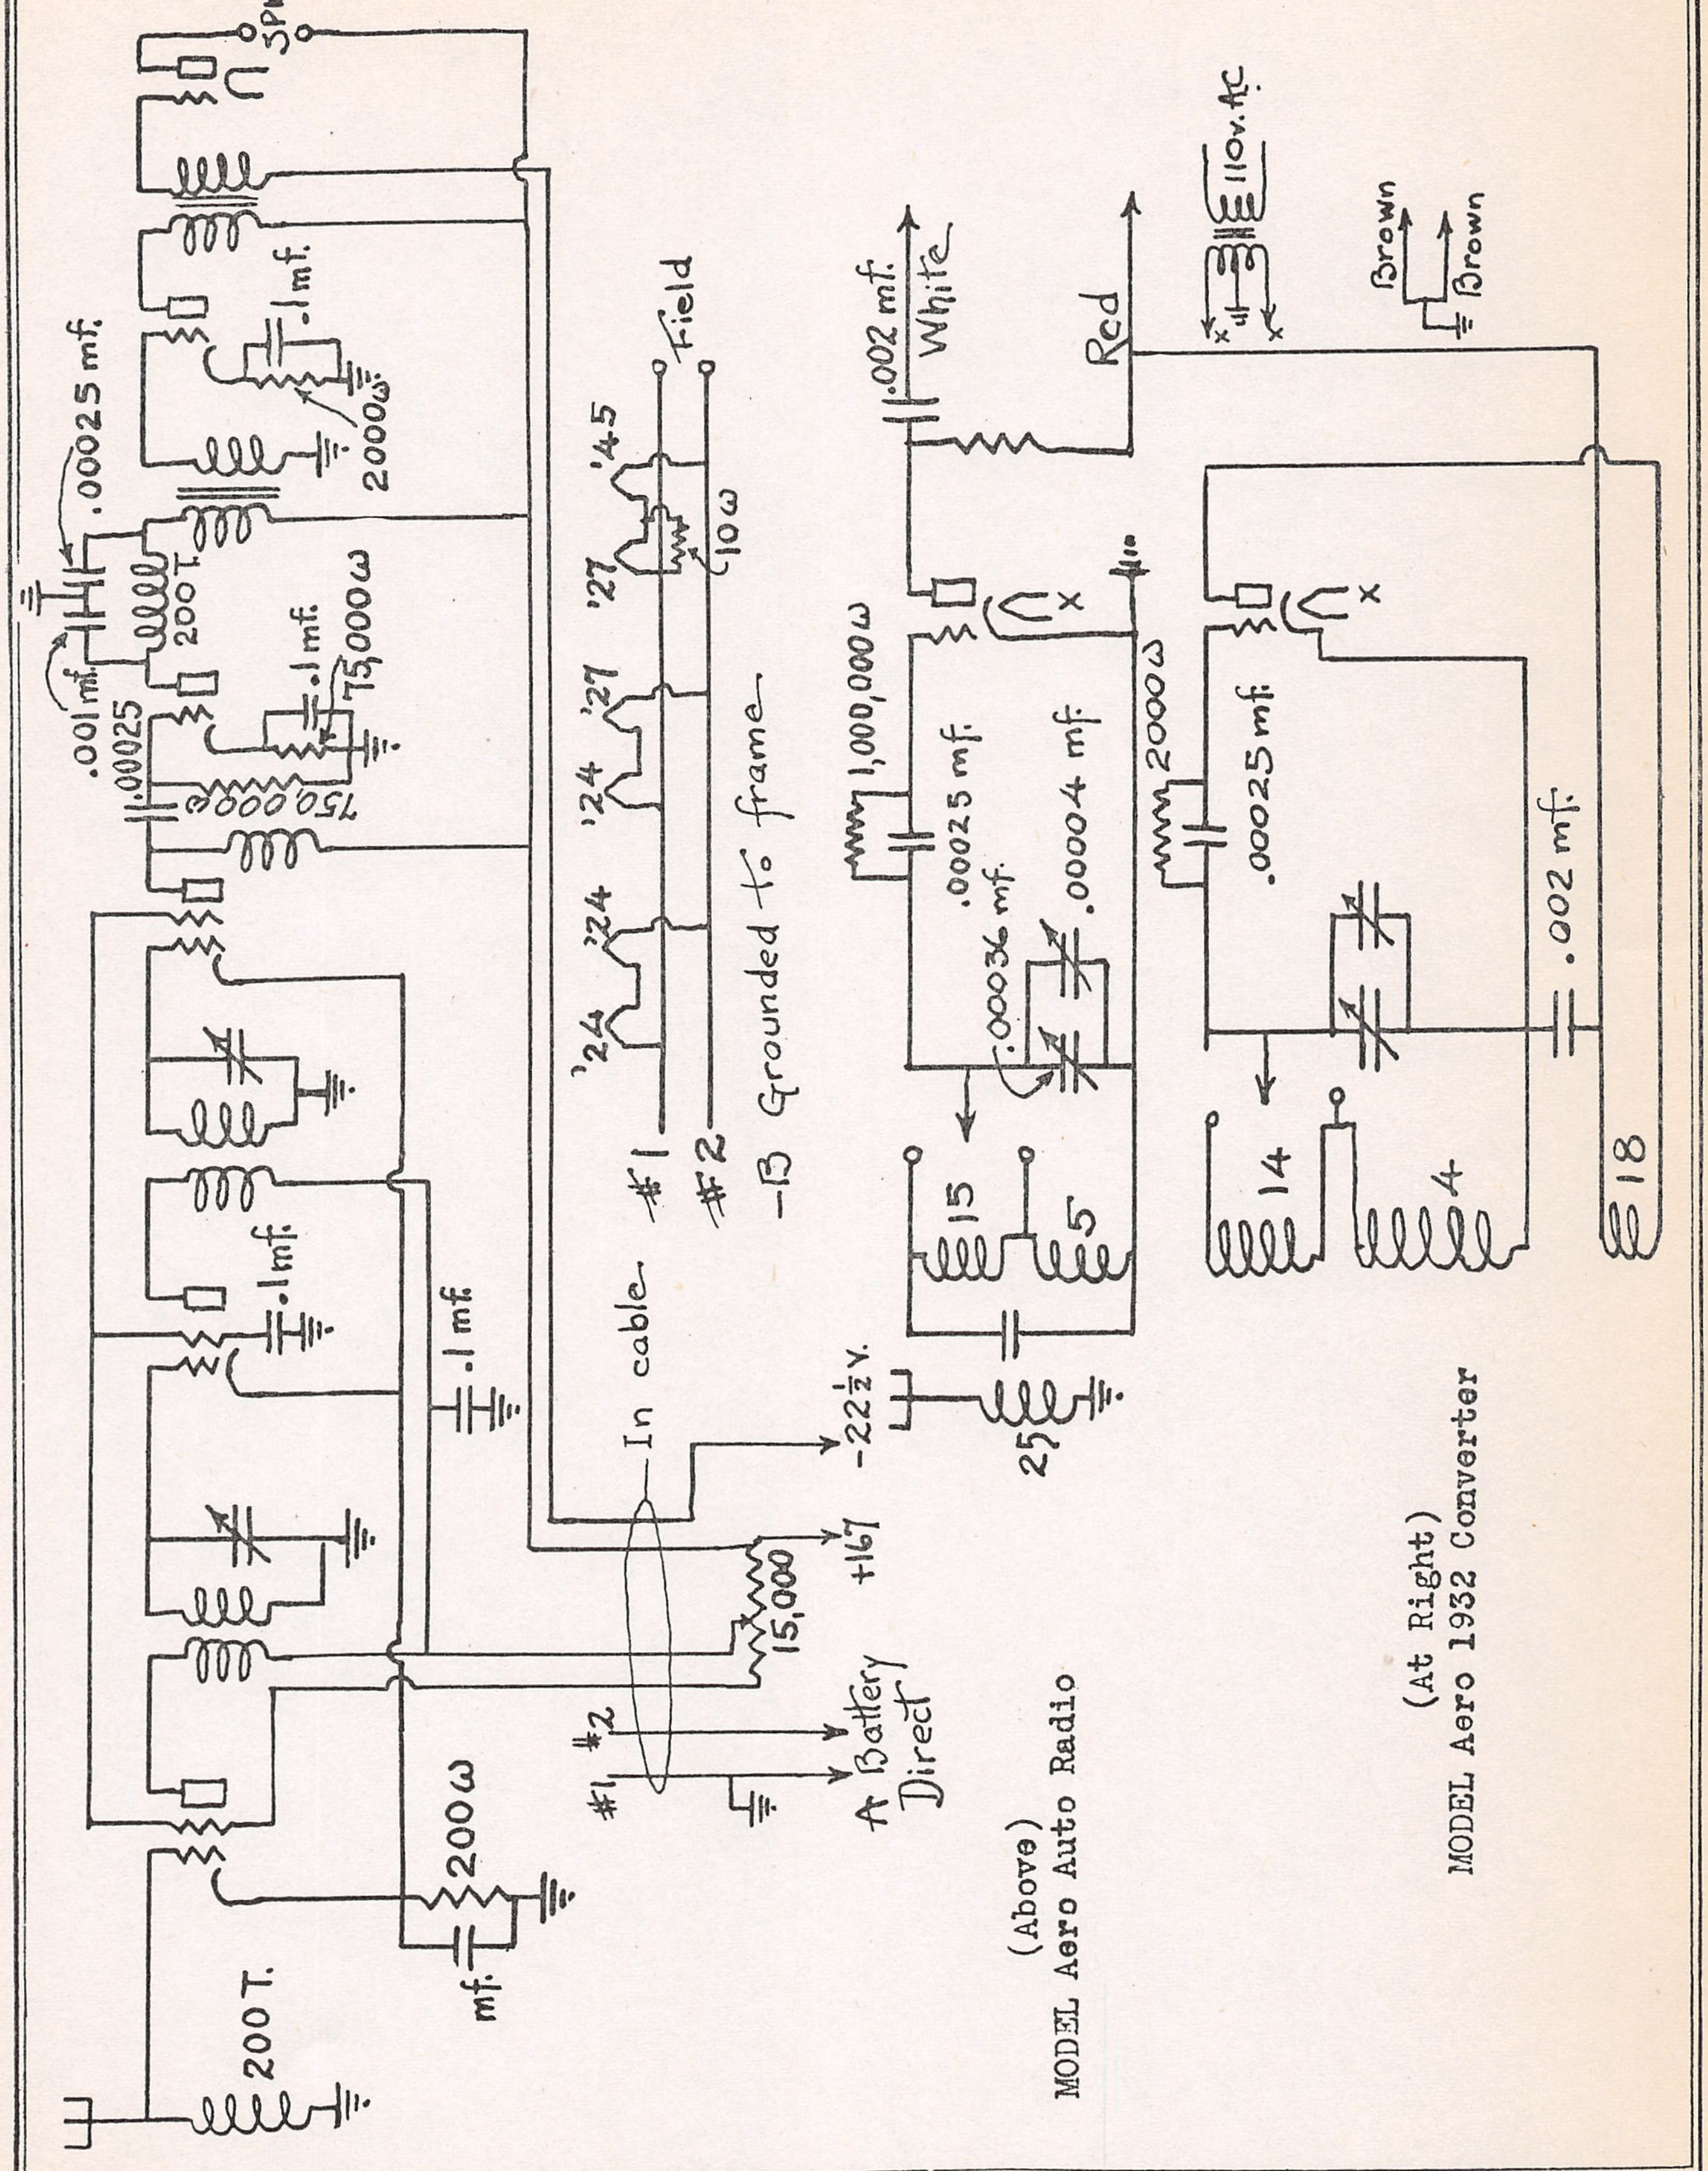
SPK.
.1mf.
2000ω
.00025 mf.
.001mf.
200T.
.1mf.
75,000ω
.00025
150,000ω
Field
'45
10ω
'27
'27
'24
'24
'24
#1
#2
-B Grounded to frame
.1mf.
.1 mf.
In cable
-22½V.
+167
15,000
#2
#1
A Battery Direct
200ω
mf.
200T.
.002 mf.
White
Red
110v. AC
Brown
Brown
X
1,000,000ω
.00025 mf.
.00036 mf.
.00004 mf.
15
5
25
X
2000ω
.00025 mf.
.002 mf.
14
4
18

(Above)
MODEL Aero Auto Radio

(At Right)
MODEL Aero 1932 Converter

HERBERT H. HORN

MODEL Tiffany Tone 161, 110

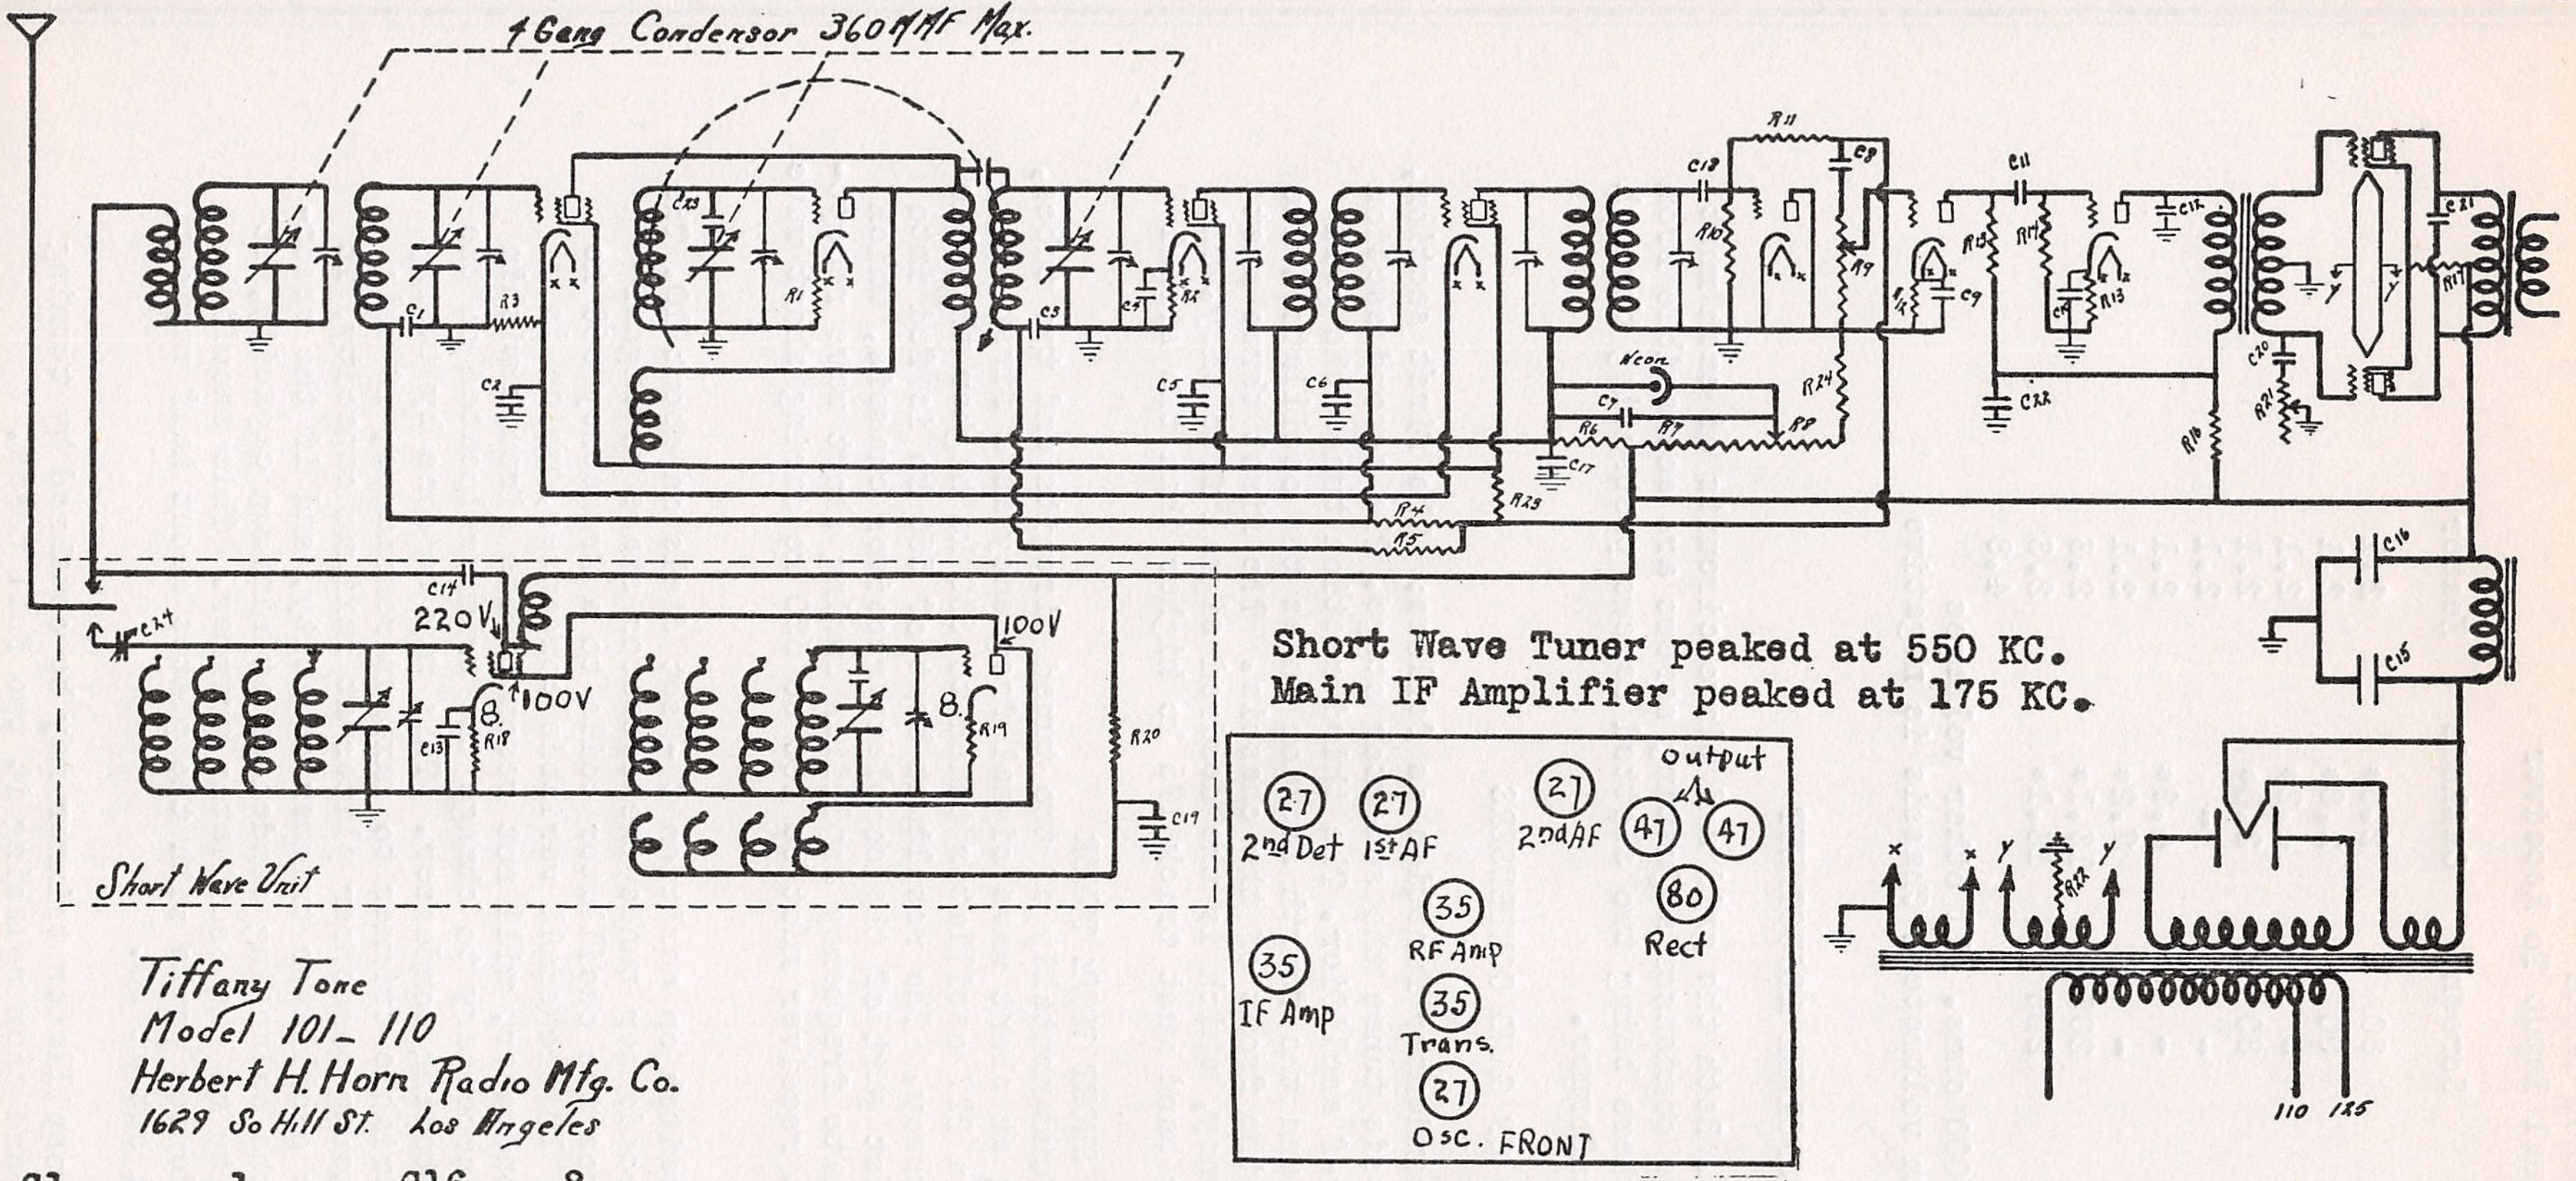
4 Gang Condensor 360 μμF Max.
Short Wave Unit
220V
100V
100V
8.
8.
Neon
C1
C2
C3
C5
C6
C7
C8
C9
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21
C22
C23
C24
R1
R3
R4
R5
R6
R7
R8
R9
R11
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
110
125
X
Y
27
2nd Det
27
1st AF
27
2nd AF
Output
47
47
80
Rect
35
RF Amp
35
IF Amp
35
Trans.
27
Osc.
FRONT

Short Wave Tuner peaked at 550 KC.
Main IF Amplifier peaked at 175 KC.

Tiffany Tone
Model 101_ 110
Herbert H. Horn Radio Mfg. Co.
1629 So Hill St. Los Angeles

C1	.1	C16	8.
C2	.1	C17	.1
C3	.1	C18	15 MMFD
C4	.1	*C19	.02
C5	.1	C20	.1
C6	.1	C21	.005
C7	.1	C22	2.
C8	.02	C23	.001
C9	.25	C24	15 MMFD
C10	.25		
C11	.02		
C12	.01		
*C13	.02		
*C14	.00025		
C15	8.		

R1	1,000	1 Watt	R16	20,000
R2	2,500	"	R17	1,500
R3	300	"	*R18	10,000
R4	500,000	"	*R19	1,000
R5	500,000	"	*R20	20,000
R6	2,500	"	R21	500,000
R7	50,000	"	R22	300
R8	10,000	Variable	R23	20,000
R9	500,000	Variable	R24	5,000
R10	500,000	1 Watt		
R11	250,000			
R12	2,000			
R13	100,000			
R14	500,000			
R15	2,000			

*The items noted are in the shortwave tuning unit which is enclosed by a dotted line on the schematic diagram.

MODEL Tiffany Tone 101, 110
Alignment Data

HERBERT H. HORN

VOLTAGE TABLE
No Signal Input To Receiver

No.	Type	Function	Plate	Screen	Cathode	Heater
1	335	RF Amp	187	80	2.8*	2.1
2	335	Trans	187	80	2.8*	2.1
3	327	Osc.	80	-	4.2*	2.1
4	335	IF Amp	187	80	2.8*	2.1
5	327	Det.	-	-	-	2.1
6	327	1st AF	30*	-	4.9*	2.1
7	227	2nd AF	115	-	7.2*	2.1
8	347	Output	210	205	13.1*	2.3
9	347	Output	210	205	13.1*	2.3
10	280	Rect.				4.8

* Voltmeter resistance 50,000 ohms. All other voltages measured with 250,000 ohm voltmeter. Chassis is negative for all readings.

IF TRANSFORMER ADJUSTMENT

There are four i-f transformers. Both the grid and plate circuits of each must be tuned sharply to 175 kc. The condenser adjusting screws are accessible from the underside of the chassis; there being two slotted screws protruding through the insulated base of each transformer.

LINE UP OF GANG CONDENSERS

The four sections of the gang condenser function as follows: The first section, looking at the rear of the chassis tunes the selector stage. The second section tunes the grid circuit of the r-f amplifier. The third section tunes the grid circuit of the translator tube and the fourth section tunes the oscillator. The fourth section is that nearest the front of the chassis. The first three must track together at signal frequency, which is the desired signal frequency. The oscillator section on the other hand must track 175 kc higher than the signal frequency.

THE SHORT WAVE TUNER

The short wave tuner consists fundamentally of two tuned circuits and two tubes, one of which is a 224 operating at short wave signal frequency as a first detector ans the other tube is a 227 oscillator tuned to 550 kc higher than the desired short wave signal frequency. The resultant beat of 550 kc is fed into the antenna post of the broadcast part of the complete receiver chassis, which operates as an 550 kc intermediate frequency amplifier during short wave reception. The dial of the broadcast receiver must be set to 550 kc during short wave reception.

To balance: Set band selector switch on position C - set dials on about 10. The front section of the two gang condenser tunes the detector stage to signal frequency; the back section tunes the oscillator coils to a frequency 550 kc greater than signal frequency. If the small variable condenser, which is paralleled with the detector condenser, will not resonate its circuit within its capacity range, it will be necessary to change the trimmer located on the oscillator section of the main tuning condenser. This may be done by tuning in a signal and rotating the variable trimmer to maximum resonance; if this point is reached with the balancing condenser plates at maximum capacity, it will be necessary to reduce the oscillator trimmer capacity, and if the resonance point is approached with the balancing condenser at minimum capacity, it will be necessary to add capacity to the oscillator trimmer. This should be regulated so the balancing condenser peaks with the plates about half way out, with the short wave tuning dial set at 50.

The approximate setting of the oscillator trimmer may be obtained by turning the adjusting screw down tight and then relasing it two full turns.

MODEL F
Pentode
Schematic

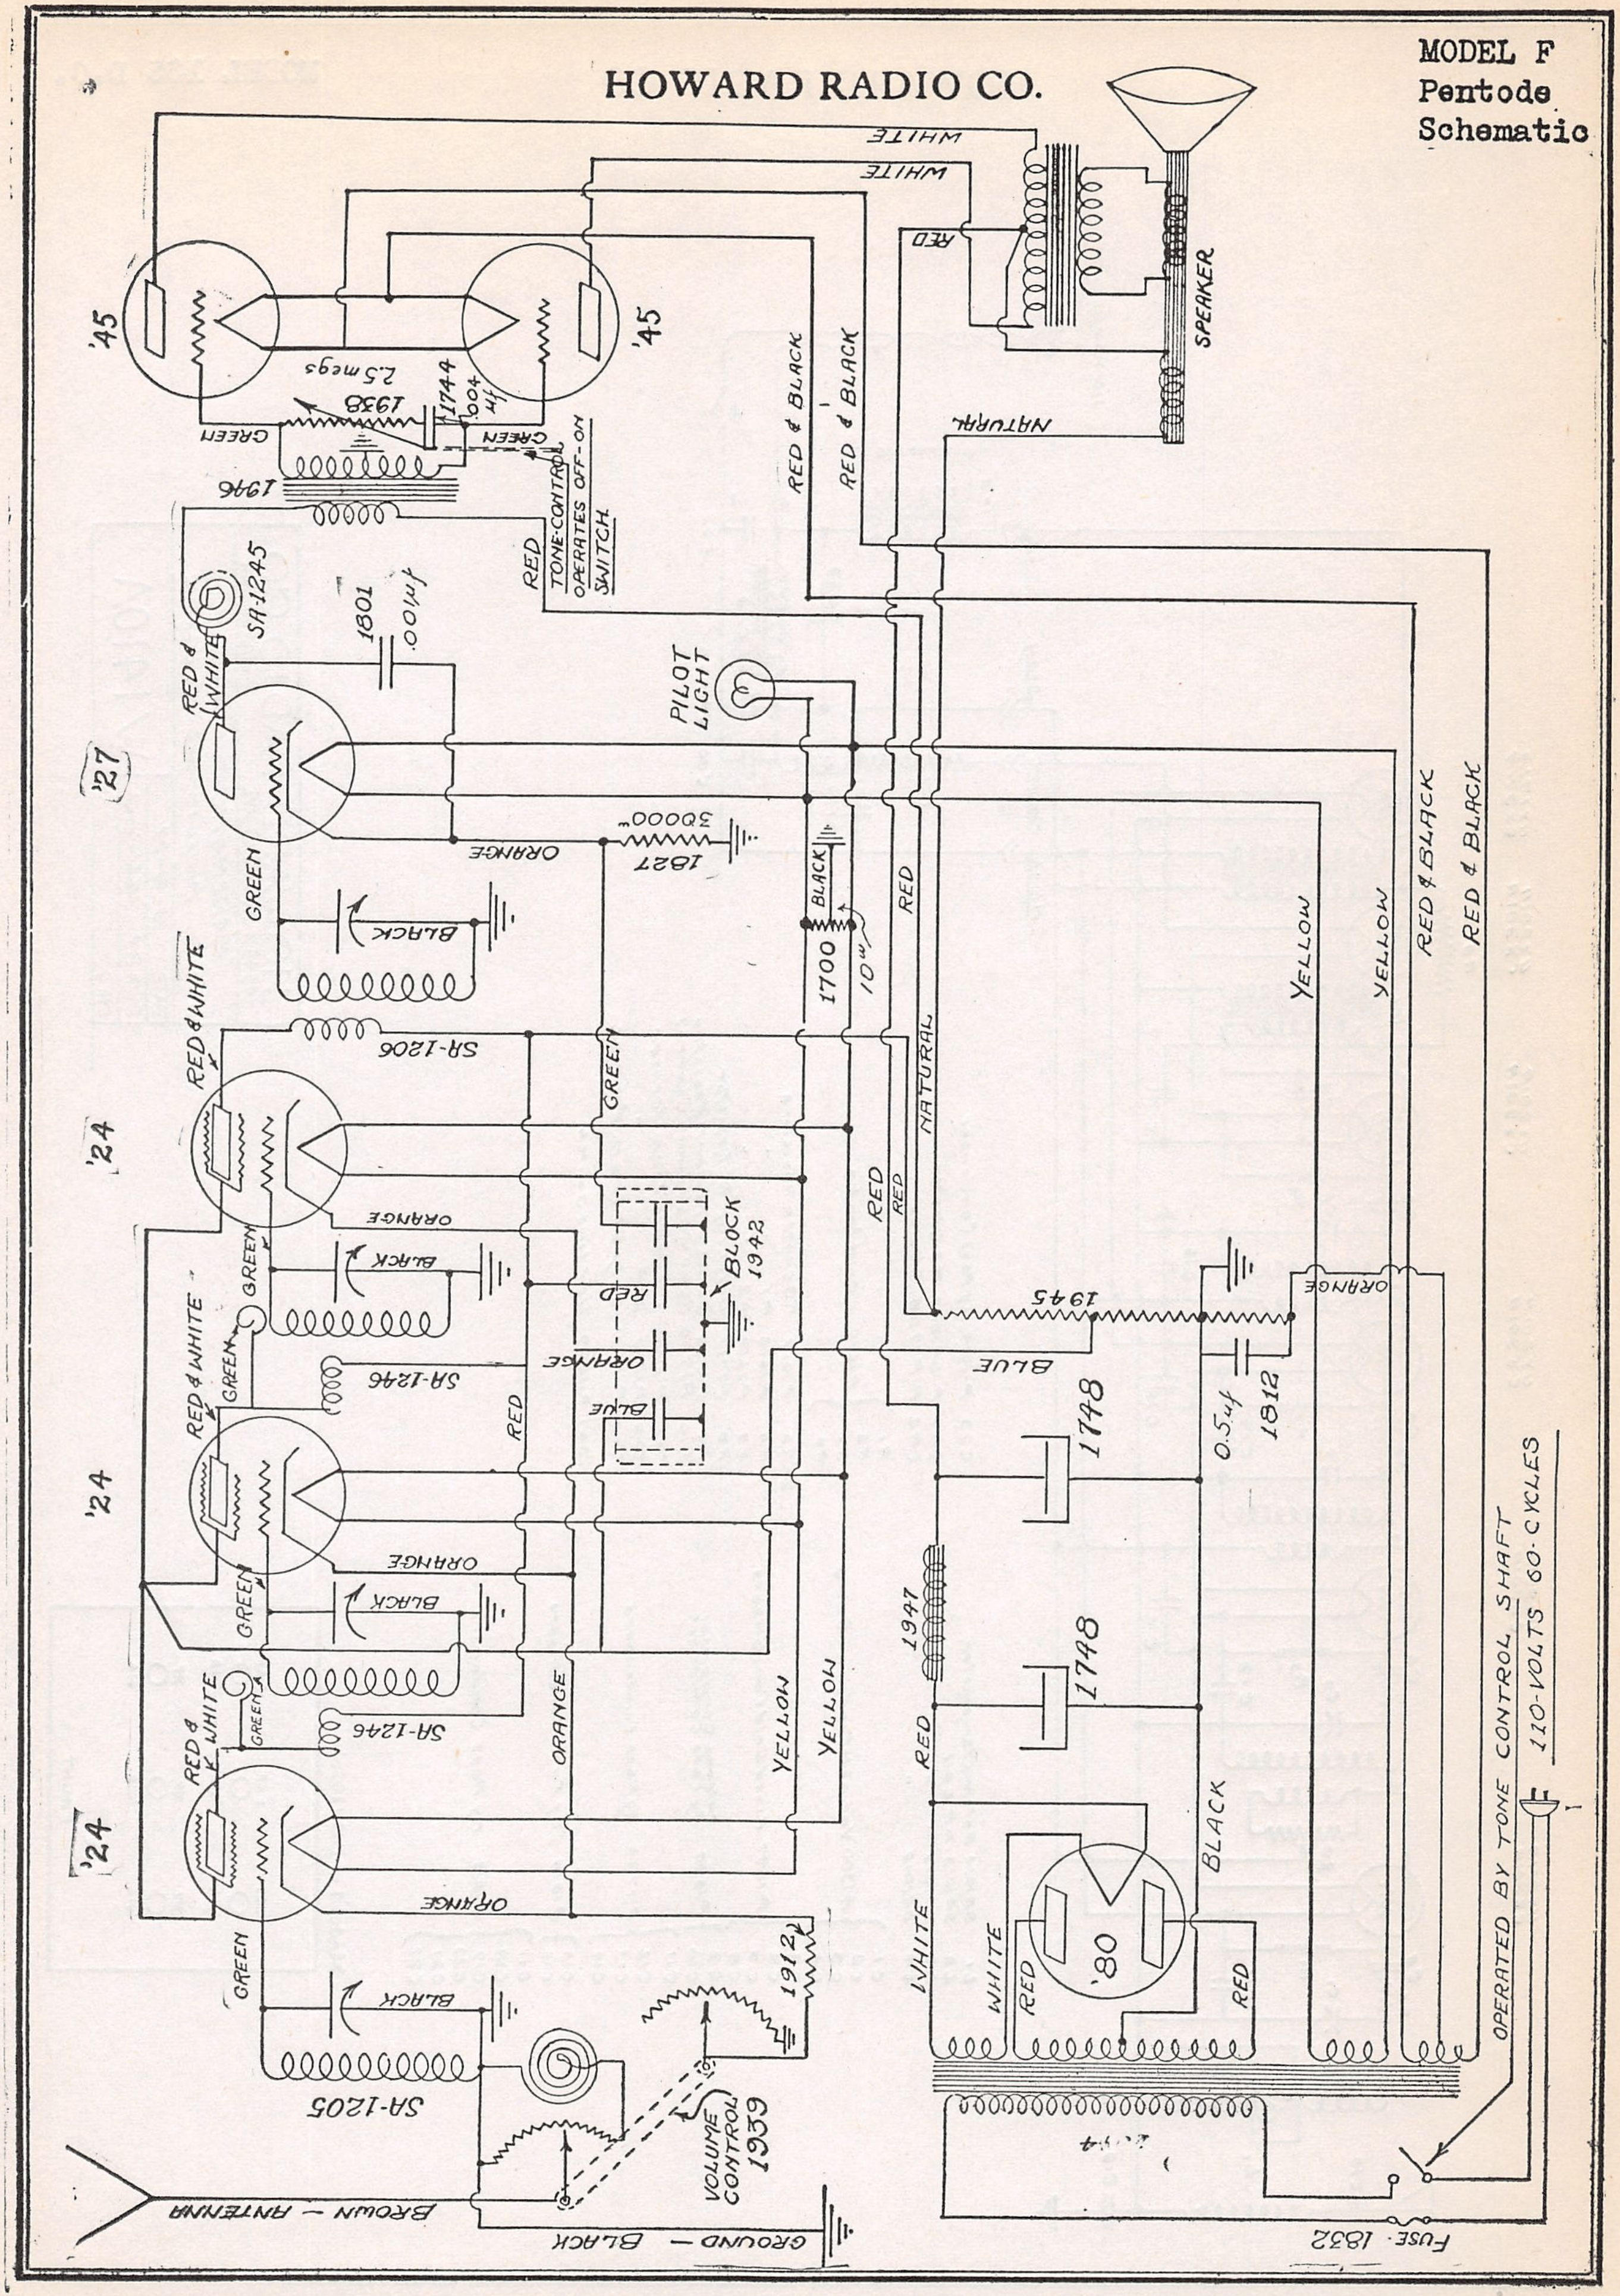
HOWARD RADIO CO.
SPEAKER
WHITE
WHITE
RED
NATURAL
'45
'45
2.5 megs
1938
1744
.004 uf
GREEN
GREEN
1946
TONE-CONTROL OPERATES OFF-ON SWITCH
RED
RED & BLACK
RED & BLACK
SA-1245
RED & WHITE
1801
.001uf
PILOT LIGHT
'27
GREEN
ORANGE
30000
1827
BLACK
BLACK
1700
10
RED
YELLOW
YELLOW
RED & BLACK
RED & BLACK
RED & WHITE
SA-1206
'24
GREEN
NATURAL
ORANGE
BLACK
GREEN
RED
RED
BLOCK 1942
RED
RED & WHITE
GREEN
ORANGE
SA-1246
BLUE
1945
ORANGE
BLUE
1748
0.5uf
1812
'24
RED
ORANGE
BLACK
GREEN
1947
1748
RED & WHITE
GREEN
SA-1246
'24
ORANGE
YELLOW
YELLOW
RED
BLACK
ORANGE
WHITE
WHITE
RED
'80
RED
GREEN
BLACK
1912
SA-1205
VOLUME CONTROL 1939
BROWN — ANTENNA
GROUND — BLACK
1954
OPERATED BY TONE CONTROL SHAFT
110-VOLTS 60-CYCLES
FUSE 1832

HOWARD RADIO CO

MODEL 135 D.C.

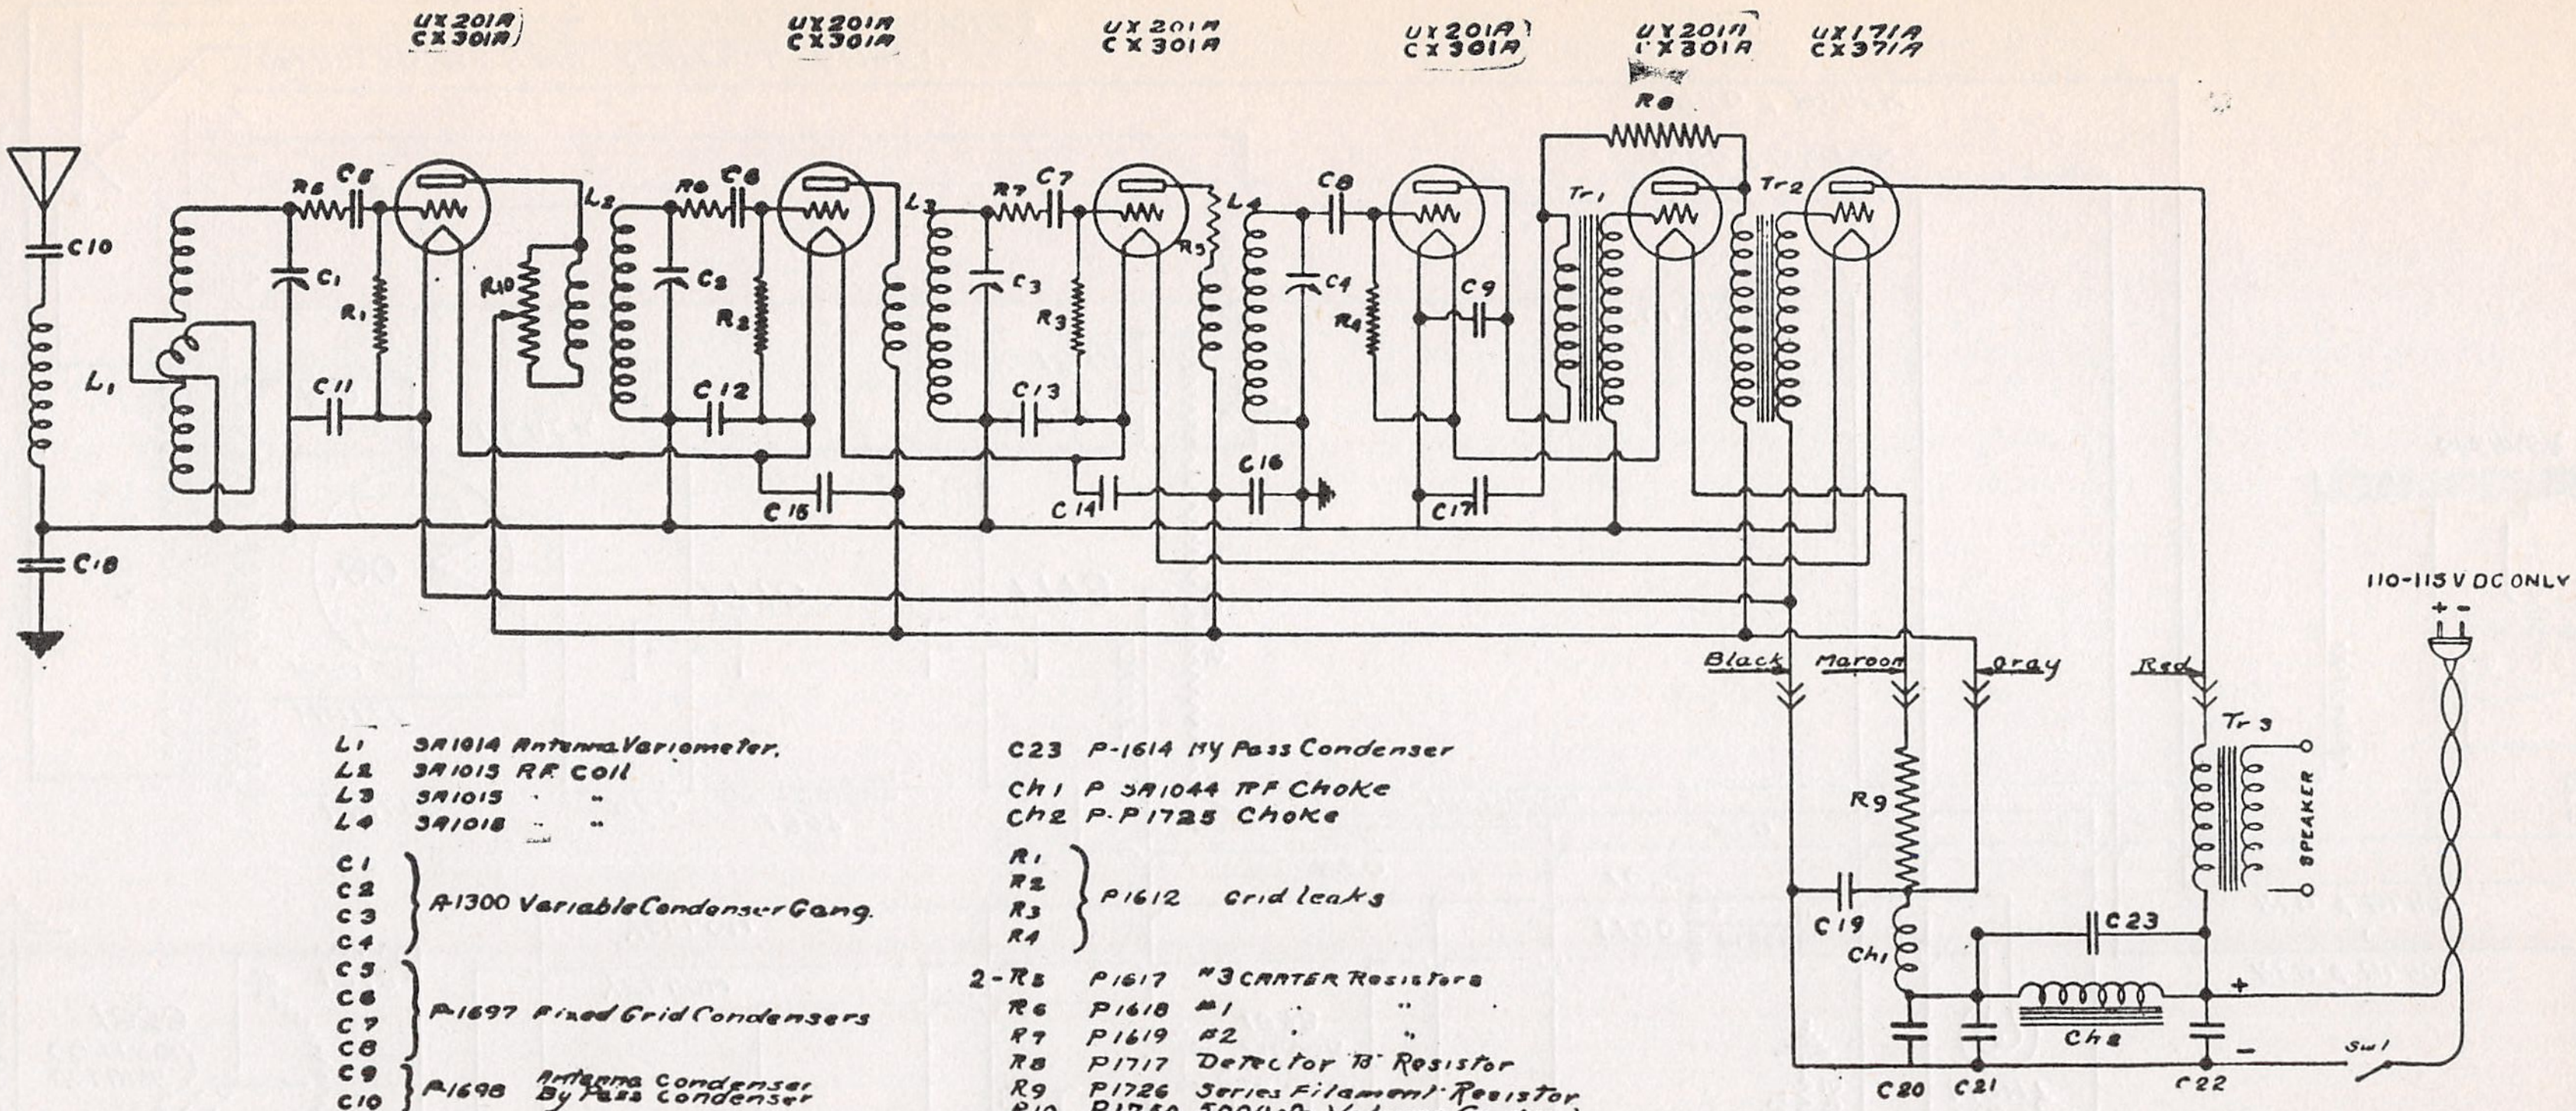
UX201A
CX301A
UX201A
CX301A
UX201A
CX301A
UX201A
CX301A
UX201A
CX301A
UX171A
CX371A
C10
C18
L1
R6
C6
C1
R1
C11
R10
L2
C5
R2
C12
C15
L3
R7
C7
C3
R3
C13
C14
L4
R5
C8
C4
R4
C16
C9
C17
R8
Tr1
Tr2
Black
Maroon
Gray
Red
R9
C19
Ch1
C20
C21
Ch2
C23
C22
Tr 3
SPEAKER
+
-
SW1
110-115 V DC ONLY
+ -

L1	3A1014	Antenna Variometer.
L2	3A1015	RF. Coil
L3	3A1015	" "
L4	3A1018	" "
C1 C2 C3 C4	A-1300	Variable Condenser Gang.
C5 C6 C7 C8	A-1697	Fixed Grid Condensers
C9 C10	A-1698	Antenna Condenser By Pass Condenser
C11 C12 C13 C14	P-1734	By Pass Condensers
C15 C16	P1614	By Pass Condensers
C17 C18 C19 C20 C21 C22	P1613	By Pass Condenser
C23	P-1614	By Pass Condenser
Ch1	P 3A1044	RF Choke
Ch2	P-P1725	Choke
R1 R2 R3 R4	P1612	Grid leaks
2-R5	P1617	#3 CARTER Resistors
R6	P1618	#1 " "
R7	P1619	#2 " "
R8	P1717	Detector "B" Resistor
R9	P1726	Series Filament Resistor
R10	P-1750	5000 Ω Volume Control
Tr1	P-1732	1st Audio Transformer
Tr2	P1610	2nd " "
Tr3	P-1731	Output Transformer.
SW1	P-1629	115V line Switch

Model 135 DC (1928)

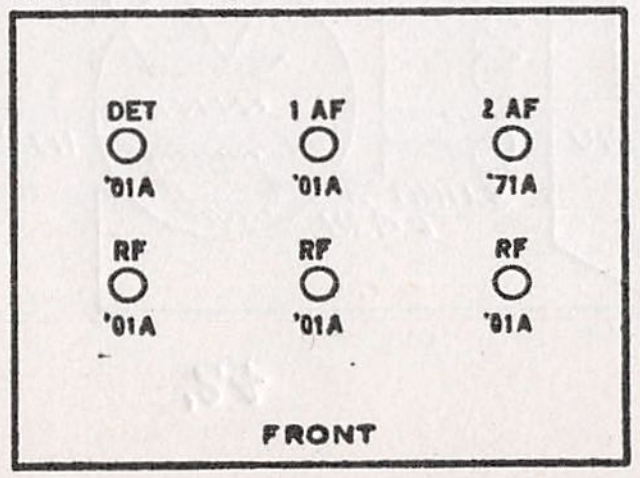
DET
'01A
1 AF
'01A
2 AF
'71A
RF
'01A
RF
'01A
RF
'01A
FRONT

HOWARD RADIO CO
4949 N. CRAWFORD AVE. CHICAGO ILL.
SCHEMATIC DIAGRAM
MODEL 135B- D.C ELECTRIC
DATE. 10-31-28
DWN. BY Hohl-MB
CHK'D
W1410A

MODEL 35,40
(H)
Schematic

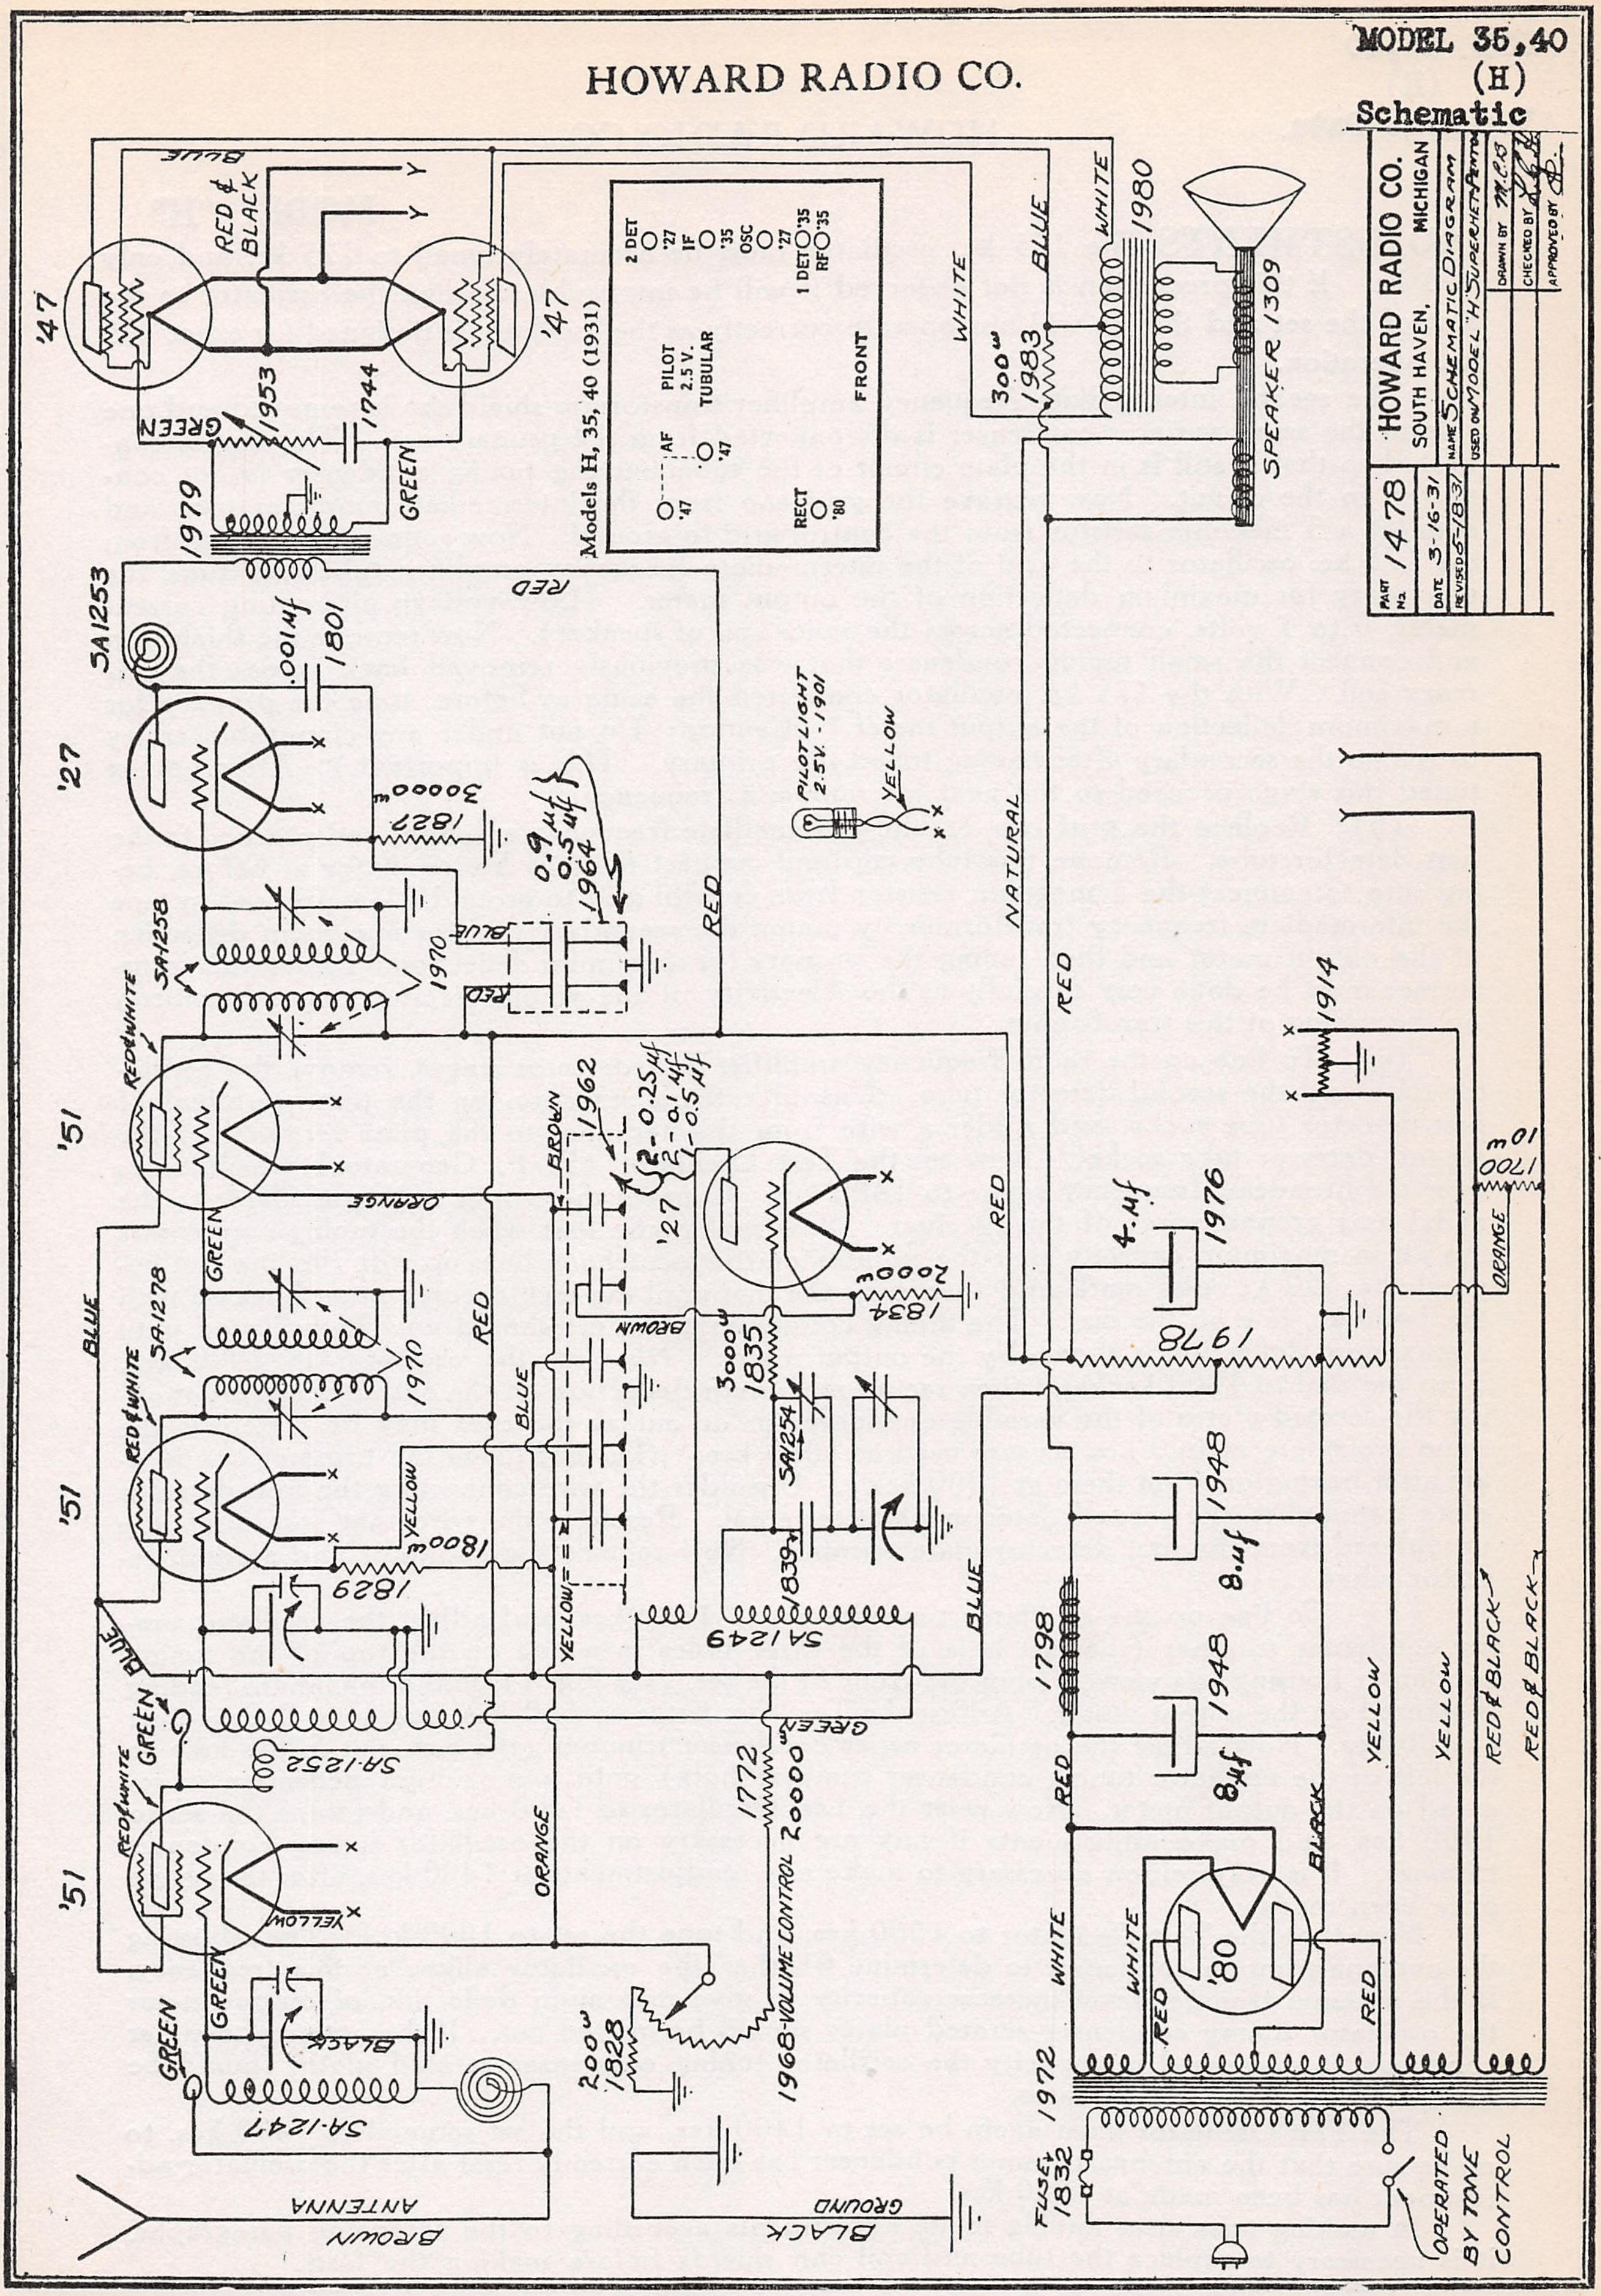
HOWARD RADIO CO.
Models H, 35, 40 (1931)
2 DET '27
IF '35
OSC '27
1 DET '35
RF '35
PILOT 2.5 V. TUBULAR
AF '47
'47
RECT '80
FRONT
HOWARD RADIO CO.
SOUTH HAVEN, MICHIGAN
PART No. 1478
DATE 3-16-31
REVISED 5-18-31
NAME SCHEMATIC DIAGRAM
USED ON MODEL "H" SUPERHET PENTO
DRAWN BY M.C.B.
CHECKED BY
APPROVED BY
'47
'47
RED & BLACK
BLUE
Y
Y
1953
1744
GREEN
GREEN
1979
WHITE
BLUE
WHITE
1980
300Ω
1983
SPEAKER 1309
SA1253
.001μf
1801
RED
'27
30000Ω
1827
PILOT LIGHT 2.5V. - 1901
YELLOW
0.9μf
0.5μf
1964
SA1258
1970
BLUE
RED
RED
NATURAL
RED
1914
RED & WHITE
'51
BROWN
1962
2 - 0.25μf
2 - 0.1μf
1 - 0.5μf
'27
ORANGE
10Ω
1700
ORANGE
GREEN
4.μf
1976
RED
BLUE
SA1278
2000Ω
1834
RED
BROWN
1978
RED & WHITE
1970
3000Ω
1835
BLUE
SA1254
'51
YELLOW
1800Ω
1829
1839
1948
8.μf
BLUE
YELLOW
SA1249
BLUE
1798
GREEN
1948
8μf
YELLOW
YELLOW
RED & BLACK
RED & BLACK
RED & WHITE
GREEN
SA-1252
RED
1772
20000Ω
ORANGE
BLACK
'51
YELLOW
WHITE
WHITE
'80
RED
RED
GREEN
GREEN
BLACK
200Ω
1828
1968 - VOLUME CONTROL
1972
GREEN
SA-1247
FUSE 1832
OPERATED BY TONE CONTROL
ANTENNA
BROWN
GROUND
BLACK

HOWARD RADIO CO.

MODEL "H"

ADJUSTMENTS The 175 kc. oscillator must be accurately tuned to 175 kc. and only 175 kc. If this precaution is not observed it will be impossible to align the oscillator to the rest of the set and the set will not operate correctly as the oscillator is designed for exact 175 kc. operation.

The second intermediate frequency amplifier transformer shield can is removed and one side of the small variator condenser is disconnected from the primary coil. This coil is connected so that it still is in the plate circuit of the tube but the tuning condenser is not connected in the circuit. Now remove the grid cap from the intermediate amplifier tube and connect a 3 megohm resistor from the control grid to ground. Now connect the output from the 175 kc. oscillator to the grid of the intermediate frequency amplifier tube and tune the secondary for maximum deflection of the output meter. (Low voltage alternating current meter, 0 to 3 volts, connected across the voice coil of speaker). Now remove the shield can and connect the small tuning condenser that was previously removed back across the primary coil. With the 175 kc. oscillator connected the same as before, tune the primary for a maximum deflection of the output meter. (Caution: Do not under any circumstances try to retune the secondary after having tuned the primary. **This is important.**) After having tuned this stage proceed to the next intermediate frequency:

(b) Replace the grid cap on the intermediate frequency amplifier and proceed to the first detector tube. Remove this tube cap and connect the 175 kc. oscillator as before, being sure to connect the 3 megohm resistor from control grid to ground. Now proceed to tune the intermediate frequency transformer by tuning the secondary first for maximum deflection of the output meter and then tuning the primary for maximum deflection. Tuning this transformer must be done very carefully as the selectivity of the whole receiver depends entirely on the tuning of this transformer.

(c) To line up the radio frequency amplifier and detector stages, remove the oscillator tube and the second detector tube. Unsolder the connection on the plate terminal of first detector tube socket and solder a wire from this terminal to the plate terminal of the second detector tube socket. Now set the Test Oscillator (R. F. Generator) which tunes over the broadcast frequency range to 1400 kcs. Connect the output of this oscillator to the aerial and ground wires of the receiver. Now make sure that when the tuning condensers are all in maximum capacity that the pointer on the escutcheon lines up with the line just beyond the 550 kc. dial mark and then turn the dial until the escutcheon pointer lines up with the 1400 kc. line on the dial. The tuning condenser trimmers should now be adjusted until a maximum deflection is shown by the output meter. Now set the oscillator to 1000 kcs. Turn the dial to 1000 kcs. and then secure maximum deflection on the output meter by moving the serated plates of the variable condenser in or out as the case may be. Repeat the same procedure at 600 kcs. as was used at 1000 kcs. (Do not touch the trimmer condensers after having once set them at 1400 kcs.). Unsolder the wire connecting the first detector plate terminal to the second detector plate terminal. Resolder the wire that was originally unsoldered from the first detector plate terminal. Now replace the oscillator and second detector tubes.

(d) To line up the oscillator tune the set to 1400 kcs. and adjust the oscillator tuning condenser trimmer (the last hole of the three holes in a line on the top of the tuning condenser housing) as viewed from the front of the set, (see Fig. 1) until a maximum reading is secured on the output meter. Adjust the Test Oscillator to 600 kcs. and tune the receiver to 600 kcs. Now adjust the oscillator series condenser trimmer (the hex. nut in the hole to the left of the oscillator tuning condenser trimmer hole) until a maximum deflection is secured on the output meter. Now reset the Test Oscillator to 1400 kcs. and retune the set to 1400 kcs. and make adjustments if any are necessary on the oscillator tuning condenser trimmer. It is very seldon necessary to make any readjustments at 1400 kcs. after they have once been made.

Now tune the Test Oscillator to 1000 kcs. and tune the set to 1000 kcs. Try adjusting the antenna trimmer condenser to determine whether the oscillator aligns at this frequency. If the antenna trimmer must increase capacity to give maximum deflection of output meter the oscillator tuning condenser serated plates should be moved out. If the antenna trimmer condenser is decreased in capacity the oscillator tuning condenser serated plates should be bent in towards the stator plates.

The Test Oscillator must again be set to 1400 kcs. and the set retuned to 1400 kcs. to make sure that the antenna trimmer condenser has been correctly reset after the oscillator adjustment has been made at 1000 kcs.

In making tests after having made adjustments according to the foregoing paragraphs, it is necessary to replace the tube and coil can shields before making the tests.

HOWARD RADIO CO.

MODEL H
Chassis
Top-Bottom View

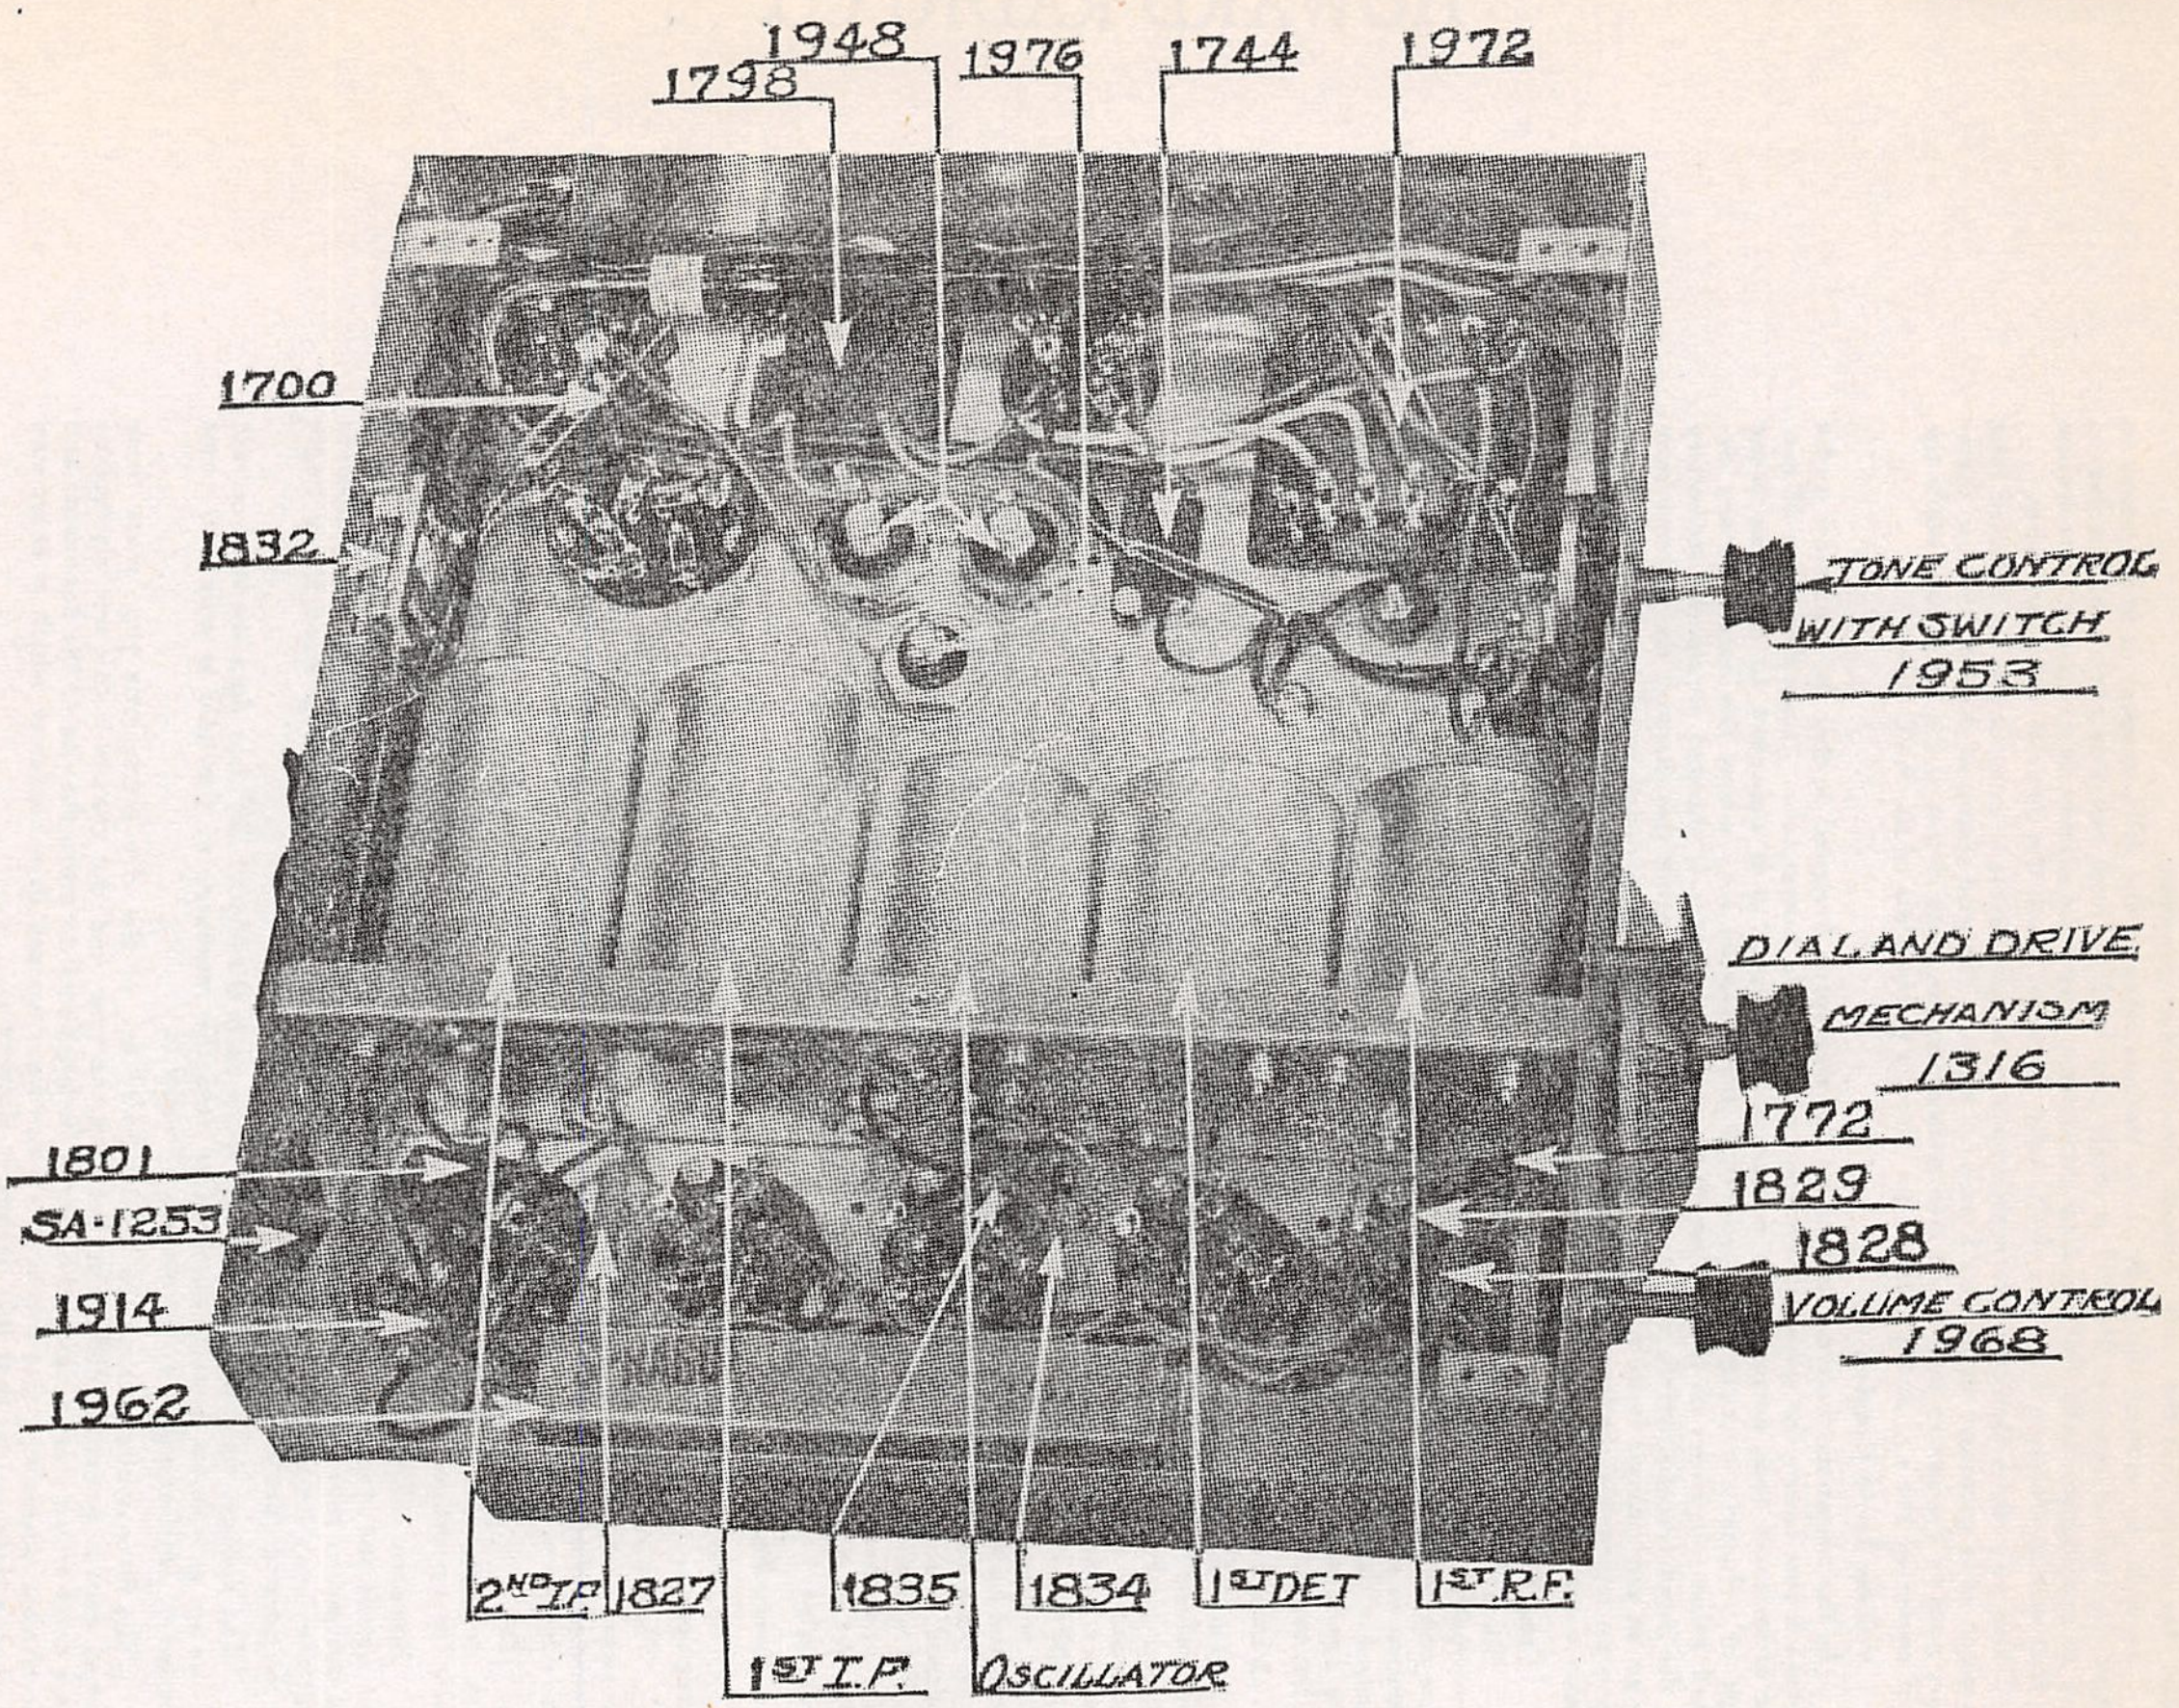
1948
1798
1976
1744
1972
1700
1832
TONE CONTROL
WITH SWITCH
1953
DIAL AND DRIVE
MECHANISM
1316
1772
1829
1828
VOLUME CONTROL
1968
1801
SA-1253
1914
1962
2ND I.F.
1827
1835
1834
1ST DET
1ST R.F.
1ST I.F.
OSCILLATOR

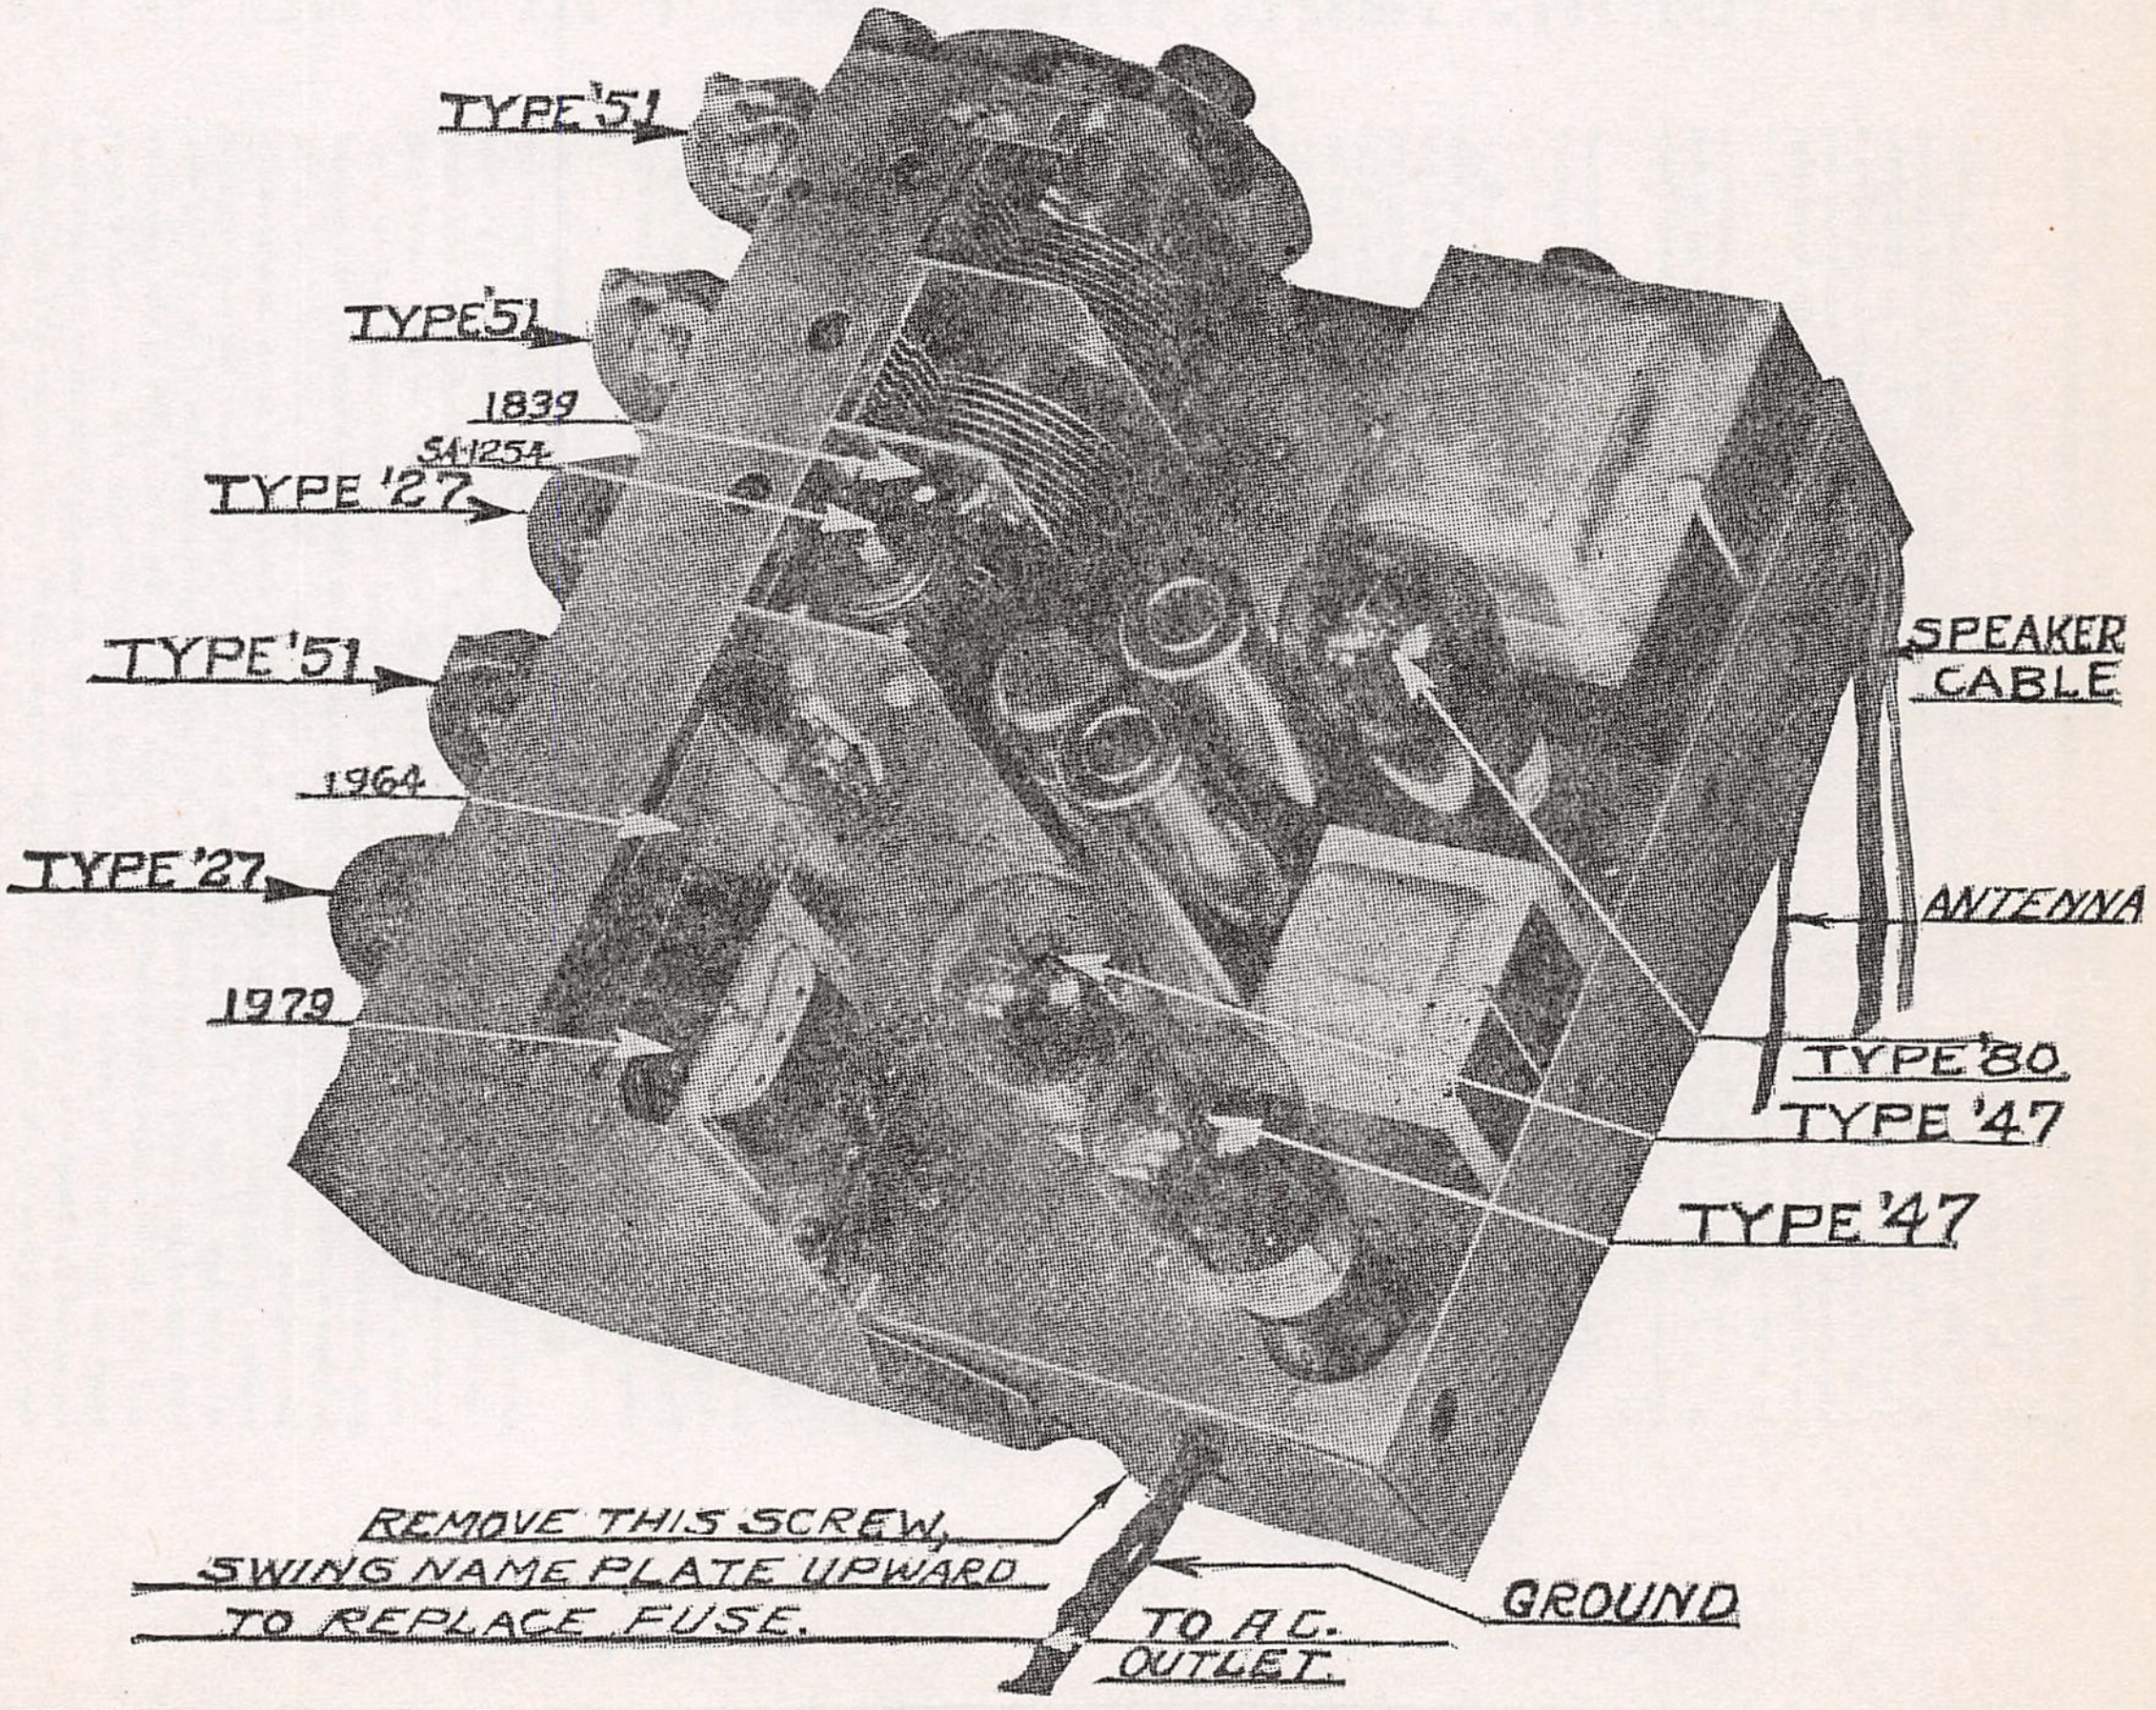
TYPE '51
TYPE '51
1839
SA-1254
TYPE '27
TYPE '51
1964
TYPE '27
1979
SPEAKER
CABLE
ANTENNA
TYPE '80
TYPE '47
TYPE '47
REMOVE THIS SCREW,
SWING NAME PLATE UPWARD
TO REPLACE FUSE.
TO A.C.
OUTLET
GROUND

MODEL 45,60
(AVH)
Alignment Data

HOWARD RADIO CO.

1. Specifications.

The Howard Model AVH receiver is a superheterodyne receiver similar to the Model H receiver with the addition of an Automatic Volume Control.

2. Schematic Circuit.

Drav # 1481 shows a schematic diagram of the Model AVH. Since the Model "H" and Model "AVH" are nearly identical, it will only be necessary to show wherein the two differ.

In the radio chassis the following differencies are noted.

The first radio frequency transformer SA-1267 is not grounded as in the Model "H". A non-inductive .1 mfd. condenser is connected between the end of this coil and ground. This condenser provides an insulation as far as direct current is concerned for the grid of the radio frequency amplifier tube. From a radio frequency standpoint, this condenser offers a low impedance path to ground for the radio frequency voltage. Since this condenser and the tuning condenser are in series across the tuning coil it is necessary that this condenser be large in order to have small effect on the tuning capacity.

The second radio frequency transformer SA-1268 is constructed in the same manner as the first radio frequency transformer as far as grounding is concerned and needs no further explanation For actual physical construction refer to section 2 of Model "H" Service Manual)

The first intermediate frequency transformer SA-1278 also has an isolating condenser in the grid circuit This condenser serves the same purpose as those in the radio frequency transformers.

The initial operating bias for the various tubes is secured by means of individual resistors in each cathode circuit. The plate current flowing through this resistor causes a voltage drop across it which places the cathode positive with respect to ground. Since the grid is effectively at ground potential this is the same as placing a negative voltage on the grid. It is necessary to bias these tubes individually so that there is no common impedance which might give rise to reaction between the tubes. Each resistor is by-passed to form a low impedance path for radio frequency around the resistor.

3. Automatic Volume Control.

The Automatic Volume Control is actuated by means of a type 227 tube and in order to explain its operation it is necessary to explain its action under condition of no signal being received and then its action when a signal is being received.

The tube is connected so that the grid is at absolute -B potential by means of a 2 megohm resistor (P-1889). The cathode of the tube is connected to a point on the voltage divider which is at +24 volts with respect to -B or thegrid. There exists then between the cathode and the grid a potential difference of 24 volts with the grid negative by this amount. The plate of this tube connects to ground by means of two 150,000 ohm resistors (P-1888). Since ground is connected to +124 volts with respect to -B there exists between the cathode and the plate a potential difference of 100 volts. In order to by-pass any radio frequency energy which may appear on the plate a non-inductive condenser (P-1893) is connected from the plate of the Automatic Volume Control tube to the cathode.

With the condition of no signal there exists a bias of 24 volts and a plate voltage of 100 volts. Under these conditions there is no plate current flowing and the tube is said to be cut-off. Since no plate current is flowing there exists no voltage drop across the plate circuit resistors and, therefore, there is no bias voltage on the grids of the controlled tubes. The only bias on the r.f., 1st det. and i.f. is caused by the respective voltage drops across their cathode resistors. These resistors are designed to give the most sensitive operating point.

Now let us consider the case of a received signal. The signal passes through the receiver to the second detector grid. Here the AVC (automatic volume control) tube grid and the second detector grid are in parallel. The signal voltage is fed to the grid of the AVC tube by means of a small fixed condenser P-1892. This signal voltage swings back and forth with its center coinciding with the initial bias on the AVC tube. It will be seen that during the positive half at the cycle, the peak voltage of the signal swing substracts from the original bias voltage. This means that the instantaneous bias on the tube is less than the original bias and the tube begins to draw current in the plate circuit. Since this current flows in the resistors in the plate circuit of the AVC tube, there exists a voltage drop across these resistors. Also the flow of the electrons is from plate to ground so that the plate becomes negative with respect to ground. Now since the original potential of the cathodes of the r.f., 1st. det. and i.f tube is positive with respect to ground, it follows that if the grids of the respective tubes are connected to resistor in the plate circuit of the AVC tube, that any potential existing across this resistor is added to the original bias and makes the grids more negative than the original bias by the amount of the voltage drop across the resistor in the AVC tube plate.

It is at once apparent that the greater the signal voltage appearing at the grid of the AVC tube, the more plate current will flow in plate circuit. An increase in plate current means an increase in bias on the r.f., 1st det. and i.f. tubes. An increased bias on these tubes means less amplification and therefore, less grid swing on the second detector and AVC tube. This cycle goes on until a constant voltage is obtained across the second detector input or in other words until a condition of equilibrium is reached.

The action of the AVC is to maintain a constant voltage across the grid of the second detector regardless of the voltage of the incoming signal. Since this voltage remains constant this means that the audio output also remains constant.

In order to connect the grids of the various tubes to the AVC resistor, it is necessary to insert decoupling resistors P-1897 in each grid lead. These resistors are of such value so that in conjunction with the isolating condenser, they form a resistance capacity filter section so that any modulation from the AVC tube does not reach the grids of the other tubes.

Due to certain detector characteristics it is not advisable to control the 1st detector tube as much as is necessary with the r.f. and i.f. tubes. The grid return of the 1st detector, therefore, goes to the center tap of the two resistors in the plate circuit of the AVC tube while the grid return of the r.f. and i.f. tubes go directly to the plate of the AVC tube.

4. Volume Level Control.

In the automatic volume control set the receiver is designed so that the maximum audio output is just below the point of overload of the audio power tube. Since this value of output is far more than necessary for normal room volume, it is necessary to introduce some type of volume level control in order that the customer may adjust the output to any desired value. In order to accomplish this a variable resistor is shunted across the secondary of the input transformer to the pentode tubes. By adjusting this control, the volume may be set at any desired level and once adjusted need not be adjusted until it is desired to receive an extremely distant station which has a field strength too weak to operate the automatic volume control.

5. Tone Control.

Since the volume level control on the Model AVH is connected where the tone control is normally connected, it was necessary to re-design the tone control for a new location. The tone control consists of two condensers P-1845 and a variable resistor P-1881. This combination is connected in series across the plates of the two pentodes. The action of this control is the same as that on the Model H in that as less resistance is included between the two condensers, they become more effective in by-passing the higher audio frequencies and at the same time they tune the primary of the output transformer to a lower audio frequency

6. Visual Tuning Meter.

Since the Automatic Volume Control tends to hold the audio output of the set to a certain definite volume level, it will be at once apparent that the main tuning dial may be rotated quite a distance without any appreciable change in audio volume. This means that the point of resonance is hard to distinguish. In order to tune the receiver to absolute resonance, a visual tuning meter is used. This meter is connected in series with the plate supply voltage of the three controlled tubes. As the bias increases on these tubes as the receiver is tuned to resonance, the plate current decreases. This decrease in plate current is recorded by the meter. A station is in exact resonance when the tubes are drawing their minimum plate current for a given signal strength. At this condition the best tonal qualities are realized from the set. It is important that the service man and dealer both understand this tuning so that the customer may be instructed in the correct manner of tuning his radio set. This broadness of tuning is only apparent and does not effect the selectivity of the receiver. This action is explained fully in the instruction pamphlet with each receiver and should be thoroughly understood so that an explanation can be given the customer.

7. Power Pack.

The power pack is of the conventional type and is similar to the Model H with a few exceptions.

The power transformer has a separate winding for the heater of the AVC tube. This is necessary because if the heater were grounded as the other heaters, it would place 100 volts potential difference between cathode and heater and it is possible that rectification might take place between these two elements which would hinder the action of the AVC tube.

The HV. secondary of this power transformer is also changed to give an increased high voltage. This increase is necessary because the AVC tube requires an additional 124 volts for operation.

Since an additional 124 volts is required above the usual 180 volts for plate operation this means that from +B to -B on the voltage divider resistor there is a total of 304 volts. As our power tubes require only 250 volts plate and 16.5 volts bias it is at once apparent that they may be connected betwen +B and -B with suitable resistors to drop the voltages to the correct operating voltages.

The speaker field is connected the same as in the Model "H" but since the total current of the set now flows through the speaker field the resistance of the field is only 350 ohms instead of 2400 ohms as in the standard Model H.

The filter condensers on the Model AVH are of the dry electrolytic type since there would exist a potential difference between the case and the chassis if the wet electrolytic were used which might shock the user if he happened to touch the can of the condenser and the chassis. These dry electrolytic condensers are housed in a container which is at ground or chassis potential so that this danger is eliminated.

Two pilot lights are used on the Model AVH, one for illuminating the dial and the other for illuminating the meter.

MODEL 45,60
(AVH)
Schematic

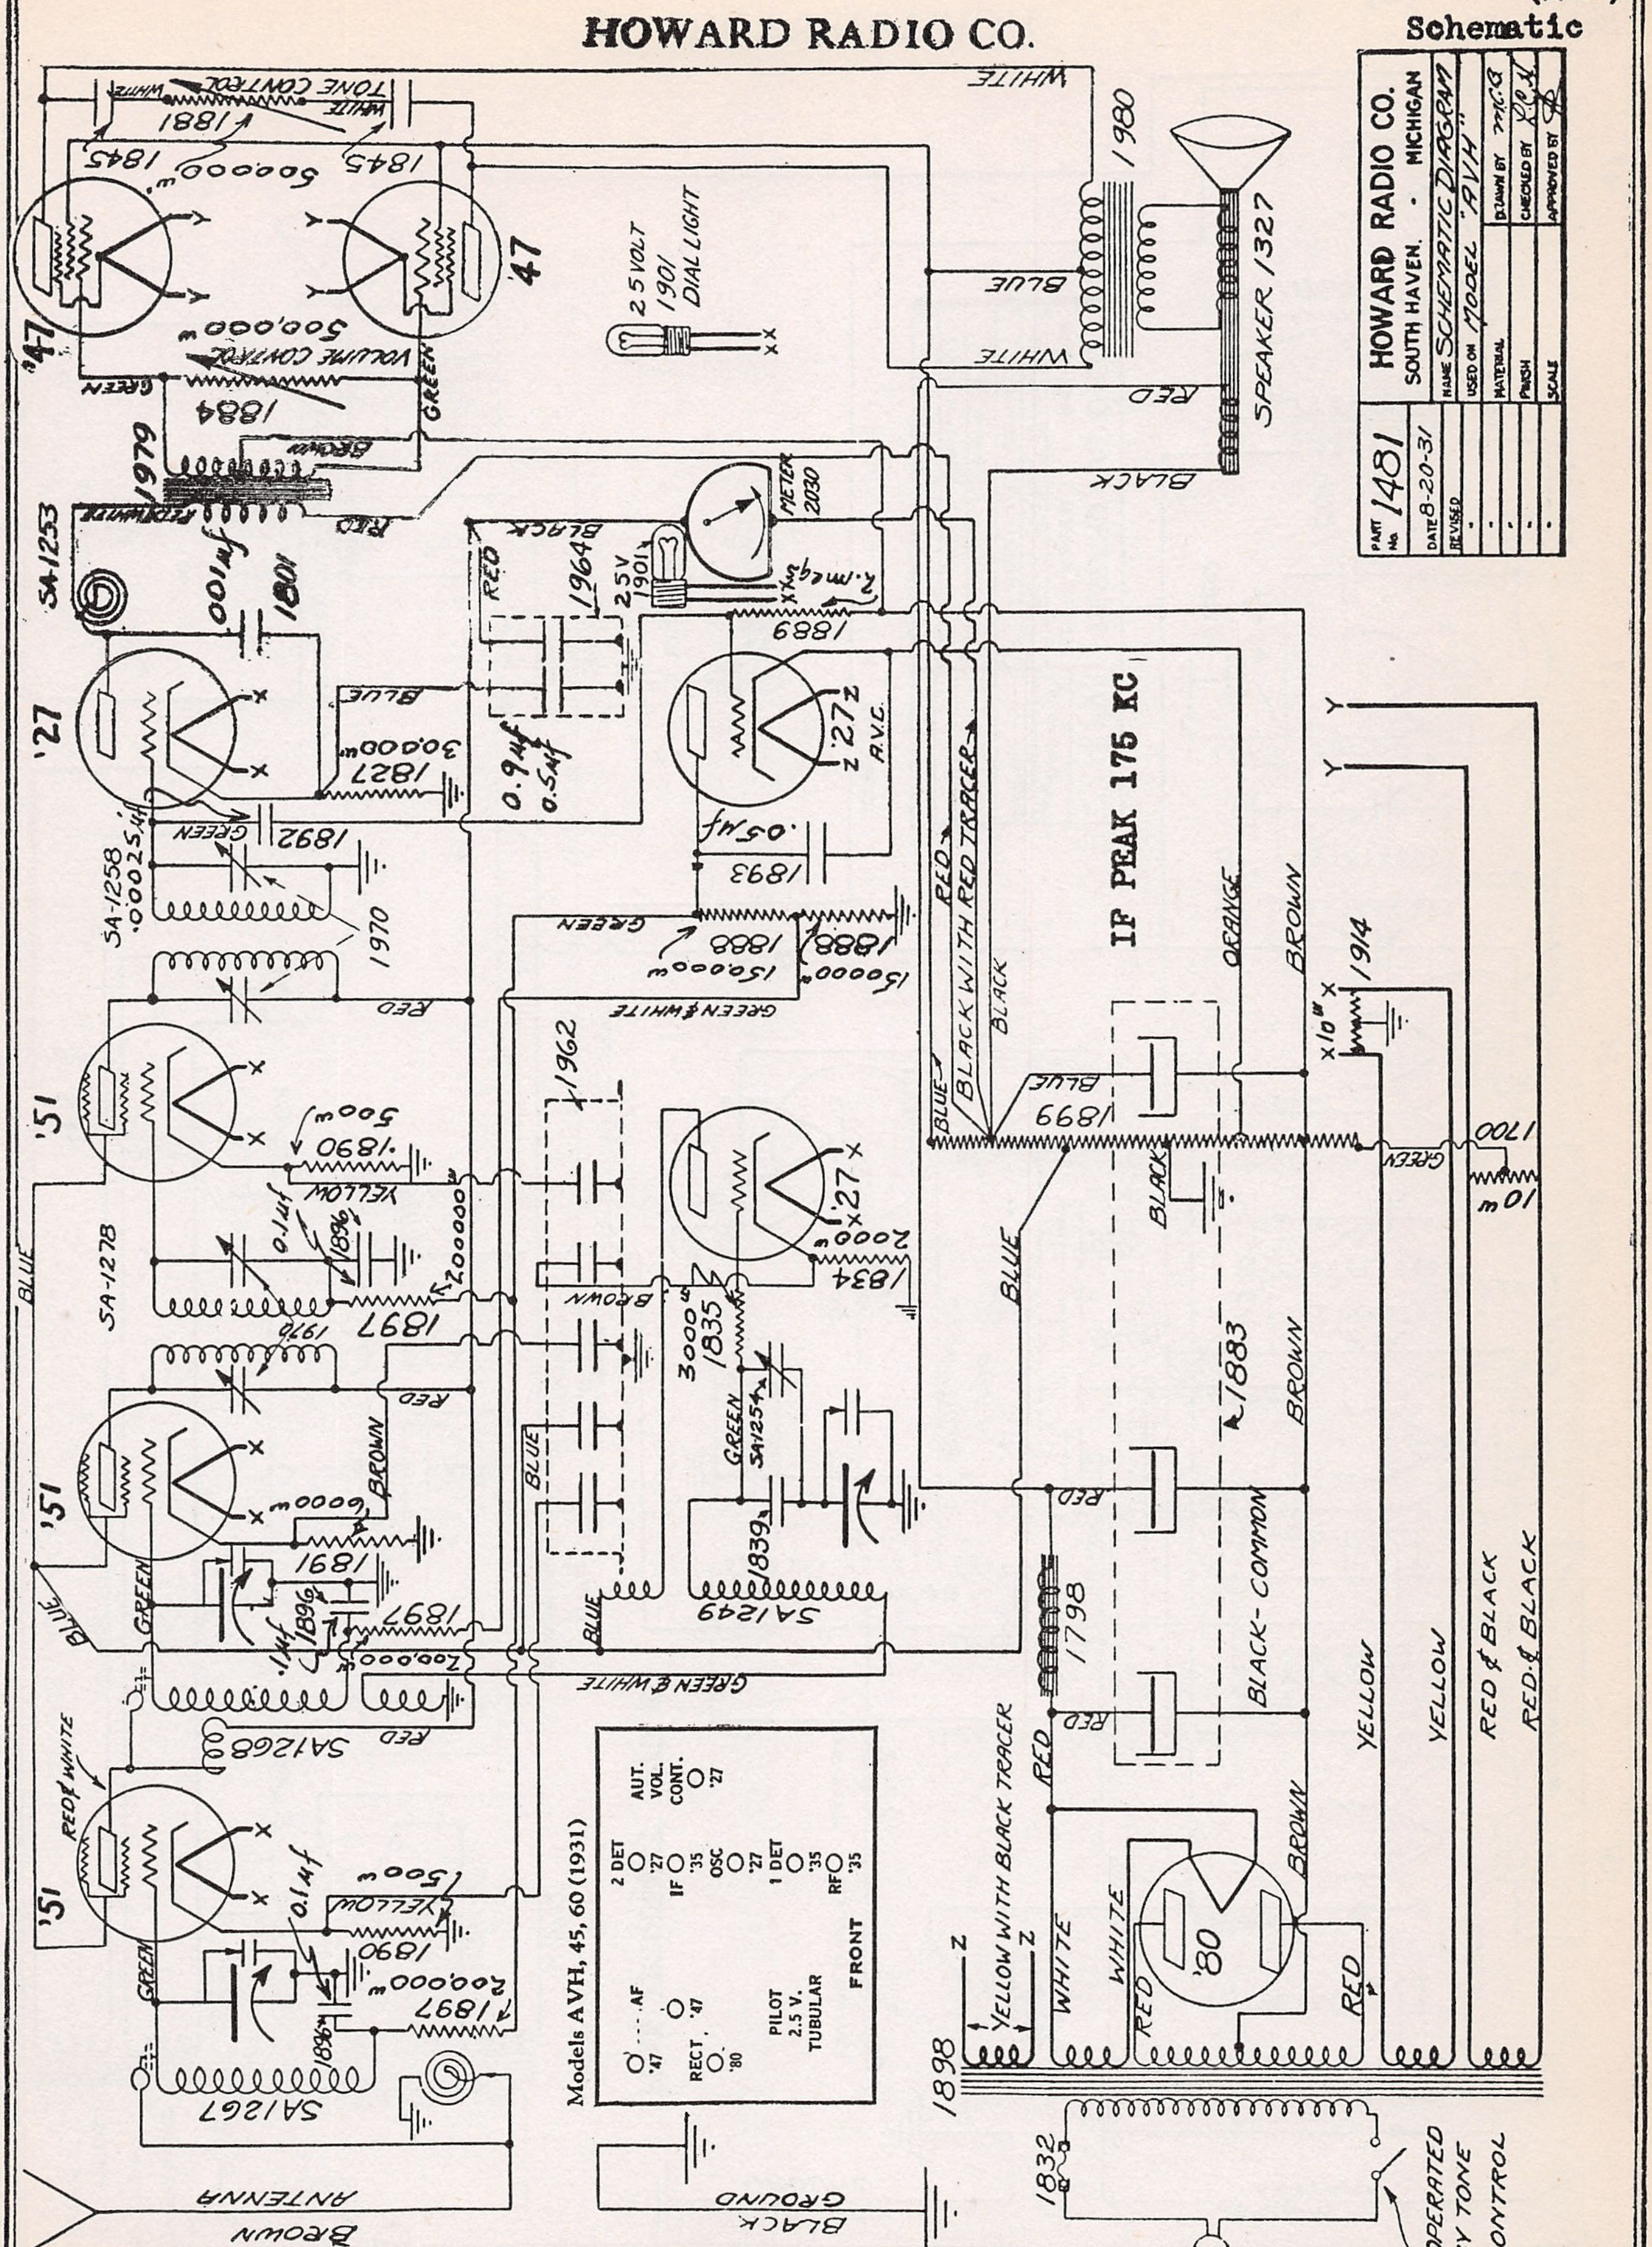
HOWARD RADIO CO.
HOWARD RADIO CO.
SOUTH HAVEN. · MICHIGAN
PART No. 1481
DATE 8-20-31
REVISED
NAME SCHEMATIC DIAGRAM
USED ON MODEL "AVH"
MATERIAL
FINISH
SCALE
DRAWN BY
CHECKED BY
APPROVED BY
TONE CONTROL
WHITE
1881
1845
500000
47
'47
VOLUME CONTROL
500,000
GREEN
1884
1979
BROWN
RED-WHITE
RED
SA1253
.001mf
1801
1980
BLUE
SPEAKER 1327
BLACK
2.5 VOLT 1901 DIAL LIGHT
METER 2030
2.5V 1901
1964
2 meg
1889
'27
0.9mf 0.5mf
30,000
1827
1892
SA-1258 .00025mf
1970
'27 Z R.V.C.
.05mf
1893
1888
150000
GREEN & WHITE
RED WITH RED TRACER
BLACK WITH RED TRACER
BLACK
IF PEAK 175 KC
ORANGE
BROWN
1914
10 m
1899
1700
10 m
'51
1890
500 m
YELLOW
0.1mf
1896
200000
SA-1278
1897
1962
'27
2000
1834
3000
1835
SA1254
1883
1839
SA1249
1898
1798
BLACK-COMMON
6000
1891
.1mf
200,000
SA1268
RED & WHITE
1500
1890
SA1267
'80
YELLOW WITH BLACK TRACER
WHITE
YELLOW
RED & BLACK
Z
1832
OPERATED BY TONE CONTROL
ANTENNA
BROWN
GROUND
BLACK
Models AVH, 45, 60 (1931)
'47 AF
RECT '80
'47
PILOT 2.5 V. TUBULAR
2 DET '27
IF '35
OSC '27
1 DET '27
RF '35
AUT. VOL. CONT. '27
FRONT

MODEL 20,25,30,32
(0)
Schematic

HOWARD RADIO CO.

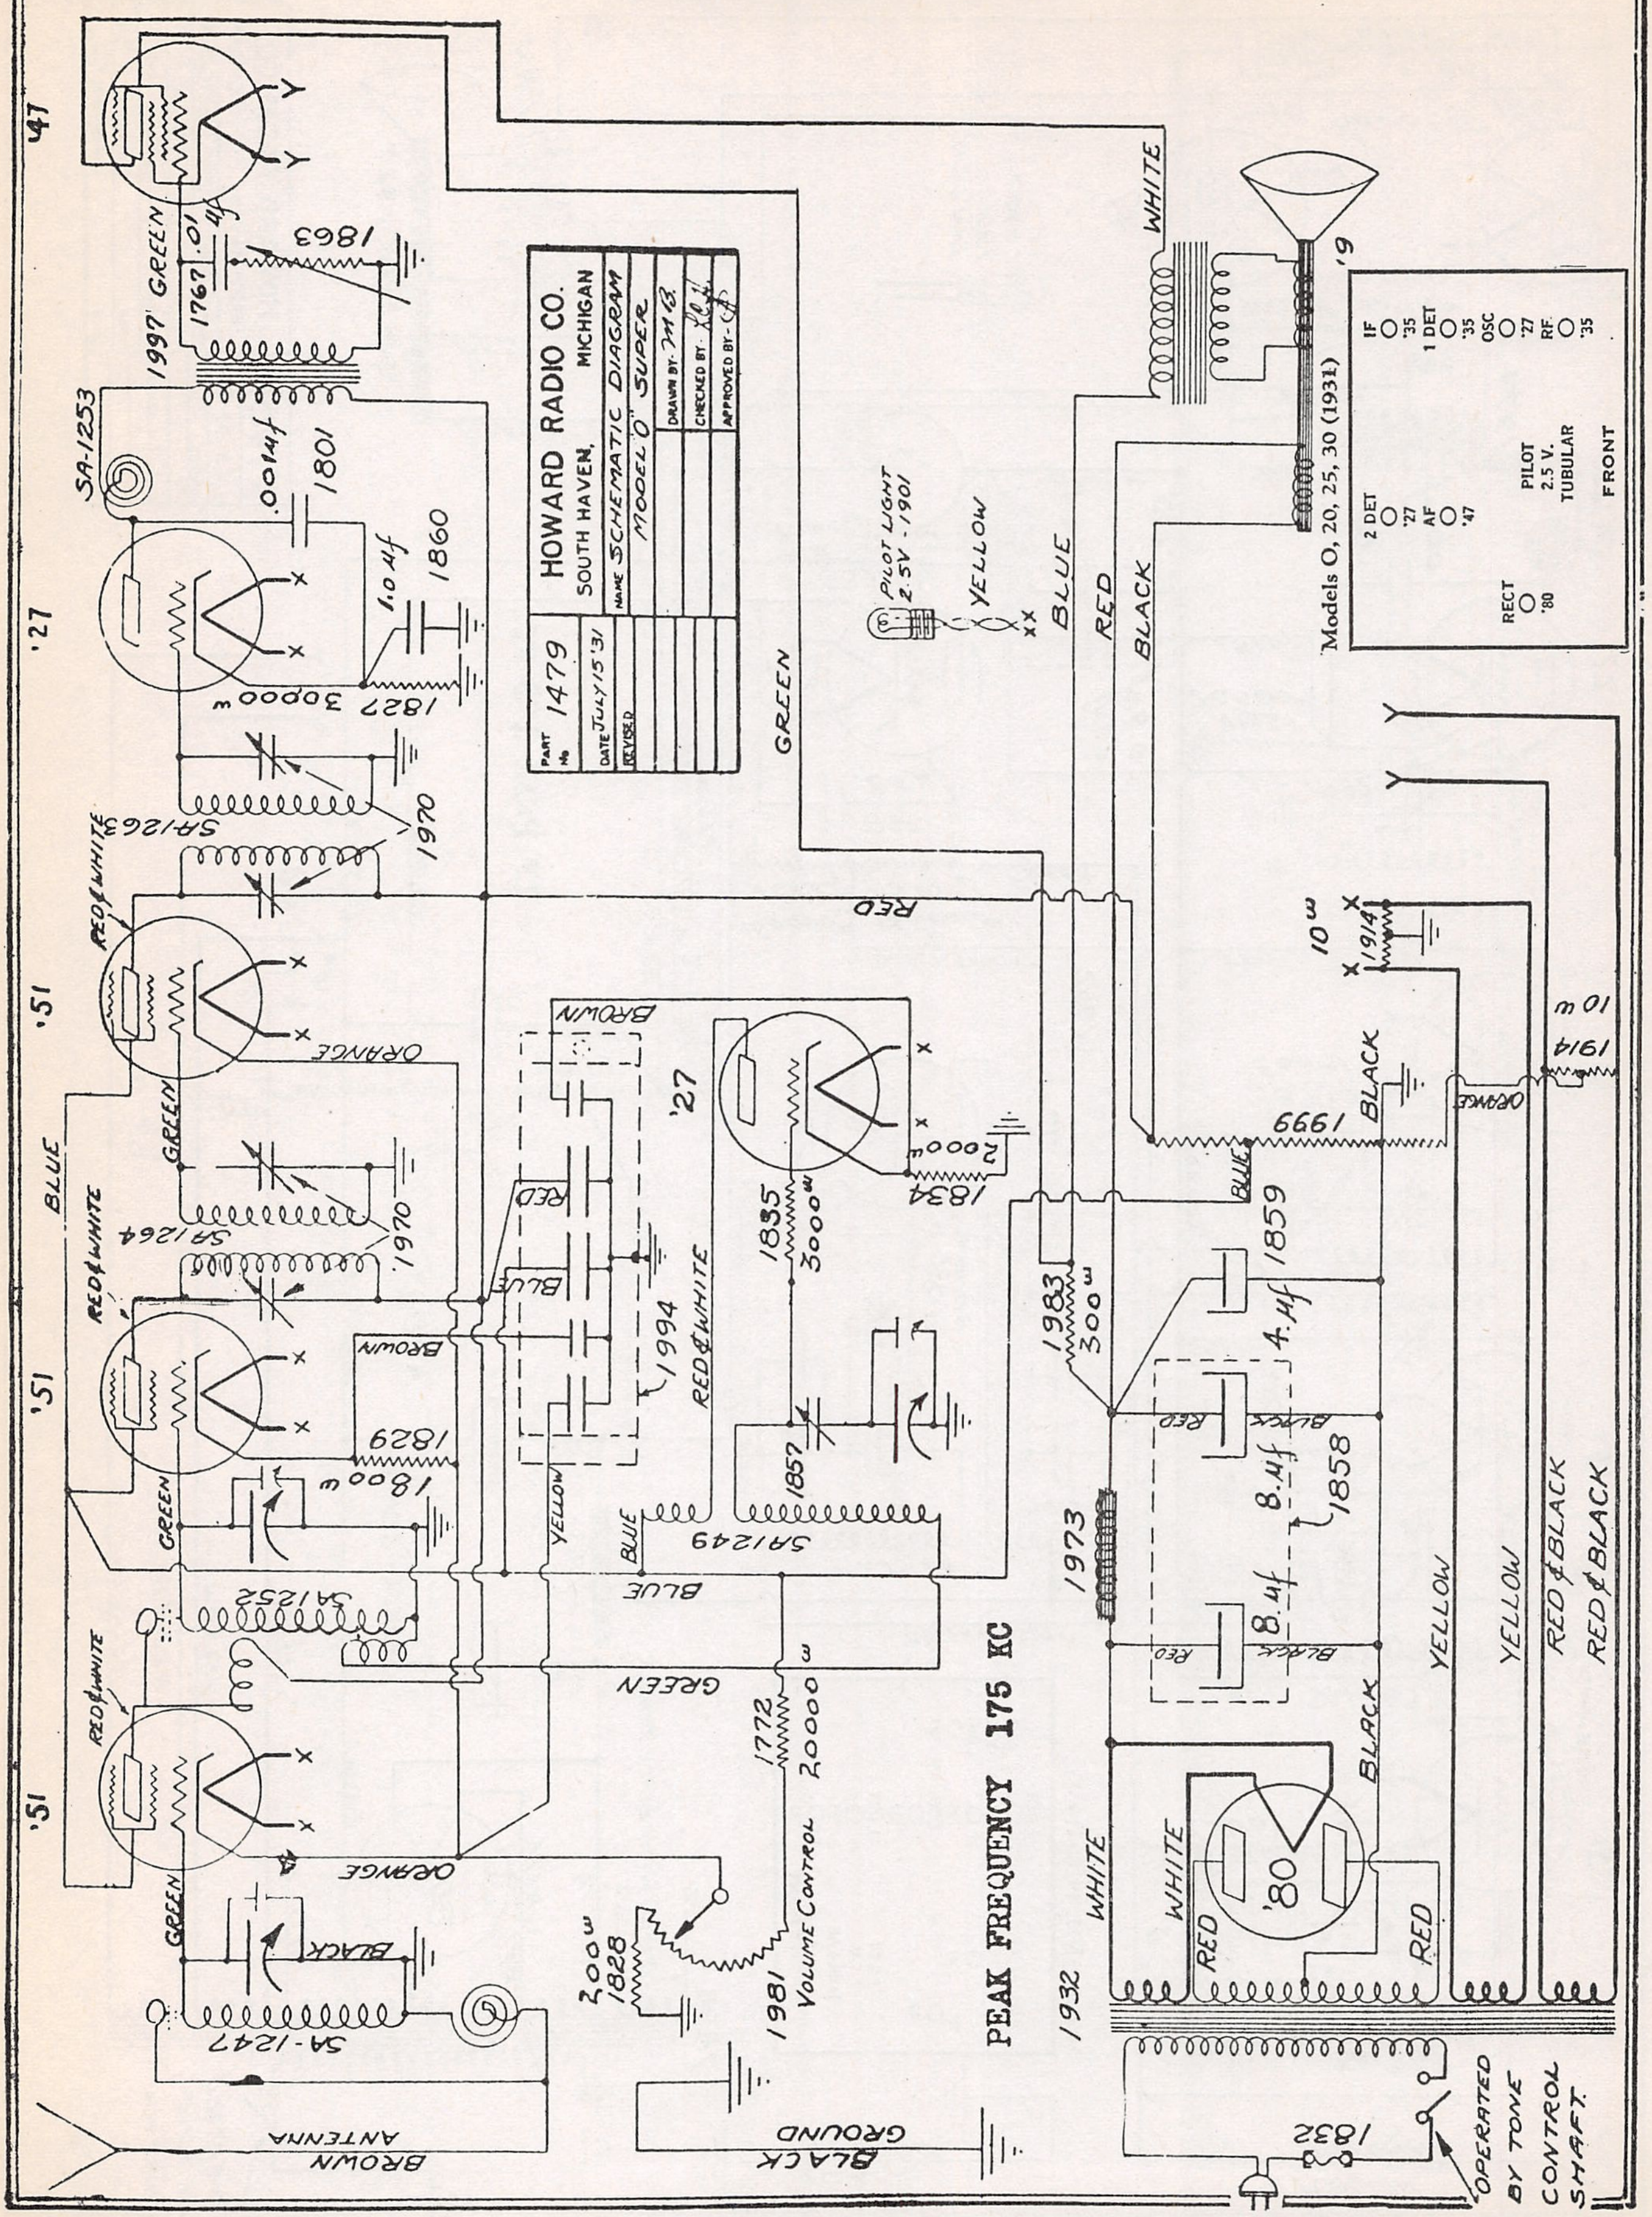
HOWARD RADIO CO.
SOUTH HAVEN, MICHIGAN
PART No 1479
DATE JULY 15 '31
REVISED
NAME SCHEMATIC DIAGRAM MODEL "O" SUPER
DRAWN BY
CHECKED BY
APPROVED BY
Models O, 20, 25, 30 (1931)
IF '35
1 DET '35
OSC '27
RF '35
2 DET '27
AF '47
RECT '80
PILOT 2.5 V. TUBULAR
FRONT
PILOT LIGHT 2.5V - 1901
'47
'27
'51
'51
'51
'27
'80
1997 GREEN
1767 .01 uf
1863
SA-1253
.0014 uf
1801
1.0 uf
1860
1827 30000 w
SA-1263
1970
RED & WHITE
ORANGE
BLUE
GREEN
SA-1264
1970
BROWN
1829
1800 w
SA-1252
SA-1247
BLACK
ANTENNA
BROWN
GROUND
BLACK
1828
200 w
1981 VOLUME CONTROL
1772 20000 w
GREEN
BLUE
SA1249
YELLOW
RED & WHITE
1994
RED
1835 3000 w
1857
1834 2000 w
RED
WHITE
BLUE
RED
BLACK
YELLOW
GREEN
1999
BLACK
ORANGE
1914 10 w
1914 10 w
1983 300 w
1859
4. uf
8. uf
8. uf
1858
1973
WHITE
RED
RED
BLACK
YELLOW
YELLOW
RED & BLACK
RED & BLACK
1932
1832
OPERATED BY TONE CONTROL SHAFT
PEAK FREQUENCY 175 KC

HOWARD RADIO CO

Schematic Circuit

The schematic circuit of this receiver is shown in Dwg. No. 1479. **The antenna connects** to the set by means of the brown flexible lead shown in Fig. 1. **The ground also connects** to the set by means of a black flexible lead also shown in Fig. 1. **(In later models** binding posts are provided for antenna and ground.)

Inside the set, the antenna lead goes to a high inductance primary. The other end of this inductance grounds to the metal chassis. From the antenna end of this inductance a single turn of wire is coupled capacitively to the secondary of the radio frequency transformer. This coil is made in this manner so that the amplification will be equal throughout the frequency band. The secondary is tuned by means of a section of a three gang condenser. One end of this secondary connects to the control grid of the radio frequency amplifier tube while the other end is grounded.

The plate circuit of the radio frequency amplifier tube connects to +B voltage through a high impedance choke coil. The plate circuit of the r.f. amplifier is coupled to the secondary circuit by means of a single turn of wire in close physical relation to the grid end of the secondary coil which connects to the grid of the first detector or mixer tube. This single turn gives the necessary capacity coupling to produce uniform amplification over the broadcast frequency spectrum. The secondary coil of this transformer is tuned by a second section of the three gang variable tuning condenser. As with the secondary of the radio frequency amplifier transformer, one end of this coil is connected to the control grid of the first detector tube. The other end of this secondary coil is grounded to the chassis.

In order to introduce the oscillator voltage into the grid circuit of the mixer or first detector tube a small coil is wound in inductive relation to the secondary coil at the grounded end of the secondary. This small coupling coil is insulated from the secondary by means of a pyralin strip.

This small coil is a part of the oscillator inductance. Tuning of the oscillator is accomplished by means of the third section of the three gang variable tuning condenser, which has in series with it a fixed padding capacitor. This padding condenser has across it a small trimmer condenser. This condenser tunes the oscillator to an exact frequency at the low frequency end of the spectrum. One end of the oscillator coil is grounded through the 1st detector coupling coil while the other end connects to the control grid of the oscillator tube by means of a resistor P-1835 (Dwg. 1479). This resistor is used to stabilize the oscillator voltage over the frequency range. The plate circuit of the oscillator contains the conventional tickler coil, and is connected to the screen grid voltage tap for its plate voltage. The oscillator is of the biased type having a bias resistor connected from the cathode to ground. This resistor is by-passed by a section of the by-pass condenser block.

Voltage and Current Readings Howard Model "O"

Tube No.	Type	Position	A Volts	B Volts	Screen Volts	C Volts	Plate Current M.A.	Screen Current
1	551	1st R.F.	2.20	180	92	— 3.5	5.4	
2	227	Osc.	2.20	88		—10.0	2.8	
3	551	1st Det.	2.25	175	90	— 8.0	2.5	
4	551	I.F.	2.25	180	92	— 3.5	6.2	
5	227	2nd Det.	2.30	160		—17.0	0.6	
6	247	Audio	2.35	260	270	—21.0	25.0	4.2
7	280	Recitfier	4.60	350–350				

Line voltage, 115 volts. Volume Control, Full On.

(1) Alignment

IMPORTANT. The 175 kcs. oscillator must be accurately tuned to 175 kcs. If this precaution is not observed it will be impossible to align the oscillator to the rest of the set and the set will not operate correctly as the oscillator is designed for exact 175 kcs. operation.

This set is designed slightly different from the Model H superheterodyne in that the second intermediate frequency transformer is not overcoupled.

The following alignment procedure should be followed:

A Intermediate Transformer Alignment.

1 Remove grid cap from intermediate frequency amplifier tube and connect the control grid of this tube to a 2 or 3 megohm resistor Connect other end of this resistor to ground

2. Connect output of 175 kc. oscillator to control grid circuit of this tube.

3 Tune secondary of intermediate transformer for maximum deflection of output meter (Low voltage alternating current meter, 0-3 volts connected across voice coil of speaker.)

4. Tune primary of intermediate transformer for maximum deflection of output meter. **Retune secondary** to make sure tuning of primary has not affected the resonant point of secondary.

5. Replace grid cap as originally. Remove grid cap of the 1st detector and connect the 3 megohm resistor from control grid to ground. Connect the output of 175 kc. oscillator to control grid of 1st detector.

6. Tune secondary of 1st intermediate frequency transformer to 175 as shown by maximum deflection of output meter.

7. Now tune primary of this transformer to 175 as indicated by maximum deflection of output meter. Retune secondary to see it has not been affected by primary tuning.

8. Retune second intermediate frequency transformer to make sure it is exactly tuned at 175 kc. as there may be some change in tuning when the 1st detector is connected in the circuit.

No. 1 Radio Frequency Amplifier Alignment.

1. After aligning IF transformers, replace 1st detector grid cap. Unsolder the wire connecting the plate of the 1st detector tube to the IF transformer. Remove oscillator tube and 2nd detector tubes. Connect the plate terminal of 1st detector tube to the plate terminal of the second detector socket.

2. Rotate the condenser in clockwise direction as far as they will go. Make sure that when the rotors of the condenser are all in that the starting mark on the dial aligns with the pointers on the escutcheon. This starting mark is the line just beyond the 550 kc. line on the dial. (See Fig. 1.)

3. Set test oscillator (RF Generator) which tunes over broadcast band to 1400 kc. Connect antenna and ground wires to oscillator. Tune set to 1400, as shown on dial. Adjust trimmer on first and third variable condensers for maximum deflection of output meter.

4. Now tune oscillator 1000 kcs. and tune set to 1000 kcs. as shown on the dial. Adjust for maximum deflection on output meter by moving serated plates on rotor of tuning condensers in or out as the case may be. **Do not adjust** trimmer condensers at this frequency.

5. Repeat process in paragraph 4 at 600 kcs.

6. Remove wire soldered from 1st detector plate terminal to second detector plate terminal and resolder wire from intermediate frequency transformer to plate terminal of 1st detector as originally connected.

Oscillator Alignment.

1. Set test oscillator to 1400 kcs. Tune set to 1400 kcs. and adjust oscillator or second (middle) tuning condenser trimmer for maximum output as shown on the output meter. (Oscillator trimmer condenser second hole of the three in line.)

2. Set test oscillator to 600 kcs. Tune set to 600 kcs. Adjust oscillator padding condenser (single hole to left of three holes in line) for maximum deflection of output meter.

3. Reset test oscillator again to 1400 kcs. and retune set to 1400 kcs. Readjust oscillator trimmer if necessary. This adjustment is very seldom necessary if the other adjustments are made correctly.

4. Now tune test oscillator to 1000 kcs. and tune set to 1000 kcs. Try adjusting antenna trimmer condenser to determine whether the oscillator aligns at this frequency. If the antenna trimmer must increase in capacity to give maximum deflection of output meter the oscillator tuning condenser serated plates should be moved out. If the antenna trimmer condenser is decreased in capacity the oscillator tuning condenser serated plates should be bent in towards the stator plates. It must be remembered that a small capacity change in the oscillator circuit means a tremendous frequency change, and this adjustment must be made very carefully.

5. Now adjust test oscillator to 1400 kcs. and retune set at 1400 kcs. to make sure that the antenna trimmer condenser has been reset to its original position after Test 4 has been made.

In making the above tests it is necessary before making each test to replace all shielding.

The foregoing tests are of a delicate nature, and it is essential that each one be made carefully before going to the next test.

MODEL 10
(T)
Schematic

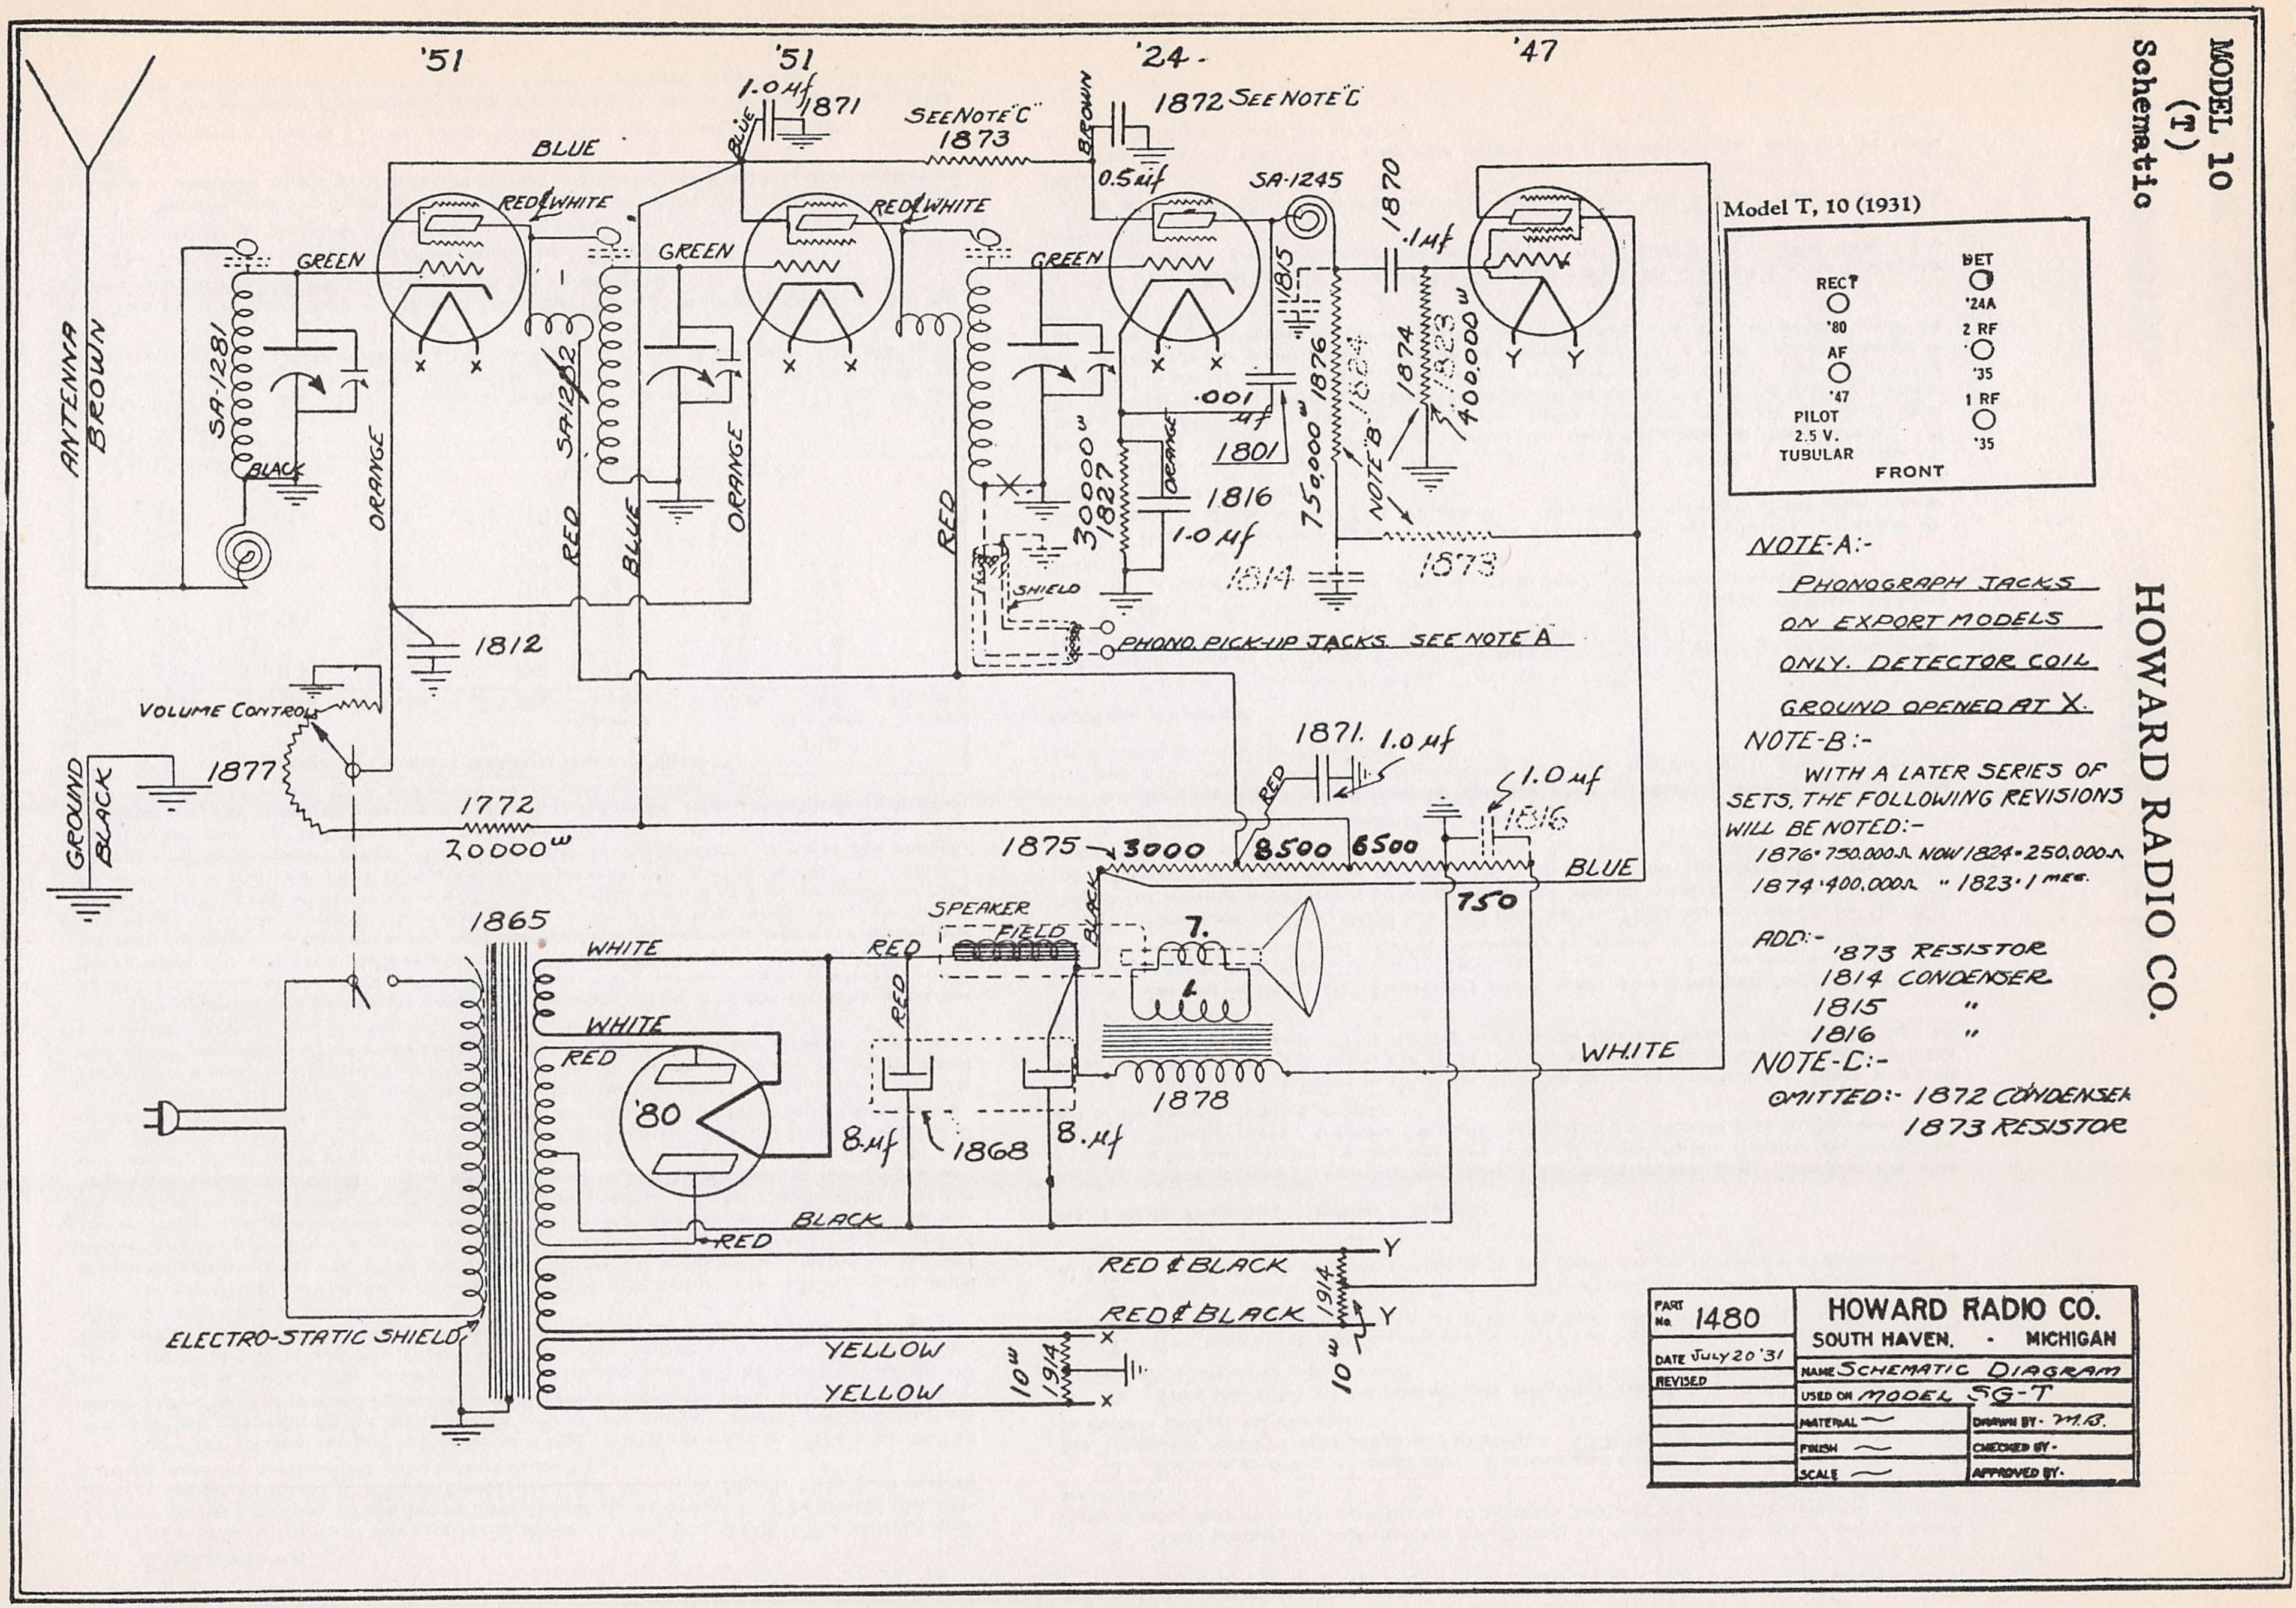
'51
'51
'24-
'47
ANTENNA
BROWN
SA-1281
BLACK
GREEN
ORANGE
BLUE
RED & WHITE
SA-1282
RED
BLUE
GREEN
ORANGE
1.0 µf
1871
SEE NOTE "C"
1873
BROWN
1872 SEE NOTE "C"
0.5 µf
SA-1245
1815
1870
.1 µf
GREEN
.001 µf
1801
1876
750,000 ω
NOTE "B"
1824
1874
1823
400,000 ω
30000 ω
1827
ORANGE
1816
1.0 µf
1814
1873
SHIELD
PHONO. PICK-UP JACKS SEE NOTE "A"
1812
VOLUME CONTROL
1877
GROUND
BLACK
1772
20000 ω
1871. 1.0 µf
RED
1.0 µf
1816
1875
3000
8500
6500
750
BLUE
1865
WHITE
WHITE
RED
'80
SPEAKER
FIELD
BLACK
RED
RED
7.
1878
8. µf
1868
8. µf
WHITE
BLACK
RED
RED & BLACK
RED & BLACK
1914
10 ω
Y
Y
YELLOW
YELLOW
1914
10 ω
X
X
ELECTRO-STATIC SHIELD
Model T, 10 (1931)
RECT
'80
AF
'47
PILOT
2.5 V.
TUBULAR
DET
'24A
2 RF
'35
1 RF
'35
FRONT

HOWARD RADIO CO.

NOTE-A:-
PHONOGRAPH JACKS
ON EXPORT MODELS
ONLY. DETECTOR COIL
GROUND OPENED AT X.

NOTE-B:-
WITH A LATER SERIES OF SETS, THE FOLLOWING REVISIONS WILL BE NOTED:-
1876 • 750.000 Ω NOW 1824 • 250,000 Ω
1874 • 400.000 Ω " 1823 • 1 MEG.

ADD:-
1873 RESISTOR
1814 CONDENSER
1815 "
1816 "

NOTE-C:-
OMITTED:- 1872 CONDENSER
1873 RESISTOR

PART No. 1480	HOWARD RADIO CO. SOUTH HAVEN. · MICHIGAN
DATE July 20 '31	NAME SCHEMATIC DIAGRAM
REVISED	USED ON MODEL SG-T
	MATERIAL ~ · DRAWN BY · M.B.
	FINISH ~ · CHECKED BY ·
	SCALE ~ · APPROVED BY ·

HOWARD RADIO CO.

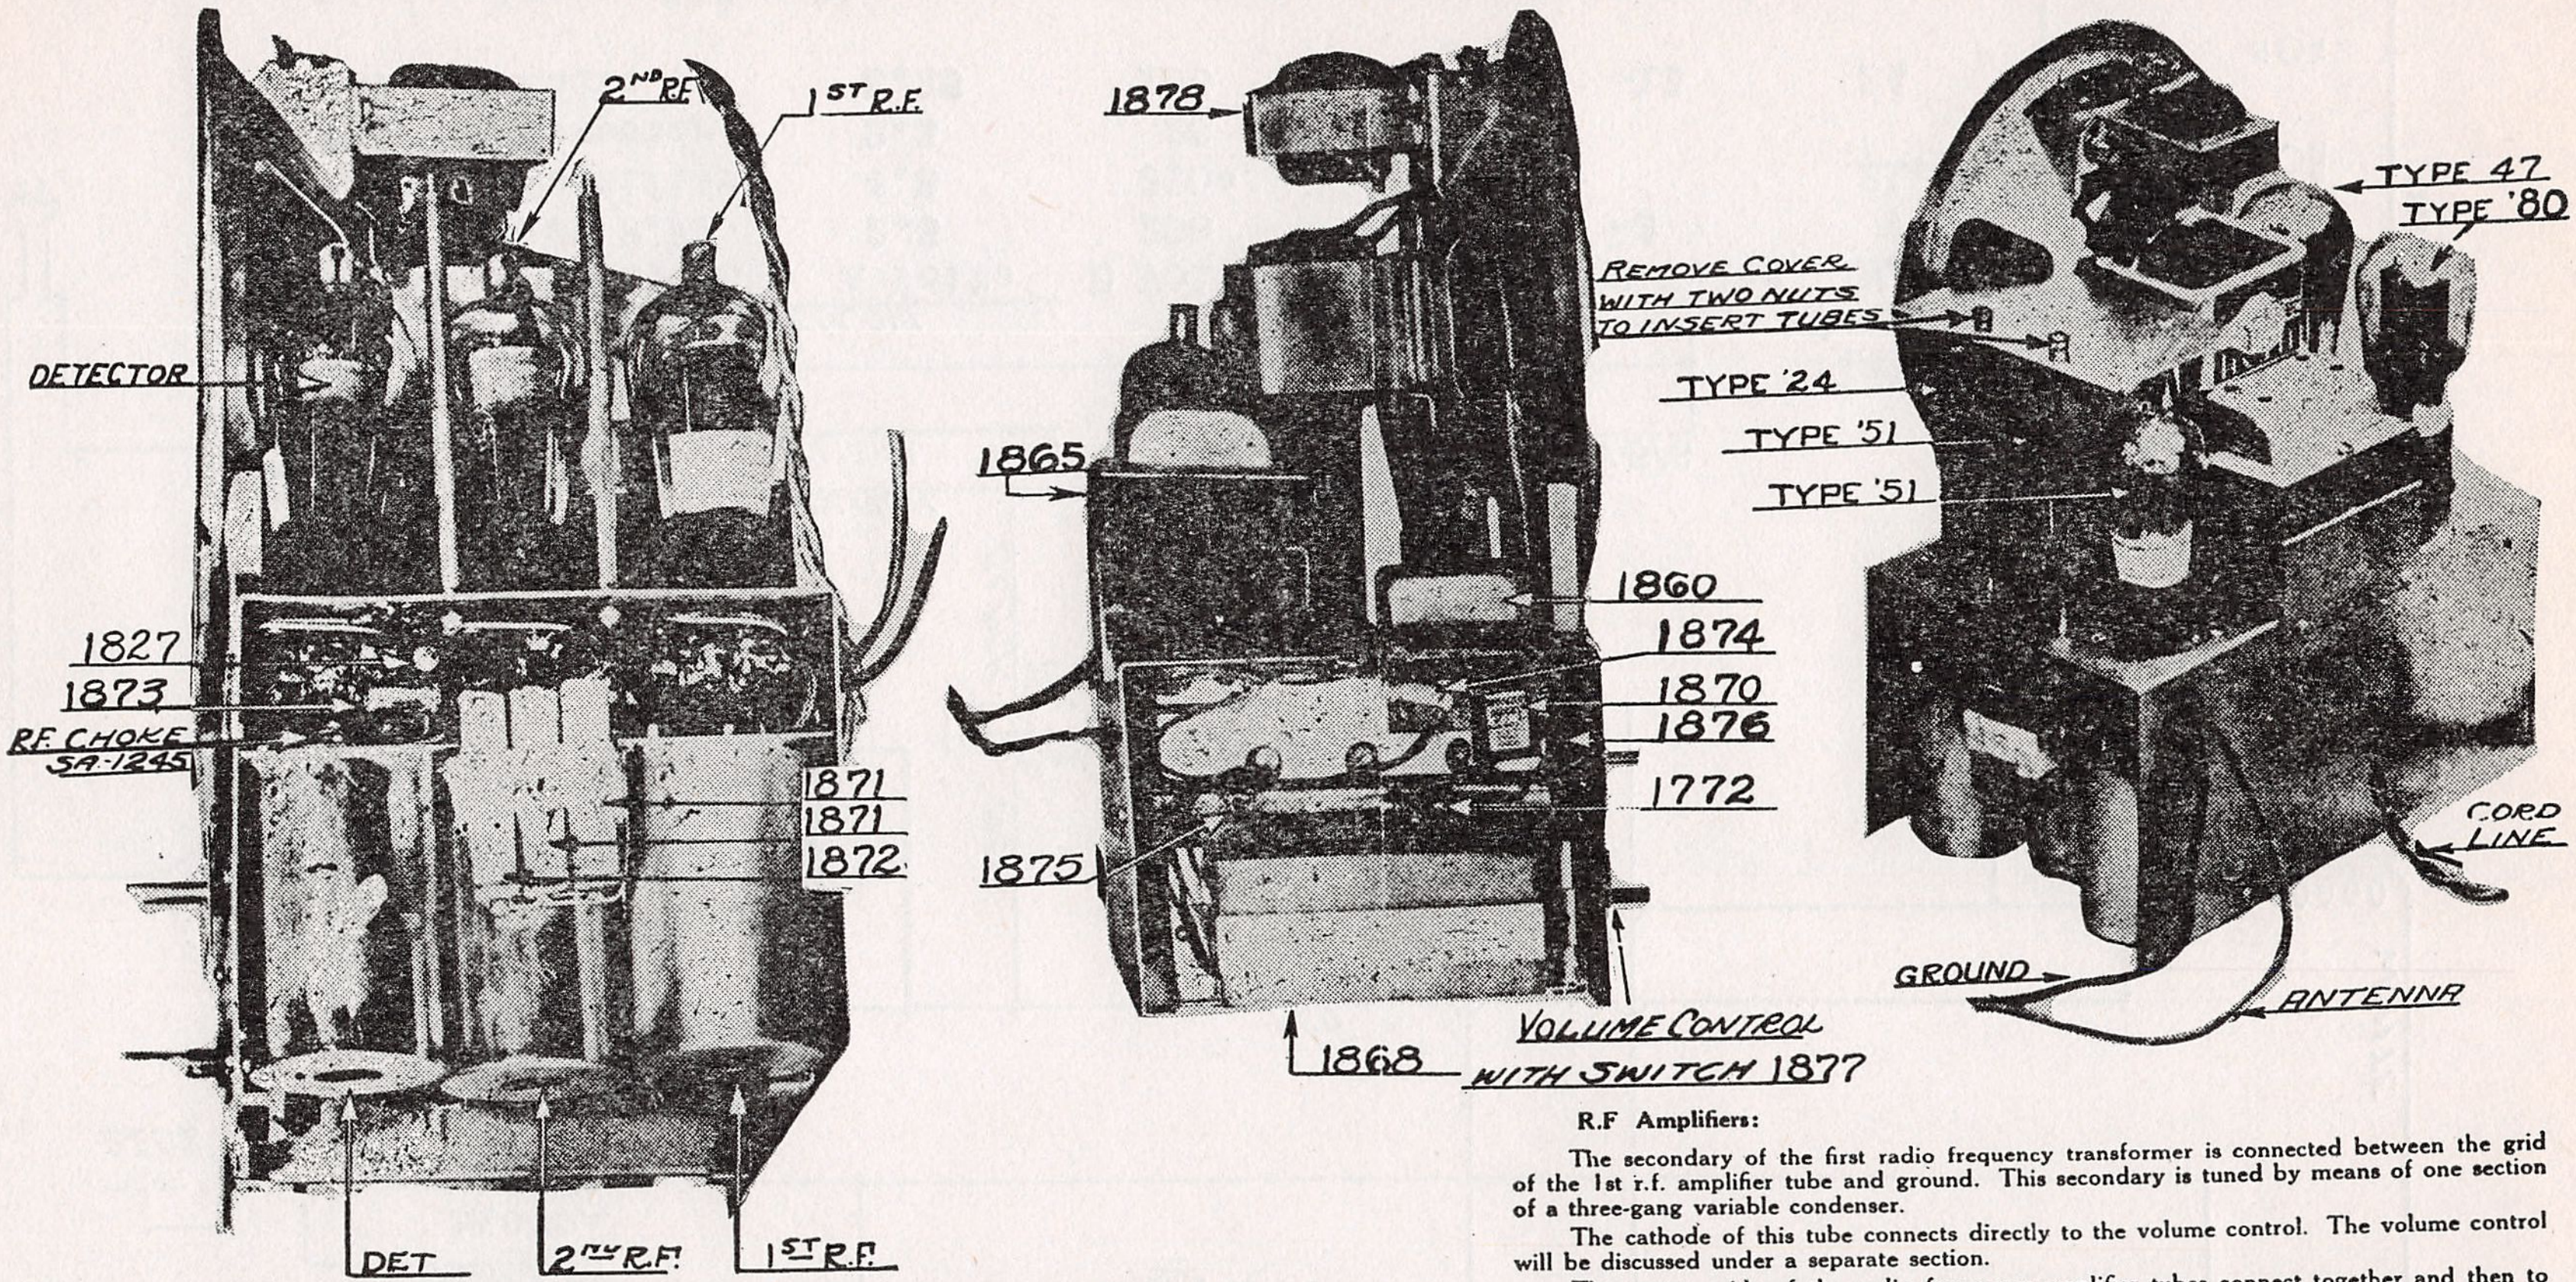

1323	Condenser, variable tuning condenser, 3 gang
1325	Tuning mechanism (complete with scale) . . .
1562	Line cord, 8½ ft., with H. & H. Bakelite plug.
1702	Socket type, No. 280 . . . .
1703	Socket type, No. 224 . . . .
1705	Socket type, No. 551 . . . .
1772	Resistor 20,000 ohms ½ watt . . . .
1801	Condenser .001 mfd. Fixed mica . . . .
1812	Condenser .5 mfd. . . . .
1827	Resistance 30,000 ohms, ½ watt . . . .
1847	Socket type, No. 247 . . . .
1816	Consender 1.0 mfd. . . . .
1865	Power Transformer, No. H.R. 55 . . . .
1868	Condenser 16 mfd. (2-8 mfd. sections) . . .
1870	Condenser 1 mfd. Sprague Type G . .
1871	Condenser 1.0 mfd. Elkon 200 volt rating .
1872	Condenser .5 mfd. Elkon 200 volt rating . .
1873	Resistance 100,000 ohms, ½ watt . . . .
1874	Resistance 400,000 ohms, ½ watt . . . . . .
1875	Resistor "B" stick . . . .
1876	Resistor 750,000 ohms, ½ watt . . . .
1877	Volume Control (on-off switch included) . .
1914	Resistor 10 ohms center tapped type 7E-10.

Sub-Assembly Parts List

SA-1245	R.F. Choke coil . . . .
SA-1281	Radio Frequency Transformer (Antenna) .
SA-1282	Radio Frequency Transformer (Interstage)

R.F Amplifiers:

The secondary of the first radio frequency transformer is connected between the grid of the 1st r.f. amplifier tube and ground. This secondary is tuned by means of one section of a three-gang variable condenser.

The cathode of this tube connects directly to the volume control. The volume control will be discussed under a separate section.

The screen grids of the radio frequency amplifier tubes connect together and then to a point on the voltage divider resistor which applies the correct operating potential on the screens. In order to prevent common coupling impedance these screens are by-passed to ground by means of a condenser. This eliminates a possibility of oscillation from this source.

Connected between the source of B voltage and the plate of the first radio frequency amplifier tube is a high inductance choke coil. This coil is located in the top of the second radio frequency transformer but in physical relation to the secondary of this transformer so that there is no electromagnetic coupling. Connected to the plate end of this choke is a wire which is in close physical relation to the grid end of the secondary of this transformer. As in the case of the 1st r.f. transformer, this turn gives a small capacity coupling. The combination of the choke and small capacity formed by the single turn of wire gives a frequency characteristic which is substantially flat over the frequency range.

The secondary of the second transformer is similar to the one used in the 1st r.f. transformer and is tuned by means of the second section of the variable tuning condenser. It is connected between grid and ground of the second radio frequency amplifier tube.

The cathode and screen of this tube are connected the same as the first radio frequency amplifier and need no further description.

The third radio frequency transformer is a duplicate of the second radio frequency transformer and therefore, needs no description. On export models, the ground lead of this transformer is connected to a phonograph jack, and the other terminal of the phonograph jack is connected to ground. In the radio position these jacks are shorted by means of a switch. In the phono. position, this switch is opened and the pick-up is plugged into the jacks. It is necessary to tune the radio set to some point on the dial where there is no signals from a broadcast station coming in, otherwise the radio signals will feed through and interfere with the phono music.

CABLE - NELSON
MODEL D-4 CHASSIS

HOWARD RADIO CO

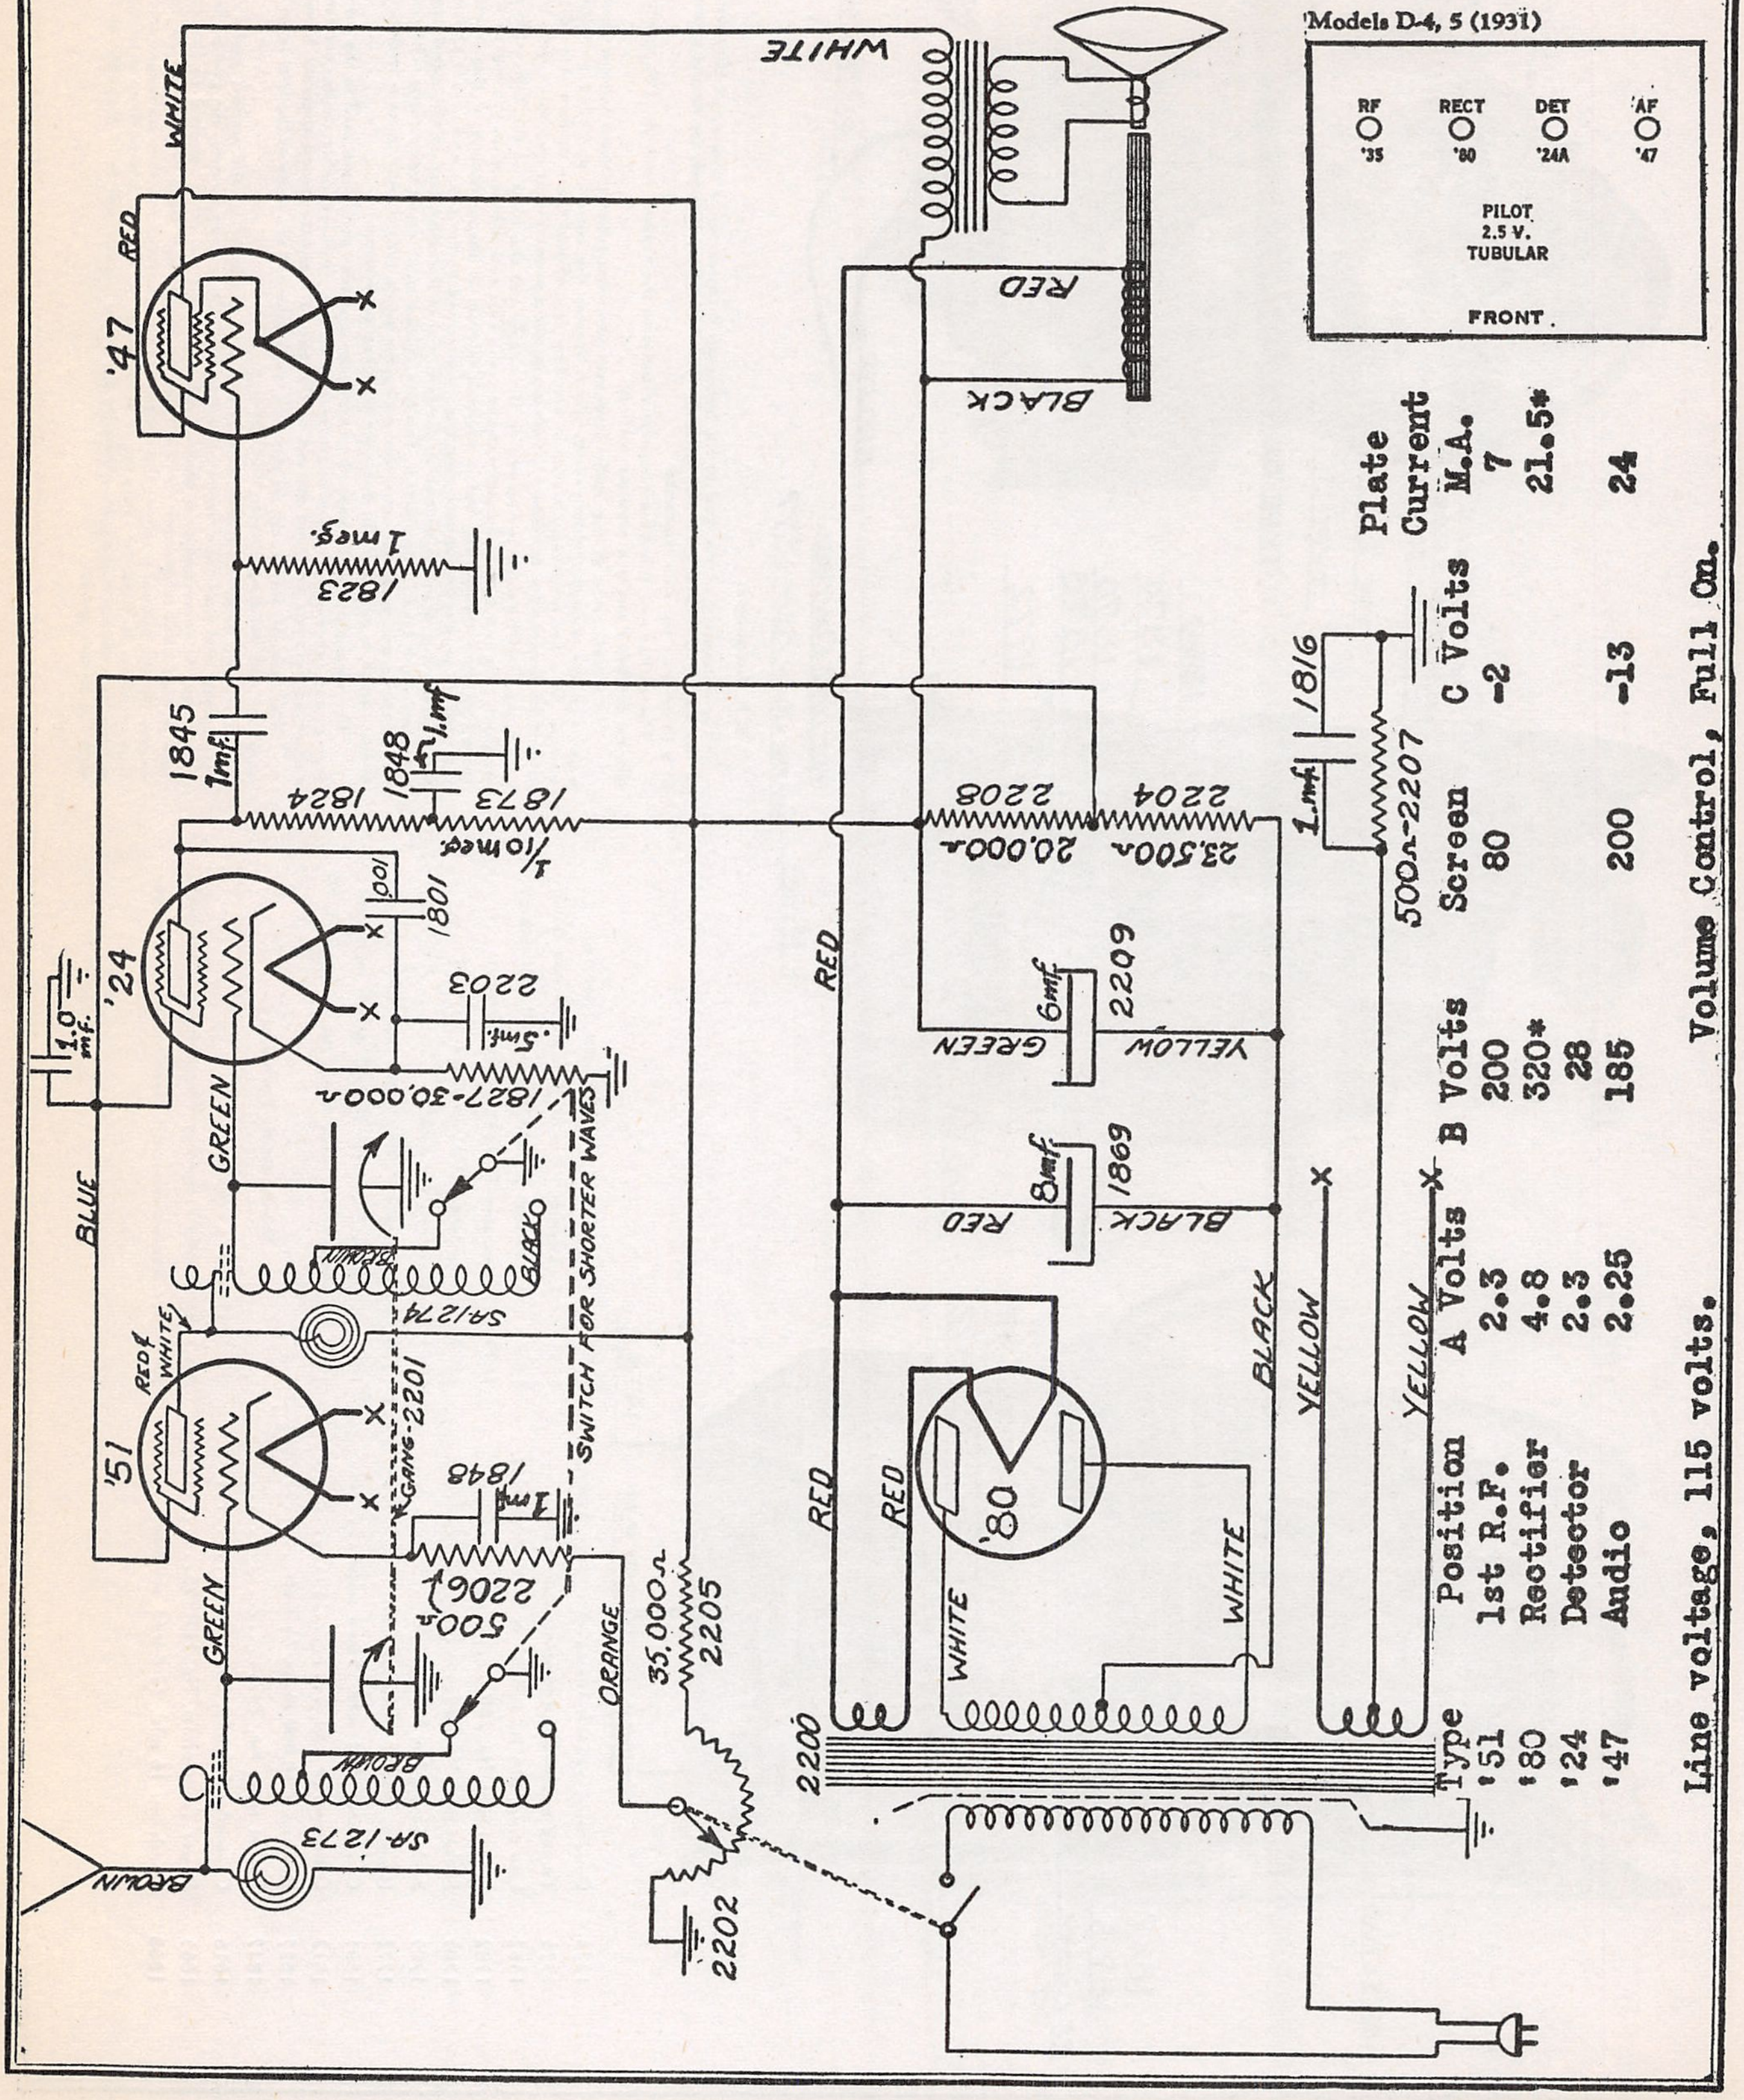
Models D-4, 5 (1931)
RF '35
RECT '80
DET '24A
AF '47
PILOT 2.5 V. TUBULAR
FRONT.
WHITE
RED
BLACK
'47
1 meg.
1823
1845 1mf.
1824
1848 .1mf.
1873 1/10 meg.
2208 20,000Ω
2204 23,500Ω
1.mf. 1816
500Ω-2207
'24
1.0 mf.
.001 1801
2203 .5mf.
1827-30,000Ω
GREEN
BLUE
6mf 2209 GREEN YELLOW
8mf 1869 RED BLACK
BROWN
BLACK
SA1274
SWITCH FOR SHORTER WAVES
RED & WHITE
'51
GANG-2201
1848 .1mf.
2206 500Ω
ORANGE
35,000Ω 2205
2202
RED
WHITE
'80
BLACK
YELLOW
2200
SA-1273
BROWN

Type	Position	A Volts	B Volts	Screen	C Volts	Plate Current M.A.
'51	1st R.F.	2.3	200	80	-2	7
'80	Rectifier	4.8	320*			21.5*
'24	Detector	2.3	28			
'47	Audio	2.25	185	200	-13	24

Line voltage, 115 volts. Volume Control, Full On.

HOWARD RADIO CO.

MODEL O
Chassis
Top-Bottom View

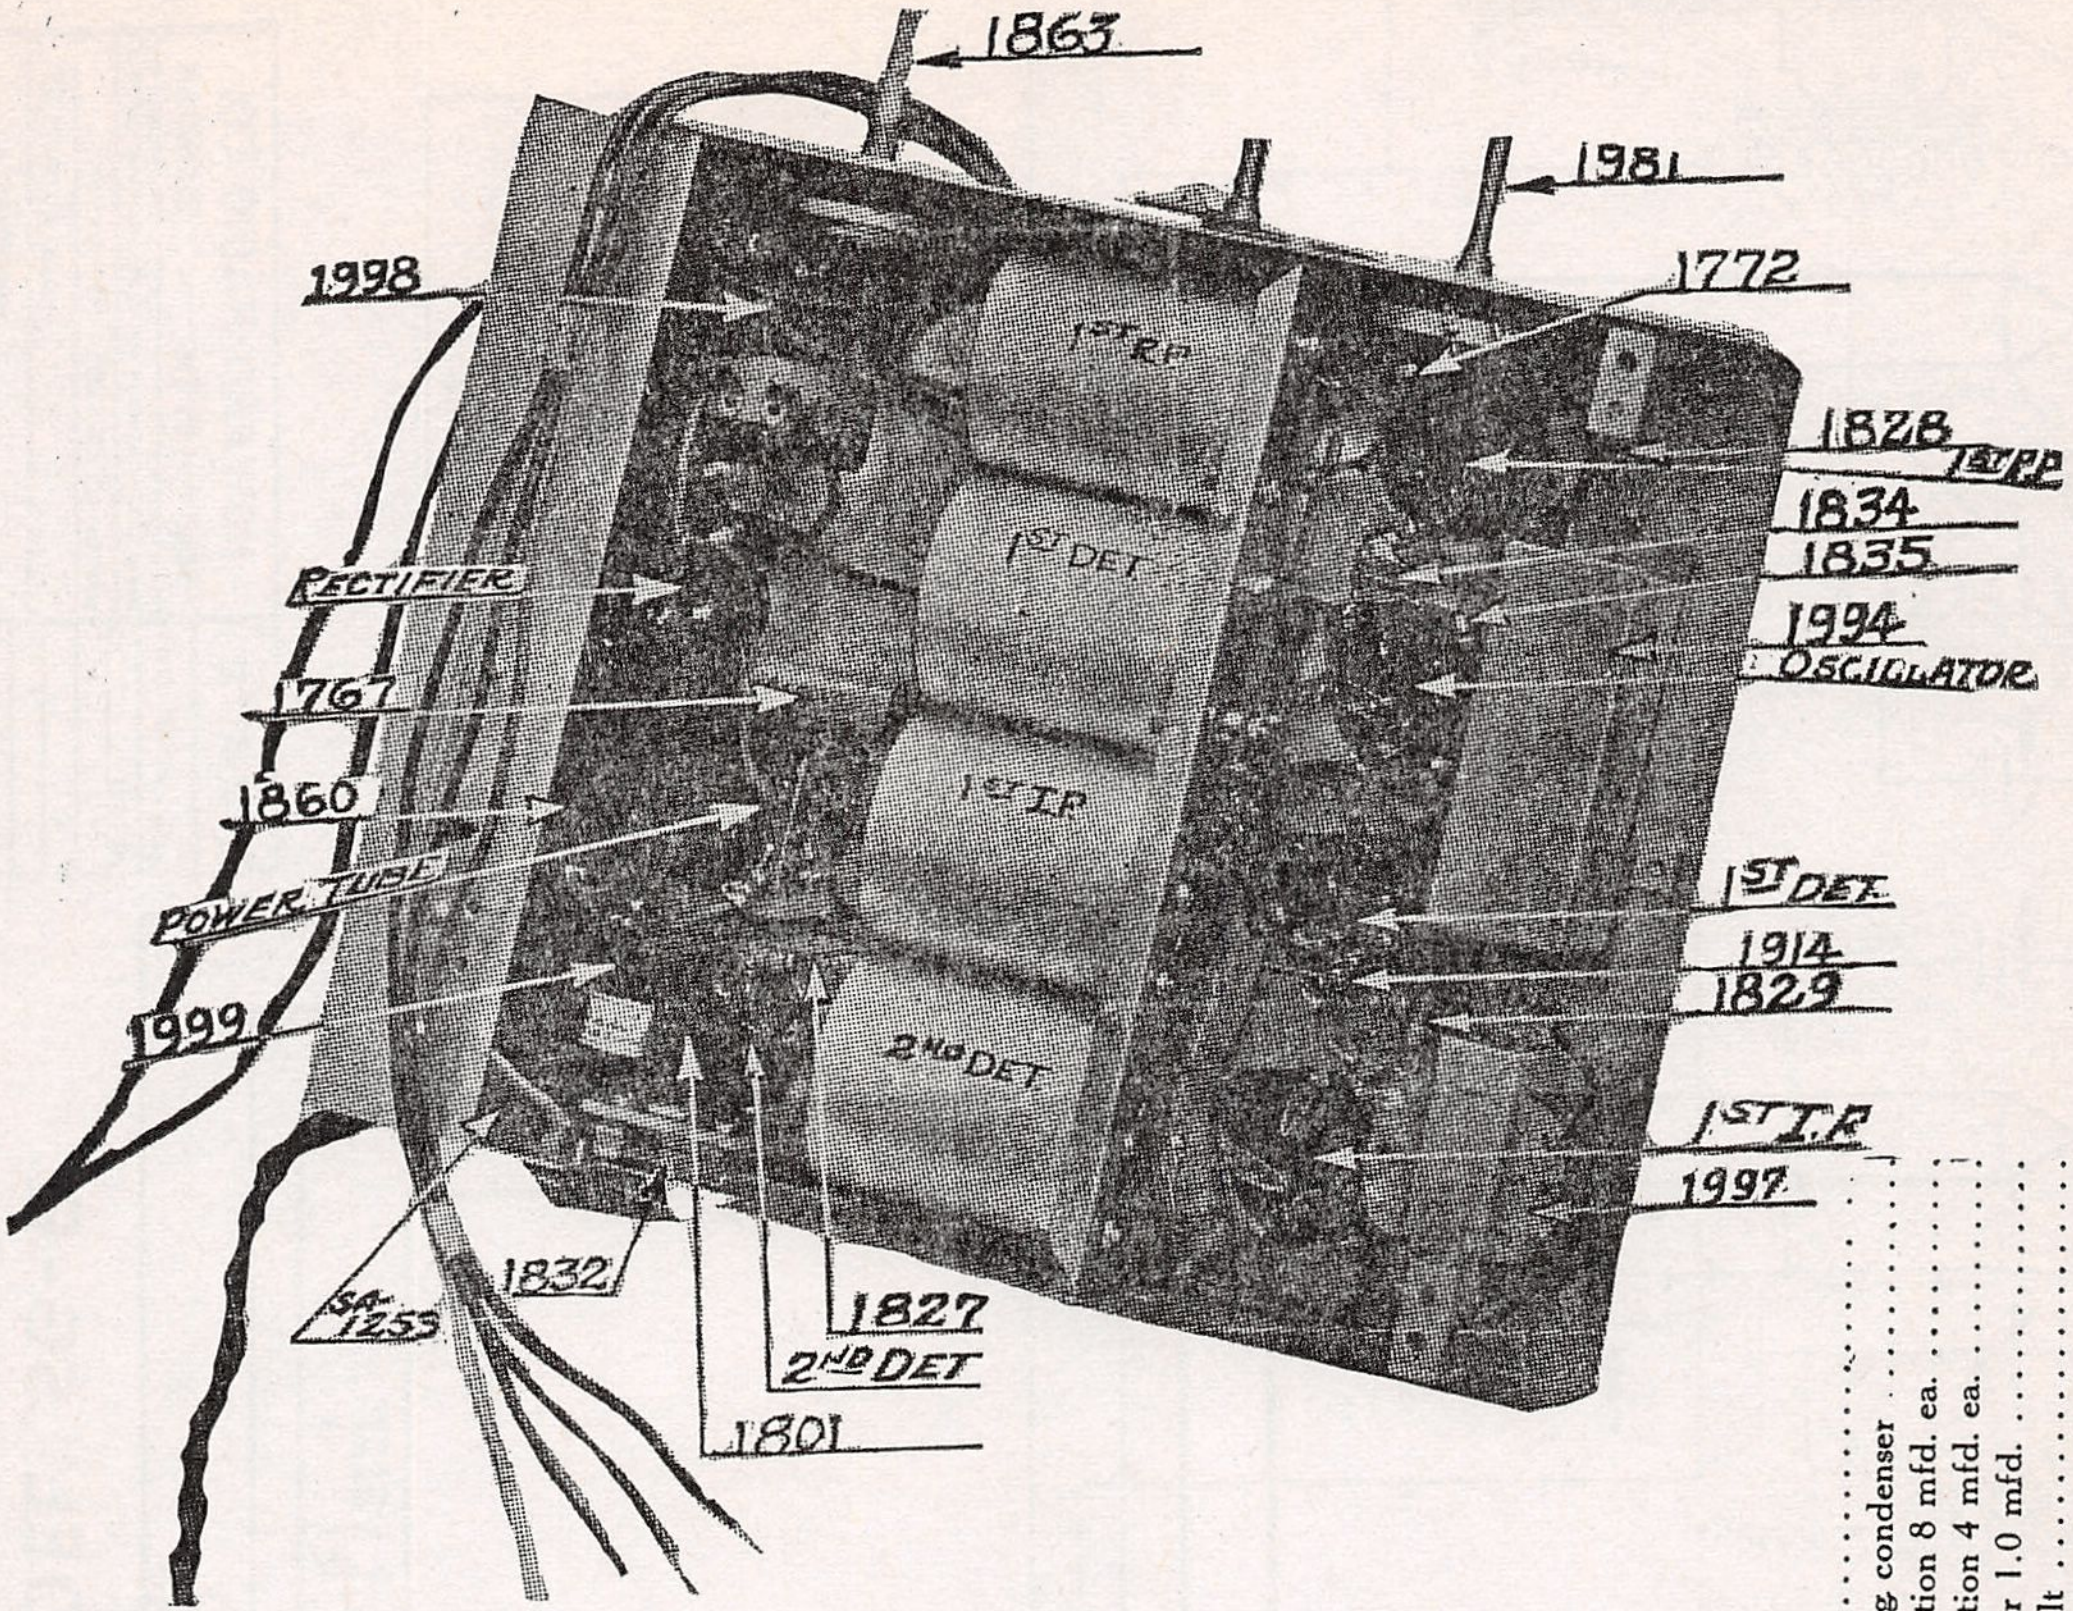
1863
1981
1998
1772
1ST R.F.
1828 1ST R.F.
1834
1835
1ST DET
RECTIFIER
1994
OSCILLATOR
1767
1ST I.F.
1860
POWER TUBE
1ST DET.
1914
1829
1999
2ND DET
1ST I.F.
1997
SA-1253
1832
1827
2ND DET
1801

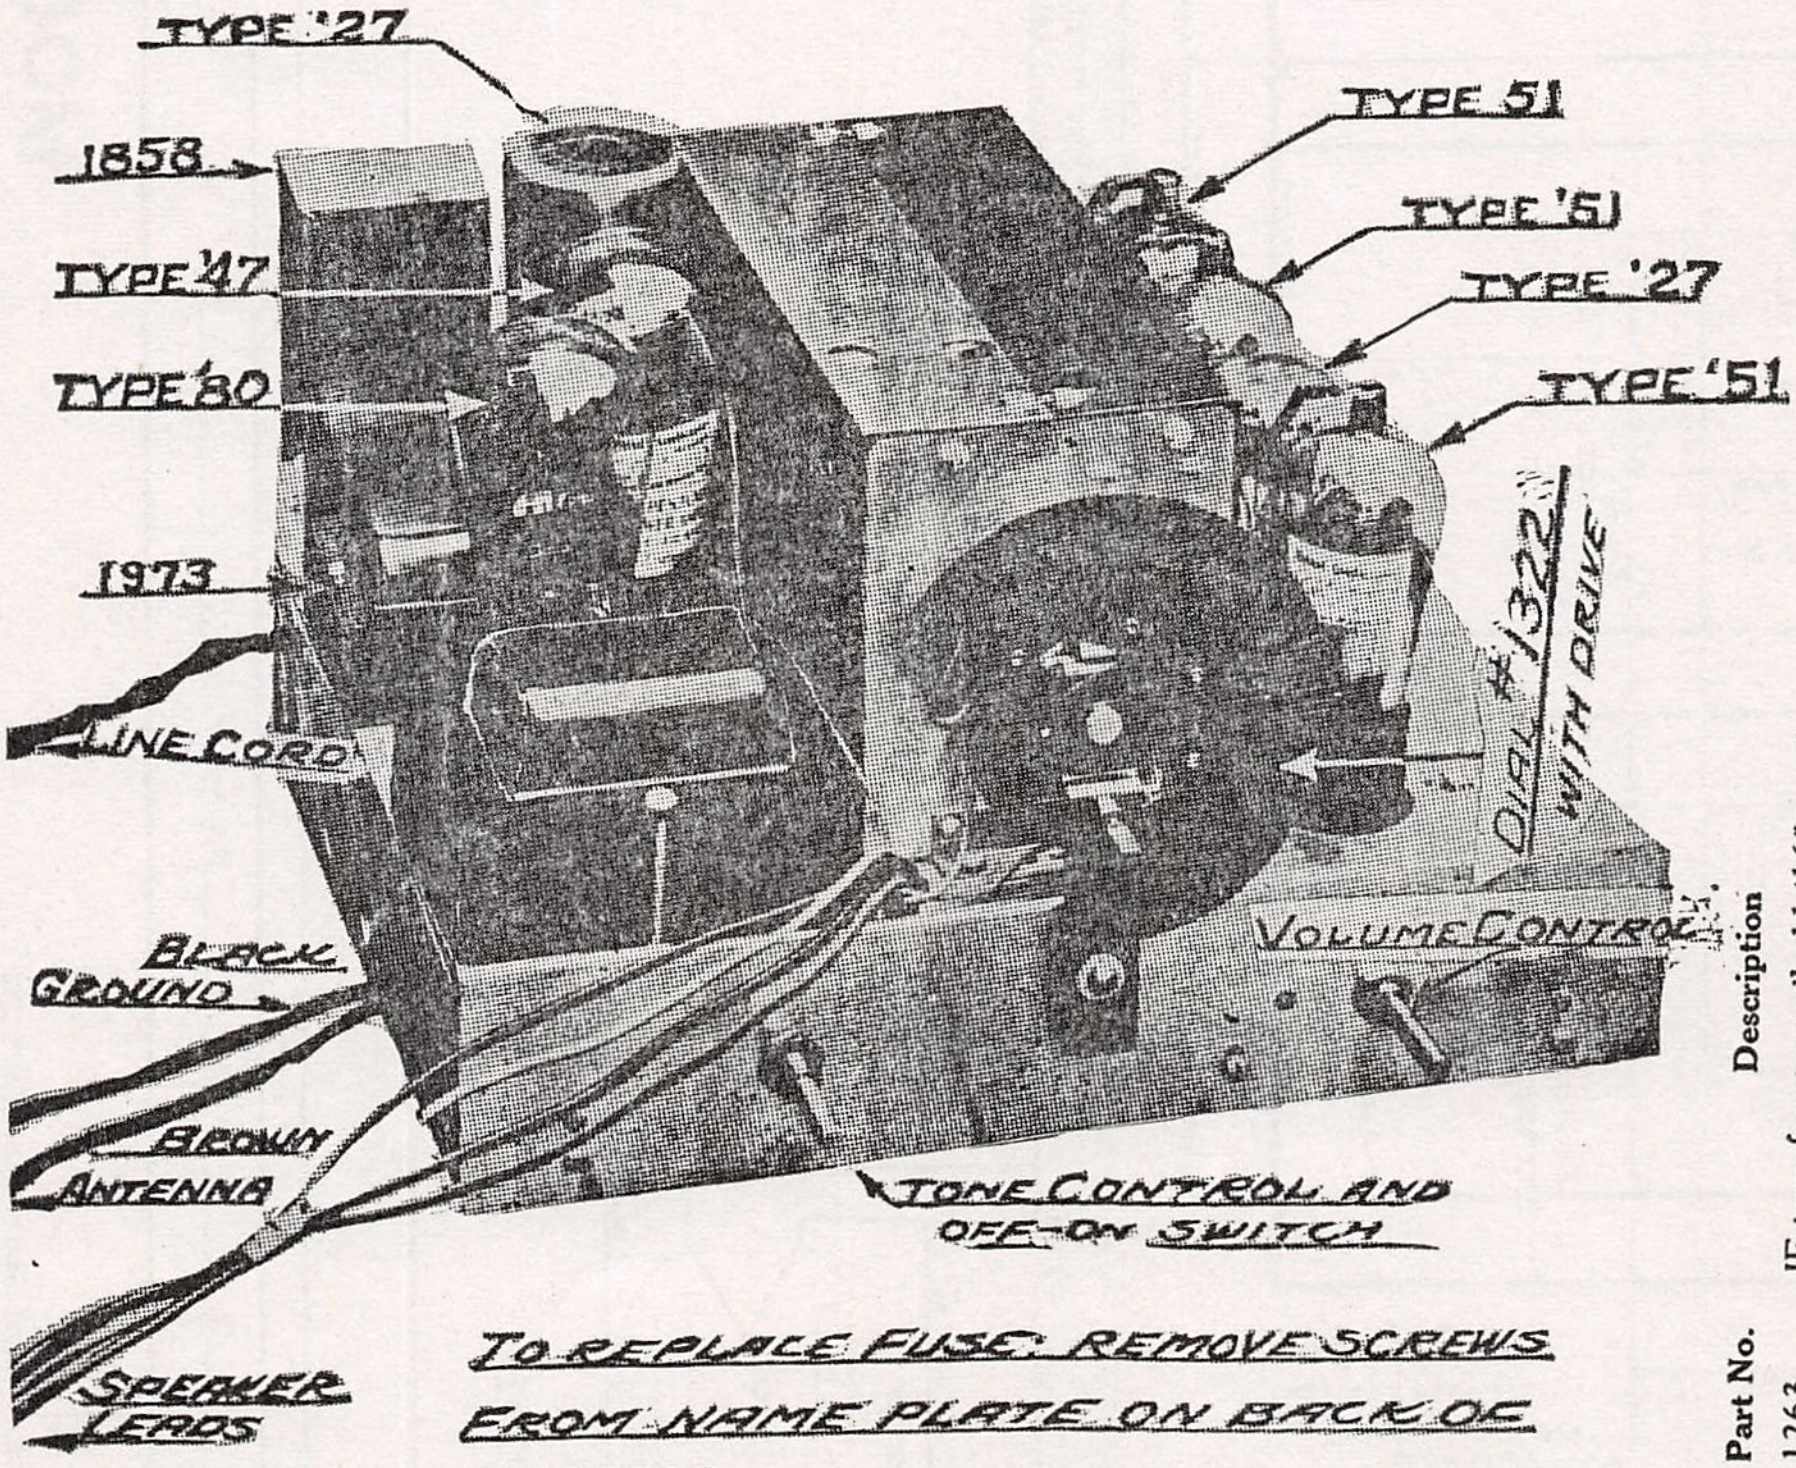
TYPE '27
TYPE 51
1858
TYPE '51
TYPE '47
TYPE '27
TYPE '80
TYPE '51
1973
DIAL #1322 WITH DRIVE
LINE CORD
VOLUME CONTROL
BLACK GROUND
BROWN ANTENNA
TONE CONTROL AND OFF-ON SWITCH
SPEAKER LEADS

TO REPLACE FUSE: REMOVE SCREWS FROM NAME PLATE ON BACK OF CHASSIS.

Part No.	Description
1263	IF transformer coils 11/16" spacing
1264	IF transformer coils 1" spacing
1318	Variable tuning condenser
1322	Dial drive mechanism and scale No. 2042
562	AC line cord and plugs
1702	Socket No. 280
1704	Socket No. 227
1705	Socket No. 551
1767	Condenser .01 mfd.
1772	Resistor, 20,000 ohms, ½ watt
1801	Condenser .001 mfd.
1827	Resistor 30,000 ohms ½ watt
1828	Resistor 200 ohms ½ watt
1829	Resistor 1800 ohms ½ watt
1832	Fuse 2 amp. A.G.
1834	Resistor 2,000 ohms ½ watt
1835	Resistor 3,000 ohms 1/3 watt
1847	Socket No. 247
1857	Oscillator padding condenser
1858	Filter cond. 2 section 8 mfd. ea.
1859	Filter cond. 1 section 4 mfd. ea.
1860	By-pass condenser 1.0 mfd.
1901	Pilot light 2.5 volt
1914	Resistor 10 ohm center-tapped
1932	Power transformer
1863	Tone control and power switch
1970	IF transformer tuning condenser (variators)
1973	Choke coil, power pack
1981	Volume control
1983	Resistor 300 ohm, 5 watt
1994	By-pass condenser block
1997	Audio transformer
1999	Resistor (voltage divider)

Sub-Assemblies

SA-1247	Antenna radio frequency transformer
SA-1249	Oscillator tuning coil
SA-1252	Radio frequency transformer
SA-1253	Detector radio frequency choke coil

MODEL Miniature
(SG-B)
Schematic

HOWARD RADIO CO.

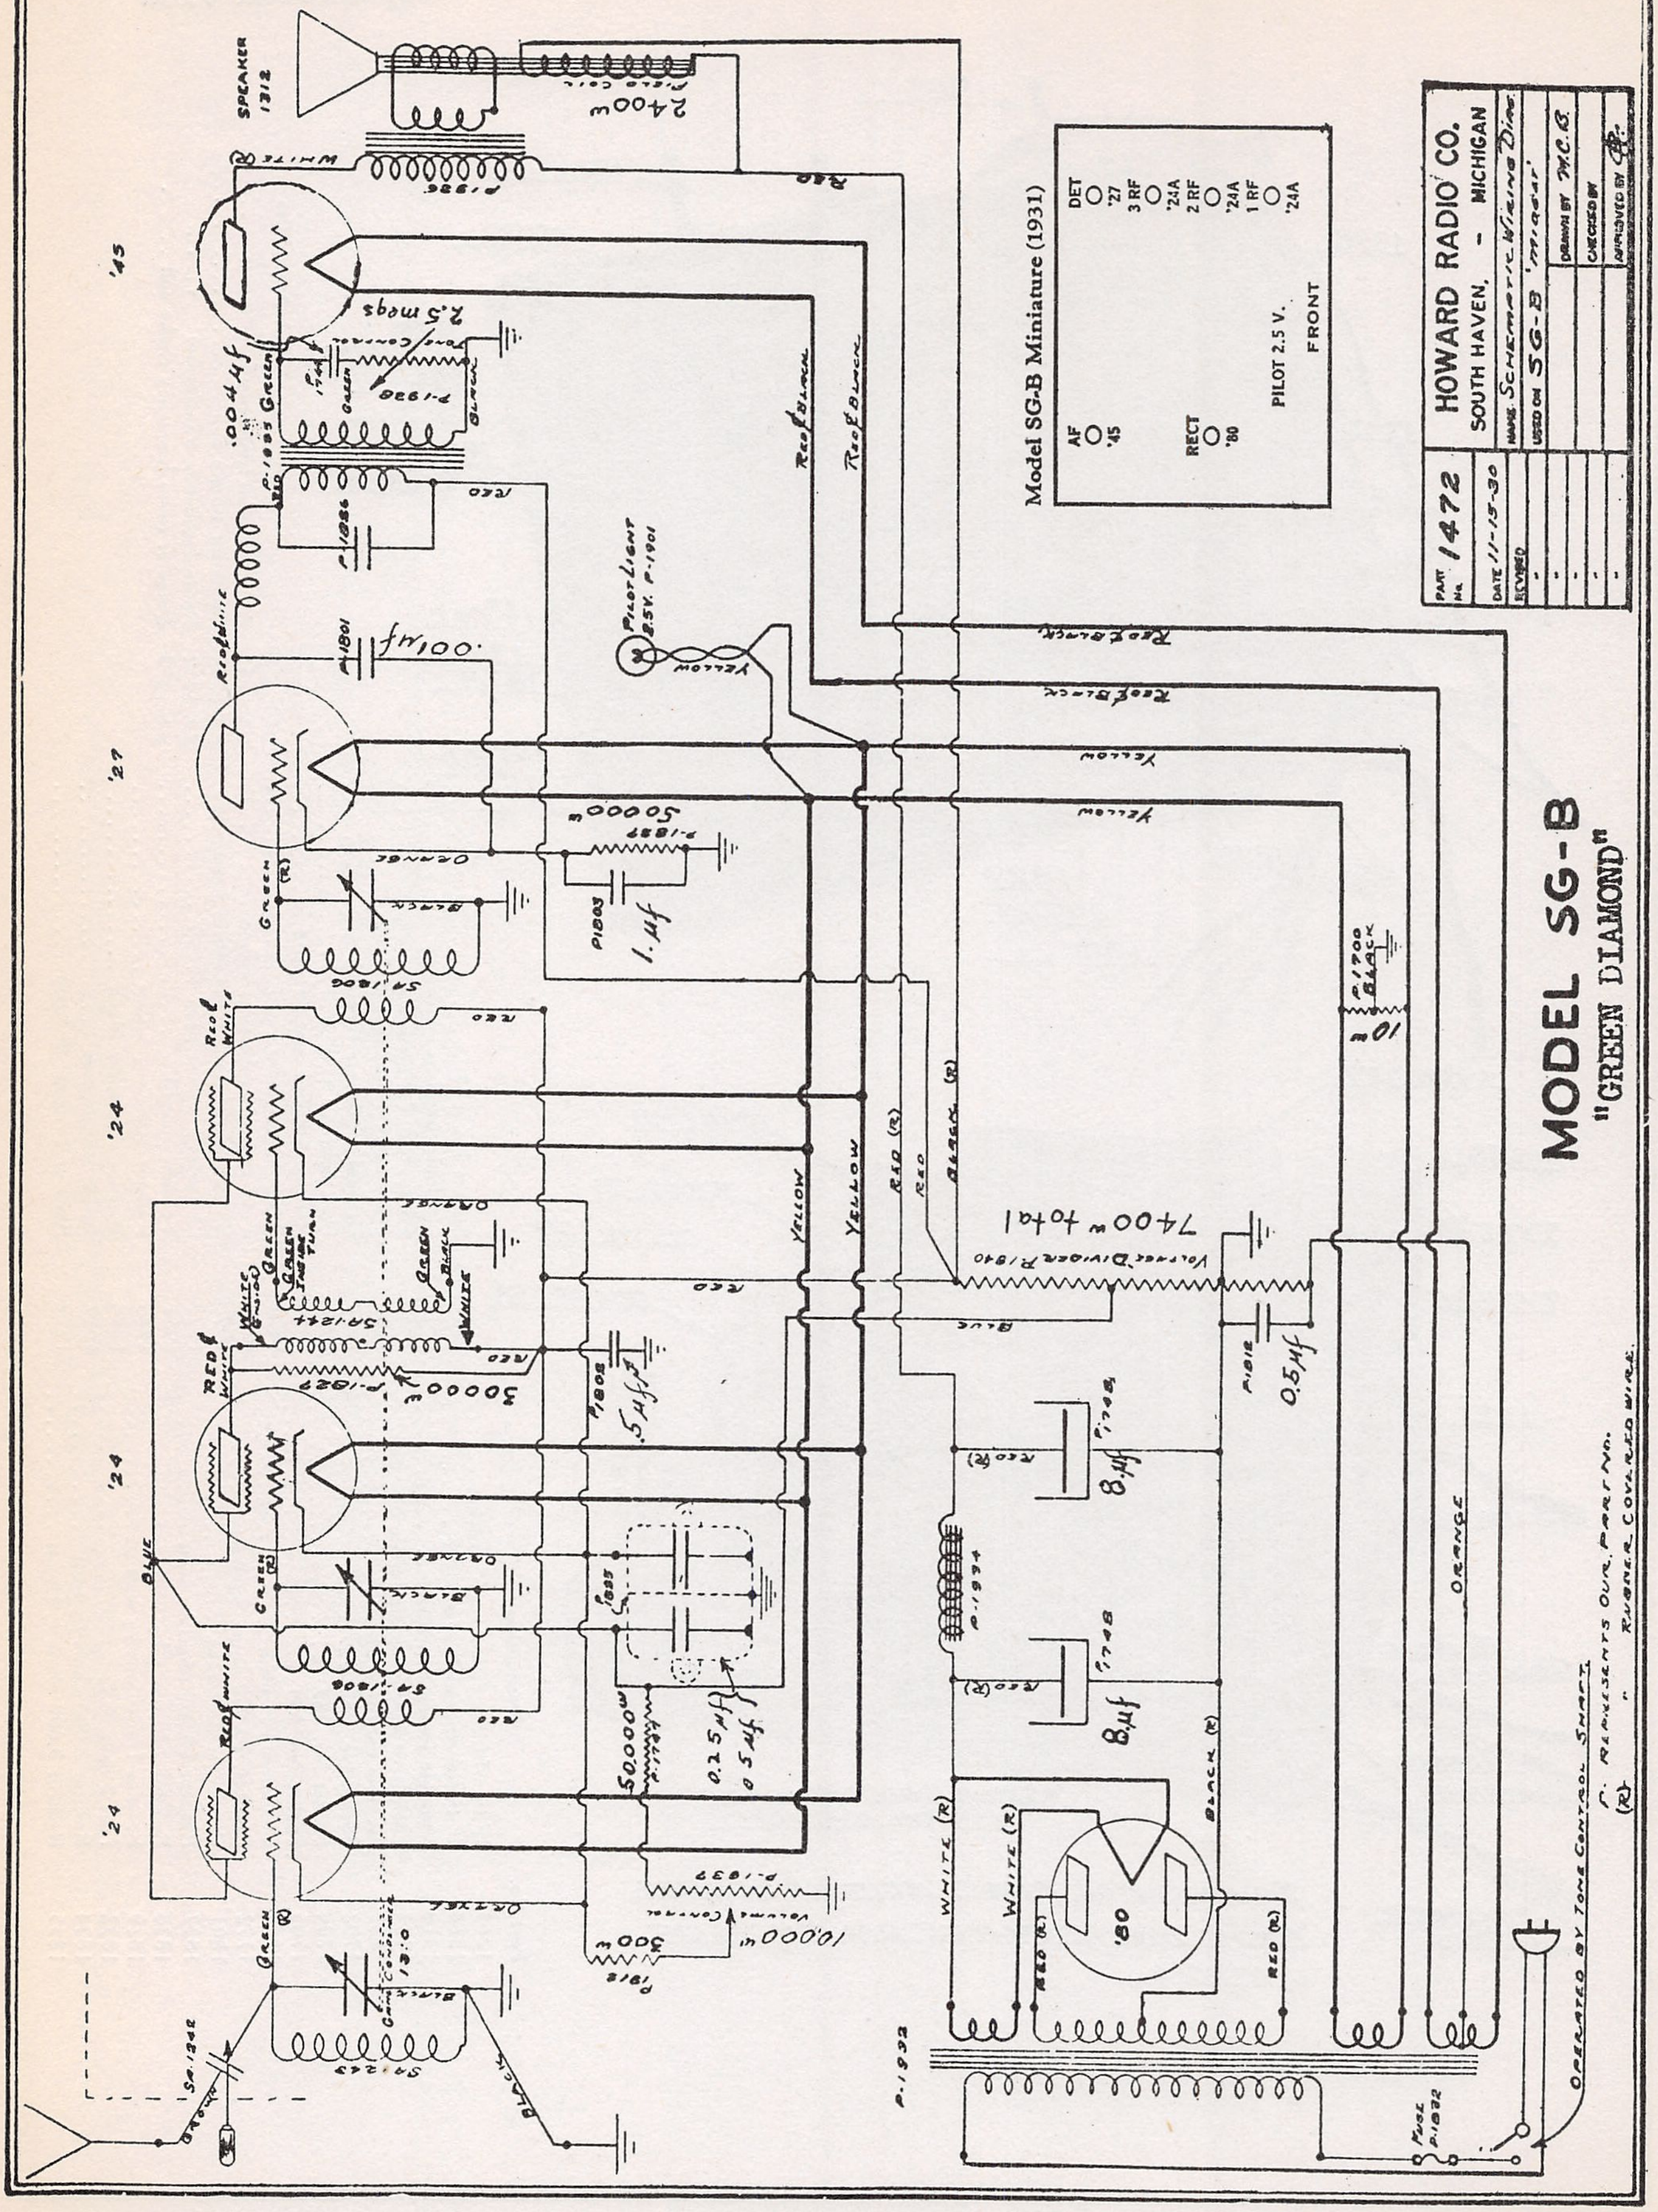
MODEL SG-B
"GREEN DIAMOND"
HOWARD RADIO CO.
SOUTH HAVEN, - MICHIGAN
NAME Schematic Wiring Diag.
USED ON SG-B 'Midget'
DRAWN BY M.C.B.
CHECKED BY
APPROVED BY
PART No. 1472
DATE 11-15-30
REVISED
Model SG-B Miniature (1931)
DET '27
3 RF '24A
2 RF '24A
1 RF '24A
AF '45
RECT '80
PILOT 2.5 V.
FRONT
SPEAKER 1312
FIELD COIL 2400w
P-1926
'45
'27
'24
'24
'24
'80
2.5 megs
.004 μf
.001 μf
50000w
1. μf
7400w total
VOLTAGE DIVIDER P-1840
0.5 μf
8. μf
8. μf
.5 μf
0.25 μf
0.5 μf
30000w
50000w
10,000w
300w
PILOT LIGHT 2.5V. P-1901
FUSE P-1832
P-1932
P-1934
SA-1806
SA-1244
SA-1243
SA-1242
VOLUME CONTROL
TONE CONTROL
RED
BLACK
YELLOW
ORANGE
GREEN
WHITE
BLUE
RED & BLACK
OPERATED BY TONE CONTROL SHAFT.
P. REPRESENTS OUR PART NO.
(R) " RUBBER COVERED WIRE.

INSULINE CORP. OF AMERICA

MODEL Envoy
6 Tube AC
MODEL Envoy
Midget

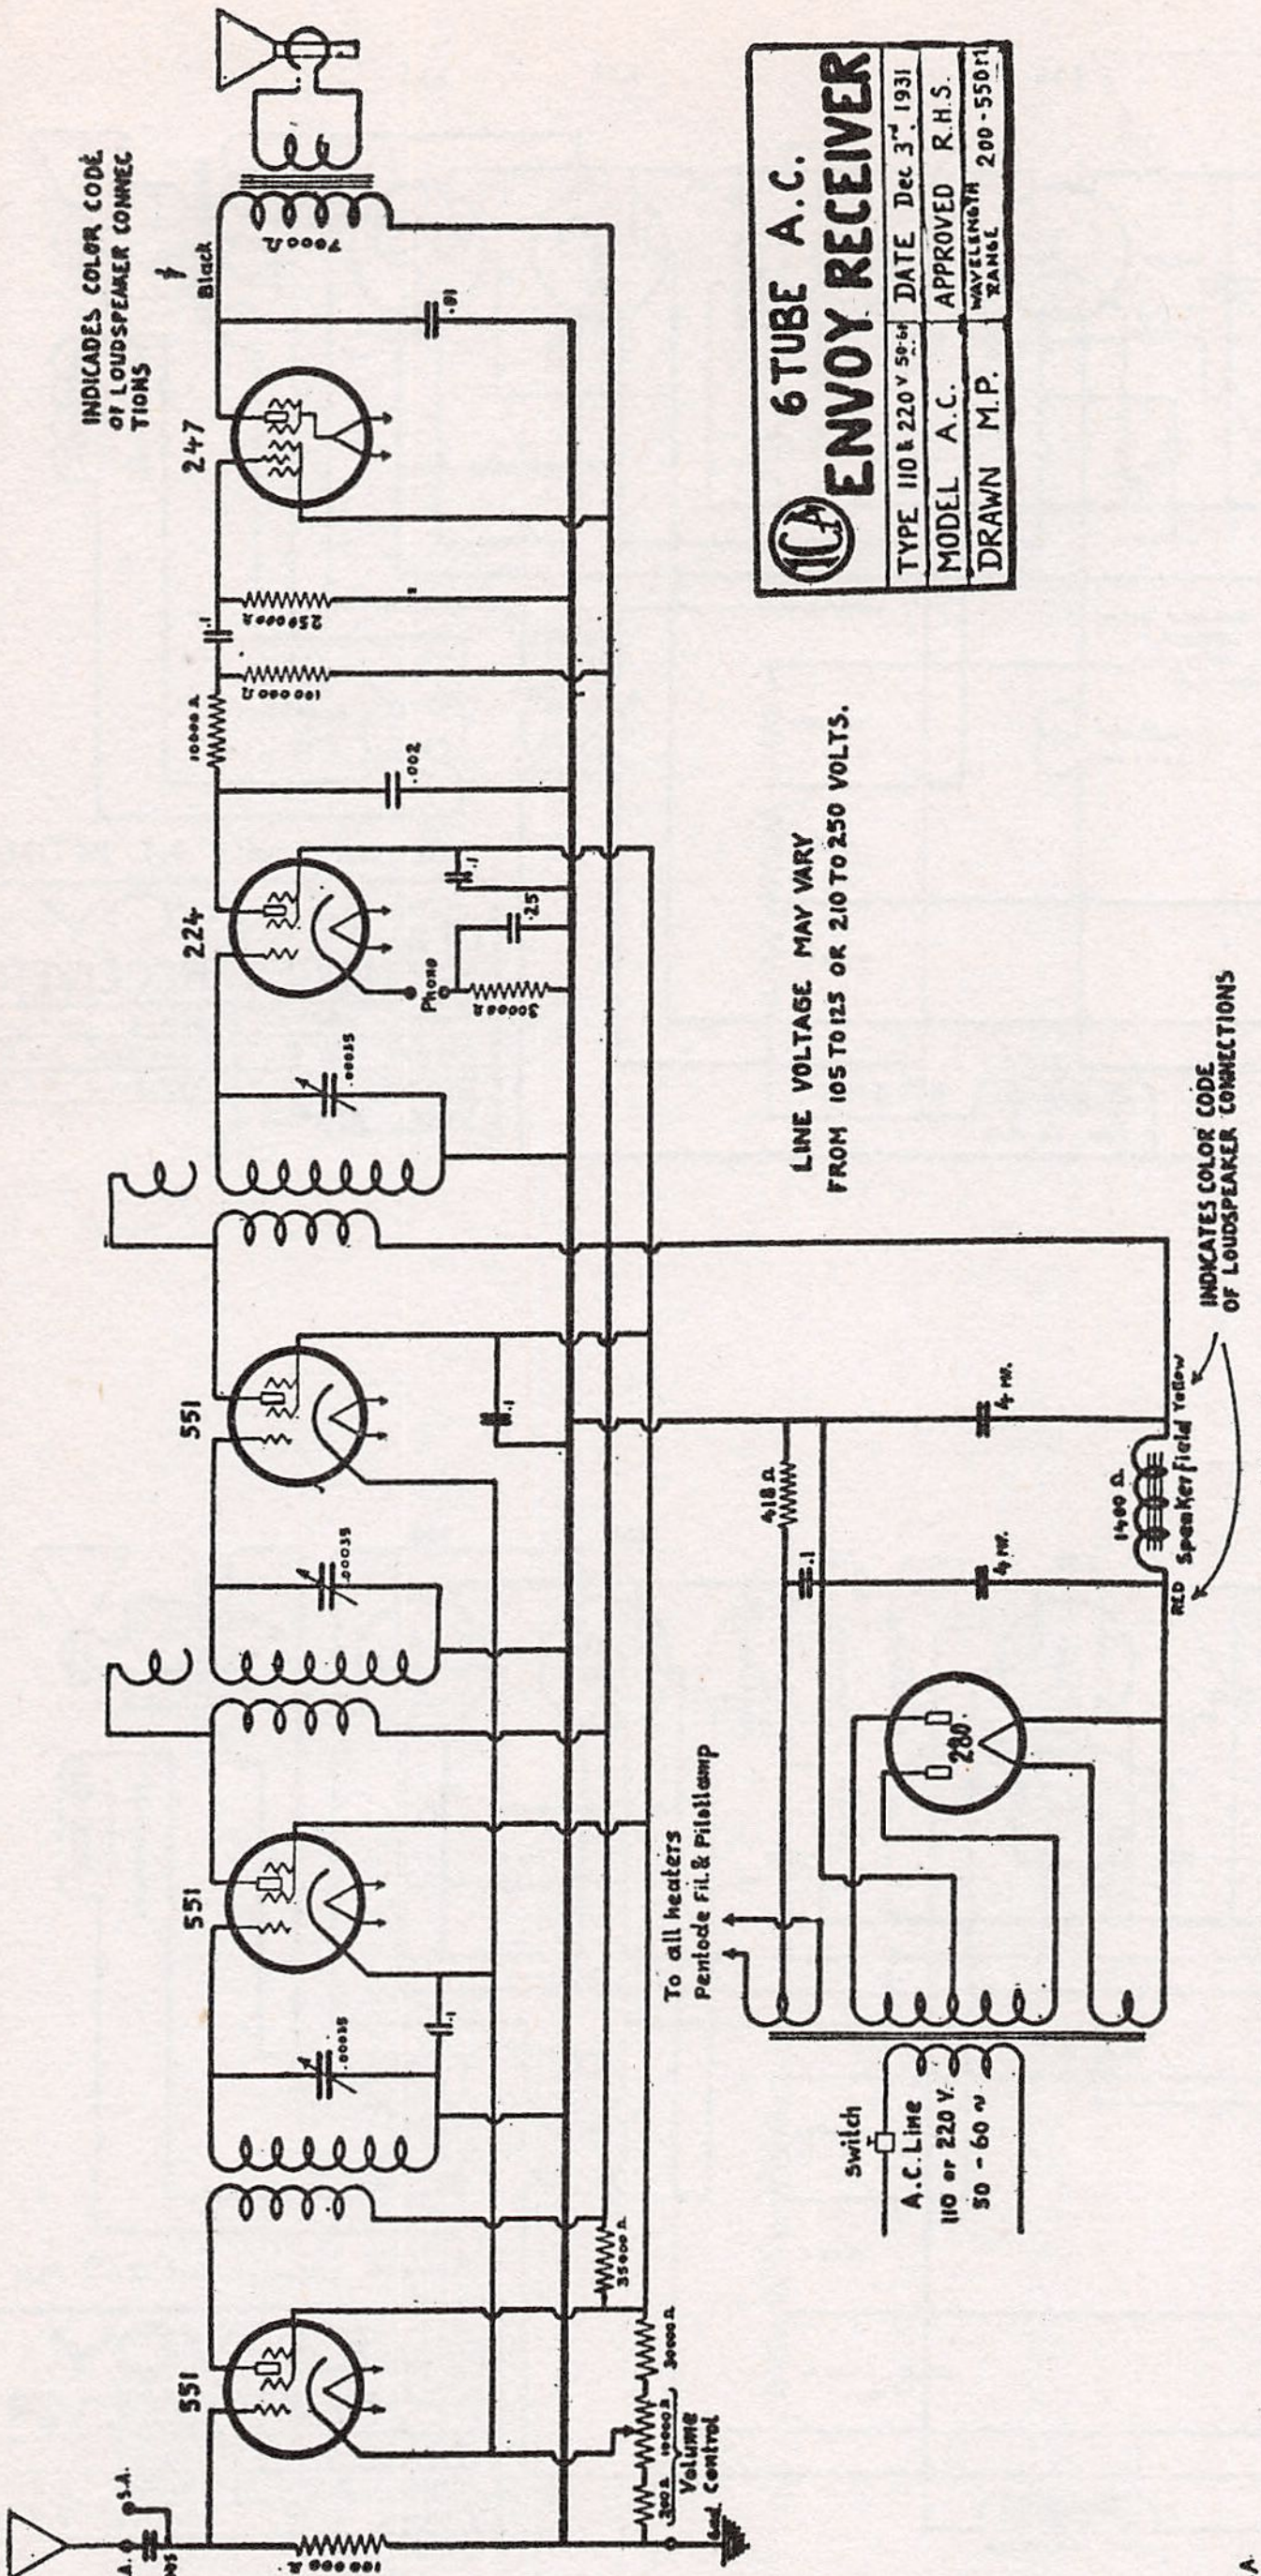
6 TUBE A.C.
ENVOY RECEIVER
ICA
TYPE 110 & 220 V 50-60~
DATE Dec 3rd 1931
MODEL A.C.
APPROVED R.H.S.
DRAWN M.P.
WAVELENGTH RANGE 200-550 M.
LINE VOLTAGE MAY VARY FROM 105 TO 125 OR 210 TO 250 VOLTS.
INDICATES COLOR CODE OF LOUDSPEAKER CONNECTIONS
Black
247
224
551
551
551
280
Phono
Volume Control
Gnd.
L.A.
S.A.
To all heaters Pentode Fil. & Pilot lamp
Switch
A.C. Line 110 or 220 V. 50 - 60 ~
Speaker field
Yellow
RED
7000 Ω
4 MF.
4 MF.
418 Ω
1400 Ω
.00035
.002
.1
.25
35000 Ω
3000 Ω
10000 Ω

"ENVOY" 6 TUBE AC RECEIVER

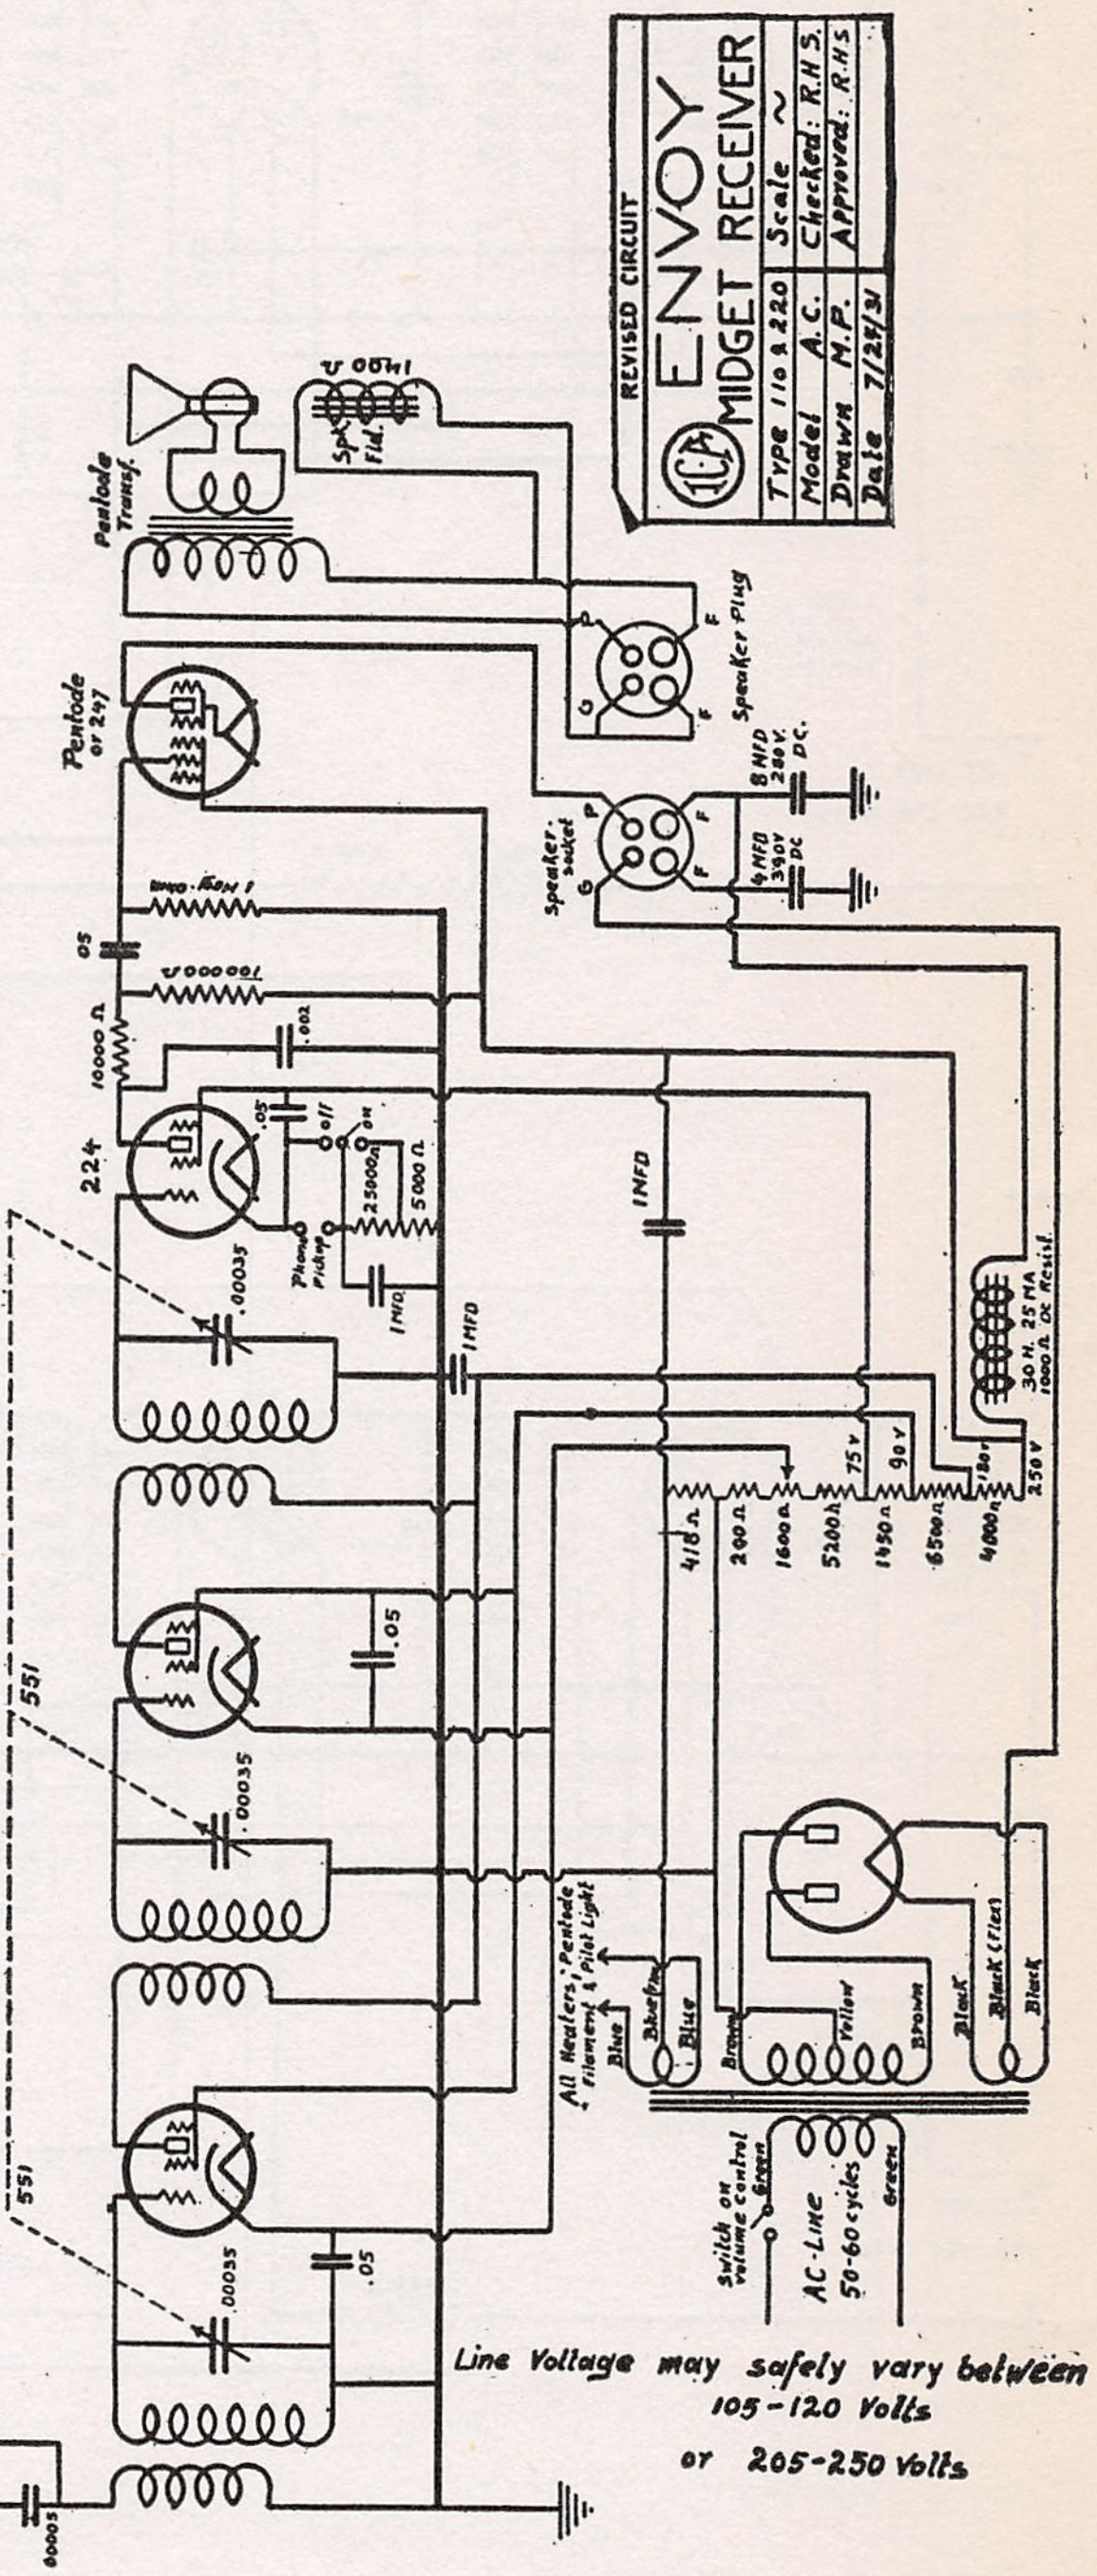
REVISED CIRCUIT
ENVOY
MIDGET RECEIVER
ICA
Type 110 & 220
Scale ~
Model A.C.
Checked: R.H.S.
Drawn M.P.
Approved: R.H.S.
Date 7/25/31
Pentode Transf.
Spkr. Fld.
1400 Ω
Speaker Plug
Speaker Socket
Pentode or 247
224
551
551
Phono Pickup
8 MFD 280 V. D.C.
4 MFD 390 V DC
1 MFD
1 MFD
30 H. 25 MA 1000 Ω DC Resist.
All Heaters, Pentode Filament & Pilot Light
Blue
Brown
Yellow
Black
Black (Flex)
Green
Switch on Volume Control
AC-Line 50-60 cycles
L.A.
S.A.
.00005
.00035
.05
.002
418 Ω
240 Ω
1600 Ω
5200 Ω
1950 Ω
6500 Ω
4000 Ω
75 V
90 V
180 V
250 V

Line Voltage may safely vary between
105-120 Volts
or 205-250 Volts

"ENVOY" AC MIDGET RECEIVER

MODEL Envoy
Midget DC
(Revised)
2 Types

INSULINE CORP. OF AMERICA

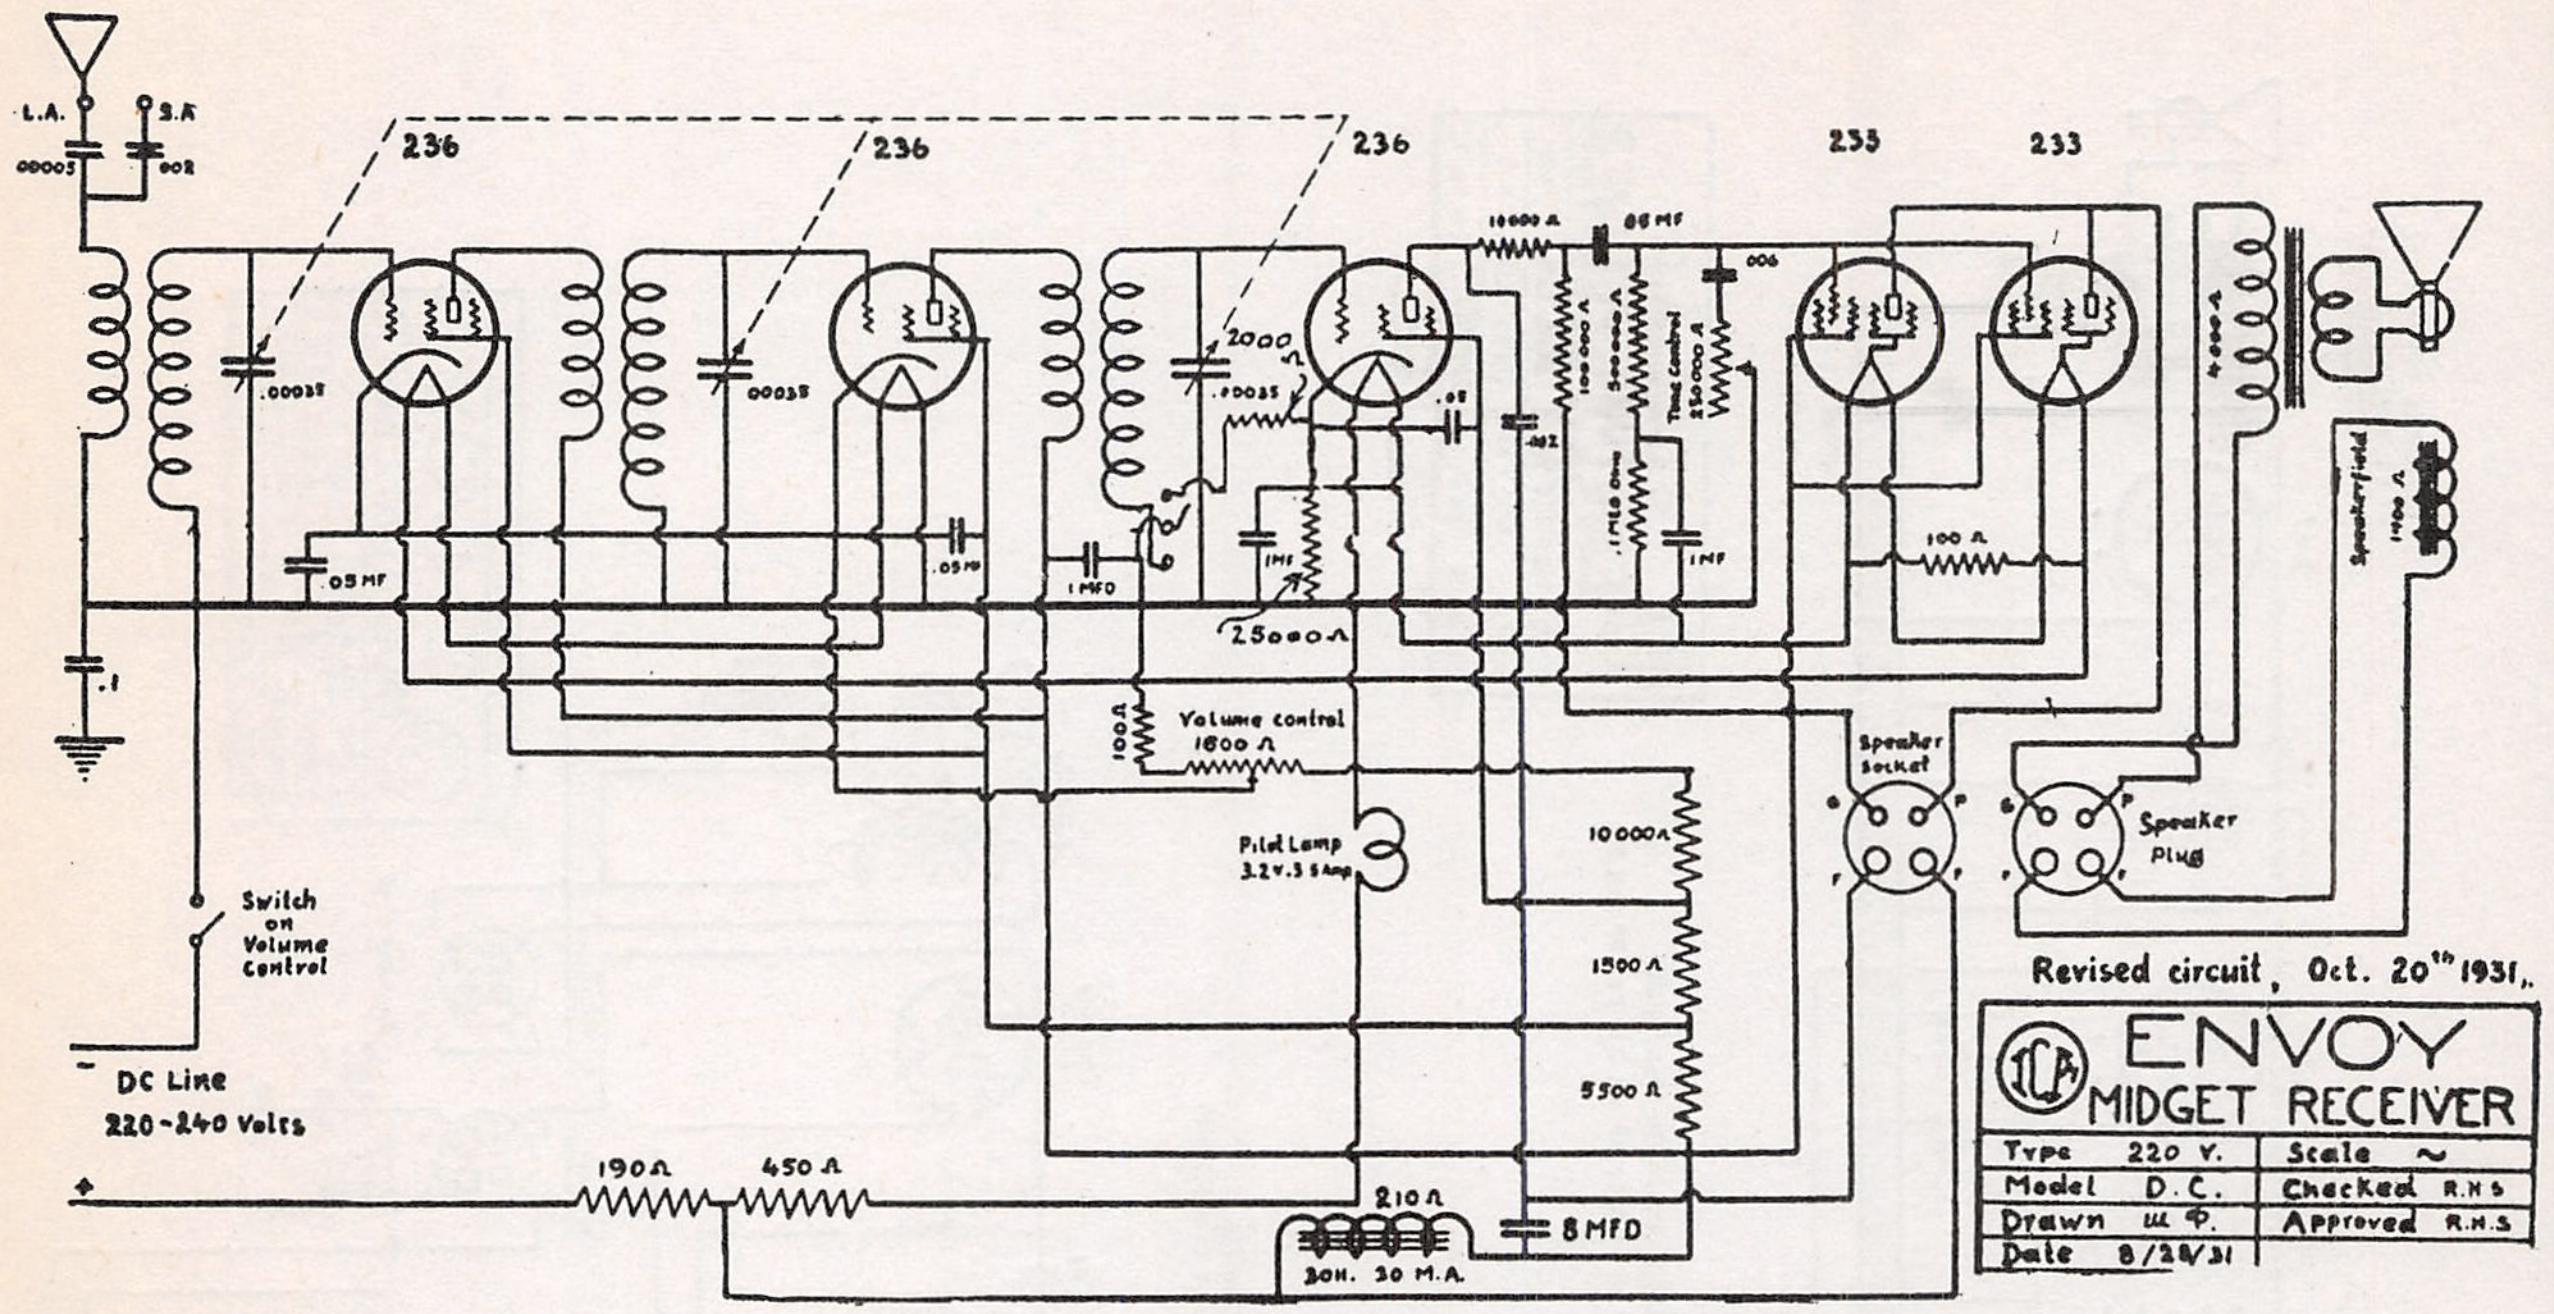
L.A.
S.A.
.00005
.002
236
236
236
233
233
.00035
.00035
.00035
2000 Ω
.05 MF
.05 MF
1 MFD
1MF
25000 Ω
.1
10000 Ω
.05 MF
.006
.002
.05
100000 Ω
500000 Ω
Tone Control 25000 Ω
.1 Meg Ohm
1MF
100 Ω
4000 Ω
Speaker field 1400 Ω
100 Ω
Volume control 1600 Ω
Pilot Lamp 3.2 V. .35 Amp
Speaker Socket
Speaker Plug
Switch on Volume Control
DC Line 220-240 Volts
10000 Ω
1500 Ω
5500 Ω
190 Ω
450 Ω
210 Ω
8 MFD
30 H. 30 M.A.
Revised circuit, Oct. 20th 1931.
ICA
ENVOY
MIDGET RECEIVER
Type 220 V.
Scale ~
Model D.C.
Checked R.H.S.
Drawn M.P.
Approved R.H.S.
Date 8/28/31

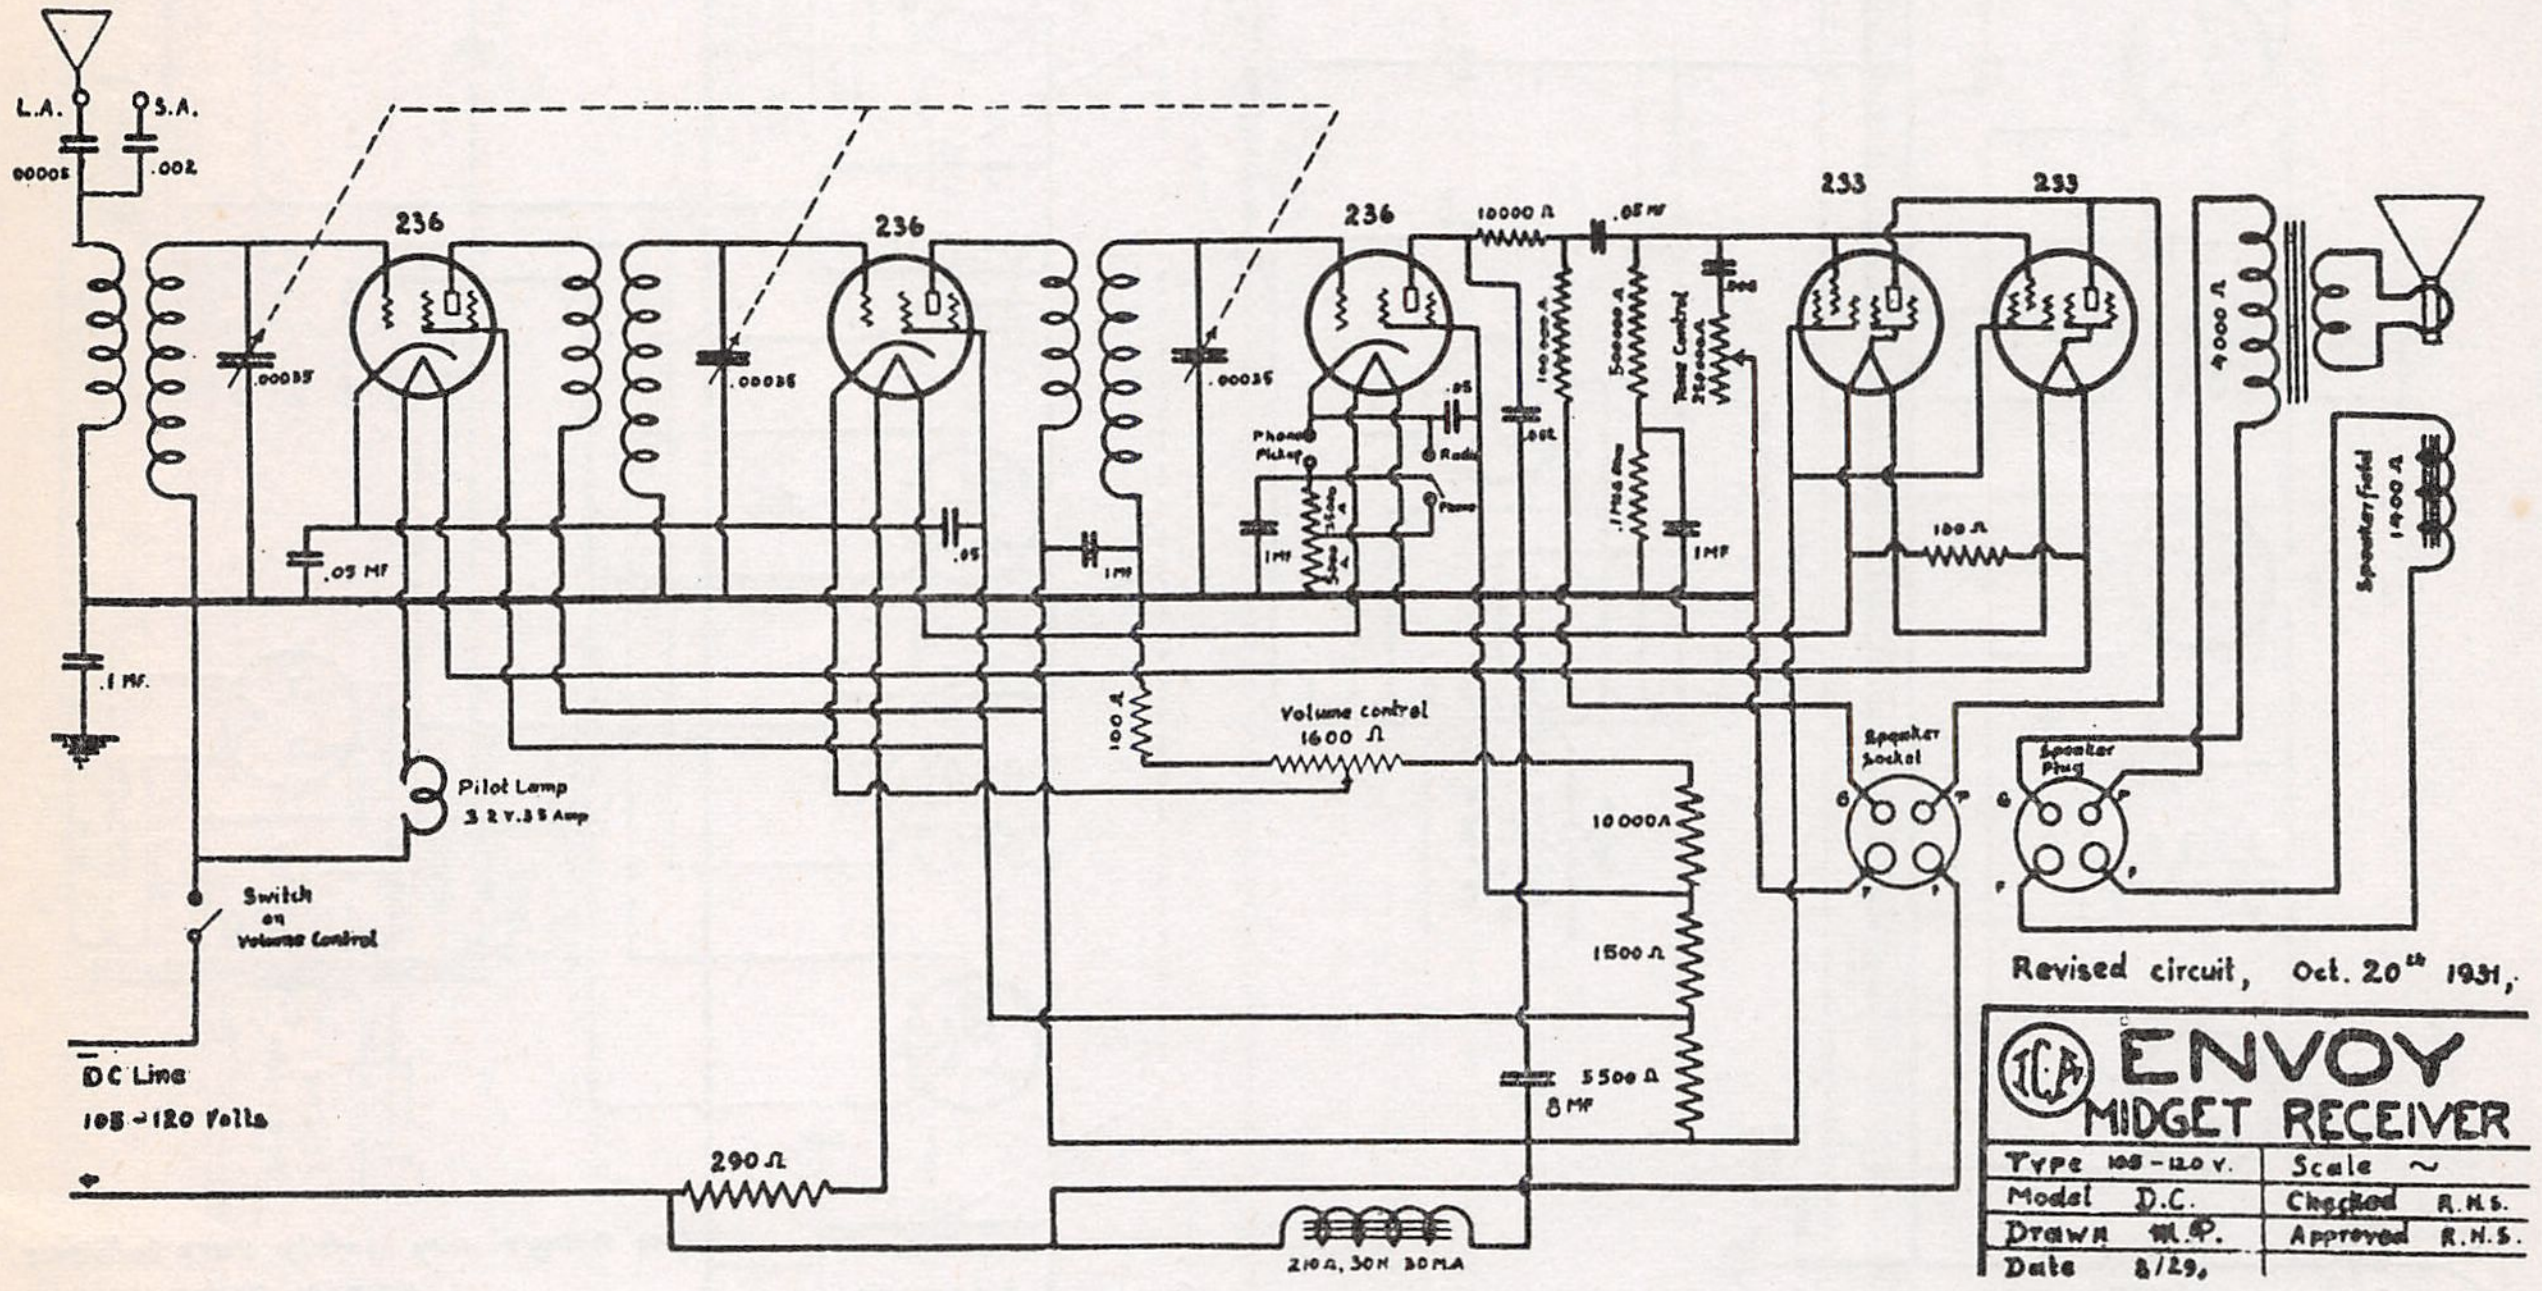
L.A.
S.A.
.00005
.002
236
236
236
233
233
.00035
.00035
.00035
.05 MF
.05
1MF
.1 MF.
Phono Pickup
Radio
Phono
1MF
10000 Ω
.05 MF
.05
.002
.006
100000 Ω
500000 Ω
Tone Control 250000 Ω
.1 Meg Ohm
1MF
100 Ω
4000 Ω
Speaker field 1400 Ω
100 Ω
Volume control 1600 Ω
Pilot Lamp 3.2 V. .35 Amp
Switch on Volume Control
DC Line 105-120 Volts
Speaker Socket
Speaker Plug
10000 Ω
1500 Ω
5500 Ω
8 MF
290 Ω
210 Ω, 30 H 30 MA
Revised circuit, Oct. 20th 1931.
ICA
ENVOY
MIDGET RECEIVER
Type 105-120 V.
Scale ~
Model D.C.
Checked R.H.S.
Drawn M.P.
Approved R.H.S.
Date 8/29.

"ENVOY" DC MIDGET RECEIVER (220 V)

"ENVOY" DC MIDGET RECEIVER (105-120 V)

INSULINE CORP. OF AMERICA

MODEL Envoy
Broadcast-Long Wave DC

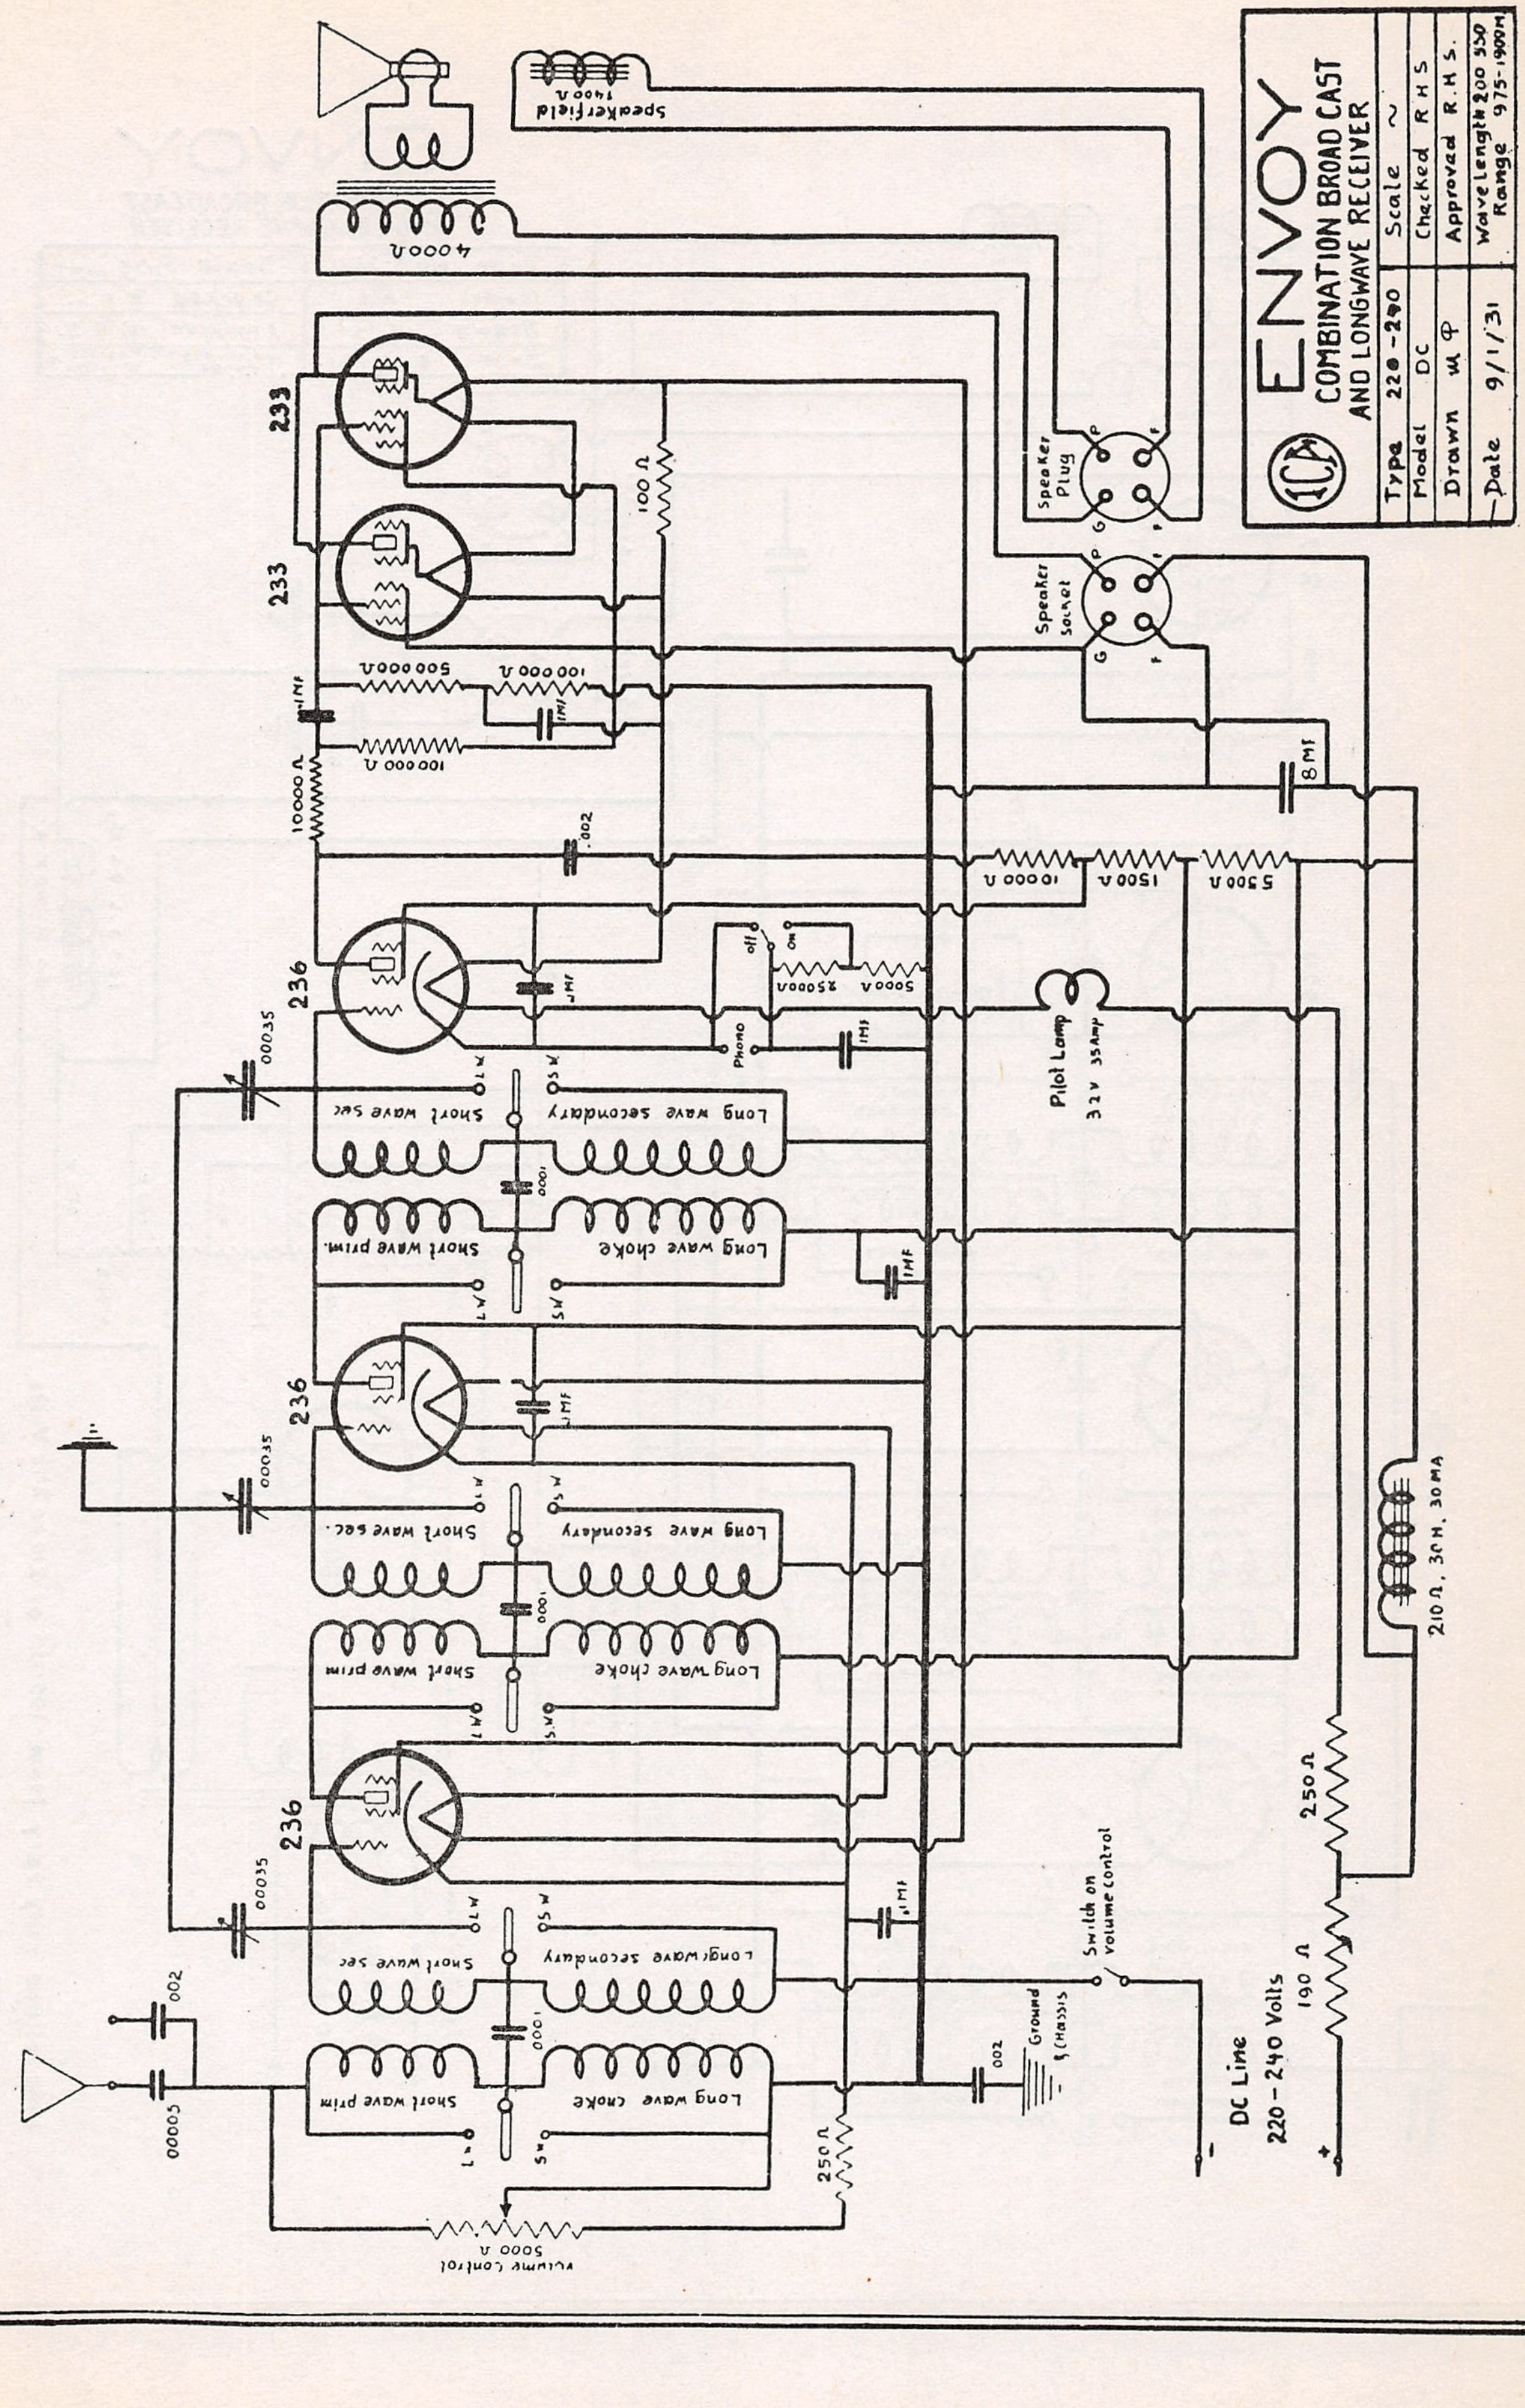
ENVOY
COMBINATION BROAD CAST AND LONGWAVE RECEIVER
ICA
Type 220-240
Scale ~
Model DC
Checked R H S
Drawn MP
Approved R.H.S.
Date 9/1/31
Wavelength Range 200-550 975-1900M
Speakerfield 1400 Ω
4000 Ω
233
233
236
236
236
Speaker Plug
Speaker Socket
100 Ω
500000 Ω
100000 Ω
100000 Ω
1MF
10000 Ω
.002
10000 Ω
1500 Ω
5300 Ω
8MF
off
on
25000 Ω
5000 Ω
Phono
1MF
Pilot Lamp 32 V 35 Amp
.00035
Short wave sec
Long wave secondary
Short wave prim.
Long wave choke
.0001
LW
SW
Long wave secondary
Short wave sec.
Short wave prim
Long wave choke
210 Ω, 30 H, 30 MA
.00035
.00035
Switch on volume control
Ground & Chassis
.002
.00005
.002
250 Ω
190 Ω
250 Ω
DC Line 220-240 Volts
Volume Control 5000 Ω

"ENVOY" DC COMBINATION B'CAST & L.W. RECEIVER

MODEL Envoy
Broadcast-Long Wave AC # INSULINE CORP. OF AMERICA

"ENVOY" AC COMBINATION B'CAST & L.W. RECEIVER

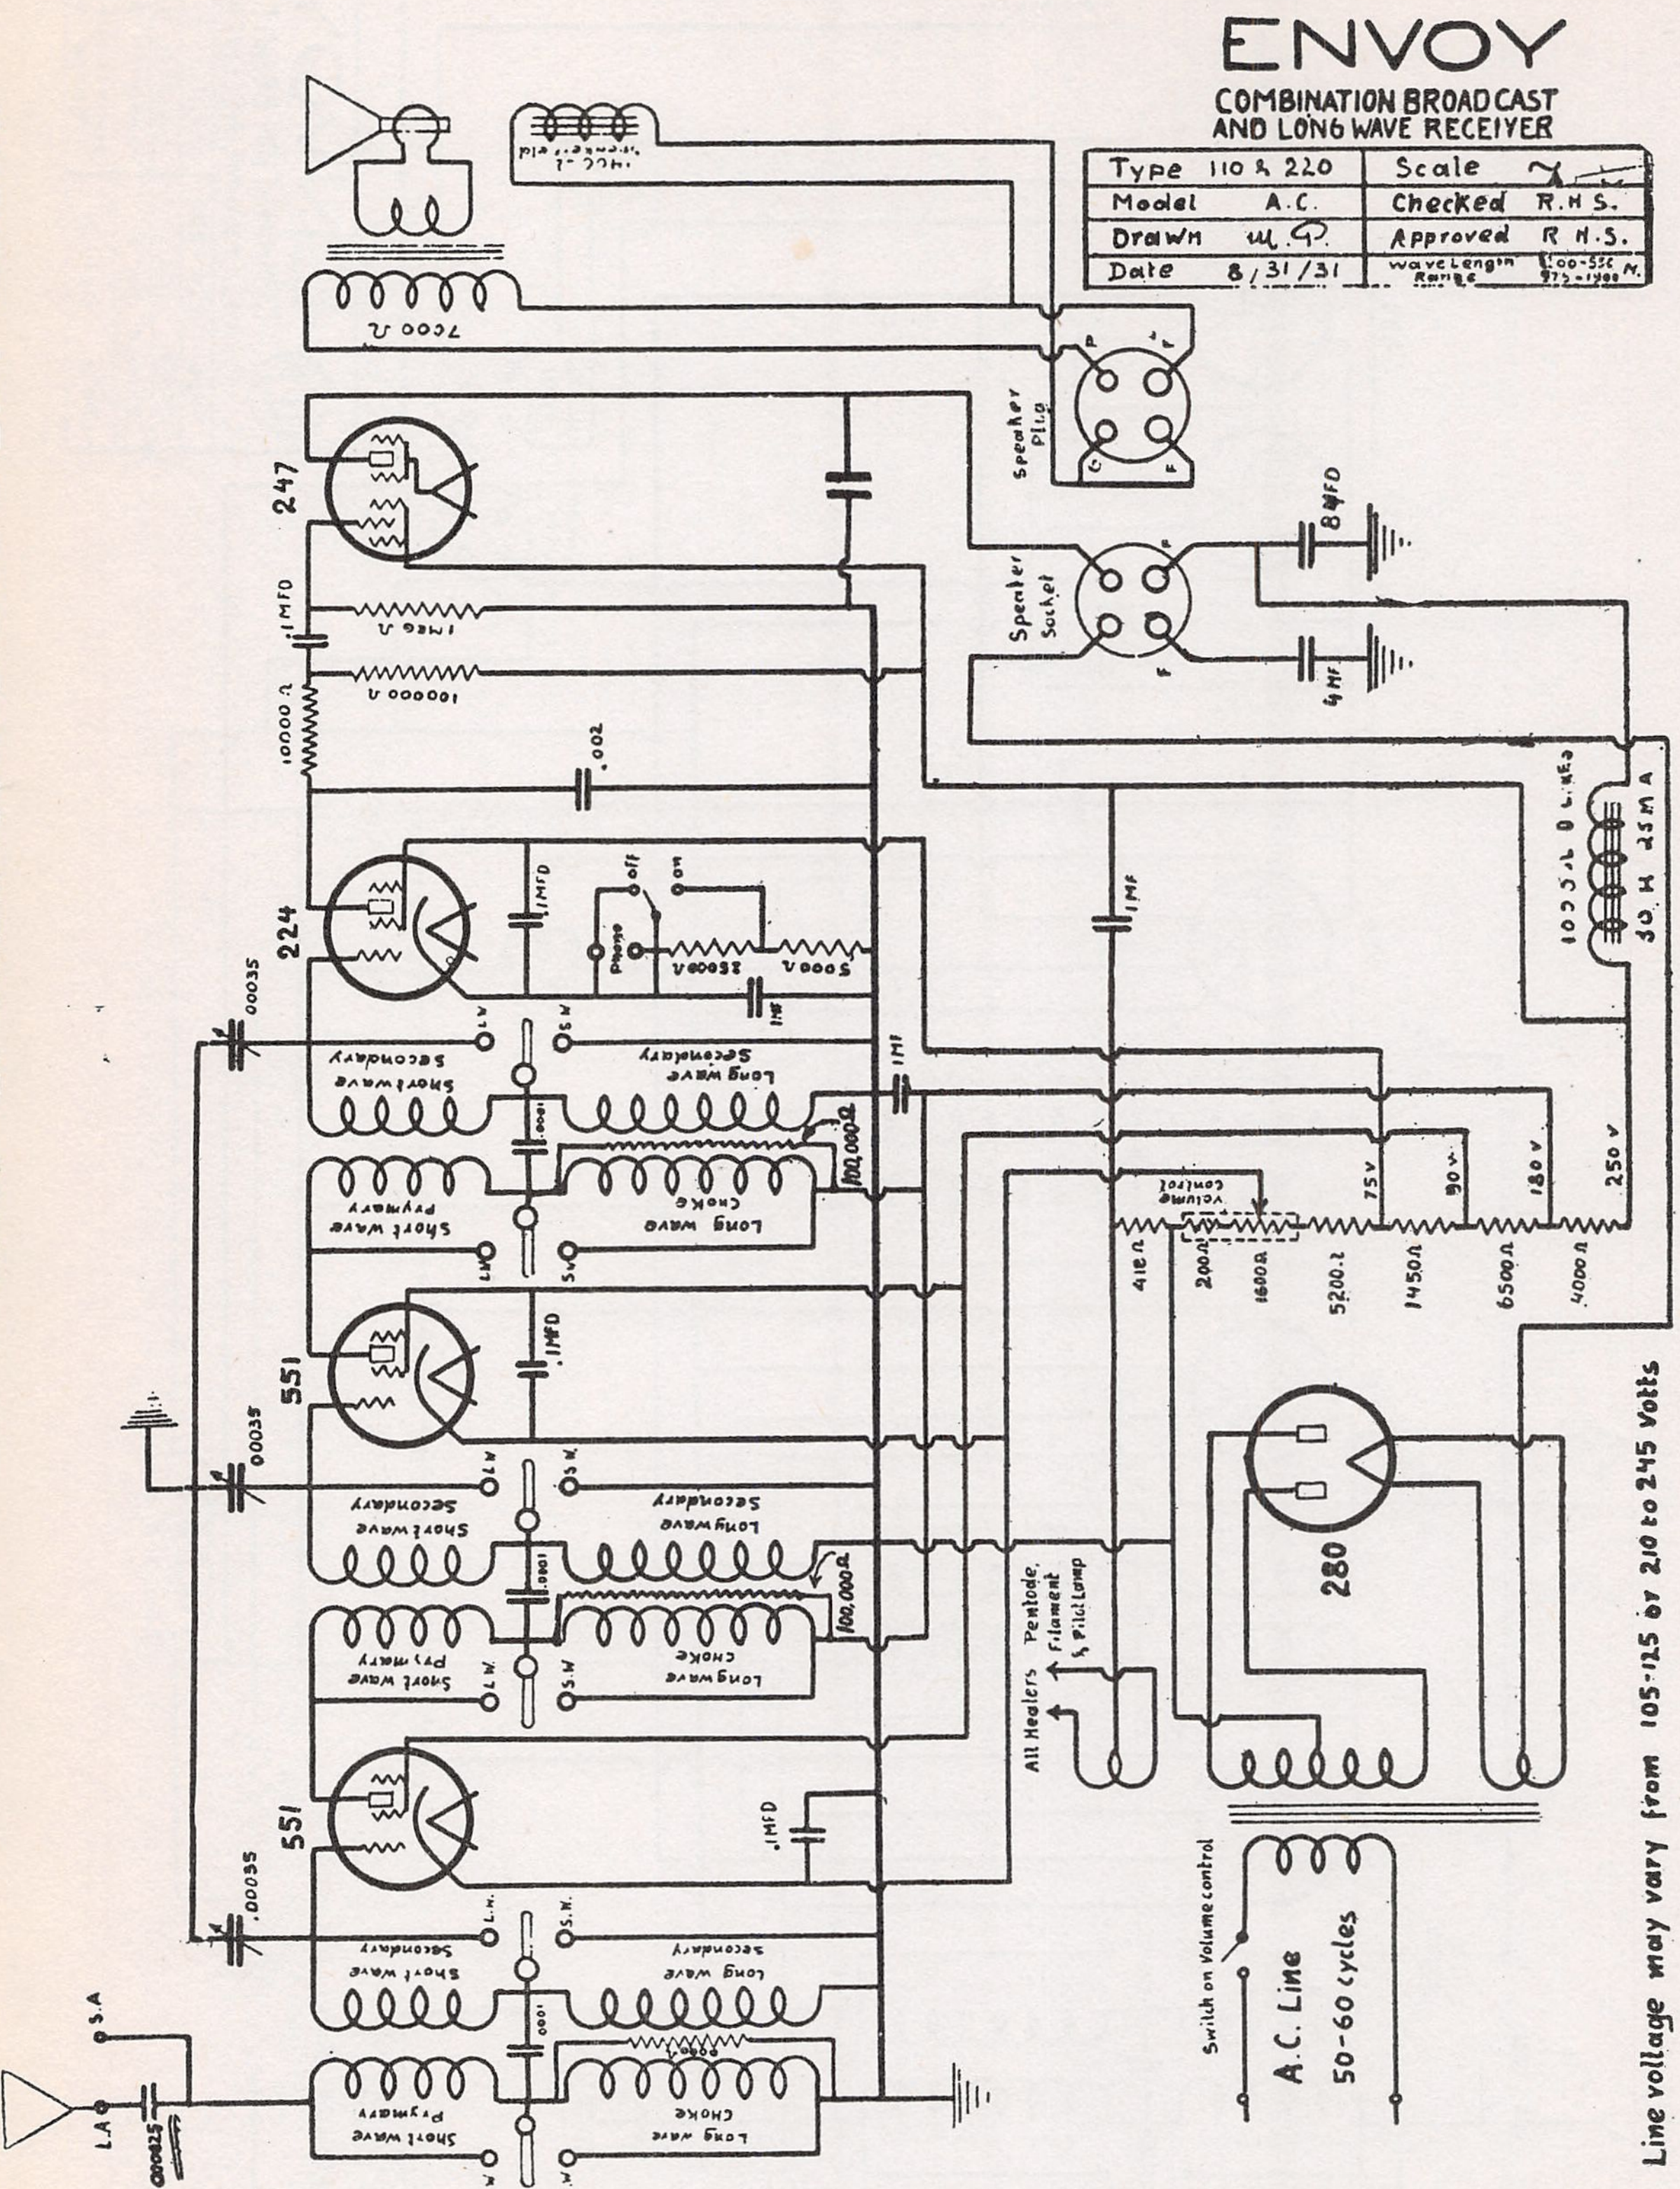
ENVOY
COMBINATION BROADCAST AND LONG WAVE RECEIVER
Type 110 & 220
Model A.C.
Drawn W. G.
Date 8/31/31
Scale
Checked R.H.S.
Approved R.H.S.
Wave Length Range 200-550 M. 975-1900 M.
247
224
551
551
280
7000 Ω
Speaker Plug
Speaker Socket
8 MFD
4 MF
1 MFD
1 Meg Ω
100000 Ω
10000 Ω
.002
.1 MFD
.00035
.000025
L.A
S.A
Short wave Secondary
Short wave Primary
Long wave Secondary
Long wave Choke
L.W.
S.W.
.0001
100,000 Ω
1 MF
Phono
off
on
25000 Ω
5000 Ω
Volume control
41 Ω
200 Ω
1600 Ω
5200 Ω
1450 Ω
6500 Ω
4000 Ω
75 V
90 V
180 V
250 V
30 H 25 MA
All Heaters
Pentode, Filament & Pilot Lamp
Switch on Volume control
A.C. Line 50-60 cycles
Line voltage may vary from 105-125 or 210 to 245 Volts

INSULINE CORP. OF AMERICA

MODEL Insulette & Mascot
4 Tube Midget AC
Broadcast-Long Wave
4 Tube Midget AC

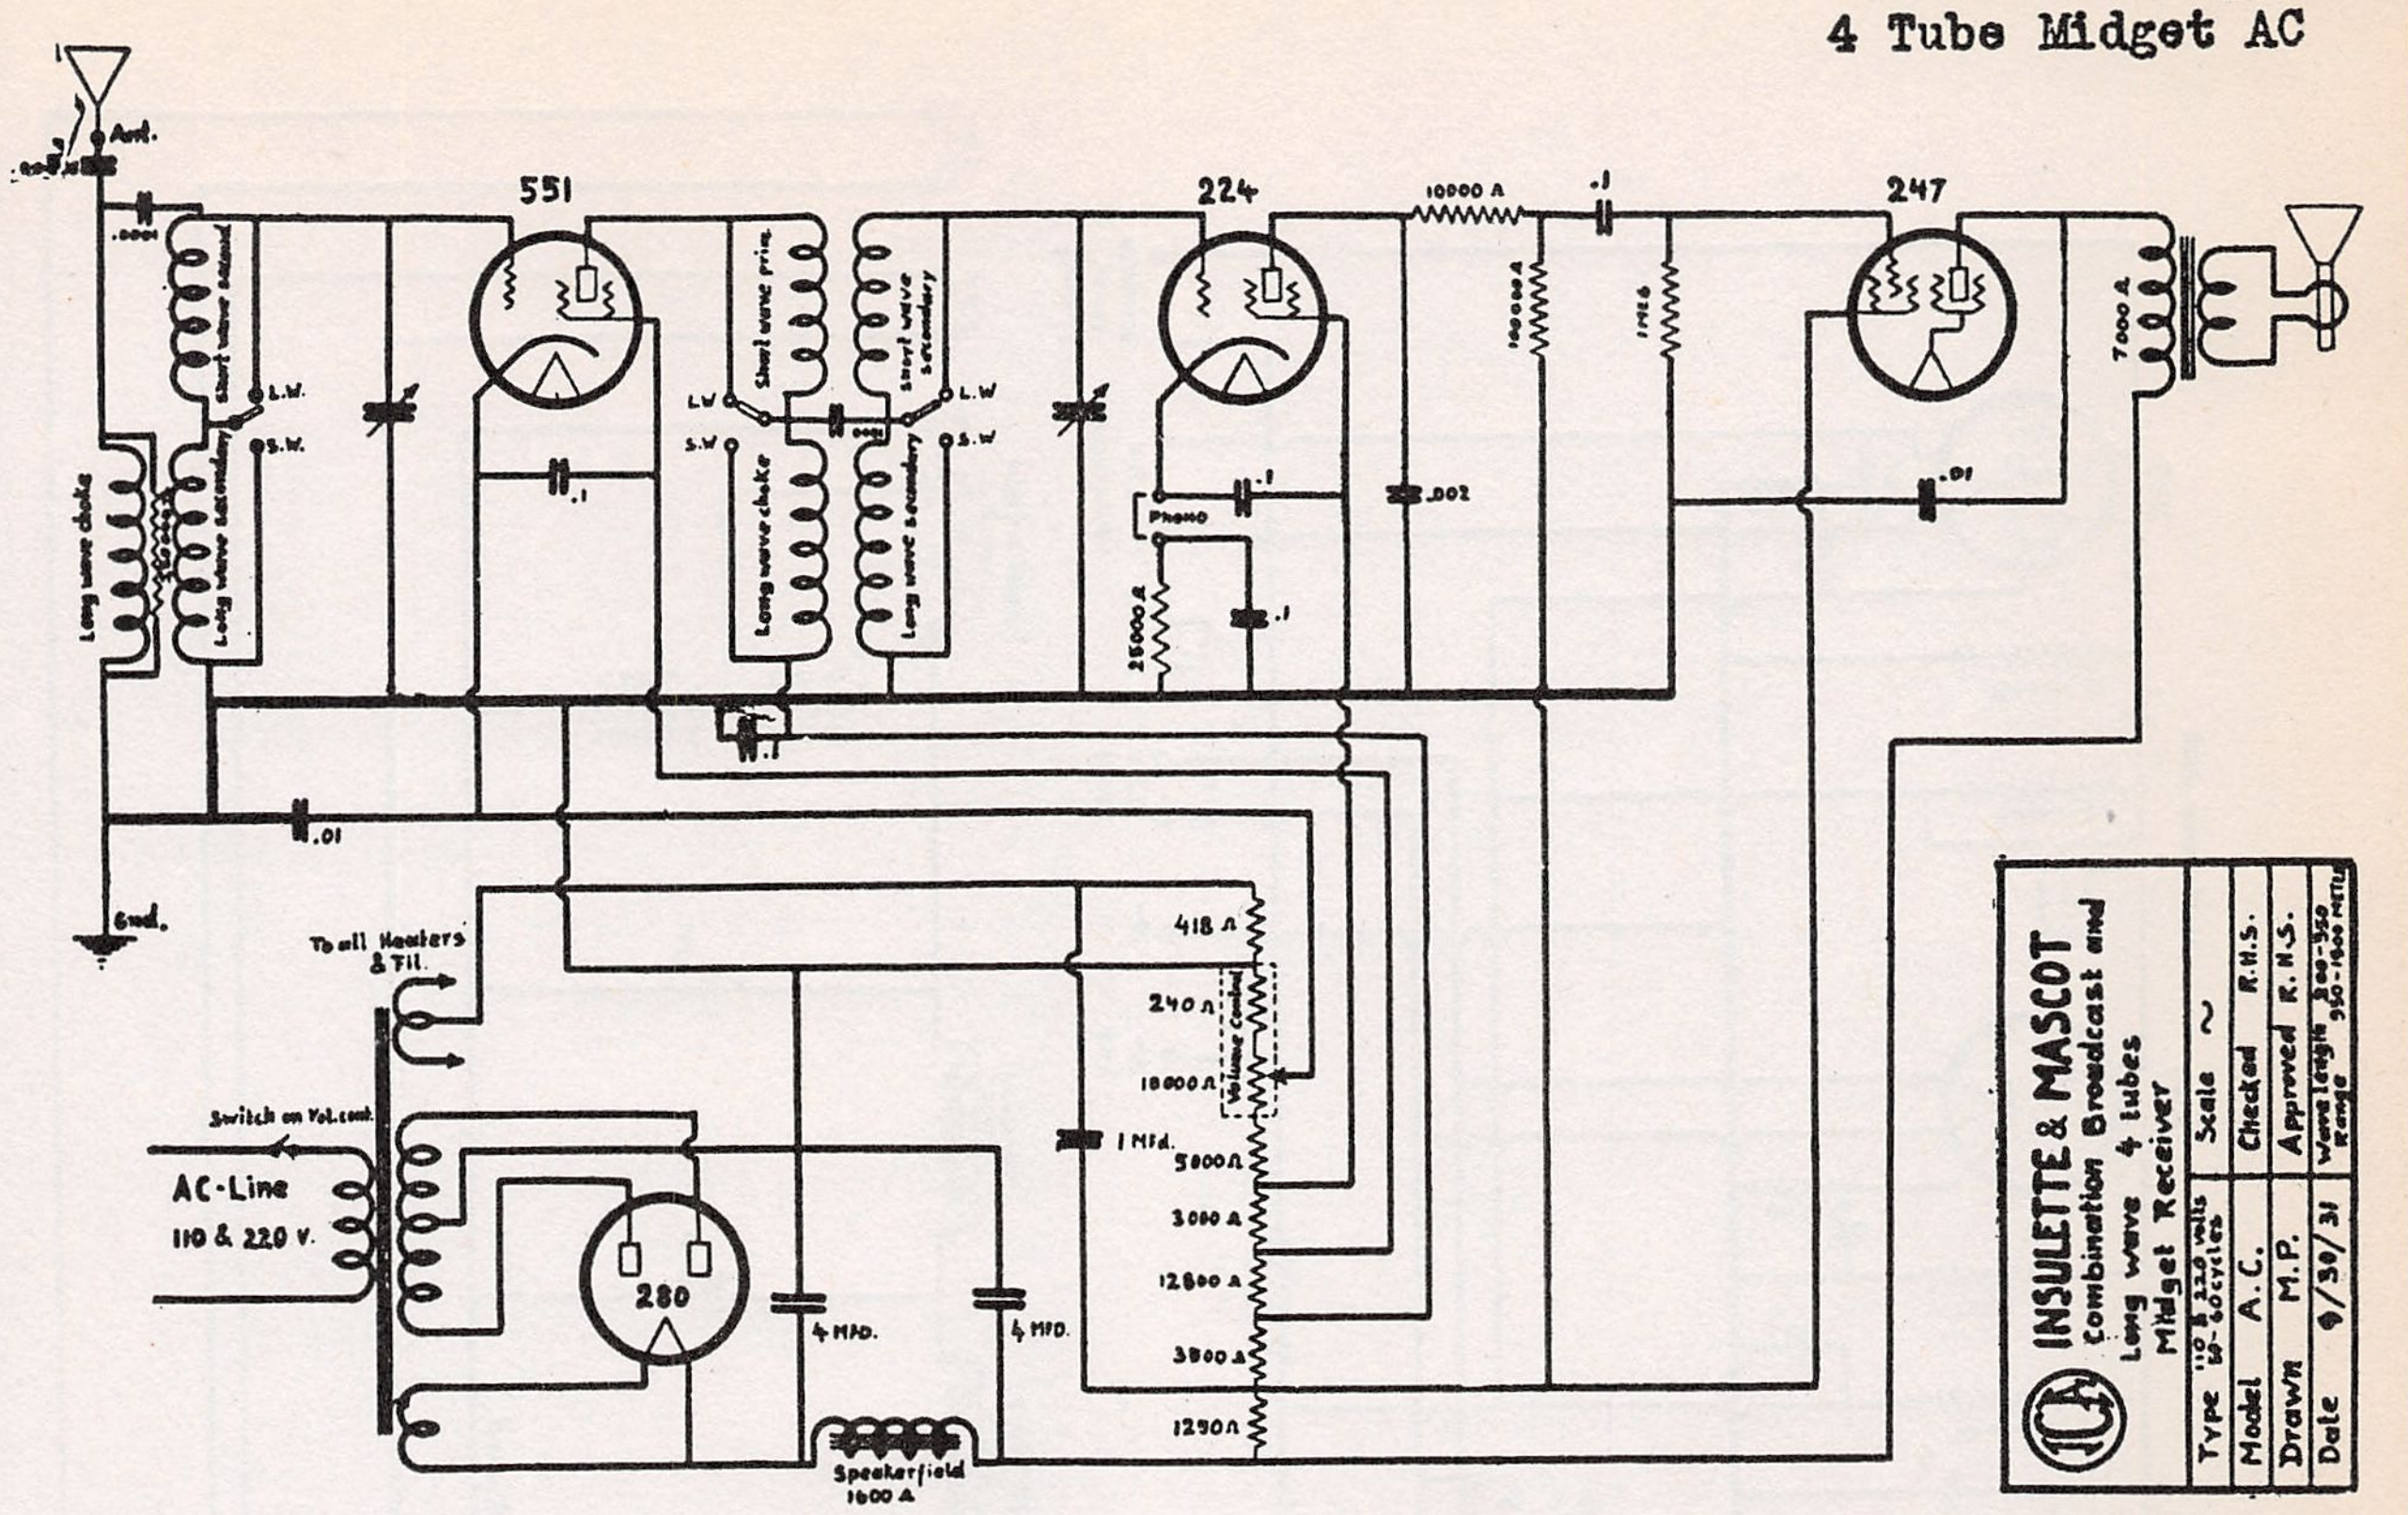
Ant.
.0001
Short wave secondary
L.W.
S.W.
Long wave choke
Long wave secondary
551
.1
Short wave prim.
Long wave choke
Short wave secondary
Long wave secondary
224
Phono
25000 Ω
.1
.002
10000 Ω
.1
100000 Ω
1 MEG
247
.01
7000 Ω
.1
.01
Gnd.
To all Heaters & Fil.
Switch on Vol. cont.
AC-Line
110 & 220 V.
280
4 Mfd.
4 Mfd.
Speakerfield
1600 Ω
1 Mfd.
418 Ω
240 Ω
10000 Ω
Volume control
5000 Ω
3000 Ω
12800 Ω
3800 Ω
1290 Ω
INSULETTE & MASCOT
Combination Broadcast and Long wave 4 tubes Midget Receiver
Type 110 & 220 volts 50-60 cycles
Scale ~
Model A.C.
Checked R.H.S.
Drawn M.P.
Approved R.H.S.
Date 9/30/31
Wave length Range 200-550 950-1800 Meters

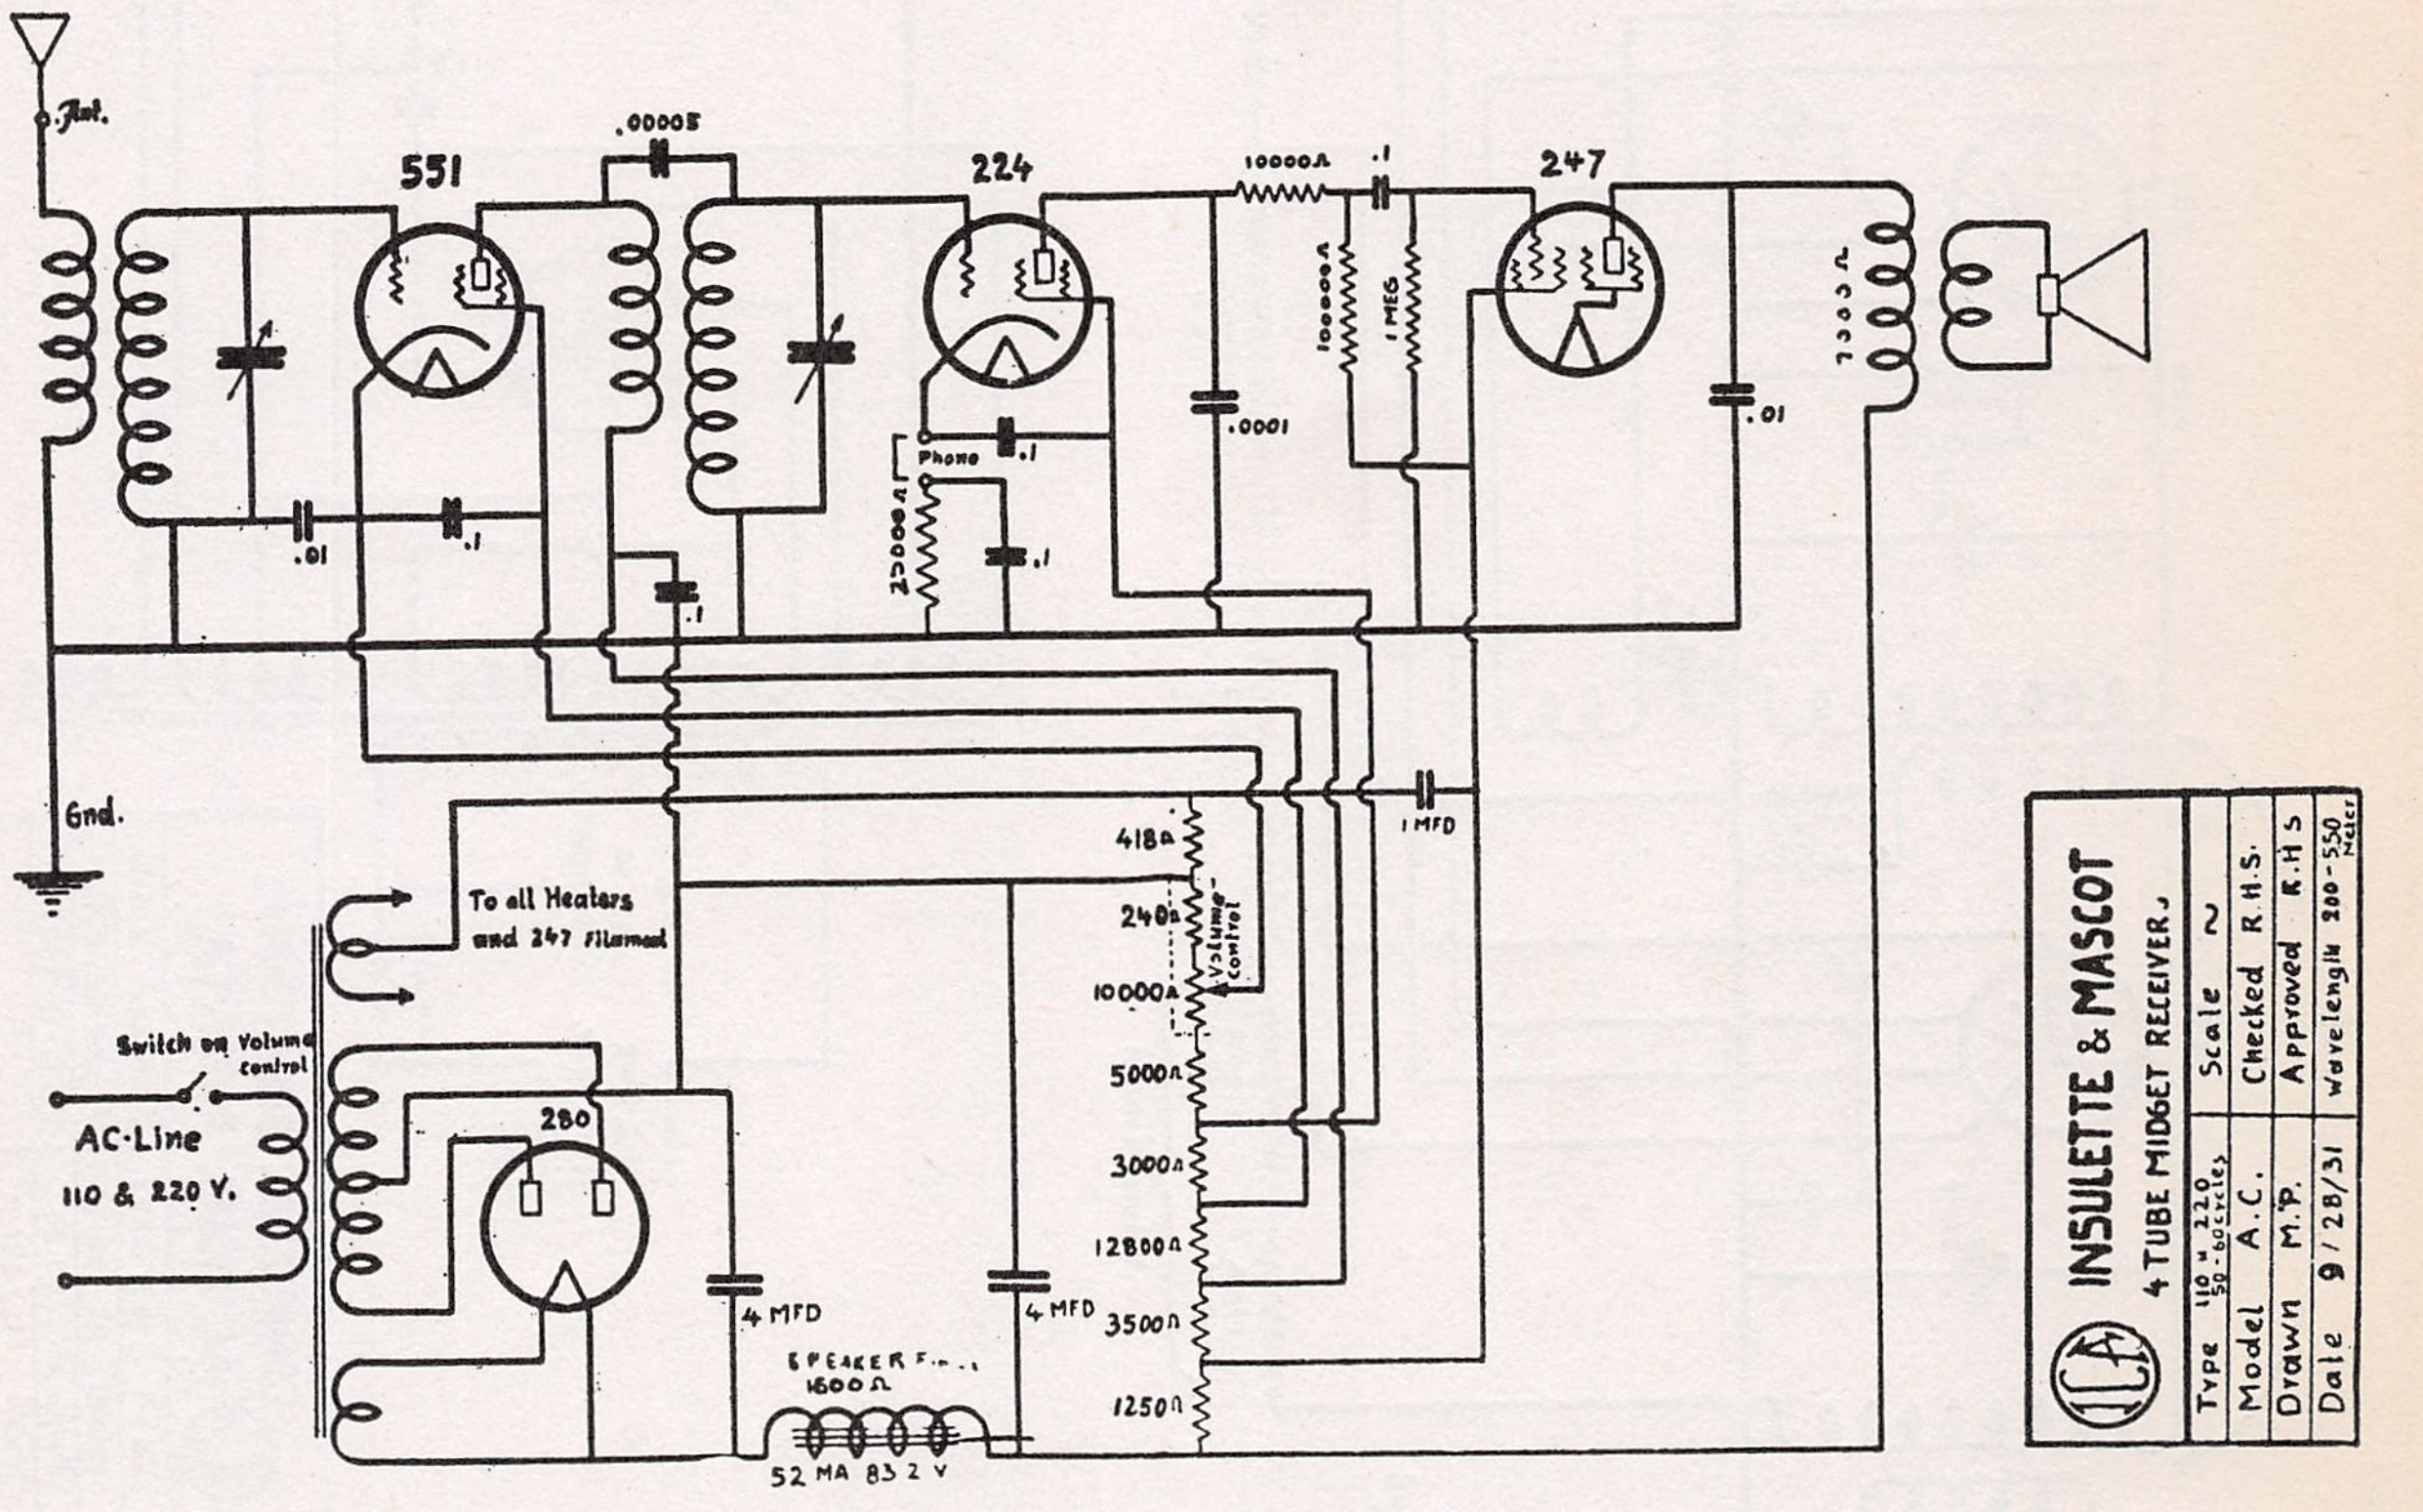
Ant.
551
.00005
224
10000 Ω
.1
247
100000 Ω
1 MEG.
.0001
Phono
25000 Ω
.1
.1
.01
.1
.1
7000 Ω
.01
1 MFD
Gnd.
To all Heaters and 247 Filament
Switch on Volume control
AC-Line
110 & 220 V.
280
4 MFD
4 MFD
SPEAKER F...
1600 Ω
52 MA 83.2 V
418 Ω
240 Ω
10000 Ω
Volume control
5000 Ω
3000 Ω
12800 Ω
3500 Ω
1250 Ω
INSULETTE & MASCOT
4 TUBE MIDGET RECEIVER.
Type 110 " 220 50-60 cycles
Scale ~
Model A.C.
Checked R.H.S.
Drawn M.P.
Approved R.H.S
Date 9/28/31
Wavelength 200-550 Meters

"INSULETTE" & "MASCOT"
4 TUBE MIDGET RECEIVER

"INSULETTE" & "MASCOT"
4 TUBE COMBINATION B'CAST & L.W.
MIDGET RECEIVER

MODEL Conquerer
Short Wave AC

INSULINE CORP. OF AMERICA

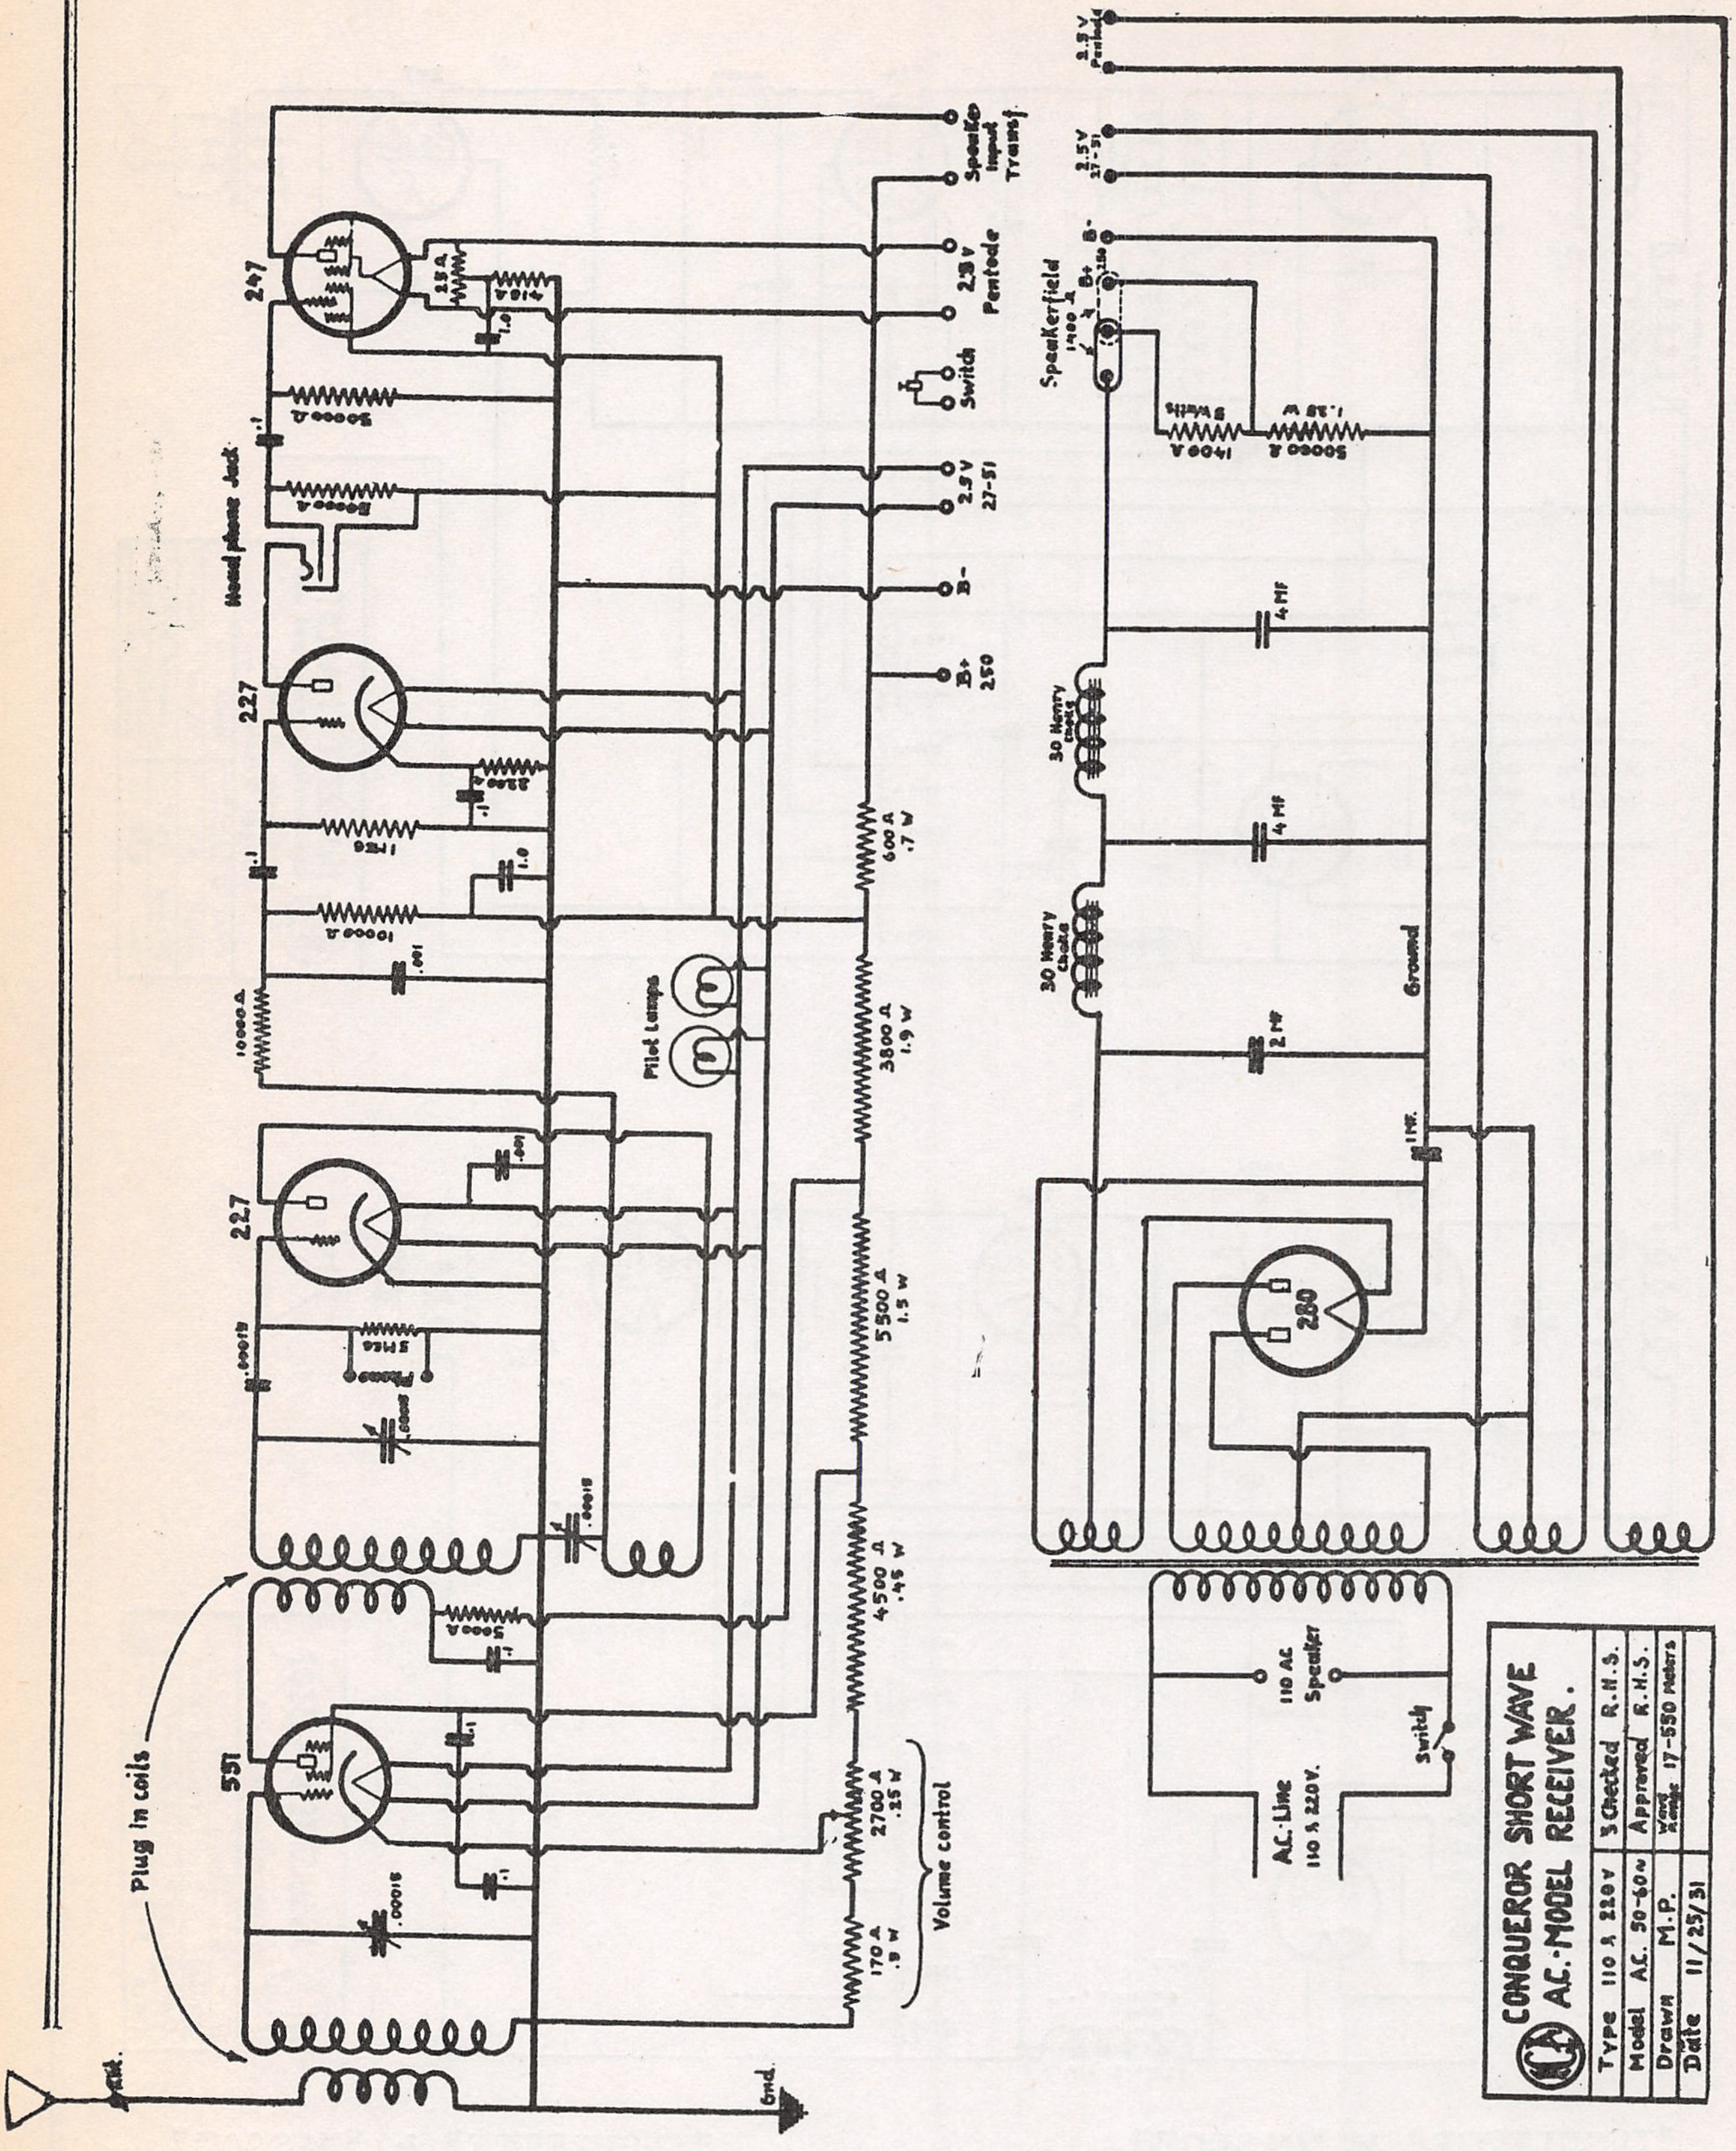
247
227
227
551
Head phone Jack
Plug in coils
Pilot Lamps
Volume control
Speaker Input Transf.
2.5 V Pentode
Switch
2.5 V 27-51
B-
B+ 250
600 Ω .7 W
3800 Ω 1.9 W
5500 Ω 1.5 W
4500 Ω .45 W
2700 Ω .25 W
170 Ω .3 W
2.5 V Pentode
2.5 V 27-51
B+
B-
Speakerfield 1900 Ω
30 Henry Choke
30 Henry Choke
4 MF
4 MF
2 MF
1 MF
Ground
280
110 AC Speaker
Switch
A.C. Line 110 & 220 V.
Ant.
Gnd.
CONQUEROR SHORT WAVE A.C. MODEL RECEIVER.
Type 110 & 220 V
Checked R.H.S.
Model A.C. 50-60~
Approved R.H.S.
Drawn M.P.
Wave Range 17-550 Meters
Date 11/25/31

" CONQUEROR" SHORT WAVE A.C. MODEL RECEIVER

MODEL Super-Conquerer
Short & Long Wave AC

INSULINE CORP. OF AMERICA

SUPER-CONQUEROR
SHORT & LONG WAVE RECEIVER.

DATE	AUG. 23. 1931	WAVELENGTH RANGE	12 - 2025 METERS
DRAWN	M.P.	MODEL	A.C. 108-250 V.
DESIGNED	R.H.S.		
CHECKED	R.H.S.	CHASSIS DIMENSION	
APPROVED	A.G.H.	CHASSIS WEIGHT	LBS.

MANUFACTURED BY
INSULINE CORP. OF AMERICA
23-25 PARK PLACE NEW YORK, N.Y. U.S.A.

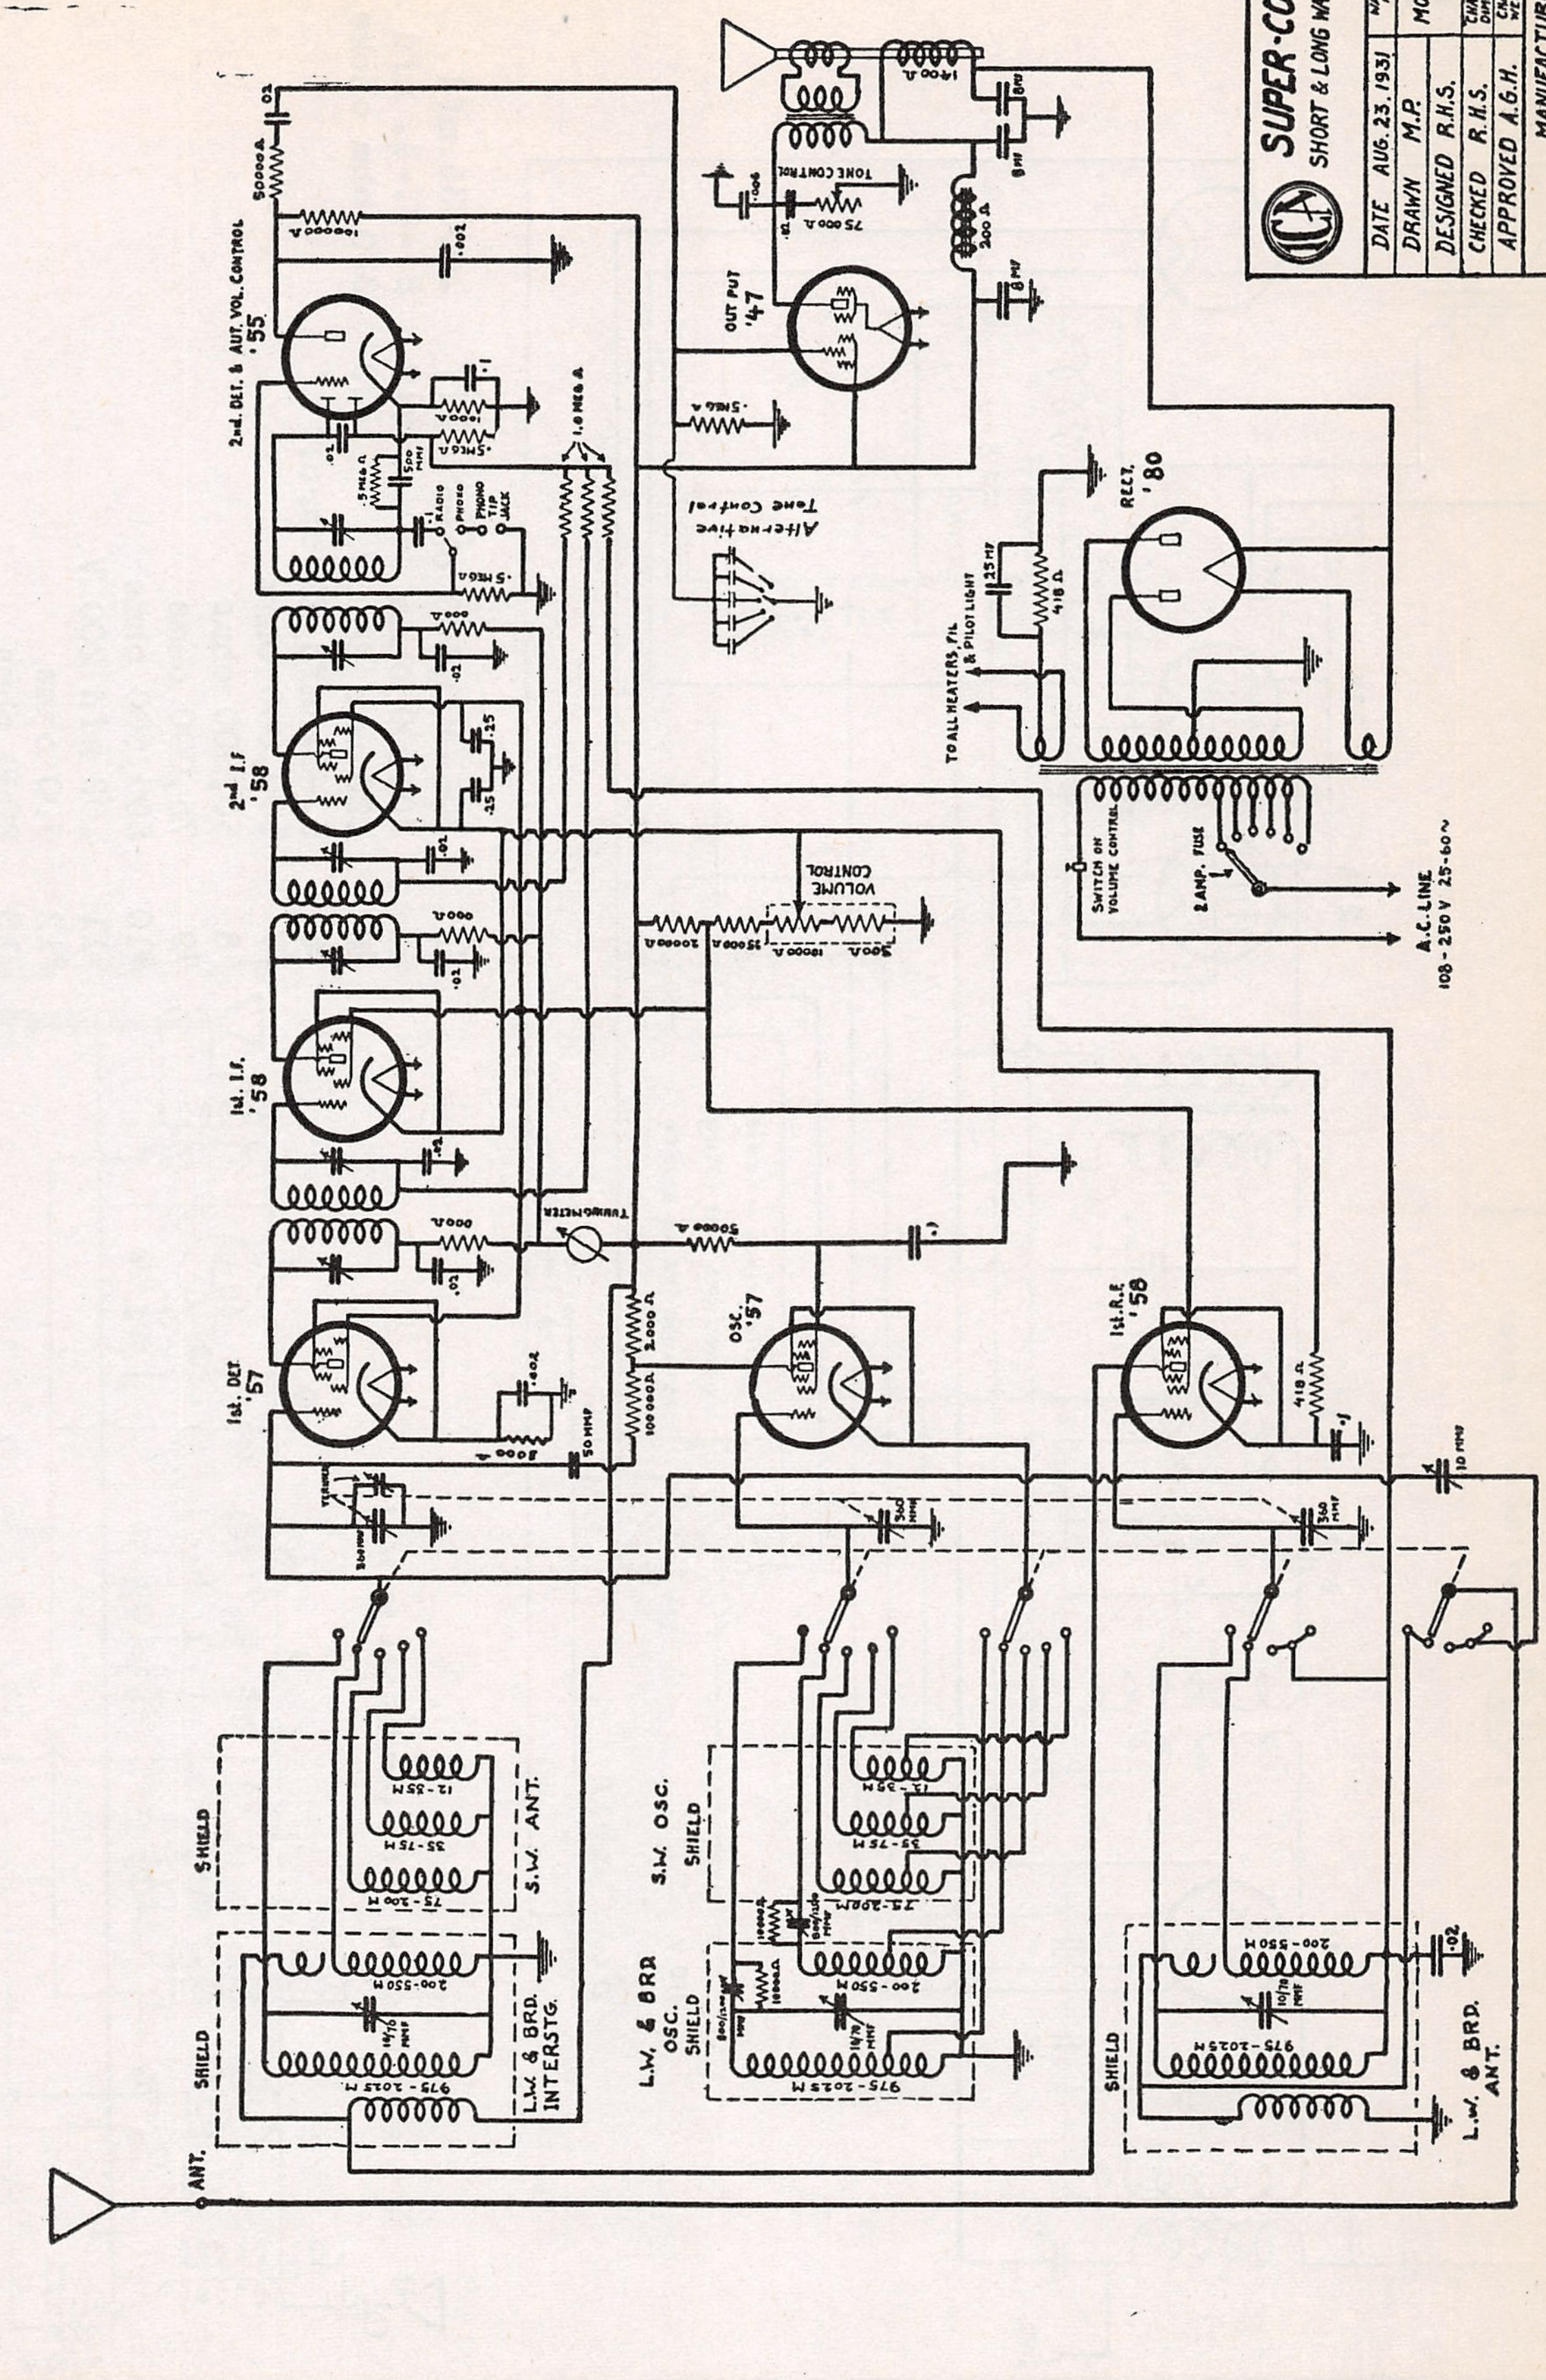
2nd. DET. & AUT. VOL. CONTROL '55
OUT PUT '47
TONE CONTROL
Alternative Tone Control
RADIO
PHONO
PHONO TIP JACK
1.0 MEG Ω
.5 MEG Ω
50000 Ω
100000 Ω
1400 Ω
75000 Ω
200 Ω
8 MF
2nd I.F. '58
1st. I.F. '58
1st. DET. '57
OSC. '57
1st. R.F. '58
RECT. '80
TO ALL HEATERS, FIL & PILOT LIGHT
25 MF
418 Ω
VOLUME CONTROL
SWITCH ON VOLUME CONTROL
2 AMP. FUSE
A.C. LINE 108-250 V 25-60~
TUNEMETER
20000 Ω
15000 Ω
18000 Ω
300 Ω
100000 Ω
2000 Ω
8000 Ω
50 MMF
350 MMF
10 MMF
SHIELD
S.W. ANT.
12-35 M
35-75 M
75-200 M
200-550 M
975-2025 M
L.W. & BRD. INTERSTG.
S.W. OSC.
L.W. & BRD. OSC.
L.W. & BRD. ANT.
ANT.

MODEL Universal Companion
AC-DC-Battery
Portable

MODEL Universal Mascot
AC-DC

INSULINE CORP. OF AMERICA

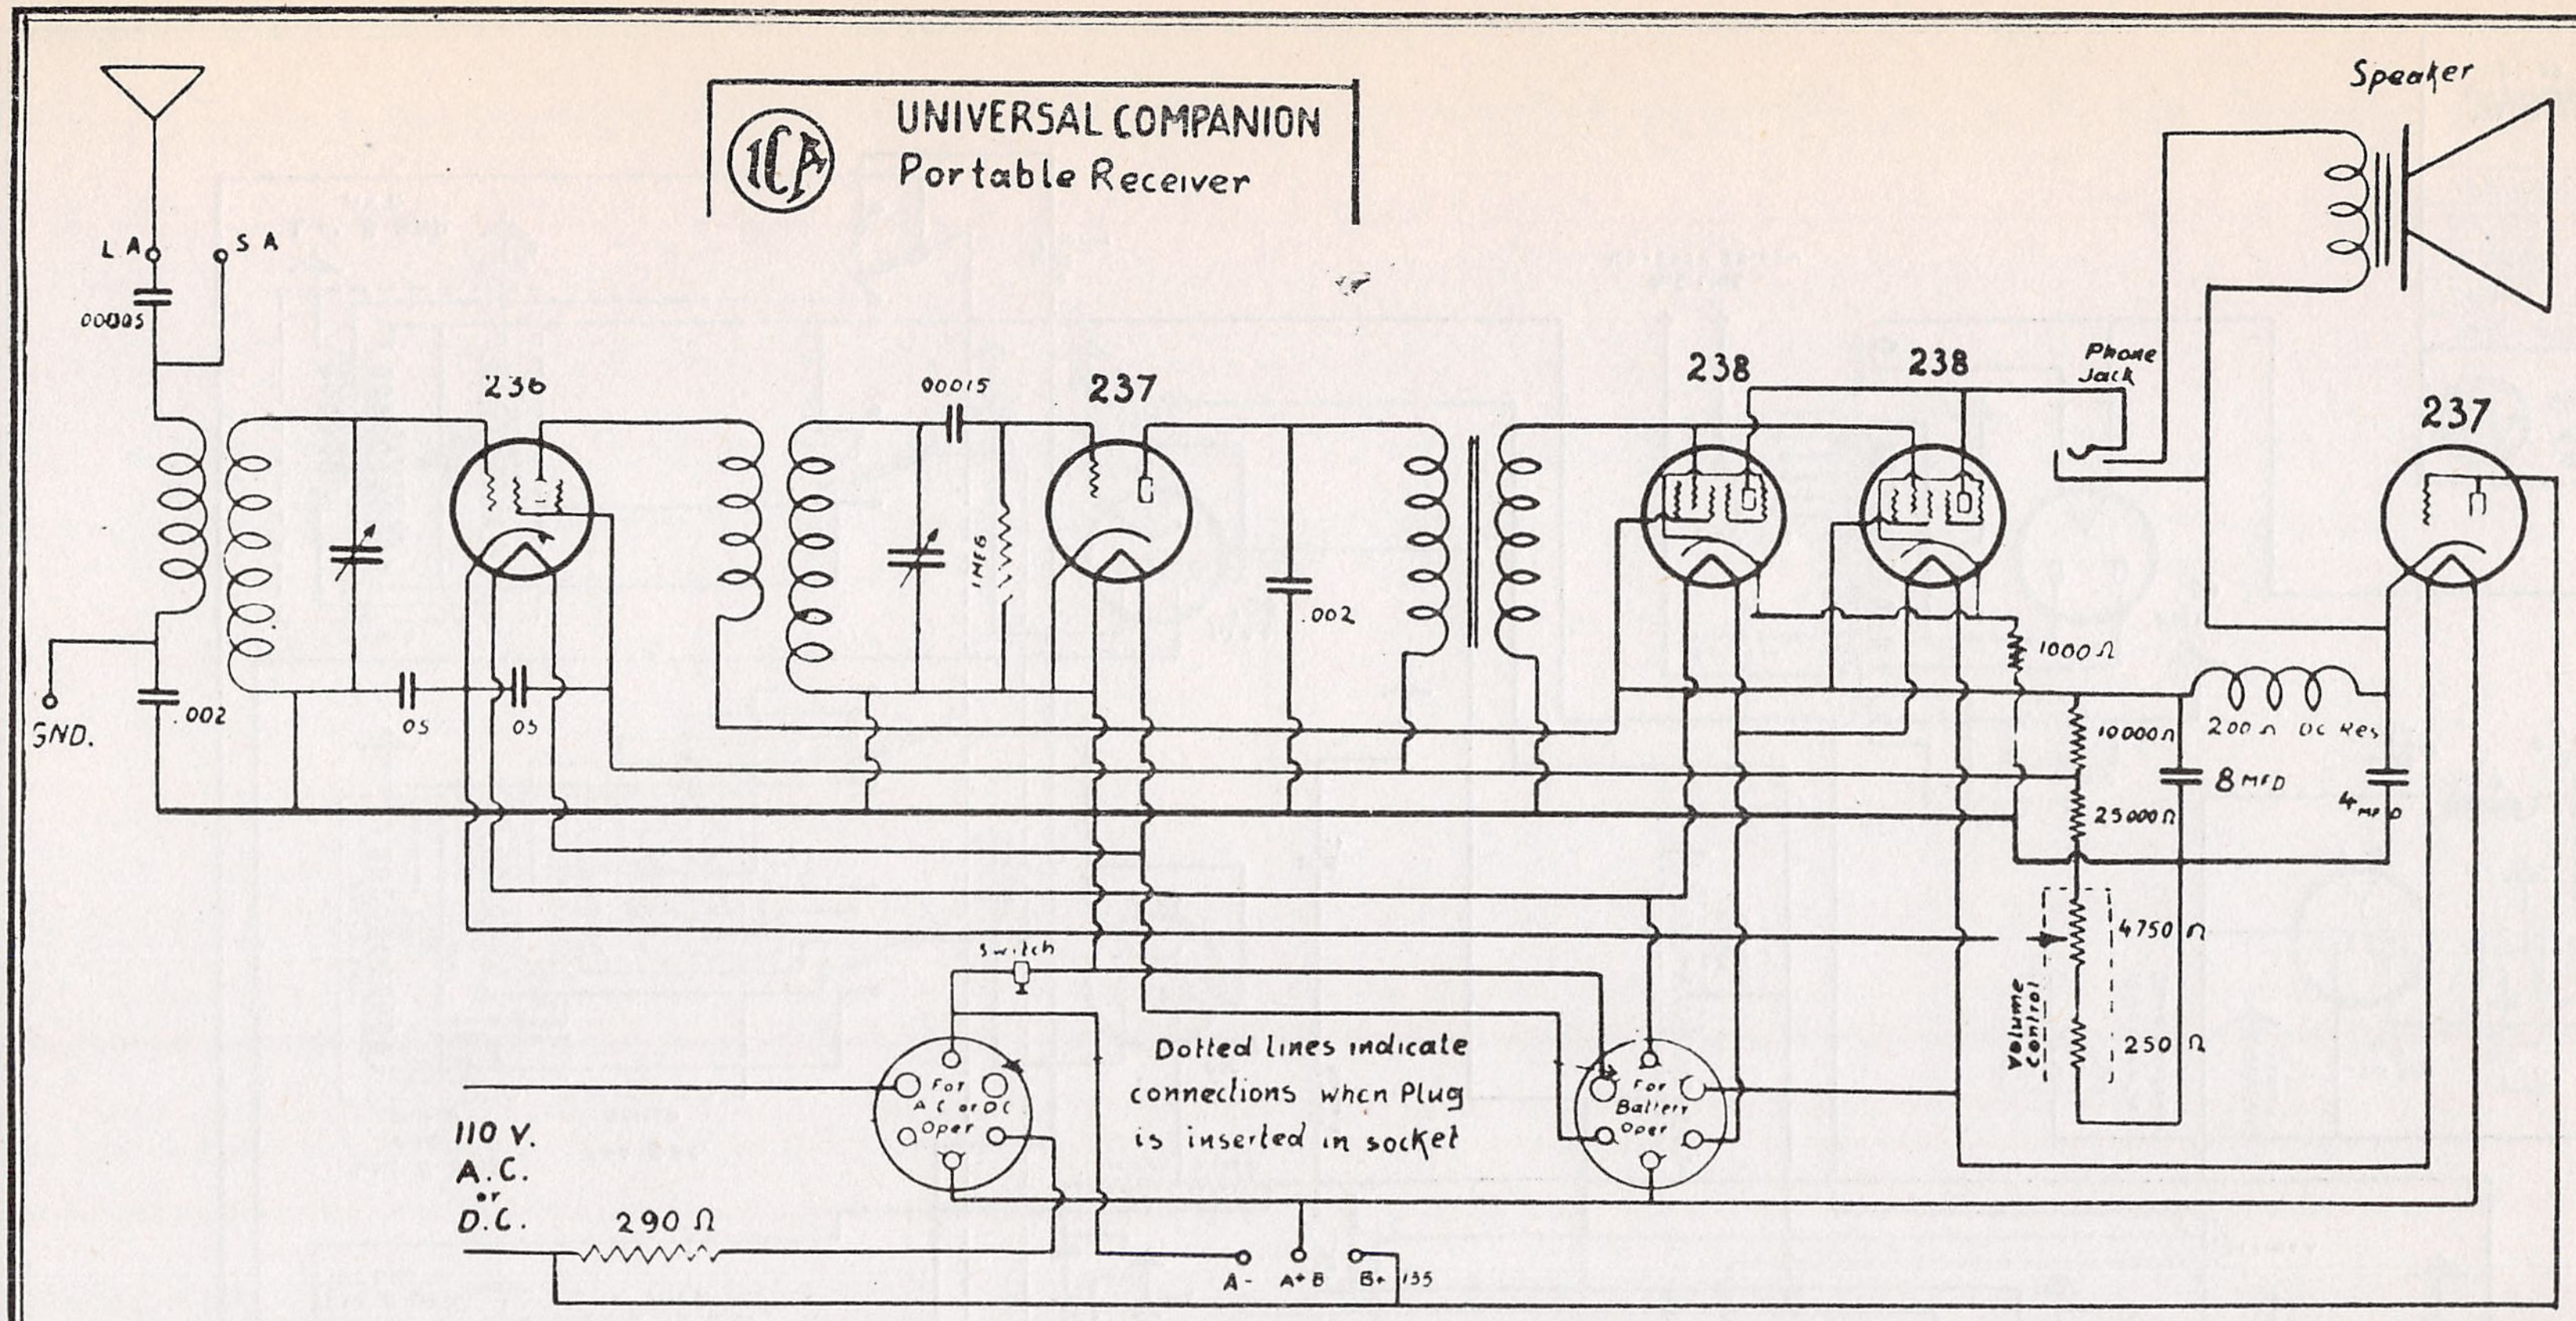
ICA
UNIVERSAL COMPANION
Portable Receiver
LA
SA
.00005
GND.
.002
236
.05
.05
.00015
237
1 M6
.002
238
238
Phone Jack
Speaker
237
1000 Ω
10000 Ω
25000 Ω
200 Ω DC Res
8 MFD
4 MFD
4750 Ω
250 Ω
Volume Control
Switch
For AC or DC Oper
For Battery Oper
Dotted lines indicate connections when Plug is inserted in socket
110 V. A.C. or D.C.
290 Ω
A-
A+B
B+ 135

WIRING DIAGRAM ICA UNIVERSAL MASCOT

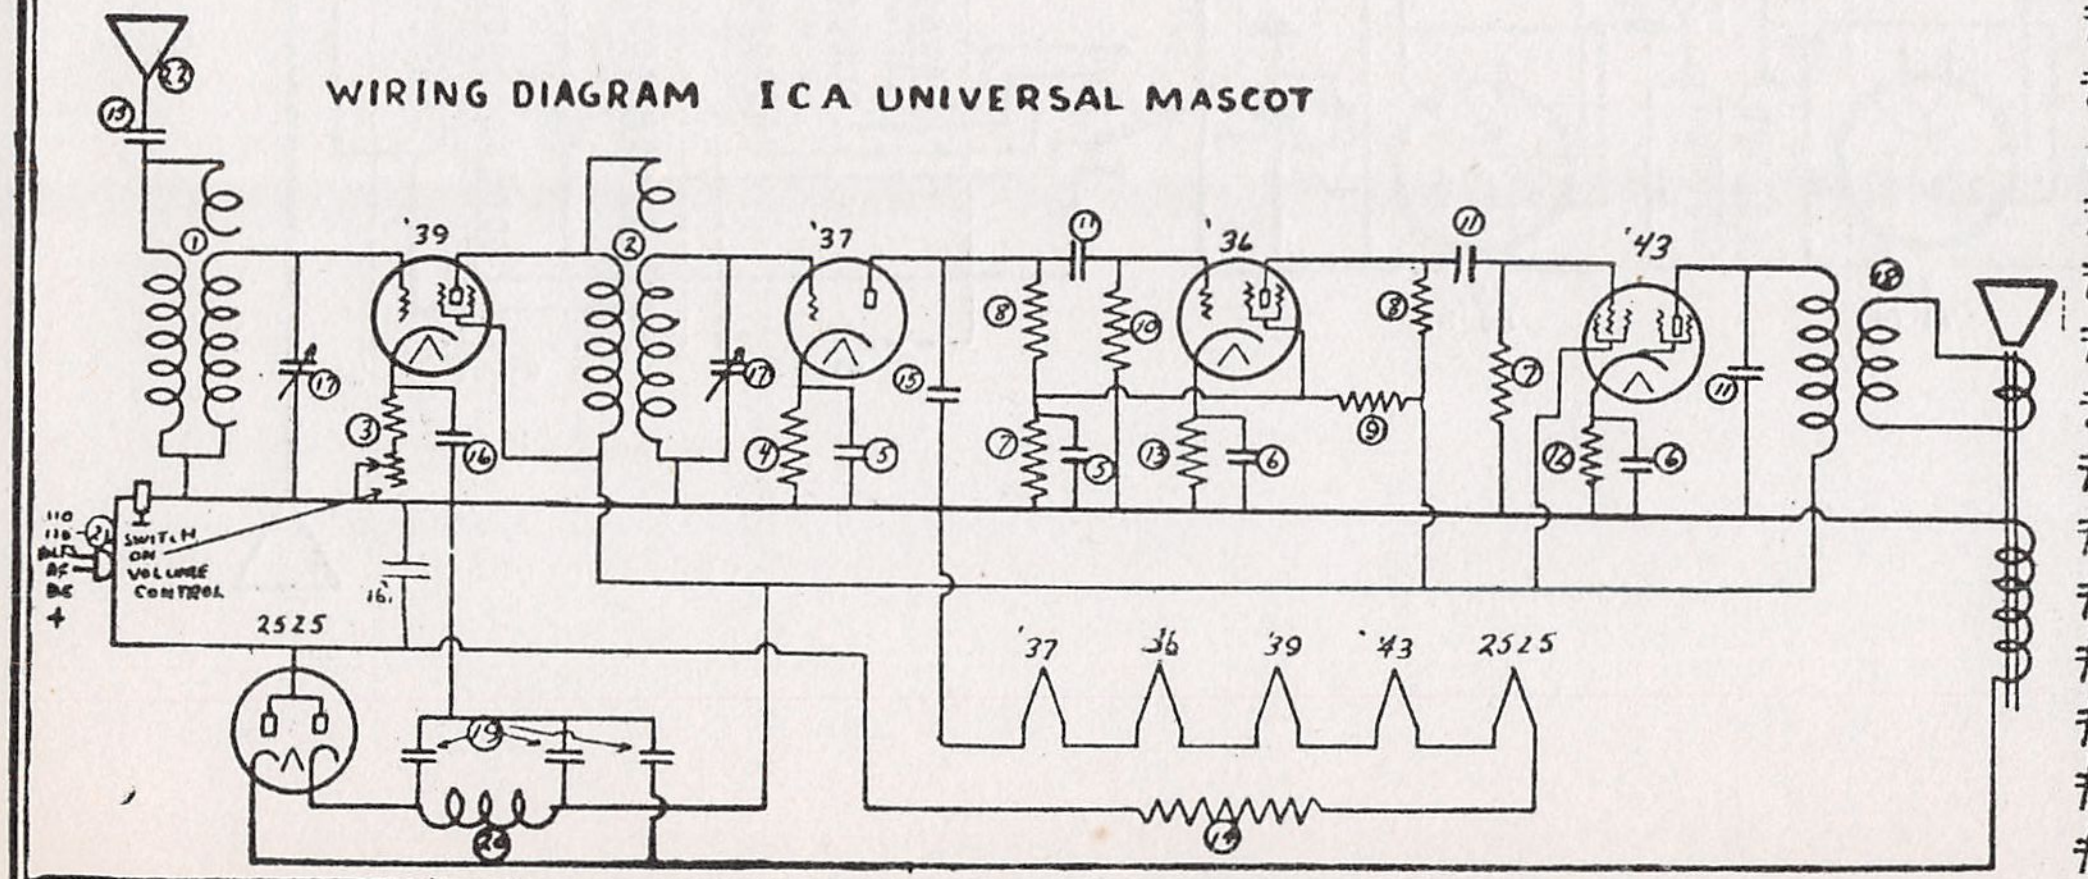
'39
'37
'36
'43
2525
110 115 Bld DC DC +
SWITCH ON VOLUME CONTROL
'37
36
39
'43
2525

#3	300-300,000 ohms	#17	.00035 mfd
#4	30,000 ohms	#19	8.-8.-4. mfd
#5	.25 mfd 200 V.	#20	330 ohm choke
#6	5.-5. mfd Electro.		
#7	100,000 ohms		
#8	50,000 ohms		
#9	75,000 ohms		
#10	500,000 ohms		
#11	.02 mfd 200 V		
#12	600 ohms		
#13	2000 ohms		
#14	170 ohms		
#15	.002 mfd		
#16	.1 mfd 200 V		

INSULINE CORP. OF AMERICA

MODEL Universal Companion AC-DC-Battery Portable (Revised)

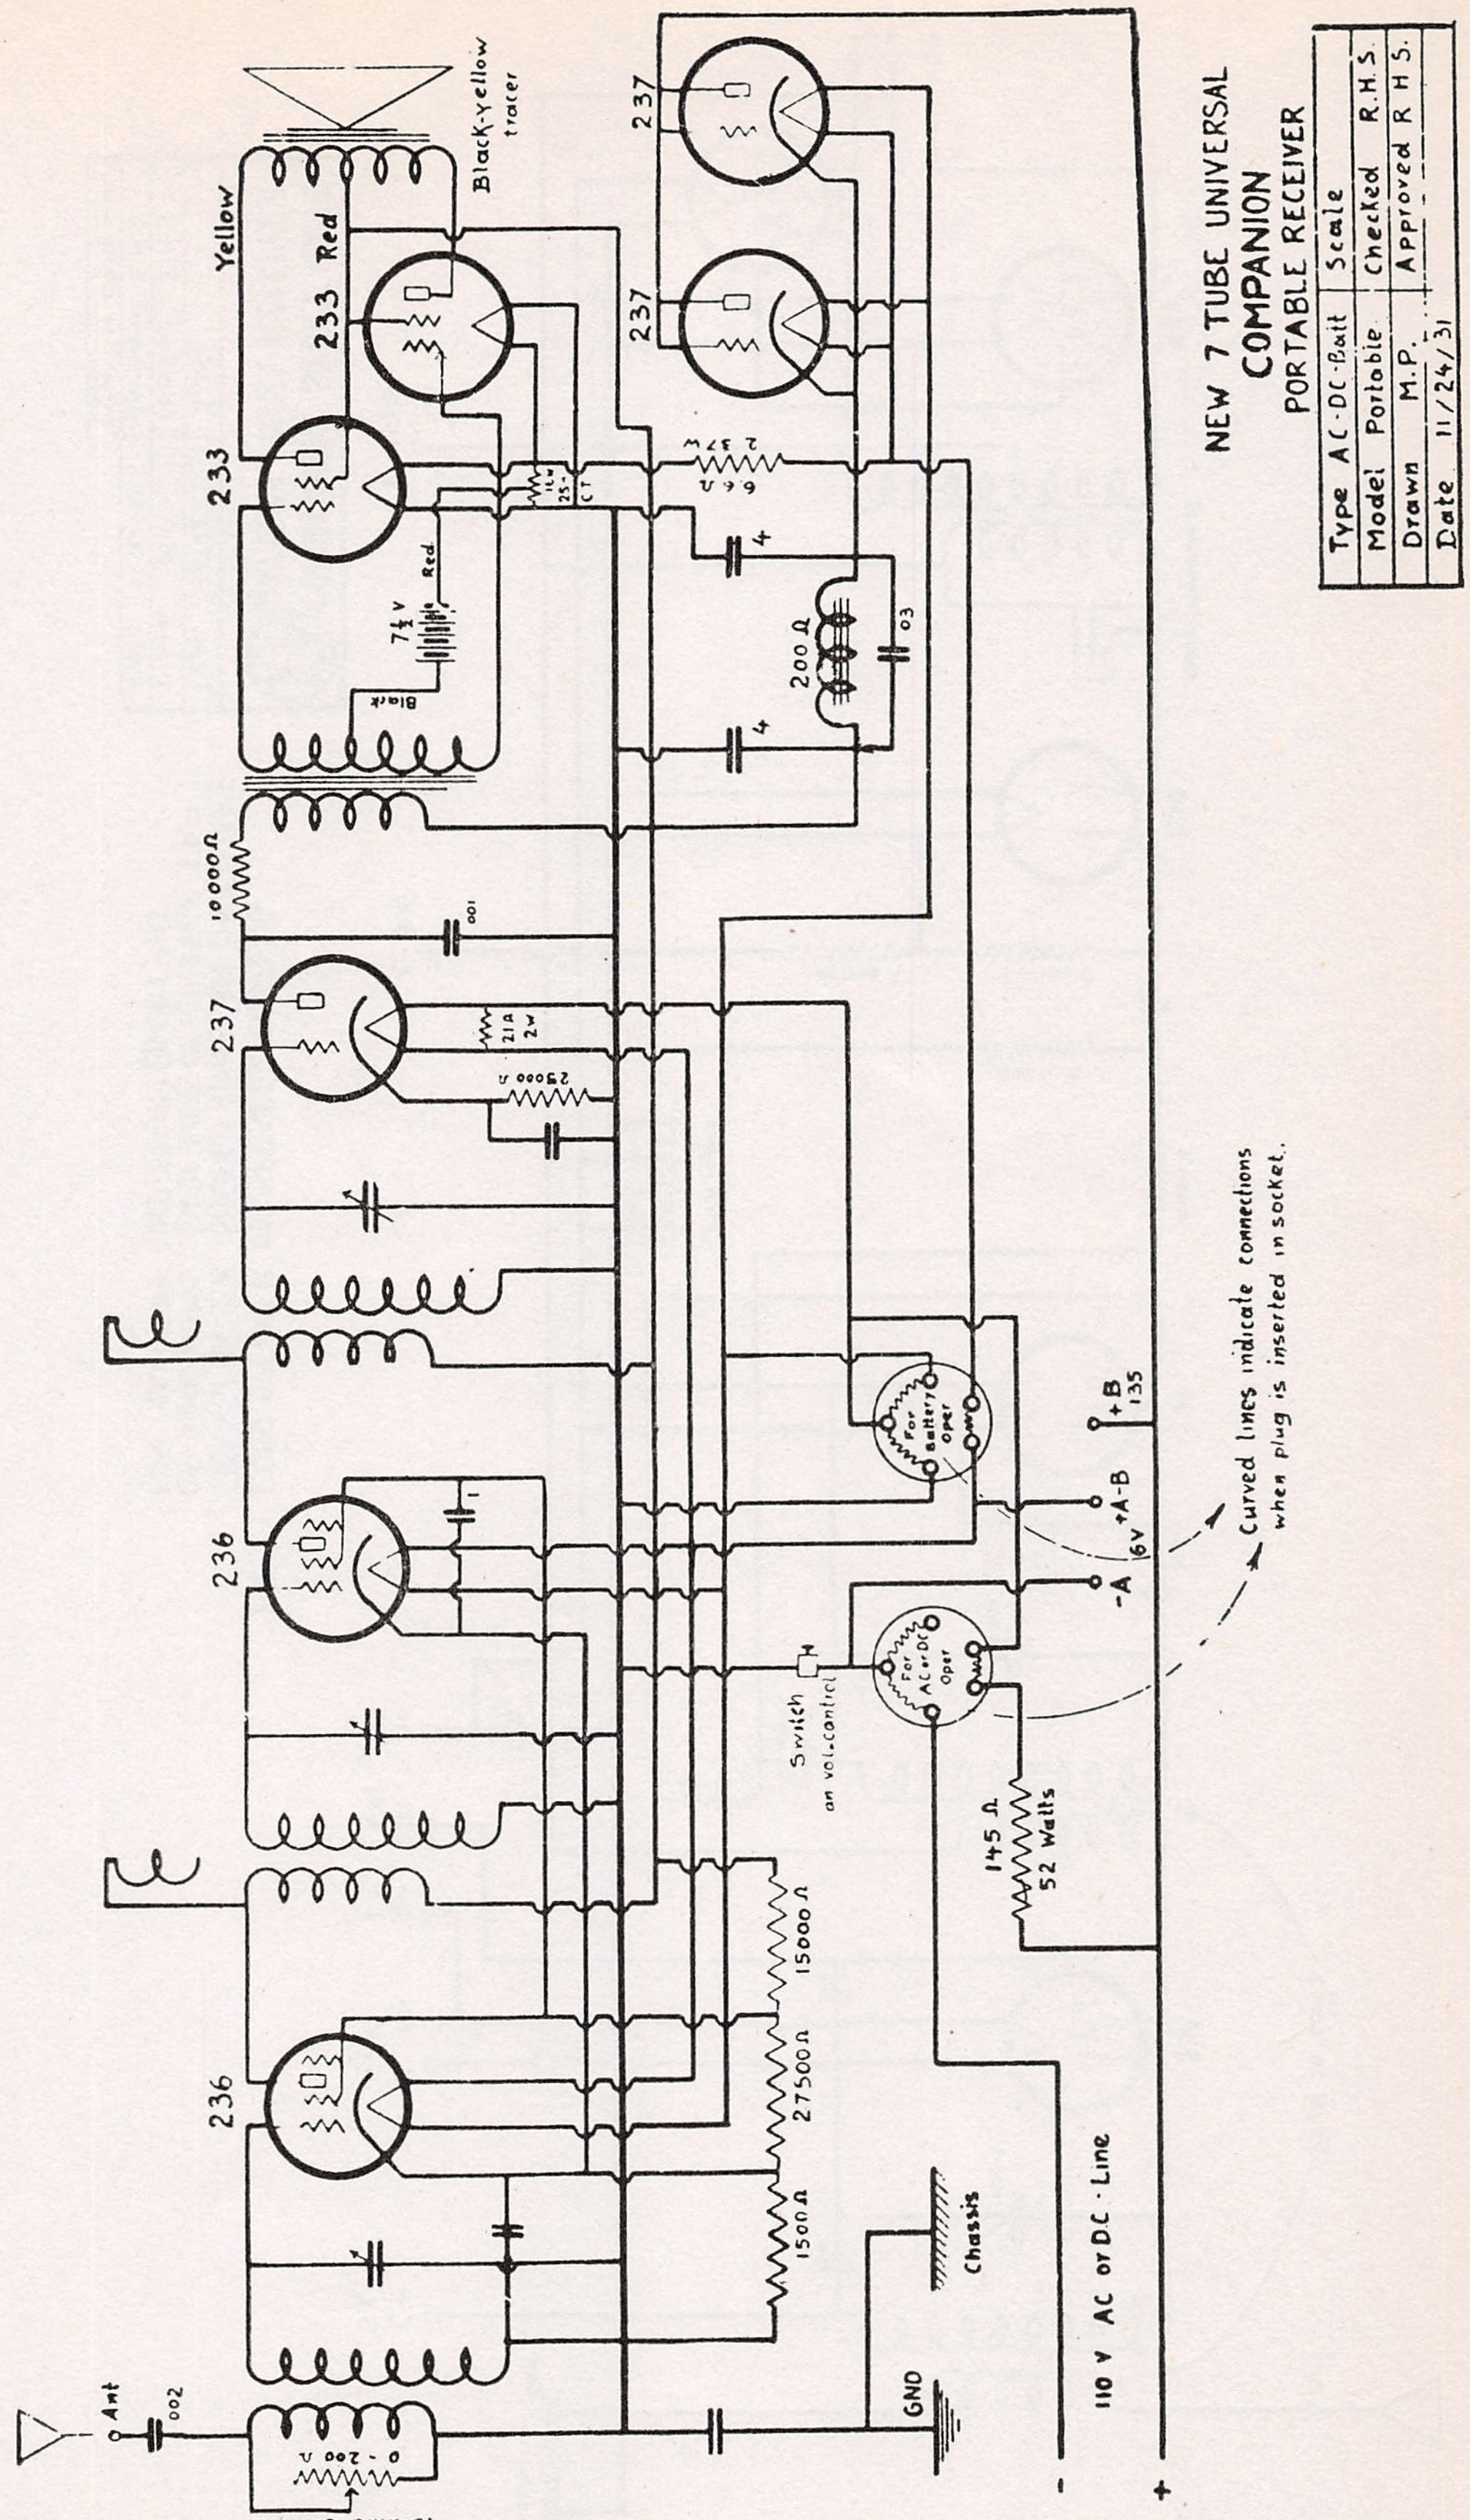
NEW 7 TUBE UNIVERSAL
COMPANION
PORTABLE RECEIVER
Type AC-DC-Batt
Scale
Model Portable
Checked R.H.S.
Drawn M.P.
Approved R.H.S.
Date 11/24/31
237
237
233
233
Red
Yellow
Black-yellow tracer
7½ V
Red
Black
2.37 Ω
6 Ω
1 Ω
25
CT
4
4
200 Ω
.03
10000 Ω
.001
237
21 Ω 2 W
25000 Ω
236
236
15000 Ω
27500 Ω
1500 Ω
For Battery Oper
For AC or DC Oper
+B 135
+A-B 6V
-A
Curved lines indicate connections when plug is inserted in socket.
Switch on vol. control
145 Ω 52 Watts
Chassis
GND
Ant
.002
0-200 Ω
Volume Control
110 V AC or DC Line
-
+

MODEL "Conqueror
SW. Battery
Schematic

INSULINE CORP. OF AMERICA

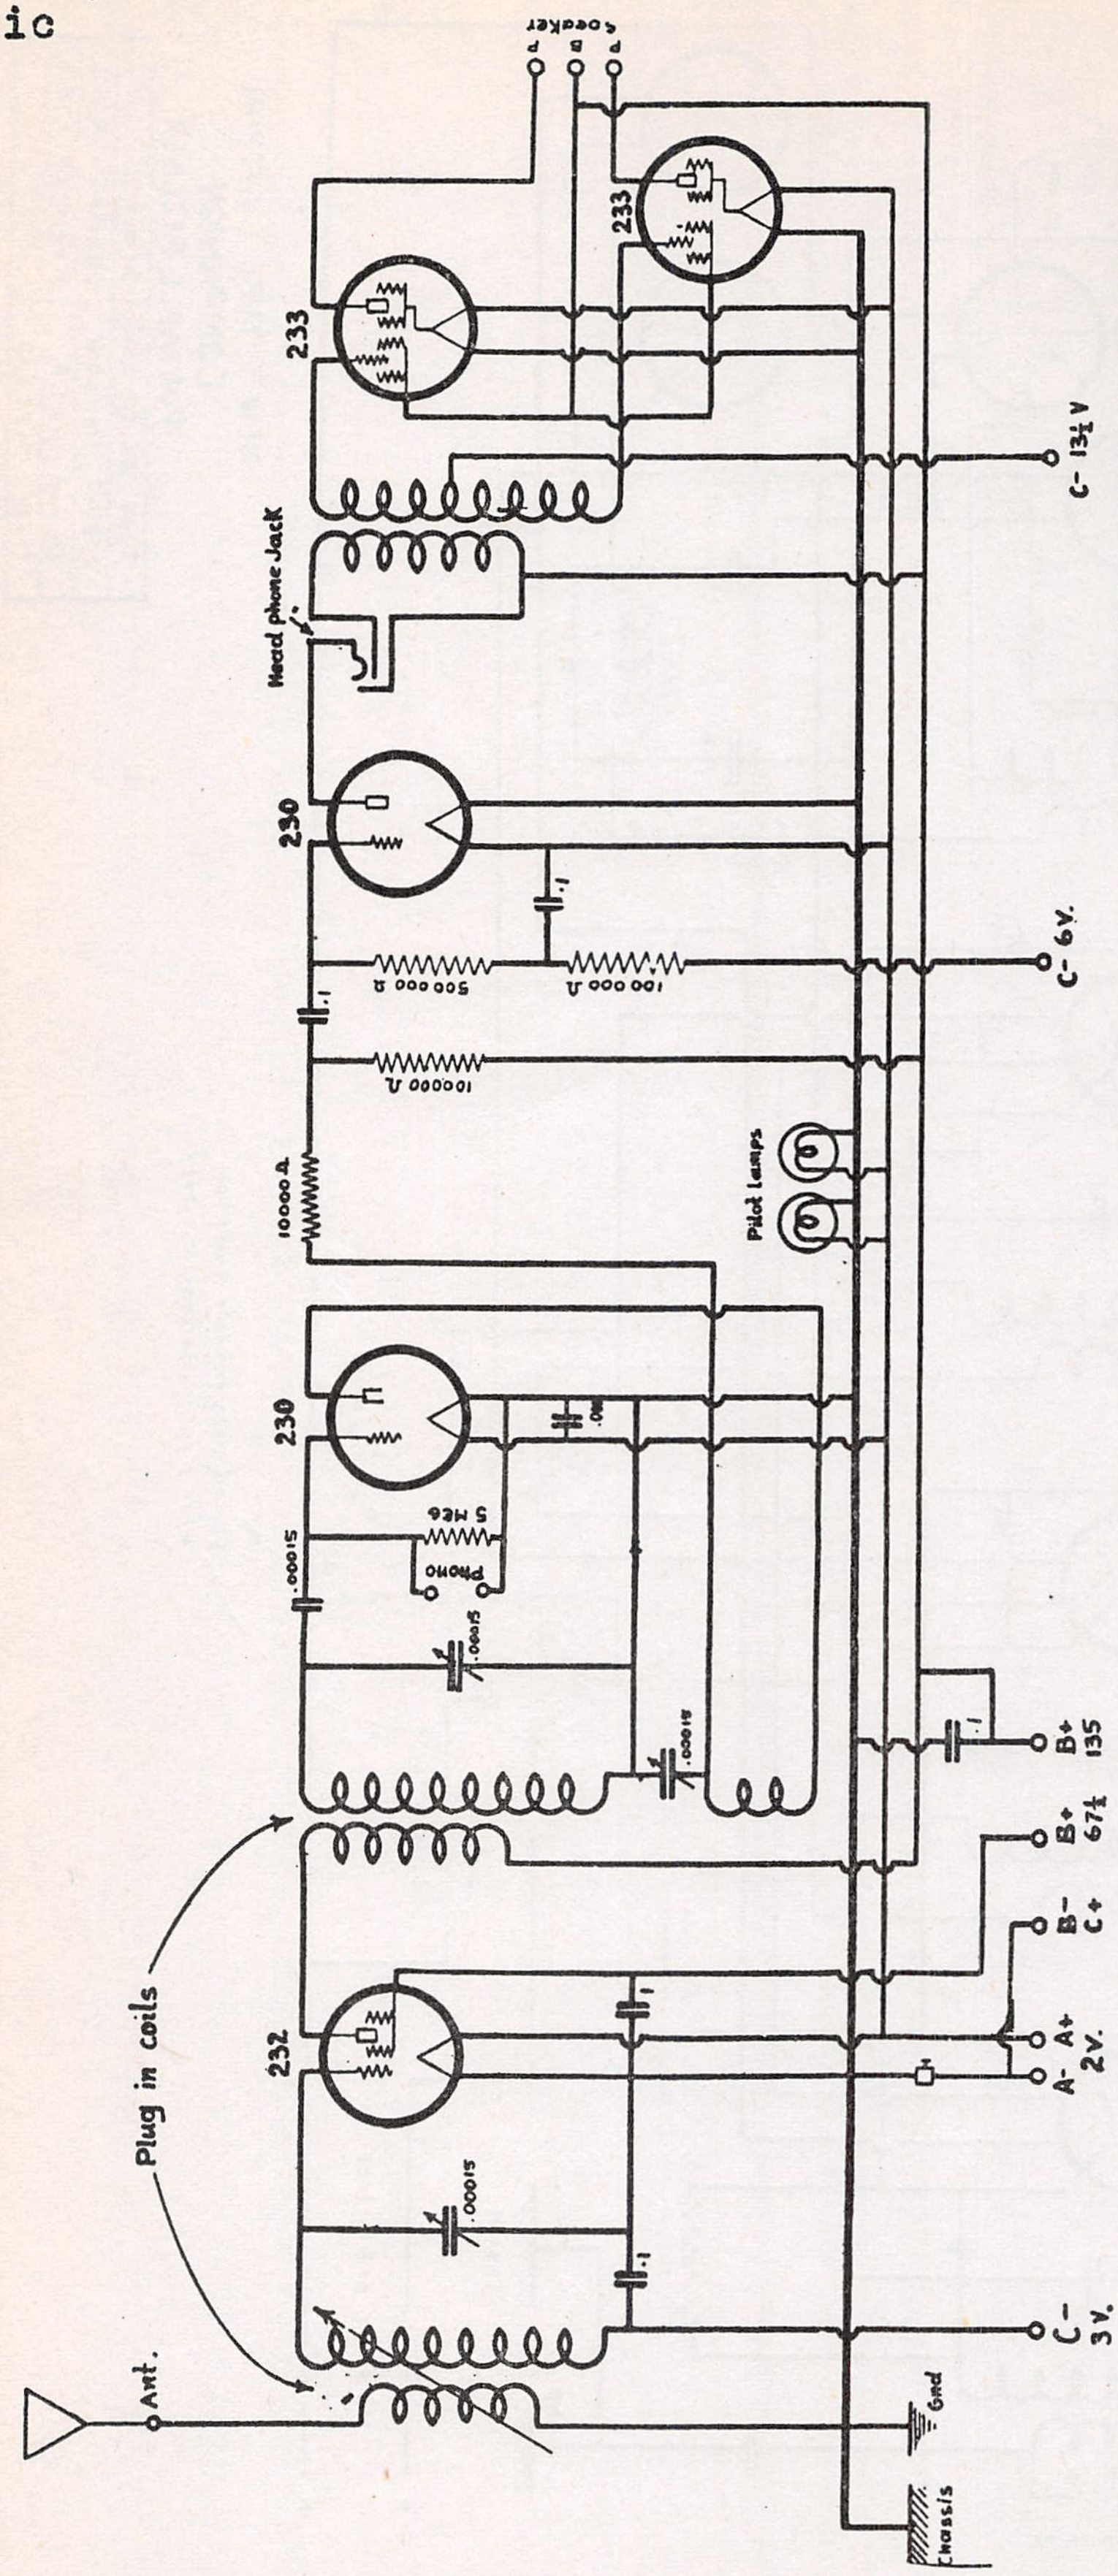
Speaker
P
B
P
233
233
Head phone Jack
230
.1
500 000 Ω
100 000 Ω
100000 Ω
10000 Ω
Pilot lamps
230
.001
5 MEG
Phono
.00015
.00015
.00015
.1
.1
.1
.00015
232
Plug in coils
Ant.
Gnd
Chassis
C- 13½ V
C- 6V.
B+ 135
B+ 67½
B- C+
A+
A- 2V.
C- 3V.

CONQUEROR SHORT WAVE BATTERY MODEL RECEIVER

Type	BATTERY	Scale	
Drawn	M.P.	Checked	R.H.S.
Date	11.27.31.	Approved	R.H.S.
		Wave Range	17 - 550 METERS

NOTE: LOUD SPEAKER OR SPEAKER COUPLING
TRANSFORMER SHOULD HAVE AN IMPEDANCE
OF 7500 OHMS EACH SIDE OF CENTER TAP
FOR MAXIMUM UNDISTORTED OUTPUT

"CONQUEROR" S.W. BATTERY MODEL RECEIVER

MODEL 33

JACKSON-BELL CO., LTD.

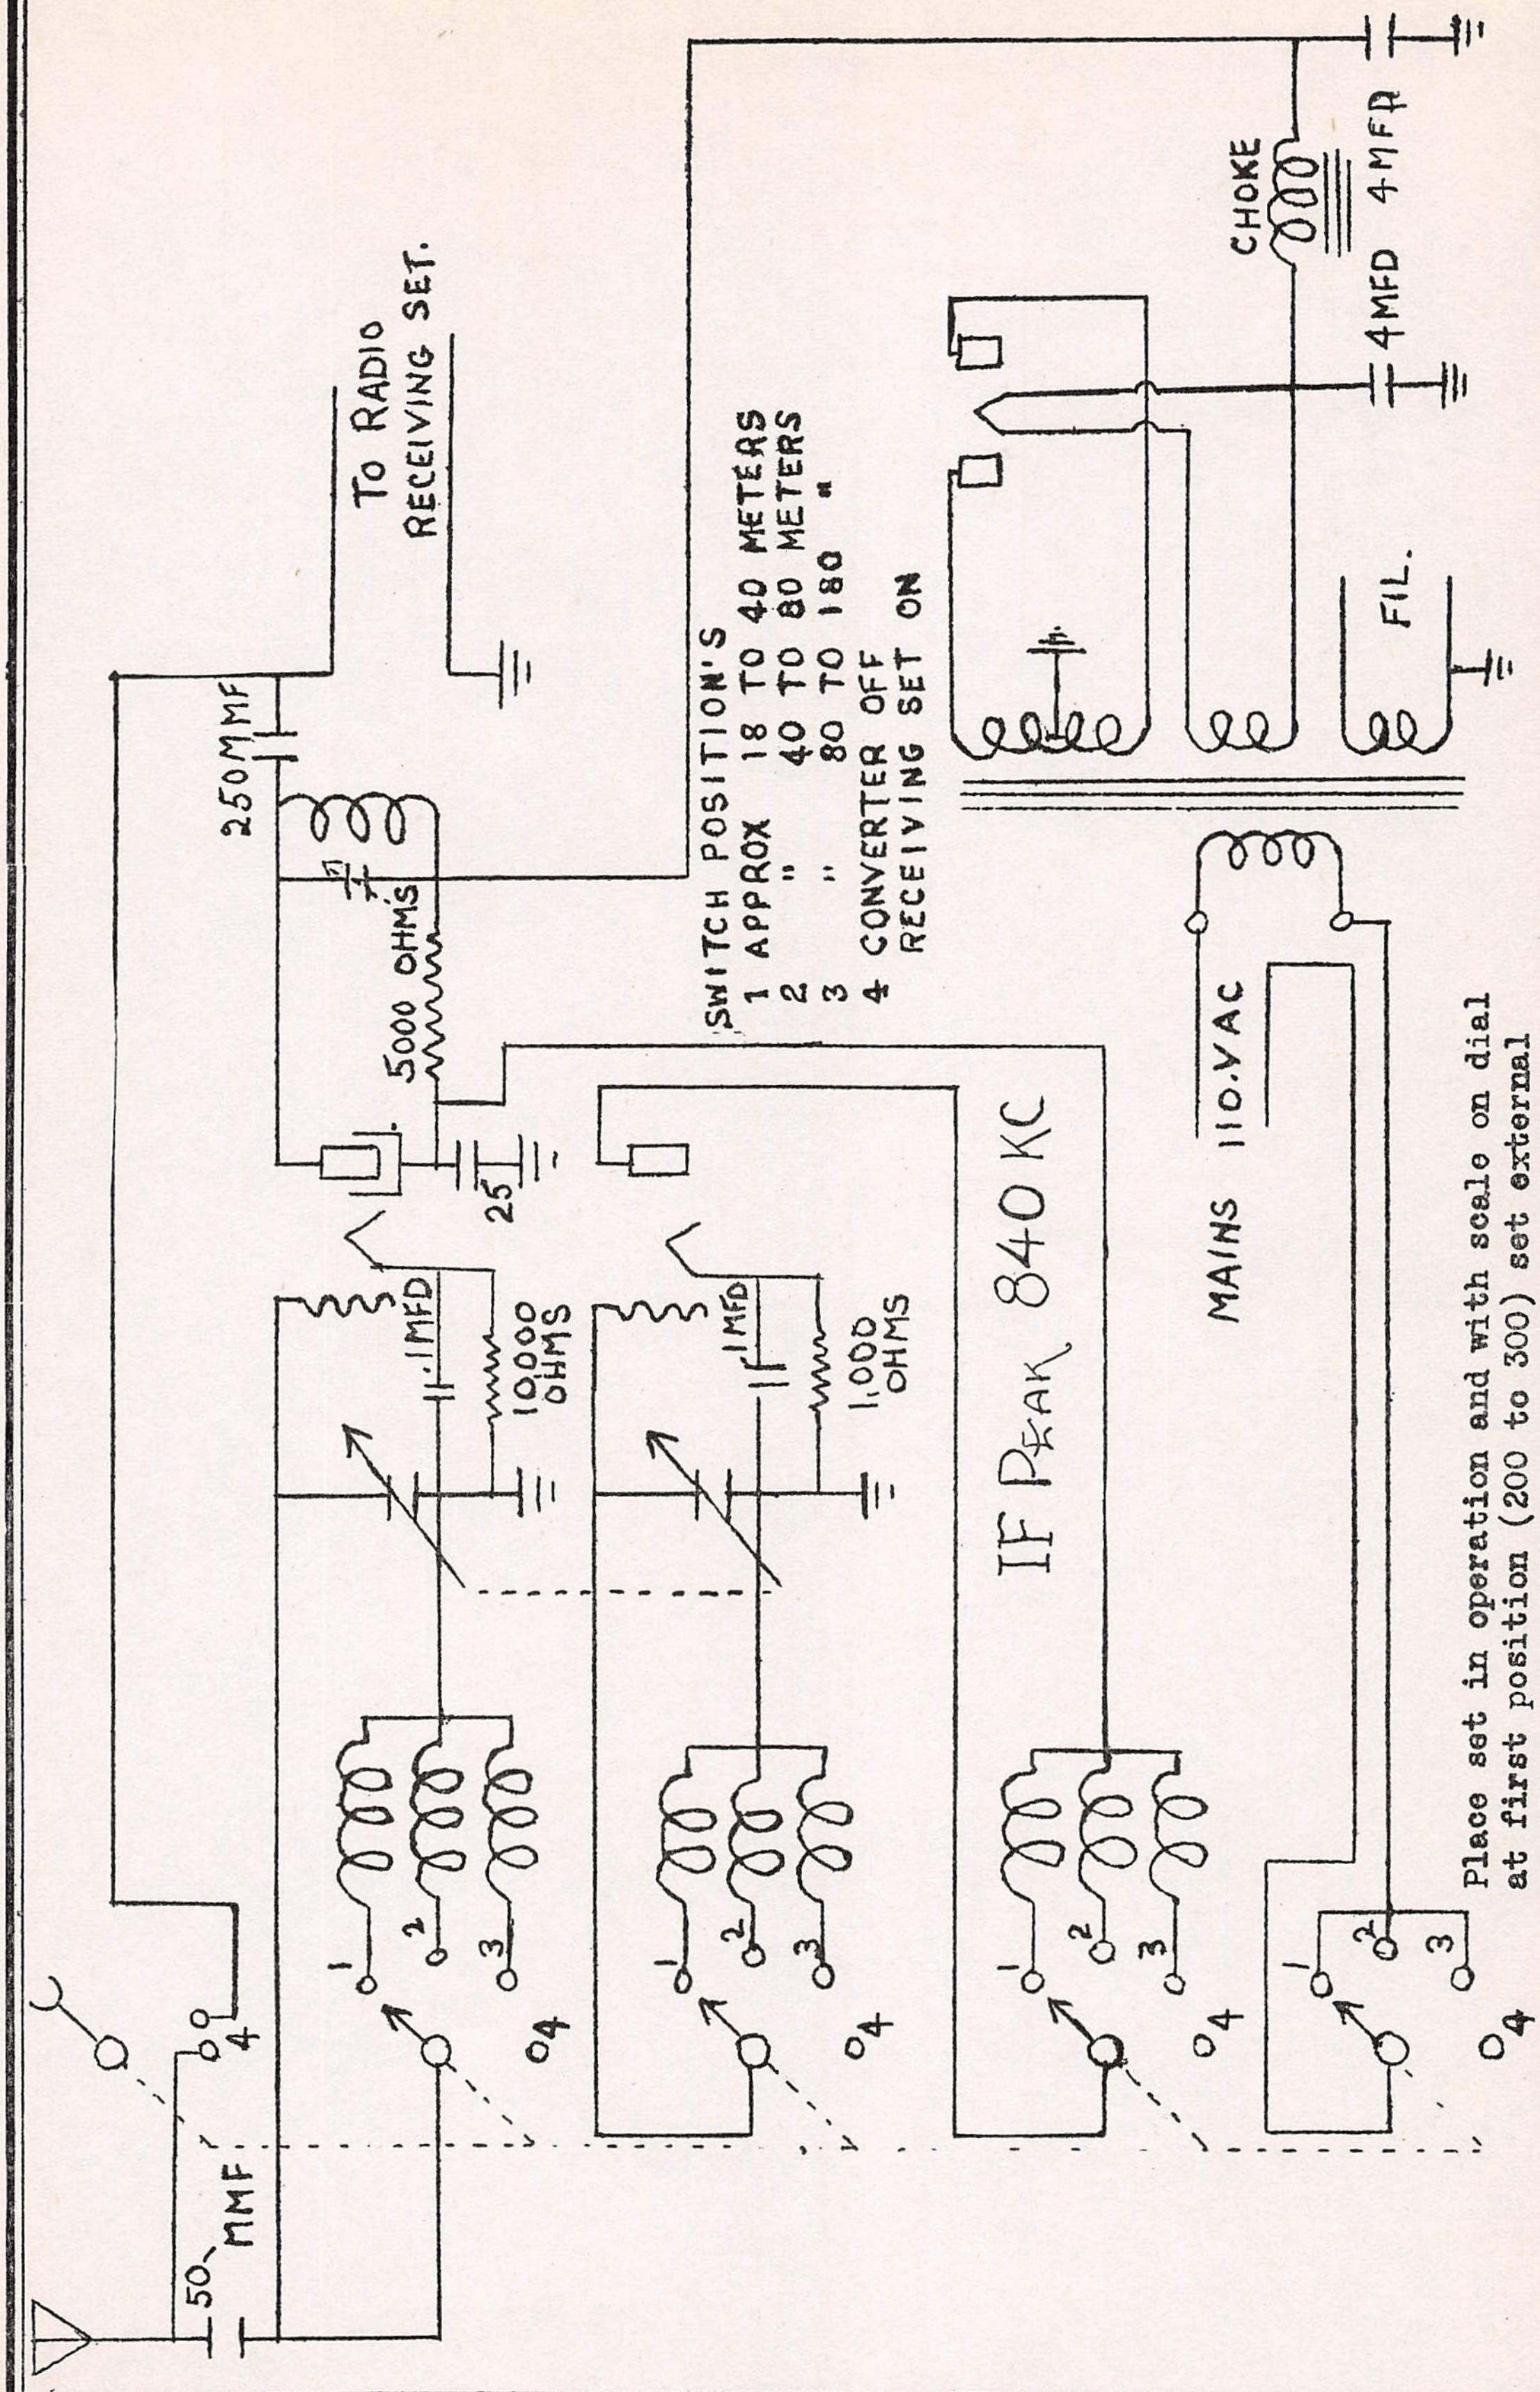
To Radio Receiving Set.
250 MMF
5000 OHMS
25
.1 MFD
10,000 OHMS
1,000 OHMS
IF Peak 840 KC
MAINS 110.V AC
CHOKE
4 MFD
4 MFD
FIL.
50 MMF
1
2
3
4
SWITCH POSITION'S
1 APPROX 18 TO 40 METERS
2 " 40 TO 80 METERS
3 " 80 TO 180 "
4 CONVERTER OFF RECEIVING SET ON

Place set in operation and with scale on dial at first position (200 to 300) set external oscillator at 1710 kc and adjust oscillator trimmer on variable condenser. The oscillator trimmer is the second section viewed from the front of the chassis. Next adjust front trimmer to resonance and maximum output.

To check the '27 oscillator tube, set the dial at approximately 35 meters. Now, reading, the screen grid voltage, touch the grid winding of the oscillator system with the finger. The screen voltage should mount 20 volts.

MODELS 38 & 40
MODEL 22
MODEL 36

COLIN B. KENNEDY CORP.

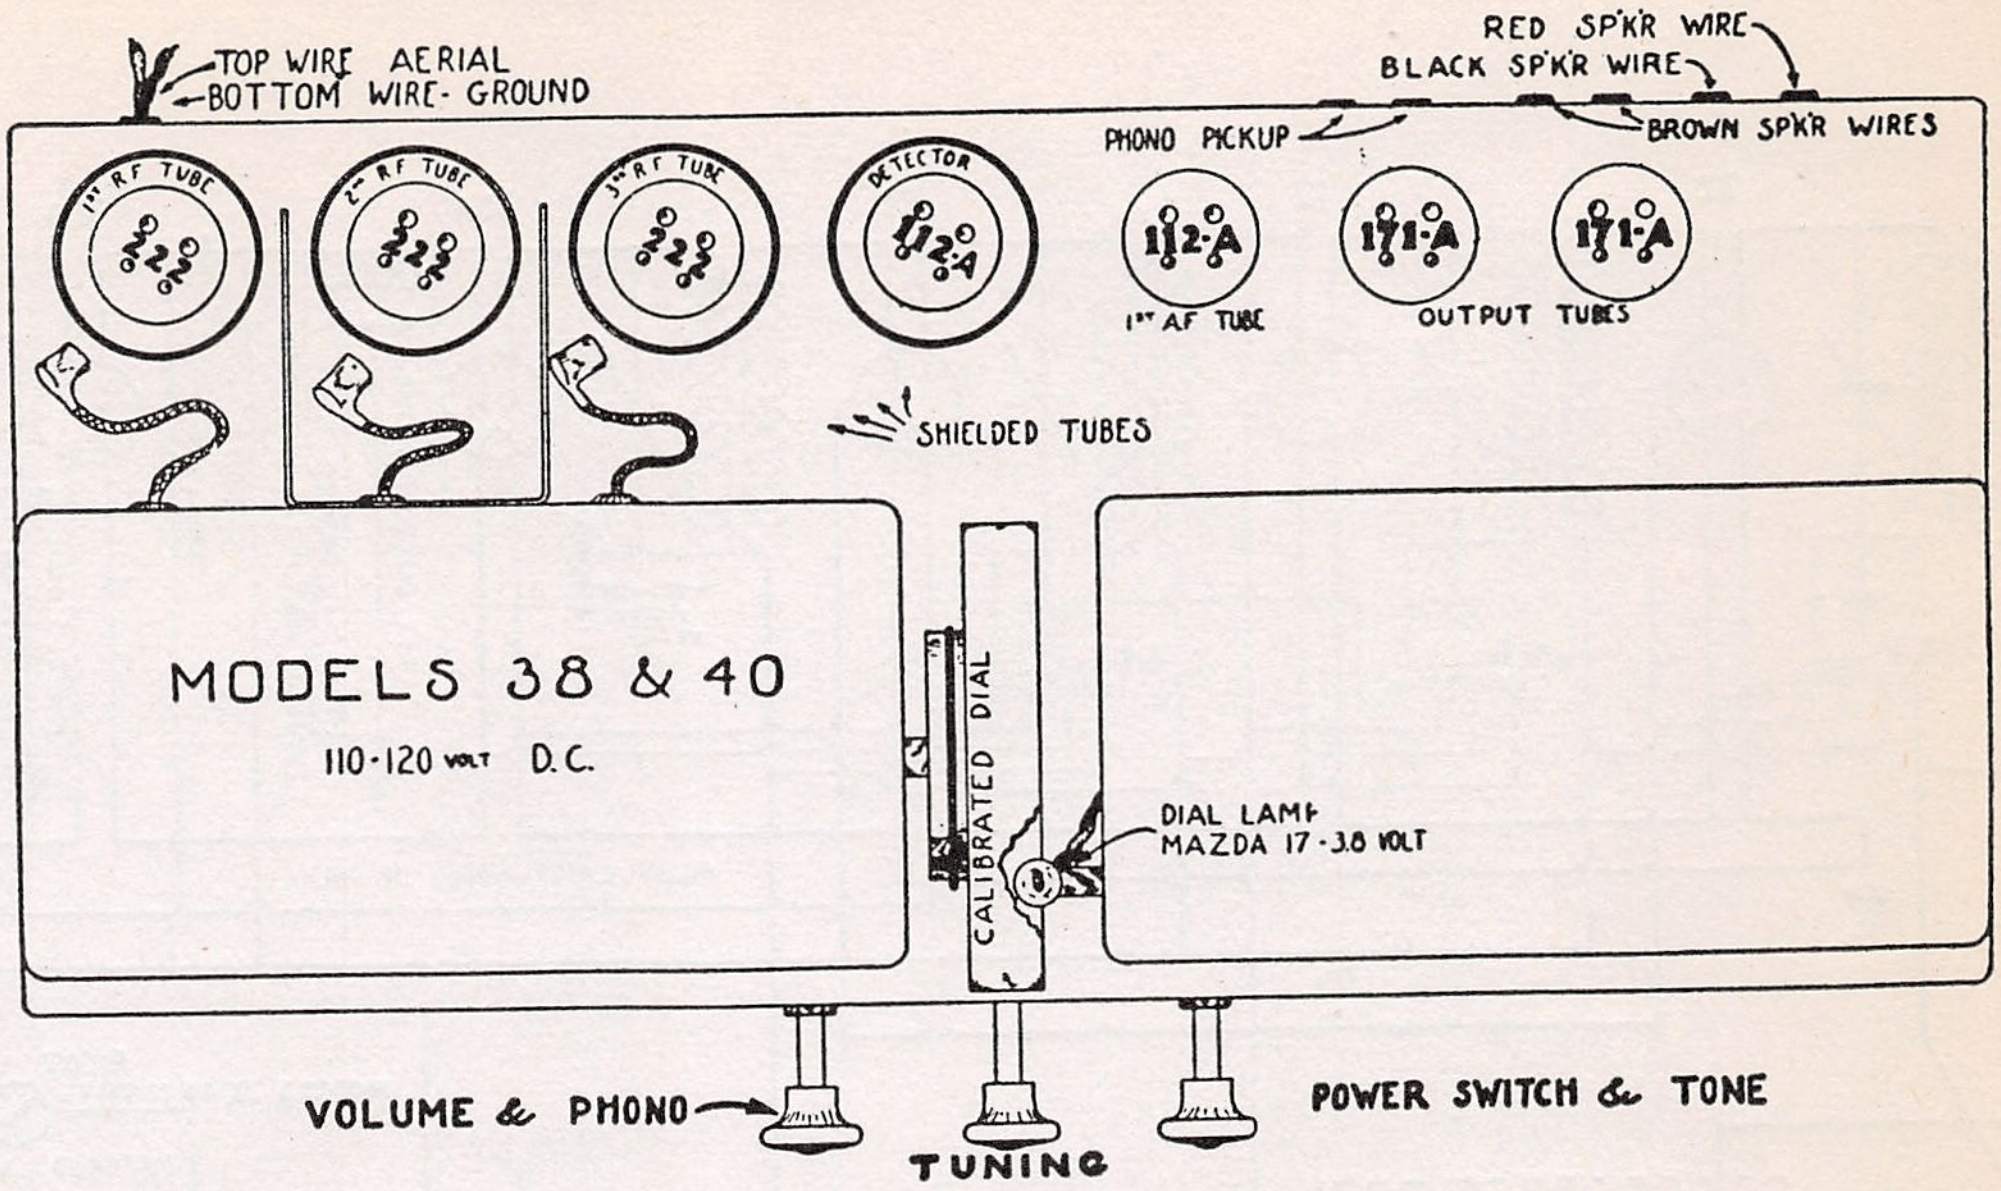
TOP WIRE AERIAL
BOTTOM WIRE - GROUND
RED SP'K'R WIRE
BLACK SP'K'R WIRE
BROWN SP'K'R WIRES
PHONO PICKUP
1ST RF TUBE
222
2ND RF TUBE
222
3RD RF TUBE
222
DETECTOR
112-A
112-A
1ST AF TUBE
171-A
171-A
OUTPUT TUBES
SHIELDED TUBES
MODELS 38 & 40
110-120 VOLT D.C.
CALIBRATED DIAL
DIAL LAMP
MAZDA 17 - 3.8 VOLT
VOLUME & PHONO
TUNING
POWER SWITCH & TONE

Tube Socket Diagram for Chassis Models Nos. 38 and 40

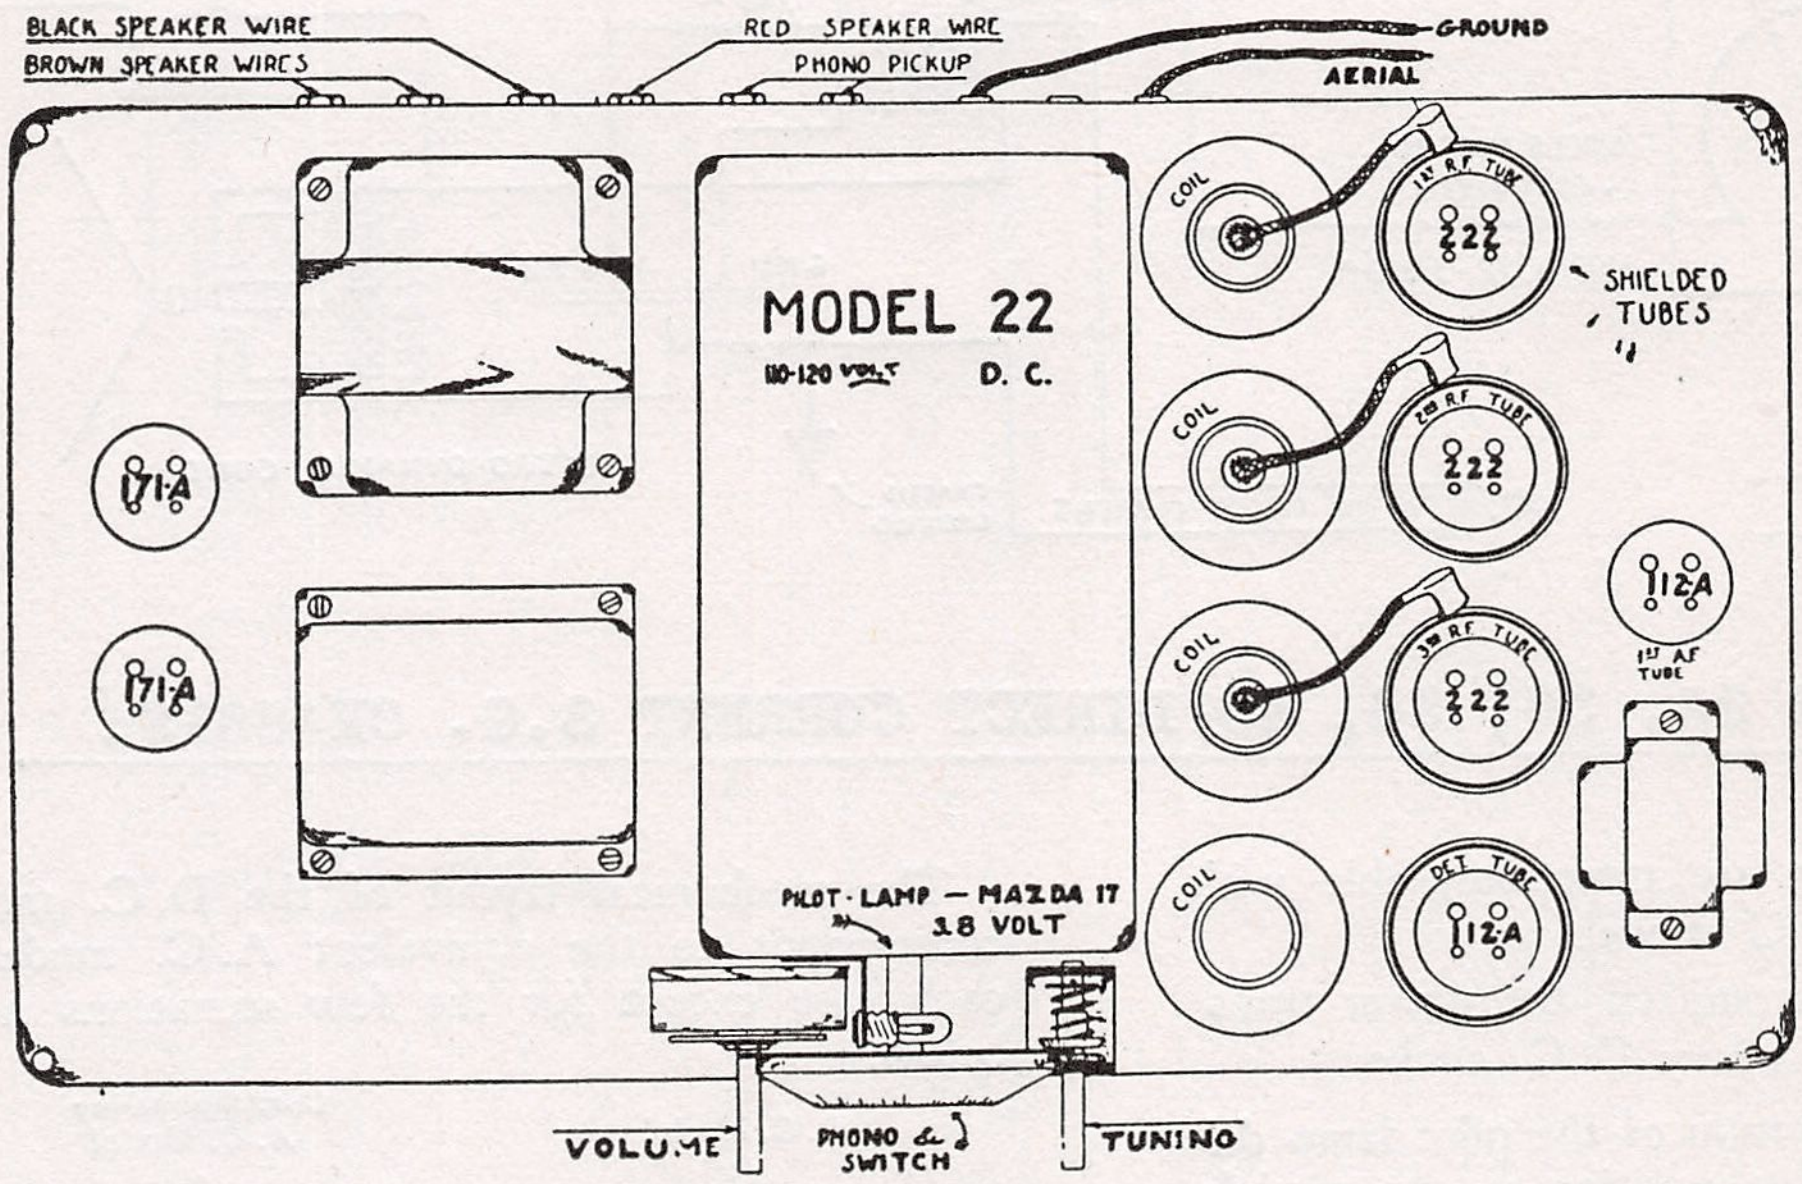
BLACK SPEAKER WIRE
BROWN SPEAKER WIRES
RED SPEAKER WIRE
PHONO PICKUP
GROUND
AERIAL
171-A
171-A
MODEL 22
110-120 VOLT D. C.
PILOT-LAMP — MAZDA 17
3.8 VOLT
COIL
COIL
COIL
COIL
1ST RF TUBE
222
2ND RF TUBE
222
3RD RF TUBE
222
DET TUBE
112-A
SHIELDED TUBES
112-A
1ST AF TUBE
VOLUME
PHONO & SWITCH
TUNING

Tube Socket Diagram for Chassis Model No. 22

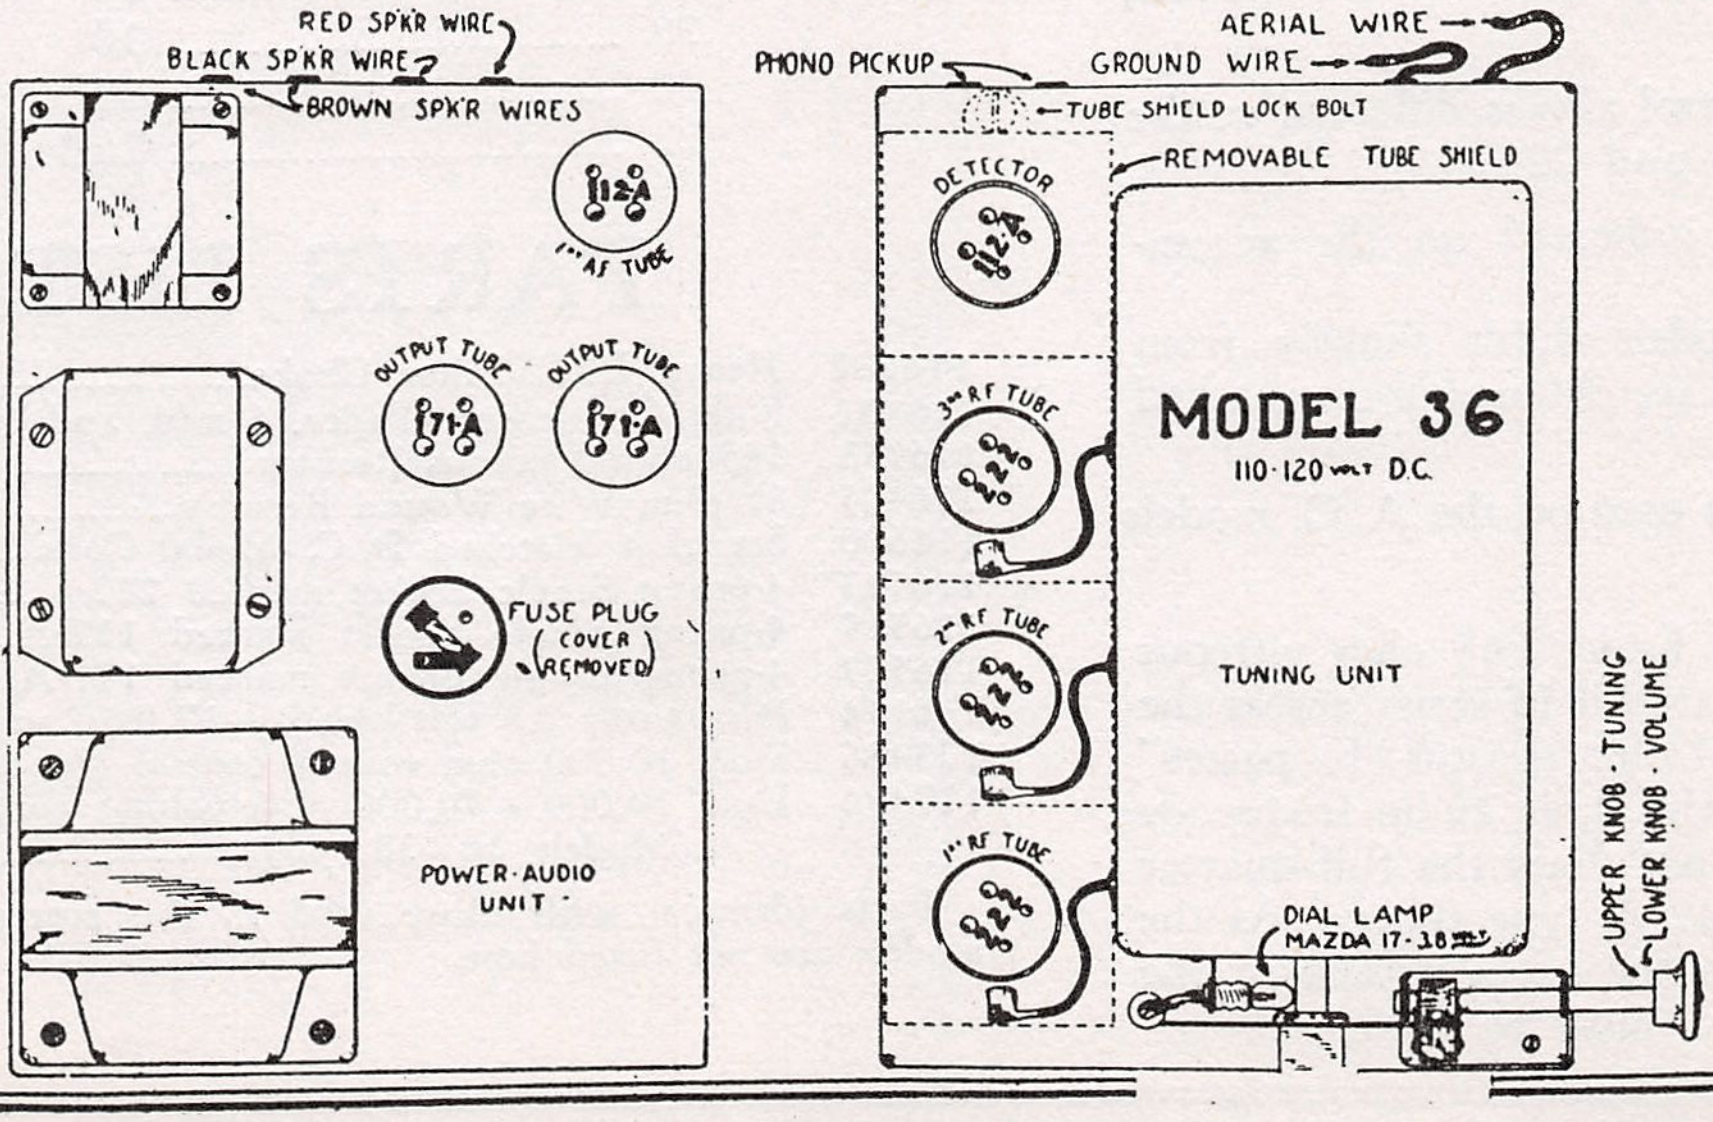
RED SP'K'R WIRE
BLACK SP'K'R WIRE
BROWN SP'K'R WIRES
112-A
1ST AF TUBE
OUTPUT TUBE
171-A
OUTPUT TUBE
171-A
FUSE PLUG (COVER REMOVED)
POWER-AUDIO UNIT
PHONO PICKUP
AERIAL WIRE
GROUND WIRE
TUBE SHIELD LOCK BOLT
REMOVABLE TUBE SHIELD
DETECTOR
112-A
3RD RF TUBE
222
2ND RF TUBE
222
1ST RF TUBE
222
MODEL 36
110-120 VOLT D.C.
TUNING UNIT
DIAL LAMP
MAZDA 17-3.8 VOLT
UPPER KNOB - TUNING
LOWER KNOB - VOLUME

Tube Socket Diagram for Chassis Model No. 36

MODELS 22,36,38,40
Direct Current S.G. Chassis
Schematic,Data

COLIN B. KENNEDY CORP.

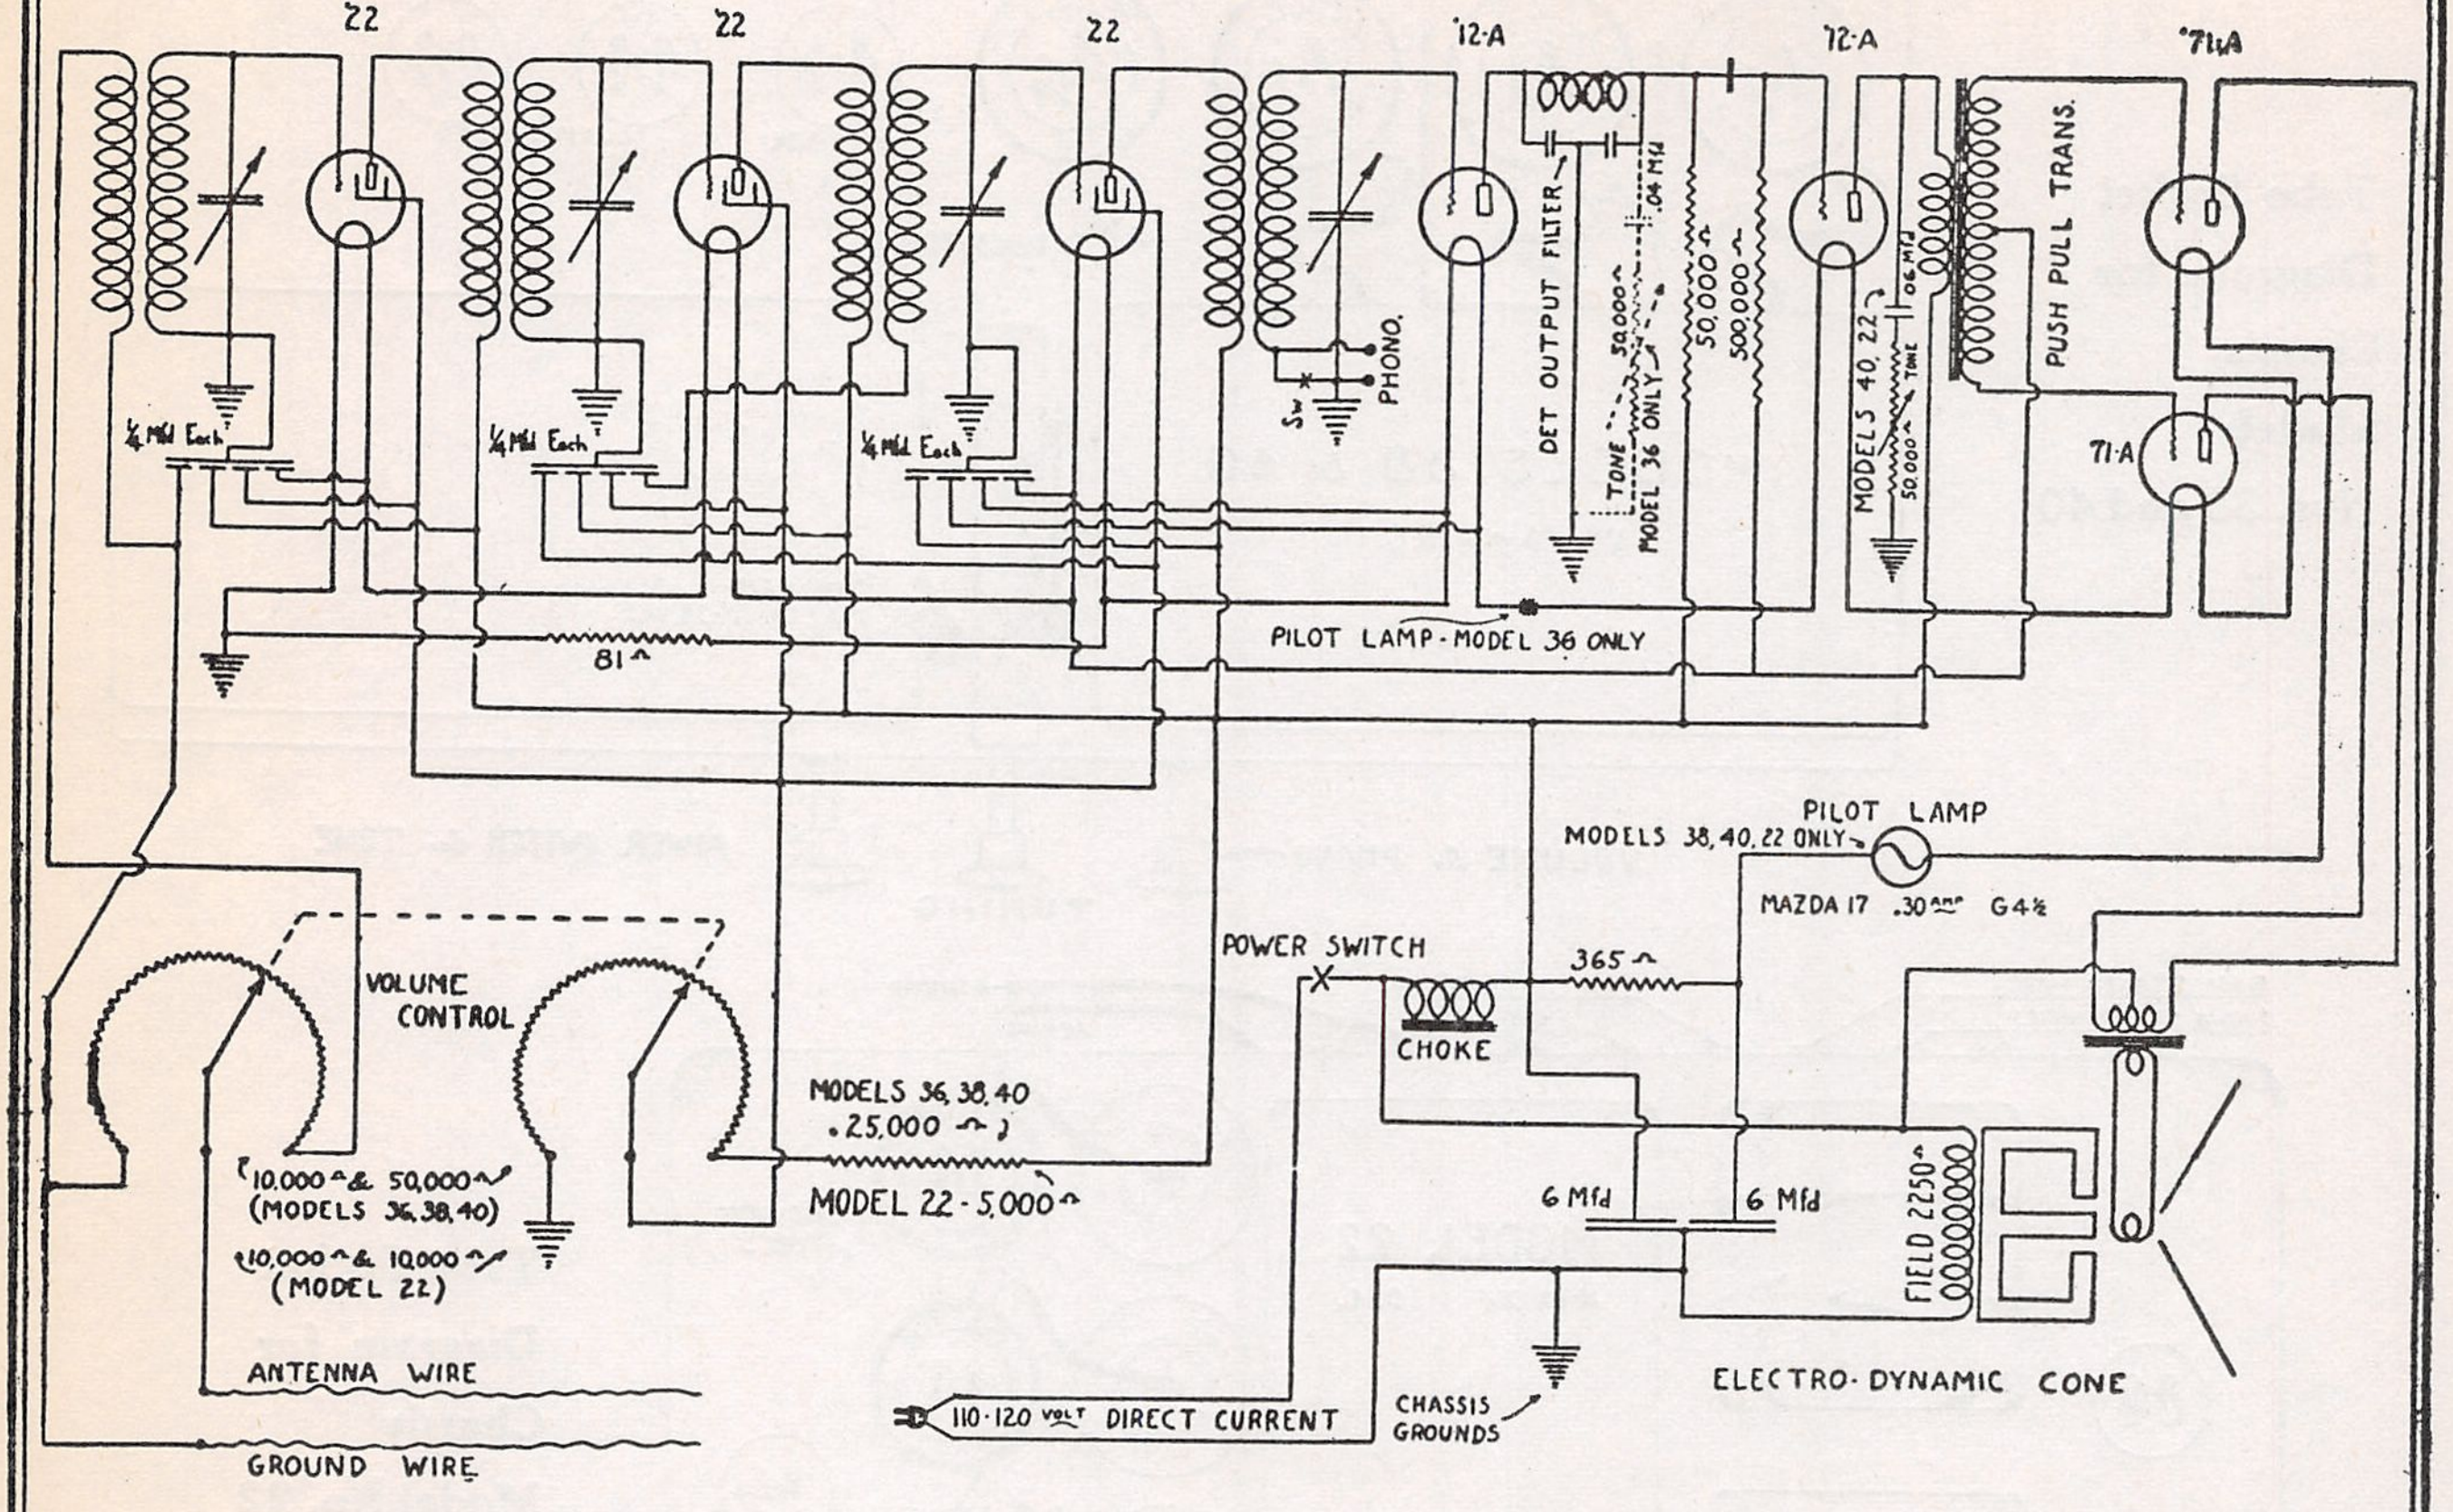
22
22
22
12-A
12-A
71-A
71-A
¼ Mfd Each
¼ Mfd Each
¼ Mfd Each
Sw
PHONO.
DET OUTPUT FILTER
TONE 50,000Ω
MODEL 36 ONLY
.04 Mfd
50,000Ω
500,000Ω
MODELS 40, 22
.06 Mfd
50,000Ω TONE
PUSH PULL TRANS.
81Ω
PILOT LAMP - MODEL 36 ONLY
PILOT LAMP
MODELS 38, 40, 22 ONLY
MAZDA 17 .30 AMP G4½
POWER SWITCH
365Ω
CHOKE
VOLUME CONTROL
10,000Ω & 50,000Ω (MODELS 36, 38, 40)
10,000Ω & 10,000Ω (MODEL 22)
MODELS 36, 38, 40 25,000Ω
MODEL 22 - 5,000Ω
6 Mfd
6 Mfd
FIELD 2250Ω
ELECTRO-DYNAMIC CONE
ANTENNA WIRE
GROUND WIRE
110-120 VOLT DIRECT CURRENT
CHASSIS GROUNDS

MODELS 22, 36, 38, 40, DIRECT CURRENT S.G. CHASSIS.

The majority of the parts are interchangeable with those in the corresponding A. C model.

The standard filter choke is omitted, the power transformer being replaced by the heavy D. C. choke

It will be noted that the position of the pilot lamp differs, in the model 36, from its position in the models, 38, 40 and 22.

The position of the tone control also is different in the model 36 from the models 40 and 22.

All variations in parts are indicated on the accompanying circuit diagram.

The coils for the D. C. models differ slightly from those used in A. C models, and are obtainable in matched sets of four.

The same dynamic speaker as used on the A. C. models is employed

The filaments of all tubes, a heavy 365 ohm vitreous resistor and the pilot lamp are are all in series across the line, following the choke. An 81 ohm resistor "by passes" a portion of the current across the three audio frequency tubes as the type 222 tubes do not draw the full quarter ampere as do the 171-A and 112-A type tubes. As the pilot lamp is also in series with the tubes a bulb of the proper voltage and current draw must be used.

The mechanical layout of the D. C. models corresponds to the equivalent A. C. model in each case except for the few variations noted below.

D. C. Model	*Corresponding A. C. Model*
36	26
38	30
40	32
22	20B

PARTS LIST

116202	Heavy D. C. Filter Choke
116302	Filter Condenser (Paper, 6 mfd. and 6 mfd.)
116158	365 ohm Vitreous Resistor
116405	81 ohm Wire Wound Resistor
116600	Set of 4 Matched D. C. Model Coils
116513	4-prong Single Socket marked 222
116515	4-prong Single Socket marked 112-A
116507	4-prong Single Socket marked 171-A
116154	Pilot Lamp 3.8 volt Mazda—17 0.30 amp. G-4½
123406	Dual 10,000 ohm volume control (Model 22)
117406	Dual 10,000 - 50,000 ohm volume control (Models 36, 38, 40)

Parts identical with those used in the corresponding models are not listed here.

MODEL 24
Schematic, Data

COLIN B. KENNEDY CORP.

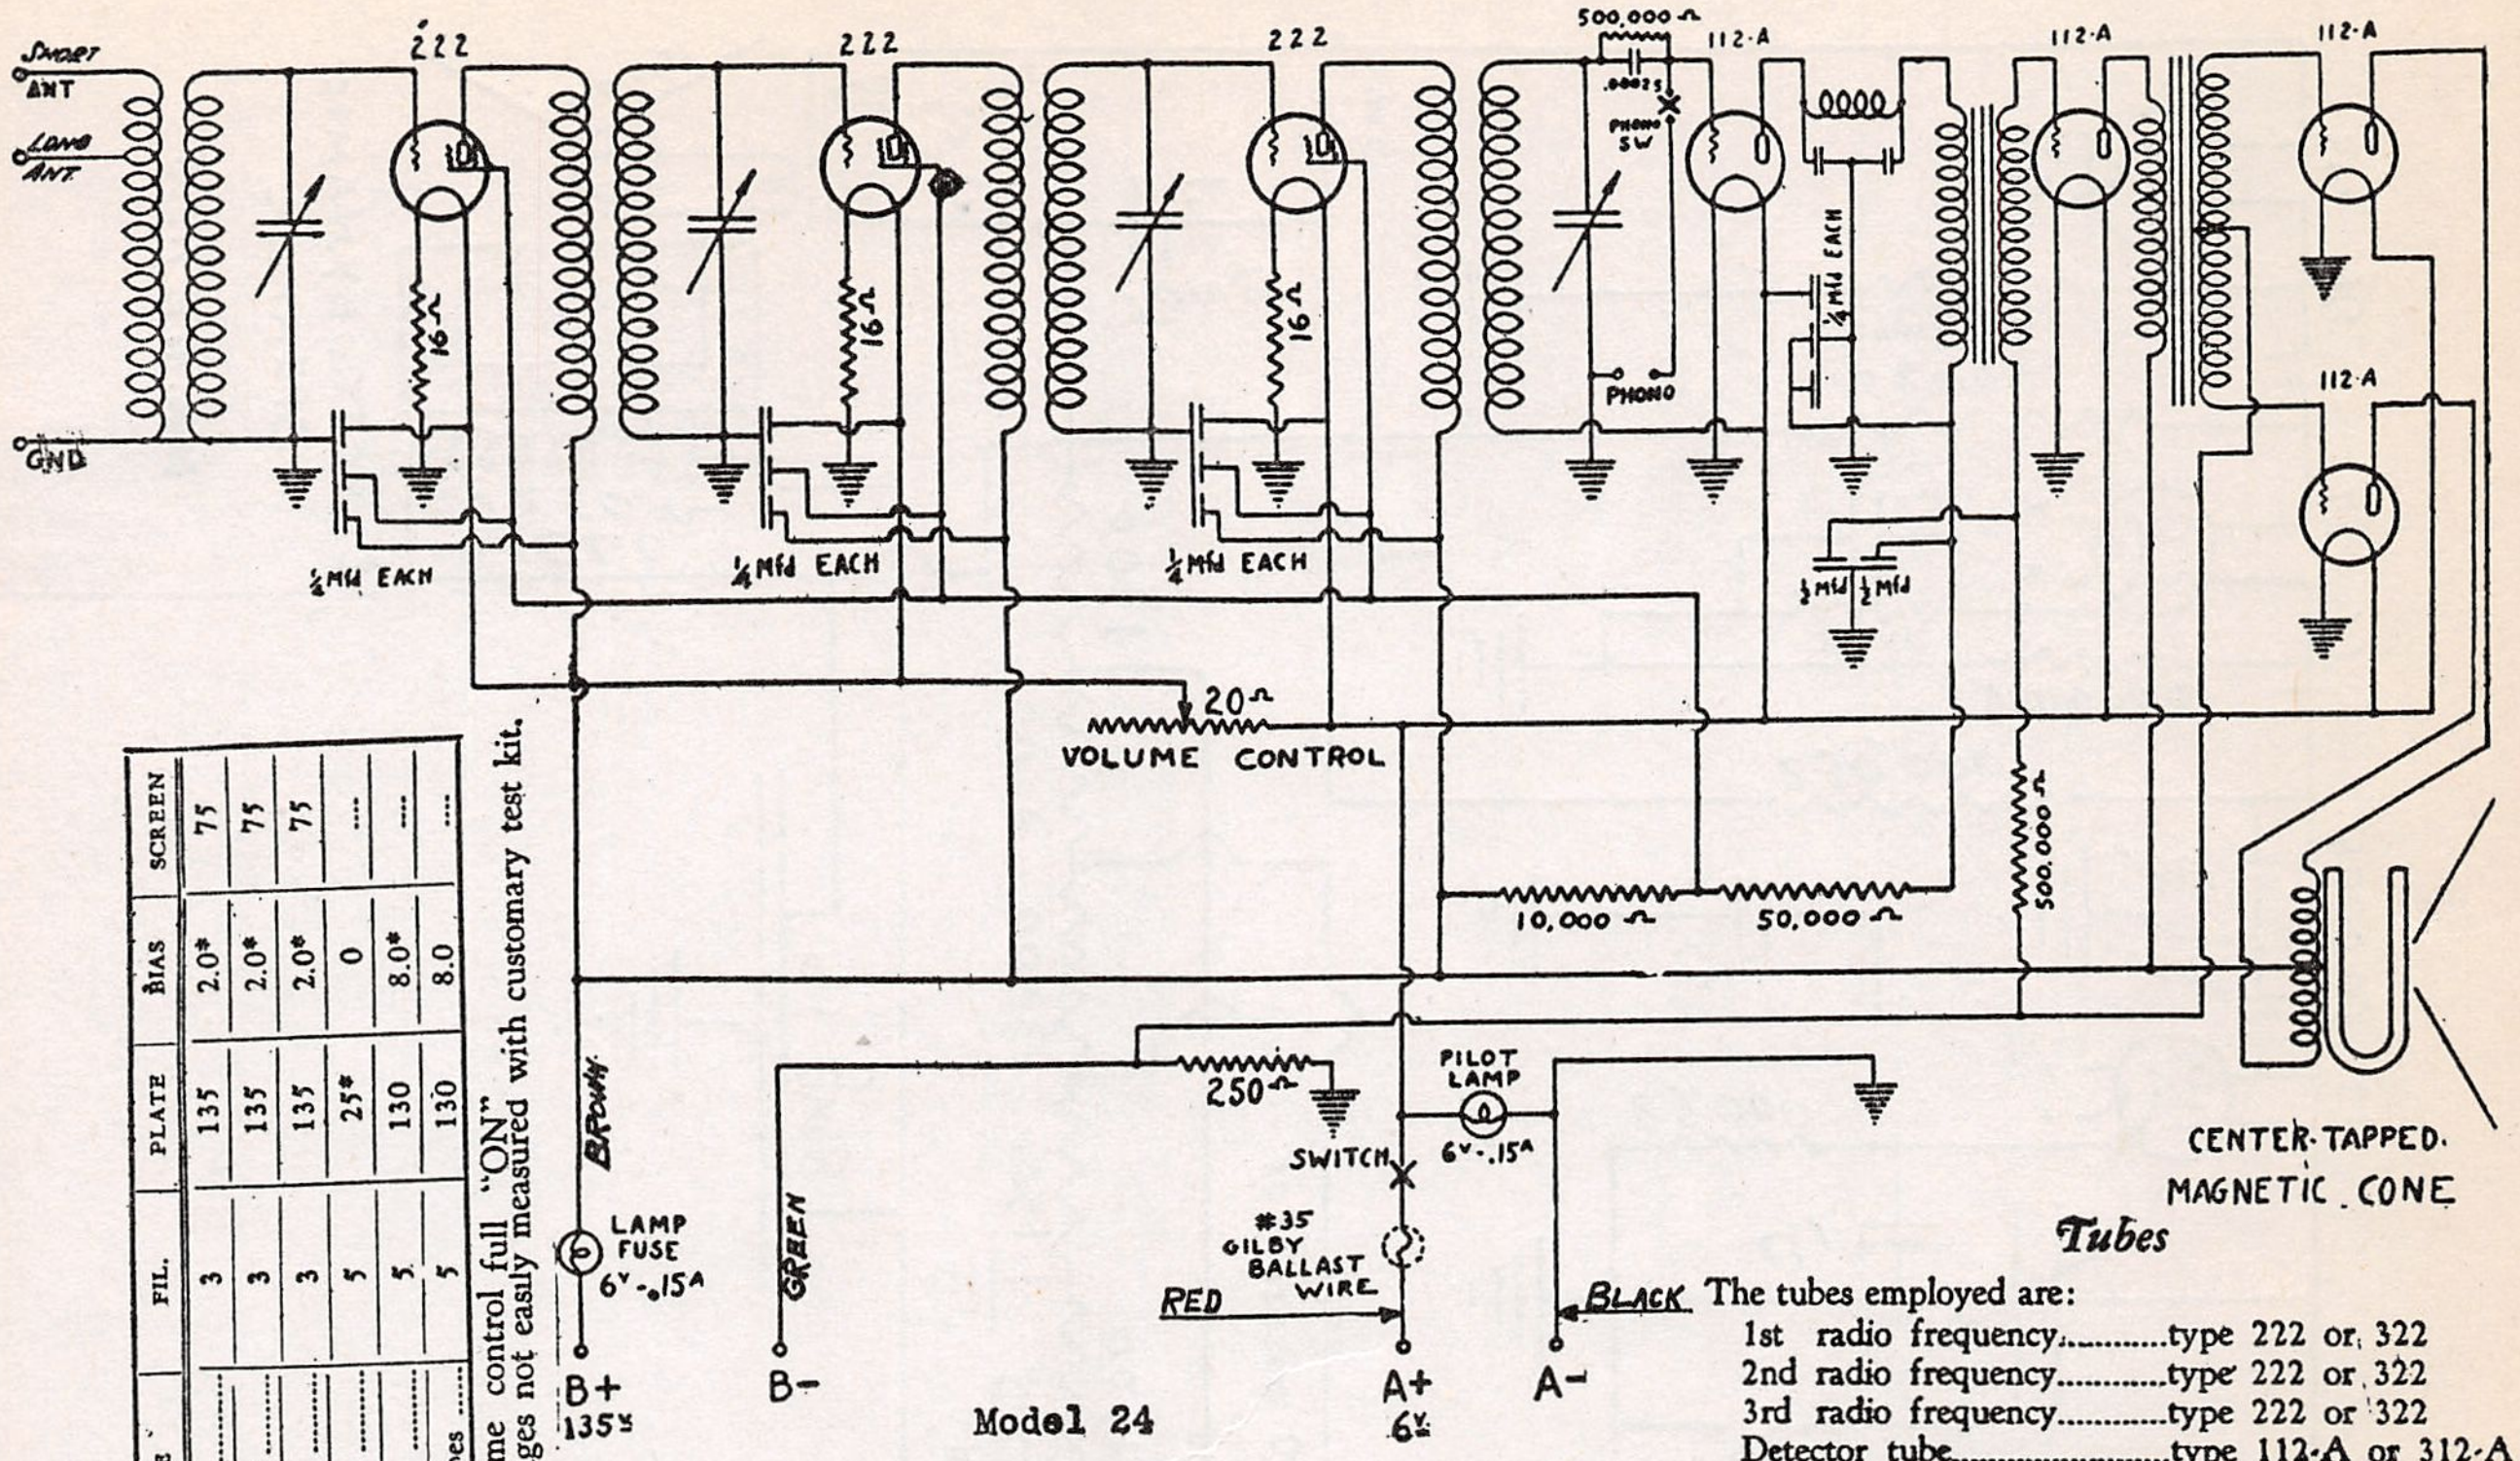
SHORT ANT
LONG ANT
GND
222
222
222
16Ω
16Ω
16Ω
¼ Mfd EACH
¼ Mfd EACH
¼ Mfd EACH
500,000Ω
.00025
PHONO SW
PHONO
112-A
112-A
112-A
112-A
¼ Mfd EACH
½ Mfd ½ Mfd
20Ω
VOLUME CONTROL
10,000Ω
50,000Ω
500,000Ω
250Ω
PILOT LAMP 6V-.15A
SWITCH
#35 GILBY BALLAST WIRE
LAMP FUSE 6V-.15A
BROWN
GREEN
RED
BLACK
B+ 135V
B-
A+ 6V
A-
CENTER-TAPPED MAGNETIC CONE

Model 24

TUBE	FIL.	PLATE	BIAS	SCREEN
1st R.F.	3	135	2.0*	75
2nd R. F.	3	135	2.0*	75
3rd R. F.	3	135	2.0*	75
Detector	5	25*	0	....
1st A. F.	5	130	8.0*	....
Pwr. Tubes	5	130	8.0	....

volume control full "ON"
* Voltages not easily measured with customary test kit.

Tubes

The tubes employed are:

1st radio frequency	type 222 or 322
2nd radio frequency	type 222 or 322
3rd radio frequency	type 222 or 322
Detector tube	type 112-A or 312-A
1st audio frequency	type 112-A or 312-A
Push-Pull power tubes	type 112-A or 312-A

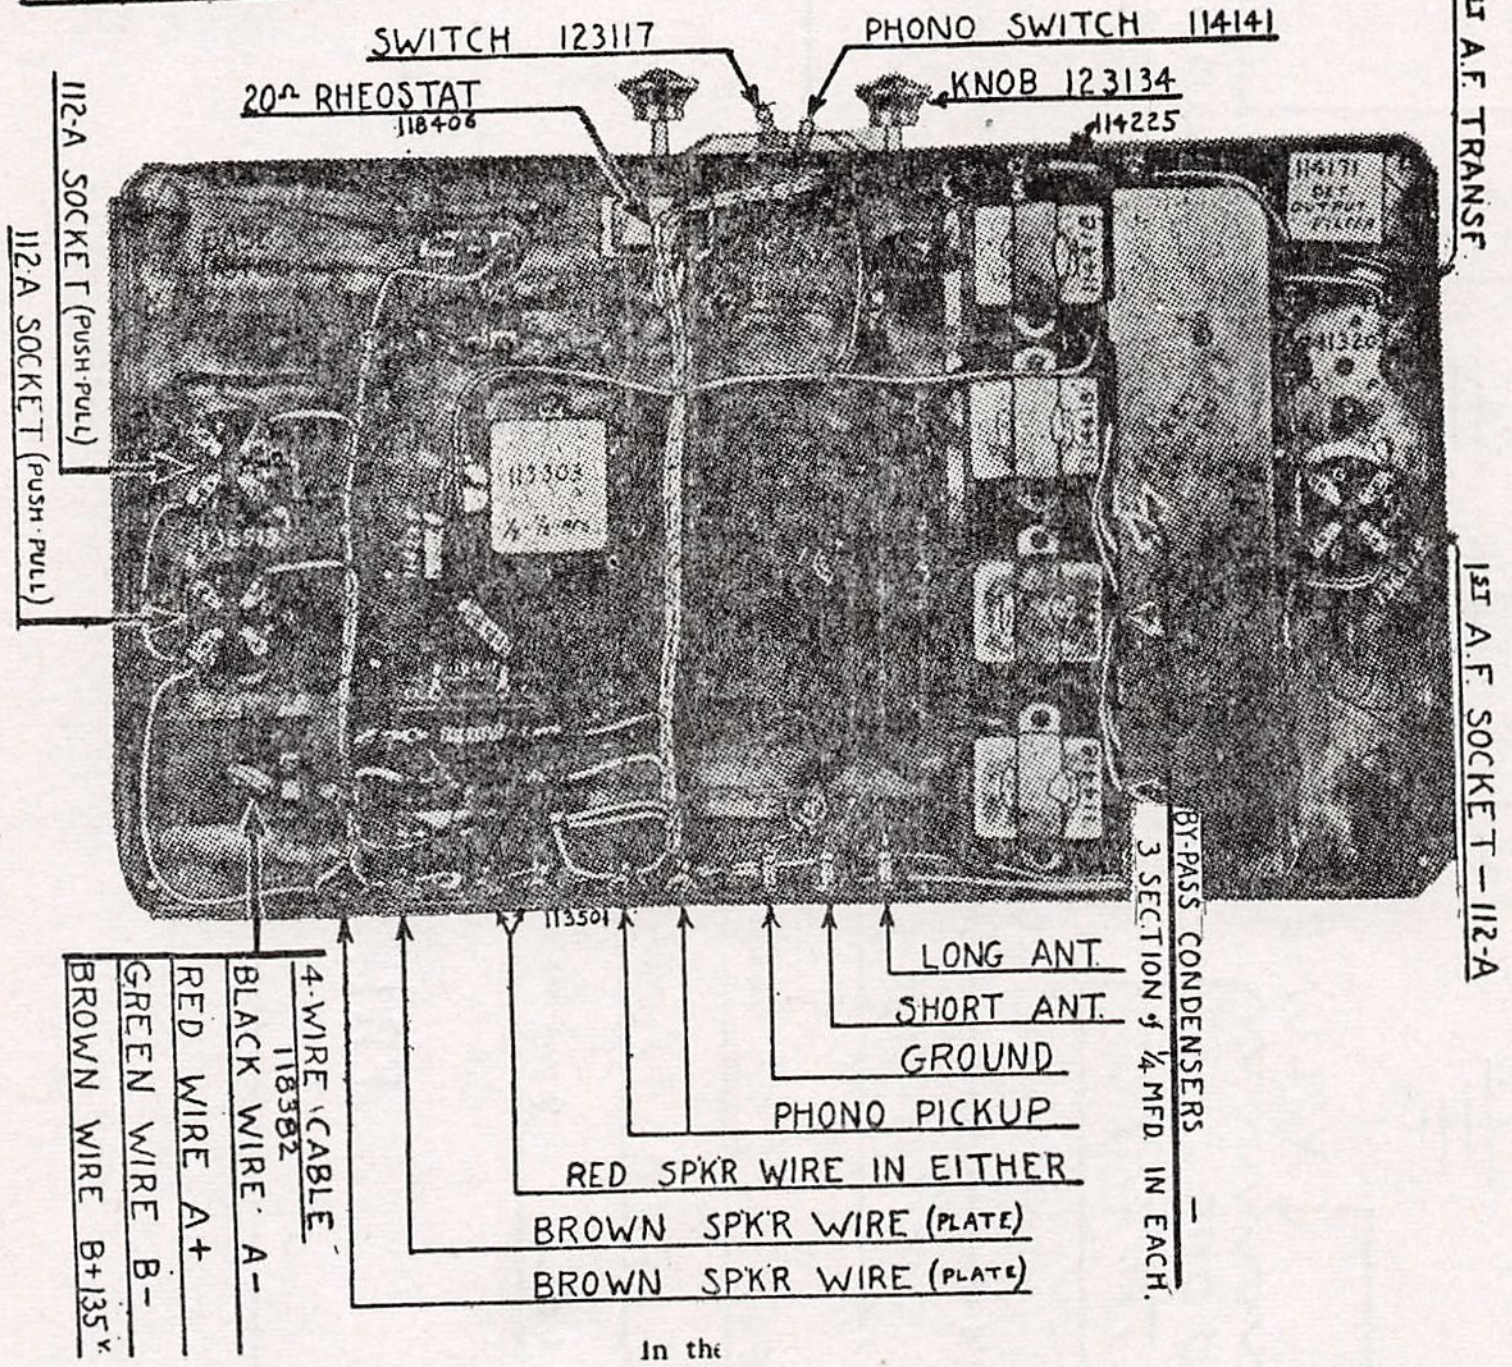
SWITCH 123117
PHONO SWITCH 114141
20Ω RHEOSTAT 118406
KNOB 123134
114225
1st A.F. TRANSF.
112-A SOCKET (PUSH-PULL)
112-A SOCKET (PUSH-PULL)
1st A.F. SOCKET—112-A
BY-PASS CONDENSERS 3 SECTION of ¼ MFD IN EACH.
LONG ANT.
SHORT ANT.
GROUND
PHONO PICKUP
RED SPK'R WIRE IN EITHER
BROWN SPK'R WIRE (PLATE)
BROWN SPK'R WIRE (PLATE)
4-WIRE CABLE 118382
BLACK WIRE A-
RED WIRE A+
GREEN WIRE B-
BROWN WIRE B+135V
113501
113302

General Information

THE KENNEDY Battery Operated Chassis Model 24 is constructed on a base similar to the Kennedy Models 20 and 22 (A. C. and D. C. line models) A great many of the component parts of the battery operated chassis are interchangeable with those of the corresponding A. C. and D. C. line models, 20 and 22.

If set oscillates over entire dial range, it is possible that the detector output filter is defective, and a new one may be tried.

The wires at the tops of the coil shield (to control grids) may have been pulled sufficiently to bend coil lugs and permit more than 3¼ inches of wire (from shield to start of clip) to be exposed. Extra length here tends to cause an unstable receiver.

If receiver oscillates at just a small spot or two of dial range, it may frequently be corrected by pushing a piece of solid, bare copper wire between the rubber grommet and coil shield (barely through) of the second R. F coil shield, and twisting a few times around the wire leading to the control grid of the 2nd R. F. tube.

Resistors

The resistance values of the various colored resistors employed are:

10,000 ohms	Grey
50,000 ohms	Yellow
500,000 ohms	Brown

Fuses and Ballast

Under a cover-plate near the battery cable will be found a pilot lamp bulb and a piece of small wire held by two posts. This bulb is used as a fuse in the "B" battery circuit and is identical with the pilot lamp—both being Mazda No. 40 (6 volt, 0 15 amp.) The fuse lamp does not light up when set is operating, and, if it should do so it is an indication of trouble elsewhere in the receiver.

The small wire held by the two posts is a fuse and ballast in the storage battery circuit. In addition to its function as a fuse it serves to compensate for variations in the voltage of the storage battery. Extra pieces of this wire are provided with the set, and it is IMPORTANT that no other wire be used This wire is No. 34 B. & S. gauge Gilby ballast wire If other wire is used there is danger of injury to the tubes.

In the event it becomes necessary to change a coil it is extremely desirable to change all four coils for a new set of four matched and impregnated coils that are designed to work together.

Tests for resonance, or matching of the tuned circuits, are accomplished with an oscillator—connections to the resonant circuits being made from ground to grid terminals of the R. F. sockets for the R. F. coils and from A+ terminal of detector socket to end of grid leak or grid condenser furthest from detector socket grid terminal for the detector coil.

Batteries

The model 24 receiver requires one six volt storage "A" battery and one 135 volt "B" battery (or three 45 volt "B" batteries). No "C" batteries are required as all bias voltages are obtained automatically within the receiver.

The storage battery drain is exceptionally low for this type of receiver, being approximately 1.37 amperes.

MODEL 44

COLIN B. KENNEDY CORP.

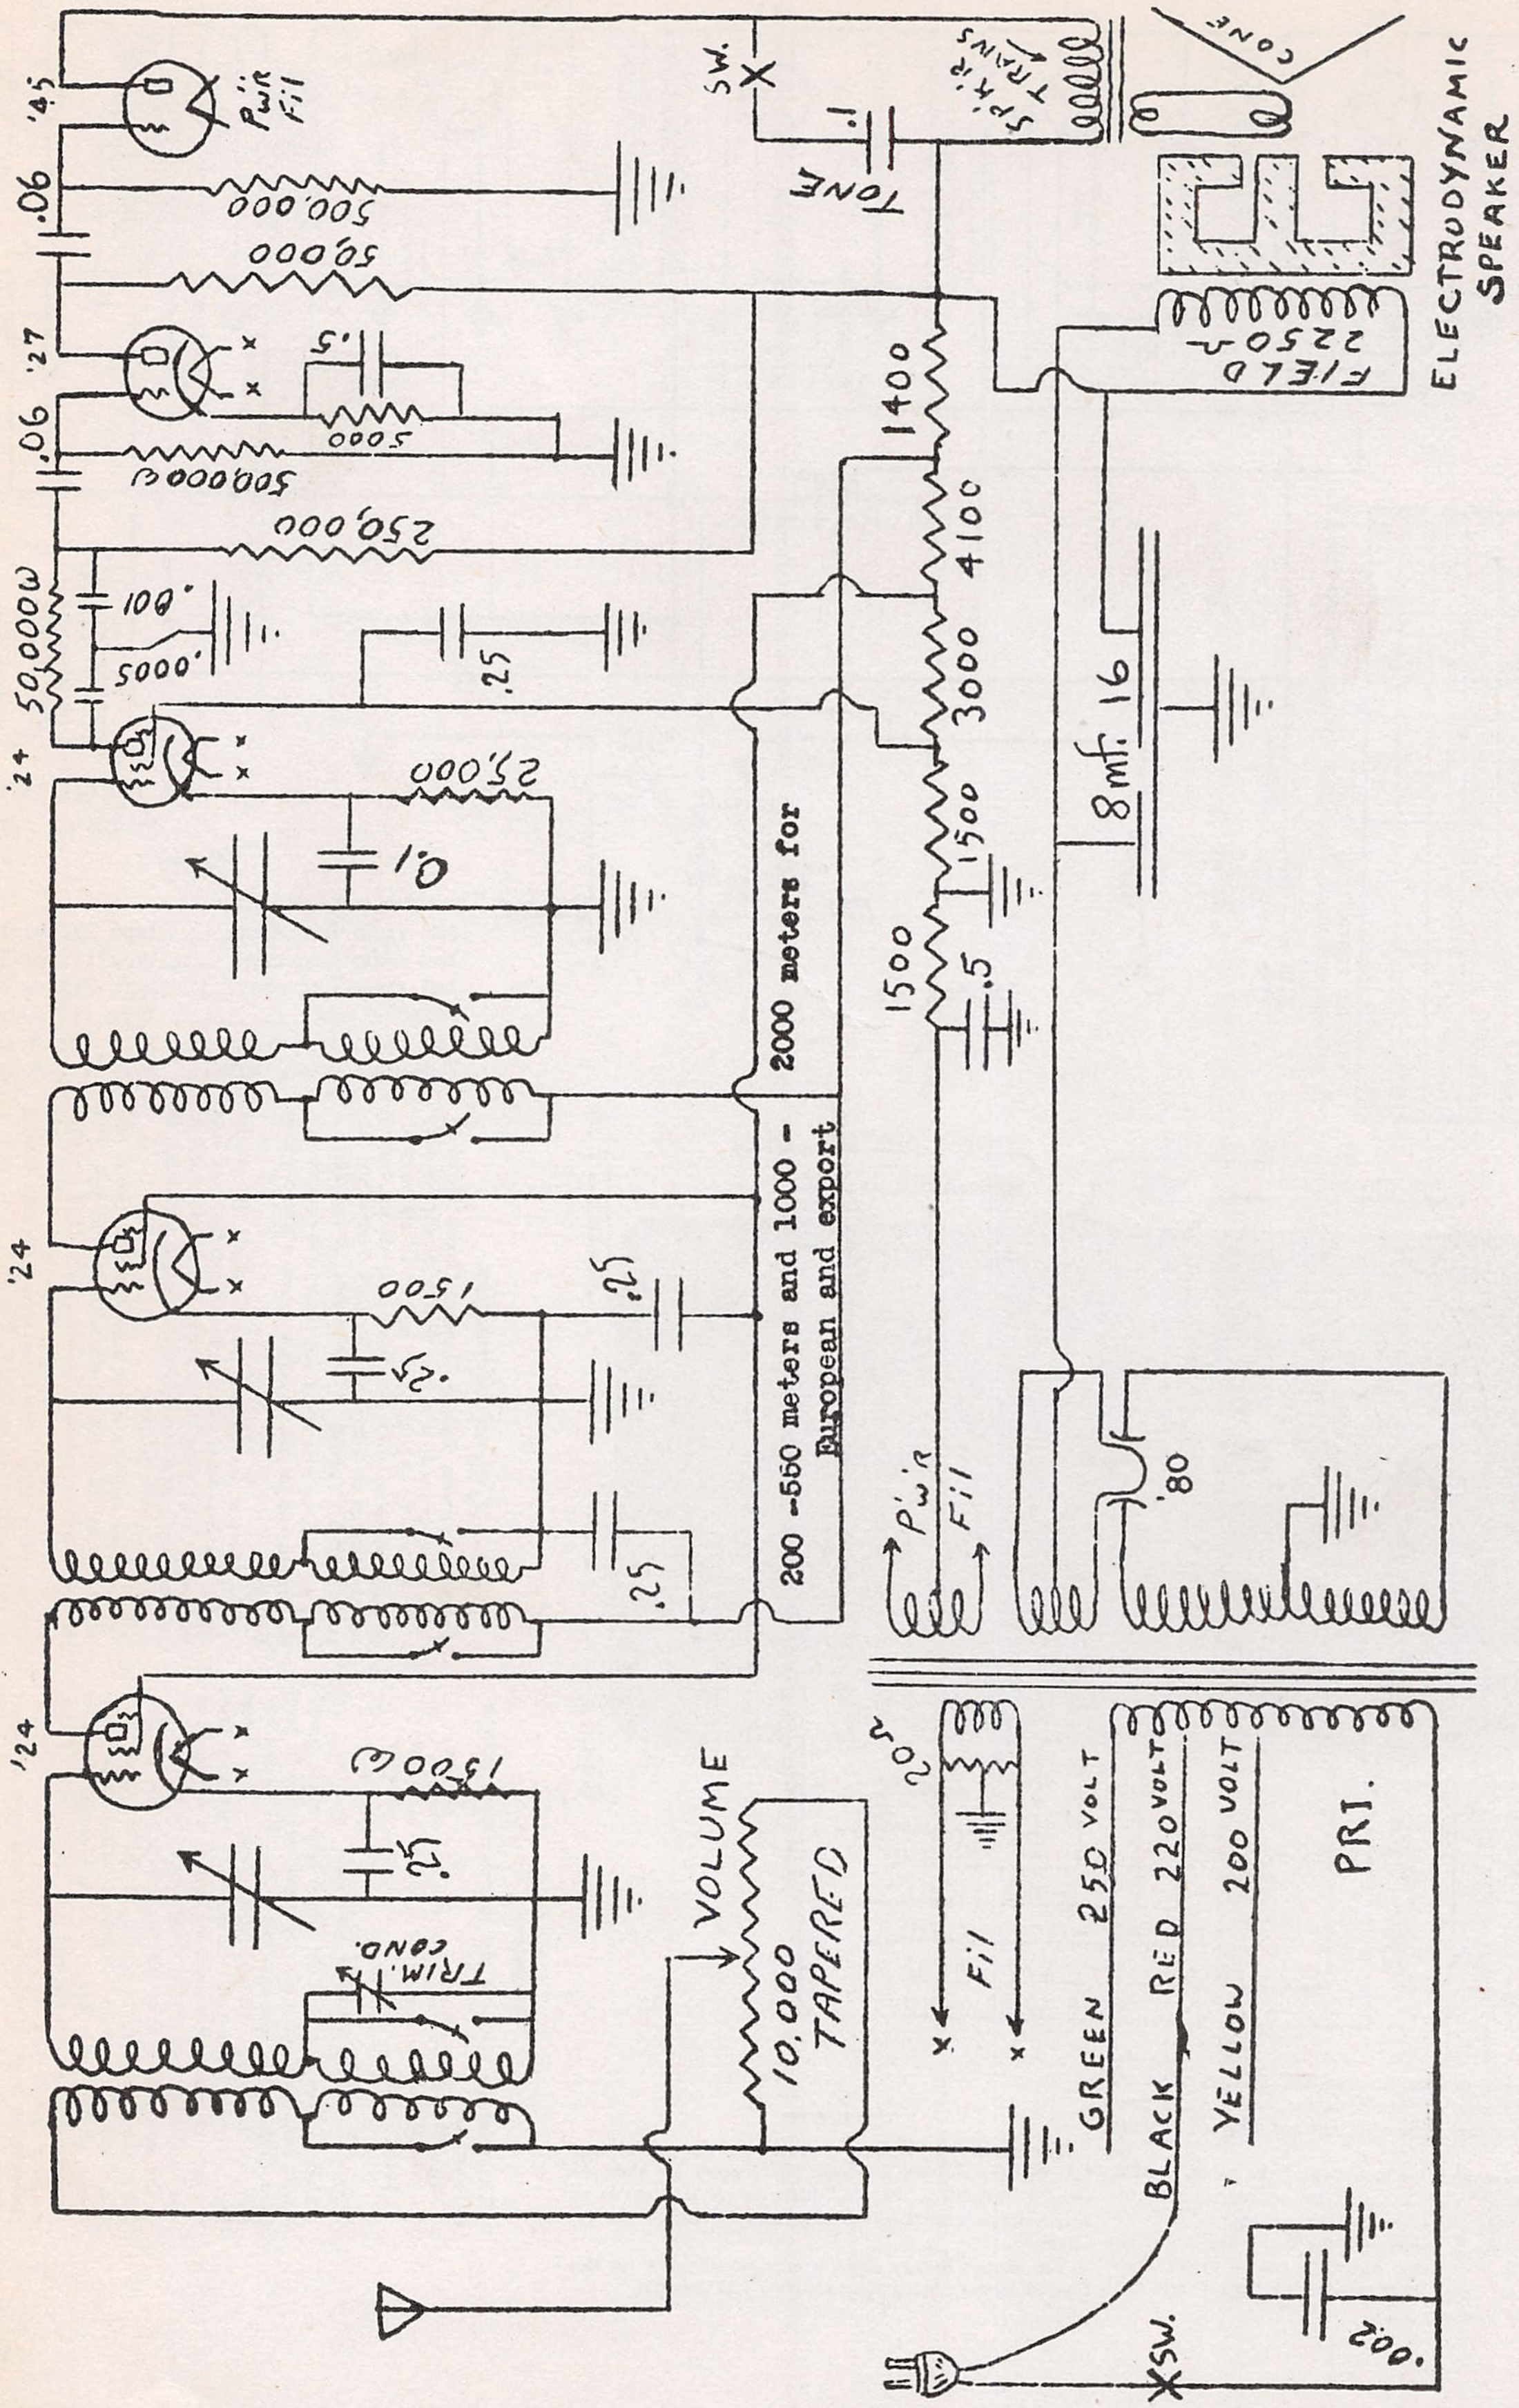
'45
Pw'r Fil
.06
500,000
50,000
'27
.5
5000
500,000 Ω
.06
250,000
50,000 W
.001
.0005
.25
'24
25,000
.01
SW.
.1
TONE
SPKR. TRANS
CONE
ELECTRODYNAMIC SPEAKER
Drwg. No E 71505
FIELD 2250 Ω
1400
4100
3000
1500
1500
.5
8 mf. 16
2000 meters for
200 -550 meters and 1000 - European and export
'24
1500
.25
.25
.25
Pw'r Fil
'80
'24
1500 Ω
.25
TRIM. COND.
VOLUME
10,000 TAPERED
2.5
Fil
GREEN 250 VOLT
RED 220 VOLT
BLACK
YELLOW 200 VOLT
PRI.
SW.
.002

MODEL 48

COLIN B. KENNEDY CORP.

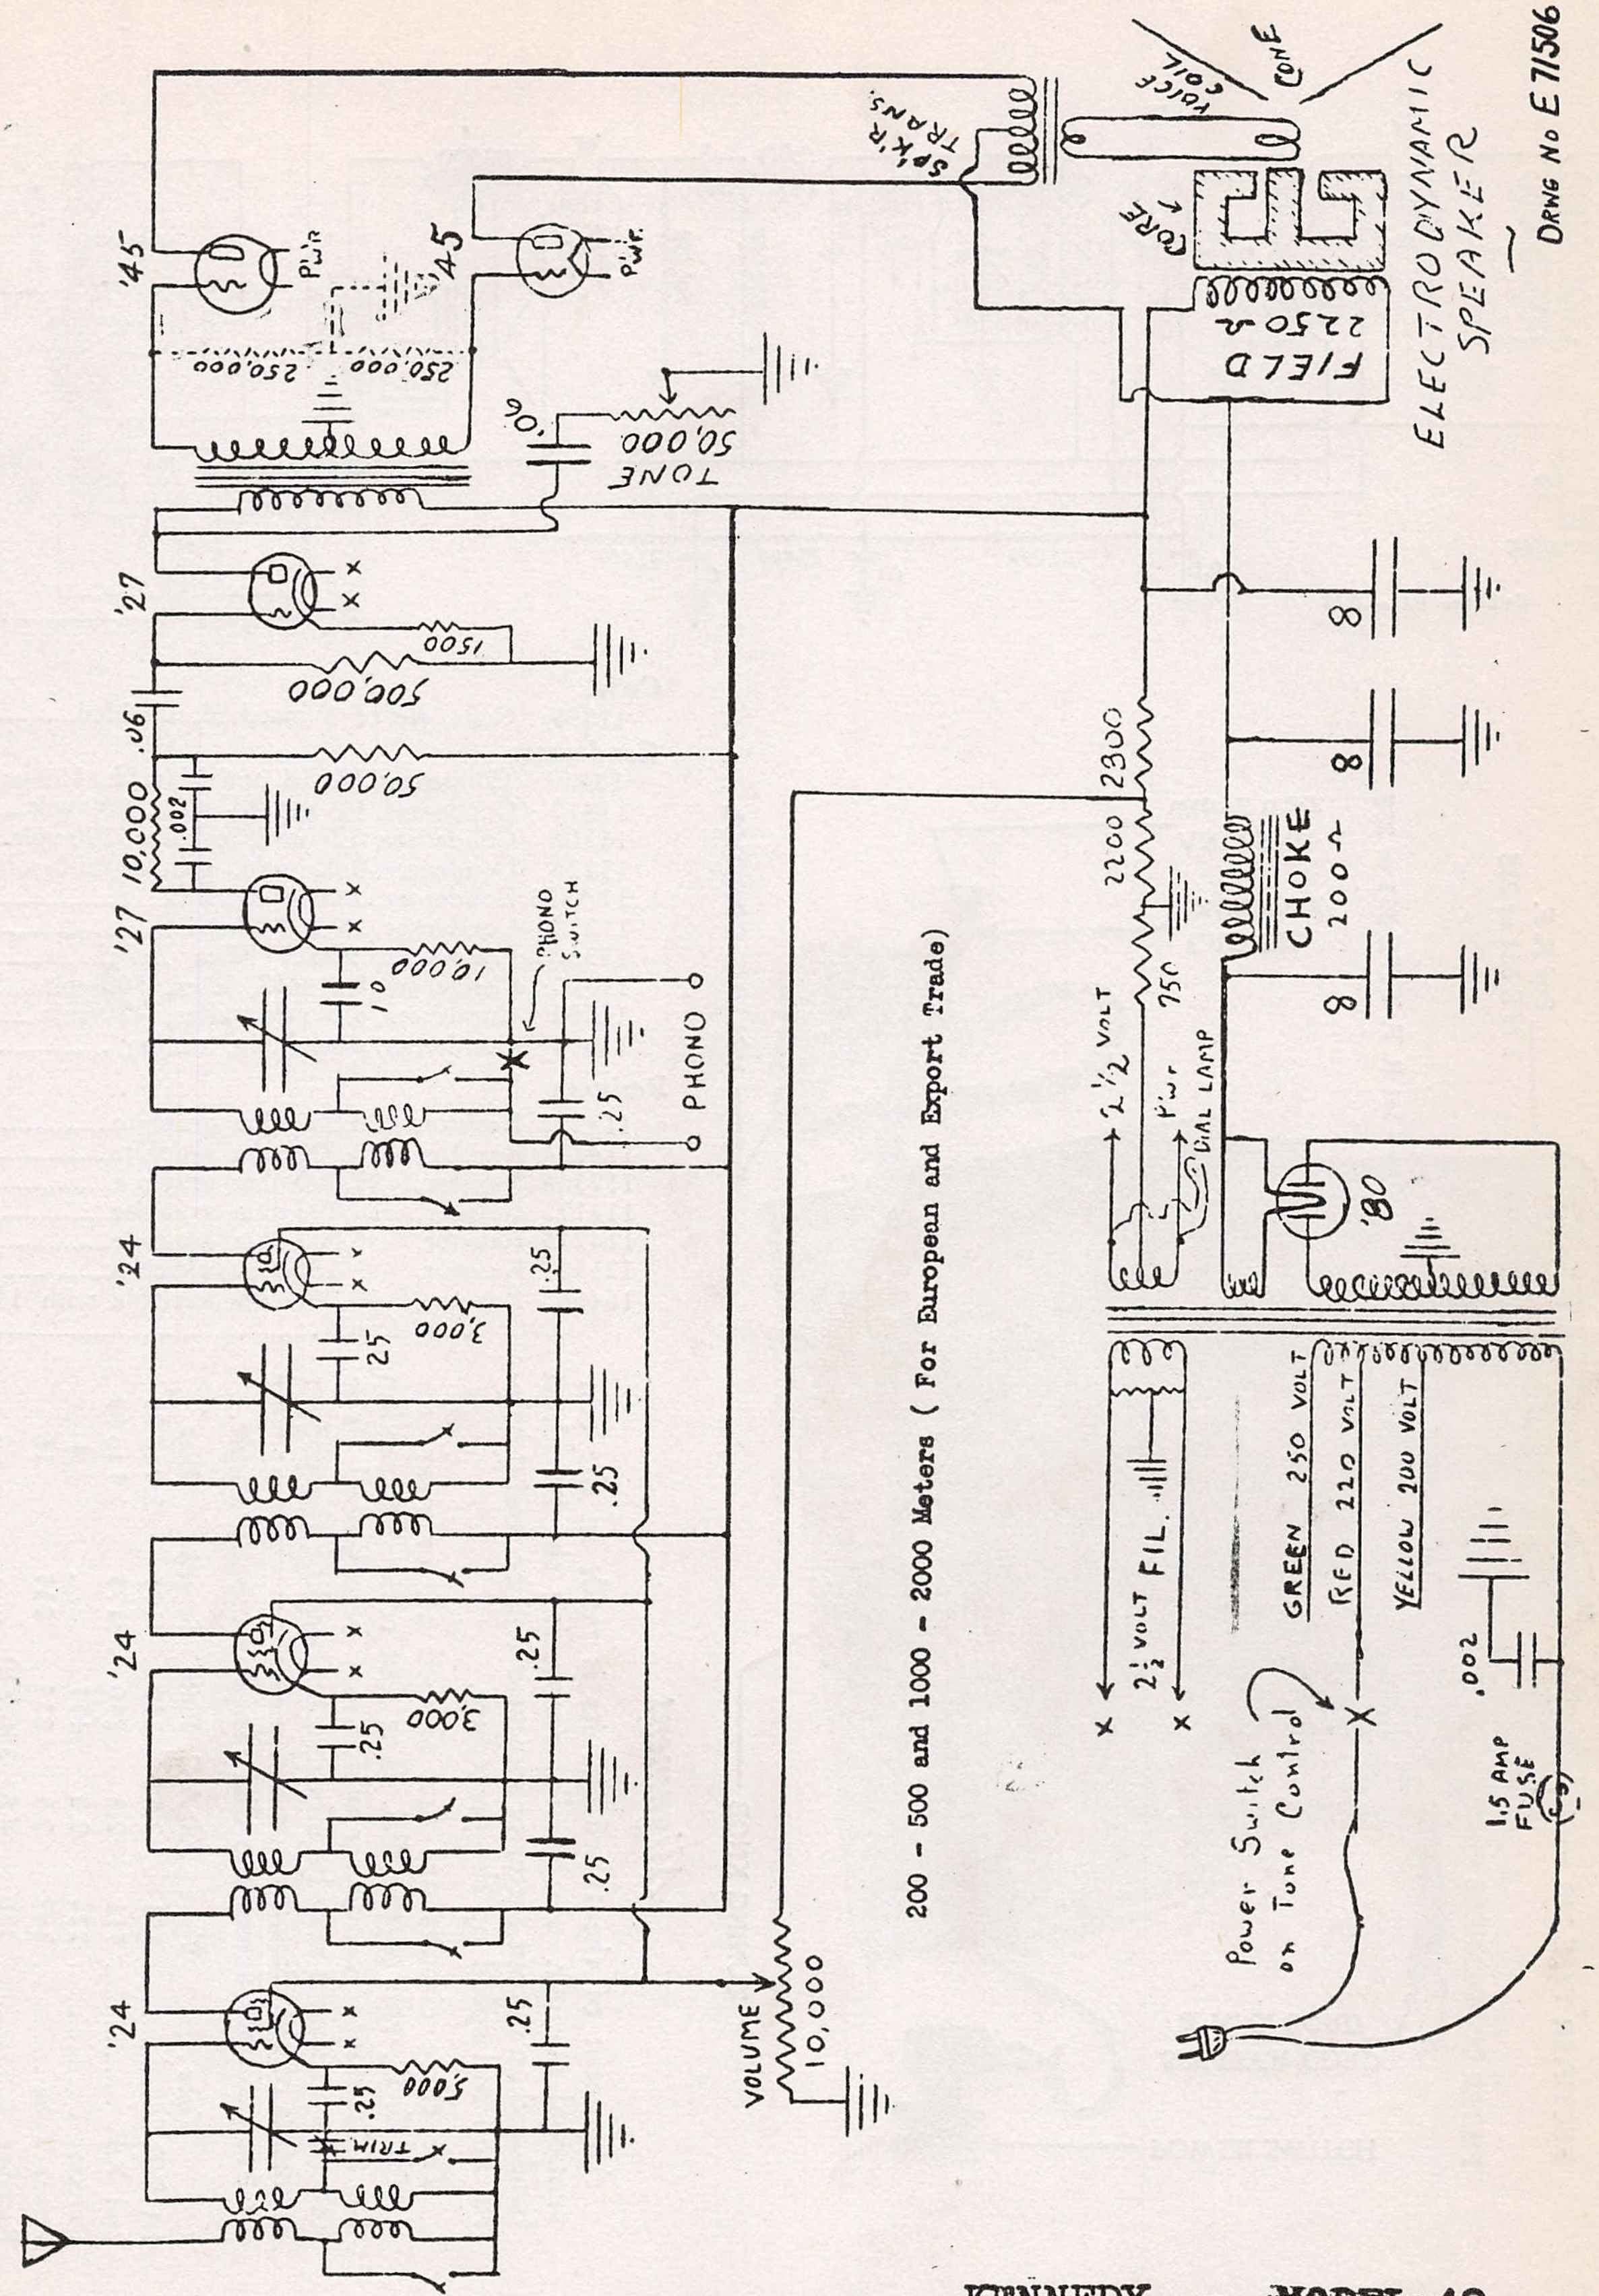
'45
Pwr
250,000
250,000
'45
PWR.
SPK'R TRANS.
VOICE COIL
CONE
CORE
ELECTRODYNAMIC SPEAKER
DRWG No E71506
FIELD 2250 Ω
TONE
50,000
.06
'27
1500
500,000
.06
50,000
10,000
.002
'27
10,000
.1
PHONO SWITCH
PHONO
.25
2300
2200
750
8
8
8
CHOKE 200 Ω
2½ VOLT
PWR
DIAL LAMP
'80
'24
3,000
.25
.25
.25
'24
3000
.25
.25
.25
'24
5000
.25
TRIM
.25
VOLUME
10,000
2½ VOLT FIL.
GREEN 250 VOLT
RED 220 VOLT
YELLOW 200 VOLT
.002
1.5 AMP FUSE
Power Switch on Tone Control

200 - 500 and 1000 - 2000 Meters (For European and Export Trade)

COLIN B. KENNEDY CORP.

MODEL 50
Schematic
Chassis
Alignment Data

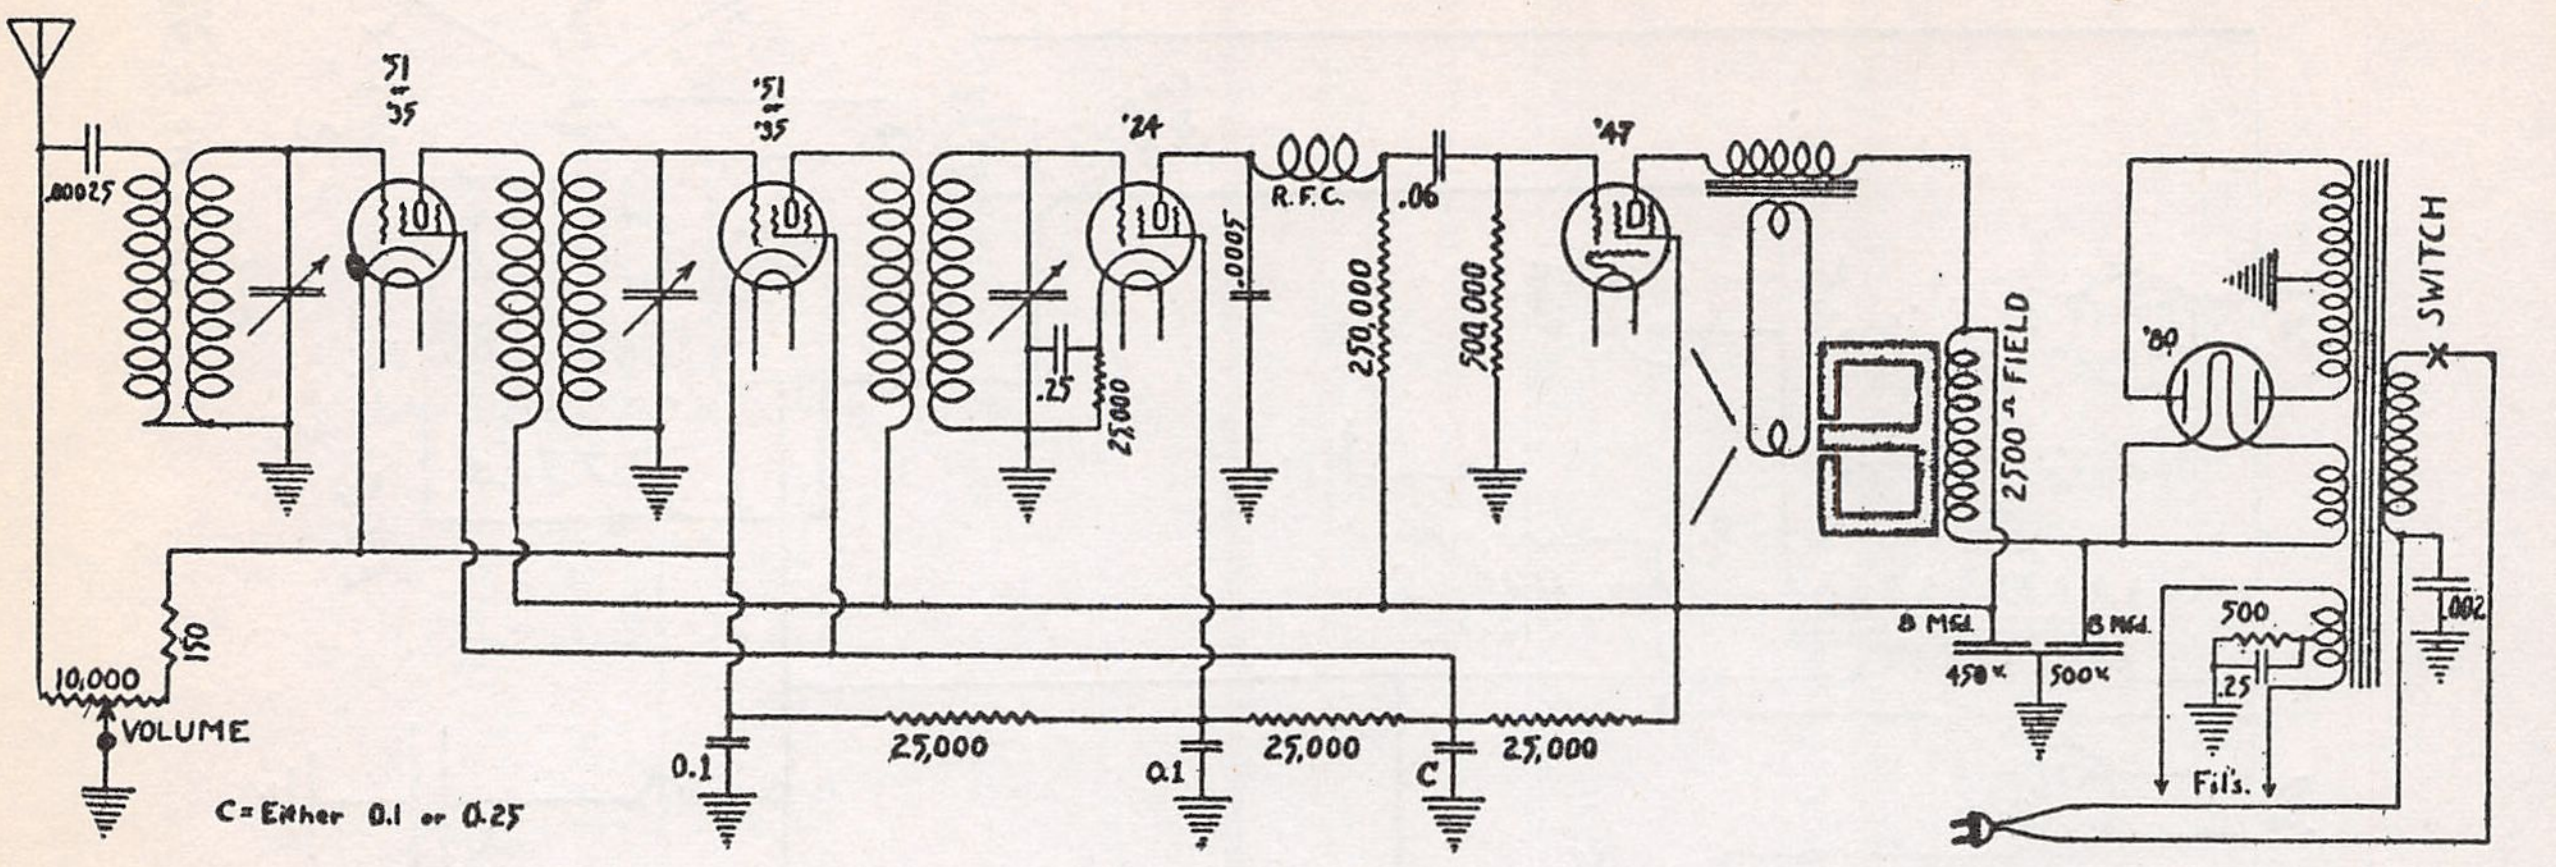
.00025
'51 or '35
'51 or '35
'24
R.F.C.
.06
'47
.25
25,000
.0005
250,000
500,000
2500 Ω FIELD
'80
SWITCH
8 Mfd.
8 Mfd.
450 V.
500 V.
500
.25
.002
Fil's.
10,000
150
VOLUME
0.1
25,000
0.1
25,000
C
25,000
C = Either 0.1 or 0.25

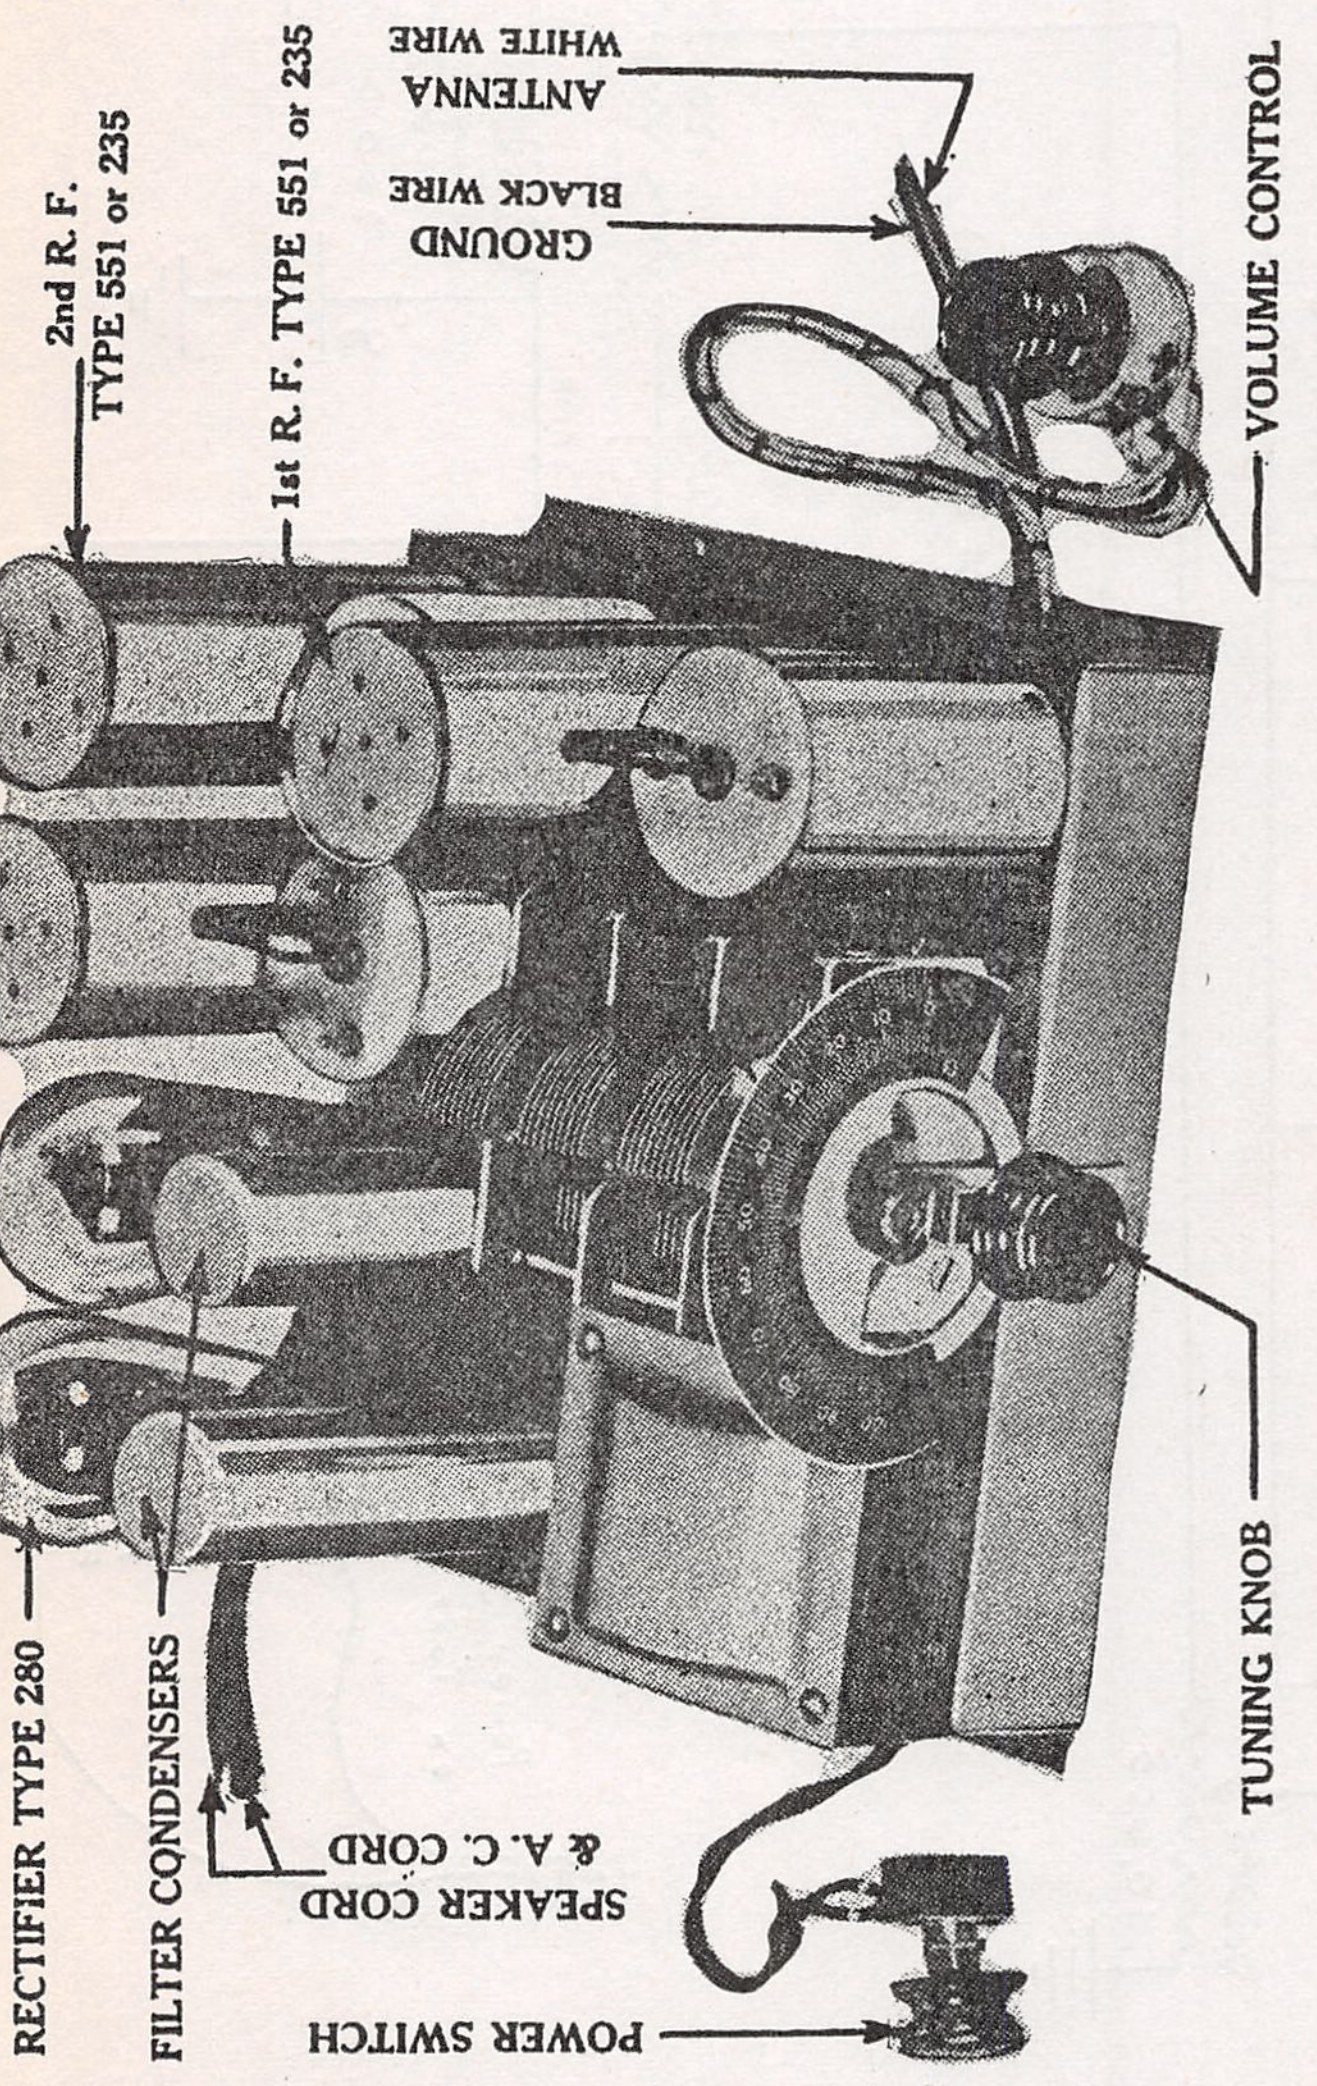
DET. TYPE 224
2nd R. F. TYPE 551 or 235
1st R. F. TYPE 551 or 235
ANTENNA WHITE WIRE
GROUND BLACK WIRE
VOLUME CONTROL
PENTODE TYPE 247 or PZ
RECTIFIER TYPE 280
FILTER CONDENSERS
SPEAKER CORD & A. C. CORD
POWER SWITCH
TUNING KNOB

Coils

11759	Coils, set of 3 matched, shielded

Condensers

13417	Condenser, 1/4, 1/4 and 1/4 mfd., 300-volt
15417	Condenser, 1/4 and 1/4 mfd., 200-volt
13306	Condenser, 0.1 mfd. tubular 200-volt
13226	Condenser, 0.06 mfd. tubular 200-volt
11A473	Condenser, .0005 Mica
113306	Condenser, .002 Mica
113305	Condenser, .00025 Mica
15302	Condenser, 8.0 mfd. filter, 500-volt
16302	Condenser, 8.0 mfd. filter, 450-volt
13301	Condenser, three-gang, tuning

Resistors

114225	Resistor, 500,000-ohm graphite
114224	Resistor, 50,000-ohm graphite
117366	Resistor, 25,000-ohm graphite
114173	Resistor, 10,000-ohm graphite
114215	Resistor, 5,000-ohm graphite
12158	Resistor, 500-ohm vitreous
16406	Resistor, 10,000-ohm variable with 150-ohm fixed

Alignment

Alignment of the tuned circuits is made in the conventional manner. An oscillator covering the broadcast band and an output meter or indicator will be found helpful and will speed up the procedure.

The three circuits are first aligned at, or near, the 1,500 K. C. end of the dial. The first condenser section has a "trimmer" condenser which may be adjusted. The other two sections may be adjusted by bending the proper segments of the slotted rotor end plates. A check at four or five positions across the dial range is usually ample.

Tube	*Type*	*Fil. A.C.*	*Plate*	*Screen*	*Bias*
1st R.F.	551	2.3	250	175	2.5 to 39
2nd R.F.	551	2.3	250	175	2.5 to 39
Detector	224	2.3	155	......	4
Power Tube	247	2.3	235	235	16
Rectifier	280	4.8	340-340	......	...

Line voltage = 115 Volume full on.

MODEL 52
Schematic
Alignment Data

COLIN B. KENNEDY CORP.

Purpose	Type	Fil.A.C.	Plate	Screen	Bias
Radio Frequency	551	2.3	225	95	2.6 to 33.
1st Detector	224	2.3	225	30	2
Oscillator	227	2.3	100	....	8.5
Intermediate Freq.	551	2.3	225	95	2.6 to 33
2nd Detector	227	2.3	160	....	21
Power Tube	247	2.3	225	225	14
Rectifier	280	4.8	335-335 A.C.		

Volume control full on. Line voltage = 115.

Plate, screen and bias voltages measured from ground or chassis to respective terminals.

Coils

11600	Set of three matched coils

Condensers

113303	Condenser ½ and ½ mfd
13417	Condenser ¼, ¼ and ¼ mfd., 300-volt
13306	Condenser .1 mfd. tubular
13226	Condenser .06 tubular, 200-volt
23226	Condenser .06 tubular, 400-volt
14306	Condenser .003 mica
113305	Condenser .00025 mica
16302	Condenser 8 mfd., 500-volt
17302	Condenser 12 mfd., 430-volt

Resistors

114225	Resistor 500,000-ohm graphite
11F225	Resistor 250,000-ohm graphite
114224	Resistor 50,000-ohm graphite
117366	Resistor 25,000-ohm graphite
114173	Resistor 10,000-ohm graphite
114215	Resistor 5,000-ohm graphite
114175	Resistor 1,500-ohm graphite
12158	Resistor 500-ohm vitreous
16406	Resistor 10,000-ohm variable and 150-ohm fixed, volume
15369	Resistor 50,000-ohm variable with power switch

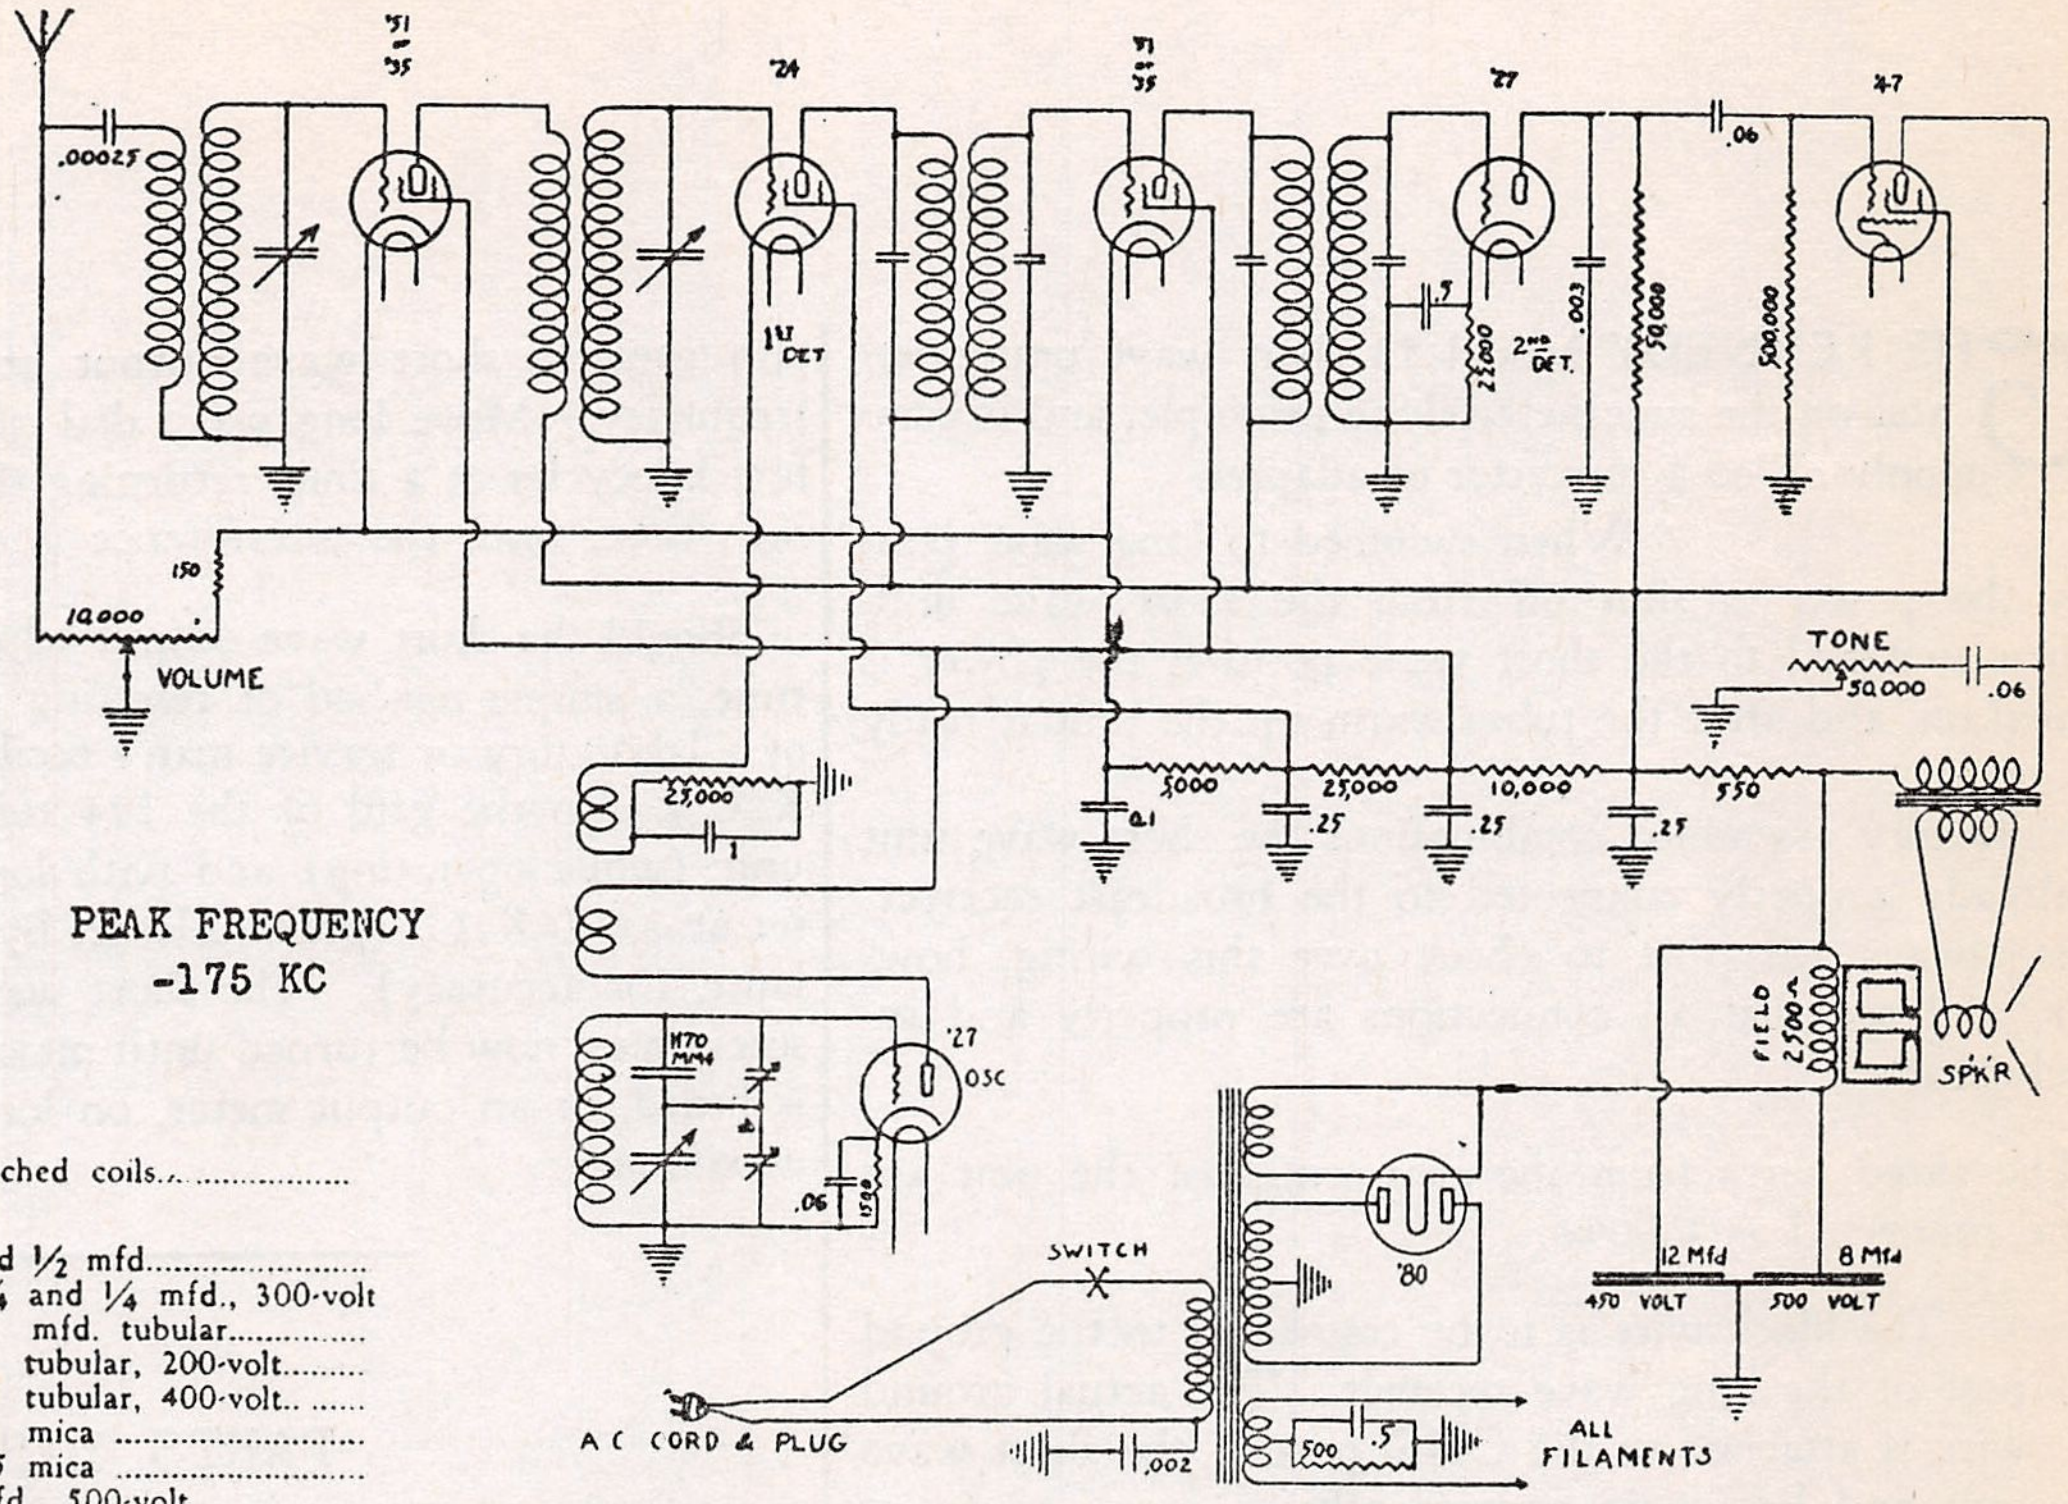

PEAK FREQUENCY
-175 KC

Model 52 (1931)

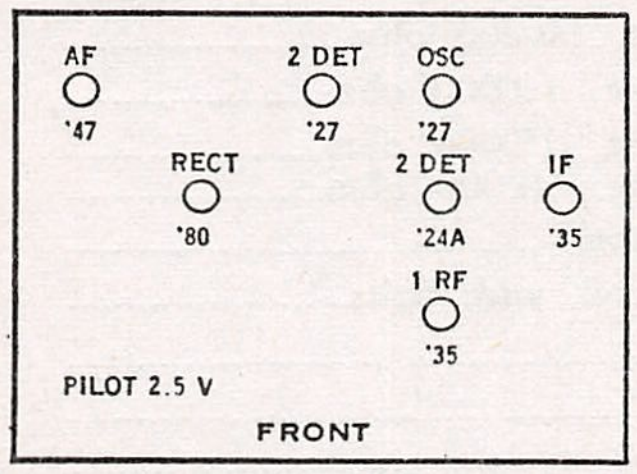

TECHNICAL DATA - MODELS 52 AND 56

ALIGNMENT:-Use an output meter and 175 KC oscillator for aligning the IF transformers. Remove grid clip of first detector tube and fasten a short length of wire to the grid terminal of the tube. Place the oscillator in the vicinity of this wire. Adjust trimmers in tops of IF transformer shields for maximum output meter reading. For adjusting the tuning condenser, an oscillator covering the broadcast band should be used. In this case place the oscillator near the antenna of the receiver. The receiver and oscillator are first tuned to 1500 KC and the condenser trimmers adjusted for maximum output. Do the same thing at 550 KC. It is desirable to move the dial back and forth in making the above adjustments, particularly so when altering any capacities connected with the oscillator circuit.

MICROPHONICS:-This is occasioned by mechanical vibration of the oscillator tuning condenser plates. A particularly microphonic tube may also cause it. See that the tuning condenser is floating on the rubber and that the cabinet is not binding on the dial drive shaft. Oscillation is not paramount in this receiver but an effect similar to this may be encountered at spots on the dial if the IF transformers are not set at their proper setting of 175 KC. Too much RF energy reaching the speaker leads produces a similar effect, overcome by twisting the ground and plate wires together in the speaker cable. This is done before the other two speaker leads are tied along with them.

MODEL 53-SW
MODEL 54-SW
Parts List
Data

COLIN B. KENNEDY CORP.

THE KENNEDY Model 53 short wave unit operates on the superheterodyne principle, and is commonly called a converter or adapter.

When switched to long wave position the power is shut off from the short wave unit. When switched to the short wave position the power is turned on, and after the tubes warm up the unit is ready to operate.

In factory assembled combinations the short wave unit is already properly connected to the broadcast receiver. It is always advisable to check over this wiring, however, and see that all connections are properly and securely made

The three wires from the rear-center of the unit are to be connected as follows:

BLACK The black wire is to be connected to the ground post of the long wave receiver. The actual ground wire is attached to the GND post of the short wave unit and left there permanently.

WHITE: The white wire is to be connected to the antenna post of the long wave receiver. The actual antenna, or aerial, is attached to the ANT post of the short wave unit and left there permanently.

RED: The red wire is to be attached to a source of "B" voltage—either at the long wave chassis or speaker. Any voltage of from 150 to 250 volts is suitable. It should be obtained from some point in the long wave receiver chassis, speaker or filter system, where it will receive fairly good filtering and be relatively free from A. C. hum.

IMPORTANT. As the output of the short wave unit is tuned to a definite frequency it is necessary to set the dial of the long wave receiver at this frequency, and leave it there while tuning for short wave stations. It is important that the long wave dial be set exactly at the output frequency of the short wave unit.

This point is approximately 1,000 kilocycles.

If for any reason the output frequency of the short wave unit has shifted it may be retuned as follows. Set long wave dial at 1,000 kilocycles or at mark. Tune in short wave signals. Tune output by means of adjustment screw, until signal is loudest. Use a bakelite screw driver. The output adjusting screw is at right hand end of short wave chassis, facing the rear.

In the event a strong local station at or near 1,000 kilocycles interferes with short wave reception, the long wave dial may be moved slightly to right or left of 1,000 kilocycle mark, and the output retuned, as above, to obtain greatest short wave output at this newly selected frequency. Move long wave dial off 1,000 K. C. only a few kilocycles at a time, returning the short wave output each time, until the interference is eliminated.

Should the short wave output adjustment be far out of tune, a simple method of resetting is to feed the output of a laboratory or service man's oscillator (tuned to 1,000 K. C.) into the grid of the 224 tube of the short wave unit (while operating) and with long wave receiver also set at 1,000 K. C. (previously set by means of same oscillator, for accuracy). The short wave output adjustment screw may now be turned until maximum oscillator signal is heard, or an output meter, on long wave set, indicates maximum.

PARTS LIST
MODELS 53 & 54-A

1-4-450	Coil. oscillator; with leads	$ .75
1-6-301	Condenser, oscillator tuning, 200 Mmf	3.25
1-3-226	Condenser, tubular, 0.06 mfd	.30
1-4-462	Condenser, output adjust, 10-70 Mmf	.50
1-1-A474	Condenser, mica, 100 Mmf	.30
1-1-3154	Dial lamp, 2½ volt	.30
1-2-7134	Knob, large, wood	.20
2-2-7134	Knob, small, wood	.18
1-1-F531	Post, ant	.10
1-1-F530	Post, gnd	.10
1-2-F529	Post. bakelite insulating strip	05
1-1-F550	Post, insulating washer	.01
2-1-4173	Resistor, 1 watt, 10,000 ohm	.25
1-1-4173	Resistor, graphite, 10,000 ohm	.25
1-1-7366	Resistor, graphite, 25,000 ohm	.25
1-1-4224	Resistor, grapihte, 50,000 ohm	.25
1-2-172	Resistor, 400 ohm	.25
1-7-103	Shield, output coil, with bolts	.15
2-3-514	Socket, 224	.18
2-4-515	Socket, 227	.18
1-8-201	Transformer, 60 cycle	2.00
2-8-201	Transformer, 25 cycle	3.30

ADDITIONAL PARTS
MODEL 53

1-2-253	Coil, output	1.00
1-6-122	Dial, complete, with scale	1.00
1-3-468	Switch, 3 point, tap	.50
1-3-471	Switch. A C, and LW-SW	.65

COLIN B. KENNEDY CORP.

MODEL 53-SW
MODEL 54-SW
Schematic, Chassis
Calibration Scales

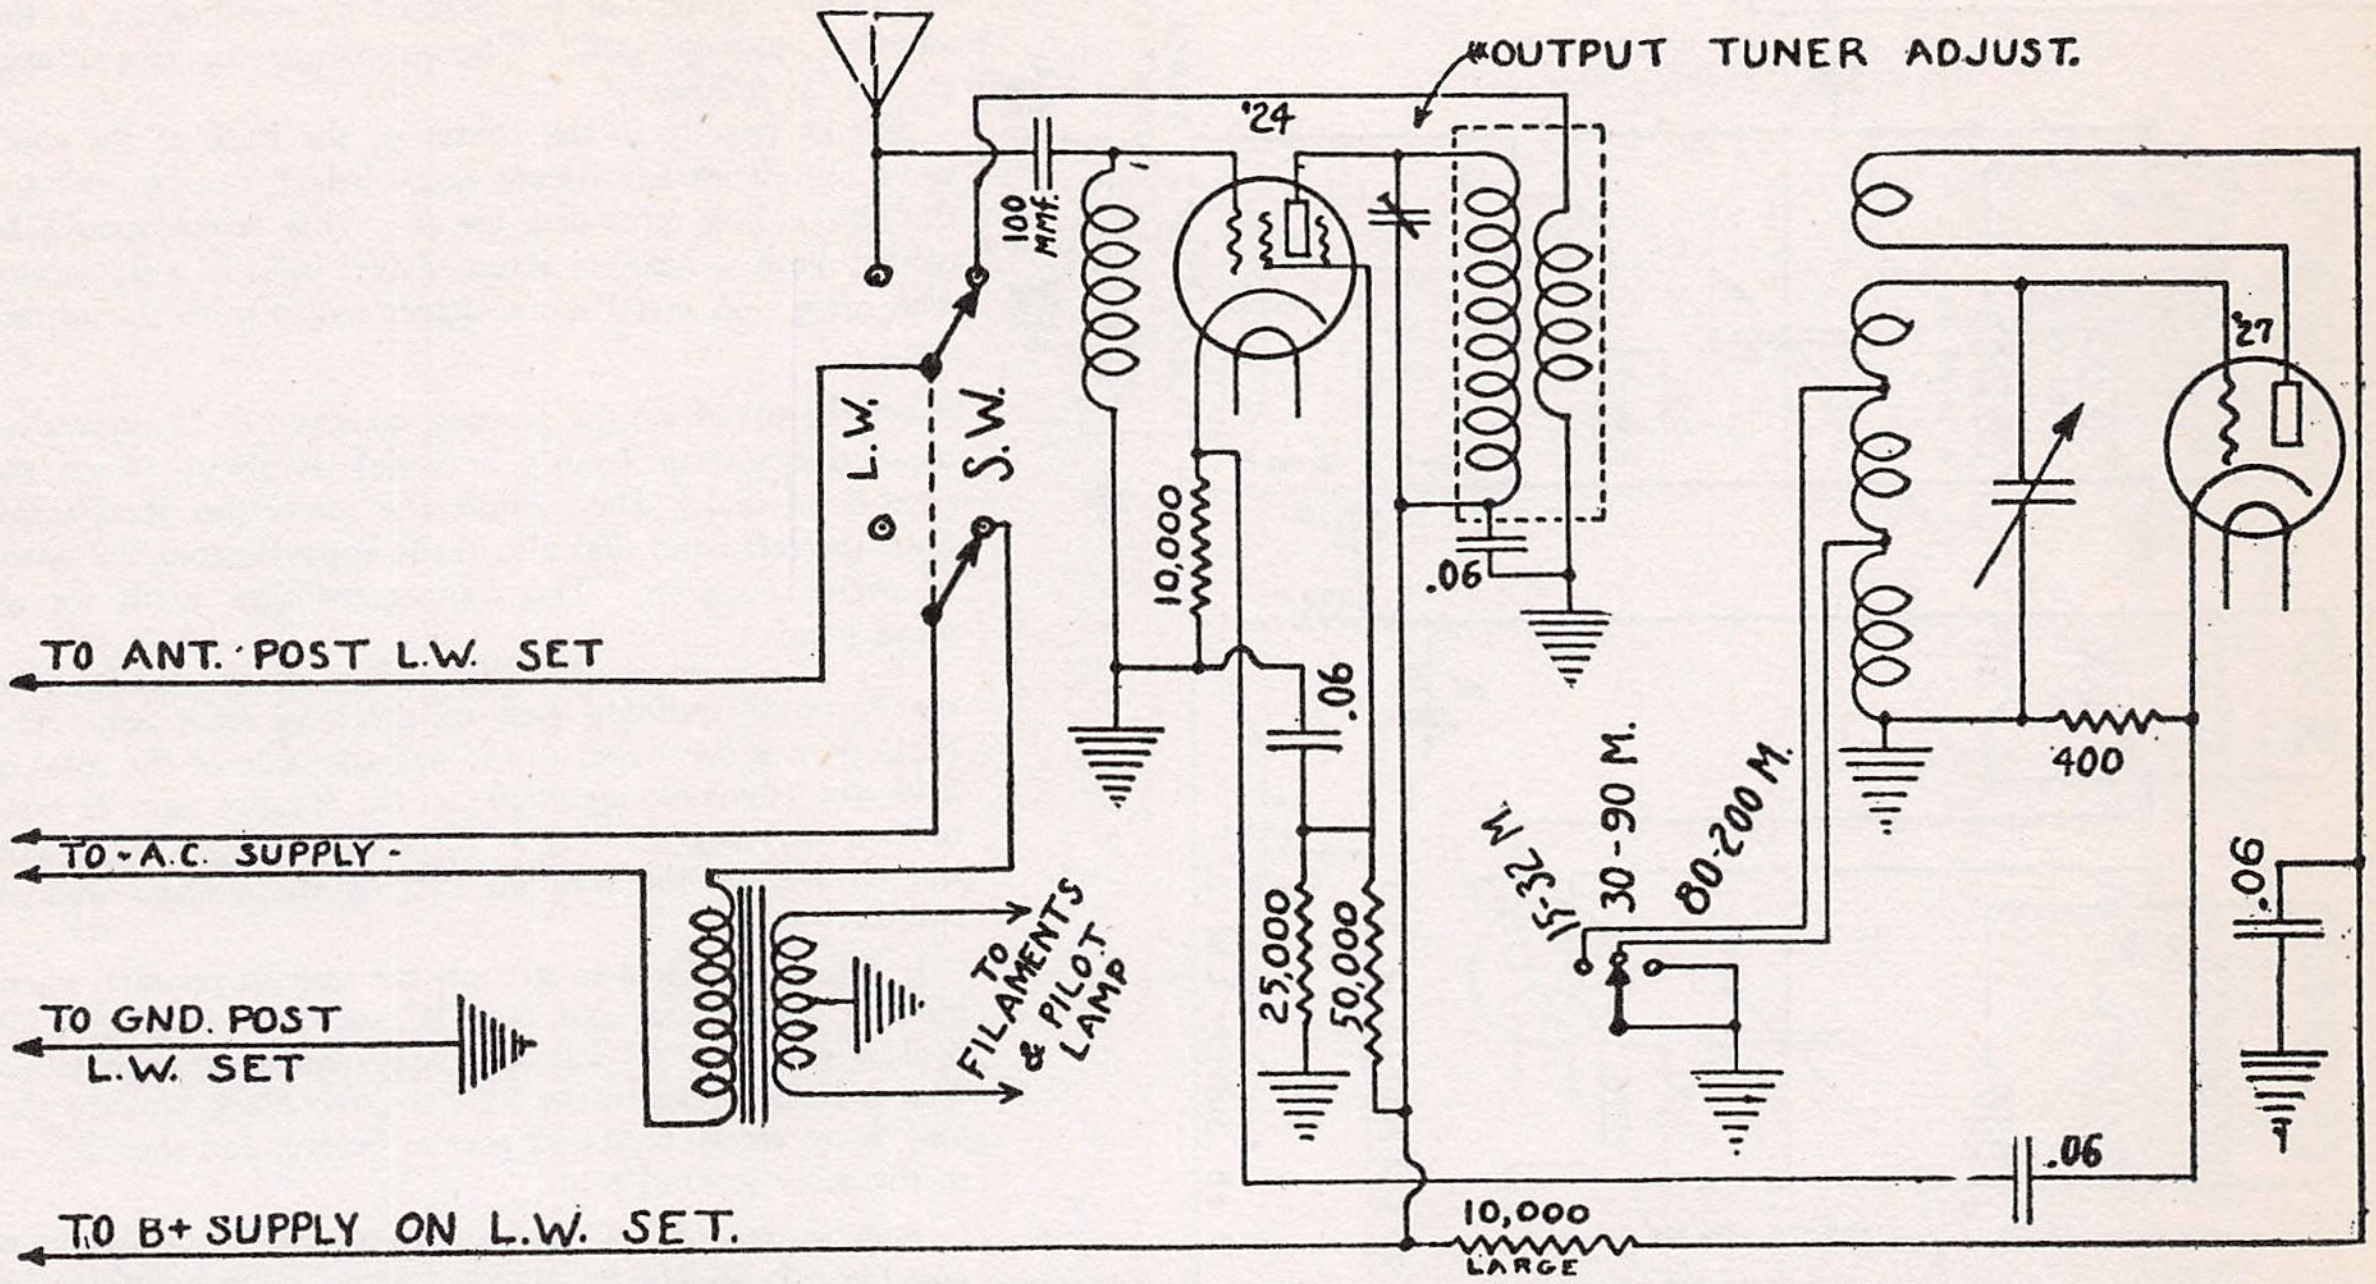
*OUTPUT TUNER ADJUST.
'24
100 MMF.
L.W.
S.W.
10,000
.06
.06
'27
400
15-32 M.
30-90 M.
80-200 M.
25,000
50,000
.06
.06
10,000
LARGE
TO ANT. POST L.W. SET
TO A.C. SUPPLY
TO FILAMENTS & PILOT LAMP
TO GND. POST L.W. SET
TO B+ SUPPLY ON L.W. SET.

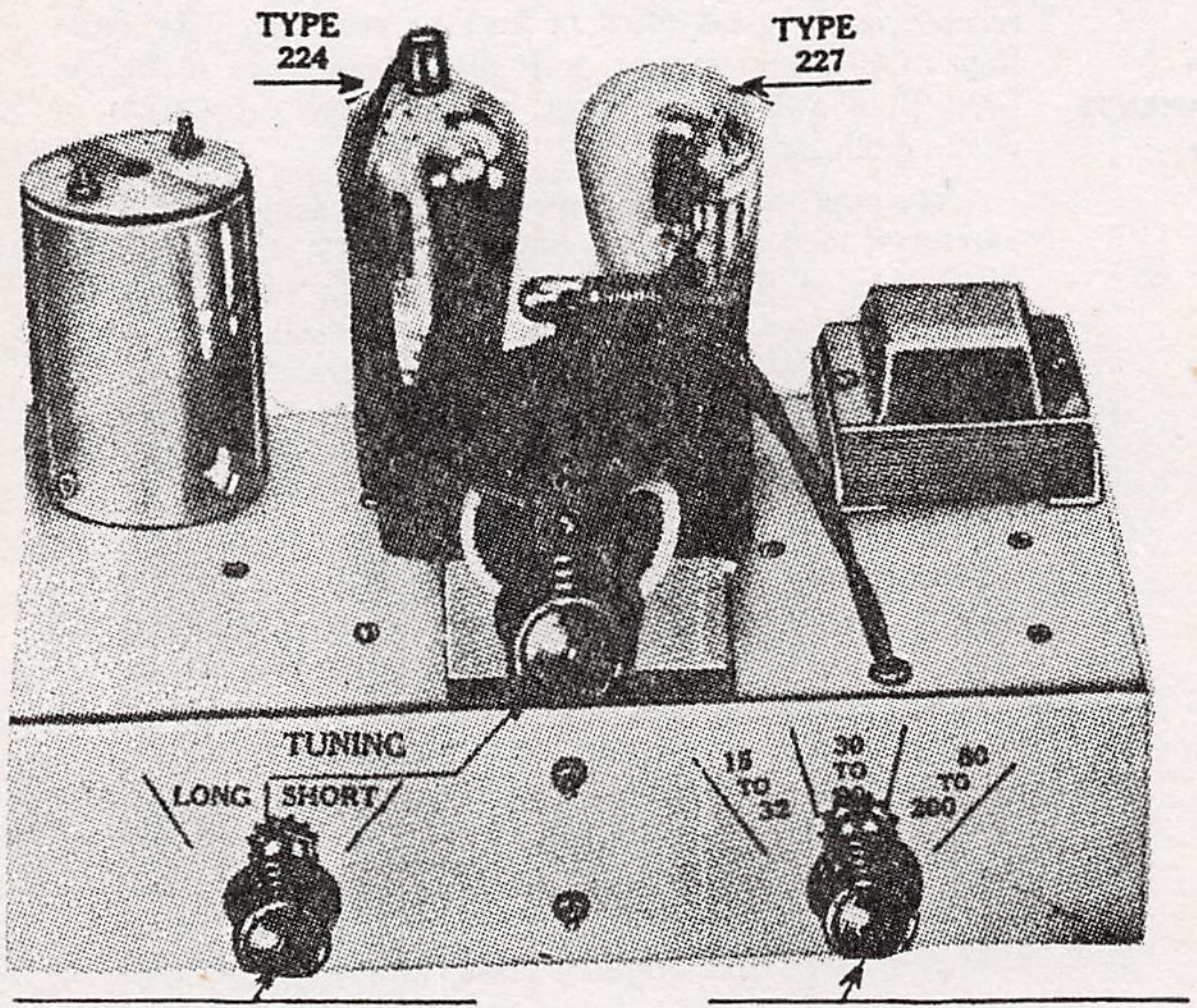
TYPE 224
TYPE 227
TUNING
LONG
SHORT
15 TO 32
30 TO 90
80 TO 200

LONG-SHORT WAVE SWITCH

WAVE BAND CHANGE SWITCH

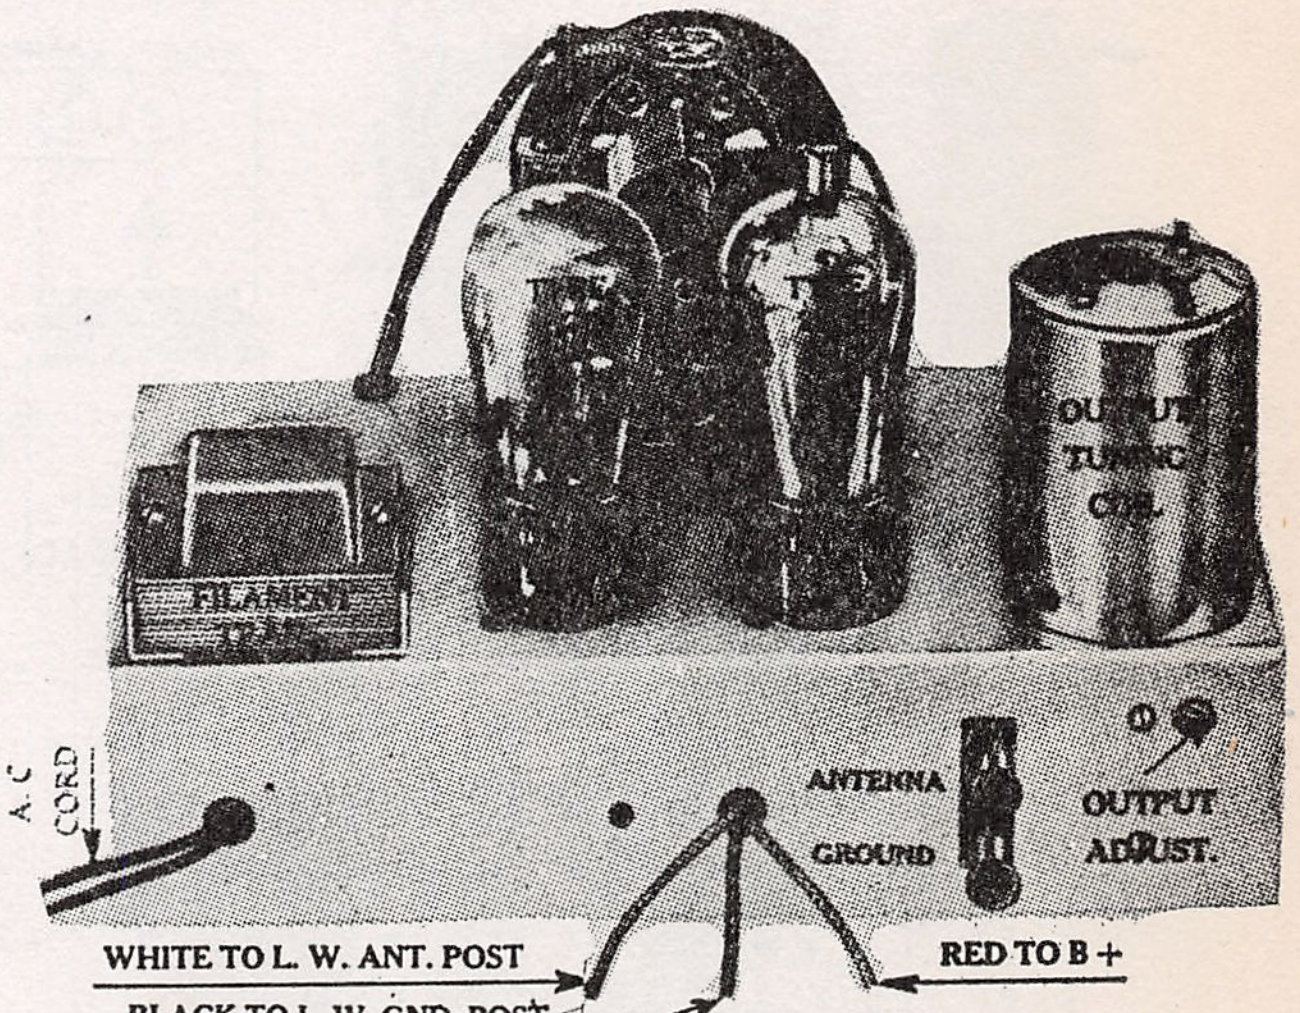
A.C. CORD
FILAMENT TRANS.
OUTPUT TUNING COIL
ANTENNA
GROUND
OUTPUT ADJUST.

WHITE TO L. W. ANT. POST

BLACK TO L. W. GND. POST

RED TO B +

DIAL READINGS vs. WAVELENGTH (METERS) - - - - 15-32 METER BAND

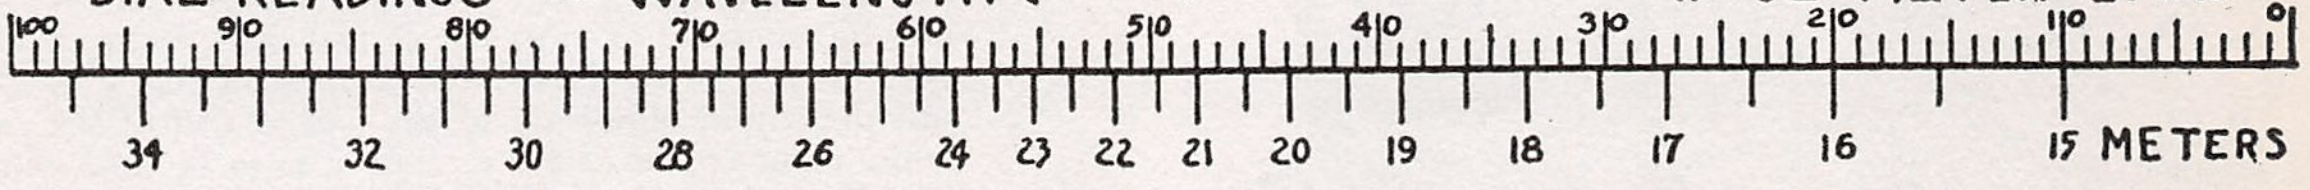

DIAL READINGS vs. WAVELENGTH (METERS) 30-90 METER BAND

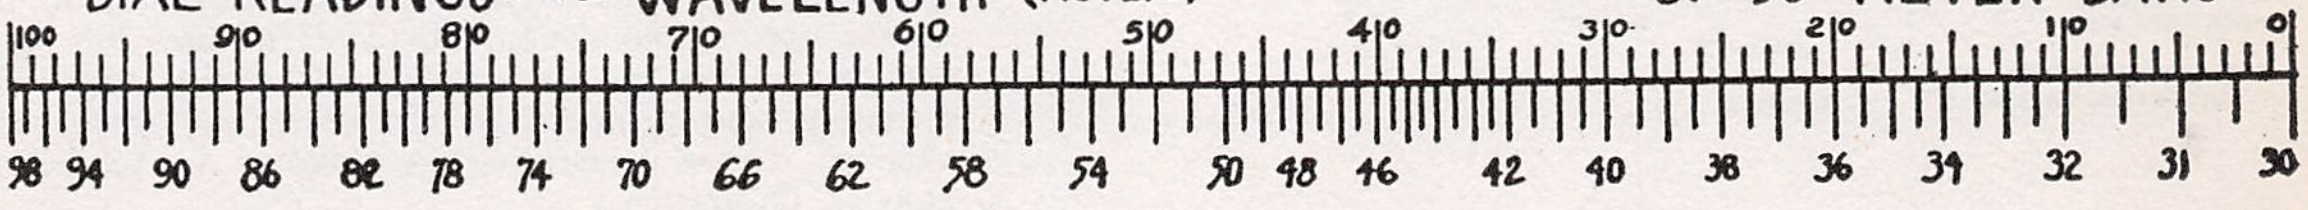

DIAL READINGS vs. WAVELENGTH (METERS) 80-200 METER BAND

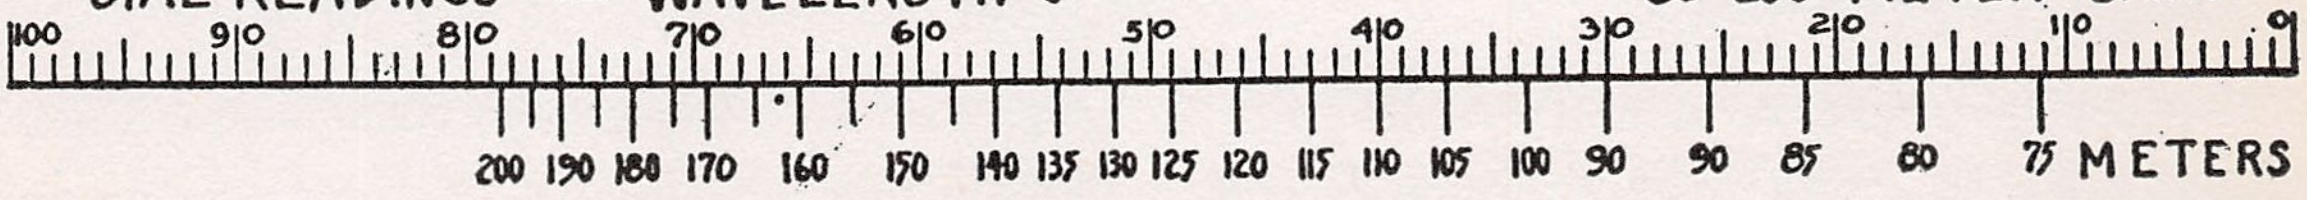

MODEL 54 "Globe Trotter"
Schematic, Chassis
Data

COLIN B. KENNEDY CORP.

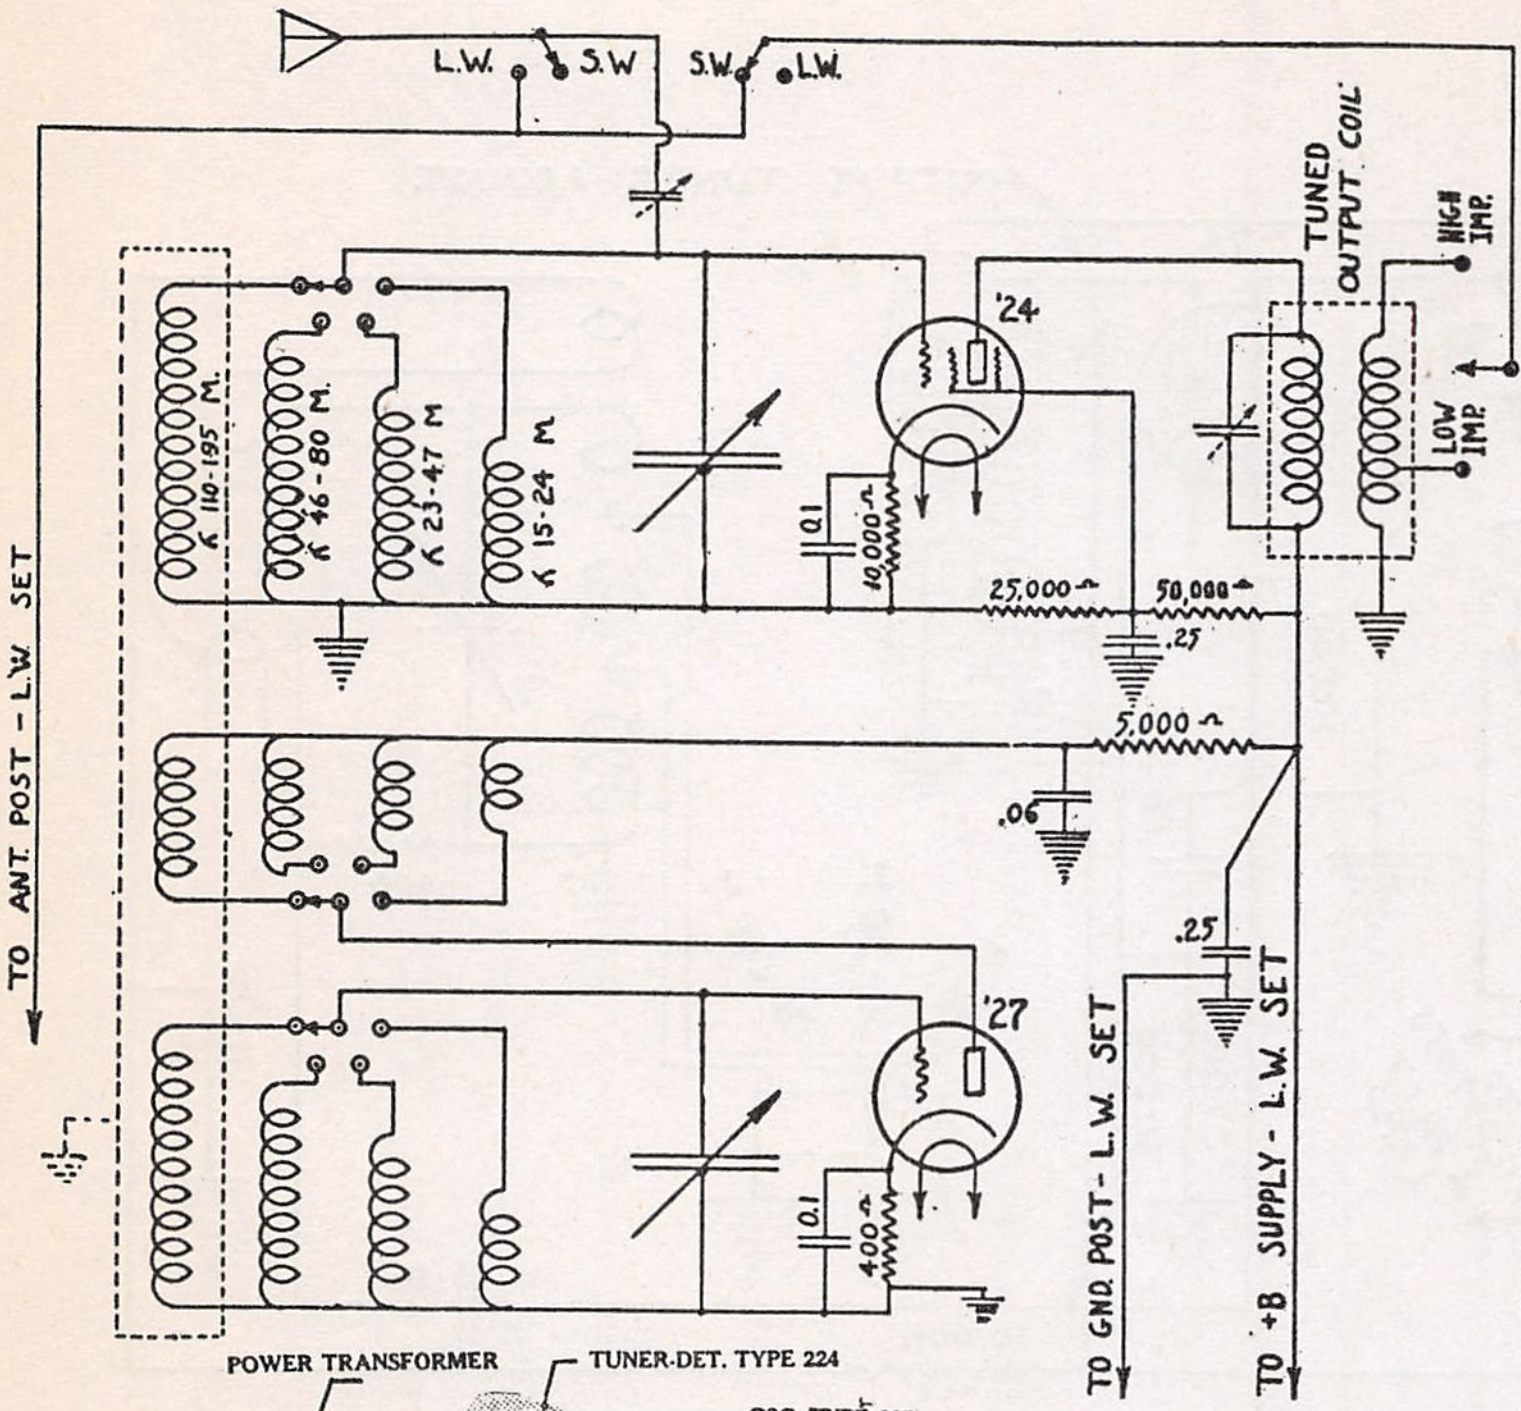
L.W.
S.W
S.W.
L.W.
TUNED OUTPUT COIL
HIGH IMP.
LOW IMP.
'24
λ 110-195 M.
λ 46-80 M.
λ 23-47 M.
λ 15-24 M.
.01
10,000 Ω
25,000 Ω
50,000 Ω
.25
5,000 Ω
.06
.25
'27
.01
400 Ω
TO ANT. POST - L.W. SET
TO GND. POST - L.W. SET
TO +B SUPPLY - L.W. SET

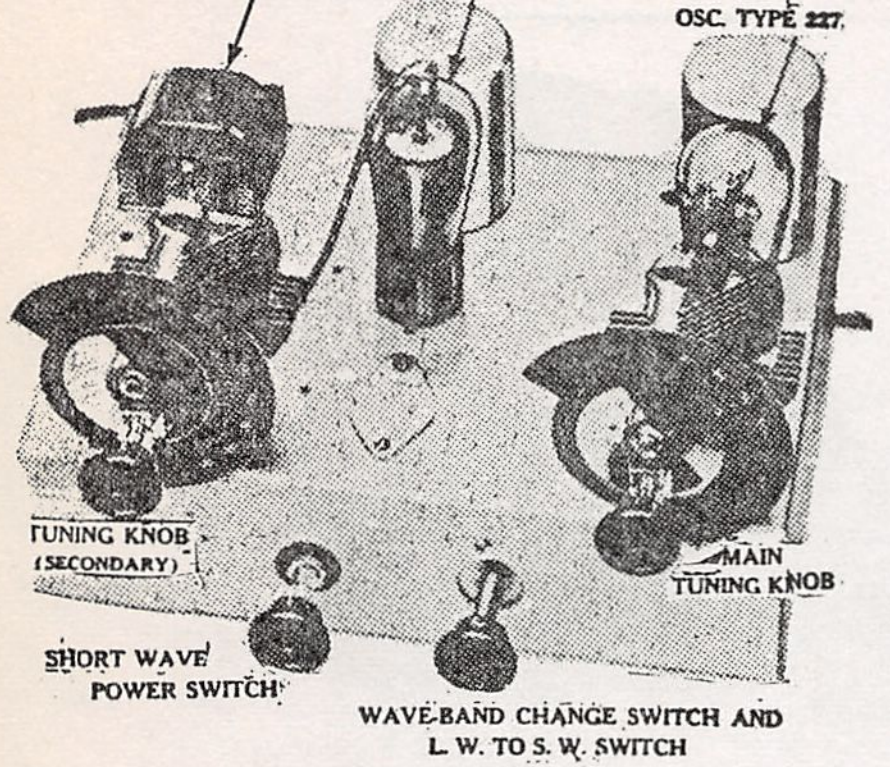
POWER TRANSFORMER
TUNER-DET. TYPE 224
OSC. TYPE 227
TUNING KNOB (SECONDARY)
MAIN TUNING KNOB
SHORT WAVE POWER SWITCH
WAVE-BAND CHANGE SWITCH AND L. W. TO S. W. SWITCH

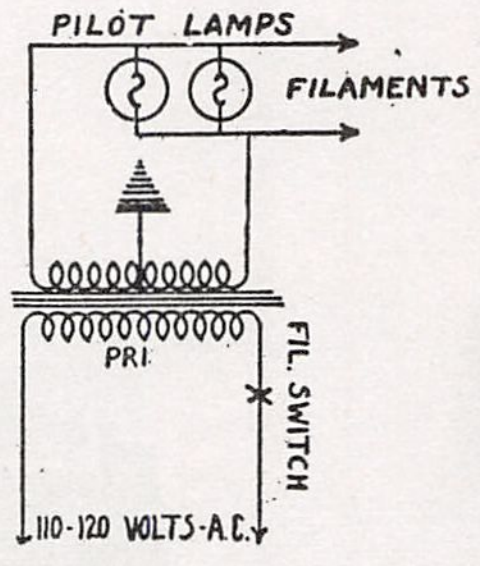
PILOT LAMPS
FILAMENTS
PRI.
FIL. SWITCH
110-120 VOLTS-A.C.

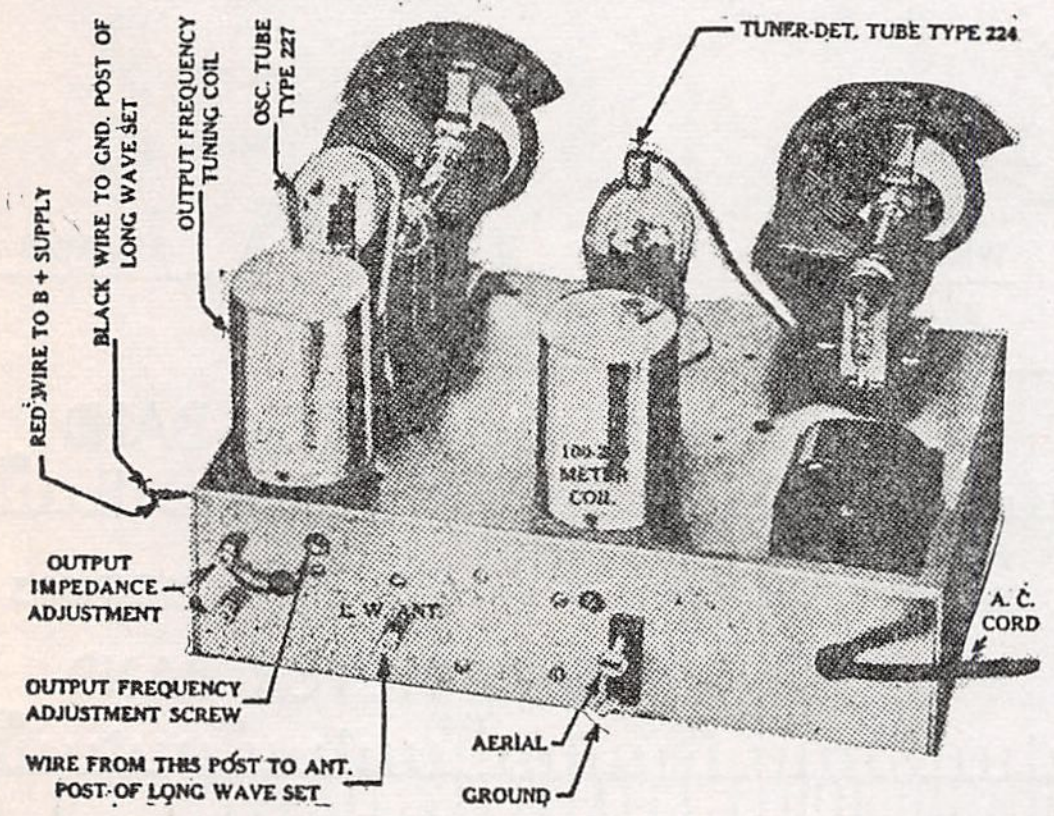
RED WIRE TO B + SUPPLY
BLACK WIRE TO GND. POST OF LONG WAVE SET
OUTPUT FREQUENCY TUNING COIL
OSC. TUBE TYPE 227
TUNER-DET. TUBE TYPE 224
100-200 METER COIL
OUTPUT IMPEDANCE ADJUSTMENT
L. W. ANT.
A.C. CORD
OUTPUT FREQUENCY ADJUSTMENT SCREW
WIRE FROM THIS POST TO ANT. POST OF LONG WAVE SET
AERIAL
GROUND

When testing the short wave unit at the factory, it is adjusted for use with an average antenna. Improved results may sometimes be obtained by re-adjusting to the antenna actually used. The procedure for this adjustment is as follows:

Almost exactly in the center of the back of the short wave unit is an adjustment screw which can be operated through a hole provided for it. This screw should be turned with a bakelite screw driver, which most service men carry. A metal screw driver will disturb the adjustment.

Set the switch on the position marked "15-25 meters"—tune in a station (music or code) at about 50 on the right-hand dial. Then adjust the screw described above until the left-hand dial also reads approximately 50 when properly tuned in. This adjustment then holds for all wave bands.

The BLACK wire is connected to the "ground" binding post of the long wave set. The RED wire is connected to the negative side of the speaker field coil (dynamic speaker), to the speaker wire or connection carrying a filtered "B" voltage supply, or, inside the chassis, to the positive end of the voltage divider resistor.

If difficulty is had in getting the unit to operate when initially hooked up, and the "B" source is suspected, 90 to 135 volts of "B" batteries may temporarily be tried. The red wire goes to the "B" +, the black wire to the long wave receiver ground post as before, and the "B" — to the same ground post.

Any source of "B" voltage from 150 to 250-volts is suitable. It should be obtained from some point in the long wave receiver speaker or filter system, where it will receive fairly good filtering and be relatively free from hum. A lower voltage, well filtered, is more to be desired than a higher voltage with a large proportion of A.C. modulation.

Obtaining this plate supply is very simple on many receivers, such as the Kennedy models 210, 310, 220, 320, 1030, 632, 426, 526, 726, and 826. In these cases the B supply may be taken from the tip-jack terminating the black speaker wire. In Kennedy models 42, 50 and 52 it may be obtained at the speaker terminal panel from the side of the field winding which is common with the speaker transformer primary

The output of the short wave unit is tuned. It is set at the factory, to tune to approximately 1525 kilocycles. Naturally, the long wave receiver dial must be set at this point for short wave reception, and left there.

In the event the long wave receiver will not tune past 1500 kilocyles, or a strong local broadcast station interferes at that point, the output frequency tuning may be altered slightly to avoid the difficulty. An adjusting screw for this tuning may be reached through a hole in the rear of the chassis. It is located near the impedance adjusting wire and binding posts, and is to be adjusted with a bakelite screw driver, as a metal tool will upset the adjustment.

It will be noted, facing the rear of the chassis, that on the left hand side a wire has been brought out which may be connected to either one of two small binding posts near the end of the base. The purpose of this is to adjust the output impedance of the unit to that of the antenna input circuit of the receiver it is to be used with. The Kennedy models named above have high impedance antenna circuits and therefore require this wire to be on the upper binding post. In doubtful cases this wire may be tried first on one and then on the other, with unit operating, and permanently left where best results are obtained. These connections are indicated on the accompanying illustration.

MODEL 54-A
Schematic, Chassis
Data

COLIN B. KENNEDY CORP.

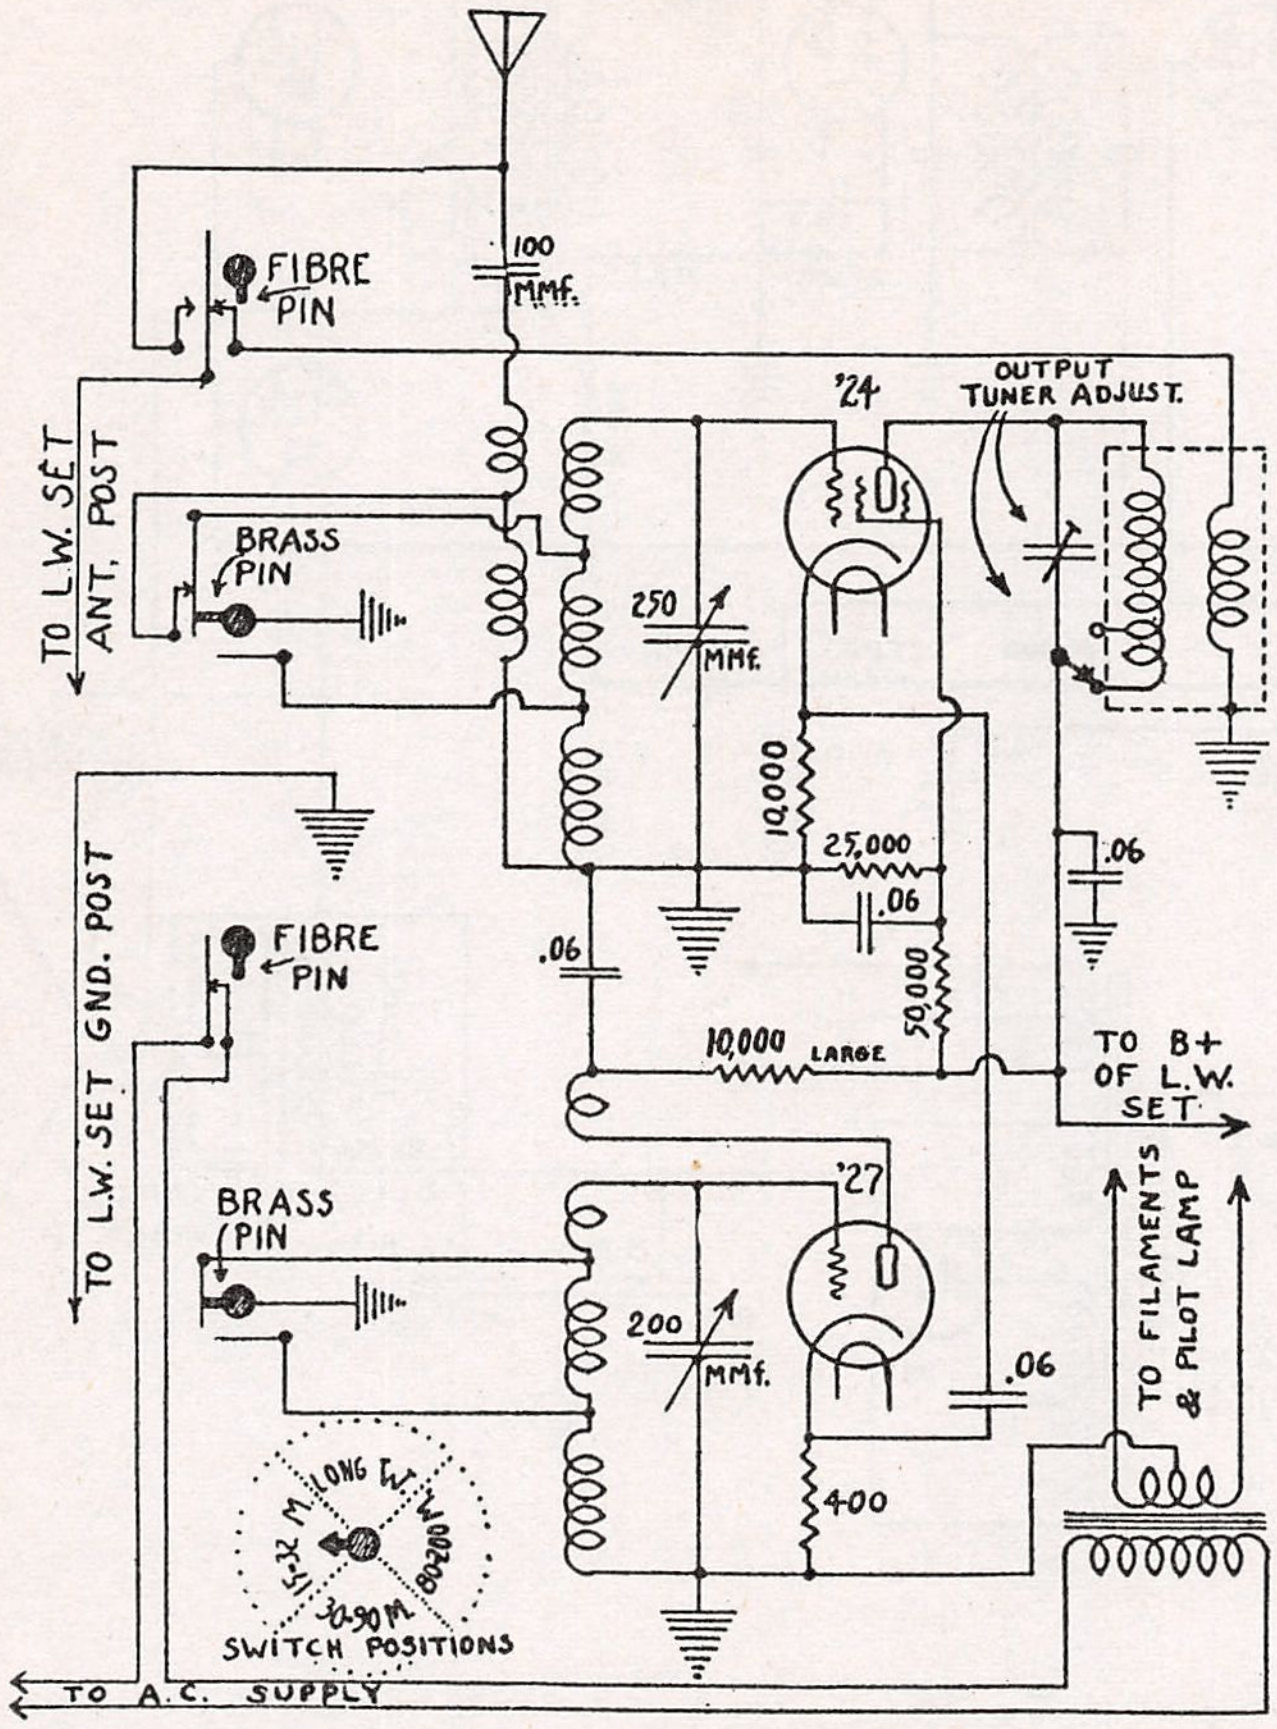
FIBRE PIN
100 MMF.
'24
OUTPUT TUNER ADJUST.
TO L.W. SET ANT. POST
BRASS PIN
250 MMF.
10,000
25,000
.06
.06
.06
50,000
10,000 LARGE
TO B+ OF L.W. SET
TO L.W. SET GND. POST
FIBRE PIN
BRASS PIN
'27
200 MMF.
.06
400
TO FILAMENTS & PILOT LAMP
LONG W.
80-200 M
30-90 M
15-32 M.
SWITCH POSITIONS
TO A.C. SUPPLY

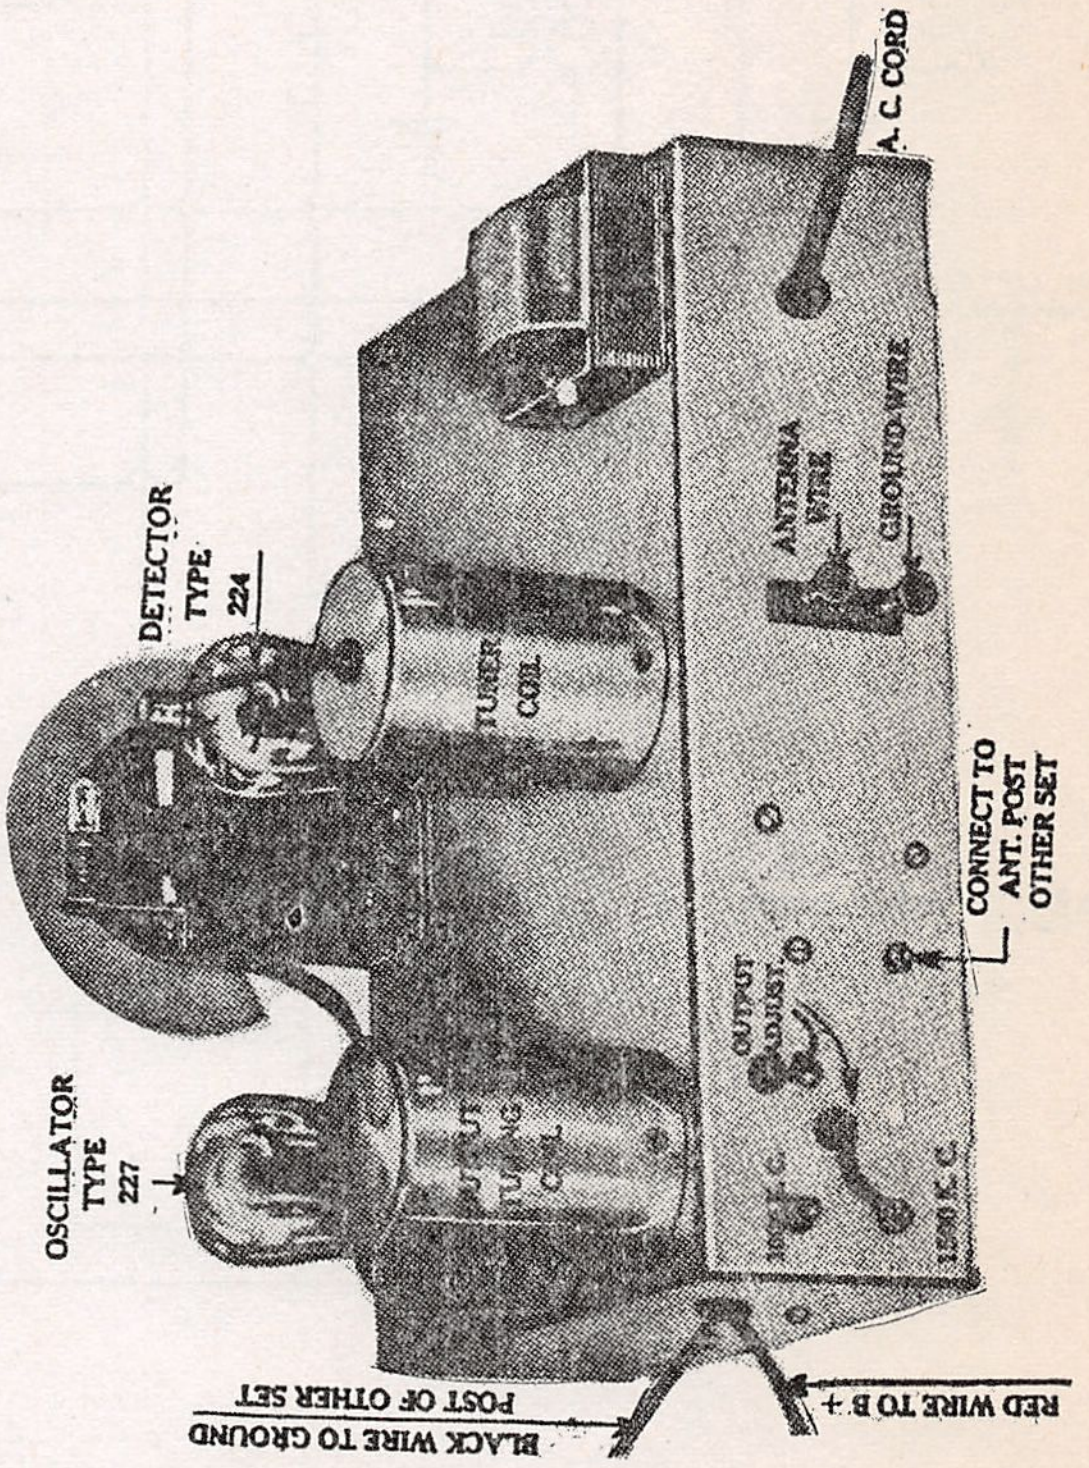
A.C. CORD
ANTENNA WIRE
GROUND WIRE
DETECTOR TYPE 224
TUNER COIL
CONNECT TO ANT. POST OTHER SET
OUTPUT ADJUST
OSCILLATOR TYPE 227
OUTPUT TUNING COIL
RED WIRE TO B+
BLACK WIRE TO GROUND POST OF OTHER SET

THE KENNEDY Model 54-A short wave unit operates on the superheterodyne principle, and is commonly called a converter or adapter.

A four-position rotary cam switch changes all connections to any one of three short wave band circuits or to long wave position. This switch makes the proper power and antenna connections, turning off the short wave unit and connecting the antenna directly to the broadcast receiver when in the long wave position. When switched to any one of the short wave bands, the tubes of the short wave unit are supplied with power, and antenna and output connections are made. The short wave unit is, naturally, not used for long wave broadcast reception.

In factory assembled combinations the short wave unit is already properly connected to the broadcast receiver. It is always advisable to check over this wiring, however, and see that all connections are properly and securely made

The two wires from the left side (facing rear) are to be connected as follows:

Black: The black wire is to be connected to the ground post of the long wave receiver. The actual ground wire attached to the GND post of the short wave unit and left there permanently.

Red: The red wire is to be attached to a source of "B" voltage—either at the long wave chassis or speaker. Any voltage of from 150 to 250 volts is suitable. It should be obtained from some point in the long wave receiver chassis, speaker or filter system, where it will receive fairly good filtering and be relatively free from A. C. hum.

A wire, as short as practical, must be connected from the binding post at left-center (facing rear) of unit to the antenna post of the broadcast chassis. The actual antenna, or aerial, is attached to the ANT post of the short wave unit and left there permanently.

For Calibration Scale refer to Model 53-SW

MODEL 56
Schematic
Voltage

COLIN B. KENNEDY CORP.

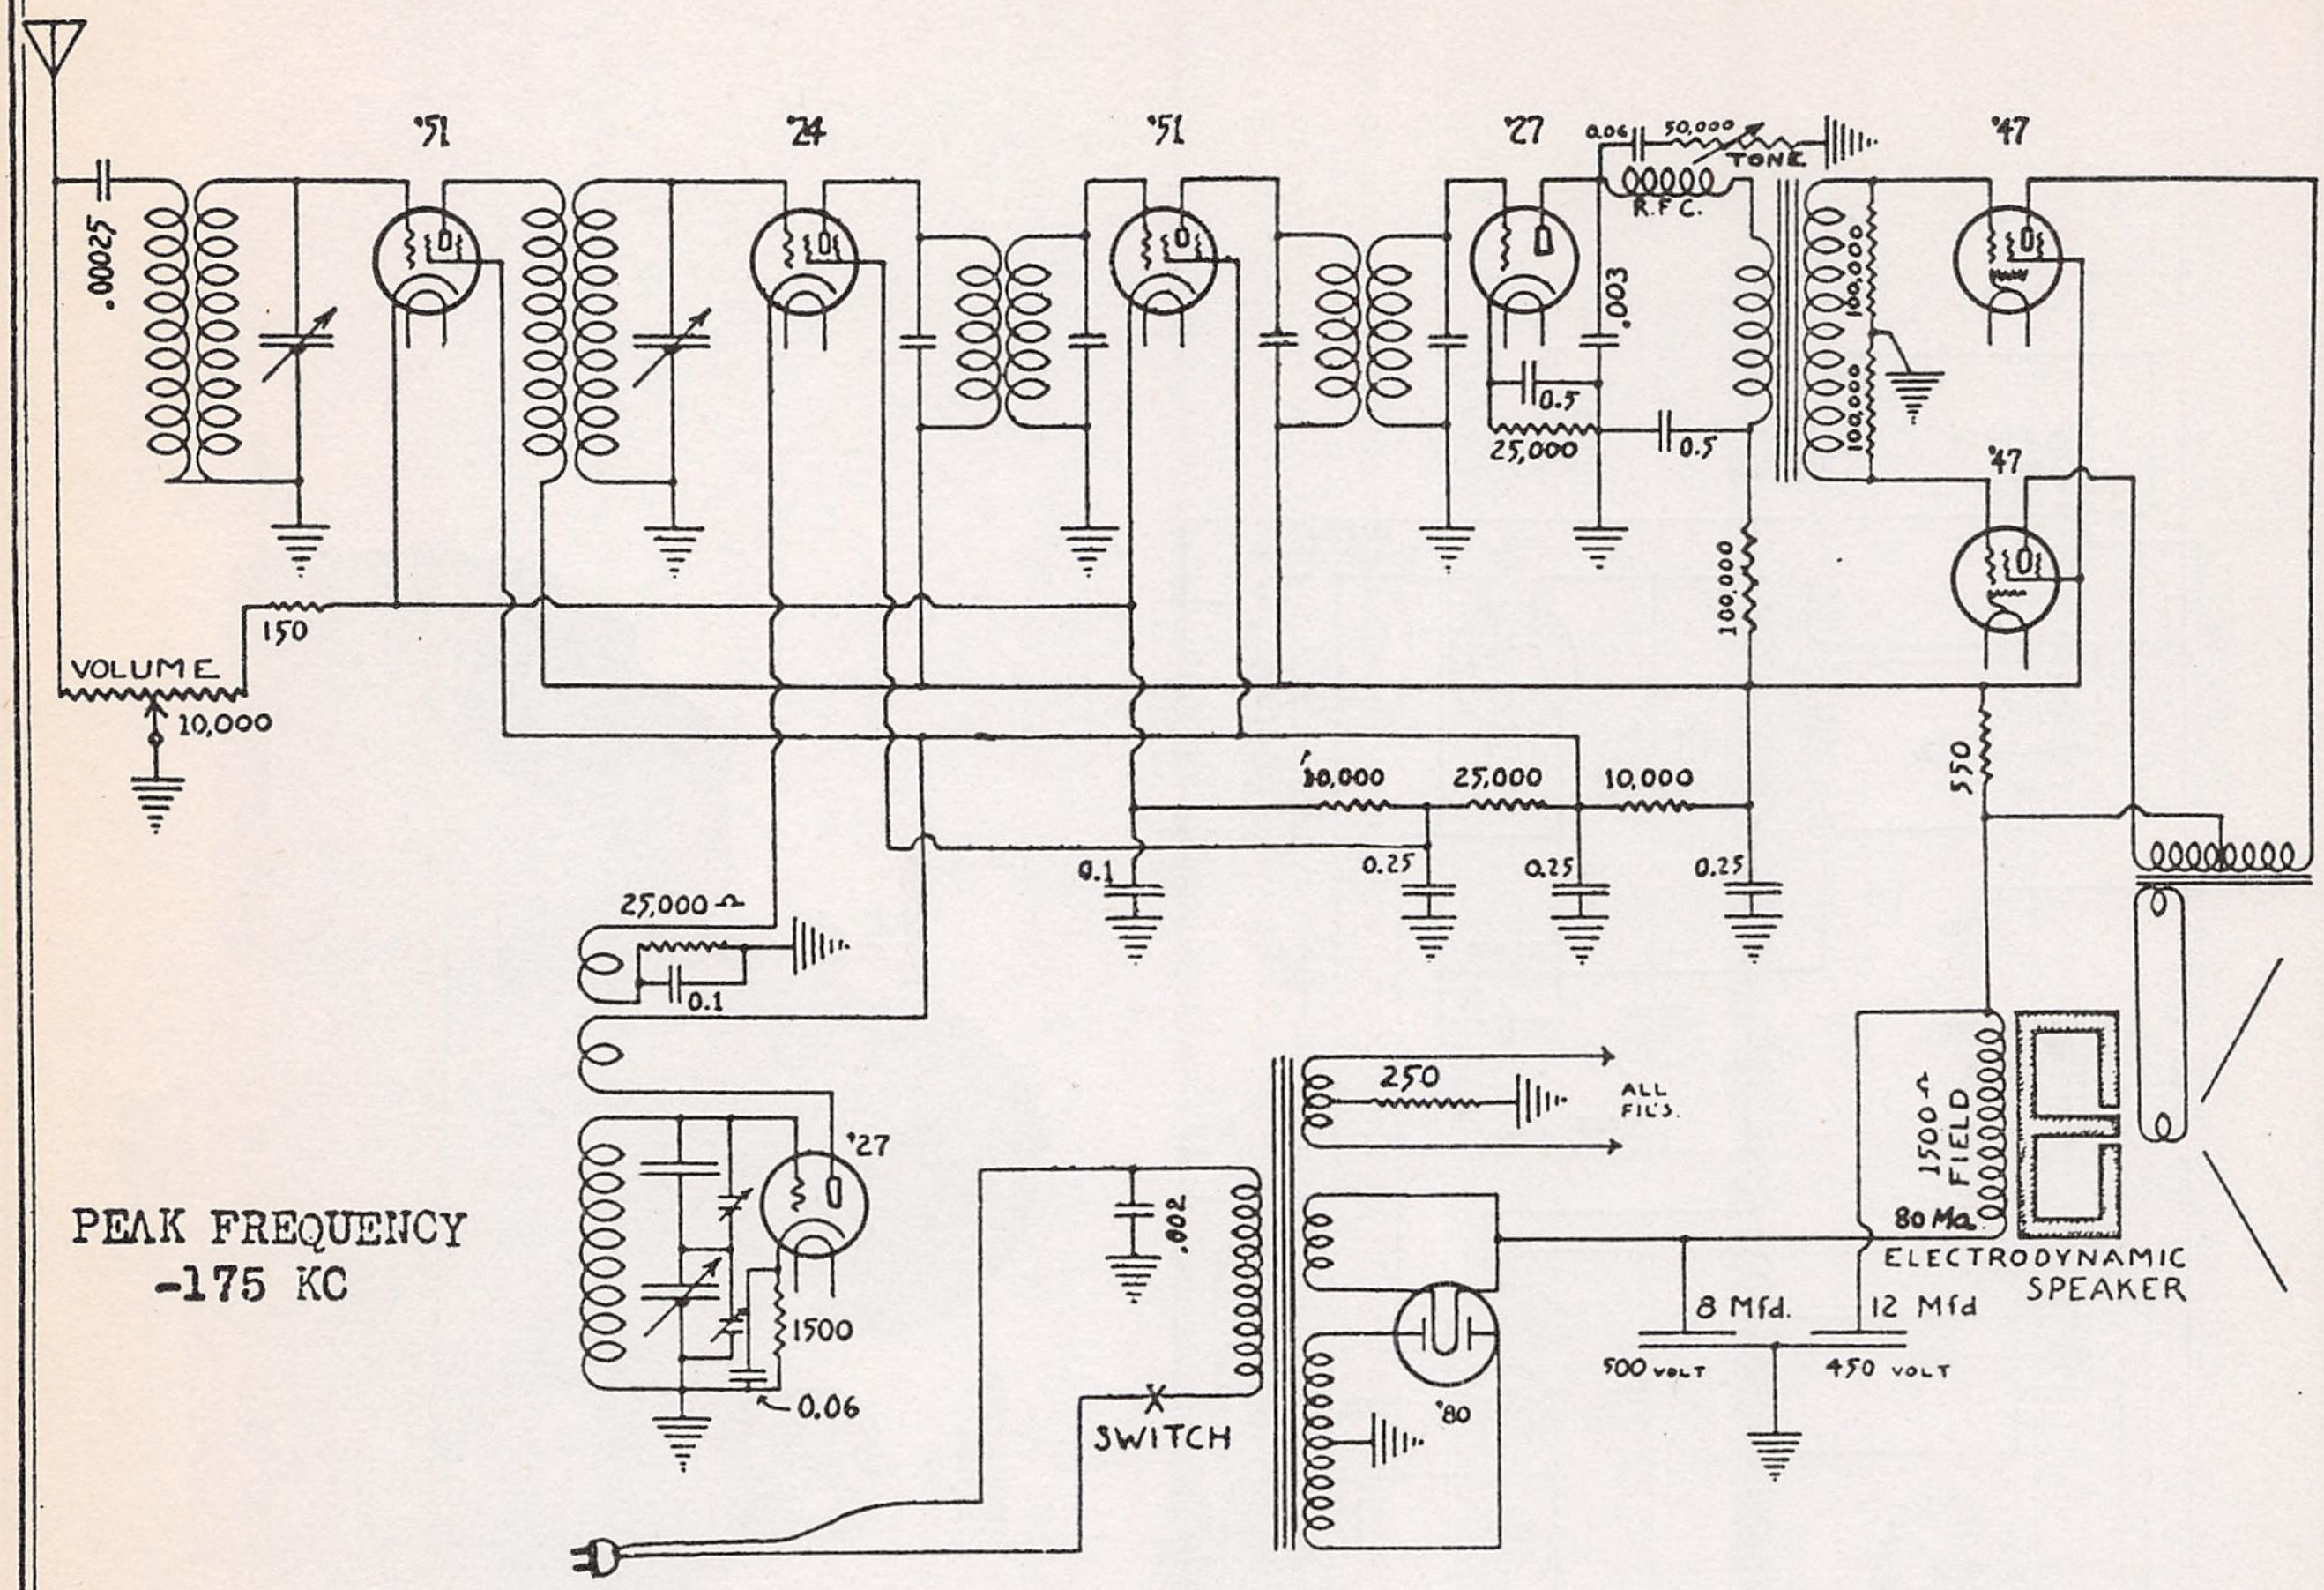
'51
'24
'51
'27
'47
'47
.00025
VOLUME
10,000
150
0.06
50,000
TONE
R.F.C.
.003
0.5
25,000
0.5
100,000
100,000
100,000
550
10,000
25,000
10,000
0.1
0.25
0.25
0.25
25,000
0.1
'27
1500
0.06
250
ALL FILS.
.002
SWITCH
'80
8 Mfd.
12 Mfd
500 VOLT
450 VOLT
1500 Ω FIELD
80 Ma.
ELECTRODYNAMIC SPEAKER

PEAK FREQUENCY
-175 KC

Model 56 (1931)

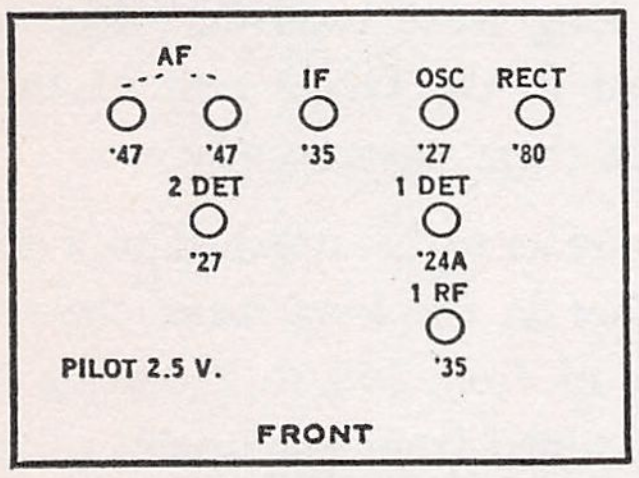
AF
'47
'47
2 DET
'27
IF
'35
OSC
'27
1 DET
'24A
1 RF
'35
RECT
'80
PILOT 2.5 V.
FRONT

Purpose	*Type*	*Fil. A C*	*Plate*	*Screen*	*Bias*
Radio Frequency	551	2.35	208	98	3 to 30
1st Detector	224	2.35	208	30	5
Oscillator	227	2.35	90		10
Intermediate Freq.	551	2.35	208	98	3 to 30
2nd Detector	227	2.35	120		16
Power Tubes	247	2.35	220	208	14
Rectifier	280	4.90			

Volume control full on except for R F and I. F bias extremes. Line voltage 115

Plate, screen and bias voltages measured from ground or chassis to respective terminals.

Resistors

117366	Resistor	25,000-ohm graphite
114173	Resistor	10,000-ohm graphite
114175	Resistor	1,500-ohm graphite
12158	Resistor	500-ohm vitreous
26406	Resistor	10,000-ohm variable and 150 ohm fixed, volume, with switch
25369	Resistor	50,000-ohm variable

Coils

11600	Set of three matched coils

Condensers

113303	Condenser	½ and ½ mfd.
13417	Condenser	¼, ¼ and ¼ mfd., 300-volt
13306	Condenser	.1 mfd tubular
13226	Condenser	.06 tubular 200-volt
14306	Condenser	.003 mica
113305	Condenser	.00025 mica
16302	Condenser	8 mfd 500-volt
17302	Condenser	12 mfd 430-volt

For Technical Data refer to Model 52

MODEL 62
Schematic
Parts List
Voltage Data

COLIN B. KENNEDY CORP.

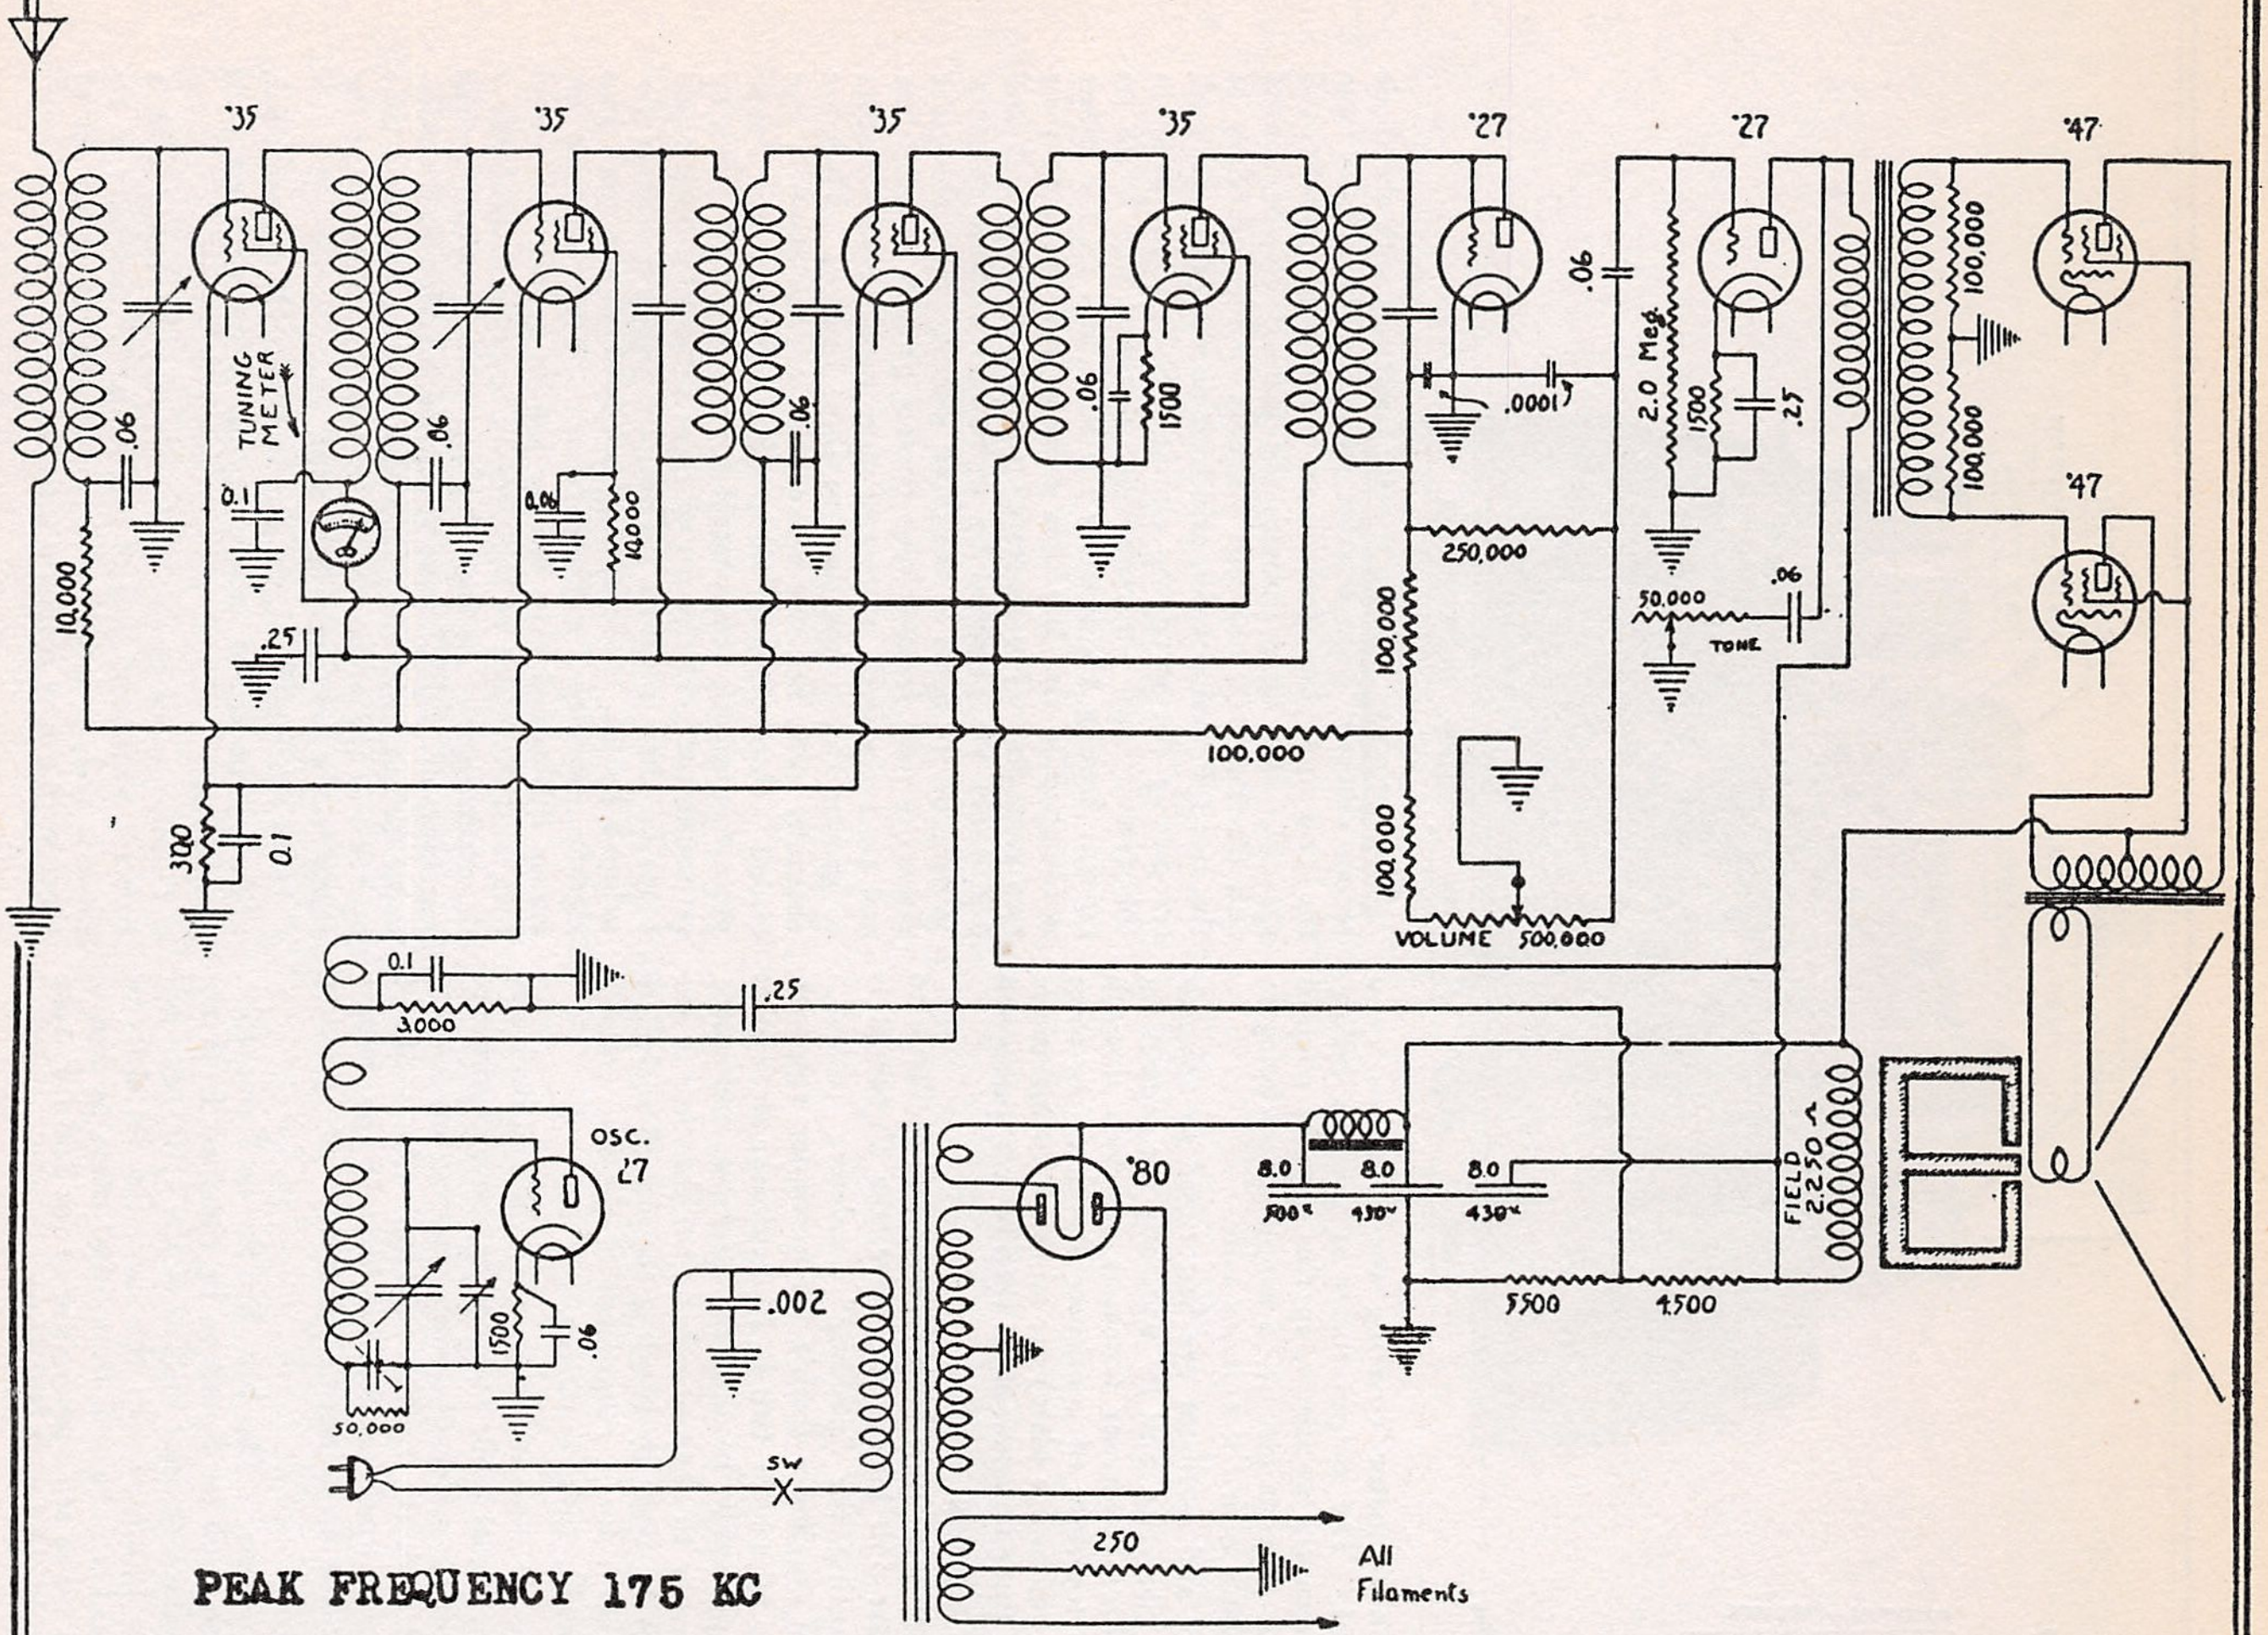
'35
'35
'35
'35
'27
'27
'47
'47
.06
TUNING METER
0.1
.06
0.06
10,000
.06
.06
1500
.06
.0001
2.0 Meg
1500
.25
100,000
100,000
250,000
50,000
TONE
.06
10,000
.25
100,000
100,000
100,000
300
0.1
VOLUME 500,000
0.1
3000
.25
OSC. 27
1500
.06
50,000
.002
SW
'80
8.0
8.0
8.0
500v
430v
430v
5500
4500
FIELD 2250 Ω
250
All Filaments

PEAK FREQUENCY 175 KC

Coils		
1-5-600	Set three matched coils....	3.00
Condensers		
1-3-417	Condenser ¼, ¼ & ¼ mfd., 300 volt	1.25
1-3-306	Condenser 0.1 mfd. tubular, 200 volt	.35
1-3-226	Condenser 0.06 mfd. tubular, 200 volt	.30
1-1-A474	Condenser 0001 mfd. mica	.30
1-6-302	Condenser 8 mfd. wet elect'lytic 500 v.	2.50
2-7-302	Condenser 8 mfd. wet elect'lytic 430 v.	2.25
4-8-302	Condenser 8 mfd. dry elect'lytic 430 v.	1.75
1-4-301	Condenser three-gang, tuning	4.25
Resistors		
1-1-3404	Graphite, 2 megohm	.25
1-1-F225	Graphite, 250,000 ohm	.25
1-1-8484	Graphite, 100,000 ohm	.25
1-1-4224	Graphite, 50,000 ohm	.25
1-1-4173	Graphite, 10,000 ohm	.25
1-1-4172	Graphite, 3,000 ohm	.25
1-1-4175	Graphite, 1,500 ohm	.25
1-2-172	Graphite, 400 ohm	.25
1-4-172	Graphite, 1,000 ohm	.25
1-6-369	Tone control with Sw 50,000 ohm	1.35
1-7-406	Volume control, 500,000 ohm	1.00
1-1-F158	Voltage divider, 4,500 and 5,500 ohm	1.25
Transformers		
1-11-201	Power, 60-cycle	6.00
1-11-200	Power, 25-cycle	8.50
1-1-3203	Audio, push-pull	3.50
1-3-963	I. F. first stage	2.50
2-3-963	I. F second stage	2.50
3-3-963	I. F third stage	2.75
Speaker		
D-9XP	Speaker, 2,250 ohm P-P pentode, 12"	12.00

The electrodynamic speaker used with this receiver has a field resistence of 2,250 ohms. It acts as a filter choke, preceded by an 8 henry, 200 ohm choke incorporated in the chassis.

Purpose	*Type*	*Fil., A. C.*	*Plate*	*Screen*	*Bias*
R. F.	235	2.45	212	80	4
1 Det.	235	2.45	214	70	6
Osc.	227	2.45	80		6
1 I. F.	235	2.45	215	80	4
2 I. F.	235	2.45	214	80	7
2 Det.	227	2.45	(DIODE)		
1 A. F	227	2.45	200		10
Power Tubes	247	2.44	300	285	19
Rect.	280	4.95			

Volume control full on. Line voltage 120. Plate and screen voltages measured from cathodes to socket terminals. Bias measured from cathodes to ground.

Small deviations above or below the values given may be expected due to variations in parts, tubes and meters used.

MODEL 62
Chassis
Alignment Data

COLIN B. KENNEDY CORP.

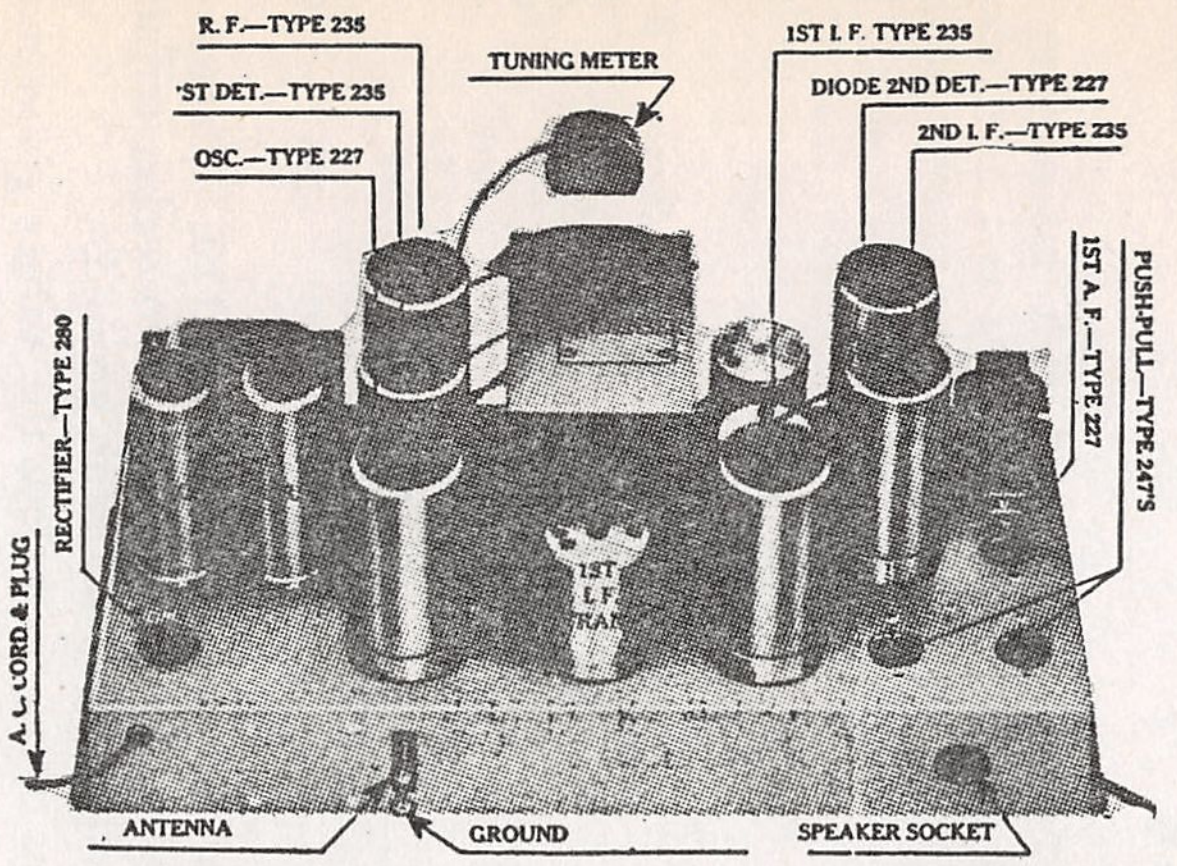

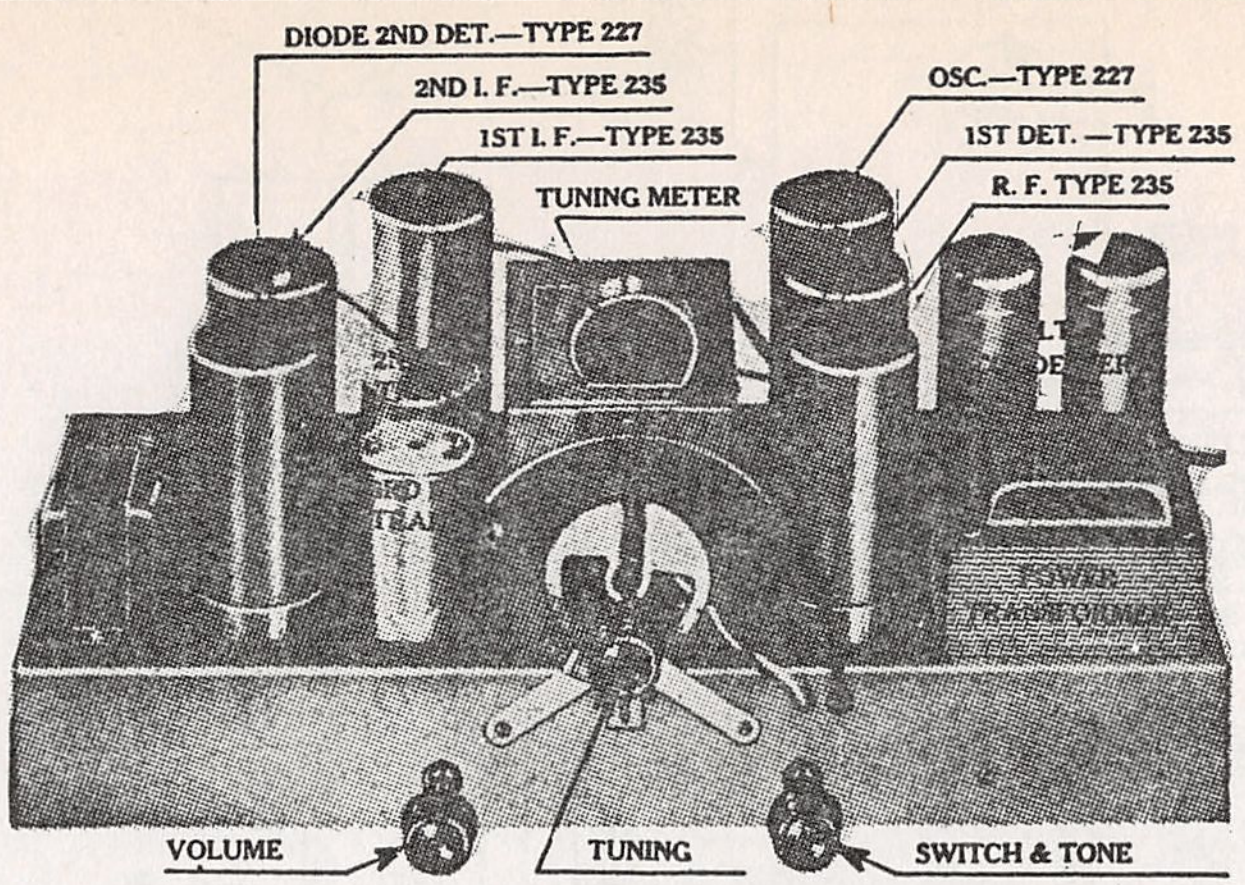

Alignment

Before aligning or testing alignment of tuned circuits, it is desirable to "short out" the automatic volume control action. This is done by grounding the grid return wire of the first three tubes at some point between the 10,000 ohm and 100,000 ohm grid return filter resistors. It will be noted that the low ends of the detector coil and 1st I. F. coil secondaries are connected to this wire. The antenna coil is also connected, but through a 10,000 ohm filtering resistor.

In aligning, it is first desirable to see that the intermediate frequency transformers are properly set. This is most readily accomplished by using an output meter and an accurate source of 175 kilocycle radio frequency, such as an oscillator. The accuracy of this oscillator may be checked by tuning a radio set to a station on 700 kilocycles and placing the oscillator near the antenna. A harmonic of the 175 kilocycle oscillator will "zero beat" with the station if the oscillator is correct. Other "harmonic" points may also be tried.

Remove the grid clip from the top of the first detector tube and fasten a short length of wire to the grid terminal of this tube. Lay this wire sufficiently near the 175 K. C. oscillator to note the energy from it in the output meter. With the oscillator set on exactly 175 K. C., adjust the trimmers in the tops of the I. F. transformer shields for maximum reading of the output meter. If the meter tends to read "off scale," move oscillator farther from set and wire, thereby reducing input energy. If these I. F. transformers are badly out of alignment, it may be necessary to place the "pick up" wire on the grid of the 1st I. F. tube and adjust the second transformer alone, at first, then moving wire to detector grid and proceed as above. It will be noted that the 2nd and 3rd I. F. transformers have but one adjustment, while the first has two.

The tuning condenser may be adjusted for alignment or "tracking" of the tuned circuits by a similar method except that an oscillator covering the broadcast band should be used. The output meter is used as before. The energy from the oscillator, in this case, is coupled weakly into the antenna circuit—a simple means being to place the oscillator near the antenna wire.

The receiver and oscillator are first tuned to approximately 1,500 kilocycles, and by watching the output indicator, the three condenser trimmers (reached through three holes in top-right of condenser shield, or, in some cases, through removable plate) are adjusted for maximum output. These three trimmers must then be left *untouched* for all further aligning.

The next step is to tune both receiver and oscillator to some point near 550 kilocycles. Here, the alignment is made by adjusting the "padding" condenser (through hole in rear of condenser shield) for maximum response. If necessary to adjust the two R. F. condenser sections, it may be accomplished by bending the condenser end plates. If found necessary to align at other than the ends of the "band," it may be done by bending the slotted end plate of the condenser rotors. Alignment of the two ends of the scale is usually quite sufficient.

IMPORTANT: It is desirable to move the dial back and forth across the signal while making the above alignments. This is particularly necessary when altering any capacities connected with the oscillator circuit. An insulated or bakelite screw driver (containing little, if any, metal) is advised for use in adjusting "trimmer" or "padding condensers."

Circuit correction. The bias for the oscillator tube, on later models, will be found to be obtained from the 1st detector cathode resistor instead of the 1,500 ohm self bias resistor as indicated. In this case, the 1st detector bias resistor has been changed from 3,000 ohms, as shown, to 1,000 ohms. The self bias resistor of the 2nd I. F. tube will be found changed to 3,000 ohms.

The automatic volume control functions with the diode second detector. The rectified radio frequency flows from the grid and plate (which are joined) to cathode and ground. It returns through the manual volume control and the two 100,000 ohm resistors to the secondary of the last I. F. transformer, and back to the plate and grid, completing the rectifying circuit. No current flows in this circuit until a carrier wave is tuned in. With no current flowing, the bias for the R. F. and 1st I. F. tubes is obtained in the 300 ohm resistor in series with their two cathodes. The biases of the 1st detector and 2nd I. F. tubes are obtained by individual cathode resistors. When current flows in the diode circuit, points along the resistence path from volume control ground to secondary coil are successively more and more negative with respect to ground due to the drop in these resistors. They are naturally more negative when more current flows in this circuit. Advantage is taken of this to provide almost perfect automatic bias control for the first three tubes by returning the grid circuits of these tubes to a determined point on these resistors. Thus, the negative voltage developed by the diode circuit is added to the fixed bias already provided for these tubes. Stronger signals increase this added bias; weaker signals reduce the added bias; and the result in the over-all response is uniformity of volume level. As the volume control is rotated toward minimum or "OFF," more resistance is added to the automatic circuit, increasing its action, and at the same time operates in the audio system by tending to short out the signal to the first audio tube grid.

In all other respects, the circuit is entirely conventional, and may be tested in the regular ways with standard equipment.

Continuity of circuit and coils may be tested with a battery, meter and pair of test leads. If necessary to replace a coil, it is advisable to replace the entire set of three with a new correctly matched set.

COLIN B. KENNEDY CORP.

MODEL 64
Schematic

Kennedy 10 Tube
Long *and* Short
Wave Receiver

CHASSIS MODEL 64

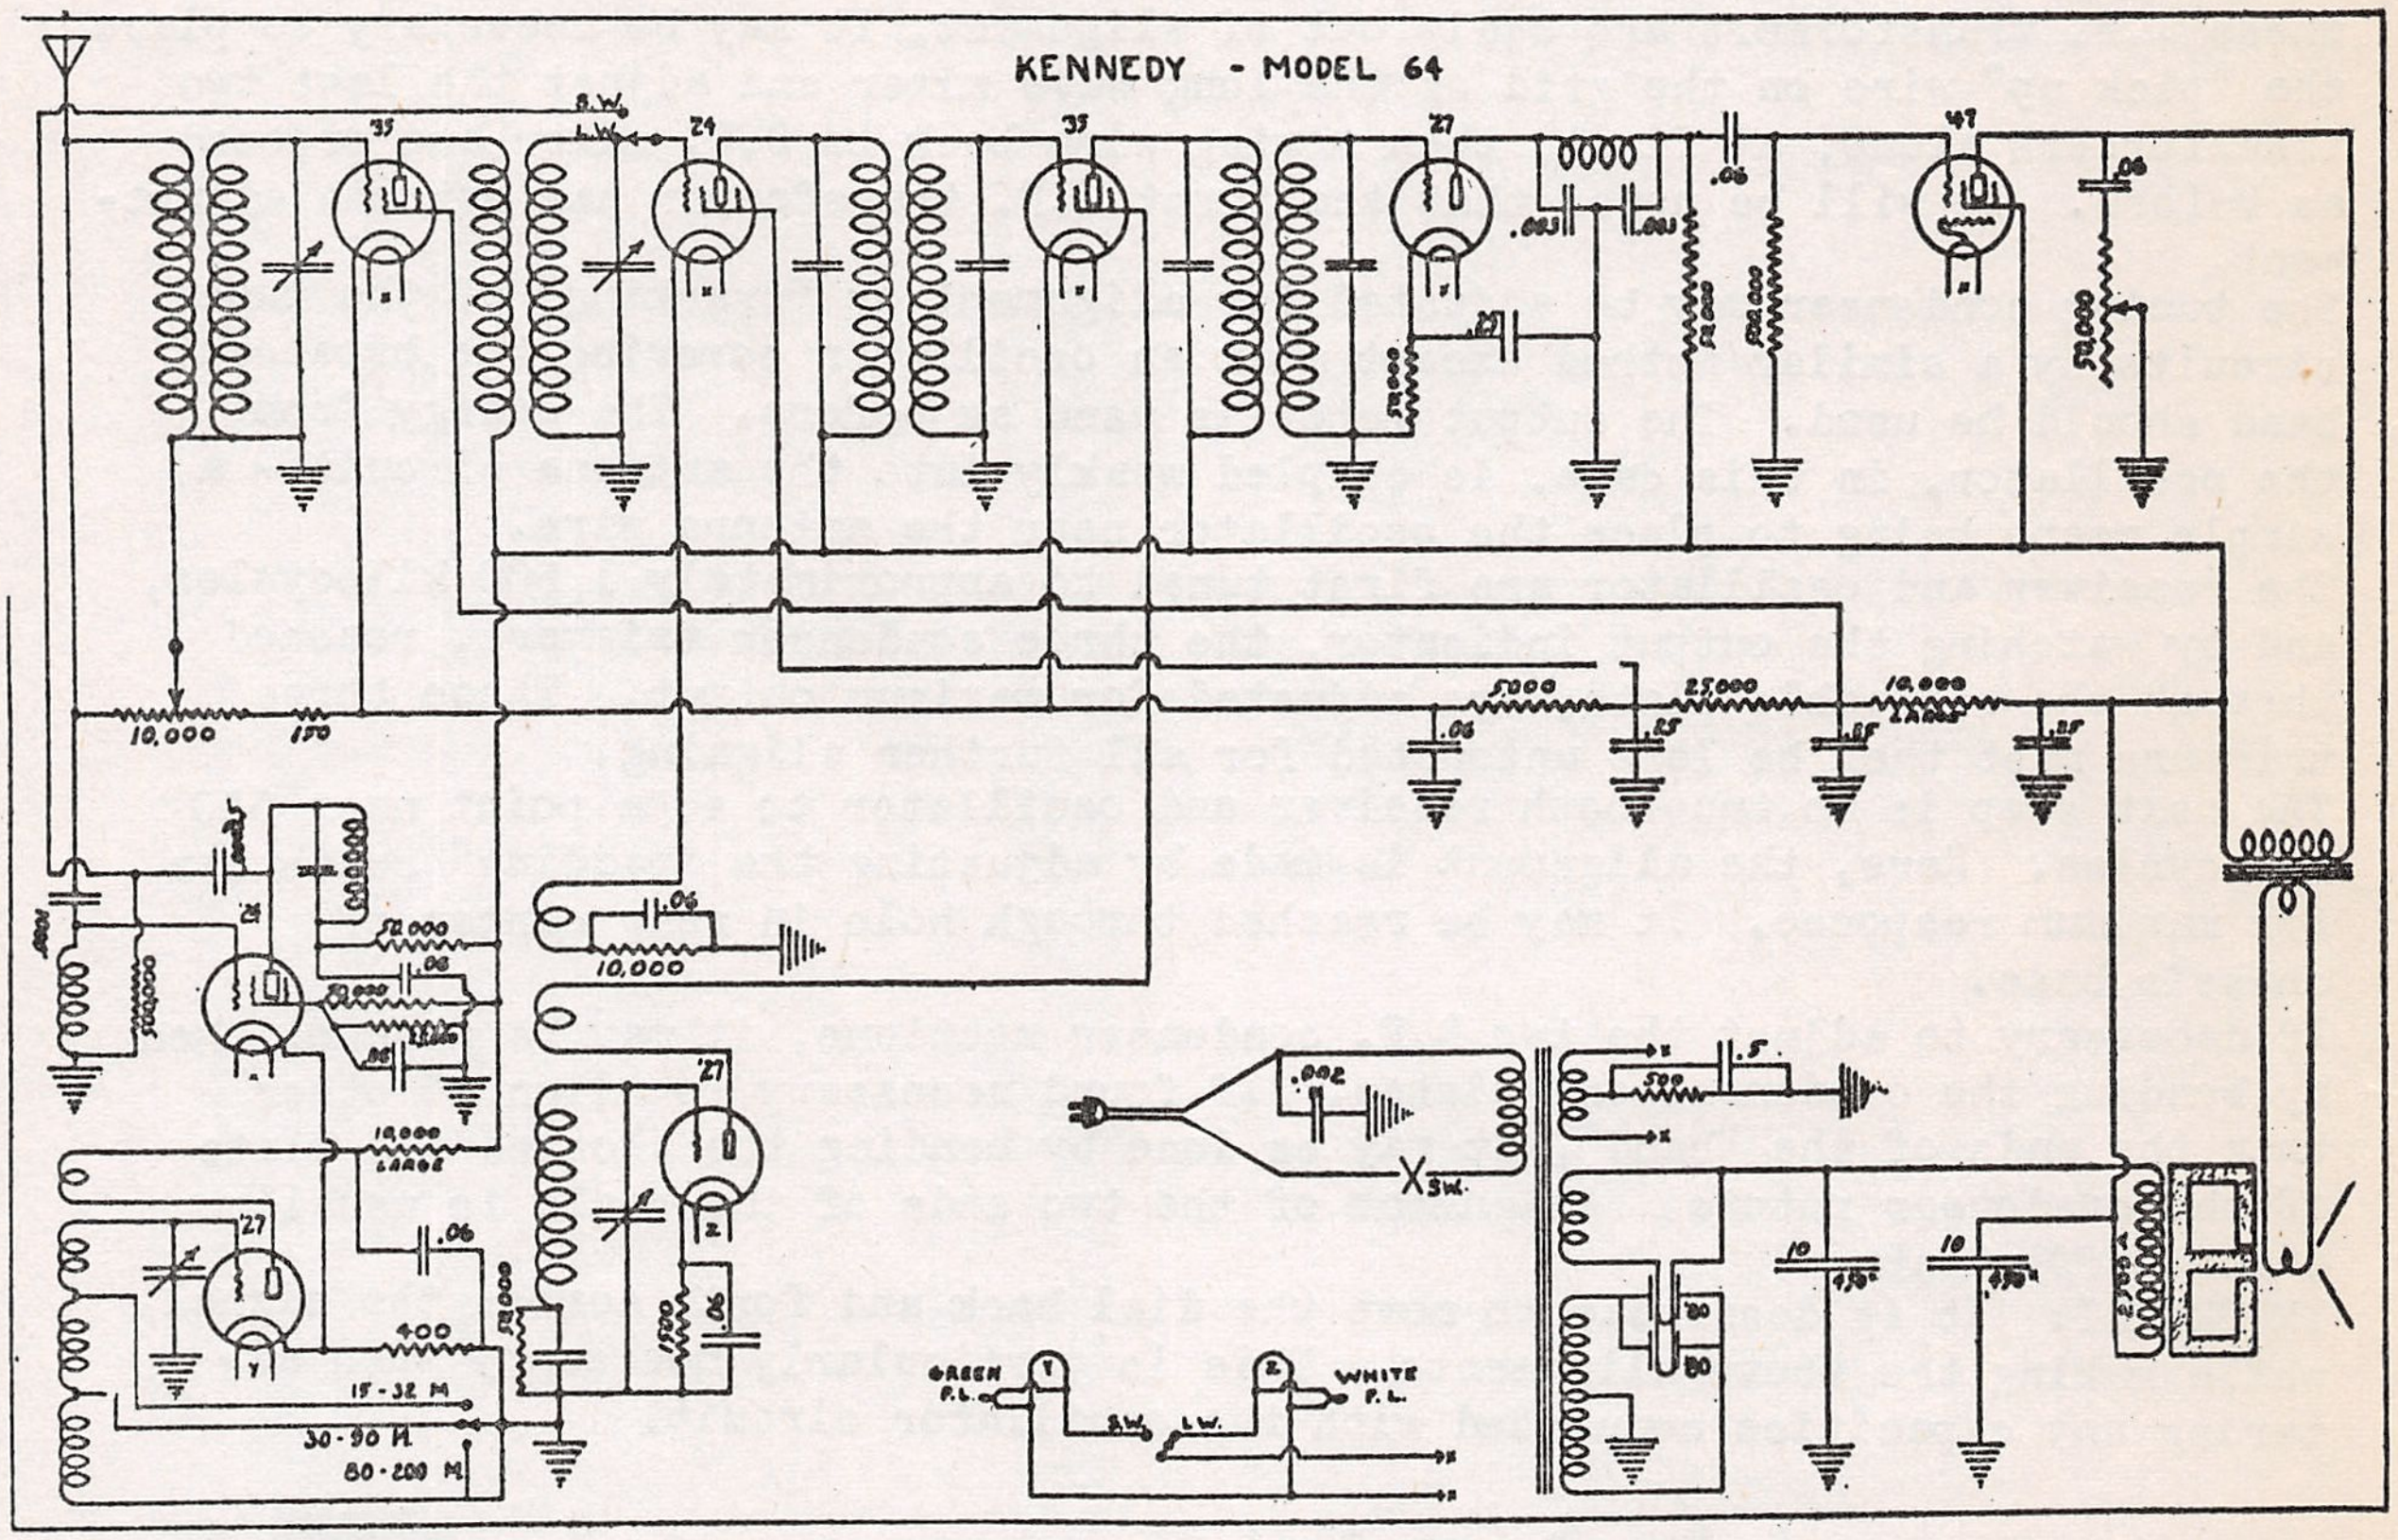
KENNEDY - MODEL 64
S.W.
L.W.
35
24
35
27
47
.06
.06
.003
.003
.25
10,000
150
5000
25000
10,000
LARGE
.06
.25
.25
.25
.0001
52,000
.06
10,000
.06
10,000
LARGE
400
15-32 M
30-90 M
80-200 M
.002
X SW.
.5
10
10
GREEN F.L.
WHITE F.L.
S.W.
L.W.
80
80

The tubes employed are as follows, and are operated at normal voltages and biases:

Short Wave mixer 224
Short Wave Oscillator 227
Radio frequency 235
Long Wave mixer 224

Long Wave Oscillator ... 227
Intermediate frequency .. 235
2nd Detector 227
Output 247

Rectifier ..... 280's

For short wave reception the long wave mixer becomes an I.F. amplifier, while the long wave oscillator filament goes out. For long wave reception, the short wave oscillator filament goes out. These circuits are indicated above. The intermediate frequency used throughout is 175 K.C.

In aligning, it is first desirable to see that the intermediate frequency transformers are properly set. This is most readily accomplished by using an output meter and an accurate source of 175 kilocycle radio frequency, such as an oscillator. The accuracy of this oscillator may be checked by tuning a radio set to a station on 700 kilocycles and placing the oscillator near the antenna. A harmonic of the 175 kilocycle oscillator will "zero beat" with the station if the oscillator is correct. Other "harmonic" points may also be tried. With the receiver switched to short wave position, remove the grid clip from the top of the S.W. mixer tube and fasten a short length of wire to the grid terminal of this tube. Lay this wire sufficiently near the 175 K.C. oscillator to note the energy from it in the output meter. With the oscillator set on exactly 175 K.C., adjust the trimmers in the tops of the I.F. transformer shields for maximum reading of the output meter. If the meter tends to read "off scale," move oscillator farther from set and wire, thereby reducing input energy. If these I.F. transformers are badly out of alignment, it may be necessary to place the "pick up" wire on the grid of the long wave mixer and adjust the last two transformers alone, at first, then moving wire back to S.W. mixer and proceed as before. It will be noted that the first I.F. transformer has but one adjustment.

The tuning condenser may be adjusted for alignment or "tracking" of the tuned circuits by a similar method except that an oscillator covering the broadcast band should be used. The output meter is used as before. The energy from the oscillator, in this case, is coupled weakly into the antenna circuit - a simple means being to place the oscillator near the antenna wire.

The receiver and oscillator are first tuned to approximately 1,500 kilocycles, and by watching the output indicator, the three condenser trimmers, reached through the removable plate, are adjusted for maximum output. These three trimmers must then be left untouched for all further aligning.

The next step is to tune both receiver and oscillator to some point near 550 kilocycles. Here, the alignment is made by adjusting the "padding" condenser for maximum response. It may be reached through hole in rear center of chassis base.

If necessary to adjust the two R.F. condenser sections, it may be accomplished by bending the condenser end plates. If found necessary to align at other than the ends of the "band", it may be done by bending the slotted end plate of the condenser rotors. Alignment of the two ends of the scale is usually quite sufficient.

IMPORTANT: It is desirable to move the dial back and forth across the signal while making the above alignments. This is particularly necessary when altering any capacities connected with the oscillator circuit.

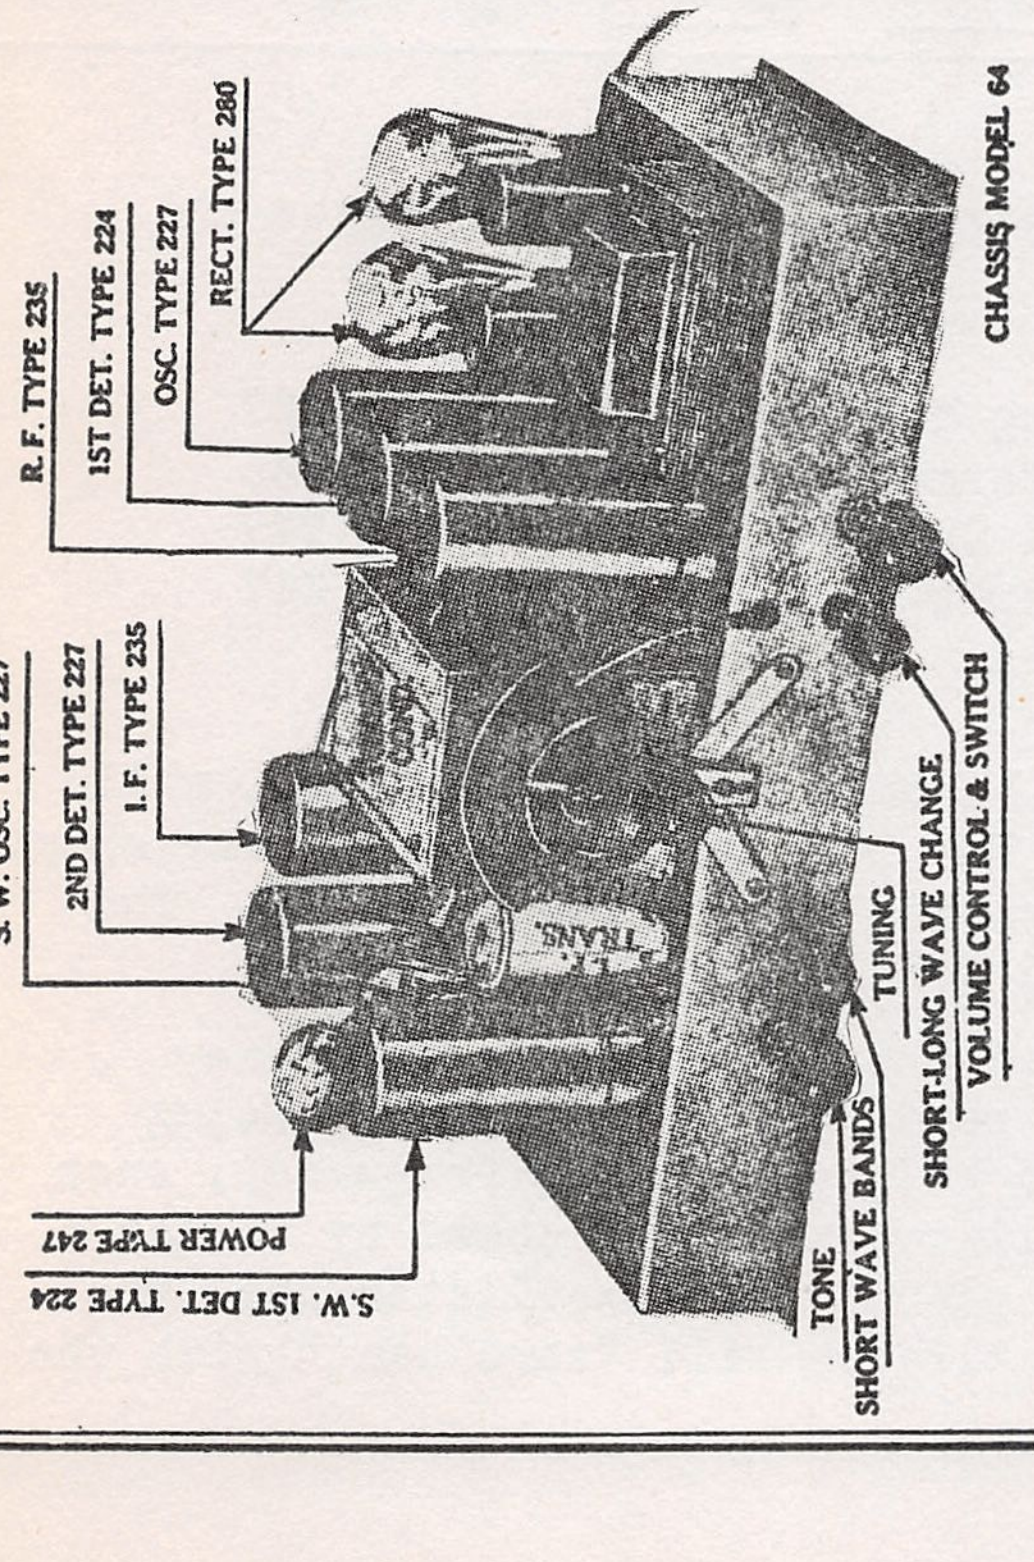
CHASSIS MODEL 64
R.F. TYPE 235
1ST DET. TYPE 224
OSC. TYPE 227
RECT. TYPE 280
S.W. OSC. TYPE 227
2ND DET. TYPE 227
I.F. TYPE 235
TUNING
SHORT-LONG WAVE CHANGE
VOLUME CONTROL & SWITCH
TONE
SHORT WAVE BANDS
POWER TYPE 247
S.W. 1ST DET. TYPE 224

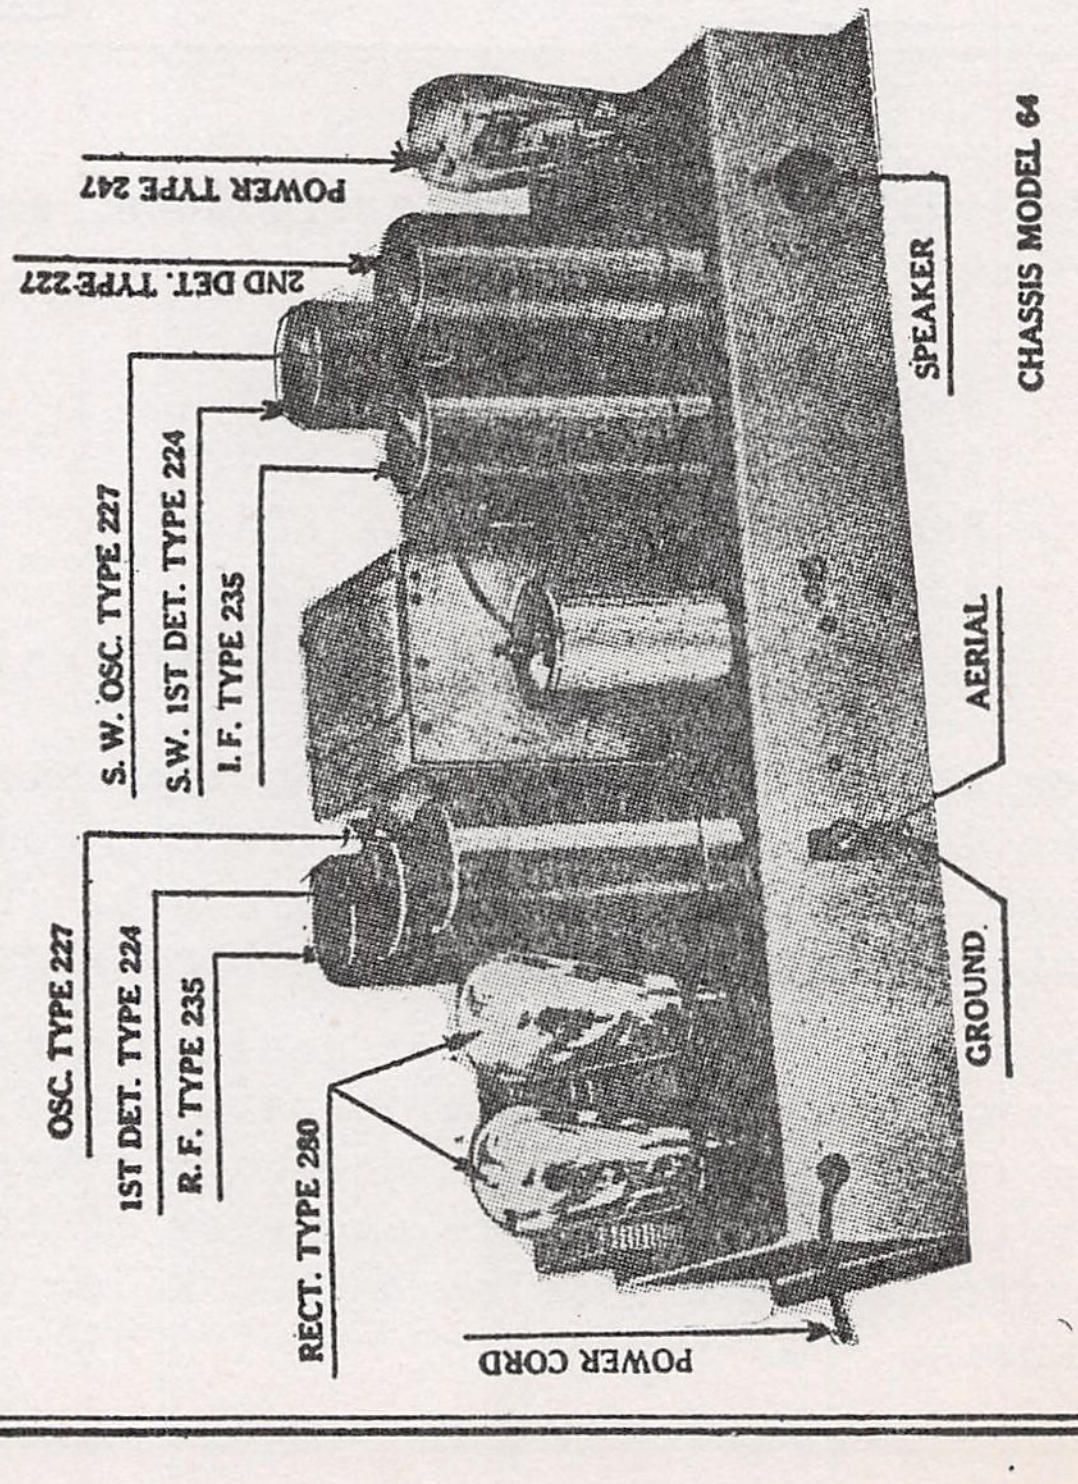
CHASSIS MODEL 64
POWER TYPE 247
2ND DET. TYPE 227
SPEAKER
S.W. OSC. TYPE 227
S.W. 1ST DET. TYPE 224
I.F. TYPE 235
AERIAL
GROUND
OSC. TYPE 227
1ST DET. TYPE 224
R.F. TYPE 235
RECT. TYPE 280
POWER CORD

KOLSTER RADIO, INC.

MODEL K-45
Voltage, Alignment Data
Power Transformer Assembly

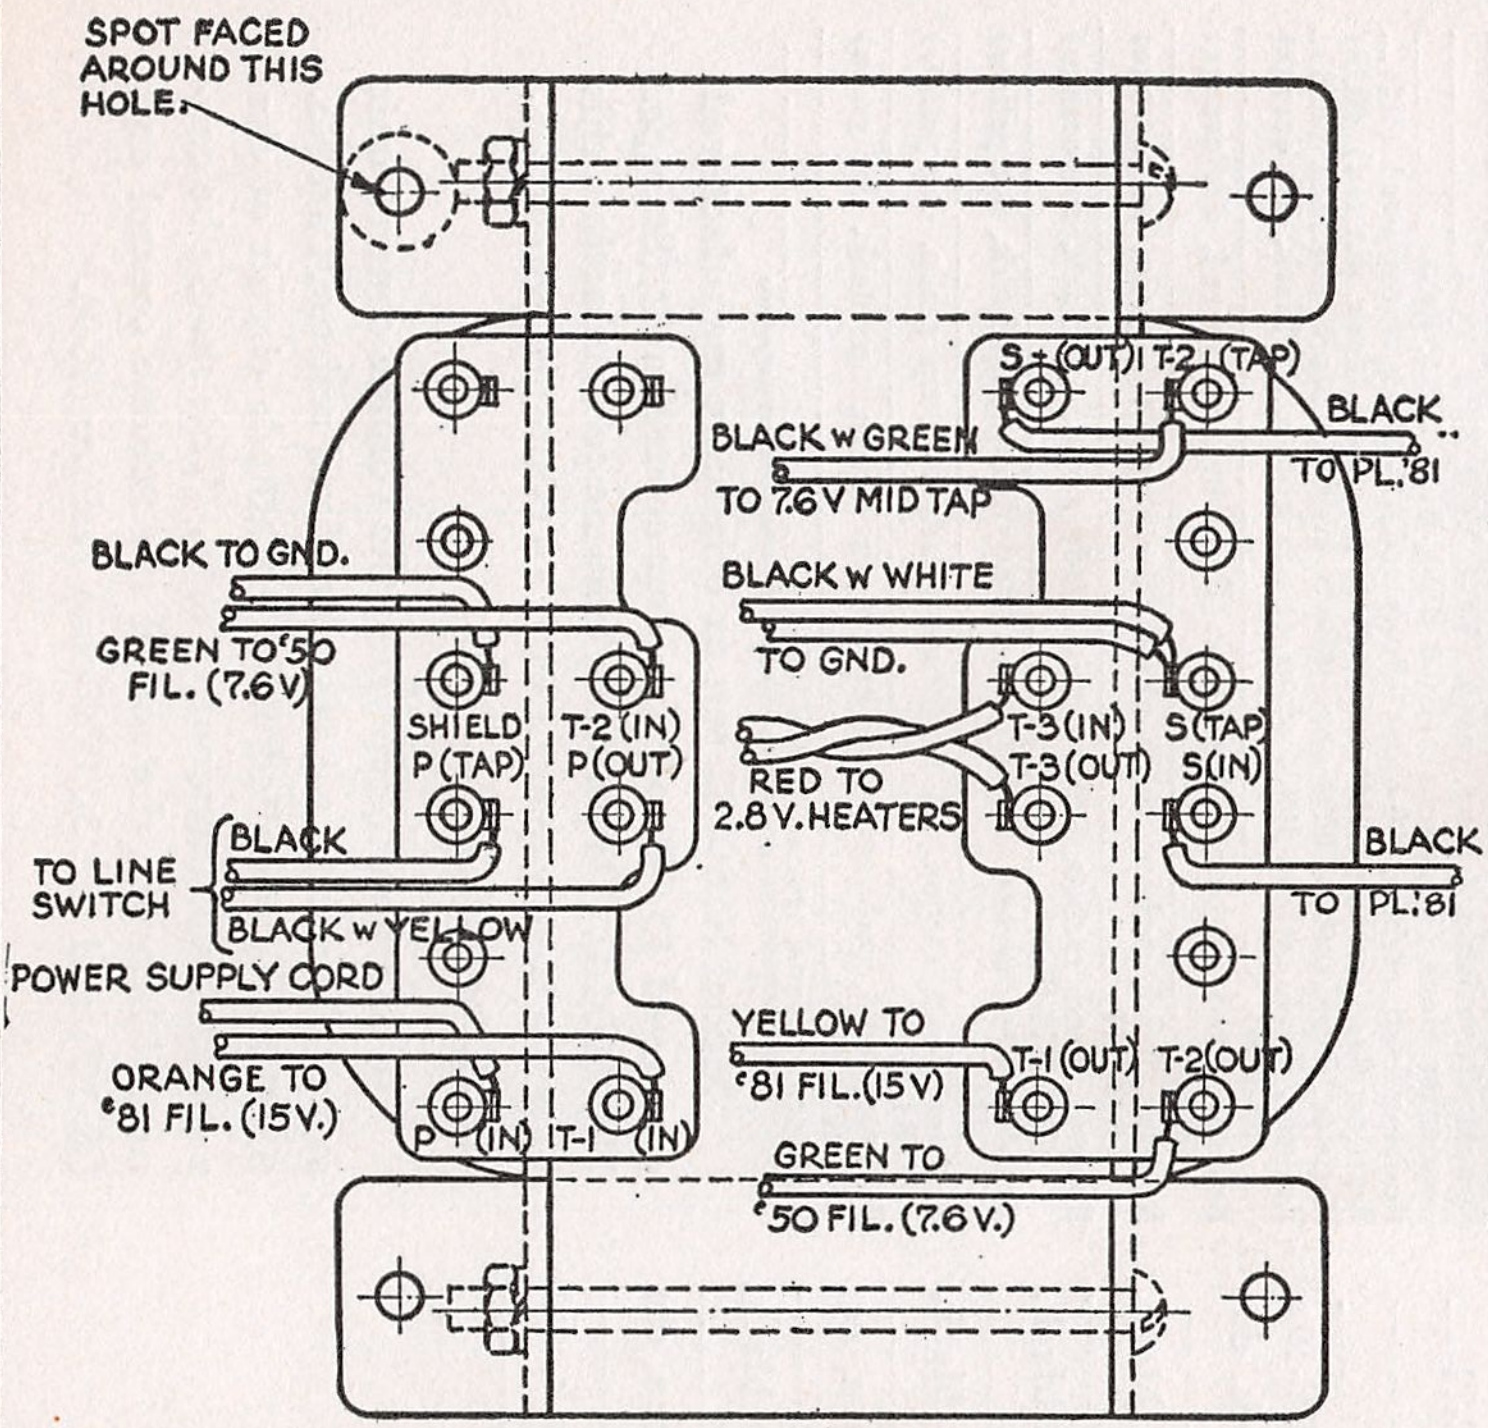

POWER TRANSFORMER ASSEMBLY

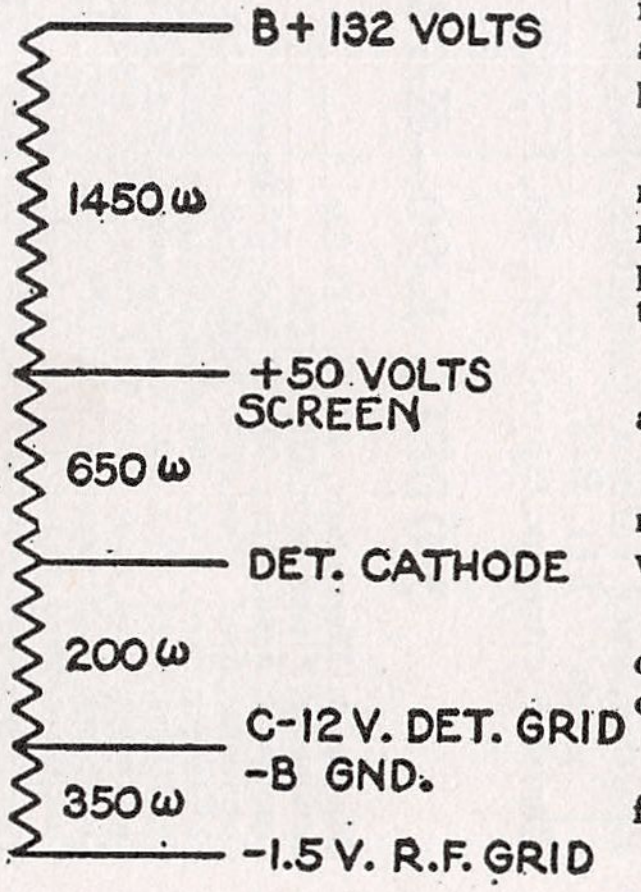

VOLTAGE DIVIDER

K-45 Average Set Analysis

LINE VOLTAGE 112—LINE SWITCH ON 110-120 VOLT TAP VOLUME CONTROL POSITION ON FULL

Approximate reading only as various tubes create different readings

Tube No. in Order	Type of Tube	Position of Tube 1st RF Det., etc.	Readings, Plug in Socket of Set						Normal Plate MA
			Tube Out		Tube in Tester			Screen Volts	
			A	B	A	B	C		
1	'24	1st RF	2.4	132	2.2	128	1.5	45	1.2
2	'24	2nd RF	2.4	132	2.2	128	1.5	45	1.3
3	'24	3rd RF	2.4	132	2.2	128	1.5	45	1.1
4	'27	Detector	2.4	130	2.2	125	9		1.5
5	'27	1st AF	2.4	130	2.2	123	8		4.5
6	'27	2nd AF PP	2.4	130	2.2	125	8		5.0
7	'27	2nd AF PP	2.4	130	2.2	125	8		4.5
8	'50	3rd AF PP	5	420	5	420	75		68
9	'50	3rd AF PP	5	420	5	420	75		68
10	'81	Rectifier	5						
11	'81	Rectifier	5						

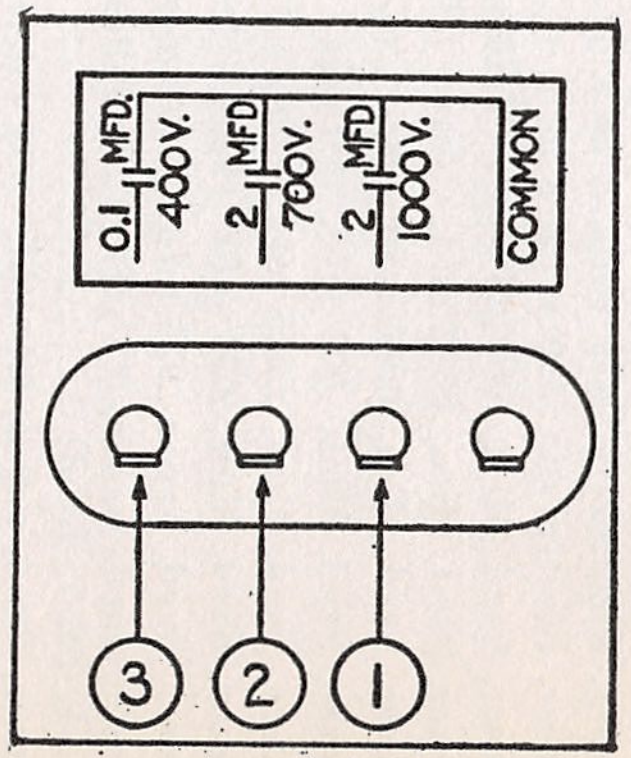

CONDENSER BLOCK

It is sometimes noticeable that the Condenser Gang does not respond rapidly enough when a selector button is pressed. This is caused by a slow motor and the brake adjustment should be loosened. The method of adjusting the friction brake is as follows: (1) Unloosen the machine screw holding the slotted brake shoe to the motor. (2) Adjust the friction of the brake shoe by varying the pressure applied to the fibre washer fastened to the motor armature. (3) The brake is adjusted properly when the maximum speed is obtained without the condenser gang carrying by the station corresponding to the selector button pressed. (4) When the proper adjustment has been made, securely tighten the brake locking screw. Ordinarily, no adjustment need be made of this device, as it is properly set in manufacture or if proper line voltage is used.

The motor clutch device is for the purpose of mechanically disengaging the drive motor armature from the tuning condenser simultaneously with the opening of the motor circuit. This electrically-operated device is necessary so as to eliminate the possibility of the inertia of the motor armature, when the motor circuit is open, from turning the tuning condenser past the pre-determined setting of the selector brush.

Make certain that the position of the line voltage switches in both the power pack and relay unit are set to correspond with the existing AC line voltage.

If it is desired, the remote cable may be disconnected from the receiver by removing the nuts holding the terminal card to the motor unit and relay box. This will in no way interfere with the operation of the set at the local position.

Four adjustable trimmer condensers are provided on top of the main gang condenser to compensate for small capacitive variations in the tuning circuits. This condition is made noticeable by the receiver becoming insensitive.

If it appears a certainty that the tuning circuits are not balanced, a simple method for readjusting is as follows:

1—Tune in a signal, preferably at the low end of the dial, and adjust the volume control for a moderate signal intensity.
2—Adjust with a short bakelite screwdriver the four compensating condensers successively, from the detector to the first RF stage, for the greatest signal intensity.
3—The various adjustments can now be checked at medium and high points on the dial, making slight variations if it is found necessary.

Bending the end plates of the variable tuning condensers in order to align the gang should only be resorted to if the trimmers are not sufficiently effective. This method will only be necessary in extreme cases where the condenser gang has been subjected to abuse or severe handling.

Should it ever be necessary to replace the cone assembly the proper procedure is as follows:

1—Place the speaker flat on the felt ring.
2—Unsolder the two leads coming from the output transformer to the voice coil.
3—Remove the four long bolts from the back of the field coil housing.
4—Lift the field coil and assembly straight upwards and away from the cone assembly to which remains the end plate.

To recenter a voice coil the above procedure is followed, and with the cone assembly remaining flat on the felt ring there will be found the heads of three small machine screws close to the opening in the end plate for the voice coil. Loosen these screws and shift the cone assembly until the voice coil is concentric with the hole in the end plate. Retighten the screws just loosened and reassemble the unit in the reverse manner in which it was disassembled.

Care must be taken against damaging the voice coil against the pole piece and also the four long assembly bolts must be drawn up as tightly as possible.

MODELS K-60,K-62,K-70,K-72
K-80,K-82,K-90,K-92
Condenser & Resistor Data

KOLSTER RADIO, INC.

MODELS K-60—K-62

Condenser, Electrolytic, 475 volts, 8 mfd. (C6-C7)
Condenser, Electrolytic, 430 volts, 8 mfd. (C8)
Condenser, fixed, Mica, .000725 mfd. (Yellow) (C2)
Condenser, fixed, Mica, .0002 mfd. (Gray) (BC-4)
Condenser, fixed, Mica, .001 mfd. (Orange) (C1)
Condenser, fixed, Mica, .0015 mfd. (Blue) (SC-1)
Condenser, fixed, Mica, .003 mfd. (Pink) (SC-2)
Condenser, fixed, paper, .025 mfd. (200 volts) (C4)
Condenser, fixed, paper, .1 mfd. (200 volts) (BC-6)
Condenser, fixed, paper, .1 mfd. (400 volts) (C-5)
Condenser, variable, 3 gang, comp. (VC-1, VC-2, VC-3)
Condenser block (4 sections) (BC-1, BC-2, BC-3, C3)
Resistor, fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R5)
Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R2)
Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R6)
Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R3)
Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R4, R7, R8, R9, R10)
Resistor, fixed, carbon, 1 megohm (Body brown, tip black, dot green) (R1)
Resistor, vitreous, tapped (R11, R12, R13, R14)

MODELS K-70—K-72

Condenser, Electrolytic, 475 volts, 8 mfd. (C6-C7)
Condenser, Electrolytic, 430 volts, 8 mfd. (C8)
Condenser, fixed, Mica, .000725 mfd. (Yellow) (C2)
Condenser, fixed, Mica, .0002 mfd. (Gray) (BC-5)
Condenser, fixed, Mica, .0005 mfd. (Red) (C4)
Condenser, fixed, Mica, .001 mfd. (Orange) (C1)
Condenser, fixed, Mica, .0015 mfd. (Blue) (SC-1)
Condenser, fixed, Mica, .003 mfd. (Pink) (SC-2)
Condenser, fixed, paper, .025 mfd. (200 volts) (C-10)
Condenser, fixed, paper, 0.1 mfd. (200 volts) (C3, C-9, BC-1, BC-4, BC-7, BC-8)
Condenser, fixed, paper, 0.1 mfd. (400 volts) (C5), BC-11
Condenser, fixed, paper, 1.0 mfd. (K-72) (C11)
Condenser, variable, 3 gang, comp. (VC-1, VC-2, VC-3)
Condenser block (5 sections) (BC-2, BC-3, BC-6, BC-9, BC-10)
Resistor, fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R2)
Resistor, fixed, carbon, 5000 ohms (Body green, tip black, dot red) (R9, R21)
Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R3)
Resistor, fixed, carbon, 20000 ohms (Body red, tip black, dot orange) (R11)
Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R8, R16)
Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R4)
Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R1, R5, R17, R18, R19, R20)
Resistor, fixed, carbon, 2 megohms (Body red, tip black, dot green) (R6, R7)
Resistor, vitreous, tapped (R12, R13, R14, R15)

MODELS K-80—K-82

Condenser, Electrolytic, 475 V. (C6-C7)
Condenser, Electrolytic, 430 V. (C8)
Condenser, fixed, Mica, .000725 Mfd. (Yellow) (C2)
Condenser, fixed, Mica, .0005 Mfd. (Red) (SC-1, C4)
Condenser, fixed, Mica, .001 Mfd. (Orange) (C1, BC-6)
Condenser, fixed, Mica, .002 Mfd. (Green) (SC-2, BC-9)
Condenser, fixed, paper, .025 Mfd. (200 volts) (C9)
Condenser, fixed, paper, .1 Mfd. (200 volts) (BC-1, BC-5, C3)
Condenser, fixed, paper, .1 Mfd. (400 volts) (C5) (BC-10)
Condenser, fixed, paper, 1 Mfd. (200 volts) (K-82) (C10)
Condenser, variable, 3 gang comp. (VC-1, VC-2, VC3)
Condenser block (5 sections) (BC-2, BC-3, BC-4, BC-7, BC-8)
Resistor, fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R2)
Resistor, fixed, carbon, 5000 ohms (Body green, tip black, dot red) (R18) (K-82)
Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R3, R17)
Resistor, fixed, carbon, 20000 ohms (Body red, tip black, dot orange) (R9)
Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R13, R14)
Resistor, fixed, carbon, 50000 ohms (Body green, tip black, dot orange) (R15, R16)
Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R4)
Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R1)
Resistor, fixed, carbon, 2 megohms (Body red, tip black, dot green) (R11, R12)
Resistor, vitreous, tapped (R5, R6, R7, R8)

MODELS K-90—K-92

Condenser, Electrolytic, 475 V. (C6-C7)
Condenser, Electrolytic, 430 V. (C8)
Condenser, fixed, Mica, .000725 Mfd. (Yellow) (C2)
Condenser, fixed, Mica, .0005 Mfd. (Red) (SC-1, C4)
Condenser, fixed, Mica, .001 Mfd. (Orange) (BC-6, C1)
Condenser, fixed, Mica, .002 Mfd. (Green) (SC-2, BC-9)
Condenser, fixed, paper, .025 Mfd. (200 volts) (C9-C10)
Condenser, fixed, paper, .1 Mfd. (200 volts) (BC-1, BC-5, C3)
Condenser, fixed, paper, .1 Mfd. (400 volts) (C5)
Condenser, fixed, paper, 1 Mfd. (200 volts) K-92 (C11)
Condenser, variable, 4 gang, comp. (VC-1, VC-2, VC-3, VC-4
Condenser block (5 sections) (BC-2 BC-3, BC-4, BC-7, BC-8)
Resistor fixed, carbon, 200 ohms (Body red, tip black, dot brown) (R2)
Resistor, fixed, carbon, 5000 ohms (Body green, tip black, dot red) (R19)
Resistor, fixed, carbon, 8000 ohms (Body gray, tip black, dot red) (R11)
Resistor, fixed, carbon, 10000 ohms (Body brown, tip black, dot orange) (R3-R20)
Resistor, fixed, carbon, 12000 ohms (Body brown, tip red, dot orange) (R-10)
Resistor, fixed, carbon, 25000 ohms (Body red, tip green, dot orange) (R13-R14)
Resistor, fixed, carbon, 50000 ohms (Body green, tip black, dot orange) (R15-R16-R19)
Resistor, fixed, carbon, 100000 ohms (Body brown, tip black, dot yellow) (R4)
Resistor, fixed, carbon, .25 megohms (Body red, tip green, dot yellow) (R1-R5)
Resistor, fixed, carbon, 1 megohm (Body brown, tip black, dot green) (R17-R18)
Resistor, vitreous, tapped (R6-R7-R8-R9)

Model K 80-82 sets as originally manufactured employed 15,000 ohm volume control unit, (Stamped No. 62018). To improve volume control action, this unit has been replaced with 15,000 ohm potentiometer, (Stamped No. 62025).

In addition to replacing the volume control unit as just described, a 1,000 ohm fixed resistor, Part No. 6569-15, is installed in the Cathode circuit of the automatic volume control tube. This should be connected between the end of the volume control unit (R-10) and the 20,000 ohm resistor (R-9).

KOLSTER RADIO, INC.

Models K-60—K-62—K-70–K-72 — K-80—K-82— K-90—K-92

R.F. TUNING AND OSCILLATOR TRIMMING CONDENSER ADJUSTMENTS

Located on the front of the gang condenser are three trimmer condensers (TC-1-2-3) which are provided for aligning the R.F. circuits. The 600 K.C. trimmer condenser (OC-1) for the OSCILLATOR will be found on the right hand top of the chassis base directly in front of the '80 socket and opposite the coil shield. Poor tone, lack of sensitivity and selectivity, or complete inoperation of the receiver may be caused by these condensers being out of adjustment.

(a) Place the oscillator in operation at exactly 1400 K.C. and couple it to the antenna. Connect the output device in accordance with the type used. Tune in the oscillator signal and adjust the coupling between the oscillator and the antenna lead of the set, or increase the volume control setting until a deflection is obtained in the output meter.

(b) With an insulated screw driver adjust each of the trimmer condensers mounted on the gang condenser frame until a maximum deflection is obtained in the output meter. If the pointer goes off scale reduce the coupling or the volume control.

(c) Set the oscillator now at 600 K.C. Tune in this signal with the receiver and adjust coupling or volume control for a deflection in the output meter. Now adjust the oscillator 600 K.C. trimmer condenser (OC-1) until a maximum deflection is obtained. In making this adjustment it is advisable to rock the tuning condenser back and forth a few degrees each side of the normal position.

(d) Change the setting of the oscillator back to 1400 K.C. and readjust the three trimmer condensers.

If attention is given to the adjustments the R.F. and oscillator circuits will be properly aligned and satisfactory results should be obtained. If not the next step is to adjust the I.F. circuits.

I.F. CIRCUIT ADJUSTMENTS

A single intermediate frequency stage with two transformers is used in band-pass arrangement. Each transformer has both the primary and secondary windings tuned accurately for 175 K.C.

To adjust these circuits proceed as follows:

(a) Set the previously mentioned oscillator at 175 K.C.

(b) Connect the output device.

(c) Remove the oscillator tube, which is the type '27 adjacent to the type '80, and make a good ground connection to the chassis.

(d) Connect the output of the oscillator to the Control Grid cap of the first detector, which is the type '24 tube.

(e) Adjust the oscillator output or the receivers volume control until a deflection is obtained in the output device.

(f) Place the chassis on end and the adjusting screws for the I.F. transformer condensers (IC-1-2-3-4) will be found through holes in the under side of the base after the bottom shield has been removed.

(g) Adjust the secondary and primary of the second and first I.F. transformers in the order just mentioned until a maximum deflection is obtained in the output meter. Make these adjustments the second time to insure proper aligning. It is now advisable to recheck the R.F. and oscillator condensers again.

LINE VOLTAGE VARIATIONS Models K-60—K-62 and Models K-70, K-72

These models were tested on 115 volts, and are therefore suitable for operation on line voltages ranging from 110 to 120 volts. Should lower line voltages be encountered it will be necessary to remove the chassis from the cabinet and unsolder the BLUE lead, which comes from the under side of the power transformer and is connected to one side of the line switch mounted on the rear of the volume control. In its place solder the GREEN lead, taping the end of the Blue lead just removed so that it will not short against other leads in the chassis. In locations where the line voltages exceed 120 volts, a suitable resistor will be necessary to reduce the voltage applied to the correct value.

CAUTION

NEVER TURN ON THE POWER TO THE SET WHEN THE SPEAKER IS DISCONNECTED

KOLSTER RADIO, INC.

MODEL K-60,K-62
Voltage,Test Data

All tubes removed from sockets and AC plug removed from power supply. Speaker connected. Volume control maximum unless otherwise stated.

From Chassis To	Correct		Incorrect
Aerial	1.55	ohms	
RF Control Grid	1,000,000	ohms	Includes one rf wdg TC- rf Cg-Y BC- across 1 meg unit TC- across first rf wdg
RF Control Grid and first tuning condenser stator	6.4	ohms	
RF Cathode (V.C.Max)	200	ohms	BC- rf K-Y (.25 mfd)
RF Screen Grid	2,653	ohms	BC- rf Sg-Y (.25 mfd)
RF Plate	6,679	ohms	BC- rf P wdg Y(.25 mfd
RF Plate to 80 Fil	26	ohms	
1 Detector Control Grid	26	ohms	
1 Detector Cathode	10,003.9	ohms	BC across 10,000 ohms C plg wdg 3.9 ohms
1 Detector Screen Grid	2,653	ohms	See RF Screen
1 Detector Plate	6,703	ohms	TC- IF Tr Primary .25 meg resistor across primary
IF Control Grid	50	ohms	TC- if Cg-Y
IF Cathode	200	ohms	See RF Cathode
IF Screen Grid	2,653	ohms	See RF Screen
IF Plate	6,703	ohms	See RF Plate
2 Detector Control Grid	50	ohms	TC- 2 D Cg-Y
2 Detector Cathode	25,000	ohms	BC- 2 DK-Y (1. mfd)
2 Detector Screen	252,653	ohms	BC- 2 D Sg-Y (.1 mfd)
2 Detector Plate	256,838	ohms	BC 2 DP-2DK BLC- 2 DP-'47 Cg
Oscillator Control Grid	100,000	ohms	
Oscillator Cathode	0	ohm	
Oscillator Plate	2,656	ohms	BC- rf Sg-Y
'47 Control Grid	500,200	ohms	Tone Control Condensers BC- '47 grid fil res-Y See 2 D Plate
RF Plate to '47 Screen	26	ohms	
1 Detector Plate to '47 Screen	50	ohms	
IF Plate to '47 Screen	50	ohms	
'47 Screen Grid to '80 Fil	0	ohm	
'47 Plate to Chassis	850	ohms	
'47 Plate to '80 Filament	650	ohms	
'80 Anode to Chassis	1,733	ohms	

From Chassis To	Correct		Incorrect
'80 Anode to '80 Anode	166	ohms	
'80 Filament to Chassis	6,653	ohms	FC
'80 Filament to '80 Anode	8,369	ohms	FC
Output Transformer Secondary Only	0.3	ohm	
Voice Coil only	3	ohms	
Voice Coil and Secondary	0.273	ohm	
Across AC Plug (110-120 V)	1.9	ohm	
Across AC Plug (100-110 V)	1.7	ohm	
AC plug to chassis	0	ohm	BC- between power transformer primary and chassis (.1 mfd)

Notes** Oscillator coil is isolated from oscillator control grid by means of blocking condenser. Oscillator coil only has a resistance of 2.5 ohms.

KOLSTER K 60-K 62 **

Tube	Heater Voltage	Control Grid Voltage	Screen Grid Voltage	Plate Voltage	Plate Current
RF		3.*	80.	230.	6.0 ma
1 Det		6.	74.	225.	1.0
IF		4.	80.	225.	7.0
2 Det		6.	22.*	125.*	.2
Osc.		-	-	85.	6.0
Pwer		.2*	245.	225.	24.
Rect.					48. per anode

* Indicates incorrect reading due to high resistance in circuit.

** Volume control at maximum and tone control in natural position.

KOLSTER RADIO, INC.

MODEL K-70,K-72
Test Data
Voltage

All tubes removed from sockets and AC plug disconnected from power supply
Speaker disconnected. Volume control maximum unless otherwise stated.

From Chassis To	Correct		Incorrect
Aerial	1.55	ohms	
RF Control Grid	2,250,000	ohms	TC- rf Cg-Y
RF Control Grid to Stator of first tuning condenser	6.4	ohms	
RF Cathode	200	ohms	BC- rf K-Y (.25 mfd)
RF Screen	23,000	ohms	BC-Y (1 mfd) BC Osc P-Y
RF Plate	6,026	ohms	BC- rf P wdg-Y
RF Plate to '47 Screen	26	ohms	
1 Detector Control Grid	26	ohms	
1 Detector Cathode	10,003.9	ohms	BC across 10,000 ohms Osc Cplg wdg-3.9 ohms
1 Detector Screen Grid	23,000	ohms	See RF Screen
1 Detector Plate	6,050	ohms	See RF Plate TC- if Tr wdg 250,000 ohm resistor across IF Tr primary
1 Detector Plate to '47 Screen	50	ohms	TC- if Tr
IF Control Grid	2,000,050	ohms	TC- if Cg BC- if Cg TC-Y
IF Control Grid to AVC Plate	50	ohms	TC- if Tr sec
IF Cathode	200	ohms	See RF Cathode
IF Screen Grid	23,000	ohms	See RF Screen
IF Plate	6,050	ohms	TC- IF Tr pri See RF Plate
IF Plate to '47 Screen	50	ohms	TC- IF Tr
2 Detector Control Grid	50	ohms	TC- 2 D Cg-Y
2 Detector Cathode	250,000	ohms	BC- 2 D K-Y
2 Detector Screen	253,000	ohms	BC- 2 D Sg-Y
2 Detector Plate	256,185	ohms	BC- 2 D P- 2 D K
2 Detector Plate to '47 Screen	250,000	ohms	BLC- 2 DP-'47 Cg
'47 Control Grid	502,200	ohms	BLC-'47 Cg- 2 DP BC-'47 Cg filter res-Y Tone Control condensers
'47 Filament	2,000	ohms	FC
'47 Screen	6,000	ohms	See IF Plate
'47 Screen to '80 Fil	0	ohm	
AVC Control Grid	2,032,000	ohms	CC AVC Cg- if P
AVC Control Grid to AVC Cathode	2	megohms	
AVC Cathode	32,000	ohms	
AVC Screen Grid	27,000	ohms	

From Chassis To	Correct		Incorrect
AVC Plate	2,000,000	ohms	See RF Control Grid See 1 Det Control Grid
'80 Anode to '30 Anode	166	ohms	
'80 Anode to AVC Cathode*	15,483	ohms	TC
'80 Anode to 80 Filament *	53,483	ohms	FC

Across Filament contacts of speaker plug 830 ohms
Across Grid- Plate contacts of speaker plug 650 ohms
Across Voice Coil only 7.5 ohms
Across Output Transformer secondary only 0.92 ohm
Across AC Plug (110-120 V) 1.9 ohm

Note- Field coil resistance 830 ohms
Output transformer primary 650 ohms

Speaker Connected
'47 Plate to '47 Screen 650 ohms

Model 72
** Everything as in model 70, except for the following-
Speaker Disconnected

'80 Anode to AVC Cathode 20,483 ohms
'80 Anode to '80 Filament 58,483 ohms

KOLSTER K 70-K 72

Volume control at maximum. Tone contral at natural position.

Tube	Control Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Voltage	Plate Current
RF	.5*	60.	80.	190.	.25 ma
1 Det	5.	50.	84.	180.	.6
IF	3.	75.	80.	195.	1.
AVC	.25	25.	50.	20.	-
2 Det	4.	24*	80.	100*	.25
Pwer	4. *	260.		235.	35.
Osc.	2.5		80.	80.	5.
Rect.					48. per anode

* Indicates incorrect reading due to high resistance in circuit.

KOLSTER RADIO, INC.

MODEL K-80, K-82
Voltage
Test Data

All tubes out of receivers and AC plug disconnected from power supply. Speaker disconnected. Volume control maximum unless otherwise stated.

From Chassis To	Correct		Incorrect
Aerial	1.55	ohms	
RF Control Grid	2,250,000	ohms	BC- rf grid filter resistor-Y BC- if Cg wdg-Y (.1 mfd
RF Control Grid to first tuning condenser stator	6.4	ohms	
RF Cathode	200	ohms	BC- rf K-Y (.25 mfd)
RF Screen	7,000	ohms	BC- rf Sg-Y (.25 mfd)
RF Plate	13,026	ohms	BC- rf P wdg-Y (1.mfd) BC- 2 D AF Tr-2 DK FC- 2 RF P wdg-Y-(8mfd)
RF Plate to '47 Screen	26	ohms	
1 Detector Control Grid	26	ohms	
1 Detector Cathode	10,003.9	ohms	BC- across 10,000 ohms Osc. cplg wdg 3.9 ohms
1 Detector Screen Grid	7,000	ohms	BC- rf Sg-Y (.25 mfd)
1 Detector Plate	13,050	ohms	TC- if Tr See RF Plate
1 Detector Plate to '47 Screen	50	ohms	
IF Control Grid	2,000,050	ohms	BC- if wdg- if K
IF Control Grid to AVC Plate	50	ohms	TC- IF Tr
IF Cathode	200	ohms	See RF Cathode
IF Screen Grid	7,000	ohms	See RF Screen
IF Plate	13,050	ohms	See RF Plate
IF Plate to '47 Screen	50	ohms	
2 Detector Control Grid	50	ohms	TC- 2 D Cg-Y
2 Detector Cathode	25,000	ohms	BC- 2 DK-Y (1.mfd) BC- 2 DK- 2 DP(.001 mfd
2 Detector Plate	42,545	ohms	BC- AF Tr- 2 DK(1 mfd) BC- 2DP-2DK (.001 mfd) See RF Plate
2 Detector Plate to '47 Screen	29,545	ohms	
'47 Control Grid	59,250	ohms	Tone Control Condenser
'47 Control Grid to Control Grid	112,500	ohms	Tone Control Condenser Tone Switch closed
'47 Cg to Cg-Tone Switch closed	9,100	ohms	
'47 Screen Grid	13,000	ohms	
'47 Screen to '80 Fil	0	ohm	
AVC Control Grid	2,020,000	ohms	CC- AVC Cg-if P
AVC Cathode	5,000	ohms	
AVC Screen Grid	3,000	ohms	
AVC Plate	2,000,000	ohms	
AVC Filament	3,255	ohms	

From Chassis To	Correct		Incorrect
'80 Anode to '80 Anode	166	ohms	
'80 Anode to AVC Cathode(K-80)	15,483	ohms	TC across filter chk FC
'80 Anode to AVC Cathode(K-82)	20,483	ohms	
'80 Anode to '80 Fil (K-80)	33,483	ohms	FC
'80 Anode to '80 Fil (K-82)	38,573	ohms	
Field coil only	830	ohms	
Output transformer primary	830	ohms	
Output transformer secondary only	0.812	ohm	
Voice coil only	8.7	ohms	
Oscillator Control Grid	100,000	ohms	
Oscillator Cathode	0.	ohm	
Oscillator Plate	7,003.1	ohms	
Oscillator Plate to RF Screen	3.1	ohms	

Notice.***

In later production of the K-80, a 1000 ohm fixed resistor was added to the cathode circuit of the AVC tube. This must be added to the various values obtained by working between the AVC tube cathode and other points in the receiver.

KOLSTER K 80-K 82

Volume control at maximum. Tone control at natural position.

Tube	Control Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Voltage	Plate Current
RF	0.4 *	80.	48.	185.	2.5 ma.
1 Det	5.5	80.	58.	185.	.6
IF	0.2 *	90.	44.	195.	1.0
AVC	0.5	44.	-60.	15.	0.0
2 Det	15.	-	75.	150.	0.6
Pwer	12. *	245.	-	225.	30.
Pwer	12. *	245.	-	225.	30.
Osc.	0. *	-	52.		6.0
Rect.					48. per anode

* Indicates incorrect reading due to high resistance in circuit.

MODEL F-7
110 Volt D-C.

LANG RADIO CO.

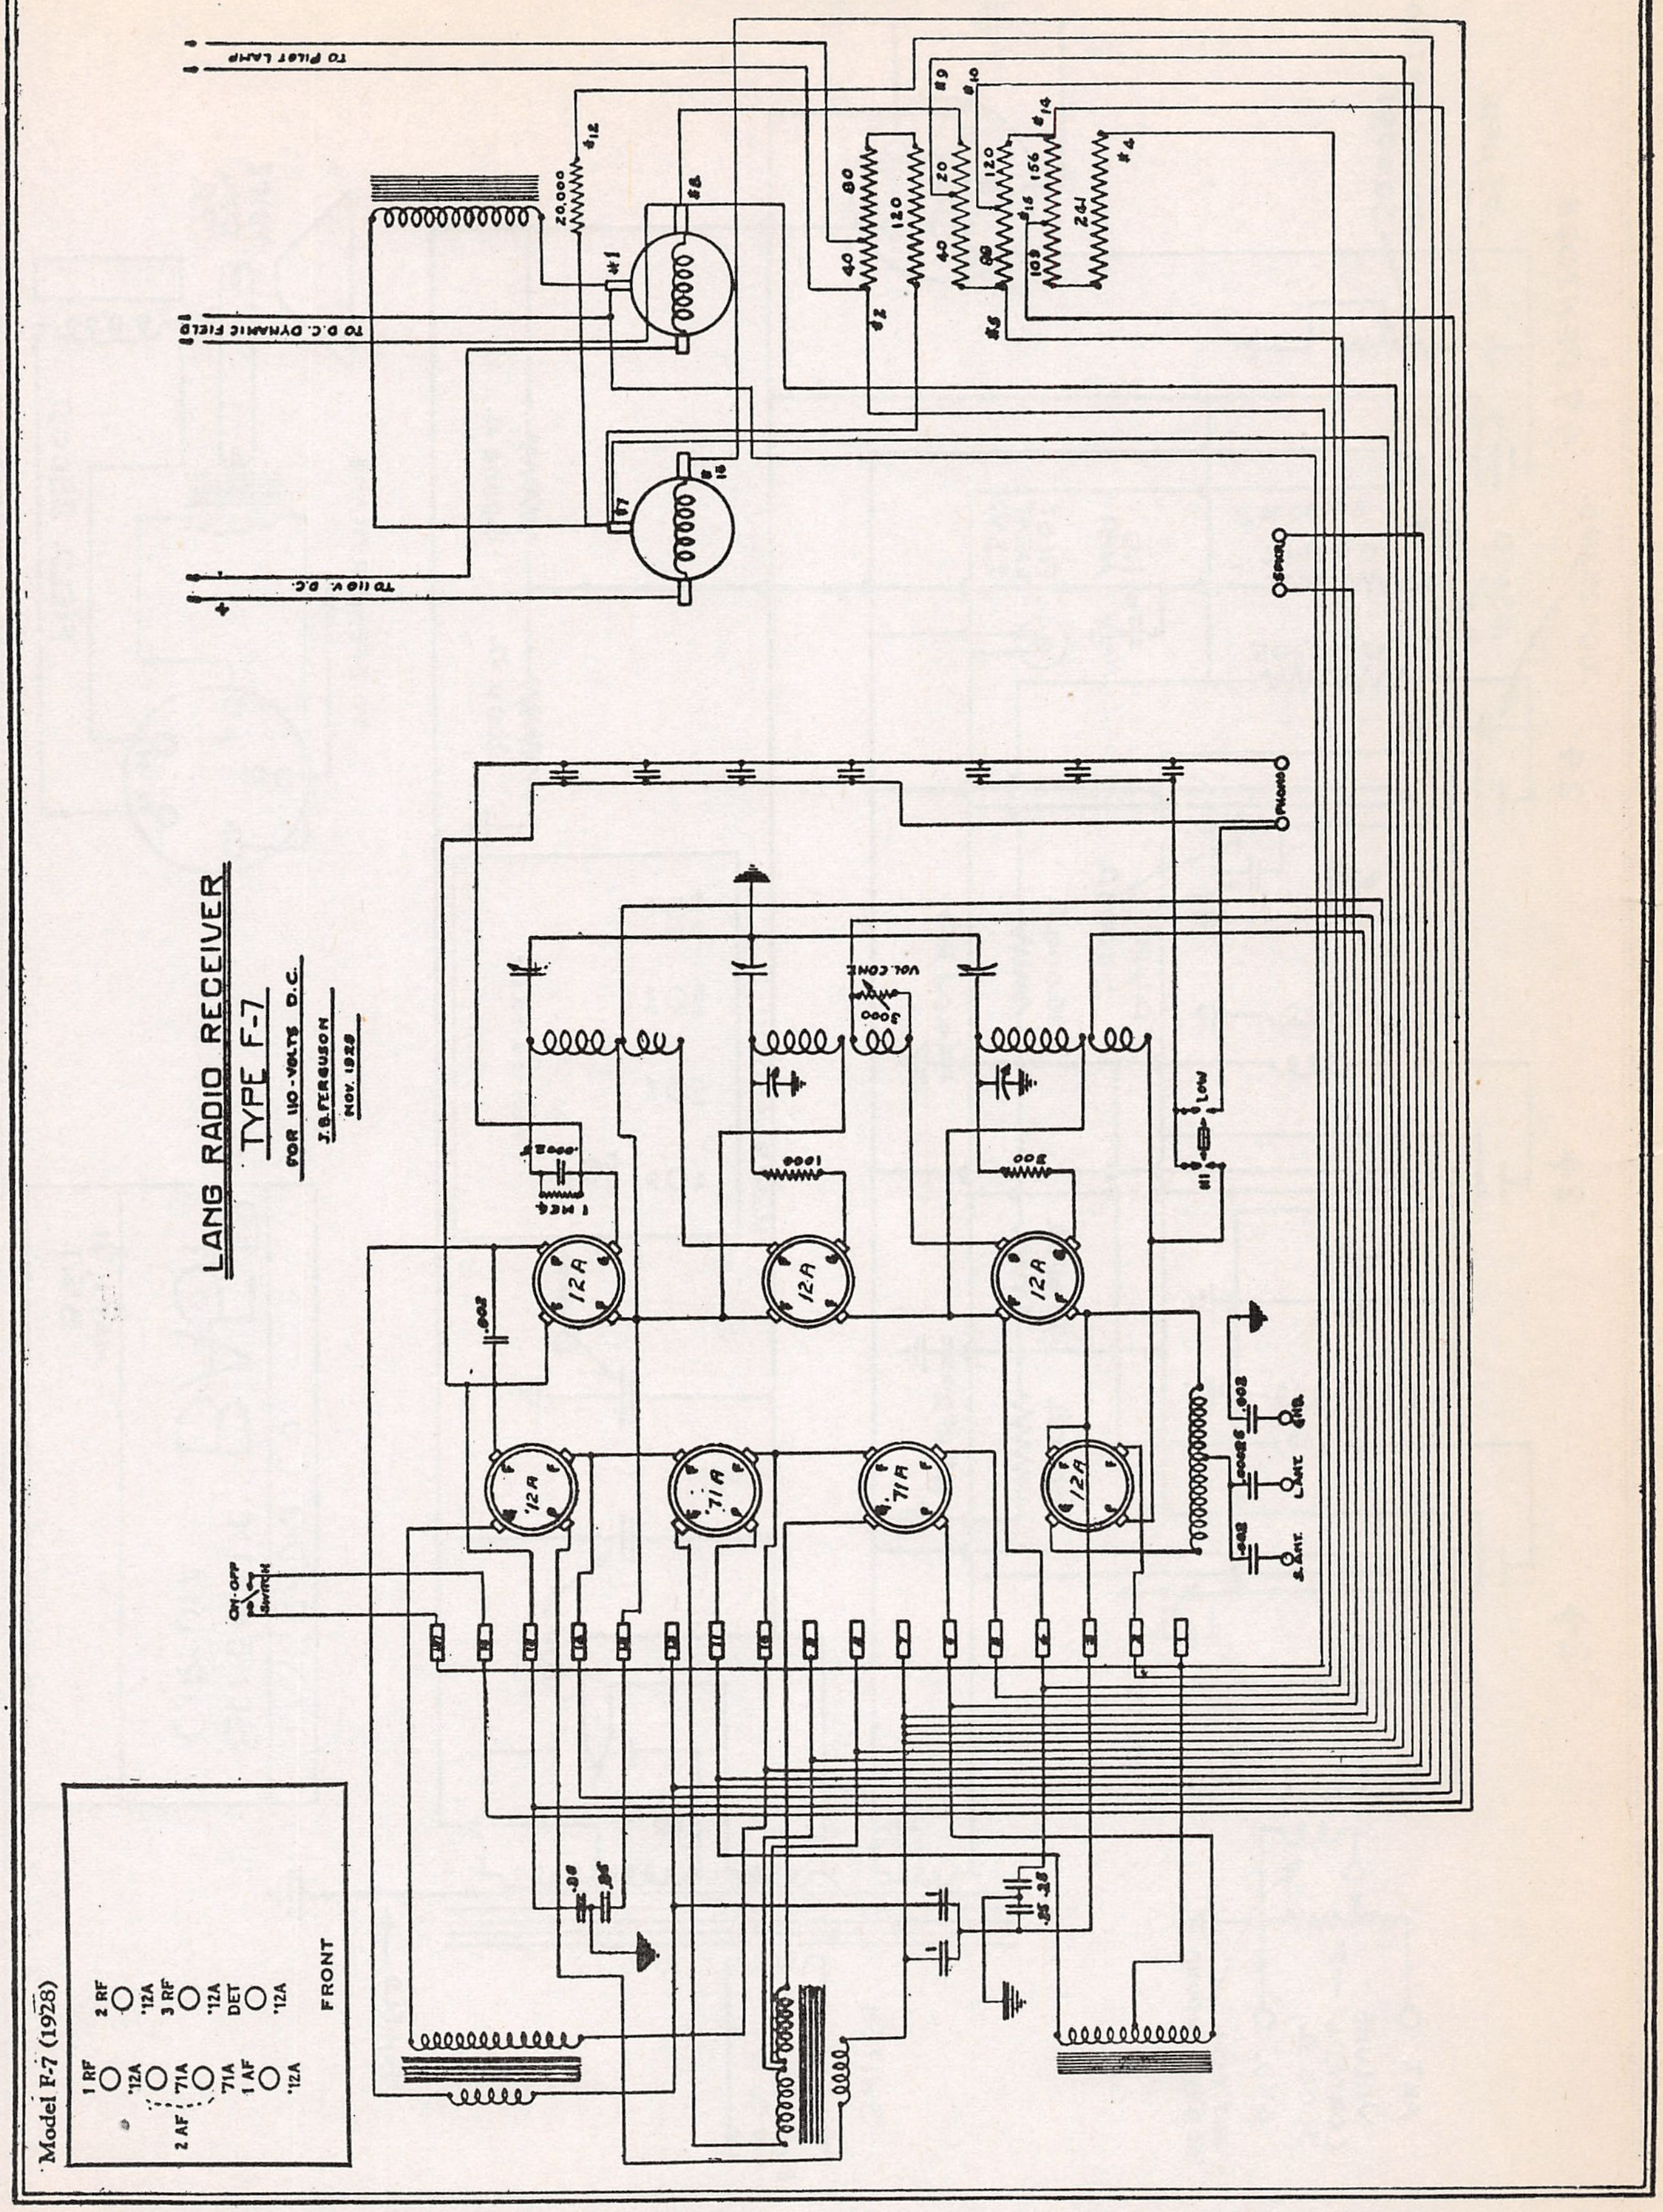
TO PILOT LAMP
TO D.C. DYNAMIC FIELD
TO 110 V. D.C.
20,000
#12
#1
88
87
16
80
120
40
#2
20
40
#9
#10
120
80
15
103
156
241
#14
#4
55
SPKR
PHONO
VOL. CONT.
3000
LOW
HI
1000
300
1 MEG
.002
12A
71A
ON-OFF SWITCH
LANG RADIO RECEIVER
TYPE F-7
FOR 110-VOLTS D.C.
J.B. FERGUSON
NOV. 1928
Model F-7 (1928)
1 RF
'12A
2 RF
'12A
3 RF
'12A
DET
'12A
2 AF
'71A
'71A
1 AF
'12A
FRONT

MODEL BA-5-P

LANG RADIO CO.

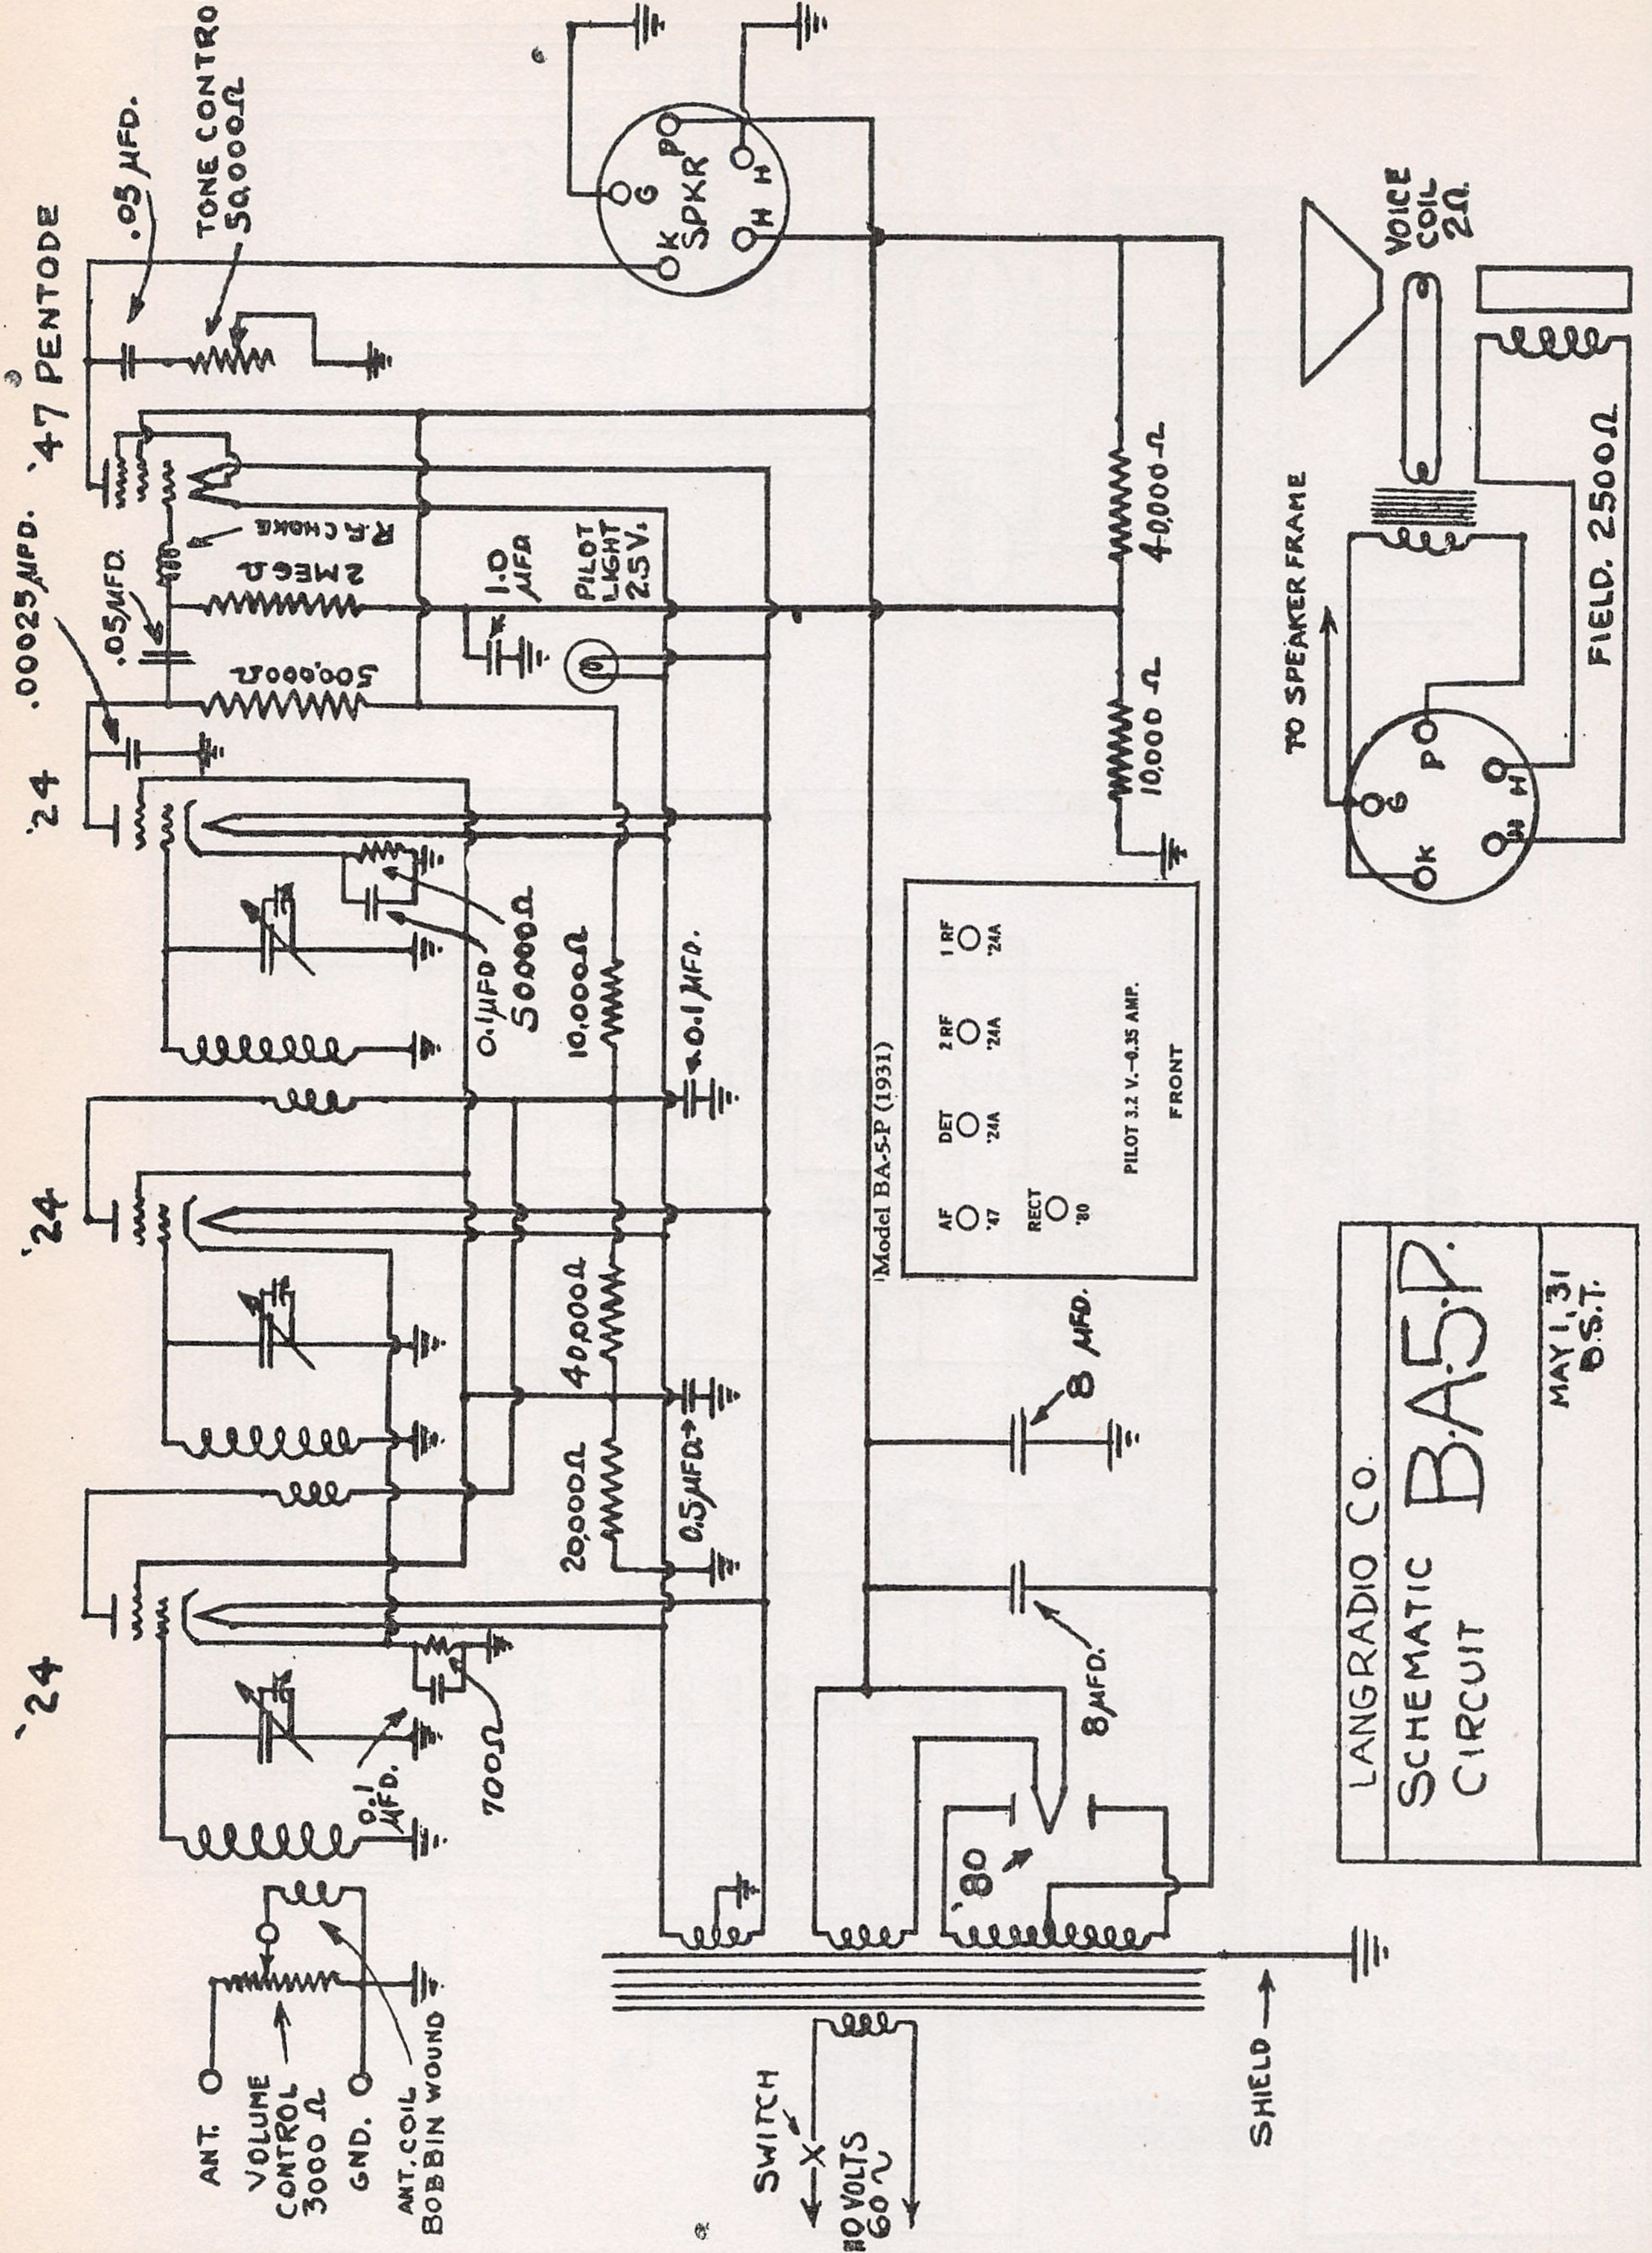
'47 PENTODE
.05 MFD.
TONE CONTROL 50,000Ω
.00025 MFD.
.05 MFD.
R.F. CHOKE
2 MEG Ω
500,000Ω
'24
'24
'24
1.0 MFD
PILOT LIGHT 2.5V.
0.1 MFD
50,000Ω
10,000Ω
0.1 MFD.
40,000Ω
20,000Ω
0.5 MFD.
0.1 MFD.
700Ω
ANT.
VOLUME CONTROL 3000 Ω
GND.
ANT. COIL BOBBIN WOUND
SWITCH
110 VOLTS 60~
'80
8 MFD.
8 MFD.
SHIELD
40,000 Ω
10,000 Ω
K
G
SPKR
PO
H
H
VOICE COIL 2Ω
FIELD 2500Ω
TO SPEAKER FRAME
K
G
PO
H
H
Model BA-5-P (1931)
AF '47
DET '24A
2 RF '24A
1 RF '24A
RECT '80
PILOT 3.2 V.–0.35 AMP.
FRONT
LANGRADIO CO.
SCHEMATIC CIRCUIT
BA5P
MAY 1, 31
B.S.T.

MODEL MA-7
MODEL MD-7

LANG RADIO CO

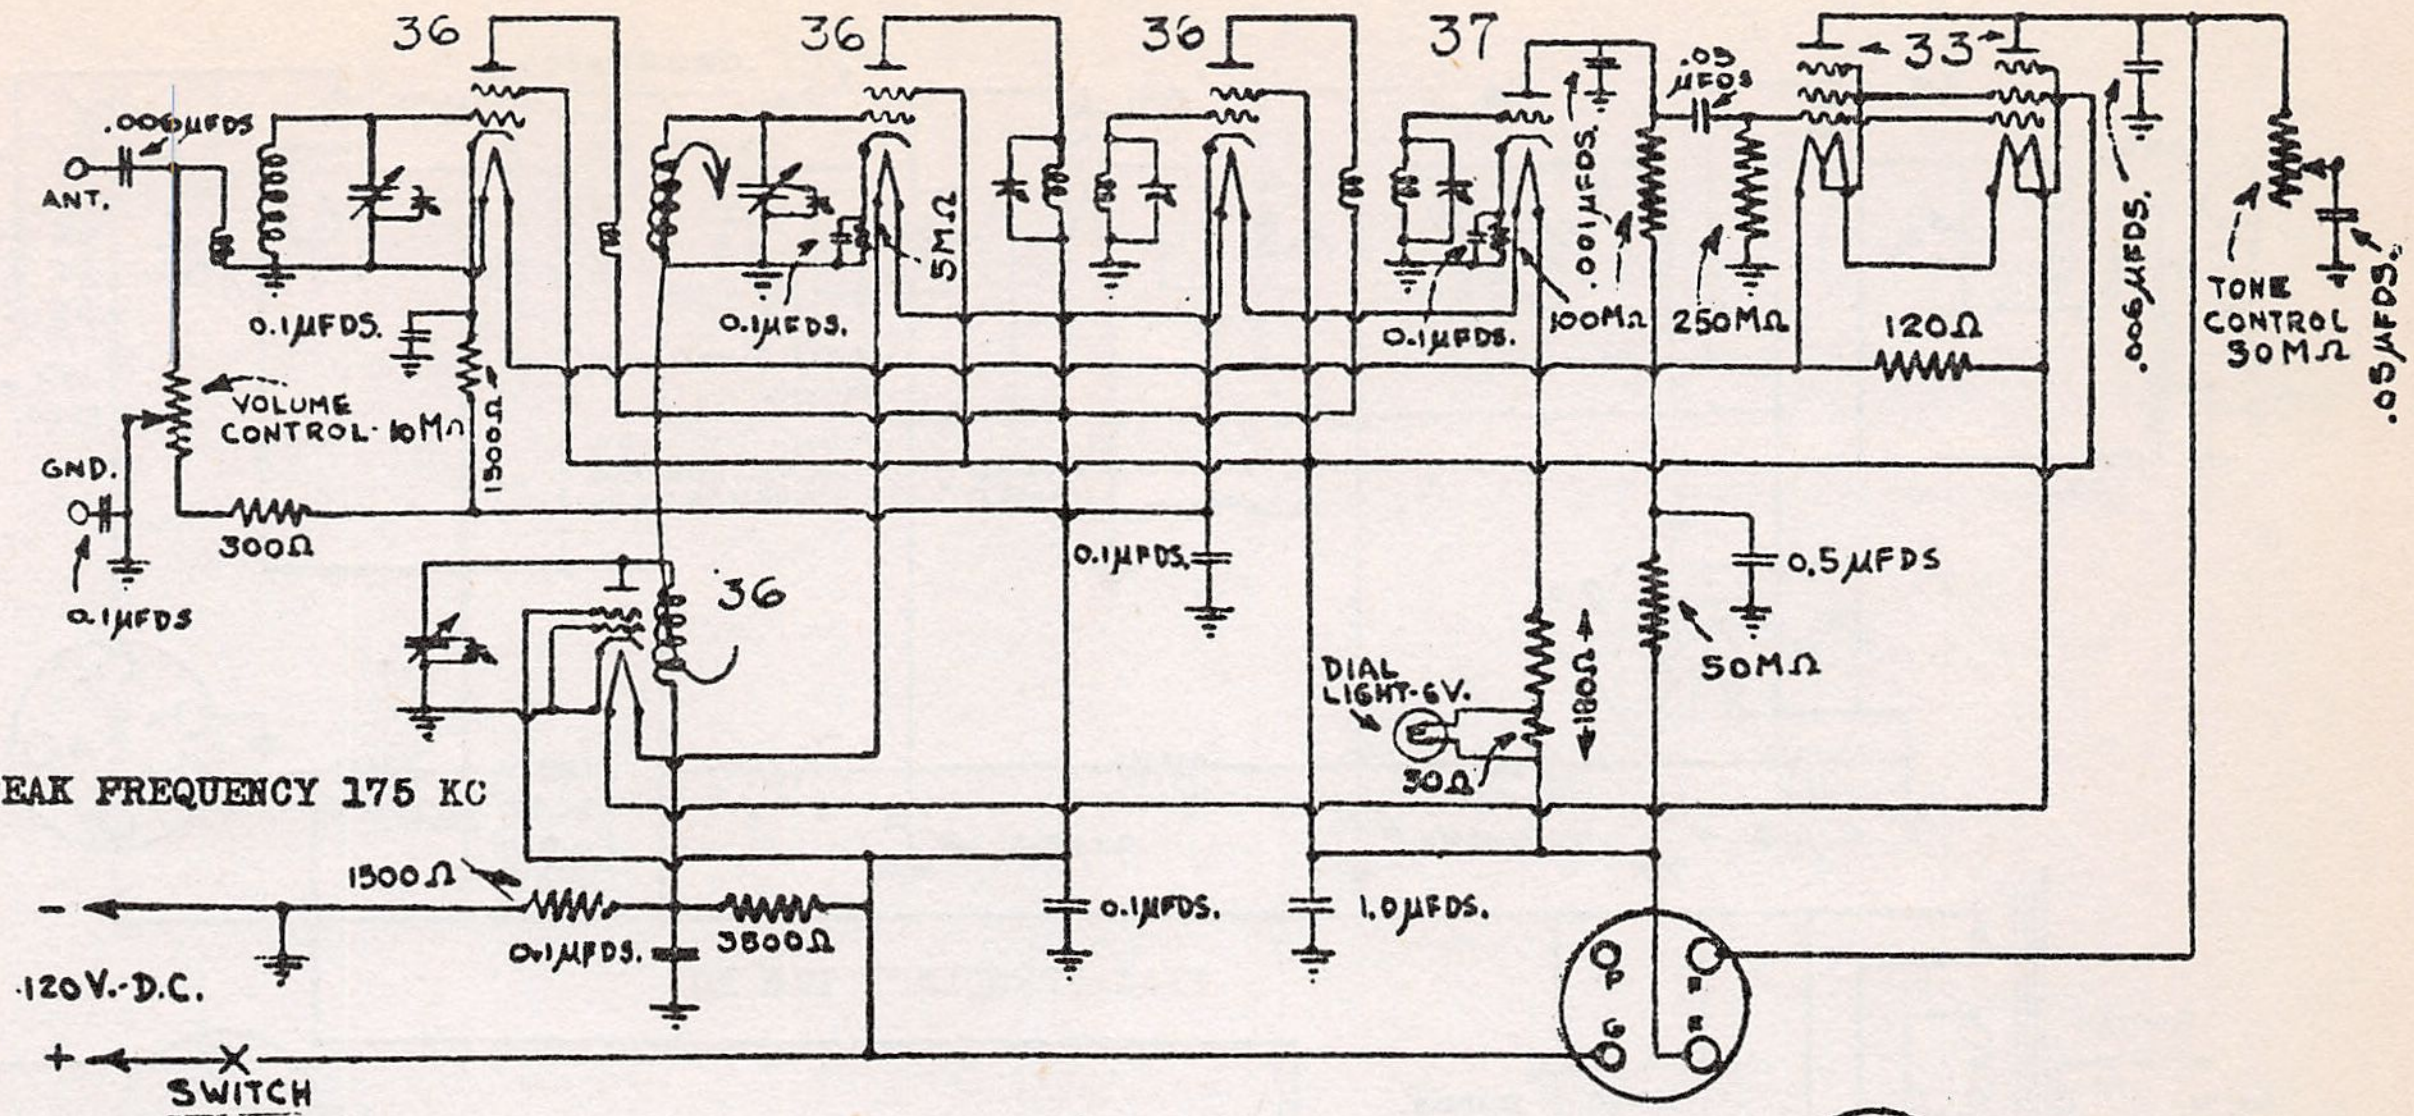
36
36
36
37
33
.006 MFDS
ANT.
0.1 MFDS.
VOLUME CONTROL 10MΩ
1500Ω
GND.
300Ω
0.1 MFDS
5MΩ
0.1 MFDS.
.001 MFDS.
100MΩ
250MΩ
.05 MFDS
120Ω
.006 MFDS.
TONE CONTROL 50MΩ
.05 MFDS.
0.1 MFDS.
0.5 MFDS
50MΩ
36
DIAL LIGHT-6V.
30Ω
180Ω
PEAK FREQUENCY 175 KC
1500Ω
0.1 MFDS.
3500Ω
0.1 MFDS.
1.0 MFDS.
120V.-D.C.
SWITCH
P
F
G
F

Model MD-7 (1931)

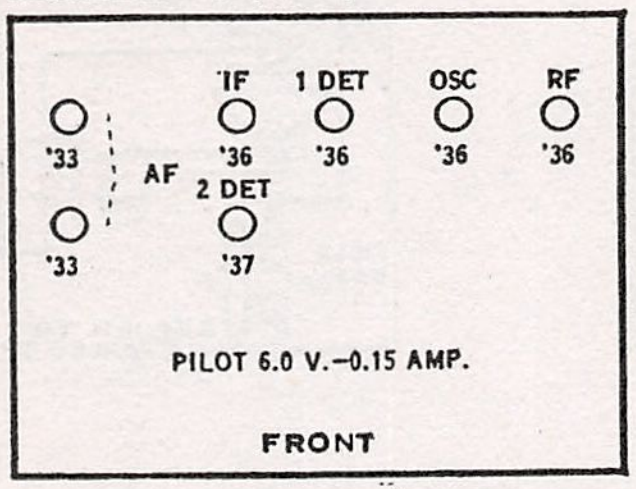
IF
1 DET
OSC
RF
'33
AF
'36
'36
'36
'36
2 DET
'33
'37
PILOT 6.0 V.–0.15 AMP.
FRONT

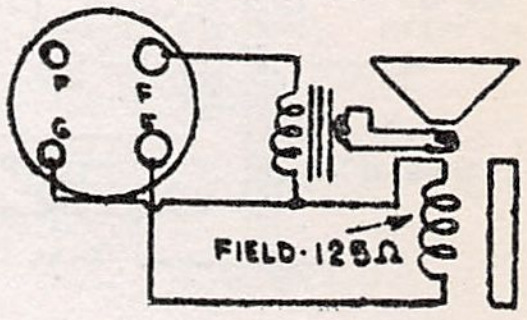
P
F
G
F
FIELD-125Ω

Model MD-7

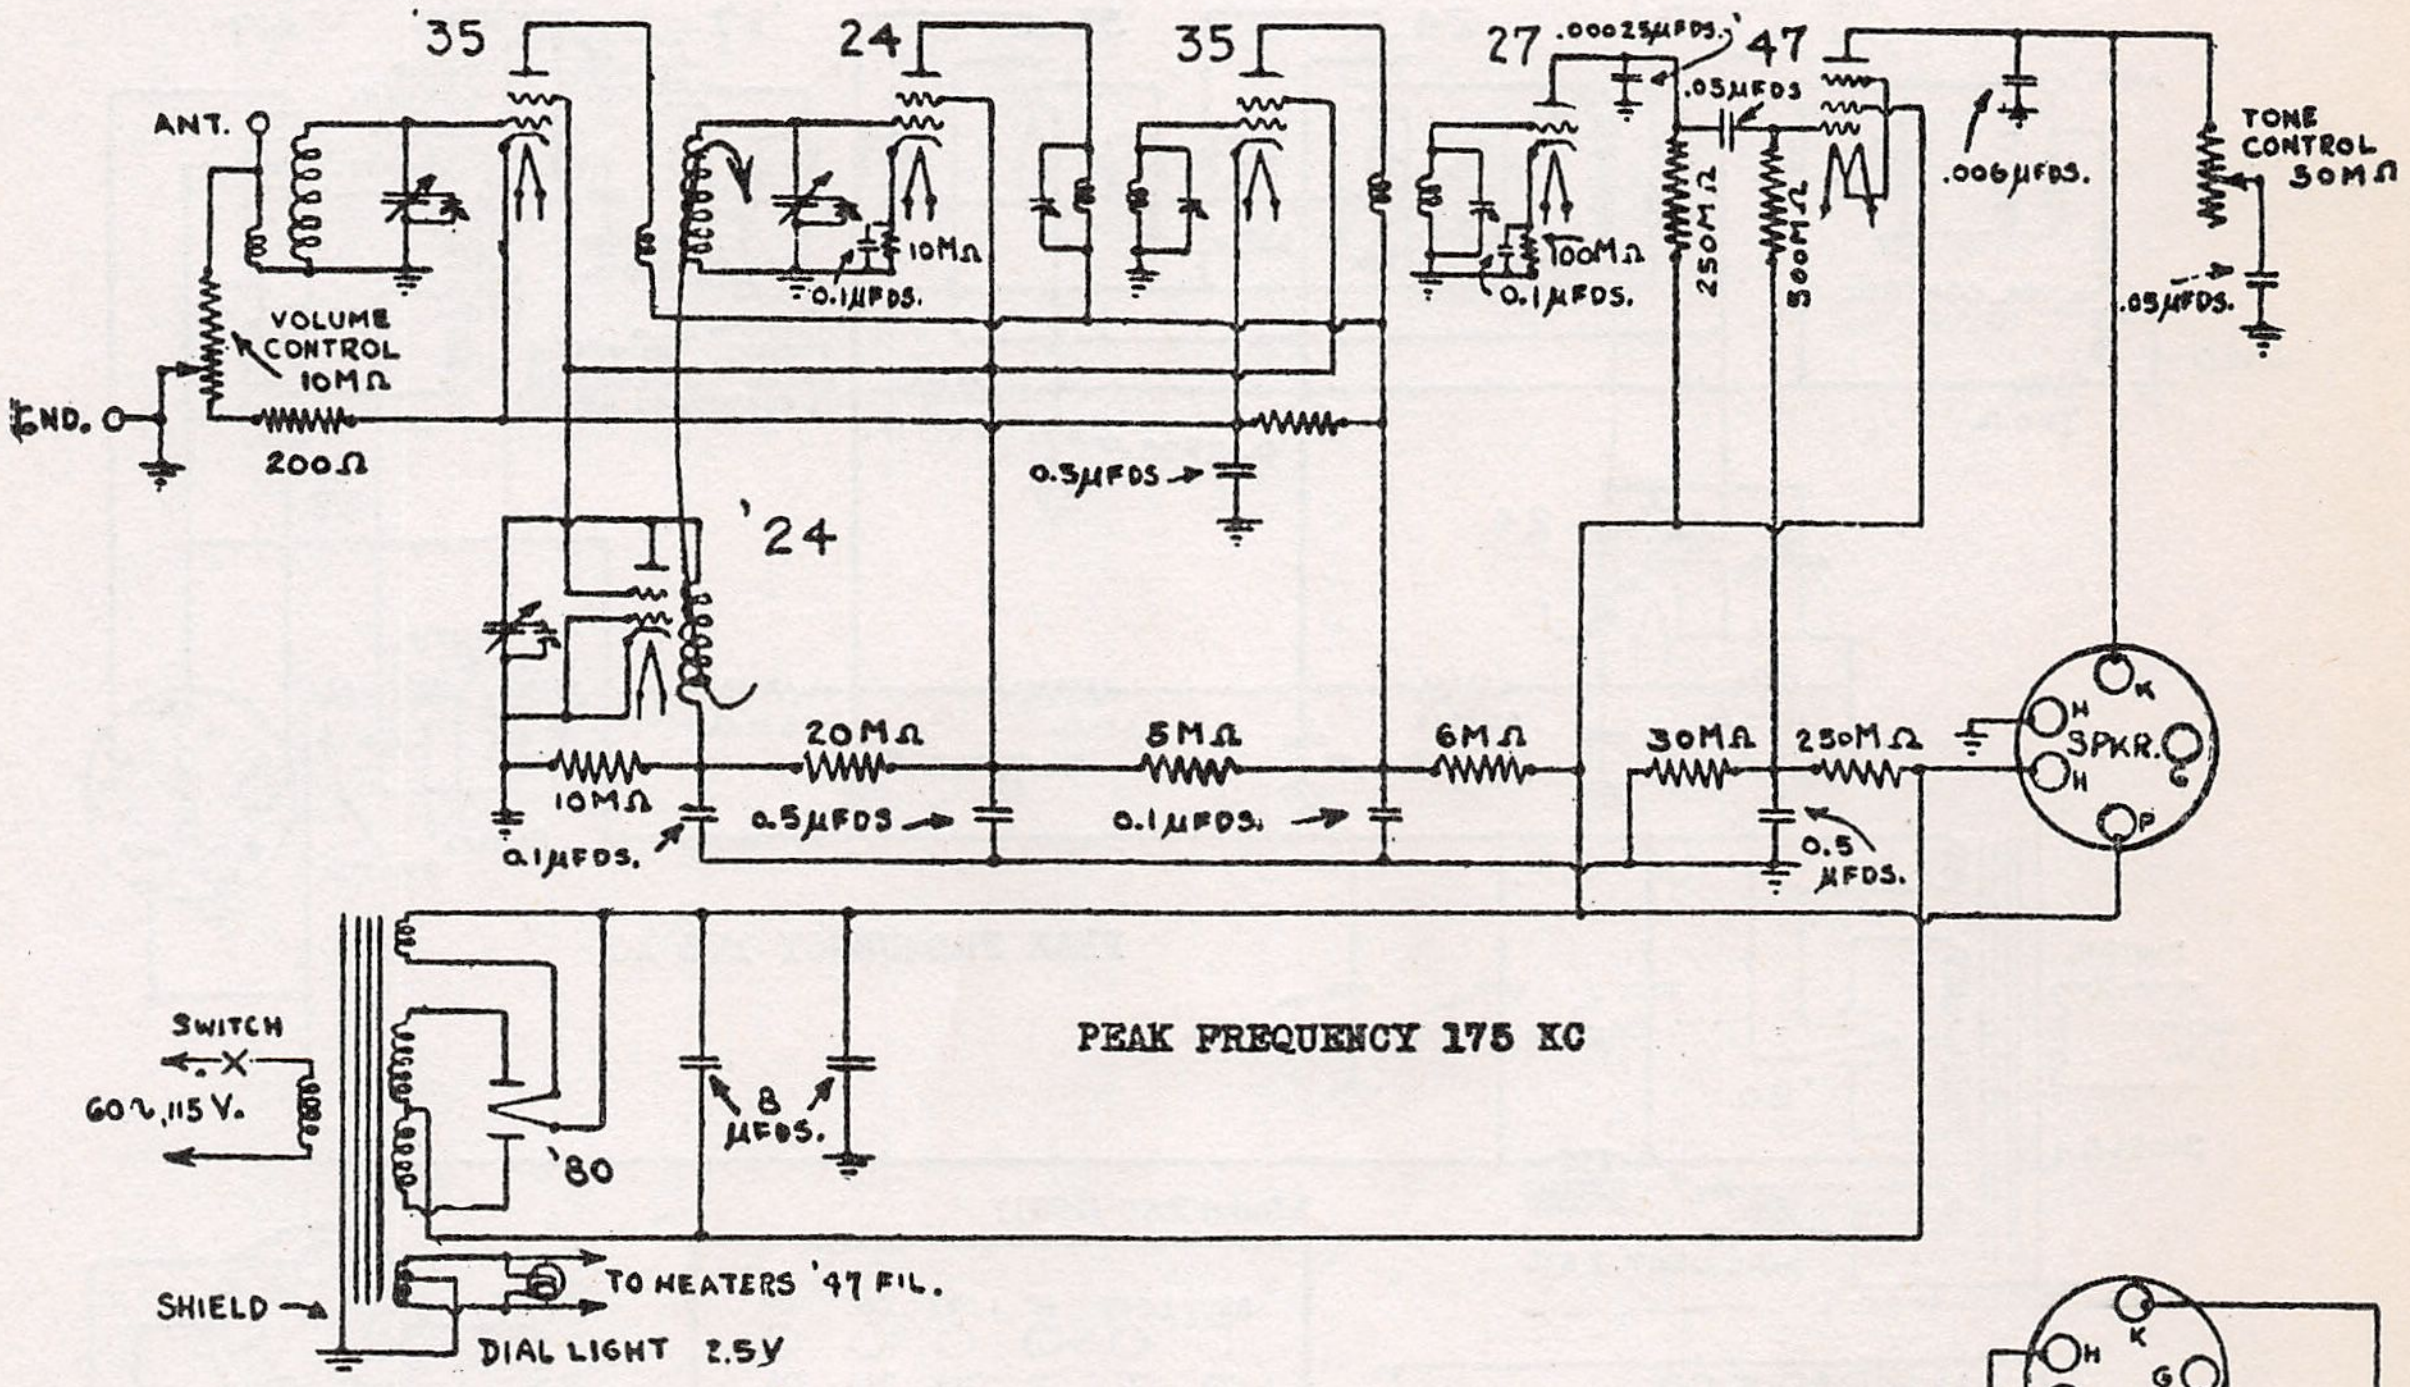
35
24
35
27
47
.00025 MFDS.
.05 MFDS
ANT.
10MΩ
0.1 MFDS.
100MΩ
0.1 MFDS.
250MΩ
500MΩ
.006 MFDS.
TONE CONTROL 50MΩ
.05 MFDS.
VOLUME CONTROL 10MΩ
GND.
200Ω
0.5 MFDS
'24
20MΩ
5MΩ
6MΩ
30MΩ
250MΩ
10MΩ
0.1 MFDS.
0.5 MFDS
0.1 MFDS.
0.5 MFDS.
H
K
SPKR.
G
H
P
SWITCH
60~, 115 V.
8 MFDS.
'80
PEAK FREQUENCY 175 KC
SHIELD
TO HEATERS '47 FIL.
DIAL LIGHT 2.5Y

Model MA-7 (1931)

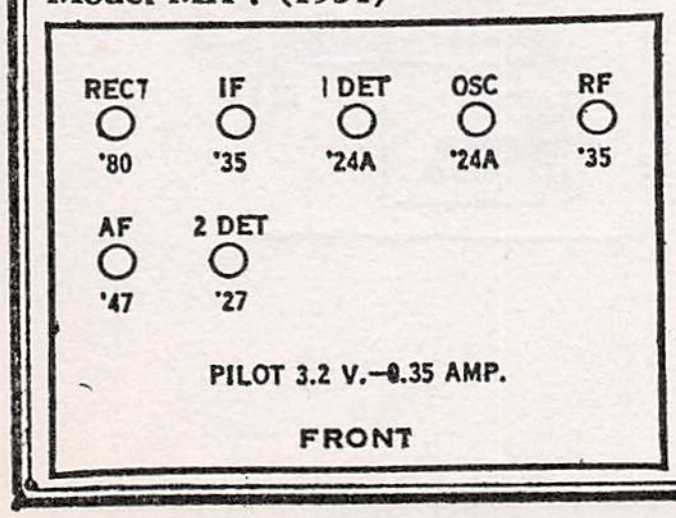
RECT
IF
1 DET
OSC
RF
'80
'35
'24A
'24A
'35
AF
2 DET
'47
'27
PILOT 3.2 V.–0.35 AMP.
FRONT

Model MA-7

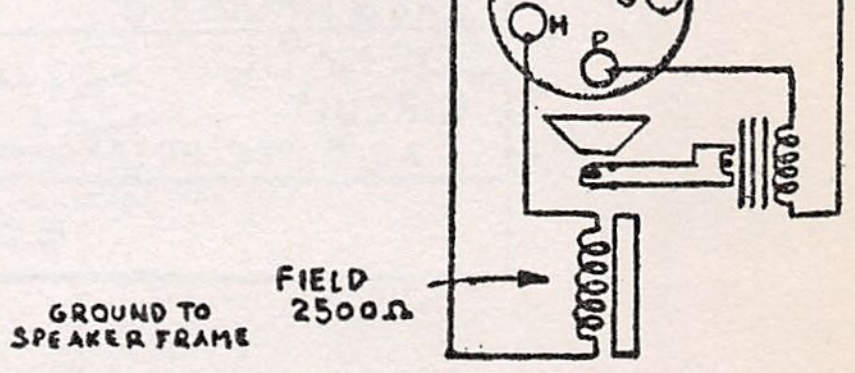
H
K
G
H
P
GROUND TO SPEAKER FRAME
FIELD 2500Ω

MODEL SA-7
MODEL SA-8

LANG RADIO CO.

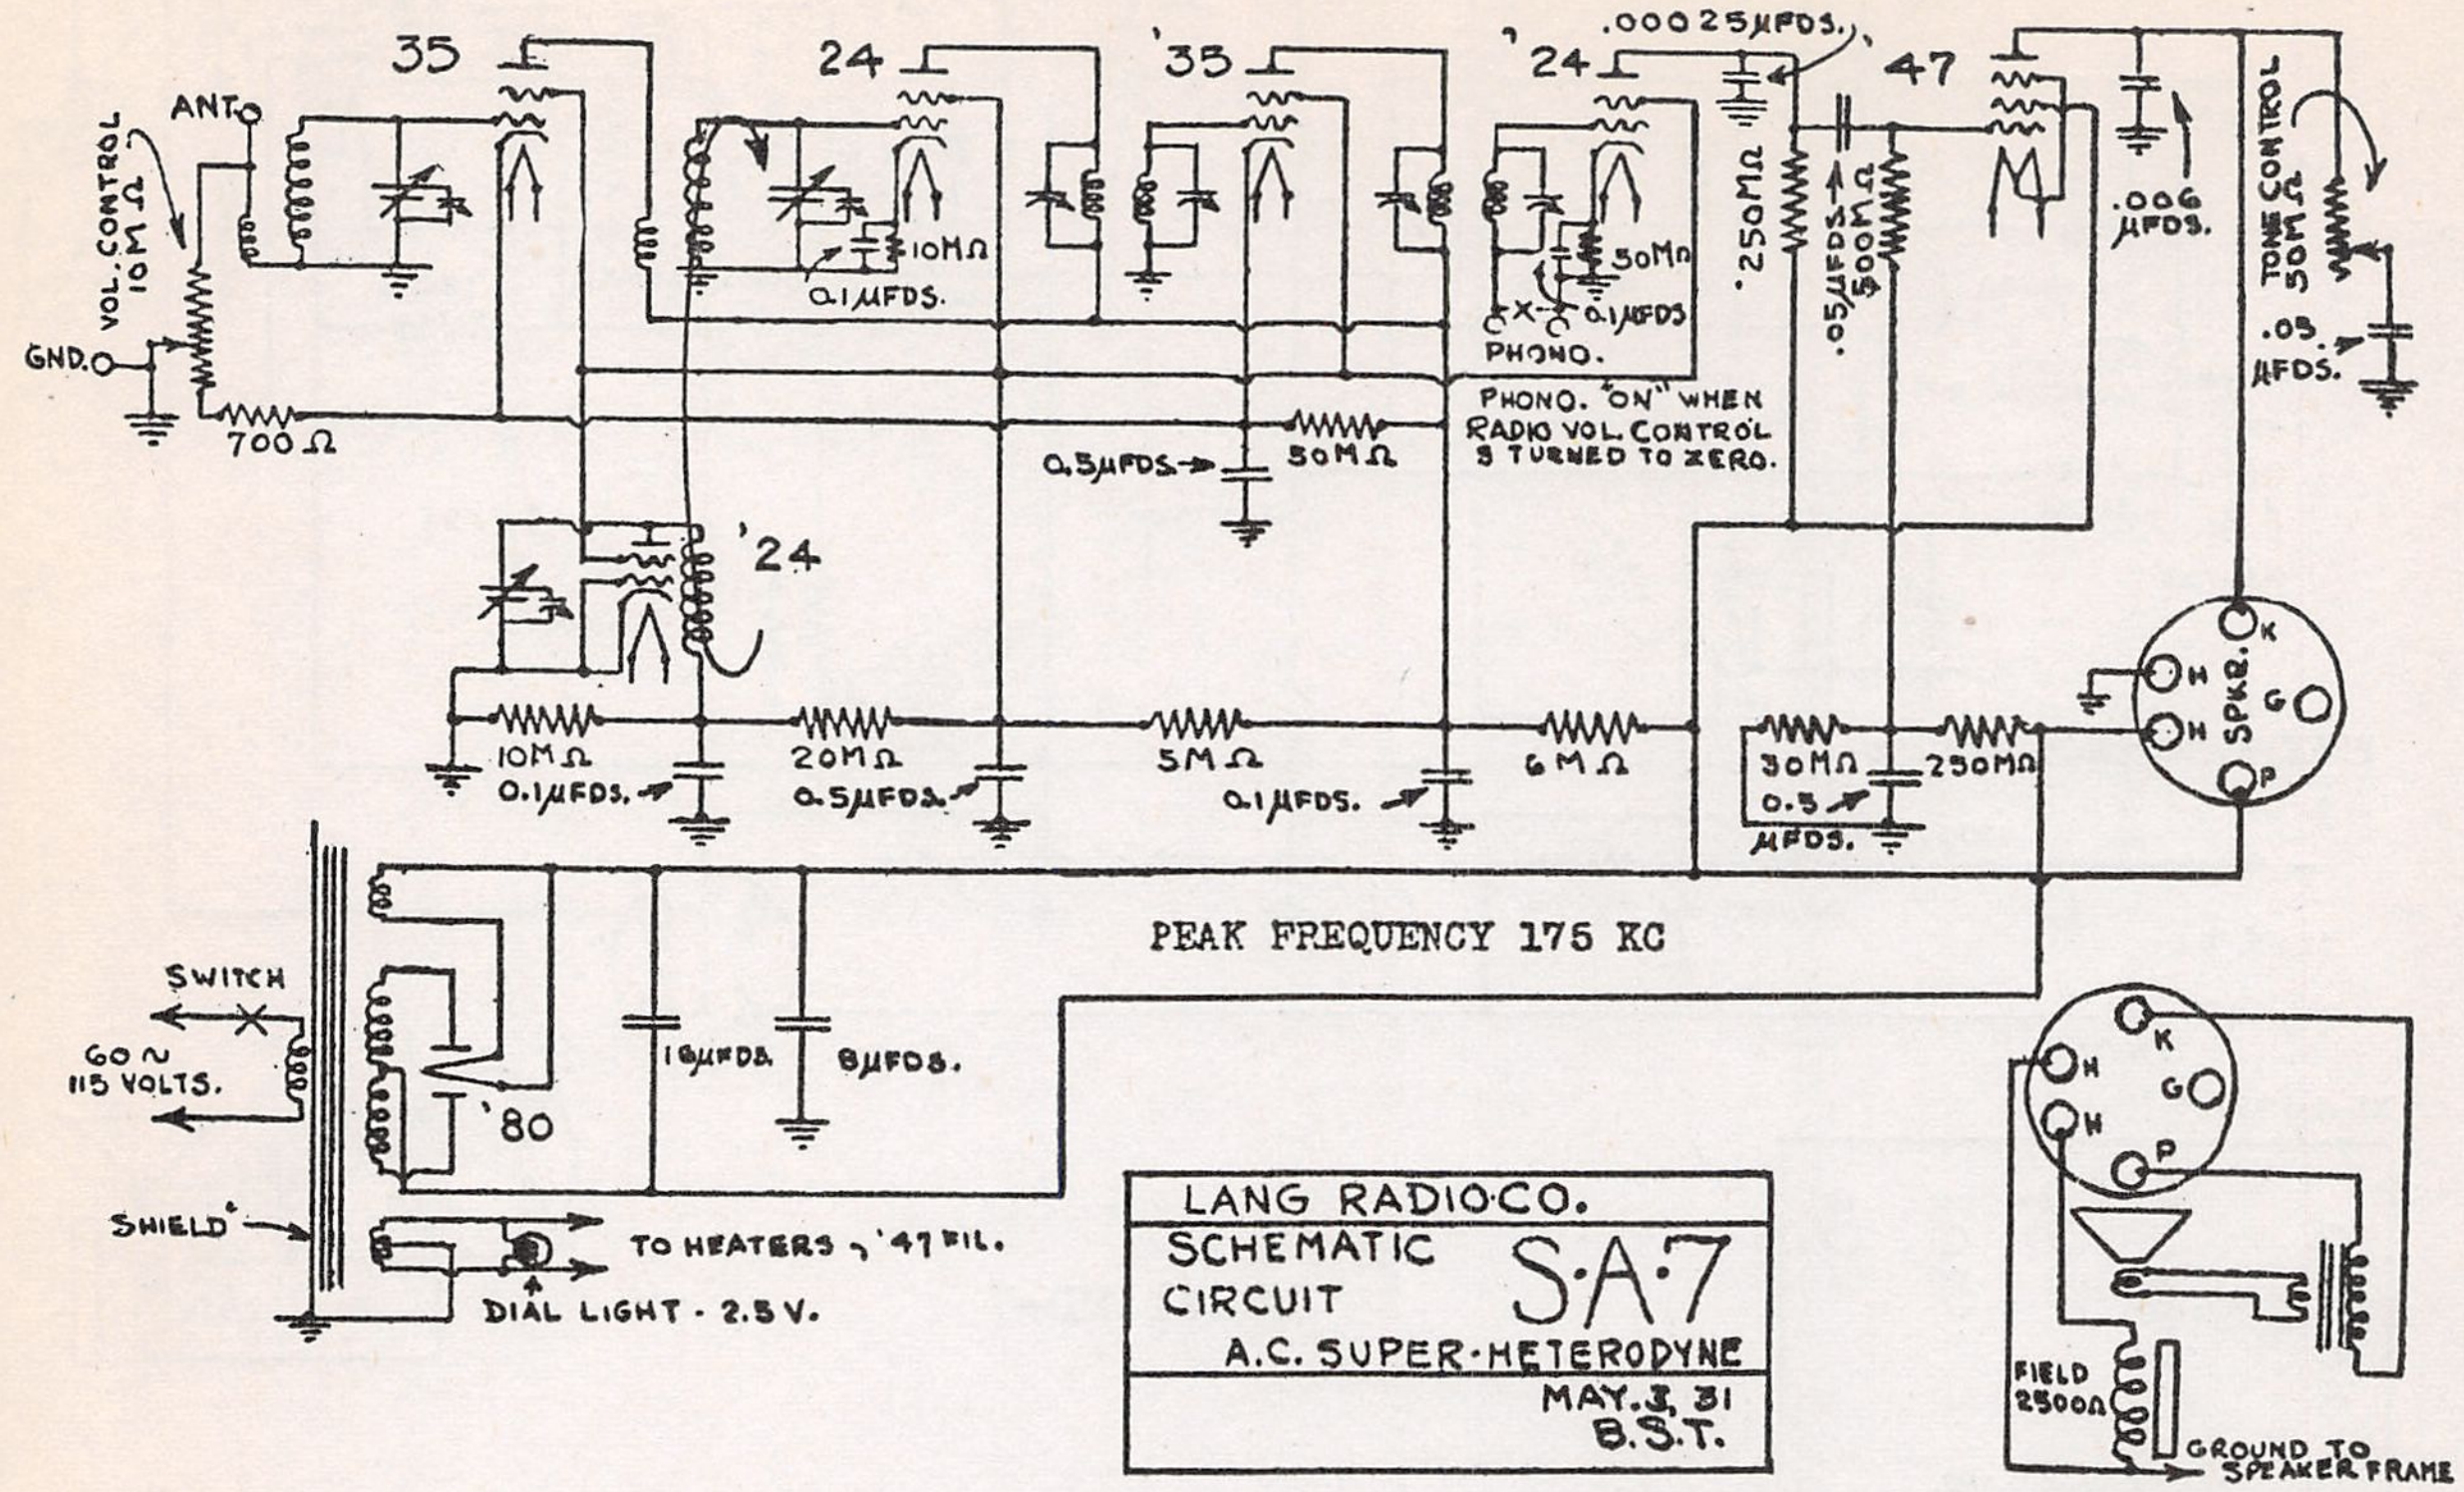
35
24
'35
'24
.00025 MFDS.
47
ANT.
VOL. CONTROL 10M Ω
GND.
700 Ω
10M Ω
0.1 MFDS.
50M Ω
0.1 MFDS
PHONO.
250M Ω
.05 MFDS.
500M Ω
.006 MFDS.
TONE CONTROL 50M Ω
.05 MFDS.
PHONO. "ON" WHEN RADIO VOL. CONTROL IS TURNED TO ZERO.
0.5 MFDS.
50M Ω
'24
10M Ω
0.1 MFDS.
20M Ω
0.5 MFDS.
5M Ω
0.1 MFDS.
6M Ω
30M Ω
0.5 MFDS.
250M Ω
SPKR.
K
H
H
G
P
PEAK FREQUENCY 175 KC
SWITCH
60 ~ 115 VOLTS.
1 MFDS.
8 MFDS.
'80
SHIELD
TO HEATERS 47 FIL.
DIAL LIGHT - 2.5 V.
LANG RADIO CO.
SCHEMATIC CIRCUIT S·A·7
A.C. SUPER-HETERODYNE
MAY. 3. 31
B.S.T.
K
H
H
G
P
FIELD 2500 Ω
GROUND TO SPEAKER FRAME

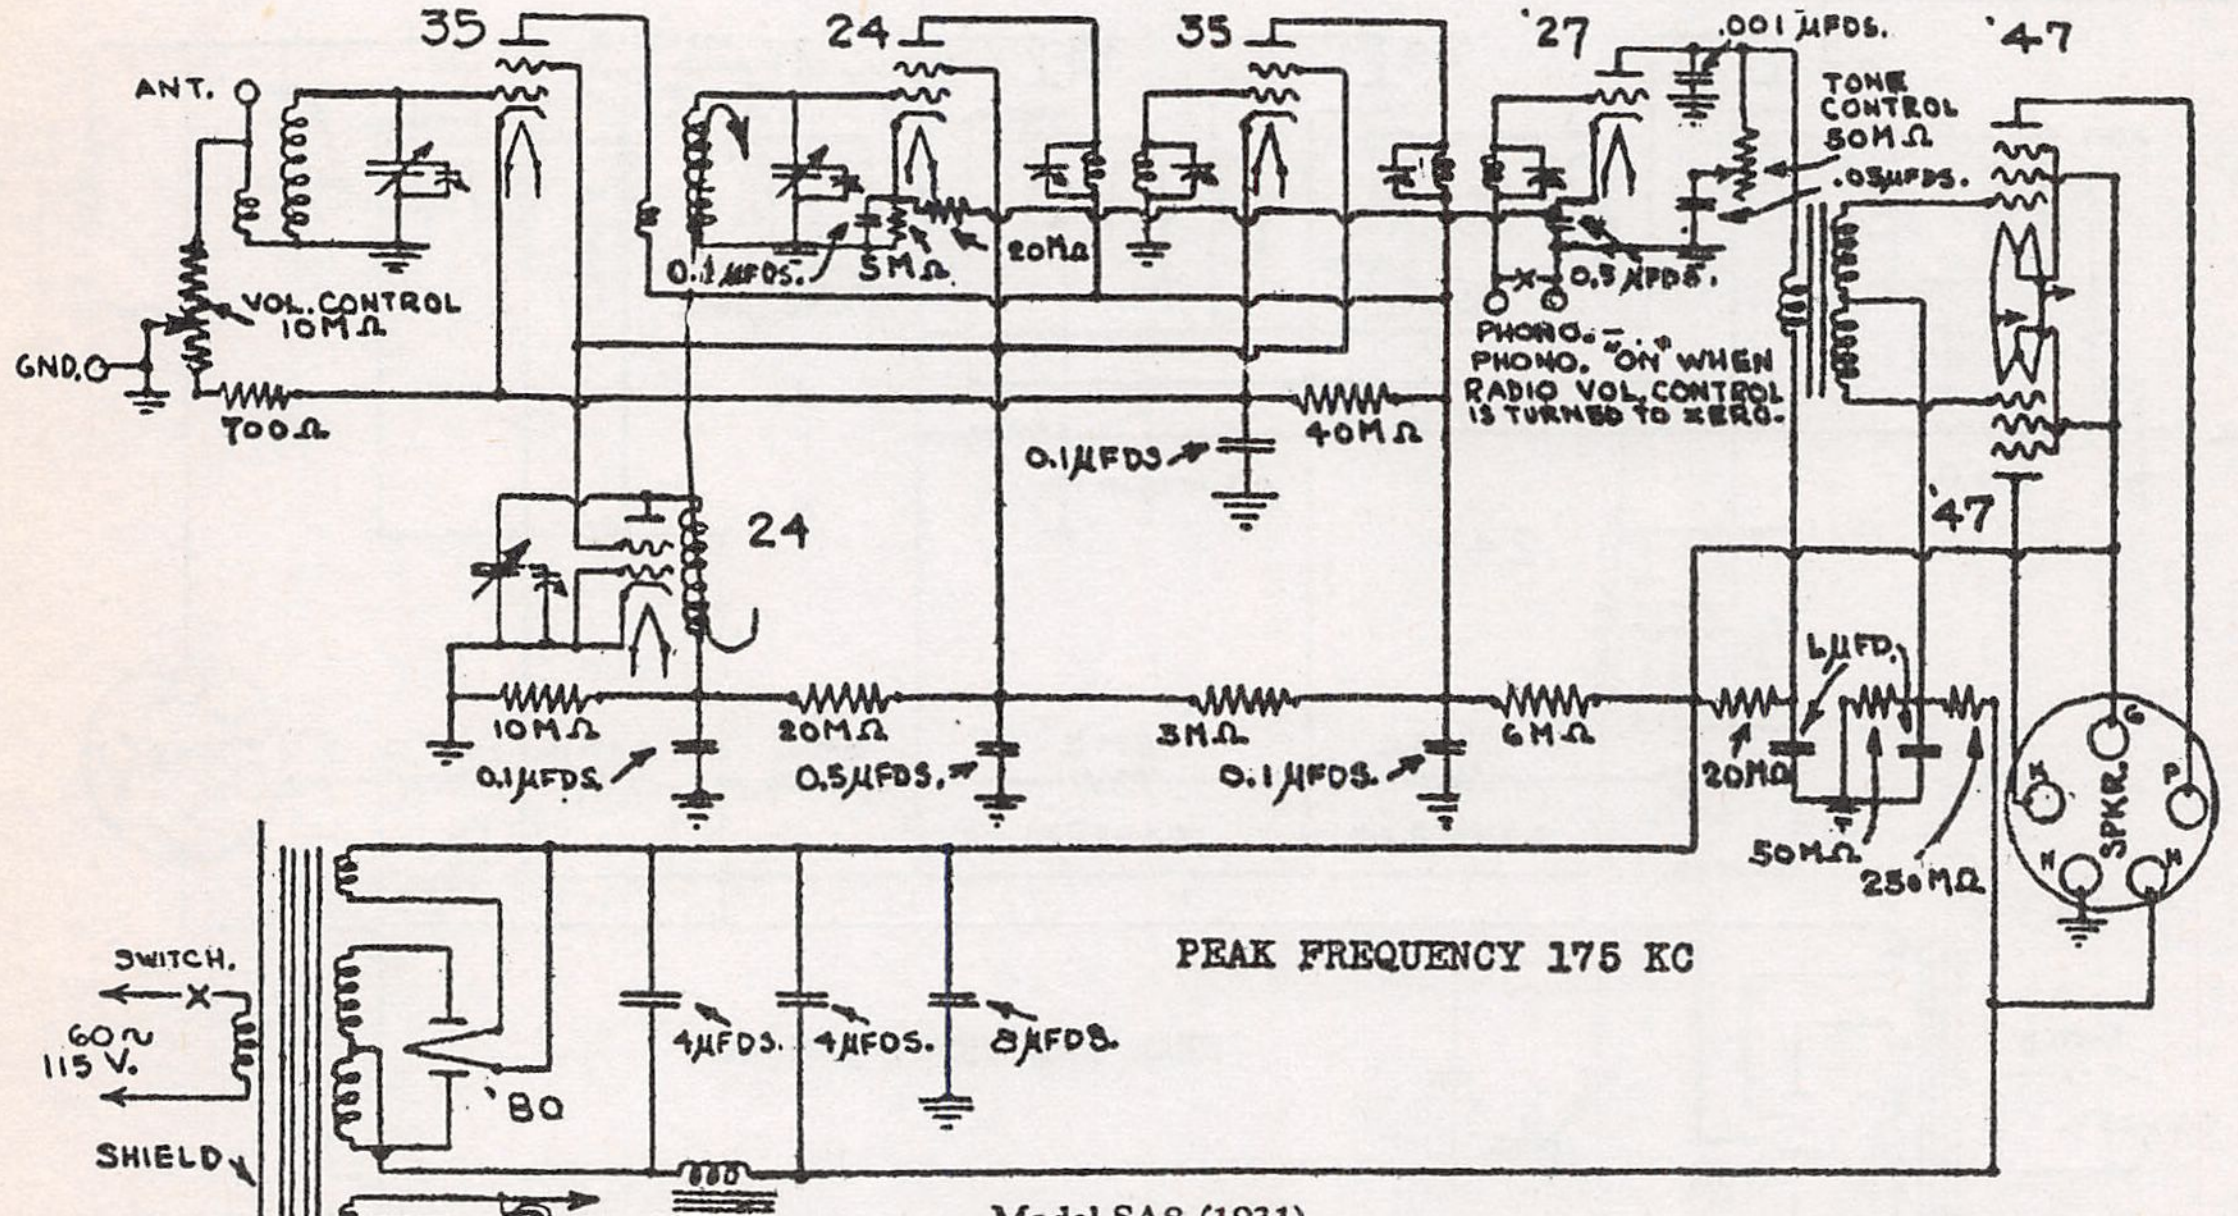
35
24
35
'27
.001 MFDS.
'47
ANT.
TONE CONTROL 50M Ω
.05 MFDS.
0.1 MFDS.
5M Ω
20M Ω
0.5 MFDS.
VOL. CONTROL 10M Ω
GND.
700 Ω
PHONO.
PHONO. "ON" WHEN RADIO VOL. CONTROL IS TURNED TO ZERO.
0.1 MFDS.
40M Ω
24
'47
1 MFD.
10M Ω
0.1 MFDS.
20M Ω
0.5 MFDS.
3M Ω
0.1 MFDS.
6M Ω
20M Ω
50M Ω
250M Ω
SPKR.
G
K
P
H
H
PEAK FREQUENCY 175 KC
SWITCH.
60 ~ 115 V.
4 MFDS.
4 MFDS.
8 MFDS.
'80
SHIELD
DIAL LIGHT 2.5V.

Model SA8 (1931)

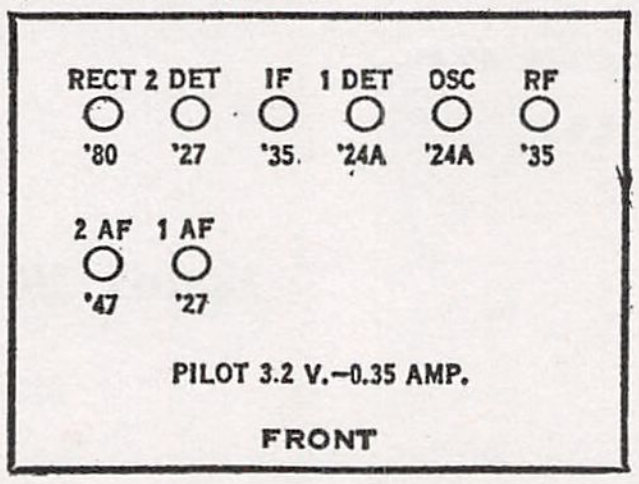
RECT
'80
2 DET
'27
IF
'35.
1 DET
'24A
OSC
'24A
RF
'35
2 AF
'47
1 AF
'27
PILOT 3.2 V.—0.35 AMP.
FRONT

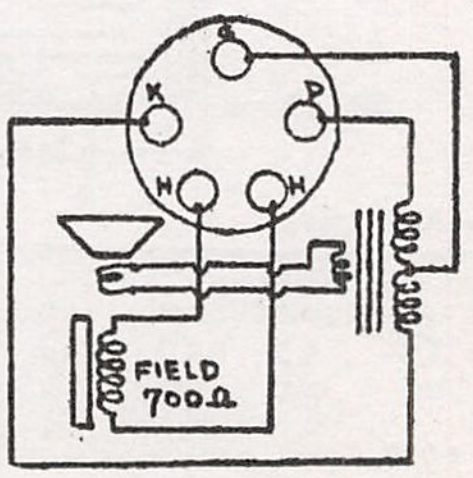
G
K
P
H
H
FIELD 700 Ω

LANG RADIO CO.
SCHEMATIC CIRCUIT S·A·8
A.C. SUPER-HETERODYNE
MAY. 4. '31
B.S.T.

MODEL 62-030
62-232
Troubadour

MONTGOMERY-WARD & CO.

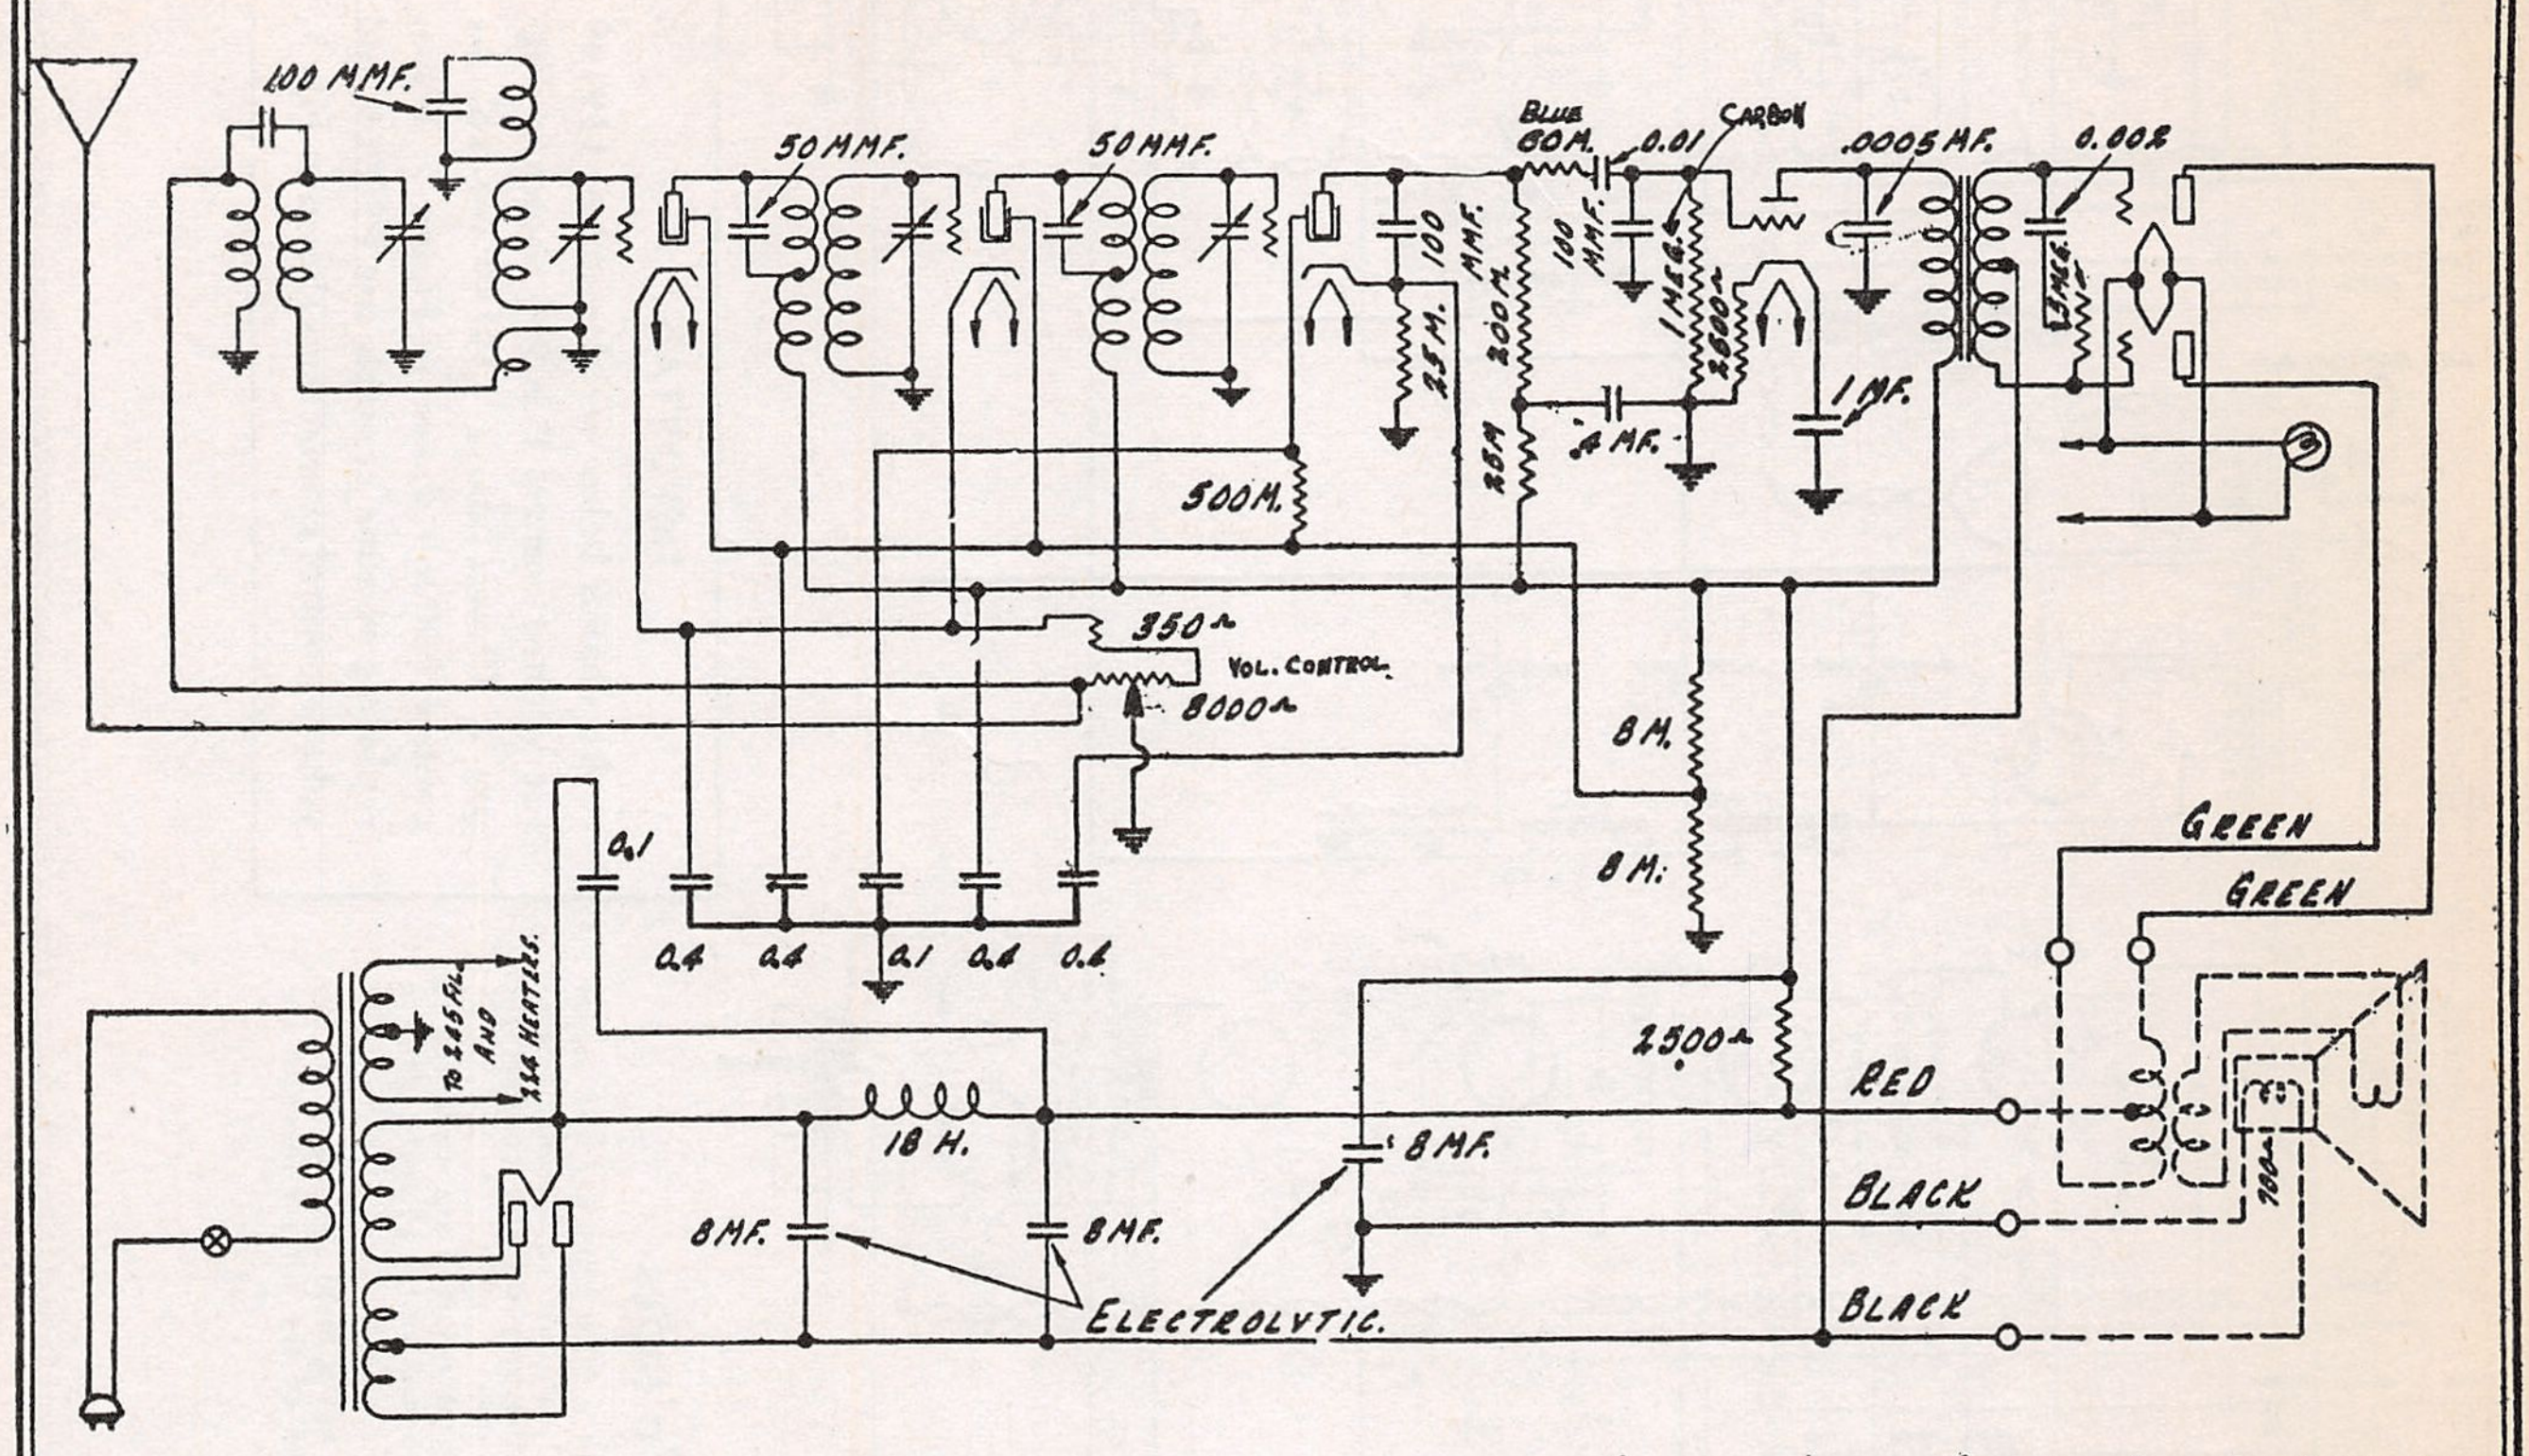

DOTTED LINES SHOWN ARE IN SPEAKER.

The model 32 W chassis used in the Troubadour and Lafayette is similar in many respects to the Commander, Cavalier, Coronado and Cortez. The special differential features of this chassis are the band pass filter and the radio frequency transformers.

A band pass filter is used in the antenna input stage, and consists of two separate tuned circuits which are inductively coupled. The advantages of this filter are an increase in selectivity; elimination of cross talk and improved tone. Incorporated in the filter is a special coil and condenser, which is inductively coupled to the grid coil of the first tube, tending to give this stage a constant gain over the entire frequency band.

Another feature of this set is the tuned radio frequency coils which have two separate primary windings, so connected as to give equal gain throughout the broadcast band. A screen grid power detector is used, giving the advantages of sensitivity with very good overload characteristics. The over-all fidelity response characteristics are especially good, due to the resistance coupling used in the first stage of audio, and the 245 tubes in push pull in the last stage. Sensitivity in this chassis averages 4 Microvolts per meter.

R.F. Coils

The antenna input transformer is of the high impedance type, and is both inductively and capacitively coupled. The primary winding is on a small bobbin inside the coil form wound concentric with the secondary, allowing inductive coupling. The capacity coupling is obtained by an extra turn of wire connected to the primary and wound on the coil alongside one end of the secondary winding. This antenna coil is coupled to the grid coil of the first tube through three turns of wire wound on the low potential end of the grid coil. Inside of the grid coil is a small bobbin coil shunted by a 100 mmfd. condenser, and being in inductive relation to the grid coil. This small coil with condenser in shunt is tuned to the lower frequency The 100 mmfd. condenser is a small condenser without any color marking to distinguish it from the 50 M.M.F condensers with the yellow dot which are used in the other stages of the radio frequency. The primaries of the radio frequency coils proper, are made up of two parts; the inside primary is wound on a bobbin which is inside the coil form, and is shunted with a 50 M.M.F. condenser. The outside primary is wound on the coil form over the secondary winding and is separated by an insulated strip, the two primaries being connected in series. The energy transfer of the inside tuned primary decreases with increase in frequency—the energy transfer of the outside primary increases with increase in frequency resulting in a net gain that is practically uniform over the broadcast band. Any trouble in the R.F. coils of this receiver will be noted by the lack of sensitivity at either the high or low wave part of the dial.

Twenty-Five Cycle Chassis

A twenty-five cycle power transformer and an additional .45 M.F.D. condenser are used in this chassis. In converting a sixty cycle chassis to twenty-five cycle, first remove the .1 M.F.D. condenser across the filter choke and connect it across the .1 M.F.D. screen condenser. This provides additional filtering. Connect the .45 M.F.D. condenser across the filter choke.

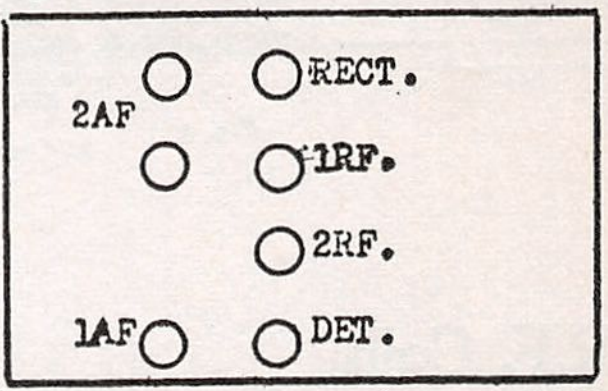

NO. 32 W CHASSIS — VOLTAGES AT SOCKETS — VOLUME CONTROL AT MAXIMUM — LINE VOLTAGE, 115 — PLUG IN SOCKET OF RECEIVER — TUBE IN TEST SET

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
224	1	1st Radio	2.3	198	3.	88	.9	3.	3.5	6.
224	2	2nd Radio	2.3	198	3.	88	.9	3.	3.5	6.
224	3	Detector	2.3	150	6.	40°	.1	6.	.25	.4
227	4	1st Audio	2.3	180	12.5			12.5	5.	6.1
245	5	2nd Audio	2.4	255	55.				26.	31.
245	6	2nd Audio	2.4	255	55.				26.	31.
280	7	Rectifier	5.						36. Per Plate	

°Calculated value—cannot be read on ordinary Voltmeter.

MODEL 62-040
Commodore
62-181
Sovereign

MONTGOMERY-WARD & CO.

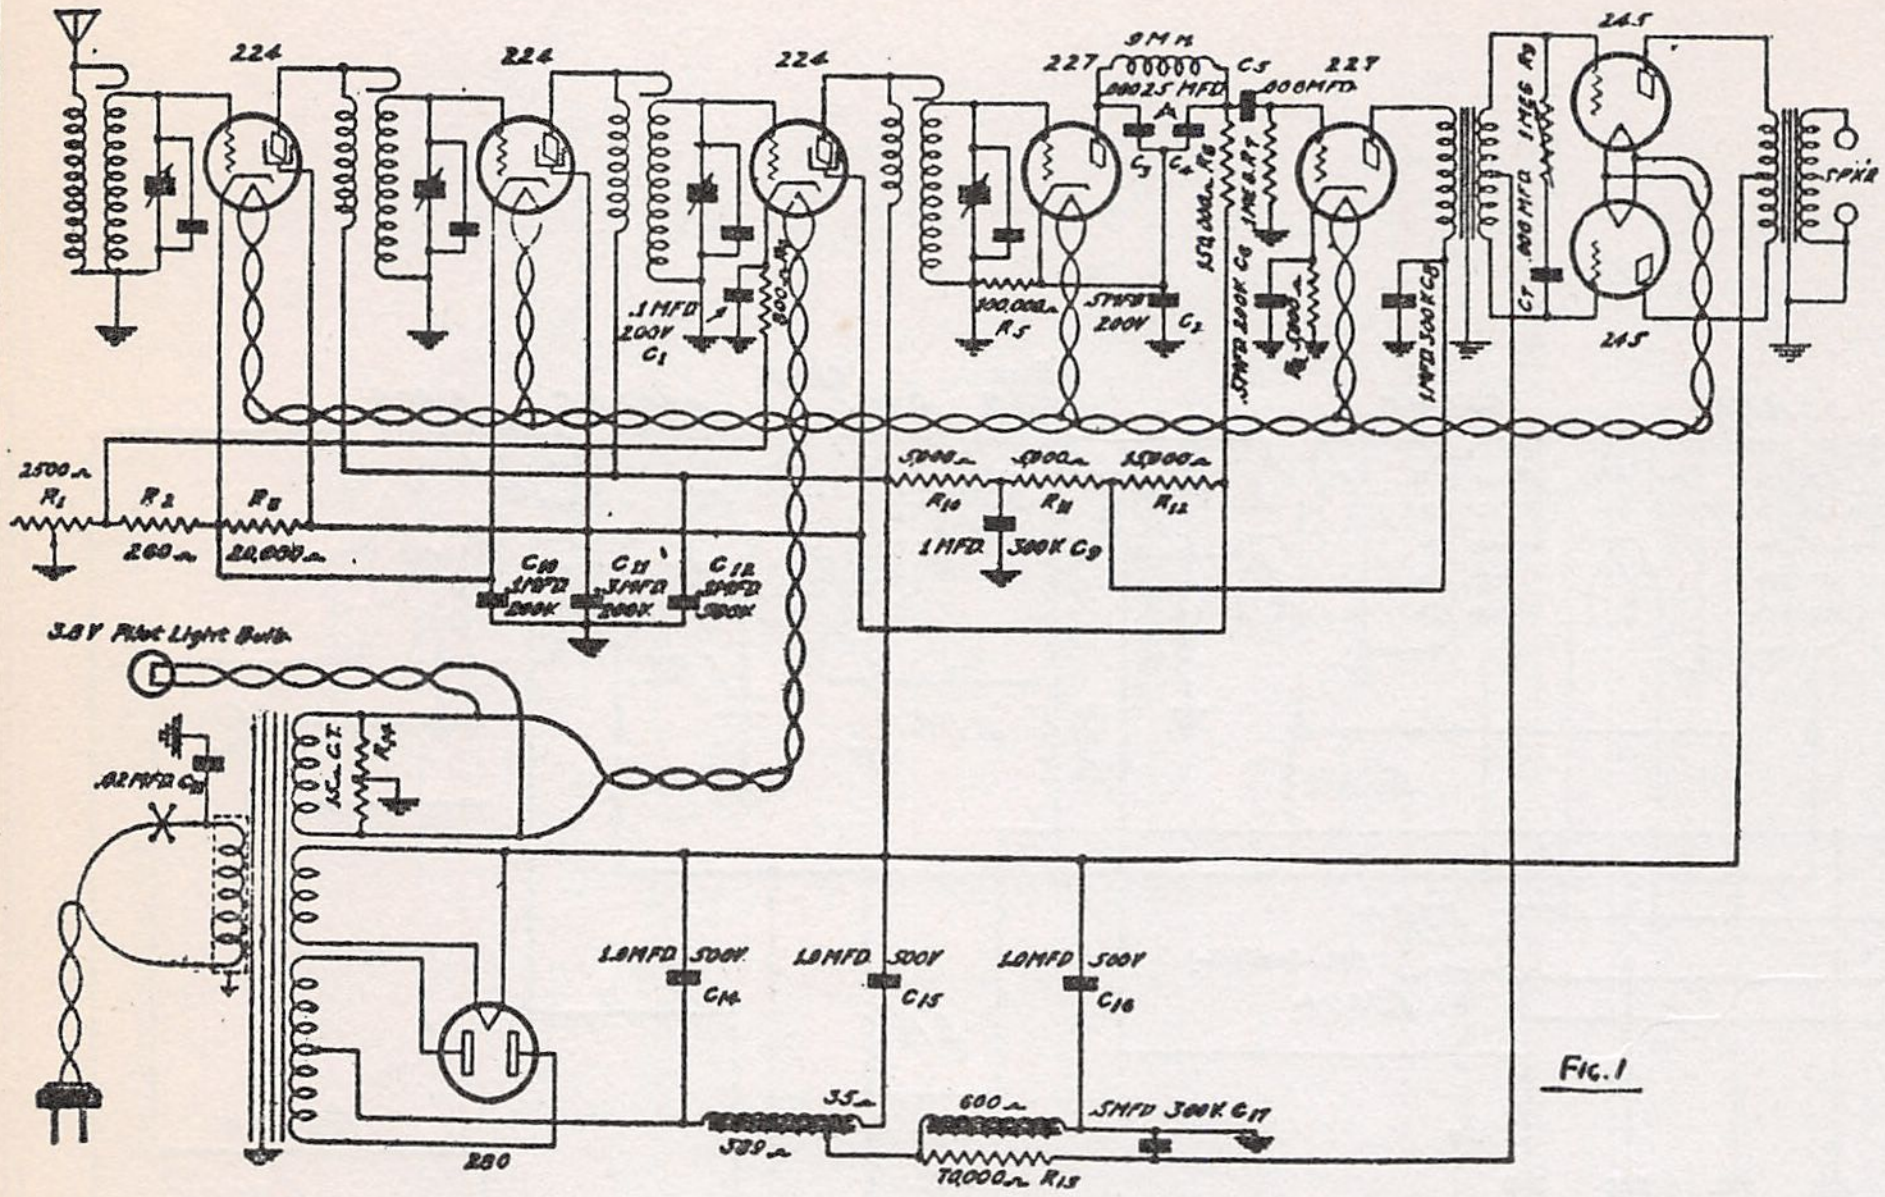
224
224
224
227
227
245
245
9 MH
.00025 MFD
C5
.006 MFD
1 MEG R9
.1 MFD 200V C1
100,000 R5
.5 MFD 200V C2
150,000 R6
.5 MFD 200V C6
1 MFD 500V C8
800 MFD
2500 R1
R2
R3
260
20,000
C10 .5 MFD 200V
C11 .5 MFD 200V
C12 .5 MFD 500V
5000 R10
5000 R11
15000 R12
1 MFD 300V C9
3.8 V Pilot Light Bulb
.02 MFD C13
10 MFD 500V C14
10 MFD 500V C15
10 MFD 500V C16
35
329
600
.5 MFD 300V C17
70,000 R13
280
SPKR
Fig. 1

IMPORTANT

All chassis below serial number 139149 use volume control P-90966 shown in Figure 1. Chassis above 139149 use volume control P90969 shown in Figure 3. When replacing volume controls use P90969 and volume control connections shown in Fig. 3.

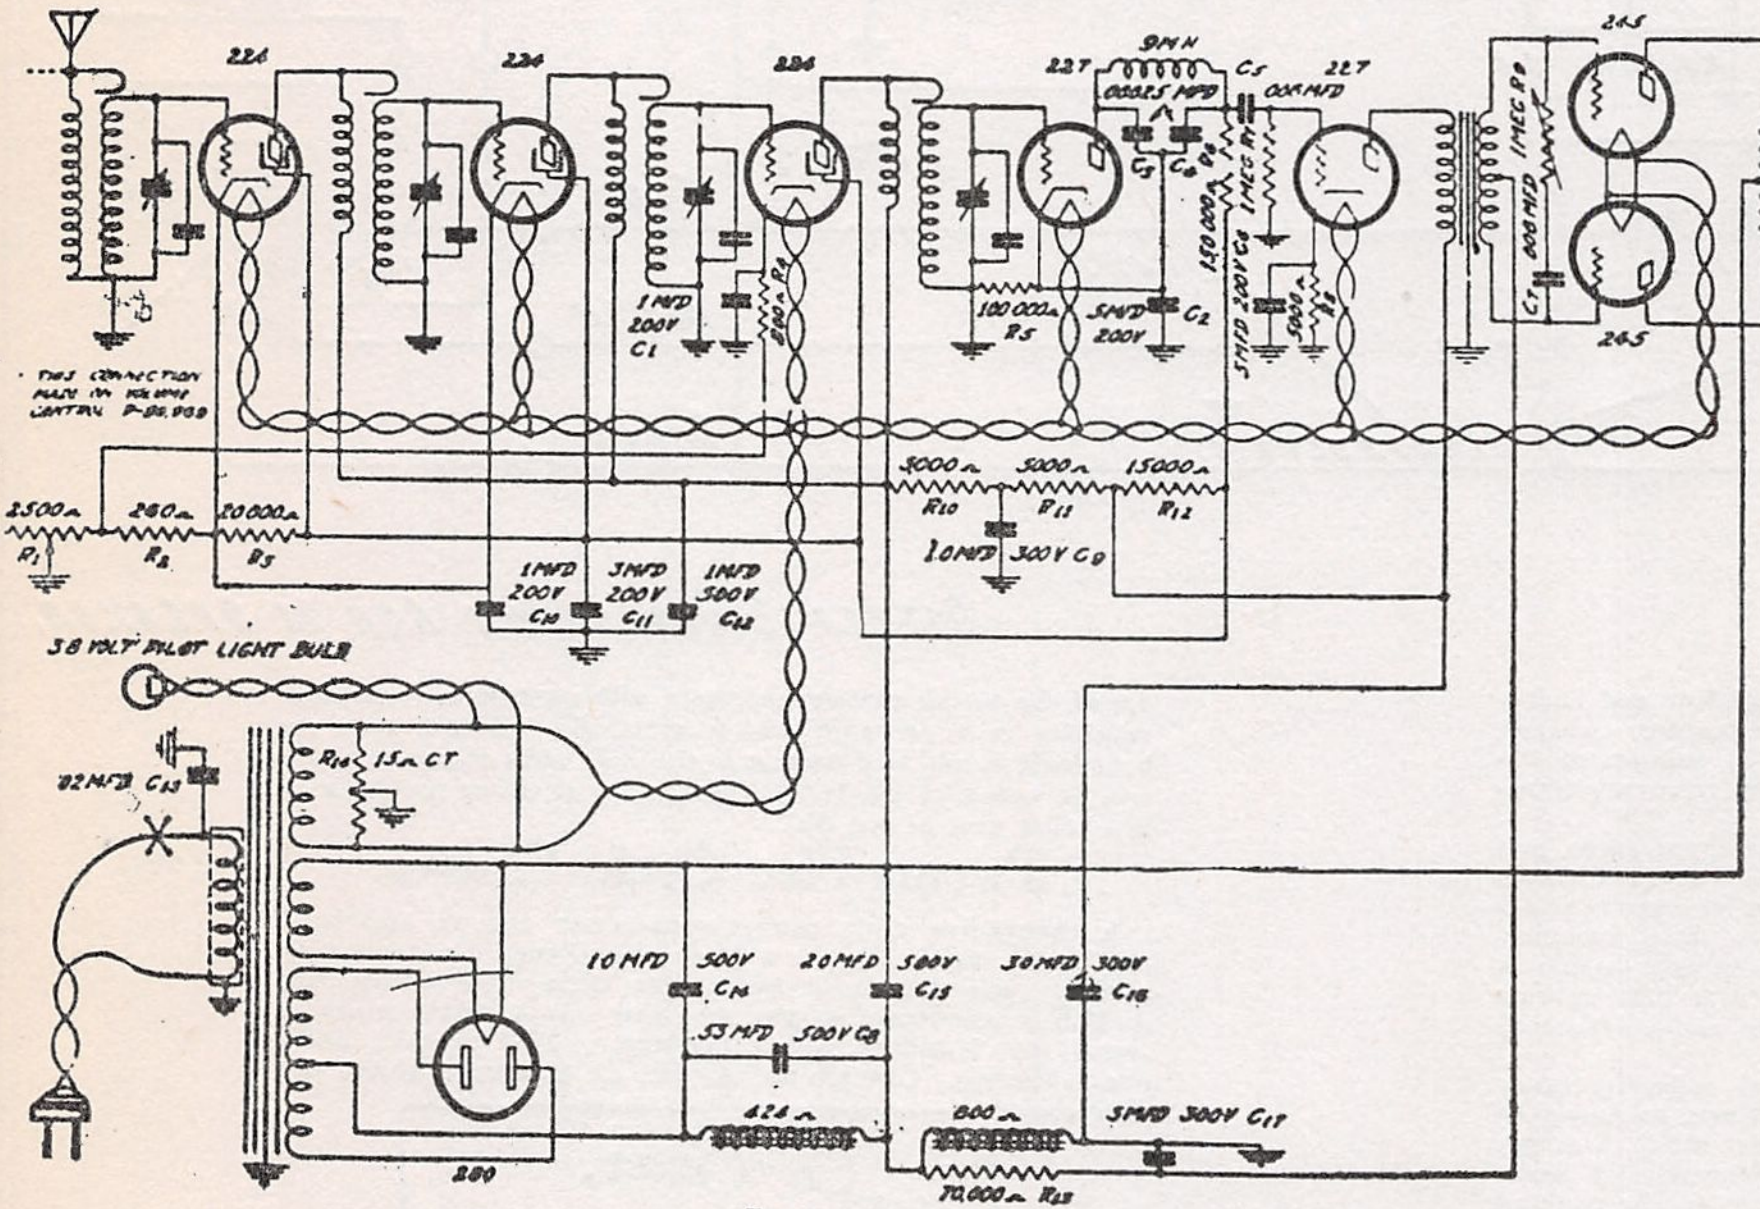
224
224
224
227
227
245
245
9 MH
.00025 MFD
C5
.006 MFD
1 MEG
1 MFD 200V C1
100,000 R5
.5 MFD 200V C2
150,000
.5 MFD 200V C6
800 MFD
SPEAKER
THIS CONNECTION MADE ON VOLUME CONTROL P-90969
2500 R1
260 R2
20000 R3
1 MFD 200V C10
.5 MFD 200V C11
1 MFD 500V C12
5000 R10
5000 R11
15000 R12
1 MFD 300V C9
3.8 VOLT PILOT LIGHT BULB
.02 MFD C13
R14 15 CT
10 MFD 500V C14
20 MFD 500V C15
30 MFD 500V C16
.53 MFD 500V C8
424
800
.5 MFD 300V C17
70,000 R13
280

FIG. 3 25-Cycle Chassis

Tube Voltages

All D.C. voltages taken with a 1000 ohm per volt meter on the scale indicated in column headed "Meter Scale." Turn the volume control all the way on and connect the antenna and ground leads together.

The grid, plate, and screen grid voltages are measured to cathode of the heater tubes and to filament of three-element tubes.

The dynamic loud speaker has a field resistance of 600 ohms. The field is used as one of the filter chokes in the power pack.

R.F. Coils

The R.F. Coils on this receiver are both inductively and capacitively coupled in such a way that the R.F. gain is constant throughout the entire broadcast band. Each coil is marked with a streak of paint inside the secondary coil near the lugs, according to the group into which it falls. Four coils of the same color are used in each chassis. When ordering a coil for replacement, therefore, be sure to mention the color of the paint on that coil so that it will be replaced with one of identically the same characteristics. If there is any doubt, return the coil. It is seldom that one of these radio frequency coils needs replacement, but should it be necessary to do so, first unsolder the wires on the coil lugs, then loosen the nuts holding the metal coil can. After the coil can is removed, loosen the two nuts holding the coil form and remove the coil.

Models 62-040, 62-181, 62-3335, 181, 187 (1930)

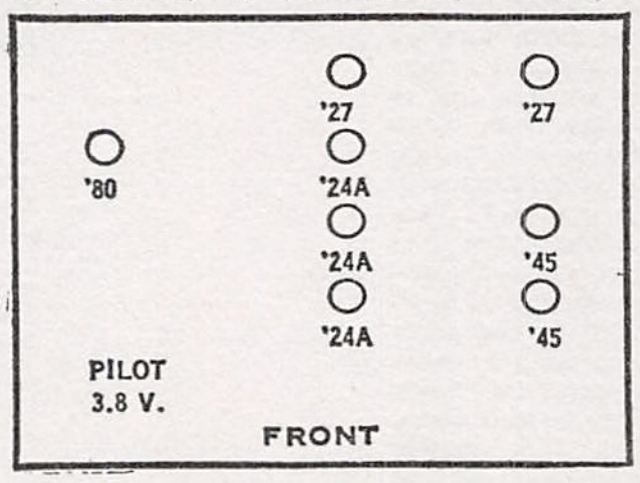
'80
'27
'24A
'24A
'27
'45
'45
PILOT 3.8 V.
FRONT

Tube	Circuit	Meter Scale	90 V.	100 V.	110 V.	120 V.	130 V.
1st two 224 R.F. Amplifier Tubes	Grid Screen Grid Plate	0-5 0-100 0-750	-2.5 62 220	-2.9 70 240	-3.3 76 270	-3.7 84 295	-4.1 90 310
2nd 224 R.F. Amplifier Tube	Grid	0-5	-1.9	-2.3	-2.6	-3.	-3.4
Detector 227 Tube	Grid Plate	0-10 0-100	2.4 21.0	2.7 24.0	-3. 26.0	-3.3 29.0	-3.6 32.0
227 Audio Amplifier Tube	Grid Plate	0-10 0-250	3 90	4 145	.5 158	.55 170	6 183
245 Power Tubes	Grid Plate	0-100 0-750	30 220	34 240	39 275	43 300	47 320
280 Rectifier Tube	Plate	0-750	300	330	360	400	415

MODELS 62-055,49,1522,
MODELS 1522,1562,1922
Chassis

MONTGOMERY-WARD & CO.

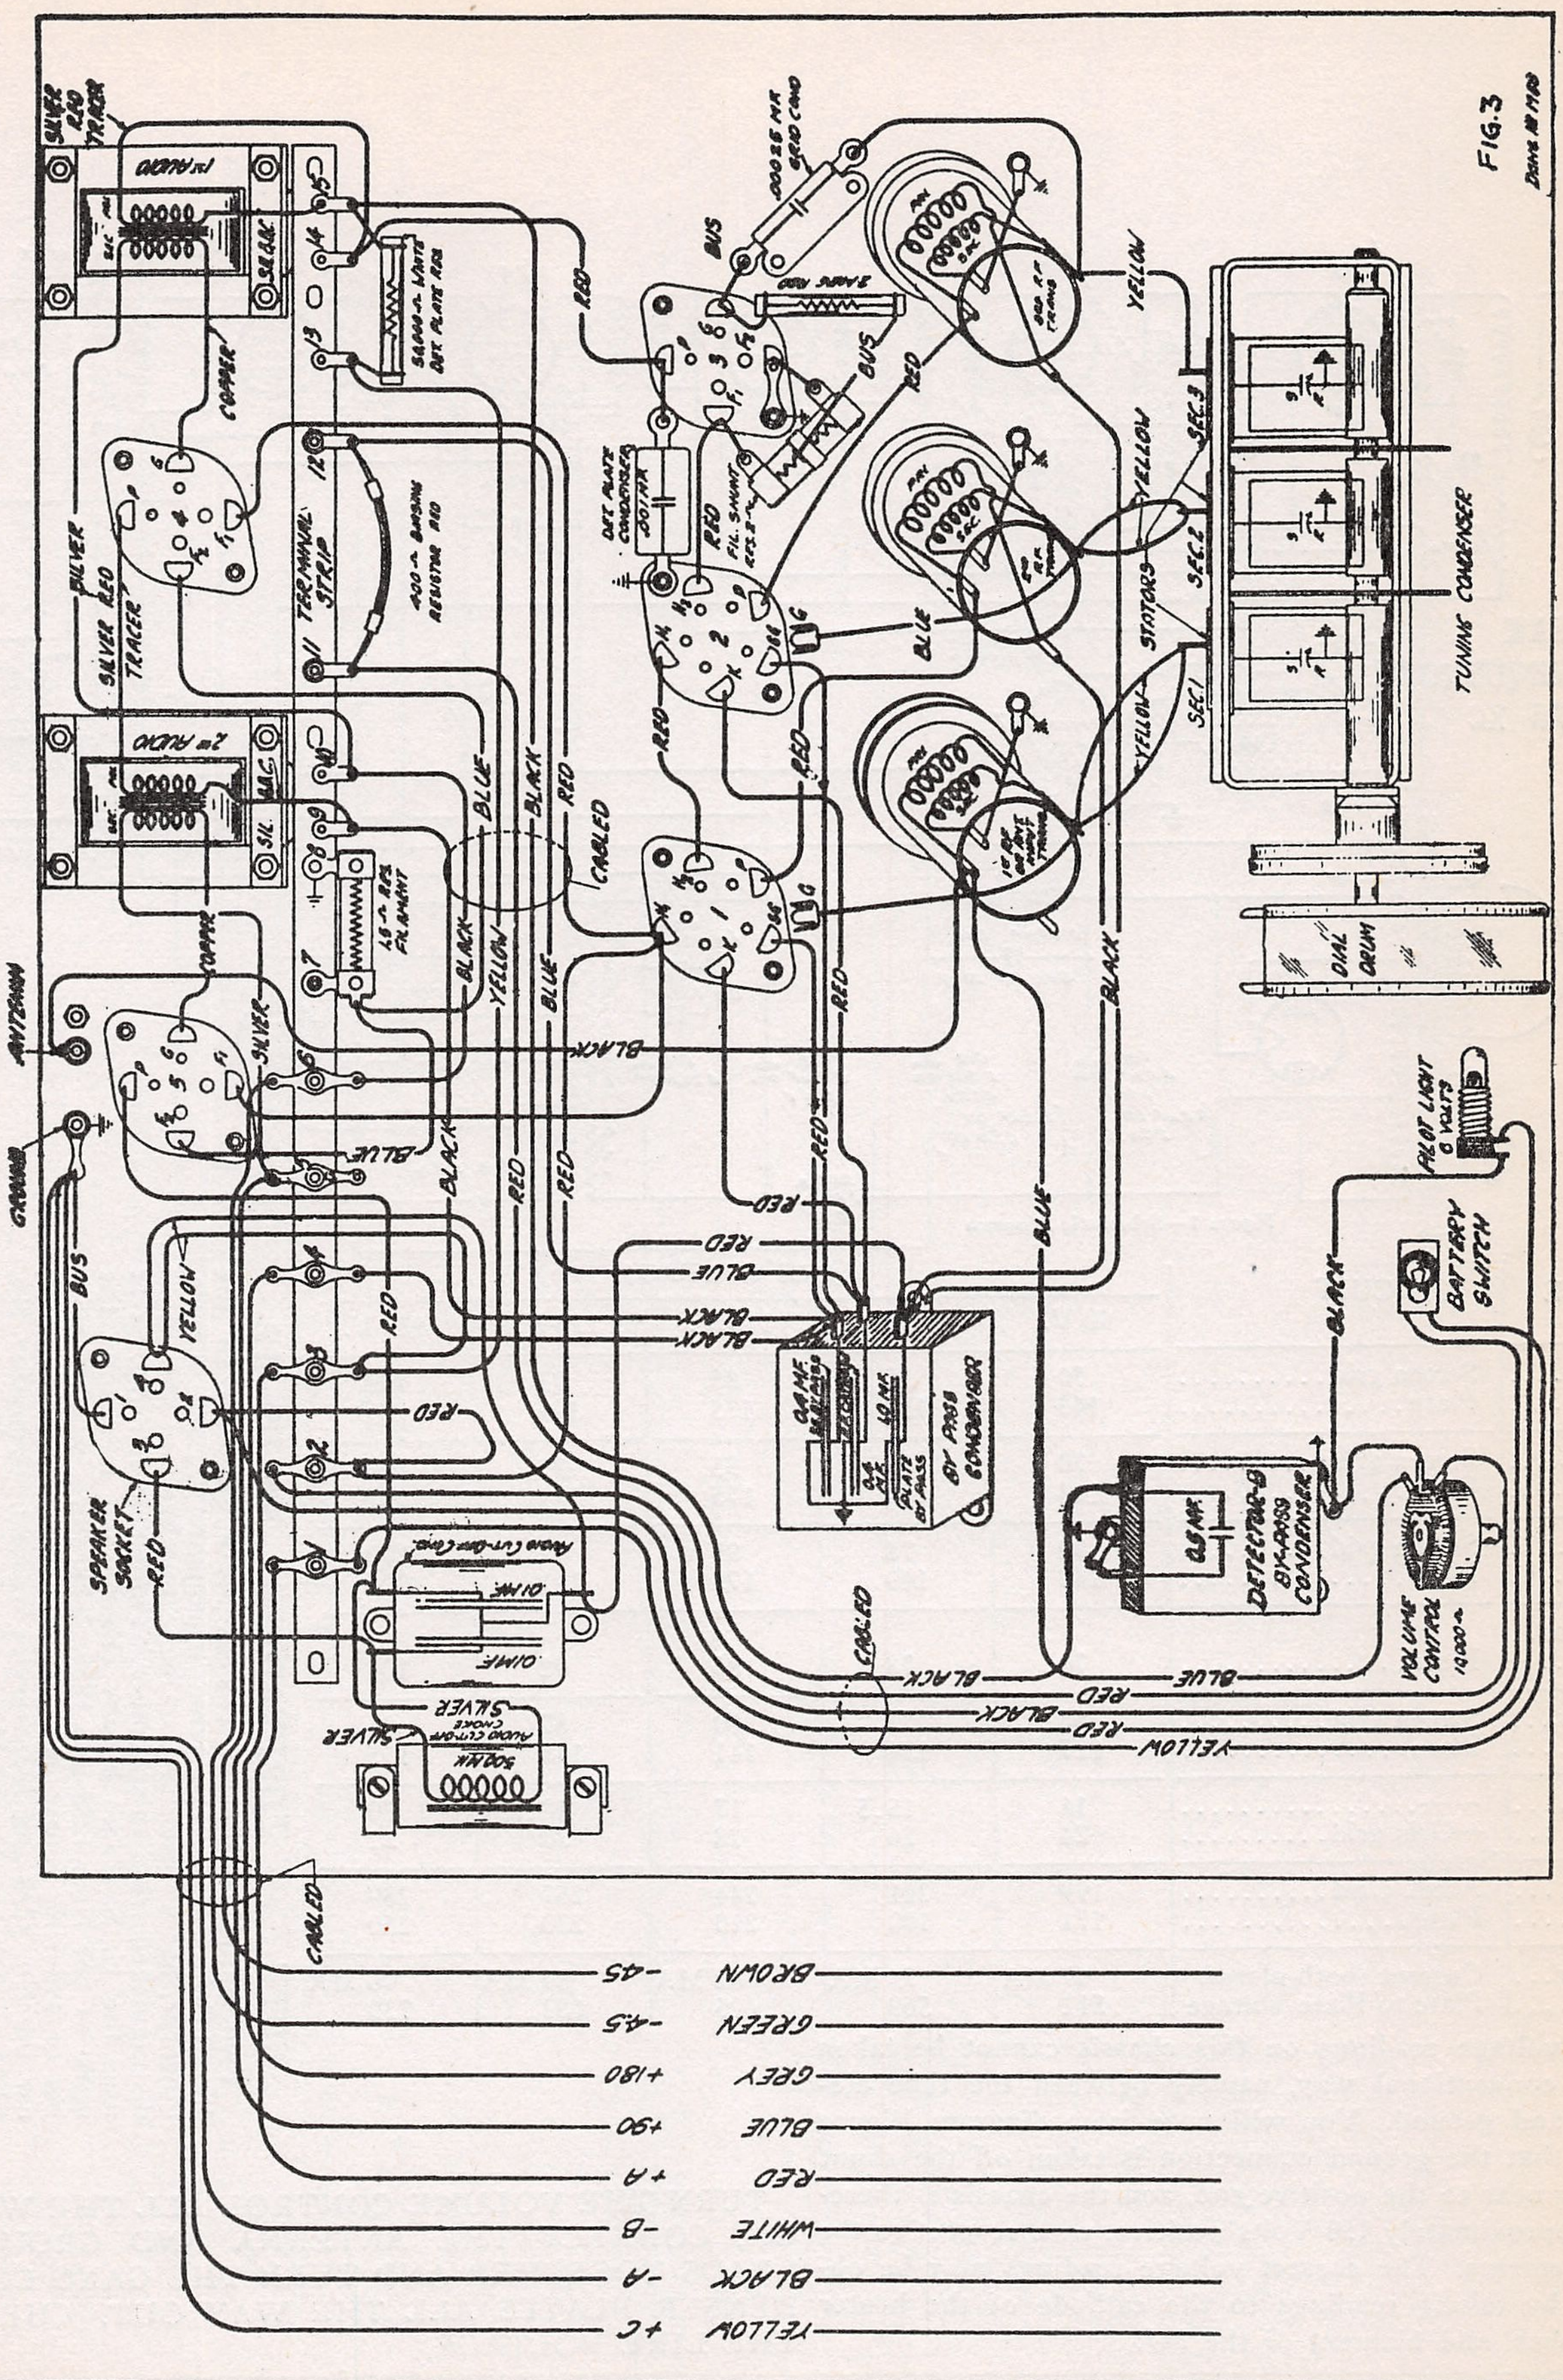
FIG. 3
TUNING CONDENSER
DIAL DRUM
STATORS
SEC.1
SEC.2
SEC.3
PILOT LIGHT 6 VOLTS
BATTERY SWITCH
VOLUME CONTROL
DETECTOR-B BY-PASS CONDENSER
BY PASS CONDENSER
TERMINAL STRIP
1st AUDIO
2nd AUDIO
SILVER RED TRACER
COPPER
SILVER
ANTENNA
GROUND
BUS
SPEAKER SOCKET
CABLED
RED
BLUE
BLACK
YELLOW
BROWN -45
GREEN -4.5
GREY +180
BLUE +90
RED +A
WHITE -B
BLACK -A
YELLOW +C

MODEL 62-11,62-12,62-14,
62-27,62-19
Schematic (1st Type
Voltage

MONTGOMERY-WARD & CO.

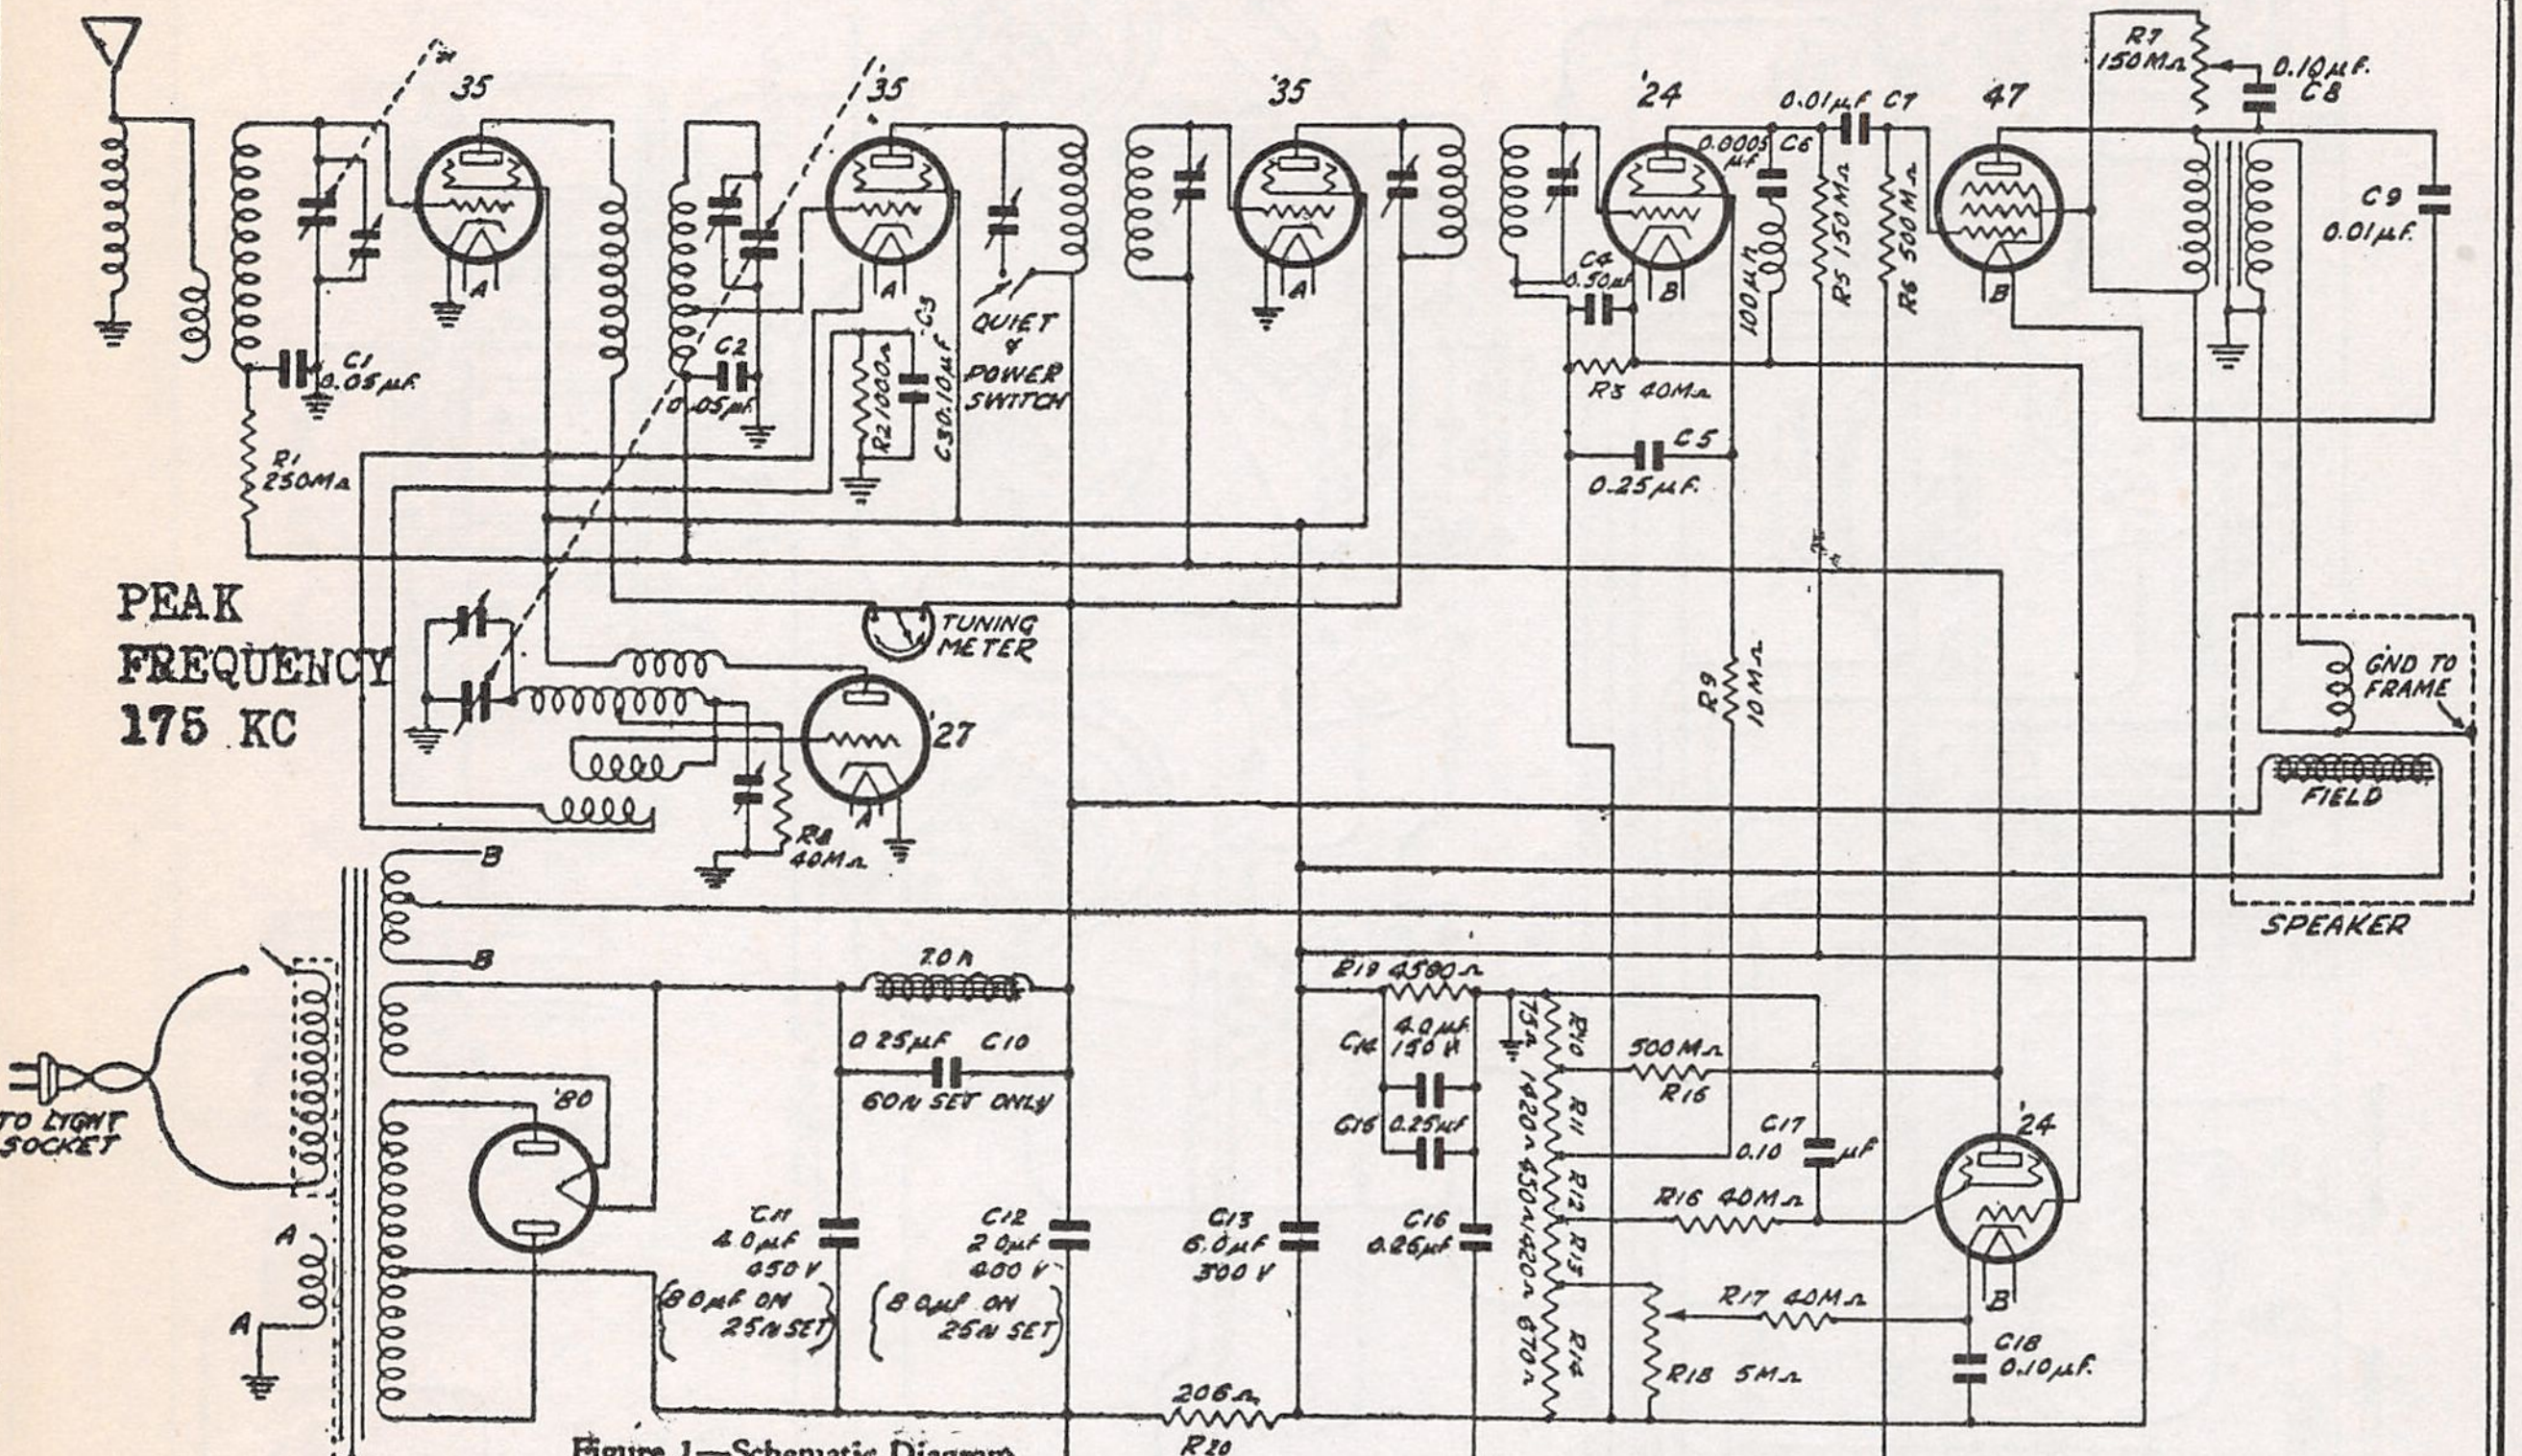
35
35
35
24
47
R7 150MΩ
0.10µF C8
0.01µF C7
0.0005µF C6
C9 0.01µF
C1 0.05µF
R1 250MΩ
C2 0.05µF
R2 1000Ω
C3 0.10µF
QUIET & POWER SWITCH
C4 0.50µF
R3 40MΩ
100µH
R5 150MΩ
R6 500MΩ
C5 0.25µF
PEAK FREQUENCY 175 KC
TUNING METER
27
R8 40MΩ
R9 10MΩ
GND TO FRAME
FIELD
SPEAKER
B
B
A
A
TO LIGHT SOCKET
80
70Ω
0.25µF C10
60N SET ONLY
R19 4500Ω
4.0µF C14 150V
C15 0.25µF
500MΩ R16
C17 0.10µF
R16 40MΩ
24
R17 40MΩ
R18 5MΩ
C18 0.10µF
C11 4.0µF 450V
8.0µF ON 25N SET
C12 2.0µF 400V
8.0µF ON 25N SET
C13 6.0µF 300V
C16 0.25µF
206Ω R20
R10 R11 R12 R13 R14

Figure 1—Schematic Diagram

TUBE	CIRCUIT	LINE VOLTAGE				
		90 V.	100 V.	110 V.	120 V.	130 V.
R.F....... '35........	Screen grid.......... Plate..............	70 143	78 159	85 175	92 191	100 207
1st Det..... '35........	Screen grid.......... Plate..............	70 143	78 159	85 175	92 191	100 207
I. F........ '35........	Screen grid.......... Plate..............	70 143	78 149	85 175	92 191	100 207
Oscillator.. '27........	Plate..............	70	78	85	92	100
2nd Det.... '24........	Screen grid.......... Plate..............	66 127	73 134	80 141	87 148	94 155
A. V. C.... '24........	——............... —Grid grid......... Screne—	14 24	15.5 26	17 28	18.5 30	20 32
Audio..... '47........	Accel. Grid.......... Plate..............	199 171	221 190	244 210	267 230	289 250
Rectifier... '80........	Current (both plates). Plate to Plate Voltage	67 MA 512	75 MA 569	82 MA 625	89 MA 682	96 MA 739

NOTE "GRENADIER" No 62-12

Two entirely different chassis were supplied to the Retail Stores under the name "Grenadier." Each chassis, however, has a different Catalogue number and should be distinguished from this number. The Grenadier No. 62-12 uses the U. S. Radio 8 tube chassis and is exactly the same as our Nos. 1238 and 1838. Therefore, when servicing or ordering repair parts for the Grenadier No. 62-12, use the No. 1238 and 1838 service manual. Grenadier No. 62-14 (Catalogue No. 62-11) is the Wells-Gardner 8 tube chassis which will be described in this service manual.

The voltage readings on this chassis cannot be taken in the conventional way, namely between the tube elements and ground. You will note from diagram Figure No. 1, that the ground connection is taken off the shunt resistor near to the positive end, and the chassis is therefore, approximately 150 Volts positive, with respect to the tube elements. The correct voltage readings may be obtained by taking readings to the cathode of the heater type tubes, and filament of the 247.

TURN THE VOLUME CONTROL ALL THE WAY ON, CONNECT THE ANTENNA AND GROUND LEADS TOGETHER AND TURN THE GANG CONDENSER PLATES ALL THE WAY OUT. CHECK THE LINE VOLTAGE.

MODEL 62-11, 62-12, 62-14
62-27
Socket-Data

MONTGOMERY-WARD & CO.

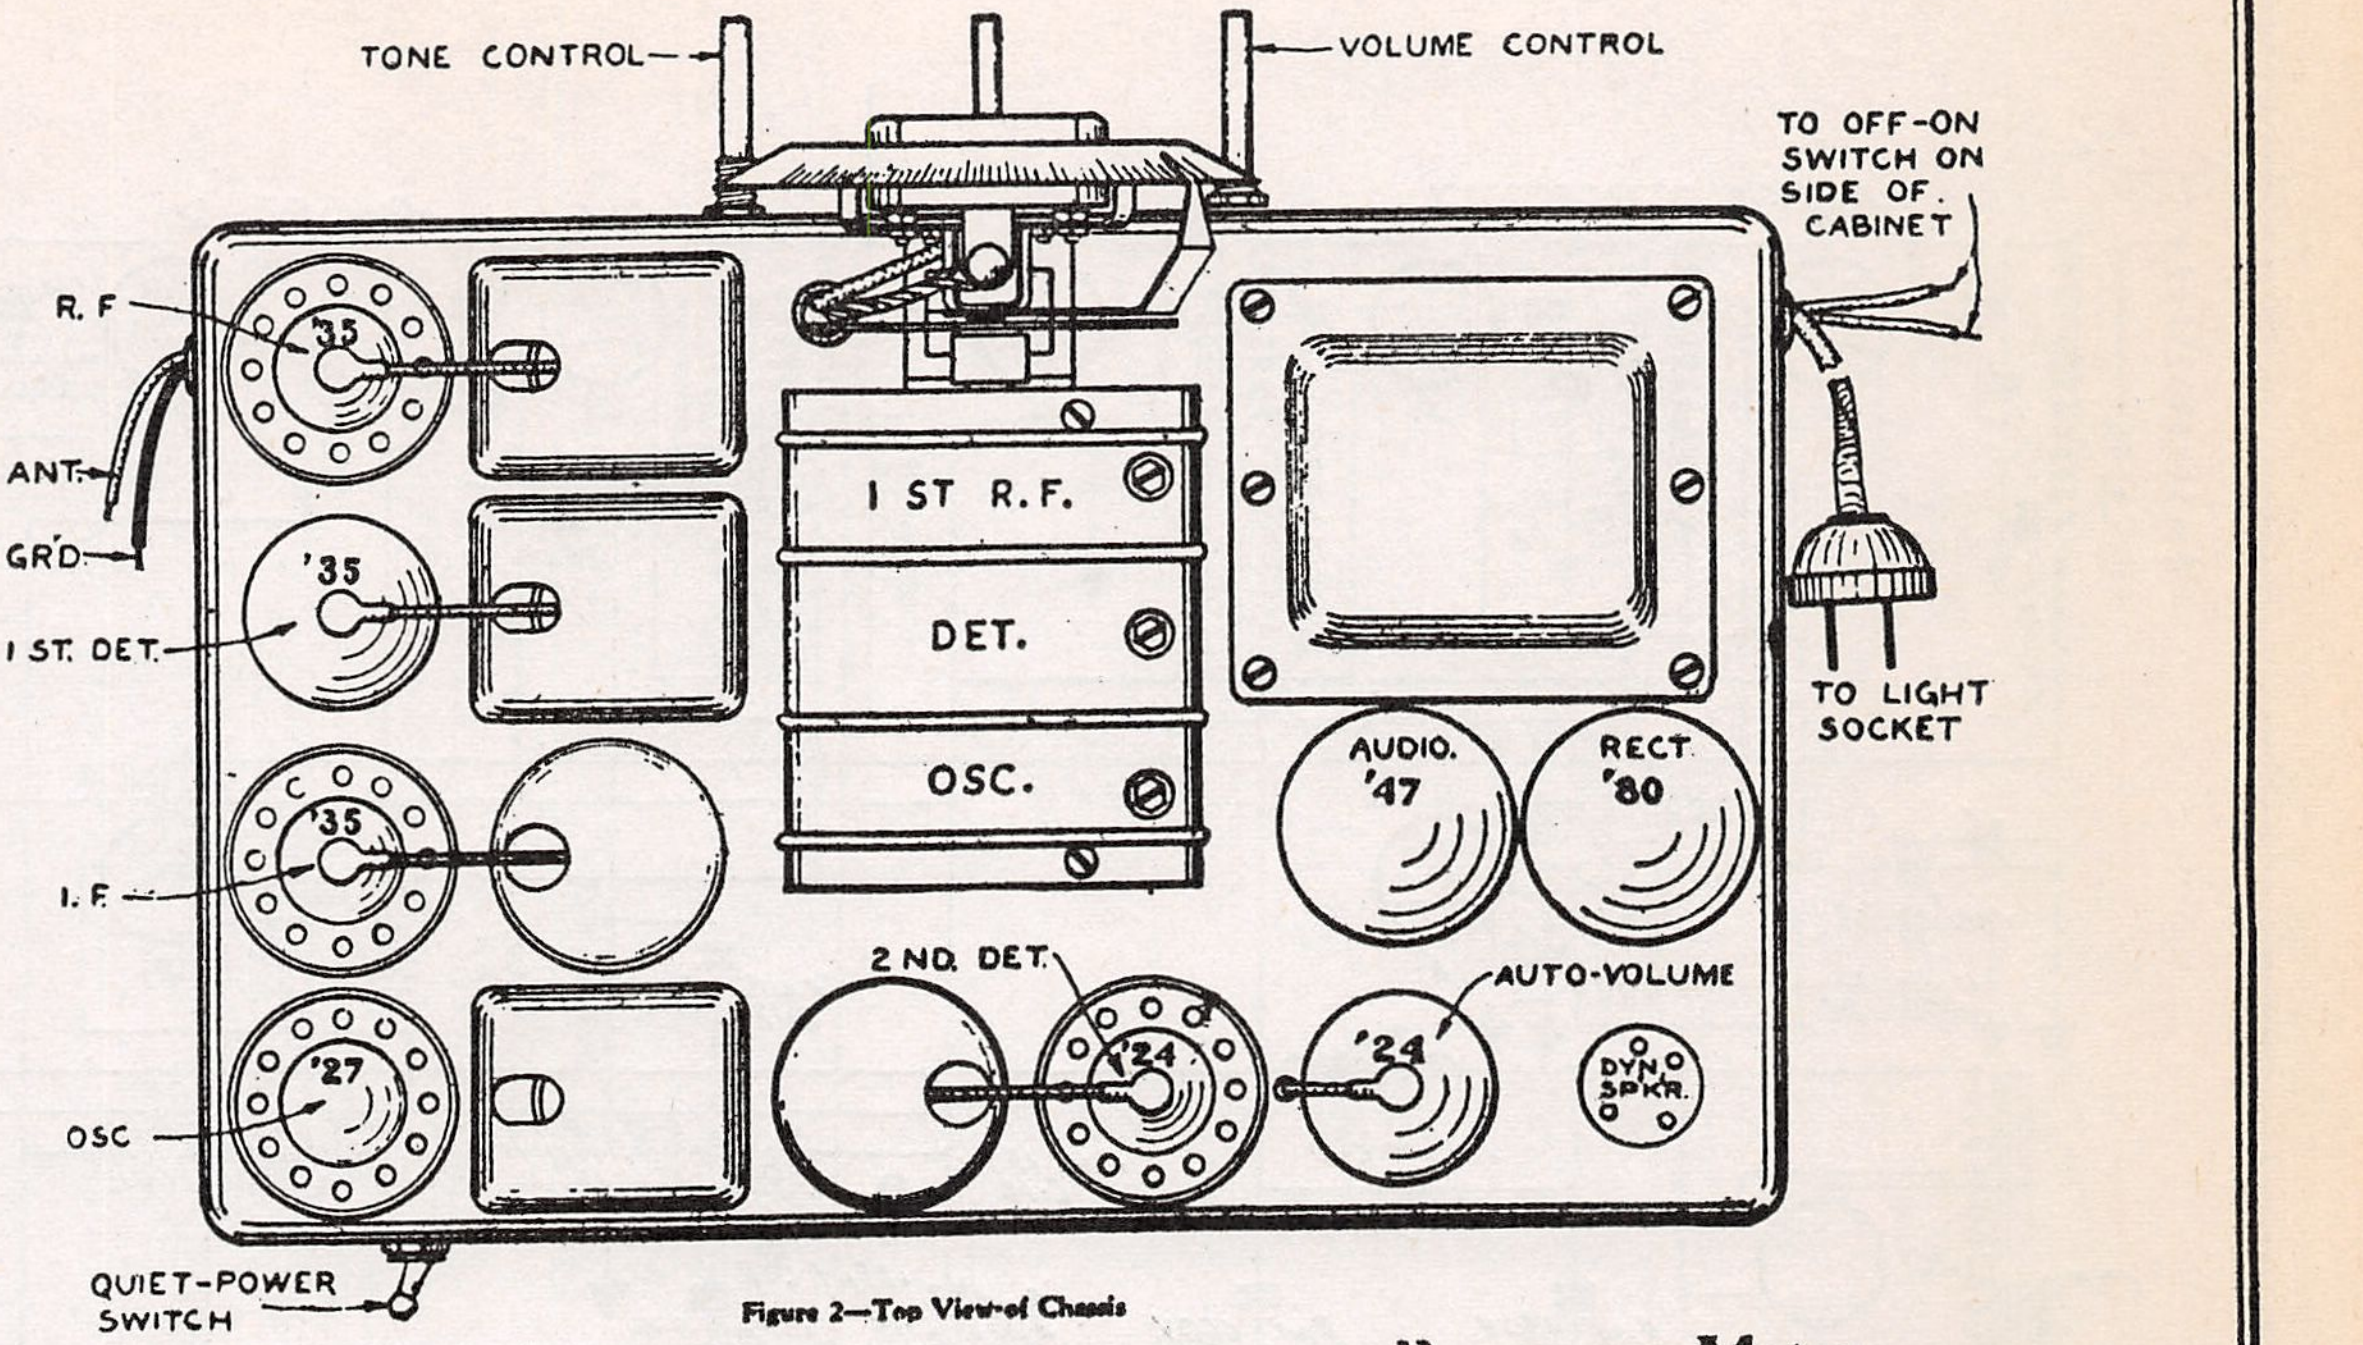

Figure 2—Top View of Chassis

Oscillator

A 227 tube used in this socket that does not oscillate will completely stop any signals from reaching the intermediate frequency amplifier and the chassis will not operate. There is also a slight variation in the characteristics of tubes, and for this reason it is advisable to try a number of tubes in the oscillator position and to use the one which gives the most satisfactory performance.

The oscillator has an adjustable tracking condenser which is adjusted at 600 kilocycles and remains fixed thereafter.

Automatic Volume Control Tube

The automatic volume control tube is equally as important as the oscillator tube. In this chassis a 224 is used. If the A.V.C. tube's characteristics are not exact, it will cause the chassis to lack sensitivity or spoil the tone quality. The tuning meter will not function properly with a poor A.V.C. tube. If the grid circuit of this tube is open the chassis will lose its sensitivity and in some cases will not pass signals. In each installation, therefore, it is advisable to try a number of 224's in the automatic volume control position and use the tube which gives the most satisfactory performance as to control of volume, operation of tuning meter, and tone quality.

Replacing Rubber Drive

You will note that the Vernier tuning drive on this chassis uses a rubber pinion. Under normal operating conditions this rubber will last for a number of years. Should it become worn it can be readily replaced by loosening the set screw of the brass bushing located next to the rubber pinion and pulling out the station selector shaft. Place a new bushing in position, slip the station selector shaft in place and tighten the set screw.

25 Cycle Chassis No. 62-14X

The 25 cycle receivers use power transformer No. P50540 instead of P50539. Two 8.0 mfd. electrolytic condensers No. P80880 are used instead of No. P80873 and No. P80874. The .25 mfd choke condenser C10 is not used in the 25 cycle chassis.

Resonance Meter

This meter is a small milliameter in the plate return of the R. F. tube. When the receiver is turned on, and no signal is tuned in, the meter will indicate the total plate current drawn by the R. F. tube. When a signal is tuned in, the meter will indicate less current, and when tuned to resonance, the greatest swing (or least deflection), of the meter hand will be obtained.

The deflection of the meter hand will vary according to the setting of the manual volume control on this chassis.

Method of Aligning

These chassis will only lose their alignment when they have been subject to extremely rough handling or have been used under abnormal conditions, as for instance, a very hot or very humid location. Under any one of these conditions, the alignment may shift slightly and the chassis should be realigned according to the following procedure.

Tune in a local station of approximately 1400 Kilocycles, being very careful to tune this station in at the exact reasonance point. This may be easily done by carefully adjusting for maximum deflection of the tuning meter. Then reduce the volume to the desired level. Turn to Figure 2 and note the position of the first radio frequency trimmer adjustment. Slowly turn the trimmer to the right or left until the signal is at maximum intensity. Proceed to adjust the detector trimmer in the same manner. In most instances these two adjustments will align the chassis perfectly. If the receiver still lacks sensitivity after the first RF and detector trimmers have been adjusted, then the oscillator trimmer may be checked by turning the adjusting screw not more than a quarter of a turn to the right or left of its present adjustment. When aligning any of these receivers be sure that the condenser shield is firmly in place and that you are using good tubes in the chassis. This is particularly true in case of the oscillator and automatic volume control tube.

The R. F., 1st detector, oscillator and 1st I. F. tubes have one side of their heater circuit grounded.

The voice coil and speaker frame are grounded to prevent any "feedback" of a 175 K. C. frequency which might enter the speaker.

MODEL 62-11,62-14,62-19,
62-27
Schematic (2nd Type
Schematic-Data

MONTGOMERY-WARD & CO.

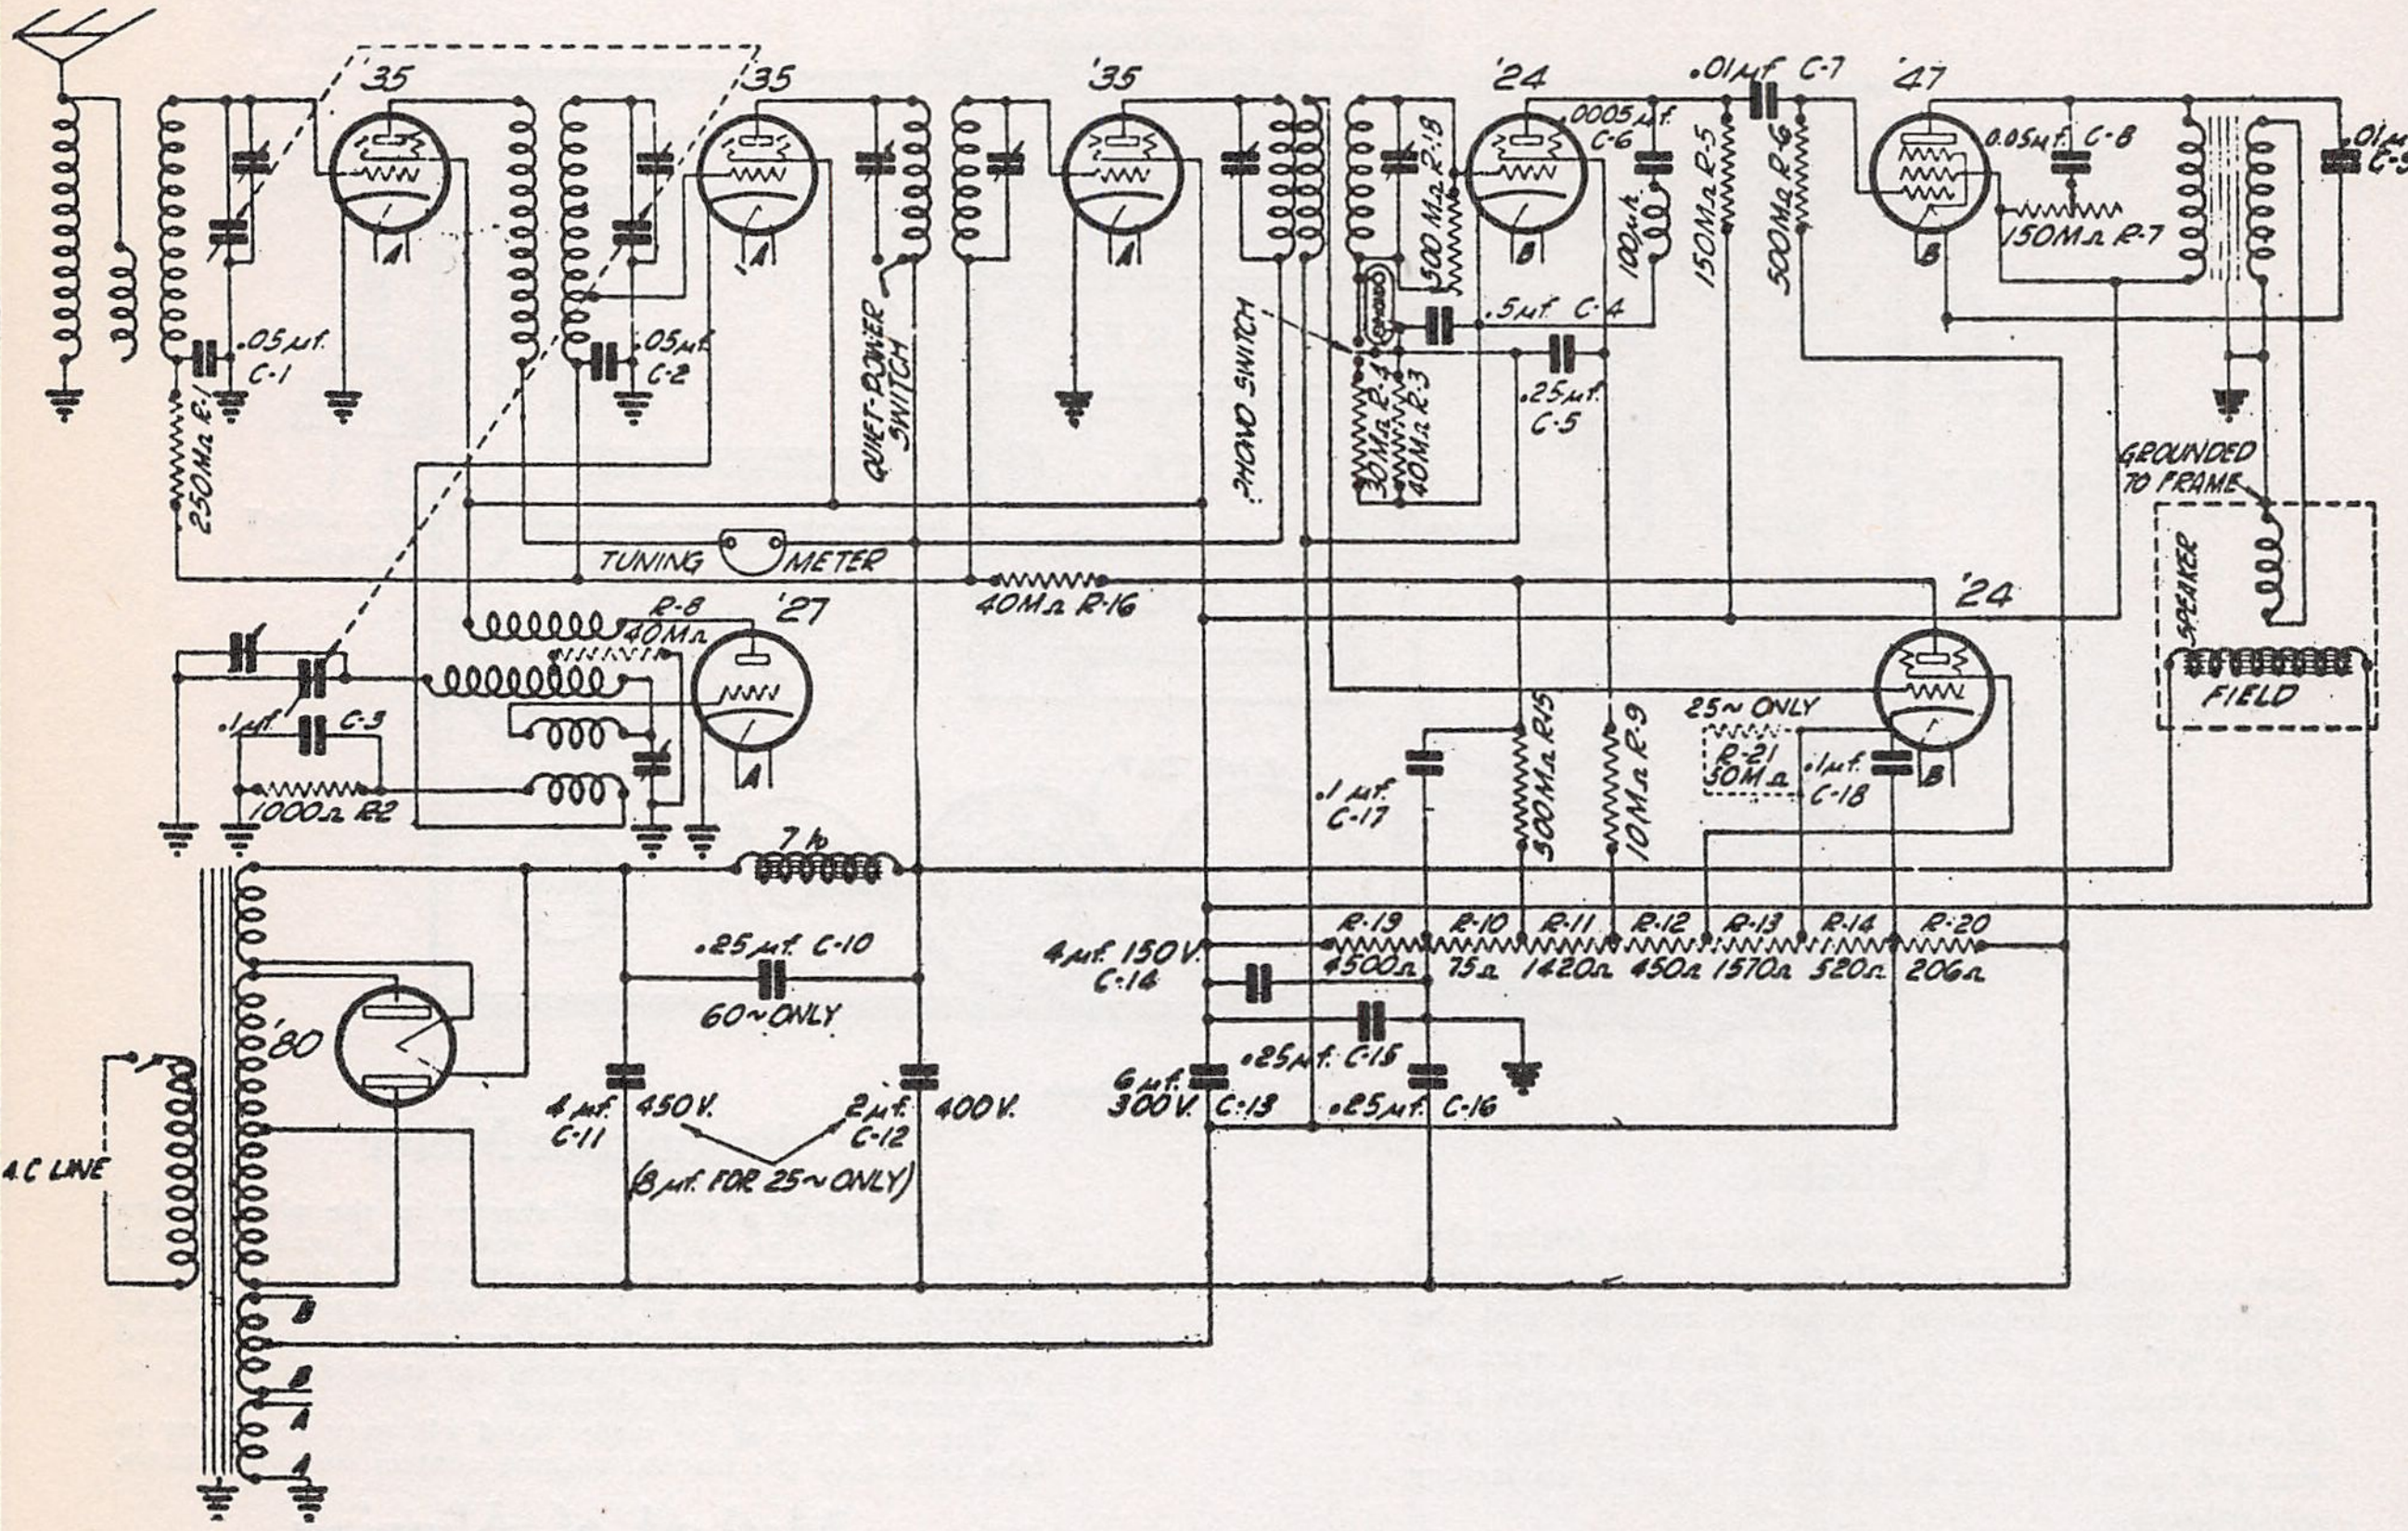
'35
'35
'35
'24
'27
'24
'47
'80
.05 µf. C-1
250 MΩ R-1
.05 µf. C-2
QUIET-POWER SWITCH
PHONO SWITCH
TUNING METER
40 MΩ R-16
R-8 40 MΩ
.1 µf. C-3
1000 Ω R2
500 MΩ R-18
.0005 µf. C-6
100 µh.
.5 µf. C-4
.25 µf. C-5
30 MΩ R-4
40 MΩ R-3
.01 µf. C-7
150 MΩ R-5
500 MΩ R-6
0.05 µf. C-8
150 MΩ R-7
.01 µf. C-9
GROUNDED TO FRAME
SPEAKER
FIELD
.1 µf. C-17
500 MΩ R15
10 MΩ R-9
25~ ONLY
R-21 30 MΩ
.1 µf. C-18
R-19 4500 Ω
R-10 75 Ω
R-11 1420 Ω
R-12 450 Ω
R-13 1570 Ω
R-14 520 Ω
R-20 206 Ω
7 h.
.25 µf. C-10
60~ ONLY
4 µf. C-11 450 V.
2 µf. C-12 400 V.
(8 µf. FOR 25~ ONLY)
4 µf. 150 V. C-14
6 µf. 300 V. C-13
.25 µf. C-15
.25 µf. C-16
A.C LINE
A
B

The automatic volume control system in this chassis has been changed and therefore some of the parts are not as listed and described in the service manual. The parts which differ are listed below and the revised automatic volume control circuit is shown in the schematic wiring diagram on the opposite side of this sheet. No other changes in the circuit or in the mechanical arrangement of the chassis have been made.

A chassis in which the automatic volume control system has been changed may be identified by **a green paint mark on the left rear corner of the chassis** near the speaker socket, or by two grid leaks brought out of the top of the 2nd I.F. transformer assembly. This chassis formerly had but one lead brought out of the top of the 2nd I.F. transformer assembly. The resonance meter furnishes a further means of identification as the deflection of the meter hand will not vary when the setting of the manual volume control is changed. This is due to the manual volume control having no effect on the action of the automatic volume control tube The manual volume control is connected in parallel in the grid circuit of the 2nd detector tube and is used to vary the resistance in that circuit and, in so doing, control the input to that tube.

The following parts are for use only in a chassis having the revised automatic volume control system and are not interchangeable with those listed in the service manual repair parts list.

When ordering parts for replacement, be sure the correct part number is given.

Part No.	Name	Cost Price
P-90988-A	Candohm Resistor	$0.38
P-90988	500,000-ohm Volume Control........	.30
P-1446	2nd I.F. Transformer Assembly....	.70
P-70719	Shielded Volume Control Wire Assembly	.06
P-1445	R.F. Interstage Coil Assembly.....	.37
	(The 40,000-ohm Resistor, R16, is a part of this assembly. The 500,000-ohm Resistor, R15, is a part of the R.F. Interstage Coil Assembly (Part No. 1397) listed in the service manual.)	

MODEL 62-070
Princess
62-060
Challanger Jr.
(1800)

MONTGOMERY-WARD & CO.

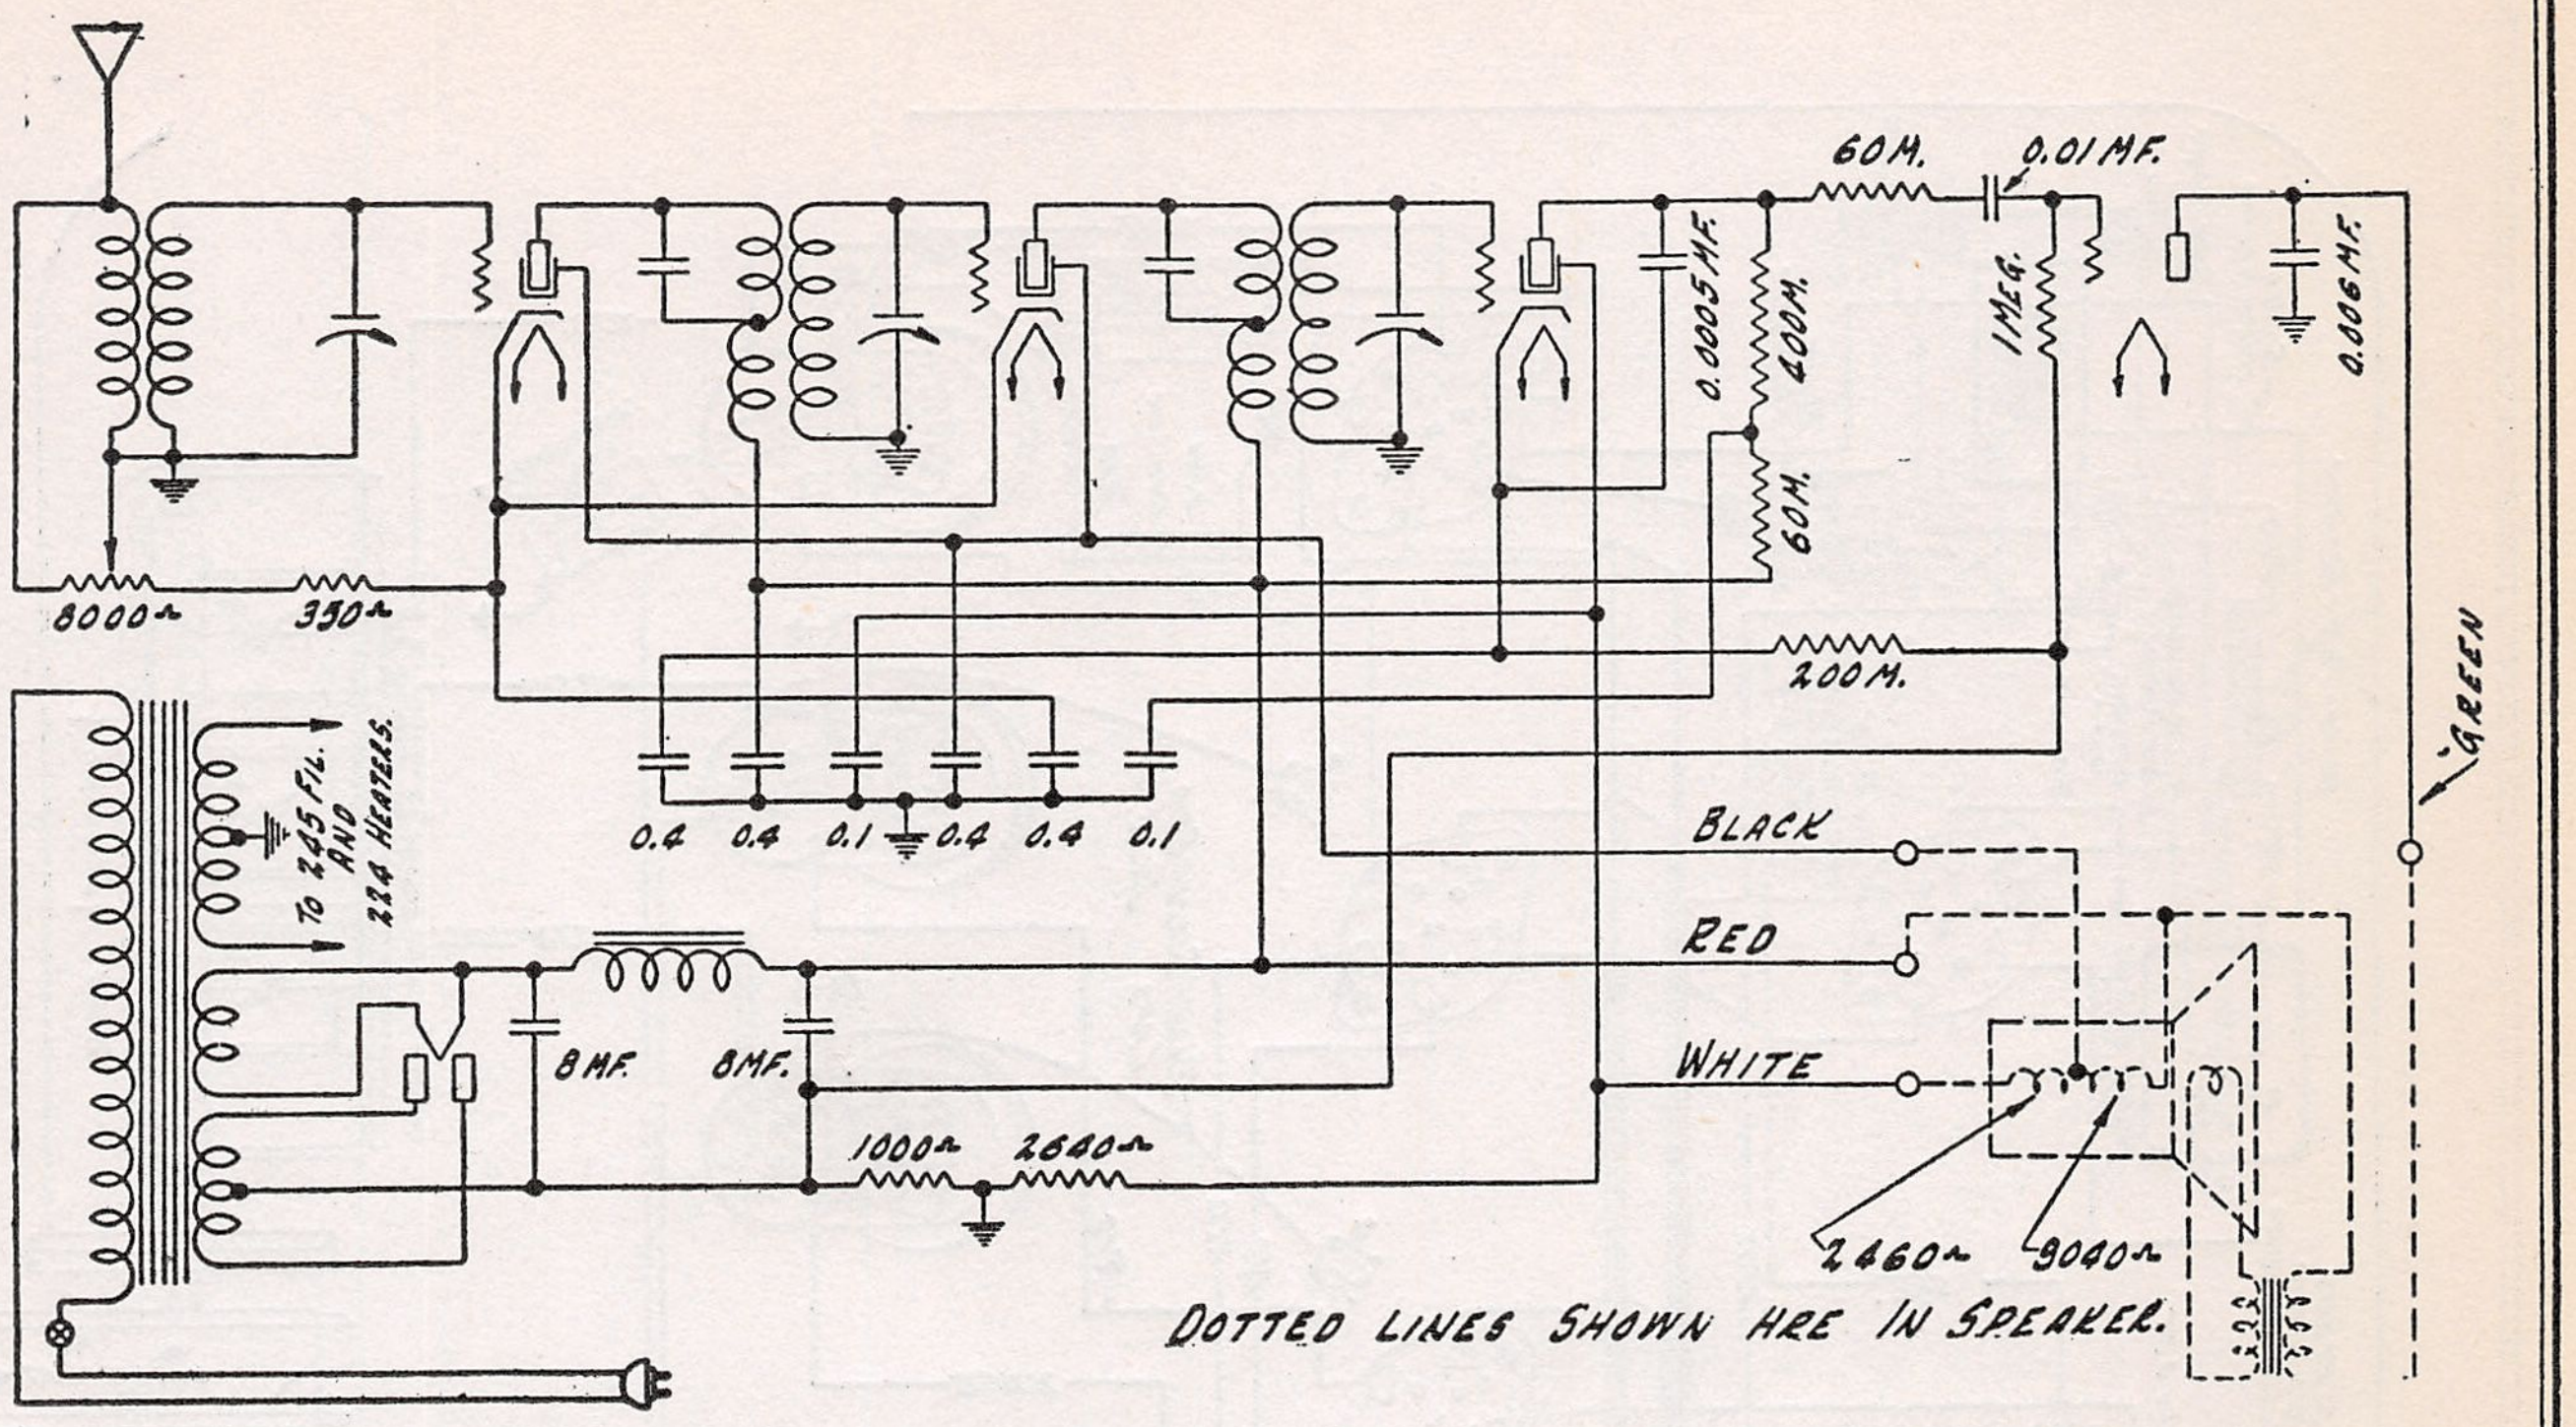
60M.
0.01MF.
0.0005MF.
400M.
1MEG.
0.006MF.
60M.
8000Ω
350Ω
200M.
0.4
0.4
0.1
0.4
0.4
0.1
TO 245 FIL. AND 224 HEATERS.
GREEN
BLACK
RED
WHITE
8MF.
8MF.
1000Ω
2640Ω
2460Ω
9040Ω
DOTTED LINES SHOWN HRE IN SPEAKER.

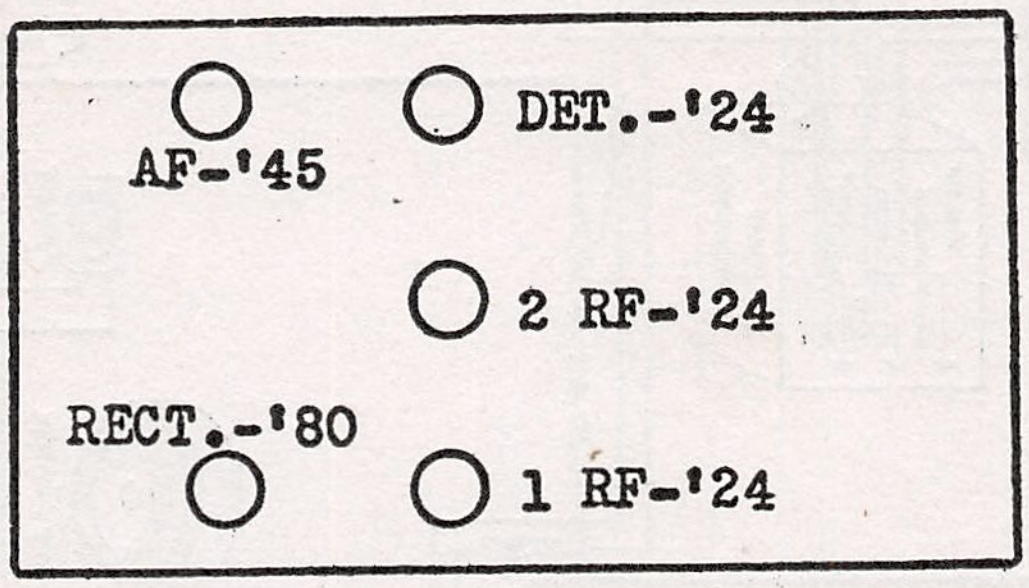
AF-'45
DET.-'24
2 RF-'24
RECT.-'80
1 RF-'24

NO. 26 W CHASSIS—VOLTAGES AT SOCKETS—VOLUME CONTROL AT MAXIMUM—LINE VOLTAGE, 115—PLUG IN SOCKET OF RECEIVER—TUBE IN TEST SET

Type of Tube	Position Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
224	1	1st Radio	2.2	245	2.5	80	.6	2.5	2.9	5.1
224	2	2nd Radio	2.2	245	2.5	80	.6	2.5	2.9	5.1
224	3	Detector	2.2	130	3.	40	.1	3.	.25	.4
245	4	Audio	2.35	245	50.				28.	31.
280	5	Rectifier	4.6						25. Per Plate	

General Description

The Model 26W chassis used in both the Princess and Challenger, Jr., is similar in many respects to the 32W chassis used in the Troubadour. The operating voltages, however, will be found to be different, and also this chassis does not use the band pass filter input circuit, as used in the 32W. Only one 245 tube is used in this chassis, and only one stage of resistance coupled audio.

The speaker is of a new type using a center tap field. The entire field winding being used as a shunt resistor. The center tap supplies the screen grid voltage to the radio frequency tubes. Only two electrolytic filter condensers are used, and a number of the small bypass condensers are eliminated, as shown in the schematic diagram, Figure I.

The general service procedure as described for the Model 32 W chassis can be used in servicing the 26W chassis.

AIRLINE 5 TUBE S.G.

"Princess" No 62-070
and
"Challenger Jr." No 62-060
(Cat. No 1800)

60 ∿ CHASSIS No 26-W
25 ∿ " No 26-WX

NOTE: For 25 Cycle Sets use No. 2281 Power Transformer instead of No. 2251.

MODEL 500
Dictator
10000
Serenader
Chassis

MONTGOMERY-WARD & CO.

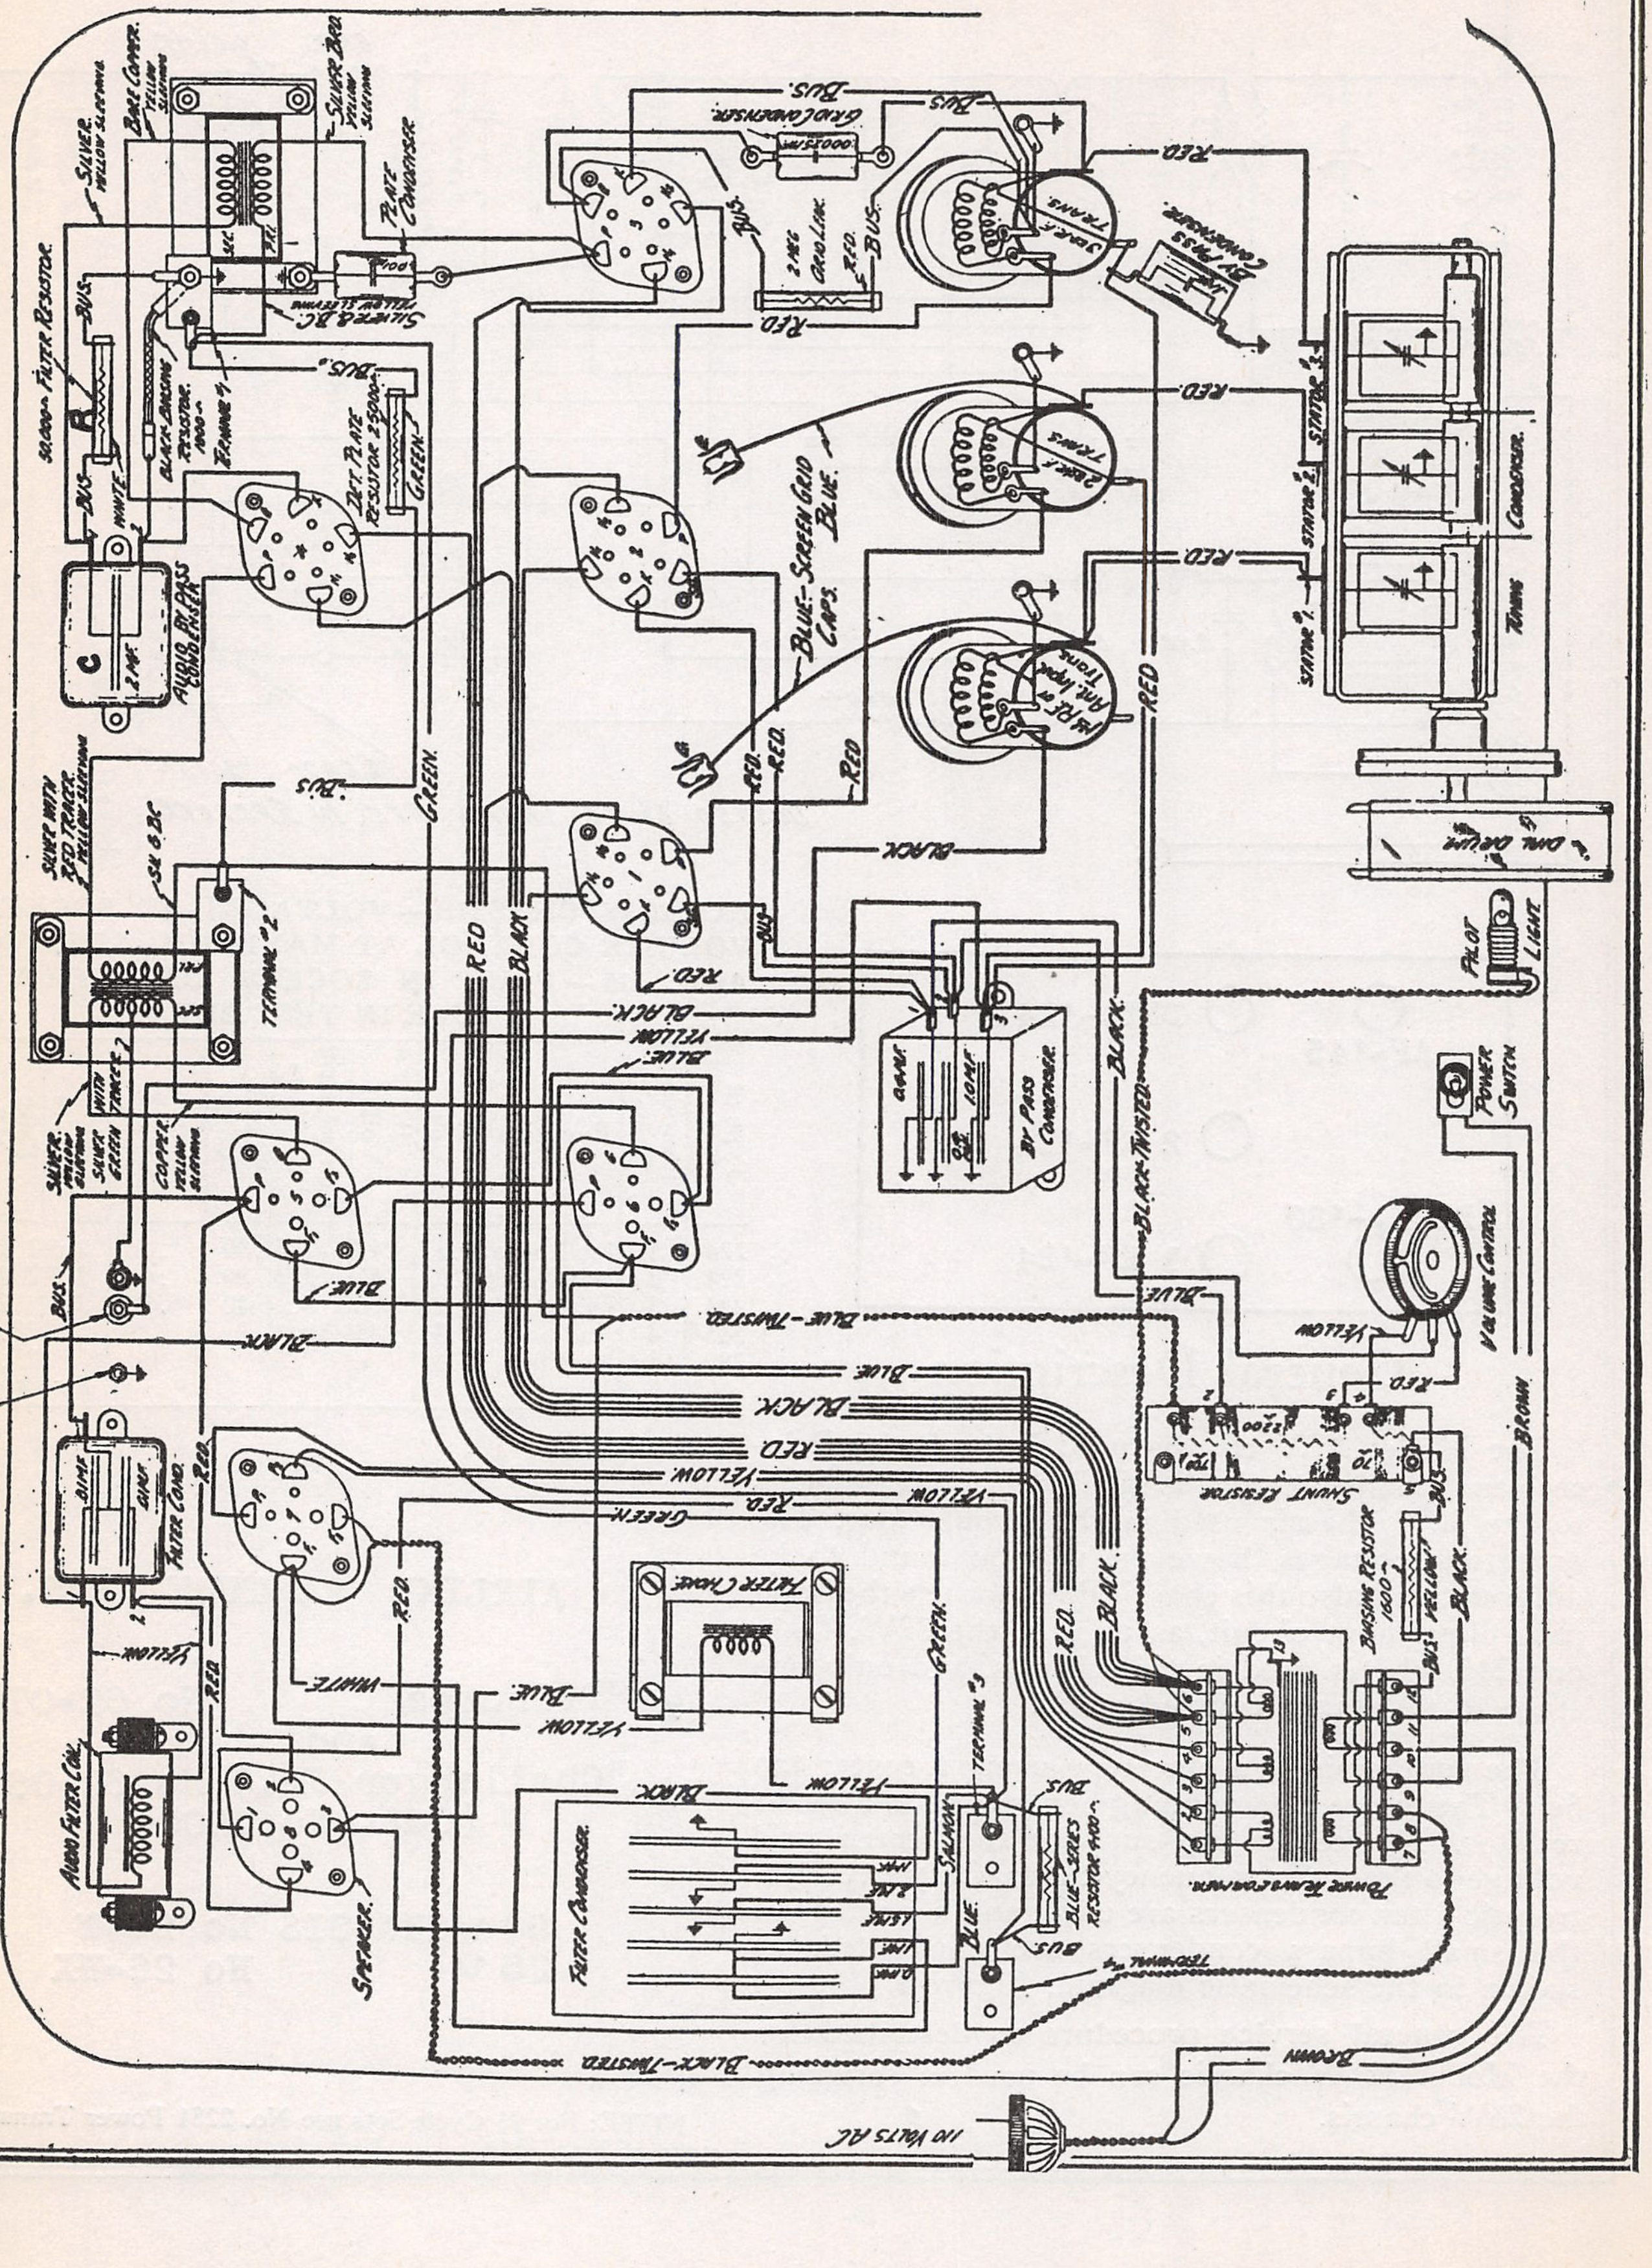
ANTENNA
GROUND
BUS
SILVER YELLOW SLEEVING
BARE COPPER YELLOW SLEEVING
SILVER BRD. YELLOW SLEEVING
PLATE CONDENSER
SILVER & BC YELLOW SLEEVING
50,000Ω FILTER RESISTOR
BLACK BIASING RESISTOR 1400Ω
TERMINAL #1
DET. PLATE RESISTOR 25000Ω
GREEN
WHITE
AUDIO BY PASS COND. FILTER
2 MF.
GRID CONDENSER
.0005 MF
2 MEG. GRID LEAK
RED
DET. R.F. TRANS.
BY PASS CONDENSER
STATOR 1
STATOR 2
STATOR 3
TUNING CONDENSER
2nd R.F. TRANS.
BLUE-SCREEN GRID CAPS
1st R.F. or Ant. Input Trans.
DIAL DRUM
PILOT LIGHT
SILVER WITH RED TRACER YELLOW SLEEVING
TERMINAL #2
BLACK
YELLOW
BLUE
BY PASS CONDENSER
BLACK-TWISTED
POWER SWITCH
VOLUME CONTROL
BLUE-TWISTED
COPPER YELLOW SLEEVING
SILVER GREEN
FILTER COND.
SHUNT RESISTOR
BIASING RESISTOR 1600Ω
BROWN
FILTER CHOKE
POWER TRANSFORMER
AUDIO FILTER COIL
SPEAKER
FILTER CONDENSER
TERMINAL #3
TERMINAL #4
SALMON
BLUE-SERIES RESISTOR 400Ω
110 VOLTS AC

MODEL 500
Dictator
10000
Serenader
Schematic
Voltage

MONTGOMERY-WARD & CO.

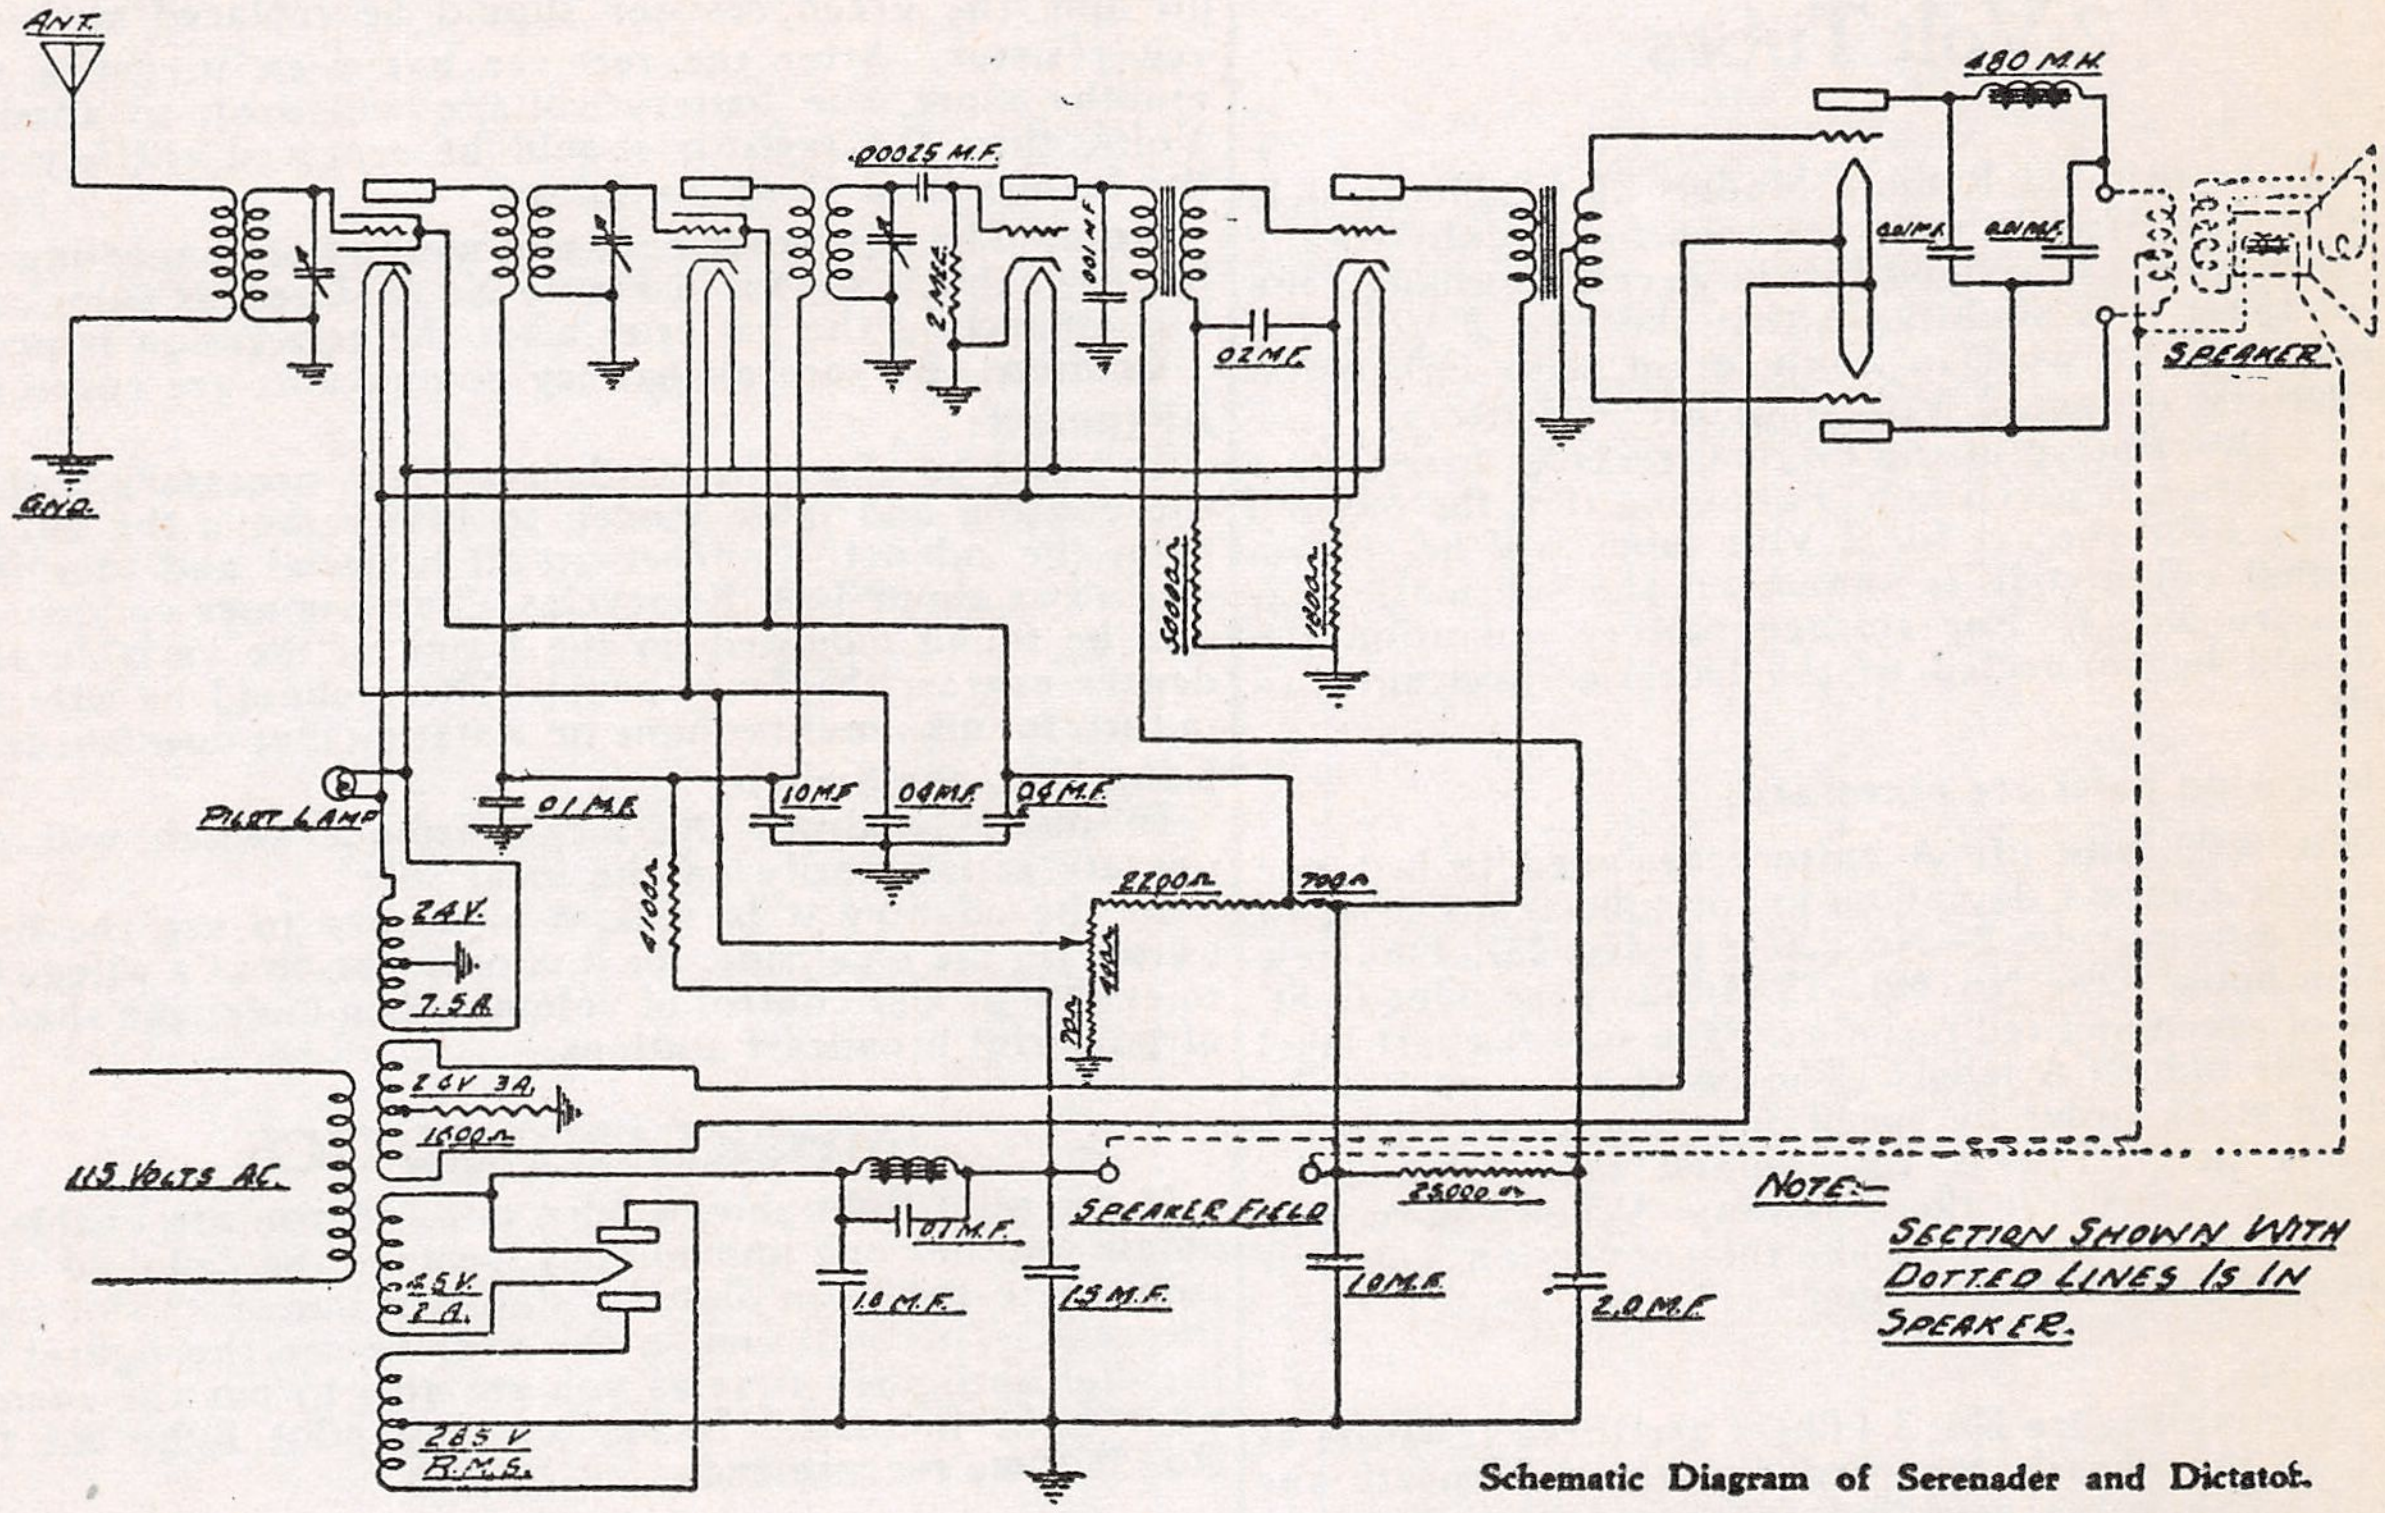
ANT.
GND.
.00025 M.F.
2 MEG.
.001 M.F.
.02 M.F.
5000Ω
1800Ω
480 M.H.
.01 M.F.
.01 M.F.
SPEAKER
PILOT LAMP
.01 M.F.
.10 M.F.
.04 M.F.
.04 M.F.
4100Ω
2200Ω
700Ω
2.4 V.
7.5 A.
2.6 V 3 A.
1600Ω
115 VOLTS AC.
2.5 V.
2 A.
285 V
R.M.S.
.01 M.F.
1.0 M.F.
1.5 M.F.
SPEAKER FIELD
25000Ω
1.0 M.F.
2.0 M.F.
NOTE:—
SECTION SHOWN WITH DOTTED LINES IS IN SPEAKER.

Schematic Diagram of Serenader and Dictator.

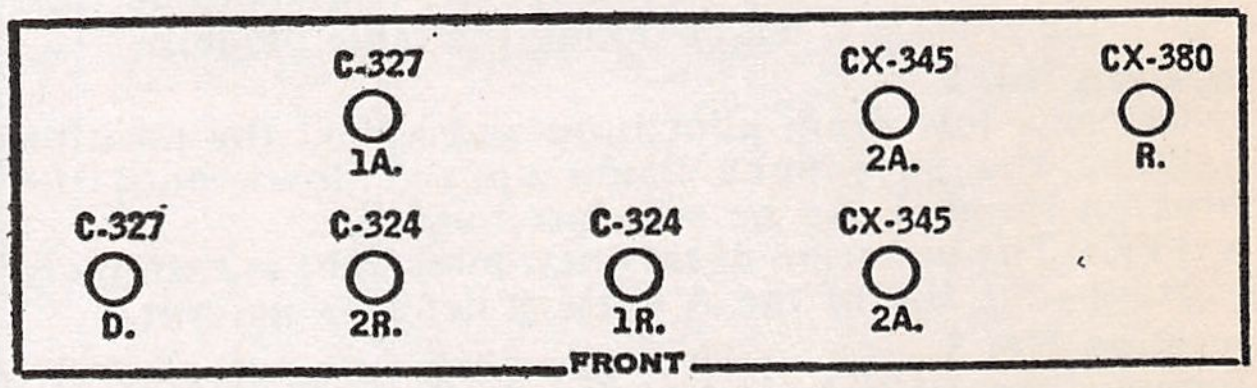
C-327
1A.
CX-345
2A.
CX-380
R.
C-327
D.
C-324
2R.
C-324
1R.
CX-345
2A.
FRONT

The Serenader and Dictator models use identically the same chassis. The schematic diagram is given in Picture 1. Comparing this diagram with the schematic diagram of the 2800 chassis (Balboa and De Sota) you will note generally the two chassis are the same. Therefore, the service instructions given for the 2800 chassis can be used in servicing the Dictator and Serenader models, with the following changes.

The Serenader and Dictator chassis use a high frequency cut-off filter which is shown in the schematic diagram as the 480 M.H. choke and the two .01 mfd. fixed condensers while the 2800 chassis uses a regulation tone control. In case of a short in either of the two .01 mfd. condensers, no signals will reach the loud speaker. If the .01 mfd. condensers are open the filter will fail to function properly and the tone of the chassis will be of a high pitch.

Another change from the 2800 chassis will be noted in the cathode connections of the first audio stage. A .02 mfd. condenser, a 50,000 ohm resistor and an 1800 ohm resistor are connected in the cathode circuit of this stage. Any defects in the resistor or bypass condenser will give abnormal grid voltage on the first audio tube.

The Serenader and Dictator chassis use an antenna and ground lead wire while the antenna and ground binding posts are provided on the 2800 chassis.

TUBE NO. IN ORDER TESTED ①	TYPE OF TUBE ②	POSITION OF TUBE IN SET ③	METER READINGS WITH JEWELL TEST PLUG IN SOCKET OF SET									
			OPERATING VOLTAGES					MILLIAMPERES				
			④ FILAMENT OR HEATER	⑤ PLATE OR ANODE	⑥ CONTROL GRID—SPACE GD +	⑦ NORMAL GRID—SCREEN GD +	⑧ CATHODE TO HEATER	⑨ SCREEN OR L. H. '80 PLATE	⑩ PLATE R. H. '80 PLATE	⑪ TUBE TEST	⑫ PLATE CURRENT CHANGE	⑬
1	224	1 R.F.	2.36	173	2.72	86	2.72	.87	3.0			
2	224	2. R.F	2.31	173	2.72	86	2.72	.21	3.0			
3	227	Dot.	2.28	38	-	0	-	-	2.8			
4	227	1 A.F.	2.28	100	-	6.1	-	-	3.25			
5	245	2 A.F.	2.29	169	-	38	-	-	11.3			
6	245	2 A.F.	2.29	169	-	38	-	-	11.3			
7	280	Rect.	4.61	-	-	-	-	34.5	34.5			

MODEL 921,923,924,839
(Radiola 21,22)
Conversion Data

MONTGOMERY-WARD & CO.

Method of Converting a 6 Volt Receiver for Using the 2 Volt Tubes

ALL of the original Radiola Models 21 (Table Model) and 22 (Console Model) were designed for 6 Volt storage battery operation. It is possible, however, to change the wiring of these sets slightly so that the new 2 Volt dry cell tubes may be used in conjunction with either the Aircell battery or our 2 Volt long life A battery.

Description of the original receiver for storage battery operation is given first. Following this, the method of changing over the set for 2 Volt tubes will be shown. The original color code is shown on the schematic diagram, Figure No. 1. For storage battery operation the cable should be connected to the batteries according to this code.

The following parts are necessary:

One No. 6000 long life A battery designed to last one year at three hours a day. One kit of tubes consisting of 2—No. 232 screen grids; 2—No. 230's; 1—No. 231. One new instruction book. One No. 5512-75 Milliampere pilot light One pair of green and red resistors. One socket chart label to stick over old RCA labels. The last four items can be ordered on stock order by specifying "one conversion kit for Radiola Set." The A battery and tubes should be ordered on stock order in the usual way. When you receive all of the necessary parts to make the conversion, you will use them in the following manner:

Operation No. 1
First examine Figure No. 2. There are three resistors at the back of the chassis mounted directly underneath the sub-panel. The wires attached to these three resistors must not be removed but the three resistors should be shorted out by soldering short pieces of wire across as shown on the dotted lines in Figure No. 2. On the console models it is not necessary to remove the chassis to do this. Remove the chassis when changing the table model.

Operation No. 2
Insert new low drain pilot light and adjust the position by sliding the pilot light clamp up and down until the figures on the dial can be seen prominently.

NOTE: The insertion of this new pilot light is extremely important—the life of the A battery depends upon it.

Operation No. 3
Remove the Radiola instruction book, red service card and pilot light. Discard them.

Operation No. 4
Remove the battery tag from the cable and destroy it.

Operation No. 5
Connect one end of the green (2.2 Ohms) resistor to the end of the yellow positive A battery lead. This is important.

Operation No. 6
Insert new instruction books and paste new tube chart label over RCA tube position chart, and advertising sticker. This label is designed to cover the tube replacement label and the socket chart. Don't cover up the license notice.

The tube chart indicates the position of the new tubes. 232's—R.F. stages—230's—1st Audio and Detector—231—last audio.

The red resistor is given to the customer in an envelope. It contains a small red label tied at one end and instructing the customer how to use it, which is as follows:

Over a period of time the A battery voltage will drop. Its initial voltage is slightly over 3 Volts. The green resistor drops this 3 Volts down to 2 Volts for the tubes. After the set has been used for a few months the battery voltage will drop to about 2½ Volts, so it is necessary to use a smaller resistor on the battery to give the tubes 2 Volts. When the set begins to lose volume and the tubes go dim, the green resistor should be replaced with the red resistor. After the receiver has been in use a few months more, the battery voltage will drop to about 2 Volts, then the resistor should be removed entirely and the battery used alone until dead.

Note: The new color code and method of connecting the battery cable is shown in Figure No. 3. Use this color code for connecting the batteries after the conversion is made.

Caution: Be sure all battery connections are correct.

Alignment:

In order to align the condensers, it is necessary both in the console and table model, to first remove the chassis from the cabinet. Connect up all batteries and tune in a station at about 1400 Kilocycles. The trimmer condensers will be found mounted on the frame of the variable condenser nearest the front panel. These should be adjusted in turn for maximum volume on a station that does not fade.

Long Distance Switch:

In many localities the local distance switch will not operate satisfactorily on the local side.

In the country it is seldom necessary to use the local switch on the local side, for it is only put on as a safeguard to enable proper control of volume when under the shadow of powerful broadcast stations.

IMPORTANT NOTICE

If the pilot light should burn out and you are unable to obtain another one immediately, remove the celluloid strip from the escutcheon plate by sliding it out of its slot from the rear. This will enable the user to see the figures on the dial until such time as you are able to put the correct pilot light in place. **Never use any pilot light but the No. 5512 we recommend.**

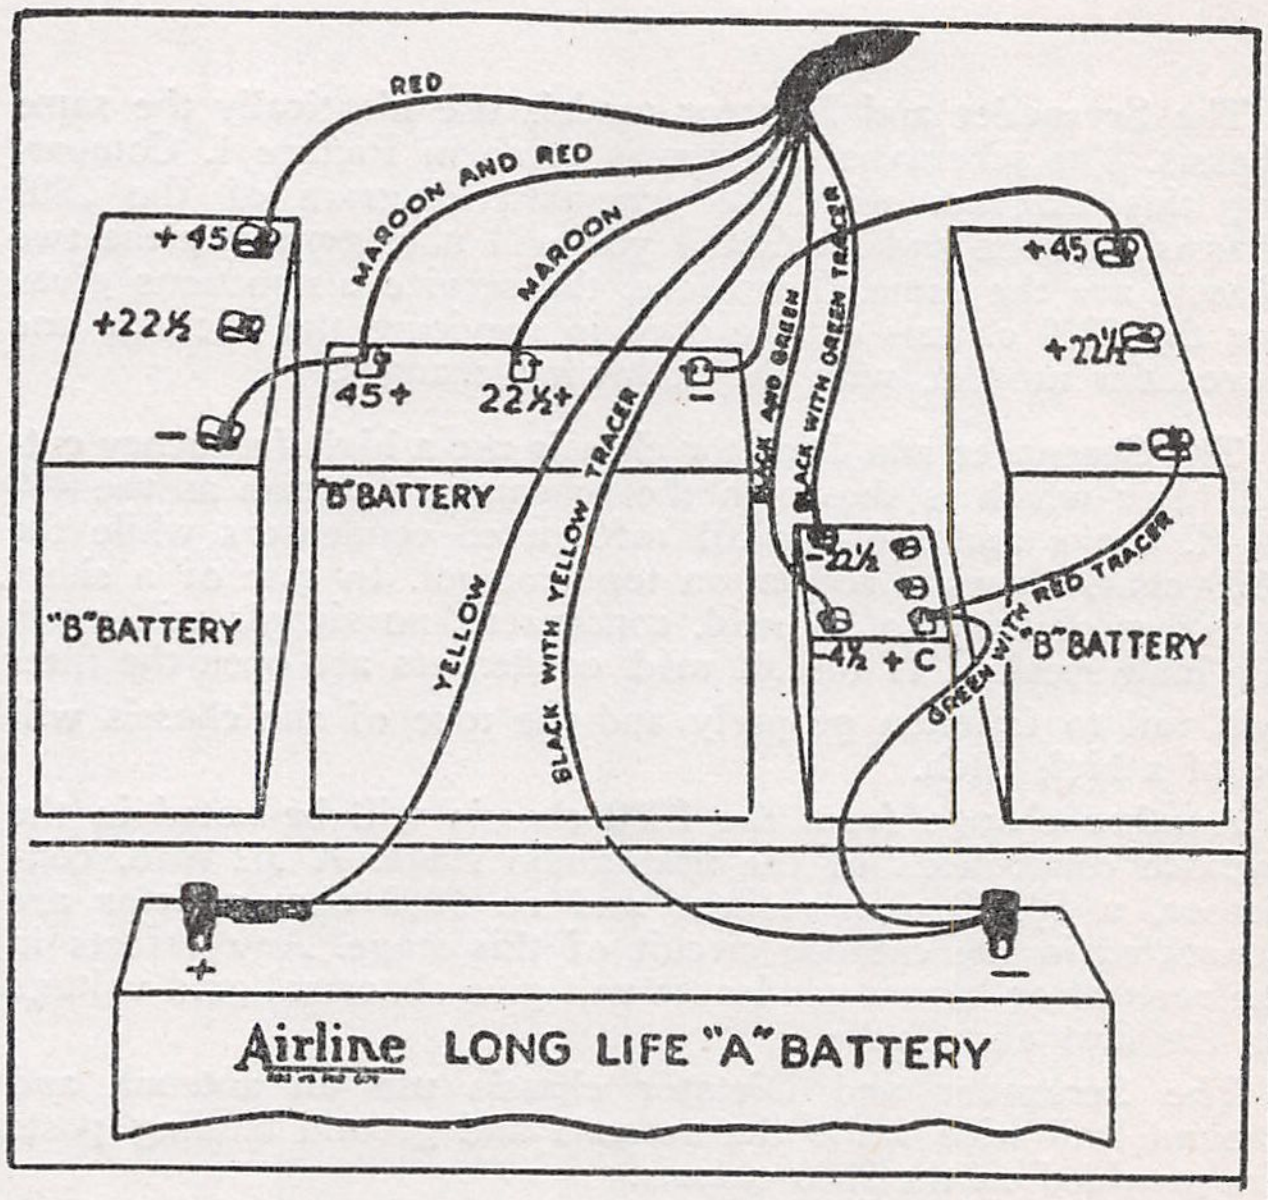

MONTGOMERY-WARD & CO.

MODEL 921,923,924,839
(Radiola 21,22)
Schematic-Data

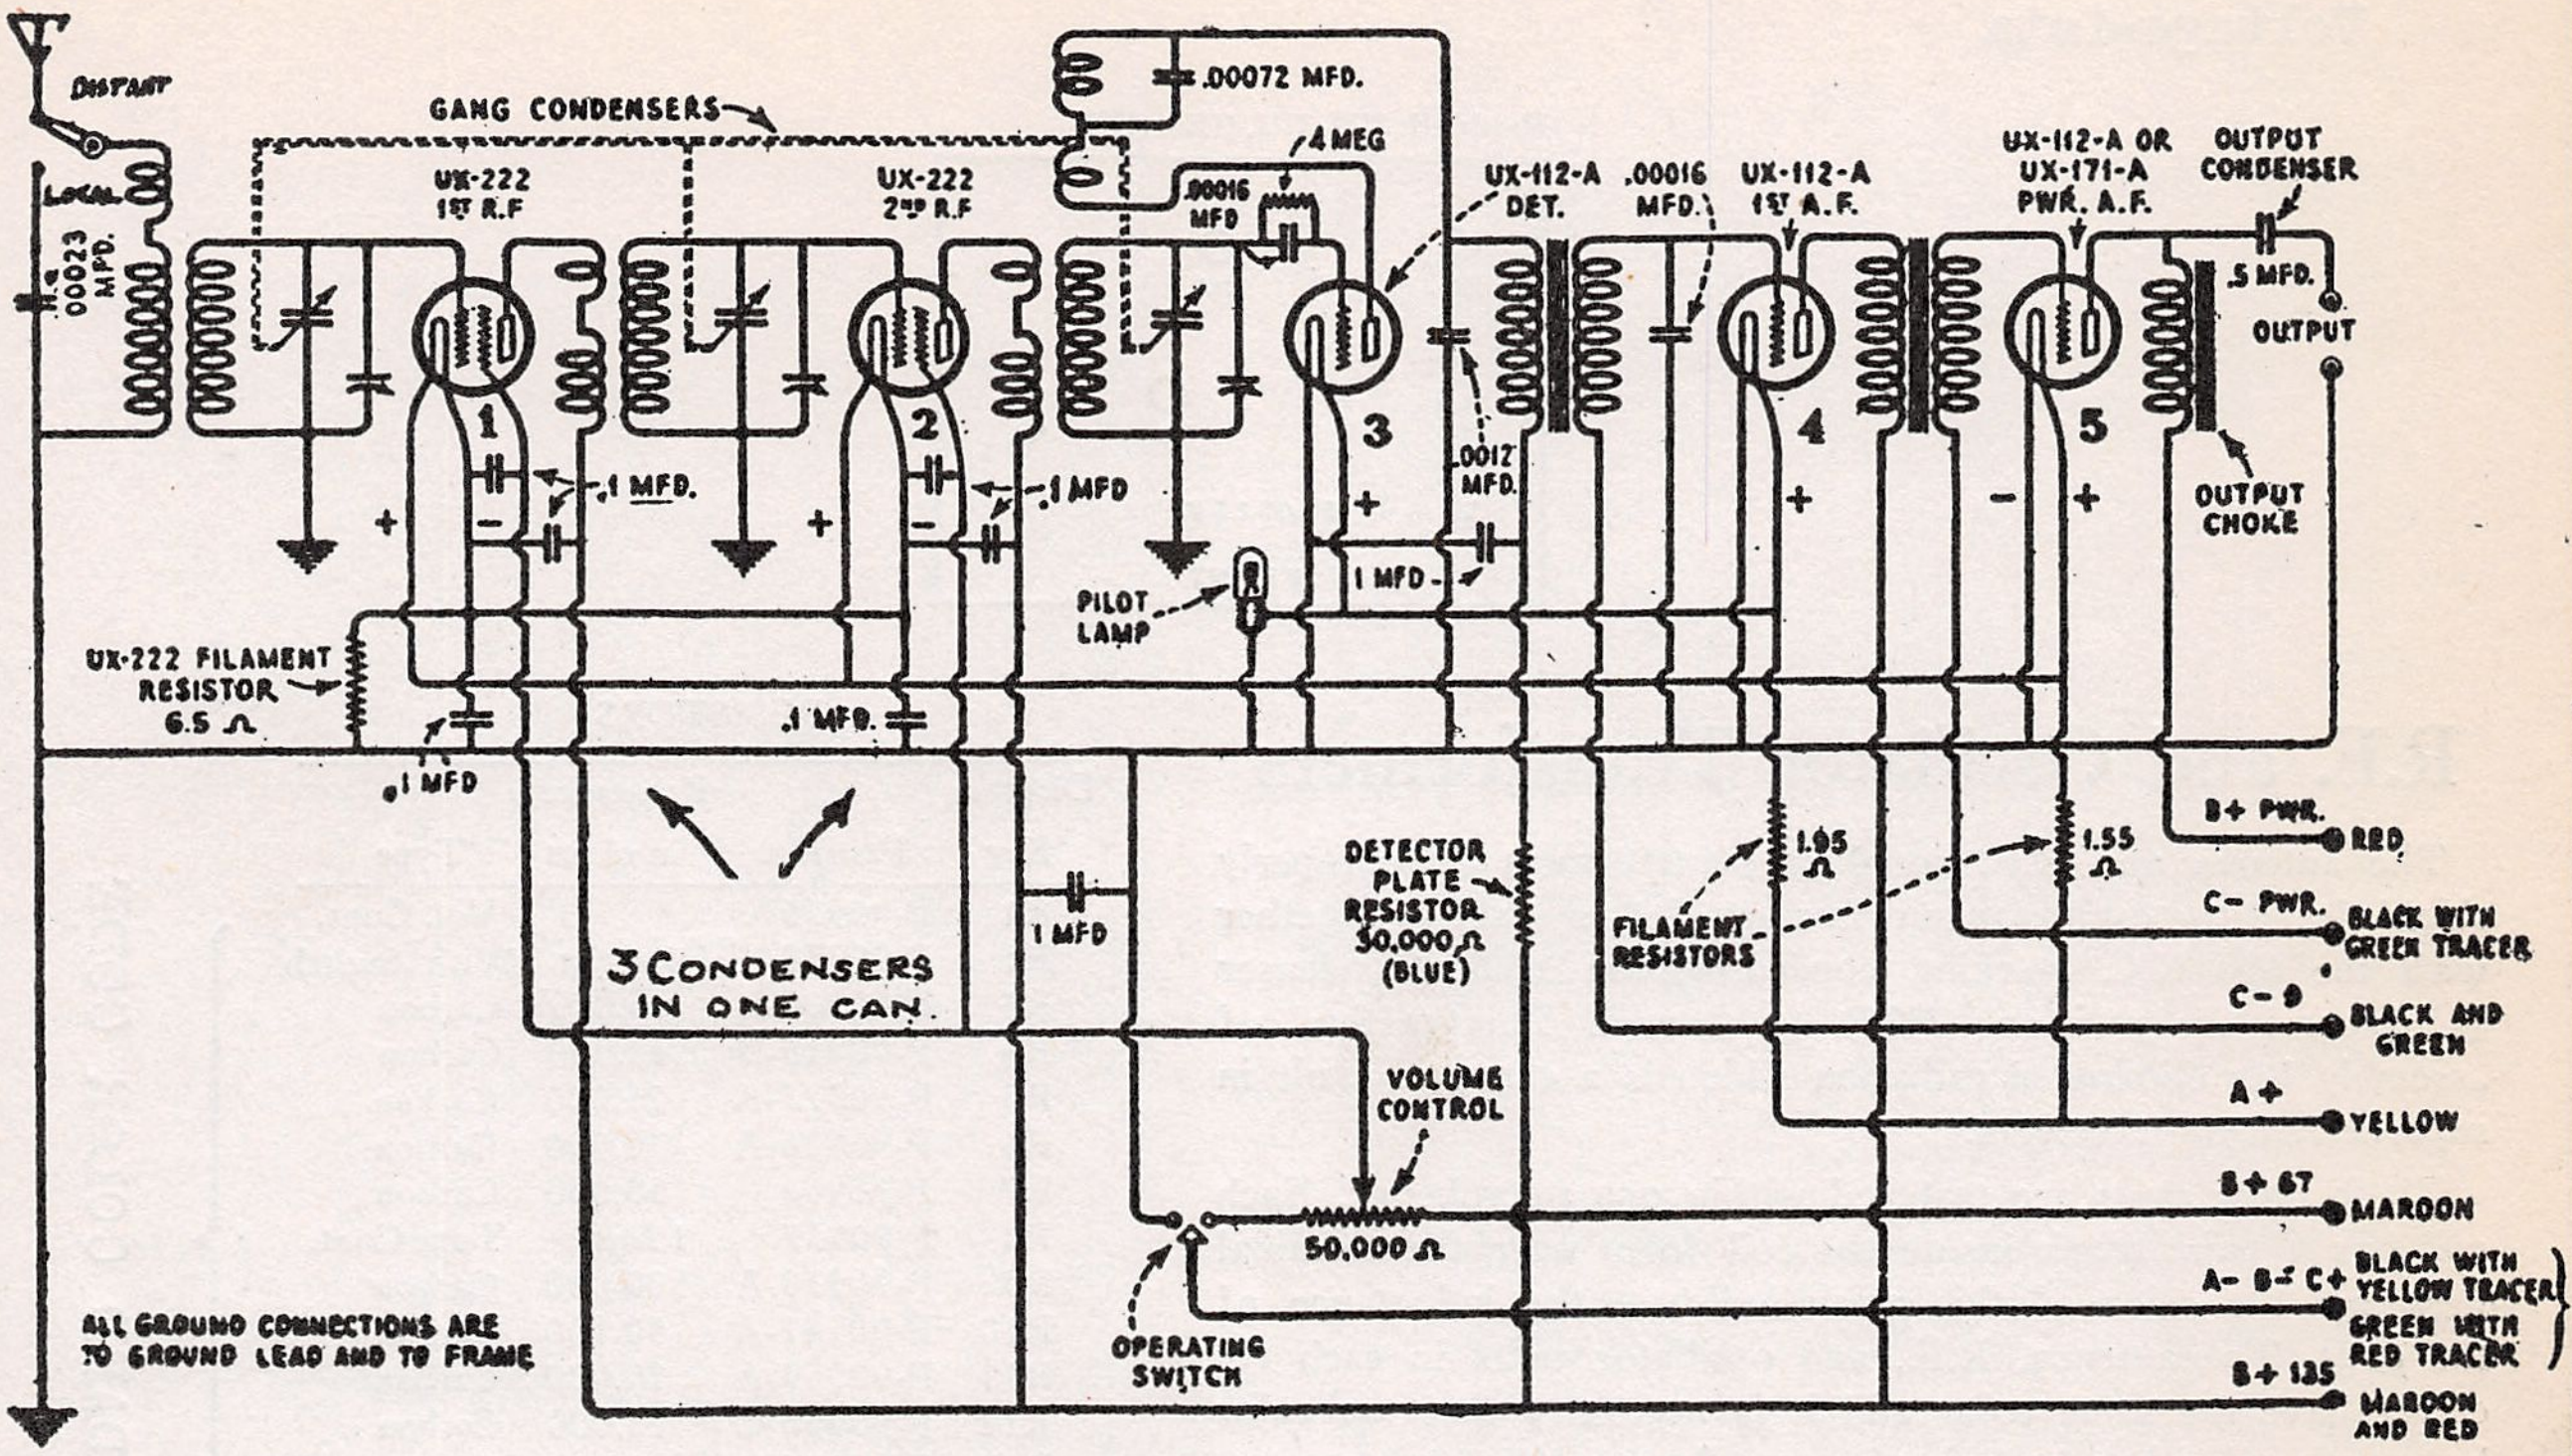
DISTANT
LOCAL
.00023 MFD.
GANG CONDENSERS
UX-222 1ST R.F
UX-222 2ND R.F
.00072 MFD.
4 MEG
.00016 MFD
UX-112-A DET.
.00016 MFD.
UX-112-A 1ST A.F.
UX-112-A OR UX-171-A PWR. A.F.
OUTPUT CONDENSER
.5 MFD.
OUTPUT
OUTPUT CHOKE
1
2
3
4
5
.1 MFD.
.1 MFD
.0012 MFD.
1 MFD
PILOT LAMP
UX-222 FILAMENT RESISTOR 6.5 Ω
.1 MFD
.1 MFD.
3 CONDENSERS IN ONE CAN.
1 MFD
DETECTOR PLATE RESISTOR 50,000 Ω (BLUE)
FILAMENT RESISTORS
1.95 Ω
1.55 Ω
VOLUME CONTROL
50,000 Ω
OPERATING SWITCH
ALL GROUND CONNECTIONS ARE TO GROUND LEAD AND TO FRAME
B+ PWR.
RED
C- PWR.
BLACK WITH GREEN TRACER
C-9
BLACK AND GREEN
A+
YELLOW
B+67
MAROON
A- B- C+
BLACK WITH YELLOW TRACER
GREEN WITH RED TRACER
B+135
MAROON AND RED

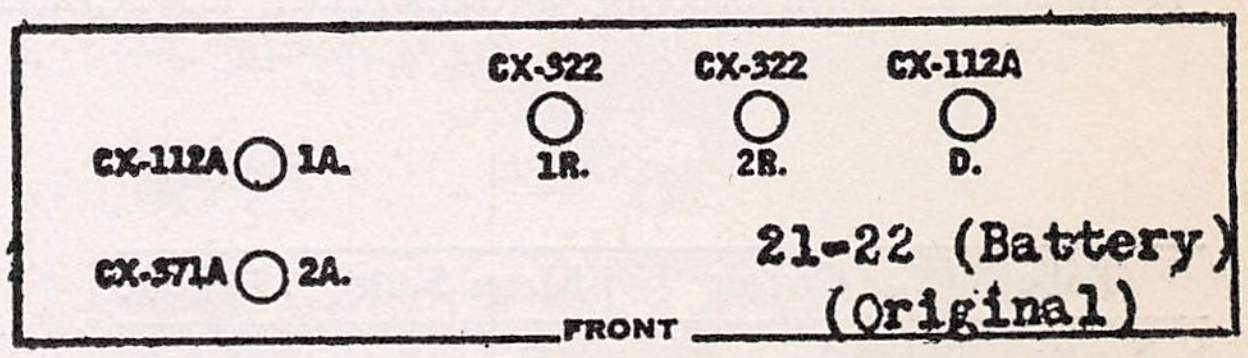
CX-322
CX-322
CX-112A
1R.
2R.
D.
CX-112A
1A.
CX-371A
2A.
FRONT

21-22 (Battery)
(Original)

General Description

Radiolas 21 and 22 are the tuned RF type, using two stages of radio frequency and one tuned antenna stage. The antenna coil has a high impedance primary and for this reason will give most satisfactory performance on an outside aerial of from forty to seventy-five feet long, including Lead-in. A forty foot aerial should be used in congested localities where there is serious interference. In the event it is impossible to install an aerial and lead-in of from forty to seventy-five feet, a longer aerial may be used and a .0005 or .0001 MFD fixed condenser connected in series with the antenna connection to the set.

Volume Control

The volume control consists of a 50,000 Ohm Potentiometer connected in the B+67 Volt lead and controls the screen voltage to the two RF tubes. The on and off switch is of a special type which automatically breaks the A & B connections when snapped in the off position.

Six Volt Storage Battery Operation

Figure No. 1 gives the completed circuit for operation on 6 Volt A supply. Two type 222 tubes are used as radio frequency amplifiers. A 112A detector, a 112A tube in the first audio stage and a 112A or 171A tube in the second audio stage. The two 222's used in the RF stages receive their filament supply of 3.2 Volts through the 6½ Ohm resistor connected in the A negative lead. The detector and first audio are operated at 5 Volts through the 1.95 Ohm filament resistor in the positive A lead. The filament of the power stage is supplied through the 1.55 Ohm filament resistor. A 171A power tube may be used in the power stage with the proper B supply of 180 Volts and 40½ Volts C. A 112A tube using 135 Volts of B and 9 Volts of C is recommended however, for most economical operation.

CHANGING RADIOLA #22
for 2-VOLT TUBES

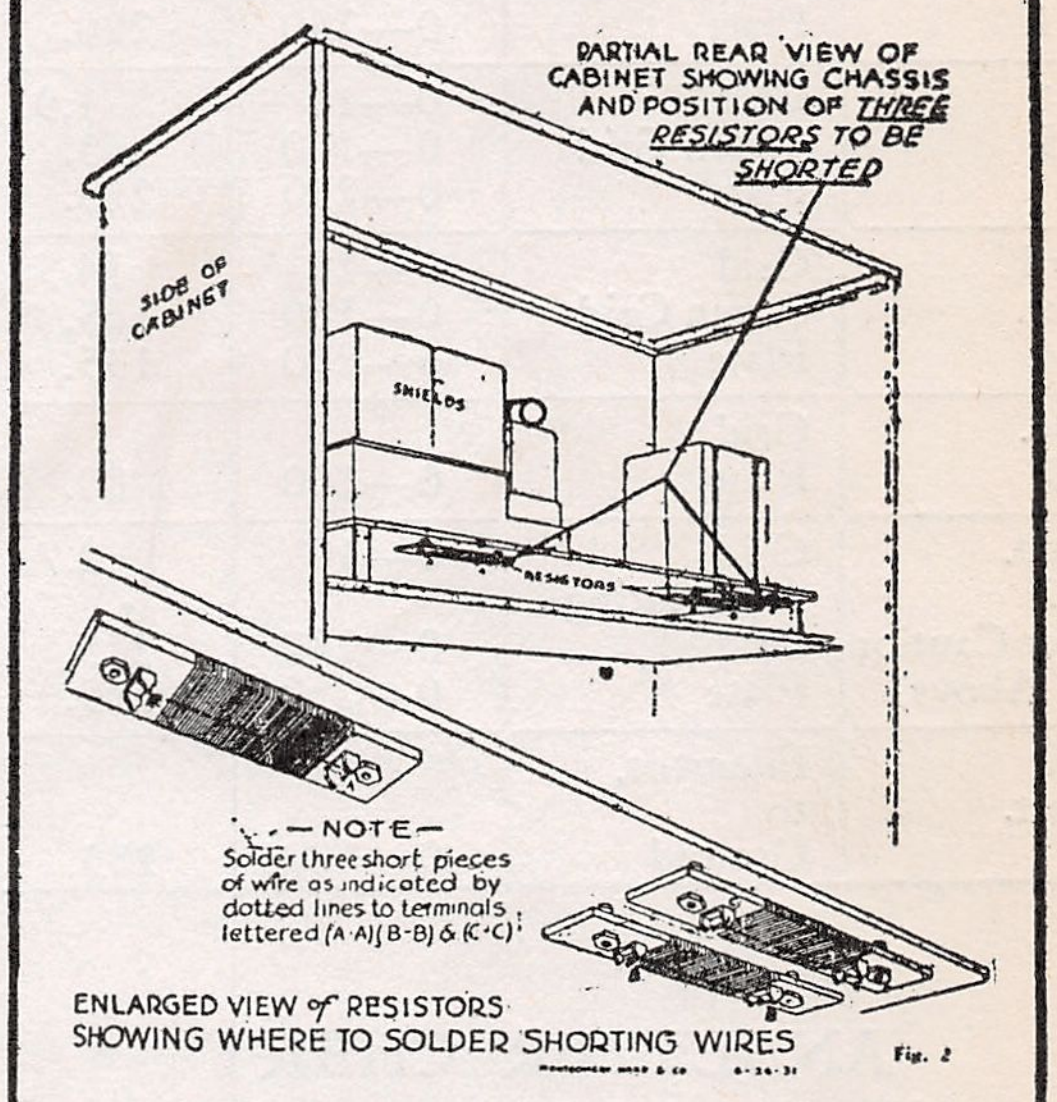
PARTIAL REAR VIEW OF CABINET SHOWING CHASSIS AND POSITION OF THREE RESISTORS TO BE SHORTED
SIDE OF CABINET
SHIELDS
RESISTORS
Montgomery Ward & Co 6-24-31

—NOTE—
Solder three short pieces of wire as indicated by dotted lines to terminals lettered (A-A) (B-B) & (C-C)

ENLARGED VIEW of RESISTORS SHOWING WHERE TO SOLDER SHORTING WIRES

Fig. 2

MODEL 1111 (62-1611
Fantasy
811 (62-1711)
Solo
Voltage-Data

MONTGOMERY-WARD & CO.

Models 811, 811X, 1111, 1111X (1931)

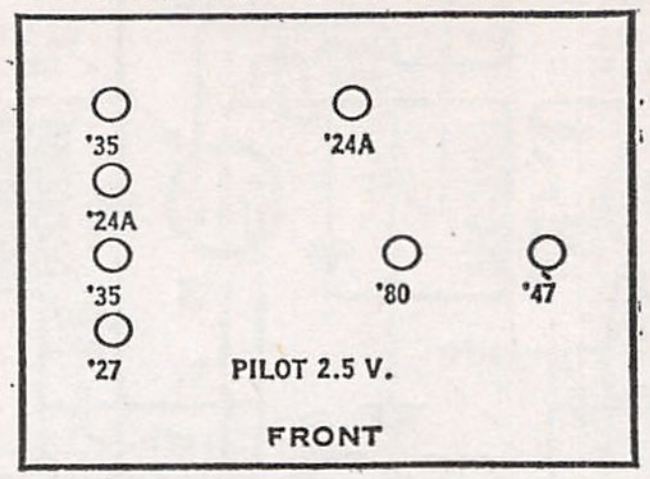

R.F. and Oscillator Transformers

The antenna and R.F. coupling transformers are properly shielded and the oscillator unit is assembled in a shield together with the 600 K.C. tracking condenser, the .00075 condenser (C16) and the resistor (R14) to ground. This method of assembly has eliminated radiation which is a common fault in superheterodyne receivers.

These three units are matched within one microhenry. Each coil has a paint mark inside the coil form near the terminal lugs and the color of this mark indicates the inductance of the coils. The antenna, R.F., and oscillator units in each receiver have the same color and it is necessary that the color be mentioned when ordering a transformer for replacement.

RESISTORS

Diagram Key	Part No.	Resistance in ohms	Type
R1	P-90976		Vol. Cont.
R1	P-90978	Vol. Cont.	With Switch
R3	P-90905-B	15,000	Carbon
R4	P-90916-B	40,000	Carbon
R5	P-90927-A	25,000	Carbon
R6	P-90926-A	30,000	Carbon
R7	P-90956	30,000	Carbon
R8	P-90977	1 Meg.	Tone Cont.
R9	P-90938-A	500,000	Carbon
R10	P-90941-A	50,000	Carbon
R11	P-90959-A	20,000	Carbon
R12	P-90930-C	10,000	Carbon
R13	P-90906-B	2,000	Carbon
R14	P-90956-A	30,000	Carbon
R15	P-90975-A	270	Candohm
R16	P-90963-A	150,000	Carbon
R17	P-90979	7,000	Carbon

'STANDARD COLOR CODE

Tuning

The primary and secondary of both intermediate transformers are tuned with adjustable condensers which remain fixed after the transformers have been tuned to exactly 175 kilocycles.

The oscillator has an adjustable tracking condenser which is adjusted at 600 kilocycles and remains fixed thereafter.

Condensers and Resistors

Three blocks contain the majority of condensers. The choke in the plate circuit of the second detector tube is also contained in one of these blocks. The common leads of condenser blocks No. 1 and No. 2 are grounded. C1, C4, and C6 in block No. 3 have a common lead which is grounded, and the choke, and C3 in this block have a common lead connected to the plate of the 2nd detector.

Tube	Circuit	Meter Scale	110 V.
R.F. (Ant) '35	Grid	0—10	1.9
	Screen Grid	0—100	63.
	Plate	0—250	225.
1st Det. '24	Grid	0—25	14.5
	Screen Grid	0—100	65.
	Plate	0—250	220.
Int. '35	Grid	0—10	1.9
	Screen Grid	0—100	63.
	Plate	0—250	225.
2nd Det. '24	Grid	0—25	14.5
	Screen Grid	0—100	65.
	Plate	0—250	135.
Osc. '27	Grid		
	Plate	0—100	80.
Aud. '47 (See Caution Above)	Grid	0—10	2.7
	Accelerating Grid	0—250	225.
	Plate	0—250	205.
'80 Rect.	Filament, to Ground	0—1000	233.

ANALYZER CHART

All voltages taken with a 1,000 ohm per volt voltmeter on the scale indicated in the column headed "Meter Scale." Turn the volume all the way on and connect the antenna and ground leads together. The grid, plate, and screen grid voltages are measured to cathode of the '24 and '35 tubes and to filament of the '47 tube.

The grid voltage on the '27 oscillator cannot be taken except with a very sensitive, low scale voltmeter. The voltage is approximately .05 volts when the A.C. line voltage is 110 volts.

MODEL 1111 (62-1611)
Fantasy
811 (62-1711)
Solo
Schematic

MONTGOMERY-WARD & CO.

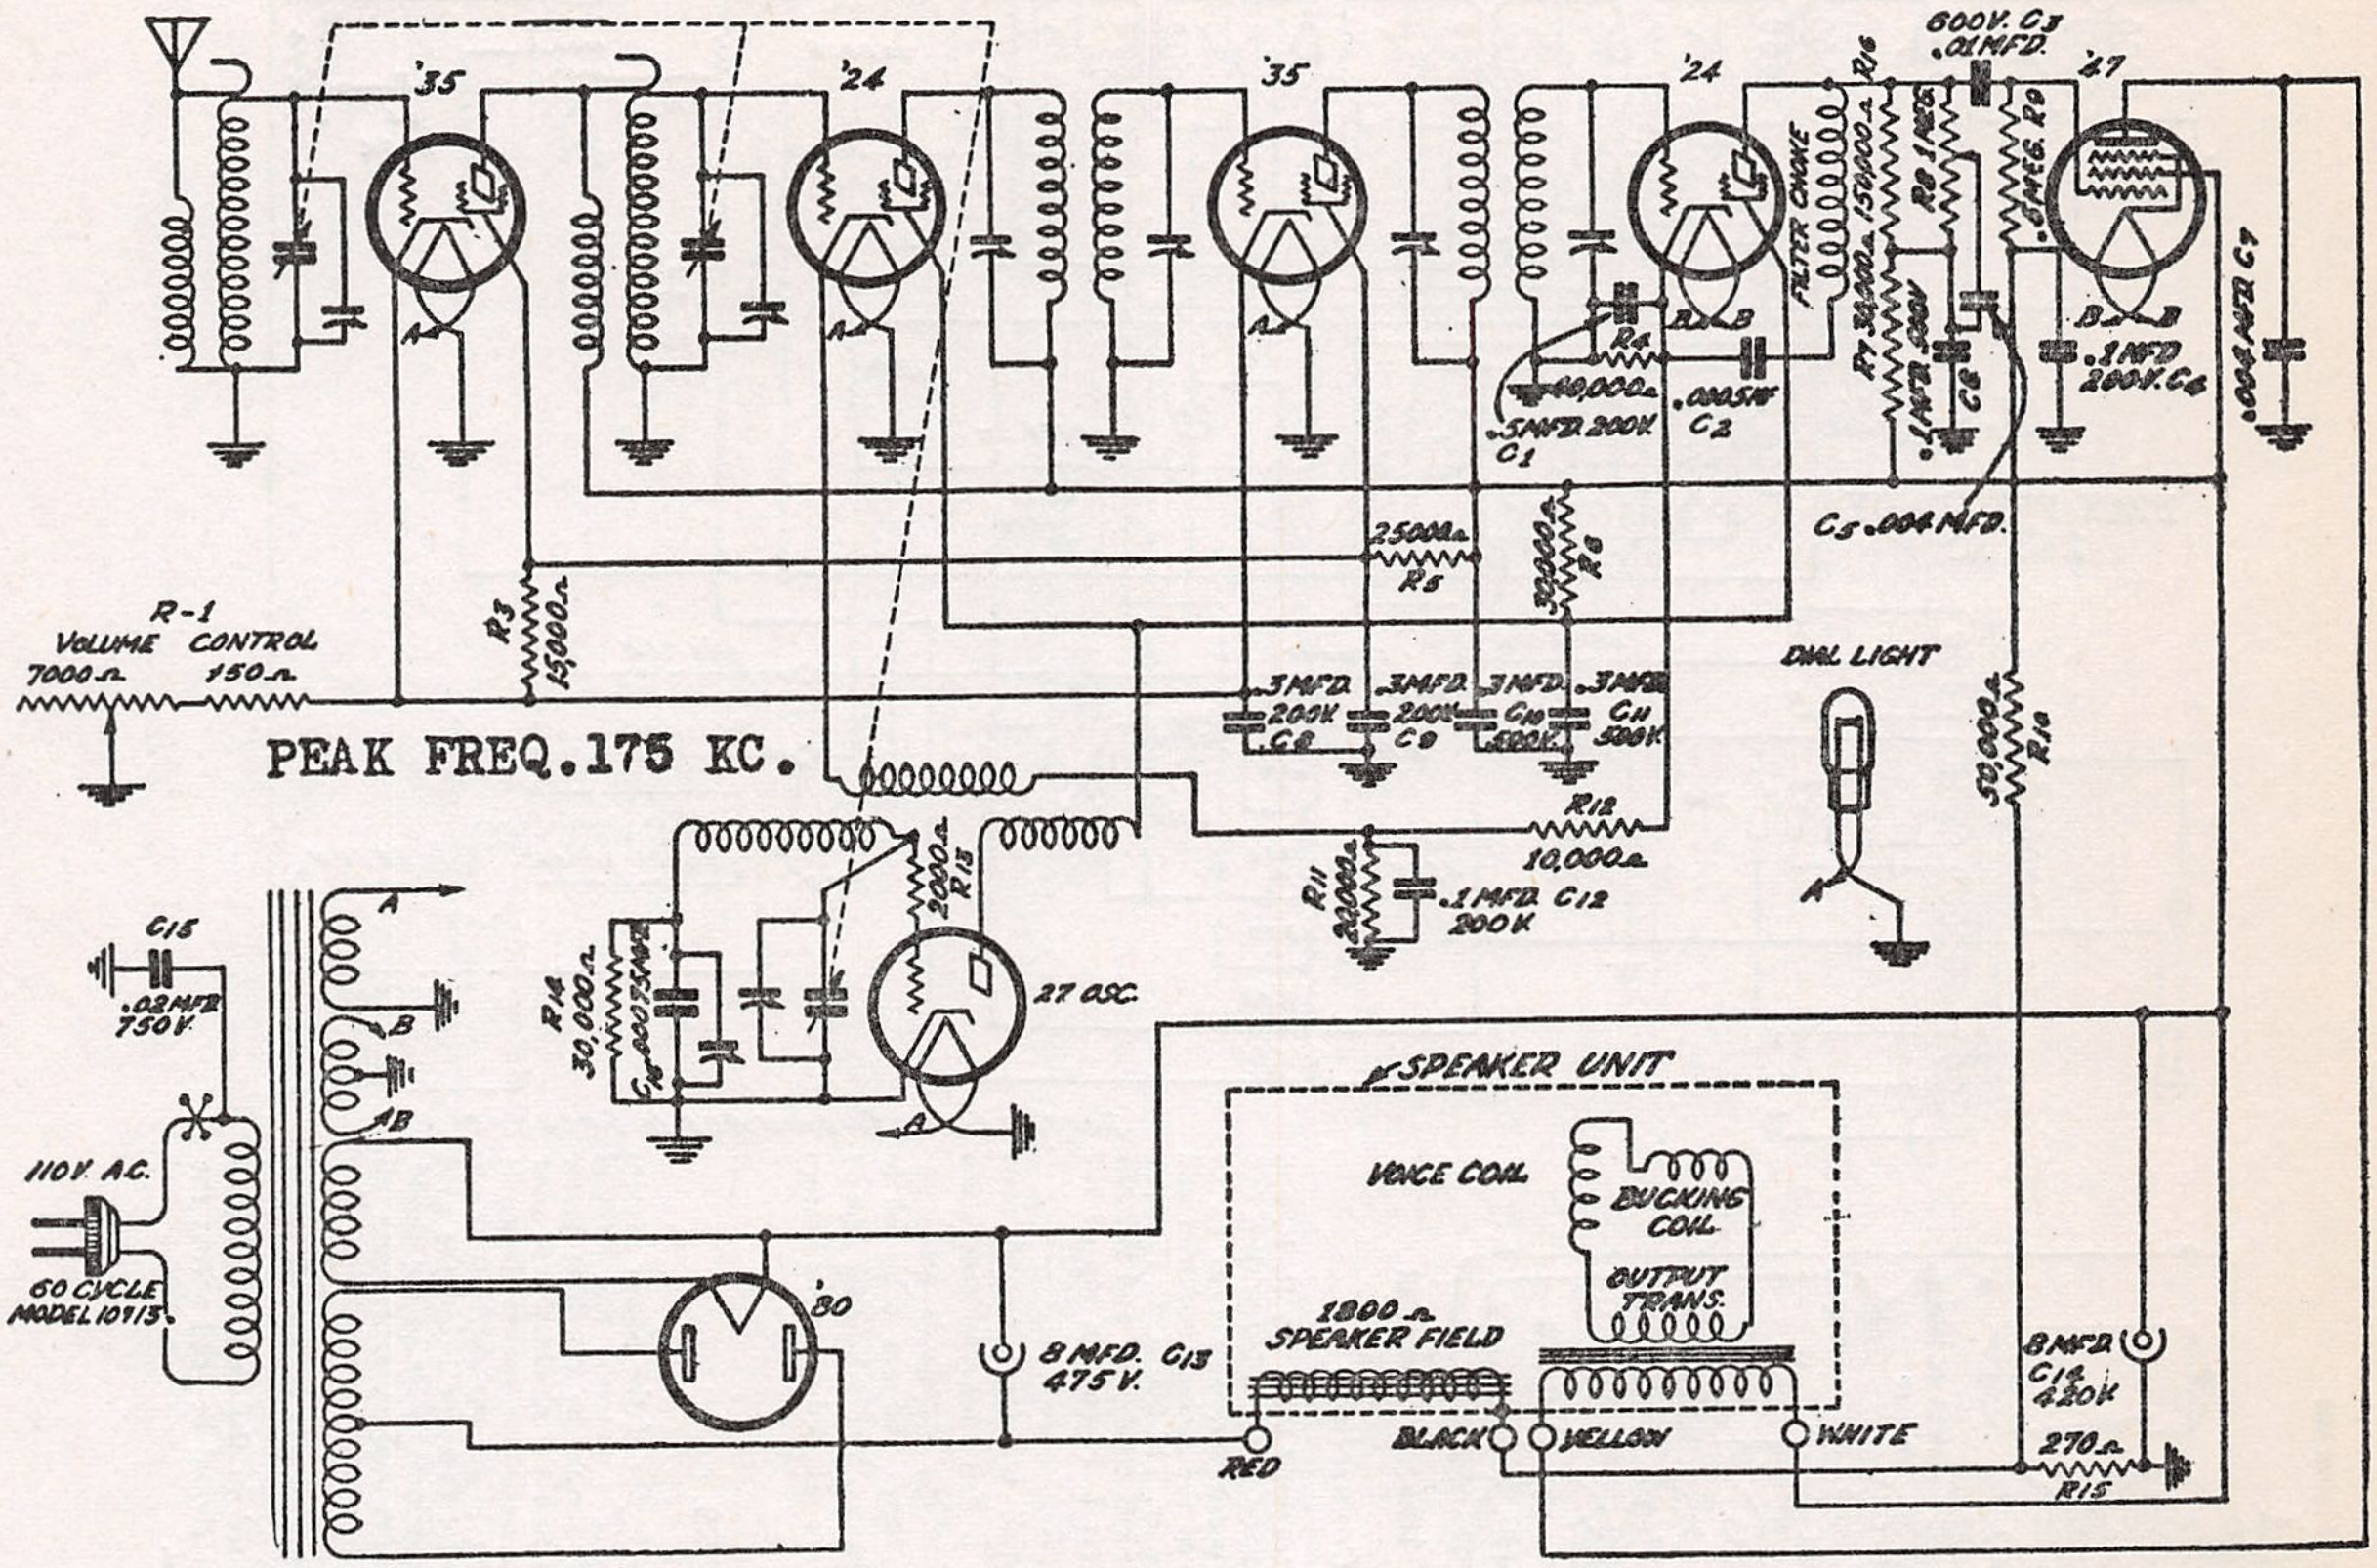
'35
'24
'35
'24
'47
600V. C3 .01MFD.
R16
FILTER CHOKE
R7 35,000Ω
R8 150,000Ω
R9 1 MEG.
.5MFD. 200V C1
R4 80,000Ω
.0005MF C2
C8
.1MFD 200V C6
.002MFD C7
C5 .004MFD.
2500Ω R5
R6 50,000Ω
R3 15,000Ω
R-1 VOLUME CONTROL
7000Ω
150Ω
.3MFD. 200V C8
.3MFD. 200V C9
.3MFD. C10 500V
.3MFD. C11 500V
DIAL LIGHT
R10 50,000Ω
PEAK FREQ. 175 KC.
R12 10,000Ω
R11 2000Ω
.1MFD. C12 200V
R13 2000Ω
R14 30,000Ω
27 OSC.
C15 .02MFD 750V
110V. A.C.
60 CYCLE MODEL 10113.
A
B
AB
'80
8 MFD. C13 475V.
SPEAKER UNIT
VOICE COIL
BUCKING COIL
OUTPUT TRANS.
1800Ω SPEAKER FIELD
RED
BLACK
YELLOW
WHITE
8 MFD. C14 420V
270Ω R15

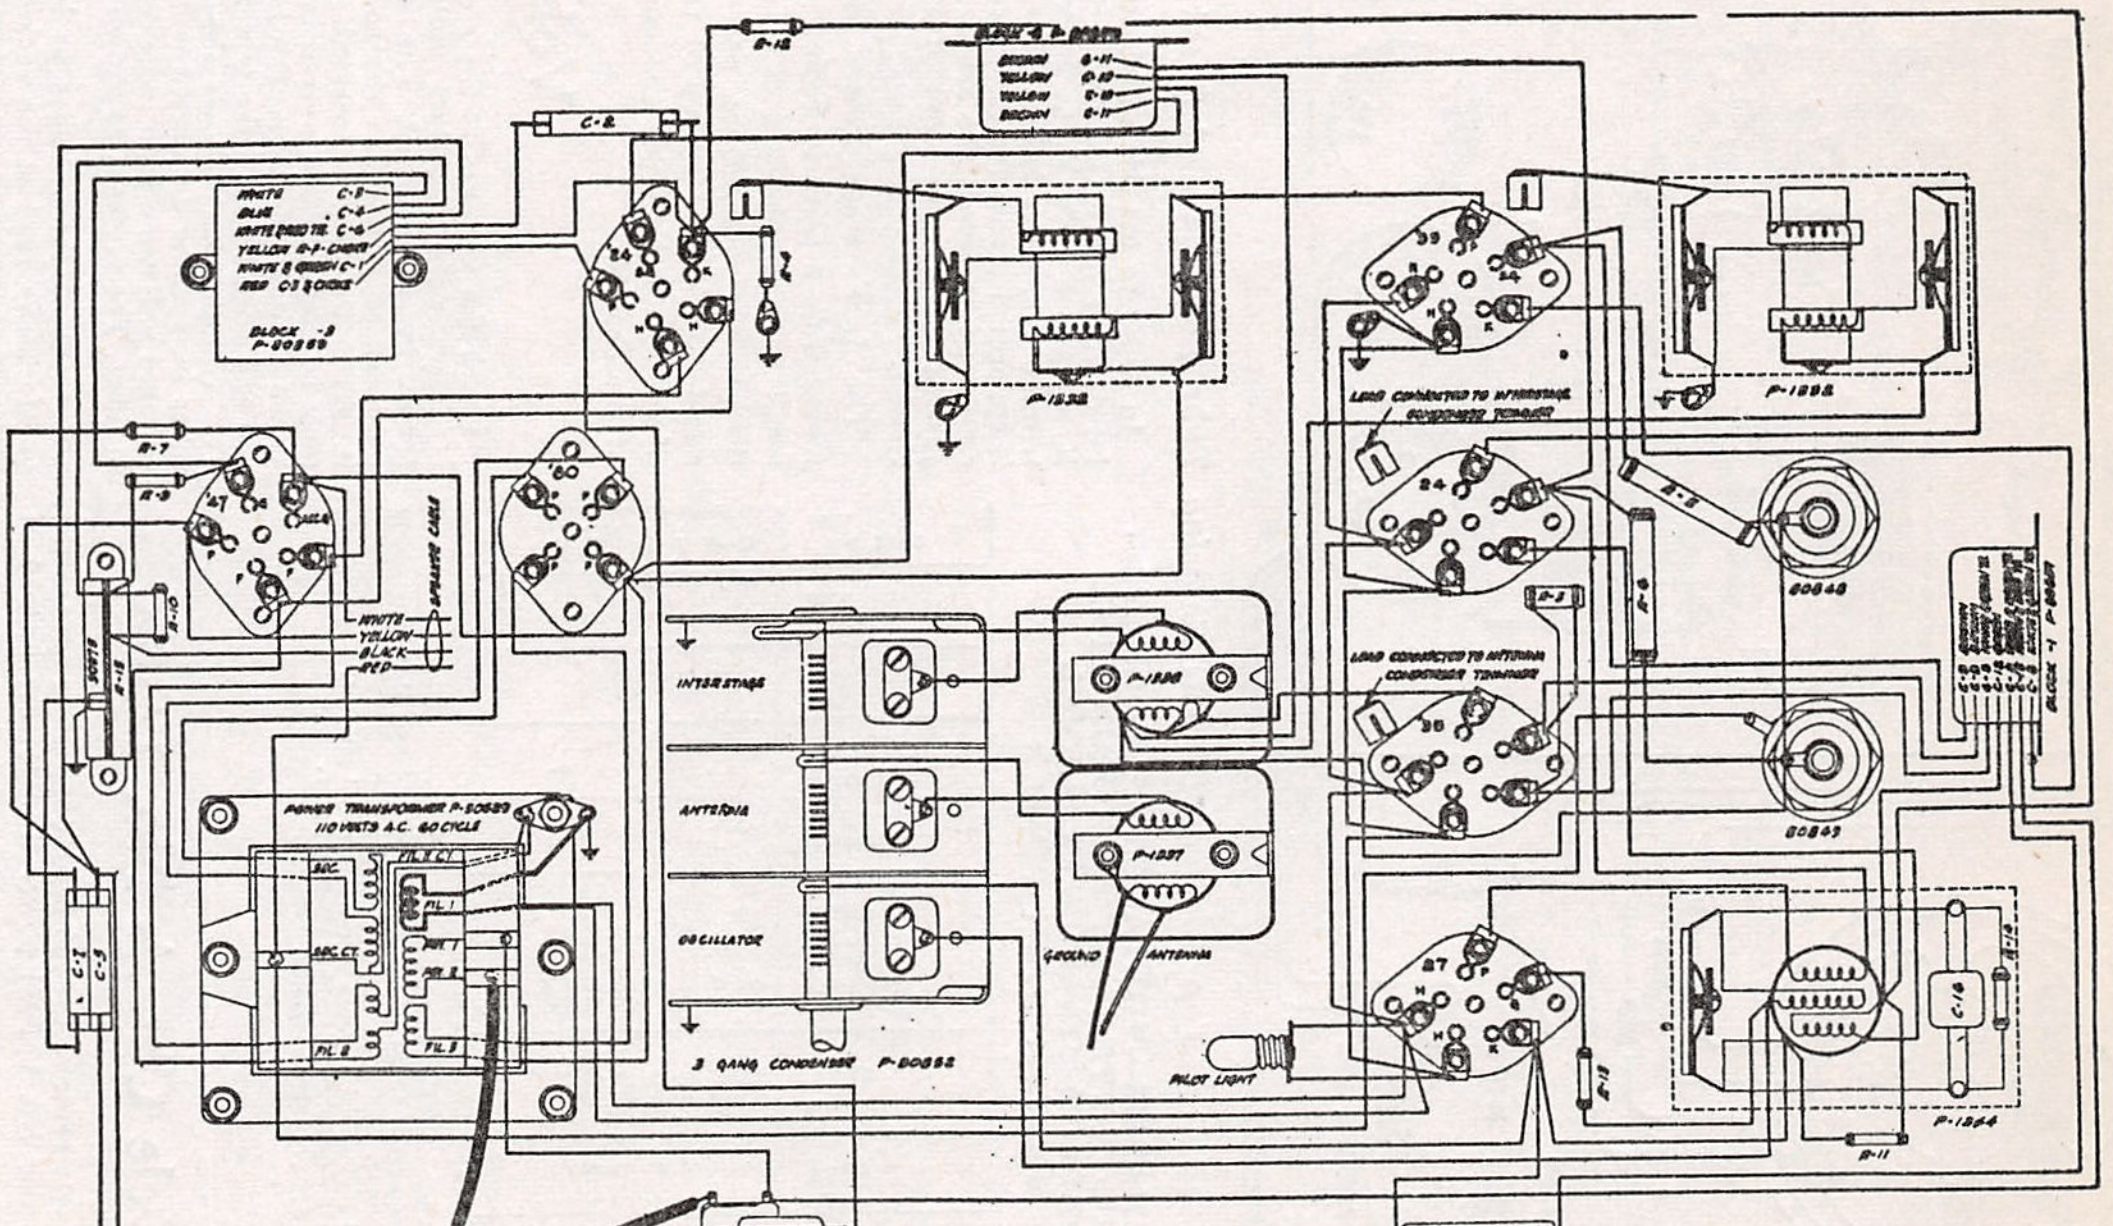
BLOCK-3
INTERSTAGE
ANTENNA
OSCILLATOR
3 GANG CONDENSER
POWER TRANSFORMER 110 VOLTS A.C. 60 CYCLE
SPEAKER CABLE
WHITE
YELLOW
BLACK
RED
LEAD CONNECTED TO INTERSTAGE CONDENSER TRIMMER
LEAD CONNECTED TO ANTENNA CONDENSER TRIMMER
GROUND
ANTENNA
PILOT LIGHT
BLOCK-1
R-2 TONE CONTROL & SWITCH
R-1 VOLUME CONTROL
CORD & PLUG
'24
'35
'27
'47
'80

MONTGOMERY-WARD & CO.

MODEL 1238
(62-1838)

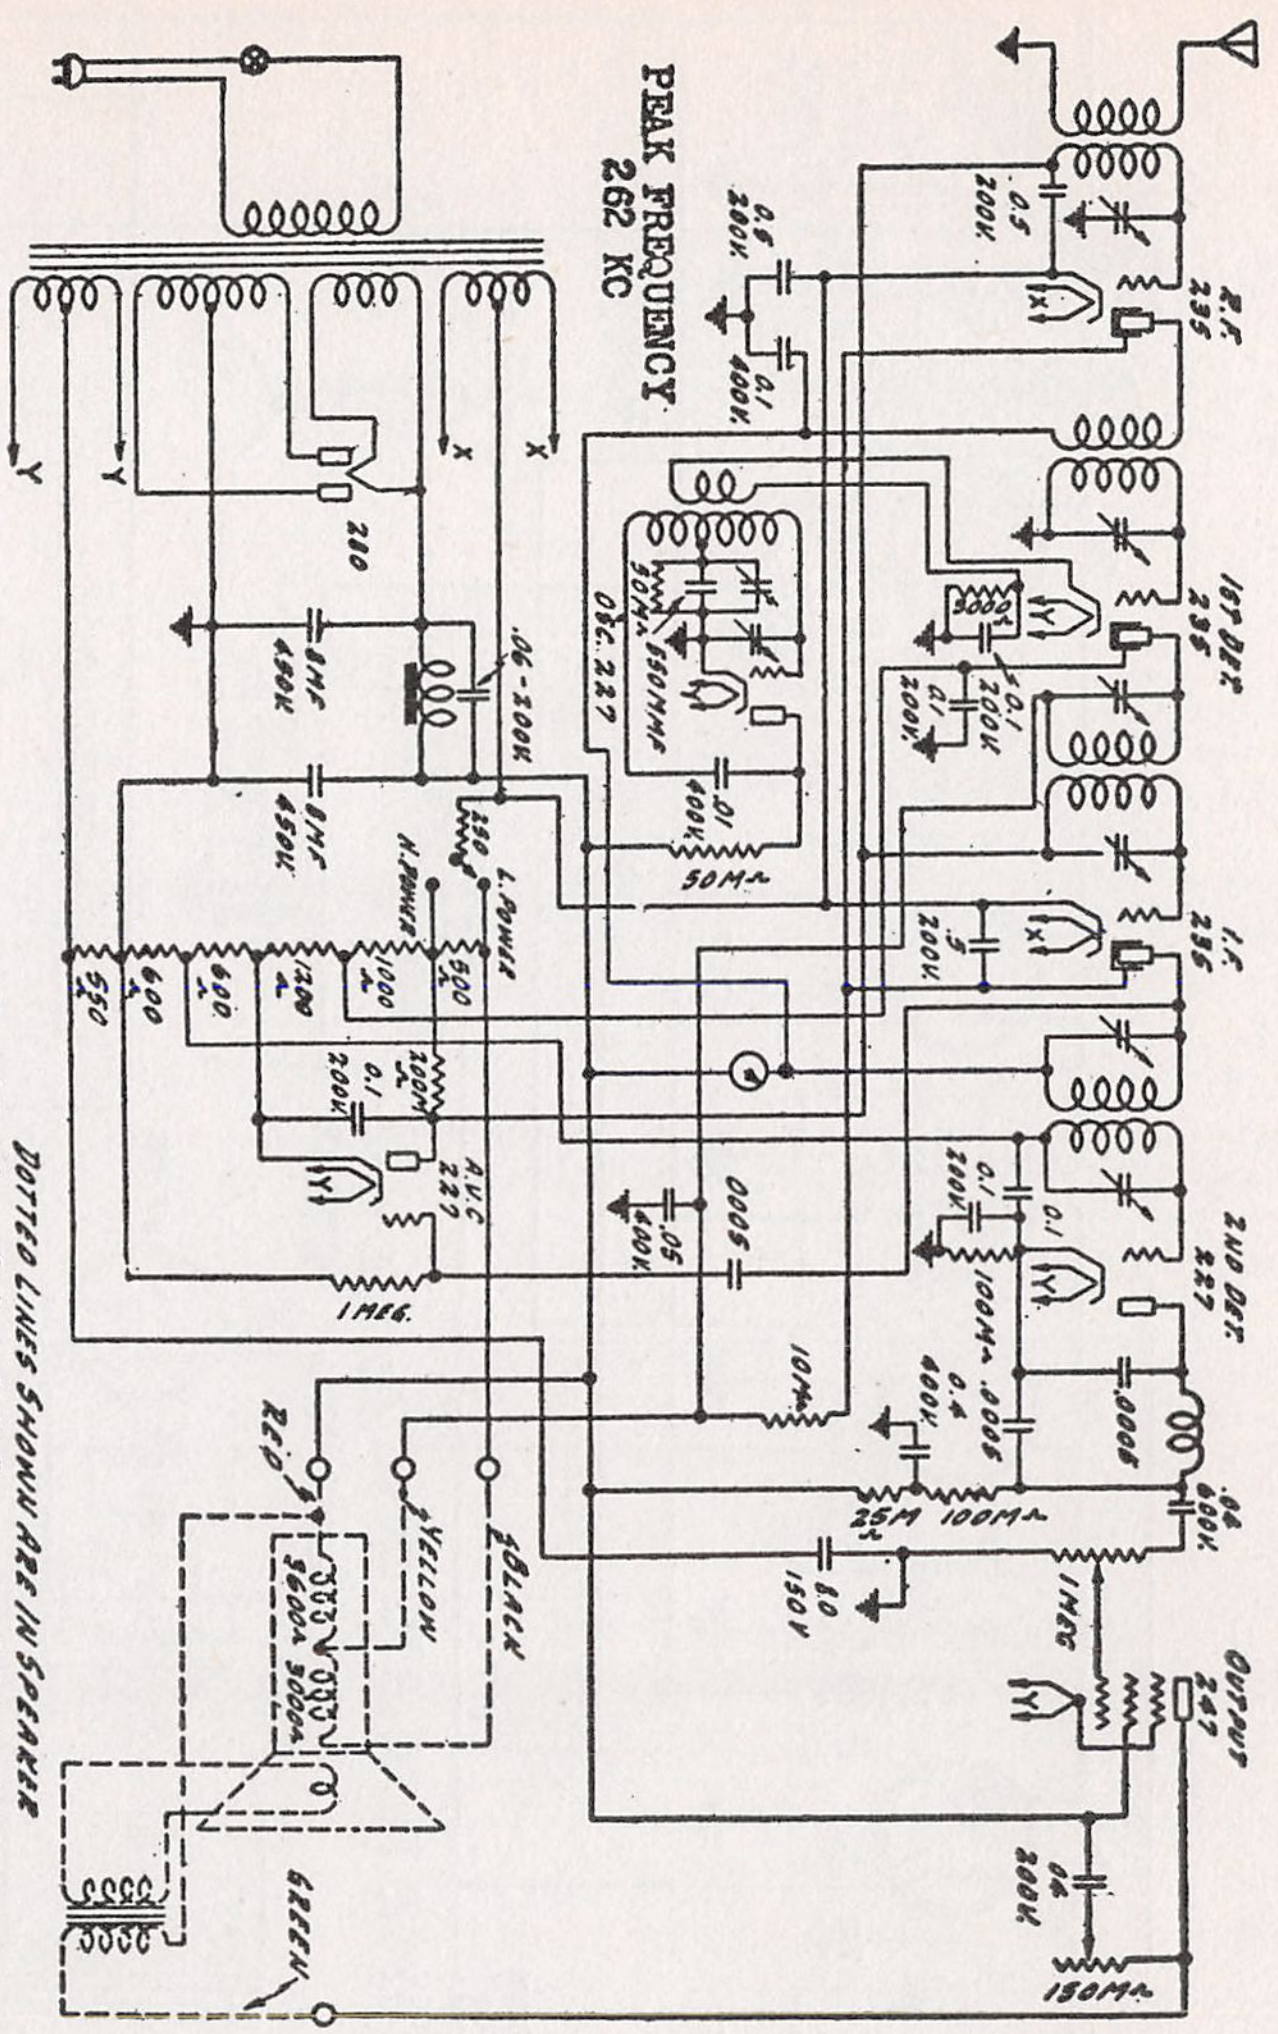
R.F. 235
1st DET. 235
I.F. 235
2ND DET. 227
OUTPUT 247
OSC. 227
A.V.C 227
280
L. POWER
H. POWER
.06-200V.
8MF 450V.
8MF 450V.
500
1000
1200
600
600
550
250
200M
.1 MEG
1 MEG.
150M
25M
100M
10M
50M
550MMF
.01 400V.
.0005
.05 400V.
.06 600V.
.06 200V.
8.0 150V
0.5 200V.
0.1 400V.
0.1 200V.
.9 200V.
3600
3000
BLACK
YELLOW
RED
GREEN
X
Y

PEAK FREQUENCY
262 KC

DOTTED LINES SHOWN ARE IN SPEAKER

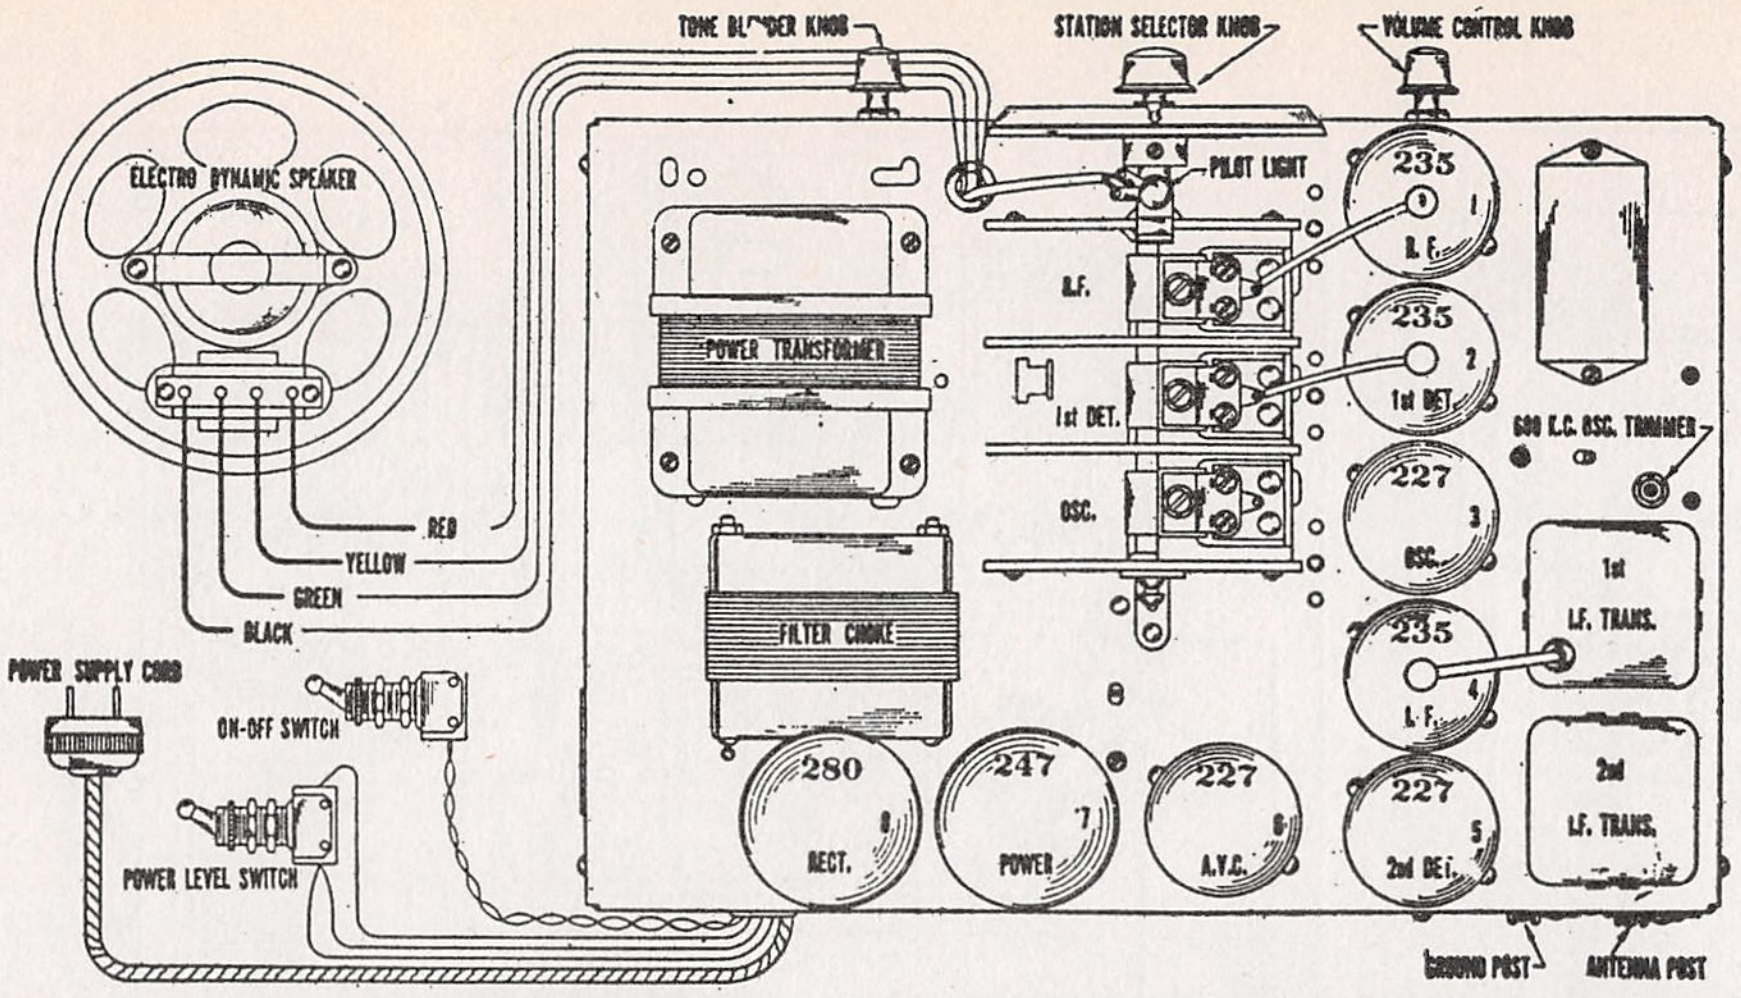
TONE BL^DER KNOB
STATION SELECTOR KNOB
VOLUME CONTROL KNOB
PILOT LIGHT
ELECTRO DYNAMIC SPEAKER
RED
YELLOW
GREEN
BLACK
POWER SUPPLY CORD
ON-OFF SWITCH
POWER LEVEL SWITCH
POWER TRANSFORMER
FILTER CHOKE
R.F.
1st DET.
OSC.
235 R.F. 1
235 1st DET. 2
227 OSC. 3
235 I.F. 4
227 2nd DET. 5
227 A.V.C. 6
247 POWER 7
280 RECT. 8
600 K.C. OSC. TRIMMER
1st I.F. TRANS.
2nd I.F. TRANS.
GROUND POST
ANTENNA POST

Top View of Chassis Showing Tube Location and Speaker Connections

8 TUBE CHASSIS—VOLTAGES AT SOCKETS—VOLUME CONTROL AT MAXIMUM LINE VOLTAGE 115—POWER LEVEL SWITCH HIGH POWER

Type of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
235	R.F.	2.3	190	2.3(1)	68	1.0	0	3.8	6.5
235	1st Det.	2 3	190	6.5	70	.35	14.	2.0	4.9
227	Osc.	2.3	80	15—50(2)			20.	4.7	4.8
235	I.F.	2.3	190	2 3(1)	68	.6	0	3.6	6.0
227	2nd Det.	2.3	150	20.			20.	.4	.4
227	A.V.C.	2.3	65(3)	40.(4)			20.	0.	0.
247	Power	2.35	260	20.(5)	280	7.		32.	36.
280	Rectifier	5						41. Per plate	

(1) Measured across 250 ohm series resistor.
(2) Bias voltage varies from 15 to 50 between 1500 and 550 K.C. settings of tuning condenser.
(3) Measured across 1000 and 1200 ohm sections of shunt resistor.
(4) Measured across two 600 ohm sections of shunt resistor.
(5) Measured across 550 ohm series resistor.

25 Cycle Chassis No. 1238X

For 25 cycle sets remove the .06 Mfd. condenser across the filter choke and use No. U-3084 power transformer instead of U-2783.

In order to provide satisfactory tracking with the R. F. and 1st detector tuned circuits the oscillator is provided with a 600 K. C. and a 1400 K. C. trimmer condenser. The 1400 K. C. trimmer condenser is located on top of the tuning condenser and is connected across the tuning condenser. The 600 K. C. trimmer condenser is across the 550 Mmf. fixed condenser and the adjusting screw is in front of the first I. F. can on top of the chassis.

The I. F. transformers are small universal wound coils mounted on a piece of tubing. The I. F. tuning condensers are small mica condensers. The coil tubing standards and condensers are mounted on porcelain bases and are enclosed in metal cans located on top of the chassis. The adjusting screws of the four I. F. tuning condensers are reached from the bottom of the chassis.

Voltages

Check the voltages at the sockets to see if the power system is delivering the correct voltages. The antenna and ground should be disconnected. The shield should be on. The tester plug can be inserted in the sockets and the shield placed over it. When the plug is inserted in the oscillator socket the cable must be doubled back over it in order to get the shield back on. When reading the voltages of the 1st detector bring the grid cap and wire through the trimmer condenser hole in the shield. The voltage chart shows the voltages and currents with all tubes in, speaker connected and set in operating condition. The voltages will vary with individual receivers and with variations in tubes. The voltages as shown are with a line voltage of 115.

Several of the voltages as indicated in the chart cannot be satisfactorily read at the socket but should be read across the resistors at which they are developed.

MONTGOMERY-WARD & CO.

MODEL 1355 (62-1955)
Minstrel
Schematic
Voltage

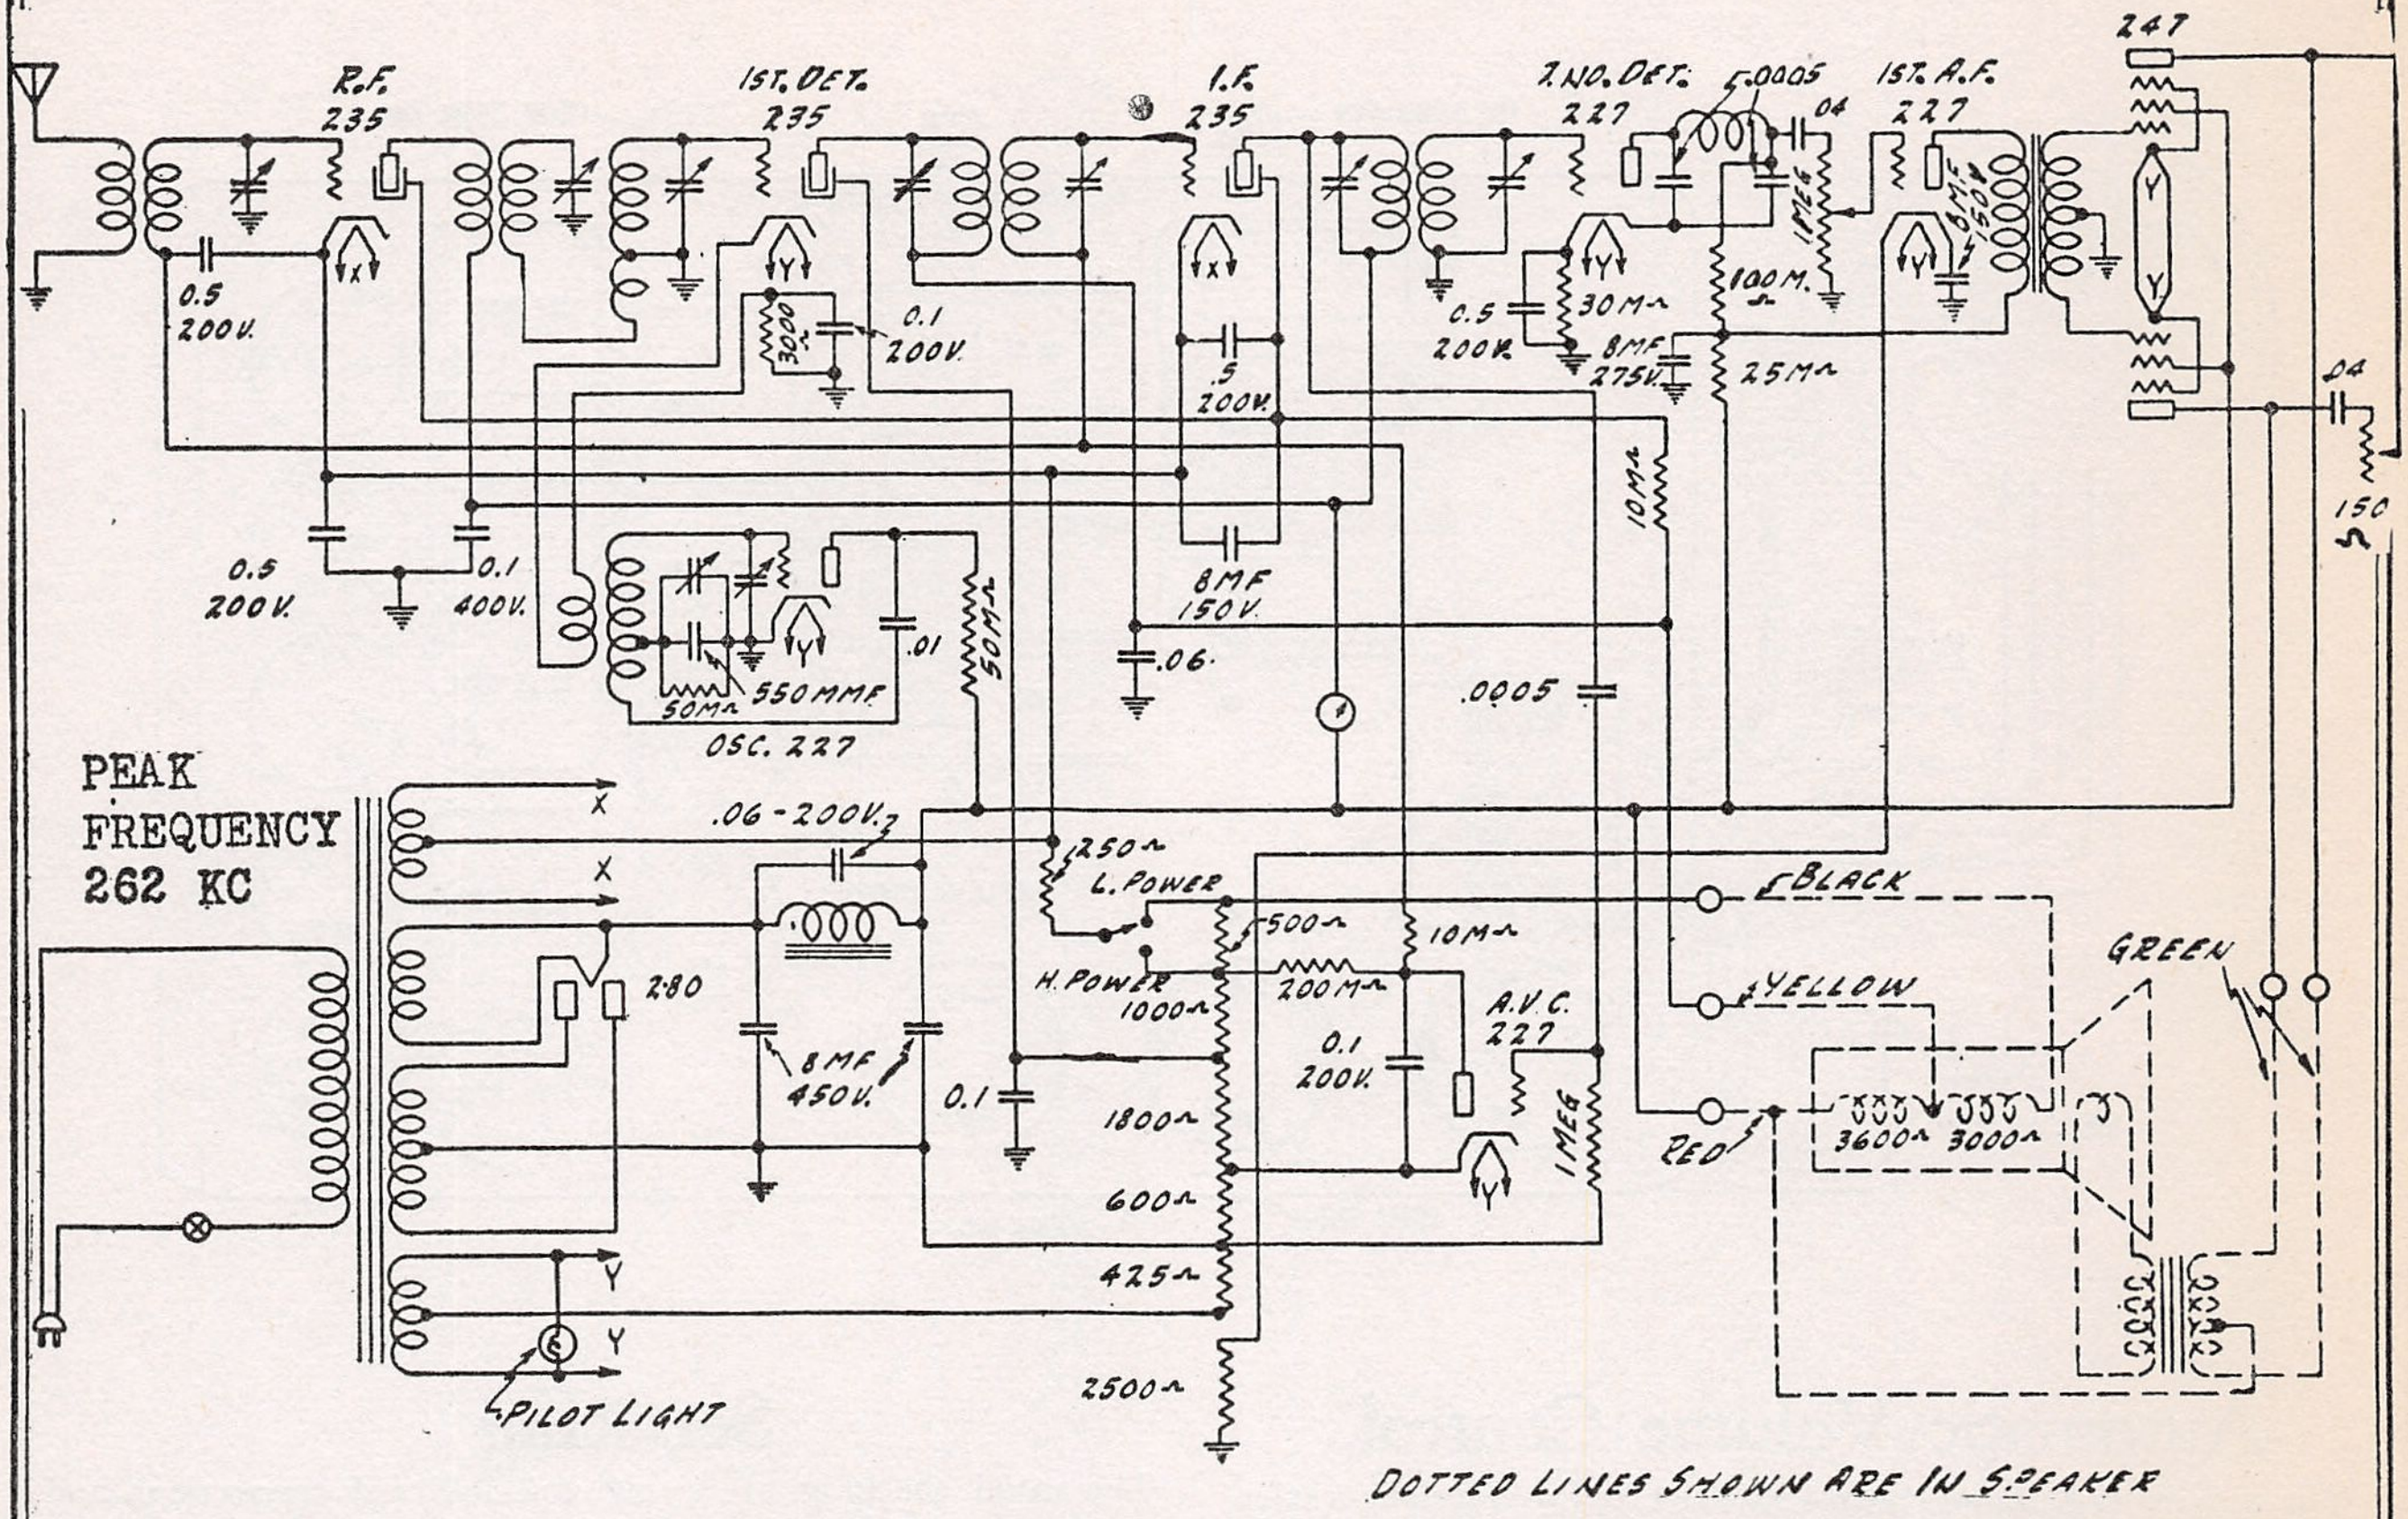
R.F. 235
1ST. DET. 235
I.F. 235
2 ND. DET. 227
.0005
.04
1ST. A.F. 227
247
0.5 200V.
0.1 200V.
300
.5 200V.
0.5 200V.
30 M
8 MF 275V.
100 M.
1 MEG
25 M
8 MF 150V.
10 M
.04
150
0.5 200V.
0.1 400V.
550 MMF
50 M
.01
50 M
OSC. 227
.06
.0005
PEAK FREQUENCY 262 KC
X
X
.06-200V.
250
L. POWER
H. POWER
1000
500
10 M
200 M
0.1 200V.
A.V.C. 227
1 MEG
280
8 MF 450V.
0.1
1800
600
425
2500
Y
Y
PILOT LIGHT
BLACK
YELLOW
RED
GREEN
3600
3000
DOTTED LINES SHOWN ARE IN SPEAKER

1955 AND 1355 CHASSIS—VOLTAGES AT SOCKETS —LINE VOLTAGE 115 VOLUME CONTROL AT MAXIMUM—POWER LEVEL SWITCH HIGH POWER

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Contro Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
235	1	R.F.	2.3	175	2.3(1)	65	.7	0.	4.	6.
235	2	1st Det.	2.3	185	7.0	69	.4	14.	2.0	2.6
235	3	I.F.	2.3	175	2.3(1)	65	.7	0.	4.0	6.0
227	4	2nd Det.	2.3	115	12.			7.5	.4	.5
227	5	1st Audic	2.3	145	11.(1)			10.	4.6	5.4
227	6	Osc.	2.3	83	15—35(3)			21.	4.2	4.4
227	7	A.V.C.	2.3	89(4)	20.(5)			1.5	0.	0.
247	8	Power	2.35	255	18.5	265	4.5			
247	9	Power	2.35	255	18.5	265	4.5		21.	28.
280	10	Rect.	4.9						45.	

(1) Measured across 250 ohm series resistor.
(2) Measured across 2500 ohm series resistor.
(3) Bias voltage varies from 15 to 35 between 1500 and 550 K.C. settings of tuning condenser.
(4) Measured across 1000 and 1800 ohm section of shunt resistor.
(5) Measured across 600 ohm section of shunt resistor.

Voltages

Check the voltages at the sockets to see if the power system is delivering the correct voltages. The antenna and ground should be disconnected. The tube shield should be on. The tester plug can be inserted in the sockets and the shield placed over it. When the plug is inserted in the 235 tube sockets care must be taken that the grid connection is not shorted to the tube shield. The chart shows the voltages and currents with all tubes in, speaker connected and set in operating condition.

In reading the I. F. voltages at the socket with a set analyzer some difficulty may be encountered if the control grid lead is in the same cable as the rest of the leads to the socket plug. If this is the case the grid plate capacity caused by the grid and plate leads being in the same cable results in a feed back which causes an I. F. oscillation. This manifests itself as a blocking or motorboating.

25 Cycle Chassis No. 1355X

For 25 cycle sets remove the .06 Mfd. condenser across the filter choke and use No. U-3169 power transformer instead of No. U-2912.

MODEL 1355 (62-1955)
Minstrel
Socket-Data

MONTGOMERY-WARD & CO.

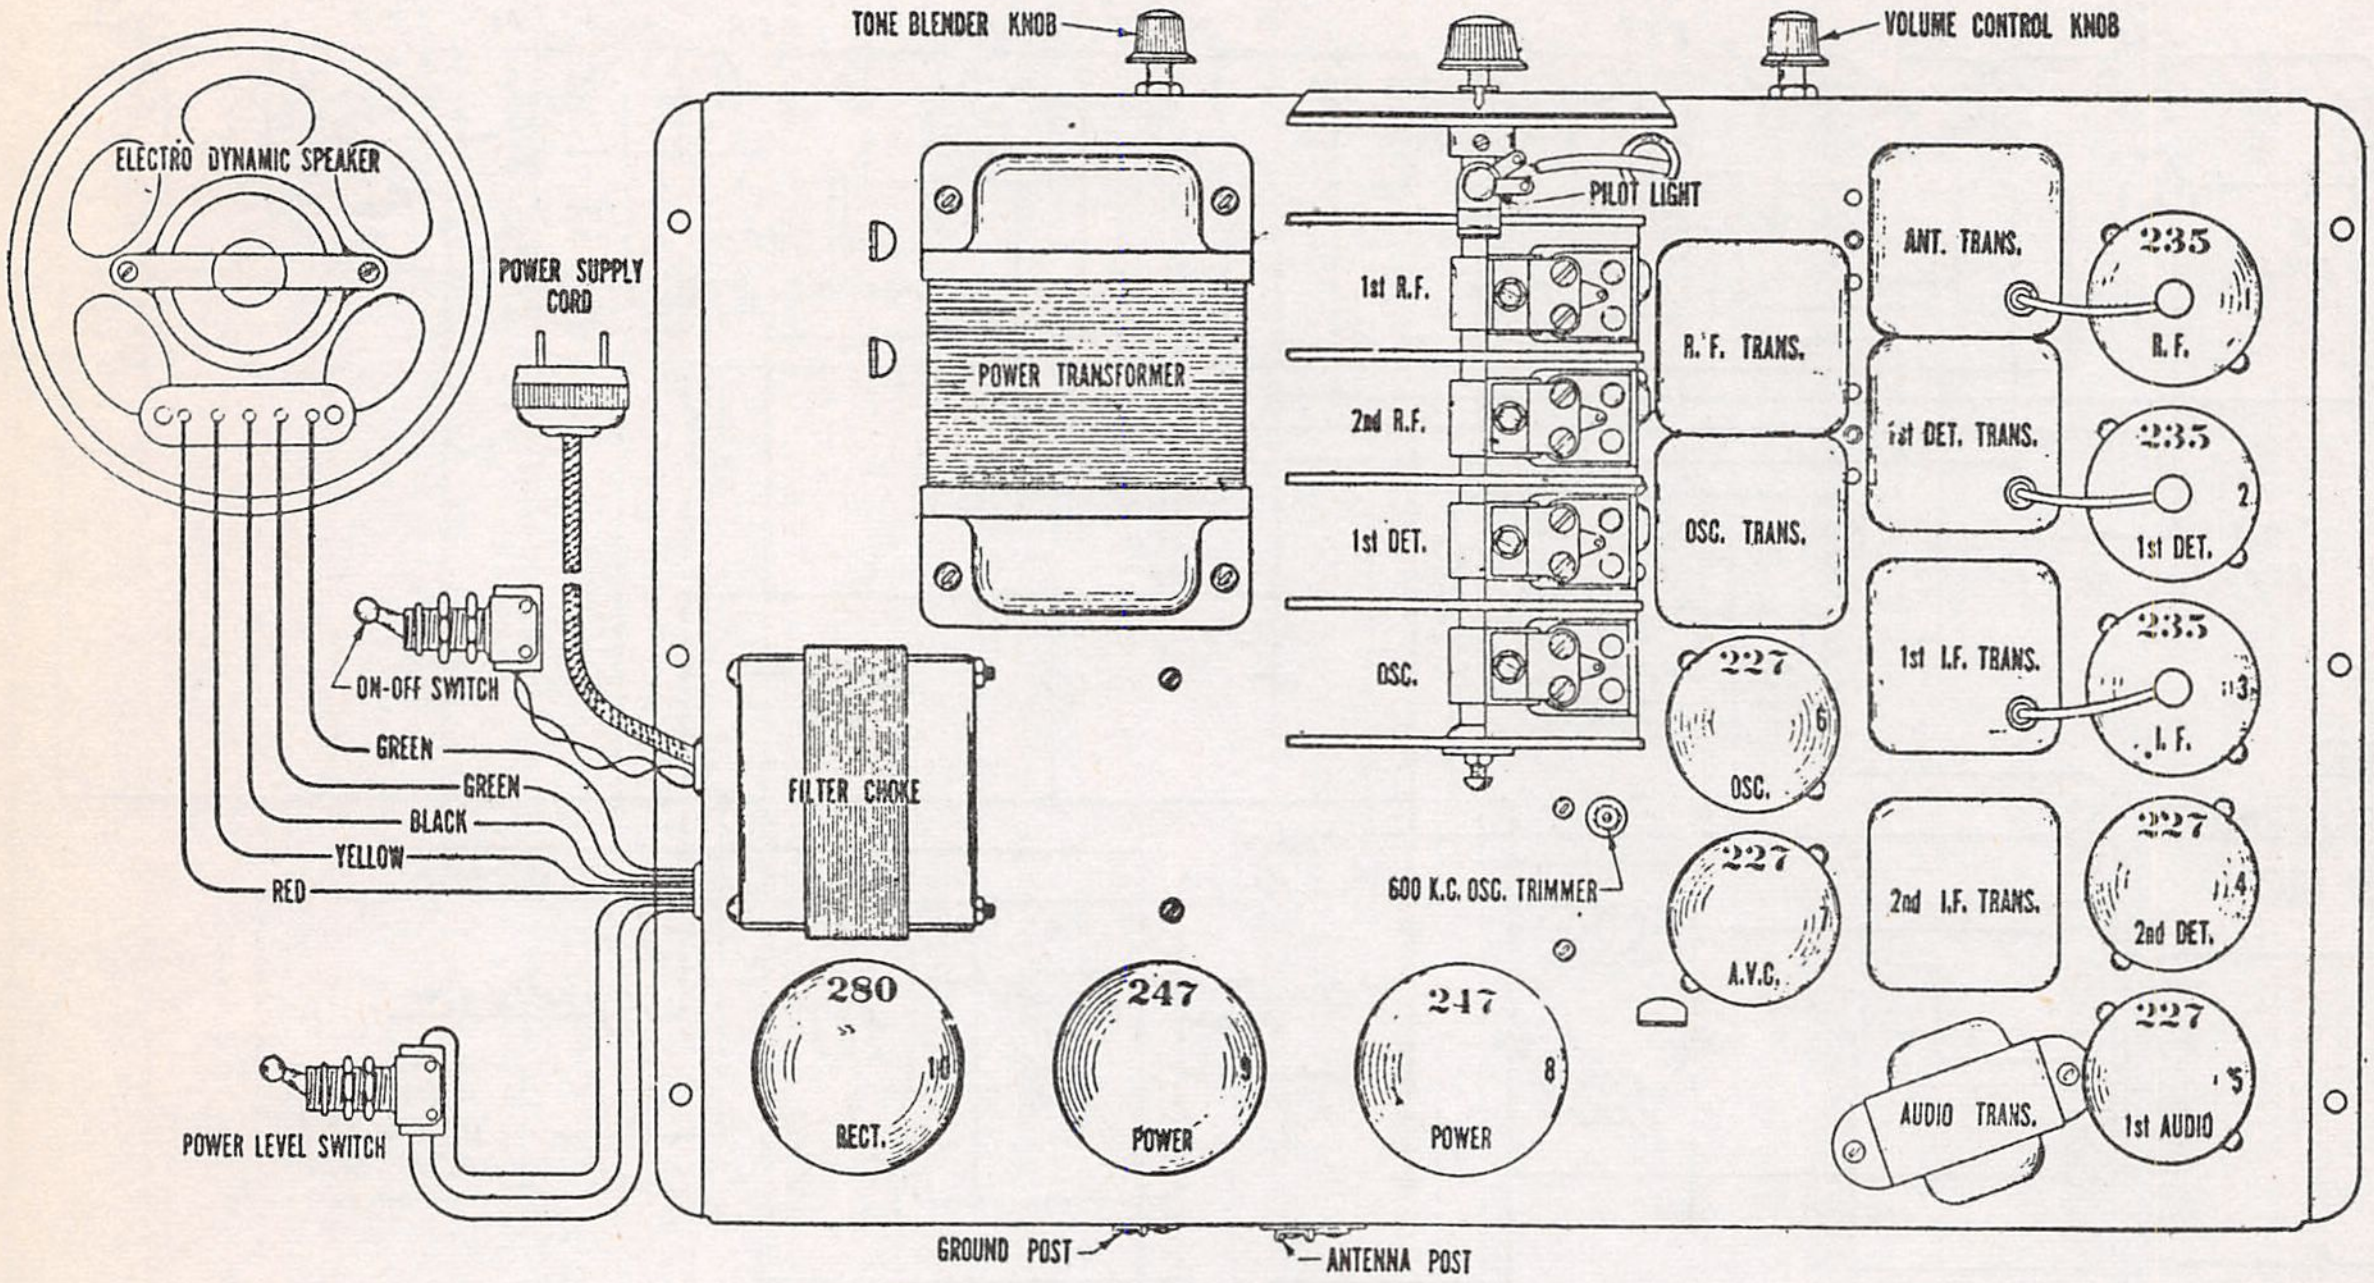
TONE BLENDER KNOB
VOLUME CONTROL KNOB
ELECTRO DYNAMIC SPEAKER
POWER SUPPLY CORD
PILOT LIGHT
POWER TRANSFORMER
1st R.F.
2nd R.F.
1st DET.
OSC.
R. F. TRANS.
OSC. TRANS.
ANT. TRANS.
1st DET. TRANS.
1st I.F. TRANS.
2nd I.F. TRANS.
235
R.F.
235
2
1st DET.
235
3
I. F.
227
4
2nd DET.
227
5
1st AUDIO
227
6
OSC.
227
7
A.V.C.
ON-OFF SWITCH
GREEN
GREEN
BLACK
YELLOW
RED
FILTER CHOKE
600 K.C. OSC. TRIMMER
280
10
RECT.
247
9
POWER
247
8
POWER
AUDIO TRANS.
POWER LEVEL SWITCH
GROUND POST
ANTENNA POST

Automatic Volume Control

The automatic volume control as used in this receiver varies the signal strength by changing the bias voltage of the R. F. and I. F. 235 tubes. A 227 tube is used as the A. V. C. tube. Plate, cathode and grid circuits of this tube are connected to the voltage divider resistor as shown in Fig. 1 to secure the required plate and grid voltage. In the plate circuit of this tube is a 200,000 ohm resistor. The grid circuits of the R. F. and I. F. tubes are connected to the plate of the A. V. C. tube through a 10,000 ohm resistor. The cathodes of these two tubes are connected through the 250 ohm biasing resistor to the other end of this 200,000 ohm resistor in the plate circuit (power level switch on "H" power). The grid of the A. V. C. tube is connected to the plate of the I. F. 235 tube through a .0005 condenser. The A. V. C. tube has an initial bias of 20 volts and under conditions of no signal, no plate current flows in this tube. However, when an A. C. voltage of 15 or greater is applied to the grid circuit of the A. V. C. through the .0005 coupling condenser, plate current flows and a drop is established across the 200,000 ohm resistor. This lowers the voltage of the R. F. and I. F. grids, increasing the bias and decreasing the sensitivity in proportion to the strength of the signal being received. The higher the A. C. voltage applied to the A. V. C. grid the greater the drop across the 200,000 ohm resistor and the higher the bias voltage. For weak signals, therefore, the A. V. C. does not affect the bias and maximum sensitivity is obtained, while for strong signals the bias is increased and a corresponding reduction in sensitivity effected.

Servicing

The usual checking of wiring and soldered connections and checking of resistors and condensers for opens, shorts, grounds and wrong value also apply, of course, to the Super-heterodyne. In working on the receiver care should be taken that the I. F. plate and grid leads are not bent too close to the chassis as the capacity to the ground will be excessively high. Note that the R. F. and I. F. control grids are not at ground potential and a slight shock can be obtained between the grid caps of these tubes and the chassis. Do not get the antenna lead near the 2nd detector as a harmonic of the signal in the 2nd detector plate circuit may feed into the antenna system and beat with the R F. signal causing an audible whistle.

A good check to determine if the oscillator is working is to read the voltage across the 50,000 ohm resistor. This will vary between the limits as shown in the voltage chart for the oscillator bias, depending on the frequency to which the receiver is tuned.

In order to provide satisfactory tracking with the R. F. and first detector tuned circuits the oscillator is provided with a 600 K. C. and a 1400 K. C. trimmer condenser. The 1400 K. C. trimmer condenser is located on top of the tuning condenser and is connected across the oscillator tuning condenser. The 600 K. C. trimmer condenser is across the 550 Mmf. fixed condenser and the adjusting screw is in back of the tuning condenser on top of the chassis.

The I. F. transformers are small universal wound coils mounted on tubing. The I. F. tubing condensers are small mica condensers. The coil tubing and condensers are mounted on porceain bases and are enclosed in metal cans located on top of the chassis. The adjusting screws of the four I. F. tuning condensers are reached from the bottom of the chassis.

MODEL 1500
(27-W,15000)
Collegian

MONTGOMERY-WARD & CO.

Models 27W, 27WX, 1500, 15000, (1930)

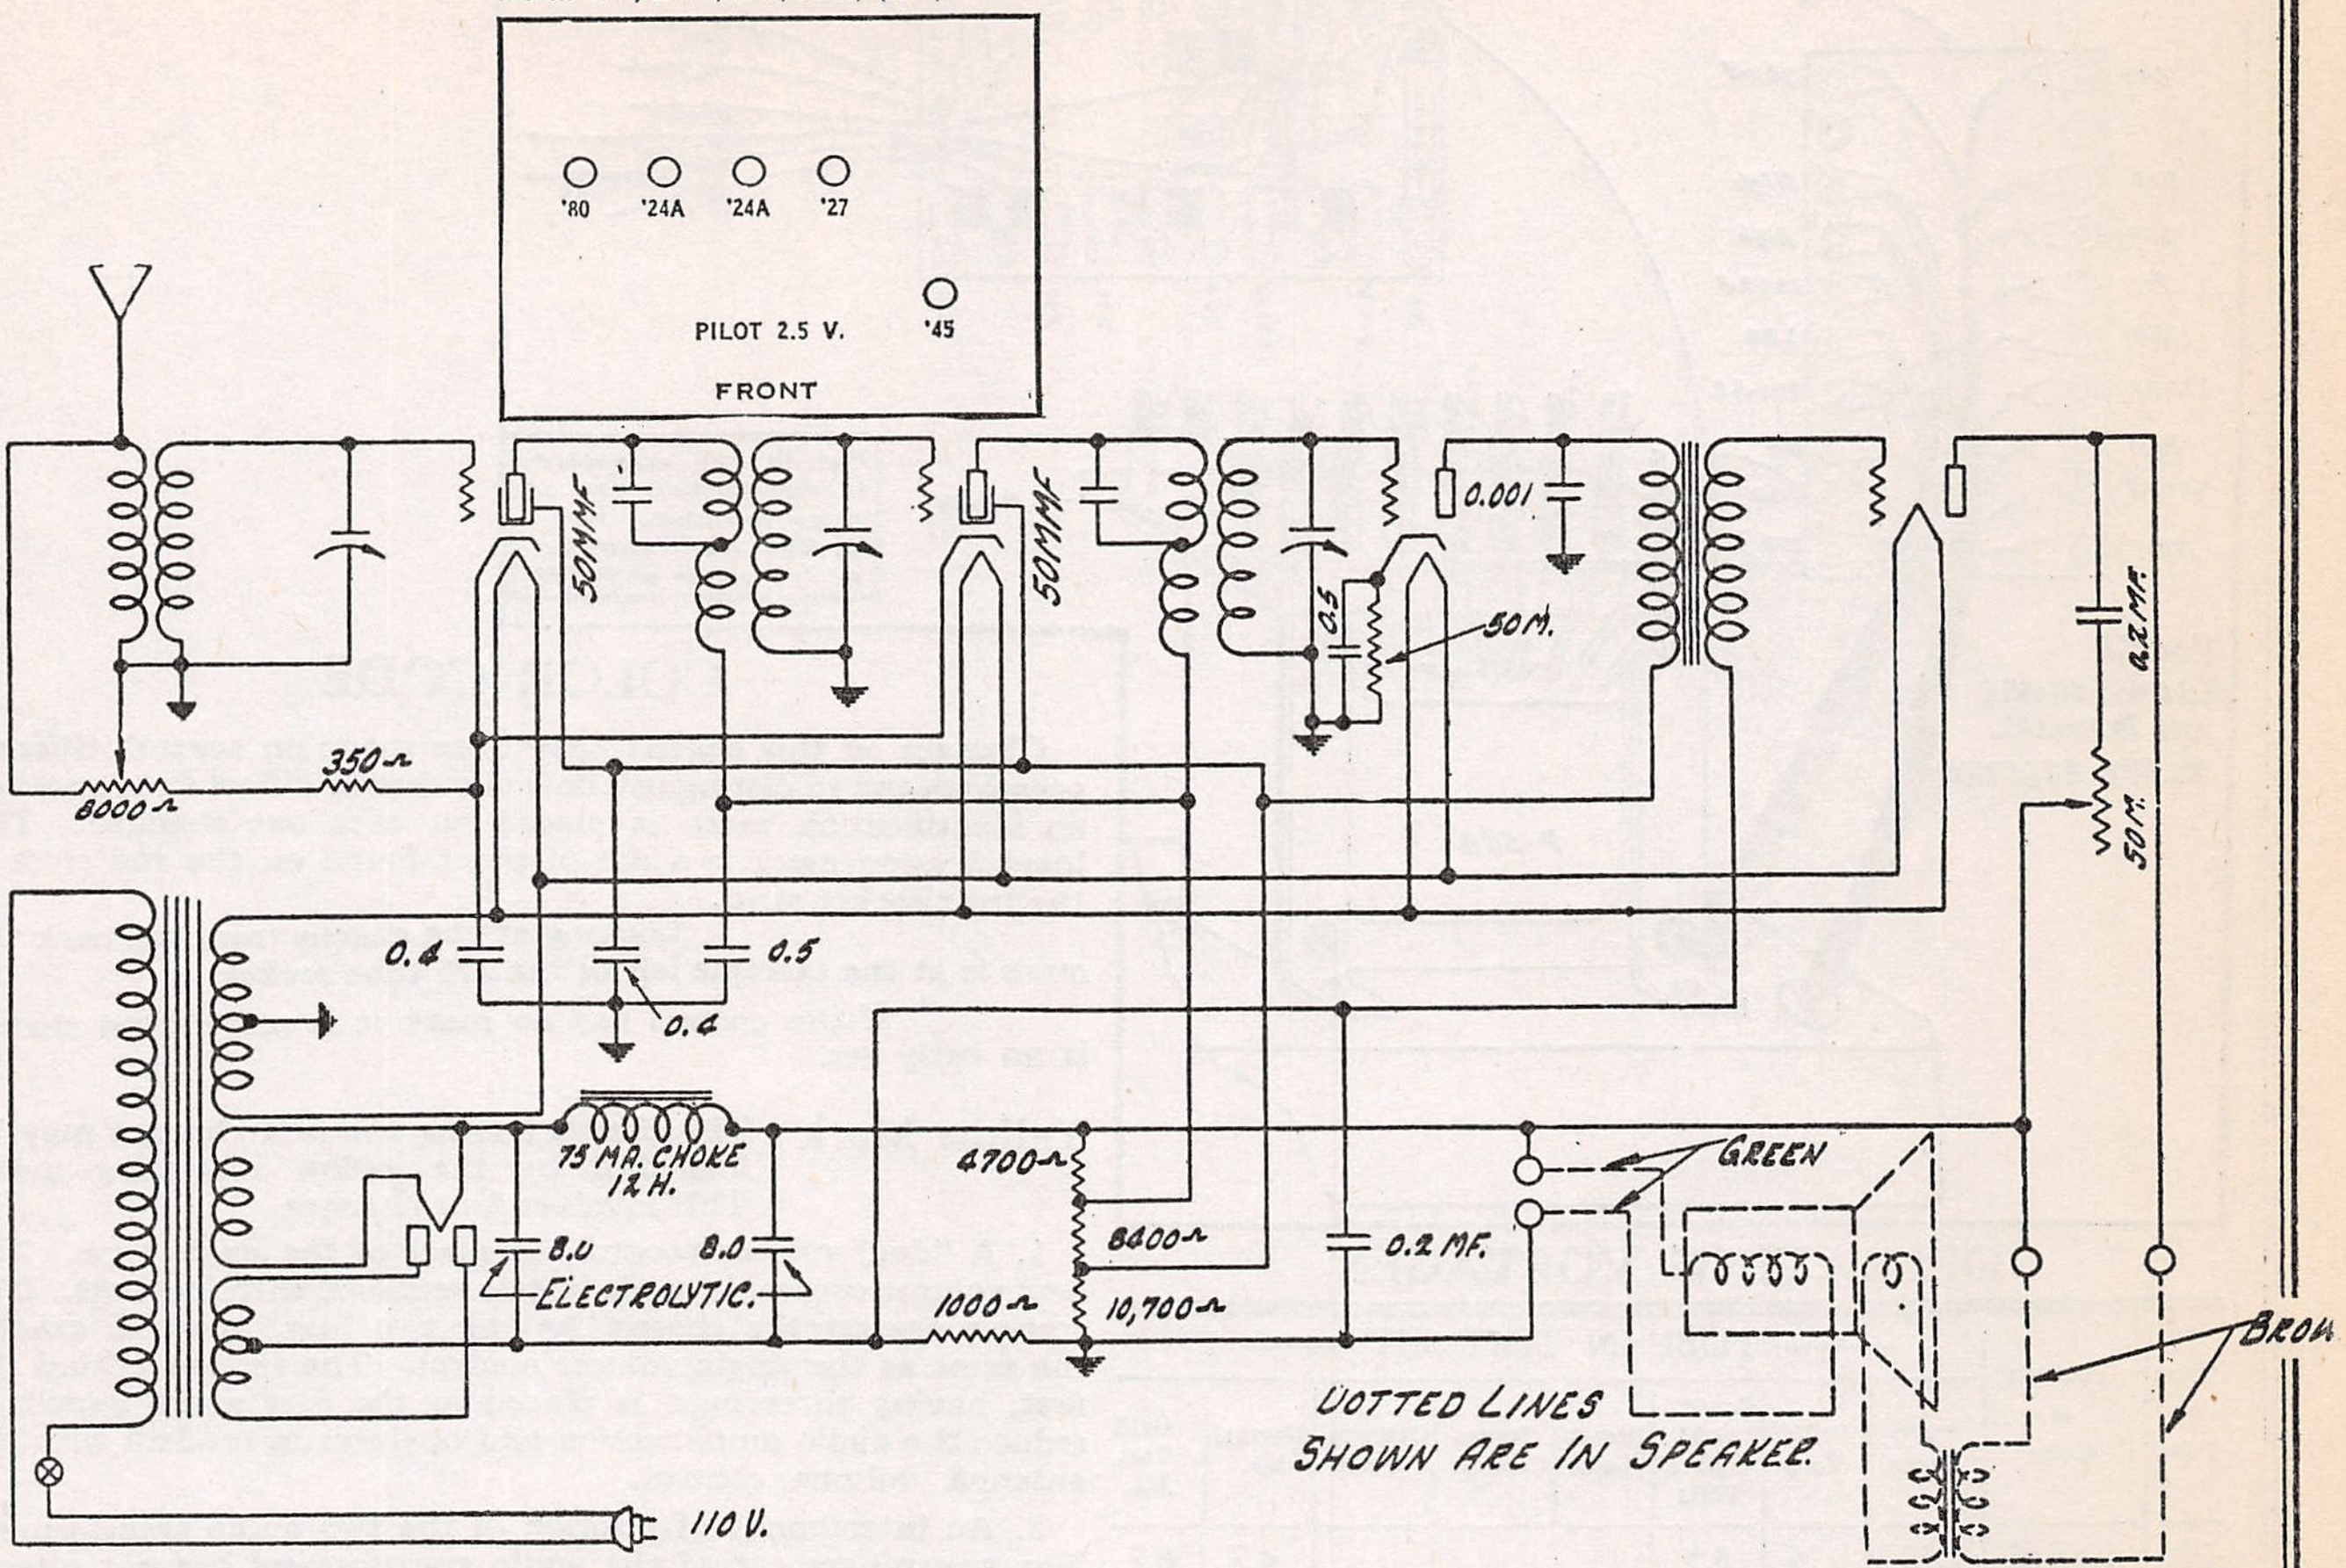

The 27W Chassis uses the following tubes:

- 2—224's as R.F. Amplifiers,
- 1—227 as Detector,
- 1—245 as Audio Amplifier,
- 1—280 as Rectifier.

The two stages of screen grid R.F. amplification in conjunction with the tuned antenna stage of this chassis give a sensitivity averaging 10 Microvolts per meter while the 227 power detector used with the single stage high gain audio provides good power output, with excellent tone quality.

Volume Control

The 8000 ohm volume control is connected across the antenna and ground of the input stage. The movable arm of the volume control is connected to ground in series with the cathodes of the two 224 R.F. amplifier tubes. This method of connection gives us a dual volume control action, which varies the signal input to the antenna stage as well as the grid bias on the first two R.F. tubes. The volume control may be easily tested by taking the voltage readings from the cathode of the 224's to the ground connection and at the same time, varying the volume control. This will give an indication if the volume control is controlling the grid bias properly.

The R.F. transformers in the R.F. stages are the same as those used in the 32W and 26W chassis. The cathode, screen grid, and plates of the R.F. tubes are bypassed by the 964A bypass condenser.

The Power Detector

The power detector receives its grid bias from the voltage drop across the 50M cathode resistor (Part No. 1892). The plate of the detector is bypassed to ground through the .001 M.F. R.F. plate bypass condenser.

The audio stage consists of a high ratio audio transformer of special design. The secondary of this transformer connects directly to the 245 power tube. The audio transformer may be tested with the continuity meter of your set checker. Disconnect the primary and secondary leads from the chassis before taking continuity measurements. Test the primary and secondary for opens or shorts, and also take continuity readings between the primary and secondary terminals, and ground. There should be no readings between these terminals and the core of the transformer or chassis ground.

The tone control is connected across the primary of the output push pull transformer, and consists of 50M variable resistance in series with a .2 M.F. fixed condenser. A short in this condenser will short circuit the primary of the speaker transformer and no signals will reach the loud speaker.

The power supply of the 27W chassis is similar to that used in some of our other chassis previously described.

Two electrolytic condensers are used in the filter circuit and care must be taken that these chassis are always kept in an upright position to prevent any small amount of electrolytic leakage in the filter condensers. It is a good idea to inspect the electrolytic condensers, upon delivery of any sets, and to wipe the top perfectly dry.

25 Cycle Chassis No. 27WX

This chassis uses a 25 cycle power transformer. Otherwise the constants of the circuit are the same.

MODEL 2655,AE-10
Voltage-Data
Two Types

MONTGOMERY-WARD & CO.

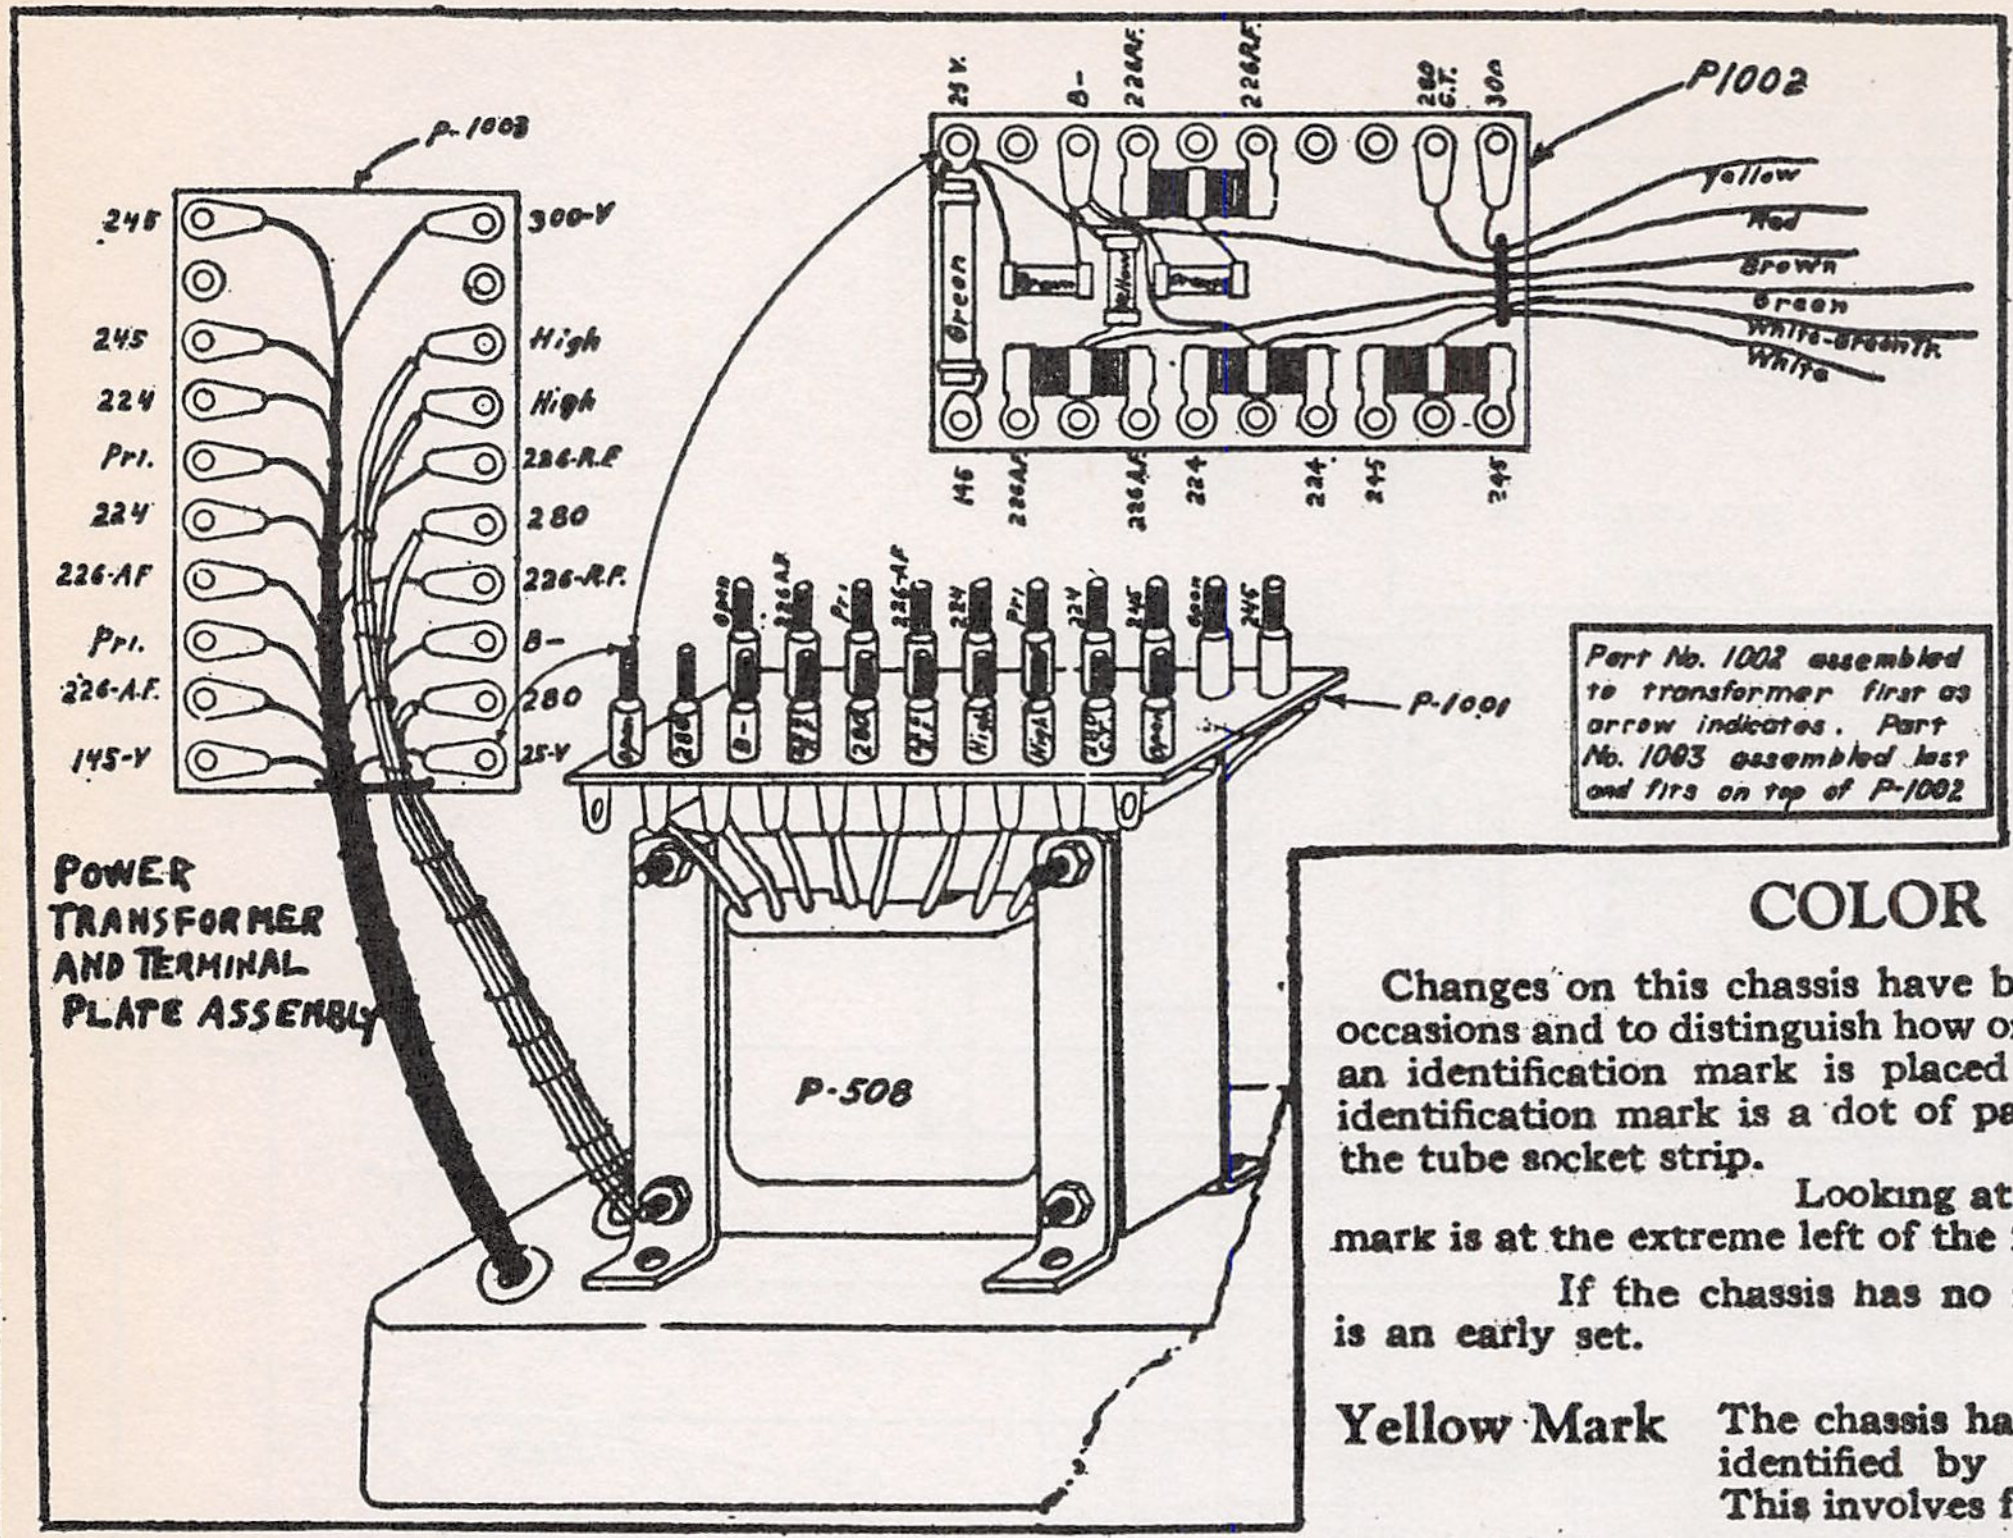

Part No. 1002 assembled to transformer first as arrow indicates. Part No. 1003 assembled last and fits on top of P-1002

OPERATING VOLTAGES

Type of Tube	Position of Tube	TUBE IN TEST SET "A" Volts	"B" Volts	Control Grid ("C") Volts	Screen Volts	Screen Current	Cathode Volts	Normal Ma.	Grid Test Ma.
226	1st R.F.	1.35	116	8.5				4.7	8.7
226	2nd R.F.	1.35	116	8.5				4.7	8.7
226	3rd R.F.	1.35	116	8.5				4.7	8.7
226	4th R.F.	1.35	116	8.5				4.7	8.7
224	Det.	2.2	80	1.3	15		—	—	—
226	1st A.F.	1.4	110	1.0 ← READING LOW DUE TO RESISTANCE COUPLING				4.0	5.0
245	2nd A.F.	2.2	232	42				27	32
245	2nd A.F.	2.2	232	42				27	32
280	Rect.	4.6						84	

Line Voltage During Test—115 Volts

REVISION OF OPERATING VOLTAGES

Type of Tube	Position of Tube	TUBE IN TEST SET "A" Volts	"B" Volts	Control Grid ("C") Volts	Screen Volts	Screen Current	Cathode Volts	Normal Ma.	Grid Test Ma.
224	Det.	2.2	75	1.3	15				
226	1st A.F.	1.4	77	1.0				4	5

200, 291, 292, 9950 (A.C.)

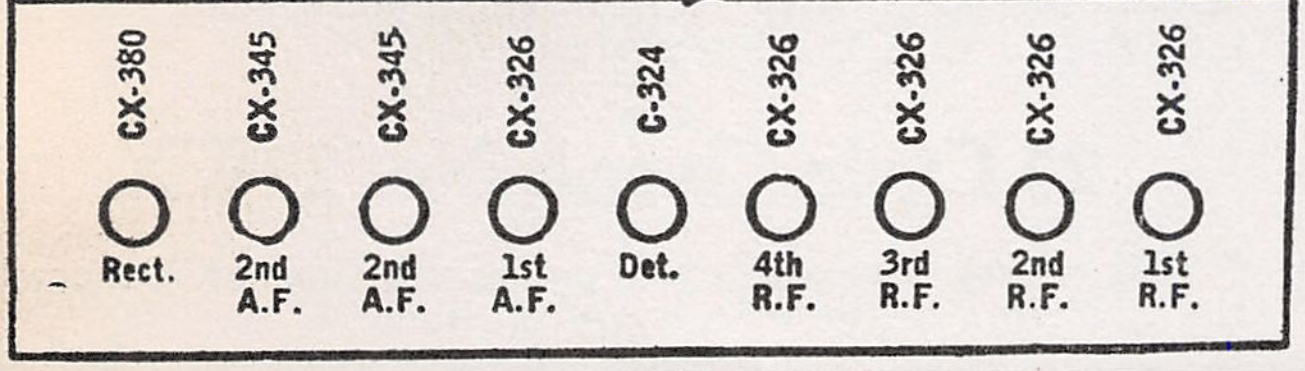

COLOR CODE

Changes on this chassis have been made on several different occasions and to distinguish how one chassis differs from another, an identification mark is placed on each one changed. This identification mark is a dot of paint found on the end rivet of the tube socket strip.

Looking at the chassis from the back the mark is at the extreme left of the 226 tube socket

If the chassis has no mark it is understood that it is an early set.

Yellow Mark The chassis having the first changes may be identified by the yellow indicating mark. This involves four changes.

1. A "dual volume control" in place of the single type. The new volume control is made in two sections, with five lugs. The section nearest the chassis, having two lugs, operates exactly the same as the single volume control. The section behind the first, having three lugs, is placed in the first audio circuit to reduce the audio amplification and operates in tandem with the antenna volume control.

2. An interchange of position of the two audio transformers The re-arrangement of the audio transformers has not altered their connections in the circuit.

3. An addition of a "dual half microfarad condenser" and two carbon resistors in the "B" circuit of the detector and first audio tubes. The 40,000 ohm black resistor with one section of the dual condenser is placed in the detector circuit (224) and the 15,000 ohm blue resistor with the other section of the dual condenser is placed in the first audio circuit (226). You will note that the yellow and blue leads in the cable connecting to the terminal strip have been interchanged.

4. A change in the location of the grounding of No. 1 lug on the condenser block. This lug is now grounded to the condenser case with a short piece of bare wire.

Red Mark (Serial Number 39,000-42,999) All chassis having a red mark on the rivet of the tube socket strip have all of the changes mentioned above and in addition, have a one-tenth microfarad condenser connected from ground to one side of the 110 volt line A peculiarity that may be experienced by the addition of this condenser is a loud hum on every station tuned in only when the antenna wire coming from the set is connected to ground. This can be eliminated by reversing the plug in the socket. Also be sure your antenna is not grounded, either by some other set being connected to your aerial or through any other means.

Green Mark (Serial Number 43,000 and up) All Chassis with a green mark on the rivet of the tube socket strip contain the above changes and in addition have a change in the "combination phonograph switch" circuit. This changed circuit makes use of only the audio system of the set for phonograph reproduction, whereas the original circuit included the detector tube

The Phonograph, Radio, On, and Off positions of the switch are the same as in the early sets. To obtain maximum volume and best tone quality a pick-up coupling transformer should be used to match the pick-up used.

MONTGOMERY-WARD & CO.

MODEL 2655, AE-10
Schematic
1st & 2nd Types

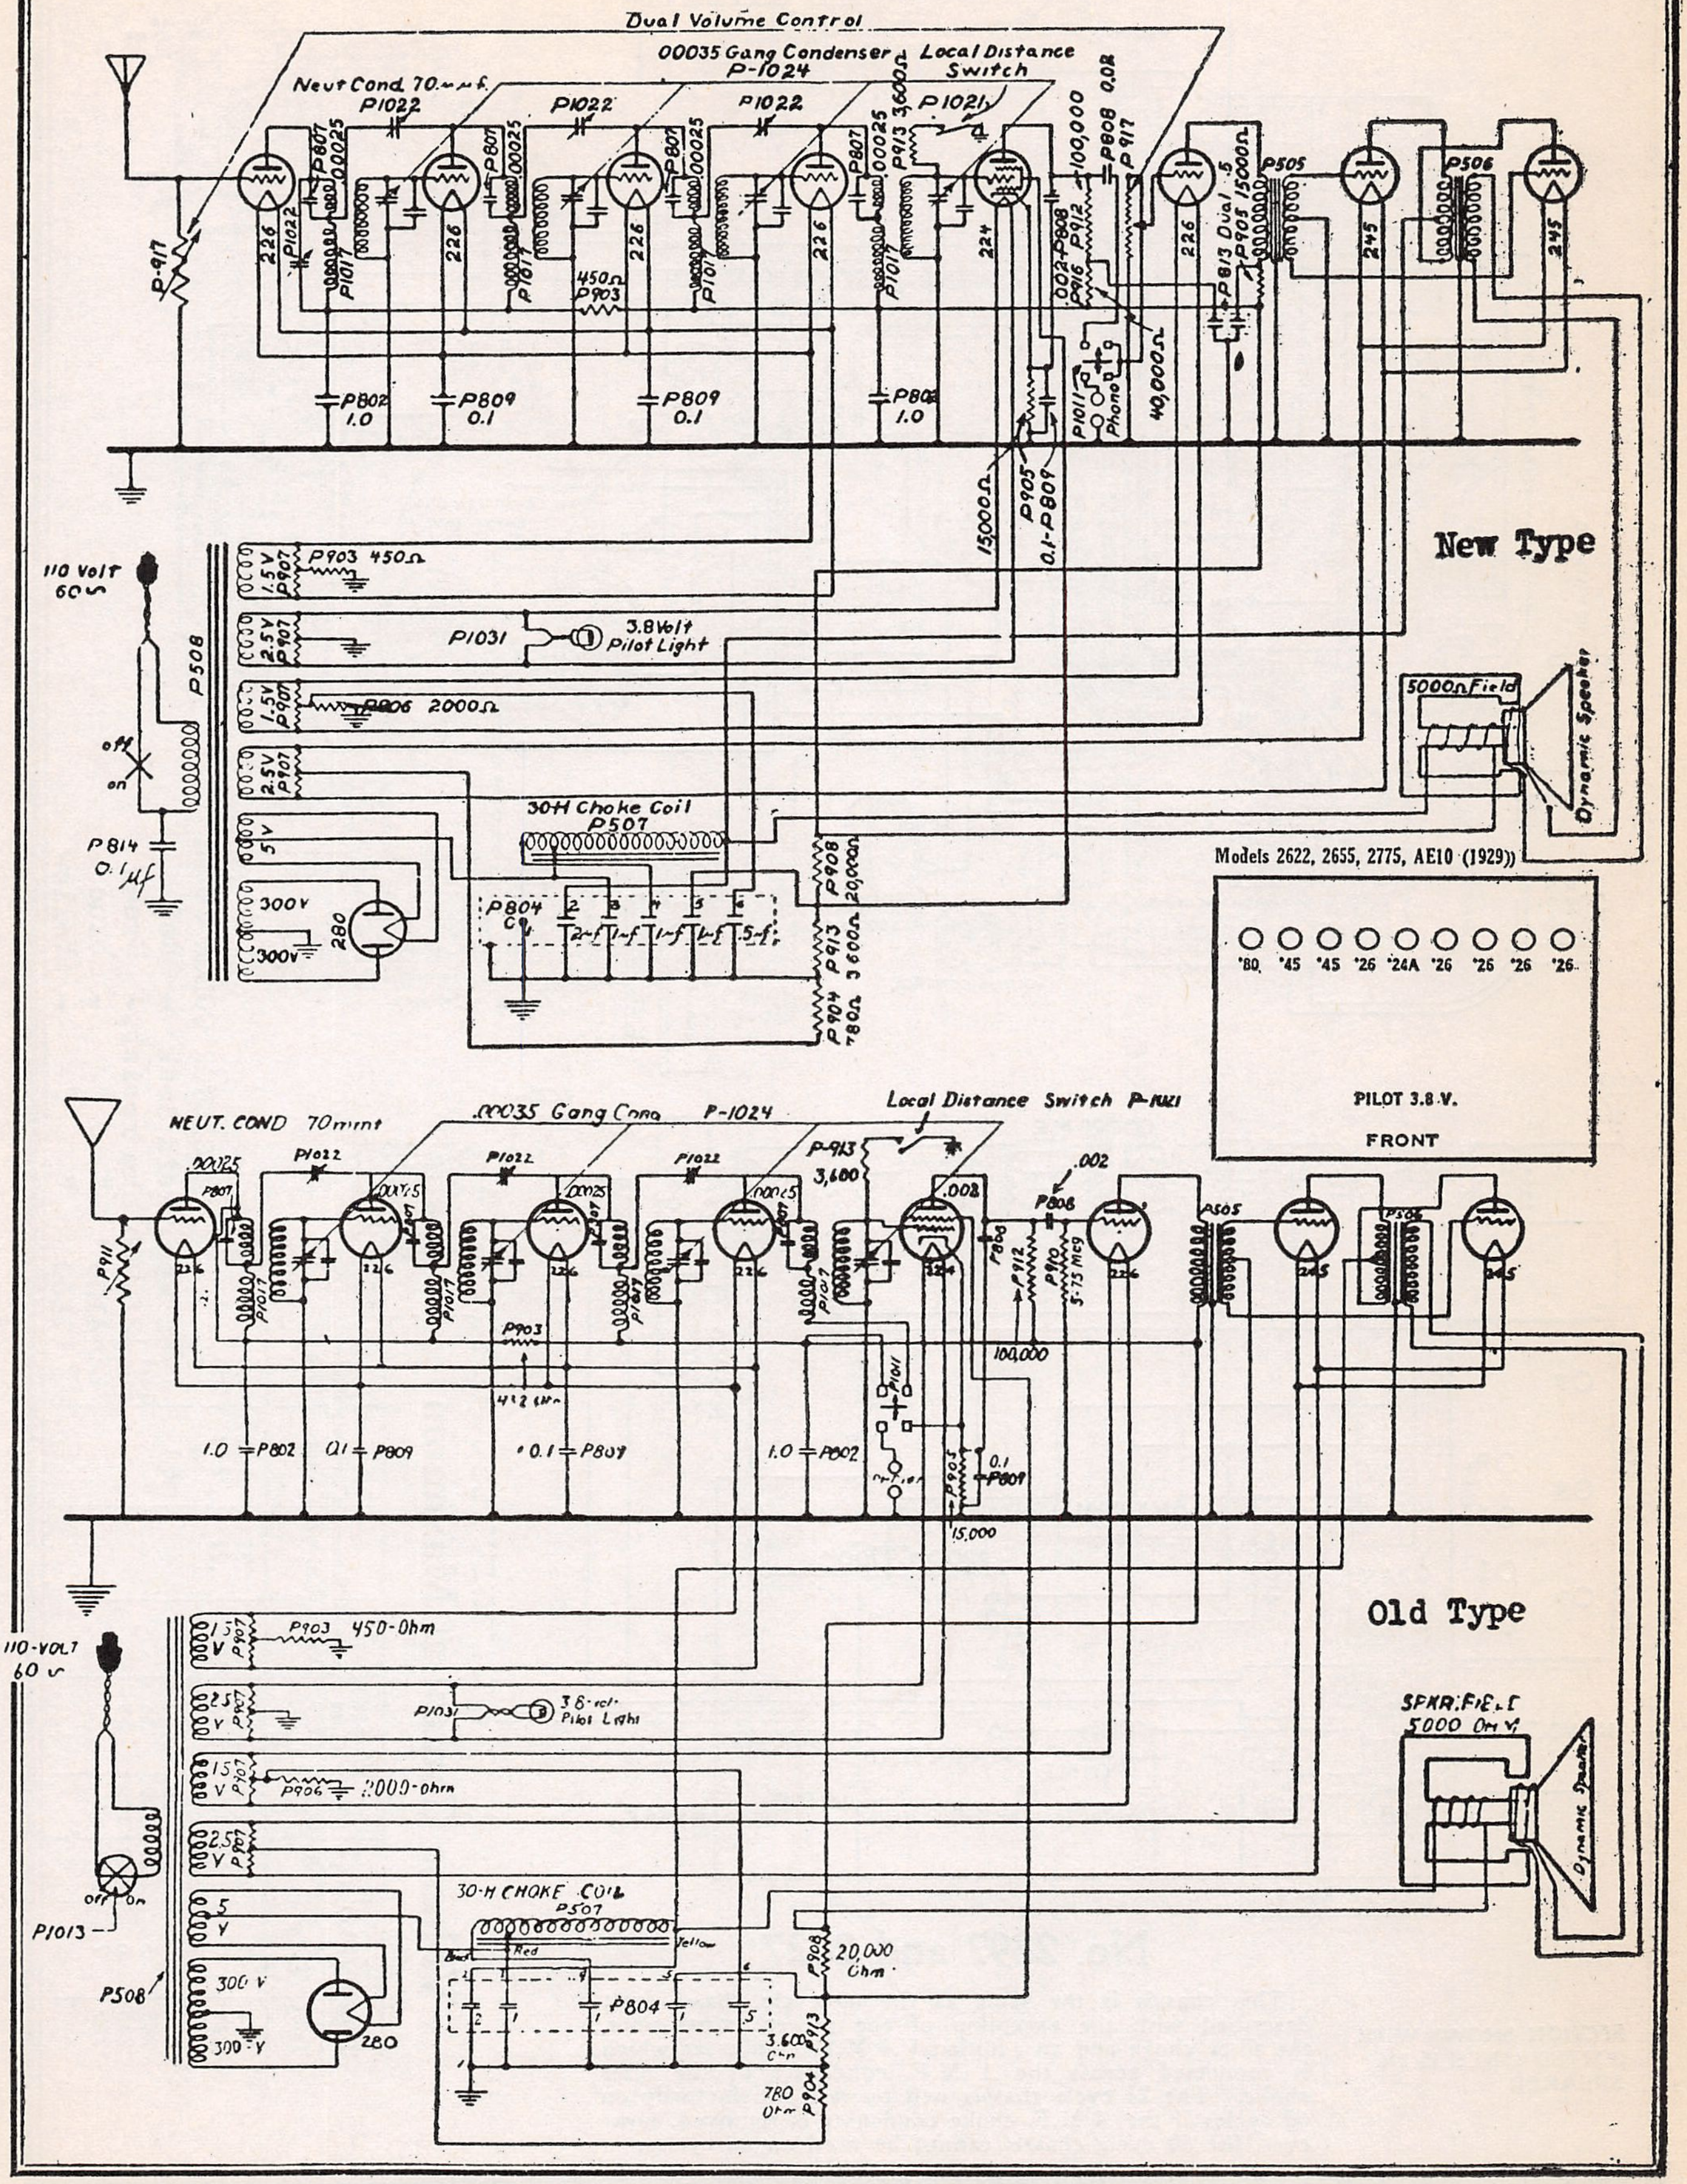
Dual Volume Control
00035 Gang Condenser P-1024
Local Distance Switch
Neut Cond. 70 mmf
P1022
P1021
P807
00025
P1017
P917
226
224
245
P913 3600Ω
100,000
P908 0.0R
P912
P916
.002-P908
P813 Dual .5
P905 15000Ω
P505
P506
450Ω P903
P802 1.0
P809 0.1
40,000Ω
P1011
Phono
15000Ω
P905
0.1-P809
110 Volt 60~
P508
off
on
P814 0.1 mf
1.5V P907
P903 450Ω
2.5V P907
P1031
3.8 Volt Pilot Light
P906 2000Ω
5V
300V
280
30H Choke Coil P507
P804
2-f 1-f 1-f 1-f 5-f
P908 20,000Ω
P913 3600Ω
P904 780Ω
5000Ω Field
Dynamic Speaker
New Type
'80 '45 '45 '26 '24A '26 '26 '26 '26
PILOT 3.8 V.
FRONT
NEUT. COND 70 mmf
.00035 Gang Cond P-1024
Local Distance Switch P-1021
P-913 3,600
.002
.008
P808
P911
P910 5-15 meg
100,000
P903 4.2 ohm
1.0 P802
.01 P809
0.1 P809
15,000
110-VOLT 60~
P1013
P508
P903 450-Ohm
P1031 3.8 Volt Pilot Light
P906 2000-ohm
30-H CHOKE COIL P507
Yellow
Red
Black
P804
P908 20,000 Ohm
P913 3,600 Ohm
P904 780 Ohm
SPKR. FIELD 5000 OHMS
Dynamic Speaker
Old Type

Models 2622, 2655, 2775, AE10 (1929)

MONTGOMERY-WARD & CO.

MODEL 2822,2827
Balboa
2895,2897
DeSoto

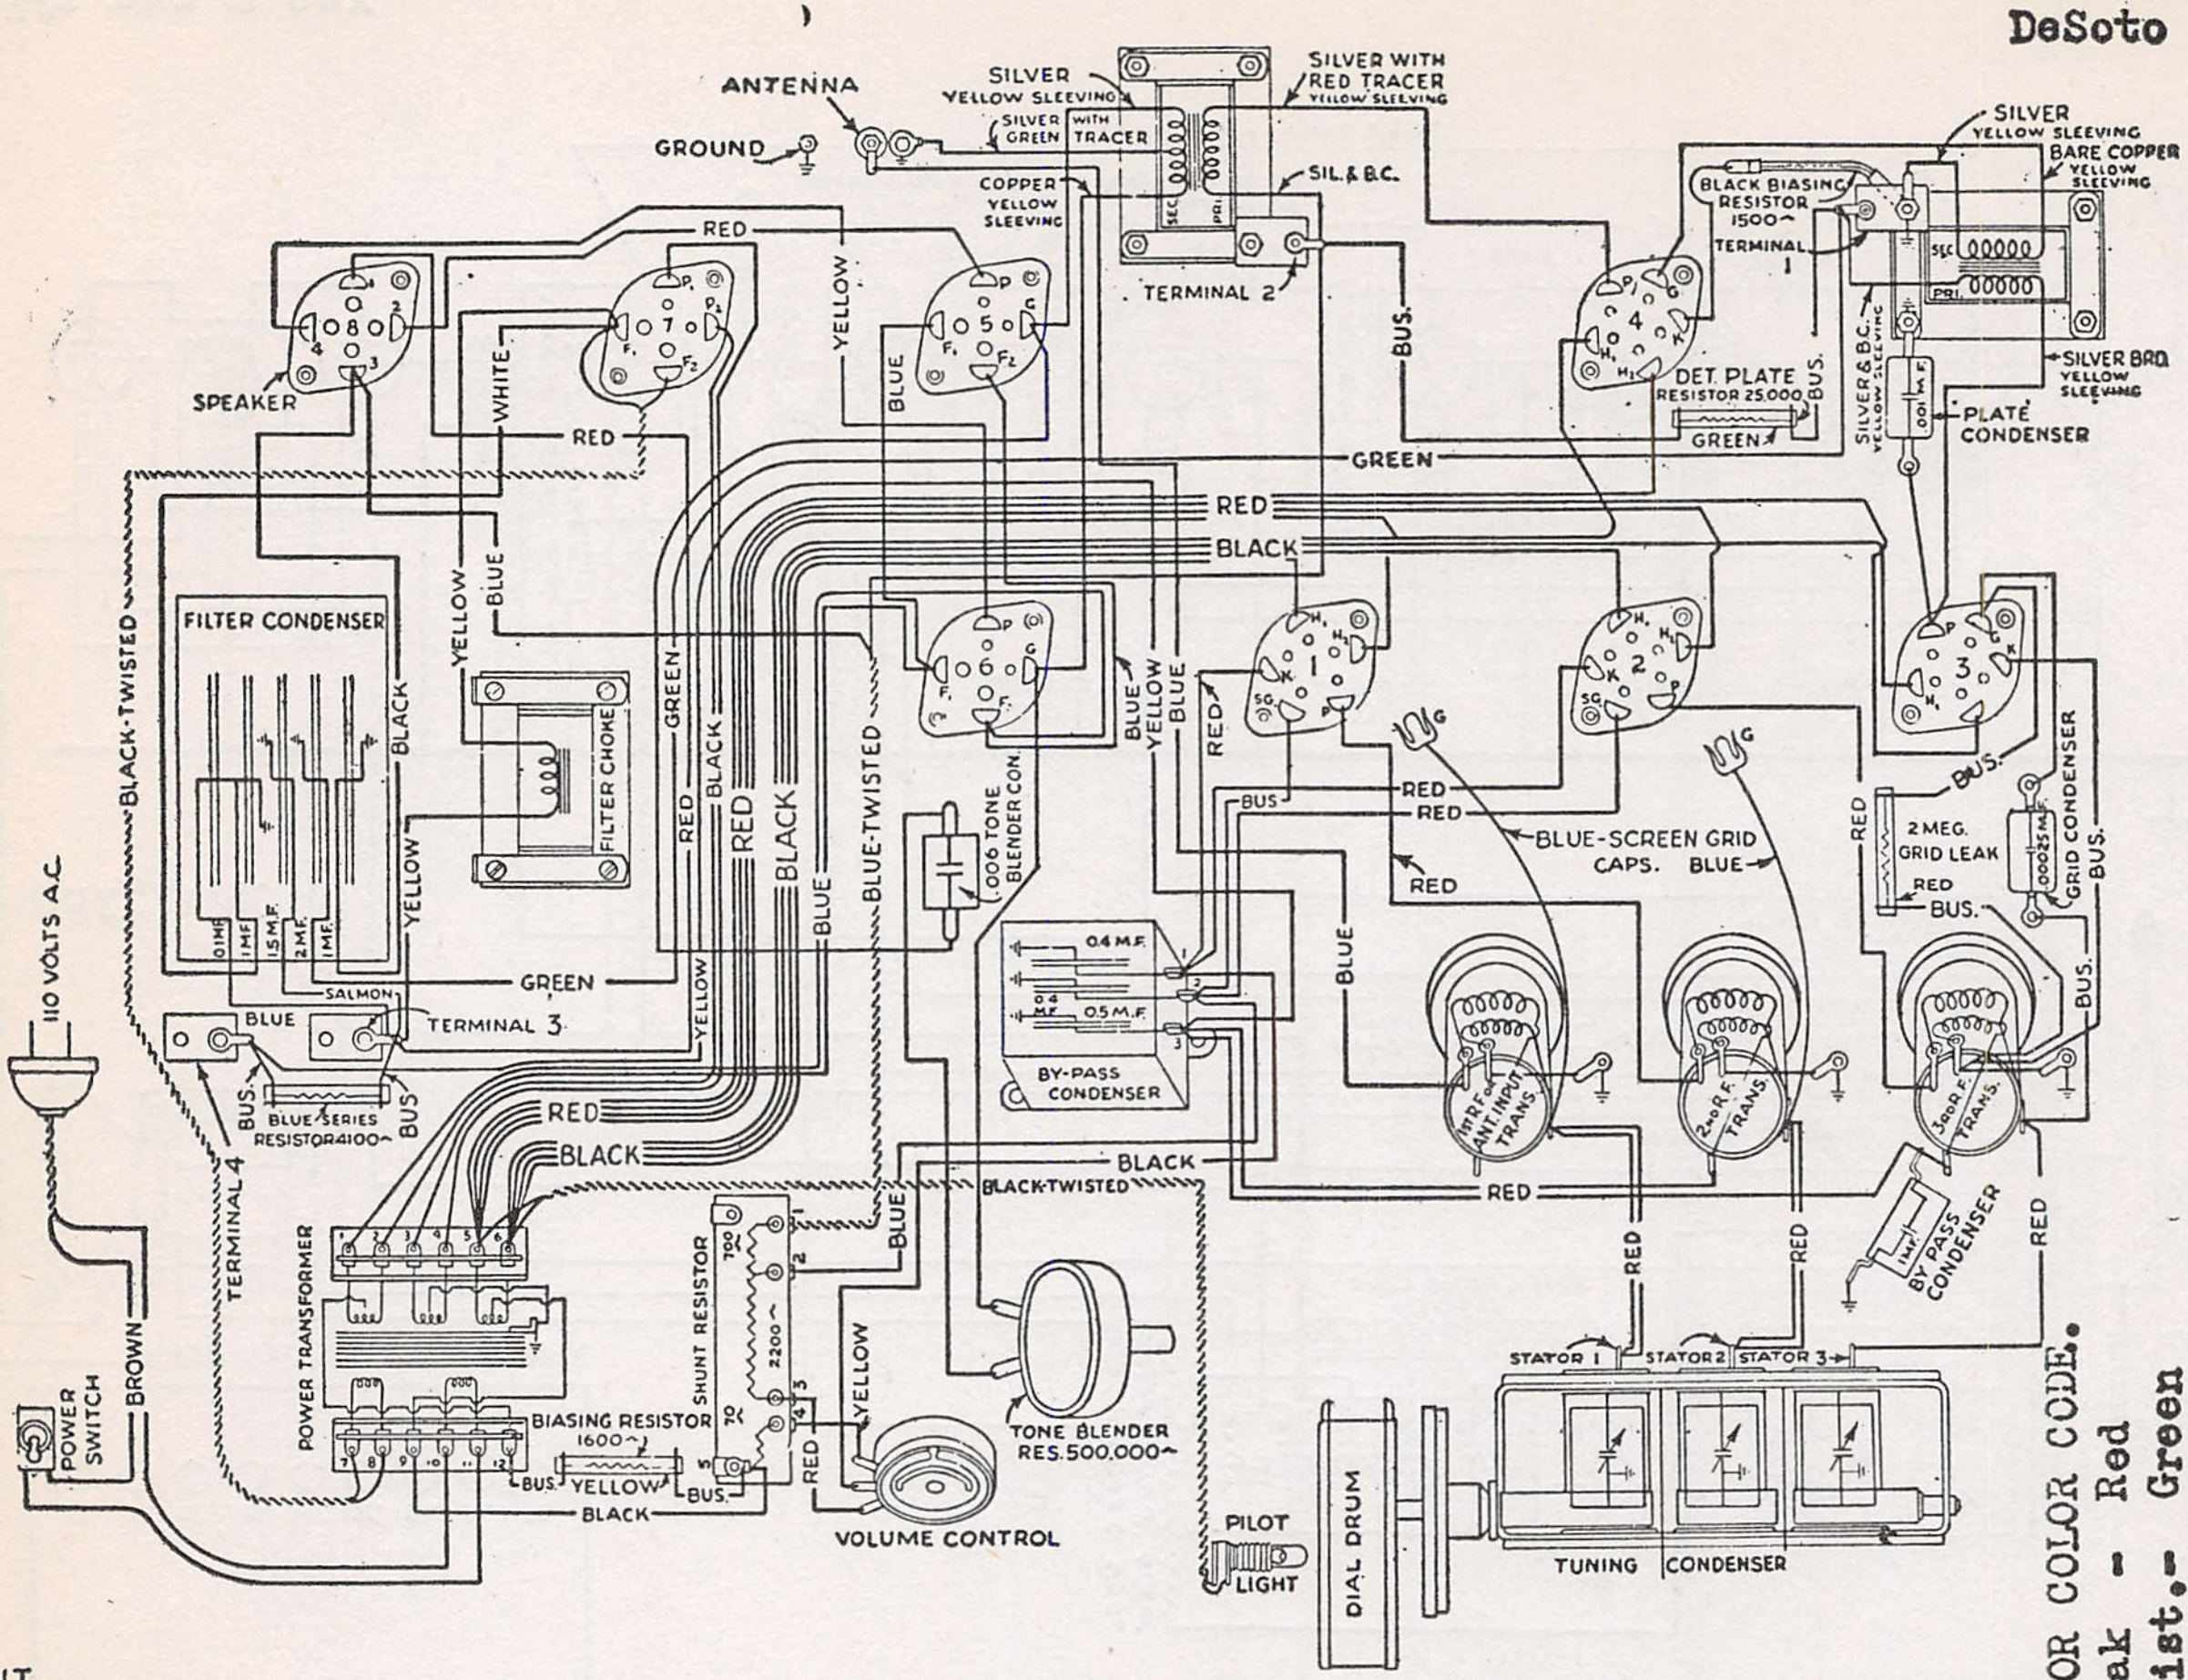
ANTENNA
GROUND
SILVER YELLOW SLEEVING
SILVER WITH GREEN TRACER
SILVER WITH RED TRACER YELLOW SLEEVING
COPPER YELLOW SLEEVING
SIL.& B.C.
TERMINAL 2
SPEAKER
RED
WHITE
YELLOW
BLUE
BUS.
GREEN
BLACK
BLACK-TWISTED
FILTER CONDENSER
FILTER CHOKE
110 VOLTS A.C.
.01MF. 1MF. 1.5M.F. 2M.F. 1MF.
SALMON
TERMINAL 3
BLUE SERIES RESISTOR 4100~
TERMINAL 4
POWER TRANSFORMER
POWER SWITCH
BROWN
BIASING RESISTOR 1600~
SHUNT RESISTOR 700 2200~ 70
BLUE-TWISTED
.006 TONE BLENDER CON.
.04 M.F. .05 M.F.
BY-PASS CONDENSER
TONE BLENDER RES. 500,000~
VOLUME CONTROL
PILOT LIGHT
DIAL DRUM
STATOR 1 STATOR 2 STATOR 3
TUNING CONDENSER
BLUE-SCREEN GRID CAPS.
1st R.F. OR ANT. INPUT TRANS.
2nd R.F. TRANS.
3rd R.F. TRANS.
BY PASS CONDENSER
BLACK BIASING RESISTOR 1500~ TERMINAL 1
DET. PLATE RESISTOR 25,000
SILVER YELLOW SLEEVING
BARE COPPER YELLOW SLEEVING
SILVER BRD YELLOW SLEEVING
PLATE CONDENSER
2 MEG. GRID LEAK
.00025 M.F. GRID CONDENSER
SEC PRI

RESISTOR COLOR CODE.
2 Meg. grid leak - Red
25,000 ohm resist.- Green
4100 " " - Blue
1600 " " - Yellow

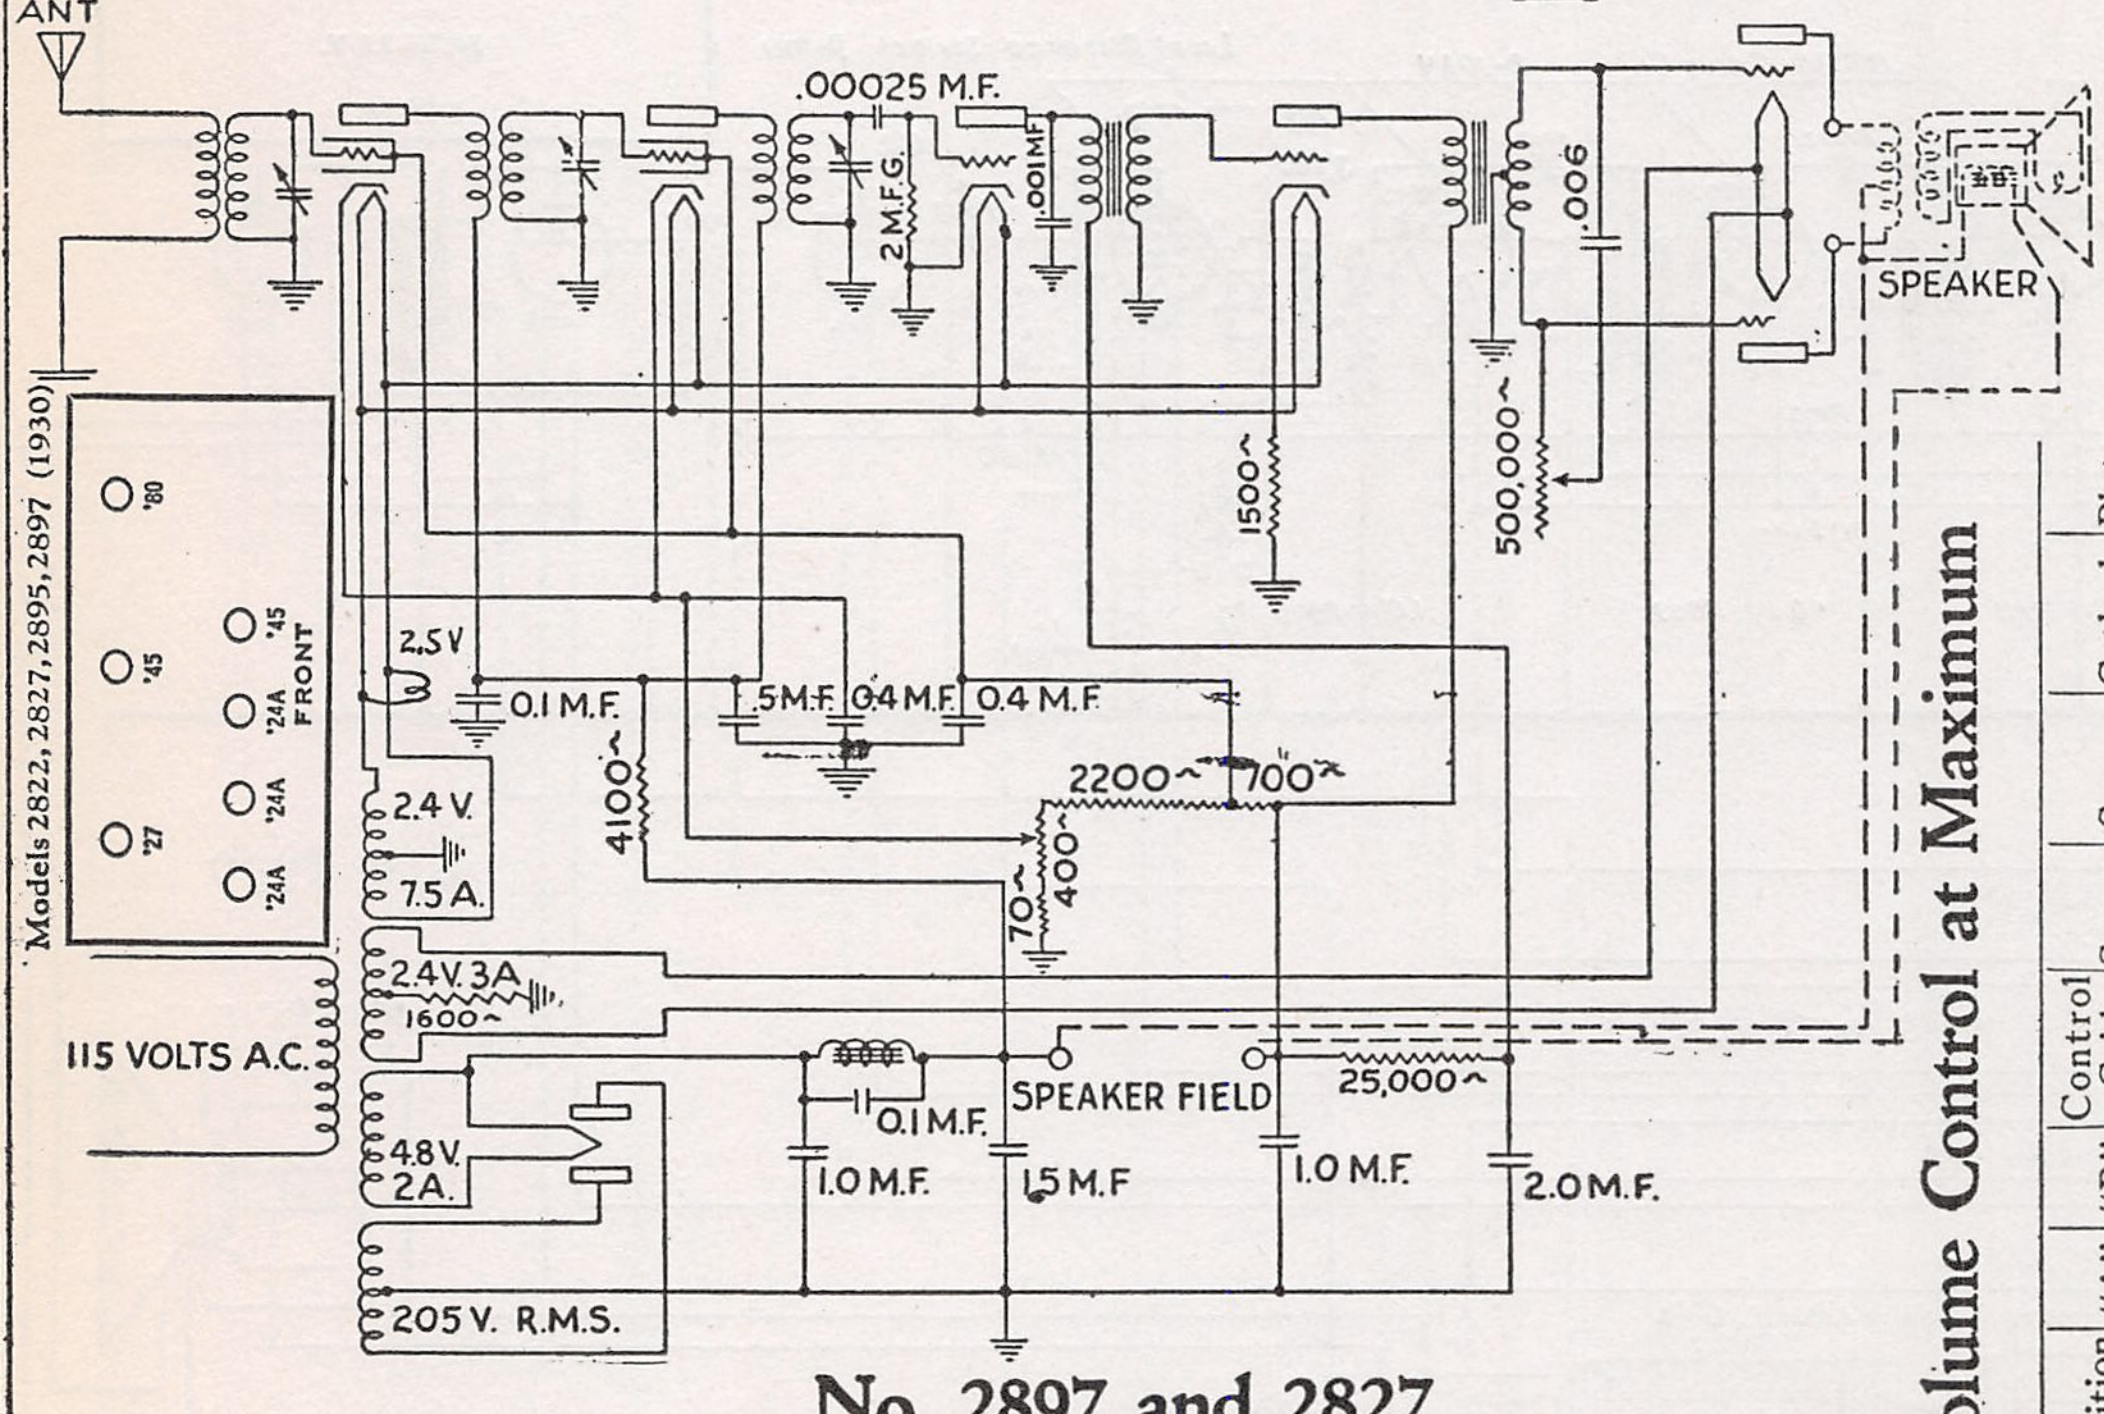
ANT
.00025 M.F.
2M.F.G.
.001MF.
.006
SPEAKER
1500~
500,000~
Models 2822, 2827, 2895, 2897 (1930)
'80
'45
'45
'27
'24A
'24A
'24A
FRONT
2.5V
0.1 M.F.
.5M.F.
.04M.F.
0.4 M.F.
4100~
2200~
700~
400~
70~
2.4V.
7.5A.
2.4V.3A
1600~
115 VOLTS A.C.
0.1 M.F.
SPEAKER FIELD
25,000~
4.8V. 2A.
1.0 M.F.
1.5 M.F
1.0 M.F.
2.0 M.F.
205V. R.M.S.

SECTION SHOWN WITH DOTTED LINES IS IN SPEAKER

No. 2897 and 2827

This chassis is the same as the 60 cycle chassis just described with the exception of the power transformer, the filter choke and an additional .4 M.F. condenser which is connected across the .1 M.F. condenser of the filter choke. The 25 cycle chassis will operate satisfactorily on 60 cycles if the .4 M.F. choke condenser is removed, how ever, the 60 cycle chassis cannot be used on 25 cycles.

Volume Control at Maximum

Type of Tube	Position of Tube	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current	Cathode Volts	Plate MA
224	1	2.36	173	2.72	86	.87	2.72	3.0
224	2	2.31	173	2.72	86	.21	2.72	3.0
227	3	2.28	38	0			0	2.8
227	4	2.28	100	6.1			6.1	3.25
245	5	2.29	169	38				11.3
245	6	2.29	169	38				11.3
280	7	4.61						34.5 Per Plate

MODEL 11,000
Challanger
Schematic
Two Types

MONTGOMERY-WARD & CO.

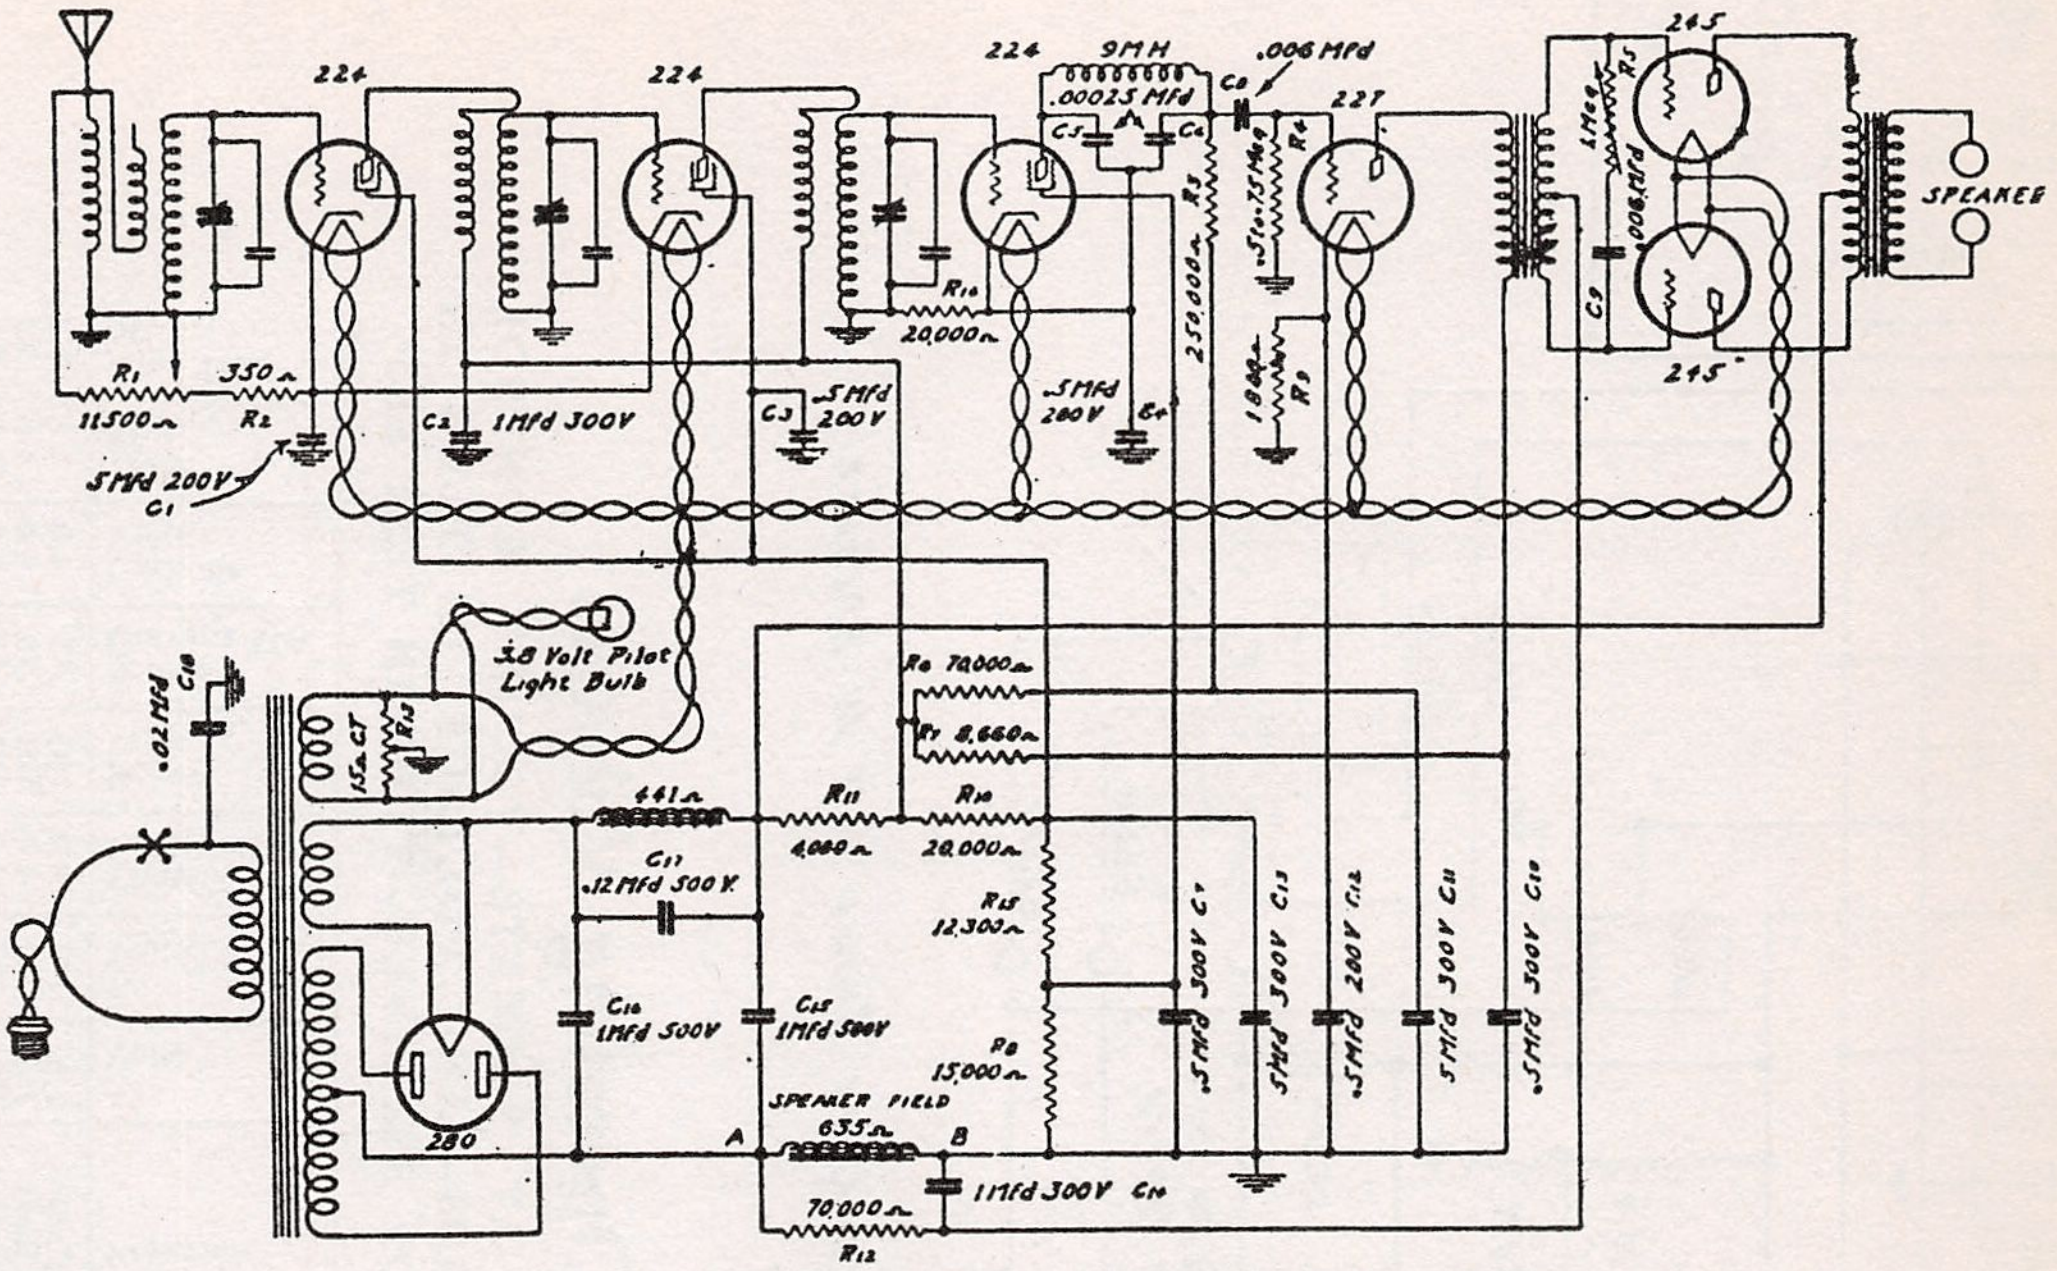
224
224
224
9MH
.006 Mfd
.00025 Mfd
227
245
245
SPEAKER
R1 11500Ω
350Ω R2
.5Mfd 200V C1
C2 1Mfd 300V
C3 .5Mfd 200V
R10 20,000Ω
.5Mfd 200V
B+
250,000Ω R3
.5 to .75 Meg R4
1800Ω R9
.006 Mfd
3.8 Volt Pilot Light Bulb
.02 Mfd C18
R13
441Ω
C17 .12 Mfd 500V
C16 1Mfd 500V
C15 1Mfd 500V
R11 4000Ω
R10 20,000Ω
R6 70,000Ω
R7 8,650Ω
R15 12,300Ω
R8 15,000Ω
Speaker Field 635Ω
A
B
70,000Ω R12
1Mfd 300V C14
.5Mfd 300V C7
.5Mfd 300V C13
.5Mfd 200V C12
.5Mfd 300V C11
.5Mfd 300V C10
280

Schematic Diagram of Challengers with Serial Number Above A94313.

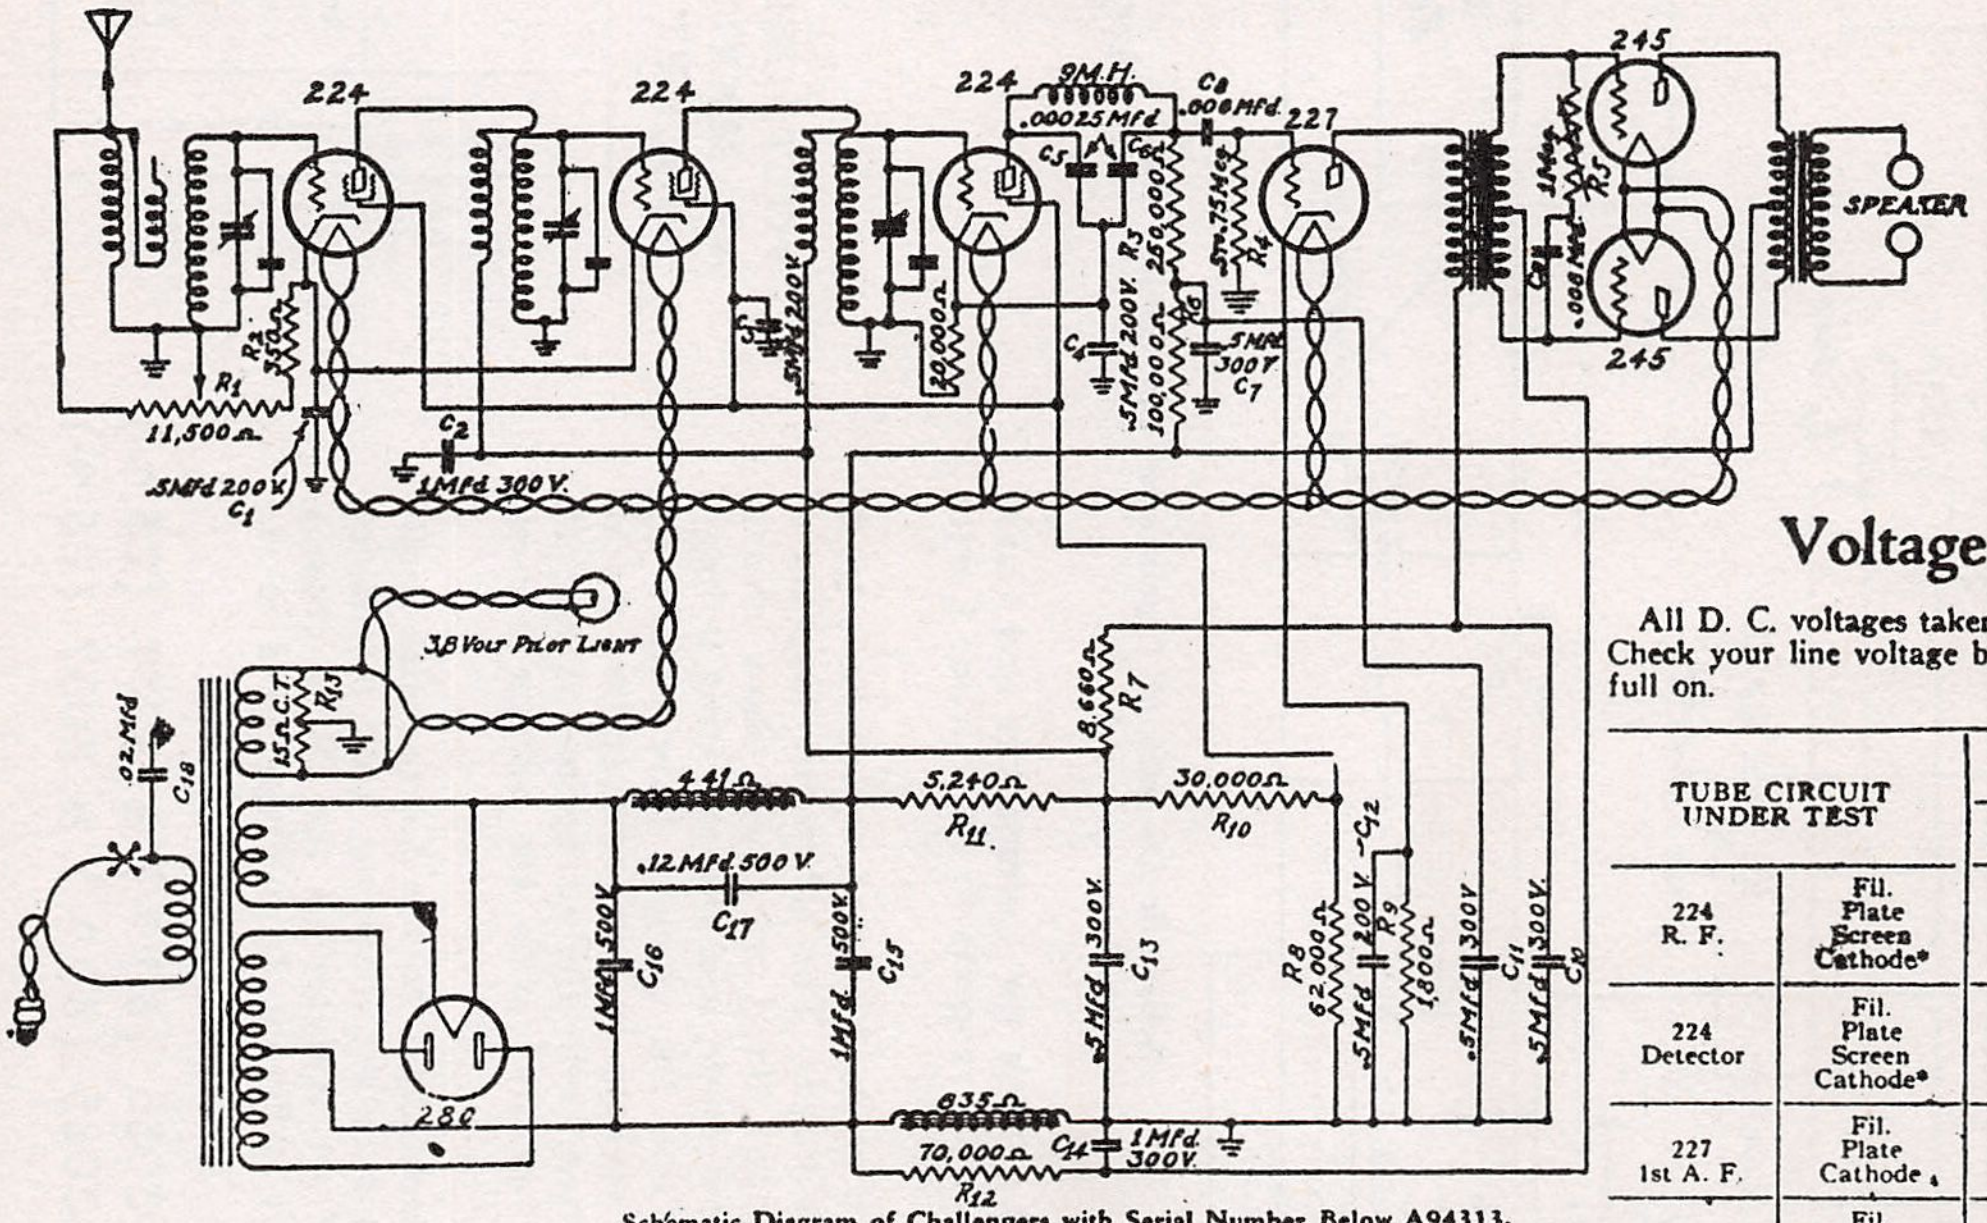
224
224
224
9M.H.
C8 .006 Mfd
.00025 Mfd
227
245
245
SPEAKER
R1
R2
11,500Ω
.5Mfd 200V C1
C2
1Mfd 300V
.5Mfd 200V
20,000Ω
C4 .5Mfd 200V
100,000Ω
R3 250,000Ω
.5 to .75 Meg R4
.5Mfd 300V C7
1 Meg R5
.006 Mfd C9
3.8 Volt Pilot Light
.02 Mfd C18
1.5 A.C.T. R13
8,650Ω R7
441Ω
5,240Ω R11
30,000Ω R10
.12 Mfd 500V C17
1Mfd 500V C16
1Mfd 500V C15
.5Mfd 300V C13
R8 62,000Ω
.5Mfd 200V C12
R9 1,800Ω
.5Mfd 300V C11
.5Mfd 300V C10
635Ω
70,000Ω R12
C14 1Mfd 300V
280

Schematic Diagram of Challengers with Serial Number Below A94313.

Voltage Characteristics

All D. C. voltages taken with a 1,000 ohm per volt voltmeter. Check your line voltage before taking readings. Volume control full on.

TUBE CIRCUIT UNDER TEST		LINE VOLTAGE				
		90 V.	100 V.	110 V.	120 V	130 V.
224 R. F.	Fil.	1.75	1.95	2.17	2.3	2.57
	Plate	130	150	169	183	193
	Screen	68	78	86	94	100
	Cathode*	2.0	2.43	2.83	3.2	3.6
224 Detector	Fil.	1.77	1.97	2.19	2.33	2.6
	Plate	35	40.8	45.5	50.5	55
	Screen	37.5	43	48	52	56.8
	Cathode*	2.55	3.1	3.65	4.2	4.8
227 1st A. F.	Fil.	1.79	1.99	2.22	2.34	2.62
	Plate	95	108	118	122	138
	Cathode	5.7	6.7	7.5	8.4	9.3
245 2nd A. F.	Fil.	1.8	2.0	2.23	2.35	2.62
	Plate	180	210	233	255	280
	Grid	—35	—42.3	—49	—55	—62
280 Rect.	Fil.	3.66	4.1	4.55	4.8	5.35
	Plate Current	54 ma	64 ma	73 ma	82 ma	90 ma

* Control grid voltages on the 224 tubes are measured from cathode to ground.

R.F. Coils

The antenna coil in particular is a departure from the usual performance of antenna stages in other receivers. With the usual commercial type of antenna circuit, a short antenna will detune the antenna stage and reduce the sensitivity of the set accordingly. The antenna stage in this set is so constructed that it will not be affected by short or long antennas to any appreciable extent. The R.F. coils in each stage are marked with a color, according to the group in which they fall, and three coils of the same color are placed in the chassis. This color marking is a streak of paint inside the secondary coil inside the lugs. In ordering coils for replacement, be sure to mention the color of the paint on the coil so that the replacements will be of the same characteristics. If in doubt, return the coils.

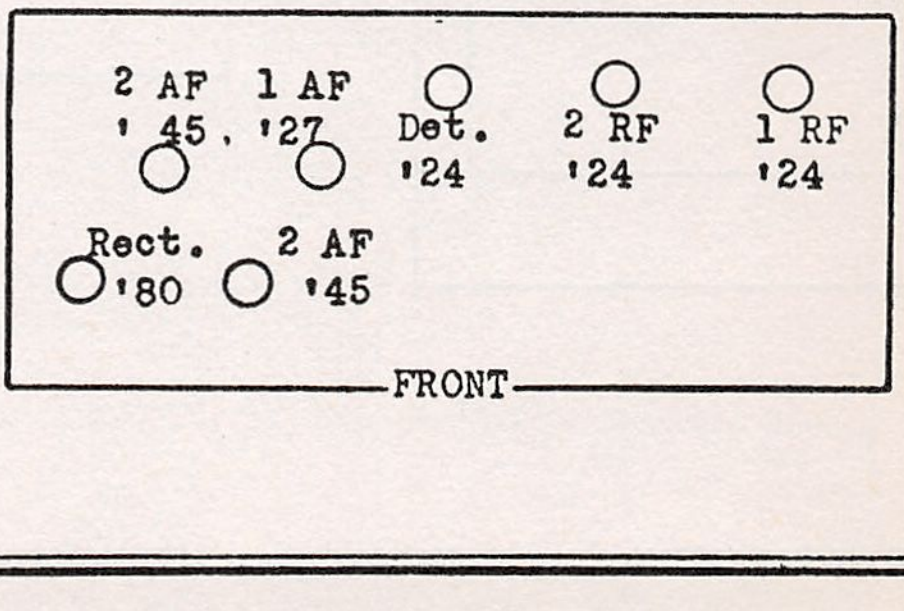
2 AF
'45
1 AF
'27
Det.
'24
2 RF
'24
1 RF
'24
Rect.
'80
2 AF
'45
FRONT

MODEL 14,000
Commander
62,000
Cavalier

MONTGOMERY-WARD & CO.

Models 3145, 14000, 26000 (1930)

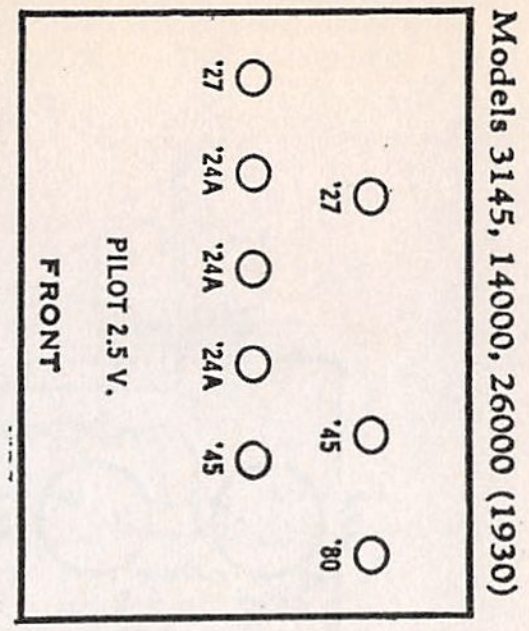
'27
'45
'80
'27
'24A
'24A
'24A
'45
PILOT 2.5 V.
FRONT

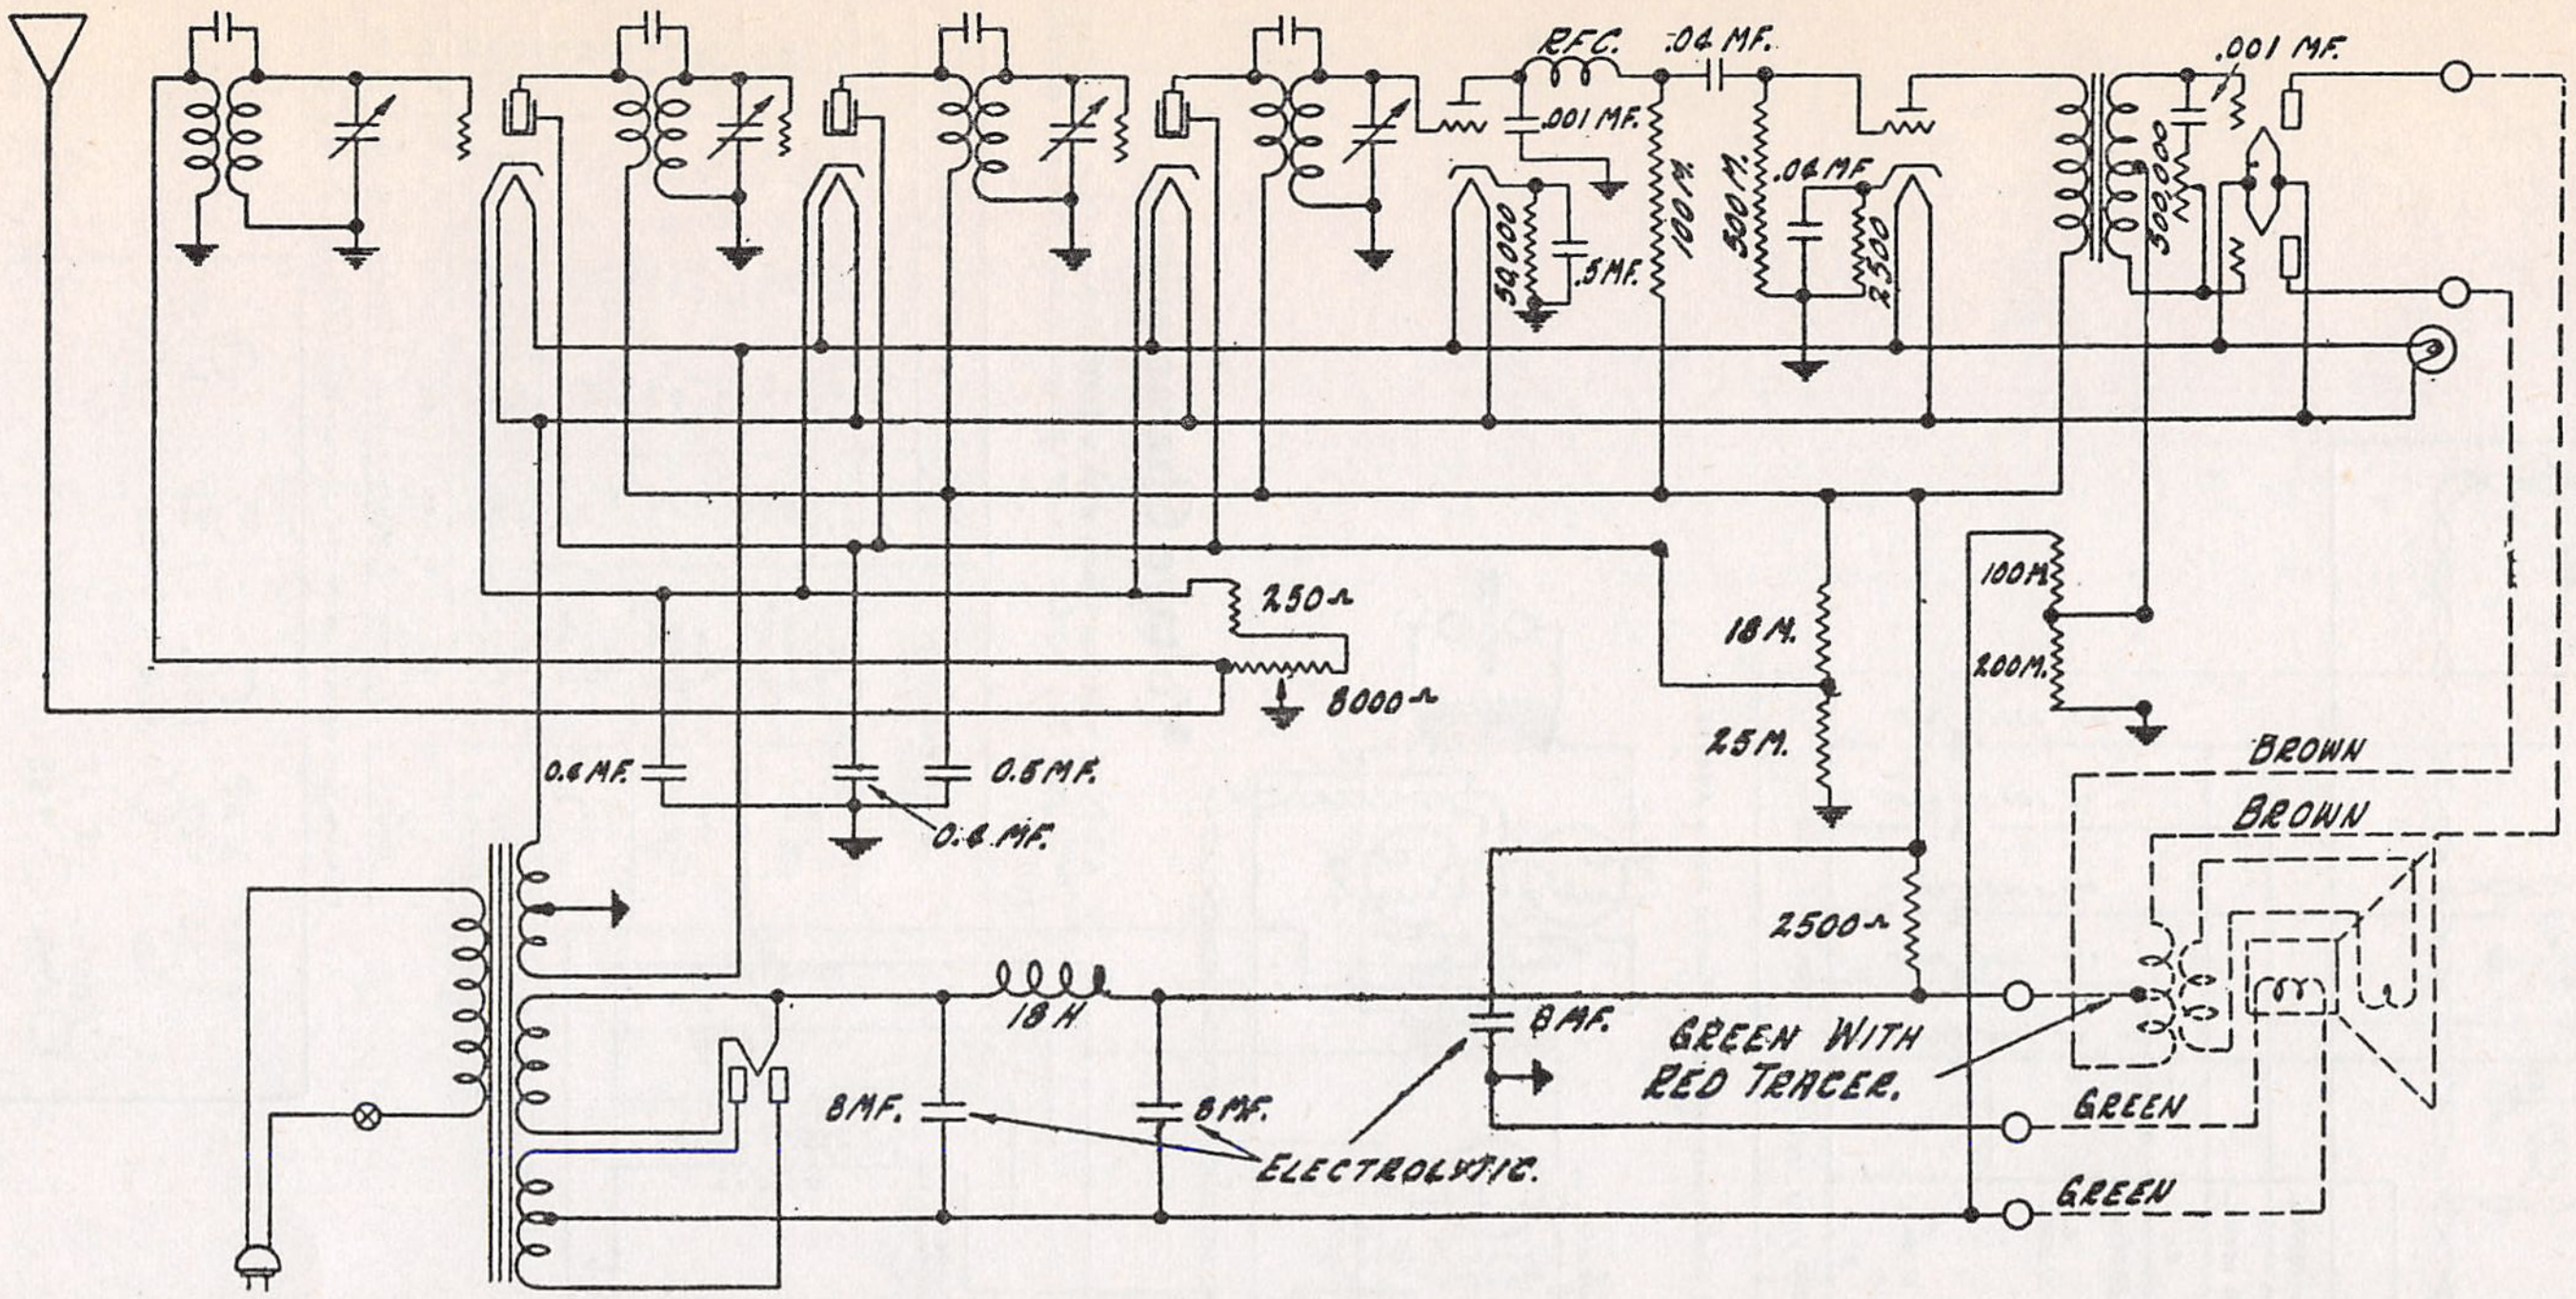
R.F.C.
.04 MF.
.001 MF.
.001 MF.
.04 MF.
50000
.5 MF.
100 M.
500 M.
2500
300000
250Ω
8000Ω
18 M.
25 M.
100 M.
200 M.
0.6 MF.
0.5 MF.
0.6 MF.
2500Ω
BROWN
BROWN
18 H
8 MF.
8 MF.
8 MF.
GREEN WITH
RED TRACER.
GREEN
GREEN
ELECTROLYTIC.

Schematic Diagram of Commander and Cavalier Sets

DOTTED LINES SHOWN ARE IN SPEAKER.

Model 29 W chassis used in both the Commander and Cavalier sets is similar in all essential respects to the Airline Cortez and Coronado.

Certain changes have been made, however, which have to do chiefly with the operating voltages. The schematic diagram as compared with the diagram of the Cortez will show clearly where these changes have been made, and the operating voltages chart will show the effect that the changes have had in the voltages at the various tube sockets. In performance this chassis is quite similar to the Cortez, with the exception of slightly less power out-put when operated with the volume control full on.

Servicing instructions which apply to the Cortez also apply in the 29 W chassis. Do not forget, however, that in making any measurements with the set analyzer on the 29 W chassis, that the voltages are widely different from those used in the Cortez.

For "CORONADO" NO 3035 (60~) & 3037 (25~)
and "CORTEZ" No 3065 (60~) & 3067 (25~)

Operating Voltages

VOLTAGES AT SOCKETS—VOLUME CONTROL AT MAXIMUM—LINE VOLTAGE, 115 PLUG IN SOCKET OF RECEIVER—TUBE IN TEST SET

Type of Tube	Position of Tube	Function	A Volts	B Volts	Control Grid Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate M.A.	Grid Test M.A.
224	1	1st Radio	2.3	247	4.0	103	.75	4.0	4.6	9.3
224	2	2nd Radio	2.3	247	4.0	103	.75	4.0	4.6	9.3
224	3	3rd Radio	2.3	247	4.0	103	.75	4.0	4.6	9.3
227	4	Detector	2.3	160	17	.....	...	17	.35	.4
227	5	1st Audio	2.3	223	15	.....	...	15	5.9	6.9
245	6	2nd Audio	2.25	243	29.2	.....	.....	.....	27.5	32
245	7	2nd Audio	2.25	243	29.2	.....		....	27.5	32
280	8	Rectifier	4.9	.....	.....	Per	Plate	...	.....	42.5

MONTGOMERY-WARD & CO.

MODEL 62-20, 62-26
(62-25)
Chassis
Data

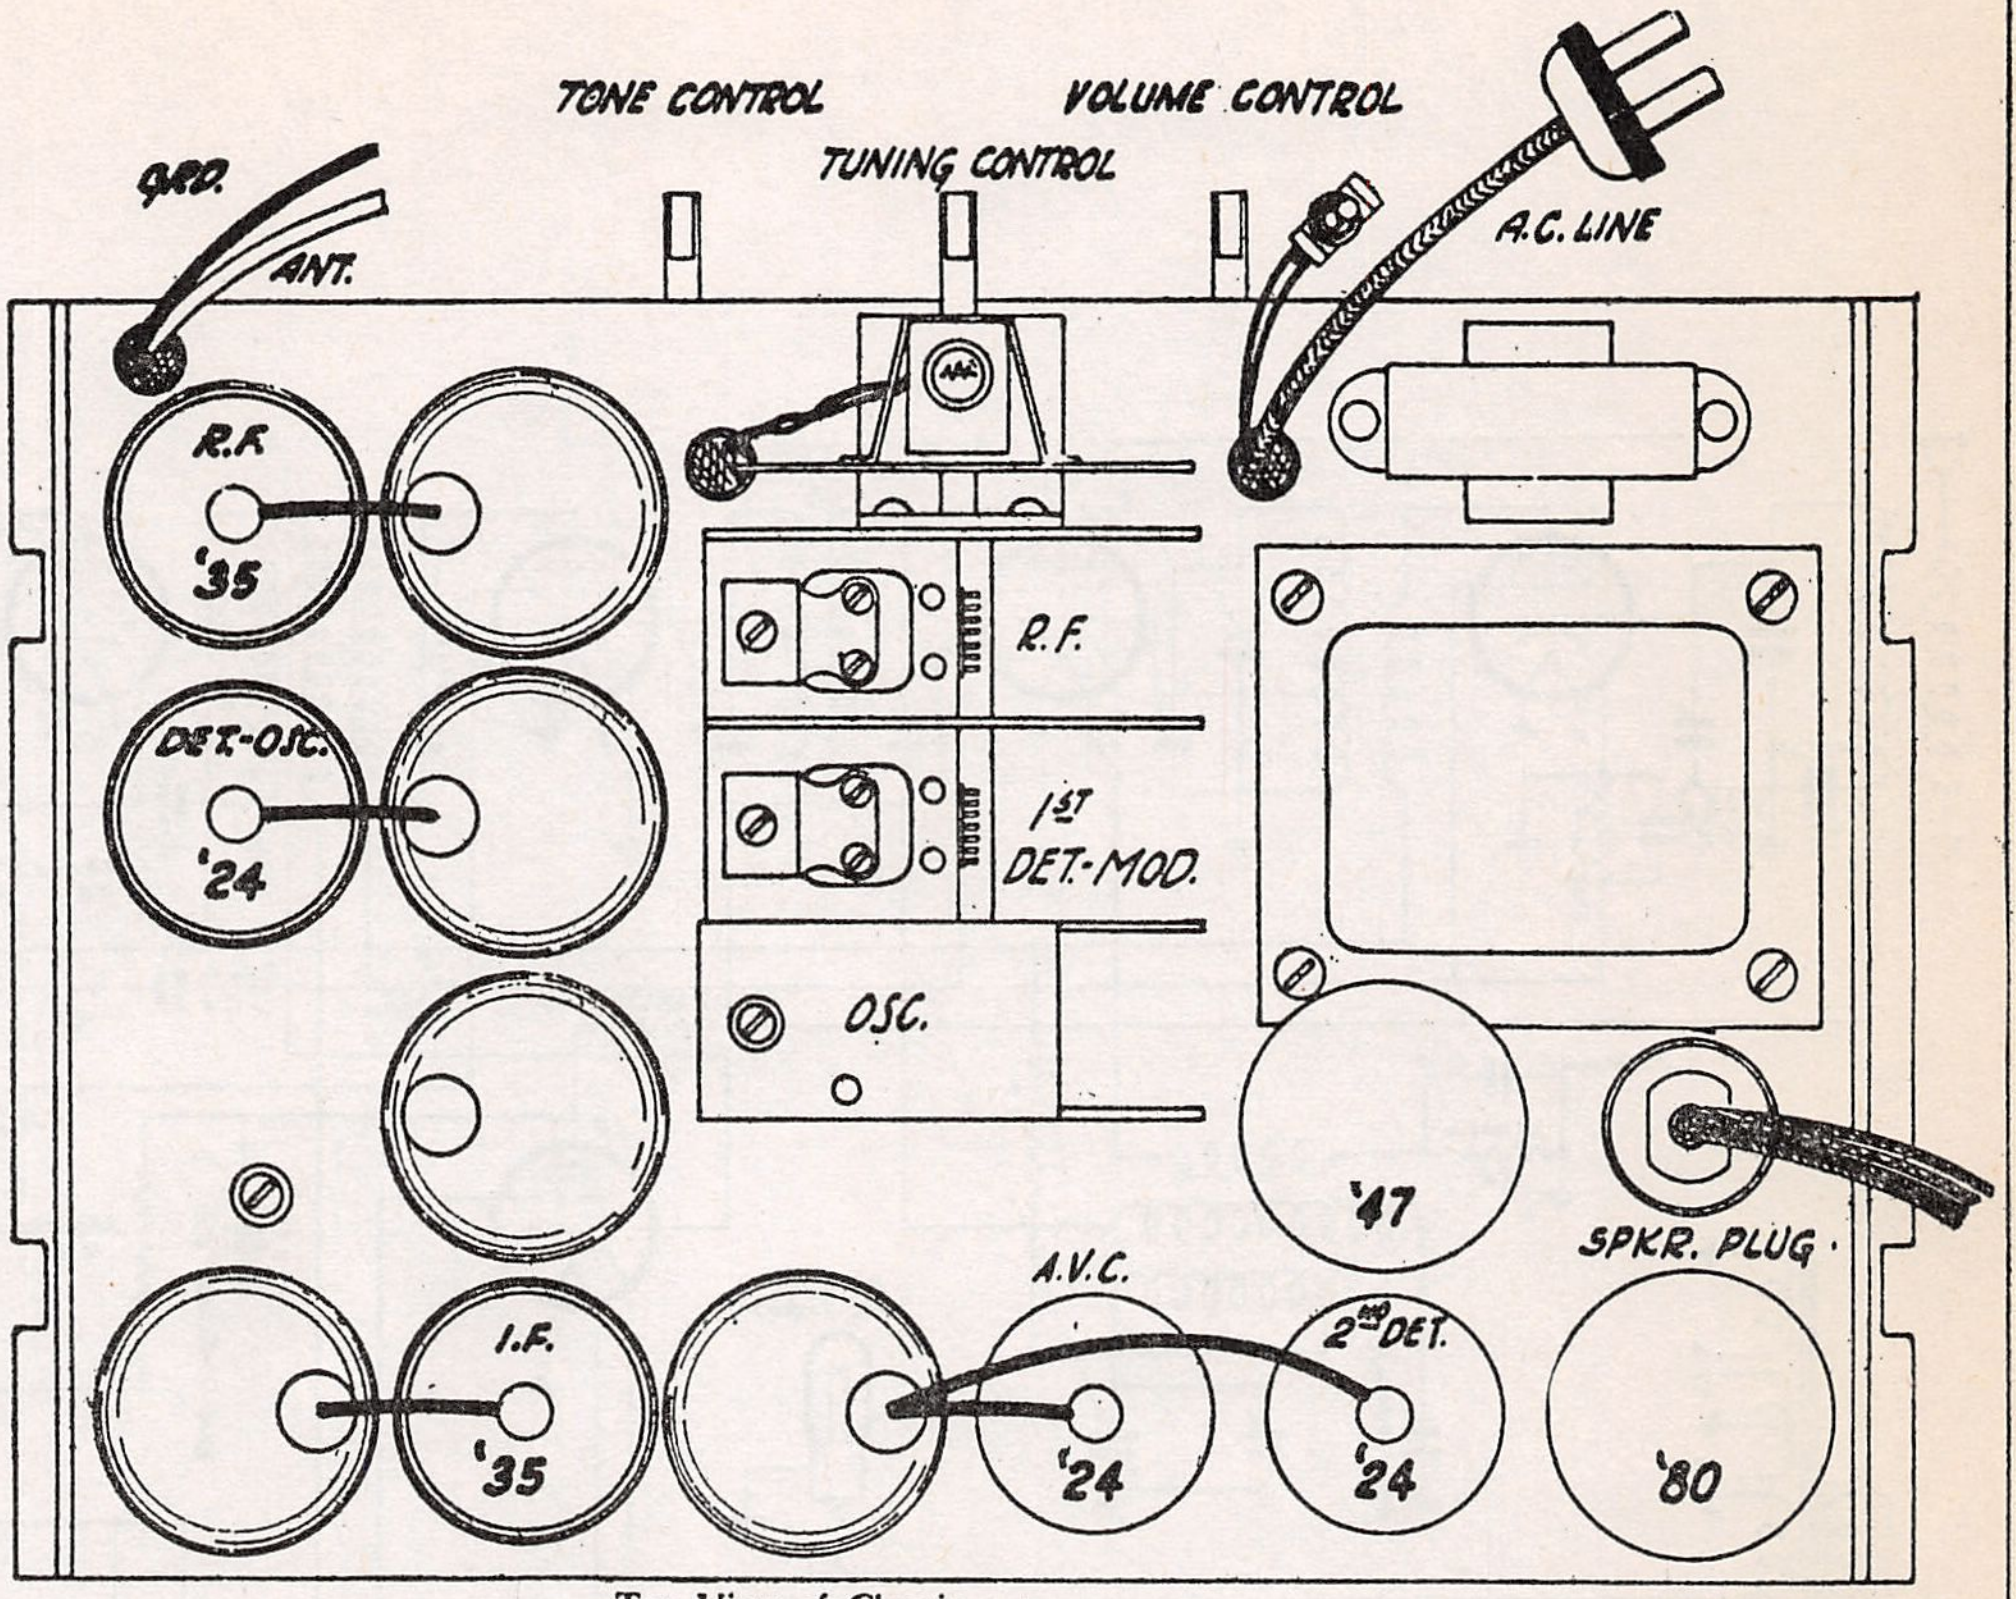

Top View of Chassis.

273-J

I. F. and Oscillator Units

The primary and secondary of both intermediate transformers are tuned with adjustable condensers which remain fixed after the transformers have been tuned to exactly 175 kilocycles.

The oscillator 600 K.C. tracking condenser is mounted directly in front of the oscillator coil shield on the right rear corner of the chassis base.

Holes in the chassis base allow the tuning condensers for the intermediate transformers to be adjusted with a screwdriver from the under side of the chassis.

Power-Supply,

The 25 and 60 cycle power transformers are designed for operation on any 95 to 130 volt A.C. supply without adjustment and without overloading.

The 25 cycle chassis has a special power transformer and has two 8 mfd. 450 volt dry electrolytic condensers, in parallel, instead of the one condenser, C14, shown in the schematic diagram. An 8 mfd. 450 volt wet electrolytic condenser is mounted on top of the chassis base and this condenser replaces the condenser, C17, shown in the diagram. The 25 cycle chassis differs in no other way from the 60 cycle chassis.

Replacing Rubber Drive

You will note that the Vernier tuning drive on this chassis uses a rubber pinion. Under normal operating conditions this rubber will last for a number of years. Should it become worn it can be readily replaced by loosening the set screw of the brass bushing located next to the rubber pinion and pulling out the station selector shaft. Place a new bushing in position, slip the station selector shaft in place and tighten the set screw.

Automatic Volume Control (A.V.C.)

The action of the automatic volume control tube controls the grid bias on the R.F. and I.F. tubes and consequently the amplification of those tubes. The primary of the 2nd I.F. transformer has a tertiary winding which is connected in series in the A.V.C. tube grid circuit.

A signal of sufficient strength reaching the second detector, applies a voltage on the grid of the A.V.C. tube and the voltage thus applied depends upon the signal strength. The plate of the A.V.C. tube will draw current when the grid voltage of the tube rises in potential and the drop in plate current is applied to the grids of the R.F. and I.F. tubes through their grid returns to the A.V.C. tube plate. This results in a control of the amplification of these tubes and a practically constant receiver output.

The manual volume control adjusts the negative biasing on the control grid of the A.V.C. tube, regulating in this manner the level of the input to the second detector at which the A.V.C. action commences. Thus the manual volume control behaves virtually as an output level control.

If the A.V.C. tube is defective or removed from its socket, there will be no control of the volume. Similarly, if the A.V.C. tube grid circuit is open, the plate of the tube applies a high grid bias on the R.F. and I.F. tube grids and practically no amplification is obtained from these tubes and consequently no receiver output.

A signal voltage which is too weak to affect the A.V.C. tube grid voltage will not, of course, produce any change in plate current and the maximum amplification of the R.F. and I.F. tubes will be obtained, depending upon their grid bias as set by the A.V.C. tube plate.

MODEL 62-20,62-26X
(62-25)
Schematic
Voltage

MONTGOMERY-WARD & CO.

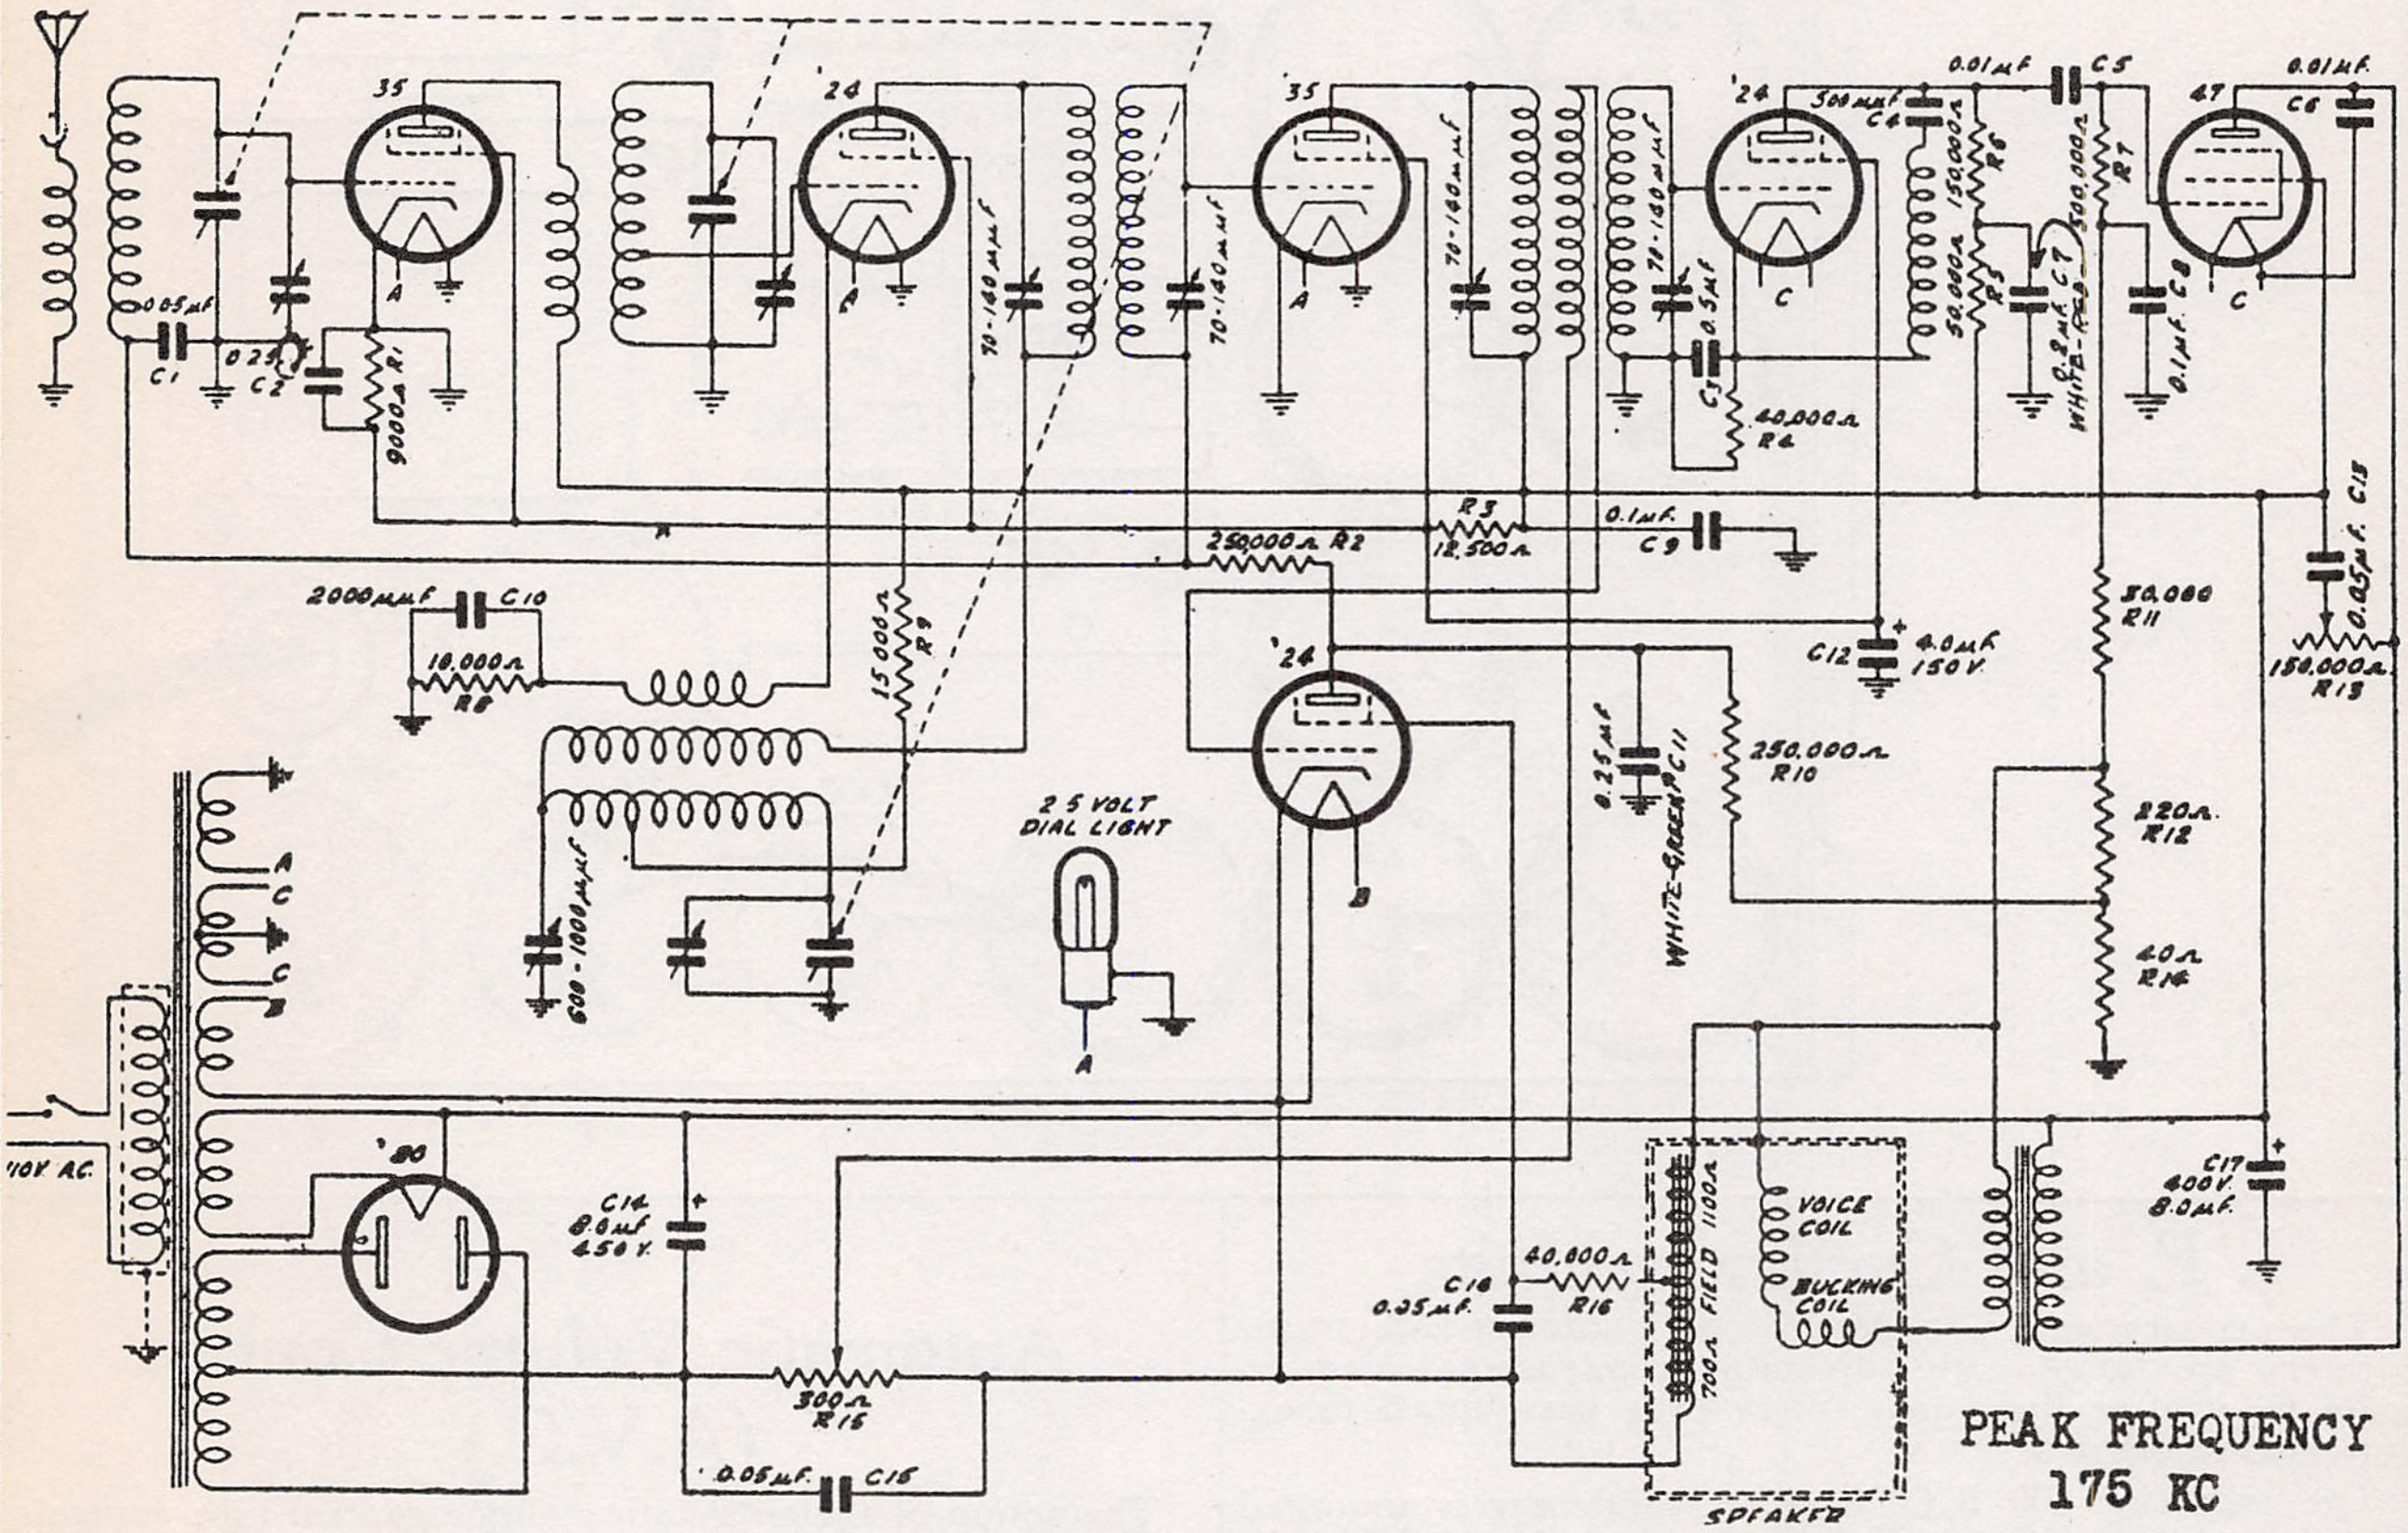
35
24
35
24
47
'24
'80
0.05 µf C1
0.25 µf C2
9000 Ω R1
70-140 µµf
0.01 µf C5
0.01 µf C6
500 µµf C4
150,000 Ω R6
50,000 Ω R5
500,000 Ω R7
0.2 µf C7
0.5 µf C3
0.1 µf C8
40,000 Ω R4
12,500 Ω R3
250,000 Ω R2
0.1 µf C9
2000 µµf C10
10,000 Ω R8
15,000 Ω R9
C12 4.0 µf 150 V.
50,000 Ω R11
0.05 µf C13
150,000 Ω R13
0.25 µf C11
250,000 Ω R10
220 Ω R12
40 Ω R14
2.5 VOLT DIAL LIGHT
600-1000 µµf
110 V. AC.
C14 8.0 µf 450 V.
C16 0.25 µf
40,000 Ω R16
300 Ω R15
0.05 µf C15
VOICE COIL
BUCKING COIL
1100 Ω FIELD
700 Ω
SPEAKER
C17 400 V. 8.0 µf
WHITE-GREEN
WHITE-RED
A
B
C

PEAK FREQUENCY
175 KC

TUBE	CIRCUIT	LINE VOLTAGE				
		90 V.	100 V.	110 V.	120 V.	130 V.
R. F. '35	Screen-Grid Plate	70 192	78 213	85 234	92 256	100 277
Det.-Modulator '24	Screen-Grid Plate	70 192	78 213	85 234	92 256	100 277
I. F. '35	Screen-Grid Plate	70 192	78 213	85 234	92 256	100 277
2nd Detector '24	Screen-Grid Plate	70 154	78 171	85 187	92 204	100 221
Audio '47	Accelerating Grid Plate	199 181	221 200	244 220	267 240	289 260
A. V. C. '24	Grid Screen-Grid	12.3 34.5	13.7 38.5	15.1 42	16.5 46	17.8 50
Rectifier '80	Plate to Plate Current (both plates)	308 52.3 MA	342 58.1 MA	376 64 MA	410 69.7 MA	445 75.5 MA

TURN THE VOLUME CONTROL ALL THE WAY ON, CONNECT THE ANTENNA AND GROUND LEADS TOGETHER AND TURN THE GANG CONDENSER PLATES ALL THE WAY OUT. CHECK THE LINE VOLTAGE.

The voltages shown are measured to the cathode of the heater type tubes and to filament of the '47 Pentode.

OZARKA, INC.

MODEL Viking 5-A
MODEL S-5
MODEL S-7

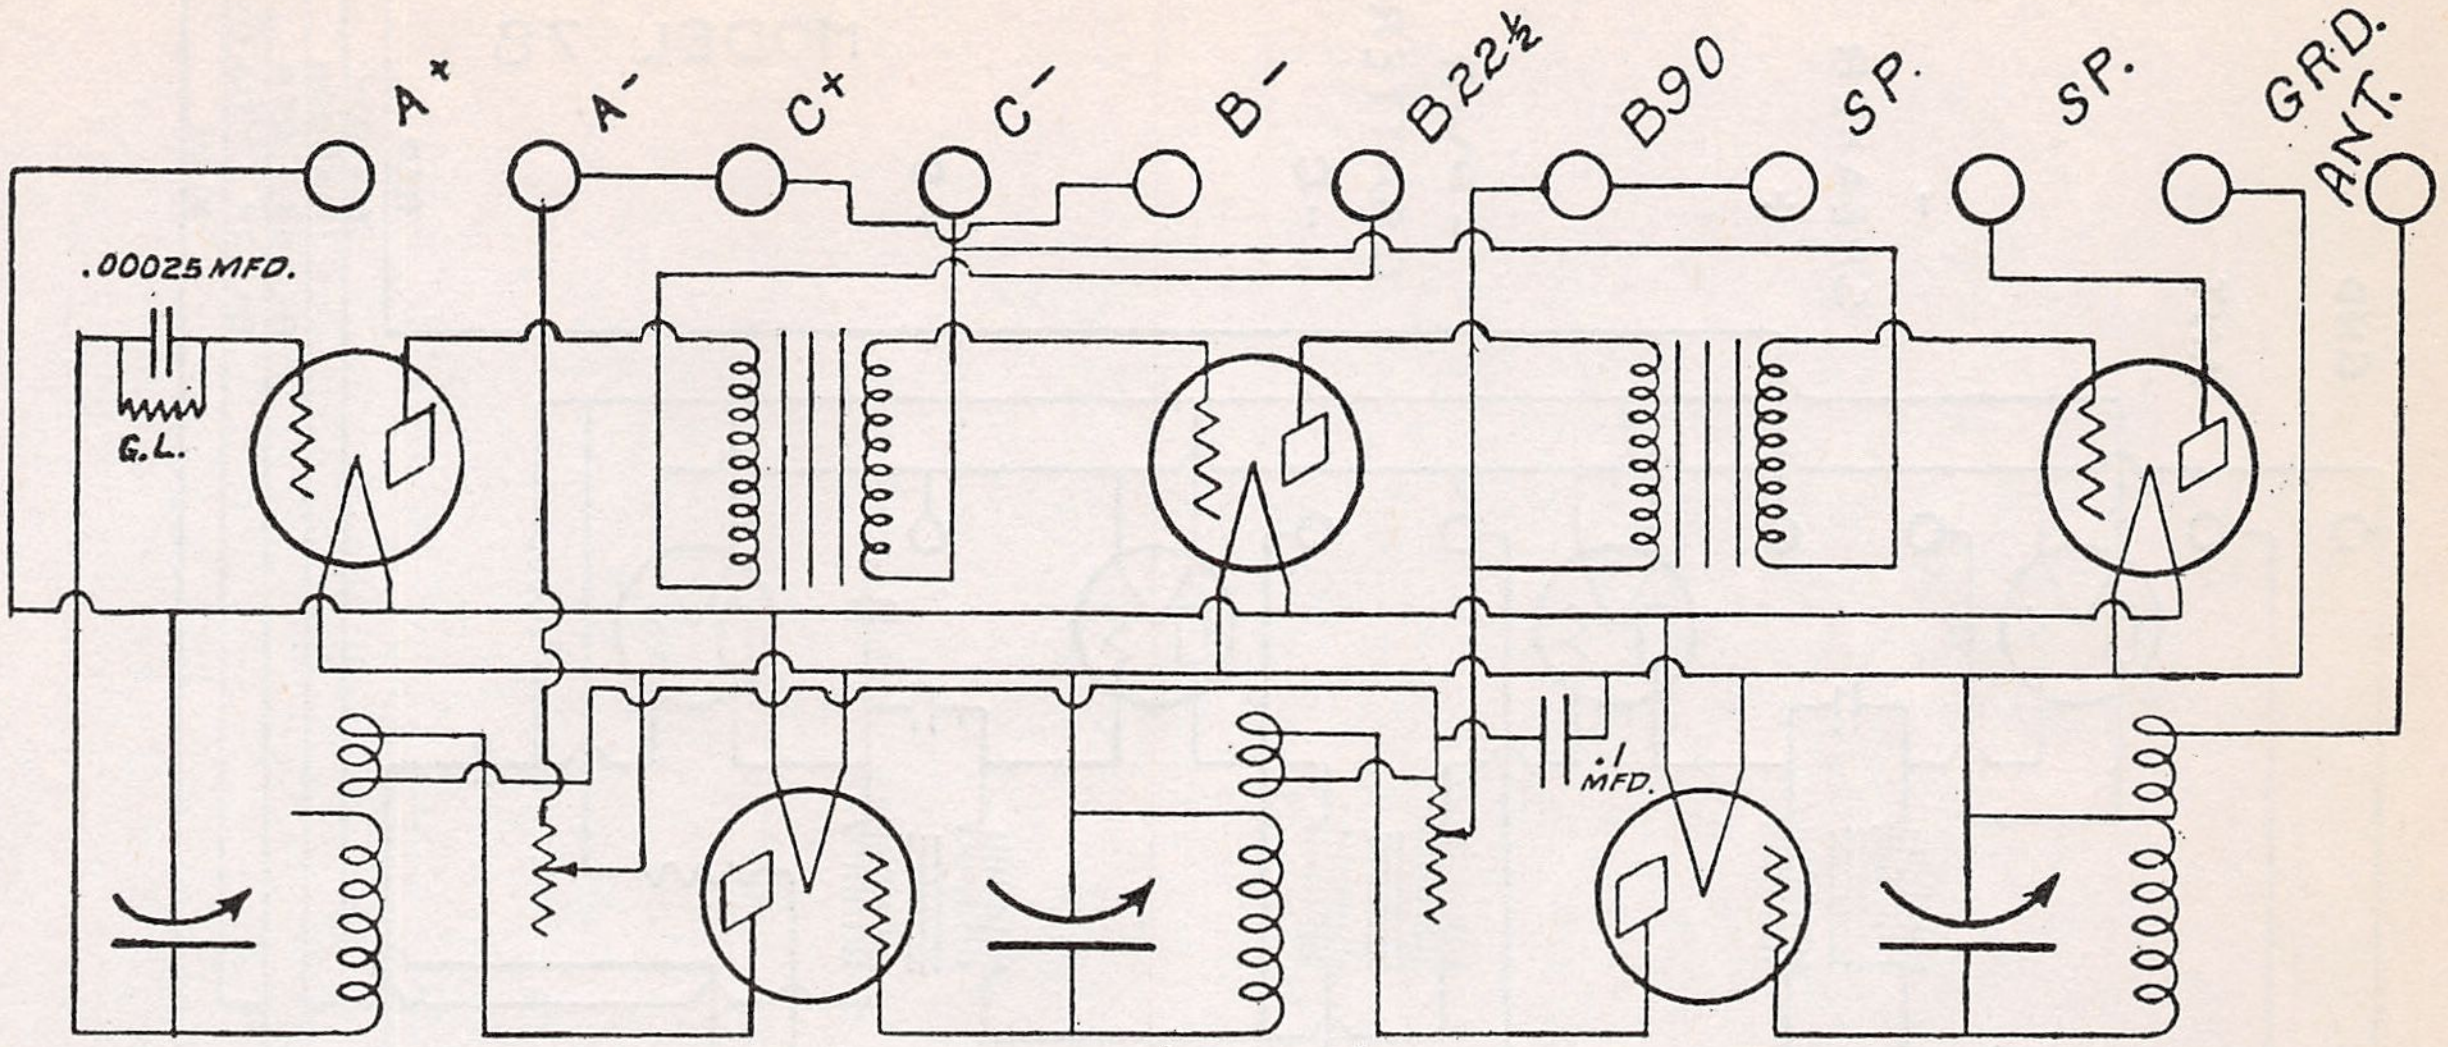
A+
A-
C+
C-
B-
B 22½
B 90
SP.
SP.
GRD.
ANT.
.00025 MFD.
G.L.
.1 MFD.

Model Viking 5-A

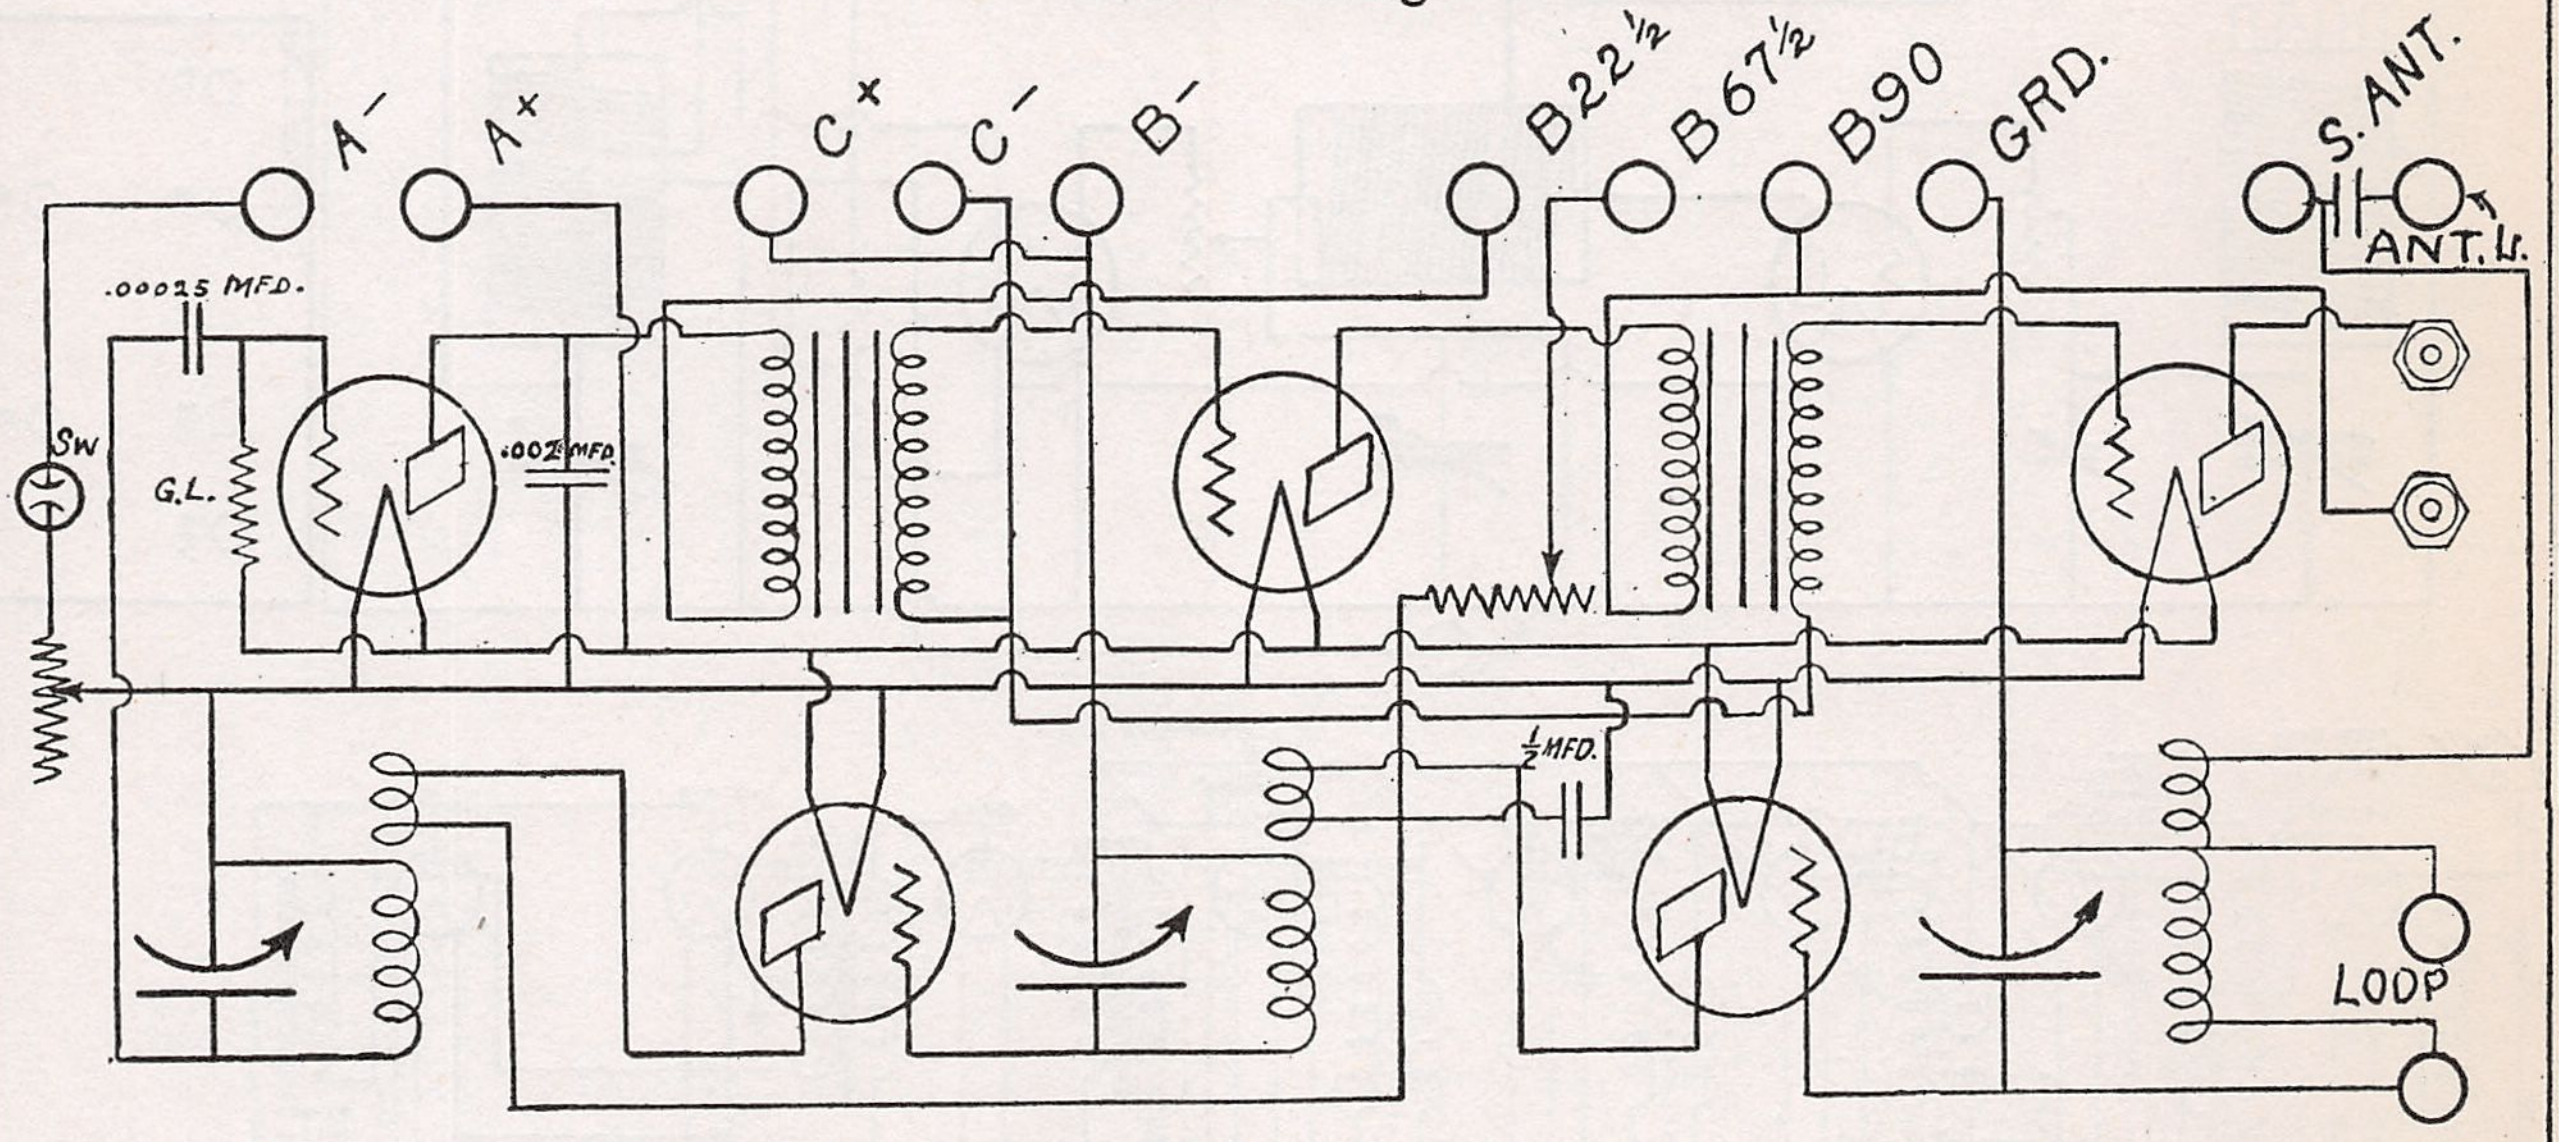
A-
A+
C+
C-
B-
B 22½
B 67½
B 90
GRD.
S. ANT.
ANT. L.
.00025 MFD.
SW
G.L.
.002 MFD.
½ MFD.
LOOP

Model S-5

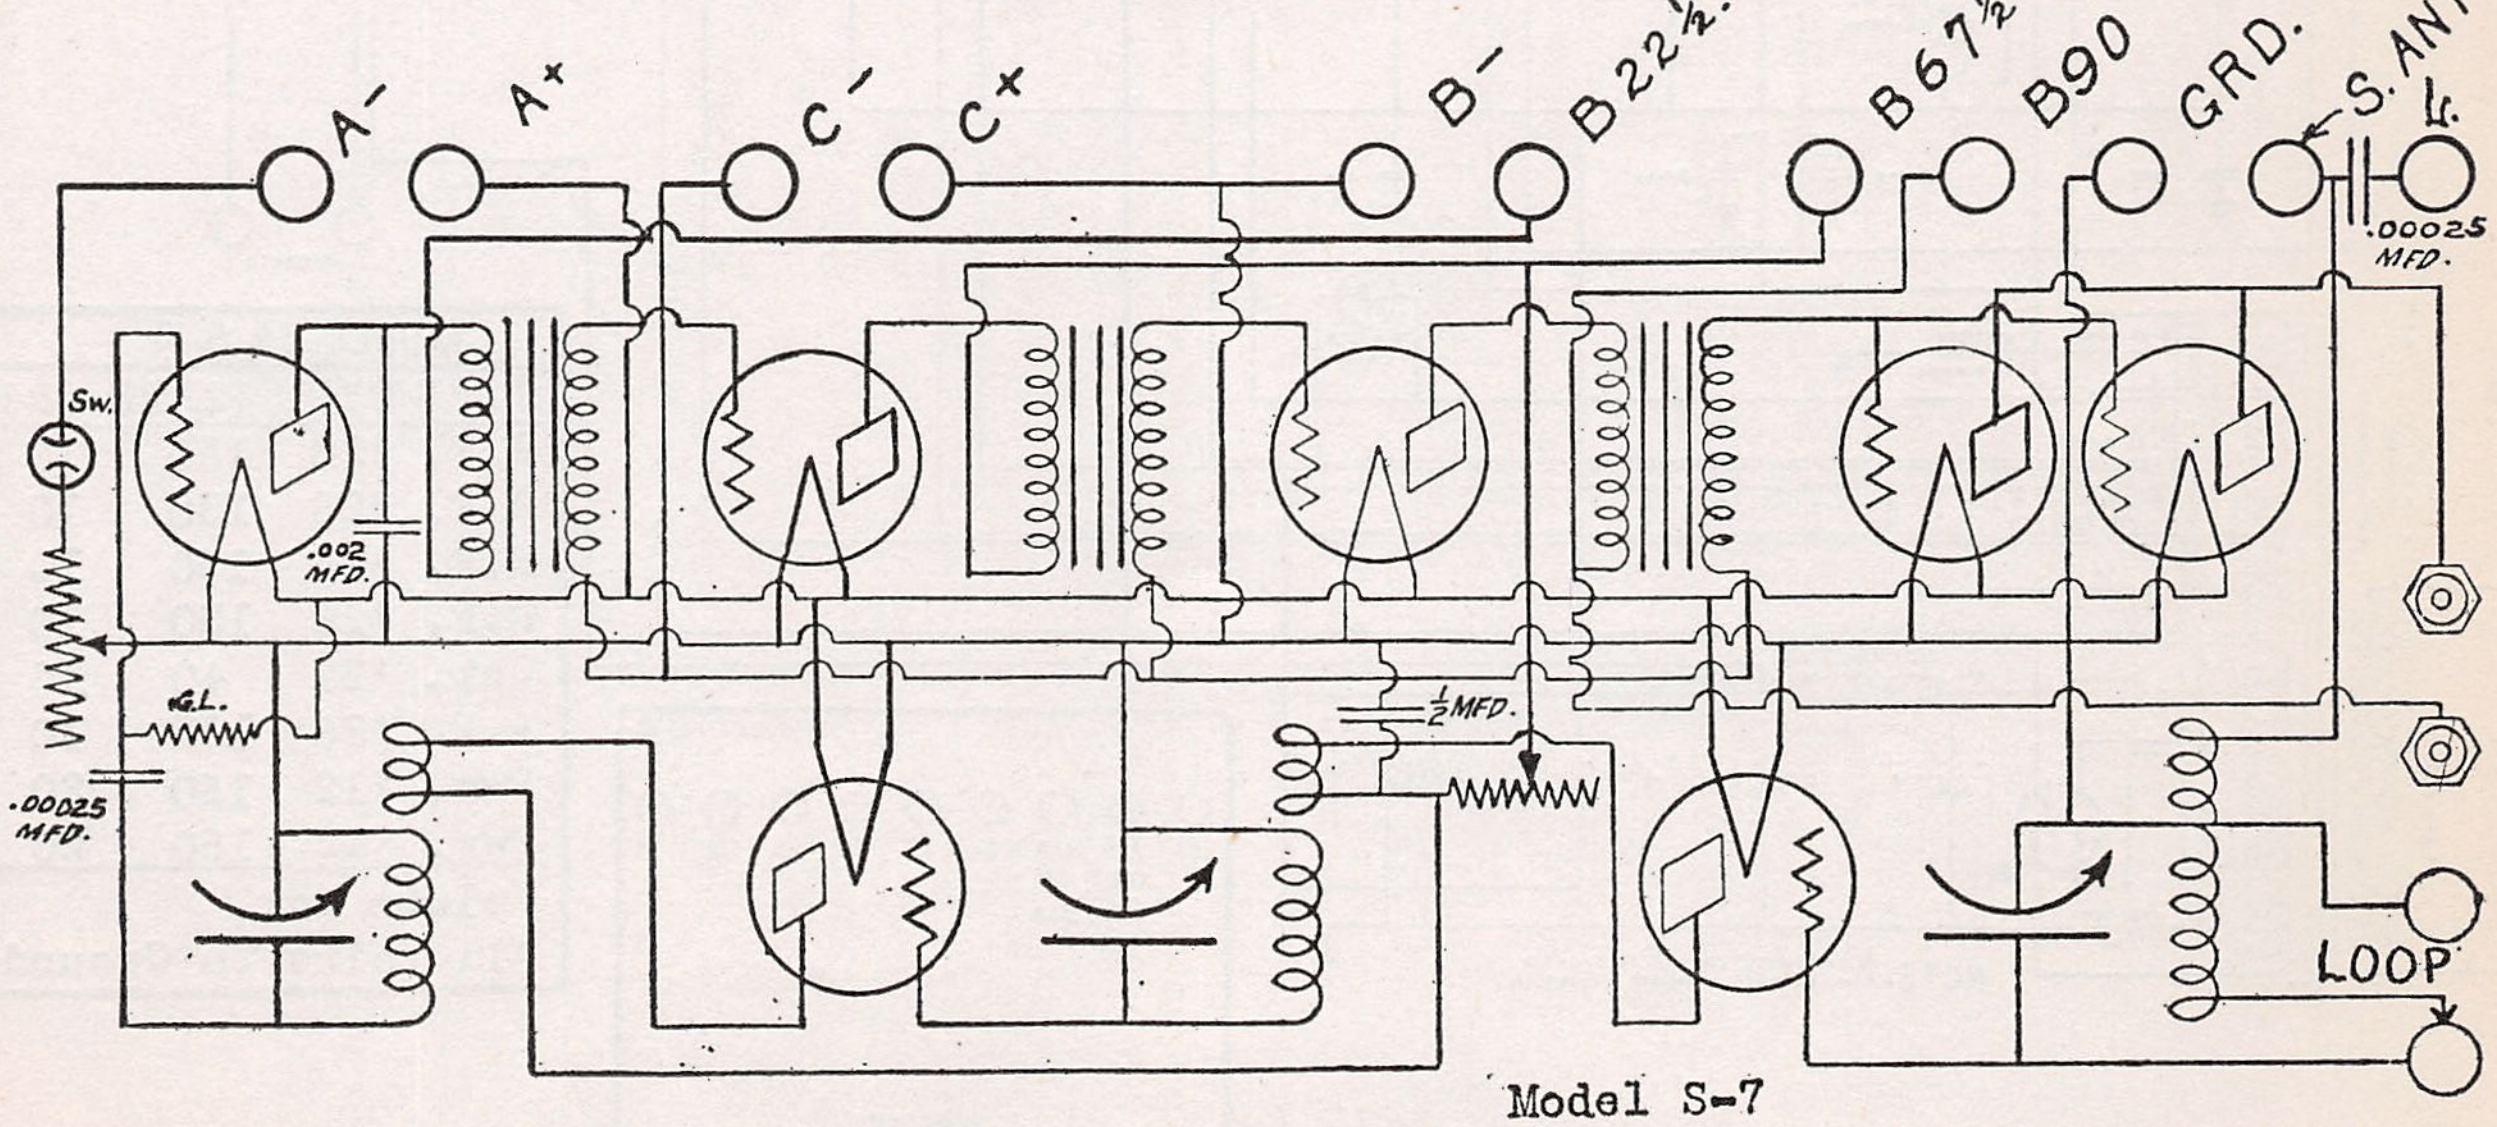
A-
A+
C-
C+
B-
B 22½.
B 67½
B 90
GRD.
S. ANT
L.
.00025 MFD.
SW.
.002 MFD.
G.L.
.00025 MFD.
½ MFD.
LOOP

Model S-7

MODEL 78 Battery
MODEL 89 AC

OZARKA, INC.

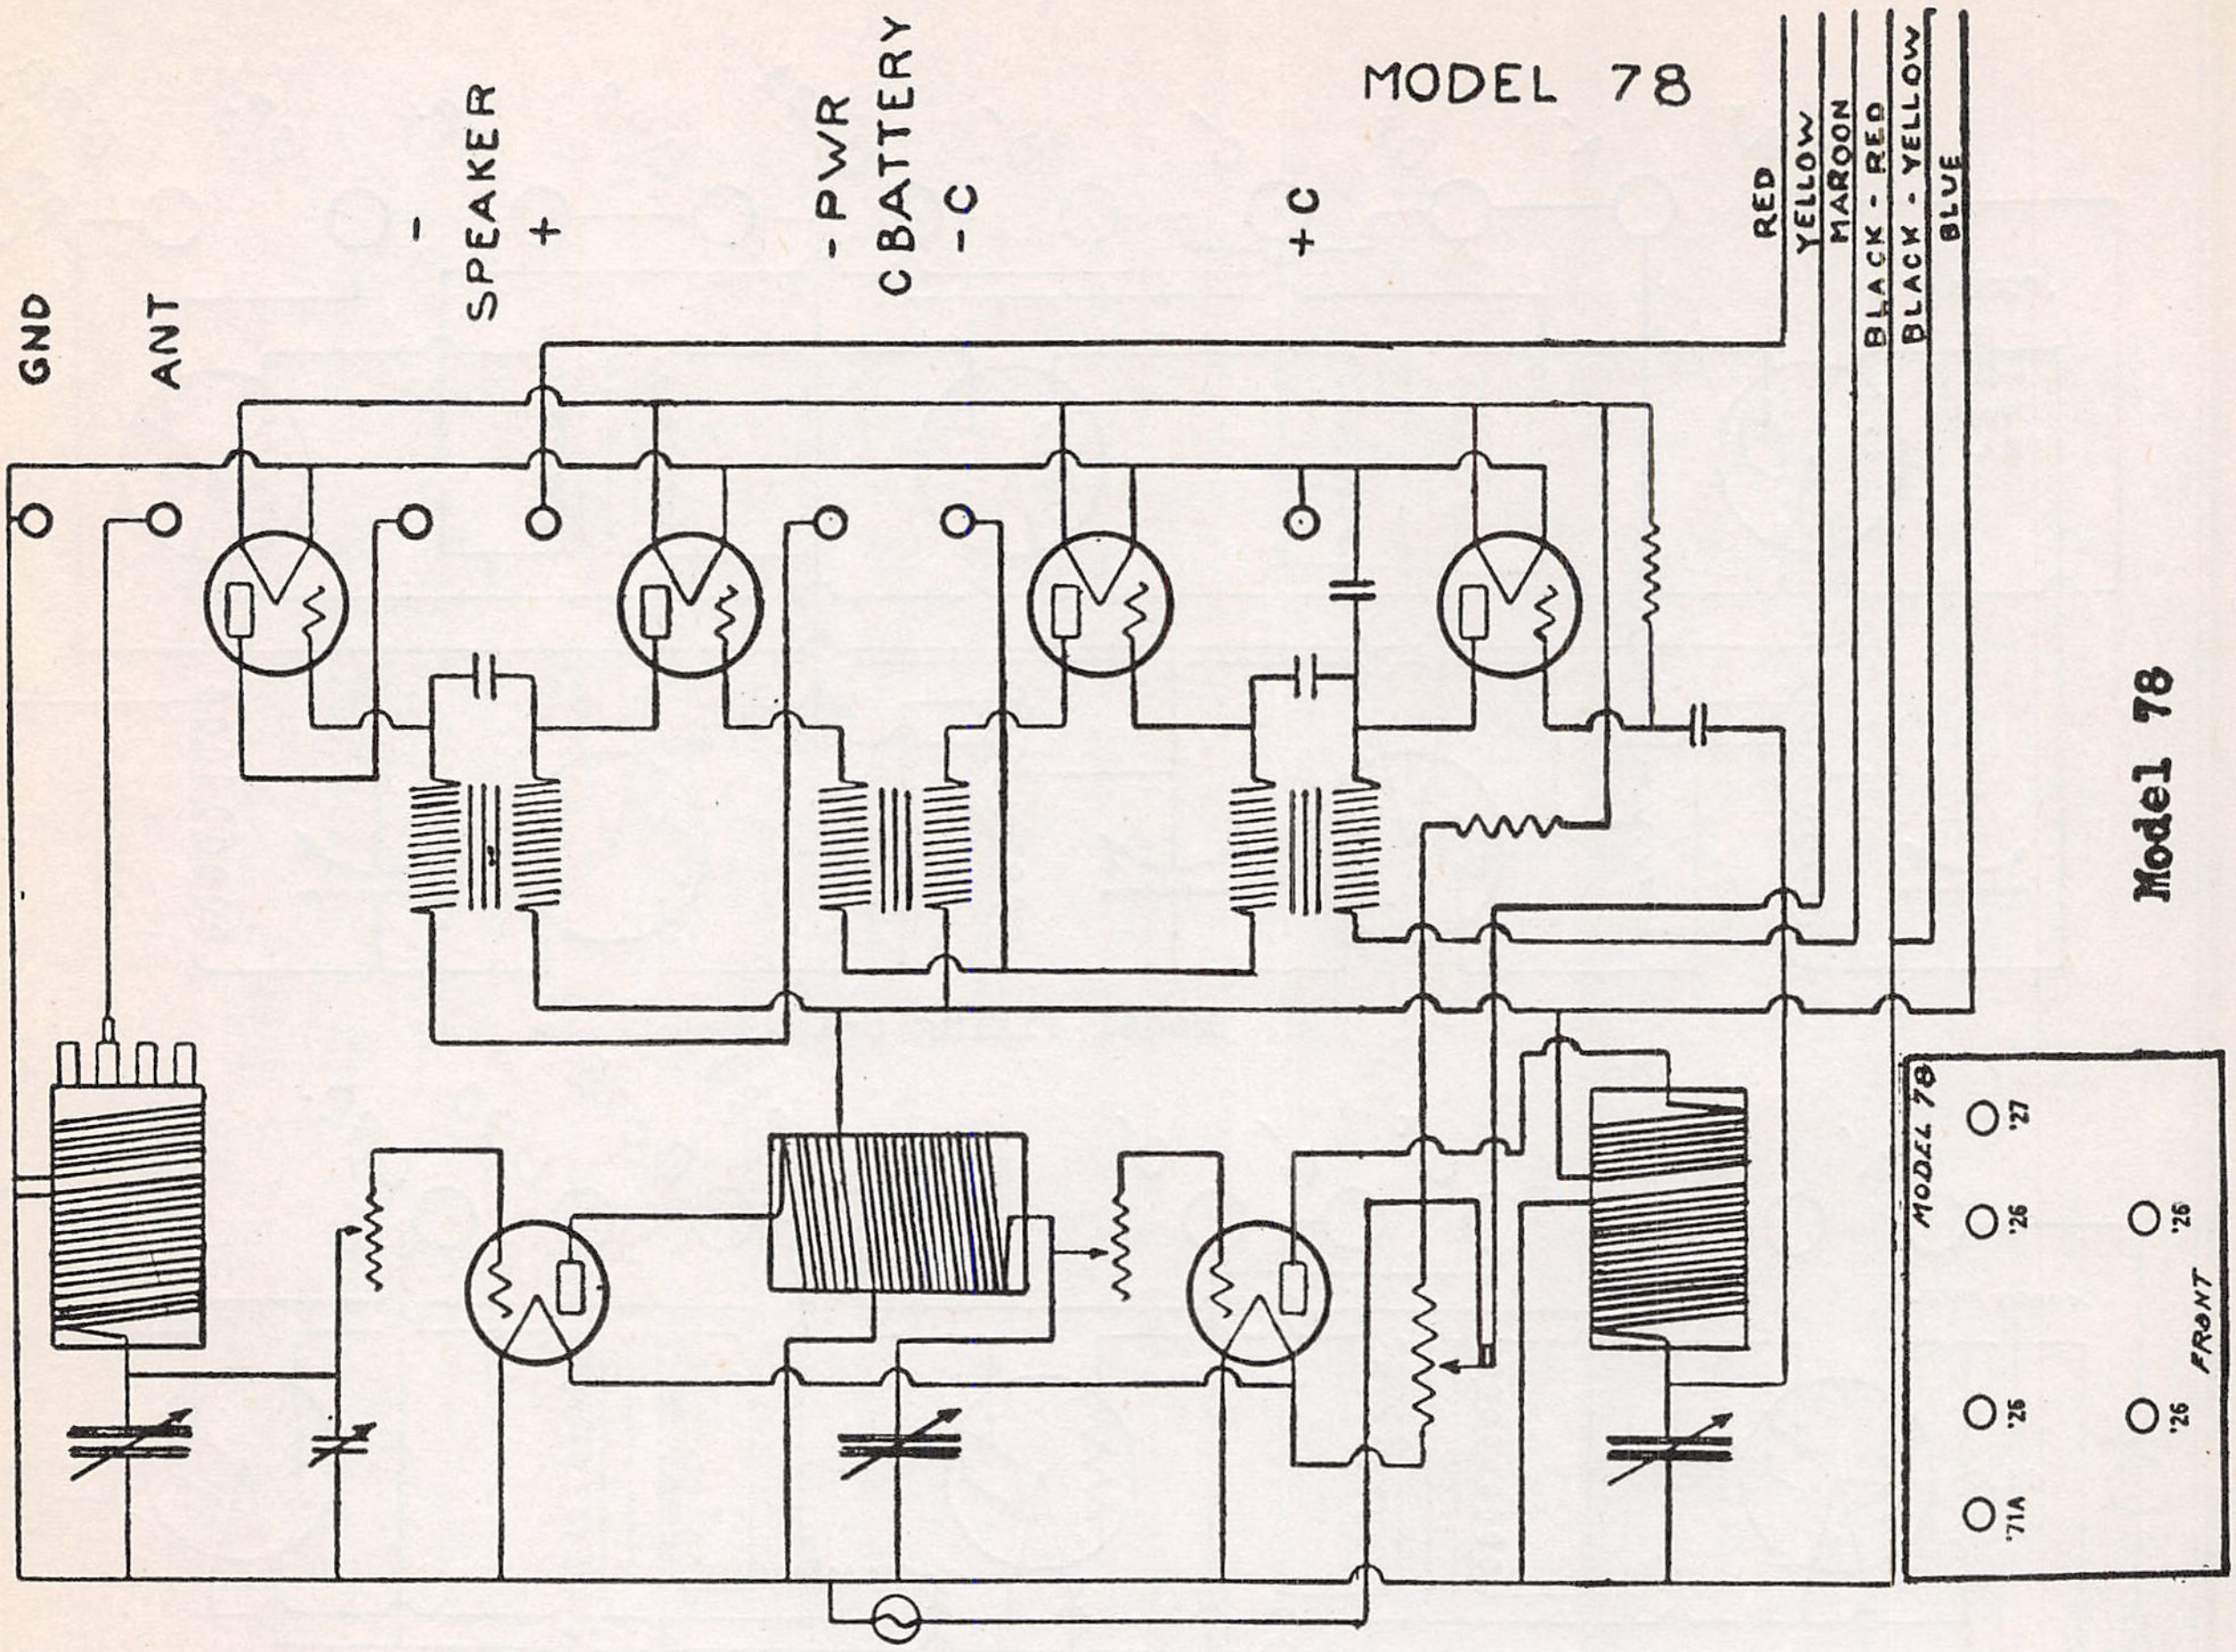
MODEL 78
GND
ANT
- SPEAKER +
- PWR
CBATTERY
-C
+C
RED
YELLOW
MAROON
BLACK - RED
BLACK - YELLOW
BLUE
Model 78
MODEL 78
'27
'26
'26
'26
'26
'71A
FRONT

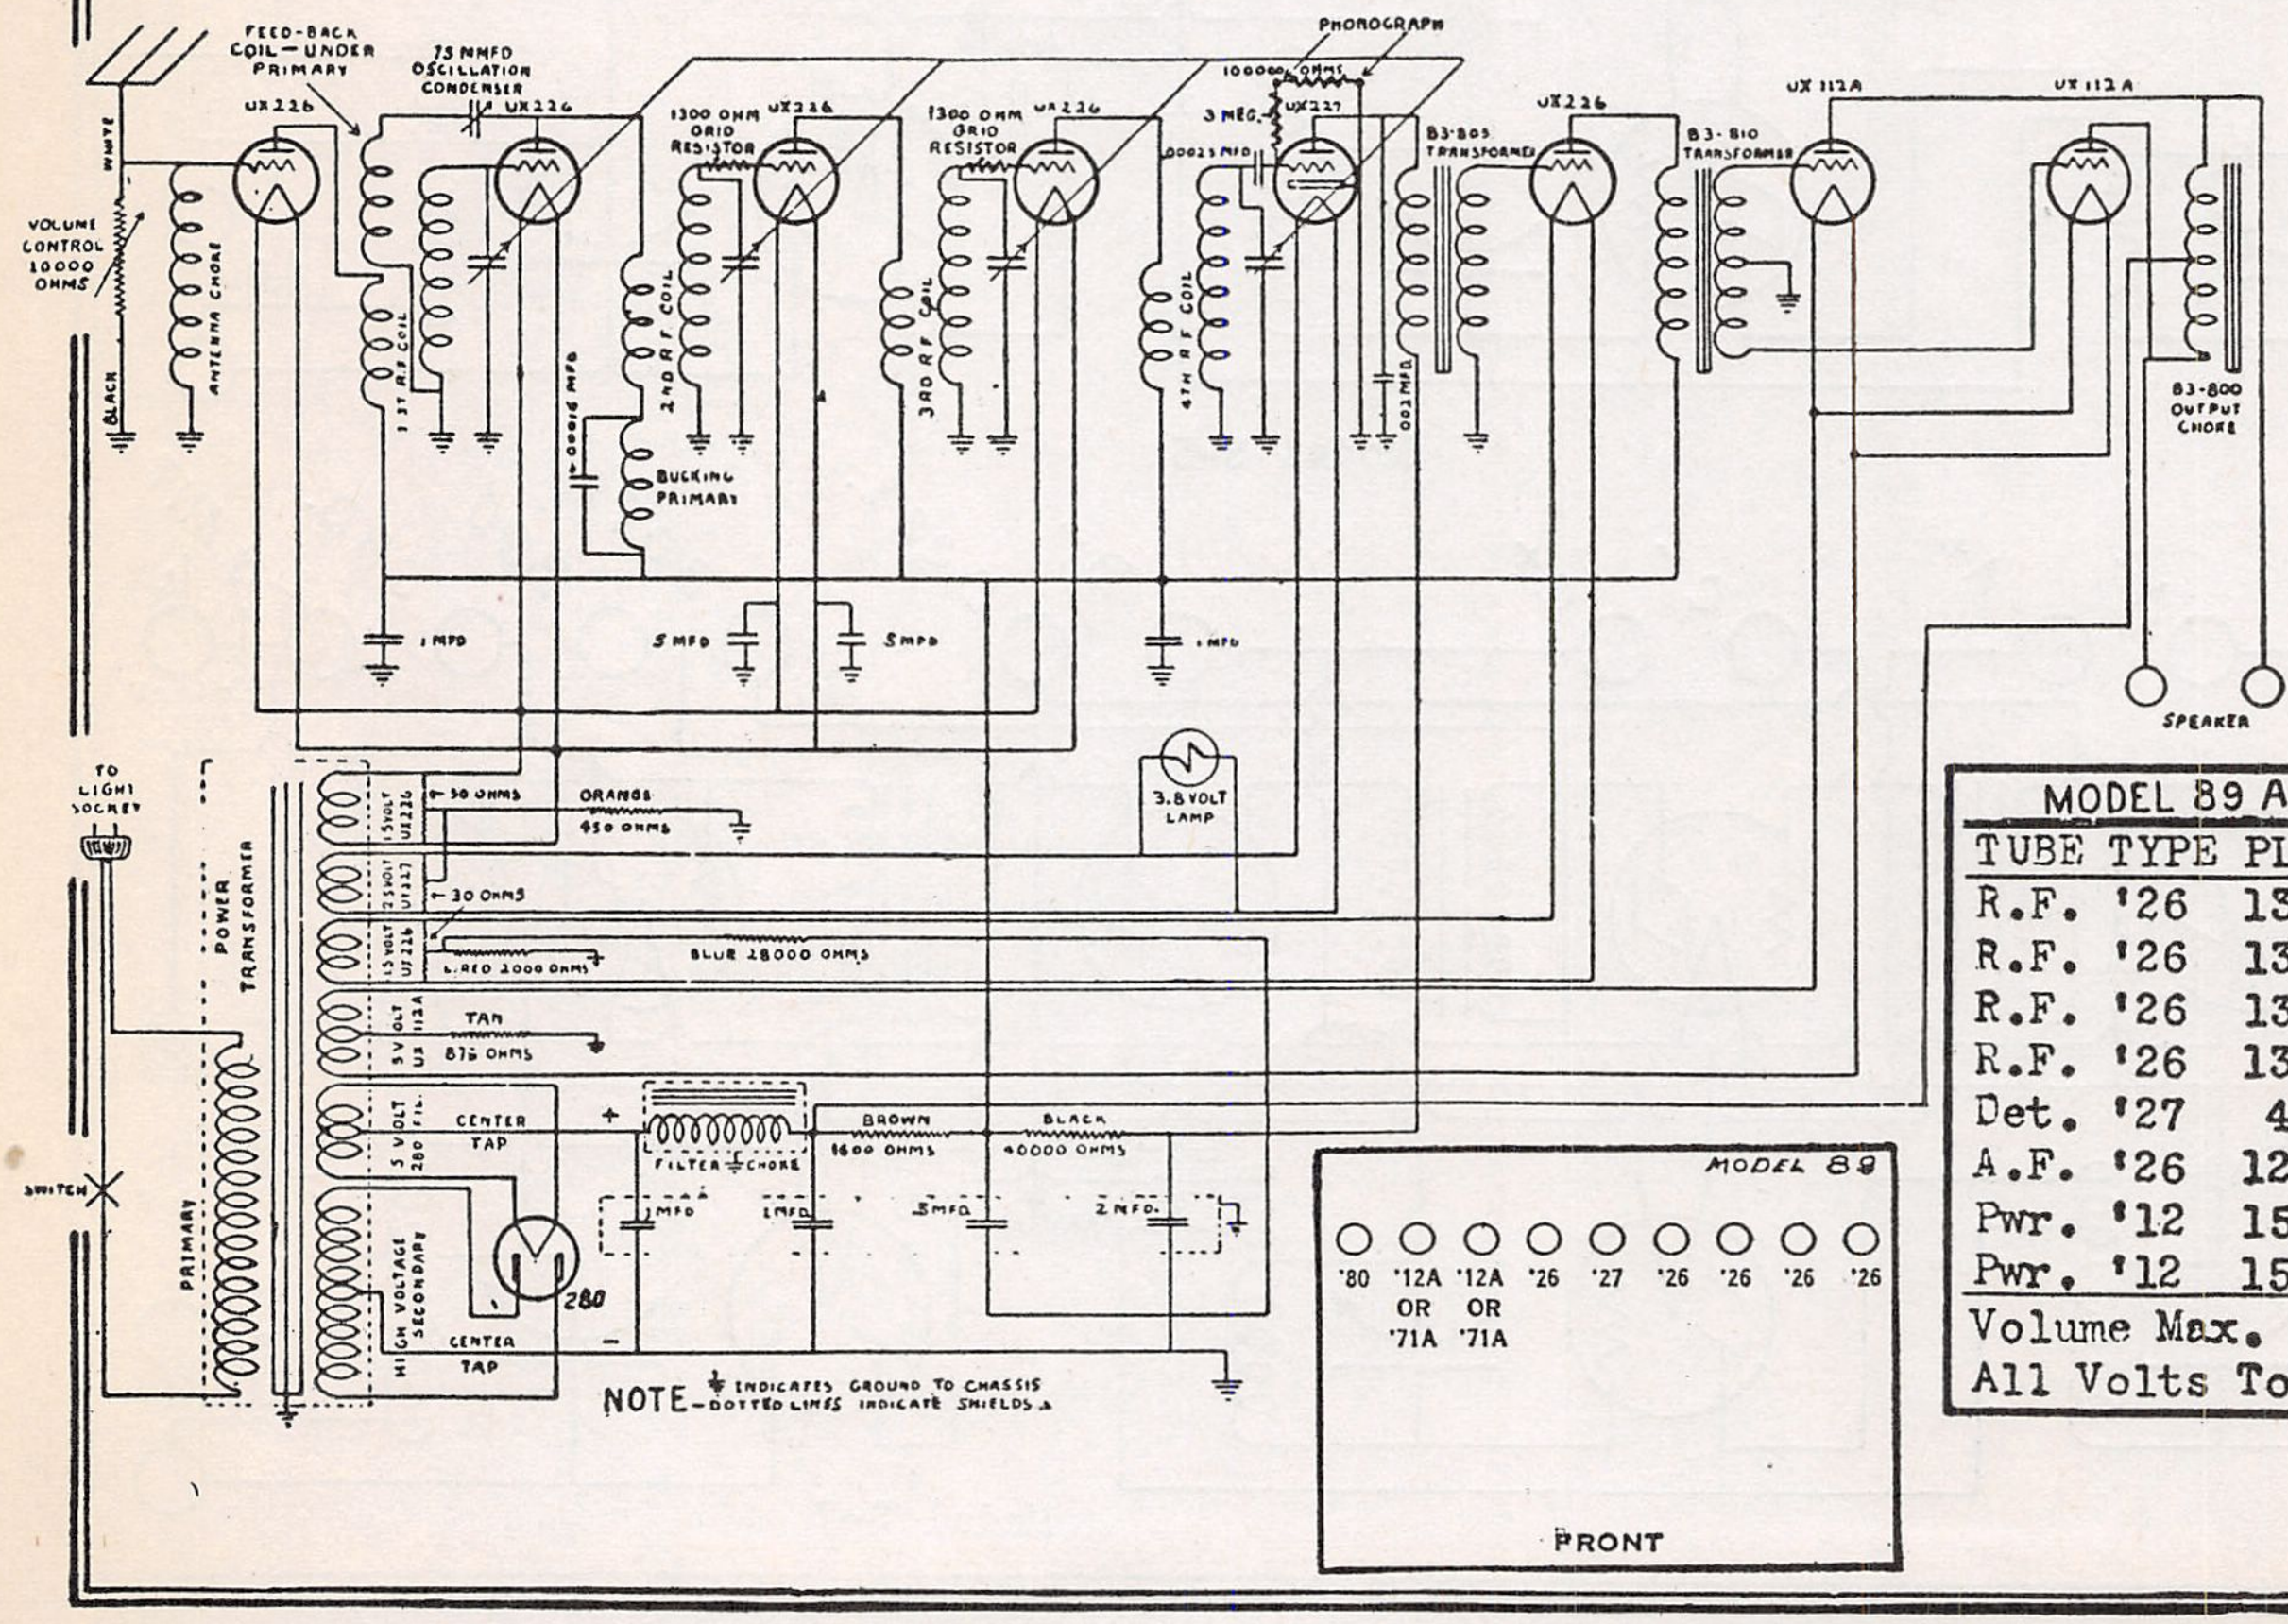
FEED-BACK COIL—UNDER PRIMARY
75 MMFD OSCILLATION CONDENSER
UX226
UX226
UX226
UX226
UX226
UX227
UX 112A
UX 112A
1300 OHM GRID RESISTOR
1300 OHM GRID RESISTOR
PHONOGRAPH
100000 OHMS
3 MEG.
.00025 MFD
B3-805 TRANSFORMER
B3-810 TRANSFORMER
B3-800 OUTPUT CHOKE
WHITE
VOLUME CONTROL 10000 OHMS
BLACK
ANTENNA CHOKE
1ST R.F. COIL
.00016 MFD
2ND R.F. COIL
BUCKING PRIMARY
3RD R.F. COIL
4TH R.F. COIL
.002 MFD
1 MFD
5 MFD
5 MFD
1 MFD
SPEAKER
TO LIGHT SOCKET
SWITCH
PRIMARY
POWER TRANSFORMER
1.5 VOLT UX226
2.5 VOLT UY227
1.5 VOLT UX226
5 VOLT UX 112A
5 VOLT 280 FIL.
HIGH VOLTAGE SECONDARY
30 OHMS
ORANGE 450 OHMS
30 OHMS
L. RED 2000 OHMS
BLUE 28000 OHMS
TAN 875 OHMS
3.8 VOLT LAMP
CENTER TAP
CENTER TAP
280
+
−
FILTER CHOKE
BROWN 1600 OHMS
BLACK 40000 OHMS
1 MFD
1 MFD
3 MFD
2 MFD.
MODEL 89
'80
'12A OR '71A
'12A OR '71A
'26
'27
'26
'26
'26
'26
FRONT

NOTE—⏚ INDICATES GROUND TO CHASSIS
DOTTED LINES INDICATE SHIELDS.

MODEL 89 A C.

TUBE	TYPE	PLATE	GRI
R.F.	'26	130	10
R.F.	'26	130	10
R.F.	'26	130	10
R.F.	'26	130	10
Det.	'27	40	10
A.F.	'26	125	10
Pwr.	'12	150	20
Pwr.	'12	150	20

Volume Max.
All Volts To Ground.

MODEL Short-Wave Converter
Schematic, Chassis Views

OZARKA, INC.

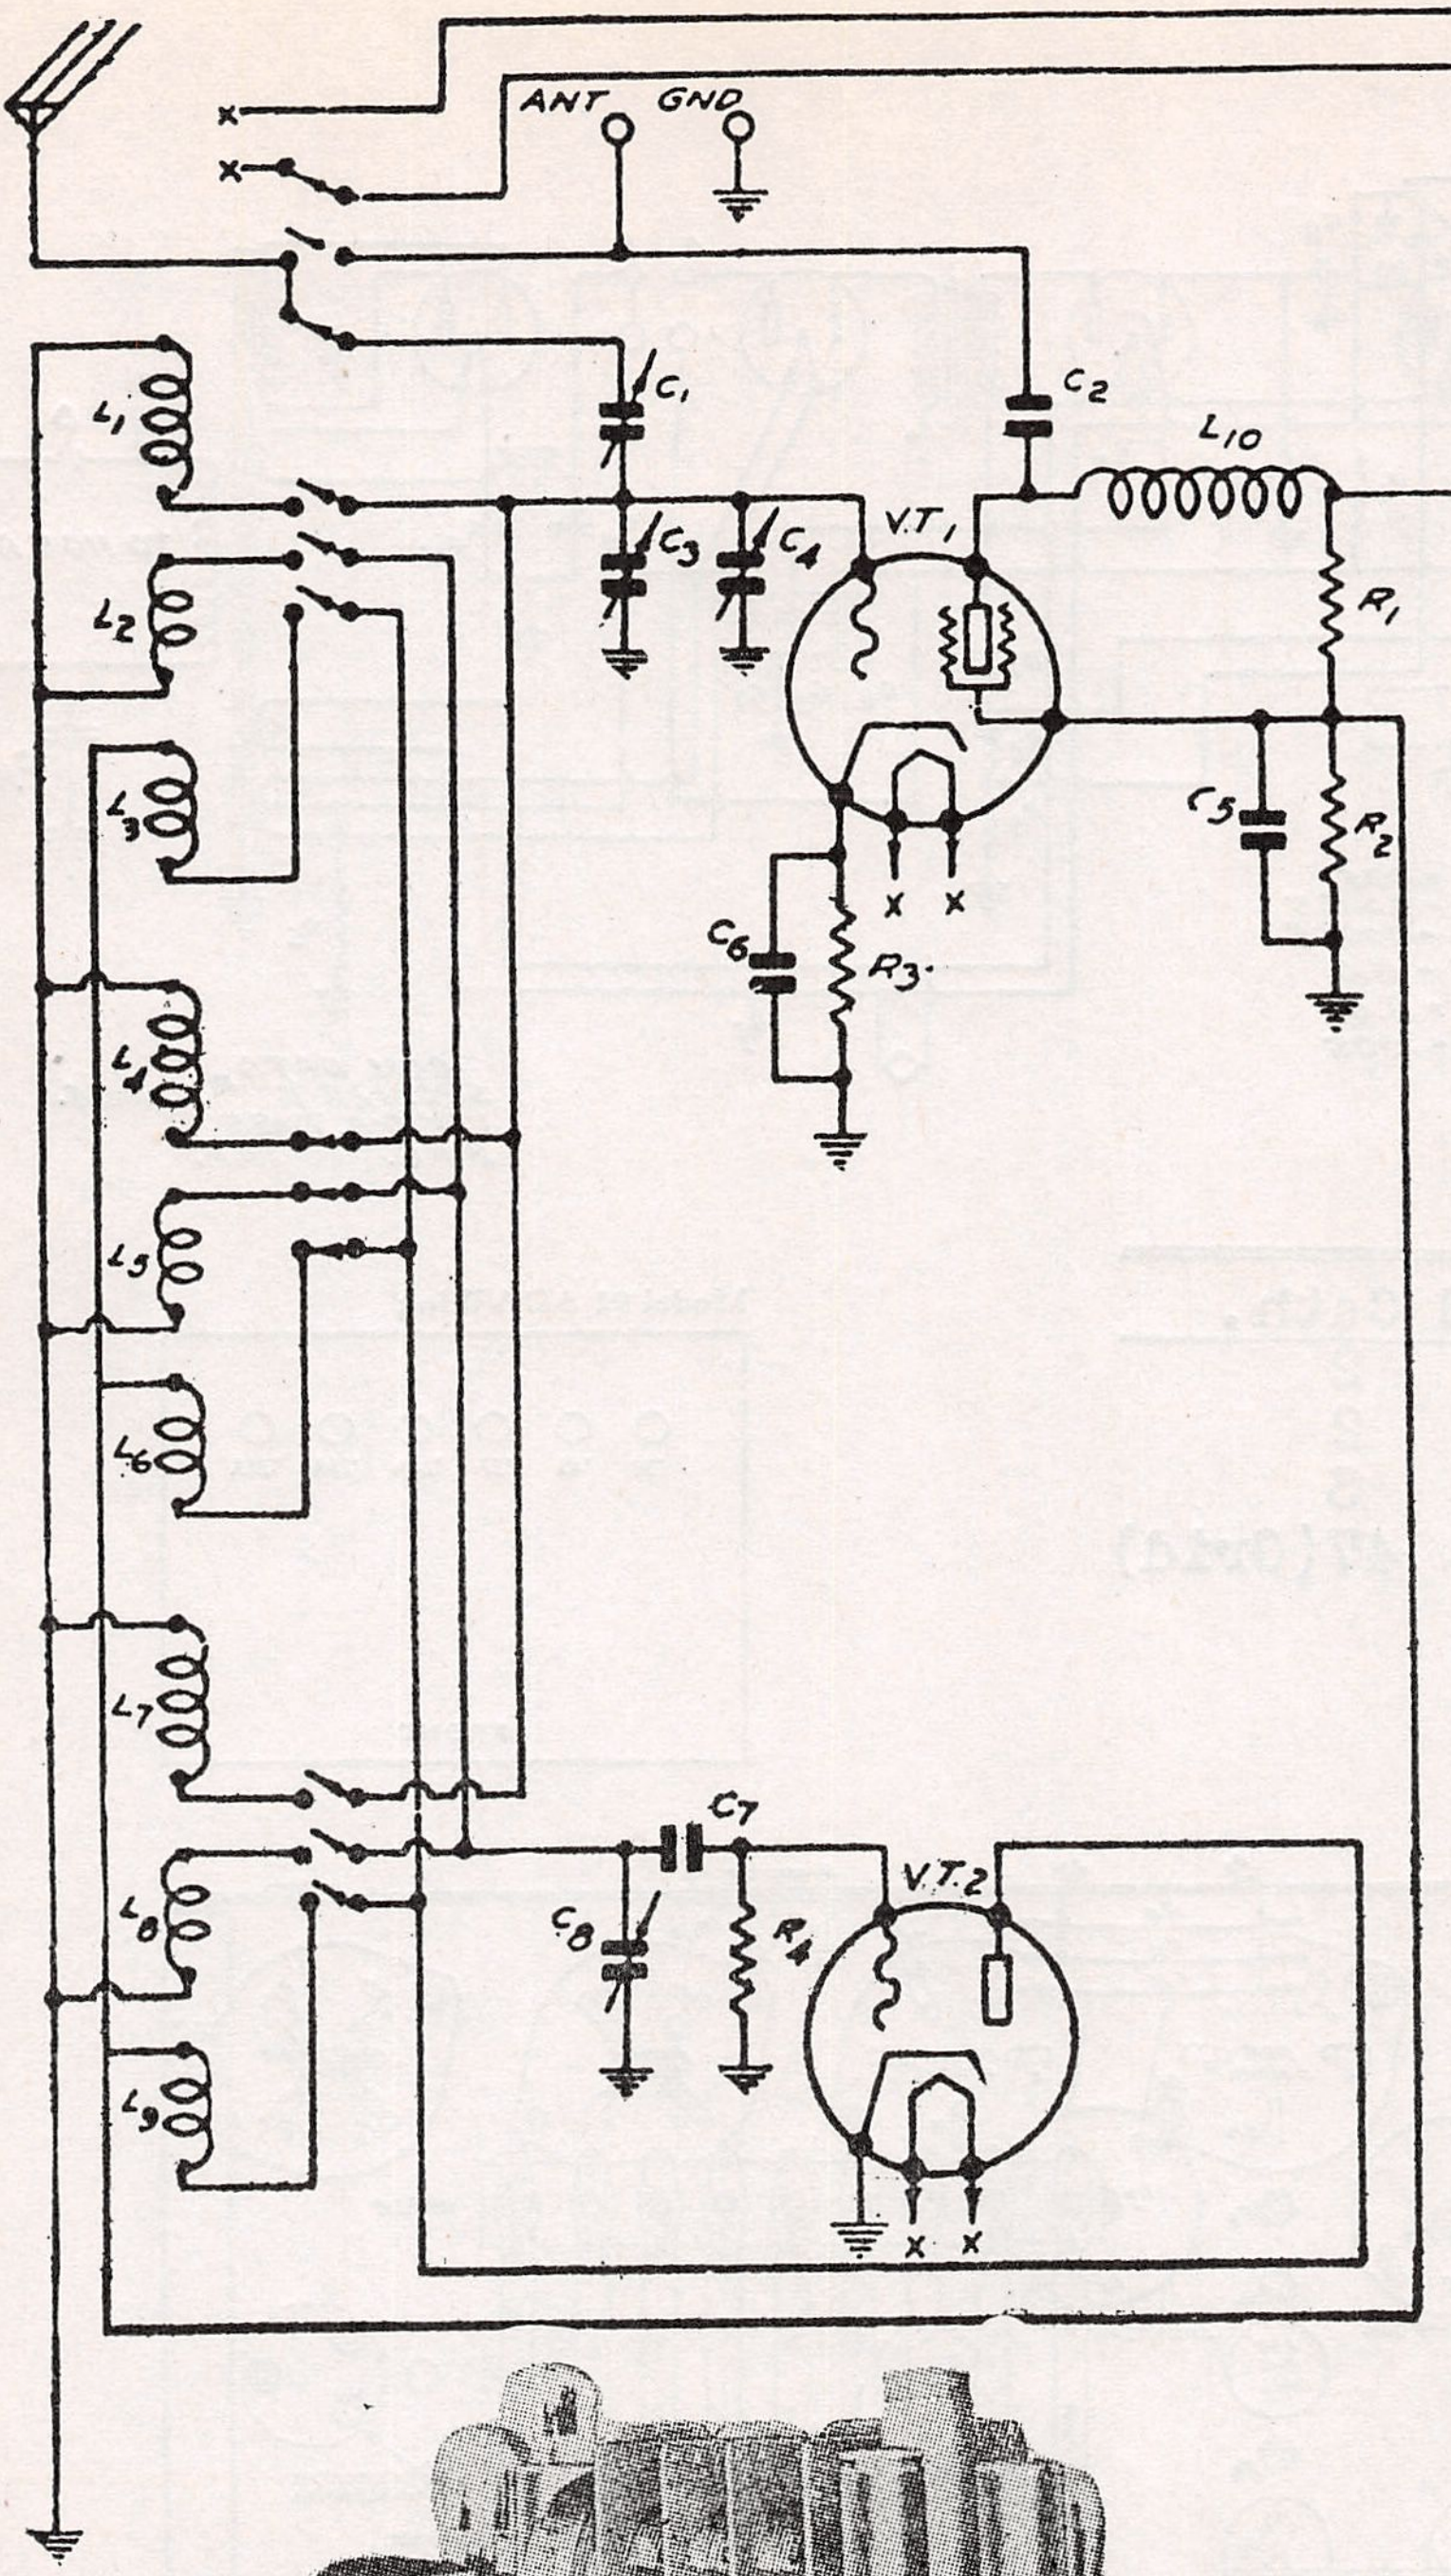
ANT
GND
C1
C2
L10
C3
C4
V.T.1
R1
R2
C5
C6
R3
L1
L2
L3
L4
L5
L6
L7
L8
L9
C7
C8
R4
V.T.2
X
H
H
SCREEN
247 ADAPTER

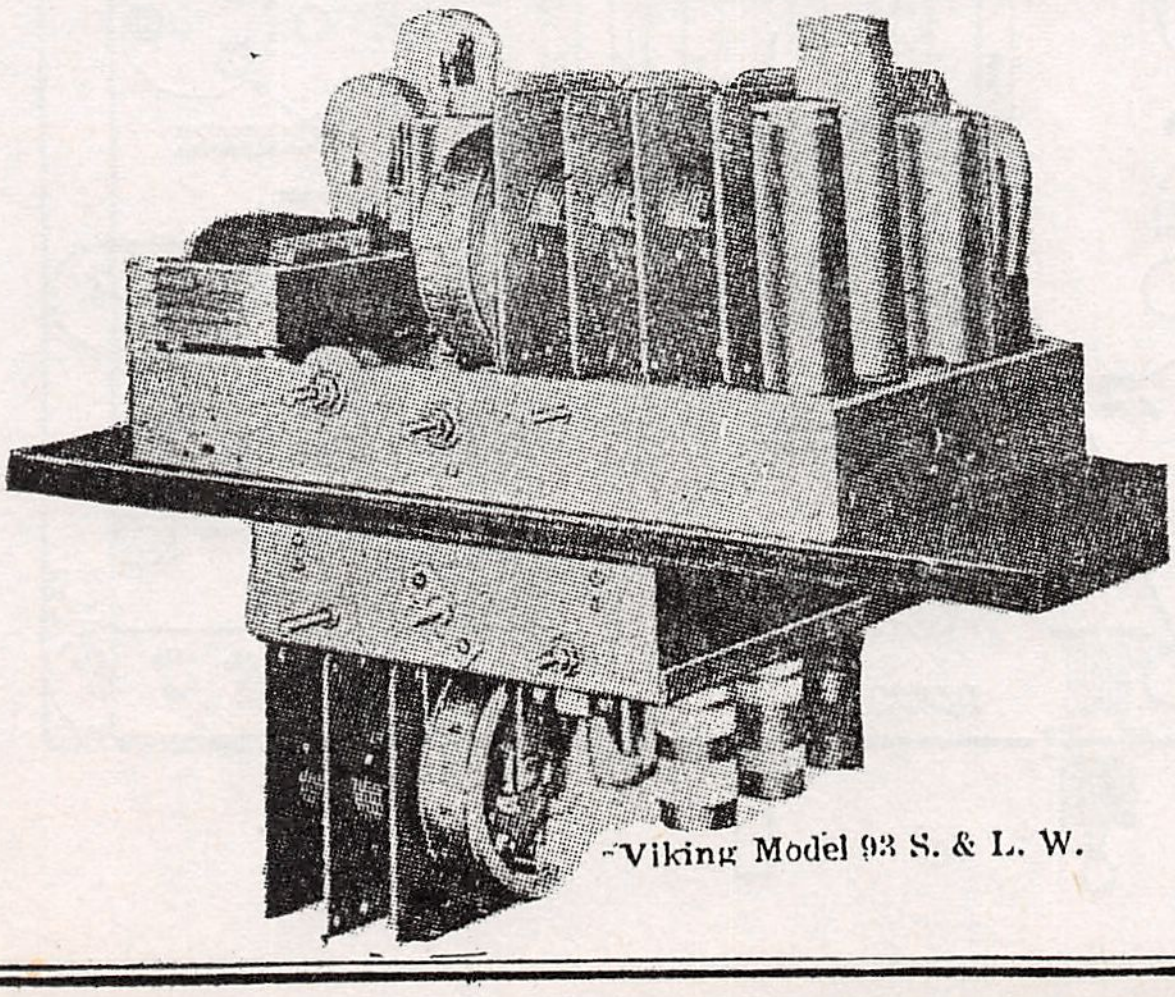

Viking Model 93 S. & L. W.

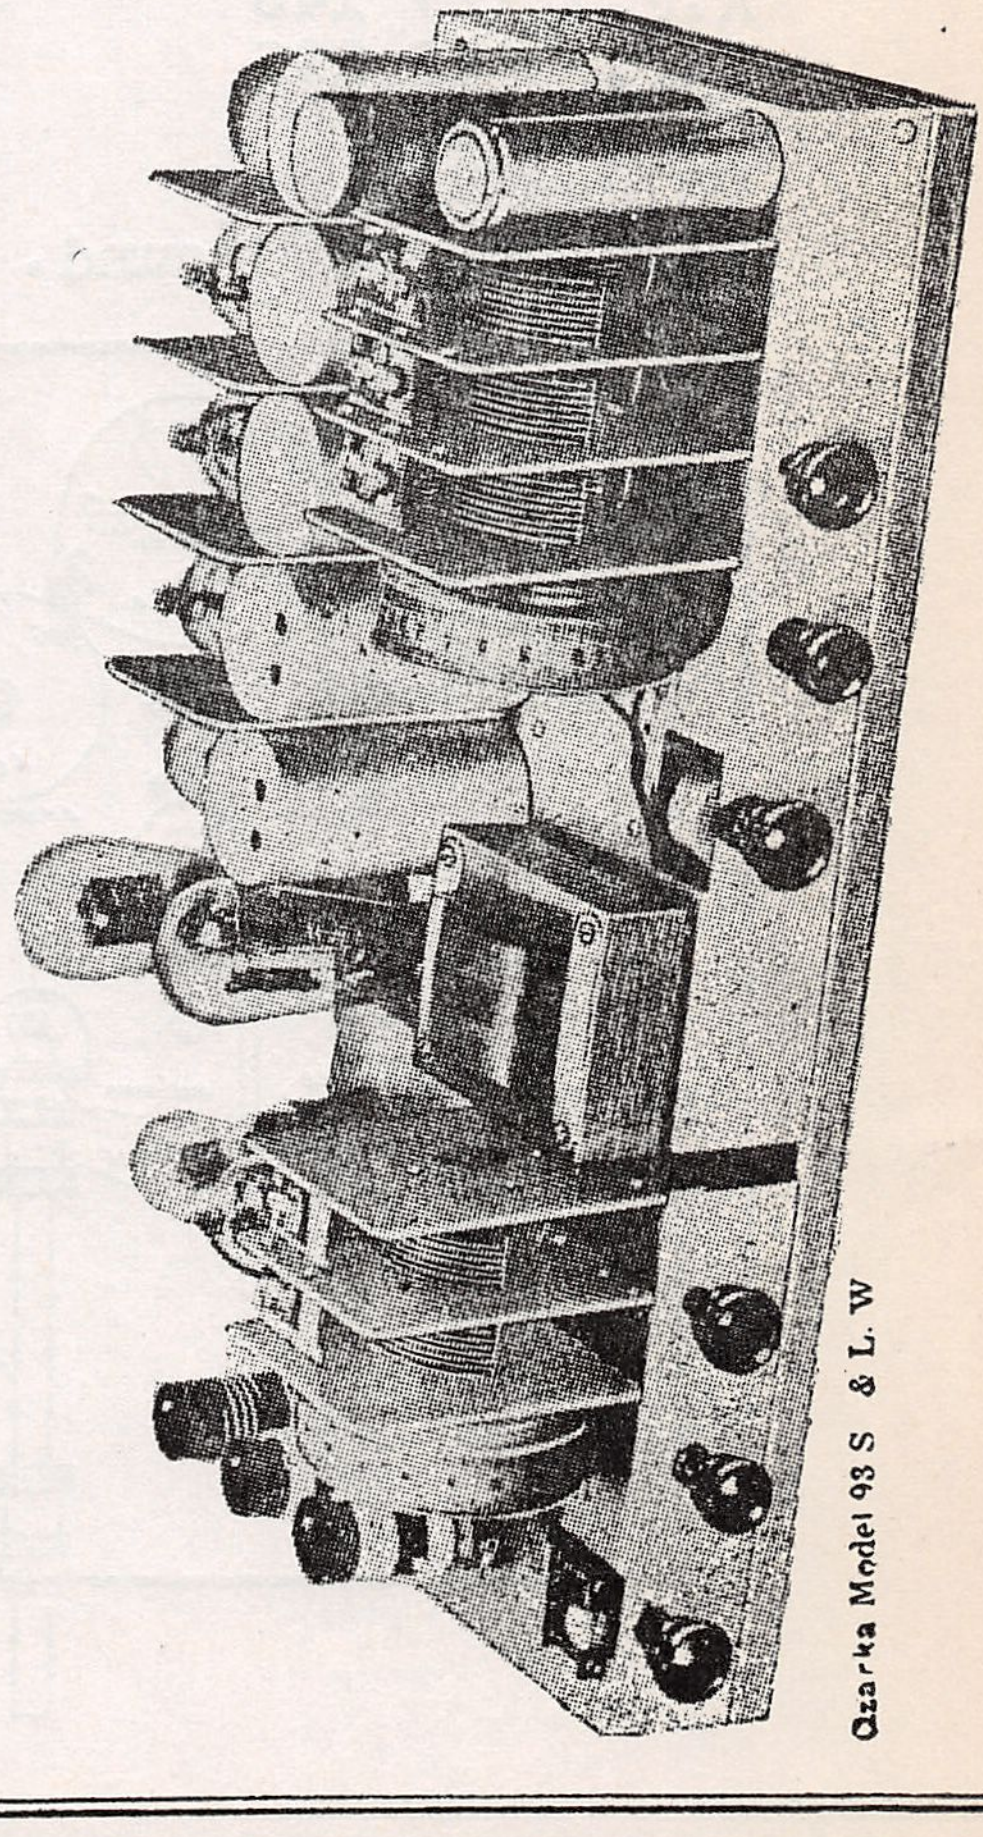

Ozarka Model 93 S & L. W

MODEL Viking 91 AC
Schematic, Chassis
Voltage

OZARKA, INC.

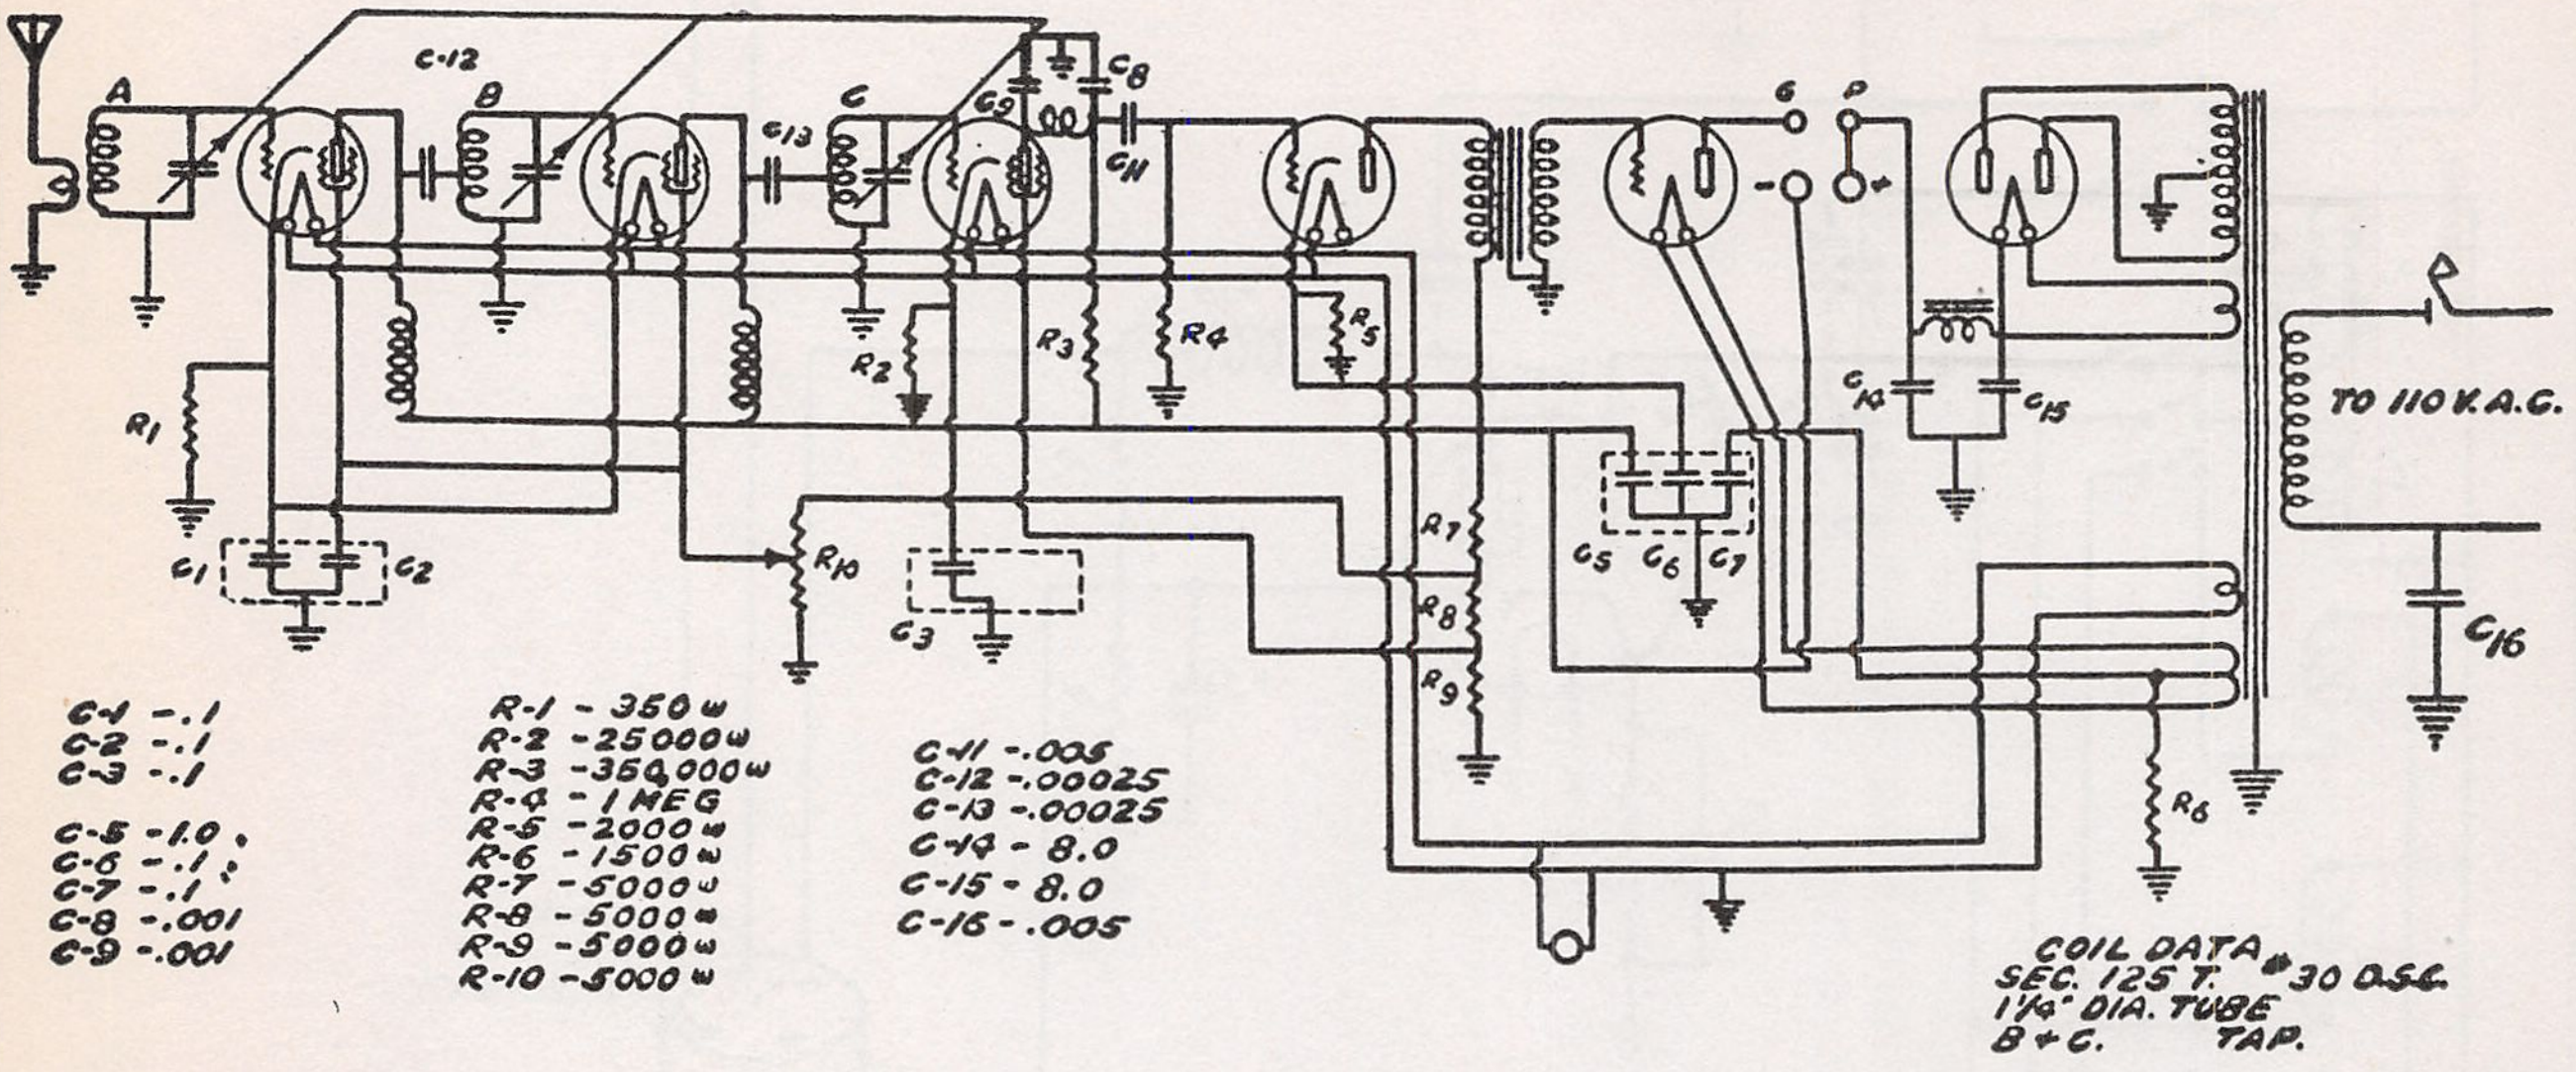
A
B
C
C-12
C13
C9
C8
CH
6
P
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
C1
C2
C3
C5
C6
C7
C14
C15
C16
TO 110 V.A.C.
C-1 -.1
C-2 -.1
C-3 -.1
C-5 -1.0
C-6 -.1
C-7 -.1
C-8 -.001
C-9 -.001
R-1 - 350 w
R-2 -25000 w
R-3 -350,000 w
R-4 - 1 MEG
R-5 -2000 w
R-6 -1500 w
R-7 -5000 w
R-8 -5000 w
R-9 -5000 w
R-10 -5000 w
C-11 -.005
C-12 -.00025
C-13 -.00025
C-14 - 8.0
C-15 - 8.0
C-16 -.005
COIL DATA
SEC. 125 T. #30 D.S.C.
1¼" DIA. TUBE
B+C. TAP.

MODEL VIKING 91

Tube	Type	Plate	Grid	Cath.
R.F.	'24	150	65	2
R.F.	'24	150	65	2
Det.	'24	50	30	3
A.F.	'27	145		47(Grid)
Pwr.	'45	295		
Rect.	'80			

Volume Max.
Voltages To Ground.

Model 91 AC Viking

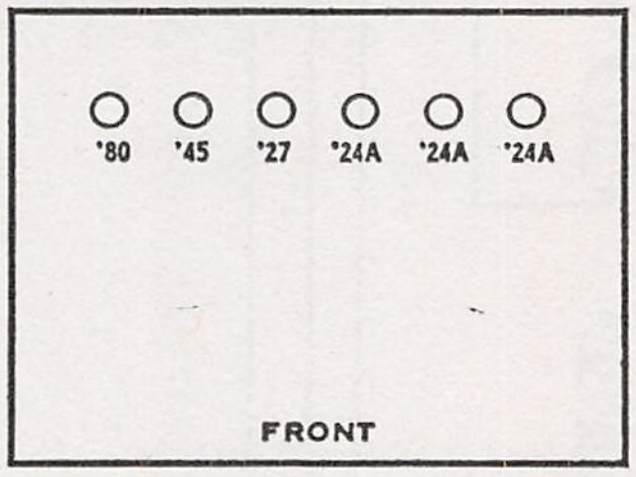
'80
'45
'27
'24A
'24A
'24A
FRONT

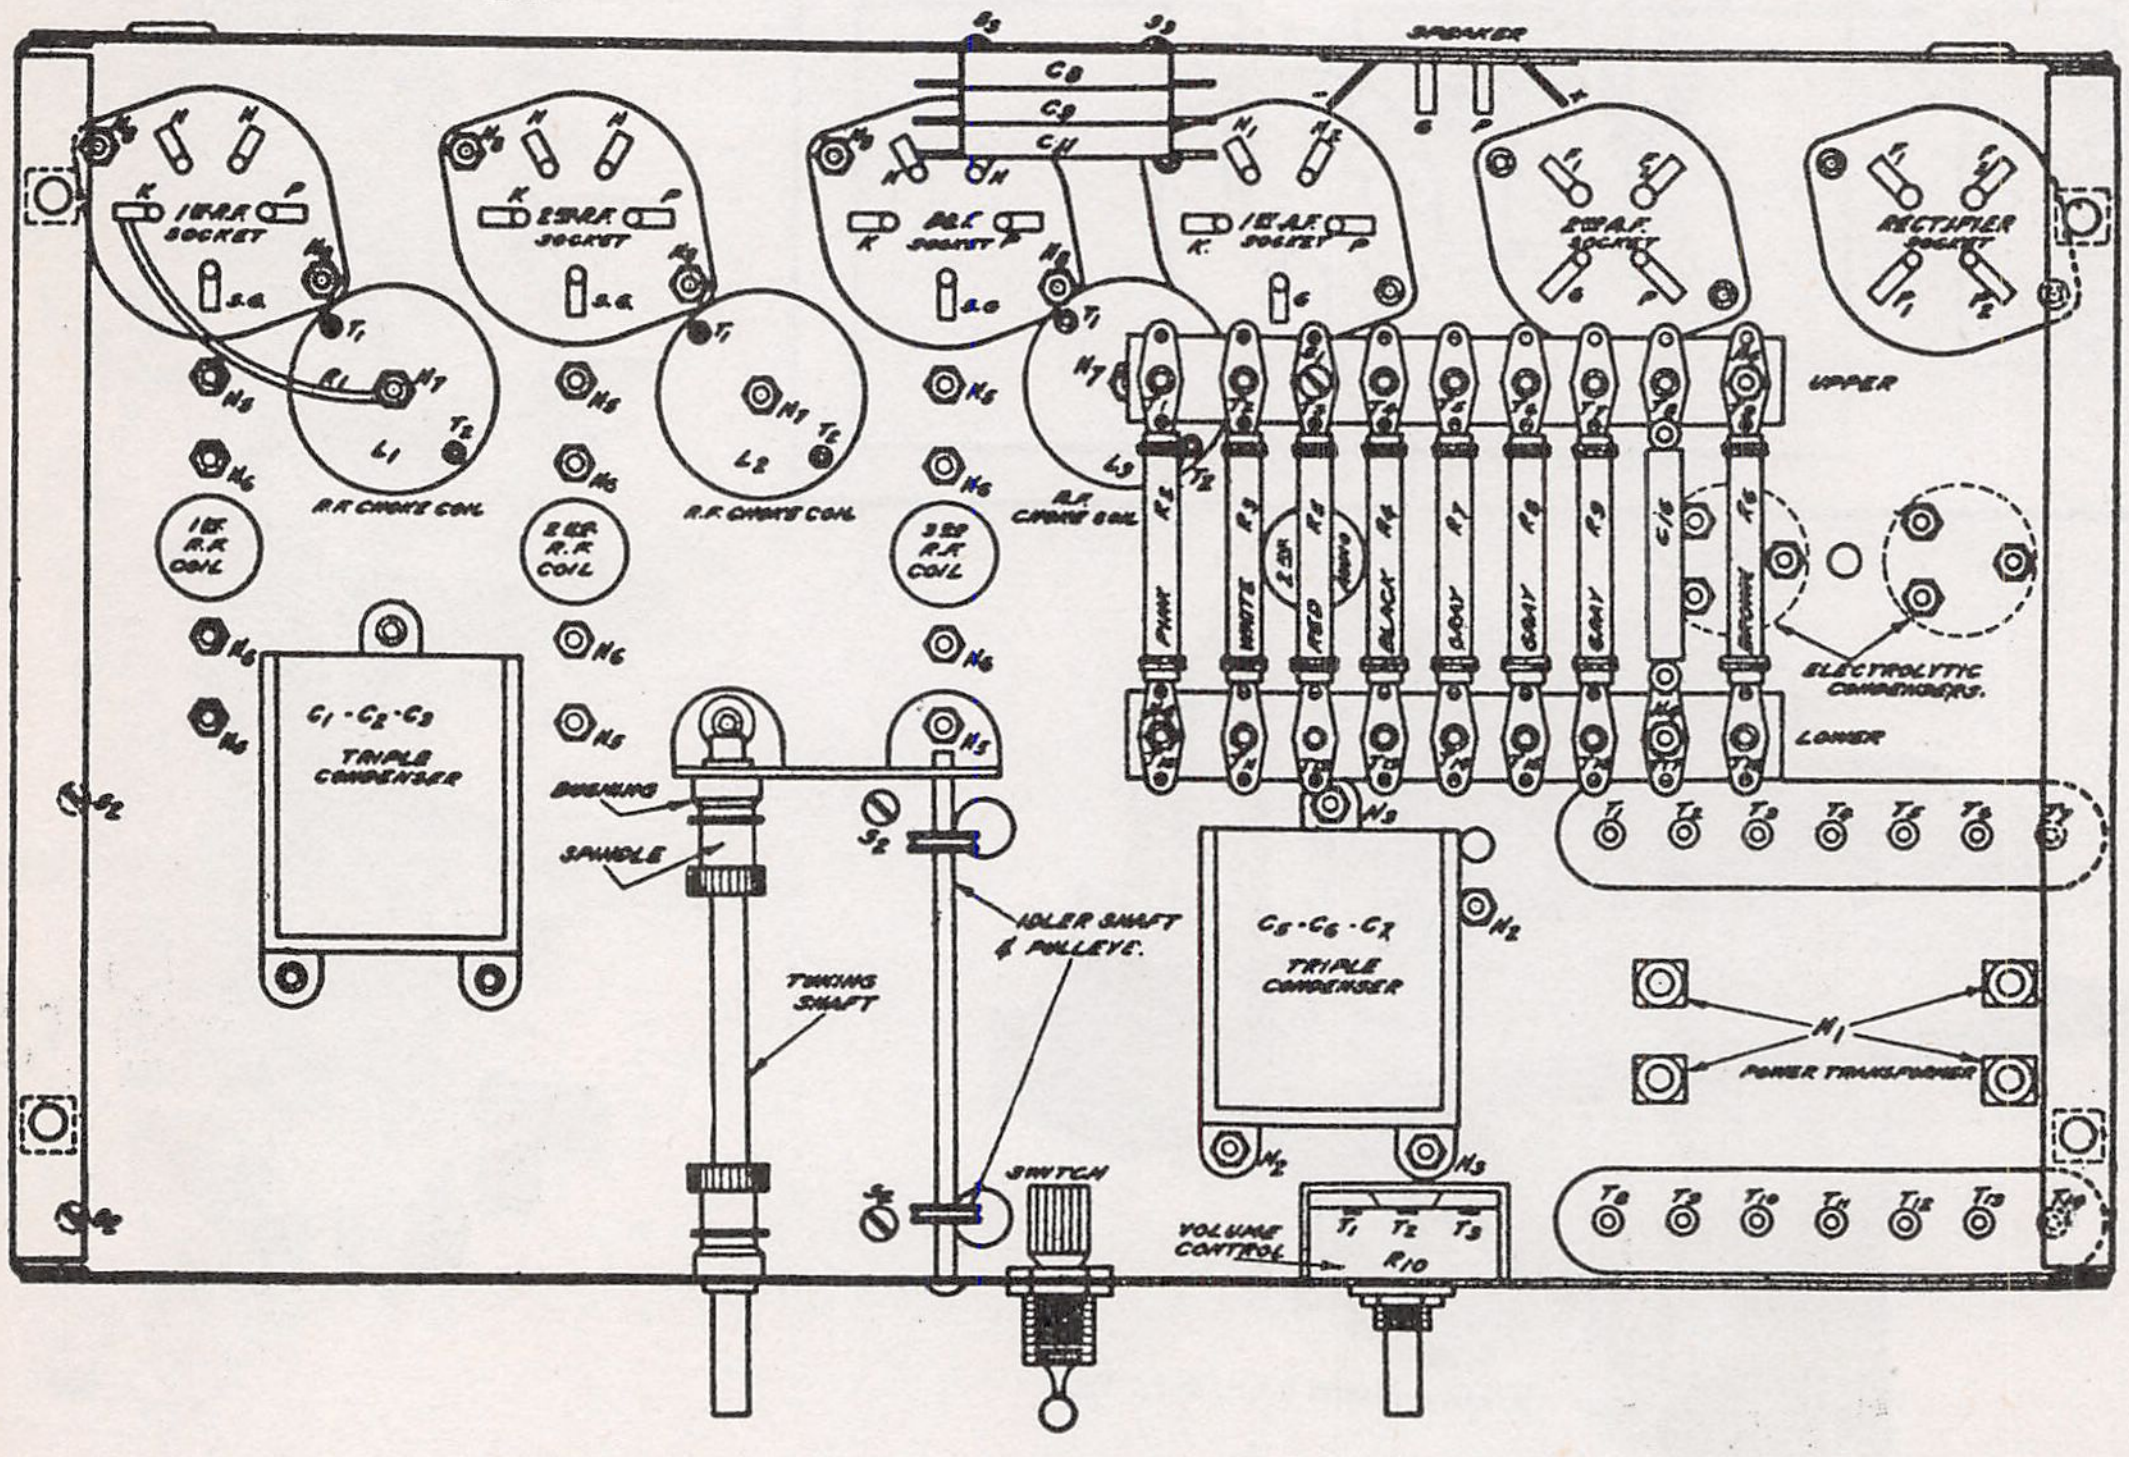
S3
C8
C9
C11
SPEAKER
G
P
1st R.F. SOCKET
2nd R.F. SOCKET
DET. SOCKET
1st A.F. SOCKET
2nd A.F. SOCKET
RECTIFIER SOCKET
K
P
H
S.G.
H5
H6
H7
H8
T1
T2
R1
L1
L2
L3
R.F. CHOKE COIL
1st R.F. COIL
2nd R.F. COIL
3rd R.F. COIL
C1 - C2 - C3
TRIPLE CONDENSER
BUSHING
SPINDLE
TUNING SHAFT
IDLER SHAFT & PULLEYS.
S2
SWITCH
VOLUME CONTROL
R10
UPPER
LOWER
PINK
WHITE
RED
BLACK
GRAY
GRAY
GRAY
BROWN
2.5R
C16
ELECTROLYTIC CONDENSERS.
C5 - C6 - C7
TRIPLE CONDENSER
H1
H2
H3
POWER TRANSFORMER

OZARKA, INC.

MODEL Viking 92 AC
Schematic, Chassis
Voltage

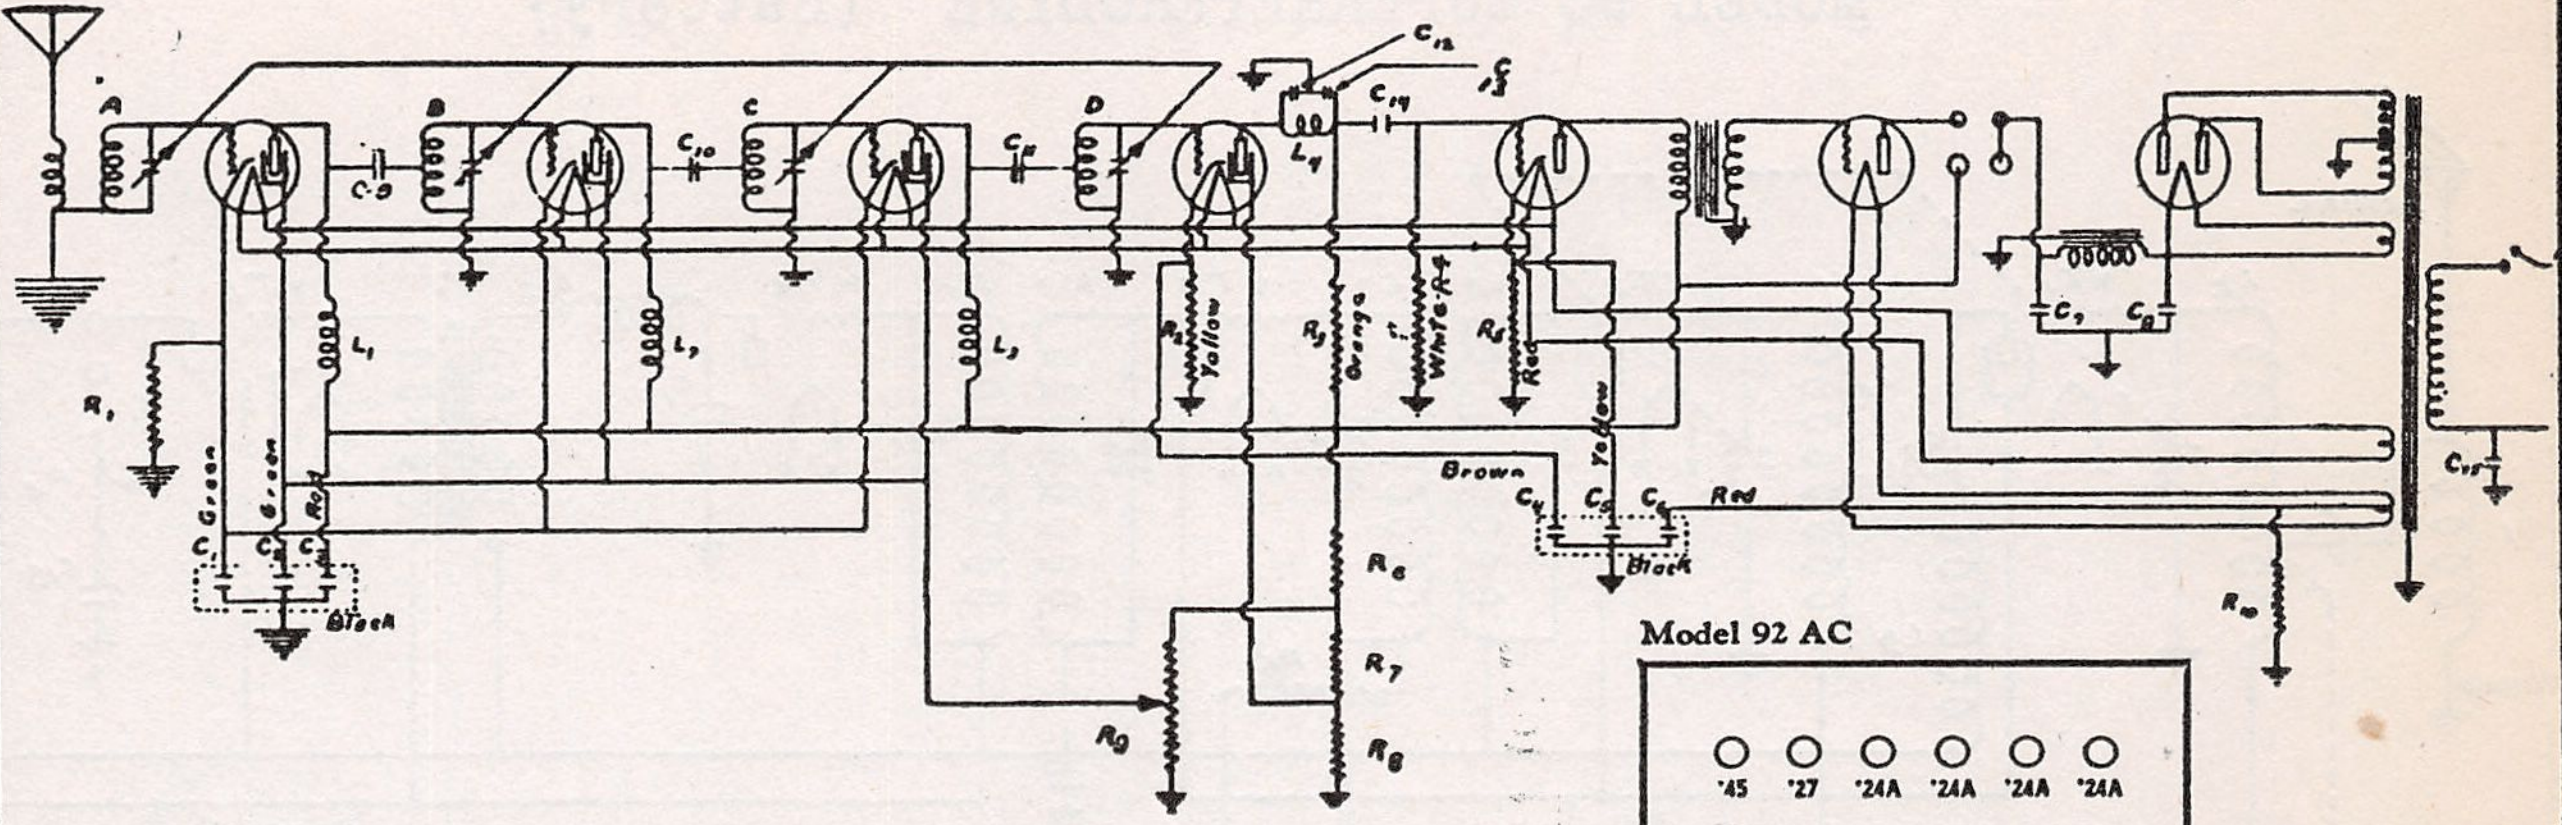
A
B
C
D
C9
C10
C11
C12
C13
C14
C1
C2
C3
C4
C5
C6
C7
C8
C15
L1
L2
L3
L4
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
Green
Green
Red
Black
Yellow
Orange
White-R-4
Red
Brown
Yellow
Red
Black

Model 92 AC

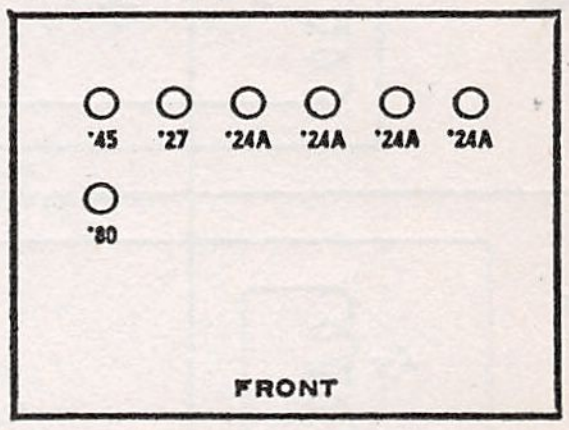
'45
'27
'24A
'24A
'24A
'24A
'80
FRONT

C1	.25	Mf.	RF	Bypass
C2	.25	"	"	"
C3	1.0	"	"	"
C4	.25	"	AF	"
C5	.1	"	"	"
C6	.5	"	"	"
C7	8.0	"		
C8	8.0	"		
C9	.0001	"		
C10	.0001	"		
C11	.0001	"		
C12	.001	"		
C13	.001	"		
C14	.005	"		
C15	.005	"		

R1	225	Ohms
R2	40,000	"
R3	350,000	"
R4	1,000,000	"
R5	2,000	"
R6	5,000	"
R7	5,000	"
R8	5,000	"
R9	10,000	"
R10	1,600	"

Tube	Type	Plate	S.Grid	Cath.
R.F.	'24	150	70	2
R.F.	'24	150	70	2
R.F.	'24	150	70	2.5
Det.	'24	50	35	8
A.F.	'27	140	--	50(Grid)
Pwr.	'45	270	--	
Rect.	'80			

Volume MAX. Voltages to ground.

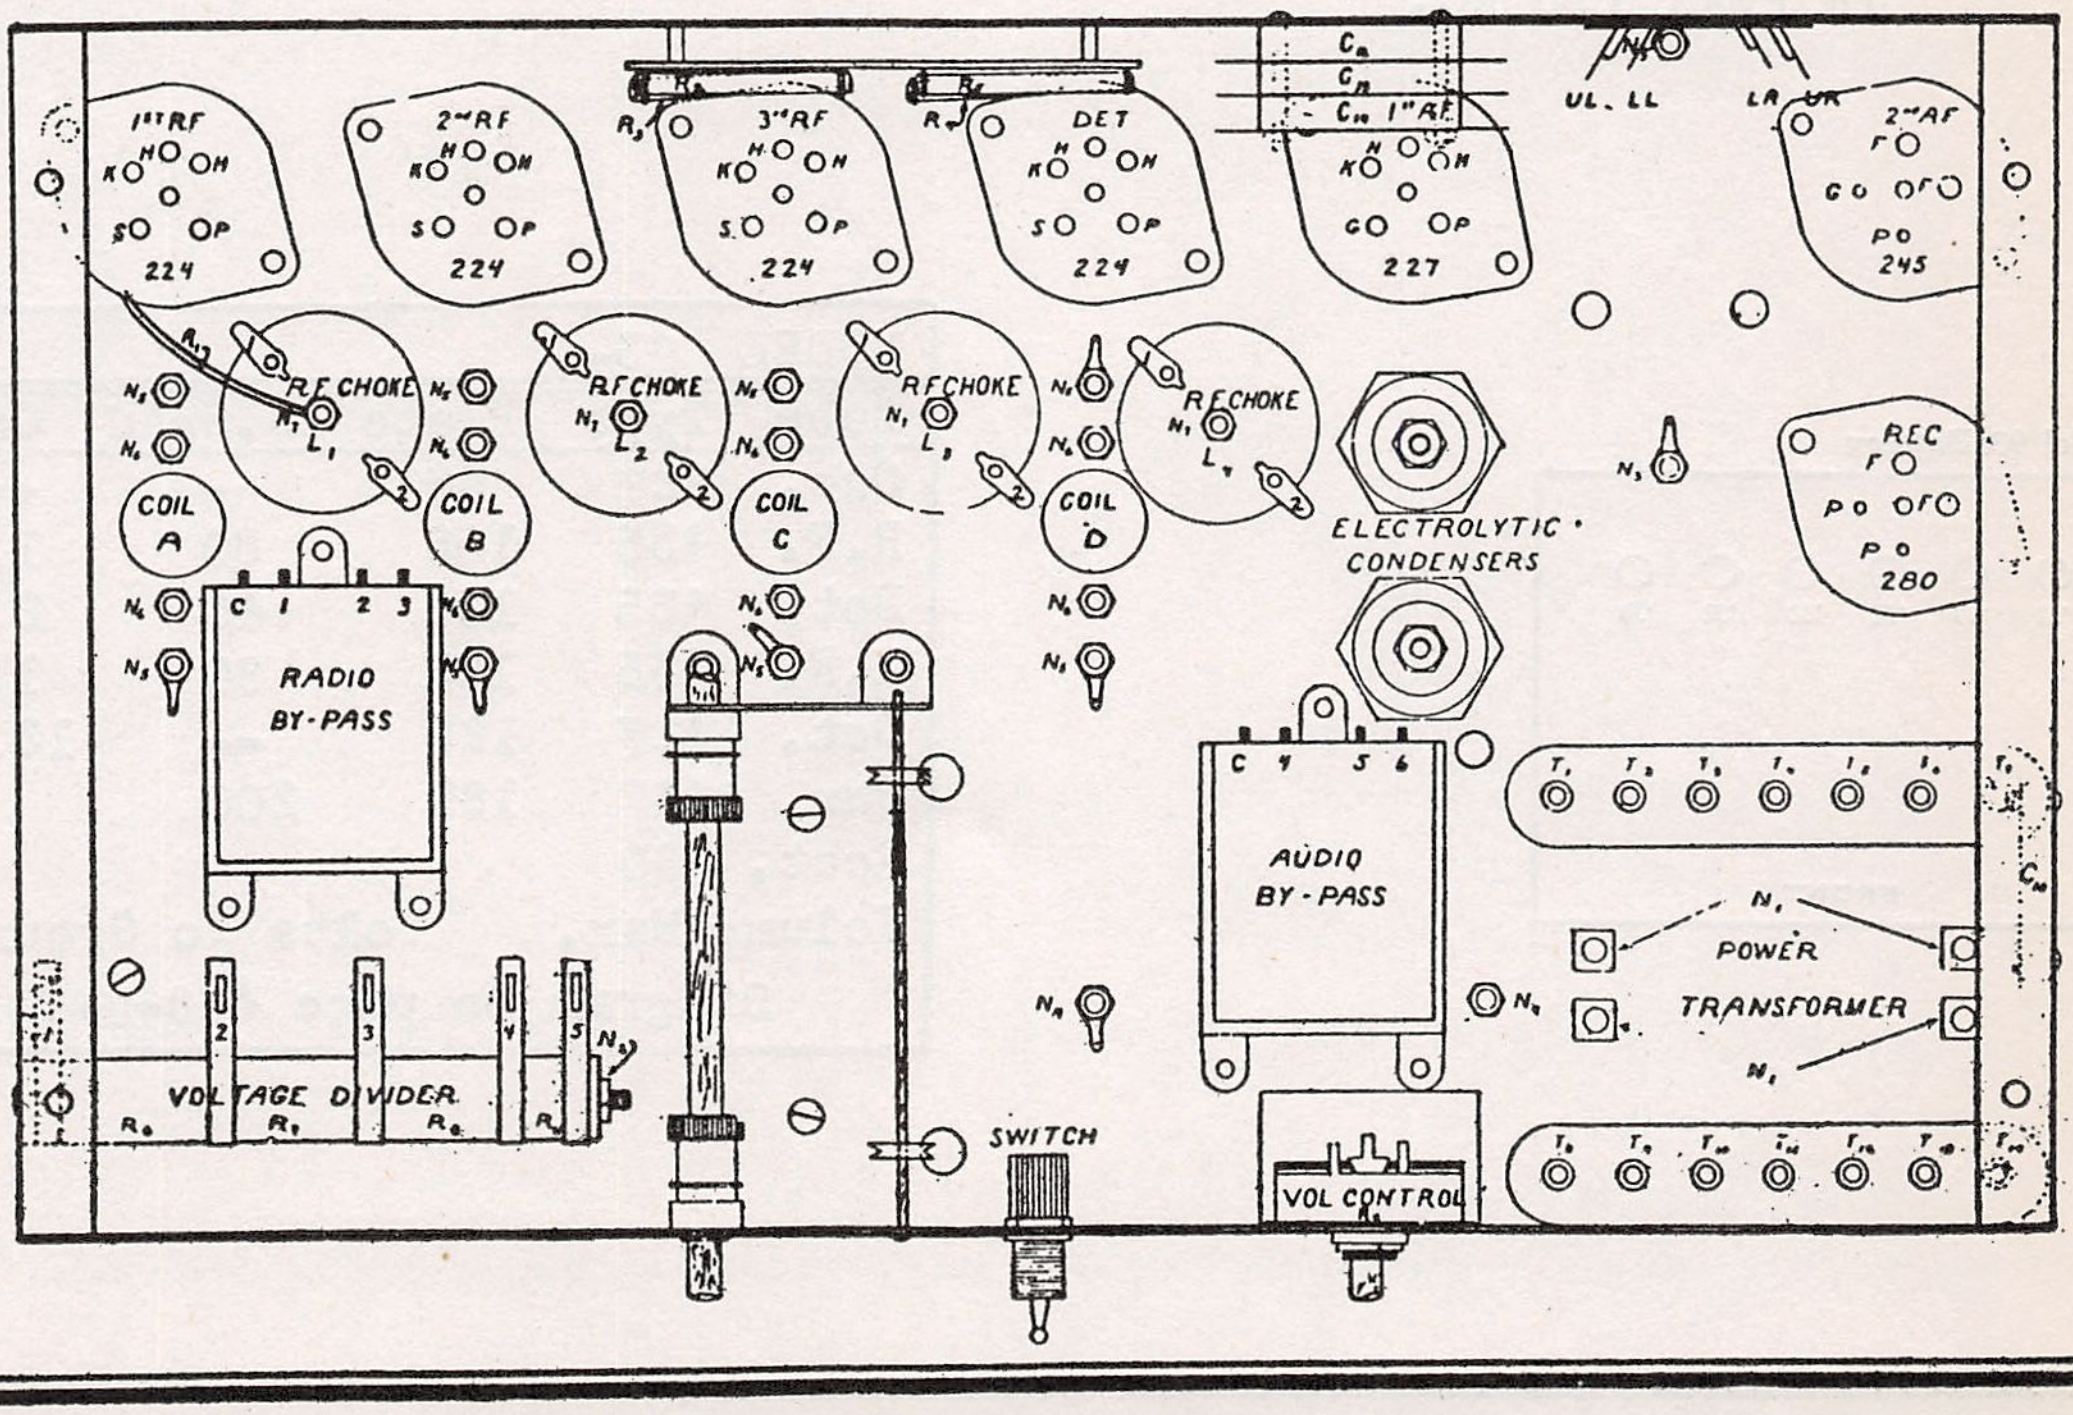
1st RF
2nd RF
3rd RF
DET
1st AF
2nd AF
224
224
224
224
227
245
REC
280
RF CHOKE
L1
L2
L3
L4
COIL A
COIL B
COIL C
COIL D
RADIO BY-PASS
ELECTROLYTIC CONDENSERS
AUDIO BY-PASS
POWER TRANSFORMER
VOLTAGE DIVIDER
SWITCH
VOL CONTROL
UL LL
LA UR

OZARKA, INC.

MODEL 93 Battery
Superheterodyne

MODEL 93 SUPERHETERODYNE (Battery)

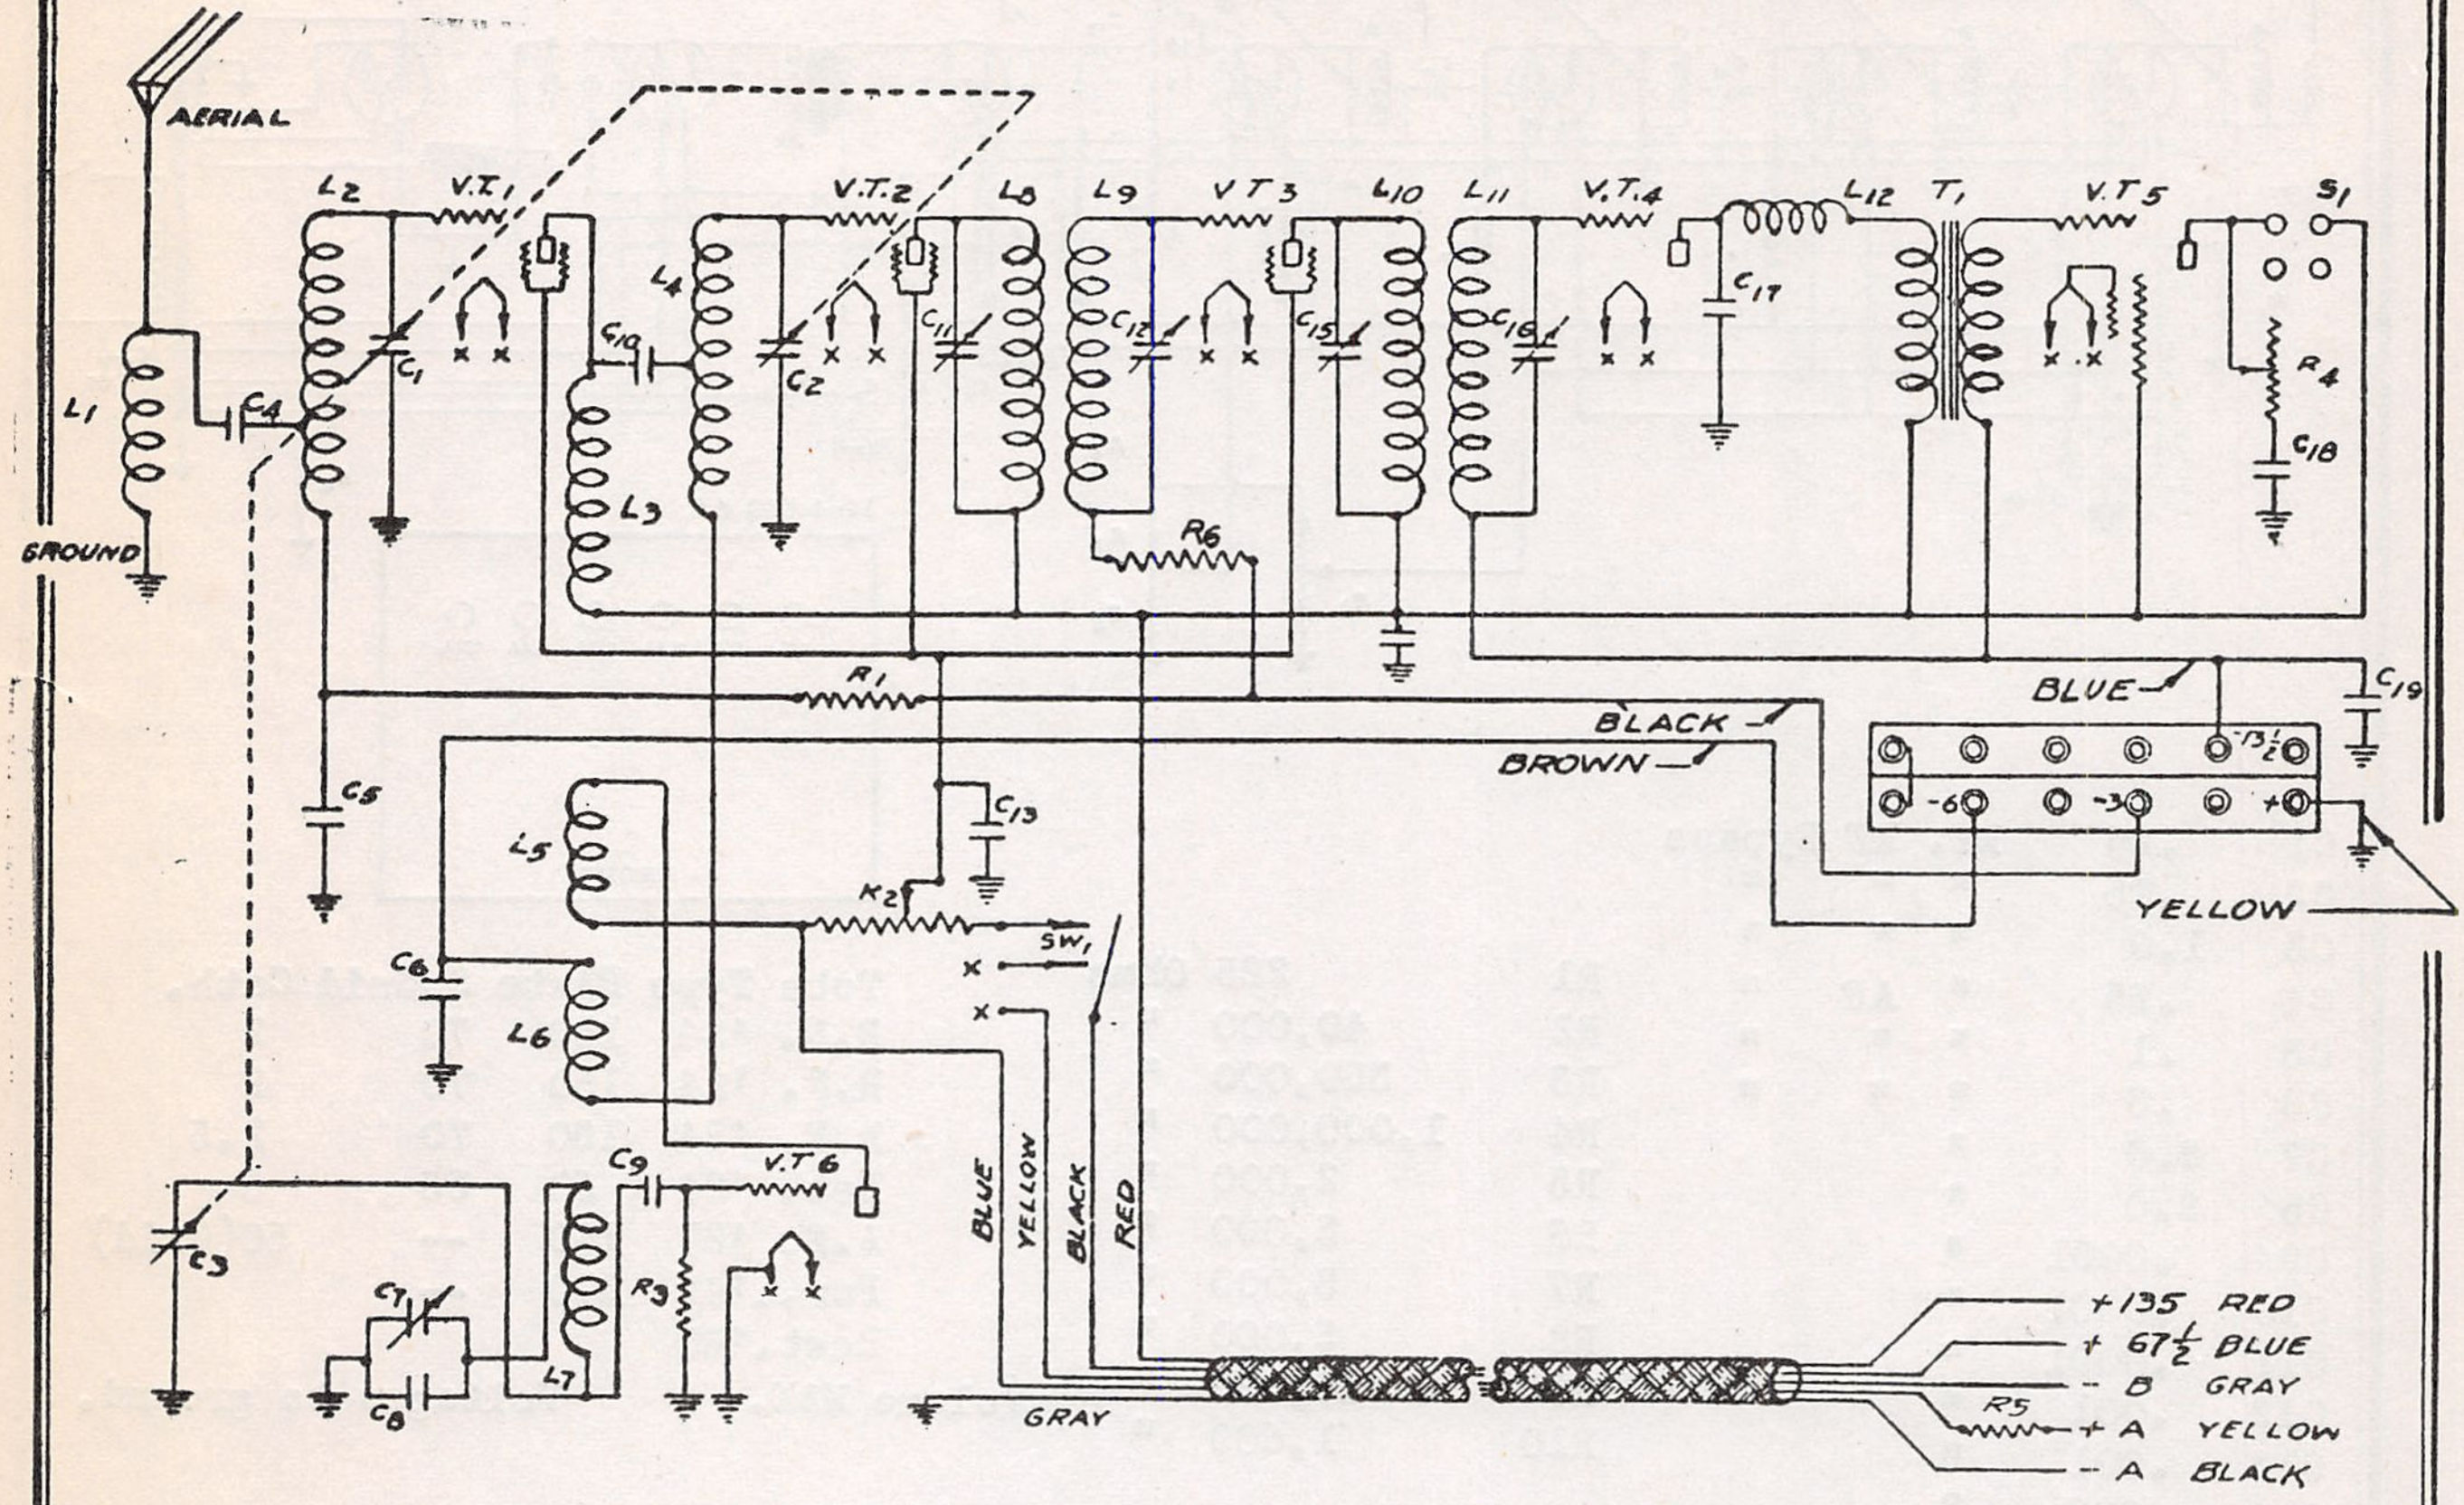
AERIAL
GROUND
L1
L2
V.T.1
C4
C1
L3
L4
C10
V.T.2
C2
L8
C11
L9
V.T3
C12
L10
C15
L11
C16
V.T.4
L12
C17
T1
V.T5
S1
R4
C18
R6
R1
C19
BLUE
BLACK
BROWN
13½
-6
-30
+0
YELLOW
C5
L5
C13
K2
SW1
C6
L6
C9
V.T6
C3
C7
C8
L7
R3
BLUE
YELLOW
BLACK
RED
GRAY
+135 RED
+ 67½ BLUE
- B GRAY
R5
+ A YELLOW
- A BLACK

IF PEAK 175 KC.

Model 93 Battery

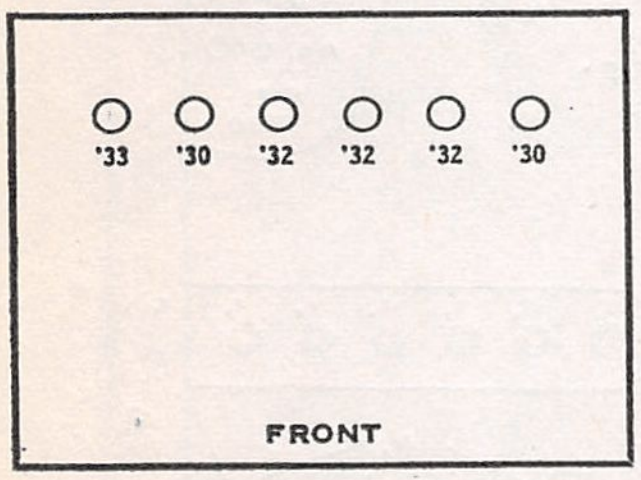
'33
'30
'32
'32
'32
'30
FRONT

MODEL 93-A

Tube	Type	Plate	S.Grid	Cath.
Osc.	'27	80	--	--
R.F.	'35	155	80	1.5
Det.	'35	155	40	2.
I.F.	'35	155	80	1.5
Det.	'27	125	--	13.
Pwr.	'47	182	200	
Rect.	'80			

Volume Max. Volts To Ground.

Diagram on page 458-B-7

MODEL 93-A

OZARKA, INC.

MODEL 93-A SUPERHETERODYNE

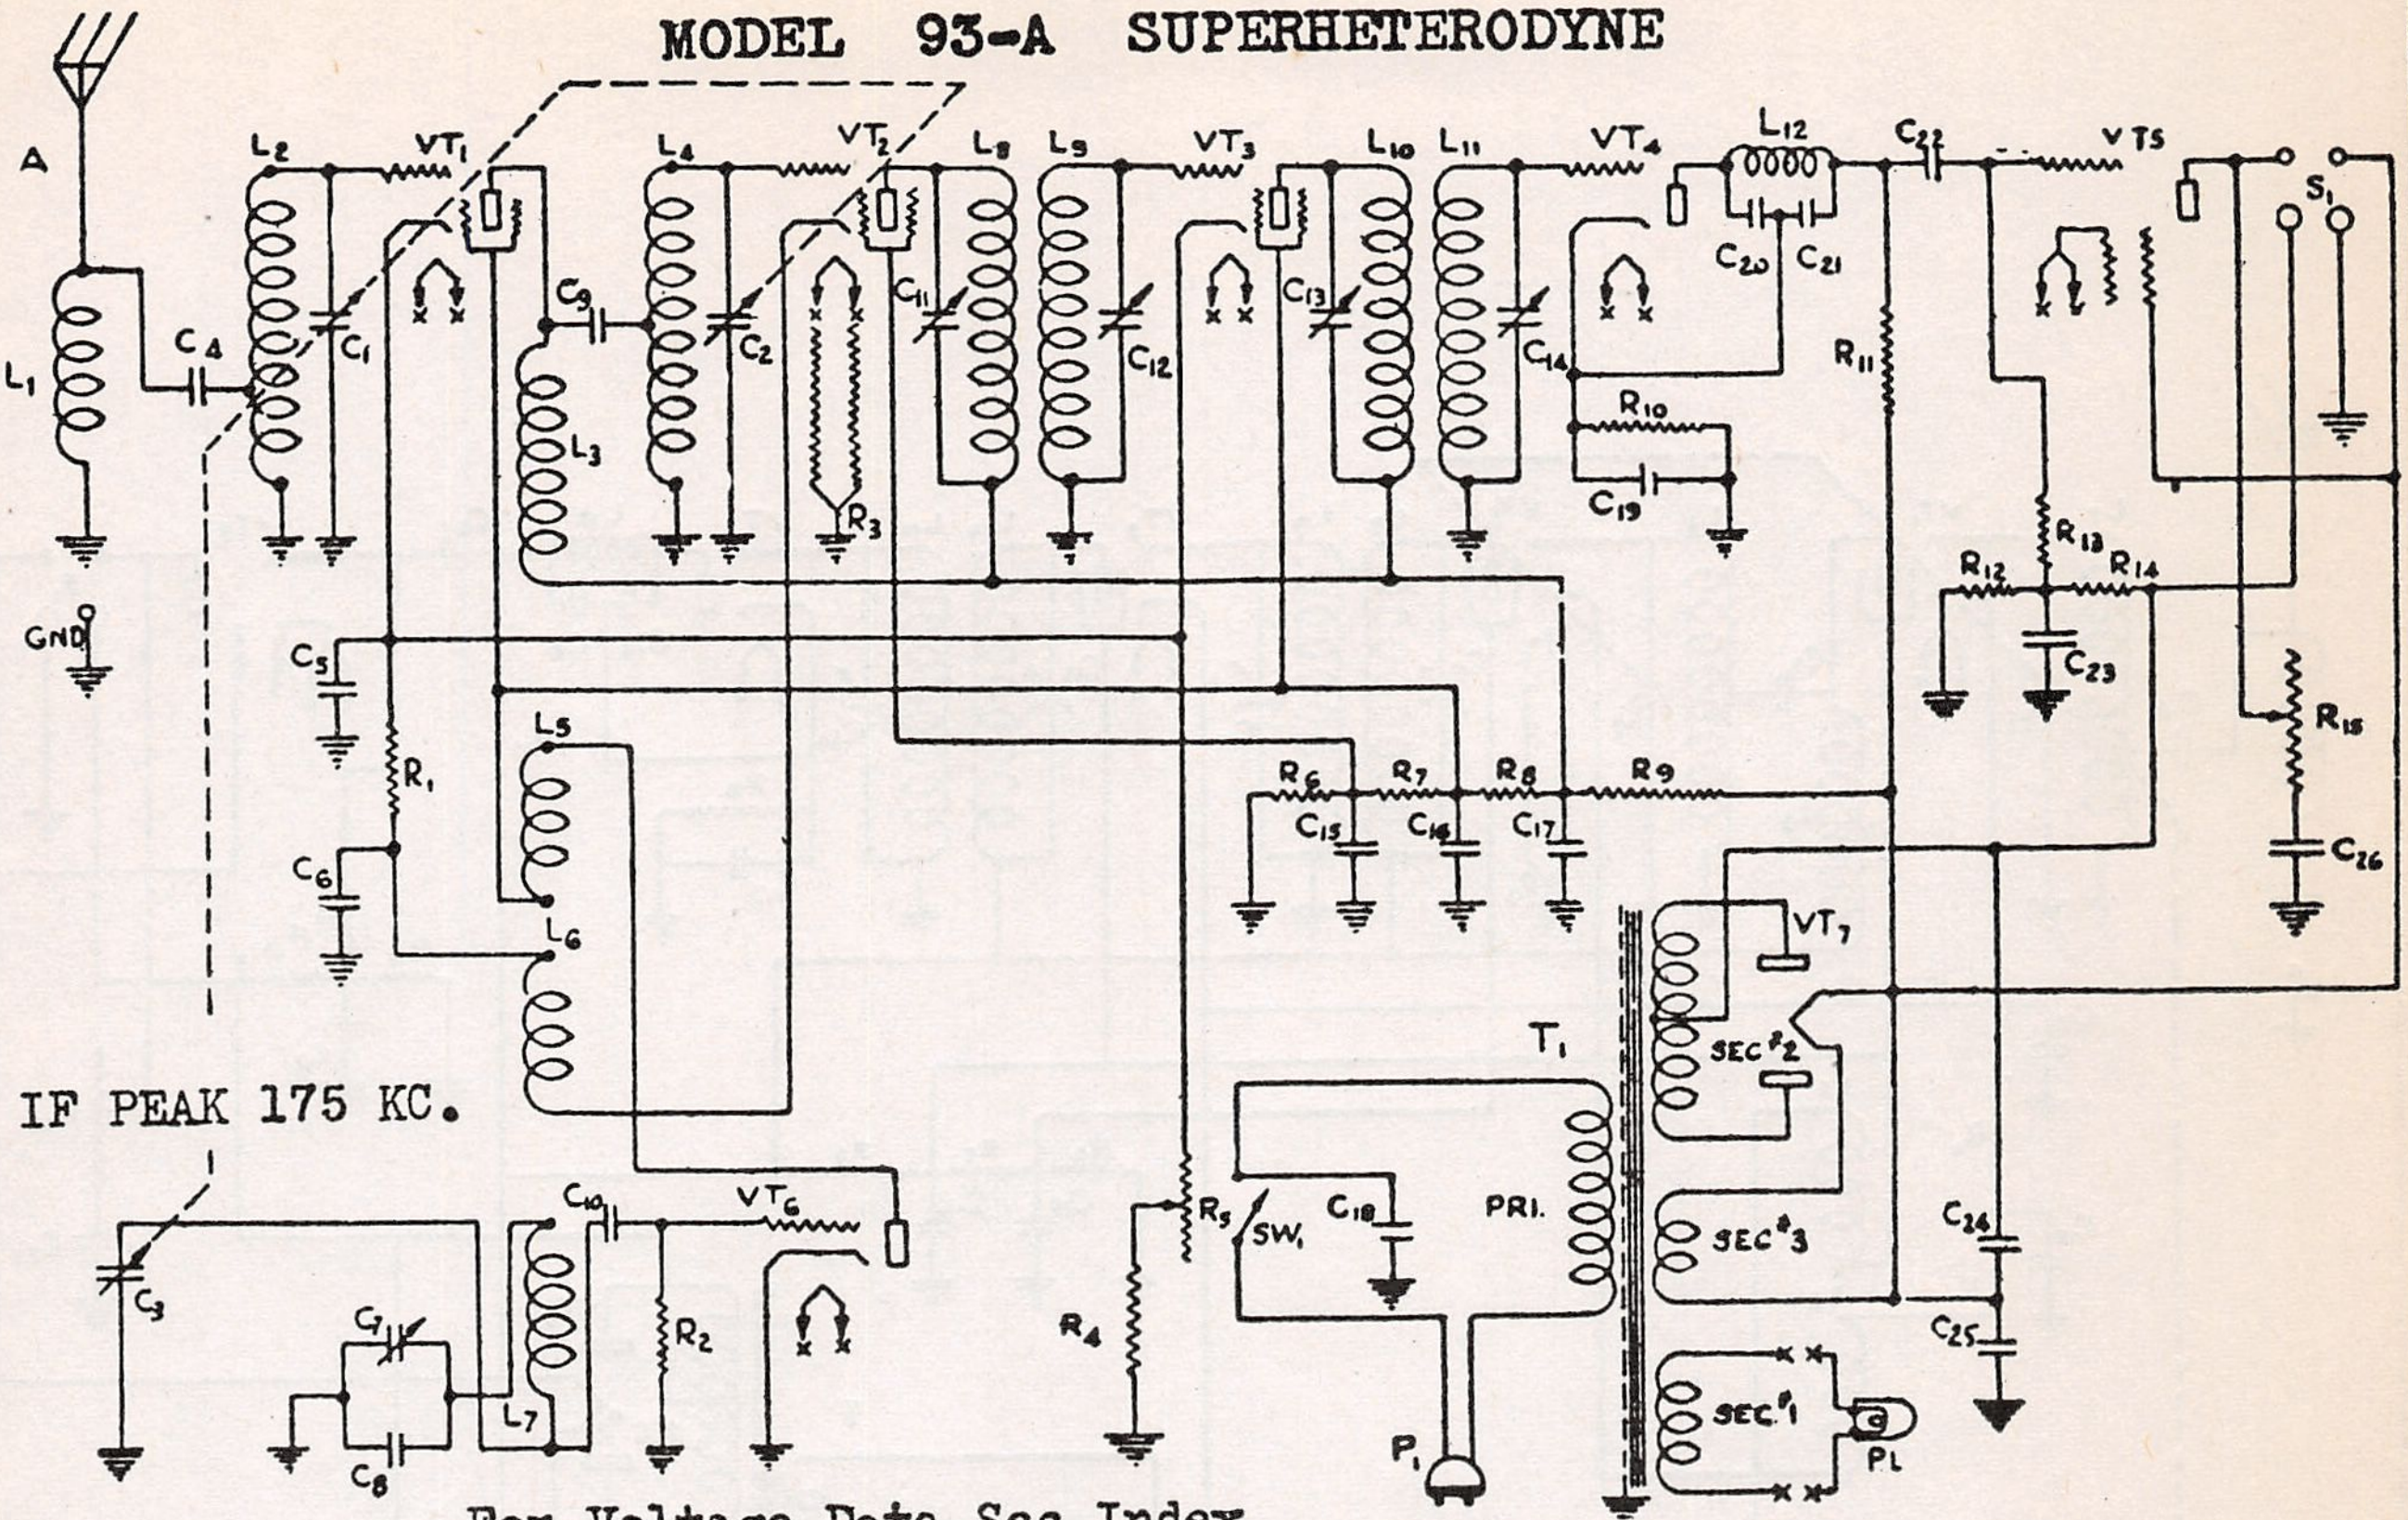
A
GND
L1
L2
L3
L4
L5
L6
L7
L8
L9
L10
L11
L12
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21
C22
C23
C24
C25
C26
VT1
VT2
VT3
VT4
VT5
VT6
VT7
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
SW1
S1
T1
PRI.
SEC #1
SEC #2
SEC #3
P1
PL

IF PEAK 175 KC.

For Voltage Data See Index

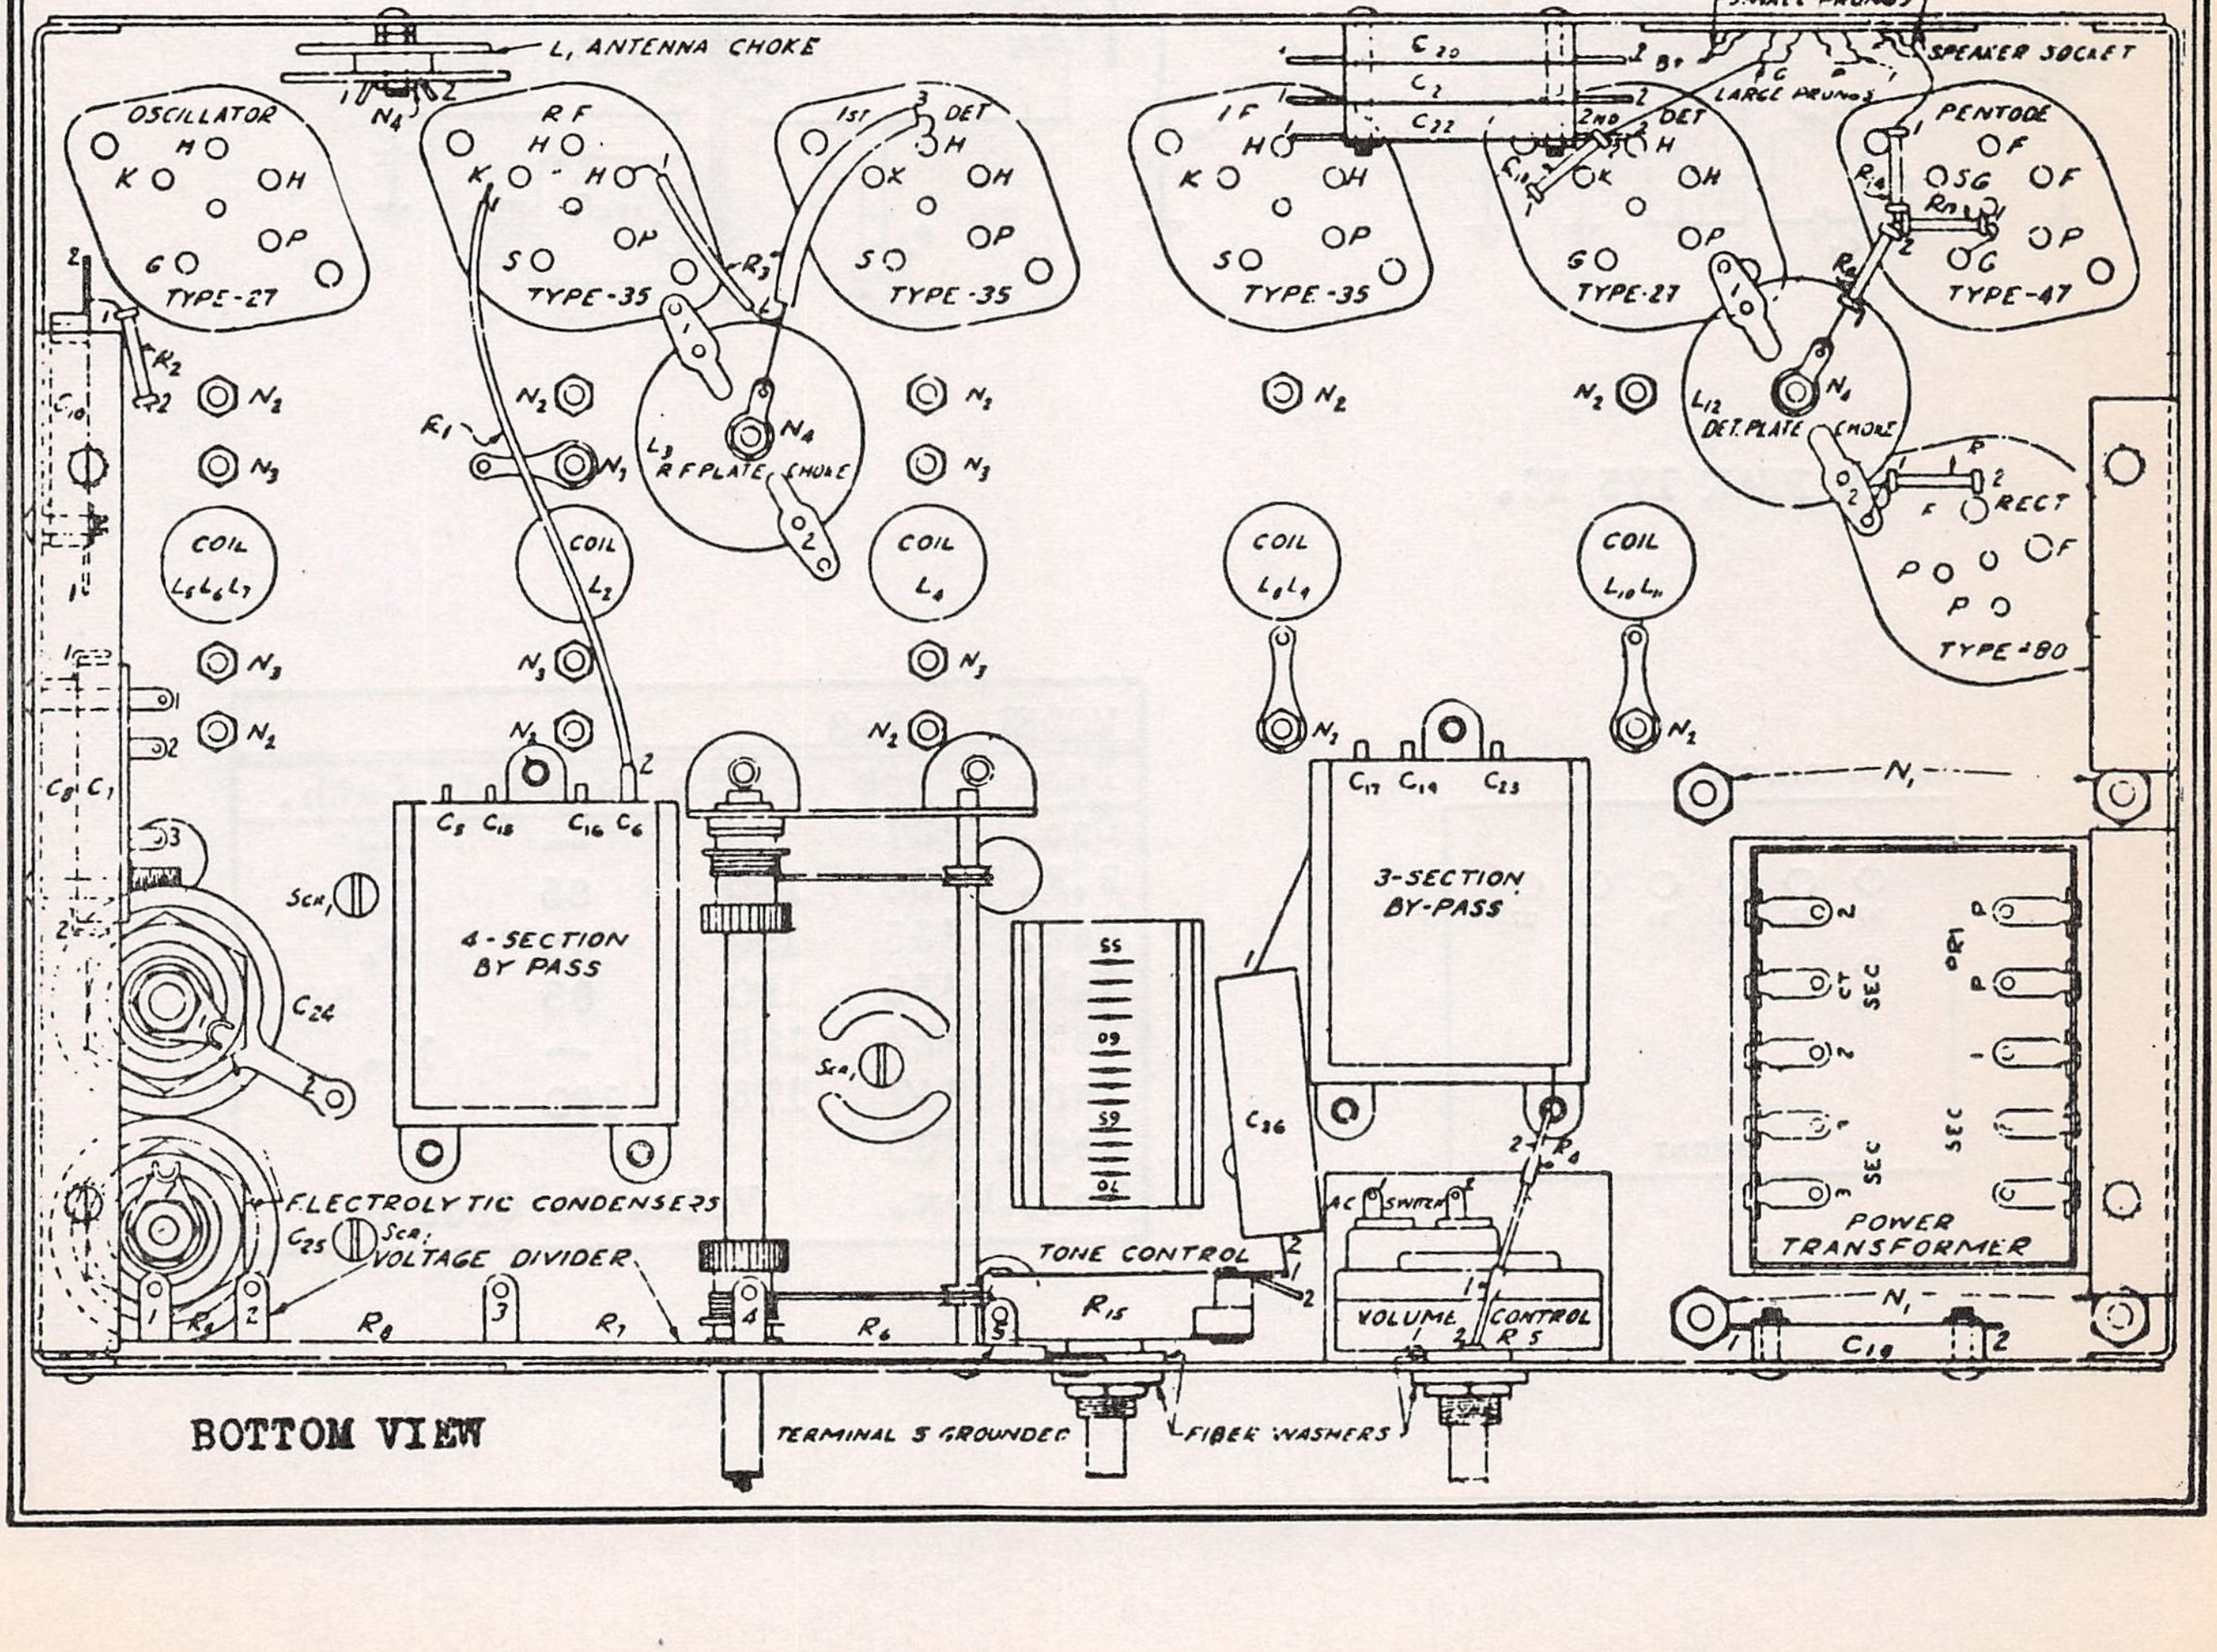
L1 ANTENNA CHOKE
N4
C20
C2
C22
B+
SMALL PRONGS
SPEAKER SOCKET
LARGE PRONGS
OSCILLATOR
H
K
G
P
TYPE-27
RF
S
TYPE-35
1ST DET
TYPE-35
IF
TYPE-35
2ND DET
TYPE-27
PENTODE
F
SG
TYPE-47
R3
R1
R2
C21
R11
R13
R12
N1
N2
N3
L3 RF PLATE CHOKE
L12 DET. PLATE CHOKE
RECT
TYPE-80
COIL L5 L6 L7
COIL L2
COIL L4
COIL L8 L9
COIL L10 L11
C10
C8 C1
C5 C18 C16 C6
4-SECTION BY PASS
C17 C14 C23
3-SECTION BY-PASS
SCR1
SCR
C24
C26
ELECTROLYTIC CONDENSERS
C25
SCR1
VOLTAGE DIVIDER
R8
R7
R6
R4
TONE CONTROL
R15
AC SWITCH
VOLUME CONTROL R5
POWER TRANSFORMER
PRI
SEC
CT
P
C19
TERMINAL 5 GROUNDED
FIBER WASHERS

BOTTOM VIEW

OZARKA, INC.

MODEL Viking 93-B

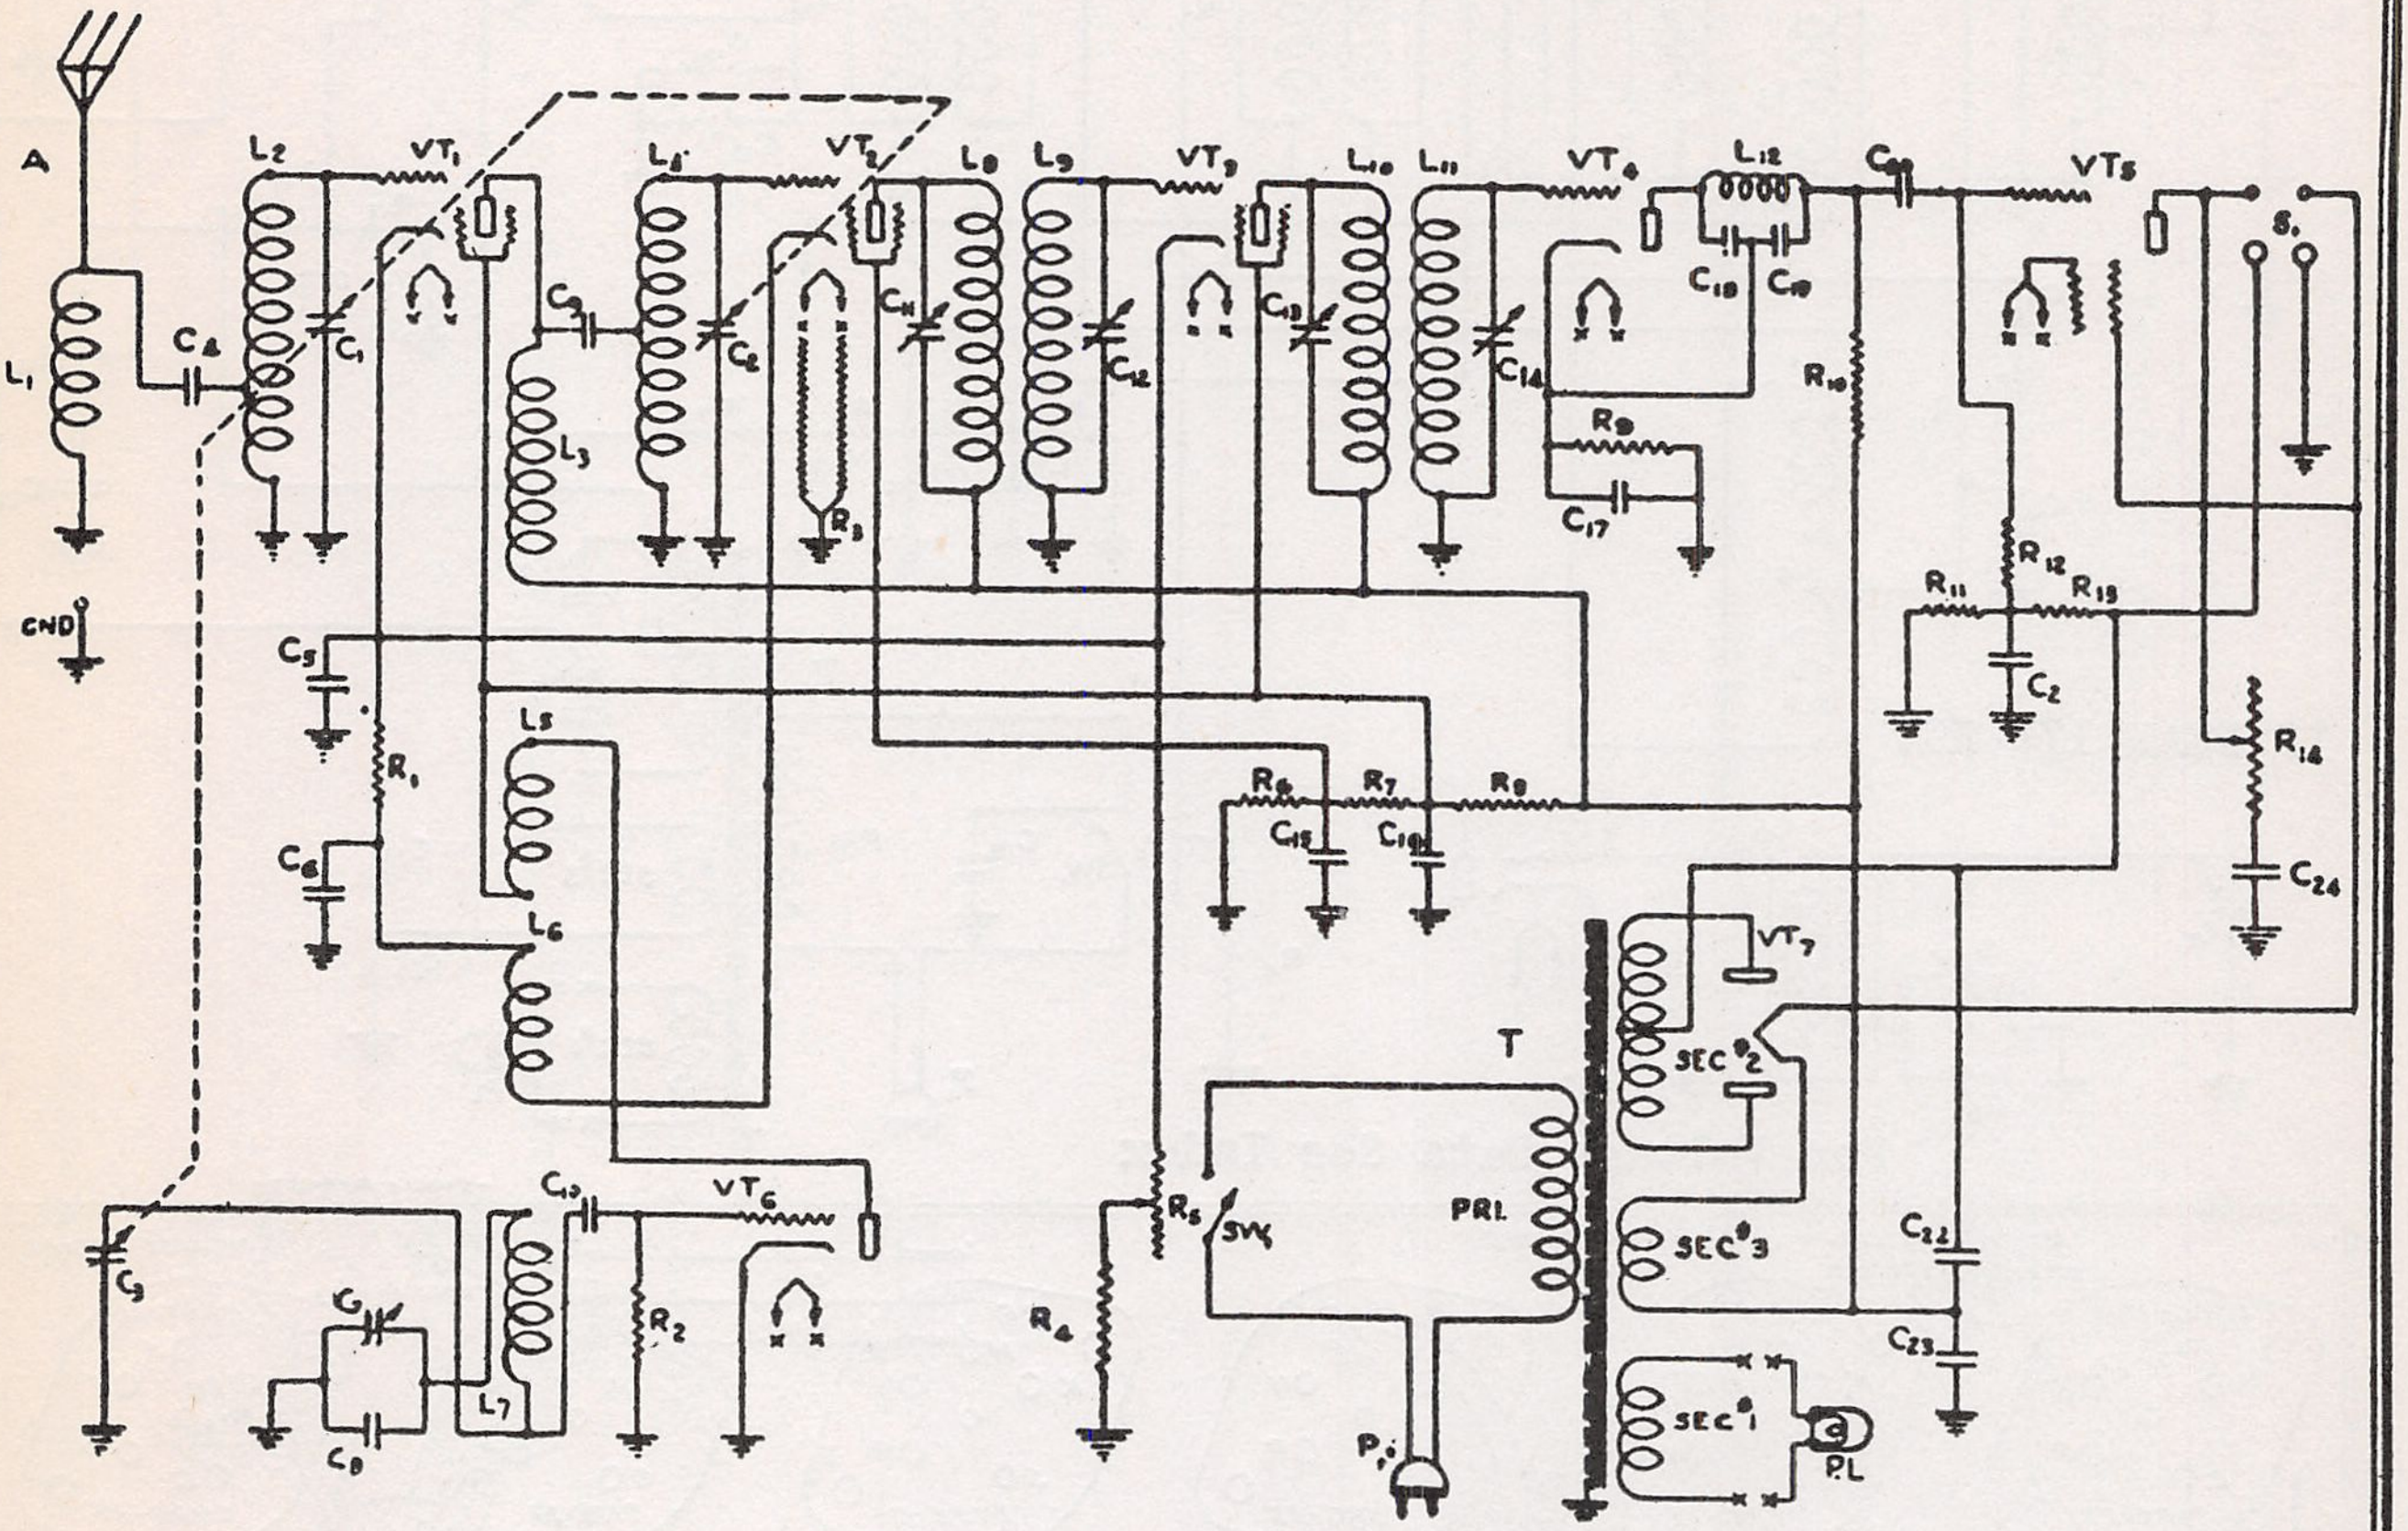
A
GND
L1
L2
C4
C1
VT1
L3
L4
C9
C2
VT2
R3
L8
C11
L9
C12
VT3
L10
L11
C13
C14
VT4
L12
C18
C19
C20
R9
C17
VT5
S1
R10
R11
R12
R13
C2
C5
C6
R1
L5
L6
R6
R7
R8
C15
C16
R14
C24
VT7
T
SEC #2
SEC #3
SEC #1
PRI.
P.L.
C22
C23
R5
SW
R4
P1
C3
C10
VT6
C7
C8
L7
R2

IF PEAK 175 KC.

Models 93A, 93B

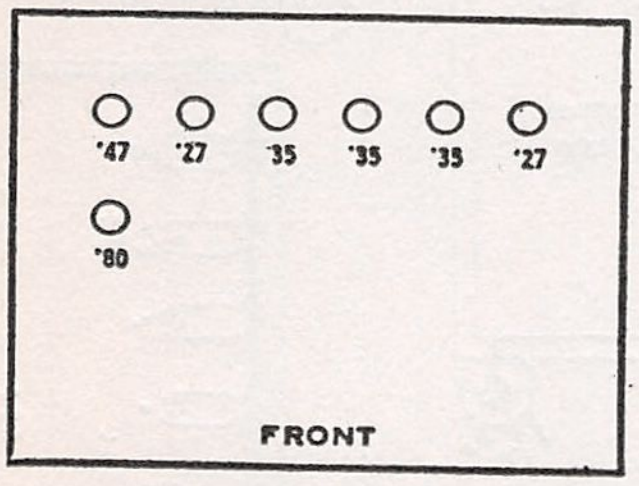
'47
'27
'35
'35
'35
'27
'80
FRONT

MODEL 93-B

Tube	Type	Plate	S.Grid	Cath.
Osc.	'27	80	--	--
R.F.	'35	190	85	1.5
Det.	'35	190	45	2.
I.F.	'35	190	85	1.5
Det.	'27	125	--	12.
Pwr.	'47	175	190	
Rect.	'80			

Vol.-Max. Volts To Ground.

MODEL 94-AVC

OZARKA, INC.

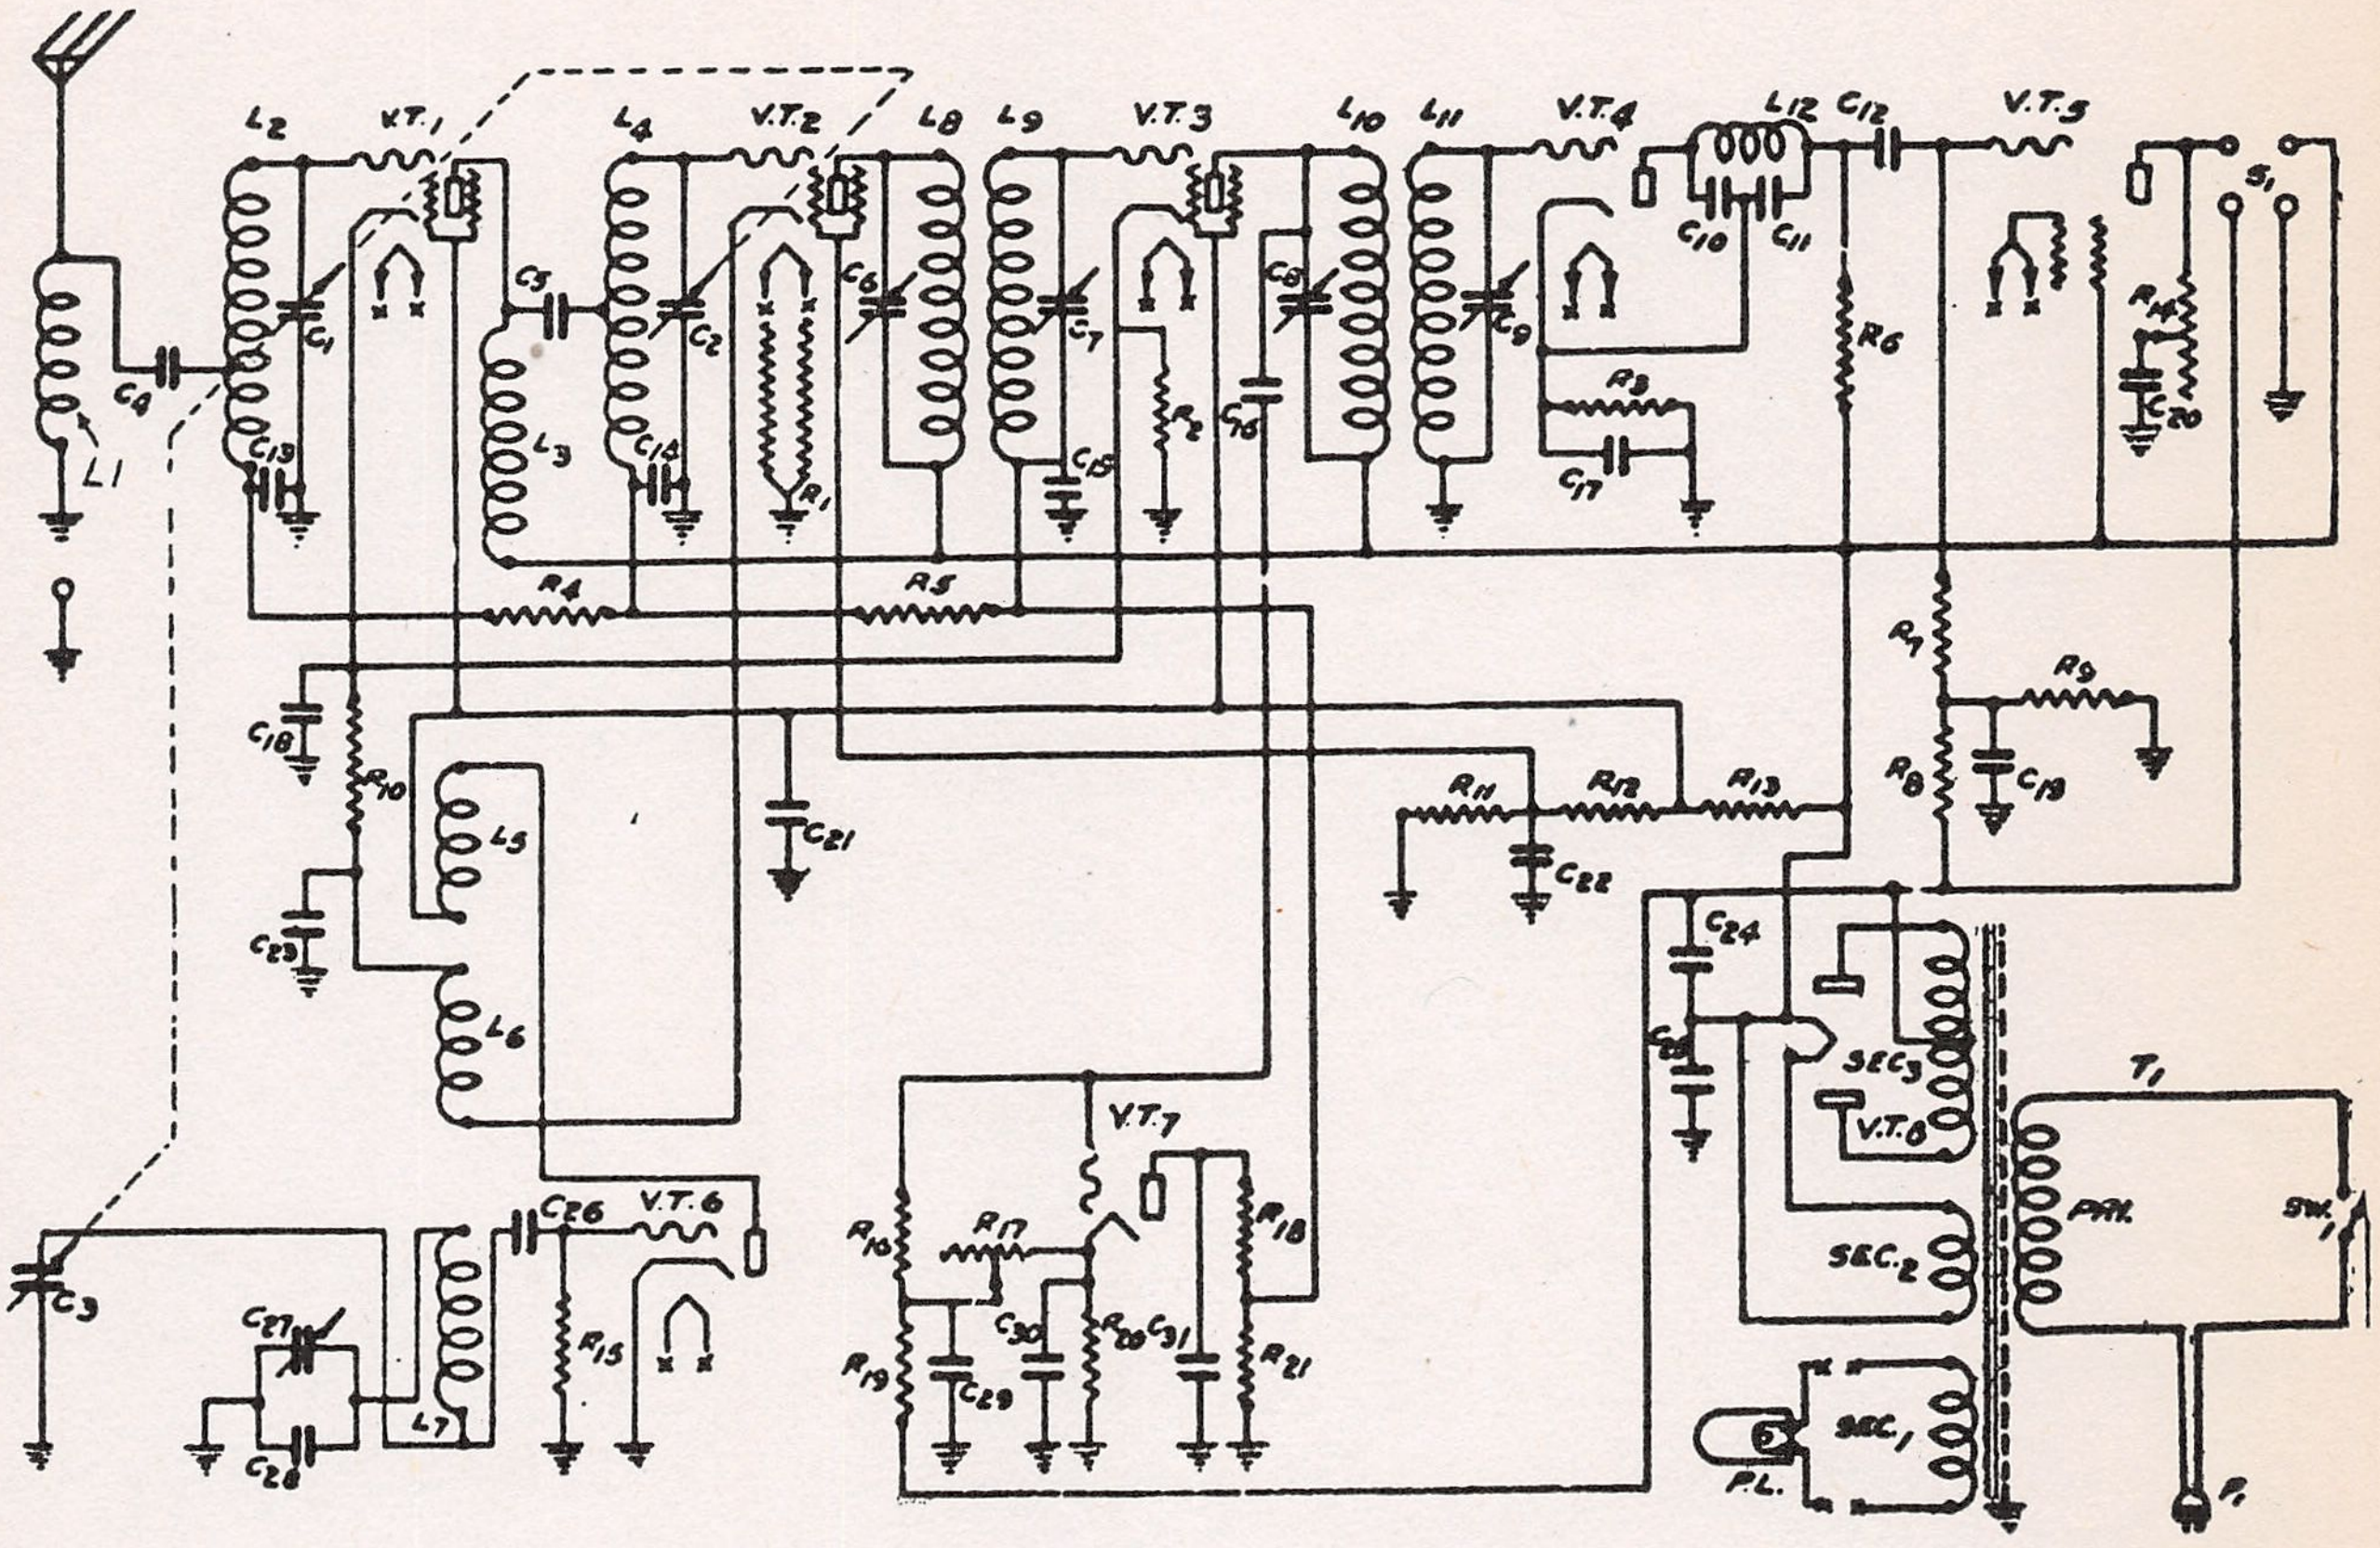
L2
V.T.1
L4
V.T.2
L8
L9
V.T.3
L10
L11
V.T.4
L12
C12
V.T.5
S1
C4
L1
C1
C13
C5
C2
L3
C14
R1
C6
C7
C15
R2
C16
C8
C9
R3
C17
C10
C11
R6
R14
C20
R4
R5
R7
R9
C18
R10
L5
C21
R11
R12
R13
C22
R8
C19
C23
L6
C24
C25
SEC3
V.T.8
T1
PRI.
SW.1
C3
C27
C26
V.T.6
C28
L7
R15
V.T.7
R16
R17
R18
R19
C29
C30
R20
C31
R21
SEC.2
SEC.1
P.L.
P1

IF PEAK 175 KC.

Model 94A, 94B (A.V.C.)

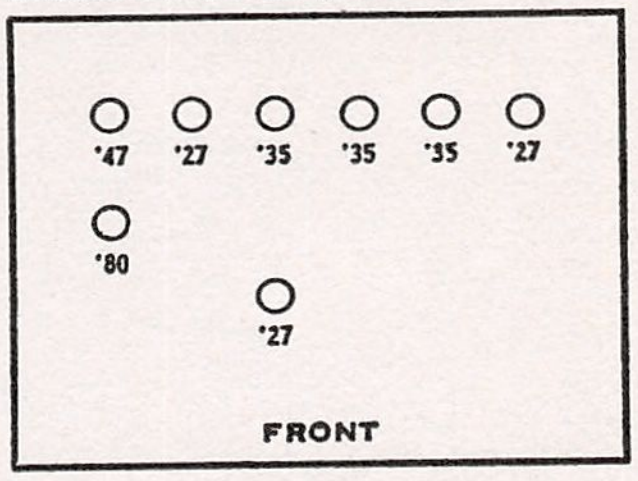
'47
'27
'35
'35
'35
'27
'80
'27
FRONT

MODEL 94

Tube	Type	Plate	S.Grid	Cath.
Osc.	'27	80	--	
R.F.	'35	190	85	1.5
Det.	'35	190	45	2.
I.F.	'35	190	85	1.5
Det.	'27	125	--	12.
Pwr.	'47	175	190	--
A.V.C.	'27			10.
Rect.	'80			

Volume Max. Volts To Ground.

PHILCO RADIO & TELEVISION CORP.

MODEL 4
Alignment
Chassis

The adjustment of the compensating condensers in the Model 4 is done with the aid of a modulated oscillator, accurately calibrated at 3600KC. A high grade crystal controlled oscillator, of this type, Philco Model No. 091, can be obtained on order from the Philco National Service Station. The various harmonics and image frequencies of this signal are used to adjust the compensating condensers at the different short wave dial settings. If the oscillator is off frequency, the harmonics and image frequencies will be off correspondingly.

Remove the converter from its cabinet. Connect the Model 4 to the broadcast receiver in the usual manner, with the ground wire connected and the aerial disconnected. A Model 112 is preferable as this offers greatest sensitivity. *It is important that the broadcast receiver be accurately calibrated at 1000KC and that the dial be set exactly at this point.*

1. **Adjusting at 3.6 megacycles on lower scale**—Place the oscillator in operation and couple it with a wire to the antenna connection of the converter. Be sure that the oscillator is grounded. Set the dial at 3.6 megacycles on the lower scale and set the frequency control switch of the converter in its proper position. Carefully adjust the "3.6L" compensator. shown in the illustration above, by means of a fibre wrench, Philco part 3164, until maximum signal is heard in the loudspeaker. It may be necessary to reduce the oscillator output by removing the oscillator from the coupling wire in order to obtain a faint input signal, the maximum strength of which can be readily determined by ear.

2. **Adjusting at 1.6 megacycles**—Set the dial at 1.6 megacycles and adjust the "1.5" compensating condenser in the same manner as described above.

3. **Adjusting at 7.2 megacycles**—Set the dial at 7.2 megacycles and set the frequency control switch in its proper position for the middle dial scale. Connect the oscillator output direct to the antenna terminal of the converter. Adjust the "8.5M" compensating condenser for maximum output in the loudspeaker as described above.

4. **Adjusting at 3.6 on middle scale**—Turn the dial to 3.6 on the middle scale and adjust the "3.6M" compensator as described above.

5. **Adjusting at 18. megacycles**—Set the dial at 18 and the frequency control switch in its corresponding position. Adjust the "19" compensator as described above. More than one signal will be heard as the adjustment is being made. Be sure to adjust for the one which is heard second as the compensating condenser capacity is reduced from its maximum (adjusting nut all the way in). When this adjustment has been made correctly, the oscillator signal can be heard at 18, 16, 14.4 and 12.4 megacycles. This adjustment is the most critical of any, and will require more care in getting the correct point.

6. **Adjusting at 8.8 megacycles**—Turn the dial to 8.8. Adjust the "8.5H" compensator in the manner described above.

RE-SETTING 1000KC WAVETRAP

A wavetrap tuned to 1000 kilocycles is connected in the antenna circuit of the converter for the purpose of suppressing any possible interference from nearby stations which might be broadcasting at or near 1000 kilocycles. If it is impossible to find a point between 950 and 1050 KC at which interference is not heard, the wavetrap should be re-adjusted by means of the fibre wrench until the interfering station is tuned out.

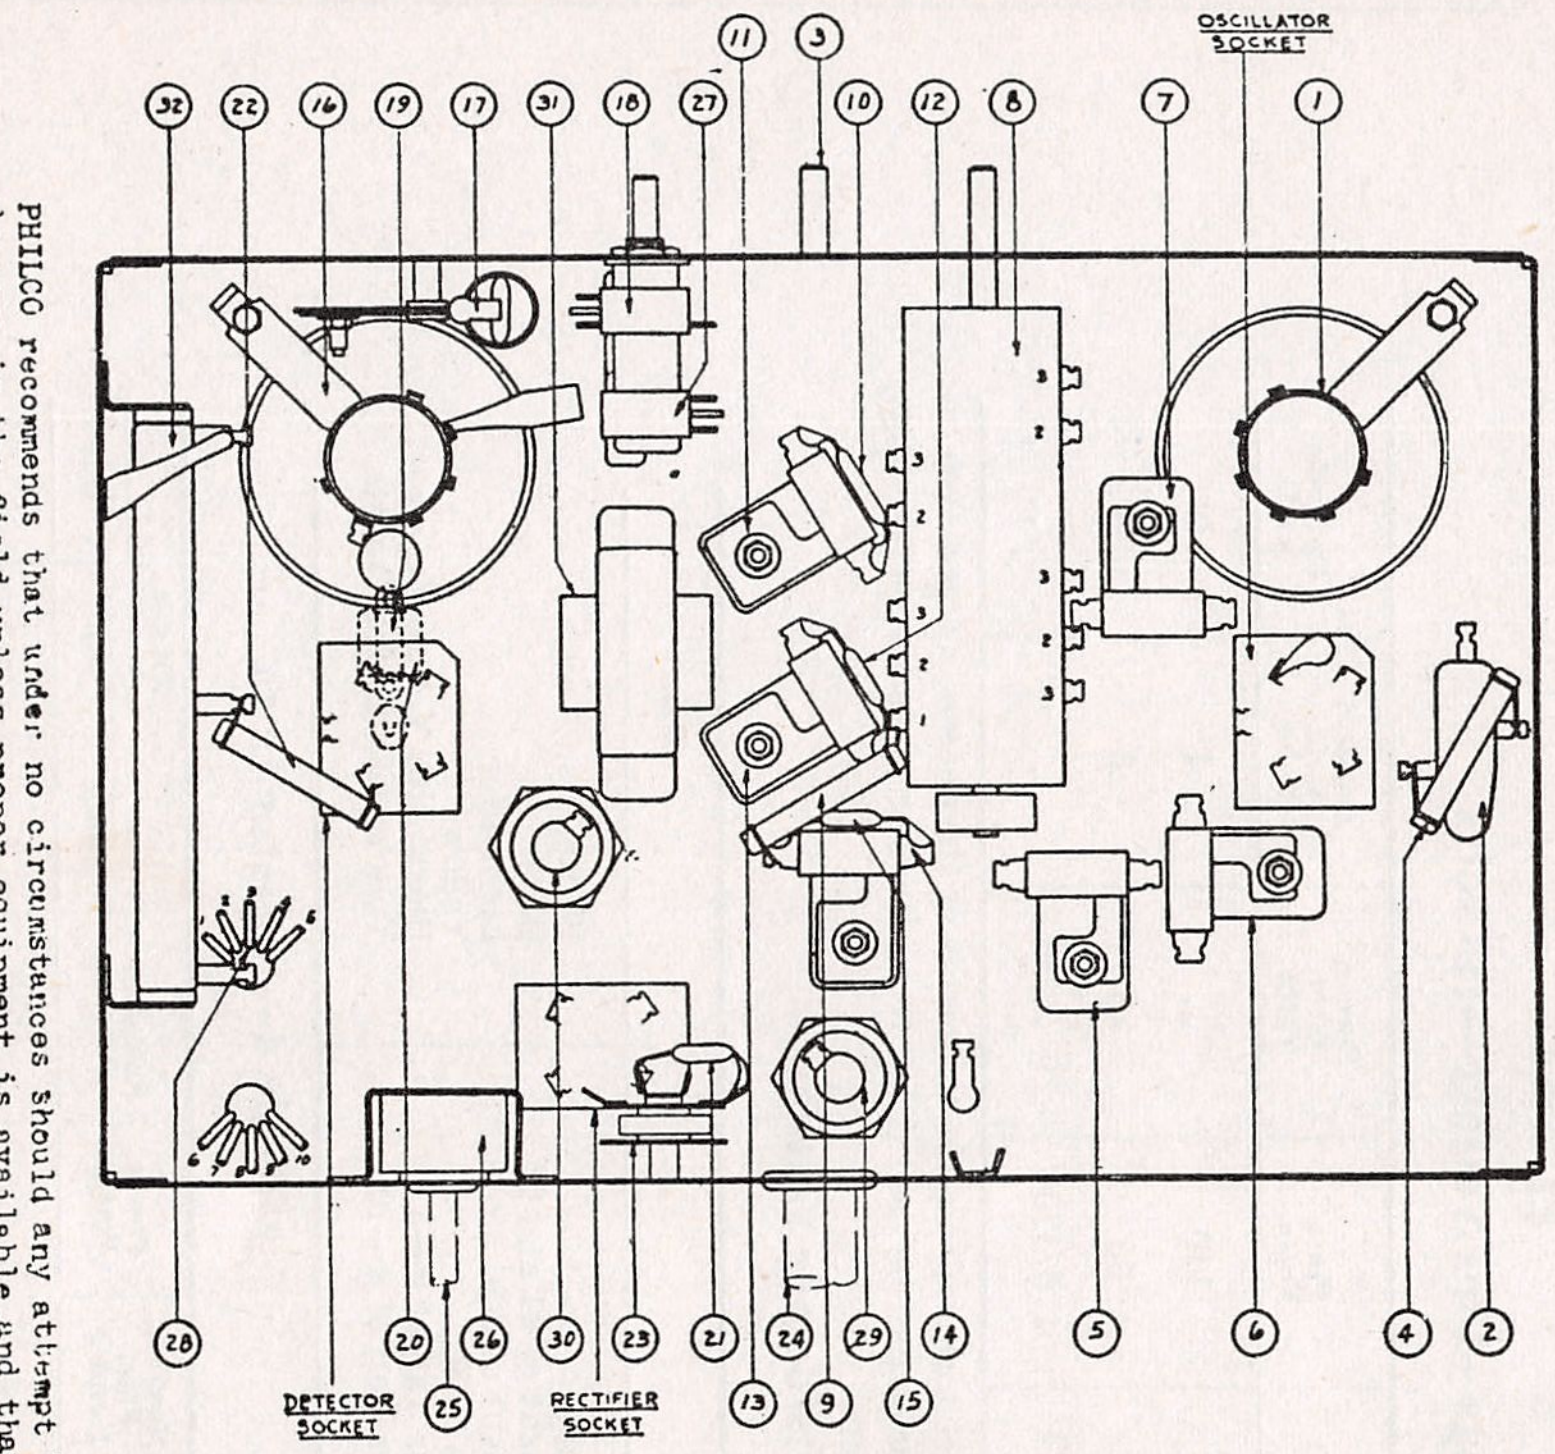

No. on Figs. 1 and 2	Description	Part No.
①	Oscillator Coil	03733*
②	By-pass condenser (.05 mfd.)	3615-M
③	Gang condenser	03692
④	Resistor (13,000 ohms)	3766
⑤	Compensating condenser (19 MC end of top scale)	04000-E
⑥	Compensating condenser (8.5 MC end of center scale)	04000-E
⑦	Compensating condenser (3.6 MC end of bottom scale)	04000-E
⑧	Frequency control switch	03751
⑨	Resistor (240,000 ohms)	3768
⑩	Condenser (1250 mmf.)	5886
⑪	Compensating condenser (8.5 MC end of top scale)	04000-F
⑫	Condenser (800 mmf.)	5878
⑬	Compensating condenser (3.6 MC end of center scale)	04000-F
⑭	Compensating condenser (1.5 MC end of bottom scale)	04000-F
⑮	Condenser (250 mmf.)	3082
⑯	Detector transformer	03731

*Includes matched oscillator coil and detector transformer.

No. on Figs. 1 and 2	Description	Part No.
⑰	Frequency filter	03662
⑱	Antenna switch (assembled with 27)	5796
⑲	Resistor (2 Megohms) assembled with (20)	03879
⑳	Condenser (110 mmf.) assembled with (19)	03879
㉑	Condenser (250 mmf.)	3082
㉒	Resistor (99.000 ohms)	3767
㉓	R. F. choke	03103
㉔	Shielded cable	L-1278
㉕	Power cord and plug	L-943-A
㉖	Outlet receptacle	5439
㉗	"On-Off" switch (assembled with 18)	5796
㉘	Power transformer—50-60 cycles 25-40 cycles	5785 5786
㉙	Electrolytic condenser (6 mfd.)	4916
㉚	Electrolytic condenser (6 mfd.)	4916
㉛	Filter choke (50-60 cycles)	4951
	Filter choke (25-40 cycles)	5930
	50-60 cycles)	
	Resistor (two 32,000 ohms, 25-40 cycles)	3525
	Bezel	5175
	Cabinet	40600

PHILCO recommends that under no circumstances should any attempt be made to adjust the compensating condensers in the field, unless proper equipment is available, and that where such is not the case the unit should be turned over to a Philco Distributors Service Department. The adjustment is extremely critical and requires more time and patience than the ordinary broadcast receiver. All of the compensating condensers are accessible only from the bottom of the chassis. The short wave converter is accurately adjusted at the factory prior to shipment.

MODEL 4
Schematic
Voltage
Data

PHILCO RADIO & TELEVISION CORP.

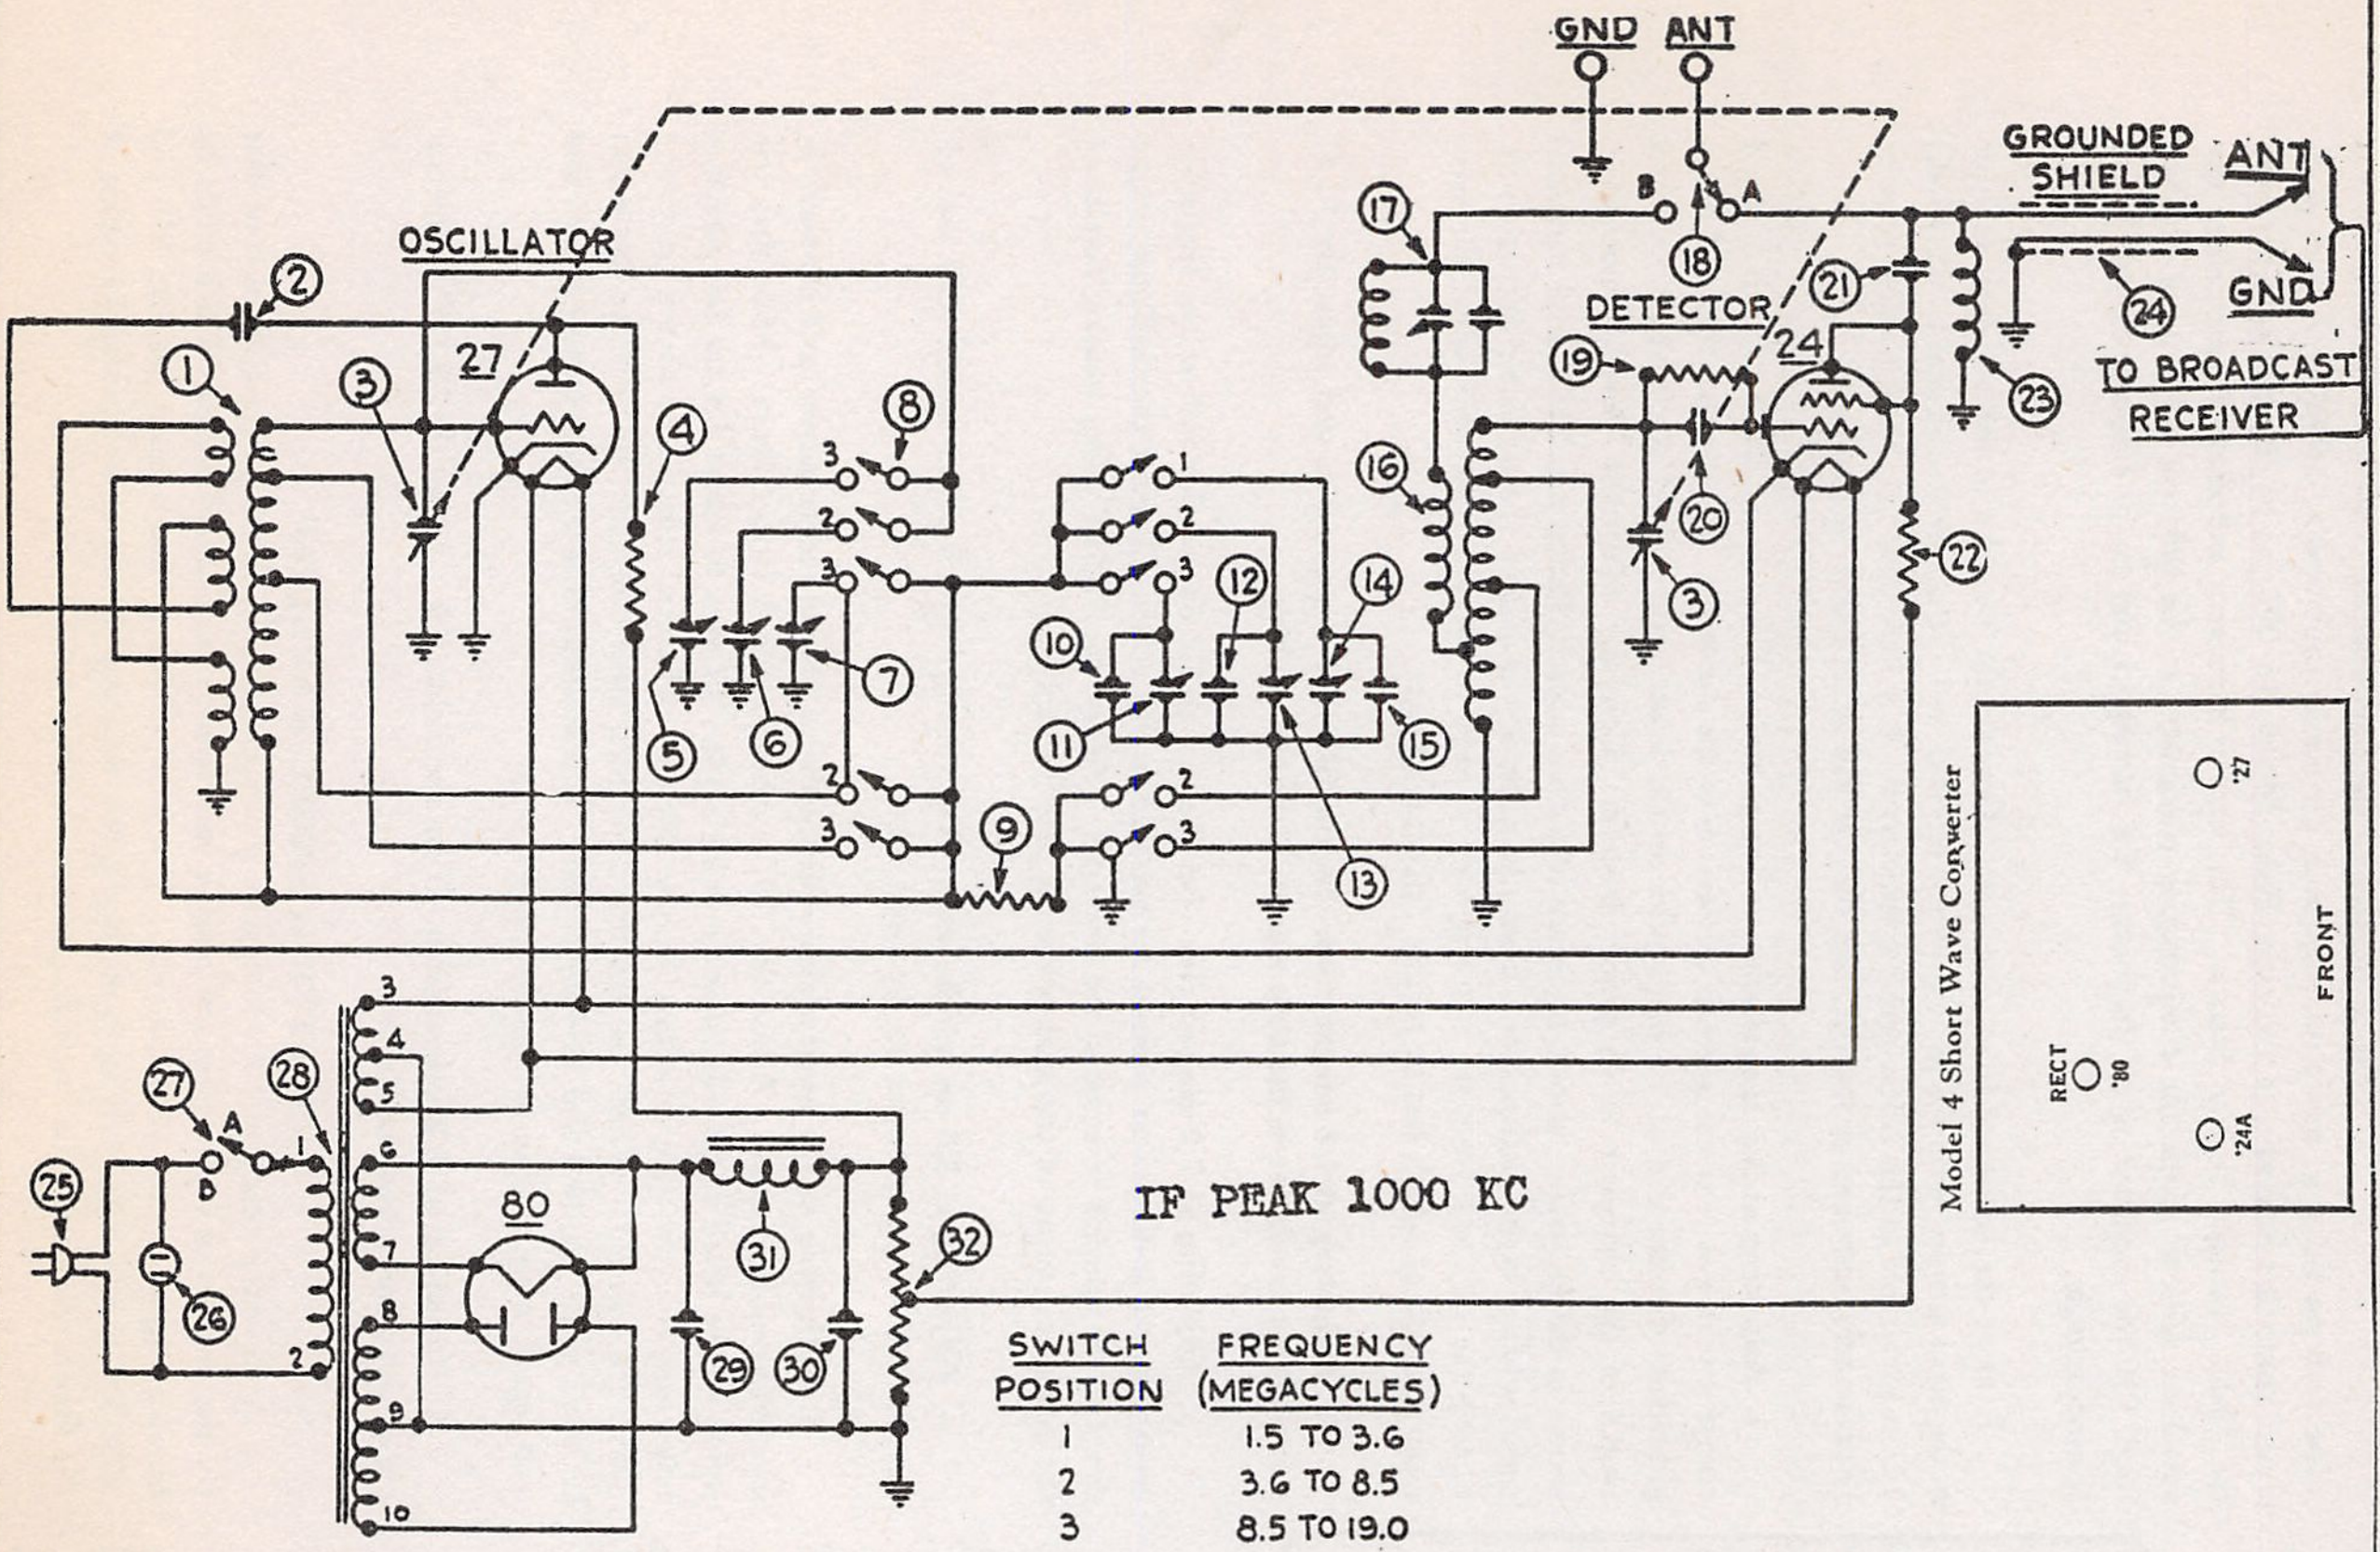
GND
ANT
GROUNDED SHIELD
ANT
GND
TO BROADCAST RECEIVER
OSCILLATOR
27
DETECTOR
24
B
A
80
1
2
3
4
5
6
7
8
9
10
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫
⑬
⑭
⑮
⑯
⑰
⑱
⑲
⑳
㉑
㉒
㉓
㉔
㉕
㉖
㉗
㉘
㉙
㉚
㉛
㉜
IF PEAK 1000 KC
Model 4 Short Wave Converter
RECT
'80
'24A
'27
FRONT

SWITCH POSITION	FREQUENCY (MEGACYCLES)
1	1.5 TO 3.6
2	3.6 TO 8.5
3	8.5 TO 19.0

Table 1—Tube Socket Readings—Line Voltage—115 volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts
Type	Circuit					
27	Oscillator	2.4	110	..	.1	0
24	Detector	2.4	25	25	.3	0
80	Rectifier	5.0	170/170	..	..	..

NOTE: The above voltage readings were taken from the socket terminals on the underside of the chassis, using a Weston multi-range voltmeter, 1000 ohms per volt. The radio set tester cannot be used either for voltage or plate current readings because of the effect of the long leads through the set tester cord.

Table 2—Power Transformer Voltages

Terminals	A. C. Volts		Color
1—2	105—125	Primary -	White
3—5	2.5	Filament of 24 and 27	Black
6—7	5.0	Filament of 80	Light Blue
8—10	340	Plates of 80	Yellow
4	...	Center Tap of 3—5	Black with Yellow Tracer
9	...	Center Tap of 8—10	Yellow with Green Tracer

Table 3—Condenser Data

Nos. on Figs. 1 and 2	Capacity Mfd.	Container
⑳	.00011	Blue and Golden Yellow
⑫	.0008	Green and Orange
⑩	.00125	Blue and Orange
②	.05	Black Bakelite Container
㉙ ㉚	6.	Electrolytic

Table 4—Resistor Data

Nos. on Figs. 1 and 2	Power (Watts)	Resistance (Ohms)	COLOR		
			Body	Tip	Dot
㉜		4750 4750	Long Tubular		
④	1.	13000	Brown	Orange	Orange
㉒	1.	99000	White	White	Orange
⑨	.5	240,000	Red	Yellow	Yellow
⑲	.5	2 Megohms	Red	Black	Green

Models 20 and 20-A Receivers

Model 20 Receivers are for Operation on 105-125 volt, 50-60 cycle AC Lines.
Model 20-A Receivers are for Operation on 105-125 volt, 25-60 cycle AC Lines.

Bulletin 28 covers the first few weeks' production of Models 20 and 20-A. These Receivers can be identified as having one or two compensating condensers. The later models have three compensating condensers fastened to the tuning condenser housing and are covered by Bulletin 36.

Table 1—Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Tube		Filament Voltage	Plate Voltage	Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Milliamperes
Type	Circuit						
24	1st R. F.	2.3	250	3.0	90.0	12	4.5
24	2d R. F.	2.3	250	3.0	90.0	11	4.5
24	Detector	2.3	35	1.0	2.0	8	....
27	1st Audio	2.3	120	1.0	....	8	3.0
71-A	2d Audio	5.0	215	50.0	....		18.0
71-A	Push-Pull	5.0	215	50.0	....		18.0
80	Rectifier	5.0	....		....		36/Plate

All readings taken with antenna disconnected and ground on. Volume Control on full.

Table 2—Power Transformer Voltages

Terminals	A. C. Volts	
1—2	2.5	Heaters of 24 and 27 Tubes
3—4	105 to 125	Primary
7—8	5.0	Filament of 71-A Tubes
5	....	Center Tap of 7—8
10—11	5.0	Filament of 80 Tube
9—12	650	Plates of 80 Tube
6	....	Center Tap of 9—12 and 1—2

Table 4—Condenser Data
(Other Than Filter Condenser)

No. on Figs. 3 and 4	Capacity MFD
⑯	.00025
⑲	.01
⑤ ⑥ ㉒	.05
⑧	.05 with 250-ohm resistor winding
⑭	.25 (two sections)
⑬	.5

Table 3—Resistor Data

No. on Figs. 3 and 4	Terminal	Resistance	Color
㉕	1—2	1,400	Long Tubular
	2—3	187	
	3—4	75	
	5—6	2,470	
	6—7	975	
⑫		50,000	Orange
⑱		100,000	Silver Gray
⑮		250,000	White
⑰—⑳		500,000	Battleship Gray

Model 20—Filter Condenser—Part No. 4235

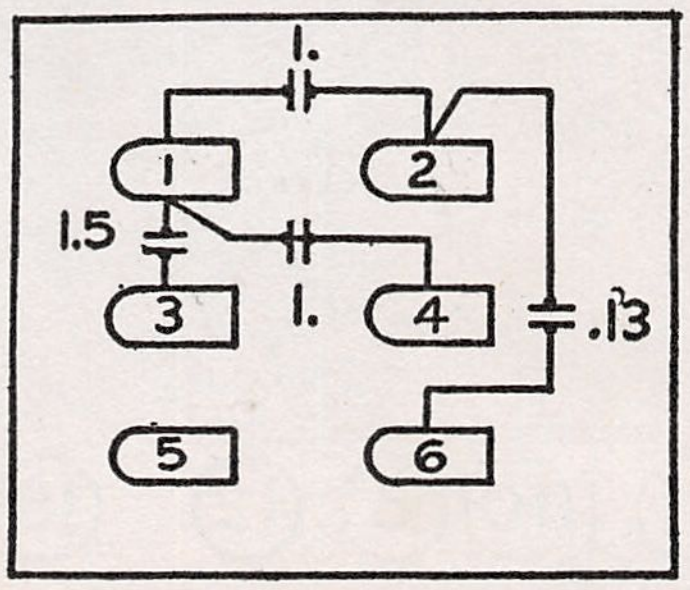

Models Philco's 20, 20A, 220, 220A

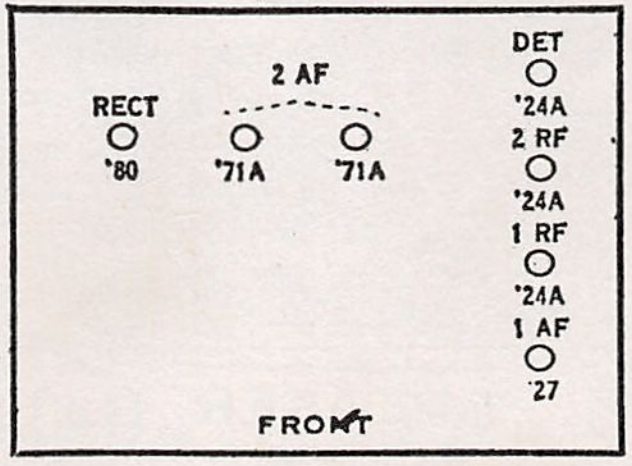

Model 20-A—Filter Condenser—Part No. 4269

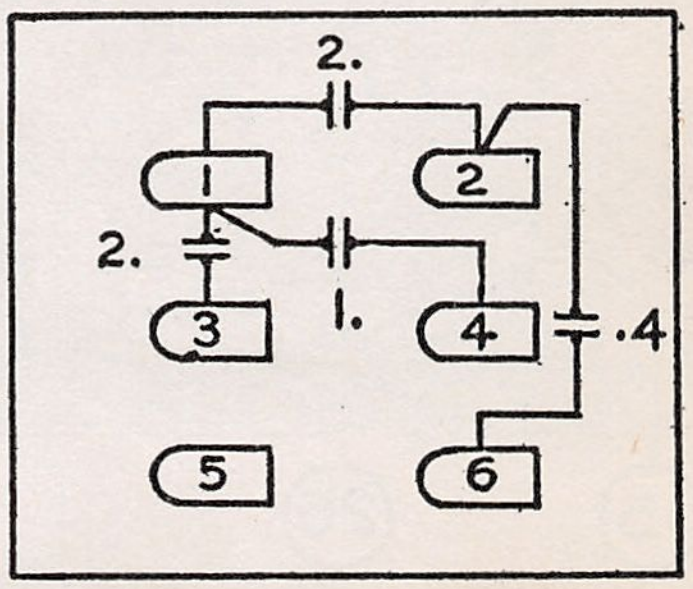

MODEL 20,20-A
Chassis
Schematic

PHILCO RADIO & TELEVISION CORP.

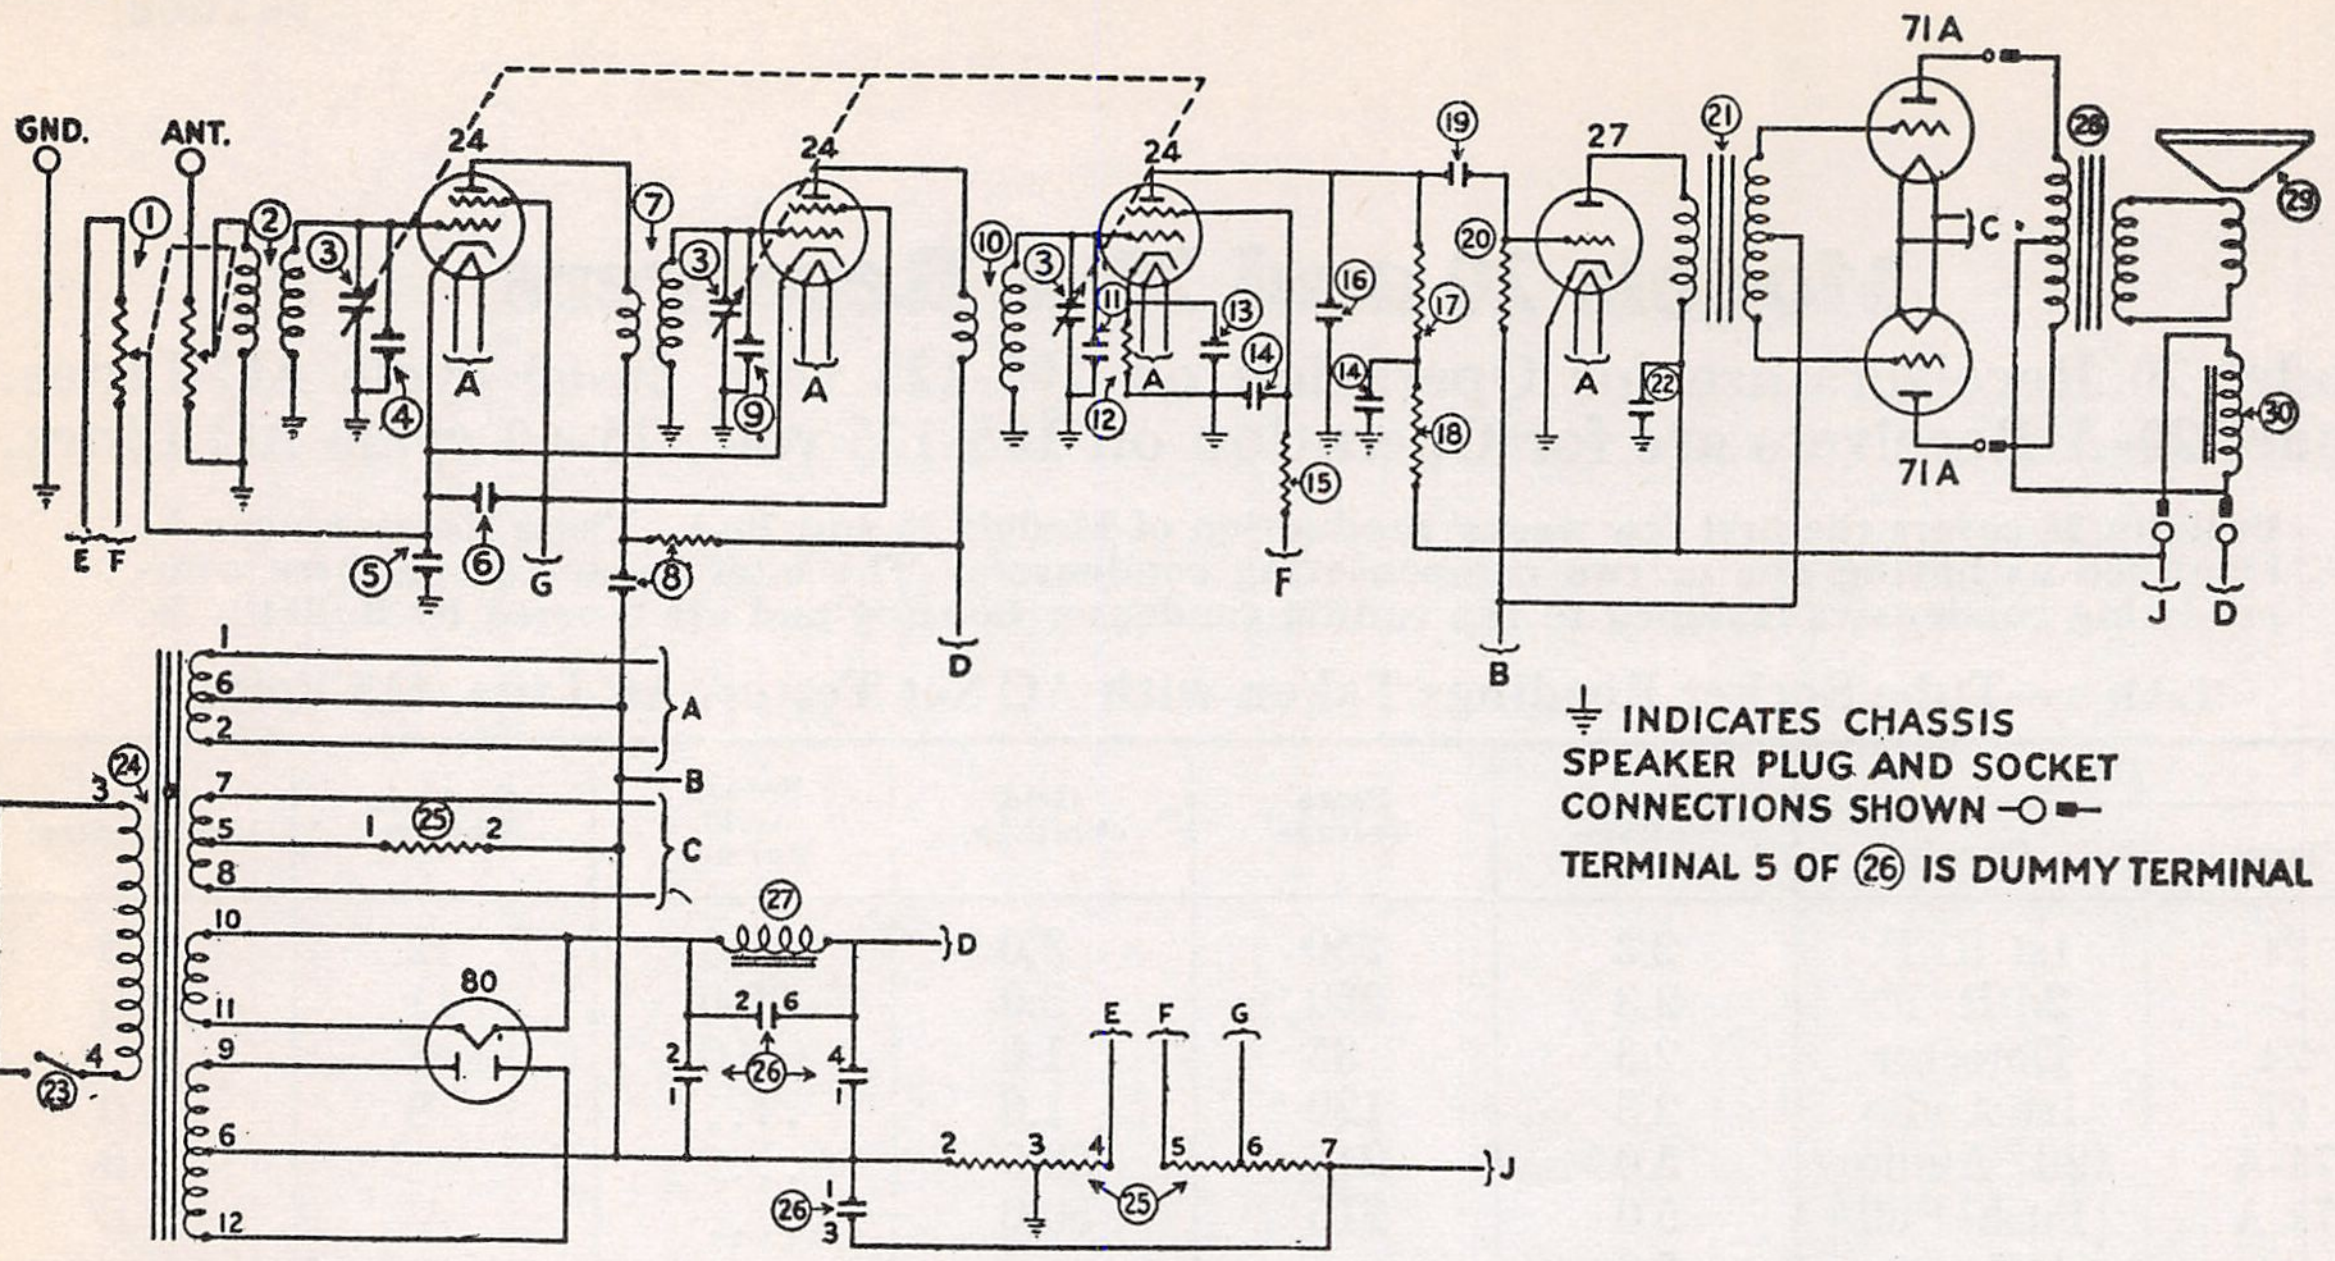
GND.
ANT.
24
24
24
27
71A
71A
80
E F
G
D
F
B
J D
A
B
C
D
J
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30

⏚ INDICATES CHASSIS
SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN -○▪-
TERMINAL 5 OF ㉖ IS DUMMY TERMINAL

DIFFERENT CIRCUIT ARRANGEMENT FOR MODEL 20-A

Model 20-A for use on 25-60 cycle lines is wired differently than the Model 20. The plate supply lead for the two 24 R. F. Tubes is taken from the low side of the Speaker field Coil. The lead "D" to the 24 tubes should be changed to "J" for the Model 20-A only. This will change the plate voltage from 250 volts to 115-125 volts. The plate current readings will also be lower than those given in the table.

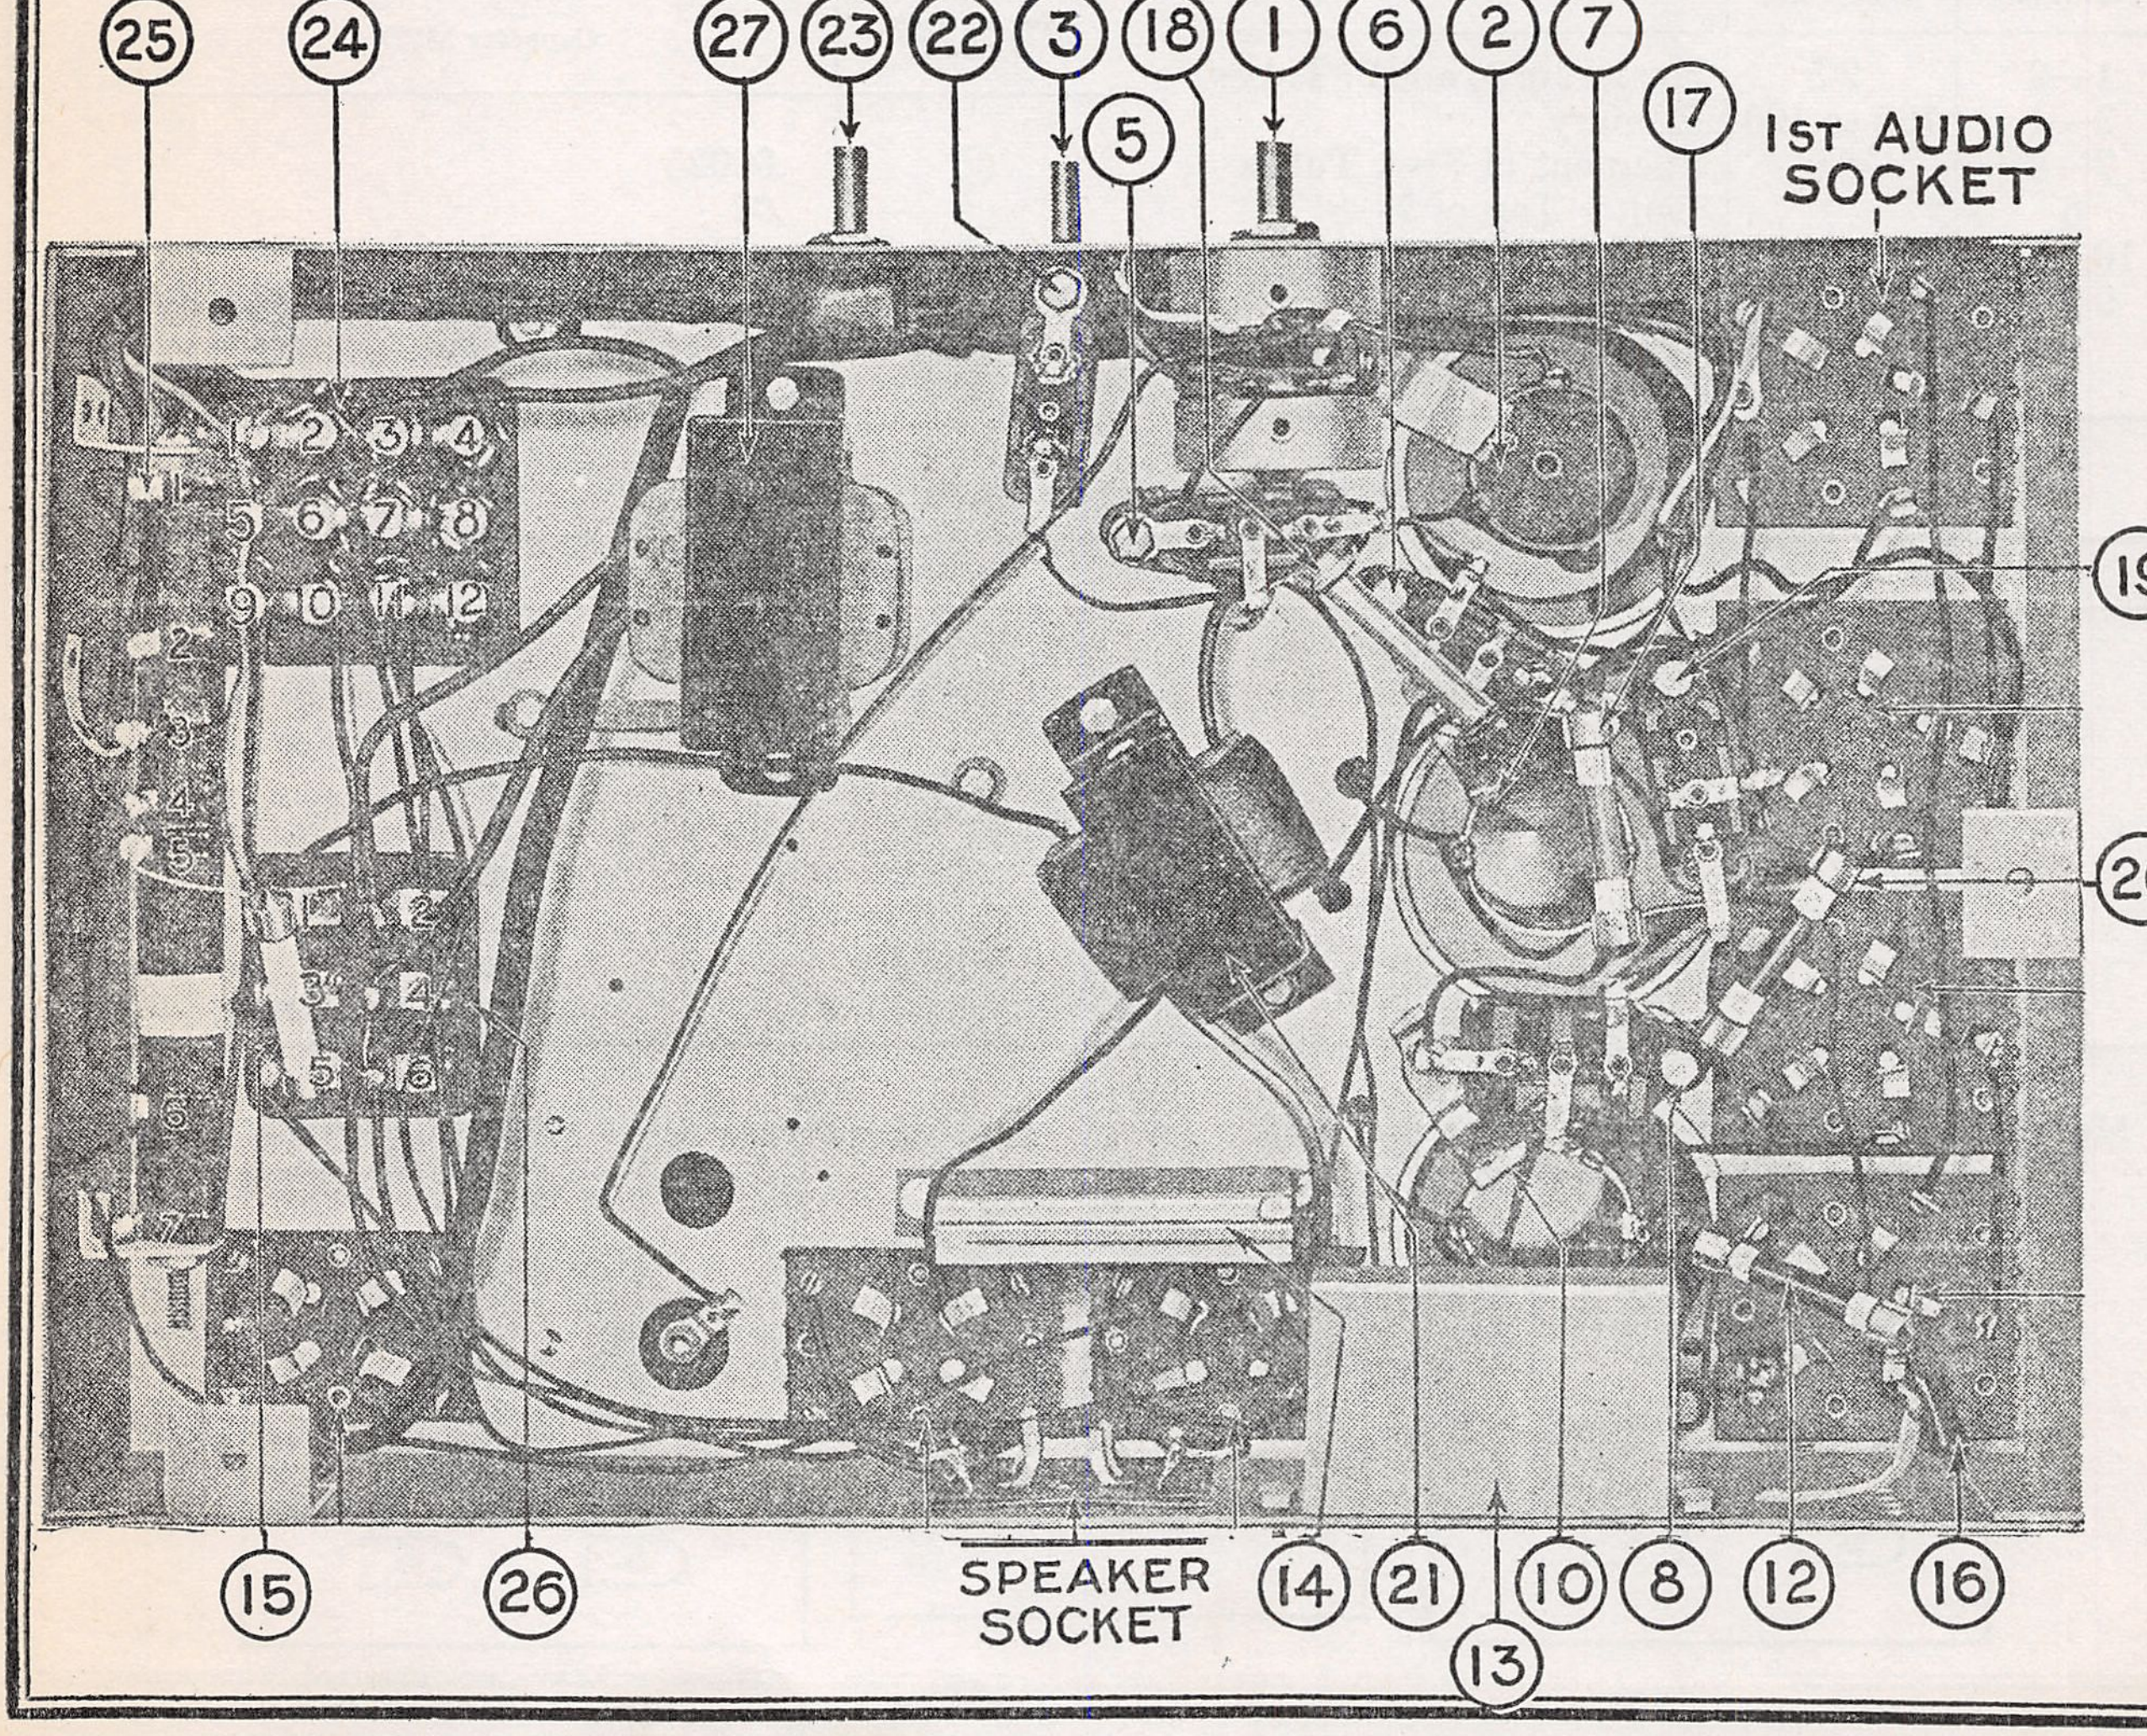
25
24
27
23
22
3
5
18
1
6
2
7
17
1st AUDIO SOCKET
19
20
15
26
SPEAKER SOCKET
14
21
10
8
12
16
13

MODEL 30
Voltage
Values

PHILCO RADIO & TELEVISION CORP.

Table 1—Tube Socket Readings Taken with Average Set Checker

Tube	Circuit	Filament Volts	Plate Volts	Grid Volts	Plate Current Milliamperes	Screen Grid Volts
32	1st R. F.	2.0	150		.0015	60
32	2nd R. F.	2.0	150		.0015	58
32	3rd R. F.	2.0	150	.	.0015	58
30	Detector Rectifier	2.0	.	.	...	..
30	Detector Amplifier	2.0	15	..	....	..
30	1st Audio	2.0	90	Note 1	.002	..
31	2d Audio	2.0*	150	24	.008	..
31	Push-Pull	2.0*	150	24	.008	..

*These readings reversed with respect to other Filament Voltage readings.

Note 1. With volume control in "Off" position, approximately 4 volts; with volume control full on, less than 1 volt.

Always use high-resistance voltmeter, preferably 1000 ohms per volt, when checking voltages in the Receiver. For reading plate and screen voltages, use a 250- or 300-volt scale. Voltage readings taken with meters having less than 250,000 ohms resistance will be lower than voltages given in the table.

When testing a Model 30 Receiver, all tubes must be in their proper sockets. The speaker must be connected and the tube shield must be fastened in place. The readings in Table 1 were taken using "A," "B" and "C" batteries.

Table 2—Resistor Data

No. on Figs. 1 and 2	Color	Resistance Ohms
①	Golden Yellow	5,000
(40)	Auto Buff	25,000
⑥	Jade Green	70,000
㉖ ㉗	Silver Gray	100,000
㉘	White	250,000
⑲ ㉙ ㉜	Battleship Gray	500,000
㉟	Tubular (two section)	250 800

Table 3—Condenser Data

No. on Figs. 1 and 2	Capacity—MFD.
㉔	.00005
㉚ ㉛	.000250
㉝	.01
③ ⑨ ⑮	.05
⑪ ⑫ ⑳ ㉑	.05 with 250-ohm resistor winding
(39)	.25 single section
㉒	.25 two sections

Either the ear method or an output meter can be used while adjusting.

With the Receiver set up for operation, adjust the oscillator signal to a frequency between 1200 and 1300 kilocycles. This corresponds to 120 and 130 on the Receiver tuning scale.

Use a weak signal and tune the Receiver sharply to the oscillator note. The volume control should be turned on "full."

Adjust the compensating condensers, starting with the fourth condenser ㉕ in (Fig. 2.) If using the ear method, adjust the condenser to the loudest signal. If using an output meter, adjust for the maximum reading.

Next adjust the third, then the second, and finally the first. It will not be necessary to reduce the oscillator signal as the successive condensers are adjusted. Reduce the volume of the Receiver with the volume control.

In each step, always adjust for the maximum signal or reading.

Numbering of Philco Coils

For the purpose of identification, Philco coils are being code numbered. These numbers are stamped upon the mounting bracket before the part leaves the National Service Station. The following is a list of these coils

(Dated Jan. 1932)

CODE NO.	PART NO.	USED IN MODELS	KEY NO. IN SERVICE BULLETIN DIAGRAM
1	3075A	511, 86, 87	③⑤⑥
2	3075B	511, 86, 87	②②③
3	3506B	65	②
4	3506A	65	⑦
5	3744A	95, 96	⑧②
6	3744B	95, 96	⑨⑦
7	3744C	95, 96	⑬⑫
8	03345	90 (Pentode Output)	⑬
9	3884A	76, 77, 40, 41	④②⑤②
10	3884B	76, 77, 40, 41	⑬⑤⑧⑤
11	3884C	76, 77, 40, 41	⑩⑨⑭⑪
12	3884N	20, 21	②
13	3884P	20, 21	⑩
14	3884S	111, 112	②
15	3884T	111, 112	⑤
16	3884U	111, 112	⑭
17	3884V	111, 112	⑨
18	3884X	46, 46E	②
19	3884Y	46, 46E	⑧
20	4182A	30	②
21	4182B	30	⑧
22	03014	90 (all Models)	⑤⑤
23	03015	90 (all Models)	⑦⑦
24	03016	90 (all Models)	㊹㊲
25	03082	70	②
26	03083	70, 35	⑥⑦
27	03084	70	⑧
28	03283	50	②
29	03284	50	⑤
30	03320	35	②
31	03321	35	⑨
32	03360	90 (Pentode Output)	②
33	03013	90 (45's Output)	②
34	03009	90 (all Models), 35	⑬⑩⑰
35	03038	111, 112	㉕
36	03039	111, 112	㉛
37	03040	111, 112	㊲
38	03091	70	⑲
39	03092	70, 35	㉒⑳
40	03143	90 (45's Output)	⑱
41 42	03734	4, 470, 490	①⑯
43	03880	51	②
44	03881	51	⑤
45	03882	51	⑧
46	03887	51	⑫
47	03886	51	⑯

Standard Compensating Condensers

The various compensating condensers used in the models 35, 70, 270, 370, 90, 112, and 212 have been changed so as to include a bakelite mounting board on which the code letter of the condenser appears. In the case of the I. F. compensating condensers, which have been used in conjunction with a parallel fixed condenser, the new compensating condensers have been increased in capacity so that the fixed condensers are no longer required. For replacement purposes, if desired, the new compensating condensers can be substituted on earlier sets for the earlier combination of a fixed and an adjustable condenser.

The low frequency compensating condensers have been changed with respect to the bakelite mounting, but their capacity remains unchanged, thereby requiring the parallel fixed condenser as in the past.

All of these new condensers can be identified by the letter which is stamped on the bakelite mounting board. For example part 04000-E has the letter E stamped over the surface of the mounting board; part 04000-F has the letter F stamped on the board.

The following table lists the part numbers of the various new condensers, their identification code letter, capacity range, where used, the superseded part number, and the part number of the parallel fixed condenser when one is still used.

(#98 - Dated Sept.1931)

Part Number	Identification Code Letter	Capacity Range Mmf.	Used on Models	Supersedes	Used with Fixed Condenser
04000-B	B	40-250	90 (Early and Late)	03050	4520 (700 mmf.)
04000-D	D	6-50	112, 212	3772-A	———
04000-E	E	5-30	112, 212	3968-A	———
04000-F	F	40-250	112, 212	3772-B	4520 (700 mmf.)
			370 70, 270	03120	5120 (410 mmf.)
			35	03249	5120 (410 mmf.)
04000-H	H	40-180	70*, 270*, 370* 90* early	03051	———
04000-J	J	40-180	70* 270*, 370*, 212* 112*, 90* early	3772-C	———
04000-K	K	30-140	70*, 370*	03061	———
04000-L	L	30-140	270*	03262	———
			112*	3772-D	———
04000-M	M	15-130	35*	03411	———

*FIXED PARALLEL CONDENSER NOT REQUIRED

PHILCO RADIO & TELEVISION CORP.

MODEL 35
Test Data

All tubes out of sockets and batteries disconnected. Volume control maximum unless otherwise stated.

From Chassis To	Correct		Incorrect
Aerial	9.3	ohms	
RF Control Grid	251,000	ohms	BC- rf Cg wdg-Y (.09 mfd) TC- rf Cg-Y
RF Control Grid to IF Control Grid	72.5	ohms	TC- IF Tr
RF Screen Grid to 67½ post	150	ohms	
RF Screen Grid to Chassis	0	ohm	BC- rf Sg-Y BC- if Sg-Y (2 mfd)
RF Plate to 135 Post	16.4	ohms	
RF Plate to Chassis	0	ohm	BLC- Osc P circuit BC- IF P wdg-Y (09 mfd) BC- D P-Y Tone Control Condenser BLC- D P - 1 AF Cg
1 Detector Control Grid	3,006.6	ohms	TC- 1 D Cg-Y BC- Osc Cplg wdg-Y BC- rf Cg wdg-Y
1 Detector Screen to 67½ post	150	ohms	
1 Detector Screen Grid to Chassis	0	ohm	See RF Screen
1 Detector Plate to 135 Post	68	ohms	TC- IF Tr
1 Detector Plate to Chassis	0	ohms	See RF Plate
IF Control Grid	251,065	ohms	TC- IF Tr See RF Control Grid
IF Screen Grid to 67½ post	150	ohms	
IF Screen Grid to Chassis	0	ohm	See RF Screen
IF Plate to 135 Post	74	ohms	TC- IF Tr
IF Plate to Chassis	0	ohm	See RF Plate
2 Detector Control Grid	25,000-100,000	ohms	Exact resistance of Cg voltage volume control not known BC- 2 D Cg wdg-Y
2 Detector Control Grid to -22½ post	40,000-47,000	ohms	approximate
2 Detector Plate to 135 post	240,013	ohms	2 Detector plate chk is 13.4 ohms
2 Detector Plate to Chassis	0	ohm	See Rf Plate
1 AF Control Grid	493,000	ohms	
1 AF Plate to 67½ Post	1,200	ohms	
'47 Control Grid to -22½ Post	6,000	ohms	
'47 Screen Grid to 135 Post	0	ohm	
'47 Plate to 135 Post	450	ohms	
Output Transformer Secondary only	.62	ohm	
Oscillator Control Grid to Chassis	54,007	ohms	BC- Osc wdg-Y TC-Osc Cg-Y
Osc Cg to Osc Plate	0	ohm	BLC- Osc P
Oscillator Plate to 135	51,000	ohms	See RF Plate

PHILCO RADIO & TELEVISION CORP.

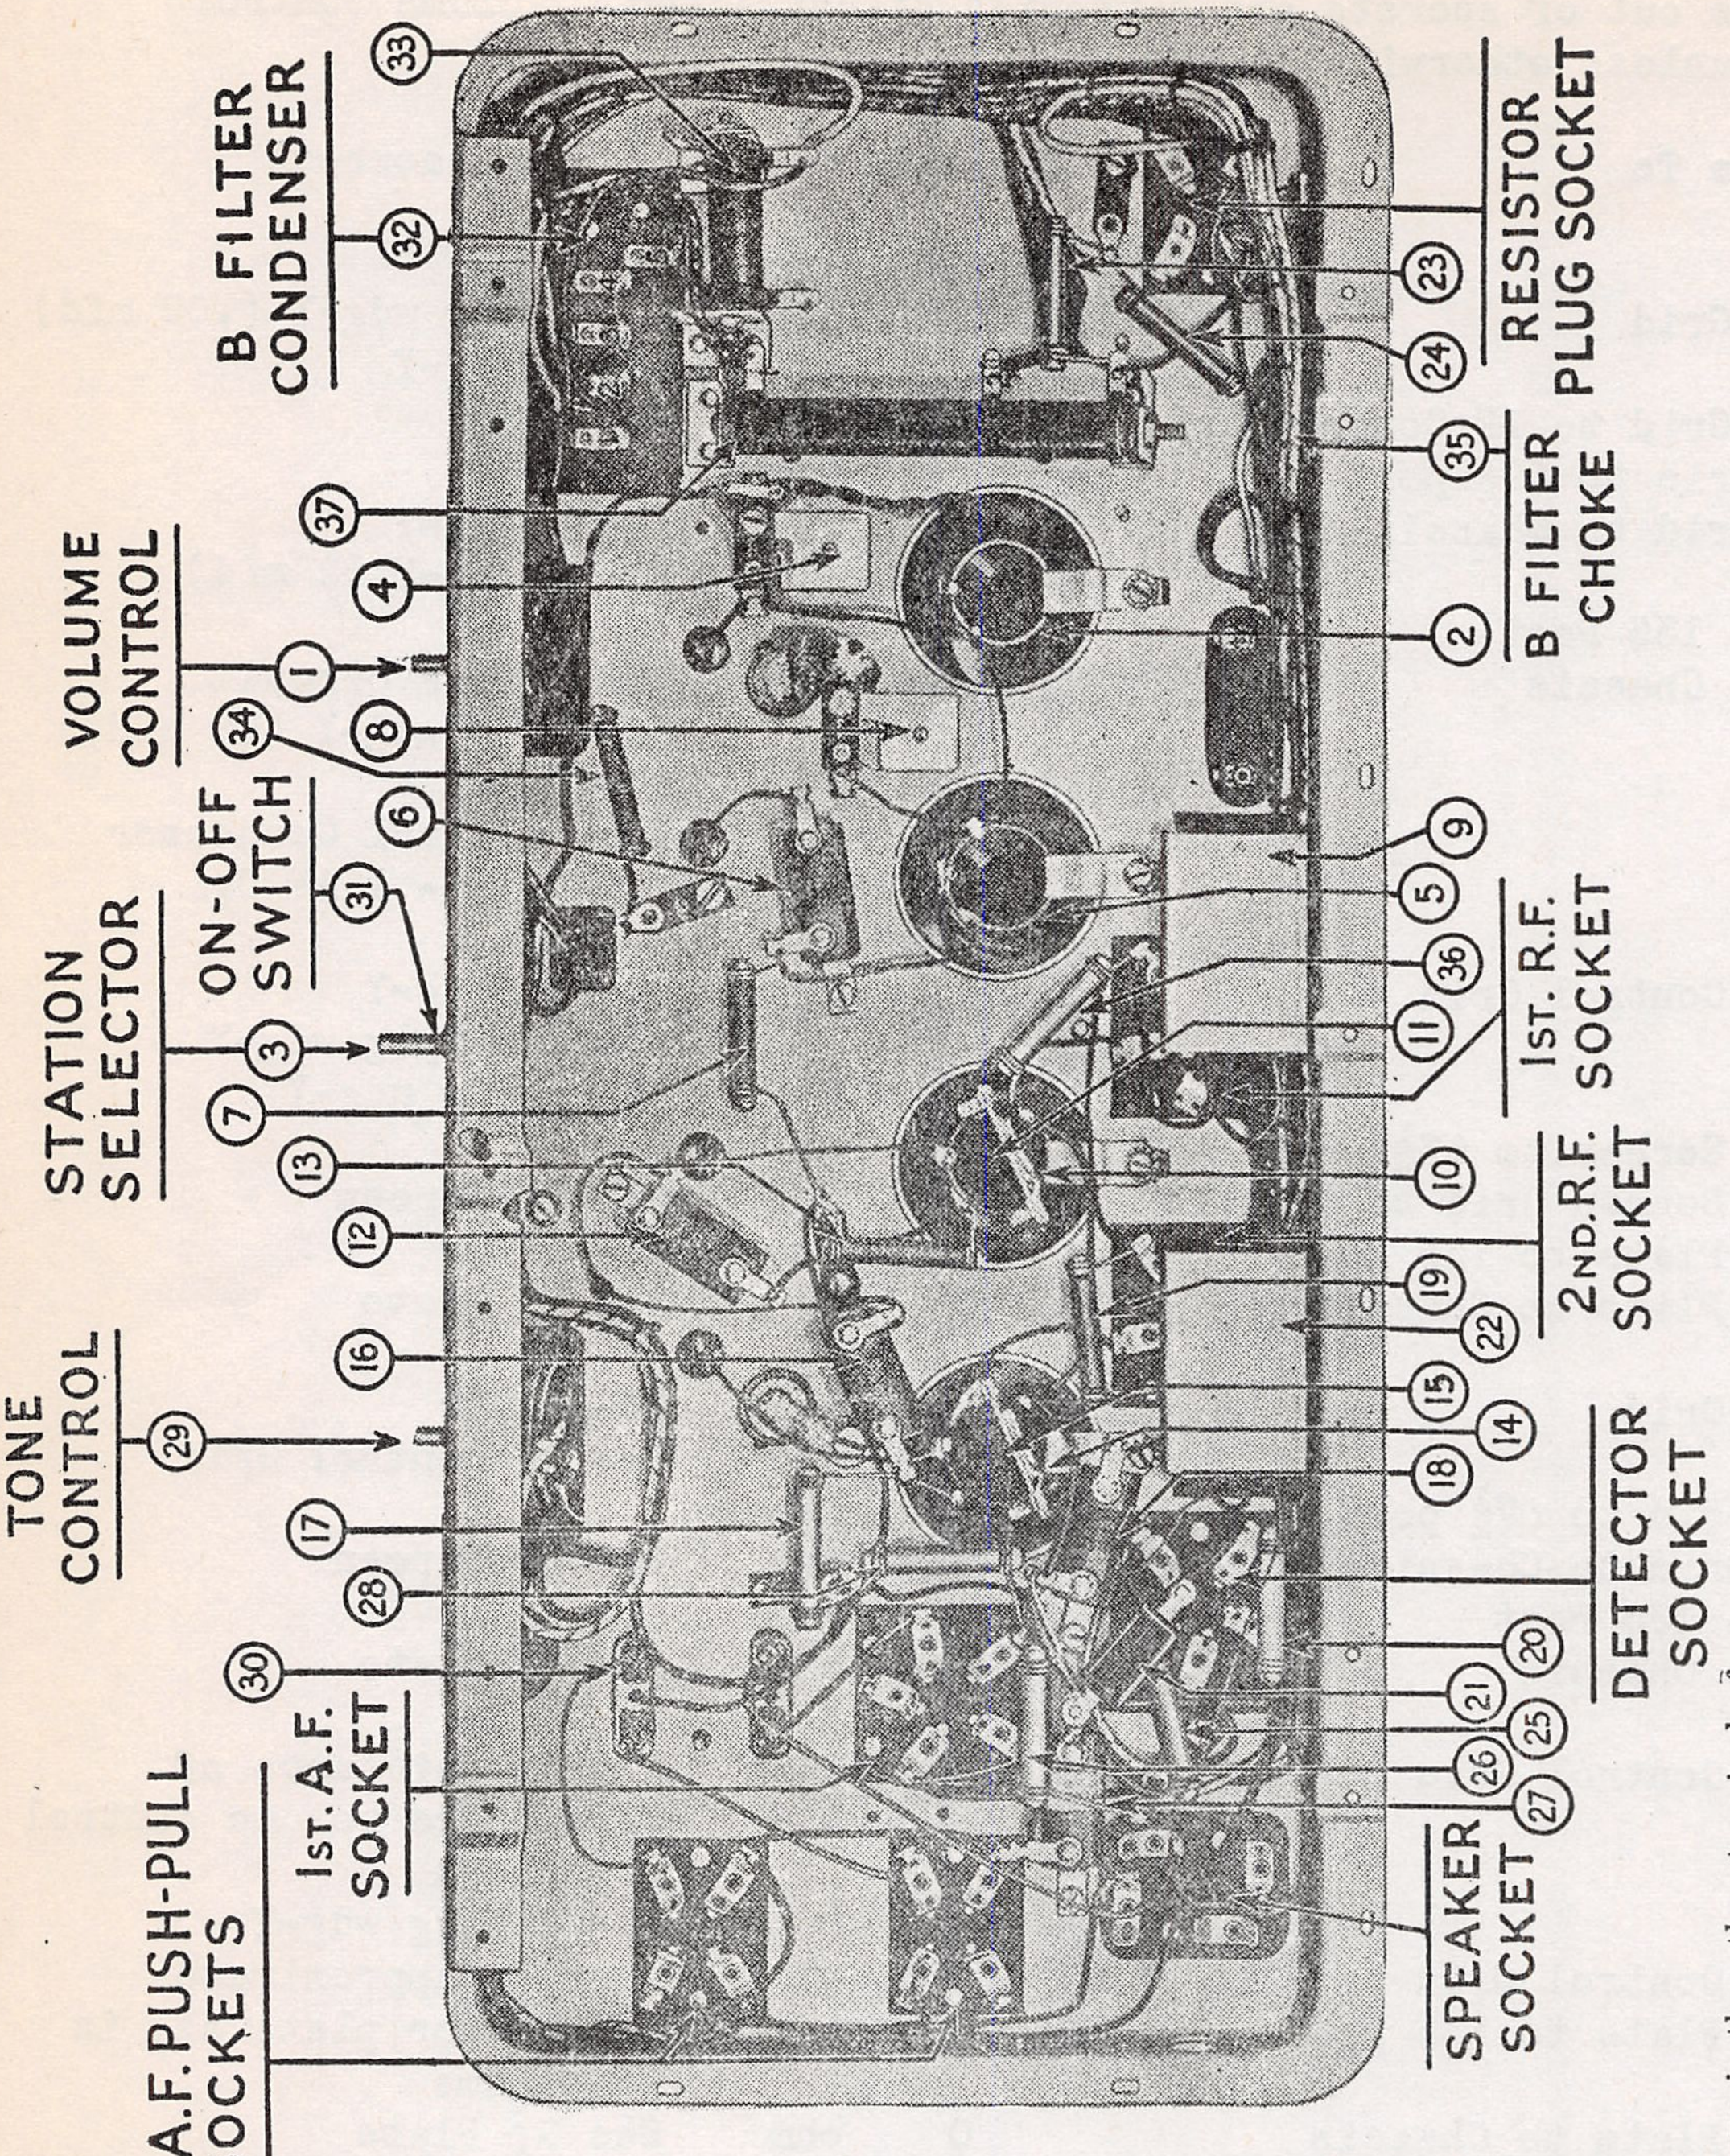
B FILTER CONDENSER
33
32
VOLUME CONTROL
37
4
1
34
8
ON-OFF SWITCH
6
31
STATION SELECTOR
3
7
13
12
TONE CONTROL
16
29
17
28
30
1ST. A.F. SOCKET
2ND A.F. PUSH-PULL SOCKETS
RESISTOR PLUG SOCKET
23
24
35
B FILTER CHOKE
2
9
5
36
11
1ST. R.F. SOCKET
10
19
22
2ND. R.F. SOCKET
15
14
18
DETECTOR SOCKET
20
21
25
26
27
SPEAKER SOCKET

Changes in Models 41 and 41-E Receivers

Changes in the circuit of the Model 41 Receiver went into effect July 31, 1930, and should be noted on the wiring diagram

The R. F by-pass condenser, Part No. 3615-G, or 3584-D, used to by-pass the plate supply of the R. F. tubes should be changed to Part No. 3615-B. In Service Bulletin 16 this condenser is shown as (18) and is connected between the lead "P" and condenser (9).

The new condenser No. 3615-B has the same capacity as the condenser formerly used, but in addition has a 250-ohm resistor section. One end of the condenser will be grounded through the hold-down screw of the condenser. The other terminal of the condenser is the terminal at the other end of the condenser. This terminal is also common to the resistor winding and should be connected to the point "P" shown on the schematic.

The middle terminal on the condenser is the other terminal of the resistor section, and should be connected to the R. F. coils (11) and (15).

With these changes made in the schematic, the plate supply for the first two "24" tubes will come from "P" through the resistor and then through the two R. F. transformers. The end of the resistor nearest "P" is by-passed through the condenser to ground.

PHILCO RADIO & TELEVISION CORP.

MODEL 50,50-A
Adjustment
Parts List

ADJUSTMENT OF MODELS 50 AND 50-A

Adjustment of the compensating condensers in the model 50 should be done with the aid of a good oscillator for the R.F. signal. The oscillator lead should be connected to the "ANT" terminal of the receiver. A good ground connection must be made from the receiver to the grounded side of the oscillator and to a water or radiator pipe.

Either the ear method or an output meter, connected across the speaker voice coil terminals can be used while adjusting.

When the Receiver is set up for operation, adjust the oscillator signal to a frequency which is approximately 1400 kilocycles.

With the volume control advanced to maximum, and using a weak oscillator signal, tune the receiver sharply to the oscillator note.

Adjust the third R. F. compensating condenser by means of the Philco fibre wrench, part 3164, for maximum output signal. If an output meter is being used, adjust for maximum reading.

Next adjust the second R. F. compensating condenser and finally the first. In each case, always adjust for maximum signal or reading.

REPLACEMENT PARTS MODELS 50 AND 50-A

No. on Figs. 3 and 4	Description	Part No.
①	Volume Control	5232
②	First R. F. Transformer	03283
③	Gang Condenser	03293
④	Compensating Condenser (Part of Gang Condenser Assembly)	
⑤	Second R. F. Transformer	03284
⑥	Compensating Condenser (Part of Gang Condenser Assembly)	
⑦	Third R. F. Transformer	03284
⑧	Compensating Condenser (Part of Gang Condenser Assembly)	
⑨	Condenser—250 Mmf.	3082
⑩	Condenser—250 Mmf.	3082
⑪	Resistor—10,000 Ohms	4412
⑫	Condenser—.01 Mfd.	3903-L
⑬	Resistor—240,000 Ohms	4410
⑭	Resistor—490,000 Ohms	4517
⑮	Bypass Condenser (.15 Mfd., .25 Mfd., 2-.5 Mfd., 1 Mfd.) 50-60 cycles	03459
	(.15 Mfd., .25 Mfd., 2-.5 Mfd., .05 Mfd.) 25-40 Cycles	03455
⑯	Bypass Condenser—.01 Mfd.	3903-N
⑰	Output Transformer	2660
⑱	Voice Coil and Cone Assembly	02970
⑲	Speaker Field (Assembled with Pot and Frame)	02942
⑳	Resistor—490,000 Ohms.	4517
㉑	Resistor—160,000 Ohms.	5331
㉒	Resistor—150 Ohms and Condenser—.05 Mfd.	3615-X

No. on Figs. 3 and 4	Description	Part No.
㉓	Resistor—15,000 Ohms	5278
㉔	Bypass Condenser—.05 Mfd.	3615-L
㉕	Bypass Condenser—(.05 Mfd.) (combined with ⑮)	
㉖	Resistor—25,000 Ohms	3656
㉗	Resistor—99,000 Ohms	4411
㉘	Resistor—32,000 Ohms	5279
㉙	Resistor—99,000 Ohms	4411
㉚	On-Off Switch	5382
㉛	Power Transformer—50-60 cycles	5266
	Power Transformer—25-40 cycles	5267
	Power Transformer—50-60 cycles 210-240 volts	5268
㉜	Electrolytic Condenser—6 Mfd.—50-60 cycles	4916
	Electrolytic Condenser—10 Mfd. 25-40 cycles	5142
㉝	Electrolytic Condenser—6 Mfd.—25-40 cycles and 50-60 cycles	4916
	Tube Shield	03390
	Knob (Large)	03064
	Knob (Small)	03427
	Spring (For Dial Knobs) Small	4147
	Spring (For Dial Knobs) Large	5262
	Grid Clip	4897
	Five Prong Socket Assembly	4956
	Four Prong Socket Assembly	5026
	Dial Complete	03322
	Bezel	5383

MODEL 50, 50-A
Resistance
Test Data

PHILCO RADIO & TELEVISION CORP.

All tubes out of sockets and AC plug disconnected from power supply
Field Coil disconnected

From Chassis To	Correct	Incorrect
Aerial (V.C. Max)	24 ohms	Aerial V.C. 1800 ohms
1 RF Control Grid	6.5 ohms	TC- rf Cg-Y
1 RF Cathode (V.C.Max)	150 ohms	BC- rf K-Y (.05 mfd)
1 RF Screen Grid	20,150 ohms	V.C. in circuit 5000 ohms See RF Cathode BC- 2 rf Sg-Y FC- 80 F-Y (6 mfd EL)
1 RF Screen Grid to 80 Fil	25,000 ohms	
1 RF Plate	45,215 ohms	BC- rf P-Y See RF Screen
1 RF Plate to '80 Fil	65 ohms	
2 RF Control Grid	6.5 ohms	TC- 2 rf Cg-Y
2 RF Cathode(V.C.Max)	150 ohms	See 1 RF Cathode
2 RF Screen Grid	20,150 ohms	See 1 RF Screen
2 RF Screen Grid to '80 Fil	25,000 ohms	
2 RF Plate	45,215 ohms	See 1 RF Plate
2 RF Plate to 80 Fil	65 ohms	
Detector Control Grid	6.5 ohms	TC- D Cg-Y
Detector Cathode	32,000 ohms	BC- D K-Y
Detector Screen Grid	119,150 ohms	BC- D Sg-Y See RF Screen
Detector Screen Grid to 80 Fil	124,000 ohms	
Detector Plate	394,150 ohms	BC- 99,000 ohms-Y BLC- D P -47 Cg BC- D P-Y FC- 80 Fil-80 P wdg See RF Screen
Detector Plate to '80 Fil	349,000 ohms	
'47 Control Grid	650,000 ohms	BC- 47 Cg leak-Y
'47 Screen Grid to '80 Fil	0 ohm	
'47 Screen Grid to Chassis	45,150 ohms	See RF Screen
'47 Plate	45,516 ohms	See RF Screen
'47 Plate to '80 Fil	366 ohms	
'80 Fil to 80 Plate	695,460 ohms	FC- 80 F-(10 mfd EL)
'80 Plate to Chassis	650,310 ohms	
'80 Plate to 80 Plate	621 ohms	
Across AC plug	7.55 ohms	

A resistor of 10,000 ohms is used in place of an r-f choke in the detector plate circuit. Two bypass condensers, with mid-junction grounded are connected across the resistor.

A fixed condenser is connected between the plate of the pentode tube and ground.

MODEL 51,51-A
Schematic

PHILCO RADIO & TELEVISION CORP.

ARRANGEMENT OF WIRES

The placing of certain wires in the receiver will effect the operation to a marked extent. **The red wire from the primary of the first I. F. transformer ⑫, Figs. 1 and 2, to the .05 mfd. condenser ⑭, Figs. 1 and 2, must come straight down to the corner of the I. F. tube socket, then straight up to the condenser lug.**

The wire from the plate of the detector-oscillator tube to the coupling compensating condenser ⑦, **Figs. 1 and 2, must be away from the chassis at the side.**

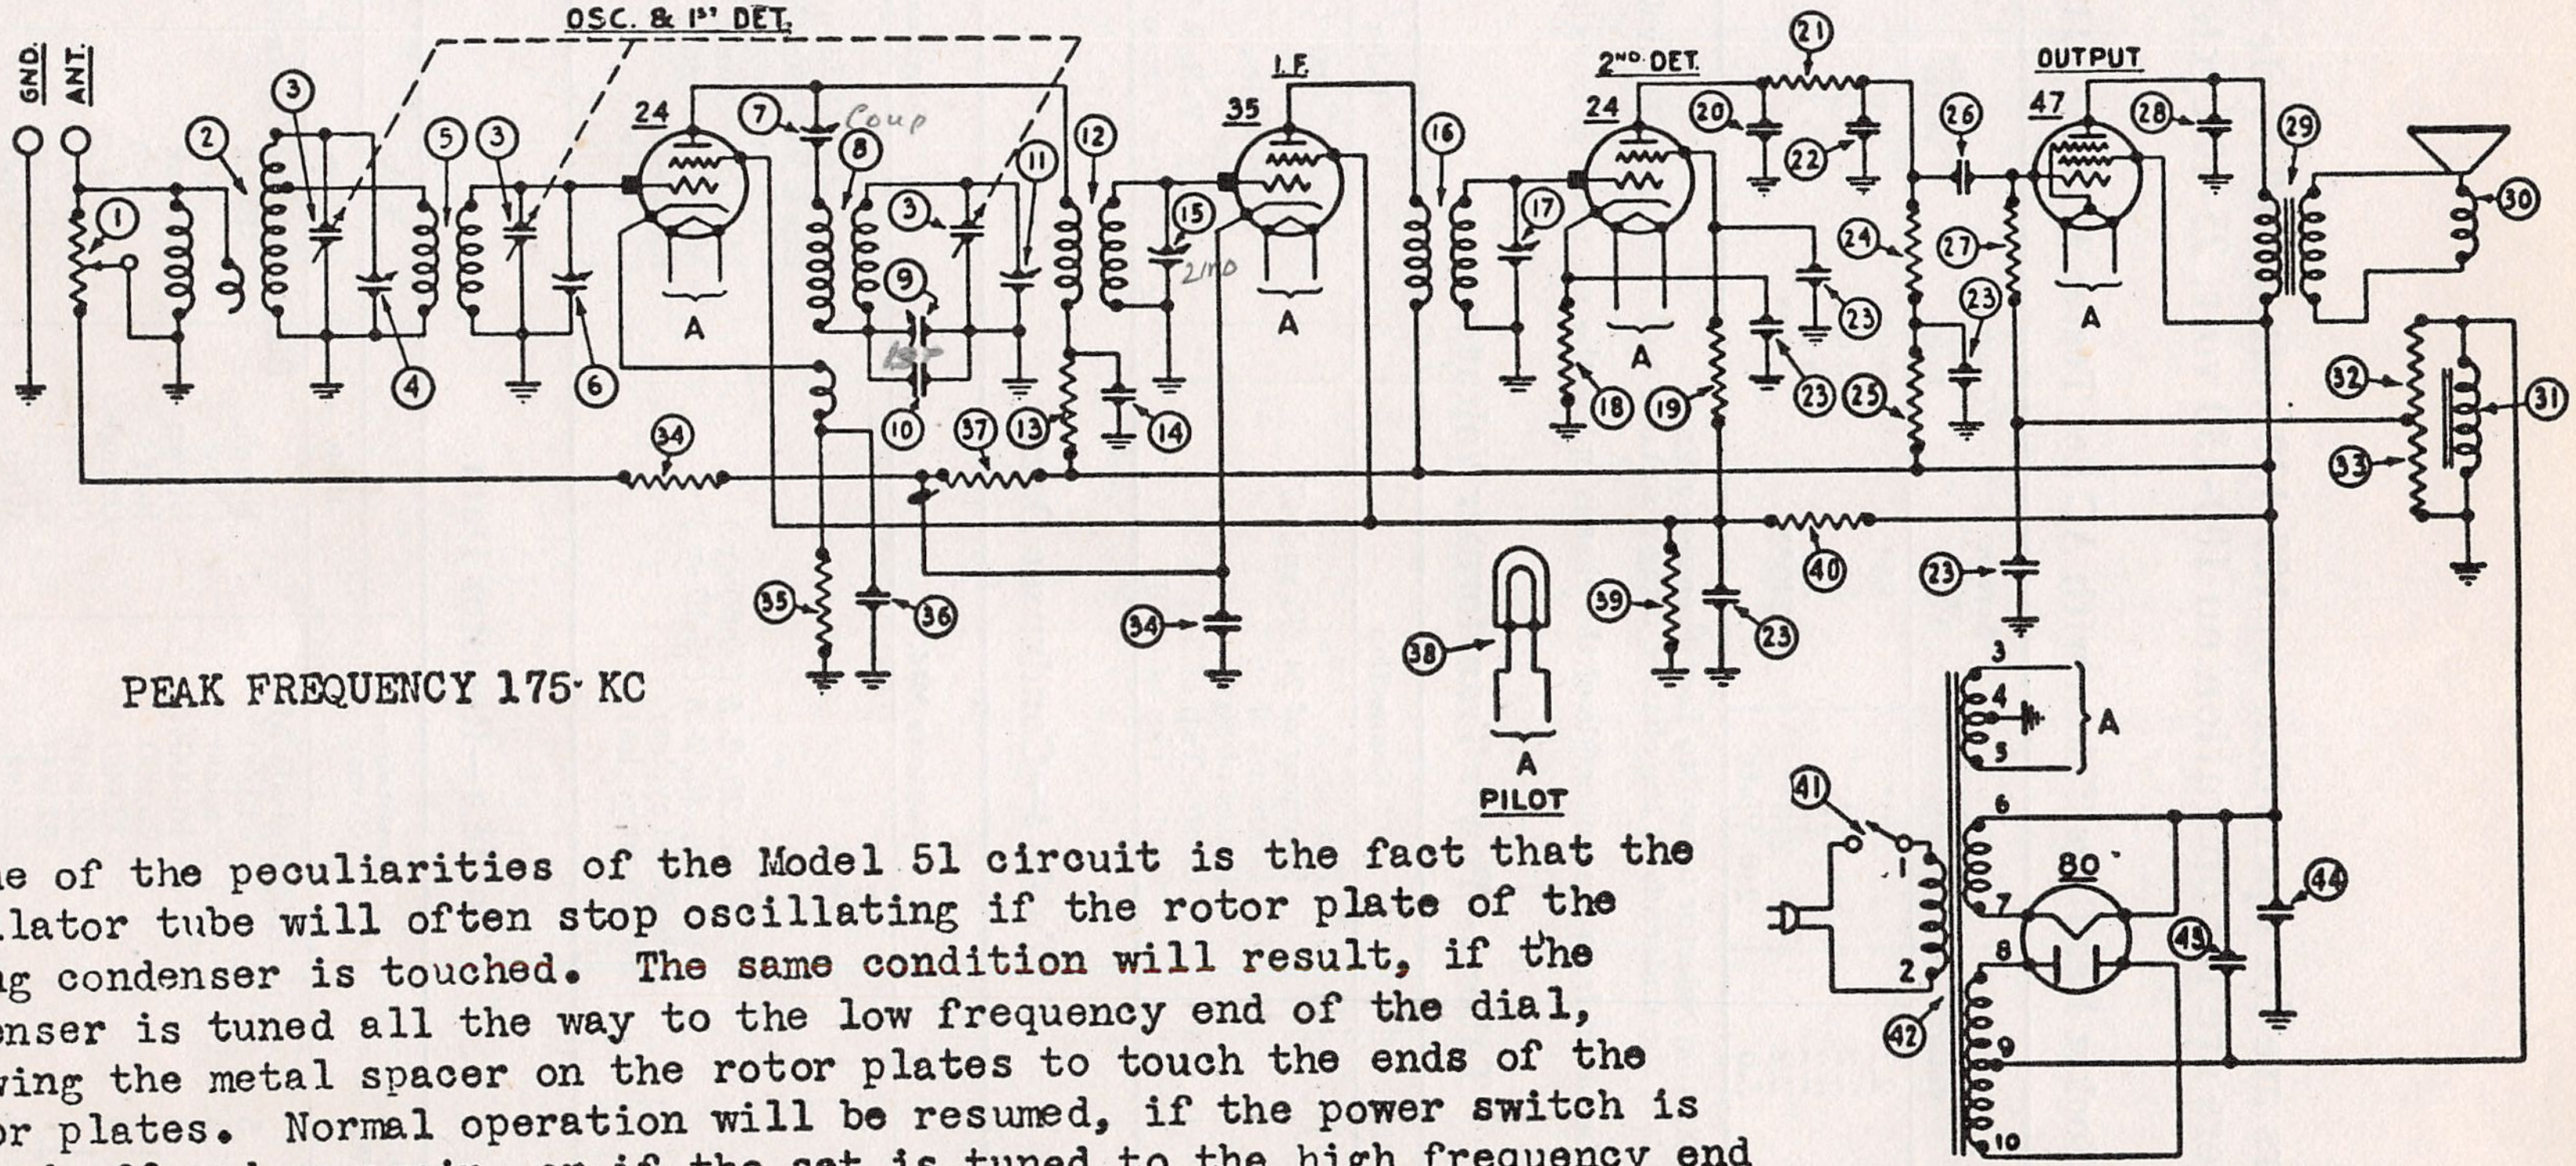

PEAK FREQUENCY 175 KC

One of the peculiarities of the Model 51 circuit is the fact that the oscillator tube will often stop oscillating if the rotor plate of the tuning condenser is touched. The same condition will result, if the condenser is tuned all the way to the low frequency end of the dial, allowing the metal spacer on the rotor plates to touch the ends of the stator plates. Normal operation will be resumed, if the power switch is snapped off and on again, or if the set is tuned to the high frequency end of the dial. An insulated wire is placed around the metal spacer on one set of rotor plates to prevent them from touching the stator. Later model 51s have a small fibre insulator of special design to replace the wire.

The coupling condenser and the two i-f trimmer condensers are located at the rear of the chassis, near the combination 1st detector-oscillator tube. Reading from left to right, facing the rear of the chassis, the condensers are "coupling", "2nd i-f" and "1st i-f".

Models 51, 52, 51A, 551 (1932)

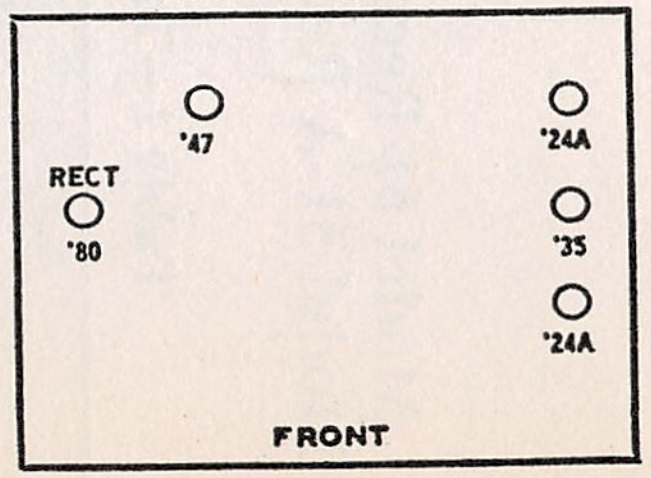

MODEL 51,51-A
Voltage
Electrical
Data

PHILCO RADIO & TELEVISION CORP.

Model 51 Receivers are for operation on 100-130 volt, 50-60 cycle AC line
Model 51-A Receivers are for operation on 100-130 volt, 25-40 cycle AC line

Table 1—Tube Socket Readings Taken with AC Set Tester AC Line—115 volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milli-amperes
Type	Circuit						
24	Osc. & 1st Det.	2.2	220*	85*	9.0*	9.0*	
35	I.F.	2.2	210	85	3.0	3.0	6.2
24	2nd Det.	2.2	75	54	5.2	5.2	0
47	Output	2.2	210**	240**	0 2**		28.**
80	Rect.	5.0	240/Plate	.	.	. .	30/ Plate

Note—Volume Control on full, Station Selector turned to Low Frequency End.
*These readings must be taken from the underside of the chassis, using a suitable high resistance D.C. voltmeter equipped with test prods and leads.
**These readings must likewise be taken from the underside of the chassis unless the set tester is especially equipped for testing pentode tubes.

Table 2—Power Transformer Voltages

Terminals	A.C. Volts	Connection	Color
1-2	105 to 125	Primary	Black (Small Gauge)
3-5	2.5	Filament of 24, 35 and 47	Black
6-7	5.	Filament of 80	Light Blue
8-10	700.	Plates of 80	Yellow
4	. .	Center Tap of 3-5	Black, Yellow Tracer
9	. . . . .	Center Tap of 8-10	Yellow, Green Tracer

Table 3—Condenser Data

Nos. on Figs. 1 and 2	Capacity Mfd.	Container
⑳ ㉒	00025	Yellow
⑩ ㊱	00011	Blue and Golden Yellow
㉖ ㉘	.01	Black Bakelite Container
⑭	.05	Black Bakelite Container
㉓	.1, .15, .25, 2-.5 (50-60 cy.)	Metal Container
	.2, .15, .25, 2-.5 (25-40 cy)	Metal Container
㊸	6 (50-60 cycles)	Electrolytic
	10 (25-40 cycles)	Electrolytic
㊹	6	Electrolytic

Table 4—Resistor Data

Nos. on Figs. 1 and 2	Power (Watts)	Resistance (Ohms)	Color		
			Body	Tip	Dot
㉞		250 and .05 Mfd.	Black Bakelite Container		
⑬	.5	1,000	Brown	Black	Red
㉟	.5	8,000	Grey	Black	Red
㉑	.5	10,000	Brown	Black	Orange
㊴	1.	25,000	Red	Green	Orange
⑱	.5	32,000	Orange	Red	Orange
㊵	1.	32,000	Orange	Red	Orange
㊲	2.	51,000	Green	Brown	Orange
⑲ ㉕	.5	99,000	White	White	Orange
㉝	.5	160,000	Brown	Blue	Yellow
㉔ ㉗ ㉜	.5	490,000	Yellow	White	Yellow

MODEL 51, 51-A
Adjustment
Chassis

PHILCO RADIO & TELEVISION CORP.

The adjustment of the Model 51 Receiver requires the use of a 175 K.C. oscillator and a broadcast oscillator such as the Jewell 560.

Set up the receiver for operation with the ground wire attached, but the aerial disconnected. Connect the ground wire of the oscillator to the receiver ground terminal. Connect the output meter (low terminals) across the speaker voice coil terminals.

Intermediate Frequency or I.F. Adjustment—Place the oscillator in operation at 175 K.C. Remove the tube shield and attach the oscillator output lead to the control grid terminal on top of the detector oscillator tube (see illustration above).

With the receiver volume control on full, adjust the oscillator output until the output meter reads about ½ scale deflection.

Using a Philco-fibre wrench, part 3164, adjust the 2nd I.F. compensating condenser for maximum reading in the output meter. The illustration above shows the positions of the various compensating condensers. Next adjust the first I.F. compensating condenser, and finally adjust the coupling condenser. Remove the oscillator connection from the grid terminal of the detector oscillator tube, and replace the clip on the tube.

Detector Condenser—Connect the oscillator to the "Ant." terminal of the receiver chassis. Place the oscillator in operation at 175 K.C. Turn the station selector of the receiver to exactly 1400 K.C. Adjust the detector compensating condenser for maximum reading in the output meter.

If the receiver is so far out of adjustment that the signal is not audible, it may be necessary to set the oscillator for 1400 K.C. on the broadcast frequency setting. After making this adjustment, again set the oscillator at 175 K.C. The adjustment of the detector condenser will determine the position on the Philco scale where the eighth harmonic of 175 K.C. (1400 K.C.) will be tuned in. It must be tuned in at exactly 140 on the Philco scale.

Antenna Condensers—With the oscillator still set at 175 K.C. and the tuning dial at 1400 K.C., adjust the second antenna compensating condenser for maximum reading in the output meter, and then adjust the first antenna condenser.

Low Frequency Condenser—Set the broadcast oscillator to exactly 600 K.C. and turn the receiver dial to exactly 60 on the scale. Adjust the low frequency condenser for maximum reading in the output meter.

After making this adjustment, it will be desirable to check the detector compensating condenser adjustment again. Set the oscillator at 175 K.C. and receiver at 140 on the scale. Adjust again for maximum reading in the output meter.

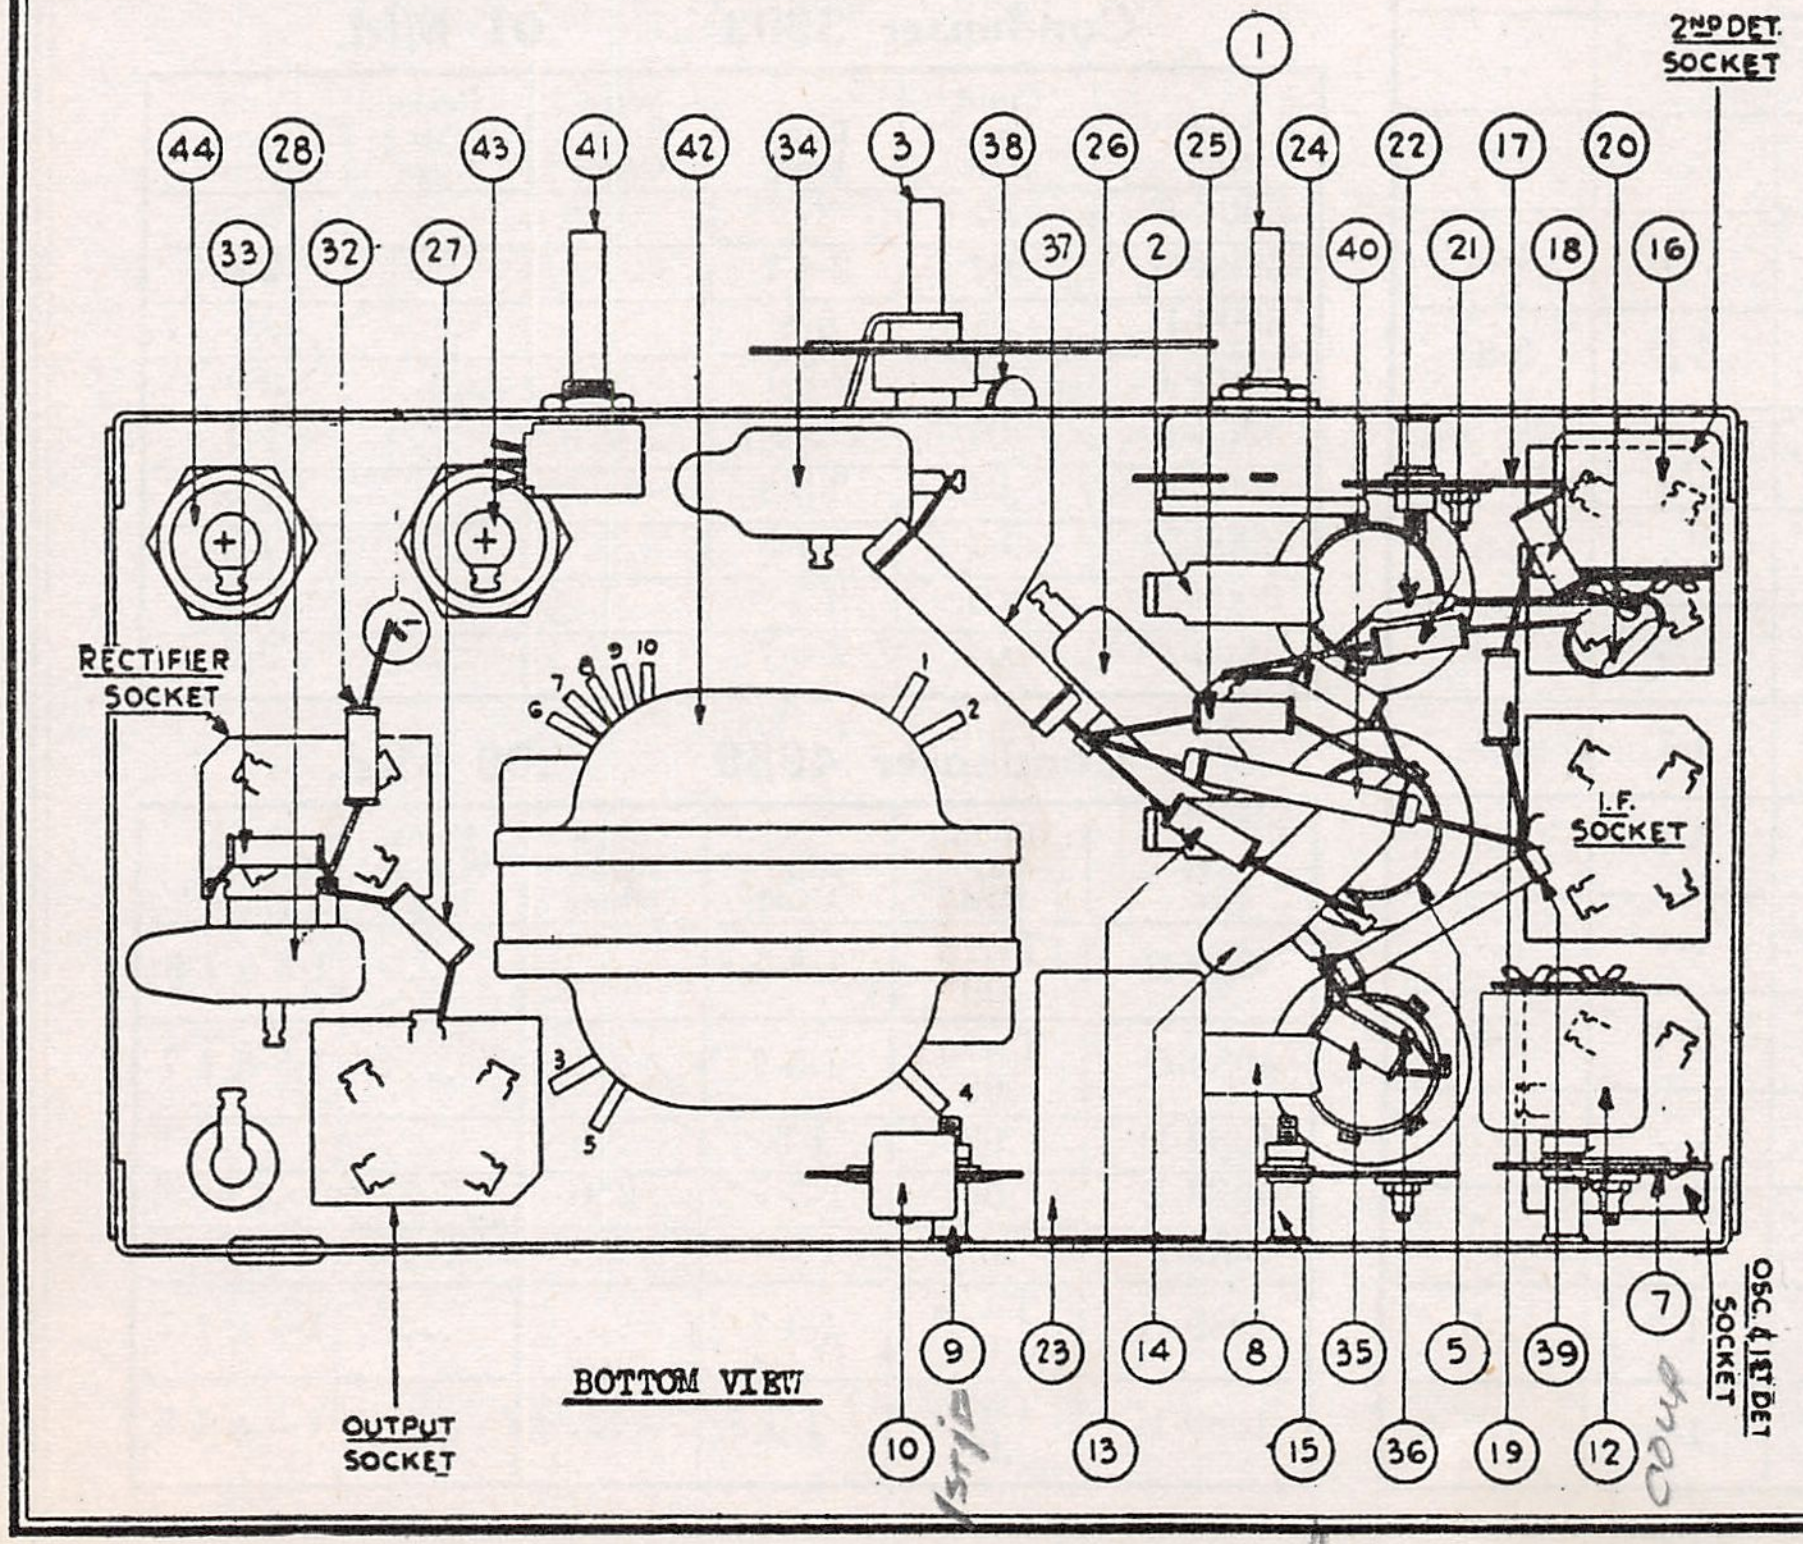

BOTTOM VIEW

OUTPUT SOCKET

New Replacement Parts Models 51 and 551

Part No.	Name	List Price						
3615-AC	Condenser (.05 Mfd.)	$0.20	5868	Resistor (51,000 Ohms)	.35	03881	First R. F. Transformer	.75
3903-K	Condenser (.01 Mfd.)	.16	5879	Bezel	.20	03882	Oscillator Coil	.75
3903-S	Condenser (.01 Mfd. Double)	.20	5942	Clock Glass	.30	03886	Second I. F. Transformer	1.00
5837	Resistor (1,000 Ohms)	.20	5950	Clock Unit (60 Cycles)	5.50	03887	First I. F. Transformer	1.25
5838	Resistor (8,000 Ohms)	.20	02861	Voice Coil and Cone Assembly (Type P) Small	.60	03915	Condenser (.1, .15, .25, 2-.5) 50-60 Cycles	1.25
5839	Volume Control	.75	02887	Voice Coil and Cone Assembly (Type S) Large	.75	03945	Condenser (.2, .15, .25, 2-.5) 25-40 Cycles	1.25
5858	Condenser (250 Mmf.)	.16	02942	Field Coil and Pot Assembly	1.75	04011	Tube Shield	.25
5863	Condenser (710 Mmf.)	.18	03809	Gang Condenser	4.75	04031	Dial Complete	.40
			03814	Pilot Light Bracket Complete	.08	14607	Turnings (3 used)	.18
			03880	Antenna Coil	.75	44613	Scroll	

Standard By-Pass Condenser Data

The tables below list the various Philco standard by-pass condensers in black bakelite ontainers. The drawing shows all possible lug connections and the tables list the lug umbers.

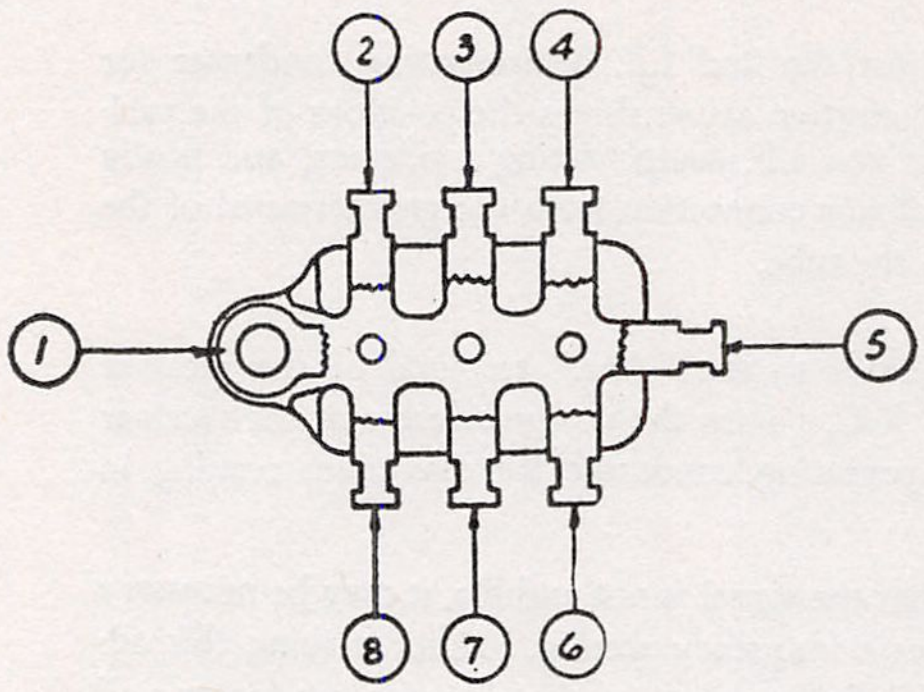

Condenser 3615 .05 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
3615-B	.05	1-3-5	250	3-5	1-5
3615-C	.05	1-5-7	250	5-7	1-5
3615-D	.05	1-3-5	...	...	1-5
3615-E	.05	2-5	...	...	...
3615-F	.05	2-3-5	...	...	3-5
3615-G	.05	5-8	...	...	...
3615-H	.05	3-5-8	...	...	5-8
3615-J	.05	1-5-7	...	...	1-5
3615-K	.05	3-5-8	250	3-5	5-8
3615-L	.05	1-5	...	...	...
3615-M	.05	2-5-7	...	...	2-5
3615-N	.05	1-4-7	...	...	1-4
3615-P	.05	1-4-7	250	4-7	1-4
3615-R	.05	1-5-7	250	5-7	1-5
3615-S	.05	1-4	...	...	...
3615-T	.05	1-5-7	150	1-7	1-5
3615-U	.05	1-5-7	...	...	1-7
3615-W	.05	1-2-5	...	...	1-5
3615-X	.05	1-2-5-7	150	1-7	1-5
3615-Y	.05	1-2-5-7	150	1-5	1-7

Condenser 3793 .015 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
3793-B	.015	5-7	...	...	...
3793-C	.015	2-4	...	...	...
3793-D	.015	2-6	...	...	...
3793-E	Twin .015	1-5-7	...	...	1-5 & 1-7
3793-F	.015	5-7-8	...	...	7-8
3793-G	.015	2-3-6	...	...	2-6
3793-H	Twin .015	1-3-5	. .	...	1-3 & 1-5

Condenser 3903 .01 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
3903-F	.01	3-5	...	...	...
3903-G	.01	2-4-7	...	...	2-4
3903-H	.01	5-8	...	...	...
3903-J	.01	2-5-7	...	...	2-5
3903-K	.01	1-2-4-7	...	...	1-7
3903-L	.01	3-5-8	...	...	3-5
3903-M	.01	4-7-8	...	...	4-8
3903-N	.01	3-5-8	...	...	5-8
3903-P	.01	2-5-7	...	...	2-7

Condenser 4989 .09 Mfd.

Part No.	Cond. Cap. Mfd.	Lugs Used	Wire Resis. Ohms	Resis. Wiring Lugs	Cond. Wiring Lugs
4989-B	Twin .09	1-3-5	...	...	1-3 & 1-5
4989-C	Twin .09	1-5-7	...	...	1-5 & 1-7
4989-D	.09	1-5	...	...	...
4989-E	.09	1-5-7	250	7-5	1-5
4989-F	.09	1-5-7	...	...	1-5
4989-G	Twin .09	1-4-7	...	...	1-4 & 1-7
4989-H	Twin .09	1-5	...	...	1-5 & 1-5

MODEL 70,70-A
Below B-22,000
Parts List

PHILCO RADIO & TELEVISION CORP.

REPLACEMENT PARTS—MODELS 70 AND 70-A

(Service Bulletin No. 57)

No. on Figs. 3 and 4	Description	Part No.
①	Volume Control	5039
②	First R. F. Transformer	03082
③	Tuning Condenser (25-40 cycles)	03077
	Tuning Condenser (50-60 cycles)	03076
④	Compensating Condenser (Part of Gang Assembly)	
⑤	Bypass Condenser—.09 M. F. Double	4989-C
⑥	First Detector Transformer	03083
⑦	Compensating Condenser (Part of Gang Assembly)	
⑧	Oscillator Coil	03084
⑨	Fixed Condenser—.00041 M. F.	5120
⑩	Compensating Condenser	03120
⑪	Resistor—50,000 Ohms	4237
⑫	Bypass Condenser—.09 M. F. Double	4989-C
⑬	Compensating Condenser (Part of Gang Assembly)	
⑭	Resistor—5,000 Ohms	3526
⑮	Condenser—.00011 M. F.	4519
⑯	Resistor—13,000 Ohms	3766
⑰	Condenser—.00011 M. F.	3772-C
⑱	Compensating Condenser	
⑲	First I. F. Transformer	03091
⑳	Compensating Condenser	03051
㉑	Fixed Condenser—.00011	
㉒	Second I. F. Transformer	03092
㉓	Bypass Condenser—.05 M. F.	3615-L
㉔	Compensating Condenser	03061
㉕	Condenser—.00005	
㉖	Bypass Condenser—.5	3583
㉗	Resistor—50,000 Ohms	4237
㉘	Condenser—.0005	3910
㉙	Condenser—.00025	3082
㉚	Detector R. F. Choke	03086
㉛	Resistor—250 Ohms and Condenser—.09 M. F.	4989-E
㉜	Resistor—250,000 Ohms	4410
㉝	Resistor—100,000 Ohms	4411
㉞	Condenser—.01 M. F.	3903-J
㉟	Resistor—250,000 Ohms	4410
㊱	Condenser—.25 M. F.	4264
㊲	Output Transformer	2673
㊳	Voice Coil and Cone	02996
㊴	Speaker Field assembled with Pot and Frame	02966
㊵	B. C. Resistor	5125

No. on Figs. 3 and 4	Description	Part No.
㊶	Condenser (Electrolytic) (50-60 cycles)	4916
	Condenser (Electrolytic) (25-40 cycles)	5142
㊷	Filter Choke	4951
㊸	Condenser (Electrolytic) (50-60 cycles)	4916
	Condenser (Electrolytic) (25-40 cycles)	5142
㊹	Pilot Lamp	3463
㊺	Power Transformer—50-60 cycles	5117
	Power Transformer—25-40 cycles	5118
㊻	Switch	4095
㊼	Bypass Condenser—.015 M. F. (Double)	3793-H
㊽	Tone Control	03140
	Mica (Compensating Condenser)	3473
	Insulating Washer (Compensating Condenser)	3500
	Rubber Washer (Chassis Mtg.)	5189
	Grommet (R. F. Transformer Shield)	3747
	Rubber Washer (Tuning Condenser Mtg.)	3914
	Rubber Washer (Tuning Condenser Mtg.)	3915
	Rubber Washer (Tuning Condenser Mtg.)	3916
	Spring Switch Knobs	4147
	Grid Clip	4897
	Five Prong Socket	4956
	Speaker Socket	4957
	Knobs (Dial)	03063
	Tube Socket (Rectifier Tube)	5026
	Steel Washer (Chassis Mtg.)	5058
	Knob (Switch, Tone, Volume) (Baby Grand)	4290-A
	Volume Control Insulator	4092
	Volume Control Insulator	4286
	Knob—Tone, Volume (Highboy)	03064
	Nut—Volume, Tone, Switch	W-434
	Complete Drive Bracket	03011
	Dial Disc Assembly	03031
	Fahnestock Clip	L-1126
	Knob Spring - Tone, Volume, Dial for Lowboy and Highboy	5262
	Knob Spring - Tone, Volume for Baby Grand	5173
	Knob Spring - Dial - Baby Grand	5262

Several changes in wiring and part numbers have been made in model 70.

The filter choke, part 4951 has been changed to part 4819, the same choke as used in the model 21. On the 50-60 cycle models, a .09 mfd.condenser, part 4989-J ,is connected across the filter choke, part 4819. On the 25 cycle models, this condenser should be .18 mfd., part 4989-H,ungrounded. The two 240,000 ohm resistors, part 4410, Nos.32 and 35 Service Bulletin No. 57 and Nos. 25 and 29, Service Bulletin No.85,should be of the Continental Carbon type. This is the resistor without the metal ends.

MODEL 70, 70-A
Above B-22,000
Chassis

PHILCO RADIO & TELEVISION CORP.

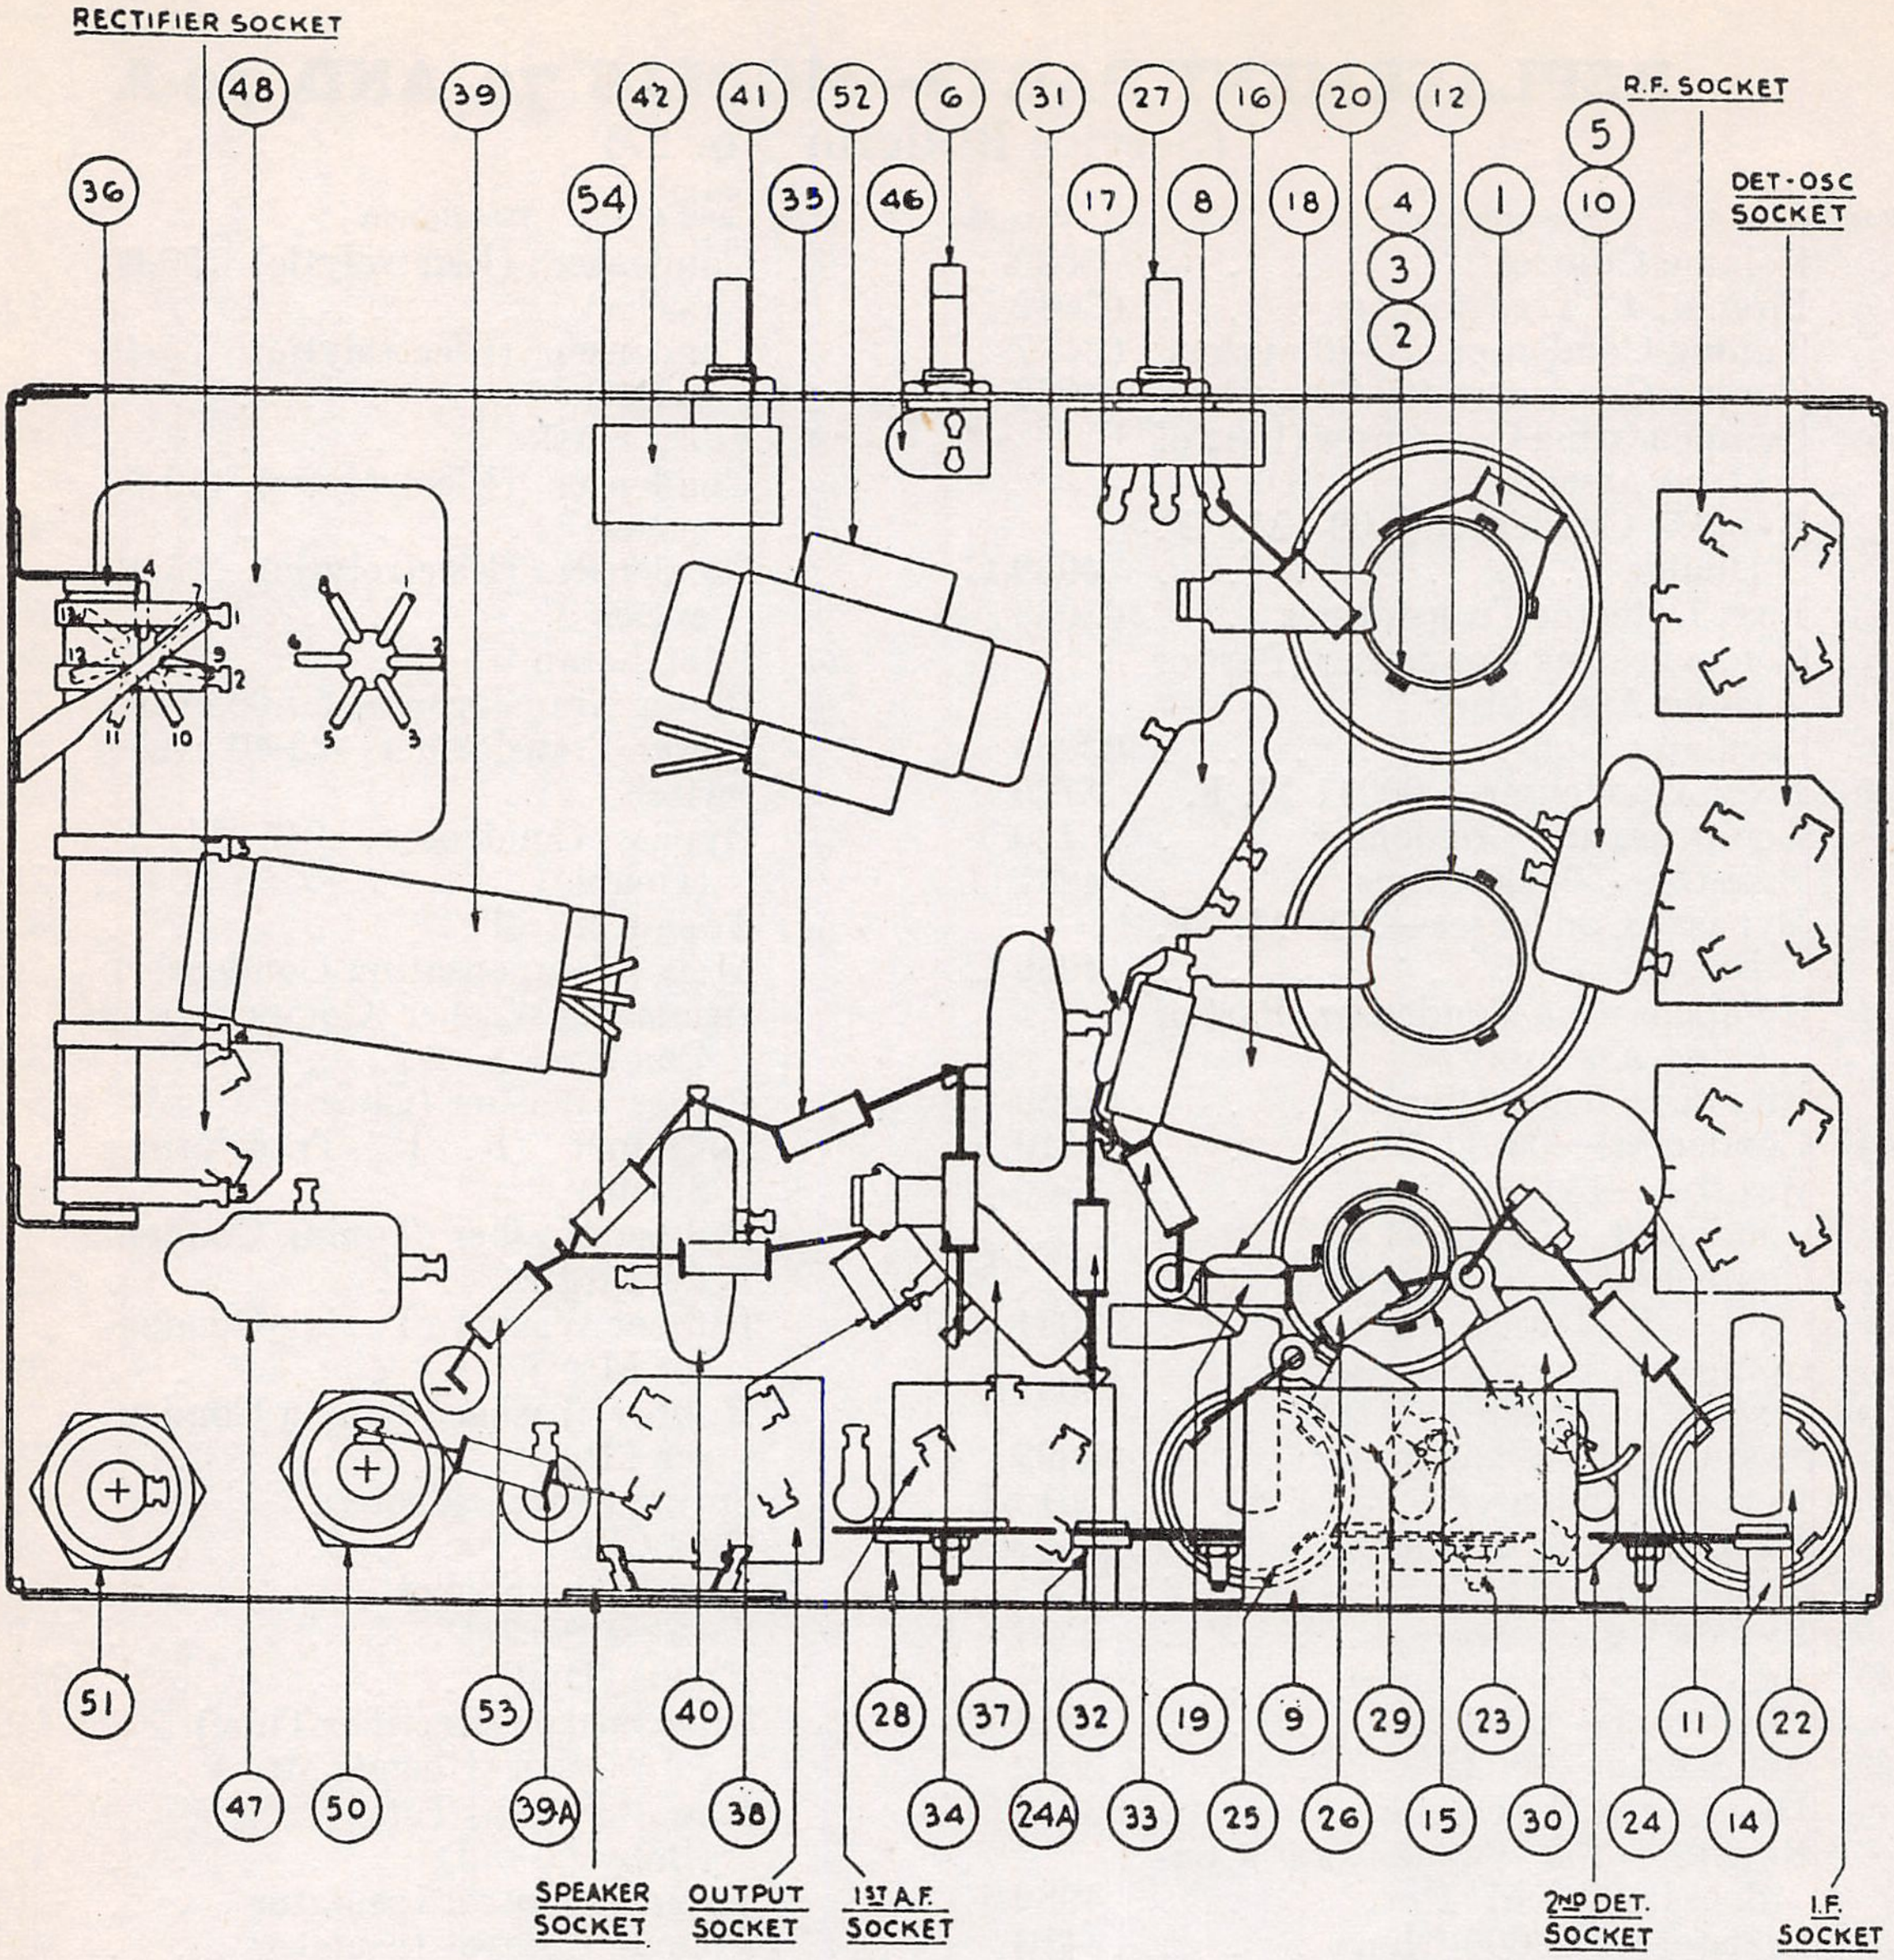
RECTIFIER SOCKET
48
39
42
41
52
6
31
27
16
20
12
R.F. SOCKET
5
10
36
54
35
46
17
8
18
4
3
2
1
DET-OSC SOCKET
51
53
40
28
37
32
19
9
29
23
11
22
47
50
39A
38
34
24A
33
25
26
15
30
24
14
SPEAKER SOCKET
OUTPUT SOCKET
1ST A.F. SOCKET
2ND DET. SOCKET
I.F. SOCKET

MODELS 70 AND 70-A

Above Serial B-22000

Part Numbers on Service Reports

It is highly important that the complete part number including the letter, of defective parts be specified on all of your service reports. Many parts have a letter after the part number as listed in the service bulletins. Other parts—namely, power transformers, audio transformers, filter chokes, field coils, electrolytic condensers, and volume controls are listed in the service bulletins without a letter, but actually have this letter stamped on the part itself after the part number.

Adjusting Philco Superheterodynes

The compensating condensers in every Philco Receiver are carefully adjusted before the set leaves the factory. Under ordinary circumstances they should never have to be re-adjusted in the field. Extremely rough handling during shipment, or a slight change in some of the electrical characteristics of the radio circuit may in some cases make re-adjustment necessary.

The indications that the set may require re-adjustment are poor sensitivity, poor selectivity and dial readings in kilocycles off more than 20 K.C. In some cases, an unstable condition of the set with a tendency to squeal or howl on certain sections of the dial may also be an indication of improper adjustment.

Under no circumstances should a re-adjustment be attempted unless the necessary equipment is available and unless the proper instruction has been received. Your distributor will gladly assist you in both of these matters.

The general method of adjusting the compensating condensers in all Philco superheterodyne receivers is the same. Once this procedure is understood for one model, it can be applied with but little change to the various other Philco models. By means of the instructions below and by reference to the different illustrations, the complete adjustments can be made on all Philco superheterodynes.

EQUIPMENT. The following equipment is needed:

1. Intermediate frequency oscillator accurately calibrated at 175 K. C. and 260 K. C. The Philco Oscillator Model 095 is recommended.
2. Output meter. The oscillator mentioned above is equipped with an output meter.
3. Philco fibre wrench, part 3164.

INTERMEDIATE FREQUENCY OR I. F. ADJUSTMENTS. The adjustment of the I. F. compensating condensers should be done in the following manner:

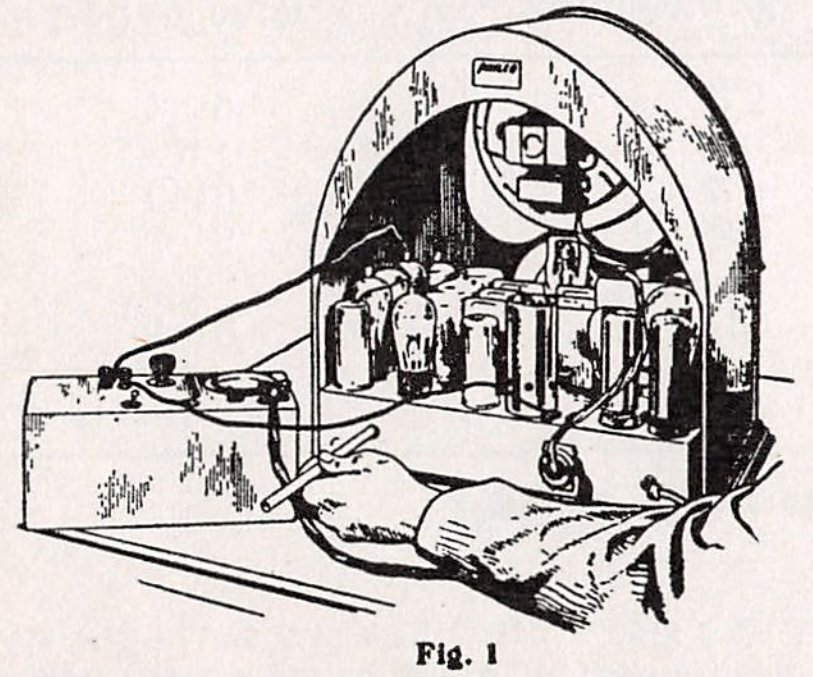

Fig. 1

1. Make the necessary connections between the oscillator and the receiver as shown in the illustration, Fig. 1. The connections consist of (a) the ground wire to the GND. terminal of the radio set and to the G terminal of the oscillator; (b) the A terminal of the oscillator to the grid of the first detector tube (tube shield in place and first detector grid clip removed), (c) output meter terminals to the primary of the output transformer (this connection is obtained at the speaker plug and socket through the Philco plug-in adapter, part 6095), (d) power cord of receiver to the electric power outlet after all other connections have been completed.
2. Turn on the radio set and the oscillator. For Philco models of the 70 and 35 series, the oscillator switch should be placed in the 260 K. C. position. For models of the 111, 112, 90 and 51 series, the switch should be placed in the 175 K. C. position. When adjusting sets with a NORMAL-MAXIMUM switch, the switch should be placed in the NORMAL position. Turn the radio volume control to Maximum. Set the dial between 60 and 65 on the Philco scale. Adjust the oscillator control (attenuator) until a reading is obtained on the output meter of approximately ½ the scale deflection.
3. By means of the Philco fibre wrench, part 3164, adjust the various intermediate frequency condensers, one at a time, to obtain maximum reading in the output meter. Locations of all compensating condensers are shown in the illustrations on pages 3 and 4. It is desirable to start with the last I F compensating condenser in the circuit (2nd I. F. secondary in the case of the 112) and progress in the adjustments toward the first. It may be necessary while the adjustments are being made, to lower the setting of the oscillator control from time to time so as to keep the output meter reading within the scale range.
4. After these adjustments have been completed, remove the oscillator connection from the grid terminal of the first detector tube and restore the grid clip connection to this terminal.

COUPLING CONDENSER. Adjust the coupling condenser in the Model 51 at 175 K. C. in the same manner as the I. F. condenser

HIGH FREQUENCY ADJUSTMENTS. Improper adjustment of the high frequency compensating condenser is characterized by weak reception and poor selectivity at the high frequency end of the dial and by dial readings being off by more than 20 K. C. at this end of the dial. Proceed in the following manner:

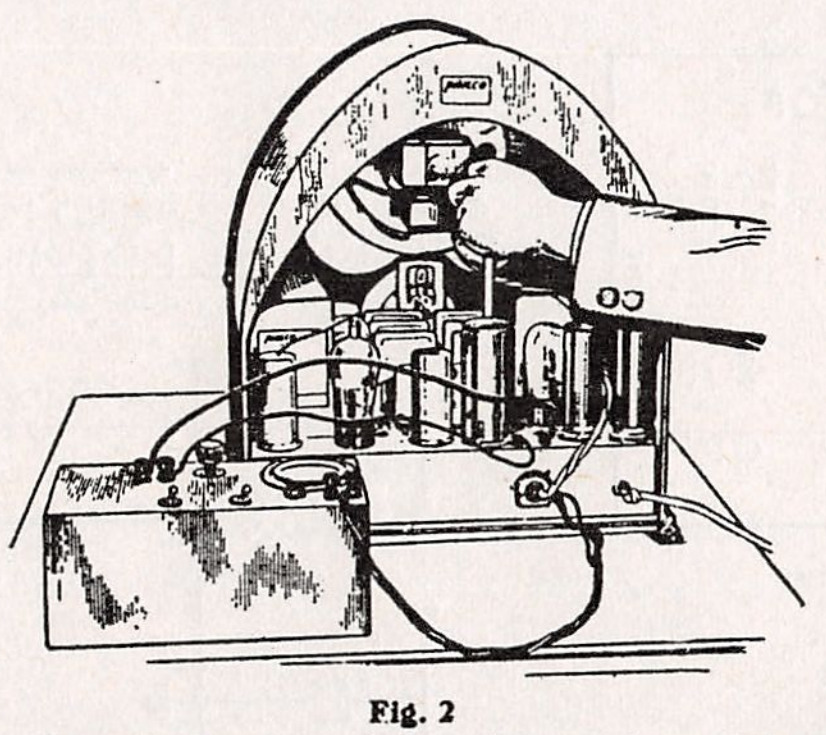

Fig. 2

1. Connect from the A terminal of the oscillator to the ANT terminal of the broadcast receiver. All other connections remain the same as for adjustment of the I. F. compensating condensers. See Fig. 2 for complete connections.
2. Set the switch on the oscillator to 175 K. C. Set the dial of the receiver to exactly 140 (1400 K. C.). The eighth harmonic of 175 K. C. will be received at this point. Turn the volume control to maximum. Turn on the oscillator and adjust the control until a ½ scale reading is obtained on the output meter. If the receiver is badly out of adjustment, it may not be possible to obtain such a reading, in which case the meter reading must be disregarded temporarily and the adjustments made by ear.
3. Carefully adjust the high frequency compensating condenser for maximum reading in the output meter or for maximum volume if the output is not great enough to be read on the meter.
4. When making this adjustment, it may be found that a given position of the adjusting nut can be obtained at which maximum reading is noted, but that the meter reading decreases when the fibre wrench is lifted from the nut. Allow for this condition by turning slightly beyond the point of maximum reading, then when the wrench is removed the reading will go up instead of down.
5. After making the adjustment, turn the station selector slightly to note if any increase in volume is obtained as the set is being re-tuned. If such an increase is obtained, then the antenna, detector and r. f. condensers should be adjusted as described below. After this adjustment, the high frequency condenser can again be re-adjusted at 1400 K. C.
6. In some cases, when first starting to make the 1400 K. C. adjustment, it may be found that the signal from the oscillator cannot be heard at 140 because the set is so far out of adjustment. In this case, tune the set to the signal, and then adjust the Antenna Detector and R. F. condenser first. Re-adjust the high frequency condenser at 140 on the dial.

ANTENNA, DETECTOR, AND R. F. ADJUSTMENTS:

The adjustment of the antenna, detector, and R. F. compensating condensers is done at 140 on the dial in the same manner and with the same connections as for the high frequency adjustments.

LOW FREQUENCY ADJUSTMENT. The characteristics of improper adjustment of the low frequency condensers are weak reception, poor selectivity and dial calibrations off more than 20 K. C. at the low end of the dial. The low frequency adjustment is made with the same connections as for the high frequency and Antenna condenser adjustments. Proceed in the following manner:

1. With the receiver and the oscillator in operation, the latter at 175 K. C., set the Philco dial at exactly 70 on the scale.
2. With the volume control at maximum, adjust the oscillator output until the output meter reads approximately ½ scale deflection. Adjust the low frequency compensating condenser for maximum reading in the output meter.
3. If the signal comes in stronger at a position off 70 on the Philco scale, adjust for maximum output on the meter at this "Off K. C." position of the dial. Now re-tune the set slightly to obtain any further possible increase, adjusting the compensating condenser and re-tuning the dial each time so as to bring the point of maximum output as near 70 as possible.
4. Re-set the dial to exactly 140, and re-adjust the high frequency condenser. It is possible that the adjustment of the low frequency condenser has affected the high setting of the dial slightly.

MODEL 65

PHILCO RADIO & TELEVISION CORP.

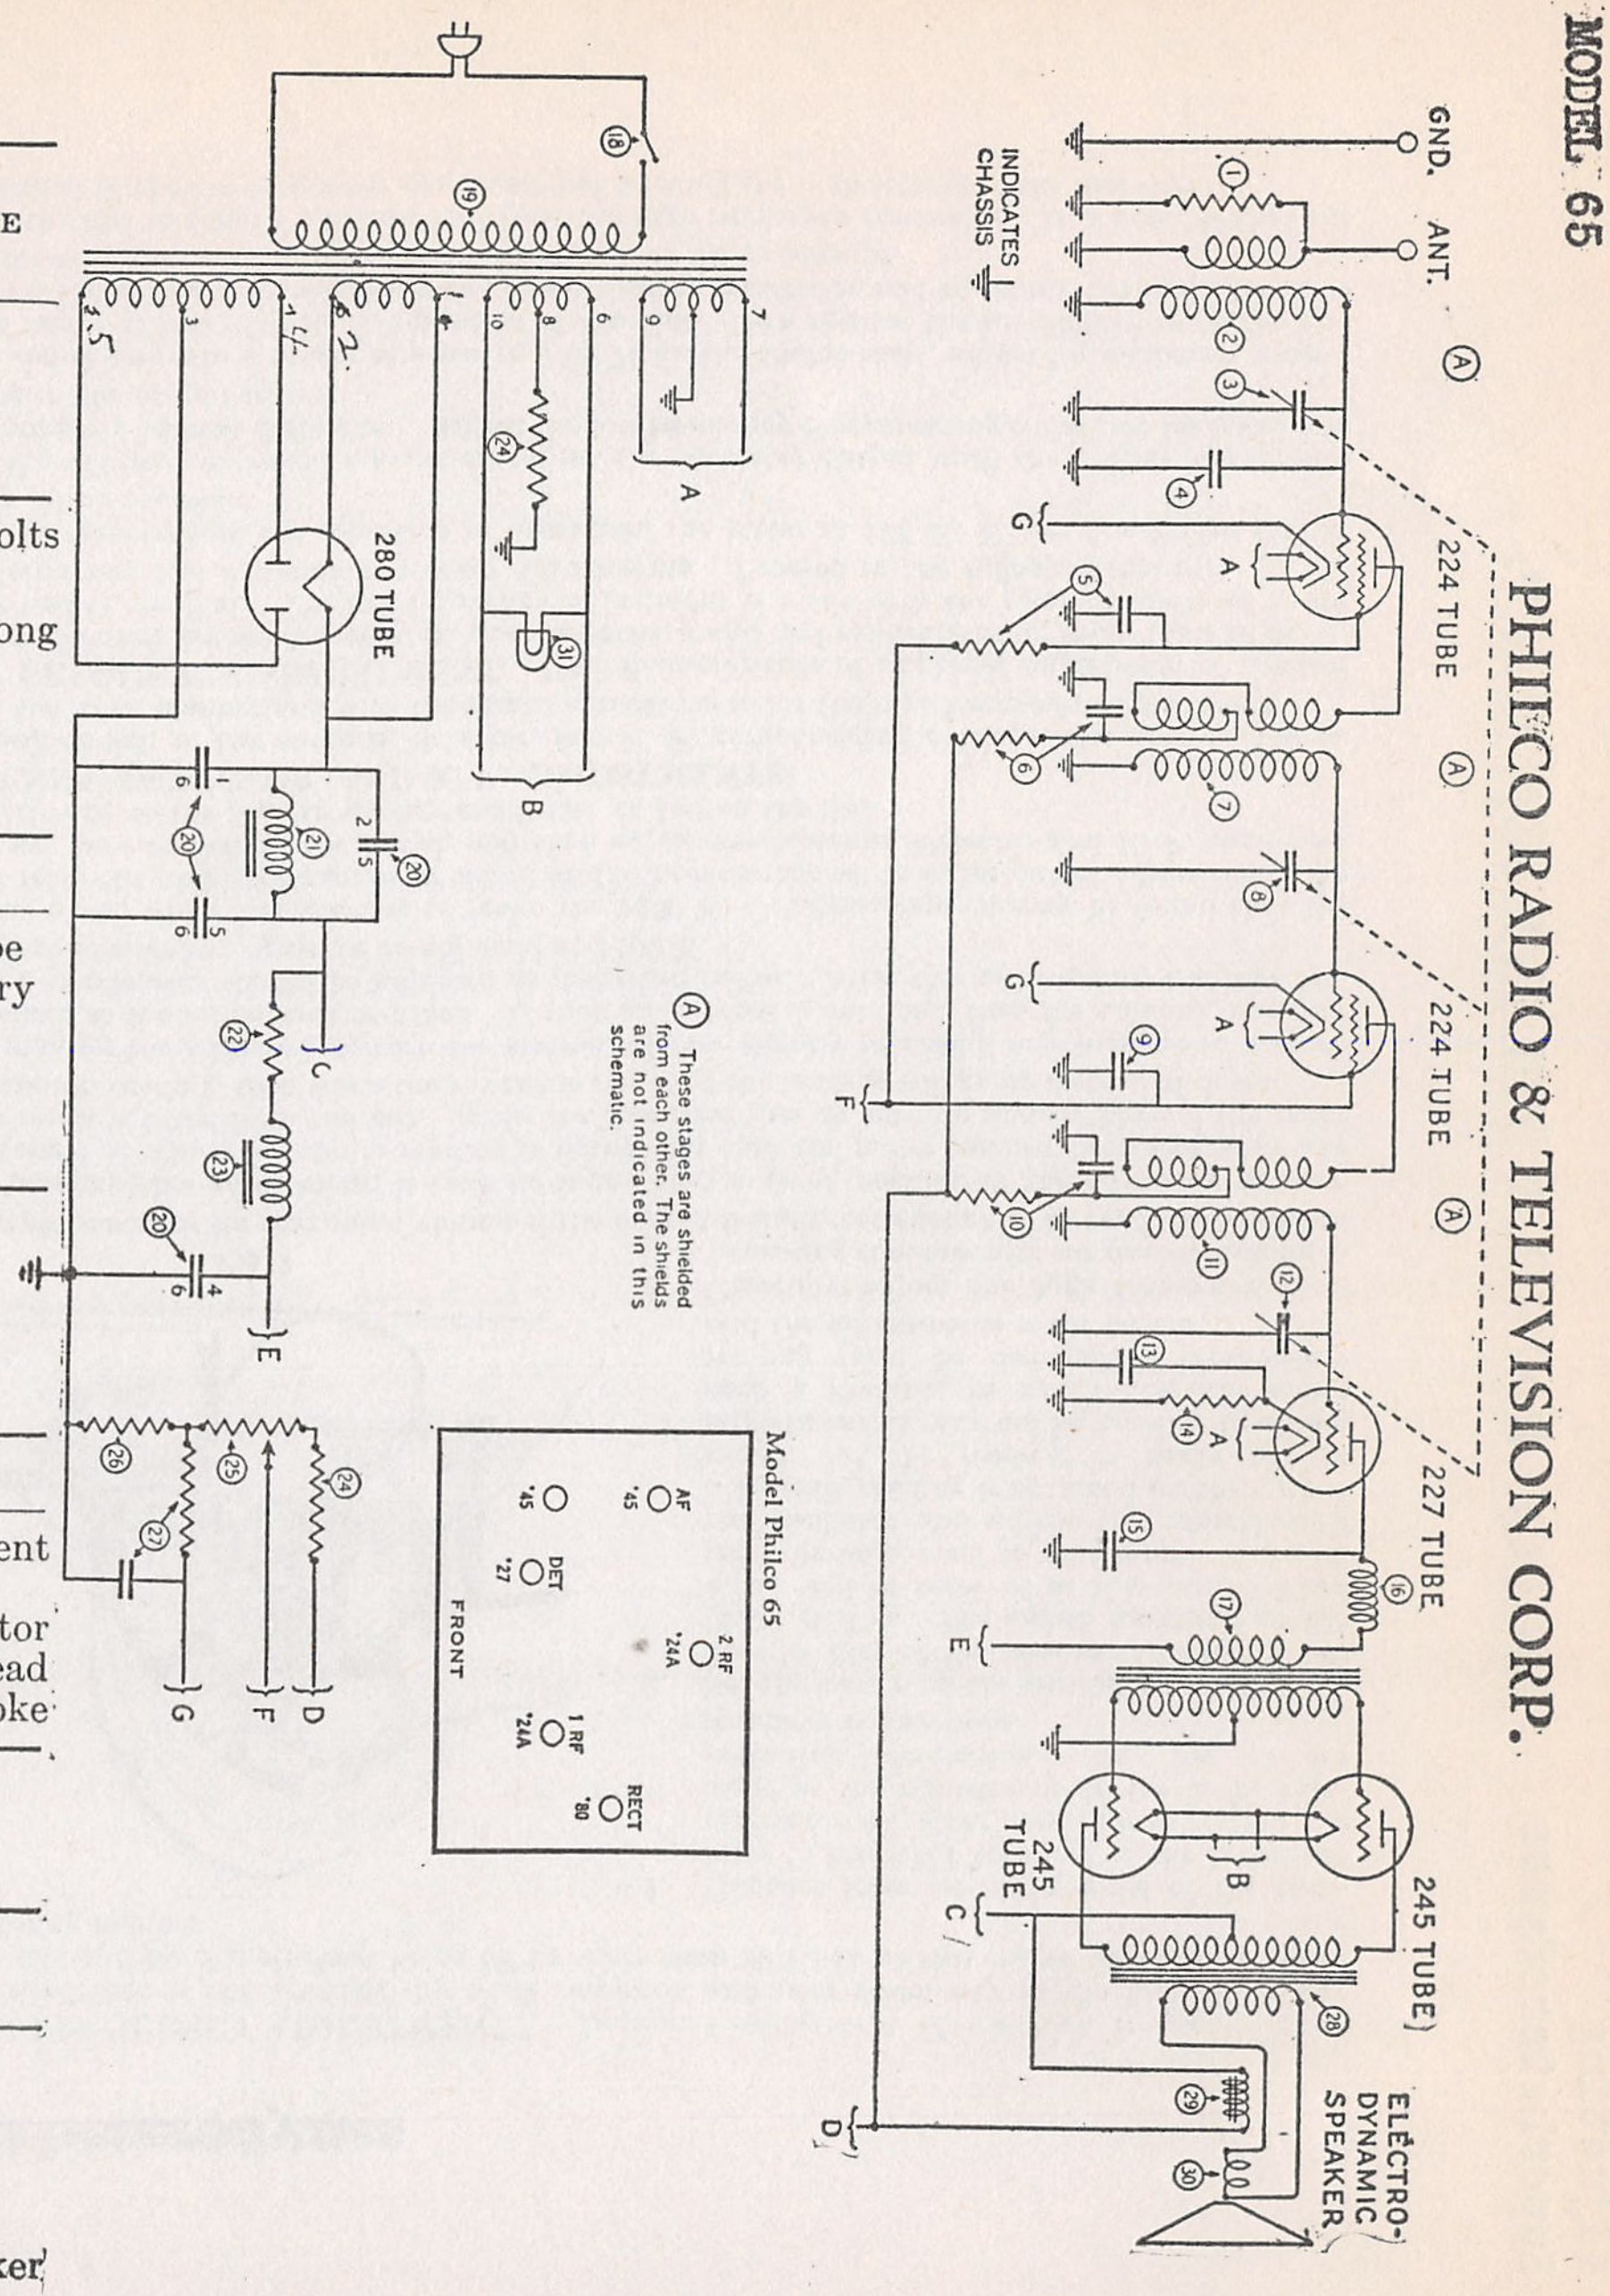
GND.
ANT.
Ⓐ
224 TUBE
224 TUBE
227 TUBE
245 TUBE
245 TUBE
280 TUBE
ELECTRO-DYNAMIC SPEAKER
INDICATES CHASSIS
A
B
C
D
E
F
G
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫ ⑬ ⑭ ⑮ ⑯ ⑰ ⑱ ⑲ ⑳ ㉑ ㉒ ㉓ ㉔ ㉕ ㉖ ㉗ ㉘ ㉙ ㉚ ㉛
Model Philco 65
AF '45
2 RF '24A
RECT '80
'45
DET '27
1 RF '24A
FRONT

Ⓐ These stages are shielded from each other. The shields are not indicated in this schematic.

Table 8
Tube Socket Readings

Type Tube	"A" Volts	"B" Volts	"B" Volts (Screen Grid)	"C" Volts (Control Grid)	MA Plate	Cathode
224	2.5	150	*.2 to 75	1.5	1.5	+1.5
227	2.5	250	....	28	†.8 to 3.5	+28
245	2.5	250	....	50	32	....
280	5.0	350-V. A.C.	....	....	55	....

*The voltage varies from 75 volts with the volume control turned for full volume to .2 volts with the control turned for minimum volume.

†When there is no signal being reproduced the detector plate current will be about .8 MA. Strong signals will cause a rise in current to 3.5 MA.

Table 9
Power Transformer Voltage [AC]

Terminals	A.C. Volts	Secondary
1– 2	700	A.C. Supply to Plates of Rectifier Tube
3		Center Tap of Rectifier Plate Secondary
4– 5	5.0	Rectifier Filament
6–10	2.5	Filament 245 Tubes
8		Center Tap of 245 Tube Secondary
7– 9	2.5	Heater 224 and 227 Tubes

Green lead—Center Tap for Secondary 7–9
Current Consumption—125 V. A.C. 95 Watts

Table 10
D. C. Voltage Across Filter Condenser Block

Terminals	D.C. Volts	Capacity	Circuit
1-6	325	2.0 Mfd.	First Filter Section, Ground to 280 Filament
2-5	20	.15 Mfd.	Parallel with First Choke Coil
3	...	....	Blank Terminal for Detector Plate Resistor
4-6	280	1.0 Mfd.	Last Filter Section, Gnd. to Det. Plate Lead
5-6	305	2.0 Mfd.	2d Filter Section, Gnd. to End of First Choke

Table 11
Voltage Across Resistors

Resistor Number	Resistor Terminal	Voltage Drop	Circuit
㉔	1–2	45–50	Grid Bias for the 245 Tubes
[illegible]	3–4	75–80	Reduces B Voltage for the Screen Grid
㉒	1–2	4–10	Detector Plate Voltage
⑭	1–2	28	Detector Grid Bias
Field Coil of Speaker		135–140	Supplies Field Energy of Dynamic Speaker

PHILCO RADIO & TELEVISION CORP.

Philco Model 76

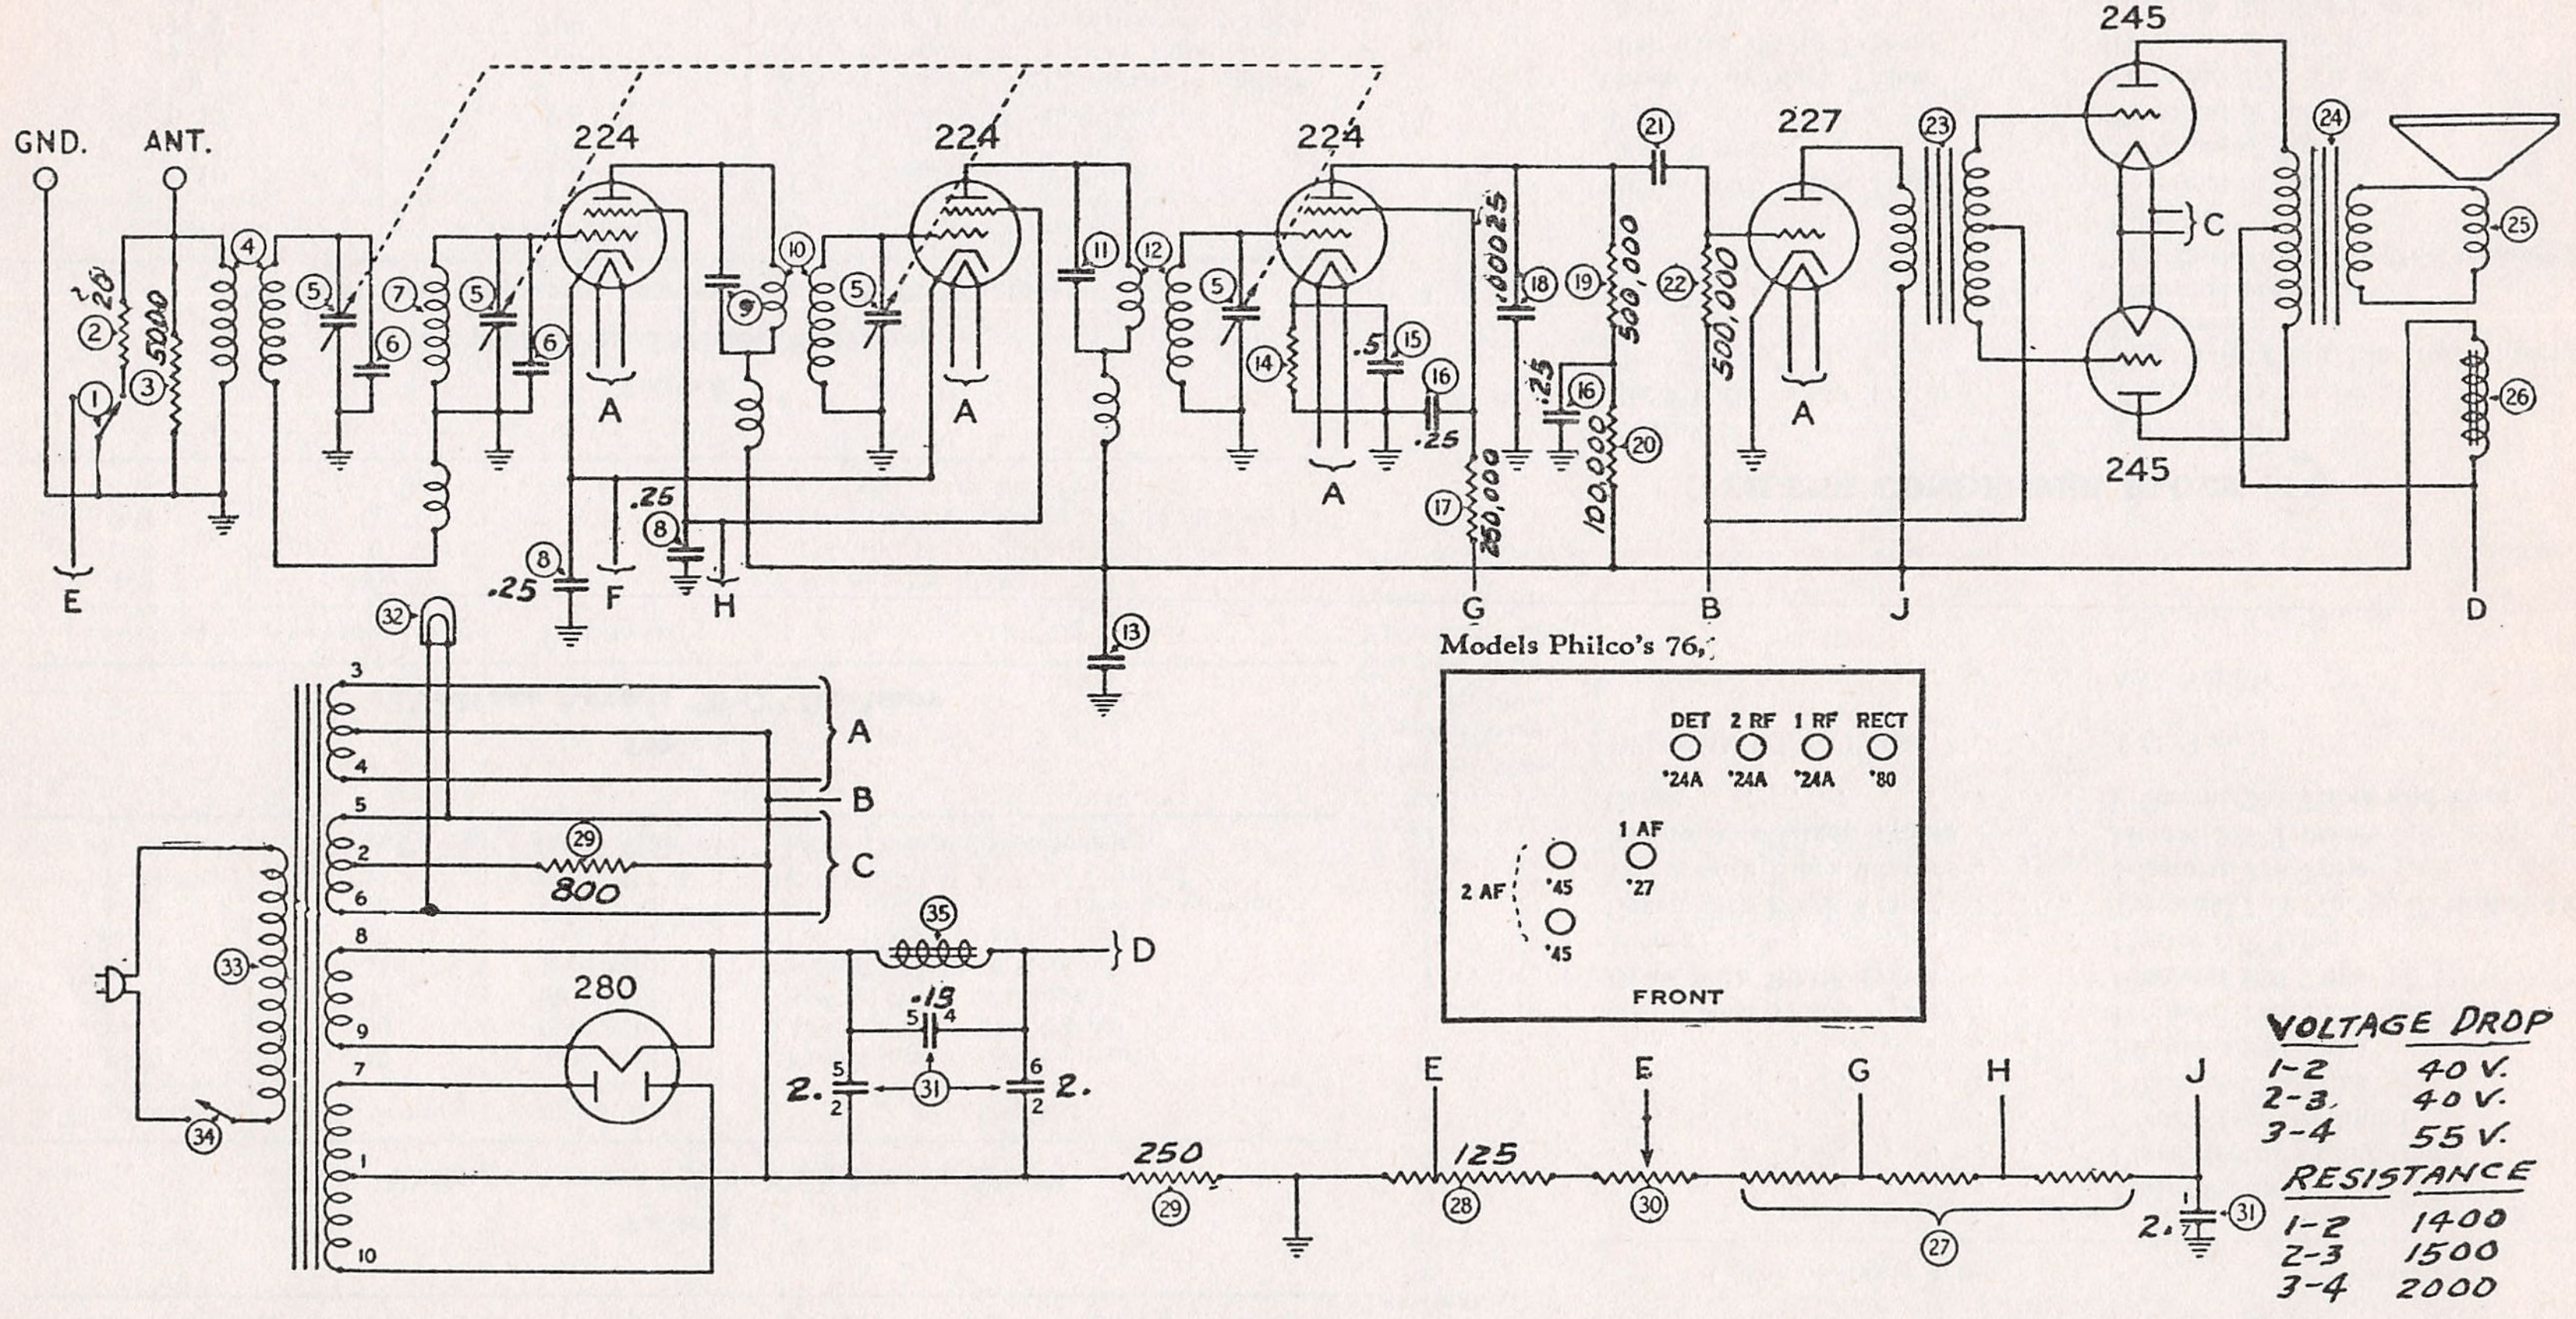
GND.
ANT.
224
224
224
227
245
245
A
B
C
D
E
F
G
H
J
5000
20
.25
.00025
500,000
500,000
100,000
250,000
.5
.25
800
280
.13
2.
2.
250
125
2.
Models Philco's 76,
DET
2 RF
1 RF
RECT
'24A
'24A
'24A
'80
1 AF
'27
2 AF
'45
'45
FRONT

VOLTAGE DROP
1-2 40 V.
2-3 40 V.
3-4 55 V.

RESISTANCE
1-2 1400
2-3 1500
3-4 2000

Power Transformer Voltages

Terminals	A.C. Volts	Secondary
1		Center Tap for 280 Plate
2		Center Tap for 245 Tubes
3–4	2.67	Heaters of 224 and 227 Tubes
5–6	2.68	Filaments of 245 Tubes
8–9	5.00	Filament of 280 Tube
7–10	7.50	Plate of 280 Tube
Red Wire		Center Tap for 224 and 227 Tubes
Red Wire		Primary } Through panel together
Red Wire		Primary } Through panel together

Model 76.

Vol.Contr.set to max. - Line Volts:115

Tube Type	Location	Fil. Volts	Plate Volts	S.G. Volts	Contr. Gr. Volts	Cathode Volts	Plate Ma.
'24	1 R.F.	2.3	145	90	3.	13.	3.5
'24	2 R.F.	2.3	145	90	3.	13.	3.5
'24	Det.	2.3	36	30	1.4	12.	0.
'27	1 A.F.	2.3	140		1.	10.	3.
'45	2 A.F.	2.2	230		46.		30
'45	2 A.F.	2.2	230		46.		30
'80	Rect.	4.5					50

MODEL 87
Voltage Data
Condenser Data
Neutralization

PHILCO RADIO & TELEVISION CORP.

Neutralizing: Use a neutralizing tube as described above and a good oscillator, such as is shown on Page 17, to neutralize the Philco Receiver.

When adjusting the Neutralizing Condensers connect the test lead from the oscillator to the ANT terminal. Have a good ground connection. Turn on the oscillator. With the Receiver turned on, tune it carefully until the oscillator signal is brought in at maximum strength. Have the oscillator coupler plug in for loud volume.

Use both the tuning condenser and the range control in order to bring in the oscillator signal at the greatest volume. The volume control of the Receiver must be on full, that is, turned as far as it will go in a clockwise direction. Remove the third (next to the detector) R. F. Tube, and after insulating one of the filament prongs put it back into the socket. When the neutralizing tube is inserted, the volume should be quite low. To properly neutralize this stage, turn the third neutralizing condenser with a fiber wrench, first one way then the other, until the minimum signal is obtained. This adjustment for minimum signal is very critical, and must be done with extreme care. Remove the neutralizing tube and after taking the insulating material from the filament prong put the tube back into the socket. Repeat the above procedure for the second and then the first R. F. stage. It is important that the neutralizing be done with the volume control on full.

Philco Model 87 Receiver

Table 3
Tube Socket Voltag

A.C. Line Volts	1st, 2d, 3d R. F. 1st A. F.			Detector		2d A. F.			Rectifier
	F. V.	P. V.	G. V.	F. V.	P. V.	F. V.	P. V.	G. V.	F. V.
125	1.5	90	6.0	2.5	30	2.5	245	45	5.0

Table 4
D. C. Voltage Across Filter Condenser Block

Terminals	D.C. Volts	Capacity	Circuit
1-10	310	2.00 Mfd.	First Plate Filter Condenser
1- 2	20	0.15 Mfd.	Across First Filter Choke
3-10	290	2.00 Mfd.	Second A. F. to Ground
4-10	155	1.00 Mfd.	Speaker Field to Ground
6-10	30	2.00 Mfd.	Detector Plate to Ground
5-10	96	1.00 Mfd.	R. F. and 1st A. F. Plates to Ground
7-10	45	0.10 Mfd.	B– of Second A. F. to Ground
8- 9	110 A.C.	0.015 Mfd.	LOC Terminal Condenser

Table 5
Voltage Across "B-C" Resistor

Terminals	Voltage Drop	Terminal	Circuit
1-2	90	1	B+ for 226 Tubes
2-3	6	2	C+ and B– of 226 and 227 Tubes
3-4	45	3	Grounded C– of 226 and 245 Tubes
		4	C+ and B– of 245 Tubes

Table 6
Power Transformer Voltages
Current Consumption—125-volt Line—A. C. Watts—95

Terminals	A.C. Volts	Secondary
7-10	1.5	A.C. Filament of 226 Tube
8-11	2.5	A.C. Filament of 227 Tube
6-12	2.5	A.C. Filament of 245 Tubes
9		Center Tap of 245 Filament Secondary
4- 5	5.0	A.C. Filament of Rectifier Tube
1- 2	700	A.C. Supply to Plate of Rectifier Tube
3		Center Tap of Rectifier Plate Secondary

POWER TRANSFORMER (30)

Terminal No.	Color of Cable Wire	Connection
1		Plate Rectifier (280) Tube
2		Plate Rectifier (280) Tube
3		Center Tap Grounded
4		Filament 280 Tube
5		Filament 280 Tube
6	Green with Yellow Tracer	Filament 245 Tube and Pilot
7	Black with White Tracer	Filament 226 Tube
8	Yellow	Heater 227 Tube
9	Green with Black Tracer	Terminal 7 of No. ㉛, Terminal 4 of No. ㉟
10	White with Black Tracer	Filament 226 Tube
11	Yellow with Green Tracer	Heater 227 Tube
12	Green	Filament 245 Tubes and Pilot
Green Rubber-Covered Wire	Blue with White Tracer	A.C. Supply
Black Rubber-Covered Wire		A.C. Supply
Yellow Rubber-Covered Wire		Terminal 3 of No. ㉚

FILTER CONDENSER BLOCK (31)

1	White	Terminal of No. ㉜
2-3	Black with Yellow Tracer	Terminal of No. ㉜
	(Two Wires)	*Right Lower Lug Electro-Dynamic Speaker Plug Jack
4	Blue	Terminal of No. ㉝
		*Left Lower Lug Electro-Dynamic Speaker Plug Jack
5	Yellow with Green Tracer	Terminal of No. ㉝
	(Two Wires)	Terminal of No. ⑰
6	Yellow	Terminal of No. ㉒
7	Green with Black Tracer	Terminal 9 of No. ㉚
8	Blue with White Tracer	Terminal of No. ㉖
9	Black	Local on Binding Post Strip
10		Grounded

PHILCO RADIO & TELEVISION CORP.

MODEL 87
Schematic
Socket

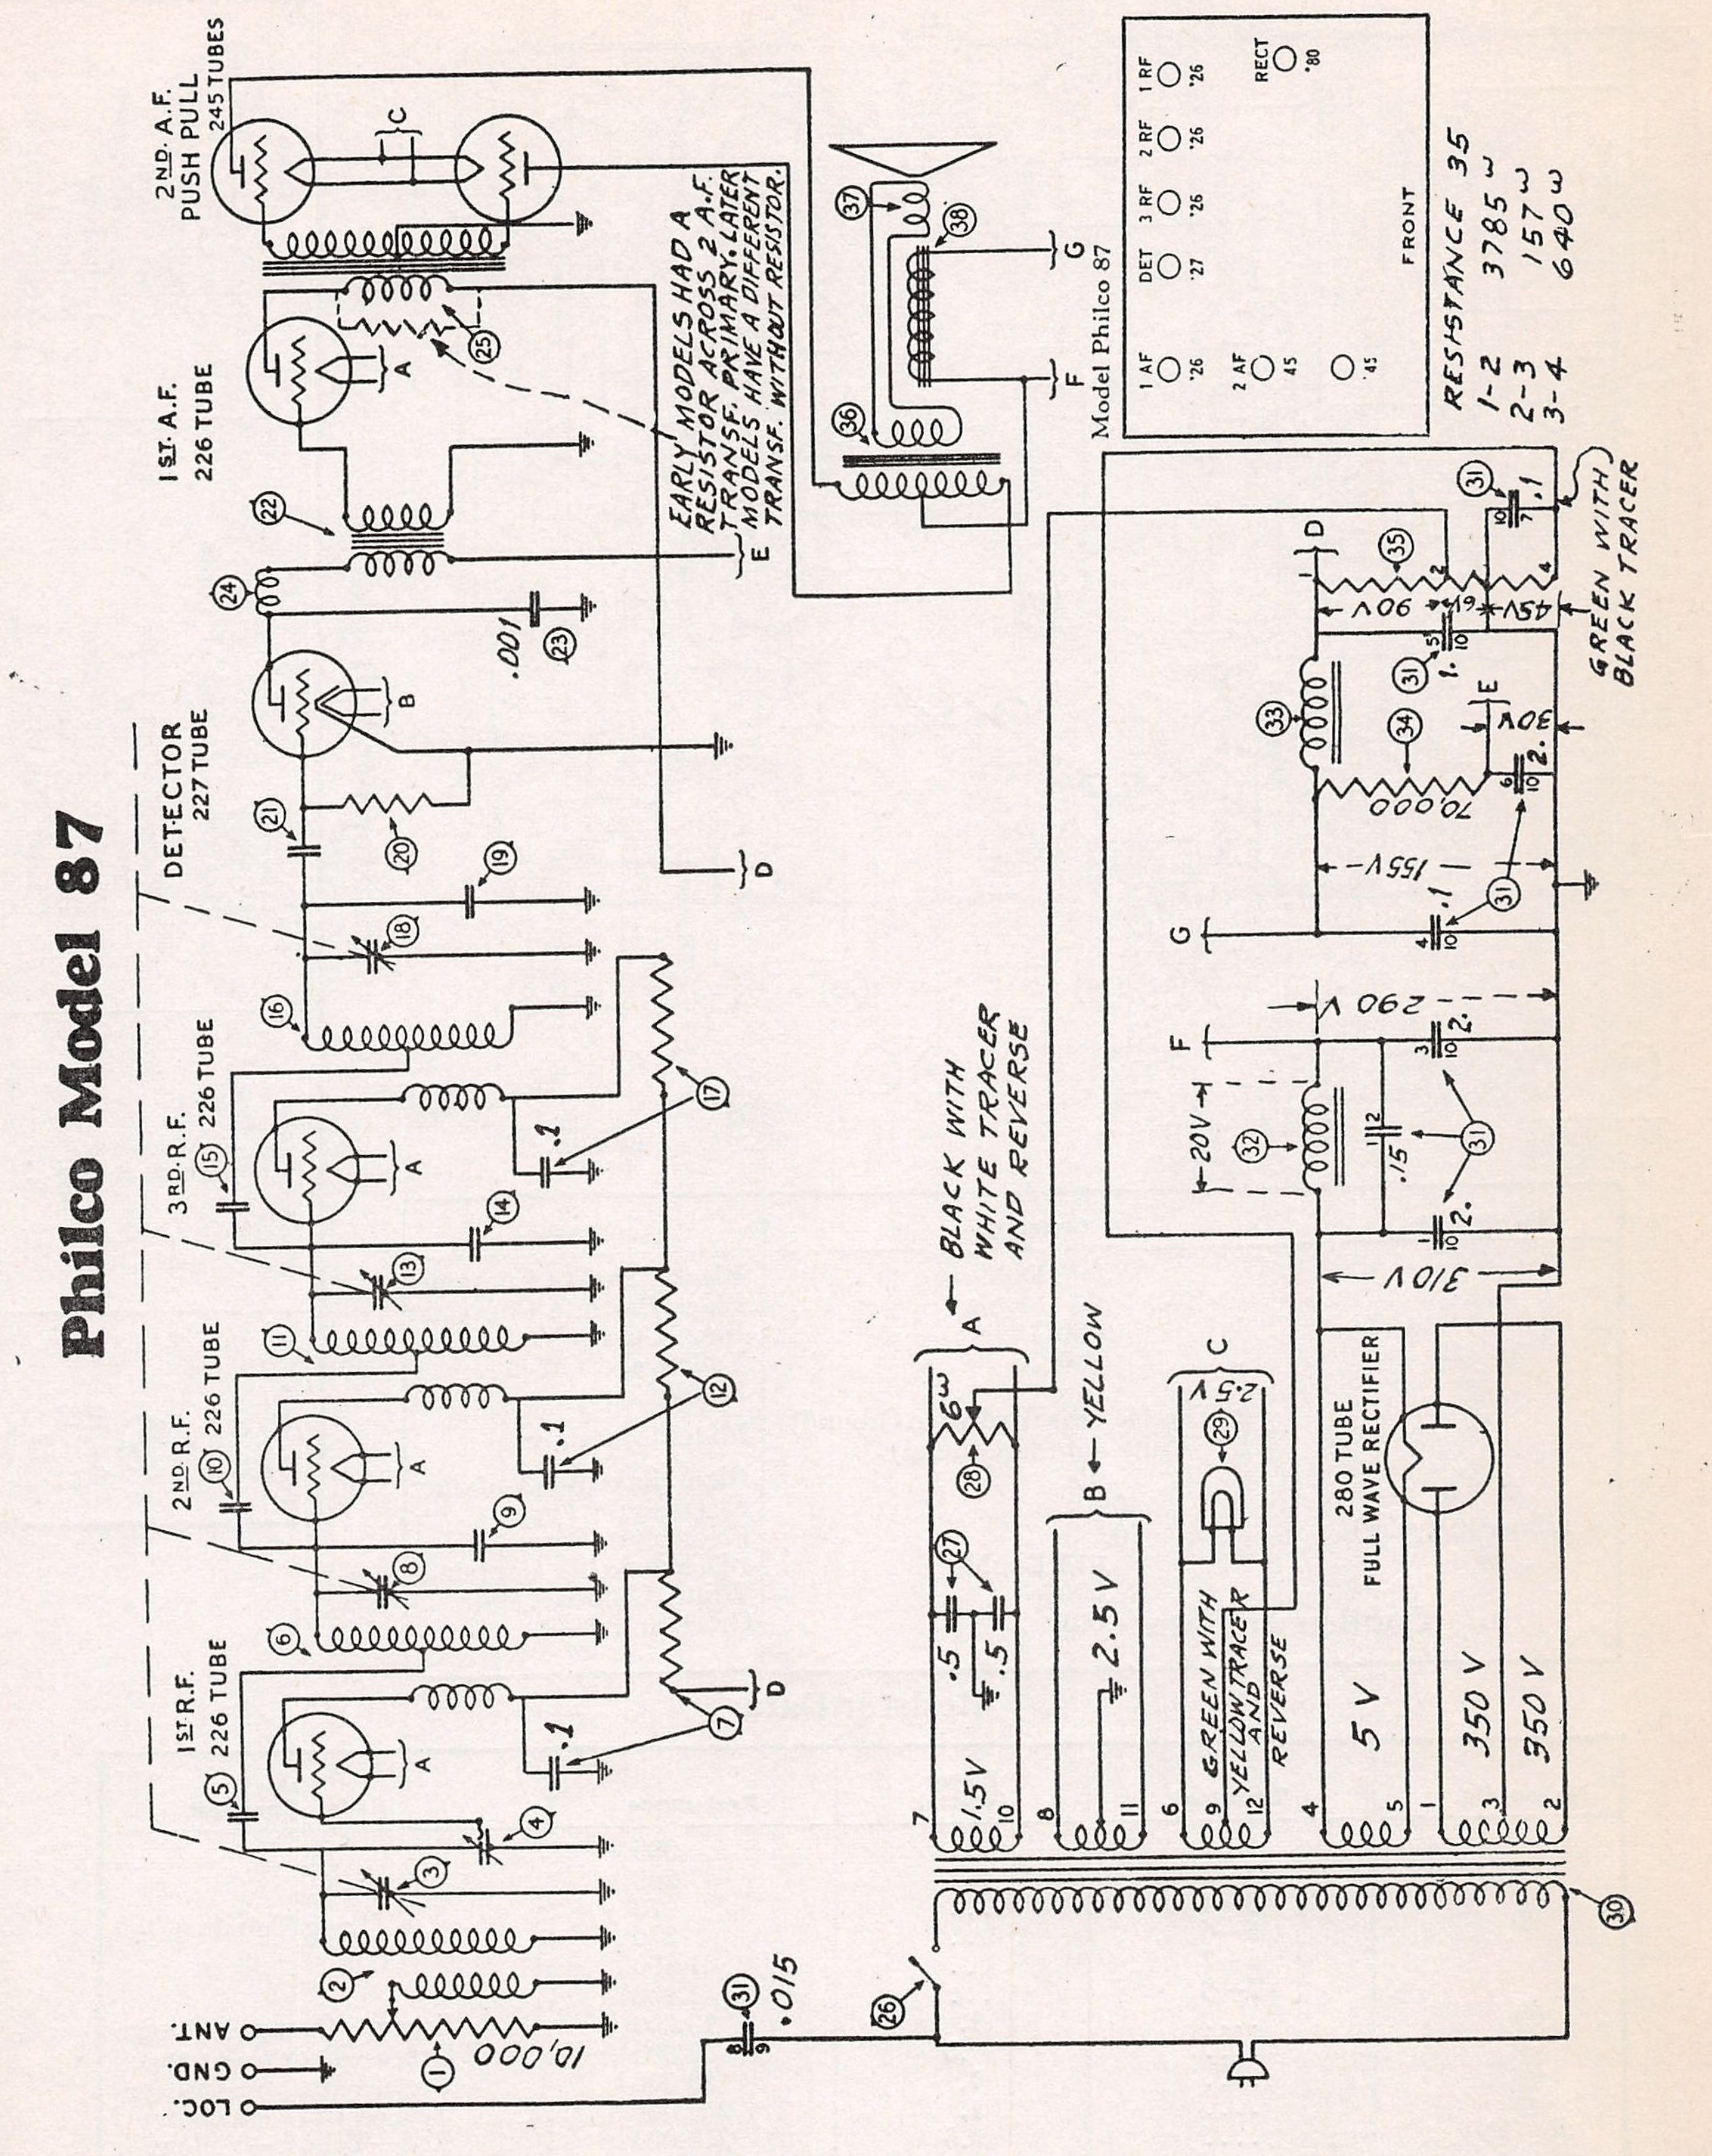
Philco Model 87
1ST R.F. 226 TUBE
2ND R.F. 226 TUBE
3RD R.F. 226 TUBE
DETECTOR 227 TUBE
1ST A.F. 226 TUBE
2ND A.F. PUSH PULL 245 TUBES
280 TUBE FULL WAVE RECTIFIER
ANT.
GND.
LOC.
10,000
.015
.001
.1
.5
6ω
1.5V
2.5V
5V
350V
350V
2.5V
BLACK WITH WHITE TRACER AND REVERSE
YELLOW
GREEN WITH YELLOW TRACER AND REVERSE
GREEN WITH BLACK TRACER
EARLY MODELS HAD A RESISTOR ACROSS 2 A.F. TRANSF. PRIMARY. LATER MODELS HAVE A DIFFERENT TRANSF. WITHOUT RESISTOR.
310V
290V
20V
155V
30V
90V
45V
70,000
2.
.15
1.
Model Philco 87
1 AF '26
DET '27
3 RF '26
2 RF '26
1 RF '26
2 AF 45
'45
RECT '80
FRONT
RESISTANCE 35
1-2 3785ω
2-3 157ω
3-4 640ω

MODEL 90, 90-A
(With 2-'45s)
Chassis- Data

PHILCO RADIO & TELEVISION CORP.

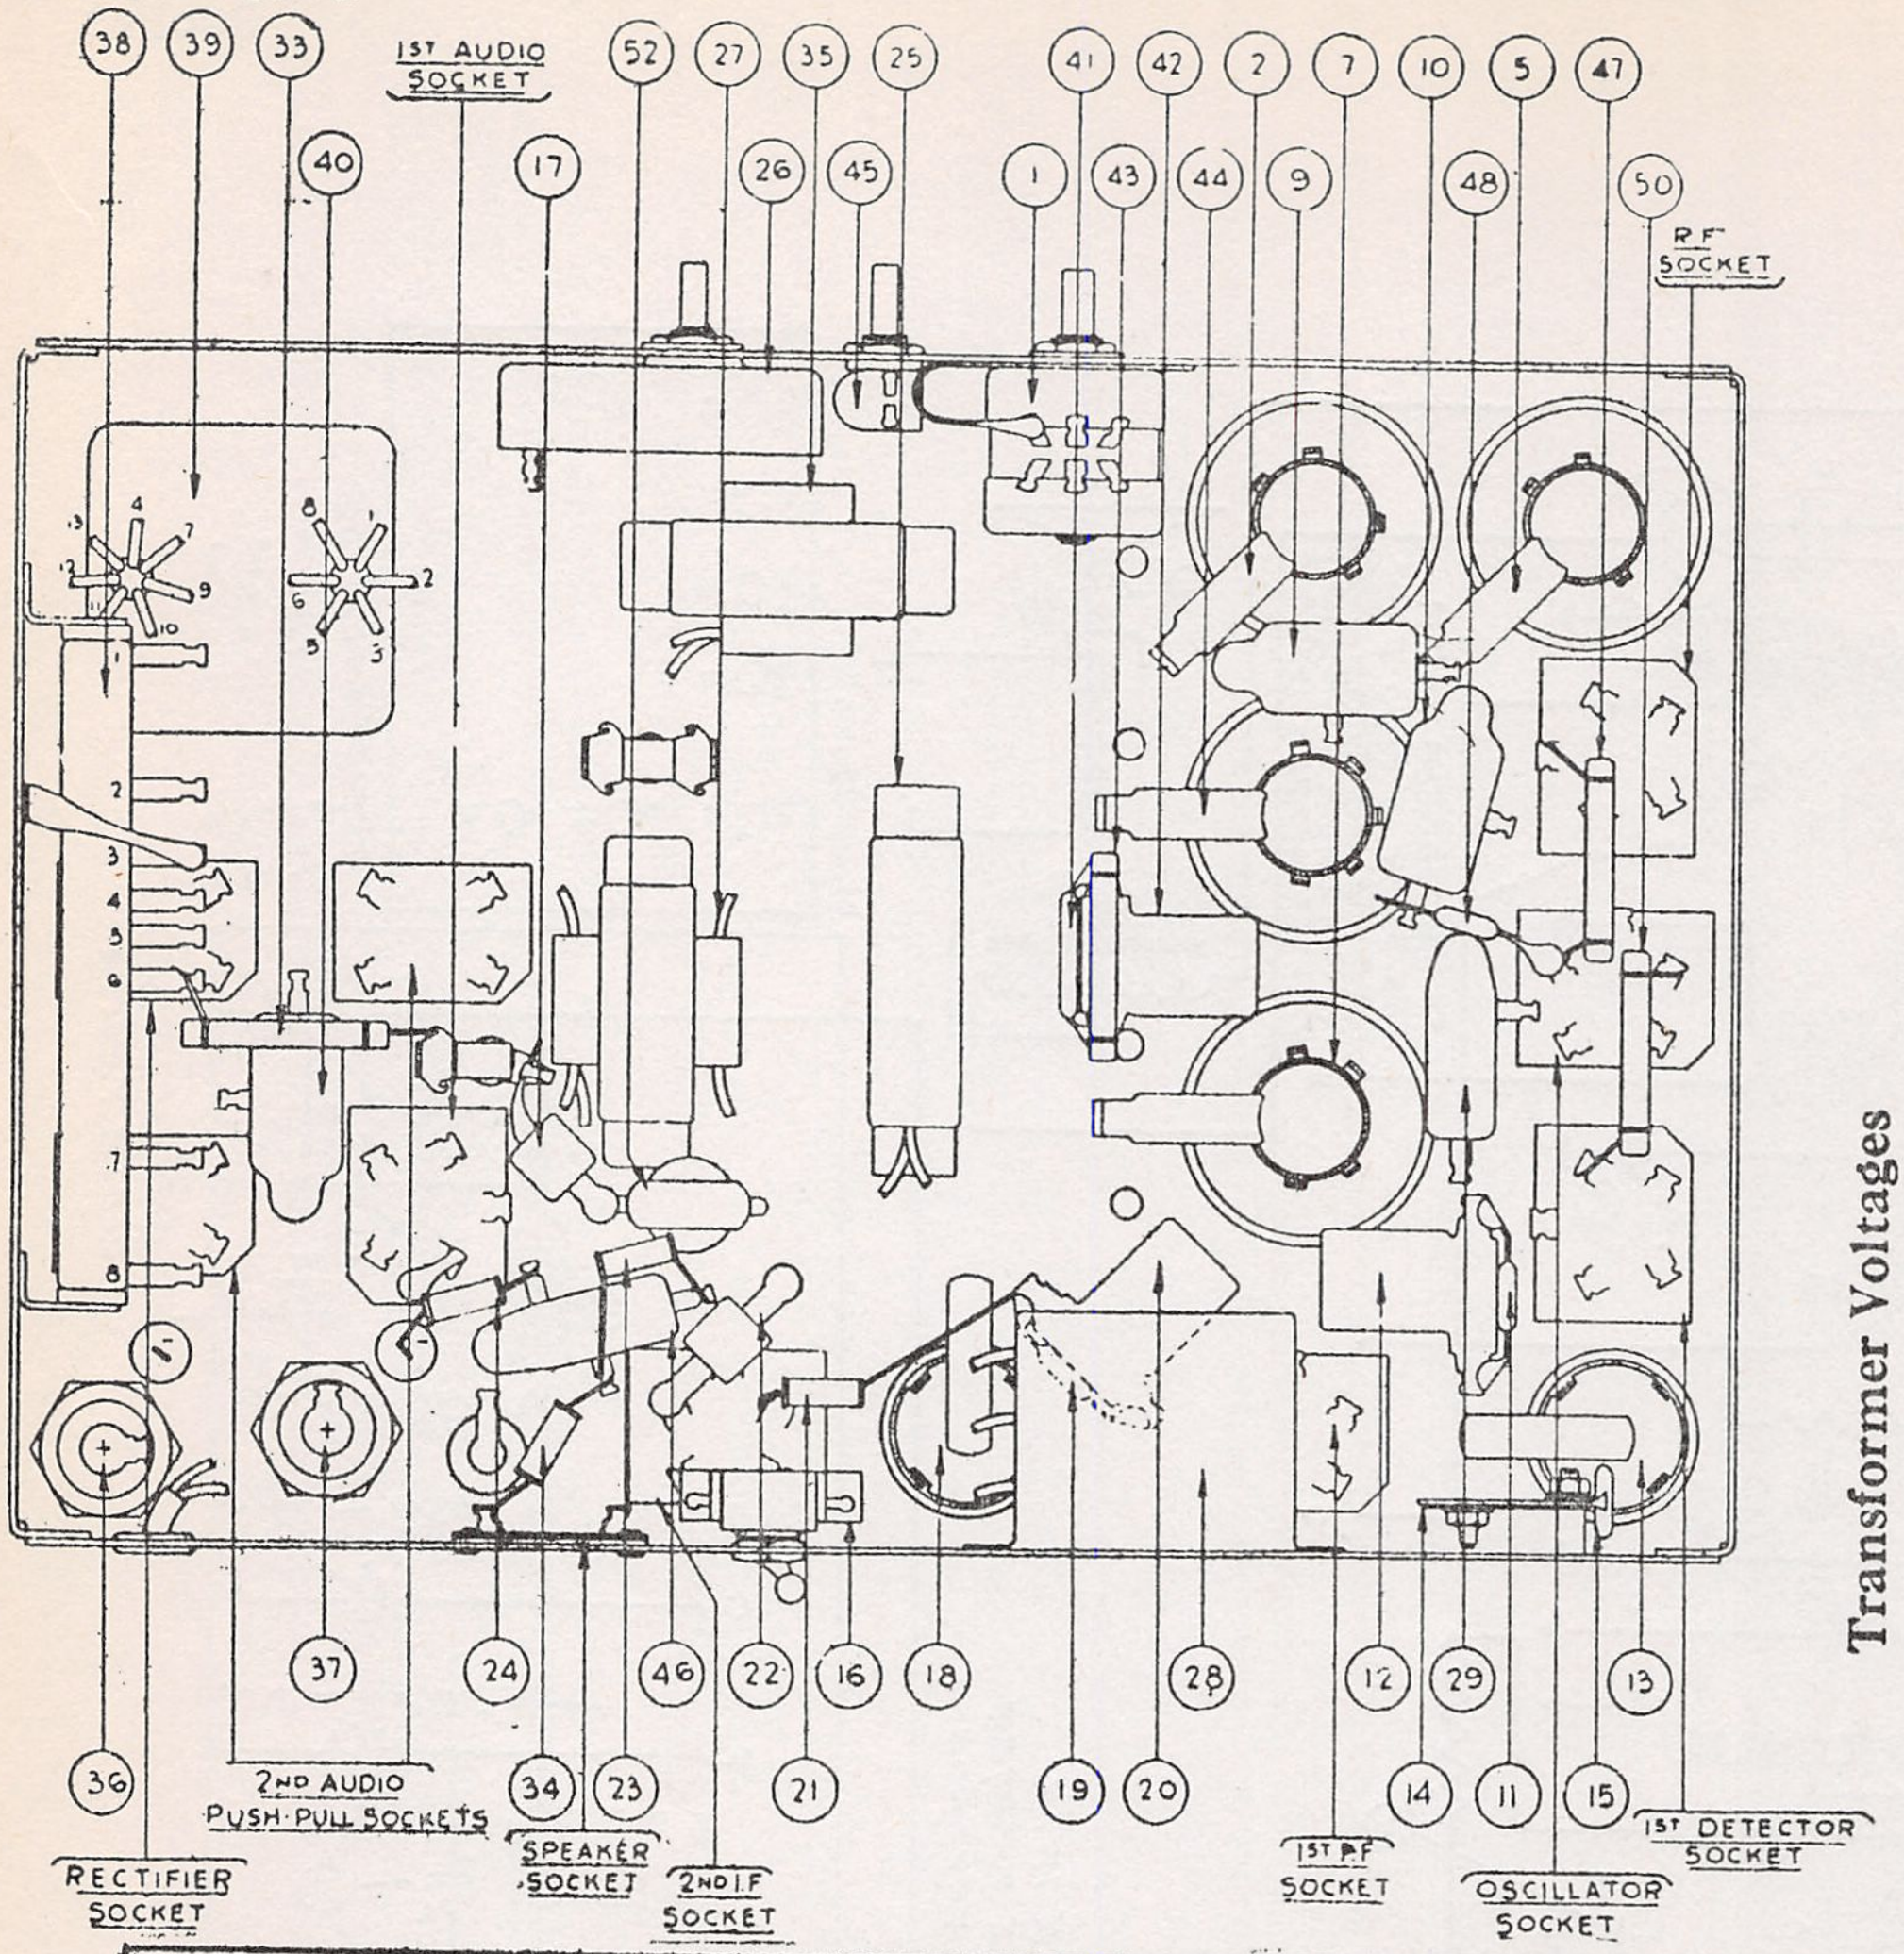
38
39
33
1ST AUDIO SOCKET
40
17
52
27
26
35
45
25
41
1
43
42
44
2
9
7
10
48
5
47
50
R.F. SOCKET
37
24
46
22
16
18
28
12
29
13
36
2ND AUDIO PUSH-PULL SOCKETS
34
23
21
19
20
14
11
15
RECTIFIER SOCKET
SPEAKER SOCKET
2ND I.F. SOCKET
1ST R.F. SOCKET
OSCILLATOR SOCKET
1ST DETECTOR SOCKET

Transformer Voltages

Terminals	A.C. Volts		Color
1—2	105 to 125	Primary	Black (Small Gauge)
3—5	2.5	Heaters of 24 and 27 Tubes	Black (Heavy Gauge)
4	2.5	Center Tap of 3—5	Black with Yellow
6—8	2.5	Filament of 45 Tubes	Dark Green
7	2.5	Center Tap of 6—8	Black with Green
9—10	5.0	Filament of 80 Tube	Light Blue
11—13	650.	Plates of 80 Tube	Yellow
12	...	Center Tap of 11—13	Yellow with Green

No. on Figs.	Capacity	Color
⑨	.09 Double	Black Bakelite Container
⑩	.09 Double	Black Bakelite Container
⑪ ⑮ ⑯ ⑳ (48)	.00011	Blue, Golden Yellow
⑰ ㉒	.000035	Yellow and Green
㉕	.5	Metal Container
㉘	.25 Double (Black wires to Ground) .5 (White wire to Ground)	Metal Container
㉙	.05	Black Bakelite Container
㉖ ㊲	6.	Electrolytic Type
㊱ (25 to 40 cycles)	10.	Electrolytic Type
㊵	.015 Double	Black Bakelite Container
㊶	.0007	White, Golden Yellow
㊻	.001	Green and White

Condenser Data

Resistor Data

No. on Fig.	Terminal	Power (Watts)	Resistance	Color Body—Tip—Dot
㊳	1—2	...	800	(Long Tubular)
	2—3	...	263	
	3—4	...	75	
	5—6	...	370	
	6—7	...	1,800	
	7—8	...	1,430	
㊼	....	1.	13,000	Brown—Orange—Orange
㉑	....	.5	50,000	Green—Brown—Orange
㊸	....	1.	50,000	Green—Brown—Orange
㉝	....	1.	250,000	Red—Yellow—Yellow
㉞ ㉓	....	.5	250,000	Red—Yellow—Yellow
㉔	....	.5	1,000,000	Brown—Black—Green

MODEL 90,90-A
(With 2-'45s)
Schematic
Voltage

PHILCO RADIO & TELEVISION CORP.

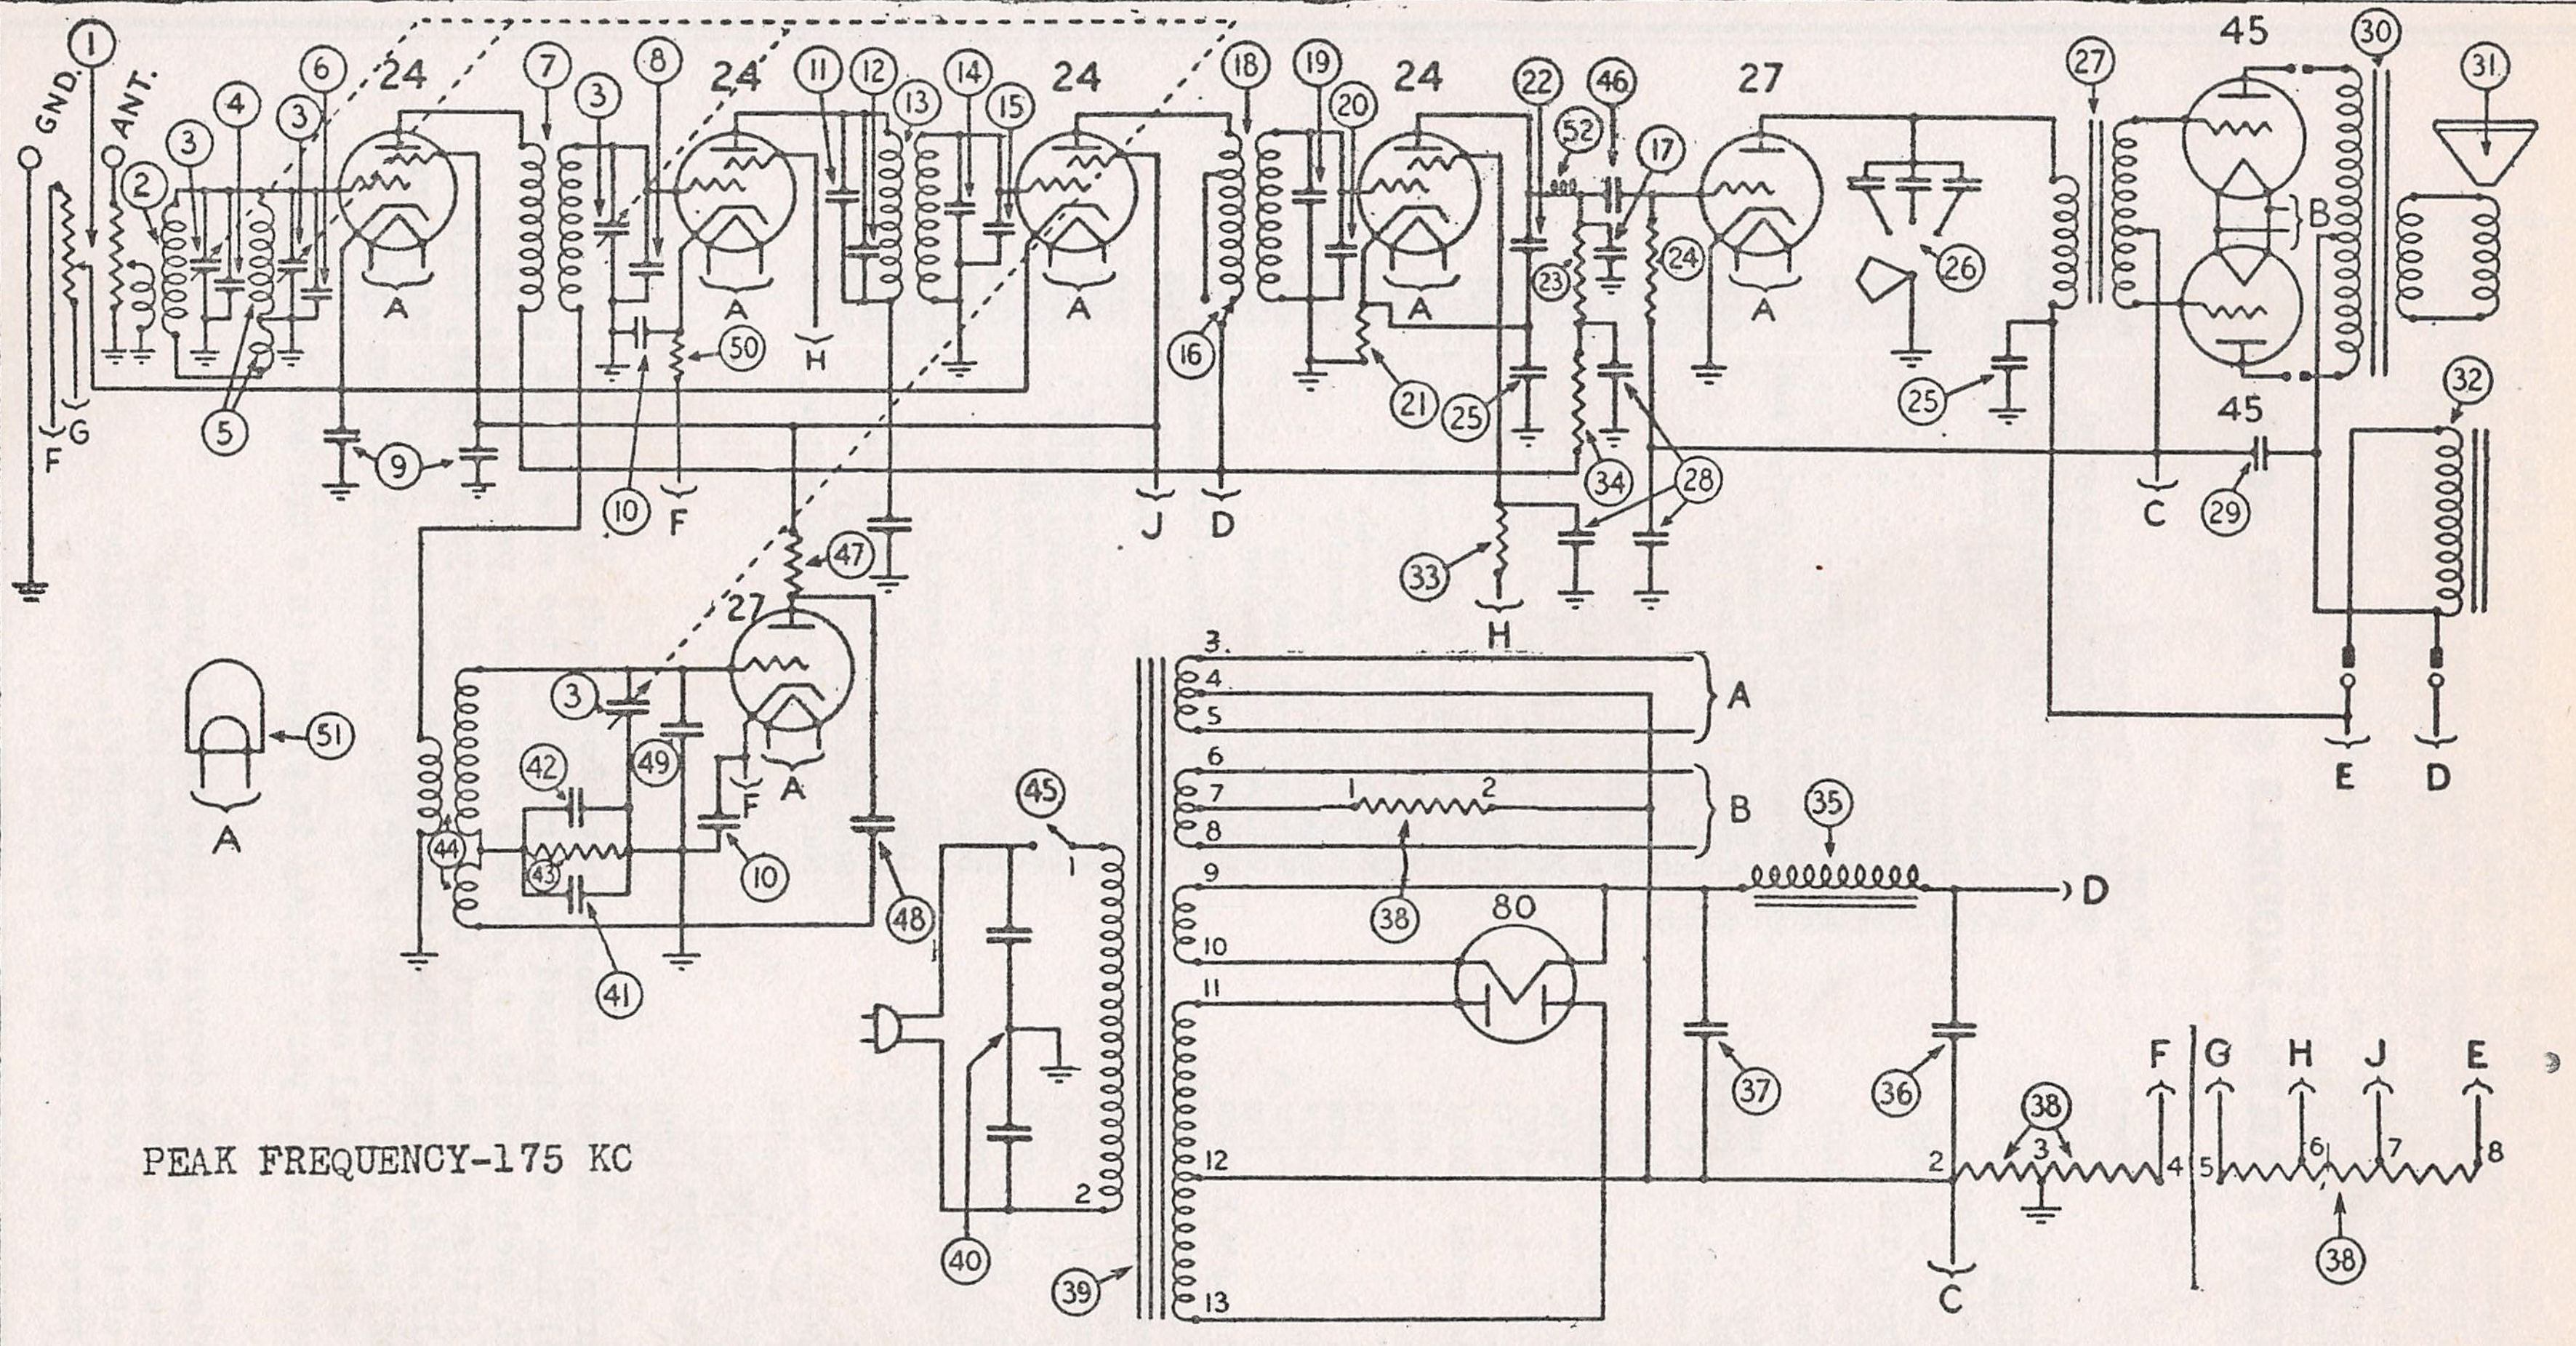
GND.
ANT.
24
24
24
24
27
27
45
45
80
A
B
C
D
E
F
G
H
J
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫ ⑬ ⑭ ⑮ ⑯ ⑰ ⑱ ⑲ ⑳ ㉑ ㉒ ㉓ ㉔ ㉕ ㉖ ㉗ ㉘ ㉙ ㉚ ㉛ ㉜ ㉝ ㉞ ㉟ ㊱ ㊲ ㊳ ㊴ ㊵ ㊶ ㊷ ㊸ ㊹ ㊺ ㊻ ㊼ ㊽ ㊾ ㊿ (51) (52)
PEAK FREQUENCY-175 KC

Table 1—Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Tube		Filament Voltage	Plate Voltage	Grid Voltage	Screen Grid Voltage	Cathode Voltage	Plate Milliamperes
Type	Circuit						
24	1st R. F.	2.1	250	3.3	83	15	3
27	Osc.	2.1	60	1		15	2
24	1st Det.	2.1	250	5.5	23	15	.5
24	1st I. F.	2.1	250	3.8	80	15	4.5
24	2nd Det.	2.1	48	3.7	42	15	3
27	1st Audio	2.1	140	.25	...	10	....
45	Audio	2.2	243	46	...	...	30
45	Audio	2.2	243	46	...	...	30
80	Rect.	4.5	...	...	...	...	. .

All readings taken with antenna disconnected and ground on. Volume Control on full.

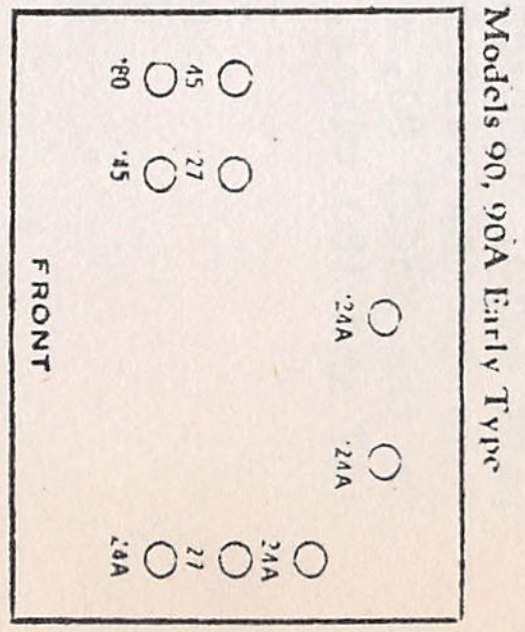
45
'80
27
'45
'24A
'24A
'24A
27
'24A
FRONT

Models 90, 90A Early Type

MODEL 90, 90-A
(With 2-45s)
Parts List

PHILCO RADIO & TELEVISION CORP.

RANGE SWITCH

The Range Switch, No. ⑯ in Fig. 1, is placed in the NORMAL position when the Receiver is shipped. This gives great distance range and is the setting which will be found most satisfactory in practically all locations. In places far from broadcasting stations, however, the Range Switch may be changed to the MAXIMUM position. This will make the Receiver super-sensitive and will give extreme distance range. Do not use the Range Switch in the MAXIMUM position if there are one or more powerful broadcasting stations near you. In any location there will be less noise between stations with the Range Switch in the NORMAL position.

REPLACEMENT PARTS—MODELS 90 AND 90-A

No. on Figs. 3 and 4	Description	Part No.
①	Volume Control	5039
②	1st R. F. Transformer	03013
③	Gang Condenser—50 to 60 cycles	03001
	Gang Condenser—25 to 40 cycles	03078
④	Compensating Condenser (Part of Tuning Condenser Assembly)	
⑤	2nd R. F. Transformer	03014
⑥	Compensating Condenser (Part of Tuning Condenser Assembly)	
⑦	1st Det. Transformer	03015
⑧	Compensating Condenser (Part of Tuning Condenser Assembly)	
⑨	Condenser .09 M. F. (Double)	4989-C
⑩	Condenser .09 M. F. (Double)	4989-B
⑪ ⑫	Fixed Condenser .00011 Compensating Condenser } Assembled	3772-C
⑬	1st I. F. Transformer	03009
⑭ ⑮	Compensating Condenser Fixed Condenser .00011 } Assembled	03051
⑯	Normal Maximum Switch	3116
⑰	Condenser (.000035 mf)	4990
⑱	2nd I. F. Transformer	03143
⑲ ⑳	Compensating Condenser Fixed Condenser .00011 } Assembled	03051
㉑	Resistor—50,000 Ohms	4518
㉒	Condenser .00035	4990
㉓	Resistor—250,000 Ohms	4410
㉔	Resistor—1,000,000 Ohms	4409
㉕	Condenser .5 M. F. (Double)	03024
㉖	Tone Control	4037-A
㉗	1st Audio Transformer	4952
㉘	Condensers 2—.25 M. F. and 1—.5 M. F.	03029
㉙	Condenser .05 M. F.	3615-G
㉚	Output Transformer:	
	H_2 (For Large Cone Assembly)	2848
	K_2 (For Small Cone Assembly)	2766
㉛	Voice Coil Assembly and Cone:	
	H_2 (Large Cone)	02997
	K_2 (Small Cone)	02996
㉜	Speaker Field—Assembled with Pot and Frame (H_2)	02986
	Speaker Field—Assembled with Pot and Frame (K_2)	02985
㉝	Resistor—250,000 Ohms	3768
㉞	Resistor—250,000 Ohms	4410
㉟	Filter Choke	4951
㊱	Condenser 6 M. F. Electrolytic Type (50-60 cycles)	4916
	Condenser 10 M. F. Electrolytic Type (25-40 cycles)	5142
㊲	Condenser 6 M. F. Electrolytic Type (25-40) and (50-60) cycles	4916
㊳	B. C. Resistor	4953
㊴	Power Transformer (50 to 60 cycles)	4938
	Power Transformer (25 to 40 cycles)	4939
㊵	Condenser .015 M. F. (Double)	3793-E
㊶ ㊷	Condenser .0007 M. F. Compensating Condenser } Assembled	03050
㊸	Resistor—50,000 Ohms	4237
㊹	Oscillator Coil	03016
㊺	On-Off Switch	4095
㊻	Condenser .001 M. F.	5215
㊼	Resistor—13,000 Ohms	3766
㊽	Condenser .00011 M. F.	4519
㊾	Compensating Condenser (Part of Tuning Condenser Assembly)	
㊿	Resistor—5,000 Ohms	3526
(51)	Pilot Bulb	3463
(52)	R. F. Choke	03086
	Line Cord and Plug	L-943
	Tube Shield	03002
	Knob (large) Dial Control	03063
	Spring (Dial Knobs)	4147
	Knobs (small) Tone and Volume Control	4959-A
	Knob (switch)	4290-A
	Grid Clip	4897
	Speaker Plug and Cable	L-1124-A
	Grommet for R. F. Transformer Shield	3747
	Rectifier Tube Socket	5026
	Four Prong Socket Assembly	4955
	Five Prong Socket Assembly	4956
	Speaker Socket	4957
	Volume Control Insulator	4092
	Volume Control Insulator	4286
	Fahnstock Clip	L-1126
	Mica for Gang Condenser Compensating Condenser	3473
	Insulating Washer for Compensating Condenser	3500
	Tuning Condenser Mounting Washer	3914
	Tuning Condenser Mounting Washer	3915
	Tuning Condenser Mounting Sleeve	3916
	Spring for Tuning Condenser	4255
	Bezel	5009
	Complete Drive Bracket	03011
	Disc Dial Assembly	03031
	Knob Spring—Volume, Tone, Dial	5262
	Steel Washer (Chassis Mtg.)	5058
	Nut—Volume, Tone Control Switch	W-434

Several changes in wiring and part numbers have been made in the Model 90. The filter choke part 4951 has been changed to part 4819, the same choke as used in Model 21. On the 50-60 cycle models, a .09 mfd condenser, part 4989-J, is connected across the filter choke, part 4819. On the 25 cycle models, this condenser should be .18 mfd, part 4989-H ungrounded. The two 240,000 resistors part 4410, numbers (32) and (35) sjould be of the Continental Carbon type. This is the resistor without metal ends.
In the Model 90, a metal shield, part 03646, is placed in a bracket between the '47 and '80 tubes.

If electrolysis occurs on the insulation of the wire between the filter choke and one of the electrolytic condensers, unsolder the wire and cover with spaghetti.

Condenser Bank
Connections
Condenser
Color Code

PHILCO RADIO & TELEVISION CORP.

Internal Connections of Condenser Banks

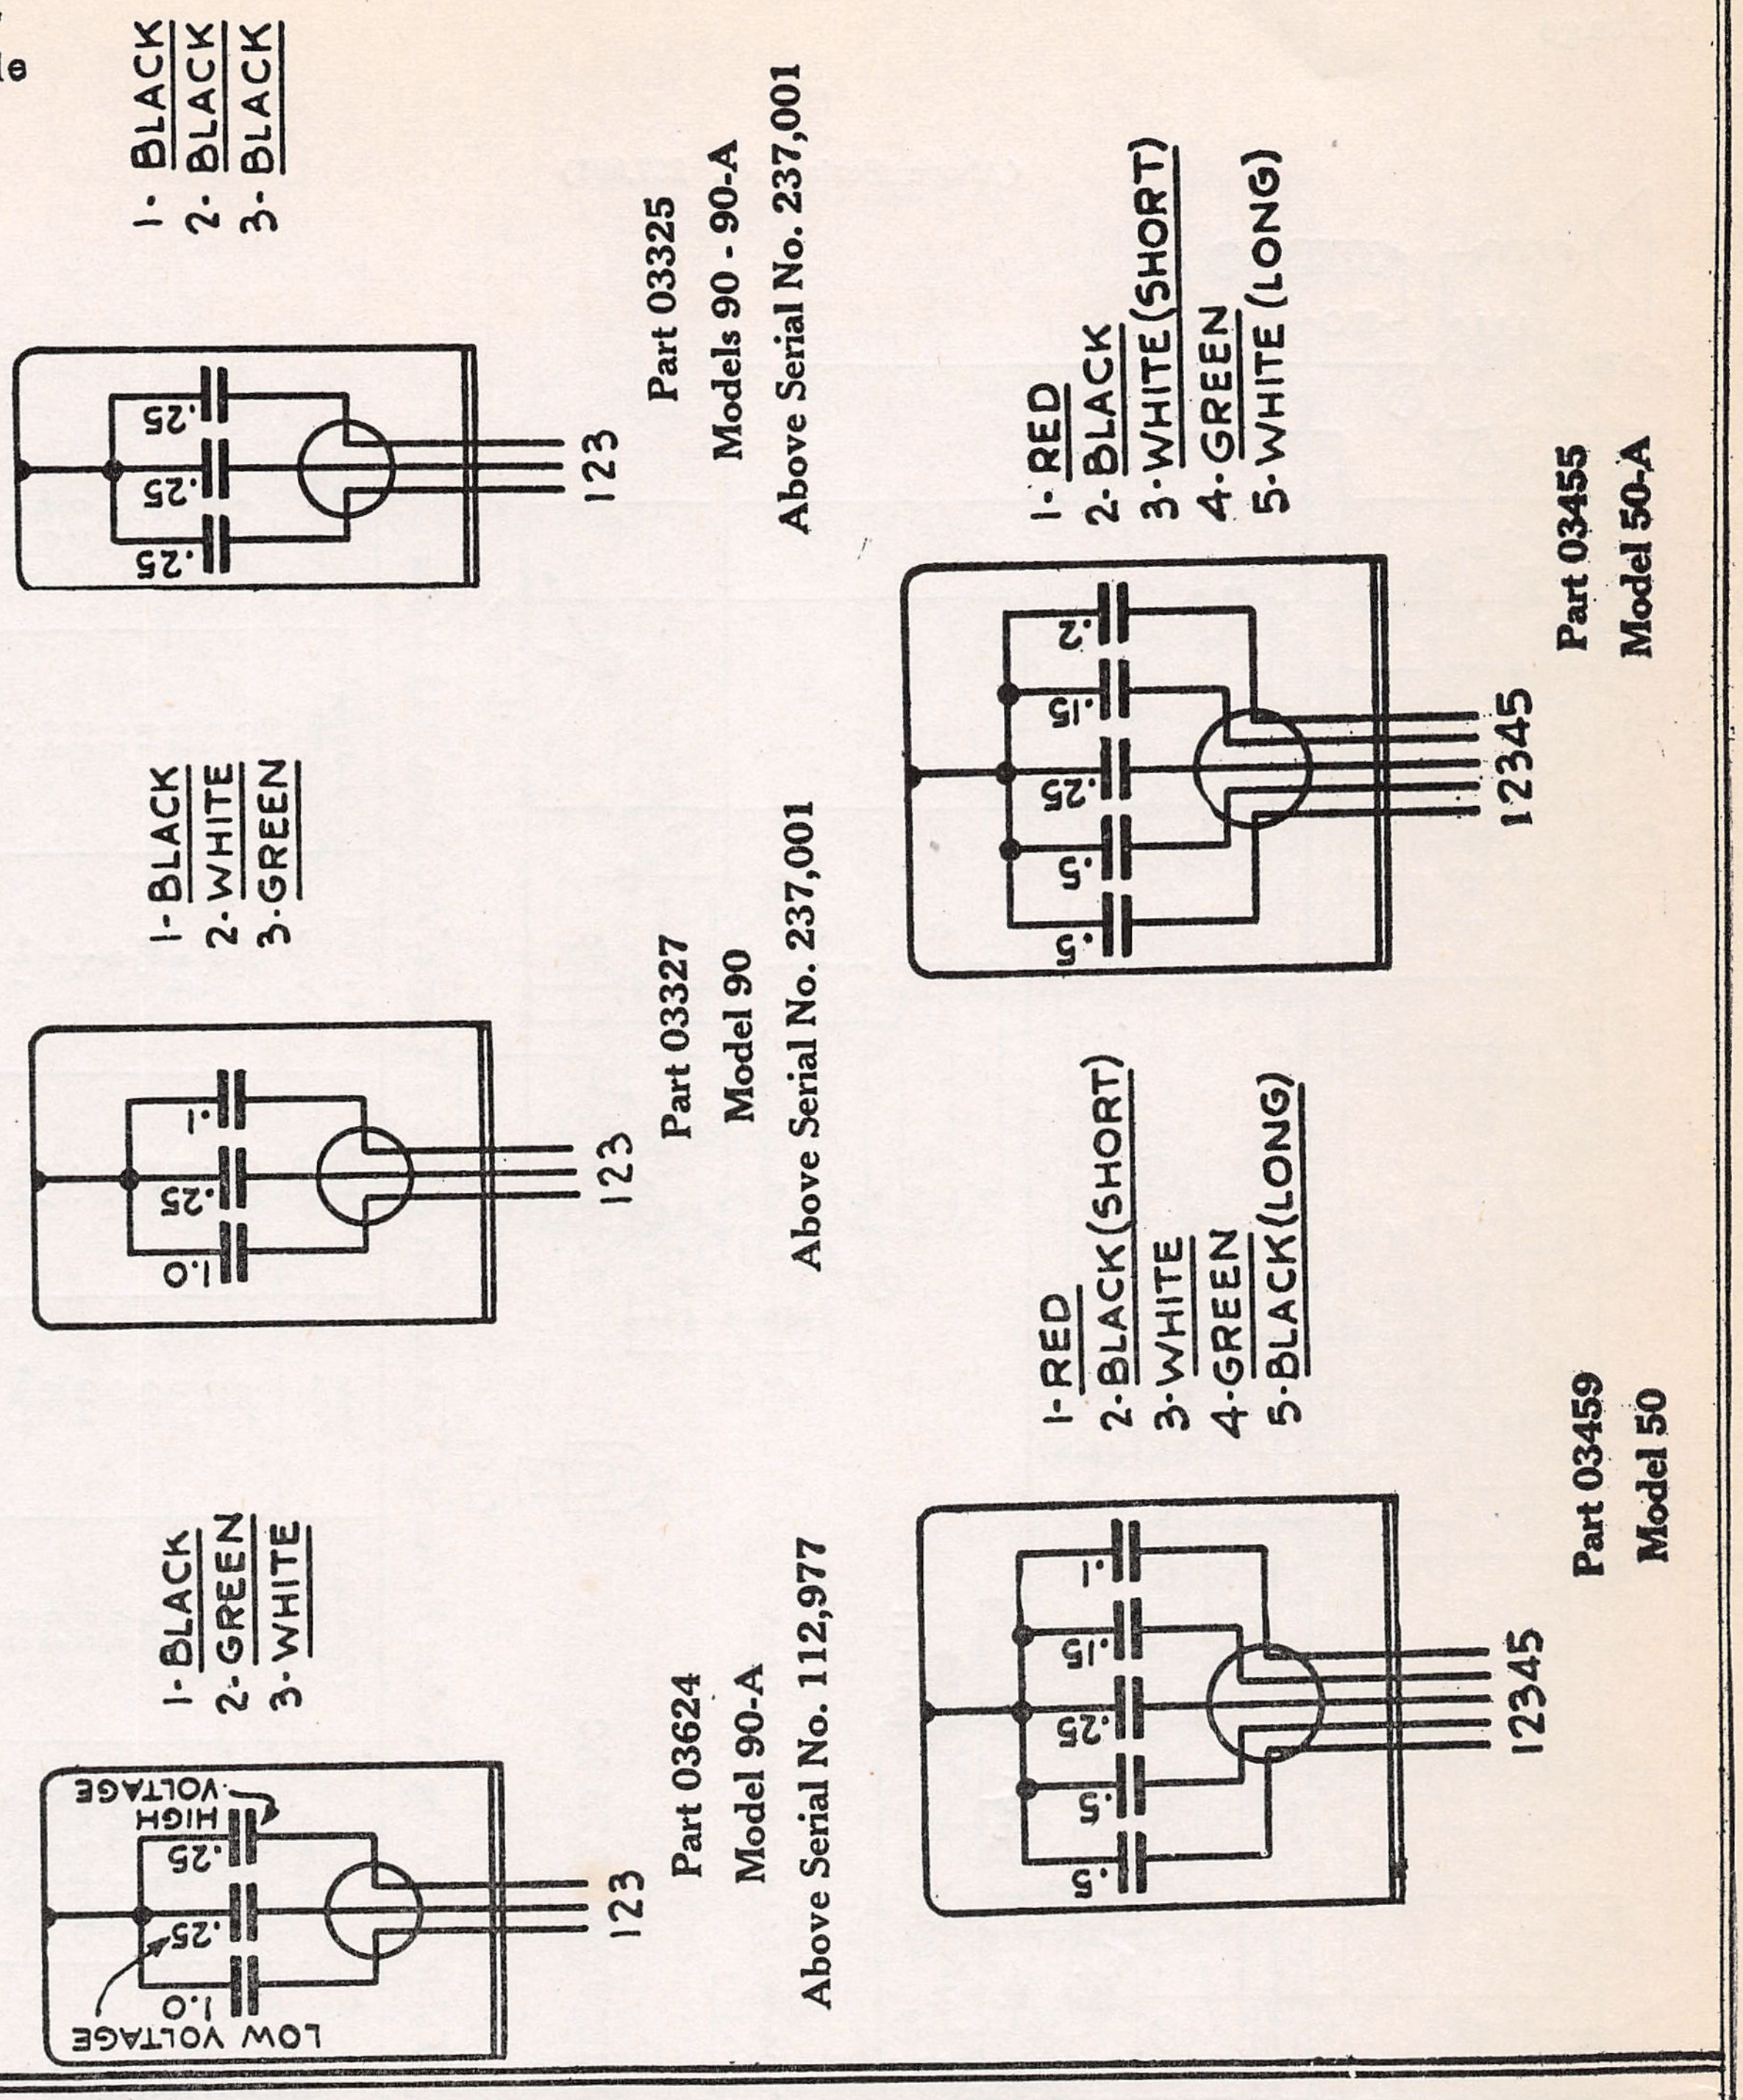
1- BLACK
2- BLACK
3- BLACK
.25
.25
.25
123
Part 03325
Models 90 - 90-A
Above Serial No. 237,001
1- BLACK
2- WHITE
3- GREEN
.1
.25
1.0
123
Part 03327
Model 90
Above Serial No. 237,001
1- BLACK
2- GREEN
3- WHITE
HIGH VOLTAGE
LOW VOLTAGE
.25
.25
1.0
123
Part 03624
Model 90-A
Above Serial No. 112,977
1- RED
2- BLACK
3- WHITE (SHORT)
4- GREEN
5- WHITE (LONG)
.2
.15
.25
.5
.5
12345
Part 03455
Model 50-A
1- RED
2- BLACK (SHORT)
3- WHITE
4- GREEN
5- BLACK (LONG)
.1
.15
.25
.5
.5
12345
Part 03459
Model 50

CONDENSER DATA

COLOR CODING USED ON ALL PHILCO RECEIVERS

PART NO.	CAPACITY MF.	COLOR	PART NO.	CAPACITY MF.	COLOR
3082	.00025	Yellow	4519	.00011	Blue and Golden Yellow
3774	.00005	White	4520	.0007	White and Golden Yellow
3910	.0005	Green	4587*	.00005	Light Blue and White
4059	.002	Light Blue	5120	.00041	Yellow & Orange

*Note: Part No. 4587 is held to closer tolerance limits than Part No. 3774. Do not substitute either of these condensers, use the part numbers given.

MODEL 90, 90-A
(With 1-'47)
Schematic
Voltage

PHILCO RADIO & TELEVISION CORP.

(Above Serial No. 237,001)

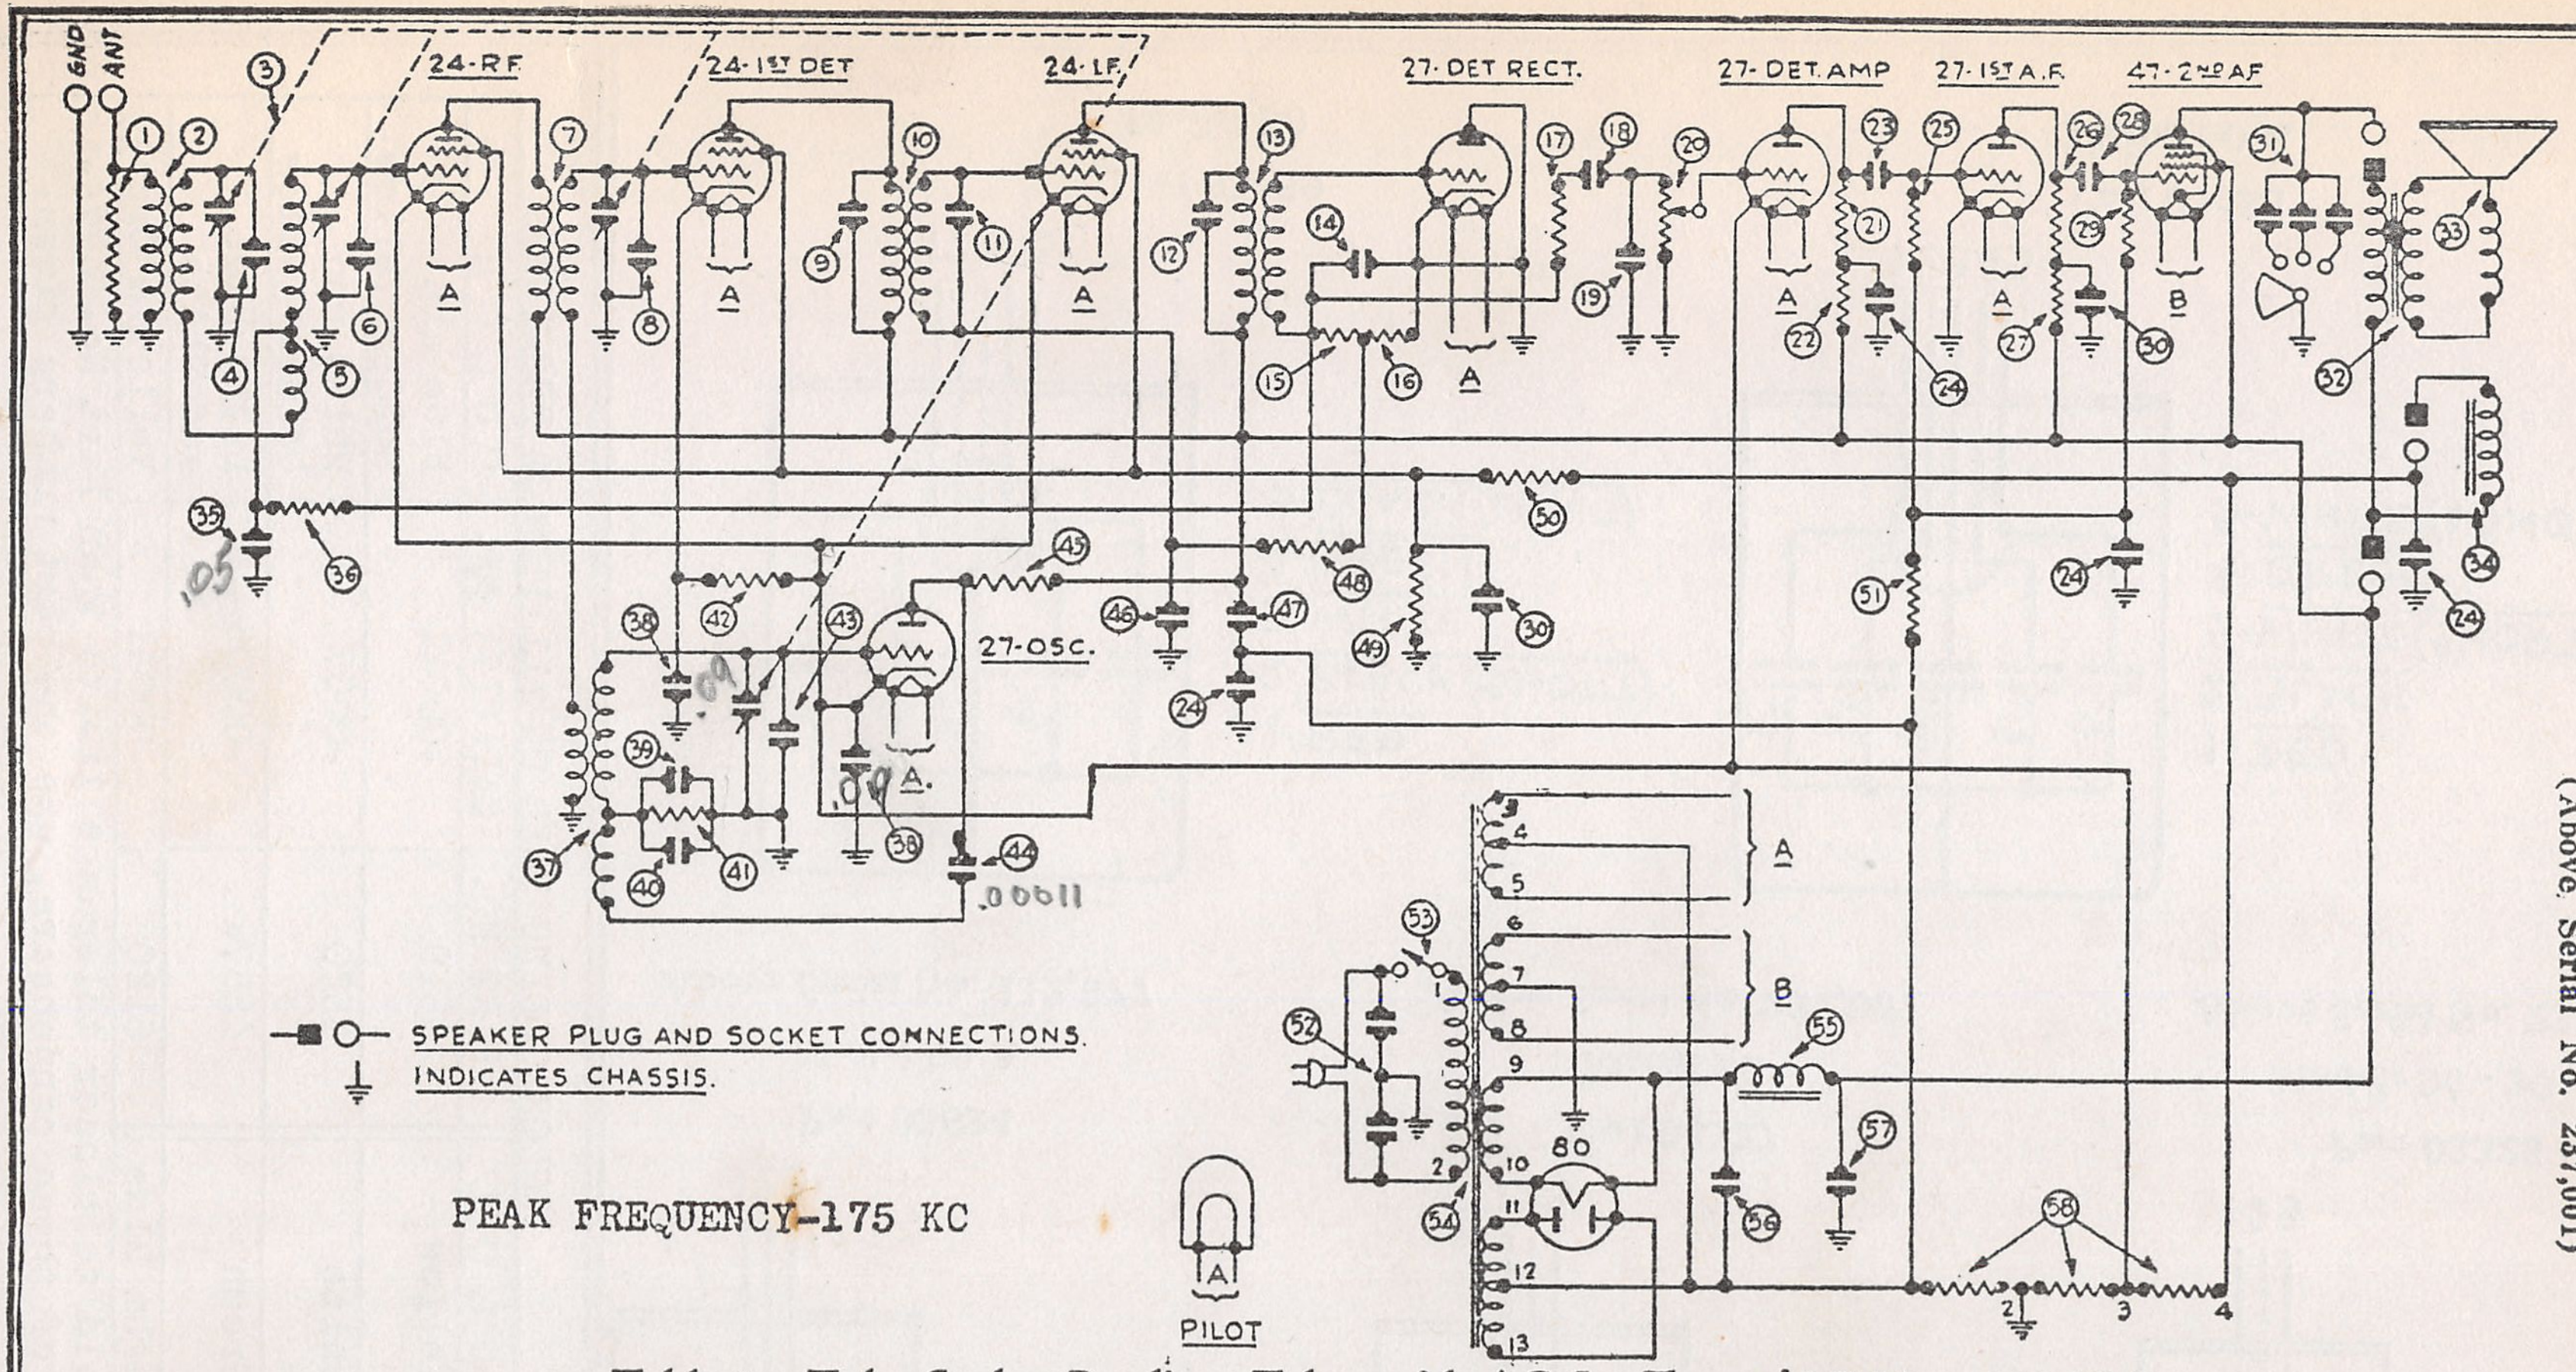
GND
ANT
24-RF
24-1ST DET
24-I.F.
27-DET RECT.
27-DET. AMP
27-1ST A.F.
47-2ND AF
27-OSC.
80
PILOT
A
B
.05
.00611

—■ ○— SPEAKER PLUG AND SOCKET CONNECTIONS.
⏚ INDICATES CHASSIS.

PEAK FREQUENCY—175 KC

Table 1—Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milliamperes
Type	Circuit						
24	R. F.	2.0	255	60	.25	20	2.4
27	Osc.	2.0	65	...	.6	20	3.6
24	1st Det.	2.0	250	64	6.0	24	.25
24	I. F.	2.0	270	76	.25	18	.1
27	Det. Rect.	2.0	0	...	0	17	0
27	Det. Amp.	2.0	140	...	.4	18	2.0
27	1st A. F.	2.0	45	...	.4	20	1.8
47	Output	2.0	220*	240*	1.0*	..	32.*
80	Rectifier	4.5					

All readings taken with antenna disconnected and ground on. Volume Control on full.
*These readings must be taken from the underside of the chassis using test prods and leads unless the set checker is specially equipped for testing pendode tubes.

Models 90, 90A, 90E Later Type

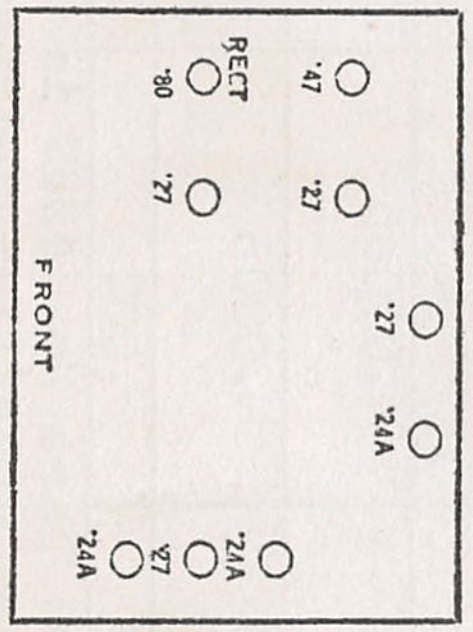
'47
'27
'27
'24A
RECT
'80
'27
'24A
'27
'24A
FRONT

PHILCO RADIO & TELEVISION CORP.

MODEL 90,90-A
(With 1-'47)
Chassis-Data

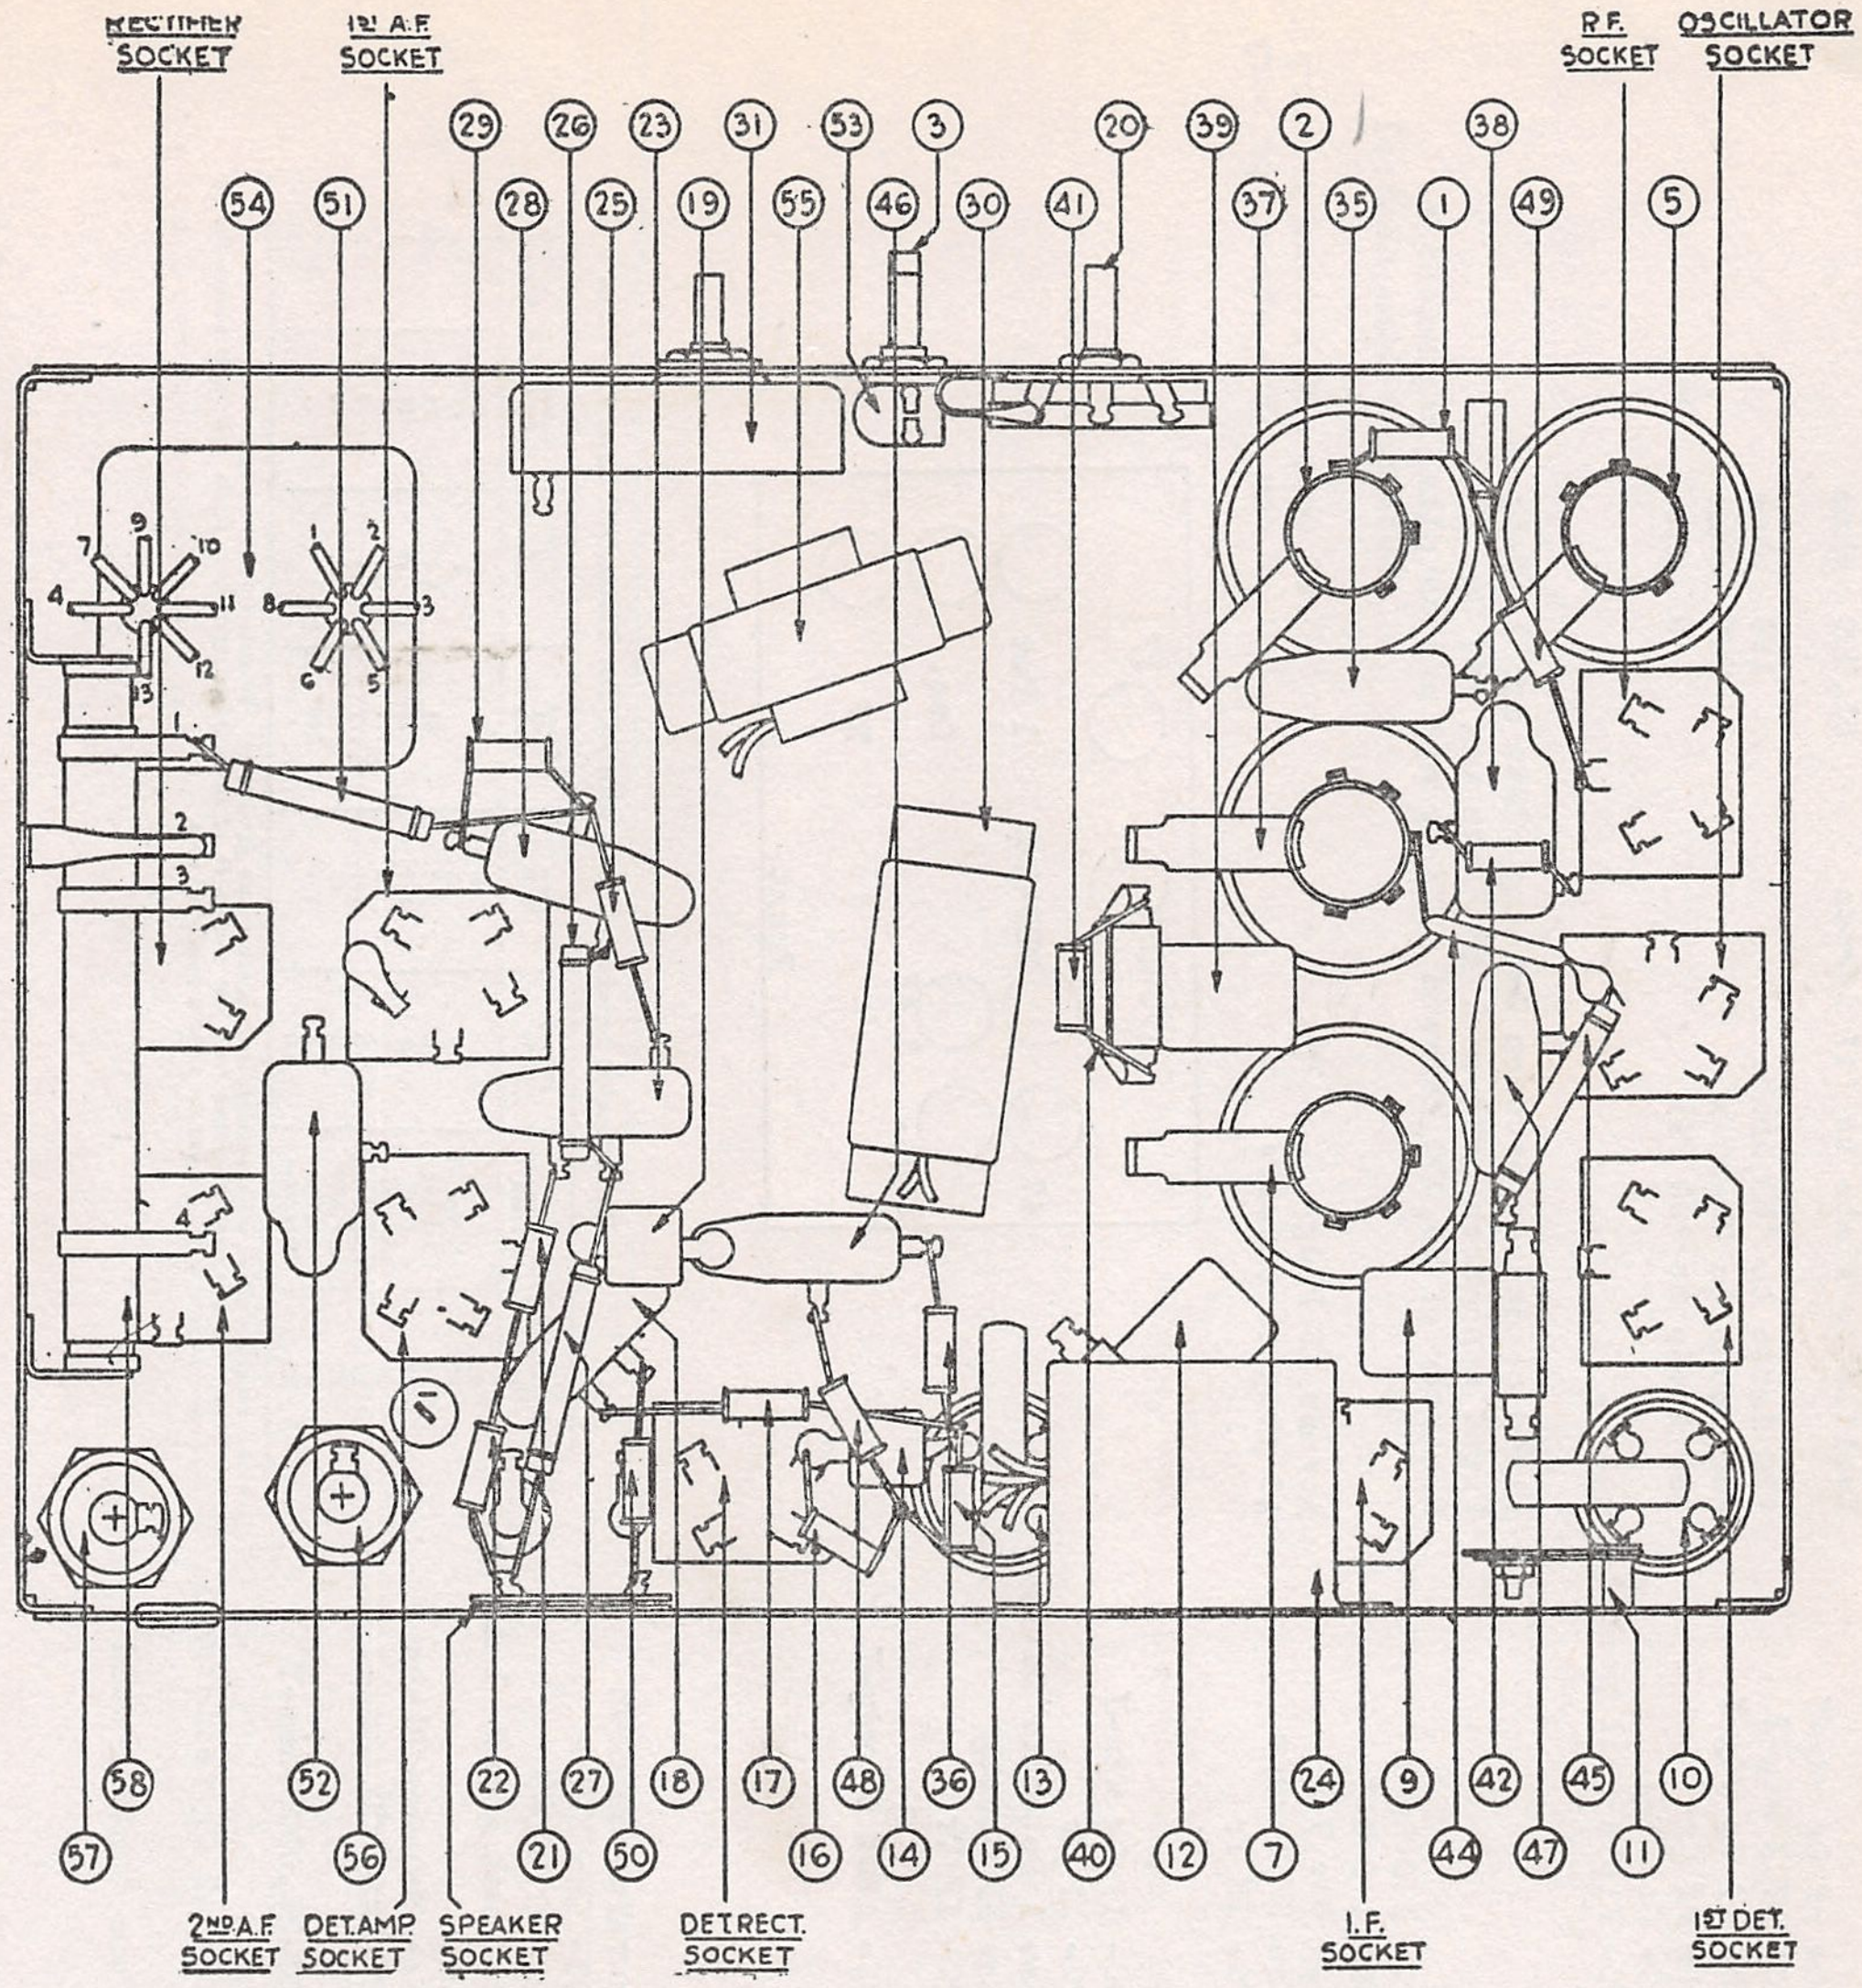
RECTIFIER SOCKET
1st A.F. SOCKET
R.F. SOCKET
OSCILLATOR SOCKET
29 26 23 31 53 3 20 39 2 38
54 51 28 25 19 55 46 30 41 37 35 1 49 5
58 52 22 27 18 17 48 36 13 24 9 42 45 10
57 56 21 50 16 14 15 40 12 7 44 47 11
2nd A.F. SOCKET
DET.AMP. SOCKET
SPEAKER SOCKET
DET.RECT. SOCKET
I.F. SOCKET
1st DET. SOCKET

Table 2—Power Transformer Voltages

Terminals	A.C. Volts		Color
1—2	105 to 125	Primary	White
3—5	2.5	Heaters of 24 and 27 Tubes	Black
4	2.5	Center Tap of 3—5	Black with Yellow
6—8	2.5	Filament of 47 Tube	Dark Green
7	2.5	Center Tap of 6—8	Black with Green
9—10	5.0	Filament of 80 Tube	Light Blue
11—13	650.	Plates of 80 Tube	Yellow
12	...	Center Tap of 11—13	Yellow with Green

Table 3—Resistor Data

No. on Figs. 1 and 2	Terminal	Power (Watts)	Resistance (Ohms)	Color		
				Body	Tip	Dot
(55)	1—2 2—3 3—4		180 60 3,500	(Long Tubular)		
(42)		1.	5,000	Green	Black	Red
①		.5	10,000	Brown	Black	Orange
㉖ ㉗		1.0	25,000	Red	Green	Orange
(50)		.5	25,000	Red	Green	Orange
⑮ ⑯ ㉑ (41)		.5	51,000	Green	Brown	Orange
(45)		1.	51,000	Green	Brown	Orange
㉒ (49)		.5	70,000	Violet	Black	Orange
⑰		.5	99,000	White	White	Orange
㉕ ㉙		.5	240,000	Red	Yellow	Yellow
(51)		1.	240,000	Red	Yellow	Yellow
㊱ (48)		.5	490,000	Yellow	White	Yellow

Table 4—Condenser Data

No. on Figs. 1 and 2	Capacity	Color
⑭ (44)	.00011	Blue, Golden Yellow
⑲	.00025	Yellow
⑱ ㉓ ㉘	.01	Black Bakelite Container
(52)	.015	Black Bakelite Container
㉟ (46) (47)	.05	Black Bakelite Container
㊳	.09	Black Bakelite Container
㉔	.1-.13-.25-1.	Metal Container
㉚	.25-1.	Metal Container
(56) (57)	(50-60 Cycles) 6.	Electrolytic Type
	(25-40 Cycles) 10.	Electrolytic Type

MODEL 90,90-A
(With 1-47)
Test Data

All tubes out of sockets and AC plug disconnected from power supply.
Speaker field and output transformer disconnected.

From Chassis To	Correct	Incorrect
Aerial	10.7 ohms	Fixed resistor across antenna coil
RF Control Grid to First Selector Condenser Stator	13.4 ohms	
RF Control Grid to Chassis	592,000 ohms	BC- rf Cg wdg-Y BC- AVCX wdg-Y BC- if Cg wdg-Y TC- rf Cg-Y
RF Cathode	60 ohms	BC- Osc K-Y
RF Screen Grid	20,280 ohms	BC- Field coil pocket-Y
RF Plate to 80 Fil	168.7 ohms	
RF Plate to '47 Screen	18.7 ohms	
1 Detector Control Grid	7.9 ohms	TC- 1 D Cg-Y
1 Detector Cathode	5,060 ohms	BC- 1 D K-Y BC- Osc K-Y
1 Detector Screen Grid	20,280 ohms	See RF Screen
1 Detector Plate to '80 Fil	218 ohms	TC- IF Tr
1 Detector Plate to '47 Screen	68 ohms	
IF Control Grid	541,068 ohms	BC- IF Cg wdg-Y TC- IF Tr
IF Cathode	60 ohms	See 1 Detector Cathode
IF Screen Grid	20,280 ohms	See RF Screen
IF Plate to '47 Screen	70 ohms	TC- IF Tr
AVCX Control Grid	110,080 ohms	BC- AVCX Cg wdg-Y
AVCX Cathode	0 ohm	
AVCX Plate	0 ohm	
AVCX Cathode to Plate	0 ohm	
Det-Amp Control Grid (V.C.Min)	0 ohm	
DET-Amp Control Grid (V.C.Max)	high resistance - exact value unknown	
Det-Amp Cathode	60 ohms	BC- Osc K-Y
Det-Amp Plate to '47 Screen	121,000 ohms	BC-70,000-Y BLC-Det Amp-P- 1 AF Cg
1 AF Control Grid	480,180 ohms	See Det-Amp Plate BC-240,000 ohms-Y
1 AF Cathode	0 ohms	
1 AF Plate to '47 Screen	50,000 ohms	BC-25,000 ohms-Y
'47 Control Grid	480,000 ohms	BC-'47 Cg resistor-Y
'47 Screen Grid to '80 Fil	0 ohm	
'47 Plate to Chassis	0 ohm	Tone control cond
Output Transformer Primary only	462 ohms	
Output Transformer Secondary only	0.106 ohm	

From Chassis To	Correct	Incorrect
Speaker field only	3,200 ohms	
Oscillator Control Grid	51,006.5ohms	
Oscillator Winding only	6.5ohms	Includes section used in plate circuit
Oscillator Cathode	60 ohms	BC-Osc K-Y
Oscillator Plate to '47 Screen	51,000 ohms	
'80 Anode to '80 Anode	199 ohms	
'80 Anode to Chassis	280 ohms	
'80 Anode to '80 Fil	0 ohm	FC

Note**

Fixed condenser between Det-Amp Plate and 1 AF-Cg
Fixed condenser between 1 AF Plate and '47 Cg
Resistor of 99,000 between AVCX Cg wdg and coupling condenser to Det-Amp volume control

Across AC Plug	3.26 ohms	BC across primary
AC plug to chassis	0 ohm	BC- across primary

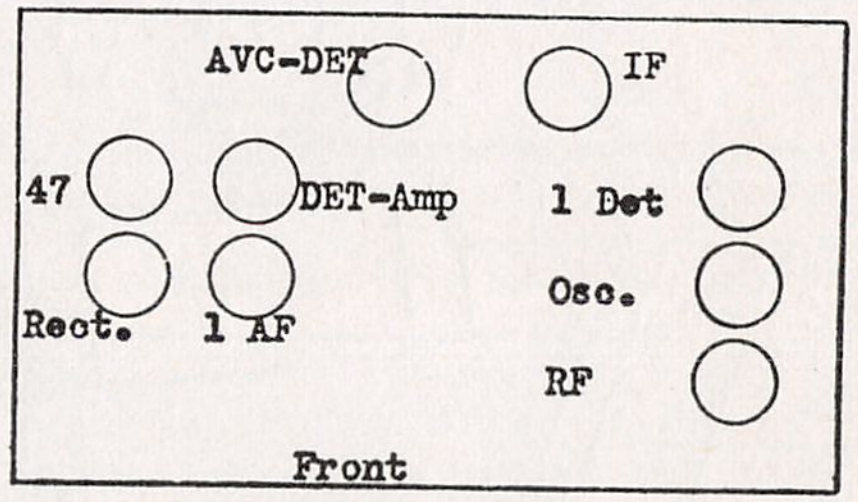

–Tube Socket Readings Taken with AC Set Tester, AC Line, 115 Volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milliamperes
Type	Circuit						
24	R. F.	2.0	255	60	.25	20	2.4
27	Osc.	2.0	65	...	.6	20	3.6
24	1st Det.	2.0	250	64	6.0	24	.25
24	I. F.	2.0	270	76	.25	18	.4
27	Det. Rect.	2.0	0	...	0	17	0
27	Det. Amp.	2.0	140	...	.4	18	2.0
27	1st A. F.	2.0	45	...	.4	20	1.8
47	Output	2.0	220*	240*	1.0*	..	32.*
80	Rectifier	4.5					

All readings taken with antenna disconnected and ground on. Volume Control on full.
*These readings must be taken from the underside of the chassis using test prods and leads unless the set checker is specially equipped for testing pendode tubes.

MODEL 90,90-A
(With 1-'47)
Parts List

PHILCO RADIO & TELEVISION CORP.

ADJUSTMENT OF MODELS 90 and 90-A

These Receivers are accurately adjusted at the Factory prior to their shipment. Under no circumstances are the adjusting condensers to be changed in the field. This alignment requires special oscillator equipment, which all Philco Distributors have. If for any reason the Receiver needs adjustment it must be returned to the Distributor's Service Department.

REPLACEMENT PARTS—MODELS 90 and 90-A RECEIVERS

(Above Serial No. 237,001)

No. on Figs. 3 and 4	Description	Part No.
①	Resistor (10,000 ohms)	4412
②	First R. F. Transformer	03360
③	Gang Condenser (50-60 cycles)	03001
	Gang Condenser (25-40 cycles)	03078
④	Compensating Condenser (part of gang condenser assembly)	
⑤	Second R. F. Transformer	03014
⑥	Compensating Condenser (part of gang condenser assembly)	
⑦	First Detector Transformer	03015
⑧	Compensating Condenser (part of gang condenser assembly)	
⑨	Compensating Condenser (First I. F. Primary)	Changed to 040006 ~~03315~~
⑩	First I. F. Transformer	03009
⑪	Compensating Condenser (First I. F. Secondary)	03315
⑫	Compensating Condenser (Second I. F. Primary)	03317
⑬	Second I. F. Transformer	03345
⑭	Condenser (110 mmf.)	4519
⑮	Resistor (51,000 ohms)	4518
⑯	Resistor (51,000 ohms)	4518
⑰	Resistor (99,000 ohms)	4411
⑱	By-Pass Condenser (.01 mfd.)	3903-M
⑲	Condenser (.00025 mfd.)	3082
⑳	Volume Control	5366
㉑	Resistor (51,000 ohms)	4518
㉒	Resistor (70,000 ohms)	5385
㉓	By-Pass Condenser (.01 mfd.)	3903-M
㉔	Condenser (1-.1 mfd., 1-.13 mfd., 2-.25 mfd.)	03325
㉕	Resistor (240,000 ohms)	4410
㉖	Resistor (25,000 ohms)	3656
㉗	Resistor (25,000 ohms)	3656
㉘	By-Pass Condenser (.01 mfd.)	3903-P
㉙	Resistor (240,000 ohms)	4410
㉚	Condenser (.25 mfd., 1 mfd.)	03327
㉛	Tone Control	4037-A
㉜	Output Transformer	2673
㉝	Voice Coil Assembly and Cone:	
	H_2 (Large Cone)	02997
	K_2 (Small Cone)	02996
㉞	Speaker Field (Assembled with pot and frame)	
㉟	By-Pass Condenser (.05 mfd.)	3615-W
㊱	Resistor (490,000 ohms)	4517
㊲	Oscillator Coil	03016
㊳	By-Pass Condenser (.09 mfd.) double	4989-G
㊴ ㊵	Compensating Condenser Condenser (.0007 mfd.)	Assembled 03050
㊶	Resistor (51,000 ohms)	4518
㊷	Resistor (5,000 ohms)	5310
㊸	Compensating Condenser (part of tuning condenser assembly)	
㊹	Condenser (110 mmf.)	4519
㊺	Resistor (51,000 ohms)	4237
㊻	By-Pass Condenser (.05 mfd.)	3615-U
㊼	By-Pass Condenser (.05 mfd.)	3615-E
㊽	Resistor (490,000 ohms)	4517
㊾	Resistor (70,000 ohms)	5385
㊿	Resistor (25,000 ohms)	4516
(51)	Resistor (240,000 ohms)	3768
(52)	Condenser (.015 mfd.) double	3793-E
(53)	On-Off Switch	4095
(54)	Power Transformer (50-60 cycles)	5362
	Power Transformer (25-40 cycles)	5363
	Power Transformer (50-60 cycles, 220 volts)	5364
(55)	Choke	4951
(56)	Condenser (6 mfd.) Electrolytic type (50-60 cycles)	4916
	Condenser (10 mfd.) Electrolytic type (25-40 cycles)	5142
(57)	Condenser (6 mfd.) Electrolytic type (50-60 cycles)	4916
	Condenser (10 mfd.) Electrolytic type (25-40 cycles)	5142
(58)	B. C. Resistor	5365
	Line Cord and Plug	L-943
	Tube Shield (Large)	03373
	Tube Shield (27 type)	5387
	Pilot Bulb	3463
	Pilot Bracket Complete	03081-A
	Knob (Large)	4958-A
	Knob (Small)	4959-A
	Knob (Switch)	4290-A
	Spring (For small knobs)	4147
	Spring (For large knobs)	5262
	Grid Clip	4897
	Five Prong Socket Assembly	4956
	Four Prong Socket Assembly	4955
	Volume Control Insulator	4092
	Dial	5021
	Light Shield Screen	4937
	Bezel	5009

PHILCO MODELS 90 AND 90A

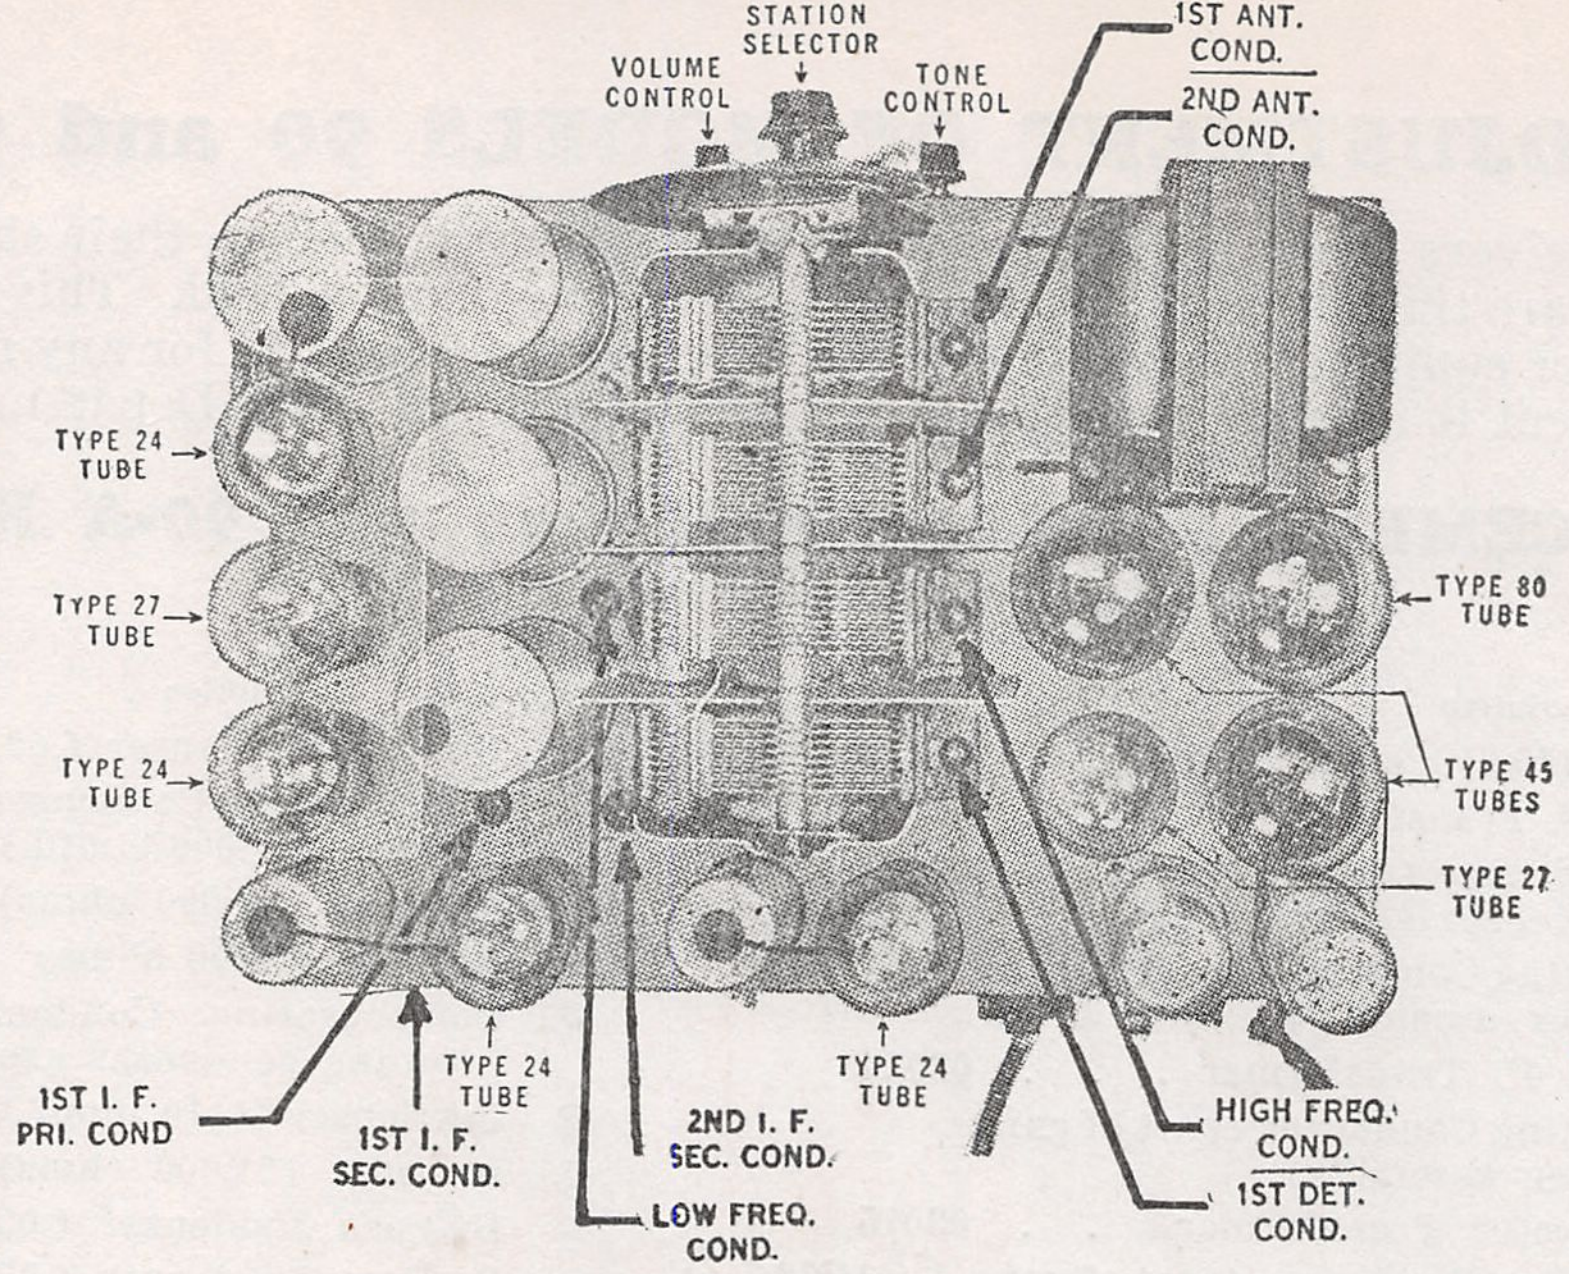

Adjusting the Model 90 Using a Jewell 560 Oscillator

Set up the Receiver for operation using standard tubes. Set the Normal-Maximum switch in the Normal position.

Intermediate Frequency Adjustment—Remove the tube shield. Remove the control grid clip of the first detector tube (Type 24 tube nearest back of the Receiver Chassis under the tube shield). Connect the "A" terminal of the oscillator to the control grid of the first detector tube. The "G" terminal must be connected to the Receiver Chassis. Turn the filament control of the oscillator on about ½ the total movement. The middle switch much be turned to the intermediate position. The tuning control of the oscillator must be set for exactly 175 K.C., as indicated in the calibration data sent with the instrument.

Turn the volume control of the Receiver on full. Set the atenuator control so that an audible signal is received in the speaker. Connect the ± and the low terminals of the output meter to the voice coil terminals of the speaker. Adjust the atenuator control for not more than ½ full scale reading of the meter.

Using a Philco part No. 3164 fibre wrench, adjust the second I. F. secondary condenser for maximum reading in the output meter. Adjust the first I. F. secondary and then the first I. F. primary condensers for maximum reading in the output meter. Reduce the oscillator signal to prevent any damage to the meter mechanism. Replace the grid clip on the first detector tube and replace the tube shield.

High Frequency Compensator — Connect the "A" and "G" terminals of the oscillator to the ANT and GND terminals of the Receiver. Do not change the oscillator setting. Tune the Receiver to exactly 140 and adjust the high frequency compensator for maximum reading in the output meter.

Antenna and Detector Condensers — With the Receiver and oscillator in the same setting, set the detector and antenna condensers for maximum reading in the output meter. If the Receiver is so far out of adjustment that the signal is extremely weak when adjusting the high frequency condenser it is advisable to temporarily check the adjustment of the detector and antenna condensers. Final adjustment of these condensers must be made as described.

Low Frequency Condenser—With the oscillator turned to broadcast frequency set the Philco scale at 60 and adjust the low frequency compensating condenser for maximum signal in the output meter. If the signal comes in off the 60 position on the Philco scale, set the Receiver slightly off the signal towards 60 and adjust the signal for maximum strength in this position. By repeating this, you will be able to bring the signal up to the 60 setting on the Philco scale.

MODEL 96,96-A
Chassis

PHILCO RADIO & TELEVISION CORP.

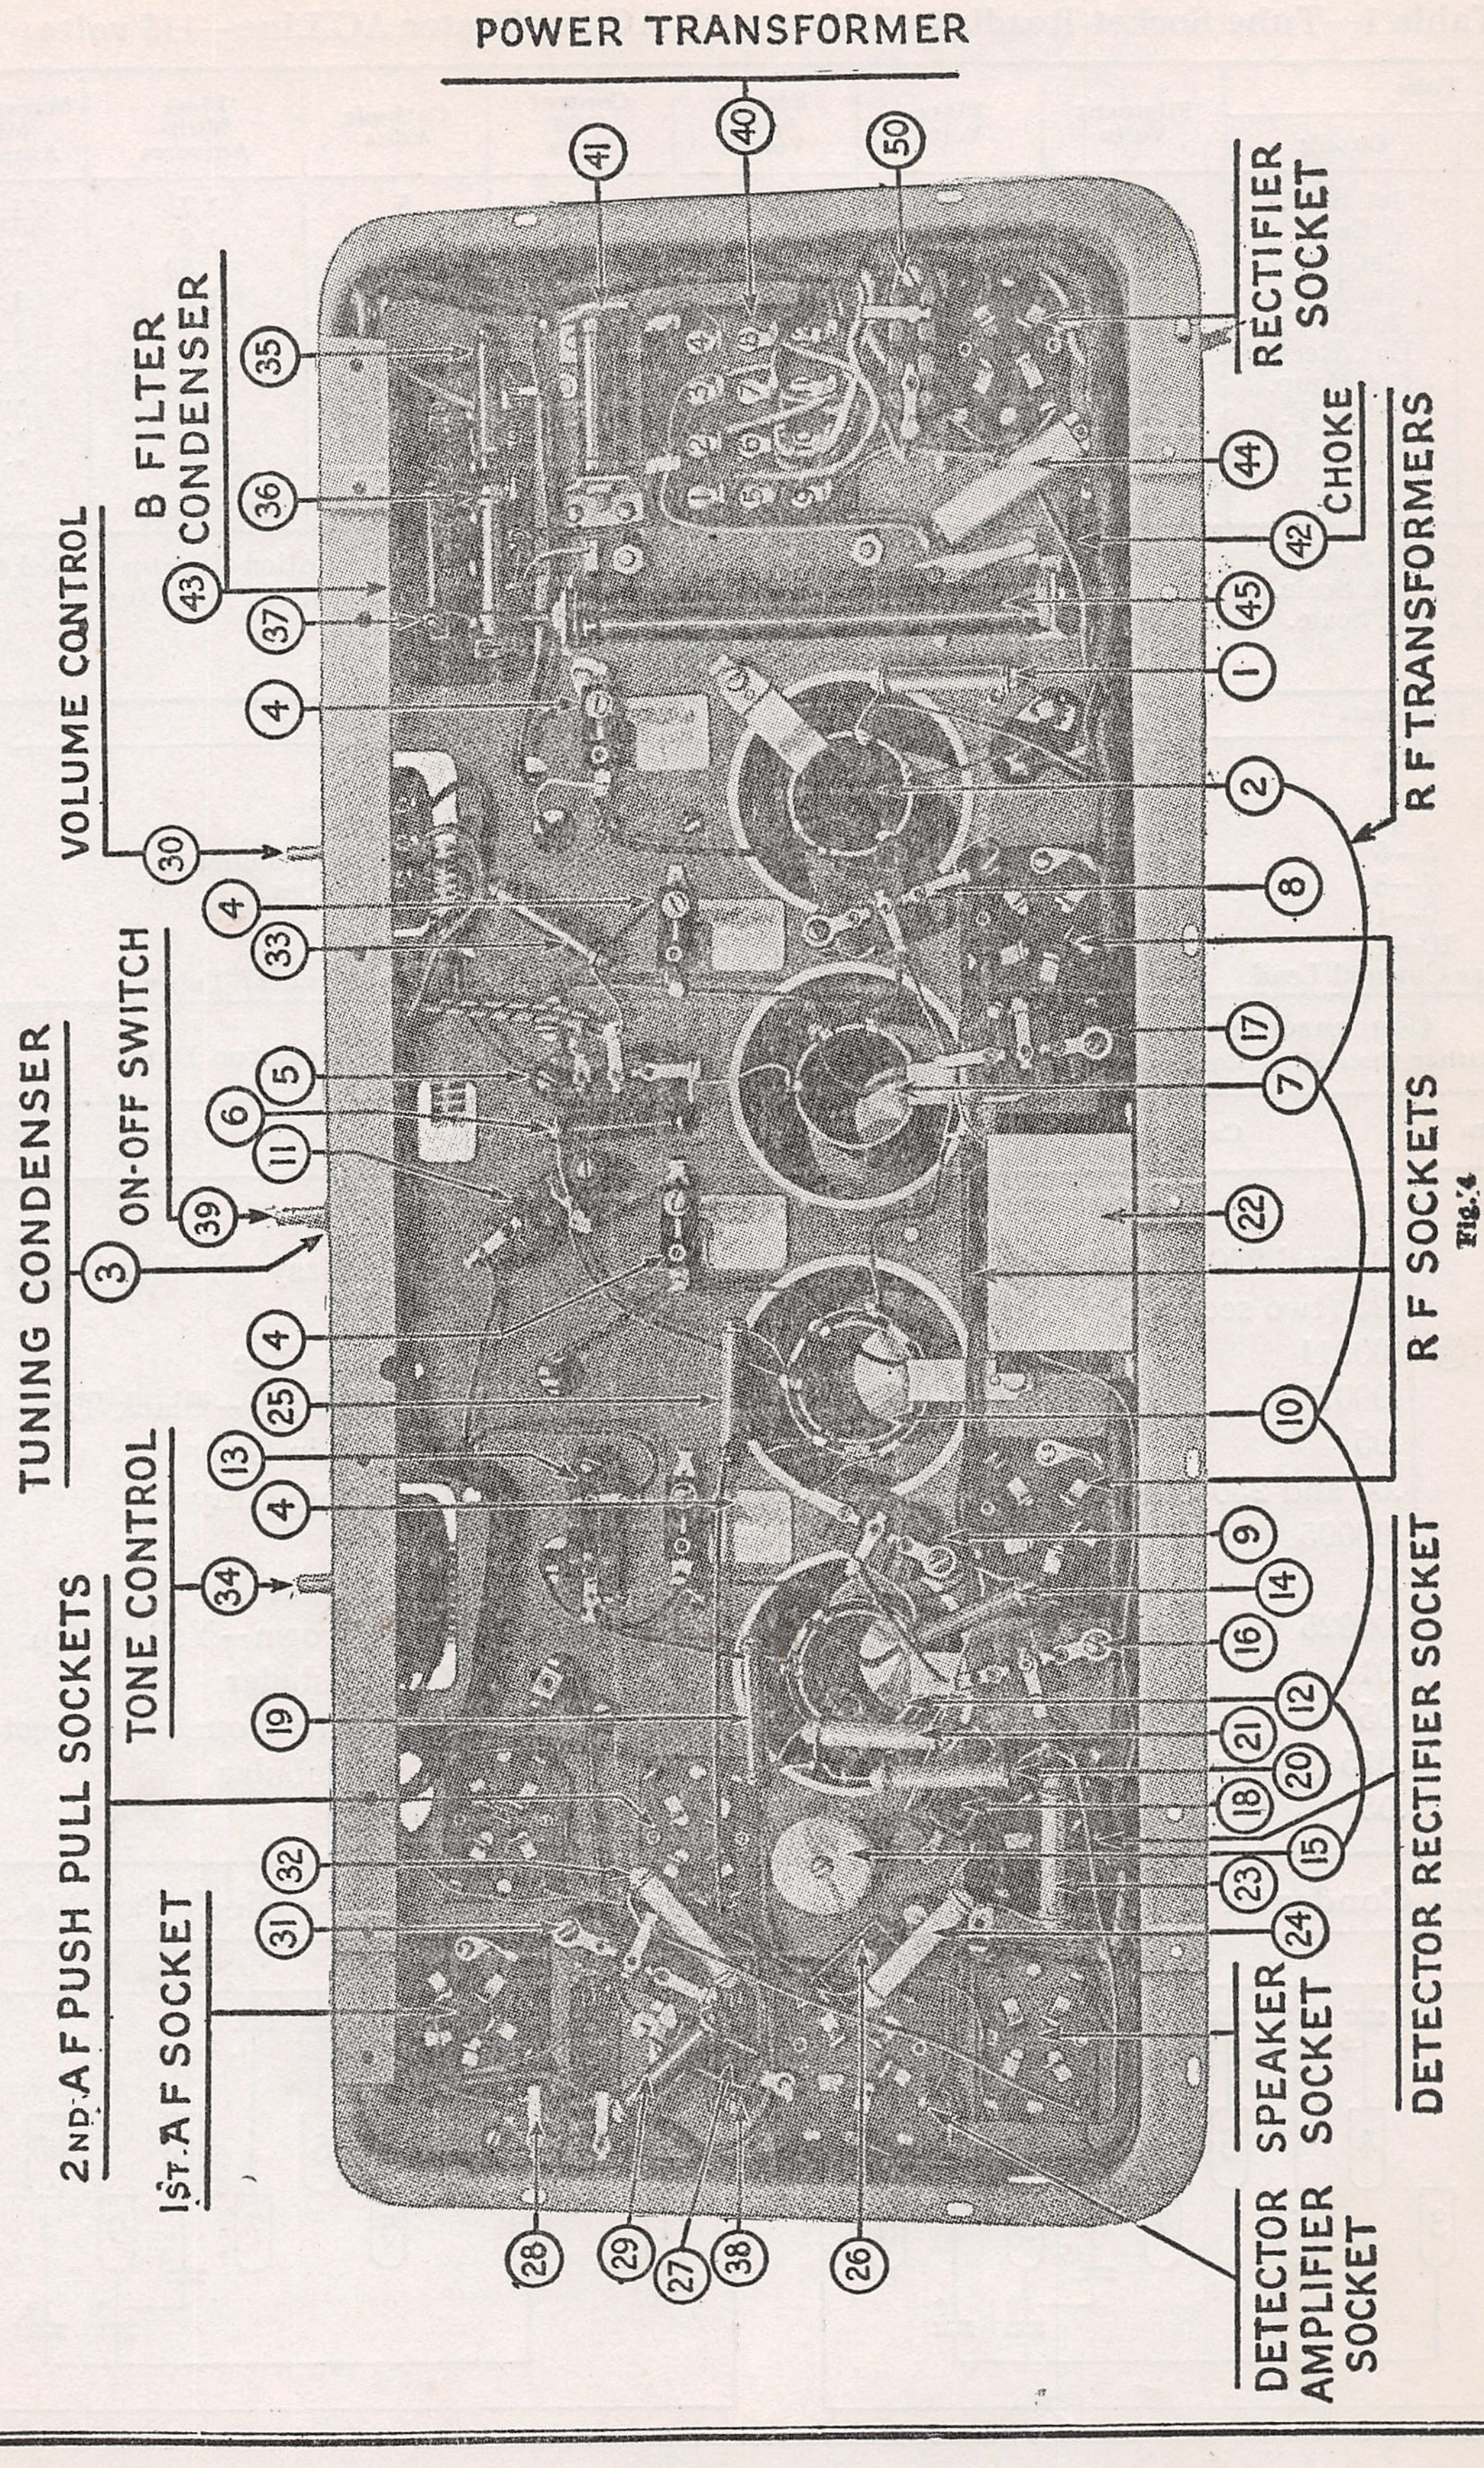
POWER TRANSFORMER
41
40
50
RECTIFIER SOCKET
B FILTER CONDENSER
35
36
43
37
44
CHOKE
42
45
1
VOLUME CONTROL
4
30
2
R F TRANSFORMERS
4
33
8
17
7
ON-OFF SWITCH
5
6
11
39
TUNING CONDENSER
3
22
R F SOCKETS
4
25
10
13
4
9
TONE CONTROL
34
14
16
2ND A F PUSH PULL SOCKETS
19
21
12
20
18
15
32
23
DETECTOR RECTIFIER SOCKET
1ST A F SOCKET
31
24
SPEAKER SOCKET
28
29
27
38
26
DETECTOR AMPLIFIER SOCKET

Fig. 4

MODEL 111,111-A
Voltage
Electrical Values

PHILCO RADIO & TELEVISION CORP

Table 1—Tube Socket Readings Taken with AC Set Tester AC Line—115 volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts*	Control Grid Volts	Cathode Volts	Plate Milli-Amperes	Screen-Grid Milli-Amperes ‡
Type	Circuit							
24	1st R. F.	2.1	190	60	.2	5	1.7	1.75
27	Osc.	2.1	45	..	.7	7	1.6	....
24	1st Det.	2.1	180	62	4.6	8	.5†	.15
24	1st I. F.	2.1	185	65	...	5	1.5	1.7
24	2nd I. F.	2.1	190	82	2.2	5	3	1.85
27	Det. Rect.	2.2	...	..	.4	.5	.....	....
27	Det. Amp.	2.2	35	..	.4	5	.20‡	....
27	1st A. F.	2.1	95	..	1.2	5	4.	....
45	2nd A. F.	2.2	255	..	50	...	32.5	....
45	2nd A. F.	2.2	255	..	50	...	32.5	....
80	Rect.	4.9	...	..	...	...	50/Plate	....

*Read with C 100 Scale.
†Read with 20 Mil. Scale.
‡Read with 2 Mil. Scale.

Note—Volume Control Off; Station Selector turned to Low Frequency End; Range Switch set in "Normal" Position.

Table 2—Power Transformer Voltages

Terminals	A.C. Volts	
1—2		Primary
3		Center Tap 80 Tube
4		Center Tap 45 Tubes
5—6	2.67	Heaters for 24 and 27 Tubes
7—8	2.68	Filaments for 45 Tubes
9—12	750.	Plates 80 Tube
10—11	5.0	Filament 80 Tube
Rubber Covered Lead		Center Tap for 24 and 27 Tubes

Condenser Data
(Other than Filter Condenser)

No. on Diagram	Capacity
⑥	.05
⑩ ⑪	.05 and 250 Ohm Resistor
⑰	.25 (two sections)
⑲ ㉓ ㉗ ㉝ ㊳	.00011
㉑	.0007
㉘	.05
㉙	.05 and 250 Ohm Resistor
㉟	.00005
㊵	.5
㊷	.00025
㊸	.015
㊺	.05
(61)	.015 (two sections)
(67)	.05

Resistor Data

No. on Diagram	Resistance	Color
①	10,000	Black
⑧ ㊴ ㊶ (66) (68)	100,000	Silver Gray—Yellow Tip
⑯	50,000	Orange
⑱	13,000	Belgium Blue
⑳	1,000	Brown Body—Black Tip—Red Dot
㉞	500,000	Battleship Gray
㊹	500,000	Battleship Gray
㊻	250,000	White
㊽—(64)	70,000	Jade Green
(51)—(52)	25,000	Auto Brown—Yellow Tip
(57)	10,000	Long Tubular
(58)	70	Flat Wire Wound (two sections)
(59)	800	Short Tubular

Model 211 Condenser Block Part No. 3754

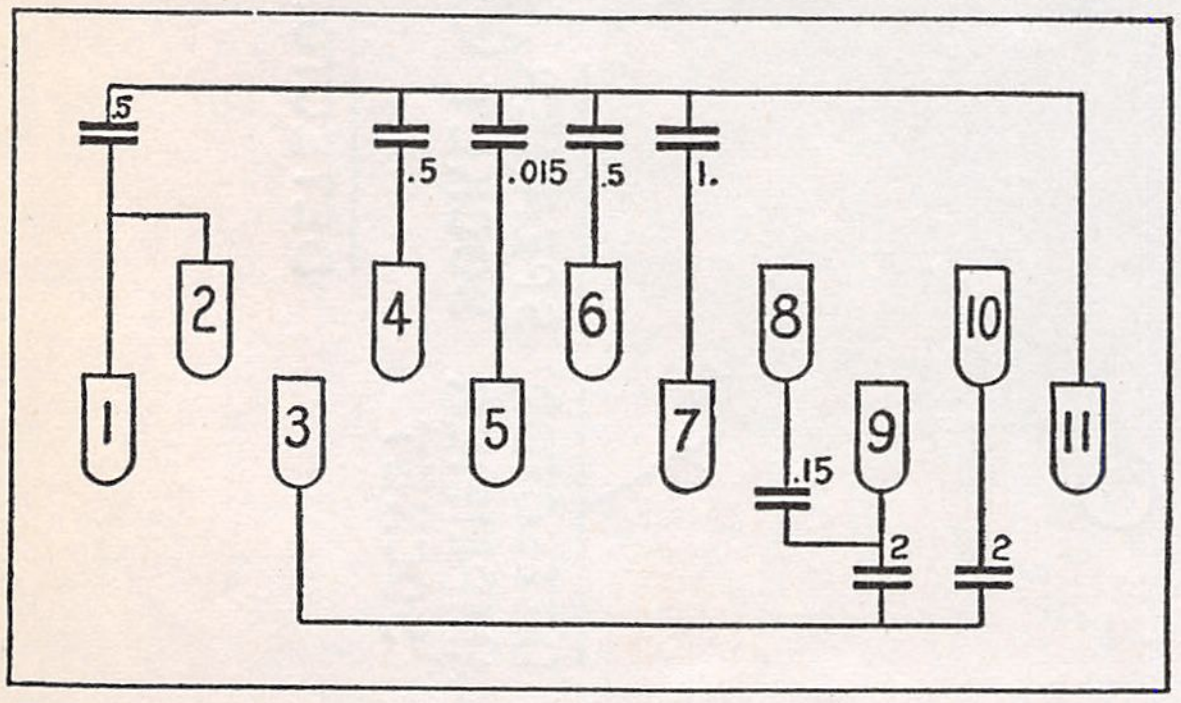

Model 211-A Condensor Block Part No. 3755

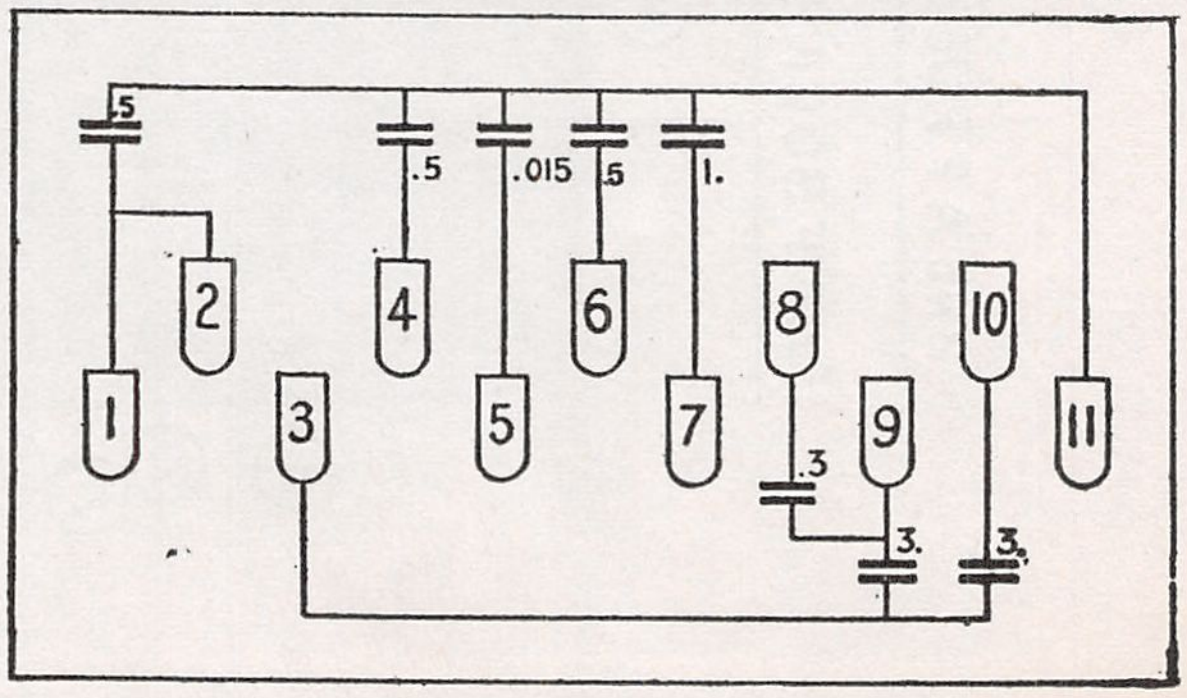

PHILCO RADIO & TELEVISION CORP.

MODEL 111,111-A
Schematic
Socket

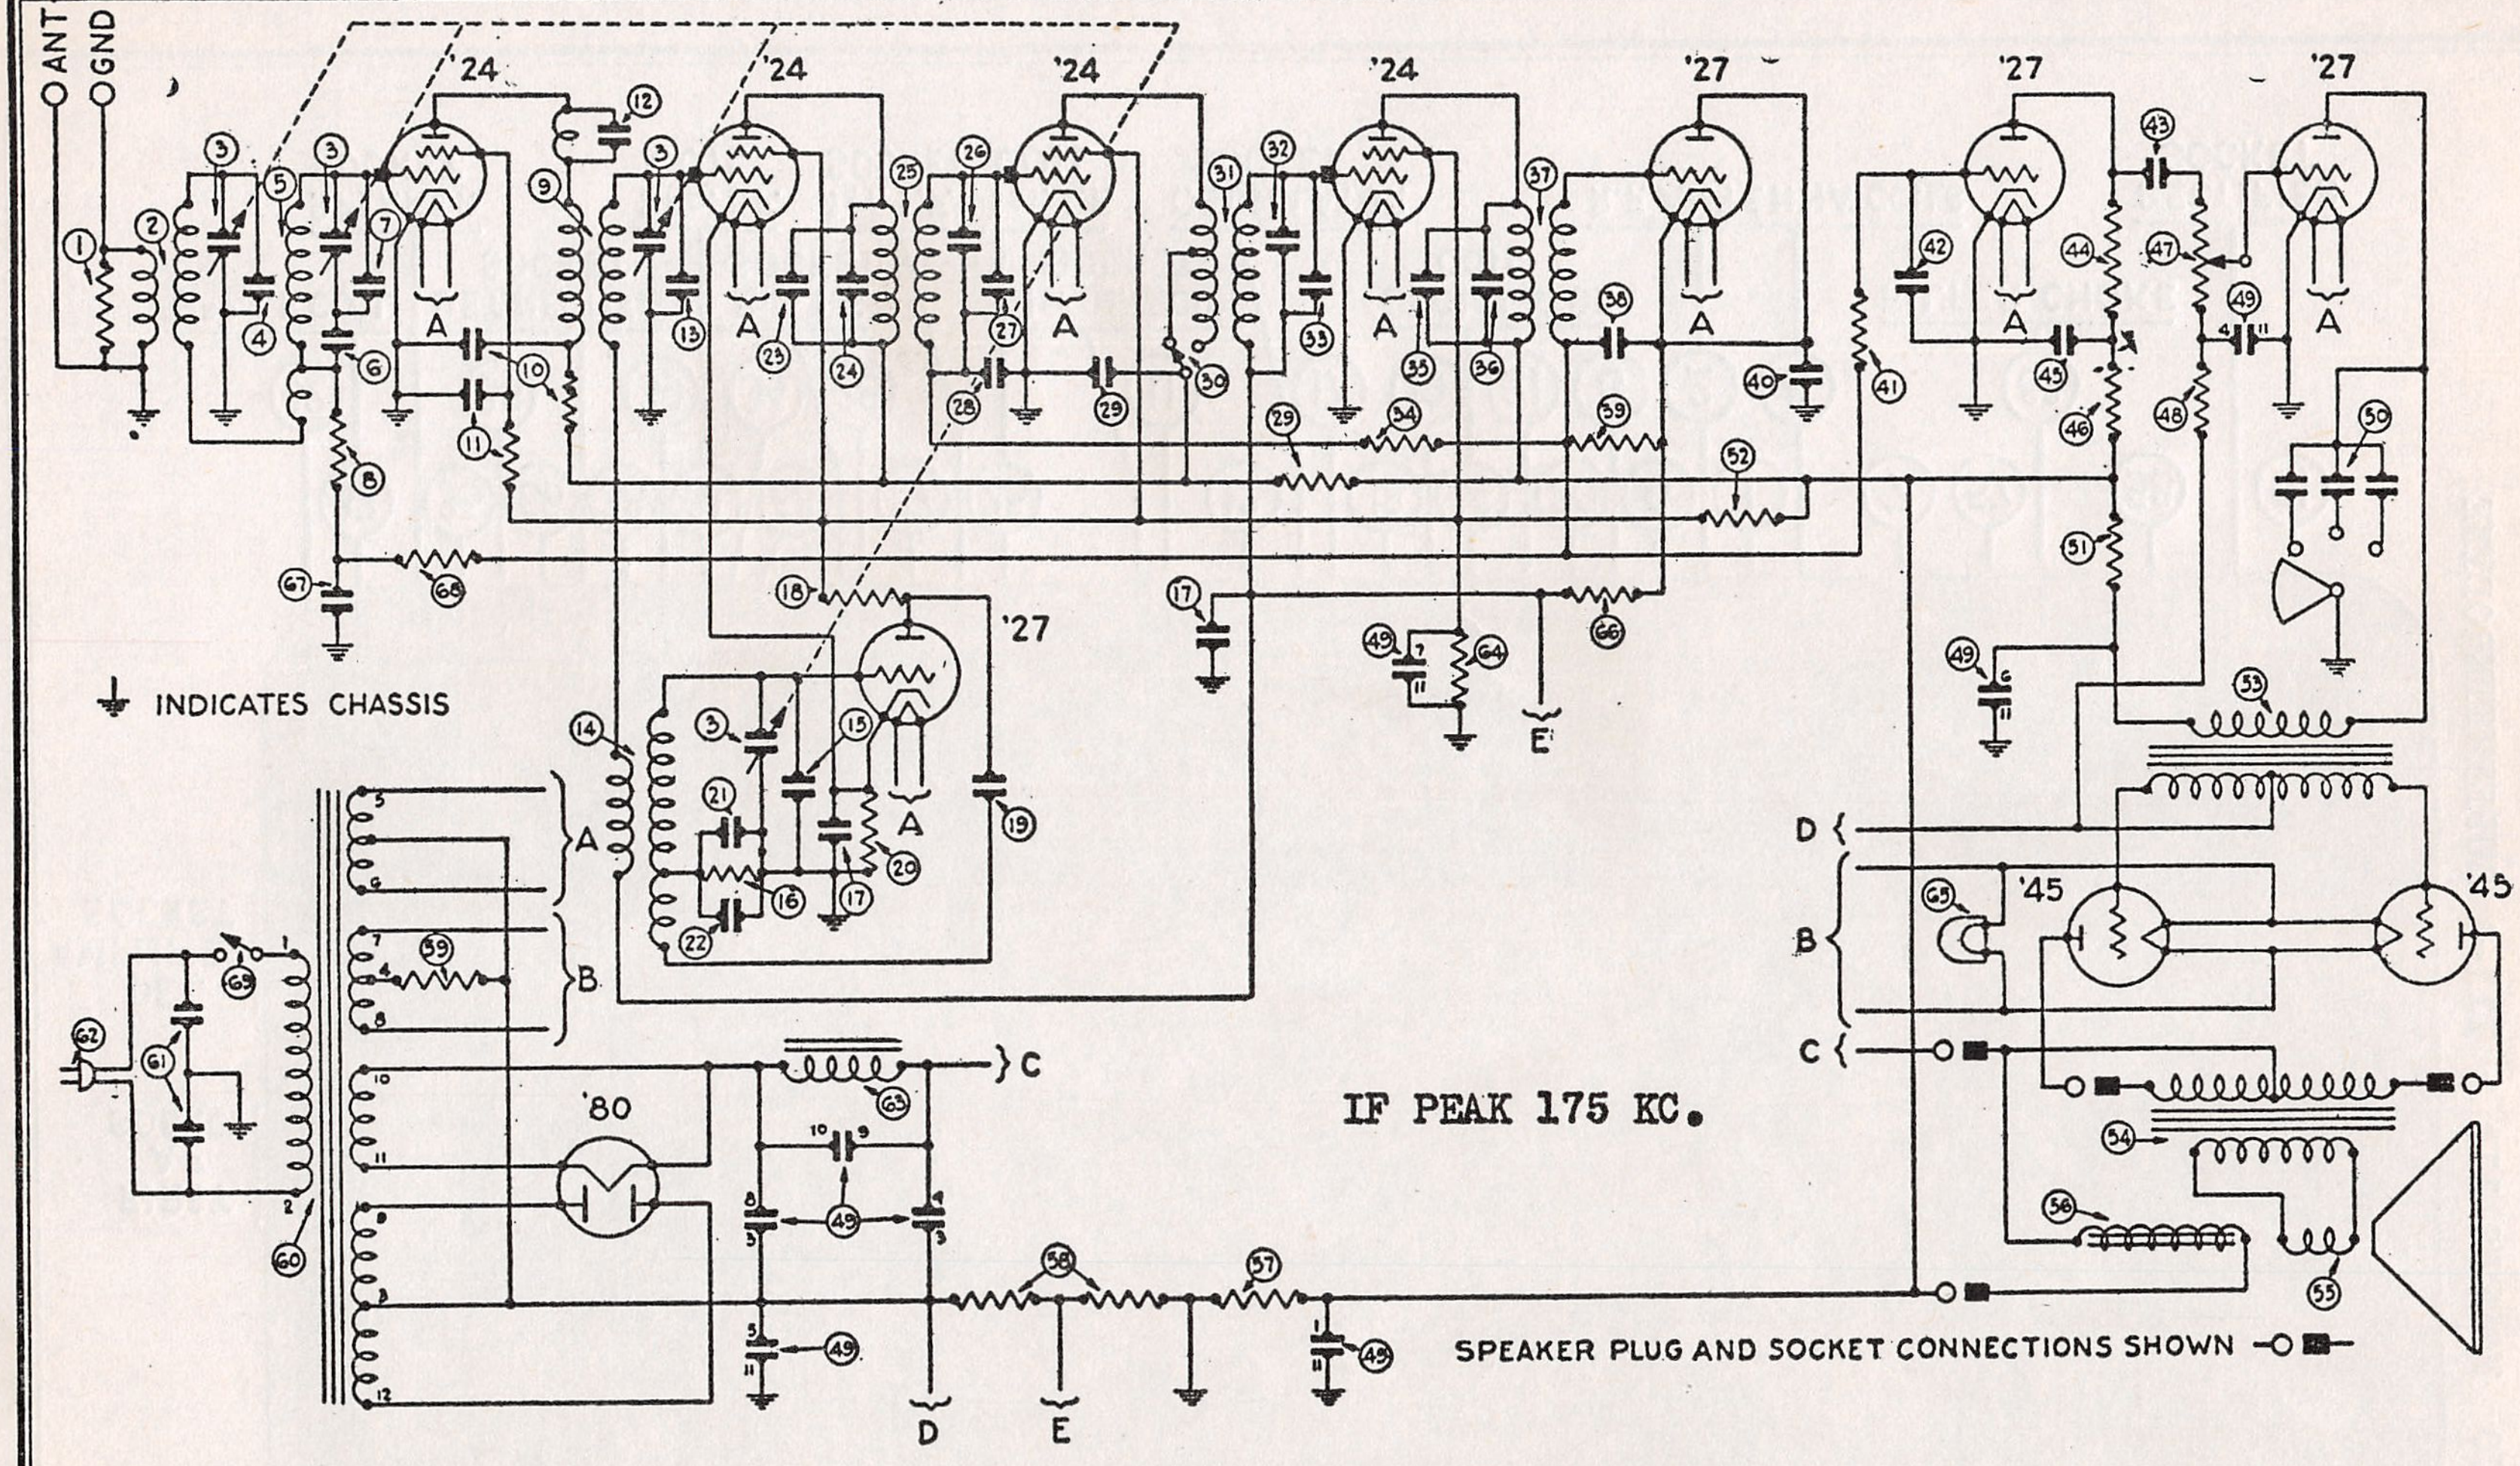
ANT
GND
'24
'24
'24
'24
'27
'27
'27
'27
'45
'45
'80
A
B
C
D
E
INDICATES CHASSIS
IF PEAK 175 KC.
SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN

Fig. 3

NOTE: The connection shown between Condenser No. ⑦ and Condenser No. ⑥ should also be connected to ground.

See Parts List for changes upon Models 111 and 111-A

Models 111, 111A,

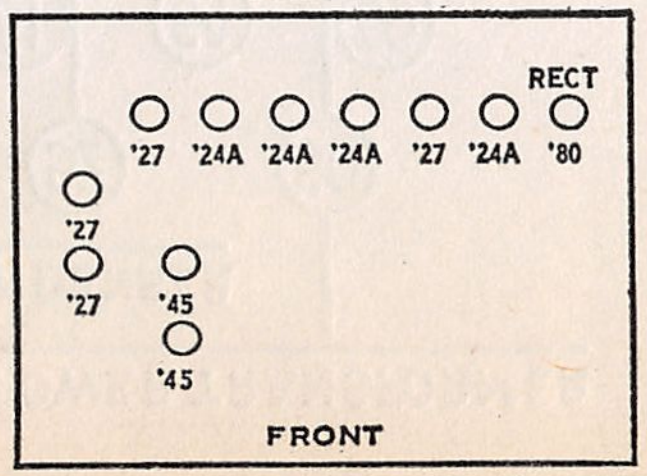
RECT
'27
'24A
'24A
'24A
'27
'24A
'80
'27
'27
'45
'45
FRONT

D-C Resistance Data

1st I-F Transformer	Primary	68 ohms	Secondary	68 ohms	(25)
2nd I-F Transformer	Primary	6.2 ohms	Secondary	70 ohms	(31)
3rd I-F Transformer	Primary	95 ohms	Secondary	65 ohms	(37)

PHILCO MODELS 111 & 111-A SUPERHETERODYNE

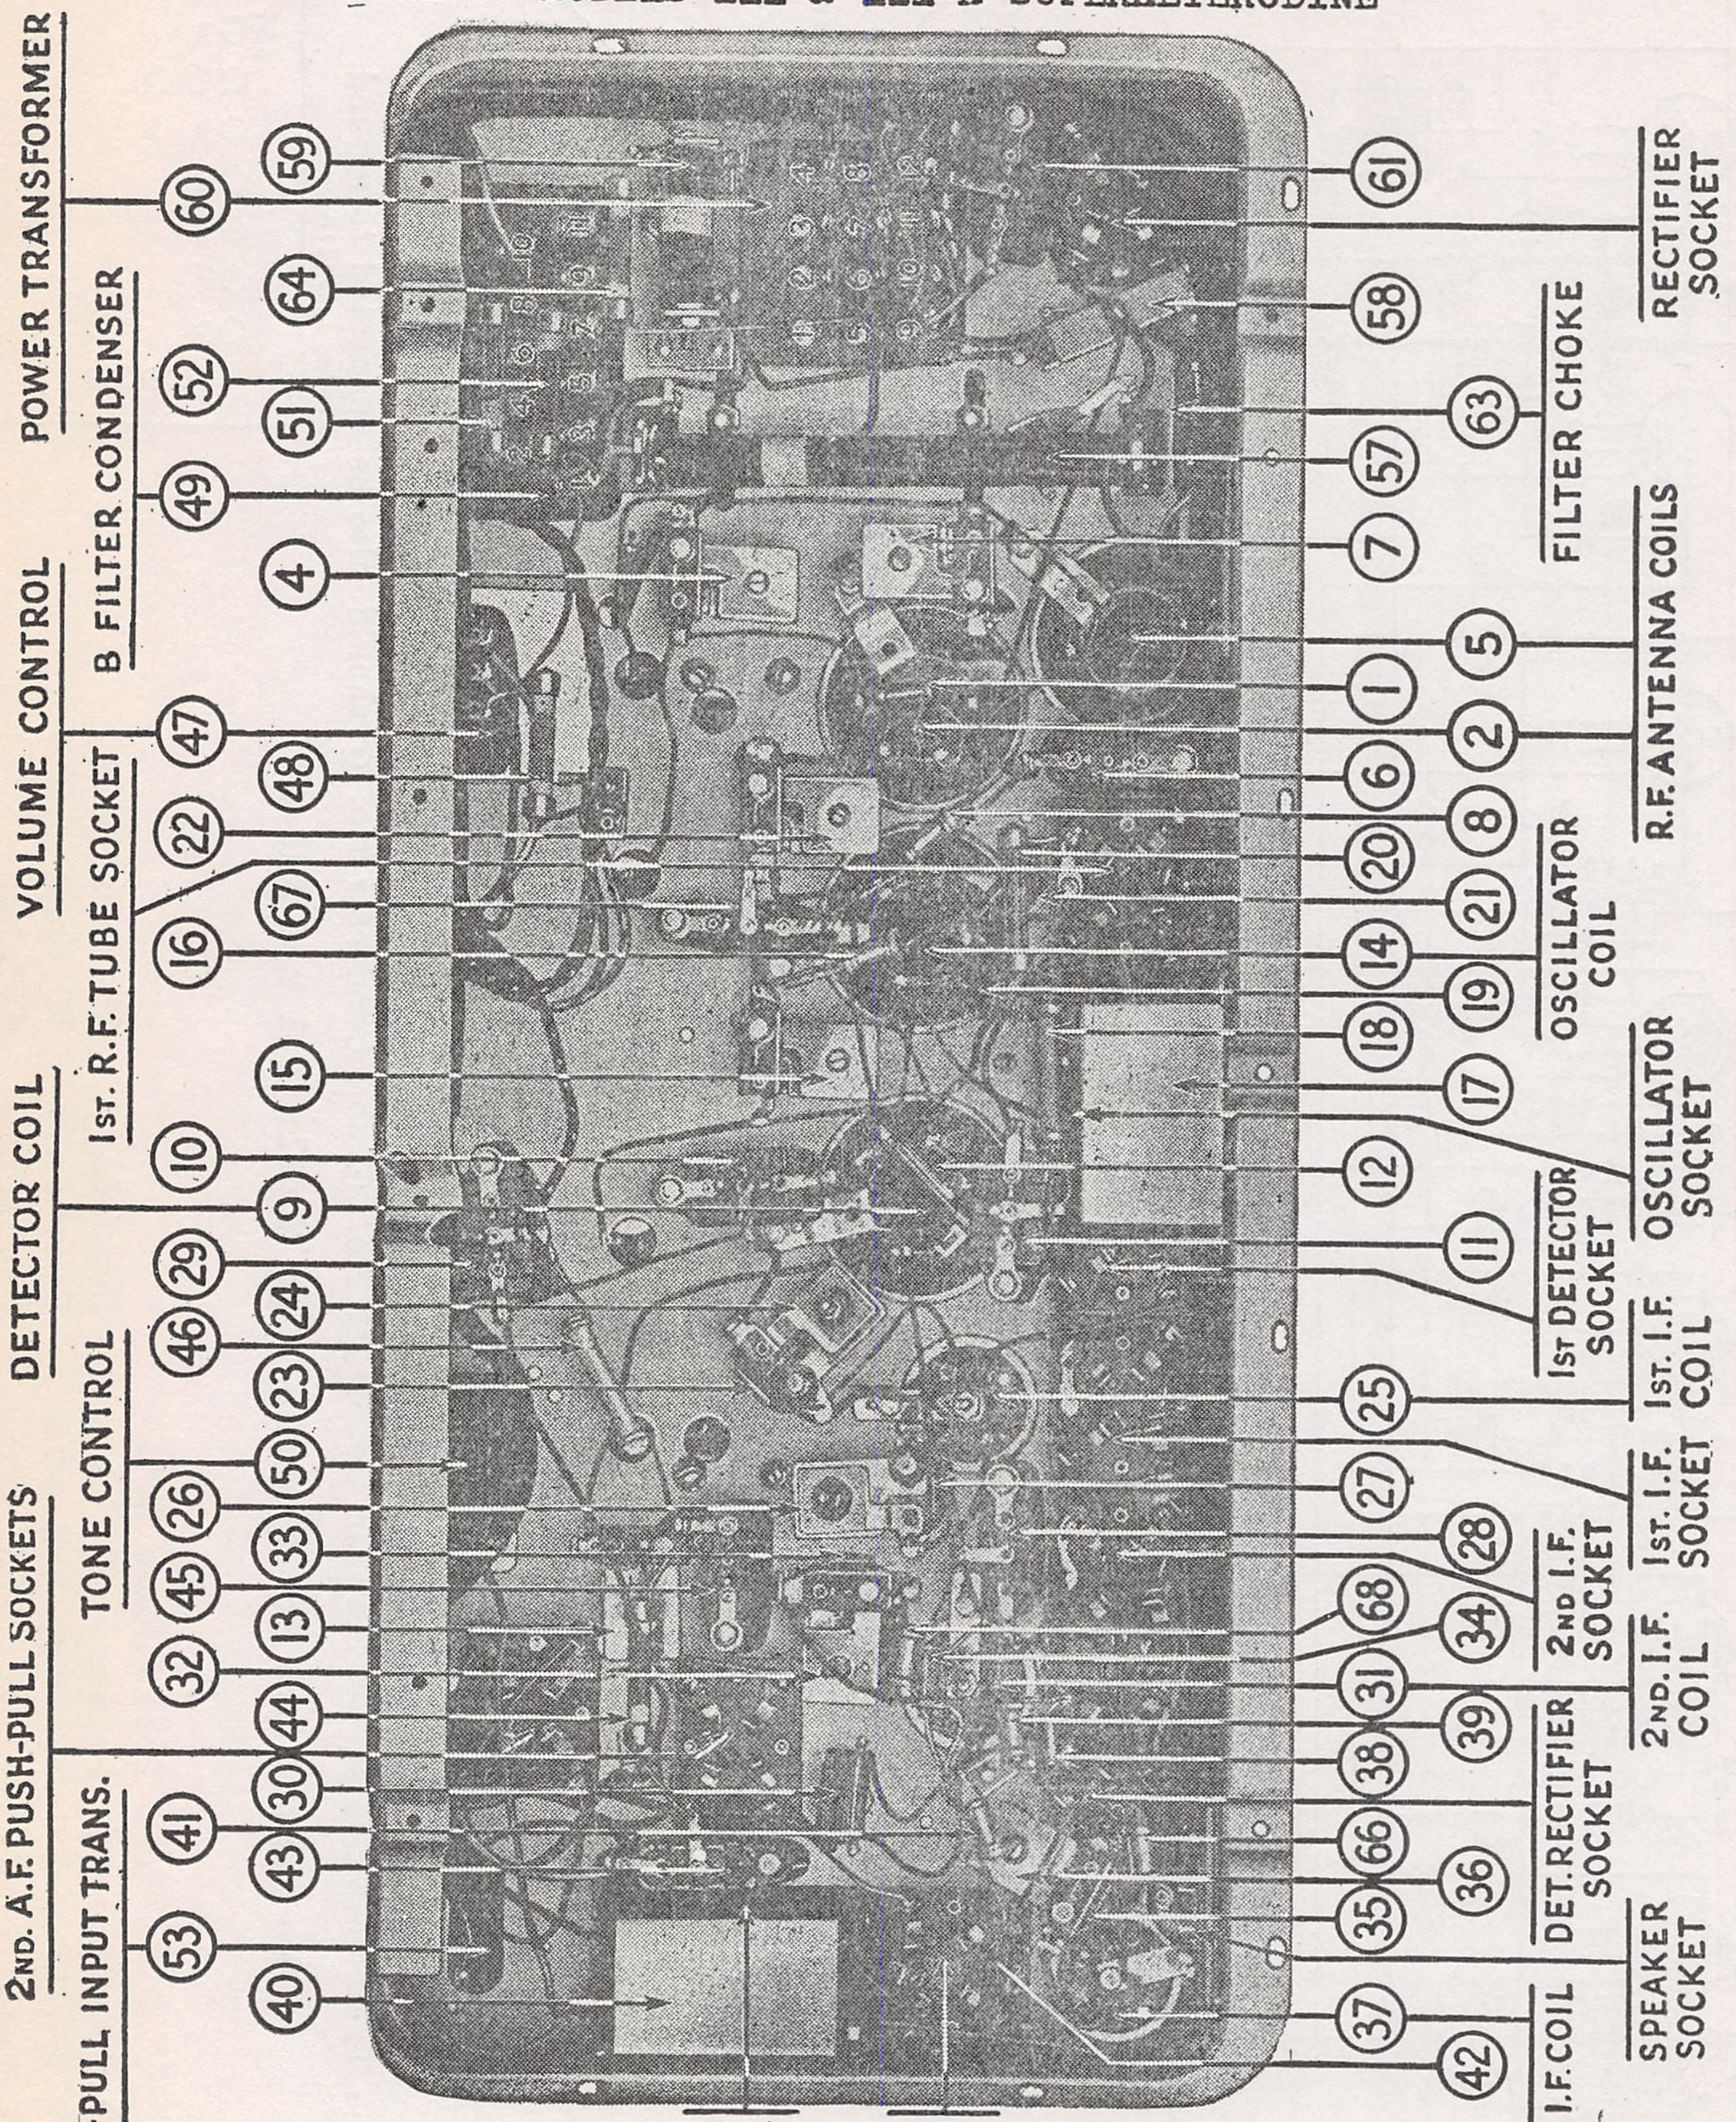
POWER TRANSFORMER
B FILTER CONDENSER
VOLUME CONTROL
1ST. R.F. TUBE SOCKET
DETECTOR COIL
TONE CONTROL
2ND. A.F. PUSH-PULL SOCKETS
PUSH-PULL INPUT TRANS.
60
59
64
52
51
49
4
47
48
22
67
16
15
10
9
29
46
24
23
50
26
33
45
13
32
44
30
41
43
53
40
RECTIFIER SOCKET
FILTER CHOKE
R.F. ANTENNA COILS
OSCILLATOR COIL
OSCILLATOR SOCKET
1ST DETECTOR SOCKET
1ST. I.F. COIL
1ST. I.F. SOCKET
2ND I.F. SOCKET
2ND. I.F. COIL
DET. RECTIFIER SOCKET
SPEAKER SOCKET
3RD I.F. COIL
61
58
63
57
7
5
1
2
6
8
20
21
14
19
18
17
12
11
25
27
28
68
34
31
39
38
66
36
35
37
42
FIRST AF SOCKET
DET. AMPLIFIER SOCKET

PHILCO RADIO & TELEVISION CORP.

MODEL 112,112-A
Below # 174,001
Parts List

MODELS 112 AND 112-A

This parts list for models 112,112-A is applicable to the phonograph combination models 212,212-A. However, the following changes and additions must be recorded.

Resistor (70) in models 112,112-A is changed to resistor (76) in models 212,212-A. In addition the following are also added to the list in connection with models 212,212-A

No.	Description	Part No.
(70)	Motor (50 cycles)	5333
	Motor (60 cycles)	4784
	Motor (25 cycles)	4785
(71)	Phonograph On-Off Switch	4748
(72)	Pick-up Head	4853
(73)	Radio-Phono Switch	4514
(74)	Cord Connector Plug	4091
(75)	Cord Connector Socket	4124
	Turn Table	4735

RANGE SWITCH

The Range Switch, No. ㉚ in Fig. 3, is placed in the NORMAL position when the Receiver is shipped. This gives great distance range and is the setting which will be found most satisfactory in practically all locations. In places far from broadcasting stations, however, the Range Switch may be changed to the MAXIMUM position. This will make the Receiver super-sensitive and will give extreme distance range. Do not use the Range Switch in the MAXIMUM position if there are one or more powerful broadcasting stations near you. In any location there will be less noise between stations with the Range Switch in the NORMAL position.

REPLACEMENT PARTS

No. on Figs. 3 and 4	Description	Part No.
①	Resistor—10,000 Ohms	4412
②	1st R. F. Coil	3884-J
③	Tuning Condenser	4000-D
④	Compensating Condenser	3772-A
⑤	2nd R. F. Coil	3884-T
⑥	Condenser—.05	3615-L
⑦	Compensating Condenser	3968-A
⑧	Resistor—100,000 Ohms	4411
⑨	1st Detector Coil	3884-V
⑩	Condenser—.05 and 250 Ohms	3615-C
⑪	Condenser—.05 and 250 Ohms	3615-C
⑫	Coupling Condenser	3892-A
⑬	Compensating Condenser	3968-A
⑭	Oscillator Coil	3884-U
⑮	Compensating Condenser	3968-A
⑯	Resistor—50,000 Ohms	4518
⑰	Condenser—.25 double	3557
⑱	Resistor—13,000 Ohms	3766
⑲	Condenser—.00011	4519
⑳	Resistor—1,000 Ohms	4590
㉑	Condenser—.0007	4520
㉒	Compensating Condenser	3772-B
㉓	Condenser—.00011	4519
㉔	Compensating Condenser	3772-C
㉕	1st I. F. Coil	4501-B
㉖	Compensating Condenser	3772-C
㉗	Condenser—.0001	4519
㉘	Condenser—.05	3615-J
㉙	Condenser—.05 and 250 Ohms	3615-B
㉚	Range Switch	3116
㉛	2nd I. F. Coil	4501-C
㉜	Compensating Condenser	3772-C
㉝	Condenser—.00011	4519
㉞	Resistor—500,000 Ohms	4517
㉟	Condenser—.00005	4587
㊱	Compensating Condenser	3772-D
㊲	3rd I. F. Coil	4501-D
㊳	Condenser—.00011	4519
㊴	Resistor—50,000 Ohms	4518
㊵	Condenser—.5	3583
㊶	Resistor—100,000 Ohms	4411
㊷	Condenser—.00025	3082
㊸	Condenser—.015	3793-B
㊹	Resistor—500,000 Ohms	3769
㊺	Condenser—.05	3615-S
㊻	Resistor—250,000 Ohms	3768
㊼	Volume Control	4093
㊽	Resistor—70,000 Ohms	3542
㊾	B Filter Condenser Block—60 cycles	3754
	B Filter Condenser Block—25 cycles	3755
㊿	Tone Control	4037-A
(51)	Resistor—25,000 Ohms	3656
(52)	Resistor—25,000 Ohms	3656
(53)	Push-pull Input Transformer	3537
(54)	Push-pull Output Transformer	2848
(55)	Voice Coil and Cone Assembly	2794-B
(56)	Field Coil	2850
(57)	B Resistor—10,000 Ohms	4532
(58)	C Resistor	3764
(59)	C Resistor—800 Ohms	3763
(60)	Power Transformer—60 cycles	4446
	Power Transformer—25 cycles	4447
(61)	Condenser—.015 double	3793-E
(62)	A C Cord and Plug	L-943-A
(63)	Filter Choke	3422
(64)	Resistor—70,000 Ohms	3542
(65)	Pilot Lamp	3463
(66)	Resistor—100,000 Ohms	4411
(67)	Condenser—.05	3615-D
(68)	Resistor—100,000 Ohms	4411
(69)	On-Off Switch	4095
(70)	Resistor 50,000 Ohms	4518
	Insulator for Part Nos. 3557-3583	4105
	Pilot Bracket Assembly	4027-A
	Bolt for Pilot Bracket Assembly	W-439
	Tone Control Nut	W-434
	By-pass Condenser Mounting Bolt	W-443
	Bottom Shield Bolt	W-453
	Chassis Mounting Bolt	W-468

**MODEL 112,112-A
Below # 174,001
MODEL 112,112-A
Above # 174,001
Chassis**

PHILCO RADIO & TELEVISION CORP.

MODELS 112 AND 112-A

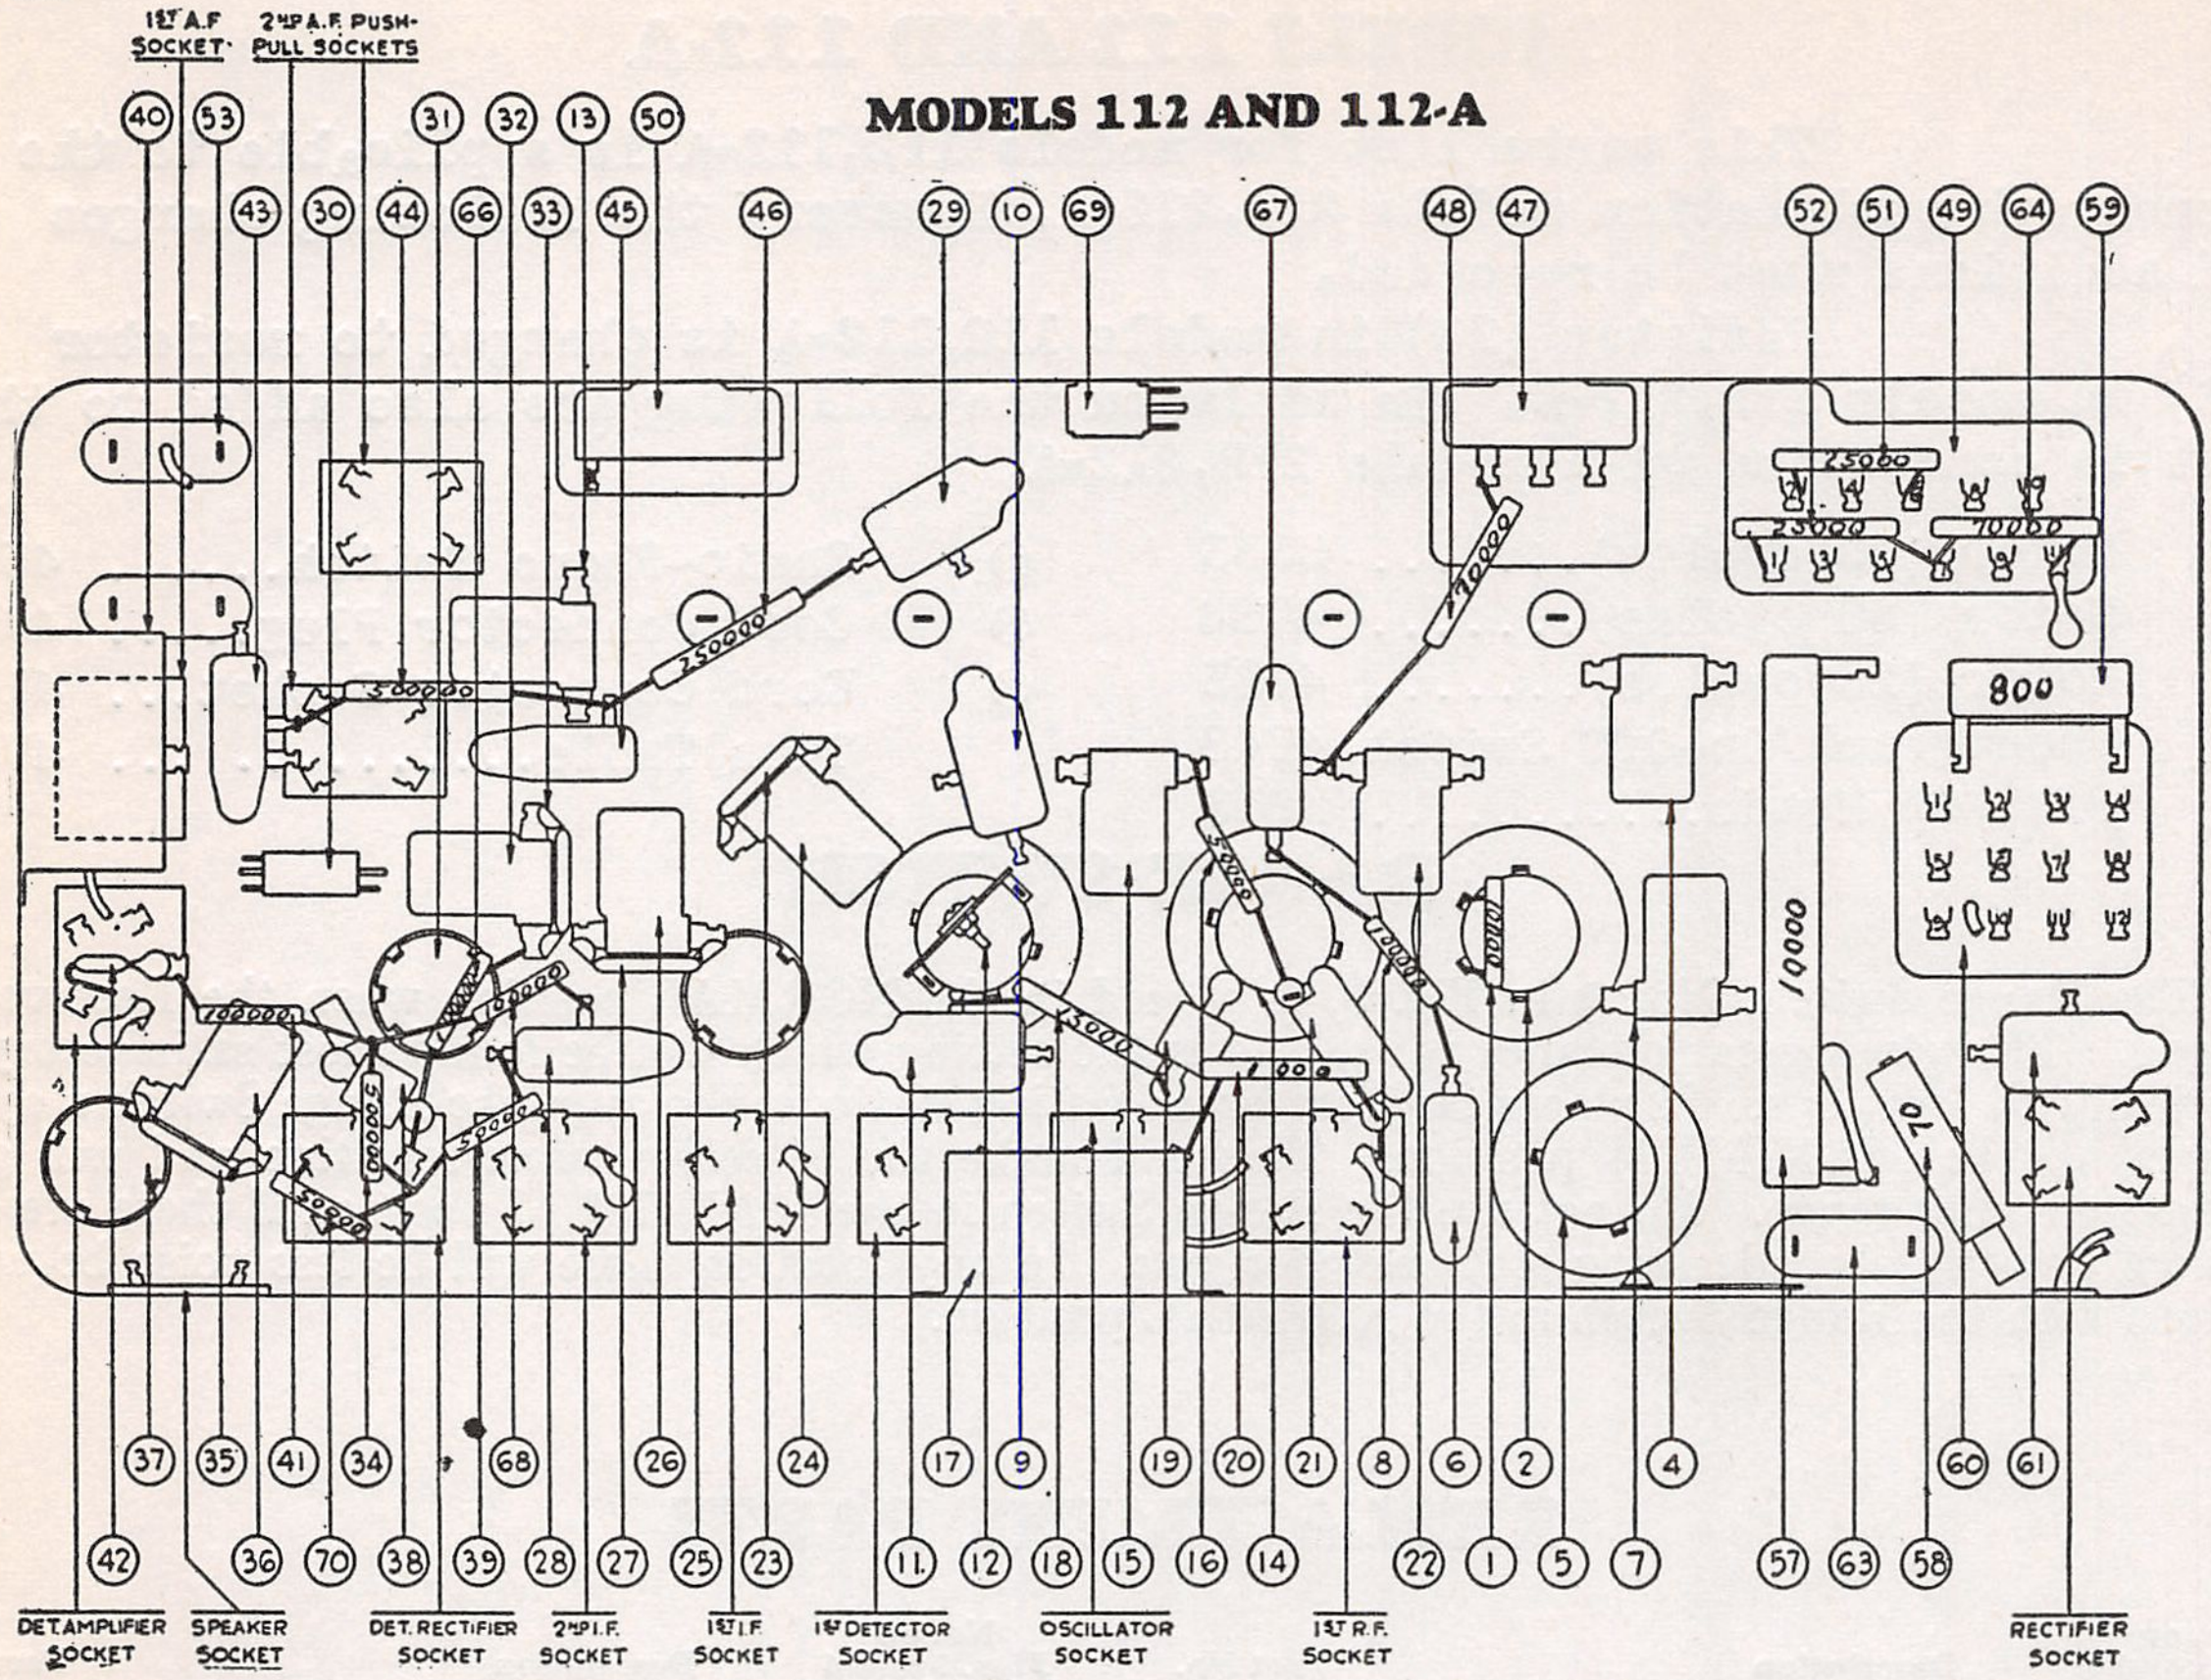
1ST A.F SOCKET
2ND A.F. PUSH-PULL SOCKETS
40
53
31
32
13
50
43
30
44
66
33
45
46
29
10
69
67
48
47
52
51
49
64
59
25000
23000
70000
800
250000
300000
10000
10000
70
37
35
41
34
68
26
24
17
9
19
20
21
8
6
2
4
60
61
42
36
70
38
39
28
27
25
23
11
12
18
15
16
14
22
1
5
7
57
63
58
DET. AMPLIFIER SOCKET
SPEAKER SOCKET
DET. RECTIFIER SOCKET
2ND I.F. SOCKET
1ST I.F. SOCKET
1ST DETECTOR SOCKET
OSCILLATOR SOCKET
1ST R.F. SOCKET
RECTIFIER SOCKET

MODELS 112 AND 112-A
(Above Serial No. 174,001)

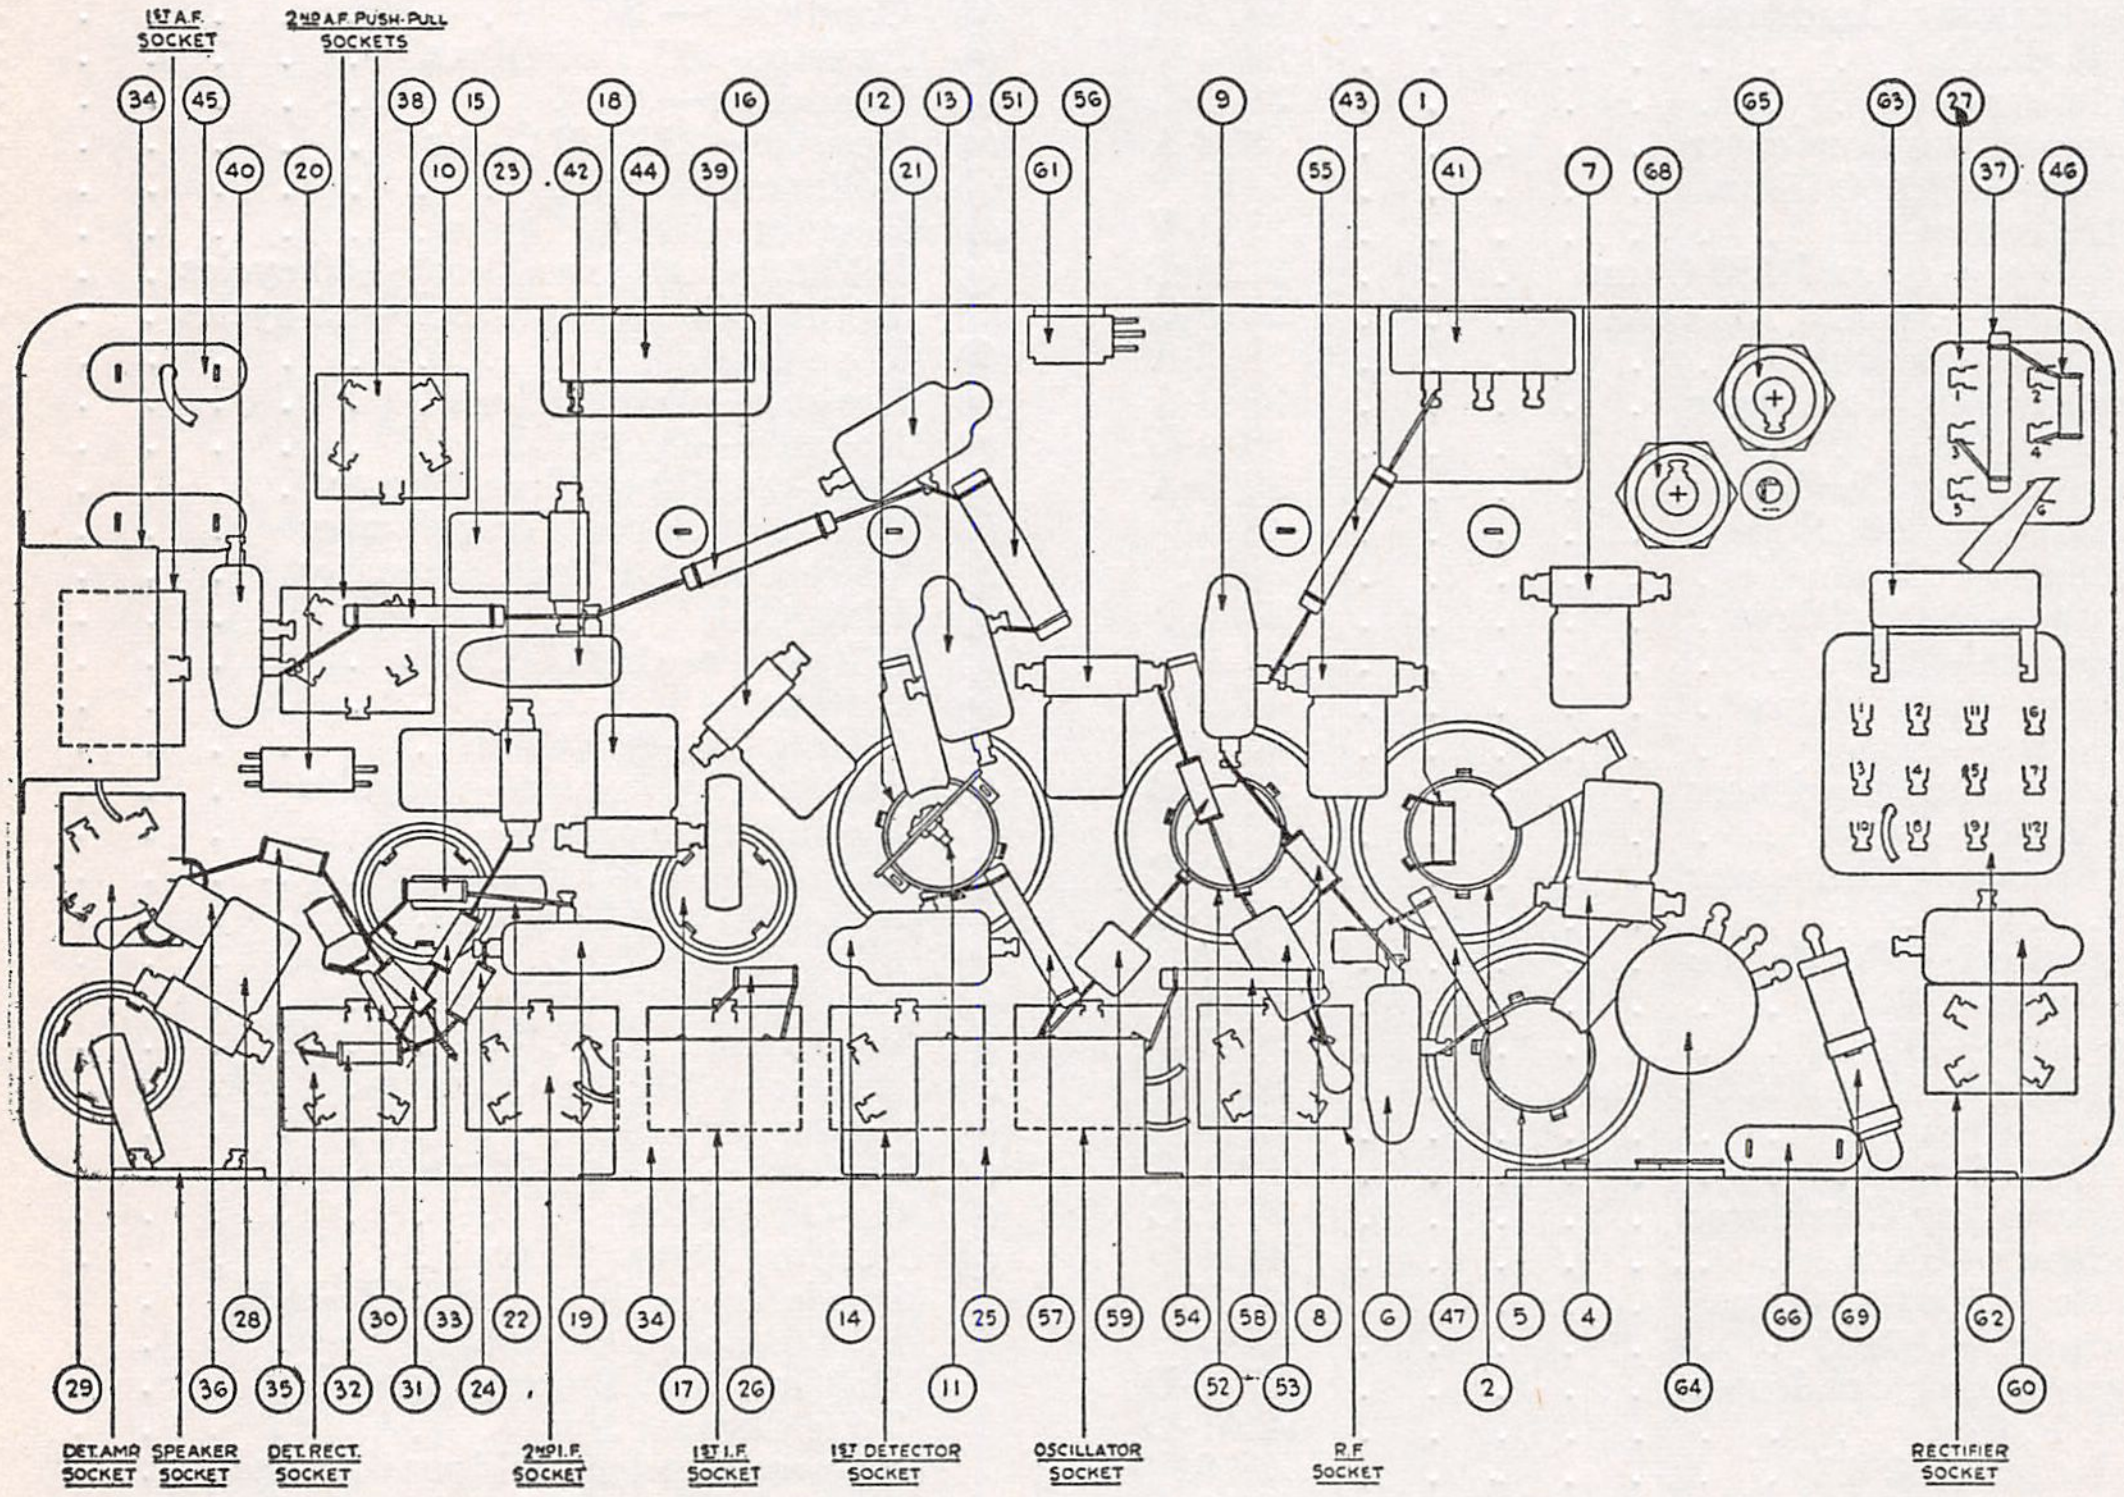
1ST A.F. SOCKET
2ND A.F. PUSH-PULL SOCKETS
34
45
38
15
18
16
12
13
51
56
9
43
1
65
63
27
40
20
10
23
42
44
39
21
61
55
41
7
68
37
46
28
30
33
22
19
34
14
25
57
59
54
58
8
6
47
5
4
66
69
62
29
36
35
32
31
24
17
26
11
52
53
2
64
60
DET. AMP SOCKET
SPEAKER SOCKET
DET. RECT. SOCKET
2ND I.F. SOCKET
1ST I.F. SOCKET
1ST DETECTOR SOCKET
OSCILLATOR SOCKET
R.F. SOCKET
RECTIFIER SOCKET

Fig. 4

PHILCO RADIO & TELEVISION CORP.

MODEL 112,112-A
Alignment Notes

PHILCO MODEL 112 SUPERHETERODYNE

ADJUSTING THE MODEL 112 SUPERHETERODYNE PLUS USING A JEWEL 560 OSCILLATOR

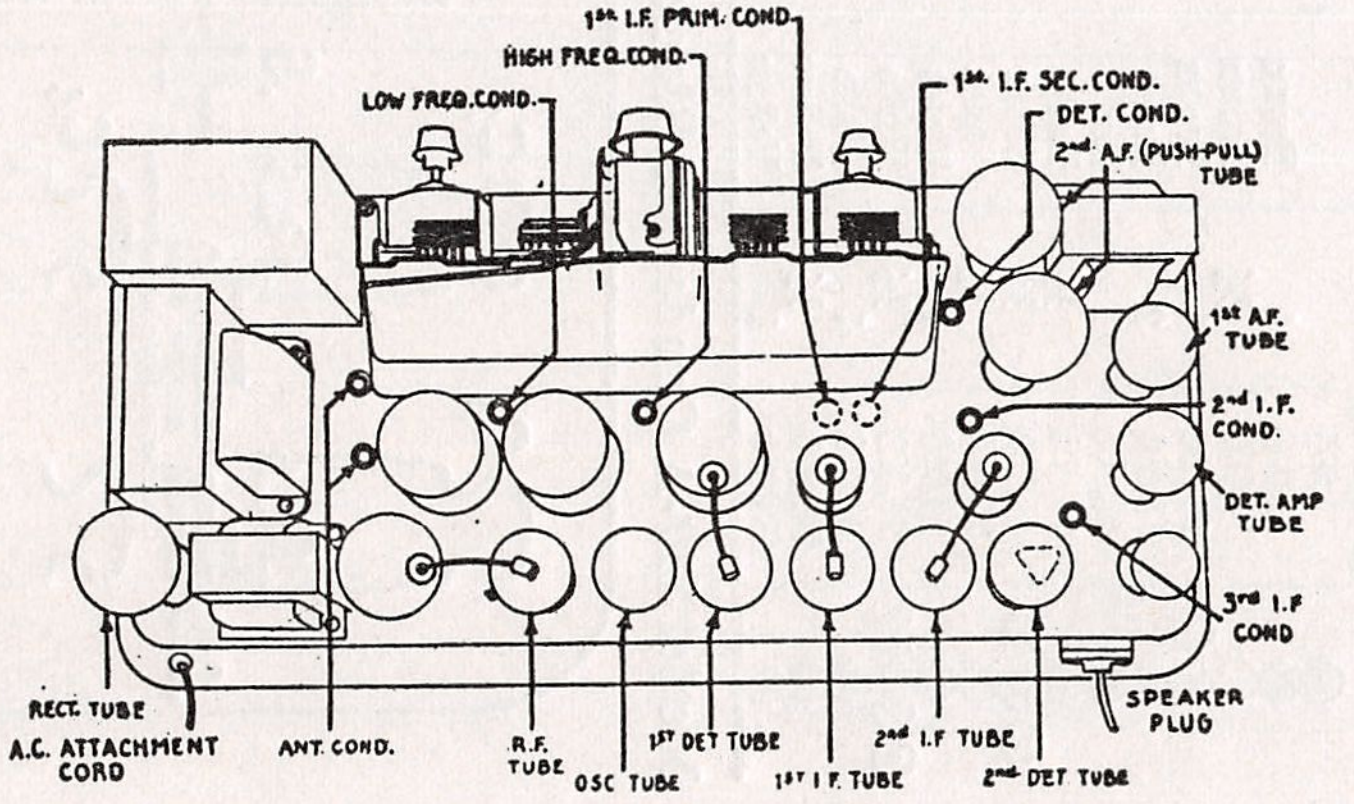

Set up the Receiver for operation using standard tubes, which you know are in good condition. Set the Normal - Maximum switch in the Normal position for the intermediate frequency adjustment. Connect the Jewell pattern 560 oscillator to the Receiver.

INTERMEDIATE FREQUENCY OR I. F. STAGES – Remove the tube shield, replace the control grid clip of the detector tube with the lead from the "A" terminal of the oscillator. The "G" terminal of the oscillator must be connected to the Receiver Chassis. Replace the tube shield on the chassis.

Turn on the filament control of the oscillator about one-half the total movement. The "A" Battery of the oscillator must be replaced when it is necessary to turn this control all the way on in order to obtain a signal. Turn the center switch to the intermediate position. The tuning control of the oscillator must be set so that the oscillator signal is exactly 175 K. C. This setting can be determined from calibration data furnished with the instrument.

Turn the volume control of the receiver on full. Set the atenuator control so that an audible signal is received in the speaker. Connect the ± and low terminals of the output meter to the voice coils of the speaker. Adjust the atenuator control so that not more than one-half full scale reading is obtained on the meter.

Using a Philco fibre wrench, part No. 3164, adjust the third I. F. condenser until the maximum reading is obtained in the output meter. Next, adjust the second I. F. condenser and then the secondary and primary condensers of the first I. F. stage for maximum reading on the meter. During these adjustments it may be necessary to reduce the signal strength by turning down the volume control of the receiver so that the needle will not be deflected beyond the end of the scale.

HIGH FREQUENCY CONDENSER – Remove the "A" terminal lead from the control grid of the first detector tube and replace the grid clip. Replace the tube shield. Connect the "A" terminal of the oscillator to the antenna post of the Receiver and the "G" terminal of the oscillator to the ground terminal of the chassis. Do not change the oscillator setting. Turn up the attenuator of the oscillator until it is all the way on. Set the Philco scale to approximately 140 (1400 K. C.); set the NORMAL - MAXIMUM switch in the Maximum Position provided the Receiver is not too far out of adjustment the eighth harmonic of the 175 note will be heard at or near the 140 position of the scale. Set the station selector knob at exactly 140 and tune the high frequency condenser until the oscillator note is peaked at exactly 140 on the Receiver scale. Next adjust the detector condenser for maximum reading on the output meter.

If the Receiver is so far out of adjustment that the eighth harmonic of 175 K. C. is not audible, it will be necessary to set the oscillator for broadcast frequencies. Set the tuning control of the oscillator at approximately 1400 K. C. (as indicated in the data furnished with the instrument), then adjust the high frequency condenser for maximum signal in the output meter. Set the first and second antenna condensers for maximum signal in the output meter reducing the atenuator setting as the signal increases to prevent damage to the meter mechanism. Turn the center control of the oscillator to intermediate frequency and reset the tuning control of the oscillator to the 175 K. C. position and proceed as outlined above. Final adjustment must be made when the oscillator is set at exactly 175 K. C. in the intermediate position.

ANTENNA CONDENSERS – With the oscillator set at the original 175 K. C. position adjust the first and then the second antenna condenser for maximum reading in the output meter.

LOW FREQUENCY CONDENSER – Set the oscillator on broadcast position and tune to exactly 600 K. C. The oscillator signal should be received at 60 on the Receiver scale. Adjust the low frequency condenser until the maximum reading is obtained in the output meter with the Receiver set at 60.

Where it is necessary to replace the tuning scale on the Model 112 Superheterodyne, put a mark opposite 55 on the tuning condenser drum. Remove the old scale and place the new one in position so that 55 is exactly opposite the above mark.

MODEL 112,112-A
Above # 174,001
Electrical Values
Voltage

PHILCO RADIO & TELEVISION CORP.

Models 112 and 112-A Receivers

(Above Serial No. 174,001)

Model 112 Receivers are for operation on 115 volt, 50-60 cycle AC lines
Model 112-A Receivers are for operation on 115 volt, 25-60 cycle AC lines

Table 1—Tube Socket Readings taken with A.C. Set Tester A.C. Line—115 volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milli-amperes	Screen-Grid Milli-amperes
Type	Circuit							
24	1st R. F.	2.25	160	75	.2	5.0	4.0	1.
27	Osc.	2.25	55	...	.6	7.5	1.8	..
24	1st Det.	2.25	160	75	2.5	8.0	.8	1.
24	1st I. F.	2.25	160	75	.2	5.0	4.0	1.
24	2nd I. F.	2.25	160	75	6.*	4.0	4.0	1.
27	Det. Rect.	2.25	...	...	...	...	...	..
27	Det. Amp.	2.25	20	...	...	4.0	...	..
27	1st A. F.	2.30	150	...	...	4.0	3.0	..
47	2nd A. F.	2.30	245	255	16.5	...	31**	9.
47	2nd A. F.	2.30	245	255	16.5	...	31**	9.
80	Rect.	5.0	...	...	...	...	54/54	..

*60 Volt scale.
**Special adapter must be used for this test.

Note—Volume control off; station selector turned to low frequency end; range switch set in "Normal" position.

Table 2—Power Transformer Voltages

Terminals	A.C. Volts	
1—2	115.	Primary
3—4	2.67	Heater for 24 and 27 Tubes
6		Not used
5—7	2.68	Filaments for 47 Tubes
10—12	750.	Plates 80 Tube
11		Center Tap 80 Tube
8—9	5.0	Filament 80 Tube
Rubber Covered Lead		Center Tap for 24 and 27 Tubes

Table 3—Condenser Data

No. on Figs.	CAPACITY	COLOR
⑥ ⑨ ⑲ ㊷	.05	Bakelite Container
⑬ ⑭ ㉑	.05 and 250 Ohms	Bakelite Container
㉕	.25	Metal Container
㉚ (59)	.00011	Blue, Golden Yellow
㊱	.00025	Yellow
㊵	.015	Bakelite Container
(53)	.0007	White, Golden Yellow
(60)	.015 Double	Bakelite Container
(65) (68)	6 Mfd.	Electrolytic

Table 4—Resistor Data

No. on Figs.	Resistance (Ohms)	Power (Watts)	COLOR		
			Body	Tip	Dot
(69)	2 Sections 70 ohms ea.		Flat	Wire Wound Tubular	
(63)	205				
(58)	1,000	1	Brown	Black	Red
①	10,000	½	Brown	Black	Orange
㊼ (57)	13,000	1	Brown	Orange	Orange
(51)	15,000	2	Red	Orange	Black
㊲	25,000	1	Red	Green	Orange
㊻	25,000	½	Red	Green	Orange
㉛ ㉒ (54)	51,000	½	Green	Brown	Orange
㉖	70,000	½	Violet	Black	Orange
㊸	70,000	1	Violet	Black	Orange
⑧ ⑩ ㉝ ㉟	99,000	½	White	White	Orange
㊳	99,000	1	White	White	Orange
㉔	490,000	½	Yellow	White	Yellow
㊴	490,000	1	Yellow	White	Yellow

Model 112 Condenser Block Part No. 3754

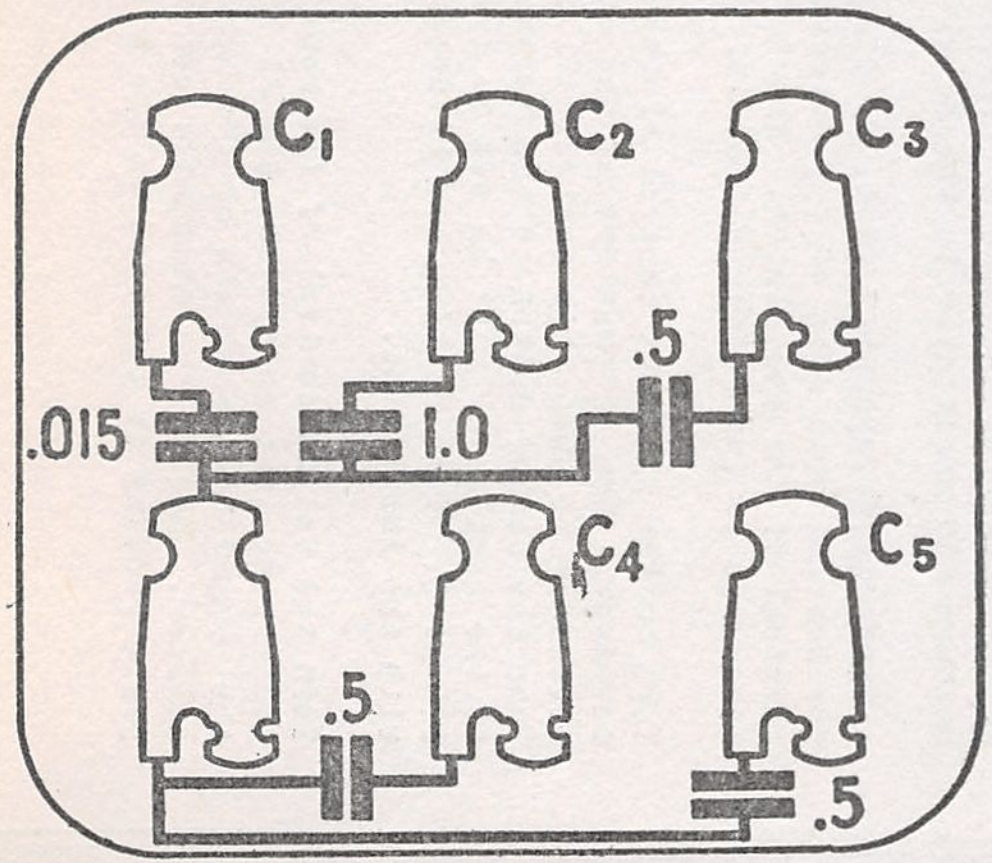

Model 112-A Condenser Block Part No. 3755

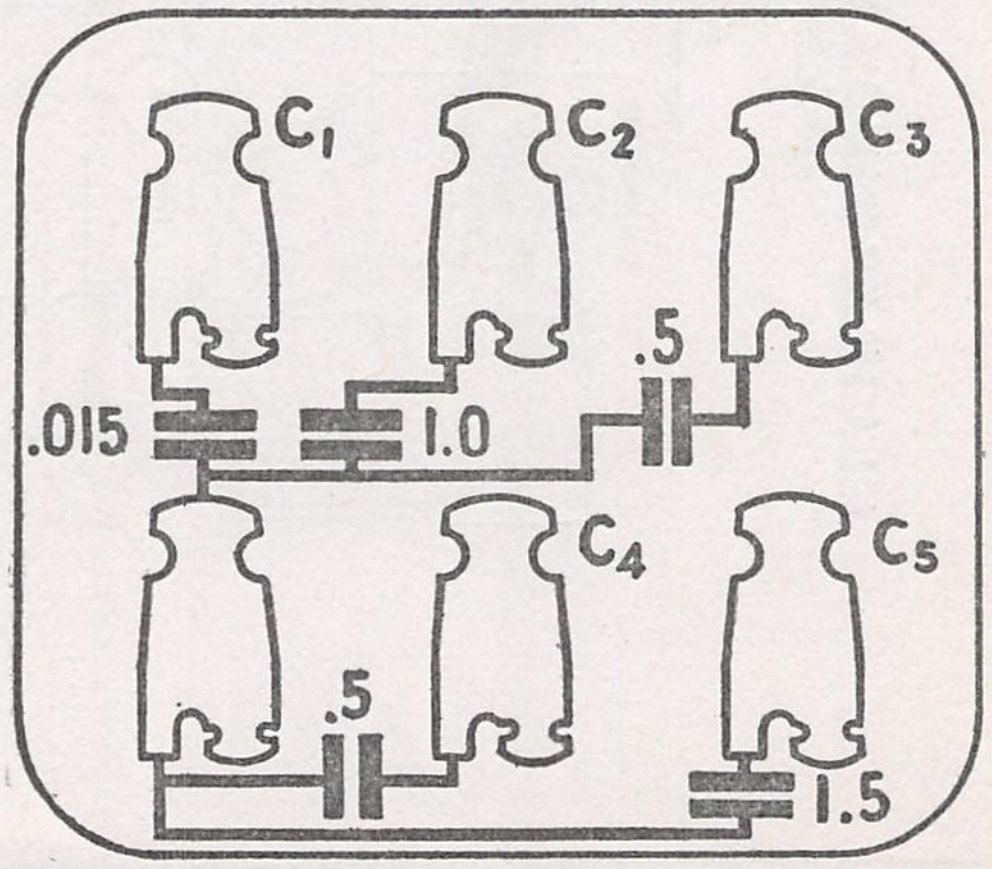

MODEL 112, 112-A
Above #174,001
Parts List
Schematic

PHILCO RADIO & TELEVISION CORP.

MODELS 112 AND 112-A
(Above Serial No. 174,001)

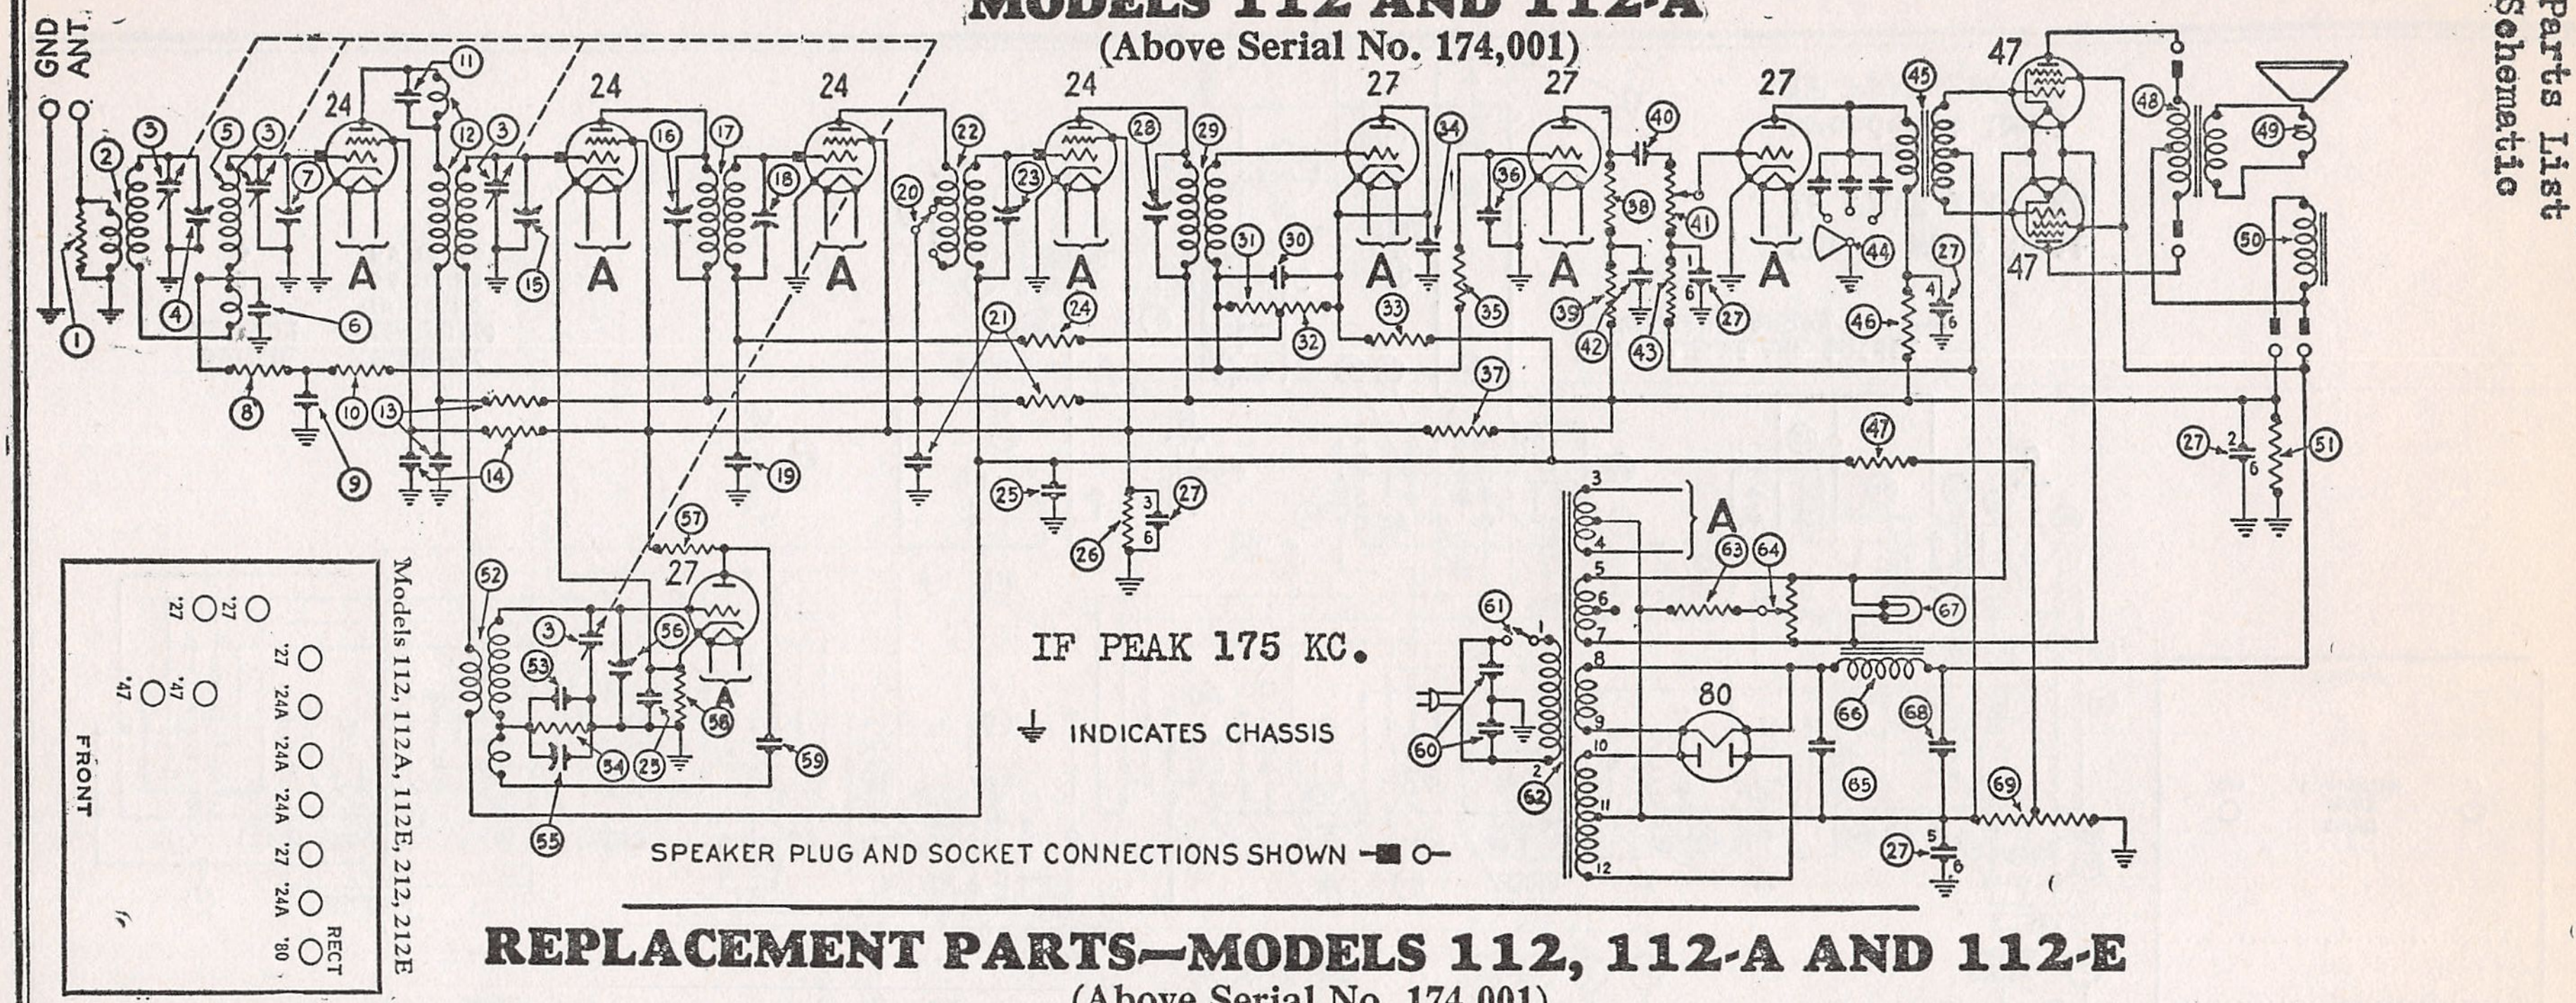

IF PEAK 175 KC.

⏚ INDICATES CHASSIS

SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN ■ ○

REPLACEMENT PARTS—MODELS 112, 112-A AND 112-E
(Above Serial No. 174,001)

①	Resistor (10,000 ohms)	4412
②	First R. F. Coil	3884-S
③	Tuning Condenser	4000-D
④	Compensating Condenser	04000-F
⑤	Second R. F. Coil	3884-T
⑥	By-pass Condenser (.05 mfd.)	3615-J
⑦	Compensating Condenser	04000-D
⑧	Resistor (99,000 ohms)	4411
⑨	By-pass Condenser (.05 mfd.)	3615-D
⑩	Resistor (99,000 ohms)	4411
⑪	Condenser	3892-A
⑫	First Detector Coil	3884-V
⑬	By-pass Condenser & Resistor (.05 mfd. and 250 ohms)	3615-Z
⑭	By-pass Condenser & Resistor (.05 mfd. and 250 ohms)	3615-B
⑮	Compensating Condenser	04000-E
⑯	Compensating Condenser	04000-J
⑰	First I. F. Transformer	03038
⑱	Compensating Condenser	04000-J
⑲	By-pass Condenser (.05 mfd.)	3615-J
⑳	Range Switch	3116
㉑	By-pass Condenser & Resistor (.05 mfd. and 250 ohms)	3615-B
㉒	Second I. F. Transformer	03039
㉓	Compensating Condenser	04000-J
㉔	Resistor (490,000 ohms)	4517
㉕	By-pass Condenser (¼ mfd.)	3557
㉖	Resistor (70,000 ohms)	5385
㉗	Filter Condenser Block (50-60 cycles)	03489
	Filter Condenser Block (25-40 cycles)	03589
㉘	Compensating Condenser	04000-L
㉙	Third I. F. Transformer	03040
㉚	Condenser (110 mmf.)	4519
㉛	Resistor (51,000 ohms)	4518
㉜	Resistor (51,000 ohms)	4518
㉝	Resistor (99,000 ohms)	4411
㉞	By-pass Condenser (.5 mfd.) 2 used	3583
㉟	Resistor (99,000 ohms)	4411
㊱	Condenser (250 mmf.)	3082
㊲	Resistor (25,000 ohms)	3656
㊳	Resistor (99,000 ohms)	3769
㊴	Resistor (490,000 ohms)	3768
㊵	Condenser (.015 mfd.)	3793-F
㊶	Volume Control	4093
㊷	By-pass Condenser (.05 mfd.)	3615-S
㊸	Resistor (70,000 ohms)	3542
㊹	Tone Control	03137
㊺	Push-pull Input Transformer	5662
㊻	Resistor (25,000 ohms)	4516
㊼	Resistor (13,000 ohms)	3766
㊽	Push-pull Output Transformer	2635
㊾	Voice Coil and Cone Assembly	02997
㊿	Speaker Field (assembled with pot and frame)	02892
(51)	Resistor (15,000 ohms)	5718
(52)	Oscillator Coil	3884-U
(53)	Condenser (700 mmf.)	4520
(54)	Resistor (50,000 ohms)	4518
(55)	Compensating Condenser	04000-F
(56)	Compensating Condenser	04000-F
(57)	Resistor (13,000 ohms)	3766
(58)	Resistor (1,000 ohms)	4590
(59)	Condenser (110 mmf.)	4519
(60)	By-pass Condenser (.015 mfd. double)	3793-E
(61)	On-Off Switch	4095
(62)	Power Transformer (115 volts 50-60 cycles)	5594
	Power Transformer (115 volts 25-40 cycles)	5595
	Power Transformer (230 volts 50-60 cycles)	5596
(63)	Resistor (205 ohms)	03513
(64)	Hum Control Potentiometer	5650
(65)	Electrolytic Condenser (6 mfd.)	4916
(66)	Filter Choke	5643
(67)	Pilot Light	3463
(68)	Electrolytic Condenser (6 mfd.)	4916
(69)	Resistor (2 sections 70 ohms each)	3764

MODEL 470,470-A
Schematic
Chassis

PHILCO RADIO & TELEVISION CORP.

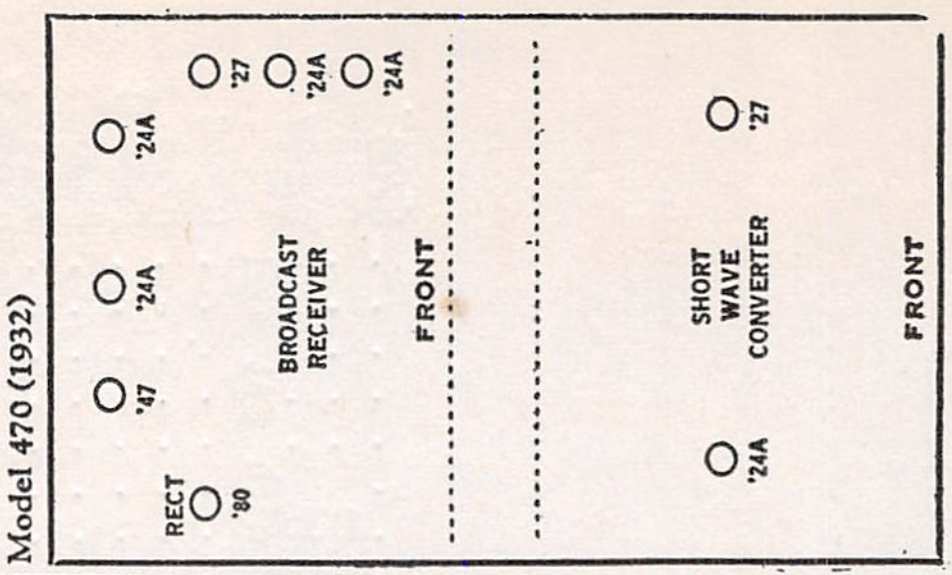
Model 470 (1932)
RECT '80
'47
'24A
'24A
'27
'24A
'24A
BROADCAST RECEIVER
FRONT
'24A
'27
SHORT WAVE CONVERTER
FRONT

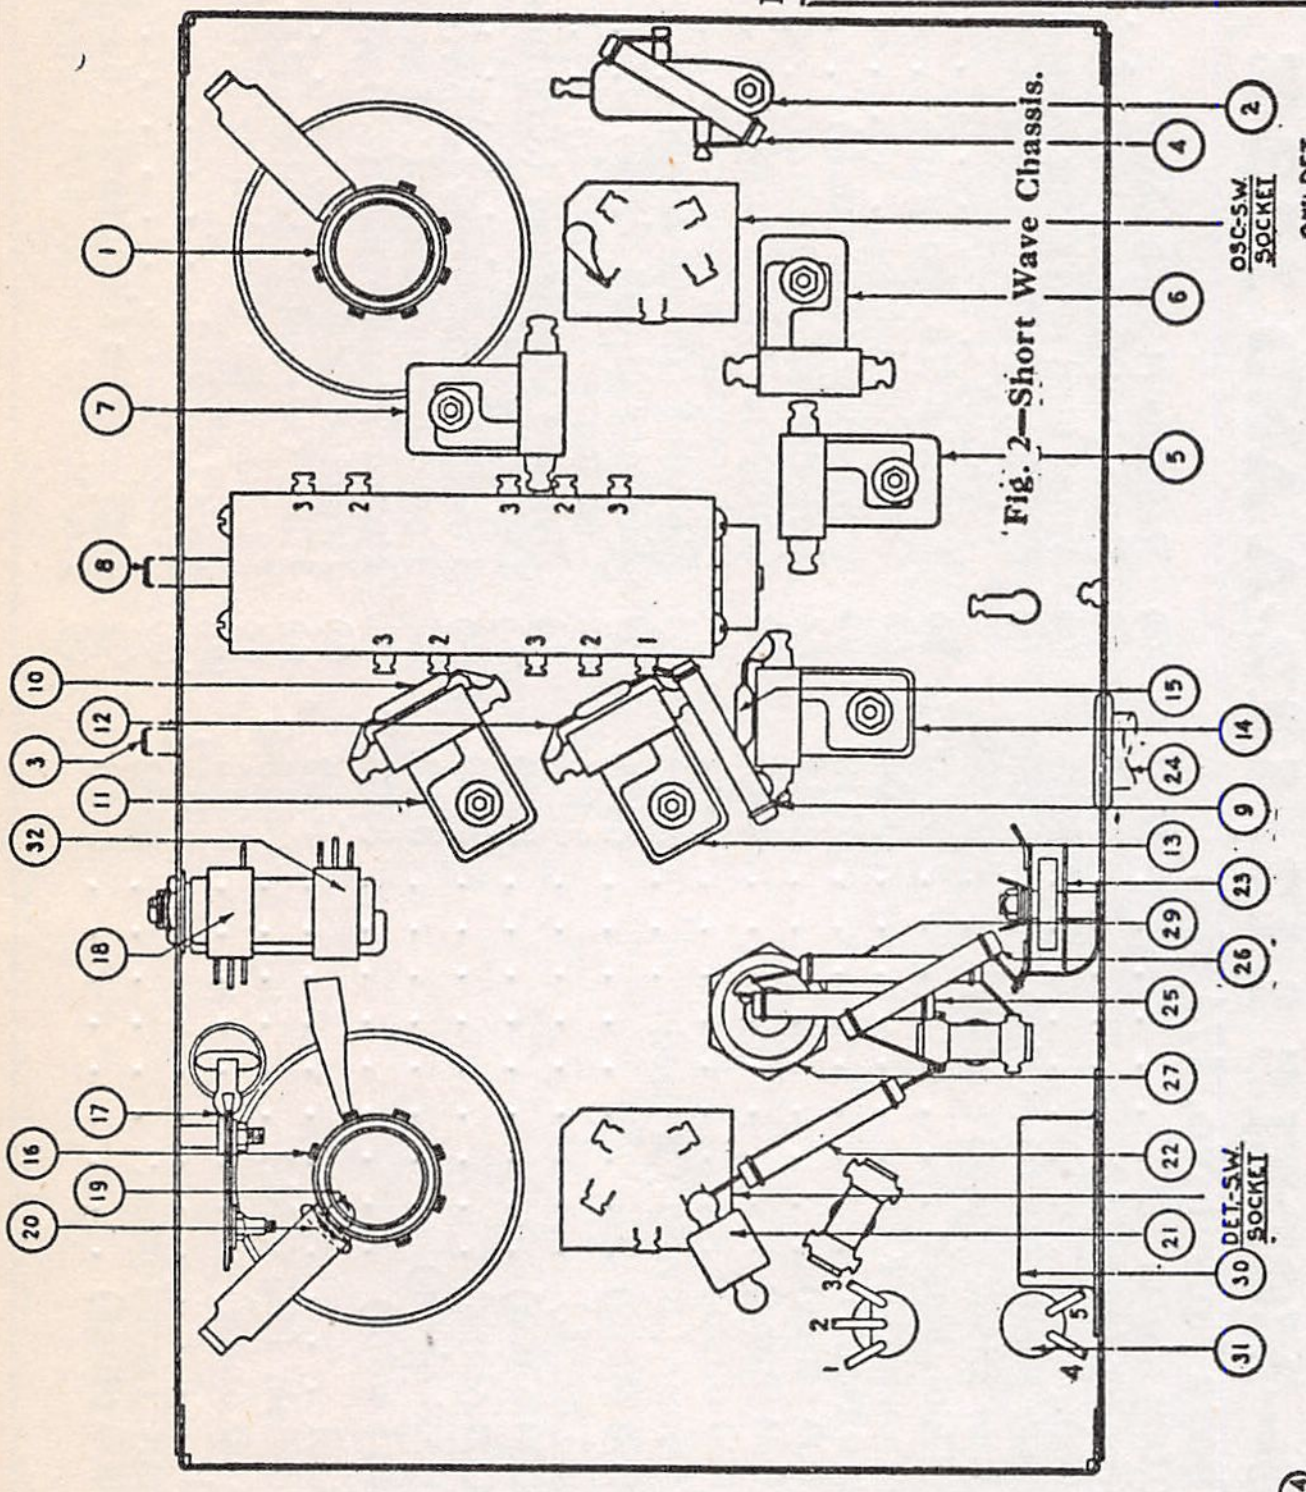
Fig. 2—Short Wave Chassis.
OSC-SW SOCKET
DET-SW SOCKET

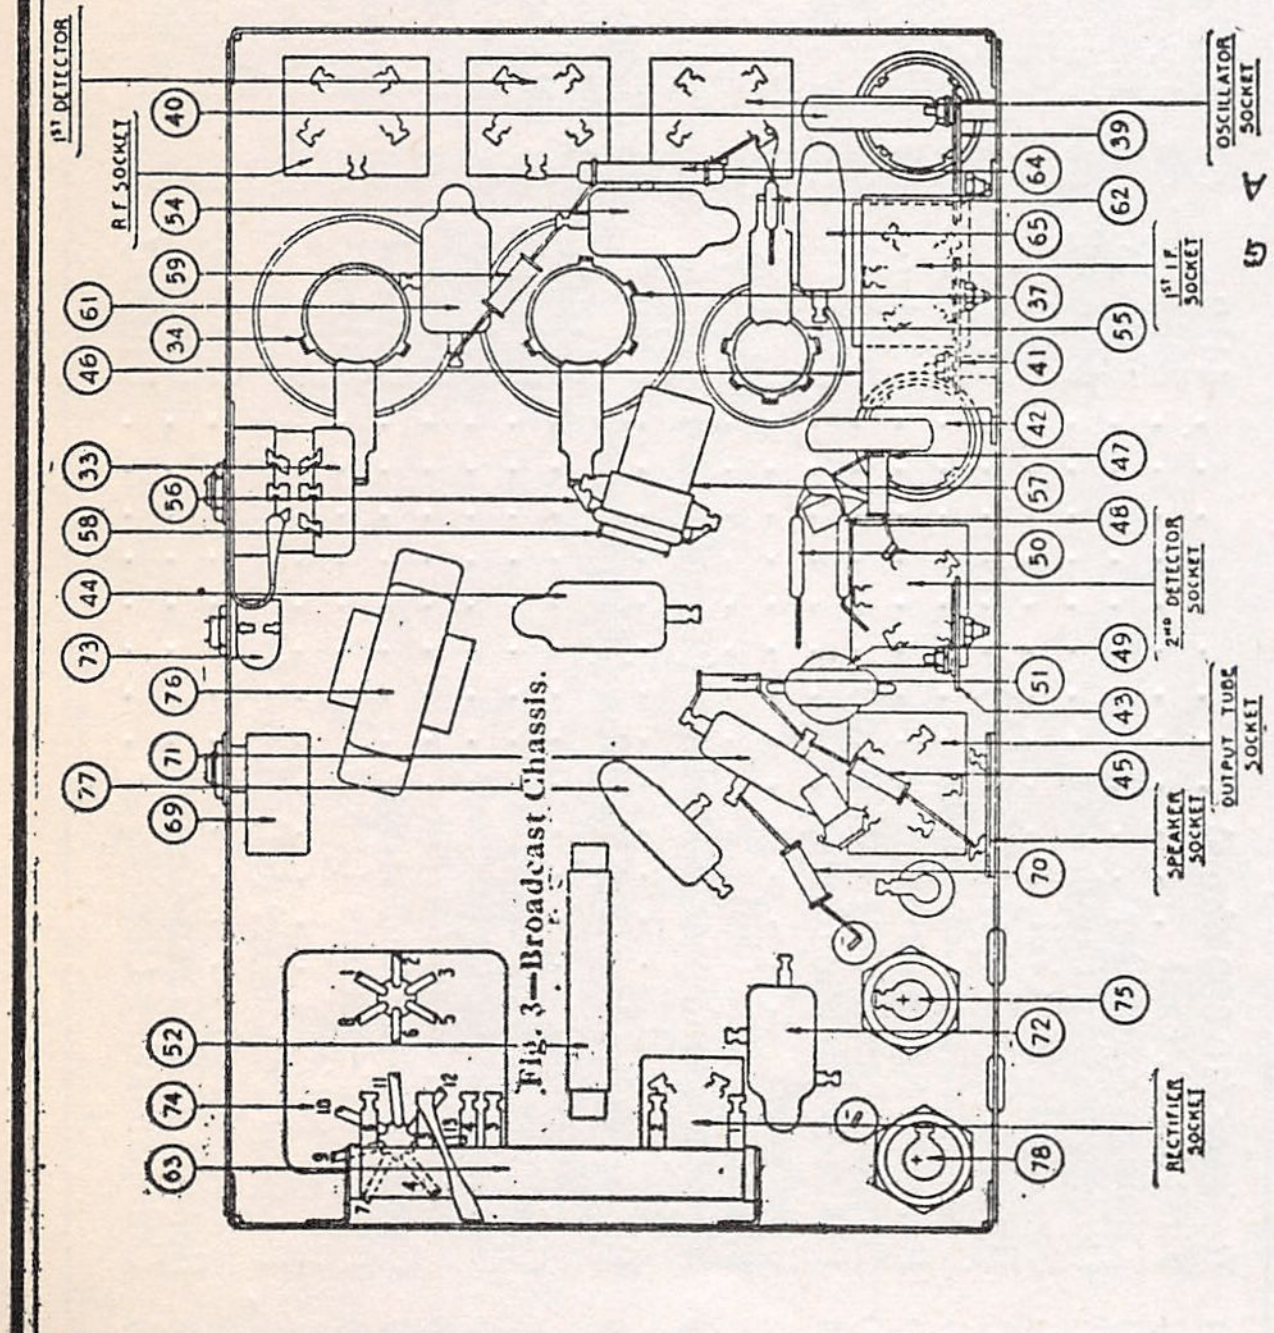
Fig. 3—Broadcast Chassis.
1st DETECTOR
R.F. SOCKET
OSCILLATOR SOCKET
1st I.F. SOCKET
2nd DETECTOR SOCKET
OUTPUT TUBE SOCKET
SPEAKER SOCKET
RECTIFIER SOCKET

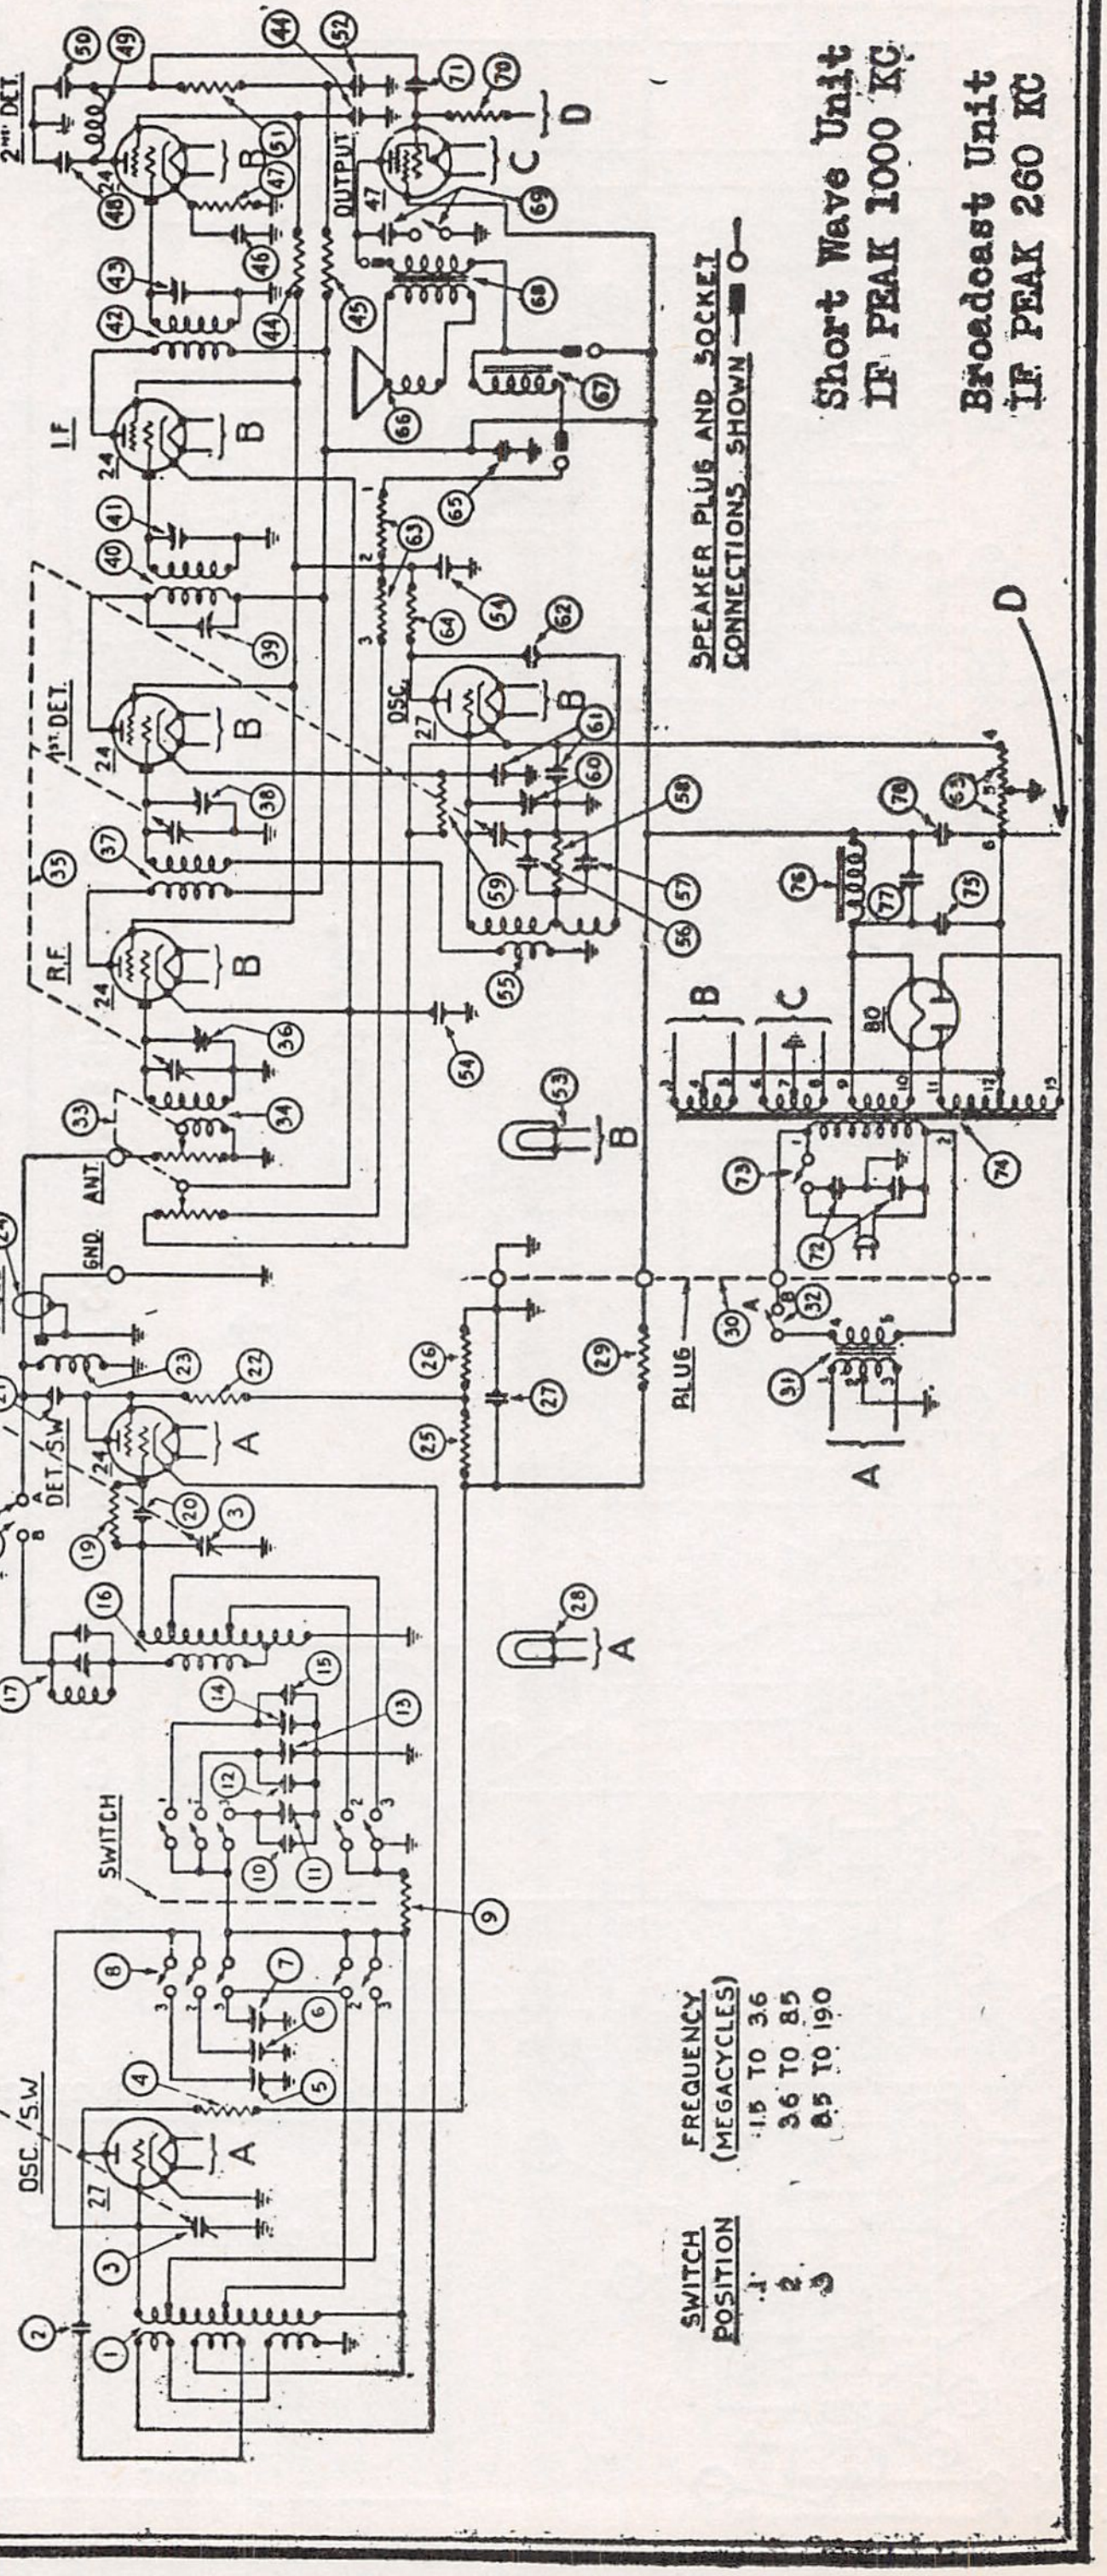
2nd DET
OUTPUT
I.F.
1st DET
OSC
R.F.
ANT
GND
SHIELDED CABLE
DET/SW
OSC/SW
SWITCH
PLUG
A
B
C
D
24
27
47
80

SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN —■○

SWITCH POSITION	FREQUENCY (MEGACYCLES)
1	1.5 TO 3.6
2	3.6 TO 8.5
3	8.5 TO 190

Short Wave Unit
IF PEAK 1000 KC

Broadcast Unit
IF PEAK 260 KC

PHILCO RADIO & TELEVISION CORP.

MODEL 470,470-A
Voltage
Electrica. Values

Models 470 and 470-A Receivers

Table 1—Tube Socket Data taken with AC Set Tester—AC Line 115 Volts

Tube		Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milli-amperes
Type	Circuit						
	SHORT WAVE UNIT*						
27	Osc.	2.2	110	...	3.3	0	...
24	Det.	2.2	24	24	5.	0	...
	BROADCAST UNIT						
24	R. F.	2.4	255	50	3.5	25	7.5
24	1st. Det.	2.4	260	60	9	38	...
27	Osc.	2.4	60	...	3.5	25	2.
24	I. F.	2.4	265	50	3	22	3.5
24	2nd Det.	2.4	116	40	7	25	...
47	Output	2.5**	205**	220**	.7**	..	28**
80	Rectifier	4.5	260/Plate				

*The voltage readings of the short wave unit were taken from the under side of the chassis, using a Weston multi-range voltmeter, 1000 Ohms per volt. The radio set tester cannot be used, either for voltage or plate current readings because of the effect of the long leads through the set tester cord.

**These readings must likewise be taken from the socket terminals on the under side of the chassis unless the set tester is especially equipped with an adapter for testing pentode tubes.

All the above readings were taken with volume control at maximum.

Table 2—Power Transformer Voltage

Terminals	A. C. Volts	Circuit	Color
		SHORT WAVE UNIT	
4–5	105 to 125	Primary	Black
1–3	2.5	Secondary	Yellow
2	...	Center Tap 1–3	Green
		BROADCAST UNIT	
1–2	105 to 125	Primary	White (Small Gauge)
3–5	2.5	Filament of 47	Dark Green
6–8	2.5	Filament of 24	Black (Heavy Gauge)
9–10	5.	Filament of 80	Light Blue
11–13	700	Plate of 80	Yellow
4	...	Center Tap of 3–5	Black, Green Tracer
7	...	Center Tap of 6–8	Black, Yellow Tracer
12	...	Center Tap of 11–13	Yellow, Green Tracer

Table 3—Resistor Data

No. on Figs. 1, 2 and 3	Terminal	Power (Watts)	Resistance (Ohms)	Color		
				Body	Tip	Dot
㊹	....	....	250	....	Black Bakelite	....
(63)	1–2	....	1060	....	Long Tubular	....
	2–3	....	2300			
	4–5	....	70			
	5–6	....	240			
㉙	....	1	5,000	Green	Black	Red
(59)	....	.5	5,000	Green	Black	Red
④ (64)	....	1	13,000	Brown	Orange	Orange
㉕ ㉖	....	1	32,000	Orange	Red	Orange
㊺	(50–60 cycles)	.5	45,000	Yellow	Green	Orange
㊼ (58)	....	.5	51,000	Green	Brown	Orange
㉒	....	1	99,000	White	White	Orange
㊺	....	.5	99,000	White	White	Orange
⑨	....	1	240,000	Red	Yellow	Yellow
(51) (70)	....	.5	240,000	Red	Yellow	Yellow
⑲	....	.5	2,000,000	Red	Black	Green

PHILCO RADIO & TELEVISION CORP.

MODEL 470, 470-A
Parts List

Table 4—Condenser Data

Nos. on Fig. 1, 2 and 3	Capacity (Mfd.)	Container	Nos. on Fig. 1, 2 and 3	Capacity (Mfd.)	Container
⑳ (62)	.00011	Blue and Golden Yellow	(54) (61)	.09 (Double)	Black Bakelite
⑭ ㉑ ㊿	.00025	Yellow	(77)	.09 (50–60 cycles)	Black Bakelite
(56)	.00041	Yellow and Orange	(77)	.18 (25–40 cycles)	Black Bakelite
㊽	.0005	Green	(52)	.25	Metal
⑫	.0008	Green and Orange	㊻	.5	Metal
⑩	.00125	Blue and Orange	(75)	6 (50–60 cycles)	Electrolytic
(71)	.01	Black Bakelite	(75)	10 (25–40 cycles)	Electrolytic
(72)	.015 (Double)	Black Bakelite	(78)	6 (50–60 cycles)	Electrolytic
② (65)	.05	Black Bakelite	(78)	10 (25–40 cycles)	Electrolytic

No. on Figs. 1 and 2	Description	Part No.
①	Oscillator Coil*	03734
②	By-pass Condenser (.05 mfd.)	3615-M
③	Gang Condenser Assembly	03692
④	Resistor (13,000 ohms)	3766
⑤	Compensating Condenser (19 MC End of Top Scale)	04000-E
⑥	Compensating Condenser (8.5 MC End of Center Scale)	04000-E
⑦	Compensating Condenser (3.6 MC End of Bottom Scale)	04000-E
⑧	Frequency Control Switch	03751
⑨	Resistor (240,000 ohms)	3768
⑩	Condenser (1,250 mmf.)**	5886
⑪	Compensating Condenser (8.5 MC End of Top Scale**	04000-F
⑫	Condenser (800 mmf.)	5878
⑬	Compensating Condenser (3.6 MC End of Center Scale)	04000-F
⑭	Condenser (250 mmf.)	3082
⑮	Compensating Condenser (1.5 MC End of Bottom Scale)	04000-F
⑯	Detector Transformer*	03734
⑰	Frequency Filter	03662
⑱	Antenna Switch Assembled with ㉜	5796
⑲	Resistor (2 megohms) Assembled with ⑳	03879
⑳	Condenser (110 mmf.) Assembled with ⑲	03879
㉑	Condenser (250 mmf.)	3082
㉒	Resistor (99,000 ohms)	3767
㉓	R. F. Choke	03893
㉔	Shielded Cable	L-1278
㉕	Resistor (32,000 ohms)	3525
㉖	Resistor (32,000 ohms)	3525
㉗	Electrolytic Condenser (6 mfd.)	4916
㉘	Pilot Light (Short Wave Unit)	3463
㉙	Resistor (5,000 ohms)	3526
㉚	Plug	03913
㉛	Filament Transformer (50-60 cycles)	5906
	Filament Transformer (25-40 cycles)	5923
	Filament Transformer (50-60 cycles, 230 volts)	5924
㉜	On-off Switch (Assembled with ⑱)	5796
㉝	Volume Control	5039
㉞	First R. F. Transformer	03082
㉟	Tuning Condenser (50-60 cycles)	03076
	Tuning Condenser (25-40 cycles)	03077
㊱	Compensating Condenser — Antenna — Part of Gang Condenser Assembly	
㊲	First Detector Transformer	03083
㊳	Compensating Condenser — Detector — Part of Gang Condenser Assembly	
㊴	Compensating Condenser — First I. F. Primary	04000-J
㊵	First I. F. Transformer	03091
㊶	Compensating Condenser — First I. F. Secondary	04000-H
㊷	Second I. F. Transformer	03092
㊸	Compensating Condenser—Second I. F.	04000-K
㊹	Resistor (250 ohms Combined with .09 mfd. Condenser)	4989-E

No. on Figs. 1 and 2	Description	Part No
㊺	Resistor (45,000 ohms) 50-60 cycles	5256
	Resistor (99,000 ohms) 25-40 cycles	4411
㊻	Condenser (.5 mfd.)	3583
㊼	Resistor (51,000 ohms)	4518
㊽	Condenser (500 mmf.)	3910
㊾	R. F. Choke	03086
㊿	Condenser (250 mmf.)	3082
(51)	Resistor (240,000 ohms)	4410
(52)	Condenser (.25 mfd.)	4264
(55)	Pilot Light (Broadcast Unit)	3463
(54)	Condenser (.09 mfd. double)	4989-C
(55)	Oscillator Coil	03084
(56)	Condenser (410 mmf.)	5120
(57)	Compensating Condenser—Low Frequency	04000-F
(58)	Resistor (51,000 ohms)	4518
(59)	Resistor (5,000 ohms)	5310
(60)	Compensating Condenser—High Frequency —Part of Gang Condenser Assembly	
(61)	Condenser (.09 mfd. double)	4989-C
(62)	Condenser (110 mmf.)	4519
(63)	B. C. Resistor	03079
(64)	Resistor (13,000 ohms)	3766
(65)	Condenser (.05 mfd.)	3615-L
(66)	Voice Coil and Cone Assembly	02996
(67)	Field Coil Assembled with Pot	02966
(68)	Output Transformer	2673
(69)	Tone Control	03140
(70)	Resistor (240,000 ohms)	4410
(69)	Condenser (.01 mfd.)	3903-L
(72)	Condenser (.015 mfd. double)	3793-K
(73)	"On-off" Switch	4095
(74)	Power Transformer (50-60 cycles)	5117
	Power Transformer (25-40 cycles)	5118
	Power Transformer (50-60, 230 volts)	5119
(75)	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
	Electrolytic Condenser (10 mfd.) 25-40 cycles	5142
(76)	Choke	4819
(77)	Condenser (.09 mfd.) 50-60 cycles	4989-J
	Condenser (.18 mfd.) 25-40 cycles	4989-K
(78)	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
	Electrolytic Condenser (10 mfd.) 25-40 cycles	5142
	Line Cord and Plug	L-943
	Tube Shield	03987
	Bezel (Broadcast)	5008
	Bezel (Short Wave)	5178
	Knob (Large)	03063
	Knob (Small)	03064
	Knob (On-Off Switch—Broadcast)	03437
	Knob (Control Switch—Short Wave)	5811
	Spring (For Small Knobs)	4147
	Spring (For Large Knobs)	5262
	Grid Clip	4897
	Five Prong Socket Assembly	4956
	Four Prong Socket Assembly	4955
	Dial Complete (Broadcast)	03031
	Dial Complete (Short Wave)	03890

*Includes matched oscillator coil and detector transformer.

**These parts replaced on later production by .0018 mfd. condenser, part 6018.

PHILCO RADIO & TELEVISION CORP.

MODEL 490
Schematic
Voltage

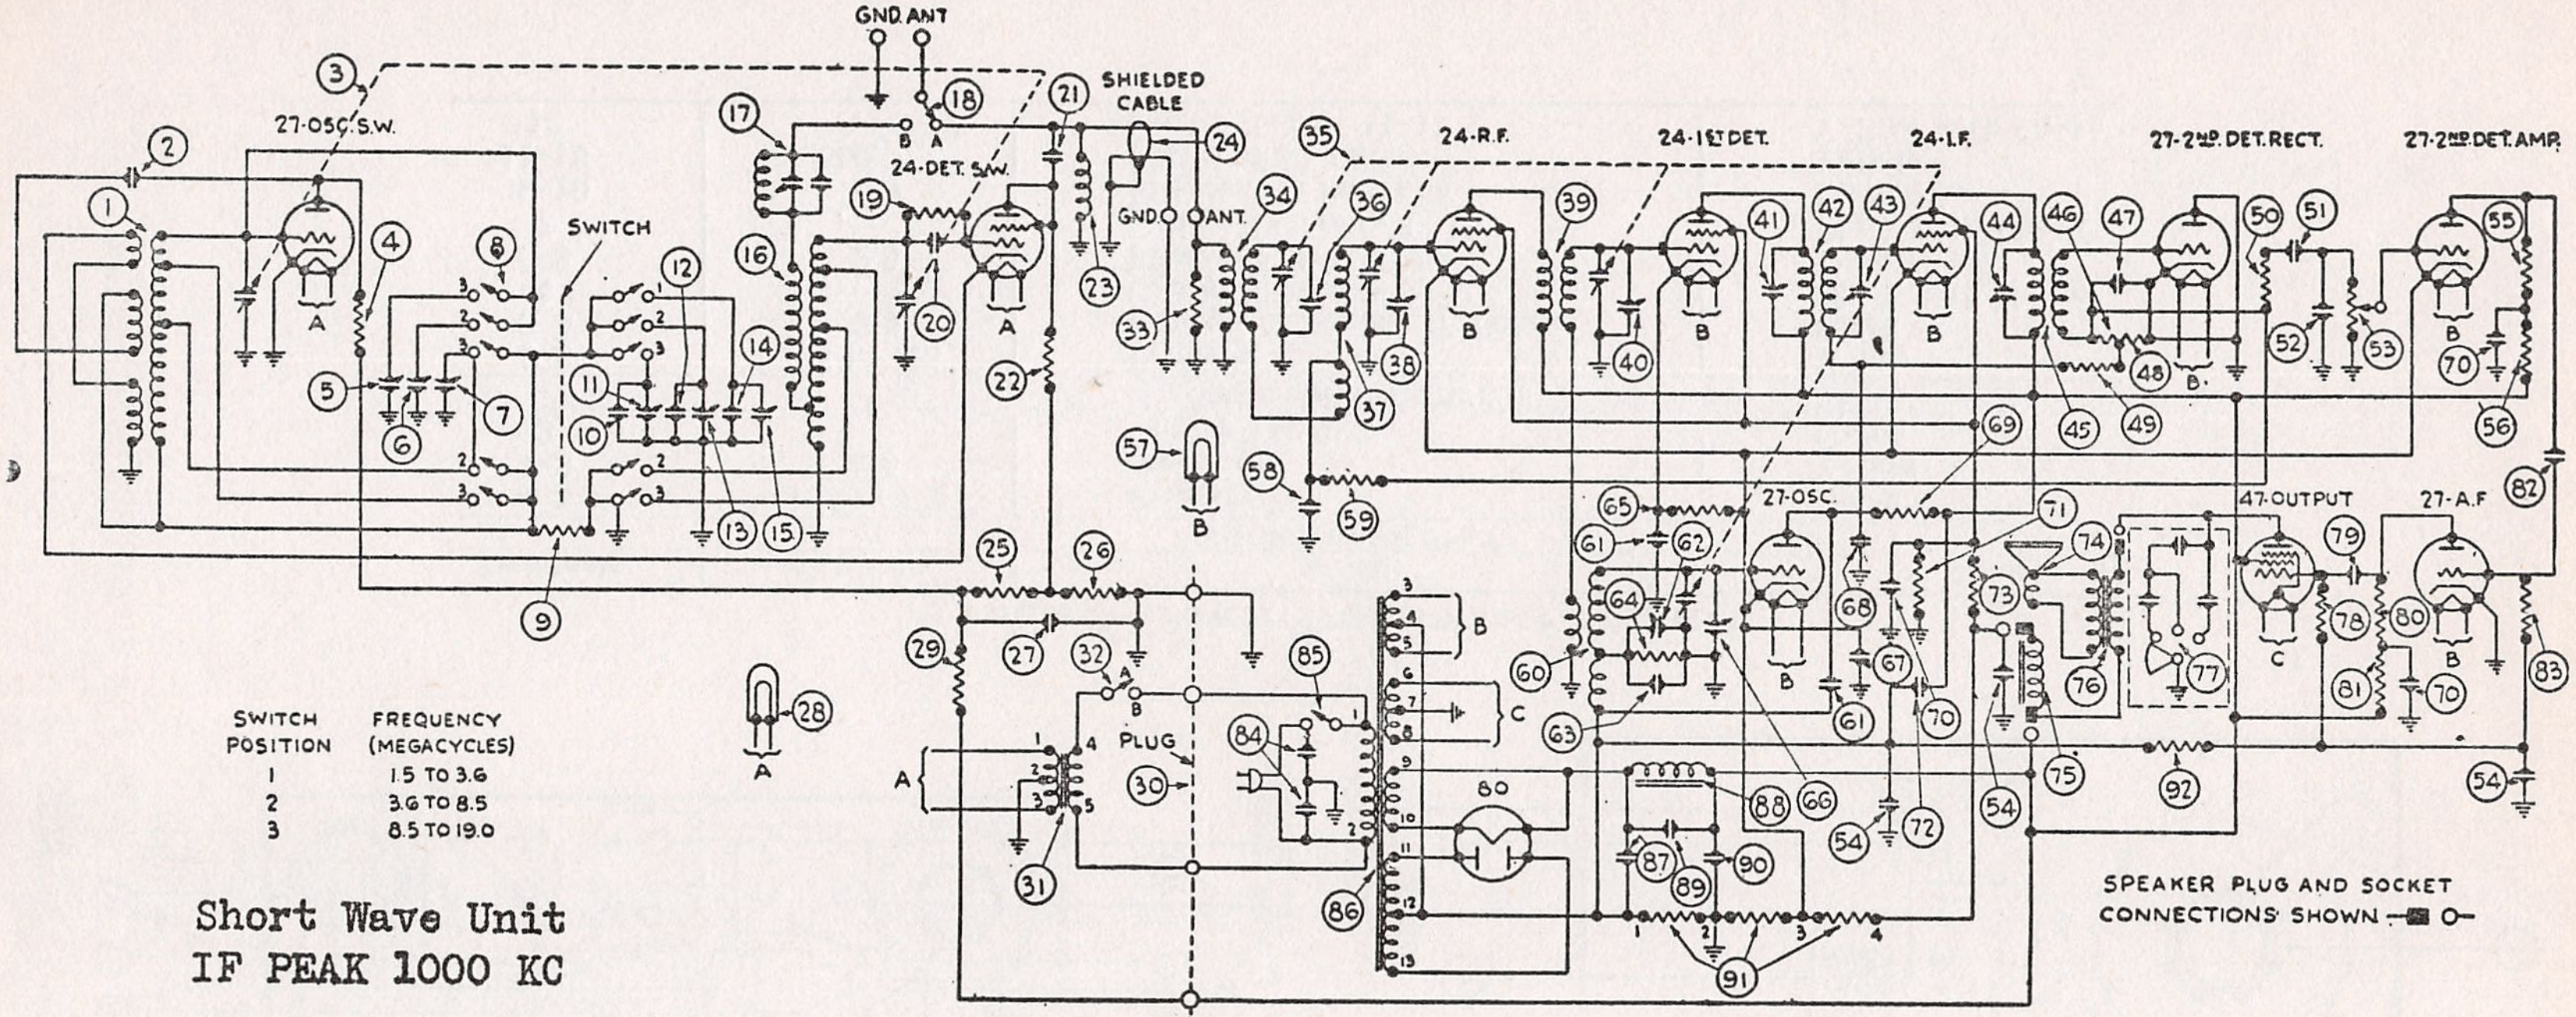
GND. ANT.
SHIELDED CABLE
27-OSC. S.W.
SWITCH
24-DET. S.W.
24-R.F.
24-1ST DET.
24-I.F.
27-2ND DET. RECT.
27-2ND DET. AMP.
27-OSC.
47-OUTPUT
27-A.F.
80
GND
ANT.
PLUG
A
B
C
SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN

SWITCH POSITION	FREQUENCY (MEGACYCLES)
1	1.5 TO 3.6
2	3.6 TO 8.5
3	8.5 TO 19.0

Short Wave Unit
IF PEAK 1000 KC

Broadcast Unit
IF PEAK 175 KC

Model 490 Receiver

Table 1—Tube Socket Readings—Line Voltage 115 volts

Tube Type	Tube Circuit	Filament Volts	Plate Volts	Screen Grid Volts	Control Grid Volts	Cathode Volts	Plate Milli-amperes
			SHORT WAVE UNIT*				
27	Osc.	2.2	110		3.3	0	
24	1st Det.	2.2	24	24	5.	0	
			BROADCAST UNIT*				
24	R. F.	2.1	220	50	6.	15	2.
27	Osc.	2.1	80	. . .	6	15	2.3
24	1st Det.	2.1	210	55	5	15	.5
24	I. F.	2.1	220	60	8	15	0
27	Rect. Det.	2.1	. . .	. . .	.	14	. . .
27	Ampl. Det.	2.1	150	. . .	0	15	1.3
27	1st Audio	2.1	150	. . .	2	15	1.5
47	Output	2.4**	205**	220**	7**	. . .	28.**
80	Rectifier	4.5	220/Plate	. . .	. . .	. . .	. . .

*The voltage readings of the short wave unit were taken from the under side of the chassis, using a Weston Multi-range voltmeter, 1000 ohms per volt. The radio set tester cannot be used, either for voltage or plate current readings because of the effect of the long leads through the set tester cord.
**These readings must likewise be taken from the socket terminals on the under side of the chassis unless the set tester is especially equipped with an adapter for testing pentode tubes.

Model 490 (1932)

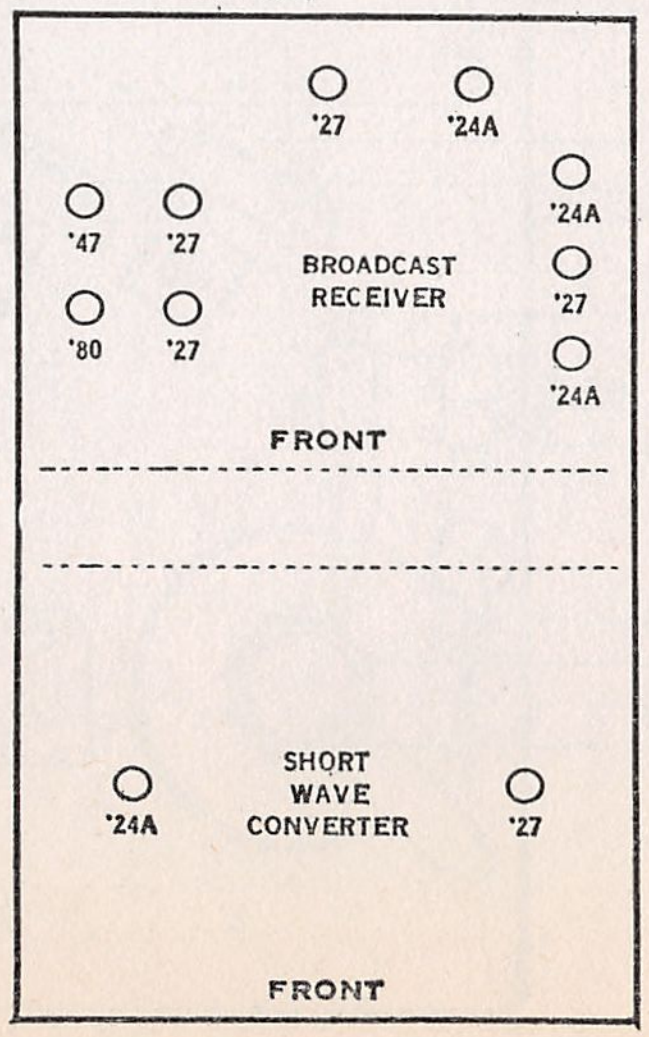
'27
'24A
'47
'27
'24A
'80
'27
'27
'24A
BROADCAST RECEIVER
FRONT
'24A
SHORT WAVE CONVERTER
'27
FRONT

MODEL 490
Chassis
Transformer Data

PHILCO RADIO & TELEVISION CORP.

MODEL 490

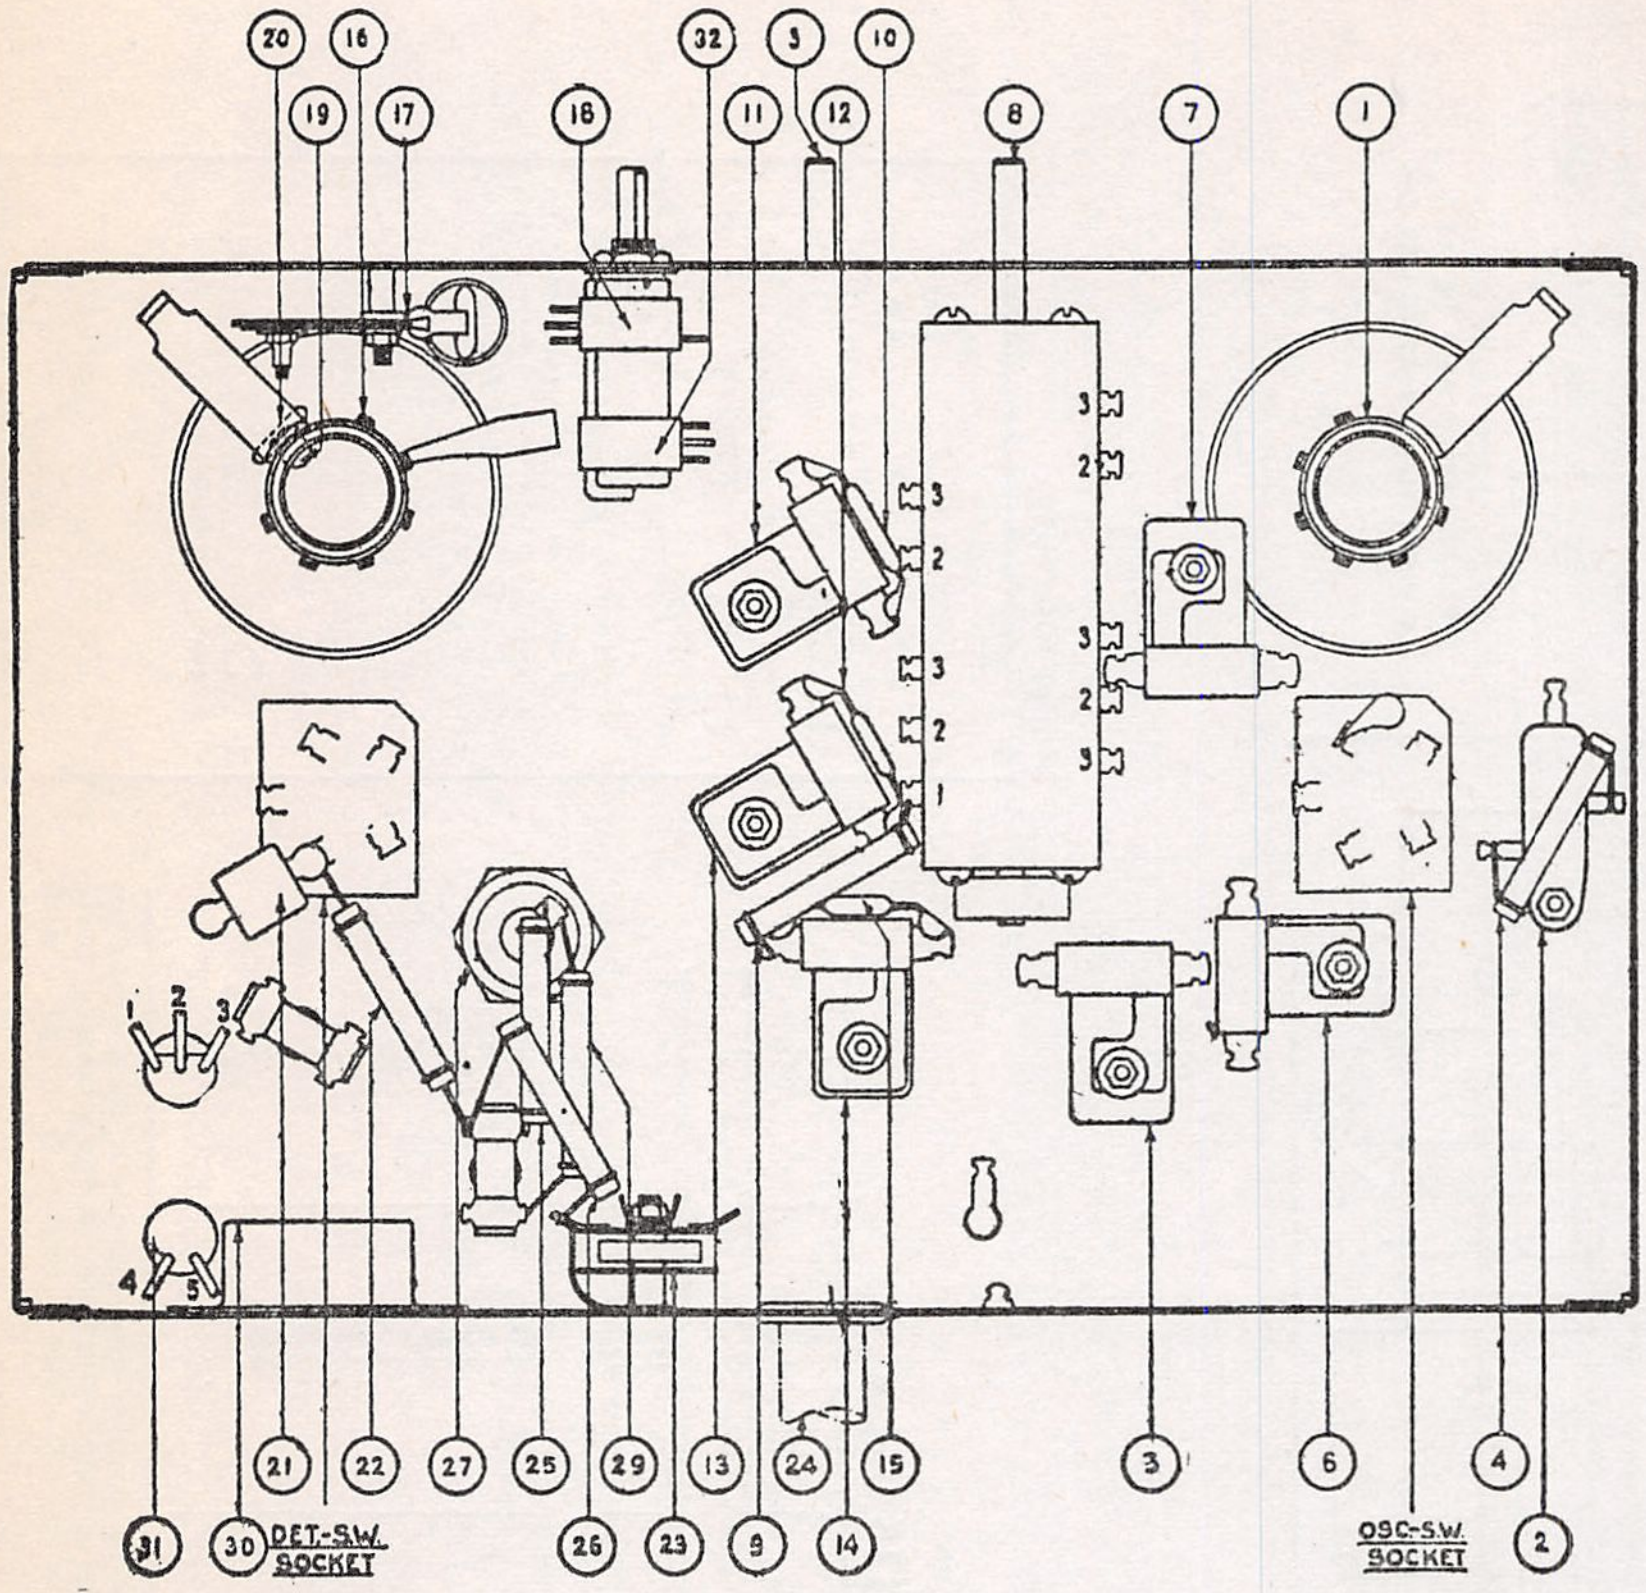
20
16
32
5
10
19
17
18
11
12
8
7
1
1
2
3
4
5
21
22
27
25
29
13
24
15
3
6
4
31
30
DET-S.W. SOCKET
26
23
9
14
OSC-S.W. SOCKET
2

Fig. 2—Short Wave Chassis.

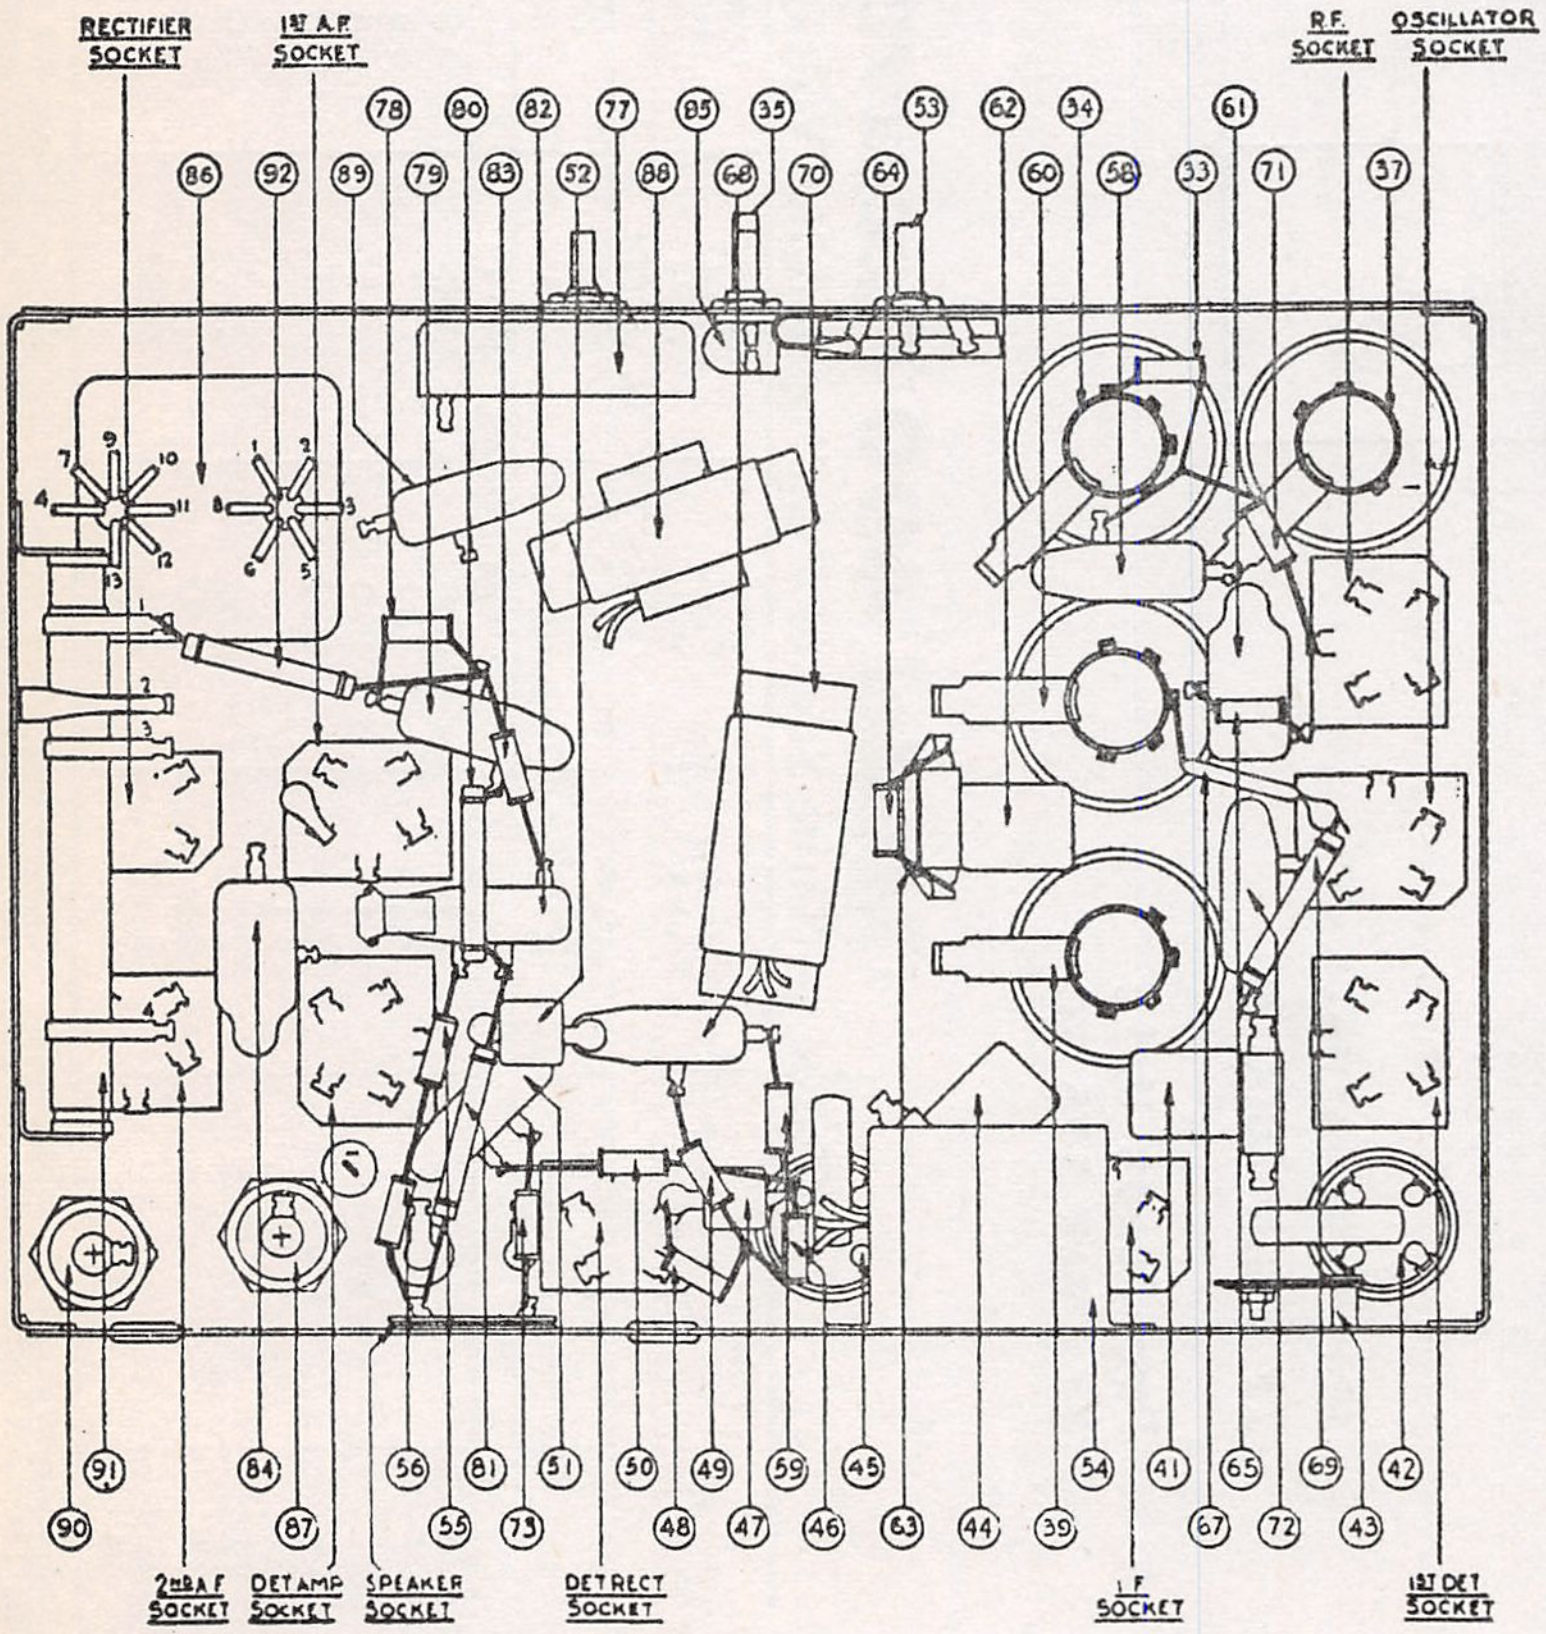
RECTIFIER SOCKET
1ST A.F. SOCKET
R.F. SOCKET
OSCILLATOR SOCKET
78
80
82
77
85
35
53
62
34
61
86
92
89
79
83
52
88
68
70
64
60
58
33
71
37
91
84
56
81
51
50
49
59
45
54
41
65
69
42
90
87
55
73
48
47
46
63
44
39
67
72
43
2ND A.F SOCKET
DET AMP SOCKET
SPEAKER SOCKET
DETECT SOCKET
I.F. SOCKET
1ST DET SOCKET

Fig. 3—Broadcast Chassis.

Table 2—Power Transformer Voltages

Terminals	A.C. Volts	Circuit	Color
		SHORT WAVE UNIT	
4–5	105 to 125	Primary	Black
1–3	2.5	Secondary	Yellow
2		Center Tap 1–3	Green
		BROADCAST UNIT	
1–2	105 to 125	Primary	White
3–5	2.5	Heaters of 24 and 27 Tubes	Black
4	...	Center Tap of 3–5	Black with Yellow
6–8	2.5	Filament of 47 Tube	Dark Green
7	...	Center Tap of 6–8	Black with Green
9–10	5.0	Filament of 80 Tube	Light Blue
11–13	650.	Plates of 80 Tube	Yellow
12	...	Center Tap of 11–13	Yellow with Green

MODEL 490
Electrical Values

PHILCO RADIO & TELEVISION CORP.

Condenser Data

Nos. on Figs. 1, 2 and 3	Capacity Mfd.	Container
⑳ ㊼ (67)	.00011	Blue and Golden Yellow
⑭ ㉑ (52)	.00025	Yellow
(63)	.0007	White and Golden Yellow
⑫	.0008	Green and Orange
⑩	.00125	Blue and Orange
(51) (79) (82)	.01	Black Bakelite
(84)	.015 Double	Black Bakelite
② (58) (68) (72)	.05	Black Bakelite
(61) (89)	.09 (50-60 cycles)	Black Bakelite
(89)	.18 (25-40 cycles)	Black Bakelite
(54)	3–.25 each	Metal
(70)	1, .25, .1 (50-60 cycles)	Metal
	1, .25, .25 (25-40 cycles)	Metal
(87)	6 (50-60 cycles)	Electrolytic
(90)	6 (50-60 cycles)	Electrolytic
(87)	10 (25-40 cycles)	Electrolytic
(90)	14 (25-40 cycles)	Electrolytic

Resistor Data

Nos. on Figs. 1, 2 and 3	Terminal	Power (Watts)	Resistance (Ohms)	COLOR Body	COLOR Tip	COLOR Dot
(91)	1–2 2–3 3–4	..	180 60 3500		Long Tubular	
㉙	......	1	5,000	Green	Black	Red
(65)	......	½	5,000	Green	Black	Red
㉝	......	½	10,000	Brown	Black	Orange
④	......	1	13,000	Brown	Orange	Orange
(73)	......	½	25,000	Red	Green	Orange
(80) (81)	......	1	25,000	Red	Green	Orange
㉕ ㉖	......	1	32,000	Orange	Red	Orange
㊻ ㊽ (55) (64)	......	½	51,000	Green	Brown	Orange
(69) (81)	......	1	51,000	Green	Brown	Orange
(56) (71)	......	½	70,000	Violet	Black	Orange
㉒	......	1	99,000	White	White	Orange
㊿ (78)	......	½	99,000	White	White	Orange
⑨ (92)	......	1	240,000	Red	Yellow	Yellow
(78) (83)	......	½	240,000	Red	Yellow	Yellow
㊾ (59)		½	490,000	Yellow	White	Yellow
(92)	......	1	490,000	Yellow	White	Yellow
⑲	......	½	2,000,000	Red	Black	Green

No. on Figs. 1 and 2	Description	Part No.
①	Oscillator Coil*	03734
②	By-pass Condenser (.05 mfd.)	3615-M
③	Gang Condenser Assembly	03692
④	Resistor (13,000 ohms)	3766
⑤	Compensating Condenser (19 MC end of Top Scale)	04000-E
⑥	Compensating Condenser (8.5 MC End of Center Scale)	04000-E
⑦	Compensating Condenser (3.6 MC End of Bottom Scale)	04000-E
⑧	Frequency Control Switch	03751
⑨	Resistor (240,000 ohms)	3768
⑩	Condenser (1,250 mmf.)**	5886
⑪	Compensating Condenser (8.5 MC End of Top Scale)**	04000-F
⑫	Condenser (800 mmf.)	5878
⑬	Compensating Condenser (3.6 MC End of Center Scale)	04000-F
⑭	Condenser (250 mmf.)	3082
⑮	Compensating Condenser (1.5 MC End of Bottom Scale)	04000-F
⑯	Detector Transformer*	03734
⑰	Frequency Filter	03662
⑱	Antenna Switch Assembled with ㉜	5796
⑲	Resistor (2 megohms) Assembled with ⑳	03879
⑳	Condenser (110 mmf.) Assembled with ⑲	03879
㉑	Condenser (250 mmf.)	3082
㉒	Resistor (99,000 ohms)	3767
㉓	R. F. Choke	03893
㉔	Shielded Cable	L-1278
㉕	Resistor (32,000 ohms)	3525
㉖	Resistor (32,000 ohms)	3525
㉗	Electrolytic Condenser (6 mfd.)	4916
㉘	Pilot Light (Short Wave Unit)	3463
㉙	Resistor (5,000 ohms)	3526
㉚	Plug	03913
㉛	Filament Transformer (50-60 cycles)	5906
	Filament Transformer (25-40 cycles)	5923
	Filament Transformer (50-60 cycles, 230 volts)	5924
㉜	On-off Switch (Assembled with ⑱)	5796
㉝	Resistor (10,000 ohms)	4412
㉞	First R. F. Transformer	03360
㉟	Gang Condenser Assembly (50-60 cycles)	03001
	Gang Condenser Assembly (25-40 cycles)	03078
㊱	Compensating Condenser—First R. F.—Part of Gang Condenser Assembly	
㊲	Second R. F. Transformer	03014
㊳	Compensating Condenser—Second R. F.—Part of Gang Condenser Assembly	
㊴	First Detector Transformer	03015
㊵	Compensating Condenser—First Detector—Part of Gang Condenser Assembly	
㊶	Compensating Condenser—First I. F. Primary	04000-J
㊷	First I. F. Transformer	03009
㊸	Compensating Condenser—First I. F. Secondary	04000-J
㊹	Compensating Condenser—Second I. F. Primary	04000-L
㊺	Second I. F. Transformer	03345
㊻	Resistor (51,000 ohms)	4518

No. on Figs. 1 and 2	Description	Part No.
㊼	Condenser (110 mmf.)	4519
㊽	Resistor (51,000 ohms)	4518
㊾	Resistor (490,000 ohms)	4517
㊿	Resistor (99,000 ohms)	4411
(51)	Condenser (.01 mfd.)	3903-R
(52)	Condenser (250 mmf.)	3082
(53)	Volume Control	5366
(54)	By-pass Condenser (3—.25 mfd.)	03325
(55)	Resistor (51,000 ohms)	4518
(56)	Resistor (70,000 ohms)	5385
(57)	Pilot Light (Broadcast Unit)	3463
(58)	Condenser (.05 mfd.)	3615-W
(59)	Resistor (490,000 ohms)	4517
(60)	Oscillator Coil	03916
(61)	Condenser (.09 mfd.)	4989-G
(62)	Compensating Condenser—Low Frequency	04000-B
(63)	Condenser (700 mmf.)	4520
(64)	Resistor (51,000 ohms)	4518
(65)	Resistor (5,000 ohms)	5310
(66)	Compensating Condenser — High Frequency—Part of Gang Condenser Assembly	
(67)	Condenser (110 mmf.)	4519
(68)	Condenser (.05 mfd.)	3615-U
(69)	Resistor (51,000 ohms)	4237
(70)	By-pass Condenser (1., .25, .1) 50-60 cycles	03327
	By-pass Condenser (1., .25, .25) 25-40 cycles)	03624
(71)	Resistor (70,000 ohms)	5385
(72)	Condenser (.05 mfd.)	3615-E
(73)	Resistor (25,000 ohms)	4516
(74)	Voice Coil and Cone Assembly	02996
(75)	Speaker Field (Assembly with Pot)	02966
(76)	Output Transformer	2673
(77)	Tone Control	03137
(78)	Resistor (240,000 ohms) 50-60 cycles	4410
	Resistor (99,000 ohms) 25-40 cycles	4411
(79)	Condenser (.01 mfd.)	3903-P
(80)	Resistor (25,000 ohms)	3656
(81)	Resistor (25,000 ohms) 50-60 cycles	3656
	Resistor (50,000 ohms) 25-40 cycles	4237
(82)	Condenser (.01 mfd.)	3903-M
(83)	Resistor (240,000 ohms)	4410
(84)	Condenser (.015 mfd. Double)	3793-E
(85)	On-off Switch	4095
(86)	Power Transformer (50-60 cycles)	5362
	Power Transformer (25-40 cycles)	5363
	Power Transformer (50-60 cycles, 230 volts	5364
(87)	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
	Electrolytic Condenser (10 mfd.) 25-40 cycles	5142
(88)	Choke	4819
(89)	By-pass Condenser (.09 mfd.) 50-60 cycles	4989-J
	By-pass Condenser (.18 mfd.) 25-40 cycles	4989-K
(90)	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
	Electrolytic Condenser (14 mfd.) 25-40 cycles	5725
(91)	B. C. Resistor	03457
(92)	Resistor (240,000 ohms) 50-60 cycles	3768
	Resistor (490,000 ohms) 25-40 cycles	3769

*Includes matched oscillator coil and detector transformer.

**These parts replaced on later production by .0018 mfd. condenser, part 6018.

PHILCO RADIO & TELEVISION CORP.

SPECIAL NOTICE*****

Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual which carry the models shown upon this page.

COMPENSATING CONDENSERS

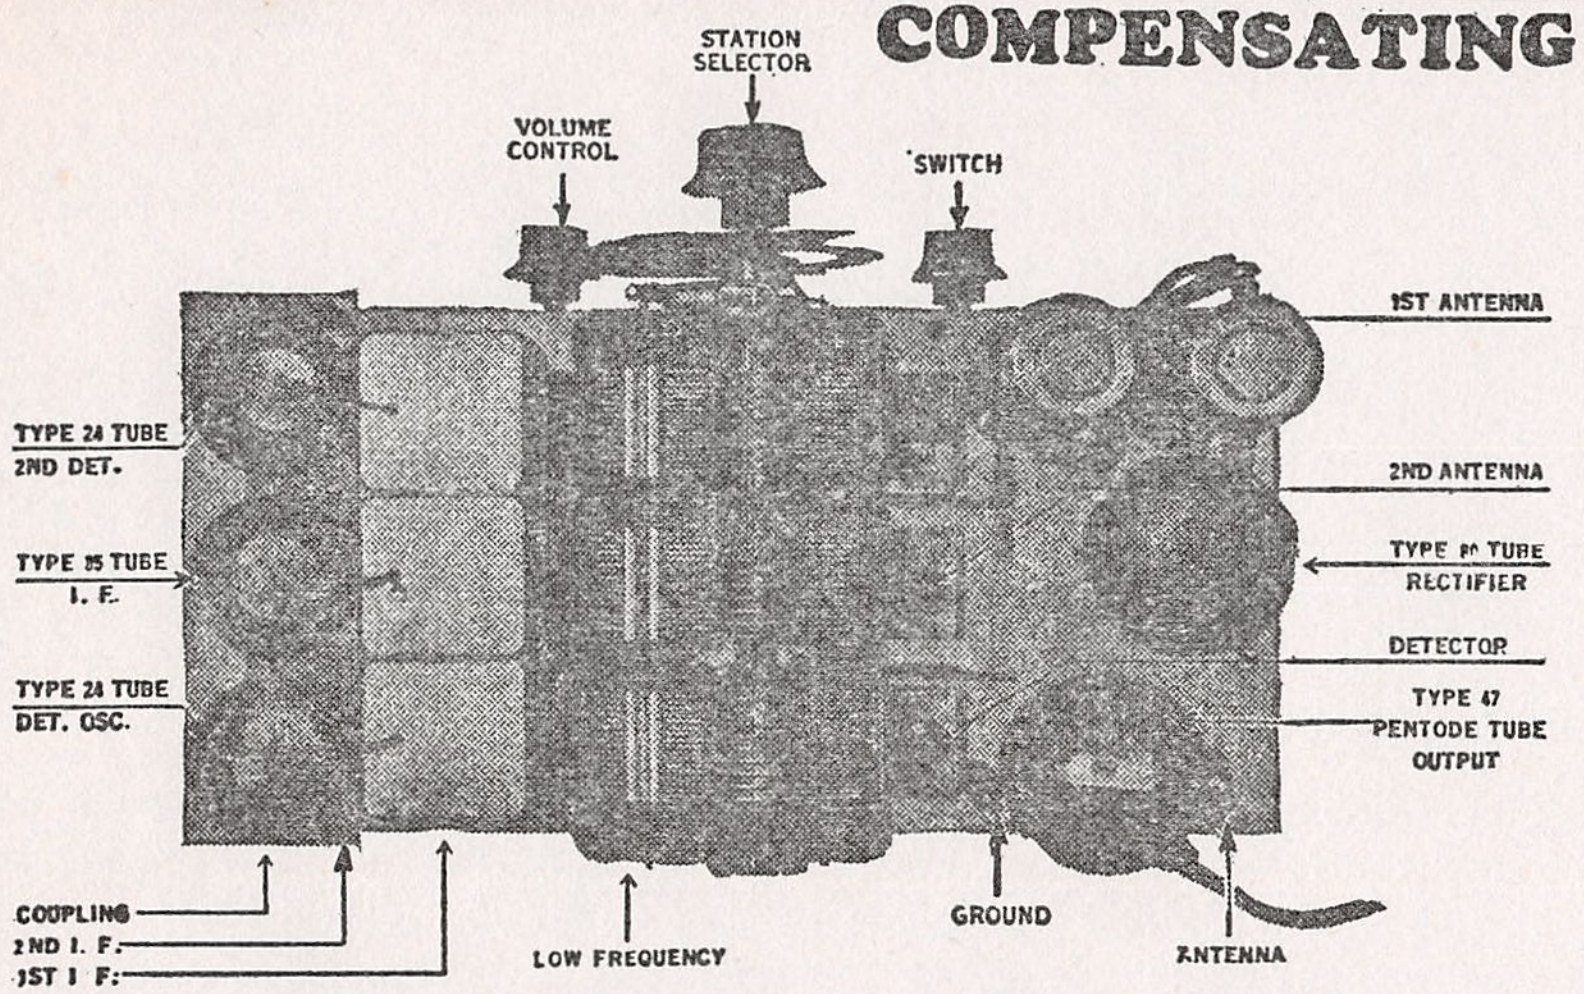
STATION SELECTOR
VOLUME CONTROL
SWITCH
1ST ANTENNA
2ND ANTENNA
TYPE 80 TUBE RECTIFIER
DETECTOR
TYPE 47 PENTODE TUBE OUTPUT
TYPE 24 TUBE 2ND DET.
TYPE 35 TUBE I. F.
TYPE 24 TUBE DET. OSC.
COUPLING
2ND I. F.
1ST I. F.
LOW FREQUENCY
GROUND
ANTENNA

MODELS 51 and 52

Adjust I. F. at 175 K.C.

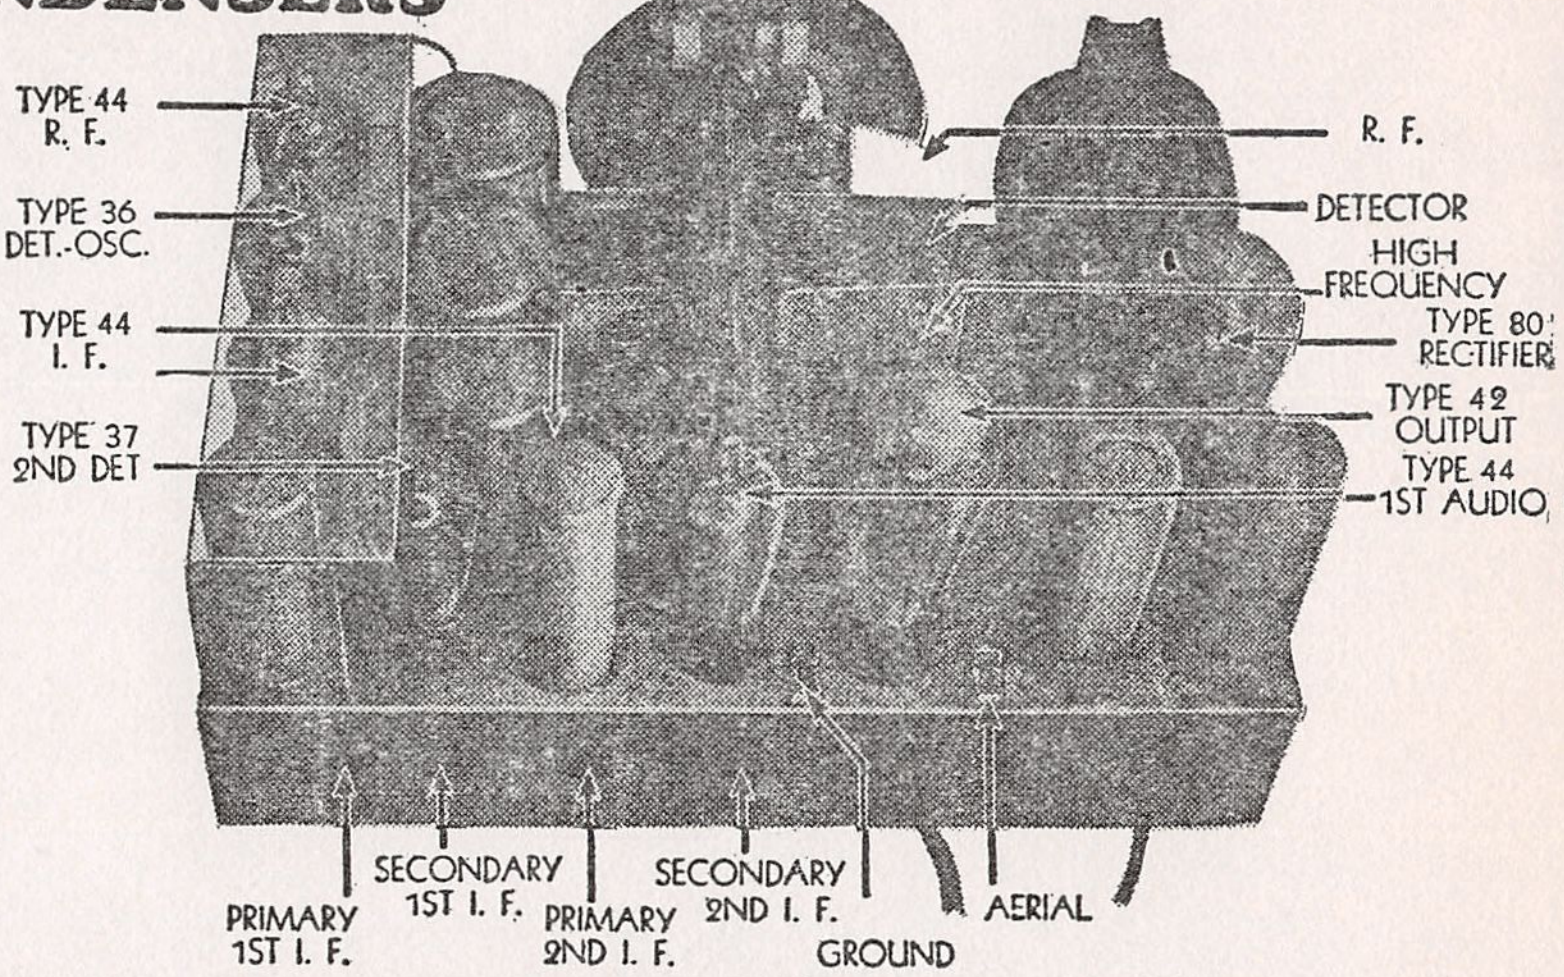
TYPE 44 R. F.
TYPE 36 DET.-OSC.
TYPE 44 I. F.
TYPE 37 2ND DET
R. F.
DETECTOR
HIGH FREQUENCY
TYPE 80 RECTIFIER
TYPE 42 OUTPUT
TYPE 44 1ST AUDIO
PRIMARY 1ST I. F.
SECONDARY 1ST I. F.
PRIMARY 2ND I. F.
SECONDARY 2ND I. F.
GROUND
AERIAL

MODEL 71

MODEL 70 with Automatic Volume Control---Same Compensating Condenser Locations.

Adjust I. F. at 260 K.C.

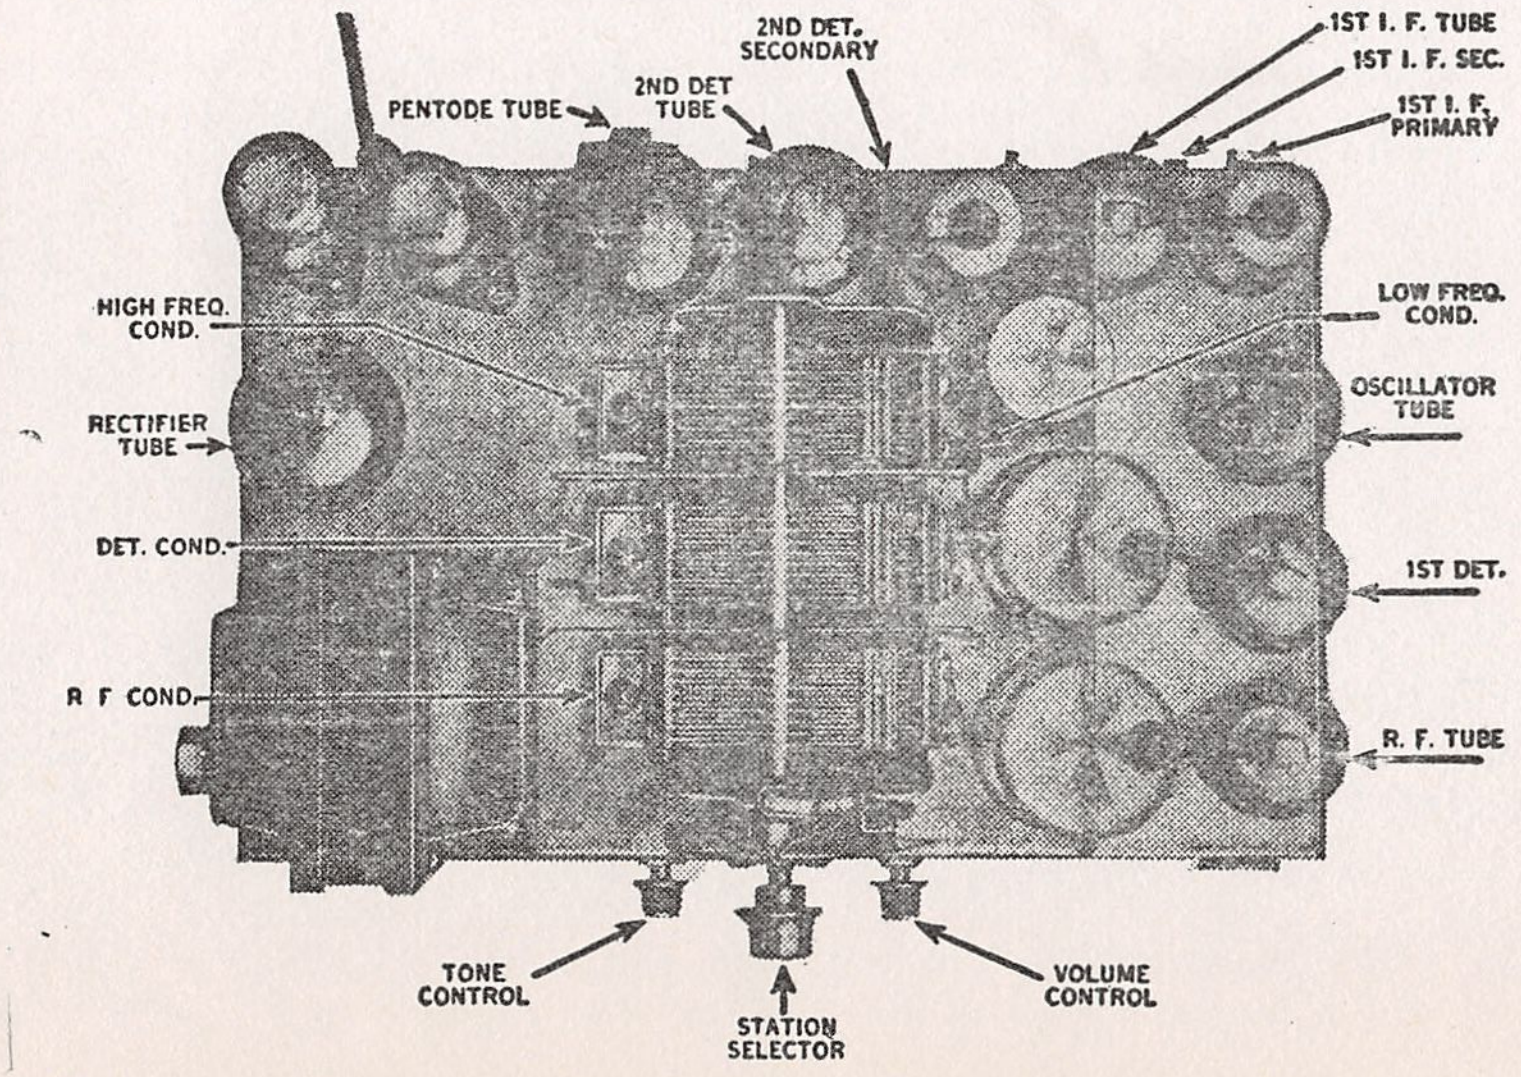
PENTODE TUBE
2ND DET TUBE
2ND DET. SECONDARY
1ST I. F. TUBE
1ST I. F. SEC.
1ST I. F. PRIMARY
HIGH FREQ. COND.
RECTIFIER TUBE
DET. COND.
R F COND.
LOW FREQ. COND.
OSCILLATOR TUBE
1ST DET.
R. F. TUBE
TONE CONTROL
STATION SELECTOR
VOLUME CONTROL

MODEL 70 without Automatic Volume Control.

Adjust I. F. at 260 K.C.

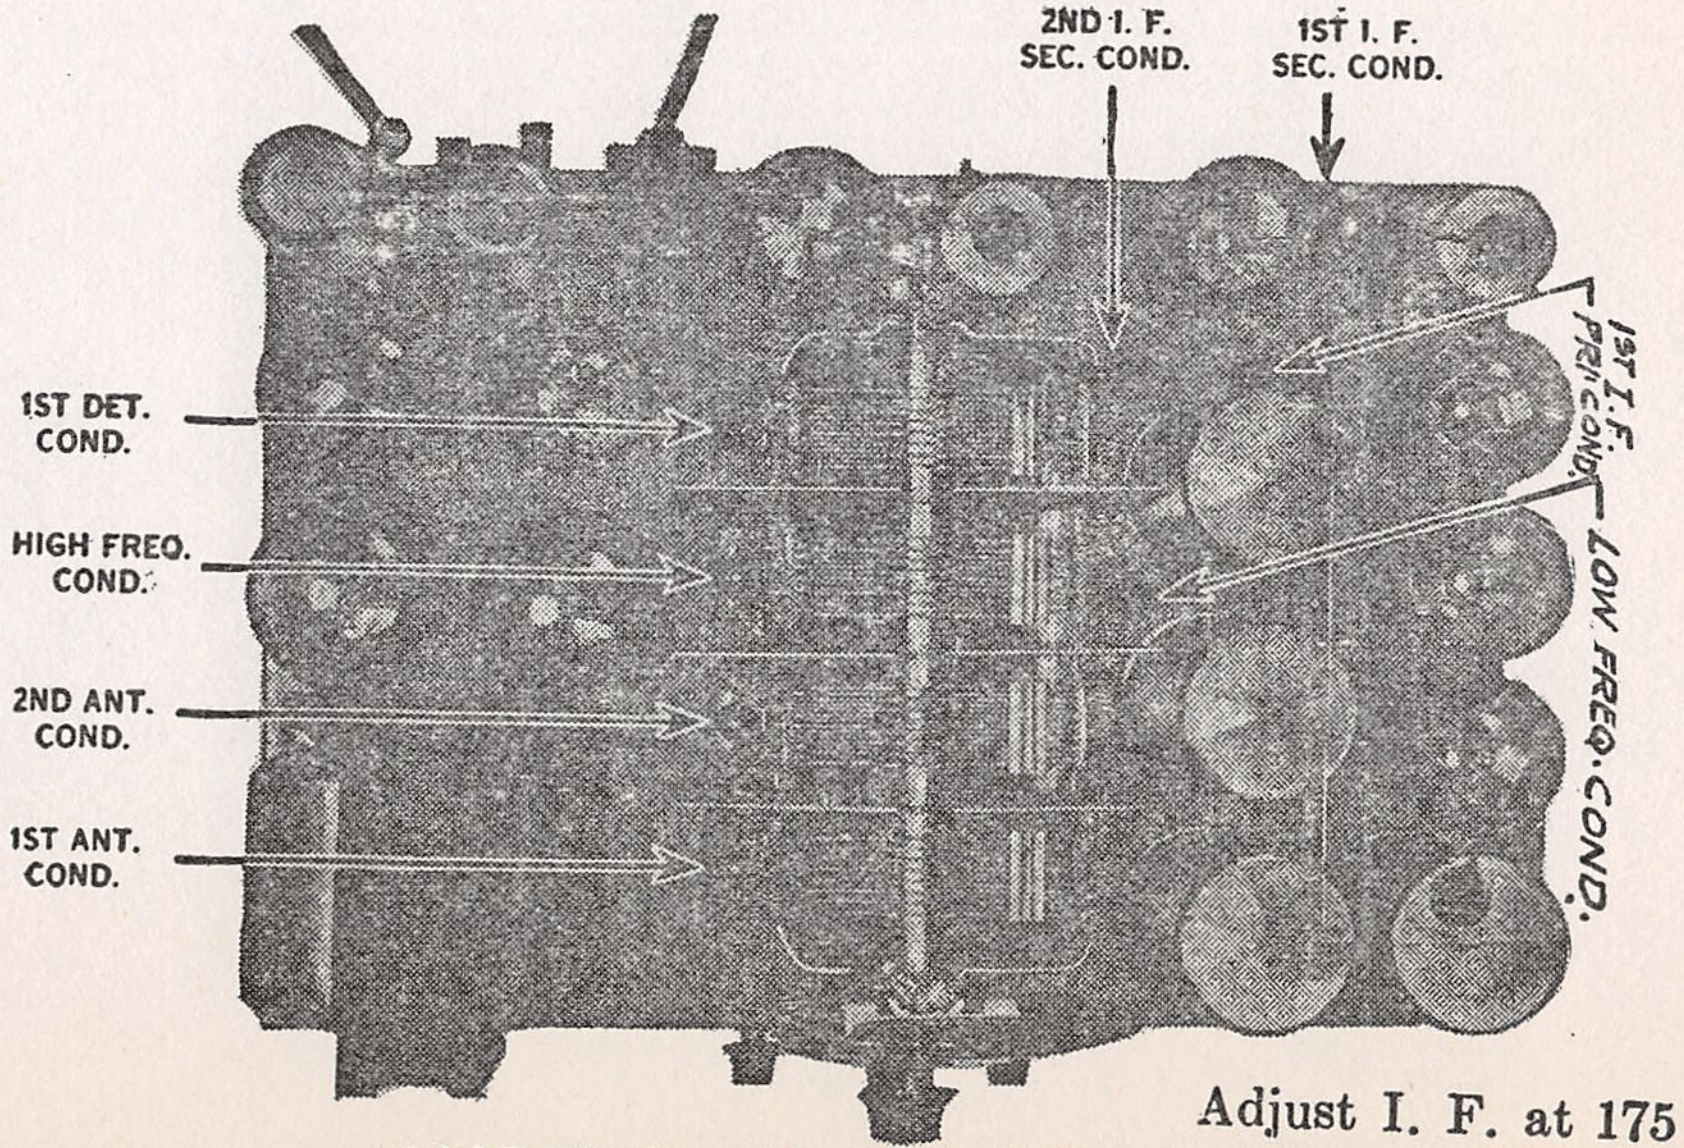
2ND I. F. SEC. COND.
1ST I. F. SEC. COND.
1ST I. F. PRI. COND.
LOW FREQ. COND.
1ST DET. COND.
HIGH FREQ. COND.
2ND ANT. COND.
1ST ANT. COND.

Adjust I. F. at 175 K.C.

MODEL 90 with Push-Pull 45's Output

MODEL 90 with Single Pentode Output---Same Compensating Condenser Locations.

PHILCO RADIO & TELEVISION CORP.

SPECIAL NOTICE******

Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual which carry the models shown upon this page.

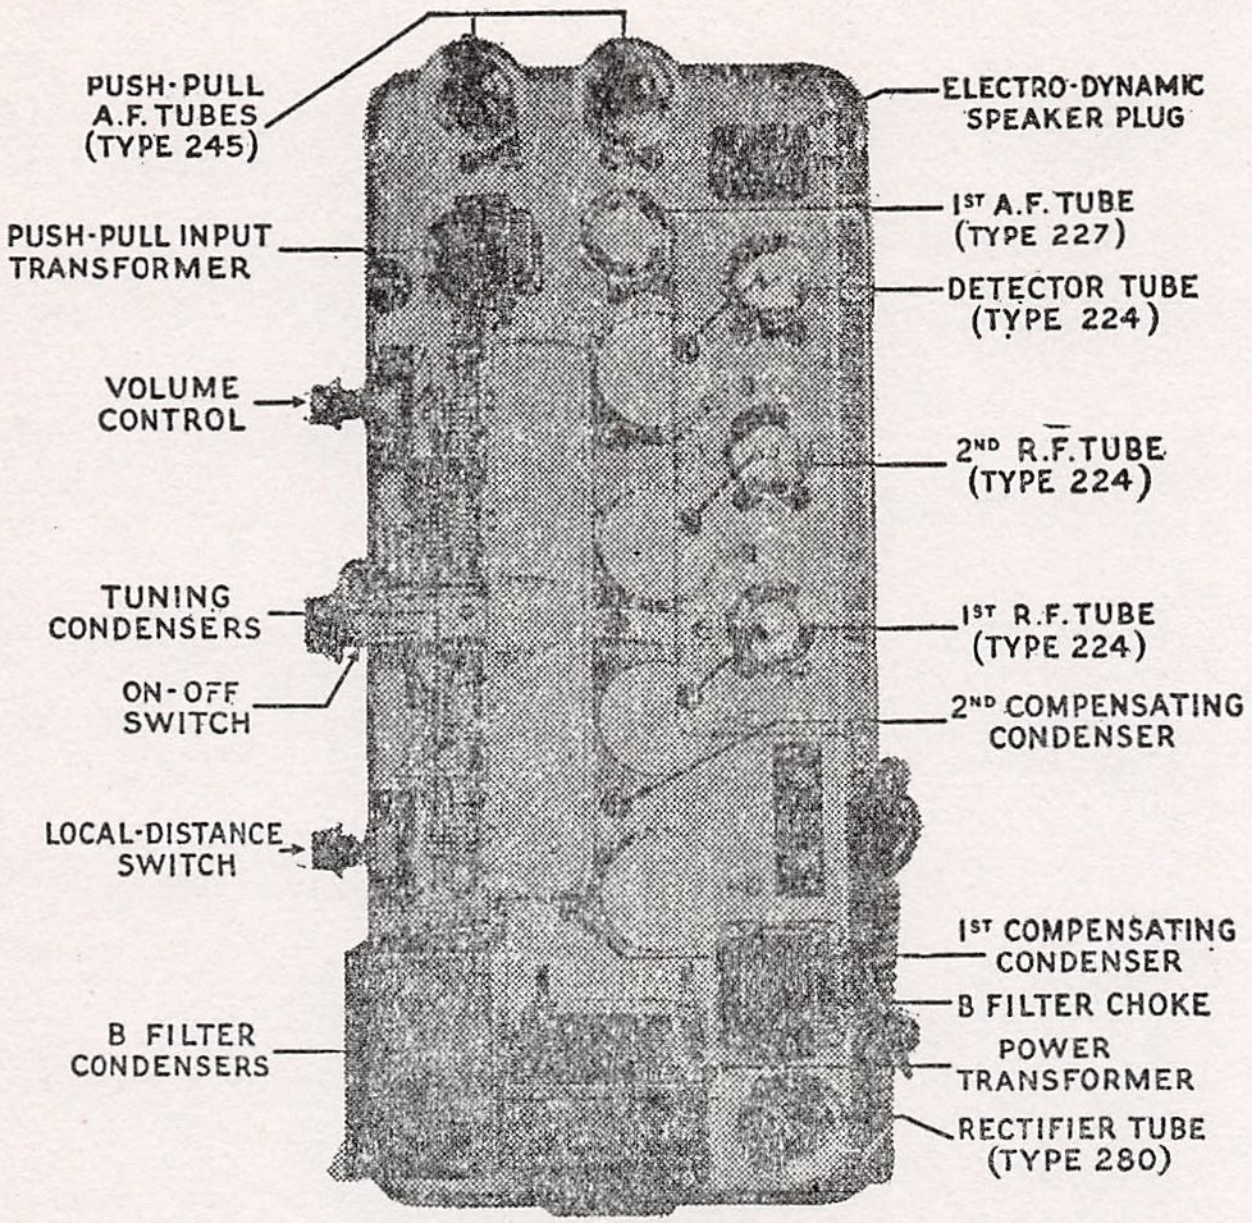
PUSH-PULL A.F. TUBES (TYPE 245)
PUSH-PULL INPUT TRANSFORMER
VOLUME CONTROL
TUNING CONDENSERS
ON-OFF SWITCH
LOCAL-DISTANCE SWITCH
B FILTER CONDENSERS
ELECTRO-DYNAMIC SPEAKER PLUG
1ST A.F. TUBE (TYPE 227)
DETECTOR TUBE (TYPE 224)
2ND R.F. TUBE (TYPE 224)
1ST R.F. TUBE (TYPE 224)
2ND COMPENSATING CONDENSER
1ST COMPENSATING CONDENSER
B FILTER CHOKE
POWER TRANSFORMER
RECTIFIER TUBE (TYPE 280)

Fig. 1

The Model 76 is for use on 100 to 135 volts, 50 or 60 cycle alternating current.

Model 76

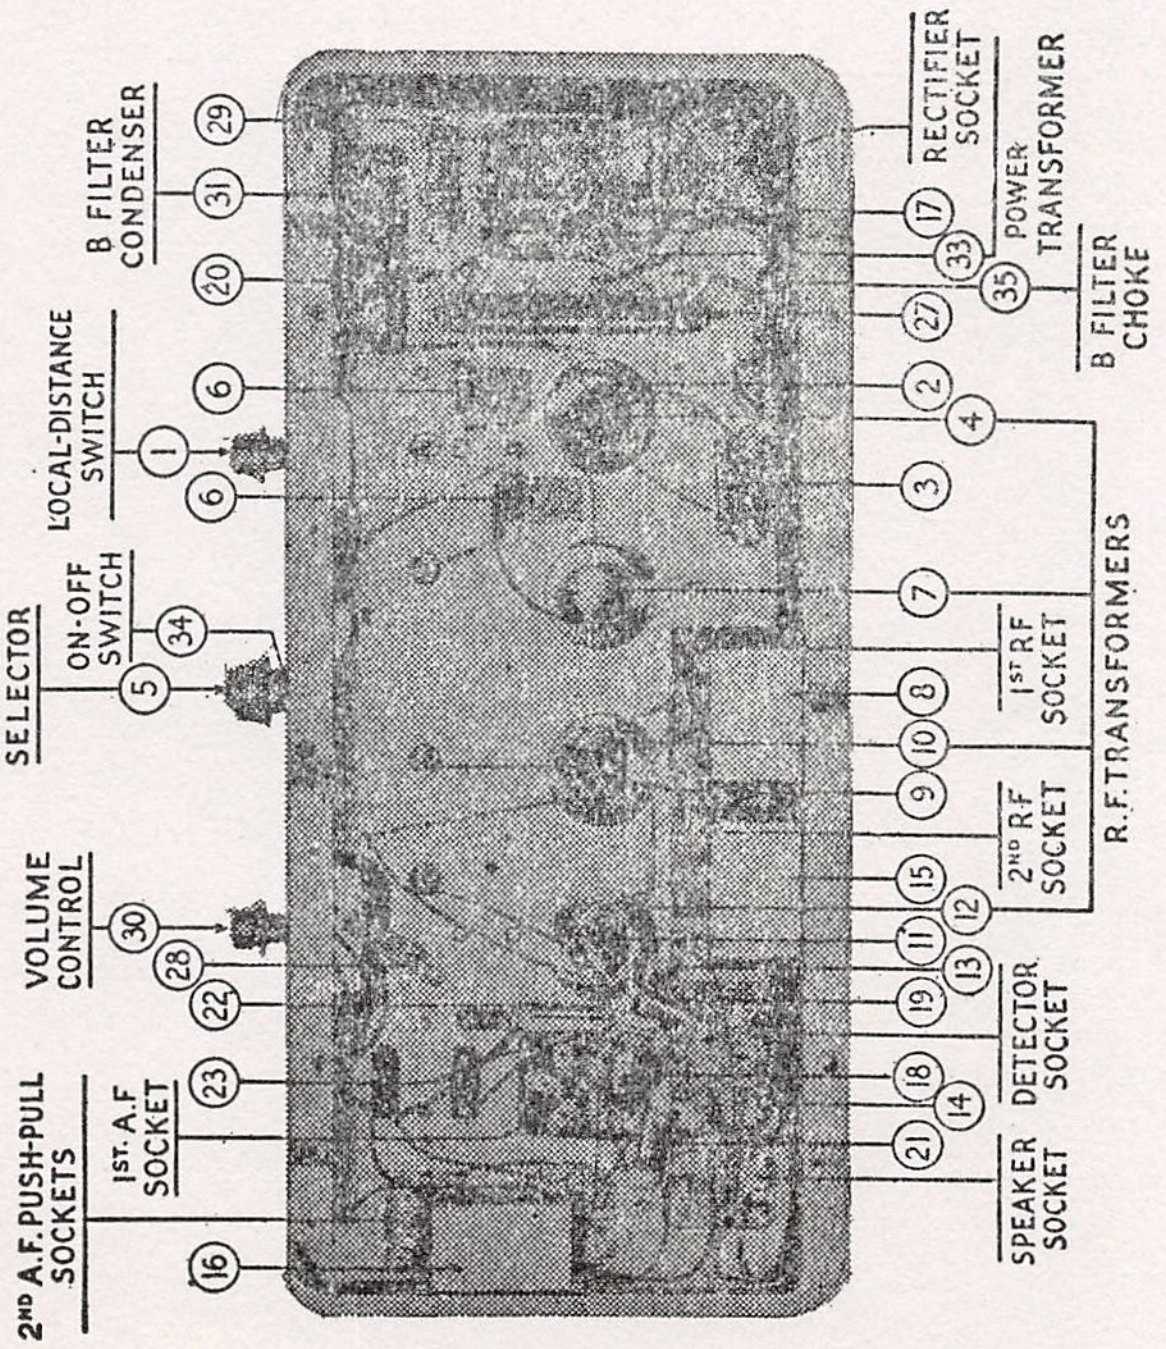
B FILTER CONDENSER
29
31
20
LOCAL-DISTANCE SWITCH
6
1
6
ON-OFF SWITCH
34
STATION SELECTOR
5
VOLUME CONTROL
30
28
22
1ST A.F SOCKET
23
2ND A.F. PUSH-PULL SOCKETS
16
RECTIFIER SOCKET
17
POWER TRANSFORMER
33
35
B FILTER CHOKE
27
2
4
3
R.F.TRANSFORMERS
7
8
10
1ST RF SOCKET
9
15
12
2ND RF SOCKET
11
13
19
DETECTOR SOCKET
18
14
21
SPEAKER SOCKET

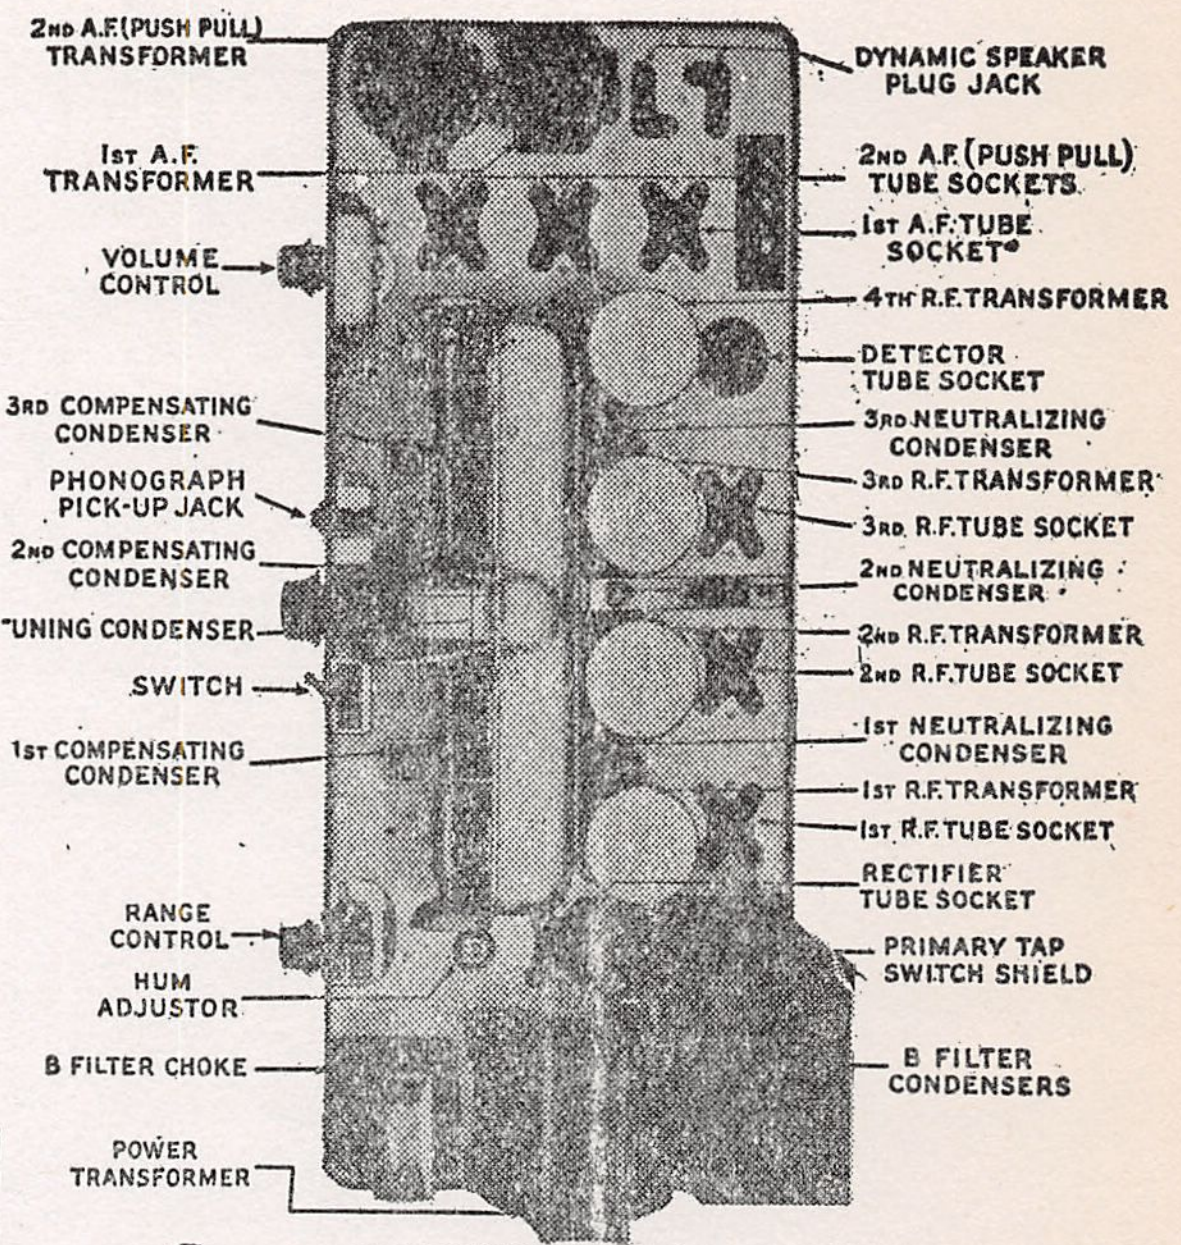
2ND A.F.(PUSH PULL) TRANSFORMER
1ST A.F. TRANSFORMER
VOLUME CONTROL
3RD COMPENSATING CONDENSER
PHONOGRAPH PICK-UP JACK
2ND COMPENSATING CONDENSER
TUNING CONDENSER
SWITCH
1ST COMPENSATING CONDENSER
RANGE CONTROL
HUM ADJUSTOR
B FILTER CHOKE
POWER TRANSFORMER
DYNAMIC SPEAKER PLUG JACK
2ND A.F. (PUSH PULL) TUBE SOCKETS
1ST A.F. TUBE SOCKET
4TH R.F. TRANSFORMER
DETECTOR TUBE SOCKET
3RD NEUTRALIZING CONDENSER
3RD R.F. TRANSFORMER
3RD R.F. TUBE SOCKET
2ND NEUTRALIZING CONDENSER
2ND R.F. TRANSFORMER
2ND R.F. TUBE SOCKET
1ST NEUTRALIZING CONDENSER
1ST R.F. TRANSFORMER
1ST R.F. TUBE SOCKET
RECTIFIER TUBE SOCKET
PRIMARY TAP SWITCH SHIELD
B FILTER CONDENSERS

Models 86 and 82

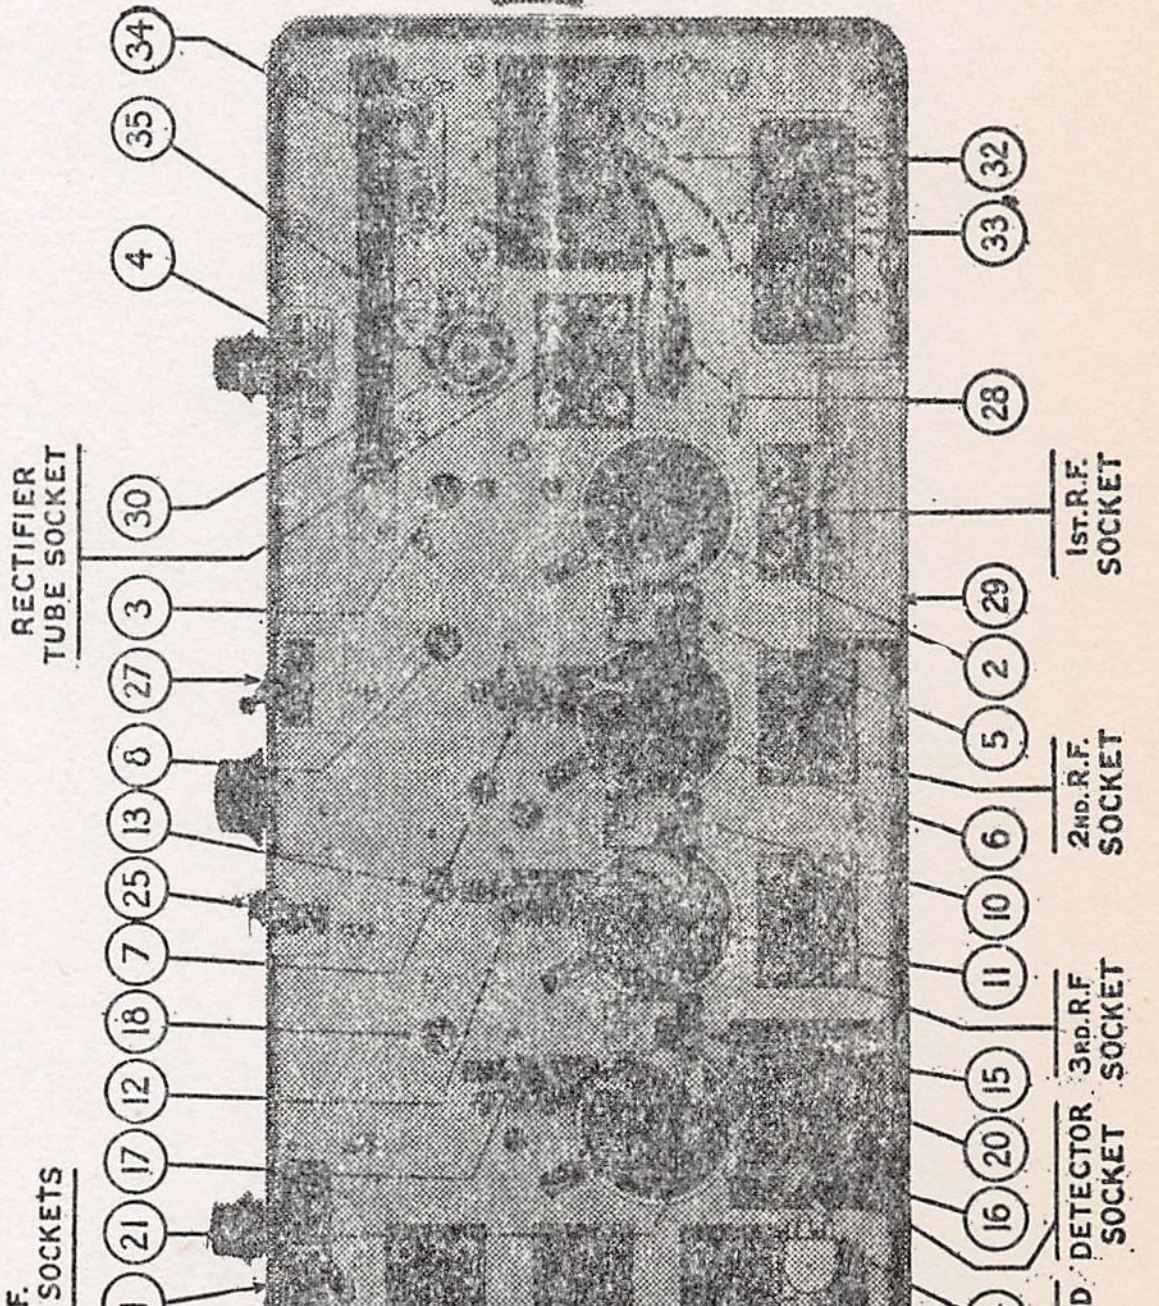
34
35
4
RECTIFIER TUBE SOCKET
30
3
27
8
13
25
7
18
12
17
21
1
2ND A.F. PUSH PULL SOCKETS
1ST A.F. SOCKET
26
32
33
28
1ST R.F. SOCKET
29
2
5
2ND R.F. SOCKET
6
10
11
3RD R.F. SOCKET
15
20
16
DETECTOR SOCKET
24
23
ANT.&GND PANEL
22
DYNAMIC SPEAKER JACK

PHILCO RADIO & TELEVISION CORP.

SPECIAL NOTICE *****

Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual which carry the models shown upon this page.

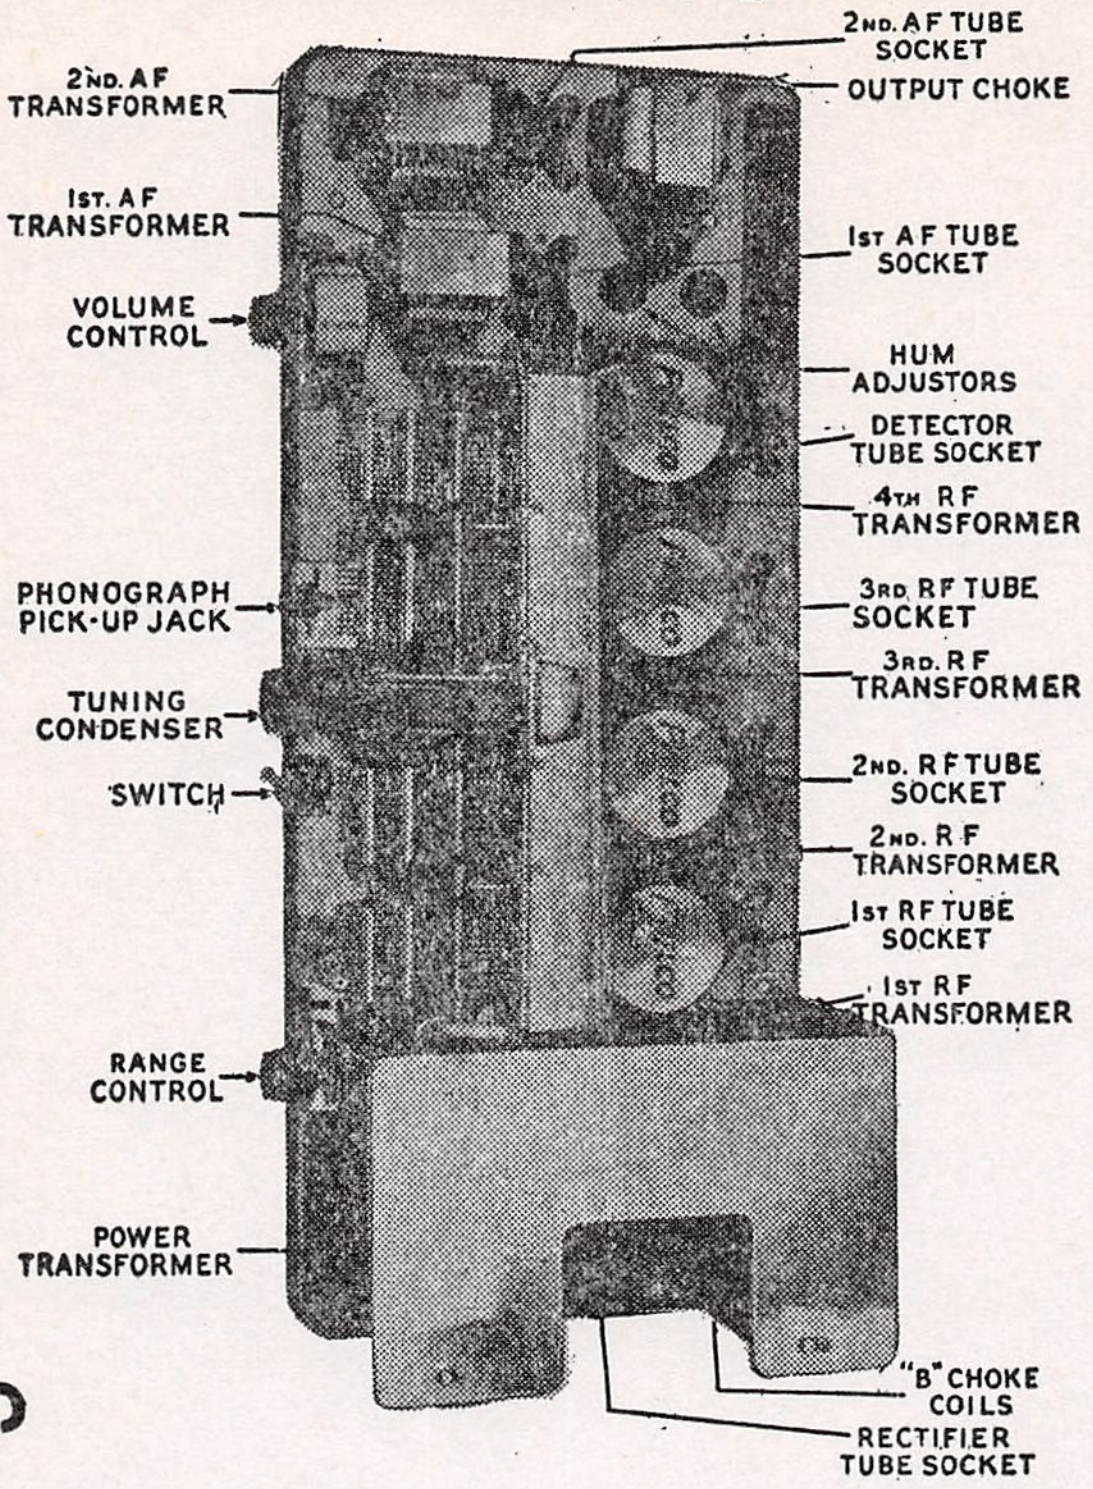
2ND. AF TUBE SOCKET
OUTPUT CHOKE
2ND. AF TRANSFORMER
1ST. AF TRANSFORMER
1ST AF TUBE SOCKET
VOLUME CONTROL
HUM ADJUSTORS
DETECTOR TUBE SOCKET
4TH RF TRANSFORMER
PHONOGRAPH PICK-UP JACK
3RD. RF TUBE SOCKET
3RD. RF TRANSFORMER
TUNING CONDENSER
SWITCH
2ND. RF TUBE SOCKET
2ND. RF TRANSFORMER
1ST RF TUBE SOCKET
1ST RF TRANSFORMER
RANGE CONTROL
POWER TRANSFORMER
"B" CHOKE COILS
RECTIFIER TUBE SOCKET

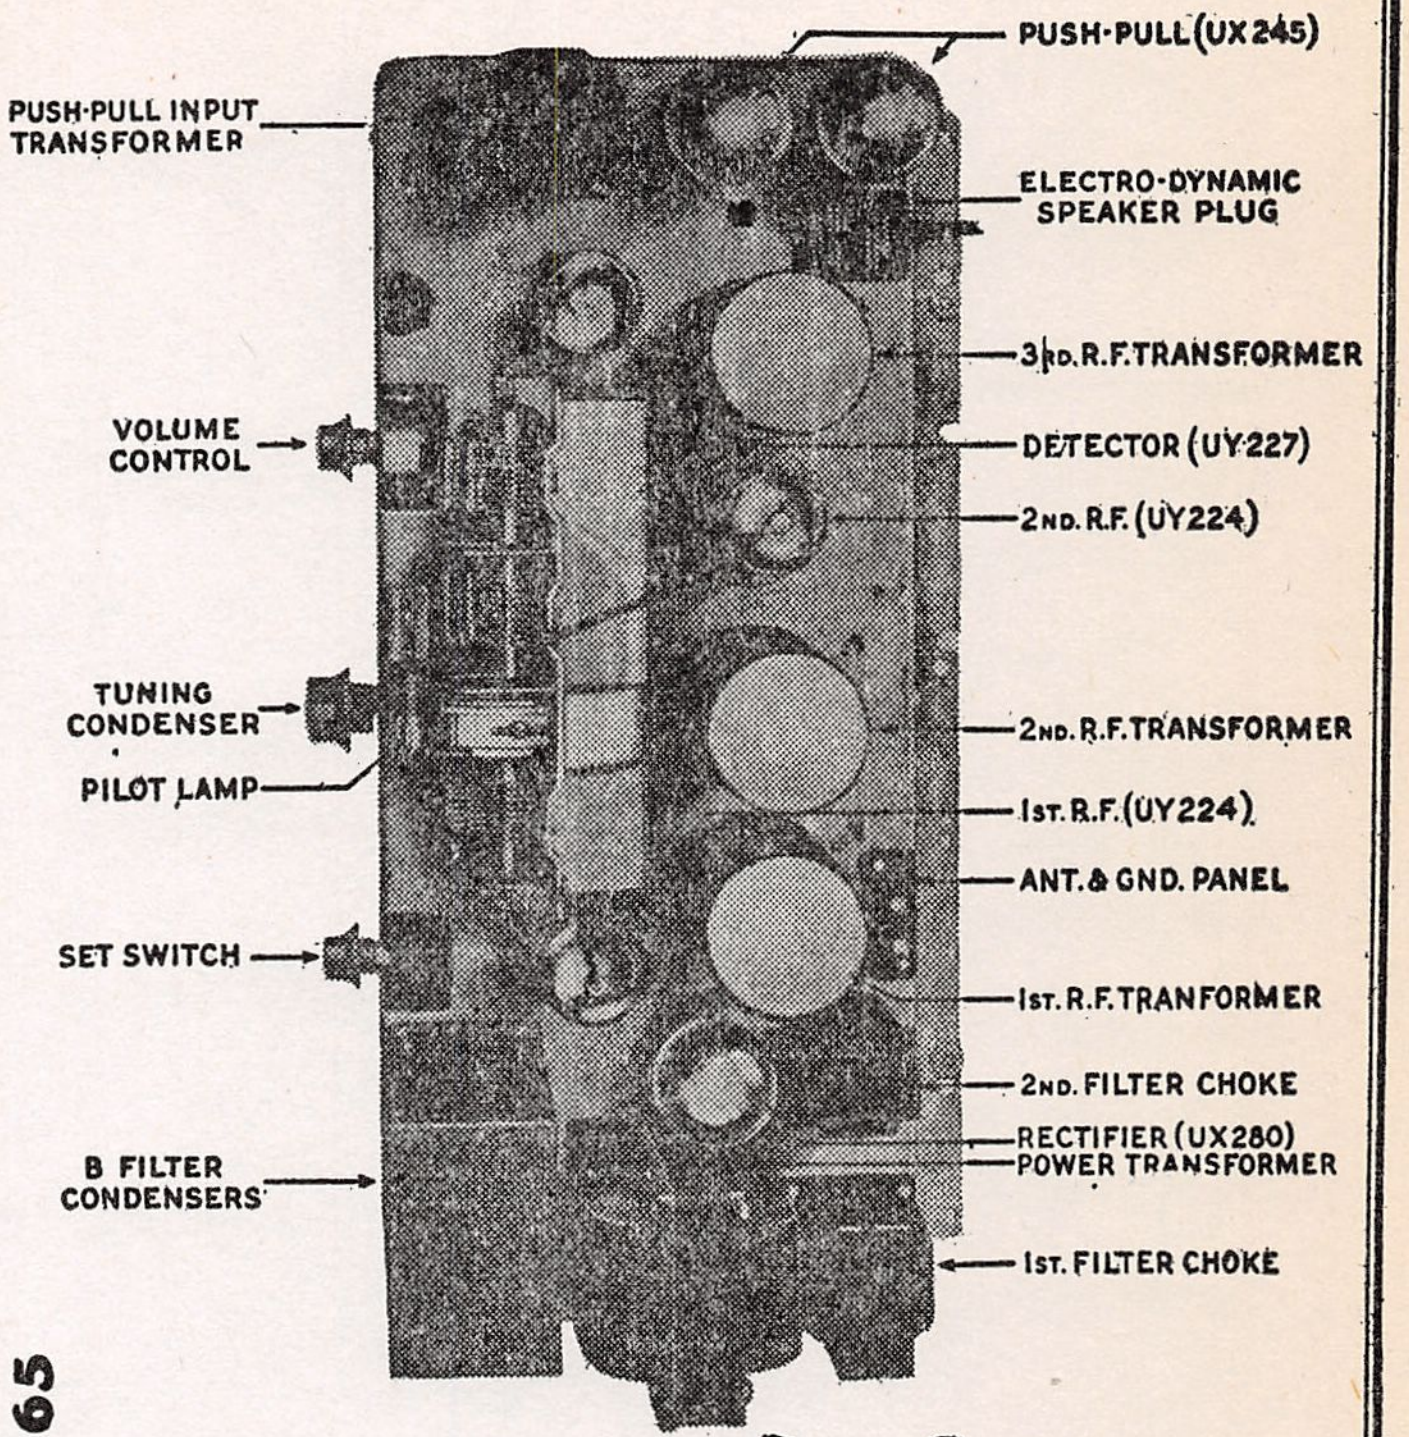
PUSH-PULL (UX245)
PUSH-PULL INPUT TRANSFORMER
ELECTRO-DYNAMIC SPEAKER PLUG
3RD. R.F. TRANSFORMER
VOLUME CONTROL
DETECTOR (UY227)
2ND. R.F. (UY224)
TUNING CONDENSER
PILOT LAMP
2ND. R.F. TRANSFORMER
1ST. R.F. (UY224)
ANT. & GND. PANEL
SET SWITCH
1ST. R.F. TRANFORMER
2ND. FILTER CHOKE
B FILTER CONDENSERS
RECTIFIER (UX280)
POWER TRANSFORMER
1ST. FILTER CHOKE

SERIES 5

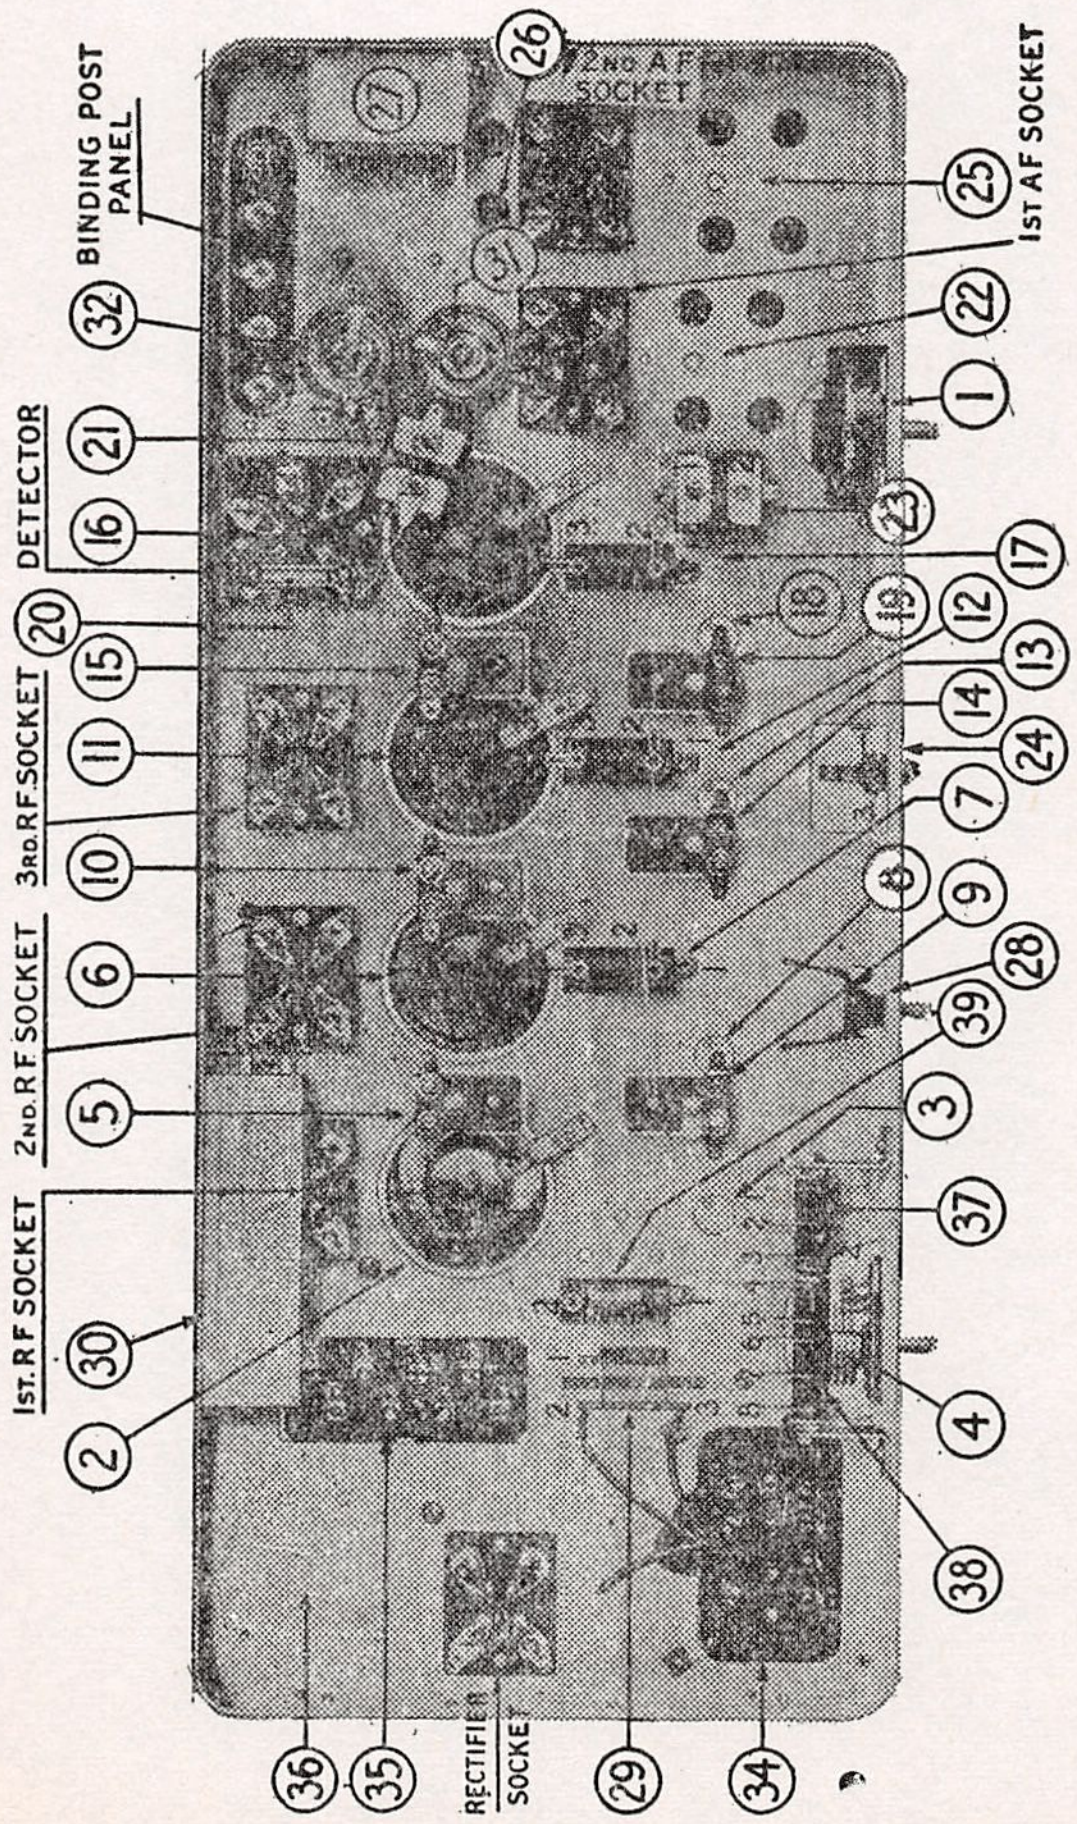
26
2ND A.F. SOCKET
27
1ST AF SOCKET
25
BINDING POST PANEL
32
31
22
1
DETECTOR
21
16
23
17
18
20
15
19
12
3RD. RF SOCKET
11
14
13
24
10
7
8
2ND. RF SOCKET
6
9
28
39
5
3
1ST. RF SOCKET
37
30
2
4
38
36
35
RECTIFIER SOCKET
29
34

Model 65

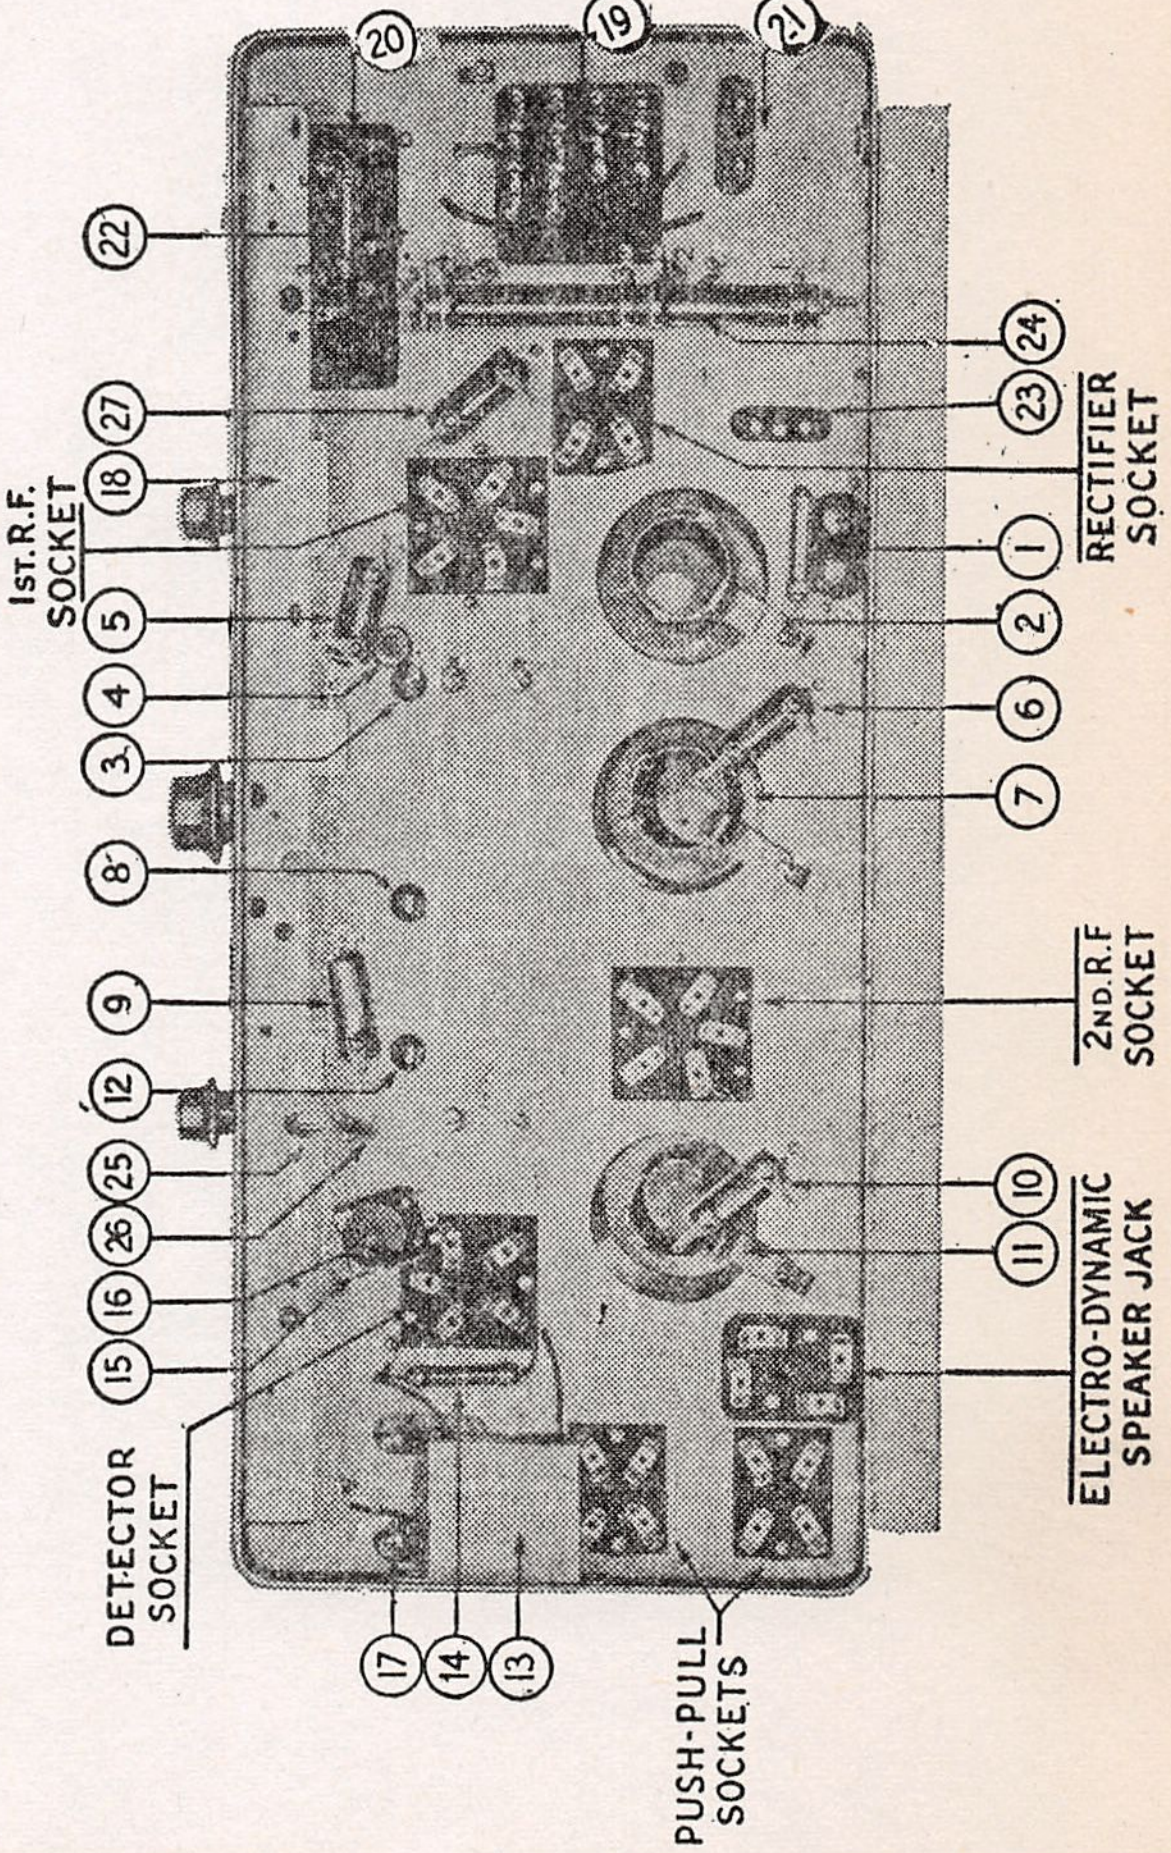
20
19
21
22
24
23
RECTIFIER SOCKET
27
18
1ST. R.F. SOCKET
1
5
2
4
6
3
7
8
9
2ND. R.F SOCKET
12
25
10
26
11
16
ELECTRO-DYNAMIC SPEAKER JACK
15
DETECTOR SOCKET
17
14
13
PUSH-PULL SOCKETS

PHILCO RADIO & TELEVISION CORP.

SPECIAL NOTICE*****

Cut up this page and paste the respective chassis layouts upon the pages in the Perpetual Trouble Shooter's Manual which carry the models shown upon this page.

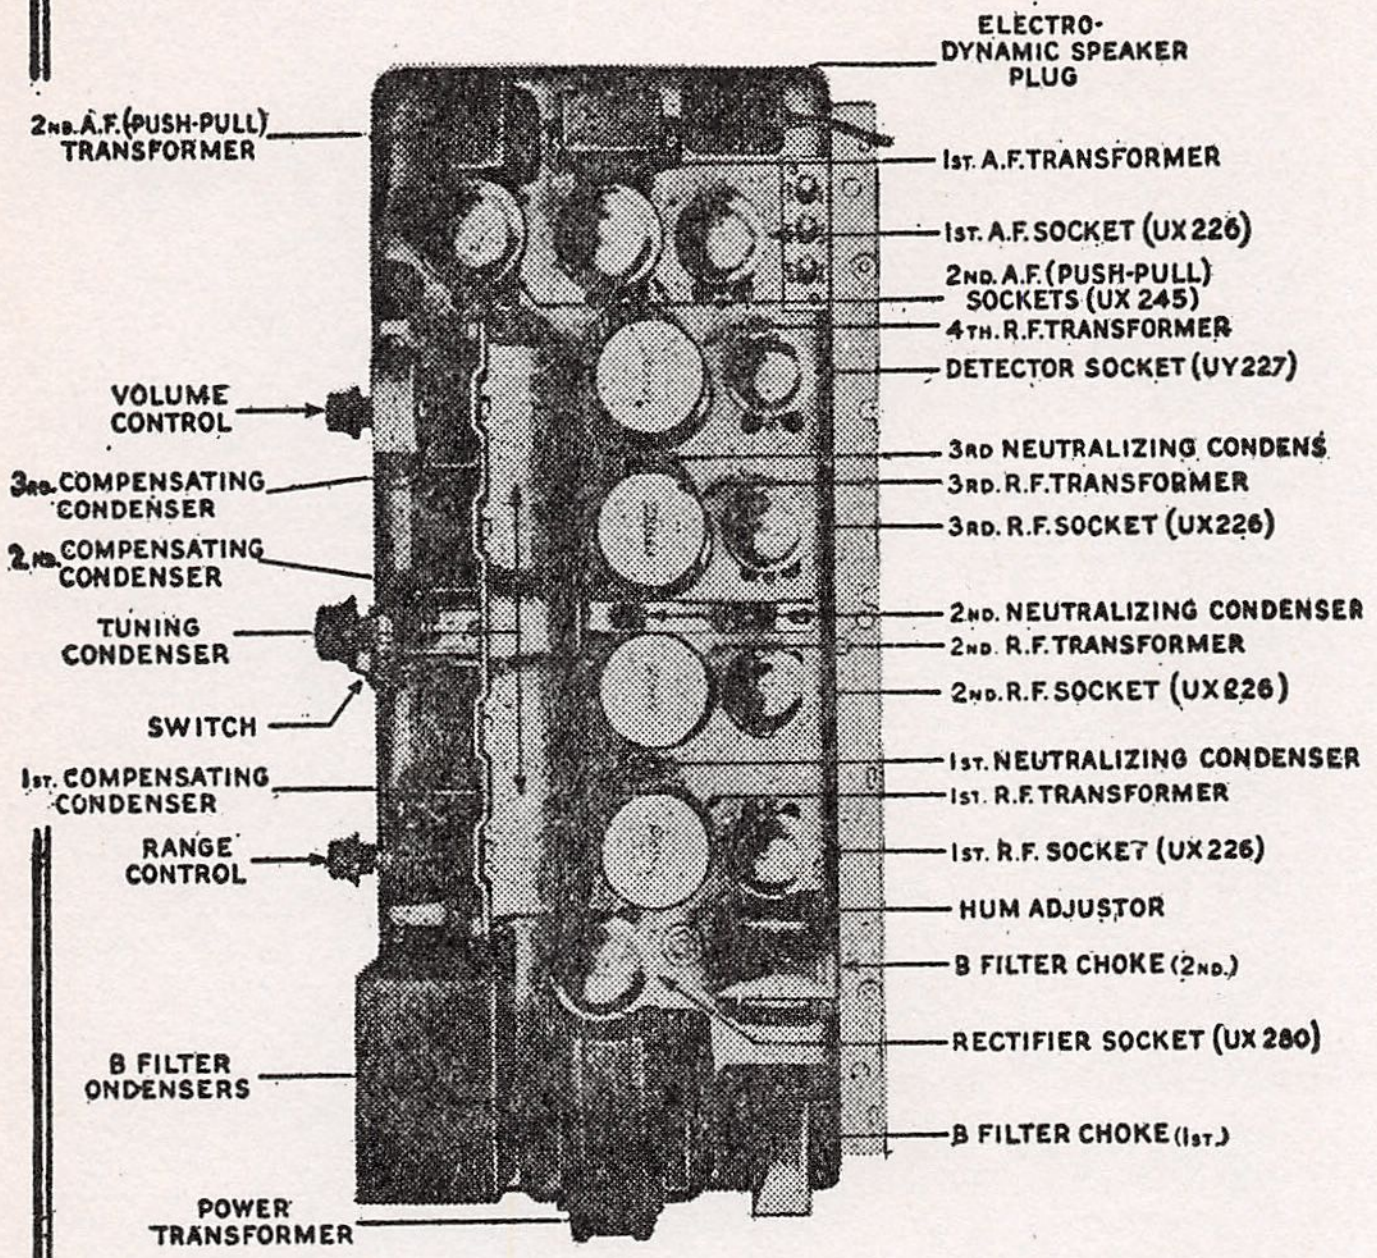
ELECTRO-DYNAMIC SPEAKER PLUG
2ND. A.F. (PUSH-PULL) TRANSFORMER
1ST. A.F. TRANSFORMER
1ST. A.F. SOCKET (UX226)
2ND. A.F. (PUSH-PULL) SOCKETS (UX 245)
4TH. R.F. TRANSFORMER
DETECTOR SOCKET (UY227)
VOLUME CONTROL
3RD NEUTRALIZING CONDENS
3RD. COMPENSATING CONDENSER
3RD. R.F. TRANSFORMER
2ND. COMPENSATING CONDENSER
3RD. R.F. SOCKET (UX226)
TUNING CONDENSER
2ND. NEUTRALIZING CONDENSER
2ND. R.F. TRANSFORMER
2ND. R.F. SOCKET (UX226)
SWITCH
1ST. COMPENSATING CONDENSER
1ST. NEUTRALIZING CONDENSER
1ST. R.F. TRANSFORMER
RANGE CONTROL
1ST. R.F. SOCKET (UX226)
HUM ADJUSTOR
B FILTER CHOKE (2ND.)
B FILTER ONDENSERS
RECTIFIER SOCKET (UX 280)
B FILTER CHOKE (1ST.)
POWER TRANSFORMER

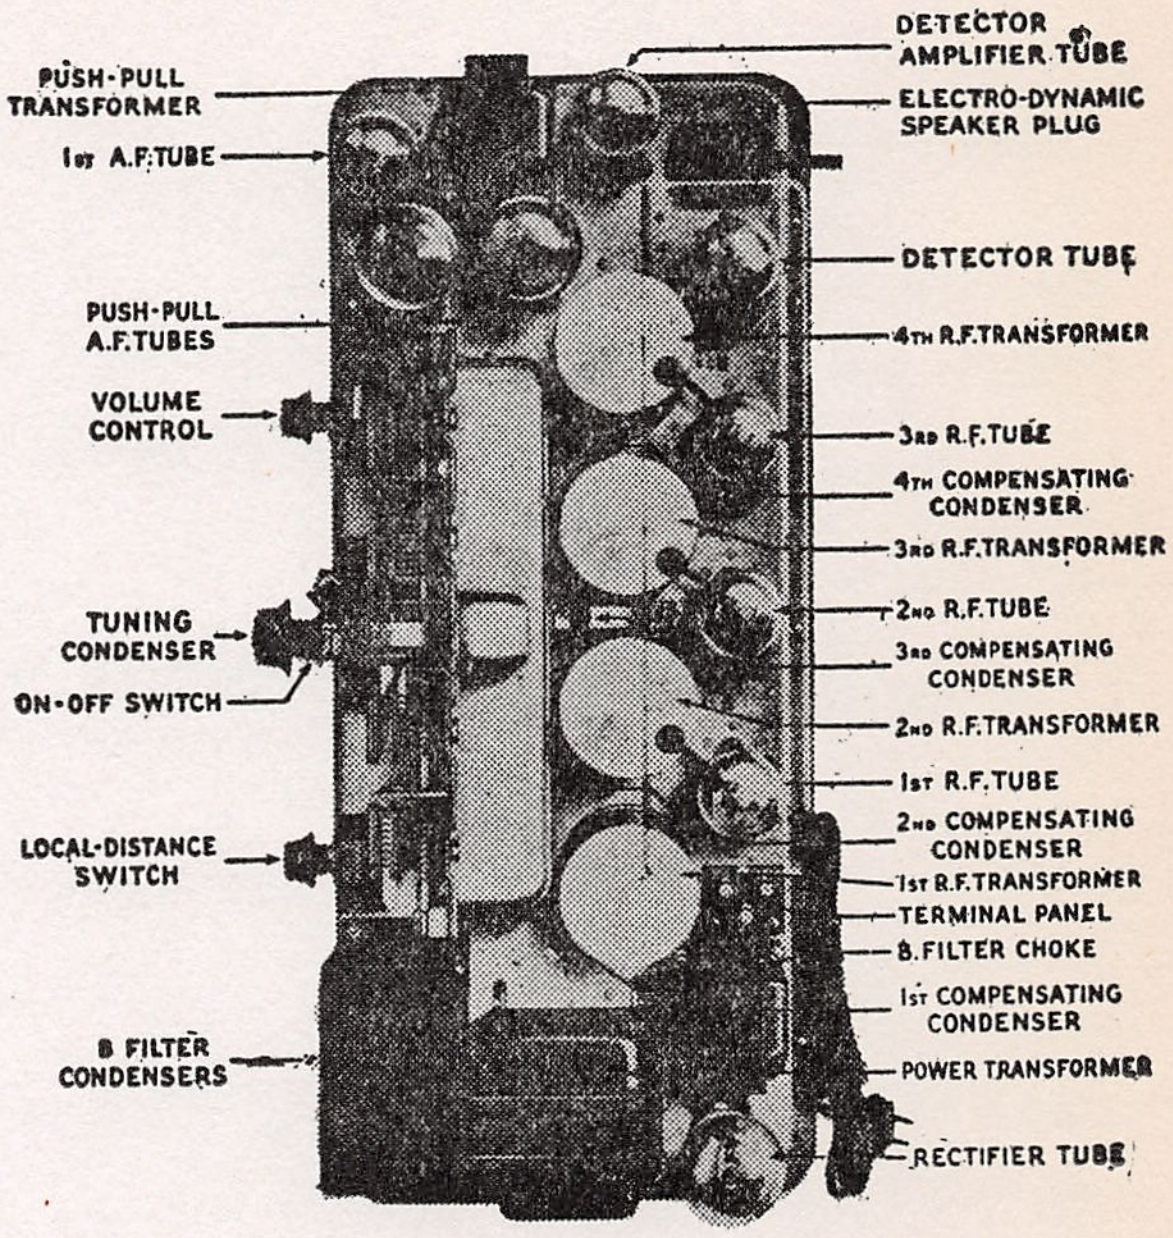
DETECTOR AMPLIFIER TUBE
PUSH-PULL TRANSFORMER
ELECTRO-DYNAMIC SPEAKER PLUG
1ST A.F. TUBE
DETECTOR TUBE
PUSH-PULL A.F. TUBES
4TH R.F. TRANSFORMER
VOLUME CONTROL
3RD R.F. TUBE
4TH COMPENSATING CONDENSER
3RD R.F. TRANSFORMER
2ND R.F. TUBE
TUNING CONDENSER
3RD COMPENSATING CONDENSER
ON-OFF SWITCH
2ND R.F. TRANSFORMER
1ST R.F. TUBE
2ND COMPENSATING CONDENSER
LOCAL-DISTANCE SWITCH
1ST R.F. TRANSFORMER
TERMINAL PANEL
B. FILTER CHOKE
1ST COMPENSATING CONDENSER
B FILTER CONDENSERS
POWER TRANSFORMER
RECTIFIER TUBE

Model 87

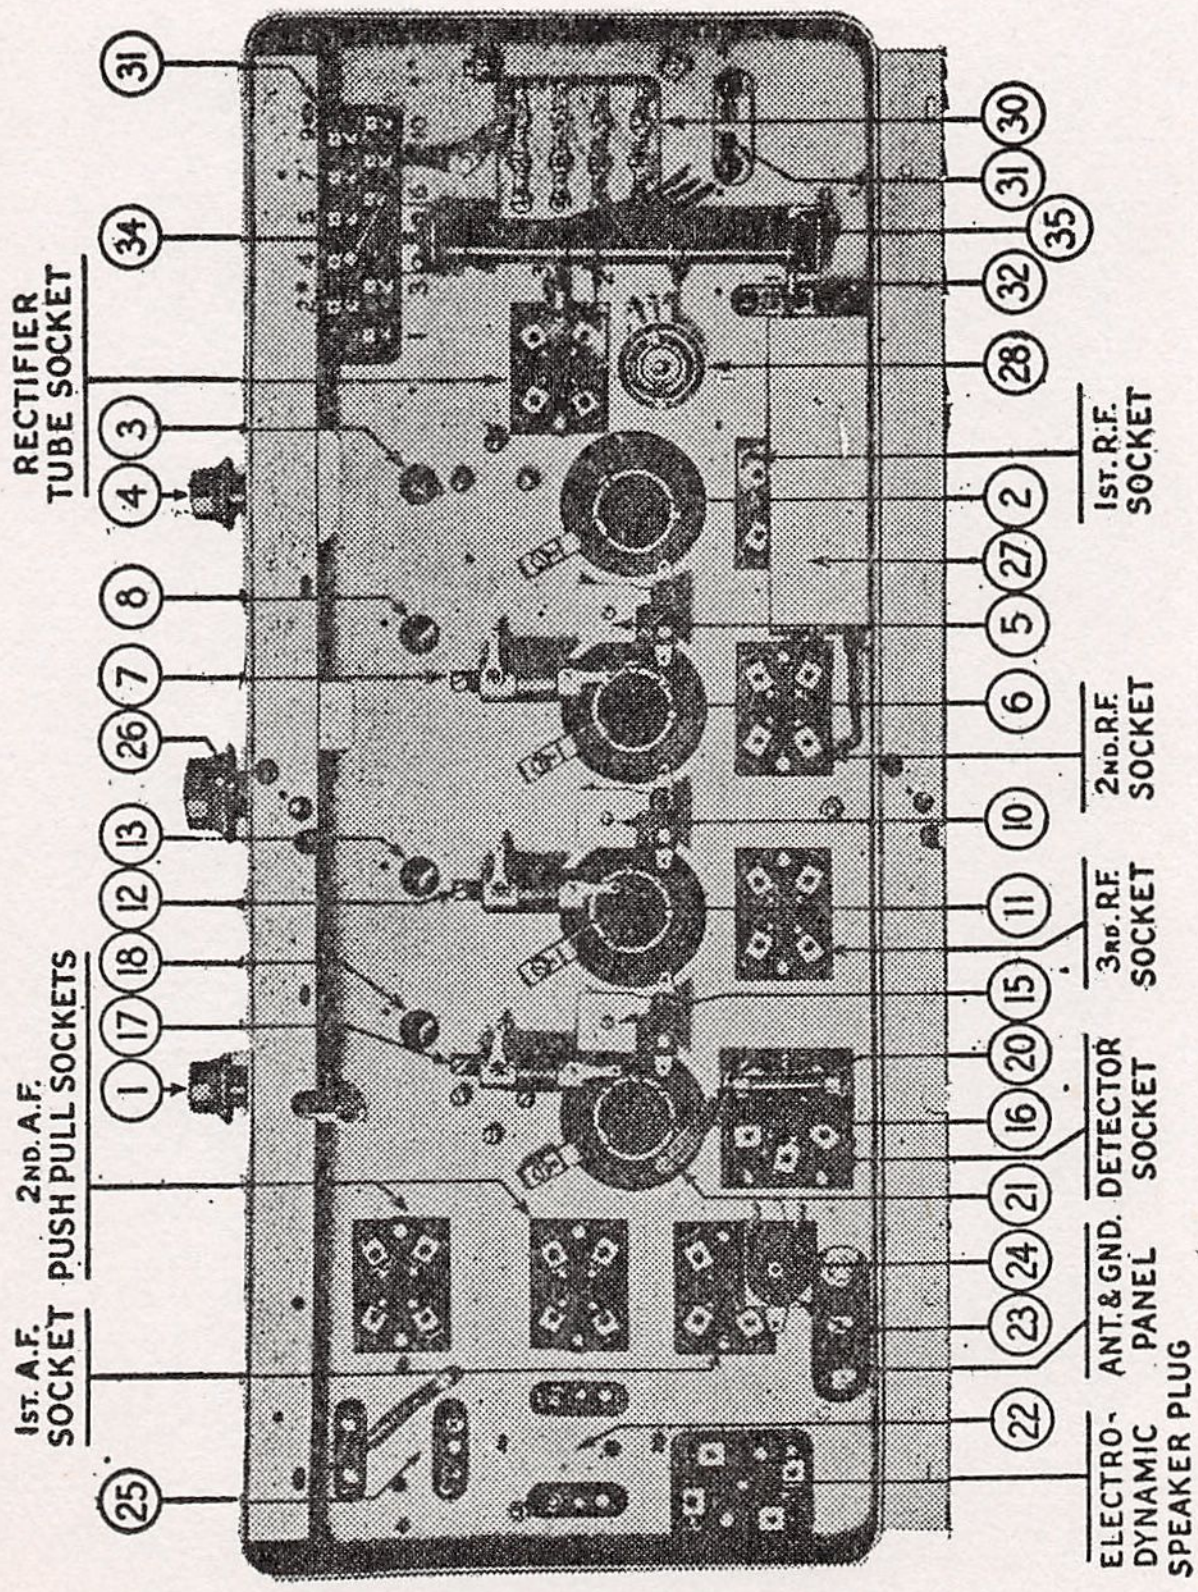
RECTIFIER TUBE SOCKET
2ND. A.F. PUSH PULL SOCKETS
1ST. A.F. SOCKET
31
34
3
4
8
7
26
13
12
18
17
1
25
30
31
35
32
28
2
27
5
6
10
11
15
20
16
21
24
23
22
1ST. R.F. SOCKET
2ND. R.F. SOCKET
3RD. R.F. SOCKET
DETECTOR SOCKET
ANT. & GND. PANEL
ELECTRO-DYNAMIC SPEAKER PLUG

Model 95

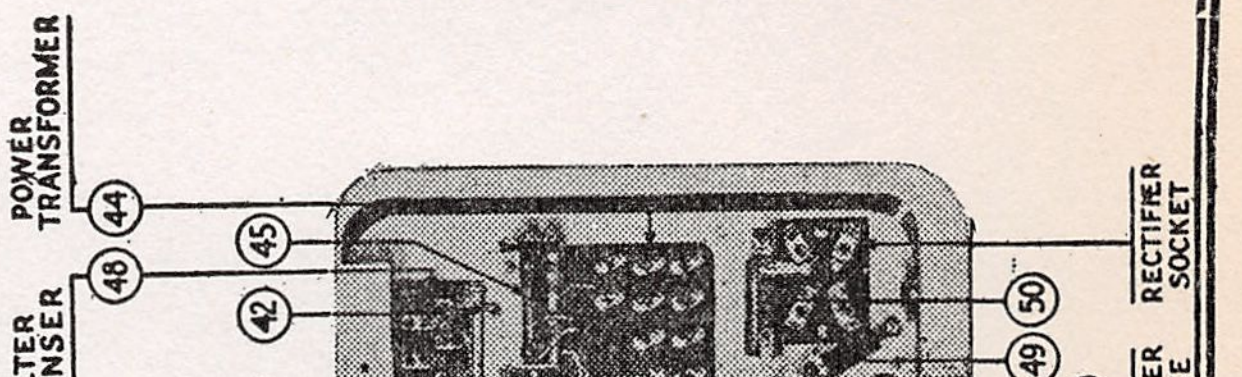
POWER TRANSFORMER
B. FILTER CONDENSER
R.F. TRANSFORMERS (5TH. R.F. TRANSFORMER IS 18)
2nd A.F. PUSH-PULL SOCKETS
1ST A.F. SOCKET
PUSH-PULL TRANS-FORMER
44
48
45
42
36
41
5
3
5
9
7
6
5
12
26
13
16
33
5
14
23
34
37
31
30
28
32
51
RECTIFIER SOCKET
B. FILTER CHOKE
50
49
47
40
2
1
8
10
46
11
24
17
21
15
22
20
19
18
25
27
29
R.F. SOCKETS
DETECTOR SOCKET
SPEAKER SOCKET
DETECTOR AMPLIFIER SOCKET

PILOT RADIO & TUBE CORP.

MODEL Dual Wave Midget
200-2000 meters
MODEL S-141
MODEL K-139

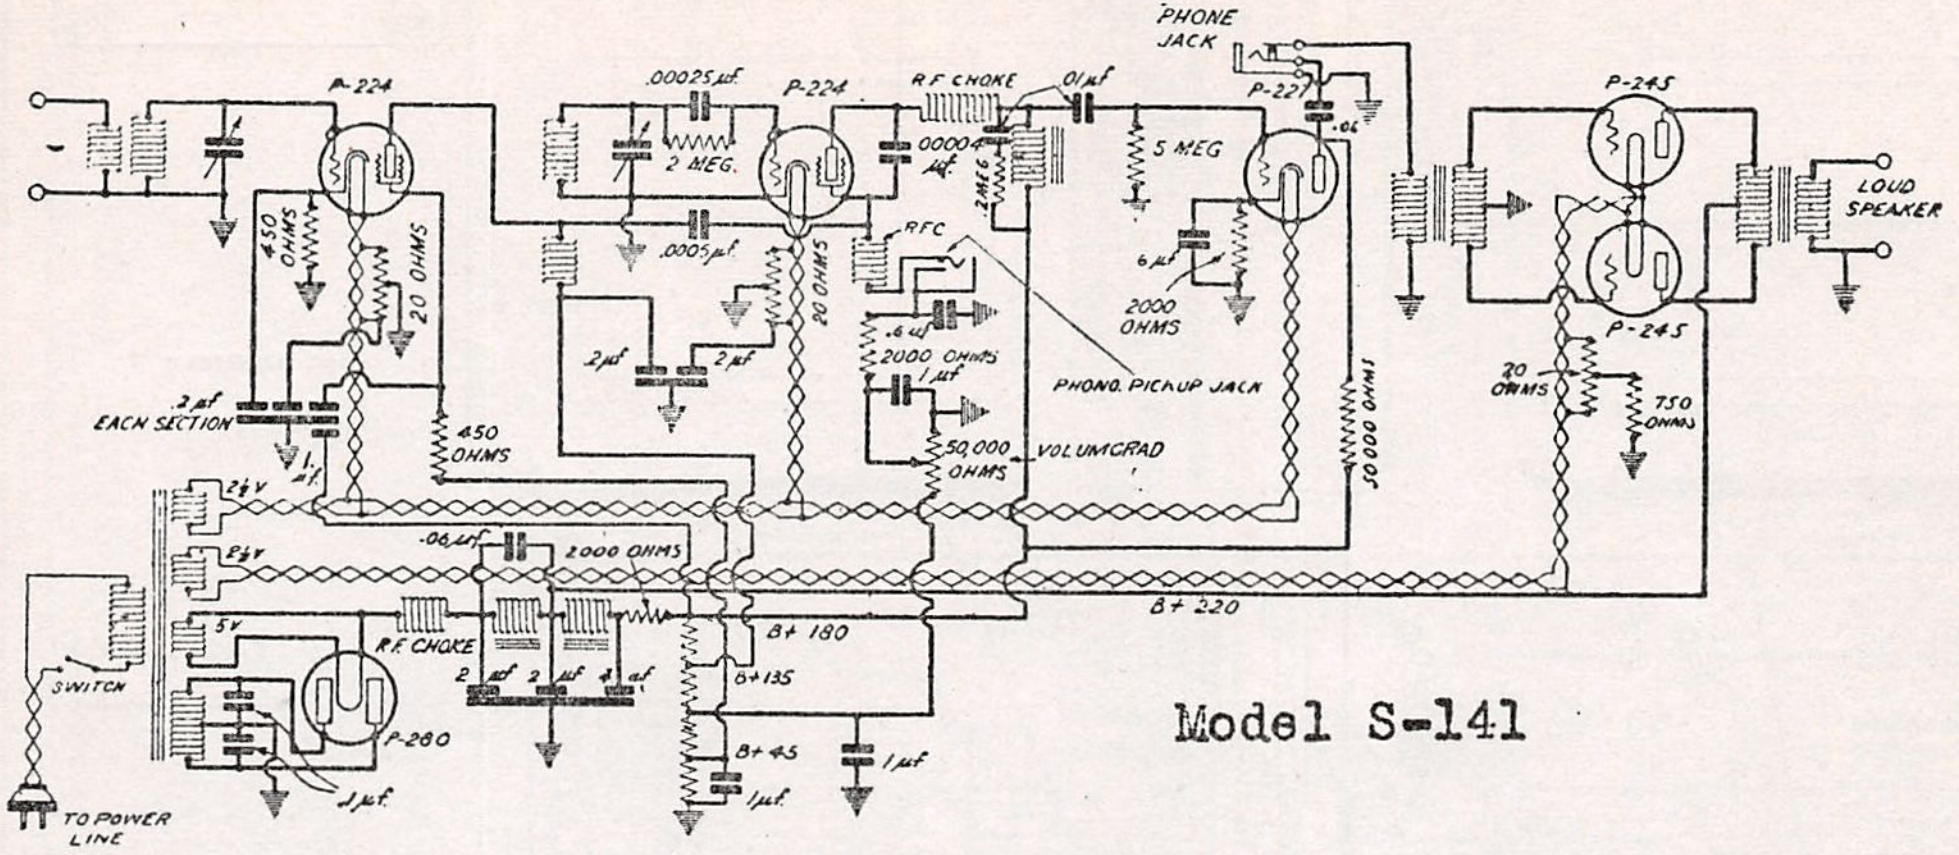
P-224
.00025µf
2 MEG.
P-224
.0005µf
R F CHOKE
.0004 µf
.2 MEG
RFC
.01µf
PHONE JACK
P-227
.06
5 MEG
6µf
2000 OHMS
PHONO. PICKUP JACK
P-245
P-245
LOUD SPEAKER
450 OHMS
20 OHMS
20 OHMS
2µf
2µf
.2µf EACH SECTION
1. µf
450 OHMS
.6µf
2000 OHMS
1µf
50,000 OHMS
VOLUMGRAD
50000 OHMS
20 OHMS
750 OHMS
2½V
2½V
5V
.06µf
2000 OHMS
R.F. CHOKE
2 µf 2 µf 4 µf
B+ 180
B+ 135
B+ 45
1µf
1µf
B+ 220
SWITCH
P-280
.1µf
TO POWER LINE

Model S-141

This schematic diagram of the Universal is a functional hook-up, and does not show the actual connections to the cam switches.

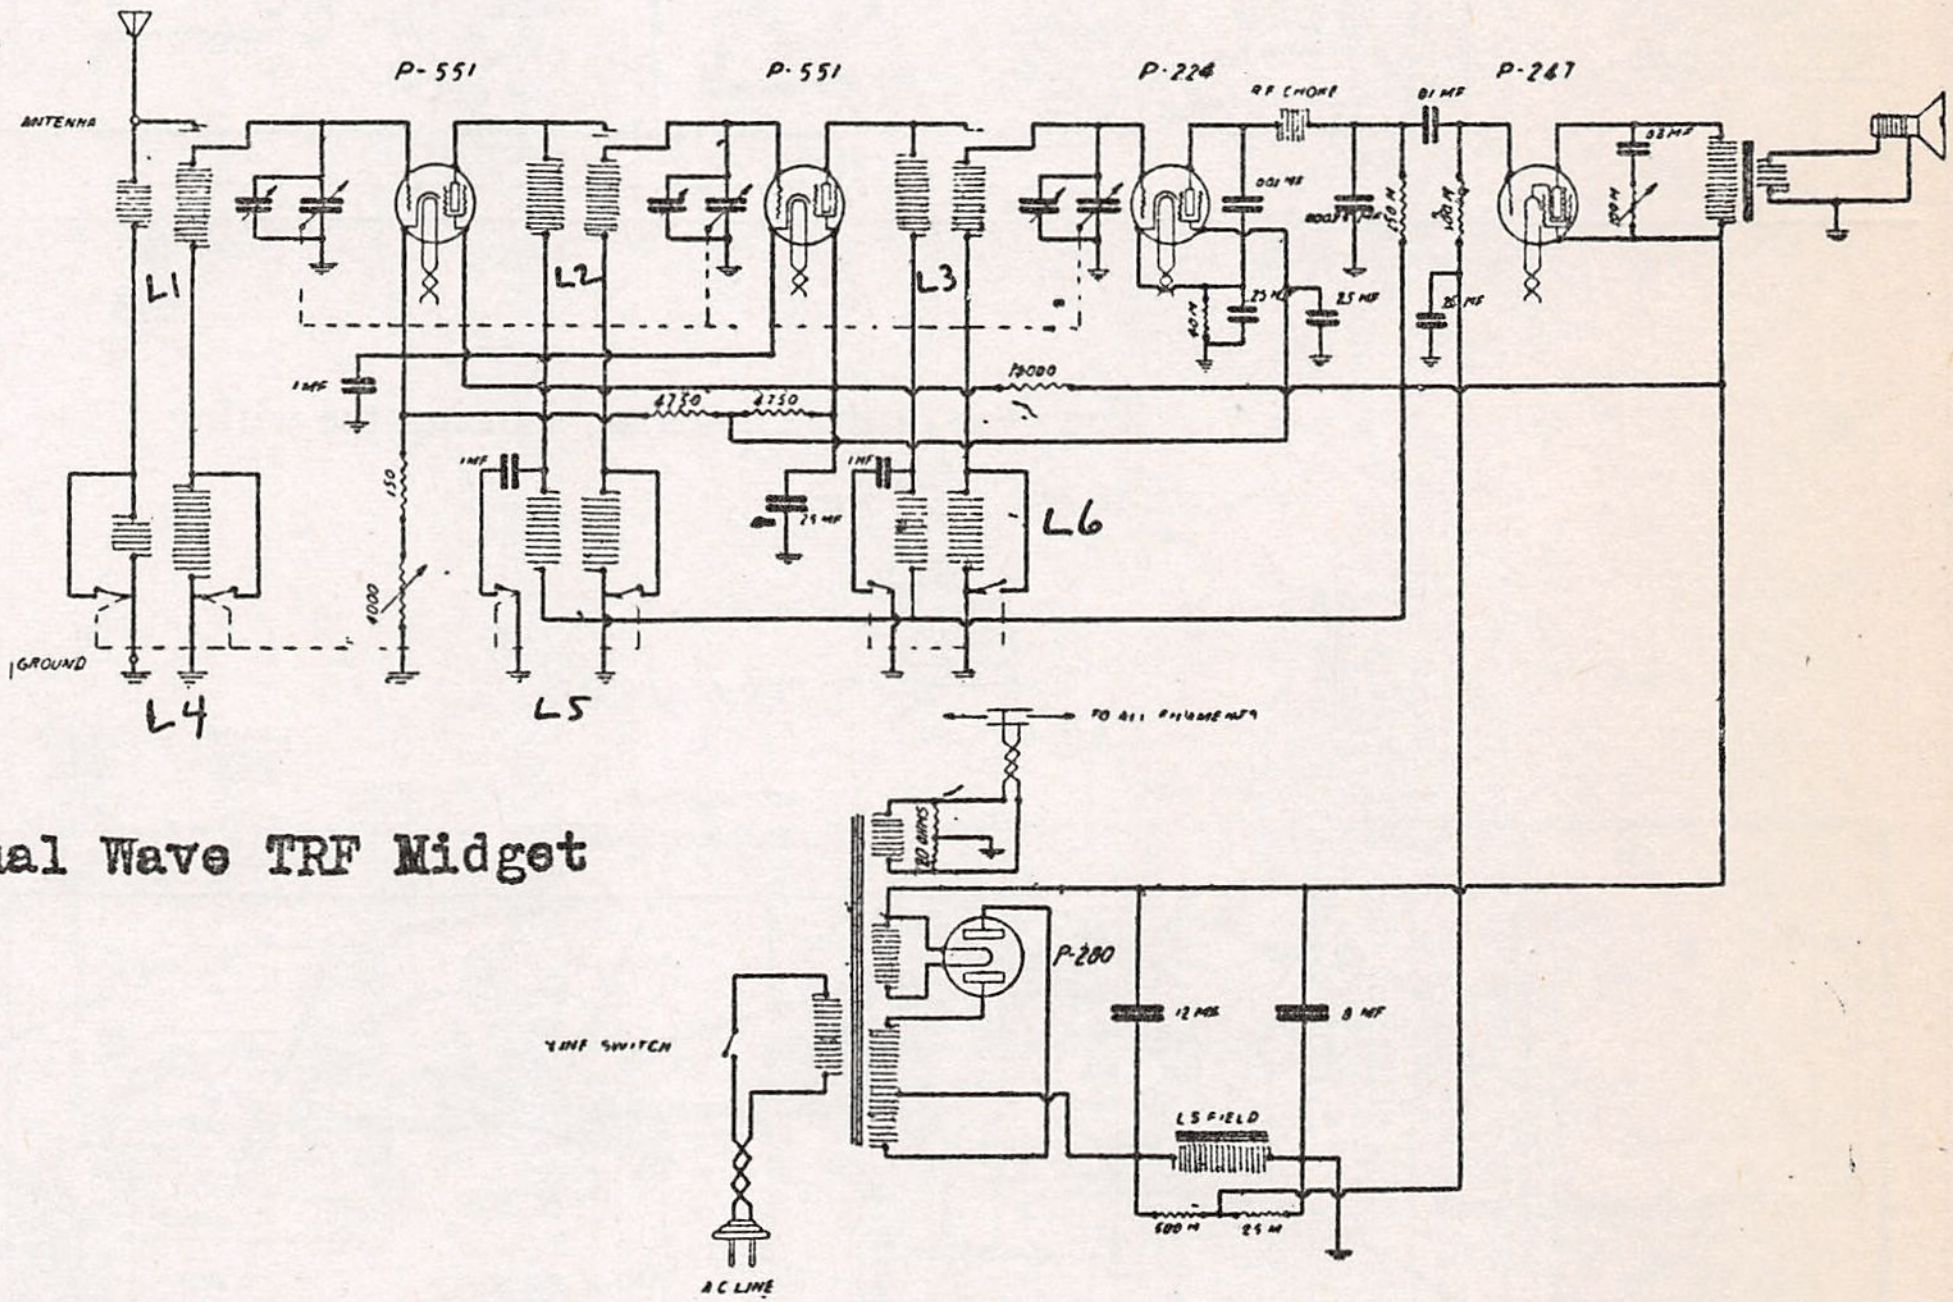
ANTENNA
P-551
P-551
P-224
RF CHOKE
.01 MF
P-247
.001 MF
.02 MF
25 MF
25 MF
25 MF
1 MF
4750
4750
15000
150
1000
1 MF
1 MF
25 MF
L1
L2
L3
L4
L5
L6
GROUND
TO ALL FILAMENTS
20 OHMS
P-280
12 MF
8 MF
LS FIELD
LINE SWITCH
A C LINE

Model Dual Wave TRF Midget

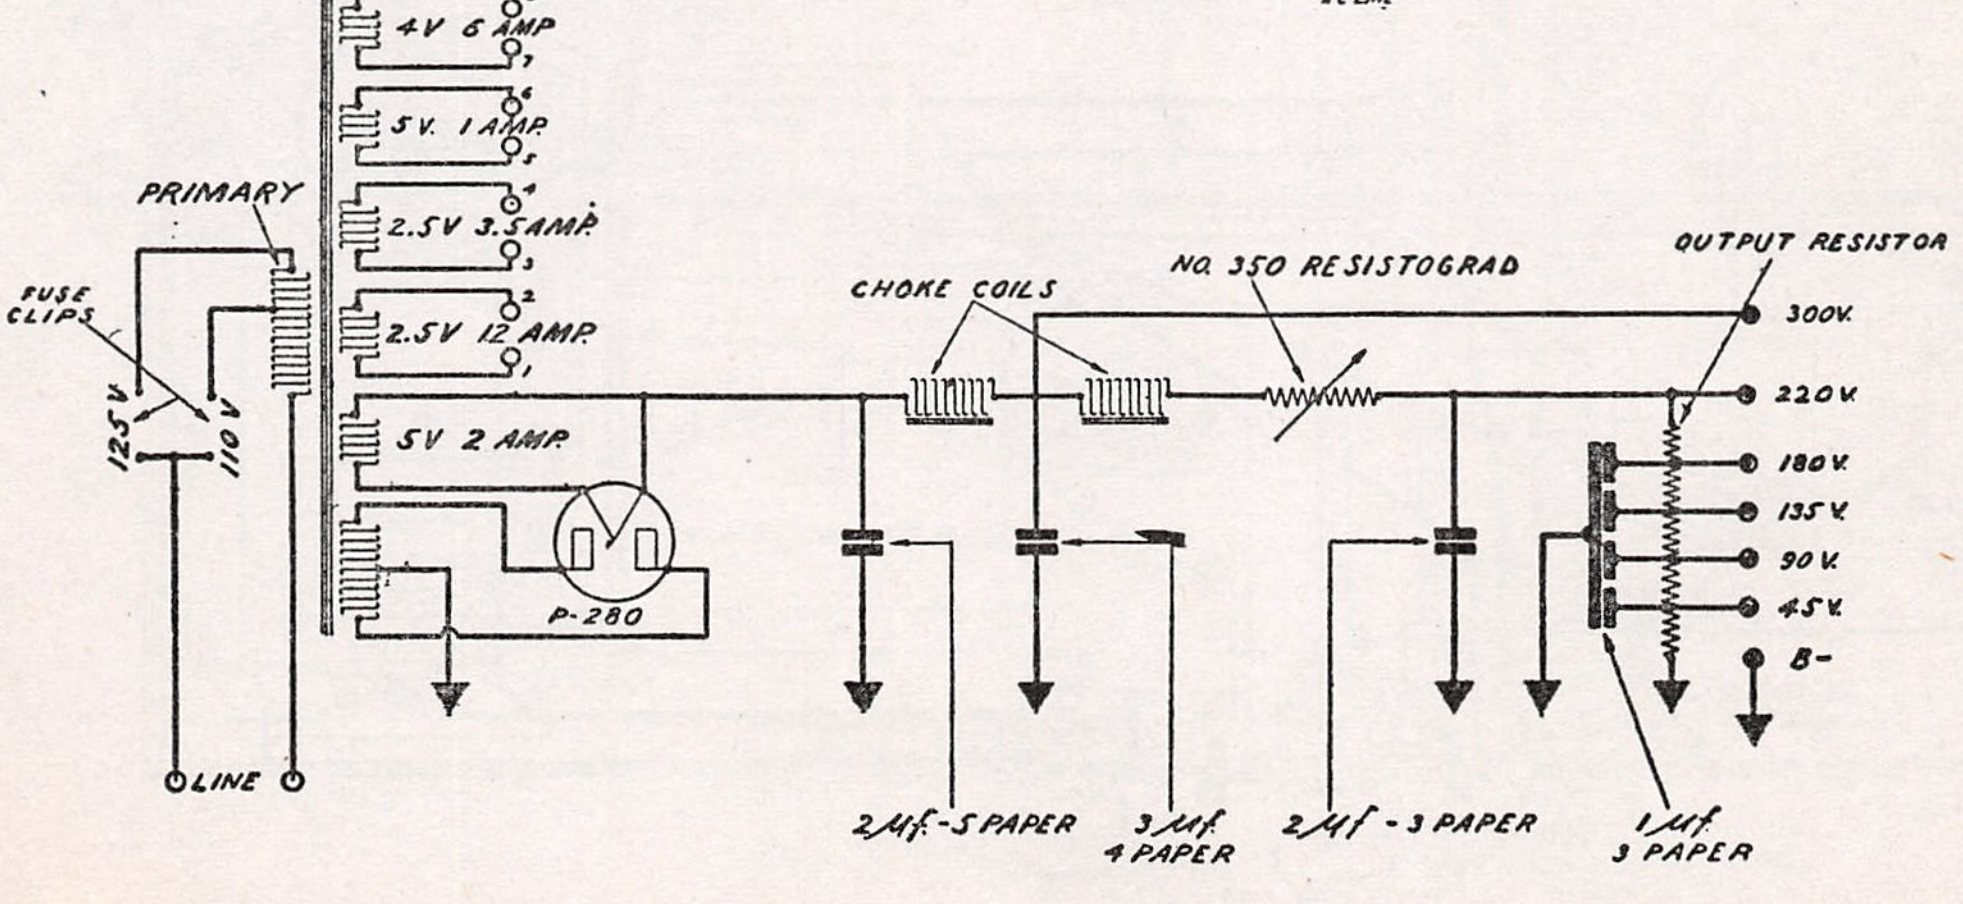
SECONDARIES
4V 6 AMP
5V. 1 AMP.
2.5V 3.5 AMP.
2.5V 12 AMP.
5V 2 AMP.
8
7
6
5
4
3
2
1
PRIMARY
FUSE CLIPS
125 V
110 V
LINE
P-280
CHOKE COILS
NO. 350 RESISTOGRAD
OUTPUT RESISTOR
300V.
220V.
180V.
135V.
90V.
45V.
B-
2 µf - 5 PAPER
3 µf 4 PAPER
2 µf - 3 PAPER
1 µf 3 PAPER

Model K-139 Pack

MODEL K-136
AC Universal
Wasp
Chassis

PILOT RADIO & TUBE CORP.

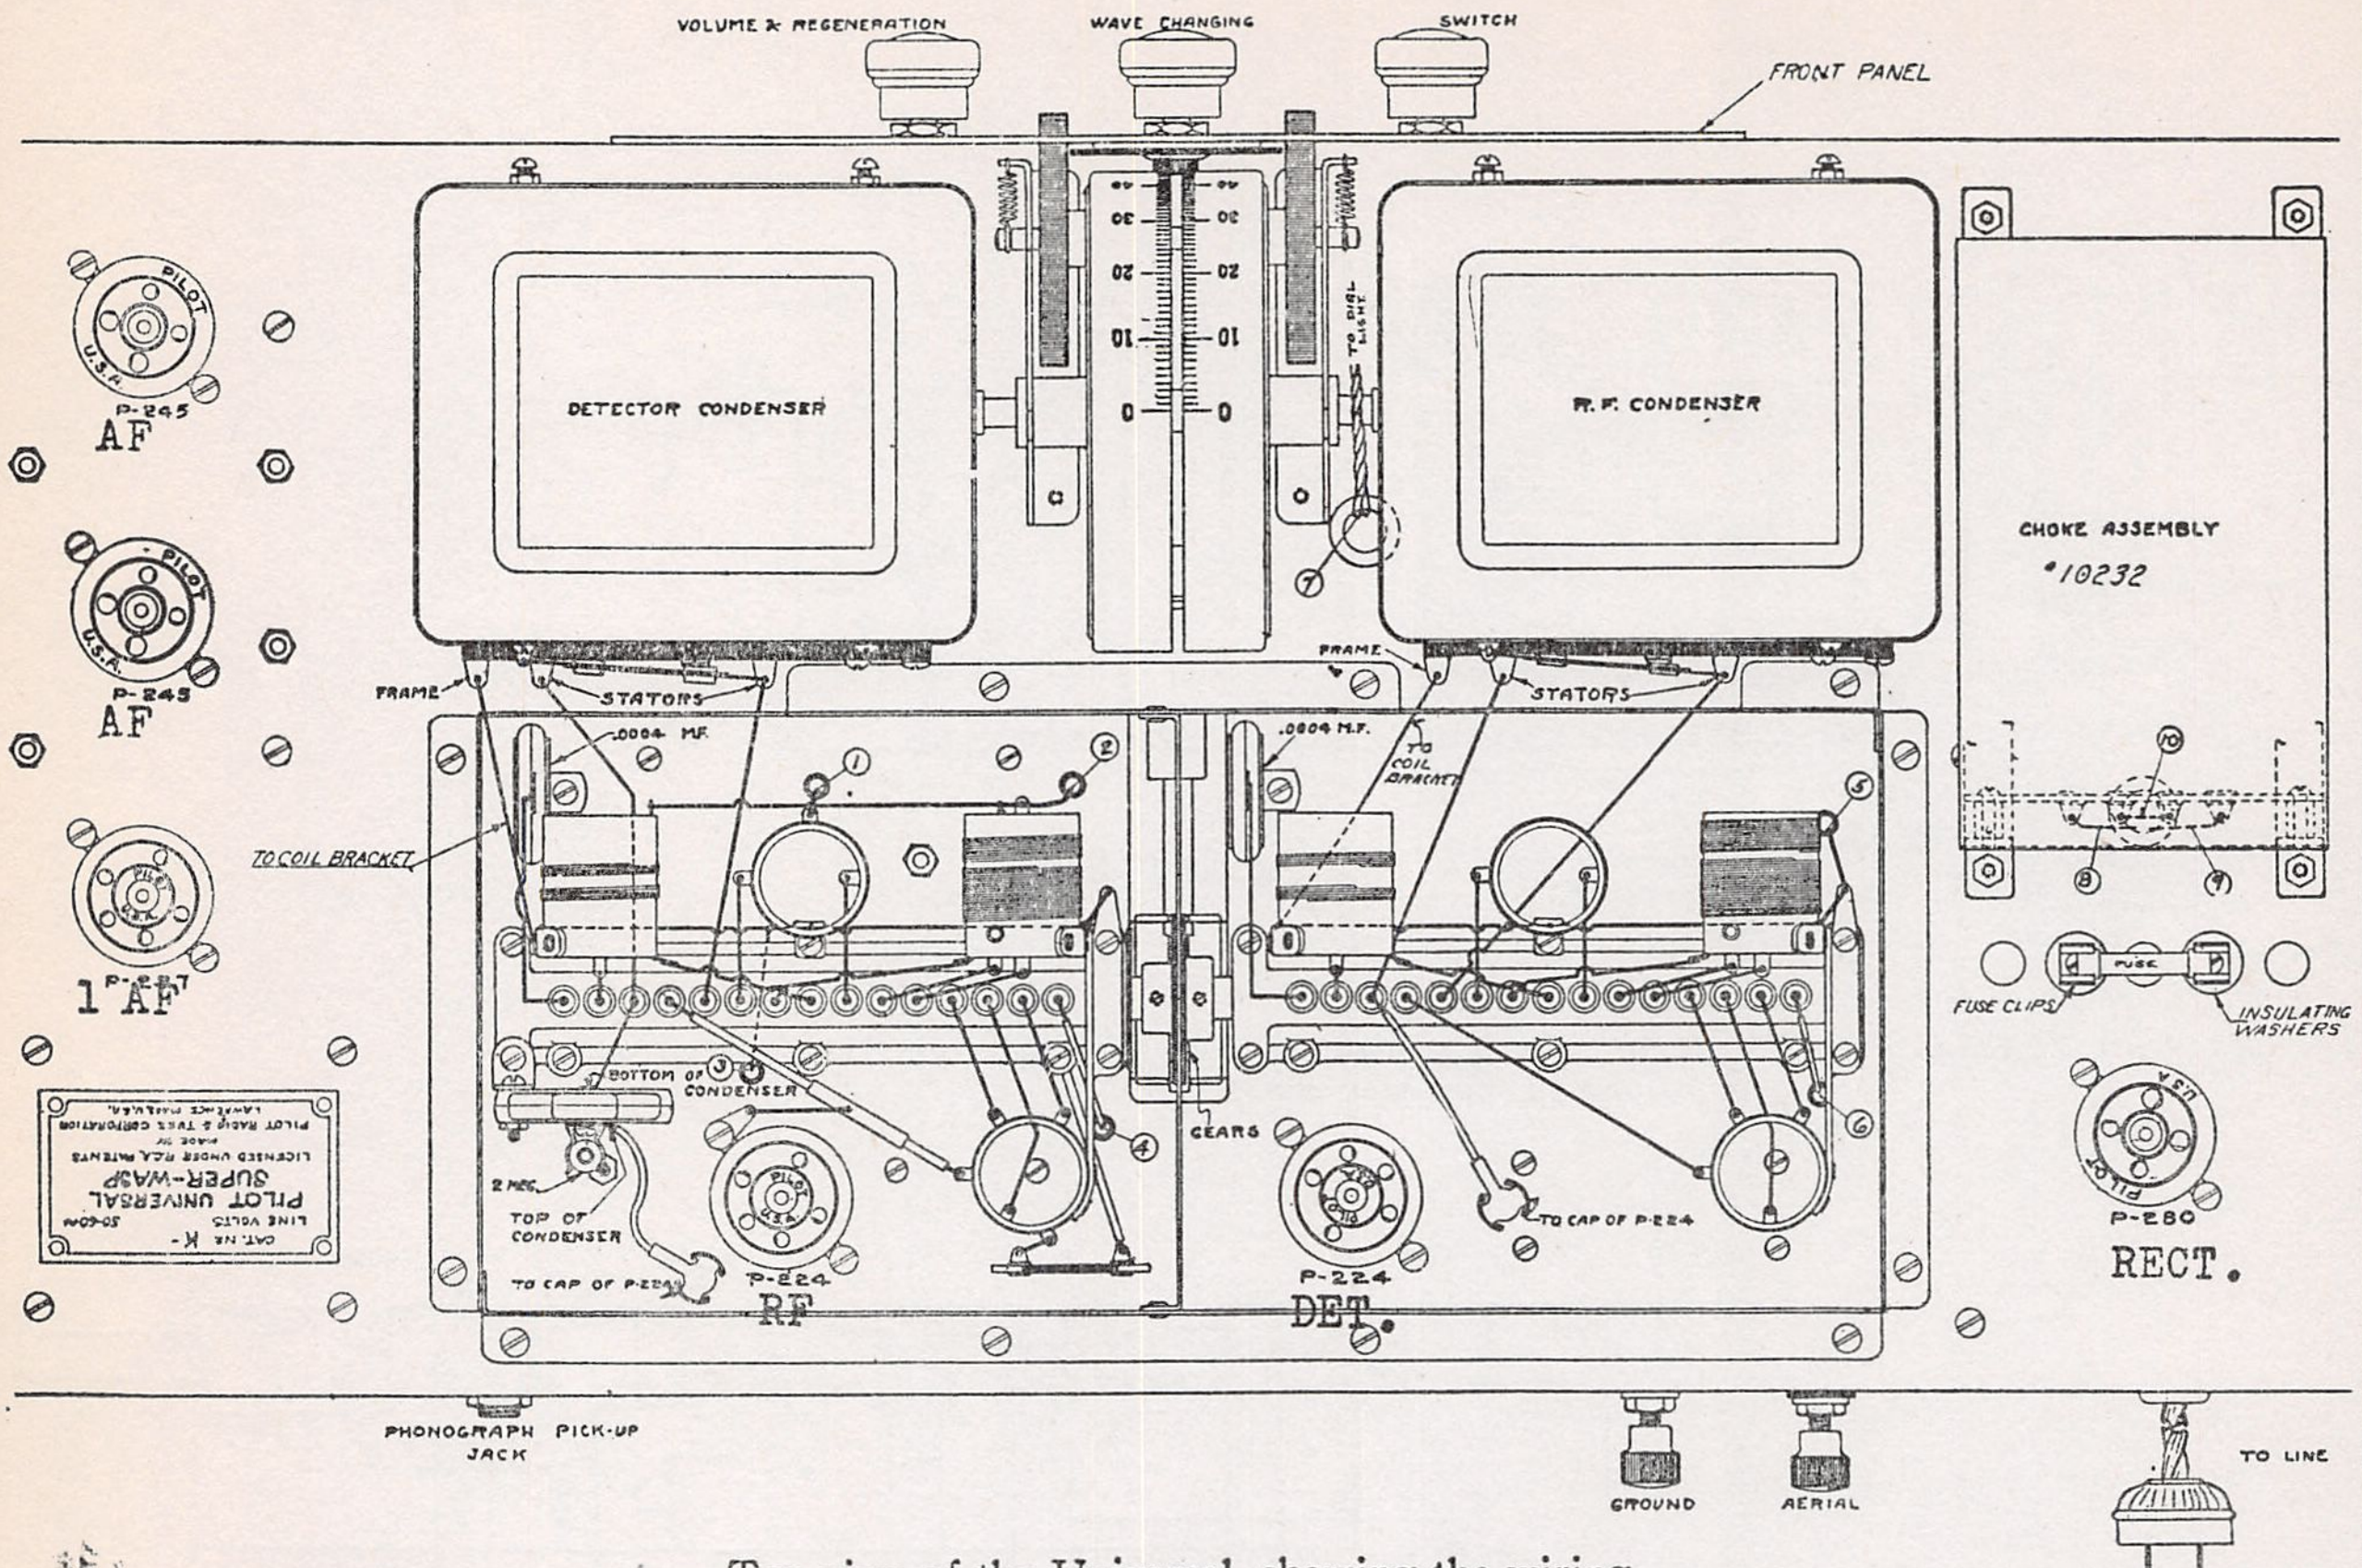
VOLUME & REGENERATION
WAVE CHANGING
SWITCH
FRONT PANEL
DETECTOR CONDENSER
R.F. CONDENSER
CHOKE ASSEMBLY
#10232
P-245
AF
P-245
AF
1st AF
FRAME
STATORS
.0004 MF.
TO COIL BRACKET
TO COIL BRACKET
TO DIAL LIGHT
BOTTOM OF CONDENSER
2 MEG.
TOP OF CONDENSER
TO CAP OF P-224
P-224
RF
GEARS
P-224
DET.
TO CAP OF P-224
FUSE CLIPS
FUSE
INSULATING WASHERS
P-280
RECT.
PHONOGRAPH PICK-UP JACK
GROUND
AERIAL
TO LINE

Top view of the Universal, showing the wiring.

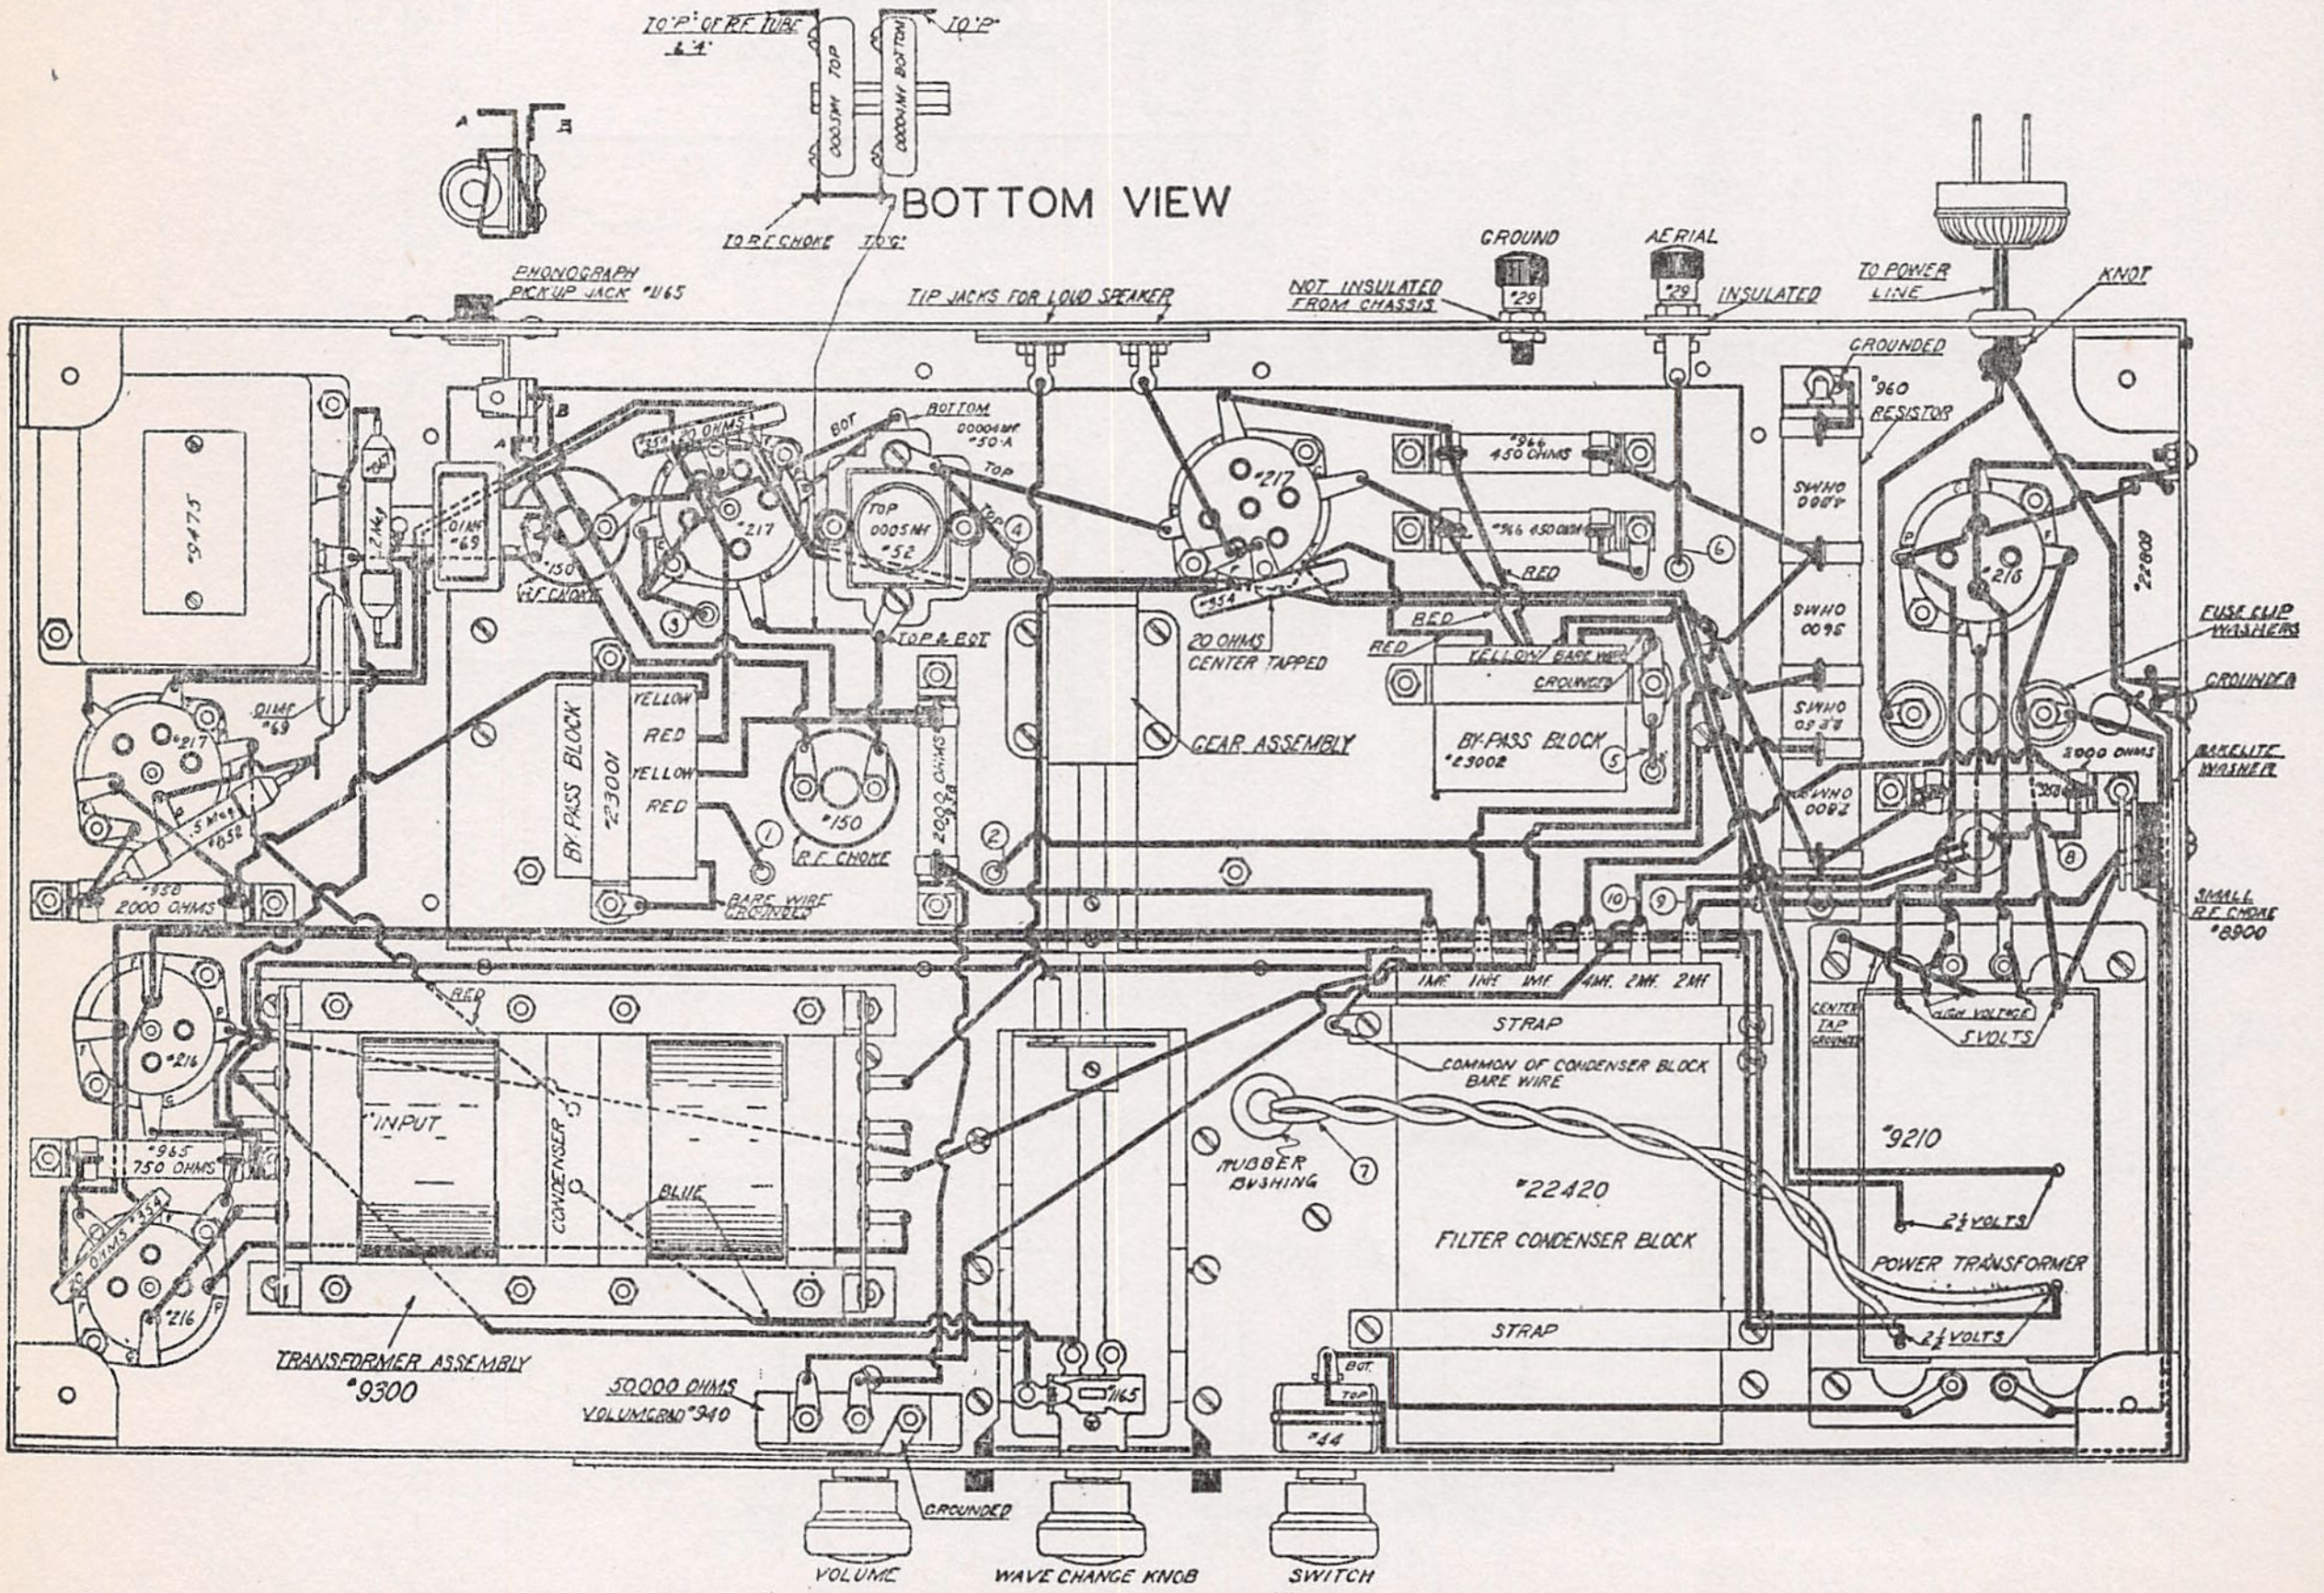
BOTTOM VIEW
TO 'P' OF RF TUBE & '4'
TO 'P'
.00035 MF TOP
.000044 MF BOTTOM
TO R.F. CHOKE
TO 'G'
A
B
PHONOGRAPH PICK-UP JACK #1165
TIP JACKS FOR LOUD SPEAKER
NOT INSULATED FROM CHASSIS
GROUND
#29
AERIAL
#29
INSULATED
TO POWER LINE
KNOT
GROUNDED
#960 RESISTOR
#9475
.01 MF #69
2 Meg
#150 R.F. CHOKE
#354 20 OHMS
#217
BOTTOM .00004 MF #50-A
BOT
TOP
TOP .0005 MF #52
TOP & BOT
#217
#966 450 OHMS
#966 450 OHMS
RED
RED
RED
YELLOW
BARE WIRE
GROUNDED
20 OHMS CENTER TAPPED
#354
GEAR ASSEMBLY
BY-PASS BLOCK #23002
4800 OHMS
9600 OHMS
3.8 50 OHMS
2800 OHMS
#216
#22809
FUSE CLIP WASHERS
GROUNDED
2000 OHMS
BAKELITE WASHER
SMALL R.F. CHOKE #8900
.01 MF #69
#217
.5 Meg #852
#950 2000 OHMS
BY-PASS BLOCK #23001
YELLOW
RED
YELLOW
RED
#150 R.F. CHOKE
2000 OHMS #938
BARE WIRE GROUNDED
1MF
1MF
1MF
4MF
2MF
2MF
STRAP
COMMON OF CONDENSER BLOCK BARE WIRE
CENTER TAP GROUNDED
HIGH VOLTAGE
5 VOLTS
#9210
2½ VOLTS
POWER TRANSFORMER
2½ VOLTS
RED
#216
INPUT
CONDENSER
BLUE
#965 750 OHMS
20 OHMS #354
#216
TRANSFORMER ASSEMBLY #9300
RUBBER BUSHING
#22420
FILTER CONDENSER BLOCK
STRAP
50,000 OHMS VOLUMGRAD #940
#1165
BOT
TOP
#44
GROUNDED
VOLUME
WAVE CHANGE KNOB
SWITCH
1
2
3
4
5
6
7
8
9
10

PILOT RADIO & TUBE CORP.

MODEL C-153,C-154
(With 2-'45s)
10 Tube Super

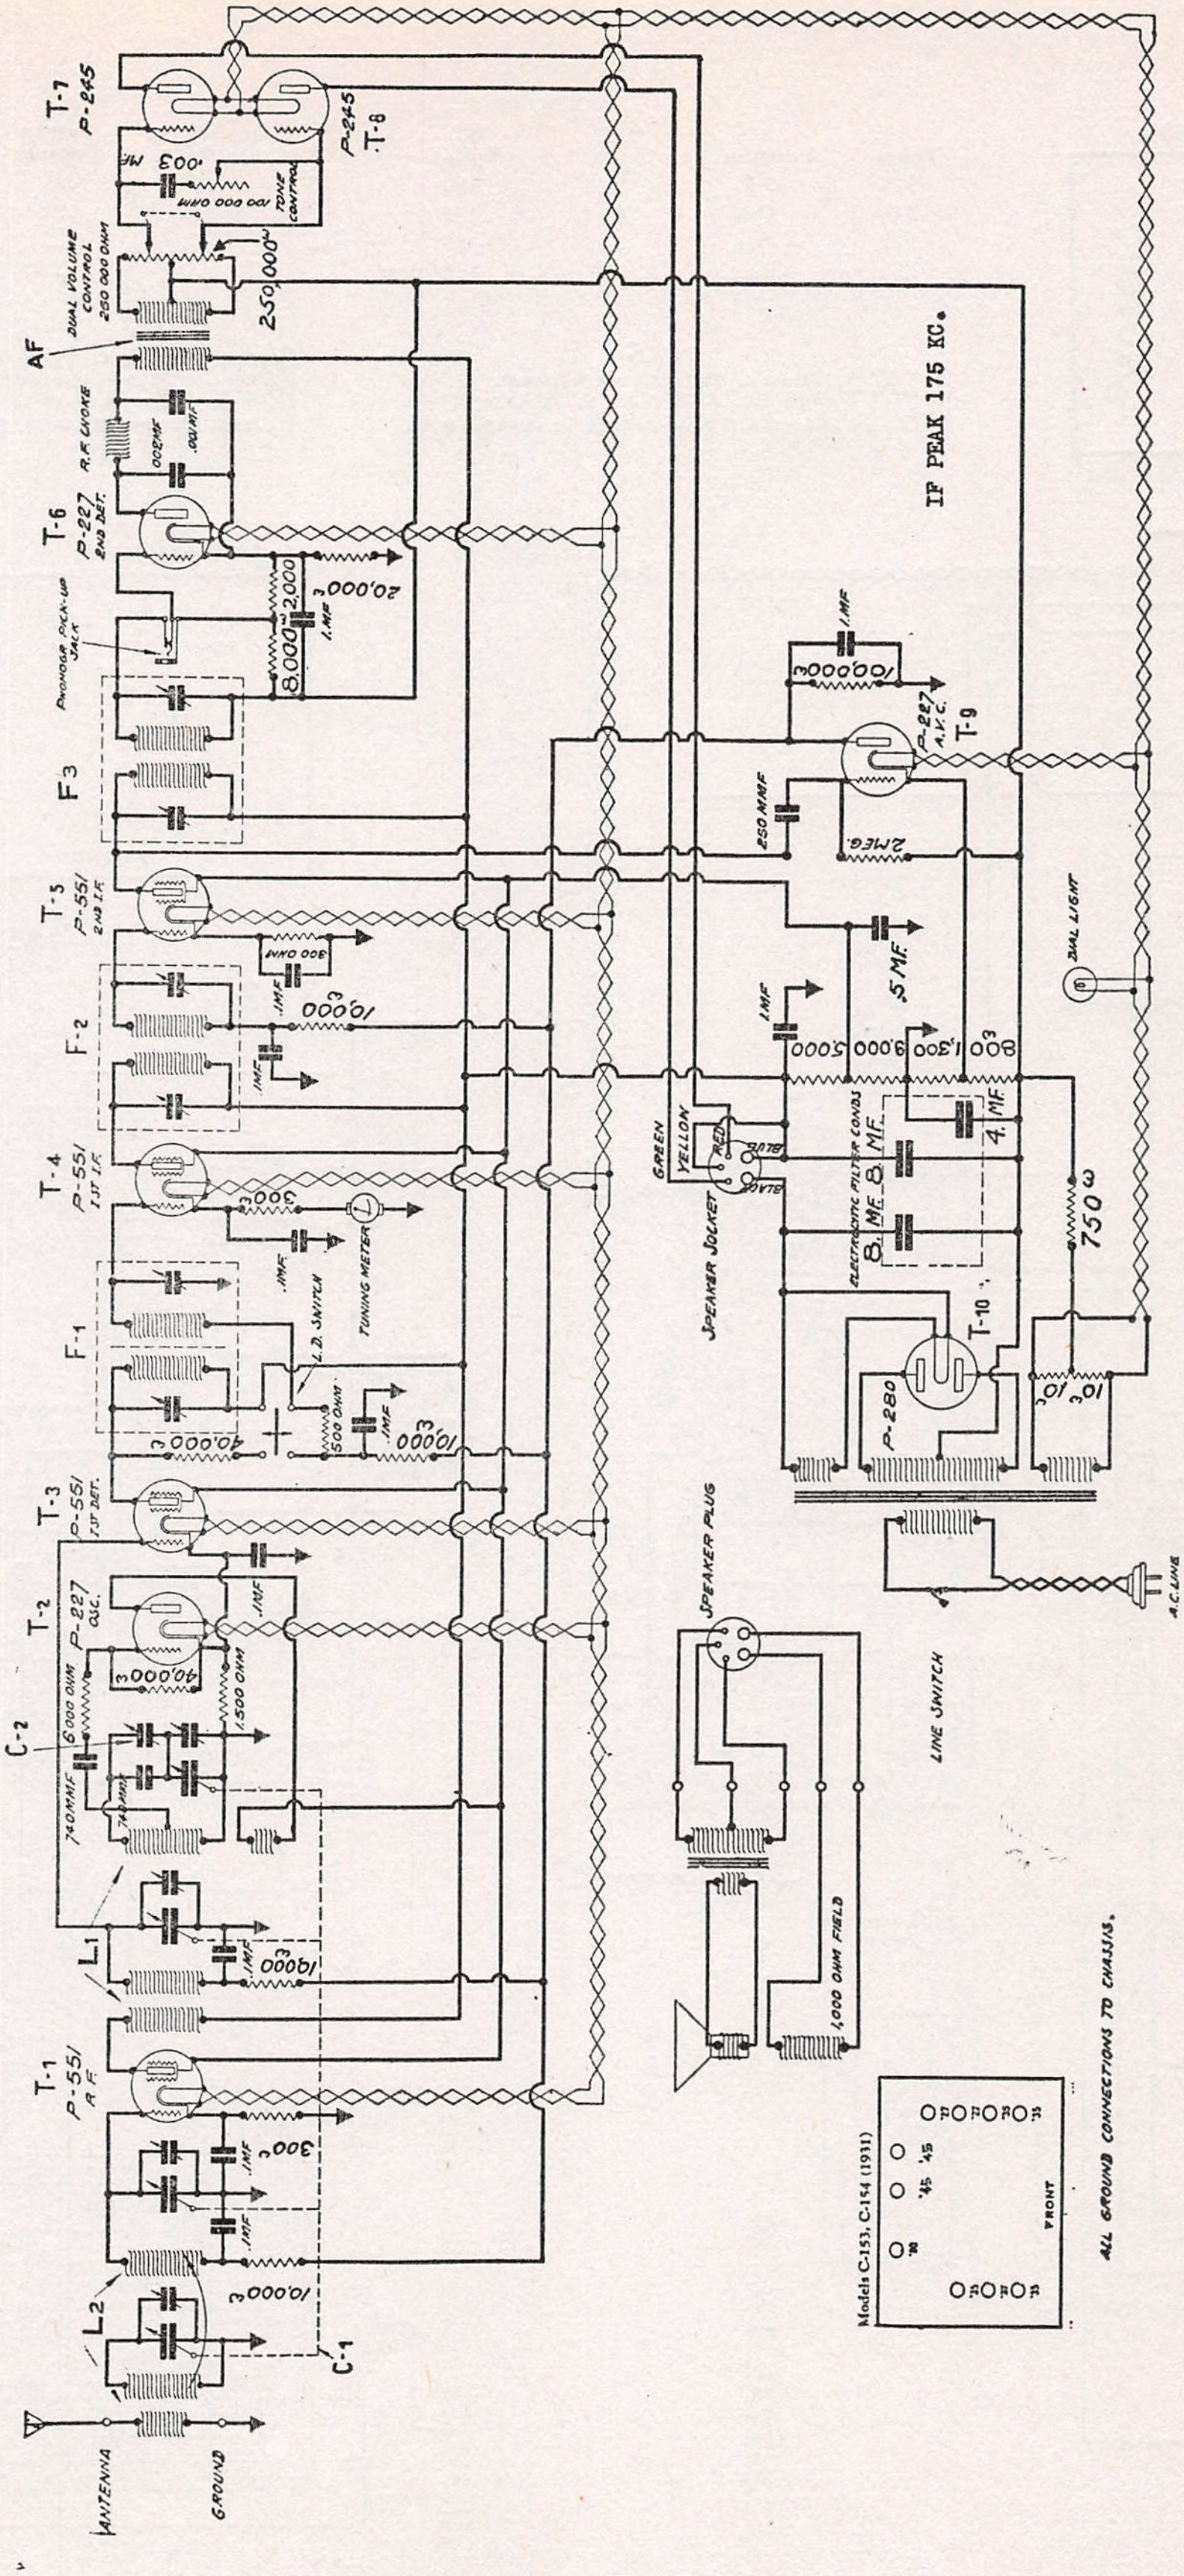
T-1 P-551 A.F.
T-2 P-227 OSC.
T-3 P-551 1ST DET.
T-4 P-551 1ST I.F.
T-5 P-551 2ND I.F.
T-6 P-227 2ND DET.
T-7 P-245
T-8 P-245
T-9 P-227 A.V.C.
T-10 P-280
L1
L2
C-1
C-2
F1
F2
F3
AF
ANTENNA
GROUND
IF PEAK 175 KC.
DUAL VOLUME CONTROL 250 000 OHM
250,000Ω
TONE CONTROL 100 000 OHM
.003 MF
R.F. CHOKE
.002 MF
.001 MF
PHONOGRAPH PICK-UP JACK
20,000
2,000
8,000
1 MF
100,000
250 MMF
2 MEG.
DIAL LIGHT
.5 MF
10,000
800 OHM
300
TUNING METER
L.D. SWITCH
500 OHM
40,000
5,000
9,000
1,300
800
740 MMF
6000 OHM
1,500 OHM
GREEN
YELLOW
RED
SPEAKER SOCKET
ELECTROLYTIC FILTER CONDS
8 MF
8 MF
4 MF
750Ω
.01
.01
A.C. LINE
LINE SWITCH
SPEAKER PLUG
1000 OHM FIELD
ALL GROUND CONNECTIONS TO CHASSIS.
Models C-153, C-154 (1931)
FRONT
'45
'45
80

MODEL V-191
MODEL C-153,C-154

PILOT RADIO & TUBE CORP.

Models C-153, C-154 (1931)

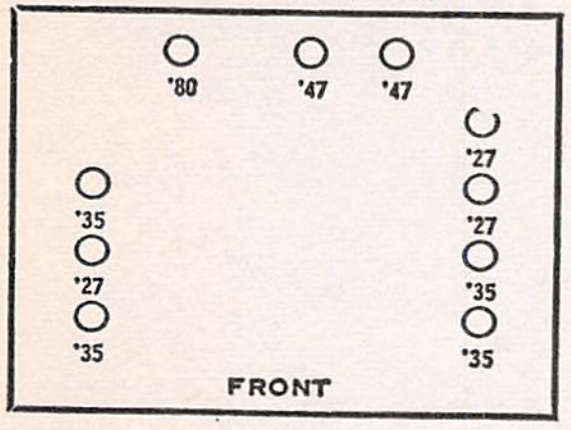
'80
'47
'47
'27
'27
'35
'35
'27
'35
'35
'27
'35
FRONT

Tubes	Position	"A" Volts	"B" Volts	"C" Volts	Screen Volts	Screen Current	Plate Current
224	I F	2.45	190	1.5	72	.65	2.6
224	Det.	2.45	185	9	63	.01	0.02
227	Osc.	2.45	85	...	..	...	10.7
280	Rect.	5.0	265/plate	...	..	...	14.0 per anode

Code

"A" Volts—a.c. volts across filament.
"B" Volts—d.c. volts plate to cathode.
"C" Volts—d.c. volts cathode to control grid.

Screen volts—d.c. volts screen grid to cathode.
Screen current—d.c. mils. screen grid cireuit.
Cathode volts—d.c. volts cathode to filament.
Plate current—d.c. miis, plate circuit.

Model V-191 (1931)

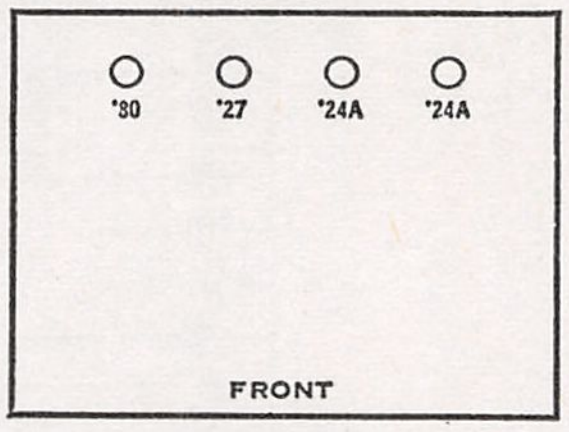
'80
'27
'24A
'24A
FRONT

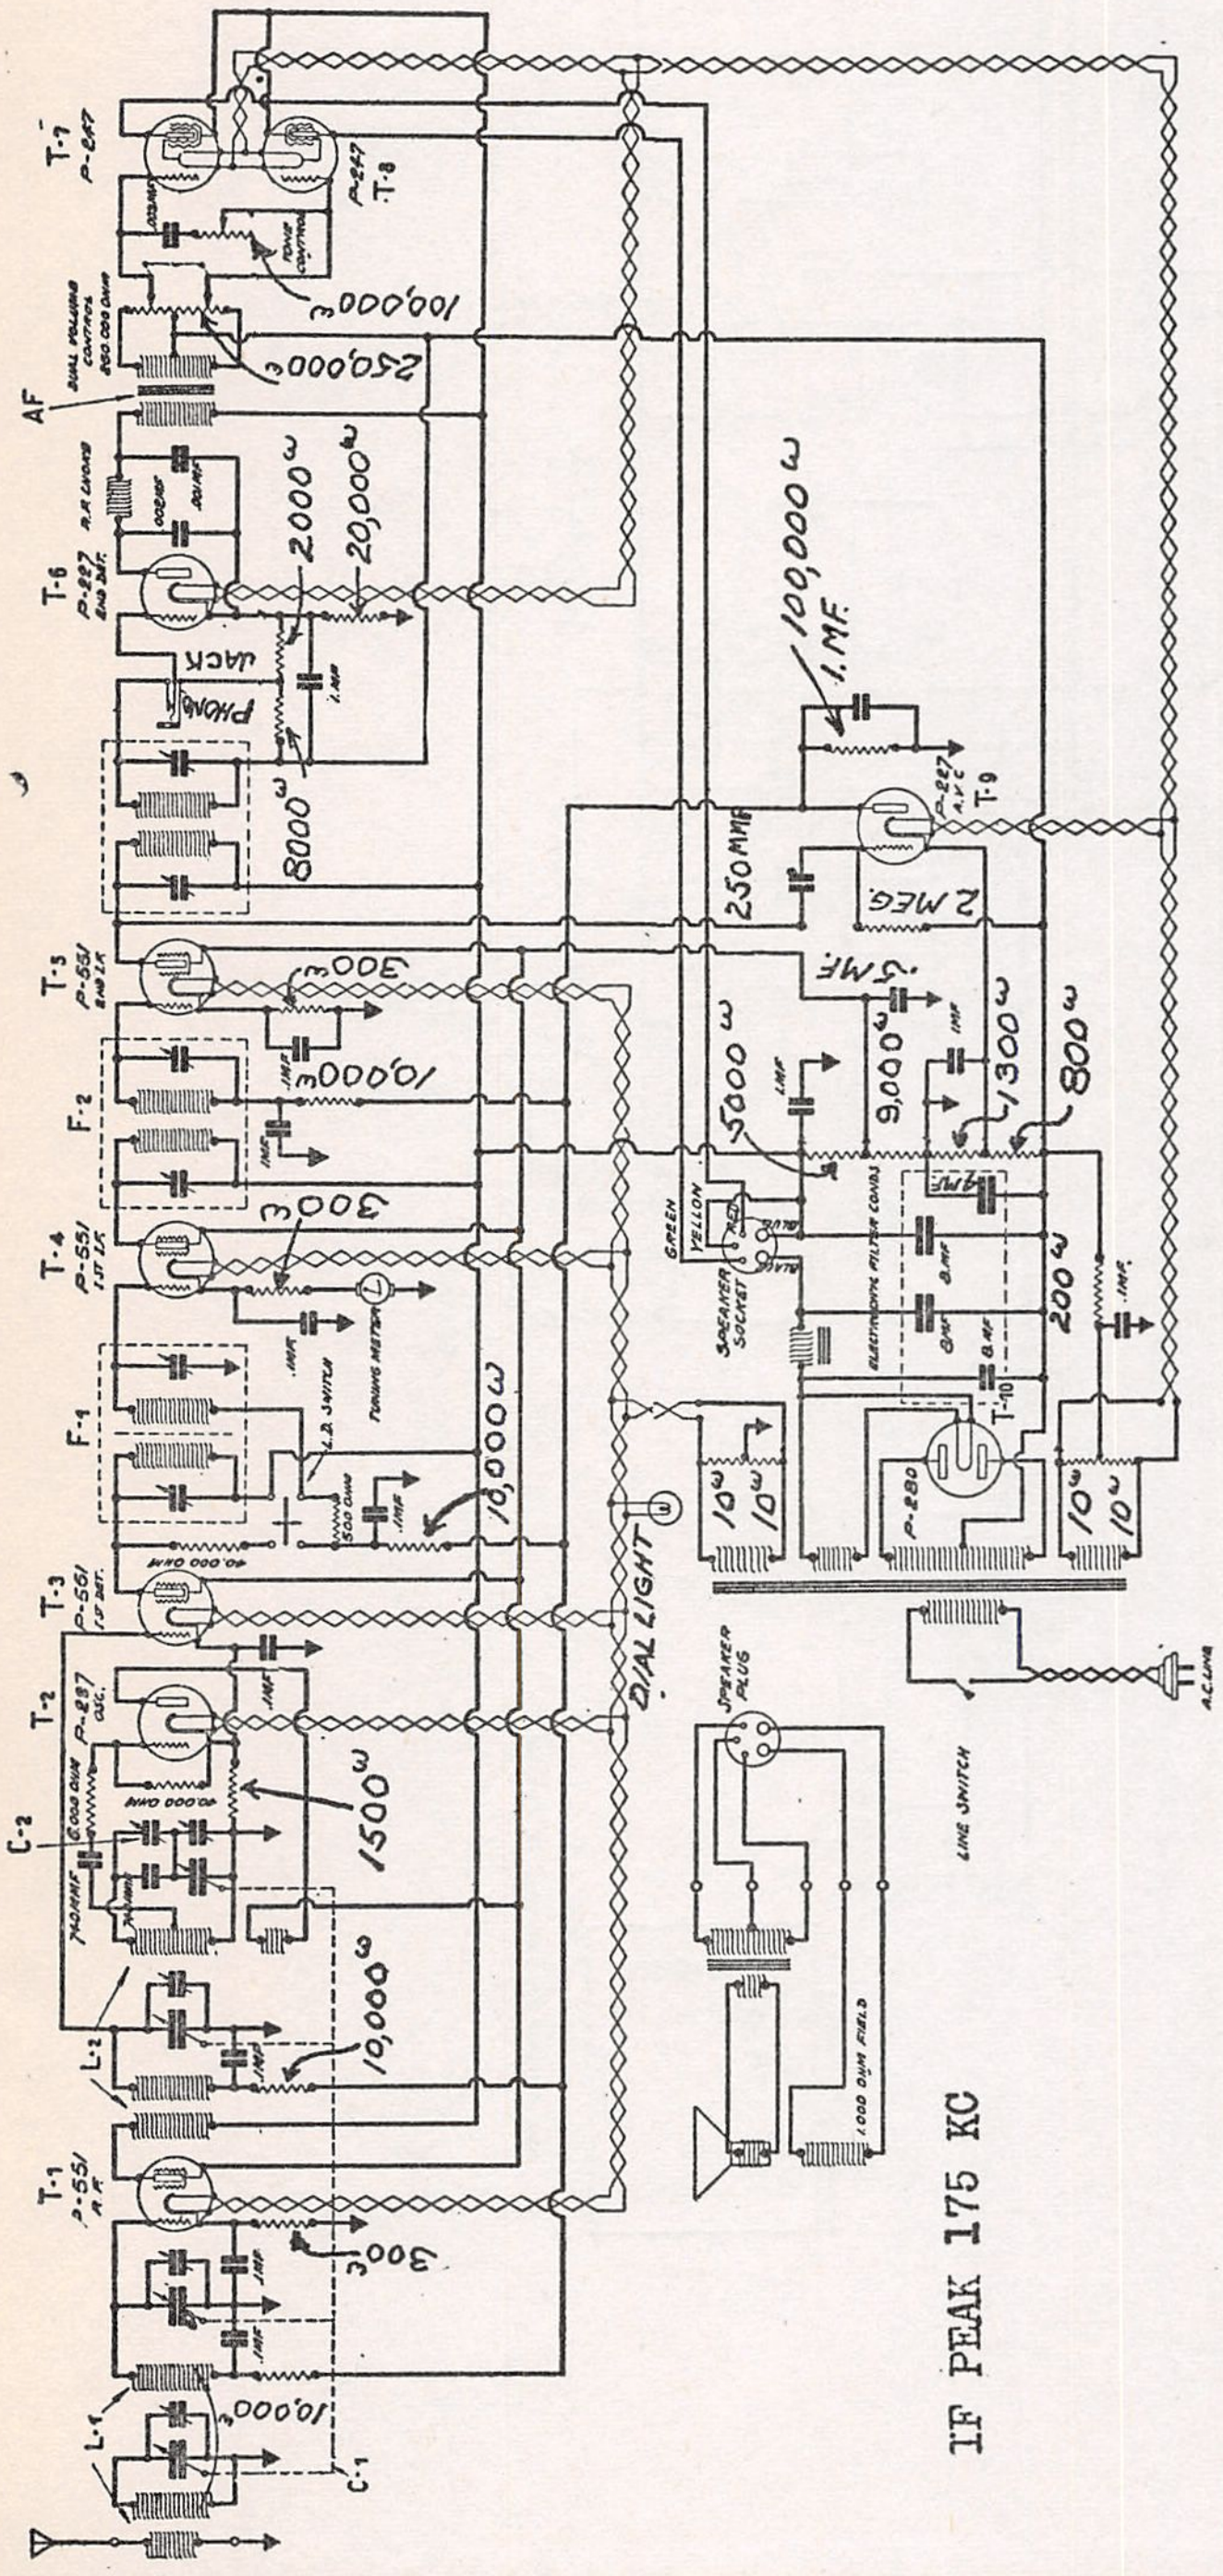
T-7
P-247
P-247
T-8
100,000ω
250,000ω
AF
T-6
P-227
2000ω
20,000ω
JACK
PHONE
8000ω
100,000ω
.1 MF.
P-227
T-9
250 MMF
2 MEG.
.5MF.
T-5
P-551
300ω
10,000ω
5000ω
9,000ω
1300ω
800ω
F-2
T-4
P-551
300ω
GREEN
YELLOW
SPEAKER SOCKET
200ω
TUNING METER
F-1
10,000ω
T-10
P-280
10ω
10ω
10ω
10ω
DIAL LIGHT
AC LINE
LINE SWITCH
T-3
P-551
T-2
P-227
OSC.
1500ω
C-2
SPEAKER PLUG
L-2
10,000ω
1000 OHM FIELD
T-1
P-551
300ω
L-1
10,000
C-1

IF PEAK 175 KC

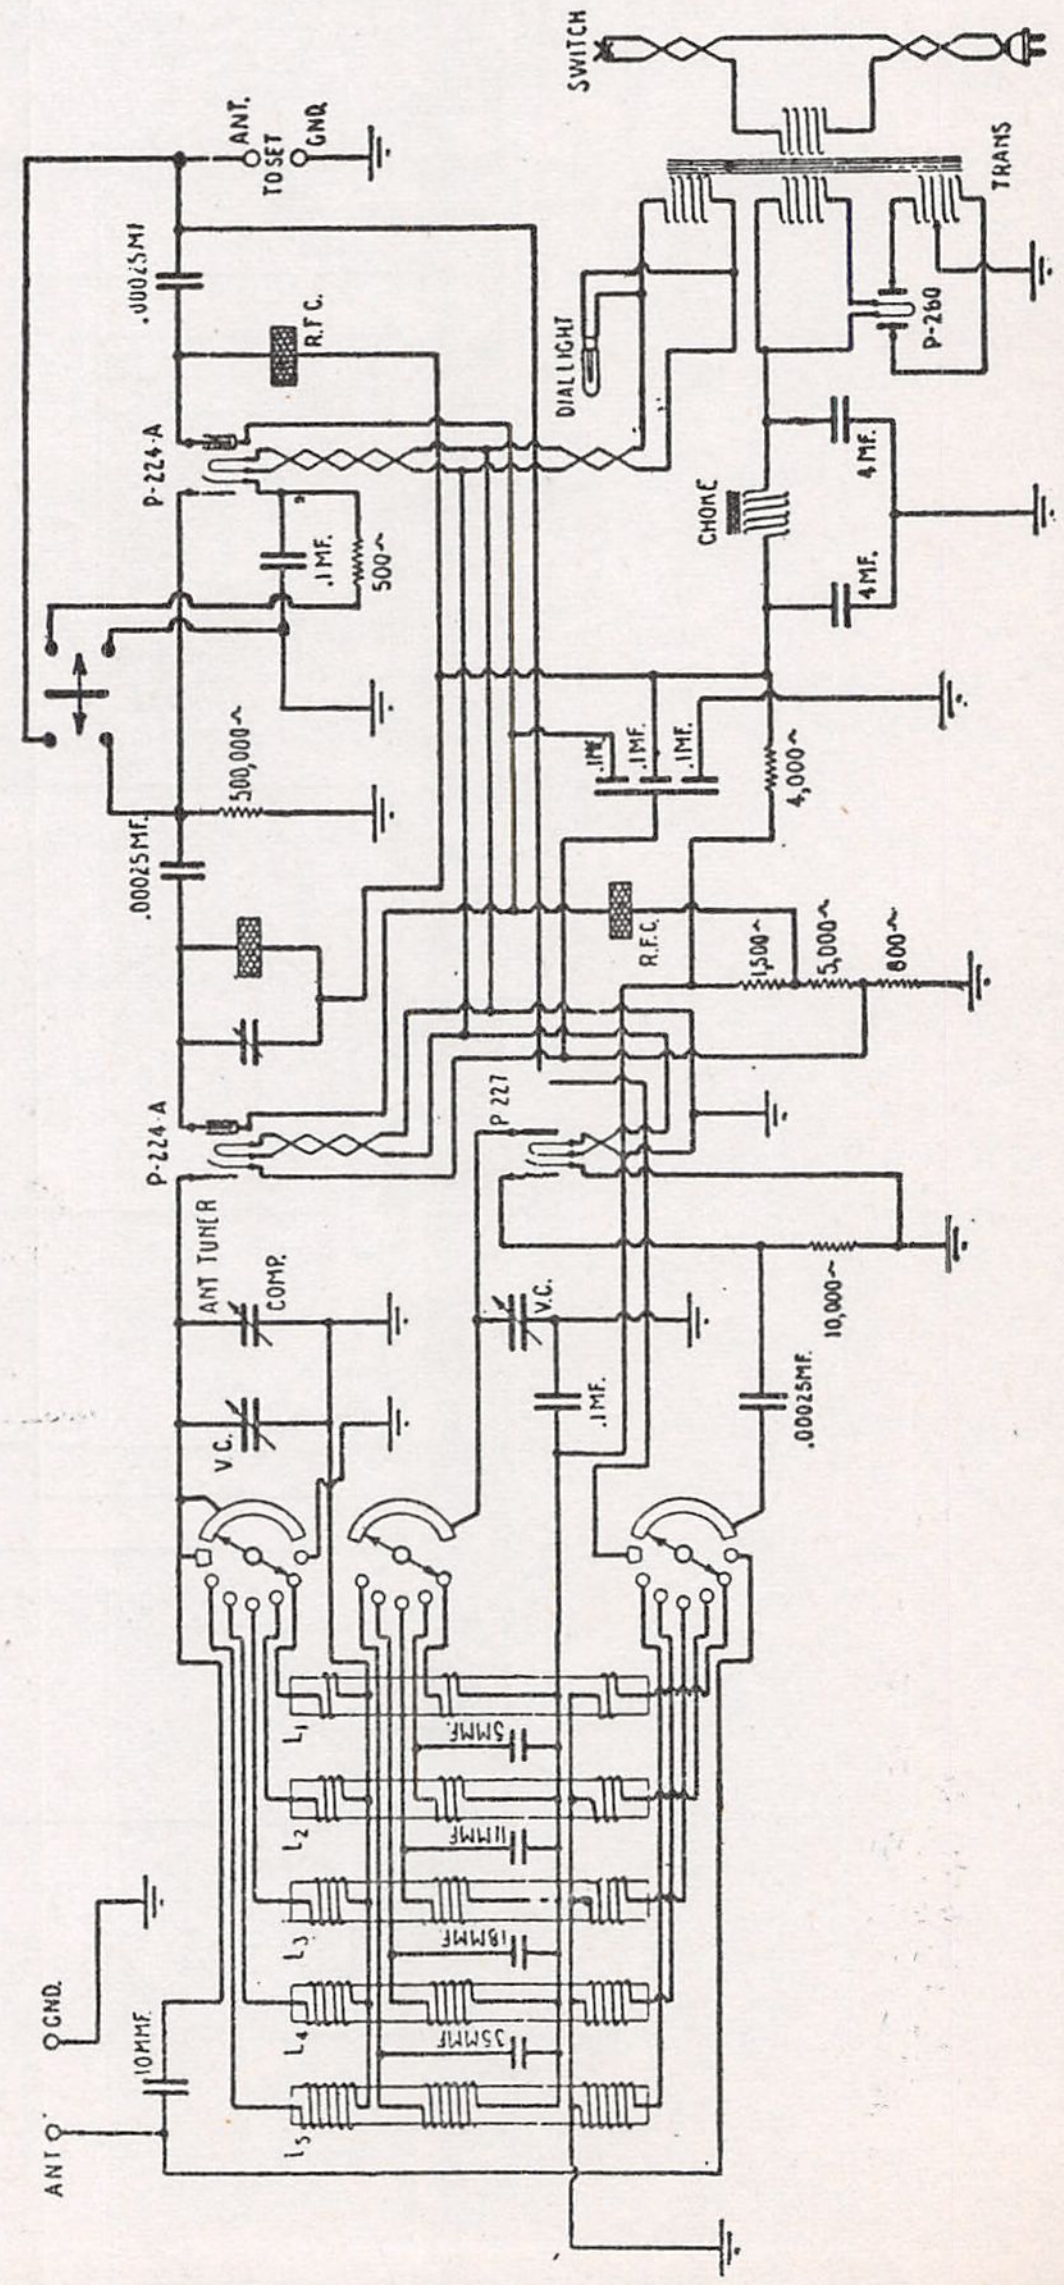
SWITCH
TRANS
ANT.
TO SET
GND.
.00025MF.
R.F.C.
DIAL LIGHT
P-280
P-224-A
.1MF.
500~
4MF.
4MF.
CHOKE
500,000~
.1MF.
.1MF.
.1MF.
4,000~
.00025MF.
R.F.C.
1,500~
5,000~
800~
P-224-A
P 227
ANT TUNER
COMP.
V.C.
V.C.
.1MF.
.00025MF.
10,000~
V.C.
L1
5MMF.
L2
11MMF.
L3
18MMF.
L4
35MMF.
L5
GND.
10MMF.
ANT

MODEL DC Midget
S-156, S-158

PILOT RADIO & TUBE CORP.

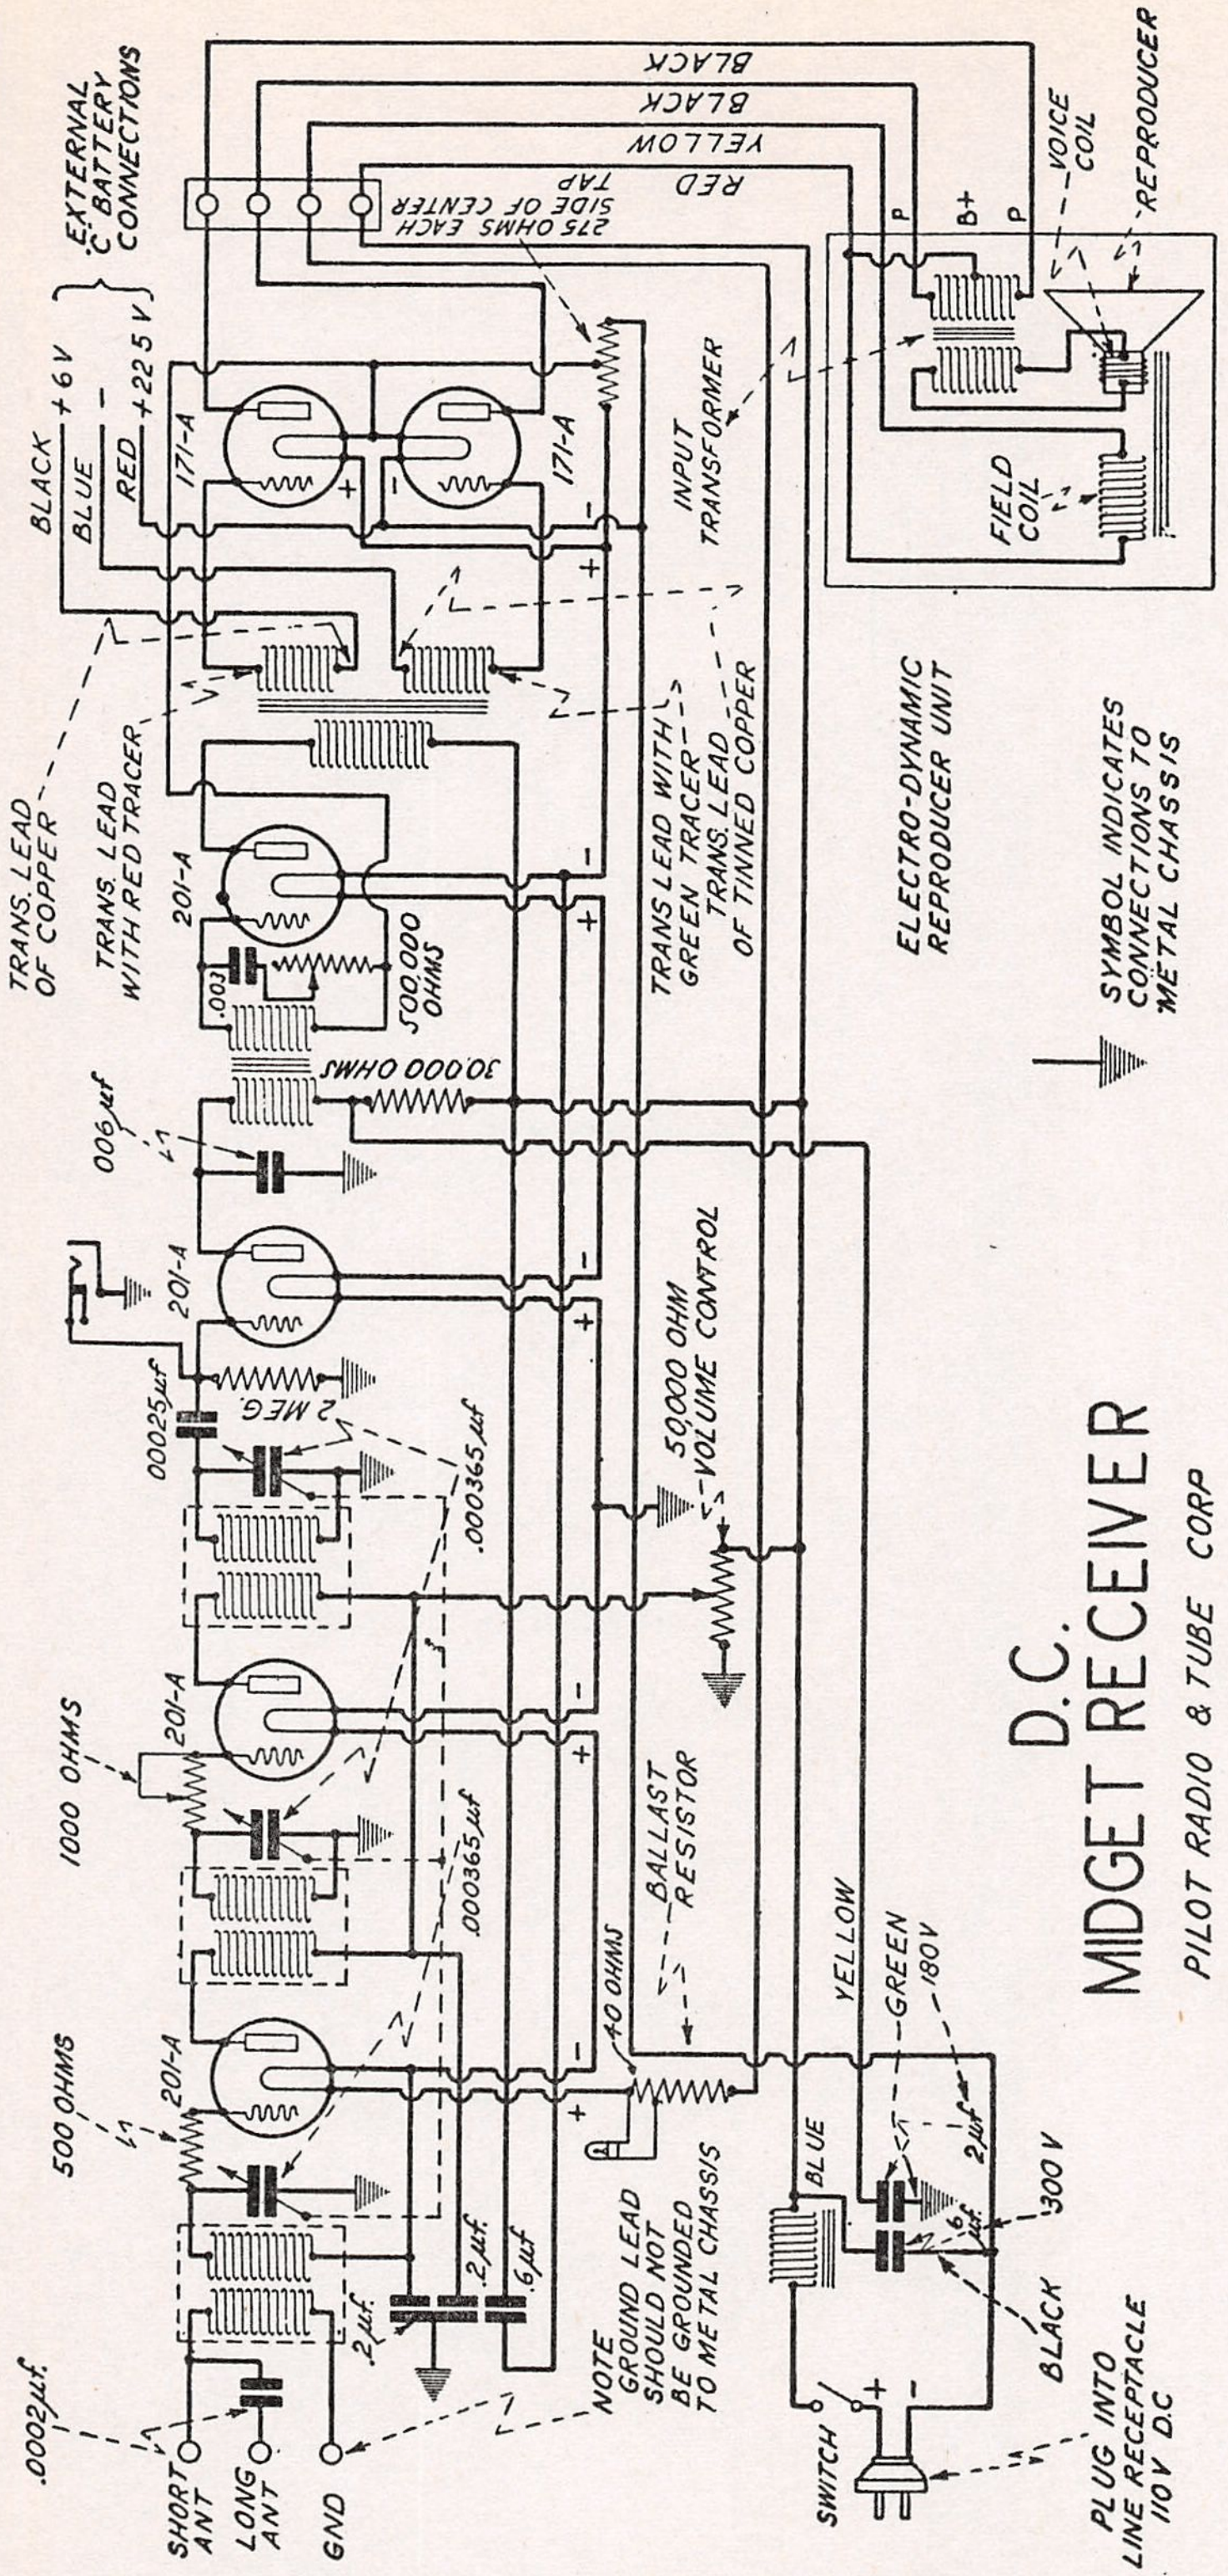
D.C.
MIDGET RECEIVER
PILOT RADIO & TUBE CORP
NOV 20,1930
EXTERNAL 'C' BATTERY CONNECTIONS
BLACK +6 V
BLUE -
RED +22.5 V
275 OHMS EACH SIDE OF CENTER TAP
RED
YELLOW
BLACK
BLACK
P
B+
P
VOICE COIL
REPRODUCER
FIELD COIL
ELECTRO-DYNAMIC REPRODUCER UNIT
INPUT TRANSFORMER
171-A
171-A
TRANS. LEAD OF COPPER
TRANS. LEAD WITH RED TRACER
TRANS. LEAD WITH GREEN TRACER
TRANS. LEAD OF TINNED COPPER
201-A
.003
500,000 OHMS
30,000 OHMS
.006 µf
201-A
.00025 µf
2 MEG.
.000365 µf
50000 OHM VOLUME CONTROL
1000 OHMS
201-A
.000365 µf
BALLAST RESISTOR
40 OHMS
YELLOW
GREEN 180V
500 OHMS
201-A
BLUE
2 µf
300 V
6 µf
.2 µf
.2 µf
.6 µf
NOTE GROUND LEAD SHOULD NOT BE GROUNDED TO METAL CHASSIS
BLACK
.0002 µf
SHORT ANT
LONG ANT
GND
SWITCH
PLUG INTO LINE RECEPTACLE 110V DC
SYMBOL INDICATES CONNECTIONS TO METAL CHASSIS

OSCILLATION CONTROL

Oscillation adjustment is provided by means of the variable grid suppresser mounted in back of the main tuning condenser. The set will tend to oscillate more easily as the adjustment screw is turned in. It should be adjusted for best results with the tuning dial set at about 1000 kilocycles In some cases greater sensitivity can be obtained by the use of 112-A tubes instead of 201-A tubes in the R.F. and detector circuits If these are used, the grid suppressor must again be adjusted.

The dial light is a six volt flashlight bulb. It is connected across part of the ballast resistor, which is the long unit mounted on the under side of the chassis in front of the tone control.

The phonograph pick-up is connected directly across the grid leak of the detector tube.

Every direct current receiver shipped from the factory is supplied with a heavy lead cap which should be placed over the detector tube to prevent microphonic howling. Some tubes are more susceptible to howling than others, so it is a good idea to switch the 201-A s around until the quietest one is found.

Model Midget DC

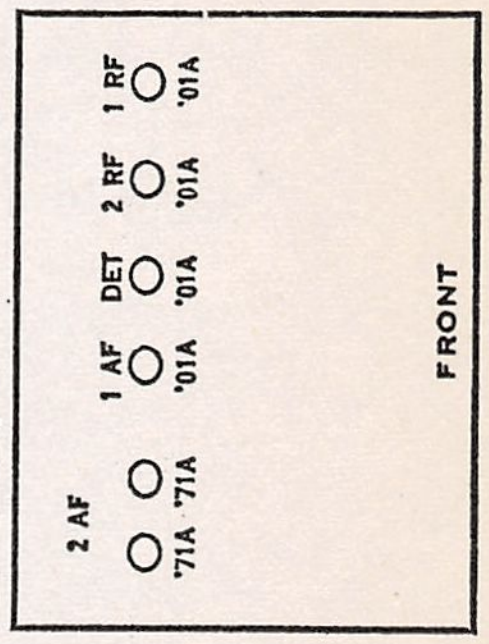
2 AF
'71A
'71A
1 AF
'01A
DET
'01A
2 RF
'01A
1 RF
'01A
FRONT

SPECIAL NOTE

A slight change was made in the D C. set. The ground binding post has been replaced by a red flexible wire 3 ½ feet long, to which the ground wire should be spliced. This arrangement will prevent accidental contact of the ground wire with the chassis, which always results in one or more blown out tubes. The receiver otherwise is exactly the same as before.

R. C. A. VICTOR CO., INC.

MODEL R-4, R-6 AC
Chassis
Voltage

Service work in conjunction with this receiver will be very similar to that of other table type receivers. However, there are several new features of this model which require some consideration.

The second I.F. transformer in this receiver is of the untuned variety, making the set slightly less sensitive and selective than the R-7. This decreased selectivity permits the omission of the 600 K.C. adjustable capacitor used on the R-7, R-10 and other Super-Heterodyne receivers. When aligning adjustments are necessary, it is therefore only necessary to tune one I.F. transformer and the three tuning capacitors. The I.F. transformer is adjusted at 175 K.C. and the tuning capacitors at 1400 K.C. In the case of the latter, the dial should be set at 1400 as well as the oscillator and the three screws adjusted for maximum output. This will permit the dial to read very accurately.

RADIOTRON SOCKET VOLTAGES

120 Volt A. C. Line

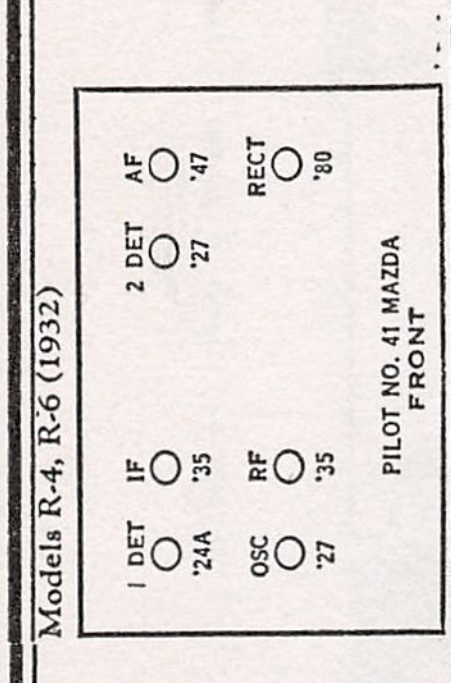
Models R-4, R-6 (1932)
1 DET '24A
IF '35
2 DET '27
AF '47
OSC '27
RF '35
RECT '80
PILOT NO. 41 MAZDA
FRONT

VOLUME CONTROL AT MINIMUM

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1. R. F.	50	50	60	235	0	0	2.66
2. Osc.	50	0	—	55	4.5	—	2.66
3. 1st Det.	10	9	100	260	1.0	0.25	2.66
4. I. F.	50	50	60	235	0	0	2.66
5. 2d Det.	25	10	—	250	1.0	—	2.66
6. Pwr.	—	10	290	280	35	—	2.66

VOLUME CONTROL AT MAXIMUM

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1. R. F.	3.0	3.0	65	260	3.0	0.5	2.66
2. Osc.	3.0	0	—	60	5.0	—	2.66
3. 1st Det.	6.0	5.5	60	260	0.75	0.25	2.66
4. I. F.	3.0	3.0	65	260	3.0	0.5	2.66
5. 2d Det.	25	10.0	—	250	1.0	—	2.66
6. Pwr.	—	10.0	290	280	35	—	2.66

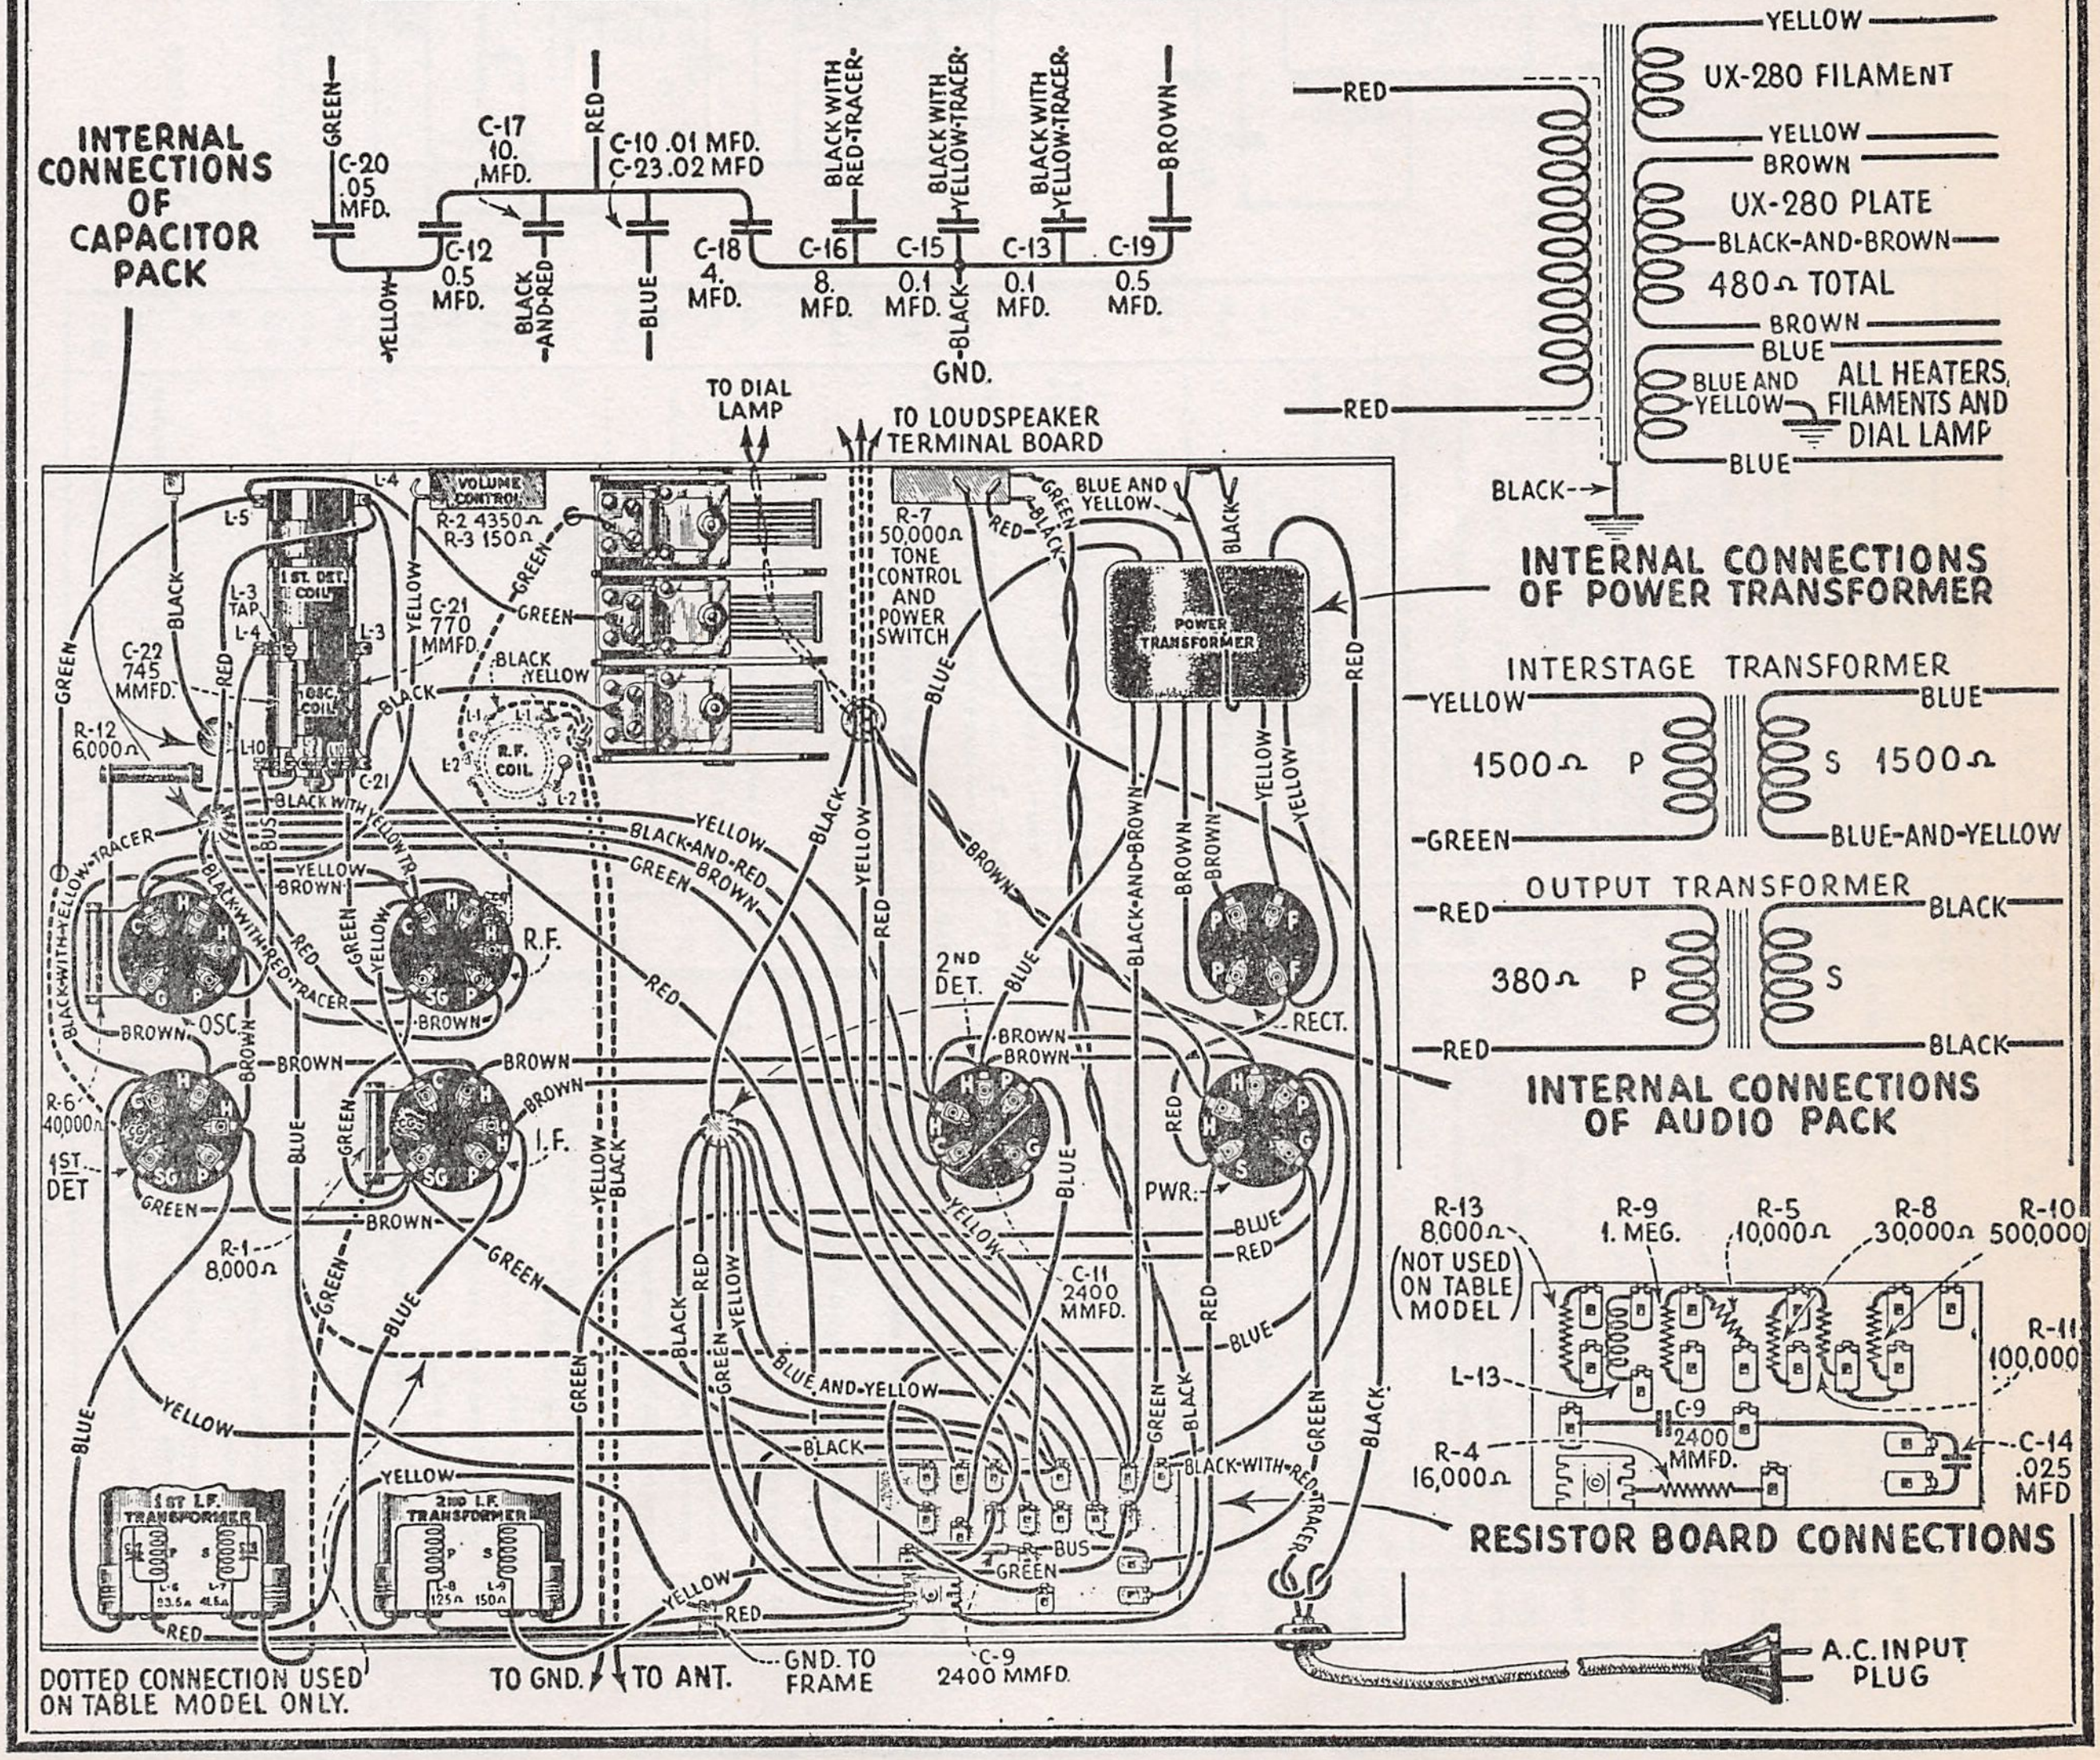
INTERNAL CONNECTIONS OF CAPACITOR PACK
GREEN
C-20 .05 MFD.
YELLOW
C-12 0.5 MFD.
C-17 10. MFD.
BLACK-AND-RED
RED
C-10 .01 MFD.
C-23 .02 MFD
BLUE
C-18 4. MFD.
BLACK WITH RED-TRACER
C-16 8. MFD.
BLACK WITH YELLOW-TRACER
C-15 0.1 MFD.
BLACK
GND.
BLACK WITH YELLOW-TRACER
C-13 0.1 MFD.
BROWN
C-19 0.5 MFD.
RED
YELLOW
UX-280 FILAMENT
YELLOW
BROWN
UX-280 PLATE
BLACK-AND-BROWN
480Ω TOTAL
BROWN
BLUE
BLUE AND YELLOW
ALL HEATERS, FILAMENTS AND DIAL LAMP
BLUE
RED
BLACK
INTERNAL CONNECTIONS OF POWER TRANSFORMER
INTERSTAGE TRANSFORMER
YELLOW
BLUE
1500Ω P
S 1500Ω
GREEN
BLUE-AND-YELLOW
OUTPUT TRANSFORMER
RED
BLACK
380Ω P
S
RED
BLACK
INTERNAL CONNECTIONS OF AUDIO PACK
TO DIAL LAMP
TO LOUDSPEAKER TERMINAL BOARD
VOLUME CONTROL
R-2 4350Ω
R-3 150Ω
R-7 50,000Ω TONE CONTROL AND POWER SWITCH
POWER TRANSFORMER
L-5
L-4
L-3 TAP
1ST. DET. COIL
OSC. COIL
L-10
C-21
C-21 770 MMFD.
C-22 745 MMFD.
R-12 6,000Ω
R.F. COIL
L-1
L-2
R.F.
OSC
R-6 40000Ω
1ST DET
R-1 8,000Ω
I.F.
2ND DET.
RECT.
PWR.
C-11 2400 MMFD.
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
L-6 33.5Ω
L-7 41.5Ω
L-8 125Ω
L-9 150Ω
BUS
GREEN
BLACK WITH YELLOW TRACER
BLACK WITH RED TRACER
BLACK-AND-RED
BLACK-AND-BROWN
BLUE AND YELLOW
YELLOW
BROWN
GREEN
BLUE
RED
BLACK
R-13 8,000Ω
(NOT USED ON TABLE MODEL)
R-9 1. MEG.
R-5 10,000Ω
R-8 30,000Ω
R-10 500,000
R-11 100,000
L-13
C-9 2400 MMFD.
R-4 16,000Ω
C-14 .025 MFD
RESISTOR BOARD CONNECTIONS
DOTTED CONNECTION USED ON TABLE MODEL ONLY.
TO GND.
TO ANT.
GND. TO FRAME
C-9 2400 MMFD.
A.C. INPUT PLUG

MODEL R-4, R-6
Schematic
Parts List

R. C. A. VICTOR CO., INC.

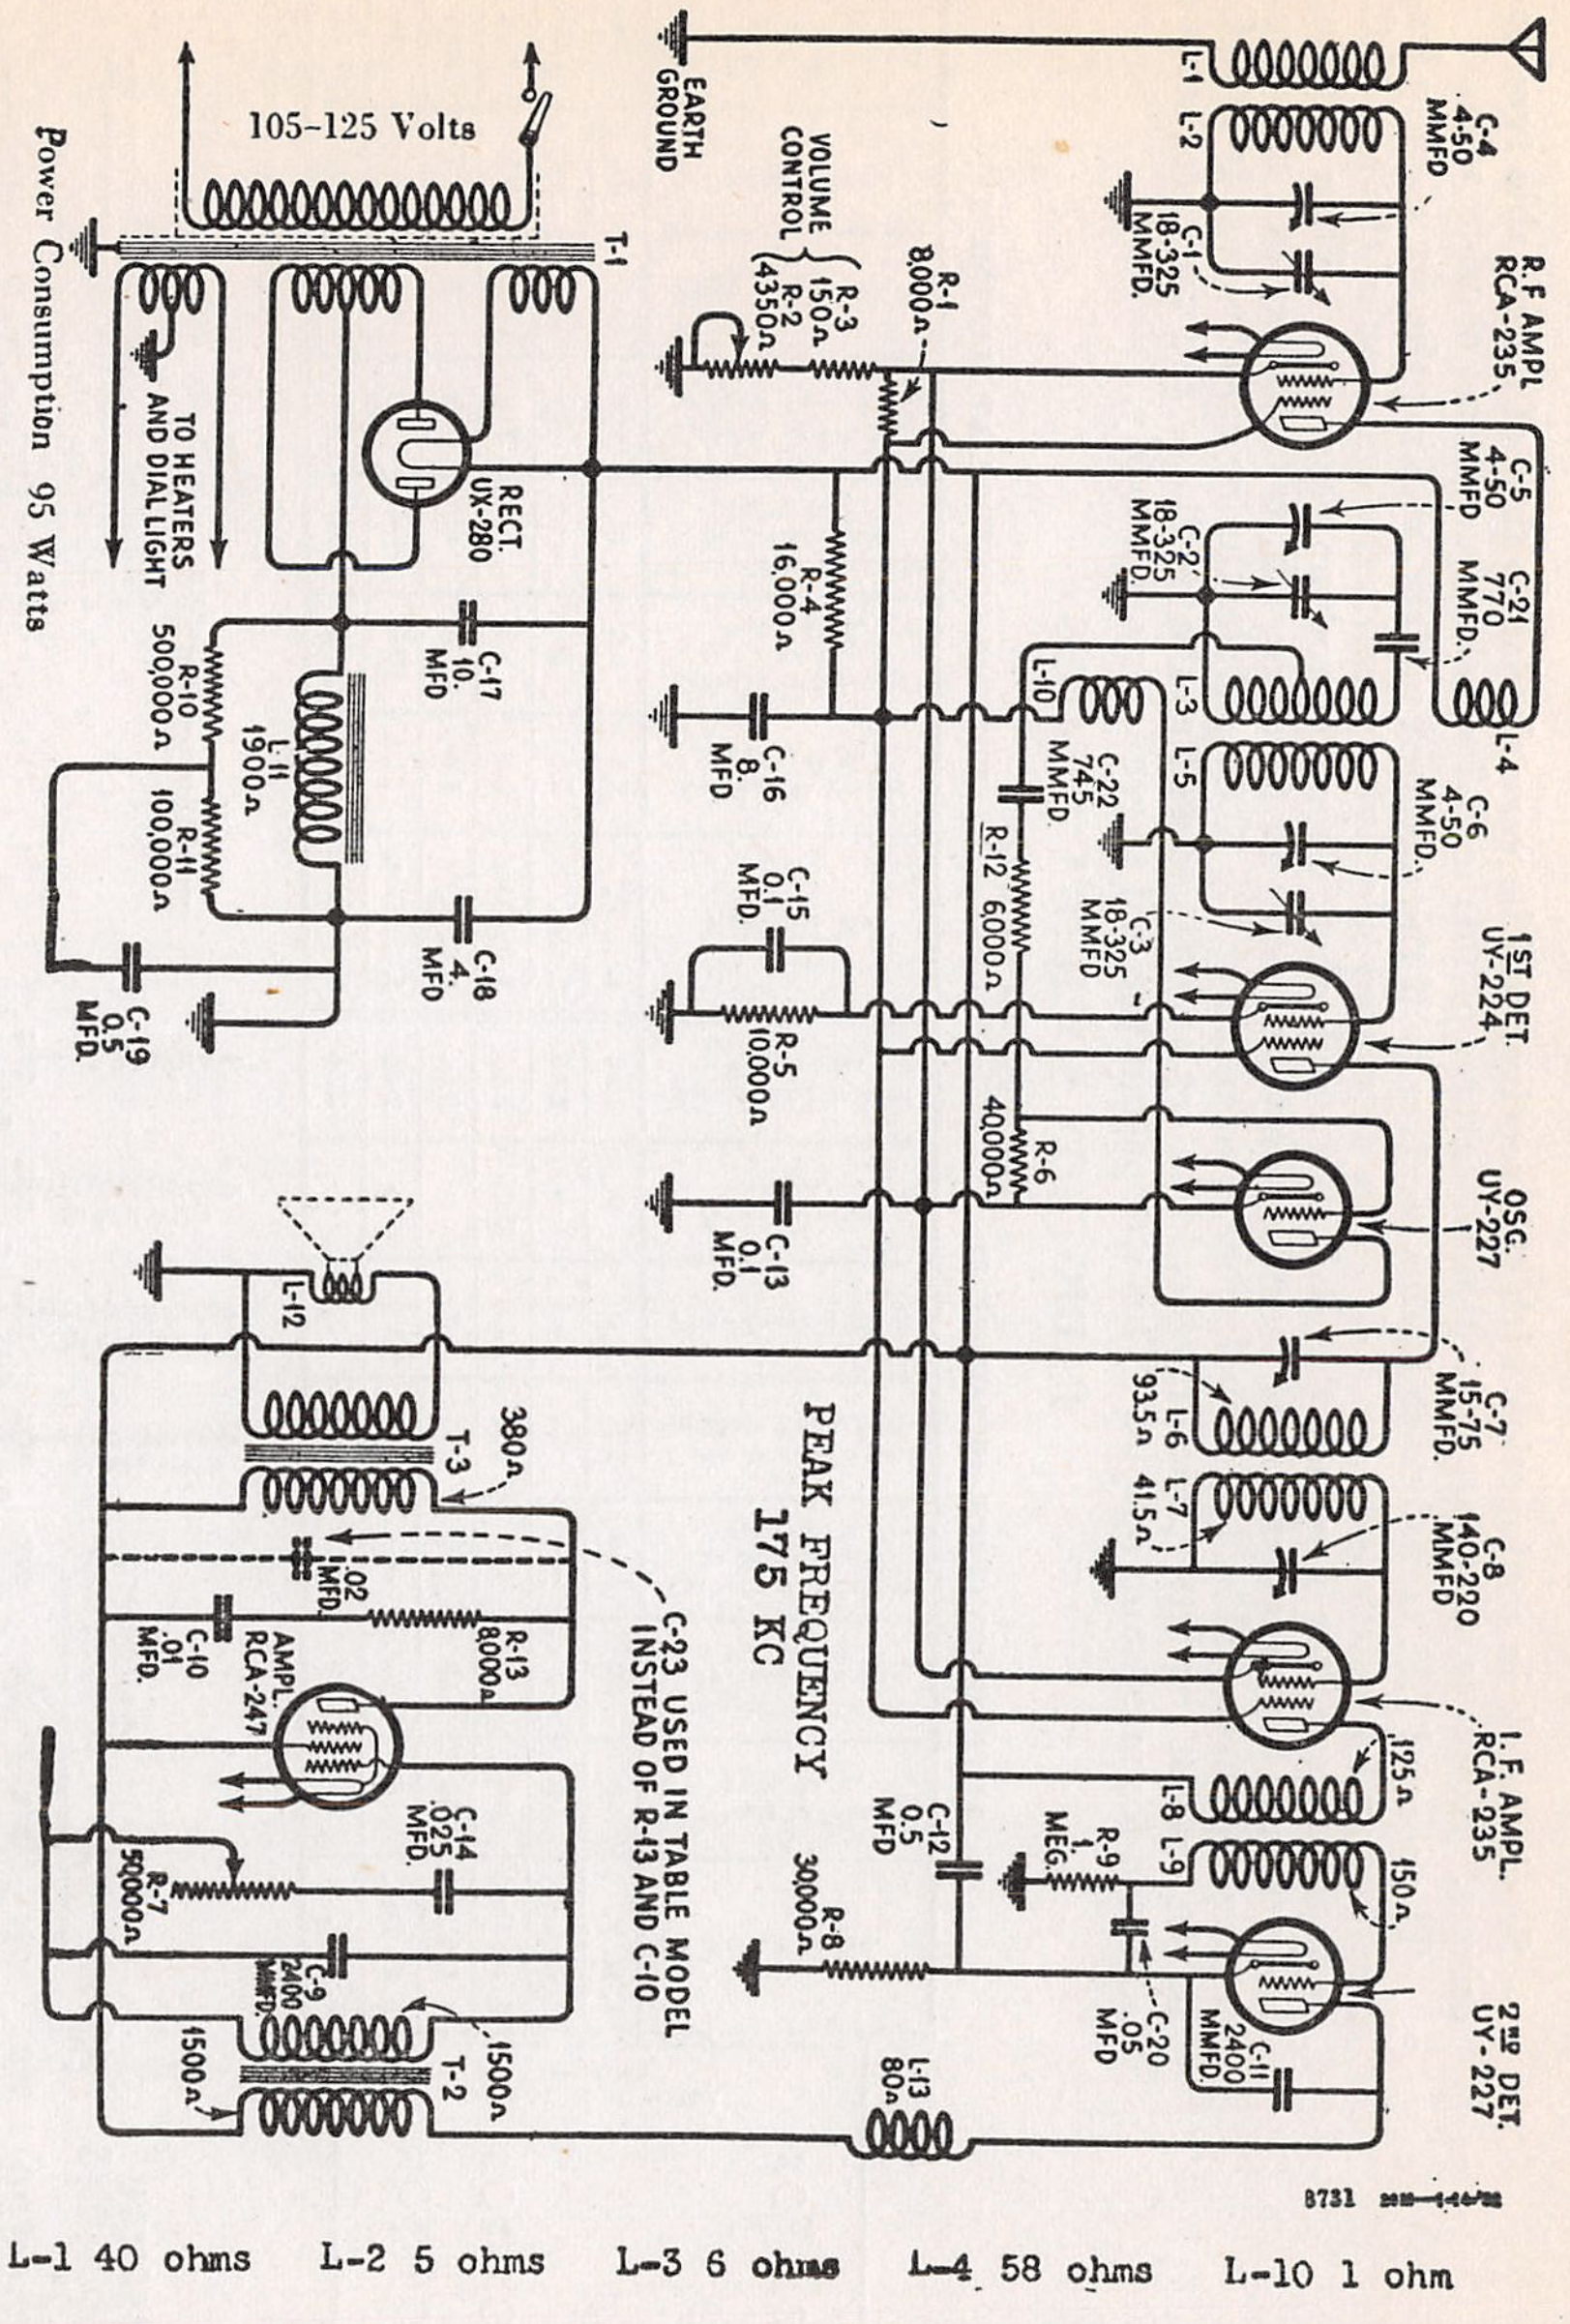
R.F AMPL RCA-235
C-4 4-50 MMFD
C-1 18-325 MMFD.
L-1
L-2
C-5 4-50 MMFD
C-21 770 MMFD.
L-4
C-2 18-325 MMFD
L-3
C-6 4-50 MMFD.
L-5
C-3 18-325 MMFD
C-22 745 MMFD.
L-10
1ST DET. UY-224
OSC. UY-227
R-12 6000Ω
R-6 40000Ω
C-7 15-75 MMFD.
L-6 93.5Ω
C-8 140-220 MMFD
L-7 41.5Ω
I.F. AMPL. RCA-235
125Ω
150Ω
L-8
L-9
2ND DET. UY-227
C-11 2400 MMFD.
C-20 .05 MFD
R-9 1. MEG.
C-12 0.5 MFD
R-8 30000Ω
L-13 80Ω
R-1 8000Ω
VOLUME CONTROL
R-3 150Ω
R-2 4350Ω
R-4 16,000Ω
C-16 8. MFD
C-15 0.1 MFD.
R-5 10,000Ω
C-13 0.1 MFD.
EARTH GROUND
PEAK FREQUENCY 175 KC
C-23 USED IN TABLE MODEL INSTEAD OF R-13 AND C-10
T-1
105-125 Volts
RECT. UX-280
C-17 10. MFD
C-18 4. MFD
L-11 1900Ω
R-10 500,000Ω
R-11 100,000Ω
C-19 0.5 MFD.
TO HEATERS AND DIAL LIGHT
Power Consumption 95 Watts
380Ω
T-3
L-12
.02 MFD.
R-13 8000Ω
C-10 .01 MFD.
AMPL. RCA-247
C-14 .025 MFD.
R-7 50000Ω
C-9 2400 MMFD.
1500Ω
T-2
1500Ω
8731
L-1 40 ohms   L-2 5 ohms   L-3 6 ohms   L-4 58 ohms   L-10 1 ohm

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price
	PARTS COMMON TO R-4 AND R-6	
2563	Resistor—6000 ohms—Carbon type—1 watt—Package of 5	$3.00
2746	Socket—Dial lamp socket	.50
2747	Cap—Grid contactor cap—Package of 5	.50
2749	Capacitor—2400 mmfd.	1.50
2875	Knob—Tuning control, volume control or tone control knob—Package of 5	1.50
2881	Bracket—Dial lamp bracket—Package of 5	.50
2882	Socket—Five contact Radiotron socket—Complete with insulator—6 used	.50
2963	Resistor—8000 ohms—Carbon type—1 watt—Package of 5	2.50
2968	Socket—Four contact Radiotron socket—Complete with insulator—1 used	.50
2991	Transformer—1st intermediate transformer	3.00
2994	Coil—R.F. choke coil	.60
2995	Volume control—Volume control complete with mounting nut—Package of 5	6.00
2997	Coil—R.F. coil	1.90
2999	Shaft—Tuning condenser drive shaft complete	.50
3000	Scale—Dial drum and scale with set screws	.60
3003	Cushion—Receiver chassis sponge rubber cushion—Package of 4	.50
3048	Resistor—500,000 ohms—Carbon type—½ watt—Package of 5	2.50
3056	Shield—Radiotron shield—3 used—Package of 2	.50
3060	Resistor—40,000 ohms—Carbon type—1 watt—Package of 5	2.50
3076	Resistor—1 megohm—Carbon type—½ watt—Package of 5	2.50
3077	Resistor—30,000 ohms—Carbon type—½ watt—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type—½ watt—Package of 5	2.50
3081	Resistor—16,000 ohms—Carbon type—3 watt	.06
3082	Board—Resistor board complete—Less resistors, capacitors and coil	1.00
3234	Tone control—Tone control complete with mounting nut	1.90
3252	Resistor—100,000 ohms—Carbon type—½ watt—Package of 5	2.75
6179	Terminal—Single ground terminal—Complete with mounting rivet—Package of 5	.50
6180	Capacitor—0.025 mfd.—Package of 5	.75
6181	Capacitor—770 mmfd.—Package of 5	1.30
6193	Rubber strip—Rubber clamping strip located inside of chassis shield—Package of 4	.50
7054	Cord—Power cord	1.00
7241	Capacitor—3 gang tuning capacitor	8.00
7299	Capacitor—745 mfd.	.70
7436	Coil—1st detector and oscillator coil	3.20
8837	Support—Receiver chassis metal mounting support—Package of 4	.70
8841	Transformer—2d intermediate transformer	2.50
8842	Transformer—Power transformer—105–125 volts, 50–60 cycles	6.25
8843	Transformer—Power transformer—105–125 volts, 25–40 cycles	9.55
8844	Transformer—Power transformer—220 volts, 60 cycles	6.45

Stock No.	DESCRIPTION	List Price
	RECEIVER PARTS SPECIAL FOR R-4	
8839	Capacitor—Comprising one 0.05 mfd., two 0.5 mfd., one 10.0 mfd., one 8.0 mfd., one 0.02 mfd., one 4.0 mfd., and two 0.1 mfd. capacitors in metal container	$8.95
8840	Transformer—Audio transformer assembly—Comprising interstage and output transformer	4.50
	RECEIVER PARTS SPECIAL FOR R-6	
6183	Resistor—8,000 ohms—Carbon type—½ watt—Package of 5	2.00
7343	Transformer—Audio transformer assembly—Comprising interstage and output transformer	3.85
8846	Capacitor—Comprising one 0.05 mfd., two 0.5 mfd., one 10.0 mfd., one 8.0 mfd., one 0.01 mfd., one 4.0 mfd. and two 0.1 mfd. capacitors in metal container	8.95
	R-4 LOUDSPEAKER PARTS	
2975	Rivet—Cone retaining ring mounting rivet—Package of 100	.50
3005	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 4 eyelets, 4 washers and 4 nuts—Package of 1 set	.50
6182	Board—Terminal board complete with 3 terminals Package of 5	.50
7442	Cone—Speaker paper cone—Package of 5	7.50
8702	Ring—Cone retaining ring	.80
8845	Coil assembly—Speaker field coil assembly—Comprising field coil, cone bracket and magnet	4.50
	R-6 LOUDSPEAKER PARTS	
3237	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 4 washers, 4 eyelets and 4 nuts—Package of 1 set	.50
6184	Board—Terminal board complete with 3 terminals and mounting rivets—Package of 5	.50
7345	Coil—Speaker field coil assembly—Comprising coil, cone housing and magnet	5.00
8559	Ring—Cone retaining ring	.80
8601	Cone—Speaker paper cone—Package of 5	15.00
	R-4 CABINET PARTS	
X-33	Baffle board and grille cloth	.85
6113	Foot—Felt foot—Package of 15	.50
7437	Escutcheon—Tuning dial escutcheon—Complete with mounting screws	.90
9403	Cabinet—Cabinet complete less equipment	13.00
	R-6 CABINET PARTS	
X-34	Post—Front post—R.H.	2.85
X-35	Post—Back post—R.H.	2.55
X-36	Post—Front post—L.H.	2.85
X-37	Post—Back post—L.H.	2.55
X-38	Control panel	4.60
X-39	Moulding—Control panel top moulding	1.60
X-40	Top	4.85
X-41	Stretcher	3.55
X-42	Foot	1.10
X-43	Baffle board with grille cloth	.90
7437	Escutcheon—Tuning dial escutcheon—Complete with mounting screws	.90
9404	Cabinet—Cabinet complete less equipment	42.85

MODEL R-4,R-6 AC
Resistance Test Data

R. C. A. VICTOR CO., INC.

All tubes removed from sockets. AC plug removed from power supply line. Field coil disconnected. Volume Control maximum unless otherwise stated

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis to			
RF Control Grid	1	ohm	TC- rf Cg-Y
RF Cathode (V.C.Min)	4,500	ohms	FC- rf K-Y (8 mfd)
RF Cathode (V.C.Max)	150	ohms	FC- rf K-Y (8 mfd)
RF Screen Grid	8,150	ohms	FC- rf Sg-Y(8 mfd)
RF Plate	24,208	ohms	FC-'80 F-Y (4 mfd) See RF Screen
RF Plate to '80 Fil	58	ohms	
1 Detector Control Grid	4.5 or 5	ohms	TC - 1 D Cg-Y
1 Detector Cathode	10,000	ohms	BC- 1 DK-Y (.1 mfd)
1 Detector Screen	8,150	ohms	See RF Screen
1 Detector Plate	24,243.5	ohms	FC-'80 F-Y (4.mfd) See RF Plate
1 Detector Plate to '80 Fil	93.5	ohms	TC- IF Tr
Oscillator Control Grid	40,150	ohms	Osc Grid Condenser
Oscillator Cathode	150	ohms	BC- Osc K-Y (.1 mfd)
Oscillator Plate	24,151	ohms	See RF Plate
Oscillator Plate - RF Sg	1	ohm	
IF Control Grid	41.5	ohms	TC-IF Cg-Y
IF Cathode	150	ohms	See RF Cathode
IF Plate	24,275	ohms	See RF Plate
IF Plate to '80 Fil	125	ohms	TC- IF Tr
2 Detector Control Grid	1,000,150	ohms	BC- 2 DK-Y (.5 mfd)
2 Detector Cathode	30,000	ohms	BC- 2 DK-'80F (.5 mfd) BC- 2 DK- 2 DP (.0024 mfd)
2 Detector plate	25,730	ohms	BC- 2 DP- 2 DK (.0024 mfd) FC- 80F-Y (4.mfd) FC- rf Sg-Y (8 mfd)
2 Detector Plate to '80 Fil	1,580	ohms	
'47 Control Grid	101,500	ohms	BC- AF Tr-Y (.5 mfd) Tone Control Condenser
'47 Screen Grid	24,150	ohms	See RF Plate
'47 Screen to '80 Fil	0	ohms	
'47 Plate	4,530	ohms	BC Across AF Tr in R 4. Harmonic condenser
'47 Plate to 80 Fil	380	ohms	
'80 Anode	600,240	ohms	
'80 Anode to 80 Anode	480	ohms	
'80 Fil to '80 Anode	624,390	ohms	FC- 80 Fil (10 mfd)
Across field coil only	1,900	ohms	
Across oscillator winding only	6	ohms	

R. C. A. VICTOR CO., INC.

MODEL R-5-X AC
Schematic
Chassis
Voltage

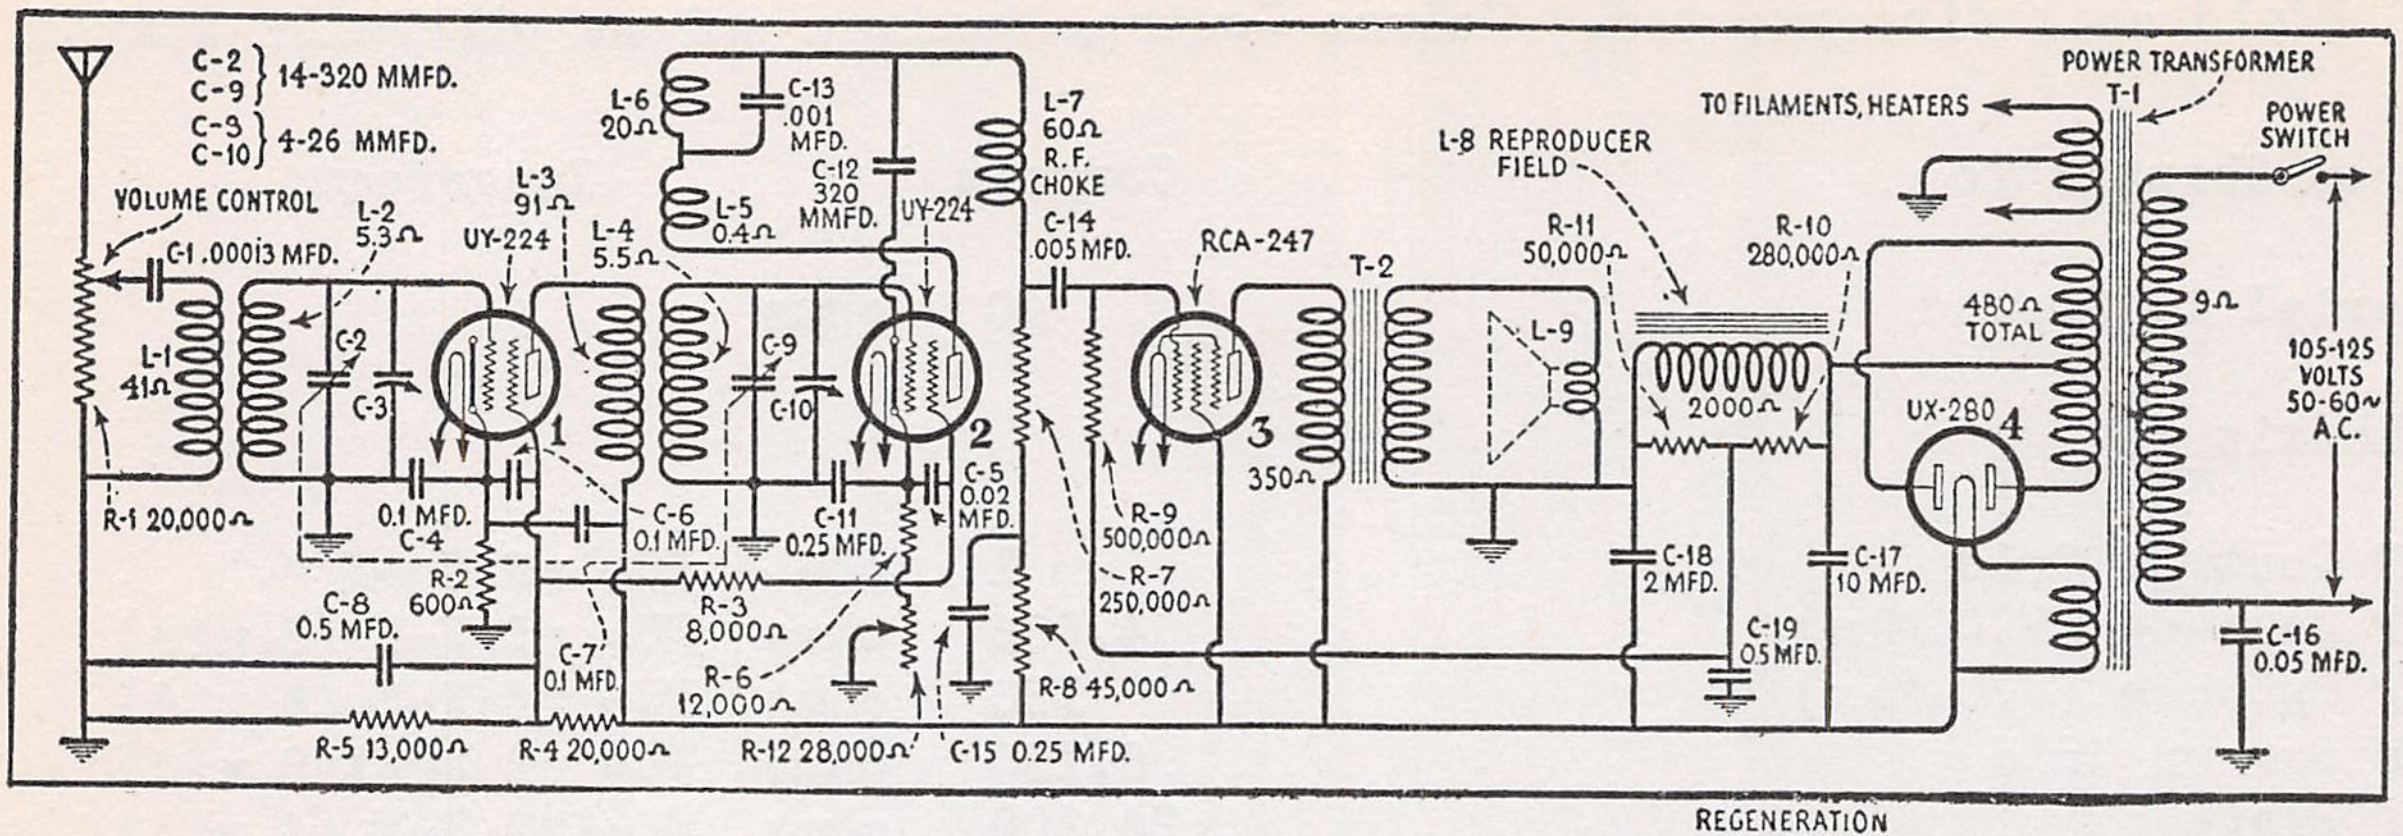
C-2 } C-9 } 14-320 MMFD.
C-3 } C-10 } 4-26 MMFD.
VOLUME CONTROL
C-1 .00013 MFD.
L-1 41Ω
L-2 5.3Ω
UY-224
L-3 91Ω
L-4 5.5Ω
L-6 20Ω
L-5 0.4Ω
C-13 .001 MFD.
C-12 320 MMFD.
UY-224
L-7 60Ω R.F. CHOKE
C-14 .005 MFD.
RCA-247
T-2
L-8 REPRODUCER FIELD
R-11 50,000Ω
R-10 280,000Ω
TO FILAMENTS, HEATERS
POWER TRANSFORMER T-1
POWER SWITCH
9Ω
480Ω TOTAL
2000Ω
UX-280
105-125 VOLTS 50-60~ A.C.
L-9
350Ω
R-1 20,000Ω
C-4 0.1 MFD.
R-2 600Ω
C-8 0.5 MFD.
C-7 0.1 MFD.
C-6 0.1 MFD.
C-11 0.25 MFD.
C-5 0.02 MFD.
R-3 8,000Ω
R-6 12,000Ω
R-9 500,000Ω
R-7 250,000Ω
R-8 45,000Ω
C-18 2 MFD.
C-19 0.5 MFD.
C-17 10 MFD.
C-16 0.05 MFD.
R-5 13,000Ω
R-4 20,000Ω
R-12 28,000Ω
C-15 0.25 MFD.
1
2
3
4

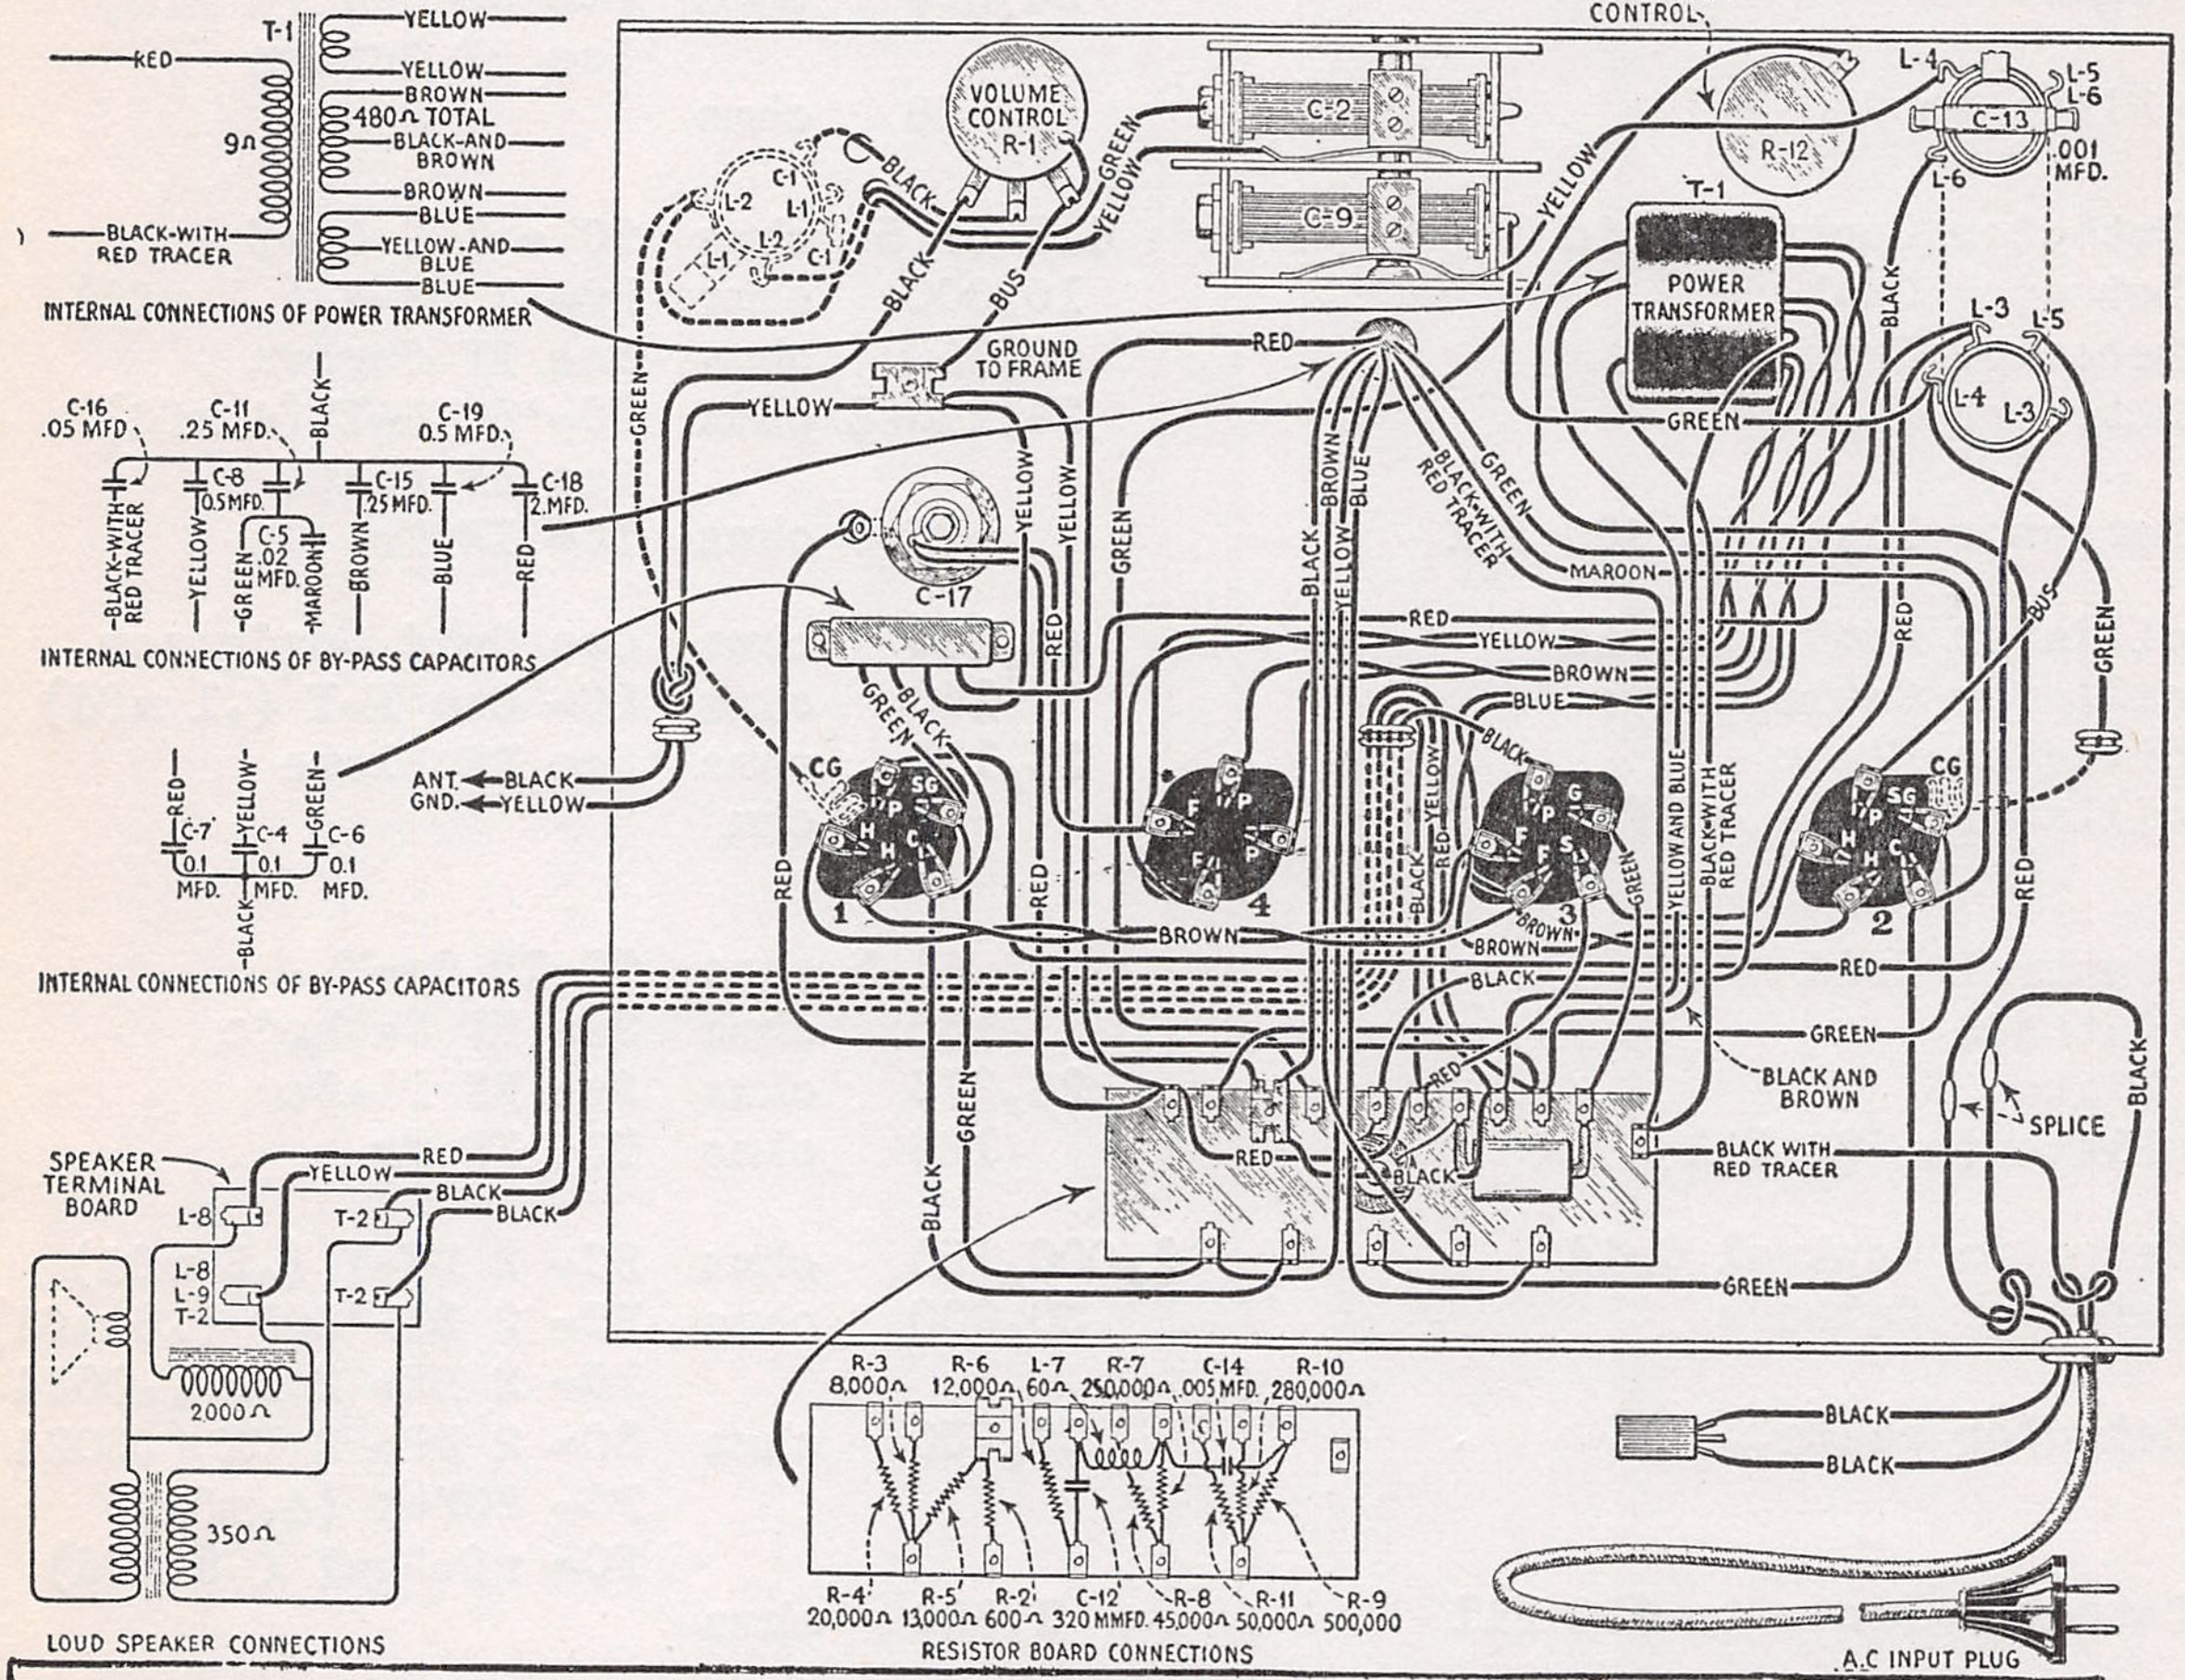
REGENERATION CONTROL
T-1
RED
YELLOW
YELLOW
BROWN
480Ω TOTAL
BLACK-AND BROWN
BROWN
BLUE
YELLOW-AND BLUE
BLUE
9Ω
BLACK-WITH RED TRACER
INTERNAL CONNECTIONS OF POWER TRANSFORMER
VOLUME CONTROL R-1
C-2
C-9
R-12
C-13
.001 MFD.
L-4
L-5
L-6
L-3
POWER TRANSFORMER
GROUND TO FRAME
C-16 .05 MFD
C-11 .25 MFD.
C-19 0.5 MFD.
C-8 0.5 MFD.
C-15 .25 MFD.
C-18 2 MFD.
C-5 .02 MFD.
INTERNAL CONNECTIONS OF BY-PASS CAPACITORS
C-17
MAROON
GREEN
YELLOW
BLACK
RED
BROWN
BLUE
BUS
C-7 0.1 MFD.
C-4 0.1 MFD.
C-6 0.1 MFD.
INTERNAL CONNECTIONS OF BY-PASS CAPACITORS
ANT. BLACK
GND. YELLOW
CG
SG
1
2
3
4
YELLOW AND BLUE
BLACK WITH RED TRACER
BLACK AND BROWN
SPLICE
BLACK WITH RED TRACER
SPEAKER TERMINAL BOARD
L-8
T-2
L-8 L-9 T-2
2000Ω
350Ω
LOUD SPEAKER CONNECTIONS
R-3 8,000Ω
R-6 12,000Ω
L-7 60Ω
R-7 250,000Ω
C-14 .005 MFD.
R-10 280,000Ω
R-4 20,000Ω
R-5 13000Ω
R-2 600Ω
C-12 320 MMFD.
R-8 45,000Ω
R-11 50,000Ω
R-9 500,000
RESISTOR BOARD CONNECTIONS
A.C INPUT PLUG

110-VOLT LINE

These are readings obtained with the usual Set Analyzers and are not true readings of the voltages at which the Radiotrons operate.

Radiotron No.	Heater to Cathode Volts	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Heater Volts
1	3.0	3.0	85	225	4.0	2.2
2	7.0	7.0	65	100	0.25	2.2
3	—	2.0	225	215	30.0	2.2

MODEL R-5
Resistance Data
MODEL R-5-X
Resistance Data

R. C. A. VICTOR CO., INC.

Model R-5

All tubes removed from receiver and AC plug disconnected from power supply line - Red and Yellow speaker field leads disconnected

From Chassis To	Correct		Incorrect
Aerial (V.C.Max)	20,000	ohms	Antenna BLC
RF Control Grid	5.3	ohms	TC-Y
RF Cathode	600	ohms	BC-Y
RF Screen Grid	13,000	ohms	BC-Y BC- rf Sg - r f K BC-D Sg - D K
RF Plate - '80 F	91	ohms	
RF Plate	33,091	ohms	BC- rf P- rf K FC- Y (2. mfd)
Detector Control Grid	5.5	ohms	TC-Y
Detector Cathode	28,000	ohms	BC-Y
Detector Screen Grid	21,000	ohms	BC-D Sg - D K
Detector Plate	328,080	ohms	BC-Y (.25 mfd .45000ohms FC-Y, (2. mfd) BLC- 47 Cg BC- DK (.00032 mfd)
Detector Plate - '80 Fil	295,080	ohms	See Detector Plate
'47 Control Grid	550,000	ohms	BC-Y (.5 mfd)
'47 Screen Grid	33,000	ohms	FC-Y (2. mfd)
'47 Plate	33,350	ohms	See '47 Sg
'47 Plate to '80 Fila	350	ohms	
'80 Plate	330,240	ohms	FC- (10 mfd)
'80 Plate to Plate	480	ohms	
AC Plug	0	ohms	BC-Y (.05 mfd)
Across AC Plug	9	ohms	
Across Speaker Field	2,000	ohms	
Input RF Transf Prim	41	ohms	

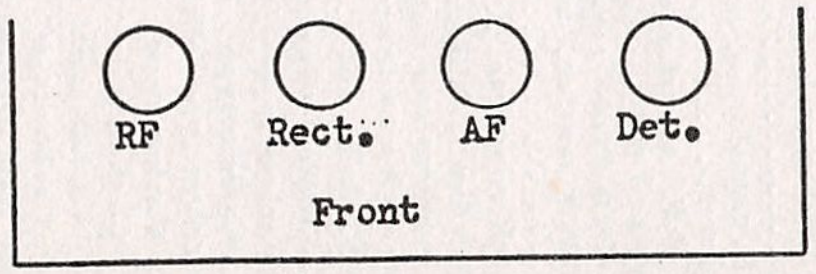

110-VOLT LINE

These are readings obtained with the usual Set Analyzers and are not true readings of the voltages at which the Radiotrons operate.

Radiotron No.	Heater to Cathode Volts	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A	Heater Volts
1	3.0	3.0	85	225	4.0	2.2
2	7.0	7.0	65	100	0.25	2.2
3	——	2.0	225	215	30.0	2.2

Model R-5-X

All tubes removed and AC plug disconnected - Speaker field red and yellow leads opened

From Chassis To	Correct		Incorrect
Aerial (V.C.Max)	20,000	ohms	Antenna BLC
RF Control Grid	5.3	ohms	TC-Y
RF Cathode	600	ohms	BC-Y
RF Screen Grid	13,000	ohms	BC-Y BC- rf Sg - rf K BC- D Sg - D K
RF Plate	33,091	ohms	BC- rf P - rf K FC - Y (2 mfd)
RF Plate - '80 F	91	ohms	
Detector Control Grid	5.5	ohms	TC-Y
Detector Cathode (Reg. Max)	12,000	ohms	BC-Y
Detector Cathode (Reg. Min)	40,000	ohms	
Detector Plate	328,080	ohms	BC-Y(.25mfd-45000 ohm) FC-Y (2. mfd) BLC- 47 Cg BC-DK 1.00032 mfd
Detector Plate - '80 Fil	295,080	ohms	See Detector Plate
'47 Control Grid	550,000	ohms	BC-Y (.5 mfd)
'47 Screen Grid	33,000	ohms	FC-Y (2. mfd)
'47 Plate	33,350	ohms	See '47 Sg
'47 Plate- '80 Fil	350	ohms	
'80 Plate	330,240	ohms	FC- (10 ,mfd)
80 Plate to Plate	480	ohms	
AC Plug	0	ohms	BC-Y (.05 mfd)
Across AC Plug	9	ohms	
Across Speaker field	2,000	ohms	
Across Input RF Transformer Primary	41	ohms	

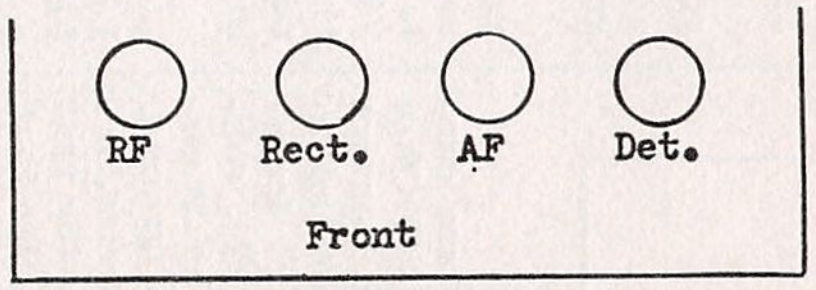

These are readings obtained with the usual Set Analyzers and are not true readings of the voltages at which the Radiotrons operate.
110-VOLT LINE

Radiotron No.	Heater to Cathode Volts	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Heater Volts
1	3.0	3.0	85	225	4.0	2.2
2	7.0	7.0	65	100	0.25	2.2
3	——	2.0	225	215	30.0	2.2

R. C. A. VICTOR CO., INC.

Model R-5-X

Models R-5, R-5X (1931)

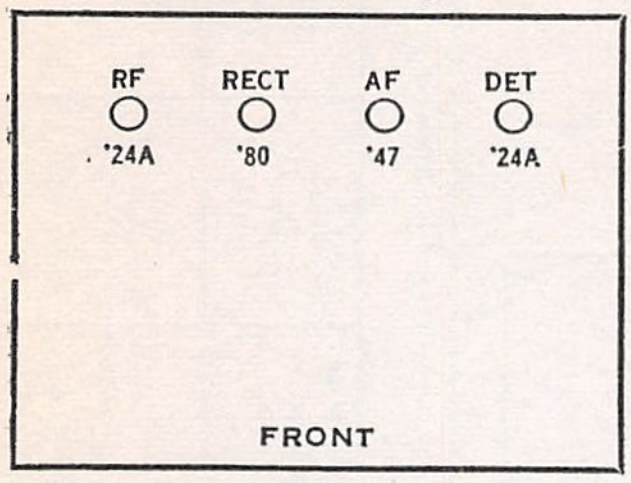

The antenna and ground are connected to each side of a 20,000 Ohm potentiometer. The moving contact of the potentiometer is connected to the primary of the first R.F. transformer through a .00013 MFD. condenser, the other side of the transformer being connected to ground. The action of the potentiometer, reducing the voltage applied to the grid of the first R.F. tube, constitutes that of a volume control. The secondary of the R.F. transformer is connected to the grid circuit of the R.F. Radiotron UY-224, which is tuned by one unit of the gang condenser. The plate circuit of this tube works into the primary coil of the 2nd R.F. transformer.

The detector is of the regenerative, grid bias type and its output is coupled by means of resistance coupling to the output Radiotron RCA-247. The regenerative feature of the detector is unusual in that it uses two regeneration coils. One of these resonates at a low frequency and improves the sensitivity at that end, while the other has but few turns and brings up the sensitivity at the high frequency end.

The output stage uses the RCA-247 Output Pentode which gives a high undistorted output—2.5 watts—together with a high gain in the stage.

The grid bias for this tube is obtained by using a portion of the drop across the reproducer field. Due to the fact that the plate current of the RCA-247 represents the greatest portion of the total plate current, using the drop across the field acts as a semi-self biasing arrangement.

Plate and grid supply to all tubes is supplied through the use of Radiotron UX-280. The filter is of the "brute force" type. The reproducer unit field coil functions as the reactor. One electrolytic 10 MFD. capacitor and one paper 2 MFD. capacitor act as filter capacitors

LINE-UP CAPACITOR ADJUSTMENTS

Two adjustable capacitors are provided for aligning the two tuned circuits at the high frequency end of the scale. The following procedure may be used for making any readjustments that may be necessary.

A. Procure an Oscillator giving a modulated signal at exactly 1400 K.C. Also procure a special socket wrench such as RCA Victor Stock No. 3007.

B. An output indicator is necessary. This may be a current squared thermo-galvanometer connected to the secondary of the output transformer in place of the cone coil or other types of output indicators.

C. Turn the station selector until the knob reads exactly 0. Then remove the chassis from the cabinet being careful not to disturb the setting of the dial. The gang condenser rotor plates should be fully meshed with the stator plates. If not, then the dial drum must be adjusted until such a condition exists. Replace the chassis in the cabinet.

D. Place the oscillator in operation at exactly 1400 K.C. and couple its output to the antenna lead. Set the dial scale at 85 and place the Radiolette in operation. Place a soft pad on the bench and turn the instrument on its side. Now with the special wrench, adjust each line-up capacitor until maximum output is obtained in the output meter. Be careful to adjust the volume control or oscillator output so that an excessive reading is not obtained. Go over each adjustment a second time to compensate for any interlocking of adjustments.

REPLACEMENT PARTS

Part No.	DESCRIPTION	List Price
2549	Resistor 250,000 Ohms—Carbon type—Package of 5.	$3.00
2747	Cap - Control grid contactor cap - Package of 5.....	.50
2954	Capacitor - By-pass capacitor pack containing three 0.1 Mfd. capacitors......................	.75
2955	Transformer - First R.F. transformer complete with mounting washer and nut....................	1.50
2956	Transformer - Second R.F. transformer complete with mounting washer and nut	2.00
2957	Capacitor 10 Mfd. electrolytic type Complete with terminal, insulating washer, mounting nut and lock washer	3.00
3069	Switch Operating switch complete..............	.60
2959	Volume control 20,000 Ohm Volume control complete with mounting washers and nut	1.50
2960	Dial—Dial scale complete with set screws—Package of 2	.50
2961	Coil Detector plate R.F. choke coil..............	.50
2962	Capacitor 0.005 Mfd. audio coupling capacitor.....	.75
2963	Resistor - 8000 Ohms Carbon type - Package of 5..	2.50
2964	Resistor 13000 Ohms Carbon type Package of 5.	2.50
2965	Resistor 600 Ohms—Carbon type - Package of 5...	2.50
2967	Resistor 45,000 Ohms Carbon type Package of 5.	2.50
2969	Resistor 50,000 Ohms Carbon type Package of 5.	2.50
2970	Resistor 500,000 Ohms Carbon type - Package of 5.	2.50
2971	Resistor 280,000 Ohms Carbon type Package of 5	2.50
2972	Shield Radiotron shield complete with mounting screw, washer and nut	.50
2975	Rivet Eyelet rivet for mounting cone Package of 100	.50
2976	Knob Volume control or Regeneration control knob Package of 5	1.50
2977	Knob Station selector knob - Package of 5........	2.50
2978	Screw assembly Loudspeaker mounting screw assembly comprising four screws, four washers, four lock washers, eight nuts and four eyelets.....	.60
2981	Capacitor - 320 Mmfd. detector plate R.F. by-pass capacitor..............................	.50
3006	Capacitor .001 Mfd. Used across low frequency tickler coil	.50
3007	Wrench Special wrench for R.F. line-up condenser adjustments	1.00
3066	Resistor—12,000 Ohms—Carbon type—Package of 5.	$2.50
3067	Variable Resistor — Regeneration Control Variable Resistor complete with mounting washer and nut..	1.50
5817	Resistor—20,000 Ohms—Carbon type.............	.90
7054	Cord—Power cord complete with male connector plug	1.00
7229	Socket—Five prong Radiotron socket complete with insulating shield 3 used - Package of 2..........	.50
7230	Socket—Four prong Radiotron socket complete with insulating shield—1 used—Package of 2..........	.50
7231	Capacitor - Filter and by-pass capacitor pack—Comprising one 0.05 mfd., two 0.5 mfd., two 0.25 mfd. and one 2.0 mfd. condensers..............	2.50
7232	Capacitor—2 gang variable tuning capacitor........	5.00
7234	Transformer—Output transformer—With fibre terminal board..............................	1.50
7236	Cone—Reproducer cone complete with voice coil and paper ring..............................	1.50
8669	Transformer—Power transformer—105-125 volt, 50-60 cycle—Complete with mounting washers and nuts..............................	6.00
8670	Transformer—Power transformer—105-125 volt, 25-40 cycle -Complete with mounting washers and nuts..............................	9.00
8671	Transformer—Power transformer—220 volts, 50-60 cycles—Complete with mounting washers and nuts.	8.00
10434	Resistor—Mid-tapped filament resistor—Used on early models only	.50
	SPECIAL PARTS SUPPLIED ON ORDER ONLY (Not to be stocked)	
2979	Board—Baffle board complete with grille cloth......	.75
2980	Escutcheon—Station selector escutcheon complete with mounting screws..........................	.75
3058	Board — Resistor mounting board—Less all resistors, capacitors and coils..........................	1.00
7235	Coil—Field coil complete with bracket and cone ring.	2.00
9321	Cabinet—Cabinet complete—Less all equipment....	7.25
9339	Chassis—Receiver chassis complete—Less reproducer unit, knobs and Radiotrons..............	27.50
9340	Reproducer unit—Reproducer unit complete........	4.75

MODEL R-7,R-9 AC
Superette
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes removed from receiver and AC plug disconnected from power supply socket. Speaker field disconnected. Volume control adjusted to maximum, unless otherwise stated

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis (Y) to			
RF Control Grid	5	ohms	TC-Y
RF Cathode (V.E.Min)	3,950	ohms	BC-Y
RF Cathode (V.C.Max)	150	ohms	See Min. Adj.
RF Screen Grid	8,150	ohms	BC- rf Sg-Y
RF Plate	22,508	ohms	FC-Y (4.mfd)
			BC-'80 F-Y (.5 mfd)
1 Detector Control Grid	6	ohms	TC-Y
1 Detector Cathode	10,000	ohms	BC- 1 D K-Y
1 Detector Screen Grid	8,150	ohms	See R-F Sg
1 Detector Plate	22,543.5	ohms	See R-F Plate
			TC- 1 IF Tr
1 Detector Plate-'80 F	93.5	ohms	TC- 1 IF Tr
Oscillator Control Grid	40,150	ohms	Osc. Grid Cond.
			See R-F Cathode
Oscillator Cathode	150	ohms	See R-F Cathode
Oscillator Plate	8,151	ohms	See R-F Screen
Osc. Plate- 1 Det Screen	1	ohm	
IF Control Grid	41.5	ohms	TC-Y
IF Cathode	150	ohms	See R-F Cathode
IF Screen Grid	8,150	ohms	See R-F Screen Grid
IF Plate	22,491	ohms	See R-F Plate
			BC- if P - 2 DK
			TC- 2 IF Tr
IF Plate-'80 Fil	41.5	ohms	TC-2 IF Tr

Magnetic Pickup Terminal Board 1-2 Closed

2 Detector Control Grid	1,000,093.5	ohms	BC-#2Ter.- 2DK
2 Detector Control Grid-Ter 2	93.5	ohms	TC- #1 Terminal
2 Detector Cathode	30,000	ohms	BC- 2 D K- if P
			BC- 2 DP - 2 D K
2 Detector Plate	23,250	ohms	BC- 2 DP - 2 D K
			FC-'80 F-Y (.5 mfd)
			FC-'80 F-Y (4. mfd)
			See R-F Plate
2 Det Plate-'80 F	800	ohms	

Output Tube Control Grid	102,850	ohms	Tone Control condenser
Output Tube Grid to Grid	5,700	ohms	Tone Control condenser
			Tone Control resistance
Output Tube Plate (2 tubes)	22,630	ohms	
Output Tube Plate to Plate	360	ohms	
'80 Filament	22,450	ohms	See R-F Plate
'80 Filament to Anode	222,575	ohms	See R-F Plate
'80 Anode to Anode	250	ohms	FC-'80F -80 P (10 mfd)
'80 Anode to Chassis	200,125	ohms	
Across Speaker field	1,330	ohms	

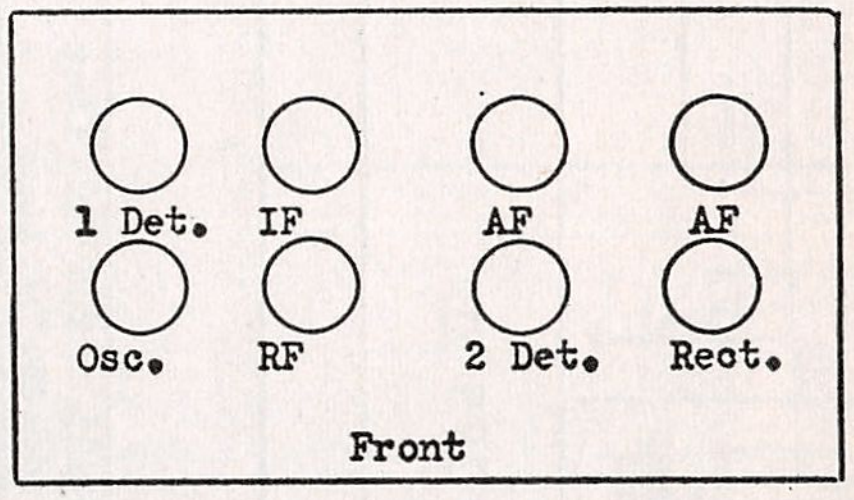

Volume Control Maximum

Tube	Cathode-Heater	Cathode-Grid	Cathode-Screen	Cathode-Plate	Plate Current	Fil.
RF	2.5	2.5	65	225	4.0 ma	2.4
Osc.	2.5	0.		55	5.0	2.4
1Det	5.0	5.0	60	215	0.5	2.4
IF	2.5	2.5	65	225	4.0	2.4
2Det	60.	*10.		200	0.5	2.4
AF		*20.		215	20.	2.4
AF		*20.		215	20.	2.4

* Not true reading because of resistance in circuit.

MODEL R-7,R-9 DC
Superette
Schematic
Voltage

R. C. A. VICTOR CO., INC.

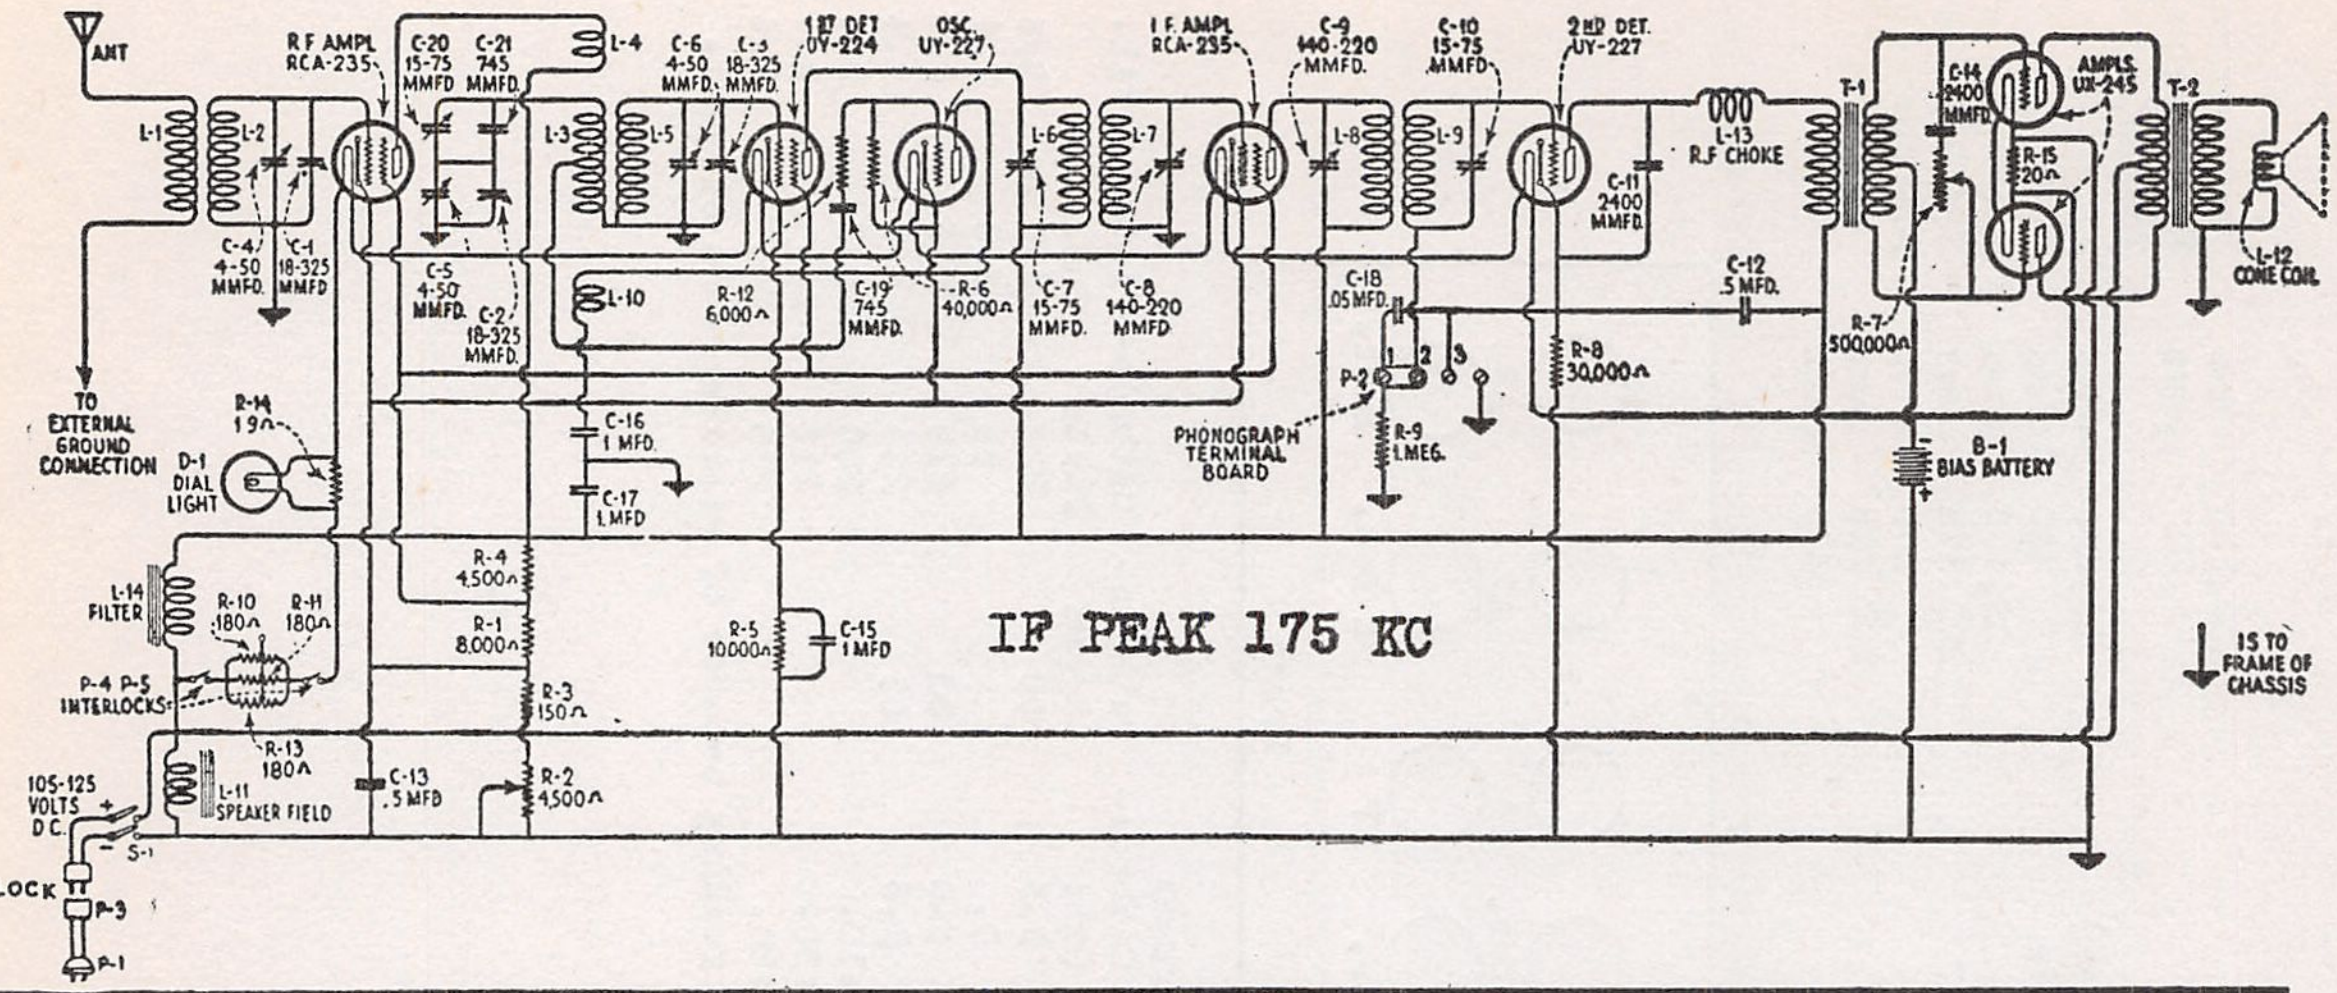
ANT
L-1
L-2
R F AMPL RCA-235
C-20 15-75 MMFD
C-21 745 MMFD.
L-4
C-6 4-50 MMFD.
C-3 18-325 MMFD.
1ST DET UY-224
OSC. UY-227
I F AMPL RCA-235
C-9 140-220 MMFD.
C-10 15-75 MMFD
2ND DET. UY-227
L-3
L-5
L-6
L-7
L-8
L-9
C-4 4-50 MMFD.
C-1 18-325 MMFD
C-5 4-50 MMFD.
C-2 18-325 MMFD.
L-10
R-12 6,000 Ω
C-19 745 MMFD.
R-6 40,000 Ω
C-7 15-75 MMFD.
C-8 140-220 MMFD
C-18 .05 MFD.
P-2
1
2
3
PHONOGRAPH TERMINAL BOARD
R-9 1 MEG.
C-11 2400 MMFD.
L-13 R.F CHOKE
C-12 .5 MFD.
R-8 30,000 Ω
T-1
C-14 2400 MMFD.
AMPLS. UX-245
R-15 20 Ω
R-7 500,000 Ω
T-2
L-12 CONE COIL
B-1 BIAS BATTERY
TO EXTERNAL GROUND CONNECTION
R-14 19 Ω
D-1 DIAL LIGHT
C-16 1 MFD.
C-17 1 MFD
L-14 FILTER
R-10 180 Ω
R-11 180 Ω
P-4 P-5 INTERLOCKS
R-4 4,500 Ω
R-1 8,000 Ω
R-3 150 Ω
R-5 10000 Ω
C-15 1 MFD
IF PEAK 175 KC
IS TO FRAME OF CHASSIS
R-13 180 Ω
105-125 VOLTS D.C.
L-11 SPEAKER FIELD
C-13 .5 MFD
R-2 4,500 Ω
S-1
INTERLOCK
P-3
P-1

RADIOTRON SOCKET VOLTAGES—115 or 230 Volt Line

(Separate Resistance Unit Used with 230 Volt Line)

Tube No.	Cathode to Heater Volts, D.C.	Cathode or Filament to Control Grid Volts, D.C.	Cathode to Screen Grid Volts, D.C.	Cathode or Filament to Plate Volts, D.C.	Plate Current M. A.	Screen Grid Current M. A.	Heater or Filament Volts, A.C.
VOLUME CONTROL AT MINIMUM							
1	40	30	40	75	0	0	2.3
2	20	0	—	40	2.0	—	2.3
3	6.0	3.5	65	100	.25		2.3
4	17.0	26	40	75	.0	0	2.3
5	2.0	*2.0	—	90	.23	—	2.3
6	—	25.0	—	100	4.0	—	2.3
7	—	*25.0	—	100	4.0	—	2.3
VOLUME CONTROL AT MAXIMUM							
1	10.0	2.0	50	100	3.5	**0.5	2.3
2	6.0	.0		50	3.0	—	2.3
3	8.0	5.0	50	100	0.5	.0	2.3
4	10.0	2.0	50	100	2.5	**1.0	2.3
5	2.0	*2.0	—	90	.25	0	2.3
6	—	*25.0	—	100	4.0	—	2.3
7	—	*25.0	—	100	4.0	—	2.3

* Not true reading due to Resistance in circuit

**This may be plus or minus depending on age of tubes

The RCA Victor Superette, R-7 D.C. and the Console, R-9 D.C. are similar to the A.C. Models with the exception that the necessary changes for D.C. operation have been made. The Service Notes on the A.C. Models, therefore, apply to the D.C. Models with the exception of voltage readings and circuit diagrams.

Provision for operation at 220 volts is made by the use of a separate resistance unit which drops the voltage to 110. This unit should be located in a place that is well ventilated and it should not come in contact with any wood or cloth material other than that upon which it is resting.

An interlock is provided on the cabinet back so that access to the parts cannot be made without opening the power supply. However, when service work is being performed, it may be necessary to run jumpers from the back to the connection block so that operation of the receiver may be secured. *Never make these interlocks inoperative except under these conditions.* They are designed for protection of the customer.

SPECIAL PARTS FOR R-9 D.C.

3070	Bolts—Speaker mounting bolts, nuts and washers—Package of 2	.50
7222	Foot	.50
8664	Control panel	7.50
8665	Board—Baffle board complete with grille cloth	1.00
9329	Stretcher	4.50
9331	Top	3.25
9332	Post—Front post R. H.	2.50
9333	Post—Back post R. H.	2.50
9334	Post—Front post L. H.	2.50
9335	Post—Back post L. H.	2.50
9350	Cabinet—R-9 D.C. cabinet complete—Less all equipment	55.00
9357	Door—Rear cabinet door	5.00

Models R-7, R-9 DC (1931)

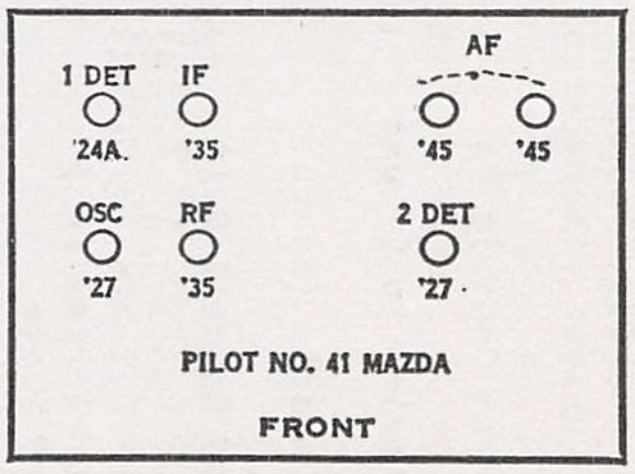
1 DET
IF
AF
'24A.
'35
'45
'45
OSC
RF
2 DET
'27
'35
'27
PILOT NO. 41 MAZDA
FRONT

R. C. A. VICTOR CO., INC.

MODEL R-7, R-9 DC
Superette
Chassis

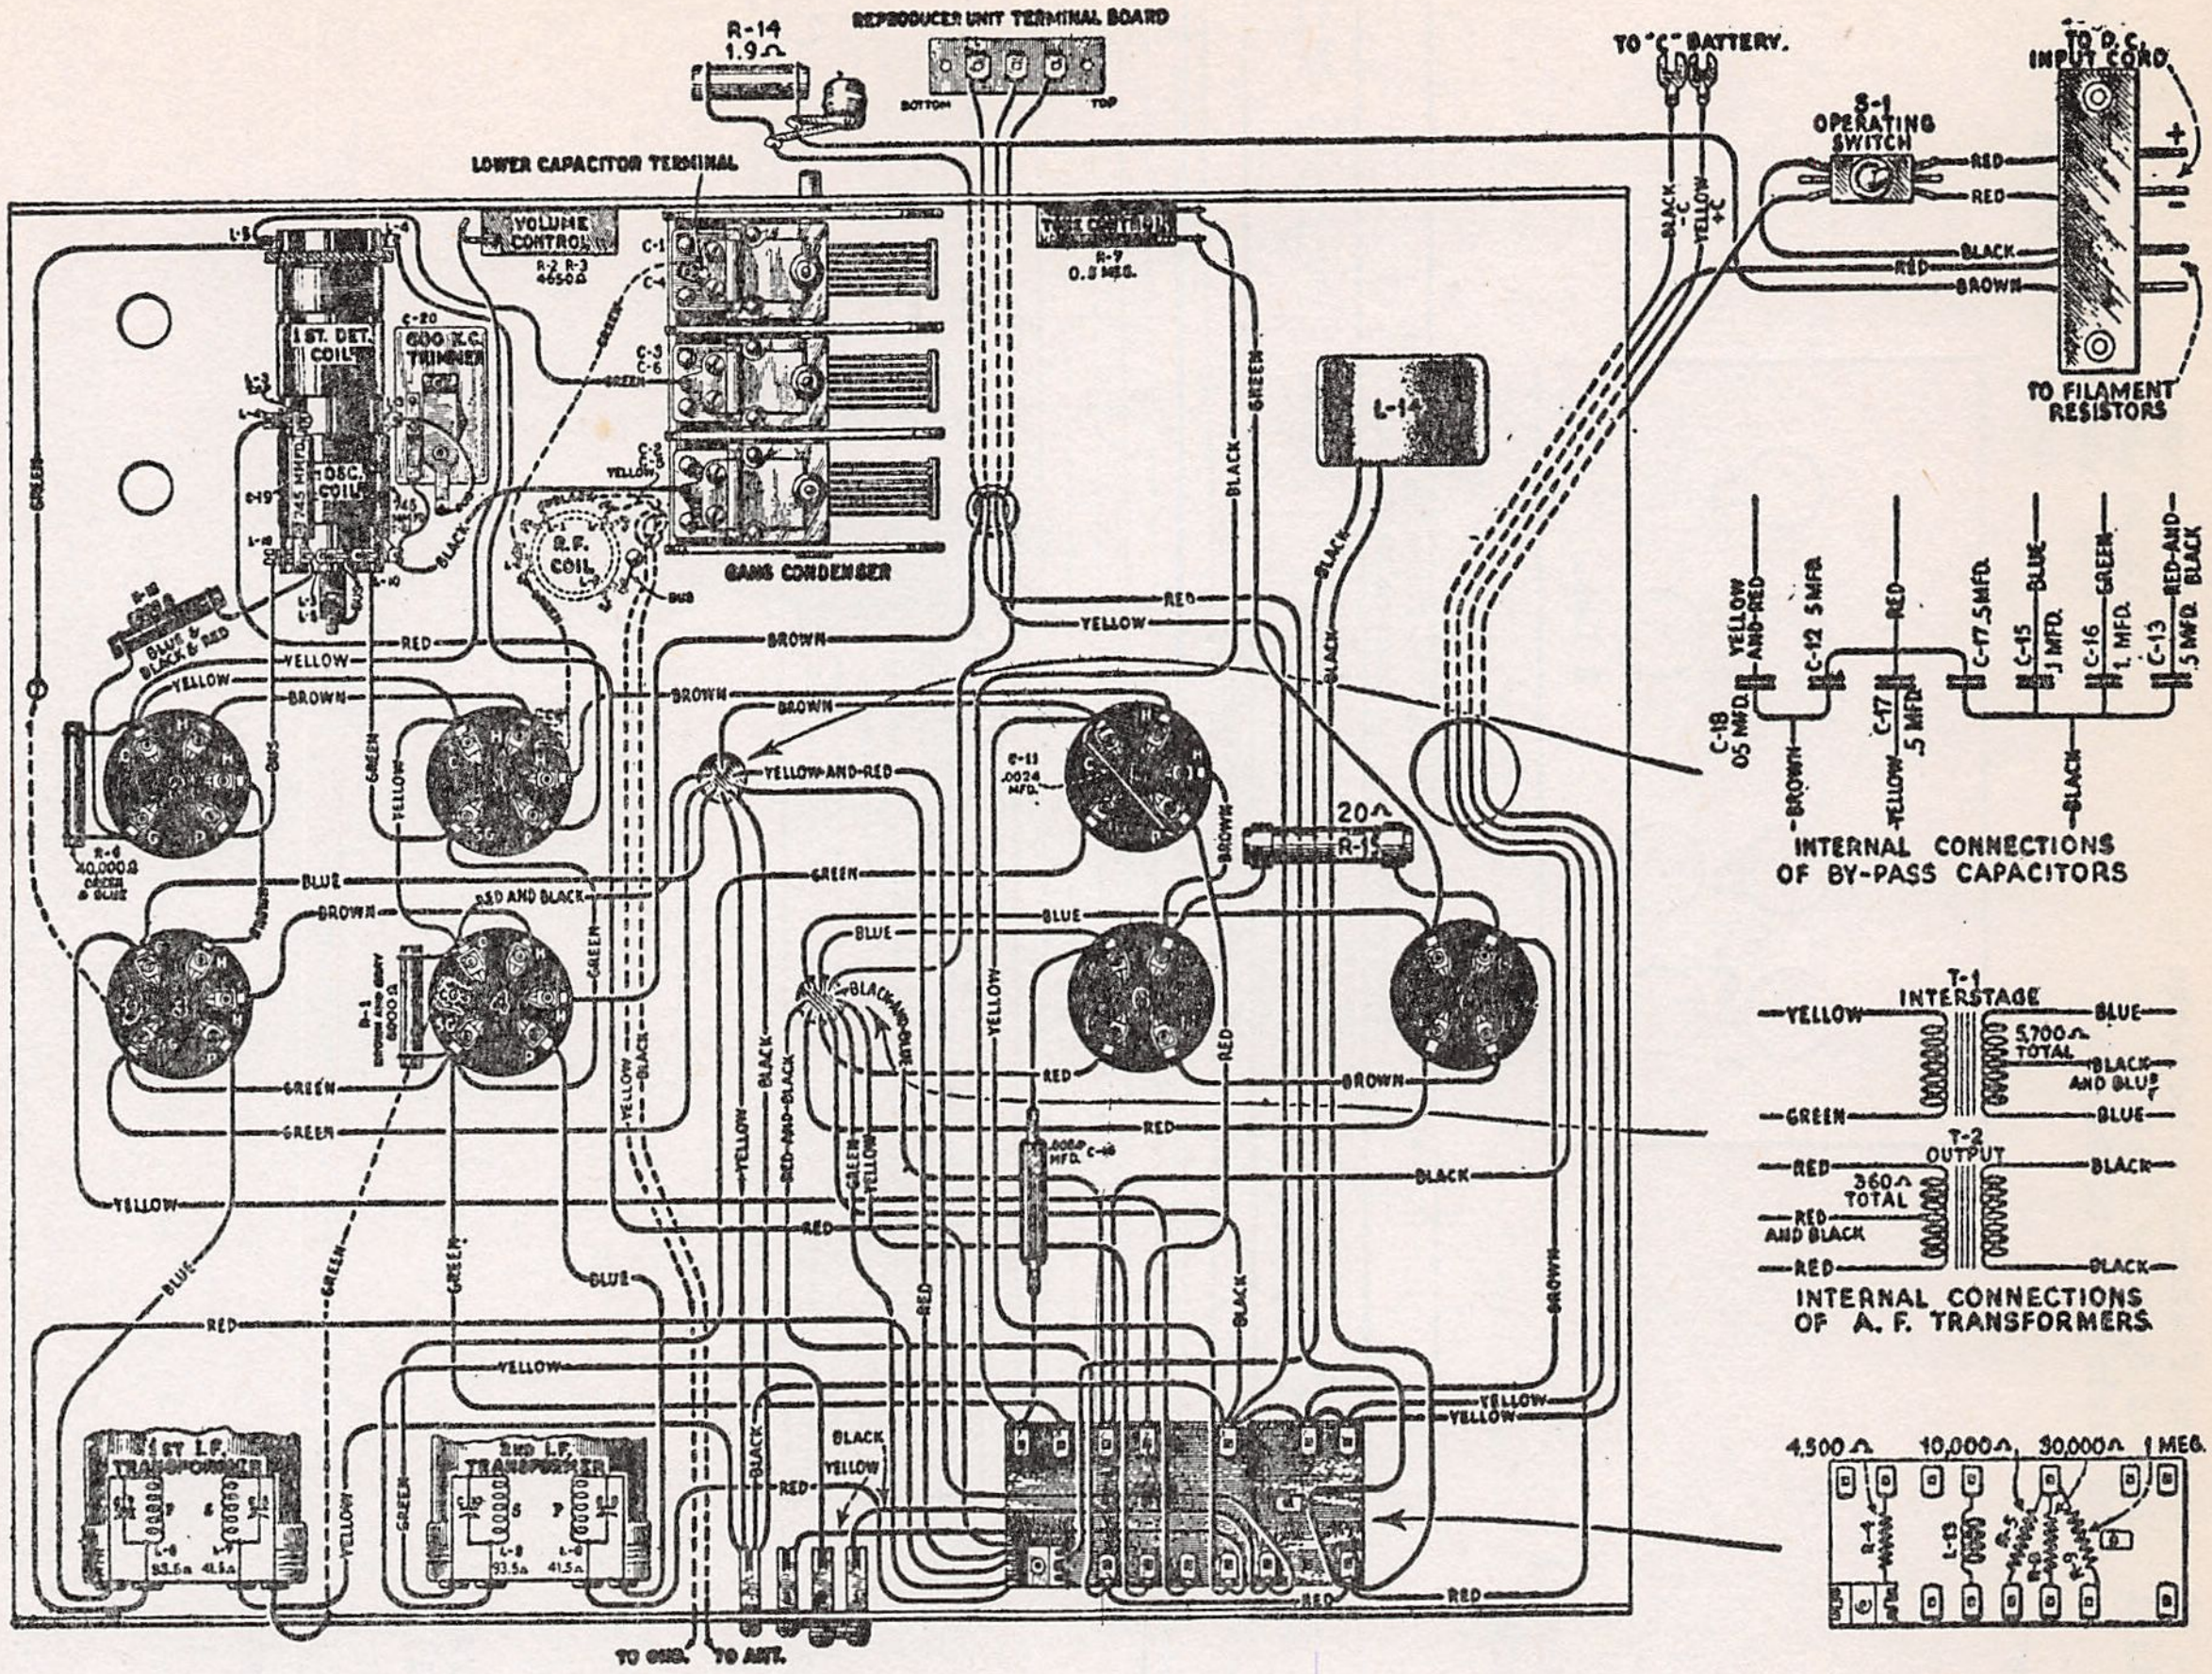
R-14
1.9Ω
REPRODUCER UNIT TERMINAL BOARD
BOTTOM
TOP
LOWER CAPACITOR TERMINAL
VOLUME CONTROL
R-2 R-3 4650Ω
TONE CONTROL
R-9 0.5 MEG.
1ST. DET. COIL
600 K.C. TRIMMER
OSC. COIL
R.F. COIL
GANG CONDENSER
L-14
R-6 40,000Ω
R-1
20Ω
R-16
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
TO GND.
TO ANT.
TO "C" BATTERY.
S-1 OPERATING SWITCH
TO D.C. INPUT CORD
TO FILAMENT RESISTORS
YELLOW
RED
GREEN
BLUE
BROWN
BLACK
YELLOW-AND-RED
RED AND BLACK
C-18 .05 MFD.
C-12 .5 MFD.
C-17 .5 MFD.
C-17 .5 MFD.
C-15 .1 MFD.
C-16 1. MFD.
C-13 .5 MFD.
INTERNAL CONNECTIONS OF BY-PASS CAPACITORS
T-1 INTERSTAGE
5,700Ω TOTAL
BLACK AND BLUE
T-2 OUTPUT
360Ω TOTAL
RED AND BLACK
INTERNAL CONNECTIONS OF A. F. TRANSFORMERS
4,500Ω
10,000Ω
30,000Ω
1 MEG.

Part No.	DESCRIPTION	List Price
	PARTS COMMON TO R-7 D.C. AND R-9 D.C.	
2240	Resistor—30,000 Ohms—Carbon type	$0.70
2546	Resistor—1 Megohm—Carbon type—Package of 5	3.00
2731	Resistor—10,000 Ohms—Carbon type—Package of 5.	2.00
2746	Socket—Dial lamp socket	.50
2749	Capacitor—2,400 Mmfd.—Used as 2nd Detector R.F. by-pass capacitor	1.50
2875	Knob—Station Selector, Tone Control or Volume Control Knob—Package of 5	1.50
2881	Bracket—Dial lamp bracket—Package of 5	.50
2882	Socket—Five prong Radiotron Socket complete with insulating shield—Five used	.50
2946	Escutcheon—Station Selector Escutcheon	.60
2968	Socket—Four prong Radiotron Socket complete with insulating shield—Two used	.50
2973	Board—Magnetic Pickup terminal board complete with terminals and screws—Package of 2	.50
2990	Resistor—4,500 ohms—Carbon type—Package of 5	2.50
2991	Transformer—1st I. F. Transformer complete with shield and mounting screws	3.00
2992	Transformer—2nd I. F. Transformer complete with shield and mounting screws	3.00
2993	Board—Resistor mounting board complete with terminals and mounting brackets—less resistors	1.00
2994	Coil—2nd Detector R.F. Choke Coil complete with rivet	.60
2995	Volume Control—complete less knob—Package of 5	6.00
2996	Tone Control—Complete less knob—Package of 5	6.00
2997	Coil—R.F. coil complete with mounting washer and nut	1.90
2998	Coil—1st Detector and Oscillator Coil assembly complete with mounting washers and nuts	2.40

Part No.	DESCRIPTION	List Price
2999	Shaft—Dial Scale drive shaft complete with mounting screws and lock washers	.50
3000	Scale—Dial drum and scale complete with set screws	.60
3001	Resistor—1.9 Ohms—Porcelain resistor used in parallel with dial lamp	.60
3002	Resistor—20 Ohms—Porcelain resistor used across UX-245 filaments	.60
3003	Cushion—Sponge Rubber Cushions—Package of 4	.50
3004	Resistor—Porcelain type—180 Ohms—used as heater supply resistor—Three used	1.80
3005	Screw Assembly—Loudspeaker Screws, Nuts, Eyelets and Washers—Package of 1 set of four each (for R-7)	$ .50
3045	Resistor—40,000 ohms—Carbon type—Package of 5.	2.50
3071	Plug—Male and Female power plug—used as interlock—Set of 2 Complete plugs	1.60
3072	Resistor Unit—Resistor Unit complete for use on 220 volt D.C. lines	19.00
3073	Switch—Operating switch	.80
7054	Cord—Power Cord and Plug	1.00
7062	Condenser—Adjustable Oscillator trimming condenser.	1.00
7238	Capacitor Pack—R.F. by-pass capacitor pack in metal container	3.50
7239	Transformer—A.F. transformer assembly in metal container	6.00
7240	Reactor—Filter reactor	5.50
7241	Condenser—3-gang tuning condenser complete with mounting washers and screws	8.00
8559	Ring—Cone retaining ring	.80
8601	Cone—Cone complete—Package of 5	15.00
8639	Coil—Loudspeaker field coil complete with cone support	5.00
9323	Loudspeaker—Loudspeaker unit complete	8.70
9338	Receiver Assembly—Receiver Assembly complete—less loudspeaker and Radiotrons	40.00

MODEL R-7,R-9 DC
Superette
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes removed and speaker field disconnected - Interlocks closed - DC plug removed from line socket - Dial light out of socket - Volume control max unless otherwise stated - C Battery removed

From Chassis To	Correct	Incorrect
Aerial to Ground	40 ohms	
Chassis to		
RF Control Grid	5 ohms	TC-Y
RF Cathode(V.C. Max)	150 ohms	BC-Y (.5 mfd)
RF Cathode(V.C. Min)	4,650 ohms	BC-Y (.5 mfd)
RF Screen Grid	8,150 ohms	BC-Y (1. mfd)
RF Plate	12,708 ohms	BC-Y (1. mfd)
		BC-2D P-2DK (0024 mfd)
		BC-2D P-2DK (.5 mfd)
RF Plate to 1 Detector Plate	151.5 ohms	
1 Det Control Grid	6 ohms	TC-Y
1 Detector Cathode	10,000 ohms	BC- 1DK-Y
L Detector Screen Grid	8,150 ohms	See R-F Sg
1 Detector Plate	12,743.5 ohms	TC- 1 IF Tr
		See R-F Plate
Oscillator Control Grid	40,150 ohms	Osc Grid Condenser
Oscillator Cathode	150 ohms	See R.F. Cathode
Oscillator Plate	8,151 ohms	See R.F. Screen
Oscillator Plate to RF Screen	1 ohm	
IF Control Grid	41.5 ohms	TC- IF Tr-Y
IF Cathode	150 ohms	See RF Cathode
IF Screen Grid	8,150 ohms	See RF Screen
IF Screen to 1 Det Screen	0 ohms	
IF Plate	12,691.5 ohms	See RF Plate
IF Plate to RF Plate	99.5 ohms	

Pickup Terminal Broad Terminals 1 and 2 joined

2 Detector Control Grid	1,000,093.5 ohms	BC-Ter#1-2DK
2 Detector Control Grid to Ter#2	93.5 ohms	TC-IF Tr-
2 Detector Cathode	30,000 ohms	BC-2DP-2DK(0024 mfd)
		BC-2DP-2DK (.5 mfd)
2 Detector Plate	13,300 ohms	See RF Plate
Output Control Grid to Black Bias Lead	3,850 ohms	
Output Grid to Grid	5,700 ohms	Tone Control Condenser
Output Grid to chassis(bias leads shorted)	3,350ohms	
Output Plate to +D.C.Switch	180 ohms	
Output Plate to Plate	360 ohms	
1 Output filament terminal and chassis	20 ohms	
Across dial light socket	1.9 ohms	

Across Filament interlocks	60 ohms
Across Speaker field	13.30 ohms
RF Plate to + DC Switch	58+ ohms*

*Resistance of filter choke not known

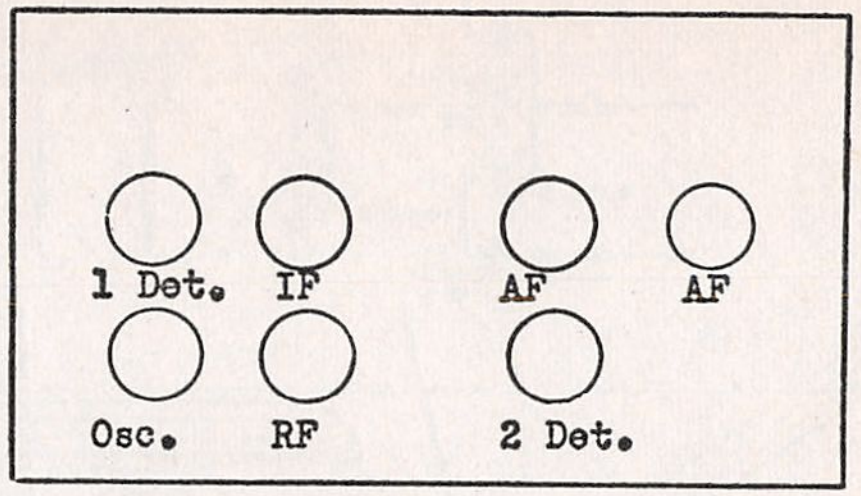

RADIOTRON SOCKET VOLTAGES—115 or 230 Volt Line
(Separate Resistance Unit Used with 230 Volt Line)

Tube No.	Cathode to Heater Volts, D.C.	Cathode or Filament to Control Grid Volts, D.C.	Cathode to Screen Grid Volts, D.C.	Cathode or Filament to Plate Volts, D.C.	Plate Current M. A	Screen Grid Current M. A.	Heater or Filament Volts, A.C.
VOLUME CONTROL AT MINIMUM							
1	40	30	40	75	0	0	2.3
2	20	0	—	40	2.0	—	2.3
3	6.0	3.5	65	100	.25		2.3
4	17.0	26	40	75	.0	0	2.3
5	2.0	*2.0	—	90	.23	—	2.3
6	—	25.0	—	100	4.0	—	2.3
7	—	*25.0	—	100	4.0	—	2.3
VOLUME CONTROL AT MAXIMUM							
1	10.0	2.0	50	100	3.5	**0.5	2.3
2	6.0	.0		50	3.0	—	2.3
3	8.0	5.0	50	100	0.5	.0	2.3
4	10.0	2.0	50	100	2.5	**1.0	2.3
5	2.0	*2.0	—	90	.25	0	2.3
6	—	*25.0	—	100	4.0	—	2.3
7	—	*25.0	—	100	4.0	—	2.3

* Not true reading due to Resistance in circuit

**This may be plus or minus depending on age of tubes

MODEL R-7A AC
Superette
Schematic

R. C. A. VICTOR CO., INC.

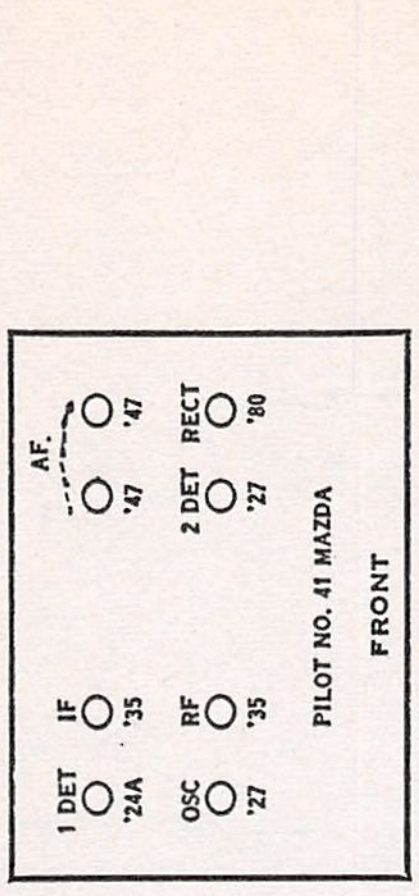
Model R-7A (1931)
1 DET
'24A
IF
'35
AF.
'47
'47
RECT
'80
OSC
'27
RF
'35
2 DET
'27
PILOT NO. 41 MAZDA
FRONT

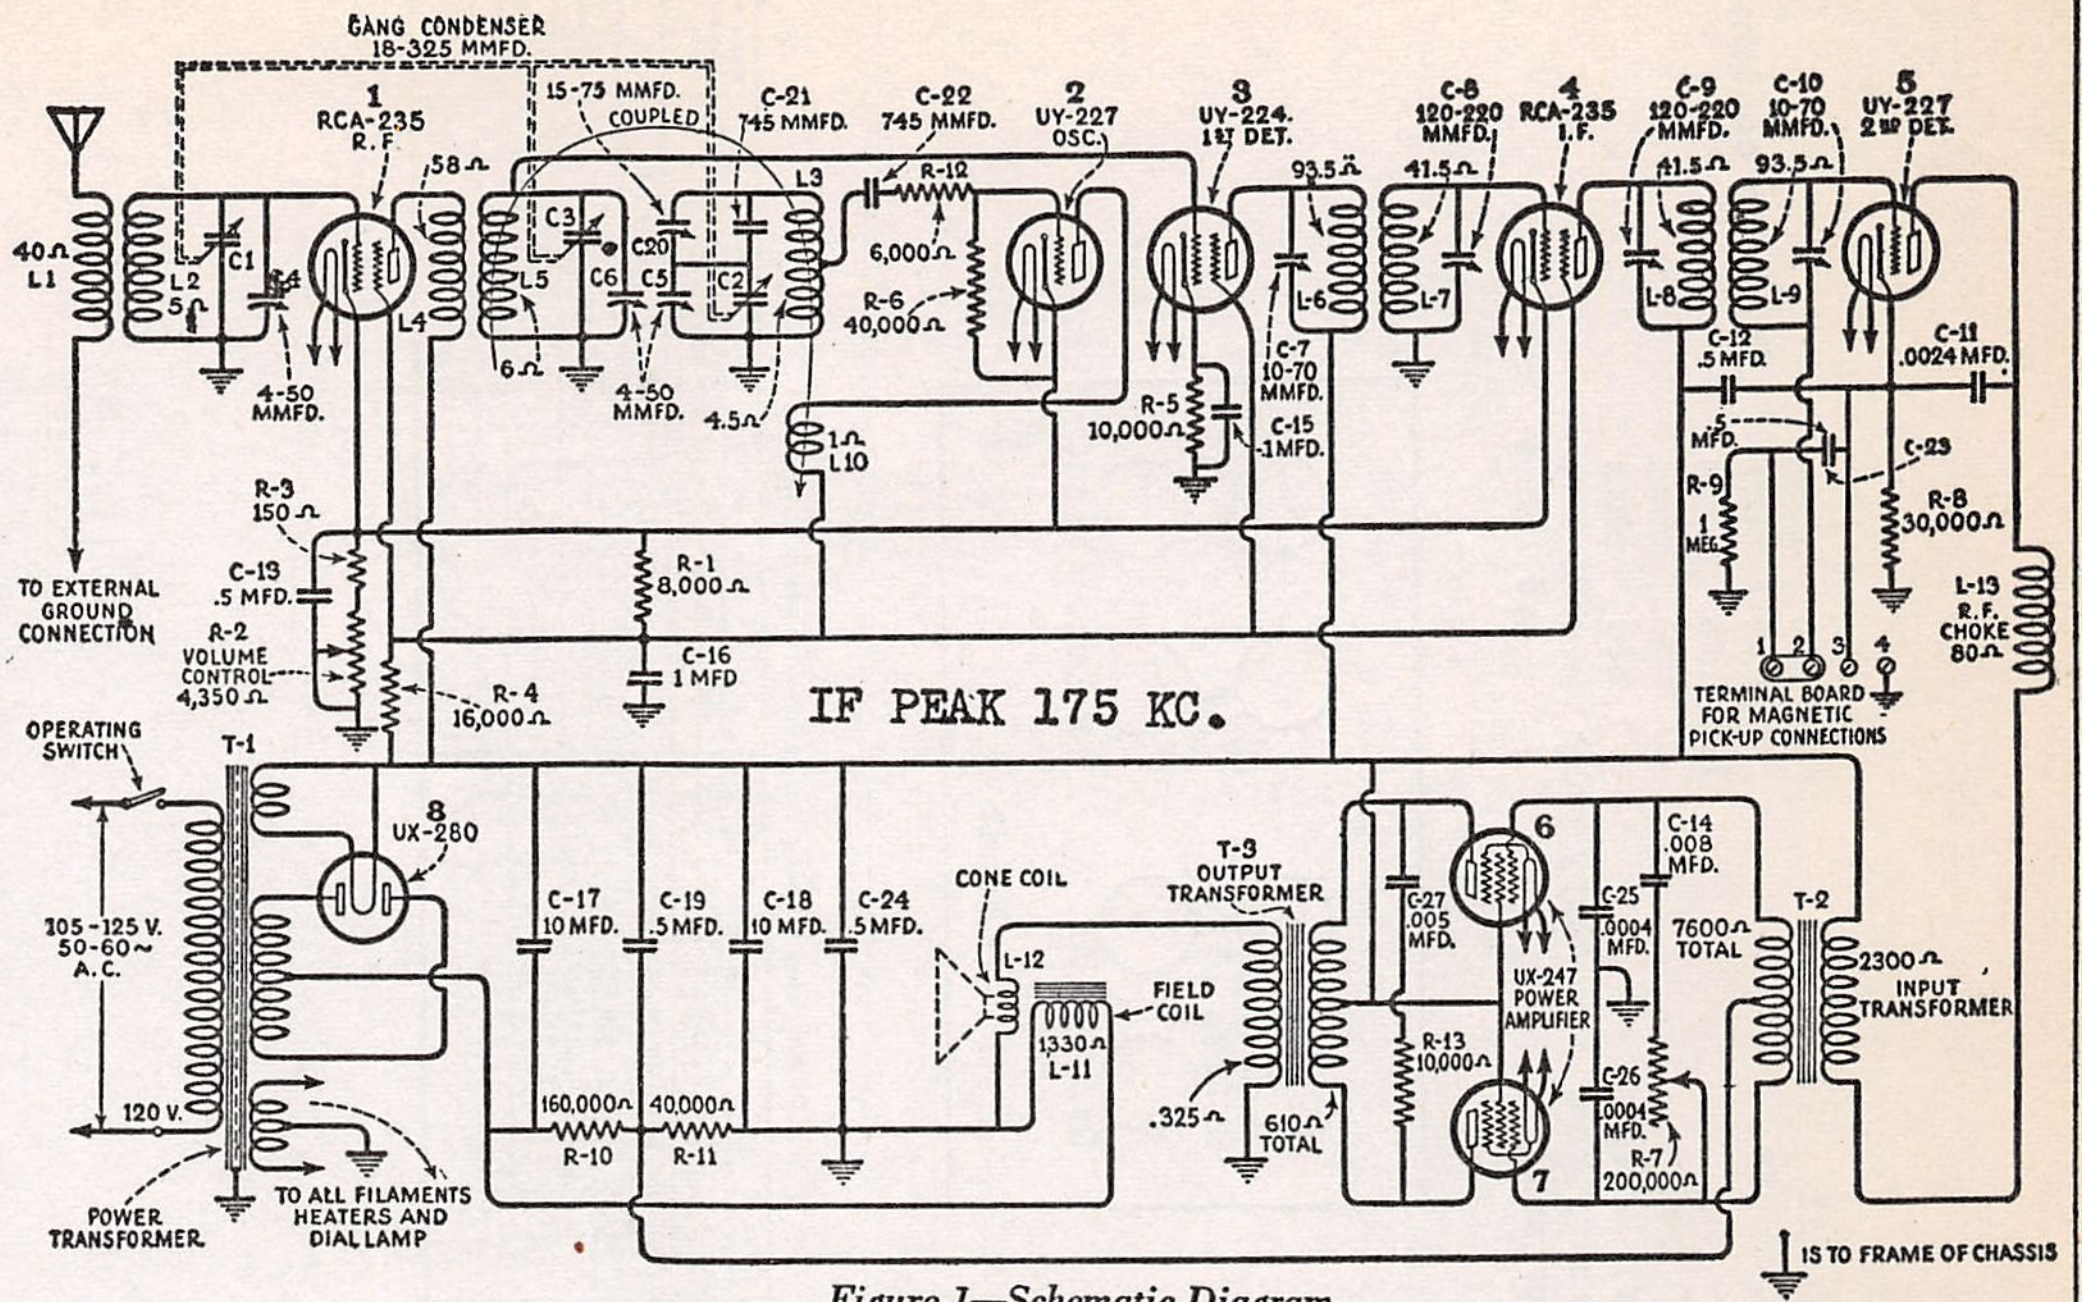
GANG CONDENSER
18-325 MMFD.
1
RCA-235
R. F.
15-75 MMFD.
COUPLED
C-21
745 MMFD.
C-22
745 MMFD.
2
UY-227
OSC.
3
UY-224.
1ST DET.
C-8
120-220
MMFD.
4
RCA-235
I.F.
C-9
120-220
MMFD.
C-10
10-70
MMFD.
5
UY-227
2ND DET.
40 Ω
L1
L2
5 Ω
C1
L4
.58 Ω
C3
L5
C6
C5
C20
C2
L3
6 Ω
4-50
MMFD.
4-50
MMFD.
4.5 Ω
R-12
6,000 Ω
R-6
40,000 Ω
1 Ω
L10
R-5
10,000 Ω
C-7
10-70
MMFD.
C-15
.1 MFD.
93.5 Ω
L-6
41.5 Ω
L-7
41.5 Ω
L-8
93.5 Ω
L-9
C-12
.5 MFD.
C-11
.0024 MFD.
.5
MFD.
C-23
R-9
1
MEG.
R-8
30,000 Ω
L-13
R. F.
CHOKE
80 Ω
1
2
3
4
TERMINAL BOARD
FOR MAGNETIC
PICK-UP CONNECTIONS
TO EXTERNAL
GROUND
CONNECTION
R-3
150 Ω
C-13
.5 MFD.
R-2
VOLUME
CONTROL
4,350 Ω
R-4
16,000 Ω
R-1
8,000 Ω
C-16
1 MFD
IF PEAK 175 KC.
OPERATING
SWITCH
T-1
8
UX-280
105-125 V.
50-60 ~
A. C.
120 V.
POWER
TRANSFORMER
TO ALL FILAMENTS
HEATERS AND
DIAL LAMP
C-17
10 MFD.
C-19
.5 MFD.
C-18
10 MFD.
C-24
.5 MFD.
160,000 Ω
R-10
40,000 Ω
R-11
CONE COIL
L-12
FIELD
COIL
1330 Ω
L-11
T-3
OUTPUT
TRANSFORMER
.325 Ω
610 Ω
TOTAL
C-27
.005
MFD.
R-13
10,000 Ω
6
UX-247
POWER
AMPLIFIER
7
C-25
.0004
MFD.
C-26
.0004
MFD.
C-14
.008
MFD.
R-7
200,000 Ω
7600 Ω
TOTAL
T-2
2300 Ω
INPUT
TRANSFORMER
IS TO FRAME OF CHASSIS

Figure 1—Schematic Diagram

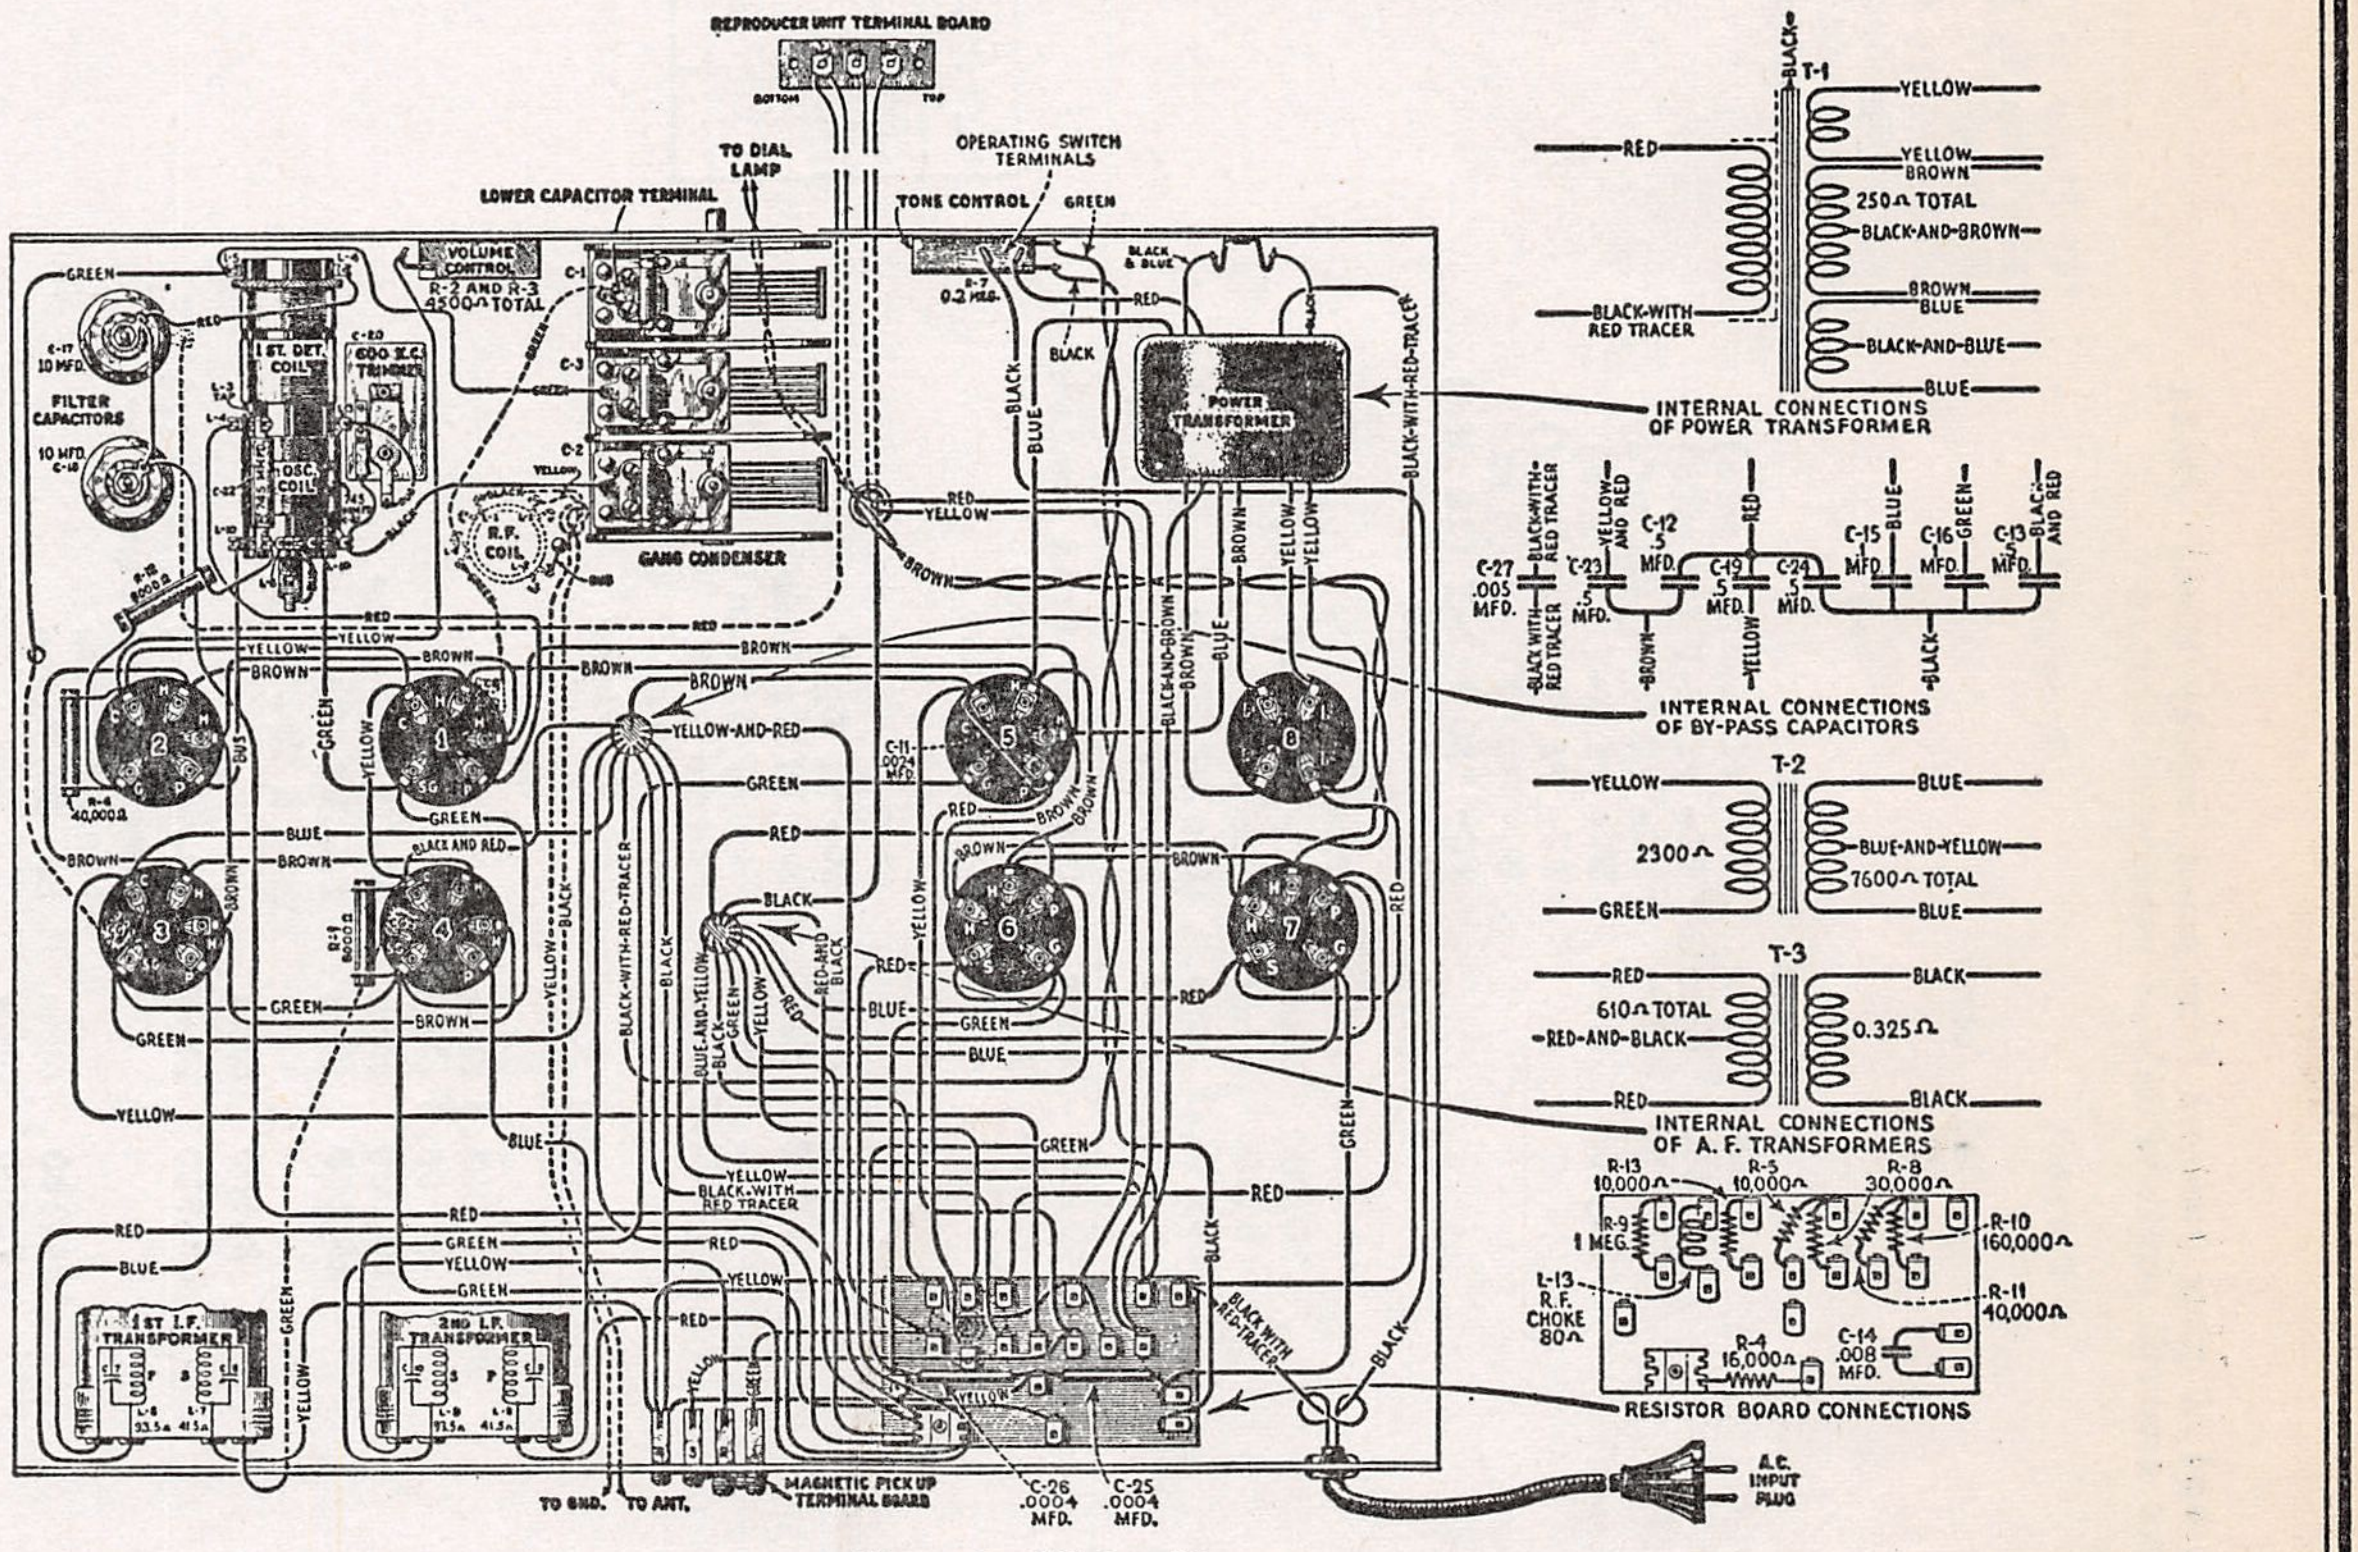
REPRODUCER UNIT TERMINAL BOARD
BOTTOM
TOP
TO DIAL LAMP
OPERATING SWITCH TERMINALS
LOWER CAPACITOR TERMINAL
VOLUME CONTROL
R-2 AND R-3
4500 Ω TOTAL
TONE CONTROL
1ST DET. COIL
OSC. COIL
R. F. COIL
GANG CONDENSER
POWER TRANSFORMER
FILTER CAPACITORS
10 MFD.
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
MAGNETIC PICK UP TERMINAL BOARD
TO GND.
TO ANT.
C-26
.0004
MFD.
C-25
.0004
MFD.
A.C. INPUT PLUG
T-1
BLACK
YELLOW
RED
YELLOW
BROWN
250 Ω TOTAL
BLACK-AND-BROWN
BROWN
BLUE
BLACK-WITH-RED TRACER
BLACK-AND-BLUE
BLUE
INTERNAL CONNECTIONS OF POWER TRANSFORMER
C-27
.005
MFD.
BLACK-WITH-RED TRACER
C-23
.5
MFD.
YELLOW AND RED
C-12
.5
MFD.
BROWN
RED
C-19
.5
MFD.
YELLOW
C-24
.5
MFD.
C-15
1
MFD.
BLUE
C-16
1
MFD.
GREEN
C-13
.5
MFD.
BLACK AND RED
BLACK
INTERNAL CONNECTIONS OF BY-PASS CAPACITORS
T-2
YELLOW
2300 Ω
GREEN
BLUE
BLUE-AND-YELLOW
7600 Ω TOTAL
BLUE
T-3
RED
610 Ω TOTAL
RED-AND-BLACK
RED
BLACK
0.325 Ω
BLACK
INTERNAL CONNECTIONS OF A. F. TRANSFORMERS
R-13
10,000 Ω
R-5
10,000 Ω
R-8
30,000 Ω
R-9
1 MEG.
R-10
160,000 Ω
L-13
R.F.
CHOKE
80 Ω
R-11
40,000 Ω
R-4
16,000 Ω
C-14
.008
MFD.
RESISTOR BOARD CONNECTIONS

Figure 2—Wiring Diagram

RADIOTRON SOCKET VOLTAGES—110 VOLT A. C. LINE

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D.C.	Plate Current M. A.	Heater or Filament Volts A. C.	Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D.C.	Plate Current M. A.	Heater or Filament Volts A. C.
VOLUME CONTROL AT MINIMUM							VOLUME CONTROL AT MAXIMUM						
1	38	35	50	200	.0	2.2	1	2.0	2.5	60	235	3.5	2.2
2	38	0	—	50	3.5	2.2	2	2.0	.0	—	50	4.5	2.2
3	7	6	80	235	0.5	2.2	3	4.0	4.0	55	230	0.5	2.2
4	38	35	50	200	.0	2.2	4	2.0	2.5	58	235	3.5	2.2
5	22	8	—	210	0.7	2.2	5	22	8	—	210	0.7	2.2
6	—	12	225	220	30	2.2	6	—	12	225	220	30	2.2
7	—	12	225	220	30	2.2	7	—	12	225	220	30	2.2

MODEL R-7A AC
Superette
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes out of sockets and AC plug removed from power supply line. Field coil disconnected. Volume control maximum unless otherwise stated

From Chassis To	Correct	Incorrect
Aerial to Ground	40 ohms	
Chassis to		
RF Control Grid	5 ohms	TC-Y
RF Cathode (V.C.Min)	4,500 ohms	BC- rf K-Y (.5 mfd)
RF Cathode (V.C.Max)	150 ohms	BC- rf K-Y (.5 mfd)
RF Screen Grid	8,150 ohms	BC- rf Sg-Y (1. mfd)
RF Plate	24,208 ohms	BC- rf K-Y (.5 mfd)
		BC- rf Sg-Y (1. mfd)
		BC- '80 Fil-Y (5 mfd)
		FC- '80 Fil-Y (10 mfd)
RF Plate to '80 Fil	58 ohms	See RF Plate
1 Detector Control Grid	6 ohms	TC-Y
1 Detector Cathode	10,000 ohms	BC- 1 D K-Y (1. mfd)
1 Detector Screen Grid	8,150 ohms	See RF Screen
1 Detector Plate	24,301.5 ohms	See RF Plate
1 Detector Plate to '80 Fil	93.5 ohms	TC- IF Tr
Oscillator Control Grid	40,150 ohms	Oscillator Grid condenser
Oscillator Cathode	150 ohms	See RF Cathode
Oscillator Plate	24,151 ohms	See RF Plate
Osc. Plate to '80 Fil	1 ohm	
IF Control Grid	41.5 ohms	TC- if Cg-Y
IF Cathode	150 ohms	See Rf Cathode
IF Screen Grid	24,150 ohms	See RF Screen
IF Plate	24,191.5 ohms	BC- to 2 DK
		BC- 2 DP-K
		See RF Plate
IF Plate -'80 Fil	41.5 ohms	
2 Detector Control Grid	1,000,093.5 ohms	BC- 2 DK
2 Det Control Grid- Ter #2	93.5 ohms	TC-
2 Detector Cathode	30,000 ohms	BC- 2 DK- 2 DP
2 Detector Plate	26,530 ohms	See Rf Plate
		BC- 2 DP- 2 DK
2 Detector Plate to '80 Fil	2,380 ohms	
'47 Control Grid	43,800 ohms	BC- '47 Cg-Y (.004 mfd)
		Tone Control Condenser
		See RF Plate
'47 Screen Grid	24,150 ohms	See RF Plate
'47 Cg to '47 Cg	7,600 ohms	
'47 Screen to '80 Fil	0 ohm	
'47 Plate	24,455 ohms	See RF Plate

'47 Plate to '80 Fil	305 ohms	
'47 Plate to '47 Plate	610 ohms	Harmonic condenser
'80 Anode	200,125 ohms	
'80 Anode to '80 Anode	250 ohms	
Across Speaker field only	1,330 ohms	
Across output transformer secondary only	.325 ohm	
Across Oscillator coil	4.5 ohms	

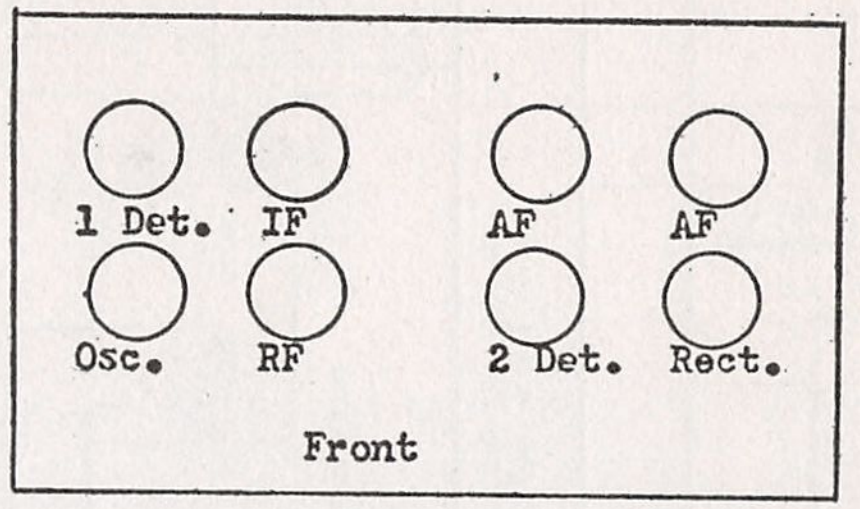

RADIOTRON SOCKET VOLTAGES—110 VOLT A. C. LINE

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D.C.	Plate Current M. A.	Heater or Filament Volts A. C.
VOLUME CONTROL AT MINIMUM						
1	38	35	50	200	.0	2.2
2	38	0	–	50	3.5	2.2
3	7	6	80	235	0.5	2.2
4	38	35	50	200	.0	2.2
5	22	8	—	210	0.7	2.2
6		12	225	220	30	2.2
7		12	225	220	30	2.2

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D.C.	Plate Current M. A.	Heater or Filament Volts A. C.
VOLUME CONTROL AT MAXIMUM						
1	2.0	2.5	60	235	3.5	2.2
2	2.0	.0	—	50	4.5	2.2
3	4.0	4.0	55	230	0.5	2.2
4	2.0	2.5	58	235	3.5	2.2
5	22	8	—	210	0.7	2.2
6	-	12	225	220	30	2.2
7	--	12	225	220	30	2.2

MODEL R-8, R-12 AC
Schematic
Voltage

R. C. A. VICTOR CO., INC.

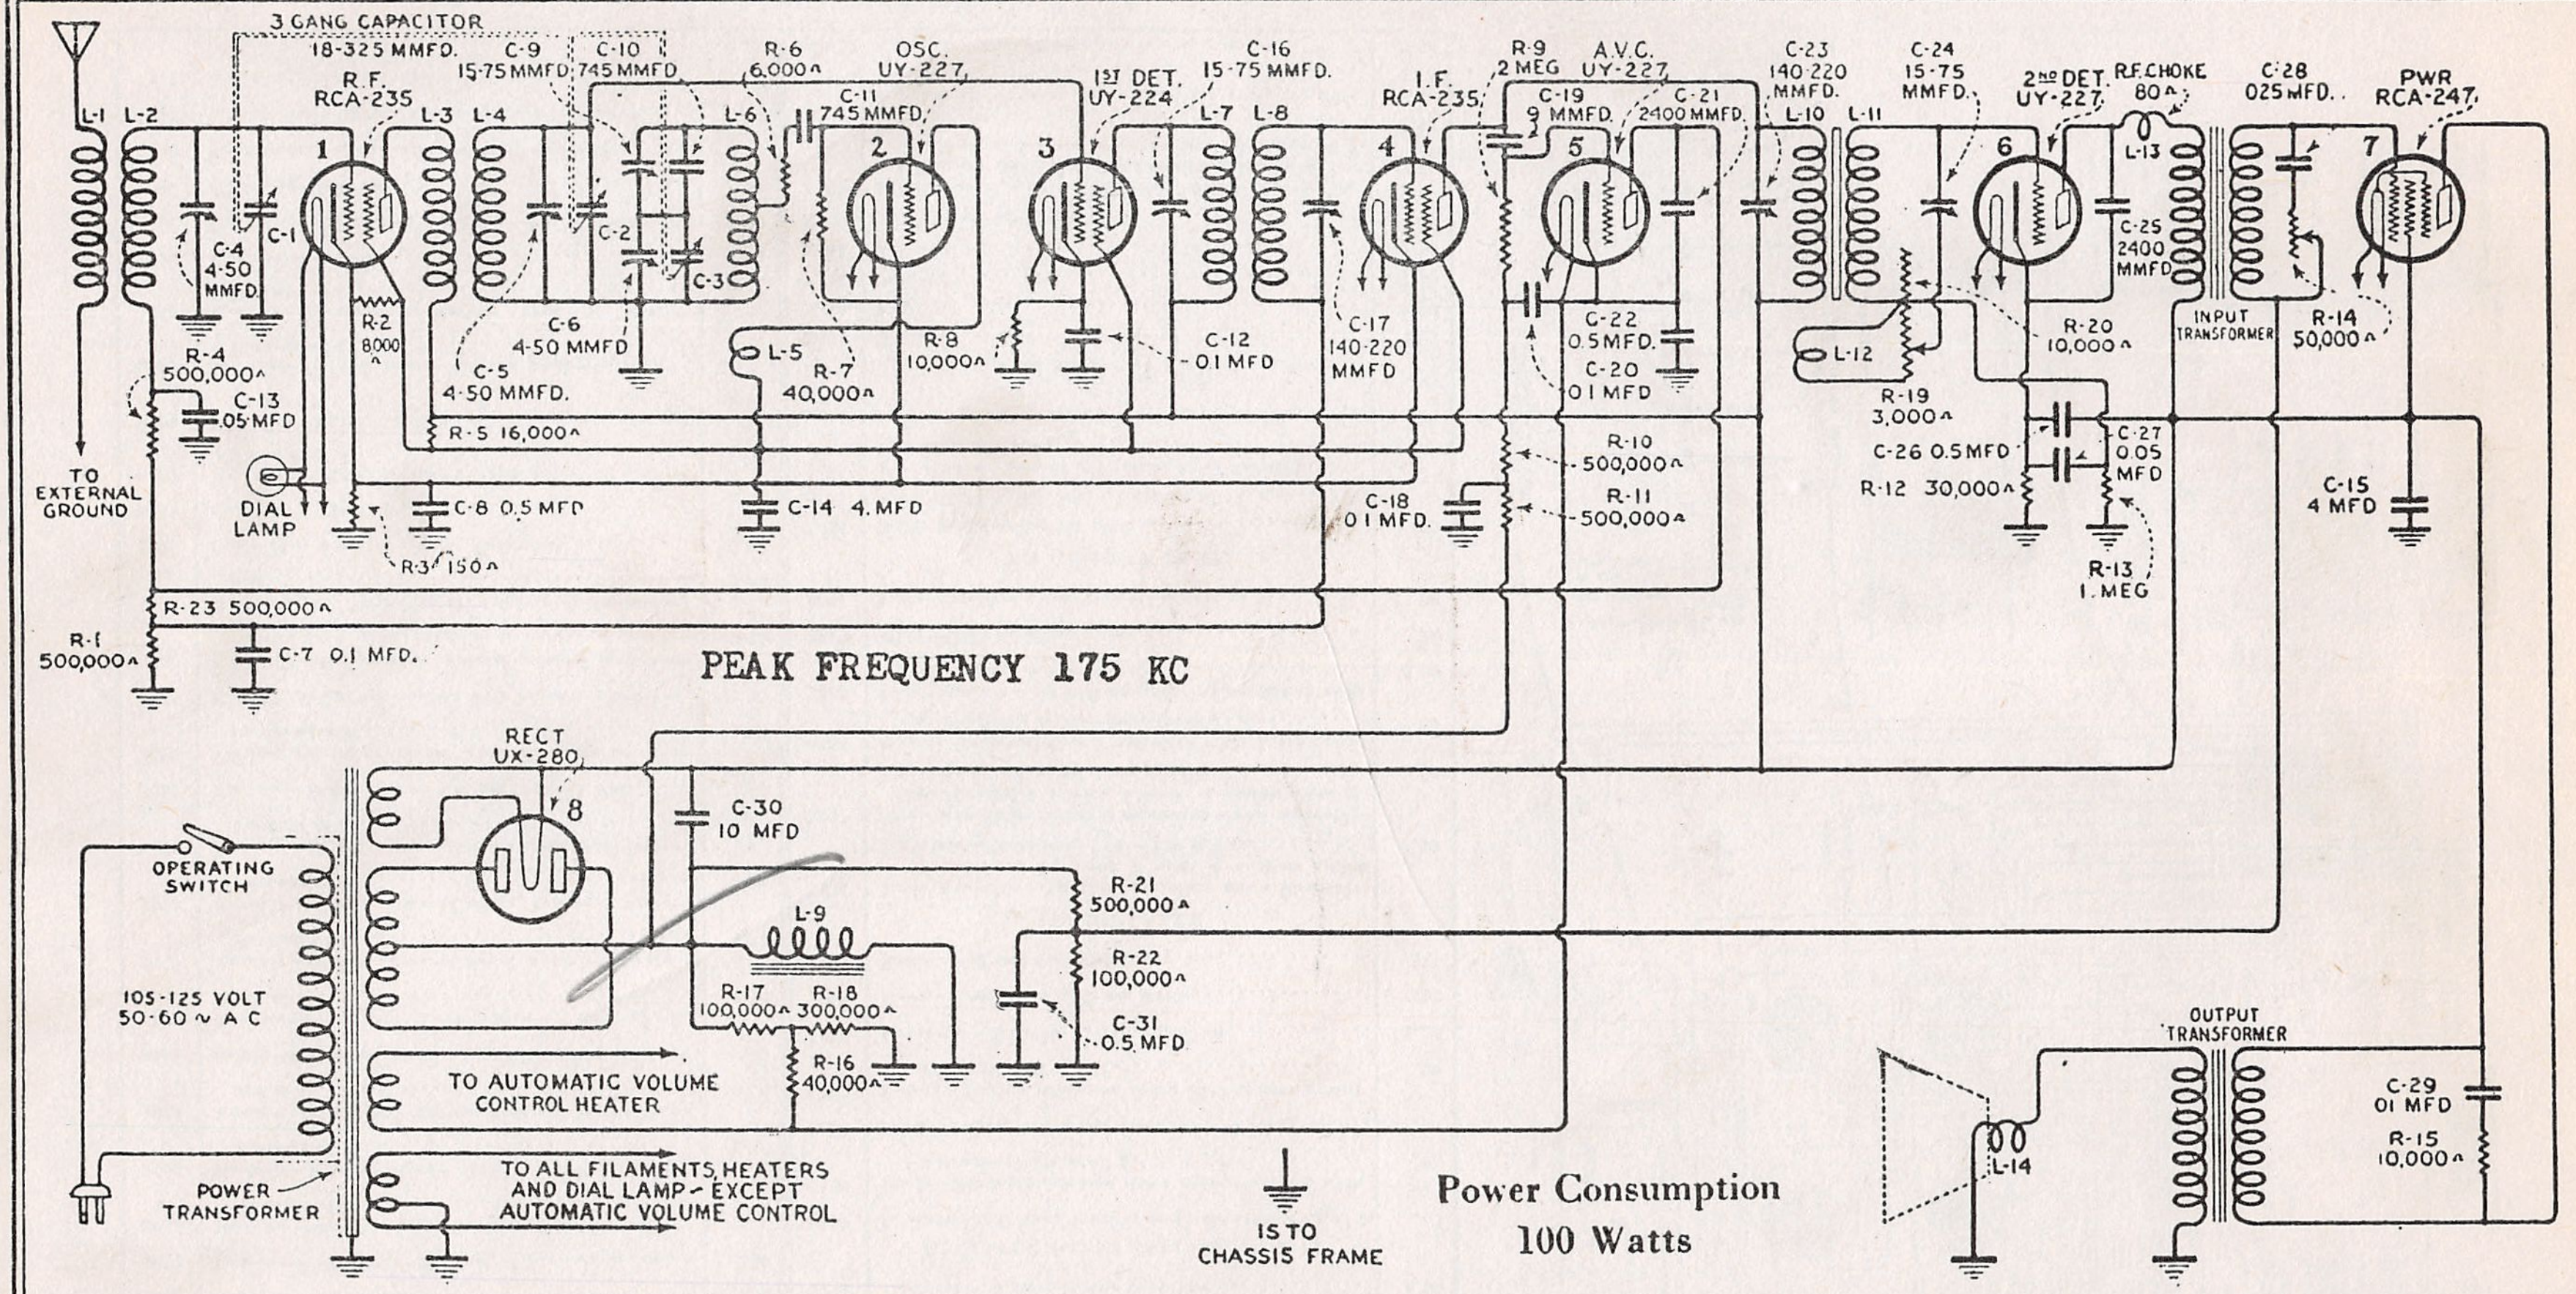
3 GANG CAPACITOR
18-325 MMFD.
C-9 15-75 MMFD.
C-10 745 MMFD.
R.F. RCA-235
L-1
L-2
L-3
L-4
C-4 4-50 MMFD.
C-1
R-2 8,000 ^
R-4 500,000 ^
C-13 .05 MFD
TO EXTERNAL GROUND
DIAL LAMP
R-3 150 ^
C-8 0.5 MFD
C-5 4-50 MMFD.
C-6 4-50 MMFD
C-2
C-3
R-5 16,000 ^
R-6 6,000 ^
OSC. UY-227
C-11 745 MMFD.
L-5
L-6
R-7 40,000 ^
R-8 10,000 ^
C-14 4. MFD
1st DET. UY-224
C-16 15-75 MMFD.
L-7
L-8
C-12 .01 MFD
I.F. RCA-235
C-17 140-220 MMFD
C-18 .01 MFD.
R-9 2 MEG
A.V.C. UY-227
C-19 9 MMFD.
C-21 2400 MMFD.
C-22 0.5 MFD.
C-20 .01 MFD
R-10 500,000 ^
R-11 500,000 ^
C-23 140-220 MMFD.
L-10
L-11
L-12
C-24 15-75 MMFD.
2nd DET UY-227
R.F. CHOKE 80 ^
L-13
C-25 2400 MMFD
R-19 3,000 ^
R-20 10,000 ^
C-26 0.5 MFD
C-27 0.05 MFD
R-12 30,000 ^
R-13 1. MEG
INPUT TRANSFORMER
C-28 .025 MFD.
PWR RCA-247
R-14 50,000 ^
C-15 4 MFD
R-23 500,000 ^
R-1 500,000 ^
C-7 0.1 MFD.
RECT UX-280
C-30 10 MFD
OPERATING SWITCH
105-125 VOLT 50-60 ~ A C
L-9
R-17 100,000 ^
R-18 300,000 ^
R-16 40,000 ^
R-21 500,000 ^
R-22 100,000 ^
C-31 0.5 MFD
TO AUTOMATIC VOLUME CONTROL HEATER
TO ALL FILAMENTS, HEATERS AND DIAL LAMP - EXCEPT AUTOMATIC VOLUME CONTROL
POWER TRANSFORMER
IS TO CHASSIS FRAME
OUTPUT TRANSFORMER
L-14
C-29 .01 MFD
R-15 10,000 ^
1
2
3
4
5
6
7
8

PEAK FREQUENCY 175 KC

Power Consumption
100 Watts

120 VOLT LINE **VOLUME CONTROL DOES NOT AFFECT VOLTAGES**

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1. R. F.	4.0	0.5	70	260	4.0	0.5	2.66
2. Osc.	4.0	0	—	65	6.0		2.66
3. 1st Det.	7.0	6.0	70	260	0.75	0.1	2.66
4. I. F.	4.0	4.0	70	260	4.0	0.5	2.66
5. 2nd Det.	28.0	10.0	—	250	1.0		2.66
6. A. V. C.	0	0	—	25	0		2.66
7. Power	—	10.0	290	280	35.0	--	2.66

RCA Victor Models R-8 and R-12 are eight tube Super-heterodyne radio receivers incorporating such features as Super-Control, Screen Grid Radiotrons, Automatic Volume Control, Pentode output tube and the inherent sensitivity, selectivity and tone quality of the RCA Victor Super-Heterodyne.

Model R-8 is a table type receiver and the R-12 is of the Console type. Except for the Dial Scale, both models use the same chassis, which is also identical with that of the R-10.

A reference to the Service Notes already published on the R-11 and R-7 will give details of any service information required on these receivers.

Models R-8, R-10, R-12, RE-19 (1932)

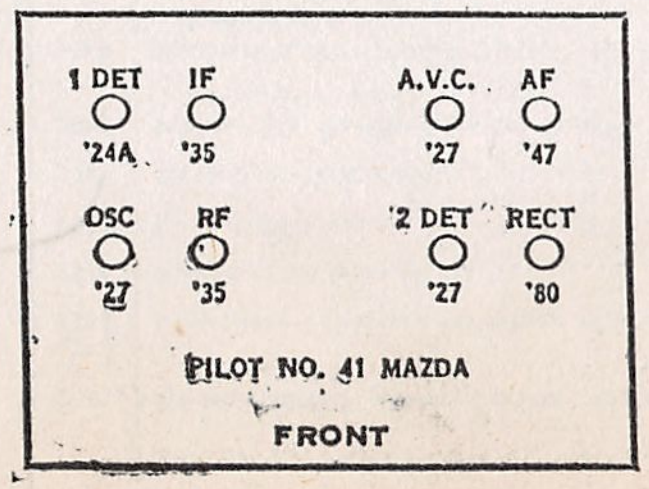
1 DET
'24A
IF
'35
A.V.C.
'27
AF
'47
OSC
'27
RF
'35
2 DET
'27
RECT
'80
PILOT NO. 41 MAZDA
FRONT

MODEL R-8, R-12 AC
Chassis
Parts List

R. C. A. - VICTOR CO., INC.

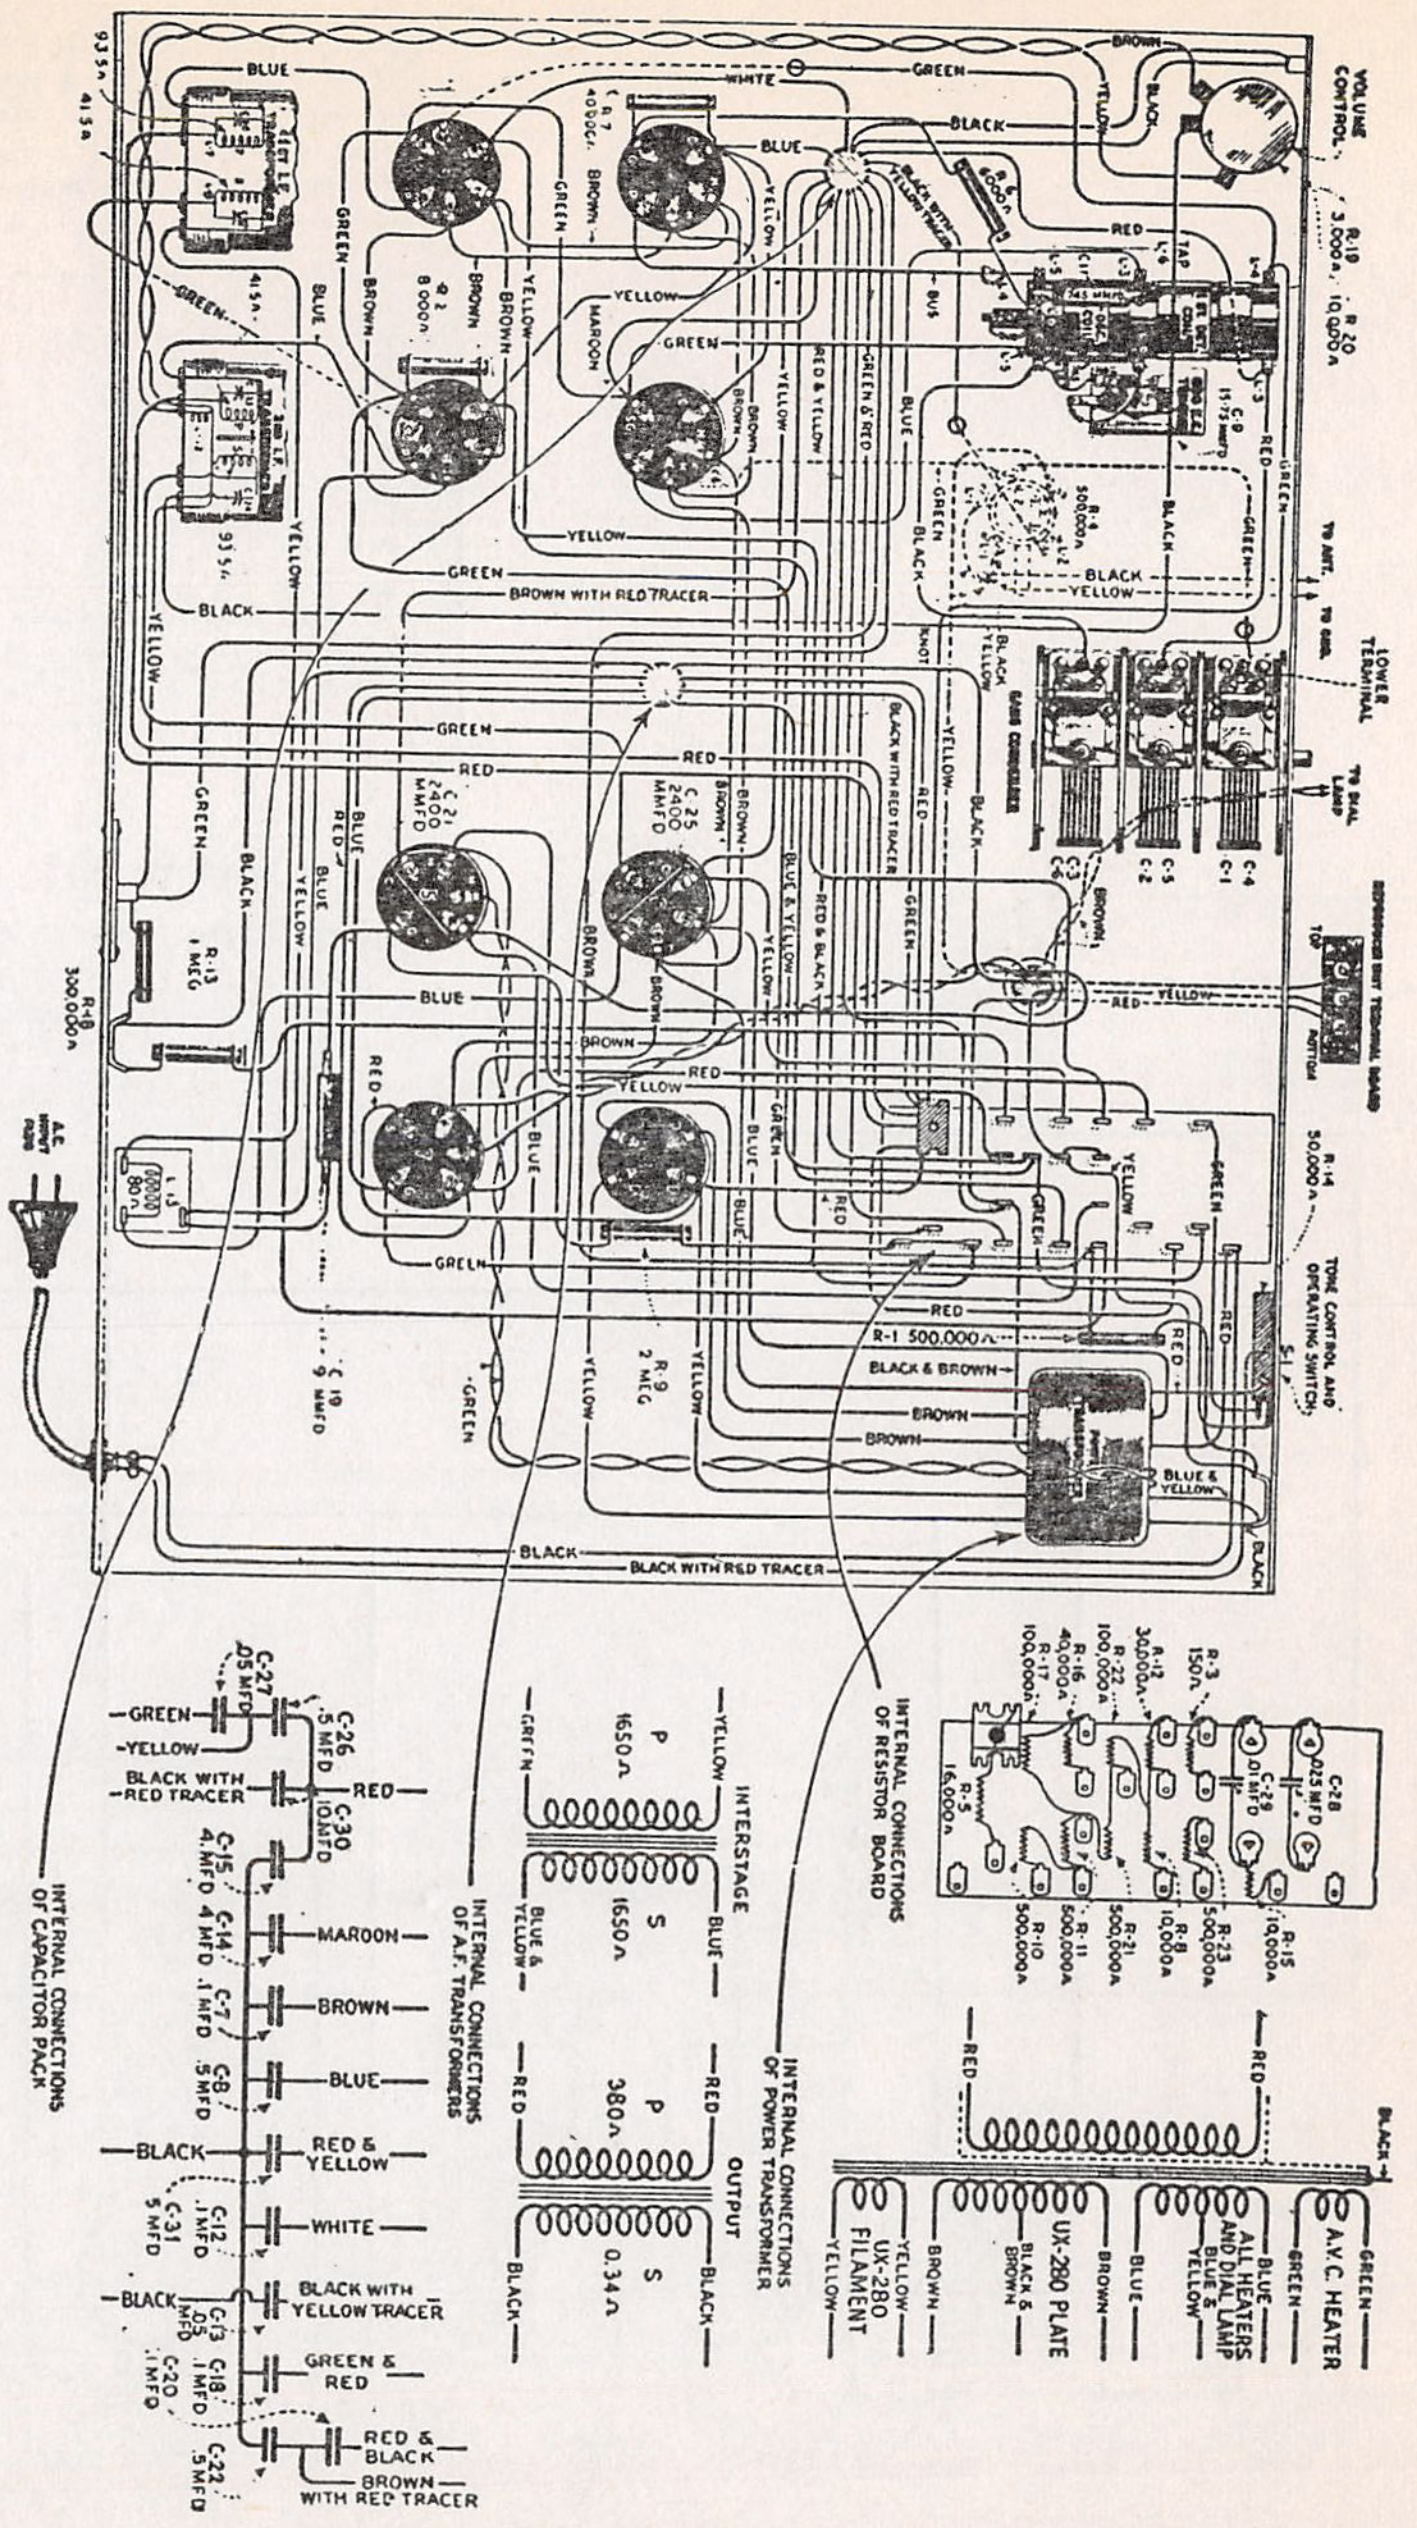
VOLUME CONTROL
R-19 3,000Ω
R-20 10,000Ω
TO ANT.
TO GND.
LOWER TERMINAL
TO DIAL LAMP
REPRODUCER UNIT TERMINAL BOARD
TOP
BOTTOM
R-14 50,000Ω
TONE CONTROL AND OPERATING SWITCH
S-1
GANG CONDENSER
POWER TRANSFORMER
R-1 500,000Ω
R-9 2 MEG
R-13 1 MEG
R-18 300,000Ω
R-2 8,000Ω
R-7 40,000Ω
C-25 2400 MMFD
C-21 2400 MMFD
C-19 9 MMFD
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
93.5Ω
41.5Ω
L-13 80Ω
A.C. INPUT PLUG
INTERNAL CONNECTIONS OF RESISTOR BOARD
C-28 .025 MFD
C-29 .01 MFD
R-3 150Ω
R-12 30,000Ω
R-22 100,000Ω
R-16 40,000Ω
R-17 100,000Ω
R-5 16,000Ω
R-15 10,000Ω
R-23 500,000Ω
R-8 10,000Ω
R-21 500,000Ω
R-11 500,000Ω
R-10 500,000Ω
A.V.C. HEATER
ALL HEATERS AND DIAL LAMP
UX-280 PLATE
UX-280 FILAMENT
INTERNAL CONNECTIONS OF POWER TRANSFORMER
INTERSTAGE
P 1650Ω
S 1650Ω
OUTPUT
P 380Ω
S 0.34Ω
INTERNAL CONNECTIONS OF A.F. TRANSFORMERS
C-26 .5 MFD
C-30 10 MFD
C-27 .05 MFD
C-15 4 MFD
C-14 4 MFD
C-7 .1 MFD
C-8 .5 MFD
C-12 .1 MFD
C-31 .5 MFD
C-13 .05 MFD
C-18 .1 MFD
C-20 .1 MFD
C-22 .5 MFD
INTERNAL CONNECTIONS OF CAPACITOR PACK

Stock No.	DESCRIPTION	List Price
	RECEIVER PARTS COMMON TO R-8 AND R-12	
2563	Resistor—6,000 ohms—Carbon type—1 watt—Package of 5	$3.00
2734	Capacitor—745 mmfd.—Package of 5	2.20
2746	Socket—Dial lamp socket	.50
2747	Cap—Grid contactor cap—Package of 5	.50
2749	Capacitor—2400 mmfd.	1.50
2882	Socket—UY Radiotron socket complete with insulation strip—7 used	.50
2963	Resistor—8,000 ohms—Carbon type—1 watt—Package of 5	2.50
2968	Socket—UX Radiotron socket complete with insulation strip—1 used	.50
2970	Resistor—500,000 ohms—Carbon type—1 watt—Package of 5	2.50
3003	Cushion—Sponge rubber cushion—Package of 4	.50
3024	Capacitor—9 mmfd.—Package of 2	.50
3045	Resistor—40,000 ohms—Carbon type—1 watt—Package of 5	2.50
3048	Resistor—500,000 ohms—Carbon type—½ watt—Package of 5	2.50
3049	Resistor—150 ohms—Carbon type—½ watt—Package of 5	2.50
3056	Shield—Radiotron shield—4 used—Package of 2	.50
3076	Resistor—1 megohm—Carbon type—½ watt—Package of 5	2.50
3077	Resistor—30,000 ohms—Carbon type—½ watt—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type—½ watt—Package of 5	2.50
3079	Resistor—40,000 ohms—Carbon type—½ watt—Package of 5	2.50
3081	Resistor—16,000 ohms—Carbon type—3 watt	.60
3092	Volume control—Volume control complete with mounting nut	1.50
3095	Coil—R. F. coil—Complete with mounting bracket	1.90
3137	Knob—Tuning control, volume control and tone control knob—Package of 5	3.25
3234	Tone control—Tone control complete with mounting nut	1.90
3235	Coil—First detector and oscillator coil	2.85
3251	Coil—R. F. choke coil	.90
6185	Resistor—100,000 ohms—Carbon type—½ watt—Package of 5	2.00
6186	Resistor—500,000 ohms—Carbon type—¼ watt—Package of 5	2.00
6187	Resistor—300,000 ohms—Carbon type—½ watt—Package of 5	2.00
6188	Resistor—2 megohm—Carbon type—½ watt—Package of 5	2.00
7054	Cord—Power cord	1.00
7062	Capacitor—Adjustable capacitor—15–70 mmfd.	1.00
7298	Capacitor—0.01 mfd.	.80
7340	Transformer—First intermediate transformer	3.00
7341	Transformer—Second intermediate transformer	3.00
7342	Capacitor—Comprising two 0.05 mfd., four 0.5 mfd., one 10.0 mfd., two 4.0 mfd. and four 0.1 mfd. capacitor in metal container	7.85
7343	Transformer—Audio transformer	$3.85
7344	Transformer—Power transformer	8.00
7348	Board—Resistor board complete less resistors and capacitors	2.30
7362	Capacitor—0.025 mfd.	1.00
8770	Transformer—Power transformer—105-125 volts, 25-40 cycles	12.00
8771	Transformer—Power transformer—220 volts, 60 cycles	9.00
8837	Support—Receiver chassis metal mounting bracket—Package of 4	.70
	RECEIVER PARTS SPECIAL TO R-8	
2999	Shaft—Tuning condenser drive shaft complete	.50
3029	Bracket—Dial lamp bracket and indicator	.50
3097	Scale—Dial drum and scale with set screws—Package of 2	.50
7241	Capacitor—3 gang tuning capacitor	8.00
	RECEIVER PARTS SPECIAL TO R-12	
6189	Bracket—Dial lamp bracket and indicator—Pkg. of 2	.65
6190	Shaft—Tuning condenser drive shaft complete with 3 washers—Package of 5	.85
6191	Cord—Tuning condenser drive cord—Package of 5	.55
6192	Spring—Tuning condenser drive cord tension spring—Package of 10	.50
7438	Capacitor—Variable tuning capacitor	5.20
7439	Drum—Dial drum with set screw	.50
7440	Scale—Dial and dial scale	.75
	LOUDSPEAKER	
6174	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 8 nuts, 4 washers and 4 eyelets—Package of 1 set—For R-8	.50
3237	Screw assembly—Speaker mounting screw assembly—comprising 4 screws, 8 nuts, 4 washers and 4 eyelets—Package of 1 set—For R-12	.50
6184	Board—Terminal board complete with 3 terminals and mounting rivets—Package of 5	.50
7345	Coil—Speaker field coil assembly—Comprising coil, cone housing and magnet	5.00
8559	Ring—Cone retaining ring	.80
8601	Cone—Speaker paper cone—Package of 5	15.00
	R-8 CABINET PARTS	
X-32	Baffle board and grille cloth	.90
6113	Foot—Cabinet felt foot—Package of 15	.50
7435	Escutcheon—Tuning dial escutcheon complete with mounting screws	.90
9402	Cabinet—Cabinet complete less equipment	16.00
	R-12 CABINET PARTS	
X-44	Top	4.65
X-45	Leg	2.00
X-46	Foot	1.10
X-47	Stretcher	4.50
X-48	Baffle board and grille cloth	.95
X-49	Mouldings—Control panel mouldings—Comprising 1 bottom moulding, 4 vertical mouldings, 1 top moulding and 2 center ornaments—Package of 1 set	3.95
7441	Escutcheon—Tuning dial escutcheon complete with mounting screws	1.05
9405	Cabinet—Cabinet complete less equipment	47.50

MODEL R-8, R-12 AC
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes removed from sockets and AC plug removed from power supply
Field coil disconnected

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis to			
RF Control Grid	1,000,005	ohms	TC- rf Cg-Y BC- rf wdg-Y (.05 mfd) BC- if Tr-Y (.1 mfd) BC-AVC P-AVC K
RF Cathode	150	ohms	BC- rf K-Y (.5 mfd)
RF Screen	8,150	ohms	FC- rf Sg-Y (4. mfd)
RF Plate	24,208	ohms	FC-80F-80A (10 mfd) FC-47 Sg-Y (4.mfd) BC-2D Tr-2DK (.5 mfd)
1 Detector Control Grid	5	ohms	TC-1D Cg-Y
1 Detector Cathode	10,000	ohms	BC-1DK-Y (.1 mfd)
1 Detector Screen Grid	8,150	ohms	See RF Screen
1 Detector Plate	24,301.5	ohms	See RF Plate
1 Det Plate to '80 Fil	93.5	ohms	TC-IF Tr Primary
Oscillator Control Grid	40,150	ohms	Oscillator Grid Condenser
Osc Control Grid to Osc Cathode	40,000	ohms	
Oscillator Cathode	150	ohms	See RF Cathode
Oscillator Plate	24,151	ohms	See RF Plate
Osc Plate to RF Screen	1	ohm	
IF Control Grid	500,041.5	ohms*	*Includes IF Transformer secondary BC- IF Tr-Y (.1 mfd)
IF Cathode	150	ohms	See RF Cathode
IF Screen Grid	8,150	ohms	See RF Screen
IF Plate to 80 Fil	41.5	ohms	TC-IF Tr. Primary
AVC Control Grid	3,240,000	ohms	See RF Control Grid See RF Plate BLC- if P-AVC Cg(9 mmfd)
AVC Control Grid-'80 Anode	3,000,175	ohms	BC-AVC Cg res-AVC H-K
AVC Cathode	250,000	ohms	BC-AVC K-AVC H (.1 mfd)
AVC Plate	1,000,000	ohms	See RF Control Grid BC AVC P-AVC K(.0024 mfd)
2 Detector Control Grid	1,000,093.5	ohms*	*Includes IF Tr Sec
2 Det Cg to Volume Control	843-93.5-10,093.5	ohms	Depends upon setting of volume control BC-2 DK (.05 mfd)
2 Detector Cathode	30,000	ohms	
2 Detector Plate to 80 Fil	1,730	ohms	
2 Det Plate	241,650	ohms	See RF Plate BC- 2 DP-2 DK FC-'47 Sg-Y (4 mfd)
'47 Control Grid	91,650	ohms	See RF Plate Tone Control Condenser See RF Control Grid
'47 Screen Grid to 80 Fil	0	ohm	
'47 Plate to '80 Fil	380	ohms	Harmonic condenser
'80 Filament	264,150	ohms	FC-80F-80P (10 mfd) See RF Control Grid See RF Plate
'80 Plate to '80 Plate	350	ohms	
Output Transformer Secondary only	.34	ohm	
Oscillator Coil	6.	ohms	
Oscillator Grid resistor	6,000	ohms	
Field Coil only	1,330	ohms	

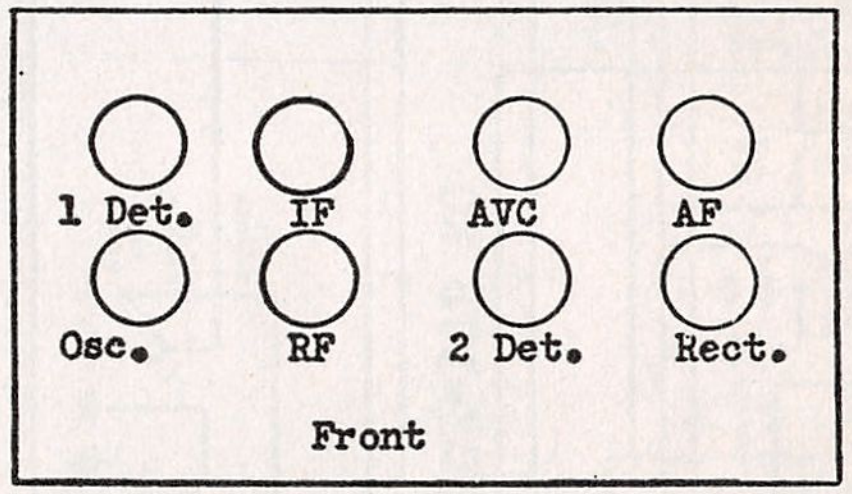

120 VOLT LINE

VOLUME CONTROL DOES NOT AFFECT VOLTAGES

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1. R F	4.0	0.5	70	260	4.0	0.5	2.66
2. Osc	1.0	0	—	65	6.0		2.66
3. 1st Det	7.0	6.0	70	260	0.75	0.1	2.66
4. I. F	4.0	1.0	70	260	1.0	0.5	2.66
5. 2nd Det	28.0	10.0	—	250	1.0		2.66
6. A. V. C.	0	0		25	0		2.66
7 Power		10.0	290	280	35.0		2.66

MODEL R-10 AC
Schematic
Voltage - Chassis

R. C. A. VICTOR CO., INC.

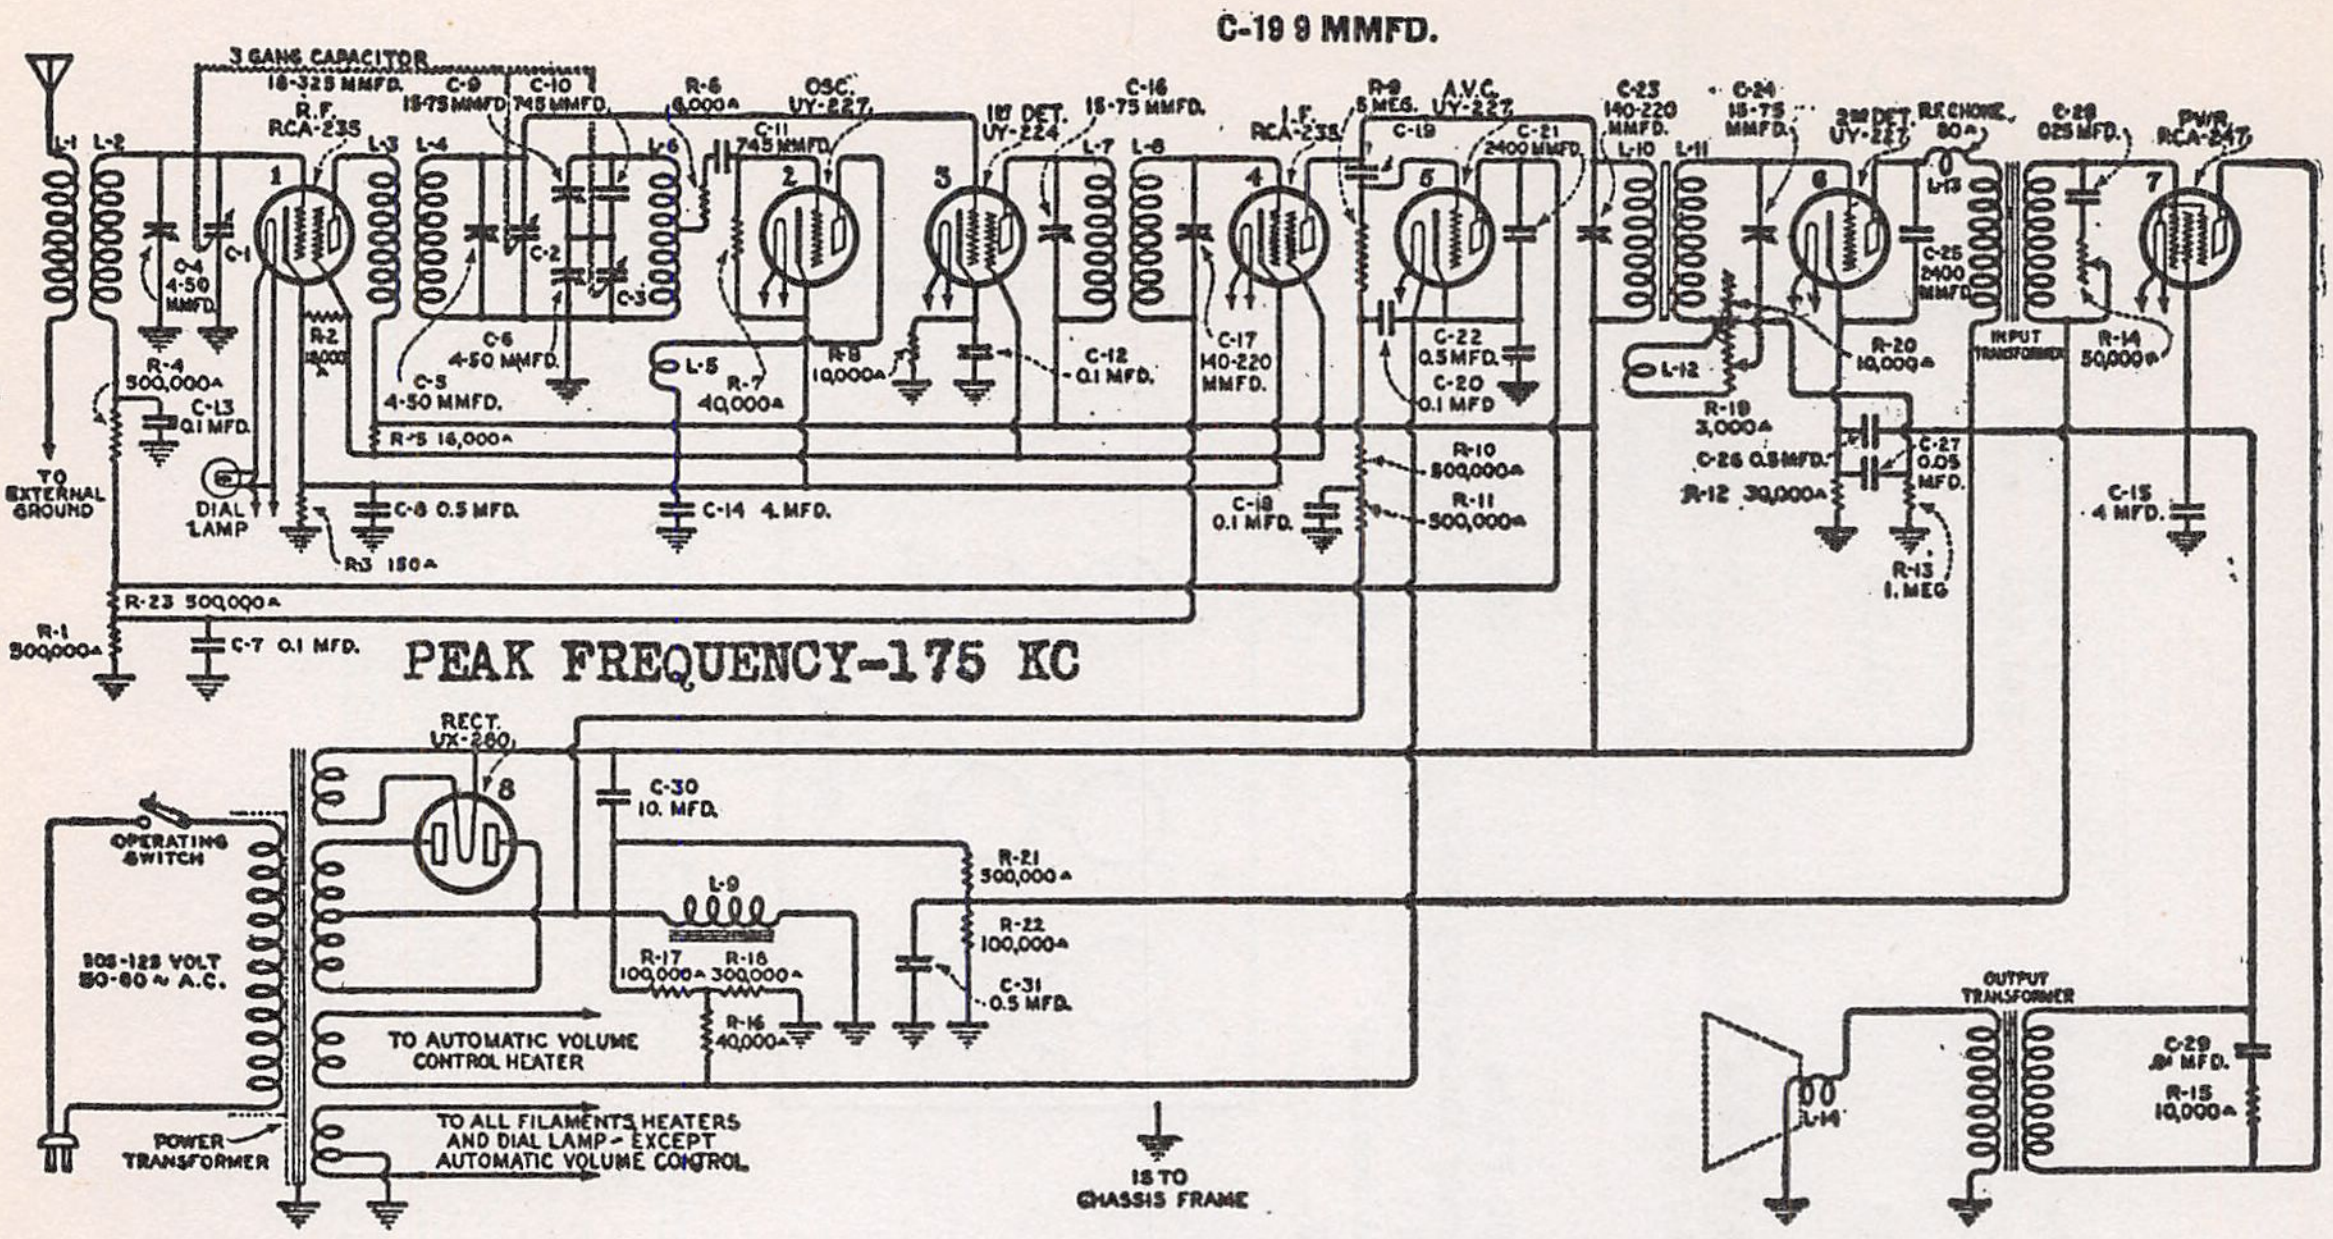
C-19 9 MMFD.
3 GANG CAPACITOR 16-325 MMFD.
R.F. RCA-235
C-9 15-75 MMFD.
C-10 745 MMFD.
R-6 6,000Ω
OSC. UY-227
C-11 745 MMFD.
1st DET. UY-224
C-16 15-75 MMFD.
I.F. RCA-235
R-9 5 MEG.
A.V.C. UY-227
C-19
C-21 2400 MMFD.
C-23 140-220 MMFD.
C-24 15-75 MMFD.
2nd DET. UY-227
R.F. CHOKE 80Ω
C-28 .025 MFD.
PWR. RCA-247
C-13 0.5 MFD.
C-4 4-50 MMFD.
R-2 18,000Ω
R-4 500,000Ω
C-13 0.1 MFD.
C-6 4-50 MMFD.
C-5 4-50 MMFD.
R-5 16,000Ω
L-5
R-7 40,000Ω
R-8 10,000Ω
C-12 .01 MFD.
C-17 140-220 MMFD.
C-22 0.5 MFD.
C-20 0.1 MFD.
R-10 500,000Ω
R-11 500,000Ω
C-18 0.1 MFD.
L-12
R-19 3,000Ω
C-26 0.5 MFD.
R-12 30,000Ω
C-27 0.05 MFD.
R-13 1 MEG.
R-20 10,000Ω
C-25 2400 MMFD.
INPUT TRANSFORMER
R-14 50,000Ω
C-15 4 MFD.
TO EXTERNAL GROUND
DIAL LAMP
C-8 0.5 MFD.
C-14 4 MFD.
R-3 150Ω
R-23 500,000Ω
R-1 500,000Ω
C-7 0.1 MFD.
PEAK FREQUENCY-175 KC
RECT. UX-280
C-30 10. MFD.
OPERATING SWITCH
105-125 VOLT 50-60 ~ A.C.
L-9
R-21 500,000Ω
R-22 100,000Ω
R-17 100,000Ω
R-18 300,000Ω
R-16 40,000Ω
C-31 0.5 MFD.
TO AUTOMATIC VOLUME CONTROL HEATER
TO ALL FILAMENTS HEATERS AND DIAL LAMP EXCEPT AUTOMATIC VOLUME CONTROL
POWER TRANSFORMER
IS TO CHASSIS FRAME
OUTPUT TRANSFORMER
C-29 .01 MFD.
R-15 10,000Ω
L-14

110 VOLT A. C. LINE

(Volume Control Setting Does Not Affect Voltages)

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1	2	*0.1	75	210	5.0	0.5	2.2
2	8	0	—	60	5.0	—	2.2
3	7	7.0	70	205	0.5	0.1	2.2
4	2	*0.1	75	210	5.0	0.5	2.2
5	0	0	—	30	0	—	2.2
6	20	*8.0	—	185	0.5	—	2.2
7	—	10	210	210	25	—	2.2

*Not true reading due to resistance in circuit.

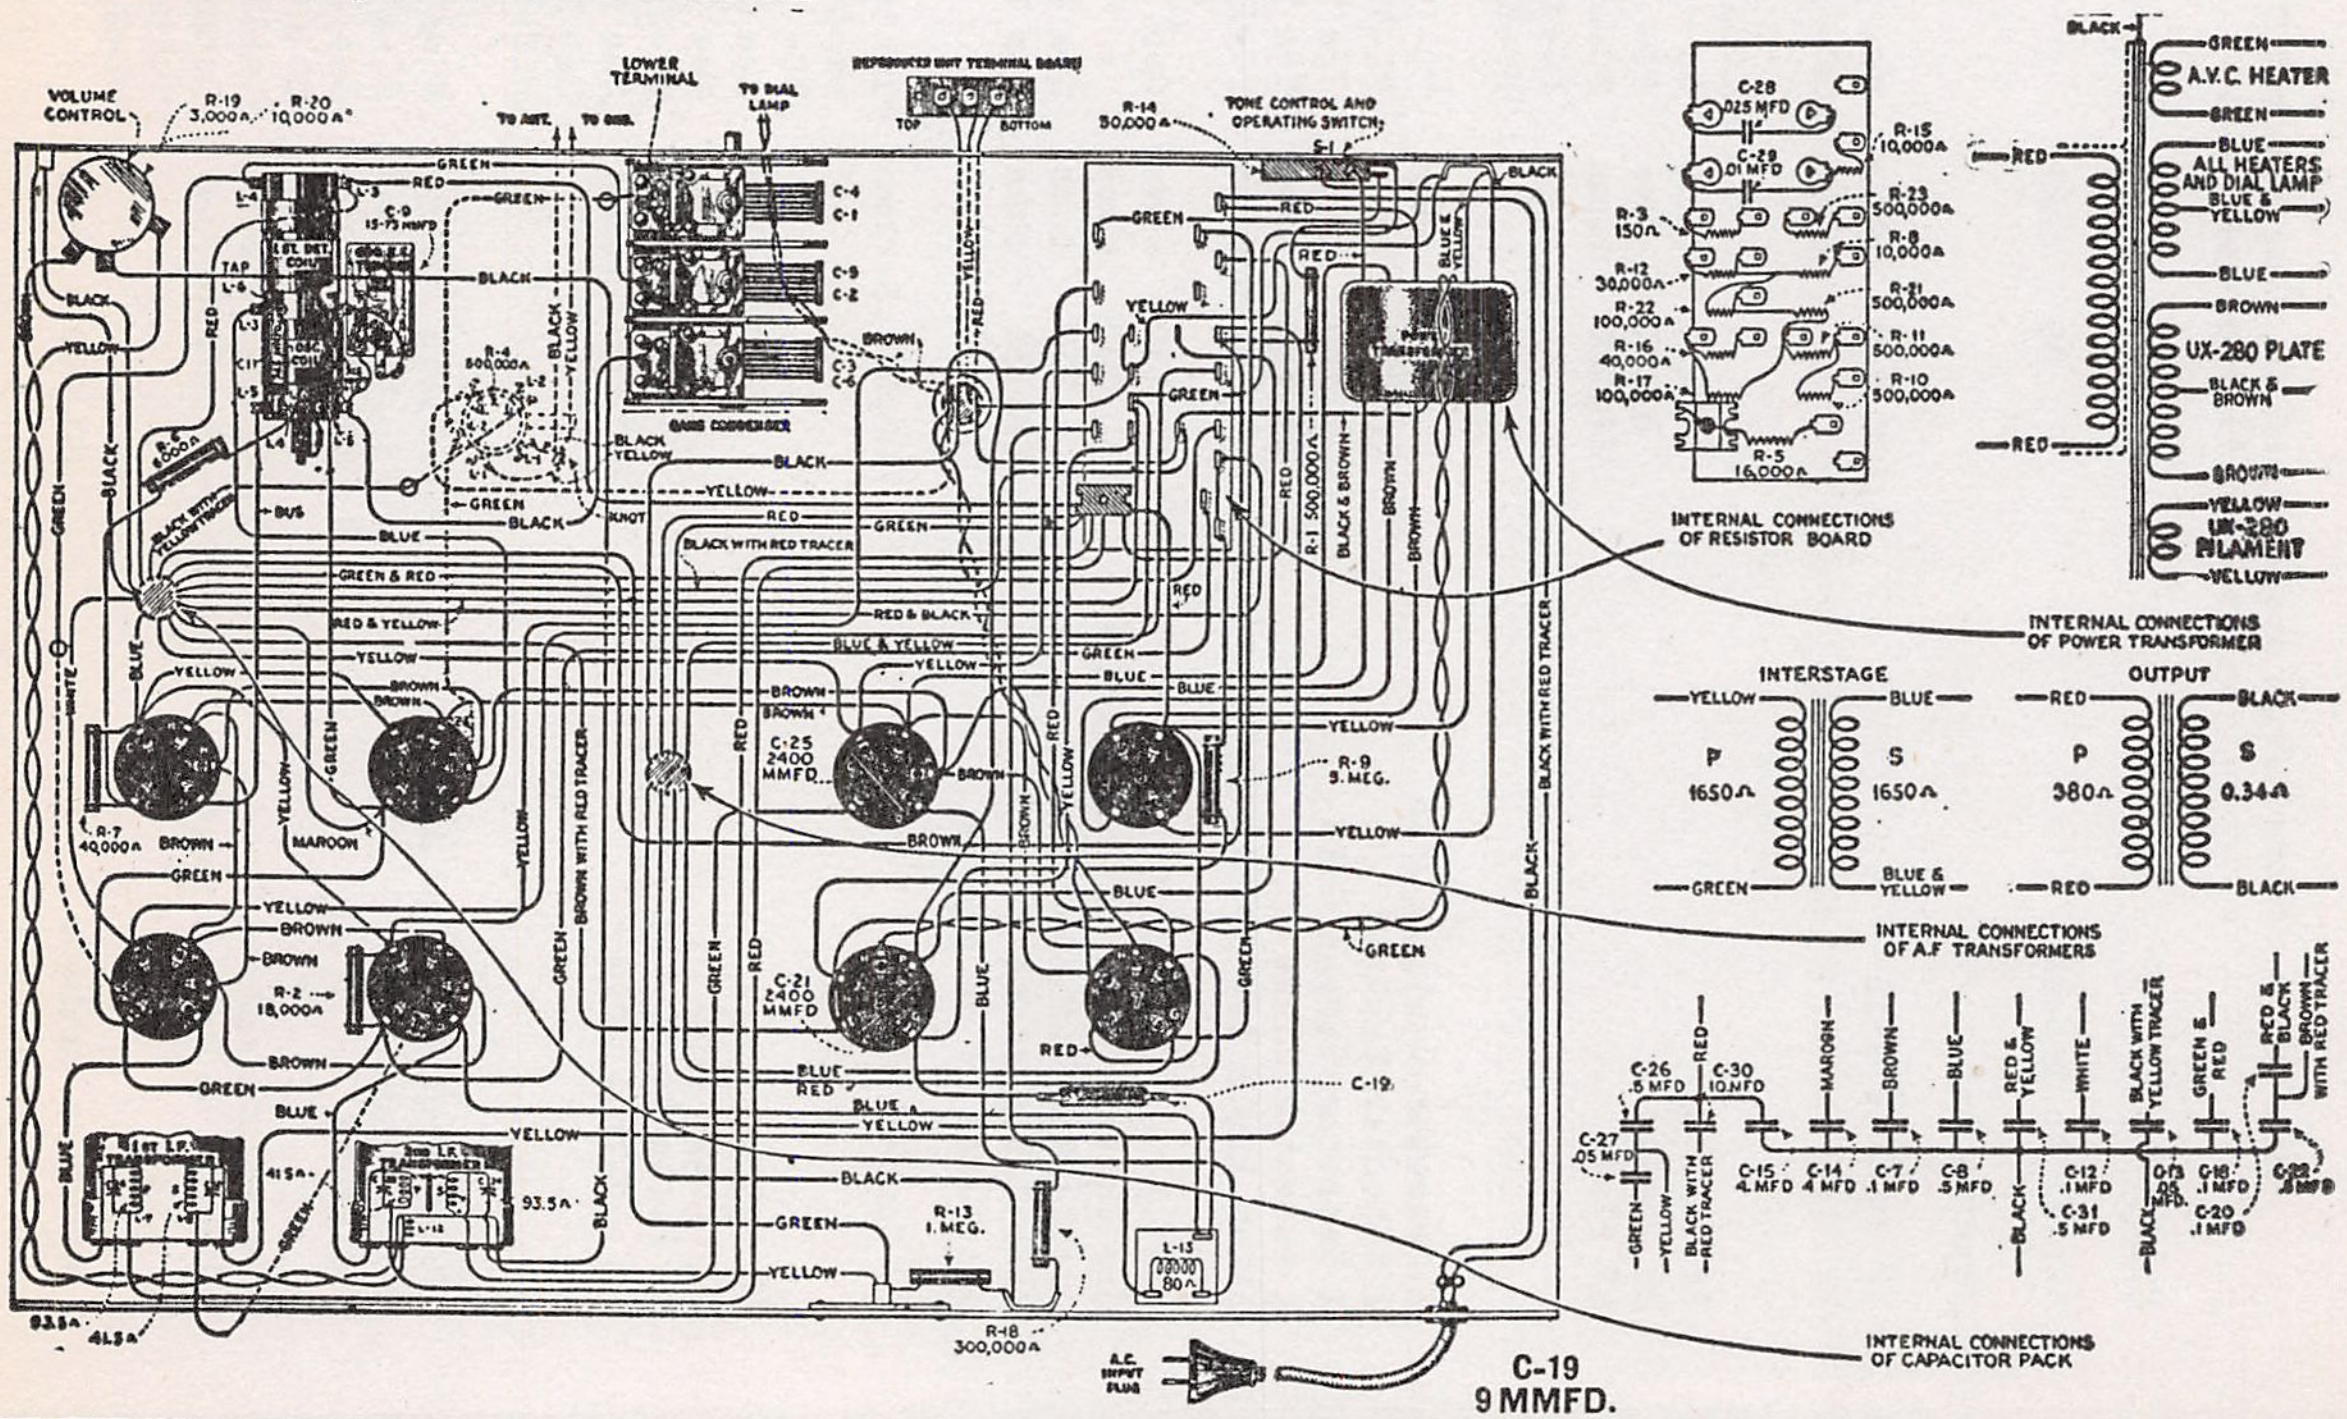
VOLUME CONTROL
R-19 3,000Ω
R-20 10,000Ω
LOWER TERMINAL
TO DIAL LAMP
REPRODUCER UNIT TERMINAL BOARD
TOP
BOTTOM
R-14 50,000Ω
TONE CONTROL AND OPERATING SWITCH
TO ANT.
TO GND.
GANG CONDENSER
R-1 500,000Ω
R-7 40,000Ω
R-2 18,000Ω
C-25 2400 MMFD.
R-9 5 MEG.
C-21 2400 MMFD.
C-19
R-13 1 MEG.
R-18 300,000Ω
L-13 80Ω
A.C. INPUT PLUG
C-19 9 MMFD.
C-28 .025 MFD
C-29 .01 MFD
R-3 150Ω
R-12 30,000Ω
R-22 100,000Ω
R-16 40,000Ω
R-17 100,000Ω
R-15 10,000Ω
R-23 500,000Ω
R-8 10,000Ω
R-21 500,000Ω
R-11 500,000Ω
R-10 500,000Ω
R-5 16,000Ω
INTERNAL CONNECTIONS OF RESISTOR BOARD
A.V.C. HEATER
ALL HEATERS AND DIAL LAMP
UX-280 PLATE
UX-280 FILAMENT
INTERNAL CONNECTIONS OF POWER TRANSFORMER
INTERSTAGE
P 1650Ω
S 1650Ω
OUTPUT
P 380Ω
S 0.34Ω
INTERNAL CONNECTIONS OF A.F. TRANSFORMERS
C-26 .5 MFD
C-30 10 MFD
C-27 .05 MFD
C-15 4 MFD
C-14 4 MFD
C-7 .1 MFD
C-8 .5 MFD
C-12 .1 MFD
C-31 .5 MFD
C-13 .05
C-18 .1 MFD
C-20 .1 MFD
C-22 .5 MFD
INTERNAL CONNECTIONS OF CAPACITOR PACK

MODEL R-10 AC
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes out of sockets and AC plug removed from power supply lines
Speaker field disconnected

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis to			
RF Control Grid	1,500,005	ohms	TC-Y BLC in tuned circuit BC-Y BC-AVC P-AVC K
RF Cathode	150	ohms	BC-Y (.5 mfd)
RF Screen Grid	18,150	ohms	BC- rf K-Y (.5 mfd)
RF Plate	34,208	ohms	BC-2 D P-Y (0024 mfd) BC- AFT. Pr - 2 D K (.5 mf.) FC-'47 Sg-Y (4. mfd)
RF Plate to '80 Fil	58	ohms	
1 Detector Control Grid	5	ohms	TC-Y
1 Detector Cathode	10,000	ohms	BC- 1 D K-Y (.1 mfd)
1 Detector Screen Grid	18,150	ohms	See RF Screen Grid
1 Detector Plate	34,301.5	ohms	See RF Plate
1 Detector Plate - '80 Fil	93.5	ohms	TC- IF Tr Pri
Oscillator Control Grid	40,150	ohms	Osc Grid Condenser
Oscillator Cathode	150	ohms	See RF Cathode
Osc Screen Grid	18,150	ohms	See RF Screen
Osc Plate	18,151	ohms	See RF Screen
Osc Plate - RF Screen	1	ohm	
IF Control Grid	500,041.5	ohms	BC-Y (.5 mfd) TC-IF Tr Sec
IF Cathode	150	ohms	See RF Cathode
IF Screen Grid	18,150	ohms	See RF Screen Grid
IF Plate	34,191.5	ohms	See RF Plate
IF Plate to '80 Fil	41.5	ohms	
AVC Control Grid	6,240,000	ohms	BLC-AVC Cg-if P BC-5 meg res. - AVC H FC-'80 F - '80 P wdg(10mf.) BC- '47 Cgwdg - Y
AVC Cathode	250,000	ohms	BC-AVC K-Y BC-AVC K- AVC P
2 Detector Control Grid	1,000,093	ohms	BC- 2 D K (.5 mfd)
2 Det Cg to Vol Control	93.5-10,093	ohms	
2 Detector Cathode	30,000	ohms	BC- 2DK-2DP
2 Detector Plate	35,880	ohms	BC- 2DP-2DK
2 Detector Plate to '80 Fil	1.730	ohms	
'47 Control Grid	91,650	ohms	BC-Y Tone Control Condenser
'47 Screen to '80 Fil	0	ohms	
'47 Screen to chassis	34,150	ohms	See IF Plate
'47 Plate	34,530	ohms	FC-'47 Sg-Y (4.mfd)

From Chassis To	Correct		Incorrect
'47 Plate -'47 Screen	380	ohms	Harmonic circuit
'80 Fil	34,150	ohms	
'80 Fil to '80 Anode	274,150	ohms	
'80 Anode to '80 Anode	350	ohms	
Across Field Coil only	1,330	ohms	
Across Output Transformer Secondary only	0.34	ohms	

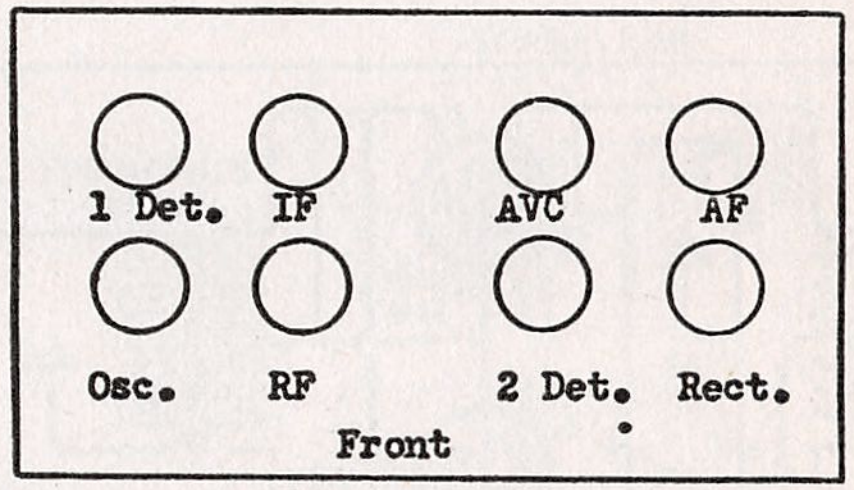

110 VOLT A. C. LINE
(Volume Control Setting Does Not Affect Voltages)

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M A.	Screen Current M. A	Heater or Filament Volts, A. C
1	2	*0 1	75	210	5 0	0 5	2 2
2	8	0	—	60	5 0	—	2 2
3	7	7.0	70	205	0 5	0 1	2 2
4	2	*0.1	75	210	5 0	0 5	2 2
5	0	0	—	30	0	—	2 2
6	20	*8 0	—	185	0 5	—	2 2
7	—	10	210	210	25	—	2 2

*Not true reading due to resistance in circuit.

MODEL R-11 AC
Schematic
Early
Voltage

R. C. A. VICTOR CO., INC.

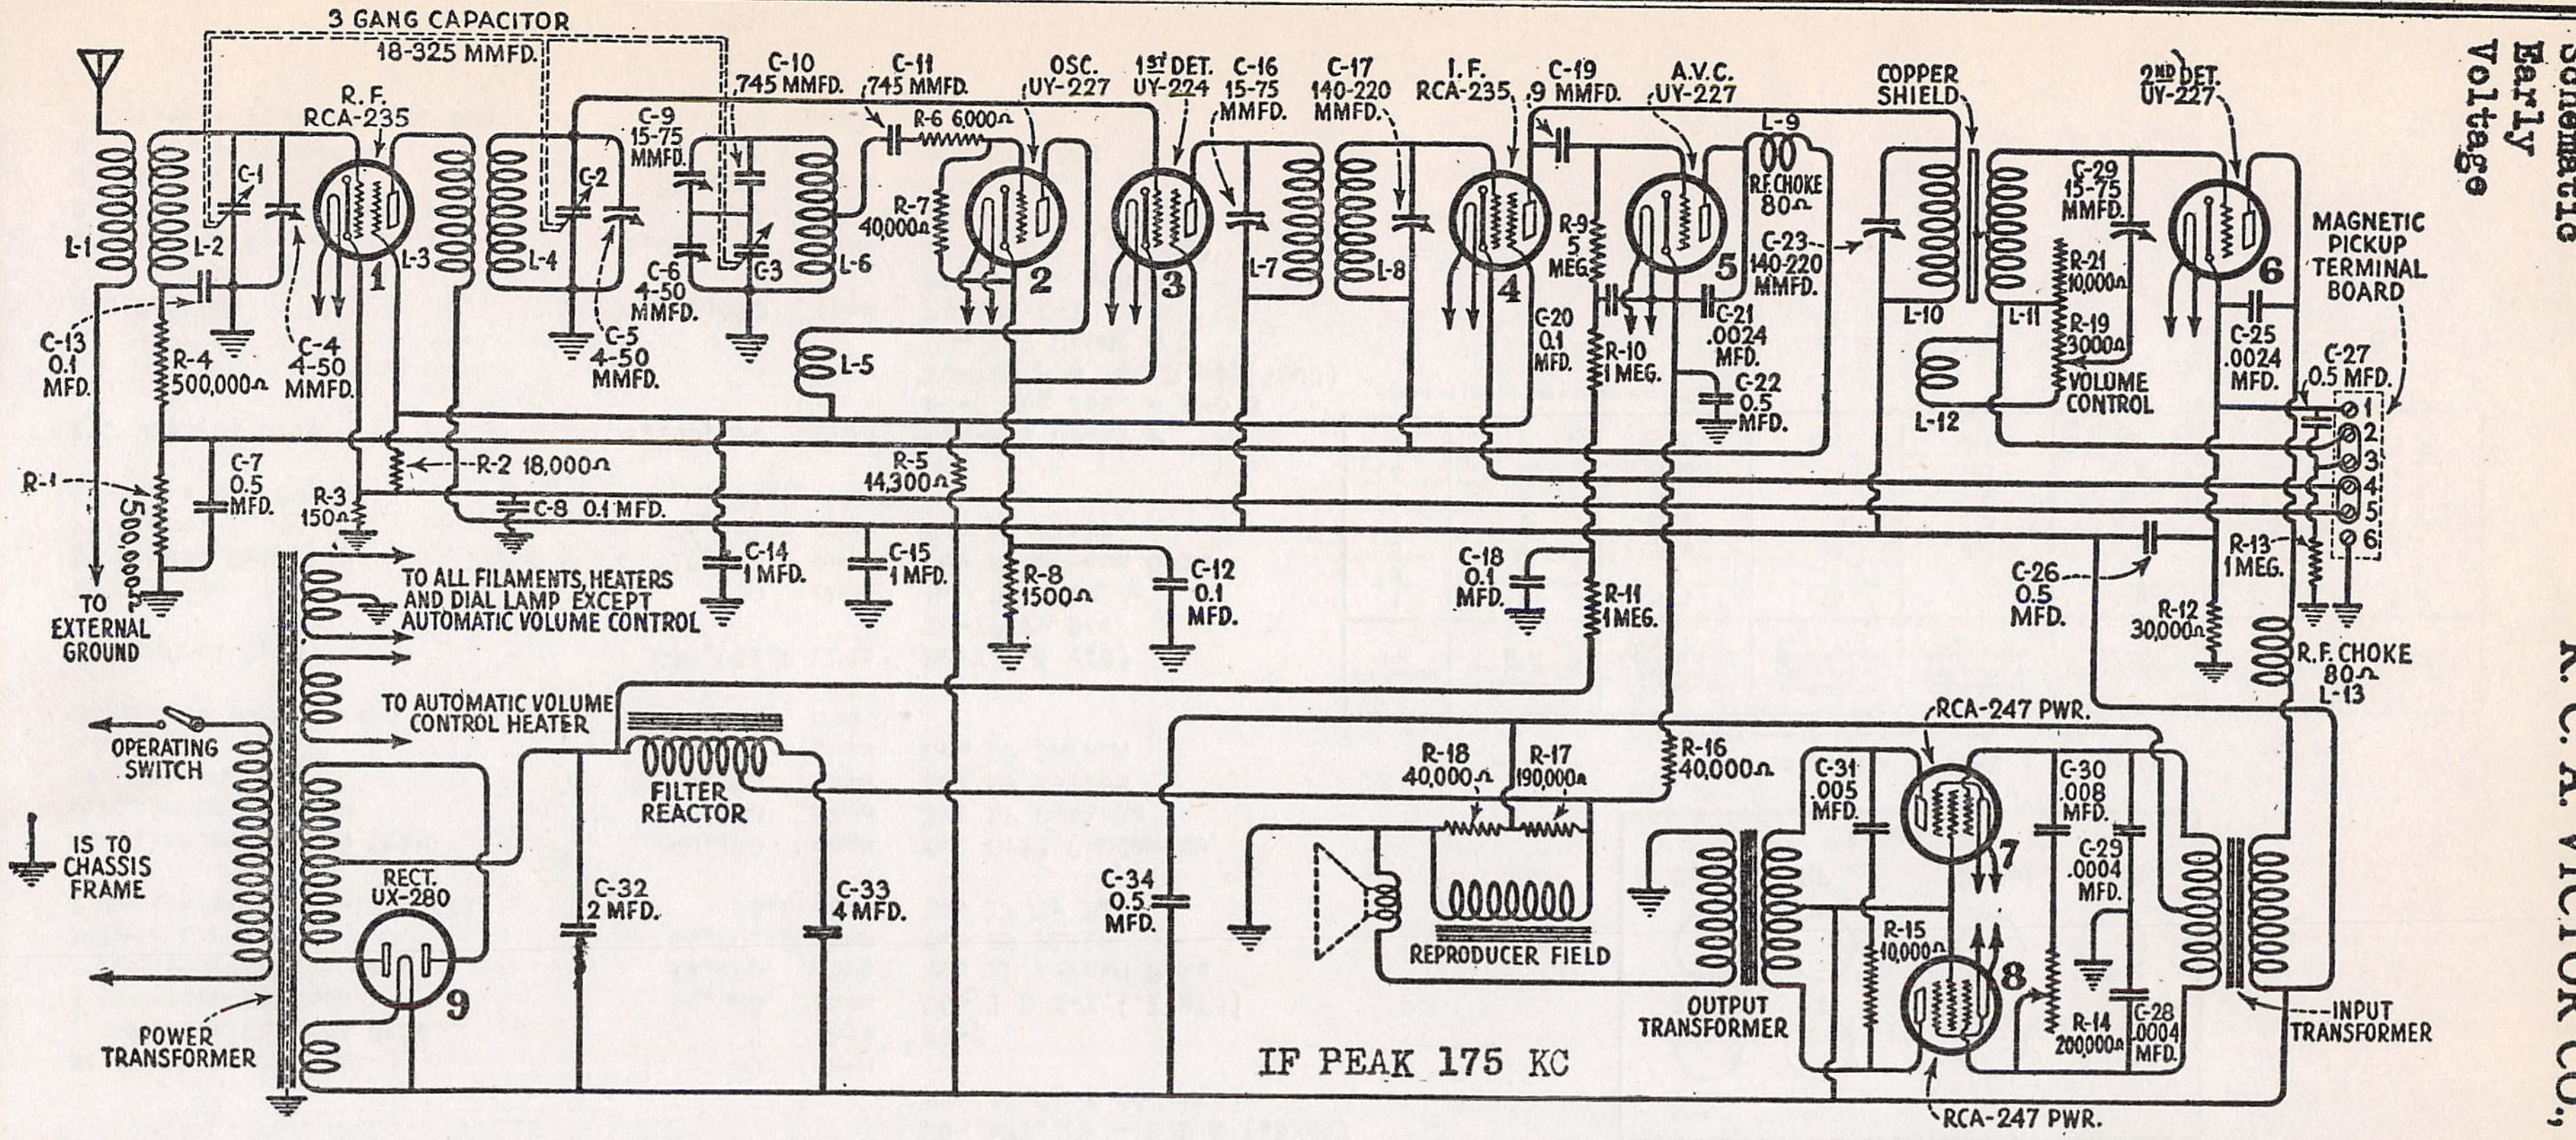
3 GANG CAPACITOR 18-325 MMFD.
R. F. RCA-235
C-10 745 MMFD.
C-11 745 MMFD.
OSC. UY-227
1st DET. UY-224
C-16 15-75 MMFD.
C-17 140-220 MMFD.
I. F. RCA-235
C-19 .9 MMFD.
A.V.C. UY-227
COPPER SHIELD
2nd DET. UY-227
MAGNETIC PICKUP TERMINAL BOARD
L-1
L-2
C-1
L-3
C-13 0.1 MFD.
R-4 500,000Ω
C-4 4-50 MMFD.
R-1
500,000Ω
C-7 0.5 MFD.
R-3 150Ω
R-2 18,000Ω
C-8 0.1 MFD.
TO EXTERNAL GROUND
L-4
C-2
C-9 15-75 MMFD.
C-6 4-50 MMFD.
C-5 4-50 MMFD.
C-3
L-6
R-6 6000Ω
R-7 40,000Ω
L-5
R-5 14,300Ω
C-14 1 MFD.
C-15 1 MFD.
R-8 1500Ω
C-12 0.1 MFD.
L-7
L-8
R-9 5 MEG.
C-20 0.1 MFD.
R-10 1 MEG.
L-9
R.F. CHOKE 80Ω
C-23 140-220 MMFD.
C-21 .0024 MFD.
C-22 0.5 MFD.
C-18 0.1 MFD.
R-11 1 MEG.
L-10
L-11
L-12
C-29 15-75 MMFD.
R-21 10,000Ω
R-19 3000Ω
VOLUME CONTROL
C-25 .0024 MFD.
C-27 0.5 MFD.
1
2
3
4
5
6
C-26 0.5 MFD.
R-13 1 MEG.
R-12 30,000Ω
R.F. CHOKE 80Ω L-13
TO ALL FILAMENTS, HEATERS AND DIAL LAMP EXCEPT AUTOMATIC VOLUME CONTROL
TO AUTOMATIC VOLUME CONTROL HEATER
OPERATING SWITCH
IS TO CHASSIS FRAME
RECT. UX-280
POWER TRANSFORMER
FILTER REACTOR
C-32 2 MFD.
C-33 4 MFD.
C-34 0.5 MFD.
R-18 40,000Ω
R-17 190,000Ω
R-16 40,000Ω
REPRODUCER FIELD
RCA-247 PWR.
C-31 .005 MFD.
C-30 .008 MFD.
C-29 .0004 MFD.
R-15 10,000Ω
R-14 200,000Ω
C-28 .0004 MFD.
OUTPUT TRANSFORMER
INPUT TRANSFORMER
RCA-247 PWR.
IF PEAK 175 KC
1
2
3
4
5
6
7
8
9

110 VOLT A. C. LINE (Volume Control Setting Does Not Affect Voltages)

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1	2	*0.1	75	205	5.0	0.5	2.2
2	8	0	—	60	5.0	—	2.2
3	7	7.0	70	200	0.5	0.1	2.2
4	2	*0.1	75	205	5.0	0.5	2.2
5	0	0	—	25	0	—	2.2
6	20	*8.0	—	180	0.5	—	2.2
7	—	10	210	205	25	—	2.2
8	—	10	210	205	25	—	2.2

* Not true reading due to resistance in circuit.

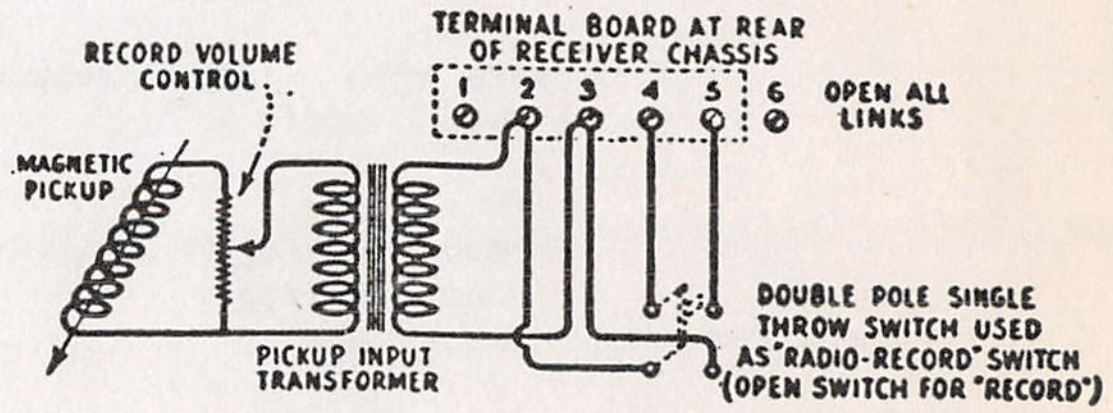
RECORD VOLUME CONTROL
TERMINAL BOARD AT REAR OF RECEIVER CHASSIS
1
2
3
4
5
6
OPEN ALL LINKS
MAGNETIC PICKUP
PICKUP INPUT TRANSFORMER
DOUBLE POLE SINGLE THROW SWITCH USED AS "RADIO-RECORD" SWITCH (OPEN SWITCH FOR "RECORD")

Models R-11, *Magnetic Pickup Connections*

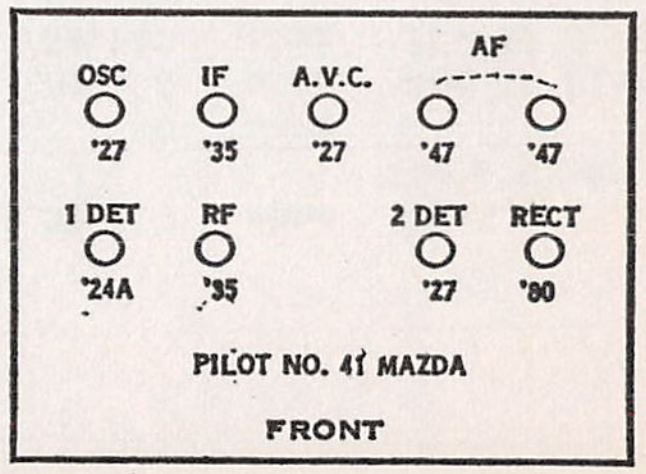
OSC
'27
IF
'35
A.V.C.
'27
AF
'47
'47
1 DET
'24A
RF
'35
2 DET
'27
RECT
'80
PILOT NO. 41 MAZDA
FRONT

MODEL R-11 AC
Chassis
Early

R. C. A. VICTOR CO., INC.

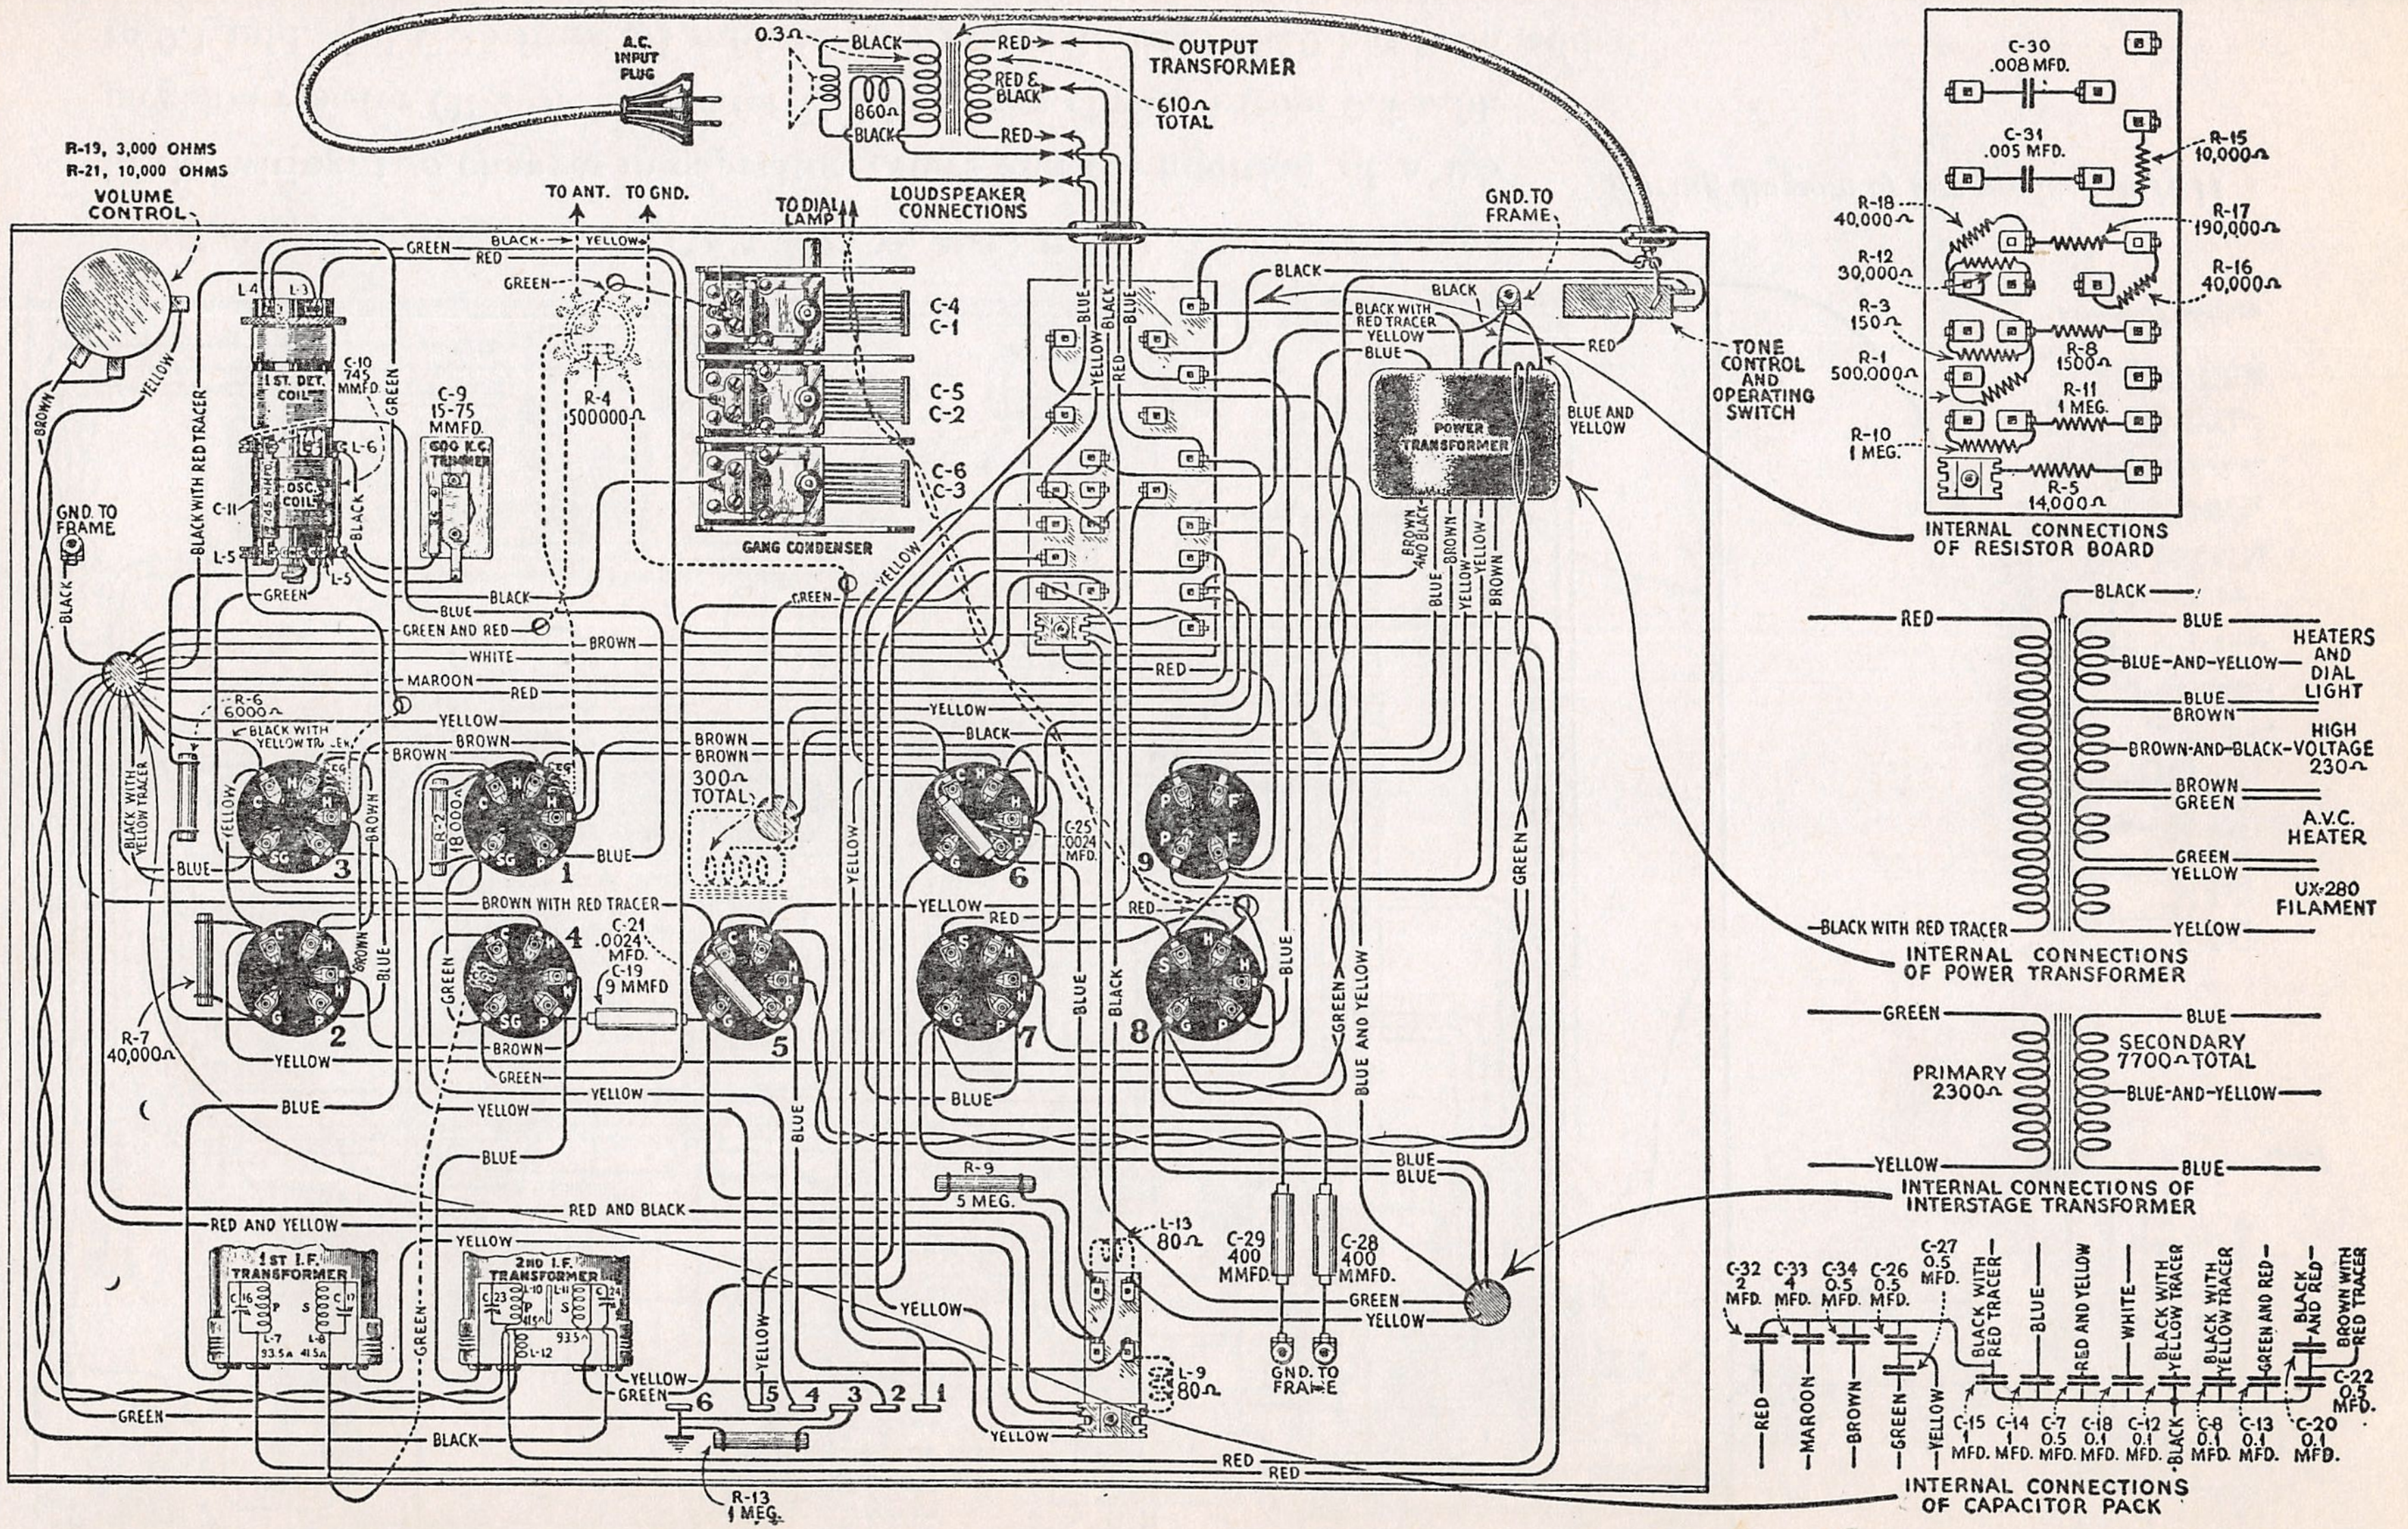
A.C. INPUT PLUG
0.3Ω
860Ω
BLACK
RED
RED & BLACK
OUTPUT TRANSFORMER
610Ω TOTAL
LOUDSPEAKER CONNECTIONS
R-19, 3,000 OHMS
R-21, 10,000 OHMS
VOLUME CONTROL
TO ANT.
TO GND.
TO DIAL LAMP
GND. TO FRAME
TONE CONTROL AND OPERATING SWITCH
POWER TRANSFORMER
BLUE AND YELLOW
BLACK WITH RED TRACER
YELLOW
BLUE
BROWN AND BLACK
BROWN
GREEN
1ST. DET. COIL
OSC. COIL
C-10 745 MMFD.
C-11
L-3
L-4
L-5
L-6
C-9 15-75 MMFD.
600 K.C. TRIMMER
R-4 500000Ω
C-4
C-1
C-5
C-2
C-6
C-3
GANG CONDENSER
GREEN AND RED
WHITE
MAROON
RED
R-6 6000Ω
BLACK WITH YELLOW TRACER
R-2 18000Ω
300Ω TOTAL
BROWN WITH RED TRACER
C-21 .0024 MFD.
C-19 9 MMFD
C-25 .0024 MFD.
R-7 40,000Ω
1
2
3
4
5
6
7
8
9
R-9 5 MEG.
RED AND BLACK
RED AND YELLOW
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
C-16
C-23
C-24
L-7
L-8
L-10
L-11
L-12
93.5Ω
41.5Ω
L-13 80Ω
L-9 80Ω
R-13 1 MEG.
C-29 400 MMFD
C-28 400 MMFD.
GND. TO FRAME
C-30 .008 MFD.
C-31 .005 MFD.
R-15 10,000Ω
R-18 40,000Ω
R-17 190,000Ω
R-12 30,000Ω
R-16 40,000Ω
R-3 150Ω
R-8 1500Ω
R-1 500,000Ω
R-11 1 MEG.
R-10 1 MEG.
R-5 14,000Ω
INTERNAL CONNECTIONS OF RESISTOR BOARD
BLACK
BLUE
BLUE-AND-YELLOW
HEATERS AND DIAL LIGHT
BROWN-AND-BLACK
HIGH VOLTAGE 230Ω
A.V.C. HEATER
UX-280 FILAMENT
INTERNAL CONNECTIONS OF POWER TRANSFORMER
PRIMARY 2300Ω
SECONDARY 7700Ω TOTAL
INTERNAL CONNECTIONS OF INTERSTAGE TRANSFORMER
C-32 2 MFD.
C-33 4 MFD.
C-34 0.5 MFD.
C-26 0.5 MFD.
C-27 0.5 MFD.
C-15 1 MFD.
C-14 1 MFD.
C-7 0.5 MFD.
C-18 0.1 MFD.
C-12 0.1 MFD.
C-8 0.1 MFD.
C-13 0.1 MFD.
C-20 0.1 MFD.
C-22 0.5 MFD.
BLACK AND RED
BROWN WITH RED TRACER
GREEN AND RED
RED AND YELLOW
INTERNAL CONNECTIONS OF CAPACITOR PACK

R. F. OSCILLATOR AND I. F. ADJUSTMENTS

A reference to the RCA Victor Radiola Superette Service Notes will give the details for making correct R. F., I. F. and Oscillator adjustments. However, due to the use of an automatic volume control tube, its action will defeat the use of an output meter. To overcome this, a "dummy" Radiotron UY-227 (one that has one heater prong removed but is otherwise O.K.) should be substituted for the tube in the automatic volume control socket. *Do not make any adjustments with this tube removed from the socket.* While apparently everything functions in the normal manner, the lack of tube capacity in the circuits will cause an incorrect alignment to be made.

MODEL R-11 AC
Chassis
Late

R. C. A. VICTOR CO., INC.

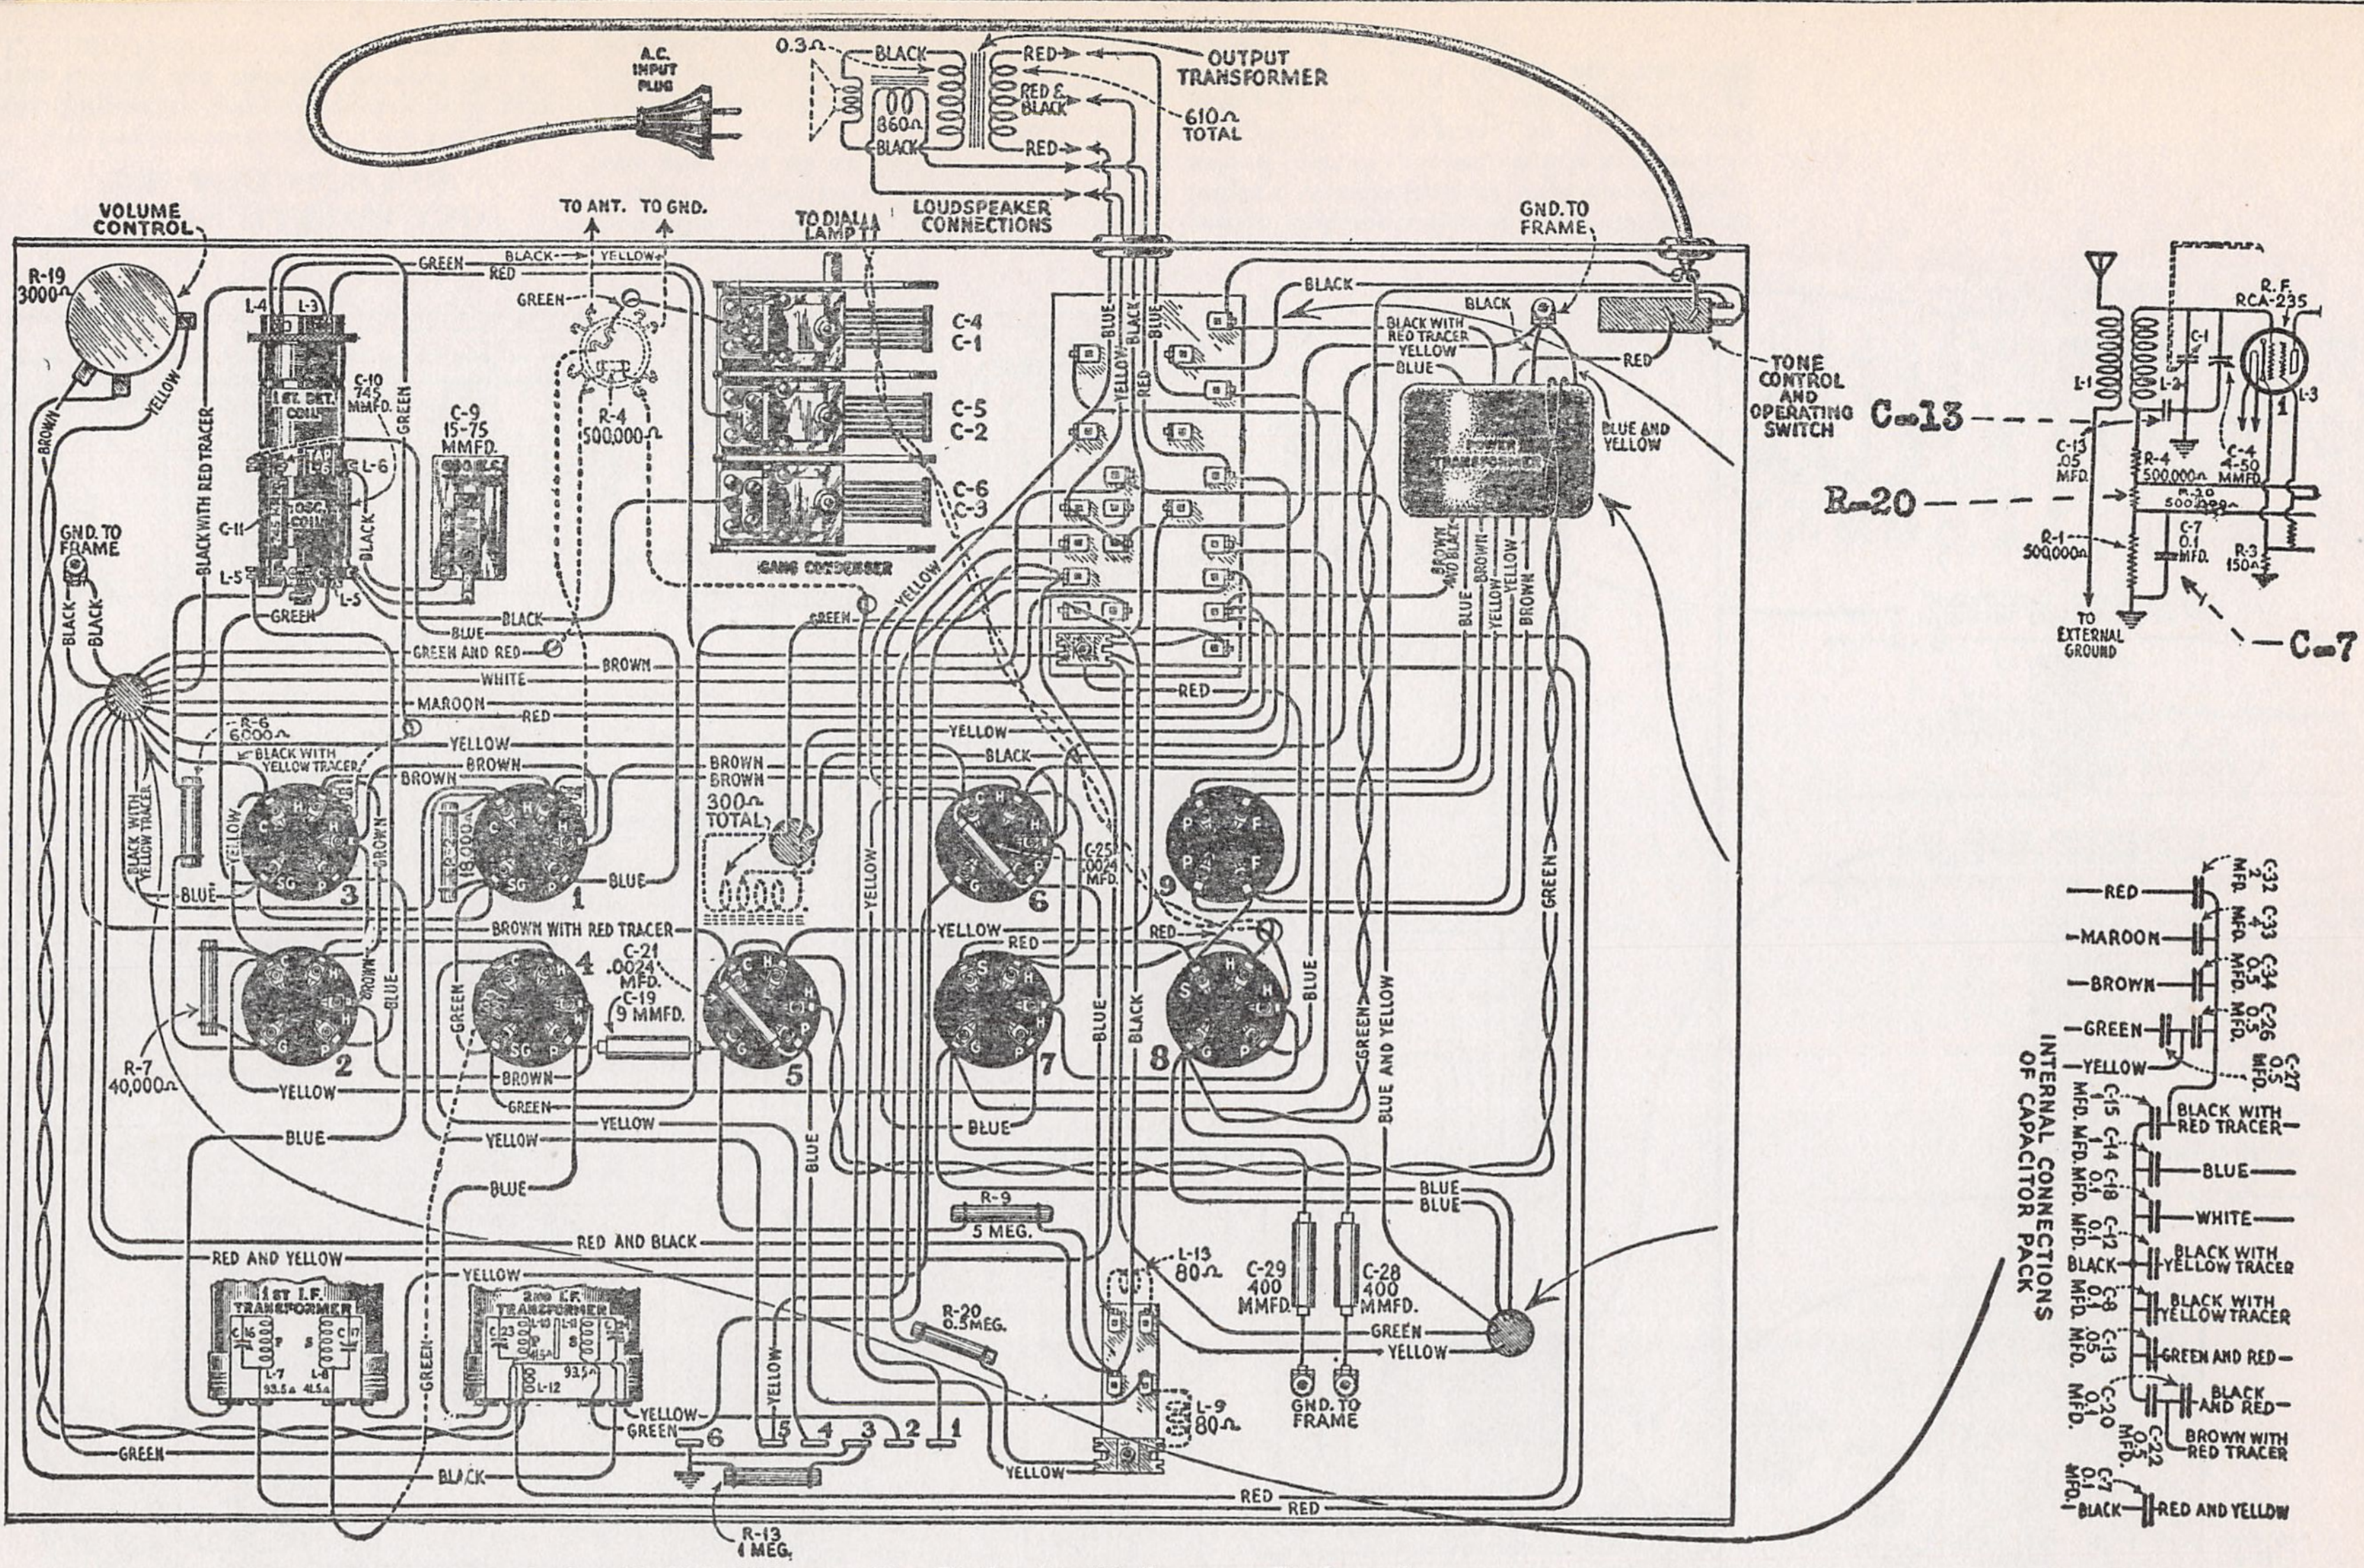
A.C. INPUT PLUG
OUTPUT TRANSFORMER
610Ω TOTAL
0.3Ω
360Ω
BLACK
RED
RED & BLACK
LOUDSPEAKER CONNECTIONS
TO DIAL LAMP
TO ANT.
TO GND.
VOLUME CONTROL
R-19 3000Ω
GND. TO FRAME
TONE CONTROL AND OPERATING SWITCH
C-4
C-1
C-5
C-2
C-6
C-3
GANG CONDENSER
C-9 15-75 MMFD.
C-10 745 MMFD.
R-4 500,000Ω
L-3
L-4
L-5
L-6
C-11
1ST DET. COIL
OSC. COIL
R-6 6000Ω
R-2 18,000Ω
R-7 40,000Ω
BROWN BROWN 300Ω TOTAL
C-21 .0024 MFD.
C-19 9 MMFD.
C-25 .0024 MFD.
R-9 5 MEG.
R-20 0.5 MEG.
R-13 1 MEG.
L-13 80Ω
L-9 80Ω
C-29 400 MMFD.
C-28 400 MMFD.
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
1
2
3
4
5
6
7
8
9
R.F. RCA-235
L-1
L-2
C-13 .05 MFD.
C-4 4-50 MMFD.
R-20 500,000Ω
R-1 500,000Ω
C-7 0.1 MFD.
R-3 150Ω
TO EXTERNAL GROUND
C-13
R-20
C-7
C-32 2 MFD.
C-33 4 MFD.
C-34 0.5 MFD.
C-26 0.5 MFD.
C-27 0.5 MFD.
C-15 1 MFD.
C-14 1 MFD.
C-18 0.1 MFD.
C-12 0.1 MFD.
C-8 0.1 MFD.
C-13 .05 MFD.
C-20 0.1 MFD.
C-22 0.5 MFD.
C-7 0.1 MFD.
RED
MAROON
BROWN
GREEN
YELLOW
BLACK WITH RED TRACER
BLUE
WHITE
BLACK WITH YELLOW TRACER
GREEN AND RED
BLACK AND RED
BROWN WITH RED TRACER
RED AND YELLOW
INTERNAL CONNECTIONS OF CAPACITOR PACK

Wiring diagram of late production R-11

Late production of the RCA Victor Radiola R-11 has a slight change in the wiring, two changes in capacitor values and the addition of a 0.5 megohm resistor (R-20). Capacitor C-7 has been changed from 0.5 mfd. to 0.1 mfd. and C-13 from 0.1 mfd. to 0.05 mfd. Resistor R-20 has been added.

MODEL R-11 AC
Parts List
Notes

R. C. A. VICTOR CO., INC.

RCA Victor Console, R-11

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price
2563	Resistor—6,000 ohms—Carbon type—Package of 5	$3.00
2730	Resistor—18,000 ohms—Carbon type—Package of 5	2.00
2734	Capacitor—745 mmfd.—Package of 5	2.20
2746	Socket—Dial lamp socket	.50
2747	Contact cap—Package of 5	.50
2749	Capacitor—2400 mmfd.	1.50
2875	Knobs—Package of 5	1.50
2882	Socket—UY Radiotron socket—Complete with insulating shield—8 used	.50
2968	Socket—UX Radiotron socket—Complete with insulating shield—1 used	.50
2999	Shaft—Dial drum drive shaft	.50
3029	Indicator—Tuning dial indicator—Complete with bracket	.50
3046	Resistor—190,000 ohms—Carbon type—Package of 5	2.50
3047	Resistor—1500 ohms—Carbon type—Package of 5	2.50
3048	Resistor—500,000 ohms—Carbon type—Package of 5	2.50
3049	Resistor—150 ohms—Carbon type—Package of 5	2.50
3050	Resistor—14,000 ohms—Carbon type—Package of 1	.60
3051	Resistor—5 megohm—Carbon type—Package of 5	2.00
3053	Capacitor—9 mmfd.—Package of 2	.50
3054	Escutcheon—Station selector escutcheon—With 4 mounting screws	.60
3055	Cushion—Chassis support cushion—Package of 4	.50
3056	Shield—Radiotron shield—6 used—Package of 2	.50
3076	Resistor—1 megohm—Carbon type—Package of 5	2.50
3077	Resistor—30,000 ohms—Carbon type—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type—Package of 5	2.50
3079	Resistor—40,000 ohms—Carbon type—Package of 5	2.50
3085	Capacitor—400 mmfd.	.60
3089	Terminal board—Magnetic pickup terminal board	.50
3090	Board—A. V. C. and 2nd detector R. F. choke mounting board—Less choke coils	.50
3091	Board—Resistor board—Less resistor and capacitors	1.00
3092	Volume control—Complete with mounting nut	1.50
3093	Tone control—Complete with mounting nut	1.90
3094	Shield—Radiotron shield—1 used—Package of 2	.50
3095	Coil—R.F. coil—Complete with mounting bracket	1.90
3096	Coil—1st detector and oscillator coil—Complete with mounting bracket	3.55
3097	Scale—Dial drum scale with set screws—Pkg. of 2	$0.50
3098	Capacitor—0.008 mfd.	.50
3099	Capacitor—0.005 mfd.	.75
7054	Cord—Power cord	1.00
7062	Capacitor—Adjustable oscillator trimmer capacitor	1.00
7241	Capacitor—3 gang tuning capacitor with mounting screws and washers	8.00
7266	Transformer—1st intermediate transformer	3.00
7267	Transformer—2d intermediate transformer	3.00
7268	Coil—Detector or A.V.C. R.F. choke coil—Complete with mounting rivet	.60
7269	Capacitor pack—In metal container—60 cycle	7.25
7270	Reactor—Filter reactor	4.00
7271	Transformer—Interstage transformer	4.25
7272	Transformer—Power transformer—105–125 volt, 50–60 cycles	12.00
7273	Capacitor pack—By-pass capacitor pack—25–40 cy.	10.00
7274	Transformer—Power transformer—105–125 volts, 25–40 cycles	15.00
7275	Transformer—Power transformer—220 volts, 50–60 cycles	10.00
	LOUDSPEAKER ASSEMBLY	
7257	Coil—Cone support with retaining ring, magnet and field coil	6.00
7258	Transformer—Output transformer	1.70
8559	Ring—Cone retaining ring	.80
8601	Cone—Cone with voice coil—Package of 5	15.00
	CABINET ASSEMBLY	
8691	Panel—Control panel	8.50
8692	Grille cloth and baffle board	.90
8693	Leg—Front—Right or left	1.25
8694	Leg—Back—Right hand	1.00
8695	Leg—Back—Left hand	1.00
8696	Stretcher	2.50
8697	Foot	.75
8698	Top	5.50
8699	Ornament—Control panel ornament	2.25
9358	Cabinet—Complete less all equipment	62.50

In previous automatic volume control receivers, the volume control was placed in the grid circuit of the automatic volume control tube, its action being to vary the control grid voltage of this tube. When operating sets of this character, the receiver jumped to full sensitivity when not tuned to a signal and if in a noisy location, this noise was very objectionable.

In this instrument, however, the volume control is not in the automatic volume control tube circuit, but in the grid circuit of the second detector. By means of it the signal voltage applied to the second detector is controlled and under no conditions can noise or other signals exceed the level for which it has been set. Electrically, the primary and secondary of the second I. F. transformer are shielded from each other so that there is no transference of energy except by means of a small pickup coil. The volume control is a potentiometer shunted across this coil which determines the amount of pickup that will be used. As a further means of controlling a strong signal, a second section is provided which places up to 10,000 ohms (R-21) in series with the tuned circuit of second detector grid. This effectively reduces even the most powerful signals received.

A 0.005 mfd. condenser connected in series with a 10,000 ohm resistor is placed across the primary of the output transformer. This functions to reduce the third harmonic distortion, an inherent characteristic of the Pentode output tube. The direct plate and grid voltages are supplied from high voltage alternating current which is rectified by means of Radiotron UX-280. The filter is of the tapped reactor type which gives an output of well filtered D. C. The bias voltage for the Radiotrons RCA-247 is obtained by using a portion of the drop across the reproducer field. One 190,000 ohm and one 40,000 ohm resistors act as the voltage dividing resistors.

A tone control, consisting of a 0.008 mfd. condenser in series with a 200,000 ohm variable resistor connected across the two grids of Radiotrons RCA-247 is incorporated in this stage. The tone control functions to reduce the high frequency output as the resistance is reduced. At the extreme low position, the condenser and secondary of the A. F. transformer resonate at a low frequency and thereby further accentuate the bass response. The two 0.0004 mfd. condensers, connected in series with their mid-point grounded are connected across the secondary of the input transformer. The purpose of these condensers is to prevent audio oscillations and provide a high frequency audio cut-off.

The next circuit to examine is the first detector. The circuit is tuned by means of one of the gang condensers to the frequency of the incoming signal. Radiotron UY-224 is used in this stage. In the grid circuit there is present the incoming signal and the oscillator signal, the latter being at a 175 K. C. difference from the former. The first detector is biased so as to operate as a plate rectification detector and its purpose is to extract the difference or beat frequency, produced by combining the signal and oscillator frequencies. The beat frequency—175 K. C. —appears in the plate circuit of the first detector which is accurately tuned to 175 K. C.

The next stage is that of the I. F. amplifier. A single stage is used, requiring two I. F. transformers, consisting of four tuned circuits. The plate circuit of the first detector, the grid and plate circuit of the I. F. amplifier and the grid circuit of the second detector are all tuned to 175 K. C. Radiotron RCA-235 is used in this stage and its control grid voltage is also varied by means of the automatic volume control tube.

SERVICE DATA

Information pertaining to general service data for this type receiver may be obtained from the Service Notes already issued on the RCA Victor Radiola Superette.

MODEL R-11 AC
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes removed from sockets and AC plug removed from power supply.
Field coil disconnected

From Chassis To	Correct		Incorrect
Aerial to Ground post	40	ohms	
Chassis to			
			TC-Y
RF Control Grid(early model)	1,000,005	ohms	BLC- in tuned circuit (.1 mfd)
			BC-AVC chk-Y
RF Control Grid(late model)	1,500,005	ohms	BLC- in tuned circuit (.05 mfd)
			BC- 1 IF Tr. Sec -Y
RF Cathode	150	ohms	BC- rf K-Y (.1 mfd)
RF Screen Grid	18,150	ohms	BC- rf Sg- Y (1. mfd)
			BC-47 Sg- Y (.5 mfd)
			BC-'80 F- Spkr div. tap
RF Plate	32,508	ohms	BC- rf P-Y (1. mfd)
			See RF Screen Grid
RF Plate to '80 Fil	58	ohms	
1 Detector Control Grid	5	ohms	TC-Y
1 Detector Cathode	1,500	ohms	BC-Y (.1 mfd)
1 Detector Screen	18,150	ohms	See R-F Screen
1 Detector Plate	32,541.5	ohms	See R-F Plate
1 Detector Plate to '80 Fil	93.5	ohms	TC- 1 IF Tr.
Oscillator Control Grid	41,500	ohms	BLC-Osc.Grid Cir.(.0074)
			BC-Osc K-Y (.1 mfd)
Oscillator Cathode	1,500	ohms	BC-Osc K-Y (.1 mfd)
Oscillator Plate	18,151	ohms	See R-F Screen
Osc Plate and Det Screen	1	ohm	
IF Control Grid (all models)	500,041.5	ohms	BC-Y (.5 mfd)
IF Control Grid- AVC Plate (early)	121.5	ohms	TC-1 IF Tr Sec
IF Screen Grid	18,150	ohms	See RF Screen
IF Plate	32,491.5	ohms	See 1 Detector Plate
IF Plate -'80 Fil	41.5	ohms	TC- 2 IF Tr.Pri.
AVC Control Grid (early)	7,230,285	ohms	BLC- if P- AVC Cg(9mmfd)
			BC-5 meg - AVC H (.1mfd)
			BC-1 meg- Y (.1 mfd)
			FC-'80 Anode -80 F(2mfd)
			FC filter chk-80 F(4 mfd
			BC-AVC K-Y (.5 mfd)
			BC-Spkr divides tap -Y
			BC-AVC K-AVC P(.0024 mfd
AVC Control Grid (late)	4,230,285	ohms	See early model
AVC Cathode	270,000	ohms	BC-AVC K-AVC P
			BC-AVC K-Y
AVC Plate	1,000,085	ohms	BC-AVC P-AVC K
			See RF Control Grid

2 Det Control Grid(Pickup Board Ter#2)	93.5	ohms	
2 Det Control Grid to V.C. Arm	3,093.5-10,093.5	ohms	TC-2D Cg- VC Arm
2 Det Cathode	30,000	ohms	BC-Ter#1-Ter#3
			BC- 2 DK -'80 Fil

From Chassis To	Correct		Incorrect
Pickup Board Terminal 2	1,000,000	ohms	BC-Ter#1- Ter#3
2 Detector Plate	34,830	ohms	See RF Plate
2 Detector Plate-'80 Fil	2,380	ohms	
'47 Control Grid	43,850	ohms	BC- 47 Cg-Y
			See AVC Cathode
'47 Control Grid to Control Grid	7,700	ohms	Tone Control Cond
			Tone Control Resist
'47 Screen	32,450	ohms	See 2 Detector Plate
'47 Screen - '80 Fil	0	ohms	
'47 Plate	32,755	ohms	See 2 Detector Plate
'47 Plate to Plate	610	ohms	Harmonic condenser
80 Anode to chassis	230,400	ohms	See AVC Control Grid
80 Anode to Anode	230	ohms	
80 Fil to chassis	32,450	ohms	See RF Plate
			See RF Screen Grid
Across Speaker field	860	ohms	

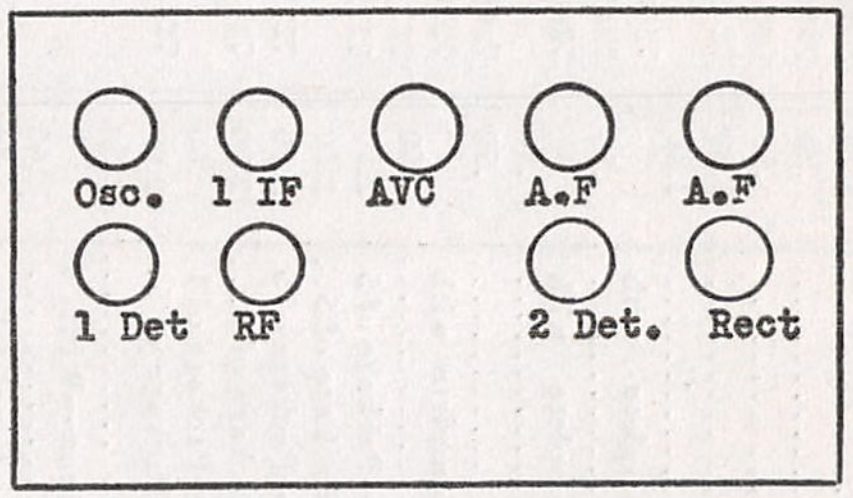

Line Voltage 110. Volume Control does not change voltages.

Tube	Cathode-Heater	Control Grid-Cathode	Screen Grid-Cathode	Plate-Cathode	Plate Current	Filament Voltage
RF	2.	0.1*	75.	205.	5.0 ma	2.2
Osc.	8.	0.	-	60.	5.0	2.2
1 Det.	7.	7.0	70.	200.	0.5	2.2
IF	2.	0.1*	75.	205.	5.0	2.2
AVC	0.	0.	-	25.	-	2.2
2 Det.	20.	8.0*	-	180.	0.5	2.2
Pwer	-	10.	210.	205.	25.	2.2
Pwer	-	10.	210.	205.	25.	2.2

* Not true reading due to resistance in the circuit.

R. C. A. VICTOR CO., INC.

MODEL RE-18
Schematic

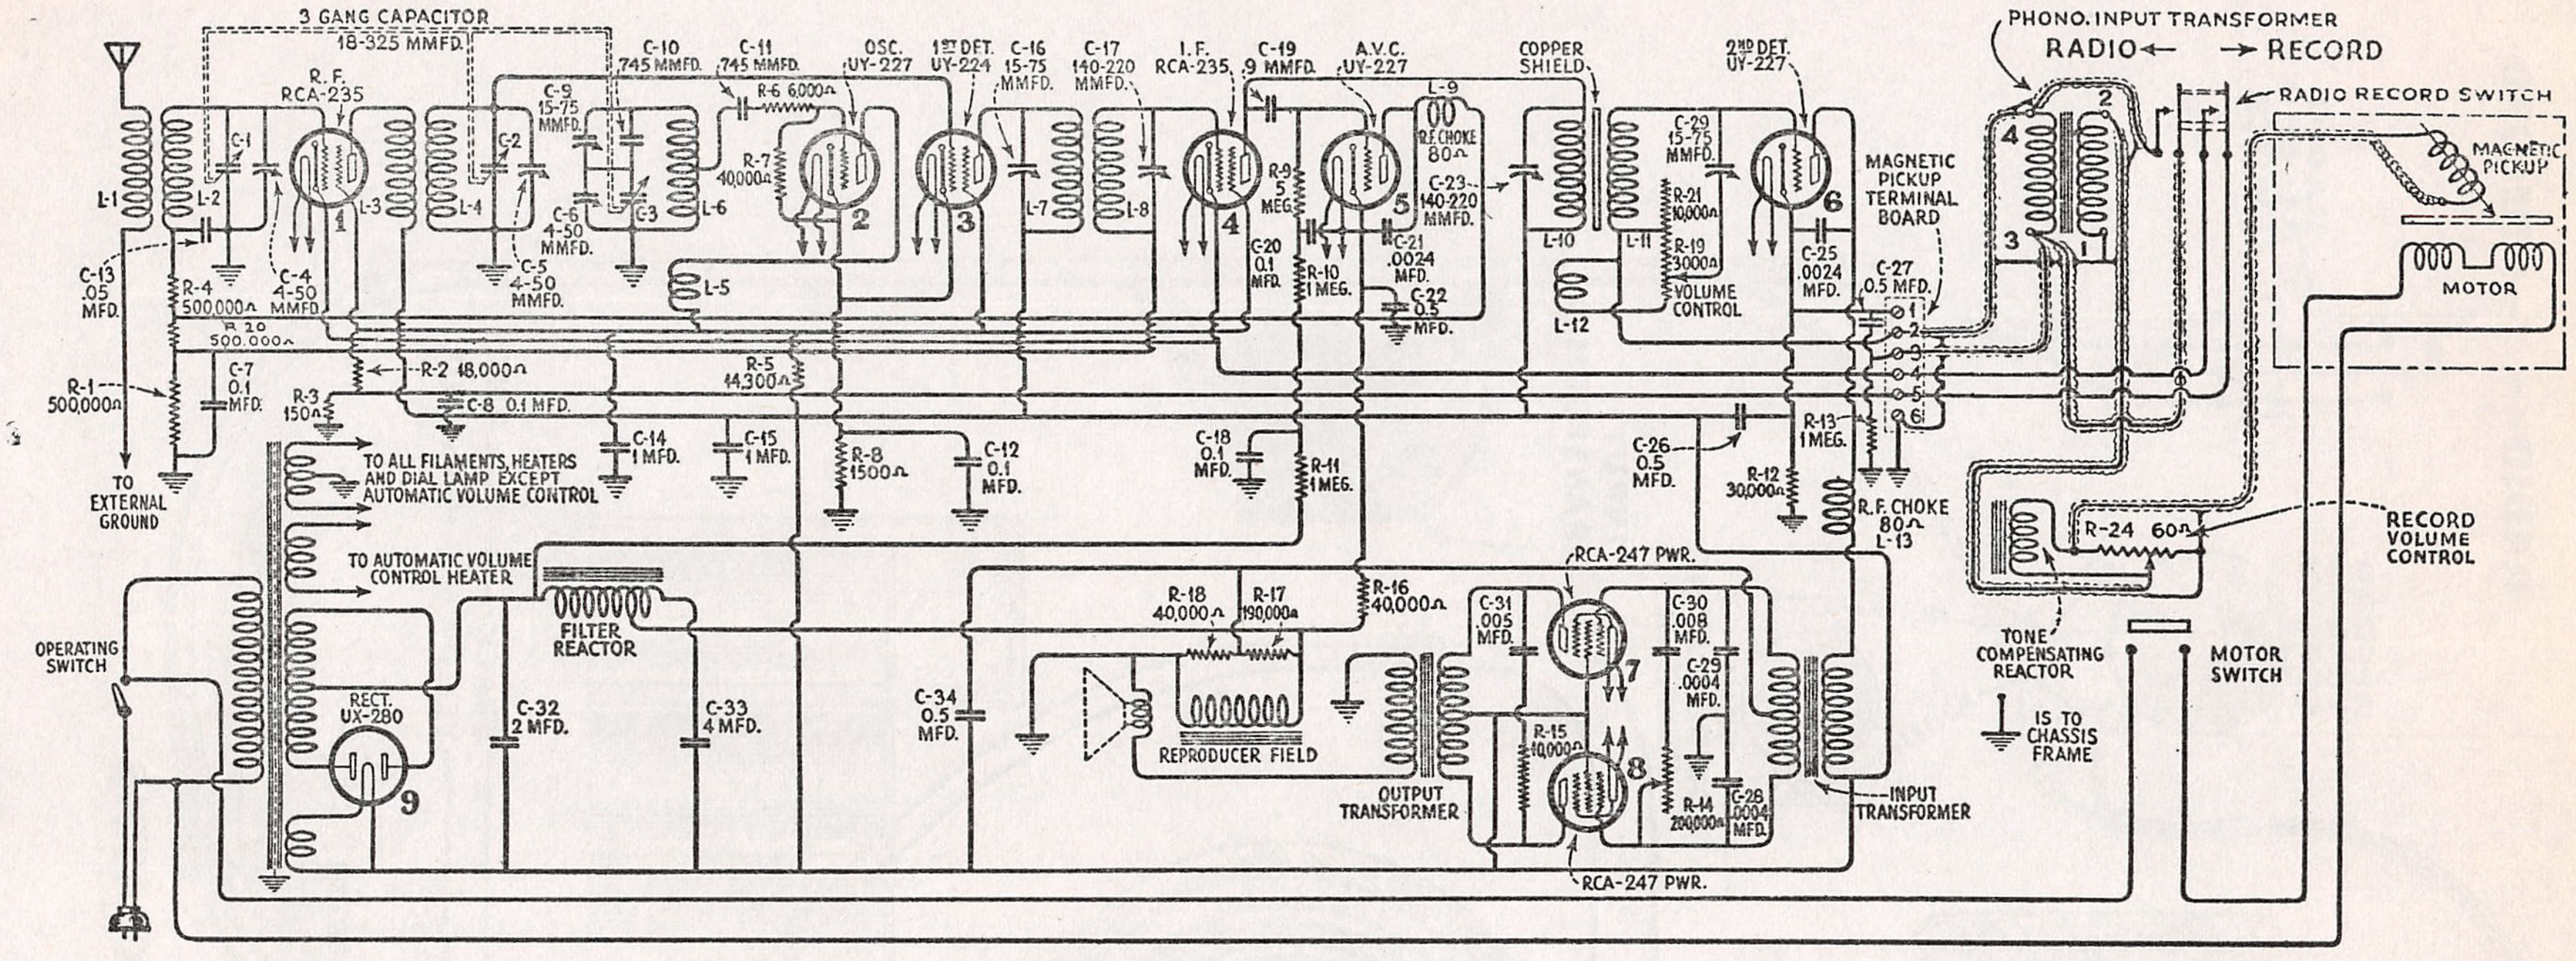
3 GANG CAPACITOR 18-325 MMFD.
R. F. RCA-235
C-10 .745 MMFD.
C-11 .745 MMFD.
OSC. UY-227
1ST DET. UY-224
C-16 15-75 MMFD.
C-17 140-220 MMFD.
I. F. RCA-235
C-19 .9 MMFD.
A.V.C. UY-227
COPPER SHIELD
2ND DET. UY-227
PHONO. INPUT TRANSFORMER
RADIO ← → RECORD
RADIO RECORD SWITCH
MAGNETIC PICKUP
MOTOR
L-1
L-2
L-3
L-4
L-5
L-6
L-7
L-8
L-9
L-10
L-11
L-12
C-1
C-2
C-3
C-9 15-75 MMFD.
C-6 4-50 MMFD.
C-5 4-50 MMFD.
C-4 4-50 MMFD.
R-6 6000Ω
R-7 40,000Ω
R-9 5 MEG.
R.F. CHOKE 80Ω
C-23 140-220 MMFD.
C-21 .0024 MFD.
C-22 0.5 MFD.
C-20 0.1 MFD.
R-10 1 MEG.
C-29 15-75 MMFD.
R-21 10,000Ω
R-19 3000Ω
VOLUME CONTROL
C-25 .0024 MFD.
MAGNETIC PICKUP TERMINAL BOARD
C-27 0.5 MFD.
C-13 .05 MFD.
R-4 500,000Ω
R-20 500,000Ω
R-1 500,000Ω
C-7 0.1 MFD.
R-2 18,000Ω
R-3 150Ω
C-8 0.1 MFD.
R-5 14,300Ω
C-14 1 MFD.
C-15 1 MFD.
R-8 1500Ω
C-12 0.1 MFD.
C-18 0.1 MFD.
R-11 1 MEG.
C-26 0.5 MFD.
R-13 1 MEG.
R-12 30,000Ω
R.F. CHOKE 80Ω L-13
R-24 60Ω
RECORD VOLUME CONTROL
TO EXTERNAL GROUND
TO ALL FILAMENTS, HEATERS AND DIAL LAMP EXCEPT AUTOMATIC VOLUME CONTROL
TO AUTOMATIC VOLUME CONTROL HEATER
FILTER REACTOR
OPERATING SWITCH
RECT. UX-280
C-32 2 MFD.
C-33 4 MFD.
C-34 0.5 MFD.
R-18 40,000Ω
R-17 190,000Ω
R-16 40,000Ω
REPRODUCER FIELD
OUTPUT TRANSFORMER
RCA-247 PWR.
C-31 .005 MFD.
R-15 10,000Ω
C-30 .008 MFD.
C-29 .0004 MFD.
R-14 200,000Ω
C-28 .0004 MFD.
INPUT TRANSFORMER
TONE COMPENSATING REACTOR
IS TO CHASSIS FRAME
MOTOR SWITCH
1
2
3
4
5
6
7
8
9

IF PEAK 175 KC.

This is a combination radio and electrola incorporating a new type automatic volume control that is quiet between stations. The new motor - board equipment has a synchronous motor using the R. C. A. - Victor Inertia tone arm. The motor is fitted with a speed reducing gear that allows for the playing of both standard and Program Transcription Records.

In many respects this receiver is similar to the R. C. A. - Victor Model R-11 and methods similar to those used in servicing the R-11 can be applied to this Model, noting, of course, that there are some differences.

Models R-11, RE-18, RE-18A, RAE-26 (1931)

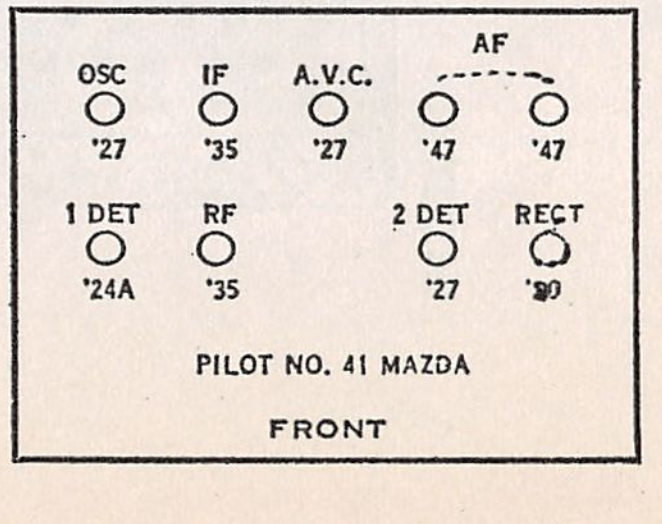
OSC
'27
IF
'35
A.V.C.
'27
AF
'47
'47
1 DET
'24A
RF
'35
2 DET
'27
RECT
'80
PILOT NO. 41 MAZDA
FRONT

MODEL RE-13
Assembly Wiring

R. C. A. VICTOR CO., INC.

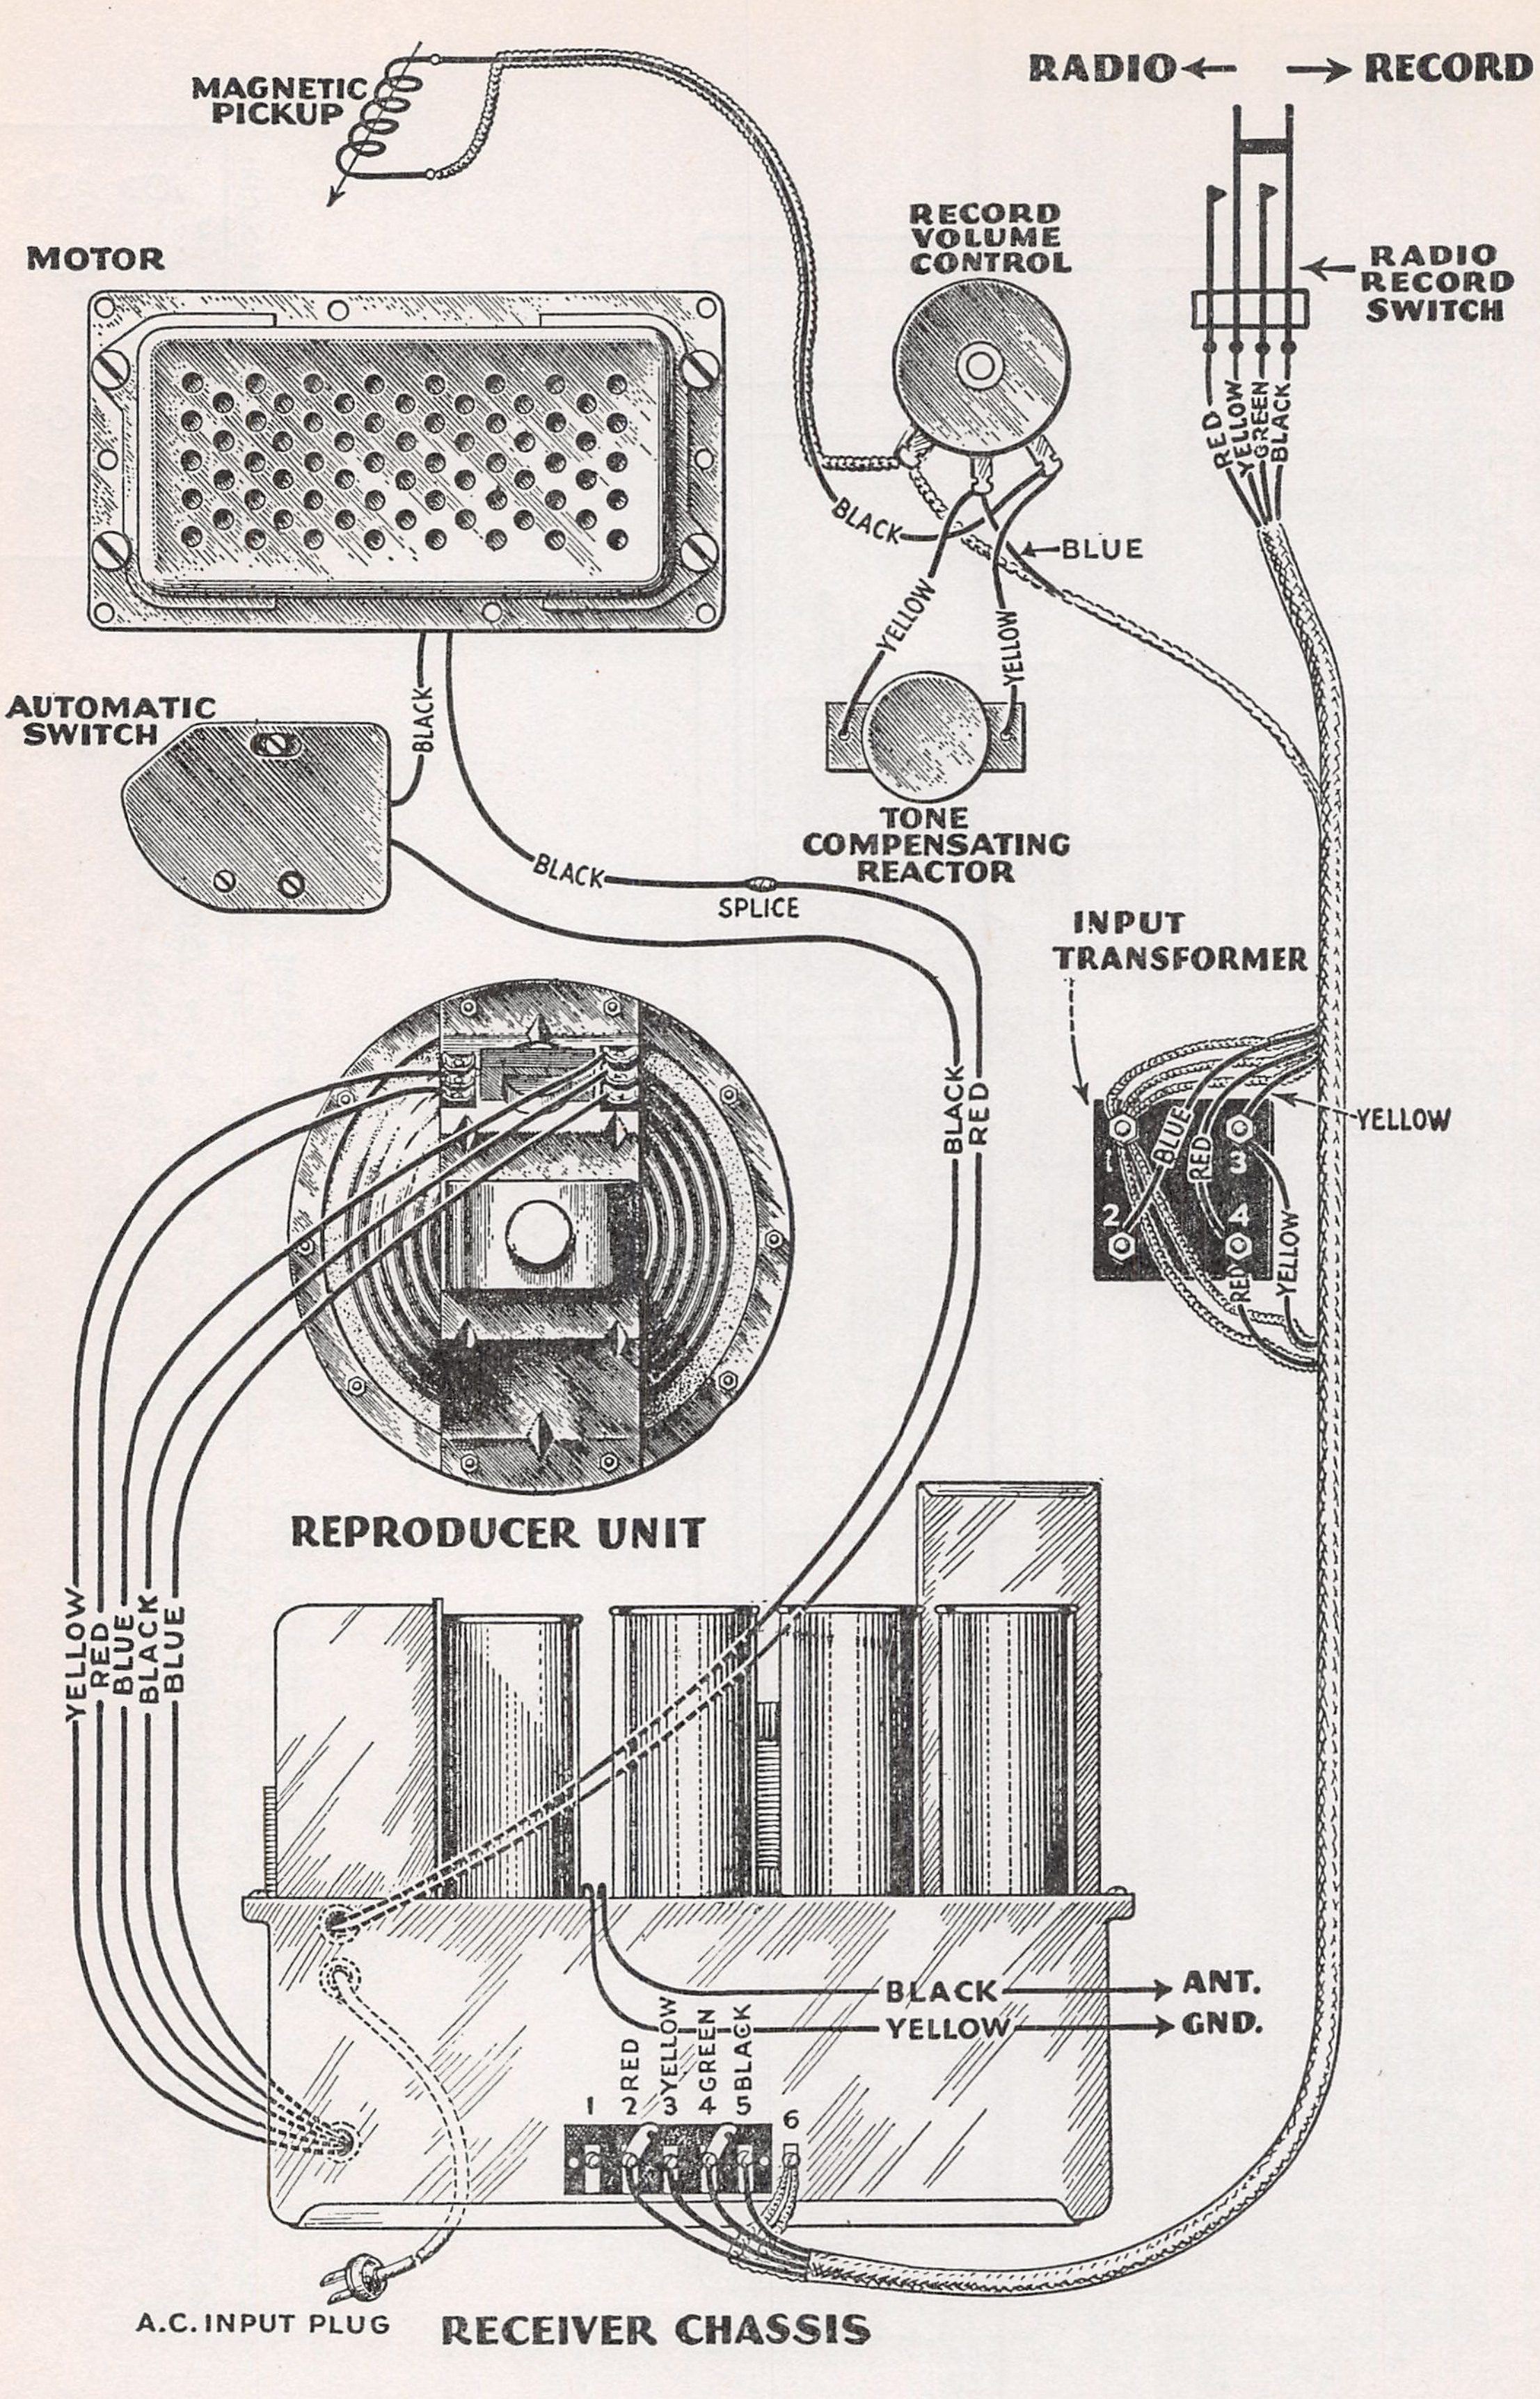
MAGNETIC PICKUP
RADIO ← → RECORD
MOTOR
RECORD VOLUME CONTROL
RADIO RECORD SWITCH
RED
YELLOW
GREEN
BLACK
BLACK
BLUE
YELLOW
YELLOW
AUTOMATIC SWITCH
BLACK
TONE COMPENSATING REACTOR
BLACK
SPLICE
INPUT TRANSFORMER
BLACK
RED
BLUE
RED
YELLOW
1
2
3
4
RED
YELLOW
REPRODUCER UNIT
YELLOW
RED
BLUE
BLACK
BLUE
BLACK → ANT.
YELLOW → GND.
RED
YELLOW
GREEN
BLACK
1
2
3
4
5
6
A.C. INPUT PLUG
RECEIVER CHASSIS

R. C. A. VICTOR CO., INC.

MODEL RE-18
Resistance Data

All Tubes removed from sockets and AC plug disconnected from power supply line. All phonograph equipment disconnected from pick up terminal board and terminals 2 and 3 inter-connected. Also terminals 4 and 5 inter-connected. Field Coil disconnected

From Chassis To	Correct		Incorrect
Aerial to Ground post	40	ohms	
Chassis to			
RF Control Grid(early model)	1,000,005	ohms	TC-Y BLC- in tuned circuit (.1 mfd) BC-AVC chk-Y
RF Control Grid(late model)	1,500,005	ohms	BLC- in tuned circuit (.05 mfd) BC- 1 IF Tr. Sec -Y
RF Cathode	150	ohms	BC- rf K-Y (.1 mfd)
RF Screen Grid	18,150	ohms	BC- rf Sg-Y (1. mfd) BC- 47 Sg-Y (.5 mfd) BC-'80 F- Spkr div. tap
RF Plate	32,508	ohms	BC- rf P-Y (1. mfd) See RF Screen Grid
RF Plate to '80 Fil	58	ohms	
1 Detector Control Grid	5	ohms	TC-Y
1 Detector Cathode	1,500	ohms	BC-Y (.1 mfd)
1 Detector Screen	18,150	ohms	See R-F Screen
1 Detector Plate	32,541.5	ohms	See R-F Plate
1 Detector Plate to '80 Fil	93.5	ohms	TC- 1 IF Tr.
Oscillator Control Grid	41,500	ohms	BLC-Osc.Grid Cir.(0074) BC-Osc K-Y (.1 mfd)
Oscillator Cathode	1,500	ohms	BC-Osc K-Y (.1 mfd)
Oscillator Plate	18,151	ohms	See R-F Screen
Osc Plate and Det Screen	1	ohm	
IF Control Grid (all models)	500,041.5	ohms	BC-Y (.5 mfd)
IF Control Grid- AVC Plate (early)	121.5	ohms	TC-1 IF Tr Sec
IF Screen Grid	18,150	ohms	See RF Screen
IF Plate	32,491.5	ohms	See 1 Detector Plate
IF Plate - '80 Fil	41.5	ohms	TC-2 IF Tr.Pri
AVC Control Grid (early)	7,230,285	ohms	BLC- if P- AVC Cg(9 mmfd) BC-5 meg - AVC H (.1 mfd) BC-1 meg- Y (.1 mfd) FC-'80 Anode -80 F(2 mfd) FC Filter chk-80 F(4 mfd) BC-AVC K-Y (.5 mfd) BC-Spkr divides tap- Y BC-AVC K-AVC P(.0024 mfd)
AVC Control Grid (late)	4,230,285	ohms	See early model
AVC Cathode	270,000	ohms	BC-AVC K-AVC P BC-AVC K-Y
2 Det Control Grid(Pickup Board Ter#2)	93.5	ohms	See Rf control grid
2 Det Control Grid to V.C. Arm	3,093.5-10,093.5	ohms	TC-2D Cg- VC Arm
2 Det Cathode	30,000	ohms	BC-Ter#1-Ter#3 BC- 2 DK-'80 Fil
Pickup Board Terminal 2	1,000,000	ohms	BC-Ter#1-Ter#3
2 Detector Plate	34,830	ohms	See RF Plate
2 Detector Plate-'80 Fil	2,380	ohms	
'47 Control Grid	43,850	ohms	BC- 47 Cg-Y See AVC Cathode
'47 Control Grid to Control Grid	7,700	ohms	Tone Control Cond Tone Control Resist
'47 Screen	32,450	ohms	See 2 Detector Plate
'47 Screen - '80 Fil	0	ohm	
'47 Plate	32,755	ohms	See 2 Detector Plate
'47 Plate to Plate	610	ohms	Harmonic condenser
80 Anode to chassis	230,400	ohms	See AVC Control Grid
80 Anode to Anode	230	ohms	
80 Fil to chassis	32,450	ohms	See RF Plate See RF Screen Grid
Across Speaker field	860	ohms	

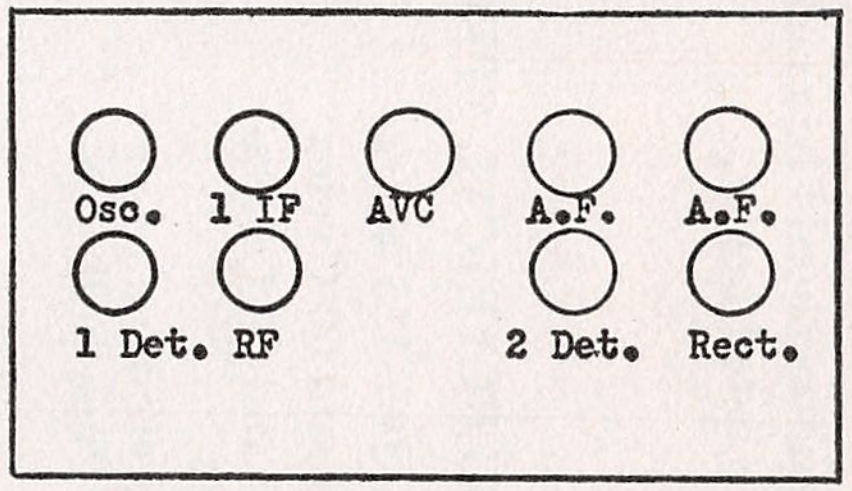

Peak Frequency = 175 KC

110 VOLT A. C. LINE (Volume Control Setting Does Not Affect Voltages)

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1	2	*0.1	.75	205	5.0	0.5	2.2
2	8	0	—	60	5.0	—	2.2
3	7	7.0	70	200	0.5	0.1	2.2
4	2	*0.1	75	205	5.0	0.5	2.2
5	0	0	—	25	0	—	2.2
6	20	*8.0	—	180	0.5	—	2.2
7	—	10	210	205	25	—	2.2
8	—	10	210	205	25	—	2.2

* Not true reading due to resistance in circuit.

MODEL RE-18-A
Parts List

R. C. A. VICTOR CO., INC.

RCA Victor Radiola Electrola RE-18A is a nine-tube combination super-heterodyne radio receiver and electric phonograph. Except for the cabinet and tuning dial, the RE-18A is similar to the RE-18. A reference to the RE-18 service notes should be made for information relative the circuits and similar data. The replacement parts are listed below.

ELECTRICAL SPECIFICATIONS

Voltage Rating................105–125 Volts

Frequency Rating.....25, 30, 50 and 60 Cycles

Power Consumption......25, 30 and 50 Cycles 170 Watts, 60 Cycles 160 Watts

Type of Circuit.......Super-Heterodyne using Super-Control Radiotrons and Push-pull Pentode output stage.

Type and Number of Radiotrons...2 RCA-235, 3 UY-227, 1 UY-224, 1 UX-280, 2 RCA-247—Total, 9

Number of Radio Frequency Stages..........1

Type of First Detector..Tuned Input Grid Bias

Number of Intermediate Stages............1

Type of Second Detector......Power Grid Bias

Type of Automatic Volume Control....UY-227 Controlled by signal voltage in turn controlling bias on R. F. and I. F. tubes

Type of Manual Volume Control......Potentiometer used to regulate input to second detector

Type of Tone Control....Variable resistance in series with capacitor connected across grids of output stage. Capacitor tunes transformer at "low" position

Number of Audio Stages (Radio)............1

Number of Audio Stages (Phonograph).......2

Type of Magnetic Pick-up.....Low Impedance

Type of Tone Arm..................Inertia

Diameter of Turntable.............12 inches

Type of Rectifier..................Full Wave

Type of Loudspeaker......8″ Electro-Dynamic

Undistorted Output................4.0 Watts

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price
	RECEIVER ASSEMBLY	
2563	Resistor—6,000 ohms—Carbon type—1 watt—Package of 5	$3.00
2730	Resistor—18,000 ohms—Carbon type—1 watt—Package of 5	2.00
2734	Capacitor—745 mmfd.—Package of 5	2.20
2746	Socket—Dial lamp socket	.50
2747	Cap—Grid contactor cap—Package of 5	.50
2749	Capacitor—2400 mmfd.	1.50
2875	Knob—Tuning control, volume control or tone control knob—Package of 5	1.50
2882	Socket—Five contact Radiotron socket complete with insulator—8 used	.50
2963	Resistor—8,000 ohms—Carbon type—1 watt—Package of 5	2.50
2968	Socket—Four contact Radiotron socket complete with insulator—1 used	.50
3024	Capacitor—9 mmfd.—Package of 2	.50
3046	Resistor—190,000 ohms—Carbon type—½ watt—Package of 5	2.50
3047	Resistor—1,500 ohms—Carbon type—½ watt—Package of 5	2.50
3048	Resistor—500,000 ohms—Carbon type—½ watt—Package of 5	2.50
3049	Resistor—150 ohms—Carbon type—½ watt—Package of 5	2.50
3050	Resistor—14,000 ohms—Carbon type—3 watt	.60
3055	Cushion—Receiver chassis sponge rubber cushion—Package of 4	.50
3056	Shield—Radiotron shield—6 used—Package of 2	$0.50
3076	Resistor—1 megohm—Carbon type—½ watt—Package of 5	2.50
3077	Resistor—30,000 ohms—Carbon type—½ watt—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type—½ watt—Package of 5	2.50
3079	Resistor—40,000 ohms—Carbon type—½ watt—Package of 5	2.50
3085	Capacitor—400 mmfd.	.60
3089	Board—Terminal board complete with 5 terminals	.50
3091	Board—Resistor board complete less resistors and capacitors	1.00
3092	Volume control—Volume control complete with mounting nut	1.50
3093	Tone control—Tone control complete with mounting nut	1.90
3095	Coil—R. F. coil	1.90
3096	Coil—1st detector and oscillator coil complete with mounting bracket	3.55
3098	Capacitor—0.008 mfd.	.50
3099	Capacitor—0.005 mfd.	.75
6179	Terminal—Single ground terminal with screw complete with mounting rivet—Package of 5	.50
6188	Resistor—2 megohm—Carbon type—½ watt—Package of 5	2.00
6189	Bracket—Dial lamp bracket and indicator—Package of 2	.65
6190	Shaft—Tuning dial shaft complete with 3 washers—Package of 5	.85

MODEL RE-18-A
Parts List

R. C. A. VICTOR CO., INC.

REPLACEMENT PARTS—Continued

Stock No.	DESCRIPTION	List Price
	RECEIVER ASSEMBLY—Continued	
6191	Cord—Condenser drum drive cord—Package of 5	$0.55
6192	Spring—Condenser drum drive cord tension spring—Package of 10	.50
7054	Cord—Power cord	1.00
7062	Capacitor—Adjustable capacitor—15-70 mmfd.	1.00
7266	Transformer—1st intermediate transformer	3.00
7267	Transformer—2nd intermediate transformer	3.00
7268	Coil—Detector choke coil complete with mounting rivet	.60
7269	Capacitor—Comprising one 2.0 mfd., one 4.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd. and one 0.05 mfd. capacitor in metal container	7.25
7270	Reactor—Filter reactor	4.00
7271	Transformer—Interstage transformer	4.25
7272	Transformer—Power transformer—105-125 volts, 50-60 cycles	12.00
7273	Capacitor—Comprising one 4.0 mfd., one 6.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd., and one 0.05 mfd. capacitors in metal container	10.00
7274	Transformer—Power transformer—105-125 volts—25-40 cycles	15.00
7275	Transformer—Power transformer—220 volts—50-60 cycles	10.00
7438	Capacitor—Variable tuning capacitor	5.20
7439	Drum—Tuning condenser drive drum with set screw—Complete with 3 dial scale mounting nuts	.50
7440	Scale—Dial and dial scale	.75
8871	Support—Receiver chassis metal mounting support—Package of 4	.75
	LOUDSPEAKER ASSEMBLY	
3237	Speaker mounting screw assembly—Comprising 4 screws, 8 washers, 8 nuts and 4 eyelets—Package of 1 set	.50
7257	Coil assembly—Comprising field coil, cone bracket and magnet	6.00
8559	Ring—Cone retaining ring	.80
8601	Cone—Speaker paper cone—Package of 5	15.00
	MOTOR BOARD ASSEMBLY	
X-13	Board—Motor board less equipment	5.85
2614	Switch—Automatic brake switch	1.40
2620	Cushion—Pickup rubber cushions—Comprising 1 damper and two pivot cushions—Package of 5 sets.	1.25
2767	Spring—Pickup magnet retaining spring—Package of 10	.50
2768	Armature—Pickup armature	.50
2770	Plate—Pickup damper plate—Package of 5	.50
2771	Screw—Pickup damper plate mounting screw—Package of 10	.50
2875	Knob—Volume control and record-radio switch knob—Package of 5	1.50
2908	Spring—Pawl carrier spring—Package of 10	.50
3052	Screw assembly—Pickup pole shoe mounting screw assembly—Comprising screw, nut and washer—Package of 10 sets	.50
3157	Gear—Driving gear—Located on turntable spindle above top plate	1.00
3159	Friction brake—Gear reducing friction brake spring with pad—Complete with mounting rivet—Package of 4	2.00
3161	Spring—Shift lever spring—Package of 5	1.20
3167	Magnet—Pickup magnet	2.60
3169	Pole shoe—Pickup pole shoe—R. H.	1.45
3170	Pole shoe—Pickup pole shoe—L. H.	1.45
3205	Screw—Pickup needle holding screw—Package of 10.	.80
3207	Screw—Pickup cover mounting screw—Package of 10.	.50
3208	Screw assembly—Pickup mounting screw assembly—Comprising screw, nut and washer—Package of 10	.60
3211	Washer—Turntable spindle leather washer—Package of 10	.50
3224	Switch—Record-Radio switch complete with mounting nut and washer	1.35
3278	Bearing—Rotor shaft fibre thrust bearing and cork button—Package of 10	.50
3279	Screw and nut—Rotor shaft thrust bearing adjusting screw and nut—Package of 10	.50
3280	Washer—Metal washer—Located on turntable spindle underneath gear reducing unit—Package of 20	.50
3281	Pawl—Gear reducing pawl with mounting stud	.50

Stock No.	DESCRIPTION	List Price
6119	Stud—Motor hanging stud—Package of 6	$0.50
6120	Screw—For holding turntable spindle bearing and grease cap—Package of 10	.50
6121	Bearing—Turntable spindle bearing and grease cap	1.10
6215	Escutcheon—Shift lever speed escutcheon plate with mounting screws—Package of 2	.70
6216	Rod—Automatic brake trip rod with nut—Package of 5	.50
6221	Cover—Pickup cover	.75
6222	Pickup—Pickup unit complete	12.50
6224	Receptacle—Tungstone needle box holder	.75
6232	Box—Needle box with lid—Package of 2	.90
6237	Holder—Twin needle holder with mounting screws	.75
6238	Transformer—Input transformer	3.10
7084	Cover—Turntable cover	.50
7151	Back—Pickup housing back	.50
7305	Gear—Gear reducing unit complete	4.50
7332	Cable—Main cable from receiver to input transformer, volume control and radio record switch	2.30
7387	Reactor—Tone compensating reactor with bracket	.85
7388	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—60 cycles	6.00
7389	Rotor and shaft—110 volts or 220 volts—60 cycles	9.00
7390	Motor mounting washer and springs—Comprising 3 "C" washers, 9 cup washers and 6 springs—Package of 1 set	.75
7391	Volume control—Record volume control complete with mounting nut and washer	1.35
7393	Block—Pickup connector block and wire	.90
7400	Spindle—Turntable spindle with fibre gear—25 cycles.	8.00
7401	Rotor and shaft—25 cycles	10.00
7402	Spindle—Turntable spindle with fibre gear—30 cycles.	8.00
7403	Rotor and shaft—30 cycles	10.00
7443	Rotor and shaft—110 volts or 220 volts—50 cycles	9.00
7444	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—50 cycles	6.00
8795	Motor—Motor complete—110 volts—60 cycles	19.85
8800	Motor—Motor complete—110 volts—25 cycles	24.65
8801	Motor—Motor complete—110 volts—30 cycles	24.65
8856	Motor—Motor complete—110 volts—50 cycles	19.85
8872	Lever—Shift lever complete with mounting screws	1.60
8873	Brake—Automatic brake complete with mounting screws and washers	3.50
8876	Support—Lid support	2.00
8877	Turntable—Turntable with cover	4.60
8880	Arm—Pickup arm complete less pickup unit	6.00
8887	Motor—Motor complete—220 volts—60 cycles	19.85
8888	Motor—Motor complete—220 volts—50 cycles	19.85
10174	Springs—Automatic brake springs—Set of 4 springs—Package of 2 sets	.50
10184	Plate—Automatic brake trip plate complete with screws—Package of 5	.60
	CABINET ASSEMBLY	
X-14	Board—Baffle board and grille cloth	1.30
X-16	Stretcher	4.70
X-17	Foot	1.00
X-18	Leg	3.55
X-19	Lid	12.00
X-21	Overlay—Front top rail end overlay—R. H. or L. H.	1.25
X-22	Overlay—Front top rail center overlay	2.65
X-23	Mouldings—Control panel mouldings—Package of 1 set	1.60
X-85	Escutcheon—Tuning dial escutcheon	1.15
X-86	Panel—Control panel	6.90
X-87	Doors—R. H. and L. H. doors complete less door pulls and hinges—Package of 1 set	8.00
X-88	Mouldings—Door mouldings for R. H. and L. H. doors—Package of 1 set	3.00
2776	Catch—Door catch and strike with nail—Package of 2 sets	.50
3156	Label—Metal trade mark label—Package of 5	2.50
6210	Hinge assembly—Door hinge assembly—Comprising 4 hinges and 16 mounting screws—Package of 1 set	.90
6211	Pull—Door pull with mounting screw—Package of 4.	1.20
6219	Hinge—Cabinet lid hinge complete with mounting screws—Package of 2	.50
6236	Support—Metal screen support	.50
9410	Cabinet—Cabinet complete less equipment	83.00
10901	Spring—Lid support spring—Package of 2	.50

MODEL RE-19 AC (AVC)
Schematic
Chassis

R. C. A. VICTOR CO., INC.

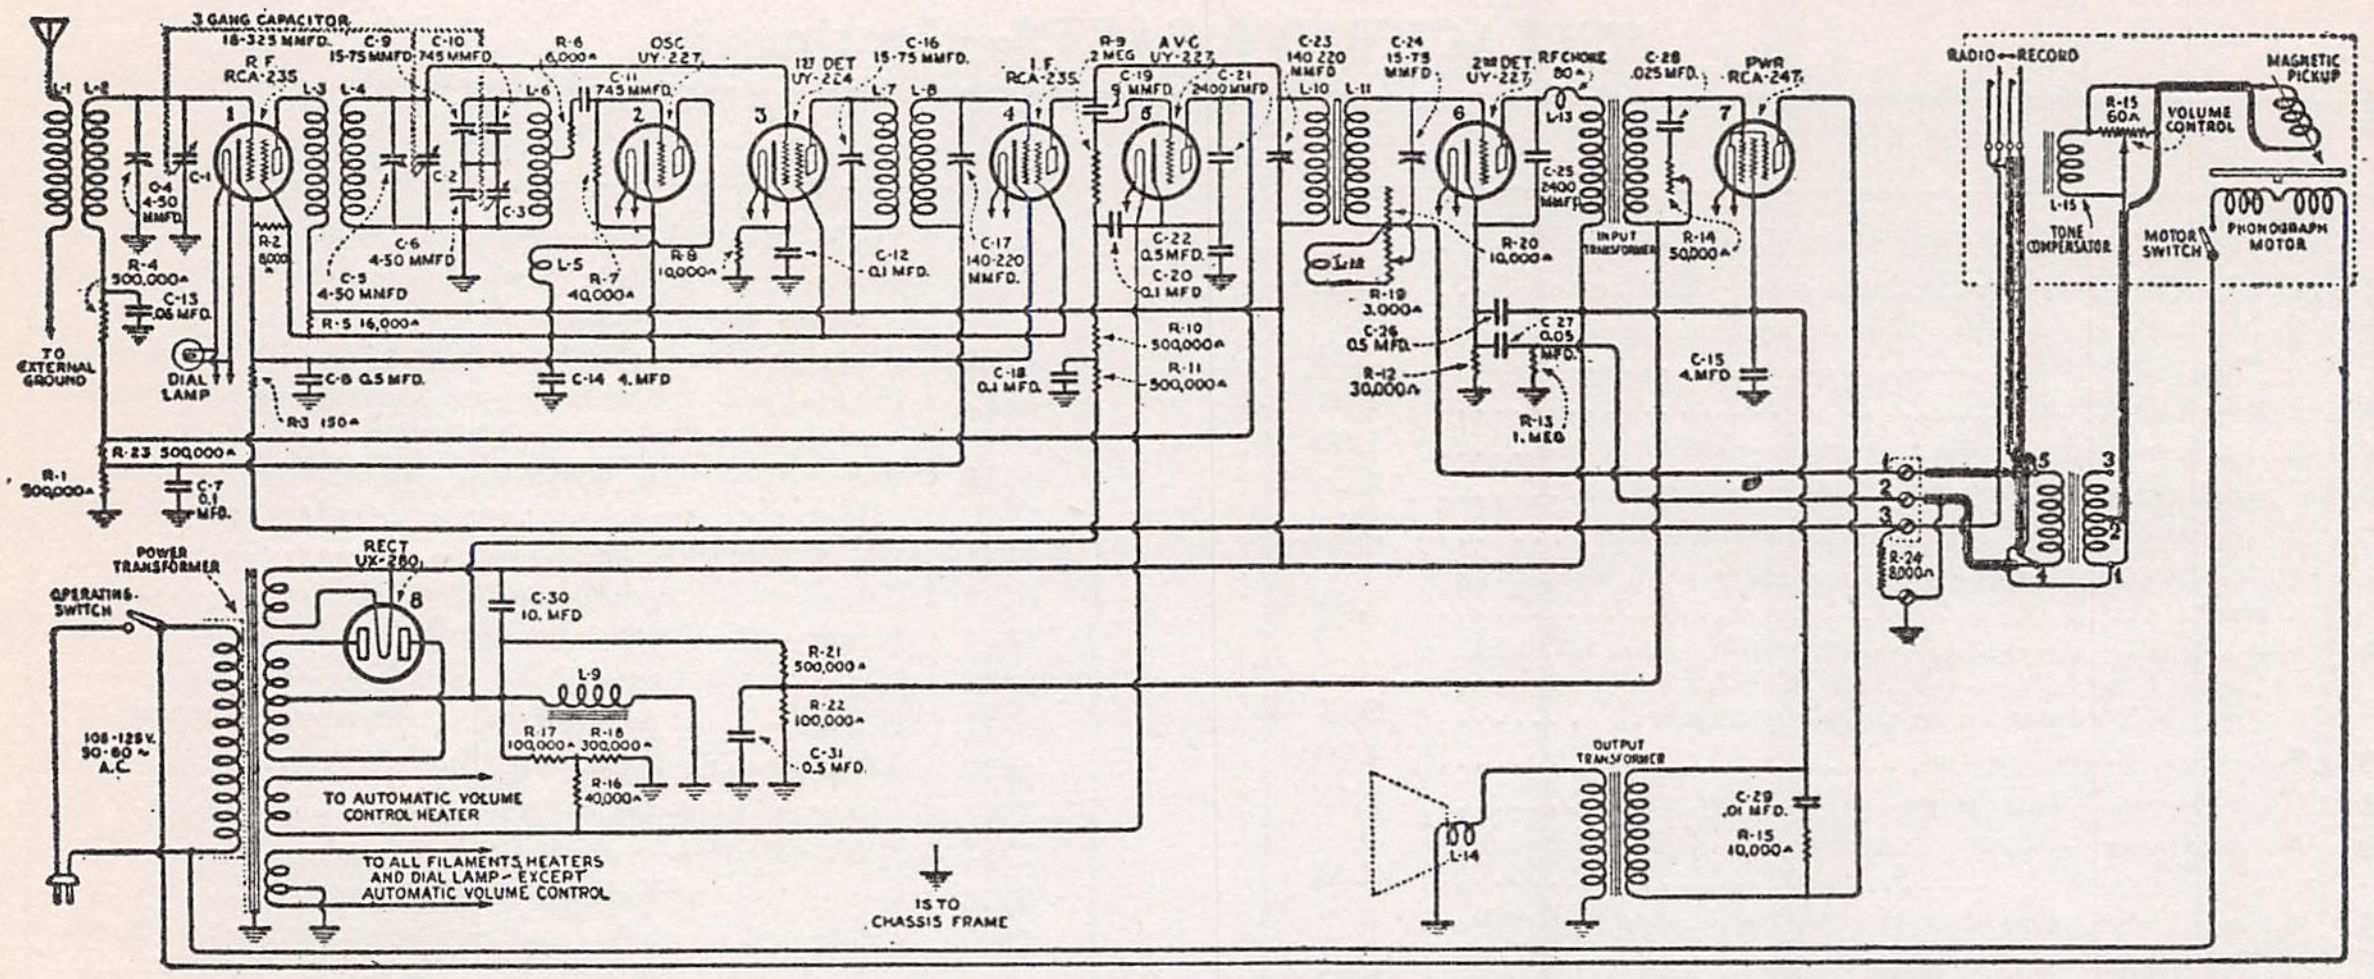
3 GANG CAPACITOR 18-323 MMFD.
R F RCA-235
OSC UY-227
1ST DET UY-224
I F RCA-235
A V C UY-227
2ND DET UY-227
PWR RCA-247
RF CHOKE 80Ω
RADIO—RECORD
MAGNETIC PICKUP
VOLUME CONTROL
TONE COMPENSATOR
MOTOR SWITCH
PHONOGRAPH MOTOR
TO EXTERNAL GROUND
DIAL LAMP
POWER TRANSFORMER
OPERATING SWITCH
105-125 V. 50-60 ~ A.C.
RECT UX-280
TO AUTOMATIC VOLUME CONTROL HEATER
TO ALL FILAMENTS, HEATERS AND DIAL LAMP—EXCEPT AUTOMATIC VOLUME CONTROL
IS TO CHASSIS FRAME
INPUT TRANSFORMER
OUTPUT TRANSFORMER

Schematic Circuit

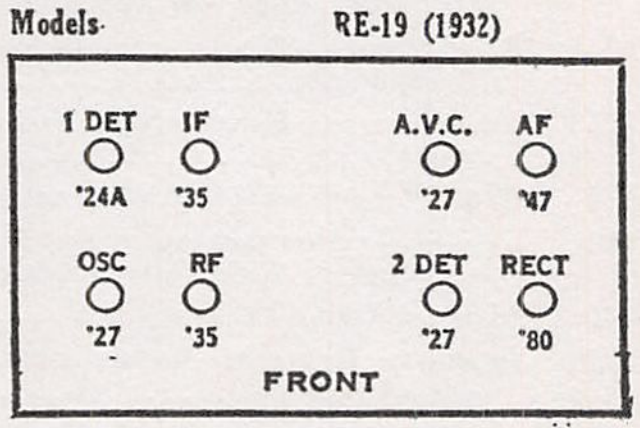
Models
RE-19 (1932)
1 DET
'24A
IF
'35
A.V.C.
'27
AF
'47
OSC
'27
RF
'35
2 DET
'27
RECT
'80
FRONT

IF PEAK 175 KC.

Voltage Rating.................105–125 Volts
Frequency Rating......25, 30, 50 or 60 Cycles
Power Consumption......25 ~ 135 Watts, 30 ~ 140 Watts, 50 ~ 135 Watts, 60 ~ 130 Watts

RCA Victor RE-19 is an eight tube Super-Heterodyne combination radio receiver and electric phonograph. The chassis used is similar to the R-12 with the exception that terminals for attaching a magnetic pickup are provided. The motor board assembly is similar to the RE-18. Reference to previous RCA Victor Service Notes should be made for service information relative to these assemblies. The replacement parts are given below and the diagrams on the following pages.

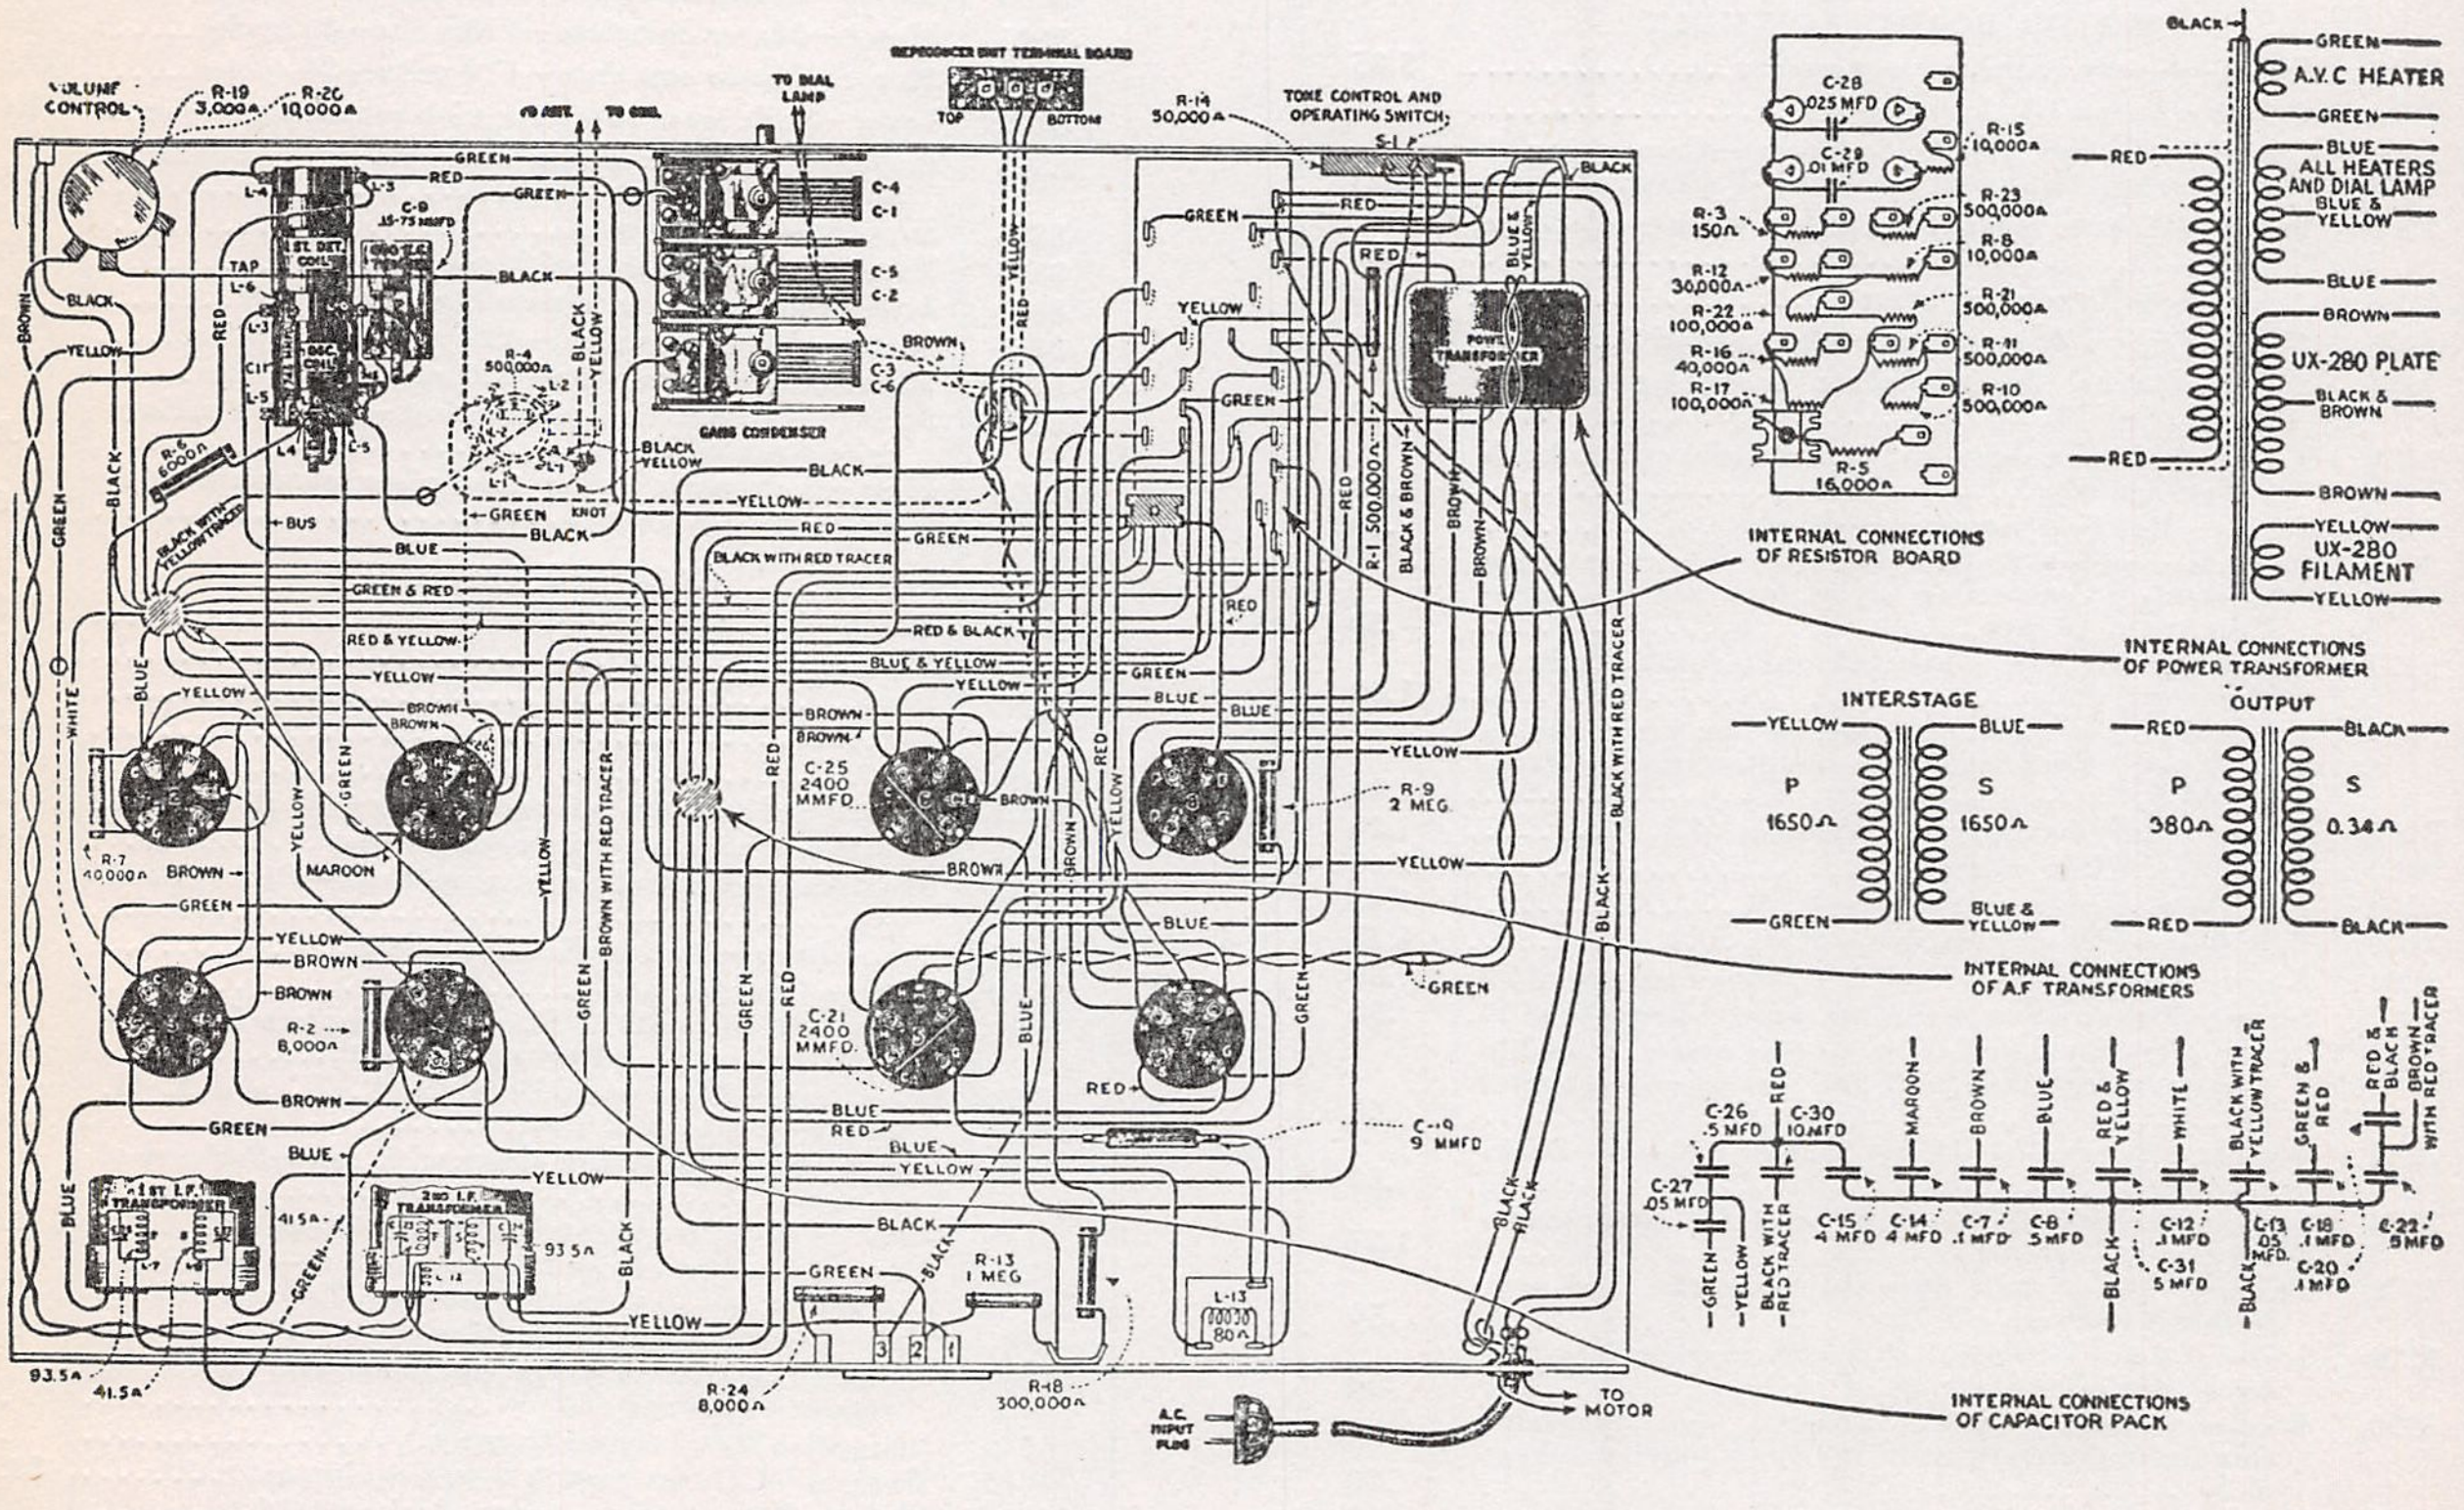
VOLUME CONTROL
REPRODUCER UNIT TERMINAL BOARD
TO DIAL LAMP
TONE CONTROL AND OPERATING SWITCH
GANG CONDENSER
POWER TRANSFORMER
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
A.C. INPUT PLUG
TO MOTOR
INTERNAL CONNECTIONS OF RESISTOR BOARD
A.V.C HEATER
ALL HEATERS AND DIAL LAMP
UX-280 PLATE
UX-280 FILAMENT
INTERNAL CONNECTIONS OF POWER TRANSFORMER
INTERSTAGE
P 1650Ω
S 1650Ω
OUTPUT
P 380Ω
S 0.34Ω
INTERNAL CONNECTIONS OF A.F TRANSFORMERS
INTERNAL CONNECTIONS OF CAPACITOR PACK

R. C. A. - VICTOR CO., INC.

MODEL RE-19 AC (AVC)
Assembly Wiring
Parts List

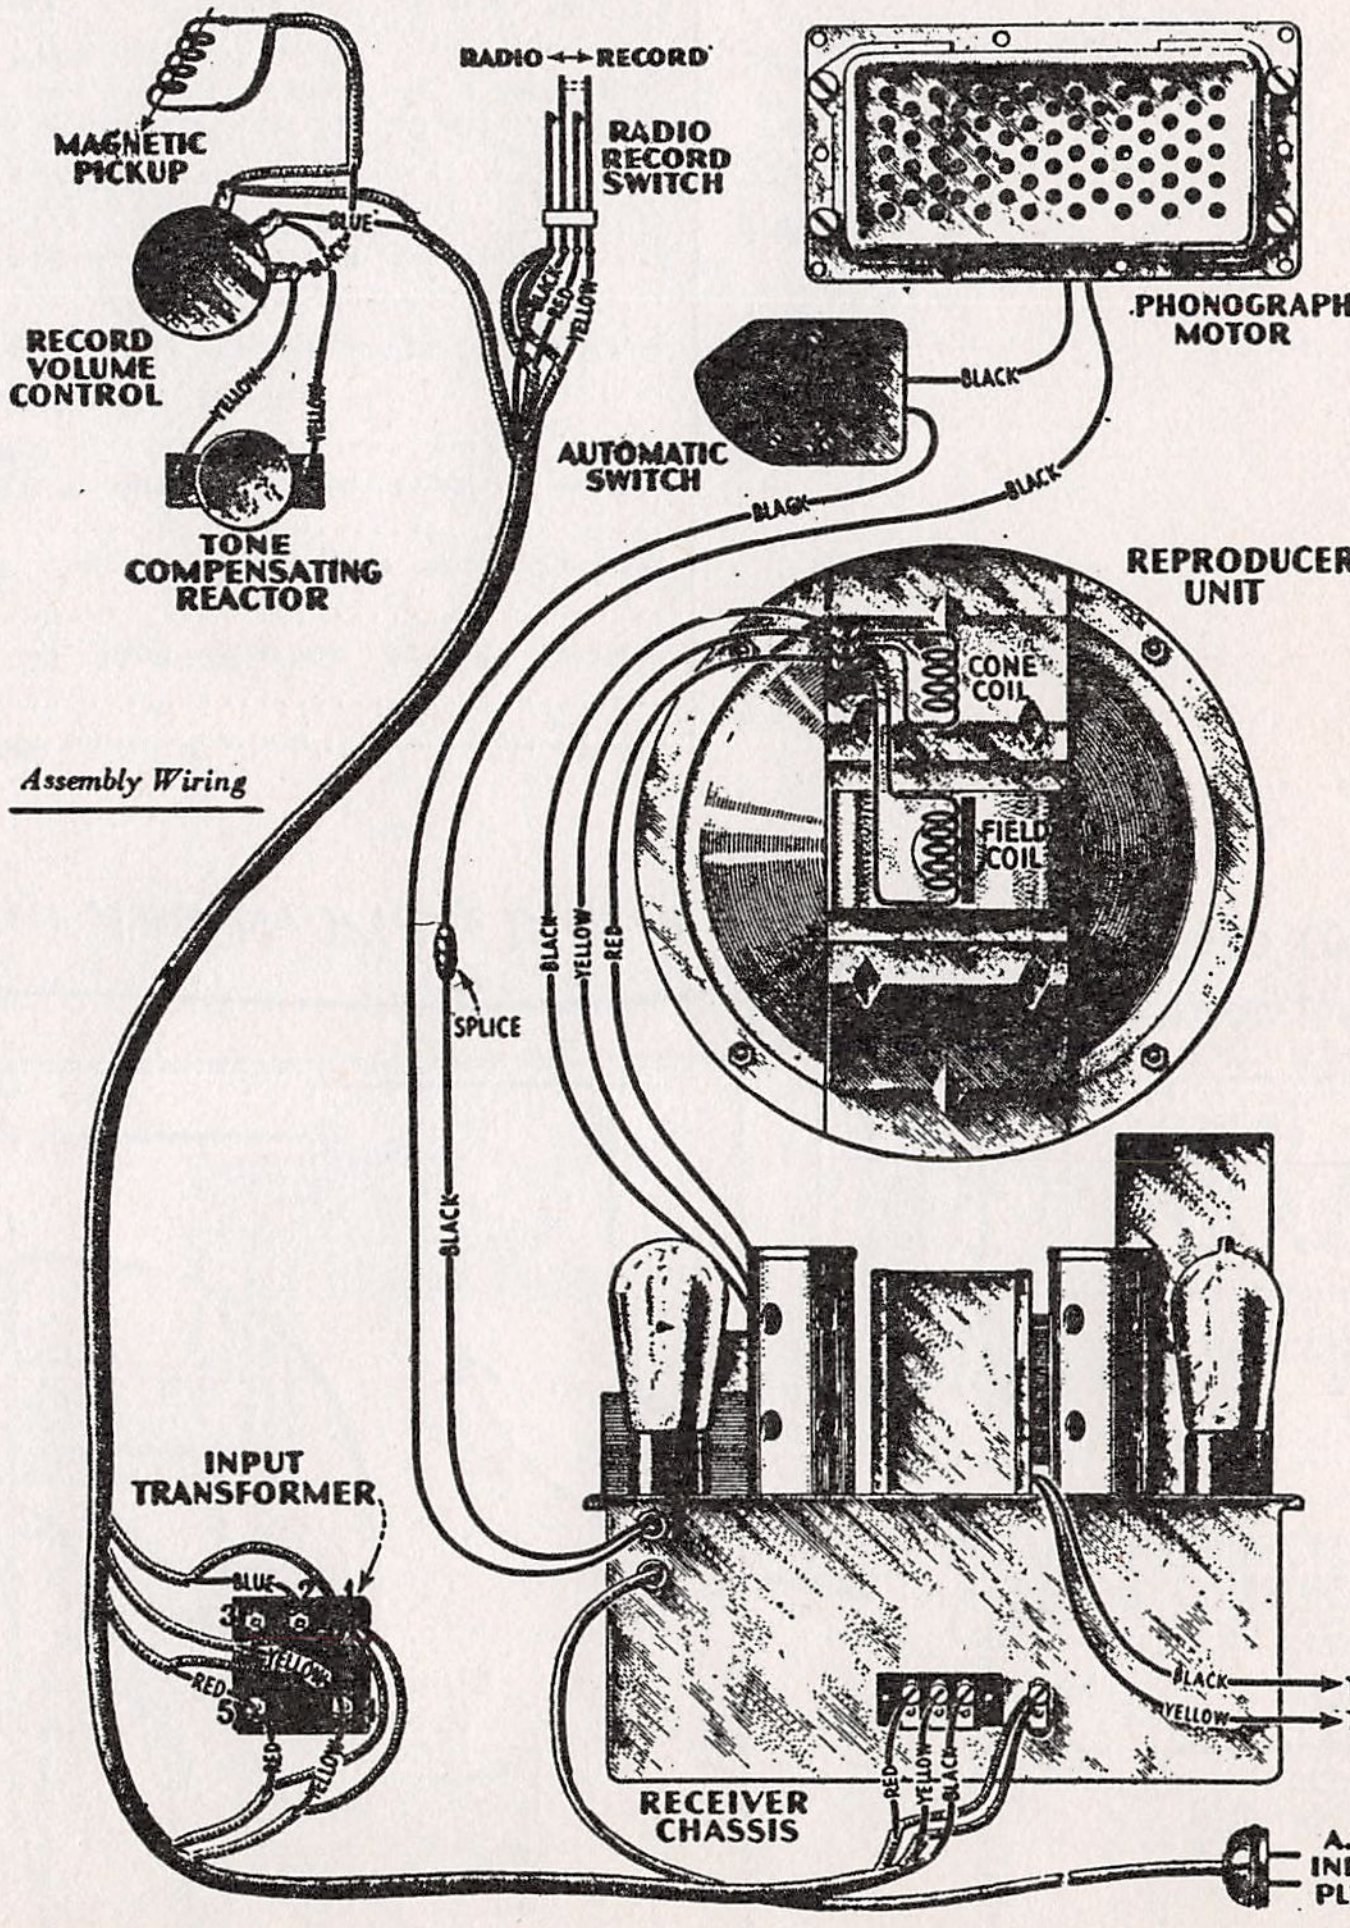

Assembly Wiring

RECEIVER ASSEMBLY

2563	Resistor—6,000 ohms—Carbon type—1 watt—Package of 5	$3.00
2734	Capacitor—745 mmfd.—Package of 5	2.20
2746	Socket—Dial lamp socket	.50
2747	Cap—Grid contactor cap—Package of 5	.50
2749	Capacitor—2400 mmfd.	1.50
2875	Knob—Tuning control, volume control or tone control knob—Package of 5	1.50
2882	Socket—Five contact Radiotron socket—Complete with insulator—7 used	.50
2963	Resistor—8,000 ohms—Carbon type—1 watt—Package of 5	2.50
2968	Socket—Four contact Radiotron socket complete with insulator	.50
2970	Resistor—500,000 ohms—Carbon type—1 watt—Package of 5	2.50
3003	Cushion—Receiver sponge rubber cushion—Package of 4	.50
3024	Capacitor—9 mmfd.—Package of 2	.50
3045	Resistor—40,000 ohms—Carbon type—1 watt—Package of 5	2.50
3048	Resistor—500,000 ohms—Carbon type—½ watt—Package of 5	2.50
3049	Resistor—150 ohms—Carbon type—½ watt—Package of 5	2.50
3056	Shield—Radiotron shield—4 used—Package of 2	.50
3076	Resistor—1 megohm—Carbon type—½ watt—Package of 5	2.50
3077	Resistor—30,000 ohms—Carbon type—½ watt—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type—½ watt—Package of 5	2.50
3079	Resistor—40,000 ohms—Carbon type—½ watt—Package of 5	2.50
3081	Resistor—16,000 ohms—Carbon type—3 watts	.60
3092	Volume control—Volume control complete with mounting nut	1.50
3095	Coil—R.F. coil complete with mounting bracket	1.90
3234	Tone control—Tone control complete with mounting nut	1.90
3235	Coil—First detector and oscillator coil	2.85
3251	Coil—R.F. choke coil	$0.90
6179	Terminal—Single ground terminal—Complete with mounting rivet—Package of 5	.50
6185	Resistor—100,000 ohms—Carbon type—½ watt—Package of 5	2.00
6186	Resistor—500,000 ohms—Carbon type—¼ watt—Package of 5	2.00
6187	Resistor—300,000 ohms—Carbon type—½ watt—Package of 5	2.00
6188	Resistor—2 megohm—Carbon type—½ watt—Package of 5	2.00
6189	Bracket—Dial lamp bracket and indicator—Package of 2	.65
6191	Cord—Tuning condenser drive cord—Package of 5	.55
6192	Spring—Dial drum drive cord tension spring—Package of 10	.50
6214	Board—Magnetic pickup terminal board—Package of 2	.70
7054	Cord—Power cord	1.00
7062	Capacitor—Adjustable capacitor—15-70 mmfd.	1.00
7298	Capacitor—0.01 mfd.	.80
7340	Transformer—First intermediate transformer	3.00
7341	Transformer—Second intermediate transformer	3.00
7342	Capacitor—Comprising two 0.05 mfd., four 0.5 mfd., one 10.0 mfd., two 4.0 mfd., and four 0.1 mfd. capacitors in metal container	7.85
7343	Transformer—Audio transformer	3.85
7344	Transformer—Power transformer—105-125 volts, 50-60 cycles	8.00
7348	Board—Resistor board complete less resistors and capacitors	2.30
7362	Capacitor—0.025 mfd.	1.00
7438	Capacitor—Variable tuning capacitor	5.20
7439	Drum—Dial drive drum with set screws complete with 3 dial scale mounting nuts	.50
7440	Scale—Dial and dial scale	.75
8770	Transformer—Power transformer—105-125 volts, 25-40 cycles	12.00
8771	Transformer—Power transformer—220 volts, 60 cycles	9.00
8837	Support—Receiver metal mounting support—Package of 4	.70

LOUDSPEAKER ASSEMBLY

3005	Screw assembly—Speaker mounting screw assembly—Comprising 4 screws, 4 eyelets, 8 washers and 8 nuts—Package of 1 set	$0.50
7345	Coil assembly—Speaker field coil assembly—Comprising field coil, magnet and cone bracket	5.00
8601	Cone—Speaker paper cone—Package of 5	15.00
8559	Ring—Speaker cone retaining ring	.80

MOTOR BOARD ASSEMBLY

X68	Board—Motor board	4.00
2614	Switch—Automatic brake switch	1.40
2620	Cushions—Pickup rubber cushions—Comprising one damper and two pivot cushions—Package of 5 sets	1.25
2767	Spring—Pickup magnet retaining spring—Package of 10	.50
2768	Armature—Pickup armature	.50
2770	Plate—Pickup damper plate—Package of 5	.50
2771	Screw—Pickup damper plate mounting screw—Package of 10	.50
2875	Knob—Record switch knob—Package of 5	1.50
2908	Spring—Gear reducing pawl spring—Package of 10	.50
3052	Screw assembly—Pickup pole shoe mounting screw assembly—Comprising nut, washer and screw—Package of 10 sets	.50
3157	Gear—Driving gear with set screw—Located on turntable spindle above top plate	1.00
3159	Friction brake—Gear reducing brake spring and pad—Complete with mounting rivets—Package of 4	2.00
3161	Spring—Shift lever spring—Package of 5	1.20
3167	Magnet—Pickup magnet	2.60
3168	Coil—Pickup coil	.85
3169	Pole shoe—Pickup pole shoe—R.H.	1.45
3170	Pole shoe—Pickup pole shoe—L.H.	1.45
3175	Receptacle—Tungstone needle box receptacle	.75
3189	Box—Needle box with lid—Package of 2	.70
3205	Screw—Pickup needle holding screw—Package of 10	.80
3207	Screw—Pickup cover mounting screw—Package of 10	.50
3208	Screw assembly—Pickup mounting screw assembly Comprising one screw, one nut, and one washer—Package of 10	.60
3211	Washer—Turntable spindle leather washer—Package of 10.	.50
3224	Switch—Record switch complete with mounting washer and nut	1.35
3278	Bearing—Rotor shaft fibre thrust bearing and cork button—Package of 10	.50
3279	Screw and nut—Rotor shaft thrust bearing adjusting screw and lock nut—Package of 10	.50
3280	Washer—Metal washer—Located on turntable spindle underneath gear reducing unit—Package of 20	.50
3281	Pawl—Gear reducing pawl complete with mounting stud	.50
6119	Stud—Motor hanging stud—Package of 6	.50
6120	Screw—For holding turntable spindle bearing and grease cap—Package of 10	.50
6121	Bearing—Turntable spindle bearing and grease cap	1.10
6215	Escutcheon—Shift lever speed escutcheon plate—Complete with mounting screws—Package of 2	.70
6216	Rod—Automatic brake trip rod with lock nut—Package of 5	$0.50
6217	Pickup—Pickup unit complete	12.50
6218	Screw and washer—Motor board mounting screw and washer—Package of 10	.50
6221	Cover—Pickup cover	.75
7084	Cover—Turntable cover	.50
7151	Back—Pickup housing back	.50
7305	Gear reducing unit complete	4.50
7387	Reactor—Compensating reactor with mounting bracket	.85
7388	Spindle—Turntable spindle with fibre gear—110 or 220 volts—60 cycles	6.00
7389	Rotor and shaft—110 or 220 volts—60 cycles	9.00
7390	Spring and washer—Motor mounting springs and washers—Comprising 9 cup washers, 3 "C" washers and 6 springs—Package of 1 set	.75
7393	Block—Pickup connector block and wire	.90
7400	Spindle—Turntable spindle with fibre gear—25 cycles	8.00
7401	Rotor and shaft—25 cycles	10.00
7402	Spindle—Turntable spindle with fibre gear—30 cycles	8.00
7403	Rotor and shaft—30 cycles	10.00
7443	Rotor and shaft—110 or 220 volts—50 cycles	9.00
7444	Spindle—Turntable spindle with fibre gear—110 or 220 volts—50 cycles	6.00
7445	Transformer—Input transformer	4.55
8795	Motor—Motor complete, 110 volts, 60 cycles	19.85
8800	Motor—Motor complete—25 cycles	24.65
8801	Motor—Motor complete—30 cycles	24.65
8856	Motor—Motor complete—110 volts—50 cycles	19.85
8872	Shift lever—Speed shift lever complete with mounting screws	1.60
8873	Brake—Automatic brake complete with mounting screws and washers	3.50
8874	Arm—Pickup arm complete less pickup unit	6.00
8875	Cable—Main cable from input transformer to volume control, record switch and receiver	2.20
8876	Support—Lid support	2.00
8877	Turntable—Turntable with cover	4.60
8887	Motor—Motor complete—220 volts—60 cycles	19.85
8888	Motor—Motor complete—220 volts—50 cycles	19.85
10174	Spring—Automatic brake springs—Set of 4 springs—Package of 2 sets	.50
10184	Plate—Automatic brake latch trip plate complete with mounting screws—Package of 5	.60

MODEL RE-20 Electrola
Chassis - Parts List

R. C. A. - VICTOR CO. INC.

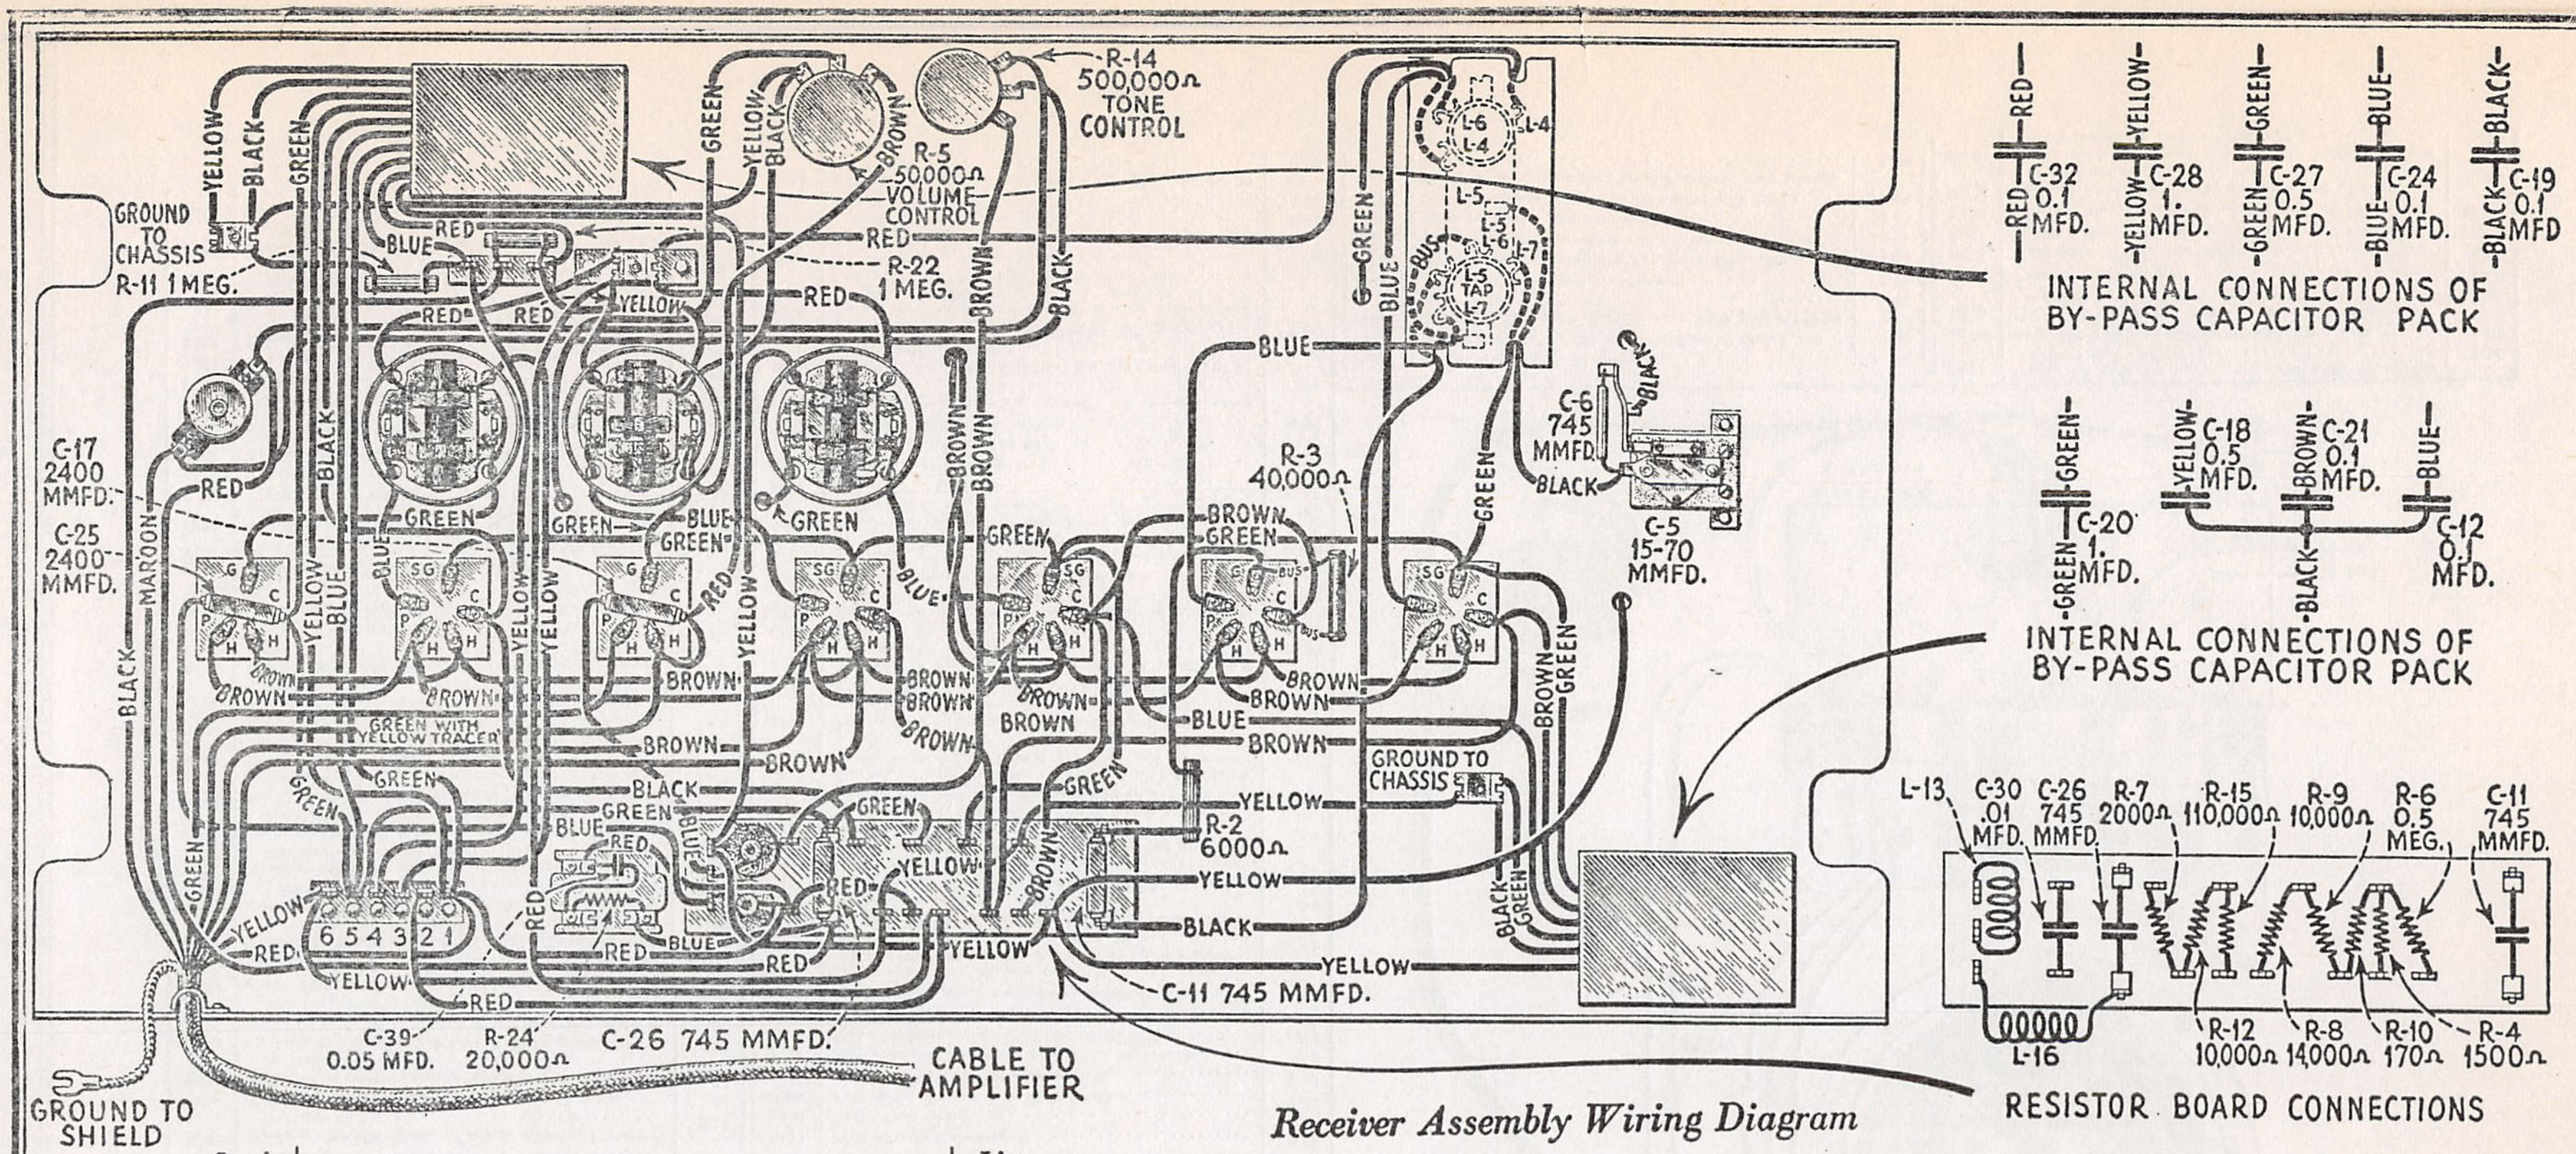
INTERNAL CONNECTIONS OF BY-PASS CAPACITOR PACK
RED
C-32 0.1 MFD.
YELLOW
C-28 1. MFD.
GREEN
C-27 0.5 MFD.
BLUE
C-24 0.1 MFD.
BLACK
C-19 0.1 MFD
INTERNAL CONNECTIONS OF BY-PASS CAPACITOR PACK
C-20 1. MFD.
C-18 0.5 MFD.
C-21 0.1 MFD.
C-12 0.1 MFD.
BROWN
RESISTOR BOARD CONNECTIONS
L-13
C-30 .01 MFD.
C-26 745 MMFD.
R-7 2000Ω
R-15 110,000Ω
R-9 10,000Ω
R-6 0.5 MEG.
C-11 745 MMFD.
L-16
R-12 10,000Ω
R-8 14000Ω
R-10 170Ω
R-4 1500Ω
R-14 500,000Ω TONE CONTROL
R-5 50,000Ω VOLUME CONTROL
R-22 1 MEG.
GROUND TO CHASSIS
R-11 1 MEG.
C-17 2400 MMFD.
C-25 2400 MMFD.
MAROON
GREEN WITH YELLOW TRACER
L-6
L-4
L-5
L-7
L-5 TAP
BUS
C-6 745 MMFD.
C-5 15-70 MMFD.
R-3 40,000Ω
SG
C
P
H
GROUND TO CHASSIS
R-2 6000Ω
6 5 4 3 2 1
C-11 745 MMFD.
C-39 0.05 MFD.
R-24 20,000Ω
C-26 745 MMFD.
CABLE TO AMPLIFIER
GROUND TO SHIELD

Receiver Assembly Wiring Diagram

Stock No.	DESCRIPTION	List Price
	RECEIVER ASSEMBLY	
2563	Resistor—6,000 ohms—Carbon type—1 watt—Package of 5	$3.00
2726	Socket—Five contact Radiotron socket—Complete with insulator—7 used	.70
2731	Resistor—10,000 ohms—Carbon type—1 watt—Package of 5	2.00
2732	Resistor—110,000 ohms—Carbon type—1 watt—Package of 5	2.00
2736	Resistor—170 ohms—Carbon type—1 watt—Package of 5	2.00
2749	Capacitor—2400 mmfd.	1.50
2970	Resistor—500,000 ohms—Carbon type—1 watt—Package of 5	2.50
3031	Board—Terminal board complete with insulator—Three terminals	.50
3033	Resistor—1 megohm—Carbon type—¼ watt—Package of 5	2.00
3045	Resistor—40,000 ohms—Carbon type—1 watt—Package of 5	2.50
3050	Resistor—14,000 ohms—Carbon type—3 watt	.60
3153	Resistor—1500 ohms—Carbon type—1 watt—Package of 5	2.75
3154	Resistor—2,000 ohms—Carbon type—1 watt—Package of 5	2.75
3220	Resistor—15 ohms—Flexible wire type—Package of 5	2.75
6114	Resistor—20,000 ohms—Carbon type—1 watt—Package of 5	2.00
6220	Capacitor—0.05 mfd.—Package of 5	1.10
7062	Capacitor—Adjustable capacitor—15–70 mmfd.—2 used	1.00
7063	Capacitor—Adjustable capacitor 5–40 mmfd.—3 used	1.00
7278	Coil—R. F. and link circuit coil	2.50
7285	Capacitor pack—Comprising one 1.0 mfd., one 0.5 mfd., and two 0.1 mfd. capacitors in metal container—6 leads	3.50
7286	Capacitor pack—Comprising one 1.0 mfd., one 0.5 mfd., and three 0.1 mfd. capacitors in metal container—10 leads	4.50
7298	Capacitor—0.01 mfd.	.80
7299	Capacitor—745 mfd.	.70

R. C. A. VICTOR CO., INC.

MODEL RE-20 Electrola Schematic

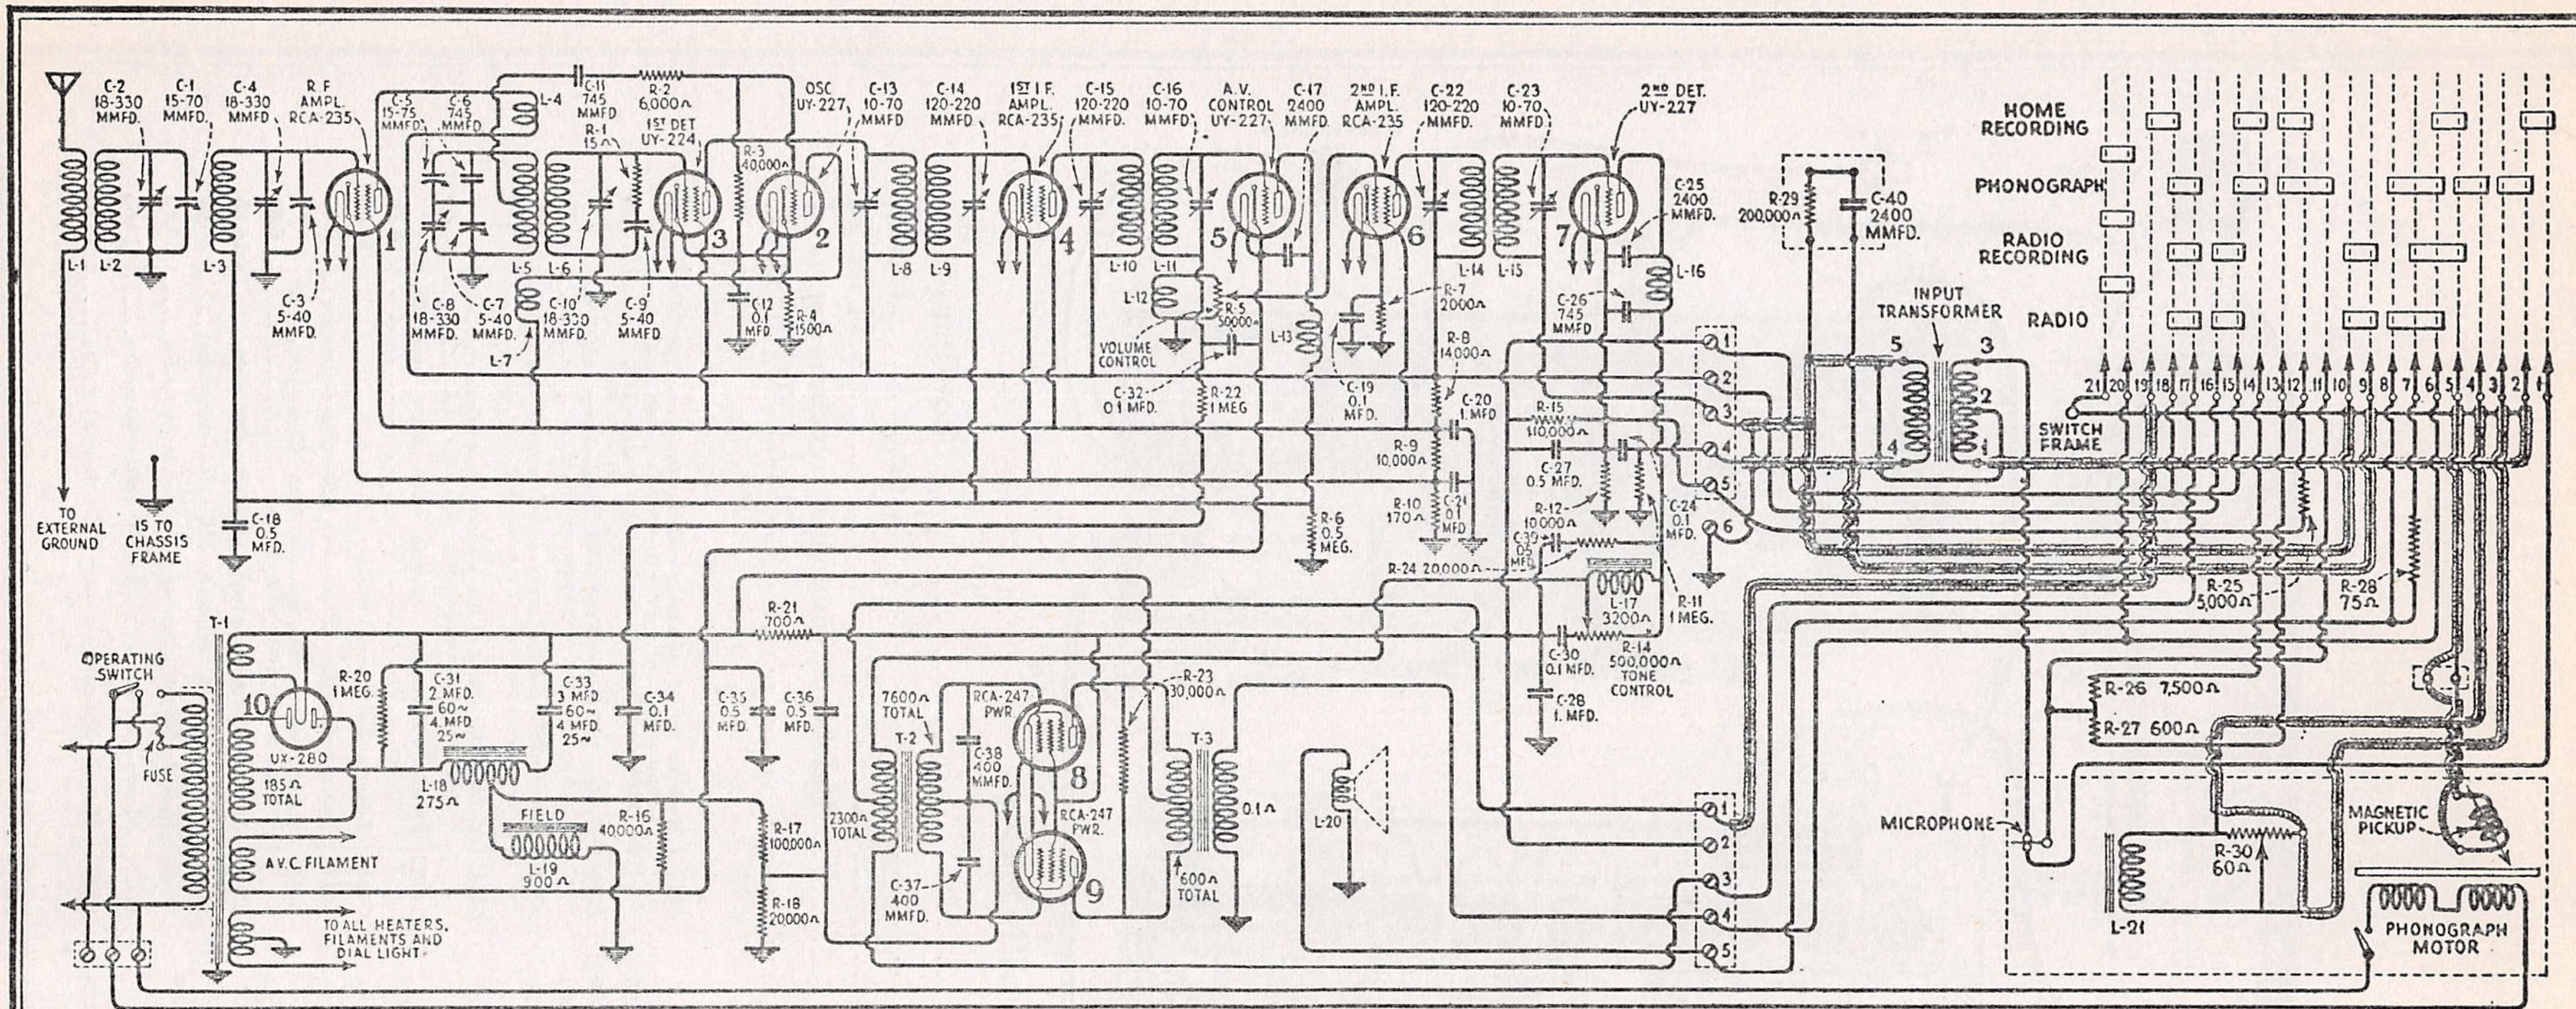
C-2 18-330 MMFD.
C-1 15-70 MMFD.
C-4 18-330 MMFD.
R F AMPL. RCA-235
C-5 15-75 MMFD.
C-6 745 MMFD.
C-11 745 MMFD
R-2 6,000Ω
R-1 15Ω
1ST DET UY-224
OSC UY-227
C-13 10-70 MMFD
C-14 120-220 MMFD
1ST I.F. AMPL. RCA-235
C-15 120-220 MMFD.
C-16 10-70 MMFD
A.V. CONTROL UY-227
C-17 2400 MMFD
2ND I.F. AMPL. RCA-235
C-22 120-220 MMFD.
C-23 10-70 MMFD
2ND DET. UY-227
C-25 2400 MMFD.
R-29 200,000Ω
C-40 2400 MMFD.
HOME RECORDING
PHONOGRAPH
RADIO RECORDING
RADIO
INPUT TRANSFORMER
SWITCH FRAME
L-1
L-2
L-3
L-4
L-5
L-6
L-7
L-8
L-9
L-10
L-11
L-12
L-13
L-14
L-15
L-16
C-3 5-40 MMFD.
C-8 18-330 MMFD.
C-7 5-40 MMFD.
C-10 18-330 MMFD.
C-9 5-40 MMFD
R-3 40,000Ω
C-12 0.1 MFD
R-4 1500Ω
VOLUME CONTROL
R-5 50,000
C-32 0.1 MFD.
R-22 1 MEG
C-19 0.1 MFD.
R-7 2000Ω
R-8 14000Ω
C-20 1 MFD
C-26 745 MMFD
R-9 10,000Ω
R-10 170Ω
C-21 0.1 MFD
R-15 110,000Ω
C-27 0.5 MFD.
R-12 10,000Ω
C-39 0.1 MFD
C-24 0.1 MFD.
R-11 1 MEG.
R-24 20,000Ω
L-17 3200Ω
R-14 500,000Ω TONE CONTROL
C-30 0.1 MFD.
C-28 1. MFD.
R-6 0.5 MEG.
TO EXTERNAL GROUND
IS TO CHASSIS FRAME
C-18 0.5 MFD.
T-1
OPERATING SWITCH
FUSE
UX-280
R-20 1 MEG.
C-31 2 MFD. 60~ 4 MFD 25~
C-33 3 MFD 60~ 4 MFD 25~
C-34 0.1 MFD.
C-35 0.5 MFD.
C-36 0.5 MFD.
R-21 700Ω
185Ω TOTAL
L-18 275Ω
FIELD
L-19 900Ω
R-16 40000Ω
R-17 100,000Ω
R-18 20000Ω
A.V.C. FILAMENT
TO ALL HEATERS, FILAMENTS AND DIAL LIGHT
7600Ω TOTAL
T-2
2300Ω TOTAL
RCA-247 PWR
C-38 400 MMFD.
RCA-247 PWR.
C-37 400 MMFD.
R-23 30,000Ω
T-3
0.1Ω
600Ω TOTAL
L-20
R-25 5,000Ω
R-28 75Ω
R-26 7,500Ω
R-27 600Ω
MICROPHONE
MAGNETIC PICKUP
R-30 60Ω
L-21
PHONOGRAPH MOTOR

Schematic Circuit

IF PEAK 175 KC.

RCA Victor RE-20 is a ten tube De Luxe Super-Heterodyne combination radio receiver and electric phonograph. Except for the differences in cabinet and omission of the automatic record changing mechanism, the RE-20 is similar to the RAE-59.

Service work in conjunction with this model is similar to that of the R-50, R-55 and RAE-59. Reference to these Service Notes should therefore be made when such information is necessary. The replacement parts and the diagrams are given on the following pages.

Voltage Rating	105–125 Volts
Frequency Rating	25, 30, 50 and 60 Cycles
Power Consumption (Radio only)	145 Watts
Power Consumption (Phonograph)	160 Watts (Approximately)
Type of Circuit	A. V. C. Super-Heterodyne with Push-pull Pentode Output Stage
Type and Number of Radiotrons	3 RCA-235, 1 UY-224, 3 UY-227, 2 RCA-247, 1 UX-280—Total 10
Wattage Dissipation in Loudspeaker Field	10 Watts
Undistorted Output	4.0 Watts

Model RE-20, (1932)

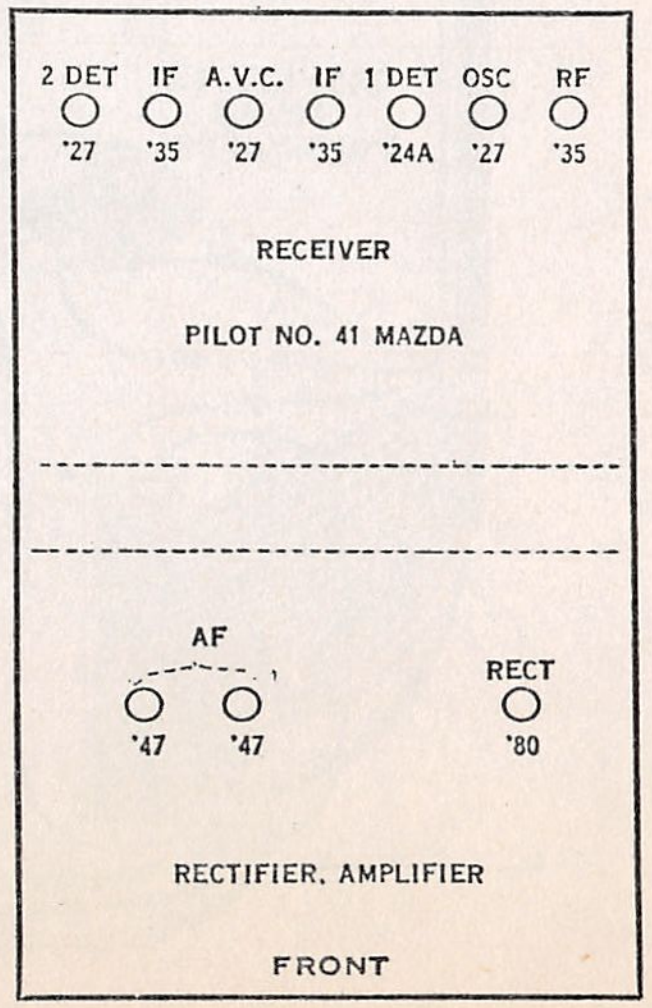
2 DET
'27
IF
'35
A.V.C.
'27
IF
'35
1 DET
'24A
OSC
'27
RF
'35
RECEIVER
PILOT NO. 41 MAZDA
AF
'47
'47
RECT
'80
RECTIFIER, AMPLIFIER
FRONT

MODEL RE-20 Electrola
Assembly Wiring

R. C. A. VICTOR CO., INC.

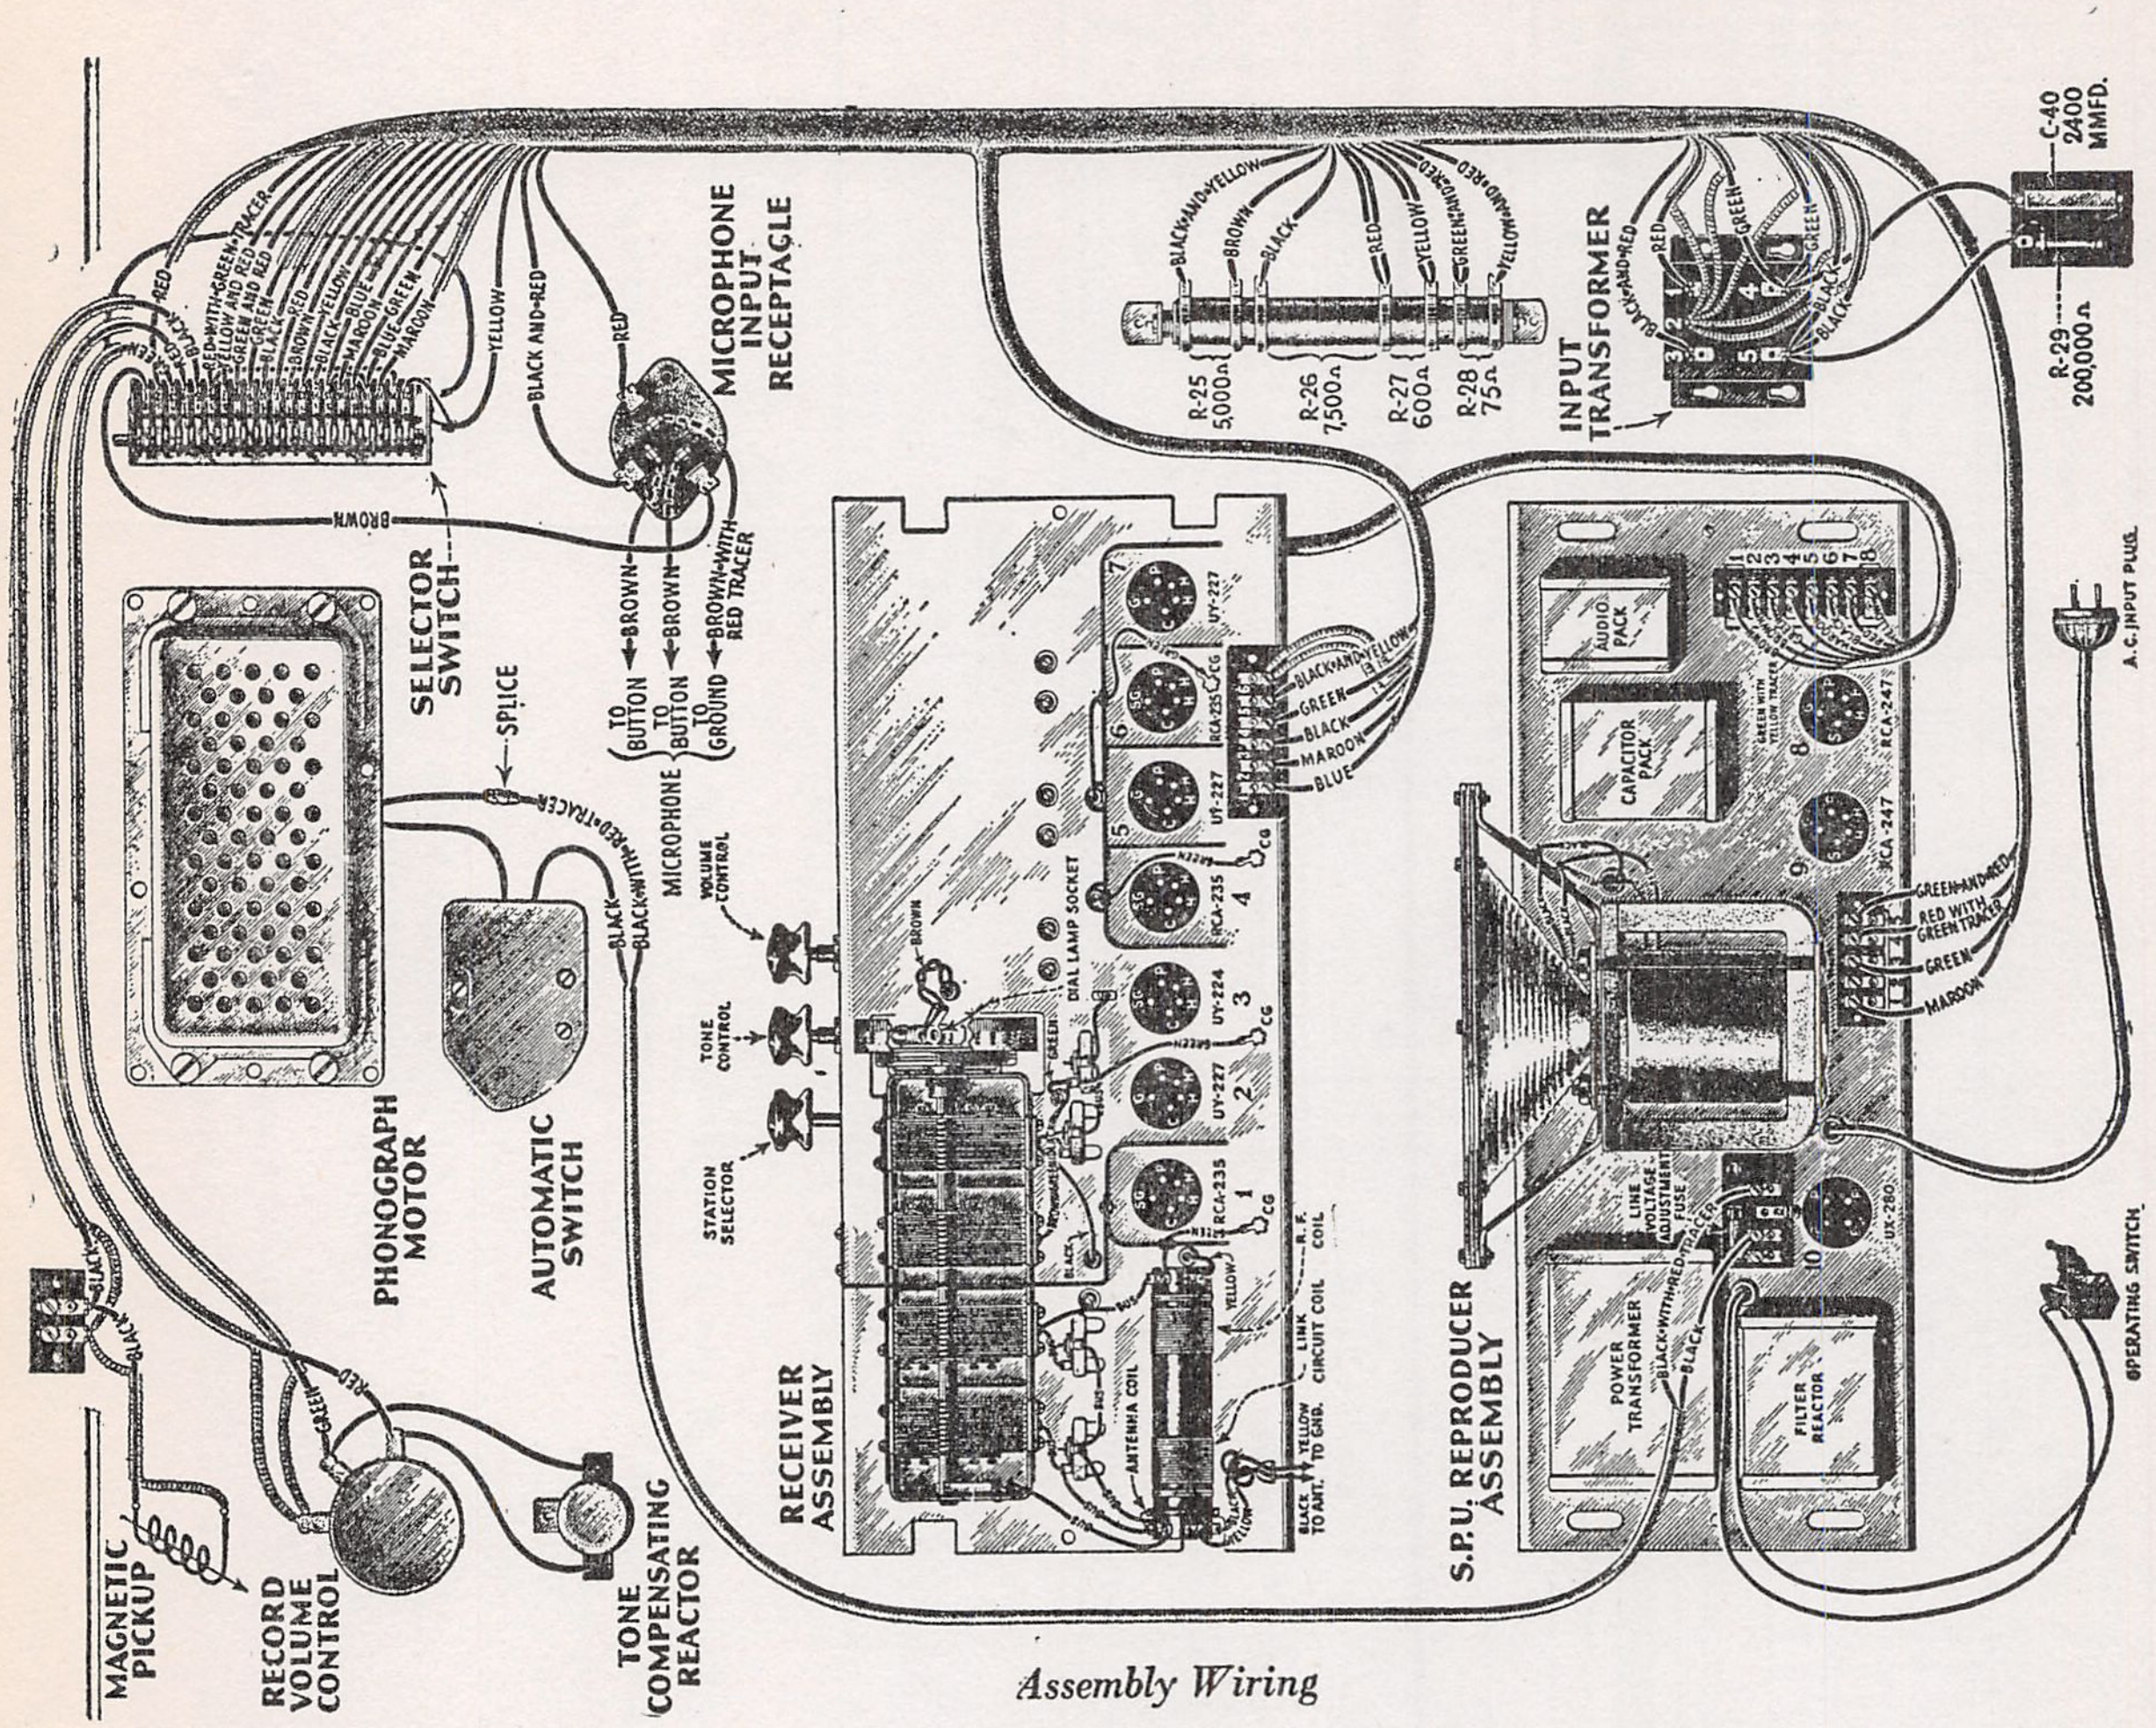
MICROPHONE INPUT RECEPTACLE
SELECTOR SWITCH
SPLICE
TO BUTTON
TO BUTTON
TO GROUND
MICROPHONE
PHONOGRAPH MOTOR
AUTOMATIC SWITCH
MAGNETIC PICKUP
RECORD VOLUME CONTROL
TONE COMPENSATING REACTOR
VOLUME CONTROL
TONE CONTROL
STATION SELECTOR
DIAL LAMP SOCKET
RECEIVER ASSEMBLY
ANTENNA COIL
LINK CIRCUIT COIL
R.F. COIL
BLACK TO ANT.
YELLOW TO GND.
UY-227
RCA-235
UY-224
R-25 5000Ω
R-26 7,500Ω
R-27 600Ω
R-28 75Ω
INPUT TRANSFORMER
C-40 2400 MMFD.
R-29 200,000Ω
A.C. INPUT PLUG
AUDIO PACK
CAPACITOR PACK
RCA-247
UX-280
LINE VOLTAGE ADJUSTMENT FUSE
POWER TRANSFORMER
FILTER REACTOR
S.P.U. REPRODUCER ASSEMBLY
OPERATING SWITCH
BLACK AND YELLOW
BROWN
BLACK
RED
YELLOW
GREEN
MAROON
BLUE
BLACK AND RED
RED WITH GREEN TRACER
GREEN AND RED
BROWN WITH RED TRACER

Assembly Wiring

Type of Magnetic Pickup..Low Impedance
Type of Tone Arm..Inertia
Diameter of Turntable..12 inches
Type of Phonograph Motor..Induction, running at synchronous speed
Turntable Speed..78 and 33⅓ R. P. M.

	LOUDSPEAKER ASSEMBLY	
7292	Screw assembly—Speaker mounting screw assembly—Comprising two screws, two nuts, two washers and one plate—Package of 1 set	.95
8558	Cone—Speaker paper cone	4.00
8559	Ring—Cone retaining ring	.80
8713	Coil—Speaker field coil	5.00
	MOTOR BOARD AND MISCELLANEOUS ASSEMBLIES	
2749	Capacitor—2400 mmfd.	1.50
7327	Mechanism—Microphone mechanism complete with cord	14.95
7375	Resistor—13175 ohms tapped porcelain resistor	2.10
7387	Reactor—Tone compensating reactor complete with mounting bracket	.85
7388	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—60 cycles	6.00
7389	Rotor and shaft—110 volts or 220 volts—60 cycles	9.00
6226	Transformer—Phono input transformer	3.75
6228	Resistor—200,000 ohms—Carbon type—½ watt—Package of 5	2.50
6227	Resistor board assembly—Comprising one 200,000 ohms—Carbon type—¼ watt resistor and one 2400 mmfd. tooth pick capacitor on board	1.35
6229	Cable—30" shielded red cable from selector switch to volume control—Package of 2	.70
6230	Cable—30" shielded green cable from selector switch to volume control—Package of 2	.70
6231	Cable—18" shielded black cable from selector switch to pickup terminal board—Package of 2	.60
7400	Spindle—Turntable spindle with fibre gear—25 cycles	8.00
7401	Rotor and shaft—25 cycles	10.00
7443	Rotor and shaft—110 volts or 220 volts—50 cycles	9.00
7444	Spindle—Turntable spindle with fibre gear—110 volts or 220 volts—50 cycles	6.00
8795	Motor—Motor complete—110 volts—60 cycles	19.85
8800	Motor—Motor complete—110 volts—25 cycles	24.65
8856	Motor—Motor complete—110 volts—50 cycles	19.85
8887	Motor—Motor complete—220 volts—60 cycles	19.85
8888	Motor—Motor complete—220 volts—50 cycles	19.85

R. C. A. VICTOR CO., INC.

MODEL RE-20 Electrola
SPU Chassis

S. P. U. REPRODUCER ASSEMBLY

2240	Resistor—30,000 ohms—Carbon type—1 watt	.70
2546	Fuse—Glass type—1.5 amperes—Package of 5	.50
3045	Resistor—40,000 ohms—Carbon type—1 watt—Package of 5	2.50
3058	Resistor—100,000 ohms—Carbon type—1 watt—Package of 5	2.50
3085	Capacitor—400 mmfd.	.60
3099	Capacitor—0.005 mfd.	.75
3145	Resistor—700 ohms—Carbon type—3 watt	.85
6114	Resistor—20,000 ohms—Carbon type—1 watt—Package of 5	2.00
7290	Reactor—Filter reactor	4.75
8710	Transformer—Power transformer—105-125 volts, 50-60 cycles	12.50
8711	Transformer—Audio transformer	6.60
8712	Capacitor pack—Comprising one 2.0 mfd., one 3.0 mfd., one 0.1 mfd., and two 0.5 mfd. capacitors in metal container—50-60 cycles	7.80
8749	Transformer—Power transformer—105-125 volts, 25-40 cycles	20.50
8750	Transformer—Power transformer—220 volts, 50-60 cycles	13.00
8751	Capacitor pack—Comprising two 4.0 mfd., two 0.5 mfd. and one 0.1 mfd. capacitors in metal container	9.50
10907	Fuse—Glass type—3 amperes—Package of 5	.50

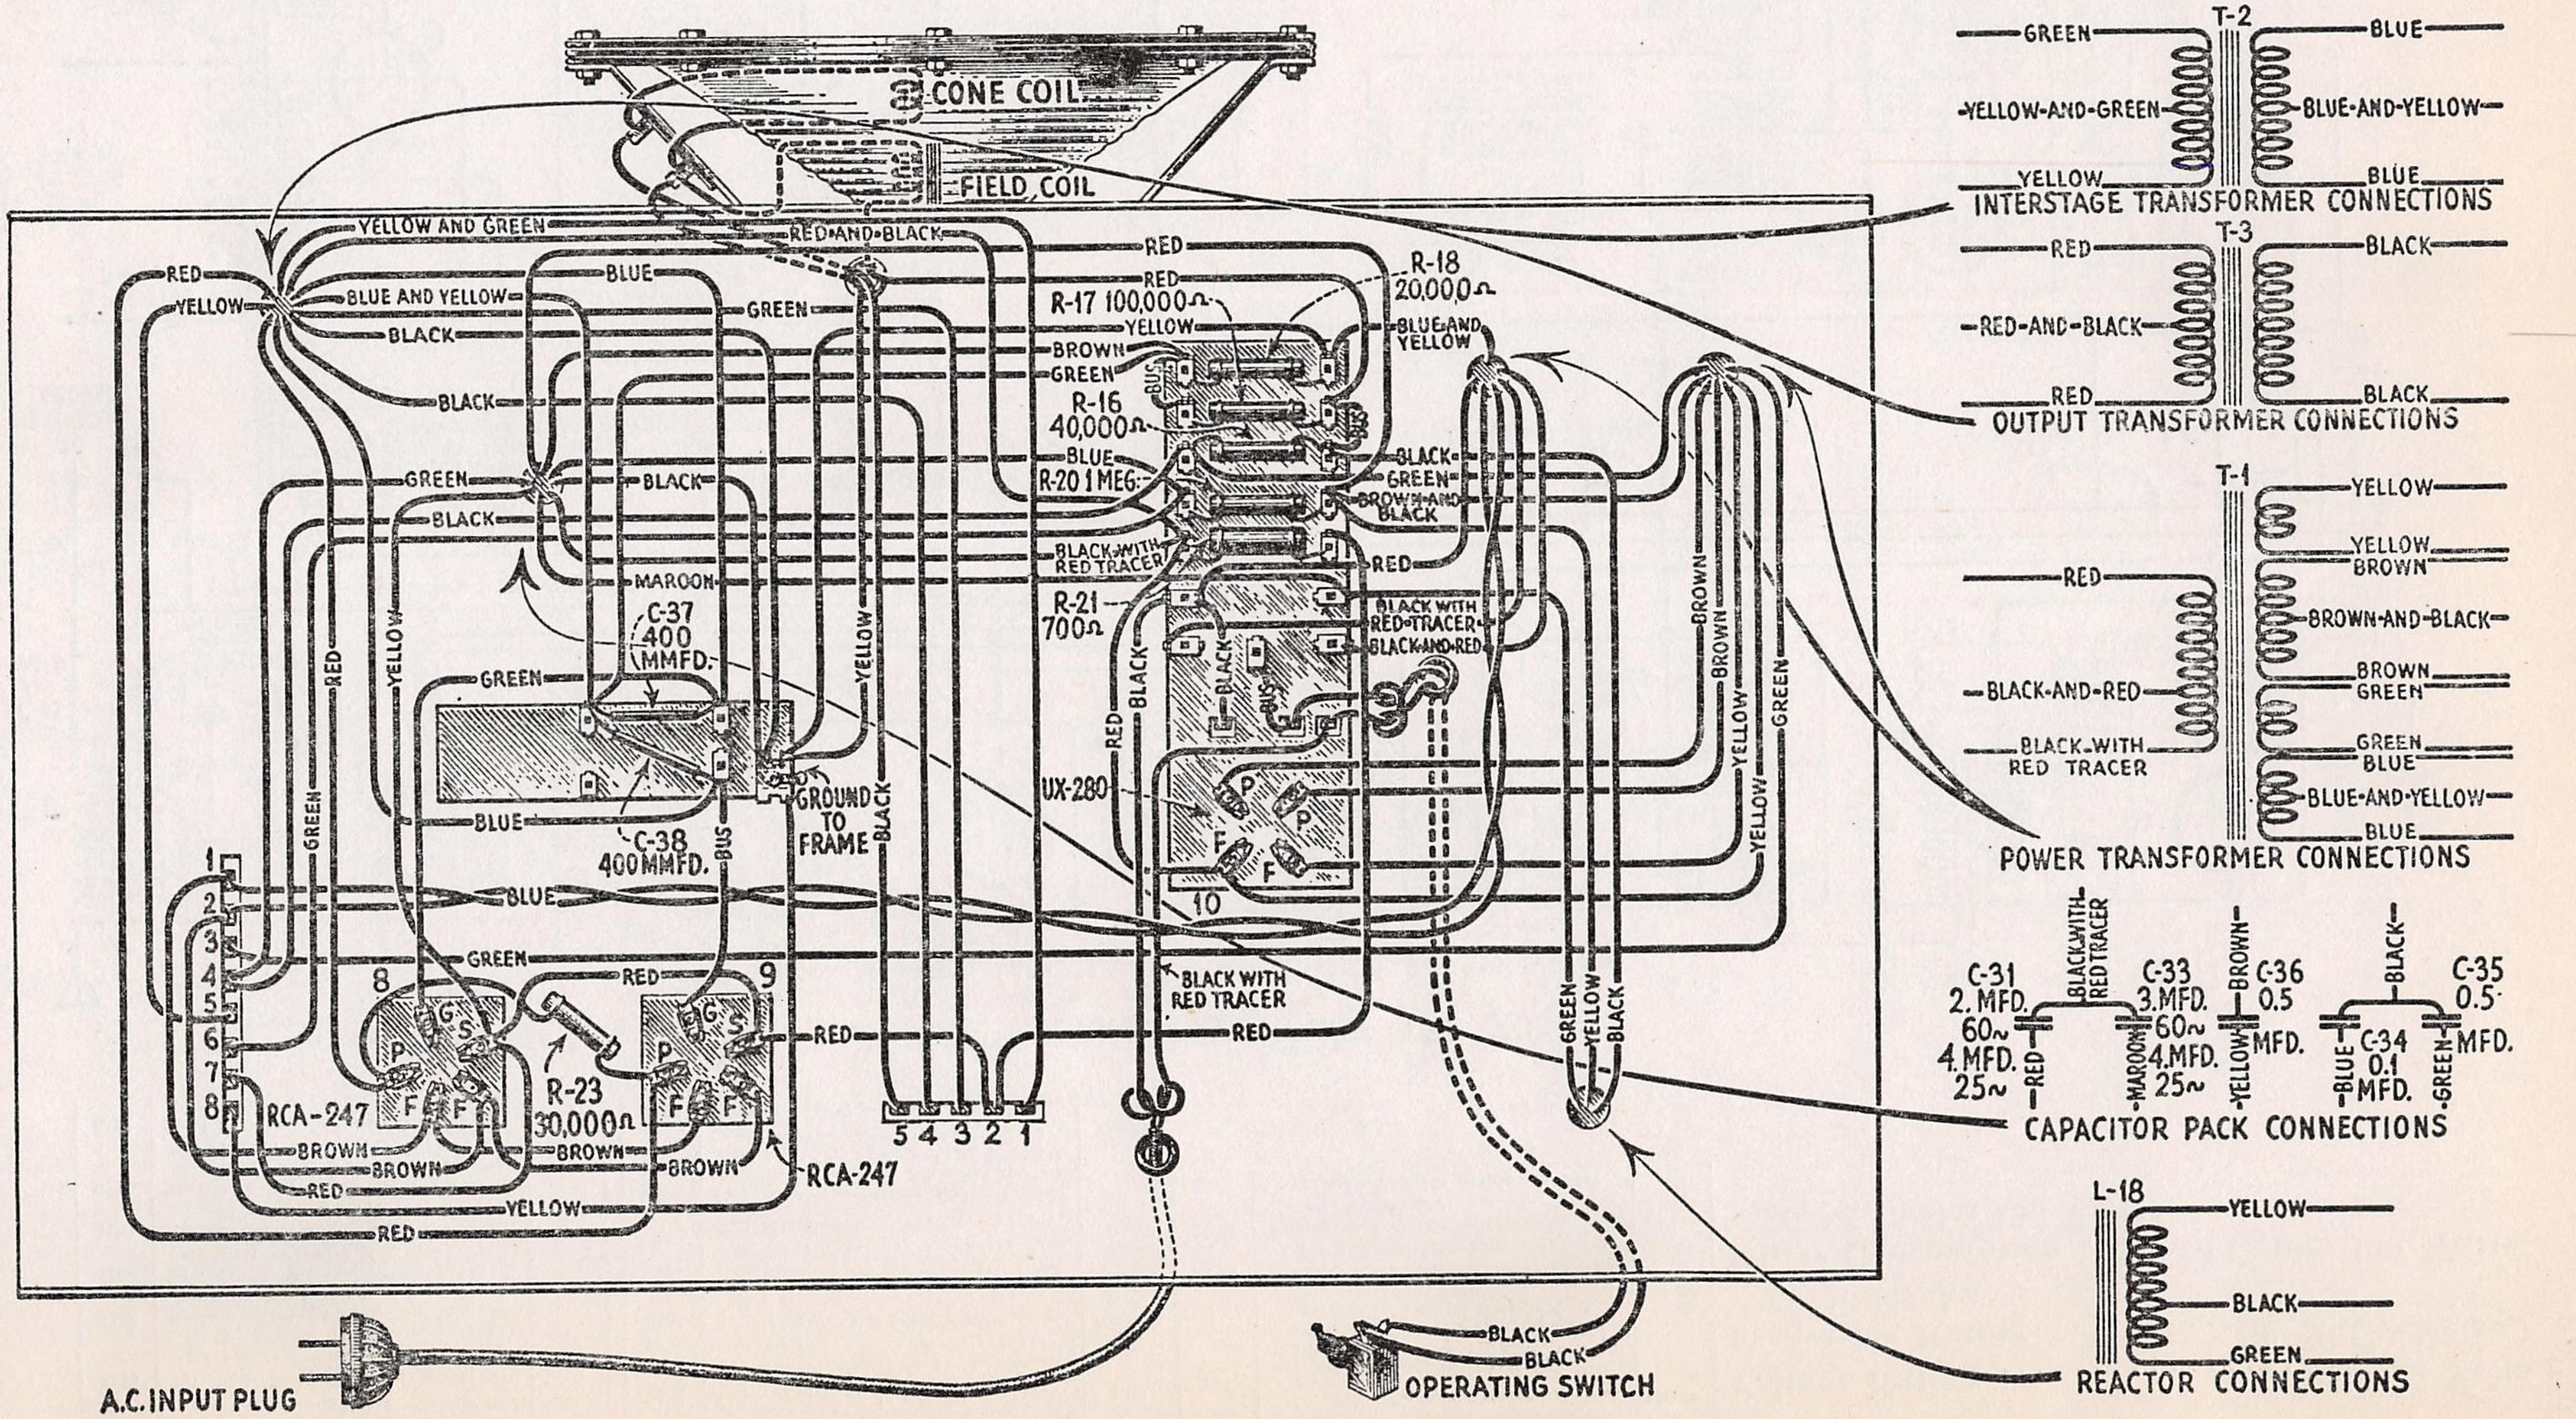
CONE COIL
FIELD COIL
YELLOW AND GREEN
RED-AND-BLACK
BLUE AND YELLOW
BLACK
RED
YELLOW
BLUE
GREEN
BROWN
MAROON
R-17 100,000Ω
R-18 20,000Ω
BLUE AND YELLOW
R-16 40,000Ω
R-20 1 MEG.
BLACK WITH RED TRACER
BROWN-AND-BLACK
BLACK-AND-RED
R-21 700Ω
UX-280
C-37 400 MMFD.
C-38 400MMFD.
GROUND TO FRAME
BUS
R-23 30,000Ω
RCA-247
P G S F
10
8
9
1 2 3 4 5 6 7 8
5 4 3 2 1
A.C. INPUT PLUG
OPERATING SWITCH
T-2
INTERSTAGE TRANSFORMER CONNECTIONS
T-3
OUTPUT TRANSFORMER CONNECTIONS
T-1
YELLOW BROWN
BROWN GREEN
GREEN BLUE
BLUE-AND-YELLOW
YELLOW-AND-GREEN
POWER TRANSFORMER CONNECTIONS
C-31 2. MFD. 60~ 4. MFD. 25~
C-33 3. MFD. 60~ 4. MFD. 25~
C-36 0.5 MFD.
C-34 0.1 MFD.
C-35 0.5 MFD.
CAPACITOR PACK CONNECTIONS
L-18
REACTOR CONNECTIONS

S. P. U. Reproducer Wiring Diagram

MODEL R-21
Schematic
Changes

R. C. A. - VICTOR CO., INC.

Voltage Rating..................105–125 Volts

Frequency Rating..........50–60 Cycles and 25–40 Cycles

Power Consumption...25–40 Cycles 140 Watts, 50–60 Cycles 135 Watts

REPLACEMENT PARTS (Continued)

3099	Capacitor—0.005 mfd..................	.75
3137	Knob—Tuning control, volume control and tone control knob—Package of 5.	3.25
6179	Terminal—Single ground terminal with set screw—Complete with mounting rivet—Package of 5..................	.50
6186	Resistor—500,000 Ohms—Carbon type —¼ Watt—Package of 5..........	2.00
6188	Resistor—2 Megohm—Carbon type—½ Watt—Package of 5..............	2.00
6189	Bracket—Dial lamp bracket and indicator—Package of 2..................	.65
6190	Shaft—Tuning condenser drive shaft complete with 3 washers—Package of 5..................................	.85
6191	Cord—Tuning condenser drive cord—Package of 5....................	.55
6192	Spring—Tuning condenser drive cord tension spring—Package of 10......	.50
7054	Cord—Power cord....................	1.00
7062	Capacitor—Adjustable capacitor—15–70 mmfd..............................	1.00
7266	Transformer—2nd intermediate transformer..............................	3.00
7267	Transformer—1st intermediate transformer..............................	3.00
7268	Coil—Choke coil......................	.60
7269	Capacitor—Comprising one 2.0 mfd., one 4.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd., and one 0.05 mfd. capacitors in metal container.......	7.25
7270	Reactor—Filter reactor..............	4.00
7271	Transformer—Interstage transformer...	4.25
7272	Transformer — Power transformer — 105–125 volts, 50–60 cycles..........	$12.00
7273	Capacitor—Comprising one 4.0 mfd., one 6.0 mfd., four 0.5 mfd., two 1.0 mfd., five 0.1 mfd. and one 0.05 mfd. capacitors in metal container—105–125 volts, 25–40 cycles...............	10.00
7274	Transformer—Power transformer—105–125 volts, 25–40 cycles............	15.00
7275	Transformer—Power transformer—220 volts, 60 cycles....................	10.00
7438	Capacitor—Variable tuning capacitor...	5.20

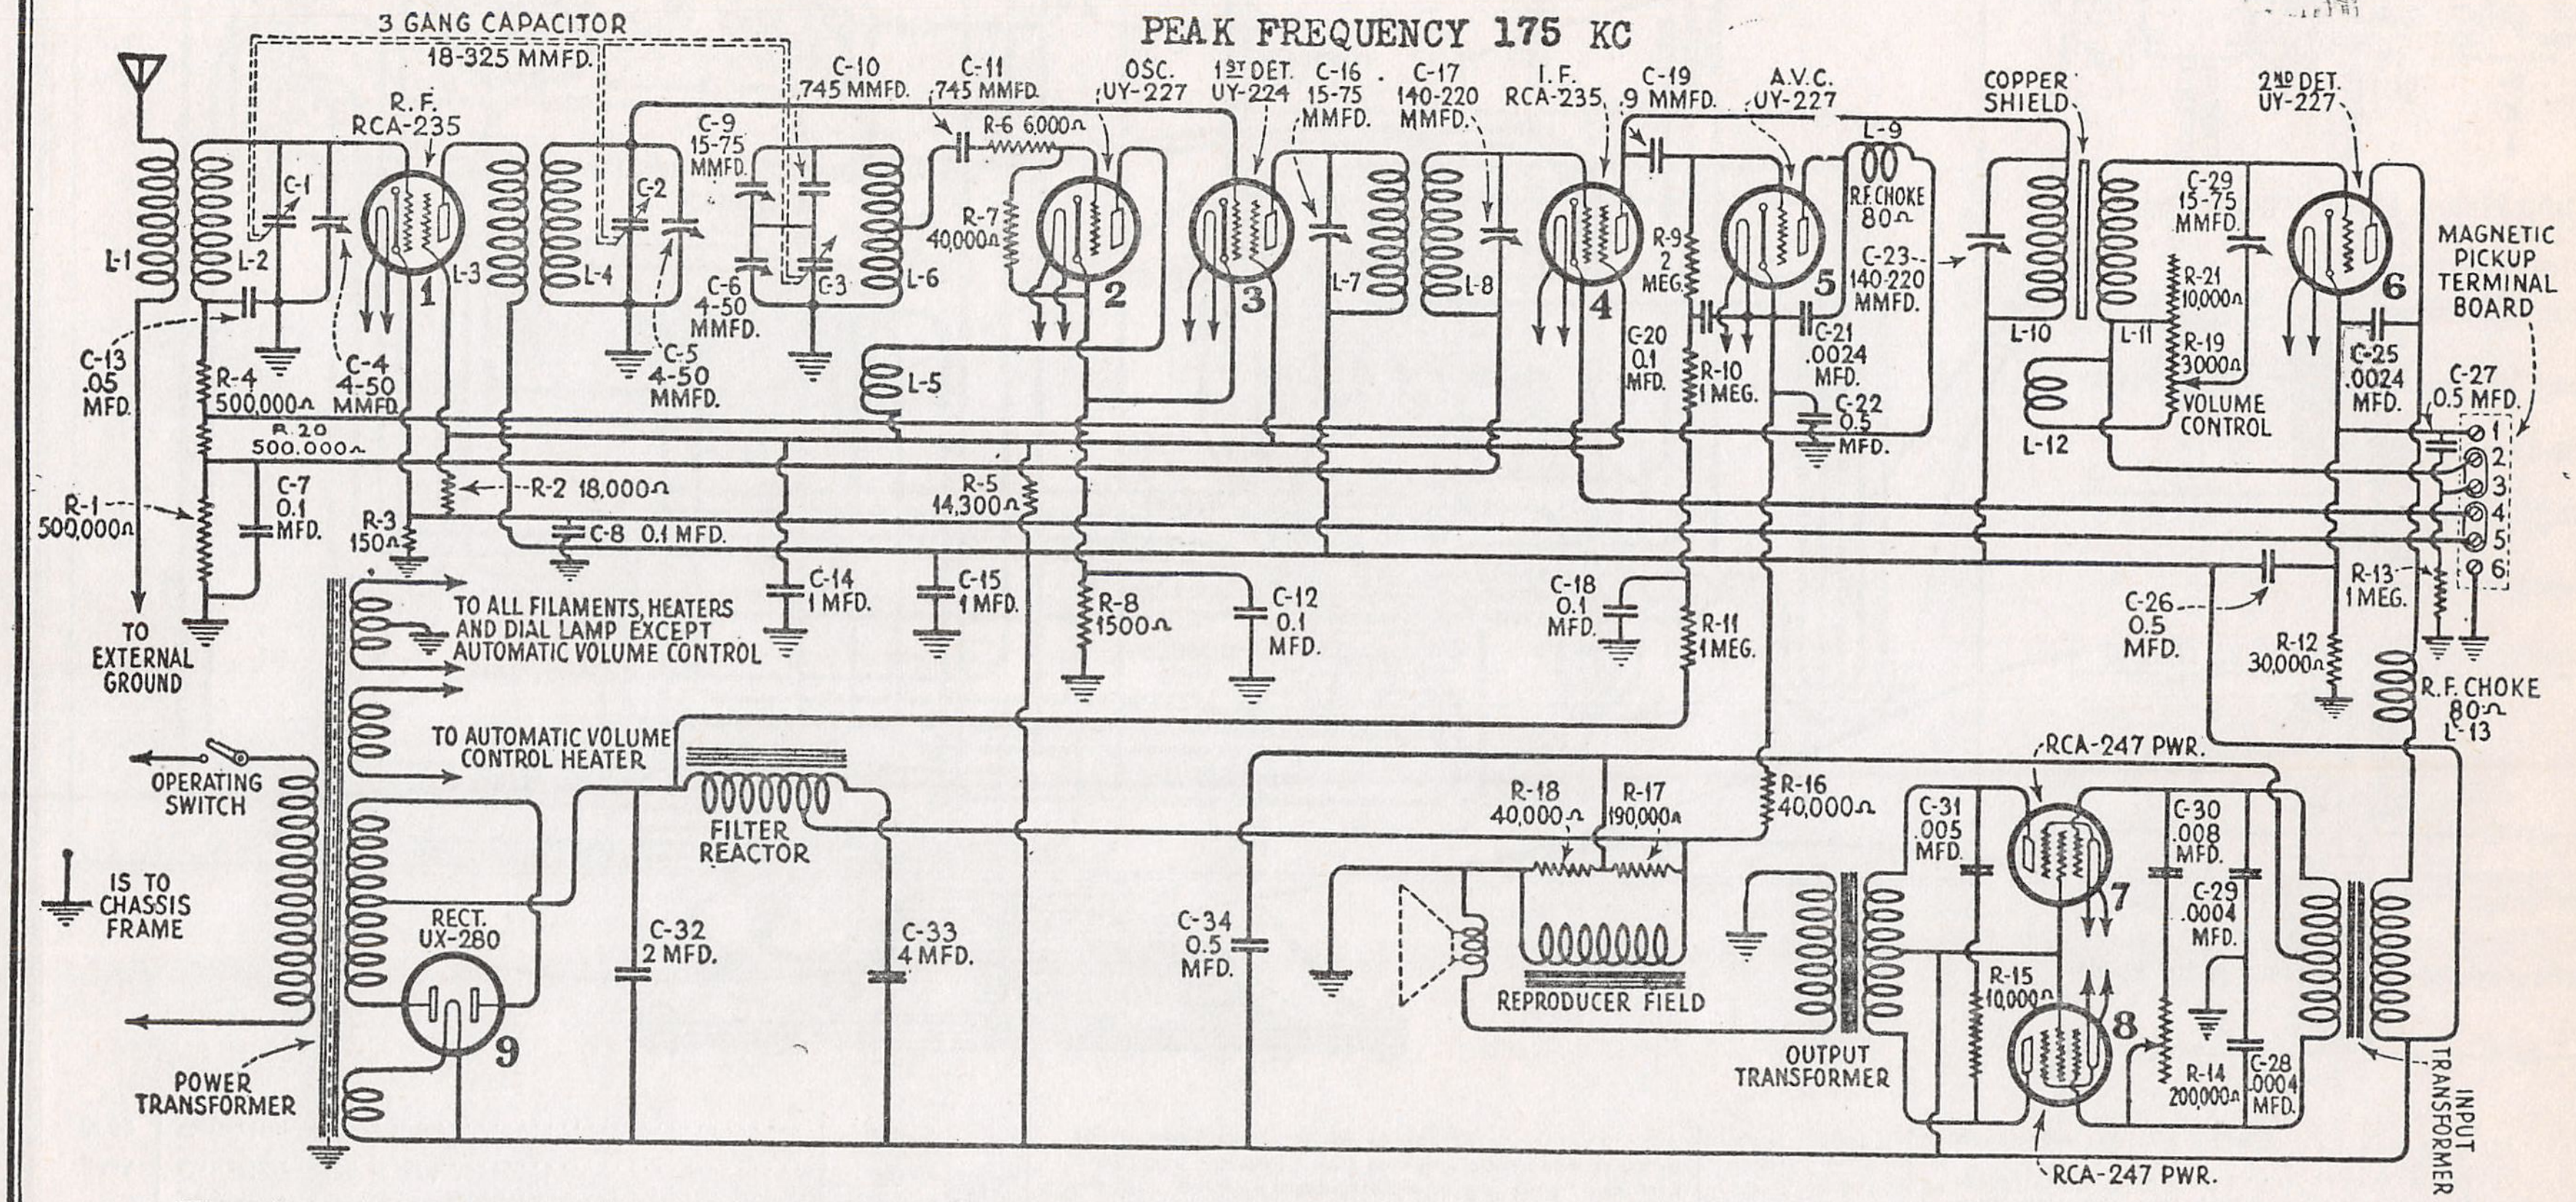
PEAK FREQUENCY 175 KC
3 GANG CAPACITOR 18-325 MMFD.
R.F. RCA-235
OSC. UY-227
1ST DET. UY-224
I.F. RCA-235
A.V.C. UY-227
2ND DET. UY-227
RCA-247 PWR.
RECT. UX-280
C-1
C-2
C-3
C-4 4-50 MMFD.
C-5 4-50 MMFD.
C-6 4-50 MMFD.
C-7 0.1 MFD.
C-8 0.1 MFD.
C-9 15-75 MMFD.
C-10 745 MMFD.
C-11 745 MMFD.
C-12 0.1 MFD.
C-13 .05 MFD.
C-14 1 MFD.
C-15 1 MFD.
C-16 15-75 MMFD.
C-17 140-220 MMFD.
C-18 0.1 MFD.
C-19 9 MMFD.
C-20 0.1 MFD.
C-21 .0024 MFD.
C-22 0.5 MFD.
C-23 140-220 MMFD.
C-25 .0024 MFD.
C-26 0.5 MFD.
C-27 0.5 MFD.
C-28 .0004 MFD.
C-29 15-75 MMFD.
C-29 .0004 MFD.
C-30 .008 MFD.
C-31 .005 MFD.
C-32 2 MFD.
C-33 4 MFD.
C-34 0.5 MFD.
R-1 500,000Ω
R-2 18,000Ω
R-3 150Ω
R-4 500,000Ω
R 20 500,000Ω
R-5 14,300Ω
R-6 6,000Ω
R-7 40,000Ω
R-8 1500Ω
R-9 2 MEG.
R-10 1 MEG.
R-11 1 MEG.
R-12 30,000Ω
R-13 1 MEG.
R-14 200,000Ω
R-15 10,000Ω
R-16 40,000Ω
R-17 190,000Ω
R-18 40,000Ω
R-19 3000Ω
R-21 10,000Ω
L-1
L-2
L-3
L-4
L-5
L-6
L-7
L-8
L-9
L-10
L-11
L-12
L-13
R.F. CHOKE 80Ω
COPPER SHIELD
VOLUME CONTROL
MAGNETIC PICKUP TERMINAL BOARD
1
2
3
4
5
6
7
8
9
TO EXTERNAL GROUND
TO ALL FILAMENTS, HEATERS AND DIAL LAMP EXCEPT AUTOMATIC VOLUME CONTROL
TO AUTOMATIC VOLUME CONTROL HEATER
FILTER REACTOR
OPERATING SWITCH
IS TO CHASSIS FRAME
POWER TRANSFORMER
REPRODUCER FIELD
OUTPUT TRANSFORMER
INPUT TRANSFORMER

The chassis and loudspeaker used in Model R-21 is identical with that used in the R-11 except for the dial and scale. A reference to the R-11 Service Notes will therefore give any information necessary in reference to circuit diagram, voltage reading and other service information. One change should be noted in later production of R-11s and all R-21s and that is the change in value of Resistor R-9 from 5 Megohms to 2 Megohms.

R. C. A. VICTOR CO., INC.

MODEL RE-21
Chassis

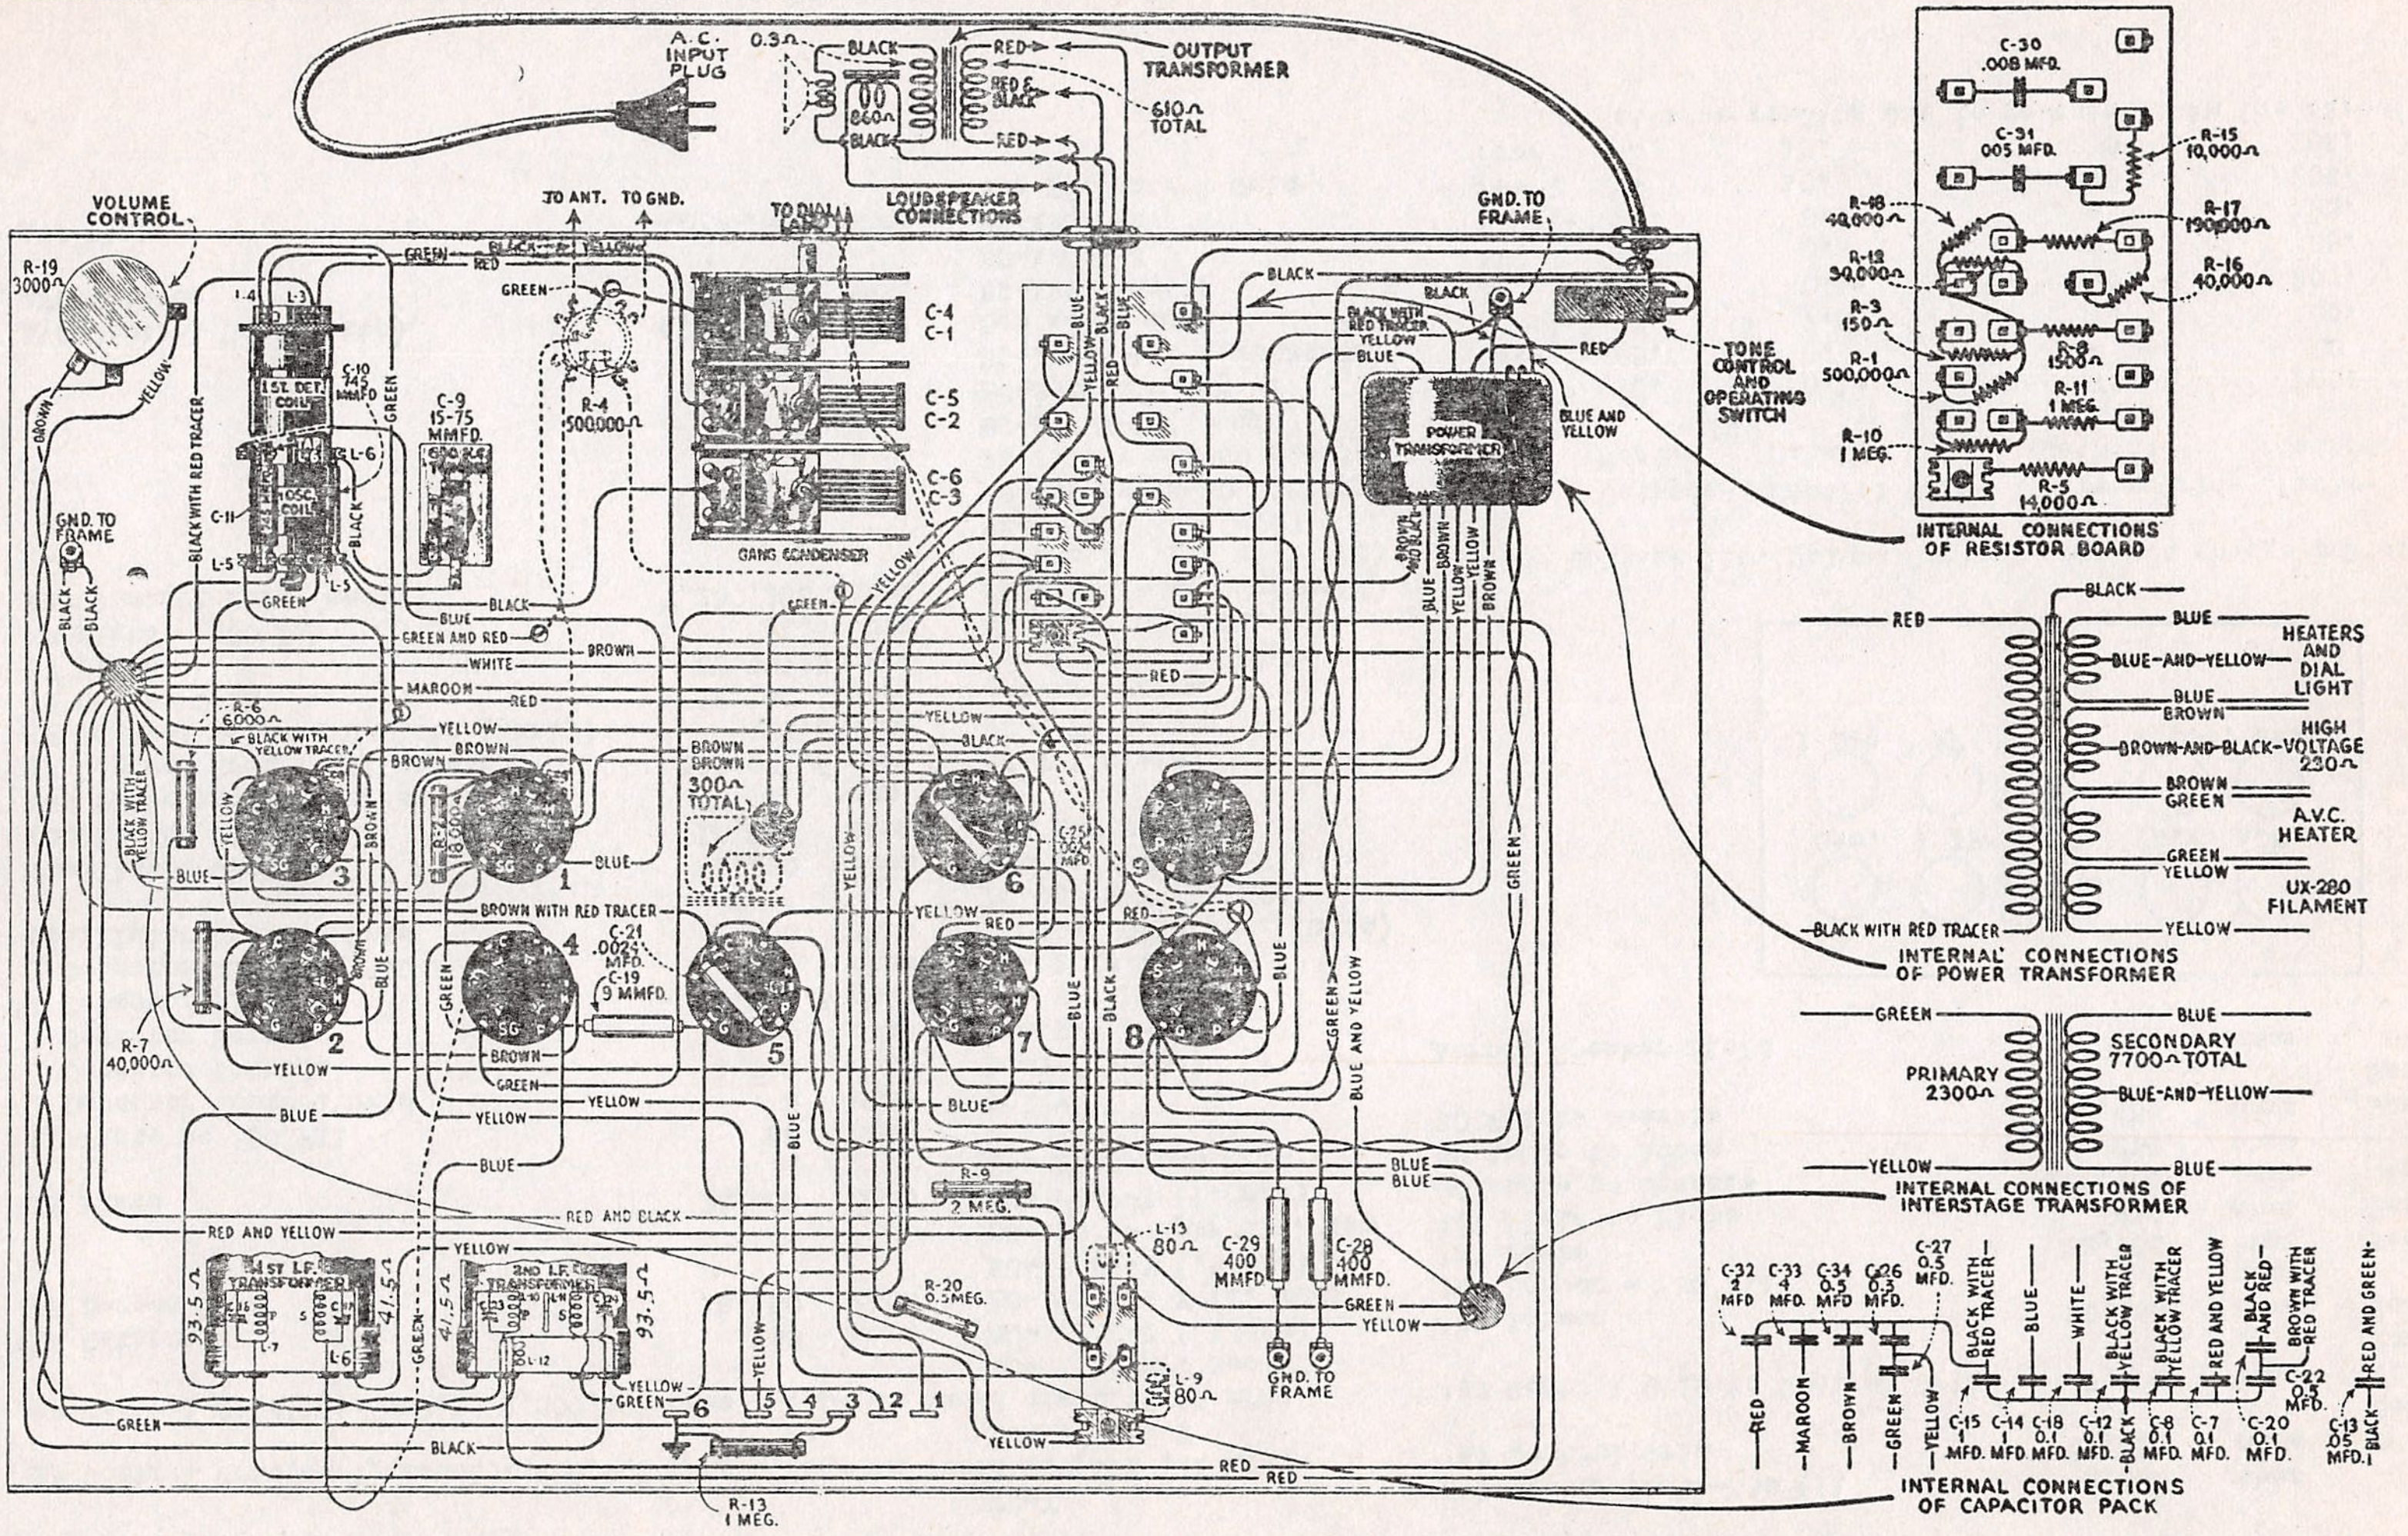
A.C. INPUT PLUG
0.3Ω
BLACK
860Ω
RED
RED & BLACK
OUTPUT TRANSFORMER
610Ω TOTAL
LOUDSPEAKER CONNECTIONS
VOLUME CONTROL
R-19 3000Ω
TO ANT.
TO GND.
TO DIAL LAMP
GREEN
YELLOW
1ST DET. COIL
OSC. COIL
C-10 745 MMFD.
C-9 15-75 MMFD.
R-4 500,000Ω
C-4
C-1
C-5
C-2
C-6
C-3
GANG CONDENSER
GND. TO FRAME
TONE CONTROL AND OPERATING SWITCH
POWER TRANSFORMER
BLUE AND YELLOW
BLACK WITH RED TRACER
BROWN
BLACK WITH YELLOW TRACER
GREEN AND RED
WHITE
MAROON
R-6 6,000Ω
R-2 18,000Ω
BROWN WITH RED TRACER
300Ω TOTAL
C-21 .0021 MFD.
C-19 9 MMFD.
C-25 .0024 MFD.
R-7 40,000Ω
RED AND BLACK
RED AND YELLOW
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
93.5Ω
41.5Ω
R-9 2 MEG.
R-20 0.5 MEG.
L-13 80Ω
L-9 80Ω
C-29 400 MMFD
C-28 400 MMFD.
R-13 1 MEG.
1
2
3
4
5
6
7
8
9
C-30 .008 MFD.
C-31 .005 MFD.
R-15 10,000Ω
R-17 190,000Ω
R-16 40,000Ω
R-18 40,000Ω
R-12 30,000Ω
R-3 150Ω
R-8 150Ω
R-1 500,000Ω
R-11 1 MEG.
R-10 1 MEG.
R-5 14,000Ω
INTERNAL CONNECTIONS OF RESISTOR BOARD
HEATERS AND DIAL LIGHT
BLUE-AND-YELLOW
HIGH VOLTAGE 230Ω
BROWN-AND-BLACK
A.V.C. HEATER
UX-280 FILAMENT
INTERNAL CONNECTIONS OF POWER TRANSFORMER
PRIMARY 2300Ω
SECONDARY 7700Ω TOTAL
INTERNAL CONNECTIONS OF INTERSTAGE TRANSFORMER
C-32 2 MFD.
C-33 4 MFD.
C-34 0.5 MFD.
C-26 0.5 MFD.
C-27 0.5 MFD.
C-15 1 MFD.
C-14 1 MFD.
C-18 0.1 MFD.
C-12 0.1 MFD.
C-8 0.1 MFD.
C-7 0.1 MFD.
C-20 0.1 MFD.
C-22 0.5 MFD.
C-13 .05 MFD.
BLACK WITH RED TRACER
BLACK WITH YELLOW TRACER
RED AND YELLOW
BLACK AND RED
BROWN WITH RED TRACER
RED AND GREEN
INTERNAL CONNECTIONS OF CAPACITOR PACK

REPLACEMENT PARTS

2563	Resistor—6,000 ohms—Carbon type—1 Watt—Package of 5	$3.00
2730	Resistor—18,000 ohms—Carbon type—1 Watt—Package of 5	2.00
2734	Capacitor—745 mmfd.—Package of 5	2.20
2746	Socket—Dial lamp socket	.50
2747	Cap—Grid contactor cap—Package of 5	.50
2749	Capacitor—2400 mmfd.	1.50
2882	Socket—5 contact Radiotron socket—Complete with insulator—8 used	.50
2968	Socket—4 contact Radiotron socket—Complete with insulator—1 used	.50
3046	Resistor—190,000 ohms—Carbon type—½ Watt—Package of 5	$2.50
3047	Resistor—1,500 ohms—Carbon type—½ Watt—Package of 5	2.50
3048	Resistor—500,000 Ohms—Carbon type—½ Watt—Package of 5	2.50
3049	Resistor—150 Ohms—Carbon type—½ Watt—Package of 5	2.50
3050	Resistor—14,000 Ohms—Carbon type—3 Watt	.60
3053	Capacitor—9 mmfd.—Package of 2	.50
3055	Cushion—Receiver chassis sponge rubber cushion—Package of 4	.50
3056	Shield—Radiotron shield—6 used—Package of 2	$0.50
3076	Resistor—1 Megohm—Carbon type—½ Watt—Package of 5	2.50
3077	Resistor—30,000 Ohms—Carbon type—½ Watt—Package of 5	2.50
3078	Resistor—10,000 Ohms—Carbon type—½ Watt—Package of 5	2.50
3079	Resistor—40,000 Ohms—Carbon type—½ Watt—Package of 5	2.50
3085	Capacitor—400 mmfd.	.60
3089	Board—Magnetic pickup terminal board—Complete with mounting rivets	.50
3090	Board—A.V.C. and 2nd detector R.F. choke board—Less choke coils	.50
3091	Board—Resistor board complete less resistors and capacitors	1.00
3092	Volume Control—Volume control complete with mounting nut	1.50
3093	Tone Control—Tone control complete with mounting nut	1.90
3095	Coil—R.F. coil	1.90
3096	Coil—1st detector and oscillator coil	3.55
3098	Capacitor—0.008 mfd.	.50

MODEL R-21
Resistance Data

R. C. A. - VICTOR CO., INC.

All tubes removed from sockets and AC plug removed from power supply.
Pick up and field coil disconnected

From Chassis To	Correct	Incorrect
Aerial to ground post	40 ohms	
Chassis to		
		TC-Y
RF Control Grid(early model)	1,000,005 ohms	BLC- in tuned circuit (.1 mfd)
		BC-AVC chk-Y
RF Control Grid(late model)	1,500,005 ohms	BLC- in tuned circuit(.05 mfd)
		BC- 1 IF Tr. Sec -Y
RF Cathode	150 ohms	BC- rf K-Y (.1 mfd)
RF Screen Grid	18,150 ohms	BC- rf Sg- Y (1. mfd)
		BC-47 Sg-Y (.5 mfd)
		BC-'80 F- Spkr div. tap
RF Plate	32,508 ohms	BC- rf P-Y (1. mfd)
		See RF Screen Grid
RF Plate to '80 Fil	58 ohms	
1 Detector Control Grid	5 ohms	TC- Y
1 Detector Cathode	1,500 ohms	BC-Y (.1 mfd)
1 Detector Screen	18,150 ohms	See R-F Screen
1 Detector Plate	32,541.5 ohms	See R-F Plate
1 Detector Plate to '80 Fil	93.5 ohms	TC- 1 If Tr.
Oscillator Control Grid	41,500 ohms	BLC-Osc.Grid.Cir.(.0074)
		BC-Osc K-Y (.1 mfd)
Oscillator Cathode	1,500 ohms	BC-Osc K-Y (.1 mfd)
Oscillator Plate	18,151 ohms	See R-F Screen
Osc Plate and Det Screen	1 ohm	
IF Control Grid (all models)	500,041.5 ohms	BC-Y (.5 mfd)
IF Control Grid- AVC Plate (early)	121.5 ohms	TC-1 IF Tr Sec
IF Screen Grid	18,150 ohms	See RF Screen
IF Plate	32,491.5 ohms	See 1 Detector Plate
IF Plate - '80 Fil	41.5 ohms	TC- 2 IF Tr. Pri.
AVC Control Grid (early)	7,230,285 ohms	BLC- if P- AVC Cg(9mmfd)
		BC-5 meg - AVC H(.1 mfd)
		BC-1 meg-Y (.1 mfd)
		FC-'80 Anode-80 F(2mfd)
		FC filter chk-80 F(4mfd)
		BC-AVC K-Y (.5 mfd)
		BC-Spkr div.tap -Y
		BC-AVC K-AVC P(.0024mfd)
AVC Control Grid (late)	4,230,285 ohms	See early model
AVC Cathode	270,000 ohms	BC-AVC K-AVC P
		BC-AVC K-Y
AVC Plate	1,000,085 ohms	BC-AVC P-AVC K
		See RF Control Grid

2 Det Control Grid(Pickup Board Ter #2)	93.5 ohms	
2 Det Control Grid to V.C. Arm	3,093.5-10,093.5 ohms	TC-2D Cg- VC Arm
2 Det Cathode	30,000 ohms	BC-Ter#1 - Ter #3
		BC- 2 DK -'80 Fil
Pickup Board Terminal 2	1,000,000 ohms	BC-Ter #1- Ter#3
2 Detector Plate	34,830 ohms	See RF Plate

From Chassis To	Correct	Incorrect
2 Detector Plate-'80 Fil	2,380 ohms	
'47 Control Grid	43,850 ohms	BC- 47 Cg-Y
		See AVC Cathode
'47 Control Grid to Control Grid	7,700 ohms	Tone Control Cond
		Tone Control Resist
'47 Screen	32,450 ohms	See 2 Detector Plate
'47 Screen - '80 Fil	0 ohm	
'47 Plate	32,755 ohms	See 2 Detector Plate
'47 Plate to Plate	610 ohms	Harmonic condenser
80 Anode to chassis	230,400 ohms	See AVC Control Grid
80 Anode to Anode	230 ohms	
80 Fil to chassis	32,450 ohms	See RF Plate
		See RF Screen Grid
Across Speaker field	860 ohms	

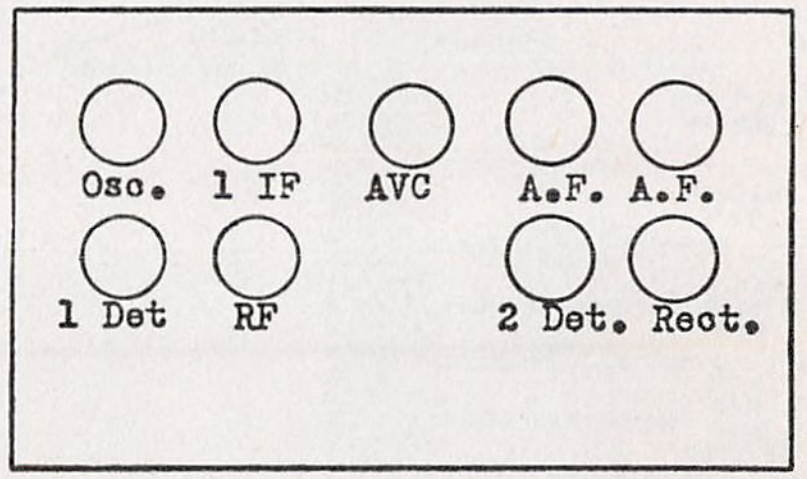

Line Voltage 110. Volume Control does not change voltages.

Tube	Cathode-Heater	Control Grid-Cathode	Screen Grid-Cathode	Plate-Cathode	Plate-Current	Filament-Voltage
RF	2.	0.1*	75.	205.	5.0 ma.	2.2
Osc.	8.	0.	-	60	5.0	2.2
1 Det.	7.	7.0	70	200.	0.5	2.2
IF	2.	0.1*	75	205.	5.0	2.2
AVC	0.	0.	-	25.	-	2.2
2 Det.	20.	8.0*	-	180.	0.5	2.2
Pwer	-	10.	210	205.	25.	2.2
Pwer	-	10.	210	205.	25.	2.2

* Not true reading due to resistance in the circuit

MODEL RO-23
Schematic

R. C. A. VICTOR CO., INC.

Models R-23, RO-23 (1931)

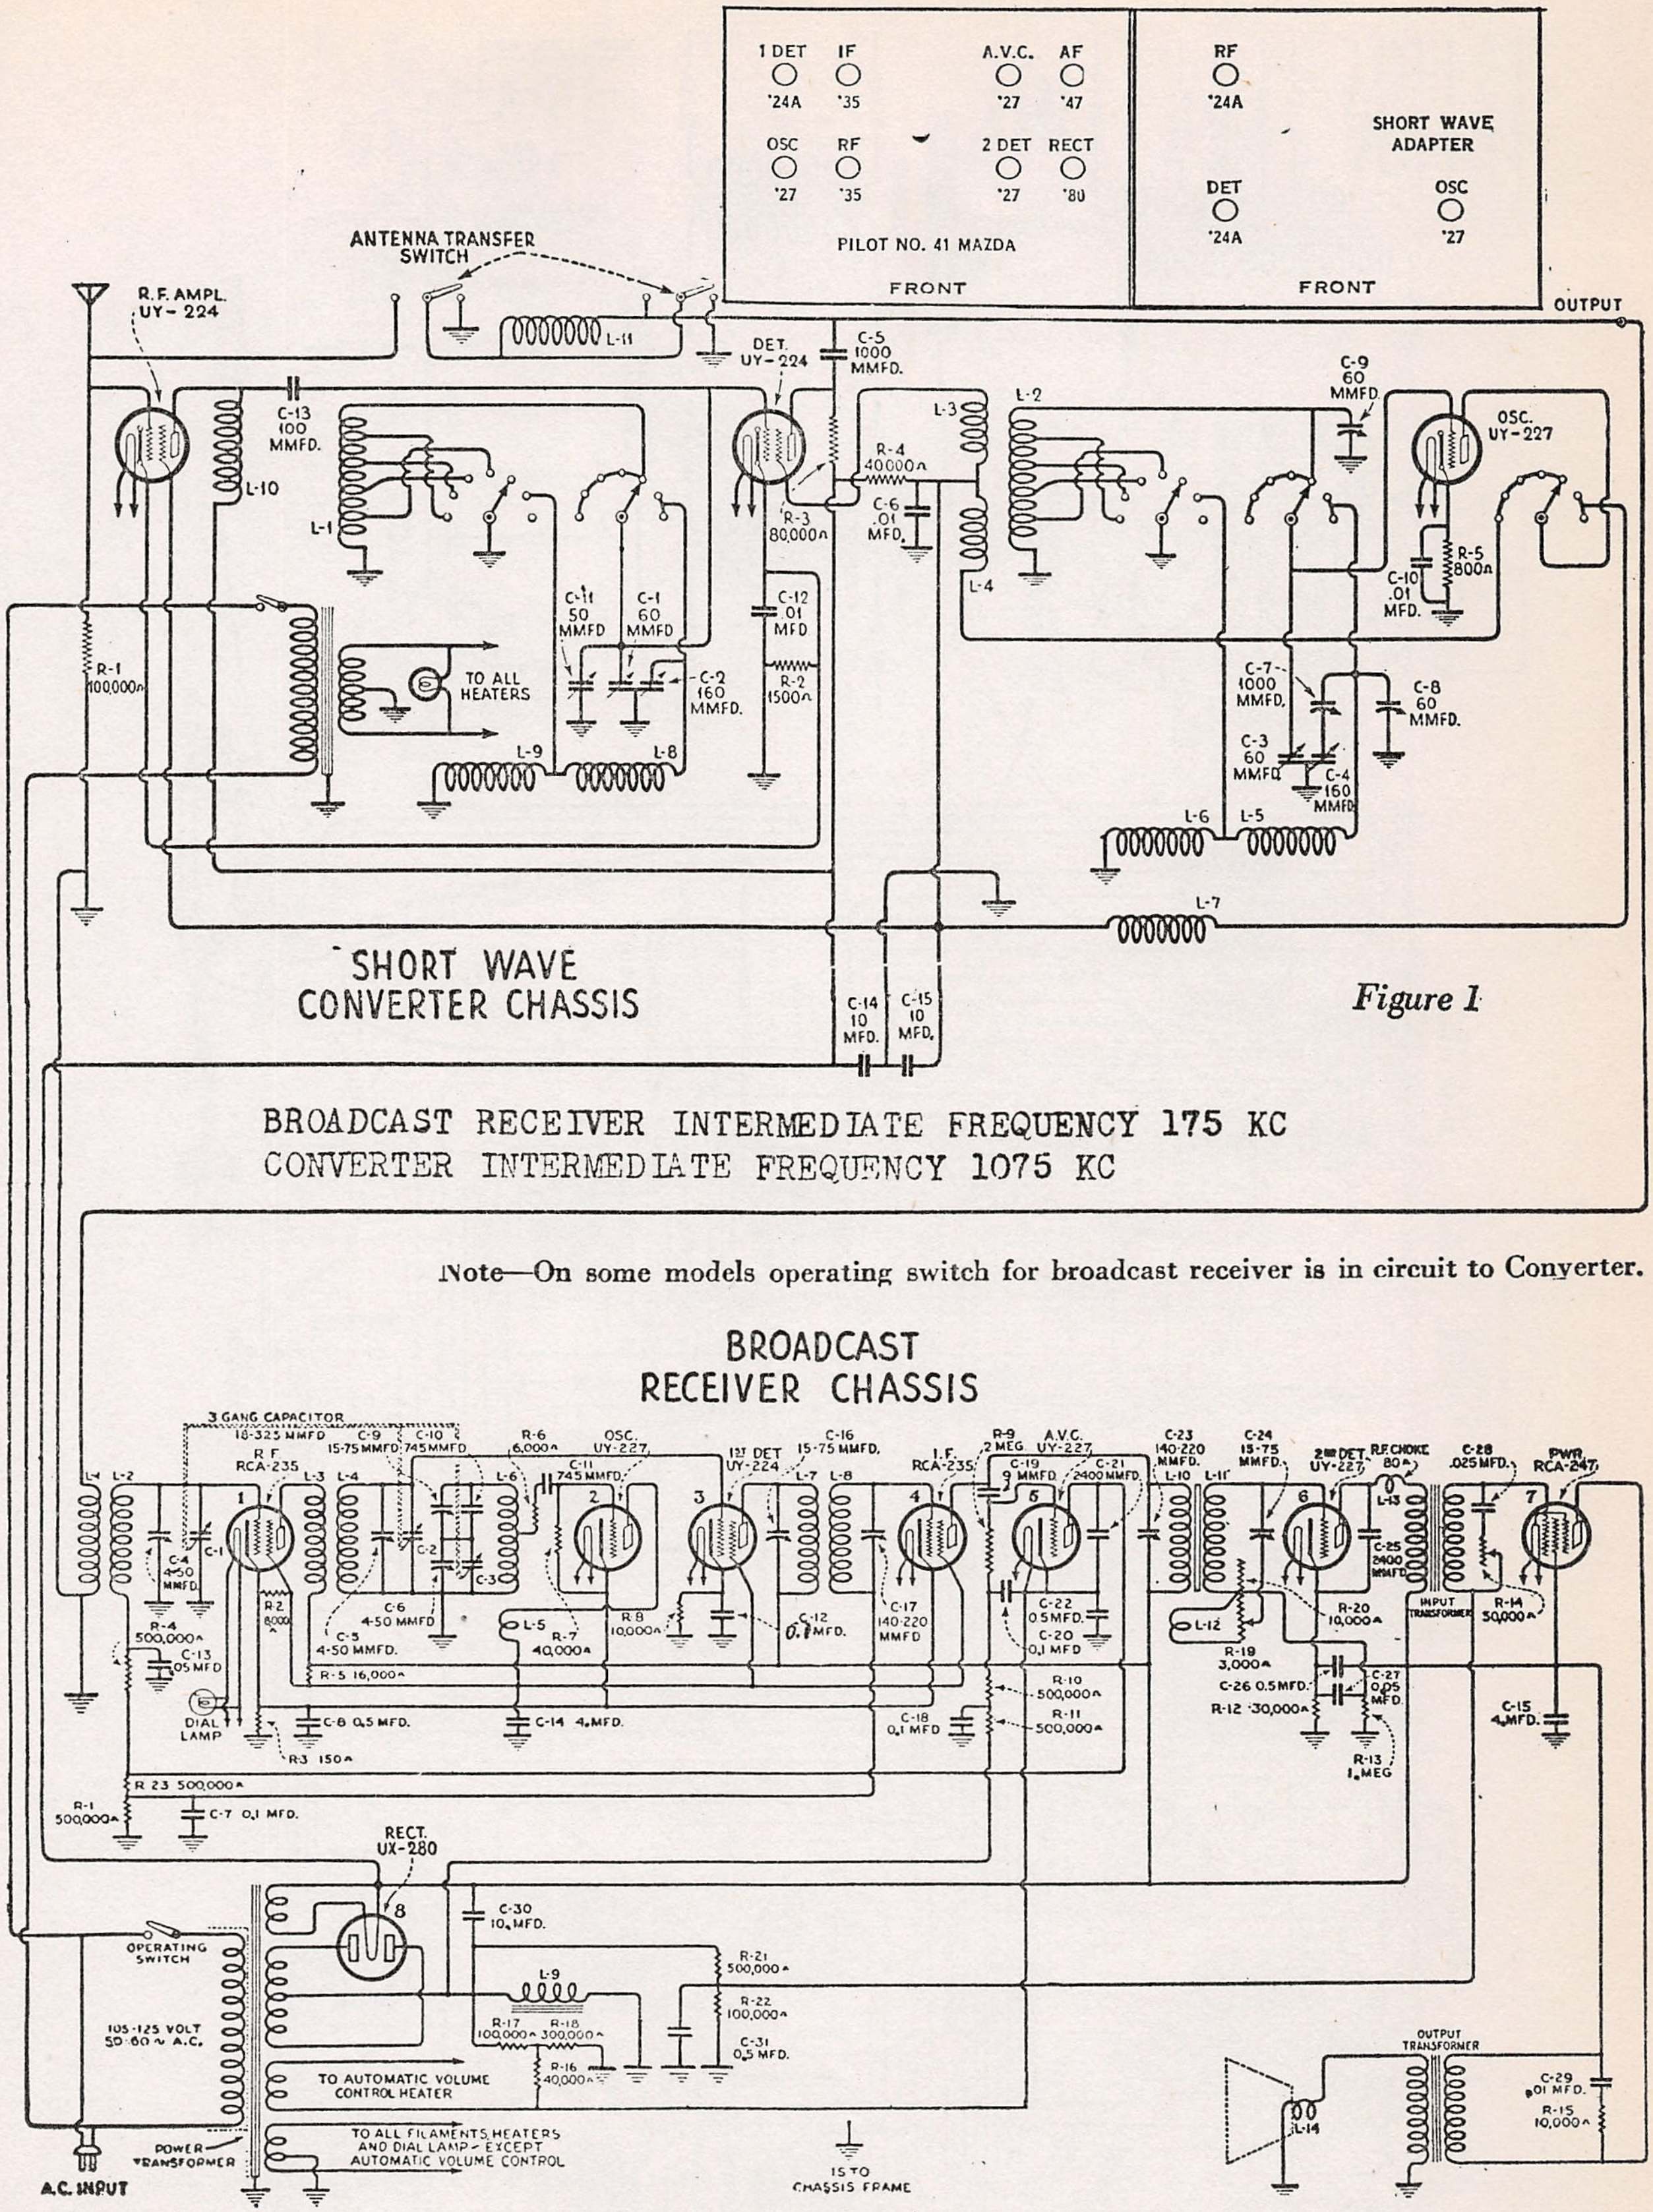
1 DET '24A
IF '35
A.V.C. '27
AF '47
OSC '27
RF '35
2 DET '27
RECT '80
PILOT NO. 41 MAZDA
FRONT
RF '24A
DET '24A
OSC '27
SHORT WAVE ADAPTER
FRONT
OUTPUT
ANTENNA TRANSFER SWITCH
R.F. AMPL. UY-224
DET. UY-224
OSC. UY-227
C-5 1000 MMFD.
C-13 100 MMFD.
C-9 60 MMFD.
R-4 40000Ω
C-6 .01 MFD.
R-3 80,000Ω
R-5 800Ω
C-10 .01 MFD.
C-11 50 MMFD
C-1 60 MMFD
C-2 160 MMFD.
C-12 .01 MFD
R-2 1500Ω
R-1 100,000Ω
TO ALL HEATERS
C-7 1000 MMFD.
C-8 60 MMFD.
C-3 60 MMFD
C-4 160 MMFD
L-1 L-2 L-3 L-4 L-5 L-6 L-7 L-8 L-9 L-10 L-11
C-14 10 MFD.
C-15 10 MFD.
SHORT WAVE CONVERTER CHASSIS
BROADCAST RECEIVER CHASSIS
3 GANG CAPACITOR 18-325 MMFD
R.F. RCA-235
OSC. UY-227
1ST DET UY-224
I.F. RCA-235
A.V.C. UY-227
2ND DET UY-227
PWR. RCA-247
R.F. CHOKE 80Ω
RECT. UX-280
INPUT TRANSFORMER
OUTPUT TRANSFORMER
OPERATING SWITCH
105-125 VOLT 50-60 ~ A.C.
POWER TRANSFORMER
A.C. INPUT
DIAL LAMP
TO AUTOMATIC VOLUME CONTROL HEATER
TO ALL FILAMENTS, HEATERS AND DIAL LAMP - EXCEPT AUTOMATIC VOLUME CONTROL
IS TO CHASSIS FRAME
C-30 10 MFD.
C-31 0.5 MFD.
R-21 500,000Ω
R-22 100,000Ω
R-17 100,000Ω
R-18 300,000Ω
R-16 40,000Ω
C-29 .01 MFD.
R-15 10,000Ω
C-15 4 MFD.
R-14 50,000Ω
C-28 .025 MFD.
R-20 10,000Ω
R-19 3,000Ω
C-26 0.5 MFD.
C-27 0.05 MFD.
R-12 30,000Ω
R-13 1 MEG
R-10 500,000Ω
R-11 500,000Ω
C-18 0.1 MFD
R-23 500,000Ω
R-1 500,000Ω
C-7 0.1 MFD.
R-4 500,000Ω
C-13 .05 MFD
R-5 16,000Ω
C-8 0.5 MFD.
C-14 4 MFD.
R3 150Ω
R-6 6,000Ω
R-7 40,000Ω
R-8 10,000Ω
R-9 2 MEG
C-19 9 MMFD.
C-21 2400 MMFD.
C-22 0.5 MFD.
C-20 0.1 MFD
C-17 140-220 MMFD
C-16 15-75 MMFD.
C-23 140-220 MMFD.
C-24 15-75 MMFD.
C-25 2400 MMFD.
C-9 15-75 MMFD
C-10 745 MMFD
C-11 745 MMFD
C-4 4-50 MMFD
C-5 4-50 MMFD.
C-6 4-50 MMFD
C-12 0.1 MFD.

Figure 1

BROADCAST RECEIVER INTERMEDIATE FREQUENCY 175 KC
CONVERTER INTERMEDIATE FREQUENCY 1075 KC

Note—On some models operating switch for broadcast receiver is in circuit to Converter.

Voltage Rating.... .105–125 Volts and 200–250 Volts
Frequency Rating.....50–60 cycles and 25–40 cycles
Power Consumption................120 Watts

MODEL RO-23
Broadcast Chassis

R. C. A. - VICTOR CO., INC.

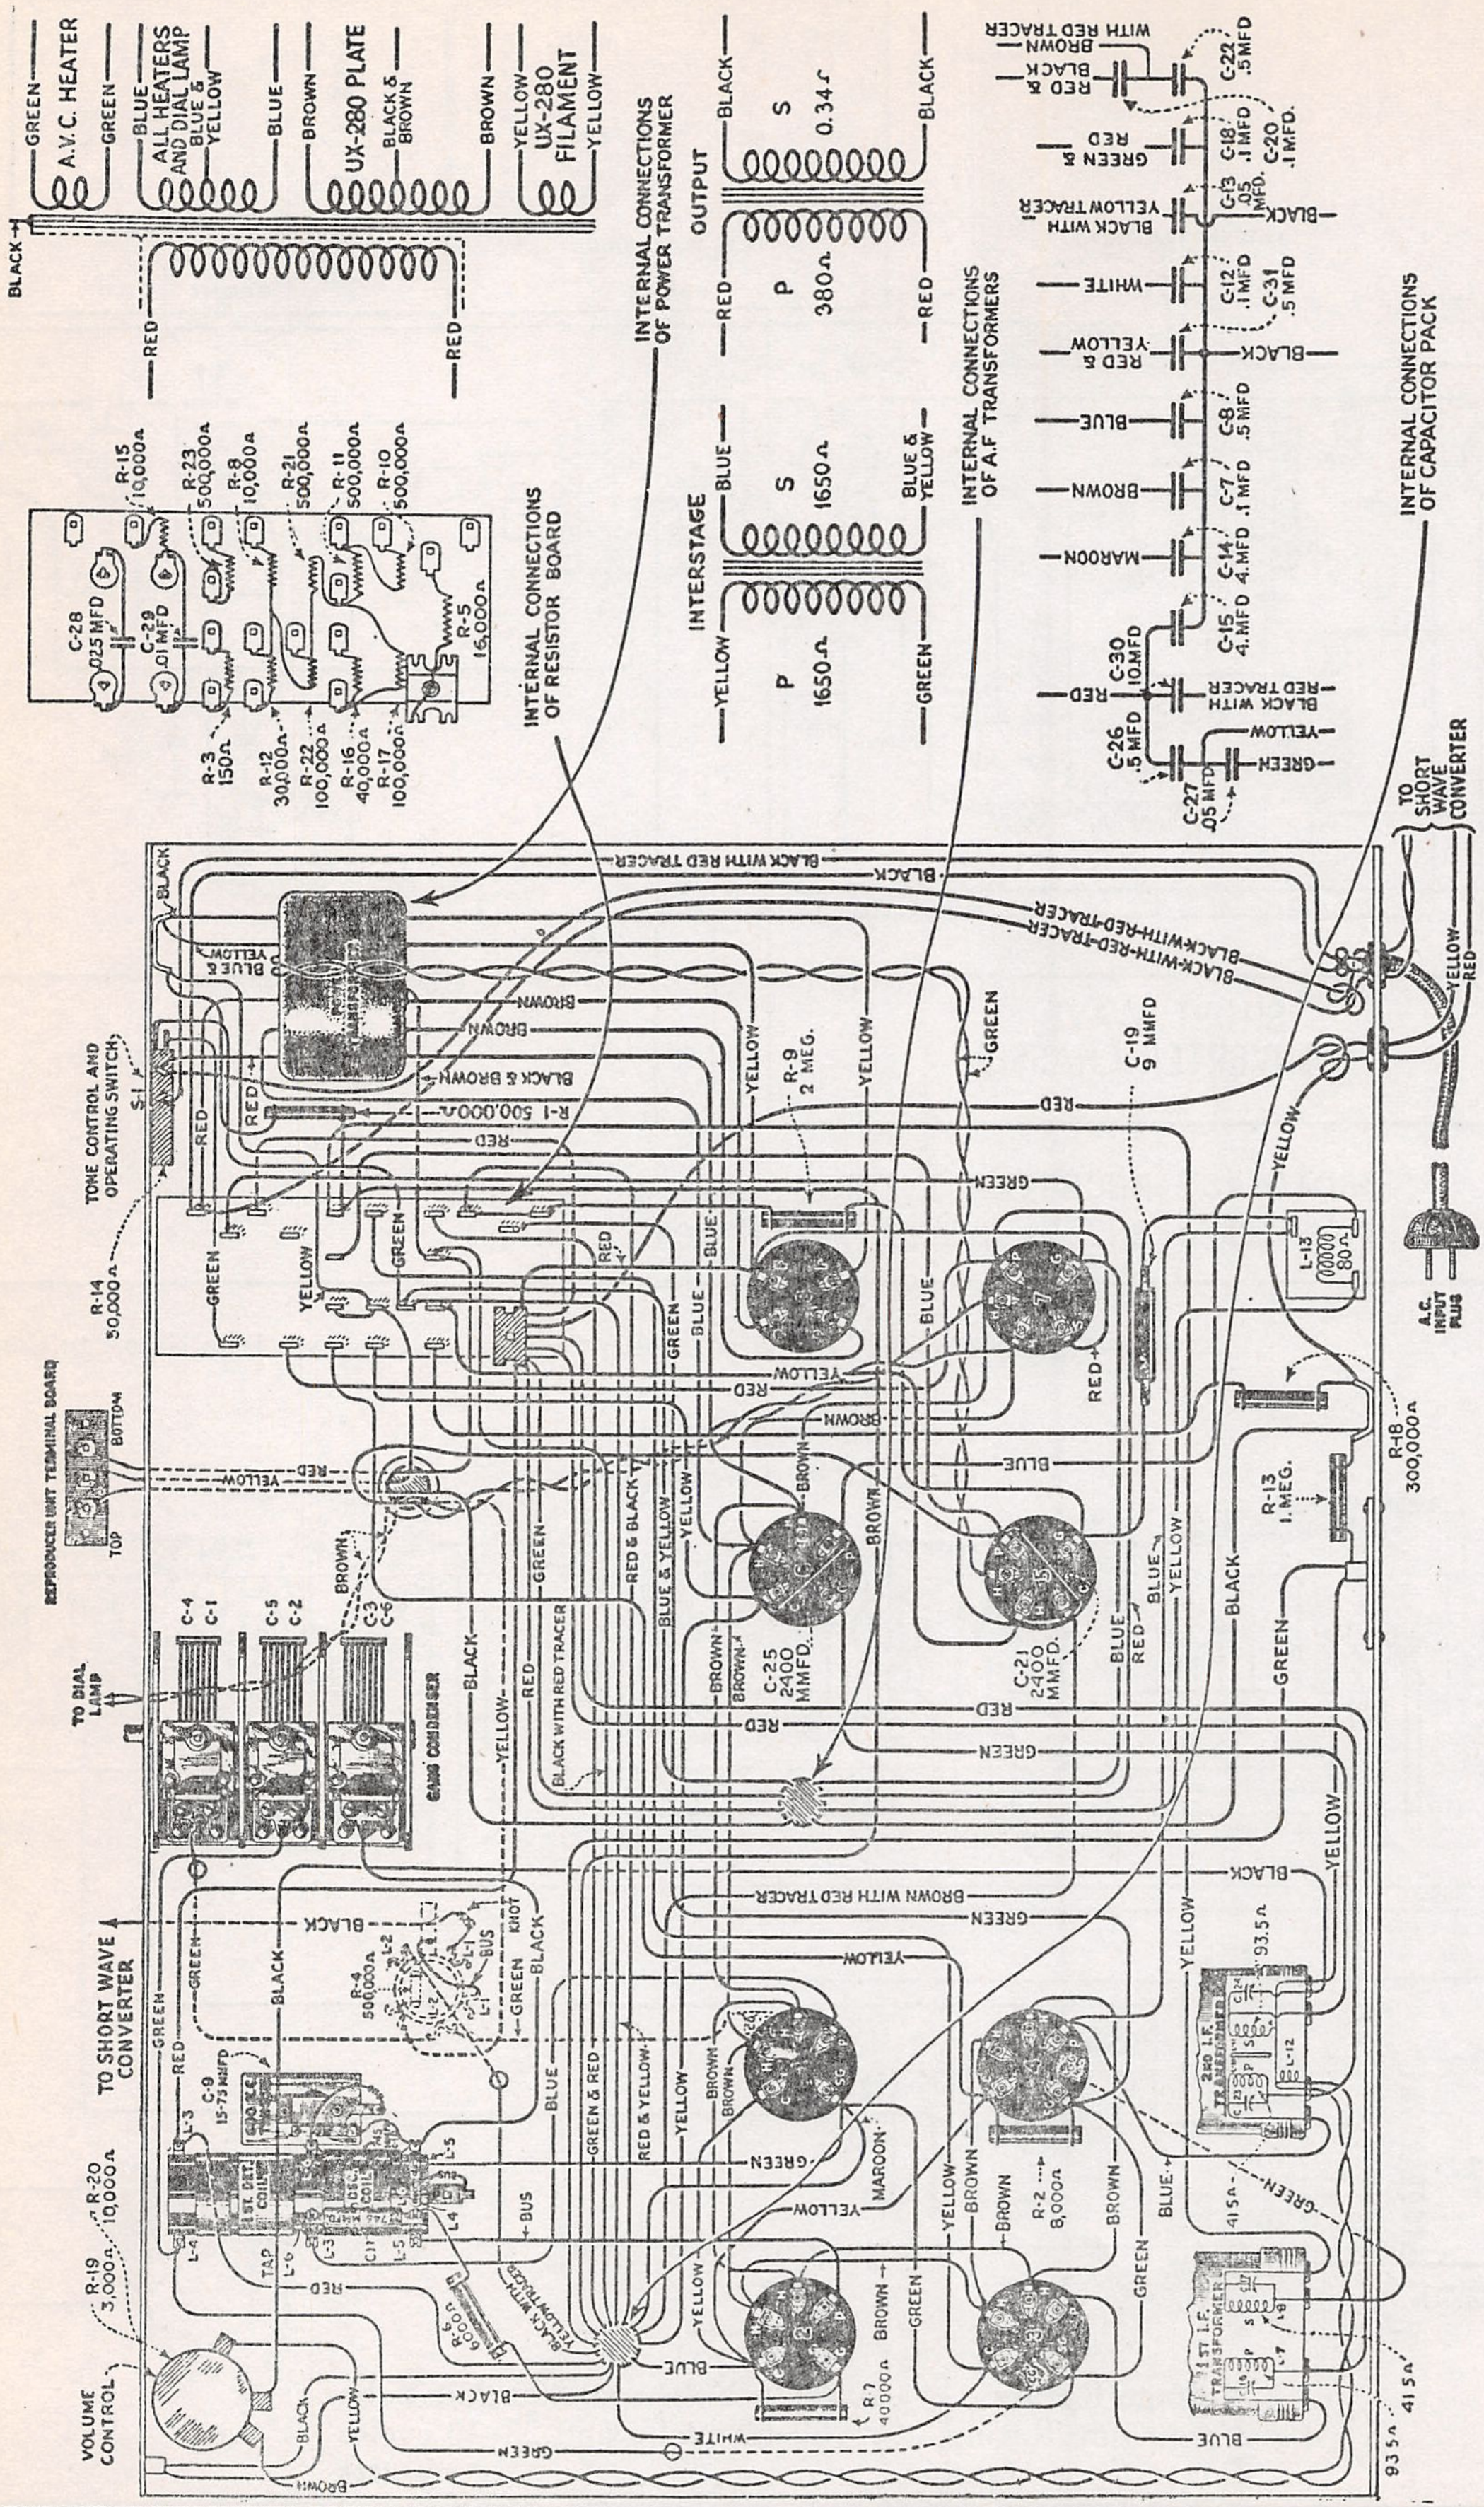
A.V.C. HEATER
GREEN
BLUE
ALL HEATERS AND DIAL LAMP
BLUE & YELLOW
UX-280 PLATE
BROWN
BLACK & BROWN
YELLOW
UX-280 FILAMENT
BLACK
RED
INTERNAL CONNECTIONS OF POWER TRANSFORMER
OUTPUT
S
0.34Ω
P
380Ω
INTERSTAGE
1650Ω
BLUE & YELLOW
INTERNAL CONNECTIONS OF A.F TRANSFORMERS
R-15 10,000Ω
R-23 500,000Ω
R-8 10,000Ω
R-21 500,000Ω
R-11 500,000Ω
R-10 500,000Ω
R-5 16,000Ω
C-28 .025 MFD
C-29 .01 MFD
R-3 150Ω
R-12 30,000Ω
R-22 100,000Ω
R-16 40,000Ω
R-17 100,000Ω
INTERNAL CONNECTIONS OF RESISTOR BOARD
C-22 .5 MFD
C-18 .1 MFD
C-20 .1 MFD
C-13 .05 MFD
C-12 .1 MFD
C-31 .5 MFD
C-8 .5 MFD
C-7 .1 MFD
C-14 4. MFD
C-15 4. MFD
C-30 10. MFD
C-26 .5 MFD
C-27 .05 MFD
RED & BLACK
BROWN WITH RED TRACER
GREEN & RED
BLACK WITH YELLOW TRACER
WHITE
RED & YELLOW
BLUE
BROWN
MAROON
BLACK WITH RED TRACER
INTERNAL CONNECTIONS OF CAPACITOR PACK
TO SHORT WAVE CONVERTER
BLACK WITH RED TRACER
BLACK-WITH-RED-TRACER
TONE CONTROL AND OPERATING SWITCH S-1
R-1 500,000Ω
R-9 2 MEG.
C-19 9 MMFD
R-14 50,000Ω
REPRODUCER UNIT TERMINAL BOARD
TOP
BOTTOM
L-13 80Ω
A.C. INPUT PLUG
R-18 300,000Ω
R-13 1. MEG.
C-25 2400 MMFD.
C-21 2400 MMFD.
TO DIAL LAMP
C-4 C-1
C-5 C-2
C-3 C-6
GANG CONDENSER
BLACK WITH RED TRACER
BROWN WITH RED TRACER
RED & BLACK
BLUE & YELLOW
TO SHORT WAVE CONVERTER
R-4 500,000Ω
BUS
KNOT
C-9 15-75 MMFD
1ST DET. COILS
R-20 10,000Ω
R-19 3,000Ω
VOLUME CONTROL
TAP
R-6 6000Ω
BLACK WITH YELLOW TRACER
R-7 40000Ω
R-2 8,000Ω
2ND I.F. TRANSFORMER
1ST I.F. TRANSFORMER
93.5Ω
41.5Ω
GREEN & RED
RED & YELLOW

MODEL RO-23
Converter Chassis

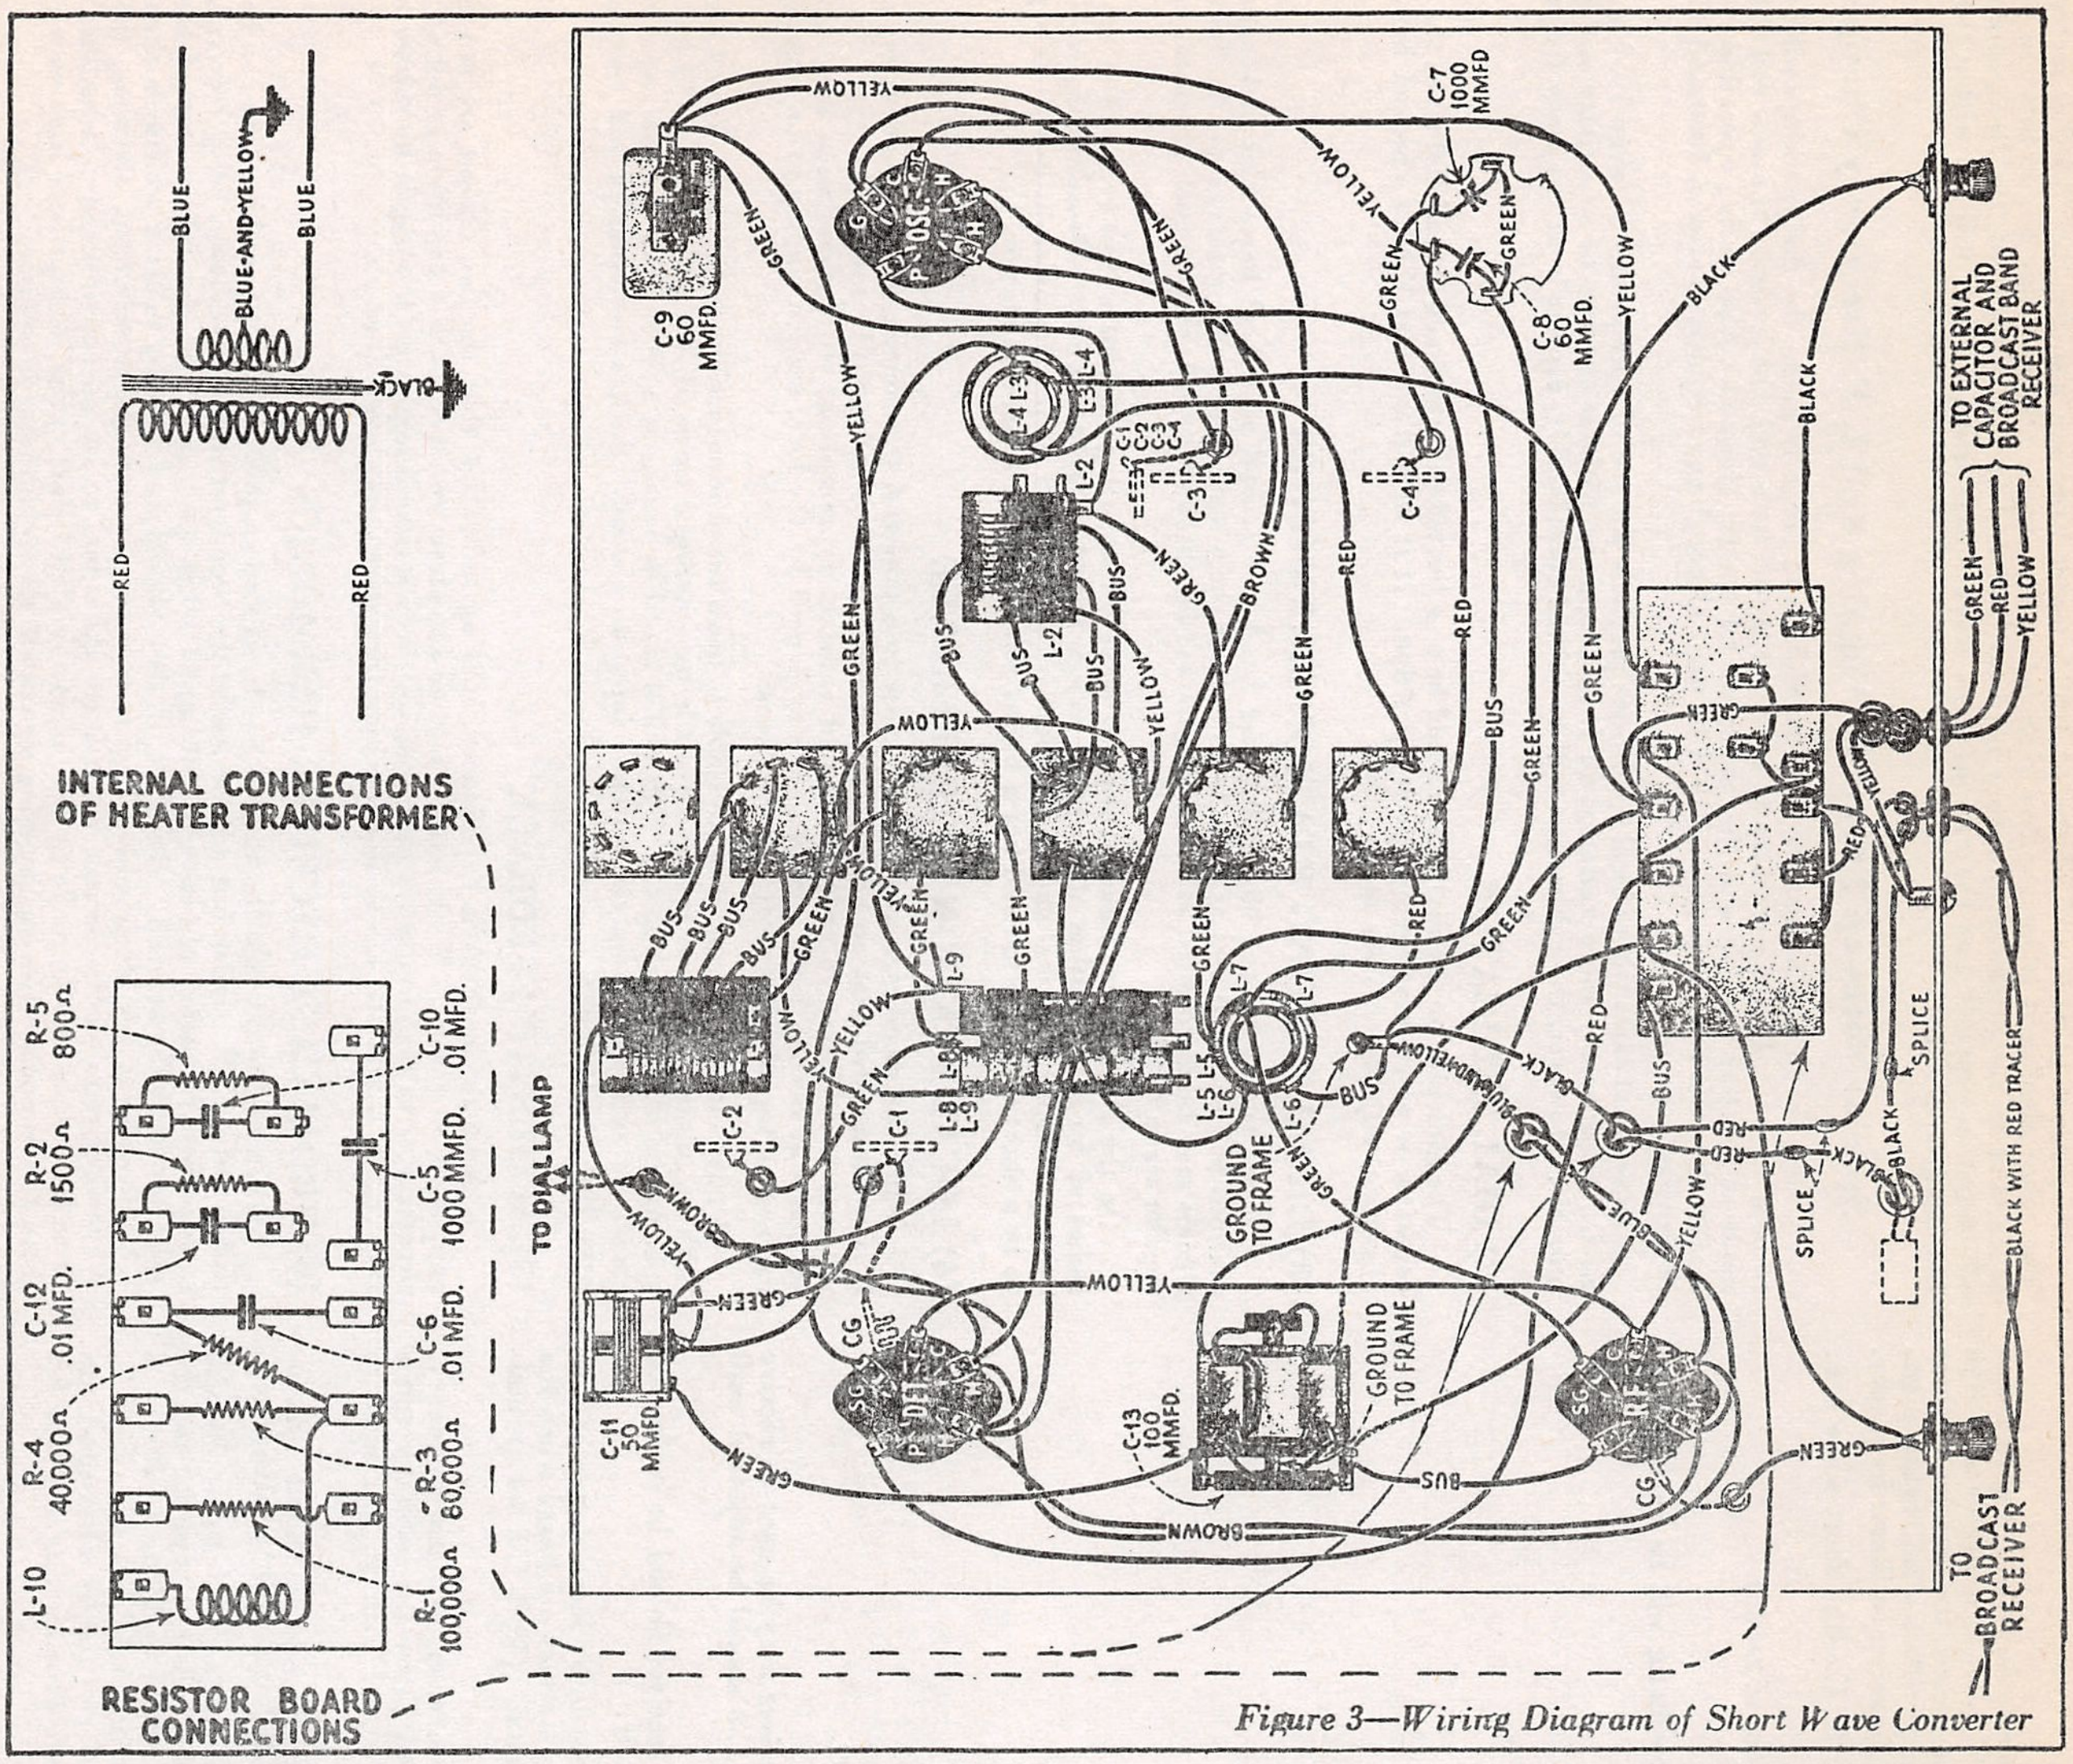
BLUE
BLUE-AND-YELLOW
BLUE
BLACK
RED
RED
INTERNAL CONNECTIONS OF HEATER TRANSFORMER
R-5 800Ω
R-2 1500Ω
C-12 .01 MFD.
R-4 40,000Ω
L-10
R-3 60,000Ω
R-1 100,000Ω
C-10 .01 MFD.
C-5 1000 MMFD.
C-6 .01 MFD.
RESISTOR BOARD CONNECTIONS
TO DIAL LAMP
C-9 60 MMFD.
C-7 1000 MMFD
C-8 60 MMFD.
C-3
C-4
C-2
C-1
C-11 50 MMFD.
C-13 100 MMFD.
L-1
L-2
L-3
L-4
L-5
L-6
L-7
L-8
L-9
UY-227
UY-224
UY-224
CG.
GROUND TO FRAME
GROUND TO FRAME
SPLICE
SPLICE
YELLOW
GREEN
BLACK
RED
BROWN
BUS
BLUE
TO EXTERNAL CAPACITOR AND BROADCAST BAND RECEIVER
BLACK WITH RED TRACER
TO BROADCAST RECEIVER

Figure 3—Wiring Diagram of Short Wave Converter

SERVICE DATA

Service information in conjunction with the broadcast receiver is covered in the Service Notes already issued on RCA-Victor Models R-8, R-10 or R-12. The Short Wave Converter is however somewhat different from the usual broadcast receiver and a discussion of its service problems will help the service man in the performance of his work.

ELECTRICAL DESCRIPTION OF CONVERTER CIRCUIT

The RCA Victor Short Wave Converter uses three Radiotrons, one UY-224 as an R. F. Amplifier, one UY-224 as a Detector and one UY-227 as an Oscillator. The purpose of the Converter is to amplify the incoming high frequency signal by means of the R. F. stage, beat it with a local Oscillator signal and produce a modulated beat frequency by means of the Detector, extract the beat frequency so that it may be amplified by means of the broadcast receiver. A special tuning Capacitor, for tuning the Oscillator and Detector stages simultaneously, is incorporated in this unit. A series of tapped coils in conjunction with a range switch provides for the shifting to various bands without interchanging coils as with the older style Converters. Also this switch changes the capacity used by the tuning capacitor so that the frequency range of each band is approximately the same. A small trimmer capacitor, known as the Resonator, is used to re-align the detector circuit with the Oscillator whenever the band is changed or the I. F. frequency is shifted. The shaft that controls the Resonator capacitor is also mechanically connected to the operating switch and the antenna switch. It is so made that when the power is turned "off," the antenna is shifted to the broadcast receiver so that broadcast reception may be obtained.

MODEL RO-23
Alignment Data

R. C. A. VICTOR CO., INC.

(1) ALIGNMENT OF CONVERTER CIRCUITS

If the Converter does not cover the bands indicated on the range switch, refer to Figure 2 and make the following adjustments. A calibrated oscillator or frequency meter is desirable although if the service man is familiar with the stations in the high frequency spectrum, the location of these stations on the scale can be used as a guide for making the adjustments. Also a calibrated short-wave receiver that has an oscillating detector may be used to check the Converter oscillator frequency.

Adjust the broadcast receiver so that it is accurately set at 1075 K. C.—the short wave I. F. frequency. Set the "Range" switch at the 51.3–98.5 meter position.

Set the tuning capacitor at its minimum position. (Plates fully out of mesh.)

Place the external oscillator in operation at 5960 K. C.

Adjust the oscillator shunt capacitor C-8 so that the external oscillator will be heard in the loudspeaker or noted on an output meter.

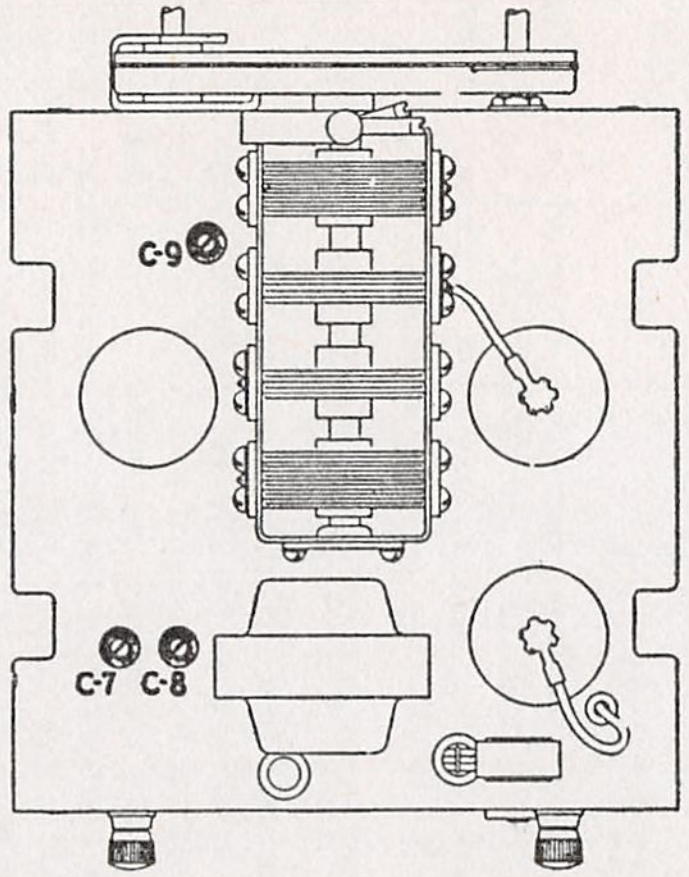

Figure 2—Location of Adjusting Capacitors

If the calibrated oscillator is not available then a calibrated receiver may be used to receive and check the frequency of the converter oscillator. The capacitor C-8 should be adjusted until the oscillator frequency is 7035 K. C.

If a wave meter is the only standard available, then a second receiver should be calibrated from it by means of one of the several methods for doing this accurately.

If no standards are available a satisfactory adjustment can be made by increasing capacitor C-8 slightly more than the point at which the 49 meter broadcasting stations are heard when the tuning capacitor is at its minimum position on the 51.3–98.5 meter band. (With C-8 set at minimum the 49 meter band should be received.)

Now shift the tuning capacitor to its maximum position. The Converter oscillator frequency, as picked up on a calibrated receiver, should be adjusted for 4130 K. C. by the oscillator series capacitor C-7. So adjusted, the receiver will receive a 3055 K. C. signal with an intermediate frequency of 1075.

Again, if no standards are available, an adjustment of C-7 that will give a definite point of resonance near the center range of the Resonator control with the tuning dial at 50 will be satisfactory.

After checking each end of the 51.3 to 98.5 meter band, shift the range switch to the 38–51.3 meter position. Set the tuning capacitor at its minimum position (plates fully out of mesh) and the I. F. frequency at 1075. Adjust the oscillator shunt capacitor C-9 until the oscillator frequency is 9100 K. C. or the receiver will respond to a signal of 8025 K. C. If no standards are available, adjust C-9 until the 49 meter stations all fall within and near the center of the 49 meter markings on the dial. Unless this adjustment is properly made the short wave broadcasting will not fall within the bands marked on the dial.

Alignment at each end of the 51.3–98.5 meter band are also for the 98.5–200 meter band. The other alignment is for the five high frequency ranges. When these alignments are properly made, and an intermediate frequency between 1050 and 1100 K. C. is used, the Resonator control will function properly and the various short wave broadcasting services will fall within the bands indicated on the dial.

Special Notes on Effects of Aligning and I. F. Frequency Changes

Unless the line-up adjustments are carefully and properly made, the dial markings will be found to be incorrect. If it is necessary to replace the oscillator coil, the leads on the new coil should be made as short as possible and the alignment of the set checked. Also during operation it is preferable that the I. F. frequency of 1075 be used although any frequency between 1050 and 1100 will be satisfactory.

In unusual cases where local conditions preclude the use of a frequency between 1050 and 1100 K. C., considerably more variation in I. F. frequency without the loss of sensitivity will be permissible. However, the calibration will be shifted considerably, especially at the lower frequencies.

(2) DIAL INDICATOR

The indicator on the dial lamp should be so adjusted that the dial will read 100 when the tuning capacitor is at its maximum capacity position. It is important that this be checked before any alignment adjustments are made.

(3) BROADCASTING STATION HARMONICS

When tuning on the 98.5–200 meter band, the second and third harmonics of broadcasting stations will be heard and as there is no regular short wave broadcasting service on this band such signals may be discounted as better results will be obtained by listening to such programs on their regular wave band.

On the lower length bands, the short wave broadcasting stations will be received in the bands indicated for each position of the range switch with but few exceptions. Broadcasting received at other positions of the dial should therefore be viewed with skepticism unless it is definitely proved to be a short wave station and not a higher harmonic of a broadcast station.

(4) LOCAL STATION INTERFERENCE

When the receiver is located very close to a powerful transmitter, either broadcasting or code it is recommended that an antenna not exceeding 30 feet in length be used. However, if a longer antenna is necessary in order to obtain satisfactory reception, cross modulation from the local station may occur. Such a condition is evidenced by the local station coming in on unmodulated carriers on top of some short wave stations.

Under such conditions, it is advisable to use a tuned input circuit to the short Wave Converter. Such an input circuit can readily be made by winding 3 turns of No. 20 wire on a 1¼ inch tube, spacing the turns ⅛ inch apart. The coil is tuned by means of a .0005 mfd. variable capacitor and should be connected from the antenna input to ground. Such a combination will tune broadly from 13.8 to 51 meters.

(5) ACOUSTIC FEEDBACK

If Acoustic feedback is experienced, it is an indication that the two chassis are not entirely supported on rubber. While with the usual broadcast receiver, such a condition is not so vitally necessary, with high frequency reception, unless each chassis is entirely floating in its rubber mounting and its shafts and knobs not touching the cabinet, howling will result.

(6) BROADCAST RECEIVER HARMONICS

When tuning through the various bands, at various points a slight breathing tone can be heard that is not a C. W. signal, but a harmonic of the broadcast receiver oscillator, being received. If an intermediate frequency of between 1050 and 1100 is used, these will not fall on any of the short wave broadcasting services. However, if they should and thereby cause a whistle, a slight shift —5 kilocycles of the intermediate frequency—will eliminate the interference. Retuning the Short Wave Converter will be necessary to restore the signal to its normal intensity. Identification of these harmonics can be made by this means, a slight shift in the intermediate frequency causing them to disappear while an incoming signal will slowly diminish in volume.

MODEL RO-23
Assembly Wiring
Notes

R. C. A. VICTOR CO., INC.

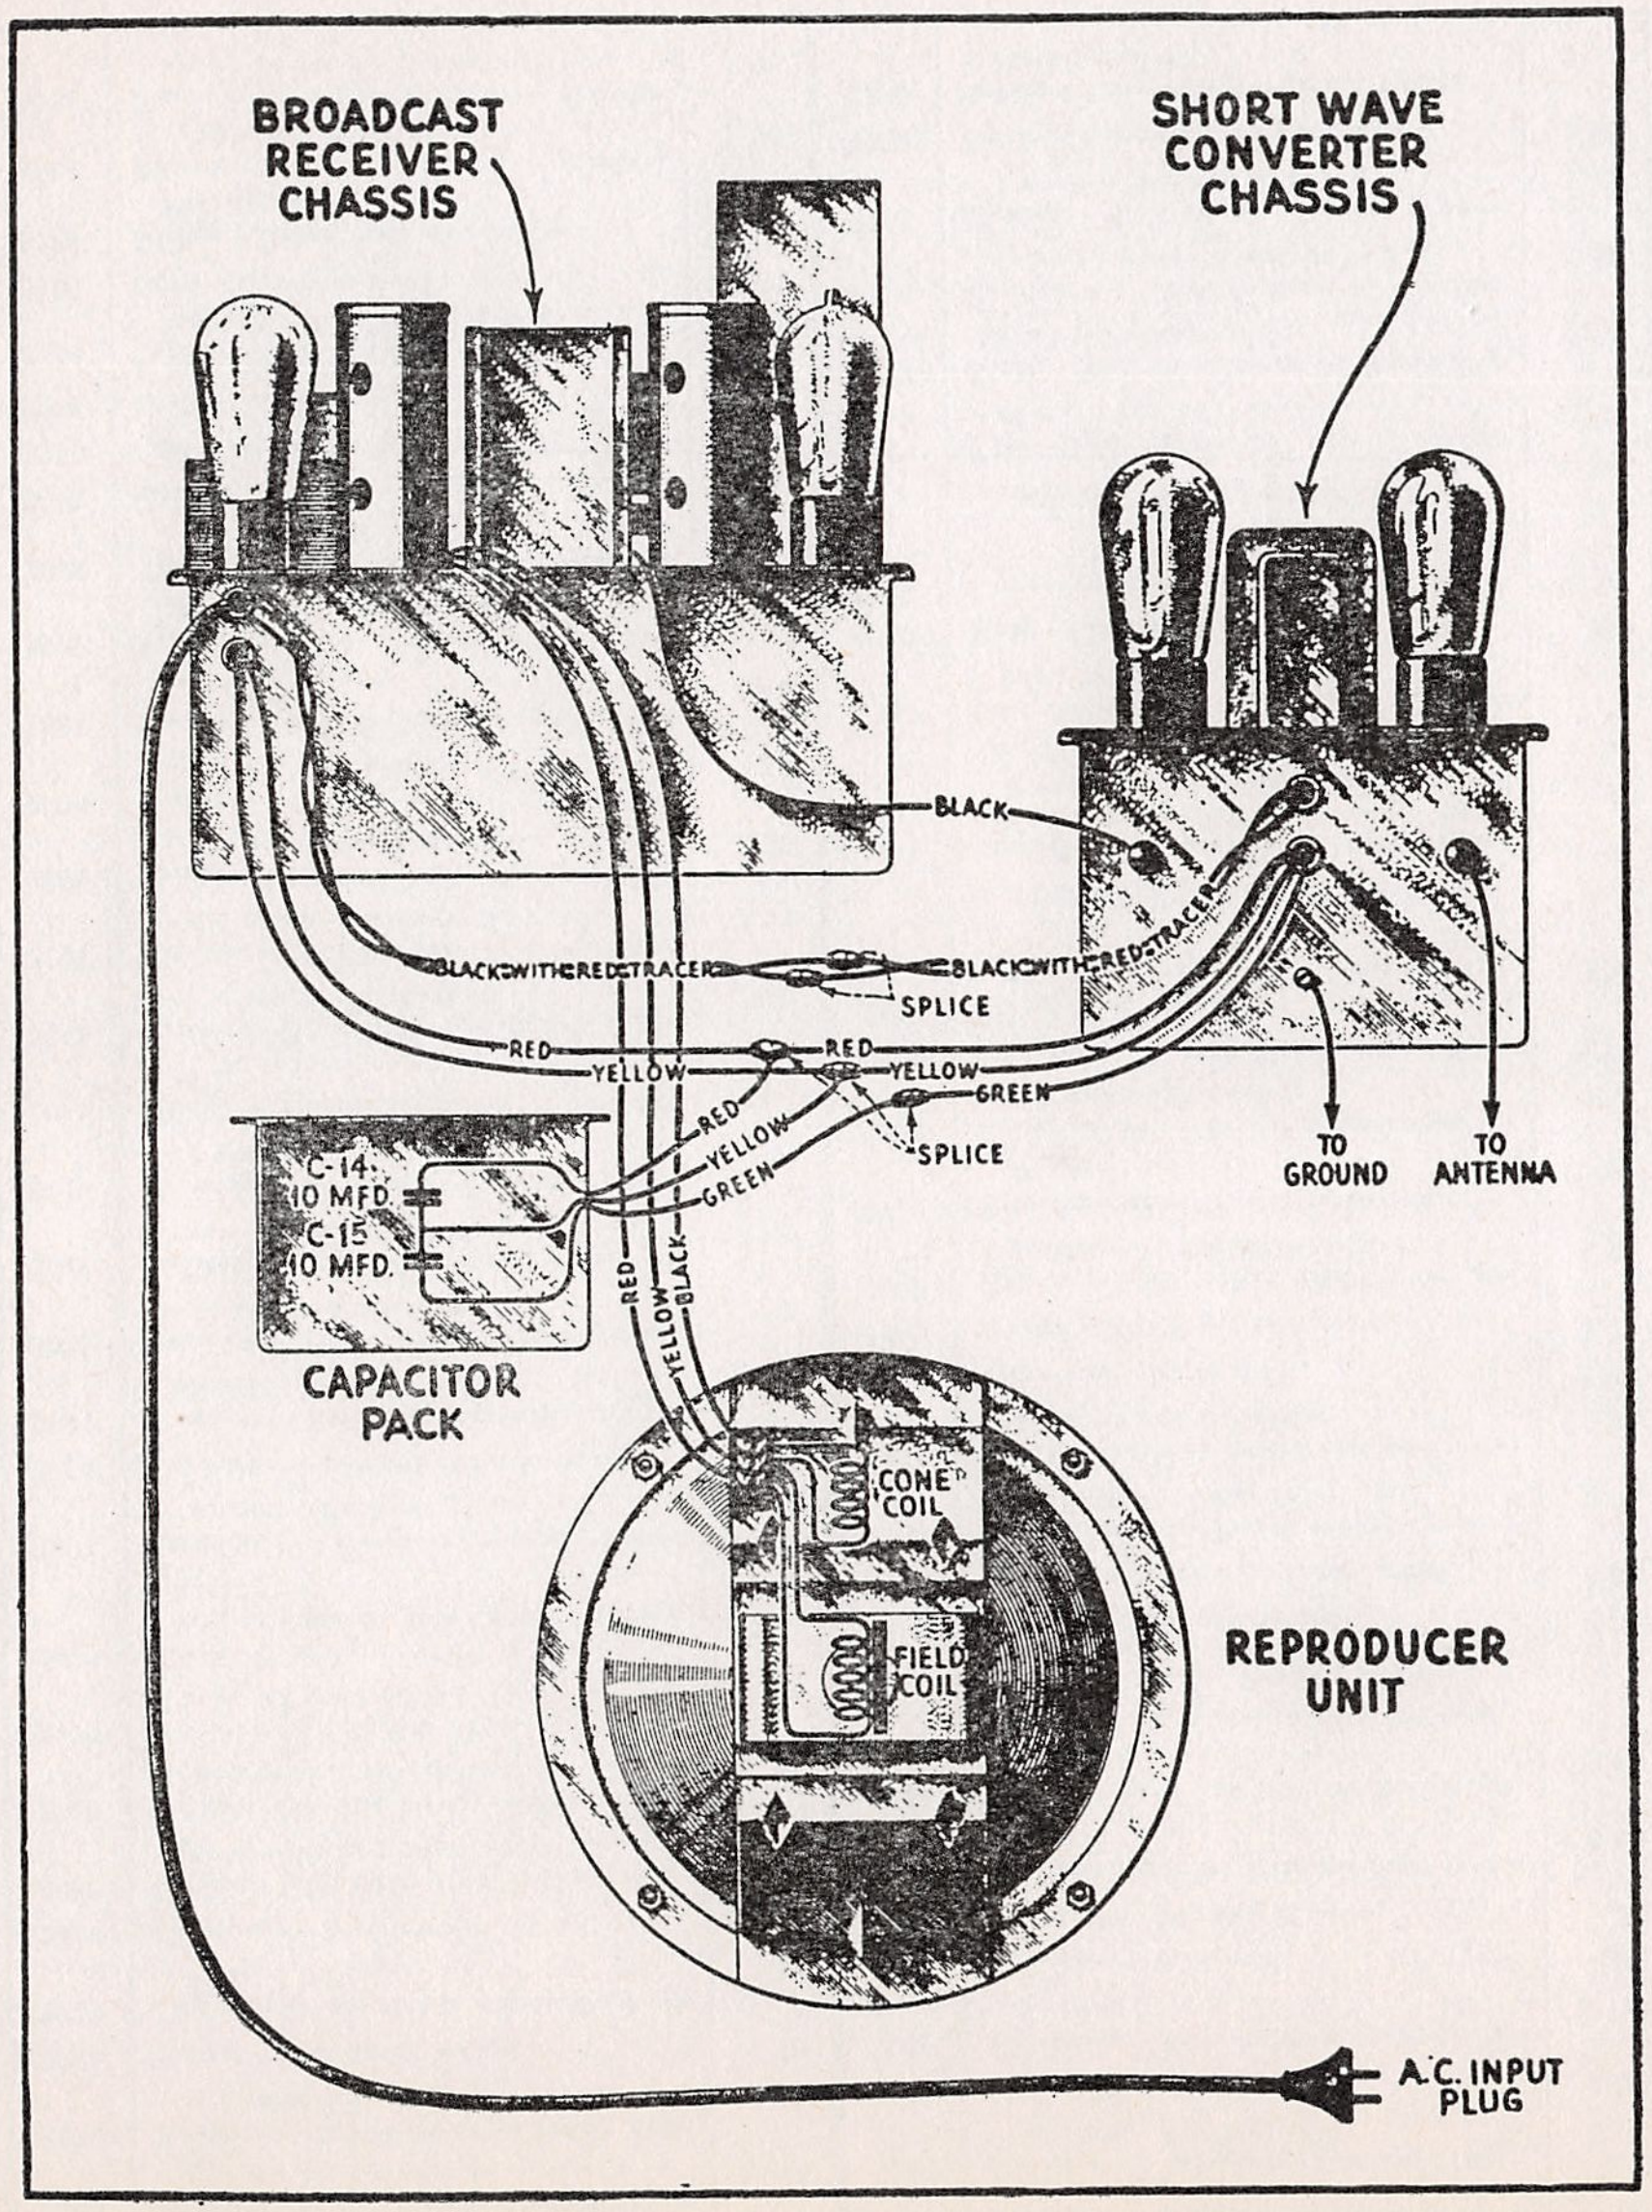

Figure 5—Assembly Wiring

(7) C. W. RECEPTION

Normally C. W. transmitters will not be heard unless they are modulated. However, such reception can be obtained by coupling an external oscillator loosely to the second detector of the broadcast receiver. This oscillator should be at about 174 or 176 K. C. so that a pleasing beat note will be obtained. Also a beat note may be obtained by means of an oscillator, the frequency of which is at the 1st I. F. frequency—1150 to 1100 K. C.—and loosely coupled to the input of the Broadcast receiver chassis.

(8) HUM

In addition to the usual causes of hum in the broadcast receiver, the following points should be checked in relation to hum in the Short Wave Converter.

(a) A. C. input cord near antenna wire. Keep these two leads separate as much as possible.
(b) Slack in A. C. cord has been placed close to Converter chassis. Take up the slack near the outlet, not near the Converter.
(c) Filament transformer center tap not connected.
(d) One side of filament transformer grounded, thereby shorting one section of the secondary.

(9) RANGE SWITCH

A defective "Range" switch may cause any of the following conditions:

(a) Noise. A corroded or loose wire or contact may cause excessive noise even when the switch is not being shifted. Check by removing the antenna to see if the noise decreases.
(b) Resonator control not effective. Check the detector sections—1 and 3 from the front—for faulty contacts.
(c) Oscillator not functioning. Check the oscillator sections—2, 4 and 5 from the front.
(d) Shift of dial readings. Check for corroded or loose connections.

(10) ANTENNA RESONANCE COIL

An open antenna resonance coil will lower the sensitivity of short wave reception. Its purpose is to match the output of the Converter to the input of the broadcast receiver.

(11) ANTENNA TRANSFER SWITCH

The Resonator Control shaft also is used to shift the antenna from the Short Wave Converter to the broadcast receiver. Also the power switch to the converter is operated simultaneously. A failure of these switches will usually be due to the failure of the engaging lever to throw the switch. If such a condition develops, the switch may be raised so that it properly engages with the operating arm on the shaft. See that no oil or grease prevents proper connection to the shaft at the friction bearing or noise will result when the Resonator is adjusted.

(12) FLUTTER

Fluttering may be caused by either of the following:

(a) Open capacitor C-14 or C-15. The purpose of these capacitors is to prevent flutter that may be encountered in a single Pentode receiver.
(b) Antenna lead close to detector Radiotron. See that this lead is in its proper position and removed from the detector Radiotron in the Converter.

(13) VOLTAGE READINGS

The following voltages are obtained at the Converter Radiotron sockets when measured with the usual set analyzers.

RADIOTRON SOCKET VOLTAGES

120 Volt A. C. Line

Radiotron No.	Control Grid to Cathode Volts D. C.	Screen Grid to Cathode Volts D. C.	Plate to Cathode Volts D. C.	Plate M. A.	Heater Volts A. C.
R. F.	—3	50	260	1.0	2.66
Detector	—3	50	180	1.0	2.66
Oscillator	—5	—	50	5.0	2.66

MODEL RO-23
Parts List

R. C. A. VICTOR CO., INC.

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price
	LONG WAVE RECEIVER	
2563	Resistor—6,000 ohms—Carbon type—1 watt—Package of 5	$3.00
2730	Resistor—18,000 ohms—Carbon type—1 watt—Package of 5	2.00
2746	Socket—Dial lamp socket	.50
2747	Cap—Grid contactor caps—Package of 5	.50
2749	Capacitor—2400 mmfd.	1.50
2882	Socket—UY Radiotron socket complete with insulation strip	.50
2968	Socket—UX Radiotron socket—Complete with insulation strip	.50
2970	Resistor — 500,000 ohms — Carbon type—1 watt—Package of 5	2.50
2977	Knob—Tuning control, volume control or tone control knob—Package of 5	2.50
3003	Cushion — Receiver chassis rubber cushion—Package of 4	.50
3024	Capacitor—9 mmfd.—Package of 2	.50
3029	Bracket—Dial lamp bracket and indicator	.50
3045	Resistor—40,000 ohms—Carbon type—1 watt—Package of 5	2.50
3048	Resistor — 500,000 ohms — Carbon type—½ watt—Package of 5	2.50
3049	Resistor—150 ohms—Carbon type—½ watt—Package of 5	2.50
3056	Shield — Radiotron shield — Package of 2	.50
3076	Resistor—1 megohm—Carbon type—½ watt—Package of 5	2.50
3077	Resistor—30,000 ohms—Carbon type—½ watt—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type—½ watt—Package of 5	2.50
3079	Resistor—40,000 ohms—Carbon type—½ watt—Package of 5	2.50
3081	Resistor—16,000 ohms—Carbon type 3 watt	.60
3092	Volume control—Volume control complete with mounting nut	1.50
3093	Tone control—Tone control complete with mounting nut	1.90
3095	Coil—R.F. coil	1.90
3235	Coil—1st detector and oscillator coil	2.85
3251	Coil—Choke coil	.90
3284	Board—Terminal board with 1 soldering terminal—Package of 5	.90
3285	Cord—Drive cord—Package of 5	1.00
3286	Spring—Drive cord tension spring—Package of 5	1.40
6185	Resistor — 100,000 ohms — Carbon—½ watt—Package of 5	2.00
6186	Resistor — 500,000 ohms — Carbon type—¼ watt—Package of 5	2.00
6187	Resistor — 300,000 ohms — Carbon type—½ watt—Package of 5	$2.00
6188	Resistor—2 megohm—Carbon type—½ watt—Package of 5	2.00
7054	Cord—Power cord	1.00
7062	Capacitor—Adjustable capacitor 15–70 mmfd.	1.00
7298	Capacitor—0.01 mfd.	.80
7299	Capacitor—745 mmfd.	.70
7340	Transformer—1st Intermediate transformer	3.00
7341	Transformer—2nd Intermediate transformer	3.00
7342	Capacitor—Comprising two 0.05 mfd., four 0.5 mfd., one 10.0 mfd., two 4.0 mfd. and four 0.1 mfd. capacitors in metal container	7.85
7343	Transformer—Audio transformer	3.85
7344	Transformer — Power transformer — 110 volts—60 cycles	8.00
7348	Board—Resistor board complete less resistors and capacitor	2.30
7362	Capacitor—0.025 mfd.	1.00
7404	Drum—Dial drum and scale	1.20
7405	Capacitor—20 mfd. electrolytic capacitor—In metal container	5.00
8770	Transformer — Power transformer — 25 cycles	12.00
8771	Transformer — Power transformer — 220 volts—60 cycles	9.00
8805	Capacitor—Variable tuning capacitor	6.00
8837	Support — Receiver chassis metal mounting support—Package of 4	.70
	LOUDSPEAKER ASSEMBLY	
3237	Loudspeaker mounting screw assembly—Comprising 4 screws, 8 nuts, 8 washers and 4 eyelets—Package of 1 set	.50
7345	Coil assembly—Comprising field coil, cone bracket and magnet	5.00
8559	Ring—Cone retaining ring	.80
8601	Cone—Speaker cone—Package of 5	15.00
	SHORT WAVE RECEIVER	
2747	Cap—Grid contactor cap—Package of 5	.50
2977	Knob—Station selector or Resonator knob—Package of 5	2.50
3058	Resistor — 100,000 ohms — Carbon type—1 watt—Package of 5	2.50
3153	Resistor—1500 ohms—Carbon type—1 watt—Package of 5	2.75
3285	Cord—Drive cord—Package of 5	1.00
3286	Spring—Drive cord tension spring—Package of 5	1
	SHORT WAVE RECEIVER —Continued	
3288	Socket—UY Radiotron socket—Complete with insulation strip	$ .50
3289	Contact lug—Complete with mounting rivet—Package of 10	.50
3290	Switch—"Off and On"—Toggle switch complete with mounting nut	1.00
3291	Board—Terminal board with two soldering terminals complete with mounting rivets—For switch and bracket assembly—Package of 5	.50
3292	Drive shaft and pulley—Package of 5	2.35
3293	Coil—For resistor board assembly	.65
6100	Coil—Coil assembly complete with mounting eyelet—For switch and bracket assembly	.75
6101	Socket—Dial lamp socket and bracket with mounting rivets	.50
6102	Capacitor—1000 mmfd.—Package of 5	2.50
6103	Resistor—800 ohms—Carbon type—1 watt—Package of 5	2.00
6104	Resistor—80,000 ohms—Carbon type 1 watt—Package of 5	2.00
6105	Resistor—40,000 ohms—Carbon type 3 watt—Package of 5	2.00
6106	Coupling—Switch lever shaft coupling bushing with 2 groove pins—Package of 5	.50
6107	Switch — Antenna transfer toggle switch	1.00
6108	Binding post—Complete with terminal lug, mounting washer and nut—Package of 5	1.75
6109	Knob—Knob with pointer—Package of 5	1.75
6110	Dial lamp shield and indicator	.50
6111	Escutcheon—Band selector switch knob escutcheon—Package of 5	1.80
6112	Cushion — Receiver chassis rubber cushion—Package of 4	.50
7062	Capacitor — Adjustable capacitor — 15–70 mmfd.	1.00
7298	Capacitor—0.01 mfd.	.80
7406	Capacitor—Double adjustable capacitor—One section 10–70 mmfd., one section 800–1000 mmfd.	1.10
7407	Coil—High frequency detector coil	$1.05
7408	Coil—Low frequency detector and oscillator coil	1.45
7409	Coil—High frequency oscillator coil	1.85
7410	Capacitor—Variable capacitor 7 plate—Complete with mounting nut and washer	1.75
8806	Transformer—Filament power transformer	3.25
8807	Transformer—Filament power transformer—105–120 volts, 25-cycles	5.75
8808	Transformer—Filament power transformer—220 volts, 60 cycles	3.40
8809	Board—Resistor board less resistors, capacitors and coil	1.00
8810	Lever—Switch lever assembly—Comprising shaft, 3 switch levers and coupling bushing	.70
8811	Switch—Band selector switch complete with mounting washer and nut	6.60
8812	Capacitor—Tuning capacitor assembly	5.10
8813	Dial drum and scale	1.20
8837	Support — Chassis metal mounting support—Package of 4	.70
10820	Capacitor—100 mmfd.	.50
	CABINET ASSEMBLY	
X-24	Top	7.00
X-25	Stretcher rails—Comprising R.H. and L.H. end rails and center rail	4.10
X-26	Leg	4.15
X-27	Foot assembly — Comprising foot, hanger bolt, packing nut and ferrule—Assembled	1.45
X-28	Baffle board and grille cloth	1.35
X-29	Escutcheon—Tuning dial escutcheon for long wave	1.60
X-30	Escutcheon—Tuning dial escutcheon for short wave	1.60
3223	Escutcheon—Metal bezel for dial	.50
3287	Label—Metal trade mark label—Package of 5	.75
9398	Cabinet—Cabinet complete less equipment	77.25

R. C. A. VICTOR CO., INC.

MODEL RAE-26
Assembly Wiring

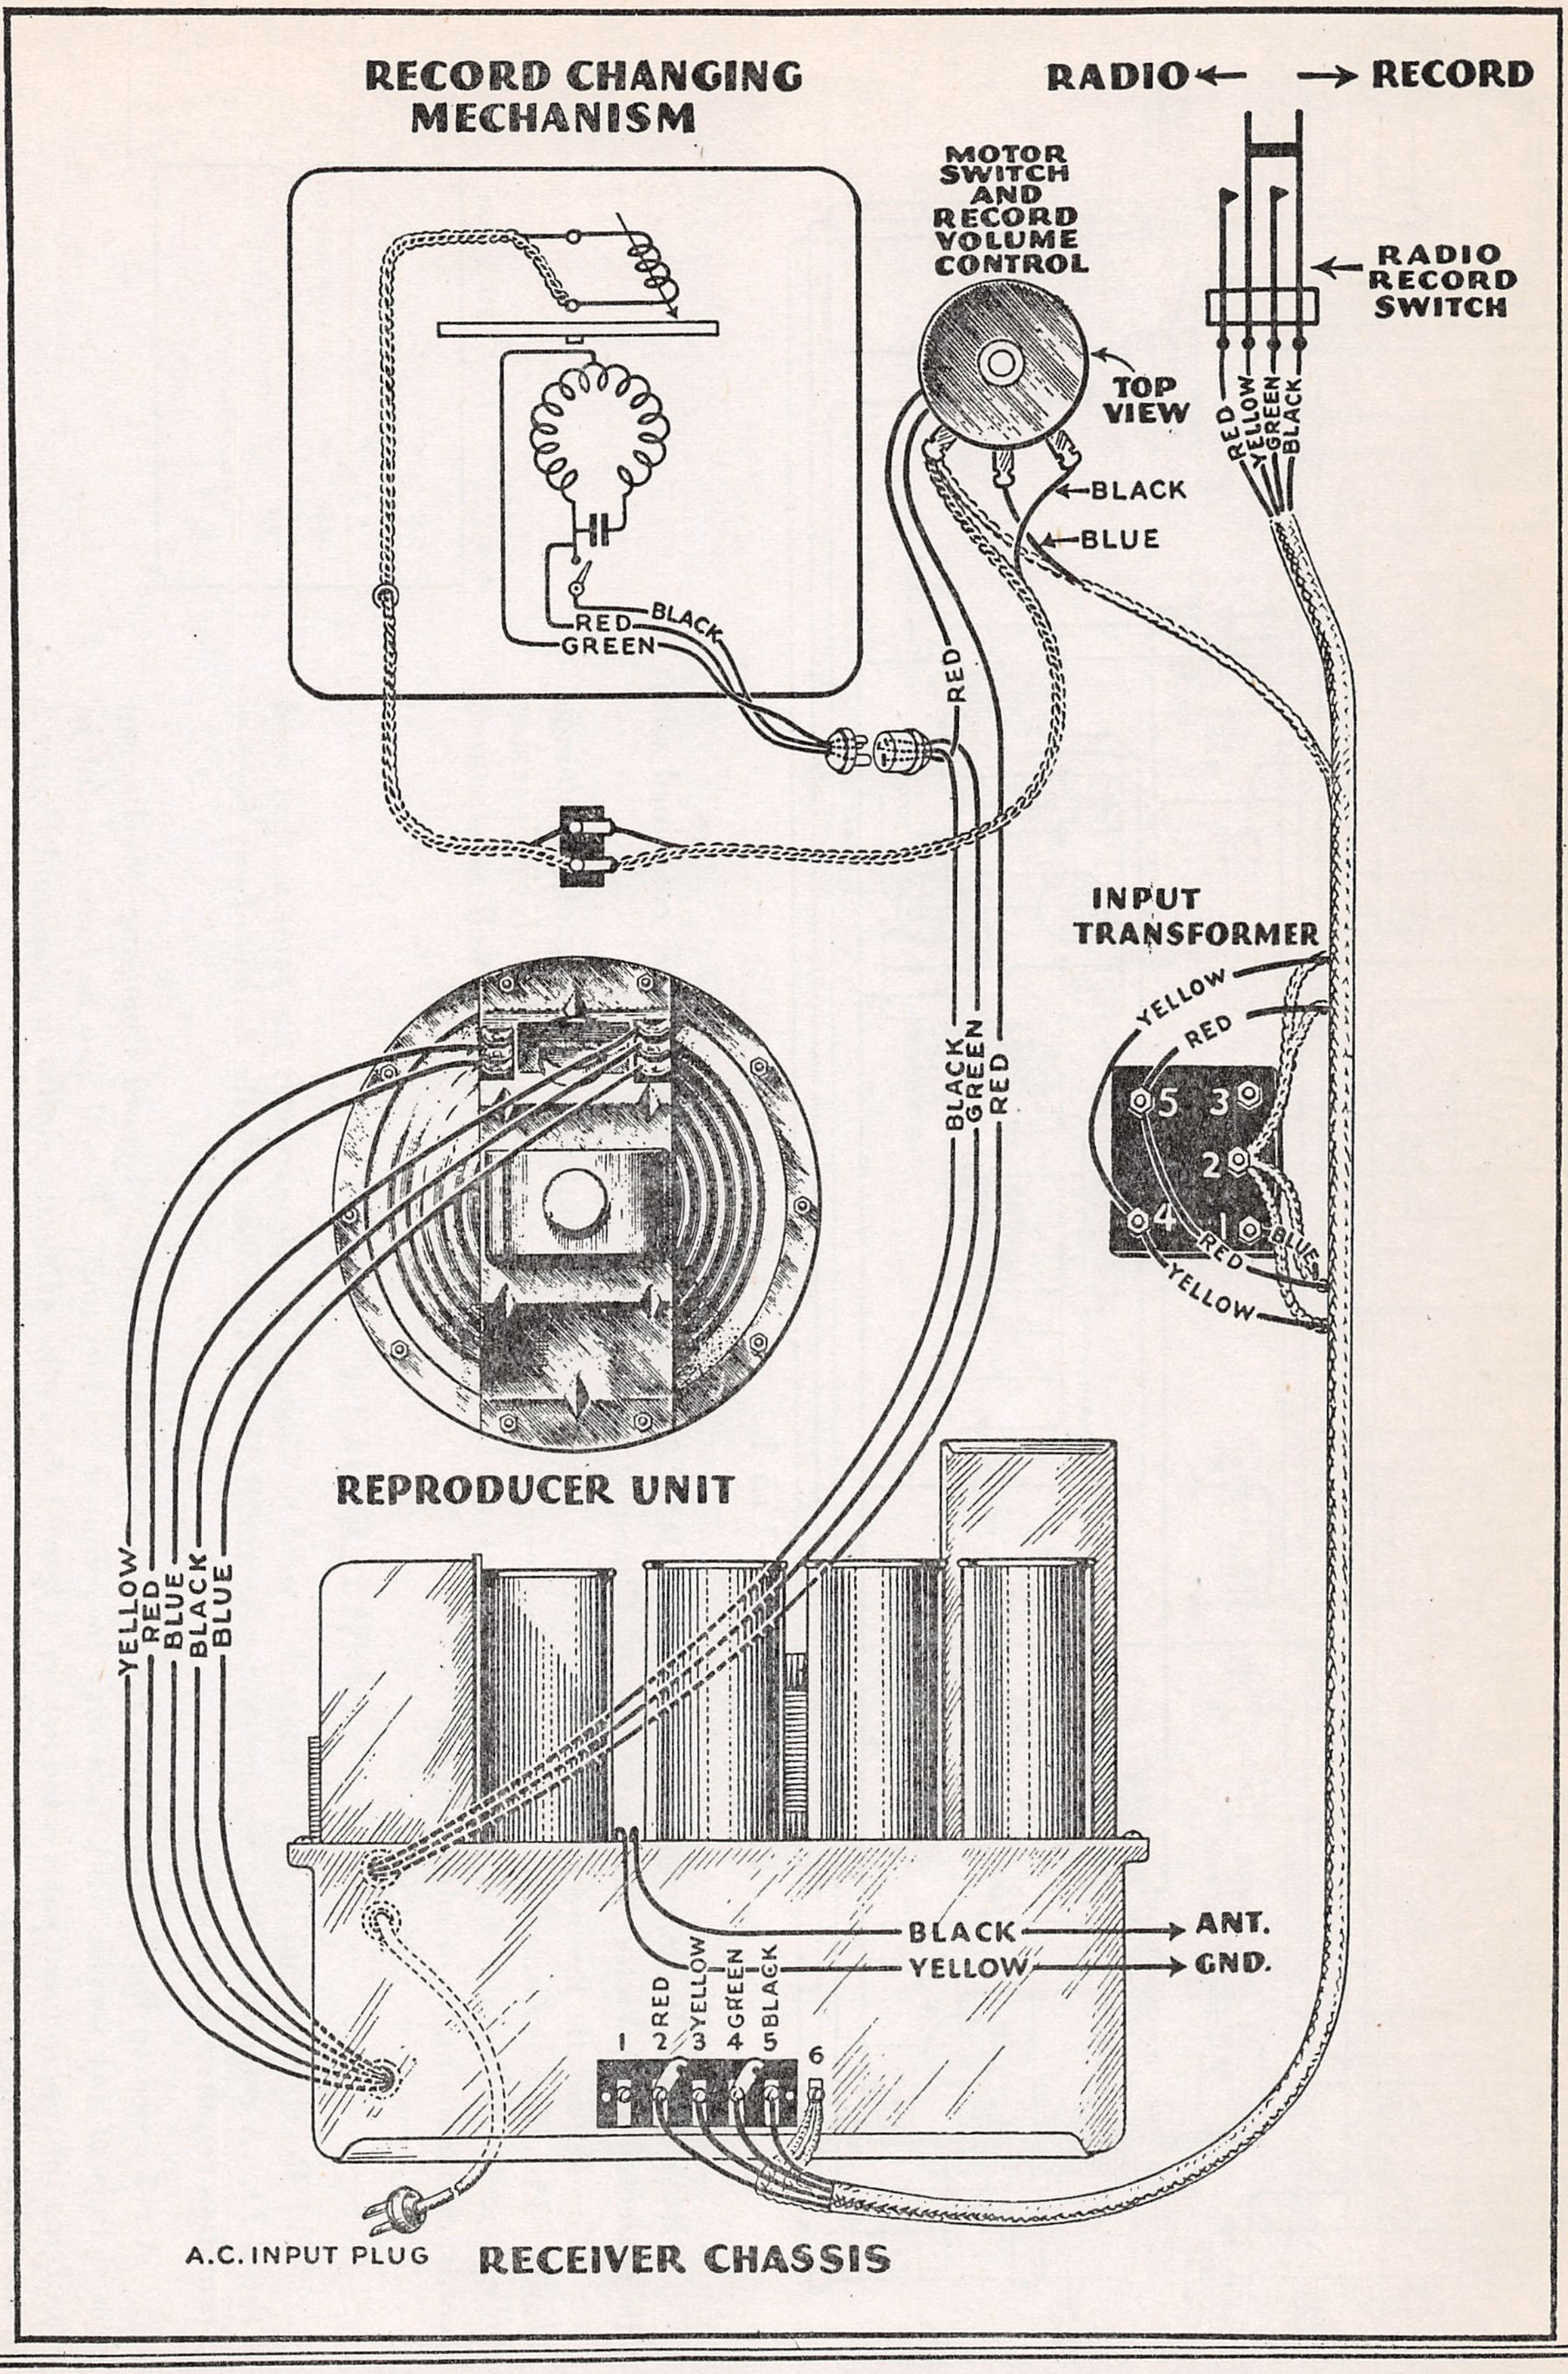
RECORD CHANGING MECHANISM
RADIO ←
→ RECORD
MOTOR SWITCH AND RECORD VOLUME CONTROL
TOP VIEW
RADIO RECORD SWITCH
RED
YELLOW
GREEN
BLACK
BLACK
BLUE
BLACK
RED
GREEN
RED
INPUT TRANSFORMER
YELLOW
RED
5
3
2
4
1
BLUE
RED
YELLOW
BLACK
GREEN
RED
REPRODUCER UNIT
YELLOW
RED
BLUE
BLACK
BLUE
BLACK → ANT.
YELLOW → GND.
1
2 RED
3 YELLOW
4 GREEN
5 BLACK
6
A.C. INPUT PLUG
RECEIVER CHASSIS

Assembly Wiring Diagram of RAE-26

MODEL RAE-26
Schematic

R. C. A. VICTOR CO., INC.

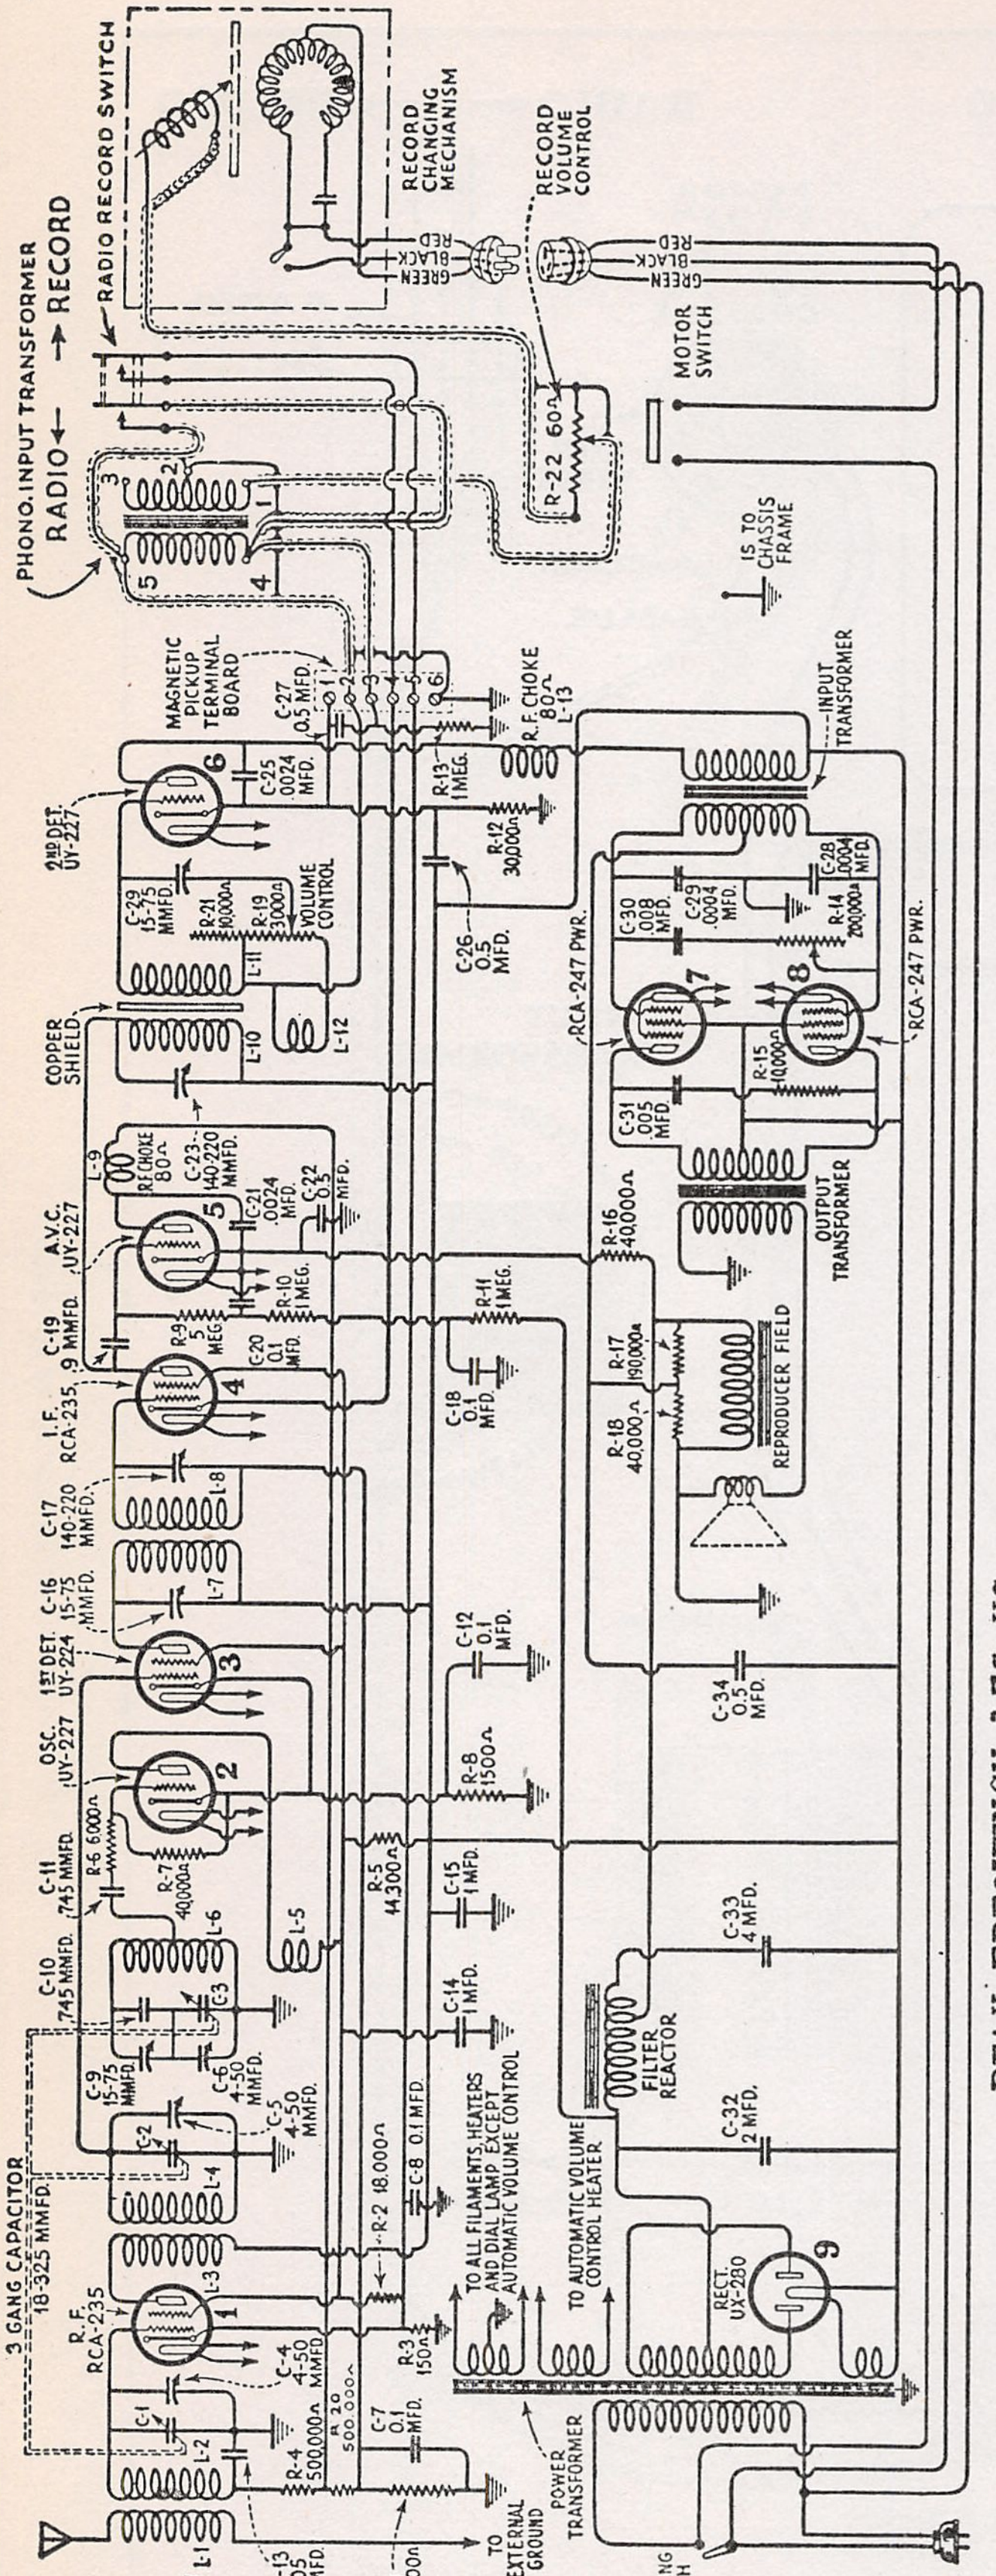
RECORD CHANGING MECHANISM
RECORD VOLUME CONTROL
RADIO RECORD SWITCH
RADIO ← → RECORD
PHONO. INPUT TRANSFORMER
RED
BLACK
GREEN
MOTOR SWITCH
R-22 60Ω
IS TO CHASSIS FRAME
MAGNETIC PICKUP TERMINAL BOARD
C-27 0.5 MFD.
R.F. CHOKE 80Ω L-13
R-13 1 MEG.
R-12 30,000Ω
C-26 0.5 MFD.
INPUT TRANSFORMER
2ND DET. UY-227
C-25 .0024 MFD.
C-29 15-75 MMFD.
R-21 10,000Ω
R-19 3000Ω VOLUME CONTROL
L-11
L-12
C-30 .008 MFD.
C-29 .0004 MFD.
C-28 .0004 MFD.
R-14 200,000Ω
RCA-247 PWR.
R-15 10,000Ω
COPPER SHIELD
L-10
A.V.C. UY-227
L-9
RF CHOKE 80Ω
C-23 140-220 MMFD.
C-21 .0024 MFD.
C-22 .1 MFD.
R-10 1 MEG.
C-31 .005 MFD.
OUTPUT TRANSFORMER
R-16 40,000Ω
I.F. RCA-235
C-19 9 MMFD.
R-9 5 MEG.
C-20 0.1 MFD.
R-11 1 MEG.
C-18 0.1 MFD.
R-17 190,000Ω
R-18 40,000Ω
REPRODUCER FIELD
C-17 140-220 MMFD.
L-8
C-16 15-75 MMFD.
L-7
1ST DET. UY-224
C-12 0.1 MFD.
C-34 0.5 MFD.
OSC. UY-227
R-8 1500Ω
C-11 745 MMFD.
R-6 6000Ω
R-7 40,000Ω
L-6
L-5
R-5 14,300Ω
C-15 1 MFD.
C-33 4 MFD.
C-10 745 MMFD.
C-9 15-75 MMFD.
C3
C-6 4-50 MMFD.
C-5 4-50 MMFD.
C2
L-4
C-14 1 MFD.
FILTER REACTOR
C-32 2 MFD.
3 GANG CAPACITOR 18-325 MMFD.
R-2 18,000Ω
C-8 0.1 MFD.
TO ALL FILAMENTS, HEATERS AND DIAL LAMP EXCEPT AUTOMATIC VOLUME CONTROL
TO AUTOMATIC VOLUME CONTROL HEATER
R.F. RCA-235
L-3
C1
L-2
C-4 4-50 MMFD.
R-4 500,000Ω
R 20 500,000Ω
R-3 150Ω
C-7 0.1 MFD.
RECT. UX-280
L-1
C-13 .05 MFD.
R-1 500,000Ω
TO EXTERNAL GROUND
POWER TRANSFORMER
OPERATING SWITCH

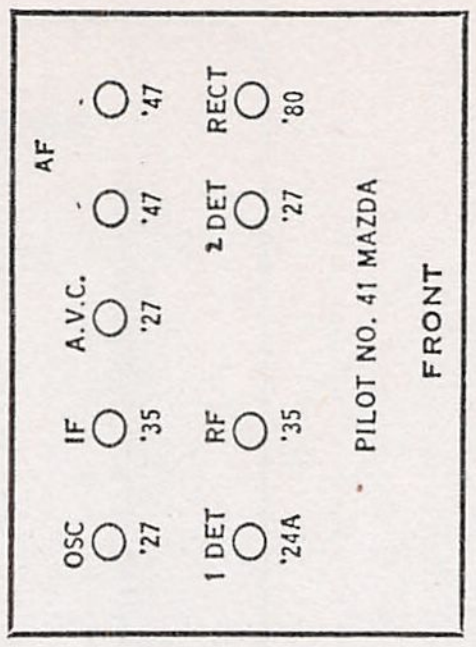
Model
RAE-26 (1931)
OSC
'27
IF
'35
A.V.C.
'27
AF
'47
'47
1 DET
'24A
RF
'35
2 DET
'27
RECT
'80
PILOT NO. 41 MAZDA
FRONT

PEAK FREQUENCY-175 KC

RCA Victor Radiola Automatic Electrola RAE-26 is a nine tube radio receiver combined with the perfected RCA Victor Automatic Record Changing Mechanism.

The Automatic Record Changing Mechanism provides for the continuous playing of ten 10-inch records. Provision is also made for a turntable speed of 33⅓ R.P.M. as well as 78 R.P.M. This makes the mechanism adaptable for the playing of the Program Transcription Records as well as standard records, either manually or automatically.

SERVICE DATA

The Receiver assembly and Loudspeaker used in Model RAE-26 is exactly the same as that used in the R-11. A reference to the Service Notes for the R-11 will therefore give the details of any Service information required on these units.

A reference to the Service Notes on the RCA Victor Automatic Record Changing Mechanism gives details of any service work that may be required on this unit. It will also be found useful in identifying the replacement parts listed below. Figure 1 shows the schematic circuit diagram and Figure 2 the assembly wiring diagram.

MODEL RAE-26
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes removed from socket and AC plug disconnected from power supply line. Field coil disconnected. All pickup equipment disconnected from terminal board and terminals 2 and 3 should be joined. Also terminals 4 and 5 should be interconnected.

From Chassis To	Correct		Incorrect
Aerial to Ground Post	40	ohms	
Chassis to			
			TC-Y
RF Control Grid(early model)	1,000,005	ohms	BLC- in tuned circuit (.1 mfd)
			BC-AVC chk-Y
RF Control Grid(late model)	1,500,005	ohms	BLC- in tuned circuit (.05 mfd)
			BC- 1 IF Tr. Sec -Y
RF Cathode	150	ohms	BC- rf K-Y (.1 mfd)
RF Screen Grid	18,150	ohms	BC- rf Sg-Y (1. mfd)
			BC-47 Sg- Y (.5 mfd)
			BC-'80 F- Spkr div. tap
RF Plate	32,508	ohms	BC- rf P-Y (1. mfd)
			See RF Screen Grid
RF Plate to '80 Fil	58	ohms	
1 Detector Control Grid	5	ohms	TC-Y
1 Detector Cathode	1,500	ohms	BC-Y (.1 mfd)
1 Detector Screen	18,150	ohms	See R-F Screen
1 Detector Plate	32,541.5	ohms	See R-F Plate
1 Detector Plate to '80 Fil	93.5	ohms	TC- 1 IF Tr.
Oscillator Control Grid	41,500	ohms	BLC-Osc.Grid Cir.(.0074
			BC-Osc K-Y (.1 mfd)
Oscillator Cathode	1,500	ohms	Bc-Osc K-Y (.1 mfd)
Oscillator Plate	18,151	ohms	See R-F Screen
Osc Plate and Det Screen	1	ohm	
IF Control Grid (all models)	500,041.5	ohms	BC-Y (.5 mfd)
IF Control Grid- AVC Plate (early)	121.5	ohms	TC-1 IF Tr Sec
IF Screen Grid	18,150	ohms	See RF Screen
IF Plate	32,491.5	ohms	See 1 Detector Plate
IF Plate -'80 Fil	41.5	ohms	To- 2 IF Tr. Pri.
AVC Control Grid (early)	7,230,285	ohms	BLC- if P- AVC Cg (9 mmfd)
			BC-5 meg - AVC H (.1 mfd)
			BC-1 meg- Y (.1 mfd)
			FC-'80 Anode - 80 F(2 mfd)
			FC filter chk-80 F(4 mfd)
			BC-AVC K-Y (.5 mfd)
			BC-Spkr divides tap - Y
			BC-AVC K-AVC P (.0024 mfd)
AVC Control Grid (late)	4,230,285	ohms	See early model
AVC Cathode	270,000	ohms	BC-AVC K-AVC P
			BC-AVC K-Y
AVC Plate	1,000,085	ohms	BC-AVC P-AVC K
			See RF Control Grid

2 Det Control Grid(Pickup Board Ter#2)	93.5	ohms	
2 Det Control Grid to V.C. Arm	3,093.5-10,093.5	ohms	TC-2D Cg- VC Arm
2 Det Cathode	30,000	ohms	BC- Ter#1-Ter#3
			BC- 2 DK-'80 Fil

From Chassis To	Correct		Incorrect
Pickup Board Terminal 2	1,000,000	ohms	BC-TER#1-TER#3
2 Detector Plate	34,830	ohms	See RF Plate
2 Detector Plate-'80 Fil	2,380	ohms	
'47 Control Grid	43,850	ohms	BC- 47 Cg-Y
			See AVC Cathode
'47 Control Grid to Control Grid	7,700	ohms	Tone Control Cond
			Tone Control Resist
'47 Screen	32,450	ohms	See 2 Detector Plate
'47 Screen - '80 Fil	0	ohm	
'47 Plate	32,755	ohms	See 2 Detector Plate
'47 Plate to Plate	610	ohms	Harmonic condenser
80 Anode to chassis	230,400	ohms	See AVC Control Grid
80 Anode to Anode	230	ohms	
80 Fil to chassis	32,450	ohms	See Rf Plate
			See RF Screen Grid
Across Speaker field	860	ohms	

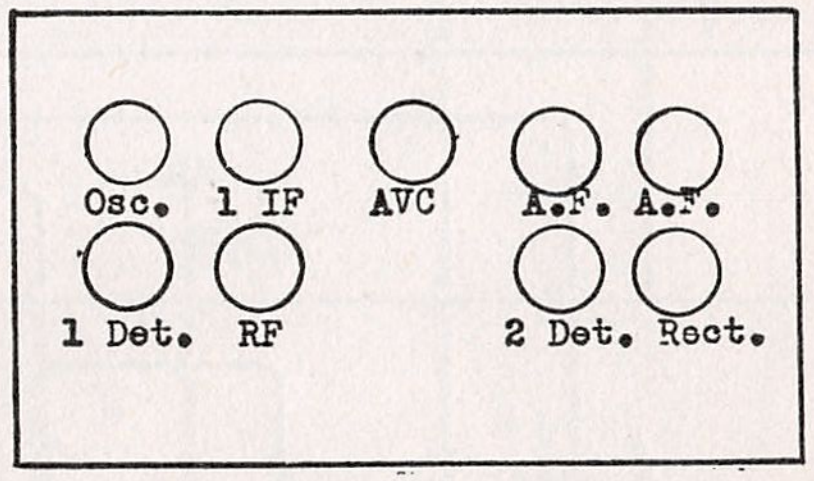

Line Voltage 110. Volume Control does not change voltages.

Tube	Cathode-Heater	Control Grid-Cathode	Screen Grid-Cathode	Plate-Cathode	Plate Current	Filament Voltage
RF	2.	0.1*	75.	205.	5.0 ma	2.2
Osc.	8.	0.	-	60.	5.0	2.2
1 Det.	7.	7.0	70.	200.	0.5	2.2
IF	2.	0.1*	75.	205.	5.0	2.2
AVC	0.	0.	-	25.	-	2.2
2 Det.	20.	8.0*	-	180.	0.5	2.2
Pwer	-	10.	210.	205.	25.	2.2
Pwer	-	10.	210.	205.	25.	2.2

* Not true reading because of resistance in the circuit.

MODEL M-30
Auto Radio
Schematic

R. C. A. VICTOR CO INC.

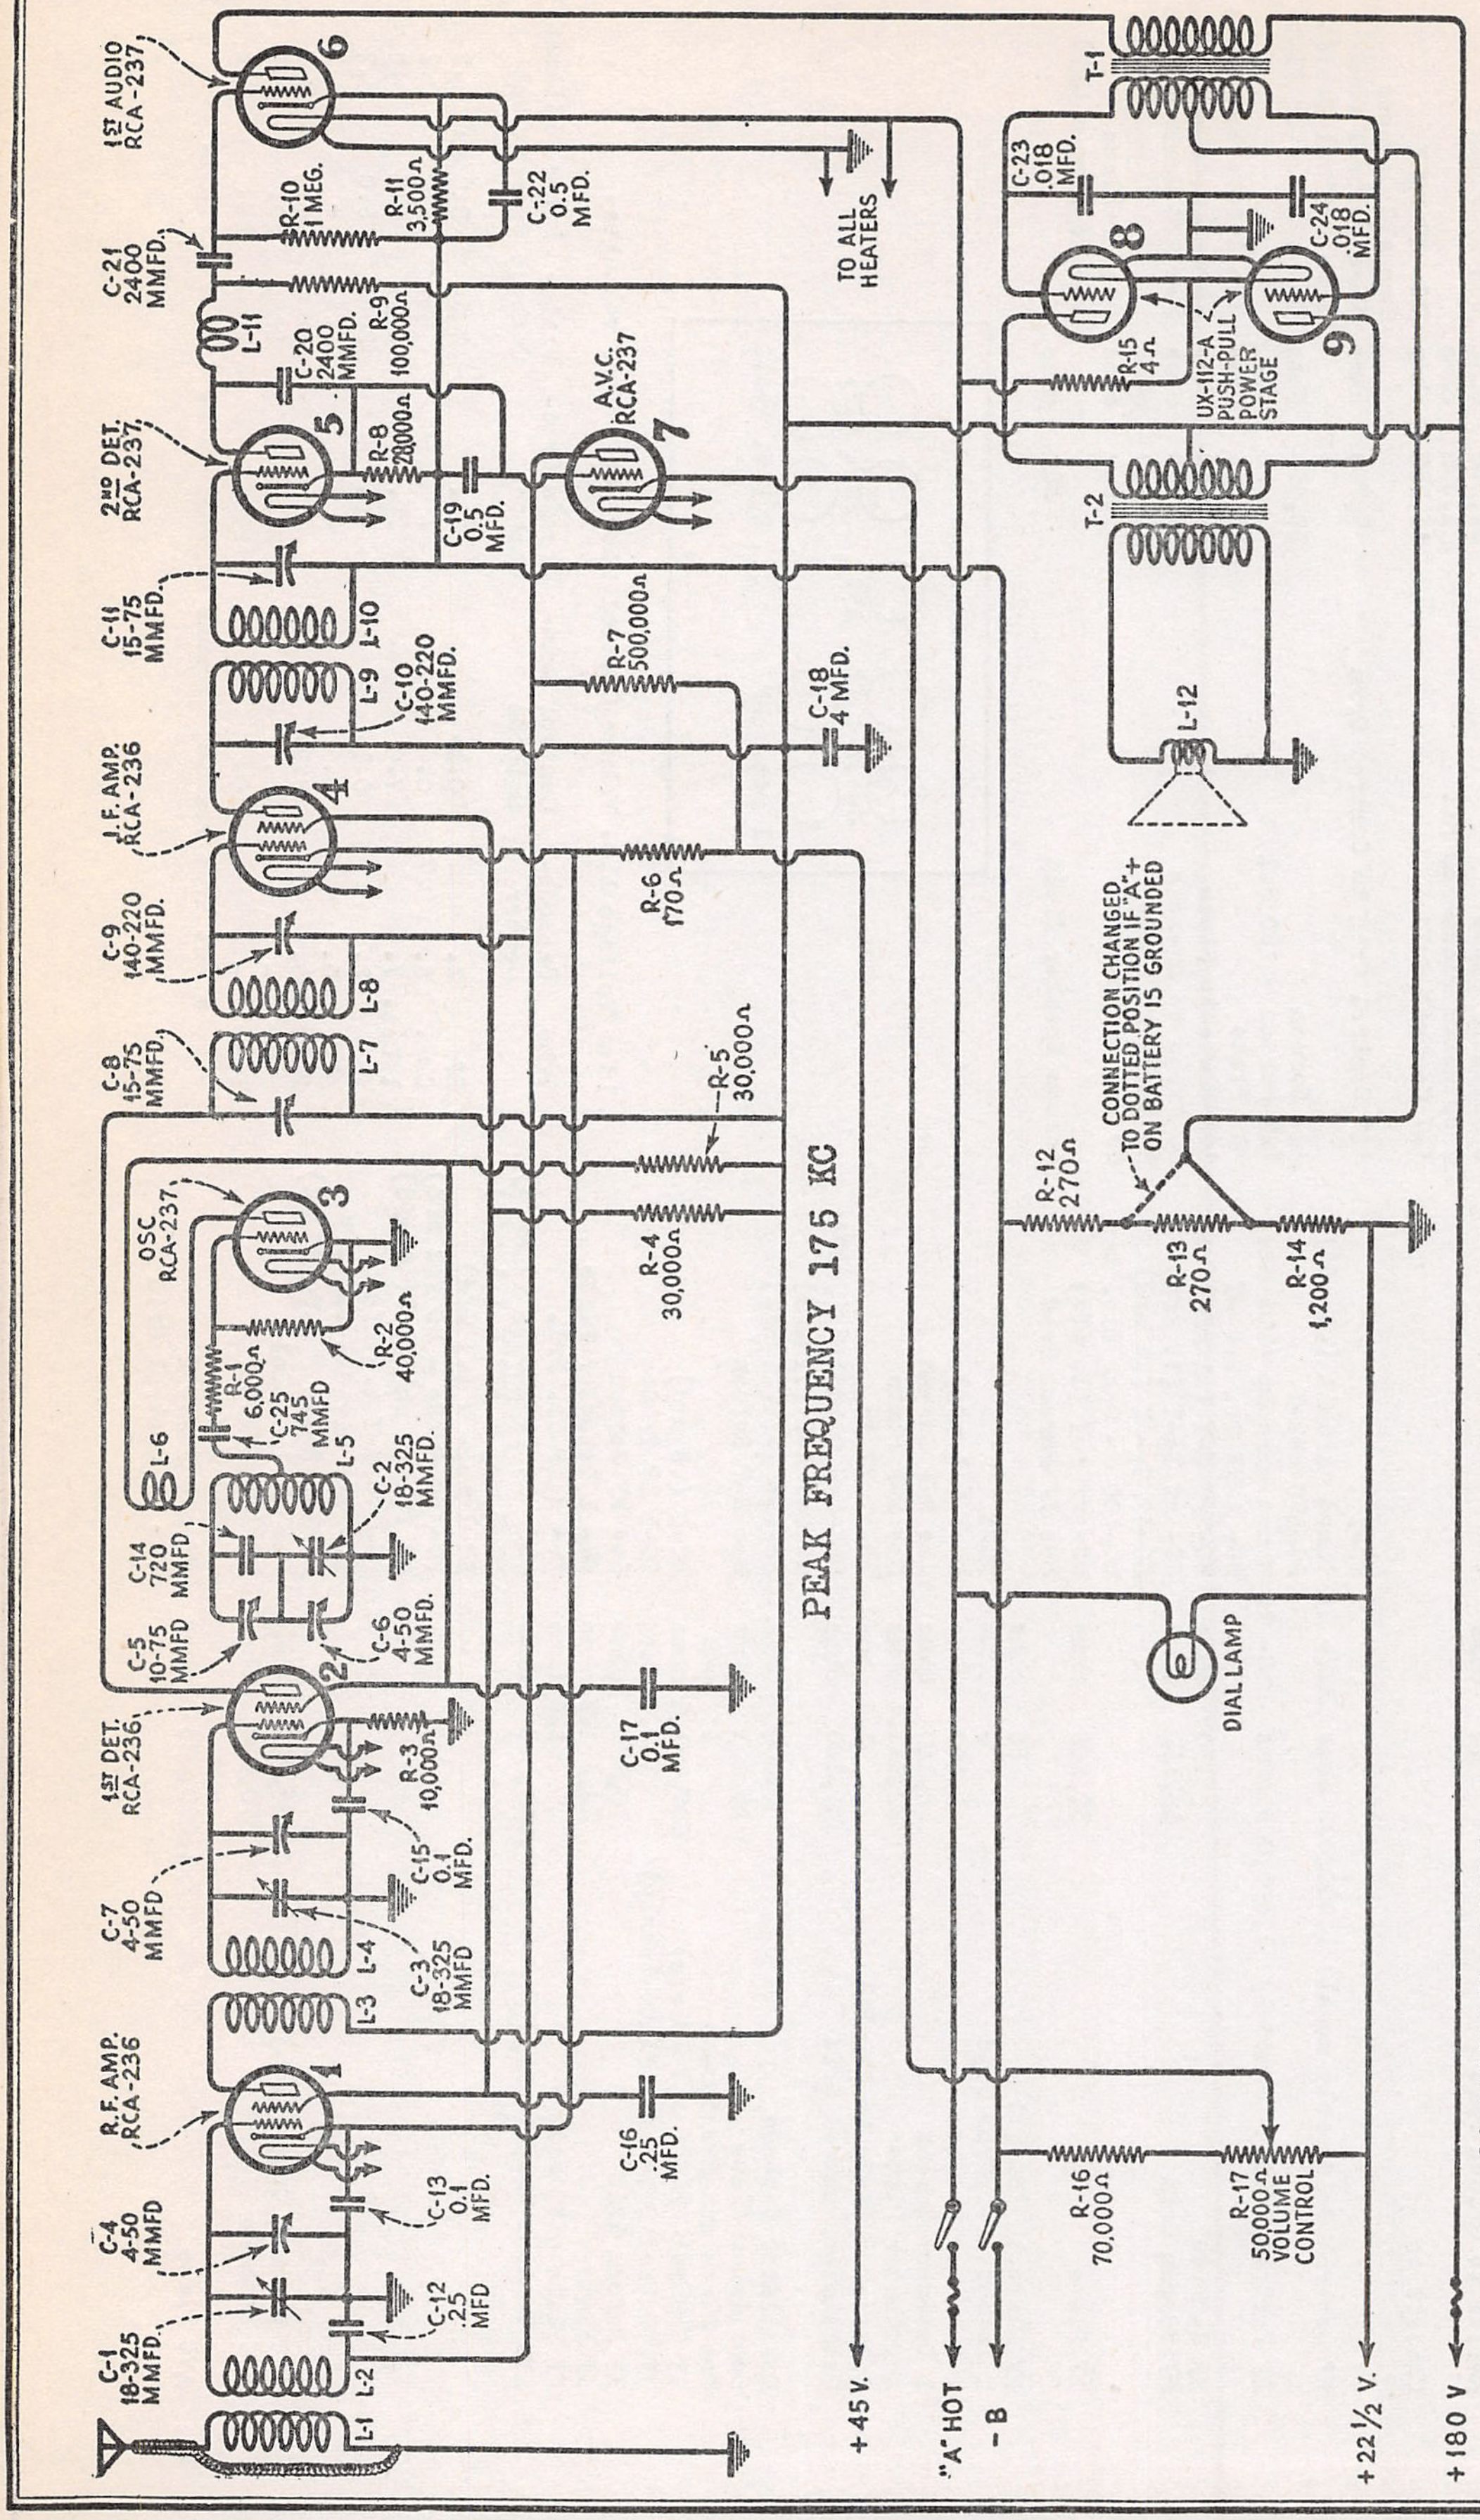
1ST AUDIO RCA-237
6
R-10 1 MEG.
R-11 3,500Ω
C-22 0.5 MFD.
TO ALL HEATERS
C-21 2400 MMFD.
L-11
C-20 2400 MMFD.
R-9 100,000Ω
2ND DET. RCA-237
5
R-8 28,000Ω
C-19 0.5 MFD.
A.V.C. RCA-237
7
C-11 15-75 MMFD.
L-10
L-9
C-10 140-220 MMFD.
R-7 500,000Ω
C-18 4 MFD.
I.F. AMP. RCA-236
4
R-6 170Ω
C-9 140-220 MMFD.
L-8
L-7
C-8 15-75 MMFD.
R-5 30,000Ω
OSC RCA-237
3
R-4 30,000Ω
R-2 40,000Ω
R-1 6,000Ω
C-25 745 MMFD
L-6
L-5
C-2 18-325 MMFD.
C-14 720 MMFD
C-5 10-75 MMFD
C-6 4-50 MMFD.
PEAK FREQUENCY 175 KC
1ST DET. RCA-236
2
R-3 10,000Ω
C-17 0.1 MFD.
C-15 0.1 MFD.
C-7 4-50 MMFD
C-3 18-325 MMFD
L-4
L-3
R.F. AMP. RCA-236
1
C-16 .25 MFD.
C-13 0.1 MFD.
C-4 4-50 MMFD
C-12 .25 MFD
C-1 18-325 MMFD.
L-2
L-1
T-1
C-23 .018 MFD.
C-24 .018 MFD.
8
9
R-15 4Ω
UX-112-A PUSH-PULL POWER STAGE
T-2
L-12
CONNECTION CHANGED TO DOTTED POSITION IF "A"+ ON BATTERY IS GROUNDED
R-12 270Ω
R-13 270Ω
R-14 1,200Ω
DIAL LAMP
R-16 70,000Ω
R-17 50,000Ω VOLUME CONTROL
+45 V.
"A" HOT
-B
+22½ V.
+180 V

Figure 22—Schematic Wiring Diagram of Receiver Assembly

Model M-30 (Auto) (1931)

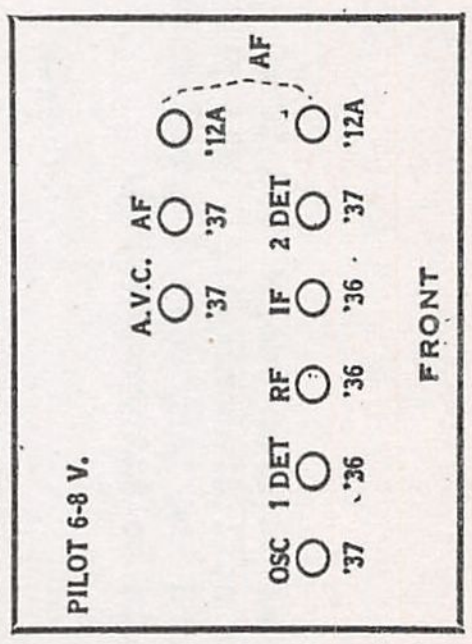
PILOT 6-8 V.
OSC '37
1 DET '36
RF '36
IF '36
2 DET '37
A.V.C. '37
AF '37
'12A
'12A
AF
FRONT

MODEL M-30
Auto Radio
Chassis

R. C. A. VICTOR CO., INC.

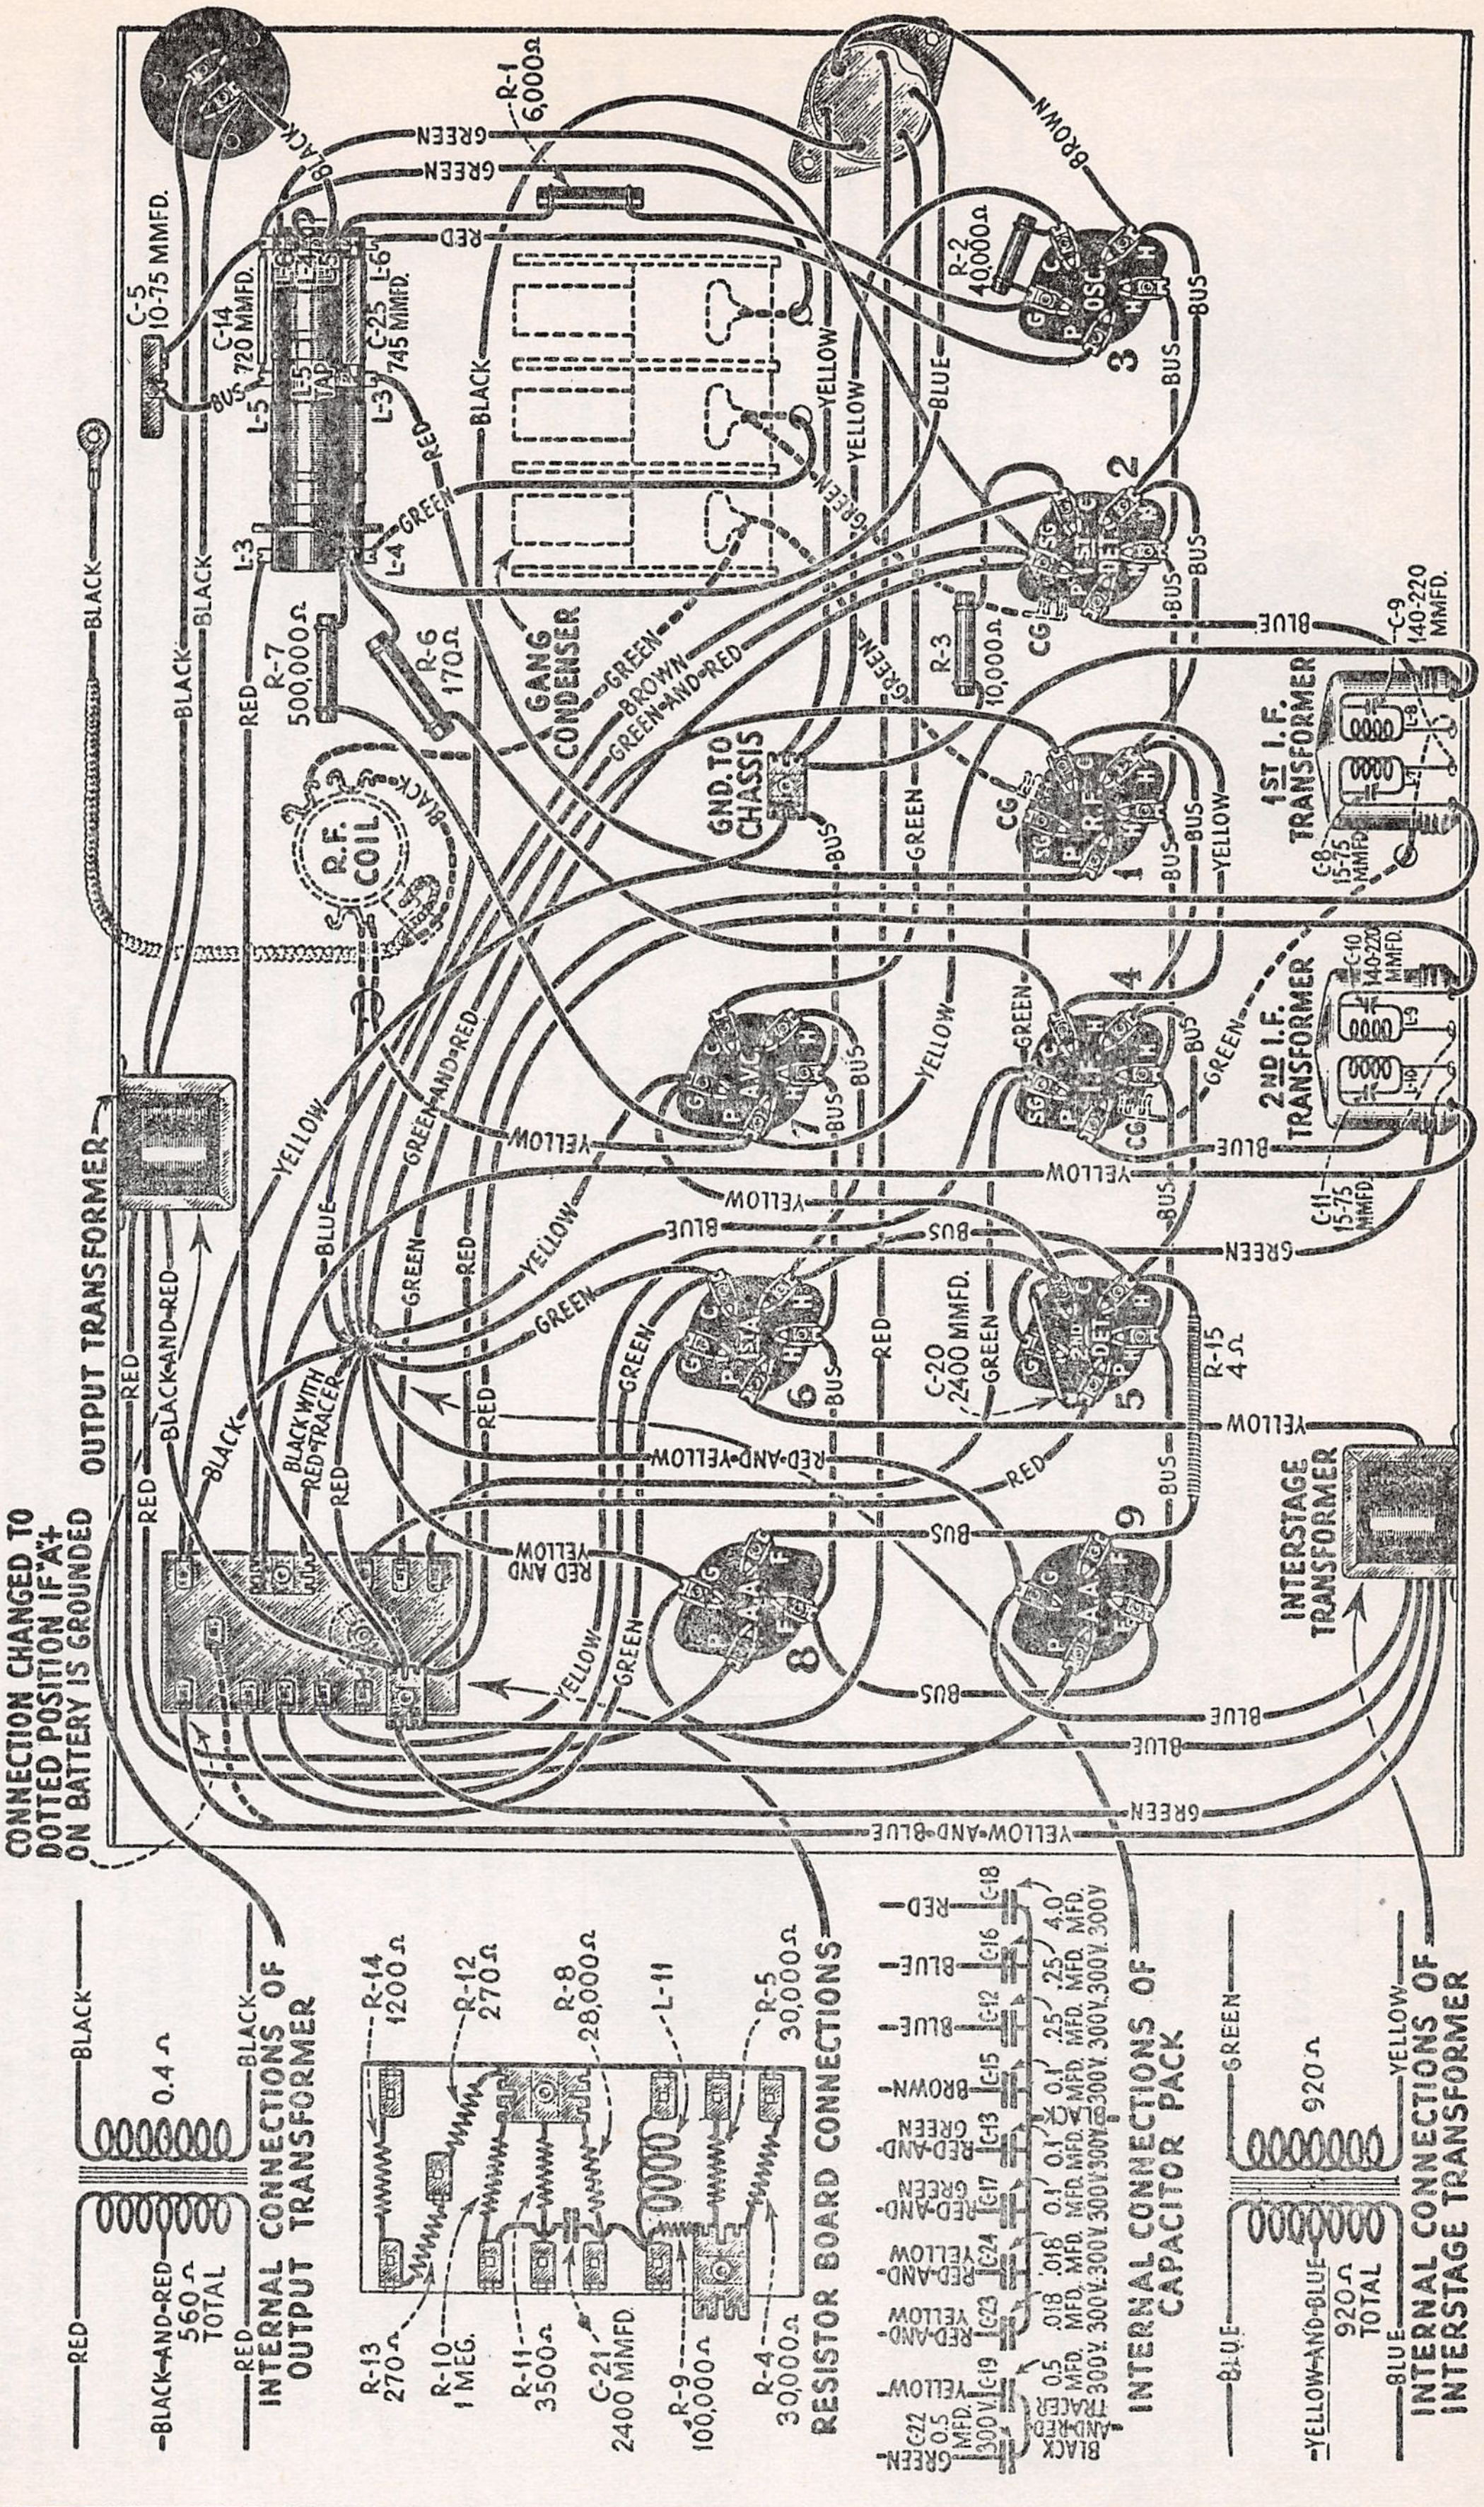
R-1 6,000Ω
R-2 40,000Ω
R-3 10,000Ω
R-6 170Ω
R-7 500,000Ω
R-15 4Ω
C-5 10-75 MMFD.
C-14 720 MMFD.
C-25 745 MMFD.
C-9 140-220 MMFD.
C-8 15-75 MMFD.
C-10 140-220 MMFD.
C-11 15-75 MMFD.
C-20 2400 MMFD.
L-3
L-4
L-5
L-5 TAP
L-6
GANG CONDENSER
R.F. COIL
GND. TO CHASSIS
1ST I.F. TRANSFORMER
2ND I.F. TRANSFORMER
OUTPUT TRANSFORMER
INTERSTAGE TRANSFORMER
CONNECTION CHANGED TO DOTTED POSITION IF "A"+ ON BATTERY IS GROUNDED
INTERNAL CONNECTIONS OF OUTPUT TRANSFORMER
0.4 Ω
560 Ω TOTAL
RESISTOR BOARD CONNECTIONS
R-14 1200Ω
R-12 270Ω
R-8 28,000Ω
L-11
R-5 30,000Ω
R-13 270Ω
R-10 1 MEG.
R-11 3500Ω
C-21 2400 MMFD.
R-9 100,000Ω
R-4 30,000Ω
INTERNAL CONNECTIONS OF CAPACITOR PACK
INTERNAL CONNECTIONS OF INTERSTAGE TRANSFORMER
920Ω
920Ω TOTAL
1
2
3
4
5
6
7
8
9

Figure 26—Wiring Diagram of Receiver Unit

R. C. A. VICTOR CO., INC.

SERVICE AND INSTALLATION NOTES

for

RCA Victor Automobile Radiola Model M-30

INTRODUCTION

The RCA Victor Automobile Radiola, Model M-30, is a nine tube Super-Heterodyne radio receiver designed for automobile or motor boat use. Features of this receiver are; sensitivity and selectivity equal to that of high quality home receivers, high output Class B amplifier giving a large undistorted output with a small plate battery drain, permanent magnet dynamic loudspeaker requiring no external field supply, automatic volume control using entirely new principles of operation and extremely low battery consumption for both heater and plate supply. This feature allows the use of the automobile battery as "A" supply without imposing an additional load upon it that cannot be readily compensated for by a slight generator charging readjustment. The low plate current drain allows excellent "B" battery life. Use of the new automobile type Radiotrons eliminates the possibility of Radiotron failure due to vibration or varying heater voltage such as is encountered in automobile driving.

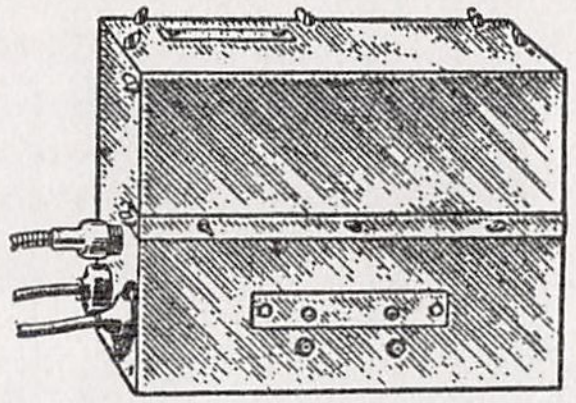

Figure 1—Receiver Assembly

In the design of this receiver, special attention has been given to the ease with which the installation may be made, and the elimination of interference originating in the ignition system. Thorough shielding of all parts together with proper design of the receiver makes it possible to reduce ignition interference to a negligible degree. This is done without any sacrifice in the sensitivity of the receiver.

A description of the various units follows.

RECEIVER ASSEMBLY

The receiver assembly, Figure 1, is housed in a metal case that acts as an effective mechanical and electrical shield. A bracket is provided for mounting so that dismounting is a comparatively simple operation, requiring the removal of but one screw.

The top section of this container is fastened by means of wing nuts. This provides for easy removal for checking or replacing Radiotrons. The battery and control box cable, the loudspeaker cable and the flexible tuning cable are all held in place by means of fittings which allow their easy removal in case the box is to be removed from its mounting. The case is finished in a dull smooth black that is not easily scratched and harmonizes with the usual car finishes.

CONTROL BOX

The control box, Figure 2, contains the station selector knob, the dial scale, the volume control and the key switch. It is provided with a felt strip and mounting clamp for attaching to the steering column of the car. The dial scale is marked in channels (multiply by 10 for kilocycles) and is of the non-glare type. The switch is provided with a key, which when removed, locks the radio at the "off" position.

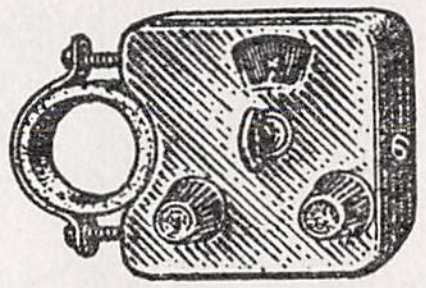

Figure 2—Control Box

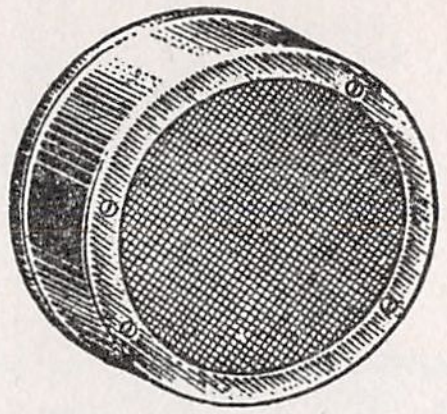

Figure 3—Loudspeaker

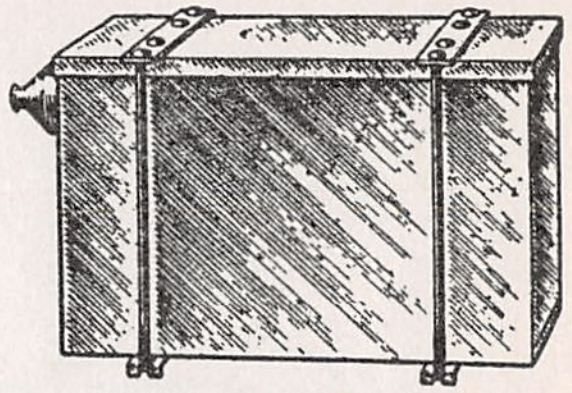

Figure 4—Battery Box

LOUDSPEAKER

The loudspeaker, Figure 3, used in the automobile equipment is of the permanent magnet, dynamic type. It is housed in a smooth black finished metal container which also acts as an effective baffle. Due to the presence of the strong magnetic field, even when the set is turned off, special provision has been made to prevent metallic substances from being drawn into the air gap of the speaker and thereby cause rattles. The speaker edge and center is entirely closed, thus preventing such entry from the front. A fine gauze covering is placed over the back, thus eliminating any such matter from entering from that side. The cord outlet is provided with a rubber bushing that closes up its opening. The speaker has excellent frequency characteristics and is of extremely rugged construction.

BATTERY BOX

A special heavy steel battery box, Figure 4, is furnished as optional equipment when it is either undesirable or impossible to install the batteries behind or under the seats or in the rear compartment of the car. This box is so constructed that the batteries may be mounted and connected therein and then lifted into position beneath the car. Four carriage bolts, each provided with two lock nuts, hold it in place.

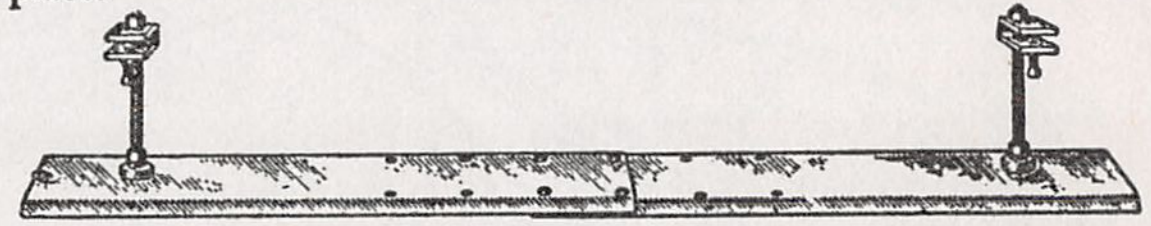

Figure 5—Antenna Plate

ANTENNA PLATE

The antenna plate, Figure 5, is provided for use when a roof antenna is not already installed in the car. It is provided with special bolts and clamps that allow easy mounting to the frame of the car. Due to the high sensitivity of this receiver, satisfactory results may be obtained with the undercar antenna except in districts where the signal intensity of all stations is extremely low. In such cases a roof antenna must be erected in accordance with the instructions given in Part I, Section 3.

MODEL M-30
Auto Radio
Notes Part 2

R. C. A. VICTOR CO., INC.

IGNITION EQUIPMENT

Six spark plug type suppressors, one distributor type suppressor and two 0.75 mfd. capacitors, Figure 6, are provided for the suppression of ignition interference so that it does not materially affect radio reception. The details of installing this equipment are covered in Part I and varies somewhat in different cars.

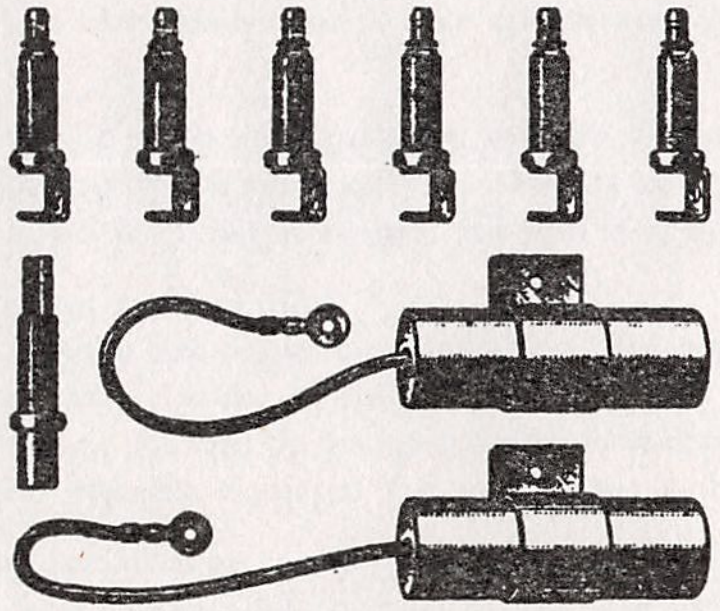

Figure 6—Ignition Equipment

PART I—INSTALLATION

Due to the nature of the installation it is advisable that the RCA Victor Automobile Radiola be installed by a competent radio service man in conjunction with an automobile mechanic. The usual automobile repair shop has the necessary tools and lifts that are desirable in making the installation. If it is necessary to erect a roof antenna, this work must be done by a competent "trim" shop working under direction of the service man. However, after making several installations the service man may feel confident enough to attempt all the installation work himself, with the exception of the roof antenna. For such work the following list of equipment is provided which will be found useful when performing such work

1 Pair Gas Pliers
1 Pair Diagonal Pliers
1 Pair Long Nose Pliers
1 Small Crescent Wrench
1 No. 4 Spintite Wrench
1 Thin Shank 6" Screw Driver
1 Small Screw Driver
1 Large Screw Driver
1 Pair Tin Shears
1 Heavy Duty Soldering Iron
1 Medium Soldering Iron
Supply of Rosin Core Solder
Supply of Acid Core Solder
Supply of ½" Belden Braid
Supply of Sheet Copper
1 Electric Drill with Set of Drills Up to ½"
1 Set Seat and Door Protectors
1 Reamer—¾" maximum
1 Set Analyzer or Miscellaneous Voltmeters

(1) LOCATION AND MOUNTING OF UNITS

The proper method of installing the equipment of the RCA Victor Automobile Radiola is covered in the Installation Instructions packed with each equipment. However, as there are many different types of installations, this information will be repeated together with a discussion of its numerous variations.

RECEIVER UNIT

Location The usual location for the receiver unit is on the right side of the engine compartment bulkhead directly under the dash. Figure 7 shows a typical installation. In some cars this will have to be on the opposite side directly over the steering column, Figure 8. It is important that the space selected have at least four inches clearance directly over the receiver, otherwise it cannot be removed from the mounting bracket. Interference with other equipment under the dash, and interference of the mounting bolts with equipment on the engine side of the bulkhead must be avoided. Figure 8A shows an installation where the receiver is in the usual location, but the loudspeaker is in the center.

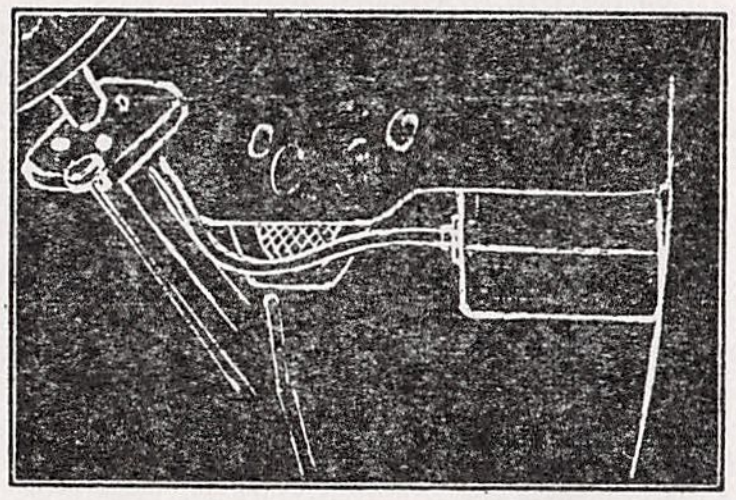

Figure 7— Usual Location of Receiver

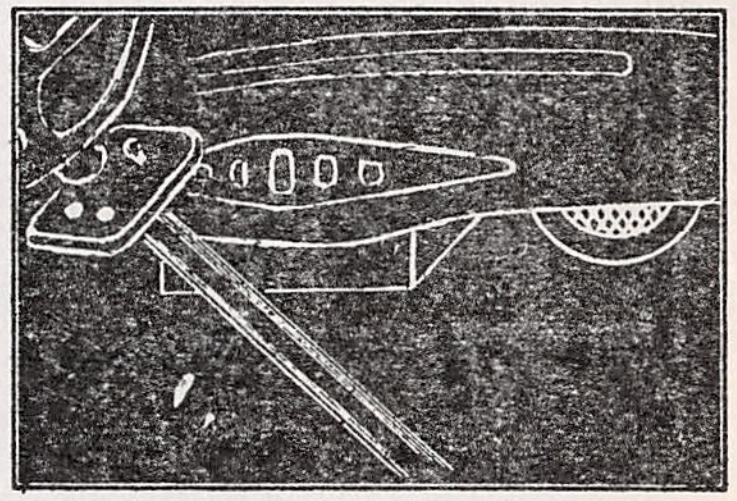

Figure 8—Receiver Over Steering Column

In some cars, the ignition coil is on the compartment side of the bulkhead or under the dash. If there is a choice of places available, the one at the greatest distance from the coil should be chosen. This is important as it reduces the ignition noise considerably.

Mounting Using the card inside of the Receiver Carton as a template, determine the proper location on the bulkhead and mark the location of the three holes with a center punch. A space at least four inches high must be left above the receiver. Extra holes are provided in the bracket to be used in case the regular holes are not satisfactory. If the bulkhead is curved, the template must be used flat and not follow the contour of the curved surface. In some cases, the receiver unit bracket must be mounted away from the bulkhead to clear obstructions. The center punch must be held perpendicular to the template when marking the holes to insure proper alignment. Next drill three 7/16 inch holes as marked. Then attach the bracket to the bulkhead by means of nuts and lockwashers furnished as shown in Figure 9.

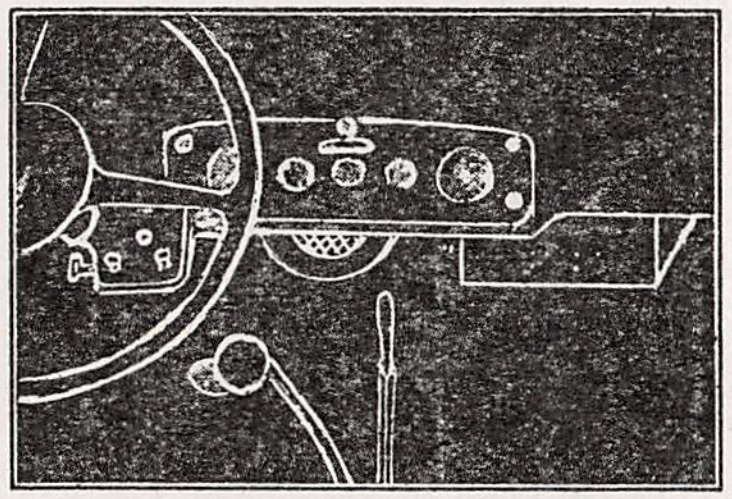

Figure 8A—Receiver on Right with Loudspeaker in Center

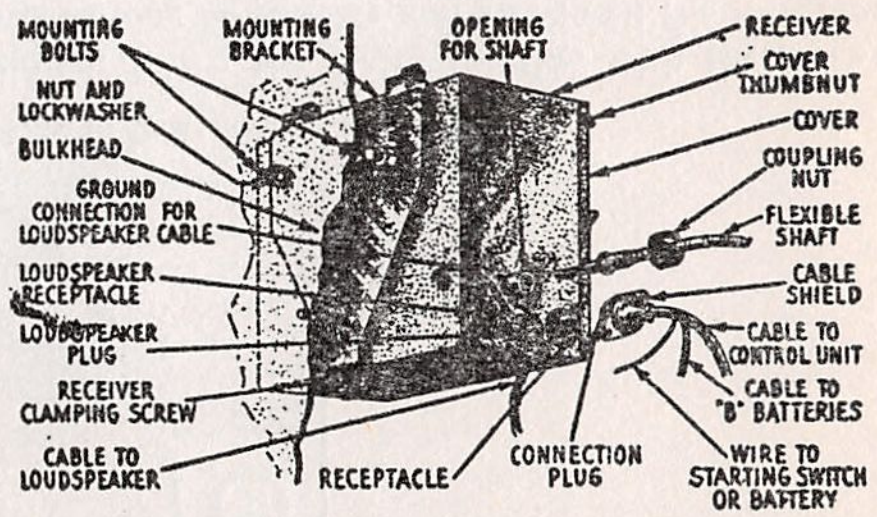

Figure 9—Details of Receiver Mounting

Remove the thumb-nuts from the top, front and sides of the receiver. Remove the packing material from around the Radiotrons and make certain that they are in the proper sockets. (See Figure 10).

Press the grid contact caps firmly over the contacts on top of all RCA-236 Radiotrons. Also make sure that the tuning capacitor rotor plates are fully meshed with the stator plates so that the flexible shaft may be easily mounted. If the positive terminal of the storage battery is grounded to the frame of the car, it will be necessary to remove the bottom of the receiver and change the yellow and blue wire from its normal position on the resistor board to that indicated by the dotted line in Figure 11. Replace the bottom, the cover and thumb-nuts making sure the nuts are tight. Hang the receiver on the bracket hooks, insert the clamp screw and washer at the bottom and tighten with a screw driver.

MODEL M-30
Auto Radio
Notes Part 3

R. C. A. VICTOR CO., INC.

LOUDSPEAKER

Location The Loudspeaker may be mounted at several locations, in most automobiles. However, the preferable location is on the bulkhead facing the rear of the car and on the opposite side from that of the receiver. If several locations are available, choose the one that gives the best acoustical results. This can easily be determined by experiment by not mounting the speaker until the rest of the equipment is in place and the receiver operating.

Mounting The instructions for mounting the receiver assembly apply equally well to the loud speaker, with the exception that the loudspeaker is mounted direct, there being no bracket provided. A template is also provided for this unit. No clearance space above the loudspeaker is required.

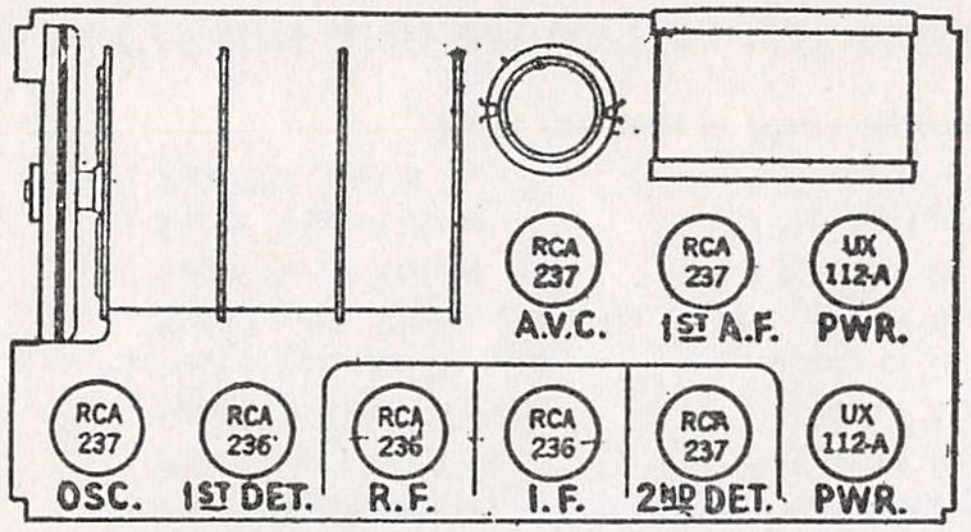

Figure 10—Radiotron Socket Location

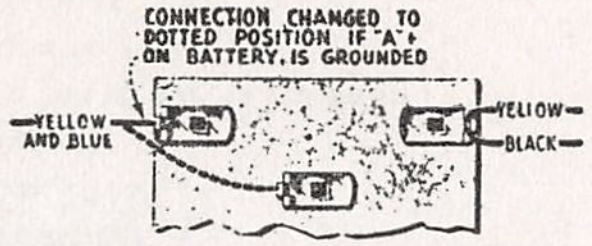
CONNECTION CHANGED TO DOTTED POSITION IF "A"+ ON BATTERY IS GROUNDED
YELLOW AND BLUE
YELLOW
BLACK

Figure 11—Wiring Change for Cars Having Positive Side of "A" Battery Grounded

CONTROL UNIT

Location The control unit is mounted on the steering column at a convenient height for the driver. Due to the large size of the steering wheel hub on some cars, this distance must be adjusted for best visibility.

Mounting Place the felt around the steering column and hold it in place by means of string or a piece of tape. Remove one screw from the clamp and place the box and clamp around the felt. Replace the screw that was removed and tighten both screws equally

FLEXIBLE SHAFT

Location The flexible shaft is used to mechanically connect the tuning capacitor in the receiver assembly to the drive and dial in the control box. It should be placed and fastened to the car so that it connects these two points together and is clear of any foot room or instruments. On some cars a special length shaft will be required. Such flexible shafts are listed in Part IV, page 24.

Mounting Turn the Station Selector until the flat side of the shaft may be seen through the hole in the side of the unit. Insert the end of the shaft into the opening at the rear of the Control Unit making certain that it engages the end of the shaft inside of the latter. Turn the shaft until the set screw is visible and tighten the set screw against the flat side of the shaft. Thread the coupling nut of the shaft onto the Control unit.

Turn the Station Selector knob clockwise so that the dial is at the extreme counter-clockwise position. Then insert the free end of the shaft into the opening provided on the receiver, turning the Station Selector knob back and forth until the shaft meshes. Tighten the collar that holds the shaft to the receiver unit.

After completing these two operations, slowly turn the Station Selector knob to the extreme clockwise and then to the extreme counter-clockwise position. Normally, this will insure the use of the complete range of the dial. If, however, it is noticed that a slight amount of tension is present at either end of the dial, then the control unit must be turned on the steering column in the direction of the tension, while making this adjustment. Then returning it to its normal position will relieve this additional tension. Figure 12 gives the details of this latter adjustment.

ANTENNA PLATE

Location The antenna plate, if used, should be mounted under the car and as far to the rear as possible. Also it must be as low (close to the road) as possible and still maintain the clearance of the lowest point of the car from the road.

Usually, it is mounted on the opposite side from the Muffler and exhaust pipe to prevent crowding. See Figure 13. In some cases, it is desirable to mount the plate crosswise to the car chassis. Avoid any location that will place the plate in a position that will impede the free motion of the chassis parts such as springs, drive shaft, or axles, as damage to the antenna will result.

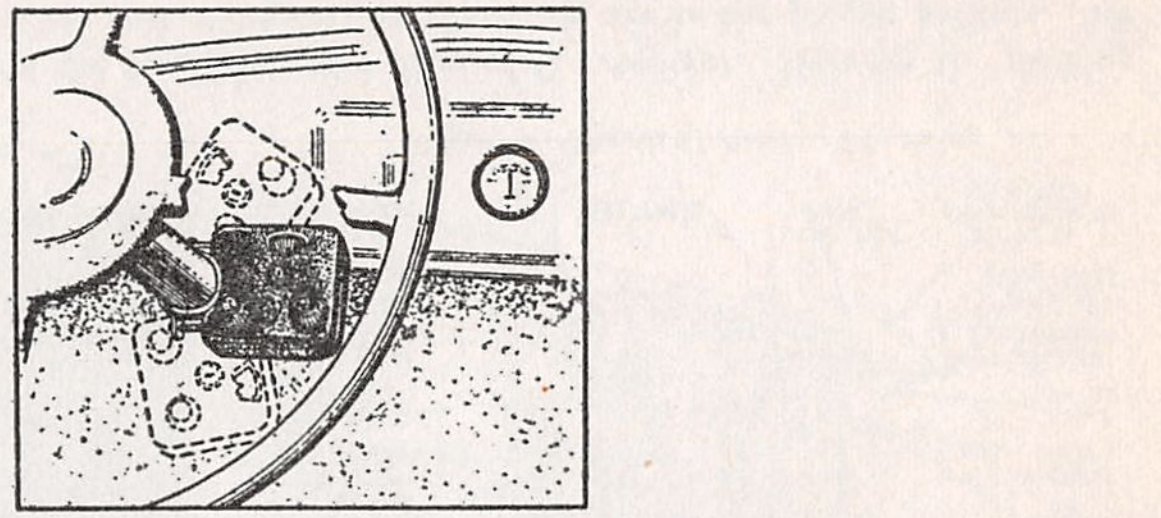

Figure 12—Position for Control Box in Order to Make Adjustments

Mounting After determining the proper location, fasten the plates together with the screws provided. Adjust the length so that the plate is as long as possible and still fulfill the foregoing conditions. Assemble the mounting bolts onto the plate as shown in Figure 5 and fasten the clamps to the car frame. Then tighten the bolt that holds the antenna plate to the bracket and the screw and lock nut that holds the bracket to the car frame. *Too much attention to the proper tightening of these screws is impossible, as any loosening of this plate that results in one end dropping while the car is driven at high speed may result in an accident.*

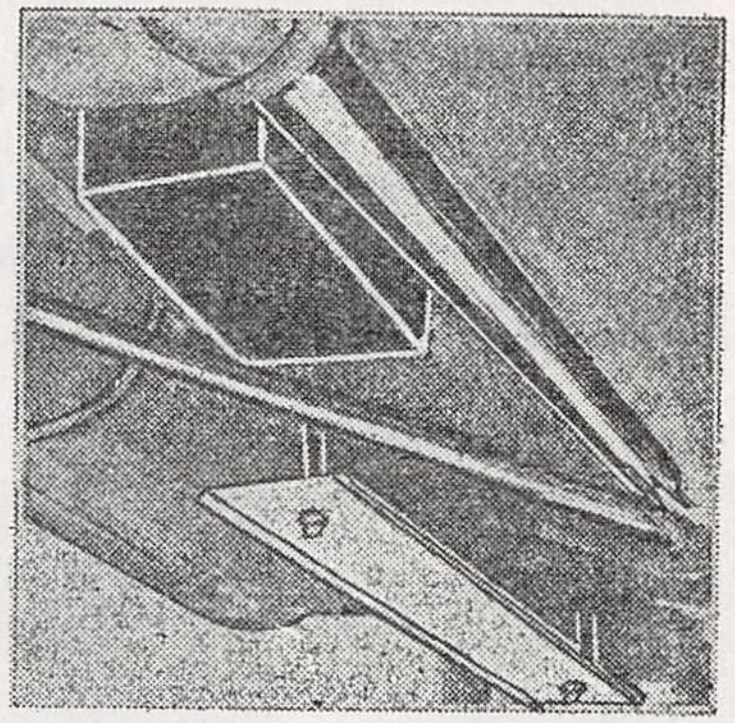

Figure 13—Typical Location of Antenna Plate and Battery Box

"B" BATTERIES

Location If possible, the "B" batteries should be mounted under one of the seats or behind the back of the rear seat. In cars having a rear compartment or trunk, the batteries may be located therein.

However, if such a place is not possible, then a battery box must be used. This box can usually be mounted under the car by fastening to the floor boards. Its location should be as far from the muffler and exhaust pipe as possible, as the heat from these parts will have a detrimental effect on the life of the batteries.

Mounting Using the cover of the battery box as a template, locate the cover on the floor boards under the car and mark the boards for the center of the four mounting bolts. Drill four ⅜" holes in the floor boards. Insert the four carriage bolts in the holes from the top. Make sure the hanger bolts are in place in the cover and fasten the cover to the four bolts in the floor board. In the case of cars having metal floor boards, machine screws with spacers must be used instead of carriage bolts. Make sure that the mounting bolts do not project too far down into the box so that they will fail to clear the batteries.

After fastening the top securely in place, place the "B" batteries in the box and connect them to the receptacle as shown in Figure 14. Slip the cambric cover over the fuse and place the paper strips and plate over the terminals. Then lift the box into place, swing the hanger bolts into place and tighten both nuts securely. Care should be taken to draw up on all four nuts gradually.

For mounting both the antenna plate and the battery box, it is desirable to place the car on a "lift."

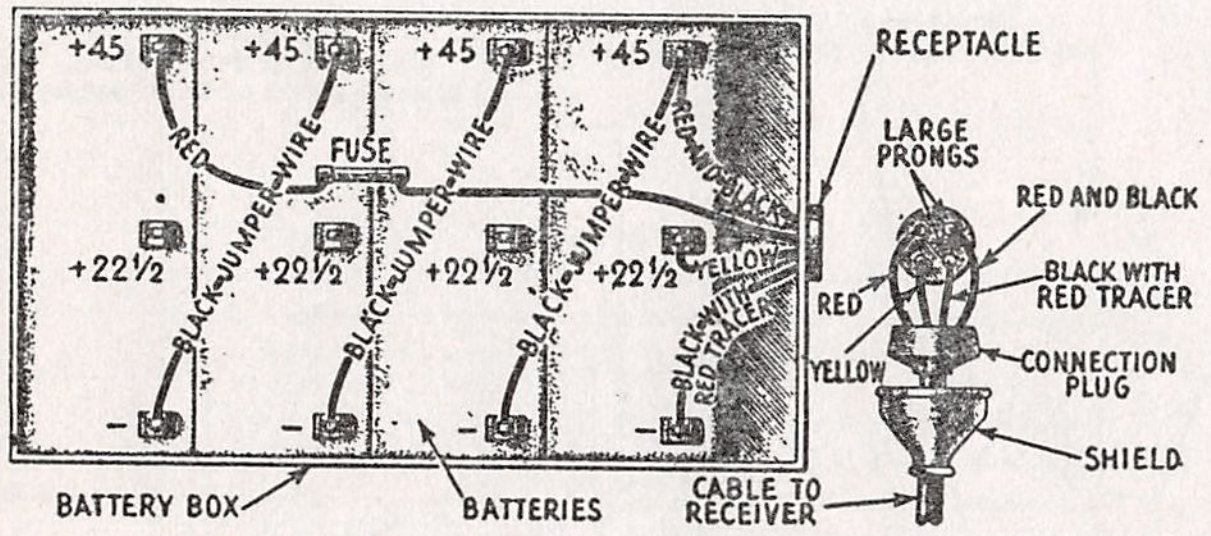

Figure 14—Battery Box Connections

IGNITION EQUIPMENT

Two .75 mfd. capacitors, six spark plug type suppressors and one distributor type suppressor are furnished to be installed in the car's ignition system so that its R.F. radiation may be reduced to a point so as not to interfere with radio reception.

One .75 mfd. capacitor is connected across the output of the generator. Remove a screw from the generator frame, usually the one holding the cut-out, insert the screw through the hole in the capacitor clamp and replace the screw. Connect the lead from the end of the capacitor to the terminal on the generator side of the cut-out switch.

The other capacitor is connected from the battery side of the ammeter to the car frame. Usually, one of the screws on the underside of the dash can be used to hold the capacitor, thereby making the ground connection. Then connect the lead to the ammeter terminal.

The spark plug type suppressors are inserted in series with each high tension lead at its point of connection to the plug. The distributor suppressor is inserted in series with the high tension lead from the coil at its point of connection to the distributor.

There are a number of variations in the installation of this ignition suppression equipment that are covered in Part II.

(2) CONNECTIONS

Loudspeaker to Receiver Insert the plug on the end of the loudspeaker cable into the two-contact receptacle on the end of the receiver. Fasten the pigtail under the self-tapping screw as shown in Figure 9

Main Cable to Receiver A long cable, from the control unit and battery box, is attached to the receiver by means of a six point female plug. Insert the plug into the receptacle on the receiver. A metal cap is fitted over two studs at the same time. Fasten the nuts over these studs securely.

Main Cables to Batteries Drill ½" hole in the toe boards directly below the end of the receiver unit to which connections are made. (If any holes that may be used for this purpose are already available, drilling additional holes is unnecessary). Pass the free end of the cable through the hole and thence to the "B" Battery location. Possibly other holes must also be drilled. Connect the "B" batteries to the cable as shown in Figure 15. The metal braid must be pushed back from the free end and taped so that sufficient length leads are obtained for connecting the batteries. If the battery box is used, solder the four prong plug onto the end of the cable as shown in Figure 14.

The cable should be fastened to the chassis of the car by means of the clamps or staples provided. Take up any slack by making a loop and tape securely.

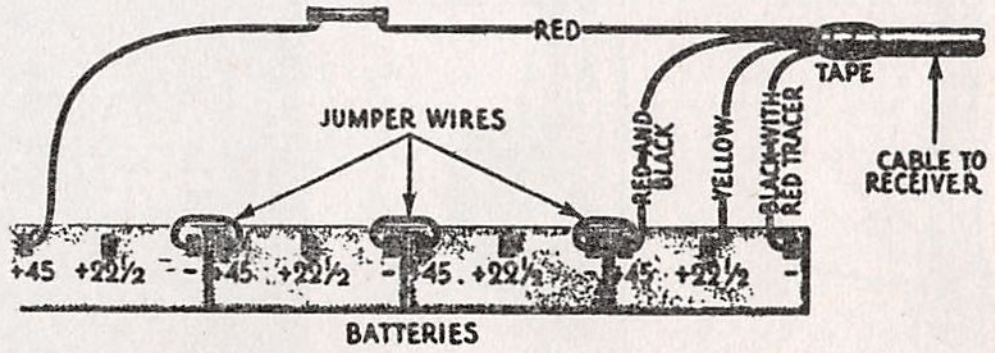

Figure 15—Cable Connections to "B" Batteries

Receiver to Antenna The antenna lead should follow the shortest practical path between the receiver and the antenna. It is very desirable to avoid passing it through the engine compartment or close to the ignition coil, if mounted on the dash or compartment side of bulkhead.

If a roof antenna is used, cut the lead from the antenna as short as possible and still allow length for connection. Then cut the antenna lead and shield from the receiver to a proper length, allowing about two inches extra on the shield so that it may be slit and braided into a pigtail. Solder and tape the connections securely. Then solder the frayed part of the pigtail and either fasten or solder it securely to the car frame. The pigtail should be as short as possible and a good electrical joint made to the car frame

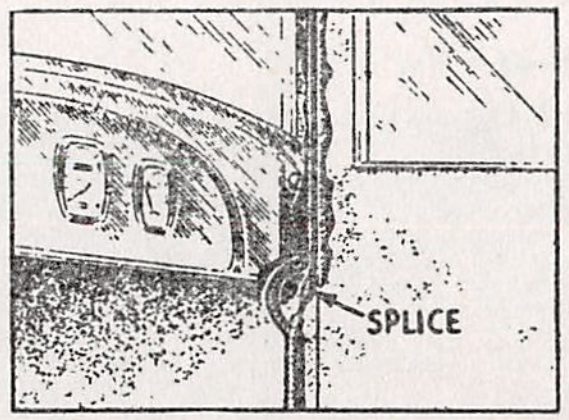

Figure 16— Proper Method of Grounding Shield When Using Roof Antenna

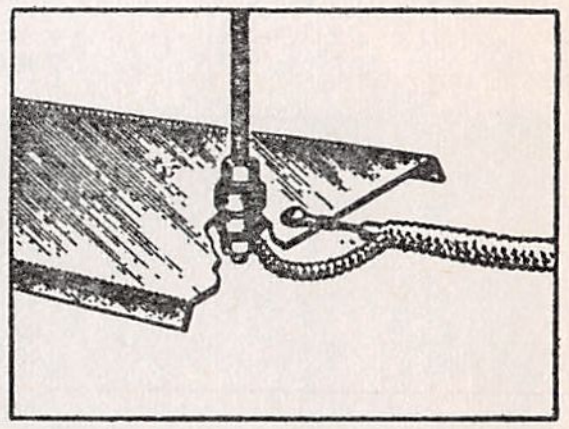

Figure 17—Proper Method of Grounding Shield When Using Plate Antenna

If the antenna plate is used, the antenna lead and shield should be cut in the same manner as for the top antenna, except that the pigtail must be slightly longer. An eyelet terminal is provided for soldering to the end of the antenna lead so that it may be held by the screw and nut at the end of the antenna plate. The pigtail should be fastened under one of the nuts that hold the plate to its mounting bolts Figures 16 and 17 illustrate the correct manner in making both types of connections.

Receiver to "A" Battery One side of the "A" Battery connection is made through the frame of the car. The "hot" side is made by means of a single lead that is brought out from the main cable. This lead is provided with a lug that should be fastened under the nut that holds the battery connection to the starting motor switch

This completes the installation. All cables should be fastened securely to the car so that interference with its operation is avoided. This is especially true of those under the dash which may

MODEL M-30
Auto Radio
Notes Part 5

R. C. A. VICTOR CO., INC.

interfere with the driver's foot room. The switch may then be turned "on" and the receiver operated in the usual manner. Normally, starting the car engine will not introduce any objectionable noise. However, if ignition interference is present that is objectionable, then a reference to Part II will give the details for clearing up this trouble.

(3) INSTALLATION OF ROOF ANTENNA

In cars not already equipped with roof antennae, the usual installation is that of the antenna plate. Due to the high sensitivity of this receiver, entirely satisfactory results are obtained from the plate antenna in most installations. However, if the car is to be operated in a locality remote from any stations and having a general low degree of signal strength, the erection of a roof antenna is advisable. The following details cover the procedure to be used in a majority of closed cars. This work should be done by a competent "trim" man as a degree of skill, only acquired by experience, is necessary in removing and replacing the fabric top of a car.

The antenna should be composed of copper screen having a total area of at least 10 square feet. It should be located as far to the rear as possible and insulated from any metal part of the car which may ground it. In some cars having a metal rib in the center, it will be advisable to make the antenna in two pieces and use insulated wire as straps for bonding it together. All joints together with the lead-in connections should be well soldered.

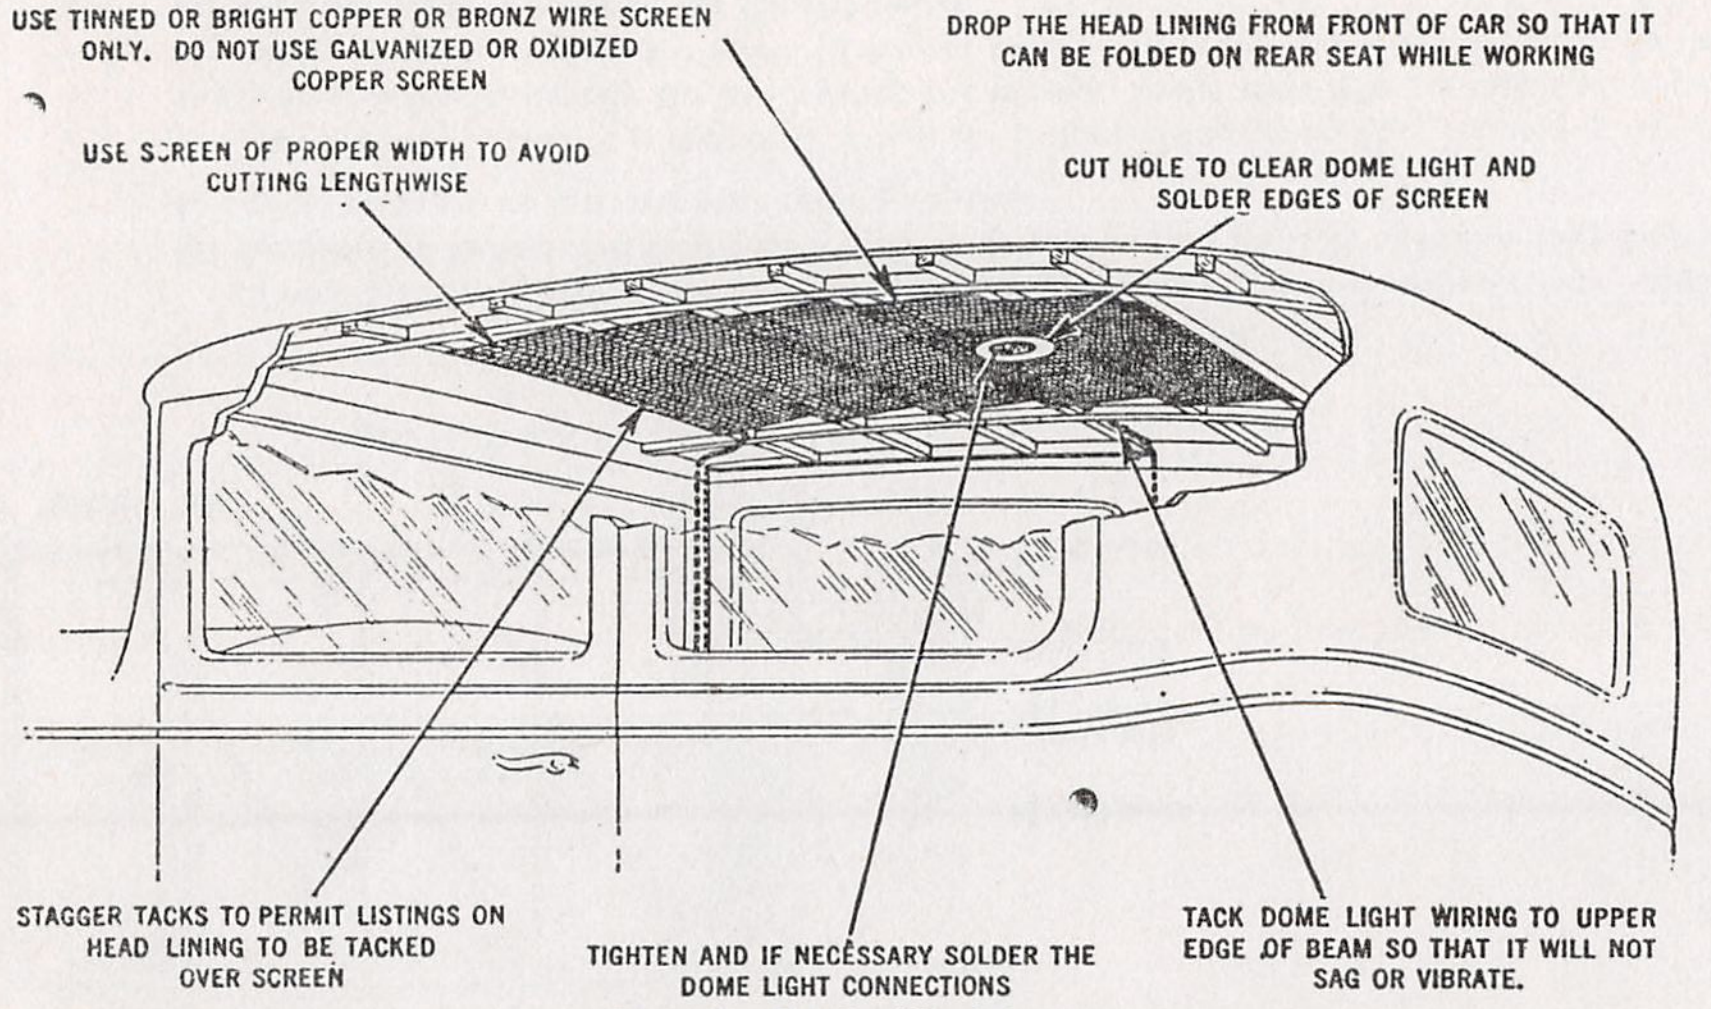
USE TINNED OR BRIGHT COPPER OR BRONZ WIRE SCREEN ONLY. DO NOT USE GALVANIZED OR OXIDIZED COPPER SCREEN
DROP THE HEAD LINING FROM FRONT OF CAR SO THAT IT CAN BE FOLDED ON REAR SEAT WHILE WORKING
USE SCREEN OF PROPER WIDTH TO AVOID CUTTING LENGTHWISE
CUT HOLE TO CLEAR DOME LIGHT AND SOLDER EDGES OF SCREEN
STAGGER TACKS TO PERMIT LISTINGS ON HEAD LINING TO BE TACKED OVER SCREEN
TIGHTEN AND IF NECESSARY SOLDER THE DOME LIGHT CONNECTIONS
TACK DOME LIGHT WIRING TO UPPER EDGE OF BEAM SO THAT IT WILL NOT SAG OR VIBRATE.

Figure 18—Details of Roof Antenna

1. First determine if there is a grounded metal screen in the roof of the car, as some cars use such a screen for the top material support. A sharp pointed instrument, connected on one side of a continuity tester, the other side being grounded, should be used. Push the point through the top lining and fish around until it comes in contact with the wire screen. If any reading is obtained, even though very small, the screen is grounded and it cannot be used for an antenna. If not, however, one corner of the head lining may be removed and a connection soldered to the screen which will make an excellent antenna.
2. If the screen is grounded or if no screen is present, it will be necessary to remove the head lining and a strip clipped from the screen several inches from all edges and from the dome light or insert a copper screen approximately of these same dimensions. If there is a possibility of the screen shifting, tack it to one of the ribs and lace the sides with cord.
3. Solder a length of shielded wire to the right front corner of the screen. Then solder or bond the shield securely to the car frame. The lead-in is then run down the right front roof support. Usually, this can follow the path of the dome light lines. It should be noted however, that if the ignition coil is mounted on either side of the dash, it is preferable to run the lead-in down the column further from the coil.
4. Again test the antenna from the set end of the lead-in to ground for any possible shorts. If none exist then replace the head lining. Figure 18 shows a typical roof antenna installation.

(4) INSTALLATIONS ON MODEL A FORDS

The Model A Ford presents a somewhat involved problem for the installation of the RCA Victor Automobile Radiola. The reason for this is that due to the gasoline tank being part of the cowl, the usual location for the set and speaker cannot be used. Two positions for the receiver and three for the speaker are possible, each having several disadvantages.

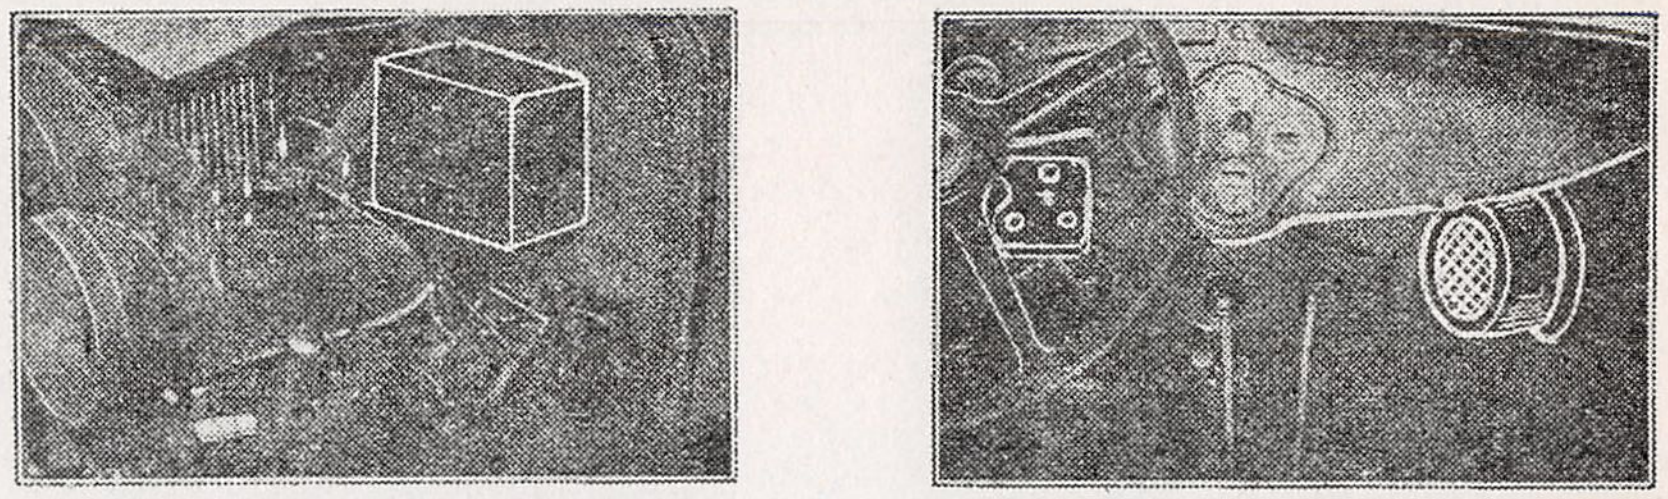

Figure 19—Location of Units in Model A Ford

The receiver unit may be mounted in the engine compartment as shown in Figure 19, more easily than at any other location. The disadvantage of this position is that due to the high noise level present even when suppressors are used, a satisfactory installation cannot always be made. The receiver is also subject to motor fumes, water and steam used in engine cleaning and the usual atmospheric conditions.

The other alternative position for the receiver is on the right side of the driving compartment as shown in Figure 20. The dimensions for a template to be mounted to the body to hold the receiver or loudspeaker are shown in Figure 21. The interference may be successfully eliminated at this location but the position of the receiver interferes with the leg room of the person riding beside the driver.

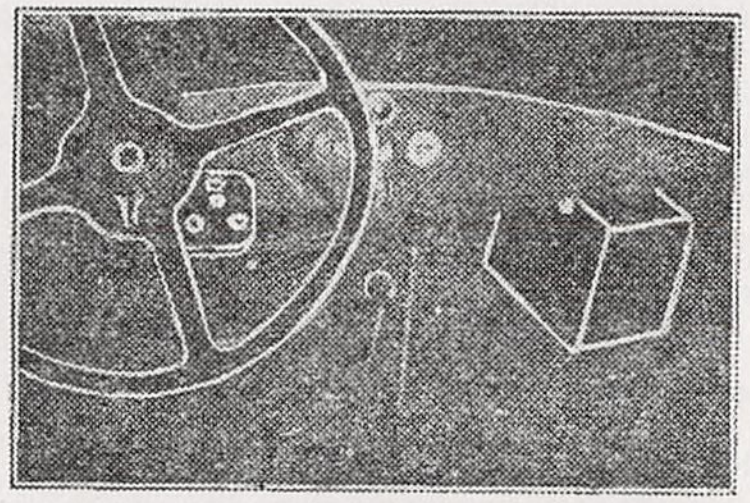

Figure 20—Alternative Position for Receiver and Loudspeaker

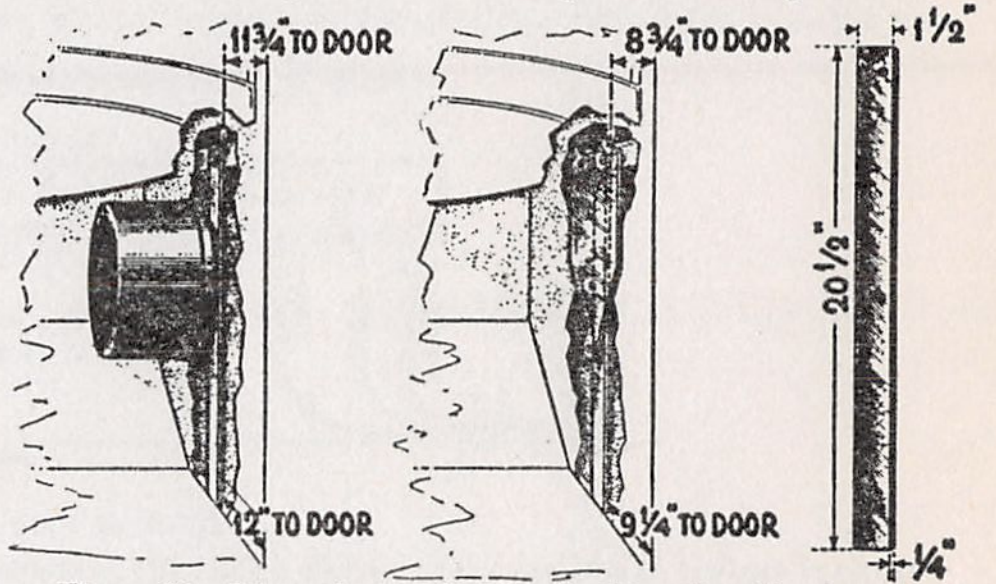
11¾" TO DOOR
12" TO DOOR
8¾" TO DOOR
9¼" TO DOOR
20½"
1½"
¼"

Figure 21—Dimensions of Bracket for Mounting Receiver or Loudspeaker to Side of Driver's Compartment

The loudspeaker may be mounted at either side of the car, using the same template for a bracket as that shown in Figure 21, on models not having pockets at either of these locations. On such models, such as the roadster, the loudspeaker can be mounted directly behind the gear shift lever and bolted to the seat base. This location is not seriously in the way and gives good acoustical results.

The batteries may be mounted behind the rear seat in the sedan models, in the rear compartment of coupes and roadsters or in a battery box on any model.

PART II—SUPPRESSION OF IGNITION INTERFERENCE

In general, the use of the ignition suppressors and capacitors as described in Part I of this booklet will reduce the ignition interference to a negligible amount. However, on some installations it will be found that the noise is still present to a degree that is undesirable. In such cases, the following hints will aid the installation man in clearing up this trouble.

(1) IGNITION ADJUSTMENTS ON MOTOR

The first step in clearing up a noisy installation is to thoroughly check and remedy any defects in the ignition system of the car. By this we mean the spark plugs should be cleaned and adjusted or replaced, the breaker points replaced or adjusted and synchronized if necessary, the distributor arm filled out with solder until it makes a full even contact, and the generator commutator cleaned and its brushes adjusted or replaced. Also all wiring should be cleaned and loose connections or poor joints remedied. This work is the first step in the clean-up job and it should be done by a competent ignition expert, who has been acquainted with the need of accurately making all adjustments.

Usually, such adjustments though made on a motor that is performing efficiently, will materially reduce the ignition noise in the radio receiver.

(2) BY-PASS CAPACITORS

In some installations a re-arrangement of the connections of the by-pass capacitors will be found beneficial. For example, the by-pass capacitor connected to the battery side of the ammeter, if connected to the battery side of the ignition coil may be more effective.

In other cases using an additional capacitor at the coil, a total of three for the installation, will remedy the trouble. In all cases the generator capacitor is used, although if a clicking is heard when the cut-out makes and breaks its circuit, the pigtail should be connected to the load side rather than the generator side of the cut-out relay.

On some cars, two capacitors—one on each terminal—at the ammeter will greatly reduce the noise. This is especially true of 1932 Studebakers.

(3) IGNITION COIL

The car ignition coil, due to the high electromagnetic field surrounding it, should be at as great a distance as possible from the receiver, preferably on the opposite side of the metal bulkhead. On cars that have the ignition coil mounted on the instrument board directly over the receiver unit, it may be necessary to place it in the engine compartment. Where the switch is mounted into one end of the coil, the switch assembly must be removed from the coil and a bracket provided for mounting it. The leads from the coil should be shielded and the shield grounded. (Use Packard High Tension Cable for the high tension lead to the distributor).

Another important point is that of the primary connections. While not affecting the ignition system in its relation to the car, due to the use of auto-transformers as coils, interchanging the primary leads to a coil will sometimes materially reduce the ignition noise.

(4) ANTENNA PLATE

If grounding the antenna at its point of exit from the shield reduces or eliminates the noise, then it is feeding in through the antenna. The remedy in such a case is to place the antenna further toward the rear of the car. Also lowering it, slightly will greatly increase its signal pickup. Care must be exercised when doing this, to ascertain that the road clearance of the car is not reduced. Another important point to check is the grounding of the outer end of the antenna shield. Grounding this end of the shield to the chassis in practically all cases, materially reduces ignition noise. However, in certain cases, grounding this shield may increase the noise. In such cases the shield should be insulated with tape and left ungrounded.

(5) CABLES

Proper placing of the various shielded cables may have a bearing on the ignition noise picked up as well as contact noise caused by a variable contact between the cable shields and the car frame.

The antenna lead should follow the shortest path between the receiver unit and the antenna. If there is any possibility of the shield rubbing against any of the car frame, the cable should be taped or clamped in place. The "B" battery cable should be taut and any slack taken up by means of a loop. It should also be fastened or taped securely.

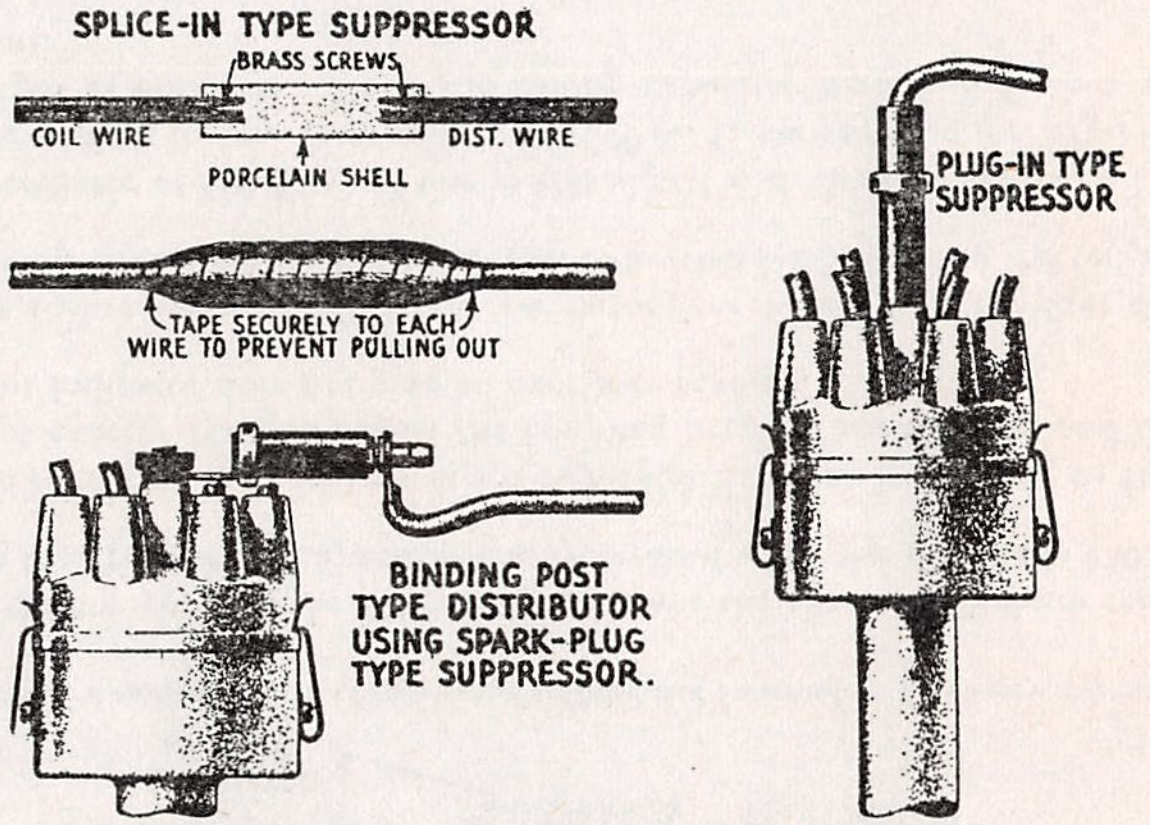
SPLICE-IN TYPE SUPPRESSOR
BRASS SCREWS
COIL WIRE
DIST. WIRE
PORCELAIN SHELL
TAPE SECURELY TO EACH WIRE TO PREVENT PULLING OUT
PLUG-IN TYPE SUPPRESSOR
BINDING POST TYPE DISTRIBUTOR USING SPARK-PLUG TYPE SUPPRESSOR.

Figure 23—Installation of Various Types of Distributor Suppressors

(6) DISTRIBUTOR SUPPRESSORS

Three different styles of distributor suppressors are used, due to the variations in the distributor head connections. These are illustrated in Figure 23. The plug-in type is supplied with this equipment and is used in the majority of cars. The spark plug type with the end flattened is used in Packard and other cars having the binding post connection. The splice-in type is used on cars that do not have a readily removable connection to the distributor head. It is spliced into the high tension head, as close to the distributor as possible. This type may also be used on cars not having much room at the spark plugs, such as the Buick. While not furnished with regular equipment, the splice-in type suppressor is listed in Part IV.

PART III—SERVICE DATA

Service work in connection with the RCA Victor Automobile Radiola is very similar to that of the usual broadcast receiver. However, the following description of the circuit and method of making adjustments will be found helpful in locating and remedying any failure that may occur.

ELECTRICAL DESCRIPTION OF CIRCUIT

The following description of the circuit will give the service man a better understanding of the functioning of the receiver and thereby help him in his work. Figure 22 shows the schematic circuit diagram.

The first tube is the tuned R.F. stage. This is the screen Grid Radiotron, RCA-236. The control grid bias for this Radiotron is varied by means of the automatic volume control tube.

The output of the R. F. stage is coupled inductively to the grid coil of the first detector. **At** this point the oscillator output is also coupled inductively to the grid coil of the first **detector.**

This is a tuned grid circuit oscillator using a Radiotron RCA-237 and having a closely coupled plate coil that gives sufficient feed-back to provide stable operation. The grid circuit is so designed that by means of a correct combination of capacity and inductance a constant frequency difference between the oscillator and the tuned R. F. circuits throughout the tuning range of the receiver is obtained.

The next circuit to examine is the first detector. The circuit is tuned by means of one of the gang condensers to the frequency of the incoming signal. Radiotron RCA-236 is used in this stage. In the grid circuit is present the incoming signal and oscillator frequencies. The beat frequency —175 K.C.—appears in the plate circuit of the first detector which is accurately tuned to 175 K.C.

The next stage is that of the I.F. amplifier. A single stage is used, requiring two I.F. transformers, consisting of four tuned circuits. The plate circuit of the first detector, the grid and plate circuit of the I.F. amplifier and the grid circuit of the second detector are all tuned to 175 K.C. Radiotron RCA-236 is used in this stage and its control grid voltage is also varied by means of the automatic volume control tube.

At this point it is well to consider the action of the automatic volume control tube as it controls the R.F. and I.F. amplifiers of the receiver. The grid of the automatic volume control tube, RCA-237, is connected direct to the cathode of the second detector.

The change in the bias voltage of the second detector, due to fluctuation of the signal, is applied to the grid of the A. V. C. tube. This produces a voltage drop across a resistor in the plate circuit which constitutes the control grid bias for the R. F. and I. F. amplifier. As the value of the plate current is a direct result of the voltage applied to the grid, a greater plate current gives a greater voltage drop across the resistor in its plate circuit and therefore a higher bias on the I. F. and R. F. stage. This results in less sensitivity and vice versa. The volume control varies the bias on the grid of the volume control tube.

The second detector is of the grid-biased type, using Radiotron RCA-237. The purpose of the second detector is to extract the audio frequency component of the R.F. signal which represents the voice or musical modulations produced in the studio of the broadcasting station. The audio component is extracted and used to drive the first A.F. tubes while the R.F. current is by-passed and not further used.

The output of the second detector is coupled by means of resistance coupling to the grid of the first A. F. Radiotron RCA-237. This audio stage is used as a driver for the Class B amplifier.

The output of the first audio stage is coupled by means of transformer coupling to the grids of the Radiotrons UX-112-A used as a push-pull Class "B" power stage. This stage is so biased that normally no plate current flows. However, as the grid swings positive due to the signal voltage being applied, plate current flows which is entirely of an audio character. As there is little residual current when no signal is present, this is a very economical amplifier as well as providing a high undistorted output—2 Watts.

The entire "A" battery current drain is 2.85 Amperes and the "B" current 12 M.A. minimum and 25 M.A. average maximum.

Filament and heater current is supplied from the storage battery in the car. Plate current is supplied by means of four medium size "B" batteries. A fuse is provided in both filament and plate circuits to protect the batteries and tubes.

(1) R. F. AND OSCILLATOR ADJUSTMENTS

Four adjustable capacitors are provided for aligning the R. F. circuits and adjusting the oscillator frequency so that it will be at a 175 K. C. difference from the incoming R. F. signal throughout the tuning range of the set. Poor quality, insensitivity, and possible inoperation of the receiver may be caused by these capacitors being out of adjustment.

If the other adjustments have not been tampered with—the intermediate tuning capacitors—the following procedure may be used for adjusting these capacitors.

1. Loosen the receiver unit clamping screw and dismount the receiver from its mounting bracket. Do not remove any of the connections or the flexible cable.

2. Procure an R. F. oscillator giving a modulated signal at exactly 1400 K. C. and 600 K. C. Also procure a non-metallic screw driver—Stock No. 7065 — and a No. 5 Spintite socket wrench.

3. An output indicator is necessary. This should be a current-squared thermo-galvanometer substituted or connected in parallel to the loudspeaker leads.

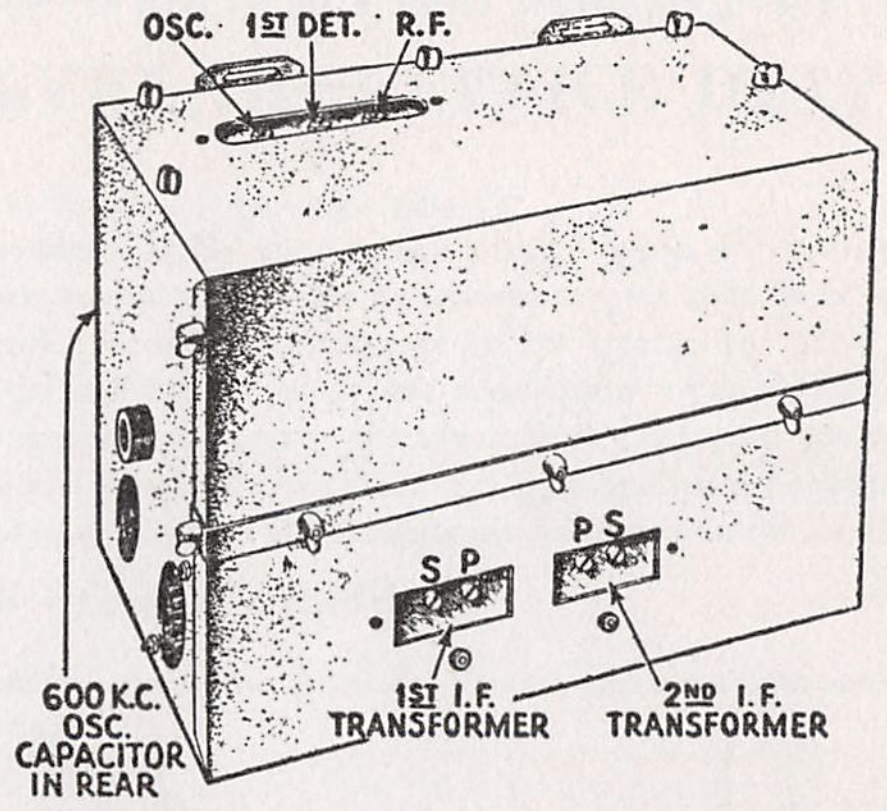

Figure 24—Location of Radio Frequency, Oscillator and Intermediate Frequency Adjustments

4. Remove the top cover of the receiver and remove the automatic volume control tube. Also ascertain that the tuning capacitor is fully meshed when the dial reads 150.

5. Place the oscillator in operation at exactly 1400 K. C. and couple it to the antenna. Set the dial at exactly 140 and adjust the coupling between the antenna and oscillator so that the output indicator does not give an excessive reading.

6. With the socket wrench, adjust the oscillator (see Figure 24), the first detector and the R. F. line-up capacitors until a maximum deflection is obtained in the output meter.

7. Set the oscillator at 600 K. C. Tune in this signal with the receiver and adjust for a deflection in the output meter. Now adjust the 600 K. C. series capacitor, Figure 24, until maximum output is obtained. Rock the tuning capacitor back and forth while making this adjustment.

8. Change the oscillator frequency to 1400 K. C. and set the dial at 140. Again make the adjustments given under 2, 3, 4, 5 and 6.

(2) I. F. TUNING CAPACITOR ADJUSTMENTS

A single intermediate frequency amplifier stage is used in this receiver. Two transformers are used and all circuits are tuned to 175 K. C. The circuits are peaked and when alignment adjustments are made, the capacitors are adjusted for maximum output. It will be necessary to remove the chassis from its mounting bracket as is the case of the R. F. adjustments.

A detailed procedure for making these adjustments follows:

a. Procure a modulated R. F. oscillator giving a signal at 175 K. C. The General Radio Type 360 is suitable. A non-metallic screw driver such as Stock No. 7065 is also necessary.

b. Connect an output meter in the circuit. A current-squared galvanometer connected either in place of or across the loudspeaker leads is suitable.

c. Remove the metal cover over the top of the receiver and then remove the oscillator and automatic volume control tube, Figure 10. Make a good ground connection between the receiver chassis and the car frame.

d. Place the oscillator in operation and connect its output between the control grid connection of the first detector and ground, see Figure 10.

e. Now adjust the secondary and primary of the second and first I. F. transformers until a maximum output is obtained in the output meter. Go through these adjustments a second time as a slight readjustment may be necessary. Be sure the output from the oscillator is not great enough to overload the first detector and I. F. tubes.

f. When the adjustments are made, the set should perform at maximum efficiency. However, due to the interlocking of adjustments, it is a good plan to always follow the I. F. adjustments with the R. F. and oscillator lineup capacitor adjustments as described in Part III, Section I.

(3) VOLTAGE READINGS AT RADIOTRON SOCKETS

The following voltages taken at each Radiotron socket with the receiver in operating condition should prove of value when checking with test sets such as the Weston Model 547, Type 3, or others giving similar readings. The plate currents shown are not necessarily accurate for each tube, as the cable in the test set will cause some circuits to oscillate, due to its added capacity. Small variations of voltages will be caused by different tubes. Therefore, the following values must be taken as approximately those that will be found under varying conditions. The numbers in column 1 indicate the tube socket numbers shown in Figure 26.

RADIOTRON SOCKET VOLTAGES

VOLUME CONTROL AT MINIMUM

Tube No.	Cathode to Heater Volts	Cathode or Filament to Control Grid Volts	Cathode to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Screen Grid Current M. A.	Heater or Filament Volts
1. R. F.	18	0.5	100	136	0	0	6.0
2. 1st Det.	1.0	3.0	42	150	0.25	0.1	6.0
3. Osc.	6.0	0	—	45	3.5	—	6.0
4. I. F.	18	1.0	100	136	0	0	6.0
5. 2nd Det.	12	10	—	110	0.5	—	6.0
6. 1st A. F.	15	2.0	—	165	3.5	—	6.0
7. A. V. C.	10	1.0	—	15	0	—	6.0
8. P. W. R.	—	20	—	155	1.5	—	4.5
9. P. W. R.	—	20	—	155	1.5	—	4.5

VOLUME CONTROL AT MAXIMUM
(NO SIGNAL BEING RECEIVED)

1. R. F.	18	0.5	70	135	4.0	1.0	6.0
2. 1st Det.	1.0	3.0	42	150	0.25	0.1	6.0
3. Osc.	6.0	0	—	45	3.5	—	6.0
4. I. F.	18	0.5	70	135	4.0	1.0	6.0
5. 2nd Det.	12	10	—	110	0.5	—	6.0
6. 1st A. F.	15	2.0	—	165	3.5	—	6.0
7. A. V. C.	5.0	9.0	—	15	0	—	6.0
8. P. W. R.	—	20	—	155	1.5	—	4.5
9. P. W. R.	—	20	—	155	1.5	—	4.5

(4) TESTING CAPACITORS

The by-pass capacitors are in a metal container. The internal wiring diagram is shown in Figure 26.

The capacitors can best be tested by freeing their connections and charging them with approximately 180 volts D. C. (use the four "B" batteries) and then noting their ability to hold the charge. After charging, short circuiting the capacitor terminals with a screw driver should produce a flash the size of the flash depending on the capacity of the capacitor and the voltage used for charging. A capacitor that will not hold its charge is defective and requires replacement of the entire unit.

(5) CHECKING RESISTANCE VALUES·

The values of the various resistance units in this receiver are shown in the schematic diagram, Figure 22. When testing a receiver for defects, the various values of resistance should be checked. This may be done by a resistance bridge; the voltmeter-ammeter method, or by the following method.

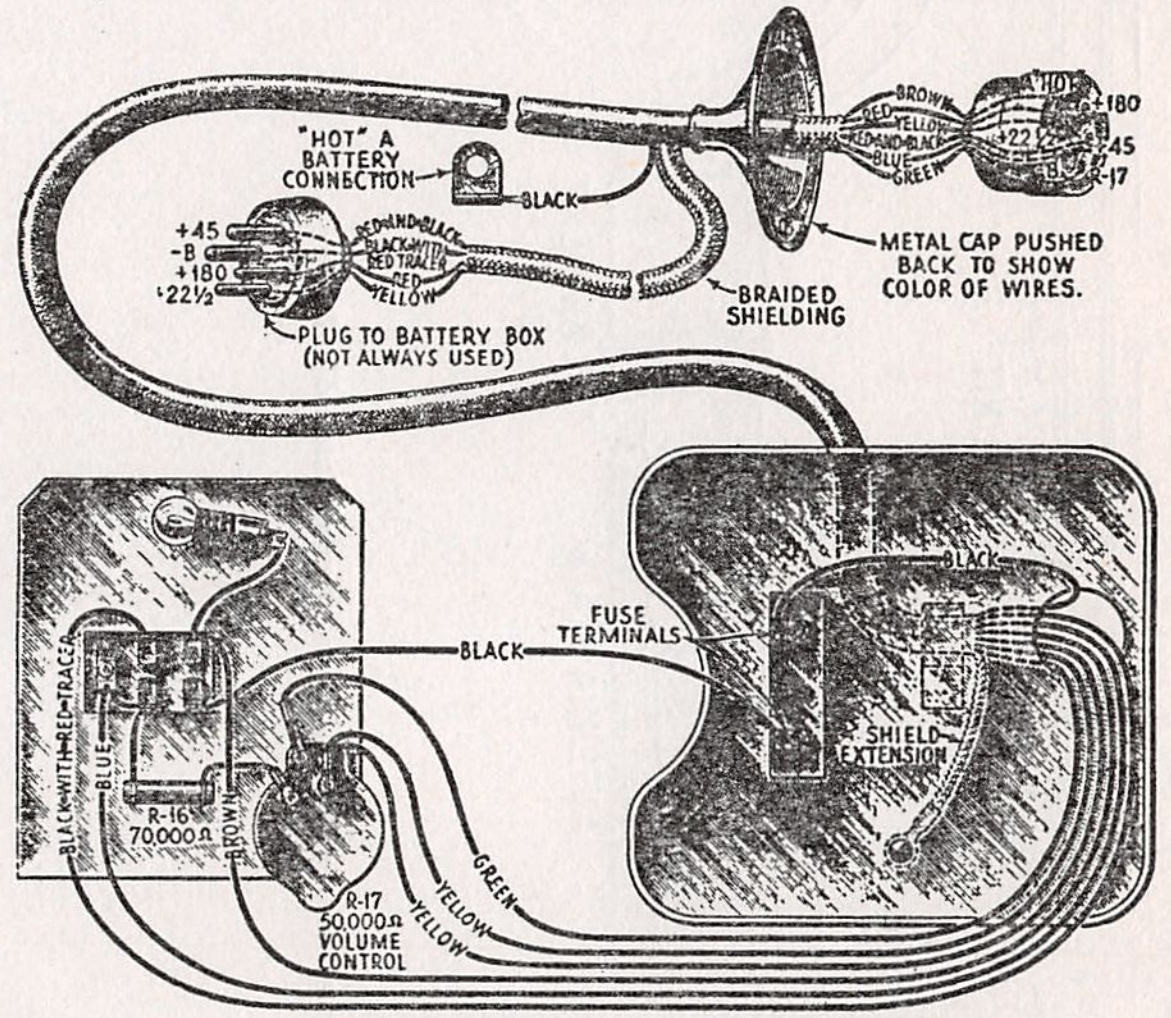

Figure 25—Control Box Wiring

For resistance of low value, 5000 ohms or less, use a voltmeter having a resistance not greater than 100 ohms per volt. For high values of resistance use a meter of 1000 ohms or more per volt. The Weston meters, Type 301 or 280, each have a resistance of 62 ohms per volt and are satisfactory for the low values. Use sufficient battery to give a good deflection on the meter, for example, a 45 volt "B" battery for a 0-50 voltmeter. Take two readings, one of the battery alone, and one of the battery with the unknown resistance in series. Then apply the following formula:

$$\left(\frac{\text{Reading obtained of battery alone}}{\text{Reading obtained with resistance in series}} - 1\right) \text{Resistance of meter} = \text{Unknown Resistance}$$

(6) WIRING DIAGRAMS

The schematic wiring diagram is shown in Figure 22. The Control Unit wiring is shown in Figure 25 and the general wiring in Figure 26. A reference to these diagrams when locating trouble or replacing a unit will usually prove helpful. The internal connections of the cables are shown in Figure 27.

R. C. A. VICTOR CO., INC.

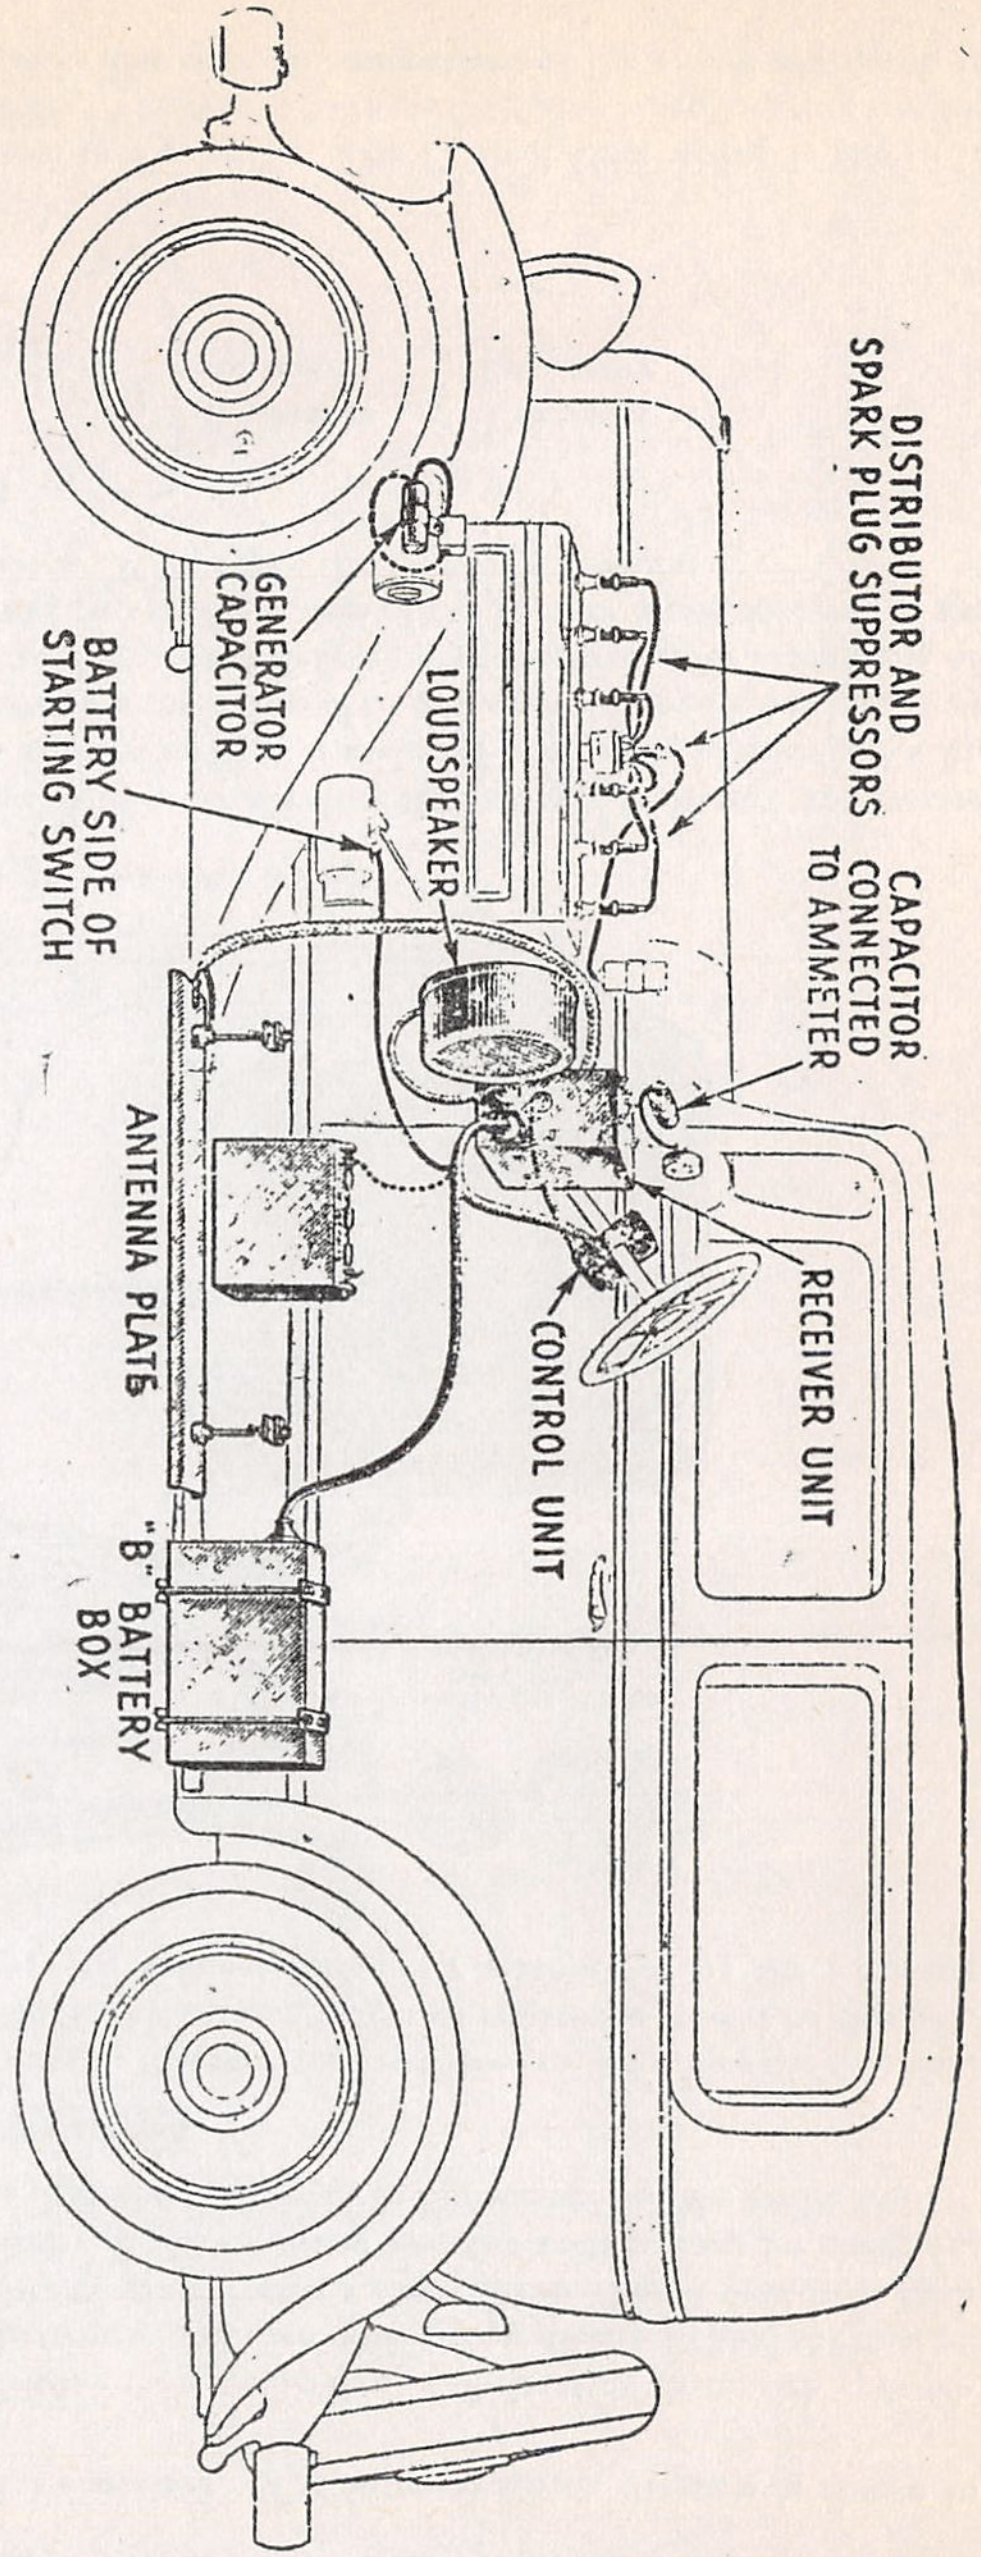
DISTRIBUTOR AND SPARK PLUG SUPPRESSORS
CAPACITOR CONNECTED TO AMMETER
RECEIVER UNIT
CONTROL UNIT
LOUDSPEAKER
GENERATOR CAPACITOR
BATTERY SIDE OF STARTING SWITCH
ANTENNA PLATE
"B" BATTERY BOX

General View of Typical Installation of Automobile Radio

(7) VOLUME CONTROL

Normally, turning the volume control to the extreme counter-clockwise position will reduce the output volume of the receiver to zero. However, in event a powerful local station does not reduce to a satisfactory level, then check the following points.

a. Automatic volume control tube. Try interchanging it with others of a similar type or replacing it with a new one.

b. Volume control. Normally the volume control is of 50,000 ohms resistance. If for any reason it should be less, then the fixed resistor R-16 must also be reduced in value so that the proportion of 50,000 ohms to 70,000 ohms is maintained. For example—if the volume control measures 30,000 ohms, the fixed resistor should be replaced with one of 42,000 ohms. Such a replacement is much easier than a replacement of the complete volume control.

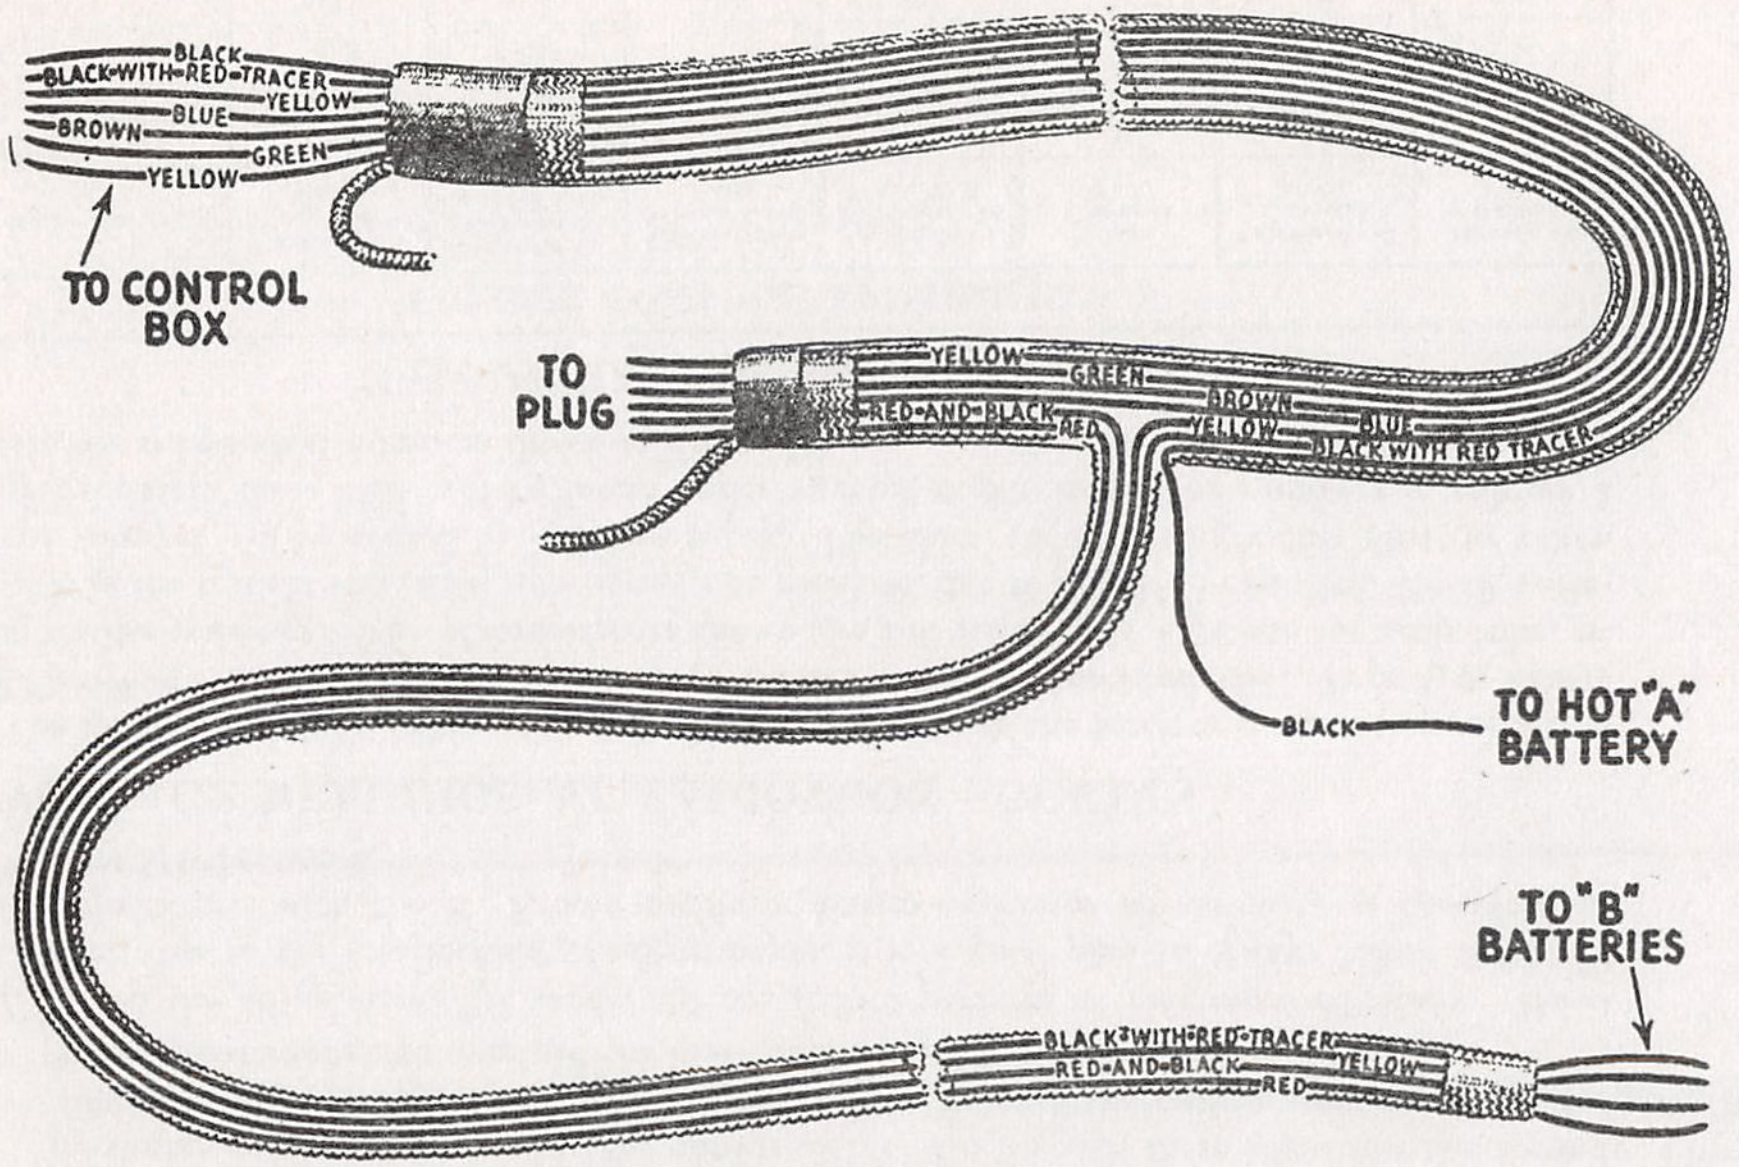
BLACK
BLACK-WITH-RED-TRACER
YELLOW
BLUE
BROWN
GREEN
YELLOW
TO CONTROL BOX
TO PLUG
YELLOW
GREEN
BROWN
RED-AND-BLACK
RED
YELLOW
BLUE
BLACK WITH RED TRACER
BLACK
TO HOT "A" BATTERY
TO "B" BATTERIES
BLACK-WITH-RED-TRACER
RED-AND-BLACK
RED
YELLOW

Figure 27—Internal Connections of Cables

PART IV—REPLACEMENT PARTS

On the following pages the parts that are required for replacement use are listed. It will be noted that several parts not included in the standard equipment are also listed. There are respectively, several types of ignition suppressors and special length flexible shafts. Reference to these parts has been made in the text and on some special installations they will be required.

R. C. A. VICTOR CO., INC.

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price
	RECEIVER ASSEMBLY	
2240	Resistor—30,000 ohms—Carbon type—1 watt	$0.70
2546	Resistor—1 megohm—Carbon type—1 watt—Package of 5	3.00
2736	Resistor—170 ohms—Carbon type—1 watt—Package of 5	2.00
2741	Idler—Tuning capacitor drive idler—Package of 5	.80
2742	Spring—Tuning capacitor drive tension spring—Package of 5	.50
2747	Cap—Grid contactor cap—Package of 5	.50
2749	Capacitor—2400 mmfd	1.50
2966	Resistor—28,000 ohms—Carbon type—1 watt—Package of 5	2.50
2994	Coil—2nd detector R.F. choke coil	.60
3048	Resistor—500,000 ohms—Carbon type—½ watt—Package of 5	2.50
3078	Resistor—10,000 ohms—Carbon type —— watt—Package of 5	2.50
3118	Resistor—100,000 ohms—Carbon type—¼ watt—Package of 5	2.00
3288	Socket—UY Radiotron socket—Complete with insulation strip	.50
6133	Socket—UX Radiotron socket—Complete with insulation strip	.50
6134	Resistor—1200 ohms—Carbon type—1 watt—Package of 5	2.00
6135	Resistor—270 ohms—Carbon type—¼ watt—Package of 5	2.00
6136	Resistor—3500 ohms—Carbon type—1 watt—Package of 5	2.00
6137	Coil—R.F. coil	1.90
6138	Coil—1st detector and oscillator coil	3.30
6139	Cord—Tuning condenser drive cord—Package of 5	.65
6140	Plug—6 prong male plug and plug receptacle	.50
6141	Receptacle—Two prong receptacle for speaker cord plug—Package of 2	.70
6142	Resistor—6,000 ohms—Carbon type—½ watt—Package of 5	2.00
6143	Resistor—40,000 ohms—Carbon type— watt—Package of 5	2.00
6144	Resistor—4 ohms—Flexible wire type—Package of 5	1.00
6145	Cover Plate—Adjustable capacitor adjustment cover plate—Located on back receiver shield—Package of 5	.50
6146	Screw—Self tapping hex head screw—For mounting cover plates to shield—Package of 40	.60
6147	Nut—Wing nut for receiver shield—Package of 20	.60
6148	Fuse—10 amperes—Package of 5	.50
6149	Bumper—Rubber bumpers—Located on receiver mounting bracket—Package of 10	.50
6150	Plug—Six prong female plug—Located on main cable	.50

Stock No.	DESCRIPTION	List Price
	RECEIVER ASSEMBLY—Continued	
6151	Suppressor—Spark plug type suppressor	$0.65
6152	Suppressor—Distributor type suppressor	.65
6175	Suppressor—Distributor splice-in suppressor	.65
7062	Capacitor — Adjustable capacitor — 15-70 mmfd	1.00
7065	Micarta Screw Driver—Used for I. F. and R. F. adjustment	1.10
7299	Capacitor—745 mmfd	.70
7421	Capacitor pack—Comprising two 0.5 mfd., two 0.018 mfd., three 0.1 mfd., two 0.25 mfd. and one 4.0 mfd. capacitors in metal container	5.25
7422	Transformer—1st intermediate transformer	2.50
7423	Transformer—2nd intermediate transformer	2.50
7424	Transformer—Output transformer	1.85
7425	Transformer—Interstage transformer	2.20
7426	Board—Resistor board complete, less resistors, coil and capacitor	.75
7427	Cover plate—Intermediate adjustment cover plate—Located on front receiver shield—Package of 5	.50
7428	Cover plate—Tuning capacitor trimmer adjustment cover plate—Located on top receiver shield—Package of 5	.50
7429	Capacitor—0.625 mfd.—In metal casing with mounting bracket	2.20
8821	Capacitor assembly—Tuning capacitor assembly—Comprising 3 variable capacitors, drive bracket, drive cord, drive shaft and drum—Assembled	8.60
8822	Flexible drive shaft—Length 30"—From control box to receiver	4.90
8823	Shield—Back cover shield for receiver chassis	2.05
8824	Shield—Front cover shield for receiver chassis	1.10
8825	Shield—Top cover shield for receiver chassis	1.15
8826	Bracket—Receiver chassis mounting bracket complete with two rubber bumpers	1.20
8827	Cable—Main cable less plug—From control box to receiver chassis and battery box	2.20
8833	Flexible drive shaft—Length 42"—From control box to receiver	8.65
8834	Flexible drive shaft—Length 54" From control box to receiver	9.35
8835	Flexible drive shaft—Length 66" From control box to receiver	9.65
8836	Flexible drive shaft—Length 78" From control box to receiver	10.40

Order By Stock Number Only

REPLACEMENT PARTS—(Continued)

Stock No.	DESCRIPTION	List Price
	CONTROL BOX ASSEMBLY	
3287	Label—Metal trade mark label—Package of 5	$0.75
6153	Clamp—For clamping control box to steering wheel shaft—Package of 5	.50
6154	Screw — Clamp mounting screw — Package of 50	.50
6155	Shaft—Tuning dial shaft with gear and drive washer—Package of 5	1.25
6156	Switch—Lock switch—Complete with mounting nut and washer	.80
6157	Volume control—Volume control complete with mounting nut	1.50
6158	Nut—Knurled nut for lock switch—Package of 10	.50
6159	Resistor—70,000 ohms—Carbon type—½ watt—Package of 5	2.00
6160	Dial scale—Package of 5	.50
6161	Knob—Tuning control knob—Package of 5	1.50
6162	Spring—Knob tension spring—Package of 25	.50
6163	Knob—Volume control knob—Package of 5	1.50
6164	Key—Lock switch key—Package of 10	.50
6165	Lamp—Dial scale lamp—Package of 5	1.75
6169	Felt—Felt strip for steering column—Package of 10	.50
7430	Control box complete—Less flexible shaft and cable	5.25
7431	Cover assembly—Comprising top and bottom covers	1.20
7432	Bracket assembly—Comprising brackets, studs, stop washer and lamp socket—Located inside of control box	3.45
	LOUDSPEAKER ASSEMBLY	
2975	Rivet—Cone retaining ring mounting rivet—Package of 100	.50
6166	Board—Terminal board with two terminals—Located on cone bracket—Package of 5	1.00
6167	Plug—Two prong male plug—For cable No. 8832—Package of 5	.75
6170	Rivet—For mounting speaker and front grille into housing—Package of 100	.50
6171	Rivet—For mounting No. 8831 bracket to housing—Package of 100	.50
7433	Screen-Speaker housing case wire screen—Package of 5	1.50
7434	Screen—Dust screen for back of speaker housing case—Package of 5	1.75
8702	Ring—Cone retaining ring	.80
8828	Magnet assembly—Comprising cone bracket, core and magnet	4.60

Stock No.	DESCRIPTION	List Price
	LOUDSPEAKER ASSEMBLY—Continued	
8829	Cone—Speaker paper cone. Package of 5	$8.00
8830	Housing—Speaker housing complete—Comprising front screen, back dust screen, case and mounting bracket	3.00
8831	Bracket assembly—Speaker housing bracket — Comprising bracket, 2 mounting bolts, 4 washers and 4 nuts	.95
8832	Cable—Speaker shielded cable less plug	.55
8838	Speaker complete—Comprising Speaker, housing case and cord—Assembled	13.50
	ANTENNA ASSEMBLY	
6129	Staple—Insulated staple—Package of 100	.75
6130	Screw and Nut—U bracket set screw—⅜—16 x 1¼—Complete with lock nut—Package of 10	.50
6131	Insulator—Insulator bushing for No. 7420—Package of 10	.70
7419	Bracket—U bracket for mounting antenna plates—Package of 2	1.00
7420	Stud—Antenna plate stud—⅜—16 x 8"—Complete with 5 mounting nuts—Package of 5	1.90
8819	Plate—Single antenna plate	1.75
	BATTERY BOX ASSEMBLY	
2968	Receptacle—Four prong receptacle complete	.50
6122	Clamp—Cable clamp—Package of 15	.50
6123	Plug—Four prong male plug	.50
6124	Cap—Plug cover rubber cap for No. 6123—Package of 5	1.50
6125	Fuse—¼ amperes—Package of 5	.50
6126	Clip—Fuse clip—Package of 12	.50
6127	Bolt—Carriage bolt for mounting top of box to car—5/16—18 x 1¼"—Complete with lock nut—Package of 5	.50
7418	Bolt—Hanger bolt 5/16—18 x 9¼"—Complete with two lock nuts—Package of 5	.50
8817	Box body assembly—Comprising bottom plate, 2 side plates, 2 bottom strips and receptacle—Assembled	3.45
8818	Box cover assembly—Comprising cover plate, 2 strips and 2 rubber strips—Assembled	1.70
8820	Plate and strip assembly—Cardboard plate and strip assembly comprising six strips and one plate — Package of 5	.75

Order By Stock Number Only

MODEL M-30
Auto Radio
Resistance Data

R. C. A. VICTOR CO., INC.

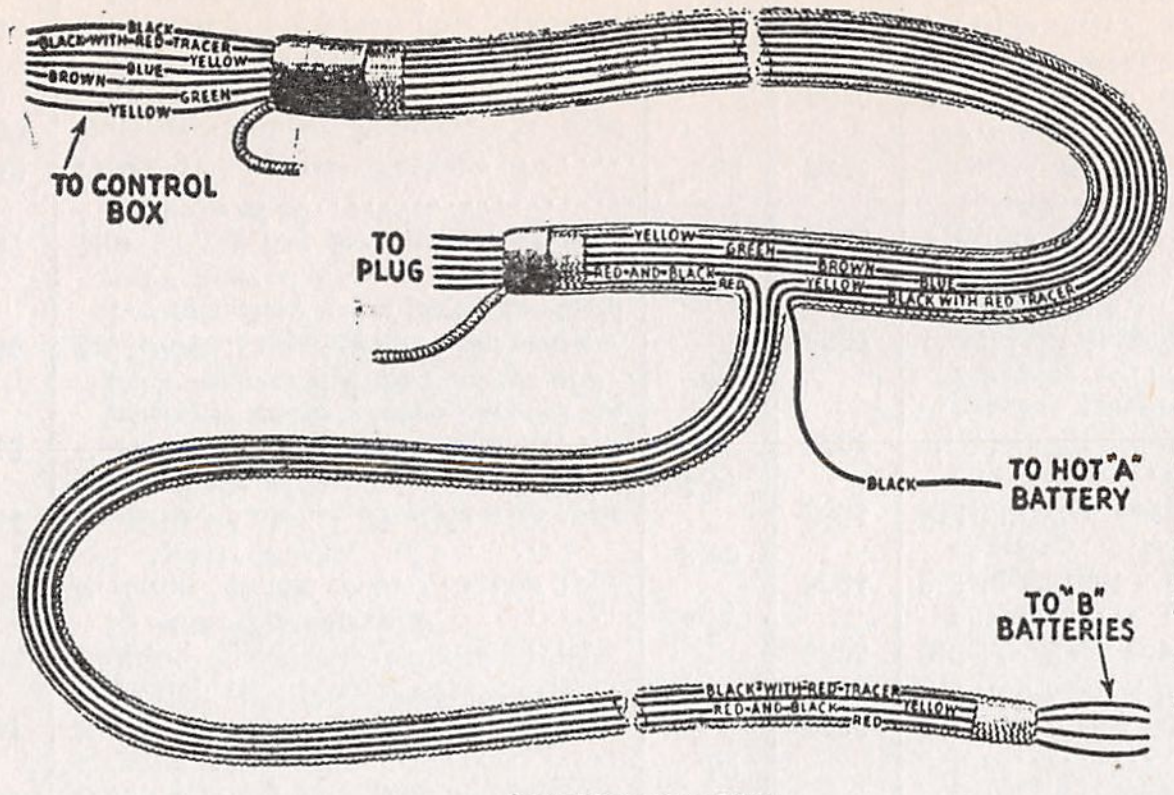
BLACK
BLACK-WITH-RED-TRACER
YELLOW
BROWN
BLUE
GREEN
YELLOW
TO CONTROL BOX
TO PLUG
YELLOW
GREEN
RED-AND-BLACK
RED
BROWN
YELLOW
BLUE
BLACK WITH RED TRACER
BLACK
TO HOT "A" BATTERY
TO "B" BATTERIES
BLACK-WITH-RED-TRACER
RED-AND-BLACK
YELLOW
RED

Internal Connections of Cables

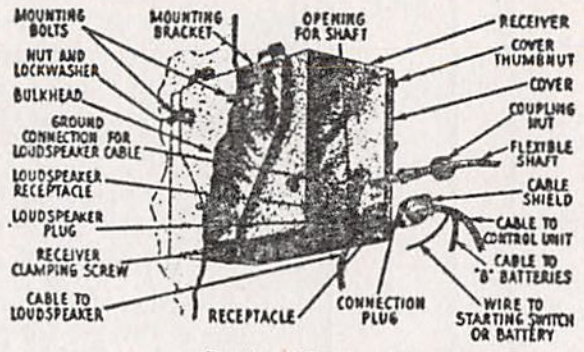
MOUNTING BOLTS
NUT AND LOCKWASHER
BULKHEAD
GROUND CONNECTION FOR LOUDSPEAKER CABLE
LOUDSPEAKER RECEPTACLE
LOUDSPEAKER PLUG
RECEIVER CLAMPING SCREW
CABLE TO LOUDSPEAKER
MOUNTING BRACKET
OPENING FOR SHAFT
RECEPTACLE
CONNECTION PLUG
RECEIVER
COVER THUMBNUT
COVER
COUPLING NUT
FLEXIBLE SHAFT
CABLE SHIELD
CABLE TO CONTROL UNIT
CABLE TO "B" BATTERIES
WIRE TO STARTING SWITCH OR BATTERY

Details of Receiver Mounting

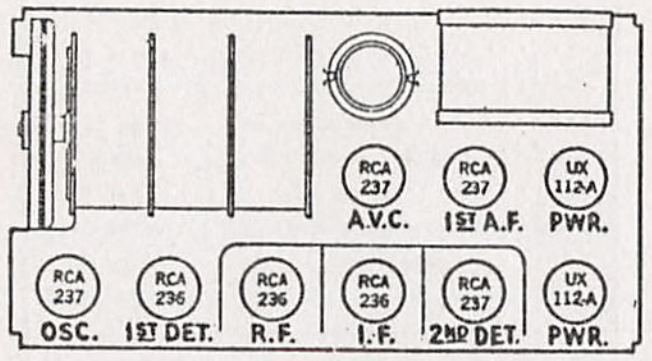
RCA 237
A.V.C.
RCA 237
1ST A.F.
UX 112A
PWR.
RCA 237
OSC.
RCA 236
1ST DET.
RCA 236
R.F.
RCA 236
I.F.
RCA 237
2ND DET.
UX 112A
PWR.

A 4 ohm resistor is to be found between one output tube filament terminal and the "A" hot lead. This lead contains a fuse between the "A" terminal and the switch. The control grid of the AVC tube is joined directly to the cathode of the 2nd detector. The normal circuit arrangement used in the receiver assumes A- of the car battery connected to ground. If A+ is grounded, a change is required. This change is shown in the wiring diagram upon page 504-Y

RADIOTRON SOCKET VOLTAGES

VOLUME CONTROL AT MINIMUM

Tube No.	Cathode to Heater Volts	Cathode or Filament to Control Grid Volts	Cathode to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Screen Grid Current M. A.	Heater or Filament Volts
1. R. F.	18	0.5	100	136	0	0	6.0
2. 1st Det.	1.0	3.0	42	150	0.25	0.1	6.0
3. Osc.	6.0	0	—	45	3.5	--	6.0
4. I. F.	18	1.0	100	136	0	0	6.0
5. 2nd Det.	12	10	--	110	0.5		6.0
6. 1st A. F.	15	2.0	--	165	3.5		6.0
7. A. V. C.	10	1.0	—	15	0	-	6.0
8. P. W. R.	—	20	—	155	1.5	--	4.5
9. P. W. R.	—	20	-	155	1.5	—	4.5

VOLUME CONTROL AT MAXIMUM
(NO SIGNAL BEING RECEIVED)

Tube No.	Cathode to Heater Volts	Cathode or Filament to Control Grid Volts	Cathode to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Screen Grid Current M. A.	Heater or Filament Volts
1. R. F.	18	0.5	70	135	4.0	1.0	6.0
2. 1st Det.	1.0	3.0	42	150	0.25	0.1	6.0
3. Osc.	6.0	0	—	45	3.5	—	6.0
4. I. F.	18	0.5	70	135	4.0	1.0	6.0
5. 2nd Det.	12	10	—	110	0.5	—	6.0
6. 1st A. F.	15	2.0	—	165	3.5	—	6.0
7. A. V. C.	5.0	9.0	—	15	0	-	6.0
8. P. W. R.	—	20	—	155	1.5	-	4.5
9. P. W. R.	--	20	—	155	1.5	—	4.5

All tubes removed from sockets and all batteries disconnected. Dial lamp removed

From Chassis To	Correct		Incorrect
Aerial to Ground	28	ohms	
RF Control Grid to 45+	500,005	ohms	
RF Control Grid to Chassis	0	ohms	TC- rf Cg-Y
RF Control Grid to AVC Plate	5	ohms	BLC- in tuned circuit
RF Cathode to 45+	170	ohms	
RF Cathode to chassis	0	ohms	BC- rf K-Y
RF Screen Grid to 180+	30,000	ohms	
RF Screen Grid to chassis	0	ohms	BC- rf Sg-Y
RF Plate to 180+	58	ohms	FC-Y (4 mfd)
1 Detector Cg to chassis	5	ohms	TC- 1 D Cg-Y
1 Detector Cathode to chassis	10,000	ohms	BC- 1 DK-Y
1 Detector Screen Grid to 180+	30,000	ohms	
1 Detector Screen Grid to chassis	0	ohm	FC-Y (4 mfd)
			BC- 1 D Sg-Y
1 Detector Plate to 180+	89	ohms	TC- IF Tr
Oscillator Cg to chassis	40,000	ohms	Osc Grid Condenser
Oscillator Cathode to chassis	0	ohms	
Oscillator Plate to 180+	30,000	ohms	
Oscillator Plate to 1 D Screen	1	ohm	See Rf Screen
IF Control Grid to AVC Plate	40	ohms	TC- IF Tr
IF Cathode to 45+	170	ohms	
IF Screen to 180+	30,000	ohms	See RF Screen
IF Plate to 180+	40	ohms	TC- IF Tr
			See 1 D Plate
2 Detector Control Grid to B-	89	ohms	TC- IF Tr
2 Detector Cathode to B-	28,000	ohms	
2 Detector Plate to 180+	100,080	ohms	
2 Detector Plate to Cathode	0	ohm	BC- 2 DP- 2 DK
1 Audio Control Grid to B-	1,000,000	ohms	
1 Audio Cathode to B-	3,589	ohms	BC- 1 AF K-B-
1 Audio Plate- 180+	920	ohms	
2 AF Cg to Cg	920	ohms	
2 AF Cg to chassis (A- grounded)	1,800	ohms	BC- 2 AF Cg-F
2 AF Plate to Plate	560	ohms	
Between B- and 22+	1,715	ohms	
Across Output Transformer Secondary only	.4	ohms	
AVC Plate to 45+	500,000	ohms	
AVC Control Grid to B-	28,000	ohms	
AVC Cathode to 22+	0-29,455	ohms	

R. C. A. VICTOR CO., INC.

MODEL P-31
Portable
Schematic
Voltage

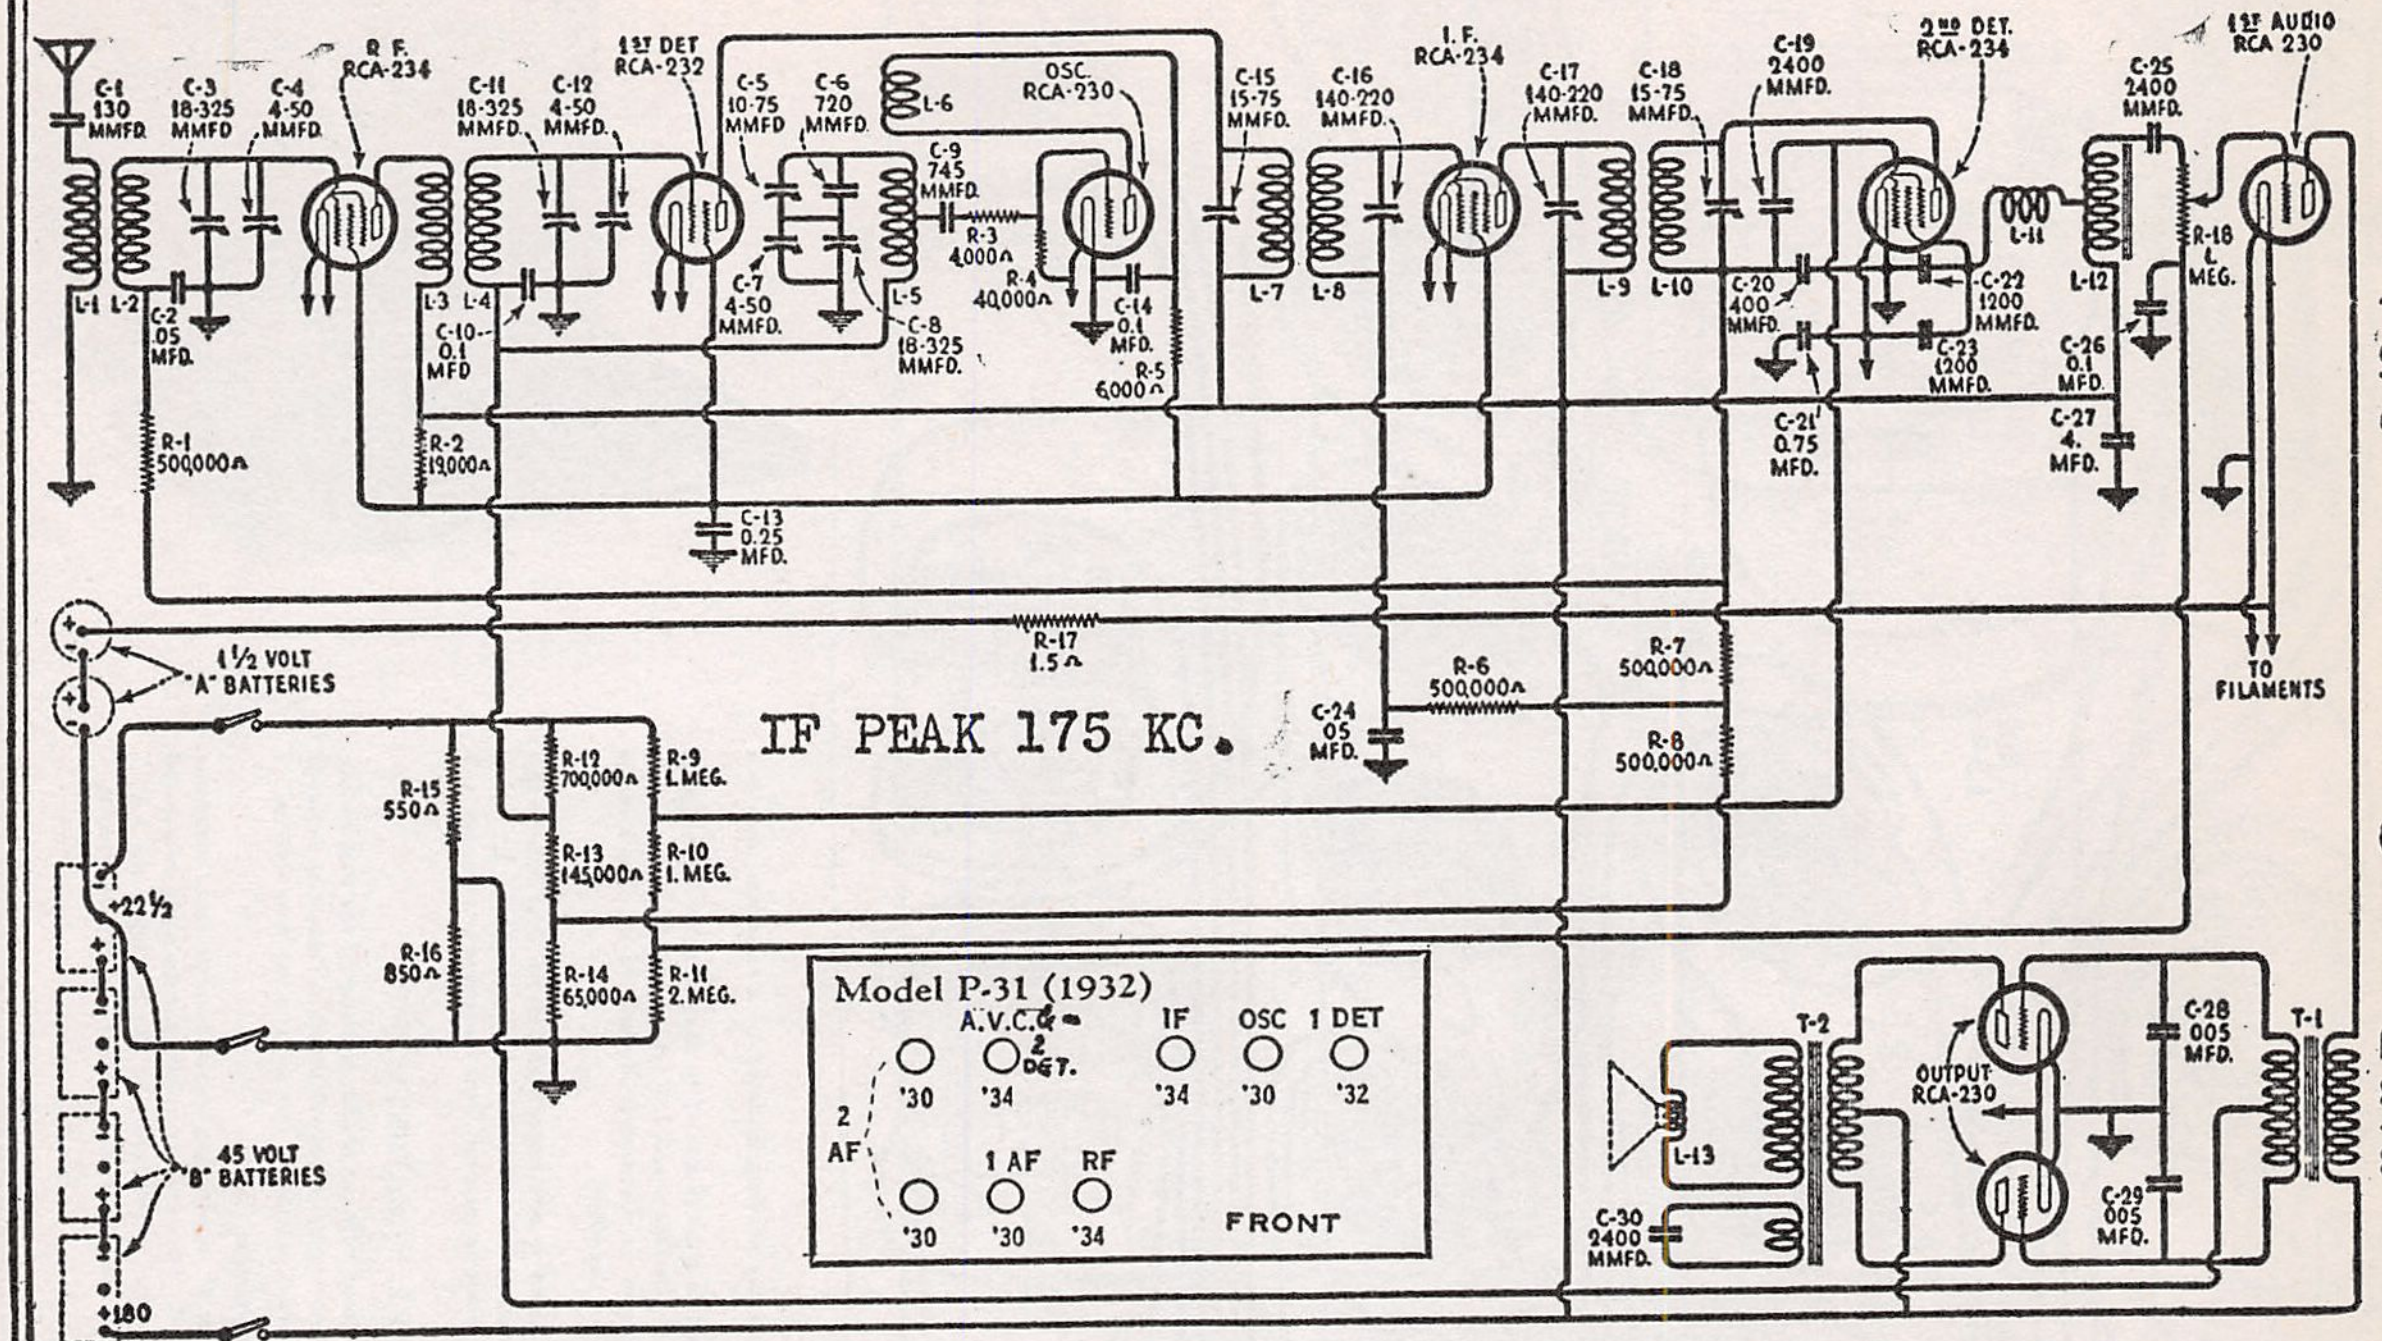
C-1 130 MMFD.
C-3 18-325 MMFD
C-4 4-50 MMFD.
R.F. RCA-234
C-11 18-325 MMFD.
C-12 4-50 MMFD.
1ST DET RCA-232
C-5 10-75 MMFD
C-6 720 MMFD.
L-6
C-9 745 MMFD.
OSC. RCA-230
R-3 4,000 Ω
R-4 40,000 Ω
C-14 0.1 MFD.
R-5 6,000 Ω
C-7 4-50 MMFD.
L-5
C-8 18-325 MMFD.
C-15 15-75 MMFD.
C-16 140-220 MMFD.
I.F. RCA-234
C-17 140-220 MMFD.
C-18 15-75 MMFD.
C-19 2400 MMFD.
2ND DET. RCA-234
C-25 2400 MMFD.
1ST AUDIO RCA 230
L-1 L-2
C-2 .05 MFD.
L-3 L-4
C-10 0.1 MFD
L-7 L-8
L-9 L-10
C-20 400 MMFD.
C-22 1200 MMFD.
C-23 1200 MMFD.
L-11
L-12
R-18 1. MEG.
C-26 0.1 MFD.
C-21 0.75 MFD.
C-27 4. MFD.
R-1 500,000 Ω
R-2 19,000 Ω
C-13 0.25 MFD.
TO FILAMENTS
1½ VOLT "A" BATTERIES
R-17 1.5 Ω
R-6 500,000 Ω
R-7 500,000 Ω
R-8 500,000 Ω
C-24 .05 MFD.
IF PEAK 175 KC.
R-15 550 Ω
R-12 700,000 Ω
R-9 1. MEG.
R-13 145,000 Ω
R-10 1. MEG.
R-16 850 Ω
R-14 65,000 Ω
R-11 2. MEG.
+22½
45 VOLT "B" BATTERIES
+180
Model P-31 (1932)
A.V.C.& 2 DET.
IF
OSC
1 DET
'30
'34
'34
'30
'32
2 AF
1 AF
RF
'30
'30
'34
FRONT
T-2
T-1
L-13
OUTPUT RCA-230
C-28 .005 MFD.
C-29 .005 MFD.
C-30 2400 MMFD.

"A" Battery Current.........0.48 Amps.
Average "B" Battery Current.. .18 M. A.
Type of Audio Output Amplifier. . .Class "B"
Undistorted Output.............0.75 Watts

RADIOTRON SOCKET VOLTAGES

(No Signal Being Received)

Radiotron No.	Control Grid to Filament Volts	Screen Grid to Filament Volts	Plate to Filament Volts	Screen Current M. A.	Plate Current M. A.	Filament Volts
1. R. F.	0.2	65	150	1.0	3.0	2.0
2. 1st Det.	0.5	65	150	0.1	0.2	2.0
3. Osc.	1.0	—	45	—	3.0	2.0
4. I. F.	0.5	65	150	1.0	3.0	2.0
5. 2nd Det.	2.0	150	−1.5	4.0	0	2.0
6. 1st A. F.	1.0	—	145	—	2.5	2.0
7. Power	14.0	—	150	—	1.5	2.0
8. Power	14.0	—	150	—	1.5	2.0

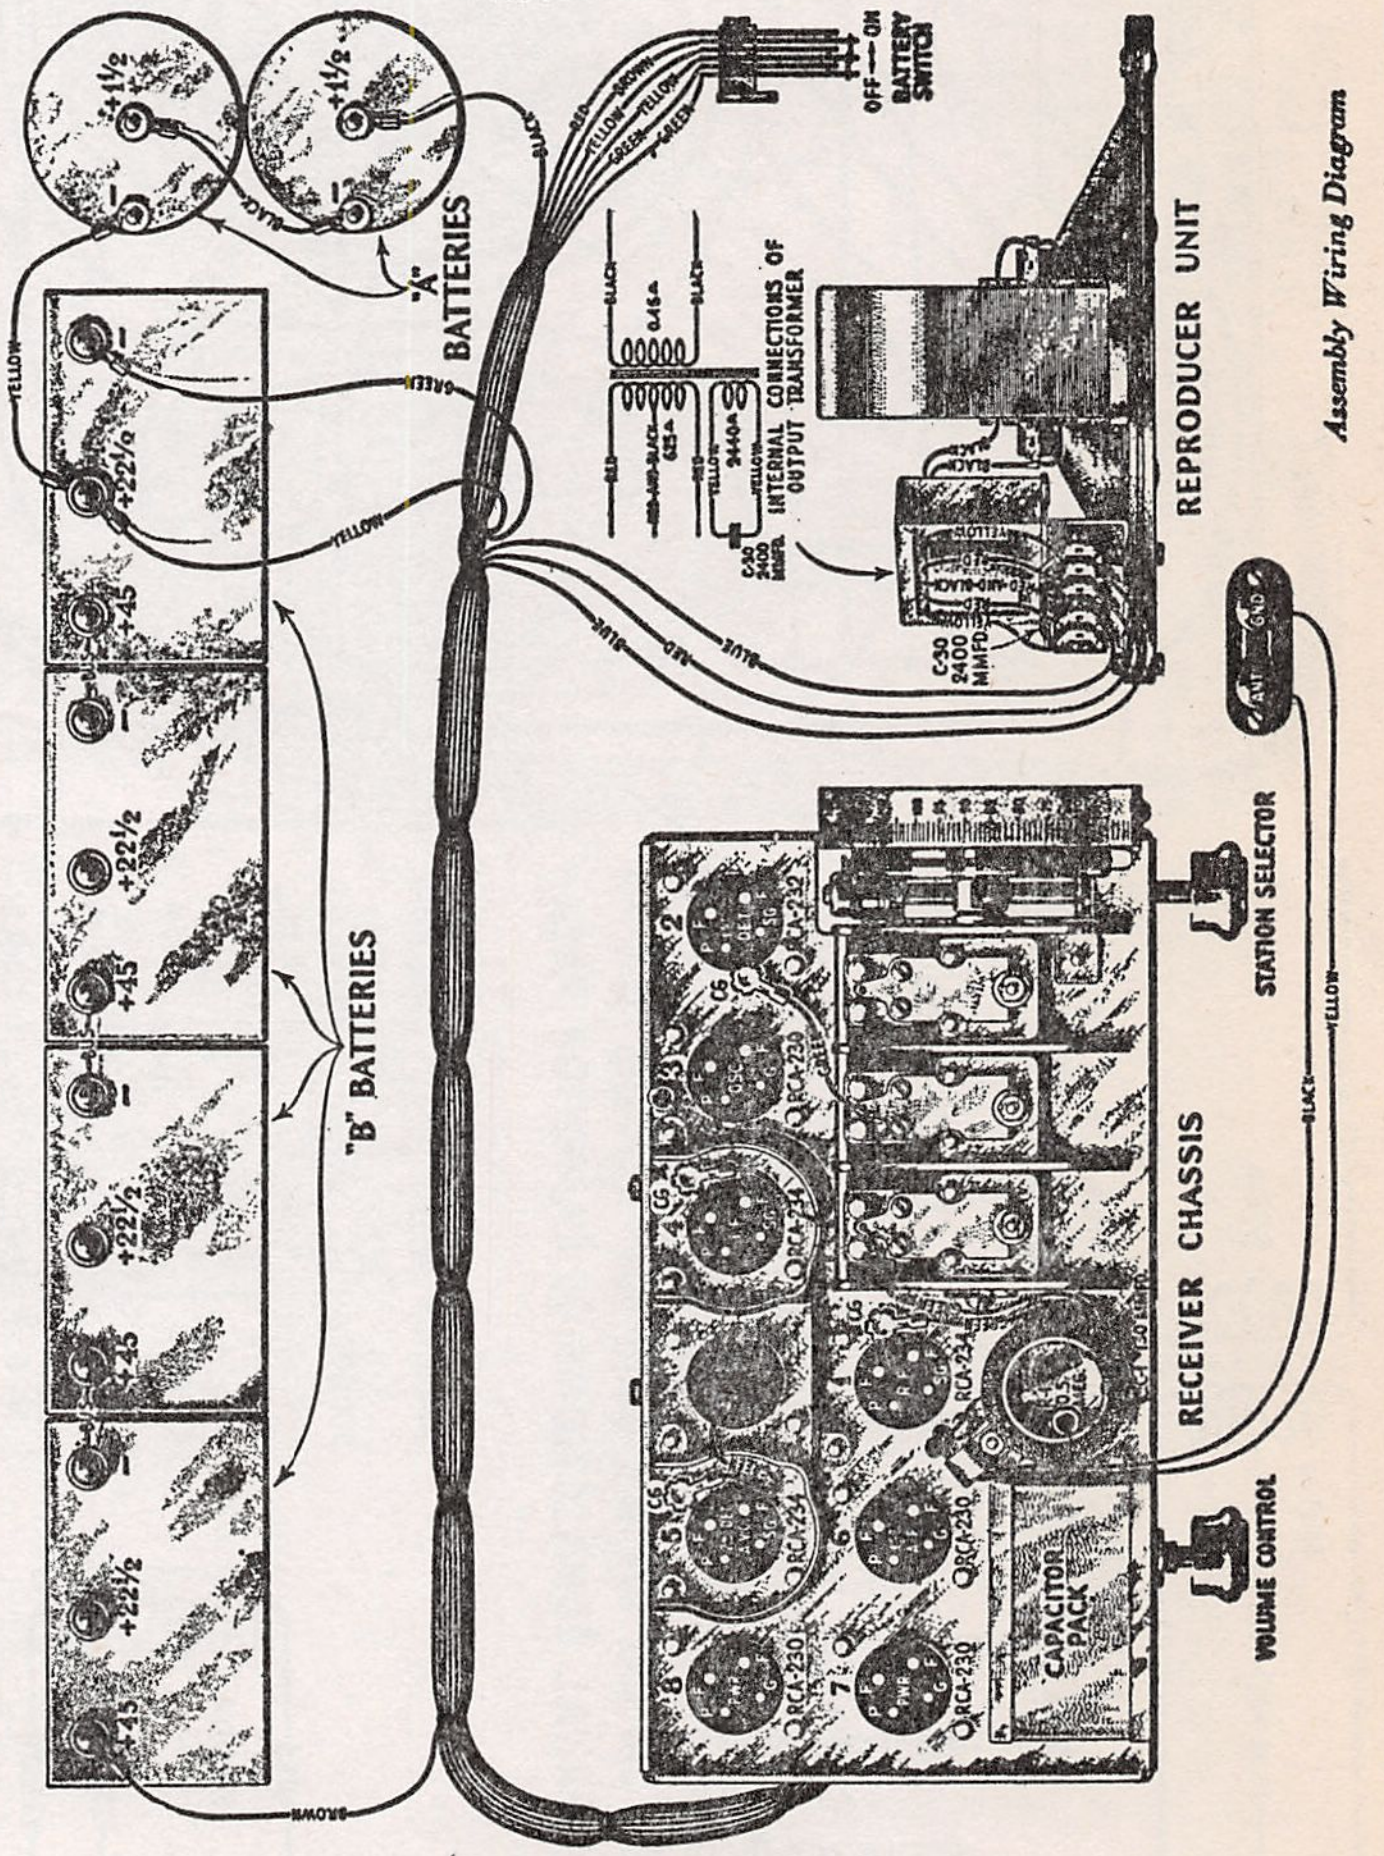
"A" BATTERIES
"B" BATTERIES
+1½
+22½
+45
OFF — ON BATTERY SWITCH
INTERNAL CONNECTIONS OF OUTPUT TRANSFORMER
REPRODUCER UNIT
C-30 2400 MMFD.
STATION SELECTOR
RECEIVER CHASSIS
VOLUME CONTROL
CAPACITOR PACK
RCA-230
RCA-234
RCA-232
YELLOW
GREEN
BLACK
BROWN
RED
BLUE

Assembly Wiring Diagram

MODEL P-31
Portable
Chassis-Notes

R. C. A. VICTOR CO., INC.

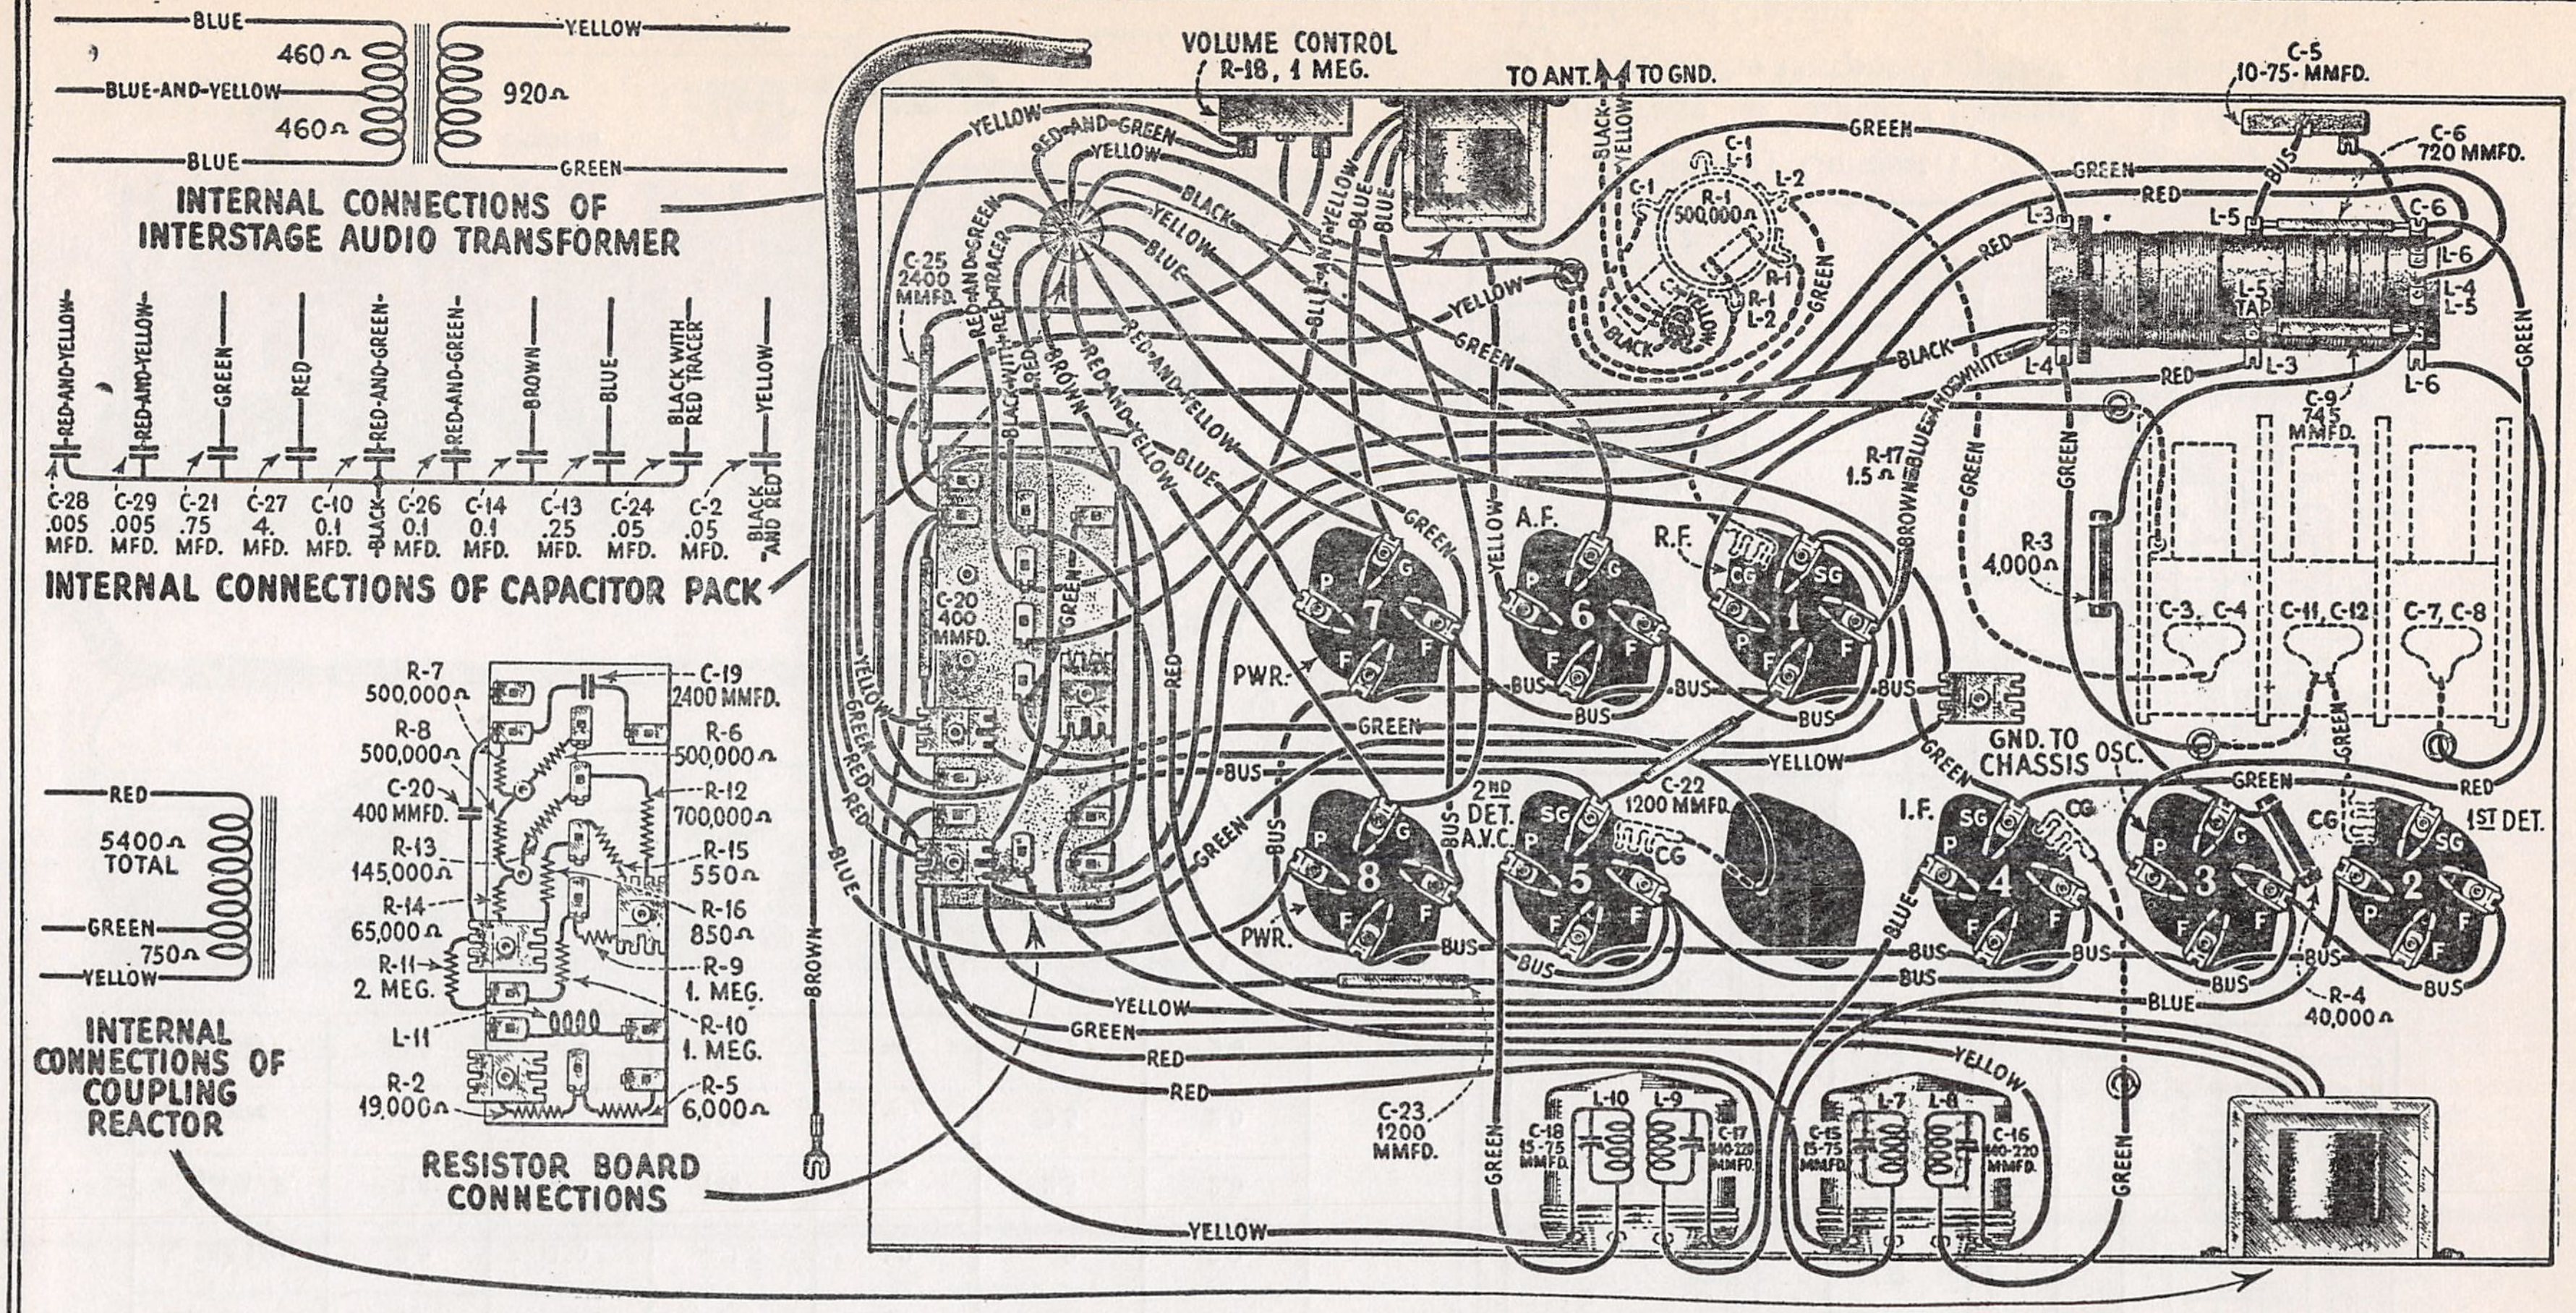
INTERNAL CONNECTIONS OF INTERSTAGE AUDIO TRANSFORMER
BLUE
BLUE-AND-YELLOW
BLUE
460Ω
460Ω
920Ω
YELLOW
GREEN
INTERNAL CONNECTIONS OF CAPACITOR PACK
C-28 .005 MFD.
C-29 .005 MFD.
C-21 .75 MFD.
C-27 4. MFD.
C-10 0.1 MFD.
C-26 0.1 MFD.
C-14 0.1 MFD.
C-13 .25 MFD.
C-24 .05 MFD.
C-2 .05 MFD.
RED-AND-YELLOW
RED-AND-YELLOW
GREEN
RED
BLACK
RED-AND-GREEN
RED-AND-GREEN
BROWN
BLUE
BLACK WITH RED TRACER
YELLOW
BLACK AND RED
RESISTOR BOARD CONNECTIONS
R-7 500,000Ω
R-8 500,000Ω
C-20 400 MMFD.
R-13 145,000Ω
R-14 65,000Ω
R-11 2. MEG.
L-11
R-2 19,000Ω
C-19 2400 MMFD.
R-6 500,000Ω
R-12 700,000Ω
R-15 550Ω
R-16 850Ω
R-9 1. MEG.
R-10 1. MEG.
R-5 6,000Ω
INTERNAL CONNECTIONS OF COUPLING REACTOR
RED
5400Ω TOTAL
GREEN
750Ω
YELLOW
VOLUME CONTROL R-18, 1 MEG.
TO ANT.
TO GND.
C-5 10-75-MMFD.
C-6 720 MMFD.
C-9 745 MMFD.
C-25 2400 MMFD.
C-20 400 MMFD.
C-22 1200 MMFD.
C-23 1200 MMFD.
C-18 15-75 MMFD.
C-17 140-220 MMFD.
C-15 15-75 MMFD.
C-16 140-220 MMFD.
R-1 500,000Ω
R-3 4,000Ω
R-4 40,000Ω
R-17 1.5Ω
L-1
L-2
L-3
L-4
L-5
L-5 TAP
L-6
L-7
L-8
L-9
L-10
C-1
C-3, C-4
C-11, C-12
C-7, C-8
GND. TO CHASSIS
OSC.
1ST DET.
I.F.
R.F.
A.F.
2ND DET. A.V.C.
PWR.
PWR.
1
2
3
4
5
6
7
8
SG
CG
P
G
F
BUS
GREEN
RED
YELLOW
BLUE
BLACK
BROWN
RED-AND-GREEN
RED-AND-YELLOW
BLACK-WITH-RED-TRACER
BLUE-AND-YELLOW
BLACK-AND-WHITE
BROWN-BLUE-AND-WHITE

PORTABLE
RADIOLA P-31

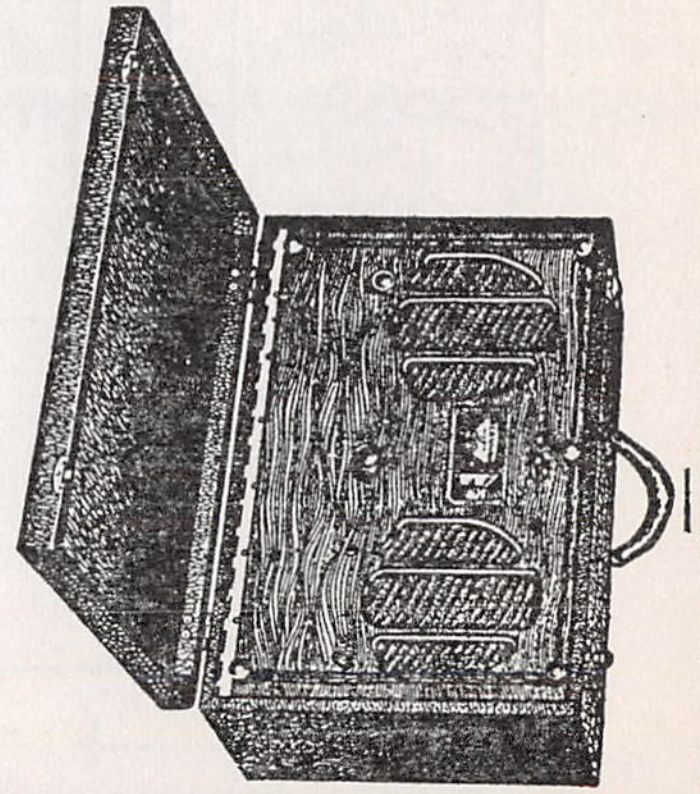

SERVICE DATA

The plate circuit of the first detector, the grid circuit of the I. F. amplifier, the plate circuit of the I. F. amplifier and the grid circuit of the second detector are all tuned to 175 K. C.

The Radiotron RCA-234 used as the second detector is also the automatic volume control. It is a diode detector, being a straight rectifier, a triode audio amplifier and a bias control automatic volume control, the signal current across a resistor giving the necessary voltage drop.

The signal voltage is applied to the filament and plate of the second detector, being rectified by straight diode action. The audio output is then applied to the control grid and filament by means of capacitor C-19. The tube then operates as an Audio Amplifier, the screen grid acting as the plate. Now examining the input circuit it will be noted that the signal current flows through resistors R-7 and R-8. The drop across resistor R-8 constitutes the control grid bias for the I. F. amplifier and the drop across R-7 and R-8 constitutes the control grid bias for the R. F. stage. A small initial bias—1.5 volts— is present on these tubes being the drop across the 65,000 ohm resistor of the voltage dividing system. Also the control grid bias for the second detector is obtained from the drop across the resistors R-10 and R-11, while R-9 and R-10 in parallel constitute a grid leak for its operation as an audio amplifier, C-19 being the coupling capacitor.

The output of the detector is then coupled by means of impedance coupling to the grid of the first A. F. amplifying tube. The grid leak is in the form of a potentiometer which is the volume control, its action controlling the audio voltage applied to the grid of the first A. F. tube. The output of this tube is then applied to the grids of the two Radiotrons RCA-230 which are connected in Push-Pull as a Class "B" amplifier. The output of this stage is then transformer coupled to the cone coil of the permanent magnet dynamic type loudspeaker. An extra winding, shunted by a capacitor, acts as a high frequency cut-off.

Service Data on the RCA Victor Portable Radiola P-31 is similar to that of other RCA Victor Super-Heterodyne receivers. Alignments of the R. F., Oscillator and I. F. stages should be made in a manner similar to that described in the Service Notes on the Automobile Radiola M-30. The location of the various line-up capacitors is the same as that of the M-30.

In making line-up adjustments on the P-31, there is one important feature that affects this operation, that should be remembered. That feature is the automatic volume control. Due to it being a combined A. V. C. and second detector, it cannot be removed from its socket or replaced with a dummy Radiotron.

R. F., OSCILLATOR AND I. F. ADJUSTMENTS

The R.F., Oscillator and I.F. Adjustments in Model P-31 are similar to those of the Automobile Radiola M-30. However, due to the A.V.C. tube also being the second detector, it cannot be removed while line-up adjustments are made. The proper manner in making this adjustment is as follows:

(a) Set the volume control of the receiver at maximum.

(b) Reduce the output of the external oscillator or its coupling to the receiver until a definite reduction in output meter reading is obtained. The oscillator output should again be reduced until but a slight indication in the output meter is obtained. At this low input the A.V.C action is not sufficiently flat to interfere with the proper alignment of the various circuits.

MODEL M-32
Installation Notes
Part 1

INTRODUCTION

This automobile radio receiver utilizes a highly-efficient six-tube Superheterodyne circuit, a remote control unit, and a newly-designed electrodynamic loudspeaker. Because of the inherently adverse conditions to which an instrument of this type is subjected, more attention should be given to its installation than is required by a modern radio for the home. Comparable performance, however, will be obtained if these instructions are carefully followed, both with respect to installation and operation.

Three new-type Radiotrons are used: (1) the "r-f exponential pentode" RCA-39, (2) the "duo-diode triode" RCA-85, and (3) the "a-f power pentode" RCA-89. These tubes incorporate the most recent engineering features and contribute materially to the outstanding performance of this receiver. An innovation in design is found in the use of Radiotron RCA-85 which combines automatic volume control with the normal function of the second detector in a single stage.

The receiver unit is extremely compact and is enclosed by a metallic shield case. The case may be quickly detached from its mounting bolts, thereby affording maximum convenience in replacing Radiotrons or other servicing. The remote control unit is arranged for clamping to the steering column and thus places the volume and tuning controls and the key-operated power switch readily accessible to the driver. The dial scale, located only slightly below the normal driving line of vision, is glare-proof illuminated and is calibrated to facilitate frequency selection.

High-quality reproduction is obtained by use of the new electrodynamic loudspeaker. This unit is protected against mechanical injury by enclosure in an acoustically correct and attractive metallic container equipped with tone equalizers.

Plate voltage supply for the Radiotrons is obtained from an economical "B" battery eliminator unit which is furnished as a part of the standard equipment. (A special companion model of this receiver without the eliminator and suitable for operation from external "B" batteries, is available if preferred. See Appendix I.) Equipment for the suppression of ignition interference is included with the instrument.

The use of a roof antenna in all installations is recommended. Satisfactory results in many cases, however, may be obtained with a plate-type antenna mounted beneath the floor of the car.

PART I—INSTALLATION

Equipment

A. Equipment Furnished:

1. Receiver Unit—complete with the following Radiotrons:
   - (a) Three RCA-39.
   - (b) One RCA-37.
   - (c) One RCA-85.
   - (d) One RCA-89.
2. Loudspeaker—with cable and connector plug, washer, and nuts (2).
3. "B" Battery Eliminator Unit.
4. Outfit Package—containing:
   - (a) Remote Control Unit—with bracket, felt, screws, and interconnecting cable.
   - (b) Switch Keys (2) and Fuse—packed in Instruction envelope (attached to control knob of item a).
   - (c) Flexible Shafts (2) and Set Screws (6).
   - (d) Antenna Coupling Connector Sleeve.
   - (e) Mounting Brackets (4) (for receiver and "B" battery eliminator units)—complete with screws (8), bolts (8), nuts (16), washers (8), and lockwashers (8).
   - (f) Insulation Bushing (for cable entrance slot in "B" battery eliminator unit).
   - (g) Wiring Clamp (for loudspeaker cable).
   - (h) Ignition Interference Suppression Equipment:
     - 6 Sparkplug type suppressors (additional obtainable from your Dealer).
     - 1 Distributor type suppressor.
     - 2 Capacitors.
   - (i) Instruction Book

B. Additional Equipment Required:

1. Antenna—
   - (a) Roof (built-in) type recommended.
   - (b) Plate (sub-mounted) type—alternative. A special plate antenna complete with mounting clamps, studs, and lead-in wire is obtainable from your Dealer, if required.

Location of Units

The arrangement of units shown in Figure 1 is applicable to the majority of automobiles. In certain installations, however, such locations may be considered impractical or not in accordance with personal preference, thereby necessitating a slight change in layout. The following suggestions will be of assistance in determining the most suitable position for each unit in any given case.

Receiver and Loudspeaker—In mounting these units, the adaptability of both to bulkhead (the partition between the engine and driving compartments) suspension should be determined initially. Consideration should be given to the space available and to the possibility of interference of the units with other equipment beneath the instrument panel or of the mounting bolts with apparatus on the engine side of the bulkhead.

Remote Control Unit—The control unit should be mounted on the steering column in a position chosen to afford greatest accessibility.

MODEL M-32
Installation Notes
Part 2

RCA-VICTOR CO., INC.

Antenna—

Roof Type: Best results will be obtained by use of a roof antenna. The majority of modern automobiles (closed body types only) are already equipped with such an antenna installed at the factory, the lead-in wire from which will usually be found coiled up beneath the instrument panel. Many other earlier cars employ a piece of metallic screen—for top material support—which, if ungrounded (not in electrical contact with the metallic frame), may be readily utilized as an antenna.

NOTE—The presence of a top support screen and of grounds in that screen may be determined without removing any portion of the top fabric. Consult your Dealer as to the proper procedure for making this test.

In order to use an ungrounded support screen, one corner only of the head-lining need be removed. A shielded lead should be first soldered to the screen and then carried down the front pillar post nearest the receiver unit. Its shield covering must be soldered or bonded to the car frame prior to replacement of the head lining.

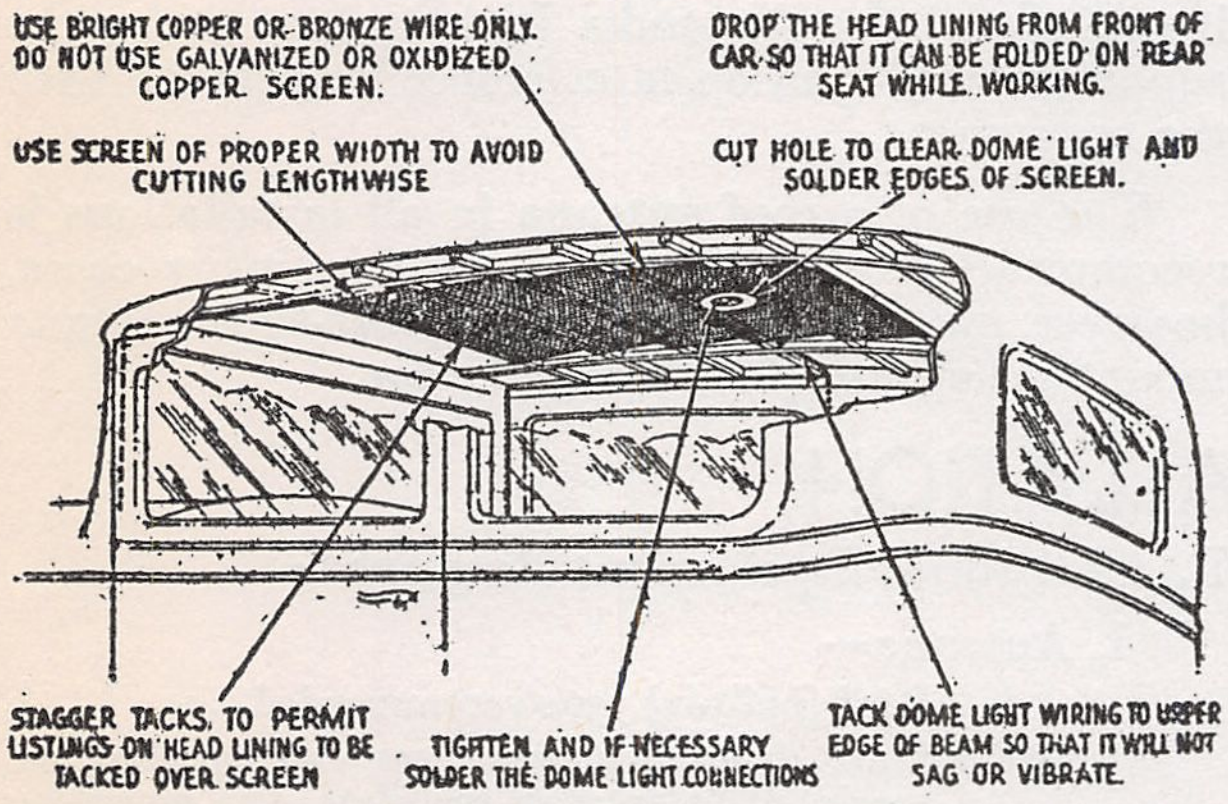
USE BRIGHT COPPER OR BRONZE WIRE ONLY. DO NOT USE GALVANIZED OR OXIDIZED COPPER SCREEN.
DROP THE HEAD LINING FROM FRONT OF CAR SO THAT IT CAN BE FOLDED ON REAR SEAT WHILE WORKING.
USE SCREEN OF PROPER WIDTH TO AVOID CUTTING LENGTHWISE
CUT HOLE TO CLEAR DOME LIGHT AND SOLDER EDGES OF SCREEN.
STAGGER TACKS TO PERMIT LISTINGS ON HEAD LINING TO BE TACKED OVER SCREEN
TIGHTEN AND IF NECESSARY SOLDER THE DOME LIGHT CONNECTIONS
TACK DOME LIGHT WIRING TO UPPER EDGE OF BEAM SO THAT IT WILL NOT SAG OR VIBRATE.

Figure 2

If the top support screen is grounded, or if no screen is present, it will be necessary to remove the entire head-lining (see Figure 2). In the former case, the screen may be insulated by removal of a strip several inches from all edges and from the dome light fixture. The possibility of subsequent shifting may be eliminated by tacking the screen to one of the ribs and by lacing the sides with cord. Where no support screen is used, a copper screen having a total area of at least ten square feet should be inserted. It should be located as far to the rear as possible and insulated from all metallic parts grounded to the frame of the car. The lead-in wire may then be attached as noted above and the head-lining replaced.

NOTE—Since a degree of skill—only acquired by experience—is necessary in removing and replacing the top fabric material, such work should be allotted to a competent "trim" man.

Plate Type: For those cases where the installation of a roof antenna is considered impractical or too costly, satisfactory reception from local or semi-distant powerful stations may be obtained by use of the special, plate-type antenna. This unit should be clamped to the frame of the chassis as far to the rear as possible. It is adjustable in length and may be mounted either lengthwise or crosswise of the chassis which position should be selected with due regard to the prevention of overcrowding. The plate must be placed as close to the ground as possible, but not below the lowest portion of the chassis at the desired location as sufficient road clearance must be retained. It is also important to avoid any position in which the plate will impede free motion of chassis parts such as springs, drive shaft, or axles in order to prevent antenna damage.

"B" Battery Eliminator—The "B" battery eliminator may be mounted at any convenient position in the car. It is preferable, however, to place this unit near the receiver and to use bulkhead suspension when sufficient space is available. To conserve mounting space, the eliminator may be fastened to the engine side of the bulkhead but, in such cases, it is important that the unit be located as far as possible from the exhaust manifold.

Mounting the Units

Details of mounting the various units are shown in Figure 1. The following procedures are recommended:

Receiver Unit—Assemble the mounting brackets (packed in receiver carton) to the rear of the shield case by means of the machine screws furnished. Support the unit in the proper location, allowing a clearance of at least one inch above the top surface to permit ready removal for servicing. On the proposed mounting surface mark the outlines of the four key-hole shaped, bracket slots. Then drill four $\frac{5}{16}$ inch holes, coinciding with the top of the slot markings, and insert the receiver mounting bolts loosely.

The front cover of the receiver unit case (held in place by four screws) must now be removed and all packing material—inserted for protection of the Radiotrons during shipment—withdrawn. Make certain that all tubes are in position and that the control grid clips are pressed down firmly over the respective dome terminals as shown by the diagram printed on the label affixed to the top of the case. Rotate the tuning control shaft until the plates of the variable capacitor are fully meshed and adjust both shafts to positions wherein the flatted portions face upward. Then replace the front cover and tighten the cover screws in place.

NOTE—In order to further examine the radio chassis, that unit may be withdrawn from the body of the case subsequent to the removal of three screws from the lower surface. The antenna lead and the associated shield pigtail, however, must first be passed through the case side—which operation may be facilitated by detaching the small rubber bushing secured in the entrance opening

Remote Control Unit—Detach the cover of the remote control unit by removing the push-on knobs, the knurled switch-retaining nut and the two front screws. Then insert the free end (without small coupling) of each flexible shaft housing through the rear bushings, making certain that each flexible shaft enters and extends the full depth in the drilled hole in the end of the corresponding control shaft. Tighten the control shaft set screws against the flexible shafts and finally secure the rear bushing set screws against each flexible shaft housing. The cover may now be replaced and the assembly rested in an upright position near the receiver unit.

Remove the set screws from the small couplings attached to the opposite ends of the flexible shafts and insert the shaft housings through the openings in the metallic cover plate encasing the tuning and volume control shafts of the receiver unit. ***These shafts must be so inserted as to be crossed in the final assembly as indicated by Figure 1.*** Make certain that the couplings are fully engaged over the receiver control shafts and then tighten the *cover plate screws* against each flexible shaft housing. Turn the control knobs on the remote control unit until the threaded openings for the *coupling set screws* (visible through slots in cover plate bushings) are at the top and line up with the flatted portions of the receiver unit control shafts. Finally, insert and tighten both coupling set screws.

Receiver and Remote Control Assembly—Hang the receiver unit in position over the mounting bolts and tighten those bolts in place. Then attach the remote control unit to the steering column by means of the clamp and screws provided. In order to prevent damage to the finish, the felt provided should first be wrapped around the column at the desired location and fastened with tape. After completing these operations, slowly rotate the Station Selector to each extremity of the dial, in turn, to insure use of the complete range.

NOTE—In some installations it will be found necessary or desirable to shorten the flexible shafts. This may be accomplished as follows: (1) Remove the shafts from the housings; (2) cut the housings to the proper length with a hack-saw; (3) re-insert the shafts in the housings as far as possible, so that the couplings at the receiver end of the shafts are in contact with the housings; (4) solder the protruding end of each shaft, to prevent unwinding when cut, at a point 27/32 inch beyond the end of its housing (*Important—A large soldering iron must be used to insure thorough penetration of the solder through the shaft for a distance of about one quarter inch on either side of the cutting point—use only non-corrosive soldering flux*); (5) cut each soldered shaft with a hack-saw or pliers at the point mentioned—namely, 27/32 inch (as accurately as possible) from the end of the housing; (6) remove all burrs from cut ends.

Loudspeaker—Place the loudspeaker with its cone opening against the proposed mounting surface and mark an outline of the rectangular container. Determine the exact center of this area by drawing in the diagonals and mark that position with a center-punch. Next drill a ½ inch hole at the center-punch mark and mount the loudspeaker by means of the threaded stud attached to its rear bracket. In hanging this unit, choose that position wherein the cable entrance opening is at the top.

Plate Antenna—The plate antenna, if used, should be bolted to the channel members of the automobile chassis by means of the clamps provided (see Figure 1 and notes under "Location of Units"). A shielded lead-in wire is provided with this assembly which should be brought into the driving compartment of the car through a ½ inch hole drilled in the toe-board if no other opening is available. The fully-shielded end of this wire is to be connected to the receiver unit antenna lead by means of the coupling type connector, as described under "Connections—Antenna to Receiver." Cut off the opposite (unshielded) end as required for connection to the plate and to eliminate excessive slack. The pig-tail extension from the end of the shield should be soldered or securely bonded to the frame of the car.

"B" Battery Eliminator—The "B" battery eliminator is arranged for mounting in a manner similar to that employed for the receiver unit. It is important that this machine be mounted so that the internal rotating shaft will be horizontal in assembly.

Connections

Refer to Figure 1 and make connections as follows:

Main Wiring Cable—The main wiring cable for connection between the independent units of this instrument (attached to the remote control unit during shipment) should be connected as indicated graphically. If necessary, make a loop in this cable to eliminate excessive slack and tape securely.

The power input lead contained in this cable (single shielded conductor with lug) must be connected electrically to the ungrounded side of the car storage battery, preferably at the battery terminal of the ammeter. The shield pigtail of the power input lead should be soldered or securely bonded to the instrument panel or frame of the car.

Electrical connections to the "B" battery eliminator unit are accomplished by means of the five-conductor group extending from the main wiring cable. The individual (color coded) leads are to be connected to the internal screw type terminals of the eliminator unit (rendered accessible by removal of the sheet metal case) as shown in Figure C. Appendix II. ***Prior to making these connections determine which side of the car storage battery is grounded. If the positive terminal is grounded, reverse the two leads—both from same end of dynamotor—connected to terminals 1 and 3 of filter,*** as indicated in Figure C.

NOTE—The insulation bushing (contained in Outfit Package) should first be slipped over the five leads and, when replacing the cover, secured in the cable entrance slot. The shield pigtail should be brought out through the bushing and fastened beneath the nearest cover mounting screw.

The *special* four prong plug attached to the main wiring cable must be inserted in the corresponding socket located on the left side of the receiver unit and the shield pigtail should be secured beneath a convenient screw in the lower surface of the container.

Loudspeaker to Receiver—The *standard* four-prong plug attached to the loudspeaker cable must be inserted in the remaining socket located on the left side of the receiver unit. The pigtail extending from the cable shield should be secured beneath that container screw to which the shield extension from the adjacent main wiring cable is attached.

Antenna to Receiver—The shielded lead-in wire extending from the roof or plate antenna should be cut to a length sufficient to facilitate attachment to the coupling type connector (secured to the receiver antenna lead) and to eliminate excessive slack. Refer to the detailed view of this coupling connector in Figure 1, which shows clearly the connections to be made as follows:

The small copper sleeve (packed in Outfit Package) should be slipped over the shield braid of the lead-in wire and the small internal insulated conductor passed through the female portion of the coupling type connector. Solder this conductor securely to the end of the internal eyelet. Then slip the sleeve forward to a position wherein the adjacent ends of the connector and the shield braid are covered. Finally solder the sleeve both to the coupling and to the shield and connect the assembly to that portion secured to the receiver antenna lead. Make certain that the shield pigtail extending from the antenna entrance bushing in the receiver container is securely fastened beneath one of the cover screws.

Suppression of Ignition Interference

(1) Disconnect all wires from the spark plugs. Fasten one spark plug suppressor to the top of each plug and re-attach the wires to the free ends of the suppressors.

(2) If the distributor is of the plug-in type, disconnect the center wire from the head. Plug the distributor suppressor into the distributor head and insert the wire in the free end of the suppressor.

For cap-type distributors, proceed as follows: Exchange the distributor suppressor at your Dealer's for one of a special type. Cut the wire leading from the distributor to the coil and screw the suppressor into the end attached to the distributor. Screw the other end of the wire (leading to the coil) into the opposite end of the suppressor.

(3) Clamp one of the by-pass capacitors against the generator frame. The screw holding the cut-out ordinarily may also be utilized for securing this unit. Connect the capacitor lead to the terminal on the generator side of the cut-out switch. (In some cases, interference will be reduced by connecting the capacitor lead to the opposite side of the cut-out. The most suitable position for this lead must be determined by trial.)

(4) Clamp the other by-pass capacitor securely to the instrument panel (if metallic) or to a convenient portion of the metal frame of the car, and connect the capacitor lead to the battery side of the ammeter (usually the terminal with only one lead). In certain cases, interference will be reduced by connecting the lead of this capacitor to the battery side of the ignition coil instead of to the ammeter.

(5) It may be found necessary to secure the loudspeaker cable beneath the grounding clamp (packed in Outfit Package) in order to minimize ignition interference. This clamp (as shown in Figure 1) may be attached conveniently to the left side of the receiver container.

PART II—OPERATION

The instrument should be operated as follows:

1. Insert the key in the lock on the Control Unit and turn it to the "on" position clockwise.
2. Set the Volume Control (left-hand knob) at or near the extreme clockwise position. Then turn the Station Selector (right-hand knob) in either direction until a station is heard. (Note—The dial scale is calibrated in channels to aid in station identification. Add one cipher to the scale marking to obtain the actual frequency in kilocycles.)
3. After receiving a signal, turn the Volume Control counter-clockwise until the volume is reduced to a low level. Now, re-adjust the Station Selector to the position midway between the points where the quality becomes poor or the signal disappears. ***This operation insures the best quality of reproduction.***
4. Finally, advance the Volume Control (clockwise) until the desired level is obtained. Except on weak signals, the automatic volume control will maintain the volume substantially at the latter level, thereby precluding further manual adjustments. (Fading of the signal may be experienced in extreme cases, as when passing under bridges or other metallic structures, since such structures almost completely shield the antenna.)
5. When through operating, turn the key to the "off" position, counter-clockwise. The instrument is then locked by removing the key.

RCA-VICTOR CO., INC.

APPENDIX I—"B" BATTERY OPERATED MODEL

As noted in the Introductory section, a special instrument is available for "B" battery operation. This receiver is identical to the standard model except that the "B" Battery Eliminator Unit is omitted and a specially designed interconnecting cable is used. For such operation, four 45 volt "B" batteries are required and may be obtained from your Dealer.

The following parts are furnished as standard equipment with the battery operated receiver:

1 Fuse (rated 0.50 amp.)
2 Fuse Leads (with clips)
1 Fuse Insulation Sleeve
3 Battery Jumper Wires

Certain body types, such as coupes or sedans, afford sufficient space to permit internal mounting of the batteries. In these cases, it is necessary only to clamp the units in a manner to prevent injury or grounding through undue motion while the car is in operation. In such installations, the batteries will probably be most conveniently stacked "end to end" as shown in Figure 3.

For other installations, a special battery box for external mounting (also available from your Dealer) will probably be found necessary or desirable. This box (as shown in Figure 1) may be located at any position under the floorboards of the vehicle except near the exhaust line or where interference with free-moving parts of the chassis will be encountered. If placed in close proximity to the exhaust pipe or muffler, the heat radiation therefrom will cause rapid deterioration of the batteries. The box is of suitable dimensions to accommodate the following types of "B" batteries:

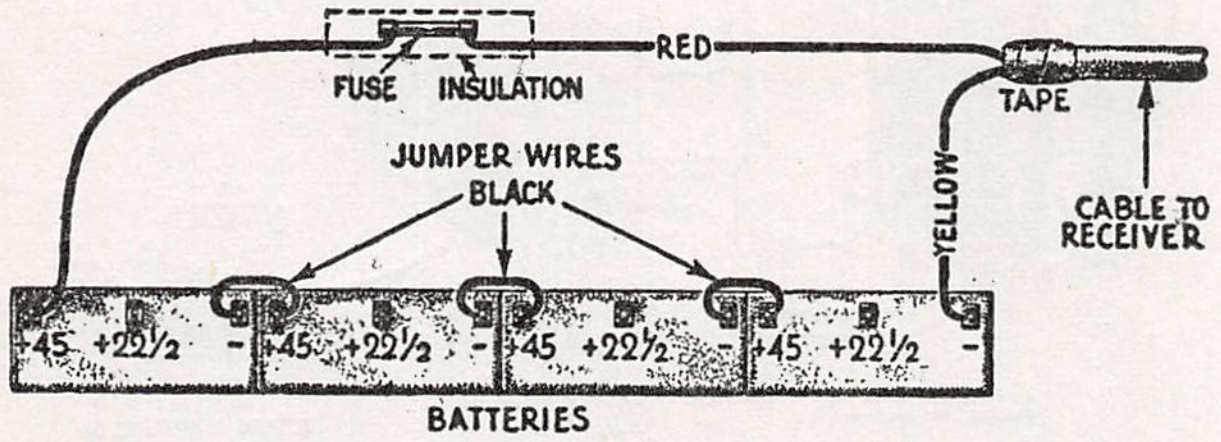

Figure 3

Eveready—No. 485, No. 772, No. 796
Burgess—No. 2305, No. 2308, D-308
General—"Flying Squad" V 30 DX

If the battery box is used, it may be mounted most conveniently by drilling the required four (4) three-eighths inch holes in the floorboard with the box cover serving as a template. Insert the four carriage bolts from above and fasten the box cover (with the hanger bolts inserted) in position beneath the floorboard with the nuts and lockwashers provided. Place the "B" batteries in the box and make all necessary internal connections (see Figure 4). With the fibre spacers in position above the batteries and the nuts on the hanger bolts unscrewed to the ends, lift the battery box into place, swing the hanger bolts into the case brackets and tighten all nuts. Make certain that both nuts are on each bolt and locked tightly. These operations, naturally, will be facilitated by placing the car on a lift.

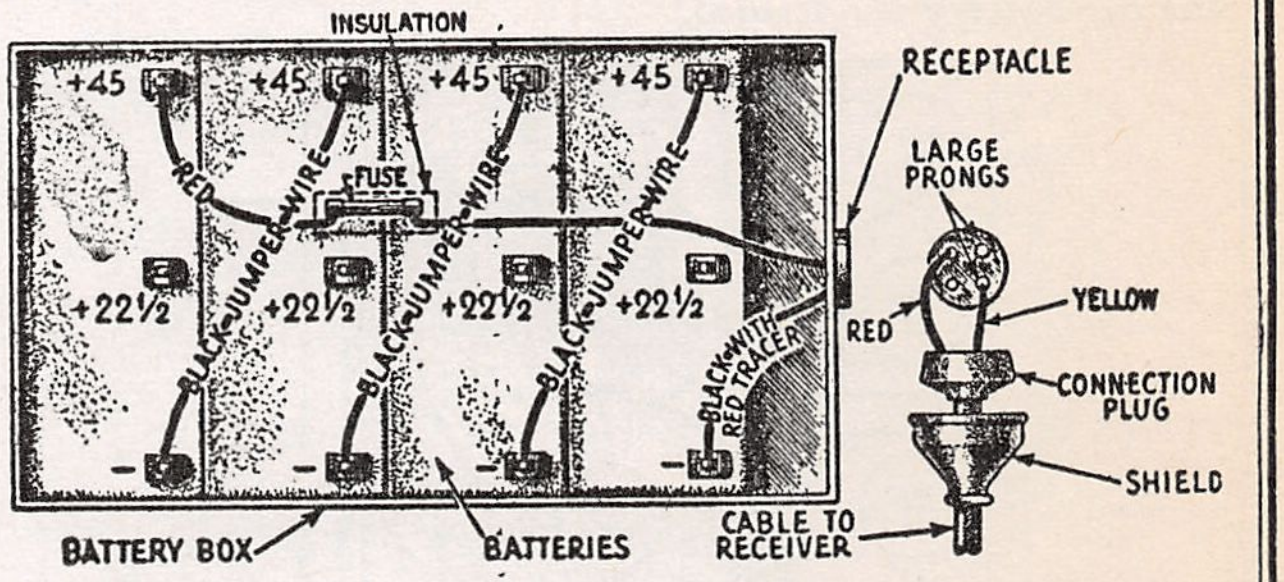

Figure 4

With the battery operated receiver, it will be noted that a plate circuit fuse must be employed. If the cable is to be connected directly to the batteries, the metal braid on the outside of the cable must be pushed back for a short distance in order to obtain leads of suitable length. As indicated in Figure 3, one fuse lead must be soldered to the cable wire and taped and the other connected to the end battery. The leads are equipped with clips (to permit ready replacement of the fuse) which in assembly are protected by an insulation sleeve. The end of the cable should be wrapped with tape for a short distance in order to prevent fraying and grounding to the battery terminals.

If the battery box is used, slip the rubber cover and the plug cap over the cable and solder the leads into the connection plug as indicated in Figure 4. Then fasten the cap to the plug, push the rubber cover forward and insert in the receptacle. One of the fuse leads must be connected to the proper terminal of the receptacle and the other to the end battery.

Worn out "B" batteries cause noisy and weak reception. Renew the batteries when they fail to give a reading of at least 35 volts per block as indicated by a high resistance voltmeter with the set turned "on."

RCA-VICTOR CO., INC.

APPENDIX II—SERVICE DATA

Electrical Specifications

Radiotrons Required
1 RCA-237, 3 RCA-239, 1 RCA-85, 1 RCA-89, Total—6

"A" Battery Consumption—Loudspeaker . . . 1.35 Amperes
Receiver . . . 2.15 Amperes
Converter . . . 3.0 Amperes

Plate Power Consumption	35 M. A.
Undistorted Output	1.25 Watts
Intermediate Frequency	175 K. C.
R. F. Line-up Frequency	1400 K. C.
Oscillator Line-Up Frequency	1400 Only

This six tube automobile receiver gives excellent performance in respect to sensitivity, selectivity and tone quality. When used with the converter unit, operation entirely from the car battery is obtained.

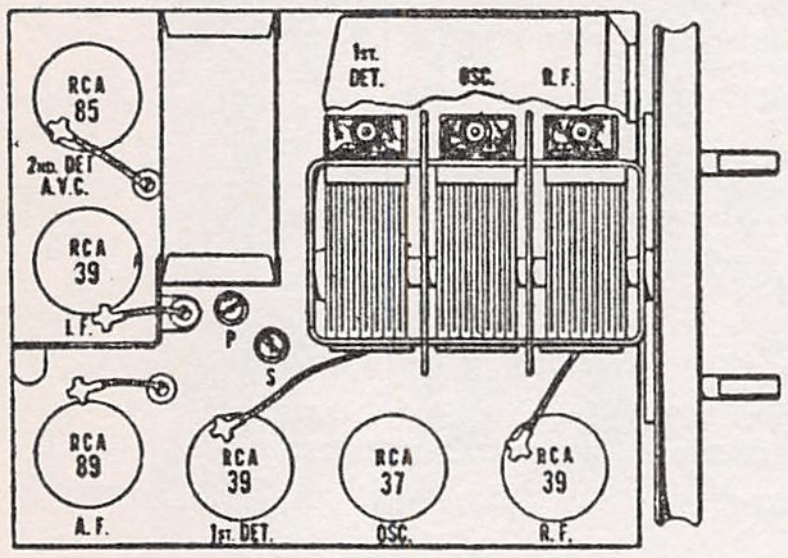

Figure A—Location of Radiotrons and Line-up Capacitors

Line-up Capacitor Adjustments

The receiver must be removed from its metal case to permit correct adjustment of the line-up capacitors. After being removed, a grounded metal plate must be provided for the receiver to rest upon, otherwise the adjustments will be found to be incorrect when the assembly is returned to its metal case. After removal from its case and placing upon the metal plate, proceed as follows:

I. F. Line-up Capacitor Adjustment—The I. F. Amplifier uses two transformers, one being of the untuned variety and one having each of its windings tuned by means of two adjustable capacitors. Figure A shows the location of these capacitors.

(a) Procure a modulated oscillator giving a signal at 175 K. C. and having its output adjustable. A non-metallic screwdriver such as Stock No. 7065 is necessary together with an output meter.

(b) Remove the receiver from its case, place it in operation and connect the output of the oscillator between the control grid and ground of the first detector. Remove the oscillator tube and connect the output meter—preferably a thermo-galvanometer—across the voice coil of the loudspeaker. Then with the volume control at maximum, reduce the oscillator output until a small indication is obtained. Unless this is done, the action of the A. V. C. will make it impossible to obtain correct adjustments.

(c) Adjust the secondary and then the primary of the I. F. transformer until a maximum deflection is obtained in the output meter. This is the correct adjustment.

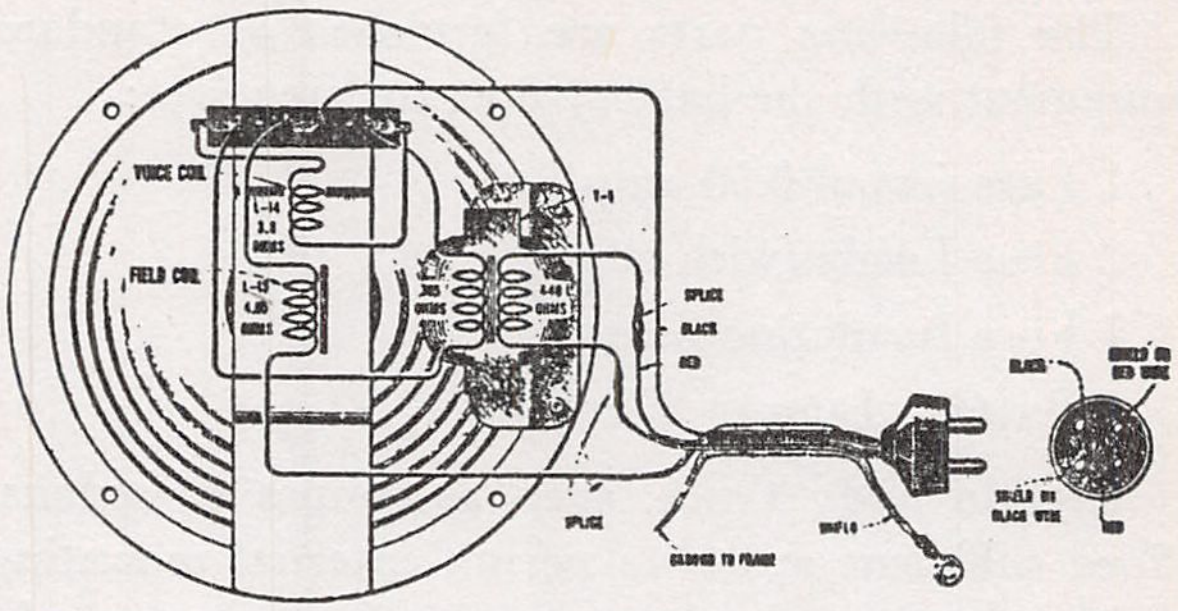

Figure B—Loudspeaker Wiring Diagram

R. F. Line-up Capacitor Adjustment—The R. F., 1st detector and oscillator stages are aligned at 1400 K. C. A modulated oscillator giving a signal at 1400 K. C. a socket wrench and an output meter are necessary for correctly making these adjustments.

(a) Remove the receiver from its metal case and place on a grounded metal plate. Connect the tuning control and place in operation. Connect the output of the oscillator between antenna and ground. Connect the output meter across the voice coil of the loudspeaker.

(b) Place the oscillator in operation at 1400 K. C. and adjust its output so that a small deflection is obtained when the receiver volume control is at maximum and the dial set at 1400. Then adjust the three line-up capacitors until a maximum deflection is obtained. This is done by means of a socket wrench.

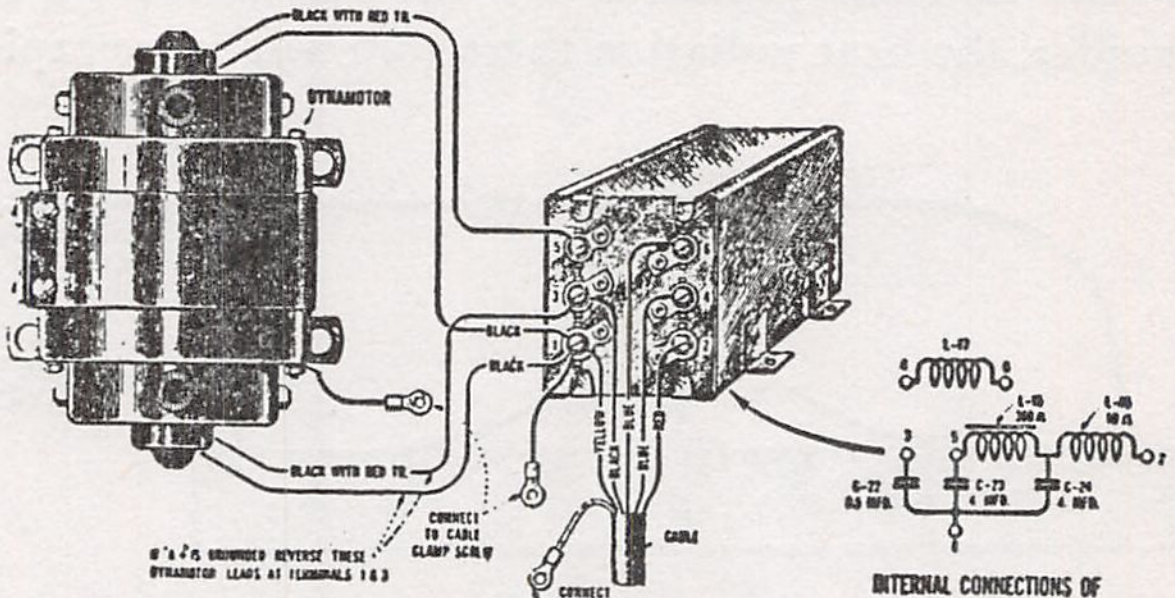

Figure C—Plate Supply Unit Wiring

RADIOTRON SOCKET VOLTAGES

Radiotron No.	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Filament or Heater Volts
1. R.F. RCA-39	0.9	71	177	4.5	5.2
2. 1st Det. RCA-39	6.0	67	172	1.35	5.2
3. Osc. RCA-37	—	—	72	5.5	5.2
4. I.F. RCA-39	0.9	71	177	4.5	5.2
5. 2nd Det. and A.V.C. RCA-85	—	—	175	4.5	5.2
6. PWR. RCA-89	18	178	160	18.0	5.2

Voltages are those at which Radiotrons are operating and with no signal impressed on input

OTHER IMPORTANT VOLTAGES

Battery Voltage	6.0 Volts
Input to Dynamotor	5.75 Volts
Battery Drain	.5 Amperes
Output from Dynamotor	178 V at 34.5 M.A.
Loudspeaker Field Drain	1.35 Amperes

MODEL M-32
Chassis Wiring

RCA-VICTOR CO., INC.

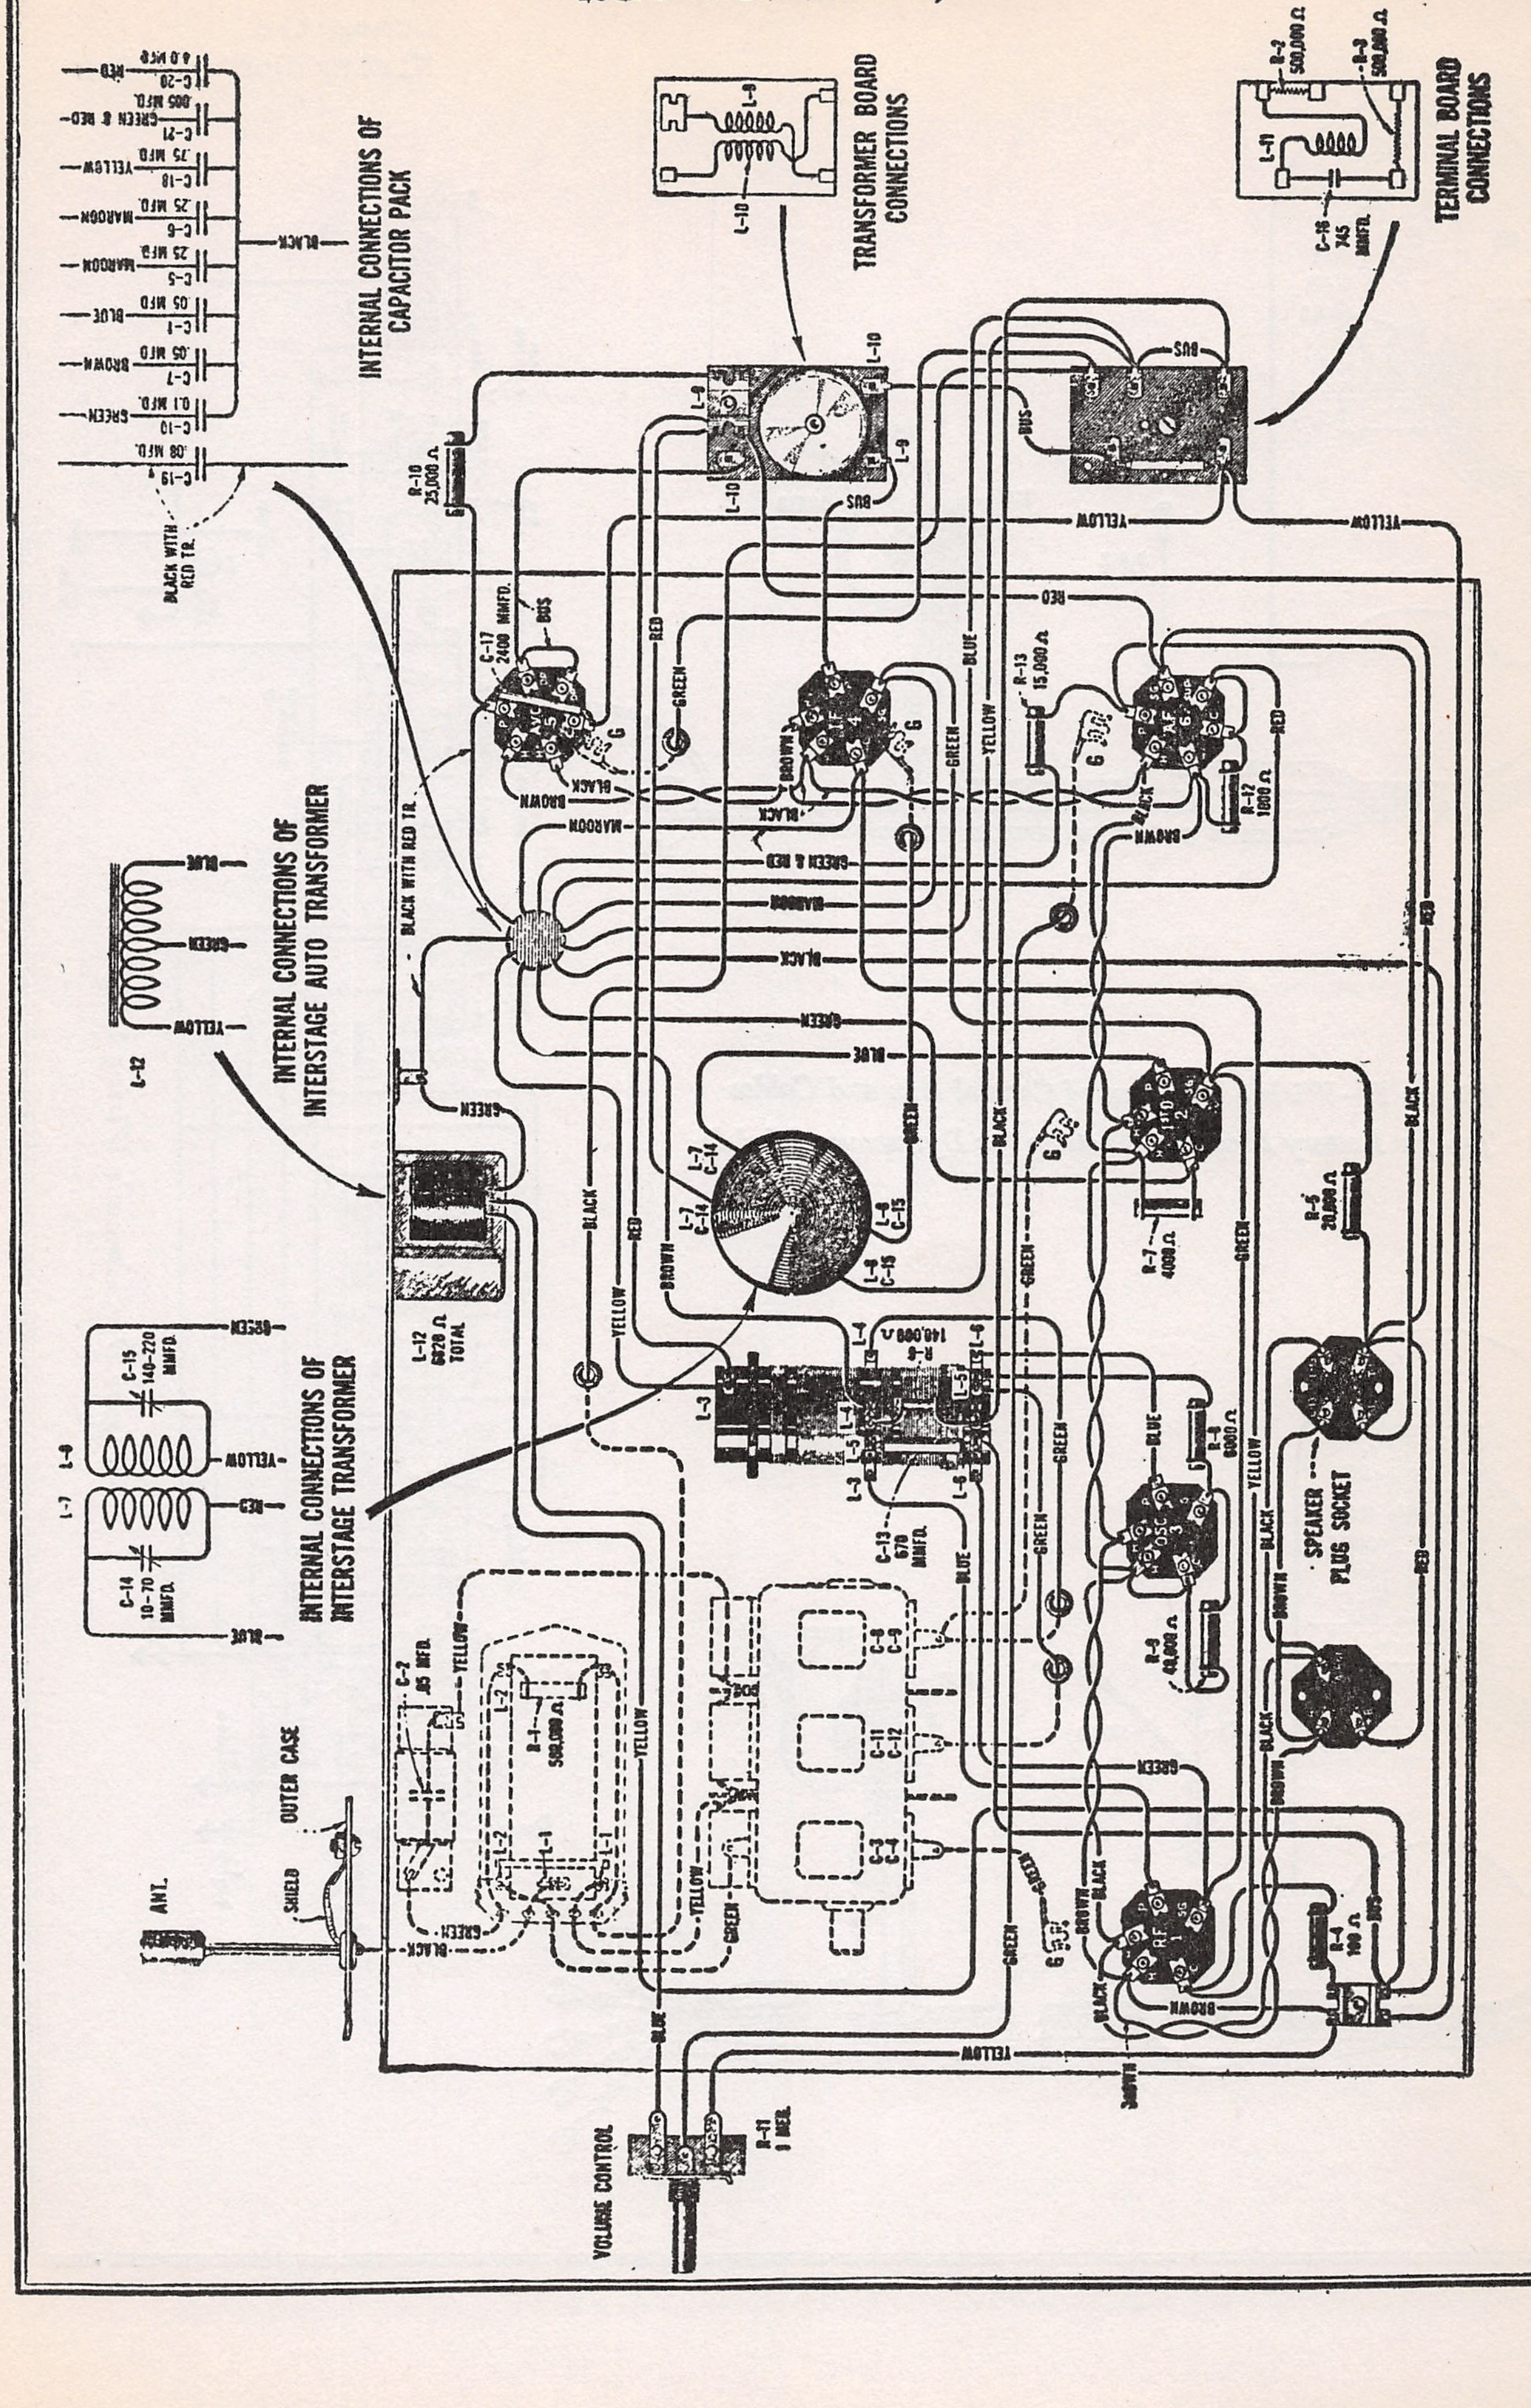
INTERNAL CONNECTIONS OF CAPACITOR PACK
C-20 8.0 MFD. RED
C-21 .005 MFD. GREEN & RED
C-18 .75 MFD. YELLOW
C-6 .25 MFD. MAROON
C-5 .25 MFD. MAROON
C-1 .50 MFD. BLUE
C-7 .05 MFD. BROWN
C-10 0.1 MFD. GREEN
C-19 .08 MFD.
BLACK
BLACK WITH RED TR.
TRANSFORMER BOARD CONNECTIONS
L-9
L-10
TERMINAL BOARD CONNECTIONS
R-2 500,000 Ω
R-3 500,000 Ω
L-11
C-16 745 MMFD.
BUS
R-10 25,000 Ω
C-17 2400 MMFD.
AVC
I.F.
AF
R-13 15,000 Ω
R-12 1800 Ω
INTERNAL CONNECTIONS OF INTERSTAGE AUTO TRANSFORMER
L-12
L-12 6820 Ω TOTAL
INTERNAL CONNECTIONS OF INTERSTAGE TRANSFORMER
L-7
L-8
C-14 10-70 MMFD.
C-15 140-220 MMFD.
L-7 C-14
L-8 C-15
R-7 4000 Ω
R-5 20,000 Ω
R-6 140,000 Ω
L-3
L-4
L-5
L-6
C-13 670 MMFD.
R-8 6000 Ω
OSC
R-9 40,000 Ω
SPEAKER PLUG SOCKET
C-2 .05 MFD.
R-1 500,000 Ω
L-1
L-2
C-8 C-9
C-11 C-12
C-3 C-4
R.F.
R-4 100 Ω
ANT.
SHIELD
OUTER CASE
VOLUME CONTROL
R-11 1 MEG.
RED
GREEN
BLUE
YELLOW
BLACK
BROWN
MAROON
GREEN & RED
BUS
G

Figure E—Receiver Wiring Diagram

RCA-VICTOR CO., INC.

MODEL M-32
Schematic
Wiring Control Box

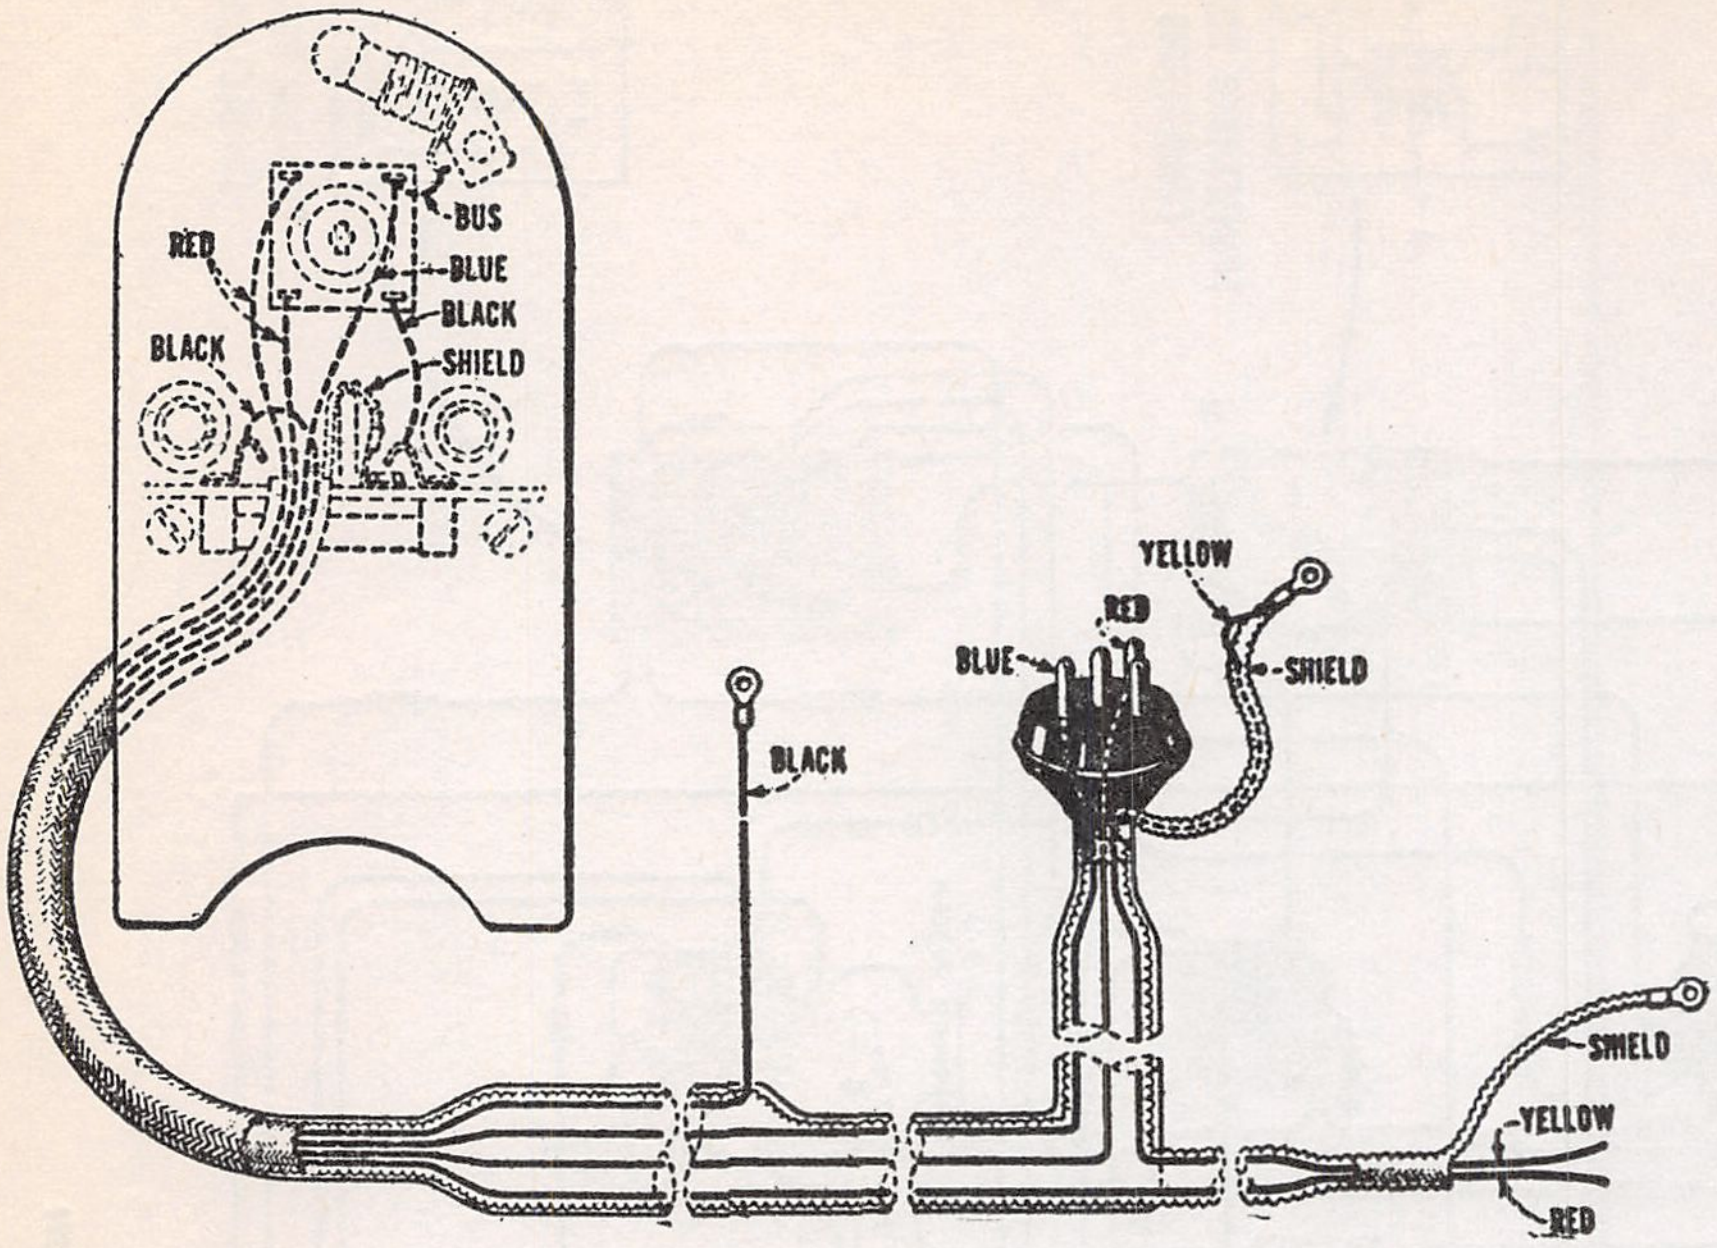
BUS
RED
BLUE
BLACK
BLACK
SHIELD
YELLOW
RED
BLUE
SHIELD
BLACK
SHIELD
YELLOW
RED

Figure F—Wiring Diagram of Control Box and Cables (top for Battery Model and bottom for Dynamotor Model)

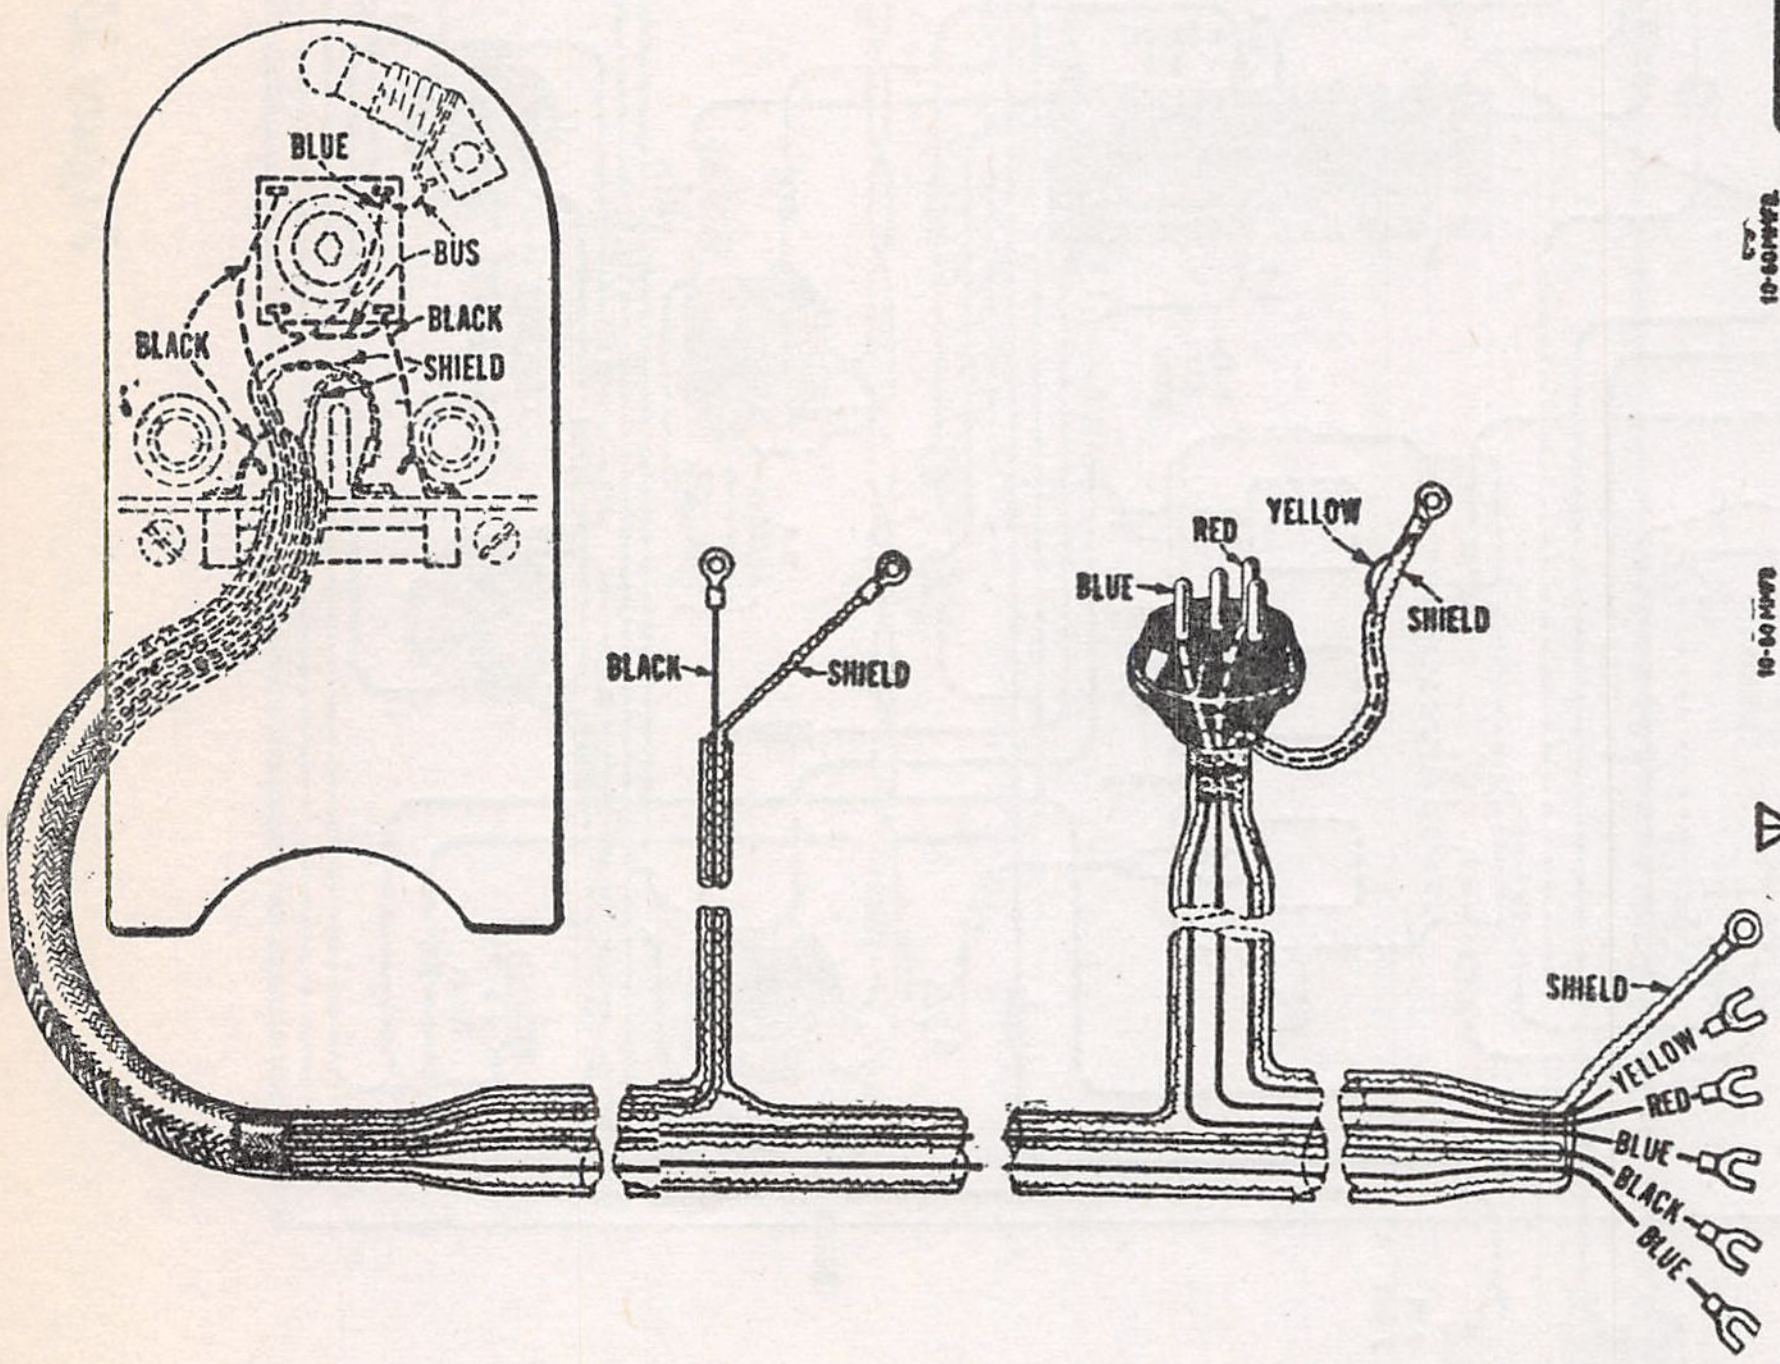
BLUE
BUS
BLACK
BLACK
SHIELD
BLACK
SHIELD
RED
YELLOW
BLUE
SHIELD
SHIELD
YELLOW
RED
BLUE
BLACK
BLUE

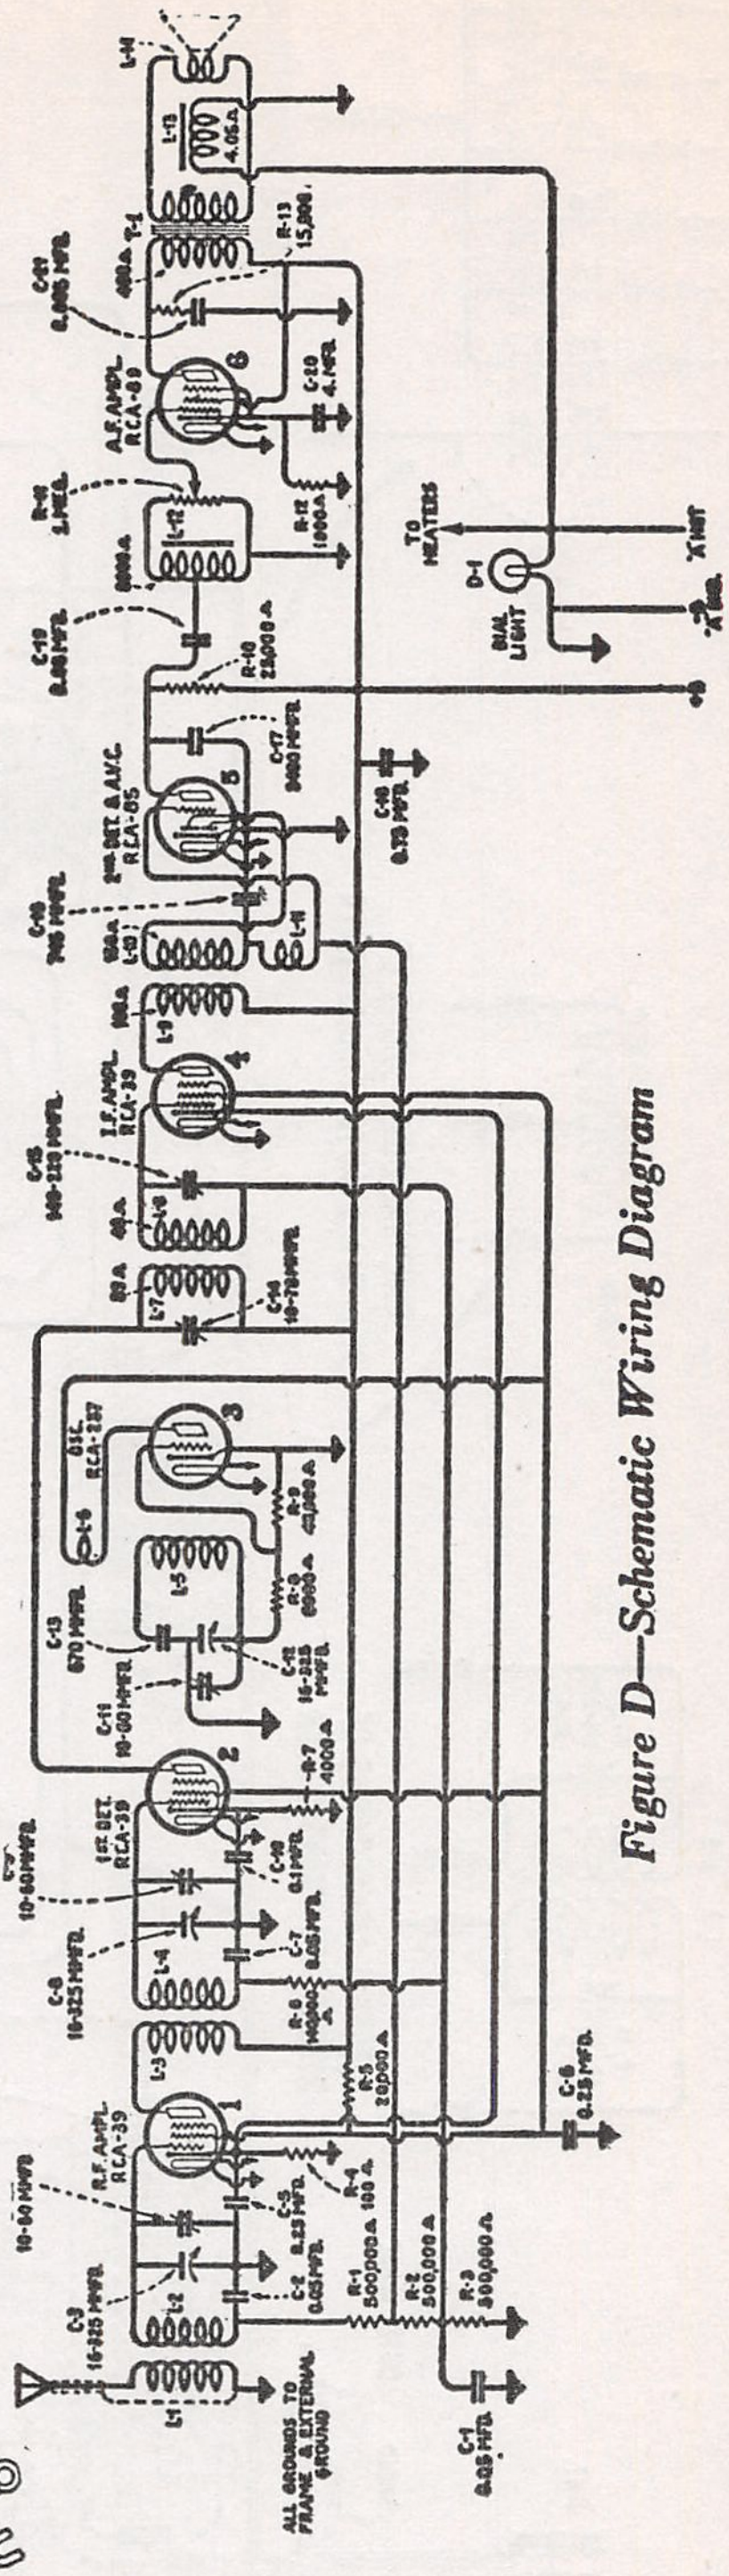
A.F. AMPL. RCA-89
2ND DET. & A.V.C. RCA-85
I.F. AMPL. RCA-39
OSC. RCA-237
1ST DET. RCA-39
R.F. AMPL. RCA-39
TO HEATERS
DIAL LIGHT
ALL GROUNDS TO FRAME & EXTERNAL GROUND

Figure D—Schematic Wiring Diagram

MODEL M-32
Parts List

RCA-VICTOR CO., INC.

REPLACEMENT PARTS

(Replacement Parts May be Purchased from Authorized Dealers and Distributors Only)

Stock No.	DESCRIPTION	List Price
	RECEIVER ASSEMBLIES	
2734	Capacitor—745 mmfd.—Package of 5	$2.20
2747	Contact cap—Package of 5	.50
2749	Capacitor—2,400 mmfd.	1.50
2816	Resistor — 1,000 ohm — Carbon type — ½ watt—Package of 5	2.50
3264	Resistor—25,000 ohms—Carbon type—½ watt—Package of 5	2.00
3442	Resistor—100 ohms—Carbon type—¼ watt —Package of 5	1.00
3443	Resistor—140 ohms—Carbon type—¼ watt —Package of 5	1.00
3447	Coil—Automatic volume control coupling coil.	.66
3448	Cord—3 gang tuning capacitor drive cord	.50
3454	Scale—Dial Scale	.54
6114	Resistor — 20,000 ohms — Carbon type — 1 watt—Package of 5	2.00
6143	Resistor—40,000 ohms—Carbon type—¼ watt—Package of 5	2.00
6186	Resistor—500,000 ohms—Carbon type—¼ watt—Package of 5	2.00
6192	Spring—3 gang tuning capacitor drive cord tension spring—Package of 10	.50
6241	Resistor—140,000 ohms—Carbon type—¼ watt—Package of 5	2.00
6243	Resistor — 6,000 ohms — Carbon type — ¼ watt—Package of 5	2.00
6250	Resistor — 4,000 ohms — Carbon type — ½ watt—Package of 5	2.00
6300	Socket—4 contact Radiotron socket	.55
6317	Capacitor—0.05 mfd. capacitor	.70
6320	Capacitor—670 mmfd.—Oscillator series capacitor—Package of 5	2.50
6358	Socket—3 contact socket	.38
6359	Shield—Radiotron tube shield	.36
6360	Transformer—First intermediate frequency transformer	2.14
6361	Transformer — Second intermediate frequency transformer	2.28
6362	Shaft—Tuning capacitor drive shaft with two "C" washers	.40
6363	Volume control-Complete with mounting nut.	1.38
6365	Coil—Detector and oscillator coil	2.32
6366	Coil—R. F. coil assembly	1.60
7484	Socket—UY type Radiotron socket	.65
7485	Socket—Radiotron 6 contact socket	.70
7545	Transformer—Interstage auto transformer	2.48
7546	Capacitor pack—Comprising one 0.08 mfd., one 0.1 mfd., two 0.05 mfd., two 0.25 mfd., one 0.75 mfd., one 0.005 mfd., and one 4.0 mfd. capacitors in metal container	3.58
7547	Drum—For 3 gang tuning capacitor	.70
7548	Capacitor—3 gang variable tuning capacitor assembly	3.50
	CONTROL BOX ASSEMBLIES	
3444	Socket—Dial lamp socket	.38
3445	Shaft—Volume control shaft with "C" washer.	.48
3446	Shaft—Station selector shaft with "C" washer.	.38
3454	Scale—Dial scale	.54
6158	Nut—Knurled nut for lock switch—Pkg. of 10.	.50
G5021	Knob—Station selector knob or volume control knob—Package of 5	1.50
G5022	Label—Metal trade mark label—Pkg. of 5.	.75
6164	Key—For lock switch—Package of 10	.50
6357	Switch—Lock switch complete	1.46
7543	Shaft—Volume control or station selector flexible shaft—Approximately 39″ long	1.92
7562	Shaft—Volume control or station selector flexible shaft—Approximately 51″ long	1.62
7563	Shaft—Flexible shaft—Volume control or station selector shaft—Approx. 27″ long	1.94
G7842	Cover—Control box cover assembly comprising cover, cover mounting screws, mounting clamp and clamp mounting screws	.76
	ANTENNA ASSEMBLY	
3465	Cable—Antenna lead-in shielded cable	$0.35
3466	Connector—Antenna lead-in connector	.60
3491	Washer—Rubber insulating washer—Used with insulator No. 6131—Package of 4	.25
6129	Staple—Insulated staple—Package of 100	.75
6130	Screw and nut—U bracket set screw—¼—16 x 1—Complete with lock nut—Pkg. of 10.	.50
6131	Insulator—Insulator bushing for No. 7420—Package of 10	.70
6381	Cable—Shielded antenna cable—For use with antenna plate	2.94
7419	Bracket—U bracket for mounting antenna plates—Package of 2	1.60
7420	Stud—Antenna plate stud—¼—16 x 8″—Complete with 5 mounting nuts—Pkg. of 5.	1.90
8819	Plate—Single antenna plate	1.75
	MISCELLANEOUS PARTS	
6148	Fuse—10 amperes—Package of 5	.50
6151	Suppressor—Spark plug suppressor	.65
6152	Suppressor—Distributor suppressor	.65
6169	Felt—Felt strip for steering column - Pk. of 10.	.50
7065	Screwdriver—Non metallic Screwdriver—For line-up adjustments	1.10
7429	Capacitor—0.625 mfd. capacitor in metal casing with mounting bracket	2.20
7553	Cable—Inter-connecting cable complete with male section of connector plug—For eliminator operation	2.66
7561	Cable—Inter-connecting cable complete with male section of connector plug—For battery operation	2.12
	REPRODUCER ASSEMBLIES	
6182	Terminal board—Reproducer terminal board with 3 terminals—Package of 5	.50
6364	Transformer—Output transformer	2.00
8702	Ring—Cone retaining ring	.80
8961	Coil assembly—Comprising field coil, magnet and cone support	3.34
8962	Cone—Reproducer cone	1.12
8963	Bracket — Reproducer mounting bracket complete with washer and nuts	.98
8964	Housing—Reproducer housing	2.08
8965	Screen—Dust screen	.40
	BATTERY BOX ASSEMBLY	
2968	Receptacle—Four prong receptacle complete.	.50
6122	Clamp—Cable clamp—Package of 15	.50
6123	Plug—Four prong male plug	.50
6124	Cap—Plug cover rubber cap for #6123-Pk. of 5.	1.50
6125	Fuse—¼ ampere—Package of 5	.50
6126	Clip—Fuse clip—Package of 12	.50
6127	Bolt—Carriage bolt for mounting top of box to car—¼—18 x 1¼″—Complete with lock nut—Package of 5	.50
7418	Bolt—Hanger bolt ¼—18 x 9½″—Complete with two lock nuts—Package of 5	.50
8817	Box body assembly—Comprising bottom plate, 2 side plates, 2 bottom strips and receptacle—Assembled	3.45
8818	Box cover assembly—Comprising cover plate, 2 strips and 2 rubber strips—Assembled	1.70
8820	Plate and strip assembly—Carboard plate and strip assembly comprising six strips and one plate—Package of 5 sets	.75
	"B" ELIMINATOR ASSEMBLIES	
3473	Brushes—One set of 2—For low voltage end of dynamotor	1.04
3474	Brushes—One set of 2—For high voltage end of dynamotor	.82
7554	Filter pack—Comprising one 0.5 mfd., two 4.0 mfd. capacitors, one reactor and two choke coils	4.87
7555	Dynamotor complete	23.52

MODEL Radiola 48
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes out of sockets and AC plug removed from power supply line.
Volume Control maximum unless otherwise stated.

From Chassis To	Correct	Incorrect
Aerial (V.C. Min)	50,000 ohms	
Aerial (V.C. Max)	30 ohms	
1 R-F Control Grid	3 ohms	TC- Cg-Y
1 R-F Heater	730 ohms	BC- D H-Y
1 R-F Cathode	120 ohms	BC- 1 rf K-Y BC- 3 rf K-Y
1 R-F Screen Grid (V.C.Min)	15,950 ohms	BC- 1 rf Sg-1 rf K
1 R-F Plate	13,917 ohms	BC- 1 rf P- 1 rf K BC- 3 rf P- 3 rf K FC-Y
2 R-F Control Grid	3 ohms	TC-Cg-Y
2 R-F Cathode	120 ohms	See Ir-F Cathode
2 R-F Screen Grid	16,950 ohms	BC- 1 rf Sg- 1 rf K BC- 3 rf Sg- 3 rf K
2 R-F Plate	13,917 ohms	See 1 R-F Plate
3 R-F Control Grid	3 ohms	TC-Cg-Y
3 R-F Cathode	170 ohms	See 1 R-F Cathode Rf chk- 3 rf K
3 R-F Screen Grid	16,975 ohms	See 2 rf Sg.
3 R-F Plate	13,892 ohms	See 1 R-F Plate
Detector Control Grid	3 ohms	TC-Cg-Y
Detector Cathode	17,000 ohms	BC- D K-Y
Detector Screen Grid	210,627 ohms	BC- D Sg-Y See 2 R-F Screen Grid FC-Y (1. mfd)
Detector Plate	24,707 ohms	BC-D P- D K (See OutputP.) FC-Y (1.5 mfd)
Detector Plate to '80 Fil.	7,680 ohms	FC-Y (1.5 mfd)
Output Tube Control Grid	430,000 ohms	BLC- Af chk
Output Tube Control Grid	430,000 ohms	BLC- Af chk
Output Tube Cg to Cg	860,000 ohms	
Output Tube Plate (2 tubes)	17,492 ohms	FC-Y (2. mfd) FC-Y (.1 mfd)
Output Tube Plate to Plate	930 ohms	BC- Plate to Plate
'80 Plate	1,895 ohms	
'80 Plate to Plate	530 ohms	
Field Coil	1,330 ohms	
Output Transformer Secondary	.2 ohm	Disconnect voice coil
Voice coil only	2.5 ohms	

Between 1 rf P- 2 rf P	80 ohms	Rf plate windings
2 rf P- 3 rf P	105 ohms	Rf p wdg and chk
D P- Output P	645 ohms	Opt wdg and D P chk

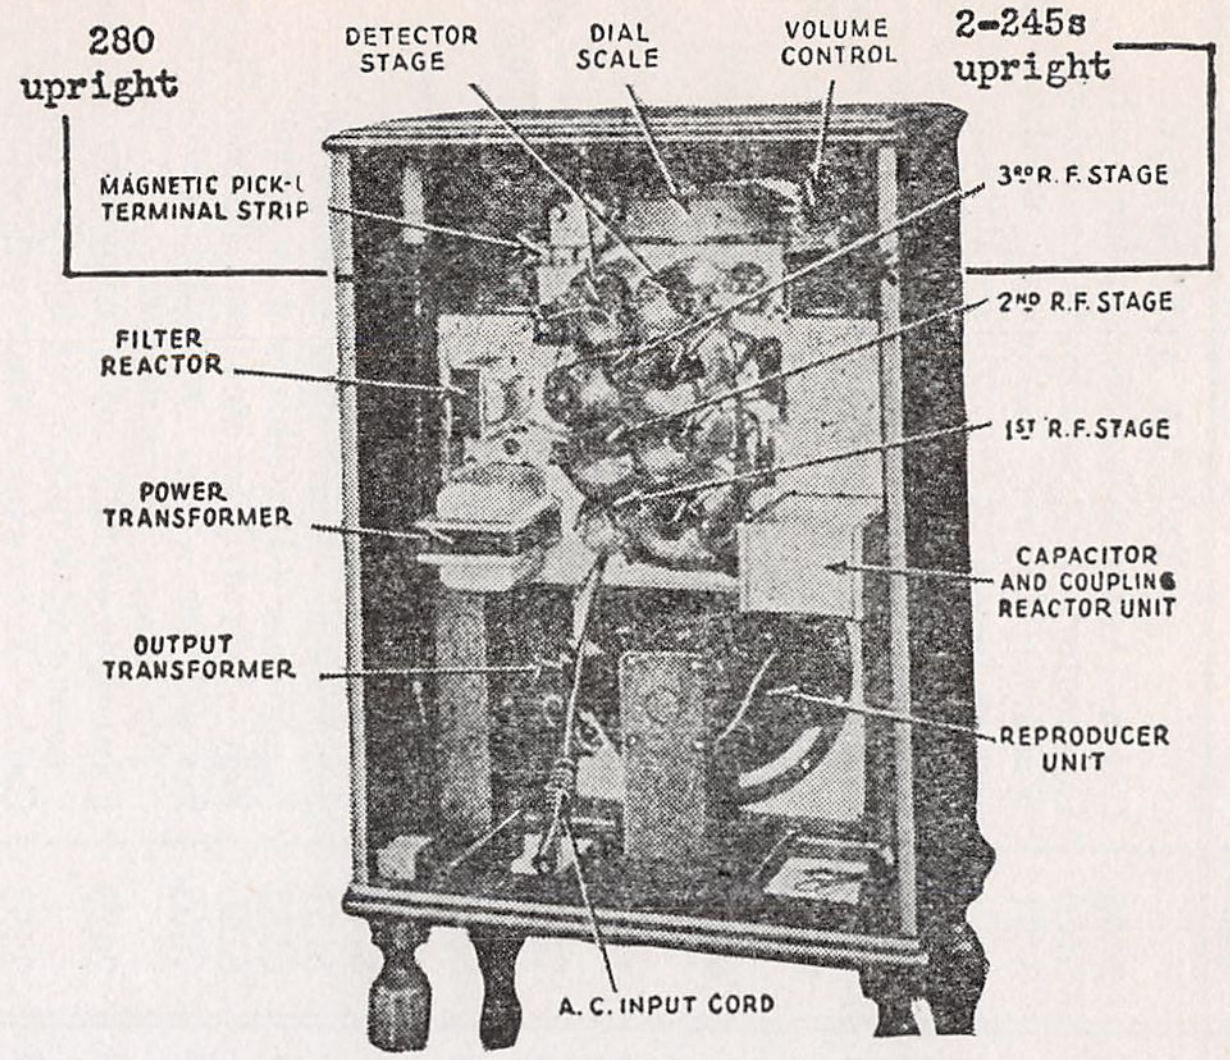
280
upright
DETECTOR STAGE
DIAL SCALE
VOLUME CONTROL
2-245s
upright
MAGNETIC PICK-UP TERMINAL STRIP
3RD R.F. STAGE
FILTER REACTOR
2ND R.F. STAGE
1ST R.F. STAGE
POWER TRANSFORMER
CAPACITOR AND COUPLING REACTOR UNIT
OUTPUT TRANSFORMER
REPRODUCER UNIT
A.C. INPUT CORD

RADIOTRON SOCKET VOLTAGES -- 120-VOLT LINE

Tube No.	Cathode to Heater Volts D.C	Cathode or Filament to Control Grid-Volts D.C.	Cathode to Screen Grid Volts D.C.	Cathode or Filament to Plate Volts D. C.	Plate Current M. A.	Heater or Filament Volts
VOLUME CONTROL at MAXIMUM						
RF	-40	-2.5	+85	160	3.0	2.3
RF	-36	-2,5	+85	155	3.5	2.3
RF	-36	-2.5	+75	155	3.5	2.3
DET	-28	-7.5	+55	225	0.5	2.3
AF	--	* -1.0		200	25.0	2.3
AF	--	* -1.0		200	25.0	2.3
VOLUME CONTROL at MINIMUM						
RF	-40	-1.0	+6	200	0	2.3
RF	-40	-1.4	+6	200	0	2.3
RF	-40	-0.8	+6	200	0	2.3
DET	-28	-8.4	+75	230	.6	2.3
AF	--	* -1.0	--	205	25.0	2.3
AF	--	* -1.0	--	205	25.0	2.3

R. C. A. VICTOR CO., INC.

MODEL R-50,R-55
Schematic
Chassis

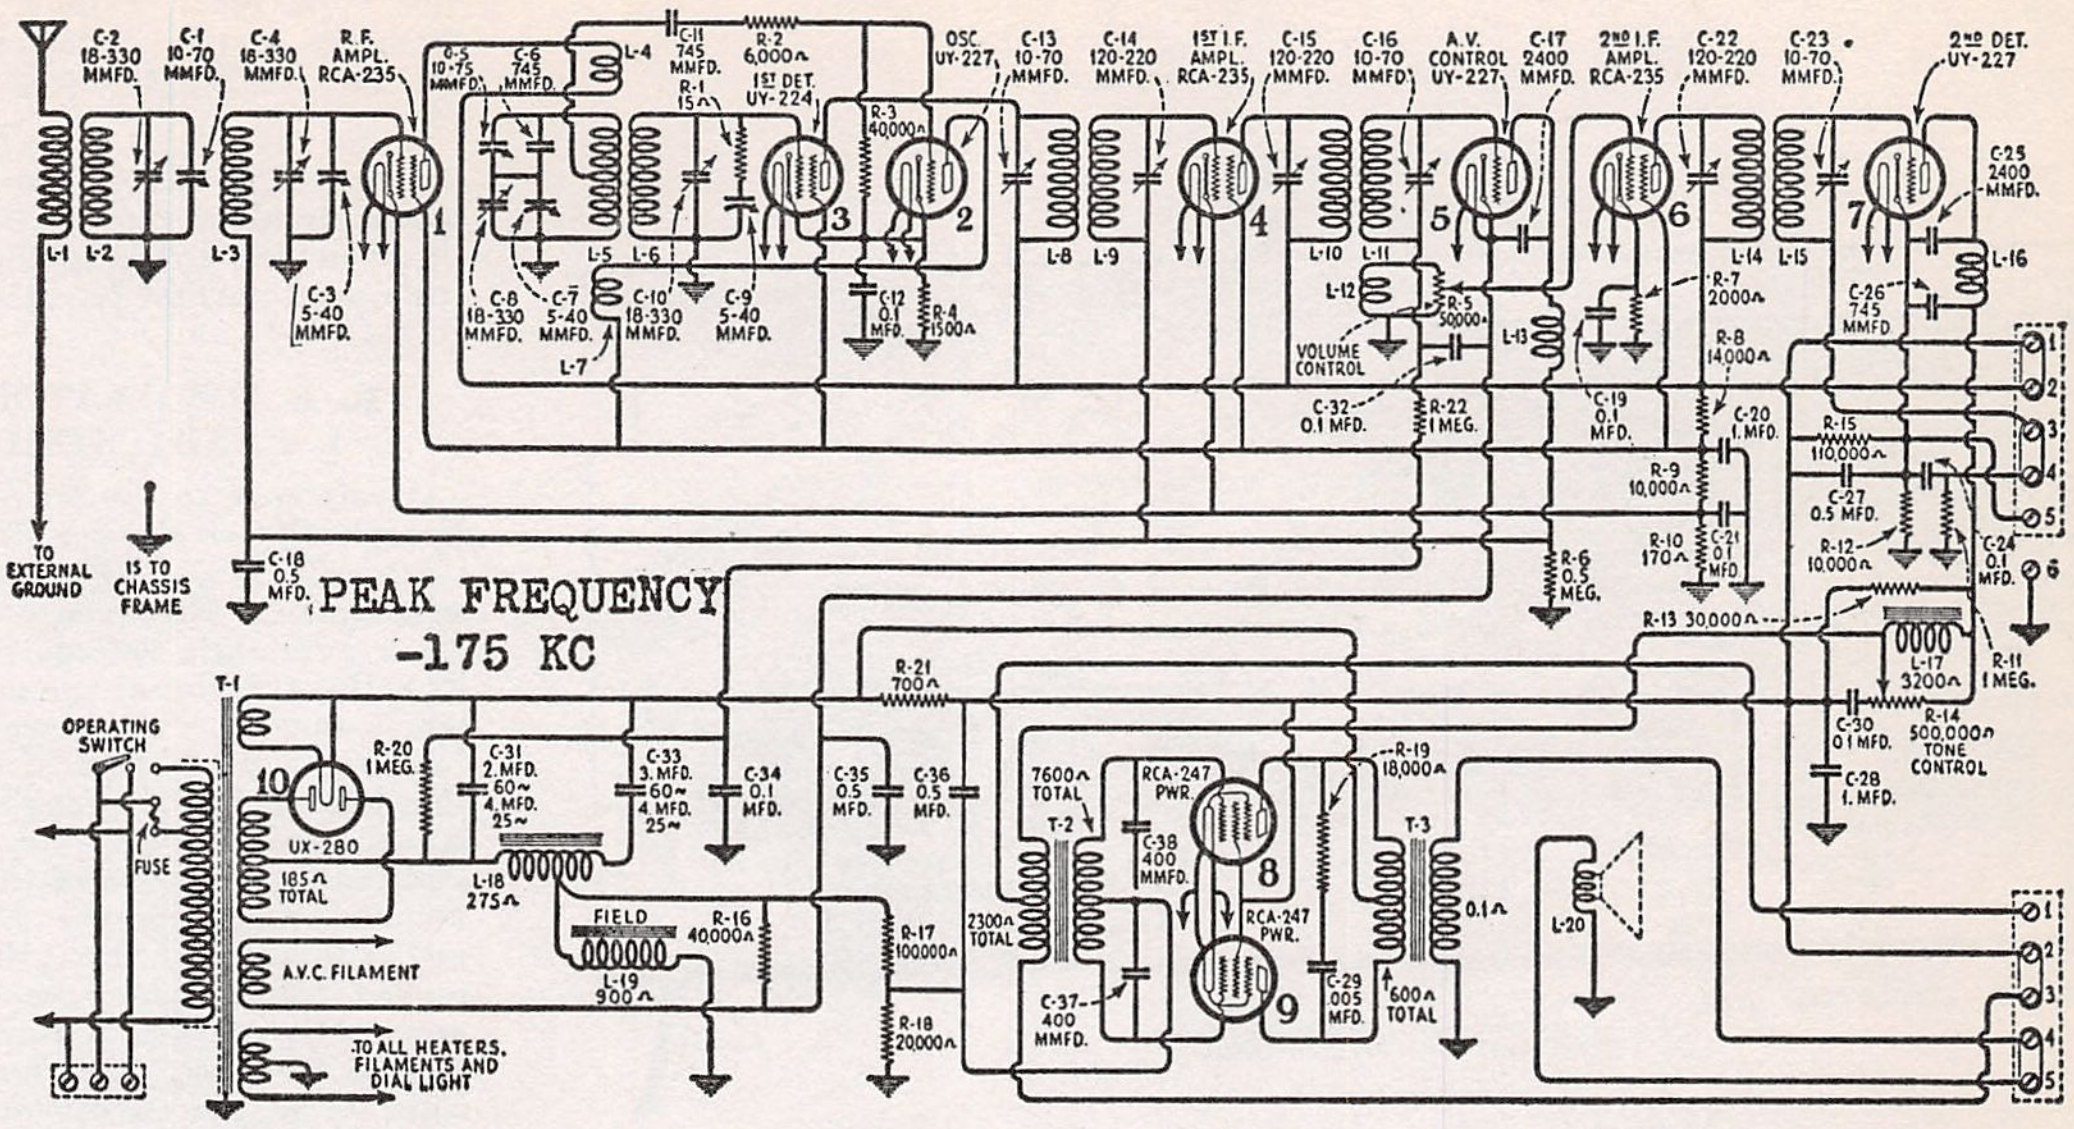
C-2 18-330 MMFD.
C-1 10-70 MMFD.
C-4 18-330 MMFD.
R.F. AMPL. RCA-235
C-5 10-75 MMFD.
C-6 745 MMFD.
C-11 745 MMFD.
R-2 6,000Ω
R-1 15Ω
1ST DET. UY-224
OSC UY-227
C-13 10-70 MMFD.
C-14 120-220 MMFD.
1ST I.F. AMPL. RCA-235
C-15 120-220 MMFD.
C-16 10-70 MMFD.
A.V. CONTROL UY-227
C-17 2400 MMFD.
2ND I.F. AMPL. RCA-235
C-22 120-220 MMFD.
C-23 10-70 MMFD.
2ND DET. UY-227
C-25 2400 MMFD.
C-3 5-40 MMFD.
C-8 18-330 MMFD.
C-7 5-40 MMFD.
C-10 18-330 MMFD.
C-9 5-40 MMFD.
R-3 40,000Ω
C-12 0.1 MFD.
R-4 1500Ω
VOLUME CONTROL
R-5 50000Ω
C-32 0.1 MFD.
R-22 1 MEG.
R-7 2000Ω
R-8 14,000Ω
C-19 0.1 MFD.
C-20 1 MFD.
C-26 745 MMFD
R-15 110,000Ω
R-9 10,000Ω
C-27 0.5 MFD.
R-10 170Ω
C-21 0.1 MFD.
R-12 10,000Ω
C-24 0.1 MFD.
R-6 0.5 MEG.
R-13 30,000Ω
R-11 1 MEG.
L-17 3200Ω
C-30 0.1 MFD.
R-14 500,000Ω TONE CONTROL
C-28 1 MFD.
TO EXTERNAL GROUND
IS TO CHASSIS FRAME
C-18 0.5 MFD.
PEAK FREQUENCY -175 KC
OPERATING SWITCH
FUSE
T-1
UX-280
R-20 1 MEG.
C-31 2 MFD. 60~ 4 MFD. 25~
C-33 3 MFD. 60~ 4 MFD. 25~
C-34 0.1 MFD.
C-35 0.5 MFD.
C-36 0.5 MFD.
R-21 700Ω
185Ω TOTAL
L-18 275Ω
FIELD
L-19 900Ω
R-16 40000Ω
R-17 100000Ω
R-18 20000Ω
A.V.C. FILAMENT
TO ALL HEATERS, FILAMENTS AND DIAL LIGHT
7600Ω TOTAL
T-2
2300Ω TOTAL
C-37 400 MMFD.
RCA-247 PWR
C-38 400 MMFD.
RCA-247 PWR.
C-29 .005 MFD.
R-19 18,000Ω
T-3
0.1Ω
600Ω TOTAL
L-20

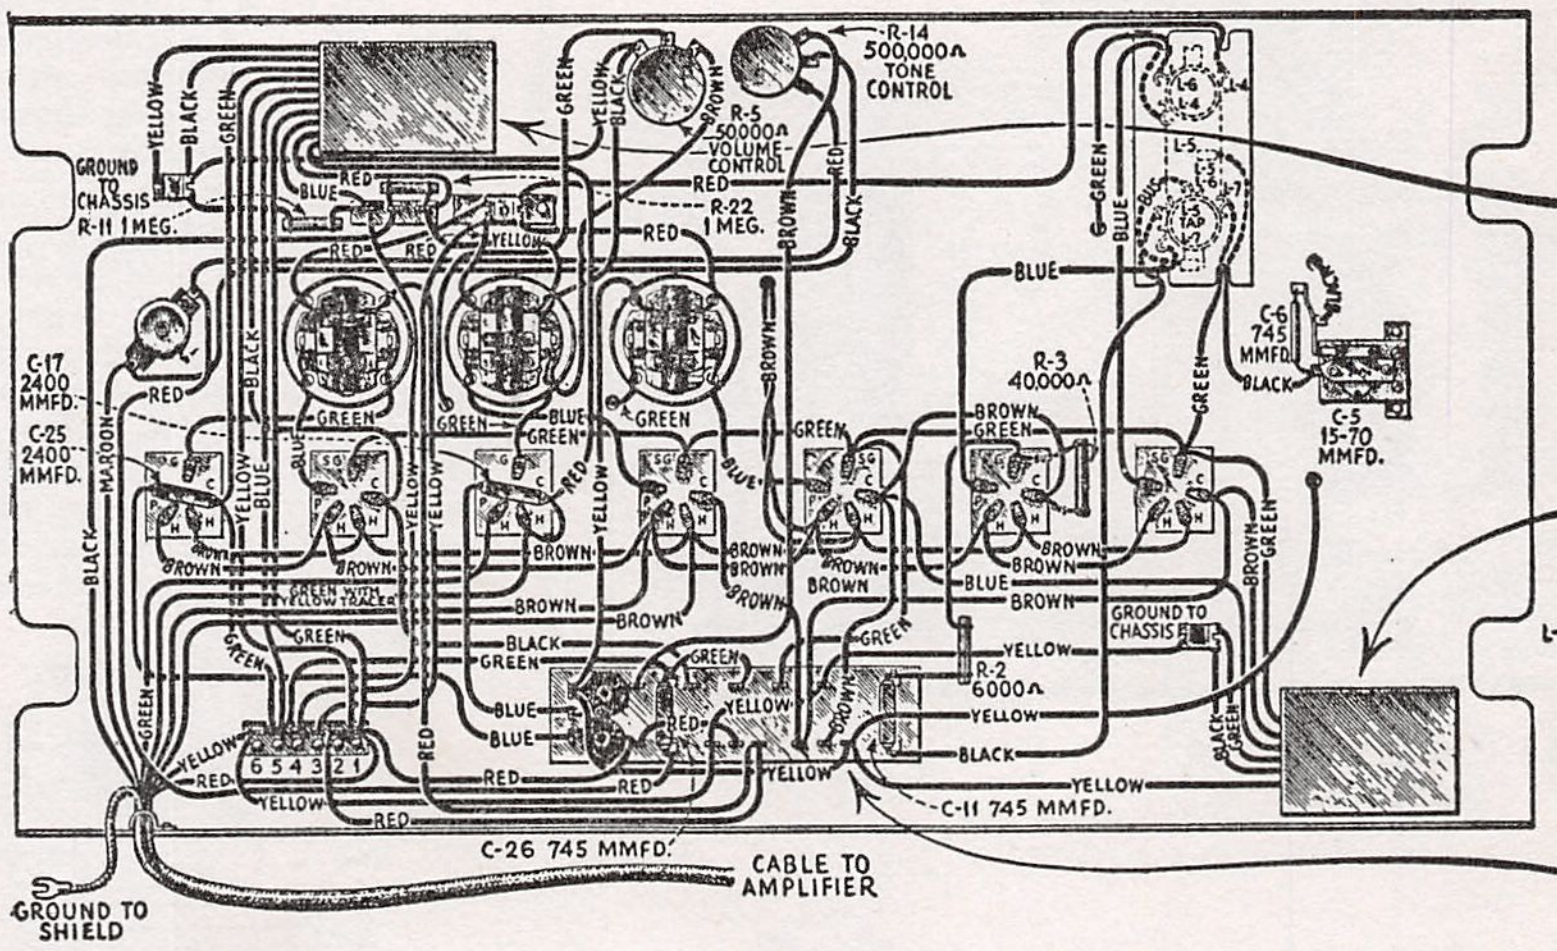
R-14 500,000Ω TONE CONTROL
R-5 50000Ω VOLUME CONTROL
R-22 1 MEG.
GROUND TO CHASSIS R-11 1 MEG.
C-17 2400 MMFD.
C-25 2400 MMFD.
C-6 745 MMFD.
R-3 40,000Ω
C-5 15-70 MMFD.
GROUND TO CHASSIS
R-2 6000Ω
C-11 745 MMFD.
C-26 745 MMFD.
CABLE TO AMPLIFIER
GROUND TO SHIELD
6 5 4 3 2 1

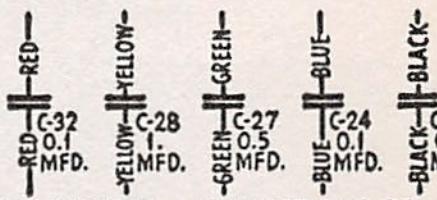
RED
C-32 0.1 MFD.
YELLOW
C-28 1 MFD.
GREEN
C-27 0.5 MFD.
BLUE
C-24 0.1 MFD.
BLACK
C-19 0.1 MFD.

INTERNAL CONNECTIONS OF BY-PASS CAPACITOR PACK

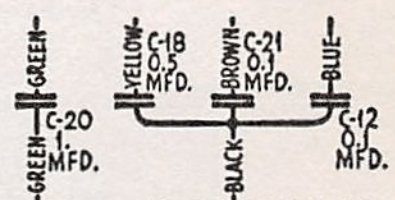
GREEN
C-20 1 MFD.
YELLOW
C-18 0.5 MFD.
BROWN
C-21 0.1 MFD.
BLUE
C-12 0.1 MFD.
BLACK

INTERNAL CONNECTIONS OF BY-PASS CAPACITOR PACK

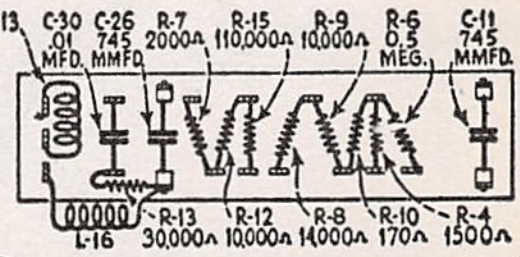
L-13
C-30 .01 MFD.
C-26 745 MMFD.
R-7 2000Ω
R-15 110,000Ω
R-9 10,000Ω
R-6 0.5 MEG.
C-11 745 MMFD.
L-16
R-13 30,000Ω
R-12 10,000Ω
R-8 14,000Ω
R-10 170Ω
R-4 1500Ω

RESISTOR BOARD CONNECTIONS

S. P. U. Reproducer Assembly Wiring

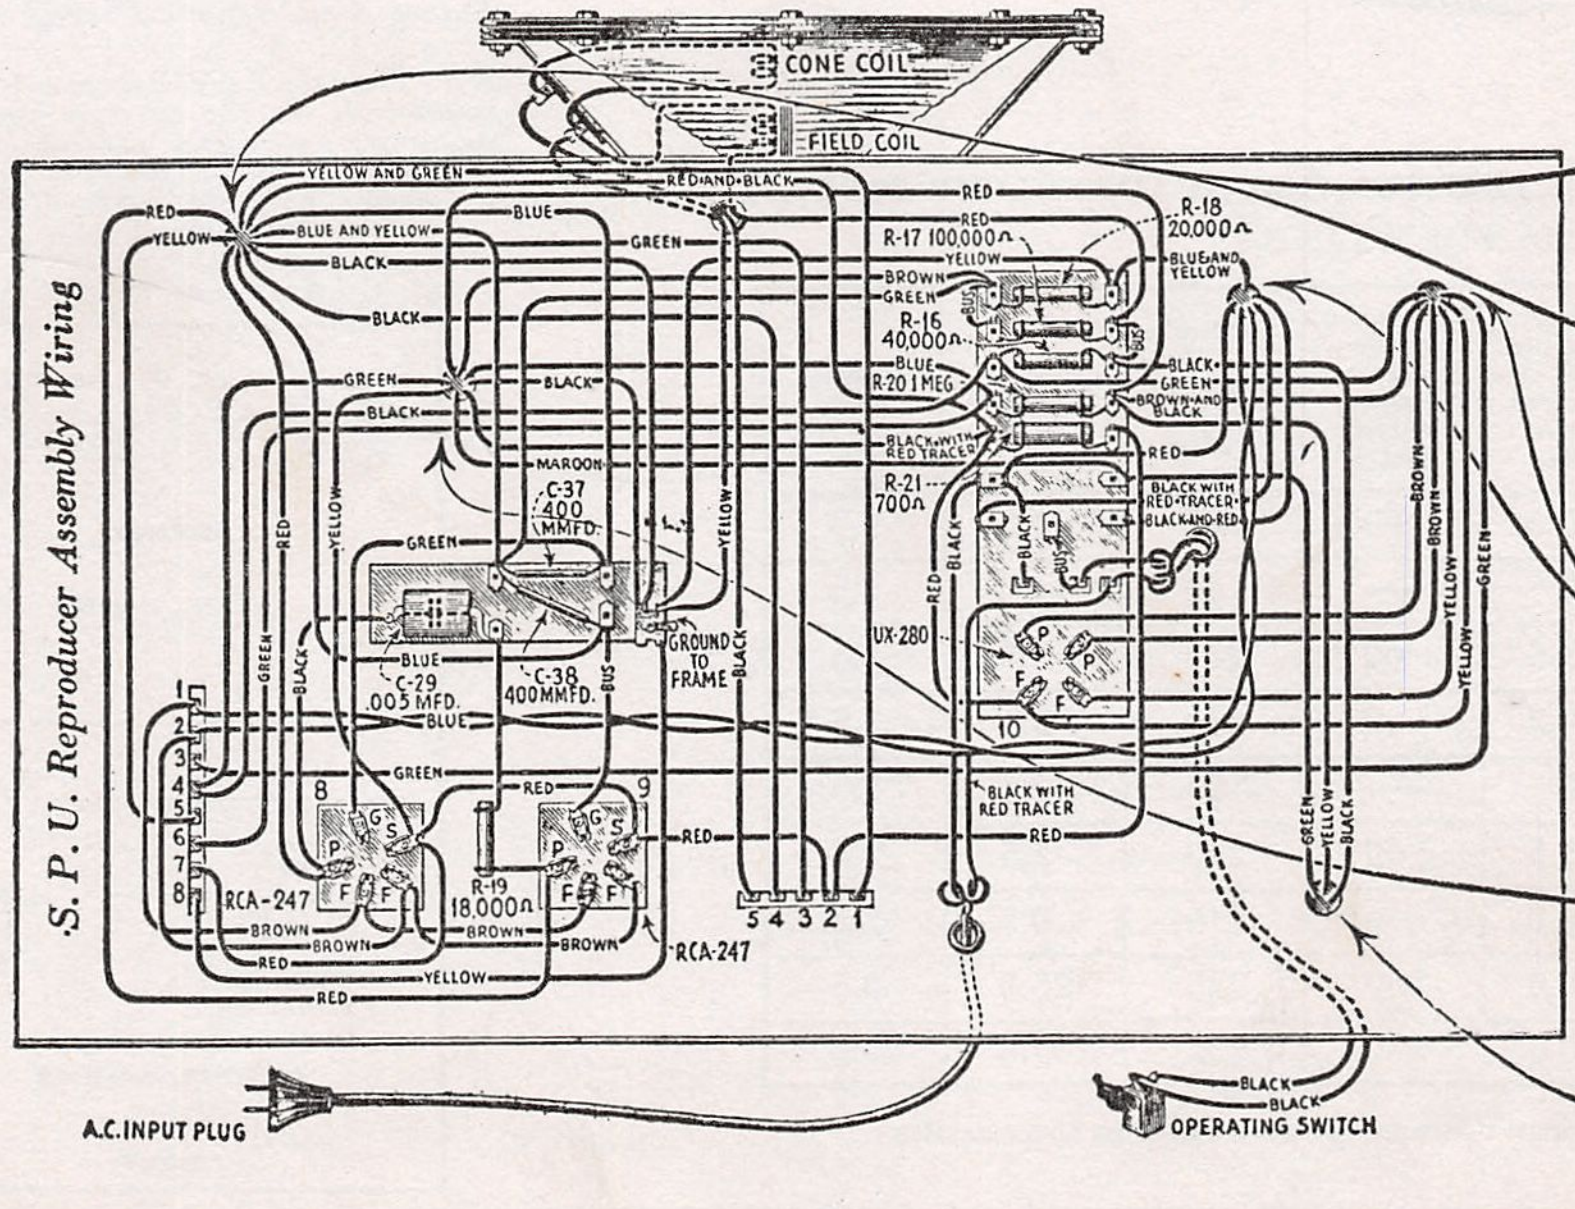
CONE COIL
FIELD COIL
R-18 20,000Ω
R-17 100,000Ω
R-16 40,000Ω
R-20 1 MEG
R-21 700Ω
C-37 400 MMFD.
C-29 .005 MFD.
C-38 400 MMFD.
GROUND TO FRAME
UX-280
RCA-247
R-19 18,000Ω
RCA-247
5 4 3 2 1
A.C. INPUT PLUG
OPERATING SWITCH

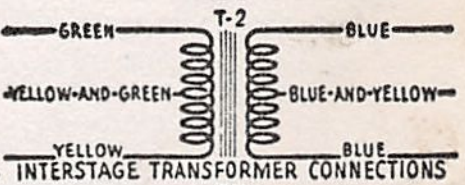
GREEN
T-2
BLUE
YELLOW-AND-GREEN
BLUE-AND-YELLOW
YELLOW
BLUE

INTERSTAGE TRANSFORMER CONNECTIONS

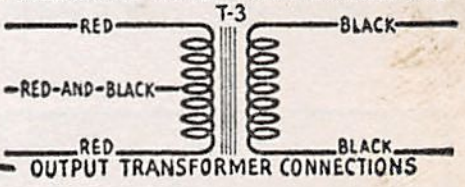
T-3
RED
BLACK
RED-AND-BLACK
RED
BLACK

OUTPUT TRANSFORMER CONNECTIONS

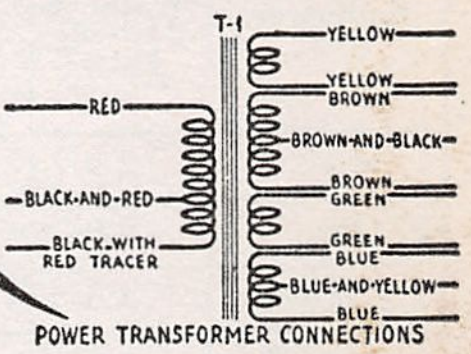
T-1
YELLOW
RED
YELLOW
BROWN
BROWN-AND-BLACK
BROWN
GREEN
BLACK-AND-RED
BLACK WITH RED TRACER
GREEN
BLUE
BLUE-AND-YELLOW
BLUE

POWER TRANSFORMER CONNECTIONS

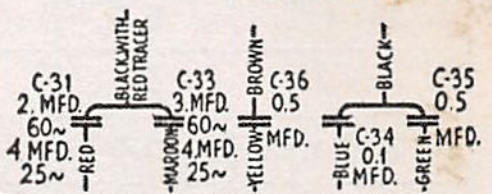
C-31 2 MFD. 60~ 4 MFD. 25~
BLACK WITH RED TRACER
RED
C-33 3 MFD. 60~ 4 MFD. 25~
MAROON
BROWN
C-36 0.5
YELLOW
BLACK
BLUE
C-34 0.1 MFD.
C-35 0.5 MFD.
GREEN

CAPACITOR PACK CONNECTIONS

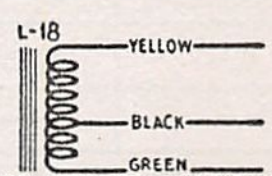
L-18
YELLOW
BLACK
GREEN

REACTOR CONNECTIONS

MODEL R-50,R-55
Assembly Wiring
Voltage

R. C. A. VICTOR CO., INC.

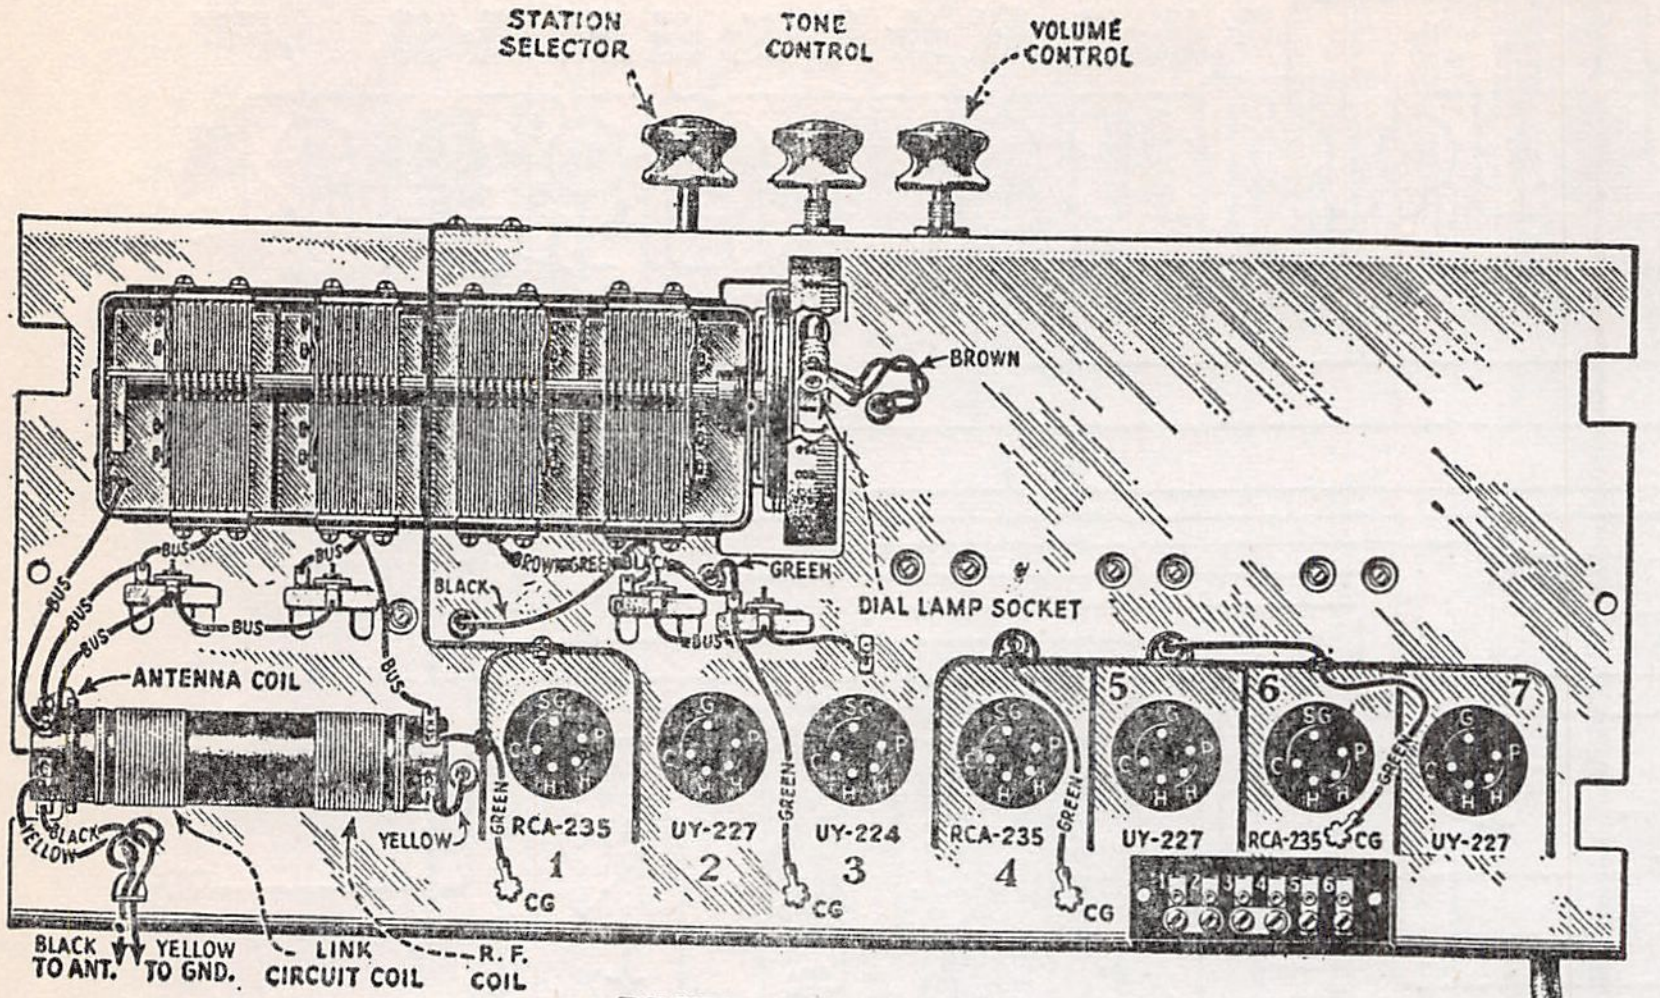
STATION SELECTOR
TONE CONTROL
VOLUME CONTROL
BROWN
BUS
BUS
BUS
BUS
BUS
BUS
BLACK
BROWN GREEN
BLACK
GREEN
DIAL LAMP SOCKET
ANTENNA COIL
GREEN
RCA-235
1
CG
UY-227
2
GREEN
UY-224
3
CG
RCA-235
4
GREEN
CG
5
UY-227
6
RCA-235
CG
GREEN
7
UY-227
YELLOW
BLACK
YELLOW
BLACK TO ANT.
YELLOW TO GND.
LINK CIRCUIT COIL
R. F. COIL

RECEIVER ASSEMBLY

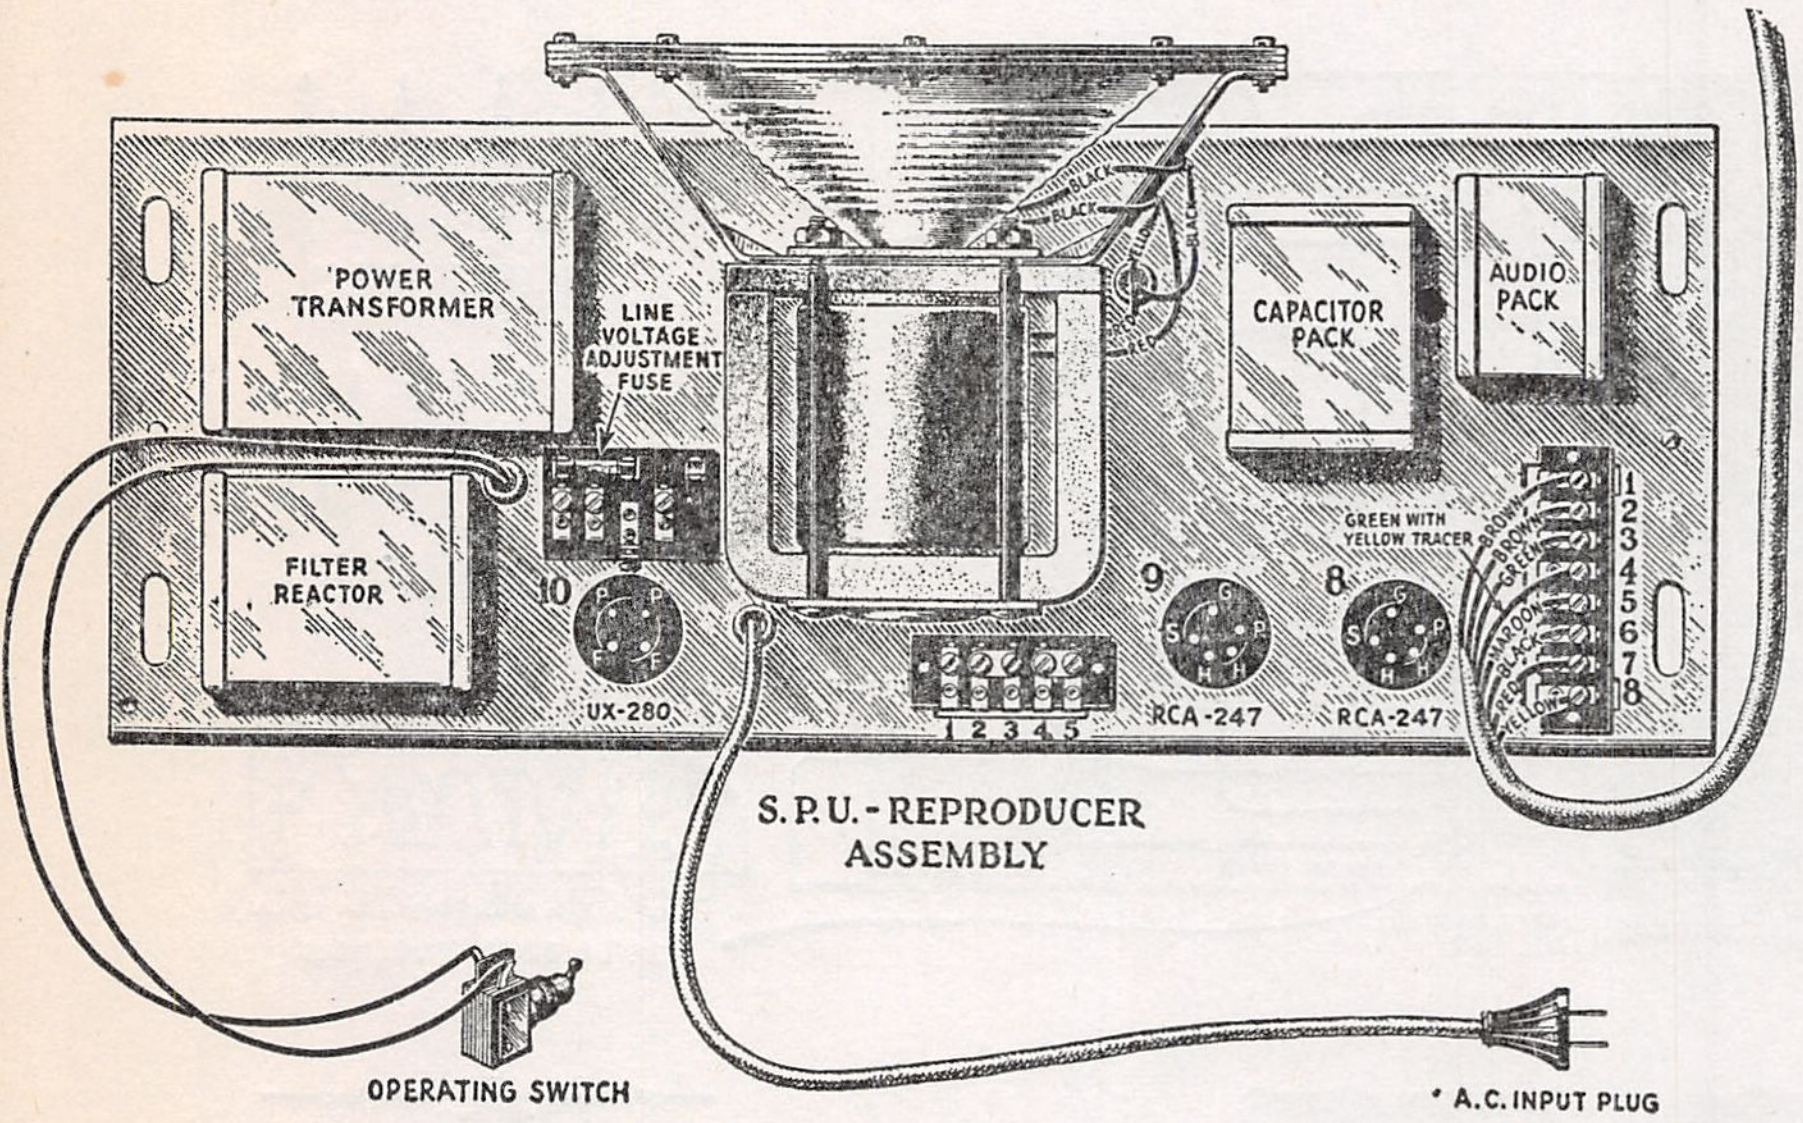
POWER TRANSFORMER
LINE VOLTAGE ADJUSTMENT FUSE
FILTER REACTOR
10
UX-280
1 2 3 4 5
BLACK
BLACK
BLACK
YELLOW
RED
RED
CAPACITOR PACK
AUDIO PACK
9
RCA-247
8
RCA-247
GREEN WITH YELLOW TRACER
BROWN
BROWN
GREEN
MAROON
BLACK
RED
YELLOW
1
2
3
4
5
6
7
8
OPERATING SWITCH
A.C. INPUT PLUG

S.P.U.-REPRODUCER ASSEMBLY

VOLTAGES ARE THE SAME AT EITHER POSITION OF THE VOLUME CONTROL

110 VOLT LINE

Radiotron No.	Heater to Cathode Volts	Cathode or Filament or Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Heater Volts
1. R.F.	2.0	*0.2	60	230	3.5	2.5
2. Osc.	5.0	0	—	50	4.0	2.5
3. 1st Det.	4.0	3.5	60	230	0.5	2.5
4. 1st I.F.	2.0	*0.2	60	230	3.5	2.5
5. A.V.C.	0	0	—	30	0.1	2.5
6. 2nd I.F.	2.0	3.5	60	230	2.5	2.5
7. 2nd Det.	20.0	*8.0	—	210	0.5	2.5
8. Pwr.	—	*10.0	250	235	25.0	2.5
9. Pwr.	—	*10.0	250	235	25.0	2.5

*These readings are not correct due to the resistance in the circuits

SERVICE DATA

Information pertaining to R. F., Oscillator and I. F. adjustments together with general service data for this type receiver may be obtained from the Service Notes already issued on the RCA Radiola 80.

The beat frequency—175 K. C.—appears in the plate circuit of the first detector which is accurately tuned to 175 K. C. The tube used as a first detector is Radiotron UY-224.

R. F. OSCILLATOR AND I. F. ADJUSTMENTS

A reference to the RCA Radiola 80 Notes will give the details for making correct R. F., I. F. and Oscillator adjustments. However, due to the use of an automatic volume control tube, its action will defeat the use of an output meter. To overcome this, a "dummy" Radiotron UY-227 (one that has one heater prong removed but is otherwise O. K.) should be substituted for the tube in the automatic volume control socket. Do not make any adjustments with this tube removed from the socket. While apparently everything functions in the normal manner, the lack of tube capacity in the circuits will cause an incorrect alignment to be made.

In the RCA Victor Radiola R-50 and R-55 the I. F. transformers are adjusted for maximum output and no attempt at band pass tuning should be made when these adjustments are made.

It will be noted on the early Models of R-50 and R-55 that a small 9 mmfd. capacitor is inserted in series with the oscillator trimming capacitor. This capacitor is not used on later models that have a slightly different dial scale. When replacing a dial scale it may therefore be necessary to short this capacitor. A failure in the capacitor may be remedied either by replacing the capacitor or the dial scale.

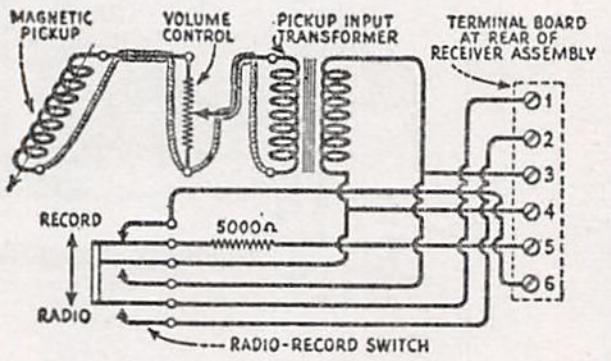
MAGNETIC PICKUP
VOLUME CONTROL
PICKUP INPUT TRANSFORMER
TERMINAL BOARD AT REAR OF RECEIVER ASSEMBLY
1
2
3
4
5
6
RECORD
5000Ω
RADIO
RADIO-RECORD SWITCH

Figure 3—Magnetic Pickup connections

Note: Place the Radio-Record switch and input transformer in the receiver cabinet. Try connecting a wire from receiver terminal No. 6 to input transformer frame or braided shield to pickup and use connection that gives minimum hum.

Models R-50, R-55, RAE-59 (1931)

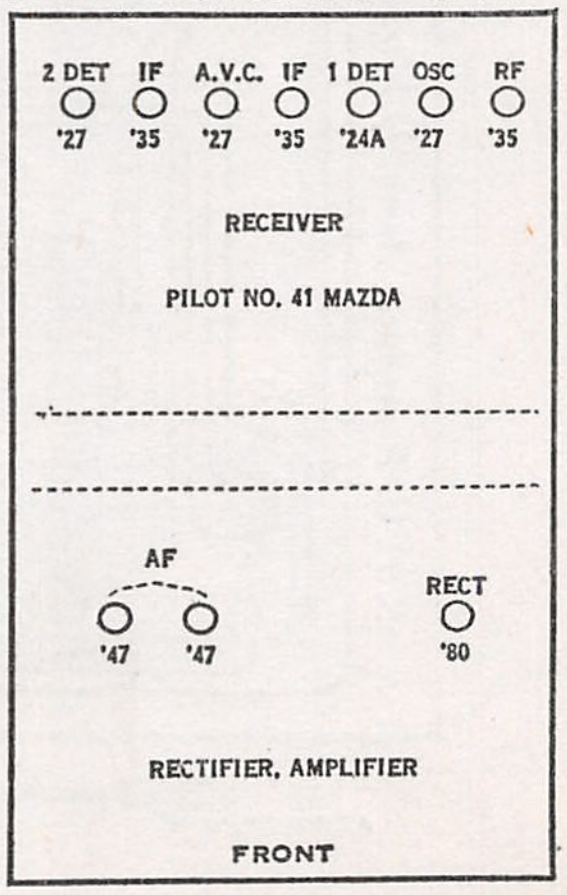
2 DET
'27
IF
'35
A.V.C.
'27
IF
'35
1 DET
'24A
OSC
'27
RF
'35
RECEIVER
PILOT NO. 41 MAZDA
AF
'47
'47
RECT
'80
RECTIFIER, AMPLIFIER
FRONT

R. C. A. VICTOR CO., INC.

MODEL RAE-59
Schematic

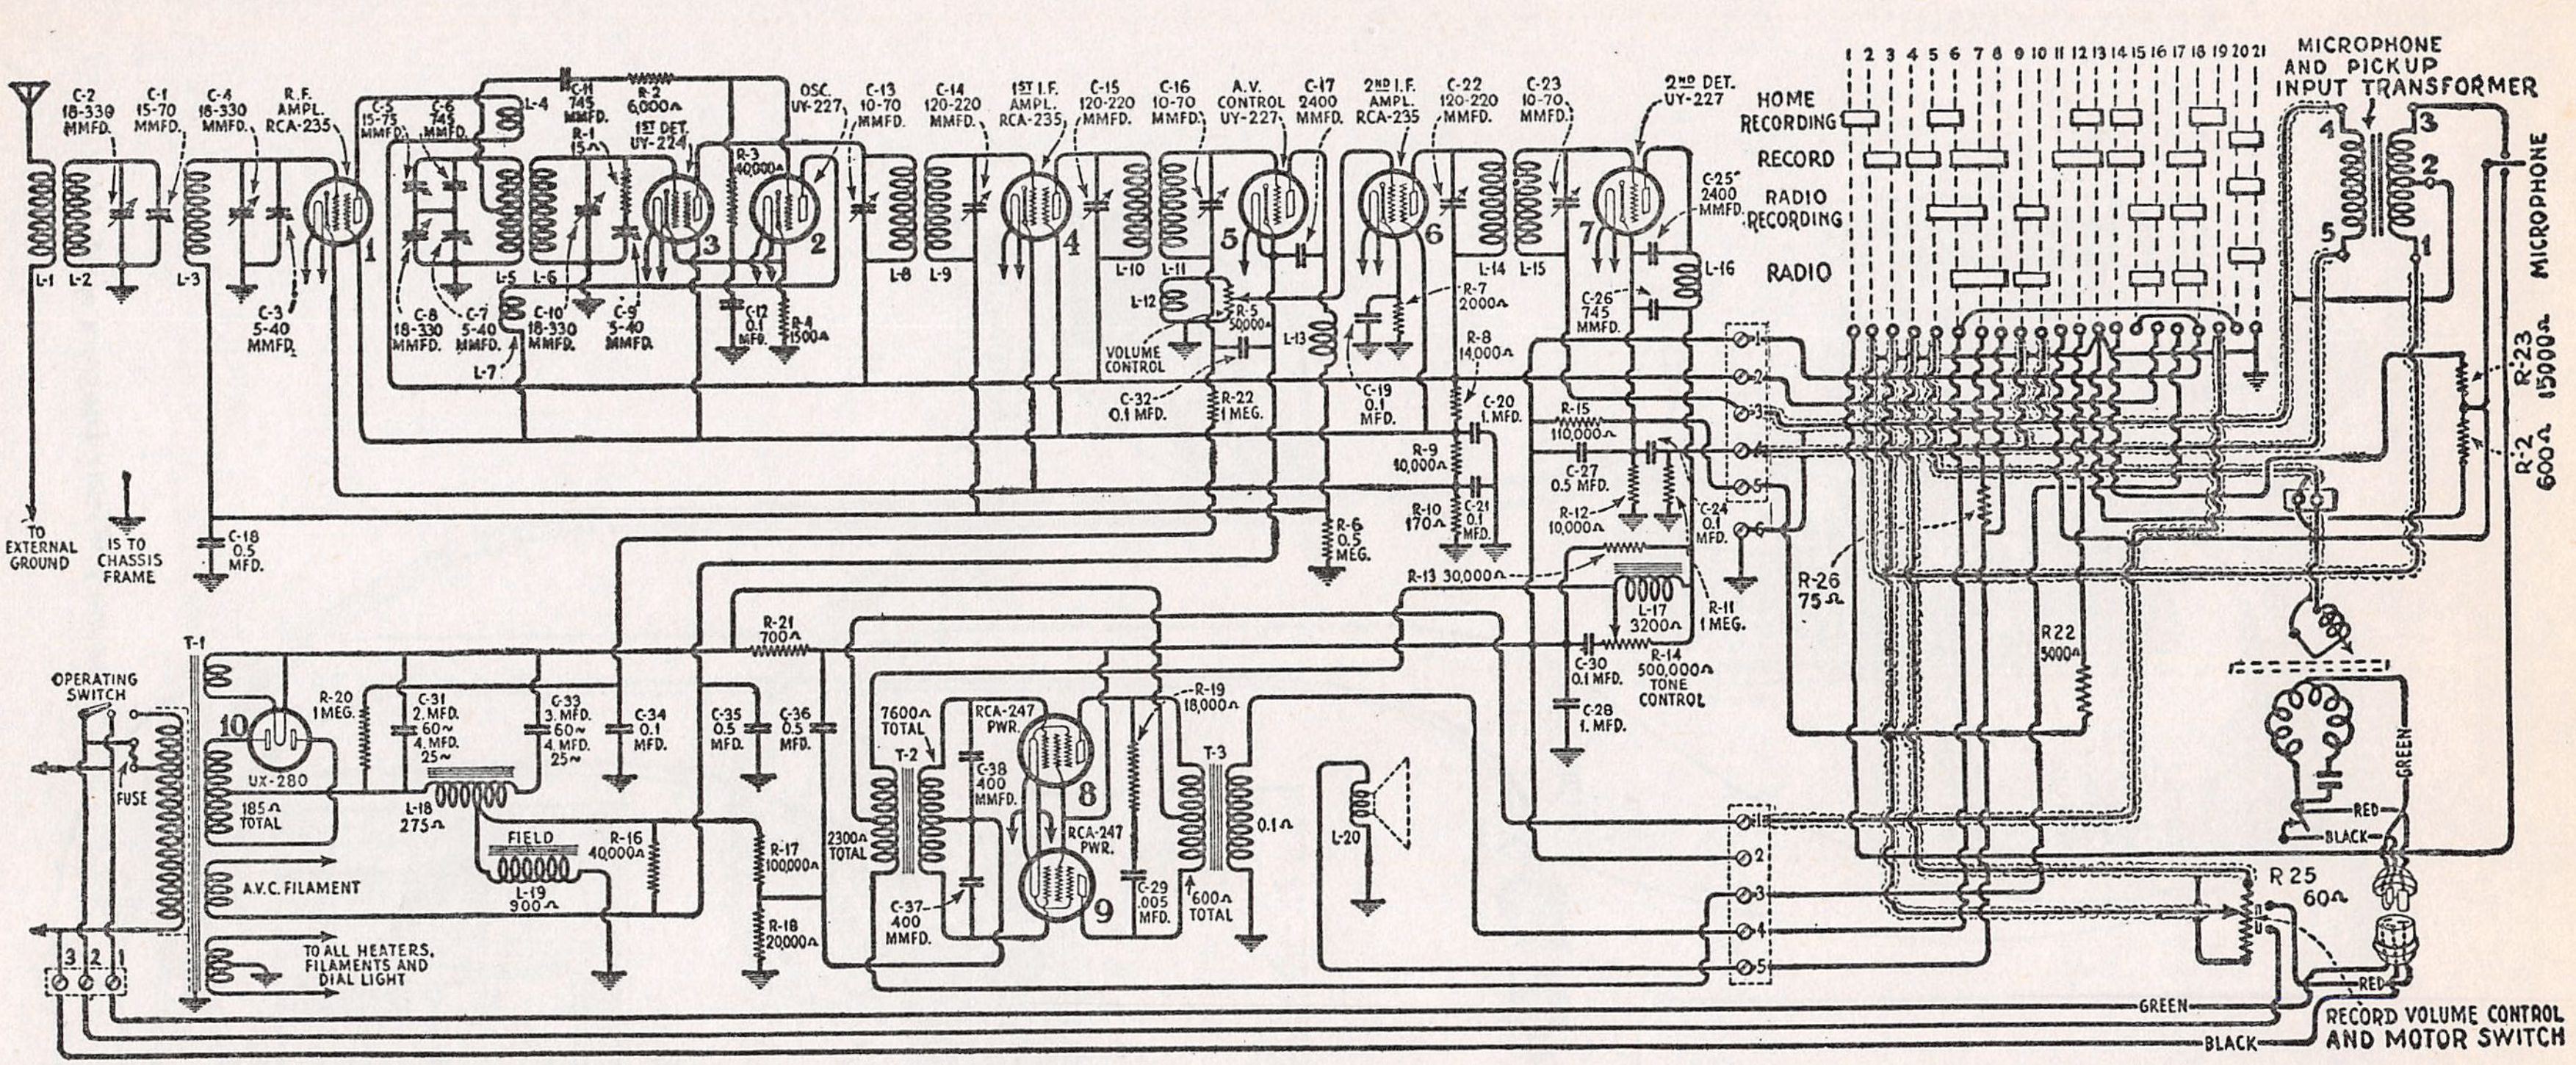
TO EXTERNAL GROUND
IS TO CHASSIS FRAME
C-2 18-330 MMFD.
C-1 15-70 MMFD.
C-4 18-330 MMFD.
R.F. AMPL. RCA-235
C-3 5-40 MMFD.
C-18 0.5 MFD.
C-5 15-75 MMFD.
C-6 745 MMFD.
C-8 18-330 MMFD.
C-7 5-40 MMFD.
C-10 18-330 MMFD.
C-9 5-40 MMFD.
C-11 745 MMFD.
R-1 15Ω
R-2 6,000Ω
1ST DET. UY-224
R-3 40,000Ω
C-12 0.1 MFD.
R-4 1500Ω
OSC. UY-227
C-13 10-70 MMFD.
C-14 120-220 MMFD.
1ST I.F. AMPL. RCA-235
C-15 120-220 MMFD.
C-16 10-70 MMFD.
A.V. CONTROL UY-227
C-17 2400 MMFD.
VOLUME CONTROL
R-5 50,000Ω
C-32 0.1 MFD.
R-22 1 MEG.
R-6 0.5 MEG.
2ND I.F. AMPL. RCA-235
C-22 120-220 MMFD.
C-23 10-70 MMFD.
R-7 2000Ω
R-8 14,000Ω
C-19 0.1 MFD.
C-20 1. MFD.
R-9 10,000Ω
R-10 170Ω
C-21 0.1 MFD.
R-13 30,000Ω
2ND DET. UY-227
C-25 2400 MMFD.
C-26 745 MMFD.
R-15 110,000Ω
C-27 0.5 MFD.
R-12 10,000Ω
C-24 0.1 MFD.
L-17 3200Ω
R-11 1 MEG.
C-30 0.1 MFD.
R-14 500,000Ω TONE CONTROL
C-28 1. MFD.
R-26 75Ω
R22 5000Ω
HOME RECORDING
RECORD
RADIO RECORDING
RADIO
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21
MICROPHONE AND PICKUP INPUT TRANSFORMER
MICROPHONE
R-23 15000Ω
R-2 600Ω
OPERATING SWITCH
FUSE
T-1
UX-280
185Ω TOTAL
R-20 1 MEG.
C-31 2. MFD. 60~ 4. MFD. 25~
C-33 3. MFD. 60~ 4. MFD. 25~
C-34 0.1 MFD.
L-18 275Ω
FIELD
L-19 900Ω
R-16 40,000Ω
A.V.C. FILAMENT
TO ALL HEATERS, FILAMENTS AND DIAL LIGHT
R-21 700Ω
C-35 0.5 MFD.
C-36 0.5 MFD.
R-17 100,000Ω
R-18 20,000Ω
7600Ω TOTAL
T-2
2300Ω TOTAL
RCA-247 PWR.
C-38 400 MMFD.
C-37 400 MMFD.
R-19 18,000Ω
C-29 .005 MFD.
T-3
0.1Ω
600Ω TOTAL
L-20
GREEN
RED
BLACK
R 25 60Ω
RECORD VOLUME CONTROL AND MOTOR SWITCH

PEAK FREQUENCY—175 KC

Models R-50, R-55, RAE-59 (1931)

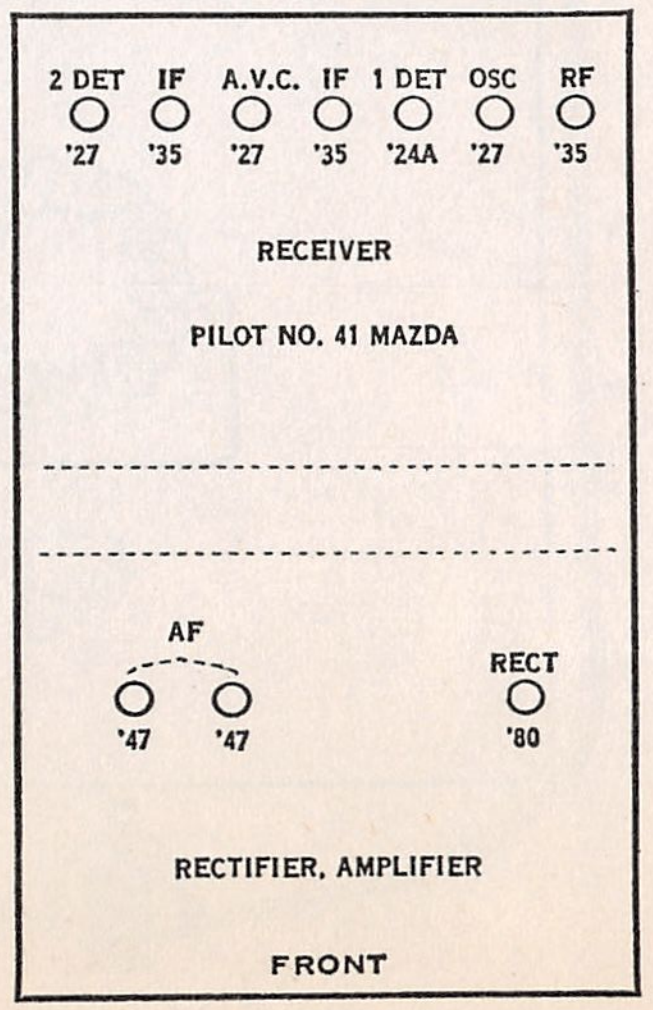
2 DET
'27
IF
'35
A.V.C.
'27
IF
'35
1 DET
'24A
OSC
'27
RF
'35
RECEIVER
PILOT NO. 41 MAZDA
AF
'47
'47
RECT
'80
RECTIFIER, AMPLIFIER
FRONT

The RCA Victor RAE-59 is a Combination DeLuxe Radio and Automatic Phonograph instrument that provides a large variety of home entertainment features. The radio receiver, amplifier and loudspeaker are identical with those used in Models R-50 and 55. The automatic record changing mechanism is of simple, sturdy design and may be operated at 33⅓ R.P.M. as well as 78 R.P.M.

Excellent home recording is a feature of this instrument, its high quality being due to the use of a two button studio microphone and a high gain amplifier. Also a much greater power output is available, due to the use of Radiotrons RCA-247 in the output stage.

SERVICE DATA

A reference to the R-50 and R-55 Service Notes will give the details of any service work necessary in conjunction with the receiver and amplifier assemblies. Figure 1 shows the schematic wiring diagram and Figure 2 the assembly wiring. A reference to the Service Notes on the RCA Victor Record changing mechanism will give any details of service work in conjunction with this unit.

R. C. A. VICTOR CO., INC.

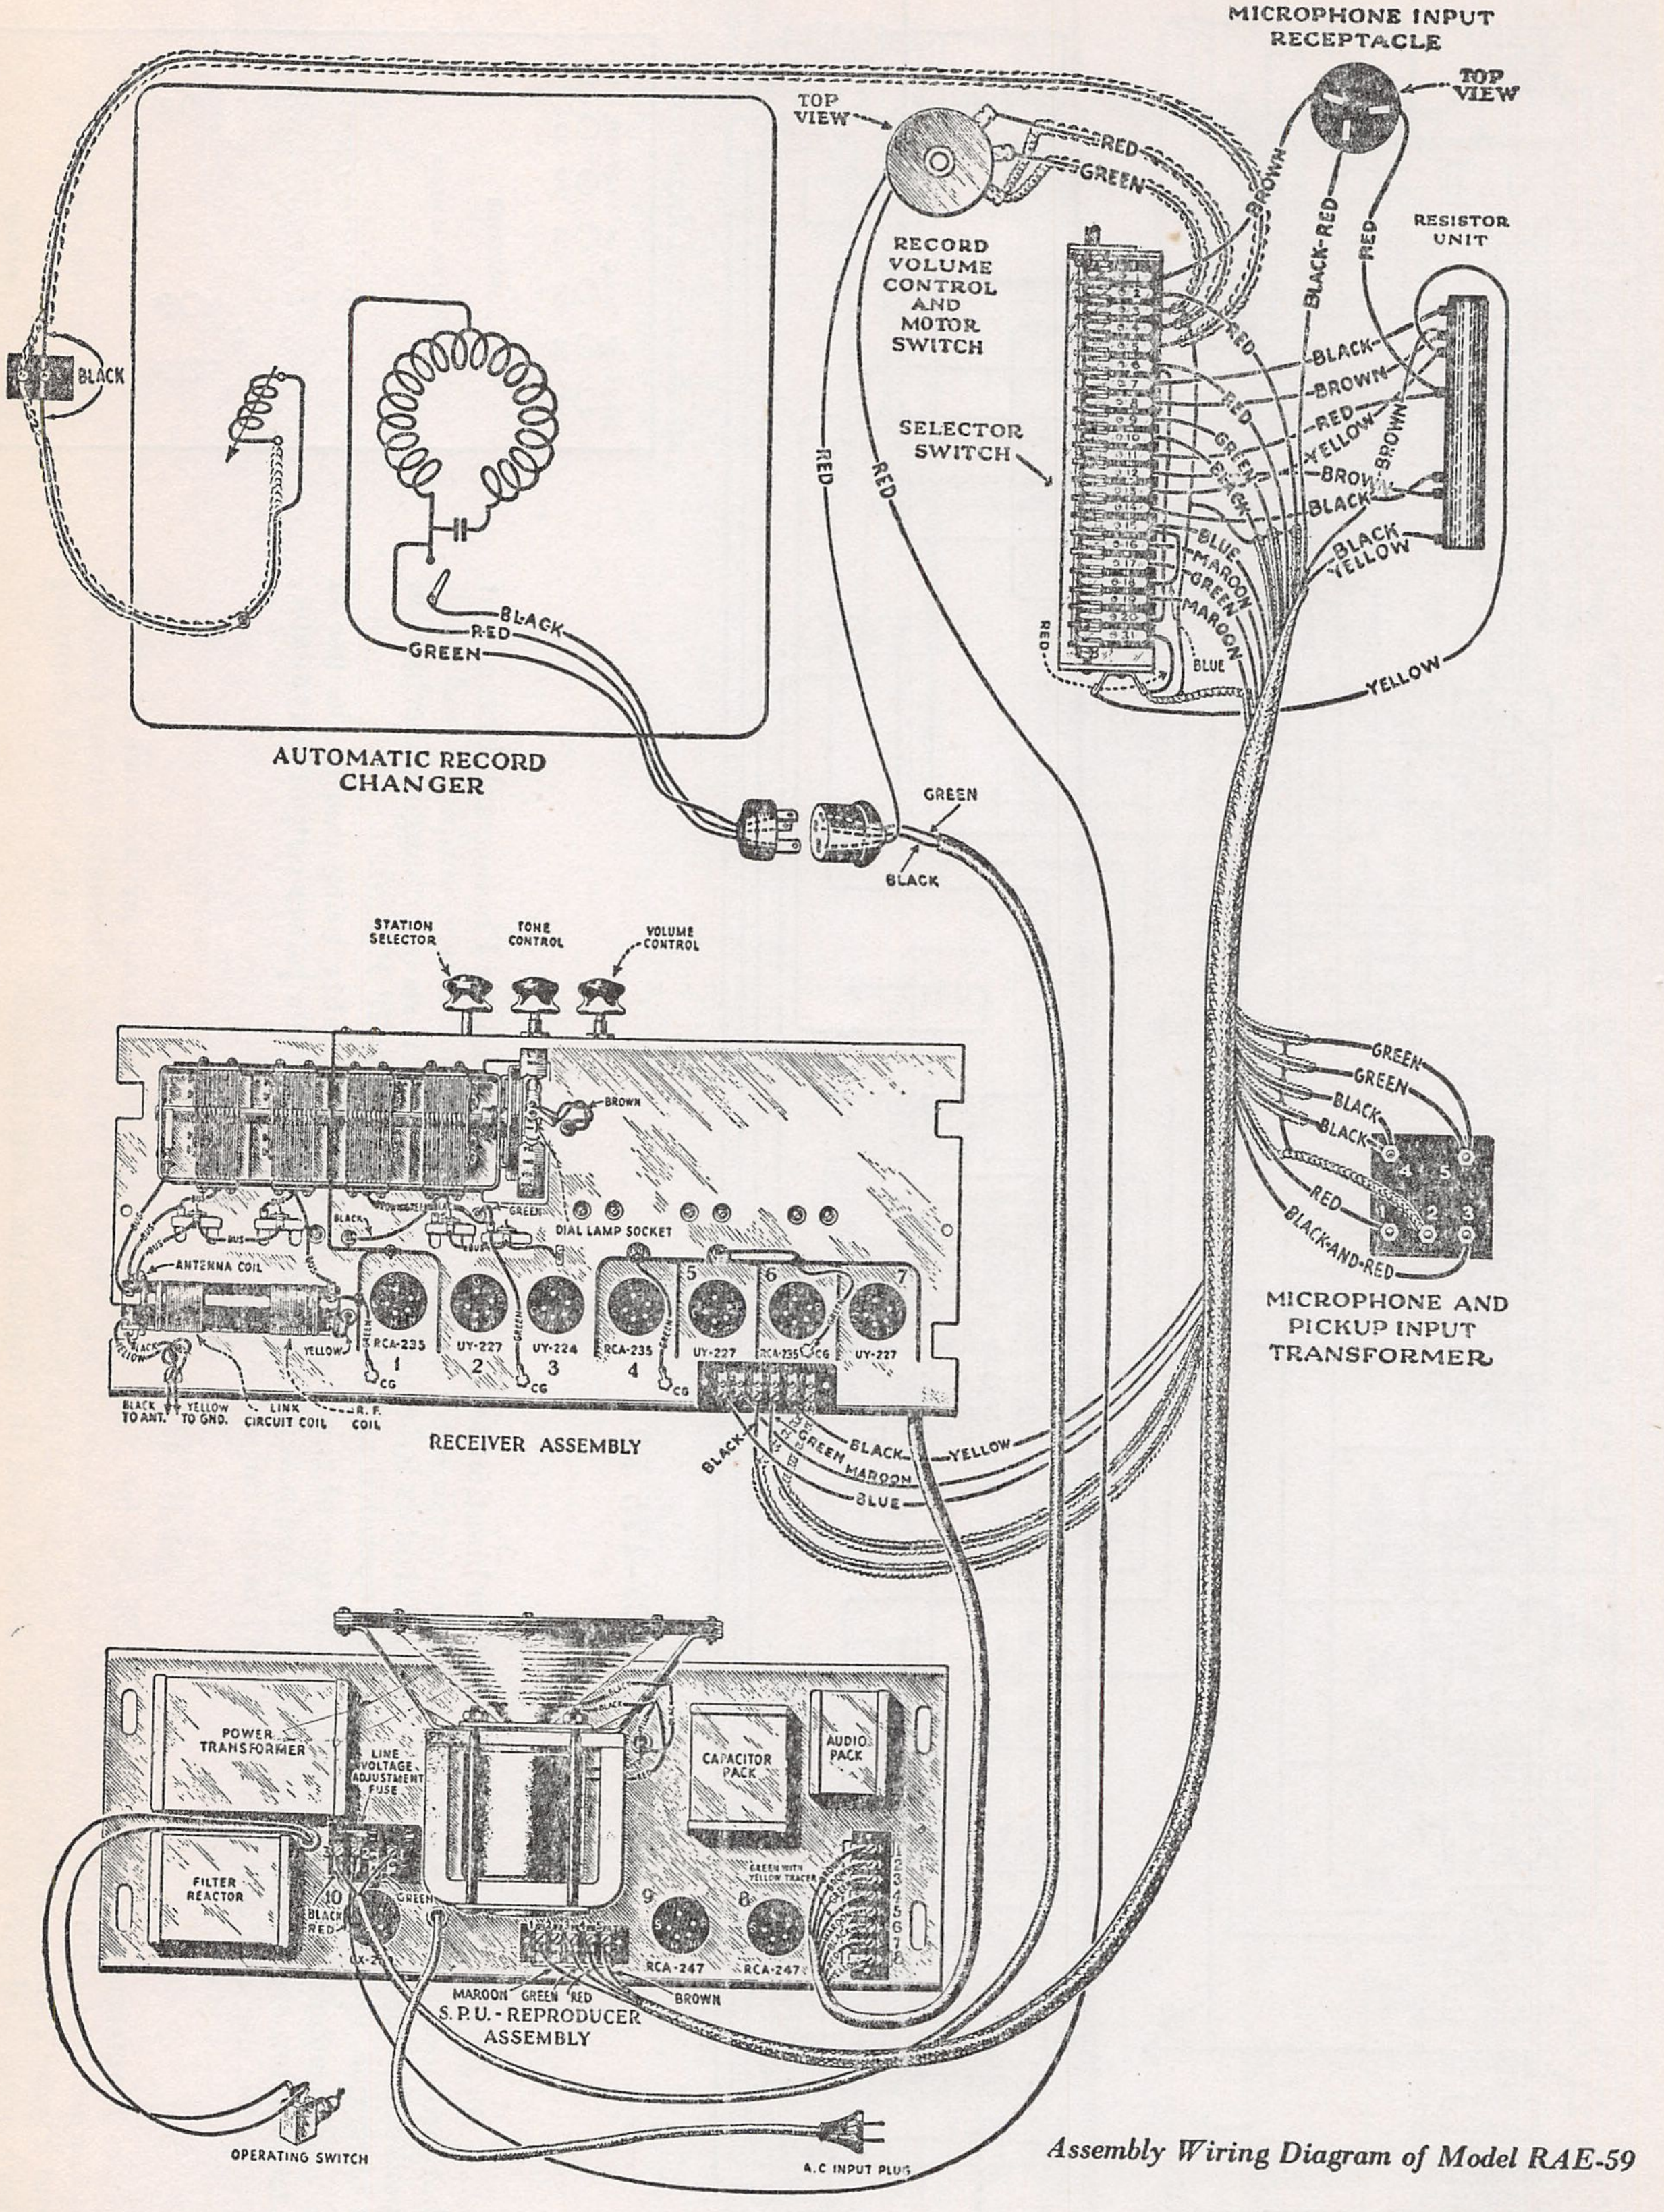
MICROPHONE INPUT RECEPTACLE
TOP VIEW
TOP VIEW
RED
GREEN
BROWN
BLACK-RED
RED
RESISTOR UNIT
RECORD VOLUME CONTROL AND MOTOR SWITCH
SELECTOR SWITCH
BLACK
BROWN
RED
YELLOW
BROWN
BLACK
BLACK
YELLOW
BLUE
MAROON
GREEN
MAROON
BLUE
YELLOW
RED
RED
RED
BLACK
RED
GREEN
AUTOMATIC RECORD CHANGER
GREEN
BLACK
STATION SELECTOR
TONE CONTROL
VOLUME CONTROL
BROWN
DIAL LAMP SOCKET
ANTENNA COIL
BUS
RCA-235
UY-227
UY-224
RCA-235
UY-227
RCA-235
UY-227
CG
YELLOW
BLACK TO ANT.
YELLOW TO GND.
LINK CIRCUIT COIL
R. F. COIL
RECEIVER ASSEMBLY
GREEN
GREEN
BLACK
BLACK
RED
BLACK-AND-RED
MICROPHONE AND PICKUP INPUT TRANSFORMER
BLACK
GREEN
MAROON
BLUE
YELLOW
POWER TRANSFORMER
LINE VOLTAGE ADJUSTMENT FUSE
FILTER REACTOR
CAPACITOR PACK
AUDIO PACK
GREEN WITH YELLOW TRACER
RCA-247
RCA-247
UX-280
BLACK
RED
GREEN
MAROON
GREEN
RED
BROWN
S. P. U. - REPRODUCER ASSEMBLY
OPERATING SWITCH
A.C INPUT PLUG

Assembly Wiring Diagram of Model RAE-59

MODEL RE-73
Assembly Wiring

R. C. A. VICTOR CO., INC.

RCA Victor Radiola Electrola RE–73 is an eight tube screen grid tuned R. F. type radio receiver combined with a standard Electrola mechanism. The receiver assembly and amplifier of this model is similar to that used in the 1930 Victor Receivers, Models R–35, R–39, and RE–57. The loudspeaker used is similar to that employed in the RCA Victor Superette R–7.

A reference to the RCA Radiola 86 Service Notes will give the details of any service work necessary in conjunction with the motor board assembly.

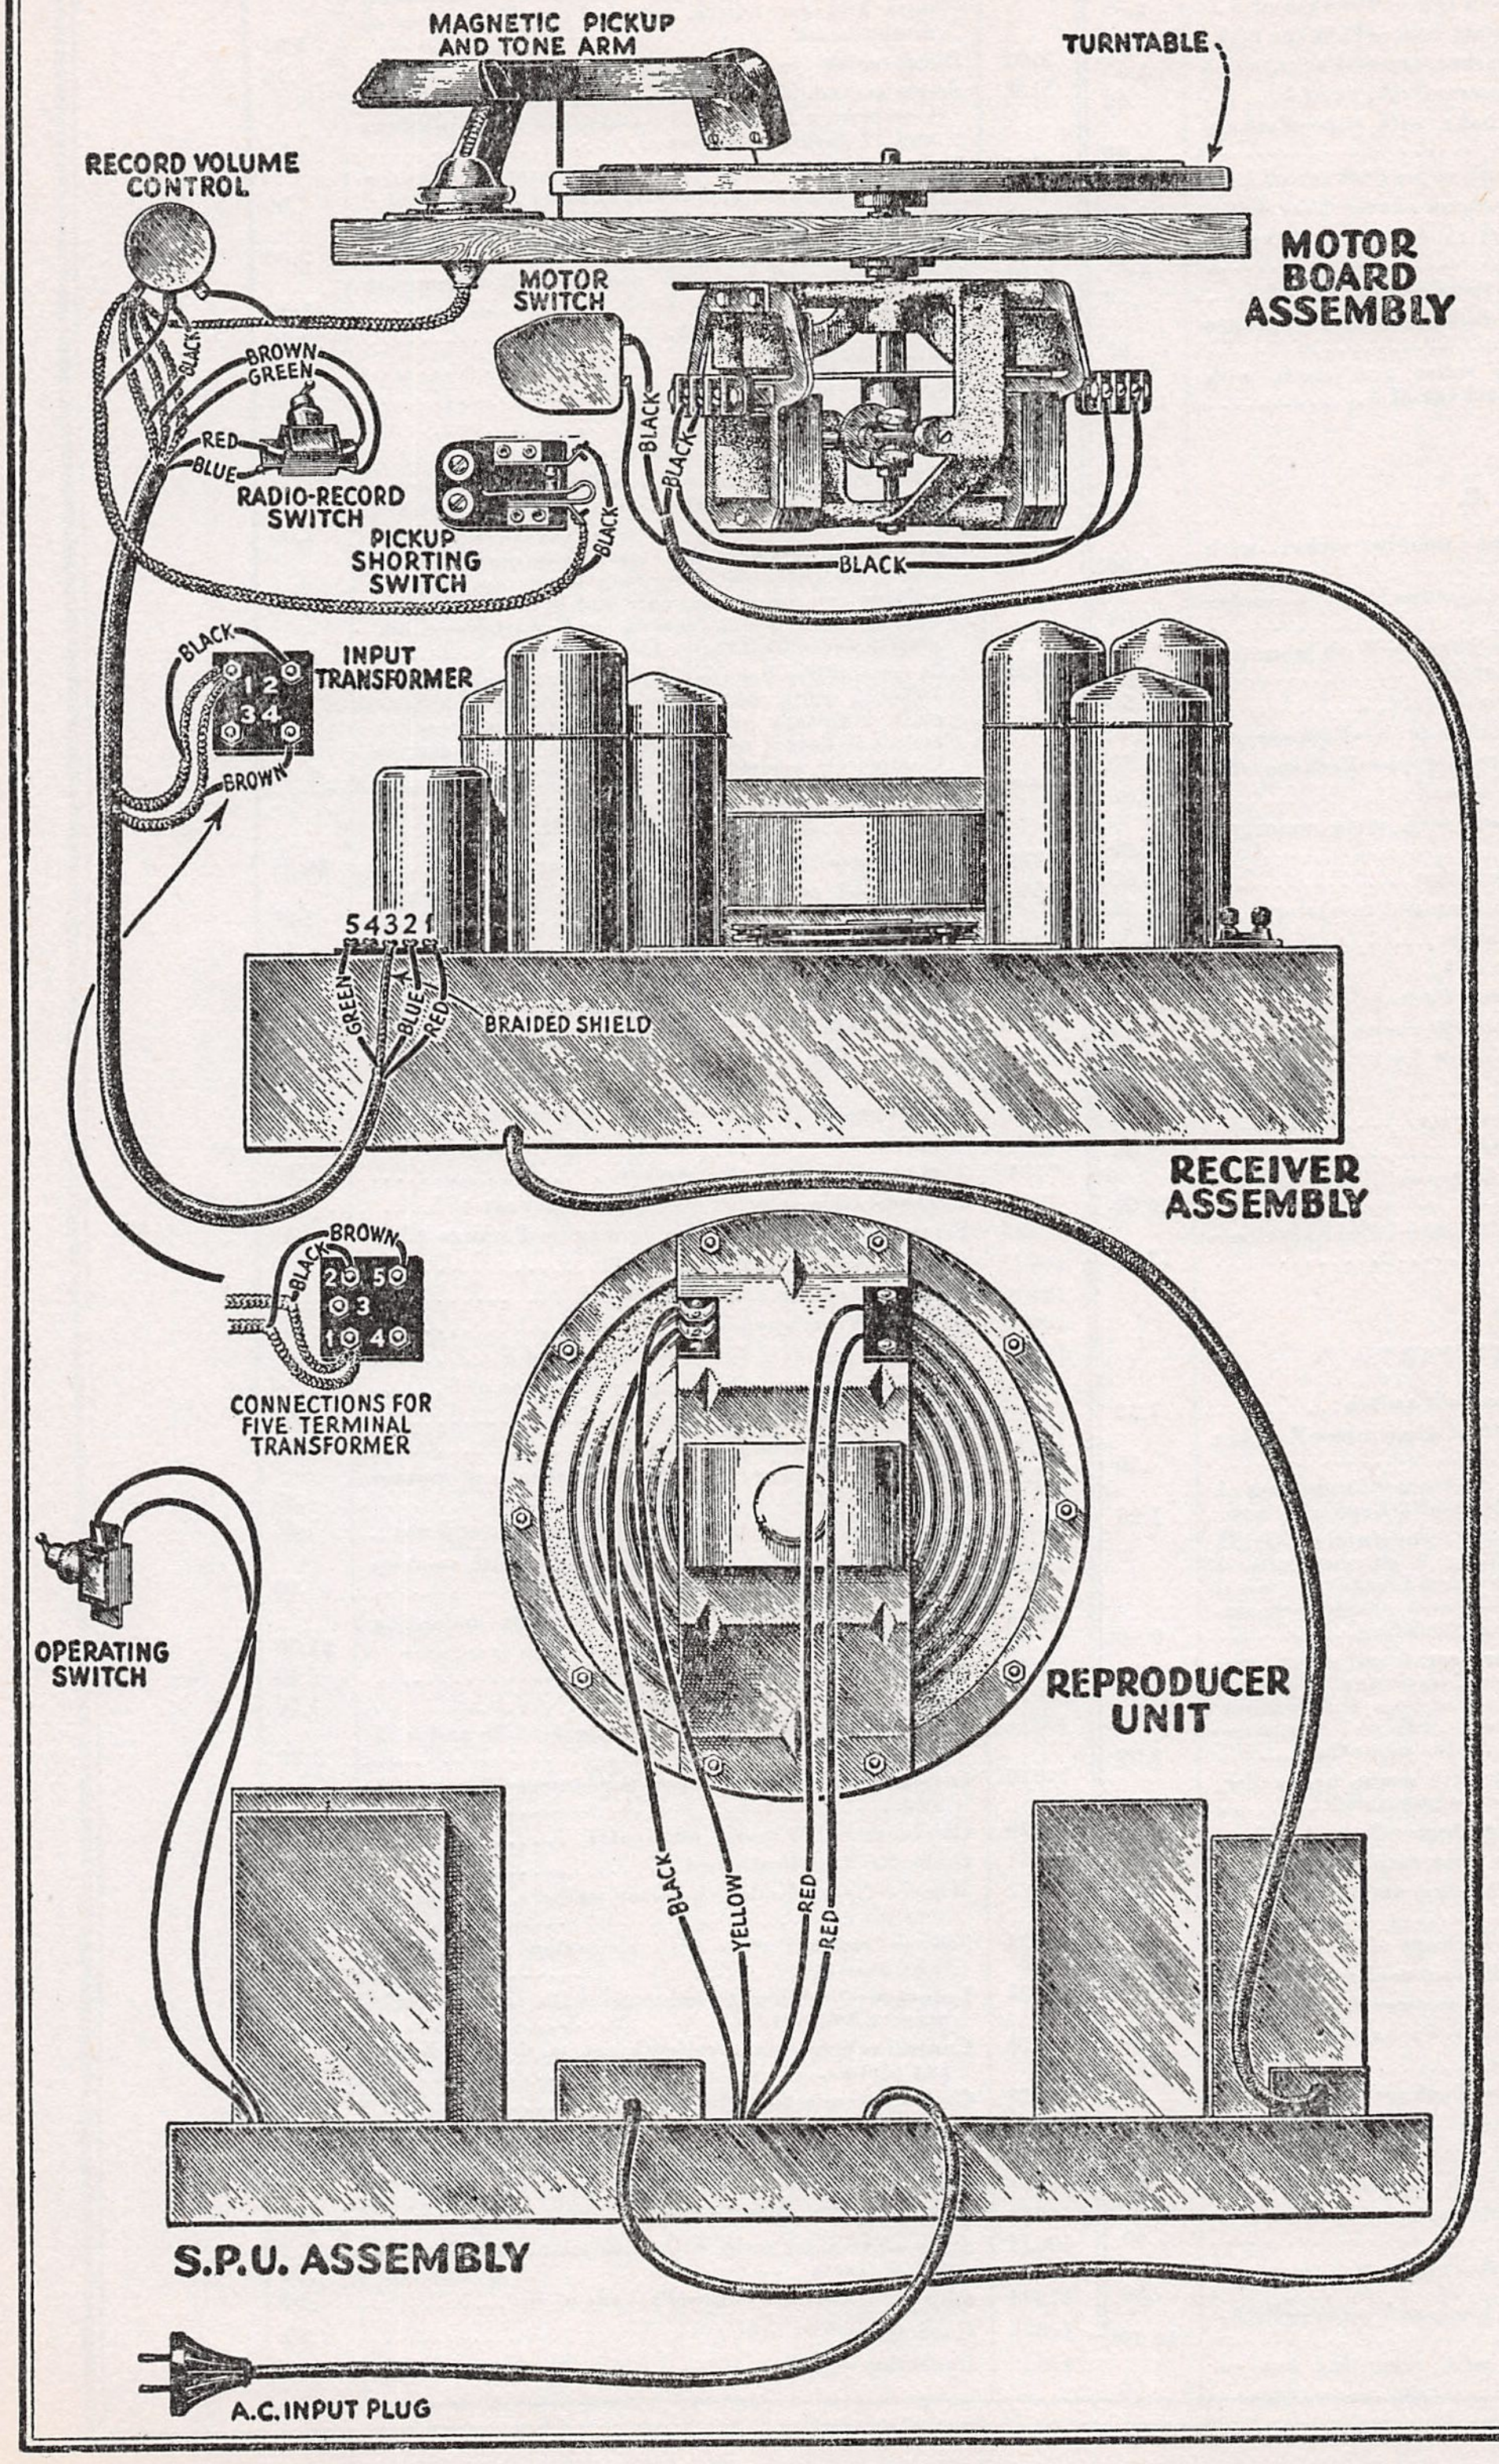
MAGNETIC PICKUP AND TONE ARM
TURNTABLE
RECORD VOLUME CONTROL
MOTOR BOARD ASSEMBLY
MOTOR SWITCH
BLACK
BROWN
GREEN
RED
BLUE
RADIO-RECORD SWITCH
PICKUP SHORTING SWITCH
BLACK
BLACK
BLACK
BLACK
INPUT TRANSFORMER
1 2
3 4
BROWN
5 4 3 2 1
GREEN
BLUE
RED
BRAIDED SHIELD
RECEIVER ASSEMBLY
BROWN
BLACK
2 5
3
1 4
CONNECTIONS FOR FIVE TERMINAL TRANSFORMER
OPERATING SWITCH
REPRODUCER UNIT
BLACK
YELLOW
RED
RED
S.P.U. ASSEMBLY
A.C. INPUT PLUG

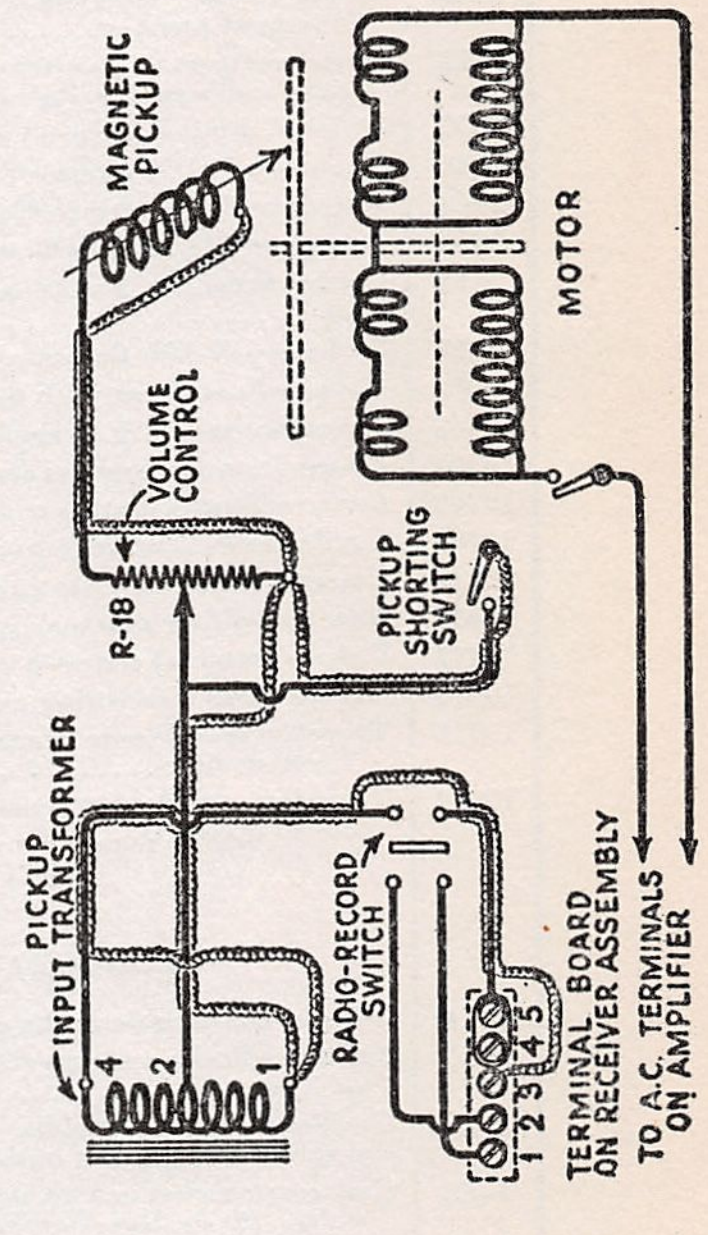
MAGNETIC PICKUP
MOTOR
VOLUME CONTROL
R-18
PICKUP SHORTING SWITCH
PICKUP INPUT TRANSFORMER
4
2
1
RADIO-RECORD SWITCH
1 2 3 4 5
TERMINAL BOARD ON RECEIVER ASSEMBLY
TO A.C. TERMINALS ON AMPLIFIER

Schematic Diagram of Motor Board

MODEL RE-73
Parts List

R. C. A. VICTOR CO., INC.

REPLACEMENT PARTS

Stock No.	DESCRIPTION	List Price
	RECEIVER ASSEMBLY—Continued	
10838	Resistor—9000 ohms—Carbon type—Package of 5	$2.50
10839	Resistor—130 ohms—Carbon type—Package of 5	2.50
10840	Resistor—2800 ohms—Carbon type—Package of 5	2.50
10841	Resistor—1½ megohm—Carbon type—Package of 5	2.50
10842	Capacitor—10 mfd. condenser—Package of 2	.60
10843	Shield—Radiotron shield body with cap—Package of 1 set	.90
10844	Shield—Coil shield body with cap—Package of 1 set	.90
10851	Panel—Radio chassis escutcheon panel—Less dial	3.00
10920	Cable—Wiring cable—Used to connect receiver to amplifier	2.75
10948	Spring—Tuning condenser spring—Package of 5	.50
10949	Link—Tuning condenser link—Bakelite—Package of 5	.60
10969	Roller—Tuning condenser roller and shaft with eyelet screw and nut—Package of 5	.50
	S. P. U.	
2721	Socket—UX-245 Radiotron double socket with insulator and rivets	1.00
2722	Resistor—55 ohm—Mid-tapped—Wire wound—Filament resistor	1.00
2723	Switch—Operating switch—Toggle—With mounting nuts and washer—Package of 5	3.00
2757	Strip—Terminal strip—Two contact	.50
2880	Resistor—70,000 ohms—Carbon type—Package of 5	3.00
2963	Resistor—8,000 ohms—Carbon type—Package of 5	2.50
7053	Resistor—715 ohms—Wire wound	.70
7054	Cord—Amplifier power cord with male connector plug	1.00
7075	Socket—UX-280 Radiotron socket	1.80
7224	Cover—Fuse cover with bushing and insulator	.50
10845	Transformer—A. F. transformer	14.00
10907	Fuse—3 amperes—Package of 5	1.00
10908	Cover—Terminal strip cover—Package of 2	.50
10909	Condenser—Condenser bank—60 cycles	16.00
10910	Capacitor—Extra filter capacitor for 25 cycles	5.00
10911	Reactor—Filter reactor	4.50
10912	Strip—Terminal strip—8 contacts	.70
10913	Cable—Amplifier wiring cable	2.00
10915	Transformer—Power transformer—105–125 volts—25–40 cycles	16.00
10917	Transformer—Power transformer—105–125 volts—50–60 cycles	12.00
	PHONOGRAPH PARTS	
2614	Switch—Automatic brake contact switch	1.40
2615	Springs—Brake springs—Set of 4 springs—Package of 2 sets	.50
2620	Cushions—Pickup rubber cushion—Comprising 1 damper and 2 pivot cushions—Package of 5 sets	1.25
2622	Coil assembly—Located nearest governor—105–125 volts, 25 cycles—Comprising 2 current coils, 1 voltage coil, laminated core, end bracket, terminal board, nuts, bolts, screws and washers—Completely assembled ready for mounting	9.00
2623	Coil assembly—Located farthest from governor—105–125 volts, 25 cycles—Comprising 2 current coils, 1 voltage coil, laminated core and bracket, terminal board nuts, bolts, screws and washers—Completely assembled ready for mounting	9.00
2691	Governor—Comprising shaft with worm, brake disc, weights, springs and screws—Assembled	5.25
2692	Bearings—Governor shaft bearings—One set of 2	1.35
2693	Gear—Governor drive worm gear with set screw	1.35
2695	Bearings—Threaded thrust bearing with lock nut for end of turntable spindle	.50
2759	Box—Needle box with lid—Package of 2	.60
2765	Screw—Pickup needle holding screw—Package of 10	.80
2766	Screw—Pickup cover mounting screw—Package of 10	.50
2767	Spring—Pickup magnet spring—Package of 10	.50
2768	Armature—Pickup armature	.50
2770	Plate—Pickup damper plate—Package of 5	.50
2771	Screw—Pickup damper plate mounting screw—Package of 10	.50
2787	Switch—Pickup shorting switch	1.00
2789	Cord—Motor cord—Connects motor coil and starting switch	.60
2826	Cable—Shielded cable from shorting switch to record volume control	.50
2829	Knob—Motor board lifting knob and screw—Package of 2	$0.50
2858	Rest—Pickup rubber rest with mounting brad—Package of 5	.50
3052	Screw assembly—Pickup pole piece mounting screw, nut, washer—Package of 10 sets	.50
3101	Switch—Record-radio toggle switch with mounting nuts and escutcheon plate—Located on top of motor board	1.25
3102	Receptacle—Needle receptacle	.75
3158	Screw assembly—Motor mounting screw assembly—Comprising 3 screws, 3 bushings, 3 metal washers and 12 cushion washers	.80
3162	Regulator—Speed regulator with mounting screws—Comprising cam and shaft, bushing and bracket	.80
3163	Escutcheon—Speed regulator escutcheon with mounting screw—Package of 5	2.00
3164	Control—Record volume control with mounting washer and nut—Less knob	1.70
3167	Magnet—Pickup magnet	2.60
3168	Coil—Pickup coil	.85
3169	Shoe—Pickup pole shoe R. H.	1.45
3170	Shoe—Pickup pole shoe L. H.	1.45
3249	Sleeve—Spindle sleeve complete with set screw	.50
6067	Lever—Speed control regulator lever for motor—Comprising lever, spring, mounting bolt, nut and washer	1.60
6069	Coil assembly—Located nearest governor—105–125 volts, 60 cycles—Comprising 2 current coils, 1 voltage coil, laminated core end bracket, terminal board, nuts, bolts, screws and washers—Completely assembled ready for mounting	8.40
6070	Coil assembly—Located farthest from governor—105–125 volts, 60 cycles—Comprising 2 current coils, 1 voltage coil, laminated core, end bracket, terminal board, nut, bolts, screws and washers—Completely assembled ready for mounting	8.40
	RECEIVER ASSEMBLY	
2012	Condenser—1200 MMFD. condenser	$0.55
2546	Resistor—1 megohm—Carbon type resistor—Package of 5	3.00
2746	Socket—Dial lamp socket	.50
2747	Cap—Contact cap—Package of 5	.50
2748	Posts—Twin binding posts with lock washers and nut—Antenna and ground	.50
2804	Knob—Volume or station selector knob—Package of 5	2.50
2966	Resistor—28,000 ohm—Carbon type—Package of 5	2.50
2970	Resistor—½ megohm—Carbon type—Package of 5	2.50
7124	Socket—UY Radiotron socket	.80
7303	Dial—Station selector dial scale—Package of 5	3.00
10426	Screw—Cam wheel adjusting screw—Package of 20	.50
10805	Shield—Round condenser shield	.75
10806	Shield—Variable condenser shield	1.50
10807	Shield—White enamel lamp shield	.60
10808	Indicator—Dial indicator—Package of 5	.50
10809	Plate—Cover plate with screw—Package of 5	.50
10810	Roller—Cam roller—Package of 5	.50
10811	Condenser—Variable condenser	3.50
10812	Shaft—Cam roller shaft with washer and nuts—Package of 2	.50
10813	Control—Tone control with plate washers and nut	1.60
10814	Shield—Filter coil and capacitor shield with washers and nuts—Package of 2	.60
10815	Coil—Filter coil and capacitor with mounting screws, lock washers and nuts	$1.50
10816	Coil—3rd R. F. coil	1.60
10817	Coil—Link coil	1.50
10818	Condenser—Bank of two condensers—0.25 and 0.75 mfd.	1.80
10819	Condenser—Bank of three condensers—Three 0.1 mfd.	1.80
10820	Condenser—100 mmfd. condenser	.50
10821	Coil—Resistor board coil	.80
10822	Wheel—Cam wheel with spring washers, cup washer and pin	2.60
10824	Strip—Terminal strip with insulation and rivet—Two contact	.50
10825	Inductor—Stabilizing inductor with screw, lock washer and nut	2.20
10826	Control—Volume control with nut, washer and locking plate	2.50
10828	Coil—Antenna coupling coil	1.50
10829	Coil—1st R. F. coil	1.60
10830	Coil—2nd R. F. coil	1.60
10831	Strip—Terminal strip with link	.70
10832	Socket—UX Radiotron single socket with insulator	.60
10833	Strip—Terminal strip with insulation and rivets—Six contacts	.70
10834	Clip—Tube socket clips—Package of 10	.50
10835	Capacitor—0.01 mfd.	.50
10837	Capacitor—Bank of three 0.1 mfd. capacitors	.75

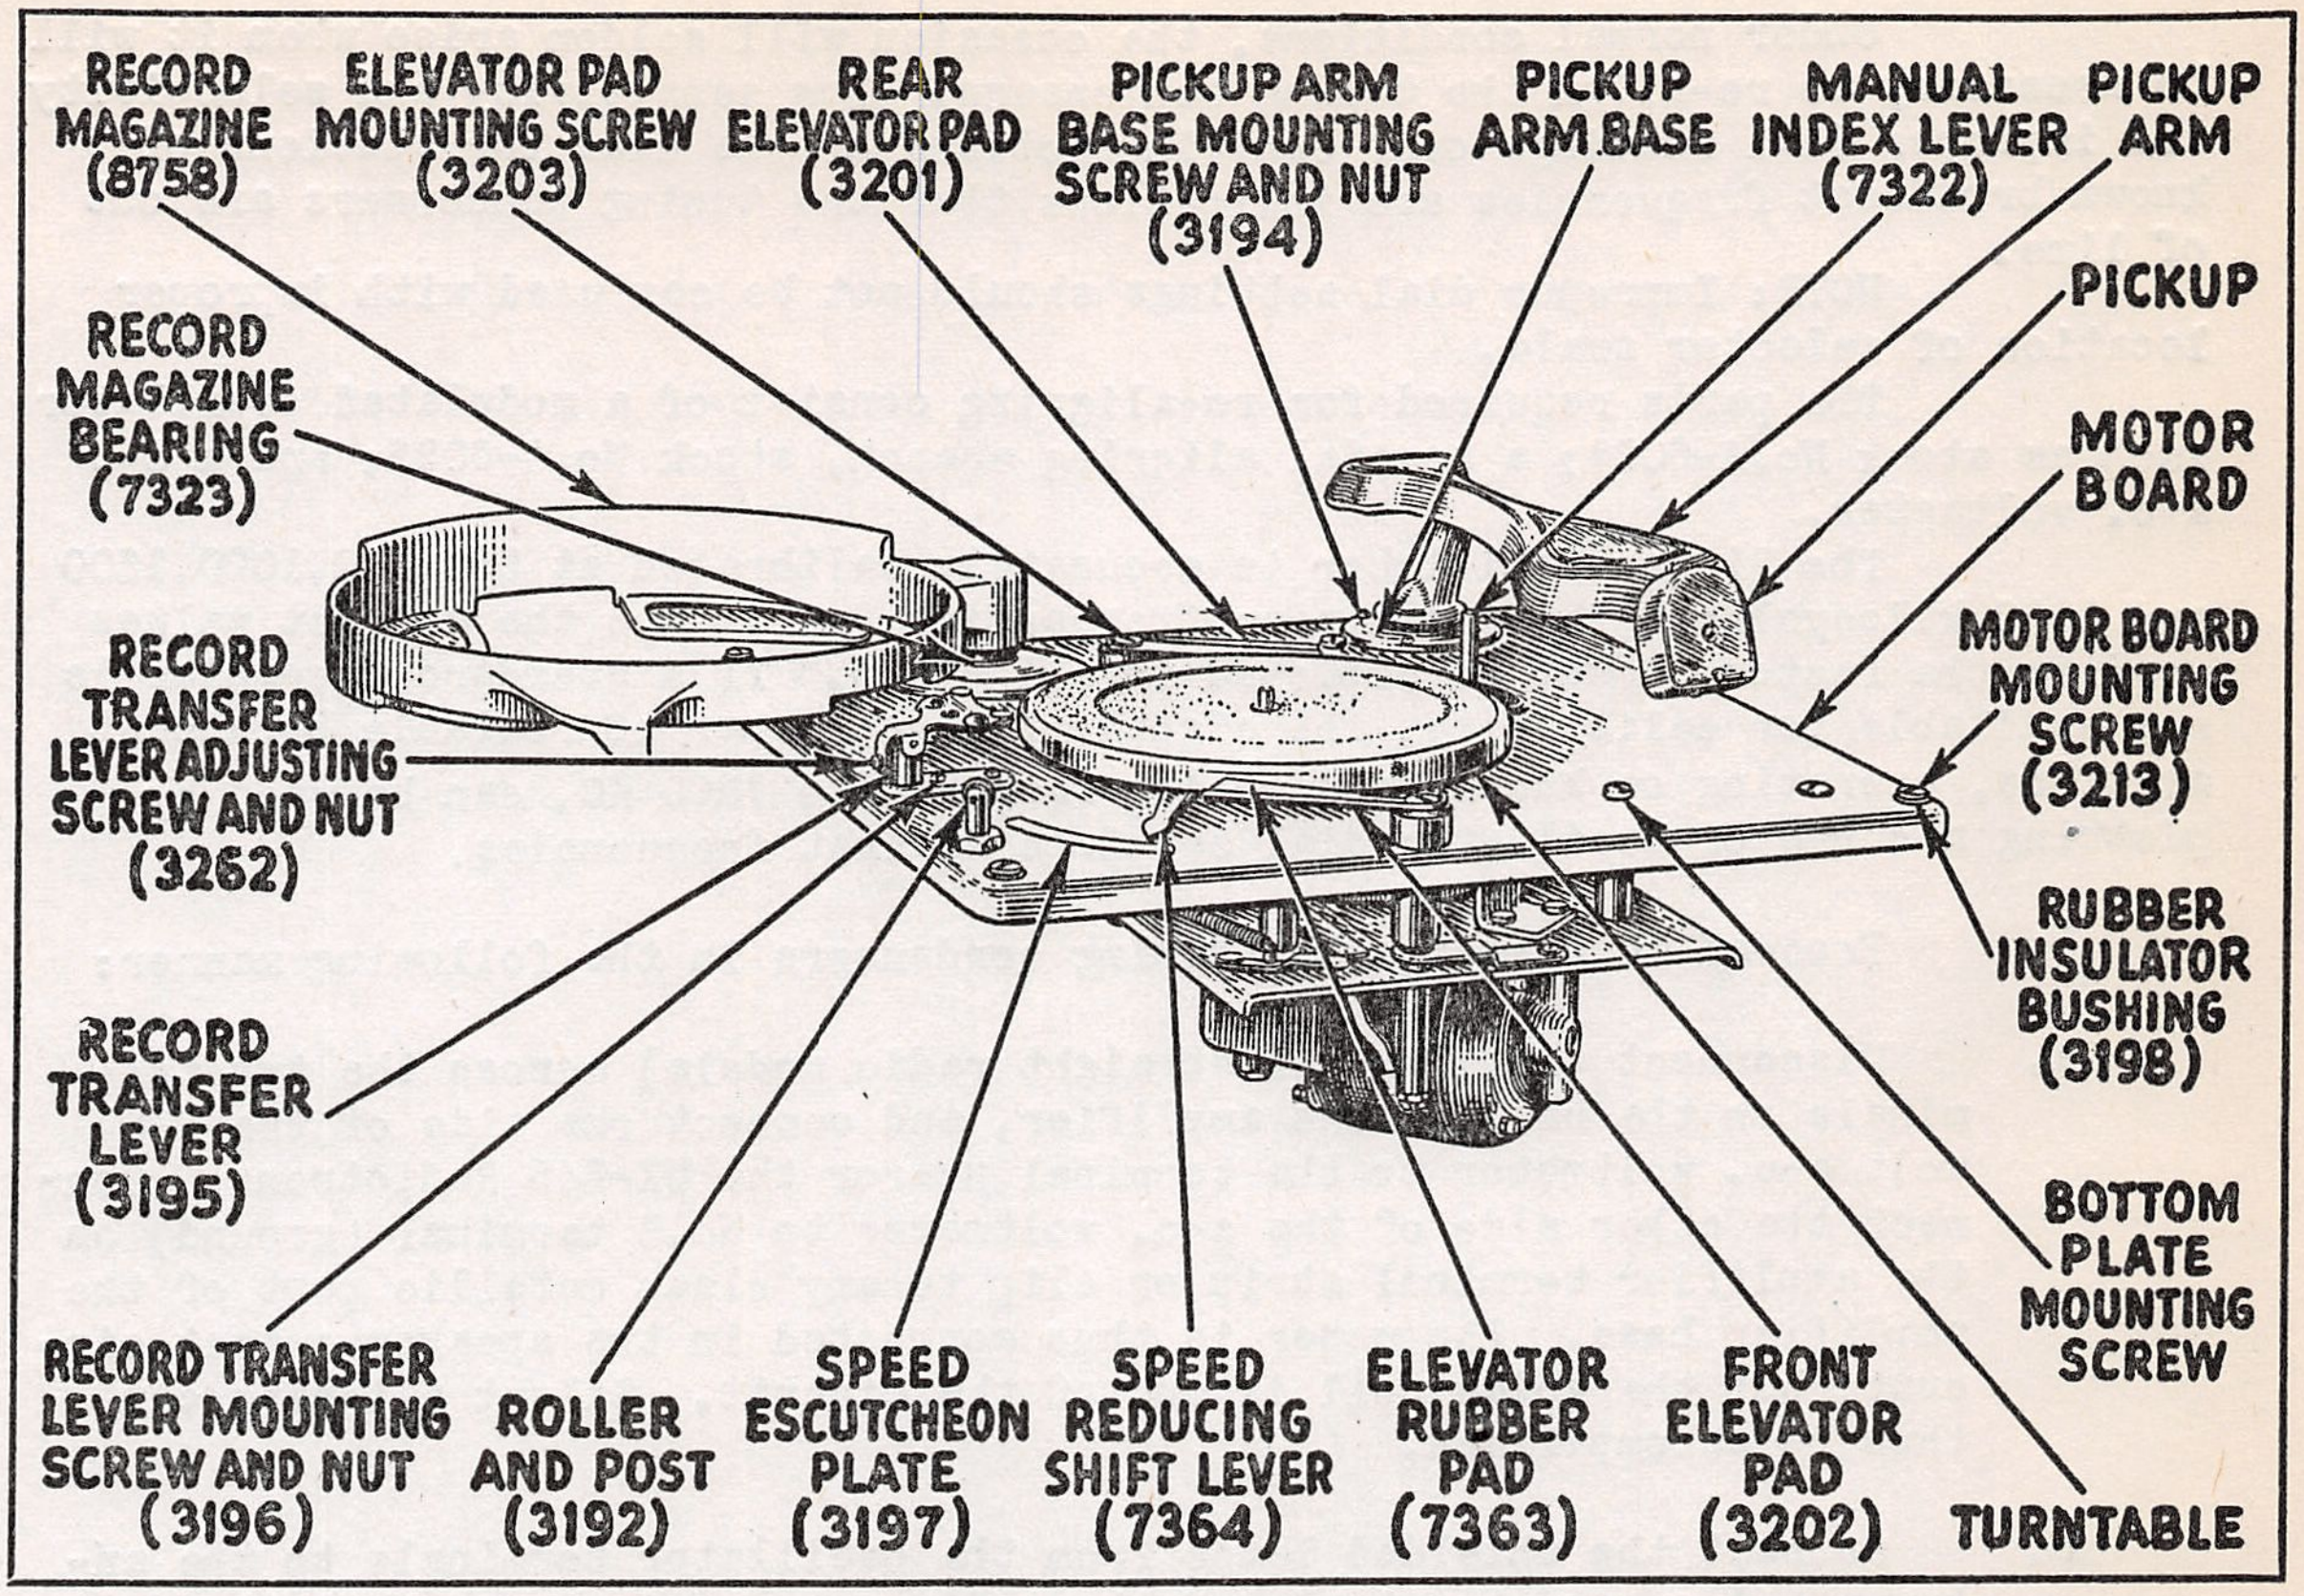
RECORD MAGAZINE (8758)
ELEVATOR PAD MOUNTING SCREW (3203)
REAR ELEVATOR PAD (3201)
PICKUP ARM BASE MOUNTING SCREW AND NUT (3194)
PICKUP ARM BASE
MANUAL INDEX LEVER (7322)
PICKUP ARM
PICKUP
MOTOR BOARD
MOTOR BOARD MOUNTING SCREW (3213)
RUBBER INSULATOR BUSHING (3198)
BOTTOM PLATE MOUNTING SCREW
RECORD MAGAZINE BEARING (7323)
RECORD TRANSFER LEVER ADJUSTING SCREW AND NUT (3262)
RECORD TRANSFER LEVER (3195)
RECORD TRANSFER LEVER MOUNTING SCREW AND NUT (3196)
ROLLER AND POST (3192)
SPEED ESCUTCHEON PLATE (3197)
SPEED REDUCING SHIFT LEVER (7364)
ELEVATOR RUBBER PAD (7363)
FRONT ELEVATOR PAD (3202)
TURNTABLE

Top view of mechanism showing parts

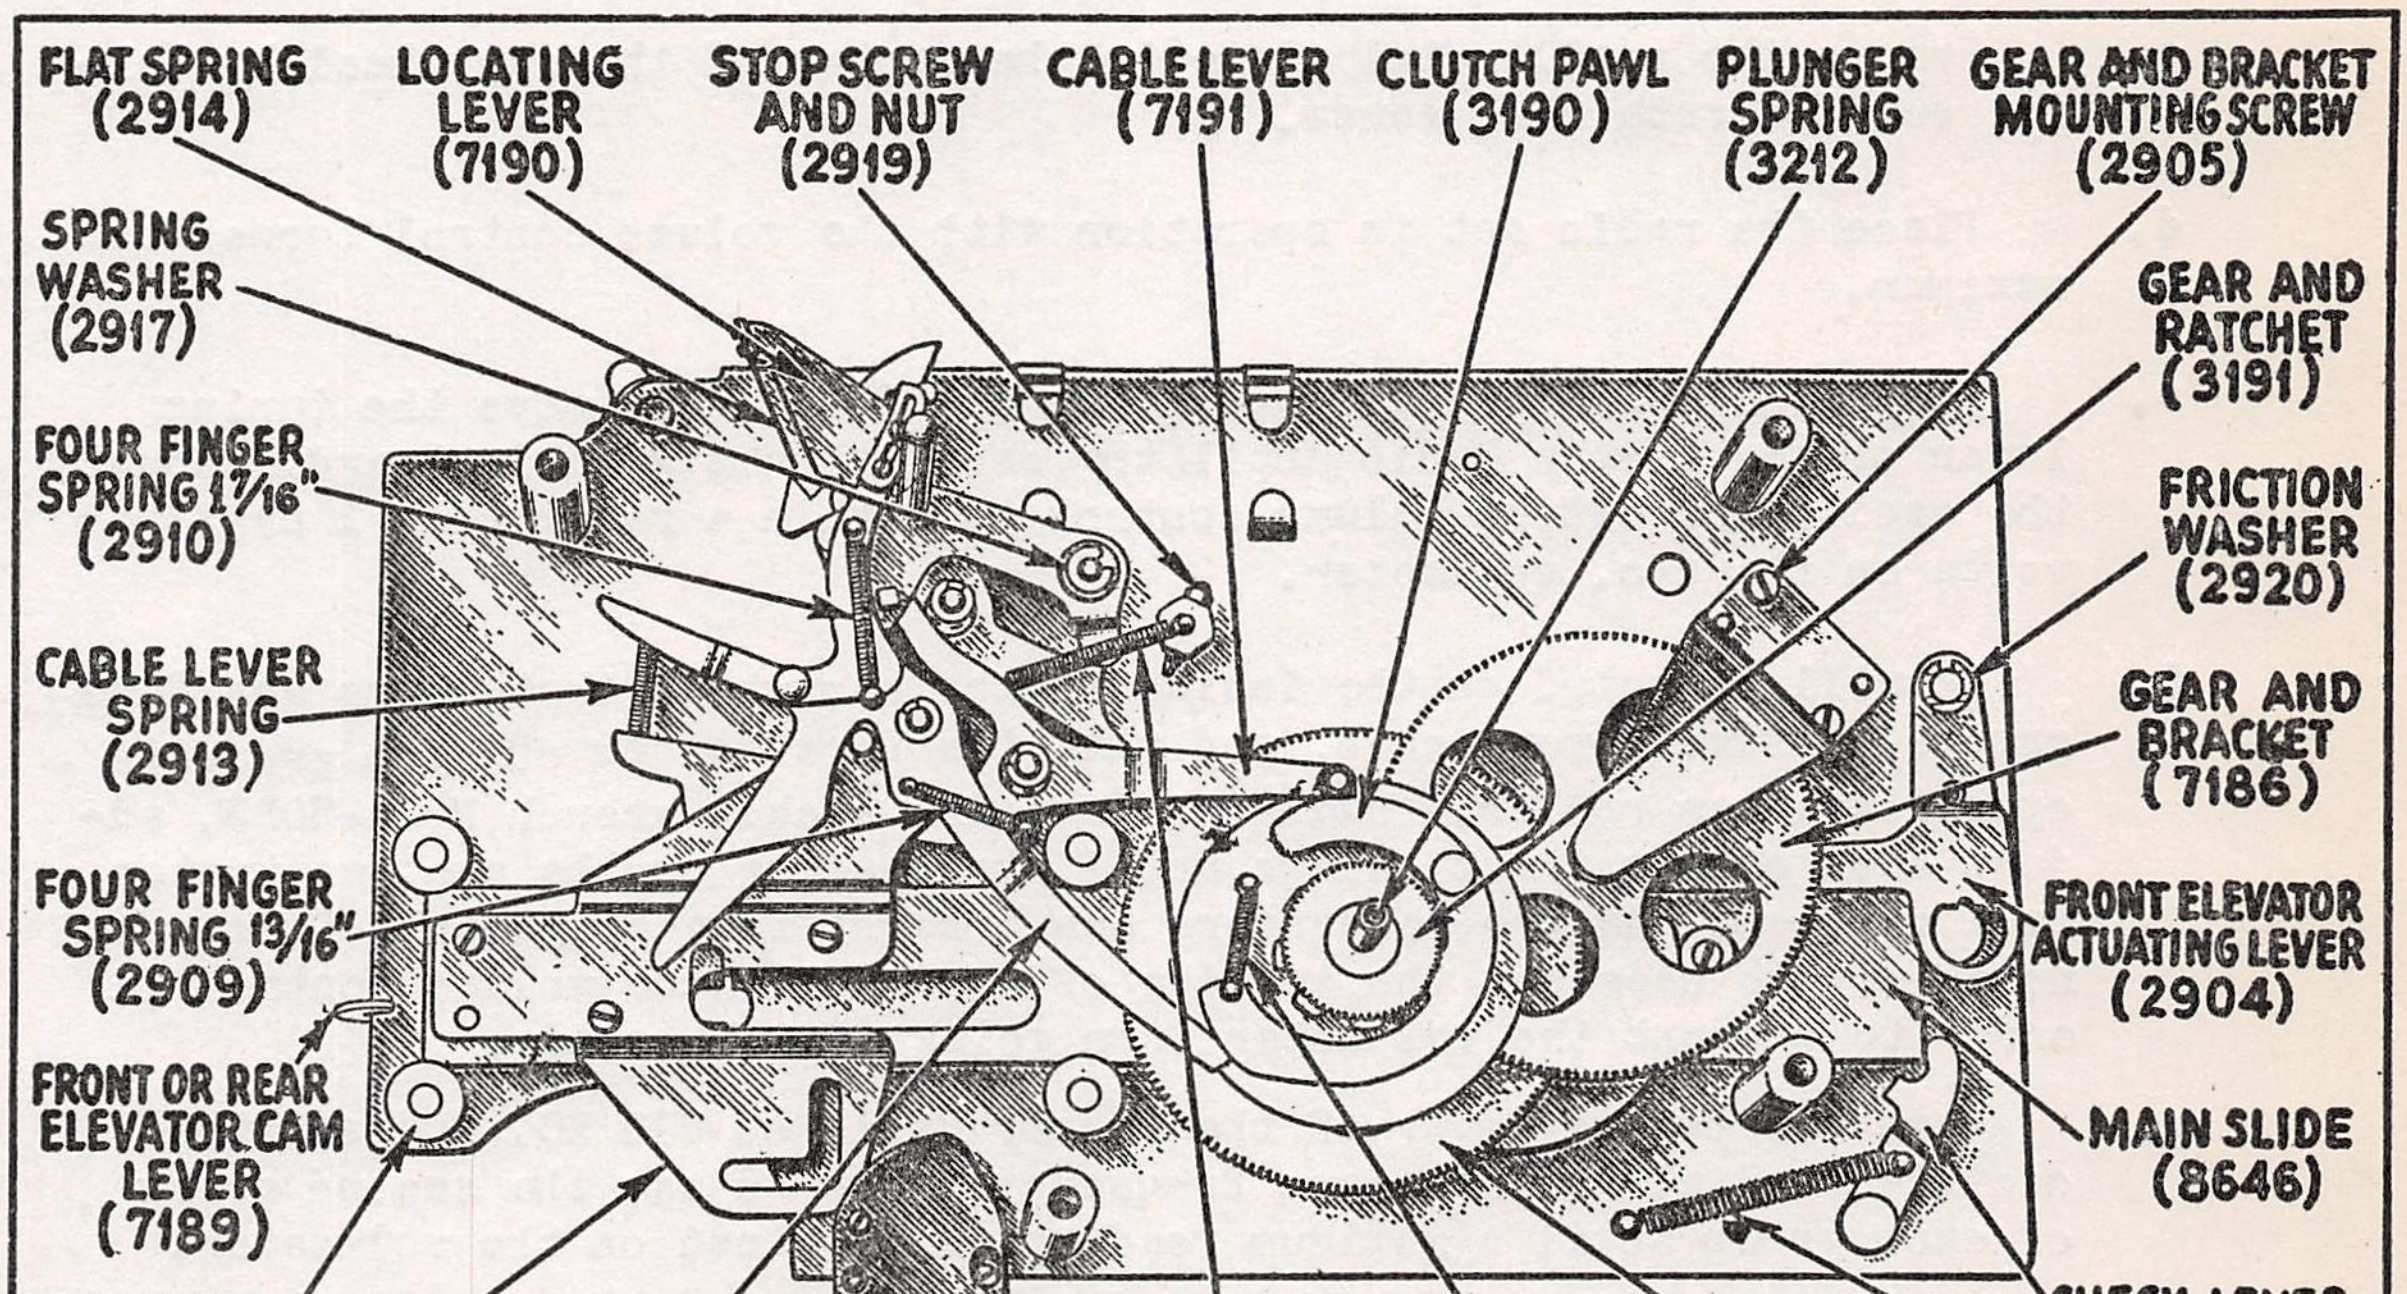
FLAT SPRING (2914)
LOCATING LEVER (7190)
STOP SCREW AND NUT (2919)
CABLE LEVER (7191)
CLUTCH PAWL (3190)
PLUNGER SPRING (3212)
GEAR AND BRACKET MOUNTING SCREW (2905)
SPRING WASHER (2917)
GEAR AND RATCHET (3191)
FOUR FINGER SPRING 1 7/16" (2910)
FRICTION WASHER (2920)
CABLE LEVER SPRING (2913)
GEAR AND BRACKET (7186)
FOUR FINGER SPRING 13/16" (2909)
FRONT ELEVATOR ACTUATING LEVER (2904)
FRONT OR REAR ELEVATOR CAM LEVER (7189)
MAIN SLIDE (8646)
ROLLER AND STUD (2912)
CHECK LEVER (3217)
SLIDE BRACKET (7188)
FOUR FINGER LEVER (8647)
SWITCH (2614)
INDEX LEVER SPRING (2918)
CLUTCH PAWL SPRING (2908)
CAM AND GEAR (7192)
CHECK LEVER SPRING (2906)

Top view of mechanism with plate removed

Under normal conditions, the occasion will seldom arise when it will be necessary to re-align the tuning condensers. Low sensitivity and selectivity and improper dial settings over certain sections of the dial for stations of known broadcast frequencies are indications that the tuning condensers are out of line.

NOTE: Improper dial settings should not be confused with improper location of selector scale.

The parts required for re-aligning consist of a modulated oscillator such as stock No.A-6004; a special aligning wrench, stock No.A-6085; and a 0-8 a-c. voltmeter.

The Victor oscillator is accurately calibrated at 550,710,1000,1300 and 1500 kilocycles. These aligning frequencies, which are the correct values used in the factory, must be employed in all cases. If a standard wavemeter is not available for calibrating, the signals from a number of reliable broadcast stations, operating on known frequencies from 550 to 1500 KC, can be used by plotting a curve of oscillator dial settings against frequencies.

Proceed to re-align the tuning condensers in the following manner:

a. Disconnect the link (on straight radio models) across the two terminals on the base of the amplifier, and connect one side of the 0-8 volt a-c. voltmeter to the terminal nearer the UX-245 Radiotrons. Connect the other side of the a-c. voltmeter to No.3 terminal (ground) on the amplifier terminal strip or clip to any clean metallic part of the amplifier base. The meter is thus connected in the speaker output circuit, but the voice coil is out of the circuit. Silent aligning can thus be accomplished.

b. Connect the shielded leads from the oscillator terminals to the antenna and ground terminals of the radio set, making sure that the ground wire is still connected to the radio chassis.

c. Remove the small metal plate in the center of the cam wheel by taking out the retaining screw.

d. Place the radio set in operation with the volume control turned to maximum.

e. Place the oscillator in operation at 550 KC. and move the tuning lever of the Victor Radio until the oscillator signal is heard. Adjust the oscillator output volume control to obtain a reading of 2 or 3 volts on the a-c. voltmeter.

f. It will be noted on the inside of the cam wheel that there are five groups of five screws each, and that the first screw of each group is opposite a cam roller. Using the special socket wrench No.A-6085, adjust each of the first screws until the reading on the a-c. voltmeter is a maximum. As the condensers are brought into alignment, it may be necessary to decrease the setting of the oscillator volume control in order to prevent the voltmeter from going off the scale.

g. Move the tuning lever of the Victor Radio to 710 KC. and set the oscillator dial at this same frequency. Now adjust the second screw of each group until a maximum reading is obtained on the voltmeter.

h. Repeat this procedure for 1000 KC., 1300 KC., and 1500 KC. The alignment is now complete. The flexible cam strip around the outer edge of the cam wheel assures perfect alignment between the aligning frequencies mentioned.

i. Remove all oscillator and meter connections, and reconnect the link (or wire in the case of combination models).

SERVICE NOTES

for

RCA Victor Automatic Record Changing Mechanism

The RCA Victor Automatic Record Changing Mechanism is used in RCA Victor Models RAE-26, RAE-59 and RAE-79. Except for the finish of exposed parts, these units are identical. This mechanism is of simple, fool-proof design and will perform efficiently with a minimum of service requirements. Features of this mechanism are; continuous playing of one side of ten 10-inch records, operation at either 33⅓ or 78 R.P.M. for playing standard or Program Transcription records manually or automatically, a special clutch to prevent jamming in case of failure of a part and a heavy duty motor operating at synchronous speed thereby eliminating any need for regulating devices. A general view of the mechanism is shown on the cover page. Figure 1 shows the schematic wiring diagram.

The Replacement Parts for this mechanism are listed in the Service Notes on each individual instrument. The identification nomenclature given on pages 10 and 11, will be found useful in identifying parts. Where parts are identical in all models the Stock Number of each part is given in addition to its name.

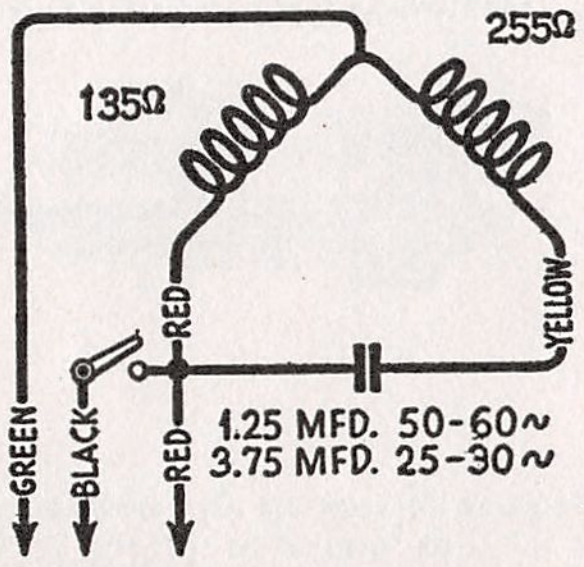

Figure 1—Schematic Diagram

INSTALLATION

After unpacking the instruments in which this mechanism is used, it is imperative that certain preliminary checks be made before they are placed in operation. These checks should be performed in the order given and any adjustments found necessary must be made.

1. When installing the instrument it is advisable to see that all parts are properly lubricated without excessive grease or oil on any parts. This is especially important in the speed reducing unit. A lack of oil in the spindle bearings or between the sprocket and the surface upon which it rests, may be the cause of a "wow" at slow speed. Also excessive grease on the gears or on the damper pads may cause this same condition. The motor should be lubricated with light oil once every six months. Oil holes are provided at each end of the motor. Once a year the turntable and speed reducing unit should be removed and all exposed gears thoroughly cleaned and lubricated with light grease. All bearings should be lubricated with oil. Be careful not to lose the spiral spring in the end of the spindle or the washers under the turntable and speed reducing unit.

2. The motor board must be level. This should be checked both ways by means of a small spirit level. Placing the cabinet legs on the same surface will usually insure the motor board being level.

3. A small spring is located in the center of the turntable spindle. Be sure that this is in position before placing the turntable on the spindle. After placing the turntable on the spindle make sure that the spindle nose may be easily depressed. If it is not, then remove the turntable and turn the spring upside down or replace it with a new spring.

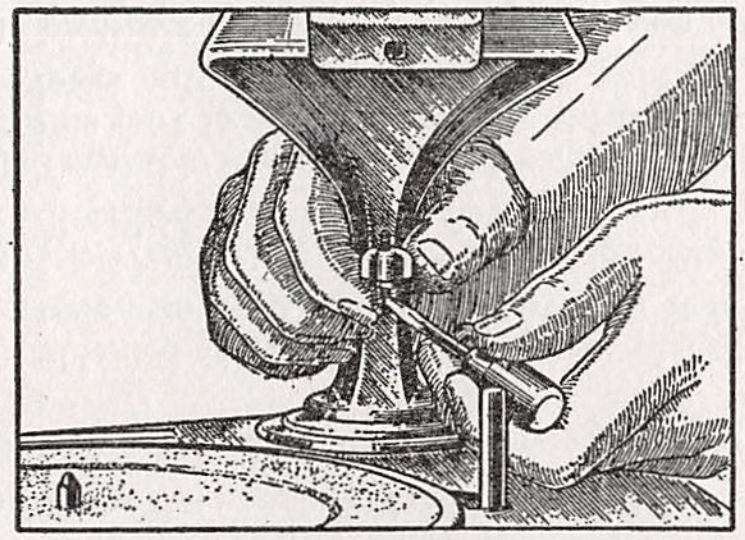

Figure 2—Adjusting height of tone arm

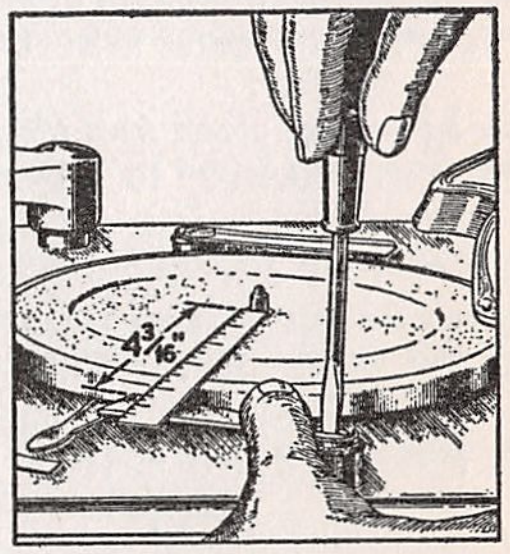

Figure 3—Adjusting elevator pad

4. Examine the wire cable that is attached to the back of the tone arm. It should be seated on the small pulleys over which it passes.

5. Place a Home Recording needle into the pickup as far as it will go. Then lower the pickup on the side of the turntable. The needle should extend from 1/32" to 1/16" below the top of the metal edge of the turntable. If it does not, an adjustment can be made by means of a screw located under the tone arm. Lifting the arm provides accessibility to the screw. See Figure 2.

6. If when starting the automatic mechanism, the needle lowers onto the smooth outer rim of the record but fails to swing into the first groove, it may be caused by the following:
   (a) Cabinet not level. Check as indicated in Paragraph 1.
   (b) Weak tension in spring. A flat spring presses against the tone arm lever on the under side of the motor board. See Figure 17 Page 11. Bending it so as to increase its tension against the tone arm lever will cause the needle to swing into the first record groove. Be careful not to bend it too much as excessive tension will cause the needle to skip several grooves.

7. After the instrument has completed one record changing operation, a ten inch record should extend about three-quarters way over each elevator pad. If this condition does not exist, an adjustment can be made by means of the screws that hold the pads in position. A pair of pliers heavily padded with cloth or other soft material should be used to hold the elevator shafts while loosening and tightening the screws. The distance from the closest part of either pad to the edge of the spindle is approximately 4 3/16". Figure 3 shows the method of making this adjustment.

If any adjustments are necessary other than the foregoing, a reference to the Service Date section of this booklet should be made.

Remember That the Control Lever Can Be Changed from Automatic to Manual Only When the Mechanism is Not Changing Records

SERVICE DATA

The following Service information will be found useful in making any adjustments or correction of any irregular operation that may be necessary. All the major adjustments are accessible from the rear of the cabinet. For the sake of clearness the illustrations in this text do not show the cabinet background.

No special tools are required other than a small offset screw driver. (Stock No. 2930) A stand consisting of three Stock No. 7203 will be found useful in supporting the mechanism should removal from the cabinet be required.

(1) SPEED VARIATIONS (WOW)

A variation in the speed of the turntable evidenced by distortion on long sustained notes when playing Program Transcription records may be caused by any of the following:

(a) Improper operation. It is very important when changing the speed shift lever from 78 R.P.M. operation to 33⅓ R.P.M. operation, to place the hand on the turntable and hold it until it is positively engaged by the driving mechanism.

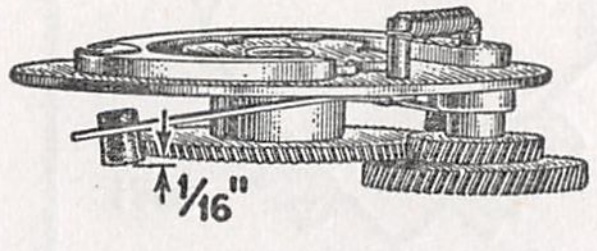

Figure 4—Adjustment of damper pads

(b) Lack of proper lubrication. It is important that excessive grease on the gear reducing mechanism be avoided and that sufficient oil is present between the ratchet and the surface upon which it rests. Also clean and oil the spindle bearing and wipe off any excess lubricant that may be on the damper pads or the drive gear upon which it rests.

(c) Improper Adjustment of the Damper Pads. The damping pads with the necessary springs are provided to place a load on the 33⅓ R.P.M. driving gear at all times while it is in operation. Placing such a load on the gear takes up any possible play and reduces the possibility of a "wow" during operation at the slower speed.
Adjust these pads by slipping each spring to one side and bend them until they are 1/16" beyond the opposite surface upon which they rest. (See Figure 4).

(d) Washers Not in Place. A metal washer is placed directly under the speed reducing mechanism and a leather washer directly over it, both washers being over the spindle. These washers must be in their proper position. Also if the leather washer has become hard it must be replaced.

(e) In some cases, removing the speed reducing mechanism and turning it approximately 90° and then replacing it, may eliminate a "wow" caused by improper meshing of the gears.

(2) ADJUSTMENT OF MAGAZINE ROLLER

The magazine roller should be set in such a position that the plane of the roller is 90° to a line drawn from the center of the magazine bearing to the center of the roller. The height should be adjusted so that it will just touch the magazine when it is empty.

(3) FAILURE OF NEEDLE TO LOWER PROPERLY

Failure of the needle to lower onto the smooth outer rim of the 10-inch records when the instrument is playing automatically may be caused by:

(a) Improper Tone Arm Setting. Loosen the set screws as shown in Figure 5. With the mechanism out of its cycle, press the locating lever at a point near the flat spring until the lever strikes the stop screw. Holding the locating lever, Figure 17, in this position, move the front portion of the trip lever, Figure 15, until the pin against which the flat spring presses, is making contact with the locating lever. Holding the two levers in this position, move the pickup arm until the needle is 1/16" from the first groove of a standard 10-inch record. Now retighten the two set screws shown in Figure 5.

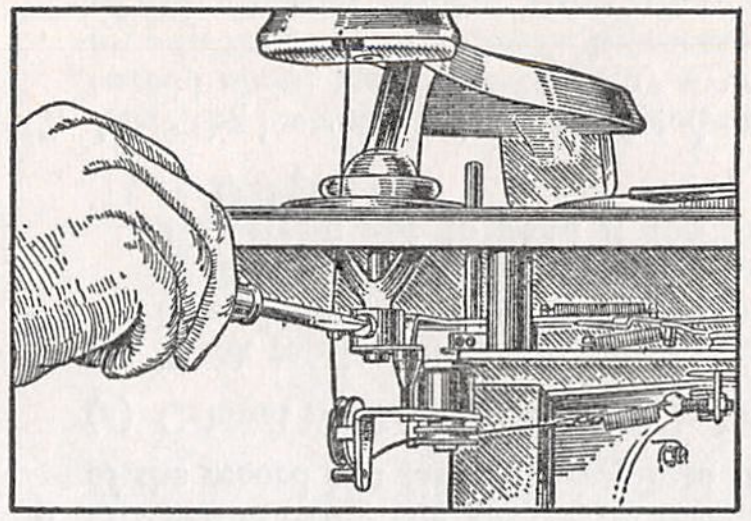

Figure 5—Adjusting position of tone arm

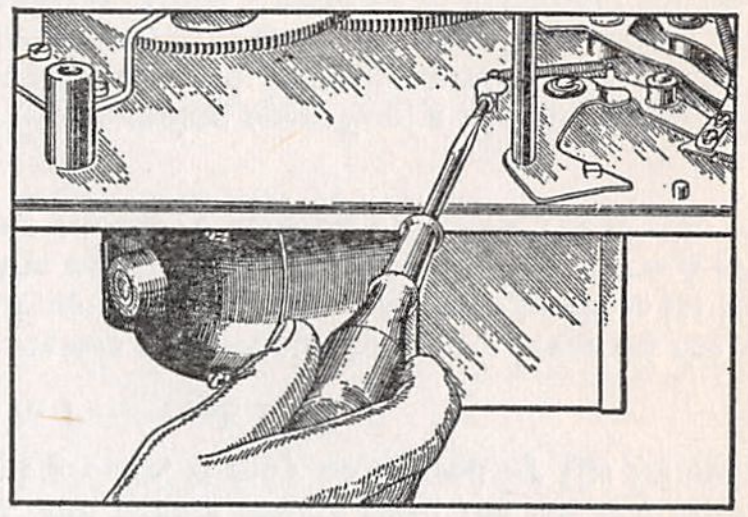

Figure 6—Adjusting tone arm locating screw

(b) Improper adjustment of tone arm locating screw. This adjustment, shown in Figure 6, can be used to make a substitute adjustment for that described in (a), when the mechanism is out of the cabinet. Make the adjustment so that the needle will lower exactly 1/16" from the first groove on a standard 10-inch record. Loosen the lock nut on the adjusting screw by means of a No. 4 Spintite wrench on which the shoulder has been ground sufficiently thin for clearance. *Do not attempt to make this adjustment without first loosening the lock nut.* Tighten the lock nut when the proper adjustment has been made.

(4) FAILURE OF NEEDLE TO LOWER ONTO RECORD SURFACE

Failure of the needle to lower onto the record surface may be caused by:

(a) Cable out of pulley. Examine the tone arm cable and ascertain that it is seated in the pulley.

(b) Shielded pickup wire improperly placed. Examine the shielded lead coming out of the tone arm base and make sure that it is free from the moving parts of the mechanism.

(c) Incorrect setting of tone arm lowering screw. Check the position of the tone arm as described in Paragraph 5, Page 4.

(d) Turntable washer not in place. A leather washer is supplied to fit under the turntable. If this part is not in place, the turntable will be too low, and may cause the needle not to lower onto the record.

(e) Incorrect adjustment of cable tension screw. The cable tension screw shown in Figure 7 should be so adjusted that the needle will lower smoothly onto the record without dropping. When this adjustment is obtained, the cable will be slightly loose when the needle is lowered onto a record. Loosen the lock nuts, turn the screw to the right or left as required and retighten the lock nut. Check the adjustment to make sure that the needle clears the record on the return of the tone arm. The needle should rise 1/16" from the record before any horizontal motion takes place.

(5) NEEDLE FAILS TO CLEAR RECORD AFTER PLAYING

Failure of the needle to clear the record surface on the return of the tone arm is caus loose adjustment of the cable tension. Adjust this tension as described in Section 4, Para

(6) FAILURE OF RECORD TO DEPOSIT ON TURNTABLE

Incorrect lowering of the record onto the turntable may be caused by:

(a) Improper turntable spindle height. The height of the turntable spindle nose should be approximately 1/32" above the inside bottom surface of the record magazine. Adjustment of this height made by means of the screw at the bottom of the motor. (See Figure 8).

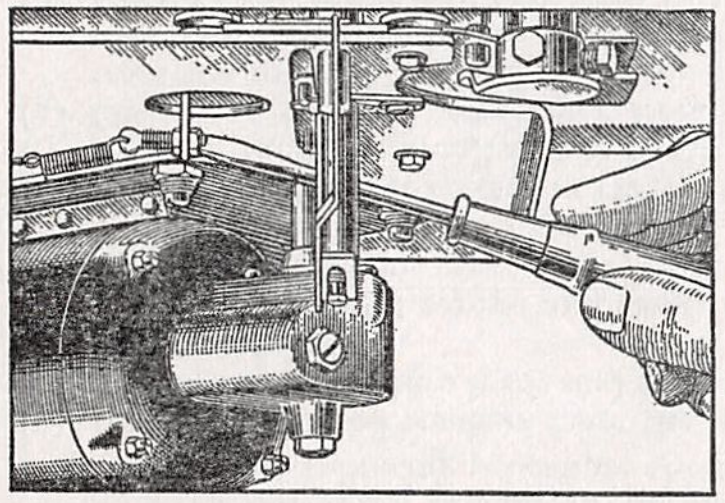

Figure 7—Adjusting tone arm cable tension screw

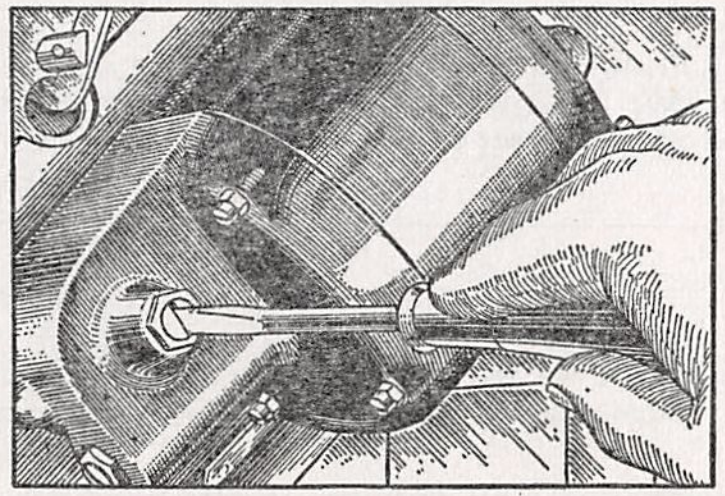

Figure 8—Adjusting spindle height

(b) Improper setting of magazine. The horizontal swing of the magazine should be so adjusted when the mechanism is out of cycle that the outer surface at its nearest point to the nearest side of the turntable spindle is 5 1/32". This can be done by loosening the two screws as shown in Figure 9, moving the magazine to its correct position and retightening the screws.

(c) Improper height of record transfer lever. The small plate on top of the motor board at the left side of the turntable should be so adjusted that it will depress approximately 1/32" when the magazine swings over the turntable. When this adjustment is made correctly, the transfer lever will engage the bottom record in the magazine as the latter is swinging back into the playing position. A small adjusting screw and lock nut are provided for this adjustment. See Figure 10.

(d) Improper Position of Record Transfer Lever. When a ten-inch record is placed so that its edge touches both pins on the record transfer lever, a line drawn from the center of the hole of the lever to the center of the record hole should pass directly over the center of the spindle. See Figure 11. The two record transfer lever mounting screws can be loosened and the lever shifted until this condition exists. Also when a record is on the turntable it should just clear this lever. Unless this adjustment is properly made the record may not center properly over the spindle.

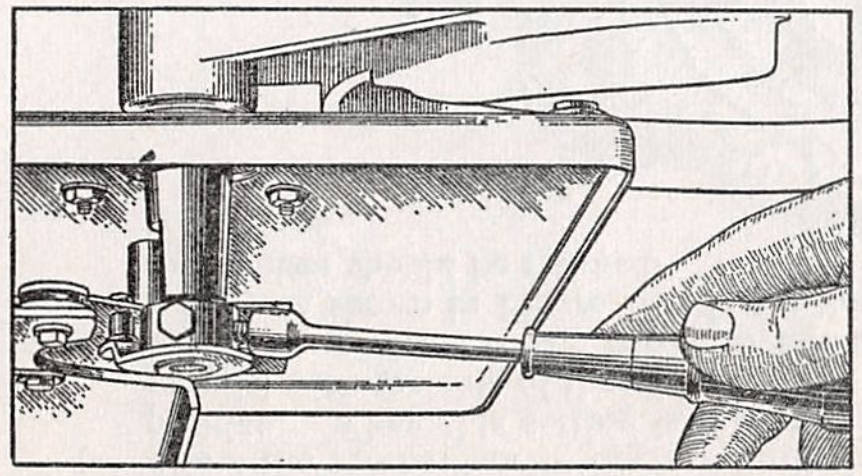

Figure 9—Magazine adjustments

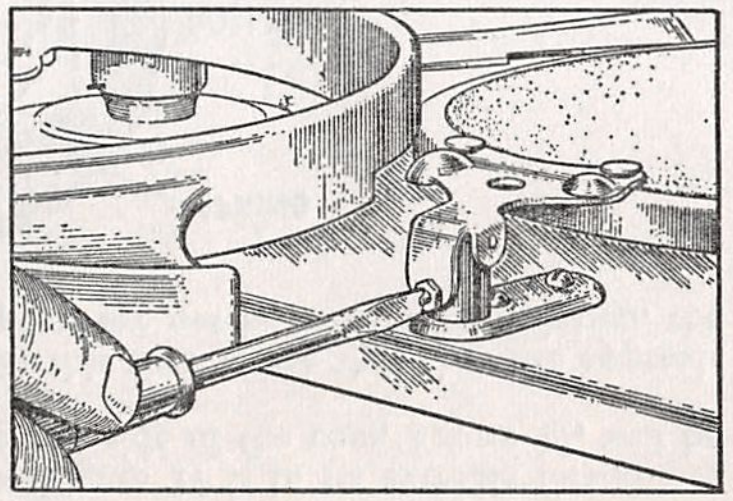

Figure 10—Record transfer lever adjustment

(e) Weak spring in turntable spindle. The spring inside the turntable spindle which holds up the spindle nose will cause the records to align improperly with the turntable spindle if the spring tension is too weak or if the spindle nose is sticking inside the spindle. Access to the spring for stretching the coils or for replacement can be obtained by removing the turntable.

(7) RECORDS DISCHARGED IMPROPERLY FROM TURNTABLE

Failure of the Record on the turntable to be removed and placed in the magazine can be caused by:

(a) Improper horizontal adjustment of elevator pads. The elevator pads Figure 16, should be so adjusted that the inside of the pad flange is 4 3/16" from the nearest side of the turntable spindle. See Figure 3. Loosen the screw on top of the elevator shaft, move the pad to its correct position, holding both the pad and the elevator shaft in position and tighten the screw. Care should be observed that the ridge in the elevator shaft is not turned against the slot in the elevator shaft actuating lever so as to cut the latter. Grip the shaft with padded pliers while this adjustment is being made in order to prevent the shaft from turning. If for any reason the elevator pads have been removed, always place the one with the rubber surface toward the front of the mechanism when replacements are being made.

(b) Improper adjustment of elevator shaft. The elevator shafts should rise to such a height as to give 1/16" clearance between the lowest surface of the elevator pad bottom and the top of the empty magazine. This adjustment can be made by means of the screw and lock nut as shown in Figure 12.

(8) FAILURE TO TRIP ON ECCENTRIC GROOVE

Failure of the mechanism to change records when the eccentric groove is reached may be caused by:

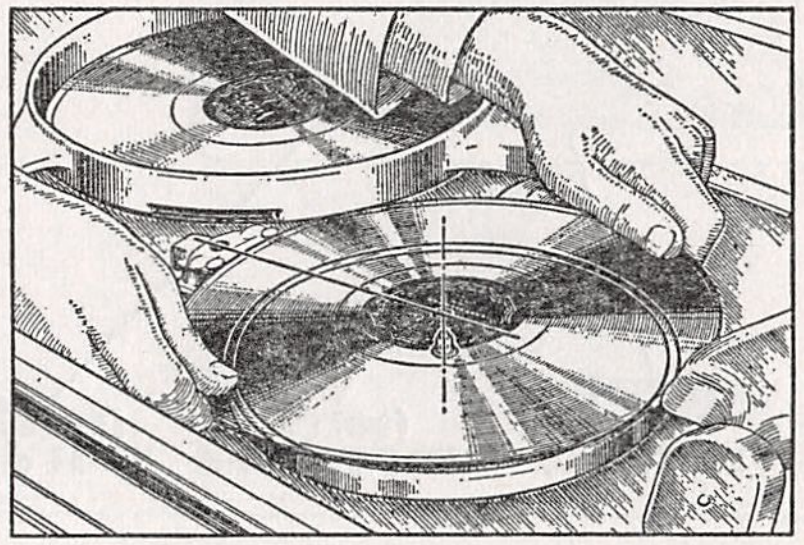

Figure 11—Method of checking transfer lever lateral adjustment

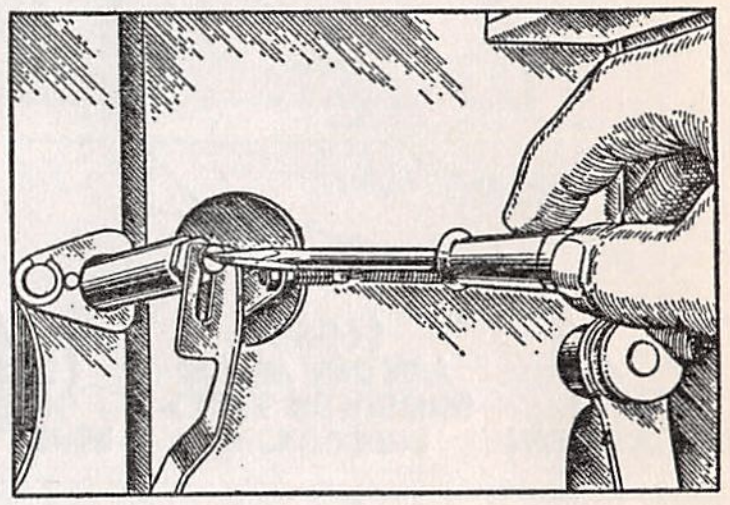

Figure 12—Adjusting height of elevator shaft

(a) Improper setting of the latch plate. Adjust the latch plate, Figure 17, by means of a small offset screw driver such as Stock No. 2930, until it makes proper contact with the latch trip when the eccentric groove is reached.

(b) Weak spring on trip lever. A weak spring on the latch trip lever will be a cause of failure to trip.

(9) INABILITY TO SET FOR MANUAL OPERATION

The manual operation lever should set in its back position so as to free the tone arm and prevent the mechanism from tripping. *This change from automatic to manual operation should be made only when the mechanism is out of its cycle, otherwise the mechanism will reject continuously.* The back position of the lever should be such that the end of the lever causes the latch trip to clear the latch plate by 1/32". An incorrect setting of the latch plate may cause the trip lever to clear the plate at one position of the tone arm, but to make contact with the plate at some other position of the tone arm. Check this point when adjusting the latch plate.

(10) FAILURE TO STOP

Failure of the mechanism to stop after the "off" button has been pressed, and the mechanism has completed its cycle is caused by improper setting of the secondary stop switch. See Figure 17. The switch body should be so mounted that the contacts will open 1/32" when the cycle is completed, but will close as soon as the mechanism has tripped.

(11) CONTINUED TRIPPING OF MECHANISM

This condition may be caused by:

(a) Manual operation lever set for non-automatic operation during cycle.

(b) Improper setting of latch plate.

(c) Improper timing of gears and associated parts. See Section 13 for the correct method of retiming.

(12) CLUTCH SLIPPING

Slipping of the clutch when the mechanism is passing through the cycle causing a loud clicking noise, may be caused by:

(a) Weak spring on pawl carrier. Remove the pawl spring Figure 17, and increase its tension by removing two or three coils.

MODEL RE-73
Notes Part 4

R. C. A. VICTOR CO., INC.

(b) Turntable spindle shaft too low. This condition will cause binding between the pawl carrier and the clutch wheel. Raise the spindle as shown in Figure 8.
(c) Binding in any of the moving parts. Such binding may be in the slide, the magazine, the elevator shaft or the gears. The slide rollers at the left are mounted on eccentric shafts for adjustment of play. These may be so regulated as to cause excessive binding of the slide. Examine all of these parts carefully, and take any necessary steps to relieve the binding.

(13) RETIMING THE MECHANISM

Should it be necessary to retime the mechanism after replacing parts, or because of continued tripping proceed in the following manner:

(a) Allow the mechanism to operate until the slide Figure 17 is in its extreme forwarding position. When this setting is reached the straight side of the cam, Figure 17, will be parallel with the side of the slide.
Check the position of the trip lever and roller at this time to see that they are approximately as shown in Figure 13. If the various parts are not in their proper relation, the mechanism should be retimed.

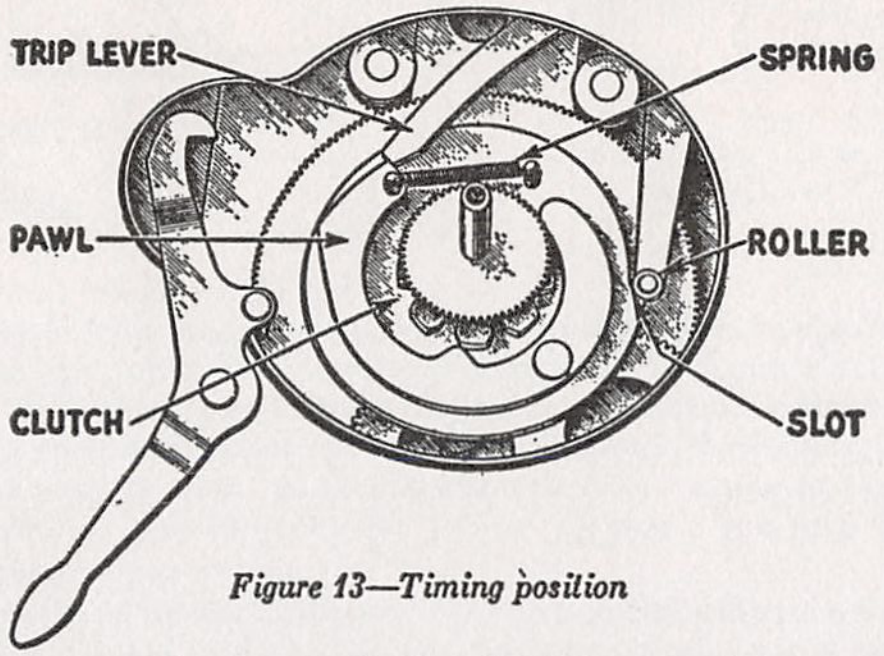
TRIP LEVER
SPRING
PAWL
ROLLER
CLUTCH
SLOT

Figure 13—Timing position

(b) Loosen the set screw in the clutch wheel and lift the wheel from the turntable spindle.
(c) Lift the pawl carrier until it disengages from the gear.
(d) Lower the pawl carrier into mesh with the gears so that the trip lever is touching the end of the pawl as shown in Figure 13, when the cable lever roller is engaged in the slot on the side of the pawl carrier as shown.
(e) Recheck to see that the straight side of the cam is parallel with the slide.
(f) Replace the clutch wheel and retighten the set screw, making sure that the set screw fits into the spot on the turntable spindle.

(14) REMOVING MOTOR BOARD

Should it be necessary to remove the motor board from the mechanism for replacement of any of the parts, the following procedure should be used:

(a) Remove nuts and washers from the bolts which hold the motor board to the cabinet, and disconnect the pickup leads and power wiring to the mechanism. Then lift the mechanism from the cabinet.
(b) Loosen the two set screws and remove the magazine lever Figure 9.
(c) Lift out magazine.
(d) Unhook tone arm cable from spring.
(e) Loosen the two set screws in the tone arm lever.
(f) Remove the three small screws in the tone arm base, taking care not to lose the lock nuts.
(g) Disengage the tone arm lever from the tone arm shaft and carefully lift the tone arm from the motor board, bringing the tone arm lever and the shielded cable up through the tone arm base hole in the motor board.
(h) Remove the screw and lock nuts in the bottom of the elevator shaft.
(i) Lift elevator shaft from mechanism.
(j) Unfasten wires from motor board.
(k) Remove the four motor board screws which support the bottom plate.
(l) Carefully lift the motor board from the mechanism.

Access can now be had to all the parts on the bottom plate. The parts can be assembled in the reverse order from that given above. It will then be necessary to make various adjustments after the parts have been reassembled.

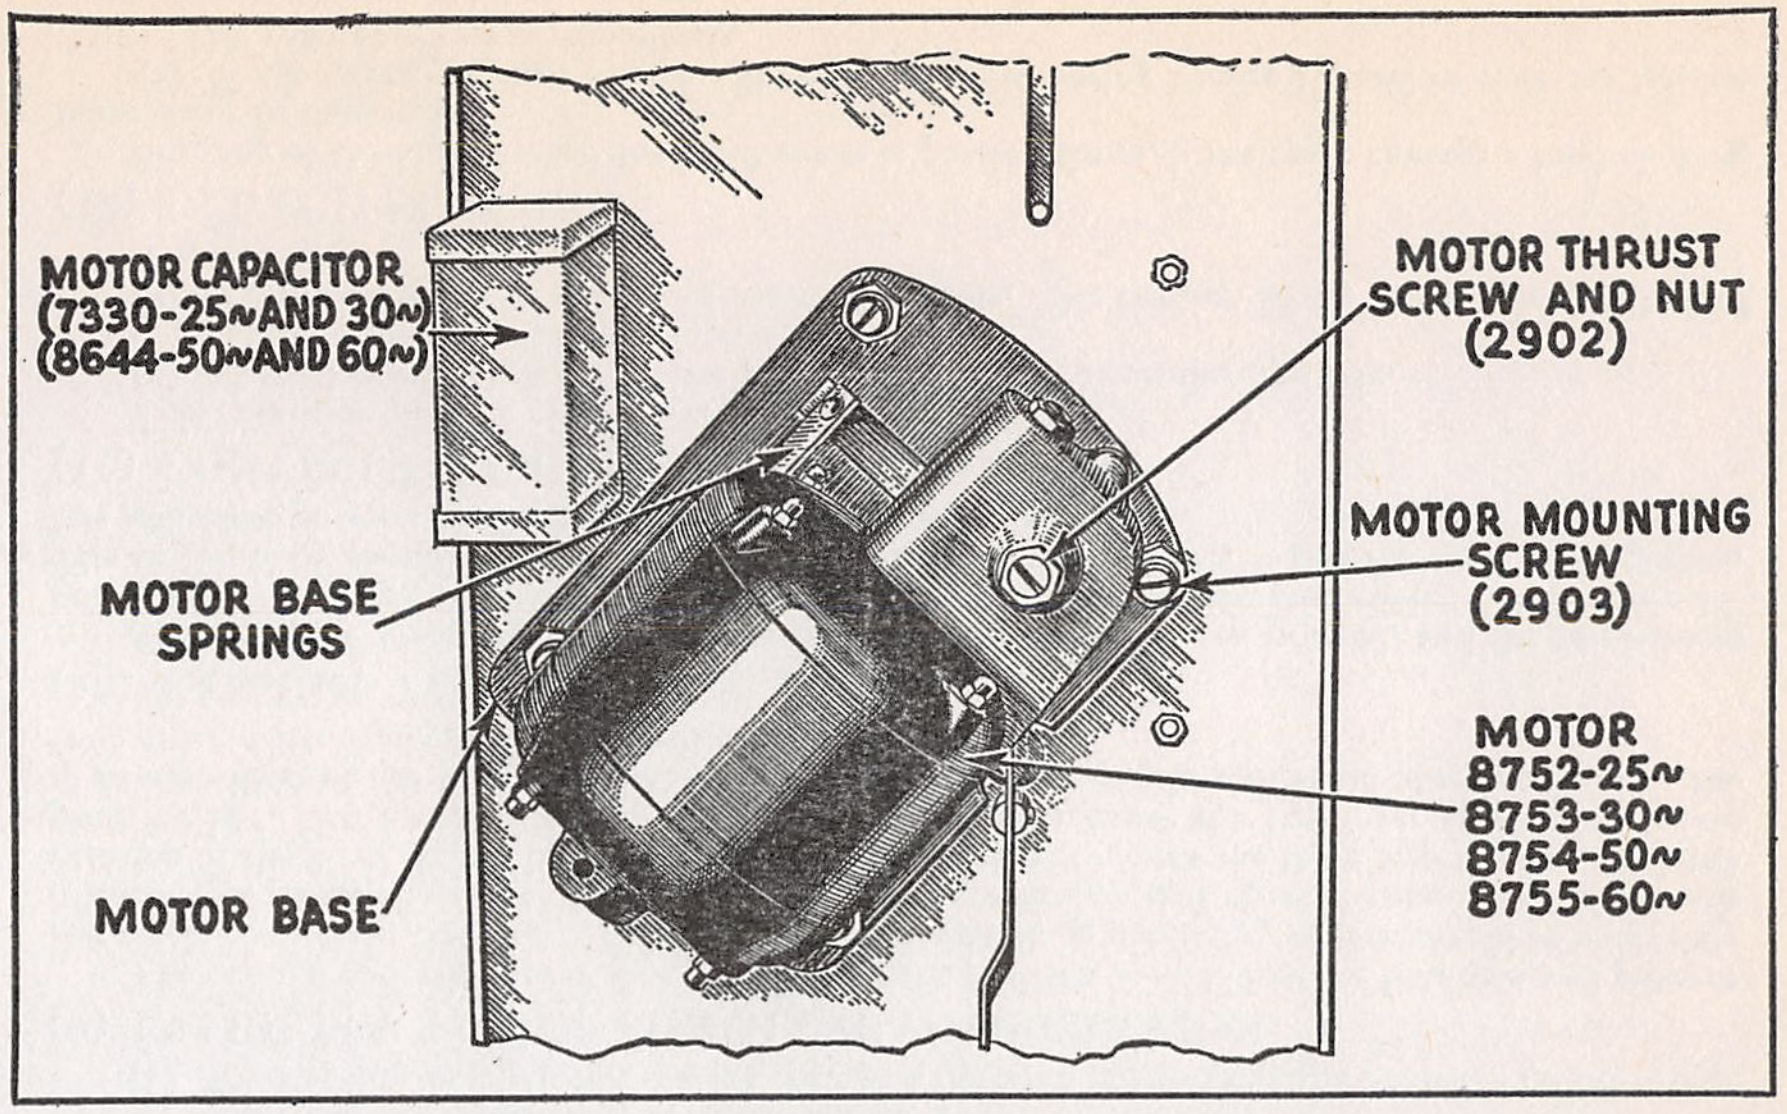
MOTOR CAPACITOR (7330-25~AND 30~) (8644-50~AND 60~)
MOTOR BASE SPRINGS
MOTOR BASE
MOTOR THRUST SCREW AND NUT (2902)
MOTOR MOUNTING SCREW (2903)
MOTOR 8752-25~ 8753-30~ 8754-50~ 8755-60~

Figure 14—Motor parts

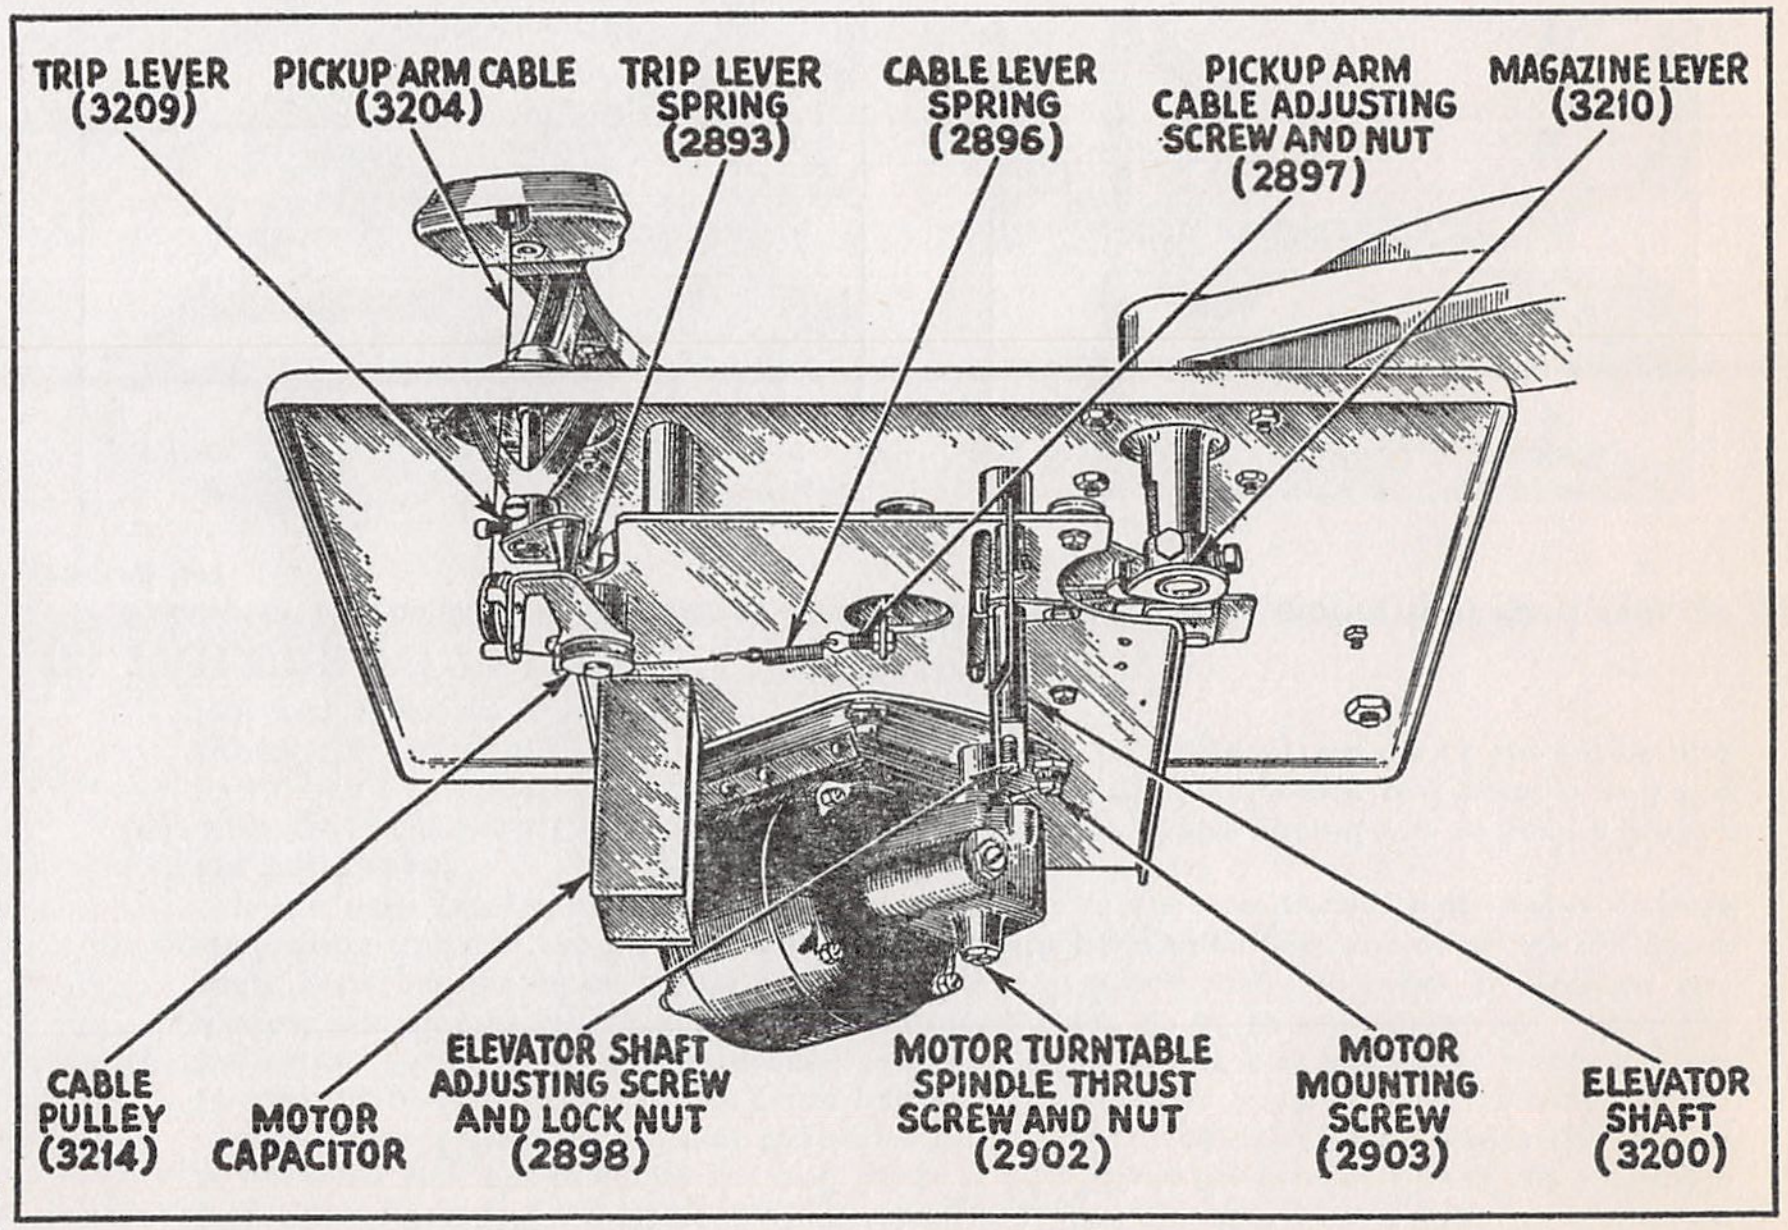
TRIP LEVER (3209)
PICKUP ARM CABLE (3204)
TRIP LEVER SPRING (2893)
CABLE LEVER SPRING (2896)
PICKUP ARM CABLE ADJUSTING SCREW AND NUT (2897)
MAGAZINE LEVER (3210)
CABLE PULLEY (3214)
MOTOR CAPACITOR
ELEVATOR SHAFT ADJUSTING SCREW AND LOCK NUT (2898)
MOTOR TURNTABLE SPINDLE THRUST SCREW AND NUT (2902)
MOTOR MOUNTING SCREW (2903)
ELEVATOR SHAFT (3200)

Figure 15—Bottom view of mechanism showing parts

MODEL RAE-79
Schematic

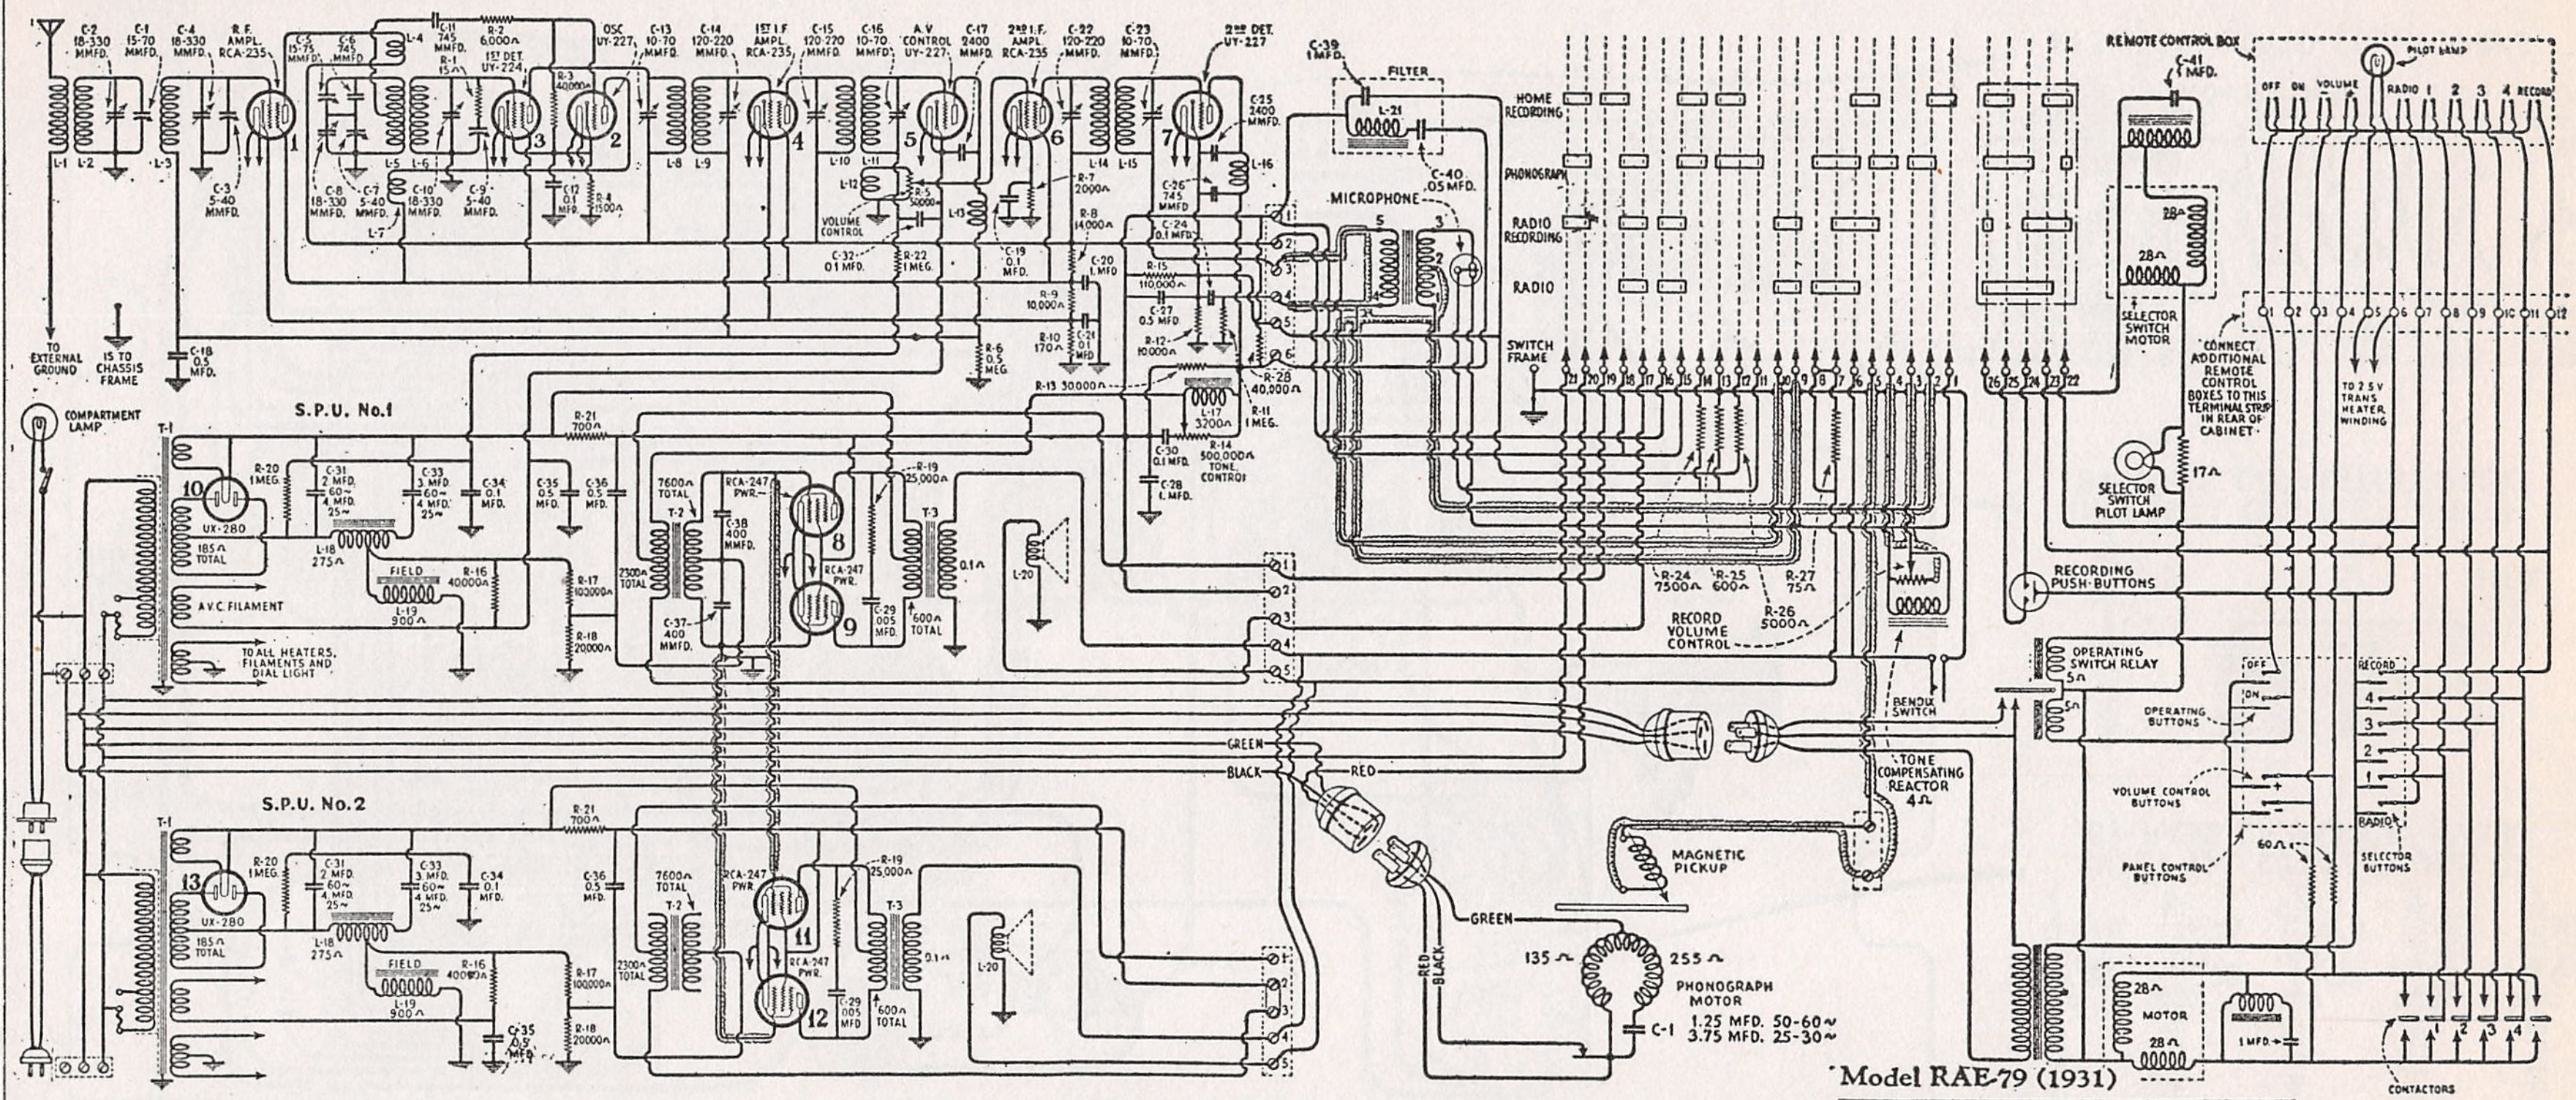
REMOTE CONTROL BOX
PILOT LAMP
OFF ON VOLUME RADIO 1 2 3 4 RECORD
HOME RECORDING
PHONOGRAPH
RADIO RECORDING
RADIO
SWITCH FRAME
FILTER
MICROPHONE
SELECTOR SWITCH MOTOR
CONNECT ADDITIONAL REMOTE CONTROL BOXES TO THIS TERMINAL STRIP IN REAR OF CABINET
TO 2.5 V TRANS HEATER WINDING
SELECTOR SWITCH PILOT LAMP
RECORDING PUSH-BUTTONS
OPERATING SWITCH RELAY
OPERATING BUTTONS
VOLUME CONTROL BUTTONS
PANEL CONTROL BUTTONS
SELECTOR BUTTONS
CONTACTORS
MOTOR
BENDIX SWITCH
TONE COMPENSATING REACTOR 4Ω
MAGNETIC PICKUP
PHONOGRAPH MOTOR
1.25 MFD. 50-60~
3.75 MFD. 25-30~
RECORD VOLUME CONTROL
TONE CONTROL
VOLUME CONTROL
GREEN
BLACK
RED
R.F. AMPL. RCA-235
1ST DET. UY-224
OSC UY-227
1ST I.F. AMPL. RCA-235
A.V. CONTROL UY-227
2ND I.F. AMPL. RCA-235
2ND DET. UY-227
RCA-247 PWR.
UX-280
S.P.U. No.1
S.P.U. No.2
TO EXTERNAL GROUND
IS TO CHASSIS FRAME
COMPARTMENT LAMP
A.V.C. FILAMENT
TO ALL HEATERS, FILAMENTS AND DIAL LIGHT
FIELD

Model RAE-79 (1931)

PEAK FREQUENCY 175 KC

Schematic diagram of Model RAE-79

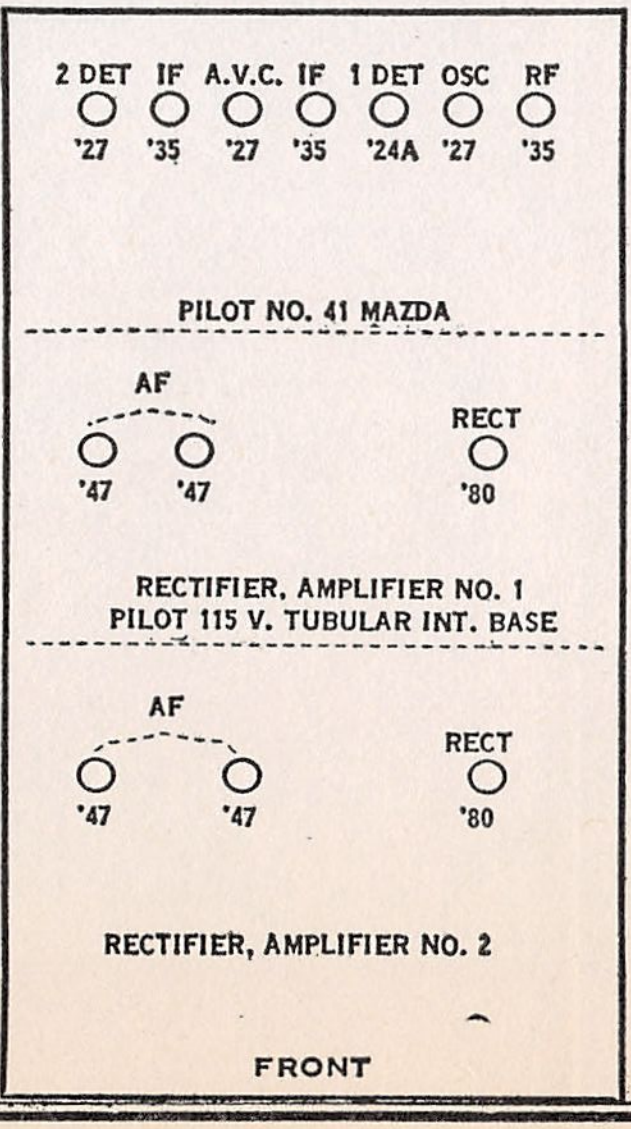
2 DET
IF
A.V.C.
IF
1 DET
OSC
RF
'27
'35
'27
'35
'24A
'27
'35
PILOT NO. 41 MAZDA
AF
'47
'47
RECT
'80
RECTIFIER, AMPLIFIER NO. 1
PILOT 115 V. TUBULAR INT. BASE
AF
'47
'47
RECT
'80
RECTIFIER, AMPLIFIER NO. 2
FRONT

The RCA Victor Model RAE-79 is a thirteen tube, super-heterodyne radio receiver incorporated in the same cabinet with the perfected RCA Victor automatic record changing mechanism.

Features of this instrument are:

RCA Victor DeLuxe Radio Chassis incorporating Super Control Radiotrons, automatic volume control giving a new degree of quiet operation, remote control of tuning and volume, double push-pull amplifiers employing Pentode Output Radiotrons, and twin loudspeakers. The automatic record changing mechanism has provision for playing continuously, one side of ten 10-inch records of either the "standard" or Program Transcription variety and either type twelve inch records manually. Home recording on the RAE-79 reaches a new degree of perfection through the use of a studio type two button microphone and Pentode Output Radiotrons. Such records may be made either 78 or 33⅓ R.P.M. thus giving a maximum of eight minutes of home recording on a ten inch record.

A reference to the R-50 and R-55 Service Notes covers the general service data on this type of instrument.

MODEL RAE-79
Receiver Chassis

R. C. A. VICTOR CO., INC.

SERVICE DATA ON REMOTE CONTROL UNIT

The Remote Control Contactors of Model RAE-79 are adjusted at the Factory with a 115 volt A. C. input being applied to the receiver. Due to the extreme selectivity of the receiver used, it may be necessary to readjust the motor contactors when the instrument is used on extremely high or low line voltages. The following test covers these adjustments thoroughly.

This is also true on Models used at frequencies other than that specified. For example, when a 60 cycle model is used on 50 cycles, the phonograph motor must be changed and the remote control contactors completely readjusted.

The remote control feature is unique in that it not only allows control of the receiver from a distant point but also pre-selects the desired station accurately. Manual tuning, other than necessary for the original setting of the selector buttons, is therefore eliminated. Selection of any one of four stations, adjustment of the volume control, turning the receiver "on" or "off" or changing from Radio to Record may be accomplished at one or more remote points from the receiver. Operation of the tone control or home recording must be done at the receiver.

One control box and twenty-five feet of flat cable are supplied. If desired, any number of additional units may be installed or the cable lengthened to seventy-five feet.

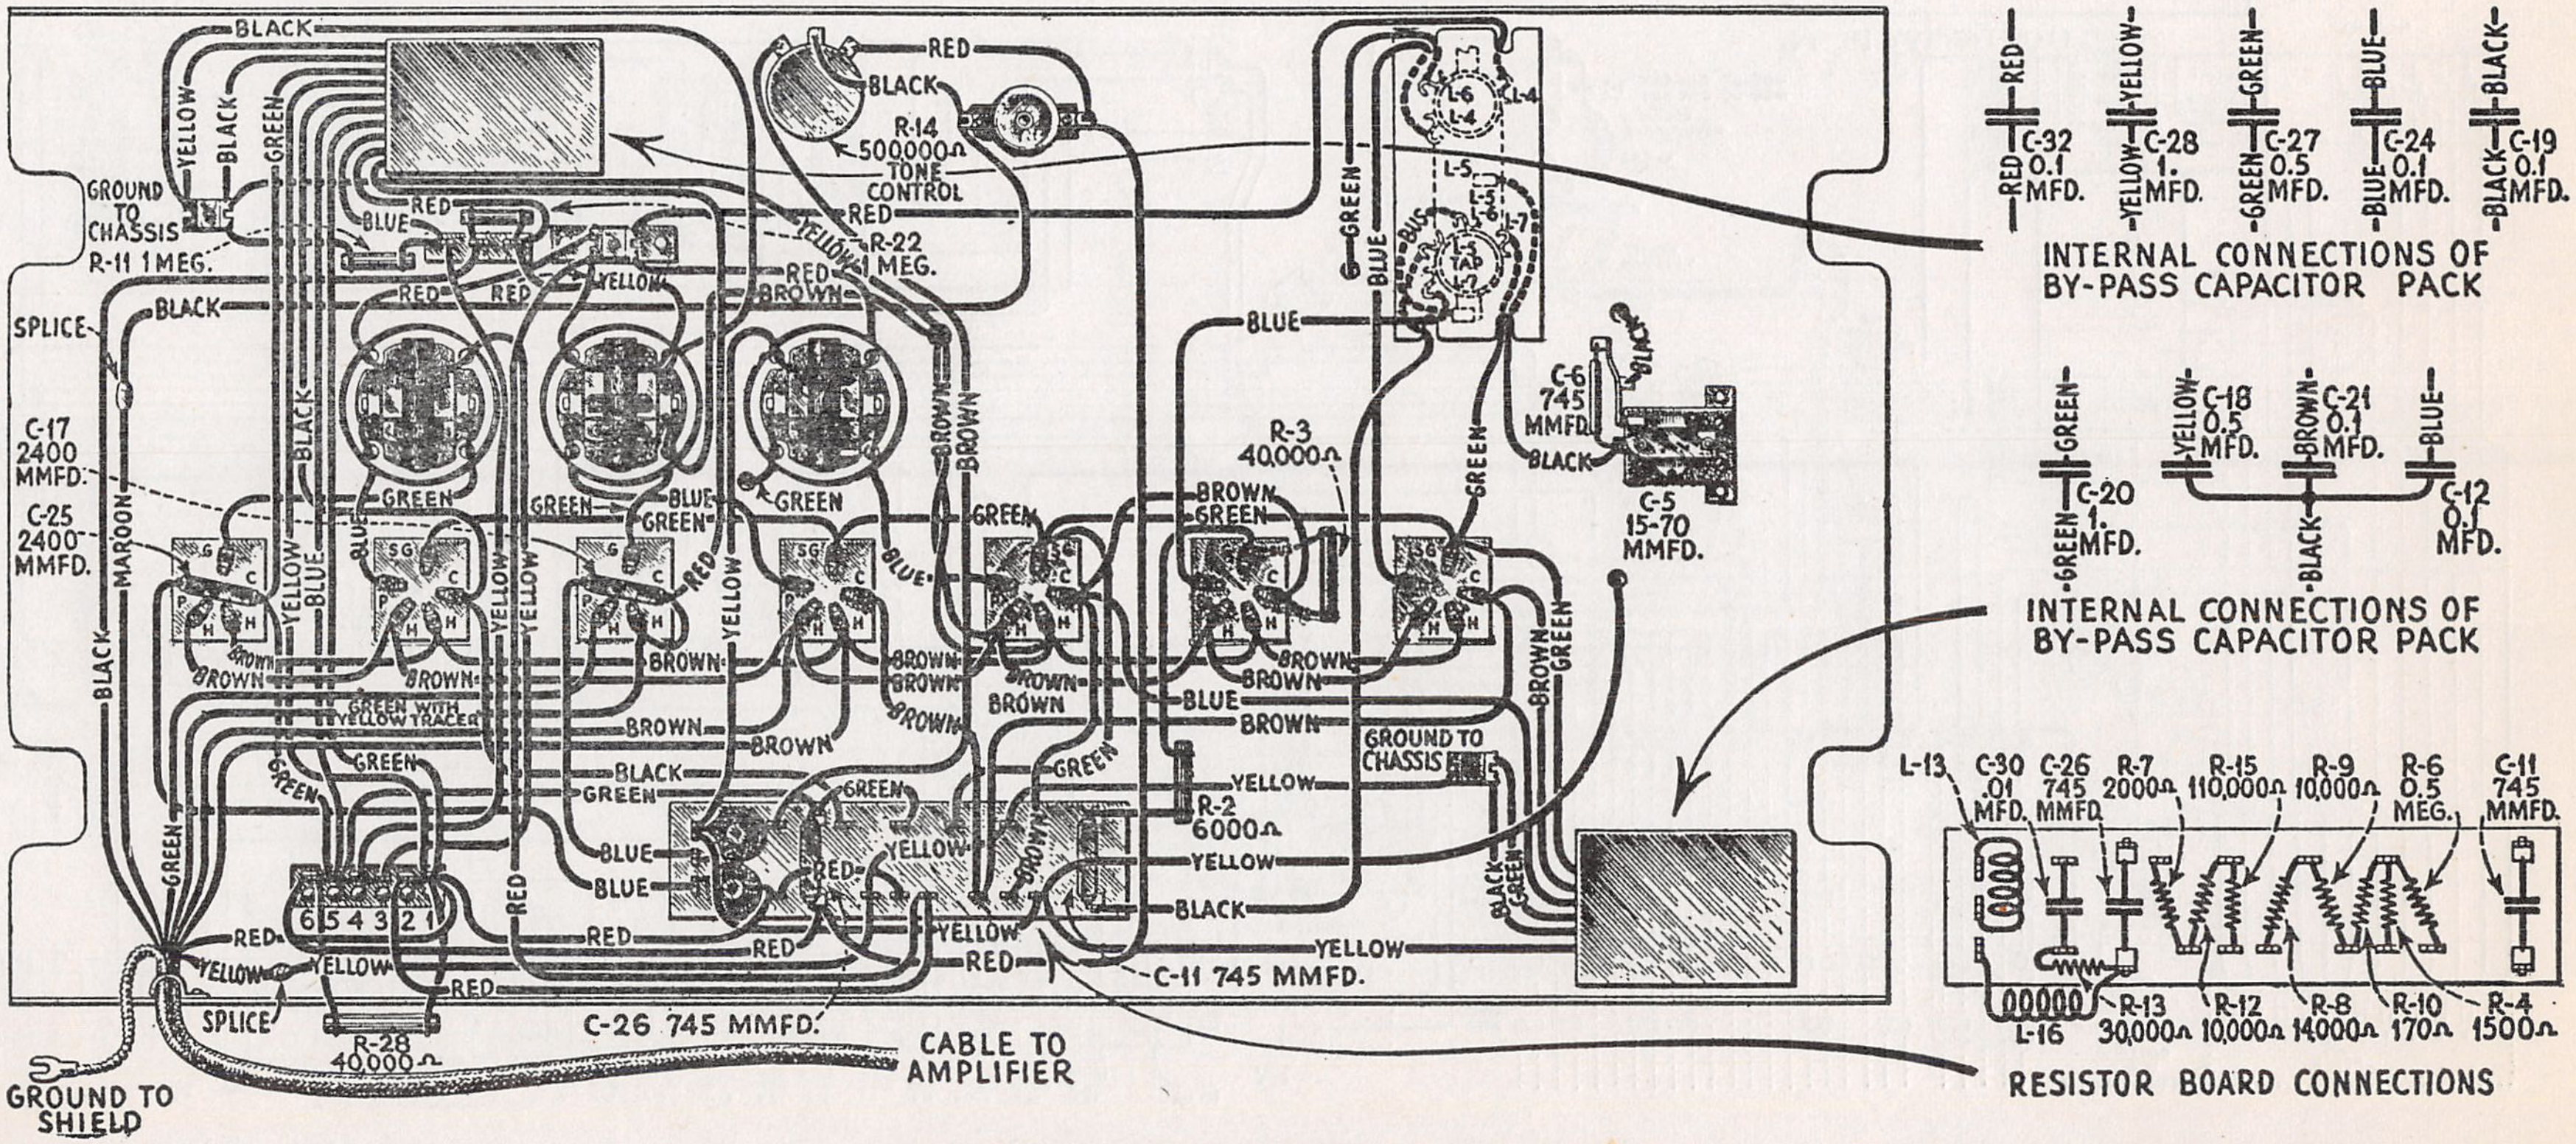
INTERNAL CONNECTIONS OF BY-PASS CAPACITOR PACK
C-32 0.1 MFD.
C-28 1. MFD.
C-27 0.5 MFD.
C-24 0.1 MFD.
C-19 0.1 MFD.
RED
YELLOW
GREEN
BLUE
BLACK
INTERNAL CONNECTIONS OF BY-PASS CAPACITOR PACK
C-20 1. MFD.
C-18 0.5 MFD.
C-21 0.1 MFD.
C-12 0.1 MFD.
RESISTOR BOARD CONNECTIONS
L-13
C-30 .01 MFD.
C-26 745 MMFD.
R-7 2000Ω
R-15 110,000Ω
R-9 10,000Ω
R-6 0.5 MEG.
C-11 745 MMFD.
L-16
R-13 30,000Ω
R-12 10,000Ω
R-8 14000Ω
R-10 170Ω
R-4 1500Ω
R-14 500000Ω TONE CONTROL
R-22 1 MEG.
R-11 1 MEG.
GROUND TO CHASSIS
SPLICE
C-17 2400 MMFD.
C-25 2400 MMFD.
MAROON
GREEN WITH YELLOW TRACER
R-3 40,000Ω
R-2 6000Ω
C-6 745 MMFD.
C-5 15-70 MMFD.
L-4
L-5
L-6
L-7
C-11 745 MMFD.
C-26 745 MMFD.
R-28 40,000Ω
6 5 4 3 2 1
CABLE TO AMPLIFIER
GROUND TO SHIELD

MODEL RAE-79
Assembly Wiring

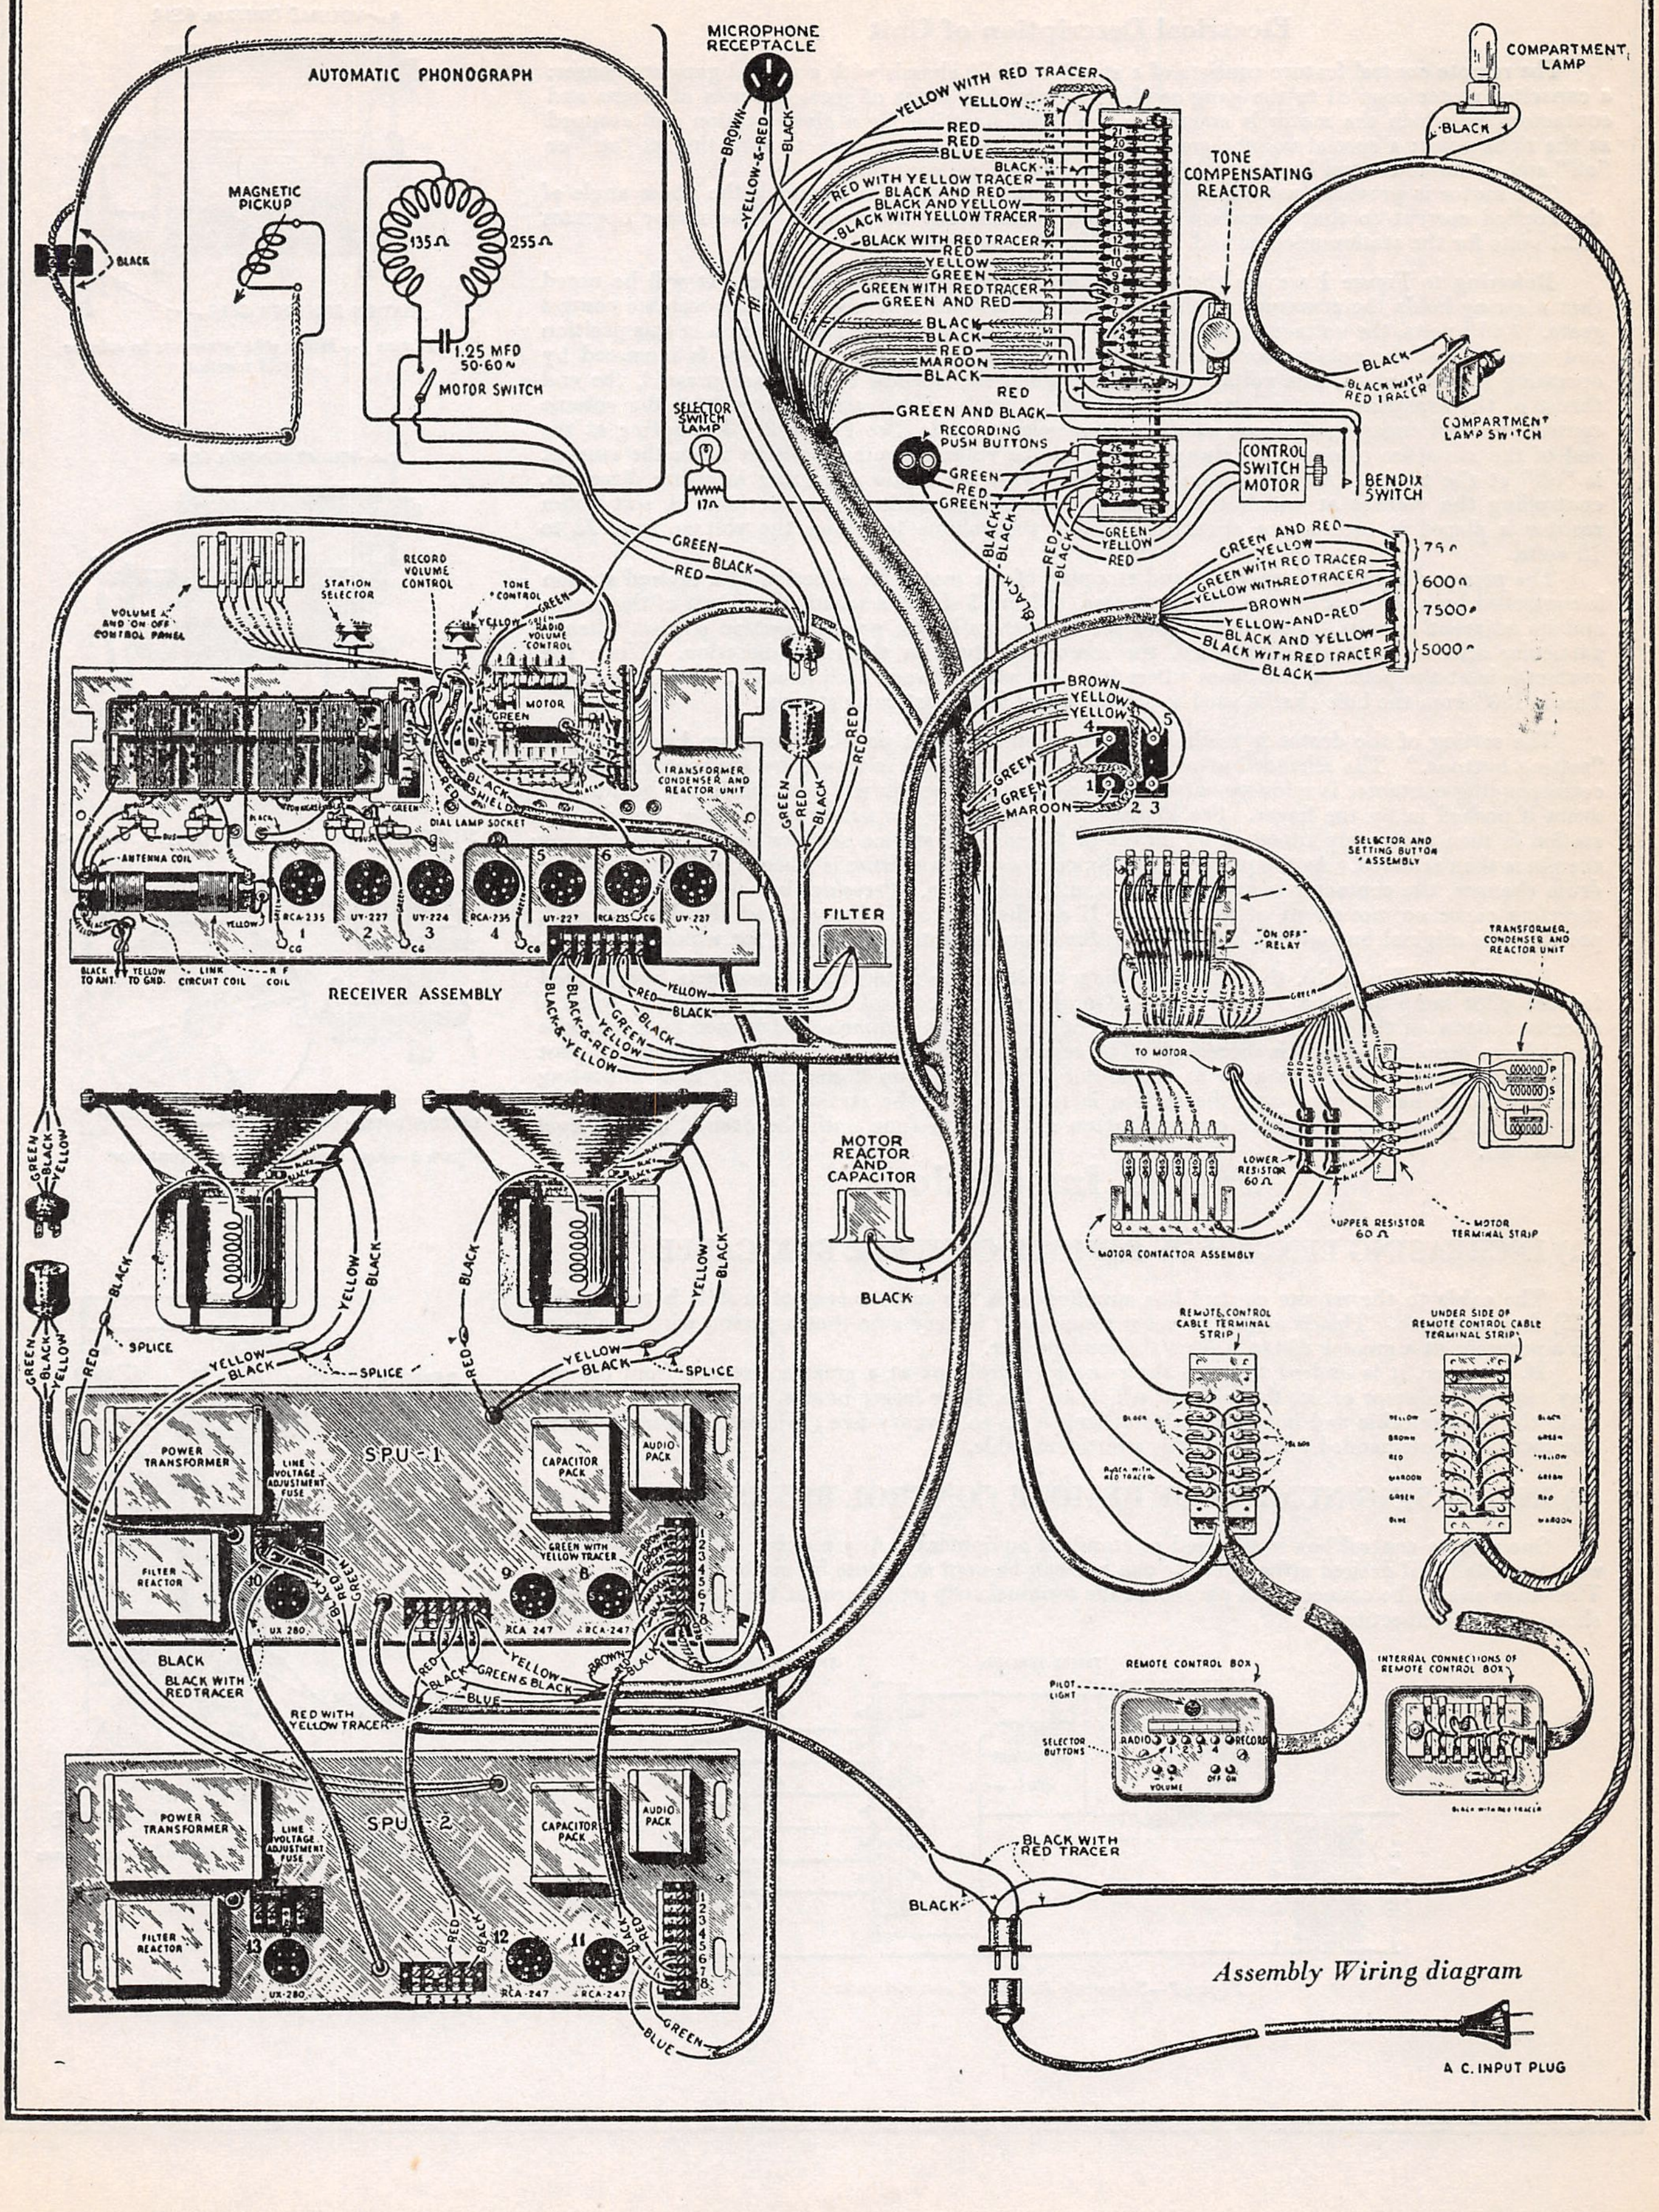
AUTOMATIC PHONOGRAPH
MAGNETIC PICKUP
BLACK
135 Ω
255 Ω
1.25 MFD 50-60 ~
MOTOR SWITCH
MICROPHONE RECEPTACLE
BROWN
YELLOW-&-RED
BLACK
SELECTOR SWITCH LAMP
17 Ω
YELLOW WITH RED TRACER
YELLOW
RED
RED
BLUE
BLACK
RED WITH YELLOW TRACER
BLACK AND RED
BLACK AND YELLOW
BLACK WITH YELLOW TRACER
BLACK WITH RED TRACER
RED
YELLOW
GREEN
GREEN WITH RED TRACER
GREEN AND RED
BLACK
BLACK
RED
MAROON
BLACK
TONE COMPENSATING REACTOR
COMPARTMENT LAMP
BLACK
BLACK WITH RED TRACER
COMPARTMENT LAMP SWITCH
RED
GREEN AND BLACK
RECORDING PUSH BUTTONS
GREEN
RED
GREEN
CONTROL SWITCH MOTOR
BENDIX SWITCH
GREEN
YELLOW
RED
GREEN AND RED
YELLOW
GREEN WITH RED TRACER
YELLOW WITH RED TRACER
BROWN
YELLOW-AND-RED
BLACK AND YELLOW
BLACK WITH RED TRACER
BLACK
75 Ω
600 Ω
7500 Ω
5000 Ω
GREEN
BLACK
RED
VOLUME AND ON OFF CONTROL PANEL
STATION SELECTOR
RECORD VOLUME CONTROL
TONE CONTROL
RADIO VOLUME CONTROL
MOTOR
TRANSFORMER CONDENSER AND REACTOR UNIT
DIAL LAMP SOCKET
ANTENNA COIL
BLACK TO ANT.
YELLOW TO GND.
LINK CIRCUIT COIL
R F COIL
RCA-235
UY-227
UY-224
RCA-235
UY-227
RCA-235
UY-227
1
2
3
4
5
6
7
RECEIVER ASSEMBLY
FILTER
GREEN
RED
BLACK
RED
BROWN
YELLOW
YELLOW
GREEN
GREEN
MAROON
1
2
3
4
5
SELECTOR AND SETTING BUTTON ASSEMBLY
"ON OFF" RELAY
TO MOTOR
LOWER RESISTOR 60 Ω
UPPER RESISTOR 60 Ω
MOTOR TERMINAL STRIP
MOTOR CONTACTOR ASSEMBLY
TRANSFORMER, CONDENSER AND REACTOR UNIT
MOTOR REACTOR AND CAPACITOR
BLACK
GREEN
BLACK
YELLOW
SPLICE
YELLOW
BLACK
SPLICE
RED
YELLOW
BLACK
SPLICE
REMOTE CONTROL CABLE TERMINAL STRIP
UNDER SIDE OF REMOTE CONTROL CABLE TERMINAL STRIP
YELLOW
BROWN
RED
MAROON
GREEN
BLUE
BLACK
GREEN
YELLOW
GREEN
RED
MAROON
SPU-1
POWER TRANSFORMER
LINE VOLTAGE ADJUSTMENT FUSE
CAPACITOR PACK
AUDIO PACK
FILTER REACTOR
GREEN WITH YELLOW TRACER
UX-280
RCA-247
RCA-247
10
9
8
BLACK
BLACK WITH RED TRACER
RED WITH YELLOW TRACER
YELLOW
GREEN & BLACK
BLUE
BROWN
REMOTE CONTROL BOX
PILOT LIGHT
SELECTOR BUTTONS
RADIO
RECORD
VOLUME
OFF ON
INTERNAL CONNECTIONS OF REMOTE CONTROL BOX
SPU-2
POWER TRANSFORMER
LINE VOLTAGE ADJUSTMENT FUSE
CAPACITOR PACK
AUDIO PACK
FILTER REACTOR
UX-280
RCA-247
RCA-247
13
12
11
GREEN
BLUE
BLACK WITH RED TRACER
BLACK
A. C. INPUT PLUG

Assembly Wiring diagram

MODEL RAE-79
Remote Control

R. C. A. VICTOR CO., INC.

Electrical Description of Unit

The remote control feature consists of a standard R-50 chassis with a special gang condenser; a capacitor motor coupled to the gang condenser through a series of gears; a series of drums and contactors by which the motor is started in the right direction for a given station and stopped at the right point; a special volume control geared to the motor; a relay to turn the set "on" or "off" and a remote control box by which these operations are controlled.

The motor is provided with a tapped reactor and condenser for changing the phase angle of the applied current so that operation in either direction may be secured. The motor operates at 23 volts for the station selector and 18 volts for the volume control.

Referring to Figure 1 we see the normal position of the motor armature. It will be noted that a spring holds the armature so that the gear at one end is meshed with the volume control gears. At 18 volts, the voltage used for volume control operation, the gears remain in this position and operation of the volume control is secured. When the speed of the motor is increased by operating it at 23 volts, this voltage being used when the selector buttons are pressed, the end thrust of the armature causes it to move laterally, thereby disengaging the gear at the volume control end and engaging the gear at the station selector end. See Figure 2. The spring at the end of the armature causes it to always return to the volume control position when the current is "off" at the motor. As this action takes place with the motor operating in either direction, controlling the voltage at which the motor is operated determines its function. A sixty ohm resistor is placed in each motor circuit controlling the volume to reduce the voltage from 23 to 18 volts.

The proper direction of operation and stopping of the motor for selection of a desired station is controlled by a series of drums and contactors. Figure 3 shows a schematic circuit of the motor and its adjacent circuits. The drums hold the contactors in the proper position so that when a particular selector button is depressed, the motor will turn in the right direction. When the contactor is at the point on the drum where it is half way between each contact, the motor stops. This is 180° from the hole that is used to set the drum for a particular station.

The setting of the drums is made by the pins on the front panel. These are known as the "setting buttons." The selector button is pressed and the drum is moved by the motor until the corresponding contactor is midway between the contacts. The pin will now fall in the hole in the drum if pushed in by the finger. See Figure 4. Holding the pin firmly in the hole, the desired station is then accurately tuned in by means of the manual station selector knob. After tuning the pin is then released. As the point on the opposite side of the drum is where the diameter of the drum changes, the contactor is half way between the contacts. Pressing the selector buttons will therefore cause no movement of the motor. If another button is pressed and the drum moved, pressing the original button will always bring the drum back to the position for which it was set.

Referring to Figure 10, the schematic diagram, it will be noted that a common lead is used for the pilot lamp and the selector buttons in the remote control box. By doing this, when a selector button on the box is pressed, the current through the common lead is increased, likewise the voltage drop in the lead is increased. The result is that while the motor is running the pilot lamp becomes very dim. As soon as the motor stops, the lamp flashes bright, thus indicating that the motor has stopped and the station is tuned in. If the station is not then heard, it is necessary to press the + volume control button a little at a time until the desired output level is obtained.

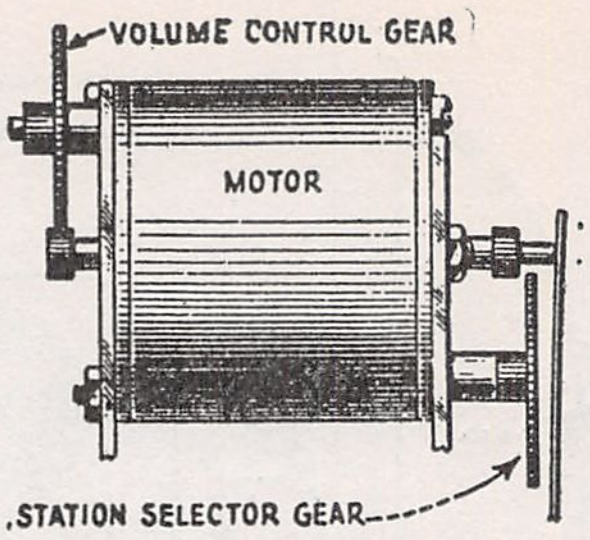

Figure 1—Motor with armature in volume control position

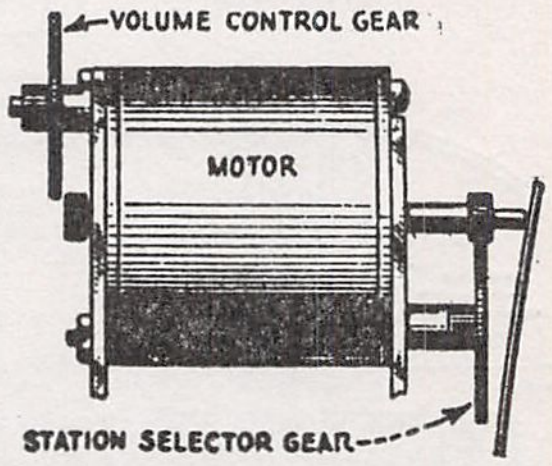

Figure 2—Motor with armature in station selector position

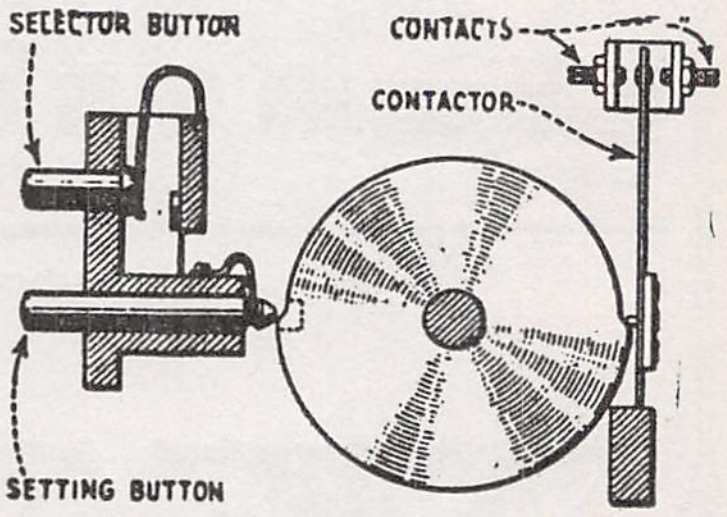

Figure 4—End view of drum and contactor

Special Installations

(1) INCREASING LENGTH OF REMOTE CONTROL BOX CABLE

The cable to the remote control box supplied with the remote control models is twenty-five (25) feet in length. This is ample for most rooms as it is very rare that a person wishes to listen to a program at a greater distance from the loudspeaker.

If, however, it is desired to place the remote control box at a greater distance from the set, any twelve conductor cable, the wires of which are No. 14 or larger in size, may be used to splice onto the regular cable and increase the total length up to seventy-five (75) feet. Figure 5 shows the method recommended for adding this additional cable.

(2) INCREASING NUMBER OF REMOTE CONTROL BOXES

One remote control box is supplied as standard equipment. Any number of additional boxes may be installed if desired although only one box can be used at a time for controlling the receiver. The boxes should be connected in parallel at the terminal strip on the rear of the Radiola. Figure 11 shows such a connection.

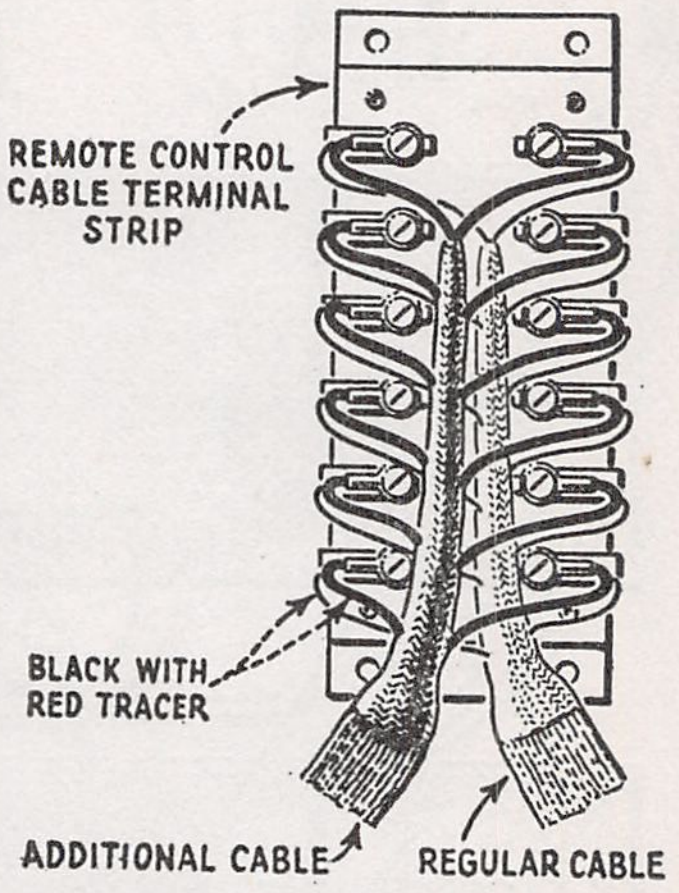

Figure 6—Connections for adding additional boxes

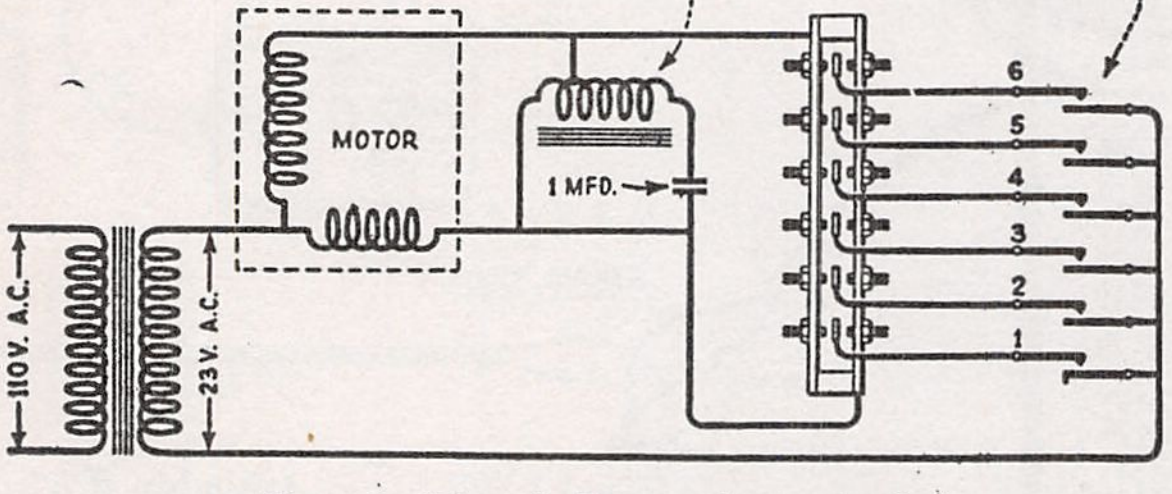

Figure 3—Schematic diagram of motor circuits

MODEL RAE-79
Motor Adjustment

R. C. A. VICTOR CO., INC.

Adjustments

(1) ADJUSTMENT OF MOTOR CONTACTORS

The four station selector motor contactors located at the rear of the motor may require adjustment due to changes in the amount of friction in the entire drive assembly. Need for adjustment is evidenced by the motor failing to stop at the exact point for a particular station.

In order to make these adjustments two tools are necessary. They may be constructed, see Figure 7, or obtained as a spare part, the replacement parts section listing them. The chart on page * gives the procedure to be followed for making adjustments. This procedure must be repeated on each contactor that is out of adjustment.

If all contactors are out of adjustment in a similar manner, then the friction screw, see Figure 8, requires adjustment. This should be either tightened or loosened, the exact adjustment to be determined by trial. The adjustment that is correct for one contactor will be correct for all, assuming the friction screw to be at fault.

(2) REPLACING OR ADJUSTING CONTACTORS

Six contactors are used for connecting the motor so that it rotates in the proper direction. To make this adjustment or replacement, a special offset screw driver will be required unless the unit is to be removed from the base. This is shown in Figure 12

Referring to Figure 4 we see that when the setting button is in the hole in the drum, the contactor for that particular drum is exactly half way between the contacts. The holes that hold the contactors are elongated so that they may be raised or lowered until they rest exactly half way between the contacts when the setting button is inserted in the drum hole. This is the only adjustment required of these contactors, and with the special screw driver is quite easy to make.

(3) MAKING REPLACEMENTS

The operating relay, the resistors, the motor, the gears and other small parts may be replaced. All power transformers when replaced must have the primaries so connected that the pilot light on the remote control box lights properly. If the transformers are improperly phased, the lamp will brighten instead of dim when a selector button is pressed. The drum assembly is specially fitted and assembled and any individual replacements can not be made. If trouble is experienced in this assembly, a complete replacement of the unit will be required.

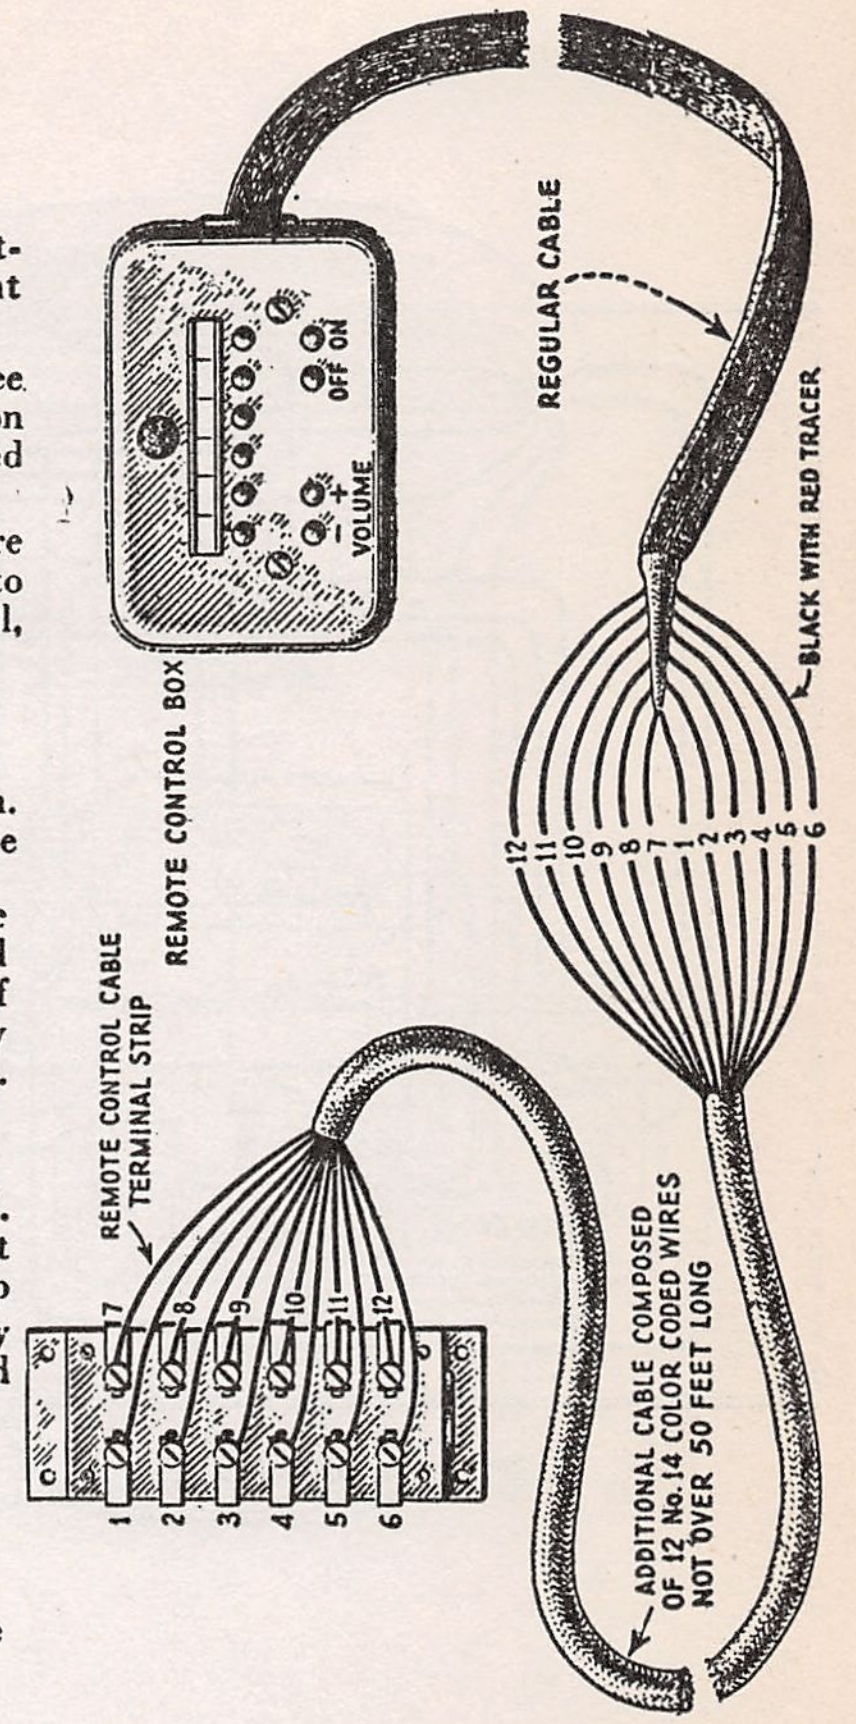

Figure 5
Wiring diagram of method for connecting additional cable

SELECTOR SWITCH AND MISCELLANEOUS INFORMATION

(1) BENDIX LOUDSPEAKER SWITCH

At the end of the selector switch motor a switch is located that shorts the cone coil when the instrument is changing from one function to another.

The switch is operated by the lateral thrust of the motor wherever it goes into operation. If for any reason, noise should be heard when changing from Radio to Record or Home Recording, it may be due to this switch not functioning. Bending the lever so that it makes proper contact will remedy this condition.

(2) PRECAUTIONS WHEN MAKING RADIO RECORDING RECORDS

When making radio recording records, it is necessary that the radio volume be adjusted for its greatest undistorted output if good quality records are to be obtained. While using the maximum undistorted output it is also important that the volume control should not be advanced beyond this point, as it is possible that the maximum *distorted* output, if fed into the pickup long enough will cause the pickup coil to heat and its wax to run out.

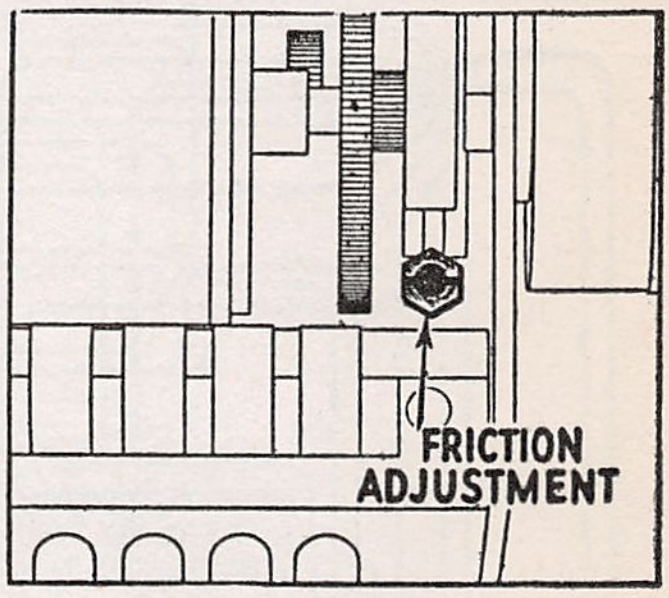

Figure 8—Location of Friction Adjustment

(3) SERVICE DATA ON MICROPHONE

The Microphone used on Model RAE-79 is a two-button studio type that has excellent frequency characteristics and is simple and rugged in construction. Generally, any failure in the microphone can be remedied only by replacing the unit. However, an unbalance in the buttons may be corrected by means of a small adjustment. The following procedure details the correct manner in making this adjustment. Refer to Figure 9.

(a) Remove the microphone from its shell. Be careful not to lose its supporting springs. Measure the D. C. resistance of each button. This may vary from 200 to 1000 ohms, but each button should be measured within 50% of the other.

(b) Loosen the set screw shown in Figure 9, and adjust the pressure of the cup by either increasing or decreasing its pressure against the diaphragm. Increasing the pressure reduces the resistance and decreasing it, increases the resistance of the button. Usually it is best practice to match the buttons by increasing the resistance rather than by decreasing it. Be very careful however to avoid spilling any carbon granules.

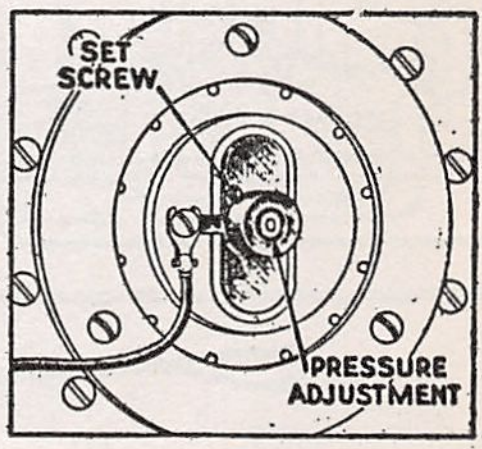

Figure 9—Details of Microphone Adjustment

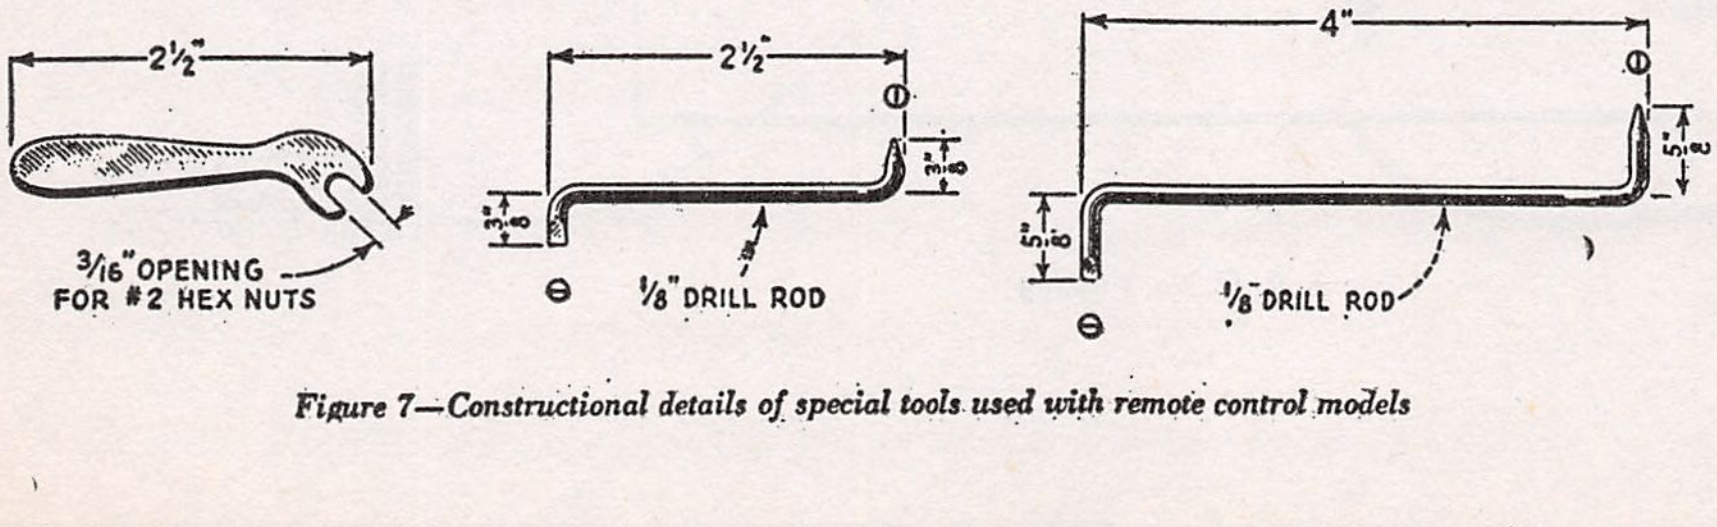

Figure 7—Constructional details of special tools used with remote control models

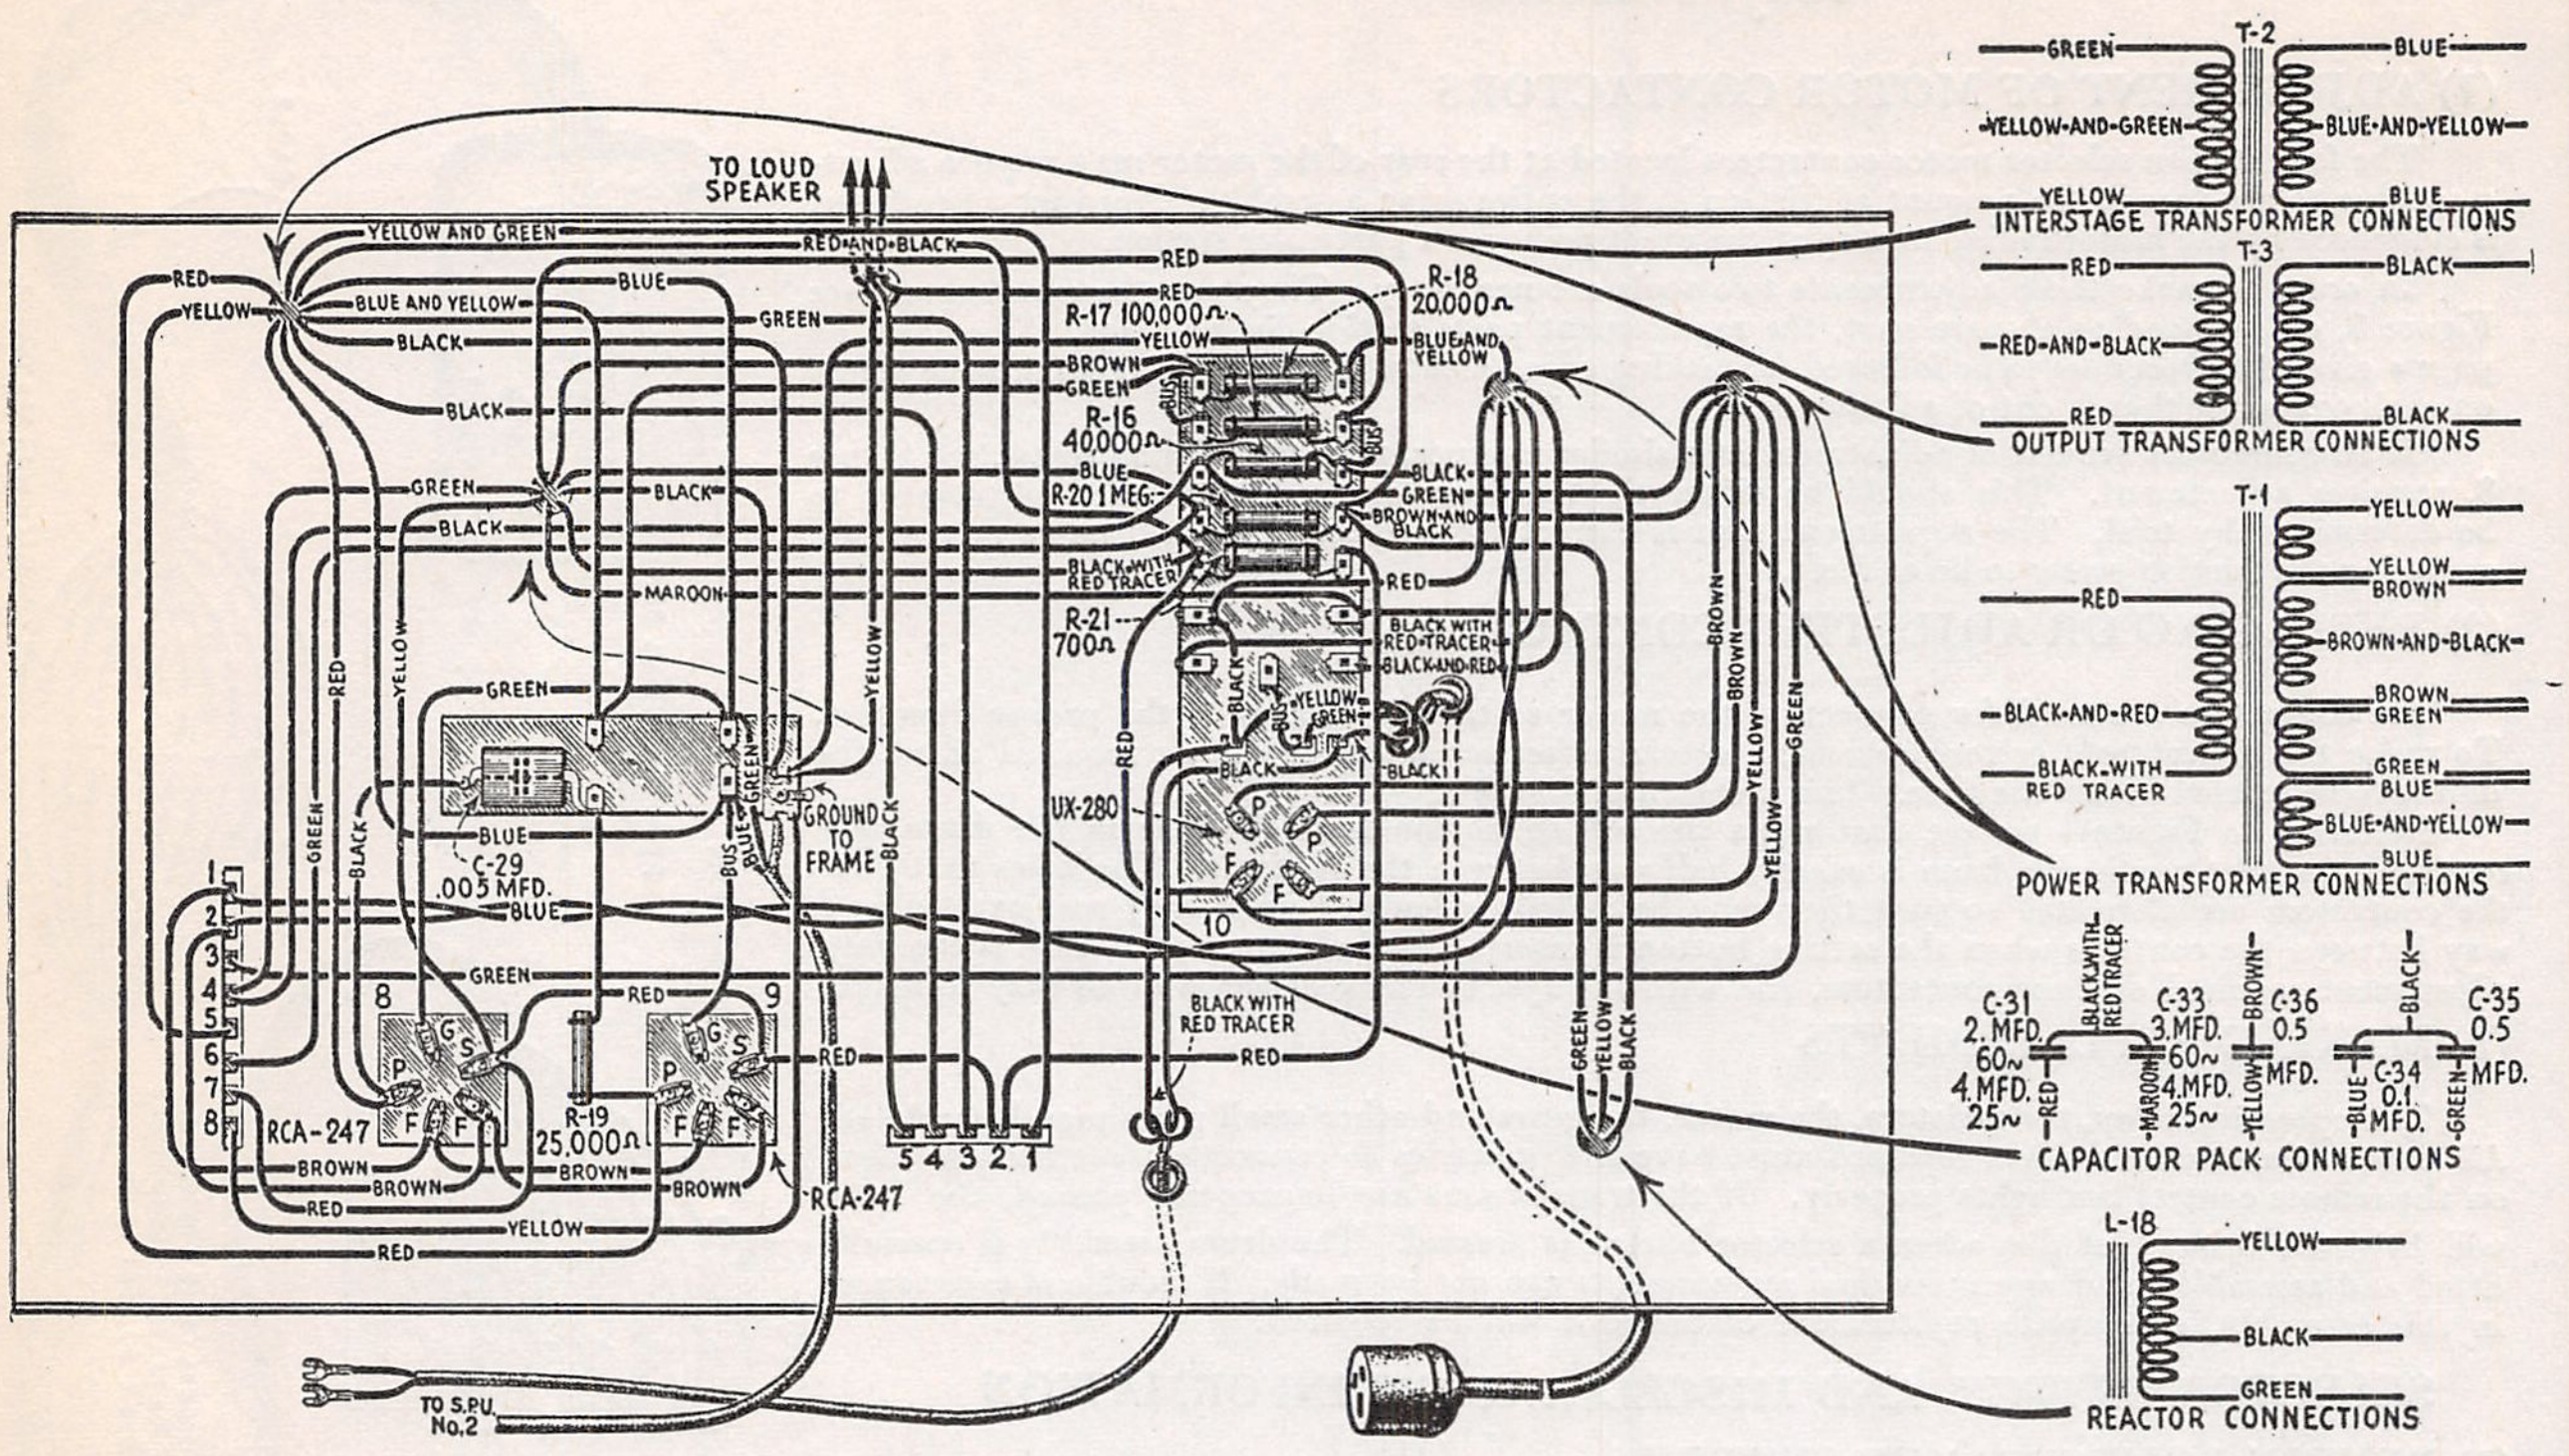
TO LOUD SPEAKER
RED-AND-BLACK
YELLOW AND GREEN
BLUE AND YELLOW
BLACK
GREEN
BLUE
MAROON
RED
YELLOW
BROWN
R-17 100,000Ω
R-18 20,000Ω
R-16 40,000Ω
R-20 1 MEG.
R-21 700Ω
R-19 25,000Ω
BLUE AND YELLOW
BLACK WITH RED TRACER
BLACK-AND-RED
BROWN-AND-BLACK
YELLOW-GREEN
UX-280
RCA-247
C-29 .003 MFD.
GROUND TO FRAME
BUS
5 4 3 2 1
10
TO S.P.U. No.2
T-2
INTERSTAGE TRANSFORMER CONNECTIONS
YELLOW-AND-GREEN
BLUE-AND-YELLOW
T-3
OUTPUT TRANSFORMER CONNECTIONS
RED-AND-BLACK
T-1
POWER TRANSFORMER CONNECTIONS
YELLOW BROWN
BROWN-AND-BLACK
BROWN GREEN
GREEN BLUE
BLUE-AND-YELLOW
BLACK-AND-RED
BLACK-WITH RED TRACER
C-31 2. MFD. 60~ 4. MFD. 25~
C-33 3. MFD. 60~ 4. MFD. 25~
C-36 0.5 MFD.
C-34 0.1 MFD.
C-35 0.5 MFD.
CAPACITOR PACK CONNECTIONS
L-18
REACTOR CONNECTIONS

S. P. U. No. 1 wiring

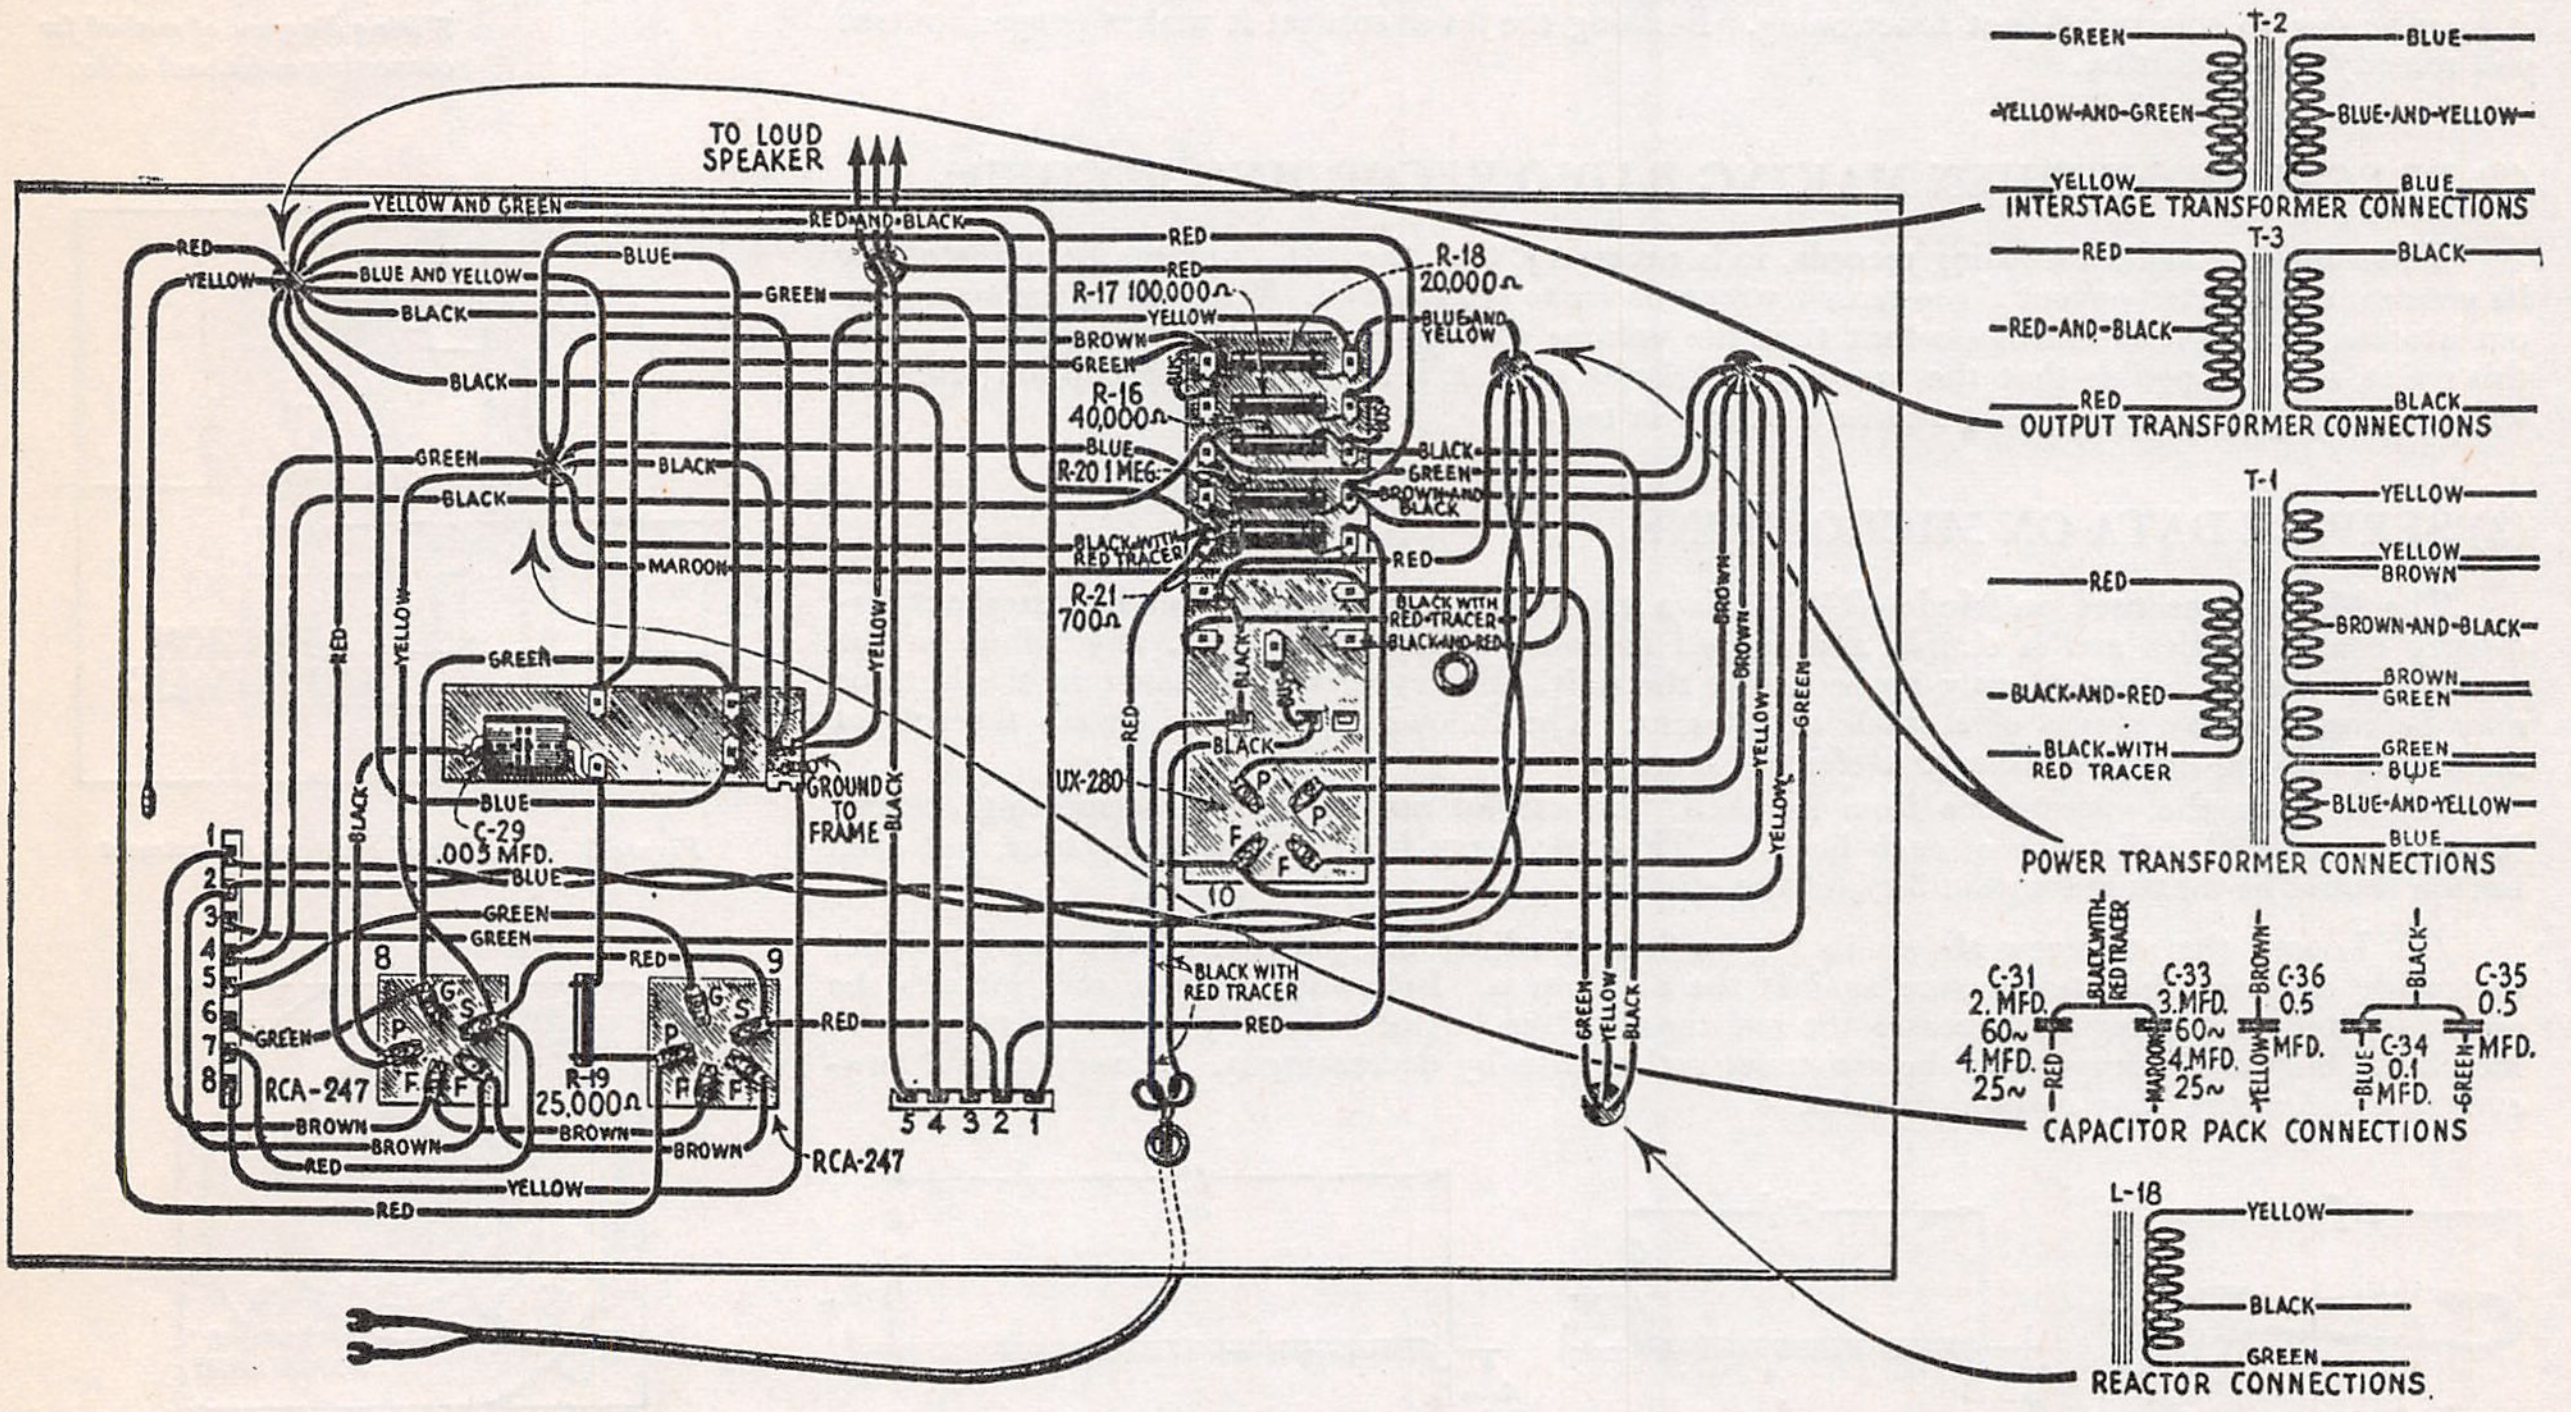
TO LOUD SPEAKER
RED-AND-BLACK
YELLOW AND GREEN
BLUE AND YELLOW
BLACK
GREEN
BLUE
MAROON
RED
YELLOW
BROWN
R-17 100,000Ω
R-18 20,000Ω
R-16 40,000Ω
R-20 1 MEG.
R-21 700Ω
R-19 25,000Ω
BLUE AND YELLOW
BLACK WITH RED TRACER
BLACK AND RED
BROWN AND BLACK
UX-280
RCA-247
C-29 .003 MFD.
GROUND TO FRAME
5 4 3 2 1
10
T-2
INTERSTAGE TRANSFORMER CONNECTIONS
YELLOW-AND-GREEN
BLUE-AND-YELLOW
T-3
OUTPUT TRANSFORMER CONNECTIONS
RED-AND-BLACK
T-1
POWER TRANSFORMER CONNECTIONS
YELLOW BROWN
BROWN-AND-BLACK
BROWN GREEN
GREEN BLUE
BLUE-AND-YELLOW
BLACK-AND-RED
BLACK-WITH RED TRACER
C-31 2. MFD. 60~ 4. MFD. 25~
C-33 3. MFD. 60~ 4. MFD. 25~
C-36 0.5 MFD.
C-34 0.1 MFD.
C-35 0.5 MFD.
CAPACITOR PACK CONNECTIONS
L-18
REACTOR CONNECTIONS

S. P. U. No. 2 wiring

R. C. A. VICTOR CO., INC.

MODEL Radiola 80
Trimmers
Power Supply Chassis

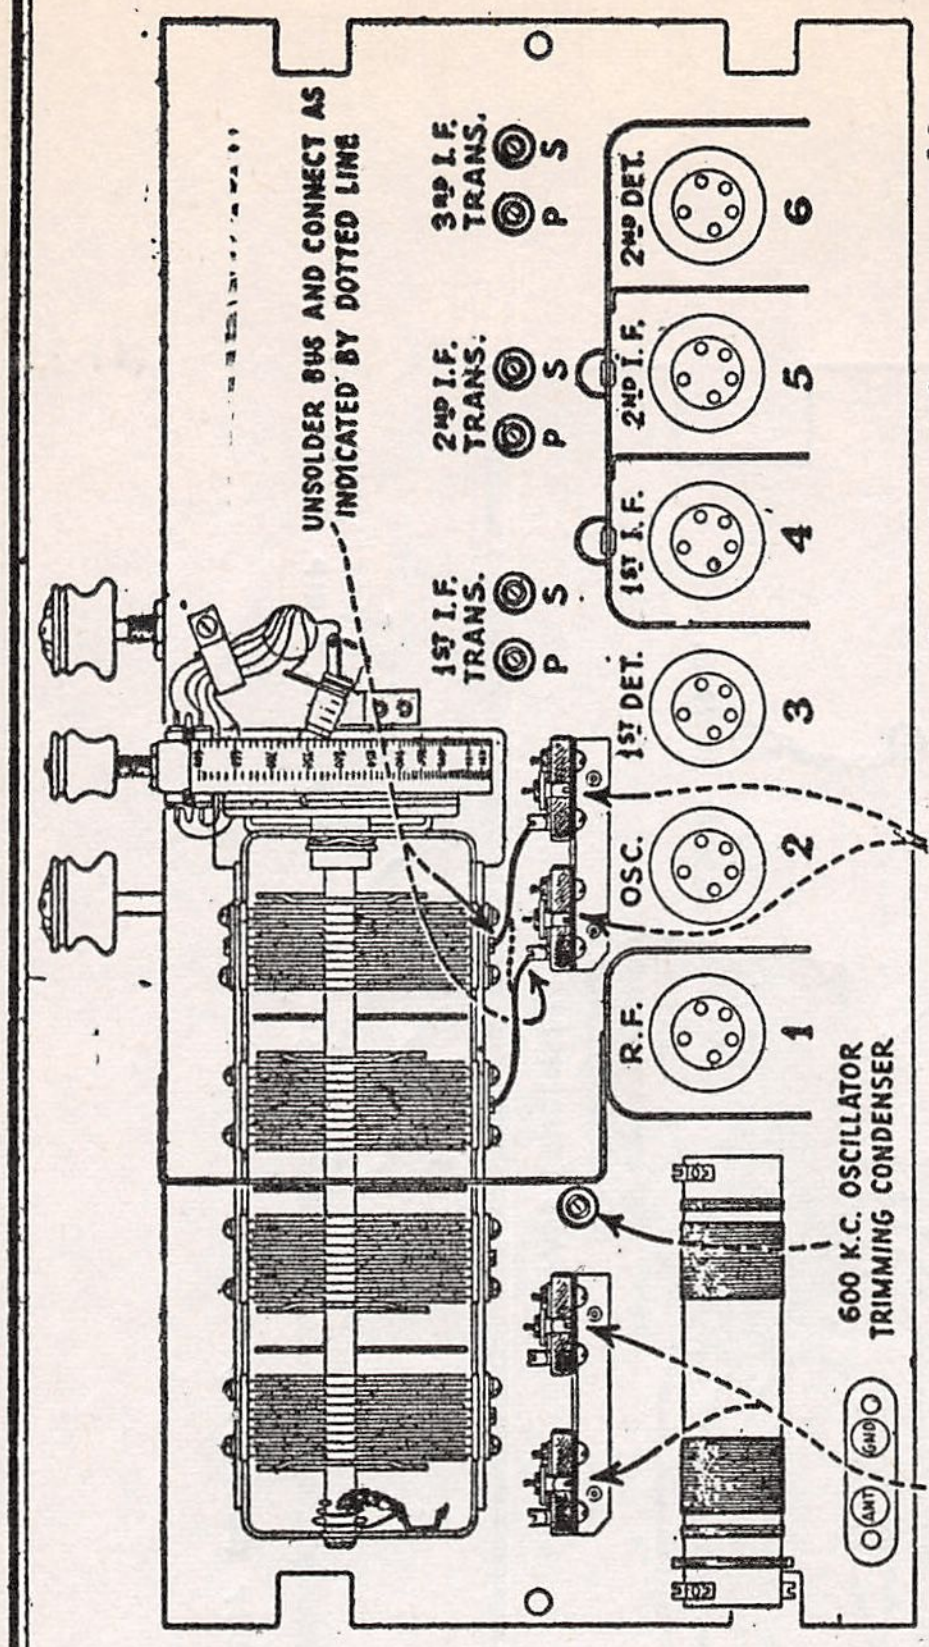
UNSOLDER BUS AND CONNECT AS INDICATED BY DOTTED LINE
1ST I.F. TRANS. P S
2ND I.F. TRANS. P S
3RD I.F. TRANS. P S
R.F. 1
OSC. 2
1ST DET. 3
1ST I.F. 4
2ND I.F. 5
2ND DET. 6
600 K.C. OSCILLATOR TRIMMING CONDENSER
1400 K.C. TRIMMING CONDENSERS

Top view of receiver assembly showing condenser adjustments

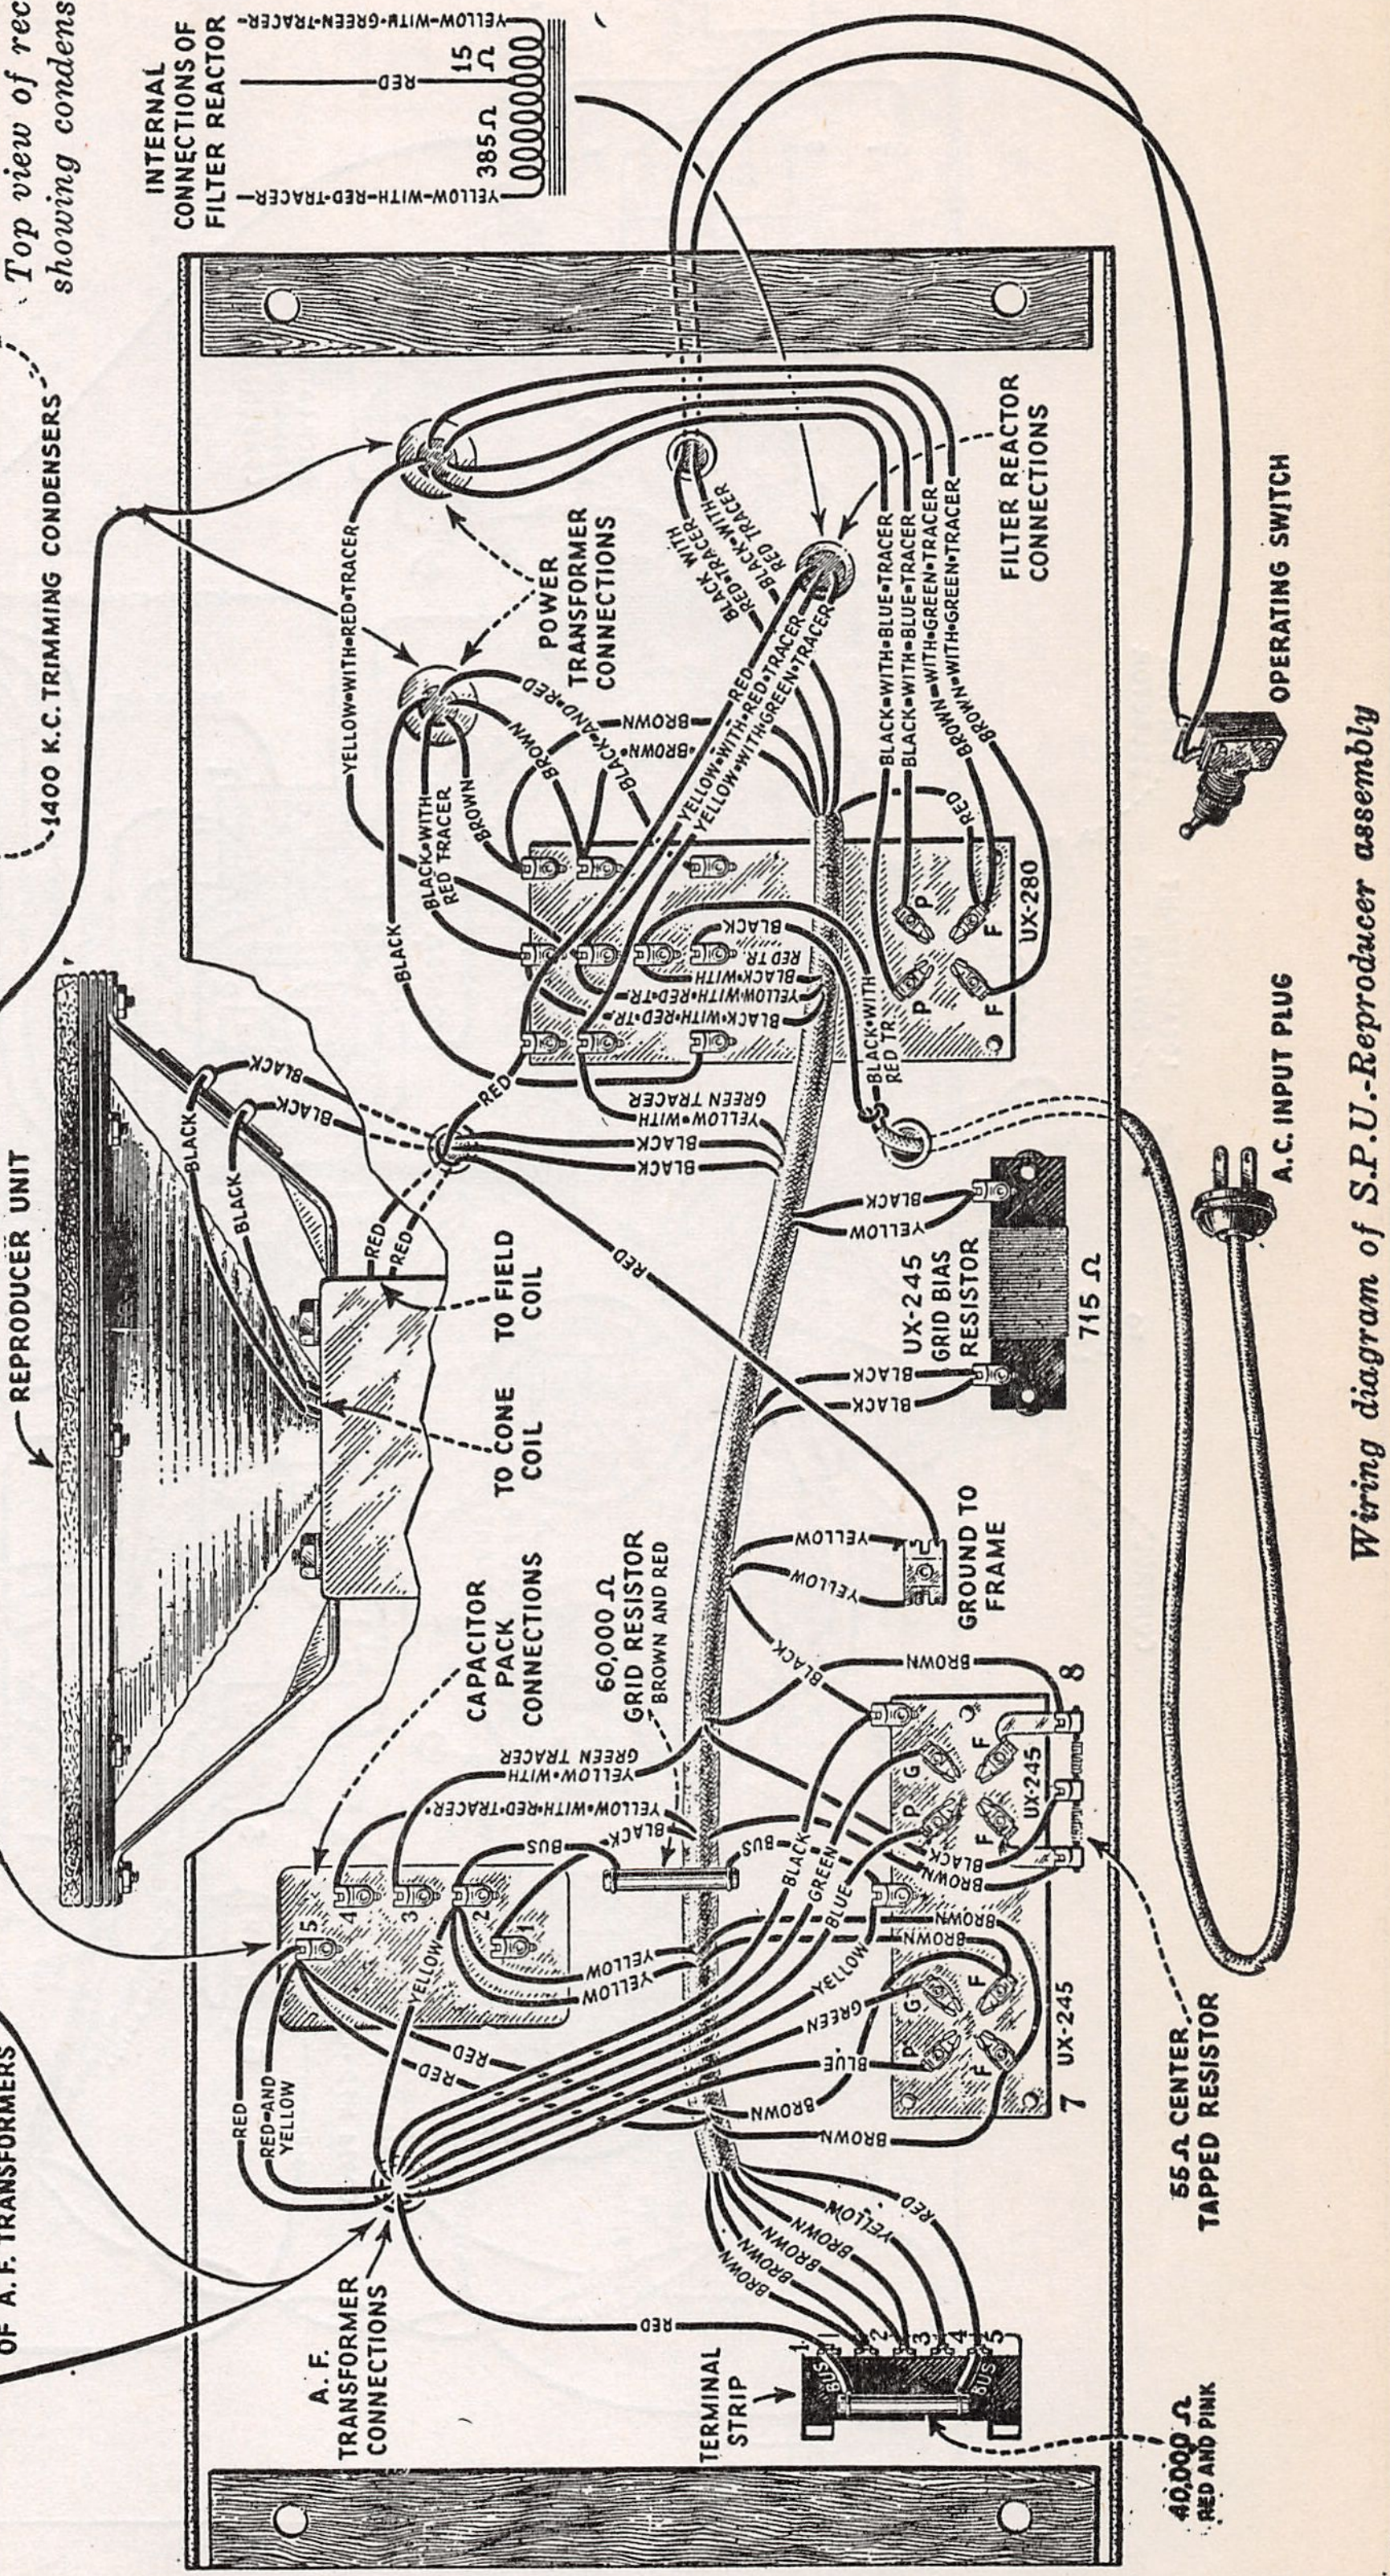
INTERNAL CONNECTIONS OF FILTER REACTOR
YELLOW-WITH-GREEN-TRACER
RED
15 Ω
385 Ω
YELLOW-WITH-RED-TRACER
POWER TRANSFORMER CONNECTIONS
FILTER REACTOR CONNECTIONS
OPERATING SWITCH
A.C. INPUT PLUG
UX-280
P F
REPRODUCER UNIT
TO FIELD COIL
TO CONE COIL
UX-245 GRID BIAS RESISTOR
715 Ω
GROUND TO FRAME
CAPACITOR PACK CONNECTIONS
60,000 Ω GRID RESISTOR BROWN AND RED
UX-245
P G F
7
8
55 Ω CENTER TAPPED RESISTOR
A. F. TRANSFORMER CONNECTIONS
TERMINAL STRIP
BUS
1 2 3 4 5
40,000 Ω RED AND PINK
YELLOW-WITH-RED-TRACER
BLACK-WITH RED TRACER
BLACK-WITH-BLUE-TRACER
BLACK-WITH-GREEN-TRACER
BROWN-WITH-GREEN-TRACER
YELLOW-WITH-GREEN-TRACER
BLACK-AND-RED
BROWN
BLACK
RED
YELLOW
GREEN
BLUE
RED-AND-YELLOW

Wiring diagram of S.P.U.-Reproducer assembly

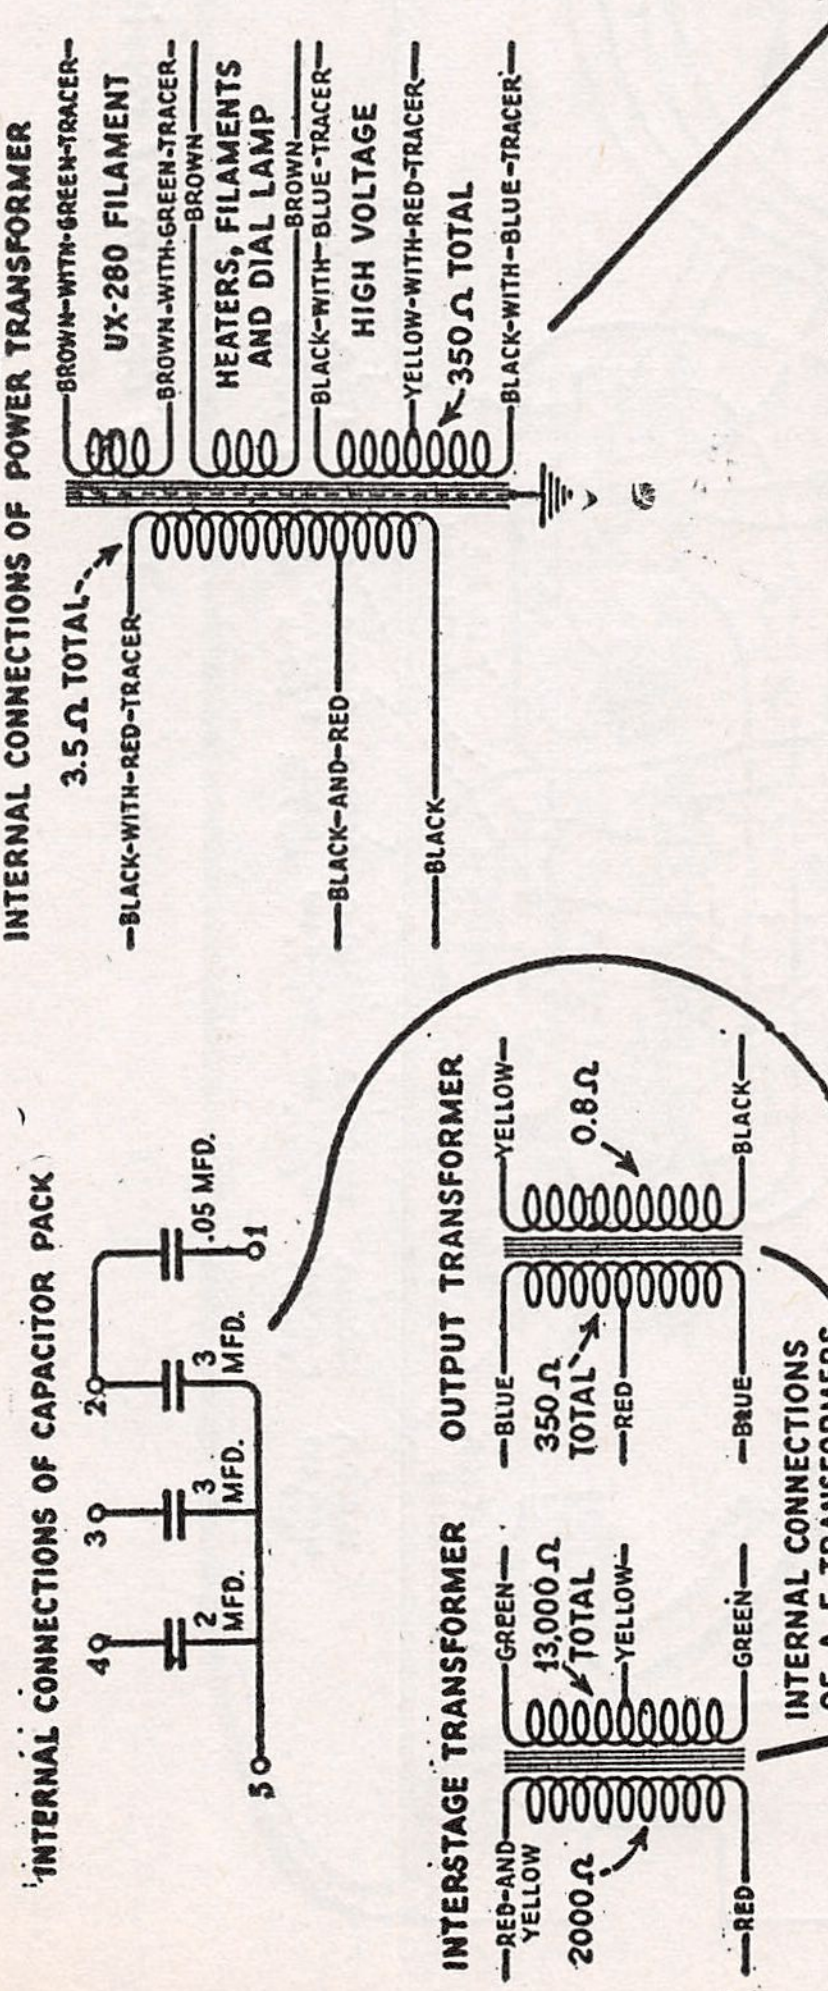
INTERNAL CONNECTIONS OF POWER TRANSFORMER
3.5 Ω TOTAL
BLACK-WITH-RED-TRACER
BLACK-AND-RED
BLACK
BROWN-WITH-GREEN-TRACER
UX-280 FILAMENT
BROWN-WITH-GREEN-TRACER
BROWN
HEATERS, FILAMENTS AND DIAL LAMP
BROWN
BLACK-WITH-BLUE-TRACER
HIGH VOLTAGE
YELLOW-WITH-RED-TRACER
350 Ω TOTAL
BLACK-WITH-BLUE-TRACER
INTERNAL CONNECTIONS OF CAPACITOR PACK
.05 MFD.
3 MFD.
3 MFD.
2 MFD.
1 2 3 4 5
OUTPUT TRANSFORMER
YELLOW
0.8 Ω
BLACK
BLUE
350 Ω TOTAL
RED
INTERSTAGE TRANSFORMER
RED-AND-YELLOW
2000 Ω
RED
GREEN
13,000 Ω TOTAL
YELLOW
INTERNAL CONNECTIONS OF A. F. TRANSFORMERS

MODEL Radiola 80
Receiver chassis

R. C. A. - VICTOR CO., INC.

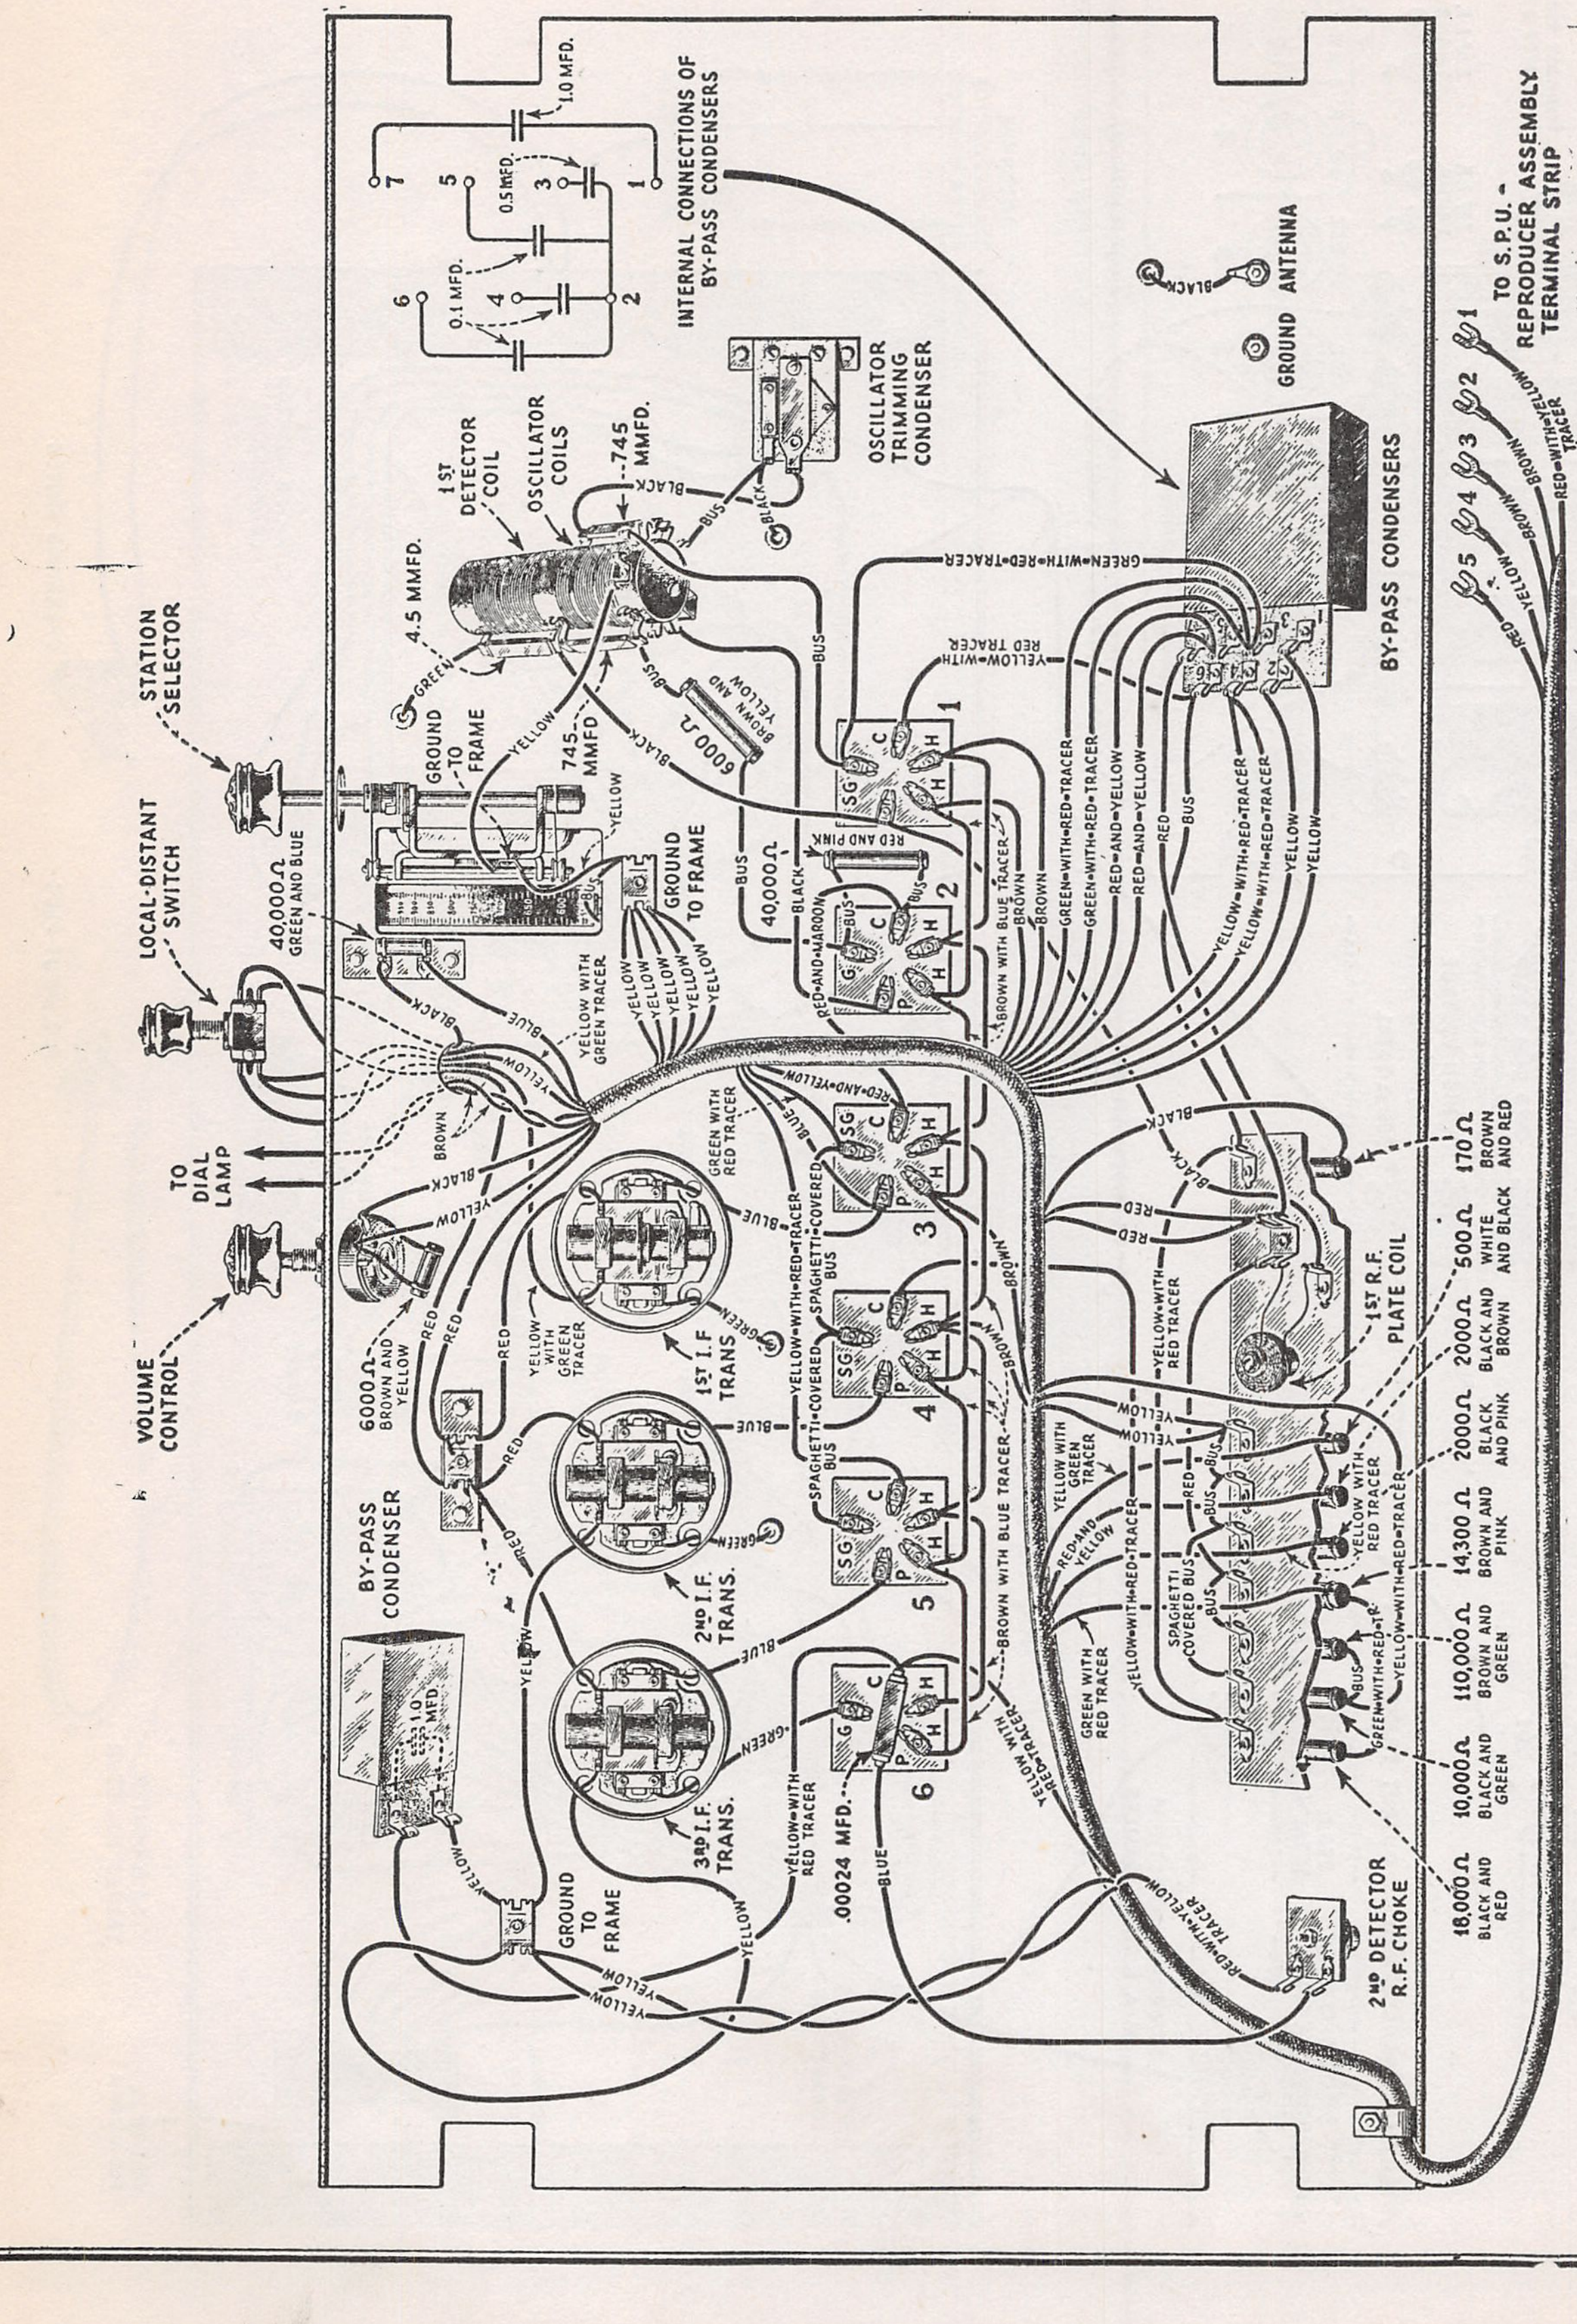
INTERNAL CONNECTIONS OF BY-PASS CONDENSERS
1.0 MFD.
0.5 MFD.
0.1 MFD.
7
5
3
1
6
4
2
STATION SELECTOR
LOCAL-DISTANT SWITCH
TO DIAL LAMP
VOLUME CONTROL
1ST DETECTOR COIL
OSCILLATOR COILS
745 MMFD.
4.5 MMFD.
OSCILLATOR TRIMMING CONDENSER
GROUND ANTENNA
BLACK
BY-PASS CONDENSERS
TO S.P.U. - REPRODUCER ASSEMBLY TERMINAL STRIP
GROUND TO FRAME
745 MMFD
6000 Ω
BROWN AND YELLOW
40,000 Ω GREEN AND BLUE
40,000 Ω
RED AND PINK
YELLOW WITH GREEN TRACER
6000 Ω BROWN AND YELLOW
BY-PASS CONDENSER
1.0 MFD.
1ST I.F TRANS
2ND I.F. TRANS.
3RD I.F. TRANS.
.00024 MFD.
GROUND TO FRAME
2ND DETECTOR R.F. CHOKE
1ST R.F. PLATE COIL
170 Ω BROWN AND RED
500 Ω WHITE AND BLACK
2000 Ω BLACK AND BROWN
2000 Ω BLACK AND PINK
14,300 Ω BROWN AND PINK
110,000 Ω BROWN AND GREEN
10,000 Ω BLACK AND GREEN
18,000 Ω BLACK AND RED
SG
C
P
G
H
1
2
3
4
5
6
GREEN-WITH-RED-TRACER
YELLOW-WITH RED TRACER
RED-AND-YELLOW
YELLOW-WITH-RED-TRACER
SPAGHETTI-COVERED BUS
BROWN WITH BLUE TRACER
RED-AND-MAROON
RED-WITH-YELLOW TRACER
YELLOW
BLUE
BLACK
BROWN
RED
GREEN
BUS

Wiring diagram of receiver assembly

MODEL Radiola 80
Resistance Data

R. C. A. · VICTOR CO., INC.

All tubes out of sockets and AC plug disconnected from power supply.
Volume Control set for maximum signal unless otherwise specified

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis to			
Link circuit condenser stator	5	ohms	TC-Y
RF Control Grid	5	ohms	TC- rf Cg-Y
RF Cathode (V.C.Min)	2,570	ohms	BC- rf K-Y (.1 mfd) BC- rf Sg-Y (.5 mfd)
RF Cathode (V.C. Max)	170	ohms	See V.C. Min
RF Screen Grid	16,000	ohms	BC- rf Sg- Y (.5 mfd) BC-2 D - Y (1. mfd) FC- '80 F-Y (3. mfd)
RF Plate	26,597	ohms	See RF Cathode
RF Plate to '80 Fil	42	ohms	
1 Detector Control Grid	5	ohms	TC- 1 D Cg-Y
1 Detector Cathode	2,000	ohms	BC- 1 D K-Y (.1 mfd)
1 Detector Screen Grid	16,000	ohms	See RF Screen
1 Detector Plate (distant)	26,594	ohms	See RF Screen
1 Detector Plate to '80 Fil9 distant)	39	ohms	
Oscillator Control Grid	42,000	ohms	BC- 1 D K-Y (.1 mfd) Oscillator Grid condenser)
Oscillator Cathode	2,000	ohms	BC- 1 D K-Y (.1 mfd)
Osc control grid to cathode	40,000	ohms	
Oscillator Plate	16,000	ohms	See RF Screen
Oscillator Plate to RF Screen	1	ohm	
1 IF Control Grid	41	ohms	TC- 1 IF Cg-Y
1 IF Control Grid to distant switch	541	ohms	"Distant" Adjustment
1 IF Cathode	170	ohms	See RF Cathode
1 IF Screen Grid	16,000	ohms	See Rf Screen
1 IF Plate	26,594	ohms	See RF Screen
1 IF Plate to '80 Fil	39	ohms	
2 IF Control Grid	41	ohms	TC- 2 IF Cg-Y
2 IF Cathode	2,000	ohms	BC- 2 IF K-Y (.1 mfd)
2 IF Screen Grid	16,000	ohms	See RF Screen
2 IF Plate	26,594	ohms	See RF Screen
2 Detector Control Grid	41	ohms	TC-2D Cg-Y
2 Detector Cathode	9,346	ohms	BC-2D K-Y (1. mfd)
2 Detector Plate	28,540	ohms	FC-'80 F-Y (3 mfd)
2 Det Plate to '80 Fil	1,985	ohms	BC-2DP-2DK(.0024 mfd)
'45 Control Grid	66,500	ohms	
'45 Control Grid to Control Grid	13,000	ohms	
'45 Plate	26,730	ohms	See RF Screen
'45 Plate to 45 Plate	350	ohms	
'45 Plate to '80 Fil	175	ohms	
'45 Filament	730	ohms	BC-715 ohm unit-Y (.05 mfd)
'80 Filament	26,555	ohms	
'80 Filament to '8C Plate	28,445	ohms	FC-80F (2 mfd) FC-80F (3 .mfd) Harm. Condenser (3. mfd) See RF Screen
80 Anode to 80 Anode	350	ohms	
Speaker field only	1,330	ohms	
Output transformer secondary only	.8	ohm	
Voice coil only	10	ohms	
Oscillator coil only	5	ohms	
Across AC Plug	3.5	ohms	

MODEL Radiola 82
Receiver Chassis

R. C. A. VICTOR CO., INC.

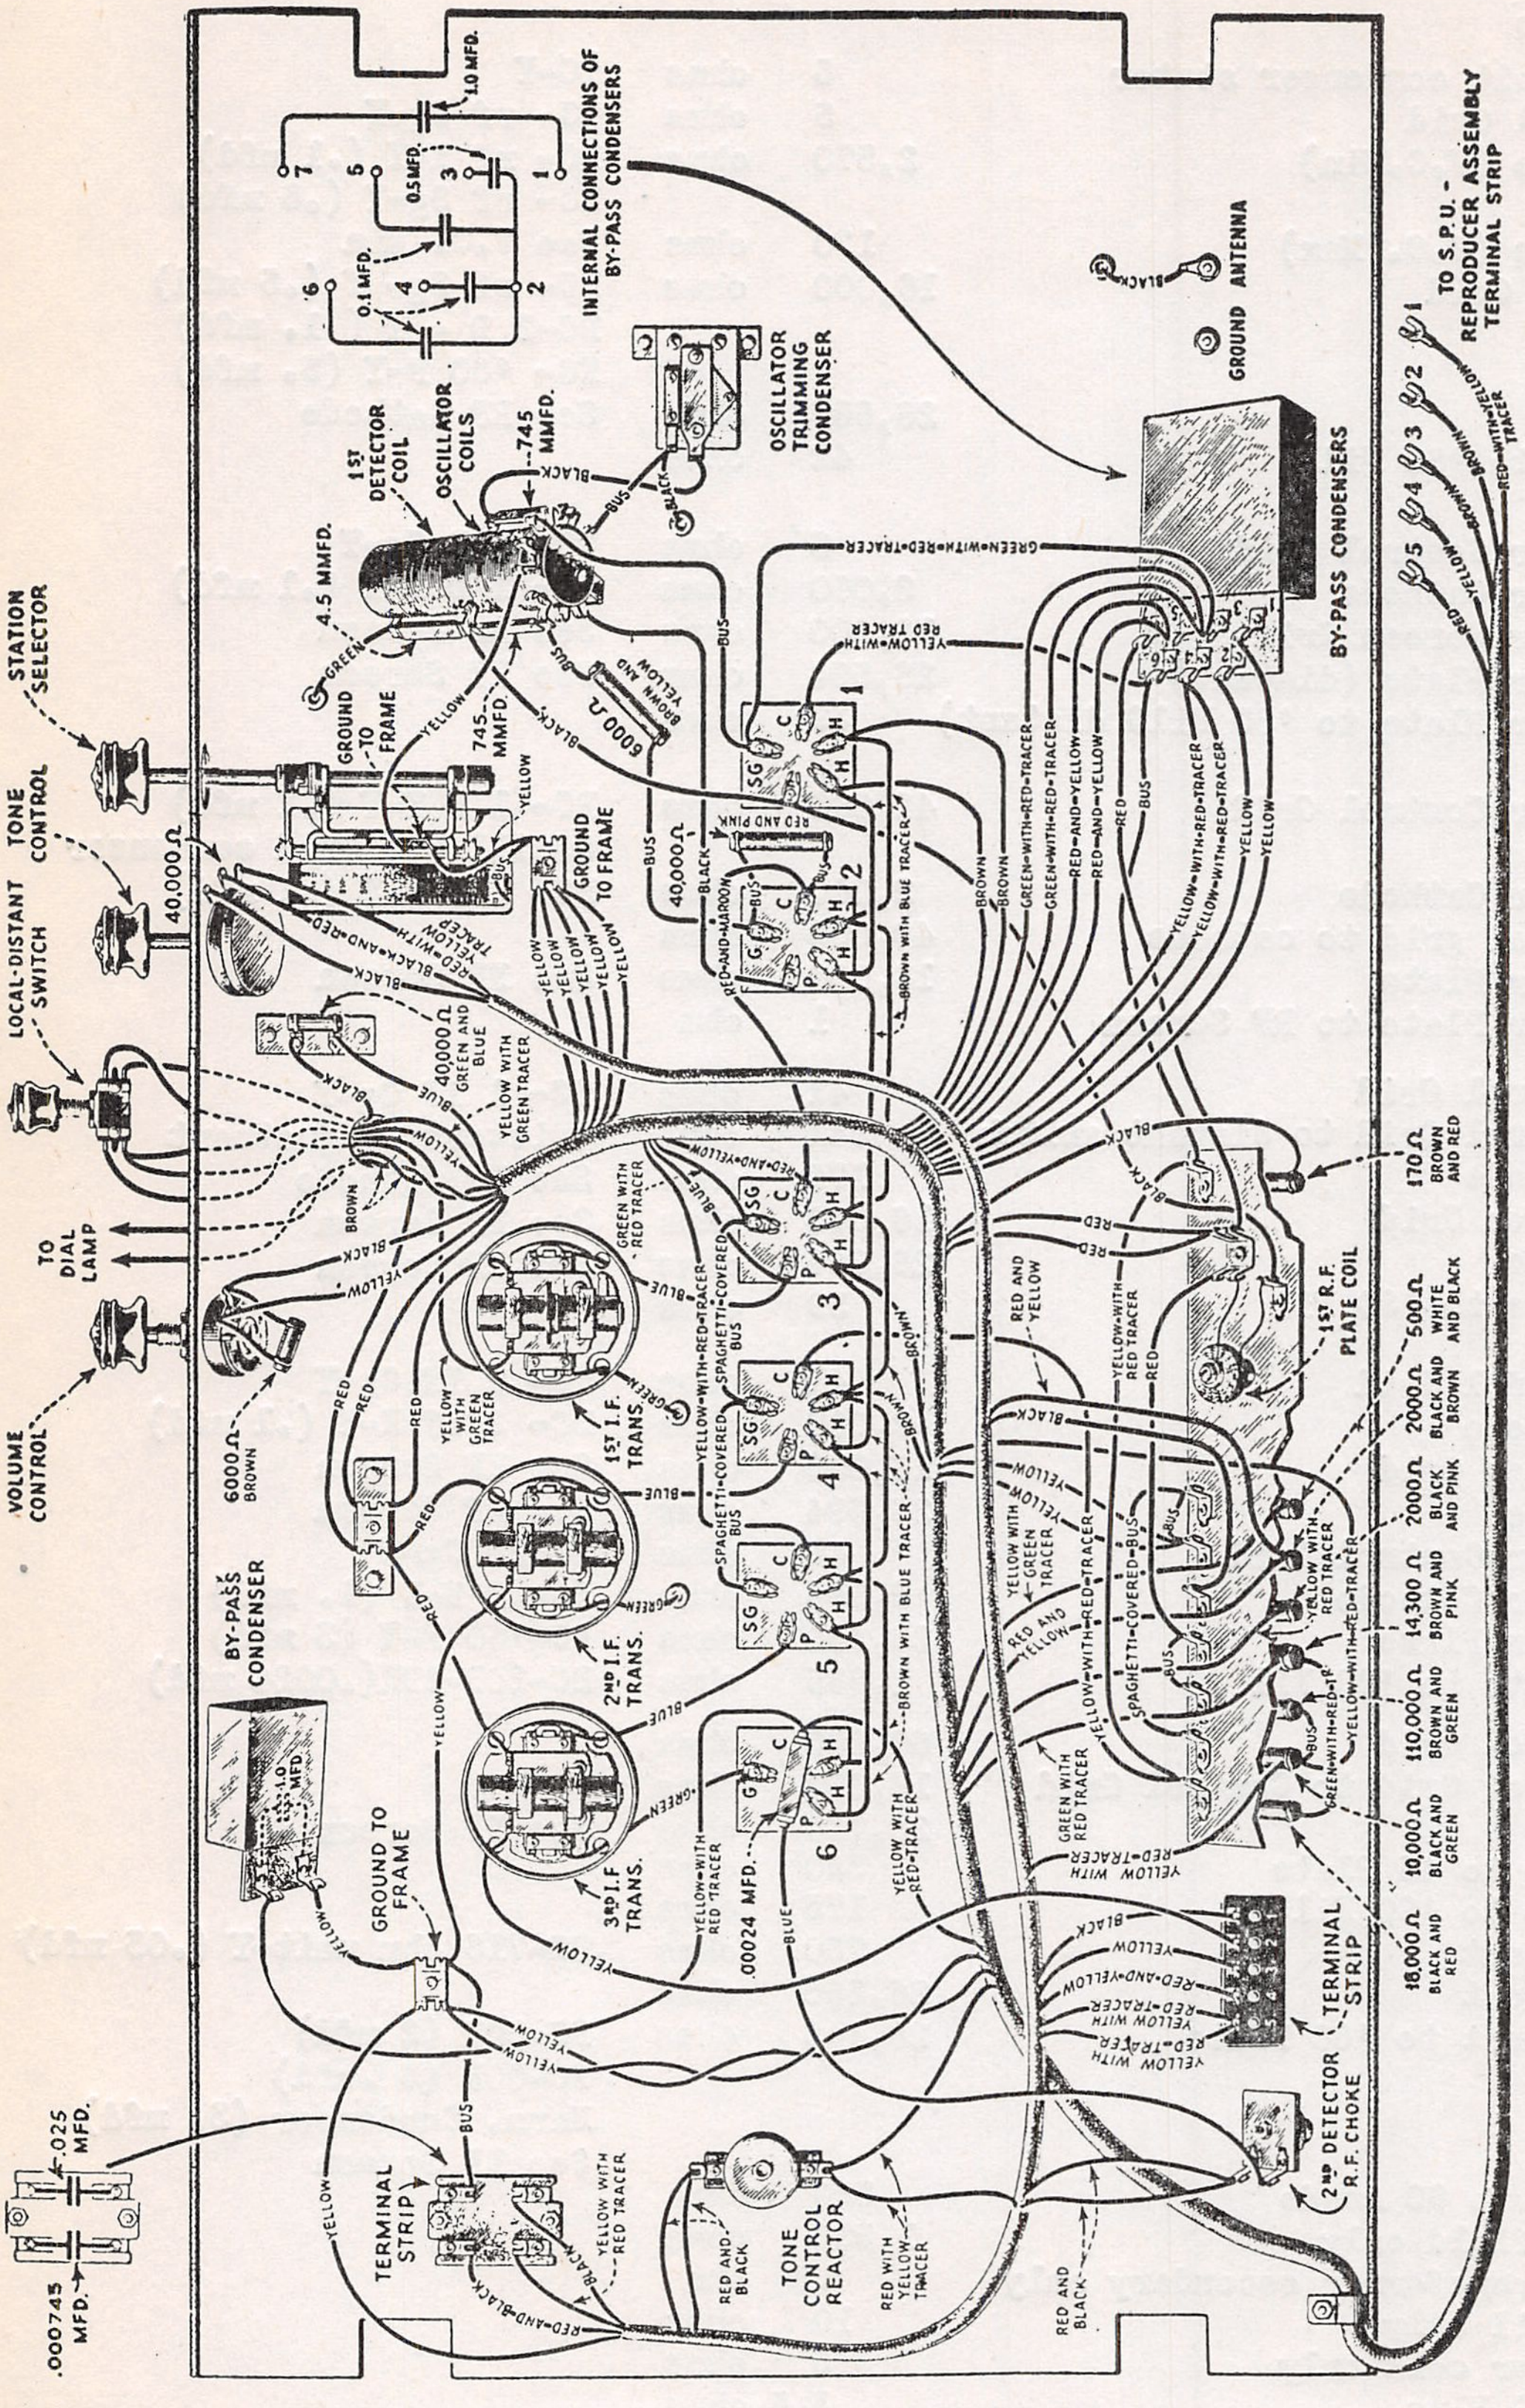
STATION SELECTOR
TONE CONTROL
LOCAL-DISTANT SWITCH
TO DIAL LAMP
VOLUME CONTROL
6000 Ω BROWN
BY-PASS CONDENSER
GROUND TO FRAME
.025 MFD.
.000745 MFD.
TERMINAL STRIP
TONE CONTROL REACTOR
RED AND BLACK
RED WITH YELLOW TRACER
1ST DETECTOR COIL
OSCILLATOR COILS
745 MMFD.
4.5 MMFD.
745 MMFD
GROUND TO FRAME
6000 Ω
40,000 Ω
40,000 Ω GREEN AND BLUE
INTERNAL CONNECTIONS OF BY-PASS CONDENSERS
1.0 MFD.
0.5 MFD.
0.1 MFD.
OSCILLATOR TRIMMING CONDENSER
GROUND ANTENNA
BY-PASS CONDENSERS
TO S.P.U.-REPRODUCER ASSEMBLY TERMINAL STRIP
1ST I.F. TRANS.
2ND I.F. TRANS.
3RD I.F TRANS.
.00024 MFD.
1ST R.F. PLATE COIL
170 Ω BROWN AND RED
500 Ω WHITE AND BLACK
2000 Ω BLACK AND BROWN
2000 Ω BLACK AND PINK
14,300 Ω BROWN AND PINK
110,000 Ω BROWN AND GREEN
10,000 Ω BLACK AND GREEN
18,000 Ω BLACK AND RED
TERMINAL STRIP
2ND DETECTOR R.F. CHOKE
SG
C
G
P
H
1
2
3
4
5
6

Wiring diagram of the receiver assembly.

RADIOLA 82

R. C. A. VICTOR CO., INC.

MODEL Radiola 82
Power Unit Chassis

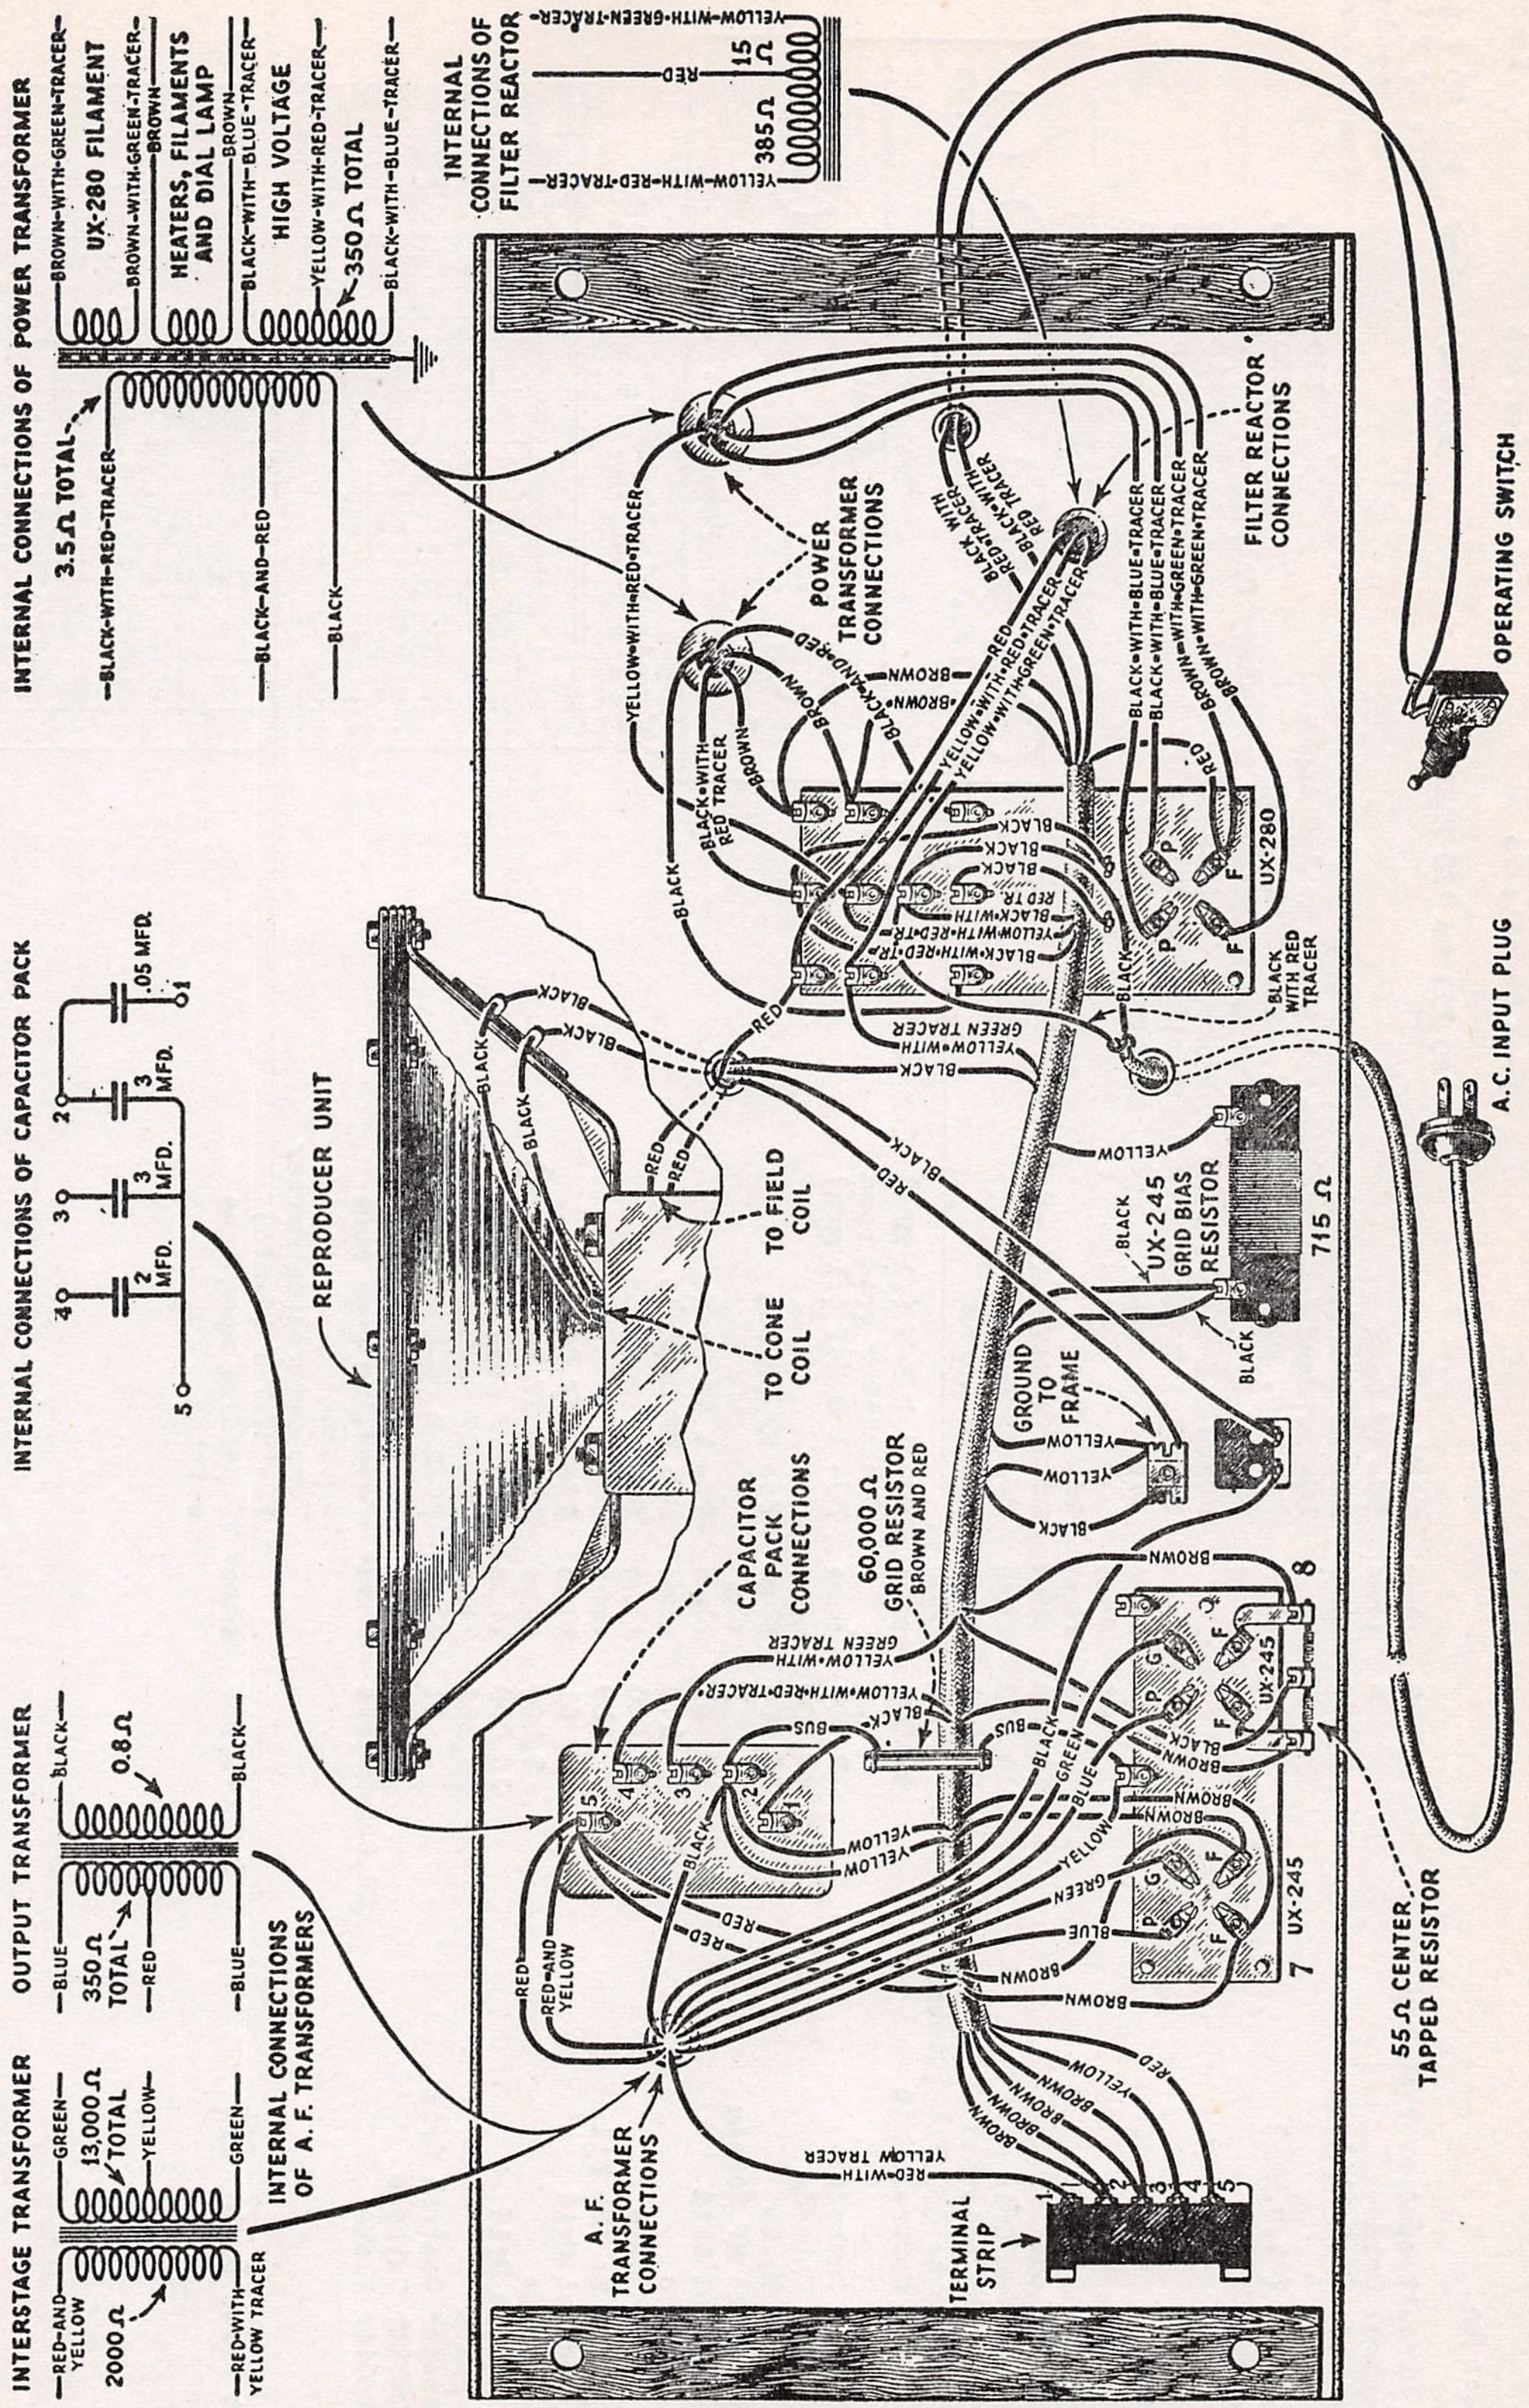
INTERNAL CONNECTIONS OF POWER TRANSFORMER
BROWN-WITH-GREEN-TRACER
UX-280 FILAMENT
BROWN-WITH-GREEN-TRACER
BROWN
HEATERS, FILAMENTS AND DIAL LAMP
BROWN
BLACK-WITH-BLUE-TRACER
HIGH VOLTAGE
YELLOW-WITH-RED-TRACER
350 Ω TOTAL
BLACK-WITH-BLUE-TRACER
3.5 Ω TOTAL
BLACK-WITH-RED-TRACER
BLACK-AND-RED
BLACK
INTERNAL CONNECTIONS OF FILTER REACTOR
YELLOW-WITH-GREEN-TRACER
15 Ω
RED
385 Ω
YELLOW-WITH-RED-TRACER
POWER TRANSFORMER CONNECTIONS
FILTER REACTOR CONNECTIONS
OPERATING SWITCH
UX-280
A.C. INPUT PLUG
INTERNAL CONNECTIONS OF CAPACITOR PACK
.05 MFD.
2 MFD.
3 MFD.
3 MFD.
1
2
3
4
5
REPRODUCER UNIT
TO FIELD COIL
TO CONE COIL
UX-245 GRID BIAS RESISTOR
715 Ω
GROUND TO FRAME
CAPACITOR PACK CONNECTIONS
60,000 Ω GRID RESISTOR BROWN AND RED
UX-245
UX-245
7
8
55 Ω CENTER TAPPED RESISTOR
INTERSTAGE TRANSFORMER
RED-AND-YELLOW
2000 Ω
RED-WITH-YELLOW TRACER
GREEN
13,000 Ω TOTAL
YELLOW
OUTPUT TRANSFORMER
BLUE
350 Ω TOTAL
RED
0.8 Ω
BLACK
INTERNAL CONNECTIONS OF A. F. TRANSFORMERS
A. F. TRANSFORMER CONNECTIONS
TERMINAL STRIP
RED-WITH-YELLOW TRACER
BROWN
YELLOW
RED
BLACK
BLUE
BUS
BLACK WITH RED TRACER
YELLOW-WITH-GREEN-TRACER
YELLOW-WITH-RED-TRACER
BLACK-WITH-BLUE-TRACER
BROWN-WITH-GREEN-TRACER
RED-AND-YELLOW
P
G
F

Wiring diagram of the socket power unit.

RADIOLA 82

MODEL Radiola 82
Resistance Data

R. C. A. VICTOR CO., INC.

All tubes removed from sockets and AC plug disconnected from power supply. Volume Control set for maximum signal unless otherwise stated. Phonograph pickup disconnected from terminal board and terminals 1,2 and 3 joined. Terminals 4 and 5 left open.

From Chassis To	Correct		Incorrect
Aerial to Ground	40	ohms	
Chassis to			
Link Circuit condenser stator	5	ohms	TC-Y
RF Control Grid	5	ohms	TC- rf Cg-Y
RF Cathode (V.C.Min)	2,570	ohms	BC- rf K-Y (.1 mfd) BC- rf Sg-Y (.5 mfd)
RF Cathode (V.C.Max)	170	ohms	See V.C. Min
RF Screen Grid	16,000	ohms	BC- rf Sg-Y (.5 mfd) BC- 2 D K-Y (1. mfd) FC- 80 F-Y (3. mfd)
RF Plate	26,597	ohms	See RF Cathode
RF Plate to 80 Fil	42	ohms	
1 Det. Control Grid	5	ohms	TC- 1 D Cg
1 Det. Cathode	2,000	ohms	BC- 1 D K-Y (.1 mfd)
1 Det. Screen Grid	16,000	ohms	See RF Screen
1 Det. Plate (distant adj)	26,594	ohms	See Rf Screen
1 Det Plate to '80 Fil (distant)	39	ohms	
Oscillator Control Grid	42,000	ohms	BC- 1 D K-Y (.1 mfd) Oscillator grid cond
Oscillator Cathode	2,000	ohms	BC- 1 D K-Y (.1 mfd)
Osc. Cg to Cathode	40,000	ohms	
Oscillator Plate	16,000	ohms	See RF Screen
Osc Plate to RF Screen	1	ohm	
1 IF Control Grid	41	ohms	TC- 1 IF Cg-Y
1 IF Cathode	170	ohms	See RF Cathode
1 IF Screen Grid	16,000	ohms	See RF Screen
1 IF Plate to '80 Fil	39	ohms	
2 IF Control Grid	41	ohms	TC- 2 IF Cg-Y
2 IF Cathode	2,000	ohms	BC- 2 IF K-Y (.1 mfd)
2 IF Screen Grid	16,000	ohms	See RF Screen
2 IF Plate	26,594	ohms	See RF Screen
2 Detector Control Grid	41	ohms	TC-2 D Cg-Y
2 Detector Cathode	9,346	ohms	BC-2 D K-Y (1.mfd)
2 Detector Plate	28,635-29,894	ohms*	*Depending upon tone setting Tone control condenser FC-'80 F-Y (3.mfd)
2 Det Plate to '80 Fil	2,080-3,339	ohms*	*Depending upon tone setting

'45 Control Grid	66,500	ohms	
'45 Control Grid to Control Grid	13,000	ohms	
'45 Plate	26,730	ohms	See RF Screen
'45 Plate to '45 Plate	350	ohms	
'45 Plate to '80 Fil	175	ohms	
'45 Filament	730	ohms	BC-715 Ohm Unit-Y
'80 Filament	26,555	ohms	

From Chassis To	Correct		Incorrect
'80 Fil to '80 Plate	28,445	ohms	FC- 80 F (2 mfd) FC- 80 F (3. mfd) Har. condenser (3. mfd) See RF Screen
'80 Anode to '80 Anode	350	ohms	
Speaker Field only	1,330	ohms	
Output Transformer Secondary Only	.8	ohm	
Voice Coil only	10	ohms	
Oscillator coil only	5	ohms	
Across AC Plug	3.5	ohms	

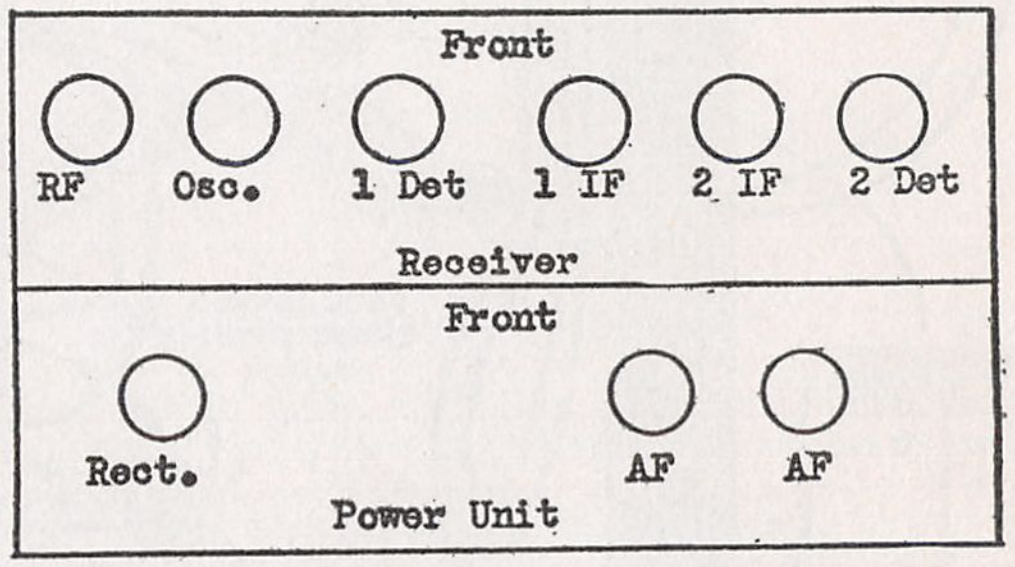

Volume Control at Maximum
*Not True Reading Due to Resistor in Circuit

			Meter Readings with Jewell Test Plug in Socket of Set									
			Operating Voltages					Milliamperes				
Tube No. in Order Tested ①	Type of Tube ②	Position of Tube in Set ③	Filament or Heater ④	Plate or Anode ⑤	Control Grid—Space Gd+ ⑥	Normal Grid—Screen Gd+ ⑦	Cathode to Heater ⑧	Screen Gd L.H. '80 Plate ⑨	Plate R.H. '80 Plate ⑩	Tube Test ⑪	Plate Current Change ⑫	⑬
1	224	1 R.F.	2.2	240	2.2	80	-34	.5	3.2			
2	227	Osc.	2.2	60	-	-	-22	-	6.5			
3	224	1 Det.	2.2	230	9.5	72	-25	.1	.25			
4	224	1 I.F.	2.2	240	2.2	78	-34	.5	4.0			
5	224	2 I.F.	2.2	240	4.2	78	-31.5	.5	1.6			
6	227	2 Det.	2.2	212	-	22	-12	-	.25			
7	245	PP-AF	2.2	206	-	19*	-	-	25.0			
8	245	PP-AF	2.2	206	-	19*	-	-	25.0			
9	280	Rect.	4.6	-	-	-	-	-	-			
10												

Volume Control at Minimum

			Meter Readings with Jewell Test Plug in Socket of Set									
			Operating Voltages					Milliamperes				
Tube No. in Order Tested ①	Type of Tube ②	Position of Tube in Set ③	Filament or Heater ④	Plate or Anode ⑤	Control Grid—Space Gd+ ⑥	Normal Grid—Screen Gd+ ⑦	Cathode to Heater ⑧	Screen Gd L.H. '80 Plate ⑨	Plate R.H. '80 Plate ⑩	Tube Test ⑪	Plate Current Change ⑫	⑬
1	224	1 R.F.	2.2	230	10	75	-25	0	0			
2	227	Osc.	2.2	65	-	-	-22	-	7.5			
3	224	1 Det.	2.2	240	10	82	-25	.1	0			
4	224	1 I.F.	2.2	230	10	75	-25	0	0			
5	224	2 I.F.	2.2	250	6	90	-32	1.0	2.2			
6	227	2 Det.	2.2	220	-	22	-12	-	.25			
7	245	PP-AF	2.2	210	-	20*	-	-	28.0			
8	245	PP-AF	2.2	210	-	20*	-	-	28.0			
9	280	Rect.	4.6	-	-	-	-	-	-			
10												

MODEL Radiola 86
Assembly Wiring

R. C. A. VICTOR CO., INC.

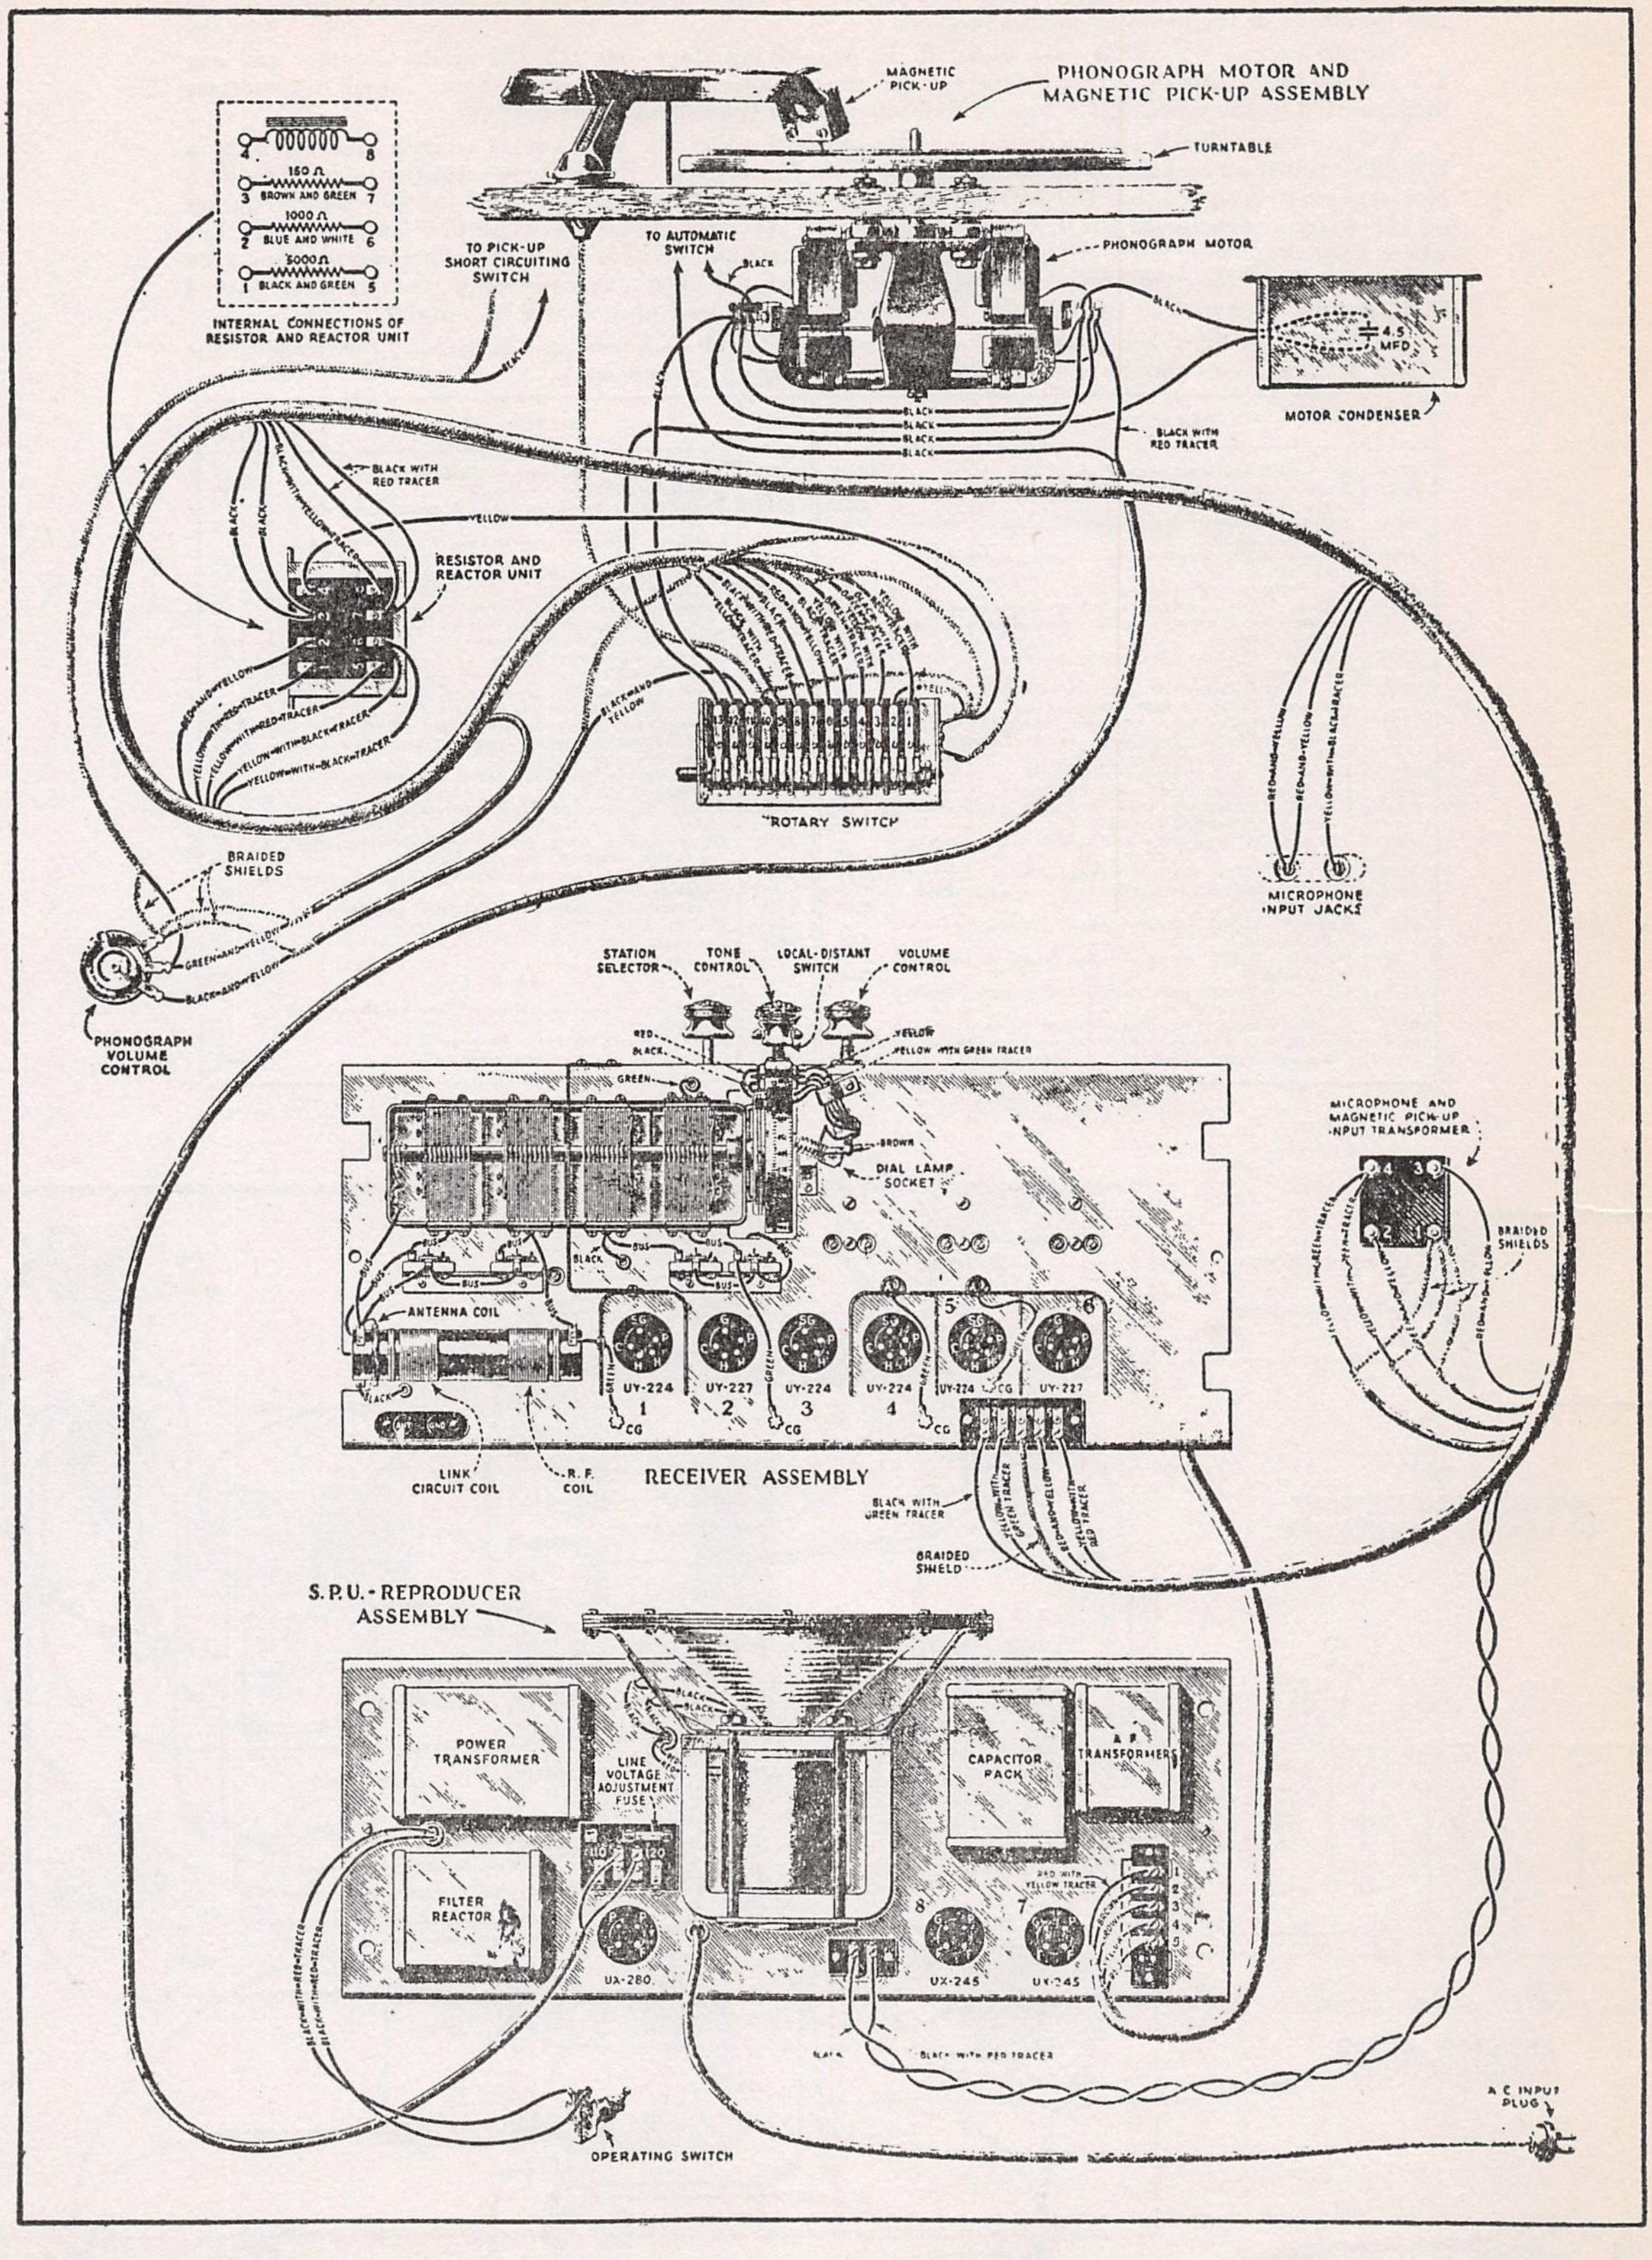
MAGNETIC PICK-UP
PHONOGRAPH MOTOR AND MAGNETIC PICK-UP ASSEMBLY
TURNTABLE
4 8
150 Ω
3 BROWN AND GREEN 7
1000 Ω
2 BLUE AND WHITE 6
5000 Ω
1 BLACK AND GREEN 5
INTERNAL CONNECTIONS OF RESISTOR AND REACTOR UNIT
TO PICK-UP SHORT CIRCUITING SWITCH
TO AUTOMATIC SWITCH
BLACK
PHONOGRAPH MOTOR
4.5 MFD
MOTOR CONDENSER
BLACK WITH RED TRACER
BLACK
YELLOW
BLACK WITH YELLOW TRACER
RESISTOR AND REACTOR UNIT
RED-AND-YELLOW
YELLOW-WITH-RED-TRACER
YELLOW-WITH-BLACK-TRACER
BLACK-AND-YELLOW
BLACK WITH RED TRACER
RED-AND-YELLOW
YELLOW WITH RED TRACER
ROTARY SWITCH
13 12 11 10 9 8 7 6 5 4 3 2 1
RED-AND-YELLOW
YELLOW-WITH-BLACK-TRACER
MICROPHONE INPUT JACKS
BRAIDED SHIELDS
GREEN-AND-YELLOW
BLACK-AND-YELLOW
PHONOGRAPH VOLUME CONTROL
STATION SELECTOR
TONE CONTROL
LOCAL-DISTANT SWITCH
VOLUME CONTROL
RED
BLACK
YELLOW
YELLOW WITH GREEN TRACER
GREEN
BROWN
DIAL LAMP SOCKET
BUS
ANTENNA COIL
SG G C P H
UY-224 1
UY-227 2
UY-224 3
UY-224 4
UY-224 5
UY-227 6
CG
ANT GND
LINK CIRCUIT COIL
R. F. COIL
RECEIVER ASSEMBLY
BLACK WITH GREEN TRACER
YELLOW-WITH-GREEN TRACER
RED-AND-YELLOW
YELLOW-WITH-RED TRACER
BRAIDED SHIELD
MICROPHONE AND MAGNETIC PICK-UP INPUT TRANSFORMER
4 3 2 1
BRAIDED SHIELDS
S. P. U. - REPRODUCER ASSEMBLY
POWER TRANSFORMER
LINE VOLTAGE ADJUSTMENT FUSE
110 120
FILTER REACTOR
UX-280
CAPACITOR PACK
A F TRANSFORMERS
RED WITH YELLOW TRACER
1 2 3 4 5
8 7
UX-245
UX-245
BLACK-WITH-RED-TRACER
BLACK
BLACK WITH RED TRACER
OPERATING SWITCH
A C INPUT PLUG

R. C. A. VICTOR CO., INC.

MODEL SWA-2 SHORT WAVE CONVERTER

RCA Victor Short Wave Converter SWA-2 is a three tube, single control short wave unit designed to convert all short wave signals from 13.8–200 meters to a single frequency so that they may then be amplified by means of the usual broadcast receiver.

One Radiotron UY-224 is used as an R. F. Amplifying stage, one UY-224 as the detector and one UY-227 as the oscillator. Heater current for these Radiotrons is obtained from a small transformer incorporated in the unit. Plate supply is obtained from the broadcasting receiver.

A wafer connector is supplied that may be inserted under the tube socket when a receiver using a UX-280 rectifier and a filter in the negative side of the line is used. Under these conditions—most modern receivers are so designed that this is true—the plate supply to the converter is obtained through the contact on the wafer connector to the UX-280 filament. On receivers where this condition does not exist, but where Pentode output tubes are used, the wafer connector can be used to make connection to the screen grid of the Pentode. On receivers where neither condition exist any connection that gives a filtered D. C. output of from 180 to 260 volts between the contact and ground will be suitable.

Due to the SWA-2 being identical with the converter chassis used in the RO-23. reference to the RO-23 Service Notes should be made for data pertaining to Service work.

Stock No.	DESCRIPTION	List Price
2747	Cap—Grid contactor cap—Package of 5	$0.50
2977	Knob—Station selector, or Resonator knob—Package of 5	2.50
3058	Resistor—100,000 ohms—Carbon type—1 watt—Package of 5	2.50
3153	Resistor—1500 ohms—Carbon type—1 watt—Package of 5	2.75
3285	Cord—Drive cord—Package of 5	1.00
3286	Spring—Drive cord tension spring—Package of 5	1.40
3288	Socket—UY Radiotron socket—Complete with insulation strip	.50
3289	Contact lug—Complete with mounting rivets—Package of 10	.50
3290	Switch—Antenna—"Off and On"—Toggle type—2 used—Complete with mounting nut	1.00
3291	Board—Terminal board with two soldering terminals complete with mounting rivets—Located on switch bracket—Package of 5	.50
3292	Drive shaft with pulley—Package of 5	2.35
3293	Coil—For resistor board assembly	.65
6100	Coil—Coil assembly with mounting eyelet—For switch and bracket assembly	.75
6101	Socket—Dial lamp socket and bracket with mounting rivets	.50
6102	Capacitor—1000 mmfd.—Package of 5	2.50
6103	Resistor—800 ohms—Carbon type—1 watt—Package of 5	2.00
6104	Resistor—80,000 ohms—Carbon type—1 watt—Package of 5	2.00
6105	Resistor—40,000 ohms—Carbon type—3 watt—Package of 5	2.00
6106	Coupling—Switch lever shaft coupling with 2 taper pins—Package of 5	.50
6107	Switch—Toggle type—Power switch	1.00
6108	Binding post—Complete with terminal lug, mounting washer and mounting nut—Package of 5	1.75
6109	Knob—Knob with pointer—Package of 5	$1.75
6110	Dial lamp shield and indicator	.50
6111	Escutcheon—Range switch knob escutcheon—Package of 5	1.80
6112	Cushion—Receiver chassis rubber cushions—Package of 4	.50
7062	Capacitor—Adjustable capacitor—15–70 mmfd.	1.00
7298	Capacitor—0.01 mfd.	.80
7406	Capacitor—Double adjustable capacitor—One section 10–70 mmfd.—One section 800–1000 mmfd.	1.10
7407	Coil—High frequency detector coil	1.05
7408	Coil—Low frequency detector and oscillator coil	1.45
7409	Coil—High frequency oscillator coil	1.85
7410	Capacitor—Variable capacitor—7 plate—Complete with mounting nut and washers	1.75
8806	Transformer—Filament power transformer	3.25
8807	Transformer—Filament power transformer—110 volts—25 cycle	5.75
8808	Transformer—Filament power transformer—220 volts—60 cycle	3.40
8809	Board—Resistor board less resistors, capacitors and coil	1.00
8810	Lever—Switch lever assembly—Comprising shaft, 3 switch levers and coupling bushing	.70
8811	Switch—Range switch complete with mounting washer and nut	6.60
8812	Capacitor—Variable tuning capacitor assembly	5.10
8813	Dial drum and scale	1.20
10820	Capacitor—100 mmfd.	.50
	CABINET	
3229	Escutcheon—Tuning dial escutcheon with mounting screws	.70
6113	Foot—Cabinet felt foot—Package of 15	.50
9399	Cabinet—Complete less equipment	12.00

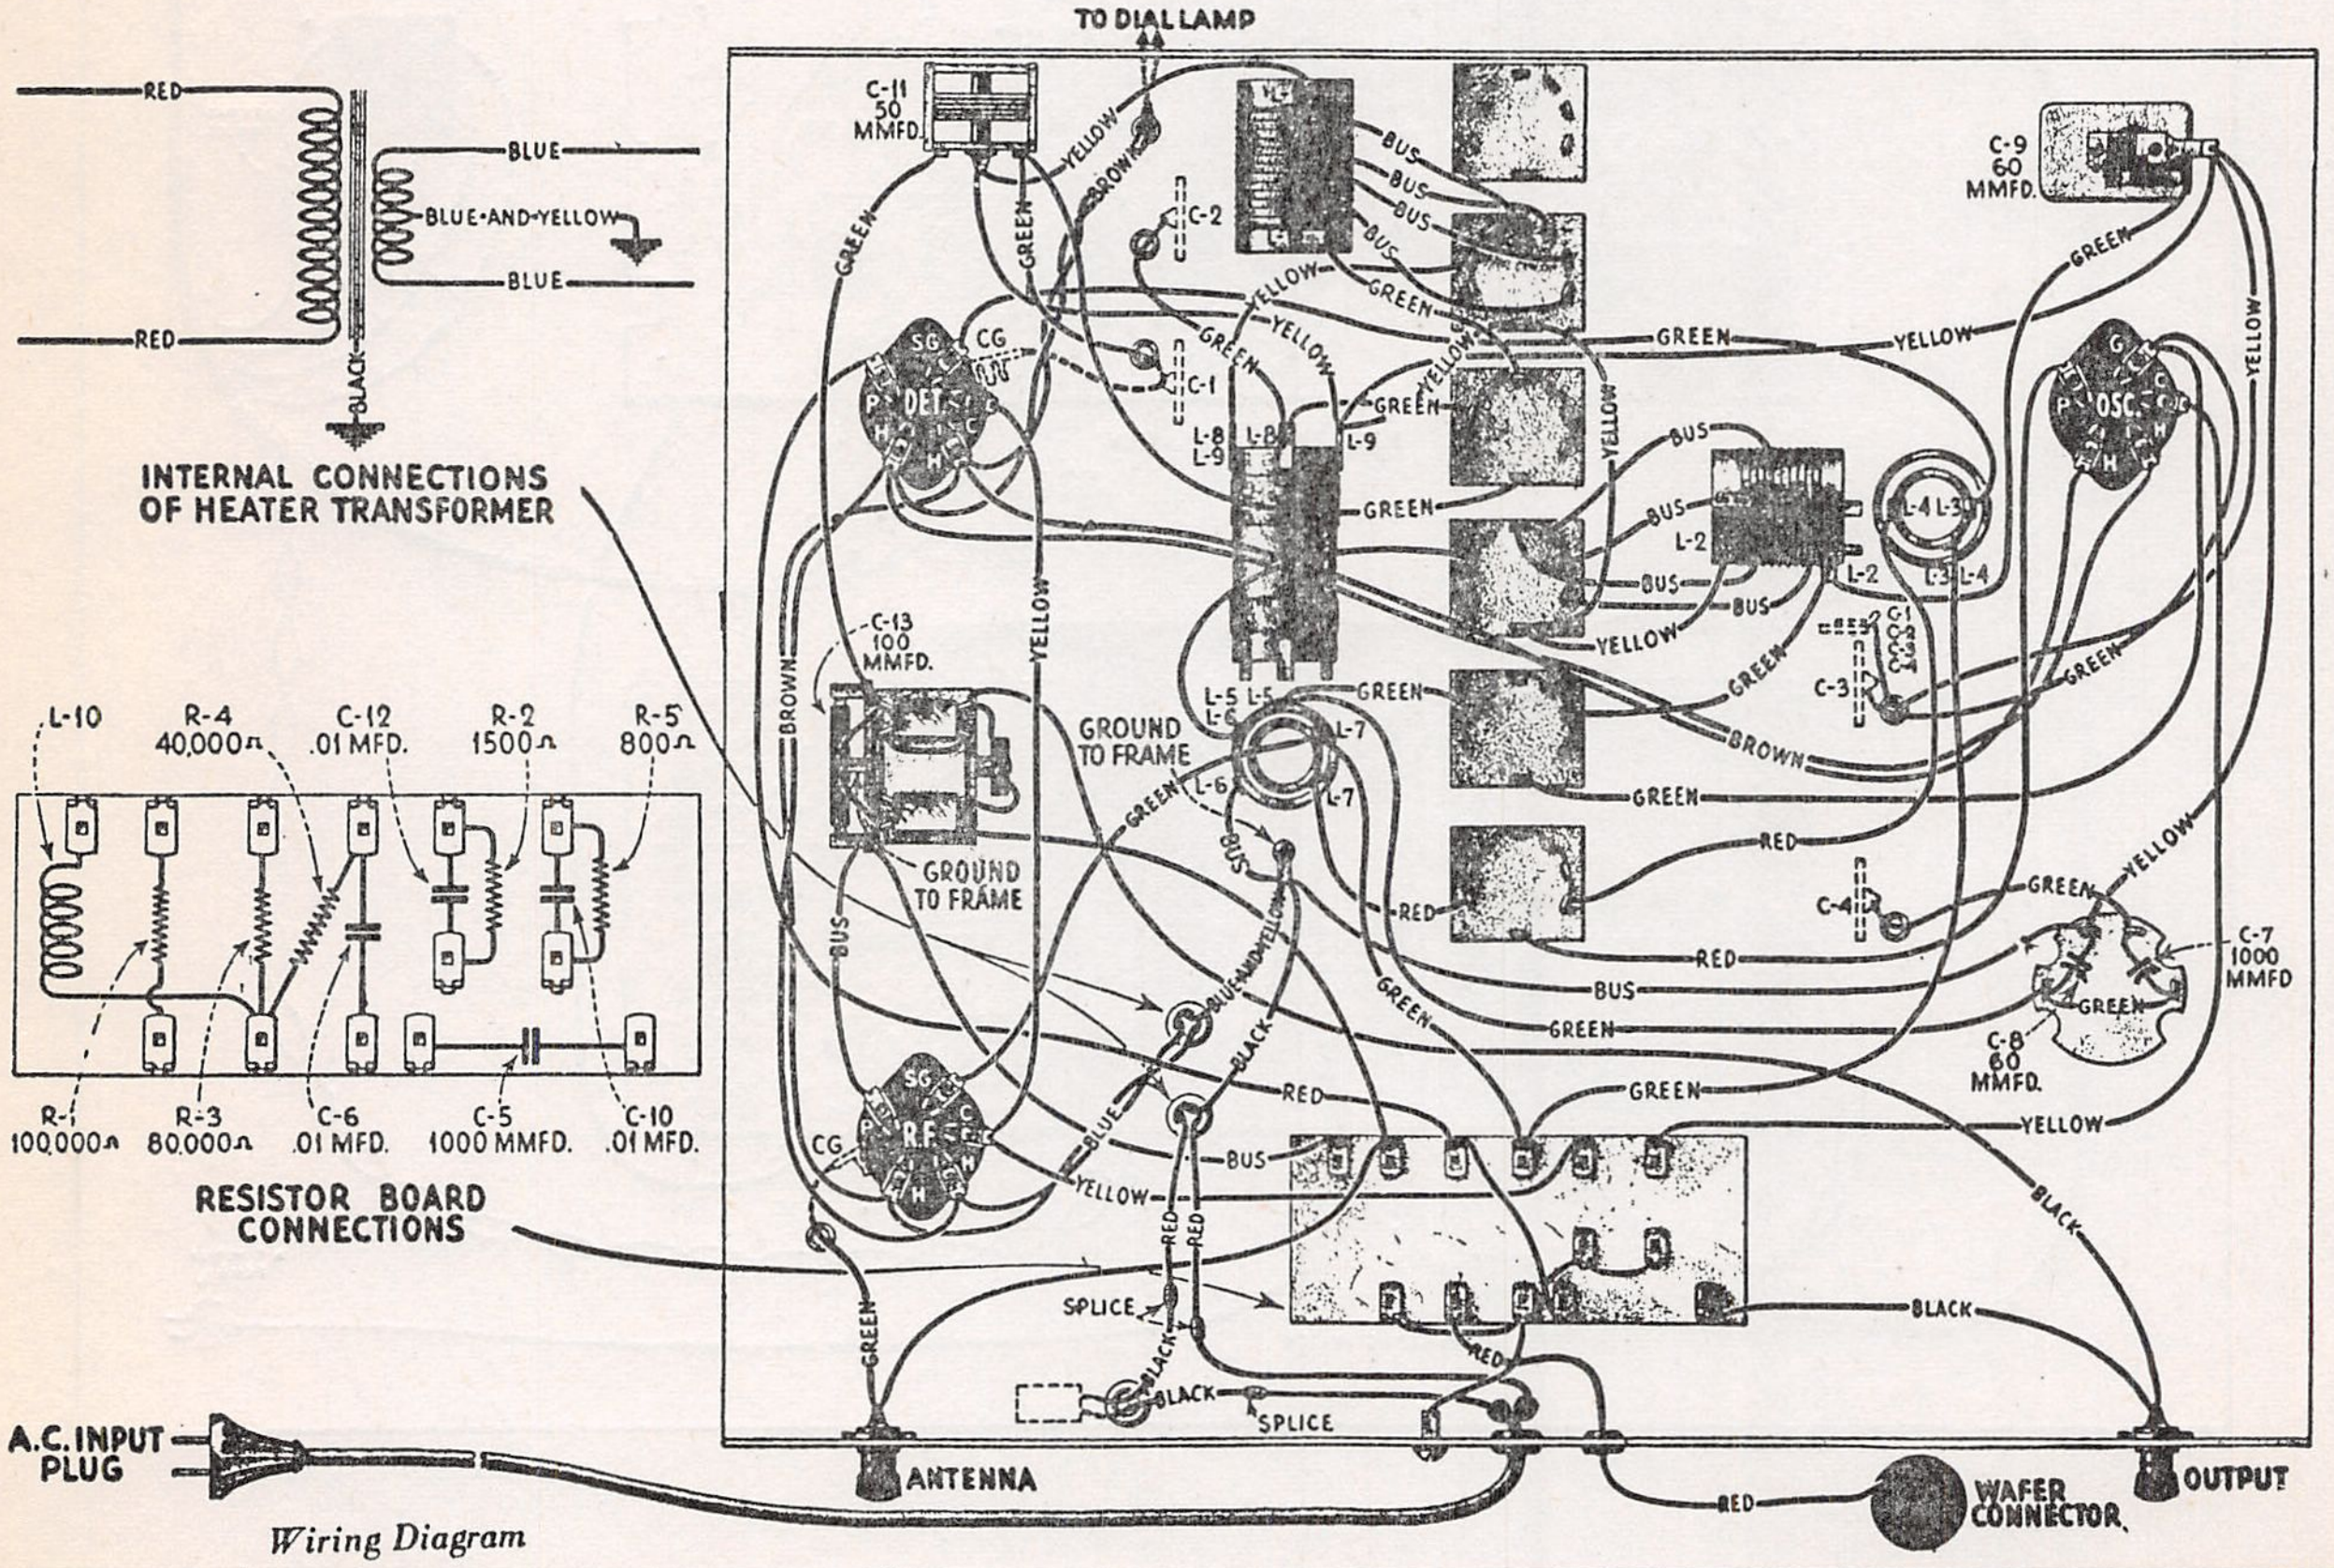

Wiring Diagram

Model SW-2 (1931)

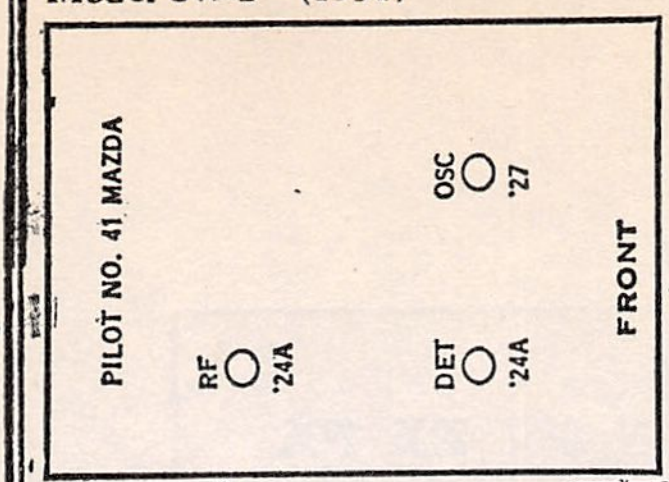
PILOT NO. 41 MAZDA
RF '24A
DET '24A
OSC '27
FRONT

R. C. A. VICTOR CO.,INC.

MODEL SWA-2 SW Converter
Schematic

MODEL SWA-2 SHORT WAVE CONVERTER

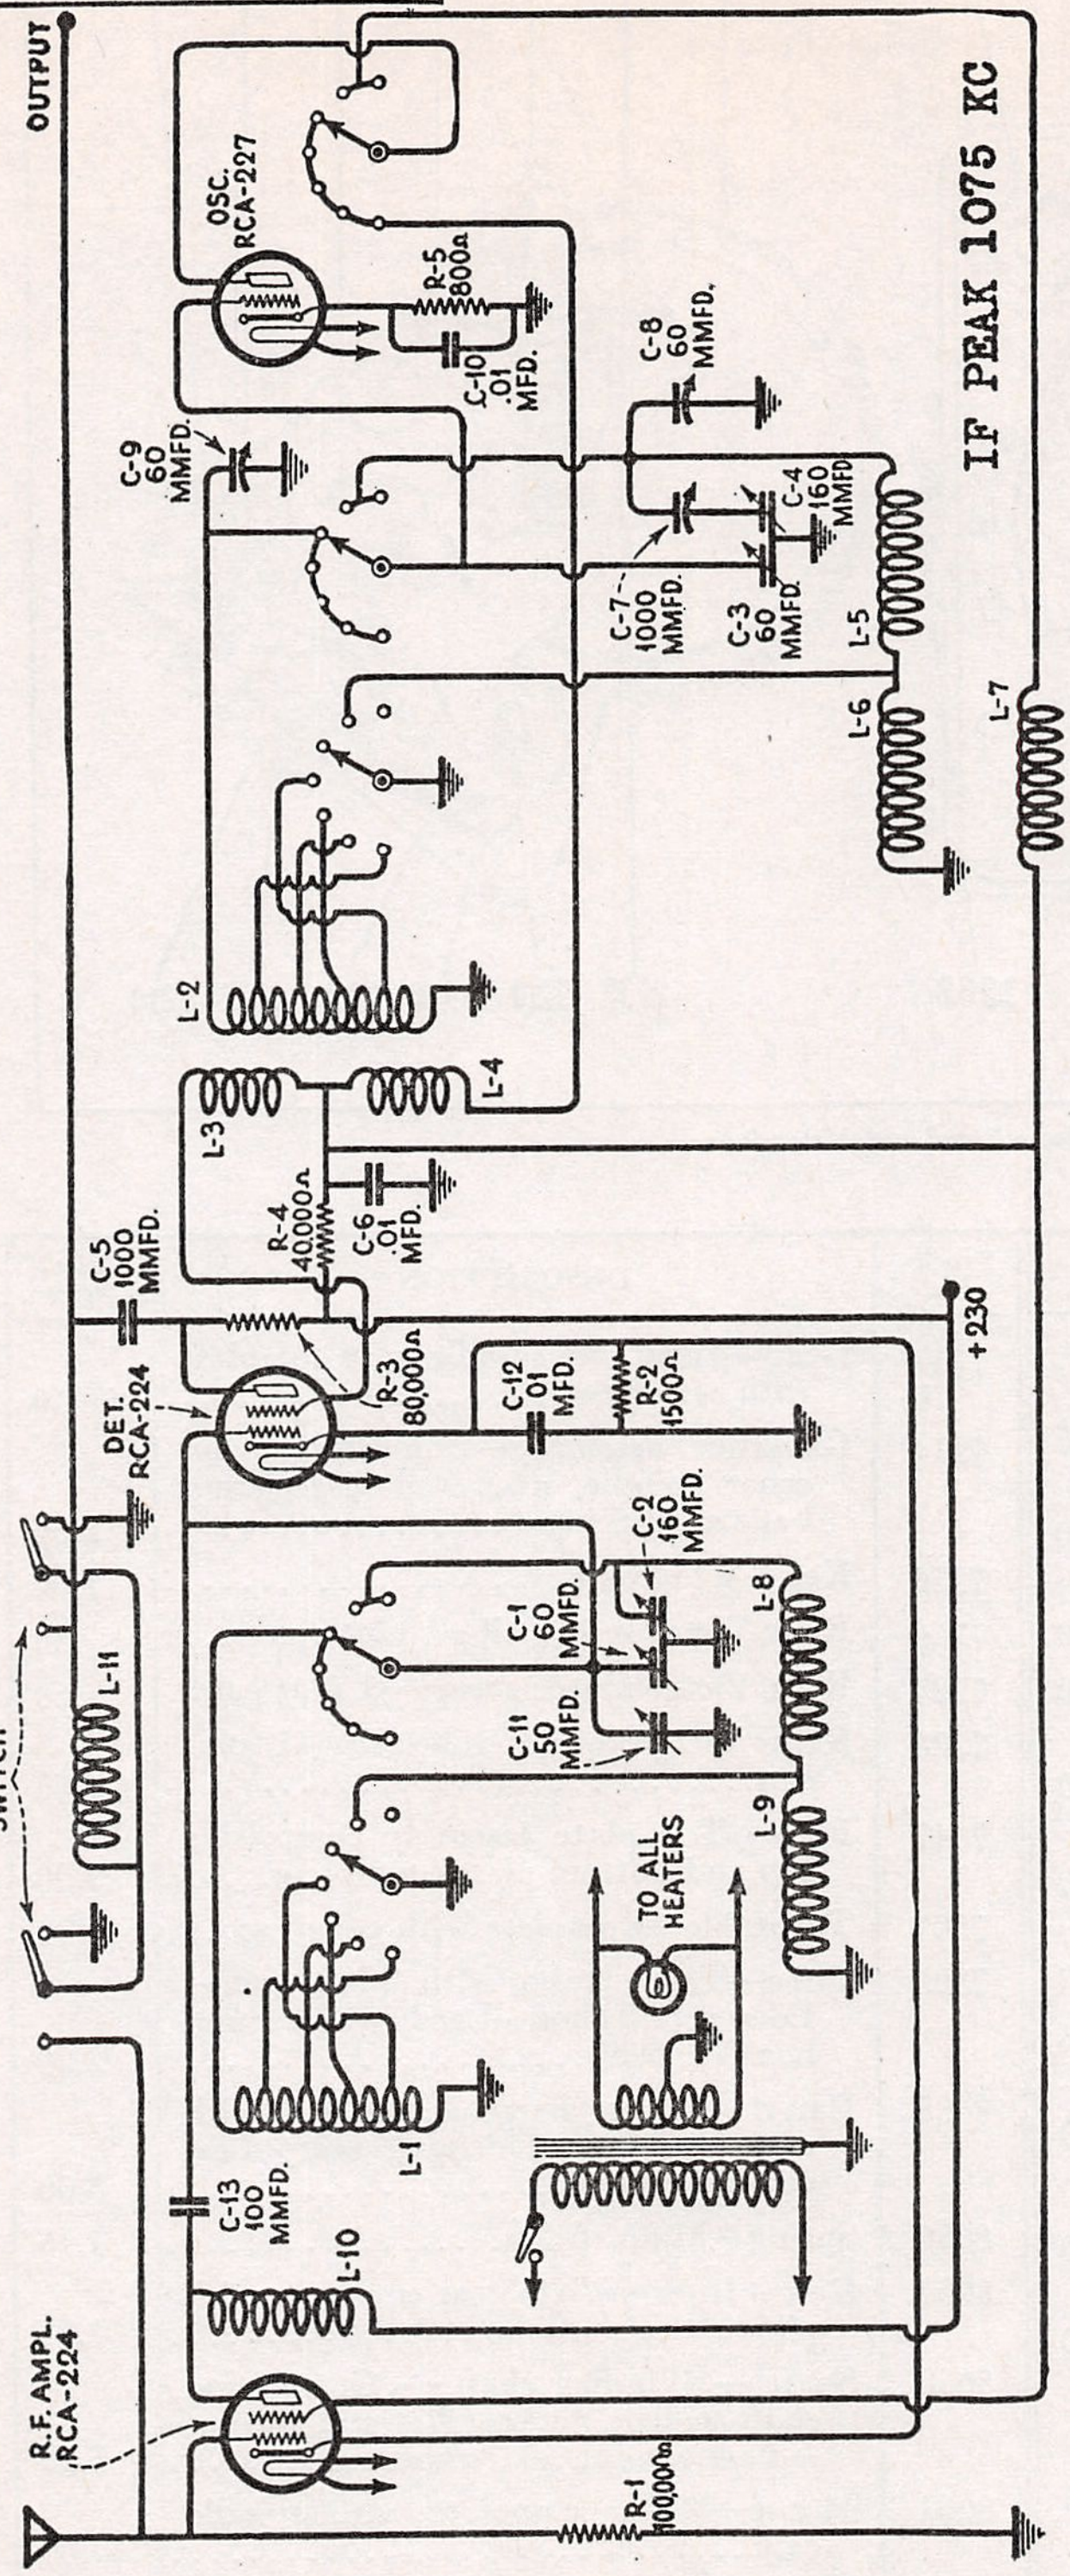
OUTPUT
OSC. RCA-227
R-5 800Ω
C-10 .01 MFD.
C-8 60 MMFD.
C-9 60 MMFD.
C-4 160 MMFD
C-7 1000 MMFD.
C-3 60 MMFD.
L-5
L-6
L-7
IF PEAK 1075 KC
L-2
L-3
L-4
C-5 1000 MMFD.
R-4 40,000Ω
C-6 .01 MFD.
+230
DET. RCA-224
R-3 80,000Ω
C-12 .01 MFD.
R-2 1500Ω
C-2 160 MMFD.
C-1 60 MMFD.
L-8
C-11 50 MMFD.
L-9
L-11
ANTENNA TRANSFER SWITCH
TO ALL HEATERS
L-1
C-13 100 MMFD.
L-10
R.F. AMPL. RCA-224
R-1 100,000Ω

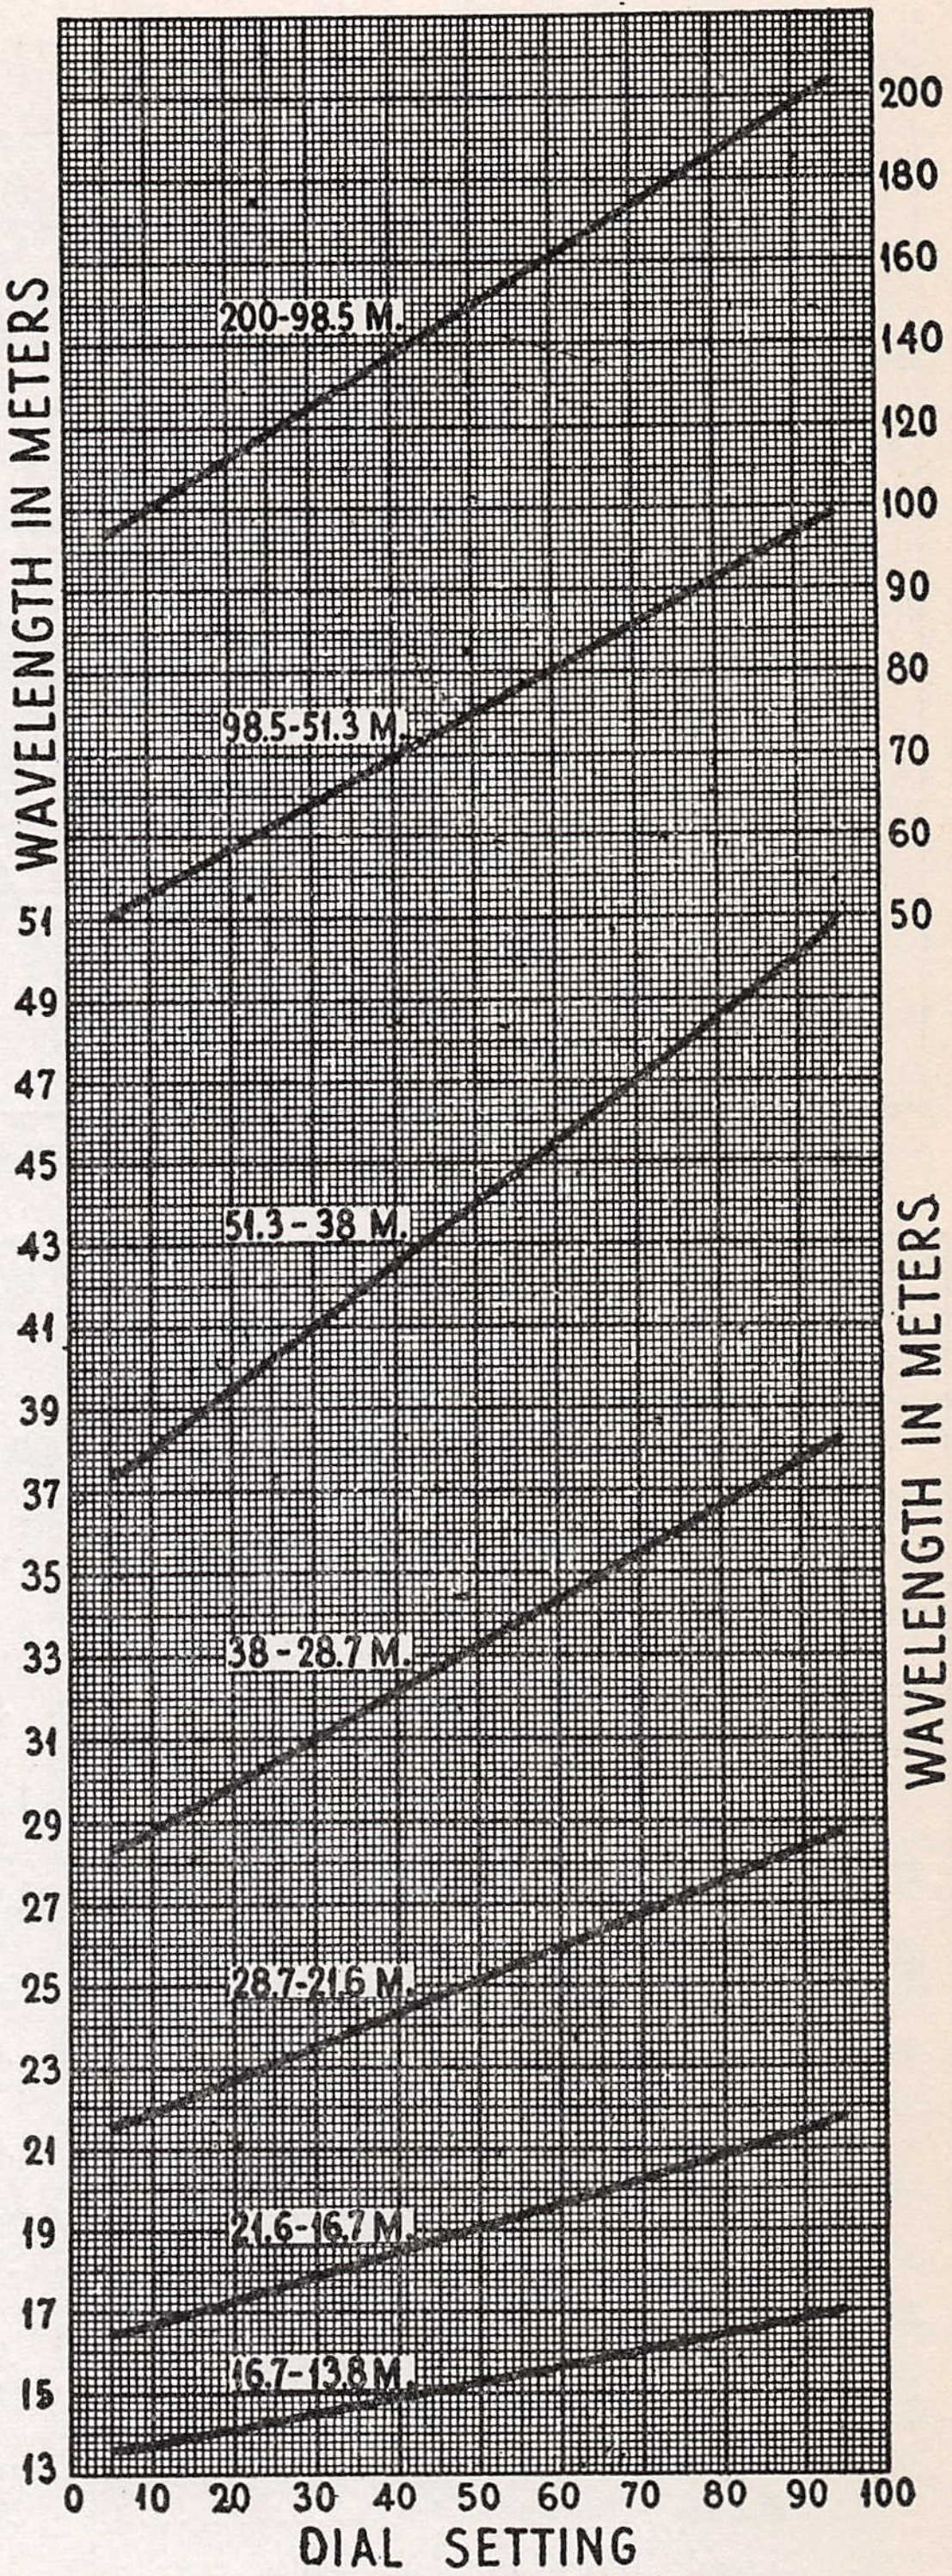

Approximate Calibration of Short Wave Tuning Dial of RO-23 (with 1075 K.C. Intermediate Frequency).

Voltage Rating . . . . 105–125 Volts and 200–250 Volts
Frequency Rating . . . . 50–60 cycles and 25–40 cycles
Power Consumption . . . . 20 Watts
Recommended Antenna Length . . . . 25–75 feet

MODEL 2-25
Portable
Victrola

R. C. A. VICTOR CO., INC.

REPLACEMENT PARTS

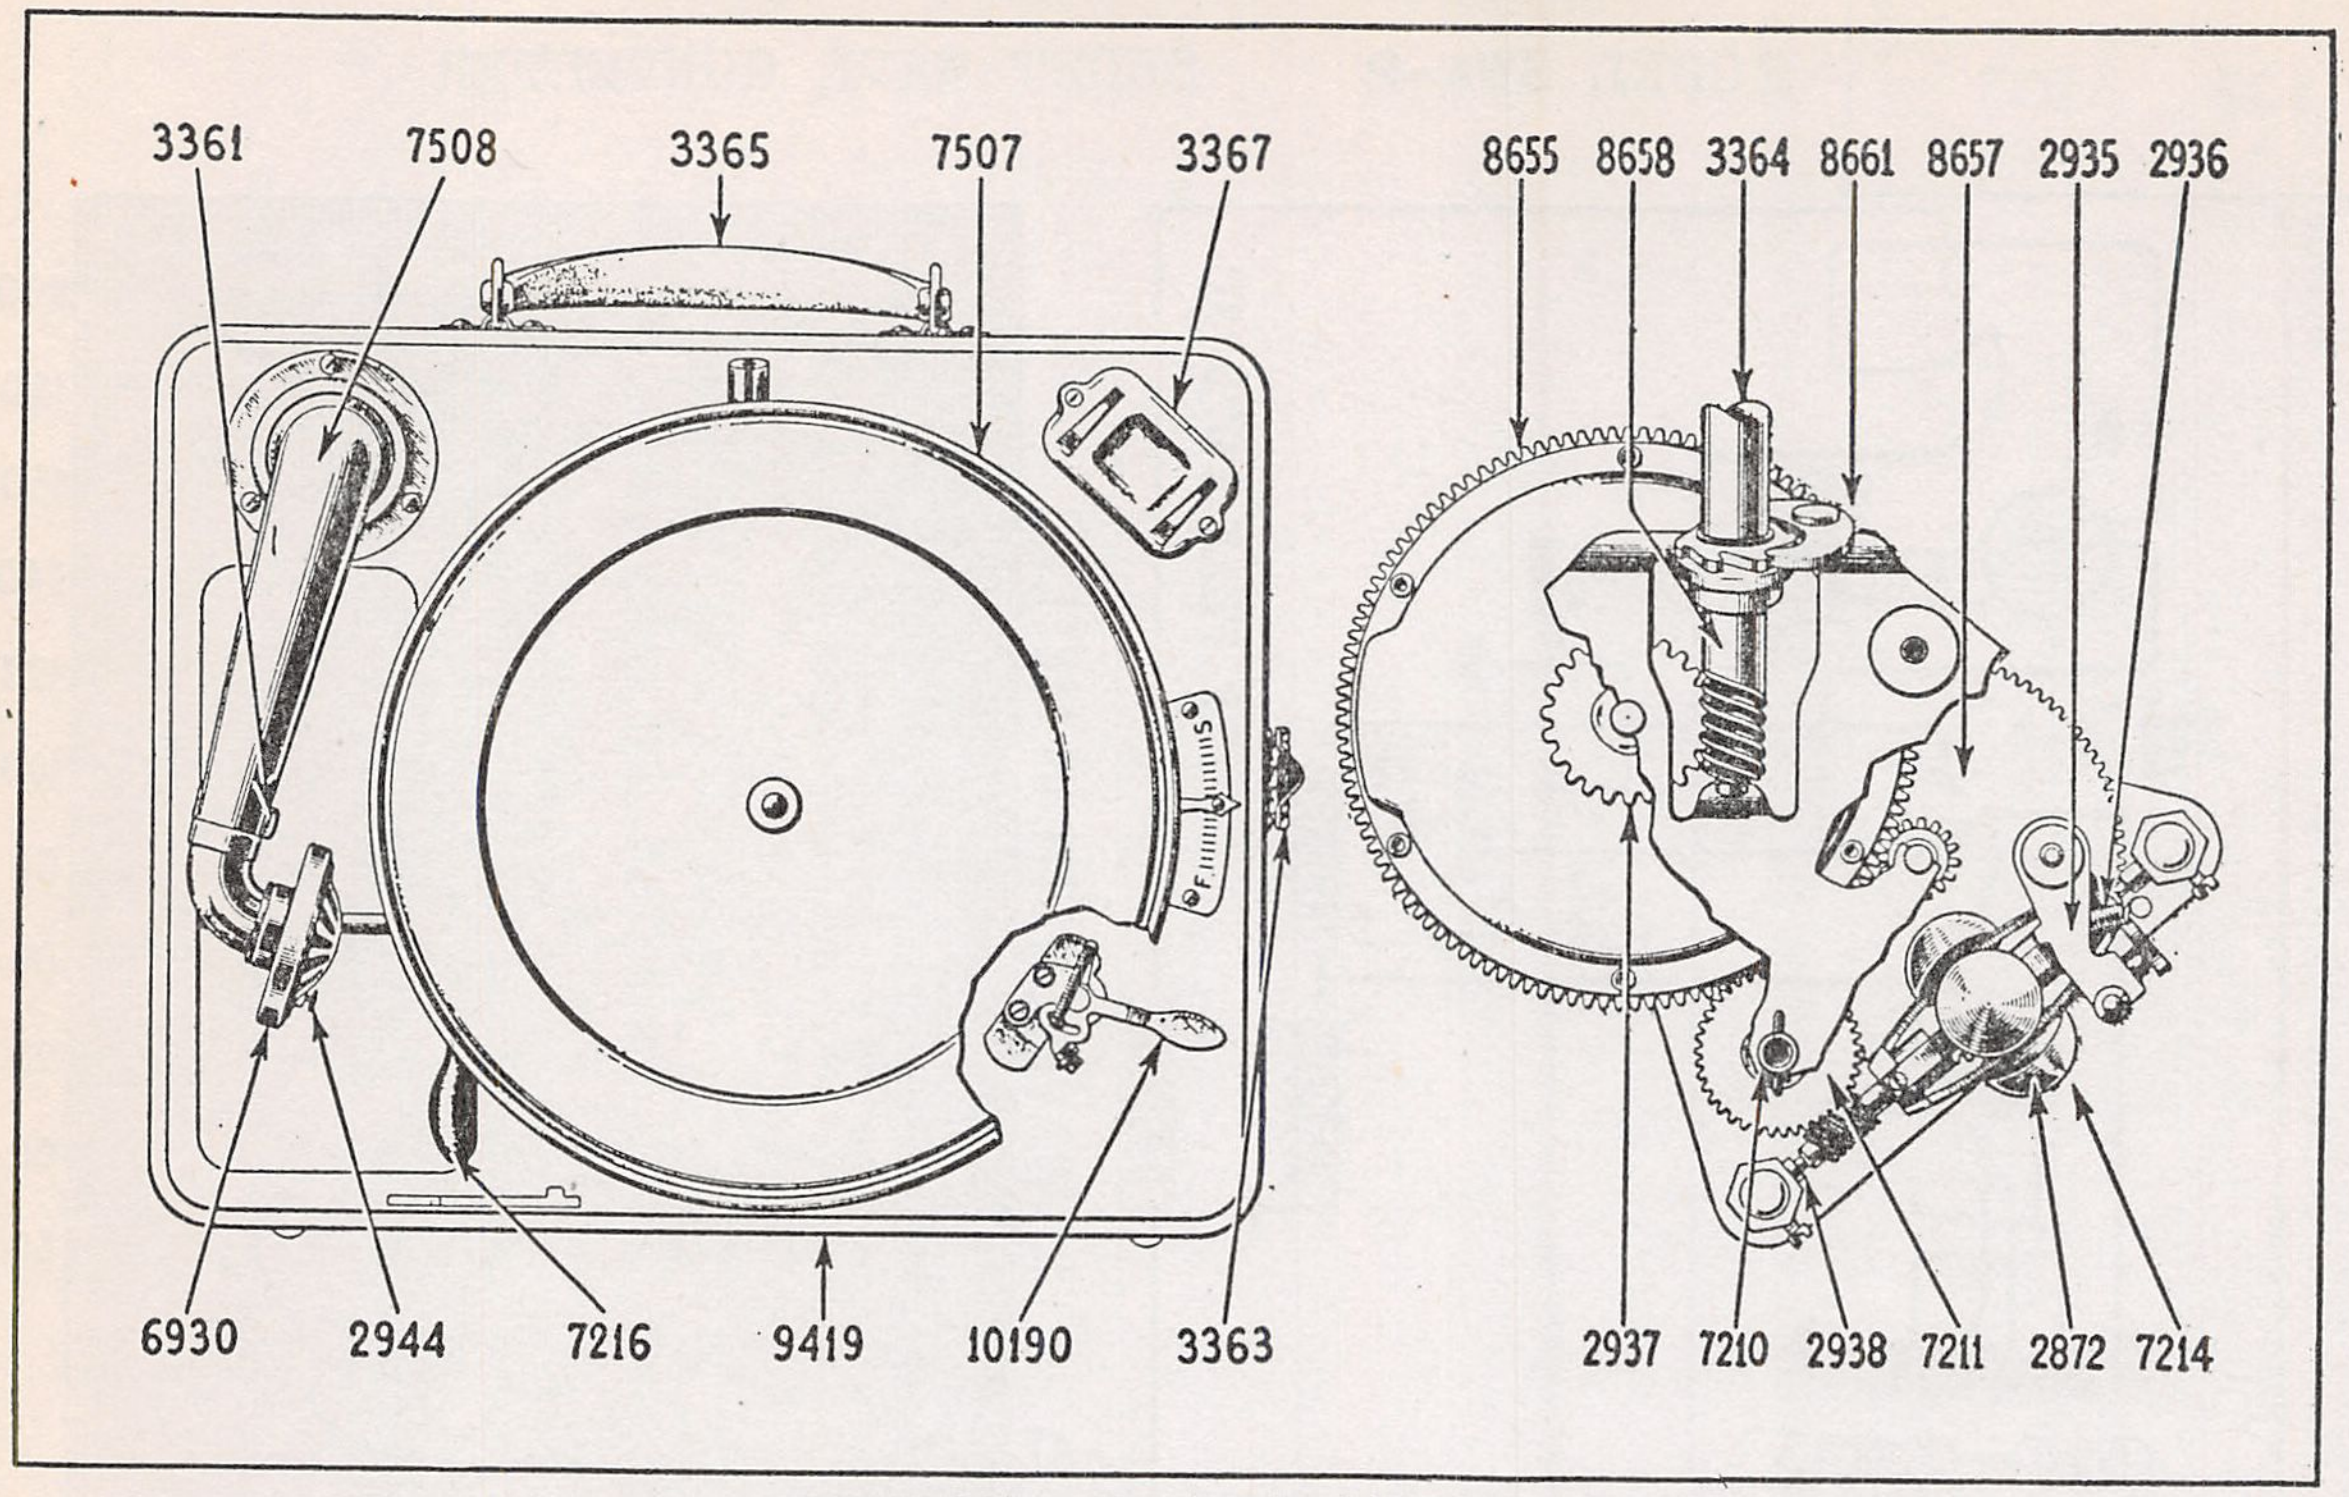

Figure 2—Cabinet, Motor Board and Motor Parts

Stock No.	DESCRIPTION	List Price
2872	Governor ball and spring assembly—Comprising ball, spring, mounting screws and washers—Package of 5....	$0.75
2935	Lever—Speed regulator lever complete with stud and spring—Package of 2..	.50
2936	Spring—Speed regulator lever spring—Package of 10	.50
2937	Gear—Winding gear and sleeve...	.90
2943	Cap—Turntable spindle cap screw—Package of 5....................	1.50
2944	Screw—Sound box needle screw—Package of 20..	1.00
2947	Leather—Friction leather for brake—Package of 20.................. .	.50
3361	Hook—Tone arm and crank hook......	.65
3362	Hinge—Cabinet hinge with mounting screws—Package of 2.....	.60
3363	Lock—Lid lock with mounting screws..	.90
3364	Extension—Winding shaft extension....	.70
3365	Handle—Carrying handle complete with bracket and mounting rivets.........	.90
3366	Scale—Speed regulator scale complete with mounting screws..............	.50
3367	Holder—Needle holder...............	.75
6930	Sound box—Complete with needle screw..............................	4.50
7210	Spindle—Turntable spindle complete with pins and ball bearing—Less gear	.80
7211	Gear—Turntable spindle gear complete with set screw....................	$0.50
7214	Governor assembly—Comprising governor spindle, disc, collar, governor balls and springs.................	2.50
7216	Key—Winding key................	1.00
7226	RCA Victor motor oil—1 pint can......	.50
7227	RCA Victor motor grease—1 pint can..	.60
7228	RCA Victor spring lubricant—1 pint can..................................	.65
7447	Plate—Top plate assembly comprising top and bottom plates complete......	3.00
7507	Turntable—Complete with covering....	2.90
7508	Tube—Taper tube with pivot pin—Less sound box—Used with sound box No. 6930....................	2.20
8655	Barrel—Spring barrel complete with main spring and driving gear—Less winding gear.......................	3.00
8656	Spring—Main spring................	1.15
8657	Gear—Intermediate gear complete with pinion and shaft.................	.70
8658	Shaft — Winding shaft — Comprising shaft, collar, pin, ratchet and washer —Less winding extension...........	1.25
8661	Motor—Motor complete with spindle cap..................................	12.00
9419	Cabinet complete—Less mechanism....	Price on application
10190	Brake—Turntable hand brake—Package of 2..........................	.50

R. C. A. VICTOR CO. INC.

MODEL 2-25
Portable
Victrola

RCA Victor Portable Victrola Model 2-25

The RCA Victor Portable Victrola Model 2-25 is a small portable type reproducing instrument built into a metal cabinet resembling a small suitcase. Excellent quality, high output and good mechanical construction are features of this instrument.

LUBRICATION

Premature wear, noisy operation and failure of parts are direct results of failure to clean and lubricate the motor at necessary intervals. The various bearings and gears of the motor should be cleaned and lubricated at least once every six months. In addition to the regular lubrication, all motor parts should be covered with a light film of oil to prevent rusting. Use only RCA Victor Motor Oil and Motor Grease when lubricating this instrument.

Initial Operation. When the instrument is first played, wind the motor and allow it to run down completely several times. This insures a complete distribution of lubricant within the spring barrel. Maximum run is dependent on this point.

The speed of the motor should be adjusted so that the turntable revolves at 78 R. P. M. This can be checked by means of a Stroboscope Disc in conjunction with a source of A. C. illumination of proper frequency for the disc used or by counting the revolutions. In both cases a record must be playing in the normal manner when the check is made.

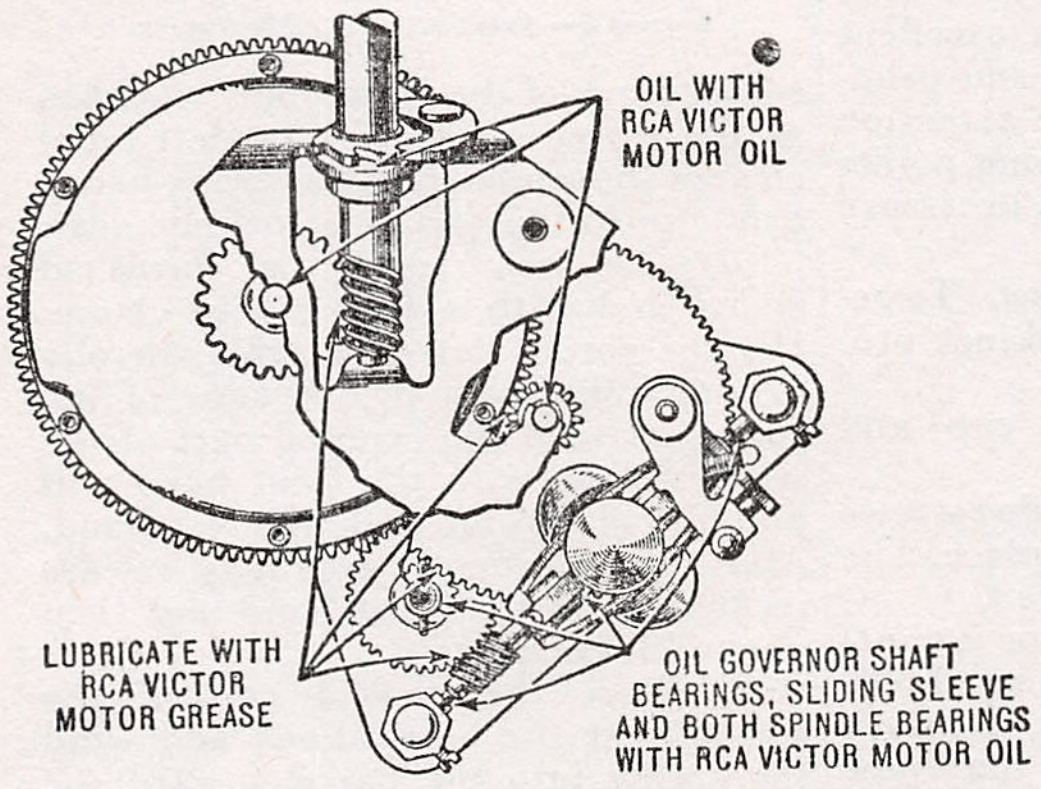

Figure 1—Lubrication Diagram of Model 2-25

Motor. Figure 1 shows a view of the motor with the top plate removed. Before lubricating the parts shown in this illustration, a thorough cleaning with carbon tetrachloride (Carbona) or gasoline is necessary. If necessary disassemble the entire motor for such cleaning.

Tone Arm. The joint between the taper tube and the sound chamber must be free to swing easily without play and be sealed with grease. This bearing is accessible when the three mounting screws are removed. Failure to seal this joint will result in poor quality. Unnecessary friction will cause undue record wear.

MOTOR

The motor used in Model 2-25 is of simple design and will give excellent performance. If kept clean and properly lubricated, little service attention will be required. The following points may prove useful when it is necessary to effect repairs. *Before doing any work on the motor the machine must be allowed to run down completely.*

Removing Motor from Cabinet. To remove the motor from the cabinet proceed as follows:

(*a*) Unscrew the spindle cap and remove the turntable.

(*b*) Remove the four machine screws that hold the motor in place. The motor may then be removed through the hole in the motor board.

Changing Motor Springs. Should a spring break and require replacement the best method to make a repair is to replace the entire spring barrel. While the cost of the spring barrel is greater than that of the spring alone, the saving in labor will usually justify such replacement. Unless the serviceman is experienced in handling springs of this type, the following directions should be followed carefully:

(*a*) Disassemble the motor and remove the spring barrel. Remove the winding gear.

(*b*) Place the gear flat on a piece of metal and file off the ends of the six rivets. Remove the rivets and gear.

(*c*) Place the palm of the right hand over the closed end of the barrel, making sure that the fingers do not protrude beyond the open side. Firmly hold the barrel, open side downward over a large can or barrel. With the left hand pull the center turns of the spring out. As soon as the spring starts, pull the left hand clear of the can holding the spring barrel firmly until the spring is entirely clear.

(*d*) A new coiled spring may prove extremely dangerous if not properly handled. Read these instructions and work very carefully especially if not experienced in work of this kind. The new spring is furnished coiled and with a heavy wire clamp holding the spring tightly wound. Pull out about one foot of the spring. Then with the spring flat on a table gently tap the ring until it comes to the edge. Do not push the clamp so close to the edge that it will not hold the spring.

Place the hook end of the spring over the barrel hook. Wind the exposed end into the barrel and then insert the entire spring in the barrel allowing the clamp to be on the outer edge. Place a block over the entire spring and force the spring into the barrel thereby releasing the clamp.

(*f*) Place a tablespoonful of spring lubricant between the spring leaves and in the center of the spring.

(*g*) Place the gear in position and rivet it with six rivets to the spring barrel. Use a small punch for flattening the ends of the rivets. Place the gear on a flat surface while re-riveting the barrel to it.

(*h*) Reassemble the motor in the reverse manner of that used to dismantle it.

Winding Shaft Binding. A heavy jar may cause the motor to shift slightly on the motor board and produce binding of the winding shaft against the motor board. Loosening the motor mounting screws and shifting the motor to its proper position will correct this condition.

The RCA Victor Portable Victrola Model 2-65 is a small portable type instrument built into a cabinet resembling a small suitcase. Excellent quality, high output and good mechanical construction are features of this instrument.

LUBRICATION

Premature wear, noisy operation and failure of parts are direct results of failure to clean and lubricate the motor at necessary intervals. The various bearings and gears of the motor should be cleaned and lubricated at least once every six months. In addition to the regular lubrication, all parts should be covered with a light film of oil to prevent rusting. Use only RCA Victor Motor Oil and Motor Grease when lubricating this instrument.

Initial Operation. When the instrument is first played, wind the motor and allow it to run down *completely* several times. This insures a complete distribution of lubricant within the spring barrel. Maximum run is dependent on this point.

The speed of the motor should be adjusted so that the turntable revolves at 78 R.P.M. This can be checked by means of a Stroboscope Disc in conjunction with a source of A.C. illumination of proper frequency for the disc used or by counting the revolutions. In both cases a Record must be playing in the normal manner when the check is made.

Motor. Figure 1 shows a view of the motor with the top plate removed. Before lubricating the parts shown in this illustration, a thorough cleaning with carbon tetra-chloride (Carbona) or gasoline is necessary. If necessary disassemble the entire motor for such cleaning.

Tone Arm. The joint between the goose neck and tone arm and that between the tone arm and sound chamber must be free to swing easily without play and be sealed with grease. The goose neck is detached or adjusted by means of two collars that hold it in place. The bearing between the tone arm and sound box is accessible when the swivel and three mounting screws are removed. Failure to seal these joints will result in poor quality. Unnecessary friction at either of these points will cause undue record wear.

AUTOMATIC STOP MECHANISM

The Automatic Stop Mechanism is simple of design and effective in operation. Figure 2 shows its principal parts.

Failure to Start. Should pulling the tone arm to the right and then placing the sound box on the record fail to start the motor, it may be due to:

(a) Improper location of base plate. Loosen the screws A, B, and C and shift position of mechanism counter-clockwise until proper operation is secured.

(b) Worn or rounded surfaces at point D. Square these points with a small file.

(c) Insufficient tension at spring E. Remove a few turns or replace spring.

Failure to Trip. Should the mechanism fail to stop the motor at the end of a Victor record having the eccentric groove, check the following:

(a) Improperly adjusted base plate. Loosen screws A, B, and C and shift the mechanism clockwise until proper operation is obtained.

(b) Loose or improperly adjusted latch plate.

(c) Insufficient tension at spring F. Remove several turns or replace spring.

Tripping during Operation. Premature tripping during the operation of a record may be caused by:

(a) Binding at bearing G. Clean and lubricate this bearing.

(b) Insufficient bite at point D. Loosen the screws A, B, and C and adjust the base plate so that a larger bite is obtained at point D.

MOTOR

The motor used in Model 2-65 is of simple design and will give excellent performance. If kept clean and properly lubricated, little service attention will be required. The following points may prove useful when it is necessary to effect repairs.

Removing Motor from Cabinet. To remove the motor from the cabinet proceed as follows:

(a) Unscrew the spindle cap and remove the turntable.

(b) Remove the eight machine screws that hold the motor board in place. The sound deflector is also removed.

(c) Remove the three motor mounting screws, together with the one holding the speed regulator lever. Remove this lever. The motor board may now be turned over and the motor pulled clear and placed in a position convenient for work. The various parts are easy of access and adjustments or replacements are simple to make.

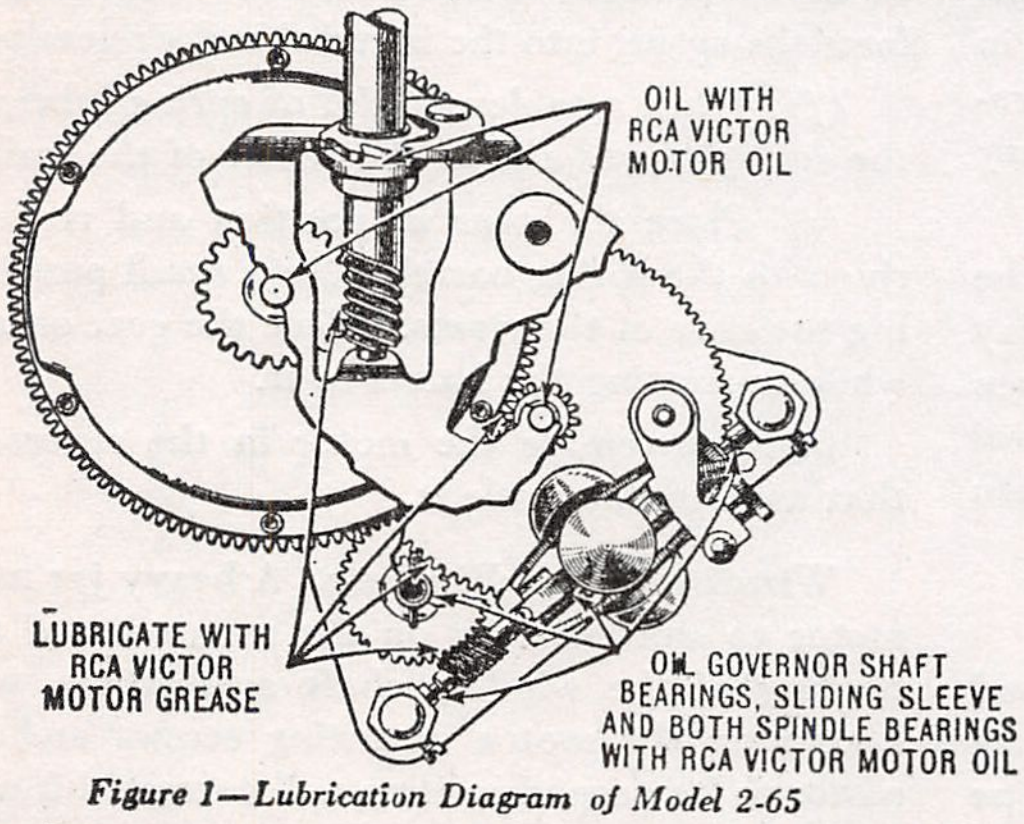

Figure 1—Lubrication Diagram of Model 2-65

Changing Motor Springs. Should a spring break and require replacement the best method to make a repair is to replace the entire spring barrel. While the cost of the spring barrel is greater than that of the spring alone, the saving in labor will usually justify such replacement. Unless the serviceman is experienced in handling springs of this type, the following directions should be followed carefully:

(a) Disassemble the motor and remove the spring barrel. Remove the winding gear.

(b) Place the gear flat on a piece of metal and file off the ends of the six rivets. Remove the rivets and gear.

(c) Place the palm of the right hand over the closed end of the barrel, making sure that the fingers do not protrude beyond the open side. Firmly hold the barrel, open side downward over a large can or barrel. With the left hand pull the center turns of the spring out. As soon as the spring starts, pull the left hand clear of the can holding the spring barrel firmly until the spring is entirely clear.

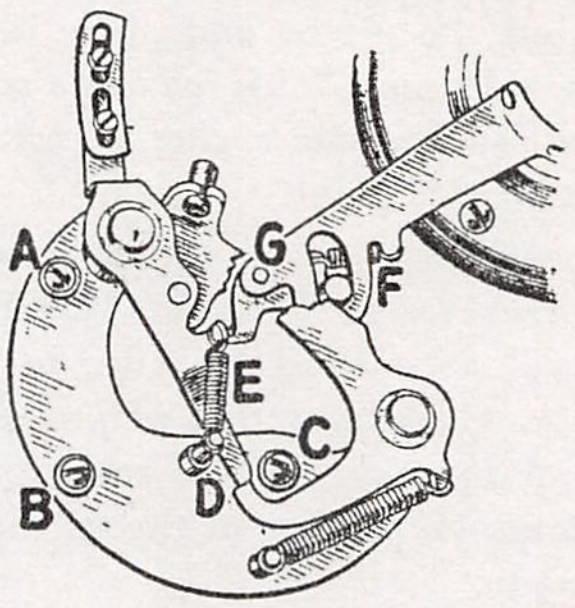

Figure 2—Automatic Stop Mechanism

(d) The new spring is furnished coiled and with a heavy wire clamp. Hit the spring flat on a table thereby driving the clamp to one edge of the spring. Grasp the exposed part of the spring firmly with the right hand and pull the clamp off with the left hand. Allow the spring to gradually release its tension in the right hand and then unwind it completely.

(e) Place the hooked end of the spring over the barrel hook and wind the spring into the barrel toward the center. Be careful to push each turn completely inside the barrel before winding on the next turn.

(f) Place a tablespoonful of spring lubricant between the spring leaves and in the center of the spring.

(g) Place the gear in position and rivet it with six rivets to the spring barrel. Use a small punch for flattening the ends of the rivets. Place the gear on a flat surface while re-riveting the barrel to it.

(h) Reassemble the motor in the reverse manner of that used to dismantle it.

Winding Shaft Binding. A heavy jar may cause the motor to shift slightly on the motor board and produce binding of the winding shaft against the motor board. Loosening the motor mounting screws and shifting the motor to its proper position will correct this condition.

MODEL Photophone PG-32
Schematic

R. C. A. VICTOR CO., INC.

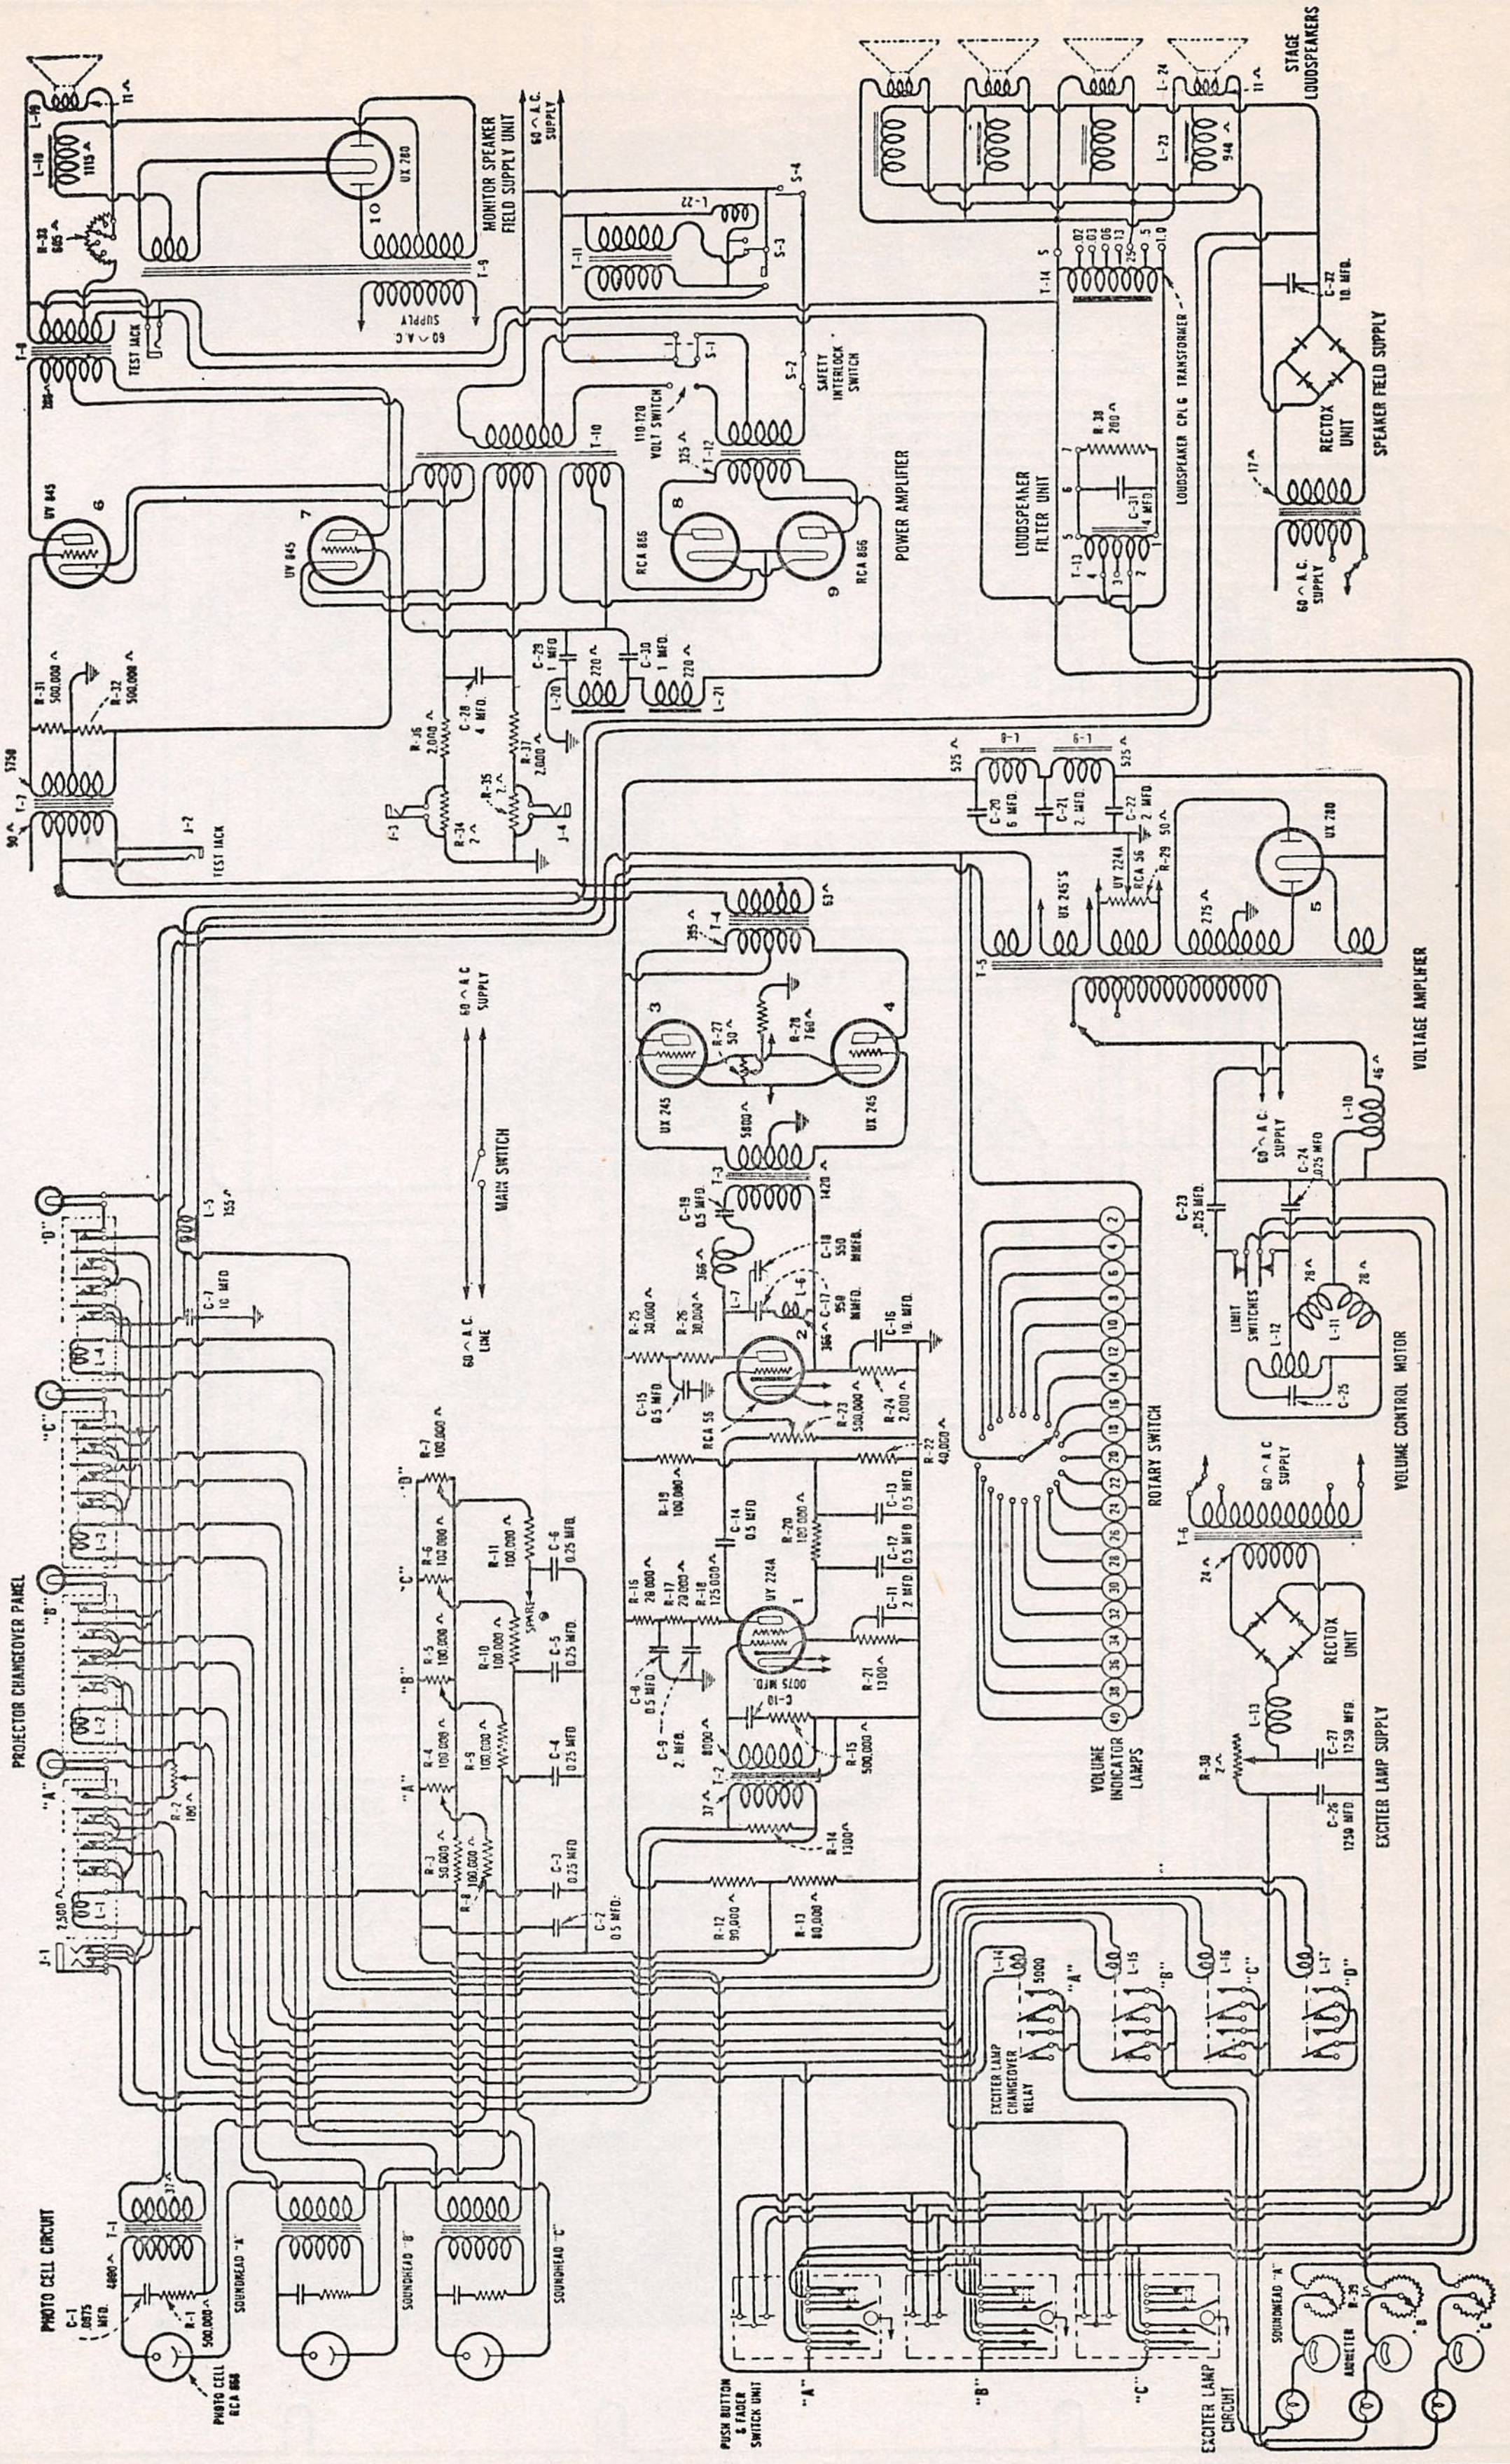
MONITOR SPEAKER FIELD SUPPLY UNIT
60 ~ A.C. SUPPLY
UX 280
TEST JACK
UV 845
RCA 866
110 170 VOLT SWITCH
SAFETY INTERLOCK SWITCH
POWER AMPLIFIER
STAGE LOUDSPEAKERS
LOUDSPEAKER FILTER UNIT
LOUDSPEAKER CPL'G TRANSFORMER
RECTOX UNIT
SPEAKER FIELD SUPPLY
VOLTAGE AMPLIFIER
UX 245
UY 224A
RCA 56
MAIN SWITCH
60 ~ A.C. LINE
LIMIT SWITCHES
VOLUME CONTROL MOTOR
ROTARY SWITCH
VOLUME INDICATOR LAMPS
EXCITER LAMP SUPPLY
PROJECTOR CHANGEOVER PANEL
"A"
"B"
"C"
"D"
PHOTO CELL CIRCUIT
PHOTO CELL RCA 868
SOUNDHEAD "A"
SOUNDHEAD "B"
SOUNDHEAD "C"
EXCITER LAMP CHANGEOVER RELAY
PUSH BUTTON & FADER SWITCH UNIT
EXCITER LAMP CIRCUIT
AMMETER

PG-32 Schematic Circuit Diagram

MODEL Photophone PG-32
Change Over Panel
Chassis

R. C. A. VICTOR CO., INC.

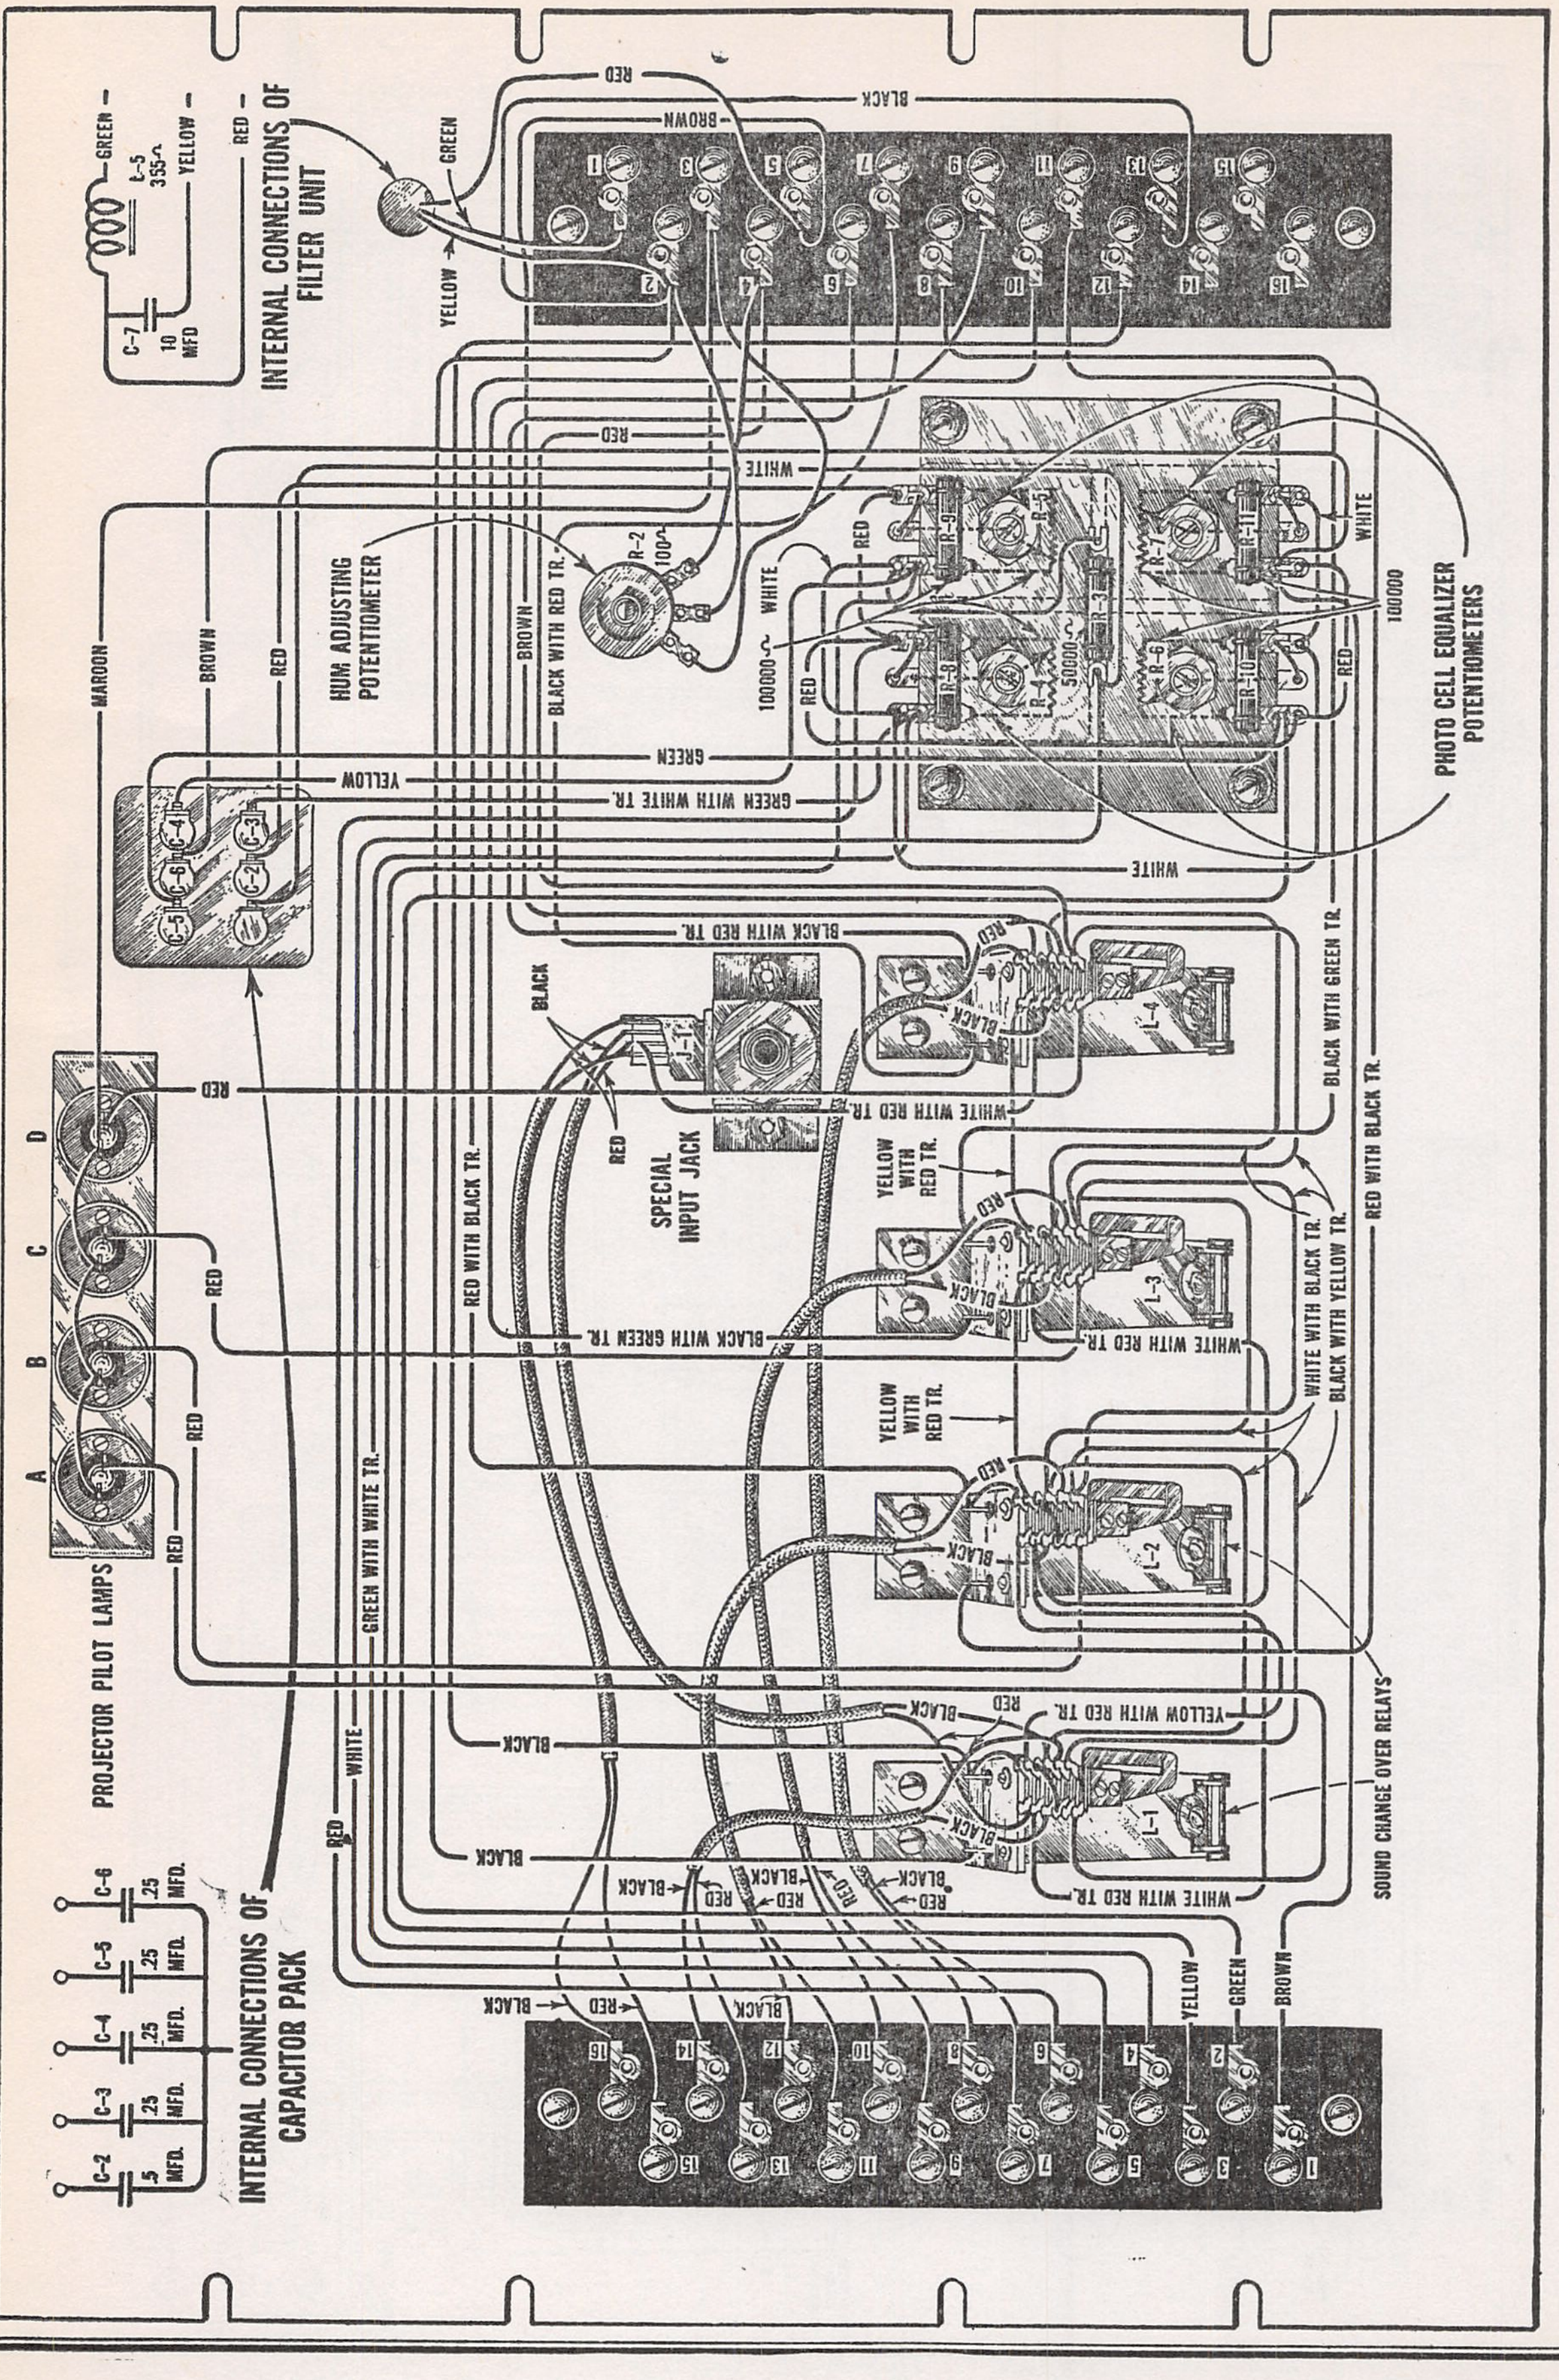
INTERNAL CONNECTIONS OF FILTER UNIT
C-7
10 MFD
L-5
355-Ω
GREEN
YELLOW
RED
BROWN
BLACK
WHITE
HUM ADJUSTING POTENTIOMETER
R-2
100Ω
BLACK WITH RED TR.
MAROON
GREEN WITH WHITE TR.
R-9
R-5
R-7
R-11
R-4
R-8
R-6
R-3
R-10
50000-Ω
100000-Ω
100000
PHOTO CELL EQUALIZER POTENTIOMETERS
J-1
SPECIAL INPUT JACK
L-4
L-3
L-2
L-1
WHITE WITH RED TR.
YELLOW WITH RED TR.
BLACK WITH GREEN TR.
RED WITH BLACK TR.
WHITE WITH BLACK TR.
BLACK WITH YELLOW TR.
SOUND CHANGE OVER RELAYS
PROJECTOR PILOT LAMPS
A
B
C
D
C-1
C-2
C-3
C-4
C-5
C-6
INTERNAL CONNECTIONS OF CAPACITOR PACK
5 MFD.
.25 MFD.
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

—Projector Change-Over Panel Wiring

R. C. A. VICTOR CO., INC.

MODEL Photophone PG-32
Voltage
Exciter Lamp Chassis

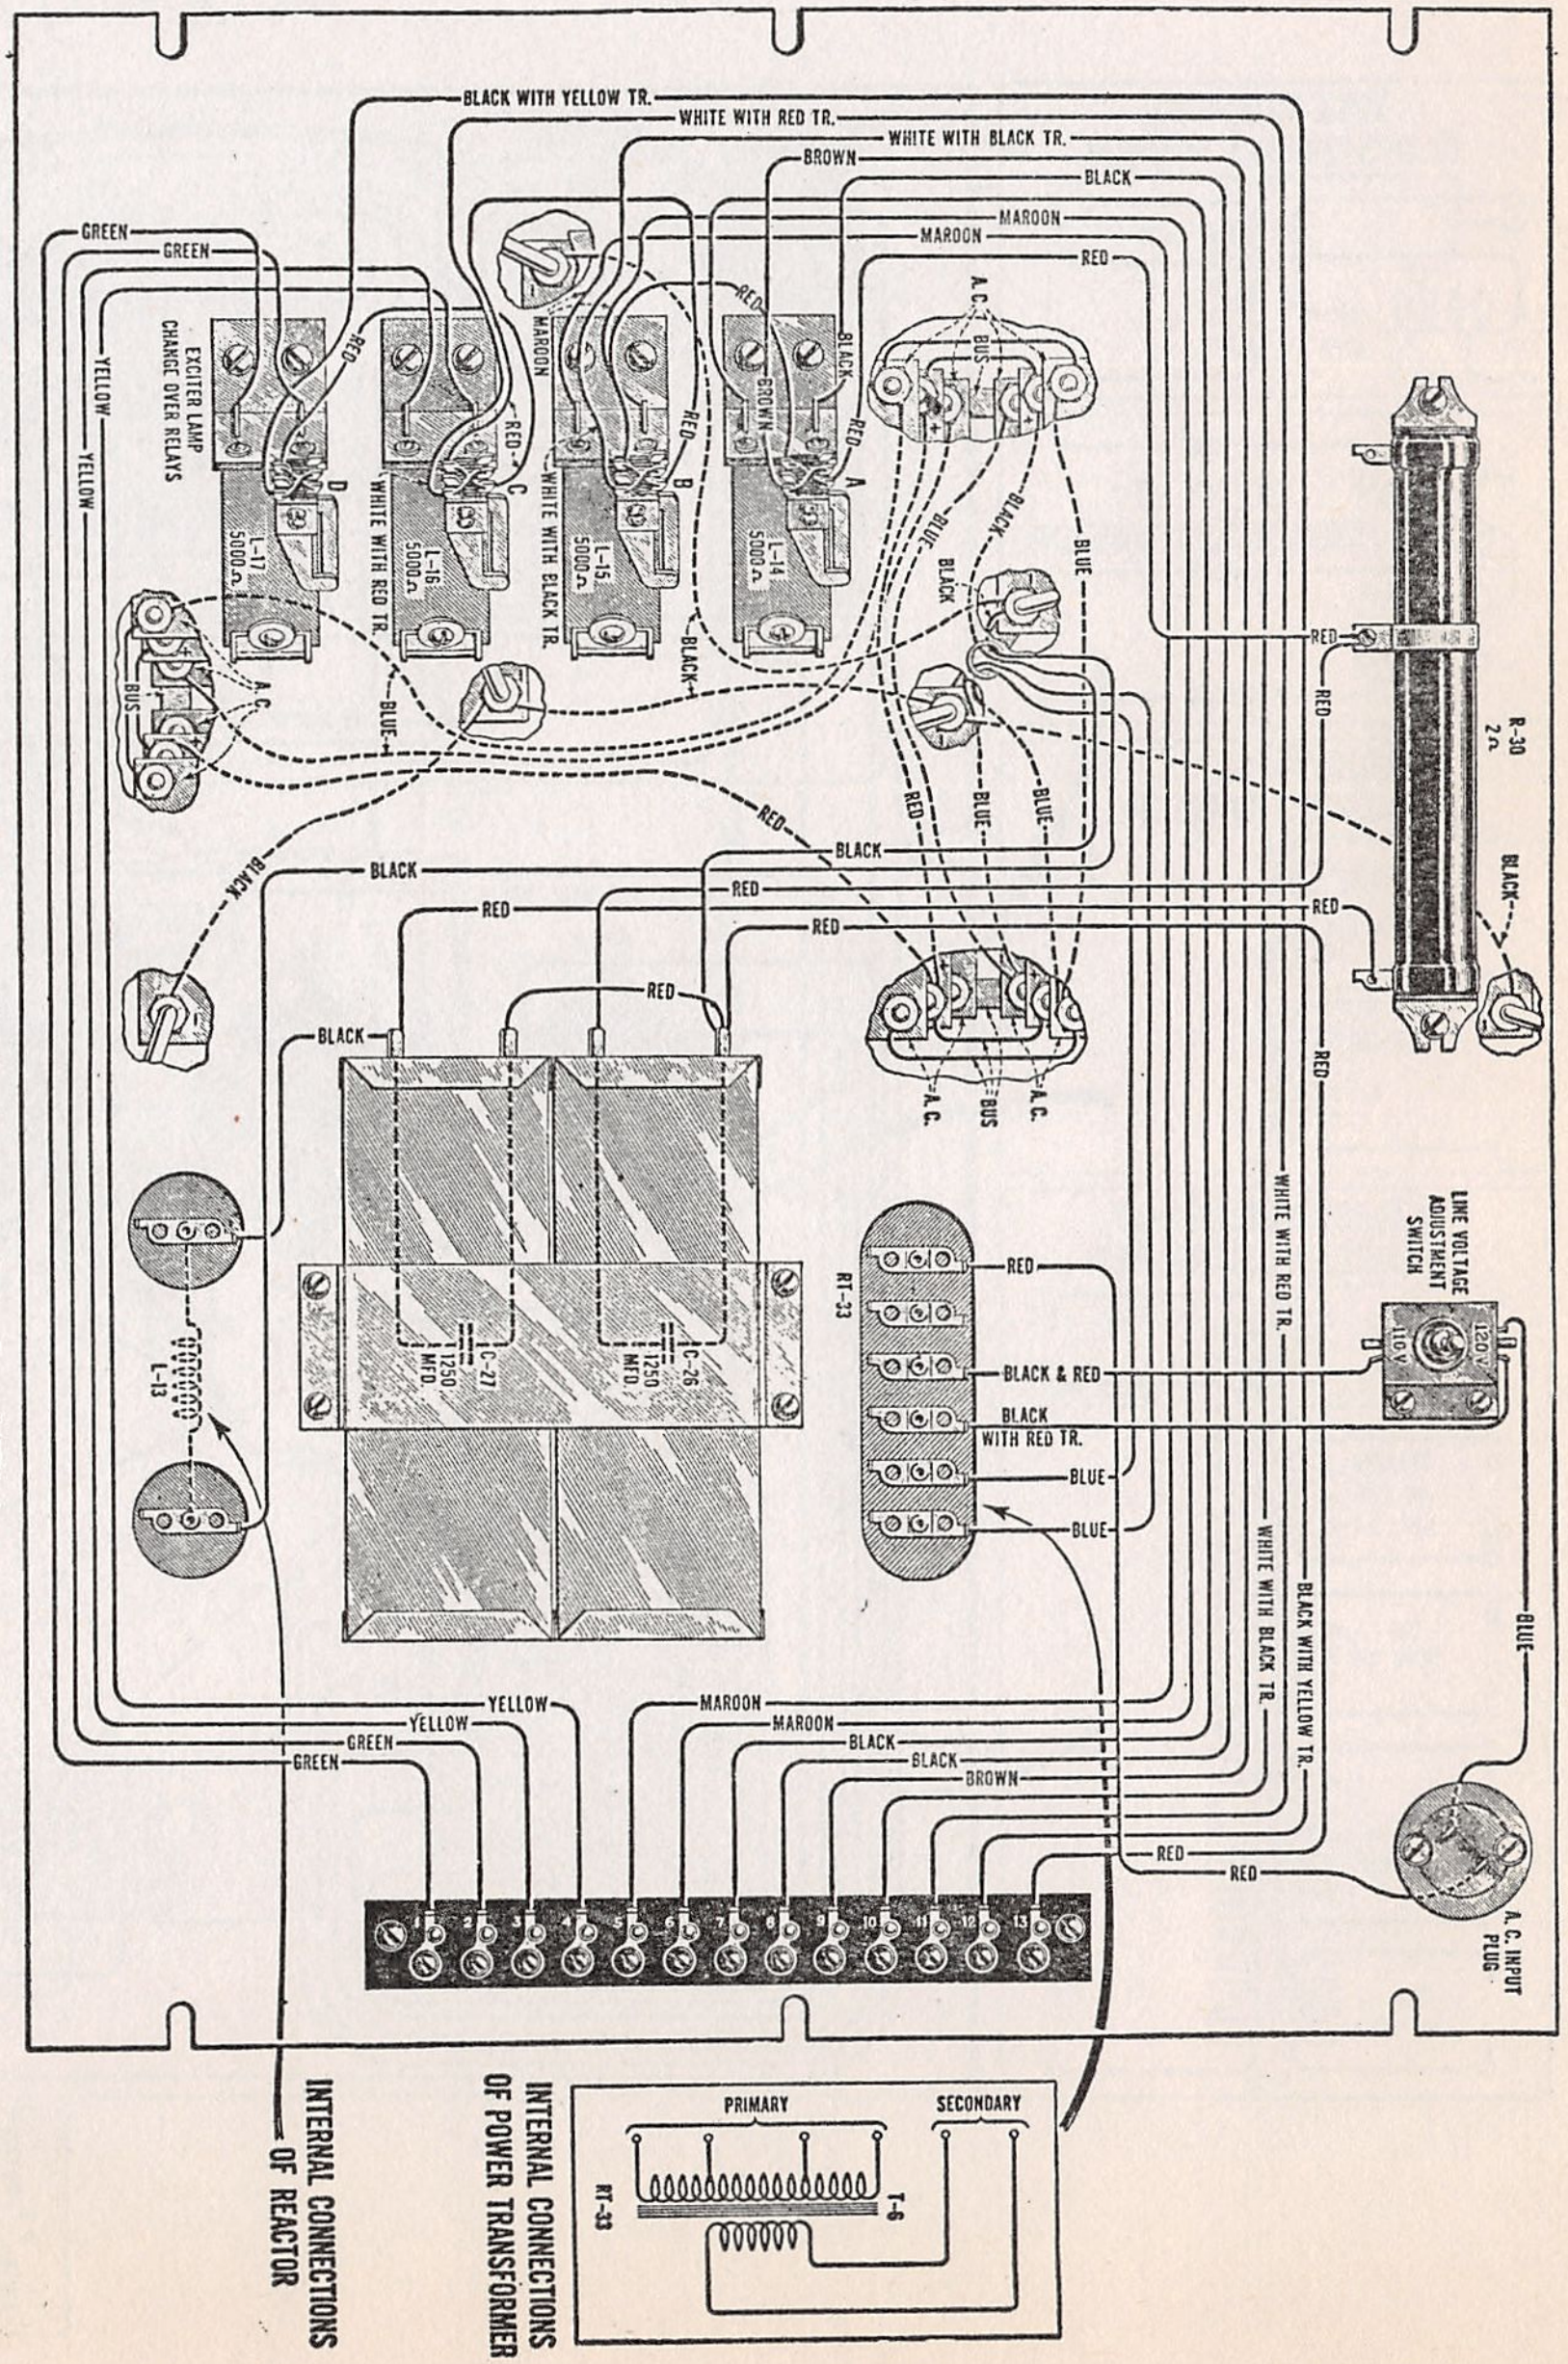
R-30
2Ω
BLACK
LINE VOLTAGE ADJUSTMENT SWITCH
120 V
110 V
A. C. INPUT PLUG
BLUE
RED
WHITE WITH RED TR.
BLACK WITH YELLOW TR.
WHITE WITH BLACK TR.
BROWN
MAROON
BLACK & RED
BLACK WITH RED TR.
A. C.
BUS
RT-33
L-14 5000Ω
L-15 5000Ω
L-16 5000Ω
L-17 5000Ω
A
B
C
D
C-26 1250 MFD.
C-27 1250 MFD.
EXCITER LAMP CHANGE OVER RELAYS
GREEN
YELLOW
L-13
SECONDARY
PRIMARY
T-6
RT-33
INTERNAL CONNECTIONS OF POWER TRANSFORMER
INTERNAL CONNECTIONS OF REACTOR

Exciter Lamp Supply Panel Wiring

Service Data

(2) RADIOTRON SOCKET VOLTAGES

The following voltages taken at each Radiotron socket with the amplifier in operating condition should prove of value when checking with test sets such as the Photophone KR-13 Multitester or the Weston Model 547, Type 3, or other giving similar readings. The plate currents shown are not necessarily accurate for each tube, as the cable in the test set will cause some circuits to oscillate, due to its added capacity. Small variations of voltages will be caused by different tubes and line voltages. Therefore, the following values must be taken as approximately those that will be found under varying conditions. The numbers in column 1 indicate the tube socket numbers shown in Figure 21.

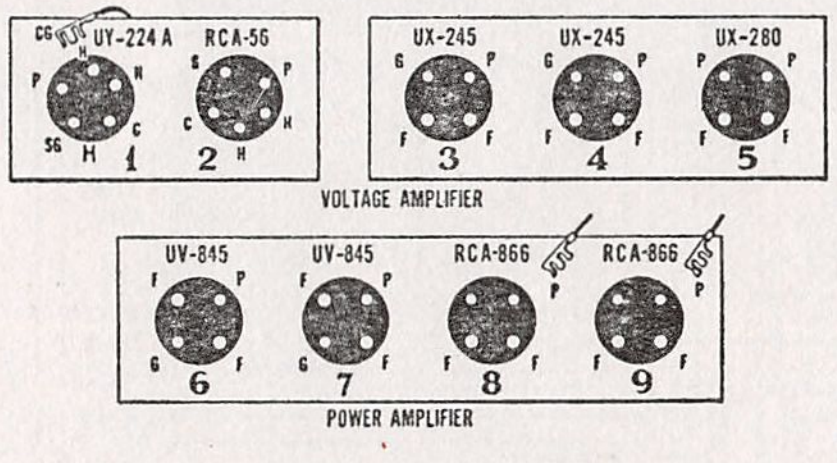
UY-224 A
RCA-56
UX-245
UX-245
UX-280
1
2
3
4
5
VOLTAGE AMPLIFIER
UV-845
UV-845
RCA-866
RCA-866
6
7
8
9
POWER AMPLIFIER
RADIOTRON SOCKET LAYOUT

Figure 21—Radiotron Socket Layout

Due to the voltage drop in the plate resistors caused by the current consumed in the test voltmeter, the screen grid and plate voltage readings obtained for the Radiotrons UY-224-A and RCA-56 are not true values.

To measure the plate current of the Radiotrons UV-845 a low range voltmeter or a millivoltmeter is required. The meter should be connected to a Yaxley No. 75 phone plug or a similar plug and the plug inserted into the plate current metering jacks on the base of the power amplifier.

Two millivolts read on the test meter equals one milliampere of plate current.

RADIOTRON SOCKET VOLTAGES

120 Volt A. C. Line

VOLTAGE AMPLIFIER

Radiotron No.	Control Grid to Cathode or Filament Volts	Screen Grid to Cathode or Filament Volts	Plate to Cathode or Filament Volts	Plate Current M. A.	Filament or Heater Volts
1. UY-224-A	1.2	45	90	1.0	2.2
2. RCA-56	6.0	—	115	2.5	2.2
3. UX-245	48.0	—	250	30.0	2.3
4. UX-245	—	—	250	30.0	2.3
5. UX-280	—	—	—	50.0	5.0

POWER AMPLIFIER

6. UV-845	—	—	—	60-75	10.0
7. UV-845	—	—	—	60-75	10.0

R. C. A. VICTOR CO., INC.

MODEL Photophone PG-32
Voltage Amplifier
Chassis

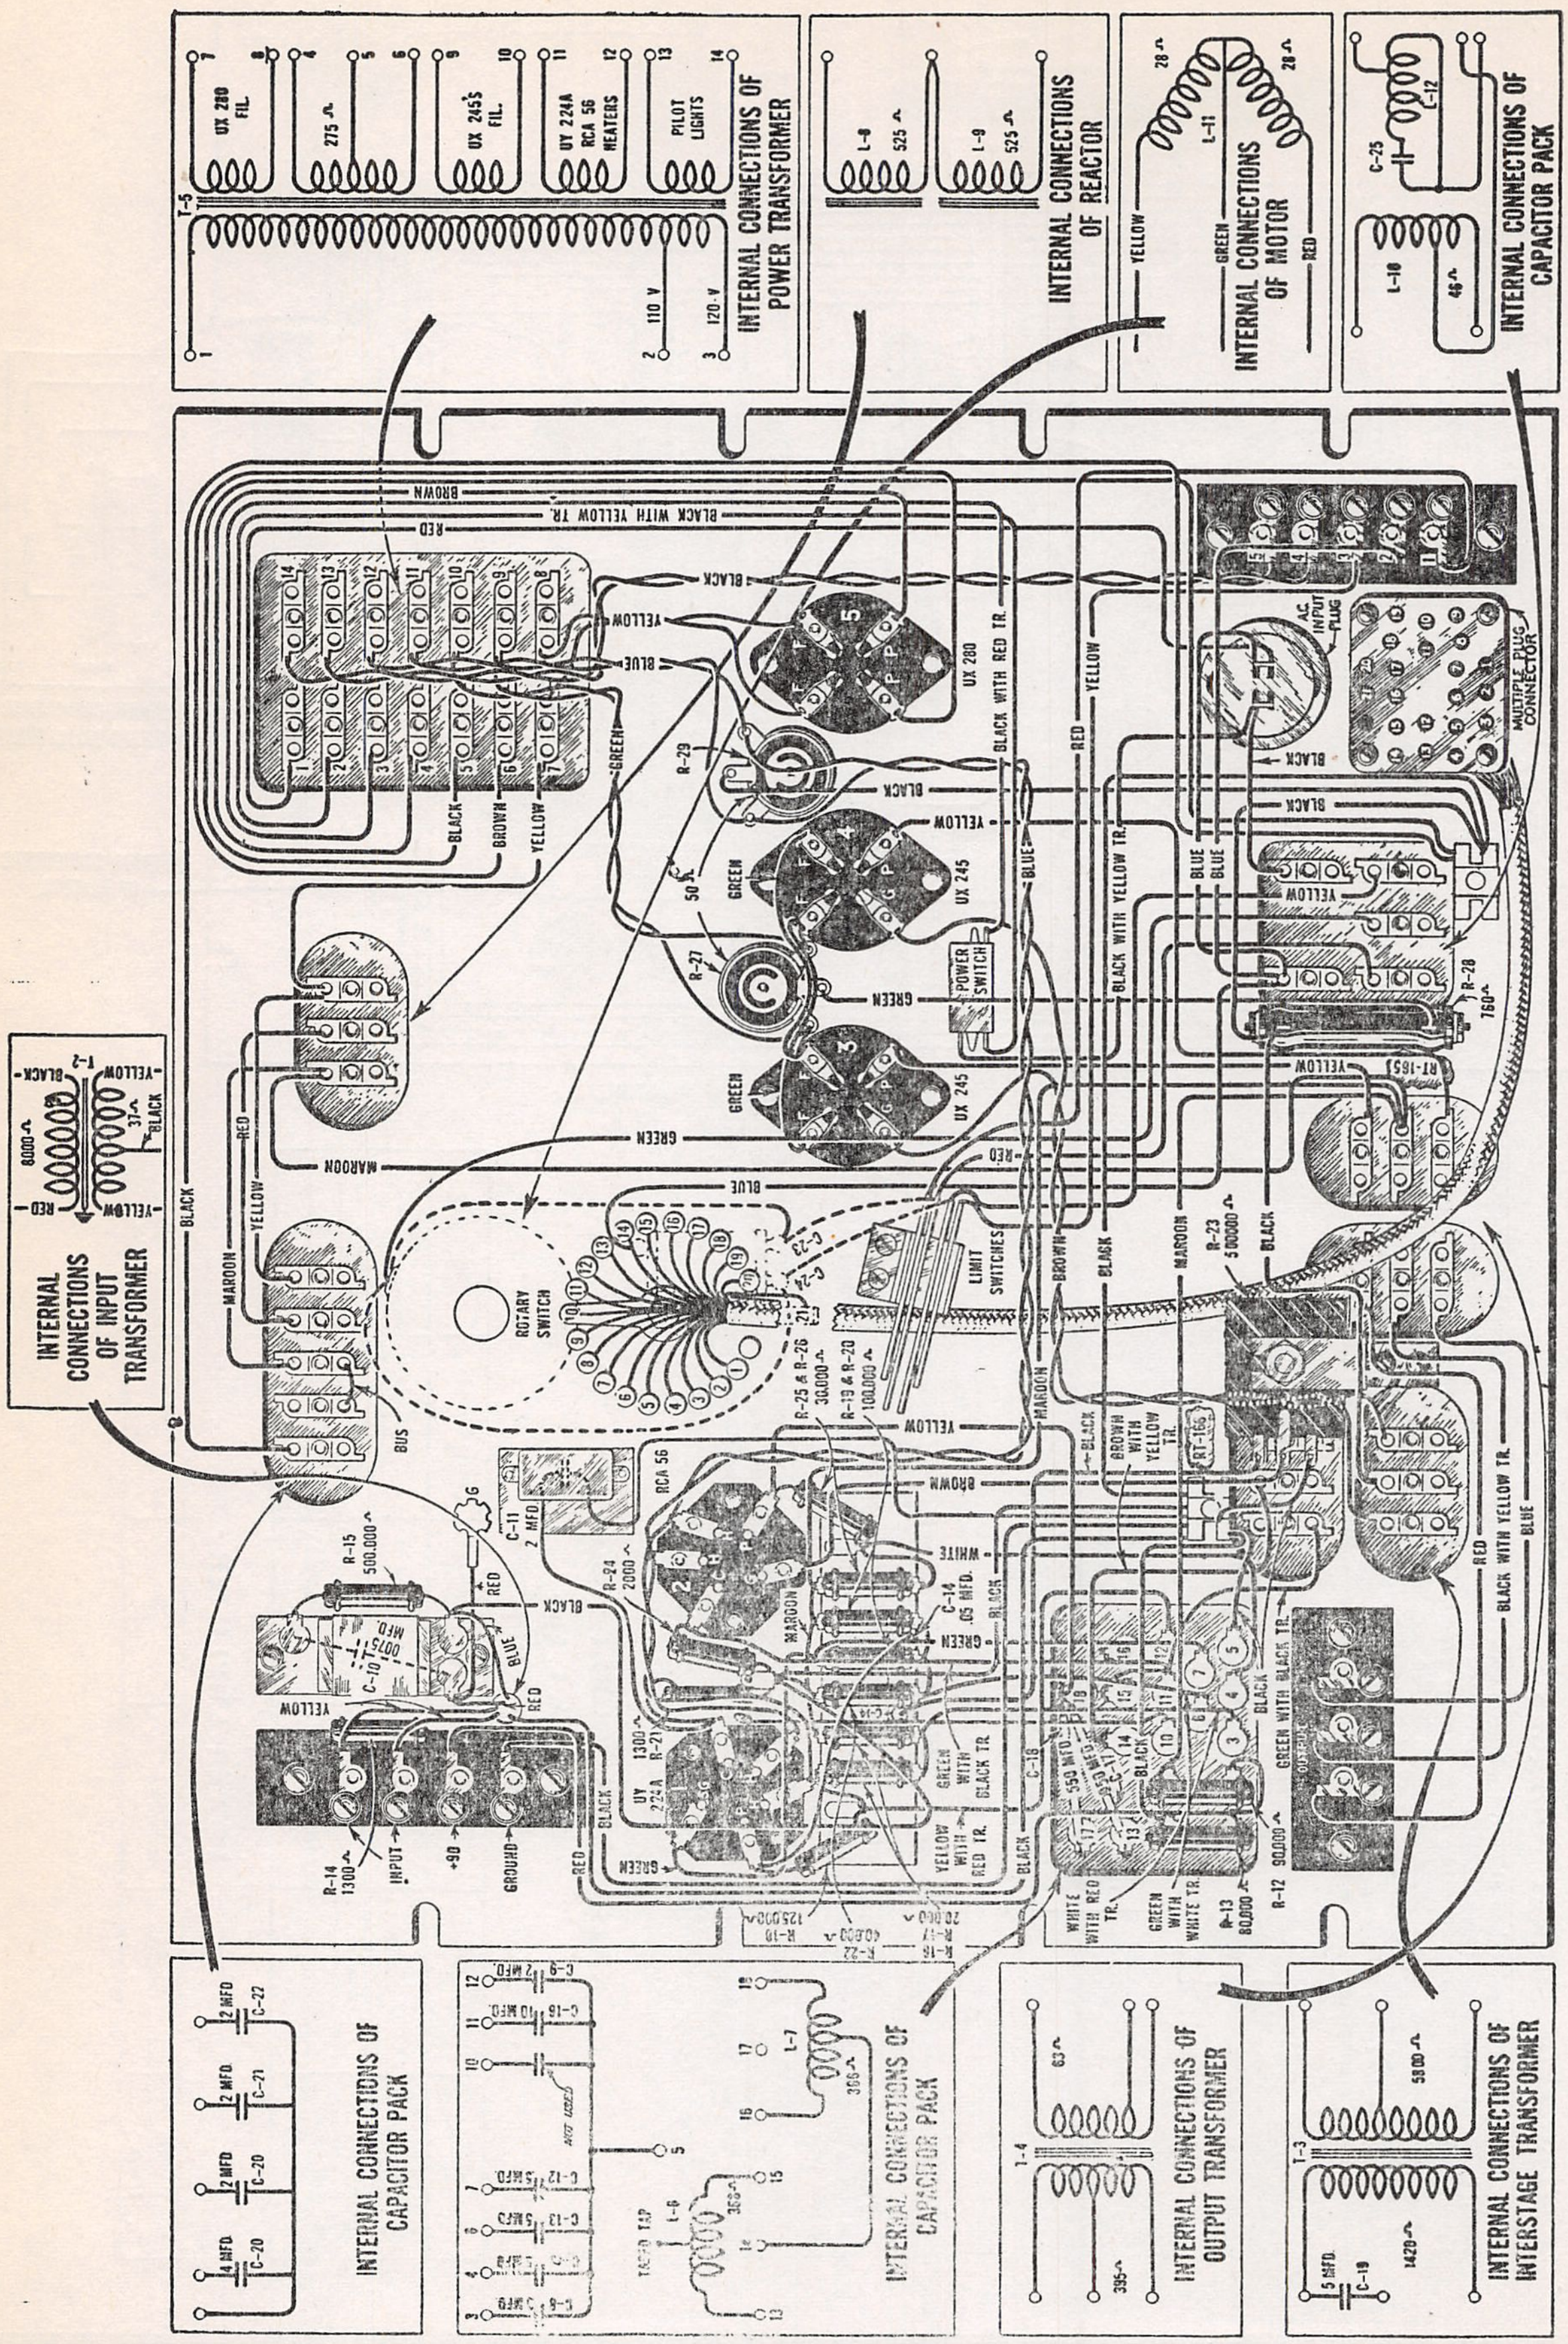
INTERNAL CONNECTIONS OF POWER TRANSFORMER
T-5
UX 280 FIL.
275 ∿
UX 245'S FIL.
UY 224A RCA 56 HEATERS
PILOT LIGHTS
110 V
120 V
INTERNAL CONNECTIONS OF REACTOR
L-8 525 ∿
L-9 525 ∿
INTERNAL CONNECTIONS OF MOTOR
L-11
28 ∿
YELLOW
GREEN
RED
INTERNAL CONNECTIONS OF CAPACITOR PACK
C-25
L-12
L-10
46 ∿
BROWN
BLACK WITH YELLOW TR.
RED
BLACK
YELLOW
BLUE
GREEN
UX 280
BLACK WITH RED TR.
R-29
UX 245
POWER SWITCH
R-27
50 ∿
AC INPUT PLUG
MULTIPLE PLUG CONNECTOR
BLACK WITH YELLOW TR.
R-28 760 ∿
RT-165
MAROON
INTERNAL CONNECTIONS OF INPUT TRANSFORMER
T-2
8000 ∿
37 ∿
ROTARY SWITCH
LIMIT SWITCHES
R-23 500000 ∿
R-25 & R-26 30,000 ∿
R-19 & R-20 100,000 ∿
RT-166
BUS
RCA 56
C-11 2 MFD.
R-15 500,000 ∿
C-10 .0075 MFD.
R-24 2000 ∿
C-14 .05 MFD.
WHITE
C-18
UY 224A
R-21 1300 ∿
R-14 1300 ∿
INPUT
+90
GROUND
GREEN WITH BLACK TR.
YELLOW WITH RED TR.
WHITE WITH RED TR.
GREEN WITH WHITE TR.
R-13 80,000 ∿
R-12 90,000 ∿
R-18 125,000 ∿
R-22 40,000 ∿
R-17 20,000 ∿
R-16
BLACK WITH YELLOW TR.
INTERNAL CONNECTIONS OF CAPACITOR PACK
C-20 4 MFD
C-20 2 MFD
C-21 2 MFD
C-22 2 MFD
INTERNAL CONNECTIONS OF CAPACITOR PACK
C-9 2 MFD
C-16 10 MFD
NOT USED
C-12 .5 MFD
C-13 .5 MFD
C-8 .5 MFD
L-7 360 ∿
L-6 360 ∿
TAPED TAP
INTERNAL CONNECTIONS OF OUTPUT TRANSFORMER
T-4
63 ∿
395 ∿
INTERNAL CONNECTIONS OF INTERSTAGE TRANSFORMER
T-3
5800 ∿
C-19 .5 MFD.
1420 ∿

Voltage Amplifier Panel Wiring

R. C. A. VICTOR CO., INC.

MODEL Photophone PG-38
Schematic

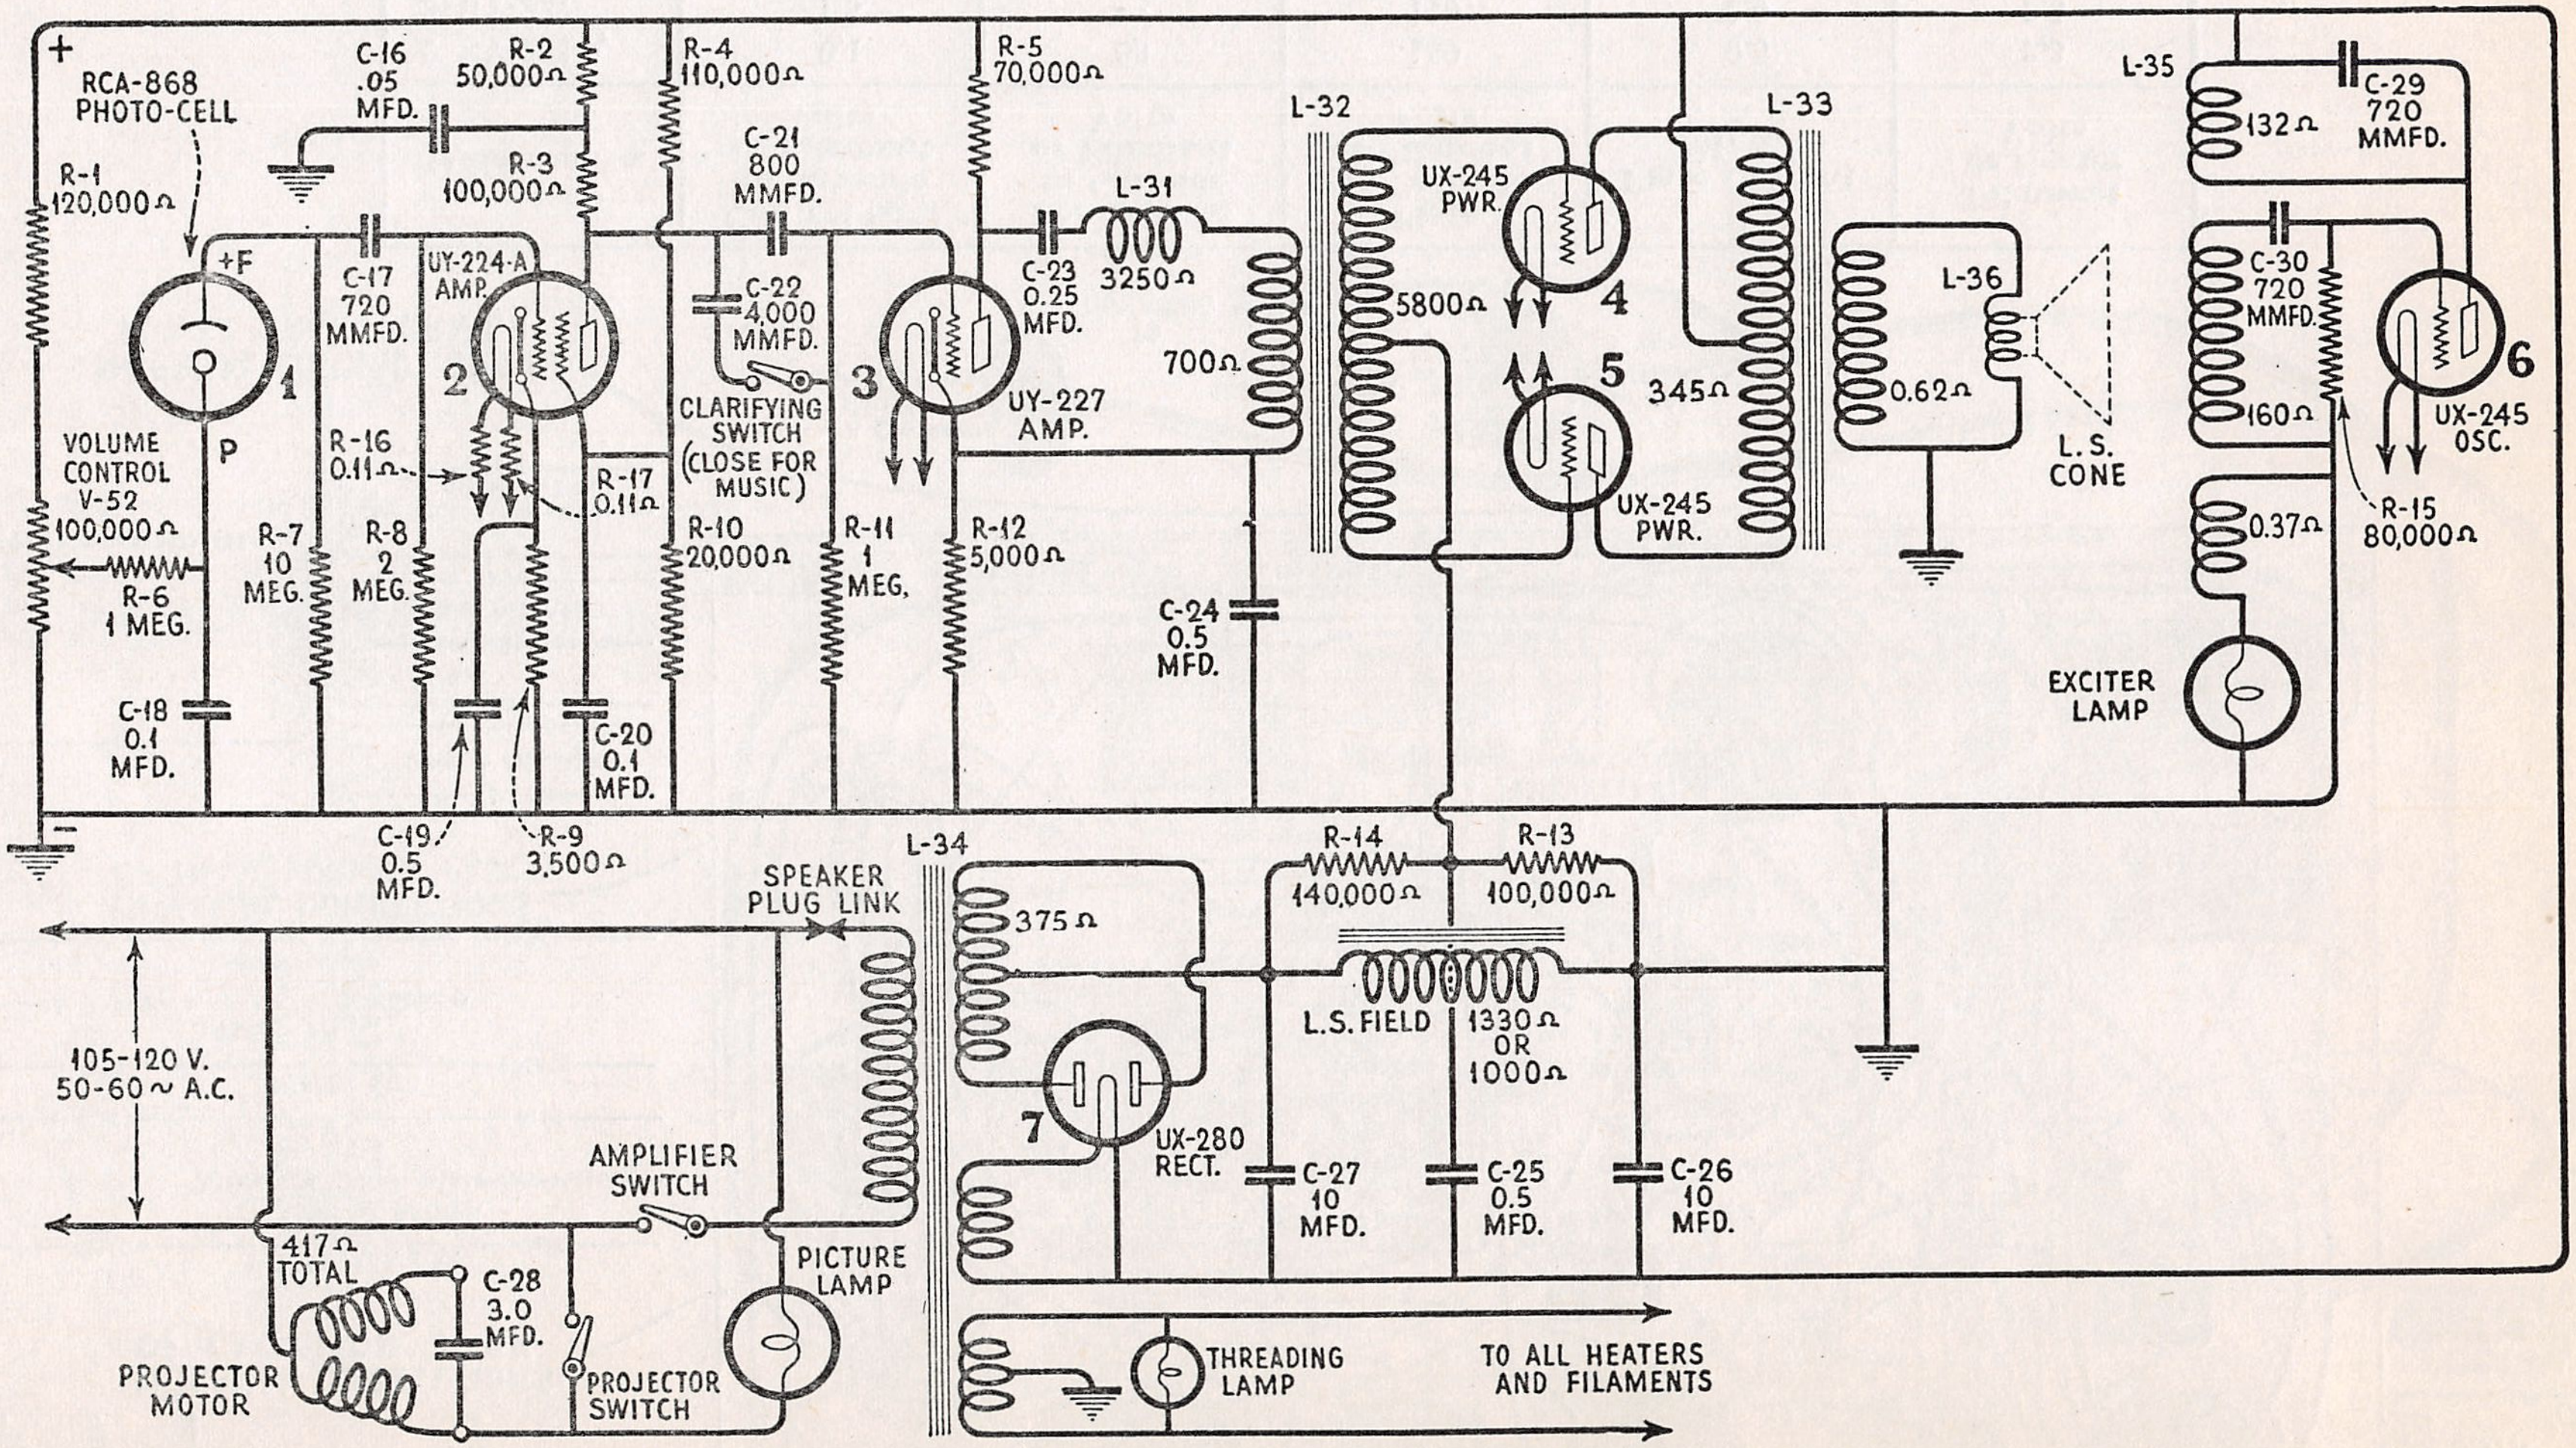
+
RCA-868 PHOTO-CELL
R-1 120,000Ω
+F
P
1
VOLUME CONTROL V-52 100,000Ω
R-6 1 MEG.
C-18 0.1 MFD.
C-16 .05 MFD.
R-2 50,000Ω
R-3 100,000Ω
C-17 720 MMFD.
R-7 10 MEG.
R-8 2 MEG.
UY-224-A AMP.
2
R-16 0.11Ω
R-17 0.11Ω
C-20 0.1 MFD.
C-19 0.5 MFD.
R-9 3,500Ω
R-4 110,000Ω
C-21 800 MMFD.
C-22 4,000 MMFD.
CLARIFYING SWITCH (CLOSE FOR MUSIC)
R-10 20,000Ω
R-11 1 MEG.
3
UY-227 AMP.
R-5 70,000Ω
C-23 0.25 MFD.
L-31
3250Ω
700Ω
R-12 5,000Ω
C-24 0.5 MFD.
L-32
5800Ω
UX-245 PWR.
4
5
UX-245 PWR.
345Ω
L-33
L-36
0.62Ω
L.S. CONE
L-35
132Ω
C-29 720 MMFD.
C-30 720 MMFD.
160Ω
UX-245 OSC.
6
R-15 80,000Ω
0.37Ω
EXCITER LAMP
L-34
SPEAKER PLUG LINK
375Ω
R-14 140,000Ω
R-13 100,000Ω
L.S. FIELD
1330Ω OR 1000Ω
7
UX-280 RECT.
C-27 10 MFD.
C-25 0.5 MFD.
C-26 10 MFD.
105-120 V. 50-60 ~ A.C.
AMPLIFIER SWITCH
417Ω TOTAL
C-28 3.0 MFD.
PROJECTOR MOTOR
PROJECTOR SWITCH
PICTURE LAMP
THREADING LAMP
TO ALL HEATERS AND FILAMENTS

MODEL Photophone PG-38
Chassis

R. C. A. VICTOR CO., INC.

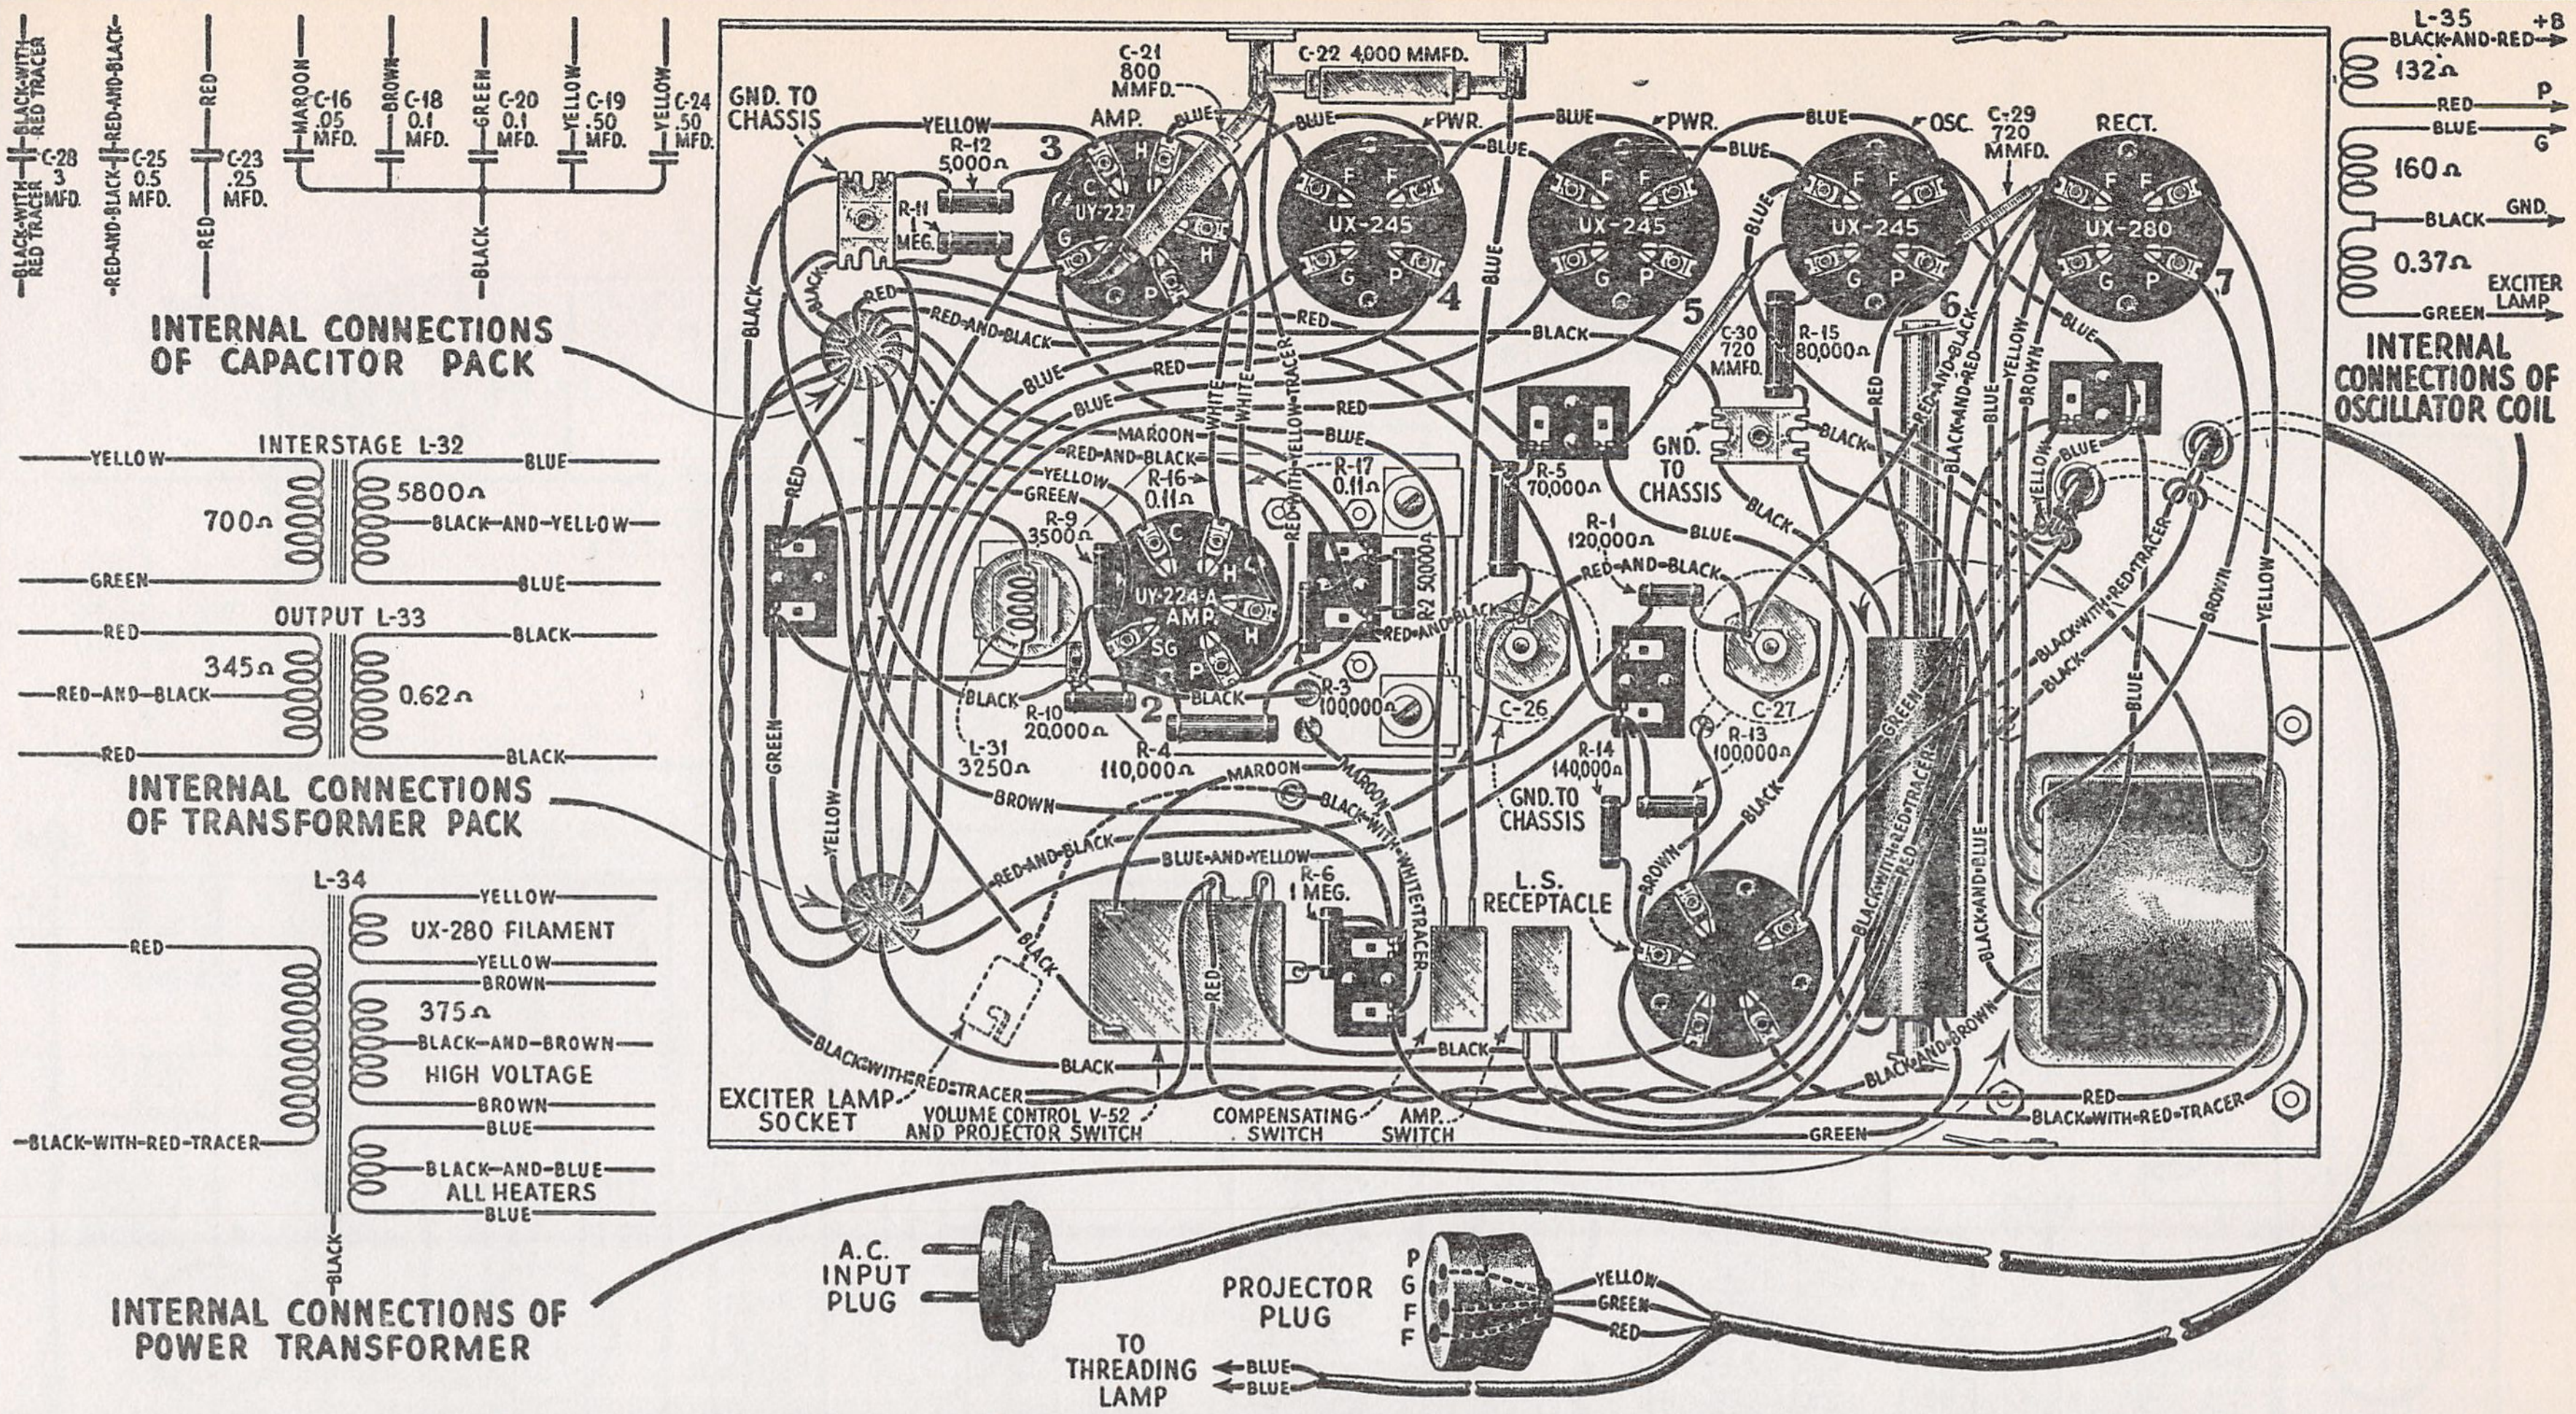
INTERNAL CONNECTIONS OF CAPACITOR PACK
C-28 3 MFD.
BLACK-WITH-RED TRACER
C-25 0.5 MFD.
RED-AND-BLACK
C-23 .25 MFD.
RED
C-16 .05 MFD.
MAROON
C-18 0.1 MFD.
BROWN
C-20 0.1 MFD.
GREEN
BLACK
C-19 .50 MFD.
YELLOW
C-24 .50 MFD.
INTERSTAGE L-32
700Ω
5800Ω
BLACK-AND-YELLOW
OUTPUT L-33
345Ω
0.62Ω
RED-AND-BLACK
INTERNAL CONNECTIONS OF TRANSFORMER PACK
L-34
UX-280 FILAMENT
375Ω
BLACK-AND-BROWN
HIGH VOLTAGE
BLACK-WITH-RED-TRACER
BLACK-AND-BLUE
ALL HEATERS
INTERNAL CONNECTIONS OF POWER TRANSFORMER
GND. TO CHASSIS
C-21 800 MMFD.
C-22 4000 MMFD.
AMP.
PWR.
OSC.
RECT.
UY-227
UX-245
UX-280
C-29 720 MMFD.
C-30 720 MMFD.
R-11 1 MEG.
R-12 5000Ω
R-15 80,000Ω
R-5 70,000Ω
R-1 120,000Ω
R-16 0.11Ω
R-17 0.11Ω
R-9 3500Ω
R-2 50000Ω
R-3 100,000Ω
R-10 20,000Ω
R-4 110,000Ω
L-31 3250Ω
R-14 140,000Ω
R-13 100,000Ω
R-6 1 MEG.
UY-224-A AMP.
C-26
C-27
GND. TO CHASSIS
L.S. RECEPTACLE
EXCITER LAMP SOCKET
VOLUME CONTROL V-52 AND PROJECTOR SWITCH
COMPENSATING SWITCH
AMP. SWITCH
A.C. INPUT PLUG
PROJECTOR PLUG
P G F F
TO THREADING LAMP
L-35
BLACK-AND-RED
+B
132Ω
P
G
160Ω
GND.
0.37Ω
EXCITER LAMP
INTERNAL CONNECTIONS OF OSCILLATOR COIL

Radiotron No.	Control Grid to Cathode or Filament Volts	Screen Grid to Cathode or Filament Volts	Plate to Cathode or Filament Volts	Plate Current M. A.	Filament or Heater Volts
2–UY-224-A	0.1	28	150	0.5	2.3
3–UY-227	1.5	—	110	2.0	2.5
4–UX-245	35	—	240	30	2.5
5–UX-245	35	—	240	30	2.5
6–UX-245 Osc.	75	—	240	25	2.5

Volume Control at Minimum
115 Volt Line

R. C. A. VICTOR CO., INC.

MODEL Photophone PK-25
Schematic
Chassis

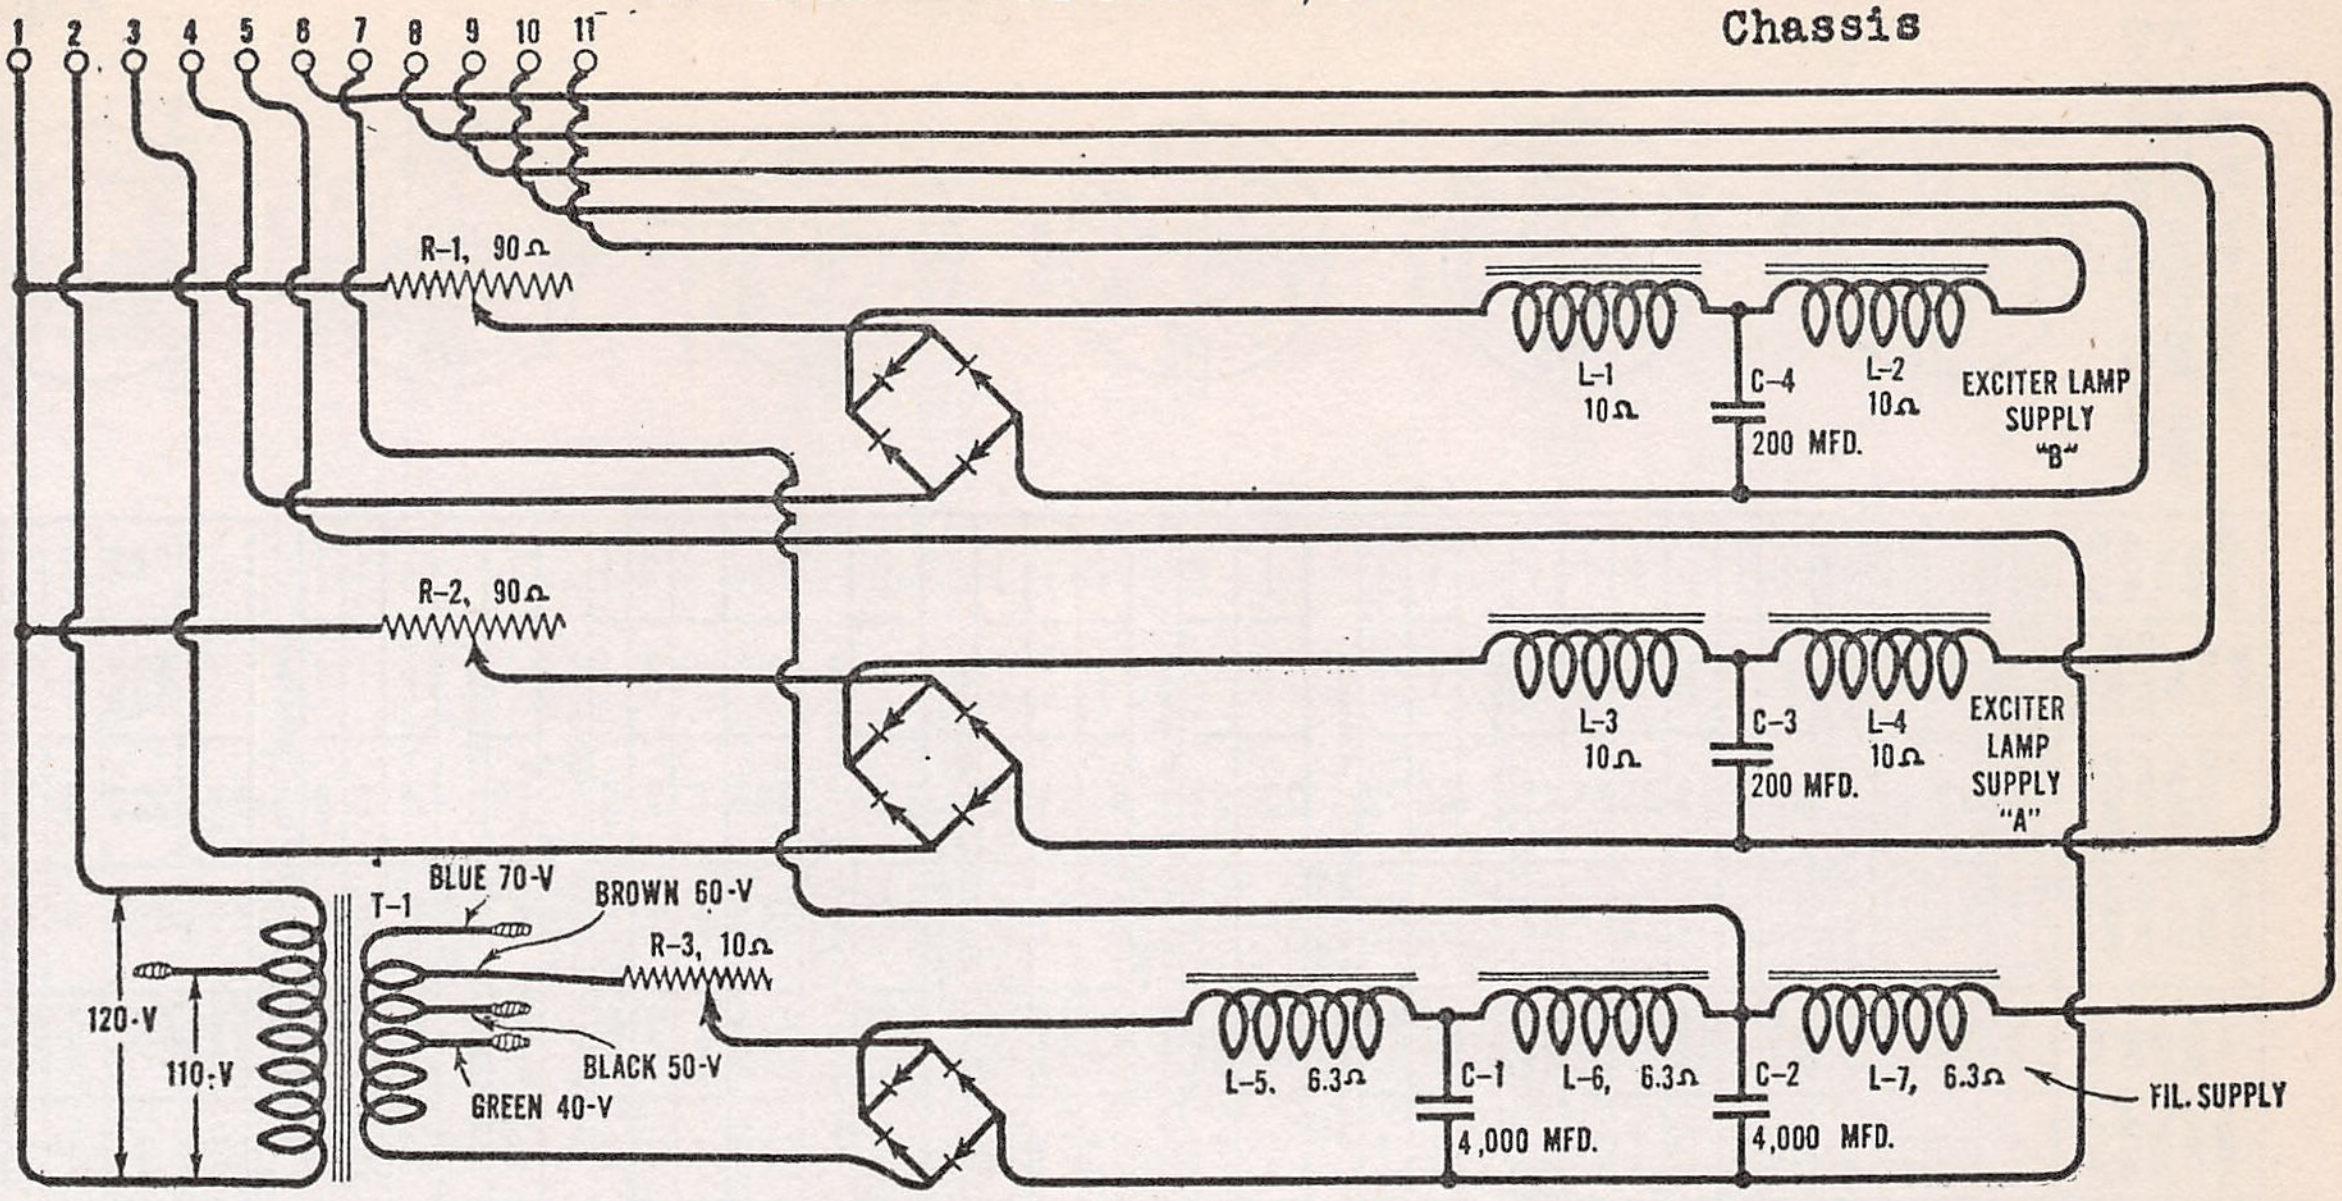
1
2
3
4
5
6
7
8
9
10
11
R-1, 90Ω
L-1 10Ω
C-4 200 MFD.
L-2 10Ω
EXCITER LAMP SUPPLY "B"
R-2, 90Ω
L-3 10Ω
C-3 200 MFD.
L-4 10Ω
EXCITER LAMP SUPPLY "A"
T-1
BLUE 70-V
BROWN 60-V
R-3, 10Ω
BLACK 50-V
GREEN 40-V
120-V
110-V
L-5, 6.3Ω
C-1 4,000 MFD.
L-6, 6.3Ω
C-2 4,000 MFD.
L-7, 6.3Ω
FIL. SUPPLY

SCHEMATIC DIAGRAM PK-25 UNIT

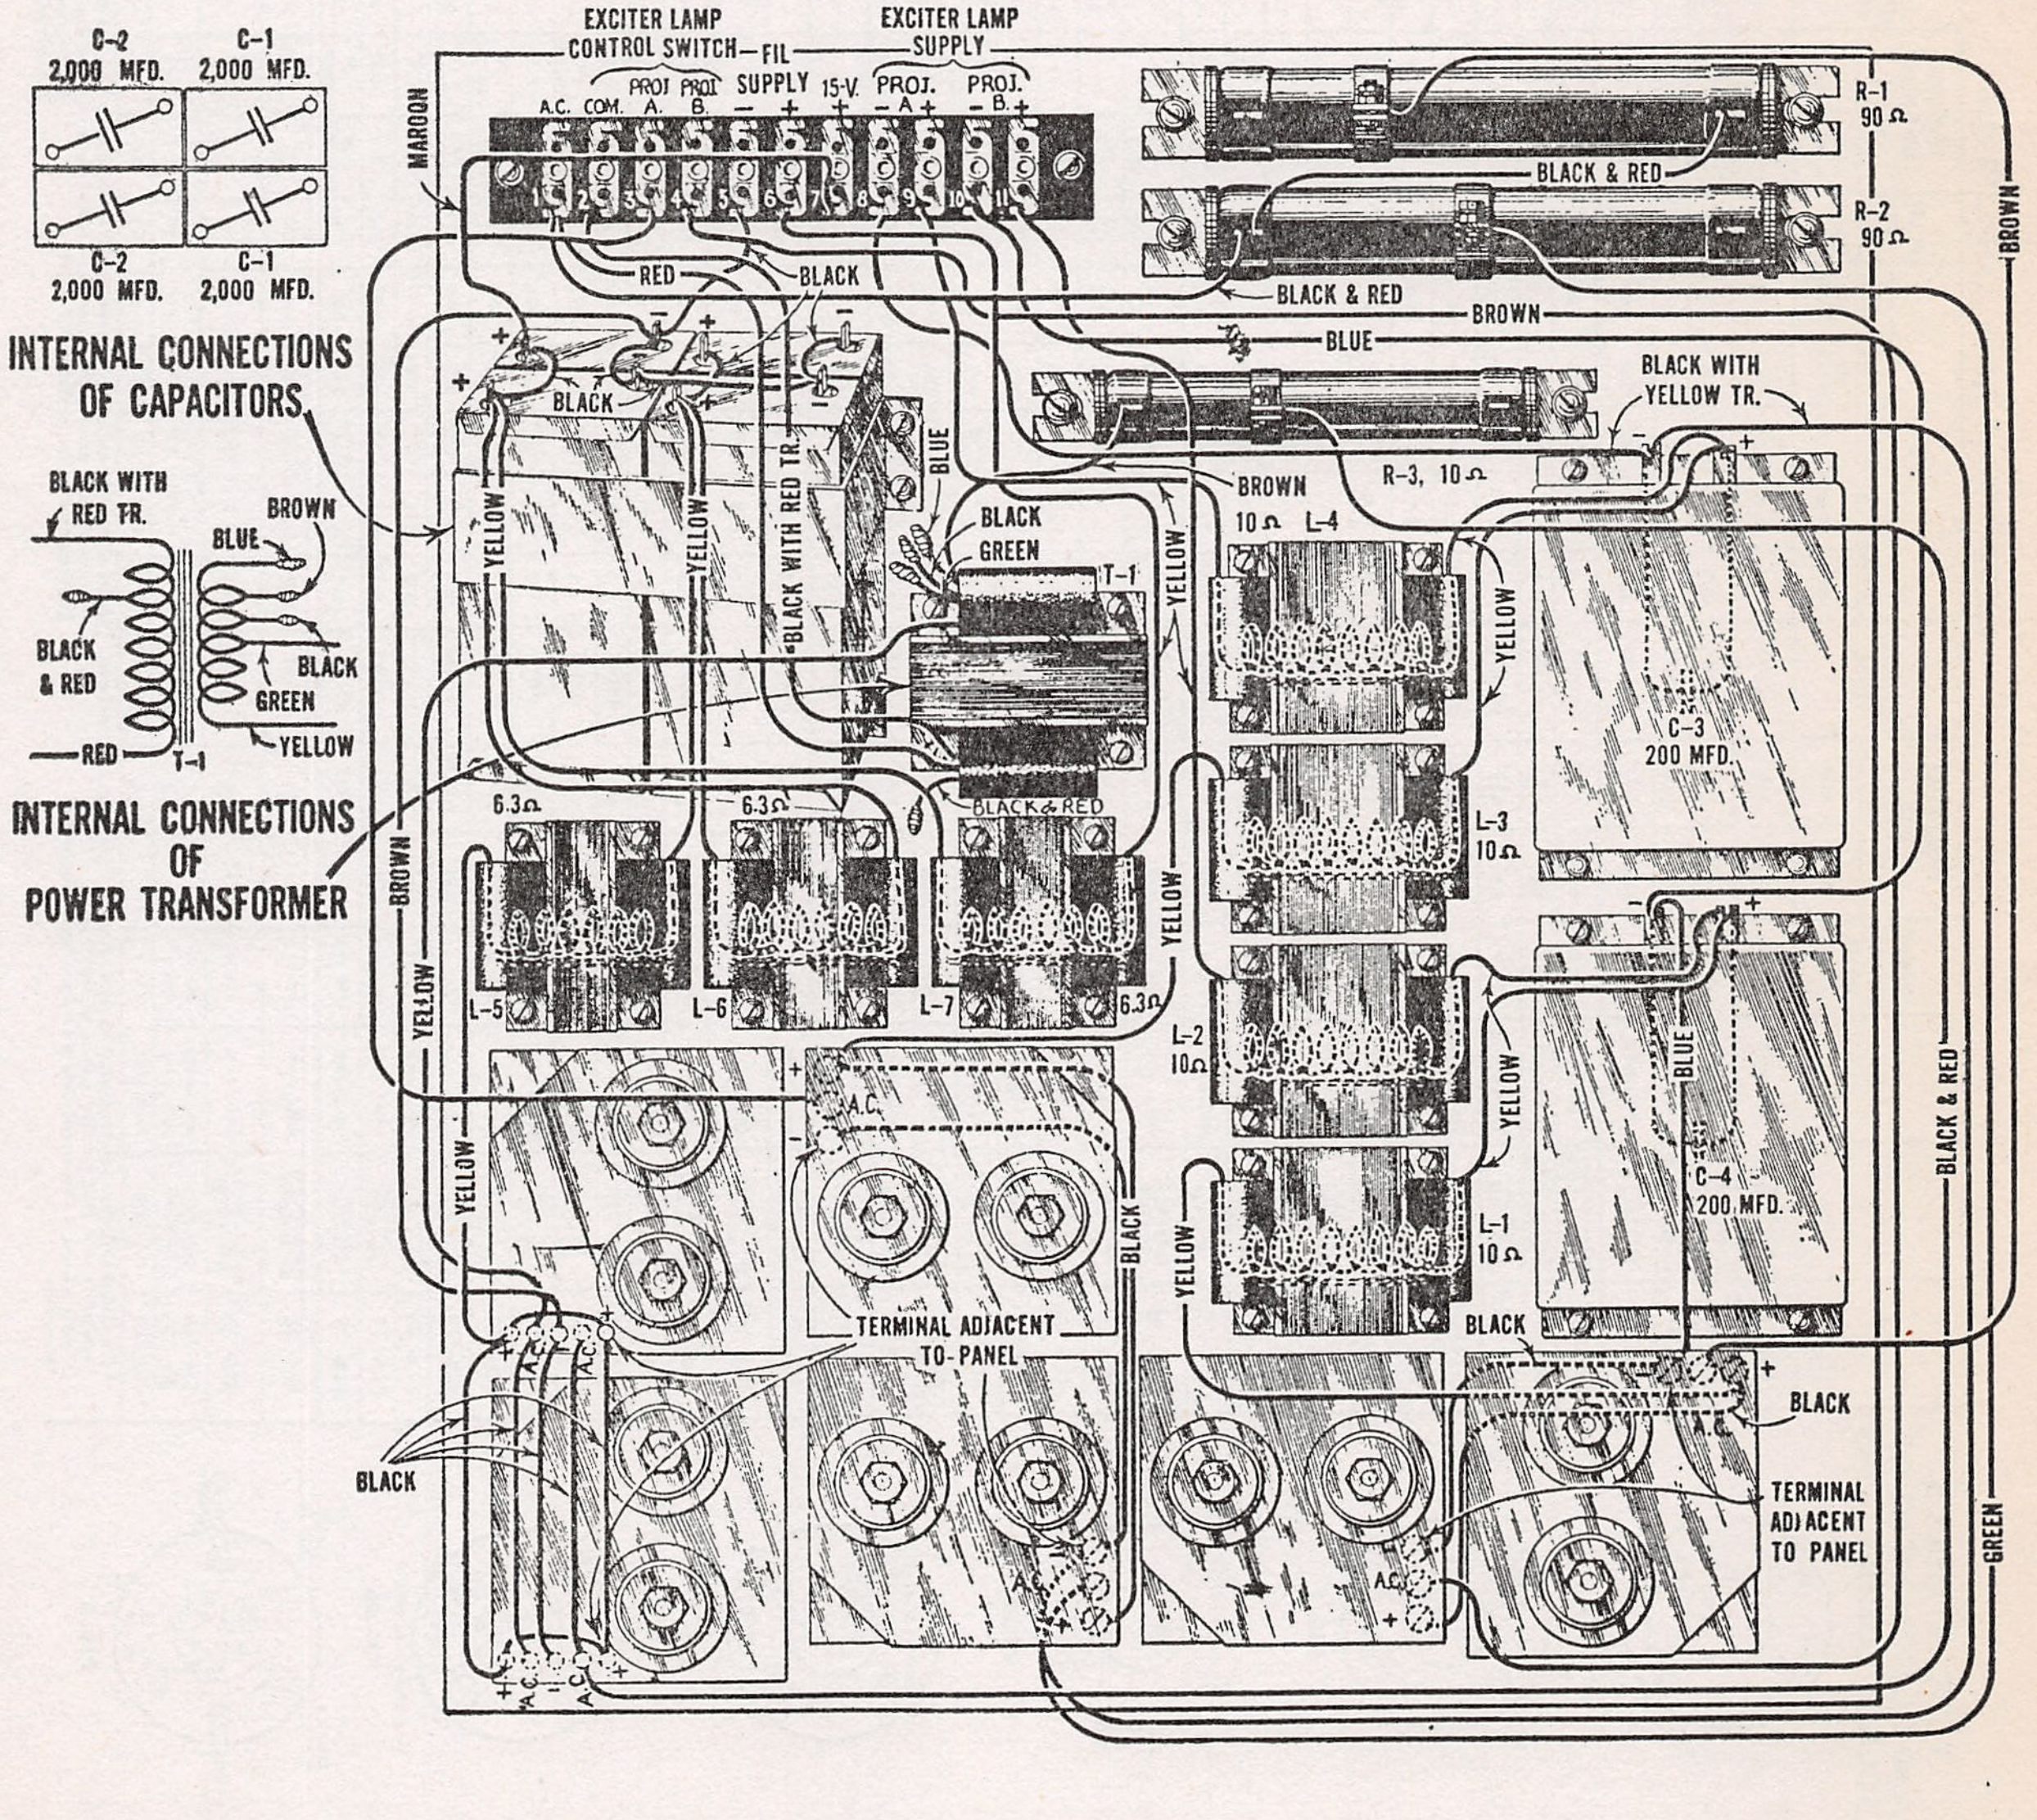
C-2 2,000 MFD.
C-1 2,000 MFD.
C-2 2,000 MFD.
C-1 2,000 MFD.
INTERNAL CONNECTIONS OF CAPACITORS
BLACK WITH RED TR.
BROWN
BLUE
BLACK & RED
BLACK
GREEN
RED
T-1
YELLOW
INTERNAL CONNECTIONS OF POWER TRANSFORMER
EXCITER LAMP CONTROL SWITCH
FIL SUPPLY
EXCITER LAMP SUPPLY
A.C.
COM.
PROJ A.
PROJ B.
15-V.
PROJ. A
PROJ. B
MAROON
RED
BLACK
R-1 90Ω
R-2 90Ω
BLACK & RED
BROWN
BLUE
BLACK WITH YELLOW TR.
R-3, 10Ω
BLACK WITH RED TR.
YELLOW
GREEN
10Ω L-4
C-3 200 MFD.
L-3 10Ω
6.3Ω
L-5
L-6
L-7
L-2 10Ω
L-1 10Ω
C-4 200 MFD.
BLACK & RED
A.C.
TERMINAL ADJACENT TO PANEL
BLACK
GREEN

WIRING DIAGRAM PK-25 UNIT

R.C.A. RADIOTRON CO.

TUBE SYMBOLS AND BOTTOM VIEWS OF SOCKET CONNECTIONS

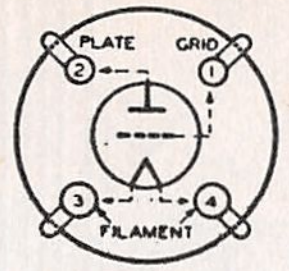

FIG. 1

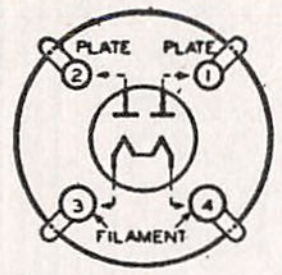

FIG. 2

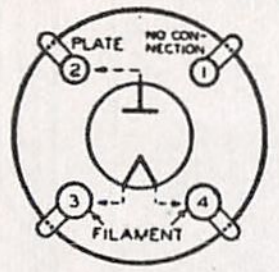

FIG. 3

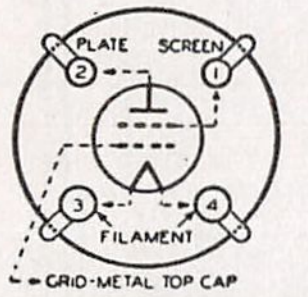

FIG. 4

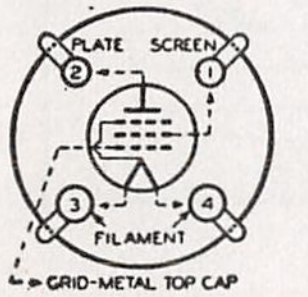

FIG. 4A

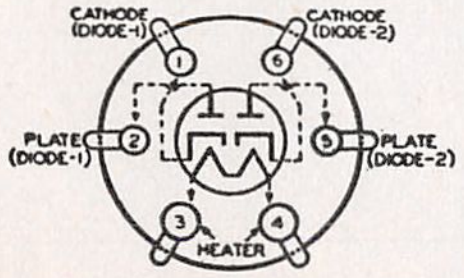

FIG. 5

DETECTORS AND AMPLIFIERS

TYPE	PURPOSE	BASE	SOCKET CONNECTIONS	DIMENSIONS MAX. OVERALL		CATHODE TYPE	RATING					PLATE SUPPLY VOLTS	NEGATIVE GRID BIAS VOLTS		SCREEN VOLTS	PLATE CURRENT MILLI-AMP.	SCREEN CURRENT MILLI-AMP.	A C PLATE RESISTANCE OHMS	MUTUAL CONDUCTANCE MICROMHOS	VOLTAGE AMPLIFICATION FACTOR	OHMS LOAD FOR STATED POWER OUTPUT	POWER OUTPUT MILLIWATTS
							FILAMENT (OR HEATER)			PLATE	SCREEN											
				LENGTH	DIAM.		VOLTS	AMPERES	SUPPLY	MAX. VOLTS	MAX. VOLTS		D C ON FIL.	A C ON FIL.								
RCA-2A7	RADIO FREQ. CONVERTER×	SMALL 7-PIN	FIG. 20	4 17/32″	1 9/16″	HEATER	2.5	0.8	A C or D C	250	100	250	3.0	3.0	100	4.0	2.0	300000	Anode-Grid (#2) 250 Max. Volts, 3.5 Ma. Oscillator Grid (#1) Resistor, 50000 Ohms Conversion Conductance, 475 Micromhos			
RCA-2B7	DIODE-DETECTOR R-F AMPLIFIER☒	SMALL 7-PIN	FIG. 21	4 17/32″	1 9/16″	HEATER	2.5	0.8	A C or D C	250	125	100 250	3.0 3.0	3.0 3.0	100 125	5.8 9.0	1.7 2.3	300000 650000	950 1125	285 730	—	—
RCA-2B7	DIODE-DETECTOR A-F AMPLIFIER ☒	SMALL 7-PIN	FIG. 21	4 17/32″	1 9/16″	HEATER	2.5	0.8	A C or D C	250	125	250✠	4.5	4.5	50	0.65	0.15	—	—	—	—	—
RCA-6A7	RADIO FREQ. CONVERTER×	SMALL 7-PIN	FIG. 20	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	100	250	3.0	3.0	100	4.0	2.0	300000	Anode-Grid (#2) 250 Max. Volts, 3.5 Ma. Oscillator Grid (#1) Resistor, 50000 Ohms Conversion Conductance, 475 Micromhos			
RCA-6B7	DIODE-DETECTOR R-F AMPLIFIER ☒	SMALL 7-PIN	FIG. 21	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	125	100 250	3.0 3.0	3.0 3.0	100 125	5.8 9.0	1.7 2.3	300000 650000	950 1125	285 730	—	—
RCA-6B7	DIODE-DETECTOR A-F AMPLIFIER ☒	SMALL 7-PIN	FIG. 21	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	125	250✠	4.5	4.5	50	0.65	0.15	—	—	—	—	—
UX -201-A	DETECTOR,* AMPLIFIER	MEDIUM 4-PIN	FIG. 1	4 11/16″	1 13/16″	FILAMENT	5.0	0.25	D C	135	—	90 135	4.5 9.0	—	—	2.5 3.0	—	11000 10000	725 800	8.0 8.0	—	—
UX -112-A	DETECTOR,* AMPLIFIER	MEDIUM 4-PIN	FIG. 1	4 11/16″	1 13/16″	FILAMENT	5.0	0.25	D C	180	—	90 135	4.5 9.0	—	—	5.0 6.2	—	5400 5100	1575 1650	8.5 8.5	—	—
RCA- 22	RADIO FREQ. AMPLIFIER	MEDIUM 4-PIN	FIG. 4	5 1/32″	1 13/16″	FILAMENT	3.3	0.132	D C	135	67.5	135 135	1.5 1.5	—	45 67.5	1.7 3.7	0.6° 1.3°	725000 325000	375 500	270 160	—	—
RCA- 24-A	RADIO FREQ. AMPLIFIER	MEDIUM 5-PIN	FIG. 9	5 1/32″	1 13/16″	HEATER	2.5	1.75	A C or D C	275	90	180 250	3.0 3.0	3.0 3.0	90 90	4.0 4.0	1.7 max.	400000 600000	1000 1050	400 630	—	—
RCA- 24-A	BIASED DETECTOR	MEDIUM 5-PIN	FIG. 9	5 1/32″	1 13/16″	HEATER	2.5	1.75	A C or D C	275	90	275‡	5 approx.	5 approx.	20 to 45	Plate current to be adjusted to 0.1 milliampere with no signal.						
RCA- 26	AMPLIFIER	MEDIUM 4-PIN	FIG. 1	4 11/16″	1 13/16″	FILAMENT	1.5	1.05	A C or D C	180	—	135 180	9.0 13.5	10.0 14.5	—	5.5 6.2	—	7600 7300	1100 1150	8.3 8.3	—	—
UY -227	AMPLIFIER	MEDIUM 5-PIN	FIG. 8	4 11/16″	1 13/16″	HEATER	2.5	1.75	A C or D C	275	—	135 250	9.0 21.0	9.0 21.0	—	4.5 5.2	—	9000 9250	1000 975	9.0 9.0	—	—
UY -227	BIASED* DETECTOR	MEDIUM 5-PIN	FIG. 8	4 11/16″	1 13/16″	HEATER	2.5	1.75	A C or D C	275	—	275§	33.0 approx.	33.0 approx.	—	Plate current to be adjusted to 0.2 milliampere with no signal.						
RCA- 30	DETECTOR,* AMPLIFIER	SMALL 4-PIN	FIG. 1	4 1/4″	1 9/16″	FILAMENT	2.0	0.06	D C	180	—	90 135 180	4.5 9.0 13.5	—	—	2.5 3.0 3.1	—	11000 10300 10300	850 900 900	9.3 9.3 9.3	—	—
RCA- 32	RADIO FREQ. AMPLIFIER	MEDIUM 4-PIN	FIG. 4	5 1/32″	1 13/16″	FILAMENT	2.0	0.06	D C	180	67.5	135 180	3.0 3.0	—	67.5 67.5	1.7 1.7	0.4 max.	950000 1200000	640 650	610 780	—	—
RCA- 32	BIASED DETECTOR	MEDIUM 4-PIN	FIG. 4	5 1/32″	1 13/16″	FILAMENT	2.0	0.06	D C	180	67.5	180⌘	6 approx.	—	67.5	Plate current to be adjusted to 0.2 milliampere with no signal.						
RCA- 34	SUPER-CONTROL R-F AMPLIFIER	MEDIUM 4-PIN	FIG. 4A	5 1/32″	1 13/16″	FILAMENT	2.0	0.06	D C	180	67.5	135 180	3.0 min.	—	67.5 67.5	2.8 2.8	1.0 1.0	600000 1000000	600 620	360 620	—	—
RCA- 35	SUPER-CONTROL R-F AMPLIFIER	MEDIUM 5-PIN	FIG. 9	5 1/32″	1 13/16″	HEATER	2.5	1.75	A C or D C	275	90	180 250	3.0 min.	3.0 min.	90 90	6.3 6.5	2.5 max.	300000 400000	1020 1050	305 420	—	—
RCA- 36	RADIO FREQ. AMPLIFIER	SMALL 5-PIN	FIG. 9	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	180	90	135 180	1.5 3.0	1.5 3.0	67.5 90	3.0 3.1	1.7 max.	300000 350000	1050 1050	315 370	—	—
RCA- 36	BIASED DETECTOR	SMALL 5-PIN	FIG. 9	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	180	67.5	180‡	6.0 approx.	6.0 approx.	67.5	Plate current to be adjusted to 0.1 milliampere with no signal.						
RCA- 37	AMPLIFIER	SMALL 5-PIN	FIG. 8	4 1/4″	1 9/16″	HEATER	6.3	0.3	A C or D C	180	—	90 135 180	6.0 9.0 13.5	6.0 9.0 13.5	—	2.6 4.3 4.7	—	11500 10000 10000	780 900 900	9.0 9.0 9.0	—	—
RCA- 37	BIASED* DETECTOR	SMALL 5-PIN	FIG. 8	4 1/4″	1 9/16″	HEATER	6.3	0.3	A C or D C	180	—	90 180	10.0 20.0	10.0 20.0	—	Plate current to be adjusted to 0.2 milliampere with no signal.						
RCA- 39	SUPER-CONTROL R-F AMPLIFIER	SMALL 5-PIN	FIG. 9A	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	180	90	90 135 180	3.0 3.0 3.0	3.0 3.0 3.0	90 90 90	4.4 4.4 4.5	1.3 1.2 1.2	375000 540000 750000	960 980 1000	360 530 750	—	—
RCA- 44	SUPER-CONTROL R-F AMPLIFIER	SMALL 5-PIN	FIG. 9A	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	90	250	3.0 min.	3.0 min.	90	5.8	1.4	600000	1050	630	—	—
RCA- 55	DIODE-DETECTOR AMPLIFIER ■	SMALL 6-PIN	FIG. 13	4 17/32″	1 9/16″	HEATER	2.5	1.0	A C or D C	250	—	250	20	20	—	8.0	—	7500	1100	8.3	20000	350
RCA- 56	AMPLIFIER	SMALL 5-PIN	FIG. 8	4 1/4″	1 9/16″	HEATER	2.5	1.0	A C or D C	250	—	250	13.5	13.5	—	5.0	—	9500	1450	13.8	—	—
RCA- 56	BIASED* DETECTOR	SMALL 5-PIN	FIG. 8	4 1/4″	1 9/16″	HEATER	2.5	1.0	A C or D C	250	—	250§	20 approx.	20 approx.	—	Plate current to be adjusted to 0.2 milliampere with no signal.						
RCA- 57	RADIO FREQ. AMPLIFIER	SMALL 6-PIN	FIG. 11	4 15/16″	1 9/16″	HEATER	2.5	1.0	A C or D C	250	100	250	3.0	3.0	100	2.0	0.5	exceeds 1.5 meg.	1225	exceeds 1500	—	—
RCA- 57	BIASED DETECTOR	SMALL 6-PIN	FIG. 11	4 15/16″	1 9/16″	HEATER	2.5	1.0	A C or D C	250	100	275‡	6.0 approx.	6.0 approx.	100		Plate current to be adjusted to 0.1 milliampere with no signal.					
RCA- 58	SUPER-CONTROL R-F AMPLIFIER	SMALL 6-PIN	FIG. 11	4 15/16″	1 9/16″	HEATER	2.5	1.0	A C or D C	250	100	250	3.0 min.	3.0 min.	100	8.2	2.0	800000	1600	1280	—	—
RCA- 75	DIODE-DETECTOR AMPLIFIER ■	SMALL 6-PIN	FIG. 13	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	—	250⌘	2.0	2.0	—	0.8	—	91000	1100	100	—	—
RCA- 77	RADIO FREQ. AMPLIFIER	SMALL 6-PIN	FIG. 11	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	100	250	3.0	3.0	100	2.3	0.6	1500000	1250	1500	—	—
RCA- 77	BIASED DETECTOR	SMALL 6-PIN	FIG. 11	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250‡	100	250	7.0 approx.	7.0 approx.	100	Plate current to be adjusted to 0.1 milliampere with no signal.						
RCA- 78	SUPER-CONTROL R-F AMPLIFIER	SMALL 6-PIN	FIG. 11	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	100	180 250 250	3.0 min.	3.0 min.	75 100 125	4.0 7.0 10.5	1.1 2.0 3.0	1000000 800000 600000	1100 1450 1650	1100 1160 990	—	—
RCA- 85	DIODE-DETECTOR AMPLIFIER ■	SMALL 6-PIN	FIG. 13	4 17/32″	1 9/16″	HEATER	6.3	0.3	A C or D C	250	—	135 180 250	10.5 13.5 20.0	10.5 13.5 20.0	—	3.7 6.0 8.0	—	11000 8500 7500	750 975 1100	8.3 8.3 8.3	25000 20000 20000	75 160 350
UV -199 UX -199	DETECTOR,* AMPLIFIER	SMALL 4-NUB SMALL 4-PIN	FIG. 10 FIG. 1	3 1/2″ 4 1/8″	1 1/16″ 1 3/16″	FILAMENT	3.3	0.063	D C	90	—	90	4.5	—	—	2.5	—	15500	425	6.6	—	—
RCA-864	AMPLIFIER	SMALL 4-PIN	FIG. 1	4″	1 3/16″	FILAMENT	1.1	0.25	D C	135	—	135	9.0	—	—	3.5	—	12700	645	8.2	—	—

*For Grid-leak Detection—plate volts 45, grid return to + filament or to cathode.
†Applied through plate coupling resistor of 250000 ohms.
×Grids #3 and #5 are screen. Grid #4 is signal-input control-grid.
°Maximum.
§Applied through plate coupling resistor of 50000 ohms.
⌘Applied through plate coupling resistor of 100000 ohms.
☒Characteristics are for Pentode Unit only.
‡Applied through plate coupling resistor of 250000 ohms or 500 henry choke shunted by 0.25 megohm resistor.
■Characteristics are for Triode Unit only.
✠Applied through plate coupling resistor of 200,000 ohms.

TUBE SYMBOLS AND BOTTOM VIEWS OF SOCKET CONNECTIONS

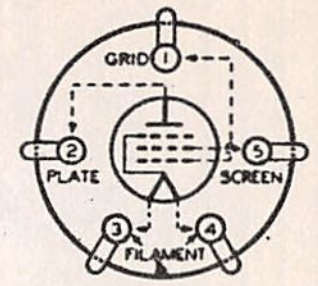

FIG. 6

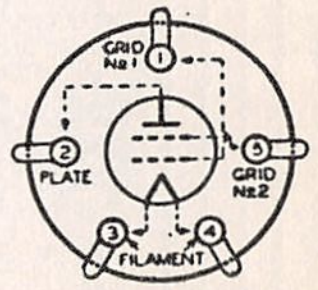

FIG. 7

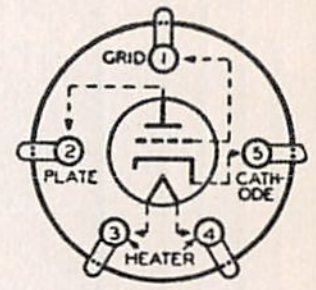

FIG. 8

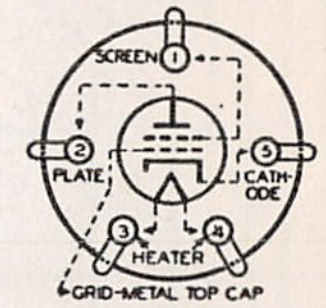

FIG. 9

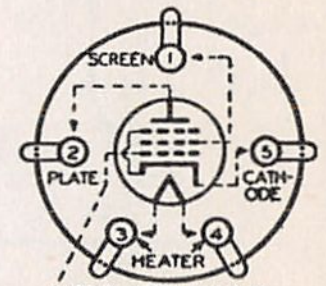

FIG. 9A

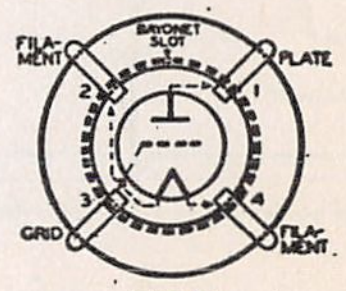

FIG. 10

R.C.A. RADIOTRON CO.

TUBE SYMBOLS AND BOTTOM VIEWS OF SOCKET CONNECTIONS

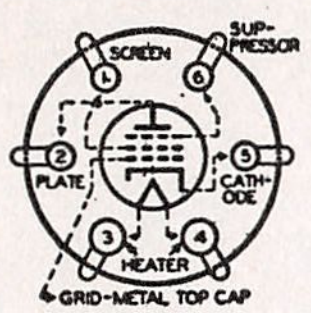

FIG.11

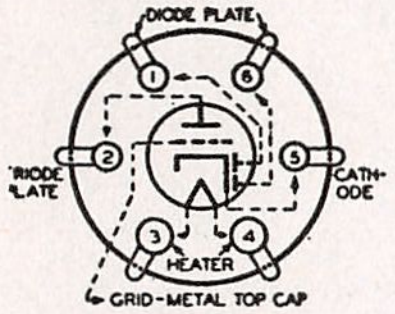

FIG.13

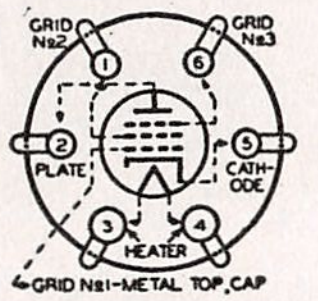

FIG.14

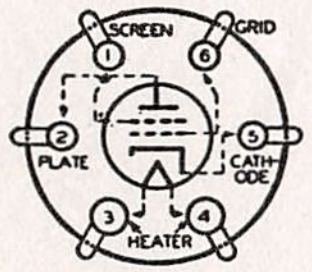

FIG.15

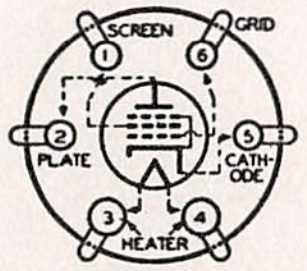

FIG.15A

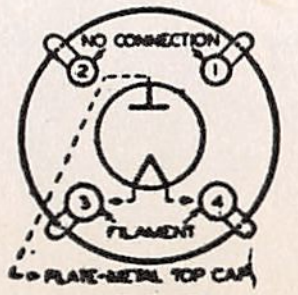

FIG.16

POWER AMPLIFIERS

TYPE	PURPOSE	BASE	SOCKET CONNECTIONS	DIMENSIONS MAX. OVERALL		CATHODE TYPE	RATING					PLATE SUPPLY VOLTS	NEGATIVE GRID BIAS VOLTS		SCREEN VOLTS	PLATE CURRENT MILLI-AMP.	SCREEN CURRENT MILLI-AMP.	A C PLATE RESISTANCE OHMS	MUTUAL CONDUCTANCE MICRO-MHOS	VOLTAGE AMPLIFICATION FACTOR	OHMS LOAD FOR STATED POWER OUTPUT	POWER OUTPUT MILLI-WATTS
				LENGTH	DIAM.		FILAMENT (OR HEATER)			PLATE	SCREEN		D C ON FIL.	A C ON FIL.								
							VOLTS	AMPERES	SUPPLY	MAX. VOLTS	MAX. VOLTS											
RCA-2A3	POWER AMPLIFIER	MEDIUM 4-PIN	FIG. 1	$5\frac{5}{8}$"	$2\frac{1}{16}$"	FILAMENT	2.5	2.5	A C or D C	250	—	250	43.0	45.0	—	60.0	—	800	5200	4.2	2500	3500
RCA-2A5	POWER AMPLIFIER	MEDIUM 6-PIN	FIG. 15A	$4\frac{11}{16}$"	$1\frac{13}{16}$"	HEATER	2.5	1.75	A C or D C	250	250	250	16.5	16.5	250	34.0	6.5	100000	2200	220	7000	3000
RCA- 10	POWER AMPLIFIER	MEDIUM 4-PIN	FIG. 1	$5\frac{5}{8}$"	$2\frac{3}{16}$"	FILAMENT	7.5	1.25	A C or D C	425	—	350 425	27.0 35.0	31.0 39.0	—	16.0 18.0	—	5150 5000	1550 1660	8.0 8.0	11000 10200	900 1600
UX - 20	POWER AMPLIFIER	SMALL 4-PIN	FIG. 1	$4\frac{1}{8}$"	$1\frac{3}{16}$"	FILAMENT	3.3	0.132	D C	135	—	90 135	16.5 22.5	—	—	3.0 6.5	—	8000 6300	415 525	3.3 3.3	9600 6500	45 110
RCA- 31	POWER AMPLIFIER	SMALL 4-PIN	FIG. 1	$4\frac{1}{4}$"	$1\frac{9}{16}$"	FILAMENT	2.0	0.130	D C	180	—	135 180	22.5 30.0	—	—	8.0 12.3	—	4100 3600	925 1050	3.8 3.8	7000 5700	185 375
RCA- 33	POWER AMPLIFIER	MEDIUM 5-PIN	FIG. 6	$4\frac{11}{16}$"	$1\frac{13}{16}$"	FILAMENT	2.0	0.26	D C	135	135	135	13.5	—	135	14.5	3.0	50000	1450	70	7000	700
RCA- 38	POWER AMPLIFIER	SMALL 5-PIN	FIG. 9A	$4\frac{17}{32}$"	$1\frac{9}{16}$"	HEATER	6.3	0.3	A C or D C	135	135	100 135	9.0 13.5	9.0 13.5	100 135	7.0 9.0	2.0 2.5	84000 102000	950 975	80 100	8500 13500	200 525
RCA- 41	POWER AMPLIFIER	SMALL 6-PIN	FIG. 15A	$4\frac{1}{4}$"	$1\frac{9}{16}$"	HEATER	6.3	0.4	A C or D C	180	180	125.0 167.5	10.0 12.5	10.0 12.5	125.0 167.5	11.0 17.0	2.0 3.0	100000 85000	1525 1800	150 150	11000 9500	650 1250
RCA- 42	POWER AMPLIFIER	MEDIUM 6-PIN	FIG. 15A	$4\frac{11}{16}$"	$1\frac{13}{16}$"	HEATER	6.3	0.7	A C or D C	250	250	250	16.5	16.5	250	34.0	6.5	100000	2200	220	7000	3000
RCA- 43	POWER AMPLIFIER	MEDIUM 6-PIN	FIG. 15A	$4\frac{11}{16}$"	$1\frac{13}{16}$"	HEATER	25.0	0.3	A C or D C	135	135	95 135	15.0 20.0	15.0 20.0	95 135	20.0 34.0	4.0 7.0	45000 35000	2000 2300	90 80	4500 4000	900 2000
RCA- 45	POWER AMPLIFIER	MEDIUM 4-PIN	FIG. 1	$5\frac{5}{8}$"	$2\frac{3}{16}$"	FILAMENT	2.5	1.5	A C or D C	275	—	180 250	30.0 48.5	31.5 50.0	—	31.0 34.0	—	1650 1610	2125 2175	3.5 3.5	2700 3900	825 1600
RCA- 46	POWER AMPLIFIER CLASS A ◘	MEDIUM 5-PIN	FIG. 7	$5\frac{5}{8}$"	$2\frac{3}{16}$"	FILAMENT	2.5	1.75	A C or D C	250	—	250	31.5	33.0	—	22.0	—	2380	2350	5.6	6400	1250
RCA- 46	POWER AMPLIFIER CLASS B ●	MEDIUM 5-PIN	FIG. 7	$5\frac{5}{8}$"	$2\frac{3}{16}$"	FILAMENT	2.5	1.75	A C or D C	400	—	300 400	0 0	0 0	Power output values are for 2 tubes operating at indicated plate-to-plate load. For other characteristics, refer to Manual text.						5200 5800	16000 20000
RCA- 47	POWER AMPLIFIER	MEDIUM 5-PIN	FIG. 6	$5\frac{5}{8}$"	$2\frac{3}{16}$"	FILAMENT	2.5	1.75	A C or D C	250	250	250	15.0	16.5	250	31.0	6.0	60000	2500	150	7000	2700
RCA- 48	POWER AMPLIFIER TETRODE	MEDIUM 6-PIN	FIG. 15	$5\frac{3}{8}$"	$2\frac{1}{16}$"	HEATER	30.0	0.4	D C	125	100	95 125	20.0 22.5	—	95 100	47.0 50.0	9.0 9.0	10000 10000	2800 2800	28 28	2000 2000	1600 2500
RCA- 49	POWER AMPLIFIER CLASS A ◘	MEDIUM 5-PIN	FIG. 7	$4\frac{11}{16}$"	$1\frac{13}{16}$"	FILAMENT	2.0	0.12	D C	135	—	135	20.0	—	—	5.7	—	4000	1125	4.5	6000	170
RCA- 49	POWER AMPLIFIER CLASS B ●	MEDIUM 5-PIN	FIG. 7	$4\frac{11}{16}$"	$1\frac{13}{16}$"	FILAMENT	2.0	0.12	D C	180	—	180	0	—	Power output values are for two tubes at indicated plate-to-plate load. For other characteristics, refer to Technical Bulletin.						12000	3500
UX - 50	POWER AMPLIFIER	MEDIUM 4-PIN	FIG. 1	$6\frac{1}{4}$"	$2\frac{11}{16}$"	FILAMENT	7.5	1.25	A C or D C	450	—	350 450	59.0 80.0	63.0 84.0	—	45.0 55.0	—	1900 1800	2000 2100	3.8 3.8	4100 4350	2400 4600
RCA- 59	POWER AMPLIFIER TRIODE ¶	MEDIUM 7-PIN	FIG. 18	$5\frac{3}{8}$"	$2\frac{1}{16}$"	HEATER	2.5	2.0	A C or D C	250	—	250	28.0	28.0	—	26.0	—	2400	2600	6.0	5000	1250
RCA- 59	POWER AMPLIFIER PENTODE ◒	MEDIUM 7-PIN	FIG. 18	$5\frac{3}{8}$"	$2\frac{1}{16}$"	HEATER	2.5	2.0	A C or D C	250	250	250	18.0	18.0	250	35.0	9.0	40000	2500	100	6000	3000
RCA- 59	POWER AMPLIFIER CLASS B ◍	MEDIUM 7-PIN	FIG. 18	$5\frac{3}{8}$"	$2\frac{1}{16}$"	HEATER	2.5	2.0	A C or D C	400	—	300 400	0	0	Power output values are for two tubes at indicated plate-to-plate load. For other characteristics, refer to Technical Bulletin.						4600 6000	15000 20000
RCA- 71-A	POWER AMPLIFIER	MEDIUM 4-PIN	FIG. 1	$4\frac{11}{16}$"	$1\frac{13}{16}$"	FILAMENT	5.0	0.25	A C or D C	180	—	135 180	27.0 40.5	29.5 43.0	—	17.3 20.0	—	1820 1750	1650 1700	3.0 3.0	3000 4800	400 790
RCA- 79	TWIN AMPLIFIER CLASS B	SMALL 6-PIN	FIG. 19	$4\frac{17}{32}$"	$1\frac{9}{16}$"	HEATER	6.3	0.6	A C or D C	180	—	180	0	0	Power output values are for two tubes at indicated plate-to-plate load. For other characteristics, refer to Technical Bulletin.						7000	5500
RCA- 89	POWER AMPLIFIER TRIODE ¶	SMALL 6-PIN	FIG. 14	$4\frac{17}{32}$"	$1\frac{9}{16}$"	HEATER	6.3	0.4	A C or D C	180	—	160 180	20.0 22.5	20.0 22.5	—	17.0 20.0	—	3000 2750	1570 1700	4.7 4.7	7000 6500	300 400
RCA- 89	POWER AMPLIFIER PENTODE ◒	SMALL 6-PIN	FIG. 14	$4\frac{17}{32}$"	$1\frac{9}{16}$"	HEATER	6.3	0.4	A C or D C	180	180	163 180	17.0 18.0	17.0 18.0	163 180	17.0 20.0	2.5 3.0	79000 82500	1575 1635	125 135	9000 8000	1250 1500
RCA- 89	POWER AMPLIFIER CLASS B ◍	SMALL 6-PIN	FIG. 14	$4\frac{17}{32}$"	$1\frac{9}{16}$"	HEATER	6.3	0.4	A C or D C	180	—	180	0	0	Power output values are for two tubes at indicated plate-to-plate load. For other characteristics, refer to Technical Bulletin.						13600 9400	2500 3500

●Two grids tied together. ◘Grid next to plate tied to plate.
◒Grid #1 is control grid. Grid #2 is screen. Grid #3 tied to cathode.

¶Grid #1 is control grid. Grids #2 and #3 tied to plate.
◍Grids #1 and #2 connected together. Grid #3 tied to plate.

RECTIFIERS

RCA-5Z3	FULL-WAVE RECTIFIER	MEDIUM 4-PIN	FIG. 2	$5\frac{3}{8}$"	$2\frac{1}{16}$"	FILAMENT	5.0	3.0	A C	Maximum A-C Voltage per Plate..........500 Volts, RMS Maximum D-C Output Current..........250 Milliamperes	
RCA-25Z5	FULL-WAVE RECTIFIER	SMALL 6-PIN	FIG. 5	$4\frac{1}{4}$"	$1\frac{9}{16}$"	HEATER	25.0	0.3	A C or D C	Maximum A-C Voltage per Plate..........125 Volts, RMS Maximum D-C Output Current..........100 Milliamperes	
RCA- 1	HALF-WAVE ◆ RECTIFIER	SMALL 4-PIN	FIG. 22	$4\frac{1}{4}$"	$1\frac{9}{16}$"	HEATER	6.3	0.3	A C or D C	Maximum A-C Voltage per Plate..........350 Volts, RMS Maximum D-C Output Current, Continuous.... 50 Milliamperes	Maximum Peak Inverse Voltage..1000 Volts Maximum Peak Plate Current...... 400 Milliamperes
RCA- 80	FULL-WAVE RECTIFIER	MEDIUM 4-PIN	FIG. 2	$5\frac{5}{8}$"	$2\frac{3}{16}$"	FILAMENT	5.0	2.0	A C	A-C Voltage per Plate (Volts RMS)........ 350 400 550 D-C Output Current (Maximum MA.).... 125 110 135	The 550 volt rating applies to filter circuits having an input choke of at least 20 henries.
UX - 81	HALF-WAVE RECTIFIER	MEDIUM 4-PIN	FIG. 3	$6\frac{1}{4}$"	$2\frac{7}{16}$"	FILAMENT	7.5	1.25	A C	Maximum A-C Plate Voltage..........700 Volts, RMS Maximum D-C Output Current.......... 85 Milliamperes	For d-c output voltage delivered to filter of typical rectifier circuit refer to curves in Manual.
RCA- 82	FULL-WAVE ◆ RECTIFIER	MEDIUM 4-PIN	FIG. 2	$4\frac{11}{16}$"	$1\frac{13}{16}$"	FILAMENT	2.5	3.0	A C	Maximum A-C Voltage per Plate..........500 Volts, RMS Maximum D-C Output Current, Continuous....125 Milliamperes	Maximum Peak Inverse Voltage....1400 Volts Maximum Peak Plate Current...... 400 Milliamperes
RCA- 83	FULL-WAVE ◆ RECTIFIER	MEDIUM 4-PIN	FIG. 2	$5\frac{3}{8}$"	$2\frac{1}{16}$"	FILAMENT	5.0	3.0	A C	Maximum A-C Voltage Per Plate..........500 Volts, RMS Maximum D-C Output Current, Continuous....250 Milliamperes	Maximum Peak Inverse Voltage ...1400 Volts Maximum Peak Plate Current..........800 Milliamperes
RCA- 84	FULL-WAVE RECTIFIER	SMALL 5-PIN	FIG. 23	$4\frac{1}{4}$"	$1\frac{9}{16}$"	HEATER	6.3	0.5	A C or D C	Maximum A-C Voltage per Plate..........350 Volts, RMS Maximum D-C Output Current.......... 50 Milliamperes	
RCA-866	HALF-WAVE ◆ RECTIFIER	MEDIUM 4-PIN	FIG. 16	$6\frac{5}{8}$"	$2\frac{7}{16}$"	FILAMENT	2.5	5.0	A C	Maximum Peak Inverse Voltage..........7500 Volts Maximum Peak Plate Current.......... 0.6 Ampere	For additional information refer to Technical Bulletin.

◆ Mercury Vapor Type. Tube Voltage drop is 15 volts, approx.

PHOTOTUBES

RCA-868	PHOTOTUBE	SMALL 4-PIN	FIG. 1 See Note →	$4\frac{1}{8}$"	$1\frac{3}{16}$"	Max. Anode Supply Voltage..........90 Volts Max. Anode Current..........20 Microamperes. Static Sensivity....55 Microamperes per Lumen. Dynamic Sensitivity..........50 and 48 Microamperes per Lumen at 1000 and 5000 Cycles per second, Respectively. Note: Pins #1 and #3—No Connection, Pin #2—Anode (+), Pin #4—Cathode (−). Refer to FIG. 1 for Pin Numbers.

The first digits of many type numbers have been dropped. These types are identified now by the last two digits only.

TUBE SYMBOLS AND BOTTOM VIEWS OF SOCKET CONNECTIONS

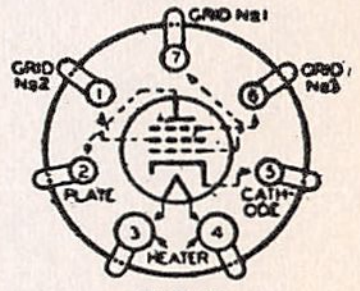

FIG.18

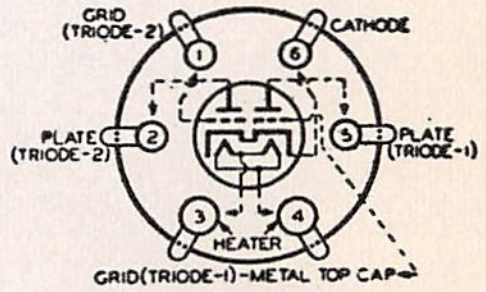

FIG.19

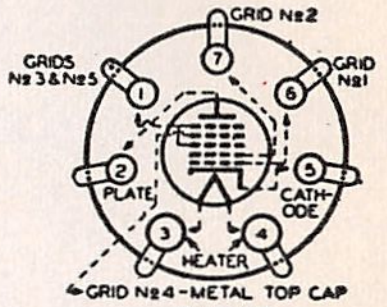

FIG.20

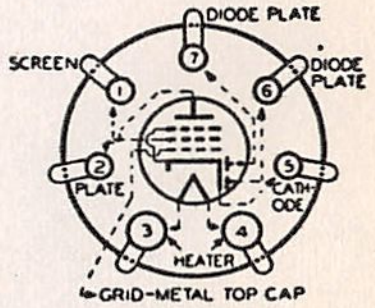

FIG.21

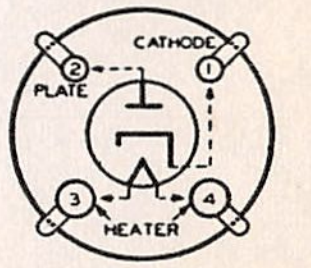

FIG.22

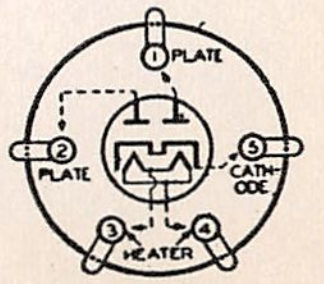

FIG.23

RADIO RECEPTOR CO.

MODEL PMA-1
MODEL P-50-W

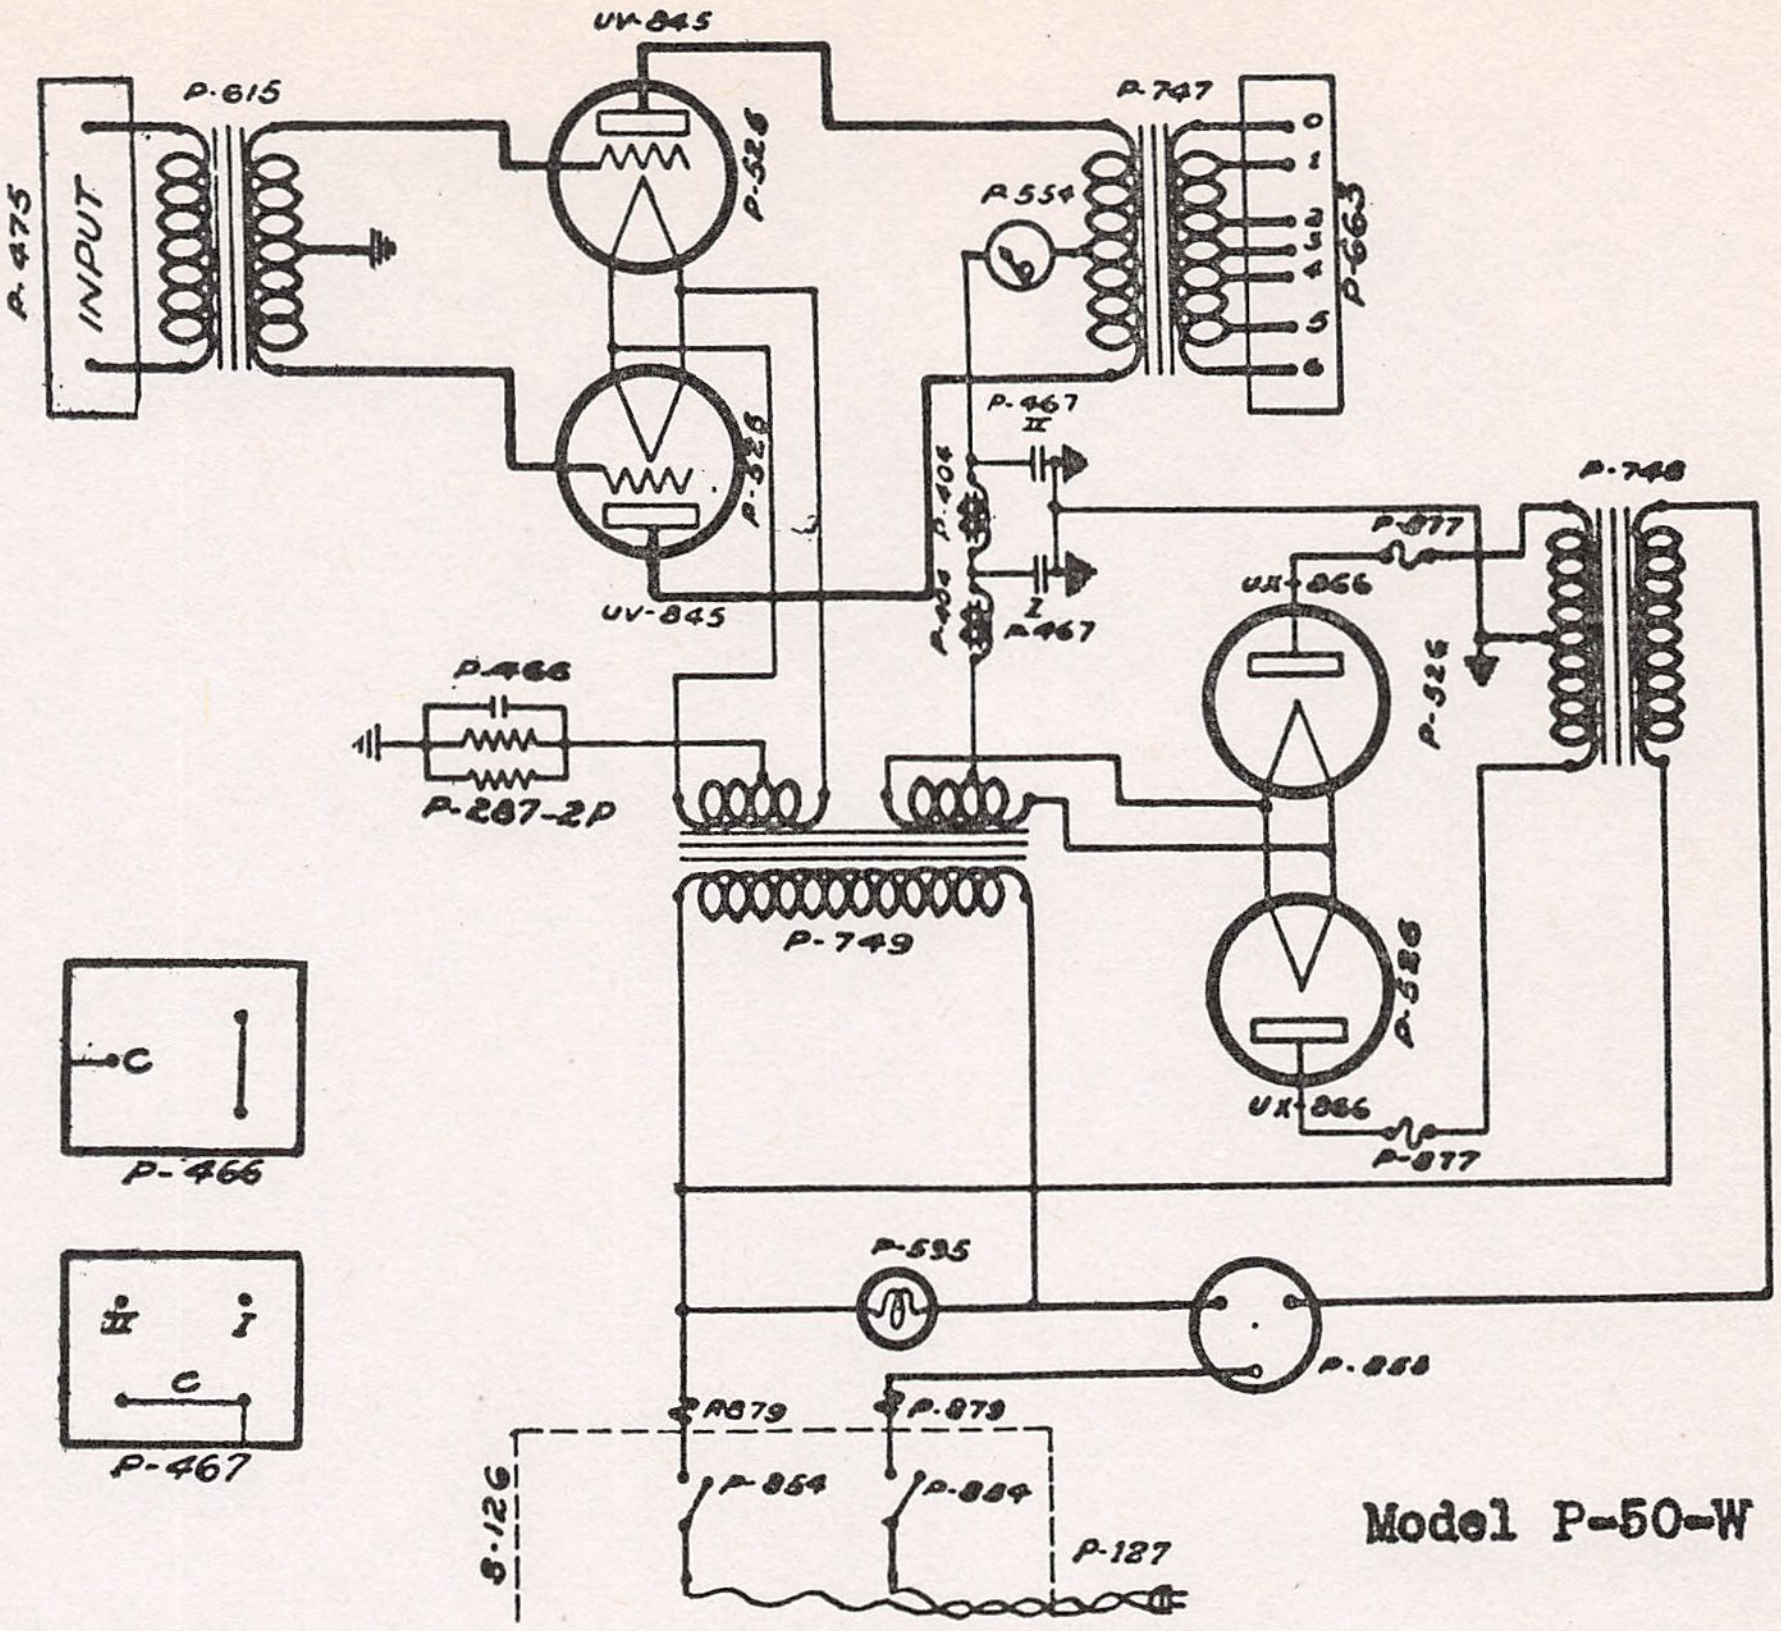
UV-845
P-615
P-475
INPUT
P-326
P-747
P-554
0
1
2
3
4
5
6
P-663
P-467 II
P-404
P-467 I
UV-845
P-326
P-748
P-877
UX-866
P-326
P-466
P-287-2P
P-749
C
P-466
II
I
C
P-467
UX-866
P-877
P-595
P-858
P-879
P-879
P-864
P-884
B-126
P-127

Model P-50-W

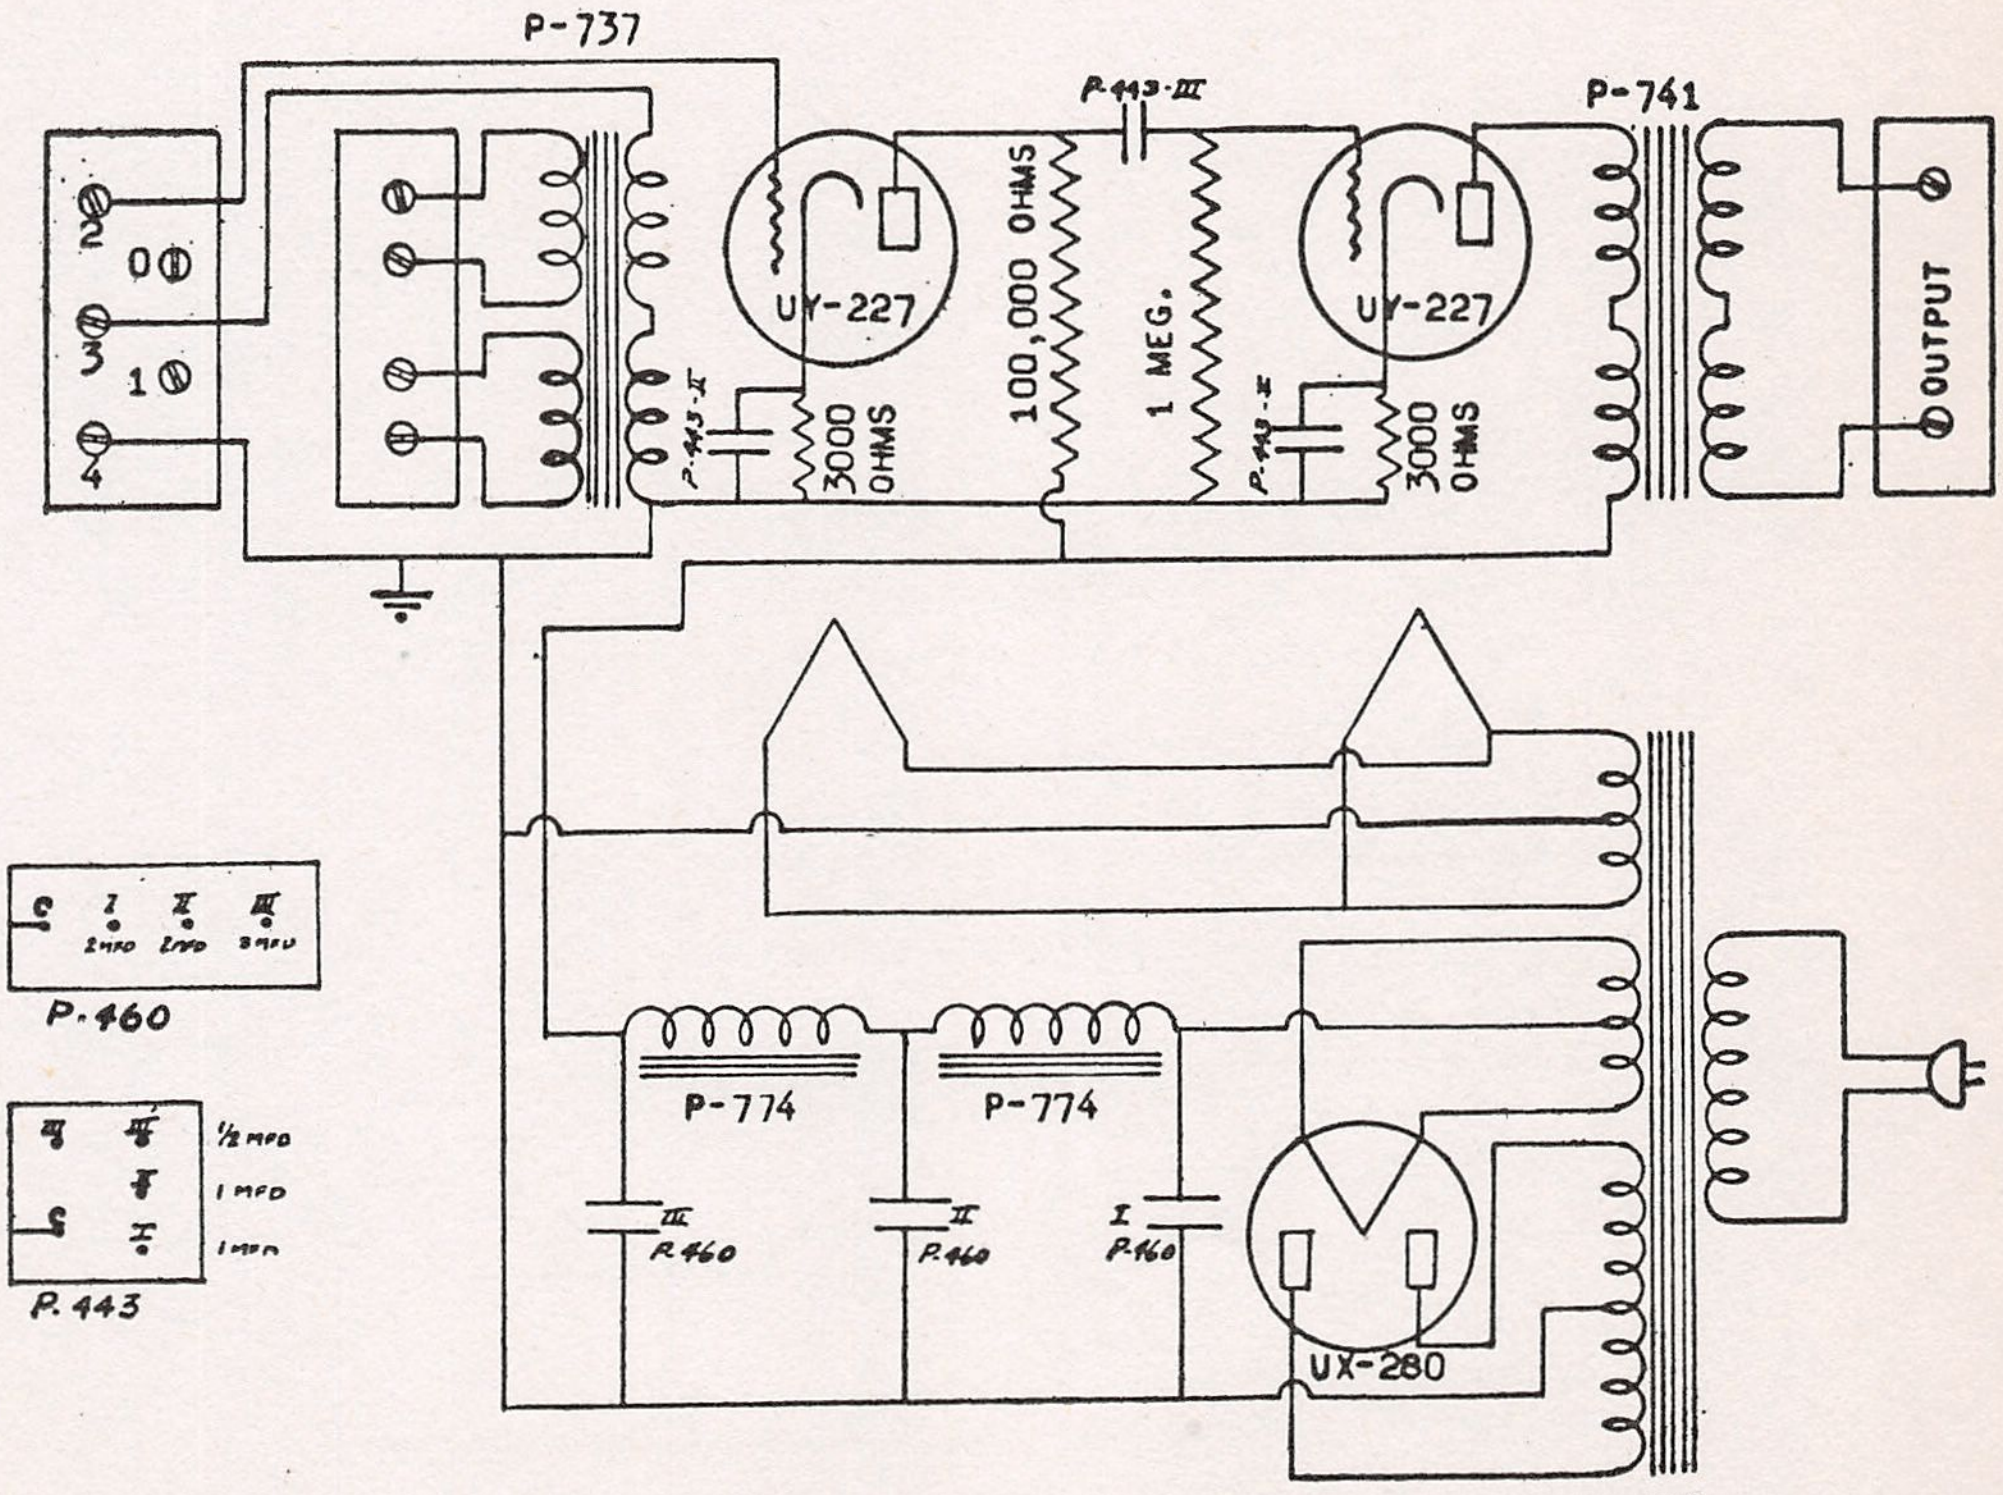
P-737
2
0
3
1
4
UY-227
P-443-II
3000 OHMS
P-443-III
100,000 OHMS
1 MEG.
P-443-II
UY-227
3000 OHMS
P-741
OUTPUT
C
I
II
III
2 MFD
2 MFD
3 MFD
P-460
III
III
II
C
I
1/2 MFD
1 MFD
1 MFD
P. 443
P-774
P-774
III P.460
II P.460
I P.460
UX-280
P-726

Model PMA-1

RAD OLEK

MODEL Monroe-Marvelo 30
MODEL Marvelo "6" Midget
MODEL Radolek 5 Tube Super

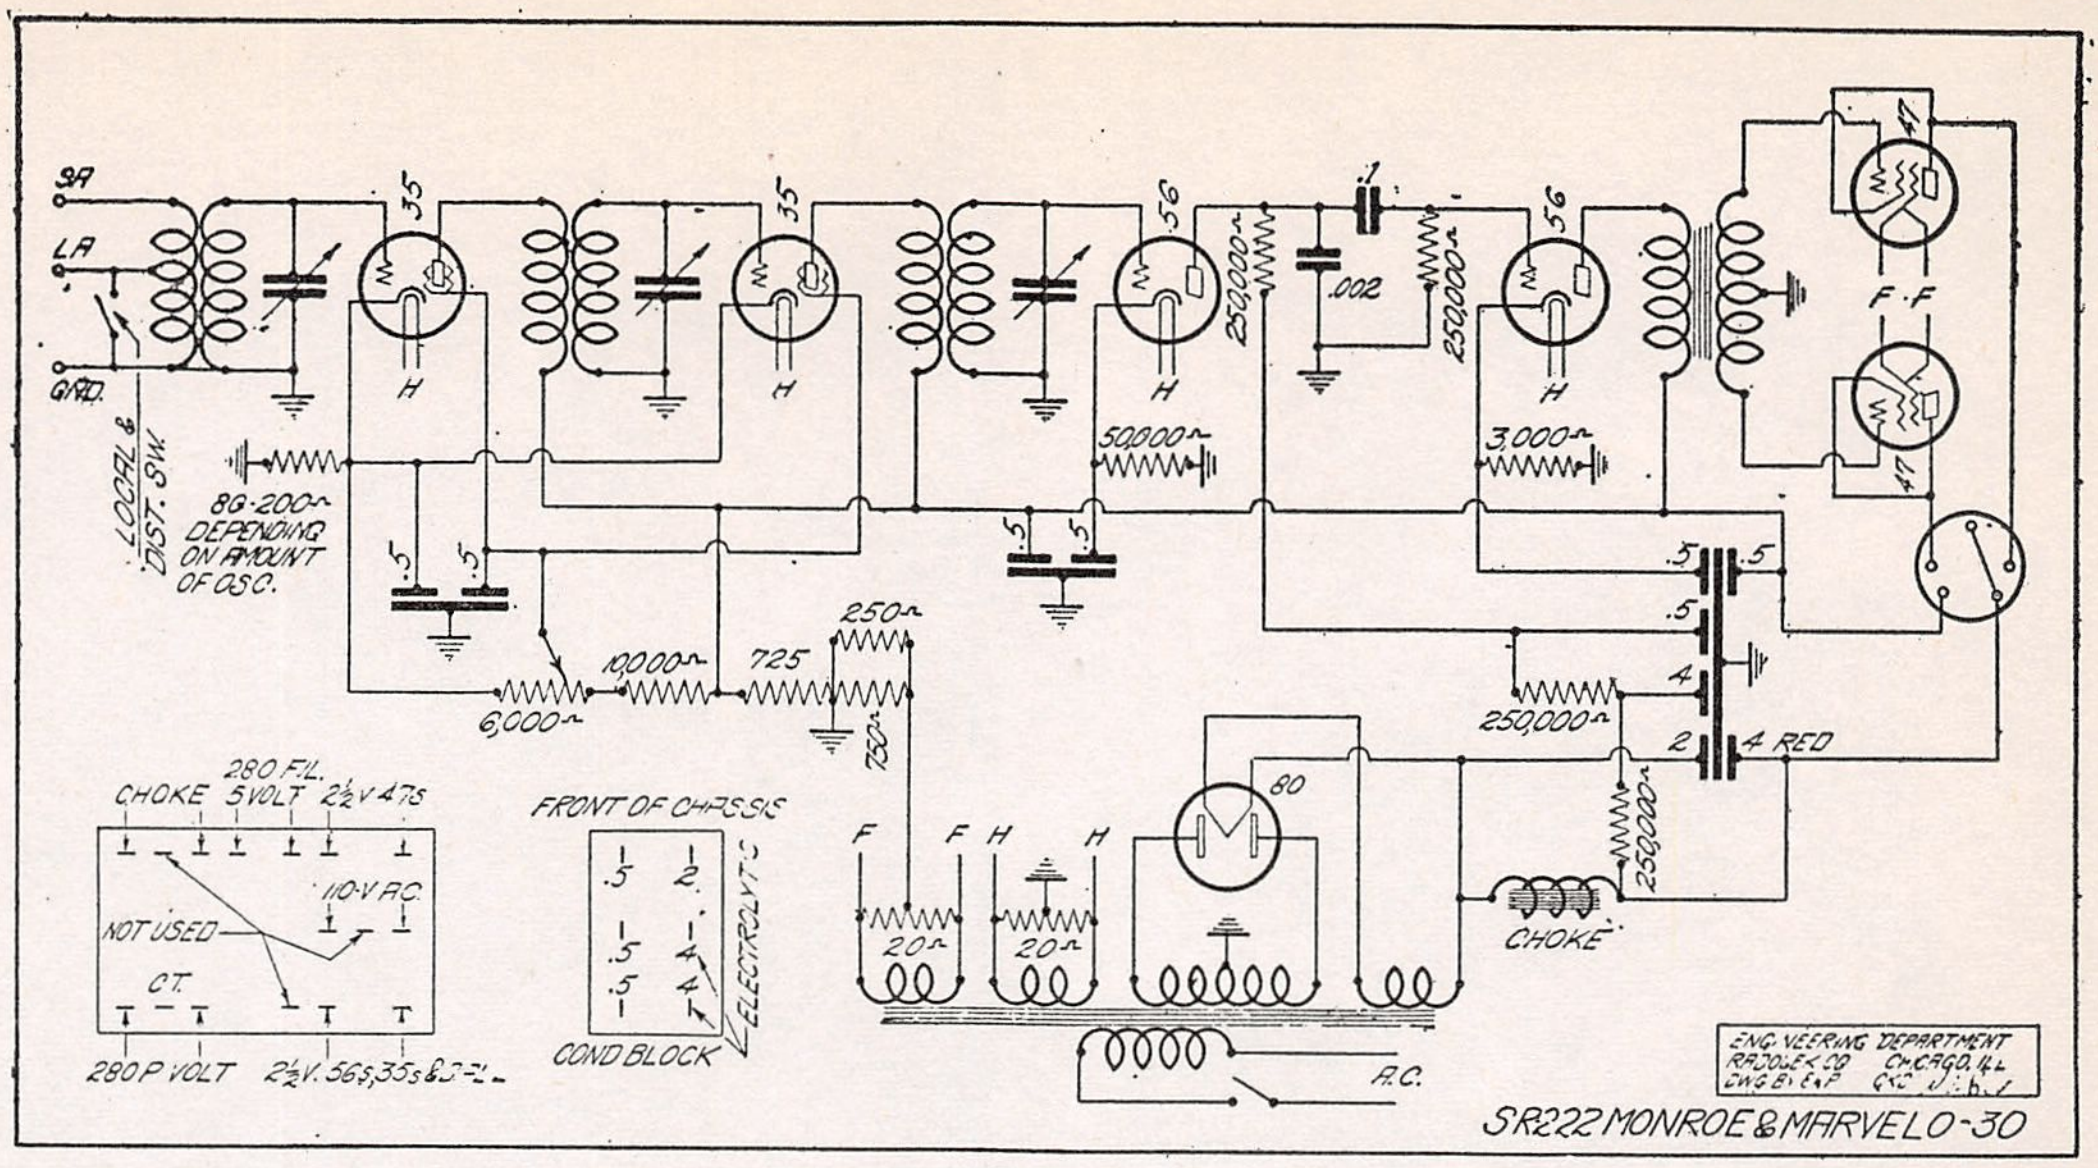
SA
LA
GND.
LOCAL & DIST. SW.
35
35
56
56
47
47
F·F
H
.1
.002
250,000
250,000
50,000
3,000
8G-200 DEPENDING ON AMOUNT OF OSC.
.5
.5
.5
.5
.5
4
2
4 RED
250,000
250,000
6,000
10,000
725
250
750
80
F
F
H
H
20
20
CHOKE
A.C.
CHOKE
280 FIL. 5 VOLT
2½ V 47s
110-V A.C.
NOT USED
C.T.
280 P VOLT
2½ V. 56s, 35s & DFL
FRONT OF CHASSIS
ELECTROLYTIC
COND BLOCK
ENGINEERING DEPARTMENT RADOLEK CO CHICAGO, ILL DWG BY E&P CKD

SR222 MONROE & MARVELO-30

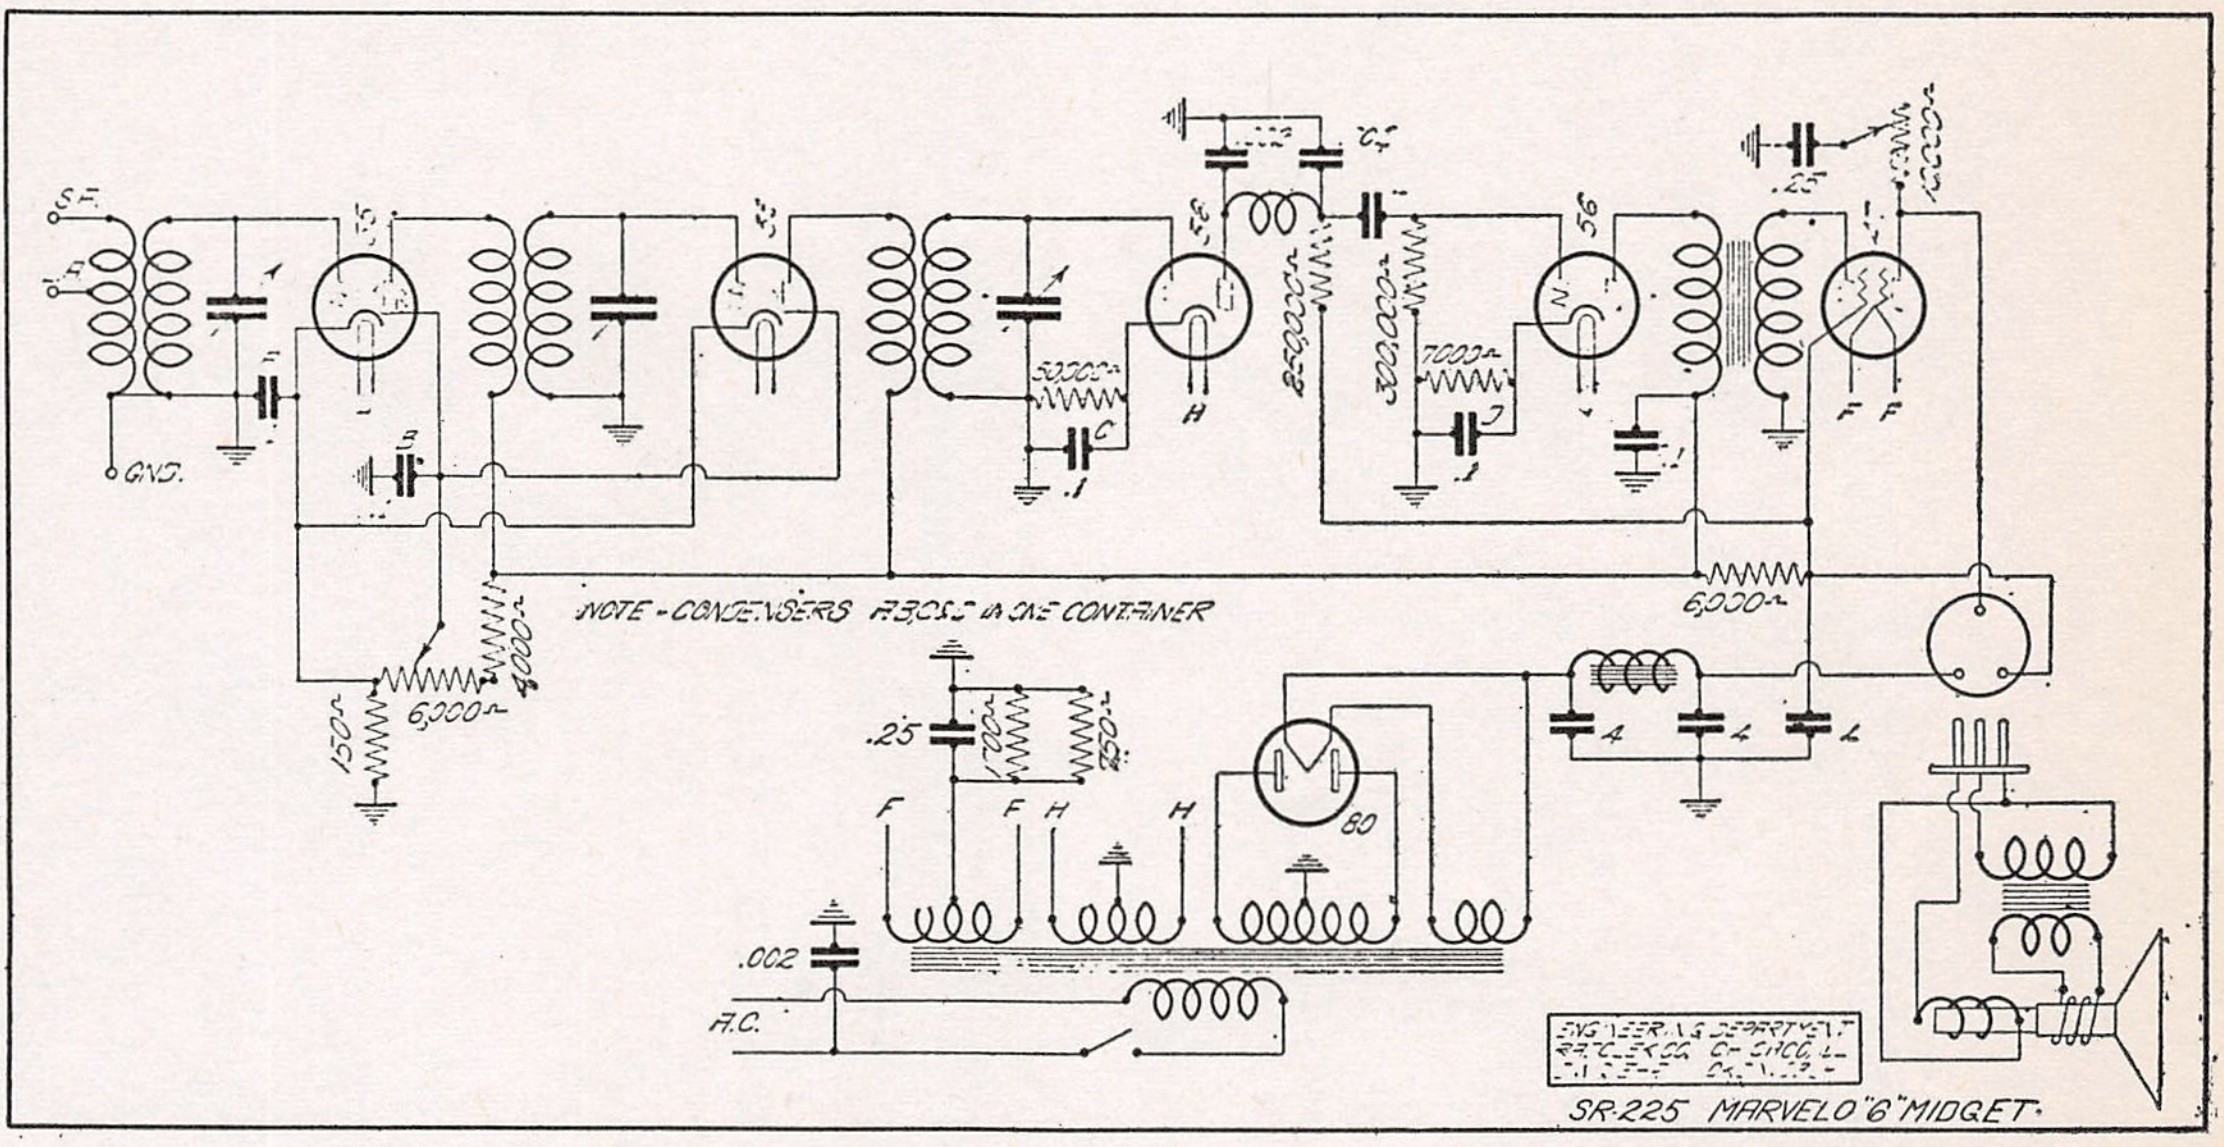
S.F.
GND.
35
35
58
56
47
F
F
.25
50,000
.1
250,000
300,000
7,000
.1
.1
6,000
150
6,000
4,000
NOTE - CONDENSERS ABOVE IN ONE CONTAINER
.25
.4
.4
.4
80
F
F
H
H
.002
A.C.
ENGINEERING DEPARTMENT RADOLEK CO. CHICAGO, ILL

SR-225 MARVELO "6" MIDGET

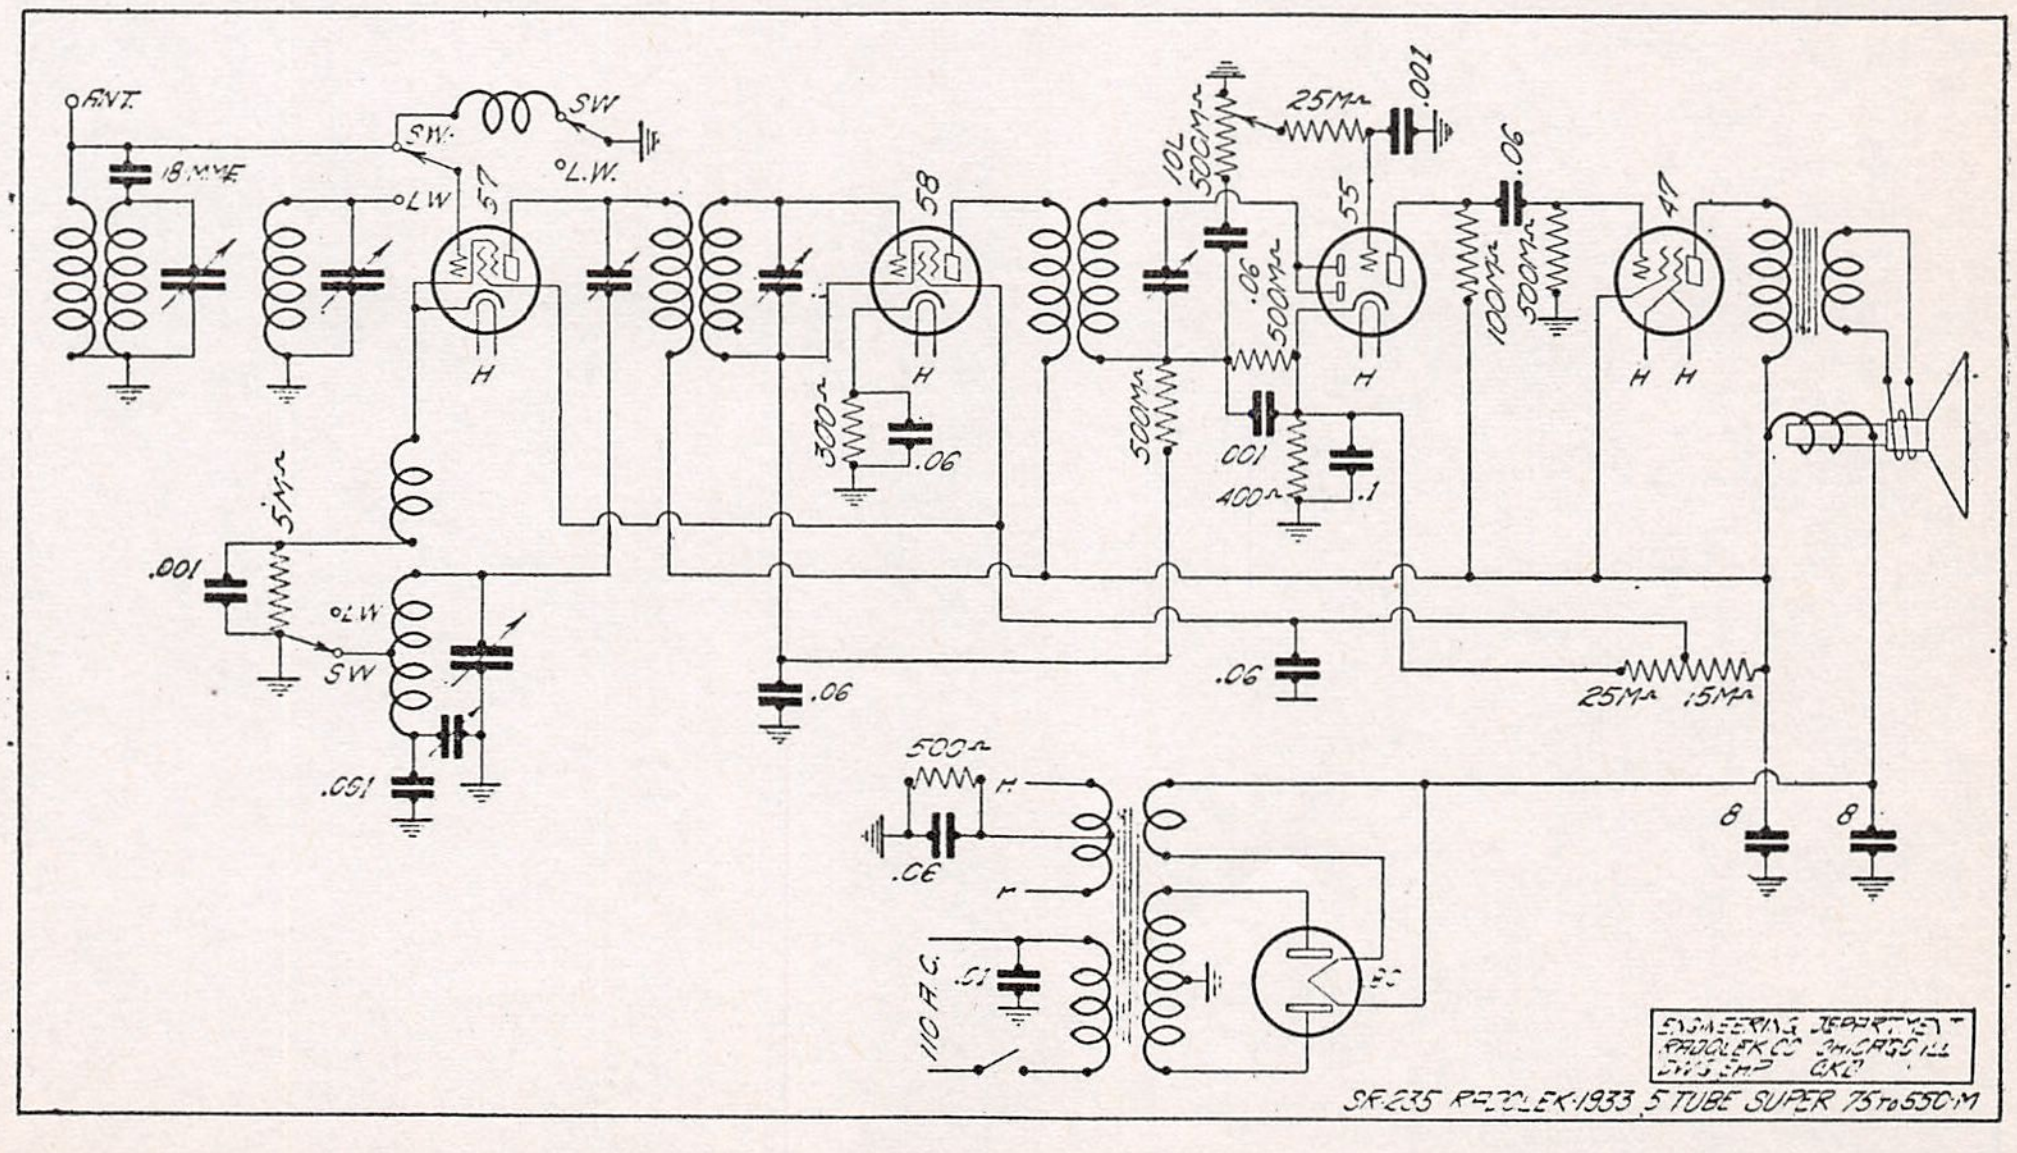
ANT.
18 MMF
SW
SW
L.W.
LW
57
58
55
47
H
H
H
H
10L 500M
25M
.001
.06
.06
500M
100M
500M
300
.06
500M
.001
400
.1
.001
5M
LW
SW
.001
.06
.06
25M
15M
500
.06
110 A.C.
.01
8
8
80
ENGINEERING DEPARTMENT RADOLEK CO CHICAGO ILL DWG E&P CKD

SR-235 RADOLEK-1933 5 TUBE SUPER 75 to 550 M

READRITE METER WORKS

MODEL 400 Tube Tester
MODEL 405 Tube Checker

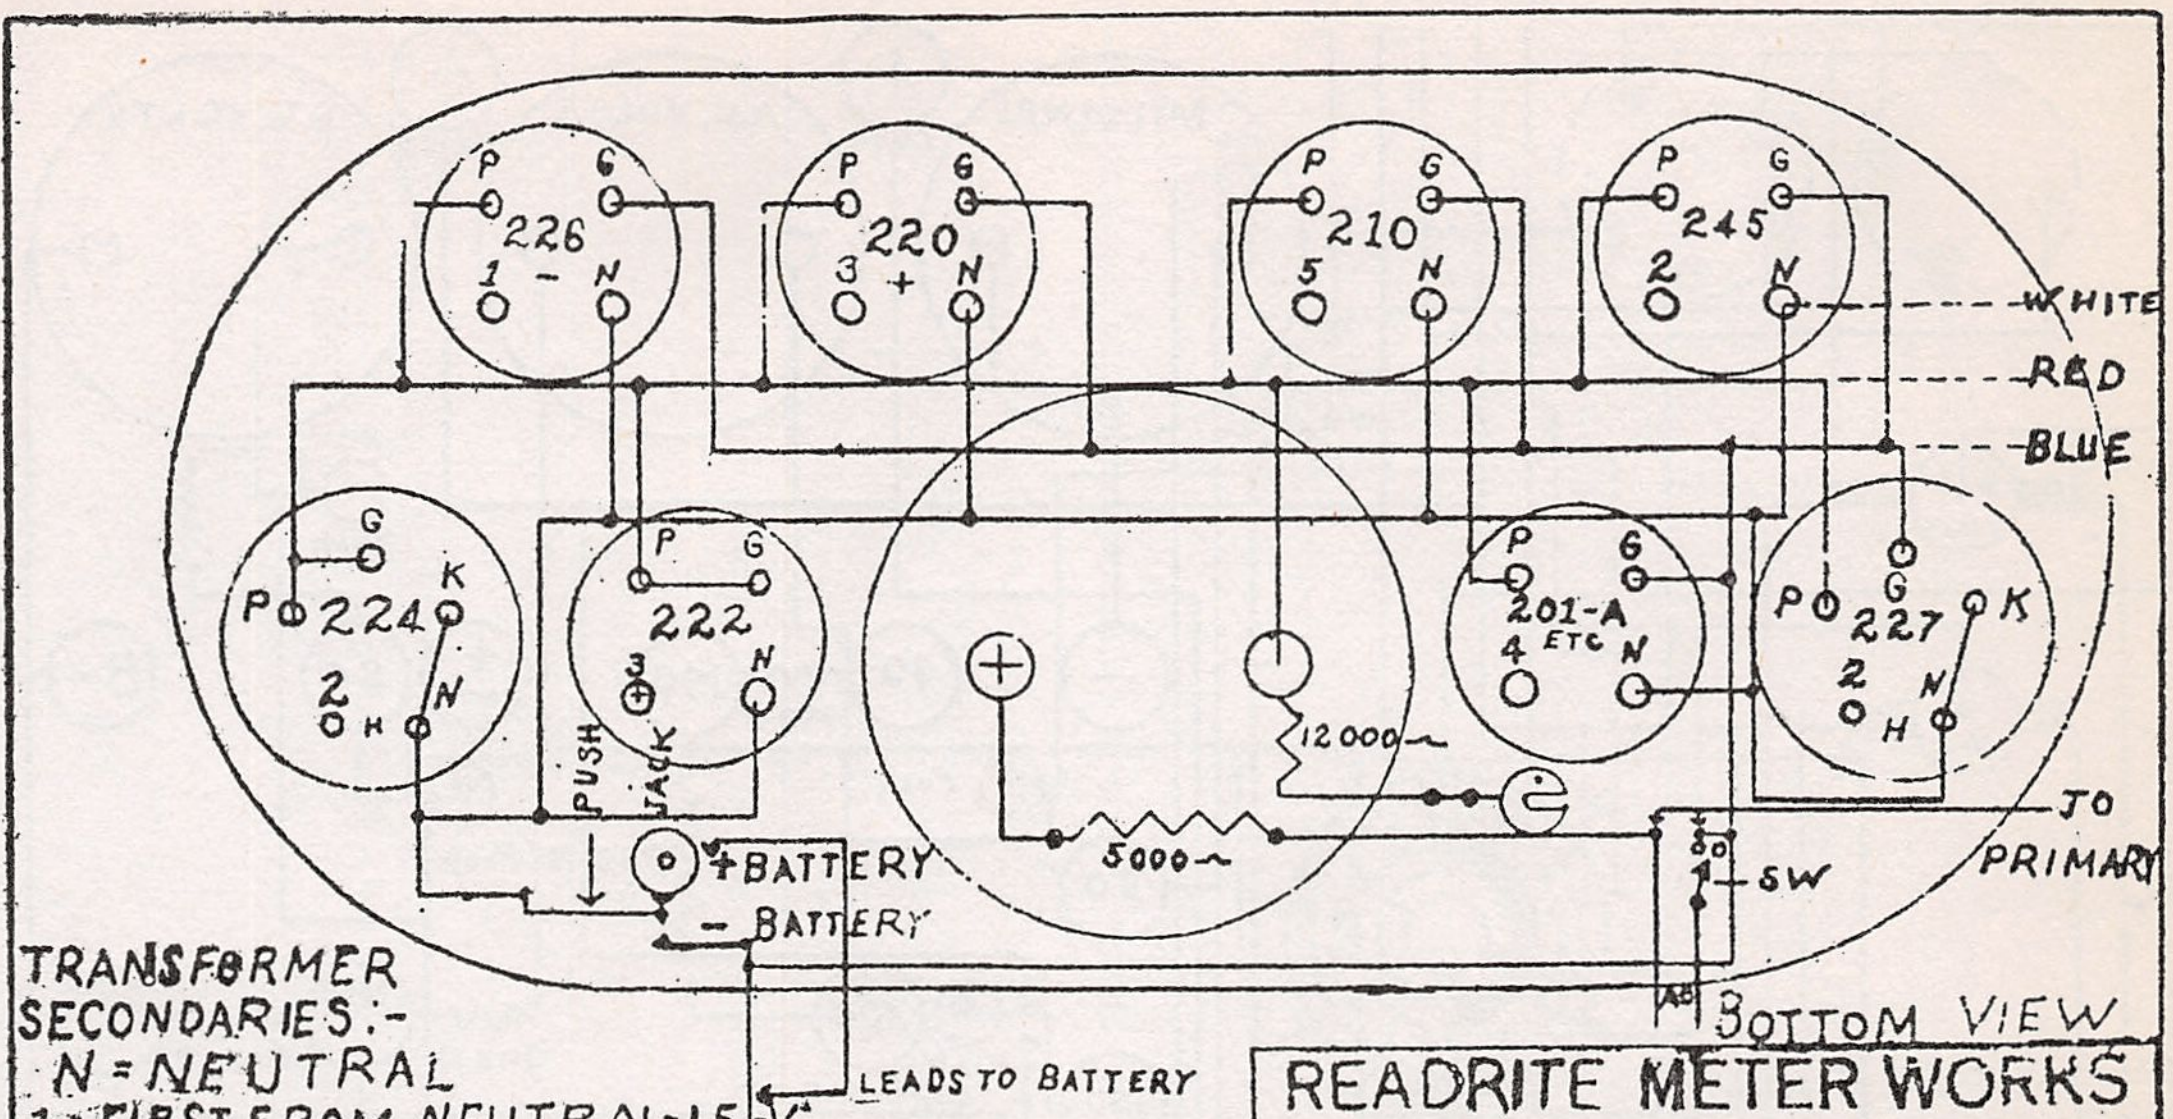
P G 226 1 − N
P G 220 3 + N
P G 210 5 N
P G 245 2 N
WHITE
RED
BLUE
G P 224 K 2 H N
P G 222 3 + N
PUSH JACK
P G 201-A 4 ETC N
P G 227 K 2 H N
12000~
5000~
+BATTERY
− BATTERY
TO PRIMARY
80
1
SW
AC
LEADS TO BATTERY
-V
-V
-V
-V
-V

BOTTOM VIEW

TRANSFORMER
SECONDARIES:-
N = NEUTRAL
1 = FIRST FROM NEUTRAL -1.5
2 = SECOND " " -2.5
3 = THIRD " " -3.3
4 = FOURTH " " -5
5 = FIFTH " " -7.5-V
TO TEST BATTERY:-
CONNECT { S-G WIRE TO CENTER 226 SOCKET
NEG.(-) FIL. TO CENTER 220 SOCKET

READRITE METER WORKS
BLUFFTON, OHIO
TITLE WIRING DIAGRAM
FOR #400 TUBE TESTER
MAT NO. REQ. FILE NO.
PART NO. DWG. NO. 122
DATE DRAWN BY N.A.T. CHECKED BY

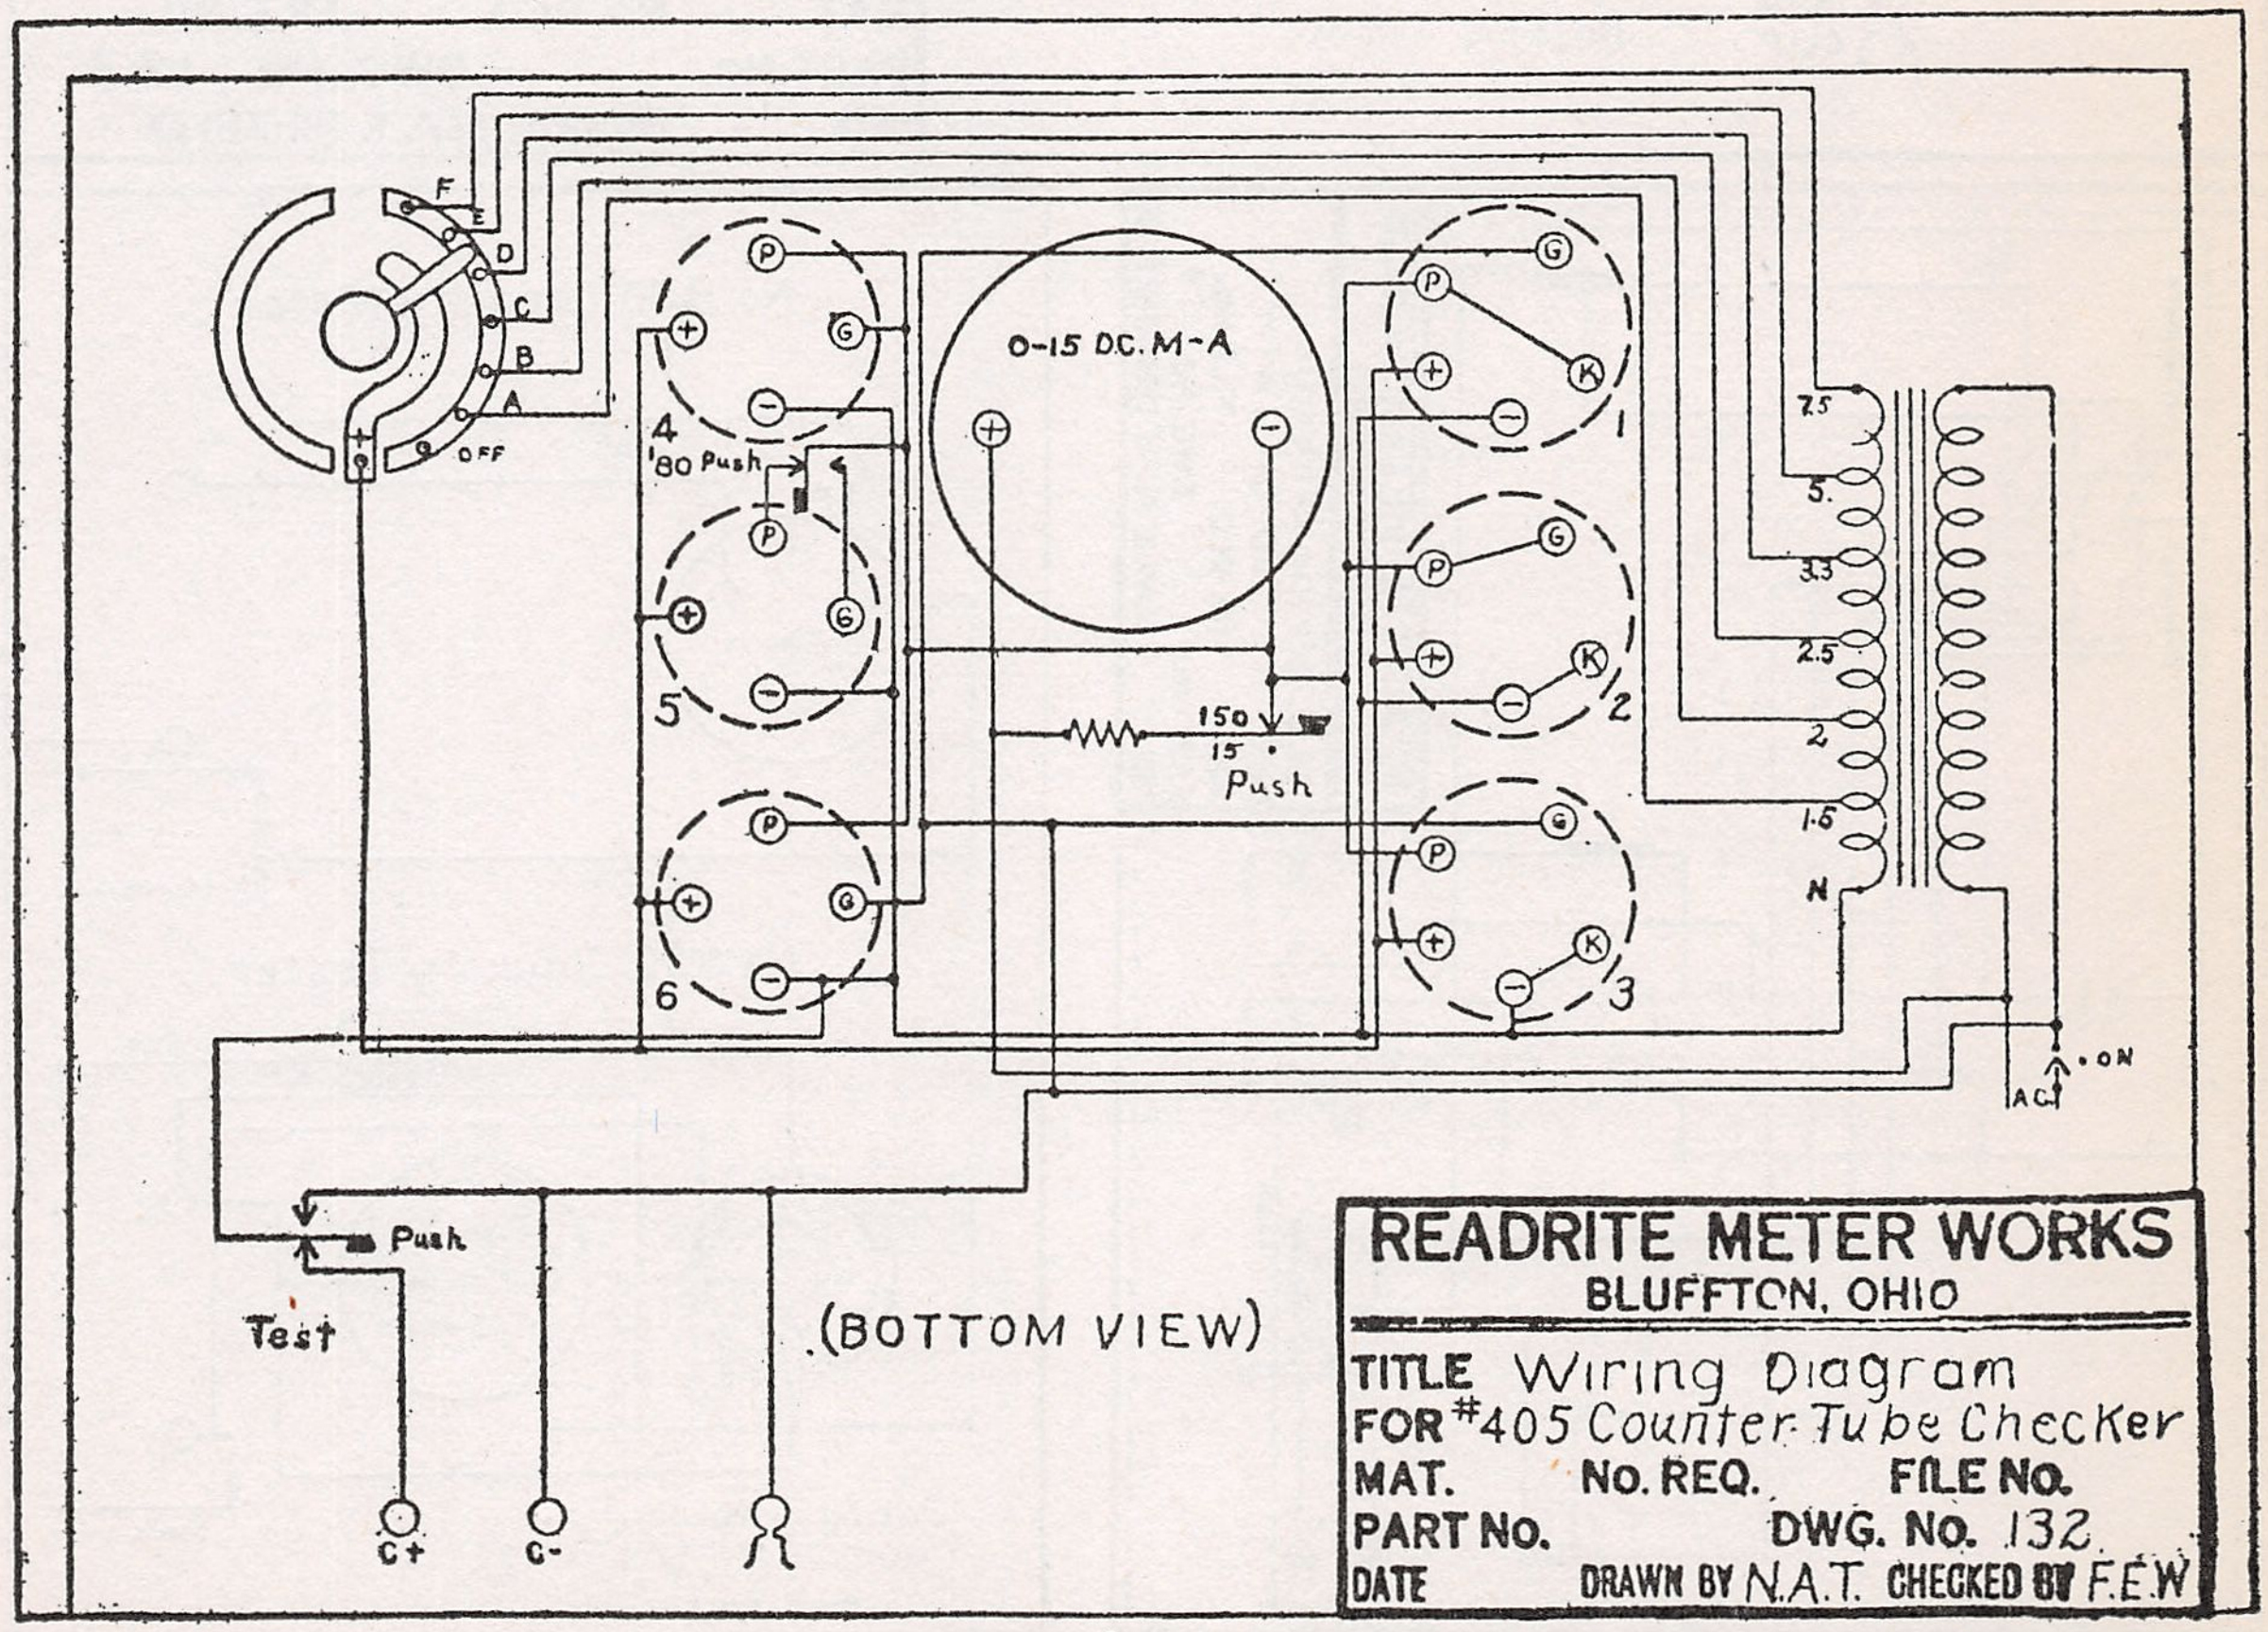
F
E
D
C
B
A
OFF
+
P
G
+
−
4
'80 Push
P
G
+
−
5
P
G
+
−
6
0-15 DC. M-A
+
−
150
15
Push
P G + K − 1
P G + K − 2
P G + K − 3
7.5
5.
3.3
2.5
2
1.5
N
AC ON
Push
Test
C+
C-

(BOTTOM VIEW)

READRITE METER WORKS
BLUFFTON, OHIO
TITLE Wiring Diagram
FOR #405 Counter Tube Checker
MAT. NO. REQ. FILE NO.
PART NO. DWG. NO. 132
DATE DRAWN BY N.A.T. CHECKED BY F.E.W.

MODEL 600,700 Testers
MODEL 550 Oscillator
MODEL 800 Capacity Meter
MODEL 850 Capacity Tester

READRITE METER WORKS

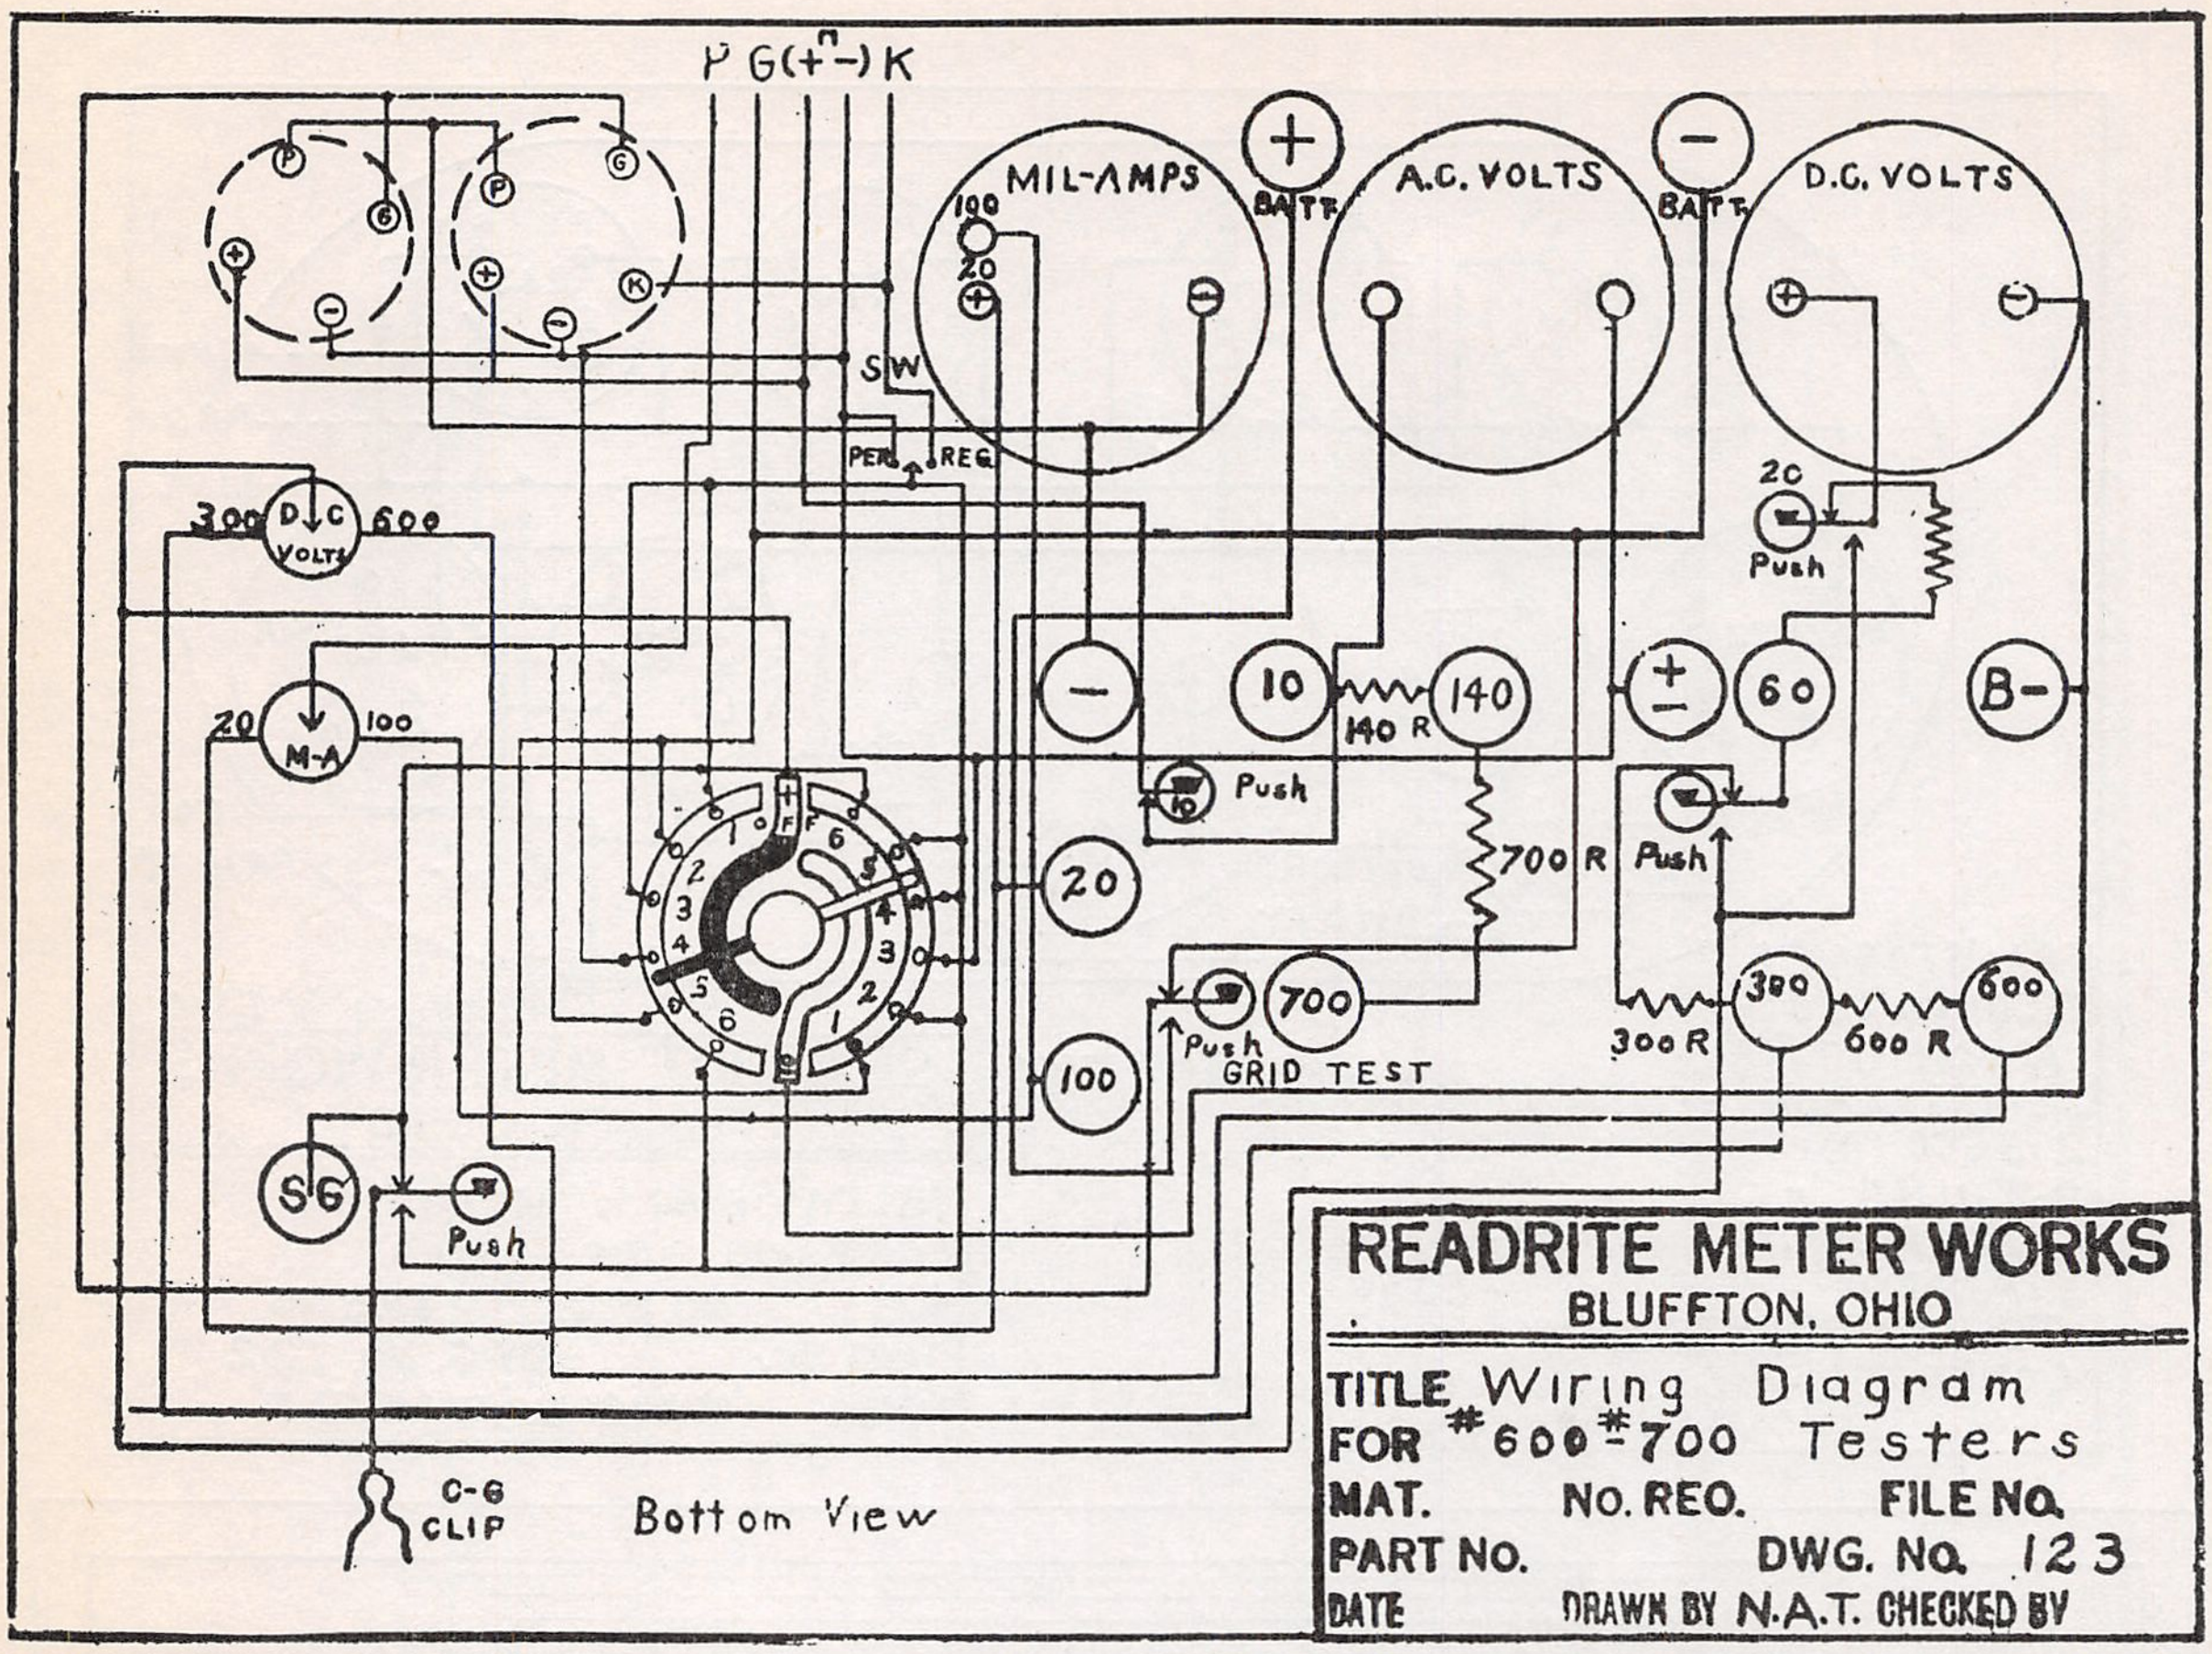
P G(F+-)K
MIL-AMPS
100
20
+
−
BATT.
A.C. VOLTS
BATT.
D.C. VOLTS
P
G
+
−
P
G
+
K
−
SW
PER.
REG.
300
D.C VOLTS
600
20
M-A
100
−
10
140 R
140
+−
60
B−
20
Push
Push
Push
700 R
20
100
Push
GRID TEST
700
300
300 R
600 R
600
SG
Push
C-G CLIP
Bottom View
READRITE METER WORKS
BLUFFTON, OHIO
TITLE Wiring Diagram
FOR #600-#700 Testers
MAT. NO. REQ. FILE NO.
PART NO. DWG. NO. 123
DATE DRAWN BY N.A.T. CHECKED BY

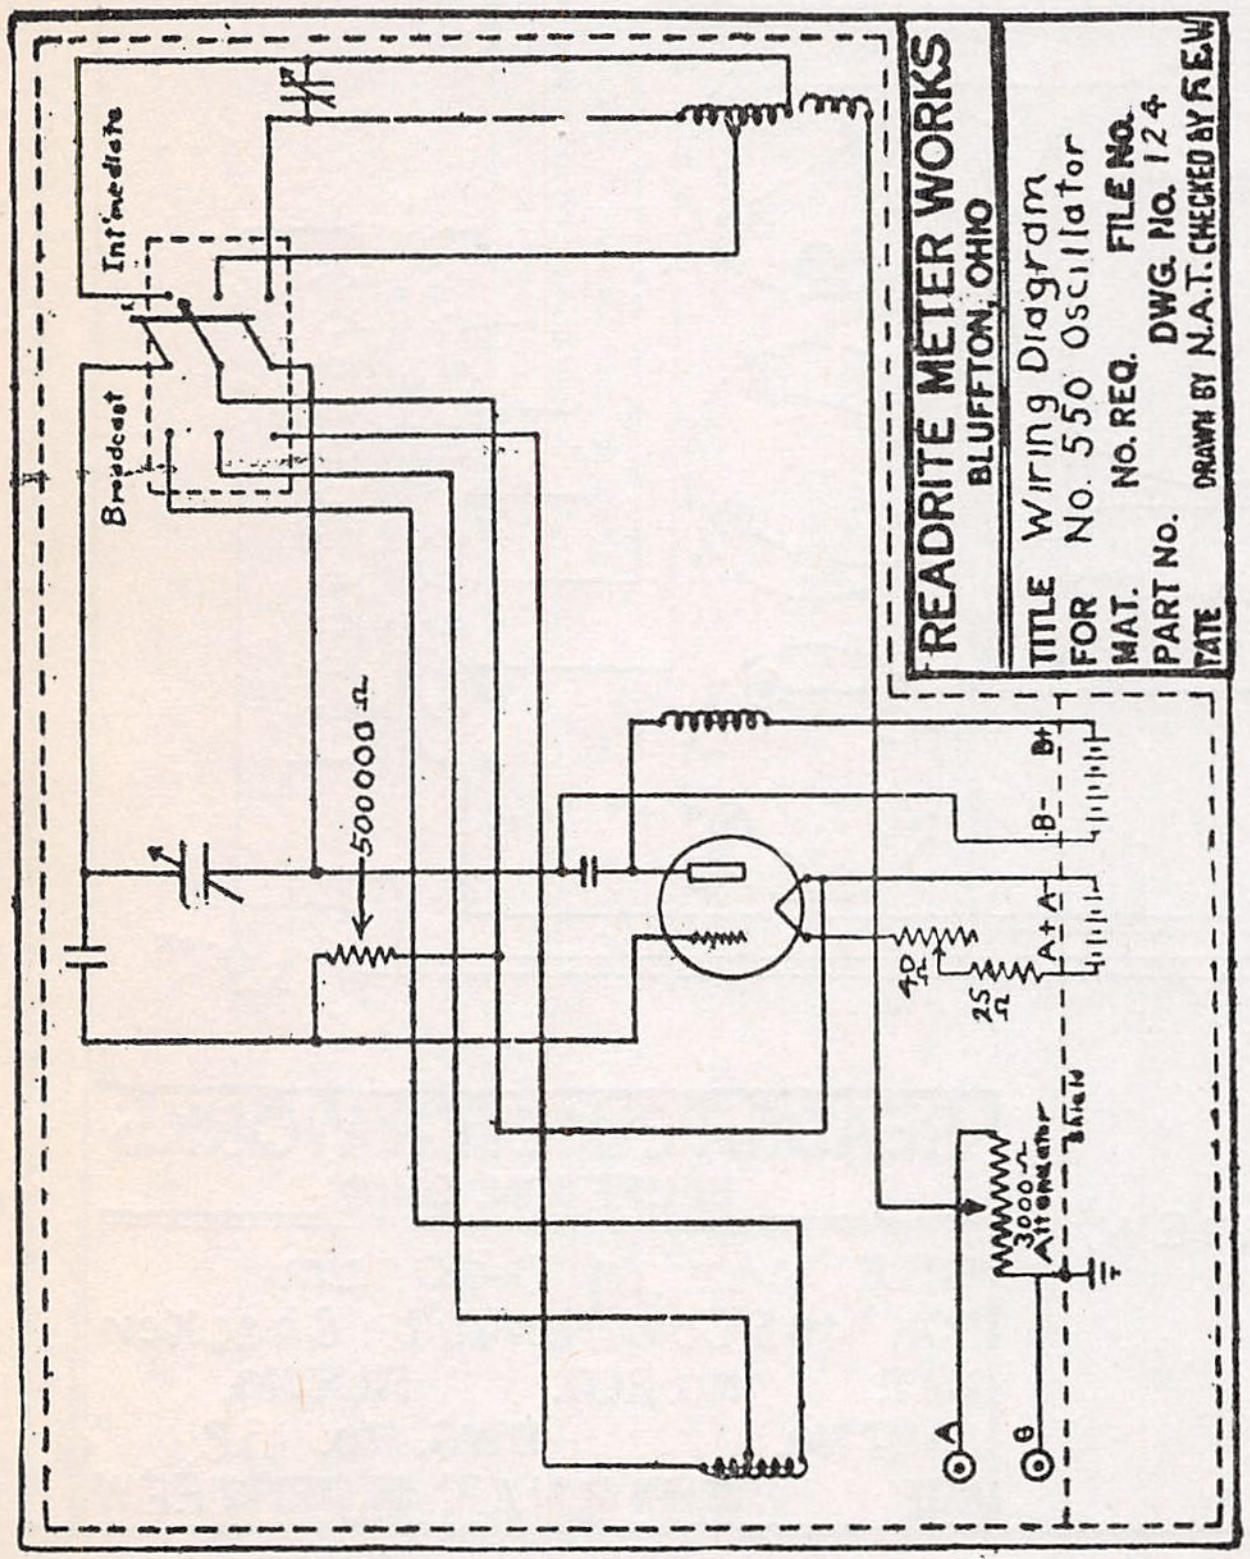
Intermediate
Broadcast
500000 Ω
B+
B-
A+
A-
40 Ω
25 Ω
3000 Ω Attenuator
Shield
A
B
READRITE METER WORKS
BLUFFTON, OHIO
TITLE Wiring Diagram
FOR No. 550 Oscillator
MAT. No. REQ. FILE No.
PART No. DWG. No. 124
TATE DRAWN BY N.A.T. CHECKED BY R.E.W.

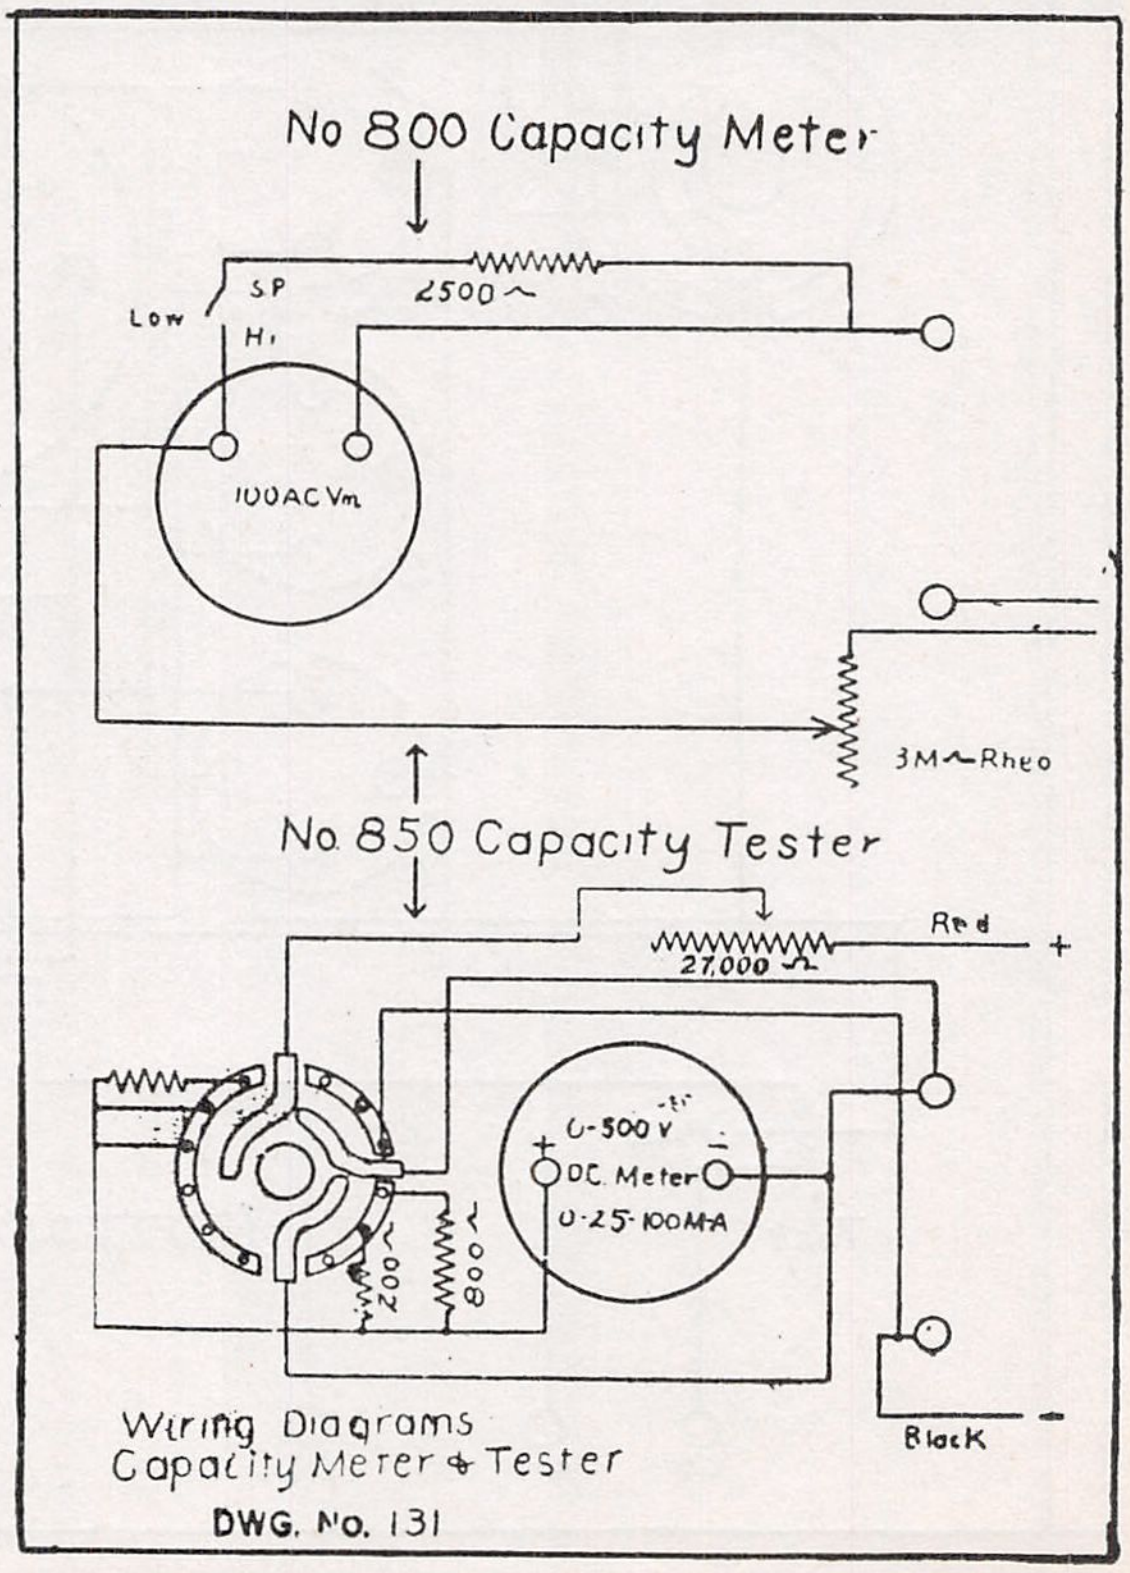
No 800 Capacity Meter
Low
SP
Hi
2500 ~
100 AC Vm
3M~Rheo
No. 850 Capacity Tester
Red
27,000 ~
+
+
0-500 V
DC Meter
0-25-100 MA
200~
800~
Black
−
Wiring Diagrams
Capacity Meter & Tester
DWG. No. 131

MODEL 1927 Infradyne
MODEL 1928 Infradyne
MODEL Remler 40 KC.

REMLER COMPANY, LTD.

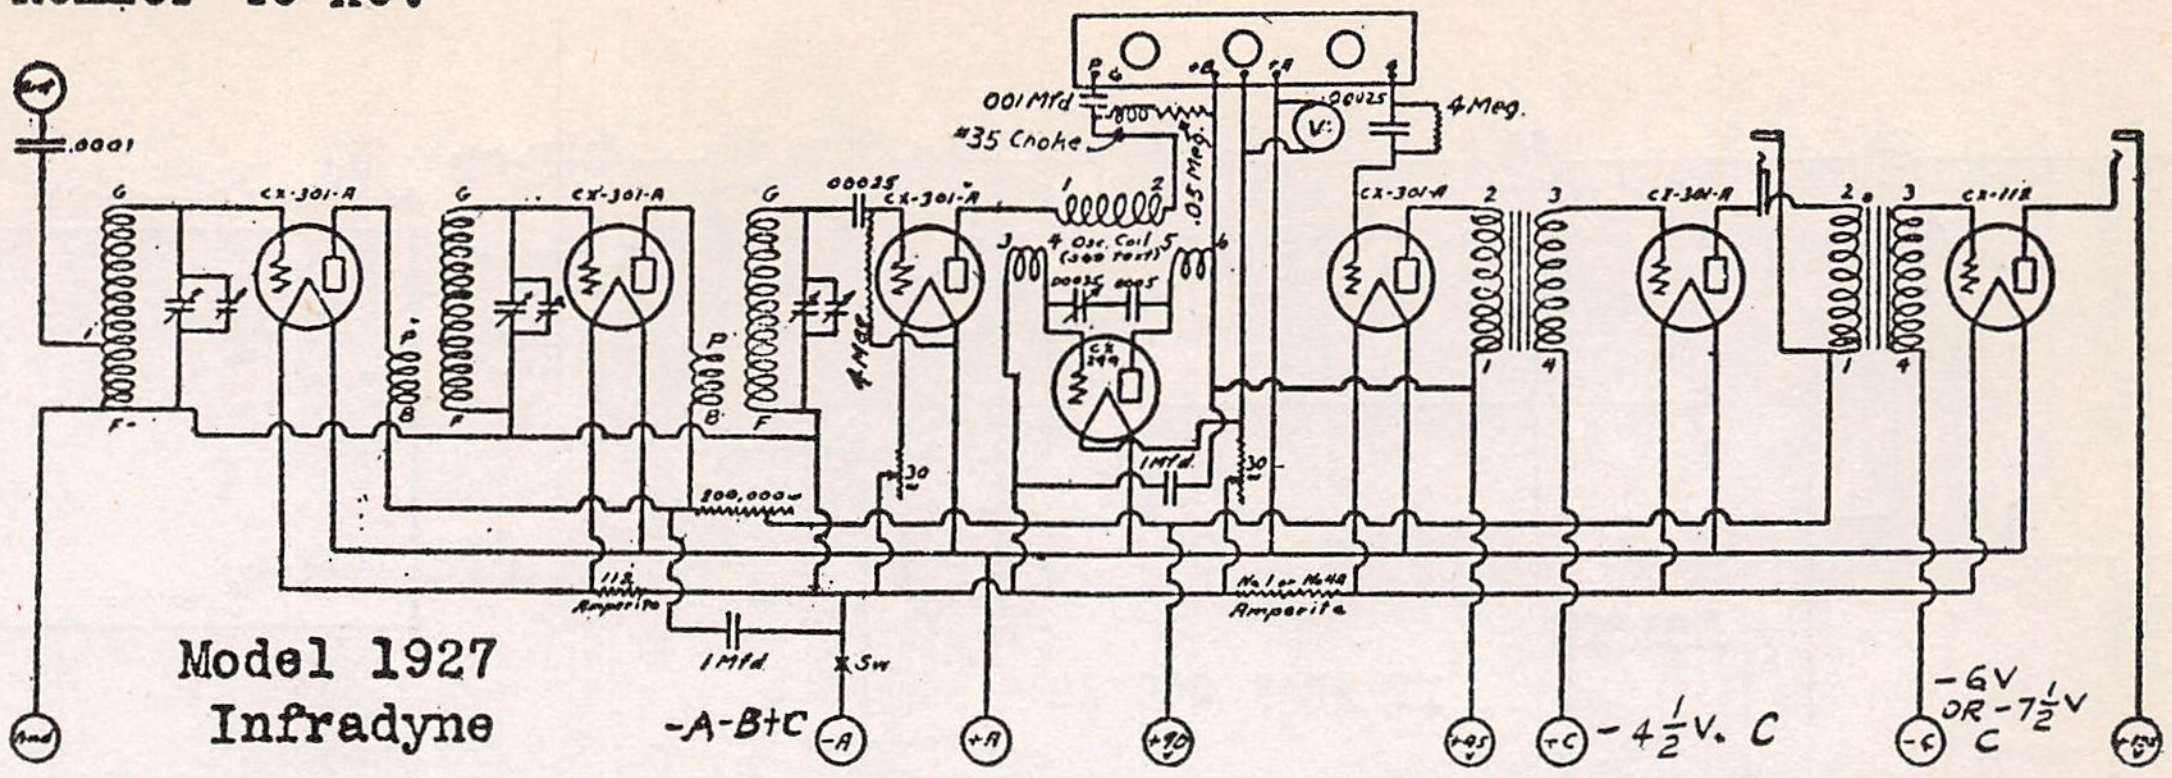
.0001
CX-301-A
CX-301-A
CX-301-A
CX-301-A
CX-301-A
CX-112
.00025
.001 Mfd
#35 Choke
.00025
4 Meg.
.05 Meg.
4 Meg.
Osc Coil
300,000 ω
112 Amperite
No.1 or No.1A Amperite
1 Mfd
1 Mfd
Sw
-A-B+C
-A
+A
+90
+135
+C
-4 1/2 V. C
-C
-6V OR -7 1/2 V C
+B

Model 1927 Infradyne

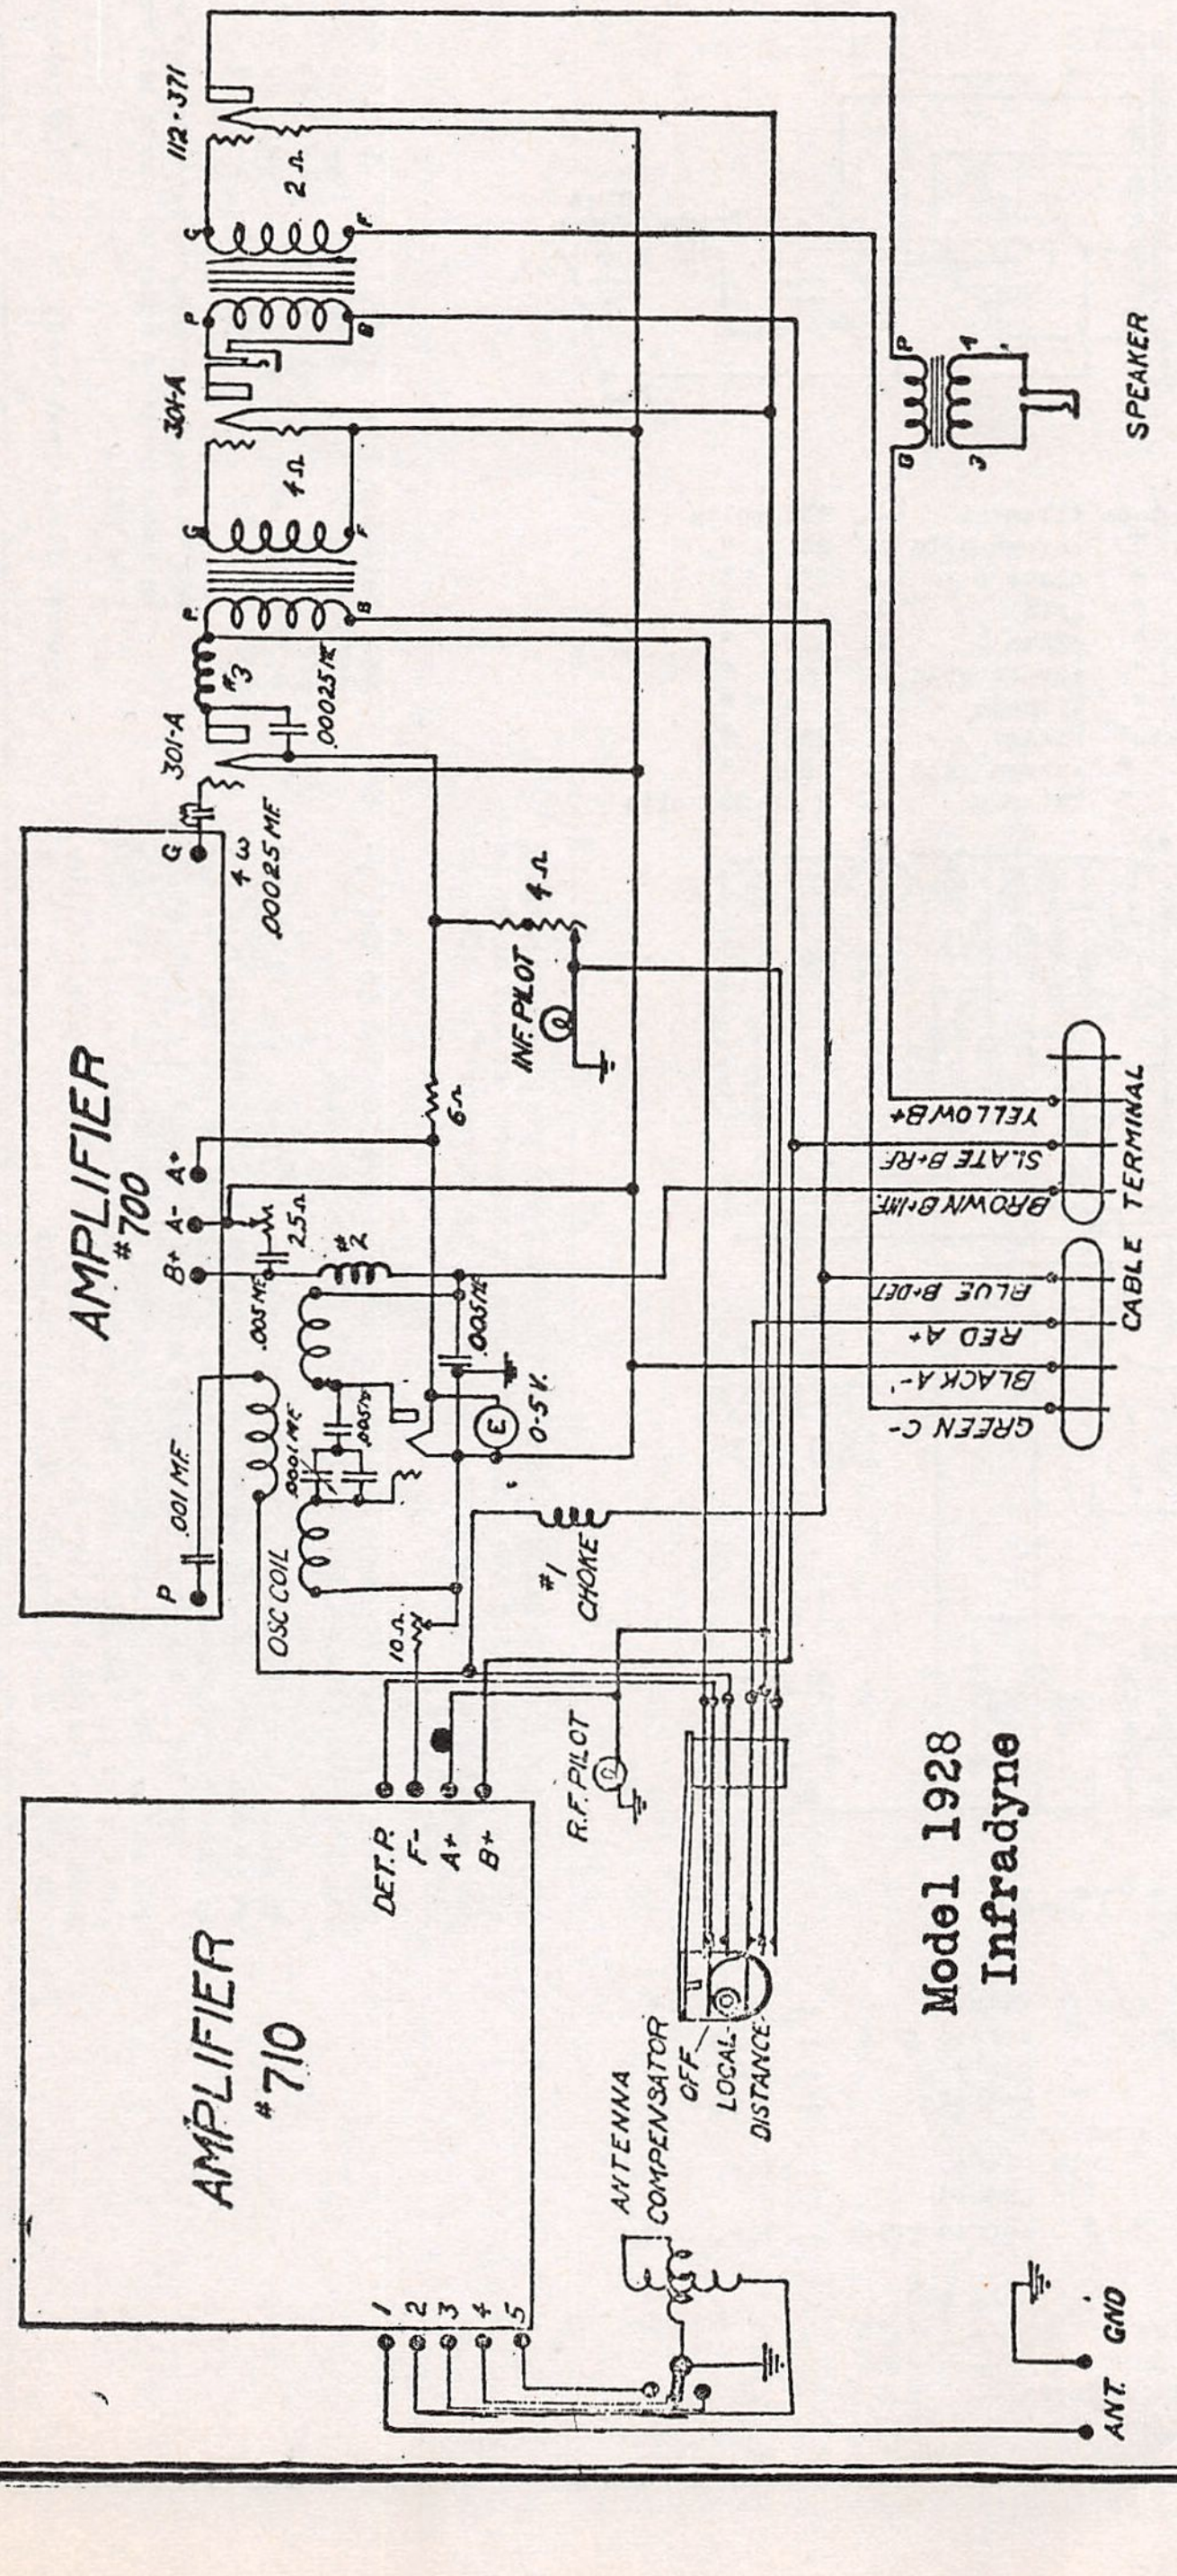
112-371
2 Ω
301-A
4 Ω
301-A
#3
.00025 MF
4 ω .00025 MF
INF. PILOT
4 Ω
6 Ω
SPEAKER
YELLOW B+
SLATE B+RF
BROWN B+INT.
BLUE B+DET
RED A+
BLACK A-
GREEN C-
CABLE TERMINAL
AMPLIFIER #700
B+ A- A+
2.5 Ω
#2
.005 MF
.0005 MF
0-5 K
.001 MF
OSC COIL
#1 CHOKE
10 Ω
R.F. PILOT
AMPLIFIER #710
DET. P. F- A+ B+
1 2 3 4 5
ANTENNA COMPENSATOR
OFF LOCAL DISTANCE
ANT. GND

Model 1928 Infradyne

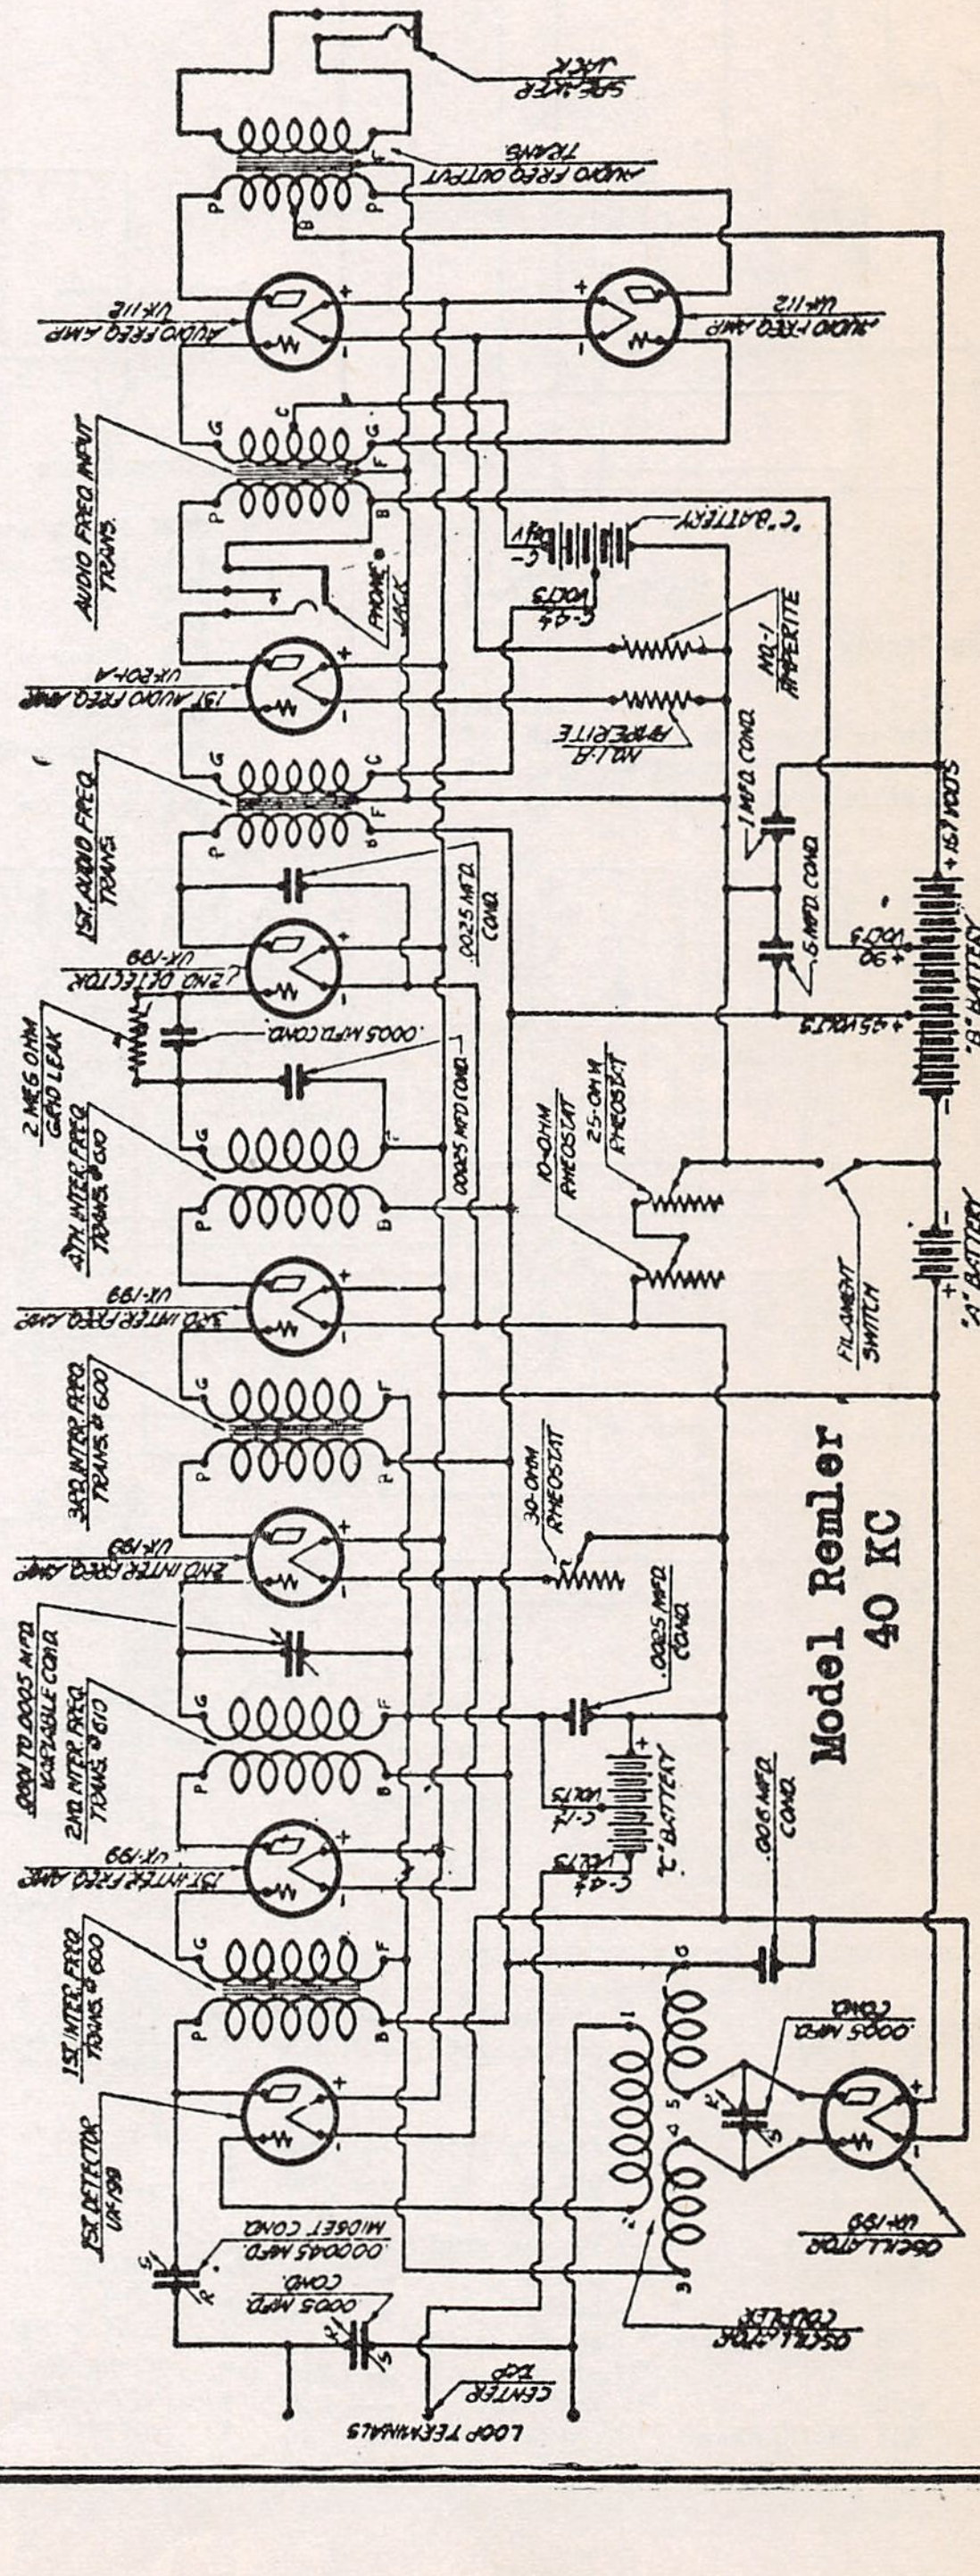
SPEAKER JACK
AUDIO FREQ OUTPUT TRANS.
AUDIO FREQ AMP UX-112
AUDIO FREQ AMP UX-112
AUDIO FREQ INPUT TRANS.
PHONE JACK
C BATTERY
C-4.5 VOLTS
1ST AUDIO FREQ AMP UX-201-A
NO. 1-A AMPERITE
NO. 1 AMPERITE
1ST AUDIO FREQ TRANS.
1 MFD COND.
.5 MFD COND.
2ND DETECTOR UX-199
.00025 MFD COND.
.0005 MFD COND.
2 MEG OHM GRID LEAK
+45 VOLTS
+90 VOLTS
+135 VOLTS
B BATTERY
A BATTERY
FILAMENT SWITCH
4TH INTER FREQ TRANS. #610
10-OHM RHEOSTAT
25-OHM RHEOSTAT
3RD INTER FREQ AMP UX-199
3RD INTER FREQ TRANS. #600
30-OHM RHEOSTAT
2ND INTER FREQ AMP UX-199
.00025 MFD COND.
.00025 TO .0005 MFD VARIABLE COND.
2ND INTER FREQ TRANS. #610
1ST INTER FREQ AMP UX-199
C BATTERY
C-3 VOLTS
.006 MFD COND.
1ST INTER FREQ TRANS. #600
1ST DETECTOR UX-199
.00045 MFD MIDGET COND.
.0005 MFD COND.
.0005 MFD COND.
OSCILLATOR UX-199
OSCILLATOR COUPLER
CENTER TAP
LOOP TERMINALS

Model Remler 40 KC

Schematic Wiring Diagram of the Remler 45 K. C. Super-Heterodyne Receiver, Using the Rice Split-Loop to Obtain Regeneration.

MODEL 10-3
MODEL 15-3

REMLER COMPANY, LTD.

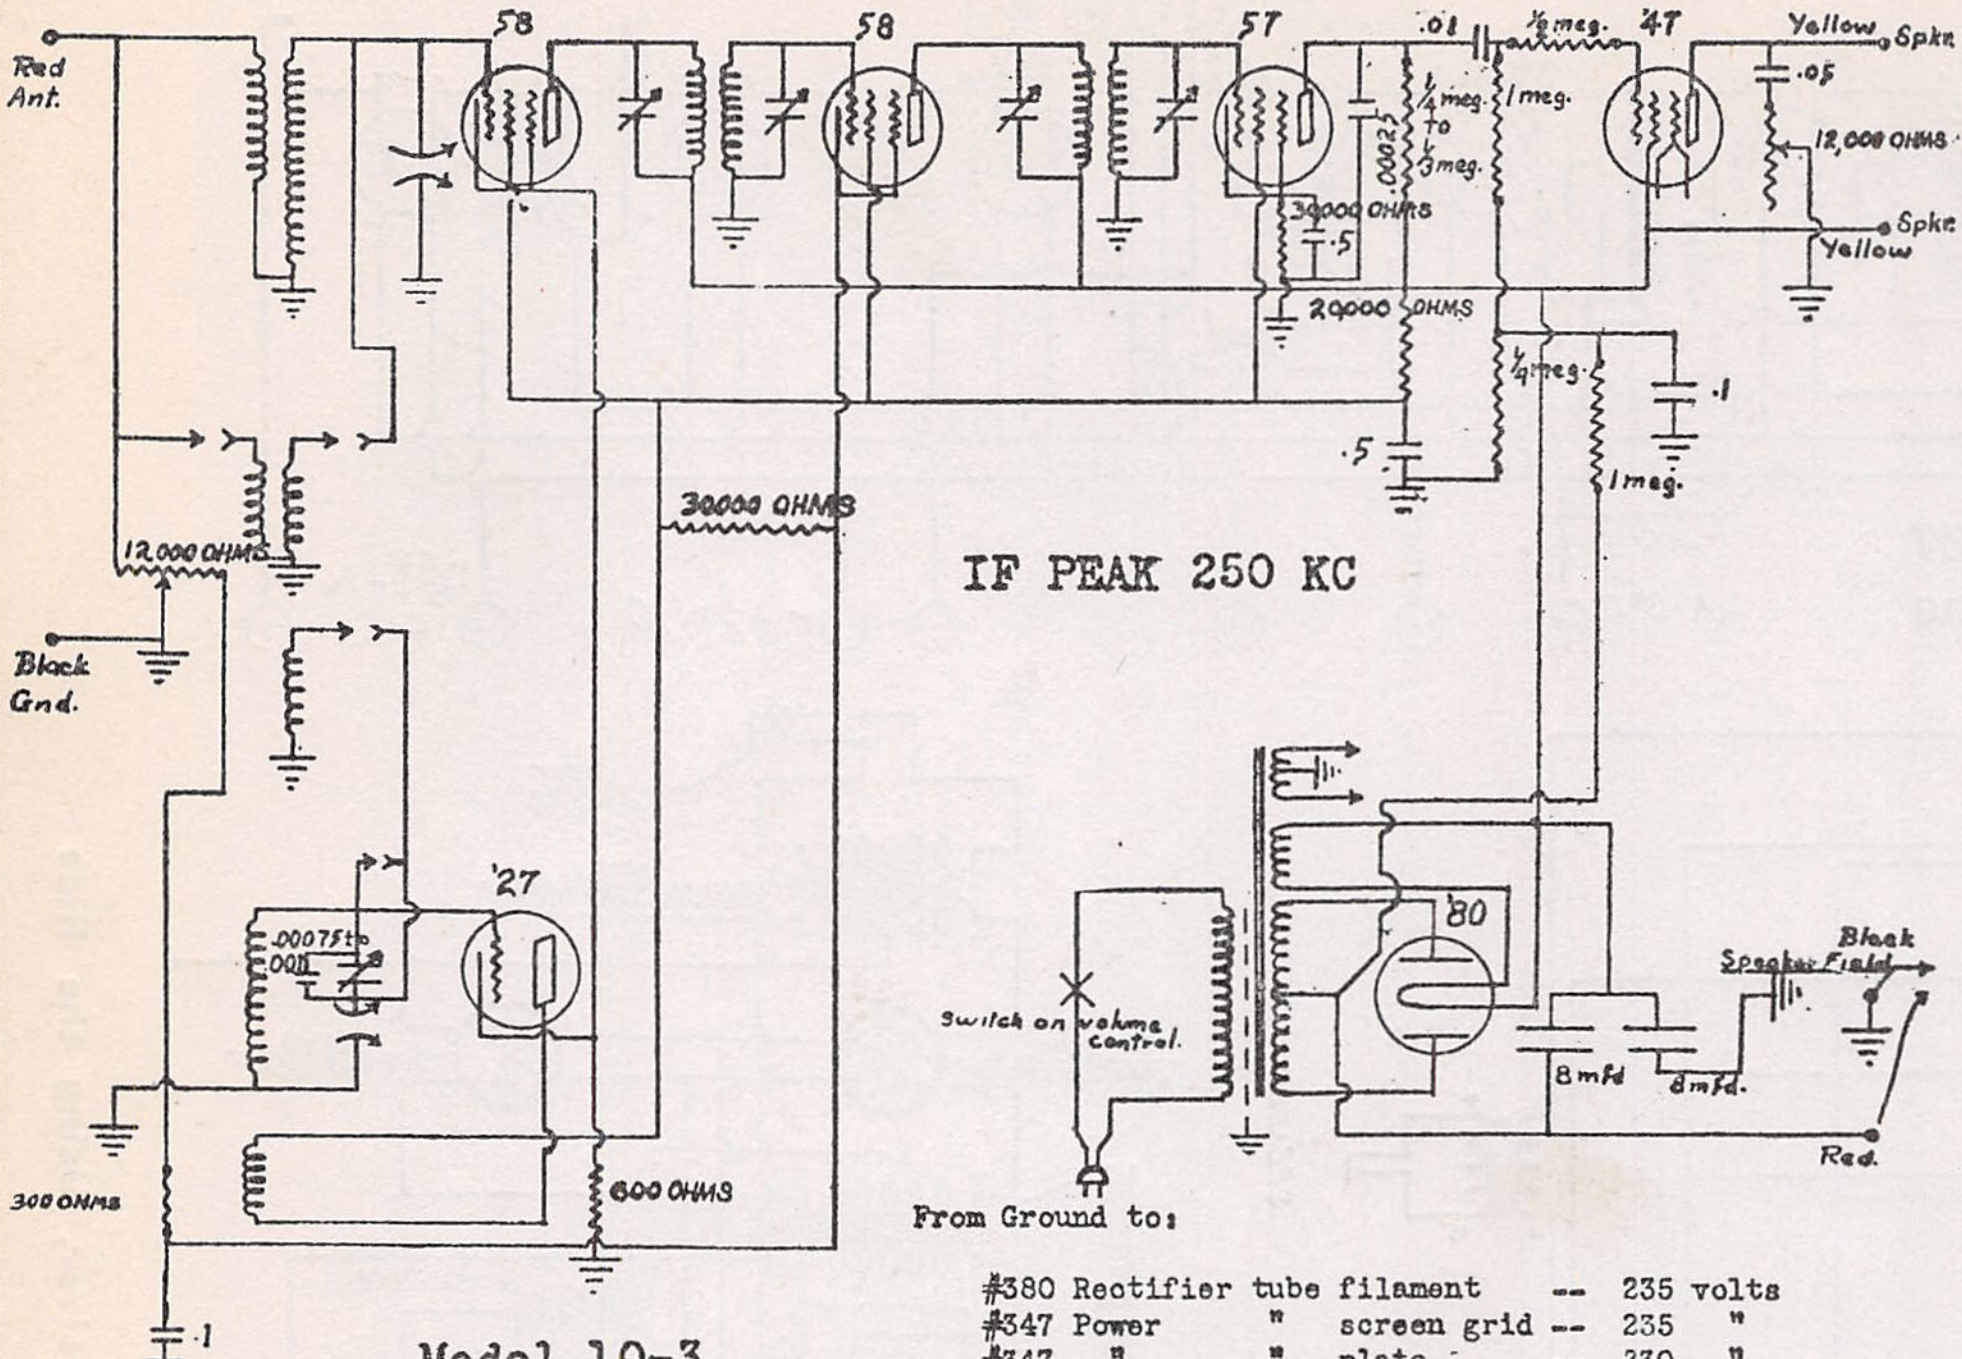
Red Ant.
58
58
57
47
.01
½ meg.
¼ meg. to ½ meg.
1 meg.
.0002
30000 OHMS
.5
20000 OHMS
¼ meg.
.1
.5
1 meg.
Yellow
Spkr.
.05
12,000 OHMS
Spkr.
Yellow
12,000 OHMS
Black Gnd.
30000 OHMS
IF PEAK 250 KC
'27
.00075 to .001
300 OHMS
600 OHMS
.1
Switch on volume control.
'80
8 mfd.
8 mfd.
Black
Speaker Field
Red.

Model 10-3 Super (1932)

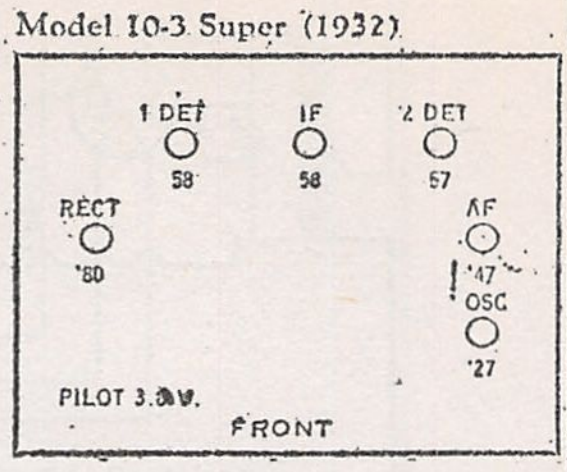
1 DET
58
IF
58
2 DET
57
RECT
'80
AF
'47
OSC
'27
PILOT 3.8V.
FRONT

Model 10-3

A.C.Voltages:

Line	--	120 volts
Heater filaments	--	2.3 "
Power tube filament	--	2.3 "
Rectifier filament	--	5.0 "

From Ground to:

#380	Rectifier	tube	filament	--	235 volts
#347	Power	"	screen grid	--	235 "
#347	"	"	plate	--	230 "
#347	"	"	grid	--	17 "
#58	Mixer	"	plate	--	235 "
#58	"	"	screen grid	--	60 "
#58	"	"	kathode	--	4 "
#58	Intermediate	"	Plate	--	235 "
#58	"	"	screen grid	--	60 "
#58	"	"	kathode	--	2 to 20 volts

#57	Detector	Tube	plate	--	120 volts
#57	"	"	screen grid	--	60 "
#57	"	"	kathode	--	3½ "
#327	Oscillator	Tube	plate	--	60 "
#327	"	"	kathode	--	4 "

Due to small current, meter readings will be inaccurate on detector plate and power tube grid.

Speaker field (red lead) -- 105 volts negative.

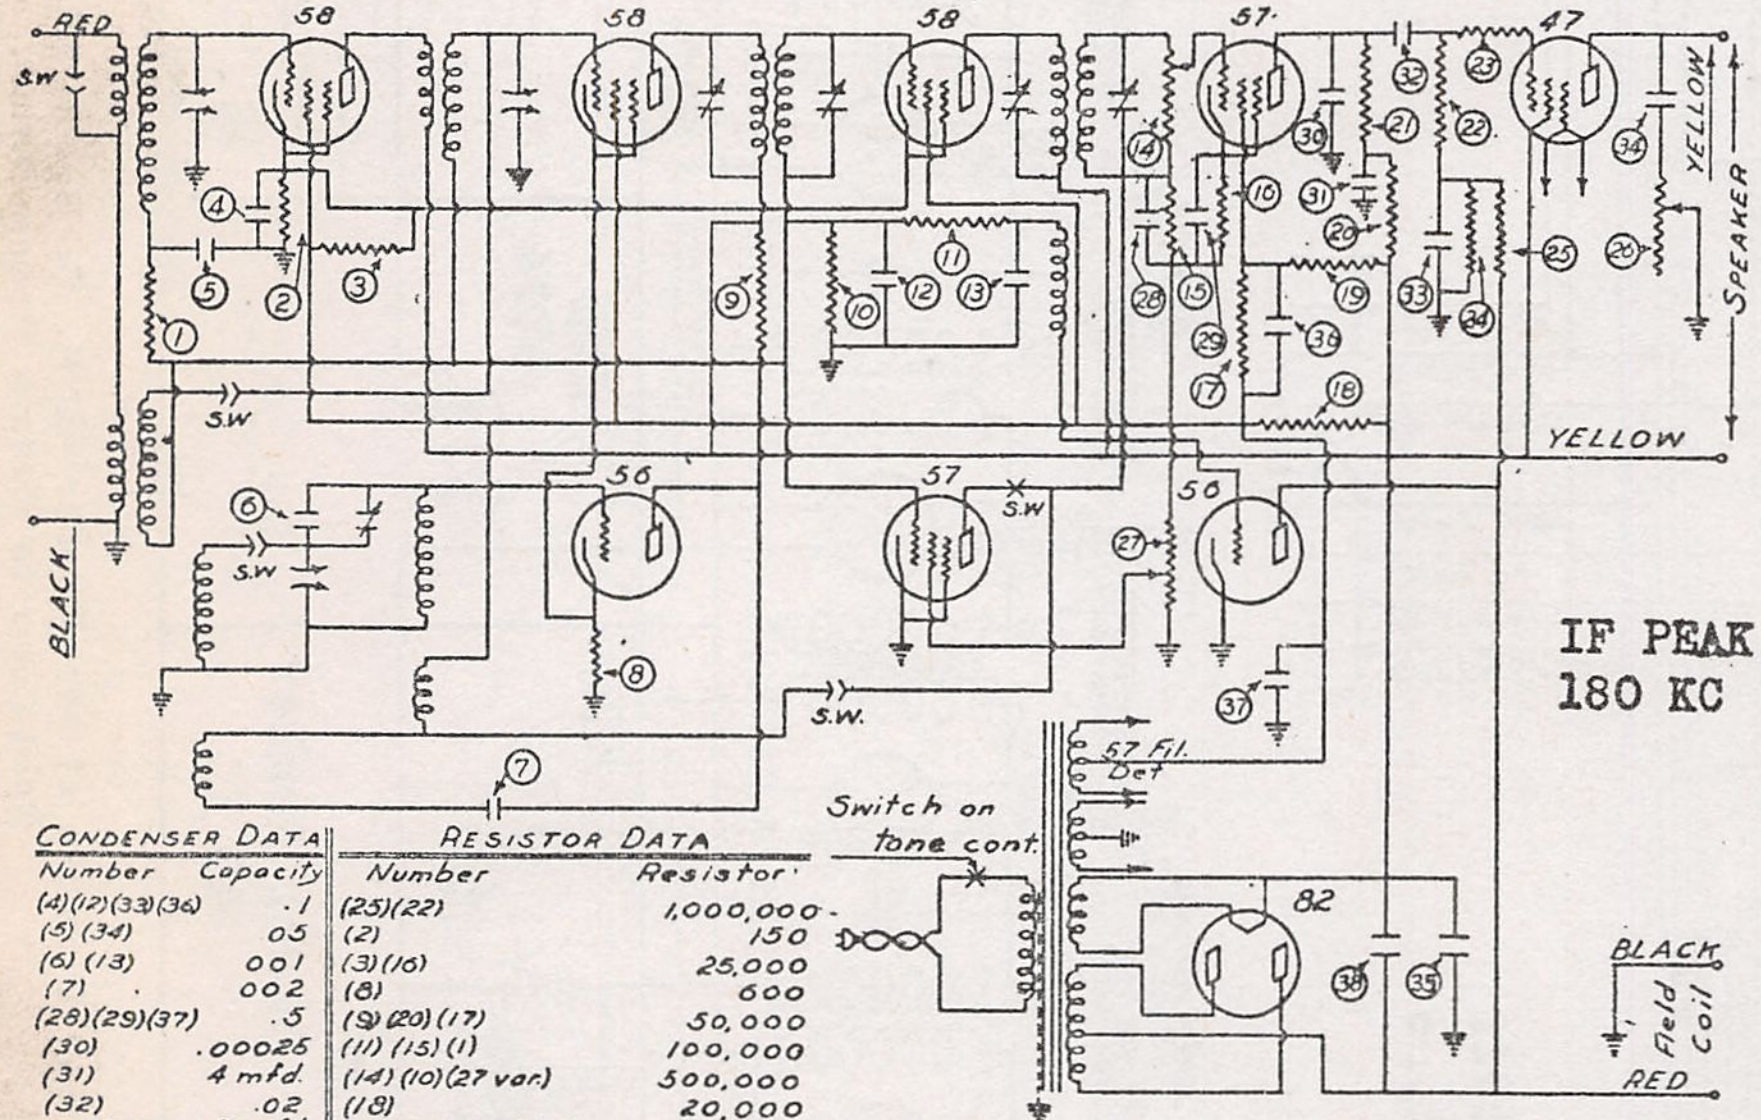
RED
SW
58
58
58
57
47
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
YELLOW
SPEAKER
YELLOW
S.W.
S.W.
S.W.
BLACK
56
57
56
S.W.
IF PEAK 180 KC
57 Fil. Det
Switch on tone cont.
82
BLACK
Field Coil
RED

CONDENSER DATA Number	Capacity
(4)(12)(33)(36)	.1
(5) (34)	05
(6) (13)	001
(7)	002
(28)(29)(37)	.5
(30)	.00025
(31)	4 mfd.
(32)	.02
(38) (35)	8 mfd

RESISTOR DATA Number	Resistor
(25)(22)	1,000,000
(2)	150
(3)(16)	25,000
(8)	600
(9)(20)(17)	50,000
(11) (15) (1)	100,000
(14) (10)(27 var.)	500,000
(18)	20,000
(19)(23)(24)(21)	250,000
(26 var.)	12,000

Model 15-3

Voltage readings for servicing purposes follow:

D. C. VOLTAGES FROM GROUND:

#82	Rectifier	tube	filament	--	260 volts
#47	Power	"	screen grid	--	260 "
#47	"	"	plate	--	245 "
#47	"	"	grid	--	18 "
#58	R.F.	"	screen grid	--	95 "
#58	"	"	plate	--	260 "
#58	"	"	kathode	--	2.5 "
#58	Mixer	"	screen grid	--	95 "
#58	"	"	plate	--	260 "
#58	"	"	kathode	--	5 "
#58	Intermediate	"	screen grid	--	95 "
#58	"	"	plate	--	260 "
#58	"	"	kathode	--	2.5 "
#56	Oscillator	"	plate	--	60 "
#56	"	"	kathode	--	5 "
#57	Detector	"	screen grid	--	110 "
#57	"	"	plate	--	135 "
#57	"	"	kathode	--	90 "
#57	Noise suppressor				
	" "	tube	plate	--	Var. 0-90
#57	" "	"	kathode	--	0
#57	" "	"	screen grid	--	Var. 0-90

VOLTAGES:

Line	--	120
Heater Filaments	--	2.35
Power tube filament	--	2.35
Detector tube filament	--	2.5
Rectifier filament	--	2.5

Set the LOCAL - DISTANCE switch on DISTANCE and the wave-changing switch on LONG. With the 180 K.C. signal attenuated so low as to be just audible adjust the four controlling trimmers of the I.F. for maximum signal.

The two I.F. transformers and their trimmers are located in the upright shield cans at the extreme left of the chassis.

To make the dial run true to its kilocycle markings, set the dial at or near 800 K.C. using an oscillator or a Broadcasting Station of known frequency. By tuning to an oscillator or station at or near 560 K.C. the dial may now be made to "track" by adjusting the radio set's oscillator series padding condenser. This is located next to the oscillator tube socket beneath the chassis but must be adjusted thru the hole in the chassis between the oscillator tube and the variable tuning condenser.

MODEL PAM-1

SAMSON ELECTRIC CO.

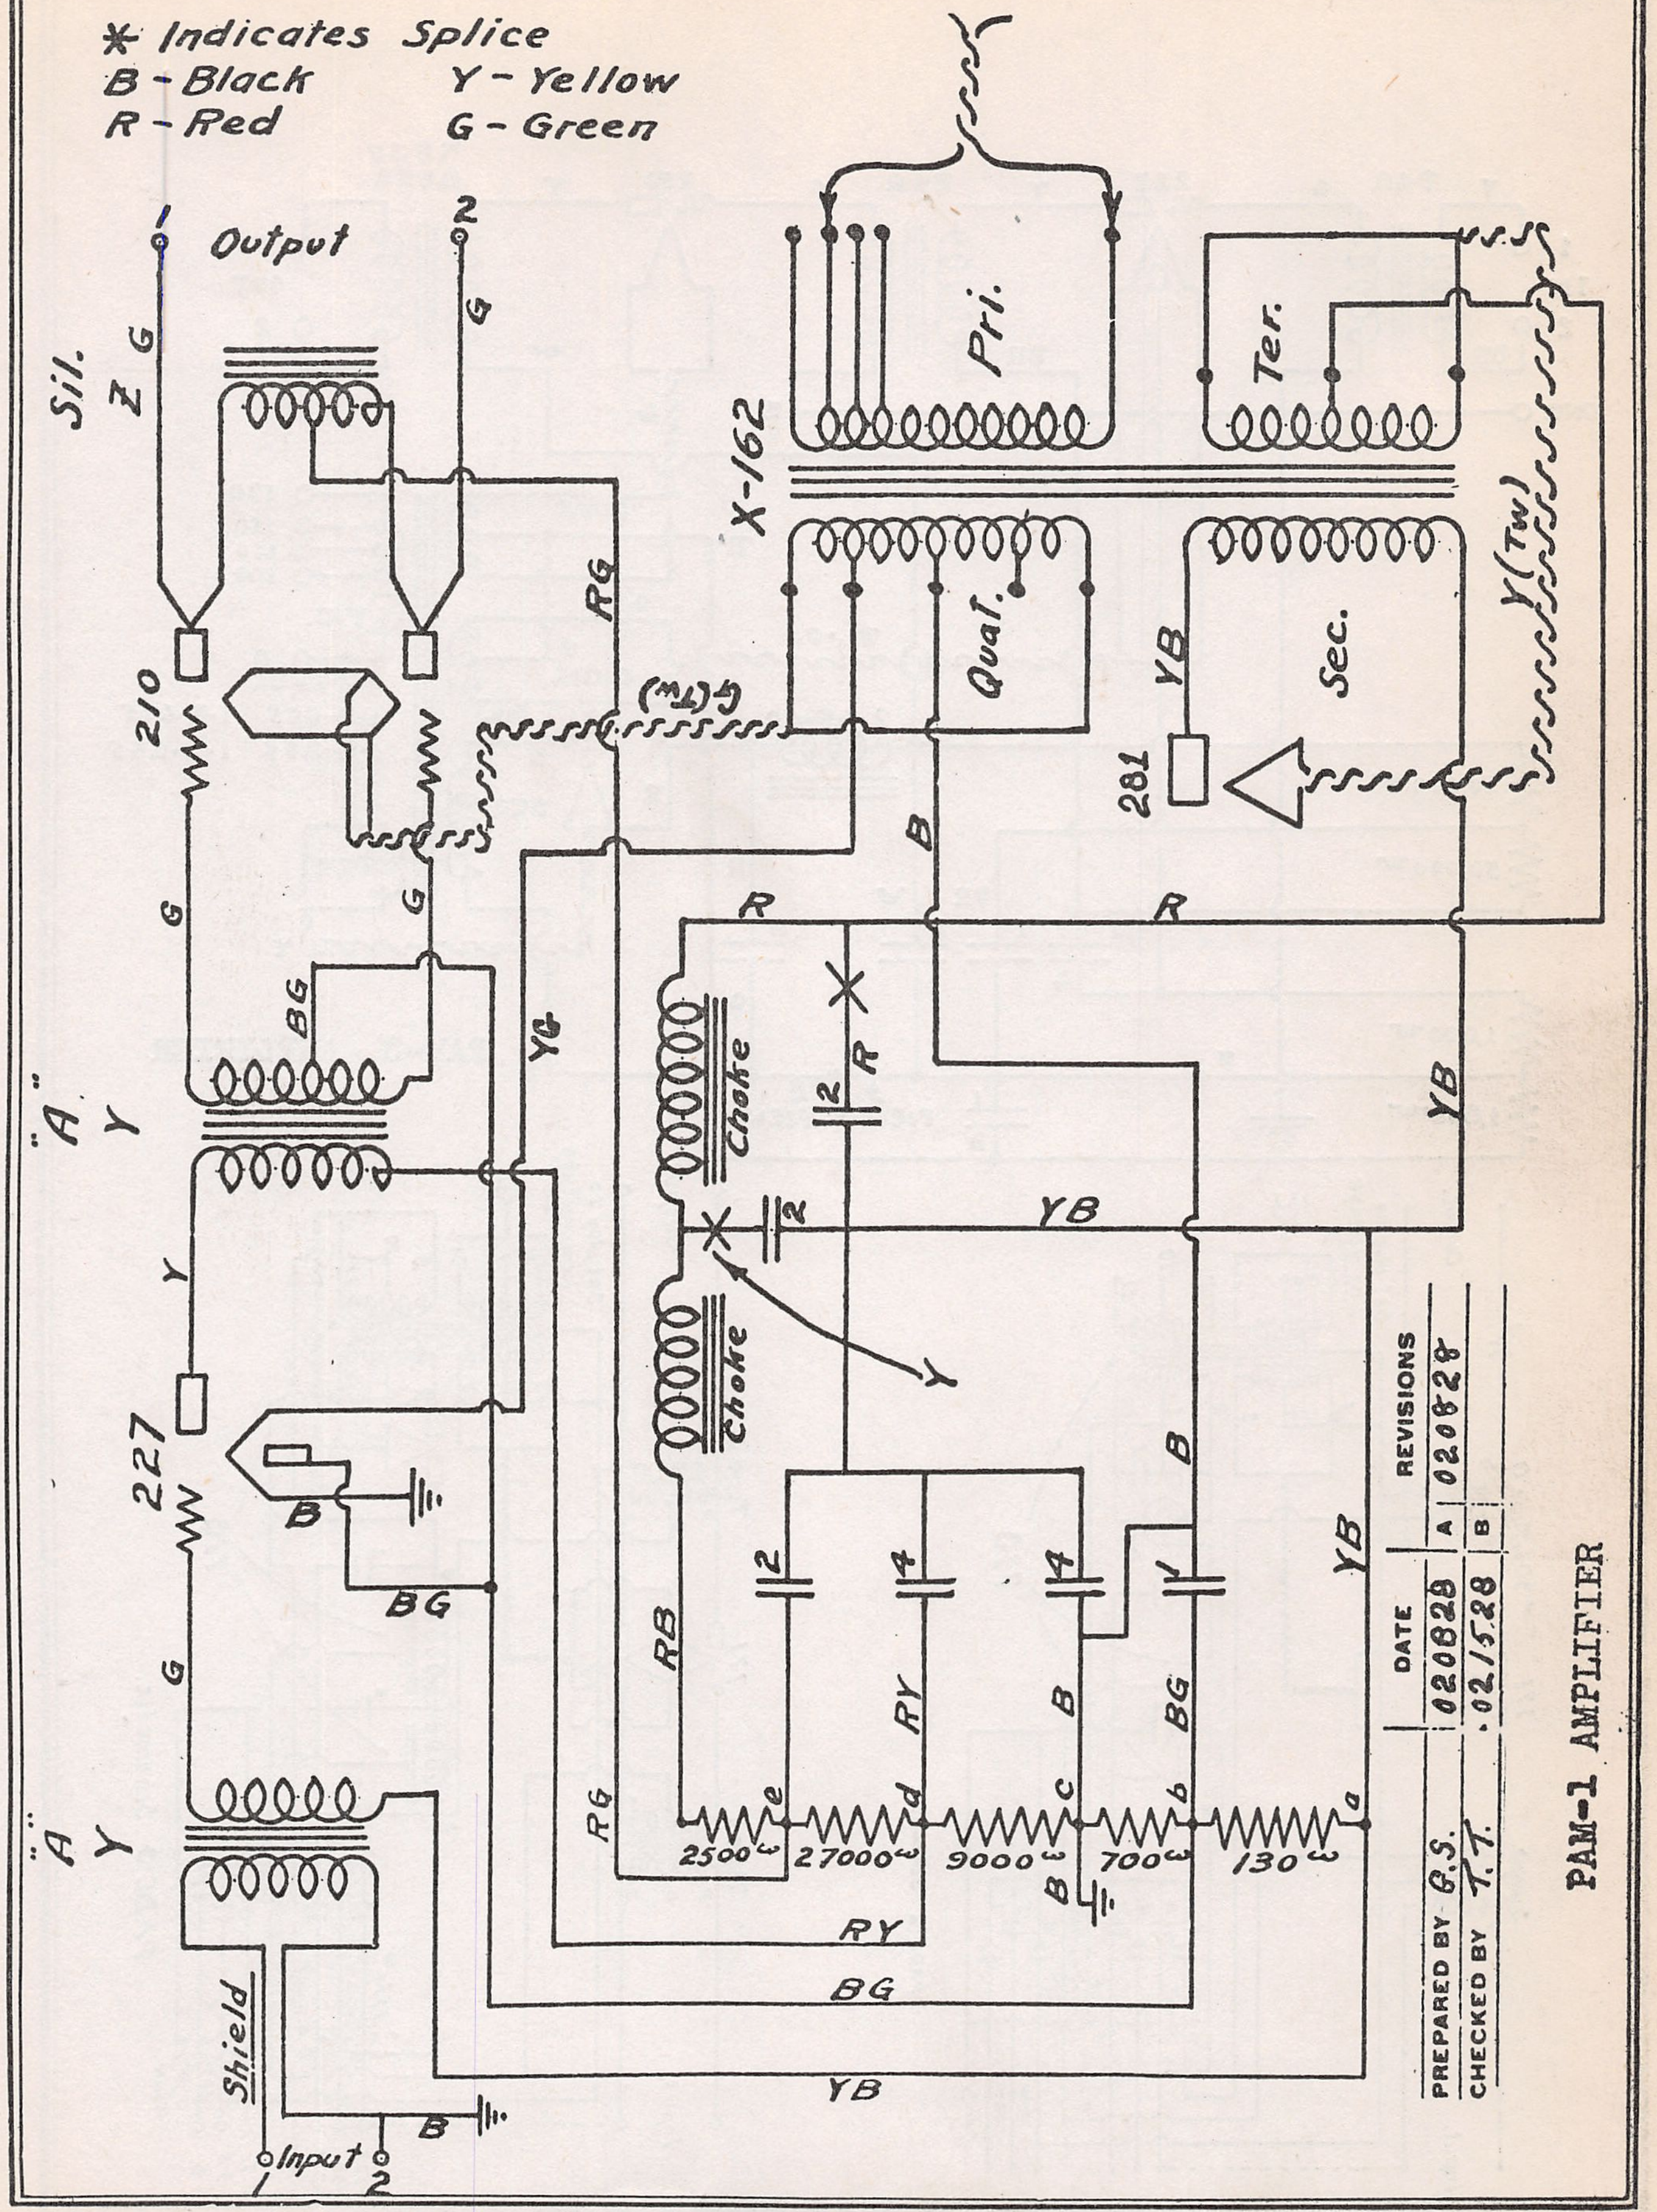
* Indicates Splice
B - Black
R - Red
Y - Yellow
G - Green
1
Output
2
Sil.
Z
G
G
210
G
G
BG
RG
G(Tw)
YG
X-162
Pri.
Ter.
Quat.
Sec.
Y(Tw)
YB
281
B
R
R
Choke
Choke
2
R
2
YB
YB
Y
"A"
Y
227
B
BG
G
Y
"A"
Y
RB
2
4
4
1
RY
B
BG
B
YB
RG
e
d
c
b
a
2500 ω
27000 ω
9000 ω
700 ω
130 ω
B
RY
BG
YB
Shield
B
Input
1
2

	REVISIONS	
	A	020828
	B	

		DATE
PREPARED BY	G.S.	020828
CHECKED BY	T.T.	021528

PAM-1 AMPLIFIER

MODEL PABC-2
MODEL PABC-3
MODEL PAM-3

SAMSON ELECTRIC CO.

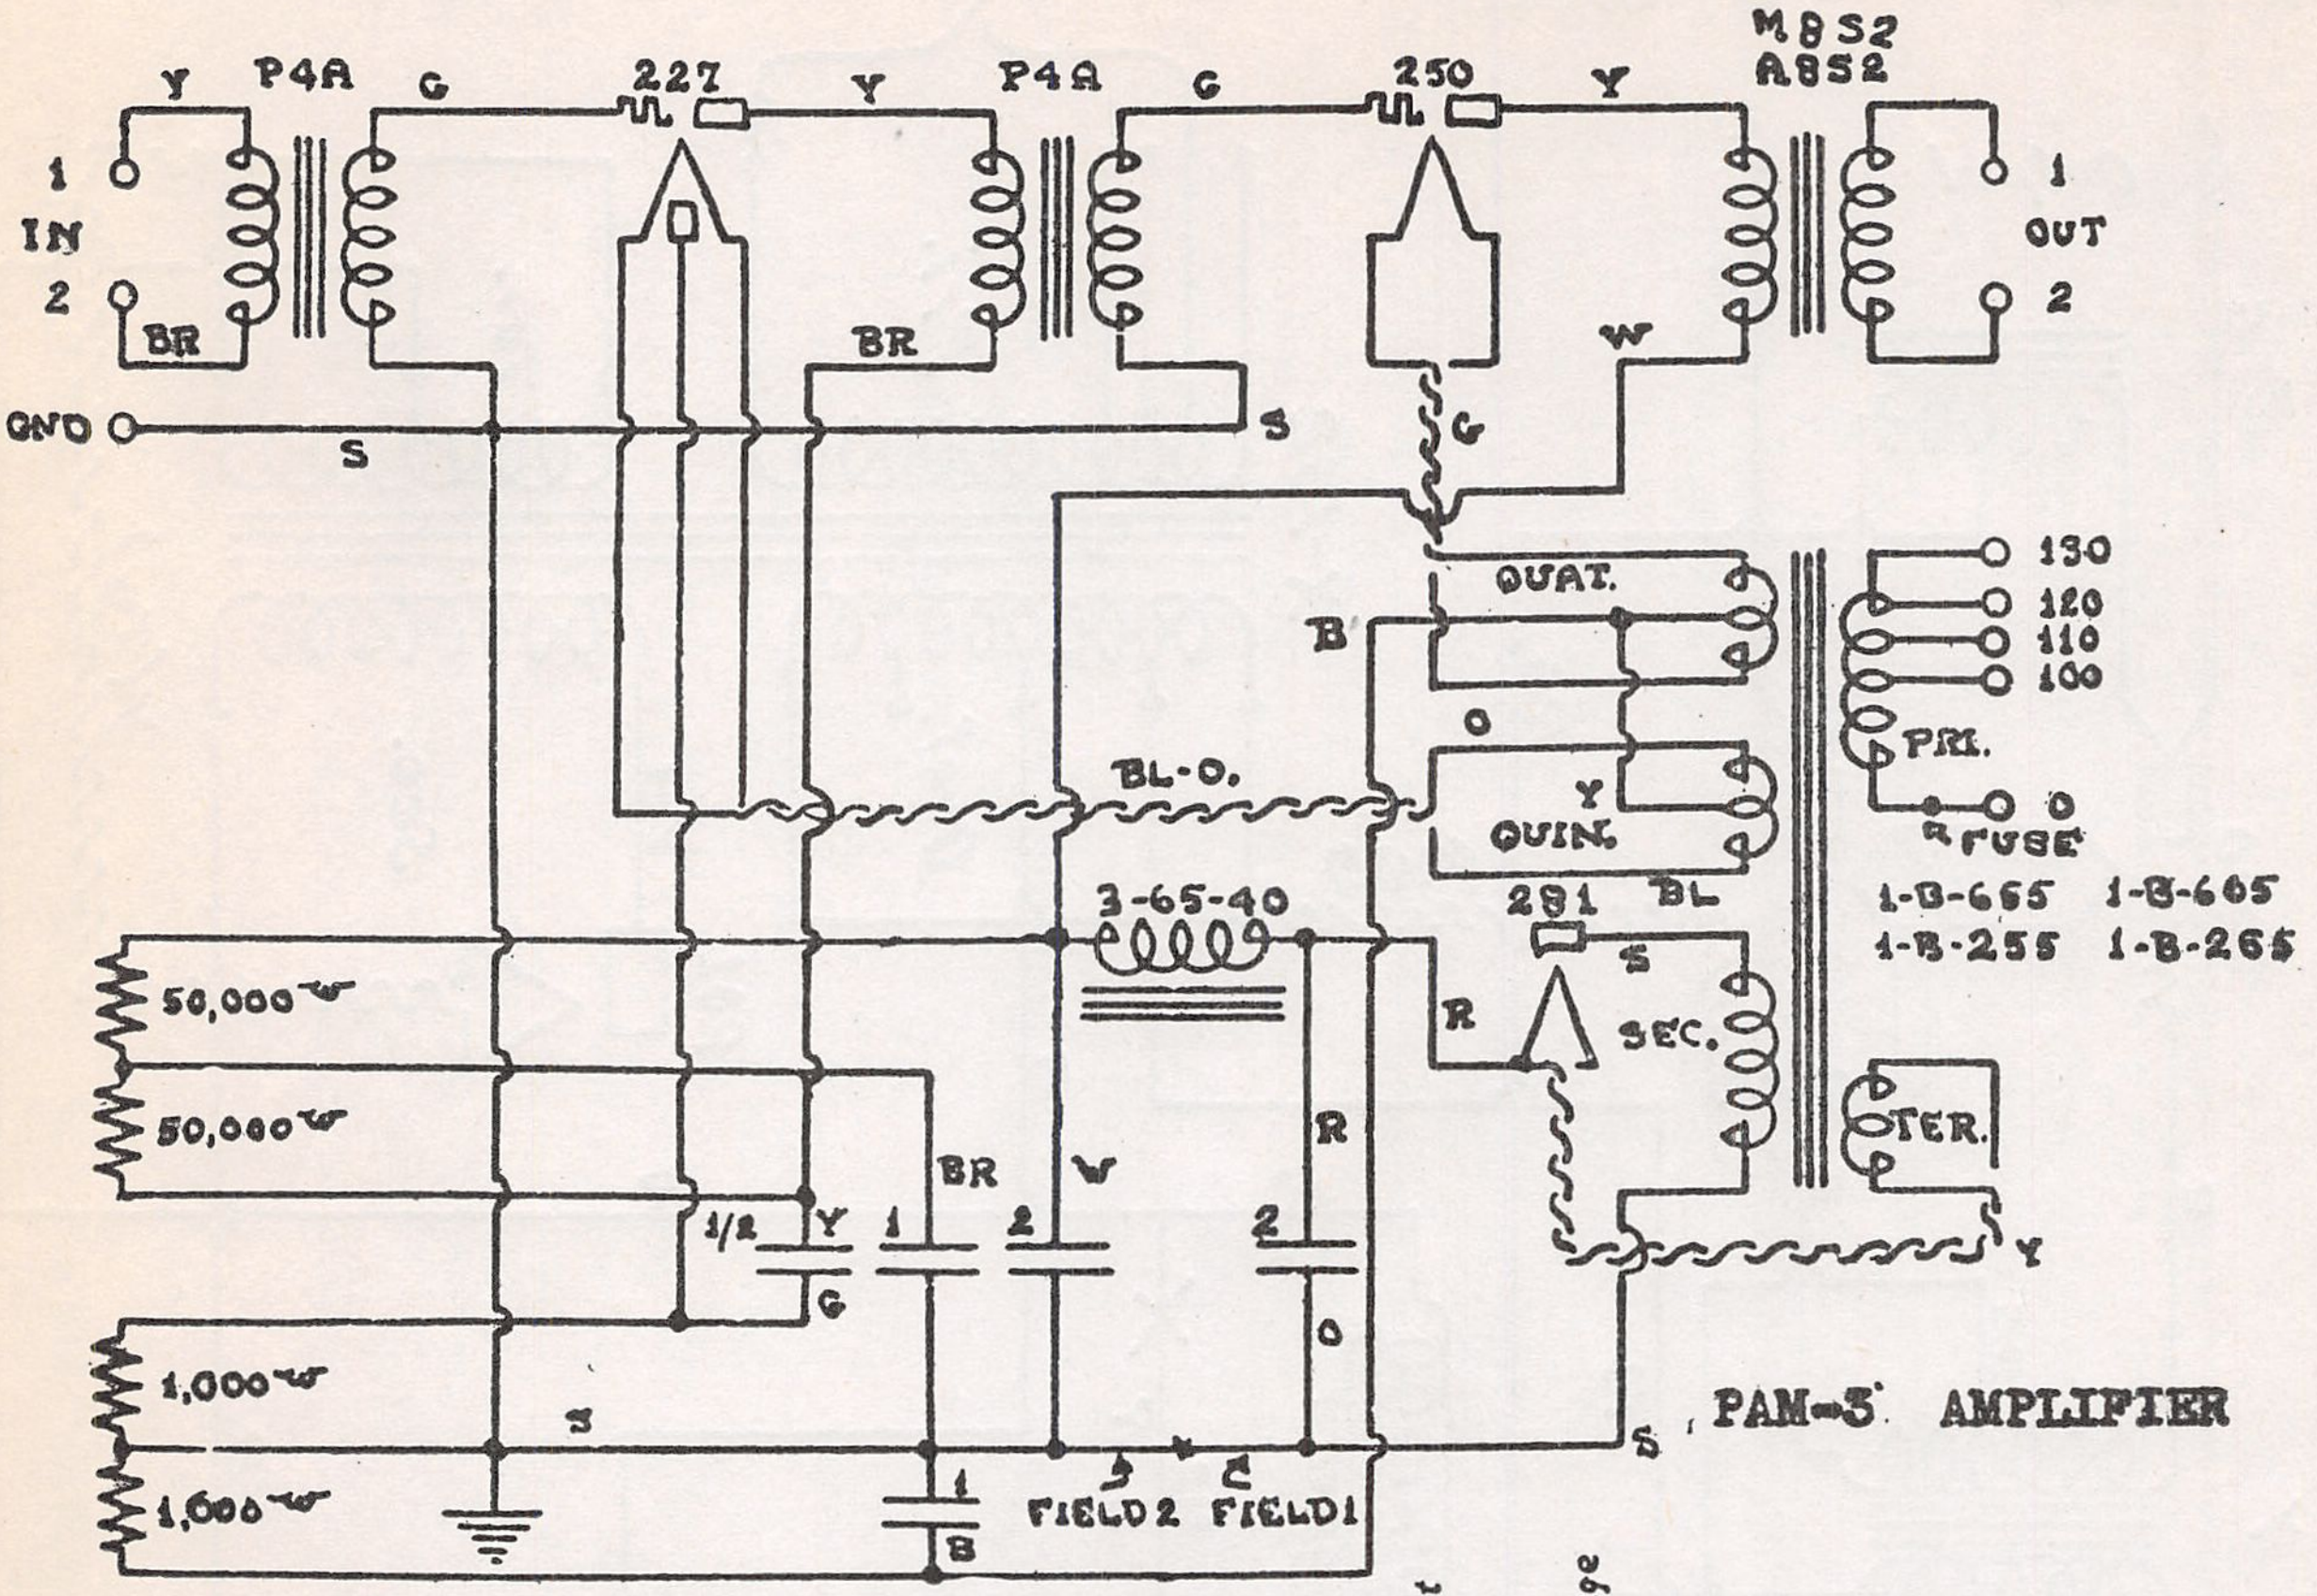
Y
P4A
G
227
Y
P4A
G
250
Y
MBS2
ABS2
1
IN
2
BR
BR
W
1
OUT
2
GND
S
S
G
QUAT.
B
130
120
110
100
PRI.
0
O
BL-O.
Y
QUIN.
FUSE
3-65-40
281
BL
1-B-665
1-B-605
1-B-255
1-B-265
50,000 ω
R
S
SEC.
50,000 ω
BR
W
R
TER.
1/2
Y
1
2
2
Y
G
O
1,000 ω
S
S
1,600 ω
1
B
FIELD 2
FIELD 1

PAM-3 AMPLIFIER

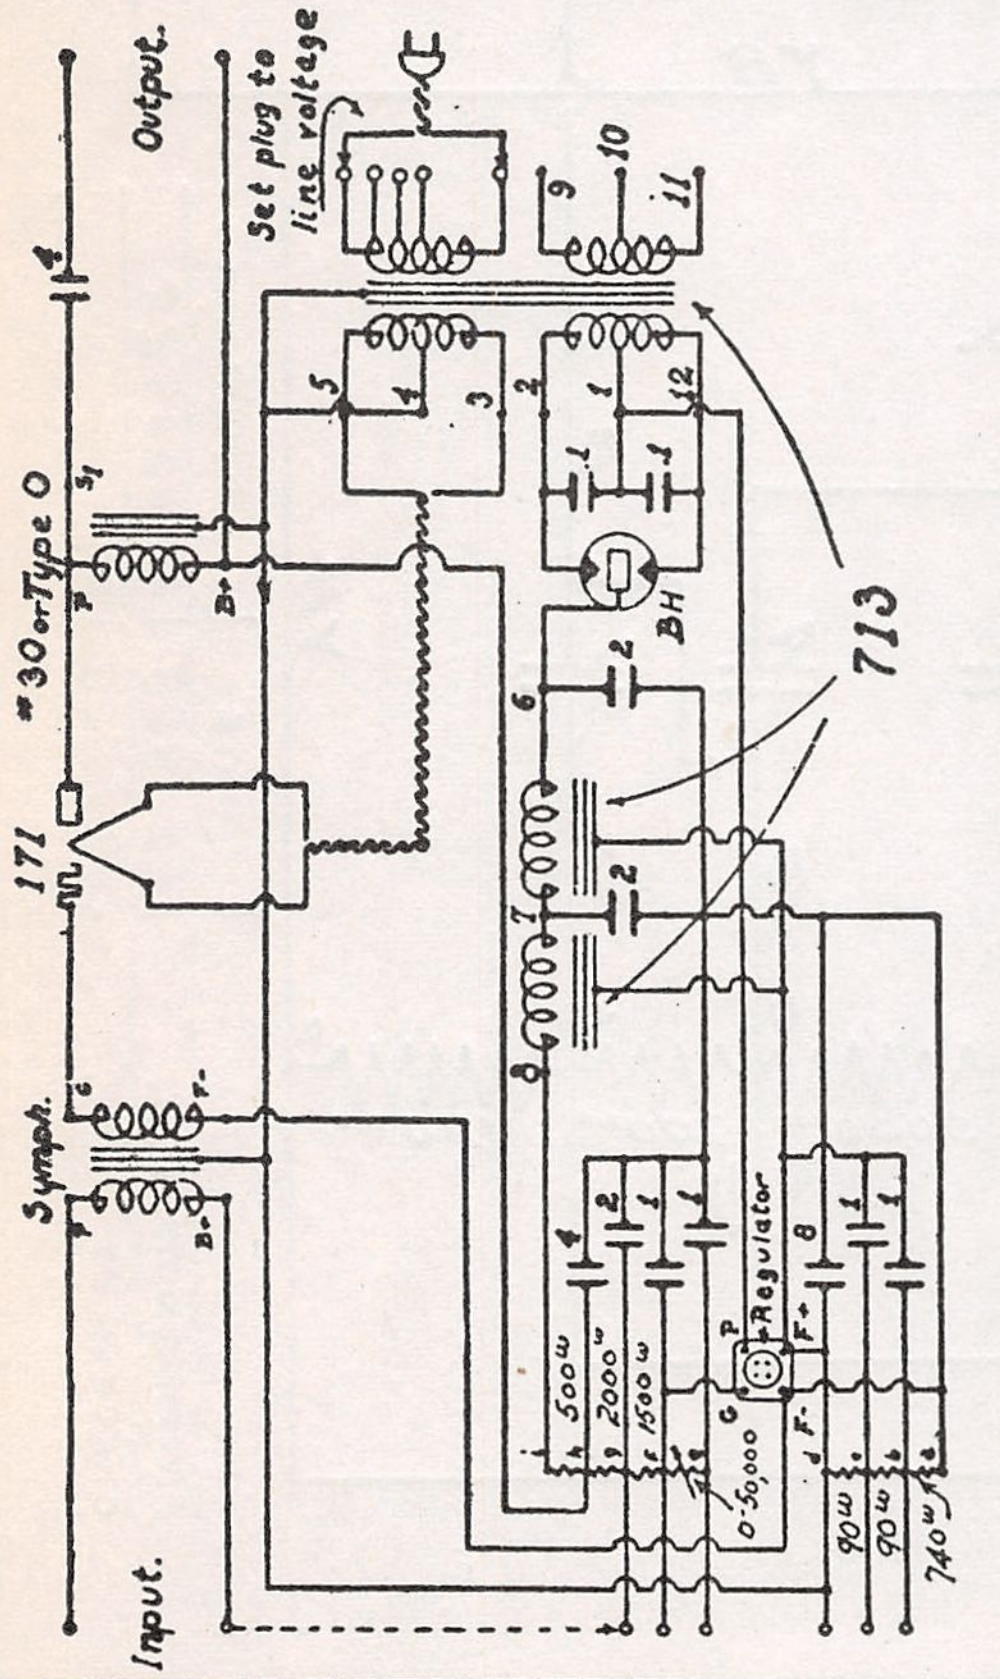
Output
Set plug to line voltage
4
10
9
11
5
4
3
2
1
12
1
1
#30 or Type O
B+
BH
713
2
6
171
2
7
8
Sympt.
B+
4
2
1
1
8
1
1
Regulator
500 ω
2000 ω
1500 ω
0-50,000
90 ω
90 ω
740 ω
Input

PABC-2 Schematic.

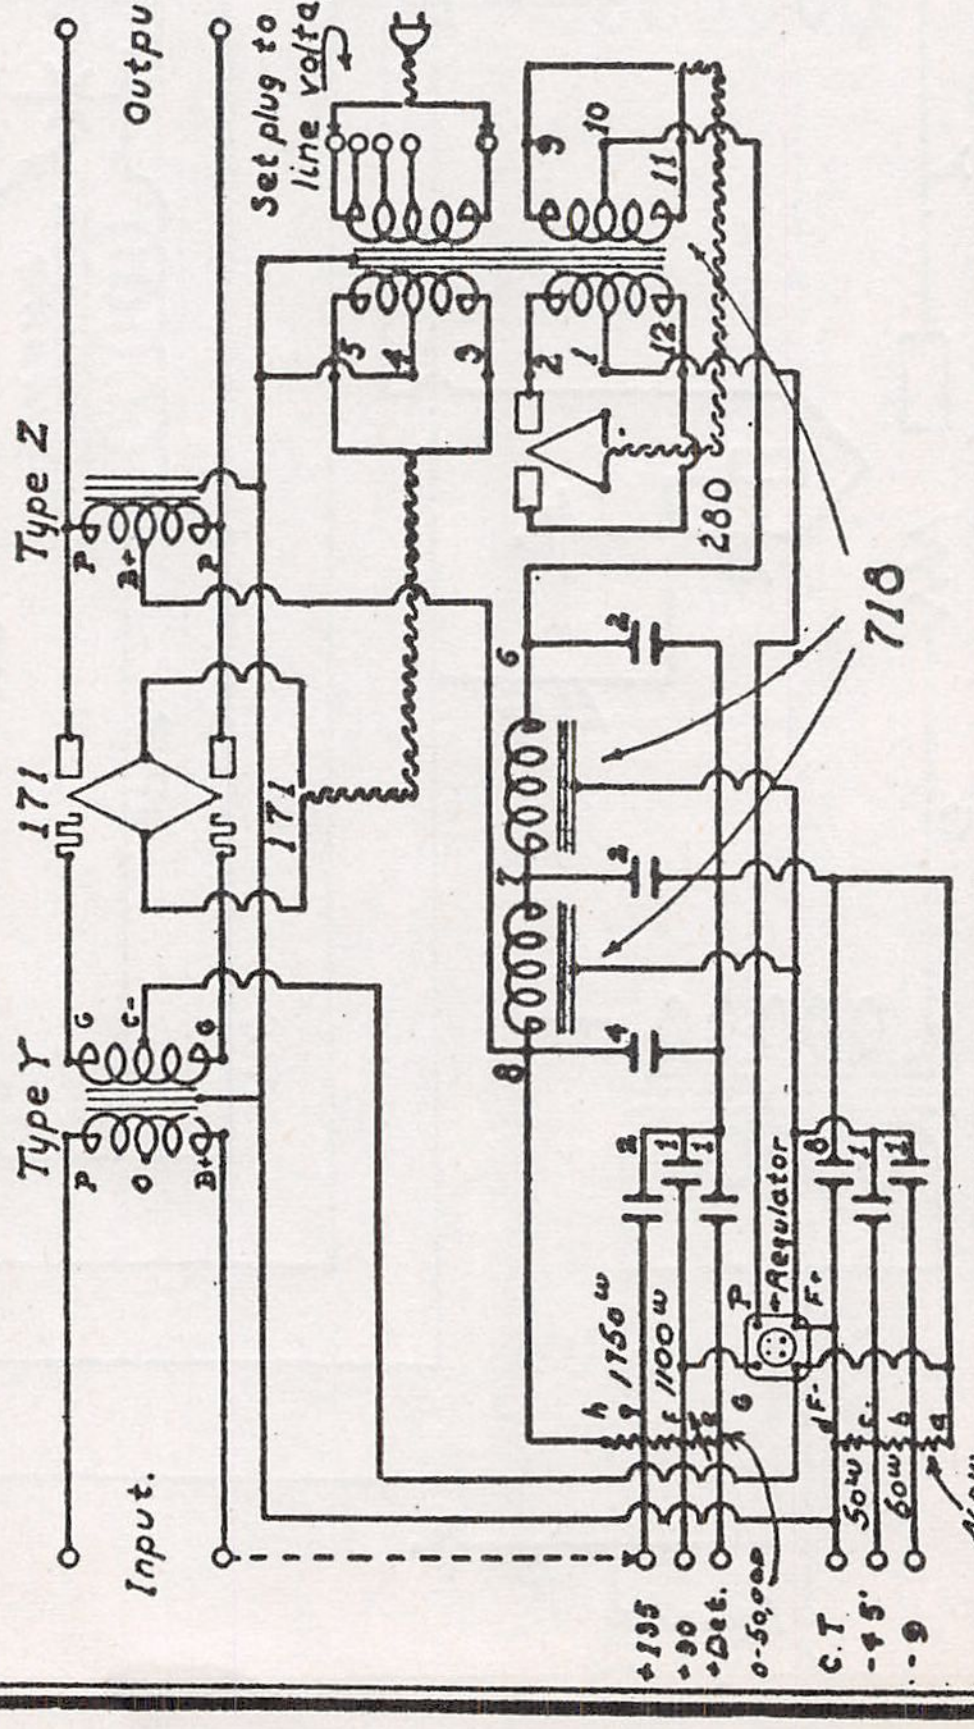
Output
Set plug to line voltage
9
10
11
5
4
3
2
1
12
Type Z
280
718
6
2
171
171
2
7
Type Y
8
4
Regulator
1750 ω
1100 ω
50 ω
60 ω
460 ω
Input
+135
+90
+Det.
0-50,000
C.T.
-4.5
-9

PABC-3 Schematic.

MODEL PAM-5
MODEL PAM-5-D

SAMSON ELECTRIC CO.

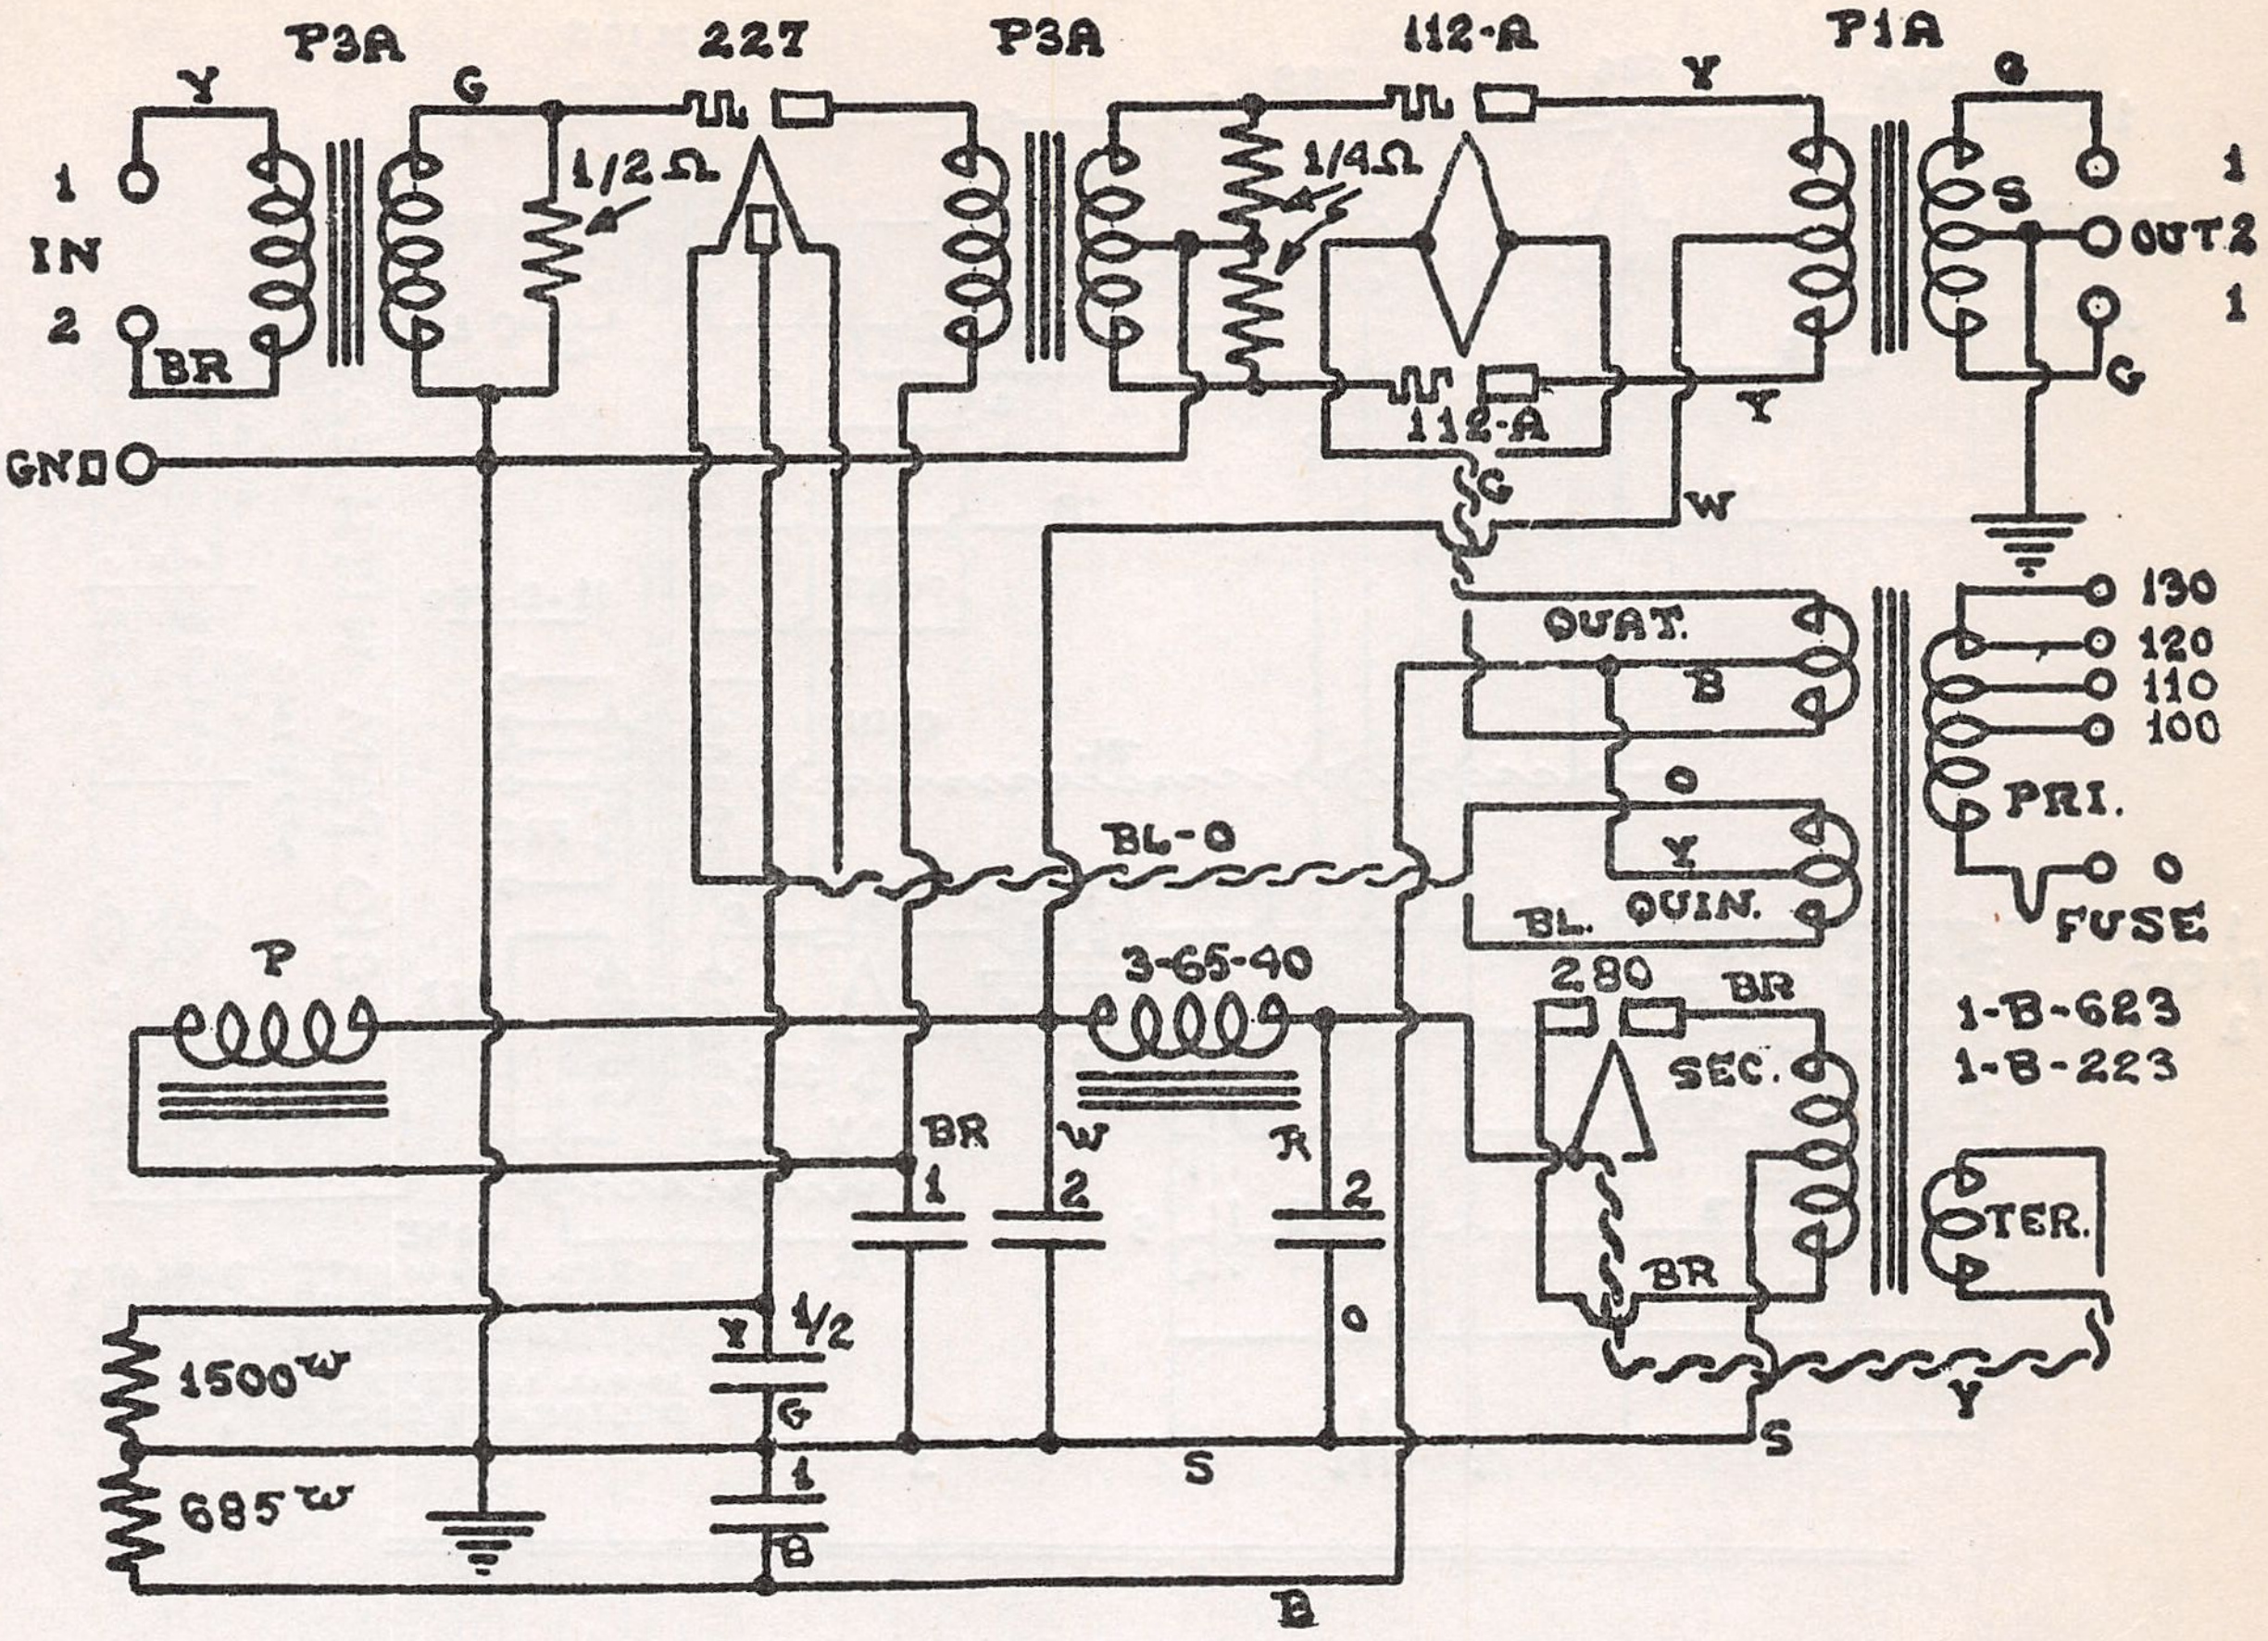
P3A
227
P3A
112-A
P1A
Y
G
Y
G
1
IN
2
BR
1/2 Ω
1/4 Ω
1
OUT 2
1
G
Y
112-A
G
W
GND
QUAT.
B
O
Y
BL. QUIN.
130
120
110
100
PRI.
O
FUSE
BL-O
P
3-65-40
280
BR
SEC.
1-B-623
1-B-223
BR
W
R
1
2
2
O
TER.
BR
Y
1500 w
685 w
Y
1/2
G
1
B
S
S
B

PAM-5 AMPLIFIER

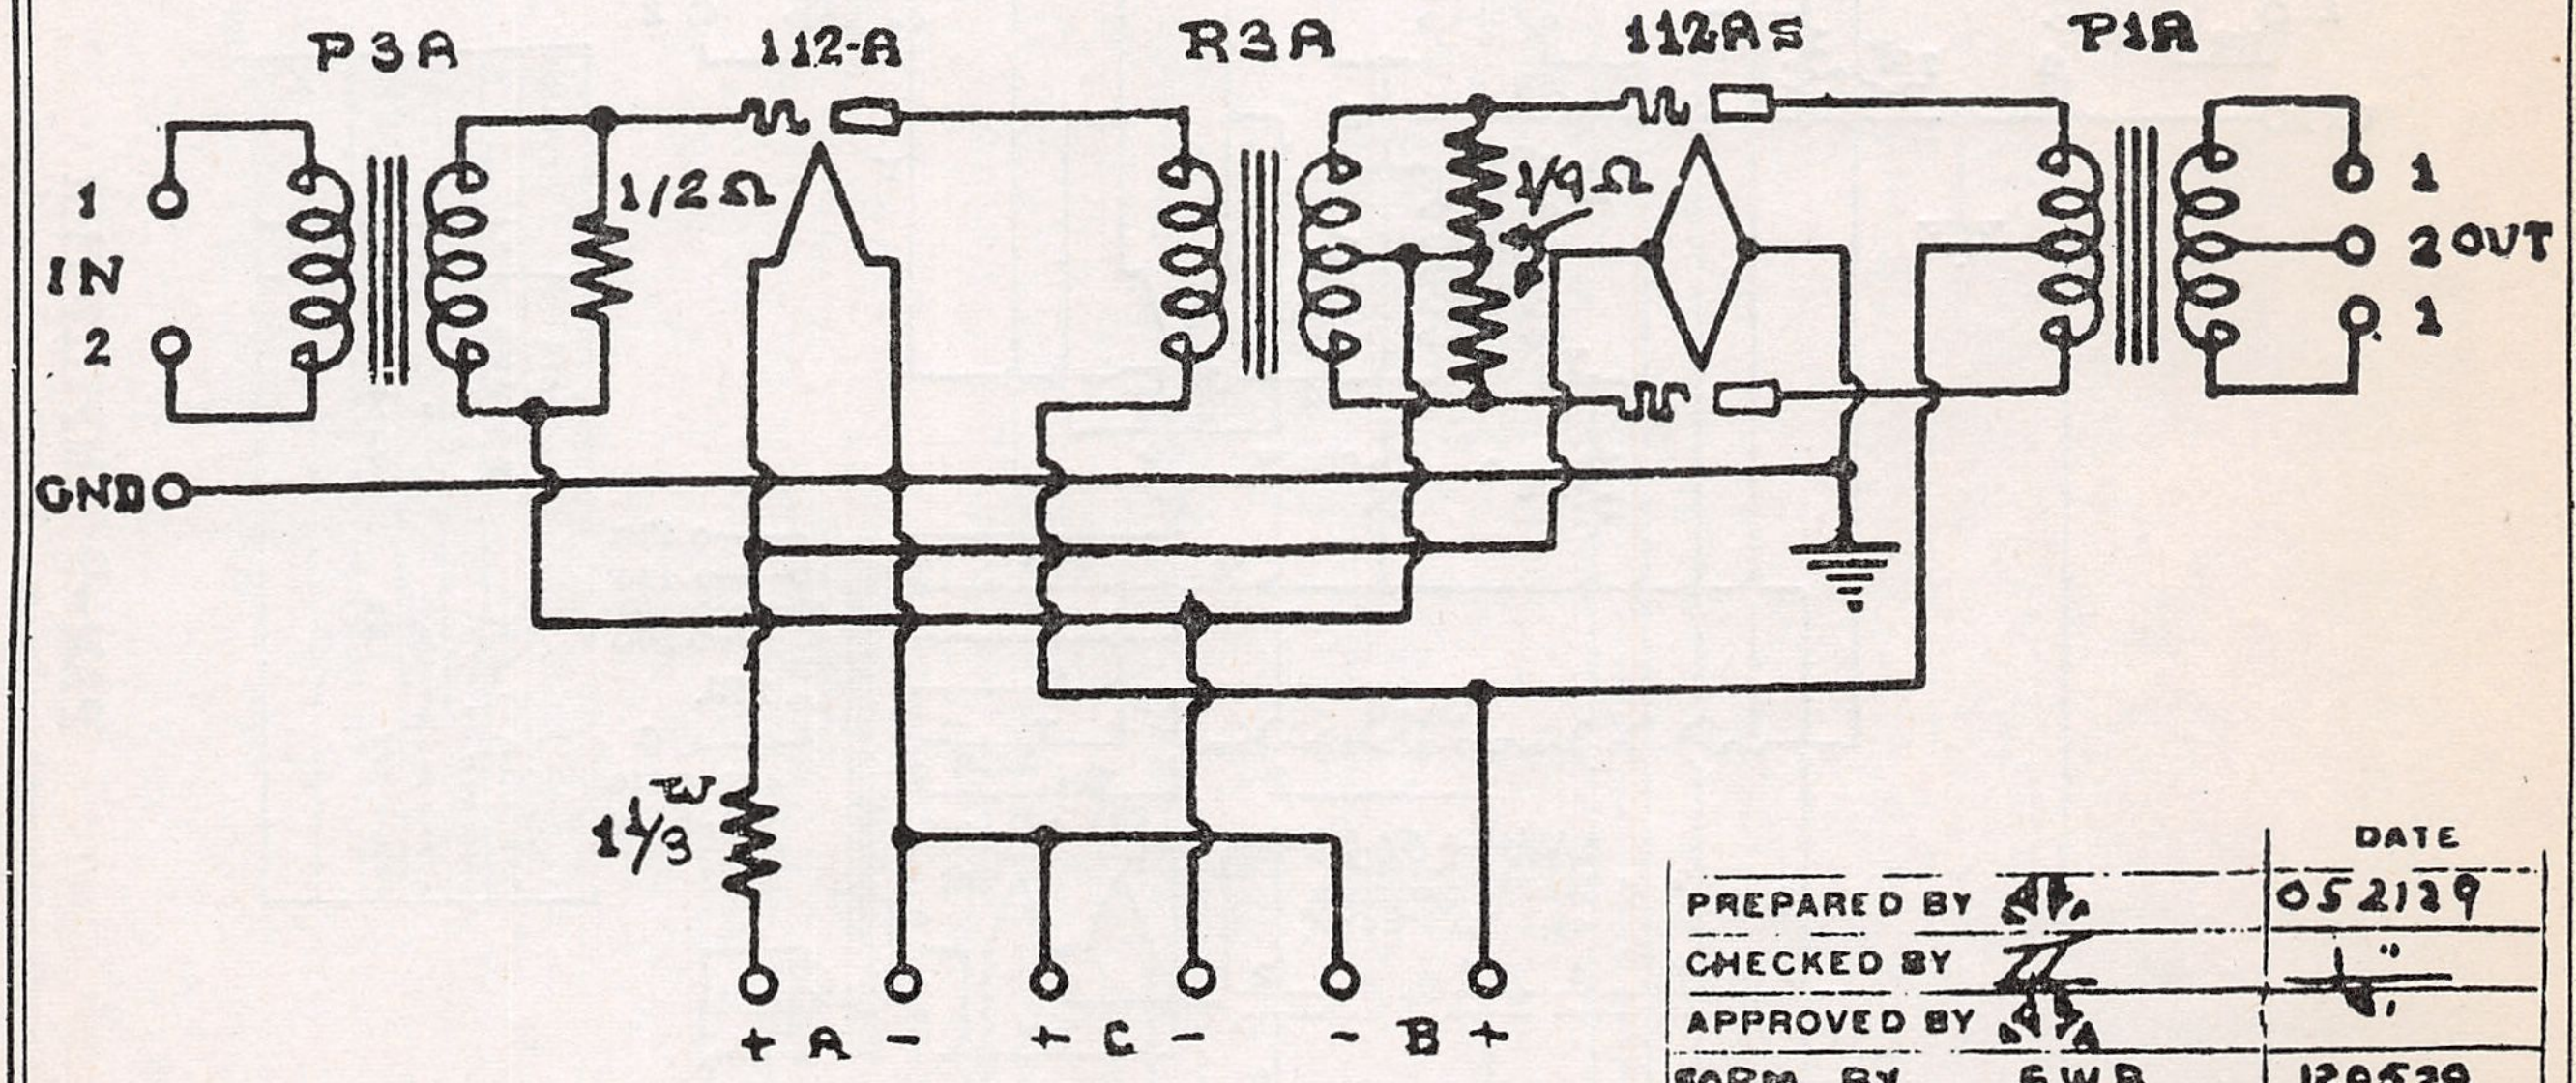
P3A
112-A
R3A
112A S
P1A
1
IN
2
1/2 Ω
1/4 Ω
1
2 OUT
1
GND
1 1/3 w
+ A -
+ C -
- B +

		DATE
PREPARED BY		052129
CHECKED BY		"
APPROVED BY		"
FORM BY	G.W.B.	120529

PAM-5-D AMPLIFIER

SAMSON ELECTRIC CO.

MODEL PAM-8,18
MODEL PAM-9

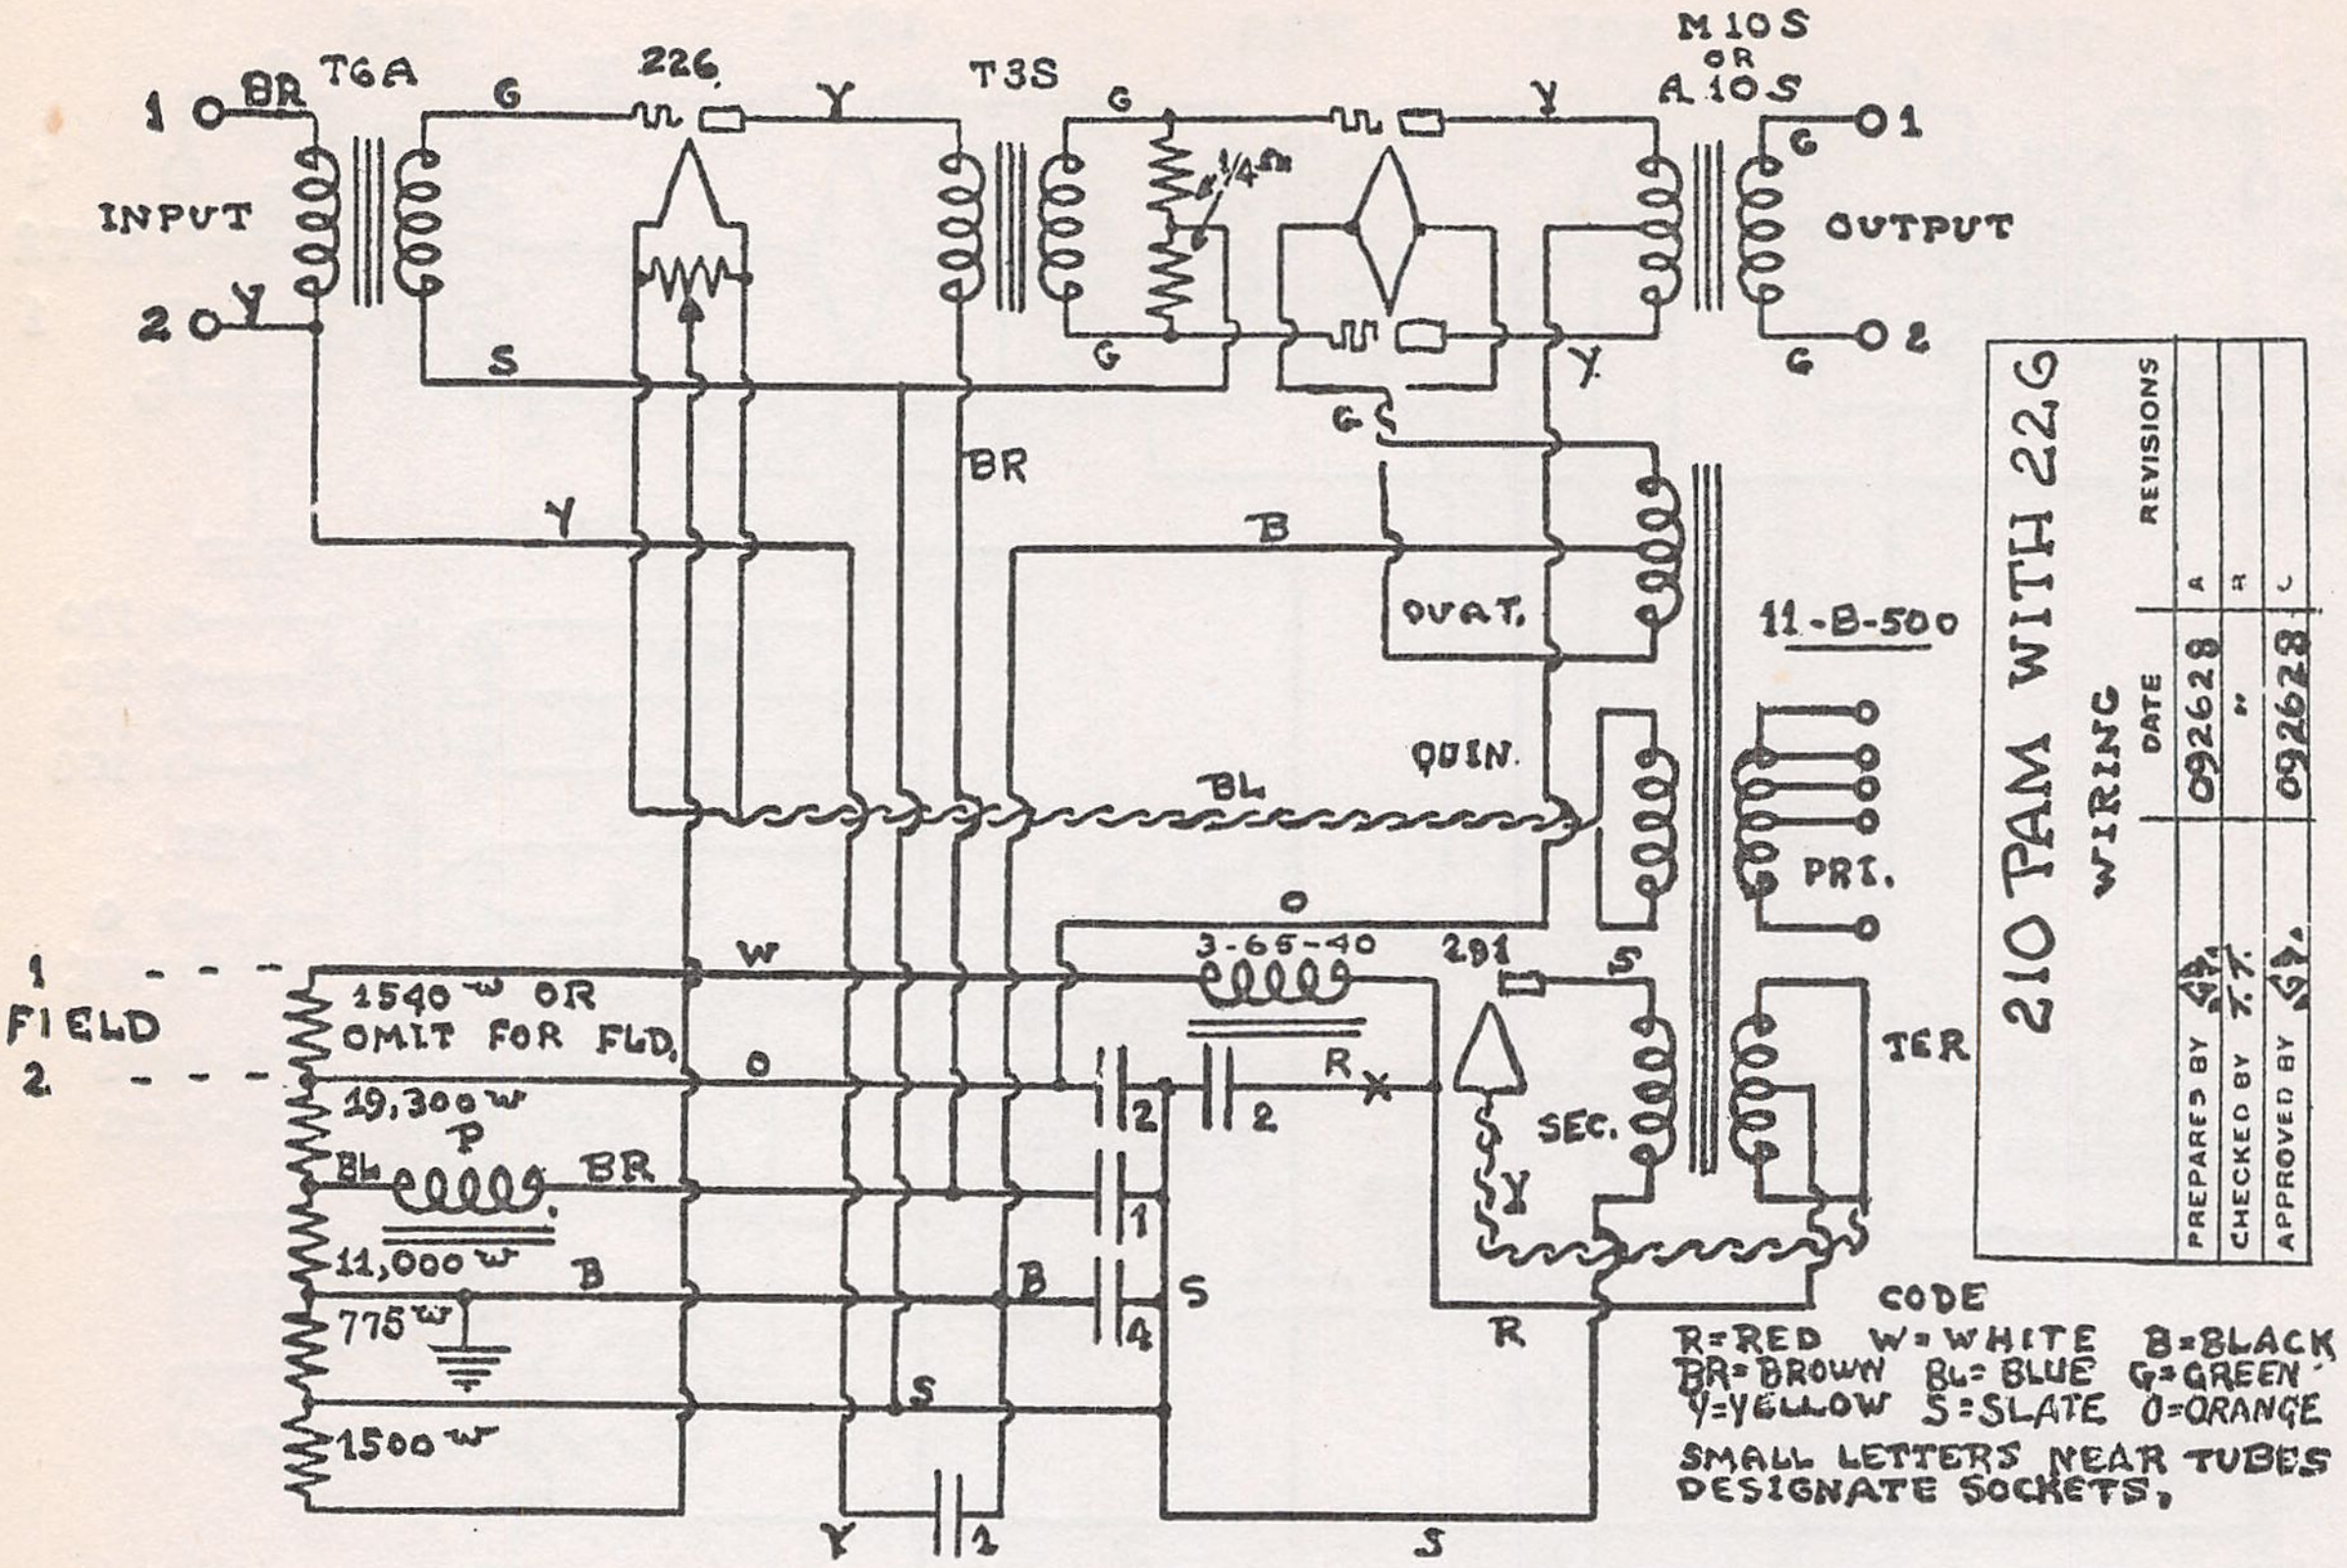
1
BR
T6A
INPUT
2
Y
G
226
Y
T3S
G
1/4Ω
M 10 S
OR
A 10 S
Y
G
1
OUTPUT
G
2
S
G
Y
G
BR
Y
B
QUAT.
11-B-500
QUIN.
BL
PRI.
O
1
FIELD
2
W
1540 W OR
OMIT FOR FLD.
19,300 W
P
BL
BR
11,000 W
B
775 W
1500 W
O
3-65-40
281
S
2
2
R
X
SEC.
Y
1
B
4
S
TER
R
S
Y
1/2
S

CODE
R=RED W=WHITE B=BLACK
BR=BROWN BL=BLUE G=GREEN
Y=YELLOW S=SLATE O=ORANGE
SMALL LETTERS NEAR TUBES DESIGNATE SOCKETS.

210 PAM WITH 22G

WIRING

	DATE	REVISIONS
PREPARED BY	092628	A
CHECKED BY	"	B
APPROVED BY	092628	C

PAM-8 & PAM-18 AMPLIFIER

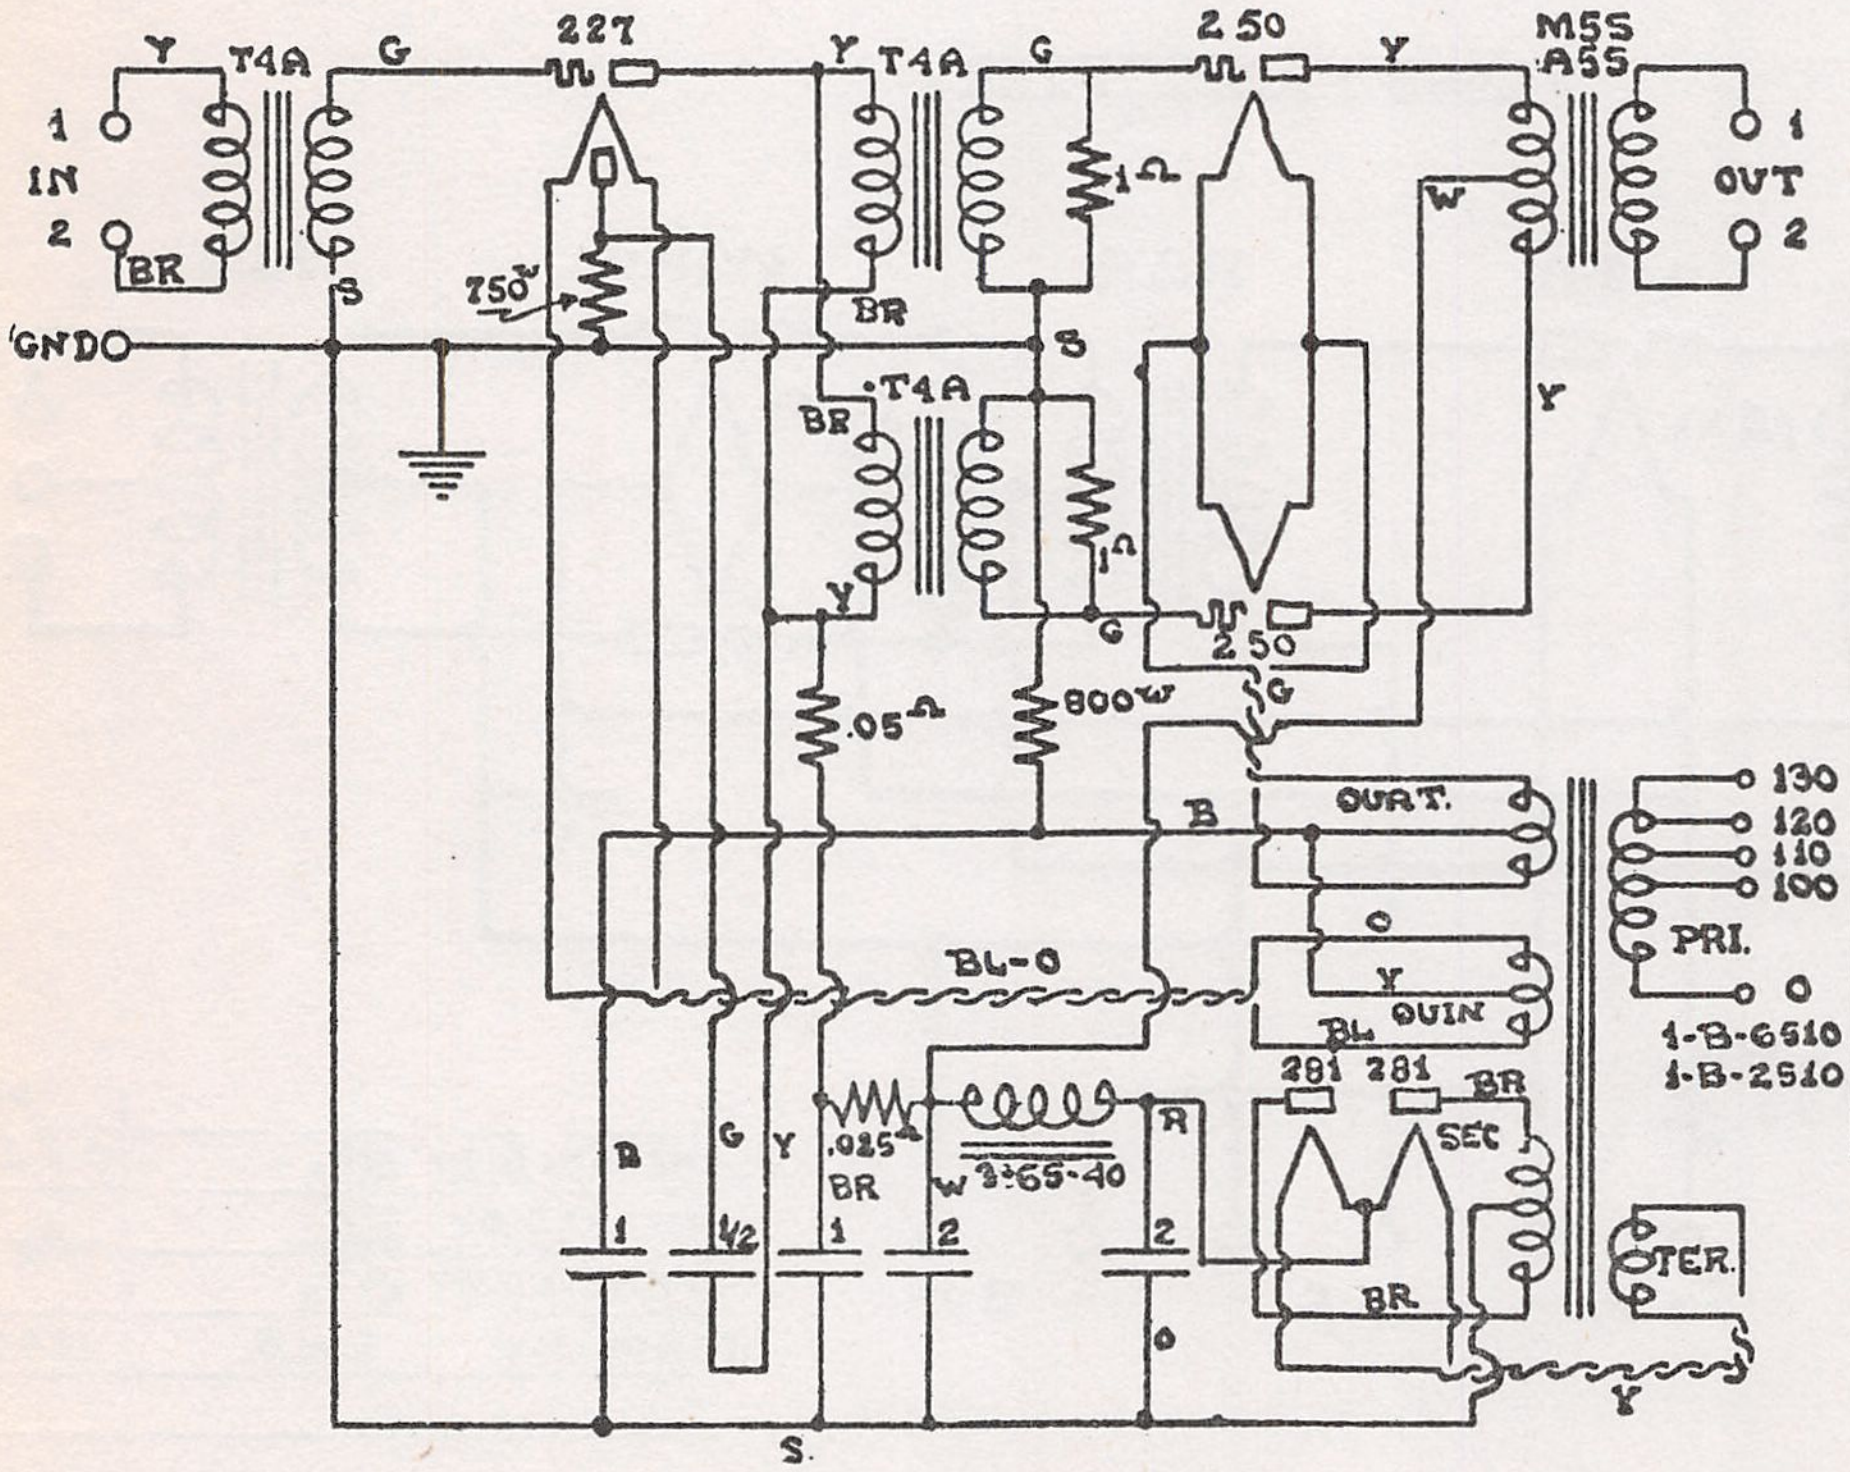
Y
T4A
G
227
Y
T4A
G
2 50
Y
M5S
A5S
1
IN
2
BR
1
OUT
2
S
750 W
1Ω
W
GND
BR
S
T4A
BR
Y
1Ω
Y
Y
G
2 50
G
.05Ω
800 W
B
QUAT.
130
120
110
100
BL-O
O
Y
PRI.
BL
QUIN
O
1-B-6510
1-B-2510
281
281
BR
B
G
Y
.025Ω
BR
W 3-65-40
R
SEC
1
1/2
1
2
2
BR.
TER.
O
S.
Y

	DATE	REVISION
PREPARED BY	040329	A
CHECKED BY	"	B
APPROVED BY	"	C
FORM BY	021429	D
		E
		F

PAM-9 AMPLIFIER

MODEL PAM-11;12,13,14

SAMSON ELECTRIC CO.

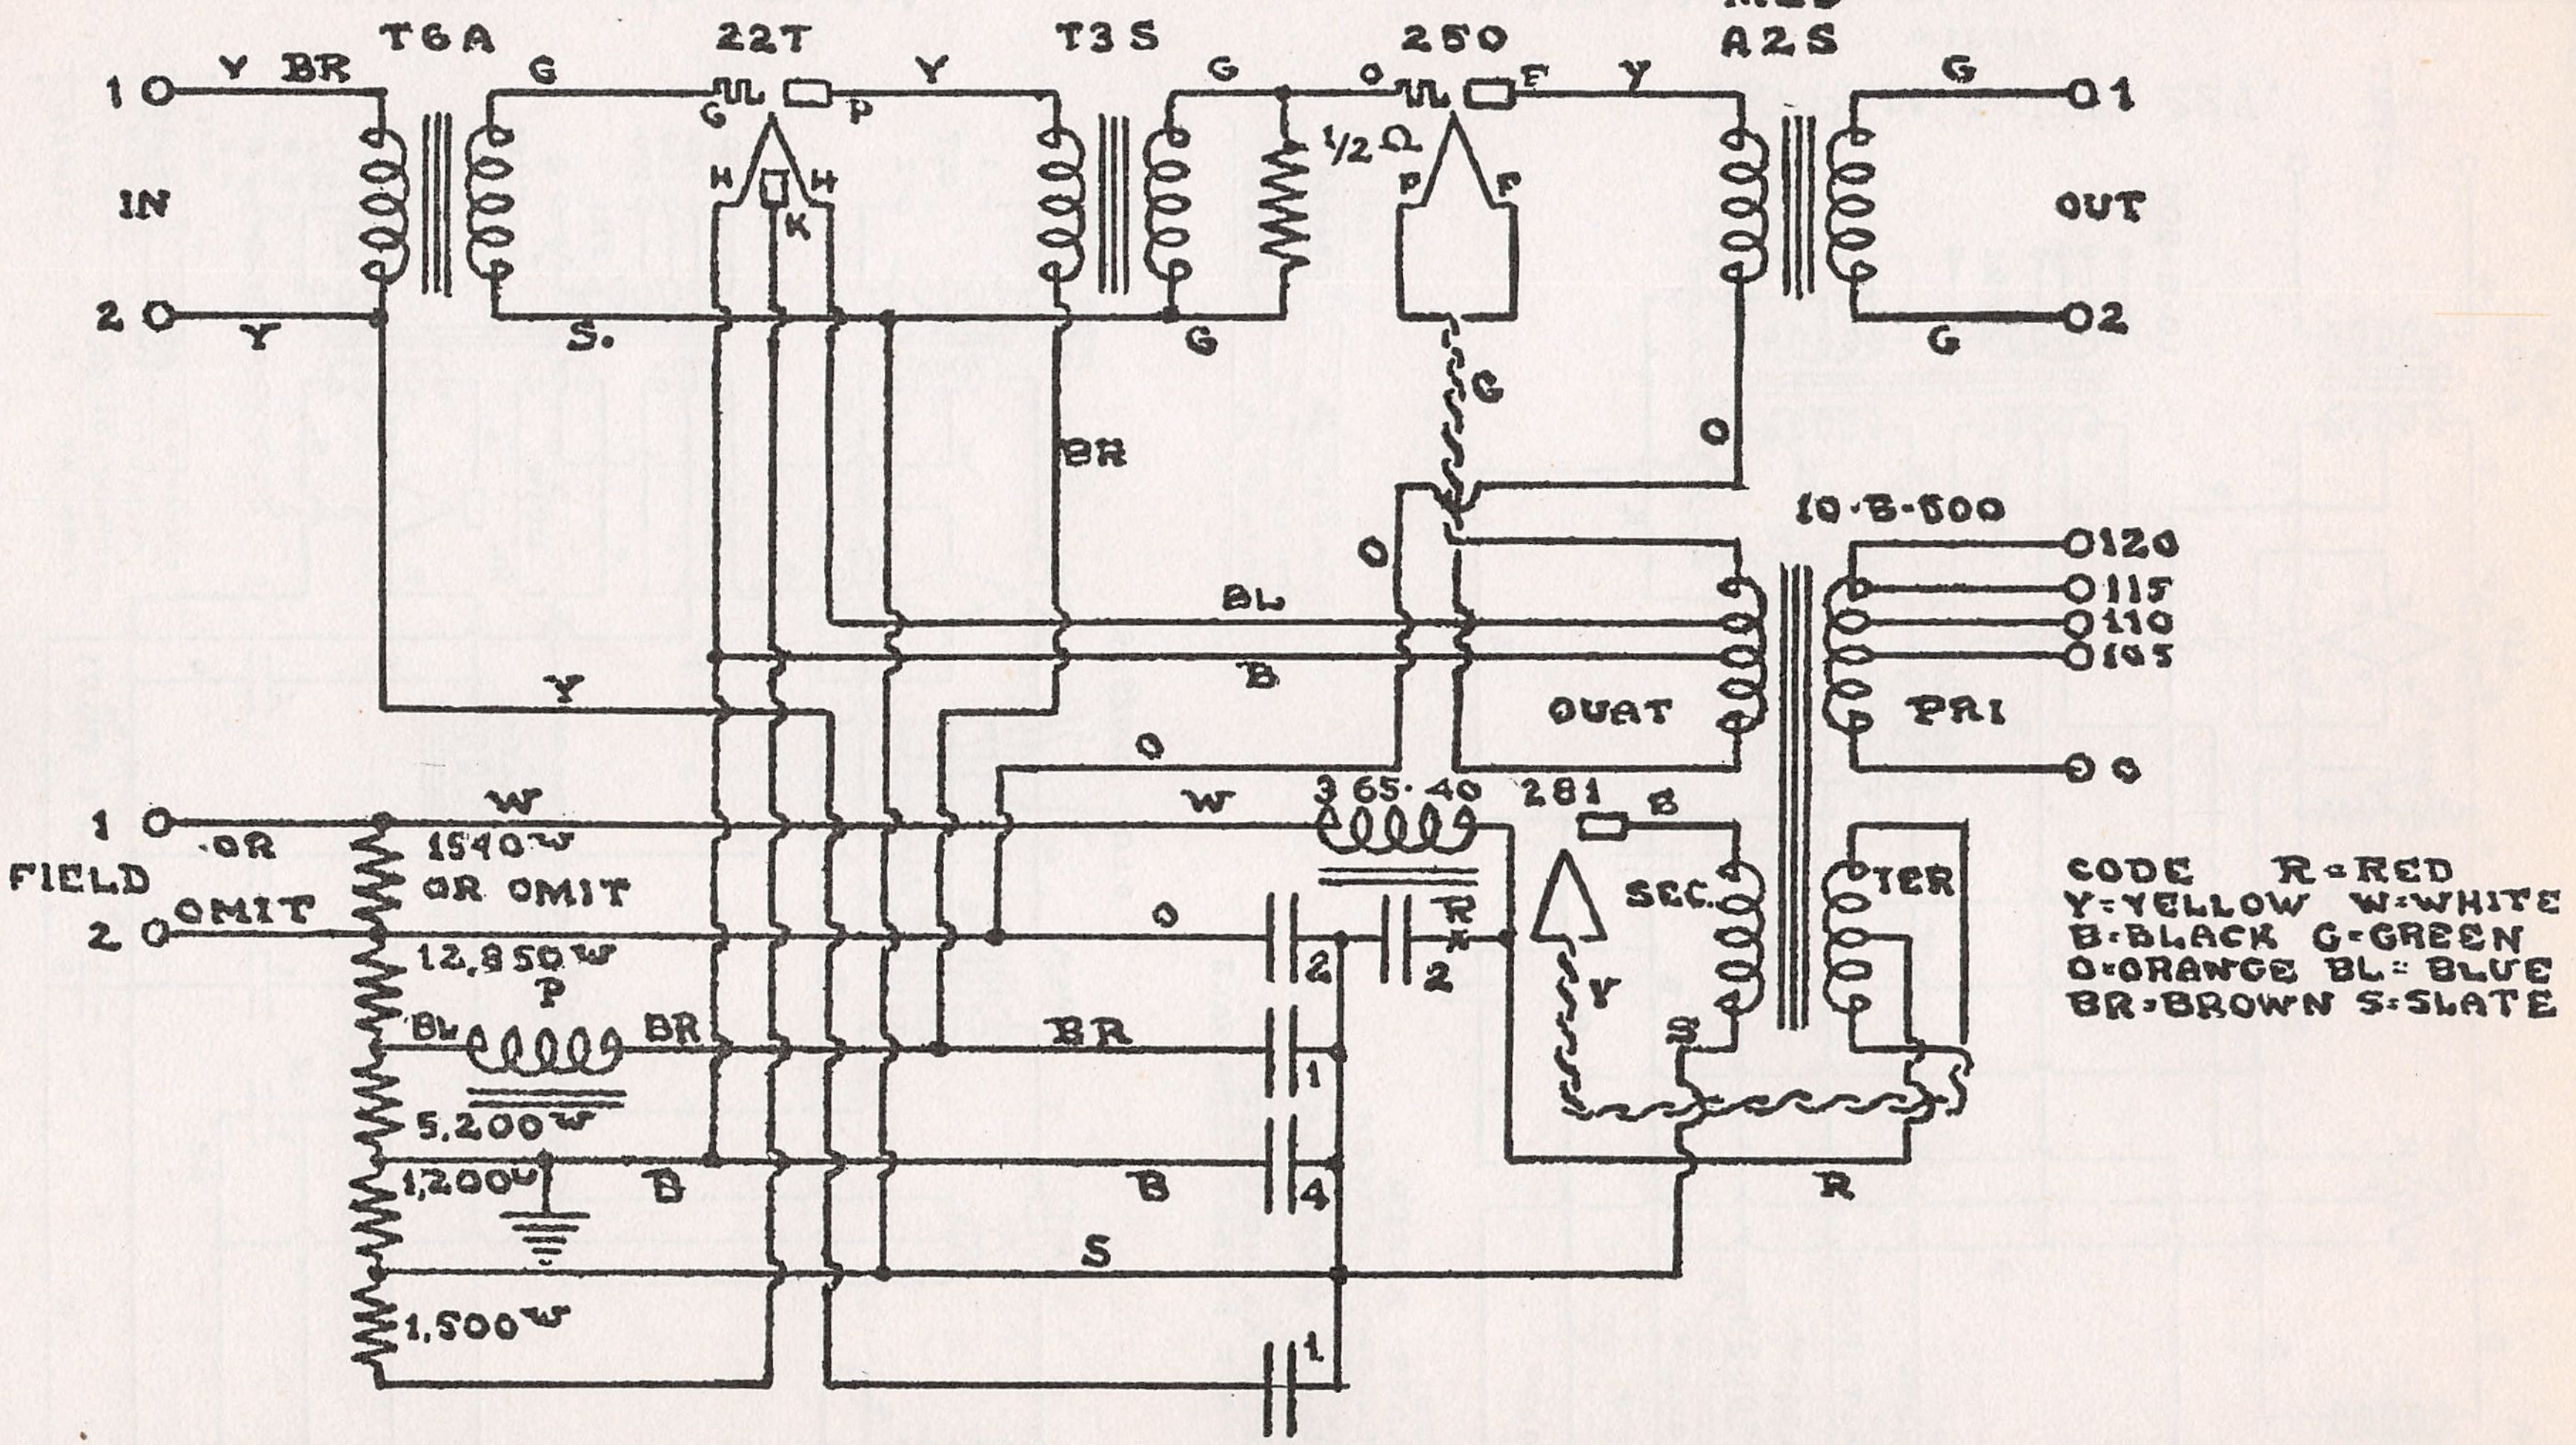
1
2
IN
Y
BR
Y
T6A
G
S.
22T
G
P
H
K
H
Y
T3S
G
G
BR
1/2 Ω
250
O
F
F
P
F
G
Y
M2S
A2S
G
G
OUT
1
2
O
10-B-500
120
115
110
105
0
PRI
QUAT
O
BL
B
Y
O
W
W
365-40
281
B
SEC.
Y
S
TER
R
R
2
2
1
4
1
FIELD
1
2
OR
OMIT
1540W
OR OMIT
12,850W
P
BL
BR
5,200W
1,200W
1,500W
O
BR
B
B
S
CODE R=RED
Y=YELLOW W=WHITE
B=BLACK G=GREEN
O=ORANGE BL=BLUE
BR=BROWN S=SLATE

NOTE: SIMILAR JOB WITH 226 REQUIRES UX SOCKET, HUM CONTROL, AND 11-B-500 TRANSFORMER. SEE DIAGRAM OF 210PAM WITH 226

	DATE		REVISION
PREPARED BY GS.	120728	A	
CHECKED BY T.T.	"	B	
APPROVED BY GS.		C	

PAM-11, 12, 13, 14 AMPLIFIERS

SAMSON ELECTRIC CO.

MODEL PAM-16
MODEL PAM-16-N
MODEL PAM-17
MODEL PAM-17-N

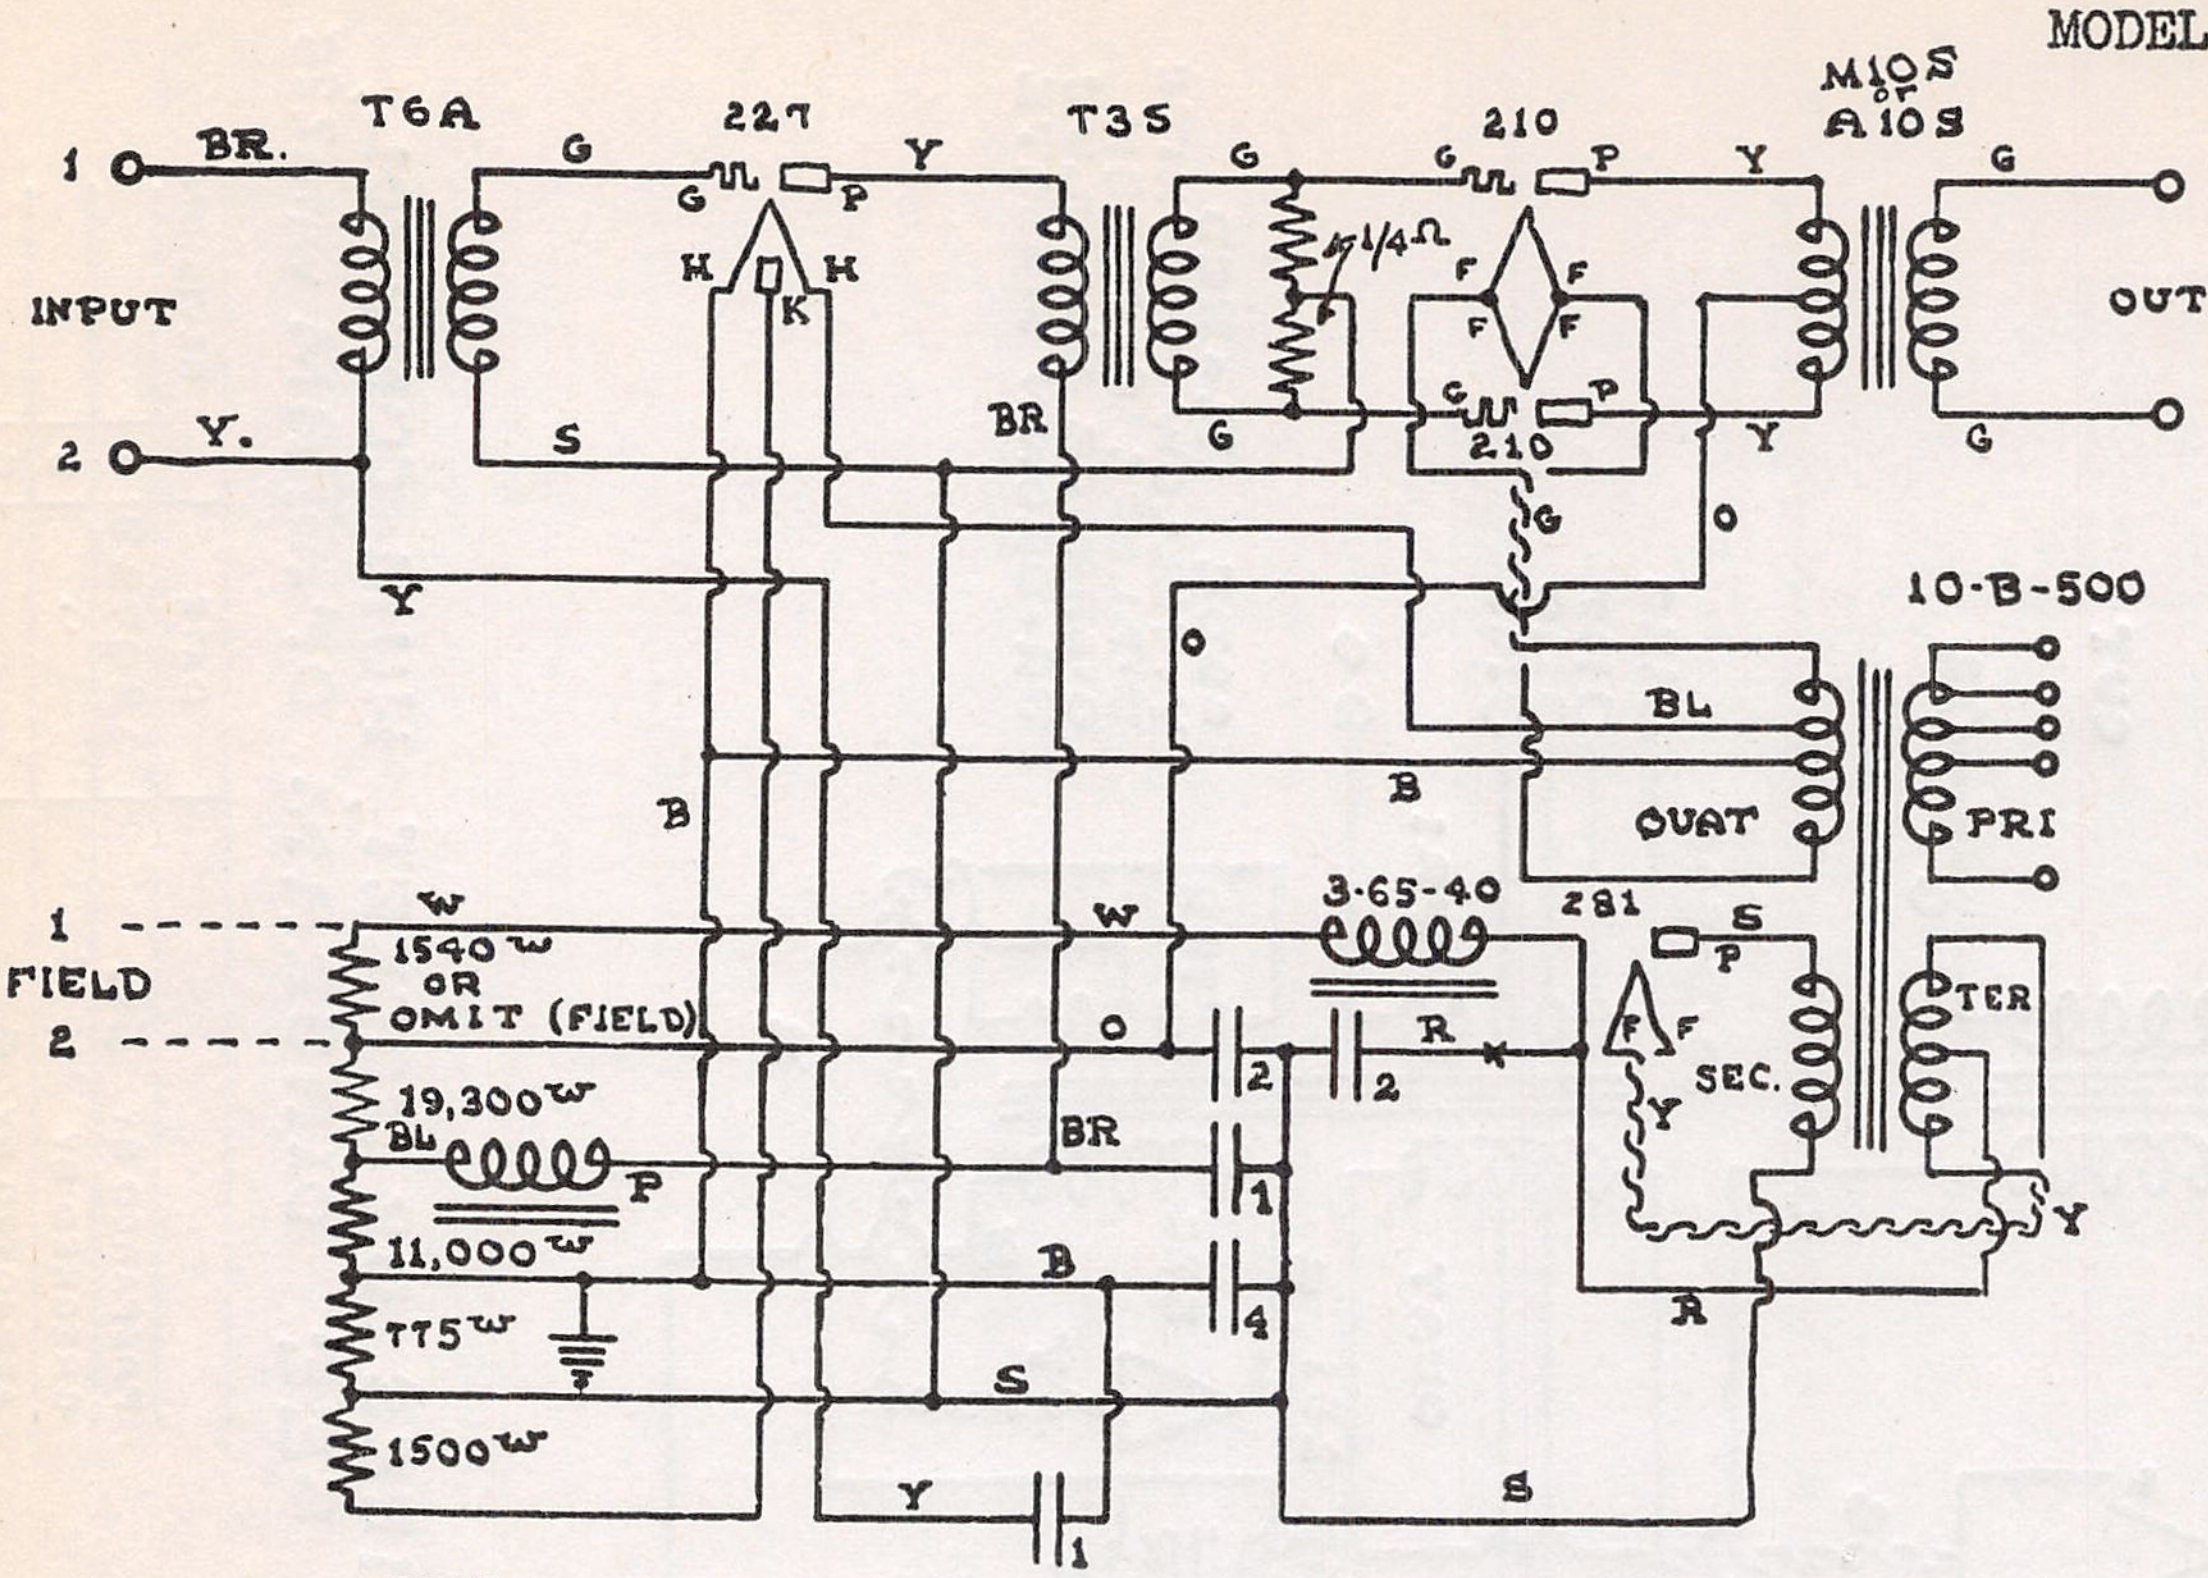
1
BR.
INPUT
2
Y.
T6A
G
S
Y
227
G
P
K
H
H
T35
BR
G
1/4Ω
210
F
F
F
F
G
P
210
G
Y
M10S
or
A10S
G
OUTPUT
G
O
10-B-500
BL
QUAT
PRI
TER
B
B
W
O
BR
B
S
Y
1
FIELD
2
W
1540ʷ
OR
OMIT (FIELD)
19,300ʷ
BL
P
11,000ʷ
775ʷ
1500ʷ
3-65-40
281
S
P
F
F
SEC.
Y
R
2
2
1
4
1
R
S
Y

210 PAM WITH 227.
WIRING
(No Field)
(Field)
PAM-16
PAM-17

CODE
S = SLATE R = RED
Y = YELLOW G = GREEN
B = BLACK BR = BROWN
BL = BLUE O = ORANGE
W = WHITE.

THE SMALL LETTERS NEAR THE TUBES DESIGNATE SOCKET TERMINALS

		DATE
PREPARED BY	GK	092628
CHECKED BY	T.T.	"
APPROVED BY	GK	092628

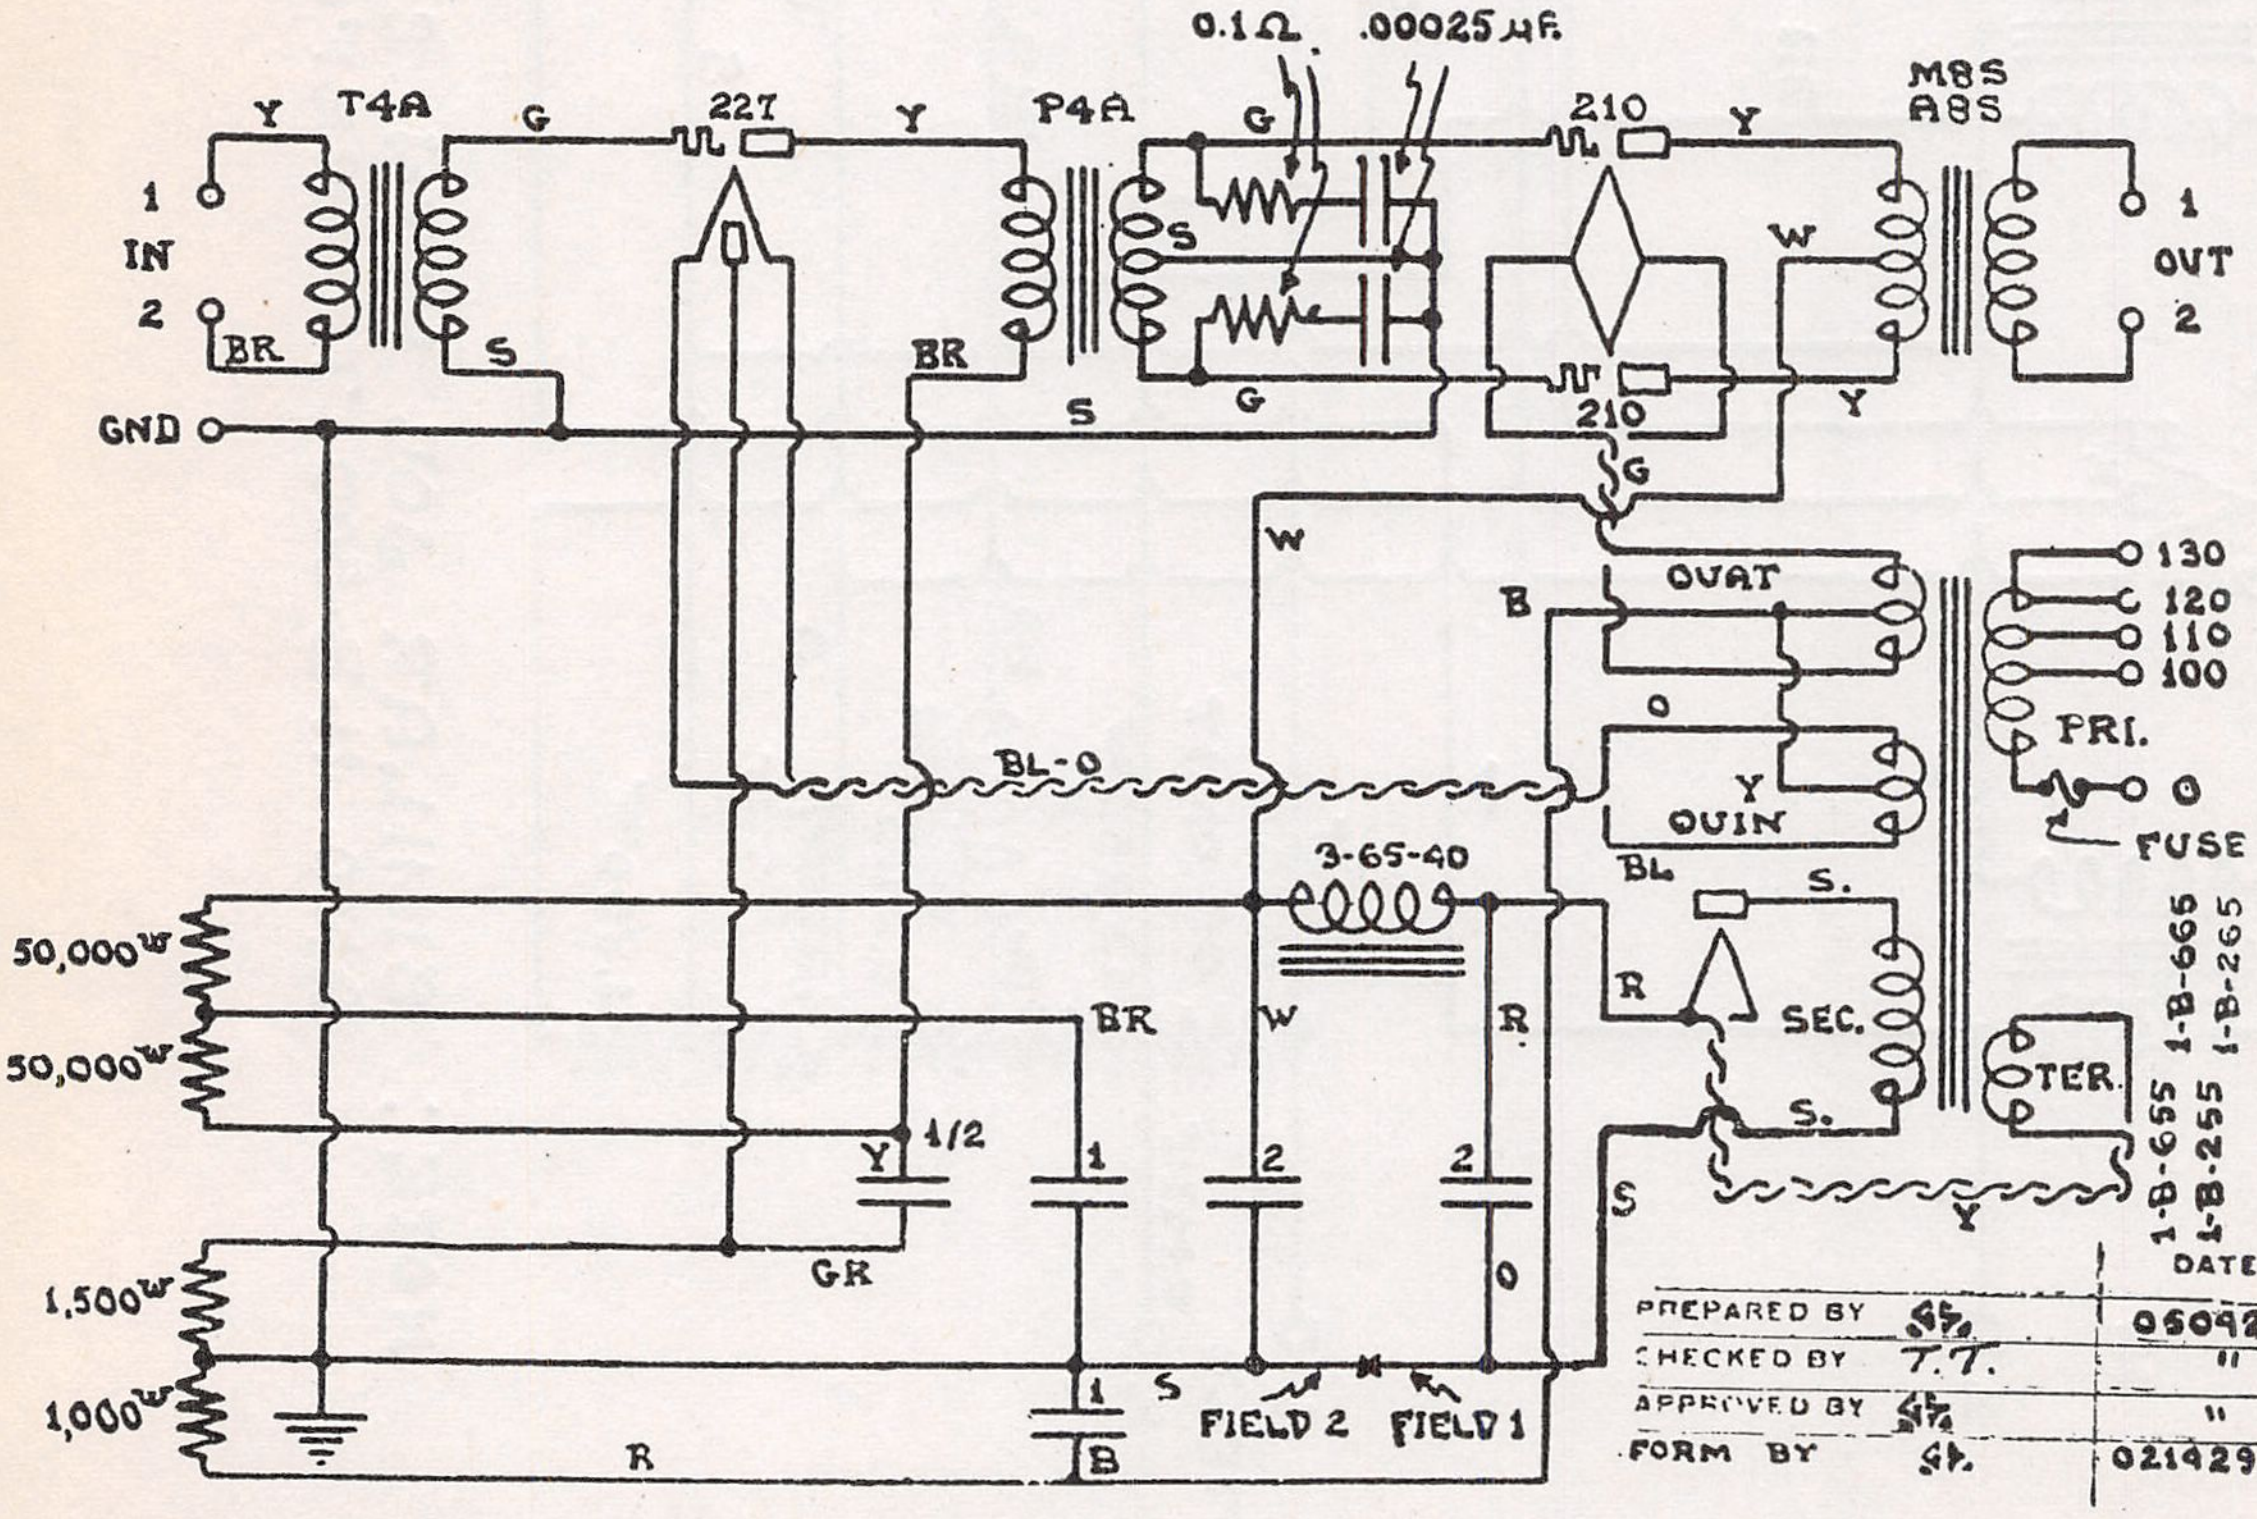
0.1Ω.
.00025 μF.
Y
T4A
G
227
Y
P4A
G
210
Y
M8S
A8S
1
IN
2
BR
S
BR
S
G
S
W
210
Y
G
1
OUT
2
GND
W
B
O
QUAT
Y
QUIN
BL
130
120
110
100
PRI.
0
FUSE
BL-O
3-65-40
S.
R
SEC.
S.
TER.
BR
W
R
50,000ʷ
50,000ʷ
Y
1/2
1
2
2
GR
O
S
Y
1,500ʷ
1,000ʷ
1
B
S
FIELD 2
FIELD 1
R
1-B-655 1-B-665
1-B-255 1-B-265

(No Field)
(Field)
PAM-16-N
PAM-17-N

		DATE
PREPARED BY	GK	060929
CHECKED BY	T.T.	"
APPROVED BY	GK	"
FORM BY	GK	021429

SAMSON ELECTRIC CO.

MODEL PAM-19-N
MODEL PAM-19-Q

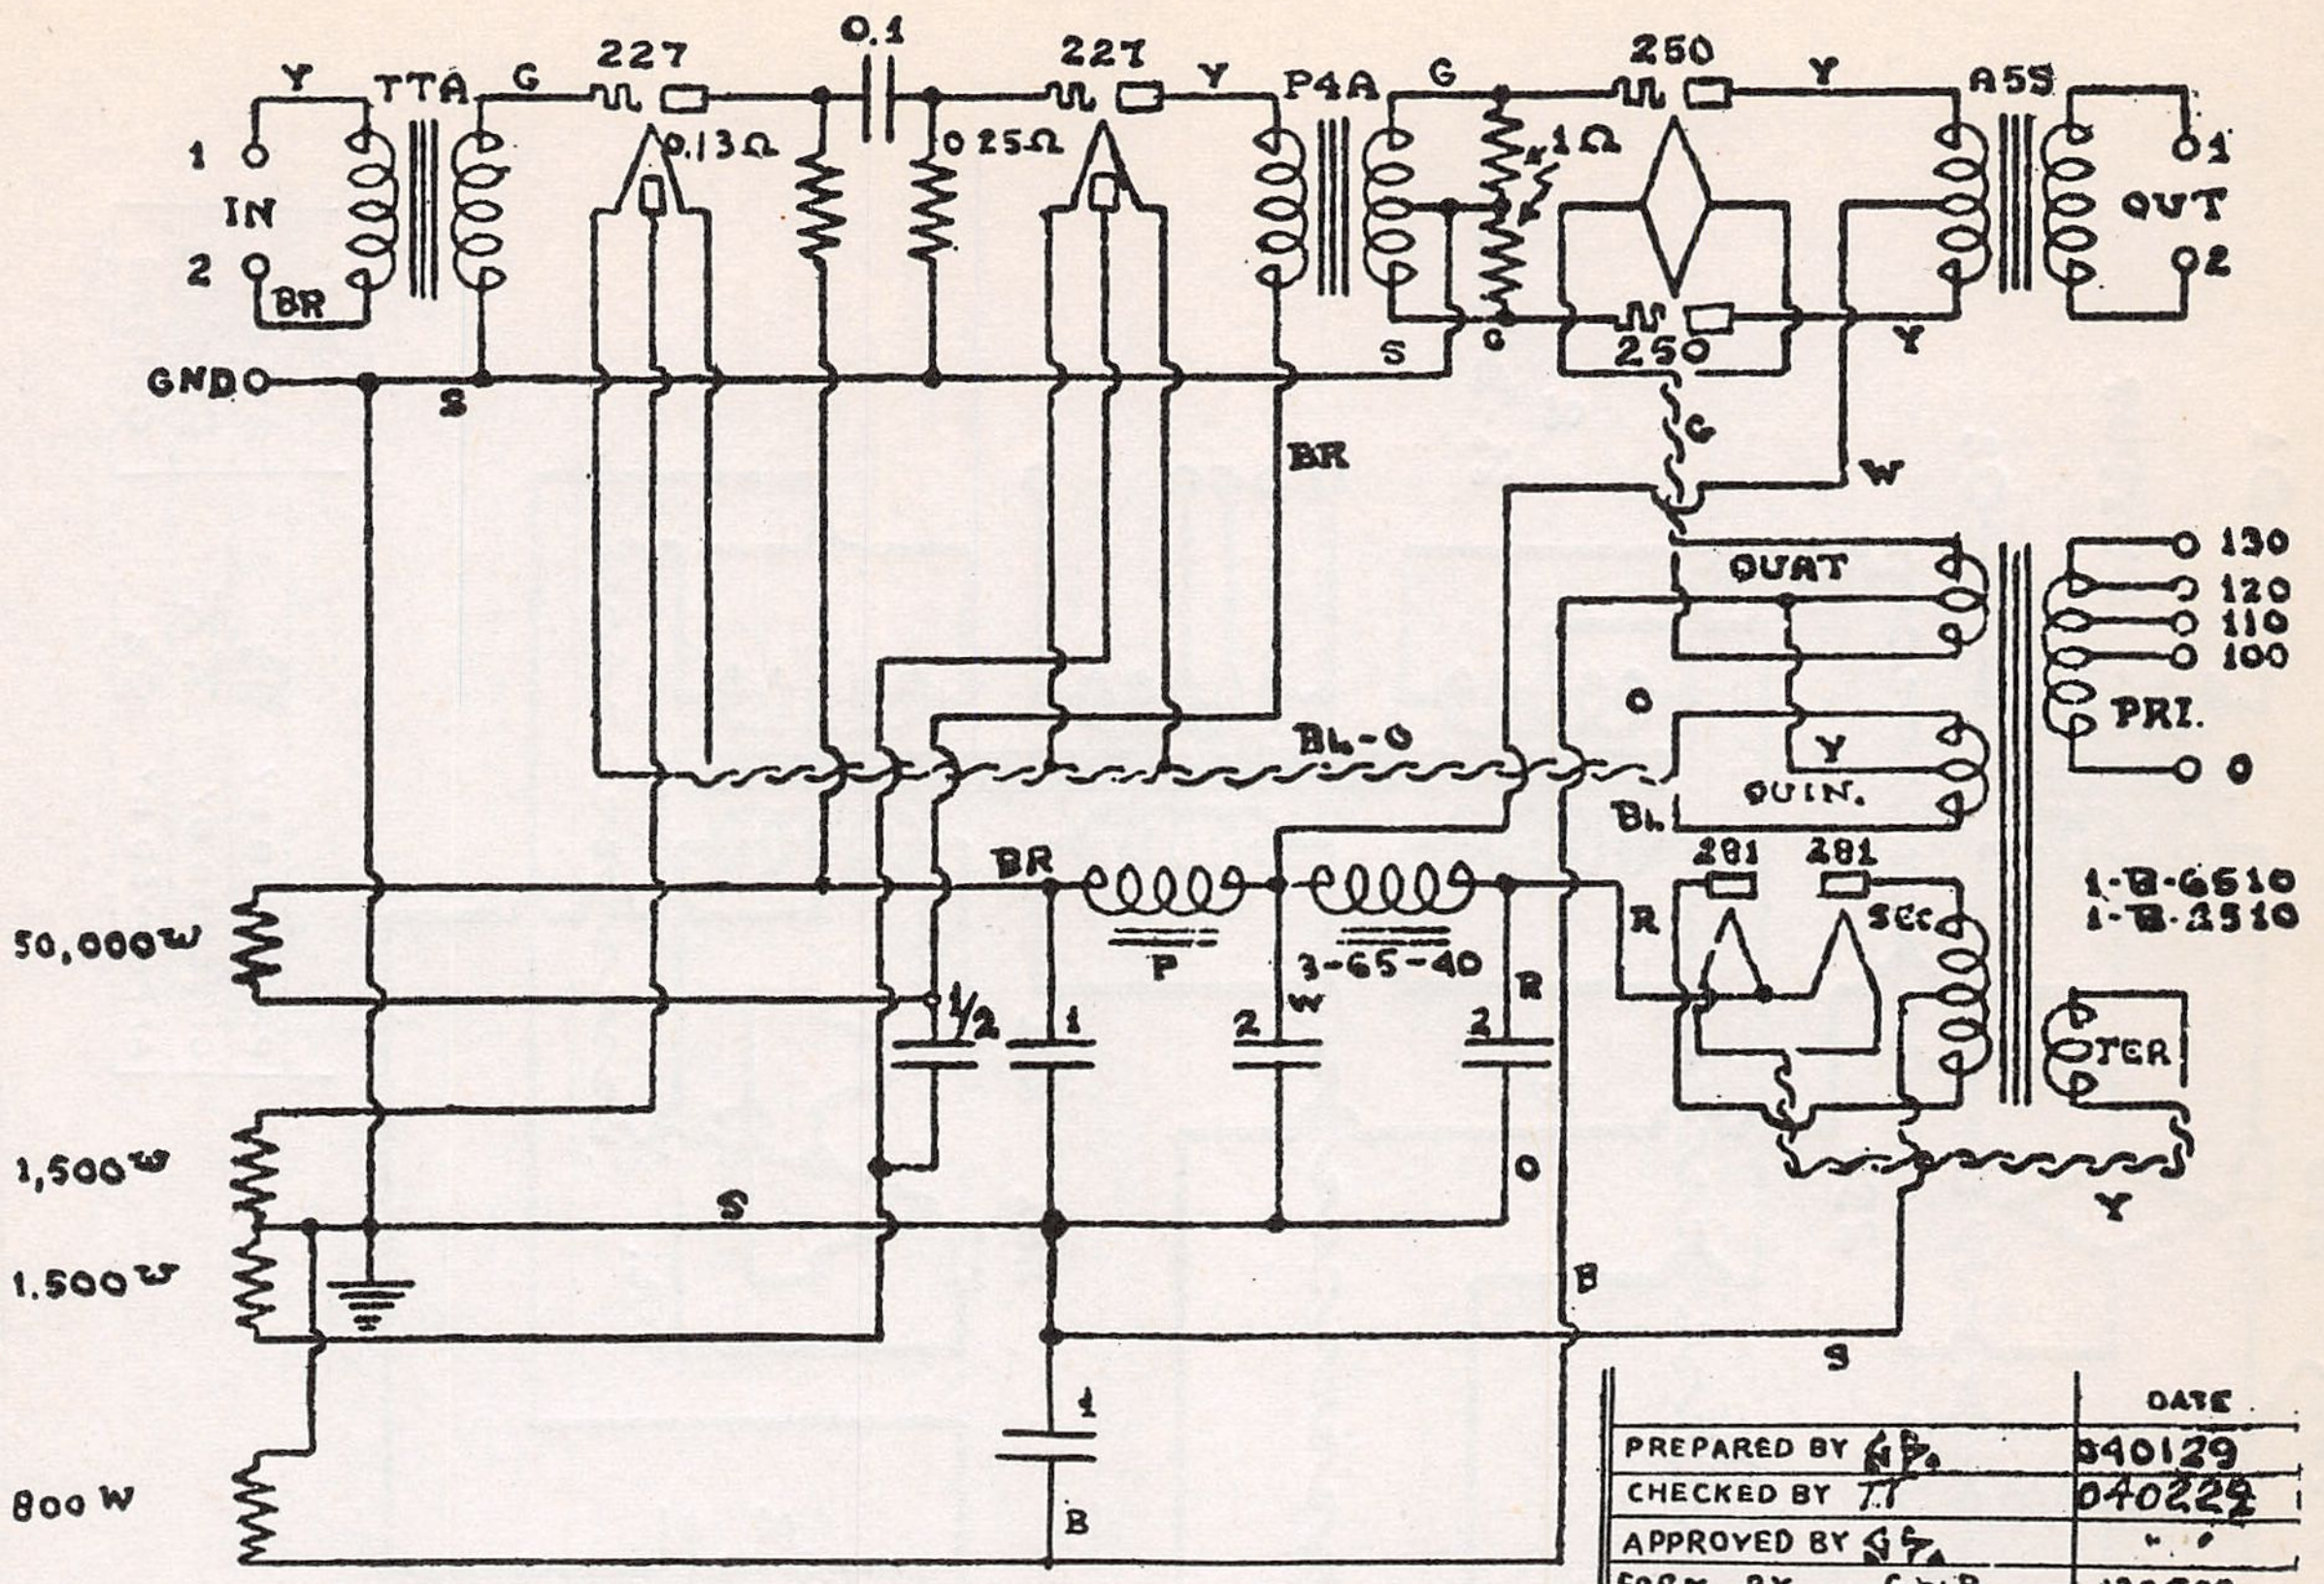
Y
TTA
G
227
0.1
227
Y
P4A
G
250
Y
A55
1
IN
2
BR
.13Ω
.25Ω
1Ω
OUT
1
2
GND
S
S
O
250
Y
BR
G
W
QUAT
130
120
110
100
PRI.
0
O
Y
BL-O
BL
QUIN.
BR
281
281
50,000W
P
3-65-40
R
R
SEC.
1-B-6510
1-B-2510
½
1
2
W
2
TER
1,500W
1,500W
S
O
Y
B
S
1
800 W
B

PAM-19-N AMPLIFIER.

	DATE
PREPARED BY G.S.	040129
CHECKED BY T.T	040229
APPROVED BY G.S.	" "
FORM BY G.W.B	120529

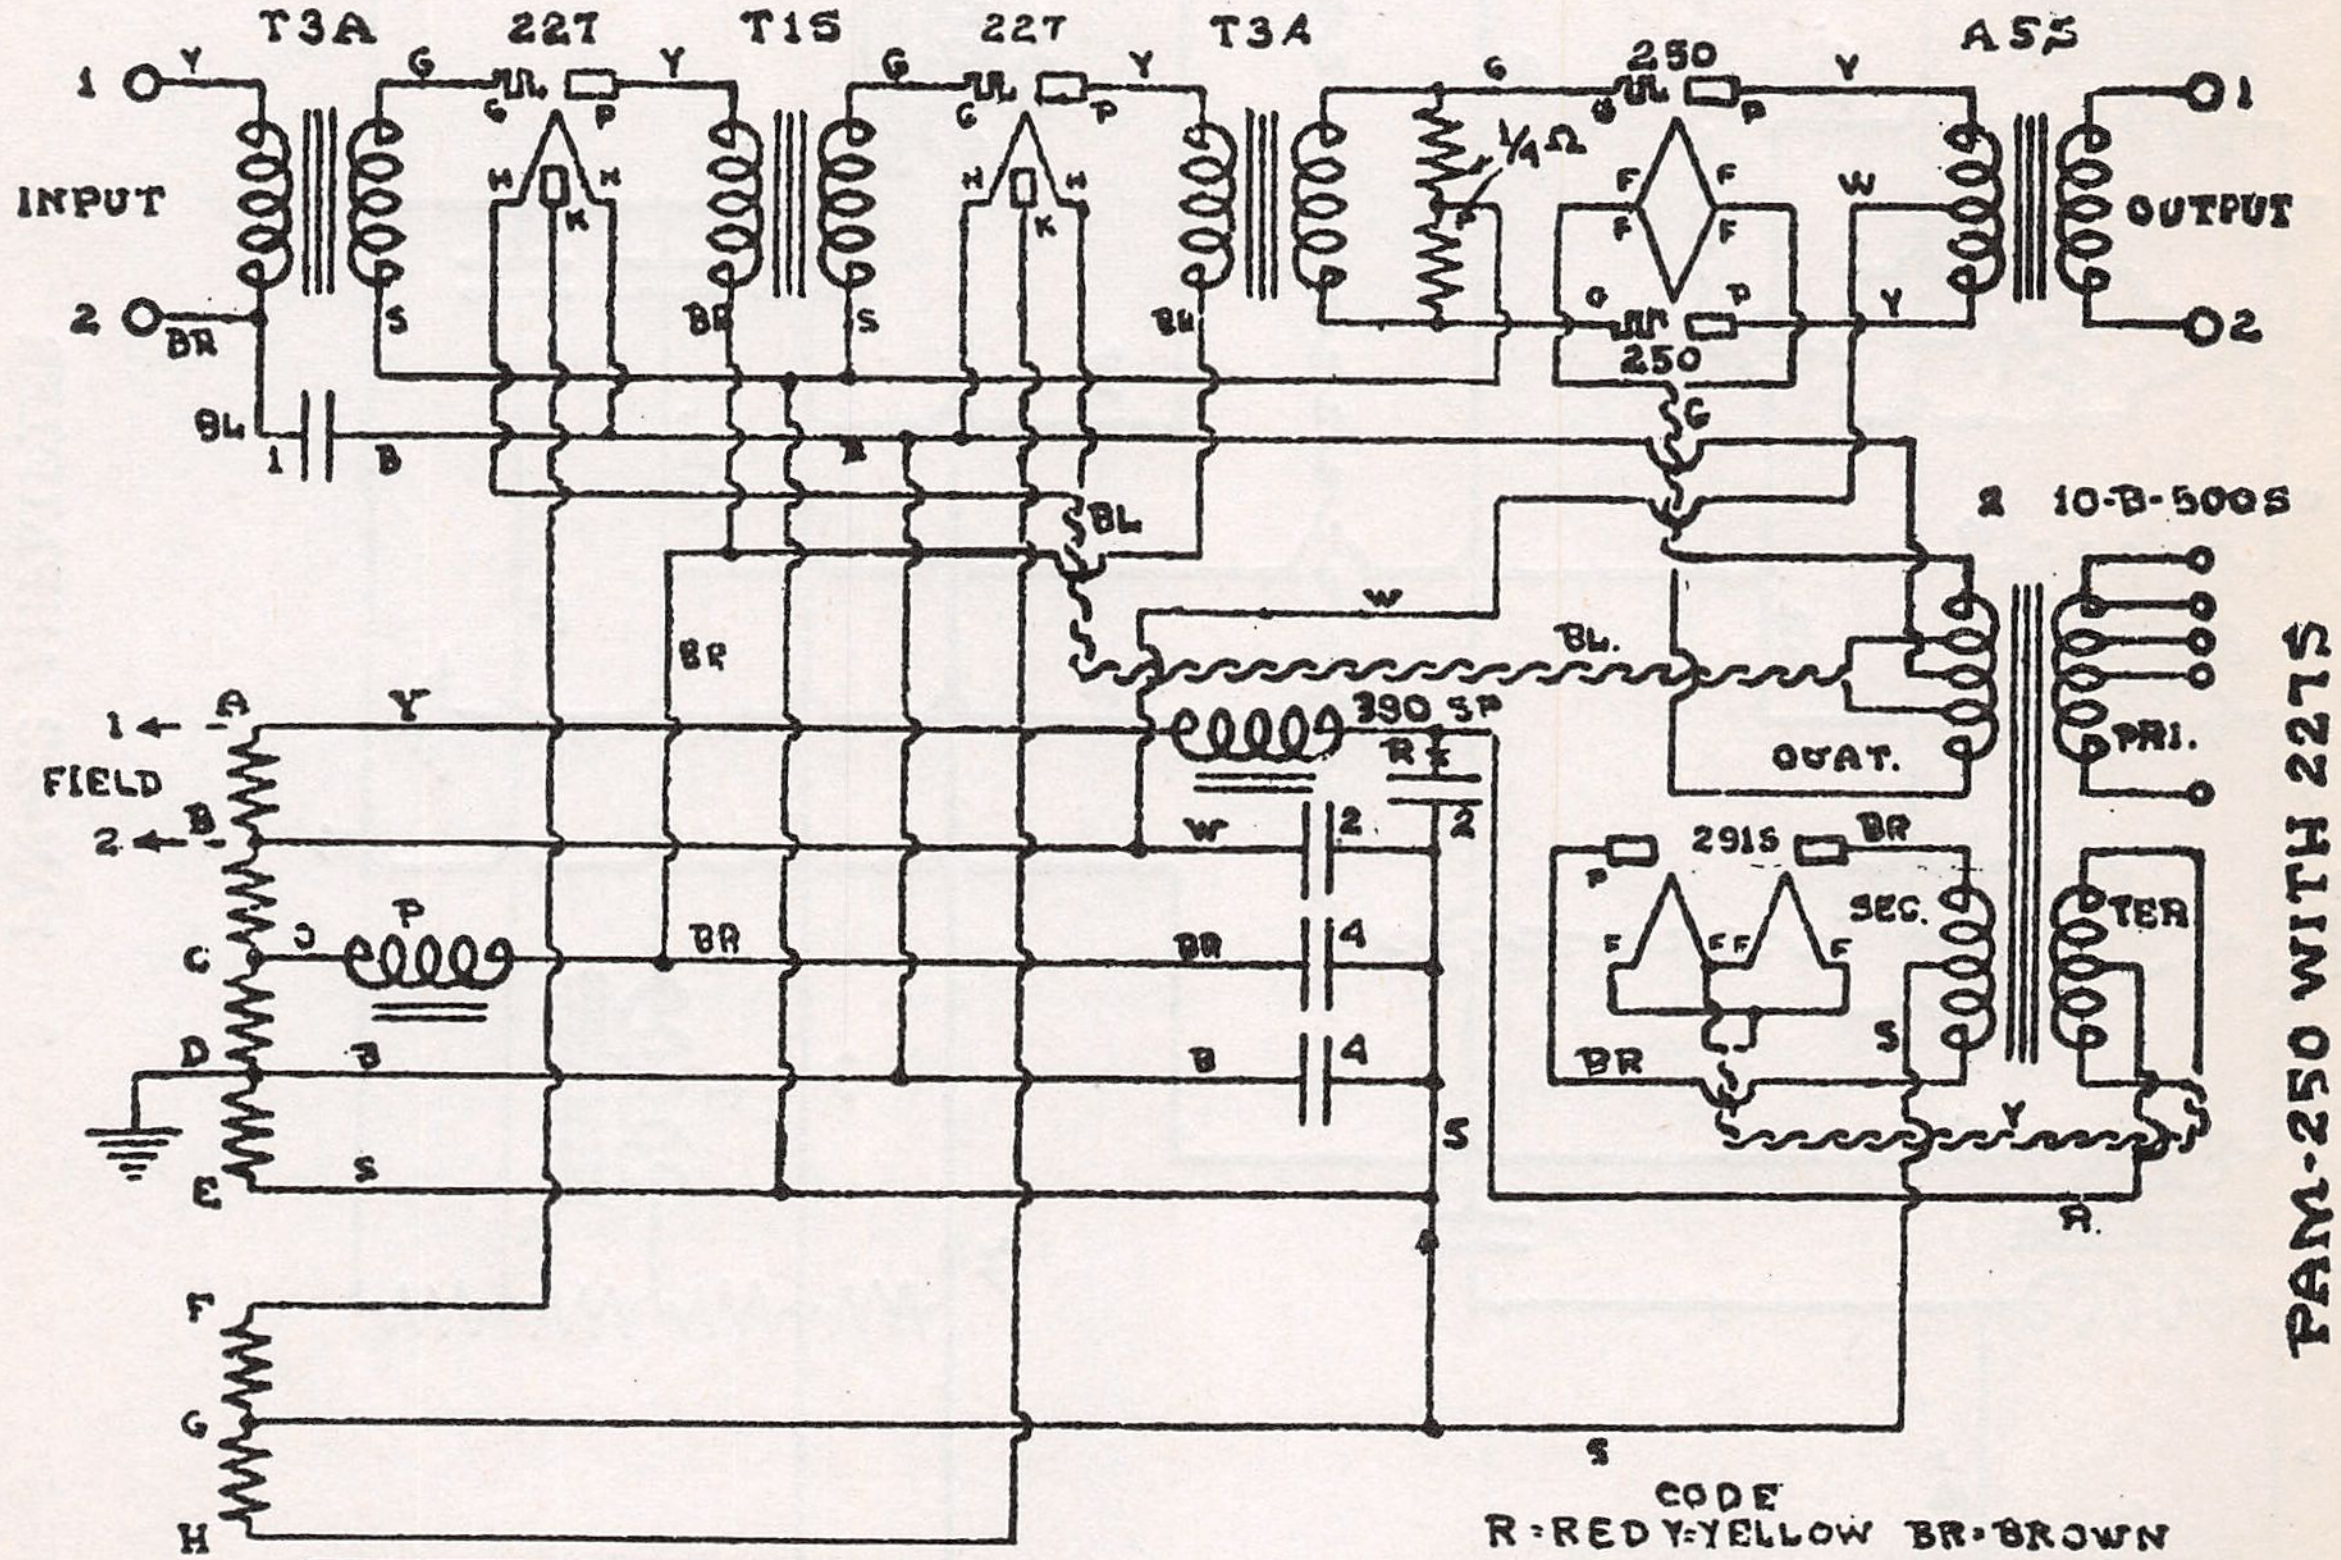
T3A
227
T15
227
T3A
250
A55
1
Y
G
P
Y
G
G
P
Y
G
P
Y
INPUT
H
K
H
H
K
H
F
F
F
F
W
OUTPUT
1
2
2
BR
S
BR
S
BL
G
P
250
Y
BL
1
B
B
G
BL
2
10-B-500S
W
BL
BR
1
A
Y
FIELD
2
B
390 SP
R
OUAT.
PRI.
W
2
2
291S
BR
C
P
BR
BR
4
P
F
FF
F
SEC.
TER
D
B
B
4
BR
S
E
S
S
Y
R
F
G
S
H

PAM-250 WITH 227S
PAM-19-Q AMPLIFIER

	DATE
PREPARED BY GS	093028
CHECKED BY T.T	"
APPROVED BY GS	093028

CODE
R=RED Y=YELLOW BR=BROWN
W=WHITE BL=BLUE G=GREEN
O=ORANGE B=BLACK S=SLATE

THE SMALL LETTERS NEAR TUBES DESIGNATE SOCKET TERMINALS.

SEE OTHER PRINTS FOR DETAILS

MODEL PAM-22

SAMSON ELECTRIC CO.

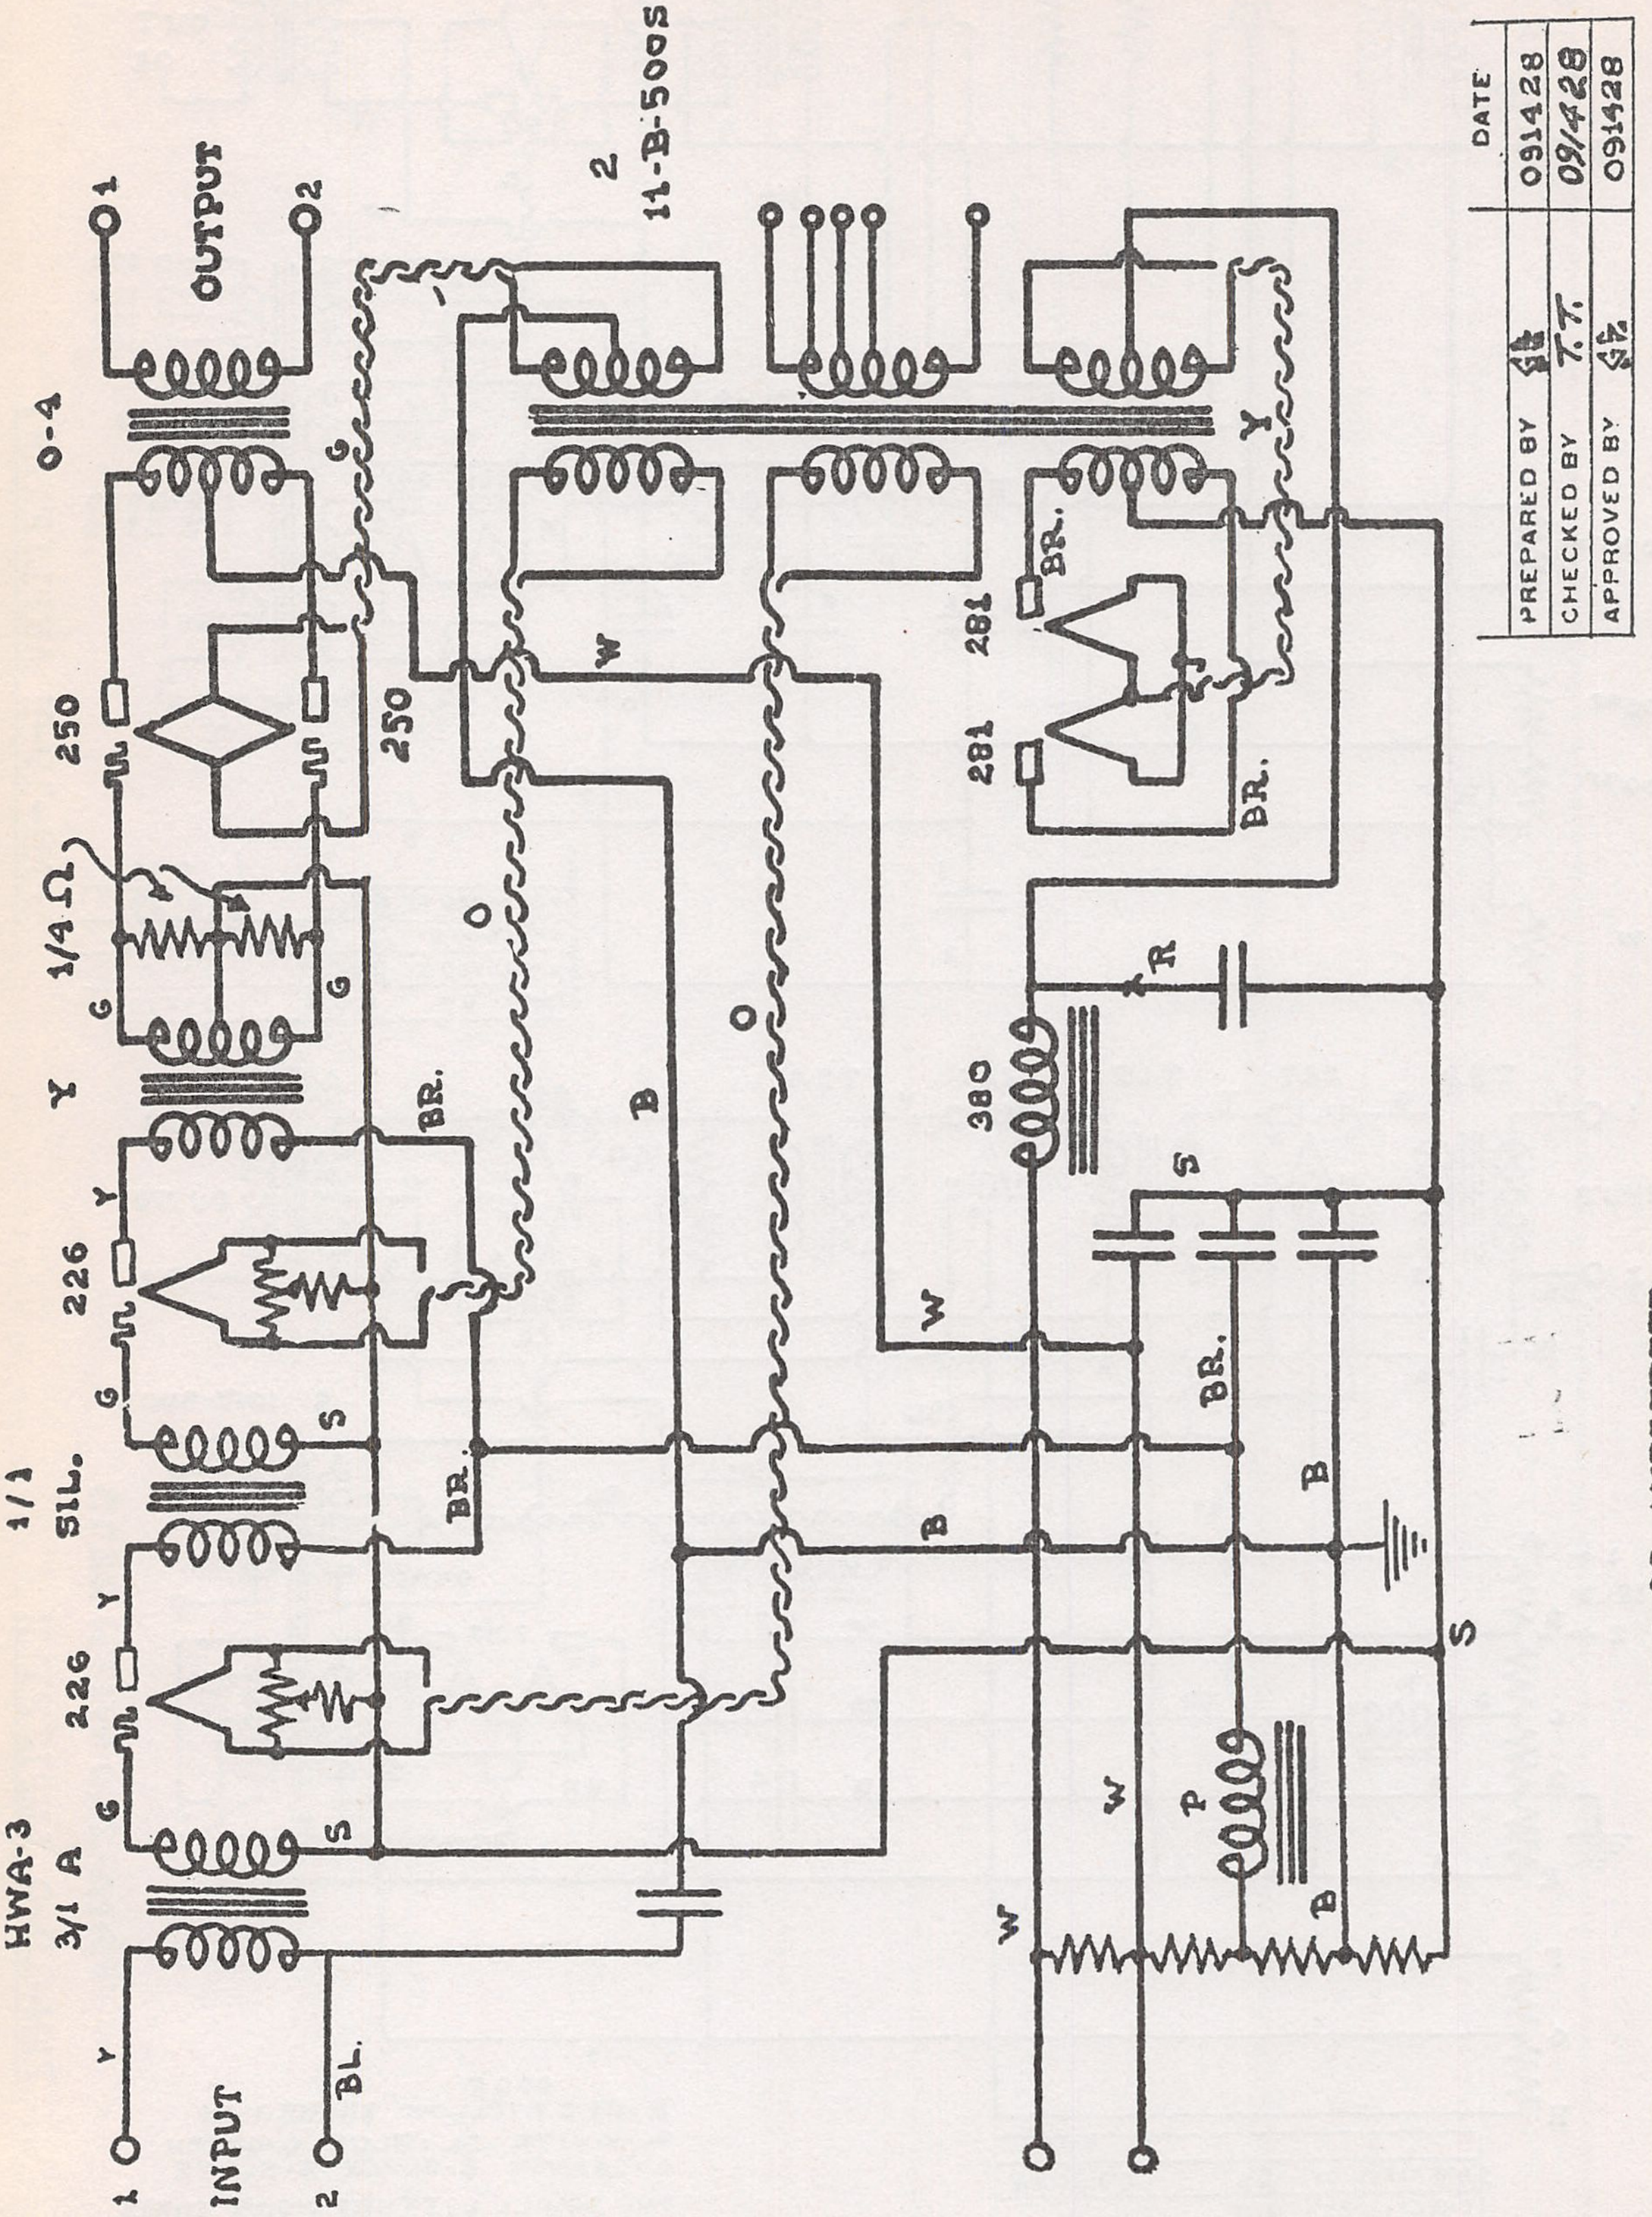
INPUT
1
2
Y
BL.
HWA-3
3/1 A
G
S
226
Y
1/1
SIL.
BR.
G
S
226
Y
Y
G
1/4 Ω
G
250
250
0-4
G
OUTPUT
1
2
2
11-B-500S
W
O
O
B
BR.
281
281
BR.
Y
380
R
S
W
BR.
B
B
S
W
P
B
W

		DATE
PREPARED BY	SK	091428
CHECKED BY	T.T.	09/428
APPROVED BY	SK	091428

PAM-22 AMPLIFIER

SAMSON ELECTRIC CO.

MODEL PAM-23
MODEL PAM-24
MODEL PAM-25
MODEL PAM-25-D

PAM-23, 24, 25 & 25-D AMPLIFIERS

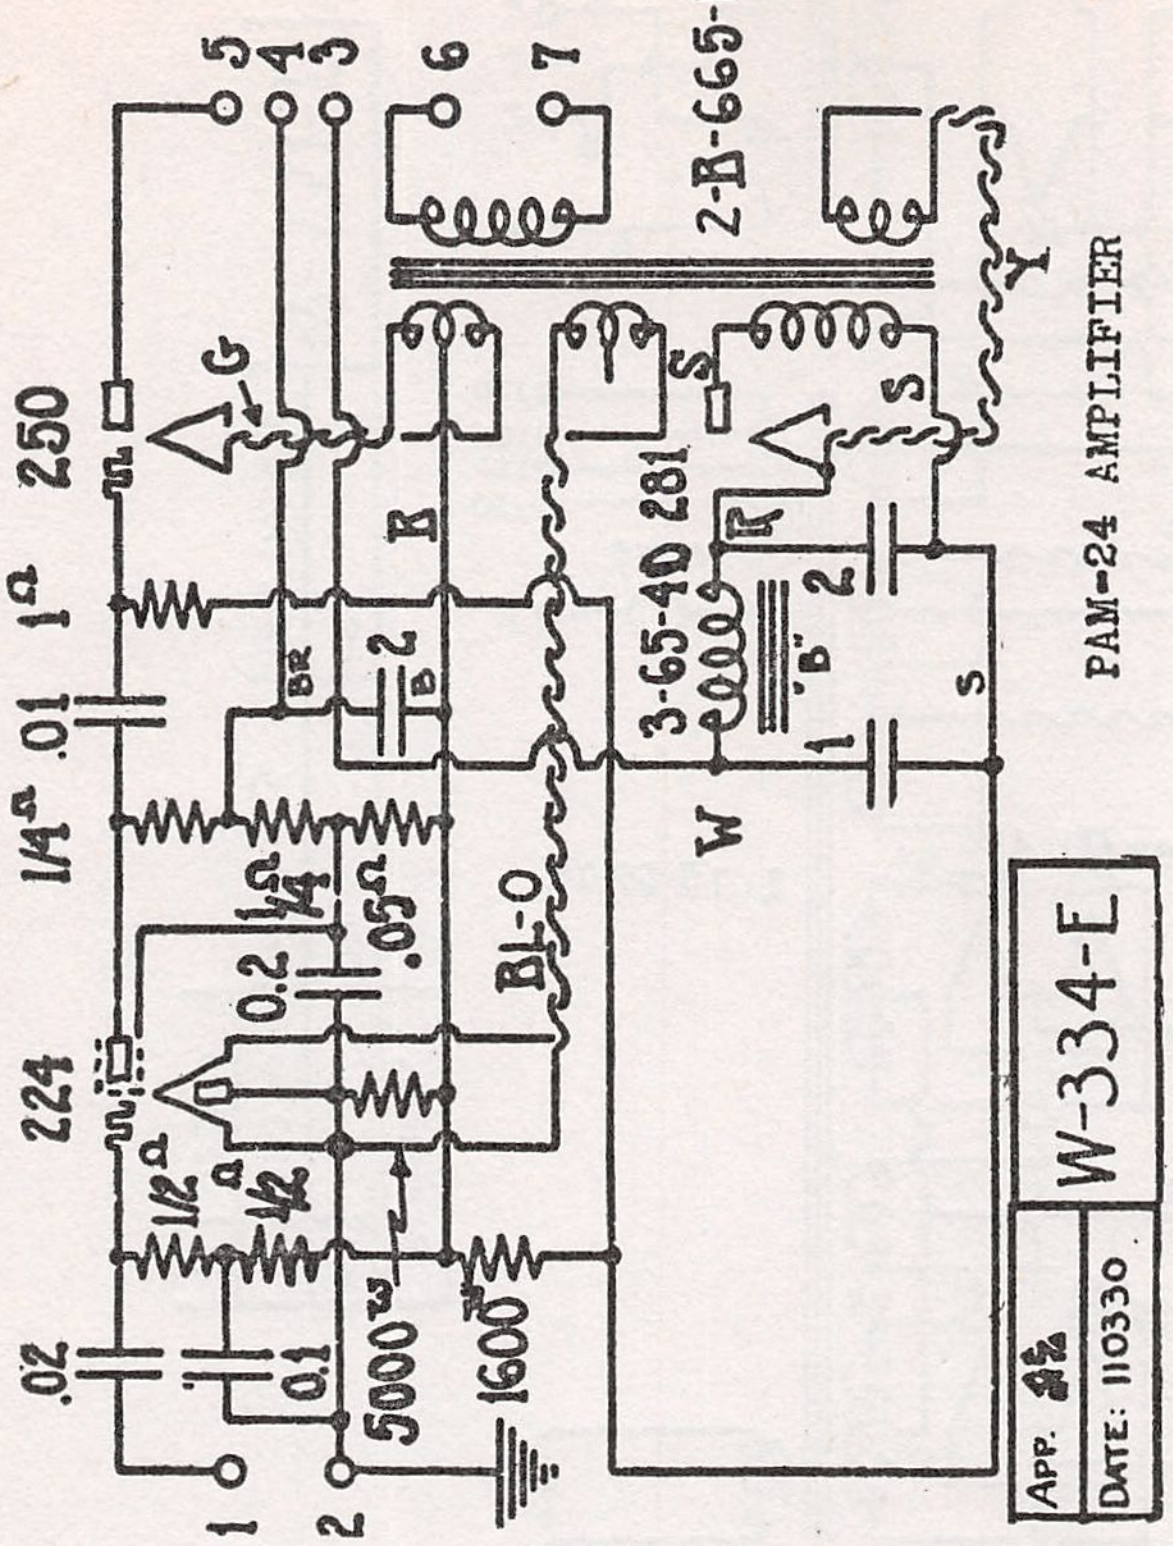
1
2
.02
0.1
5000Ω
1600Ω
1/2 MΩ
1/2 MΩ
224
0.2
1/4 MΩ
.05 MΩ
1/4 MΩ
.01
1 MΩ
250
G
BR
2
B
BL-O
W
3-65-40
281
"B"
1
2
R
S
S
S
2-B-665-D
Y
5
4
3
6
7
W-334-E
APP.
DATE: 110330

PAM-24 AMPLIFIER

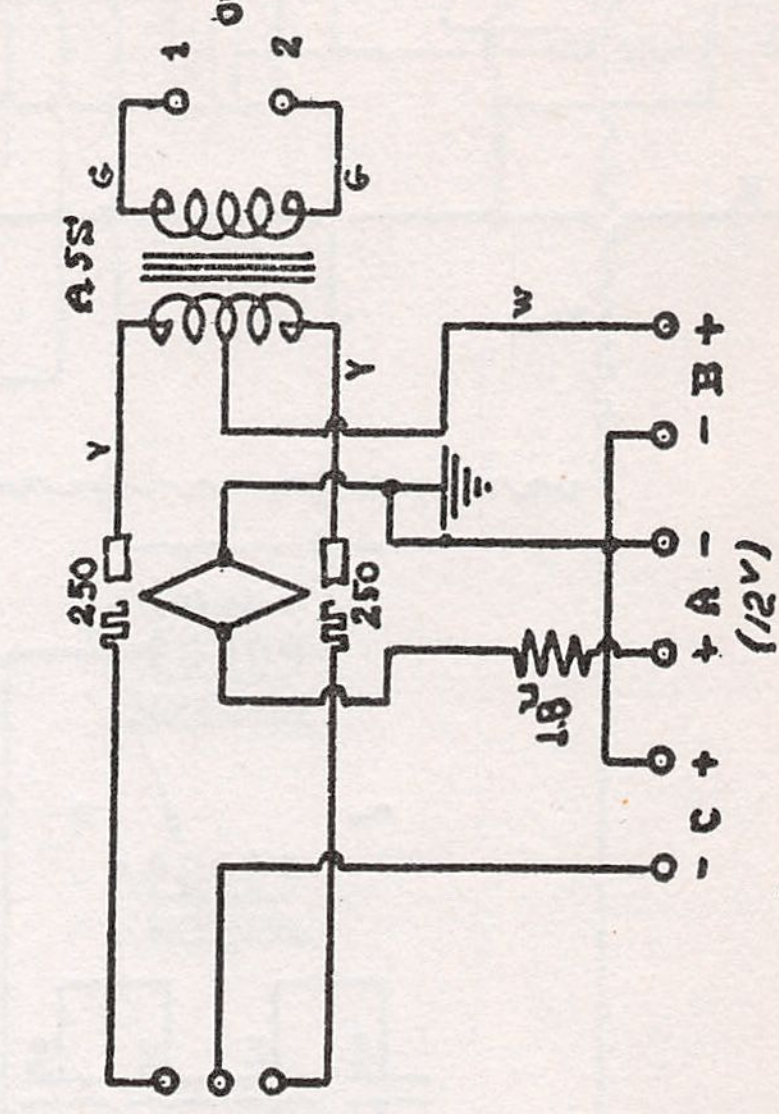
IN
1
2
1
250
UL
250
UL
Y
ASS
G
G
OUT
1
2
W
Y
1.8Ω
- C +
+ A -
(12V)
- B +

	DATE	REVISIONS
PREPARED BY	052129	A
CHECKED BY	"	B
APPROVED BY	052129	C
FORM BY	021429	D

PAM-25-D AMPLIFIER

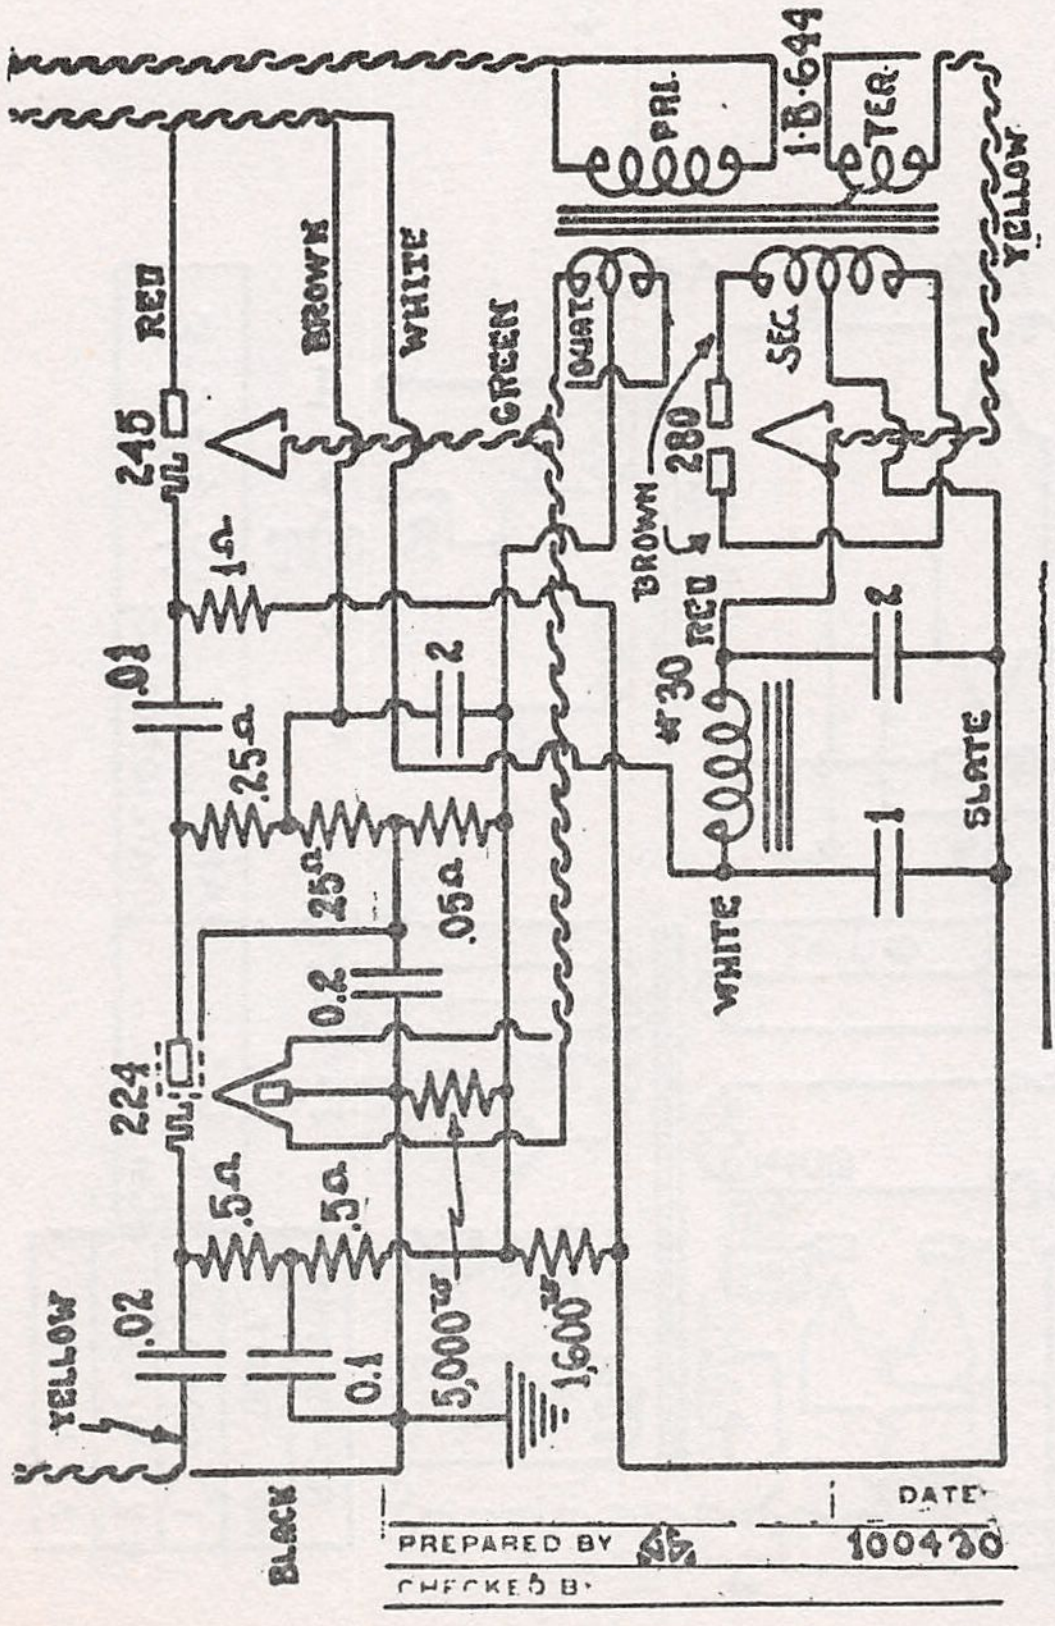
YELLOW
BLACK
.02
0.1
5,000Ω
1,600Ω
.5Ω
.5Ω
224
UL
0.2
.25Ω
.05Ω
.25Ω
.01
1Ω
245
UL
RED
BROWN
WHITE
GREEN
2
#30
RED
BROWN
WHITE
280
QUAT'G
SEC.
2
1
SLATE
PRI.
TER.
1-B-644
YELLOW
PREPARED BY
CHECKED BY
DATE
100430

PAM-23 AMPLIFIER

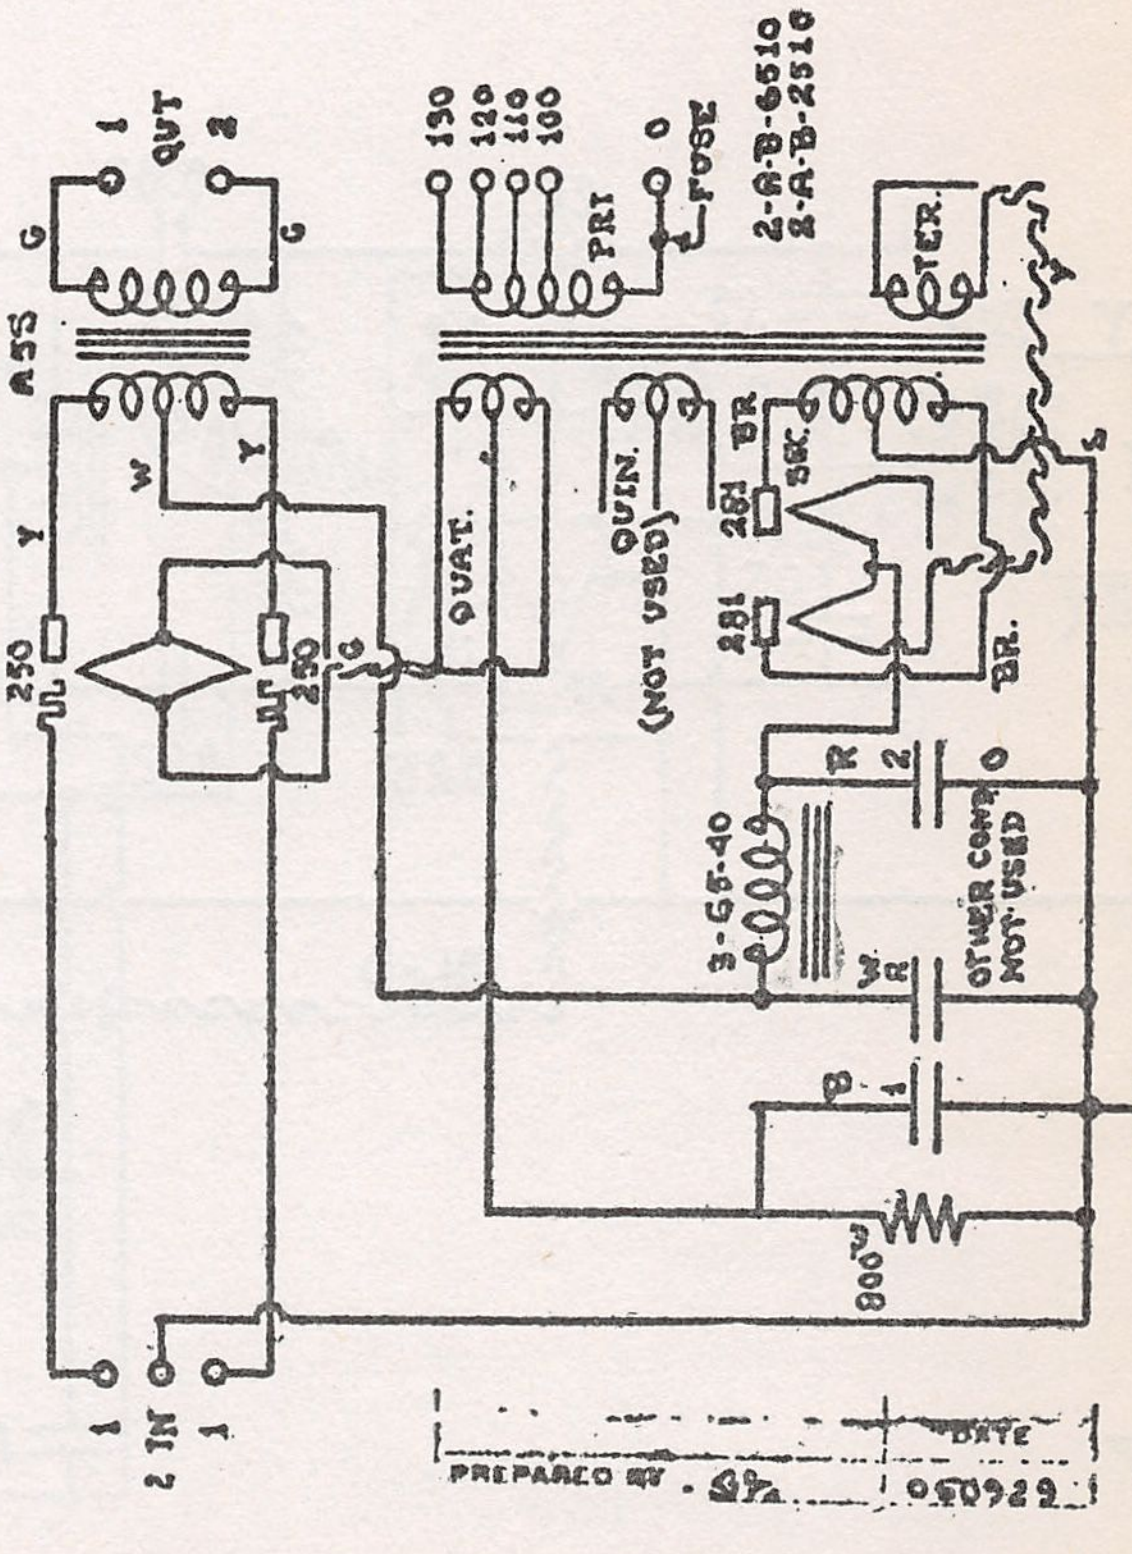
1
2 IN
1
250
UL
Y
250
UL
G
ASS
W
Y
G
G
OUT
1
2
QUAT.
QUIN.
(NOT USED)
281
281
SEC.
BR
BR.
130
120
110
100
PRI
0
FUSE
2-B-6510
2-A-B-2510
TER.
Y
S
3-65-40
R
2
0
W
R
OTHER CONN. NOT USED
B
1
800Ω
PREPARED BY
DATE
050929

PAM-25 AMPLIFIER

MODEL PAM-29
MODEL PAM-39

SAMSON ELECTRIC CO.

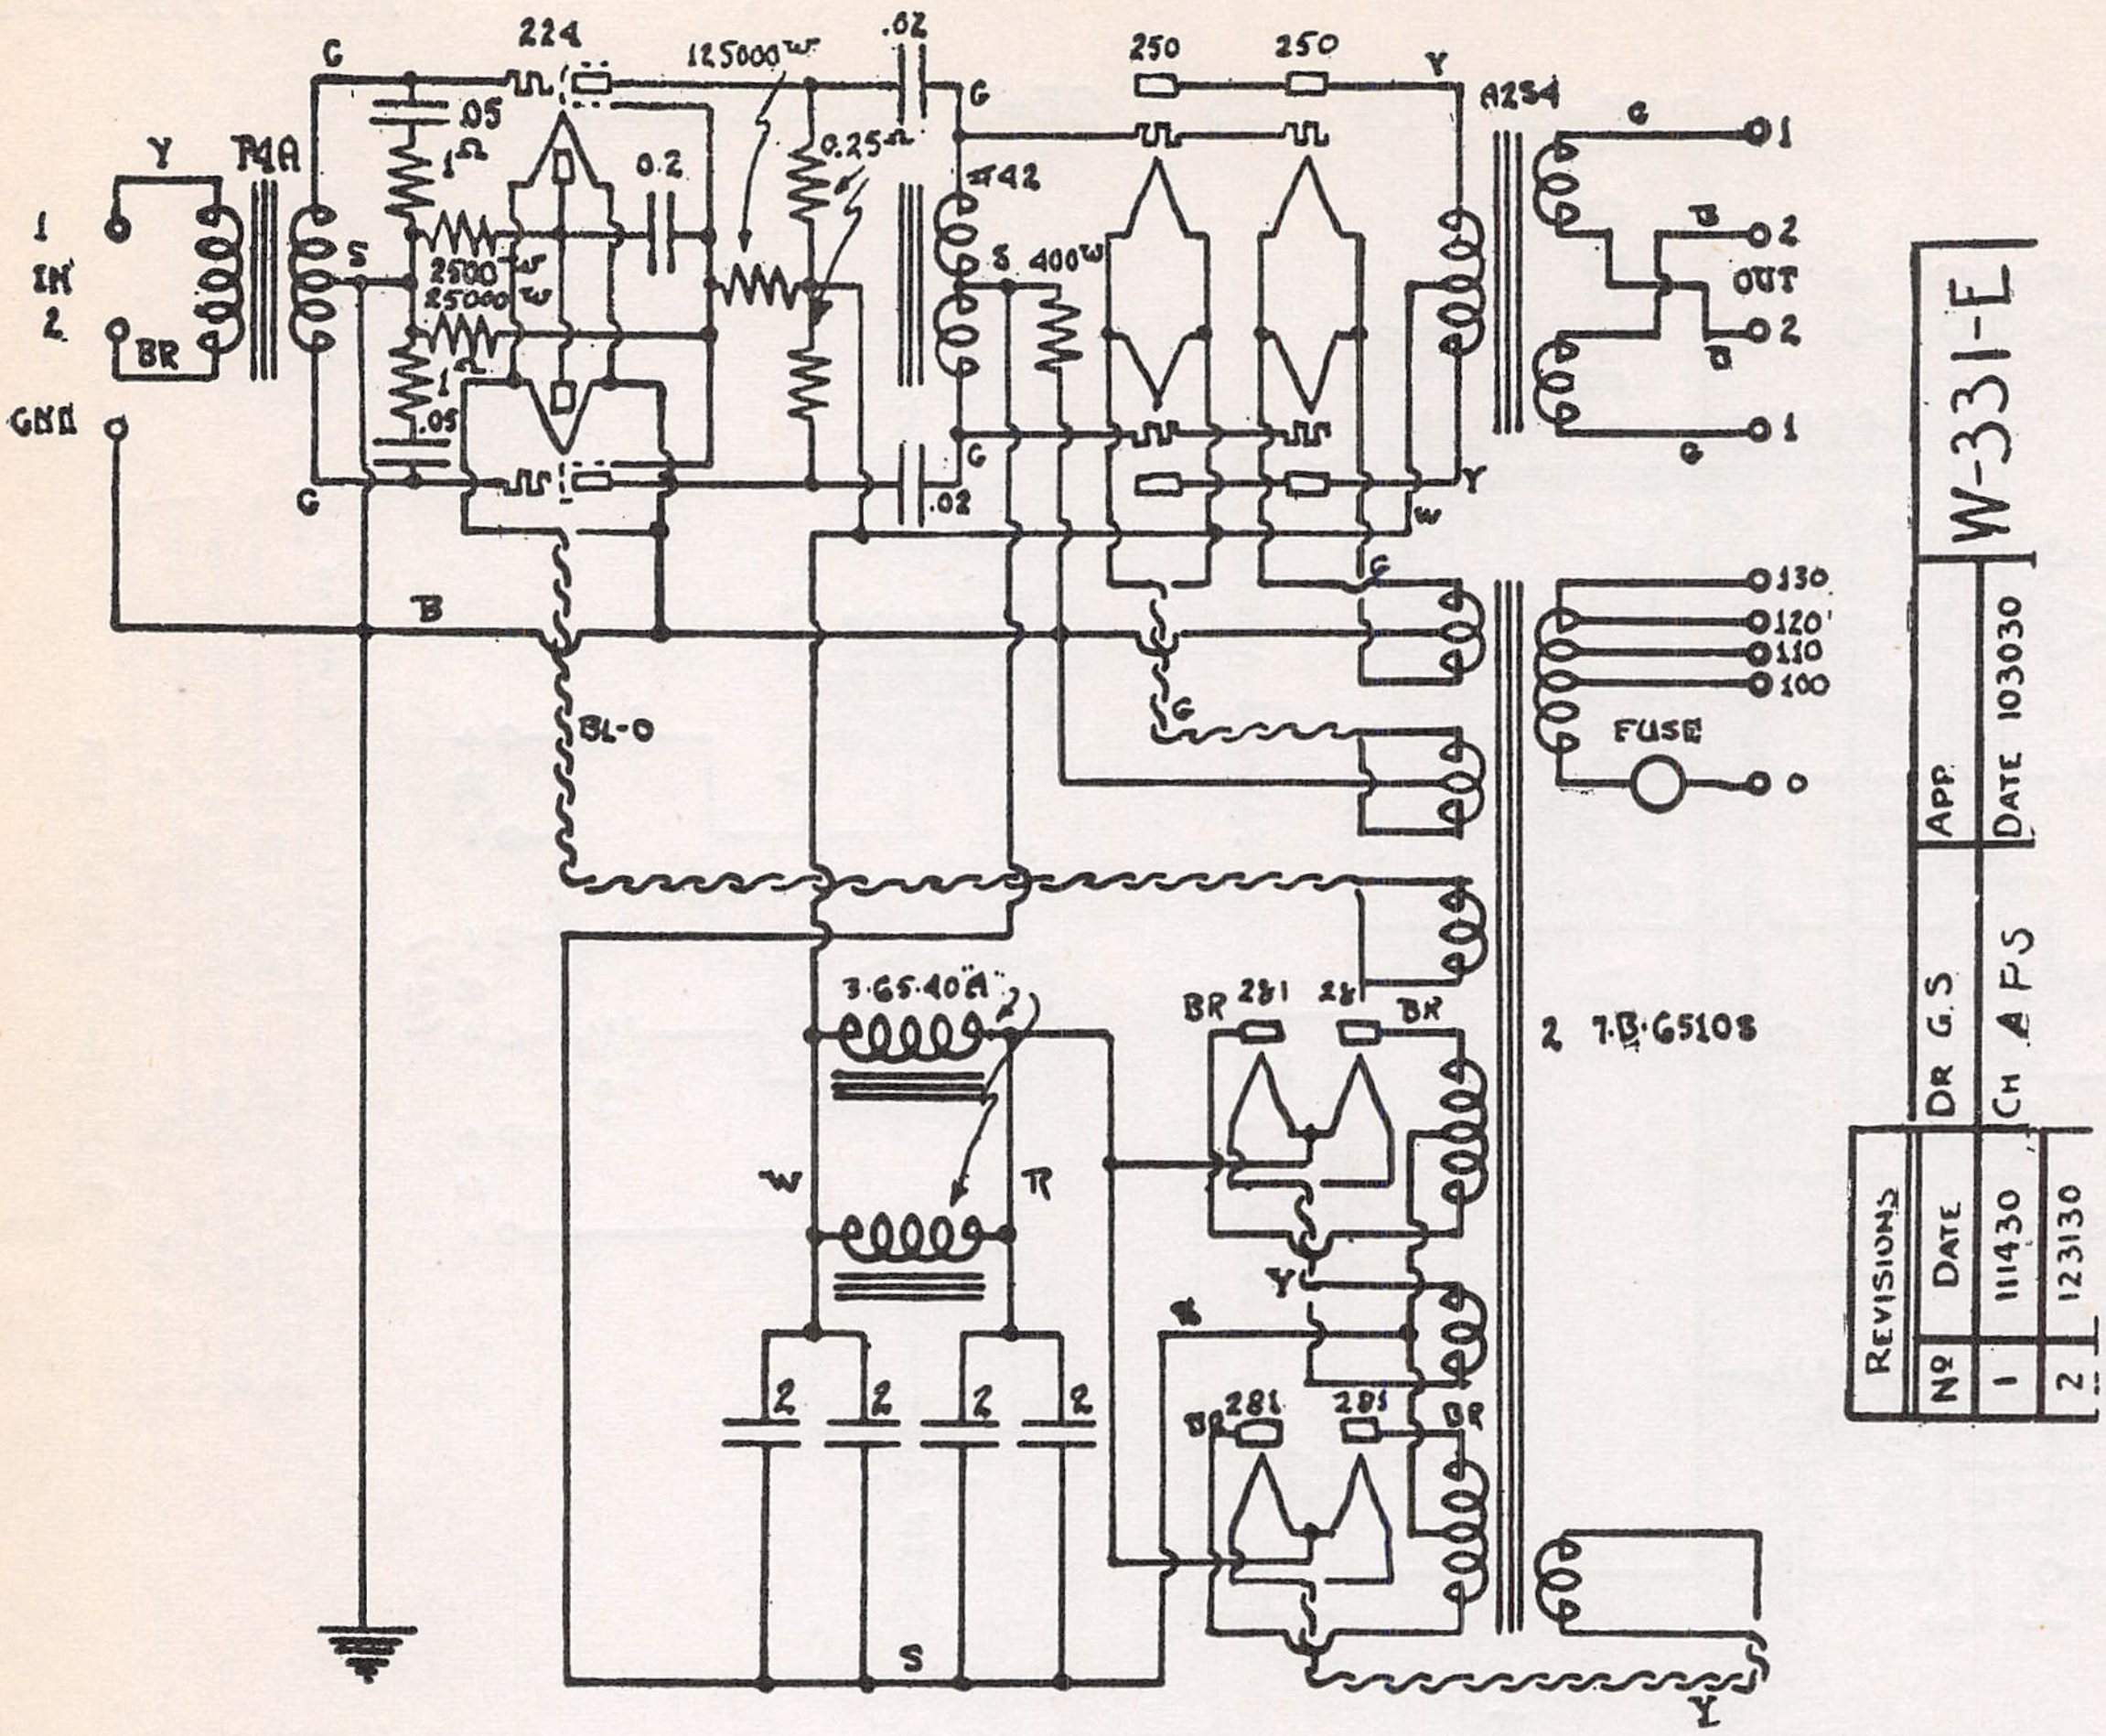
224
125000 W
.02
250
250
Y
A2S4
G
1
B
2
OUT
2
B
G
1
Y
P4A
1
IN
2
BR
GND
G
.05
1 Ω
2500
25000 W
1 Ω
.05
0.2
0.25 Ω
#42
S
400 W
.02
G
Y
W
G
B
BL-O
G
130
120
110
100
FUSE
3-65-40A
W
TR
BR 281
281 BR
Y
281
281
BR
2
2
2
2
S
Y
2 7-B-65108
W-331-E
APP.
DATE 103030
DR G.S
CH AFS
REVISIONS
No
DATE
1
111430
2
123130

PAM-29 AMPLIFIER

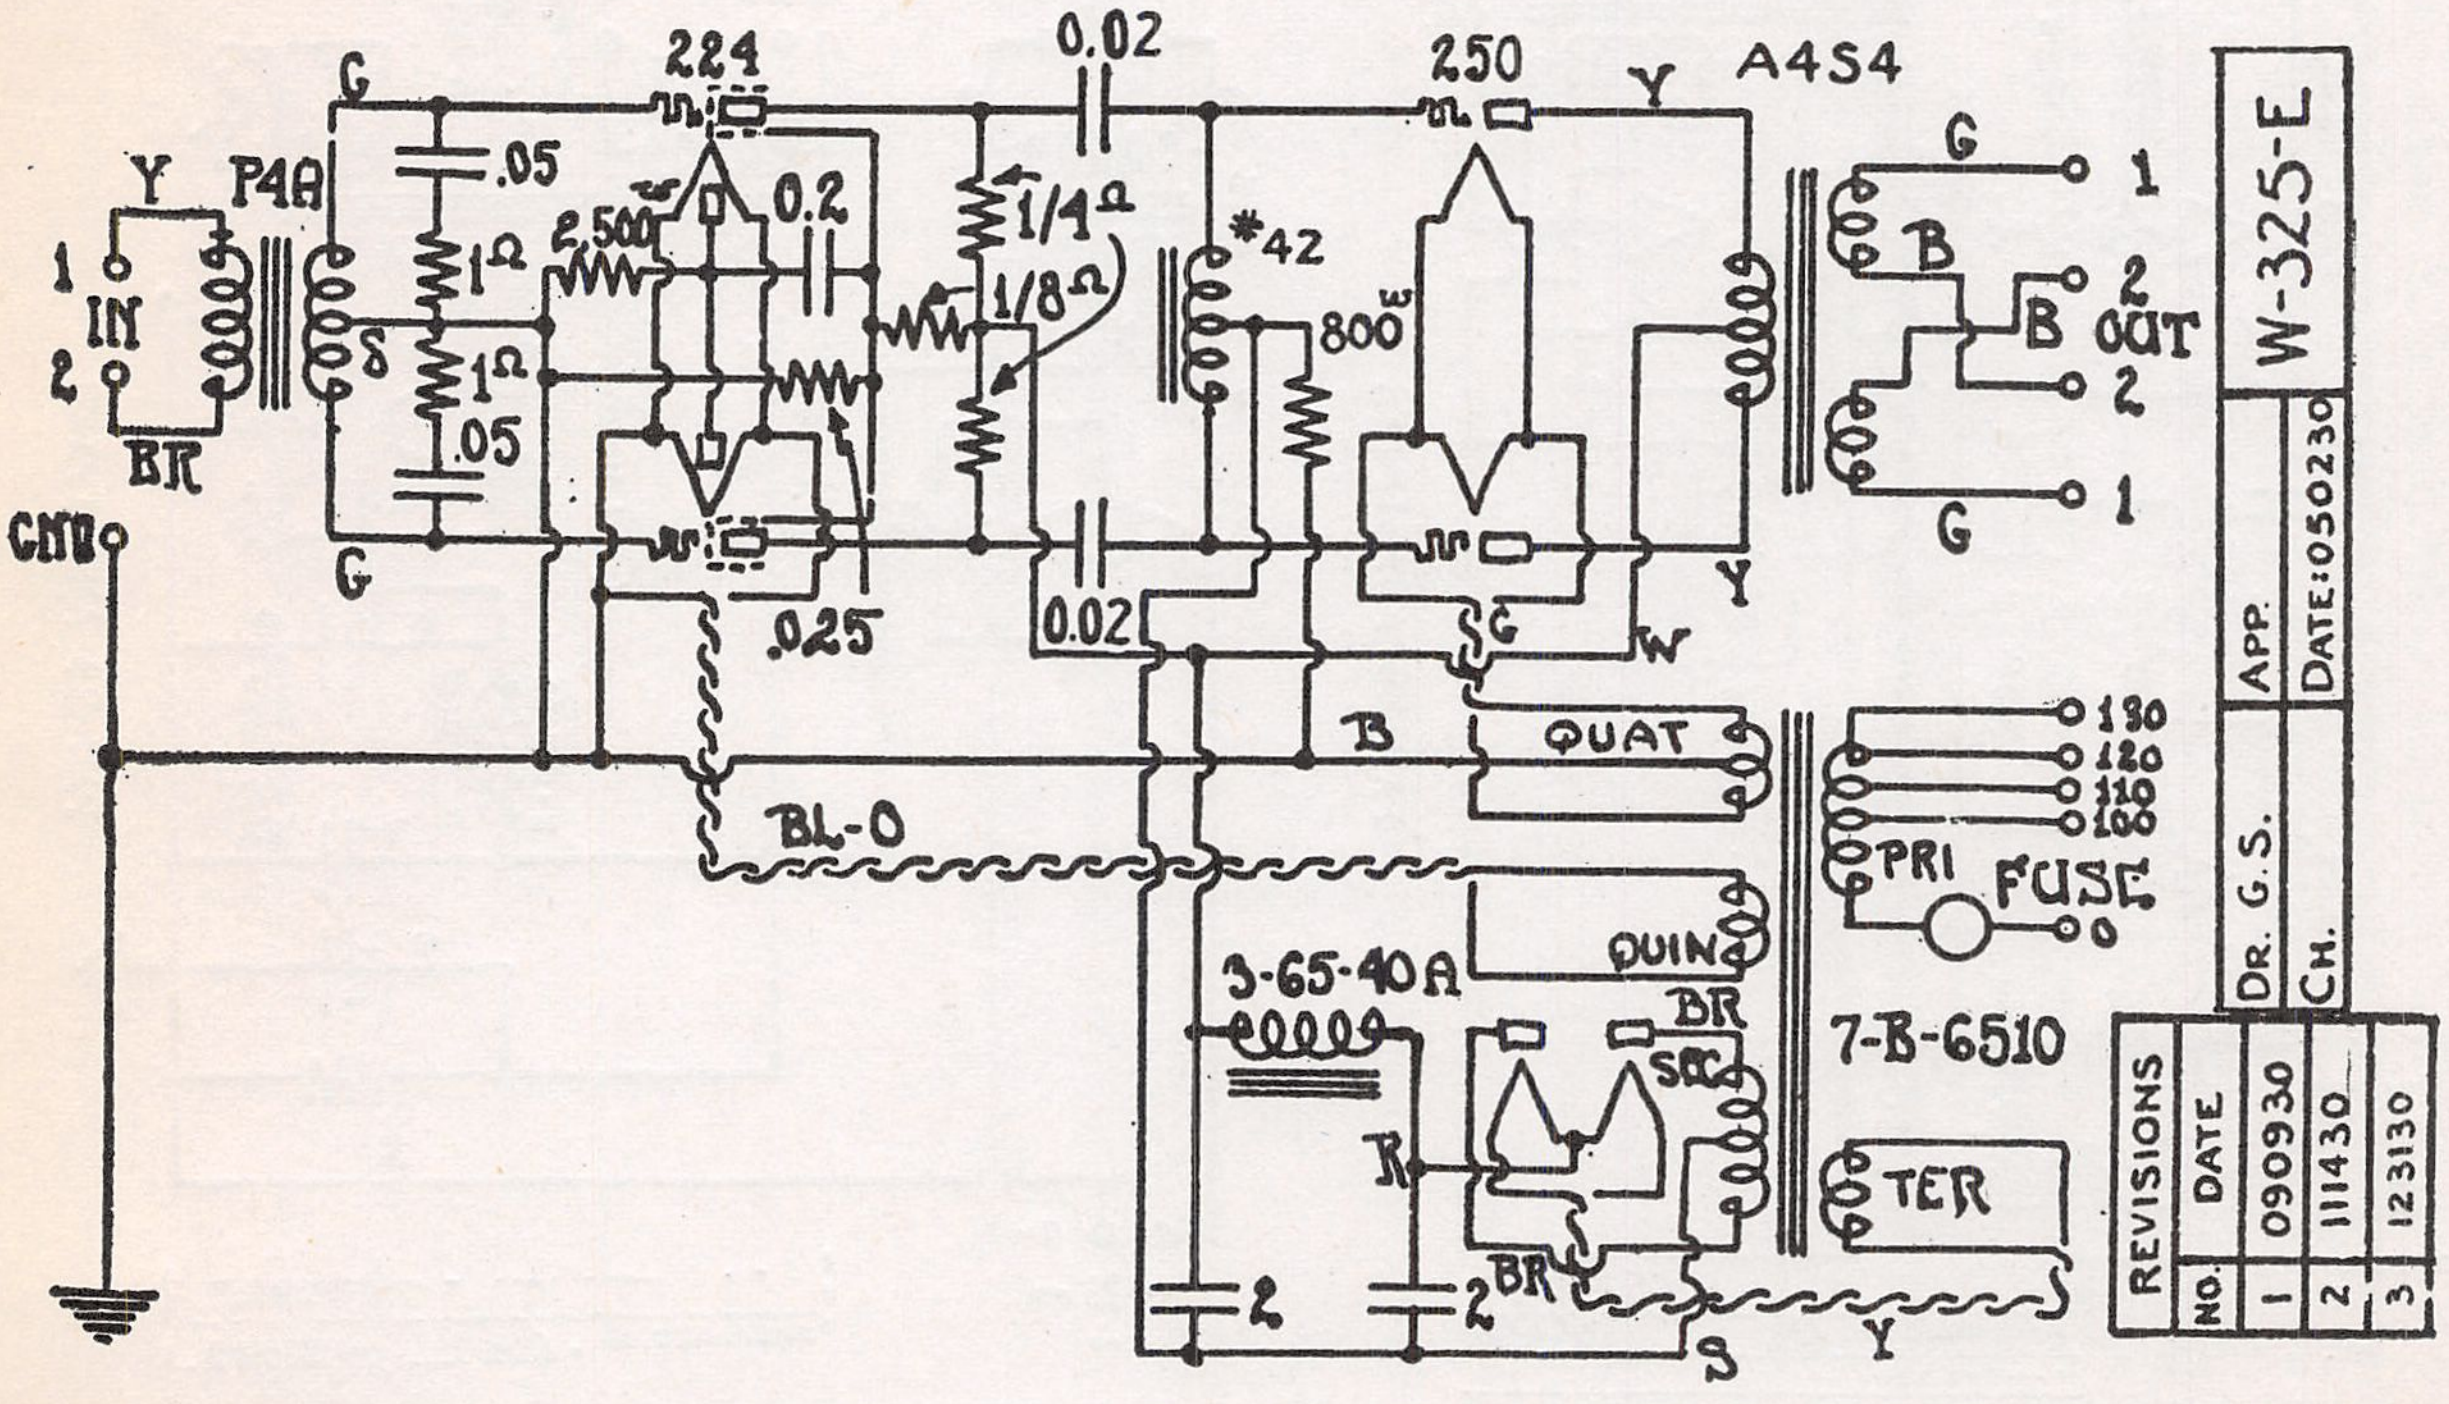
224
0.02
250
Y
A4S4
G
1
B
2
B
OUT
2
G
1
Y
P4A
1
IN
2
BR
GND
G
.05
1 Ω
2,500 W
0.2
1/4 Ω
1/8 Ω
#42
800 W
1 Ω
.05
G
.025
0.02
G
W
Y
B
QUAT
BL-O
130
120
110
100
PRI
FUSE
QUIN
3-65-40A
BR
SEC
7-B-6510
TR
TER
2
2
BR
S
Y
W-325-E
APP.
DATE:050230
DR. G.S.
CH.
REVISIONS
NO.
DATE
1
090930
2
111430
3
123130

PAM-39 AMPLIFIER

SAMSON ELECTRIC CO.

MODEL PAM-45
MODEL PAM-48

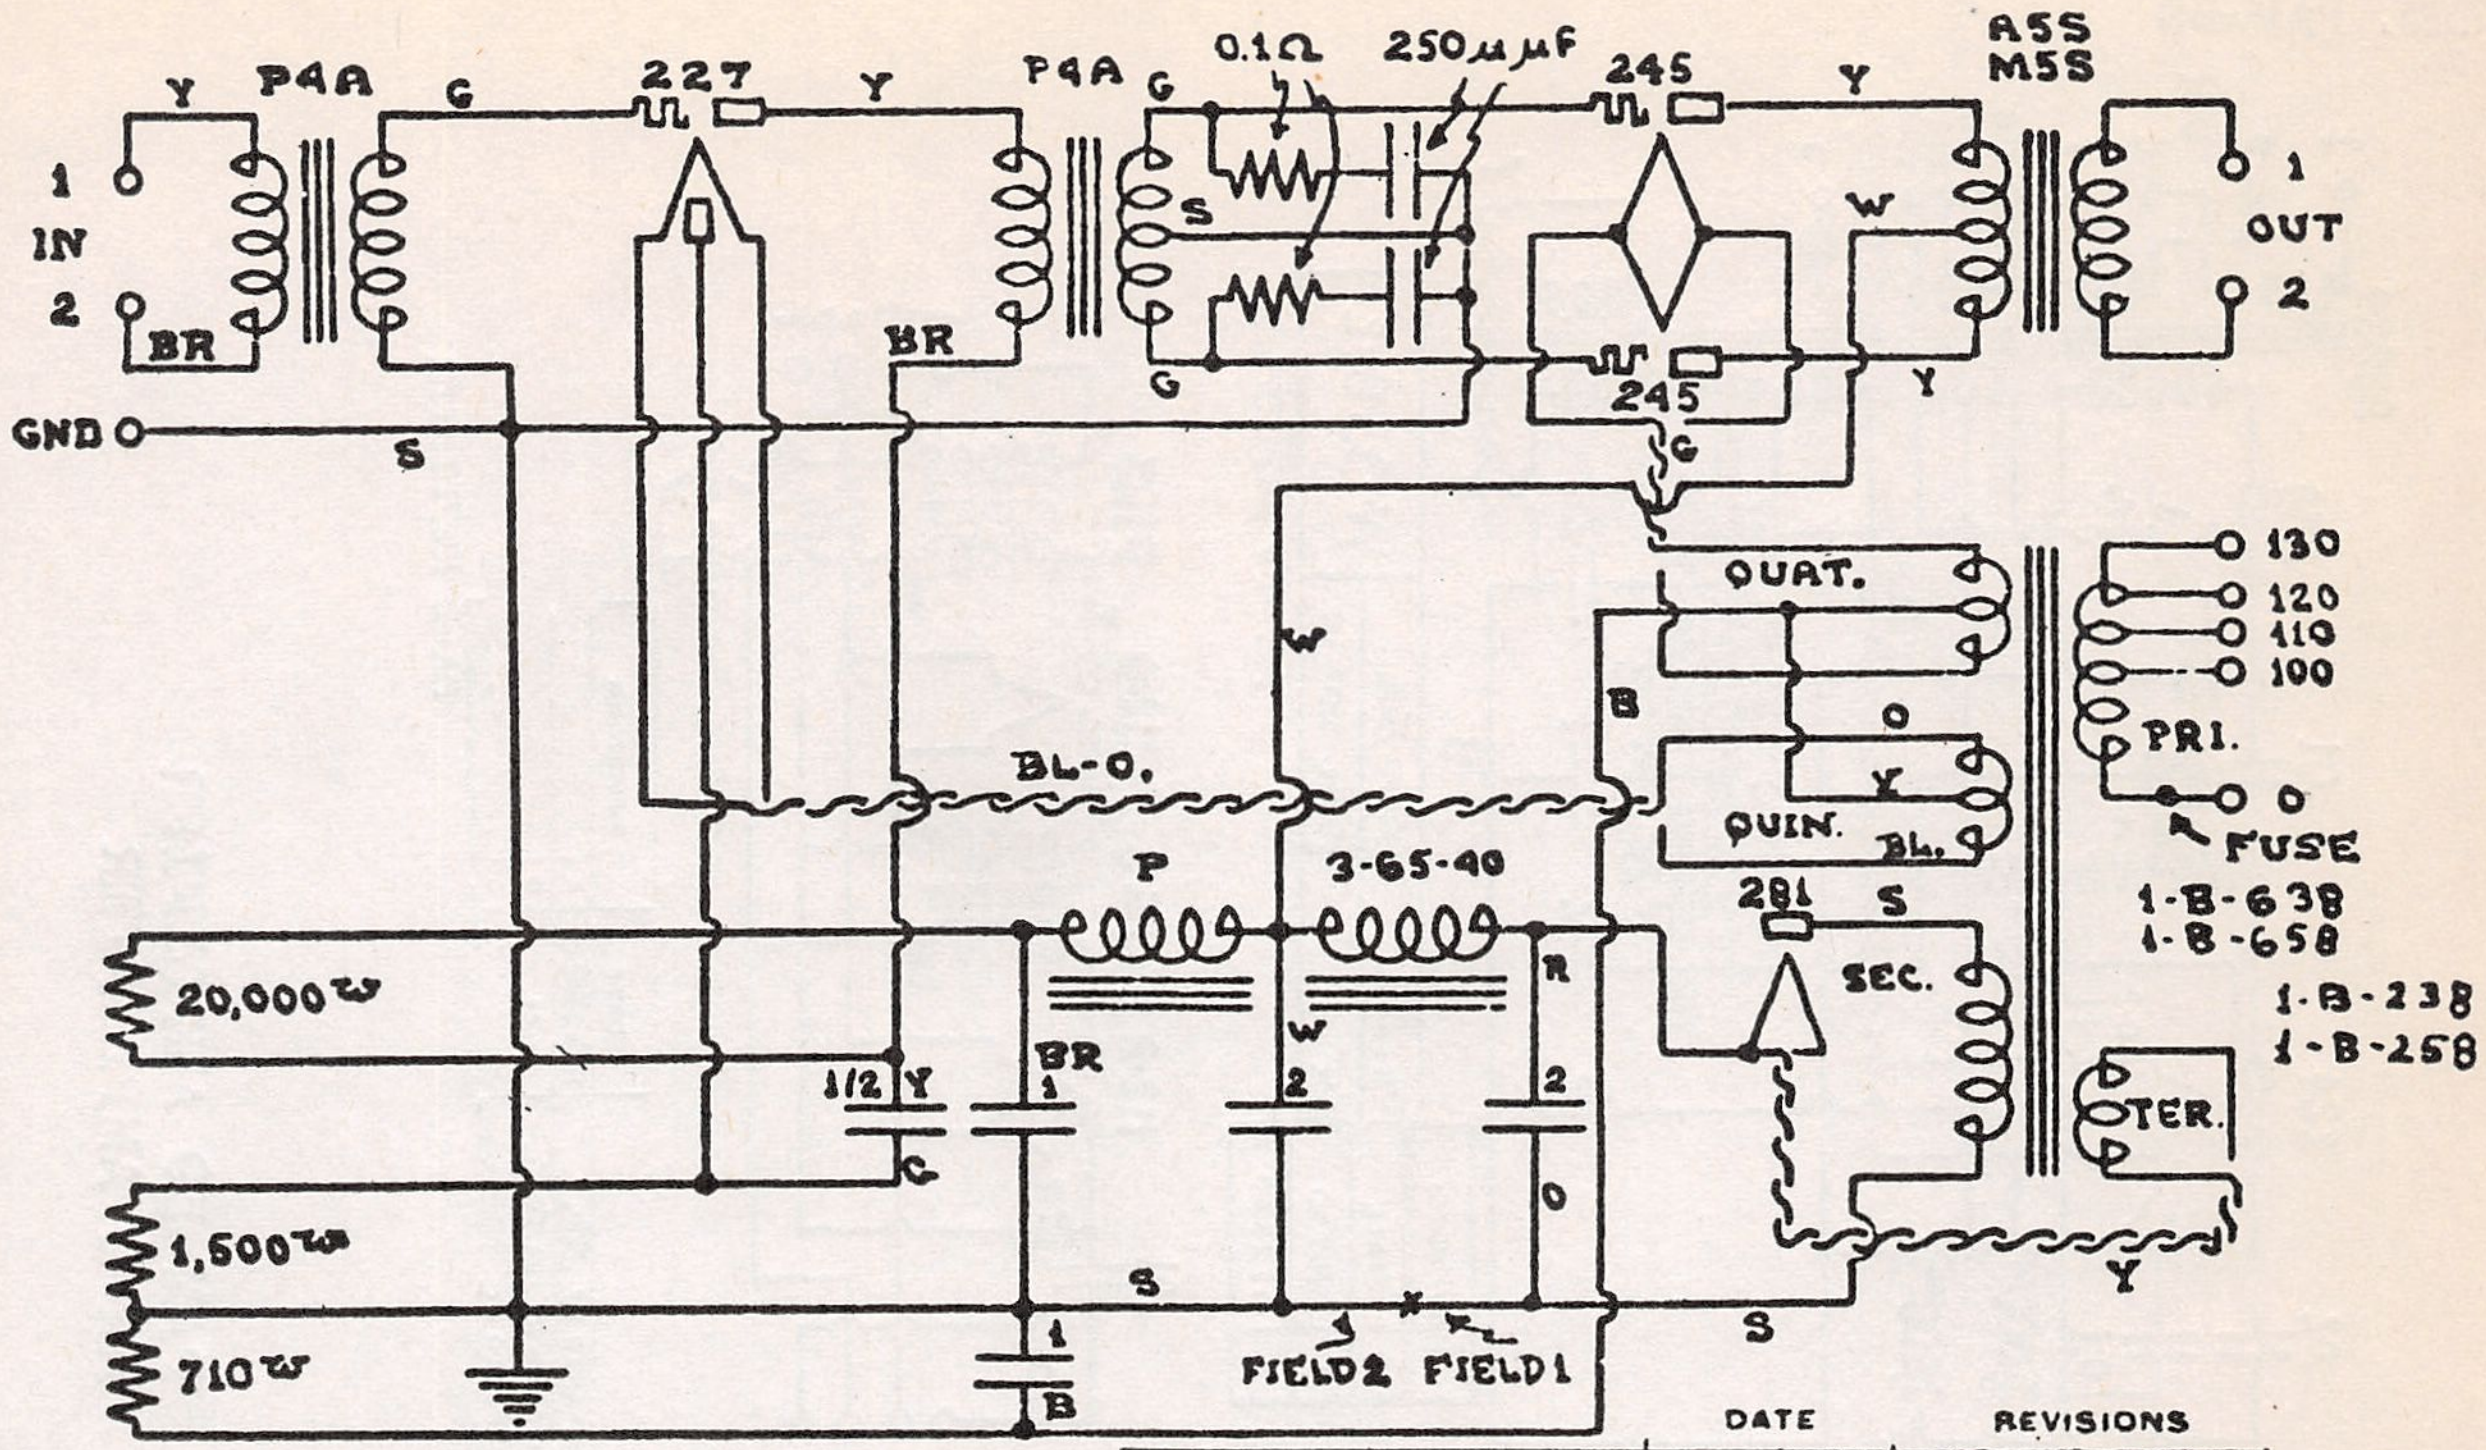
Y
P4A
G
227
Y
P4A
G
0.1Ω
250μμF
245
Y
A55
M55
1
IN
2
BR
BR
S
G
W
1
OUT
2
GND
S
245
Y
G
W
QUAT.
B
O
Y
QUIN.
BL.
130
120
110
100
PRI.
O
FUSE
1-B-638
1-B-658
1-B-238
1-B-258
BL-O.
P
3-65-40
281
S
SEC.
20,000ω
R
W
1/2
Y
BR
1
2
2
C
O
TER.
1,500ω
S
S
Y
710ω
1
B
FIELD2
FIELD1

PAM-45 AMPLIFIER

		DATE		REVISIONS
PREPARED BY	G.S.	050929	A	
CHECKED BY	T.T.	"	B	
APPROVED BY	G.S.	"	C	
FORM BY	GWB	120529	D	

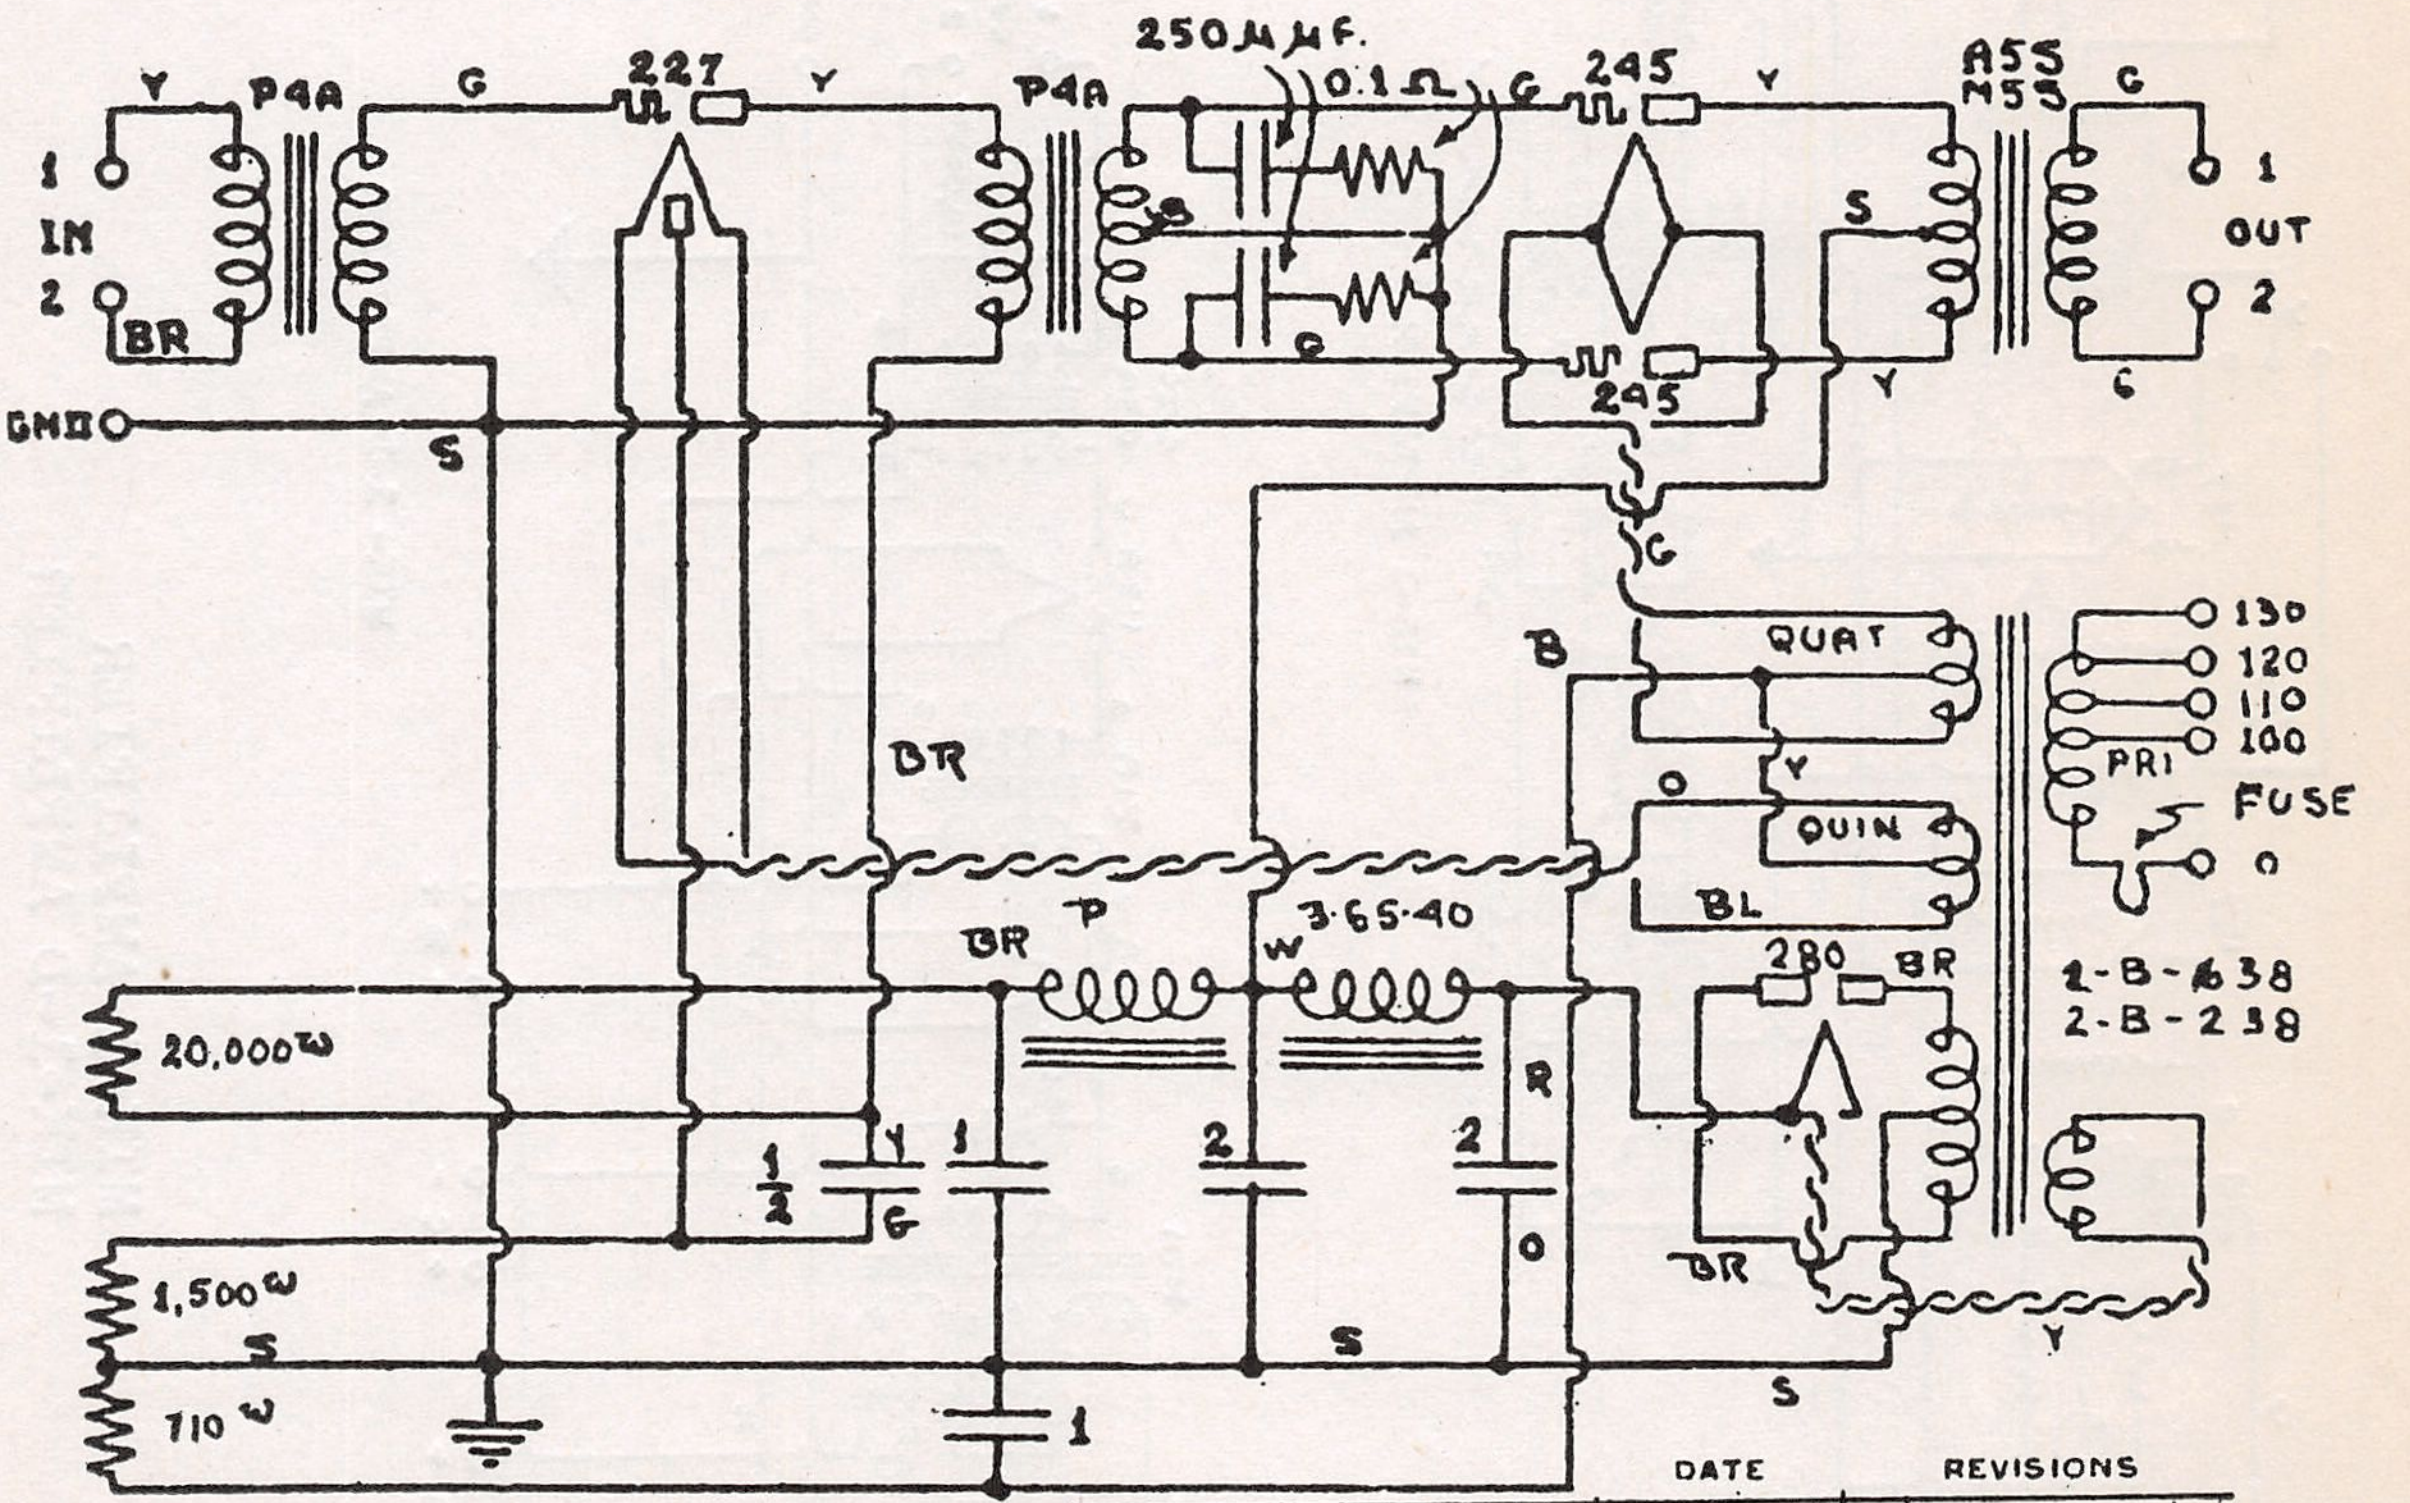
250μμF.
Y
P4A
G
227
Y
P4A
0.1Ω
G
245
Y
A55
M55
G
1
IN
2
BR
S
S
1
OUT
2
G
GND
S
G
245
Y
G
B
QUAT
130
120
110
100
PRI
FUSE
O
BR
O
Y
QUIN
BL
BR
P
W
3-65-40
280
BR
2-B-638
2-B-238
20,000ω
R
1/2
Y
1
2
2
G
O
BR
1,500ω
S
S
Y
710ω
S
1
B

PAM-48 AMPLIFIER

		DATE		REVISIONS
PREPARED BY	G.S.	120629	A	
CHECKED BY	G.W.B.	120729	B	
APPROVED BY	G.S.		C	
FORM BY	G.S.	021429	D	

MODEL MIK-1
MODEL MIK-1-D
MODEL HA-2
MODEL PAM-59

SAMSON ELECTRIC CO.

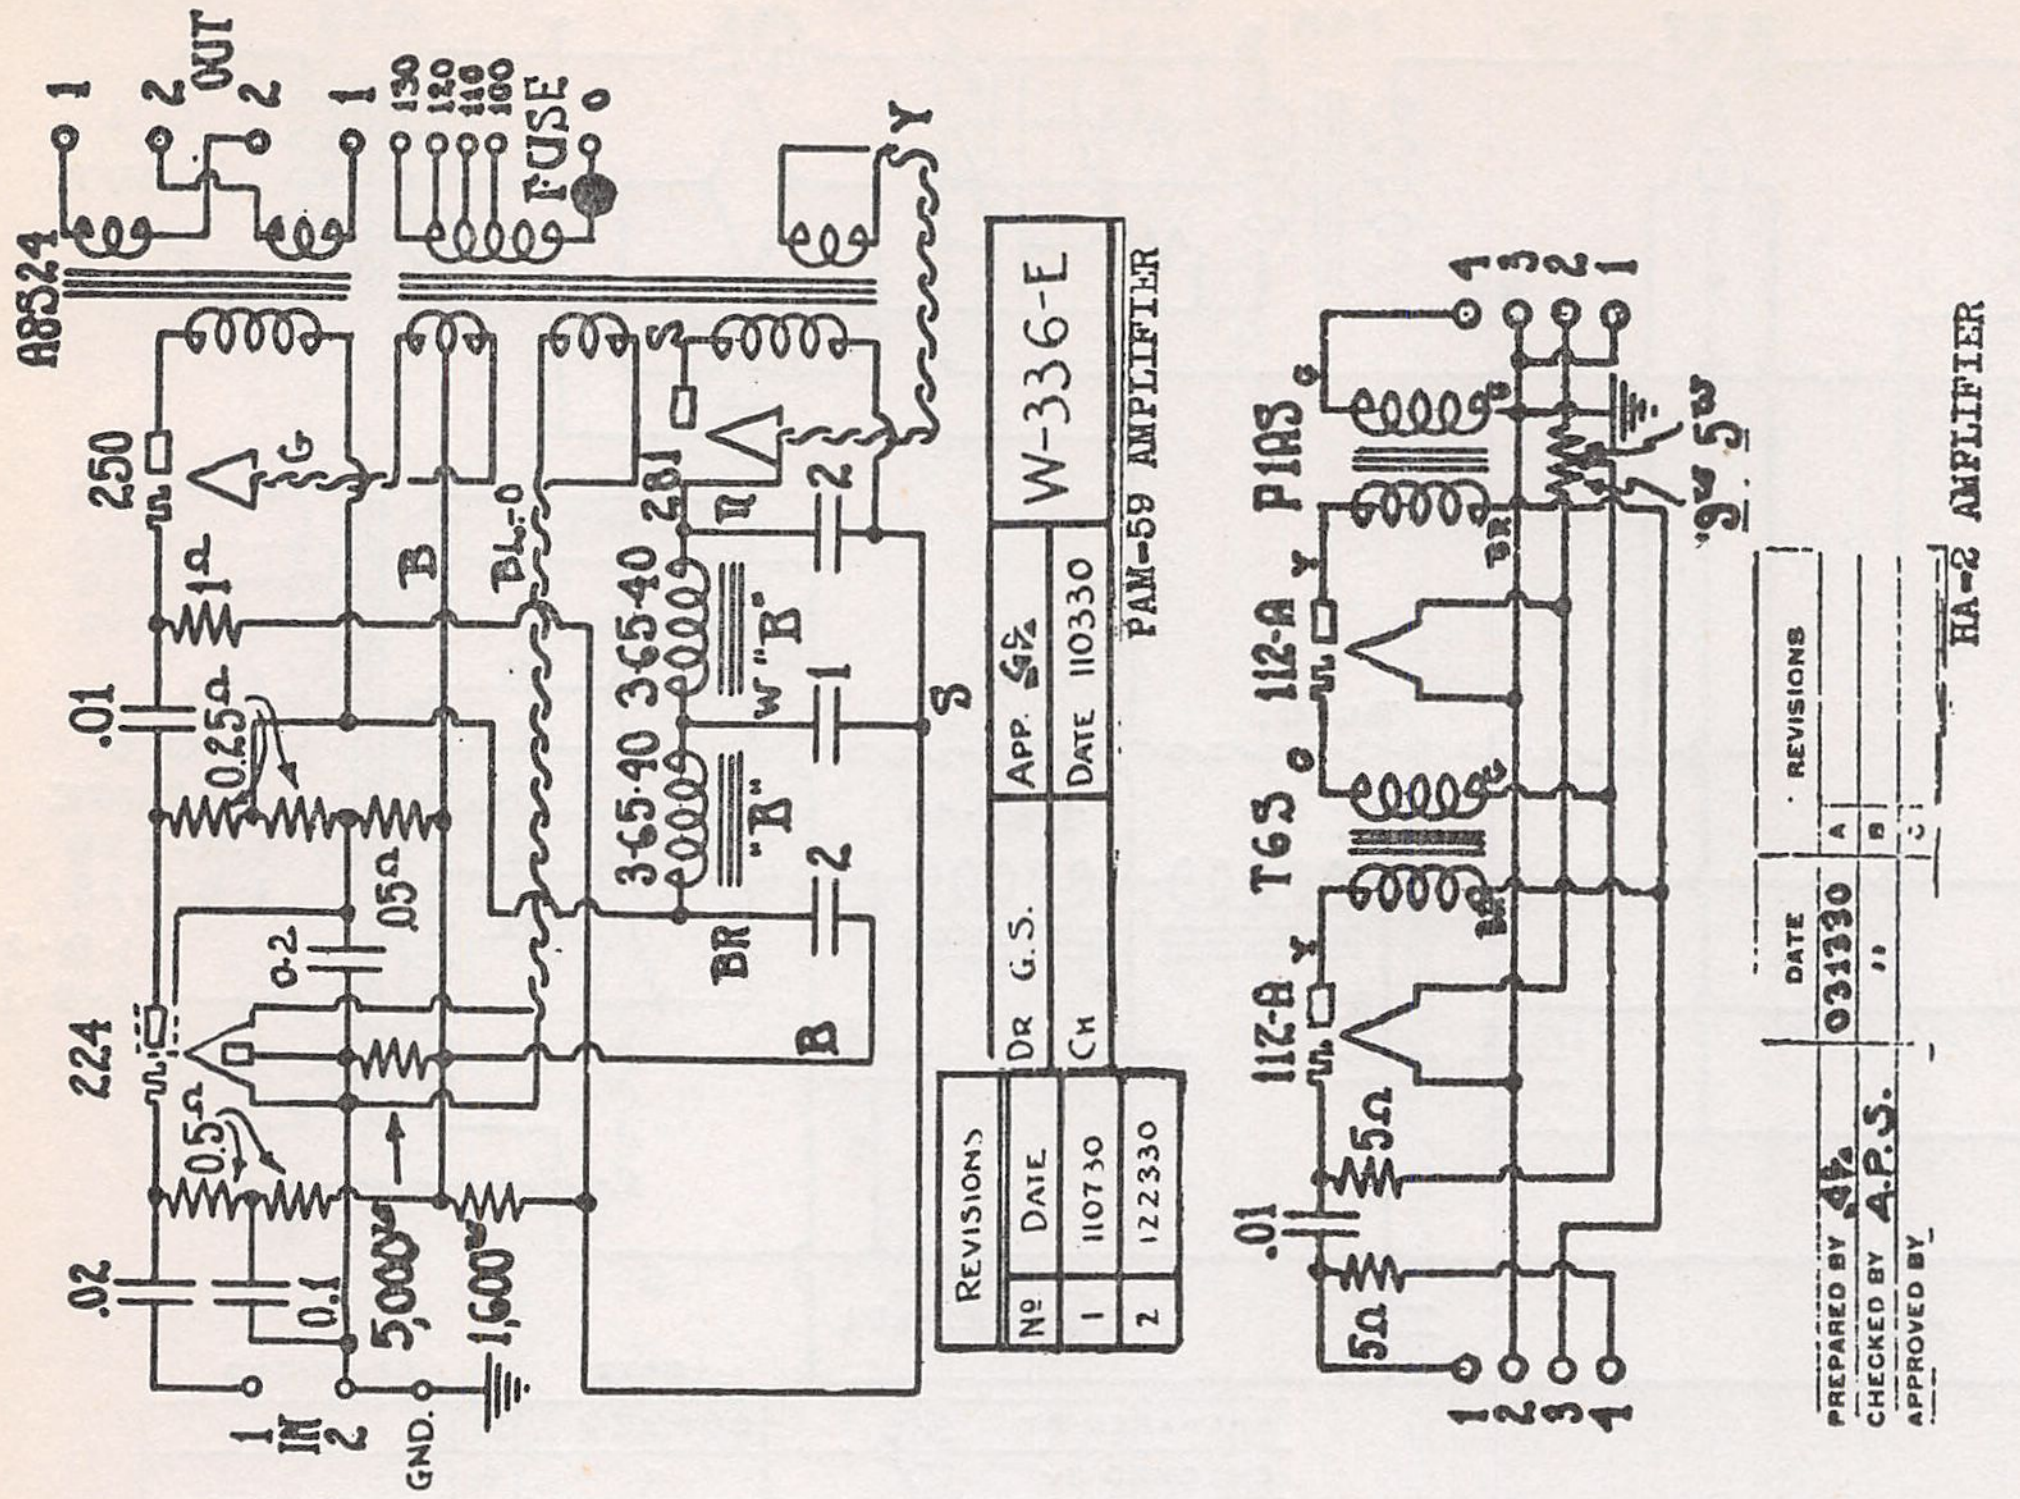
A8524
OUT 1 2
1
130 120 110 100 0
FUSE
Y
250
.01
0.25Ω
.05Ω
224
0.5Ω
.02
0.1
5,000Ω
1,600Ω
IN 1 2
GND.
365-40
281
B
BR
W-336-E
PAM-59 AMPLIFIER
REVISIONS
No DATE
1 110730
2 122330
DR G.S.
CH
APP. G.S.
DATE 110330
T63
112-A
P1A3
5Ω
.01
HA-2 AMPLIFIER
PREPARED BY
CHECKED BY A.P.S.
APPROVED BY
DATE 031330
REVISIONS A B C

PAM-59 AMPLIFIER
HA-2 AMPLIFIER

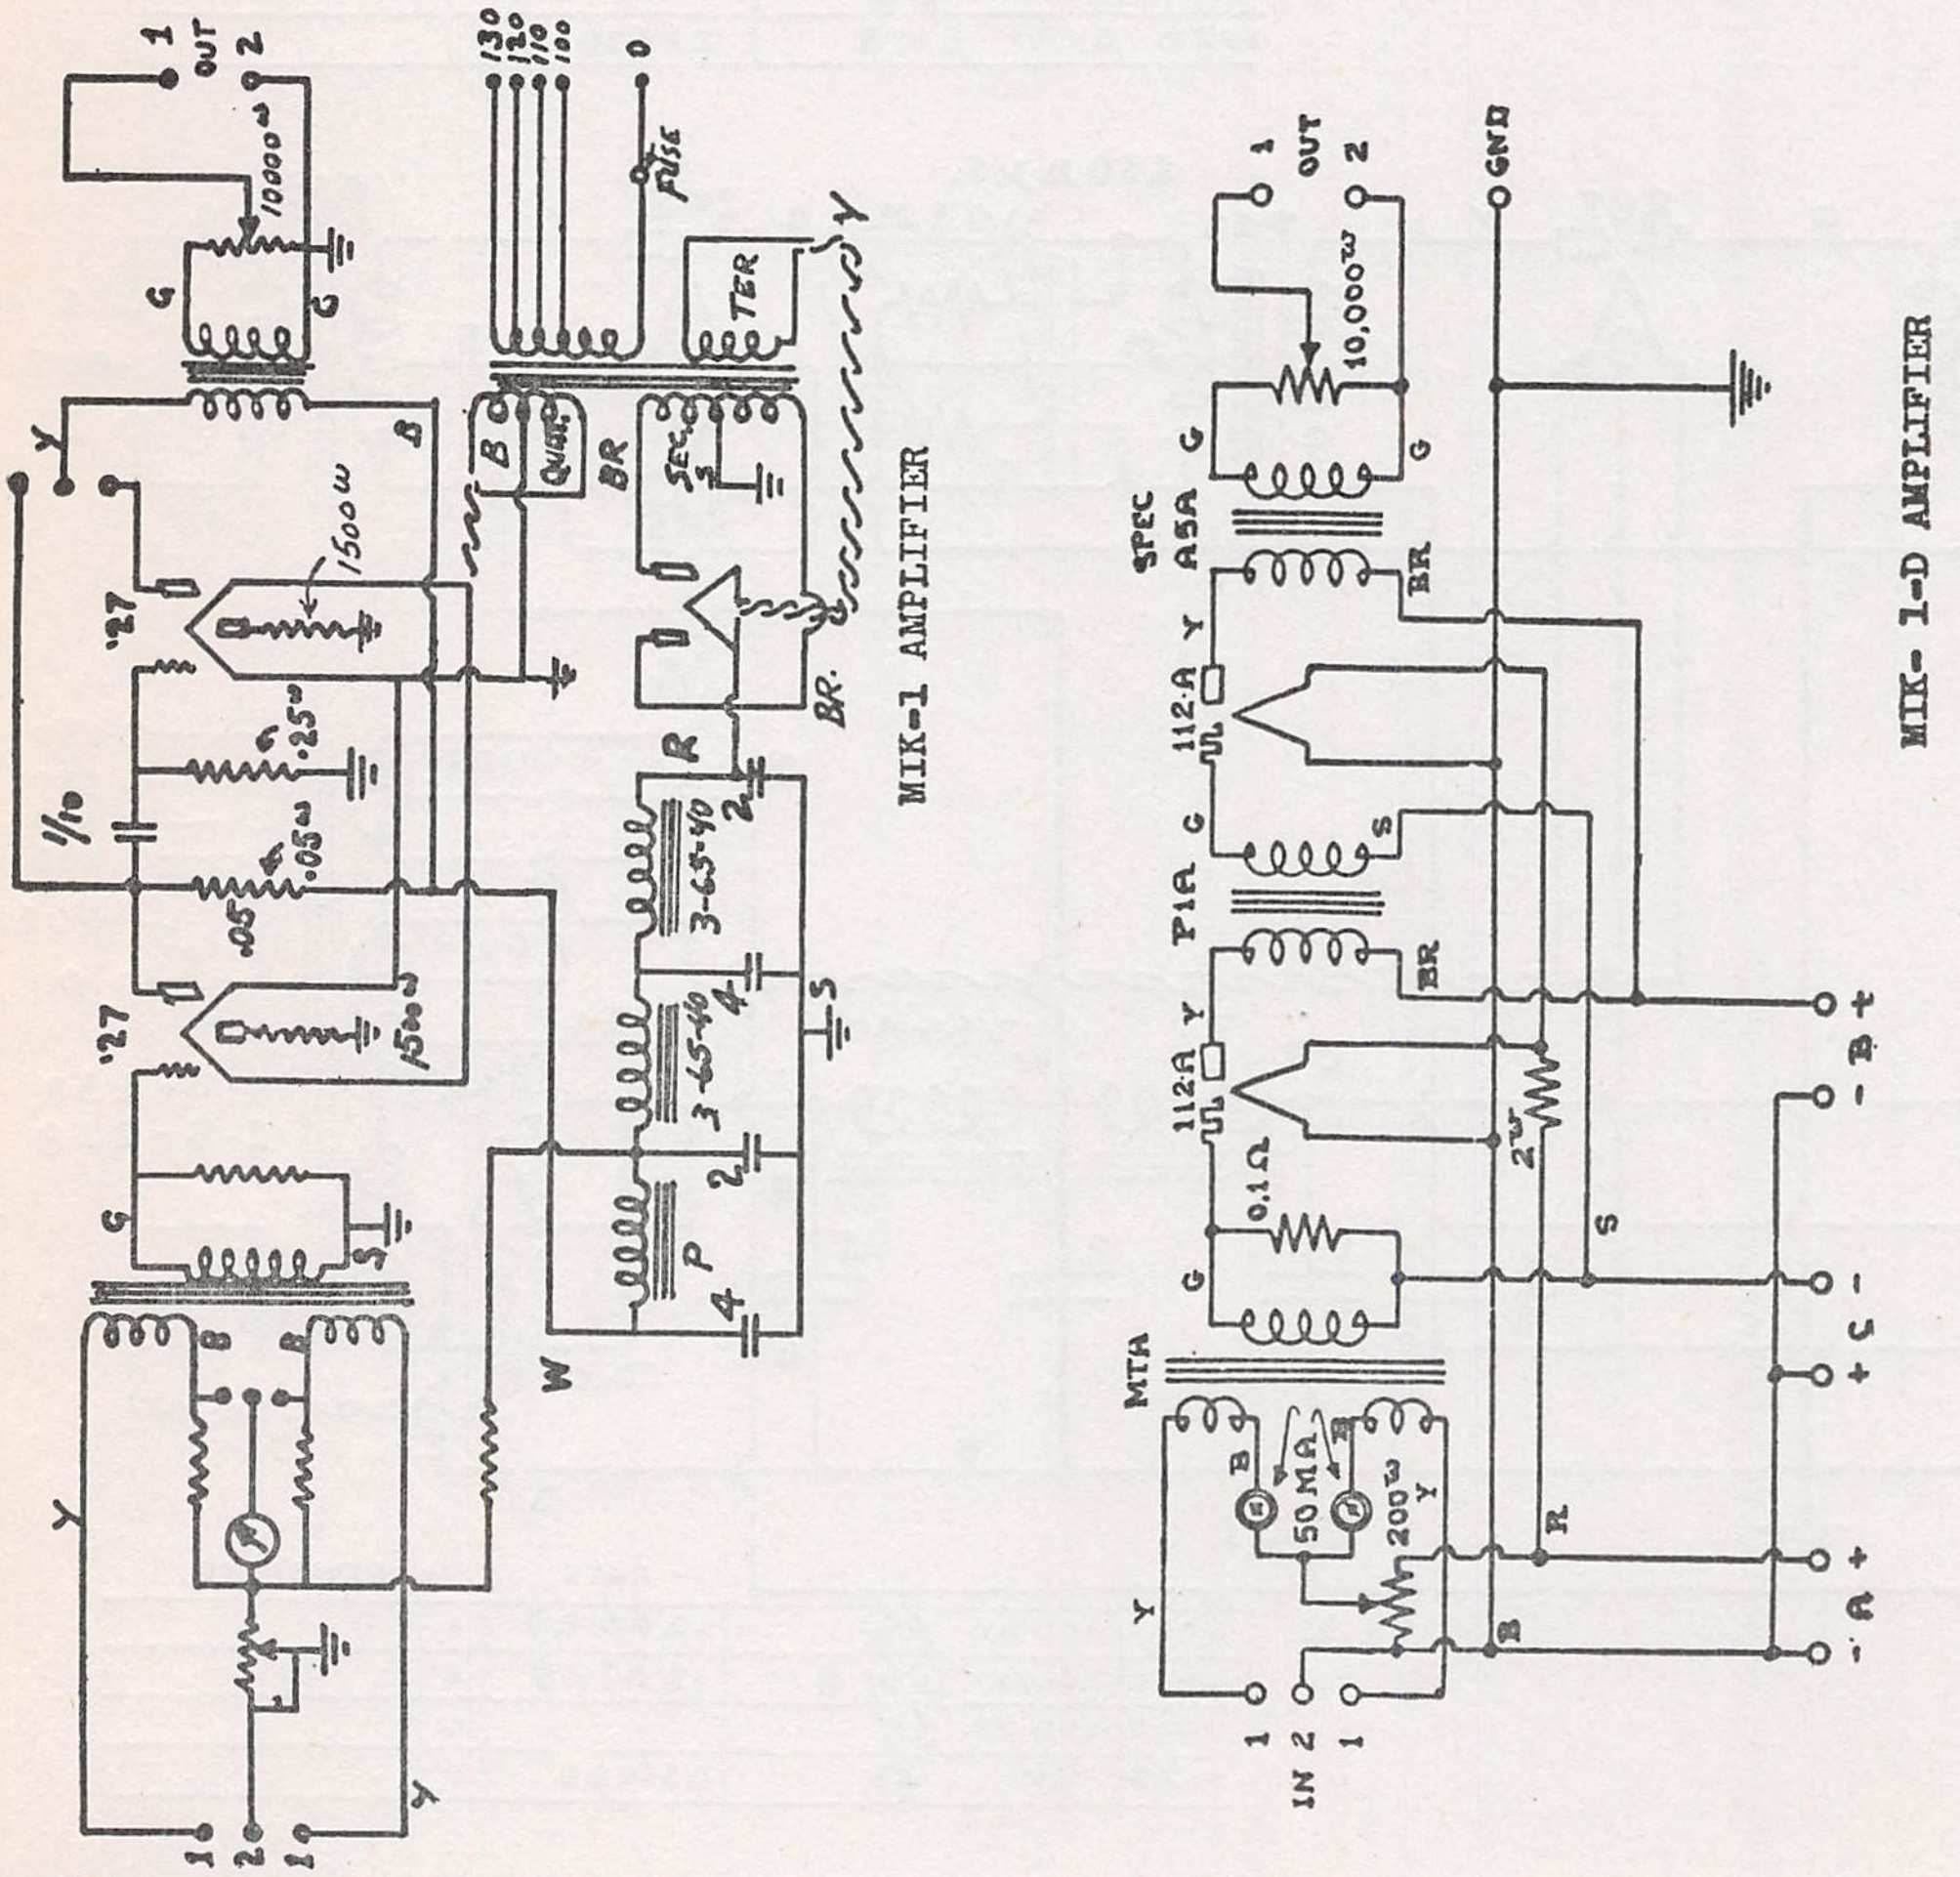
OUT 1 2
130 120 110 100 0
FUSE
10000Ω
TER
SEC
Y
B
BR
'27
1500Ω
.25Ω
.05Ω
1/10
3-65-40
W
MIK-1 AMPLIFIER
OUT 1 2
GND
10,000Ω
SPEC A5A
112-A
P1A
0.1Ω
MTA
50 MA
200Ω
IN 2 1
- B +
- C +
- A +
MIK-1-D AMPLIFIER

MIK-1 AMPLIFIER
MIK-1-D AMPLIFIER

MODEL MIK-80
MODEL PAM-80

SAMSON ELECTRIC CO.

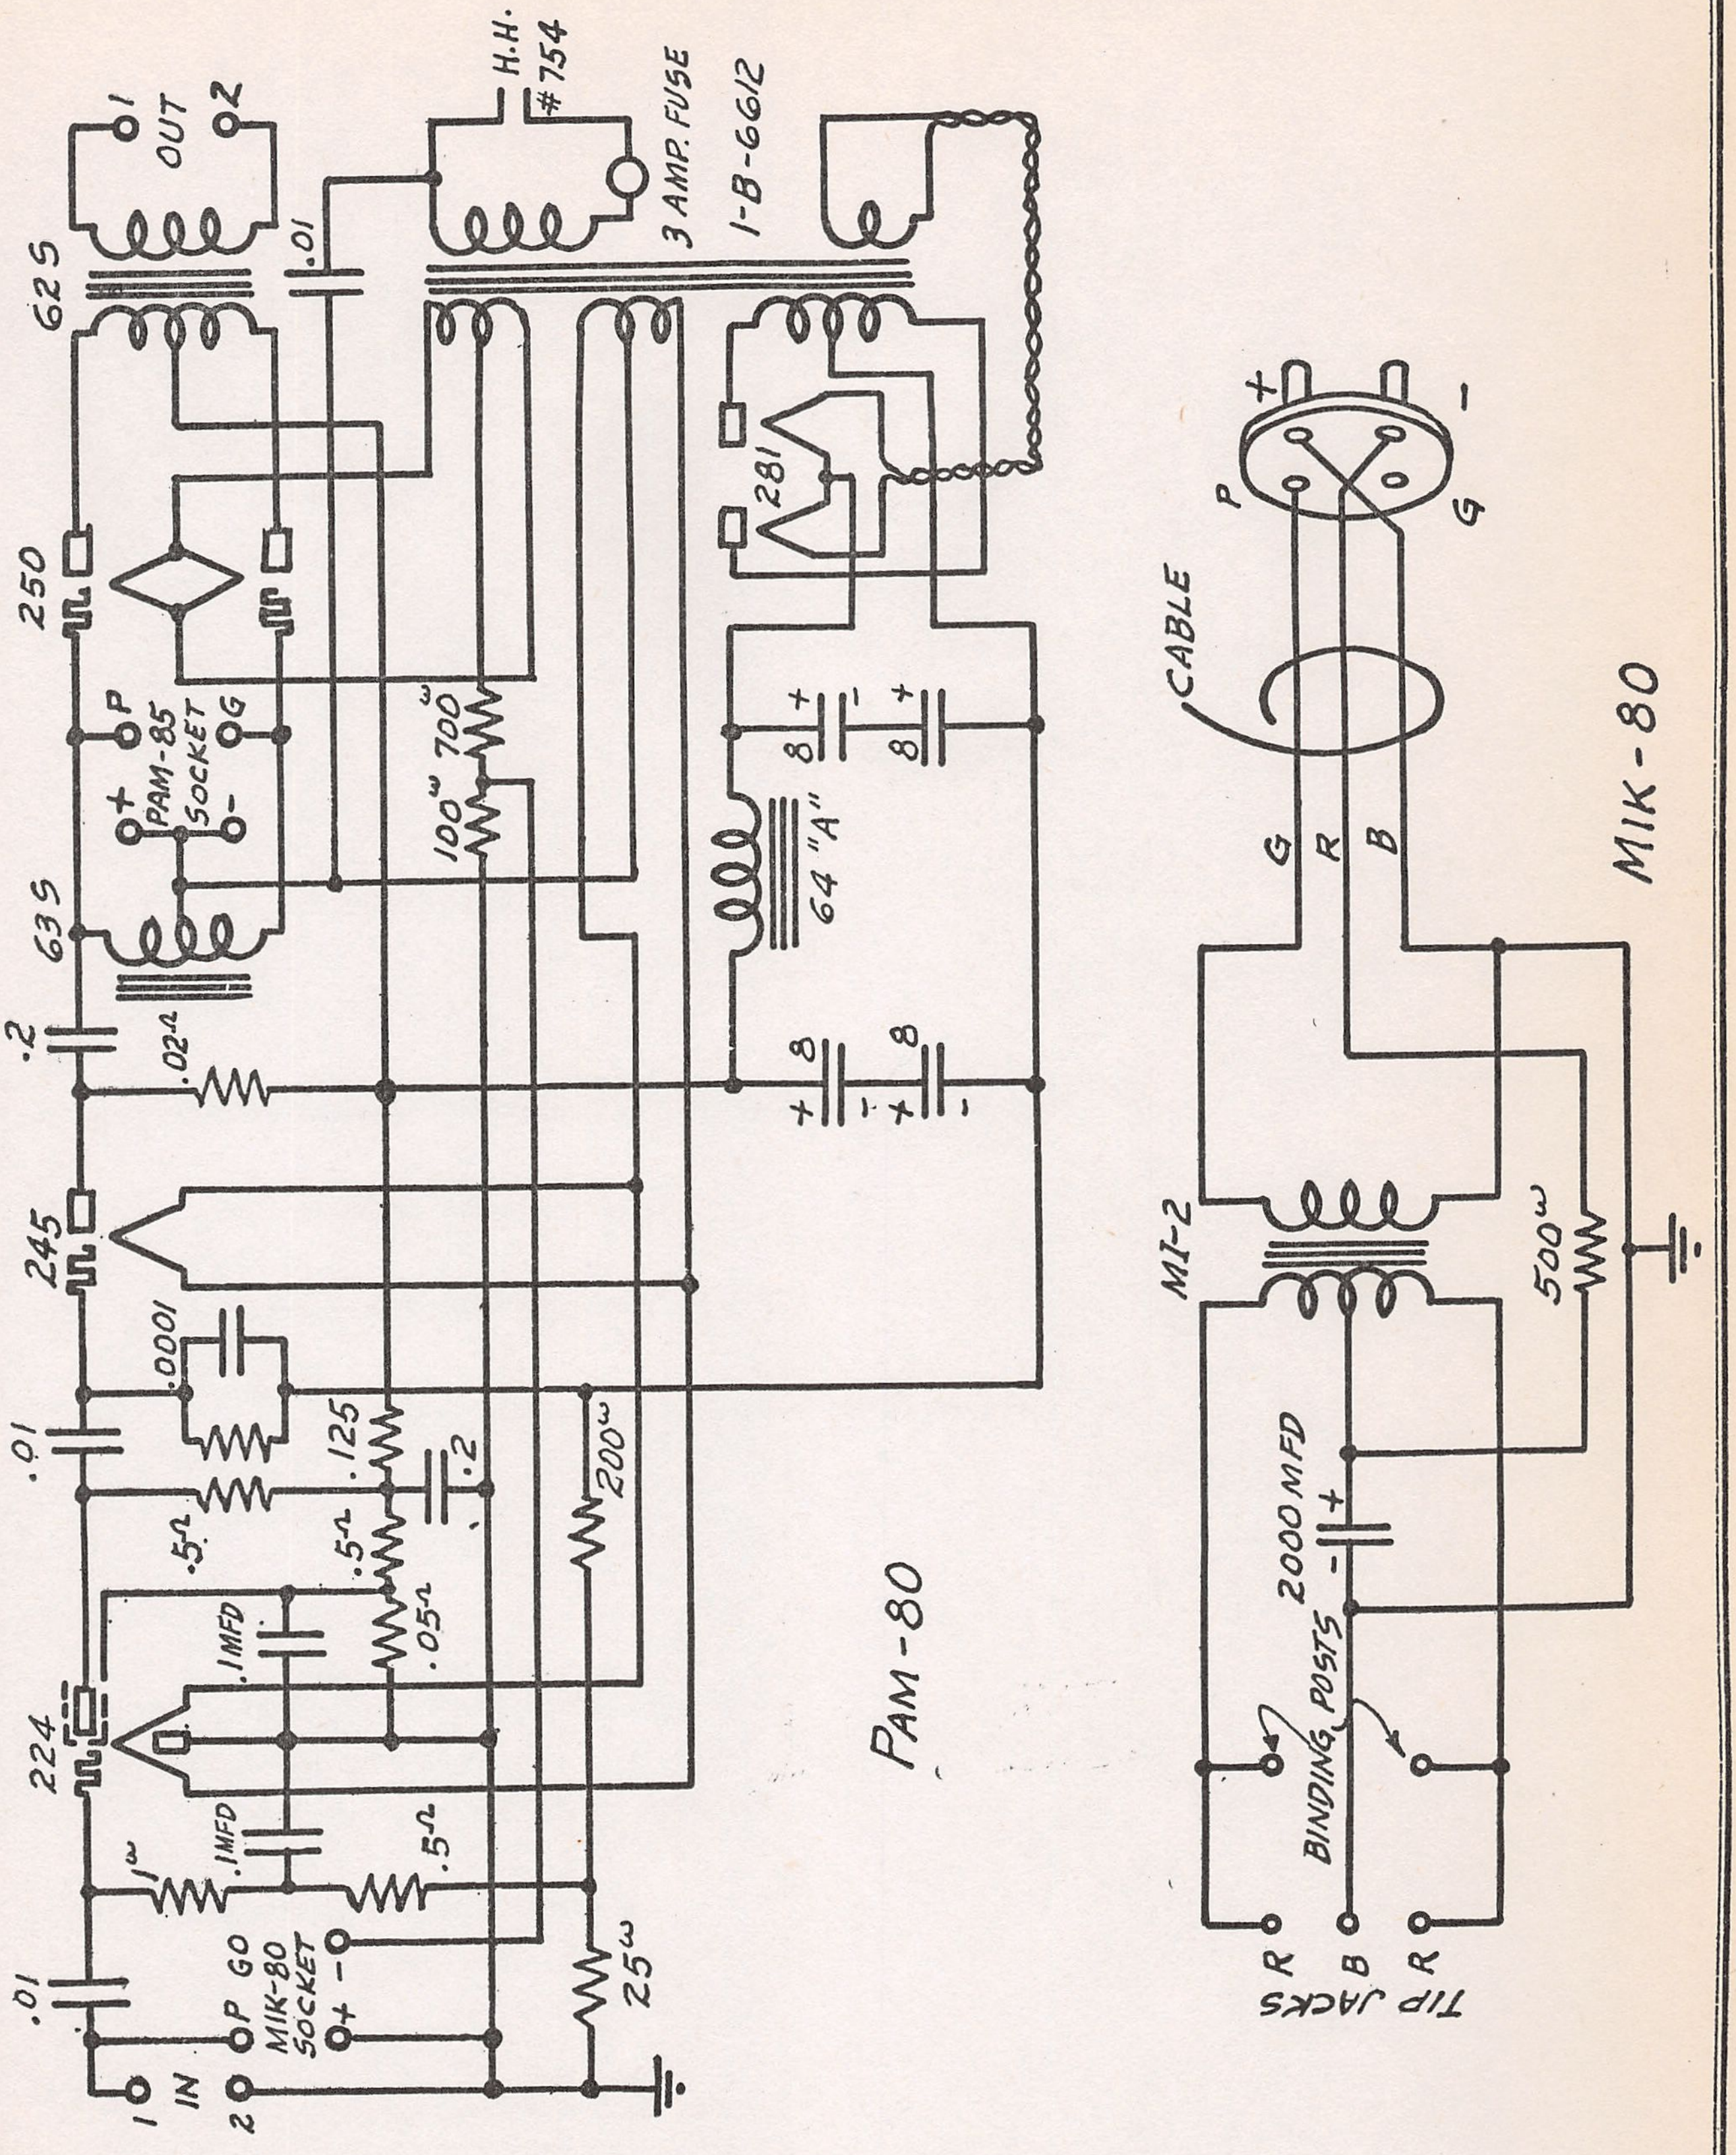
1 OUT 2
625
.01
H.H. #754
3 AMP. FUSE
1-B-6612
250
P
PAM-85 SOCKET
G
+
-
635
281
+ 8
+ 8
64 "A"
100ω 700ω
.2
.02Ω
+ 8 -
+ 8 -
245
.0001
.01
.125
.2
200ω
.5Ω
.5Ω
.05Ω
.1MFD
224
1ω
.1MFD
.5Ω
.01
P GO
MIK-80 SOCKET
+ -
25ω
1 IN 2
PAM-80
+
-
P
G
CABLE
G
R
B
MIK-80
MI-2
500ω
2000 MFD
+
-
BINDING POSTS
R B R
TIP JACKS

SCOTT TRANSFORMER CO.

MODEL "World Record" 10
MODEL Shield Grid "9"

Model World Record 10

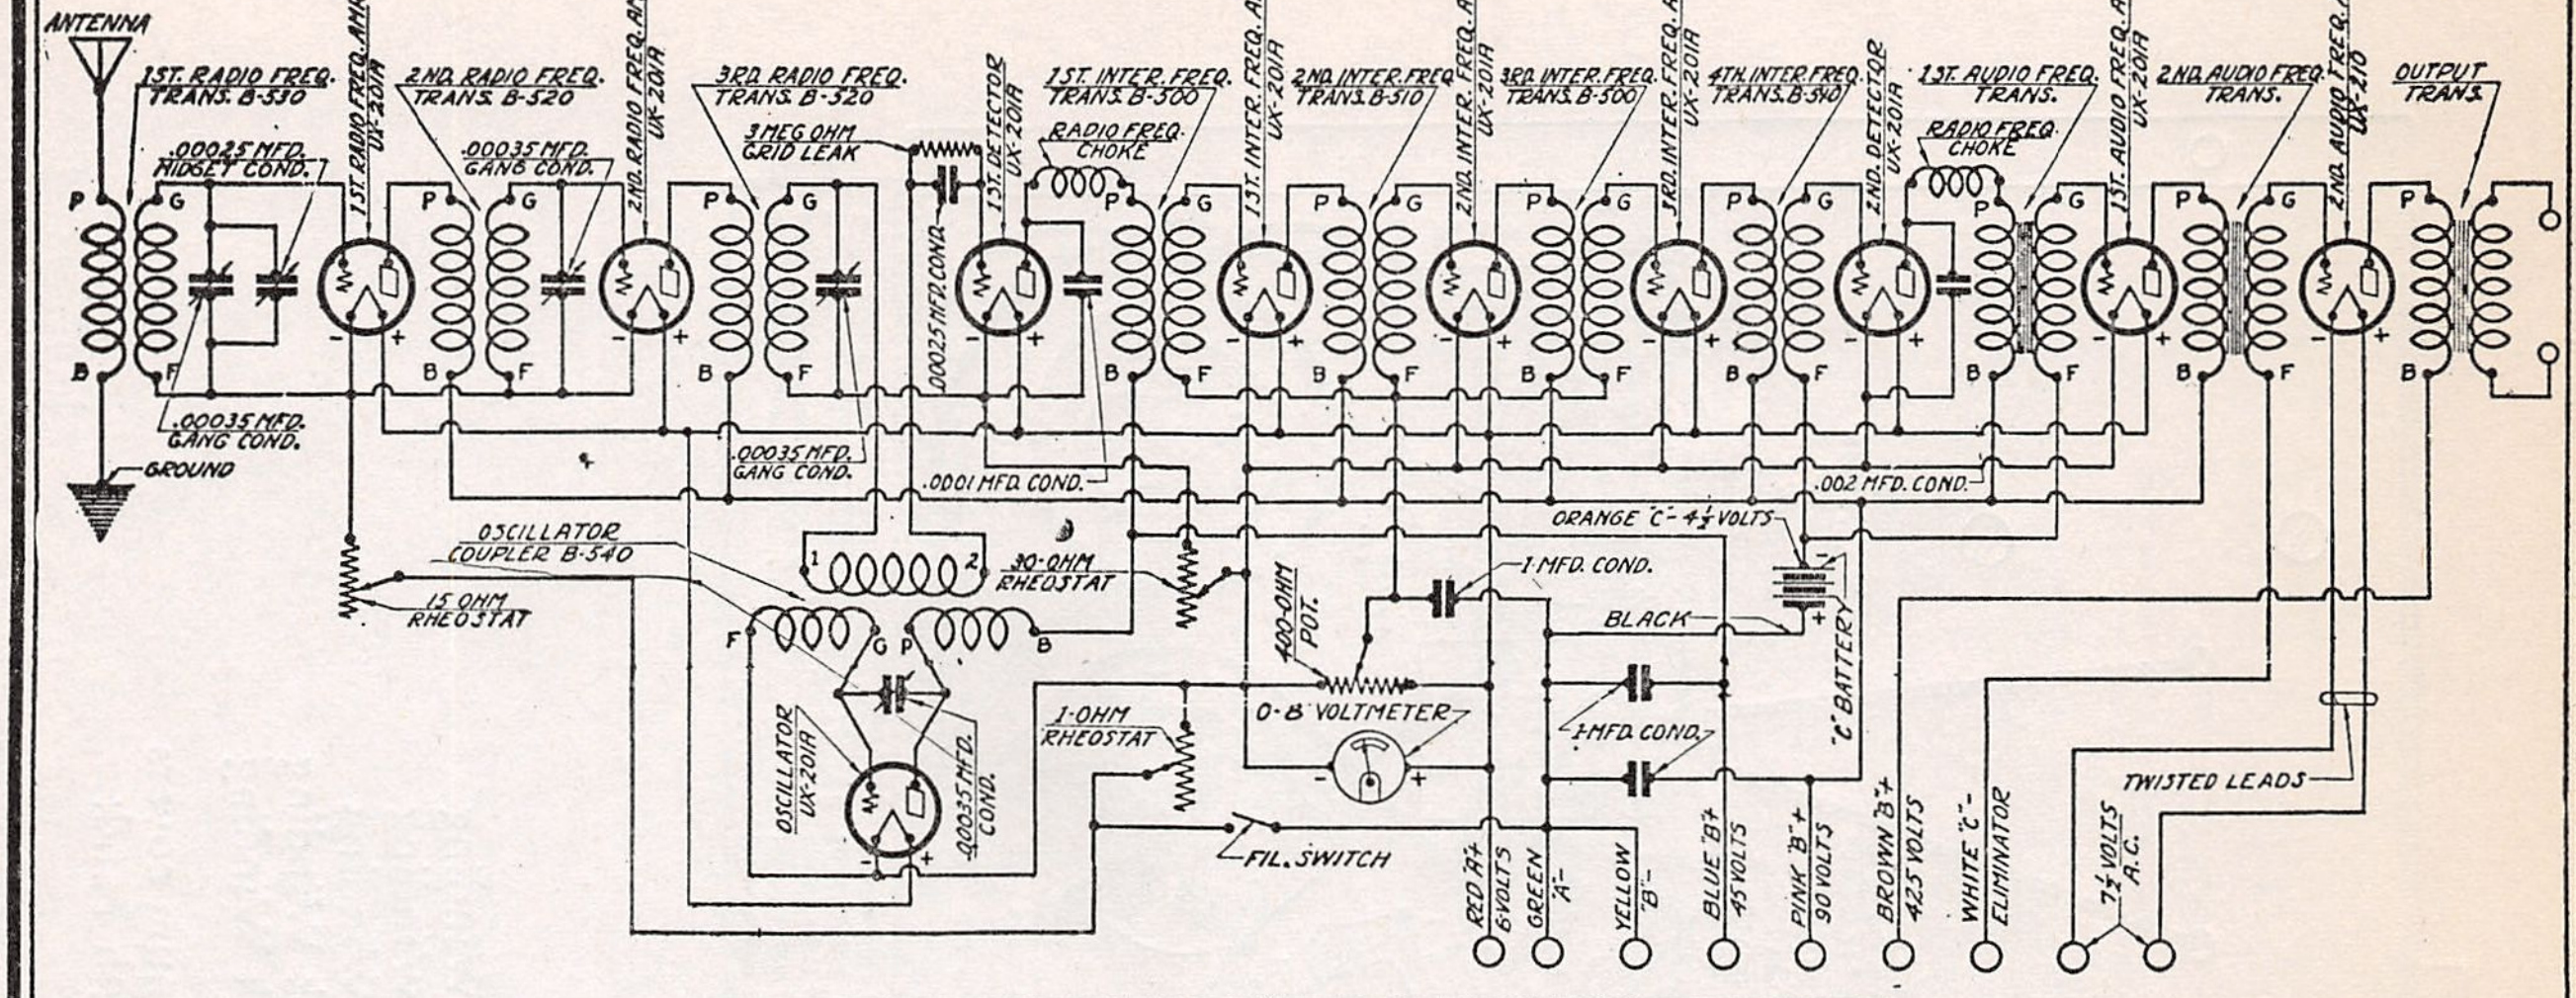
ANTENNA
1ST. RADIO FREQ. TRANS. B-530
.00025 MFD. MIDGET COND.
.00035 MFD. GANG COND.
GROUND
1ST. RADIO FREQ. AMP. UX-201A
2ND. RADIO FREQ. TRANS. B-520
.00035 MFD. GANG COND.
2ND. RADIO FREQ. AMP. UX-201A
3RD. RADIO FREQ. TRANS. B-520
3 MEG OHM GRID LEAK
.00035 MFD. GANG COND.
.00025 MFD. COND.
1ST. DETECTOR UX-201A
RADIO FREQ. CHOKE
1ST. INTER. FREQ. TRANS. B-500
.0001 MFD. COND.
1ST. INTER. FREQ. AMP. UX-201A
2ND. INTER. FREQ. TRANS. B-510
2ND. INTER. FREQ. AMP. UX-201A
3RD. INTER. FREQ. TRANS. B-500
3RD. INTER. FREQ. AMP. UX-201A
4TH. INTER. FREQ. TRANS. B-540
2ND. DETECTOR UX-201A
RADIO FREQ. CHOKE
1ST. AUDIO FREQ. TRANS.
1ST. AUDIO FREQ. AMP. UX-201A
2ND. AUDIO FREQ. TRANS.
2ND. AUDIO FREQ. AMP. UX-210
OUTPUT TRANS.
.002 MFD. COND.
P
G
B
F
OSCILLATOR COUPLER B-540
15 OHM RHEOSTAT
30-OHM RHEOSTAT
1
2
OSCILLATOR UX-201A
.00035 MFD. COND.
1-OHM RHEOSTAT
FIL. SWITCH
400-OHM POT.
0-8 VOLTMETER
1 MFD. COND.
1 MFD. COND.
BLACK
ORANGE "C"- 4½ VOLTS
"C" BATTERY
RED "A"+ 6 VOLTS
GREEN "A"-
YELLOW "B"-
BLUE "B"+ 45 VOLTS
PINK "B"+ 90 VOLTS
BROWN "B"+ 425 VOLTS
WHITE "C"- ELIMINATOR
TWISTED LEADS
7½ VOLTS A.C.

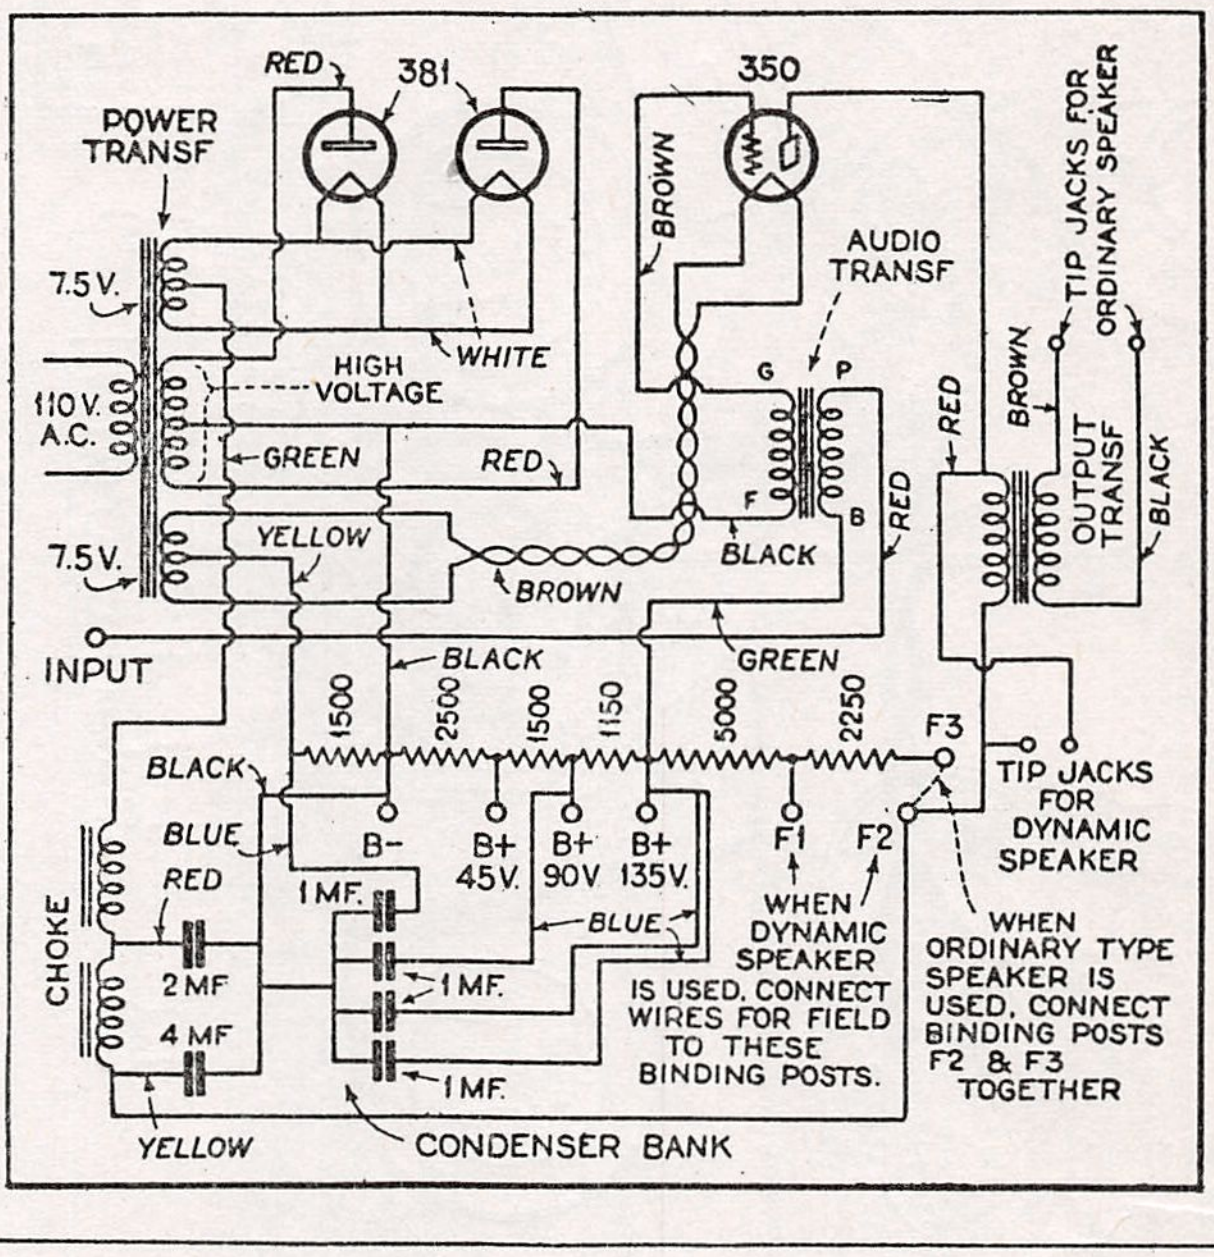
RED
381
350
POWER TRANSF
7.5 V.
110 V. A.C.
HIGH VOLTAGE
WHITE
GREEN
RED
YELLOW
7.5 V.
BROWN
INPUT
BROWN
AUDIO TRANSF
G
P
F
B
BLACK
RED
GREEN
RED
BROWN
OUTPUT TRANSF
BLACK
TIP JACKS FOR ORDINARY SPEAKER
BLACK
1500
2500
1500
1150
5000
2250
F3
TIP JACKS FOR DYNAMIC SPEAKER
BLACK
BLUE
RED
B-
B+ 45V.
B+ 90V
B+ 135V.
F1
F2
CHOKE
2 MF
4 MF
1 MF.
1 MF.
1 MF.
BLUE
WHEN DYNAMIC SPEAKER IS USED, CONNECT WIRES FOR FIELD TO THESE BINDING POSTS.
WHEN ORDINARY TYPE SPEAKER IS USED, CONNECT BINDING POSTS F2 & F3 TOGETHER
YELLOW
CONDENSER BANK

Model Shield Grid 9 Power Pack

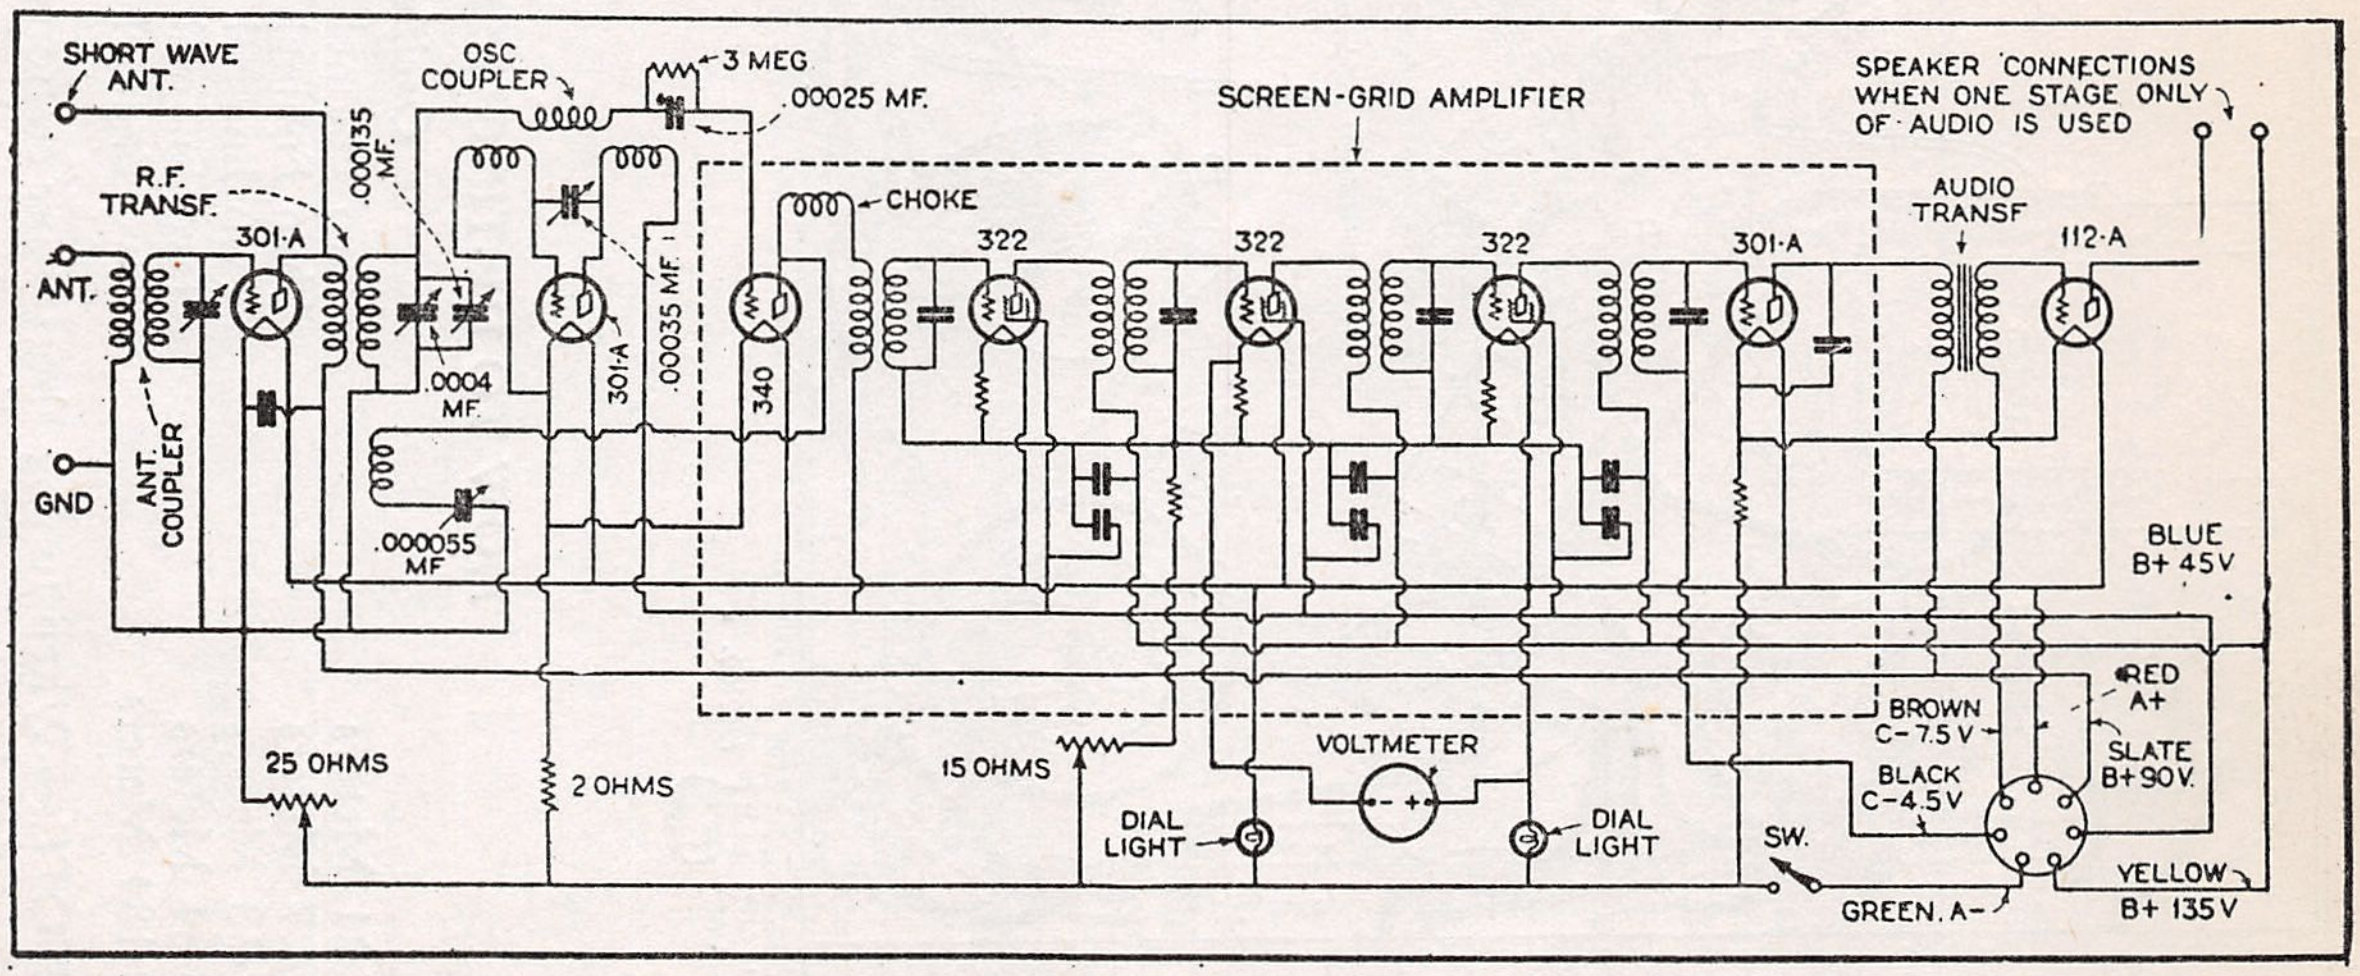
SHORT WAVE ANT.
OSC COUPLER
3 MEG
.00025 MF.
SCREEN-GRID AMPLIFIER
SPEAKER CONNECTIONS WHEN ONE STAGE ONLY OF AUDIO IS USED
R.F. TRANSF.
.000135 MF.
CHOKE
ANT.
301-A
.0004 MF.
301-A
.00035 MF.
340
322
322
322
301-A
AUDIO TRANSF
112-A
GND
ANT. COUPLER
.000055 MF
BLUE B+ 45V
RED A+
BROWN C- 7.5 V
SLATE B+ 90V.
BLACK C- 4.5 V
YELLOW B+ 135 V
GREEN. A-
SW.
25 OHMS
2 OHMS
15 OHMS
VOLTMETER
DIAL LIGHT
DIAL LIGHT

Model Shield Grid 9 Receiver Schematic

MODEL "All Wave" Super, Receiver Chassis

SCOTT TRANSFORMER CO.

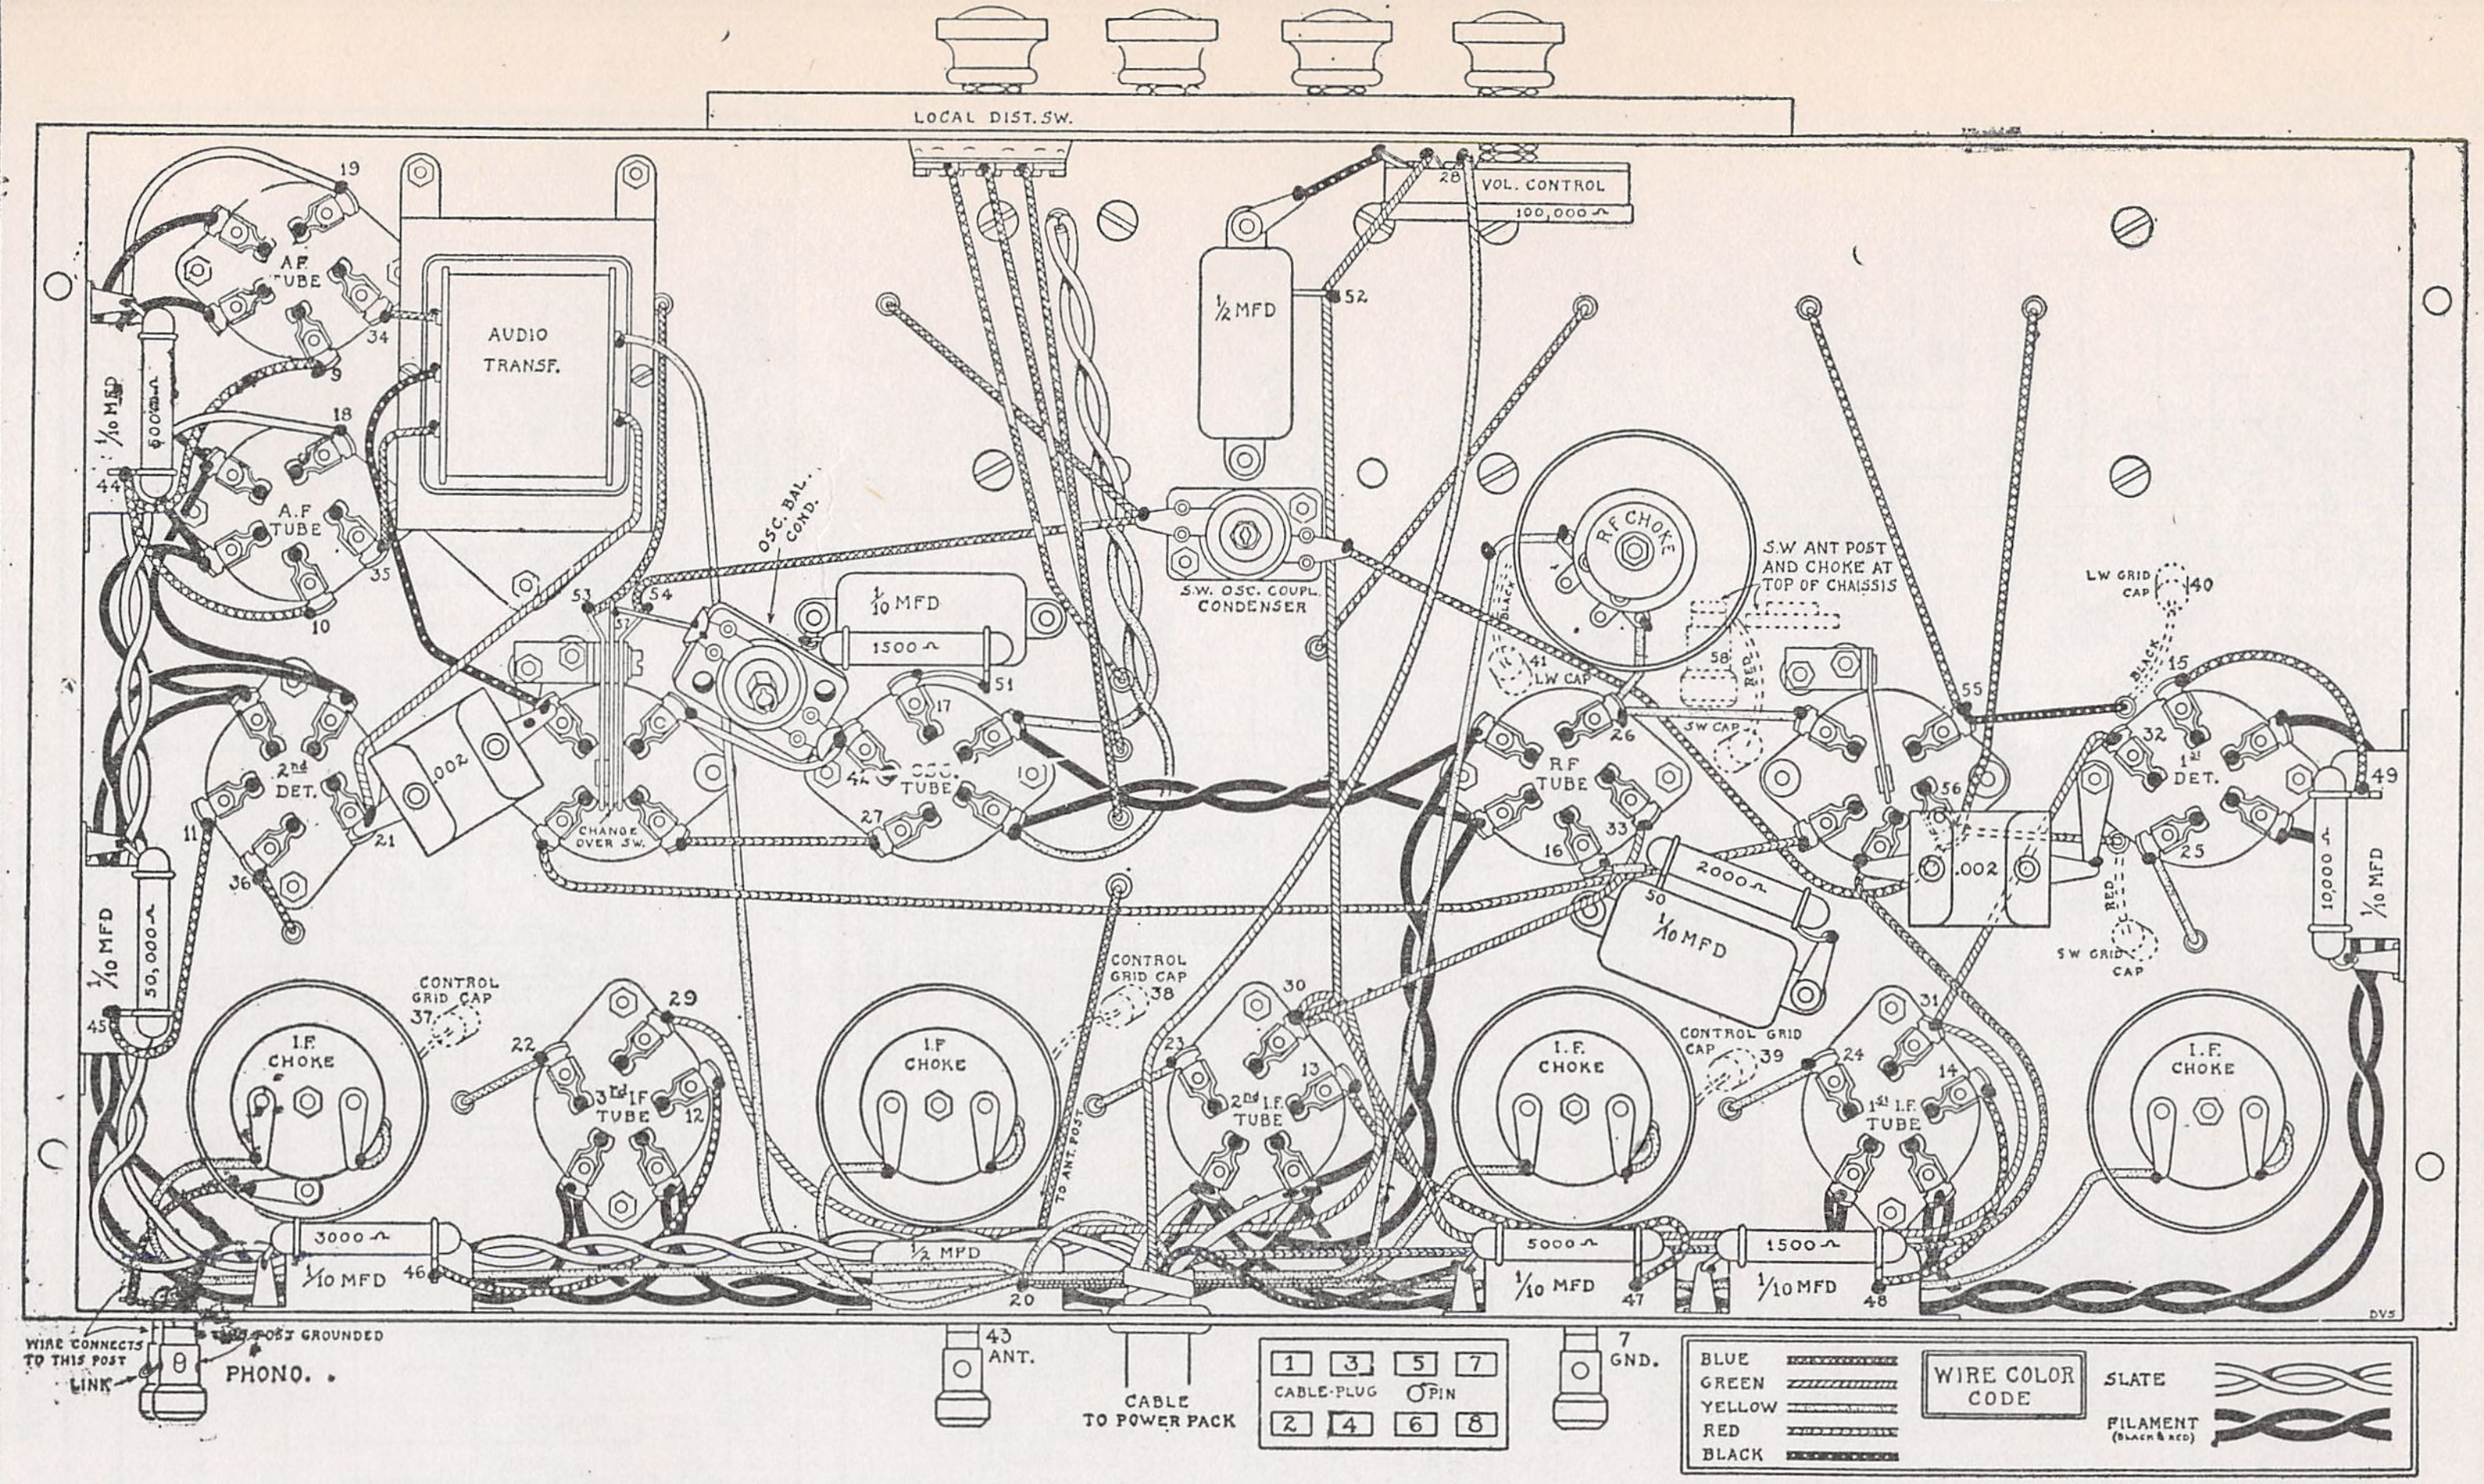
LOCAL DIST. SW.
VOL. CONTROL
100,000 Ω
AUDIO TRANSF.
A.F. TUBE
A.F. TUBE
2nd DET.
1/10 MFD
600 Ω
30,000 Ω
1/2 MFD
.002
CHANGE OVER SW.
OSC. BAL. COND.
1/10 MFD
1500 Ω
OSC. TUBE
S.W. OSC. COUPL. CONDENSER
R.F. CHOKE
S.W. ANT POST AND CHOKE AT TOP OF CHASSIS
LW CAP
SW CAP
R.F. TUBE
2000 Ω
1/10 MFD
.002
LW GRID CAP
SW GRID CAP
1st DET.
10,000 Ω
1/10 MFD
CONTROL GRID CAP 37
CONTROL GRID CAP 38
CONTROL GRID CAP 39
I.F. CHOKE
3rd I.F. TUBE
2nd I.F. TUBE
1st I.F. TUBE
TO ANT. POS.
3000 Ω
1/10 MFD
1/2 MFD
5000 Ω
1/10 MFD
1500 Ω
1/10 MFD
WIRE CONNECTS TO THIS POST
LINK
THIS POST GROUNDED
PHONO.
43 ANT.
CABLE TO POWER PACK
CABLE-PLUG
PIN
7 GND.
BLUE
GREEN
YELLOW
RED
BLACK
WIRE COLOR CODE
SLATE
FILAMENT (BLACK & RED)
DVS

HOW TO DISTINGUISH OSCILLATOR FROM R. F. COIL

	Oscillator Coil	R. F. Coil
15-21 Meters	Two Enamel Wire Windings	One Enamel Wire Winding
21-27 Meters	Two Enamel Wire Windings	One Enamel Wire Winding
27-38 Meters	Two Enamel Wire Windings	One Enamel Wire Winding
38-84 Meters	Two Enamel Wire Windings	One Enamel, One Silk Winding
84-184 Meters	Two Enamel Wire Windings	One Enamel, One Silk Winding

NOTE:—When tuning short wave stations the short wave coils **must be left exposed** (the aluminum covers **should not be replaced**). Be sure that both oscillator and R. F. coils are for the same wave length band:

The tube on the extreme right of the chassis is the first detector

SCOTT TRANSFORMER CO.

MODEL "All Wave" Super Receiver Schematic

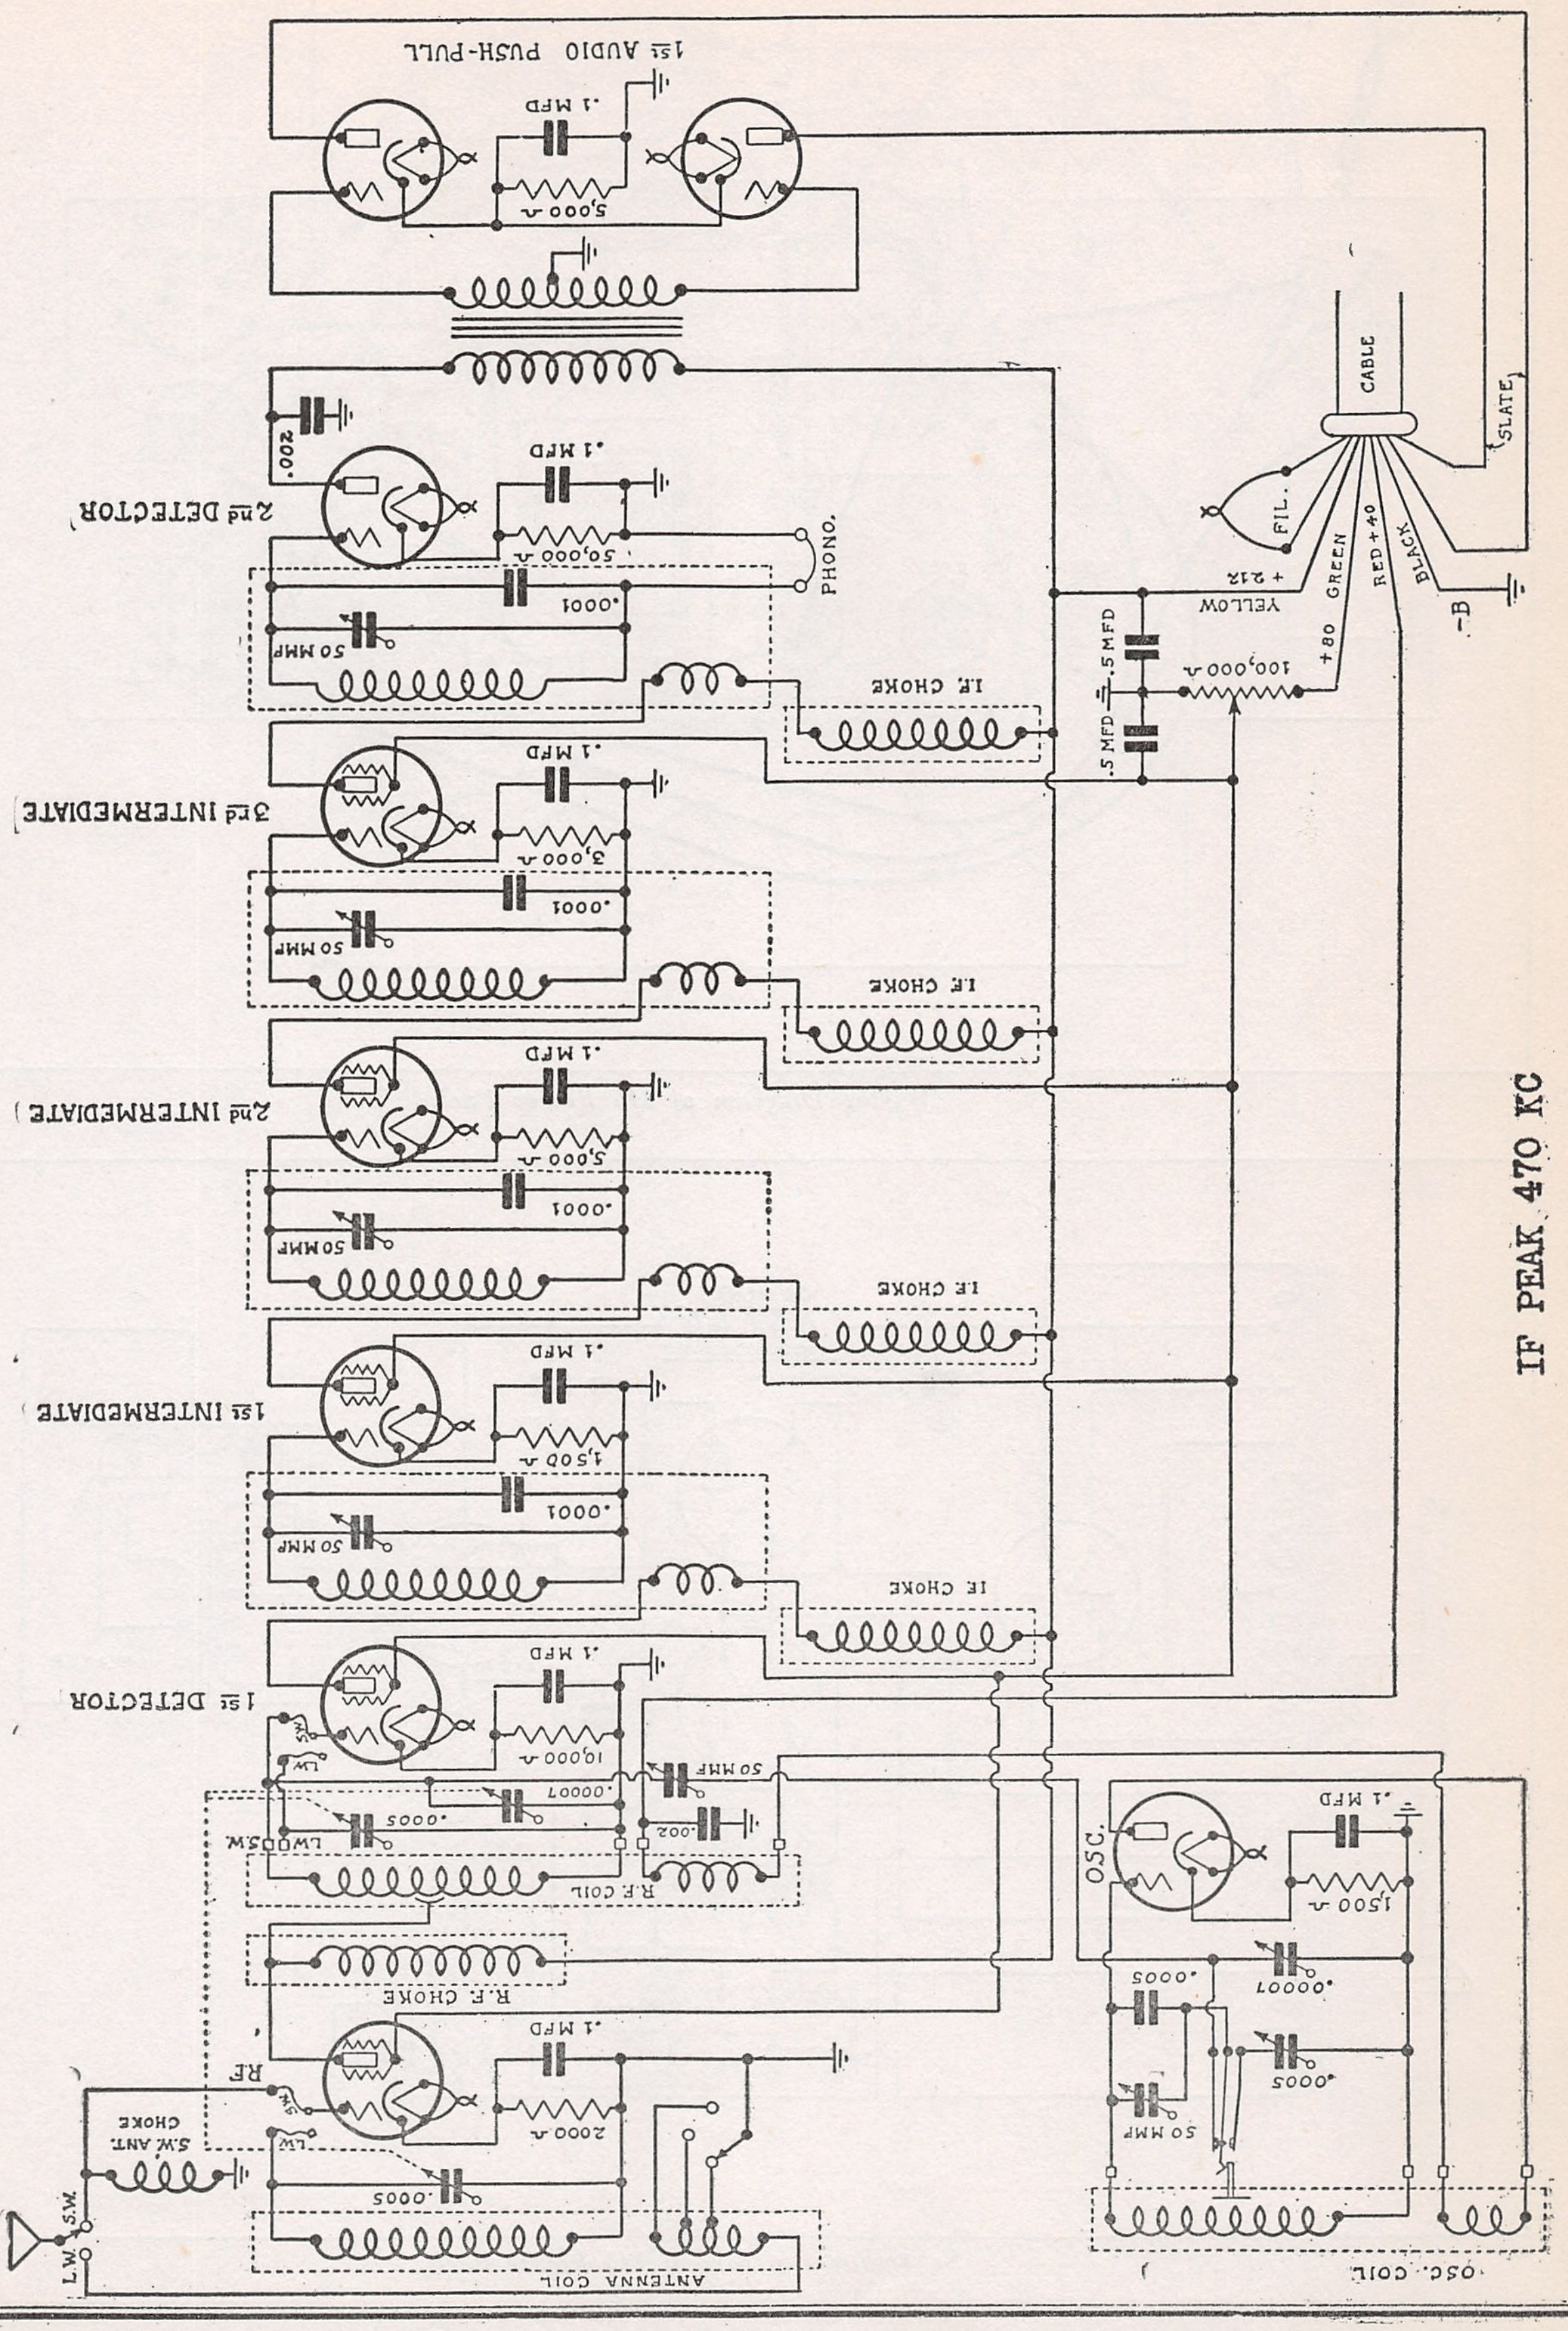
1st AUDIO PUSH-PULL
.1 MFD
5,000 Ω
.002
2nd DETECTOR
.1 MFD
50,000 Ω
PHONO.
.0001
50 MMF
I.F. CHOKE
3rd INTERMEDIATE
.1 MFD
3,000 Ω
.0001
50 MMF
I.F. CHOKE
2nd INTERMEDIATE
.1 MFD
5,000 Ω
.0001
50 MMF
I.F. CHOKE
1st INTERMEDIATE
.1 MFD
1,500 Ω
.0001
50 MMF
I.F. CHOKE
1st DETECTOR
.1 MFD
10,000 Ω
S.W.
L.W.
.00007
50 MMF
.0005
.002
LW S.W.
R.F. COIL
R.F. CHOKE
RF
.1 MFD
2000 Ω
S.W.
LW
S.W. ANT. CHOKE
.0005
ANTENNA COIL
LW.
S.W.
OSC.
.1 MFD
1,500 Ω
.0005
.00007
.0005
50 MMF
OSC. COIL
CABLE
SLATE
FIL.
+2½
YELLOW
+80
GREEN
RED +40
BLACK
-B
100,000 Ω
.5 MFD
.5 MFD

IF PEAK 470 KC

SCOTT TRANSFORMER CO.

MODEL "All Wave" Super
145 Power Pack
Schematic- Chassis

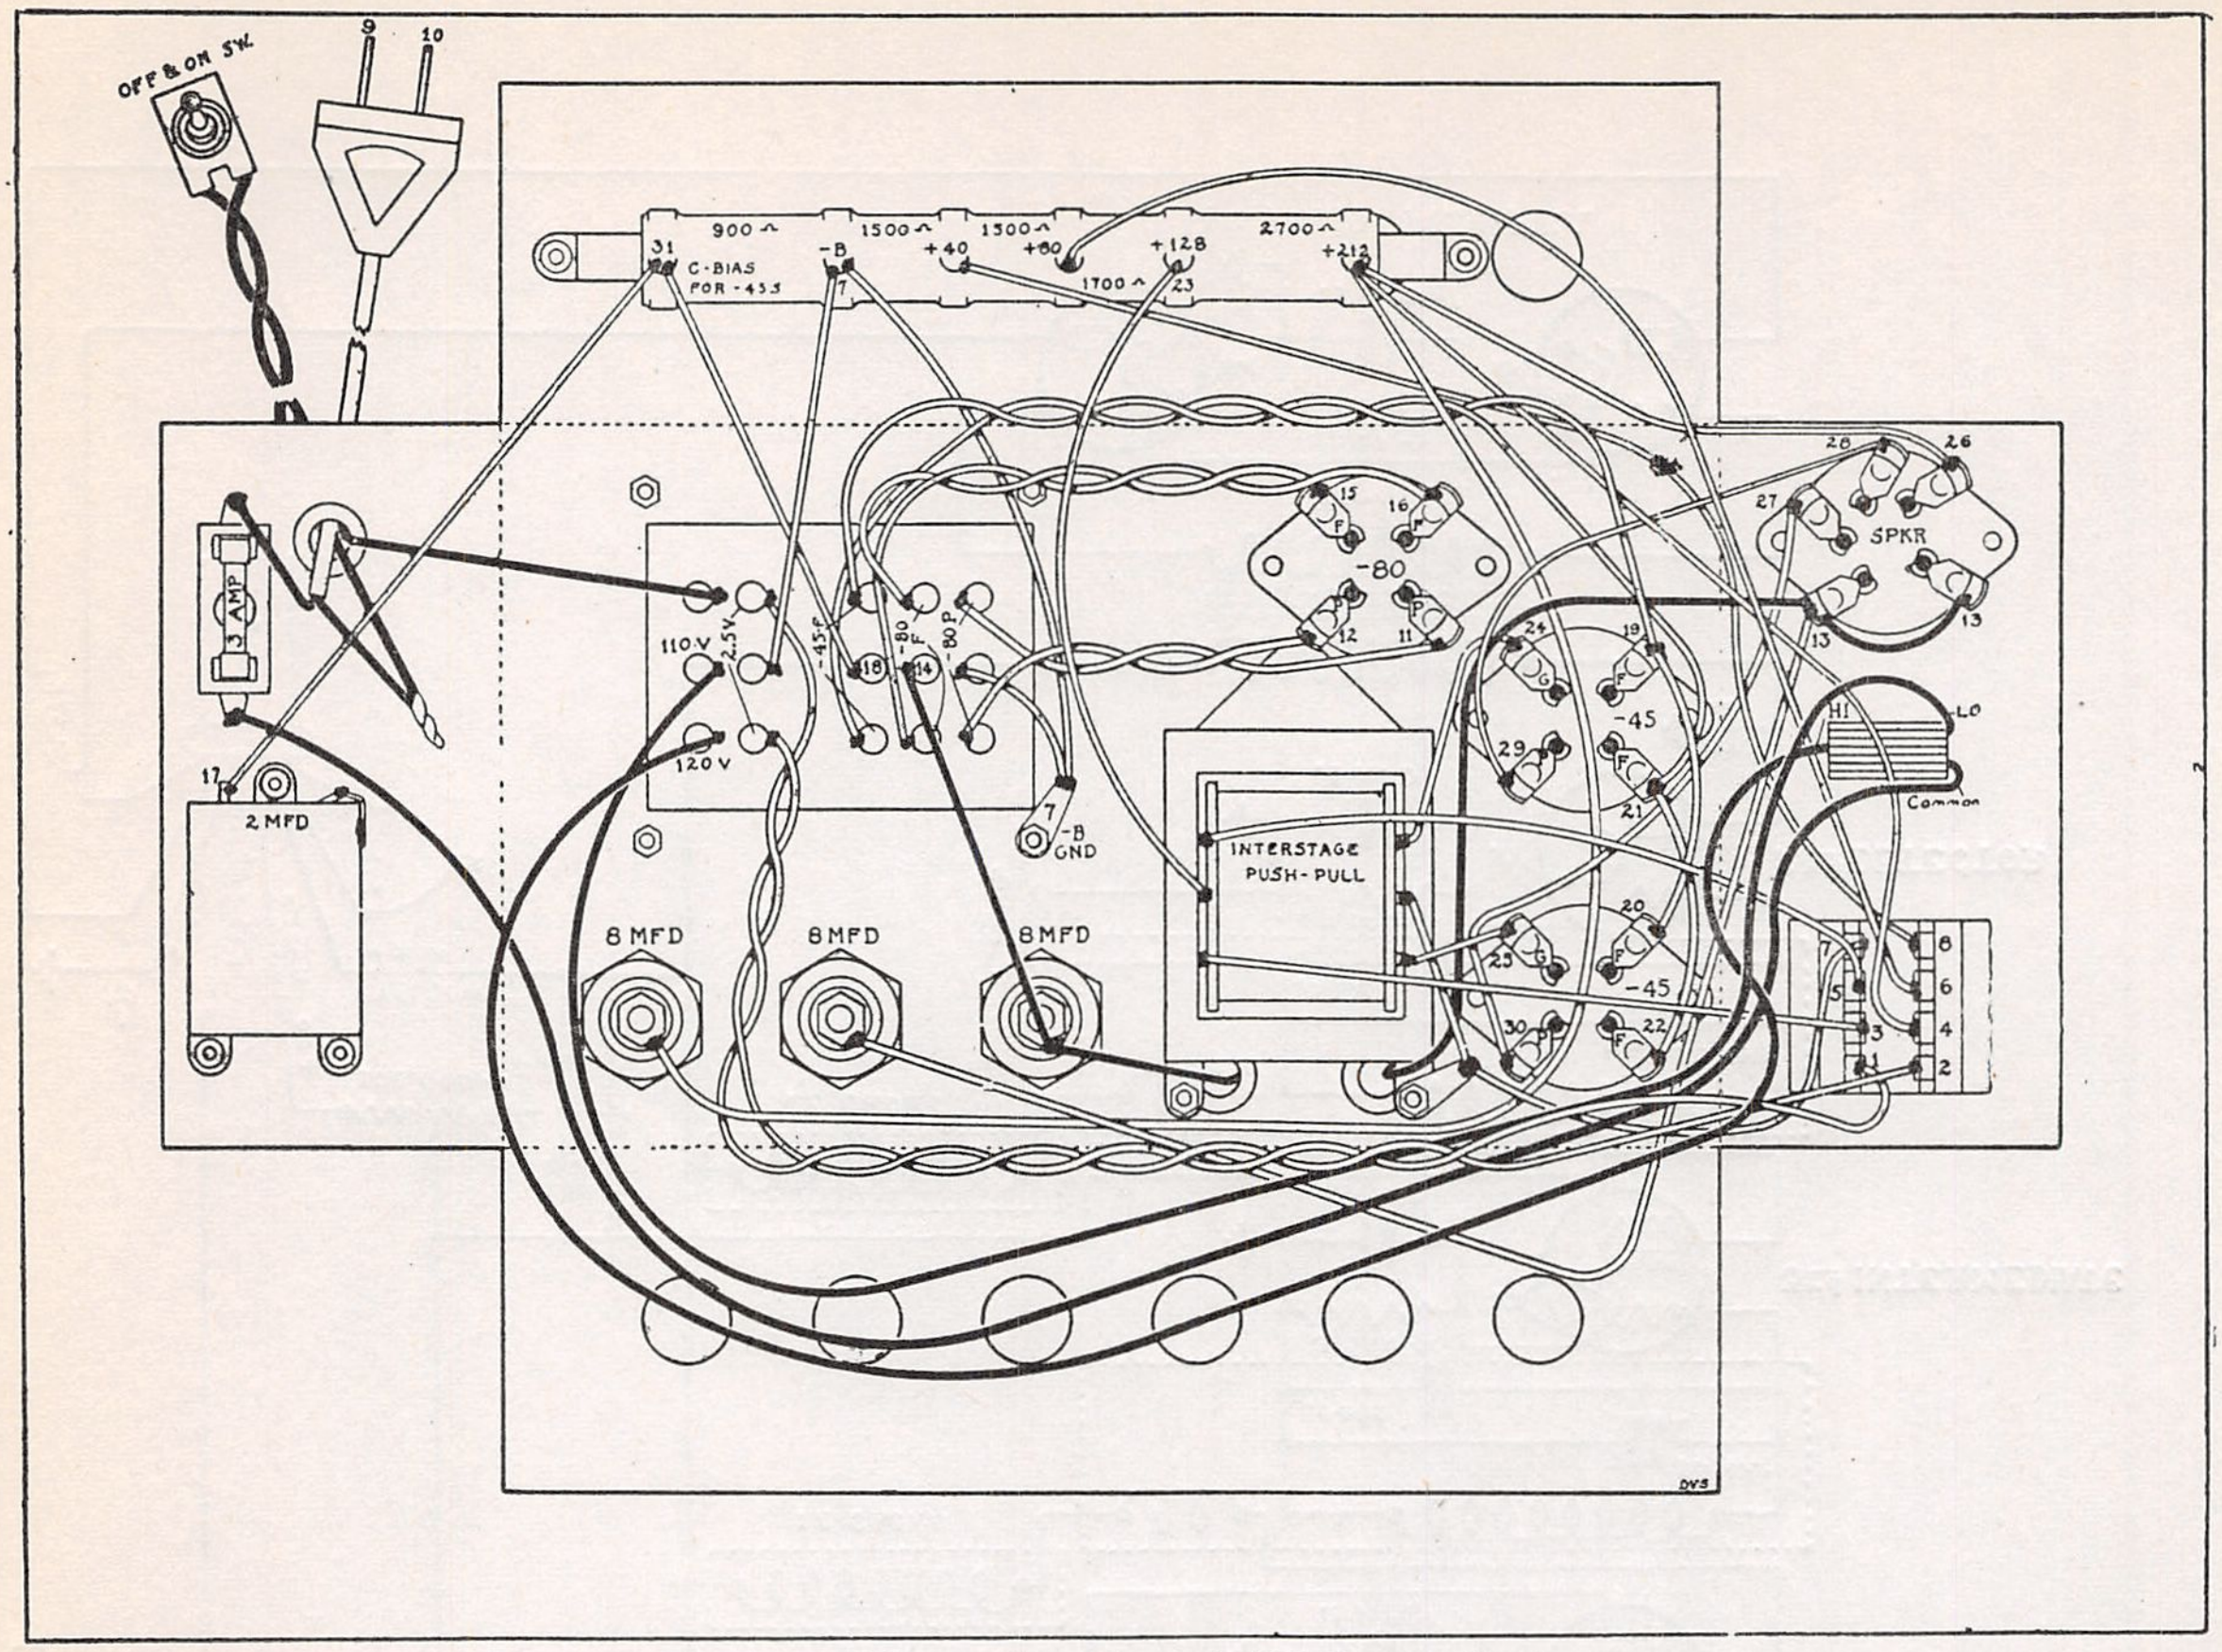
OFF & ON SW.
9
10
31
C-BIAS FOR -45's
900Ω
-B
1500Ω
+40
1300Ω
+80
+128
1700Ω
23
2700Ω
+212
3 AMP
110 V
2.5 V
120 V
-45 F
-80 F
80 P
18
14
15
16
-80
12
11
7
-B GND
17
2 MFD
8 MFD
8 MFD
8 MFD
INTERSTAGE PUSH-PULL
24
19
-45
29
21
20
23
-45
30
22
28
26
27
SPKR
13
13
HI
LO
Common
8
6
4
2
5
3
1
DVS

Wiring Diagram of 145 Power Pack

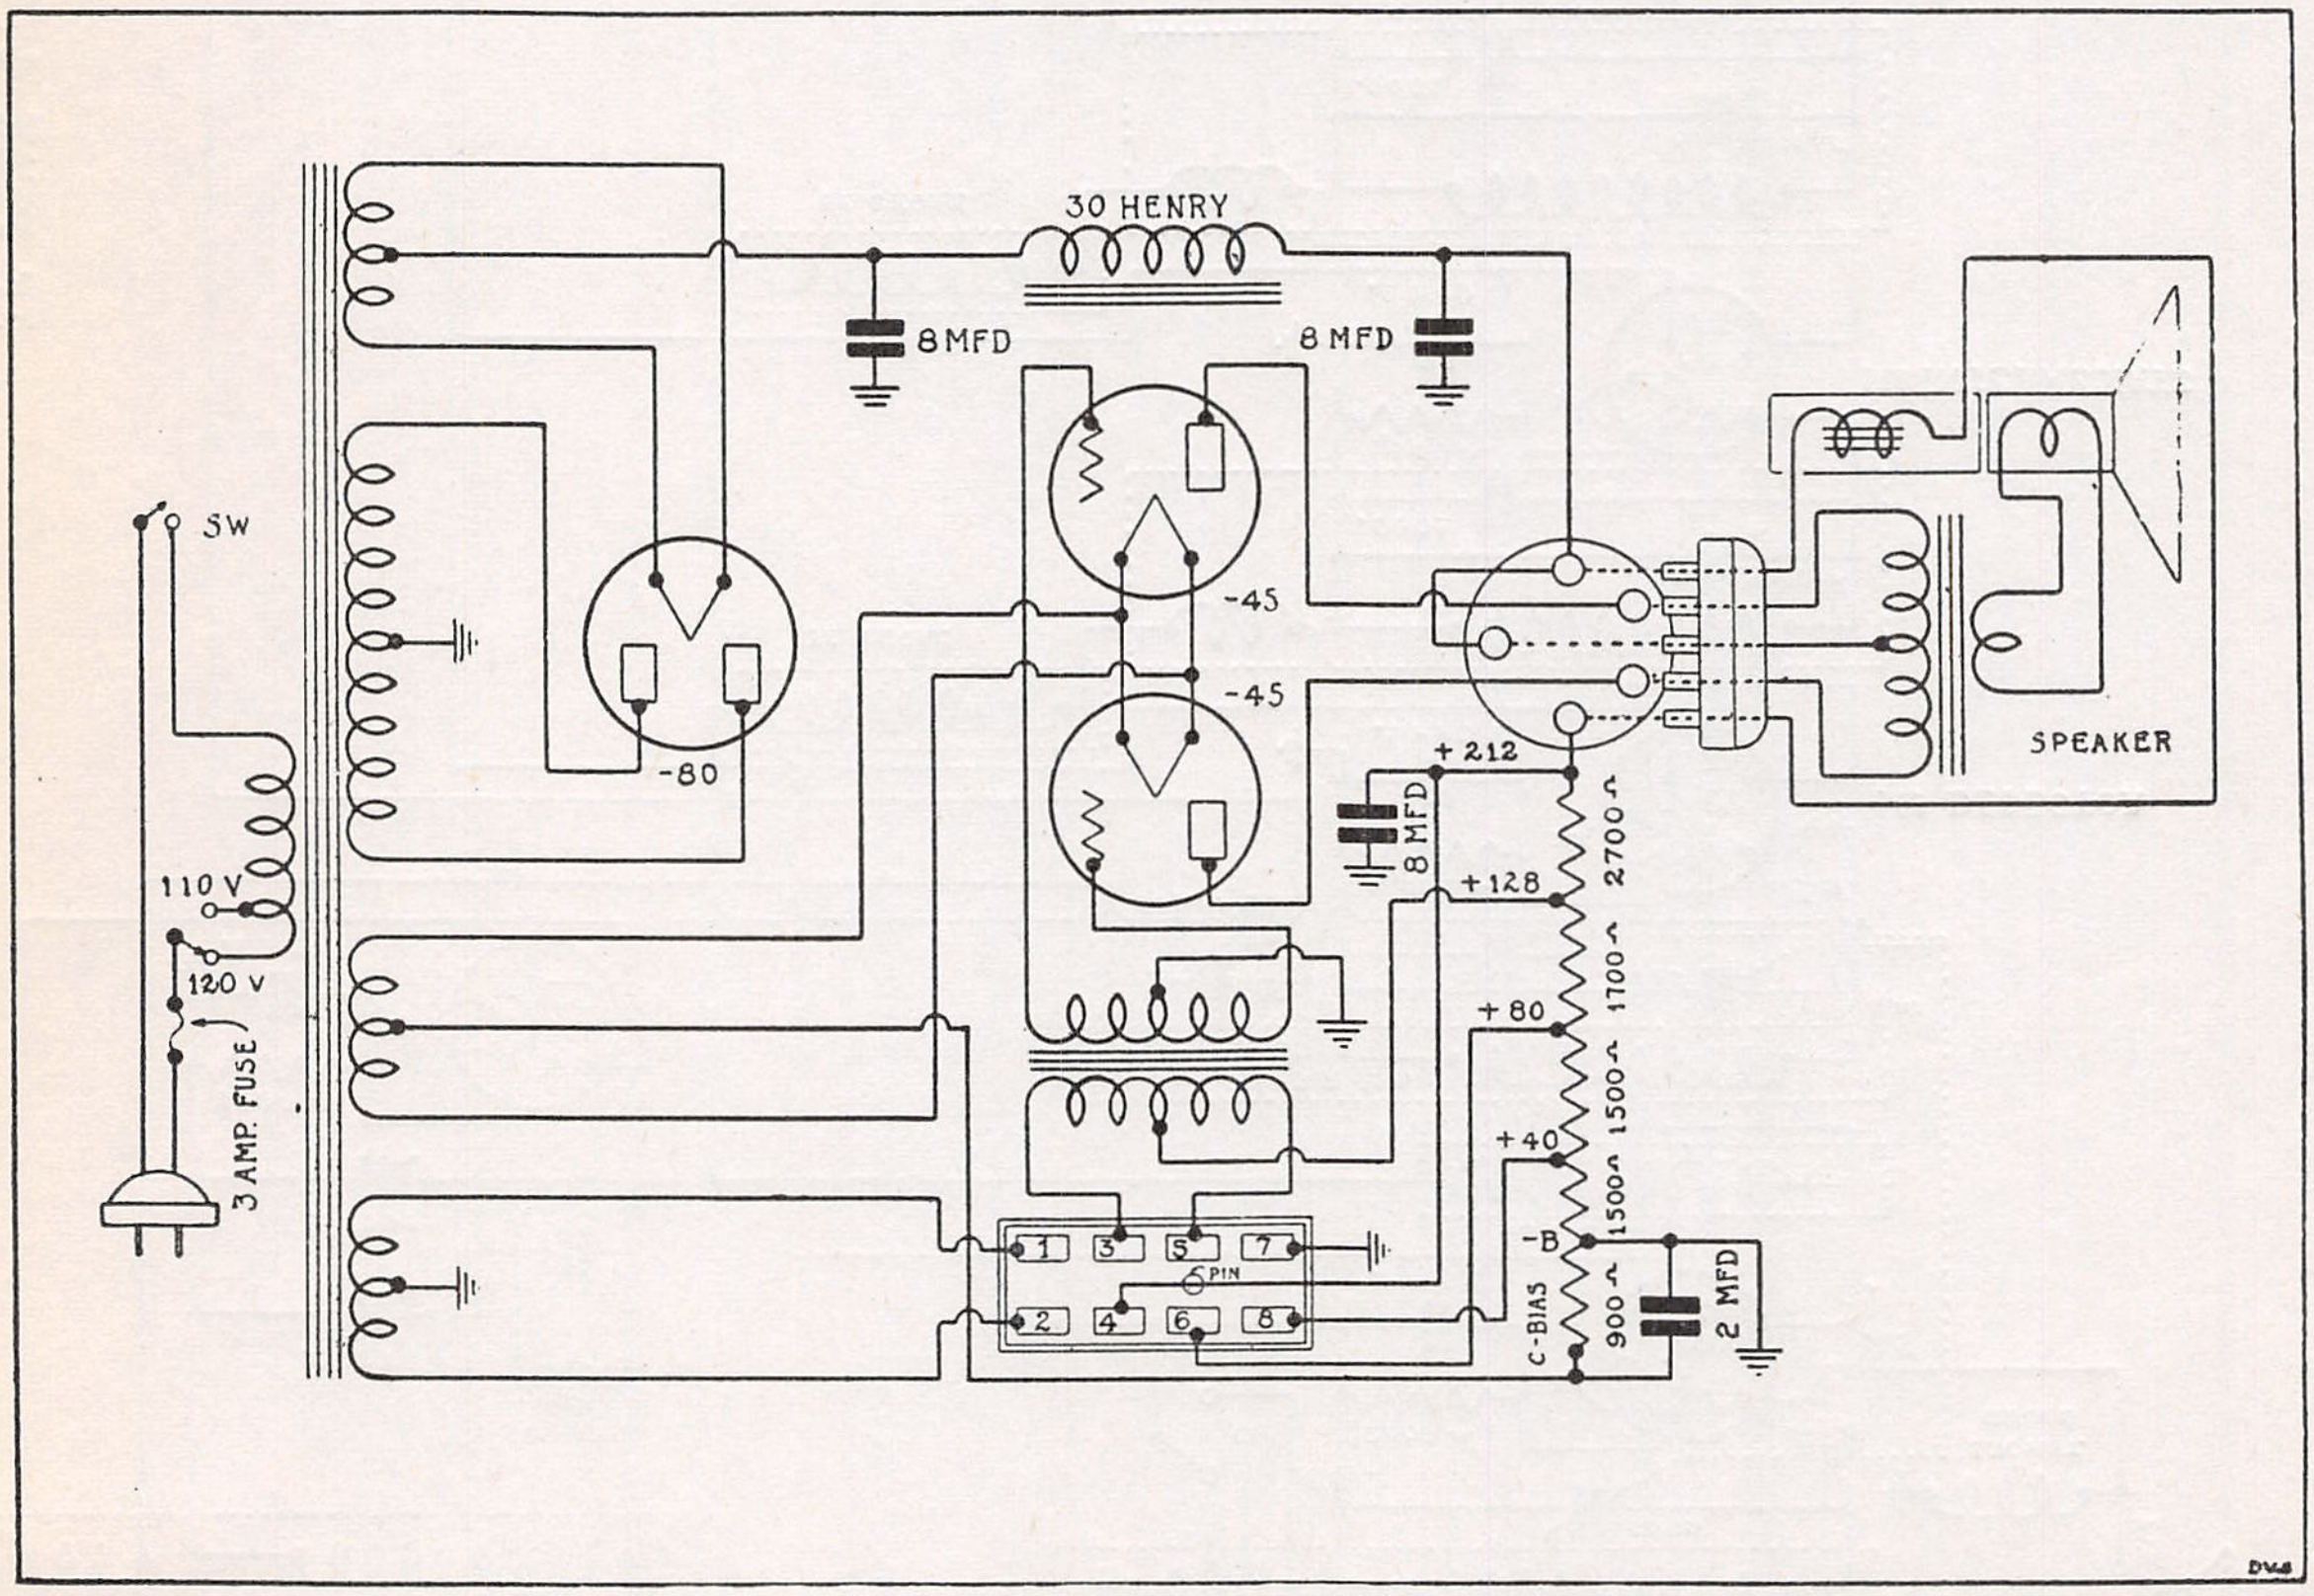
30 HENRY
8 MFD
8 MFD
SW
-80
-45
-45
+212
8 MFD
2700Ω
+128
1700Ω
+80
1500Ω
+40
1500Ω
-B
900Ω
C-BIAS
2 MFD
110 V
120 V
3 AMP. FUSE
1
3
5
7
2
4
6
8
6 PIN
SPEAKER
DVS

Schematic Diagram of 145 Power Pack

SEARS-ROEBUCK & CO.

MODEL 1150
MODEL 1260

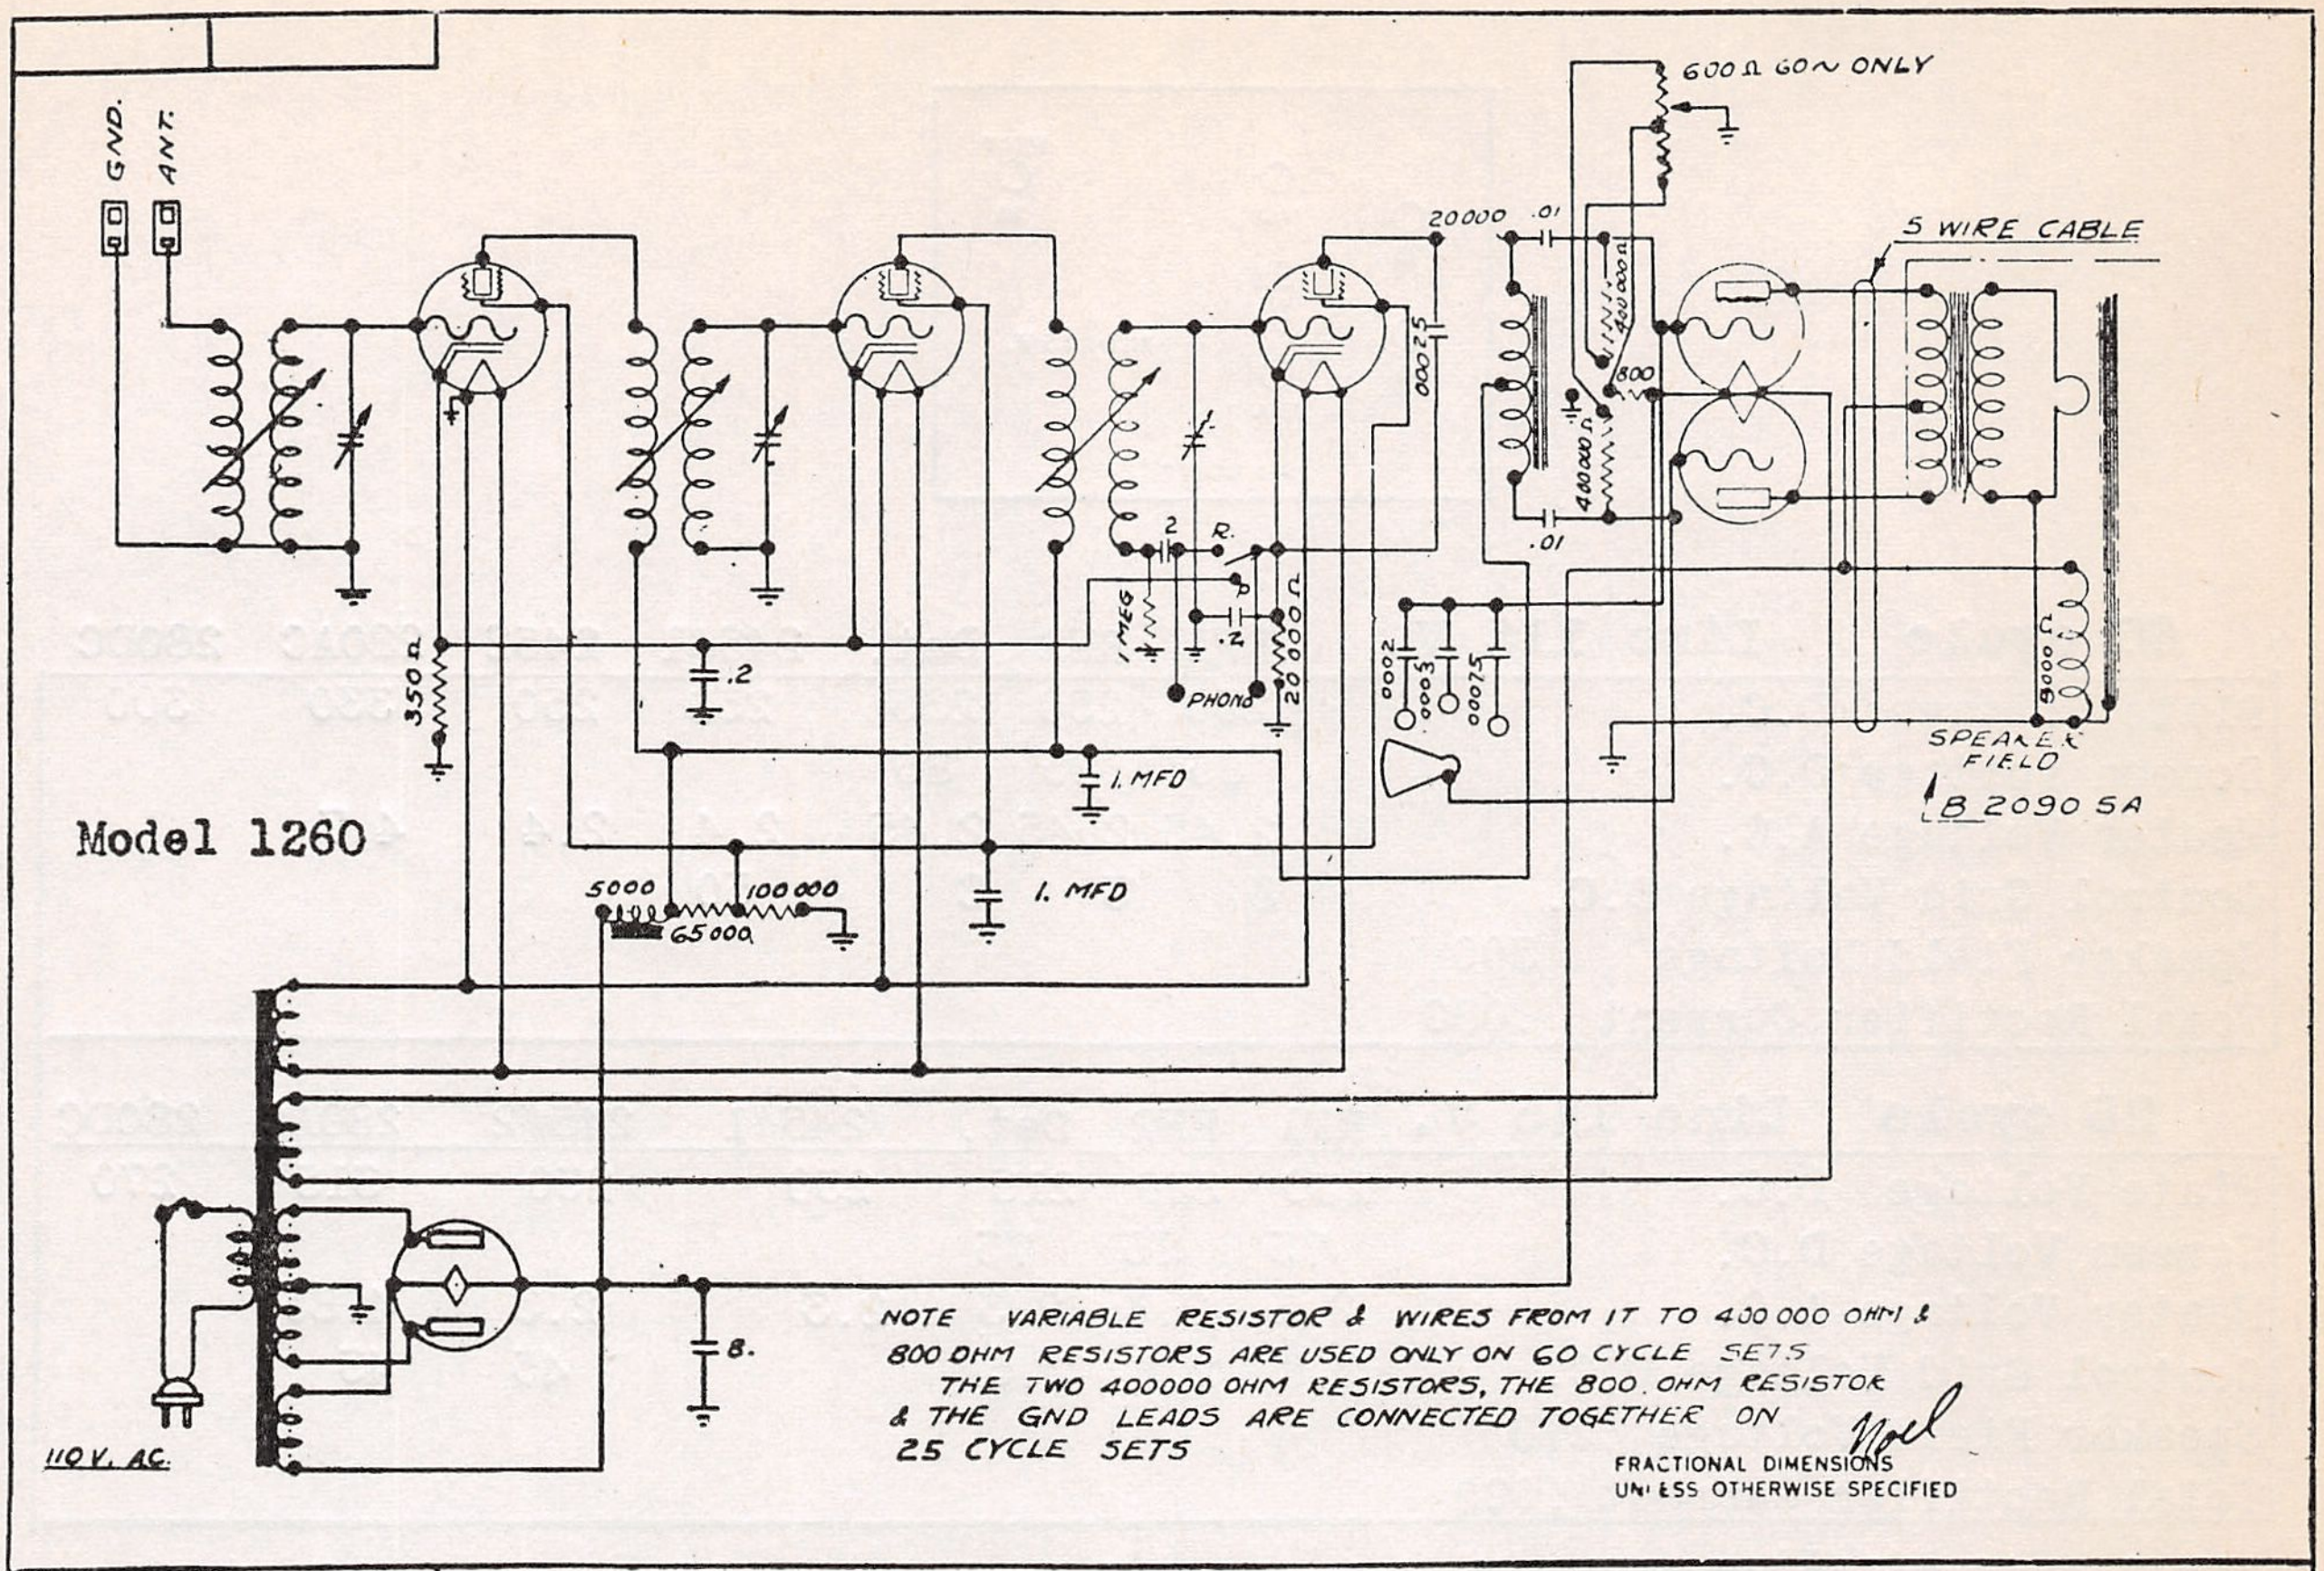
GND.
ANT.
600 Ω 60~ ONLY
20000
.01
5 WIRE CABLE
.00025
800
400000 Ω
400000 Ω
.01
2
R.
1 MEG
.2
20000 Ω
PHONO
.0002
.0003
.00075
350 Ω
.2
1. MFD
1. MFD
Model 1260
5000
100 000
65 000
8.
110 V. AC.
SPEAKER FIELD
9000 Ω
B 2090 SA

NOTE VARIABLE RESISTOR & WIRES FROM IT TO 400 000 OHM & 800 OHM RESISTORS ARE USED ONLY ON 60 CYCLE SETS
THE TWO 400000 OHM RESISTORS, THE 800 OHM RESISTOR & THE GND LEADS ARE CONNECTED TOGETHER ON 25 CYCLE SETS

Noel

FRACTIONAL DIMENSIONS
UNLESS OTHERWISE SPECIFIED

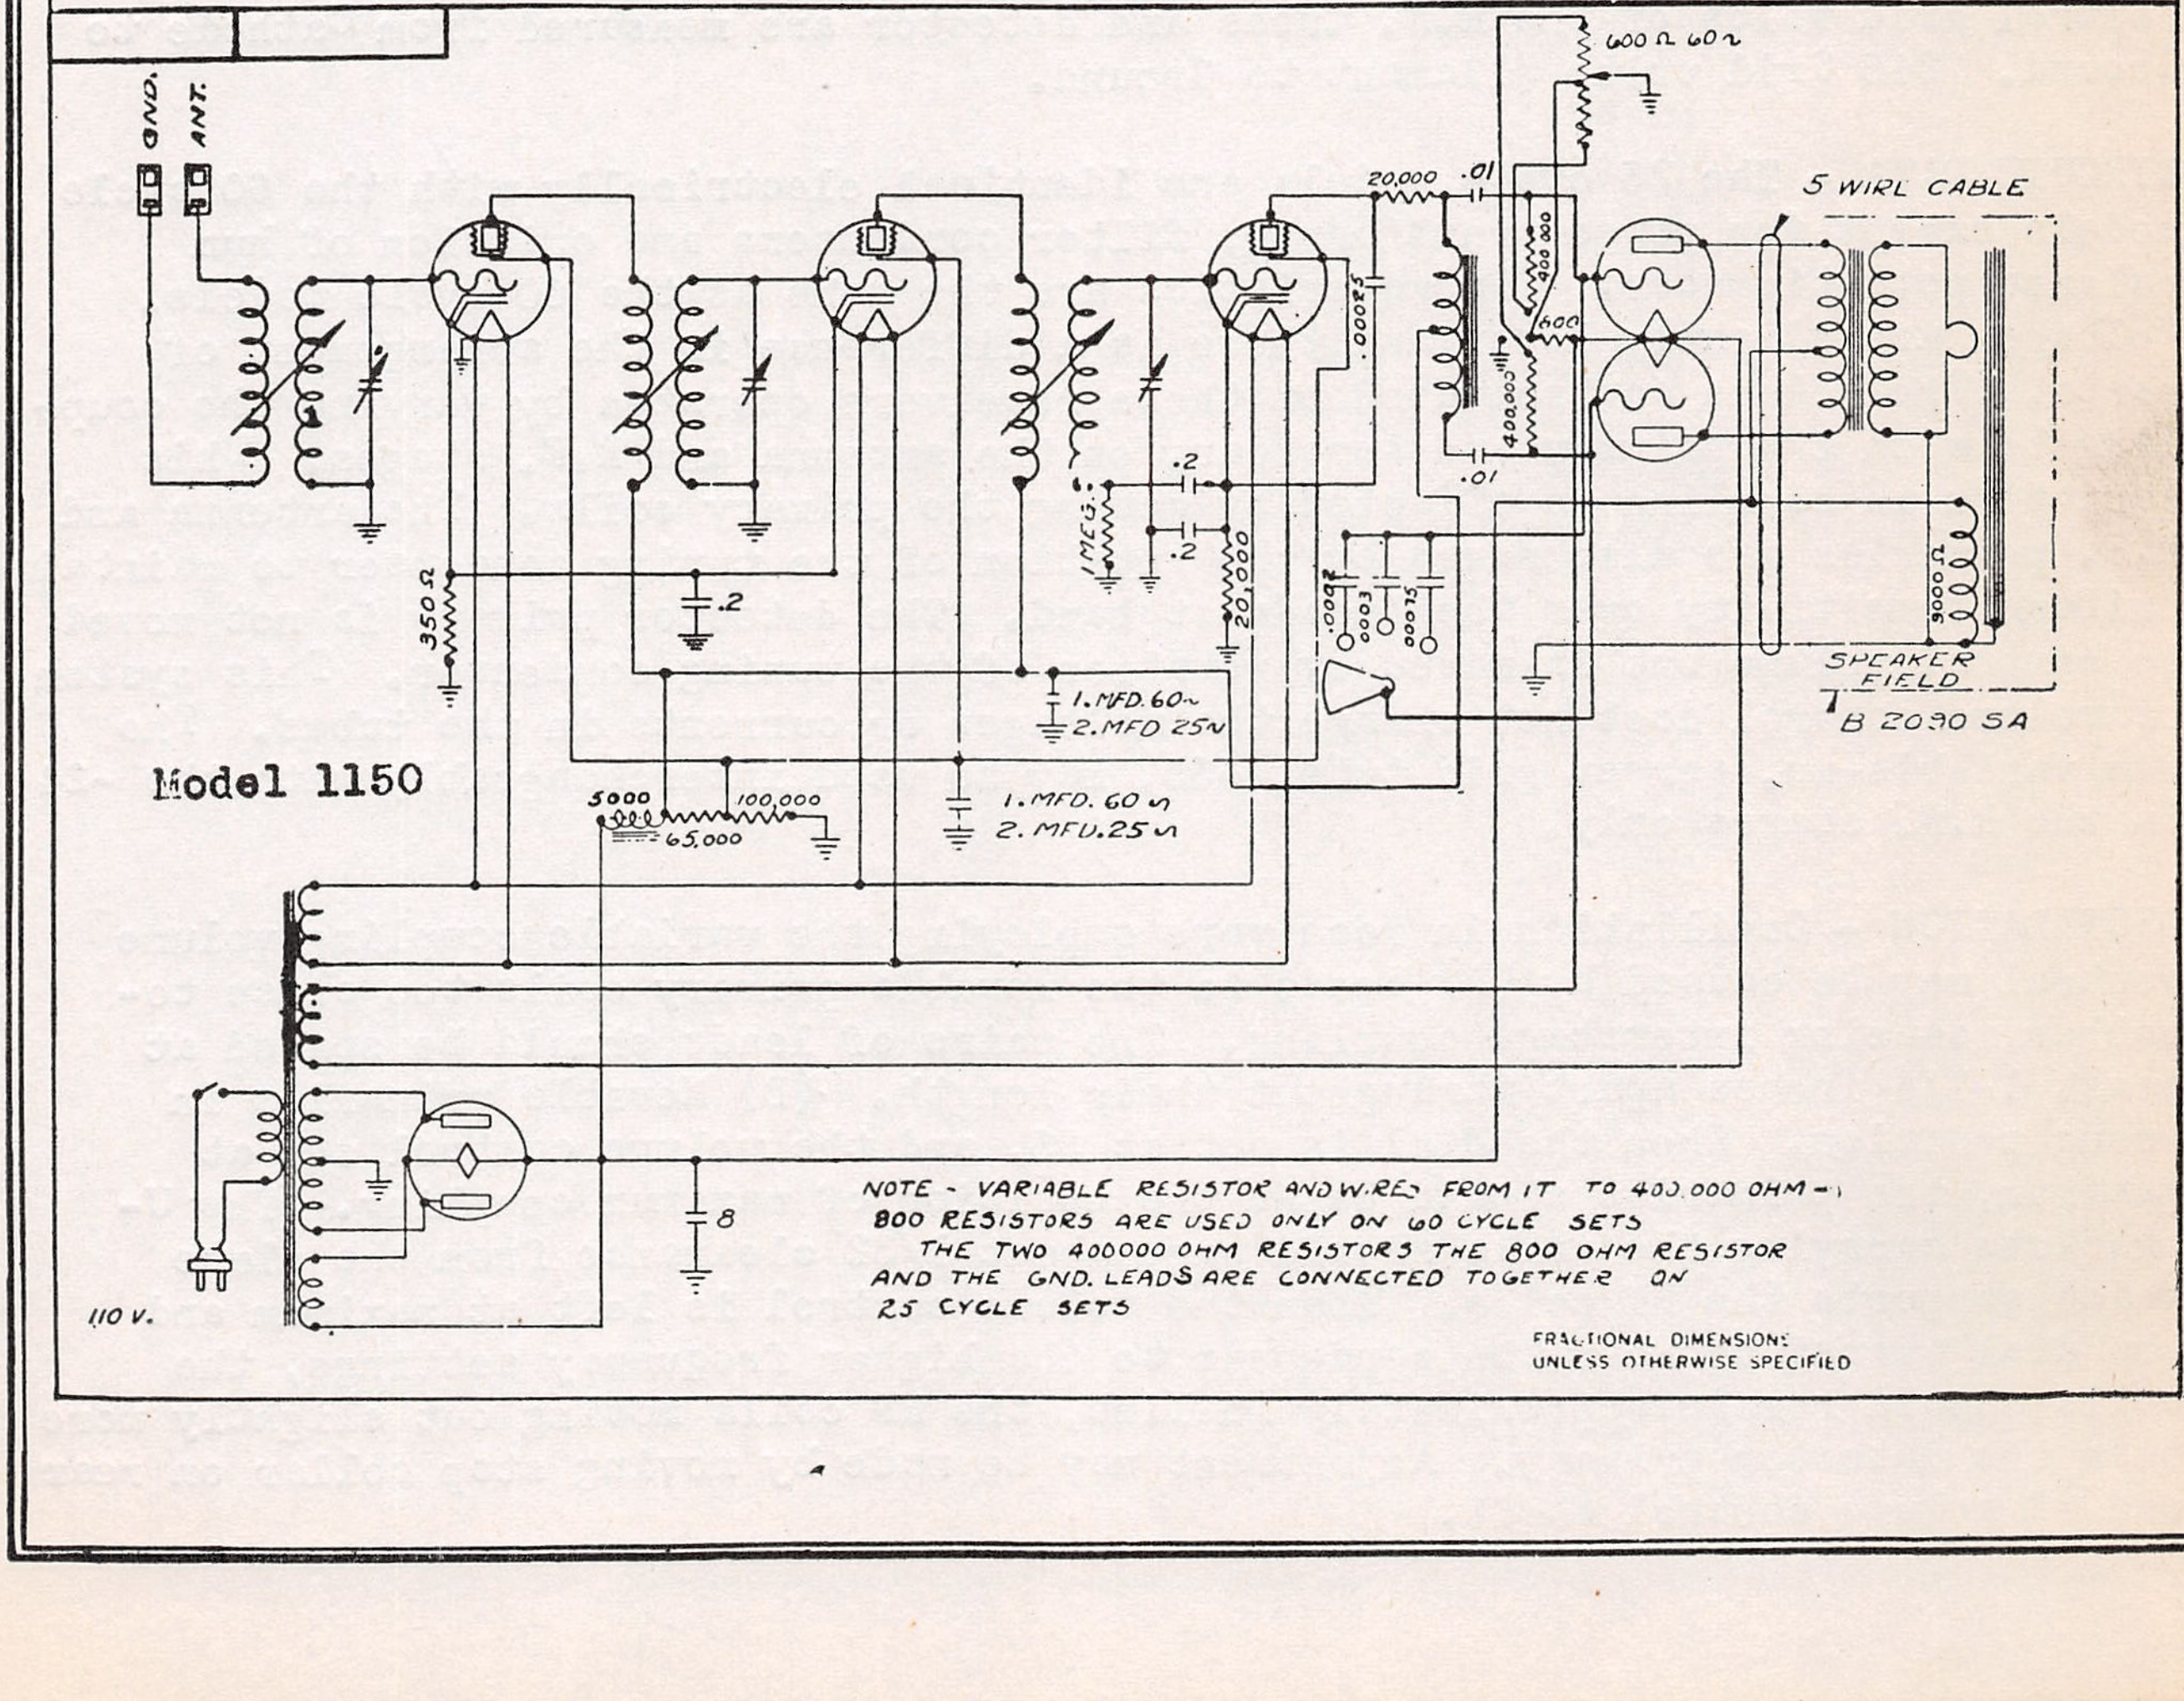
GND.
ANT.
600 Ω 60~
20,000
.01
5 WIRE CABLE
.00025
400 000
600
400,000
.01
.2
.2
1 MEG.
20,000
.0002
.0003
.00075
350 Ω
.2
1. MFD. 60~
2. MFD 25~
Model 1150
5000
100,000
65,000
1. MFD. 60 ~
2. MFD. 25 ~
8
110 V.
SPEAKER FIELD
9000 Ω
B 2090 SA

NOTE - VARIABLE RESISTOR AND WIRES FROM IT TO 400.000 OHM - 800 RESISTORS ARE USED ONLY ON 60 CYCLE SETS
THE TWO 400000 OHM RESISTORS THE 800 OHM RESISTOR AND THE GND. LEADS ARE CONNECTED TOGETHER ON 25 CYCLE SETS

FRACTIONAL DIMENSIONS
UNLESS OTHERWISE SPECIFIED

MODEL 1150
Voltage-Data

SEARS-ROEBUCK & CO.

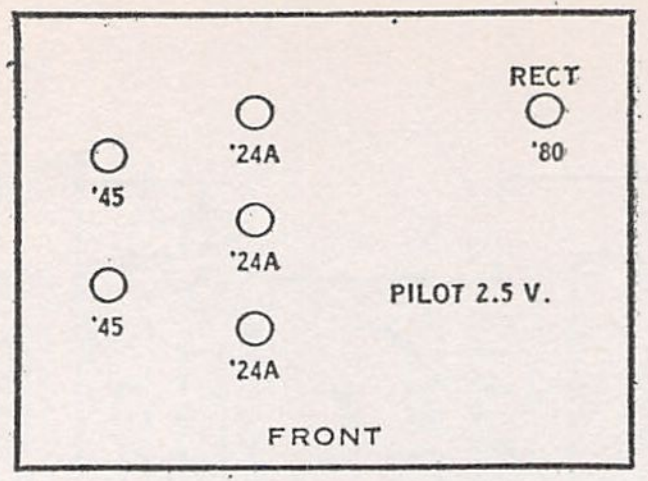

60 cycle Line 115 V.	RF1	RF2	Det.	245#1	2452	280AC	280DC
Plate Voltage D.C.	250	250	235	250	250	330	300
Screen Voltage D.C.	85	85	85				
Heater Voltage A.C.	2.45	2.45	2.45	2.4	2.4	4.7	
Control Grid Voltage D.C.	3	3	8	50			
Speaker Field Voltage 300							
Total Rectifier Current .090							

25 cycle Line 115 V.	RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	230	230	215	230	230	315	270
Screen Voltage D.C.	75	75	75				
Heater Voltage A.C.	2.3	2.3	2.3	2.3	2.3	4.85	
Control Grid Voltage D.C.	2.8	2.8	7.5		45	45	
Speaker Field Voltage 270							
Total Rectifier Current .090							

Control grid volts of the R.F. tubes and detector are measured from Cathode to Ground. 245 Grid volts Filament to Ground.

CIRCUIT DATA - The 25 cycle models are identical electrically with the 60 cycle models except for power transformer, filter condensers and omission of hum balance potentiometer. Characteristics are the same as the 60 cycle models. Voltages are slightly lower and there is a difference in the arrangement of parts. The volume control used on these receivers operates by varying the coupling between the primary and secondary on the antenna and R.F. stages. This variation in coupling is effected by moving the primary coils. The antenna and R.F. primaries are also moved by the rotation of the tuning condenser to maintain uniform sensitivity over the broadcast band. The detector primary is not moved to control volume but is moved by rotation of the tuning condenser. This system of volume control does not change the voltages or currents in the tubes. The new variable-mu, screen grid tube, -35, may be used interchangeably with the -24 in the R.F. stages only.

OSCILLATION - Oscillation in receivers employing the variable coupling volume control may be caused by (A) Leads to the movable primary coils too close together, causing interstage coupling. The pairs of leads should be spaced at least 1-1/4 inches apart throughout their length. (B) Movable primaries in wrong position. When the dial is set at 55, and the volume control set at maximum, the primaries should be at the position of maximum coupling. The U-brackets carrying the coils should have about 1/32 clearance from the plate which supports the RF coils. When the volume control is left at maximum and the dial turned to move the condenser to the higher frequency settings, the coils should remain approximately in line, the RF coils moving out slightly more than the detector primary. Adjustment may be made by moving stop collar on rear end of volume control shaft.

SEARS-ROEBUCK & CO.

MODEL 1250
MODEL 1152,1420
Schematics

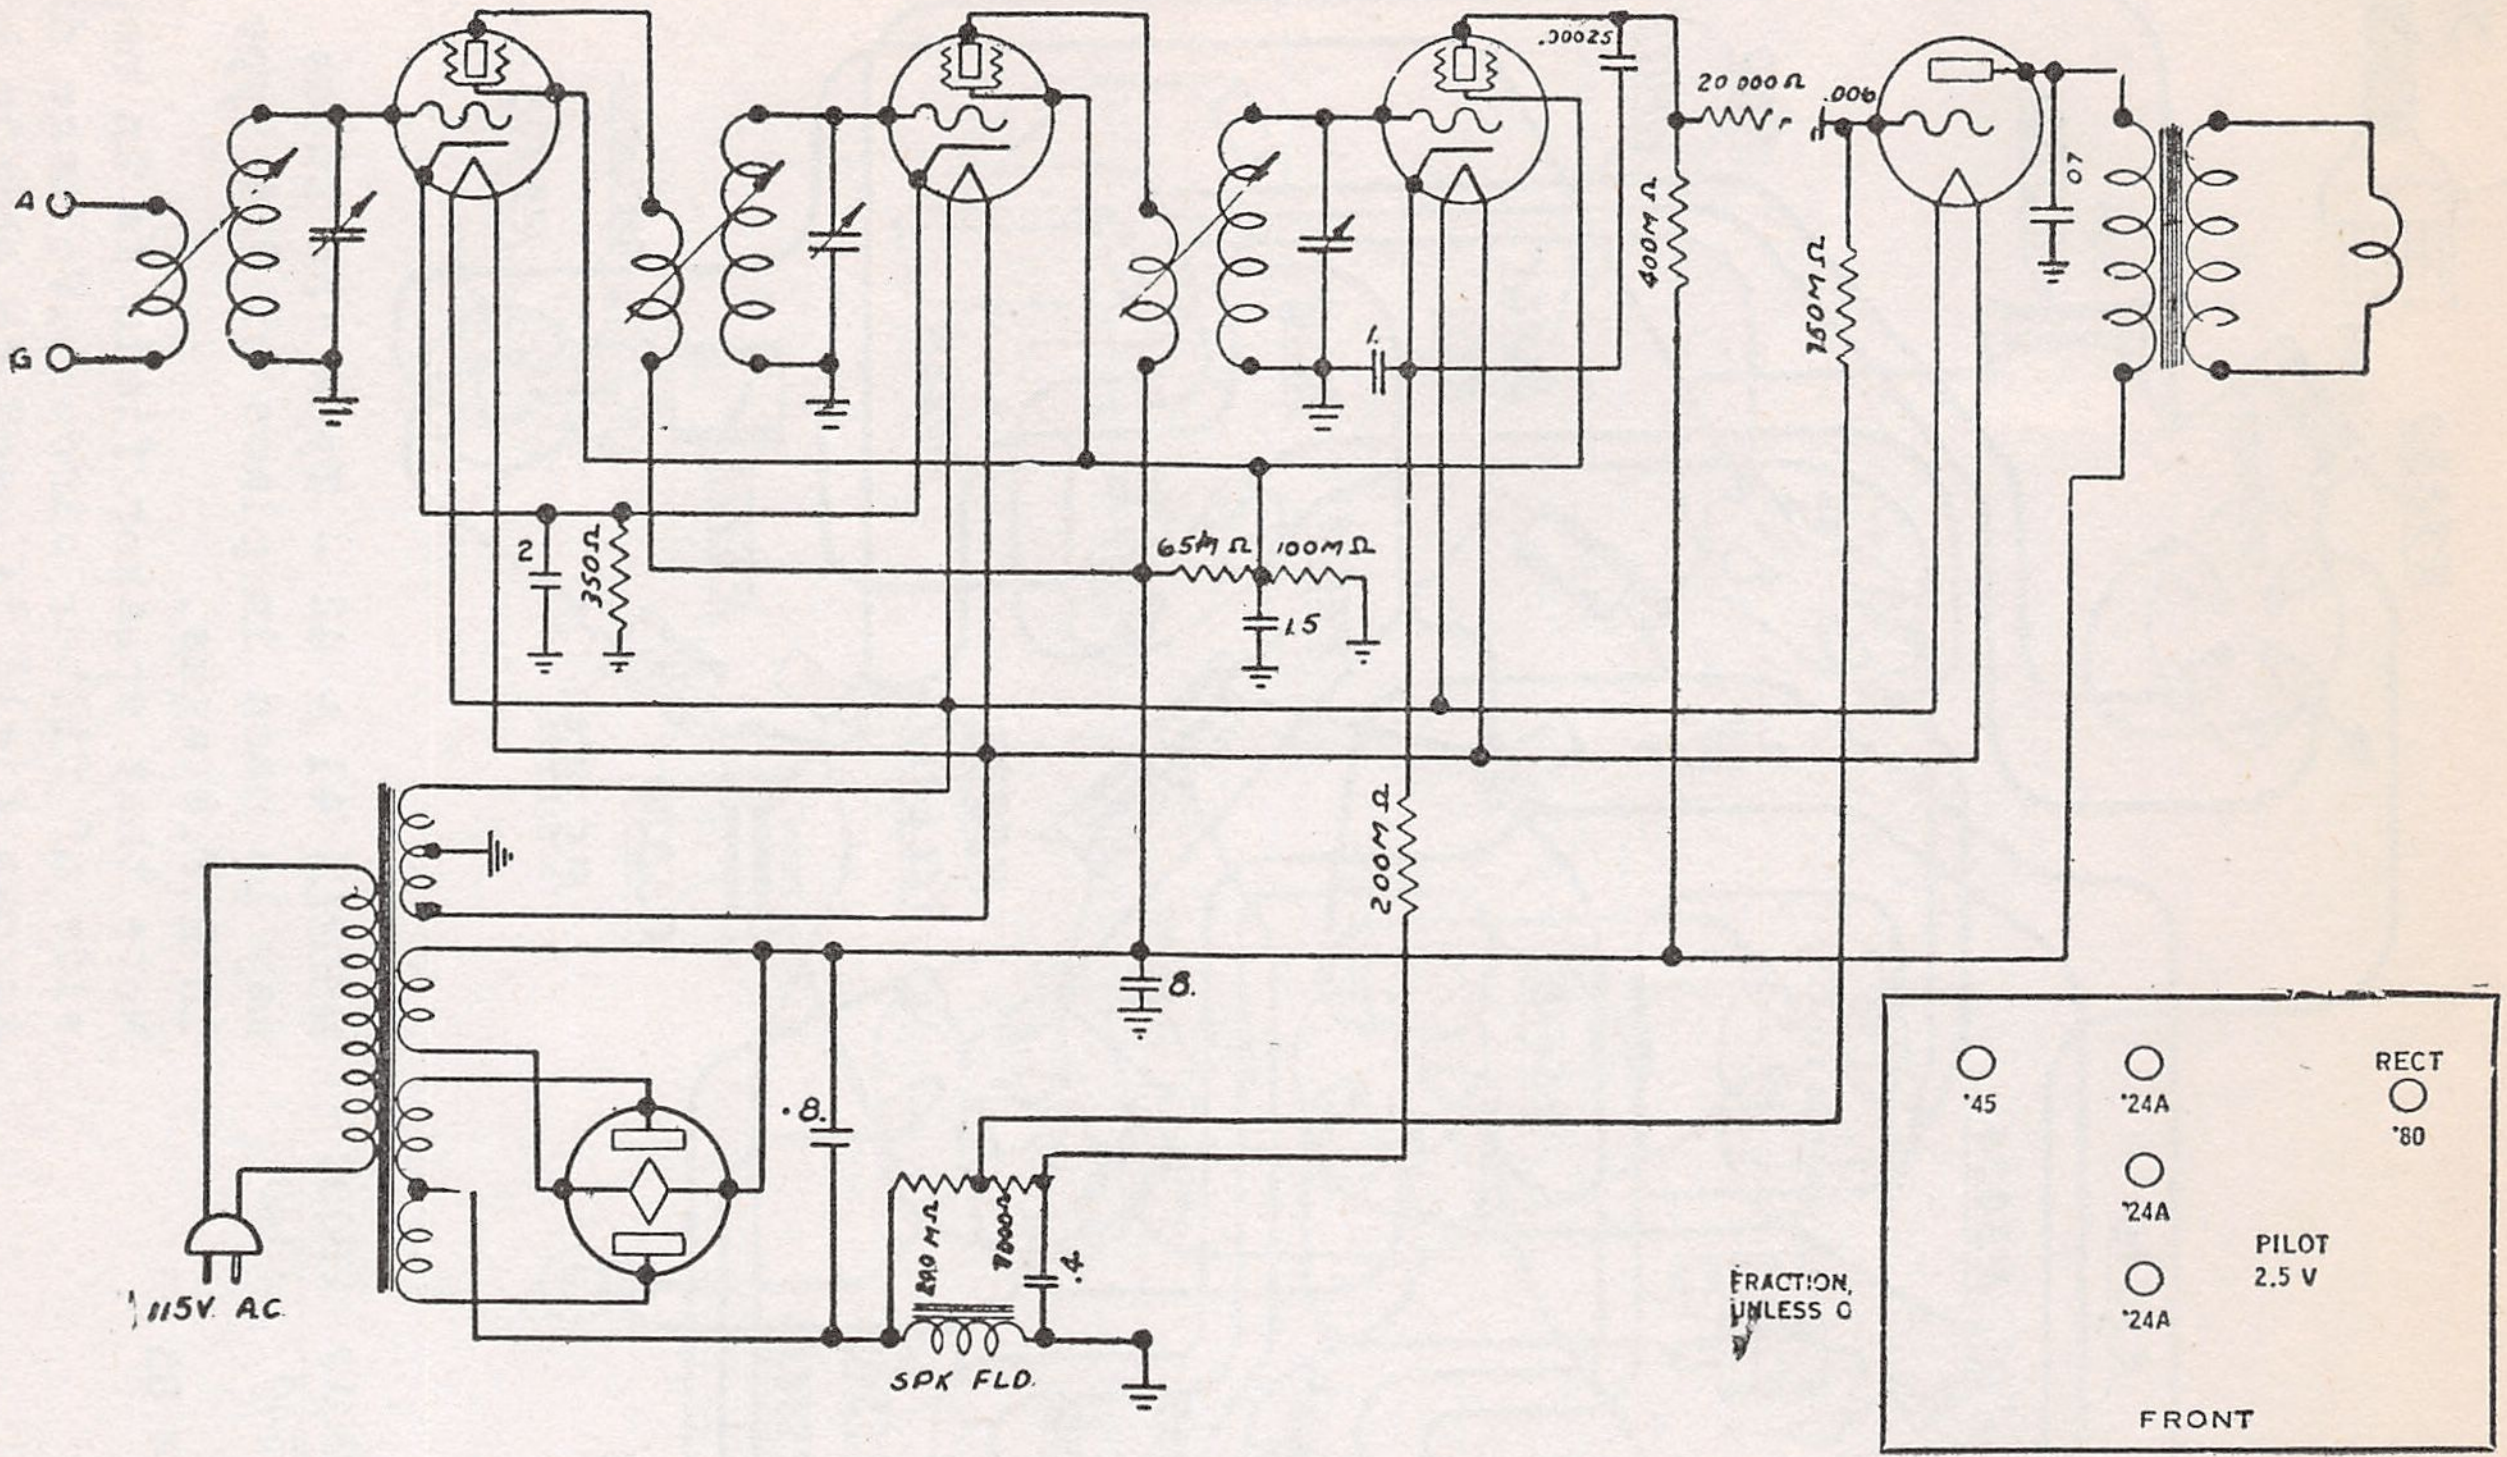
A
G
.00025
20 000 Ω
.006
400 MΩ
750 MΩ
.07
1.
2
350Ω
65MΩ
100MΩ
1.5
200 MΩ
8.
.8
850 MΩ
7000Ω
.4
SPK FLD
115V AC
FRACTION,
UNLESS O
'45
'24A
RECT
'80
'24A
PILOT
2.5 V
'24A
FRONT

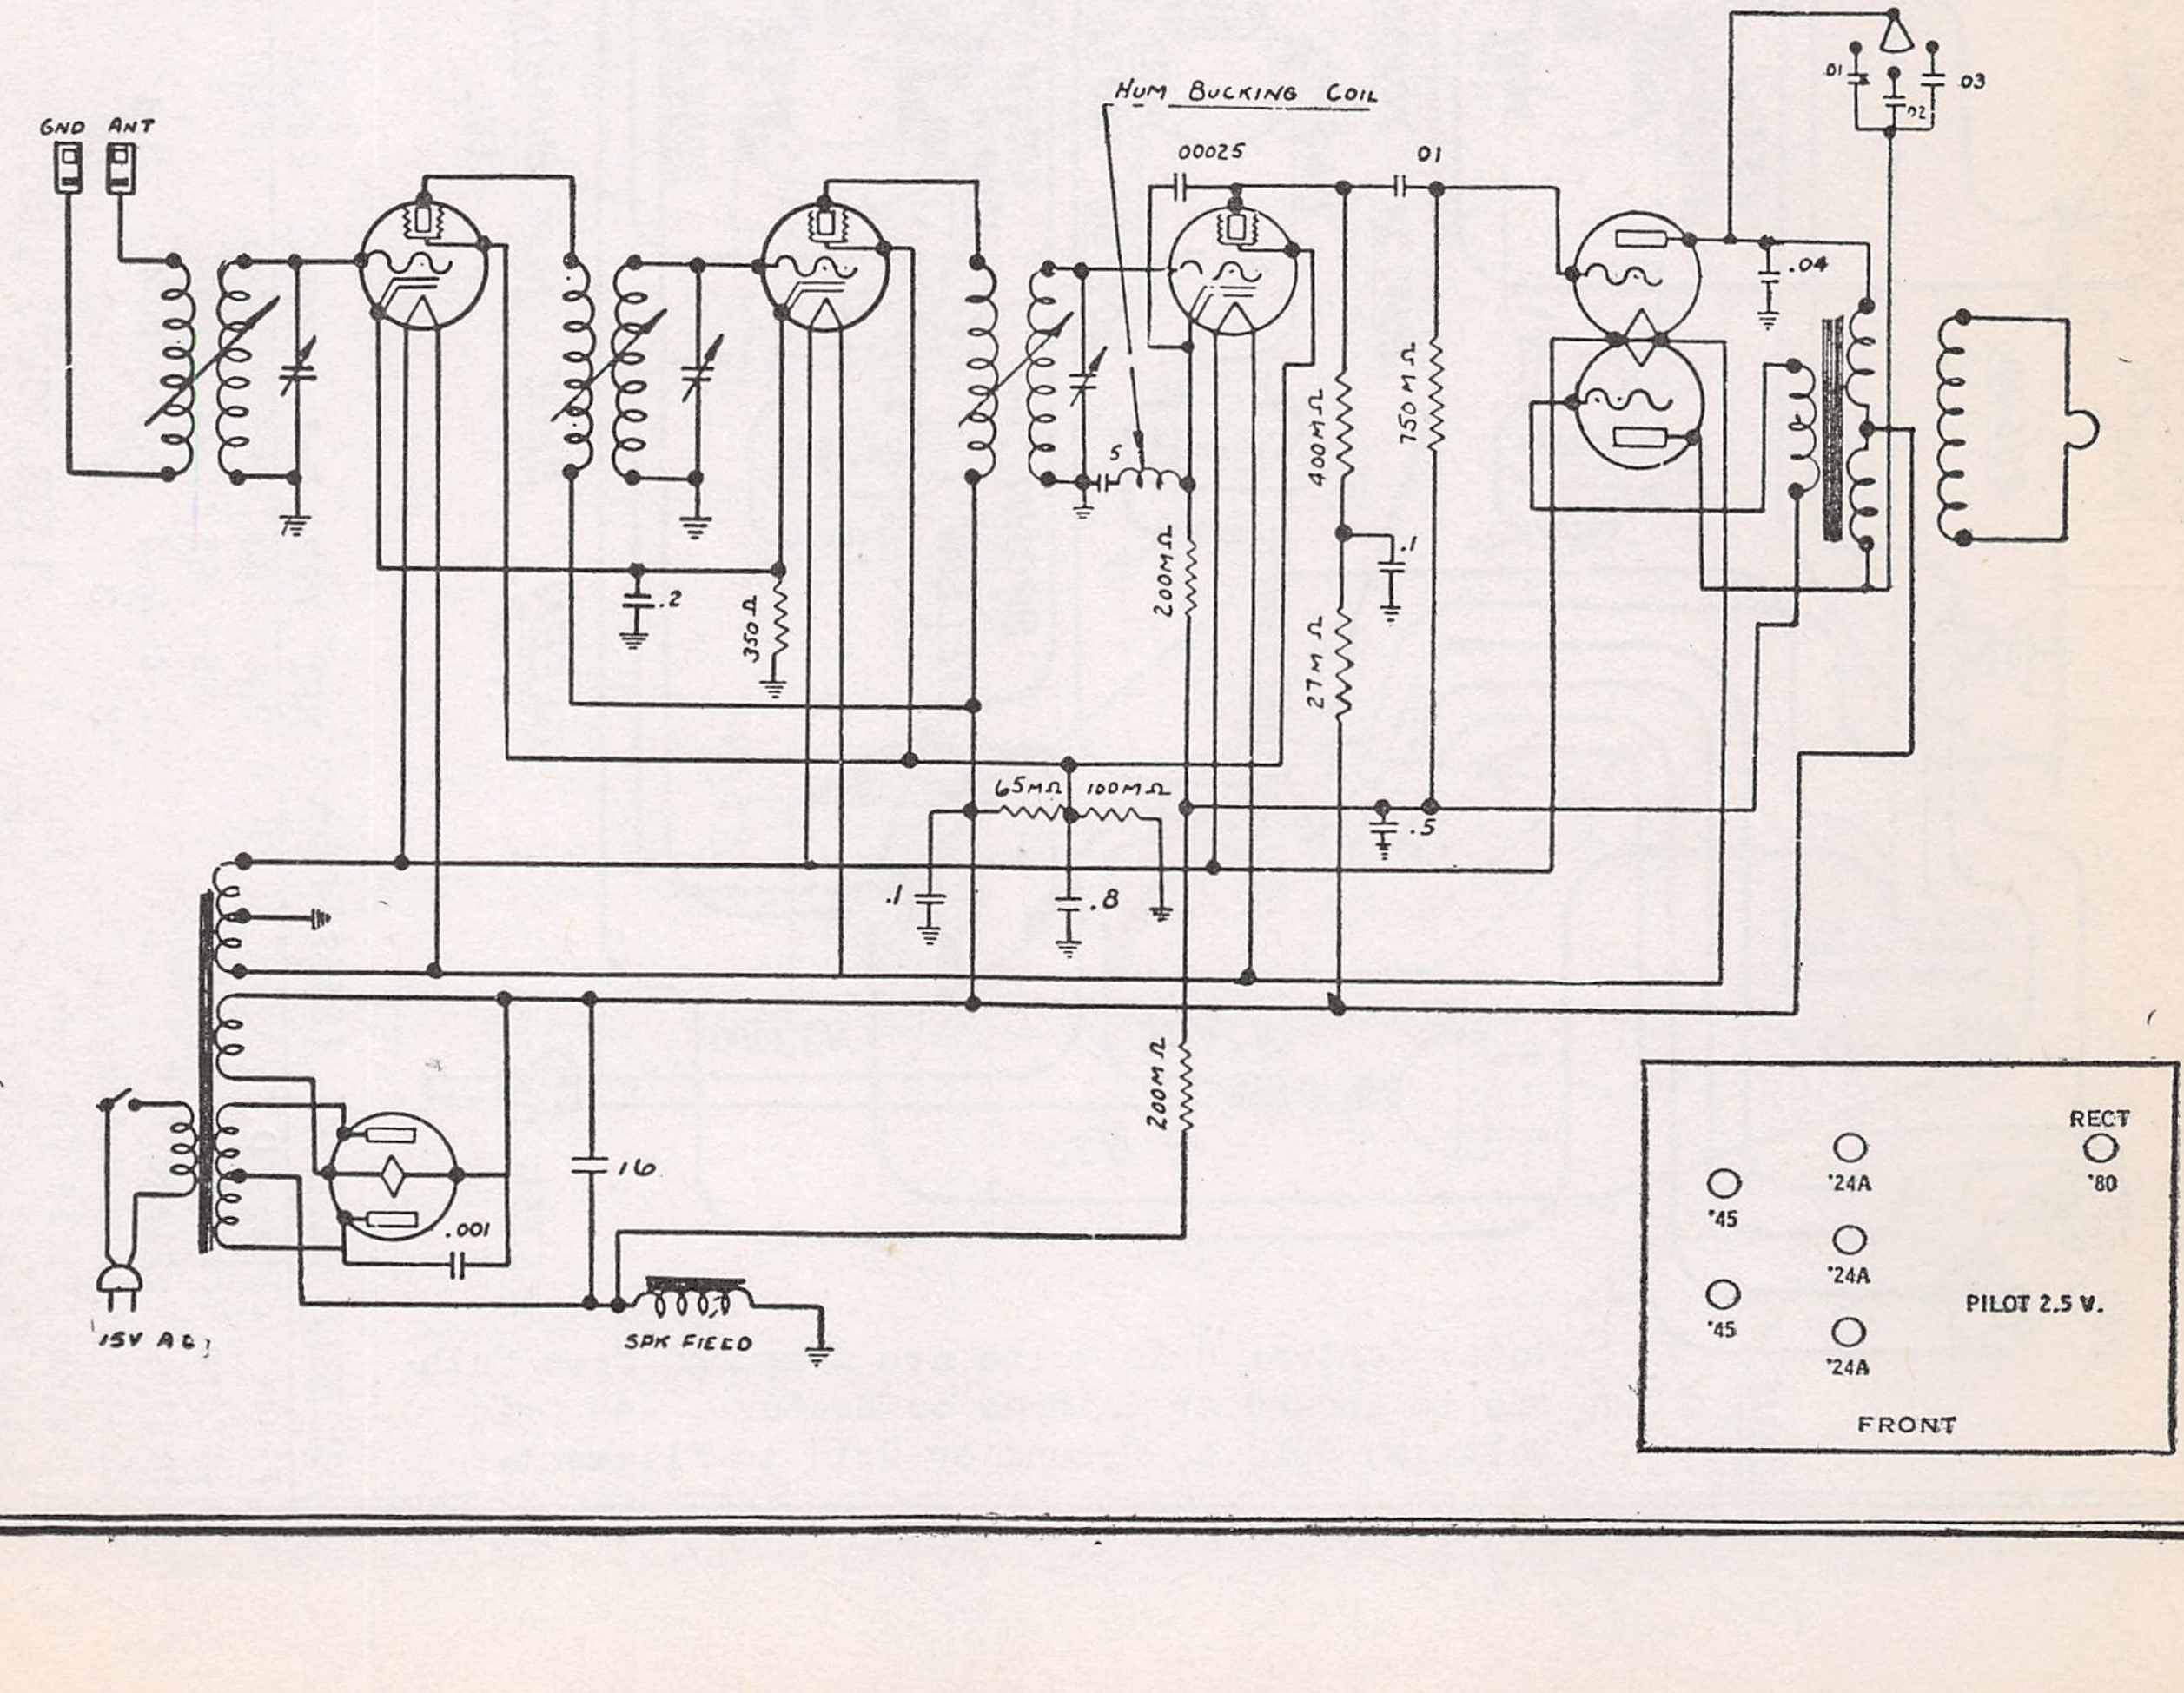
GND
ANT
Hum Bucking Coil
00025
01
.01
.02
03
.04
5
200MΩ
400MΩ
750MΩ
.1
27MΩ
.2
350Ω
65MΩ
100MΩ
.1
.8
.5
16
.001
200MΩ
SPK FIELD
15V AC
RECT
'80
'24A
'45
'24A
'45
'24A
PILOT 2.5 V.
FRONT

SEARS-ROEBUCK & CO.

MODEL 1152,1420
Chassis-Voltage

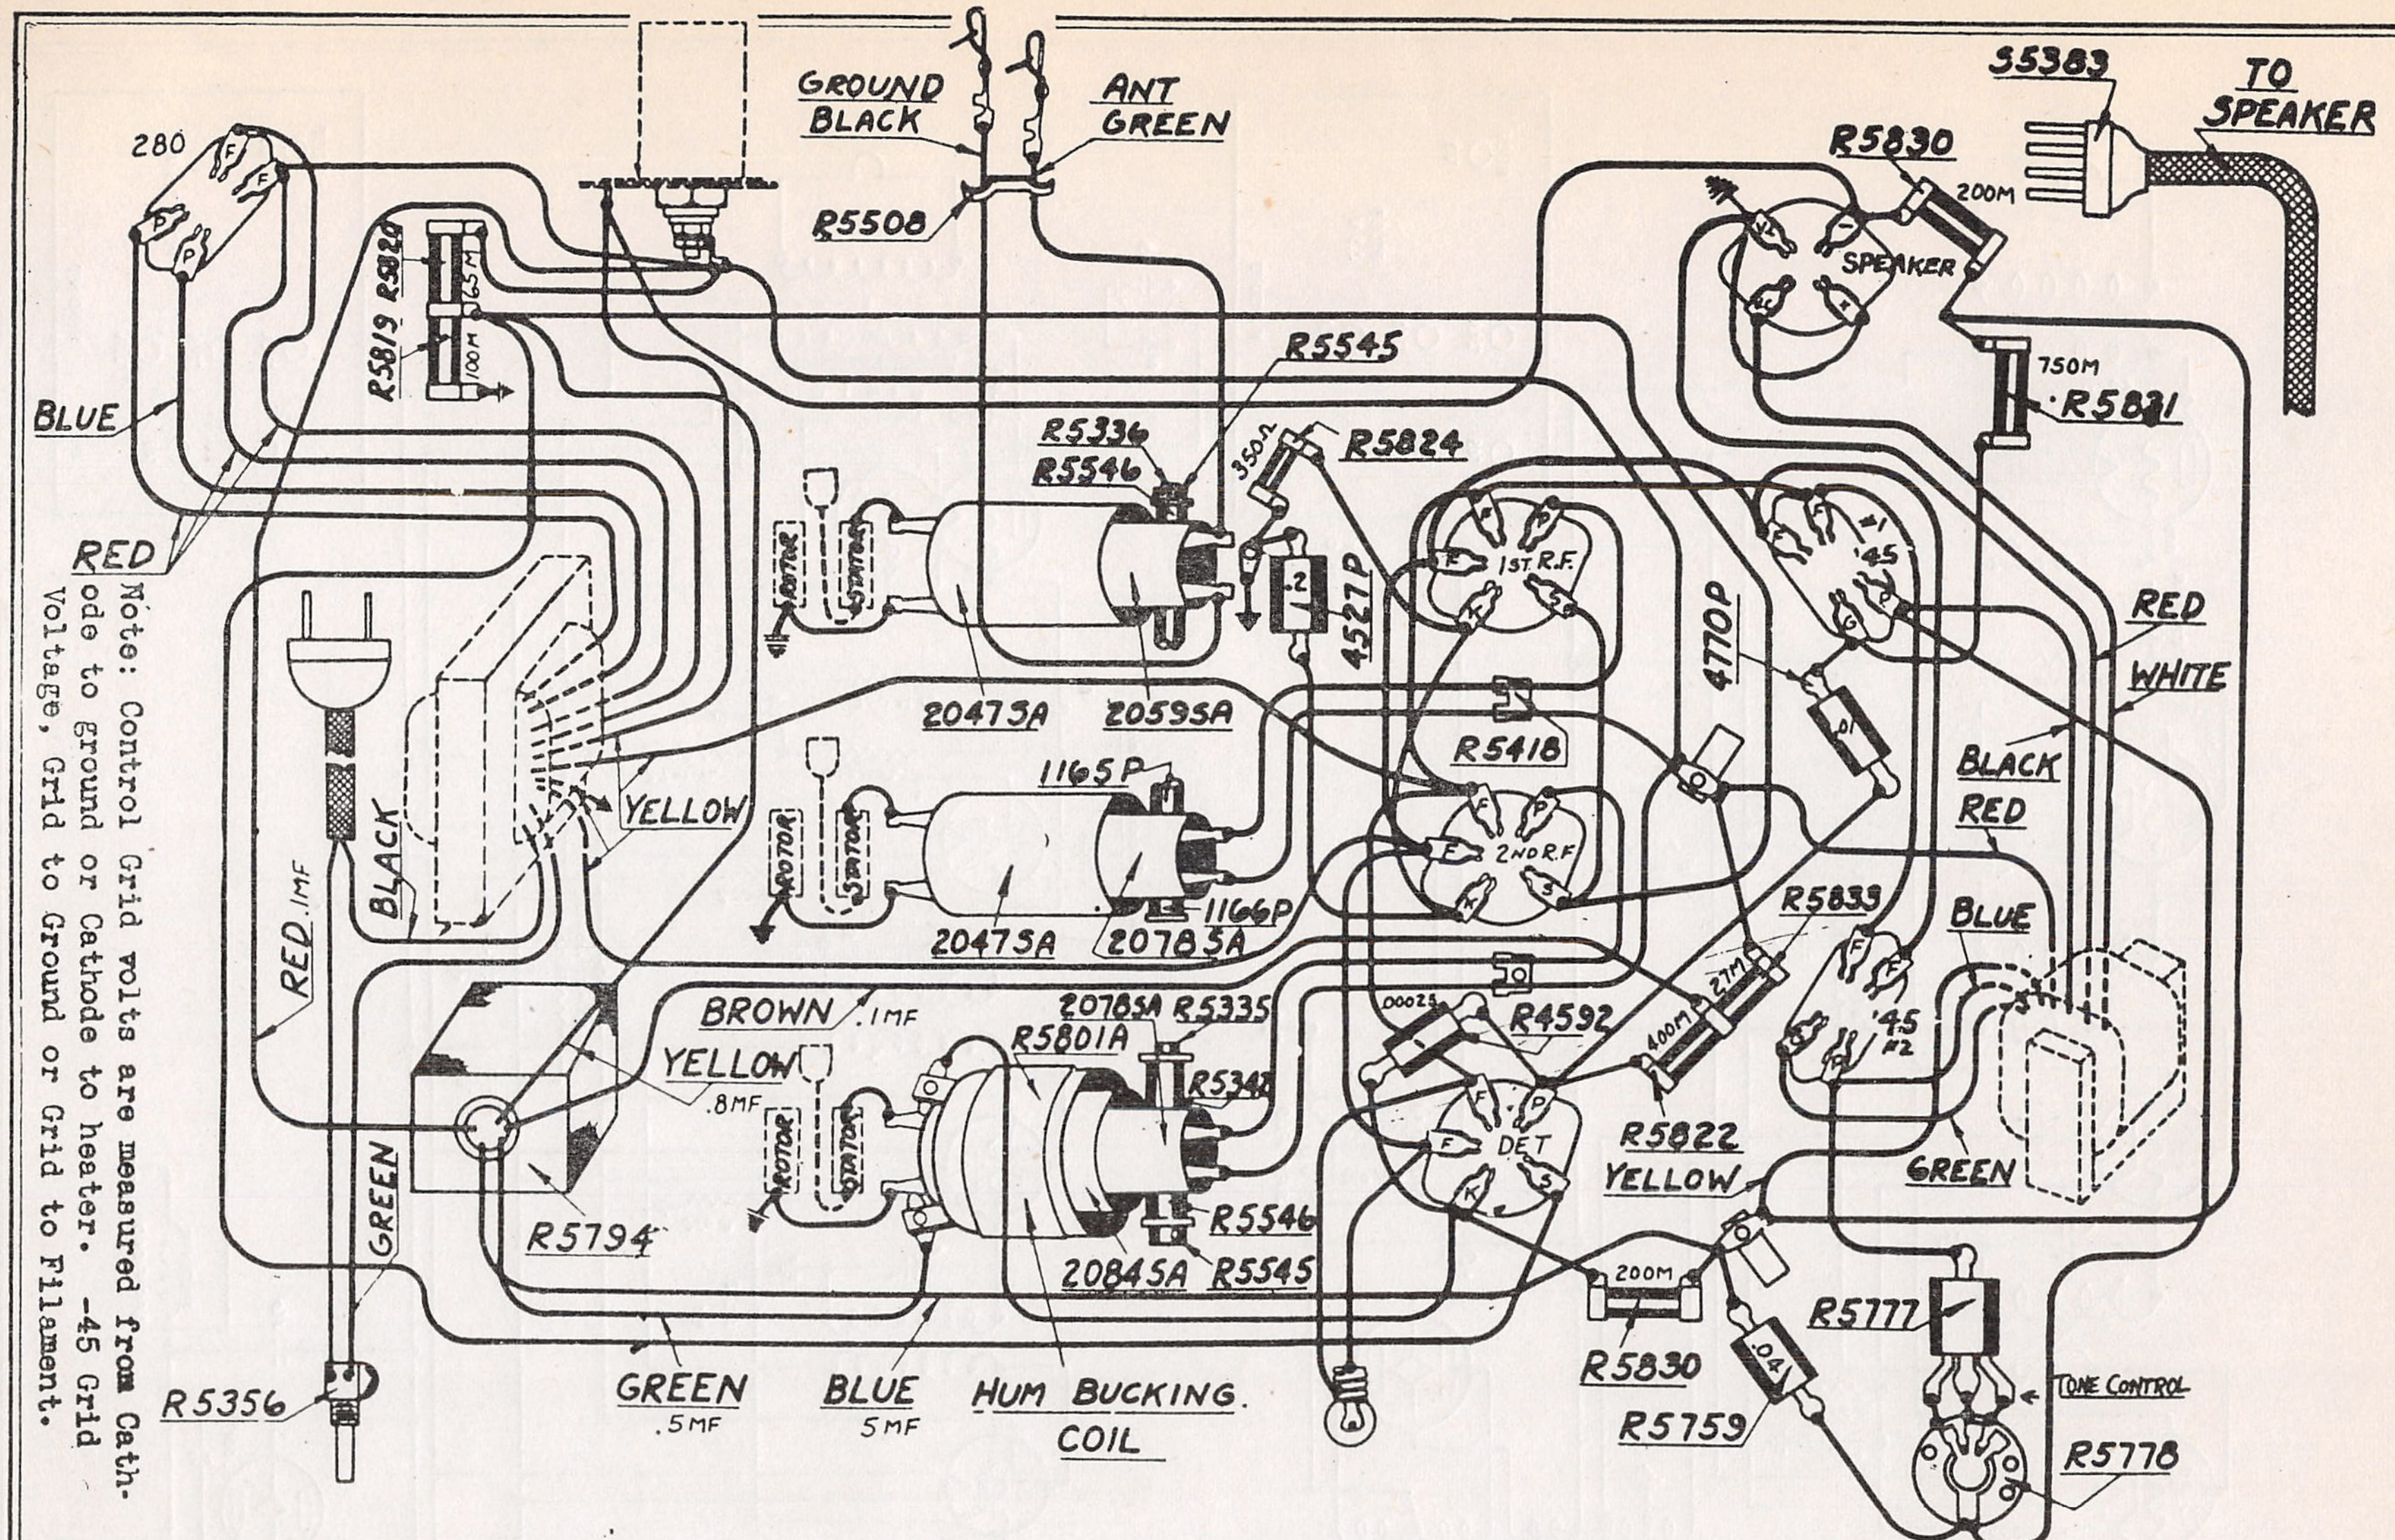
280
BLUE
RED
GROUND
BLACK
ANT
GREEN
R5508
R5819 R5820
100M
65M
R5545
R5336
R5546
350Ω
R5824
.2
4527P
1ST R.F.
2ND R.F.
DET
R5418
4710P
.01
'45 #1
'45 #2
R5830
200M
SPEAKER
S5383
TO SPEAKER
750M
R5831
RED
WHITE
BLACK
RED
BLUE
GREEN
R5833
27M
400M
R5822
YELLOW
R4592
.00025
2047SA
2059SA
1165P
1166P
2078SA
ROTOR
STATOR
BROWN .1MF
YELLOW .8MF
2078SA R5335
R5801A
R5348
R5546
R5545
2084SA
R5794
GREEN .5MF
BLUE 5MF
HUM BUCKING COIL
R5830
200M
R5777
R5759
.04
TONE CONTROL
R5778
YELLOW
BLACK
RED .1MF
GREEN
R5356

Note: Control Grid volts are measured from Cathode to ground or Cathode to heater. -45 Grid Voltage, Grid to Ground or Grid to Filament.

MODELS 41 & 42 (25 & 60~)		RF1	RF2	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.		240	240	95	240	240	340	340
Screen Voltage D.C.		85	85	85				
Heater Voltage A.C.		2.4	2.4	2.4	2.4	2.4	4.85	
Control Grid Voltage D.C		3	3	8	20	45		
Speaker Field Voltage	100							
Total Rectifier Current	.065							

LINE VOLTS 115.

MODELS 41 & 42 - Type '35 tubes may be used in place of '24 type in R.F. stages.

Note that speaker field is in negative side of filter circuit. Voltage drop across field is used to obtain bias.

SEARS-ROEBUCK & CO.

MODEL 1252
Chassis-Voltage

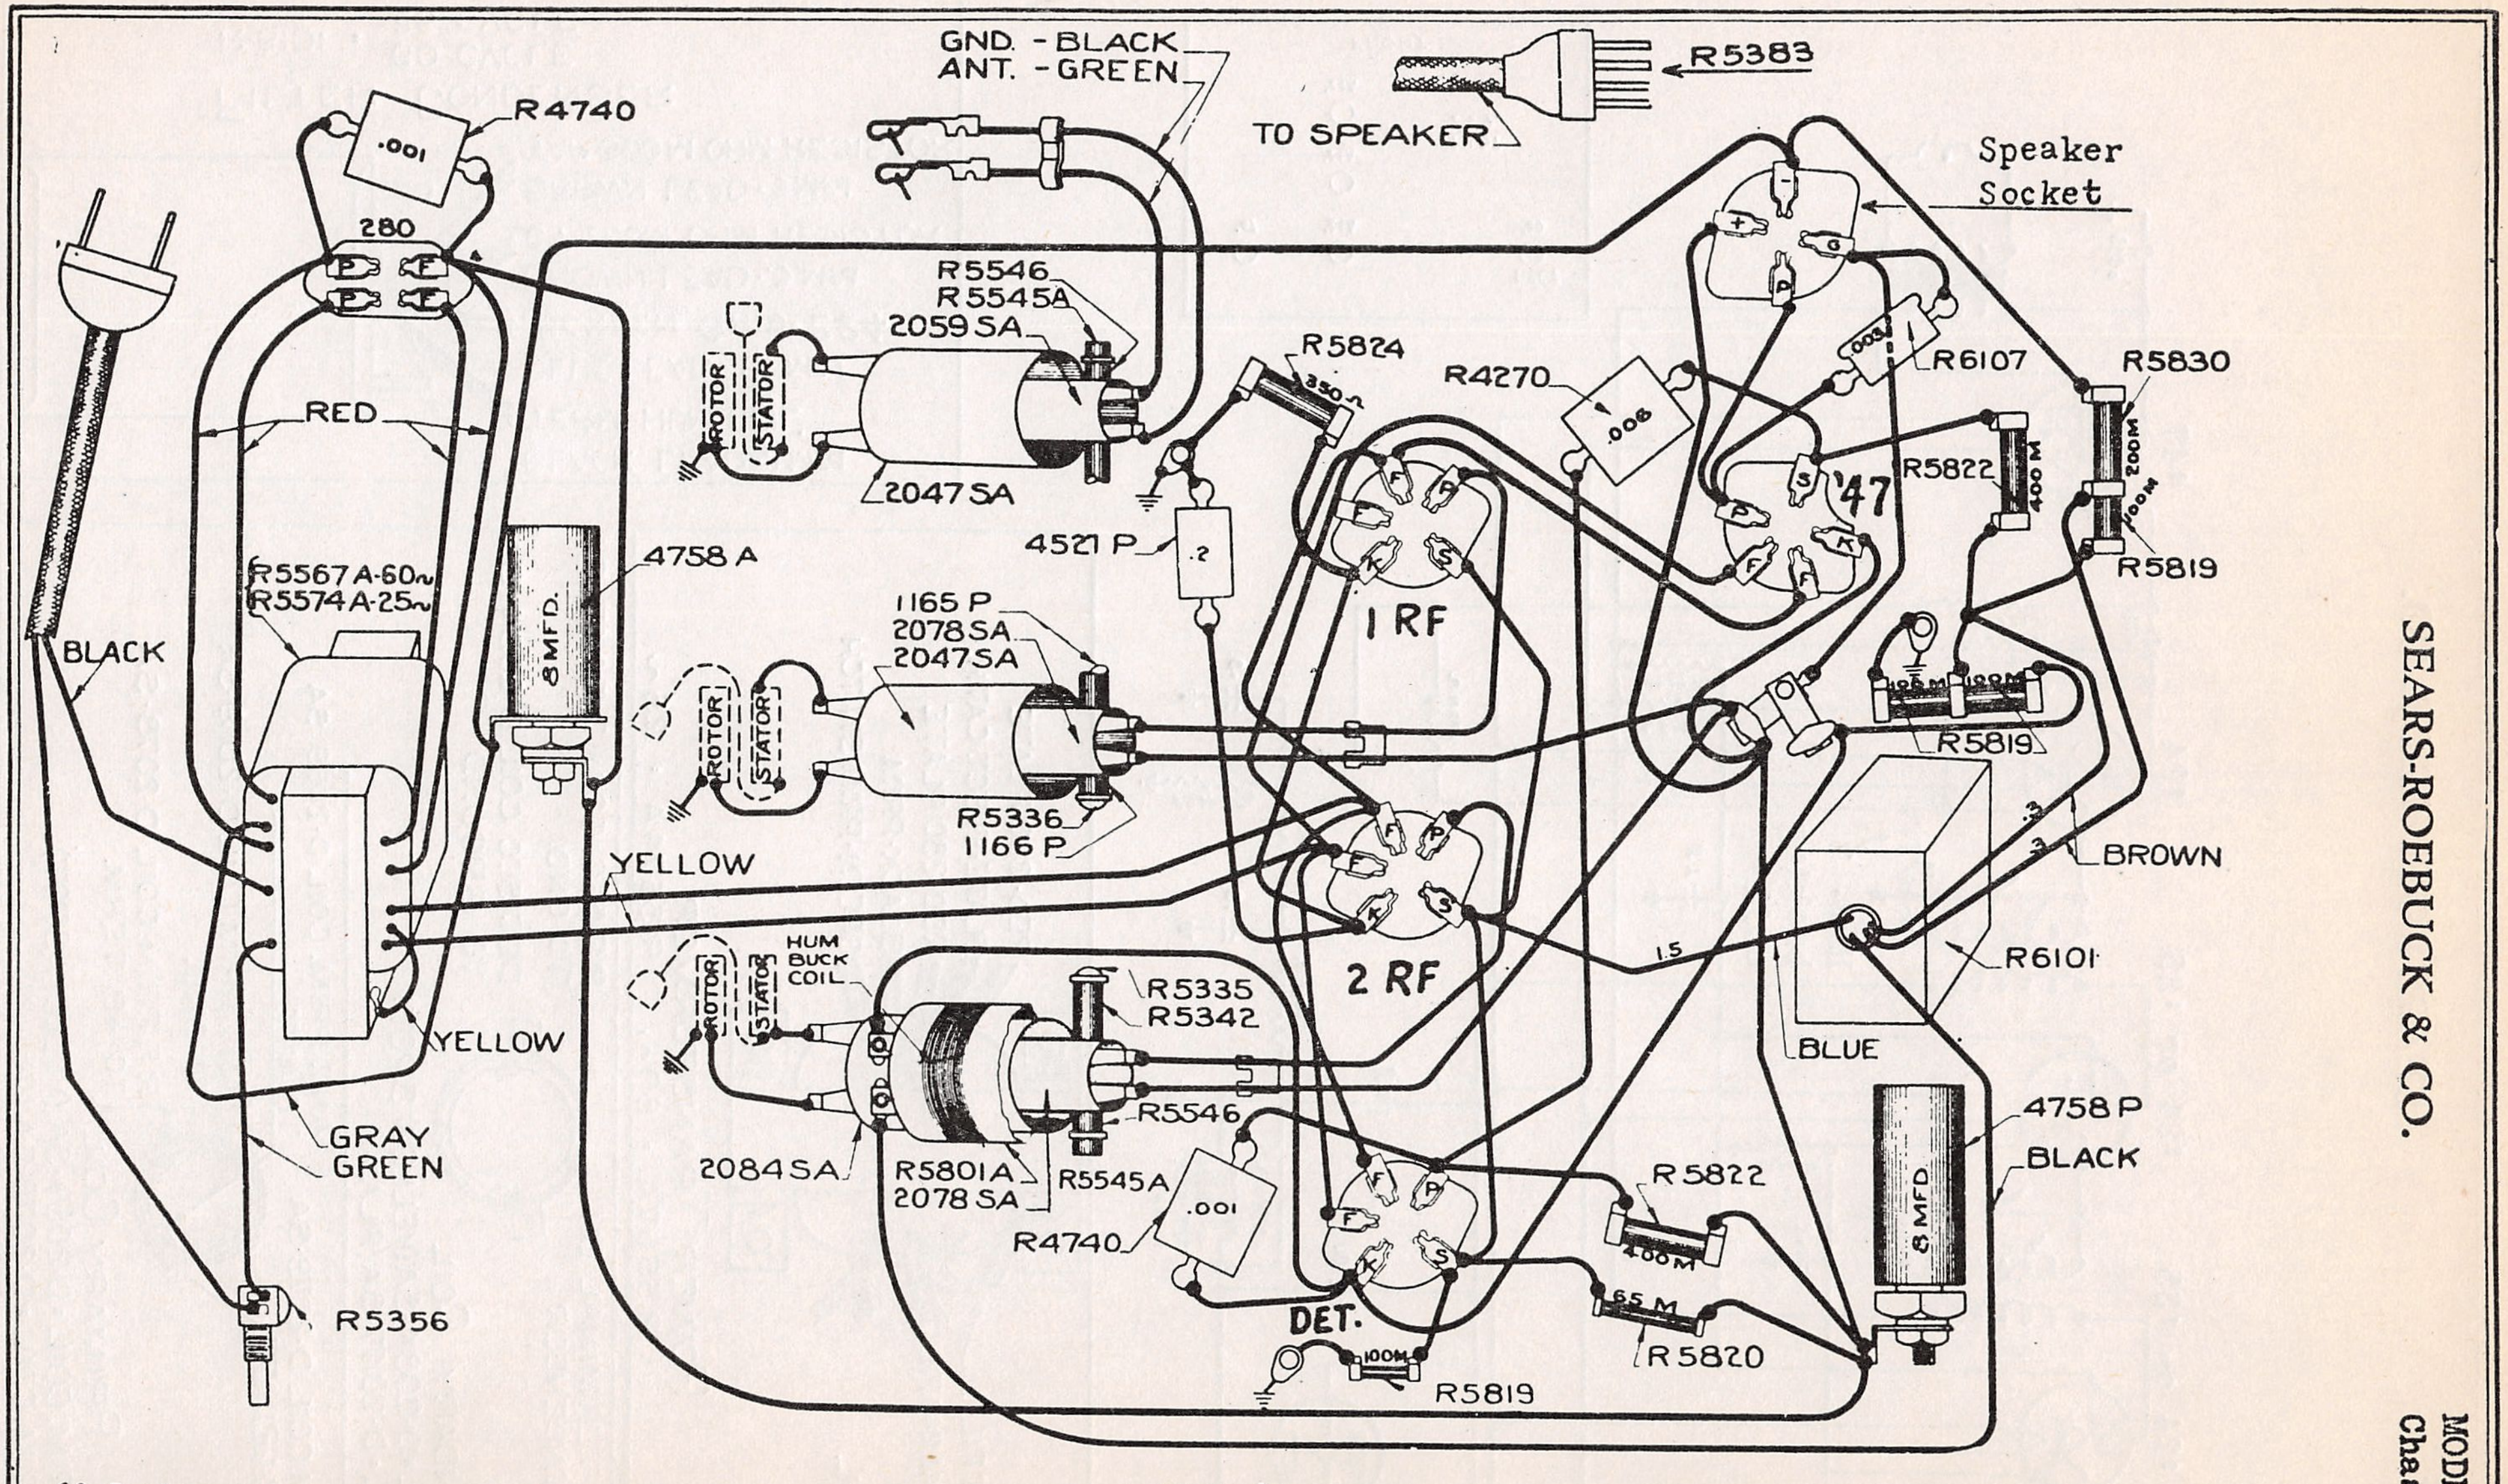
GND. - BLACK
ANT. - GREEN
TO SPEAKER
R5383
Speaker Socket
R4740
.001
280
RED
R5546
R5545A
2059 SA
ROTOR
STATOR
2047 SA
R5824
350 Ω
R4270
.008
.003
R6107
R5830
200M
100M
R5819
R5822
400 M
'47
4521 P
.2
1 RF
R5567 A-60~
R5574 A-25~
4758 A
8 MFD.
1165 P
2078 SA
2047 SA
R5336
1166 P
BLACK
YELLOW
2 RF
1.5
.3
BROWN
R6101
BLUE
HUM BUCK COIL
R5335
R5342
R5546
2084 SA
R5801A
2078 SA
R5545A
R4740
.001
DET.
R5822
400 M
R5820
65 M
R5819
100M
4758 P
BLACK
8 MFD
YELLOW
GRAY
GREEN
R5356

60 Cycle

	RF1	RF2	Det.	247	280AC	280DC
Plate Voltage D.C.	220	220	100	210	340	320
Screen Voltage D.C.	70	70	70			
Heater Voltage A.C.	2.3	2.3	2.3	2.3	4.8	
Control Grid Voltage D.C.	2.4	2.4	7	15		
Speaker Field Voltage 100						
Total Rectifier Current .045				Line Voltage 115		

25 Cycle

	RF1	RF2	Det.	247	280AC	280DC
Plate Voltage D.C.	240	240	100	230	335	340
Screen Voltage D.C.	70	70	70	230		
Heater Voltage A.C.	2.4	2.4	2.4	2.4	5	
Control Grid Voltage D.C.	2.3	2.3	7	15		
Speaker Field Voltage 100						
Total Rectifier Current .045				Line Voltage 115		

Control Grid Volts are measured from Cathode to Ground or Cathode to Filament. 247 Grid Voltage. Grid to Ground or Filament.

MODEL 1252
Schematic

SEARS-ROEBUCK & CO.

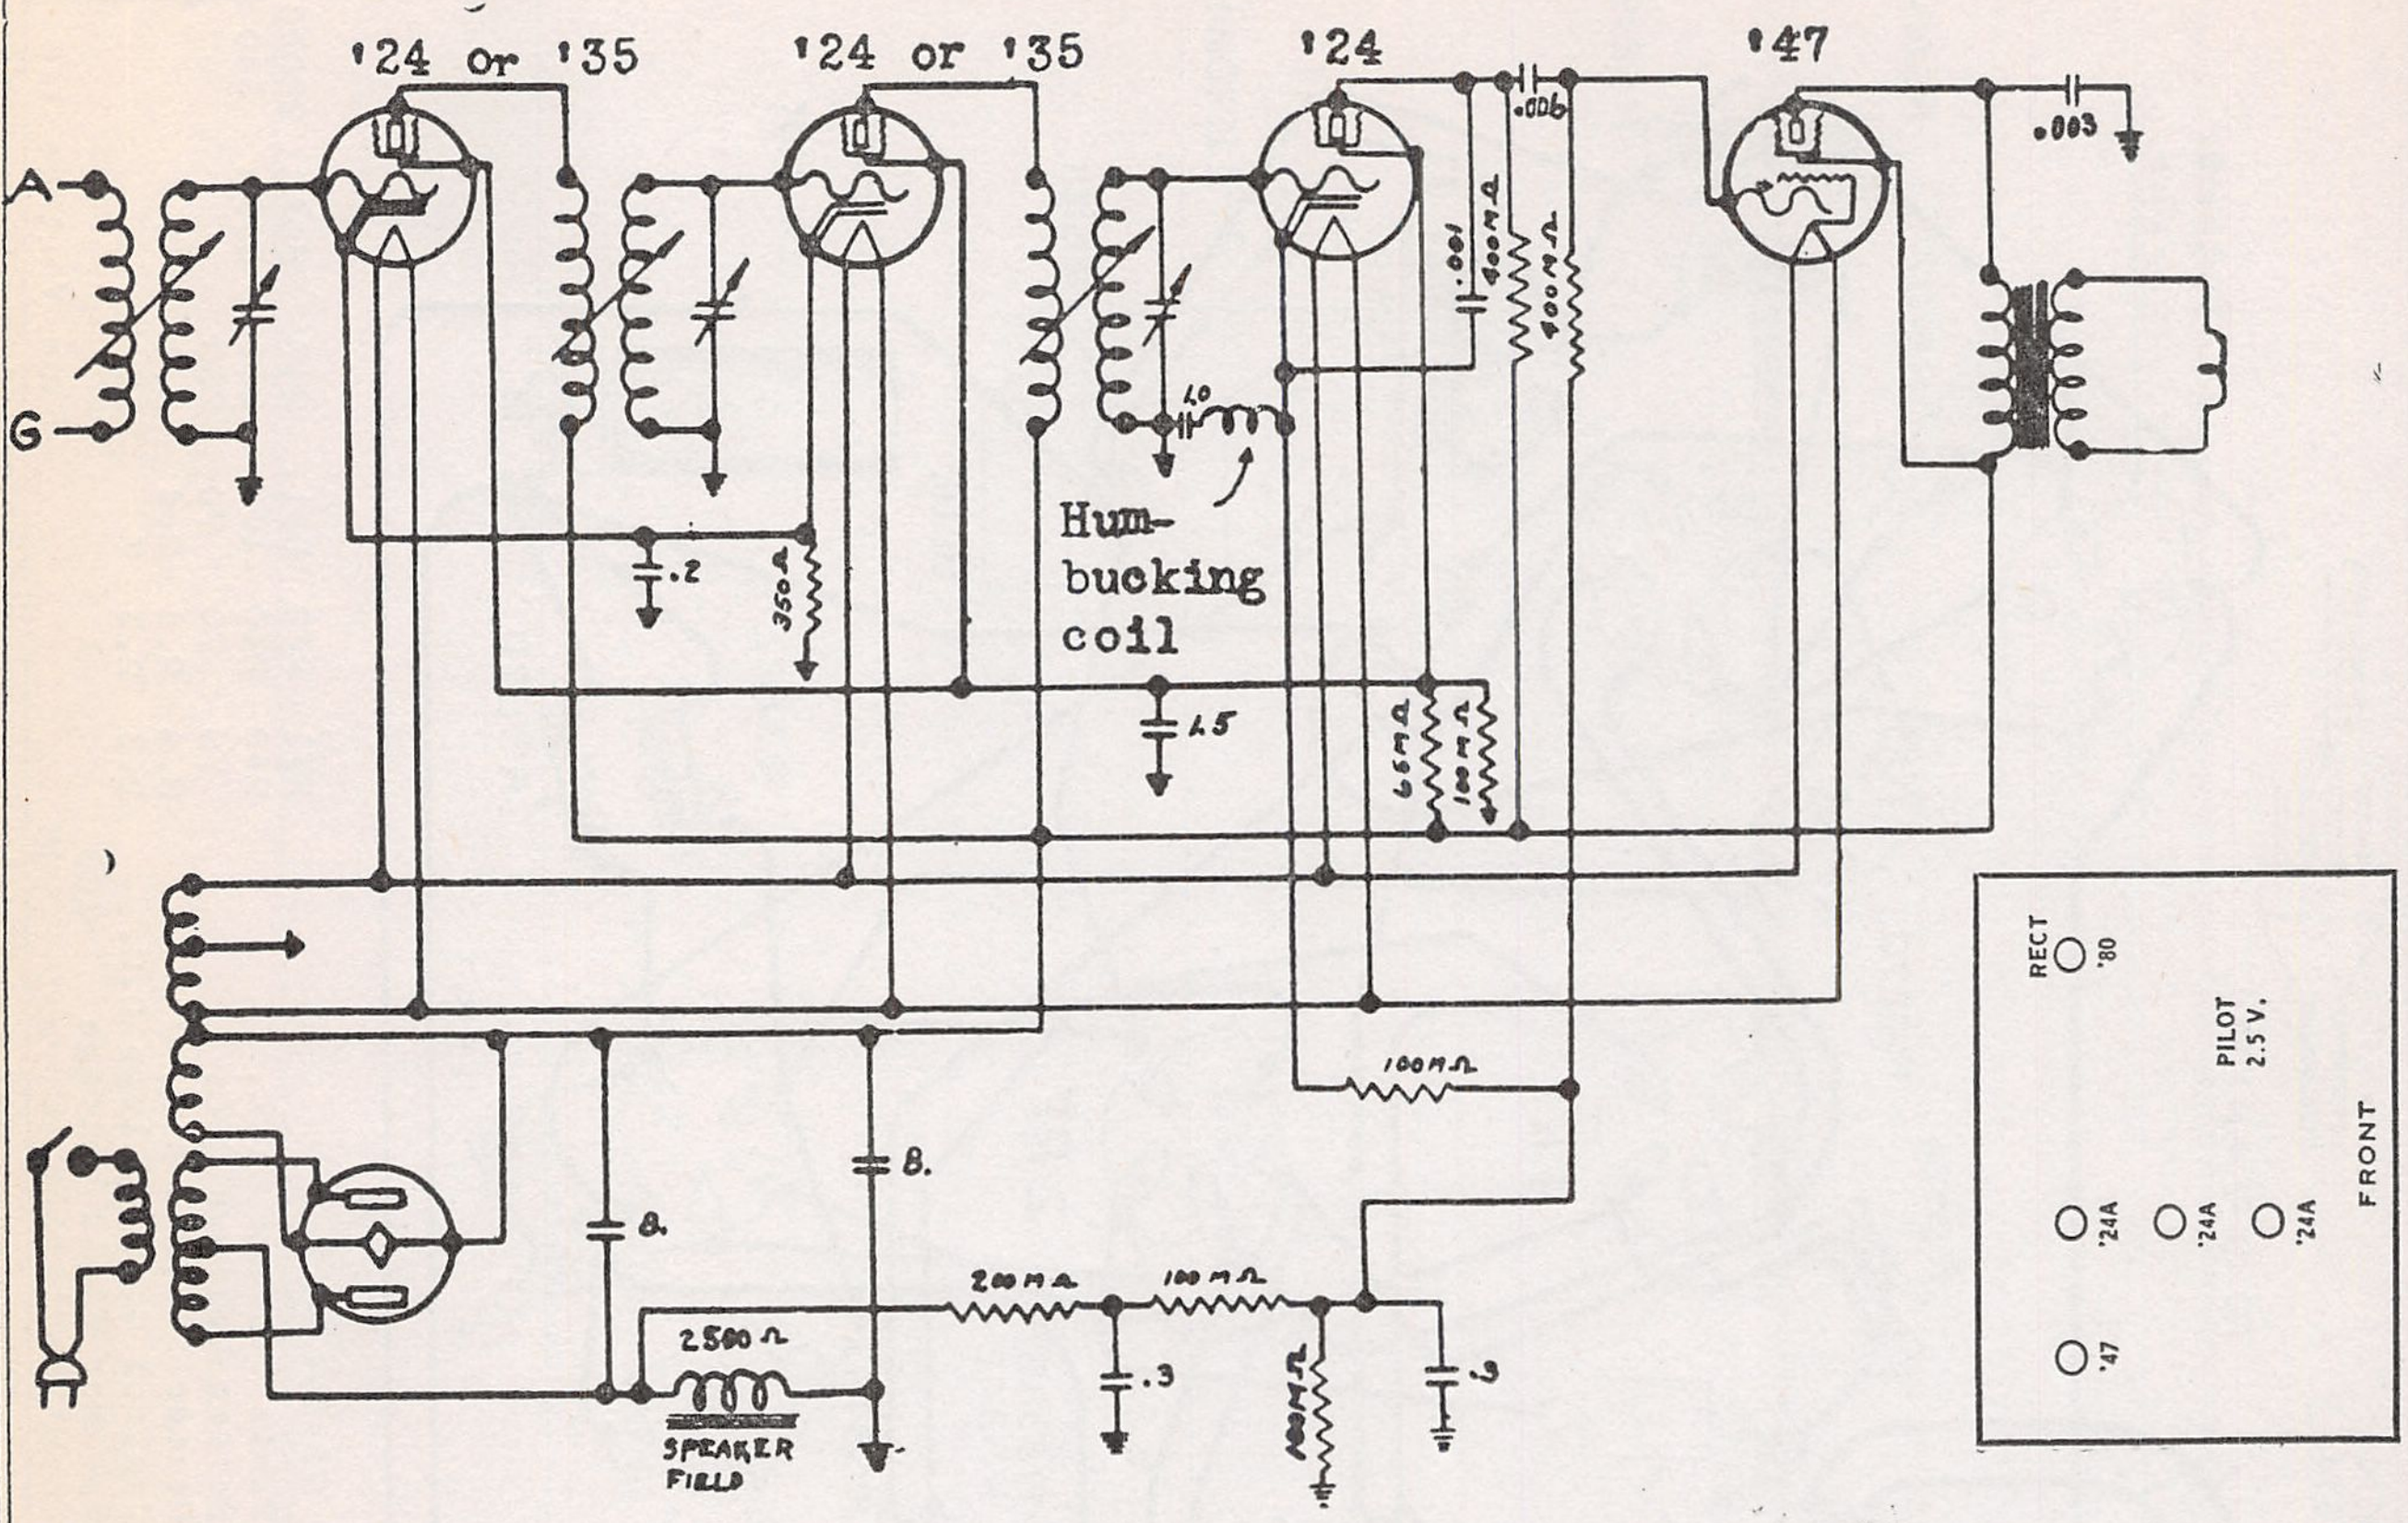
'24 or '35
'24 or '35
'24
'47
A
G
.006
.003
.001
400MΩ
400MΩ
40
Hum-bucking coil
.2
350Ω
1.5
65MΩ
100MΩ
100MΩ
8.
8.
2500Ω
SPEAKER FIELD
200MΩ
100MΩ
100MΩ
.3
.3
RECT
'80
PILOT 2.5 V.
FRONT
'24A
'24A
'24A
'47

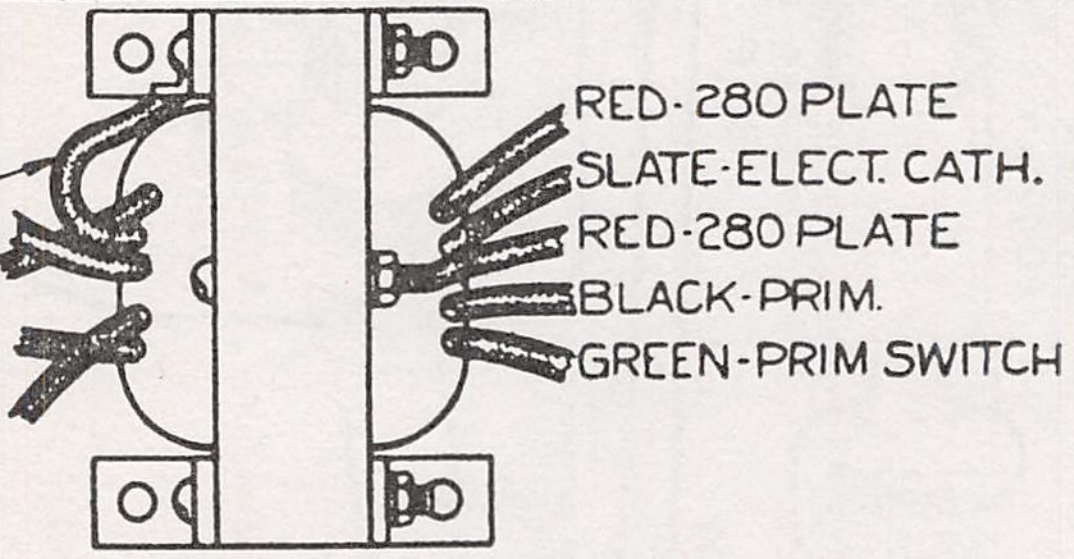
YELLOW-C.T. FIL.
YELLOW-224&247 FIL.
RED-280 FIL.
RED-280 PLATE
SLATE-ELECT. CATH.
RED-280 PLATE
BLACK-PRIM.
GREEN-PRIM SWITCH

POWER TRANSFORMER
R5567A = 60~ R5574A = 25~

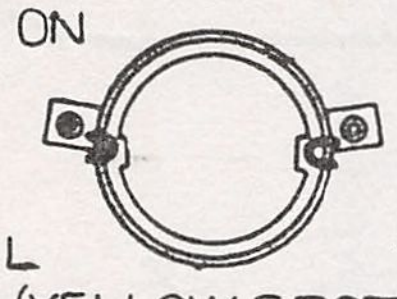
TO STATOR TERMINAL ON VARIABLE CONDENSER
R.F. SEC. COIL D-2047-SA TO GND.
DET. SEC COIL D-2084-SA TO GROUND

SECONDARY COIL
DET. SEC. COIL = D-2084-SA (YELLOW SPOT)
R.F. SEC. COIL = D-2047-SA (PLAIN)

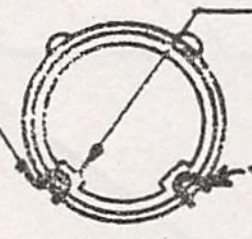
R.F. PRIM. COIL D-2078-SA TO UY 224 PLATE
ANT. PRIM. COIL D-2059 SA TO ANT.
ANT. PRIM. COIL D-2059-SA TO GND.
R.F. PRIM. COIL D-2078-SA TO +B TERM.

PRIMARY COIL
ANT. PRIM. COIL = D-2059-SA (YELLOW SPOT)
R.F. PRIM. COIL = D-2078-SA (PLAIN)

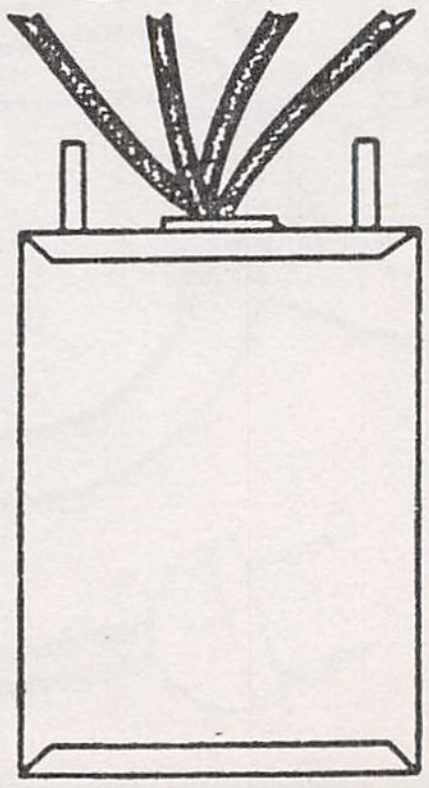
BLACK LEAD-.1 Mfd
TERM. HUM COIL
BLUE LEAD-1.5 Mfd
SCREEN GRID-224
BROWN LEAD-.3 Mfd
CT 200M OHM RESISTOR
BROWN LEAD-3Mfd.
TAP 300M OHM RESISTOR

FILTER CONDENSER
R-6101 = 60 CYCLE
25 CYCLE

SEARS-ROEBUCK & CO.

MODEL 1290,1300
MODEL 1292,1302
Chassis

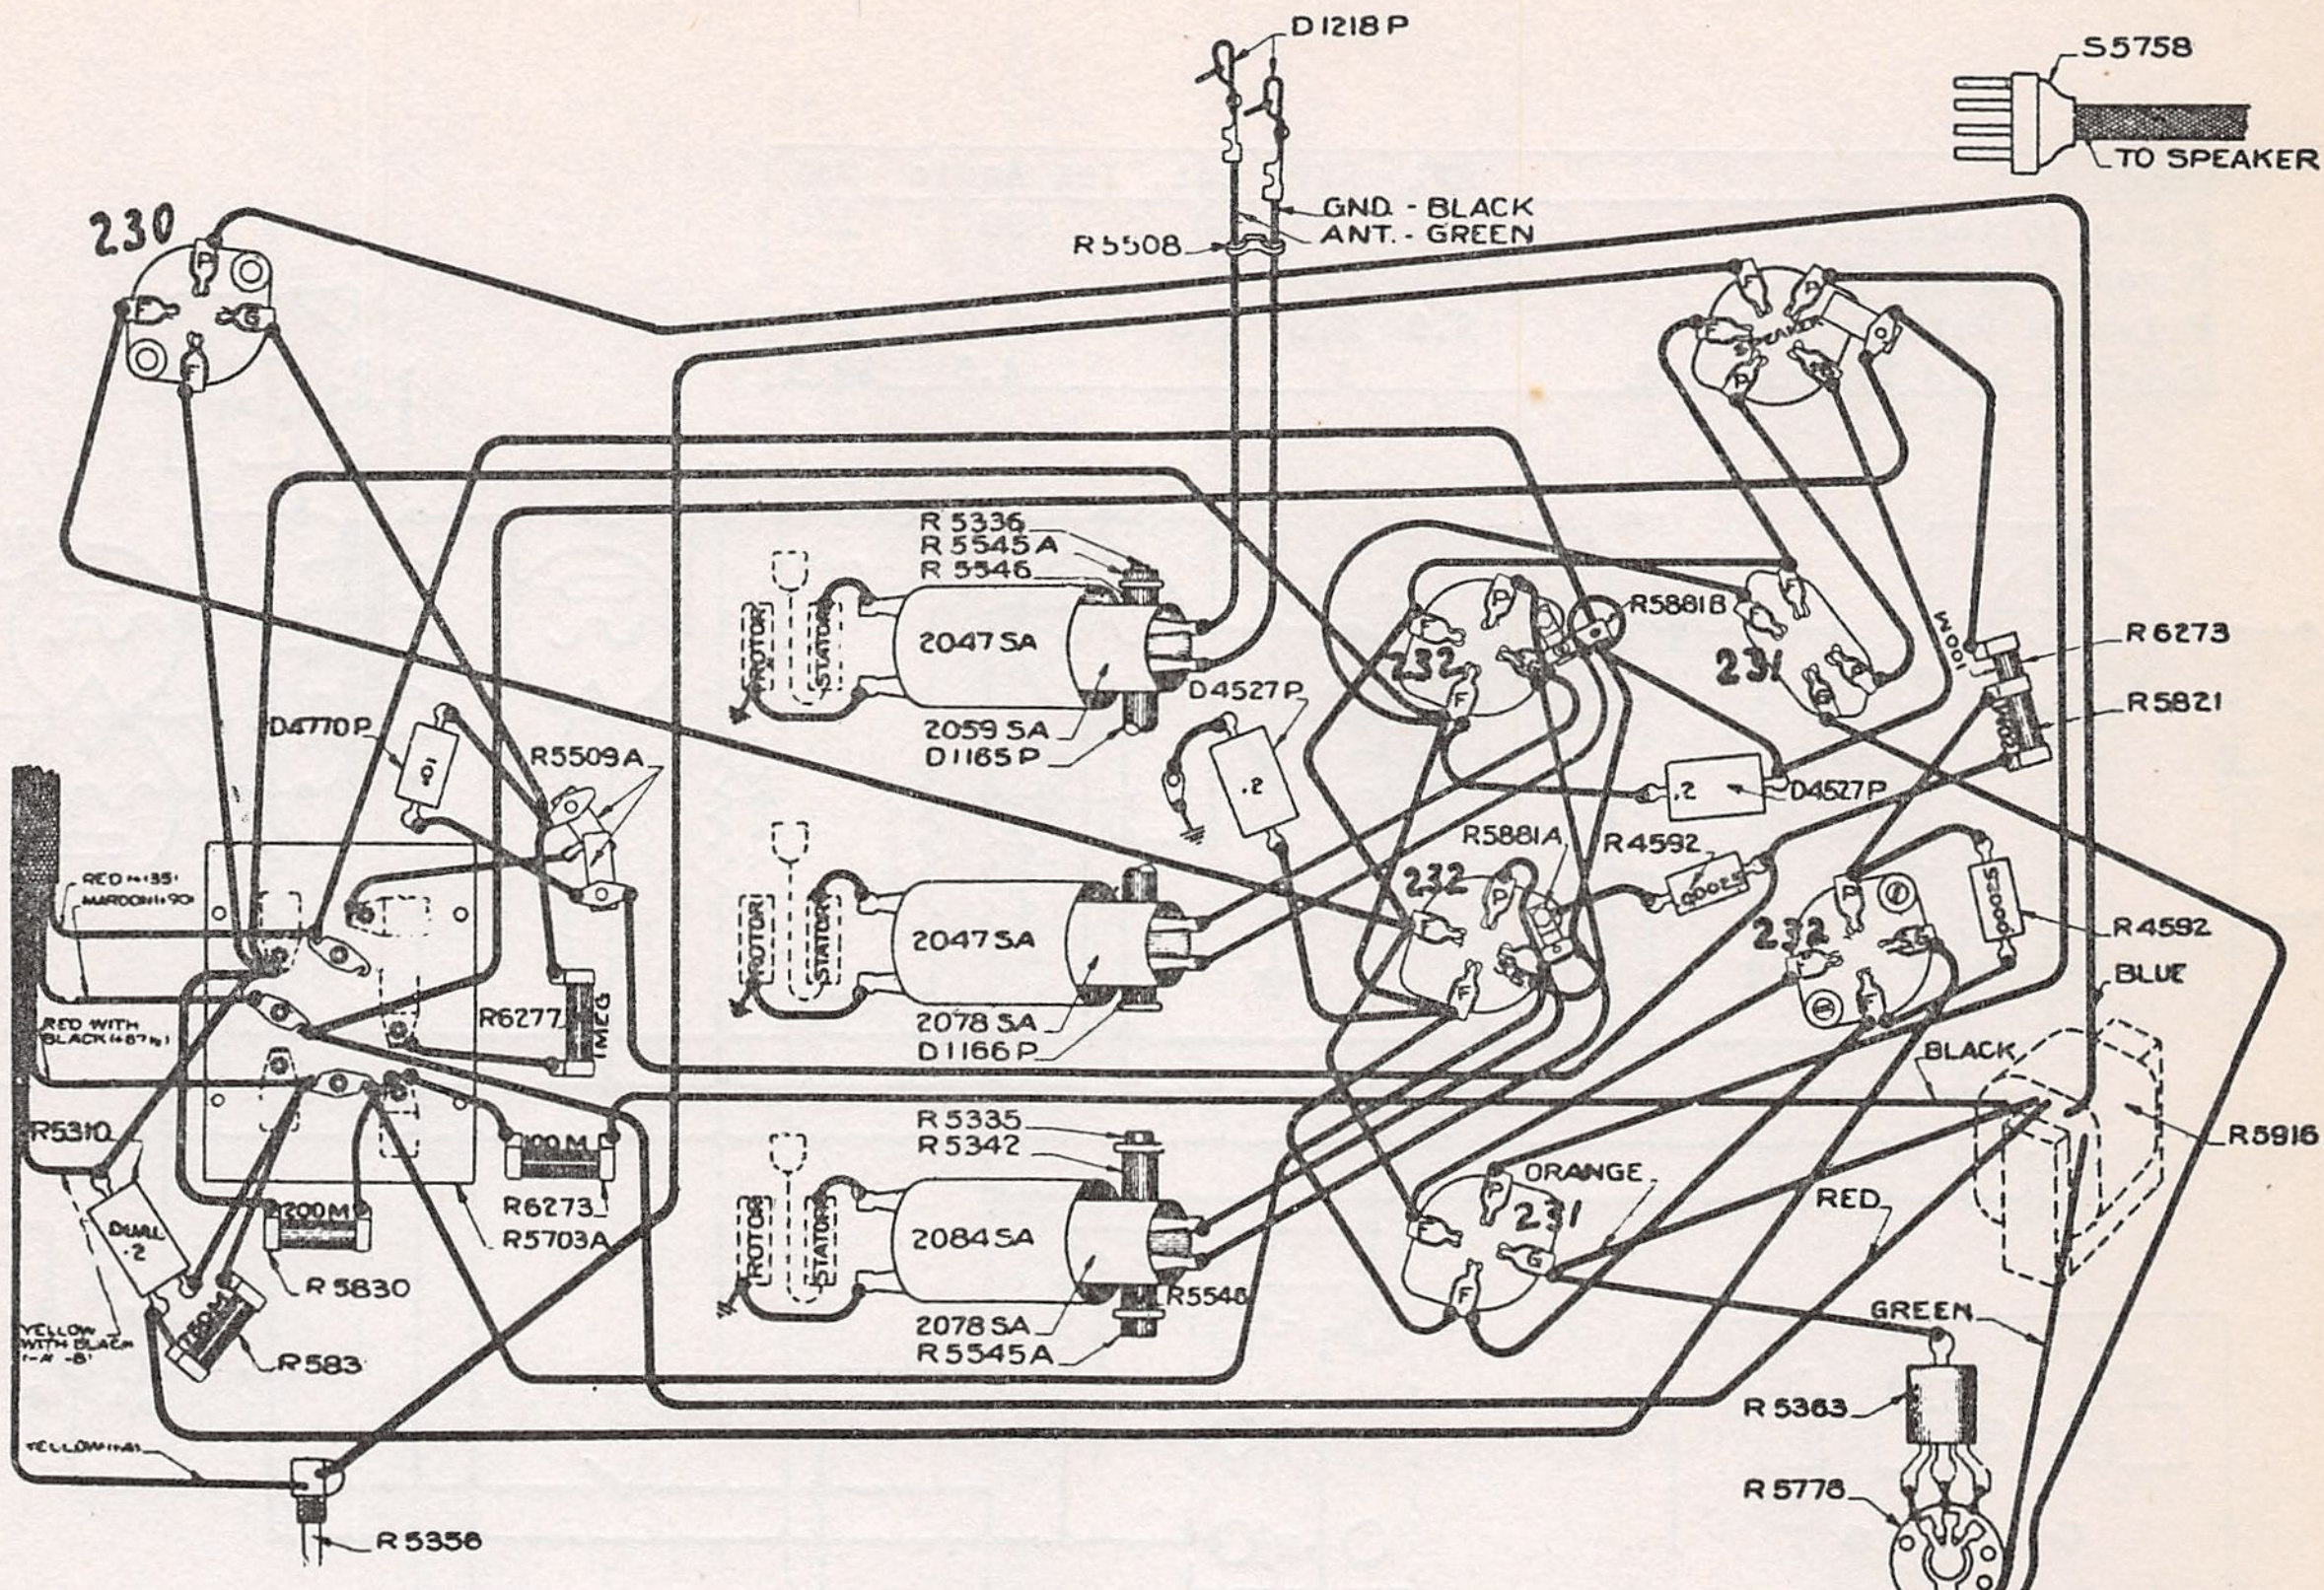
D1218P
S5758
TO SPEAKER
GND. - BLACK
ANT. - GREEN
R5508
230
P
G
F
R5336
R5545A
R5546
ROTOR
STATOR
2047SA
2059SA
D1165P
D4527P
.2
232
R5881B
231
R6273
R5821
D4527P
D4770P
.01
R5509A
RED (+135)
MAROON (+90)
RED WITH BLACK (+67½)
R6277
1MEG
R5881A
R4592
.00025
R4592
BLUE
BLACK
R5916A
2047SA
2078SA
D1166P
R5335
R5342
2084SA
2078SA
R5545A
R5546
ORANGE
RED
GREEN
R5310
DUAL .2
100M
R6273
R5703A
200M
R5830
R583
YELLOW WITH BLACK (-A -B)
YELLOW (+A)
R5363
R5778
R5356

Model 1290,1300

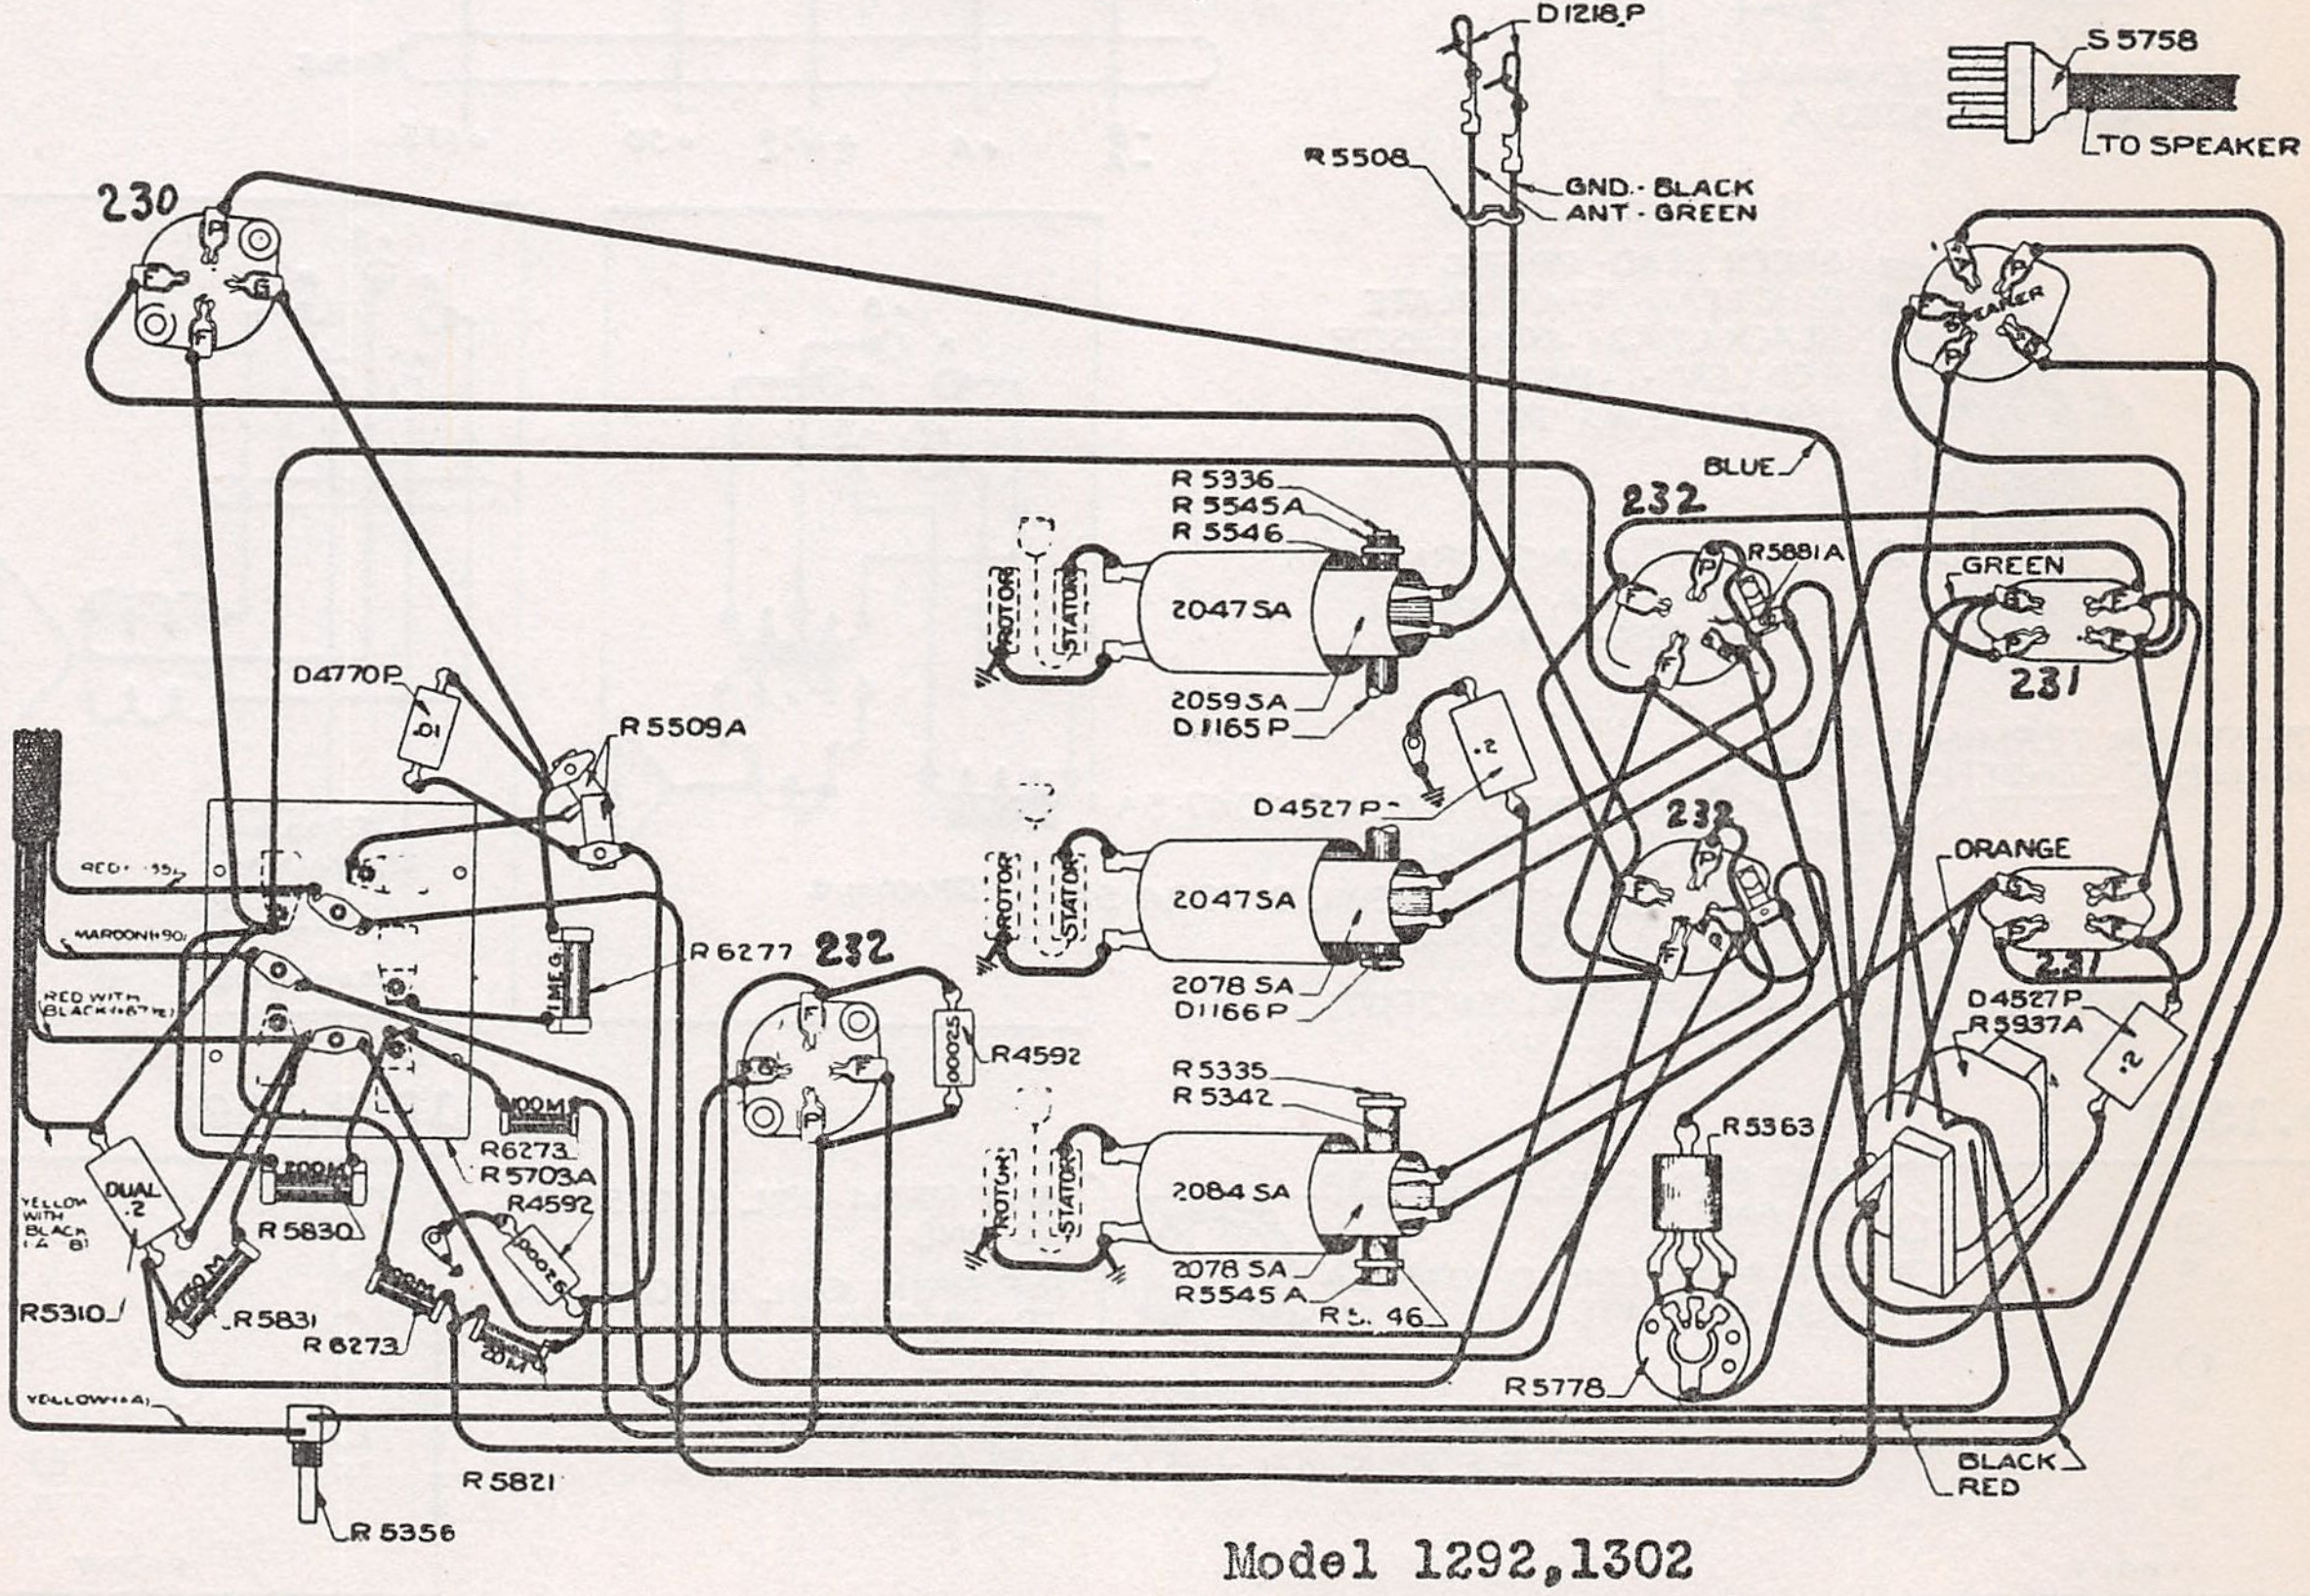
D1218P
S5758
TO SPEAKER
R5508
GND. - BLACK
ANT. - GREEN
230
P
G
F
BLUE
R5336
R5545A
R5546
ROTOR
STATOR
2047SA
2059SA
D1165P
232
R5881A
GREEN
231
D4770P
.01
R5509A
.2
D4527P
2047SA
2078SA
D1166P
232
ORANGE
231
RED (+135)
MAROON (+90)
RED WITH BLACK (+67½)
1MEG
R6277
232
.00025
R4592
D4527P
R5937A
.2
R5335
R5342
2084SA
2078SA
R5545A
R5546
R5363
100M
R6273
R5703A
R4592
.00025
YELLOW WITH BLACK (-A -B)
DUAL .2
200M
R5830
R5310
R5831
R6273
YELLOW (+A)
R5821
R5356
R5778
BLACK
RED

Model 1292,1302

MODEL 1290,1300
MODEL 1292,1302
Schematic

SEARS-ROEBUCK & CO.

Model 40	RF1	RF2	Det.	1st Audio	231
Plate Voltage D.C.	135	135	80	90	130
Screen Voltage D.C.	67	67	25		
Filament Voltage D.C.	2.0	2.0	2.0	2.0	2.0
Control Grid Voltage D.C.	3	3		4.5	22.5

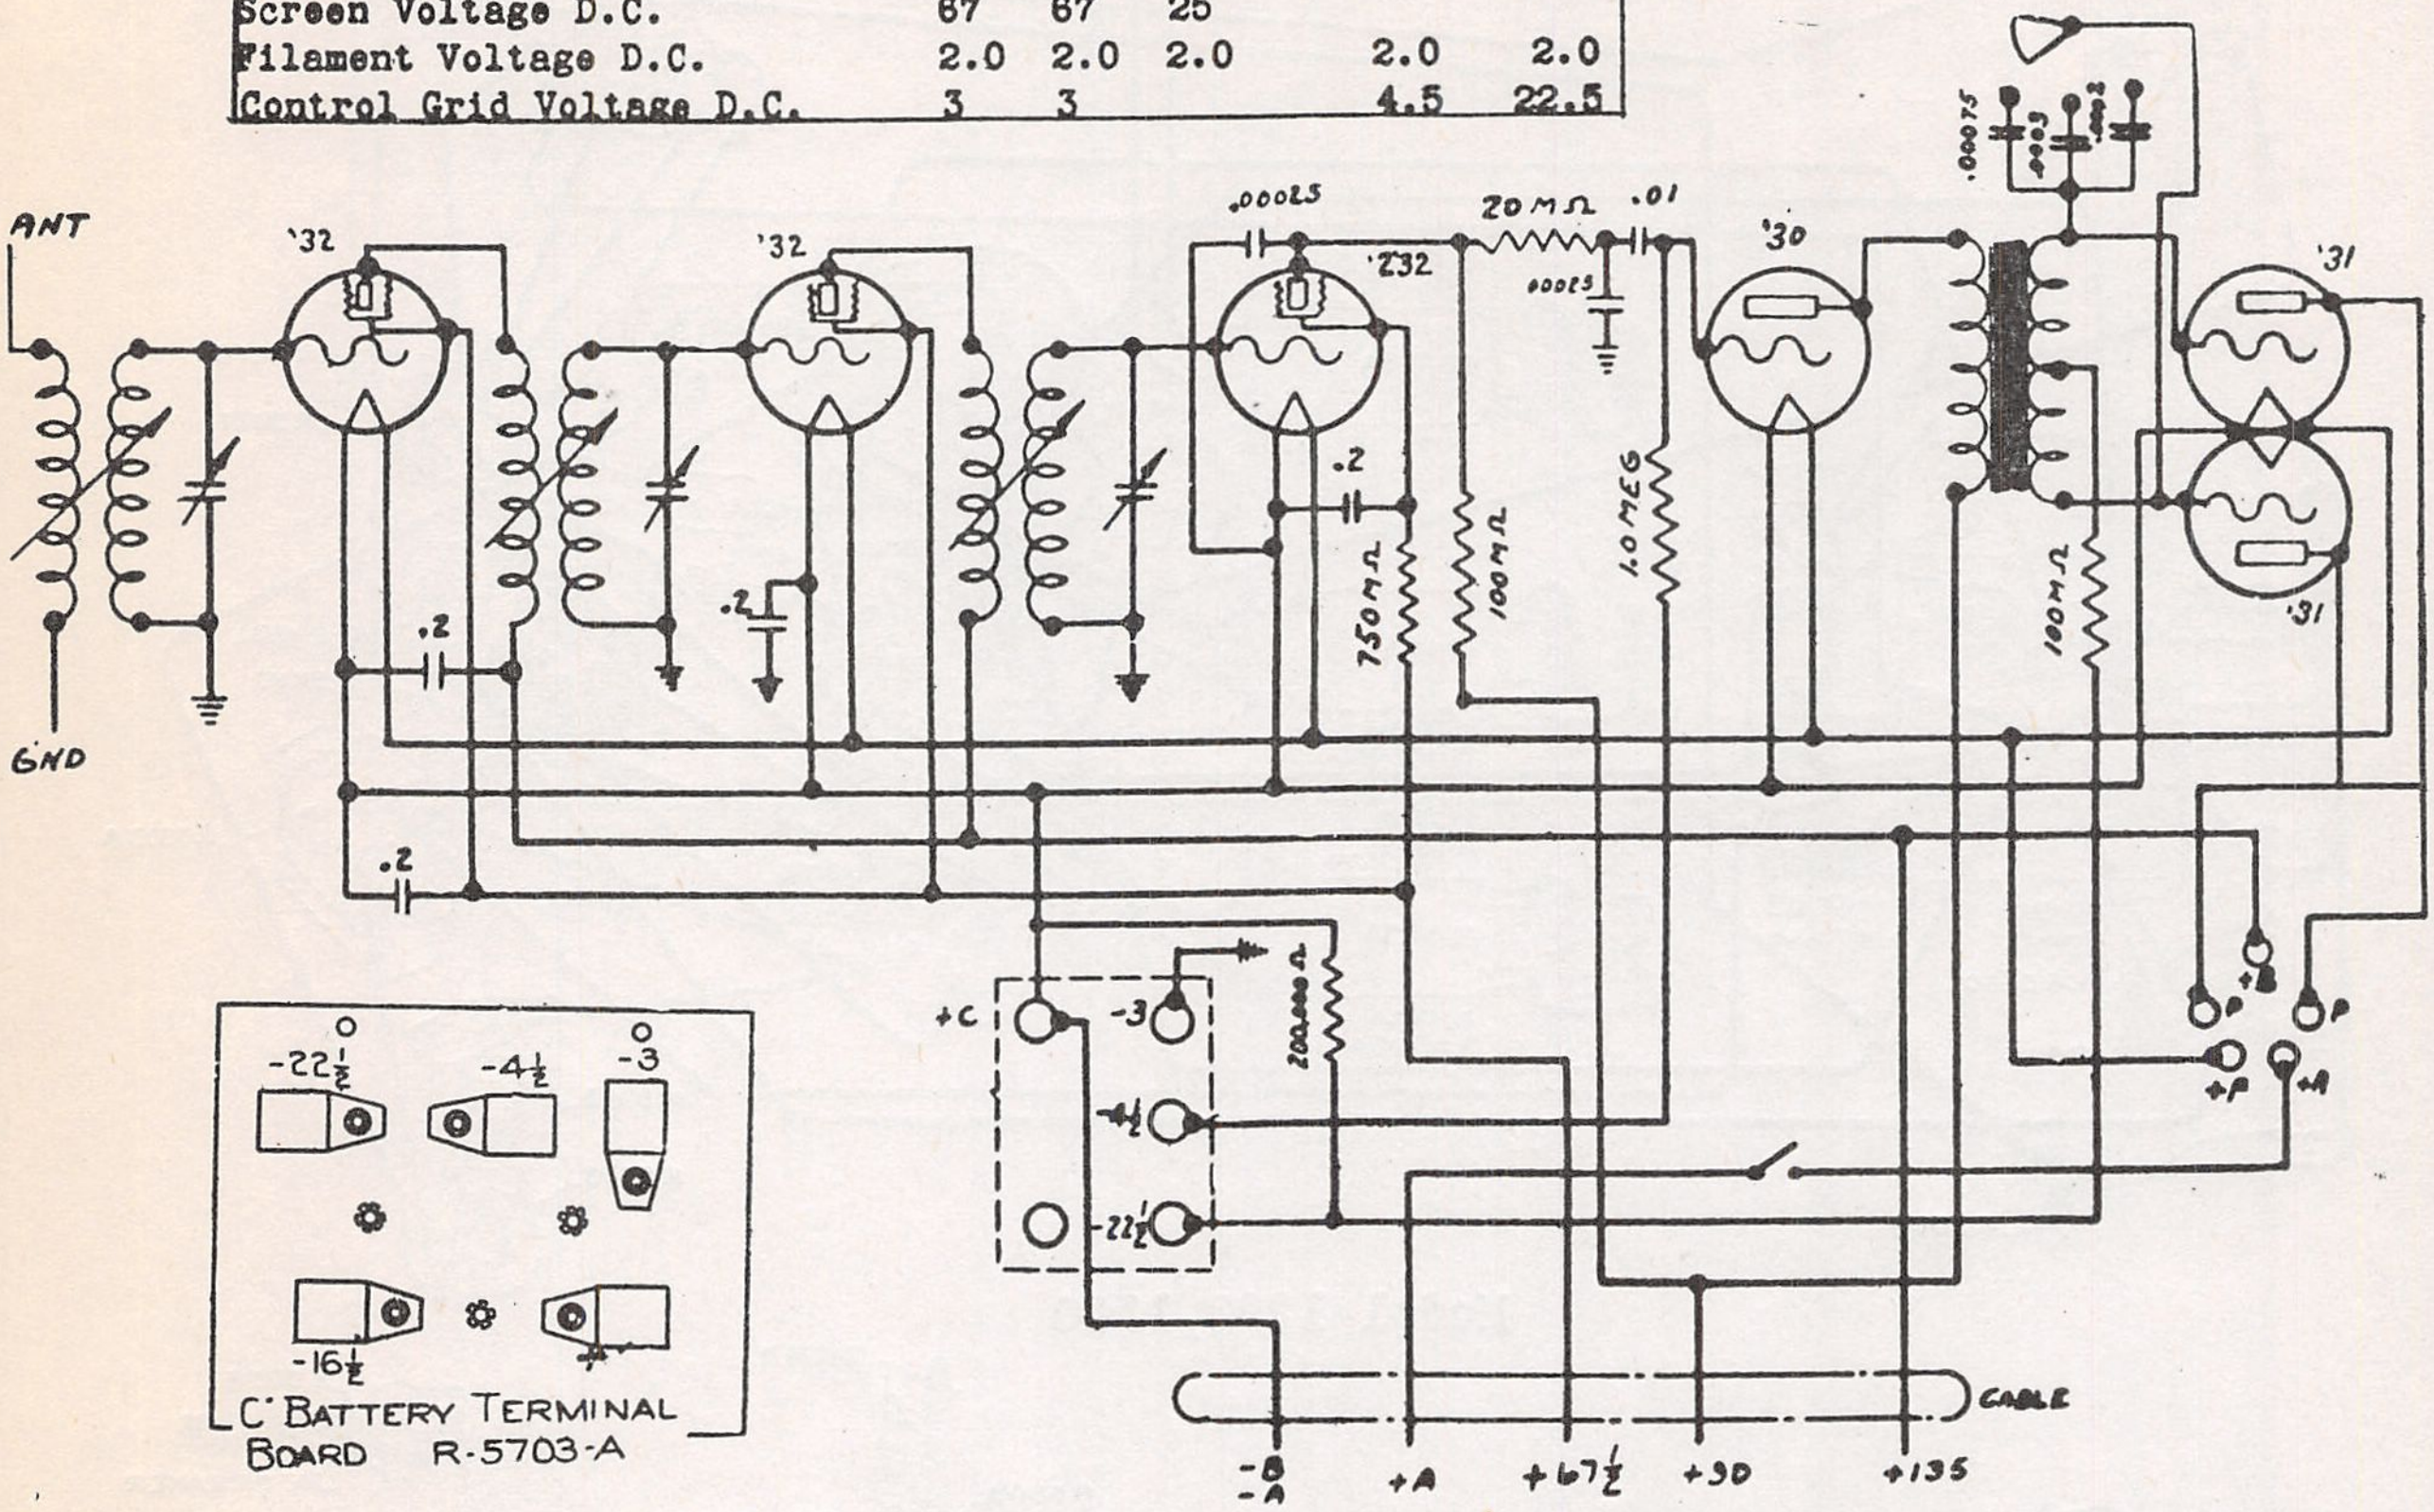
ANT
GND
'32
'32
'232
'30
'31
'31
.00025
20 MΩ
.01
.00025
.2
.2
.2
.2
750 MΩ
100 MΩ
10 MEG
100 MΩ
.00075
+C
-3
-4½
-22½
200,000 Ω
CABLE
-B -A
+A
+67½
+90
+135
P
+B
P
+F
+A
-22½
-4½
-3
-16½
C' BATTERY TERMINAL BOARD R-5703-A

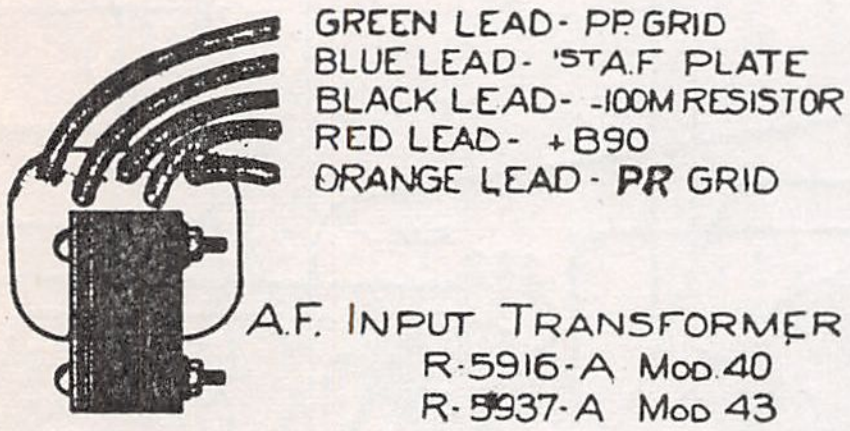
GREEN LEAD - PP GRID
BLUE LEAD - 'STA.F PLATE
BLACK LEAD - 100M RESISTOR
RED LEAD - +B90
ORANGE LEAD - PR GRID
A.F. INPUT TRANSFORMER
R-5916-A MOD. 40
R-5937-A MOD 43

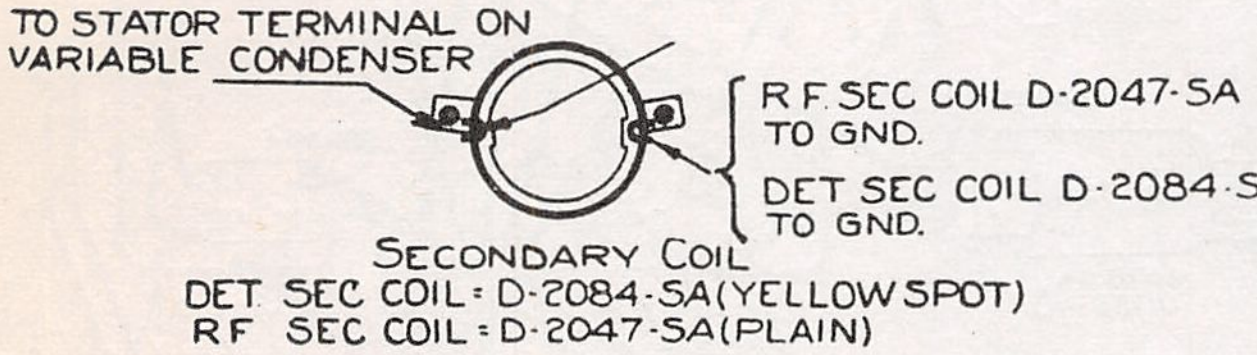
TO STATOR TERMINAL ON VARIABLE CONDENSER
R.F. SEC COIL D-2047-SA TO GND.
DET SEC COIL D-2084-SA TO GND.
SECONDARY COIL

DET. SEC COIL: D-2084-SA (YELLOW SPOT)
RF SEC COIL: D-2047-SA (PLAIN)

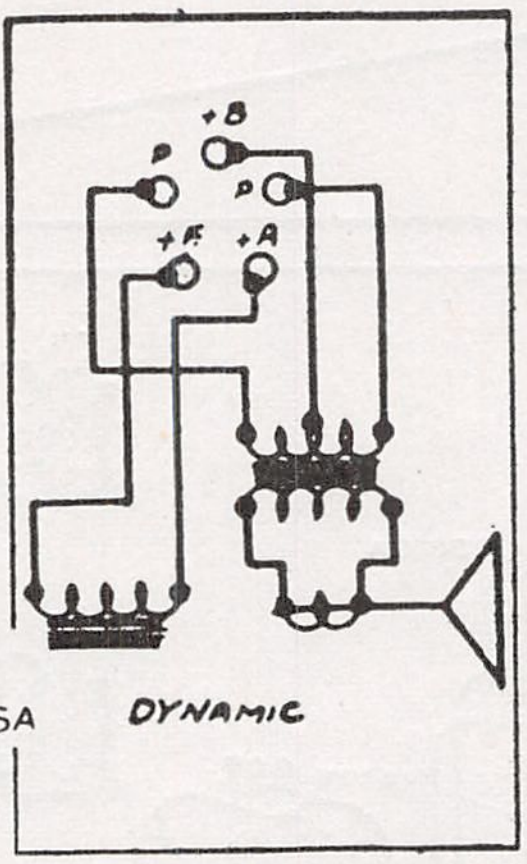
+B
P
P
+F
+A
DYNAMIC

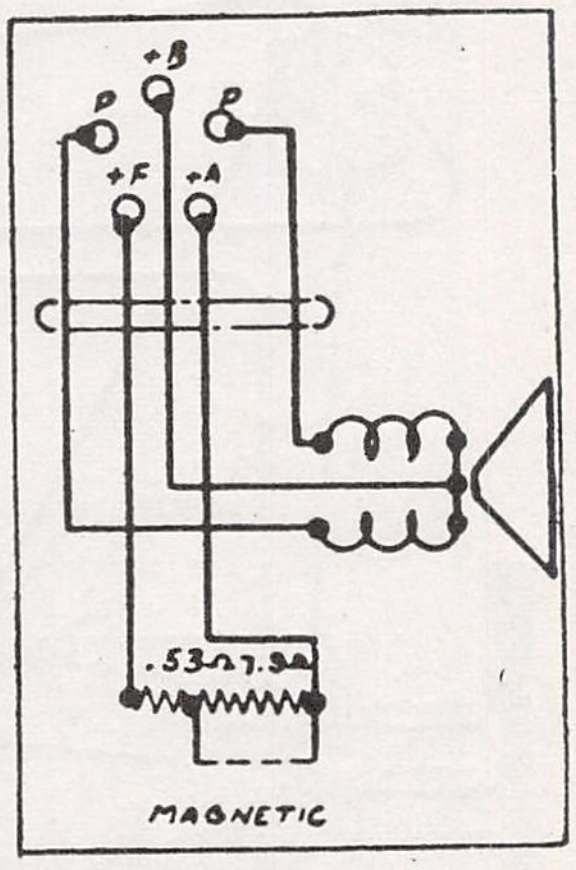
+B
P
P
+F
+A
.53Ω 7.5A
MAGNETIC

1290.1300

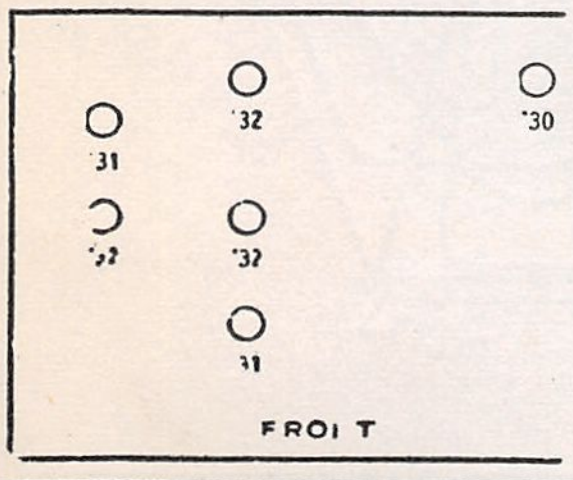
'31
'32
'30
'32
'32
'31
FRONT

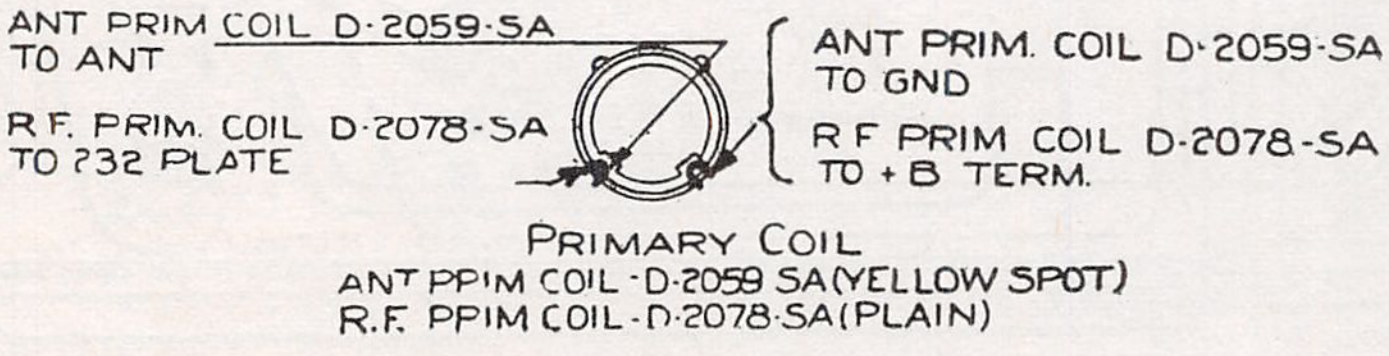
ANT PRIM COIL D-2059-SA TO ANT
R.F. PRIM. COIL D-2078-SA TO '232 PLATE
ANT PRIM. COIL D-2059-SA TO GND
R.F. PRIM COIL D-2078-SA TO +B TERM.
PRIMARY COIL

ANT PRIM COIL - D-2059 SA (YELLOW SPOT)
R.F. PRIM COIL - D-2078 SA (PLAIN)

1292,1302

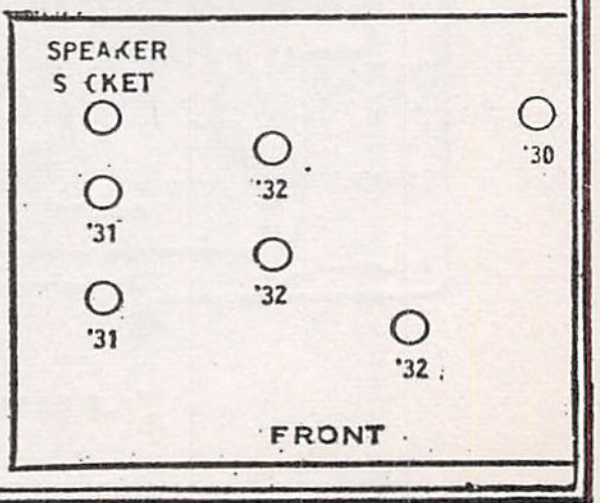
SPEAKER SOCKET
'30
'31
'32
'31
'32
'32
FRONT

SEARS-ROEBUCK & CO.

MODEL 1310,1312
Schematic

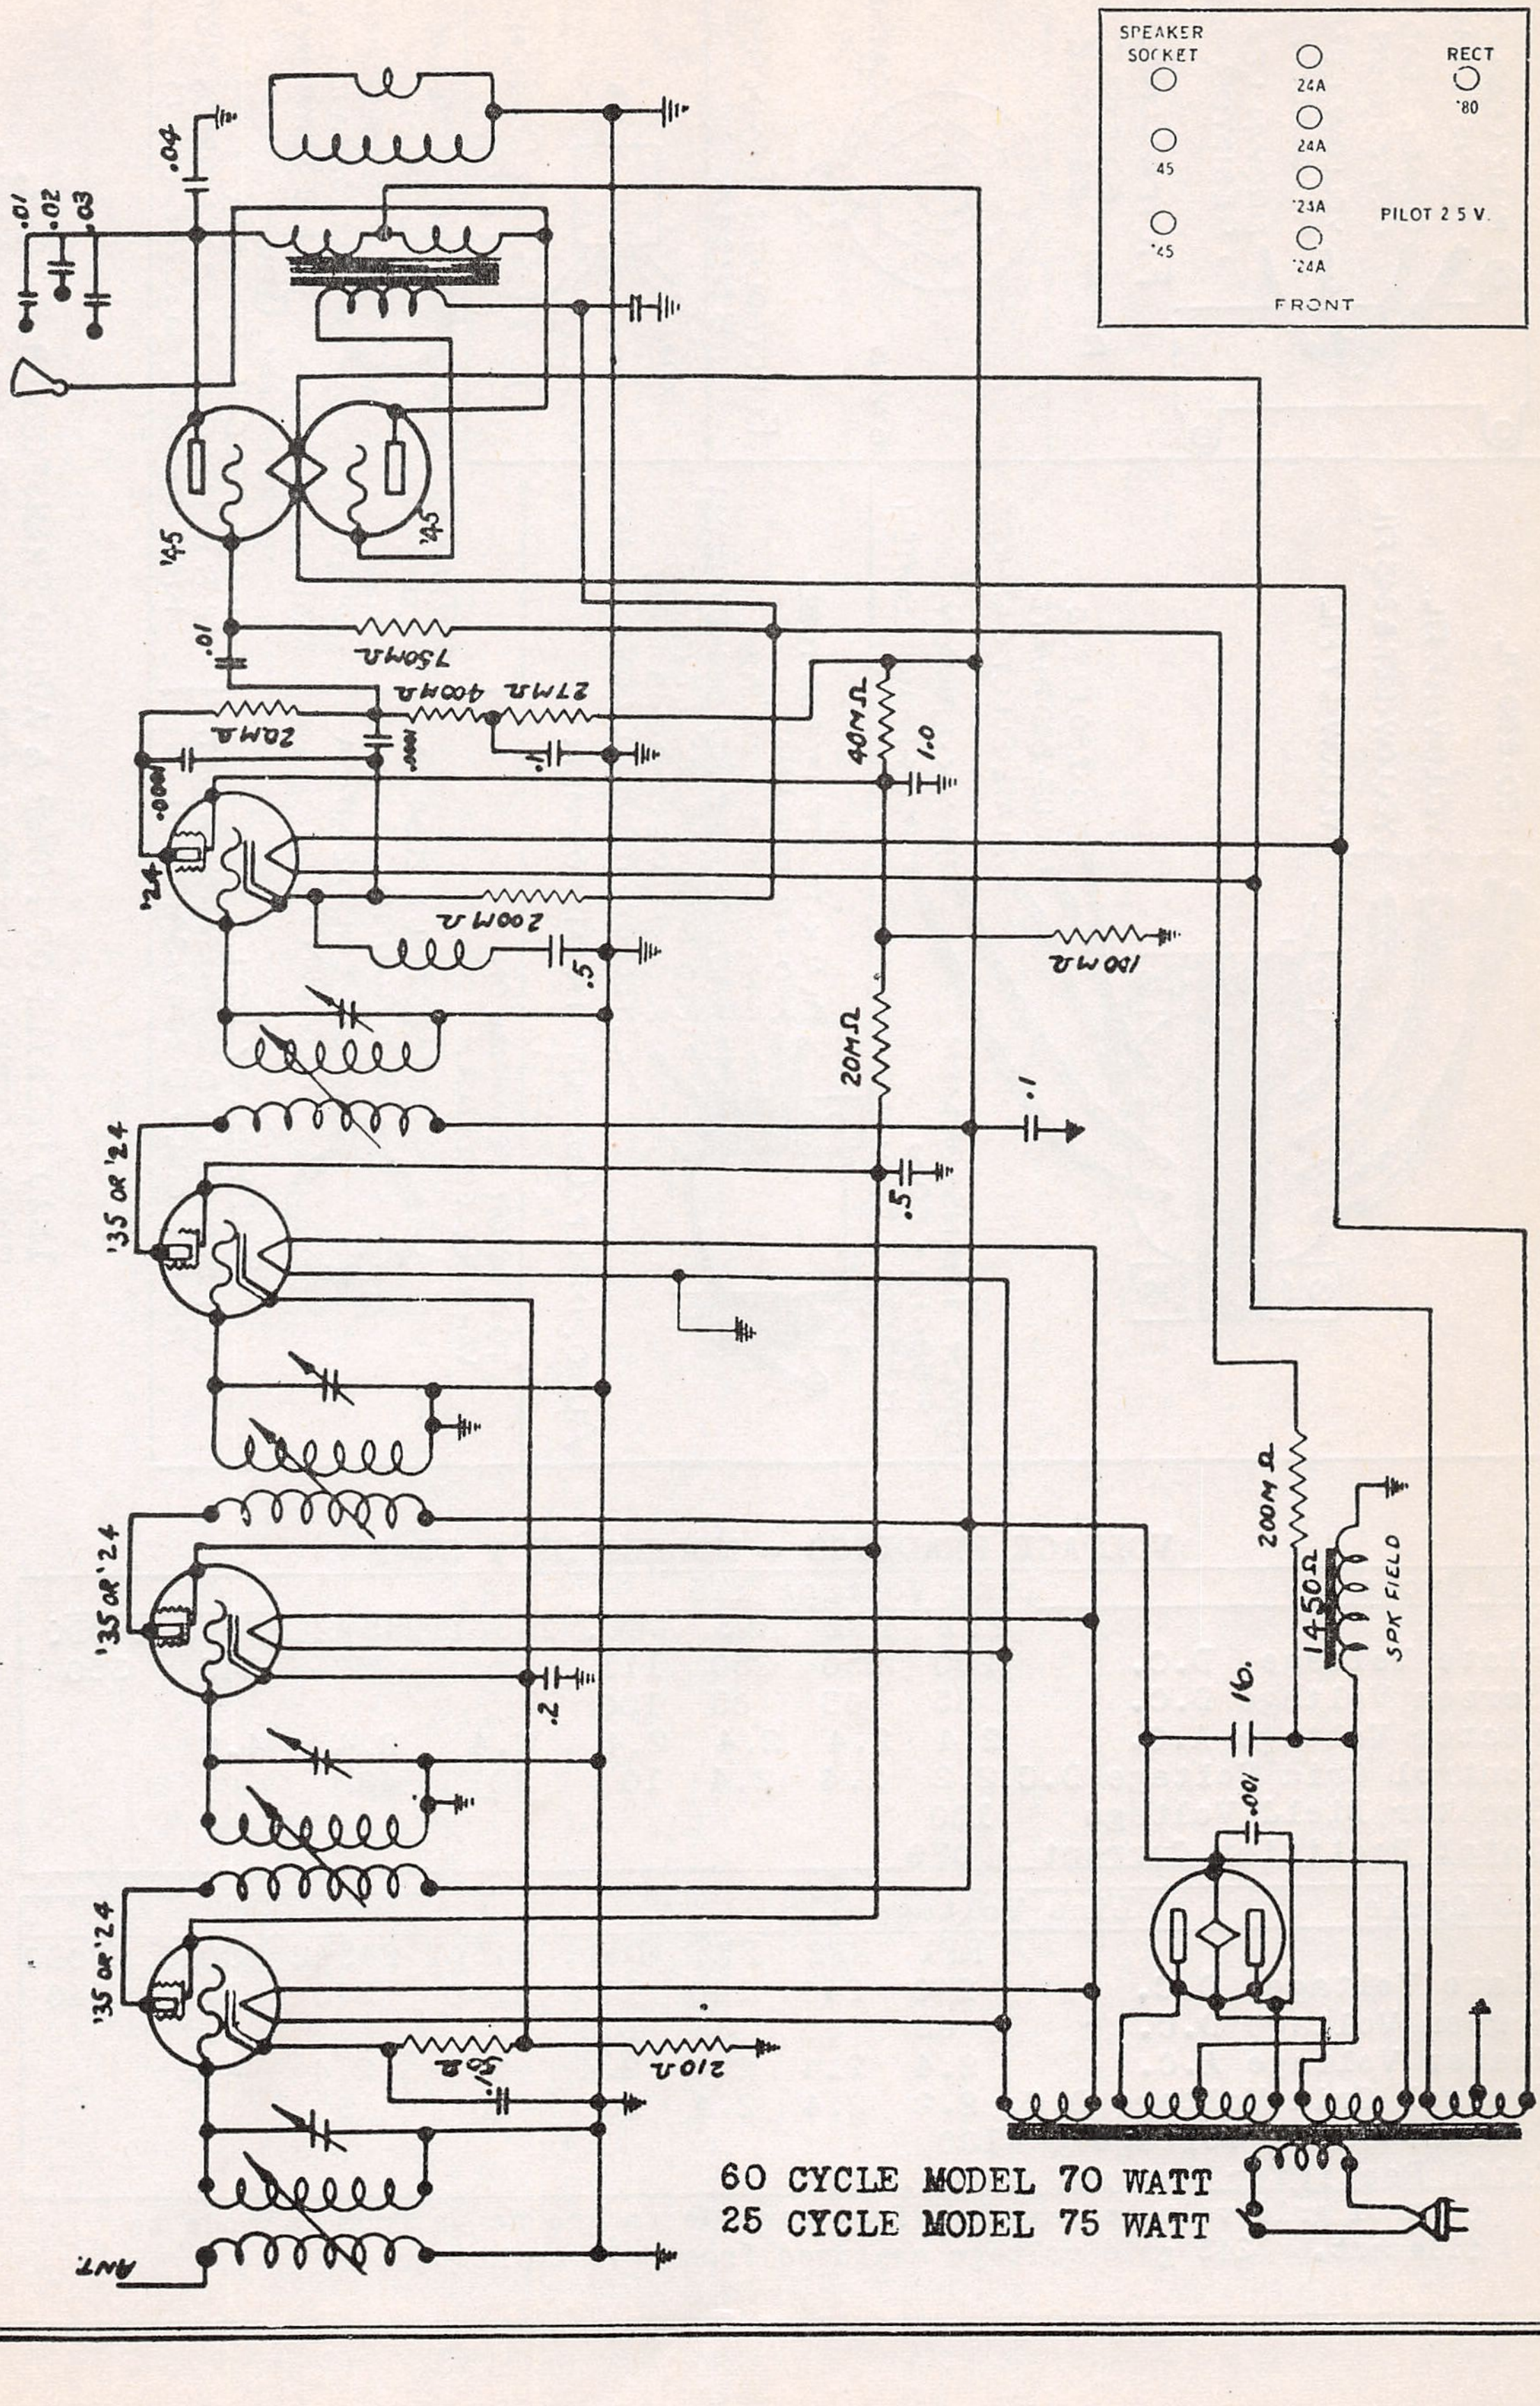
SPEAKER SOCKET
'45
'45
24A
24A
'24A
'24A
RECT
'80
PILOT 2.5 V.
FRONT
.01
.02
.03
.04
'45
'45
.01
750MΩ
400MΩ
27MΩ
20MΩ
.0001
.0001
.1
40MΩ
1.0
'24
200MΩ
.5
100MΩ
20MΩ
.1
.5
'35 OR '24
'35 OR '24
'35 OR '24
.2
200MΩ
1450Ω
SPK FIELD
16.
.001
6Ω
.1
210Ω
ANT.

60 CYCLE MODEL 70 WATT
25 CYCLE MODEL 75 WATT

MODEL 1310,1312
Voltage-Data

SEARS-ROEBUCK & CO.

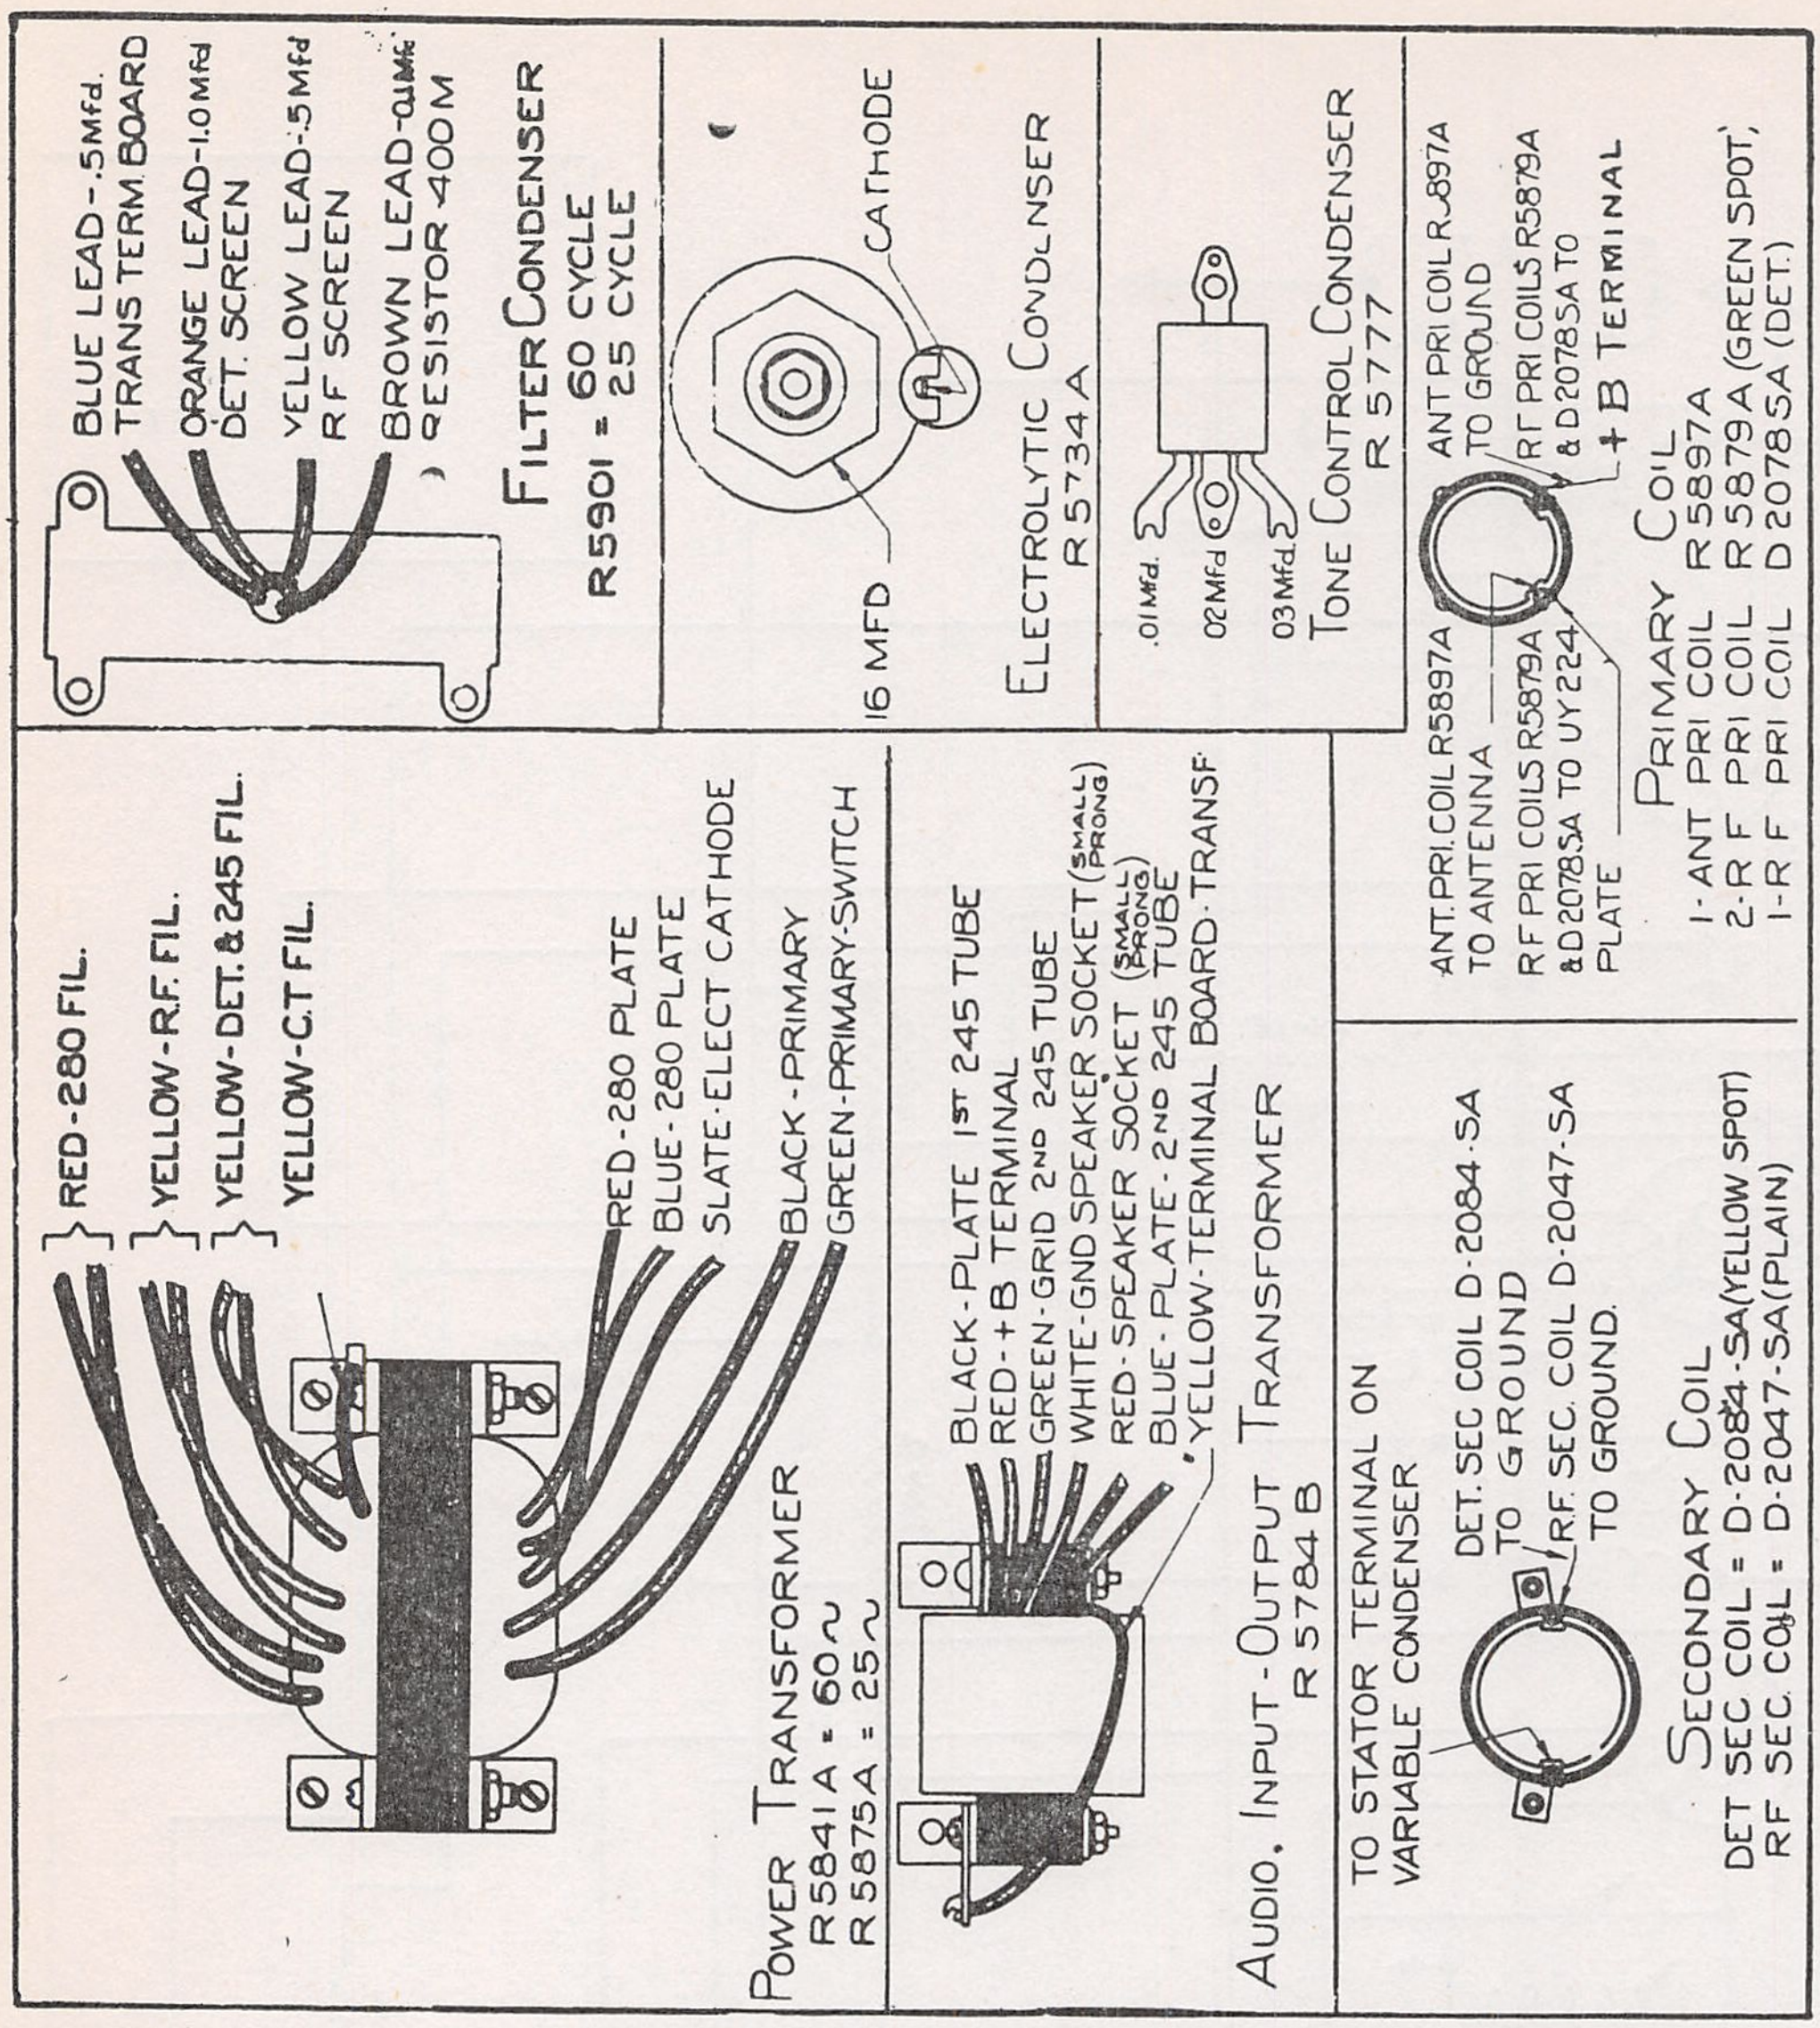
BLUE LEAD -.5 Mfd. TRANS TERM. BOARD
ORANGE LEAD -1.0 Mfd DET. SCREEN
YELLOW LEAD -.5 Mfd R F SCREEN
BROWN LEAD -.1 Mfd RESISTOR 400 M
FILTER CONDENSER
R5901 = 60 CYCLE - 25 CYCLE
CATHODE
16 MFD
ELECTROLYTIC CONDENSER
R 5734 A
.01 Mfd.
.02 Mfd
.03 Mfd.
TONE CONTROL CONDENSER
R 5777
ANT PRI COIL R5897A TO GROUND
RT PRI COILS R5879A & D2078SA TO + B TERMINAL
ANT. PRI. COIL R5897A TO ANTENNA
RF PRI COILS R5879A & D2078SA TO UY224 PLATE
PRIMARY COIL
1- ANT PRI COIL R 5897A
2- R F PRI COIL R 5879A (GREEN SPOT)
1- R F PRI COIL D 2078 SA (DET.)
RED - 280 FIL.
YELLOW - R.F. FIL.
YELLOW - DET. & 245 FIL.
YELLOW - C.T. FIL.
RED - 280 PLATE
BLUE - 280 PLATE
SLATE - ELECT CATHODE
BLACK - PRIMARY
GREEN - PRIMARY - SWITCH
POWER TRANSFORMER
R 5841 A = 60~
R 5875 A = 25~
BLACK - PLATE 1ST 245 TUBE
RED - + B TERMINAL
GREEN - GRID 2ND 245 TUBE
WHITE - GND SPEAKER SOCKET (SMALL PRONG)
RED - SPEAKER SOCKET (SMALL PRONG)
BLUE - PLATE - 2ND 245 TUBE
YELLOW - TERMINAL BOARD - TRANSF
AUDIO. INPUT - OUTPUT TRANSFORMER
R 5784 B
TO STATOR TERMINAL ON VARIABLE CONDENSER
DET. SEC COIL D-2084-SA TO GROUND
RF. SEC. COIL D-2047-SA TO GROUND.
SECONDARY COIL
DET SEC COIL = D-2084-SA (YELLOW SPOT)
RF SEC. COIL = D-2047-SA (PLAIN)

LEAD DETAILS OF POWER & AUDIO TRANSFORMER, FILTER, TONE CONTROL, ELECTROLYTIC CONDENSERS AND R.F. COILS.

VOLTAGE READINGS - MODELS 37 & 37-P

60 Cycle	Line Voltage 115							
	RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	250	250	250	115	250	250	345	350
Screen Voltage D.C.	65	65	65	100				
Heater Voltage A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage D.C.	2.2	2.4	2.4	10	20	48		
Speaker Field Voltage	100							
Total Rectifier Current	.070							

25 Cycle	Line Voltage 115							
	RF1	RF2	RF3	Det.	245#1	245#2	280AC	280DC
Plate Voltage D.C.	240	240	240	100	240	240	340	340
Screen Voltage D.C.	65	65	65	100				
Heater Voltage A.C.	2.4	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage D.C.	2.2	2.4	2.4	10	20	45		
Speaker Field Voltage	100							
Total Rectifier Current MADC	.070							

Control grid voltage measured from cathode to ground or from cathode to filament. 245 grid voltage measured from grid to ground.

SEARS-ROEBUCK & CO.

MODEL 1320,1322,1324
MODEL 1450
Schematics

60 Cycle Total Watts - 80 Line Voltage - 115	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC
Plate Voltage DC	230	40	240	240	160	235	240	350
Screen Voltage DC	65		65	65	20	240		
Heater Voltage AC	2.44	2.44	2.44	2.44	2.44	2.45	4.85	
Control Grid Voltage DC	10		1.7-40	1.7-40	20	16		
Speaker Field Voltage	110 Volts.							
Total Plate Current	1075 amp.							

25 Cycle Total Watts - 85 Line Voltage - 115	Tran.	Osc.	I.F.	R.F.	Det.	2-247	280AC	280DC
Plate Voltage DC	220	40	230	230	160	225	325	340
Screen Voltage DC	70		70	70	25	230		
Heater Voltage AC	2.25	2.25	2.25	2.25	2.45	2.45	4.7	
Control Grid Voltage DC	10		2-38	2-38	20	15		
Speaker Field Voltage	- 100 Volts							
Total Plate Current	- .075 amp.							

Note: Control grid volts are measured from cathode to ground or cathode to heater. 247 grid voltage from grid to ground or filament.

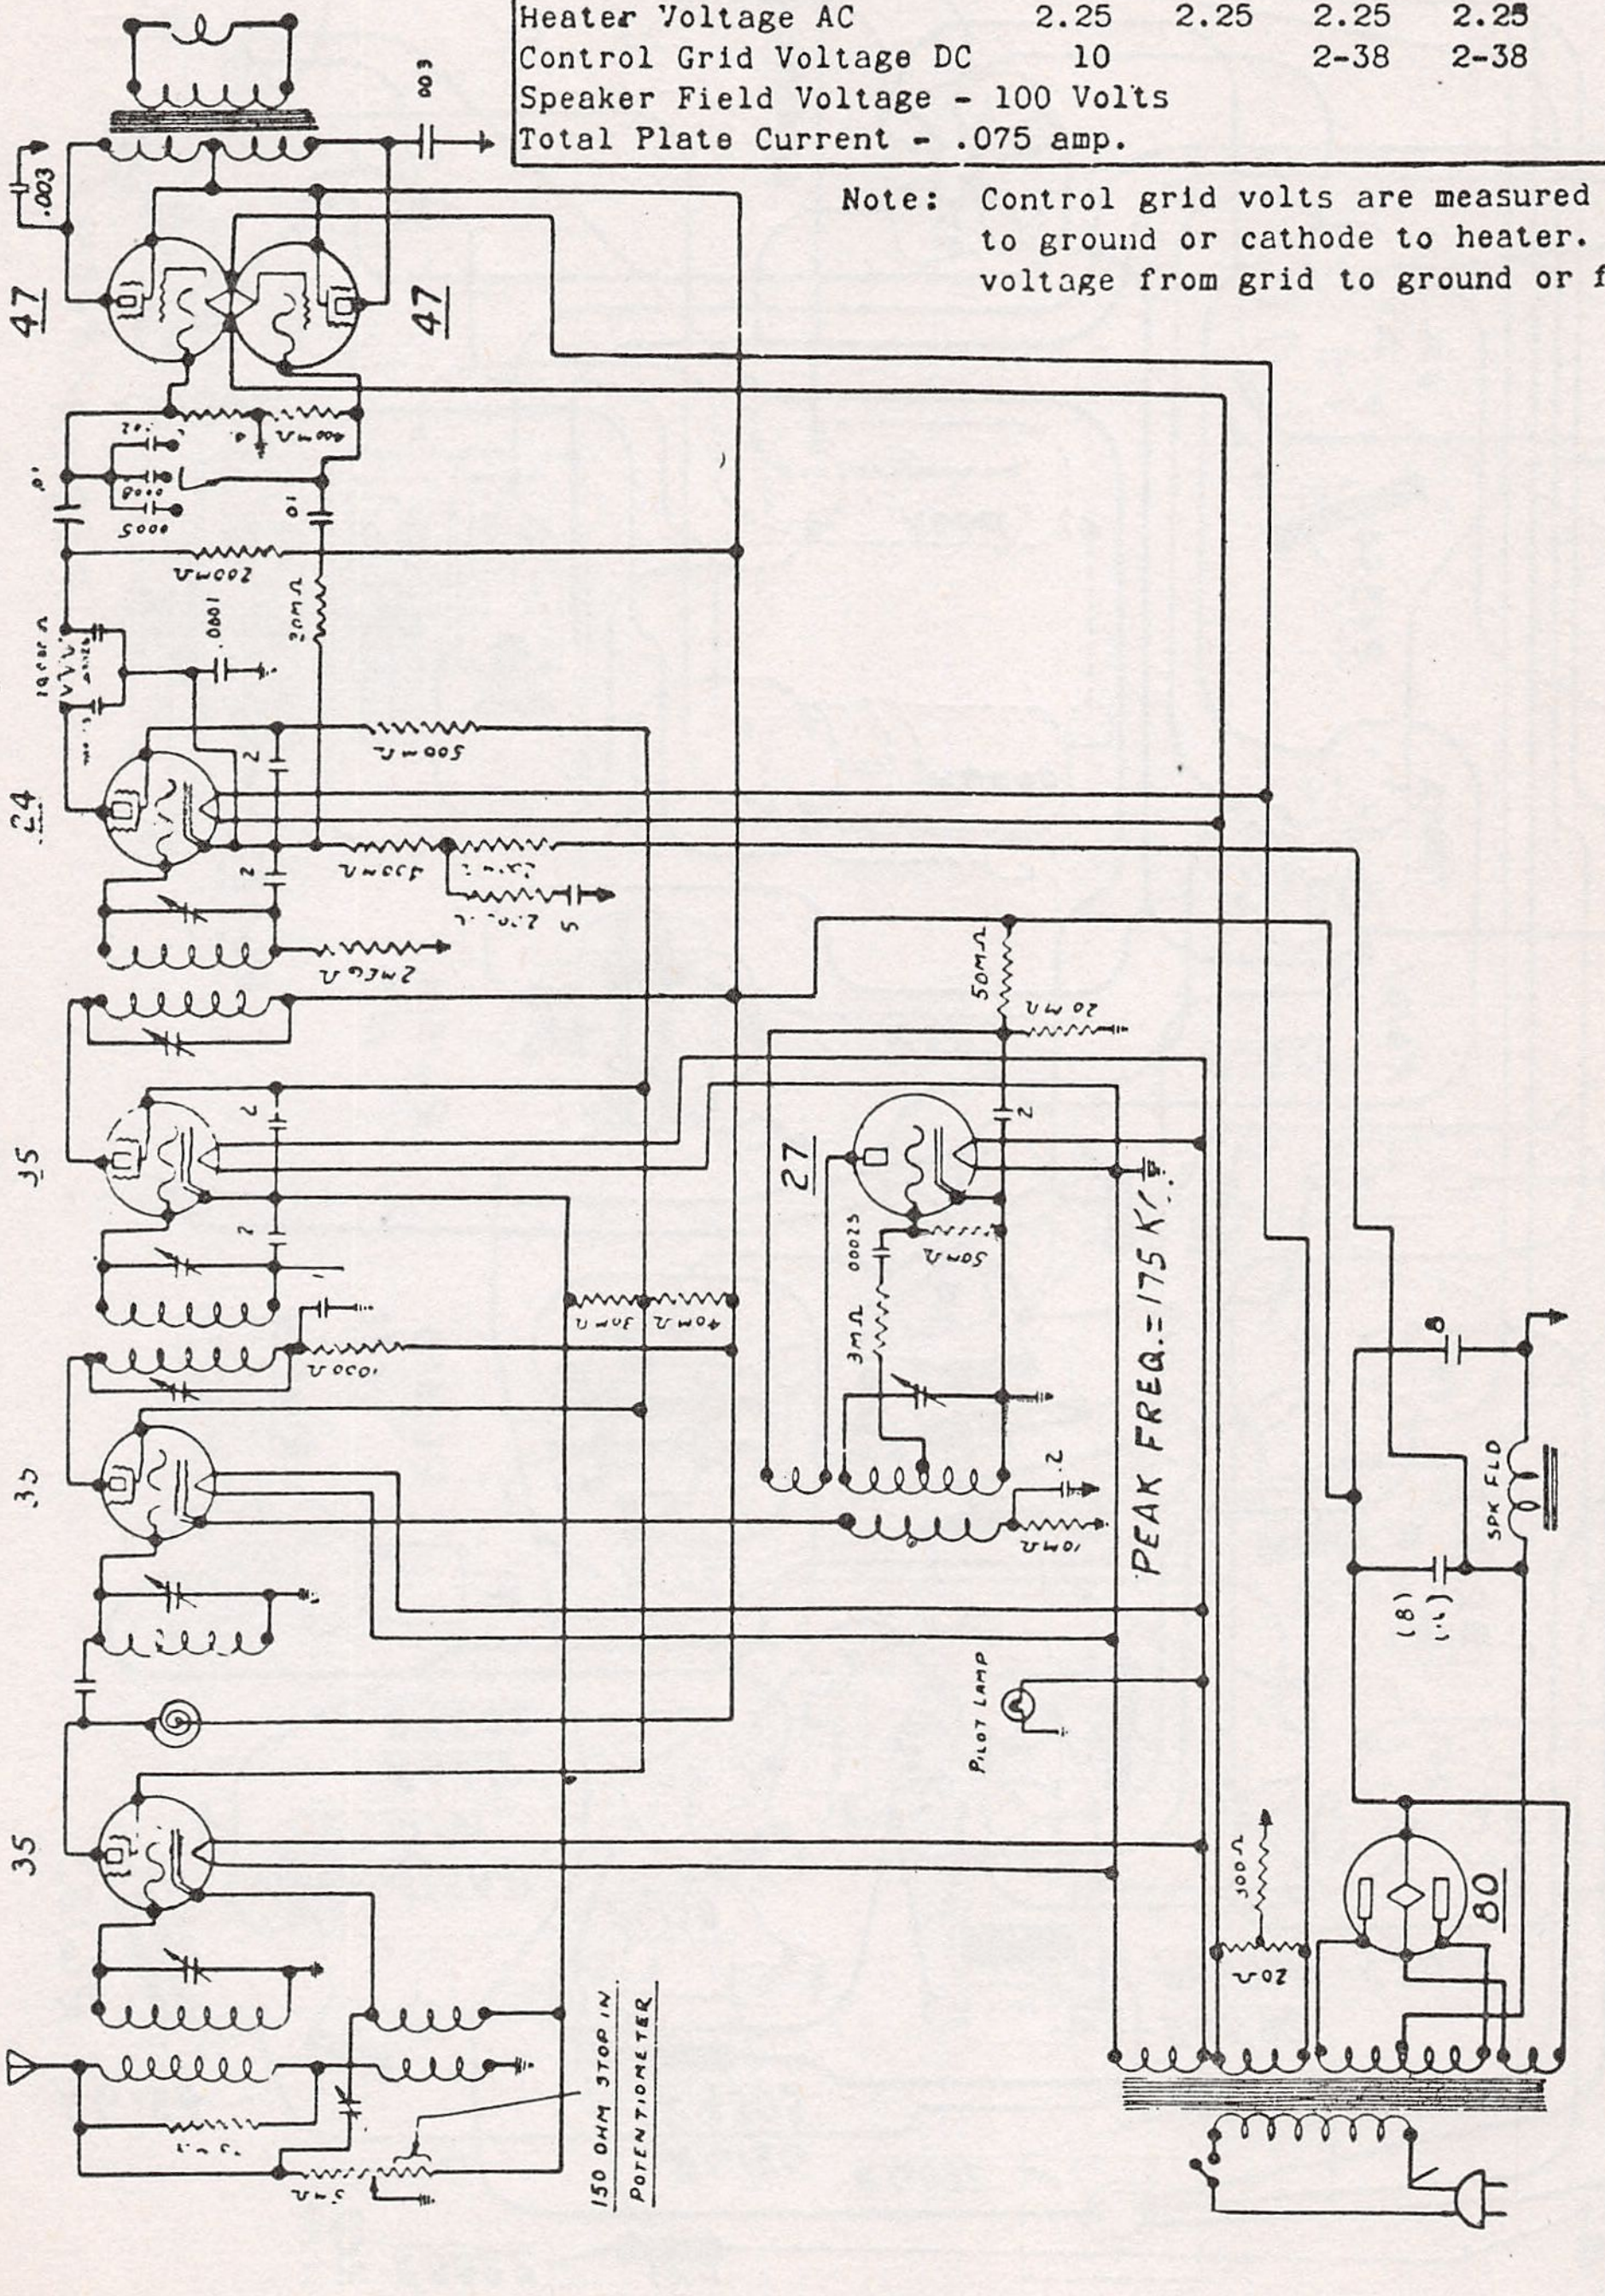
47
47
.003
.003
24
35
35
35
27
80
PEAK FREQ.=175 KC
PILOT LAMP
SPK FLD
8
(8)
(4)
50MΩ
20MΩ
5000
2000Ω
400Ω
300Ω
150 OHM STOP IN POTENTIOMETER

NOTE-In this set the hum across the field coil is used to buck out hum set up in the tube circuits. Causes of hum can be traced to defective detector or output tubes. (Interchange output tubes) Shorted condenser or open resistors in hum filter circuit. The hum filter circuits consists of a 2000 ohm resistor and a 0.5 condenser in the grid bias resistor circuit. This connects from the cathode of the detector to the negative side of the speaker field. Other causes of hum are Reversed speaker field, open or shorted condensers in detector circuit, open or grounded 20 ohm center tapped resistor, defective tone control, defective speaker or a defective electrolytic condenser.

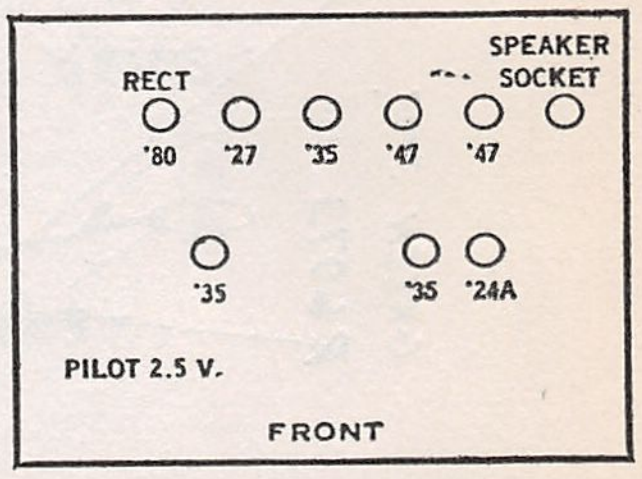
RECT
SPEAKER SOCKET
'80
'27
'35
'47
'47
'35
'35
'24A
PILOT 2.5 V.
FRONT

MODEL 1320,1322,1324
Chassis

SEARS-ROEBUCK & CO.

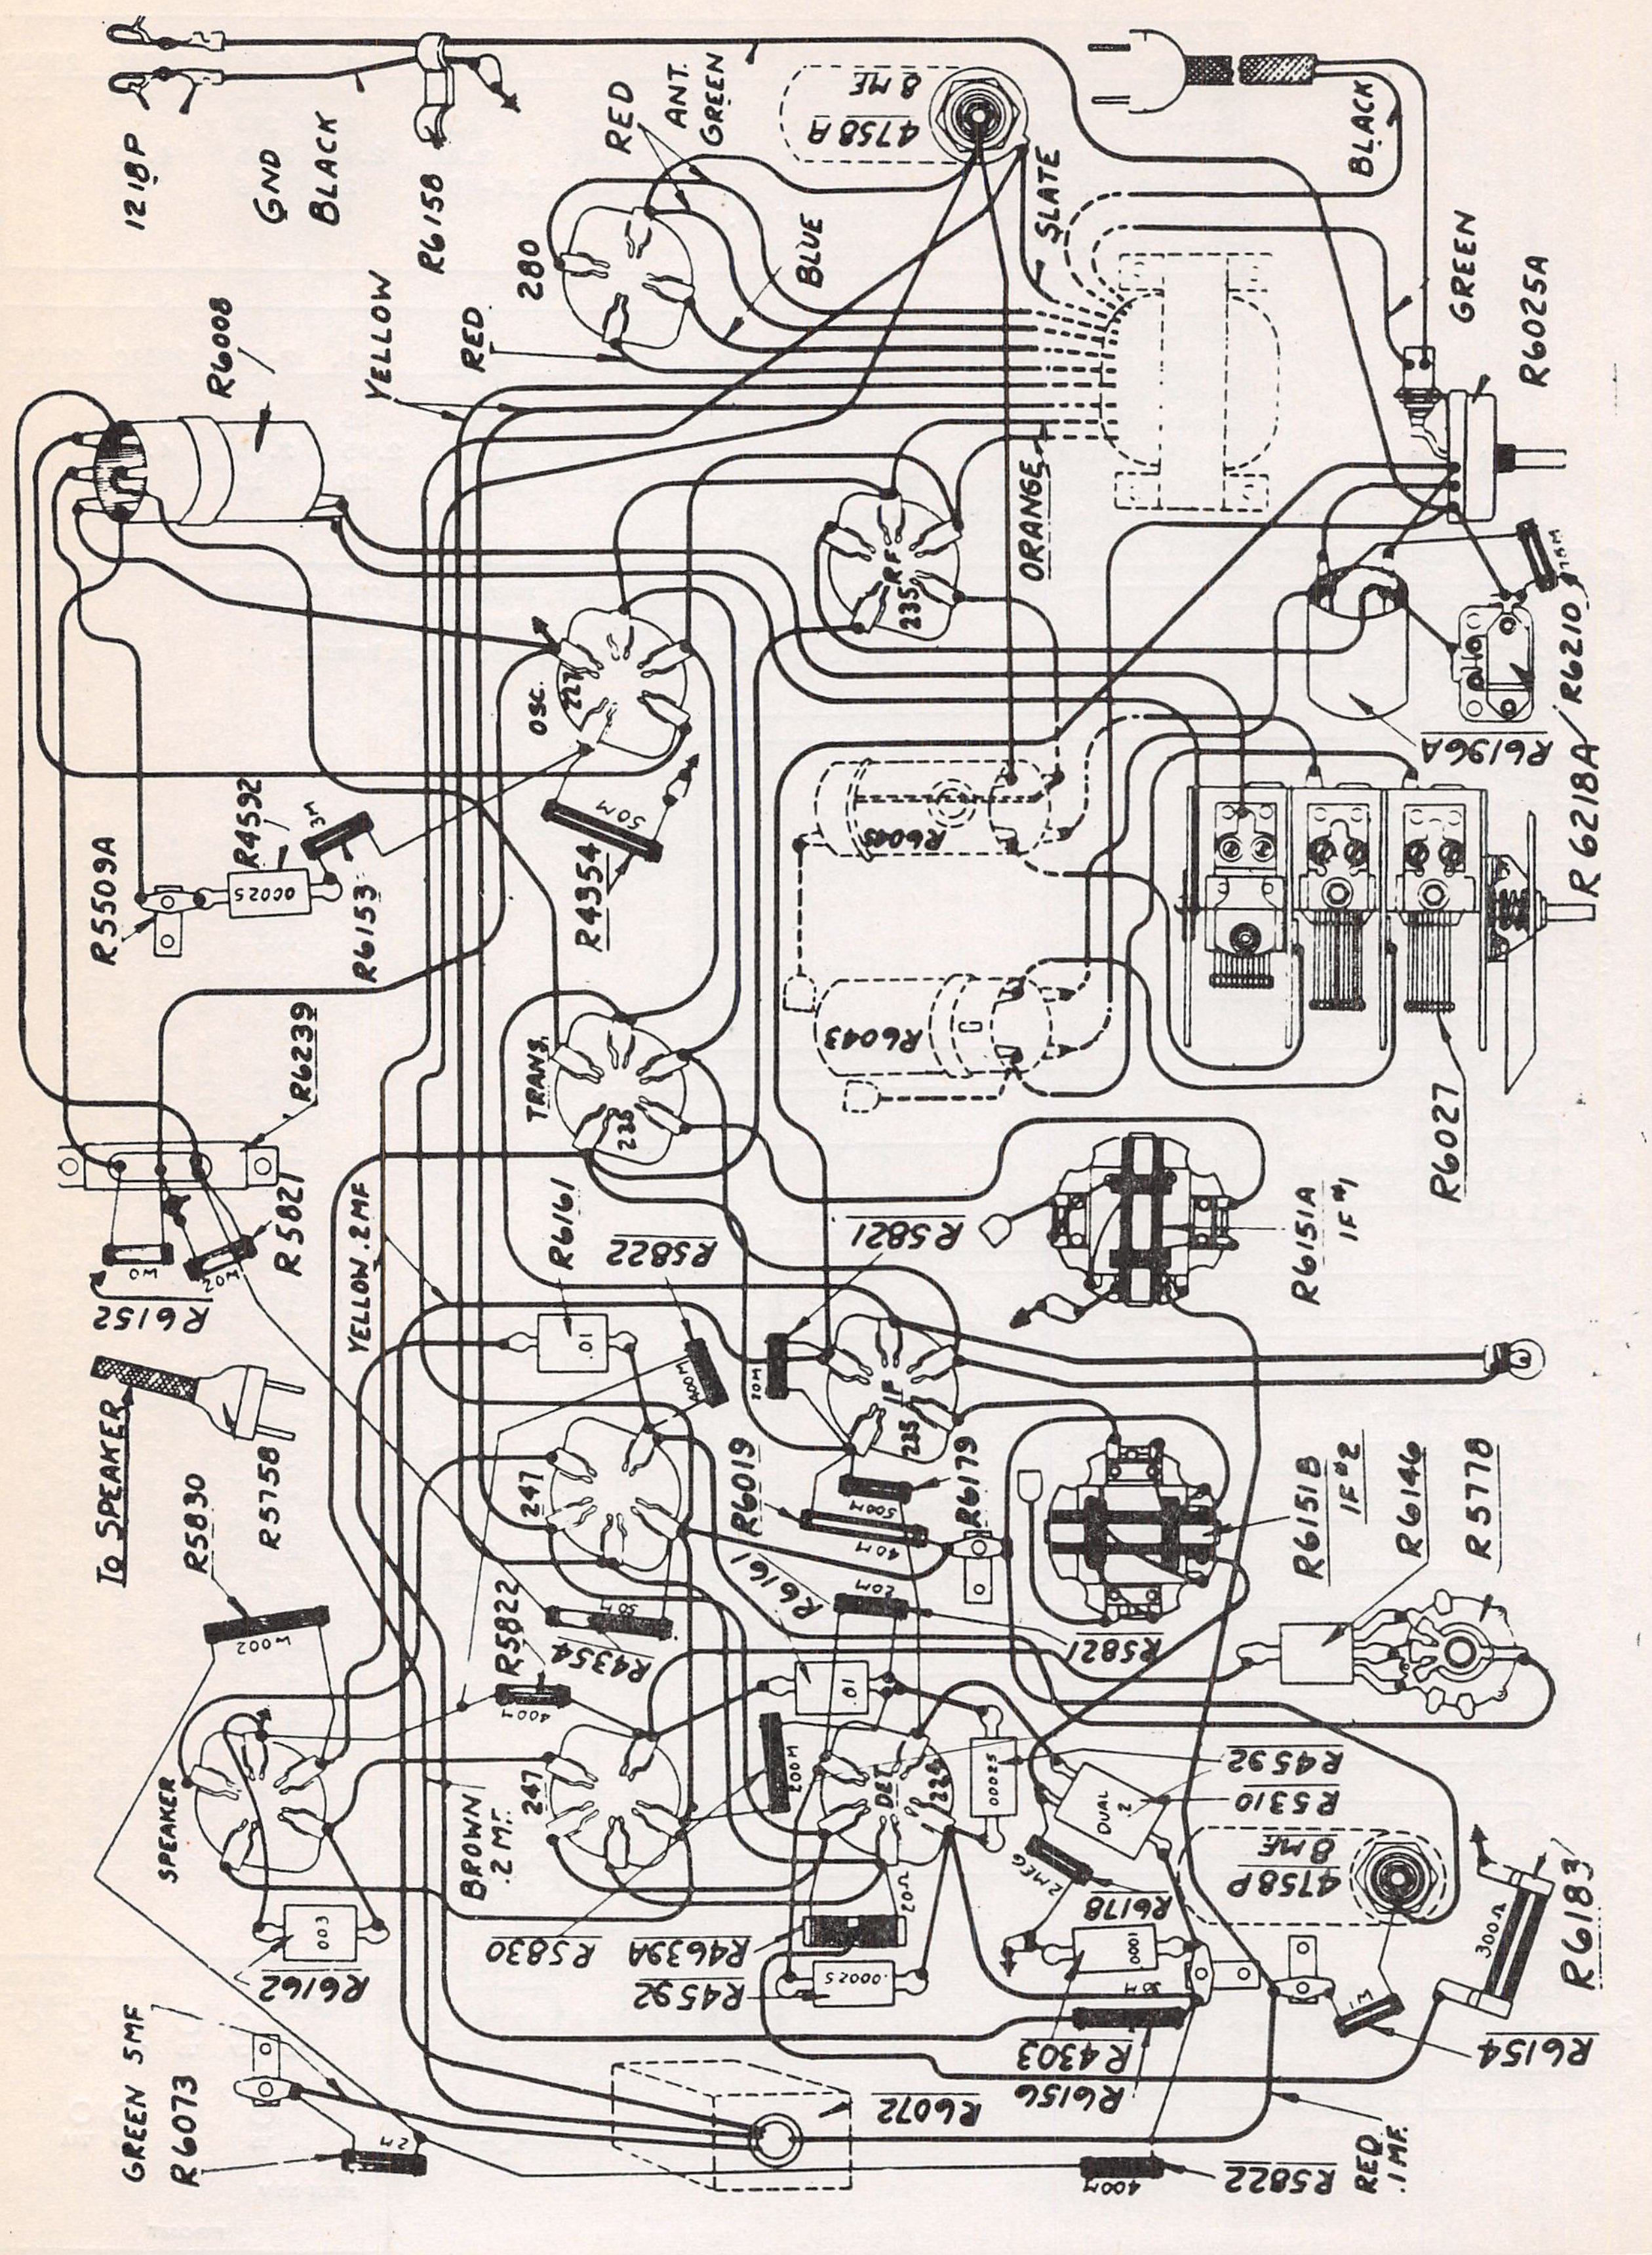
1218P
GND
BLACK
R6158
280
RED
ANT.
GREEN
BLUE
4158A
8MF
SLATE
BLACK
GREEN
R6025A
YELLOW
RED
R6008
ORANGE
R.F.
235
OSC.
227
50M
R4354
R4592
3M
.00025
R5509A
R6153
R6210
7.5M
R6196A
R6218A
R6043
R6043
R6027
TRANS.
238
R6239
R5821
10M
20M
R6152
YELLOW .2MF
R6161
.01
R5822
400M
R5821
R6151A
IF #1
I.F.
235
10M
500M
R6179
R6019
40M
R6161
20M
R5822
R4354
50M
R5821
R6151B
IF #2
R6146
R5770
247
To SPEAKER
R5758
R5830
200M
400M
BROWN .2MF
247
200M
DET
224
.00025
DUAL
.1
R4592
R5310
4158P
8MF
2MEG
R6178
.0001
10M
R6183
300Ω
SPEAKER
.003
R6162
R5830
R4639A
R4592
.00025
10M
R4303
R6154
R6156
R6072
1M
GREEN 5MF
R6073
2M
400M
R5822
RED
.1MF

MODEL 1370

SEARS-ROEBUCK & CO.

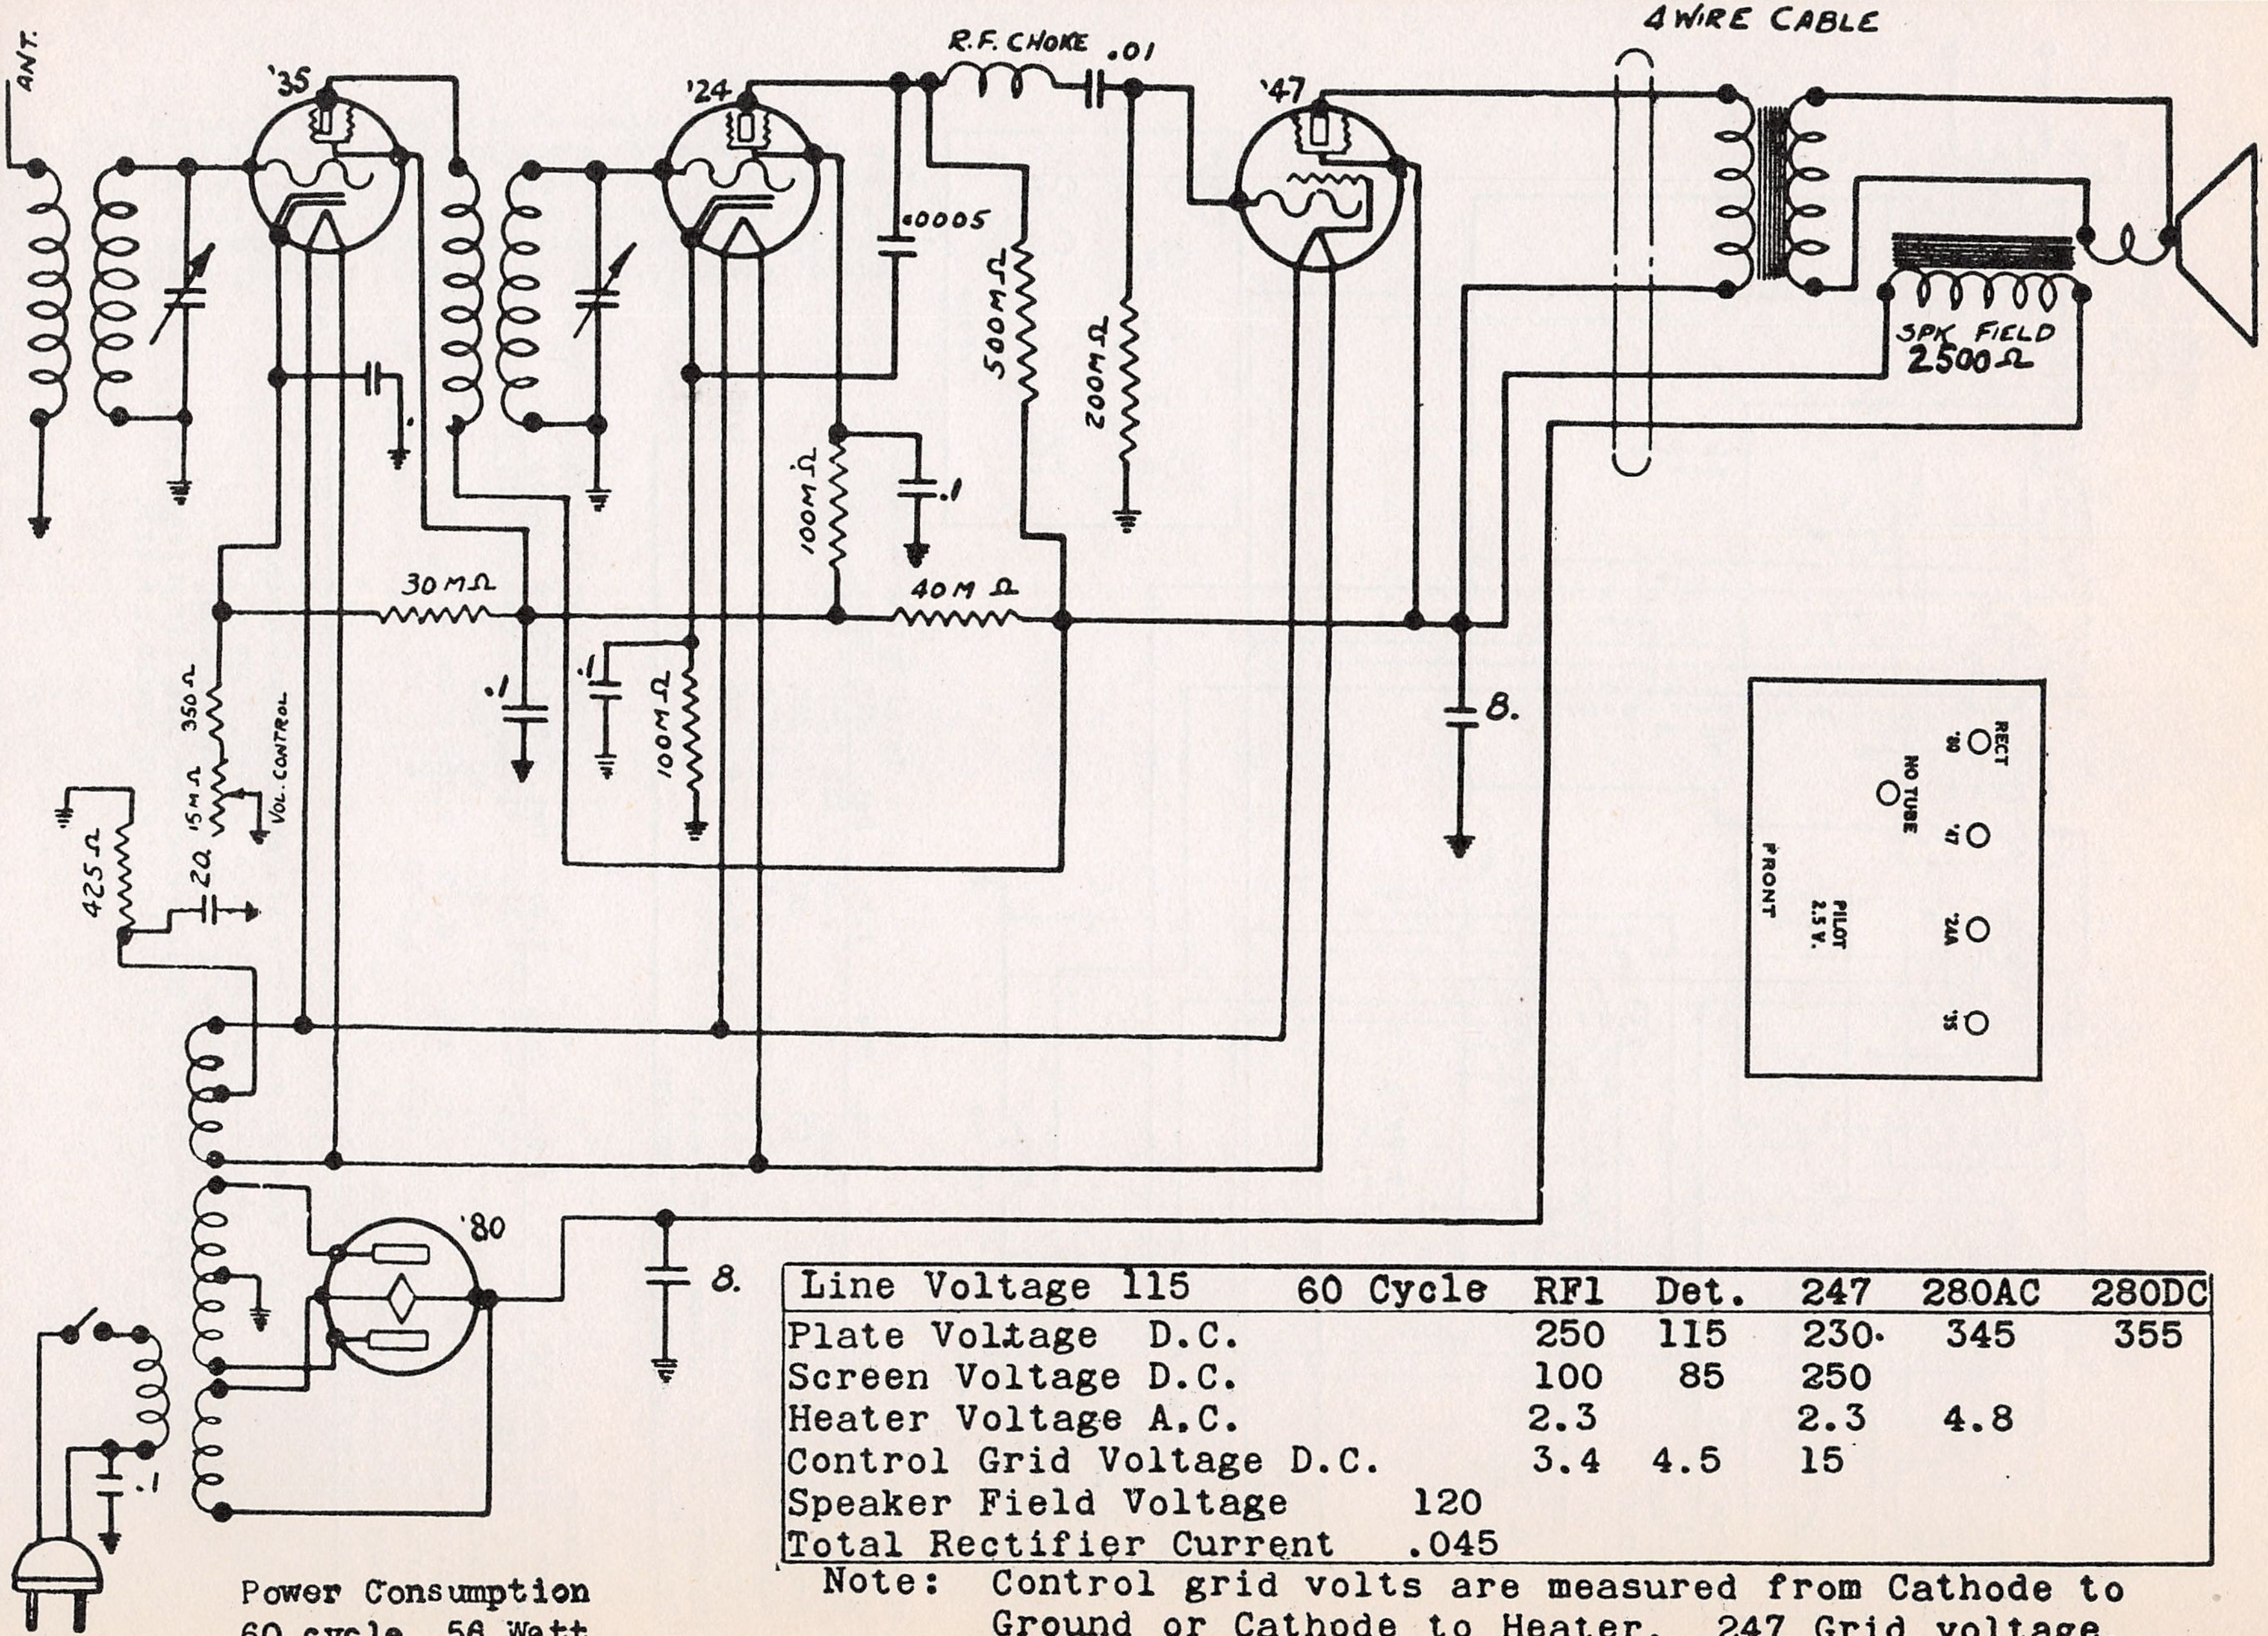
ANT.
'35
'24
'47
'80
R.F. CHOKE
.01
.0005
500MΩ
200MΩ
100MΩ
.1
30MΩ
40MΩ
8.
4 WIRE CABLE
SPK FIELD
2500Ω
350Ω
15MΩ
VOL. CONTROL
20.
425Ω
RECT
'80
NO TUBE
'47
'24A
'35
PILOT
2.5 V.
FRONT

Line Voltage 115	60 Cycle	RF1	Det.	247	280AC	280DC
Plate Voltage D.C.		250	115	230.	345	355
Screen Voltage D.C.		100	85	250		
Heater Voltage A.C.		2.3		2.3	4.8	
Control Grid Voltage D.C.		3.4	4.5	15		
Speaker Field Voltage	120					
Total Rectifier Current	.045					

Note: Control grid volts are measured from Cathode to Ground or Cathode to Heater. 247 Grid voltage, from Filament to Ground. Volume control at minimum.

Power Consumption
60 cycle 56 Watt

MODEL 1390, 1400, 1402, 1404, 1406

SEARS-ROEBUCK & CO.

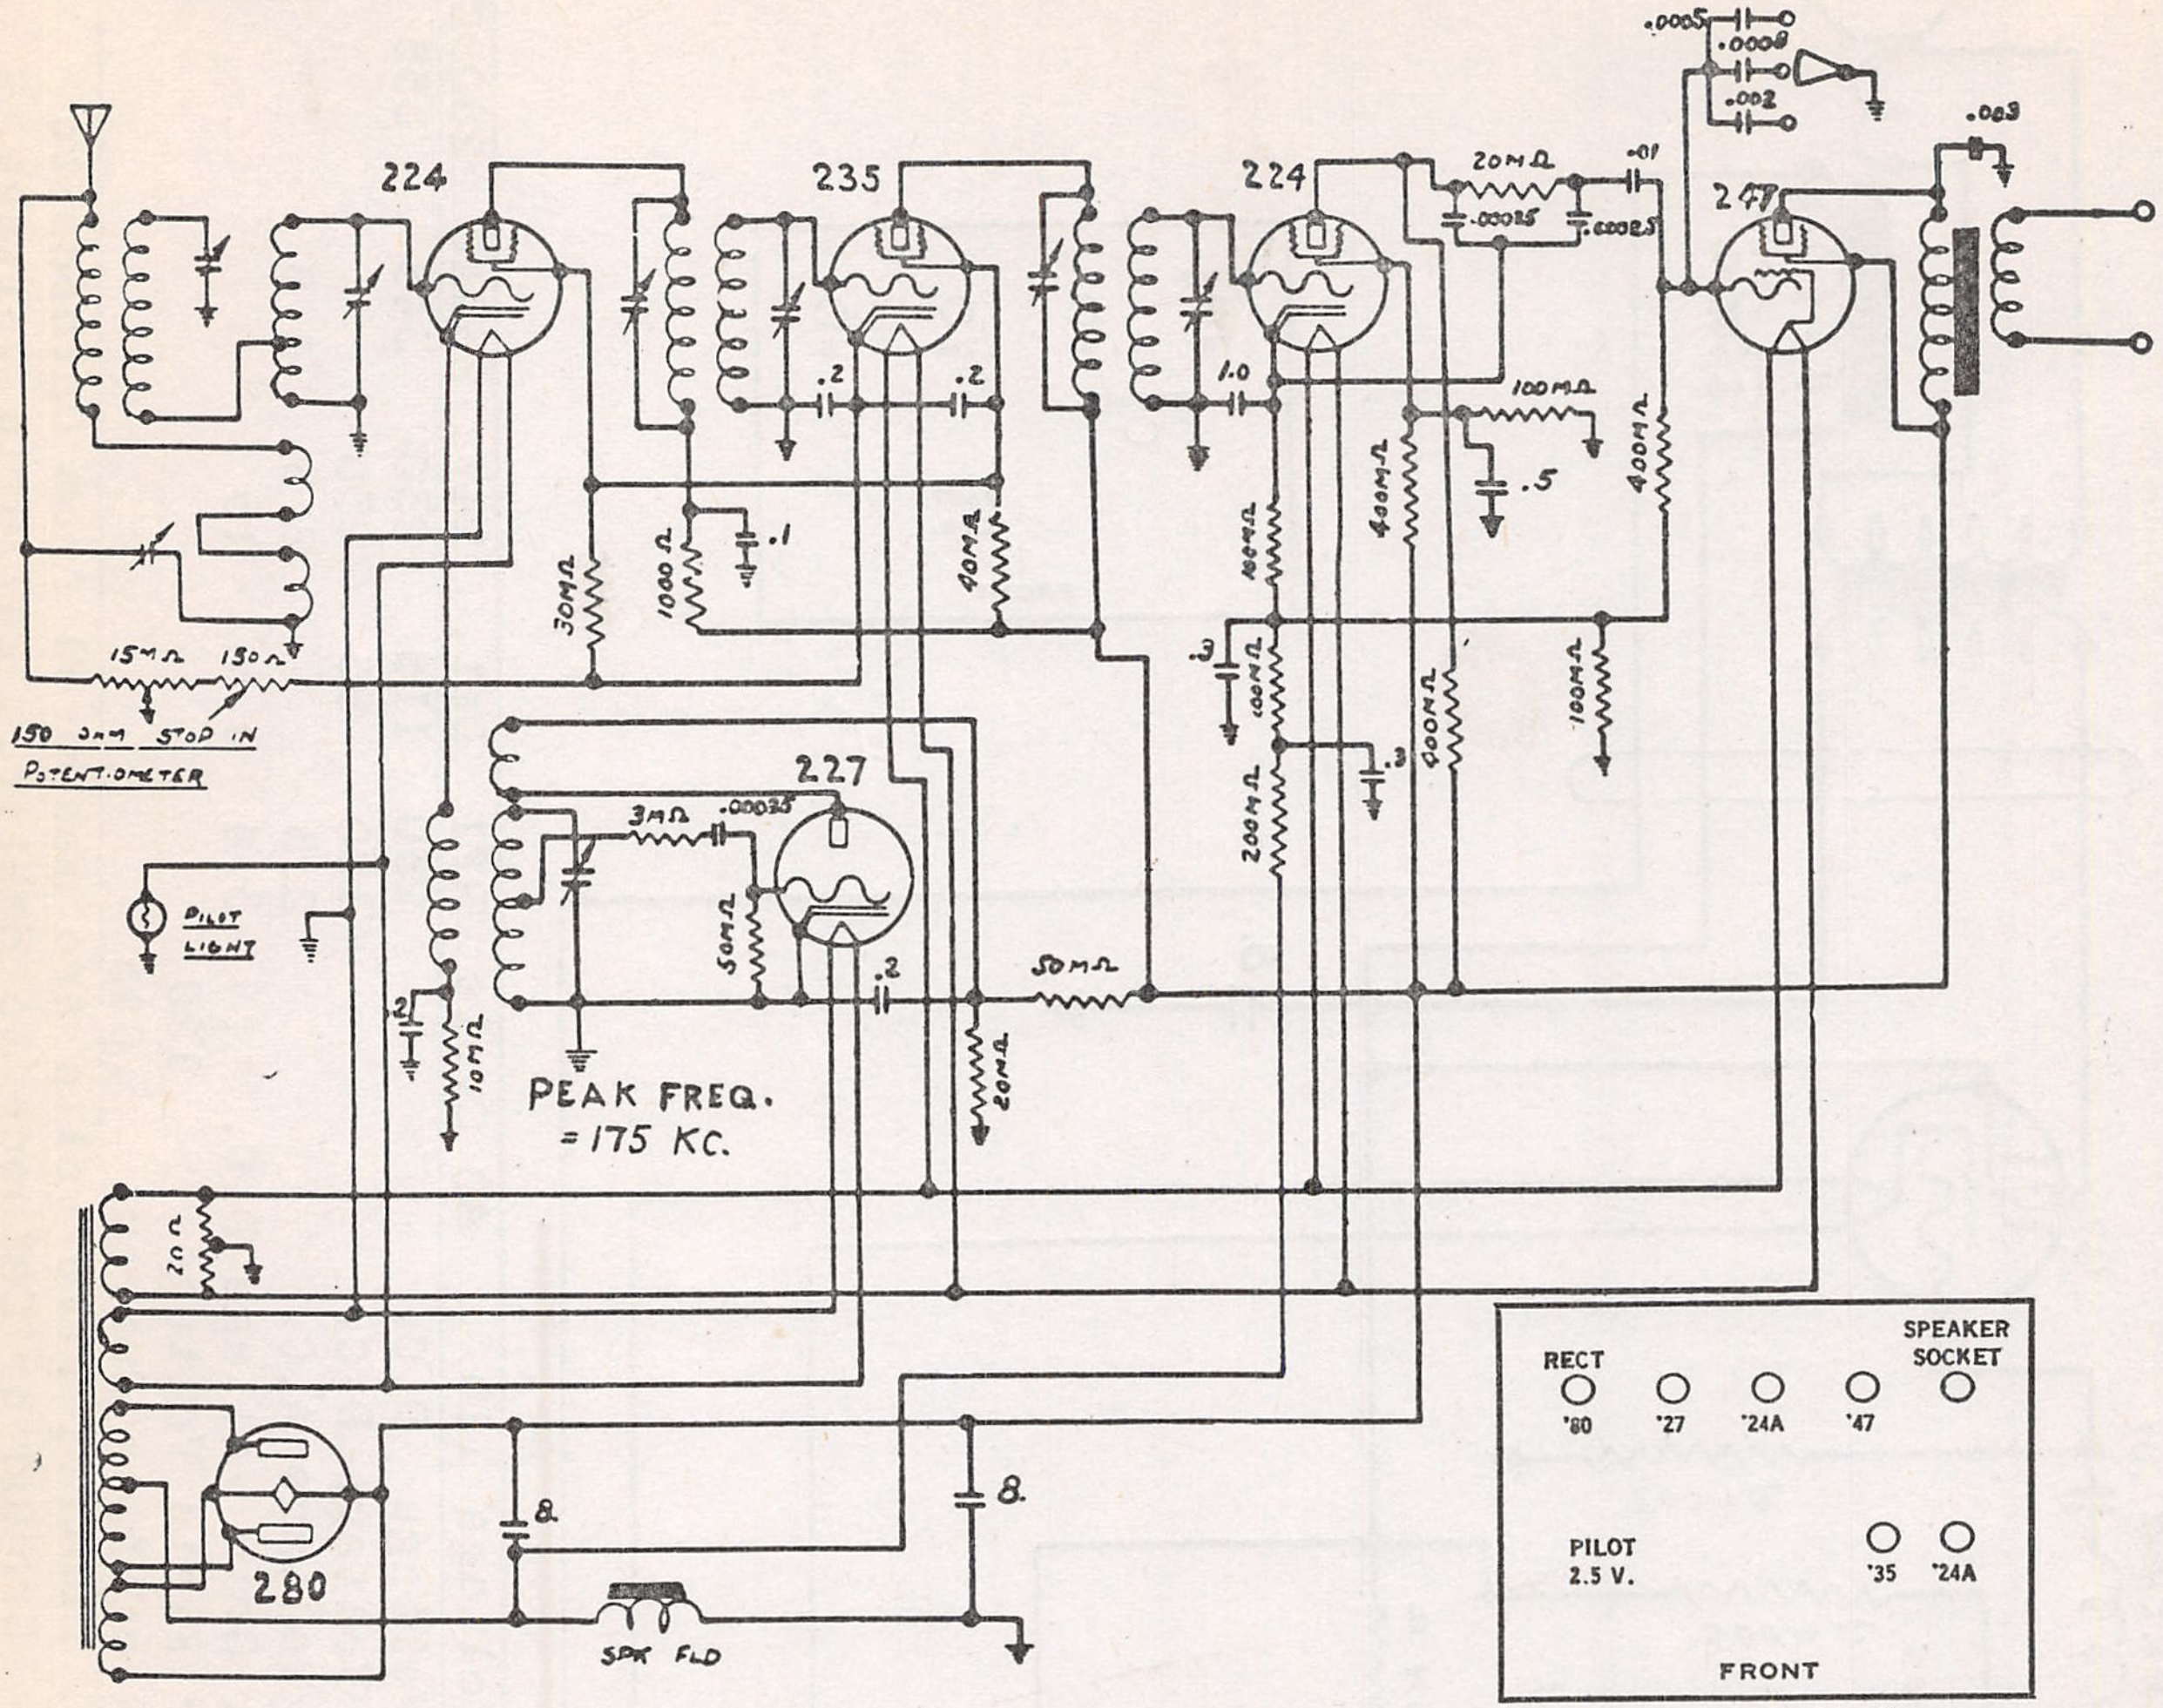
224
235
224
247
227
280
.0005
.0008
.002
.003
20MΩ
.01
.00025
.00025
.2
.2
1.0
.1
30MΩ
1000Ω
40MΩ
100MΩ
.5
100MΩ
400MΩ
400MΩ
.3
100MΩ
100MΩ
.3
200MΩ
500MΩ
15MΩ
150Ω
150 OHM STOP IN POTENTIOMETER
3MΩ
.00025
50MΩ
.2
50MΩ
20MΩ
.2
10MΩ
PILOT LIGHT
PEAK FREQ. = 175 KC.
20Ω
8.
8.
SPK FLD
RECT
'80
'27
'24A
'47
SPEAKER SOCKET
PILOT 2.5 V.
'35
'24A
FRONT

60 Cycle
Line Voltage - 115
Total Watts - 66

	Tran.	Osc.	I.F.	Det.	247	280AC	280DC
Plate Voltage DC	230	40	240	120	240	350	370
Screen Voltage DC	80		80	40	245		
Heater Voltage AC	2.4	2.4	2.4	2.4	2.4	4.8	
Control Grid Voltage DC	10		1.5-30	4	15		
Speaker Field Voltage	125 volts						
Total Plate Current	.050 amperes						

25 Cycle
Line Voltage- 115
Total Watts - 70

	Tran.	Osc.	I.F.	Det.	247	280AC	280DC
Plate Voltage DC	225	45	240	125	235	345	360
Screen Voltage DC	80		80	40	240		
Heater Voltage AC	2.5	2.5	2.35	2.35	2.35	4.75	
Control Grid Voltage DC	10		1.5-30	4	15		
Speaker Field Voltage	120 volts						
Total Plate Current	.050 amperes						

Note: Control grid volts are measured from cathode to ground or cathode to heater. 247 grid voltage from grid to ground or filament.

The 25 cycle models of this receiver are identical in electrical characteristics to the 60 cycle models.

Note-The term Tran. (translator) refers to what is commonly called the first detector. IF transformer aligning screws are accessible through two holes in the base under each IF transformer. A variation voltage of about 20 percent can be allowed for in the voltage chart.

SEARS-ROEBUCK & CO.

MODEL 1430
Parts-Voltage

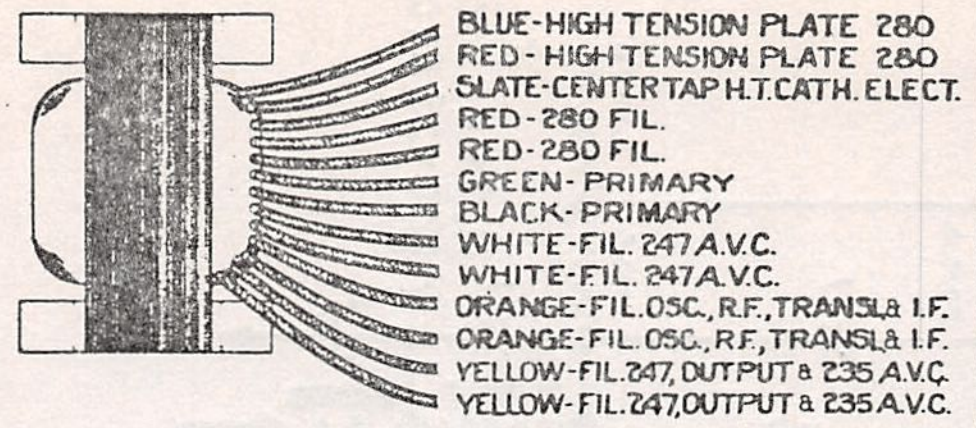
BLUE-HIGH TENSION PLATE 280
RED-HIGH TENSION PLATE 280
SLATE-CENTER TAP H.T. CATH. ELECT.
RED-280 FIL.
RED-280 FIL.
GREEN-PRIMARY
BLACK-PRIMARY
WHITE-FIL. 247 A.V.C.
WHITE-FIL. 247 A.V.C.
ORANGE-FIL. OSC., R.F., TRANSL & I.F.
ORANGE-FIL. OSC., R.F., TRANSL & I.F.
YELLOW-FIL. 247, OUTPUT & 235 A.V.C.
YELLOW-FIL. 247, OUTPUT & 235 A.V.C.

POWER TRANSFORMER
R 6248 A - 60~
R 6249 A - 25~

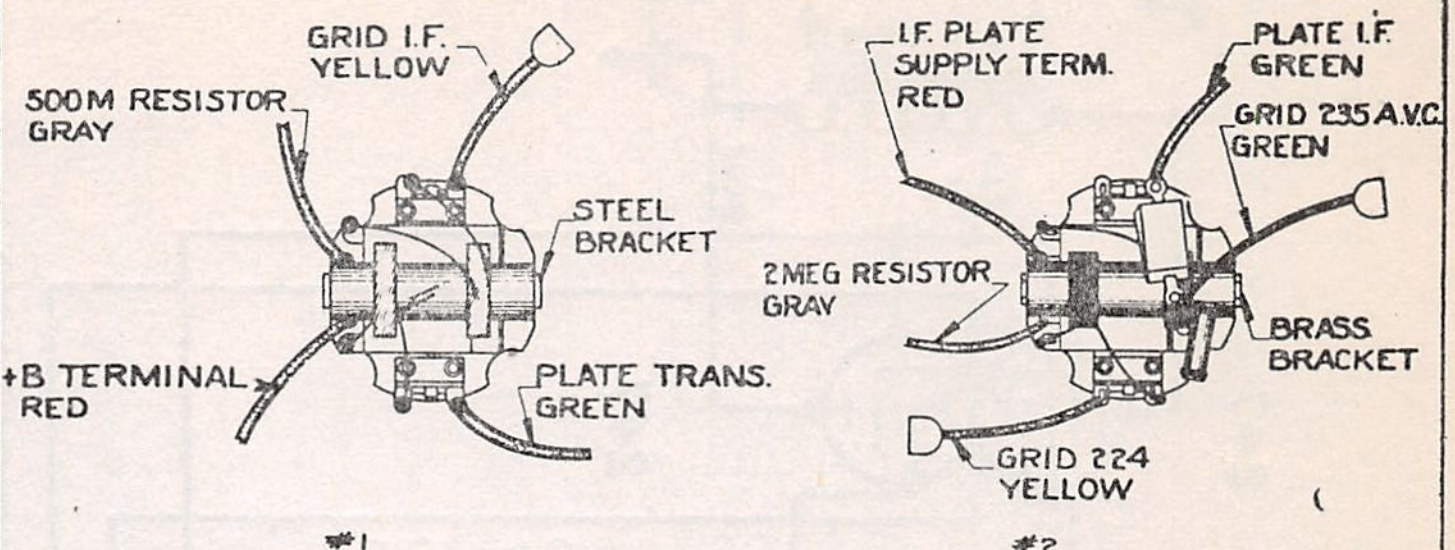
GRID I.F. YELLOW
500 M RESISTOR GRAY
STEEL BRACKET
+B TERMINAL RED
PLATE TRANS. GREEN
I.F. PLATE SUPPLY TERM. RED
PLATE I.F. GREEN
GRID 235 A.V.C. GREEN
2 MEG RESISTOR GRAY
BRASS BRACKET
GRID 224 YELLOW

#1 R 6151 C

#2 R 6327 A

ASSEM. I.F. TRANS & I.F. TUNING CONDENSERS

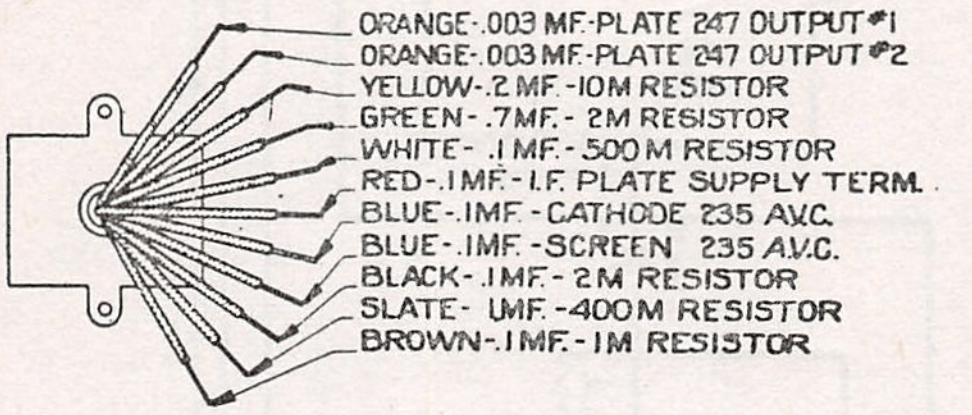
ORANGE-.003 MF.-PLATE 247 OUTPUT #1
ORANGE-.003 MF.-PLATE 247 OUTPUT #2
YELLOW-.2 MF.-10 M RESISTOR
GREEN-.7 MF.-2 M RESISTOR
WHITE-.1 MF.-500 M RESISTOR
RED-.1 MF.-I.F. PLATE SUPPLY TERM.
BLUE-.1 MF.-CATHODE 235 A.V.C.
BLUE-.1 MF.-SCREEN 235 A.V.C.
BLACK-.1 MF.-2 M RESISTOR
SLATE-1 MF.-400 M RESISTOR
BROWN-.1 MF.-1 M RESISTOR

FILTER CONDENSER-R 6238

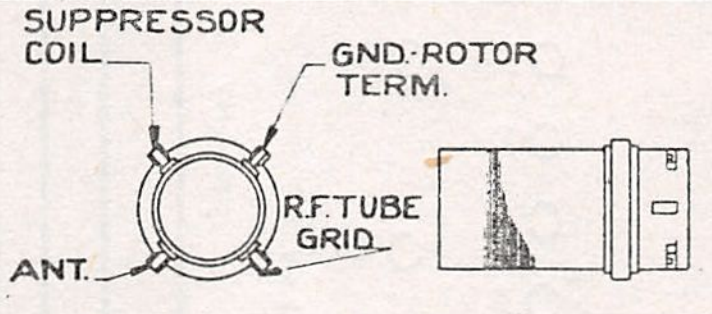
SUPPRESSOR COIL
GND. ROTOR TERM.
R.F. TUBE GRID
ANT.

ANTENNA COIL R 6043

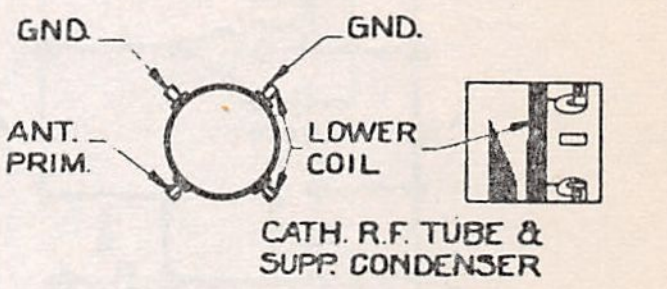
GND.
GND.
ANT. PRIM.
LOWER COIL
CATH. R.F. TUBE & SUPP. CONDENSER

SUPPRESSOR COIL R 6196 A

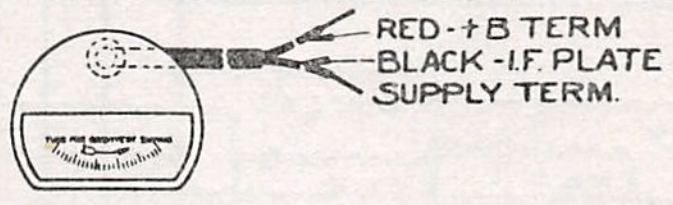
RED-+B TERM
BLACK-I.F. PLATE SUPPLY TERM.

TUNING METER
R 6241

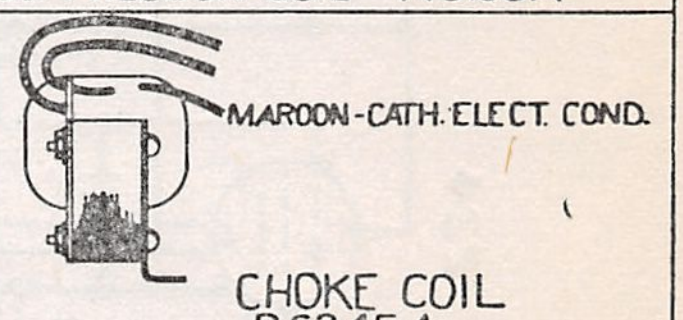
MAROON-CATH. ELECT. COND.

CHOKE COIL
R 6245 A

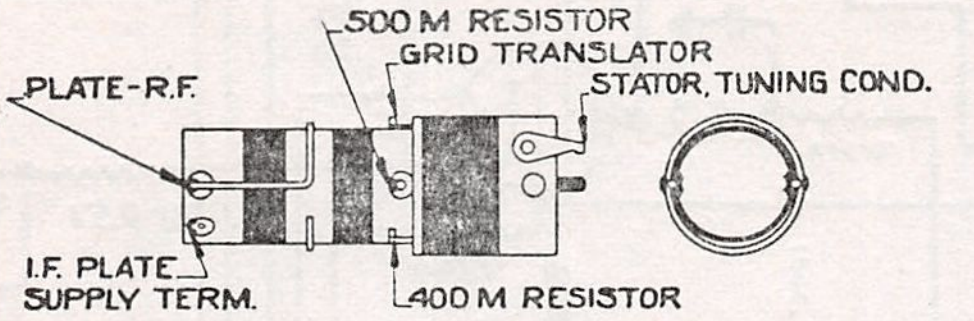
500 M RESISTOR
GRID TRANSLATOR
STATOR, TUNING COND.
PLATE-R.F.
I.F. PLATE SUPPLY TERM.
400 M RESISTOR

TRANSLATOR COIL R 6252 B

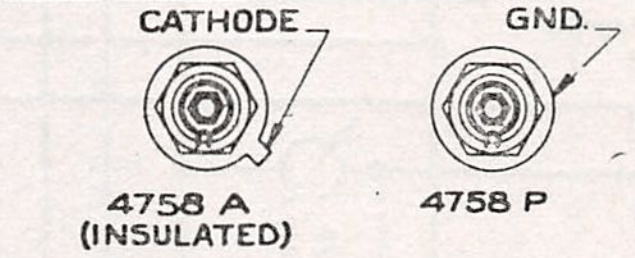
CATHODE
GND.
4758 A (INSULATED)
4758 P

ELECTROLYTIC CONDENSERS

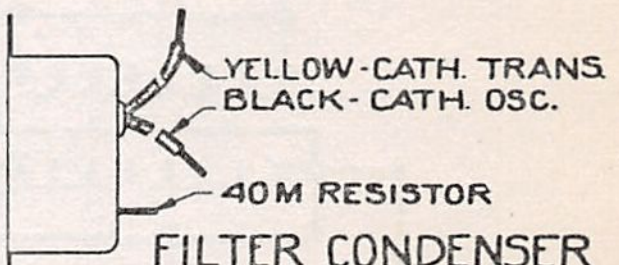
YELLOW-CATH. TRANS.
BLACK-CATH. OSC.
40 M RESISTOR

FILTER CONDENSER
R 6239

LEAD DETAILS OF POWER TRANSFORMER-I.F. TRANS.-I.F. TUNING COND.-FILTER COND.-ELECTROLYTIC COND.-ANTENNA, SUPPRESSOR, TRANSLATOR AND CHOKE COILS - TUNING METER.

MODEL 1430 - 60 CYCLE
Line Voltage 115
Total Watts 100

	Trans	Osc.	IF	RF	Det	#1 247 Output	#2 247 Output	AVC Amp 235	AVC 247	280 AC	280 DC
Plate Voltage	230	20	230	230	160	230	230	230		340	340
Screen Voltage	70		70	70	25	230	230	70	100		
Grid Voltage	var		var.	var.	20	15	15	var.	18		
Filament Voltage	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	4.85		

Speaker Field Voltage - 110
Total Plate Current - 80 ma.

Note: All voltages measured with a 1000 ohm per volt meter, 250 volt scale, with volume level control at maximum. 247 output grid voltages were measured from filament to ground, and translator grid from cathode to ground. Grid voltages on the RF and IF will be variable when the set is operating. AVC plate voltages will be the grid voltages on RF IF and translator tubes.

Notes-Causes of no signals can be traced to some of the following reasons. Grid clips shorted to tops of tube shields. Open or shorted condensers. Unsoldered leads. Solder under tube socket terminals. Defective tubes. Oscillator not working. Open image suppressor coil. Defective speaker or shorted tone control connection. Poor quality can be traced to defective output or detector tubes. Set not tuned properly. A poor 235 in the IF, RF or translator sockets will give poor quality and unsatisfactory volume control. Shorted or open grid coupling condenser in the audio circuit, or open resistors in the audio circuits will also contribute to poor quality.
Oscillation can be traced to defective tubes, grid leads of detector and IF too close, or an open condenser in the plate circuit of the translator.

MODEL 1430
Schematic

SEARS-ROEBUCK & CO.

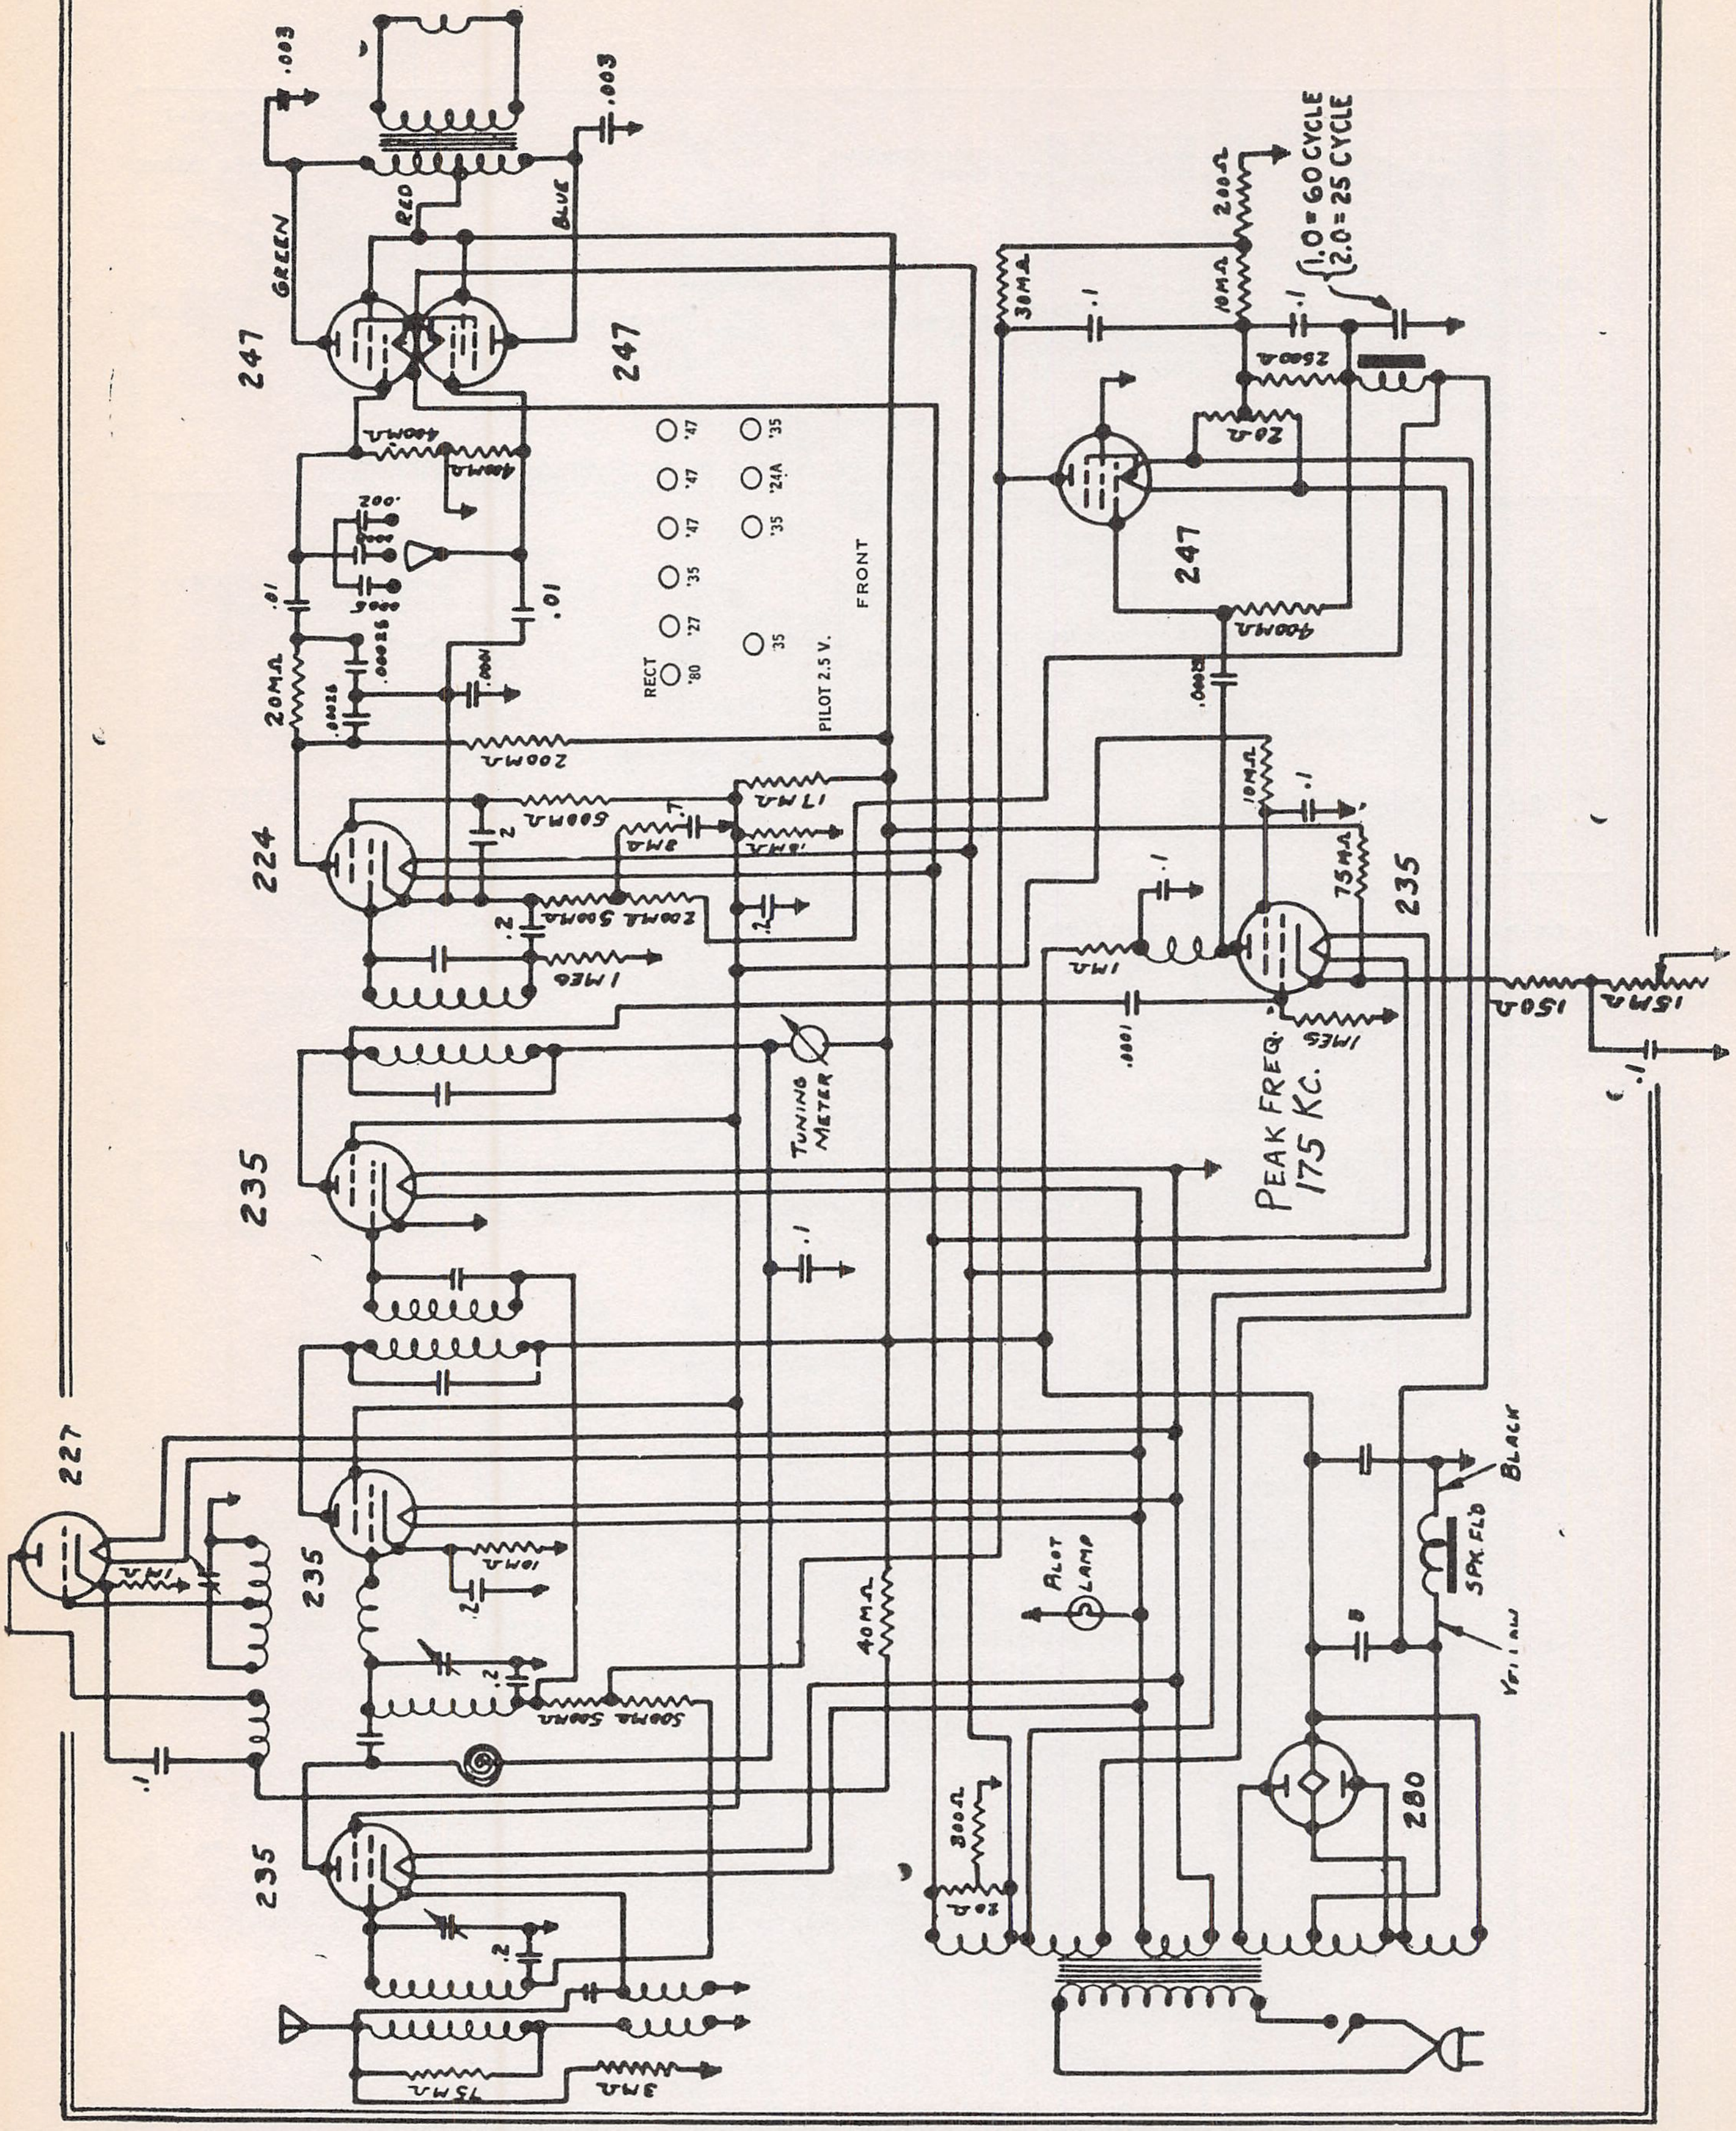
247
247
247
224
235
235
235
235
227
280
.003
.003
GREEN
RED
BLUE
400MΩ
400MΩ
.0002
.00025
.01
.01
20MΩ
.00025
.0001
200MΩ
500MΩ
.2
3MΩ
.1
1.7MΩ
.18MΩ
200MΩ
500MΩ
.2
1MEG
RECT
'80
'27
'35
'47
'47
'47
'35
'24A
'35
'35
PILOT 2.5 V.
FRONT
TUNING METER
.1
30MΩ
.1
200Ω
10MΩ
.1
1.0=60 CYCLE
2.0=25 CYCLE
2500Ω
20Ω
400MΩ
.0002
10MΩ
.1
75MΩ
1MΩ
.1
.0001
1MEG
PEAK FREQ. 175 KC.
150Ω
15MΩ
.1
BLACK
SPK. FLD
YELLOW
8
40MΩ
PILOT LAMP
300Ω
20Ω
1MΩ
10MΩ
.2
.2
500MΩ
500MΩ
.1
15MΩ
3MΩ

MODEL Silvertone 218

SEARS-ROEBUCK & CO.

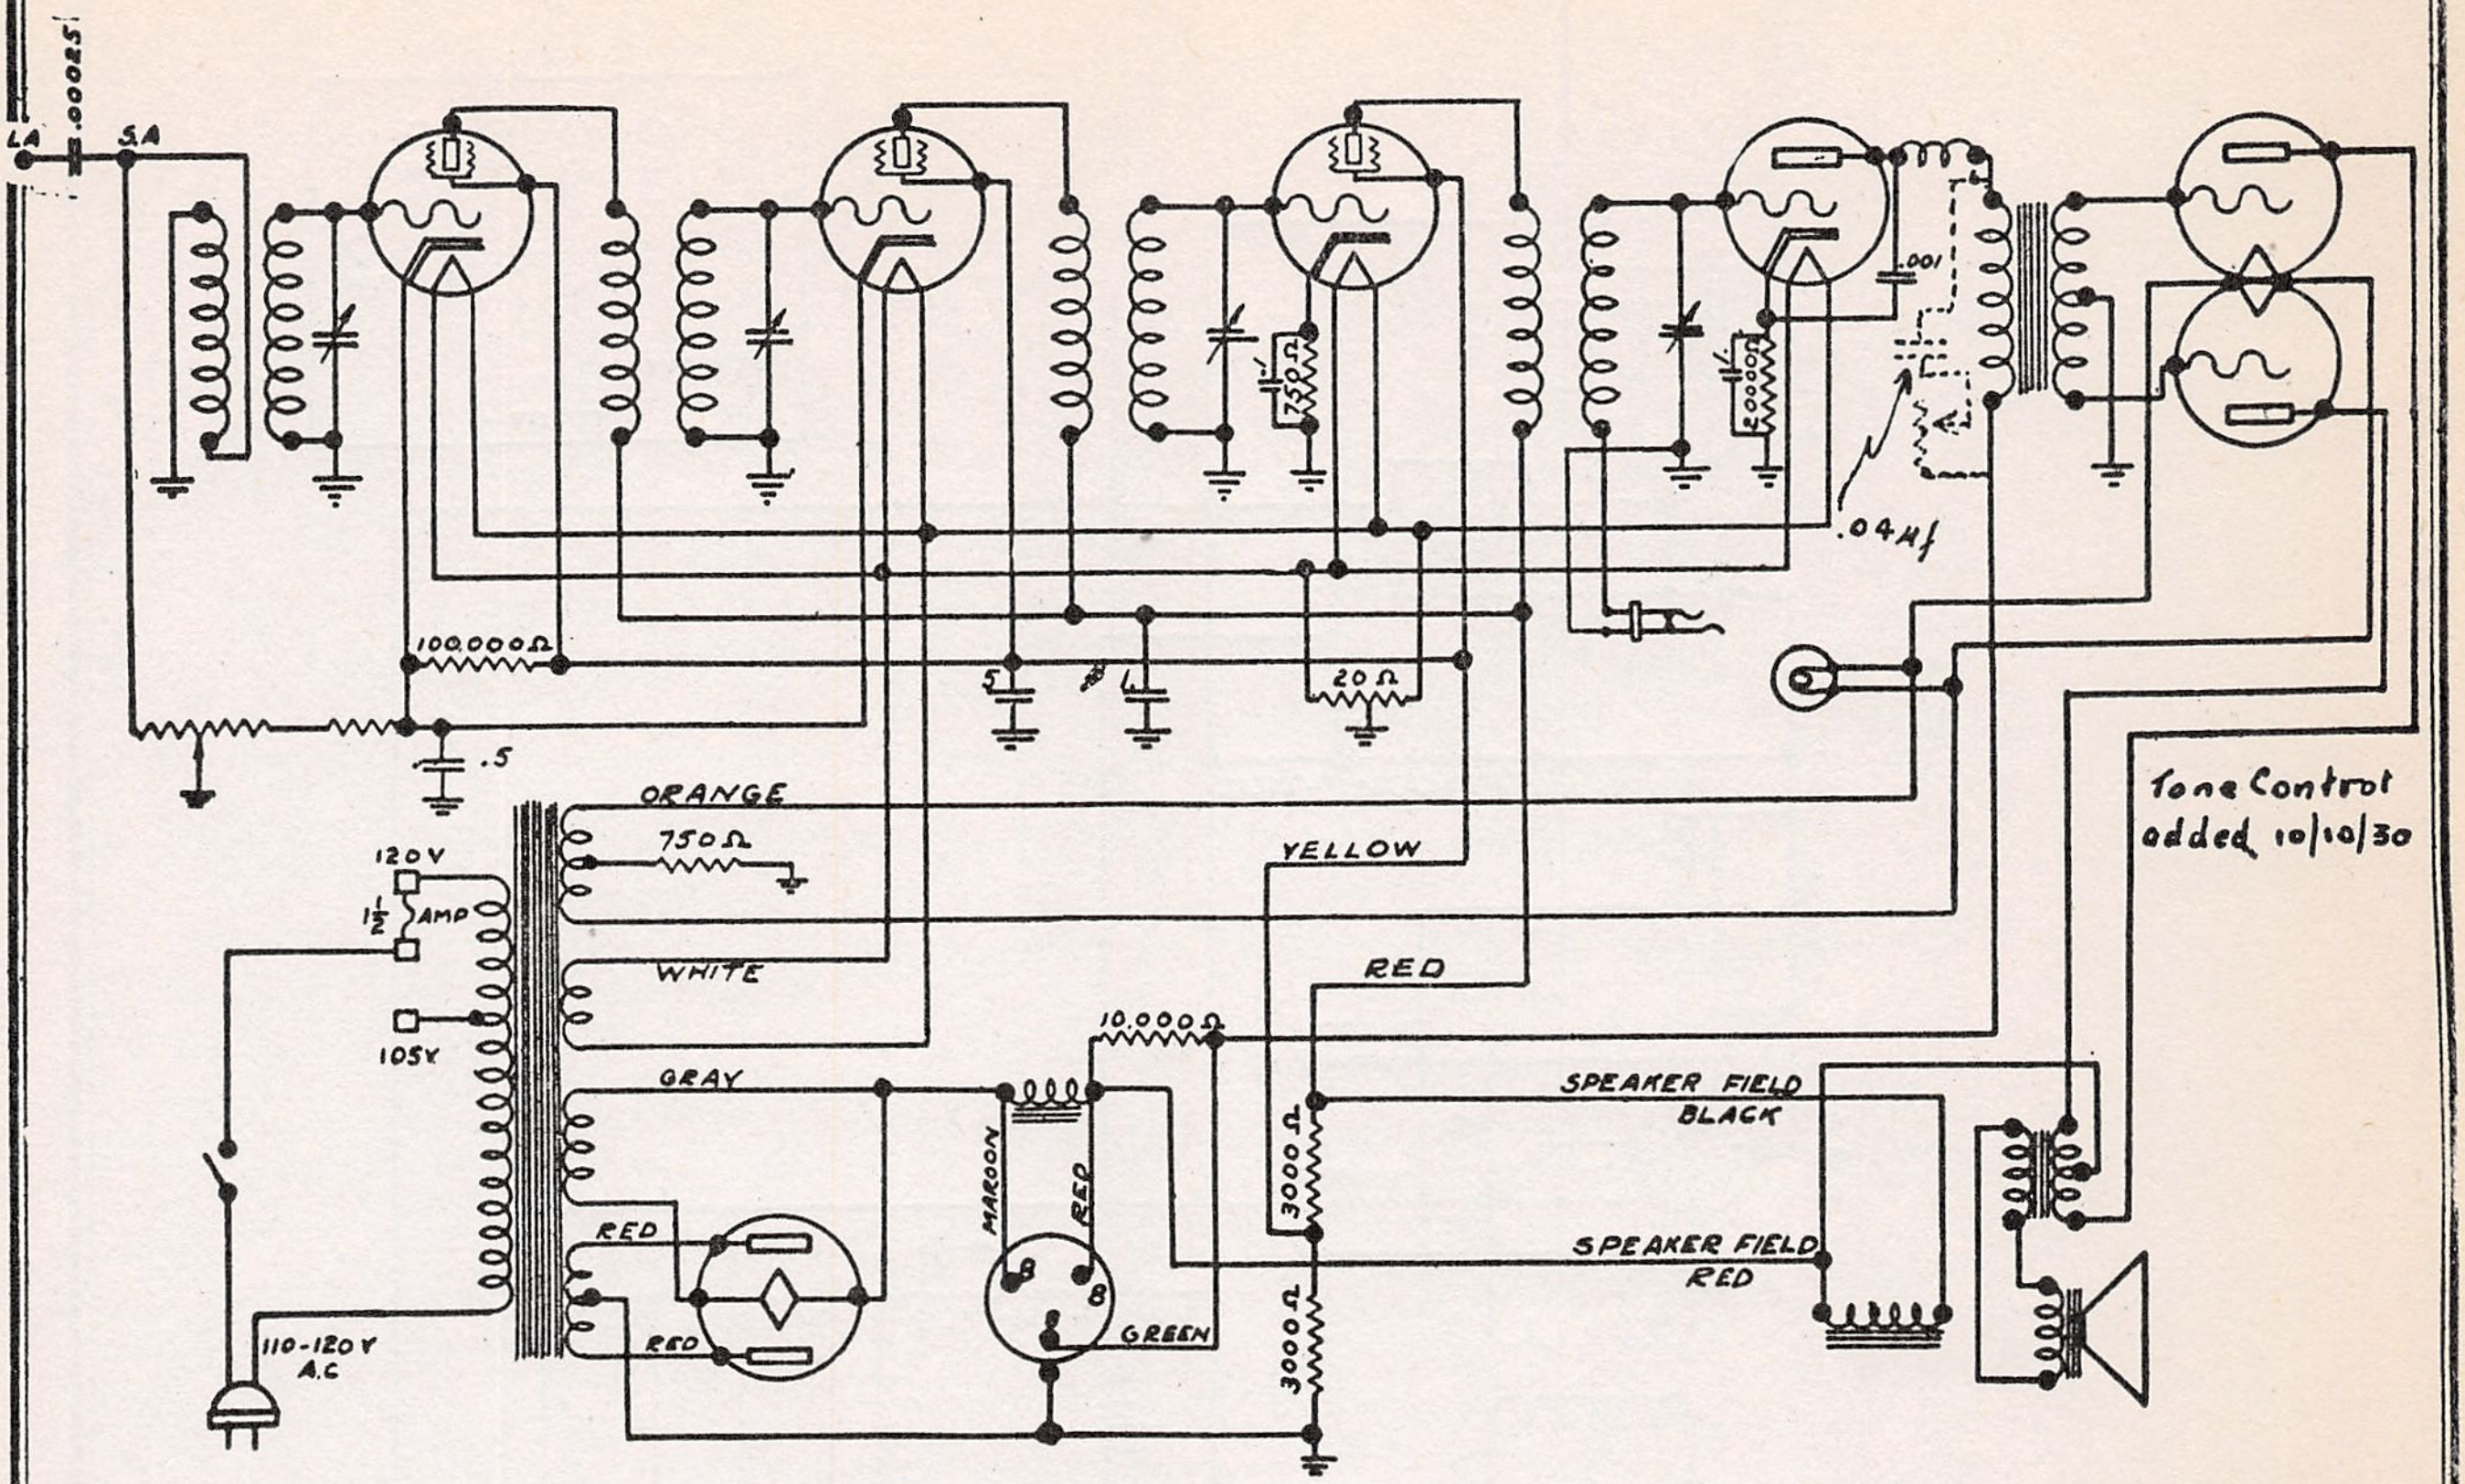
L.A
.00025
S.A
100,000Ω
.5
5
4
20Ω
.001
.04 Mf
ORANGE
750Ω
120V
1½ AMP
105V
YELLOW
WHITE
RED
GRAY
10,000Ω
MAROON
RED
B
B
GREEN
3000Ω
3000Ω
SPEAKER FIELD BLACK
SPEAKER FIELD RED
RED
RED
110-120V A.C

Tone Control added 10/10/30

READINGS WITH PLUG IN SET SOCKET AND TUBE IN TESTER SOCKET

Tube No. in Order	Position of Tube	Type of Tube	A Volts	B Volts	C Volts	Cathode	Plate M.A.	Screen Grid Volts
1	1st R.F.	224	2.4	178	3.4	3.4	3.5	85
2	2nd R.F.	224	2.4	178	3.4	3.4	3.5	85
3	3rd R.F.	224	2.4	178	3.4	3.4	3.5	85
4	DET.	227	2.4	240	23.	2.5	1.1	
5	Push-Pull	245	2.4	235	45		27	
6	Push-Pull	245	2.4	235	45		27	
7	RECT.	280	5.	310				

Line Voltage 120 Set On 120 Volt Tap Volume Control FULL ON

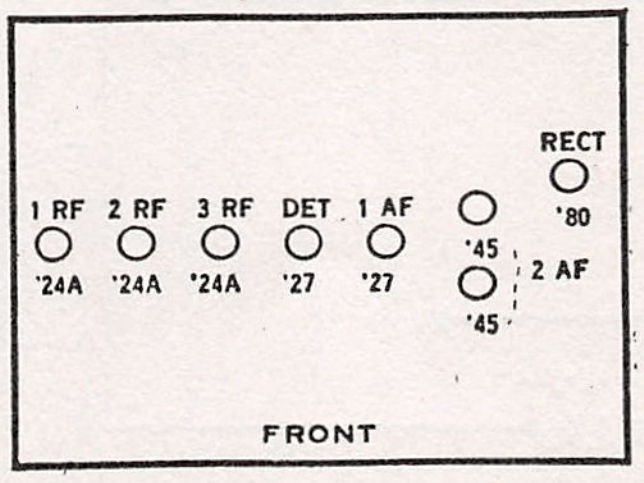
1 RF
'24A
2 RF
'24A
3 RF
'24A
DET
'27
1 AF
'27
'45
'45
2 AF
RECT
'80
FRONT

MODEL 1462
Schematic

SEARS-ROEBUCK & CO.

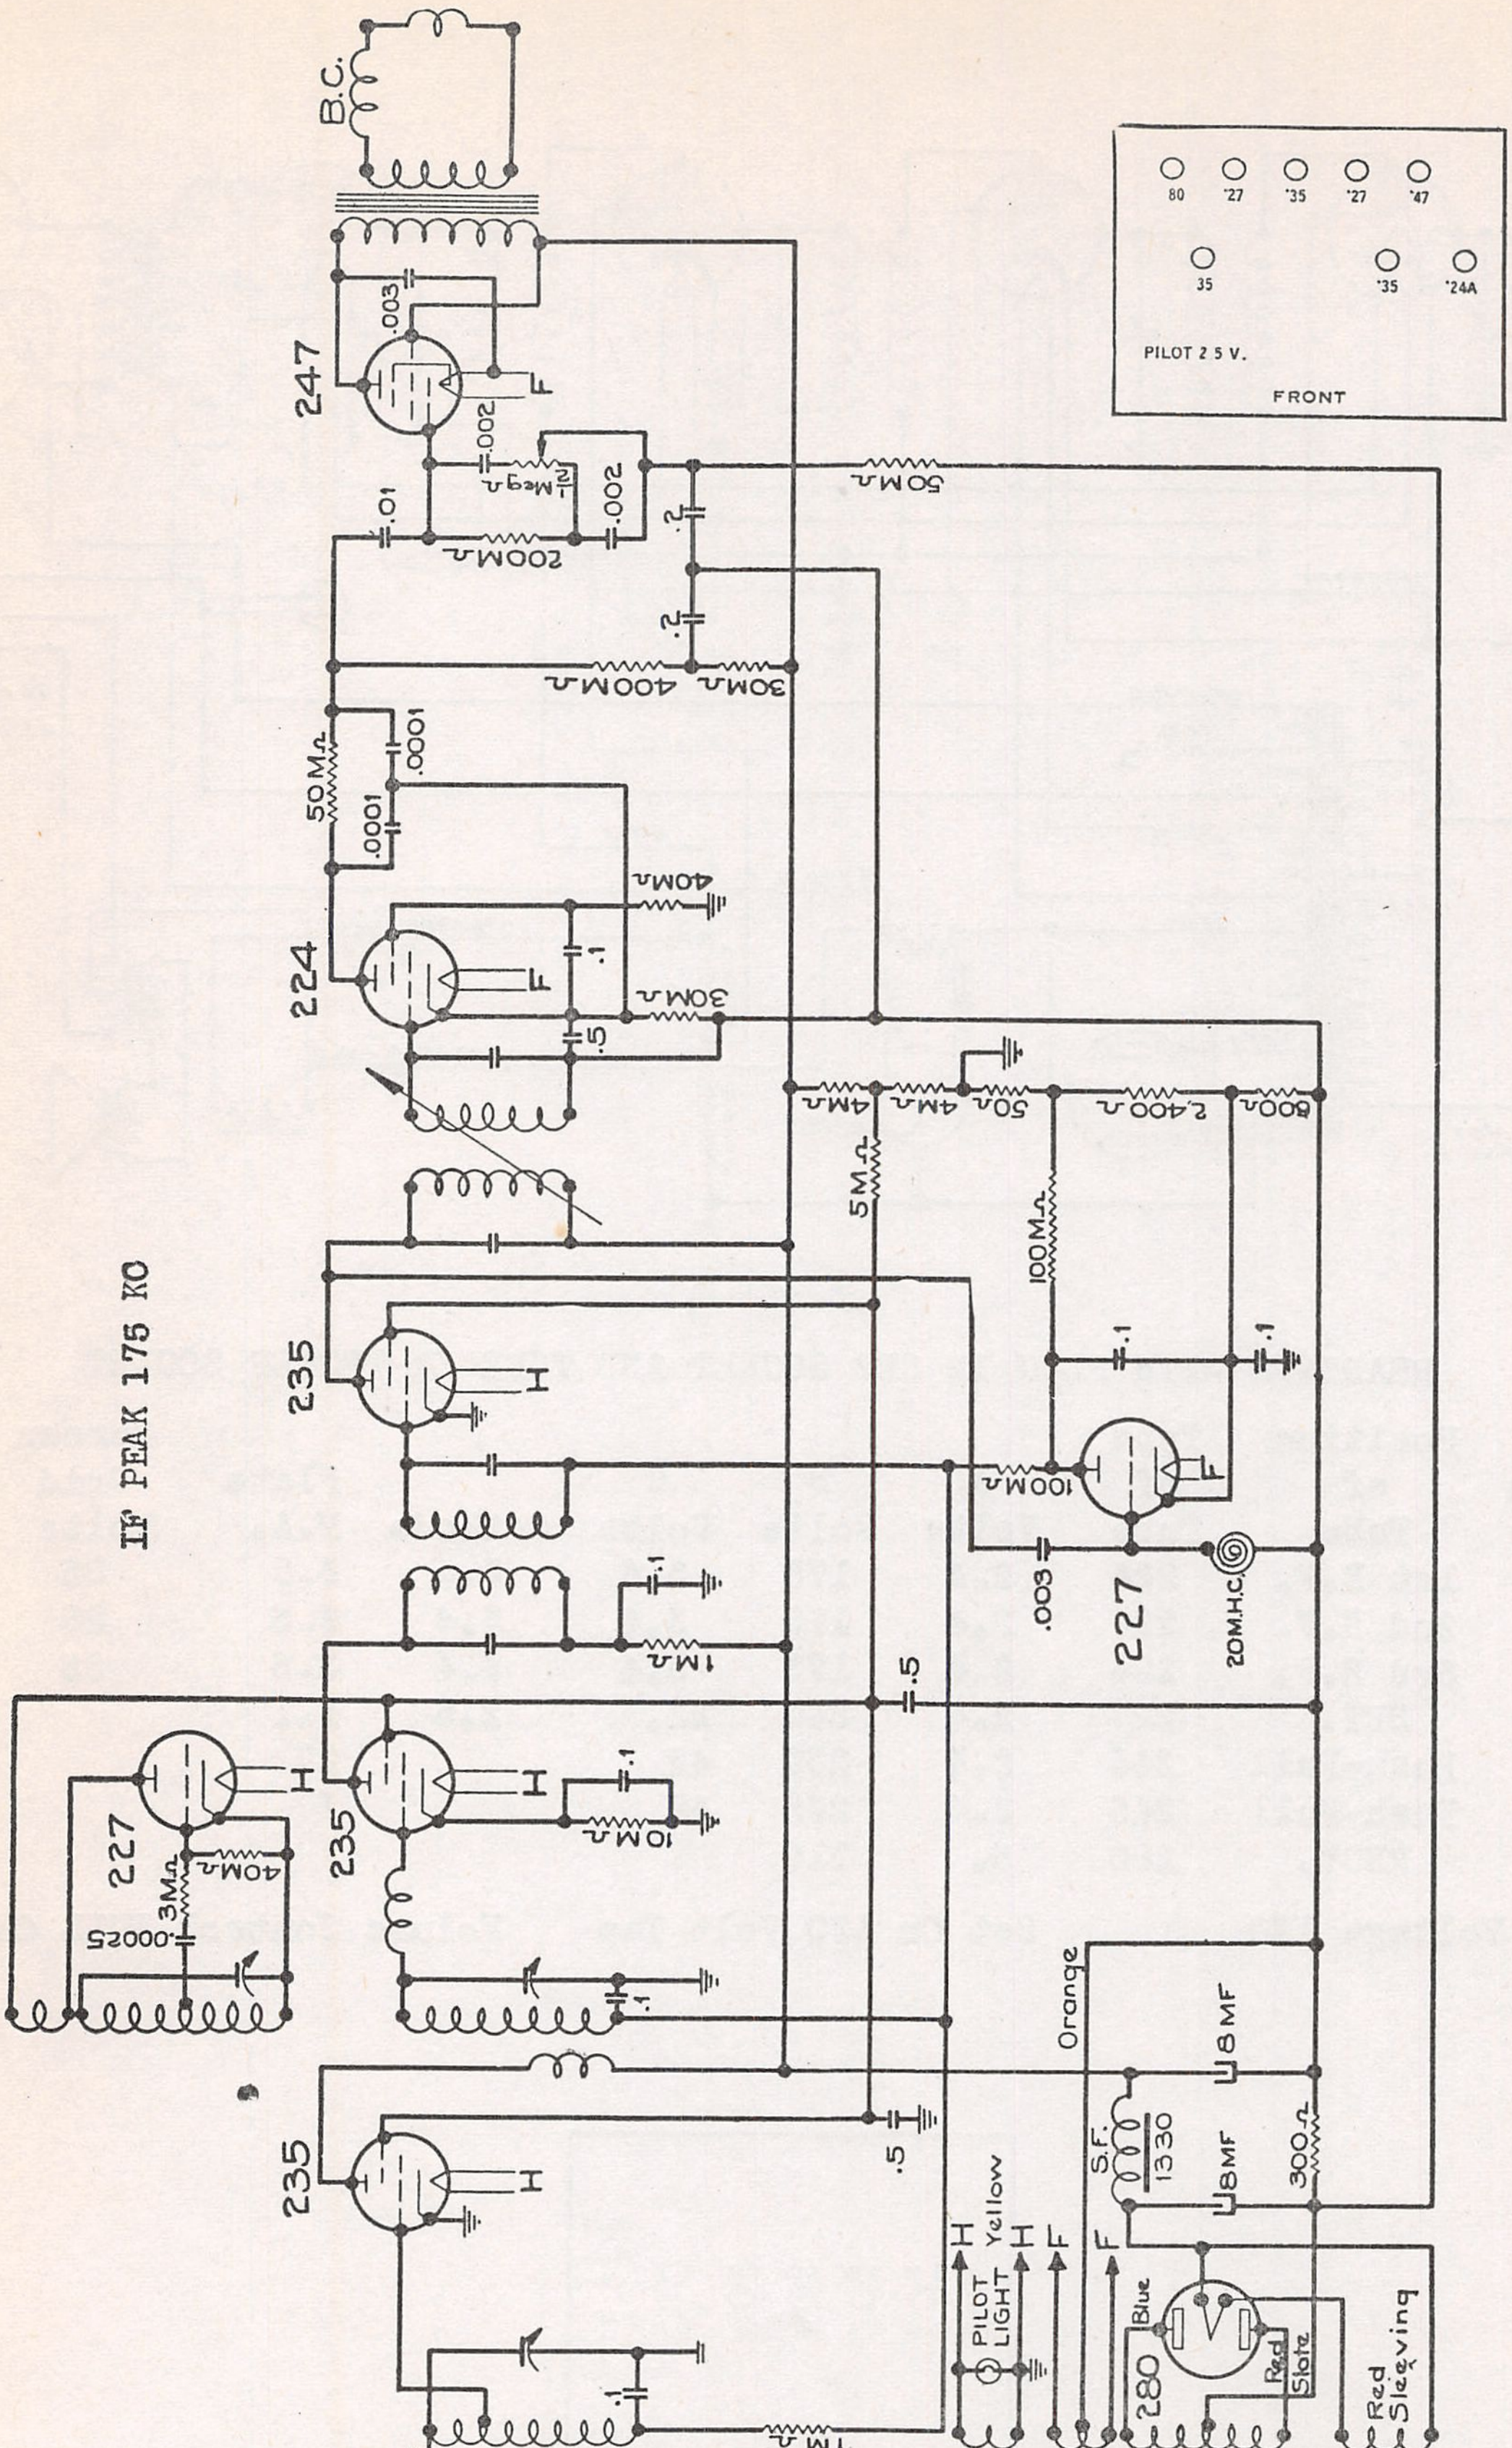
B.C.
247
.003
.002
1 Meg Ω
.002
.01
200MΩ
.2
.2
50MΩ
400MΩ
30MΩ
50MΩ
.0001
.0001
40MΩ
224
.1
.5
30MΩ
4MΩ
4MΩ
50Ω
2,400Ω
600Ω
5MΩ
100MΩ
.1
.1
235
100MΩ
.003
227
20M.H.C.
.1
1MΩ
.5
227
40MΩ
3MΩ
.00025
235
.1
10MΩ
.1
235
.5
Orange
8MF
S.F.
1330
8MF
300Ω
H
Yellow
H
F
F
PILOT LIGHT
Blue
280
Red
Slate
Red Sleeving
.1
1MΩ
Green
Black
80
'27
'35
'27
'47
35
'35
'24A
PILOT 2.5 V.
FRONT

IF PEAK 175 KC

MODEL 1462
MODEL 1480, 1482,
1484

Model 1462

	Trans. 235	Osc. 227	IF 235	RF 235	247 Output	AVC 227	280 DC	Det 224
PLATE VOLTAGE	160	55	160	160	242	48	370	80
AVERAGE PLATE CURRENT MA	1.	-	5.	5.	26.	-	-	.2
SCREEN VOLTAGE	58	-	58	58	250	-	-	40
AVERAGE SCREEN CURRENT MA	.2	-	1.	1.	7.	-	-	.15
GRID VOLTAGE	10	-	1.5	1.5	18	-	-	6
FILAMENT VOLTAGE	2.4	2.4	2.4	2.4	2.6	2.5	5	2.5

SPEAKER FIELD VOLTAGE	83 volts	Line Voltage	115 volts
TOTAL PLATE CURRENT	60 ma	Total Watts	85

Model 1480, 1482, 1484

	Trans. 235	Osc. 227	IF 235	RF 235	Det 224	Pentode 247	280
PLATE VOLTAGE	230	55	230	230	75	220	360
AVERAGE PLATE CURRENT MA	1.	3.	5.	5.	.2	26.	
SCREEN VOLTAGE	55		55	55	38	230	
AVERAGE SCREEN CURRENT MA	.2		1.	1.	.15	7.	
GRID VOLTAGE	10		1.5	1.5	5	17	
FILAMENT VOLTAGE	2.47	2.52	2.54	2.56	2.5	2.49	5

SPEAKER FIELD	115 volts	LINE VOLTAGE	115
TOTAL PLATE CURRENT	40 ma.	TOTAL WATTS	70

MODEL 1480,1482,1484
Schematic

SEARS-ROEBUCK & CO.

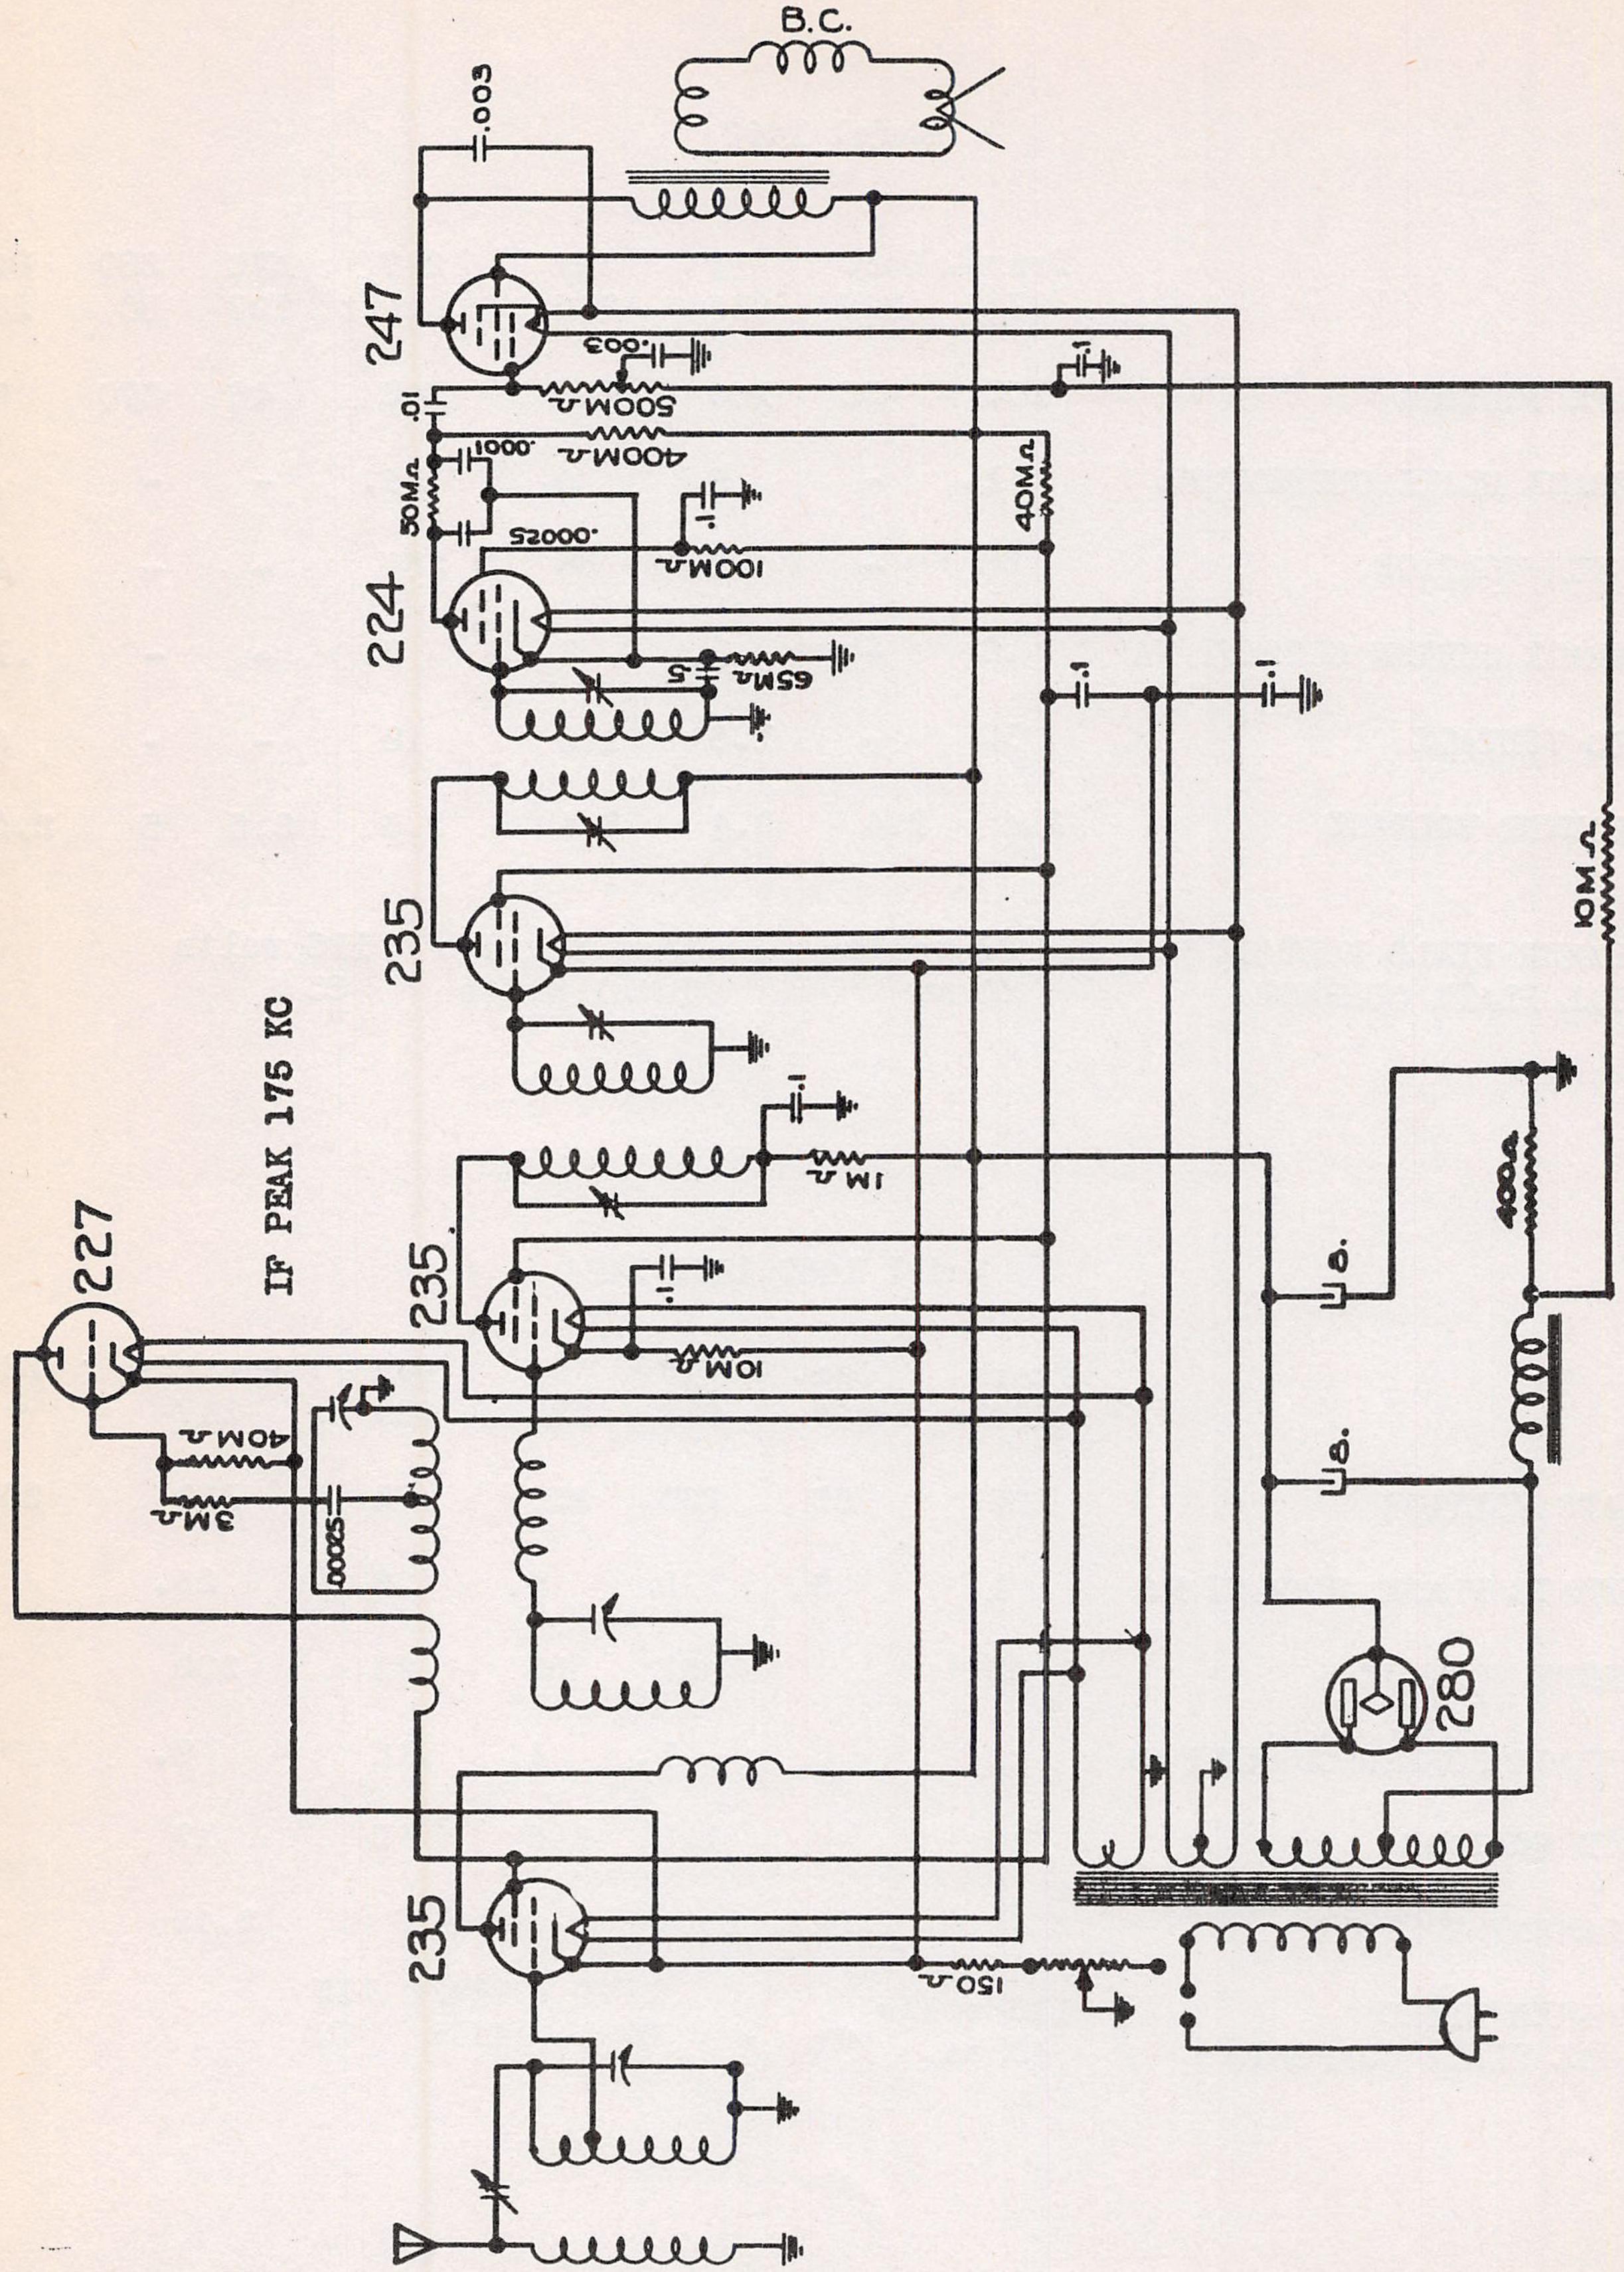
B.C.
.003
247
.003
500MΩ
.01
400MΩ
.0001
50MΩ
.00025
.1
100MΩ
40MΩ
224
.5
65MΩ
.1
.1
235
10MΩ
.1
1MΩ
235
.1
10MΩ
8
400Ω
8
IF PEAK 175 KC
227
40MΩ
3MΩ
.00025
280
235
150Ω

SENTINEL RADIO CORP.

MODEL 108-A,110
Schematic

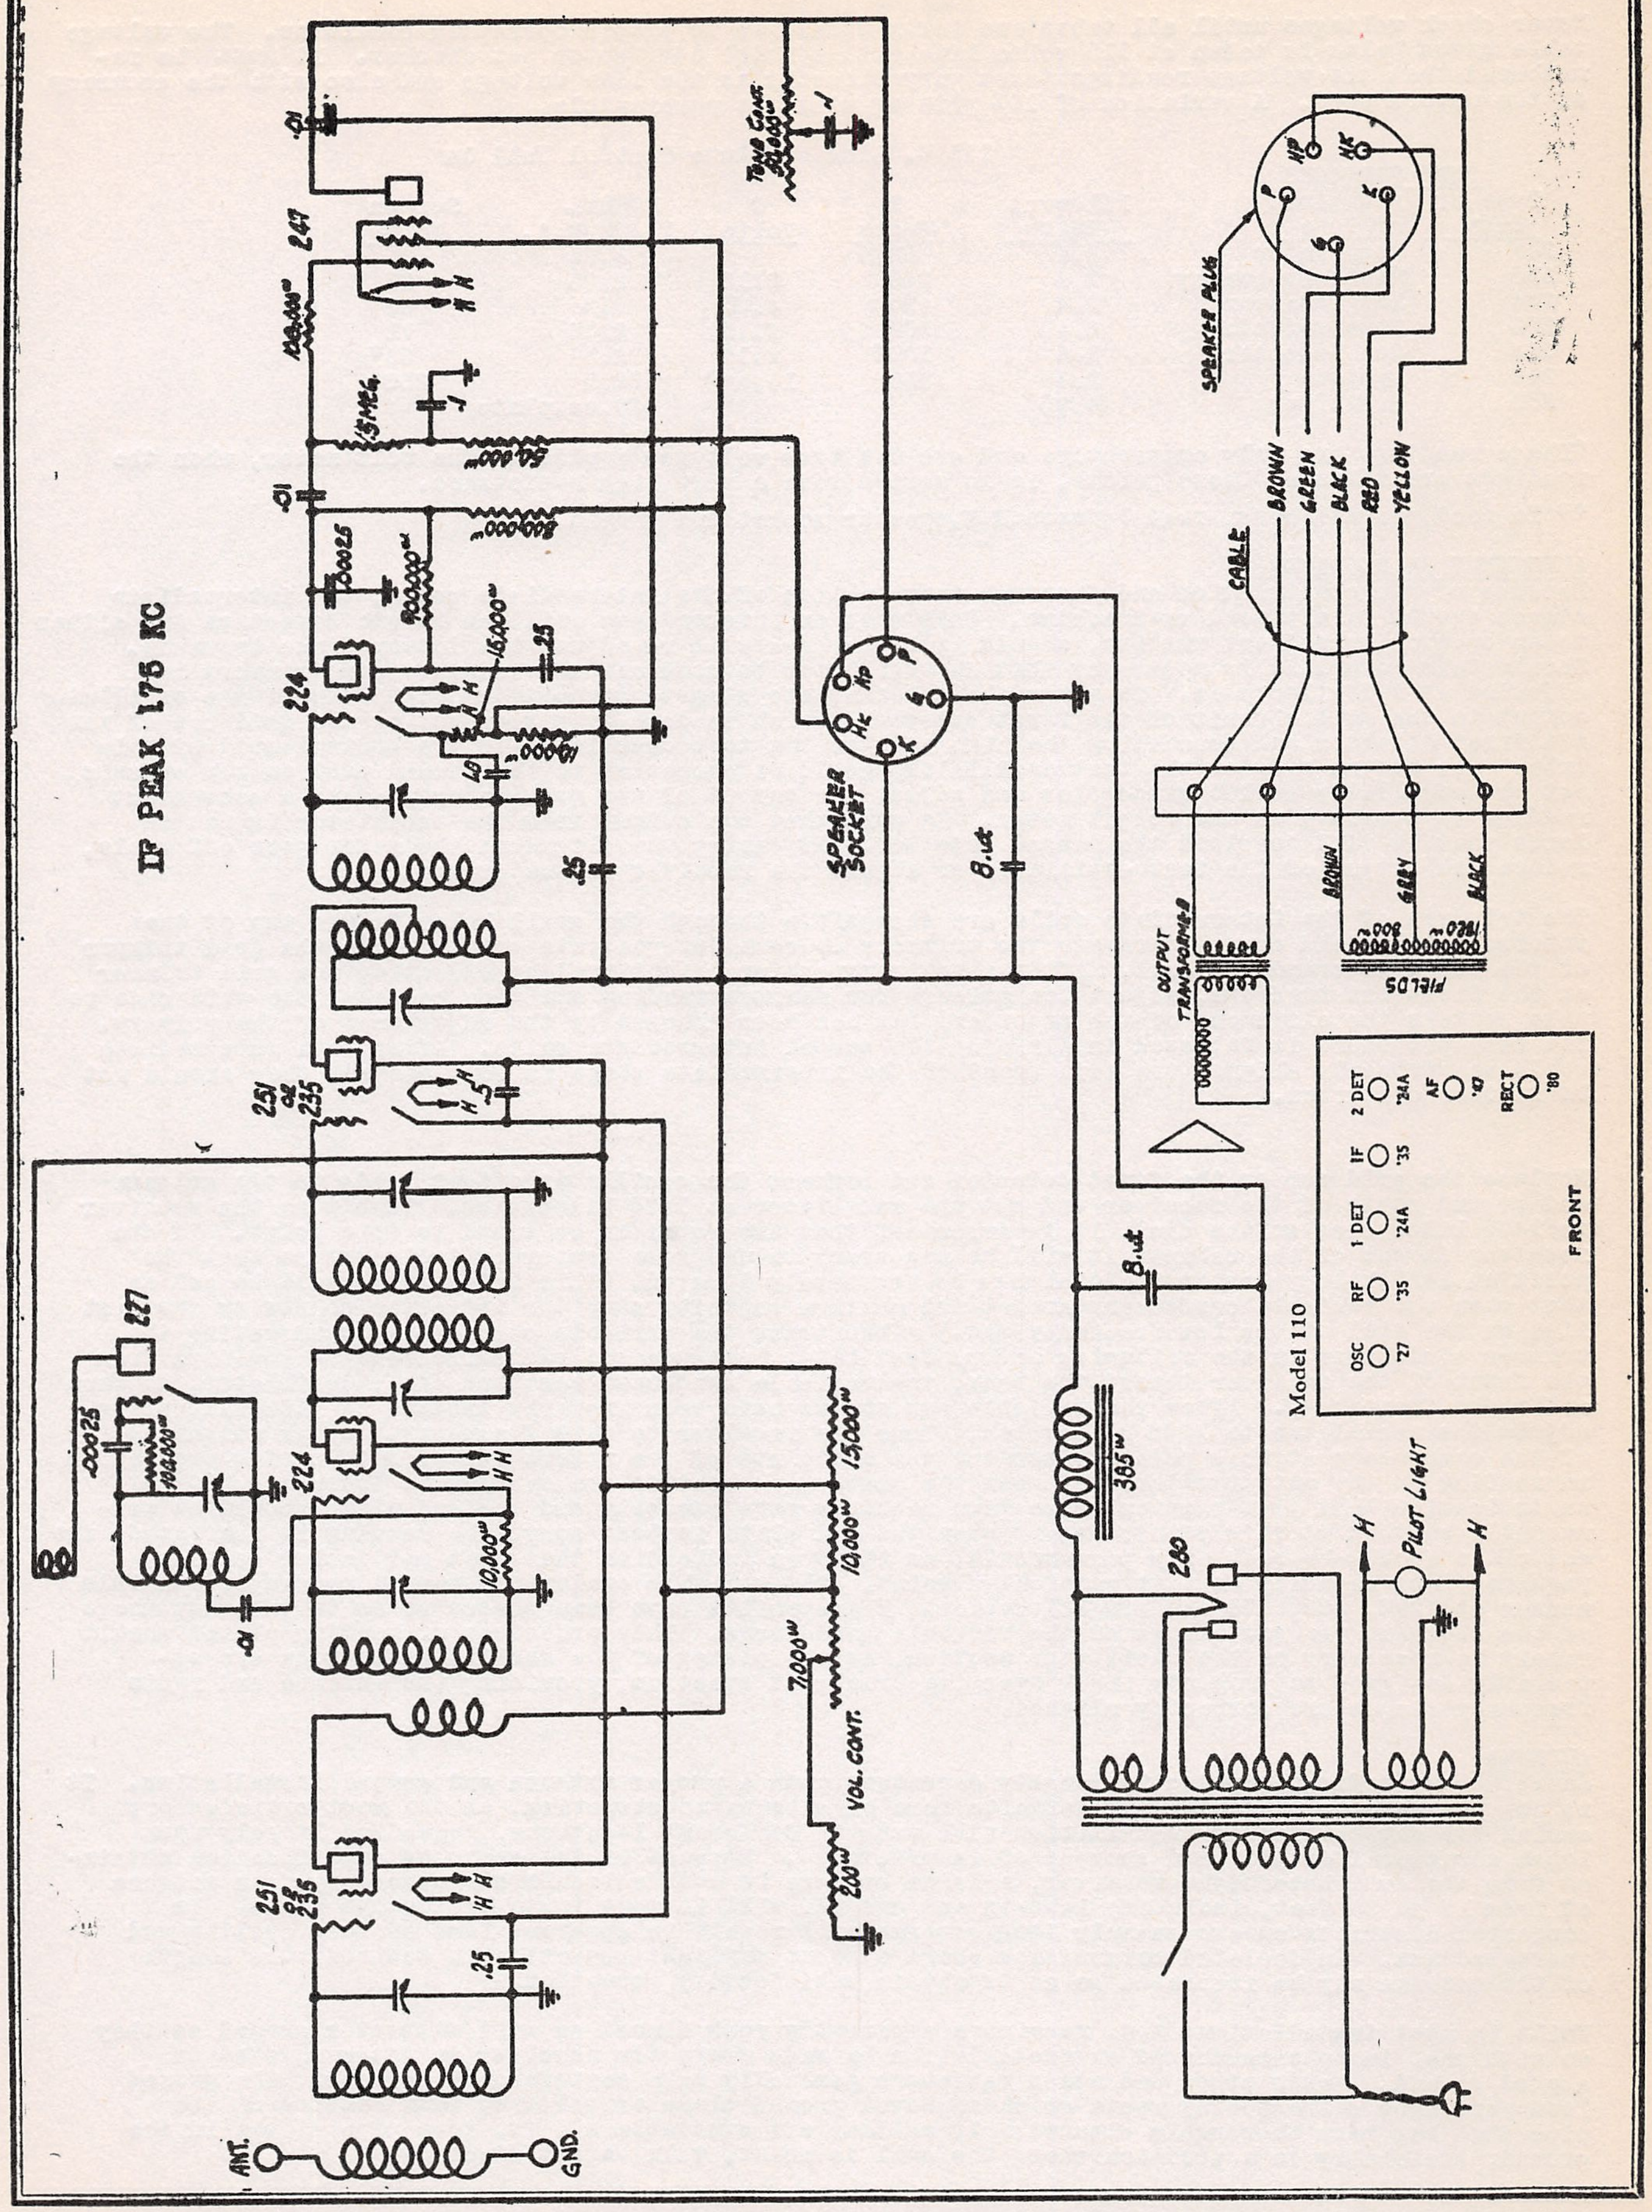
IF PEAK 175 KC
TONE CONT. 50,000Ω
.1
.01
247
120,000Ω
H H
.5 MEG
.1
50,000Ω
.01
800,000Ω
.00025
900,000Ω
15,000Ω
.25
224
H H
LO
.25
SPEAKER SOCKET
HP
P
HC
G
K
8 mf
SPEAKER PLUG
BROWN
GREEN
BLACK
RED
YELLOW
CABLE
OUTPUT TRANSFORMER
BROWN
GRAY
BLACK
800
1800
FIELDS
251 or 235
H H
.5
227
.00025
100,000Ω
224
H H
.01
10,000Ω
15,000Ω
10,000Ω
7,000Ω
VOL. CONT.
200Ω
251 or 235
H H
.25
ANT.
GND.
8 mf
385Ω
280
PILOT LIGHT
H
H
Model 110
OSC '27
RF '35
1 DET '24A
IF '35
2 DET '24A
AF '47
RECT '80
FRONT

MODEL 108-A,110
Voltage,Data

SENTINEL RADIO CORP.

VOLTAGE TABLE

Never check voltages until all tubes are fully warmed up to proper operating condition. The voltage table given below is taken at 115 volts line with a Model 547 Weston set checker. It must be remembered that the voltage readings taken vary directly as the line voltage and also with the accuracy of the meters used. A variation of 10% plus or minus is permissible.

115 V. Line   Volume Control Full On

TUBE VOLTAGES

Type of Tube	Position of Tube	Filament Volts	B Volts	C Volts	NORMAL PLATE M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
224	2nd Detector	2.4	100*	2.1*	2.5	35*
247	Pentode	2.4	250	16.5**	32.5	250
280	Rectifier	4.95			27.ea.plate	

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

** To read the 247 bias, read between H.K.speaker socket and ground.

ALIGNMENT OF RECEIVER:

Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need re-tracking. Only when an intermediate coil has become defective due either to an open or burned out winding, should it be necessary to re-adjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmors be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the top of the intermediate shield can. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then re-check the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocycles on the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are : Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away, the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

ANTENNA:

Satisfactory radio reception is largely dependent upon a proper antenna and ground installation. It is not possible to prescribe any definite form of antenna construction, as the most satisfactory aerial for any particular installation will vary in different locations, depending largely upon local structural details and sources of interference. Because of the enormous amplification obtained from the superheterodyne receiver, a large antenna is not desirable nor necessary. An antenna of from 15 to 35 feet, including lead-in and ground, will in most installations be ample. In congested districts an excessively long antenna will result in apparent loss of tone quality and increased hum. In isolated communities where distant daylight reception is desired, the length of the antenna may be increased so as to obtain satisfactory reception.

While in most installations A.C. receivers apparently work almost as well without a ground as they do with one, in no case should an installation be made where the receiver is not connected to a good ground. Water pipes and steam radiators generally make satisfactory grounds. The ground lead should be connected by means of an approved ground clamp or soldered to a section of the pipe that has been thoroughly cleaned. If neither are available a 6 ft. iron pipe driven in the ground, preferably in a position where the soil is moist, will be satisfactory.

MODEL 109

SENTINEL RADIO CORP.

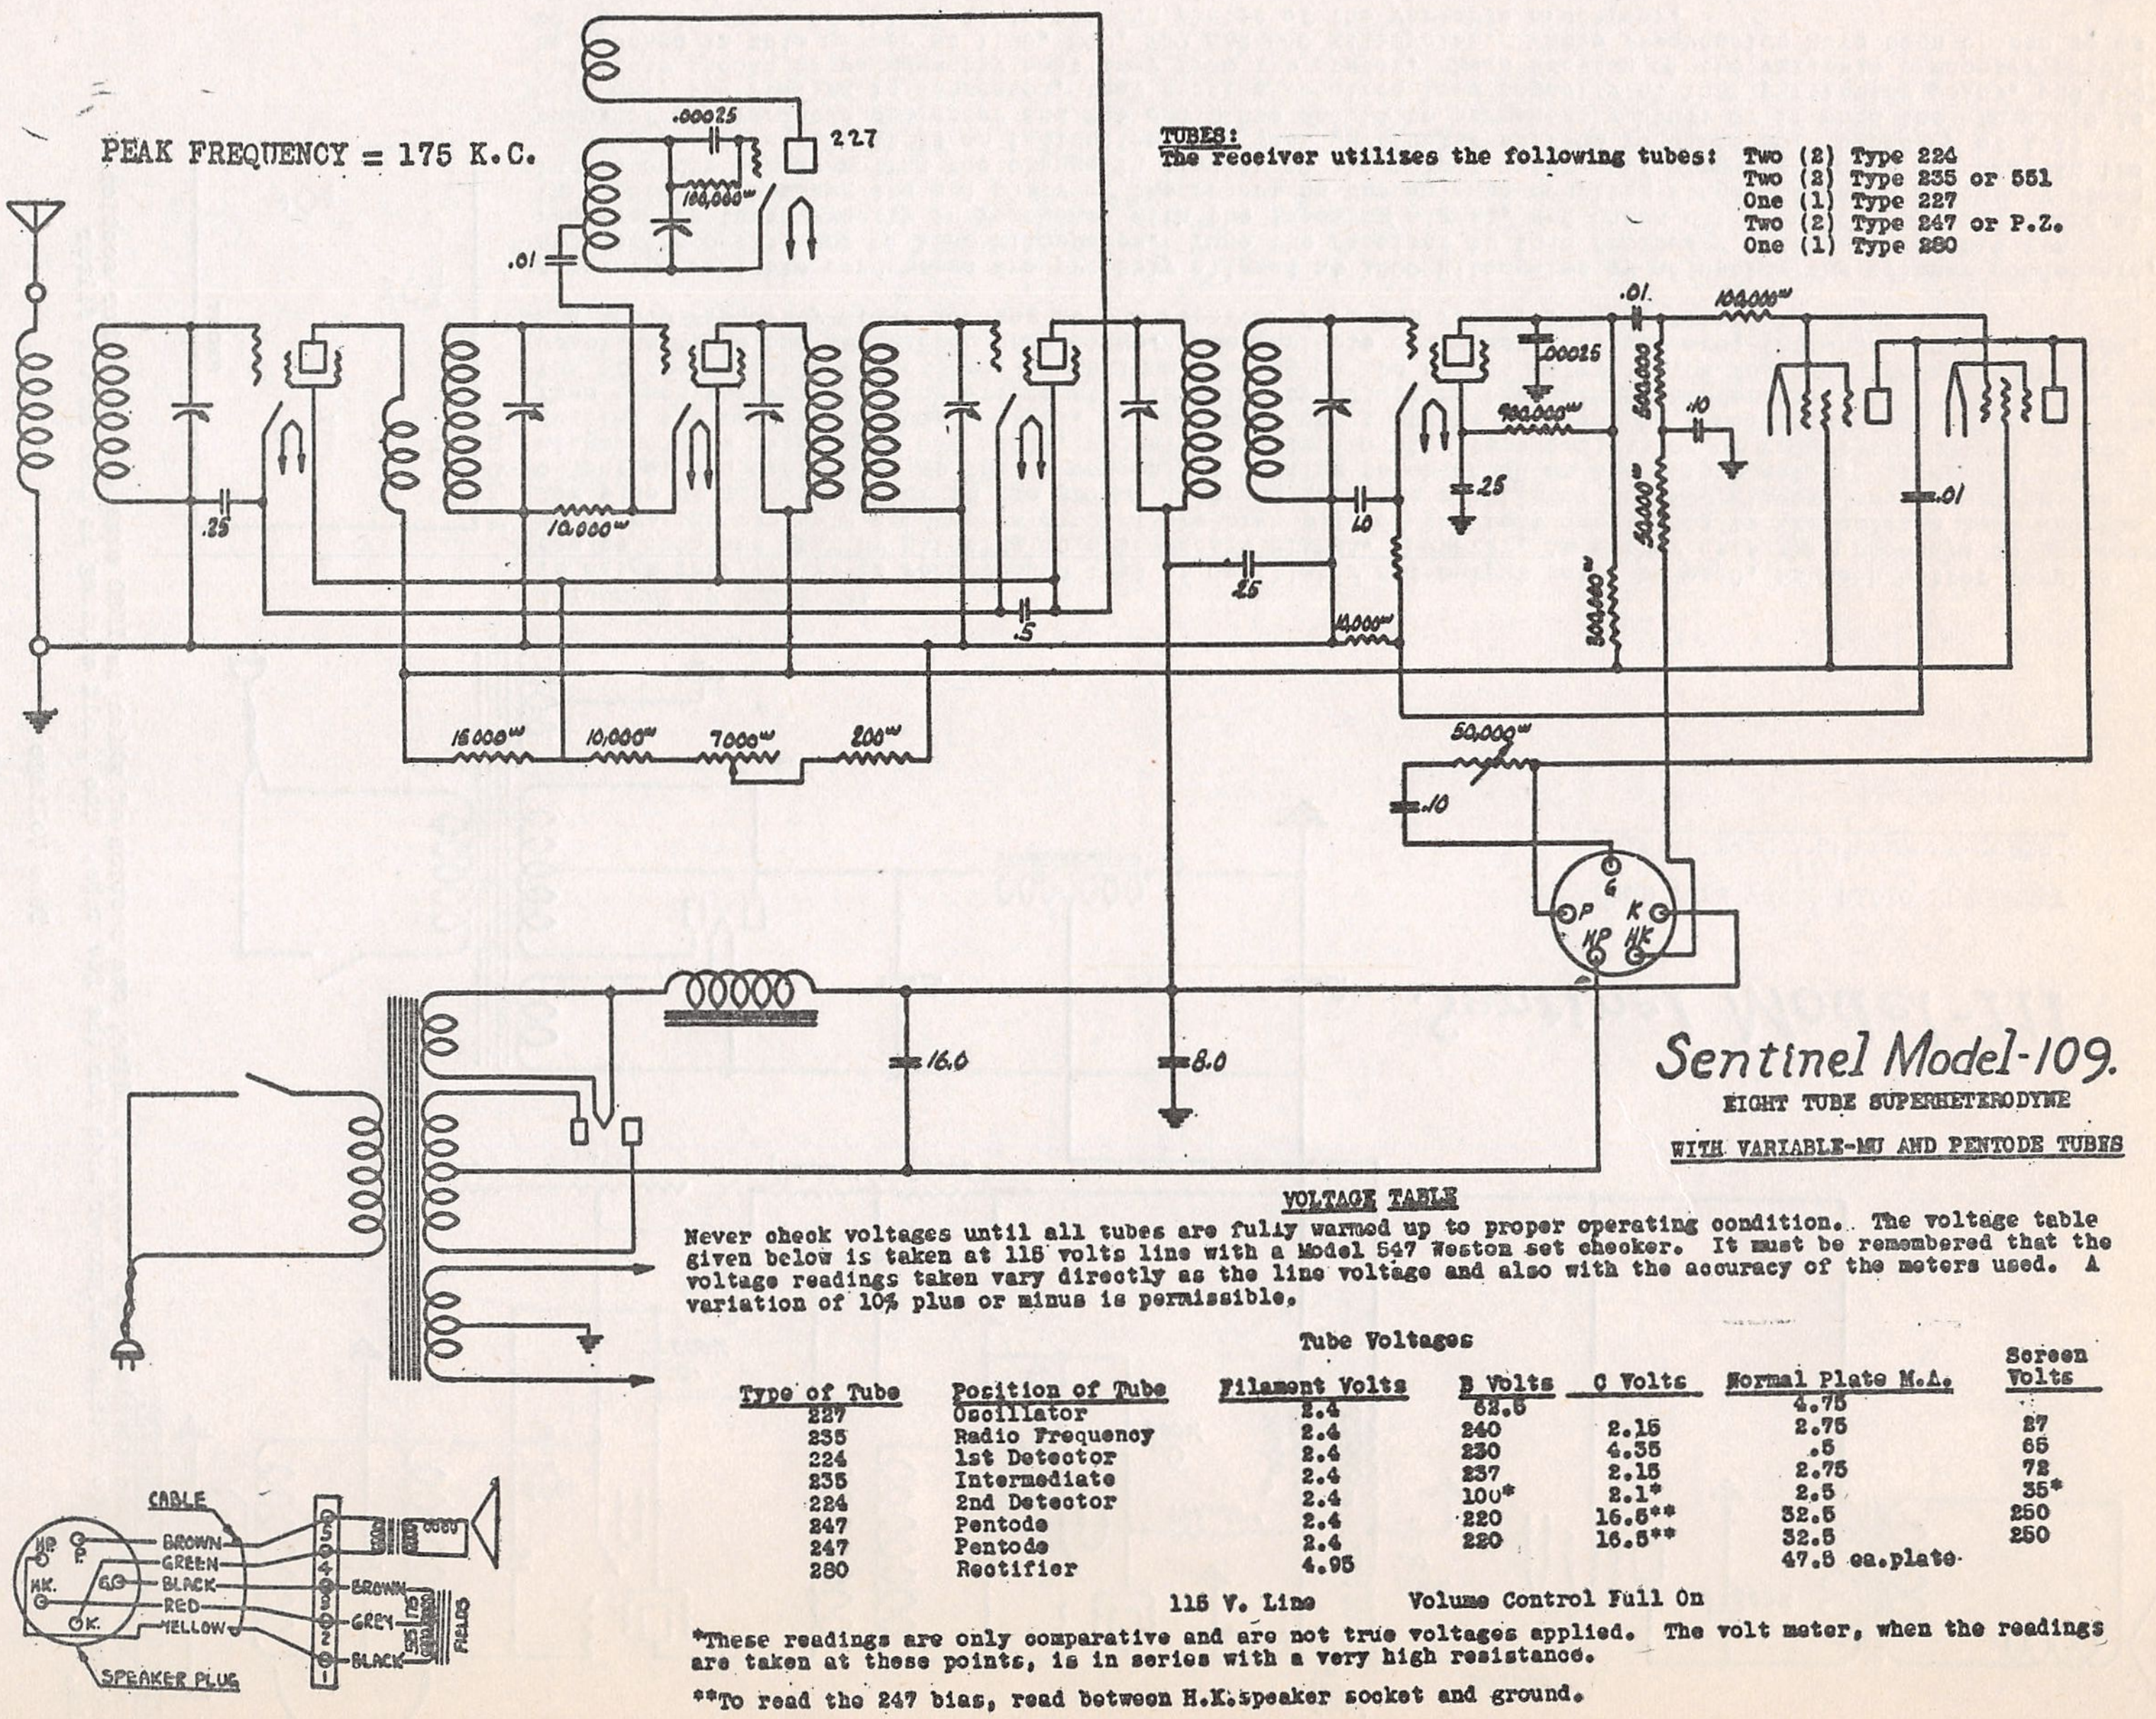

PEAK FREQUENCY = 175 K.C.

TUBES:
The receiver utilizes the following tubes:

Two (2) Type 224
Two (2) Type 235 or 551
One (1) Type 227
Two (2) Type 247 or P.Z.
One (1) Type 280

Sentinel Model-109.

EIGHT TUBE SUPERHETERODYNE

WITH VARIABLE-MU AND PENTODE TUBES

VOLTAGE TABLE

Never check voltages until all tubes are fully warmed up to proper operating condition. The voltage table given below is taken at 115 volts line with a Model 547 Weston set checker. It must be remembered that the voltage readings taken vary directly as the line voltage and also with the accuracy of the meters used. A variation of 10% plus or minus is permissible.

Tube Voltages

Type of Tube	Position of Tube	Filament Volts	B Volts	C Volts	Normal Plate M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4.35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
224	2nd Detector	2.4	100*	2.1*	2.5	35*
247	Pentode	2.4	220	16.5**	32.5	250
247	Pentode	2.4	220	16.5**	32.5	250
280	Rectifier	4.95			47.5 ea.plate	

115 V. Line Volume Control Full On

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

**To read the 247 bias, read between H.K. speaker socket and ground.

ELECTRO DYNAMIC SPEAKER:
The electro dynamic speaker has a tapped field winding - one section of which is 525 ohms and is utilized as the second choke in the filter circuit. The other section, which is 175 ohms, is used to obtain the proper bias for the 247 tubes, as well as acting as an additional filter choke.

VOLTAGE REGULATOR TUBE:
Shipped with each receiver is a fuse plug containing a 4 ampere fuse and one spare 4 ampere fuse. Frequent and continued burning out of the fuse is an indication that either there is a defective tube, or some part of the receiver is defective, and these possible sources of trouble should be carefully checked if this condition exists. In districts where the line voltage is excessively high or low or fluctuating, the fuse plug may be substituted by a line voltage regulator tube which will maintain the voltage applied to the primary more constant. Either an Amperite #10-10 or Duresite #101 may be used.

MODEL 111

SENTINEL RADIO CORP.

Sentinel Model-111

FOUR TUBE TUNED RADIO FREQUENCY
WITH
VARIABLE-MU AND PENTODE TUBES

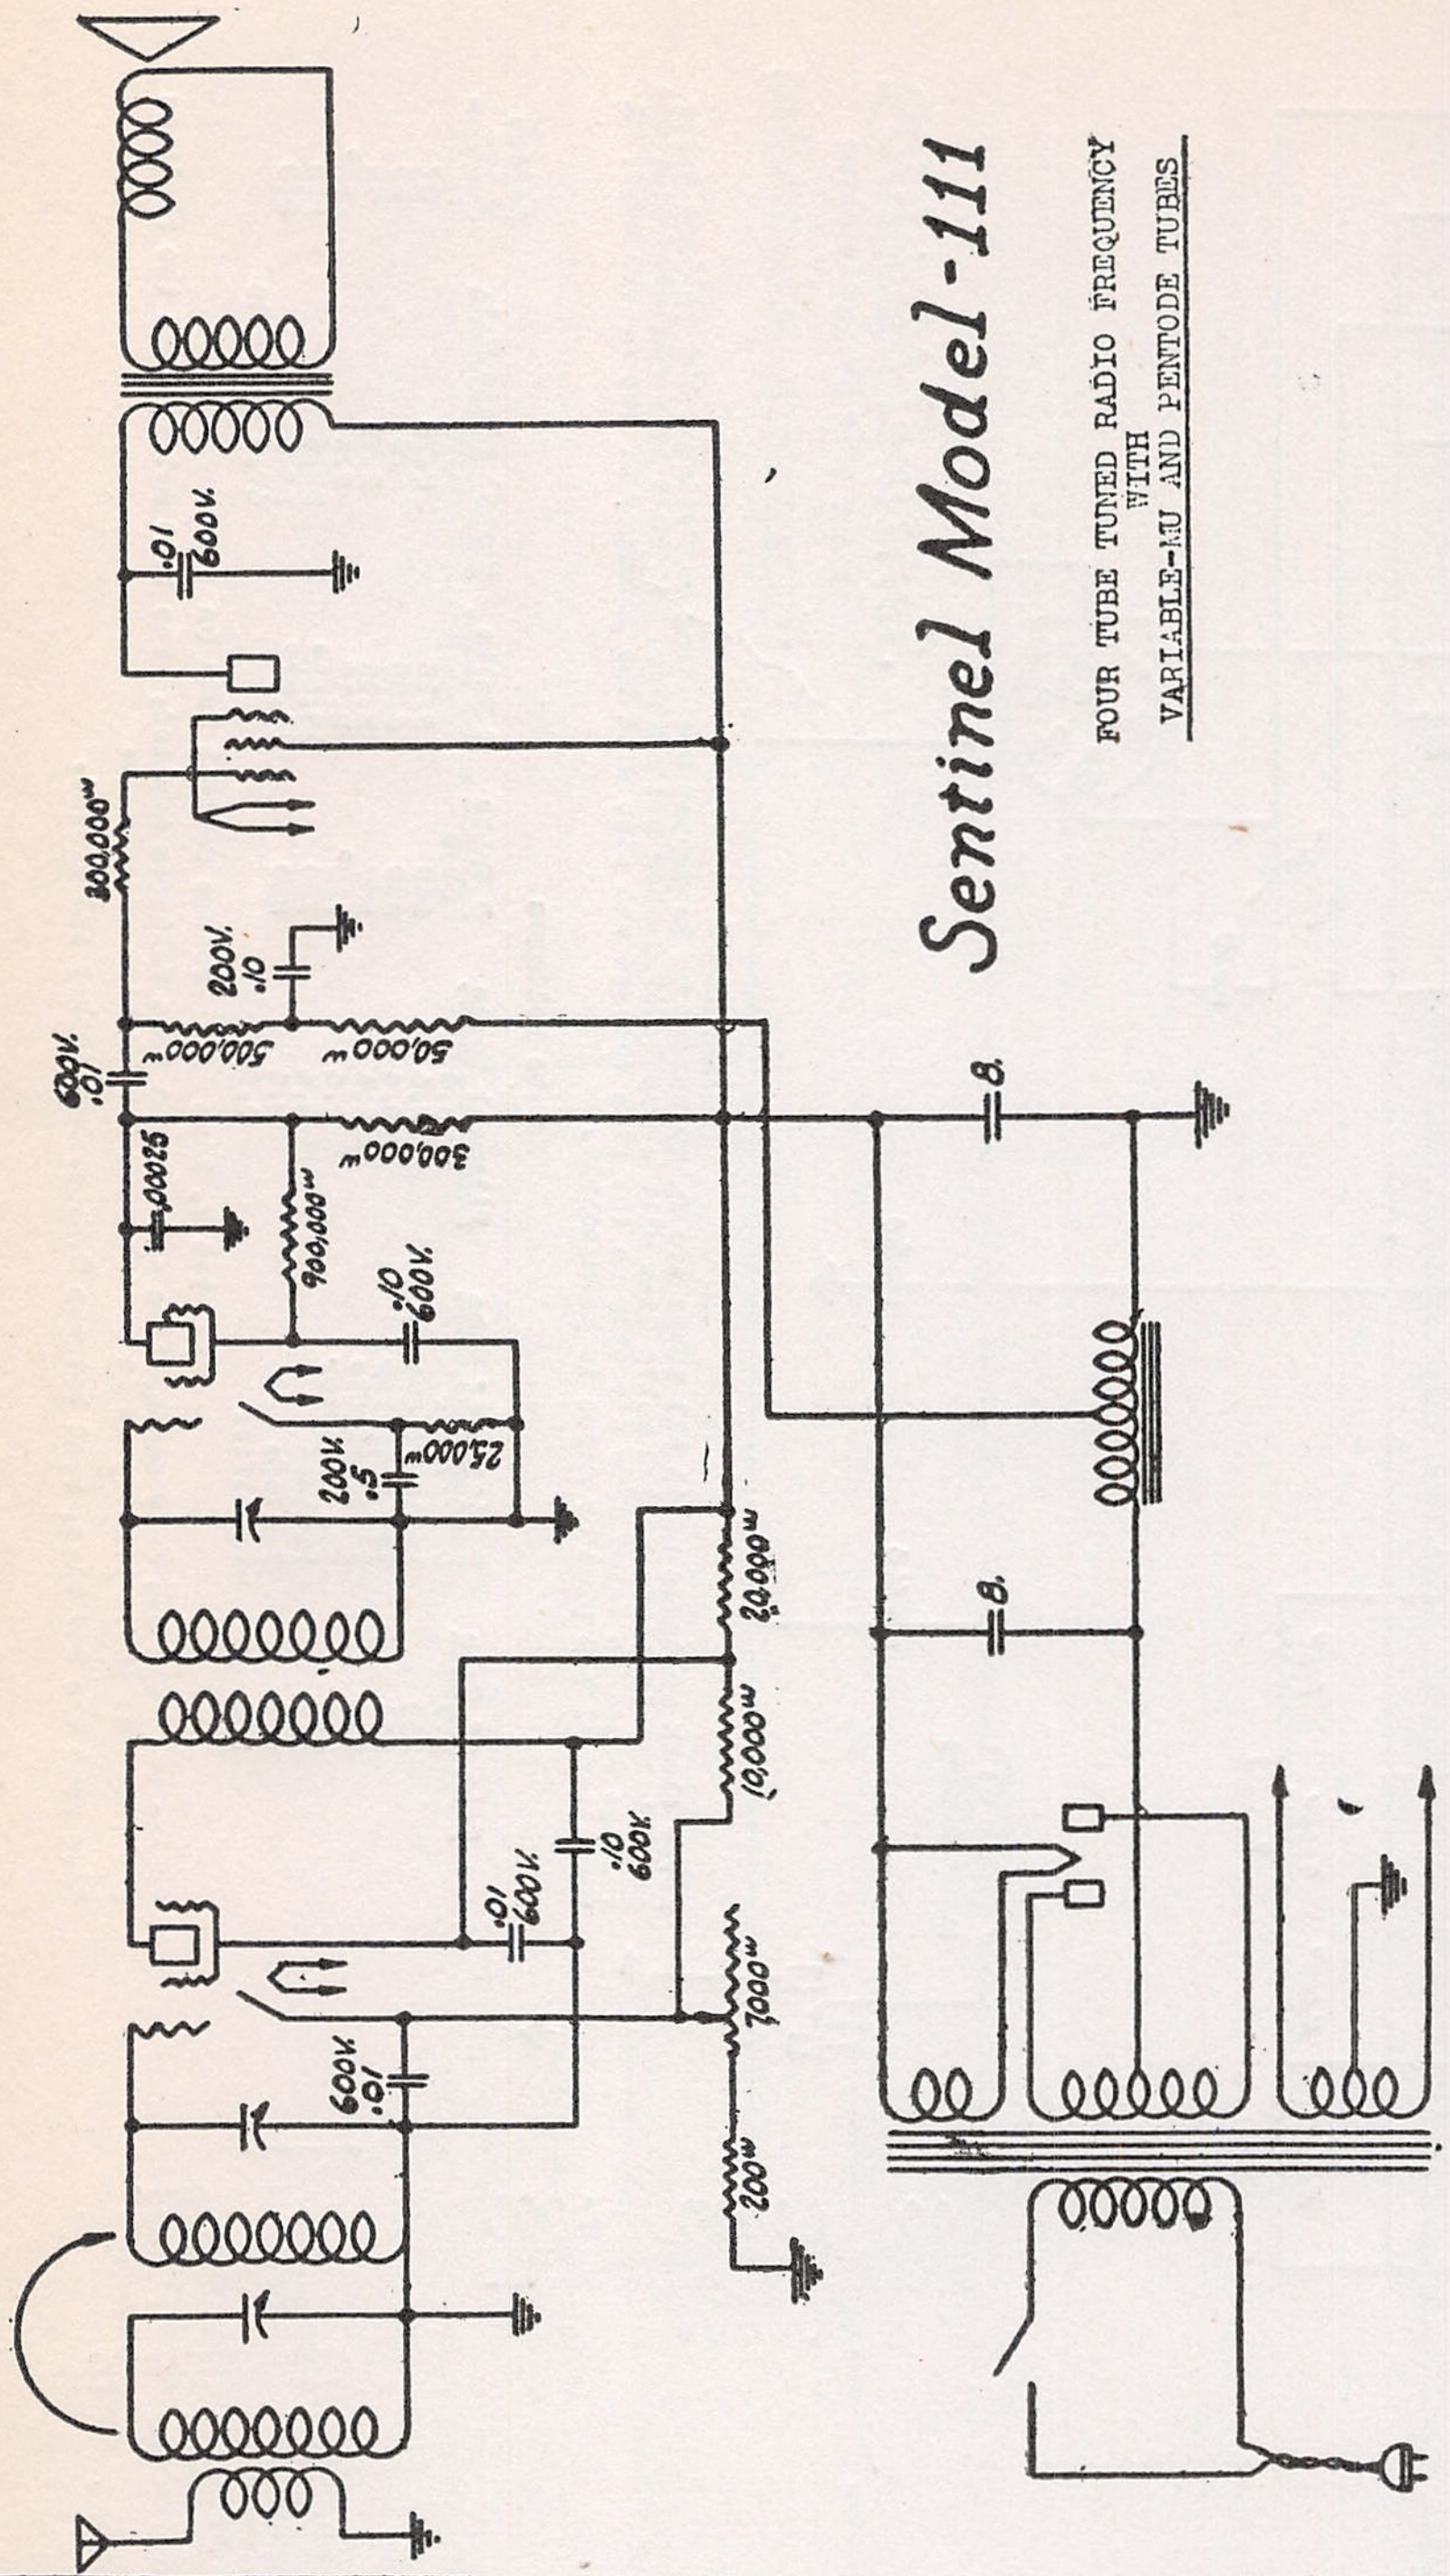

ALIGNMENT OF RECEIVER:

To aligh receiver it is recommended that an oscillator and output meter be used, as much better results can be obtained than by aligning on a broadcast signal. However, in either case the procedure is the same. To align the variable condensers connect the high side of the test oscillator to the antenna lead and the low side of the oscillator to the ground lead and tune the oscillator to 1500 kilocycles, adjusting the output of the oscillator so that a convenient reading is obtained on the output meter. If during the alignment the meter goes off scale, adjust the output of the test oscillator or reduce the output by adjusting the receiver volume control. It is important that the receiver be tuned to minimum capacity stop. Then track the variable condensers at this point by adjusting the trimmer condensers, which are mounted on top of the variable condensers, to maximum reading on the output meter in the following order: Antenna, Coupling Stage and Radio Frequency Stage. The variable condenser sections are: (Antenna, Coupling Stage, and Radio Frequency Stage looking at the receiver from the front, reading toward the back.)

After the variable condensers are properly aligned at 1500 kilocycles by adjusting the trimmer condensers, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency, making sure that the receiver is tuned exactly in resonance with the incoming signal, and check alignment of the condensers at this point by bending the end plate of the rotors on the antenna coupling stage and radio frequency stage in the order named, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity at that point of the variable condenser and the end plate should be permanently bent; or if when the end plate is bent away the reading is increased, that section requires less capacity at that particular point, and the end plate should be permanently bent away from the stator. Each section of the variable condenser should be checked in this manner at 1295, 800, 750 and 550 kilocycles. These frequencies have been chosen so as to take advantage of the slots in the end plates of the variable condenser.

Model 111

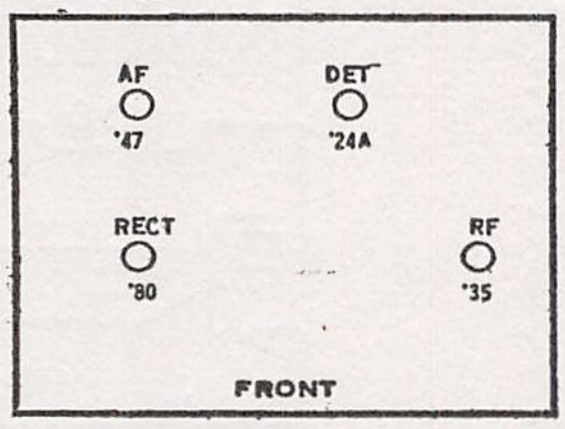

ELECTRO DYNAMIC SPEAKER:

The electro dynamic speaker has a tapped winding, one section of which is 1320 ohms and the other section 300 ohms is used to obtain the proper bias for the 247 tube. The field winding is used as the filter choke.

Tube Voltage

Type of Tube	Position of Tube	Filament Volts	Plate Volts	C Volts	Normal Plate M.A.	Space Charge Grid	Screen Volts
235	Radio Frequency	2.4	250	2.5	4		90
224	Detector	2.4	65*	2.5*	.4		37.5*
247	Output	2.4	230	16.5*	35	250	
280	Rectifier	5.			30 M.A.		

115 V. Line Volume Control Full On

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

SENTINEL RADIO CORP.

MODEL 114
Voltage- Data

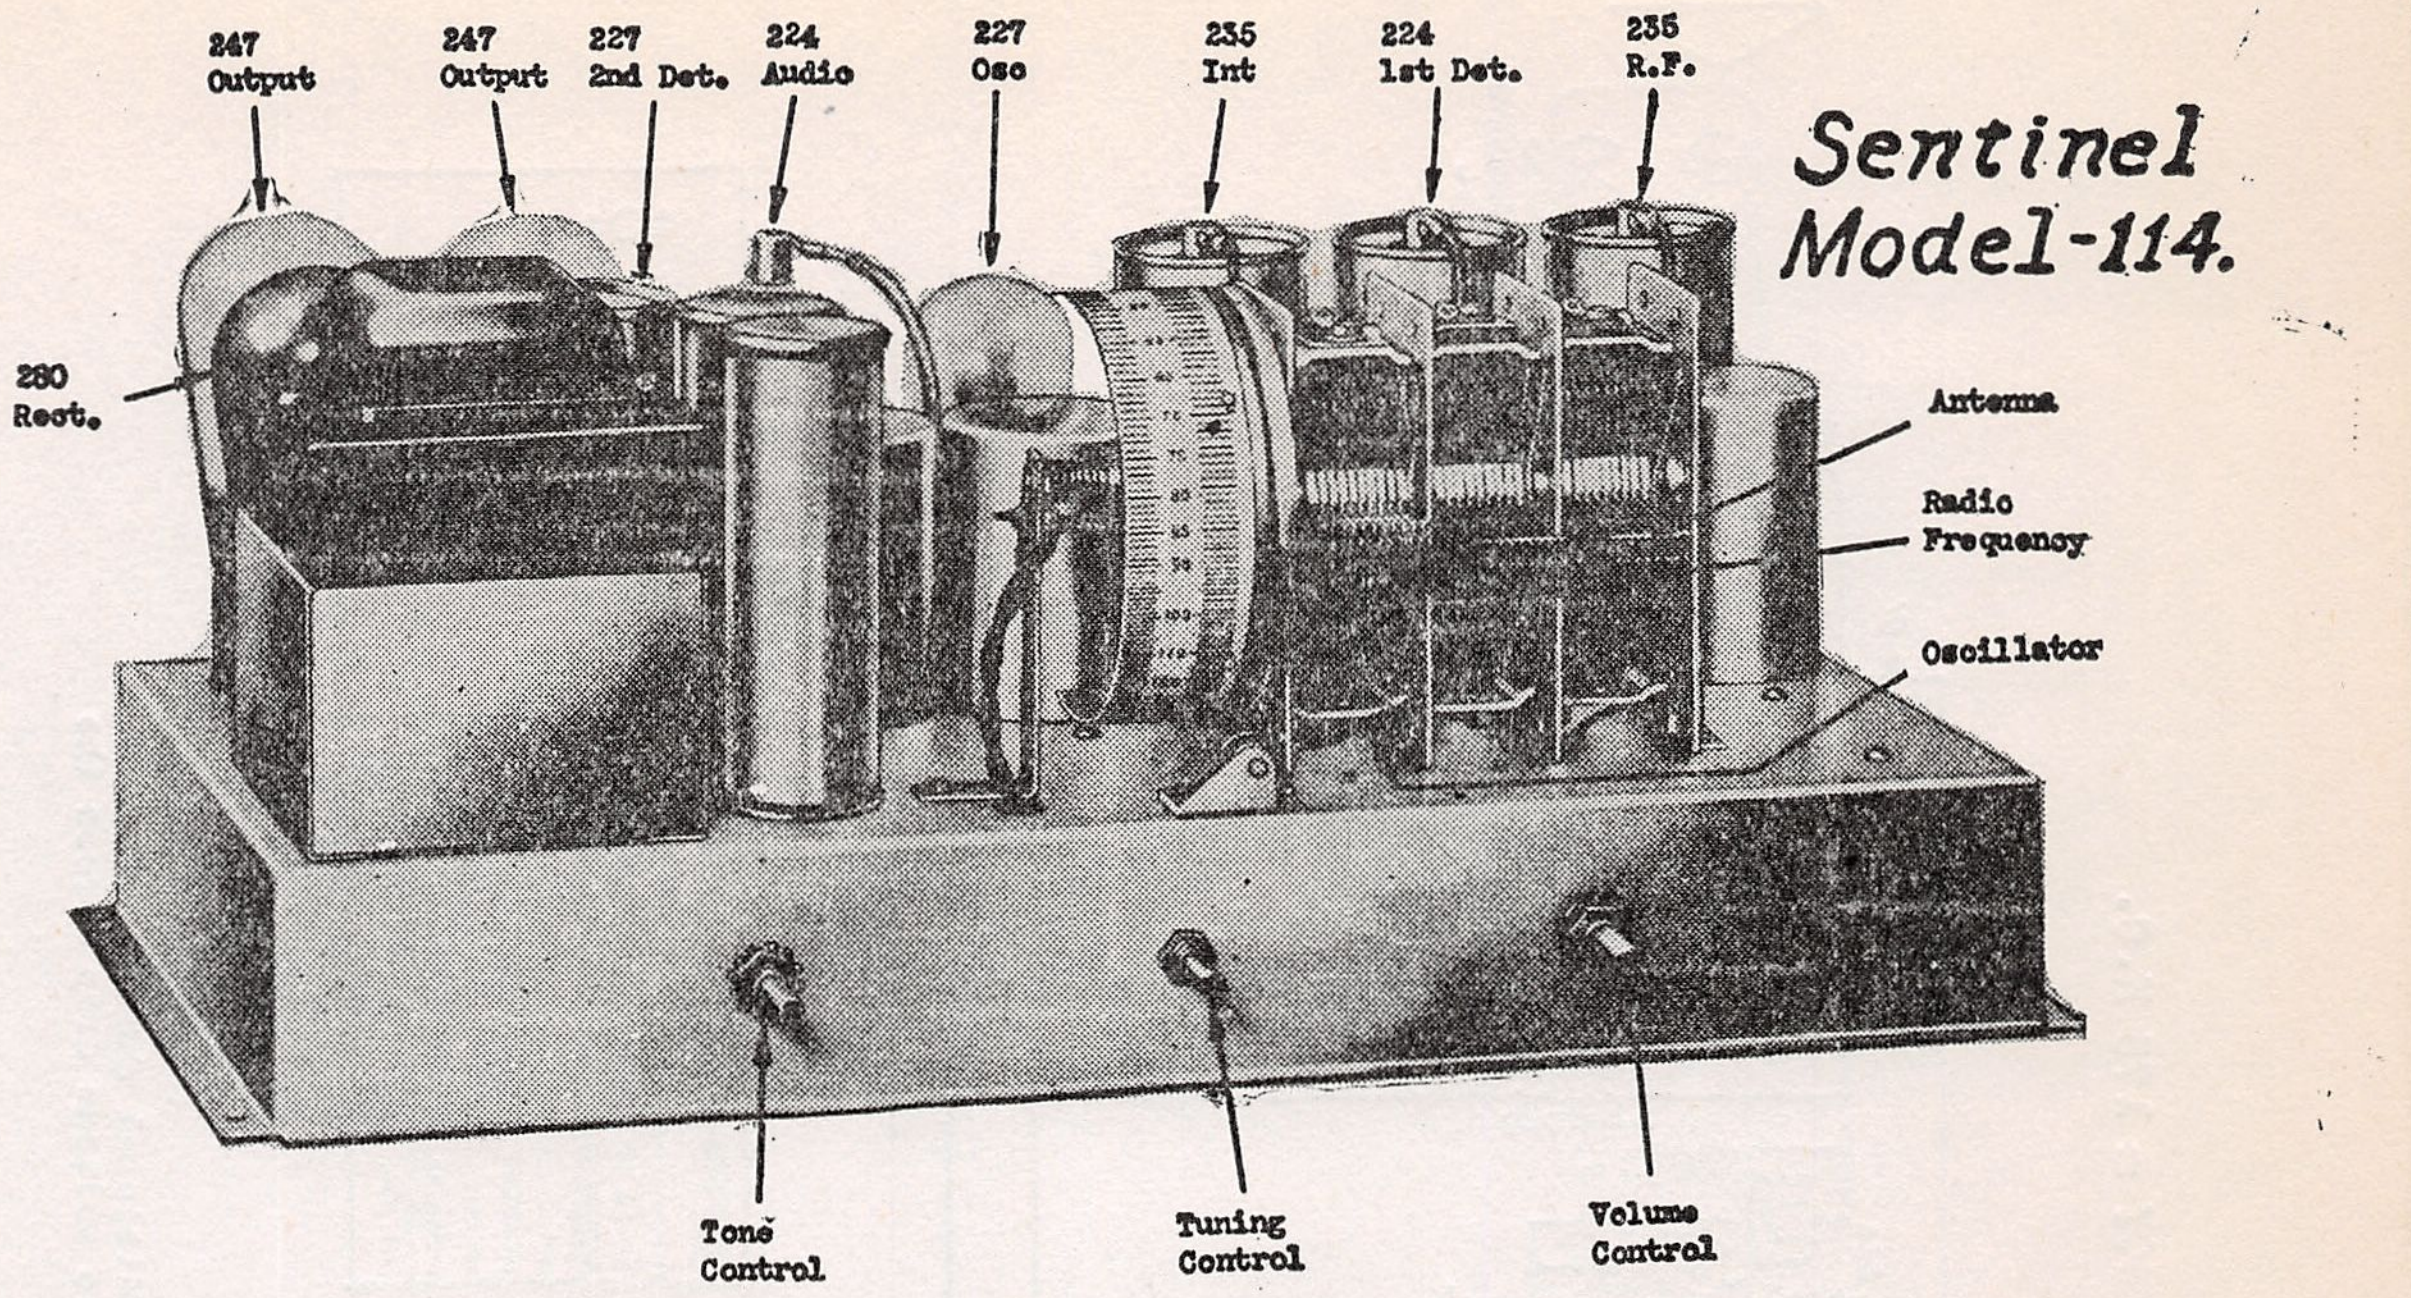

ALIGNMENT OF RECEIVER:
Because of the construction and thorough impregnation of the intermediate coils, the intermediate stages should rarely need retracking. Only when an intermediate coil has become defective due to an open or burned out winding, should it be necessary to readjust the intermediate trimmers. Should this occur, it is necessary that an oscillator be used and the intermediate trimmers be adjusted at 175 kilocycles. To align the intermediate stages, connect the high side of the oscillator output to the grid circuit of the first detector, which is done by disconnecting the grid cap of the 224 first detector and connecting the high side of the test oscillator to the control grid of this tube. The ground side of the test oscillator should be connected to the ground post on the chassis. Set the oscillator at 175 kilocycles and adjust the output of the oscillator so that a convenient reading is obtained on the output meter. Be sure that the output from the oscillator is not so large that it will overload the second detector. If during the alignment the meter goes off scale, reduce the output of the test oscillator or adjust the receiver volume control.

The trimmers of the intermediate coils are accessible through the small holes in the bottom of the chassis. There are two trimmers to each intermediate coil. Align the grid trimmer of the first intermediate coil. After a maximum reading is obtained by adjusting the grid trimmer on the first intermediate, adjust the primary for maximum reading and then recheck the grid side to make certain the alignment of the secondary has not been changed by the adjustment of the primary. The same procedure is followed in aligning the second intermediate coils. After both intermediate coils are properly aligned the adjustment of the intermediate stage is complete and they should not be further disturbed.

Replace the grid cap on the first detector and connect the oscillator output leads to the antenna and ground posts of the receiver and set the oscillator at 1435 kilocycles. Then tune the receiver to 1435 kilocycles on the dial. It is important that the receiver be tuned to this point. If the receiver is out of the cabinet it will be necessary to use some temporary indicator so that the position 1435 kilocyles on the the dial may be accurately located. (This indicator should be set so that when the variable condensers are at the maximum capacity stop the indicator points to the last line on the dial at the low frequency end.) Then track the variable condensers by adjusting the trimmer condensers in the following order: Oscillator, antenna and radio frequency - (reading from the front of the receiver toward the back, the variable condenser sections are: Oscillator, antenna and radio frequency). After the variable condensers have been properly tracked at 1435 kilocycles, adjust the oscillator to 1295 kilocycles. Tune the receiver to this frequency. Check alignment of the condensers at this point by bending the end plate of the rotors in and out, noting the change in reading on the output meter. If when the plates are bent in the reading is increased, it is an indication that that particular section requires more capacity and the end plate should be permanently bent in at this point; or, if when the end plate is bent away the reading is increased, the end plate should be bent away permanently, as it is an indication that that particular section requires less capacity at that particular point. The variable condensers should be checked in this manner at 1295, 880, 650 and 550 kilocycles. These points have been chosen so as to take advantage of the slots in the end plates of the variable condensers. This procedure of bending plates should rarely be necessary on the oscillator section, as the plates of the oscillator section are especially designed to properly track over the broadcast spectrum, providing the antenna and radio frequency stages are correctly aligned.

Tube Voltages

Type of tube	Position of Tube	Filament Volts	B Volts	C Volts	Normal Plate M.A.	Screen Volts
227	Oscillator	2.4	62.5		4.75	
235	Radio Frequency	2.4	240	2.15	2.75	27
224	1st Detector	2.4	230	4,35	.5	65
235	Intermediate	2.4	237	2.15	2.75	72
227	2nd Detector	2.4				
247	Pentode	2.4	220	8.**	32.5	250
247	Pentode	2.4	220	8.**	32.5	250
280	Rectifier	4.9			47.5 ea.plate	
224	1st Audio	2.4	100	2.1*	.5	35*

115 V. line Volume Control Full On

**To read the 247 bias, read between 247 grid and ground.

*These readings are only comparative and are not true voltages applied. The volt meter, when the readings are taken at these points, is in series with a very high resistance.

MODEL 114
Schematic

SENTINEL RADIO CORP.

PEAK FREQUENCY = 175 K.C.

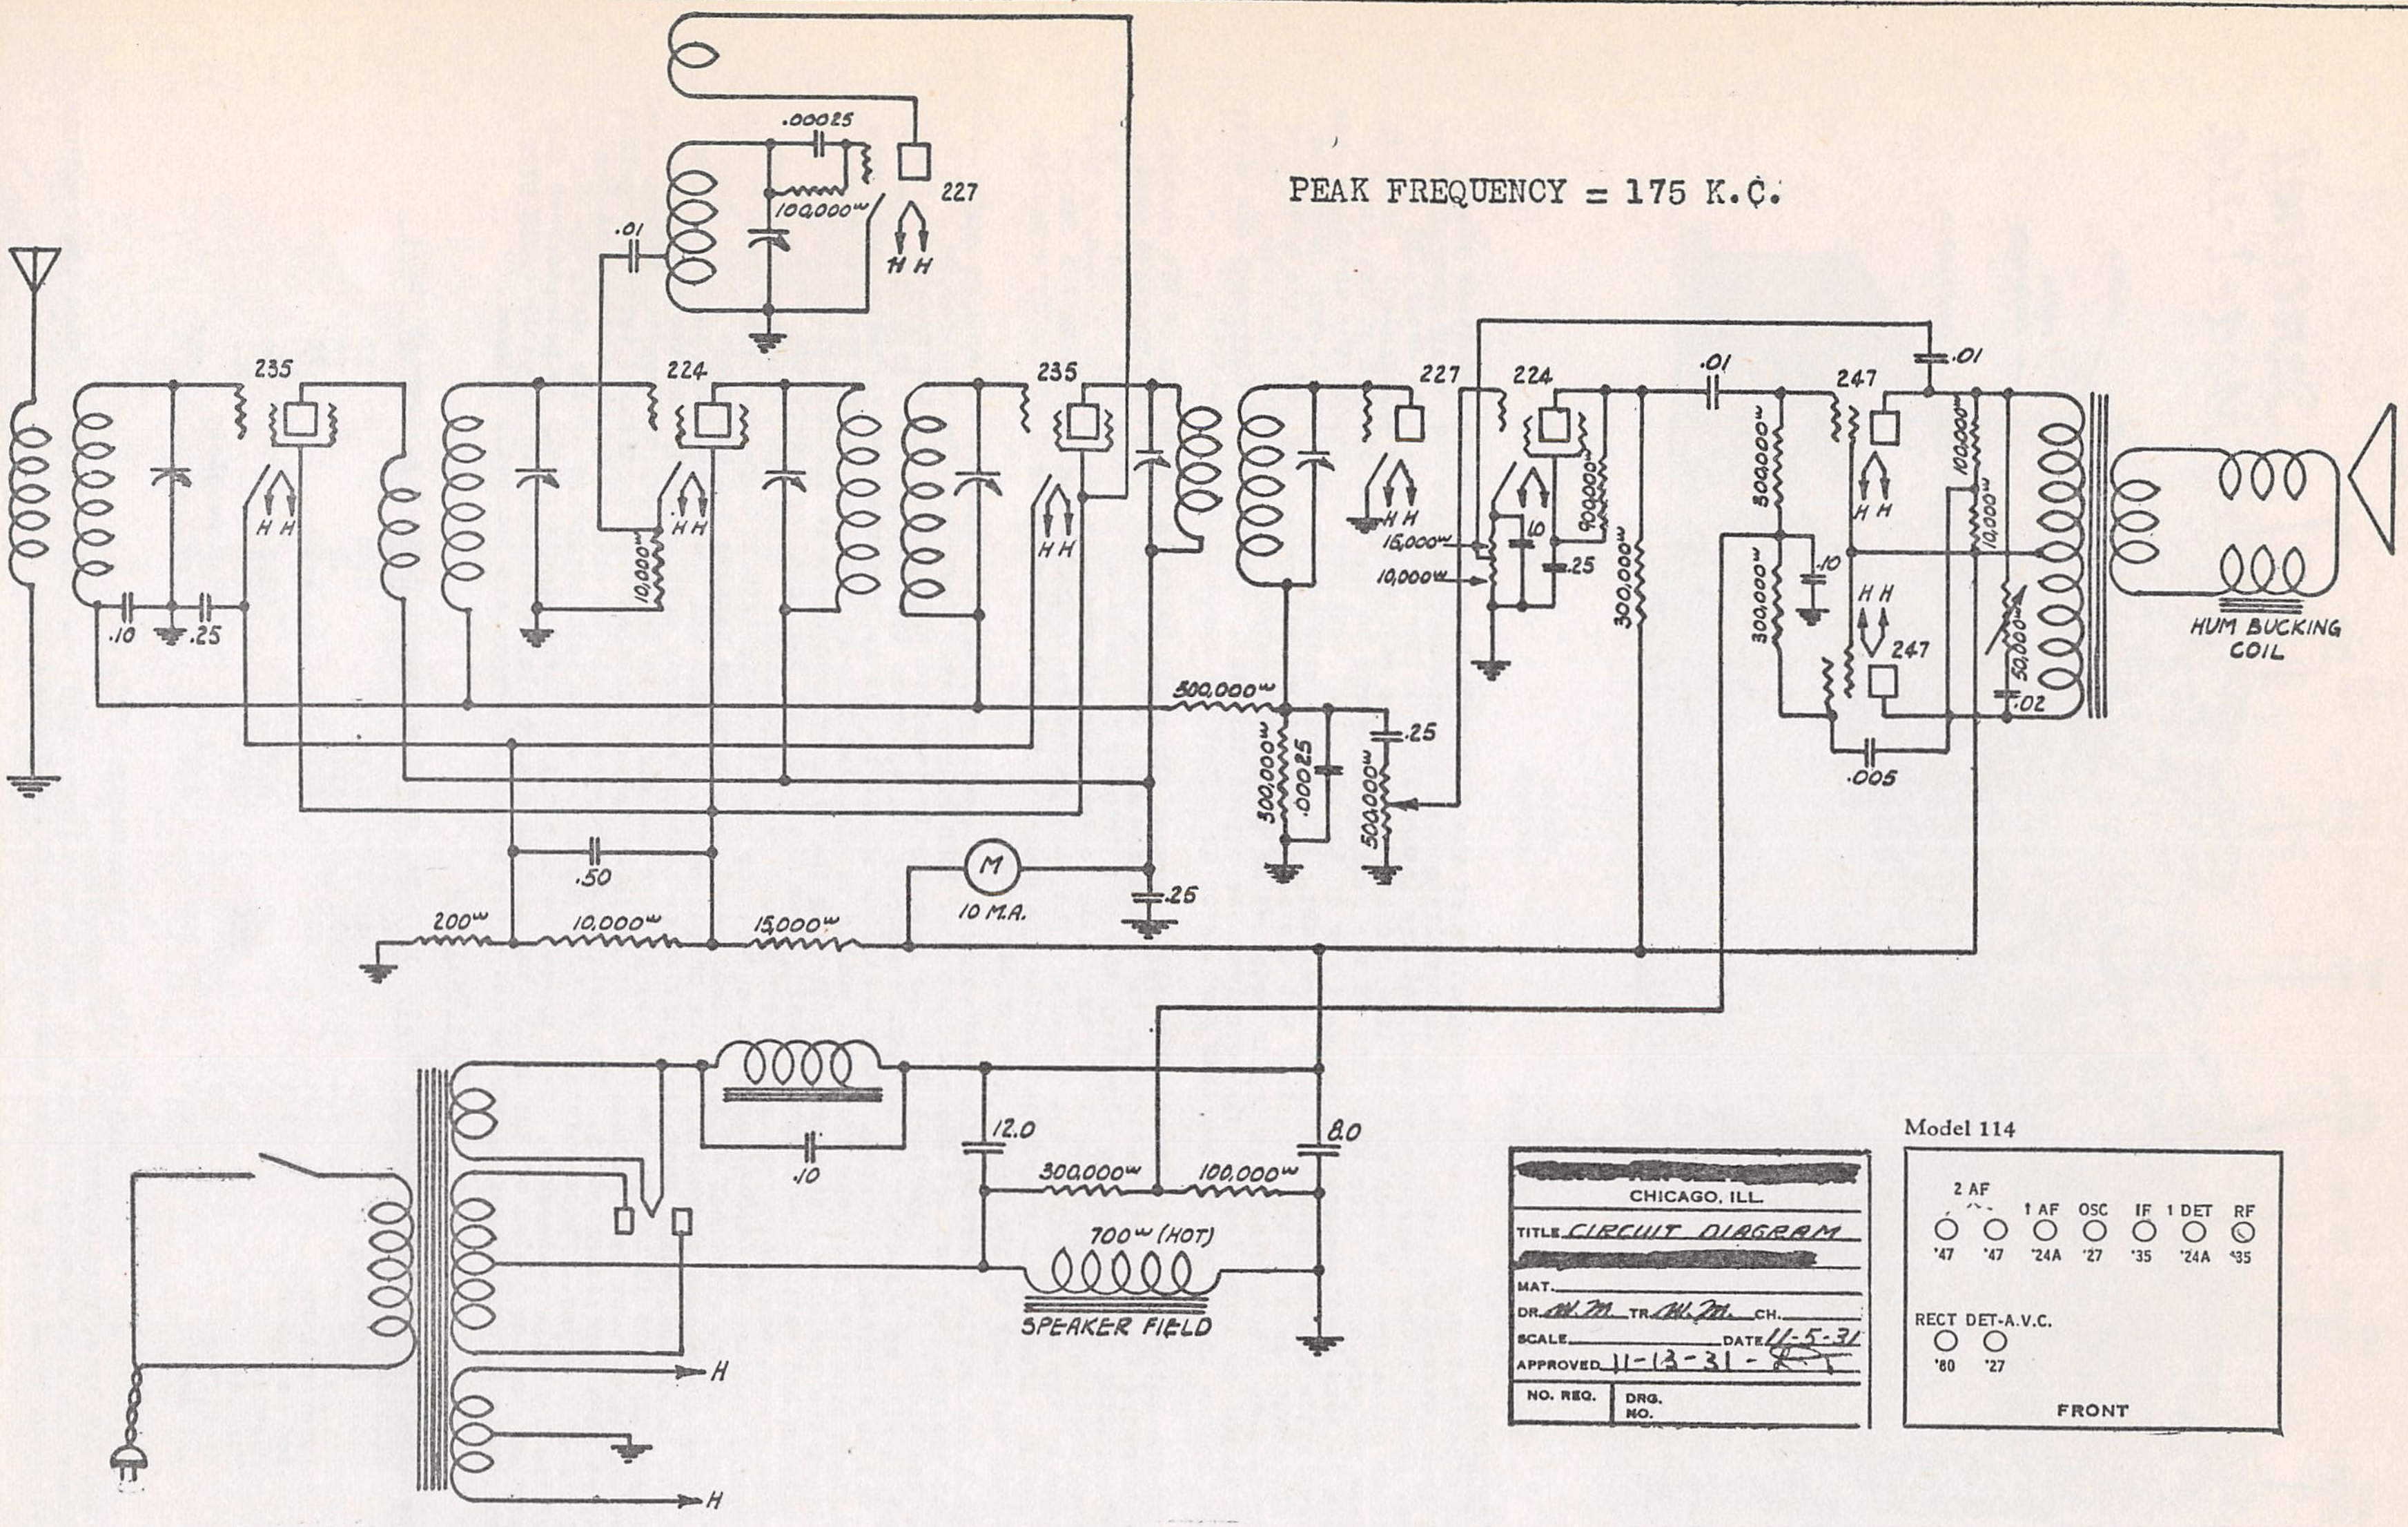
235
224
235
227
224
227
247
247
H H
.00025
100,000w
.01
10,000w
.10
.25
15,000w
10,000w
900,000w
.25
300,000w
500,000w
300,000w
500,000w
.0025
500,000w
.25
100,000w
10,000w
50,000w
.02
.005
HUM BUCKING COIL
.50
200w
10,000w
15,000w
M
10 M.A.
.25
12.0
8.0
.10
300,000w
100,000w
700w (HOT)
SPEAKER FIELD
H
H
Model 114
2 AF
1 AF
OSC
IF
1 DET
RF
'47
'47
'24A
'27
'35
'24A
'35
RECT
DET-A.V.C.
'80
'27
FRONT

[redacted]
CHICAGO, ILL.
TITLE CIRCUIT DIAGRAM
[redacted]
MAT.
DR. W.M. TR. W.M. CH.
SCALE DATE 11-5-31
APPROVED 11-13-31 -
NO. REQ. DRG. NO.

ELECTRO DYNAMIC SPEAKER:
The electro dynamic speaker field winding, which is 700 ohms, is utilized as an additional choke in the filter circuit. The correct bias for the two 247 output tubes is obtained from the voltage drop across the speaker field shunt resistors.

MODEL 513

SENTINEL RADIO CORP.

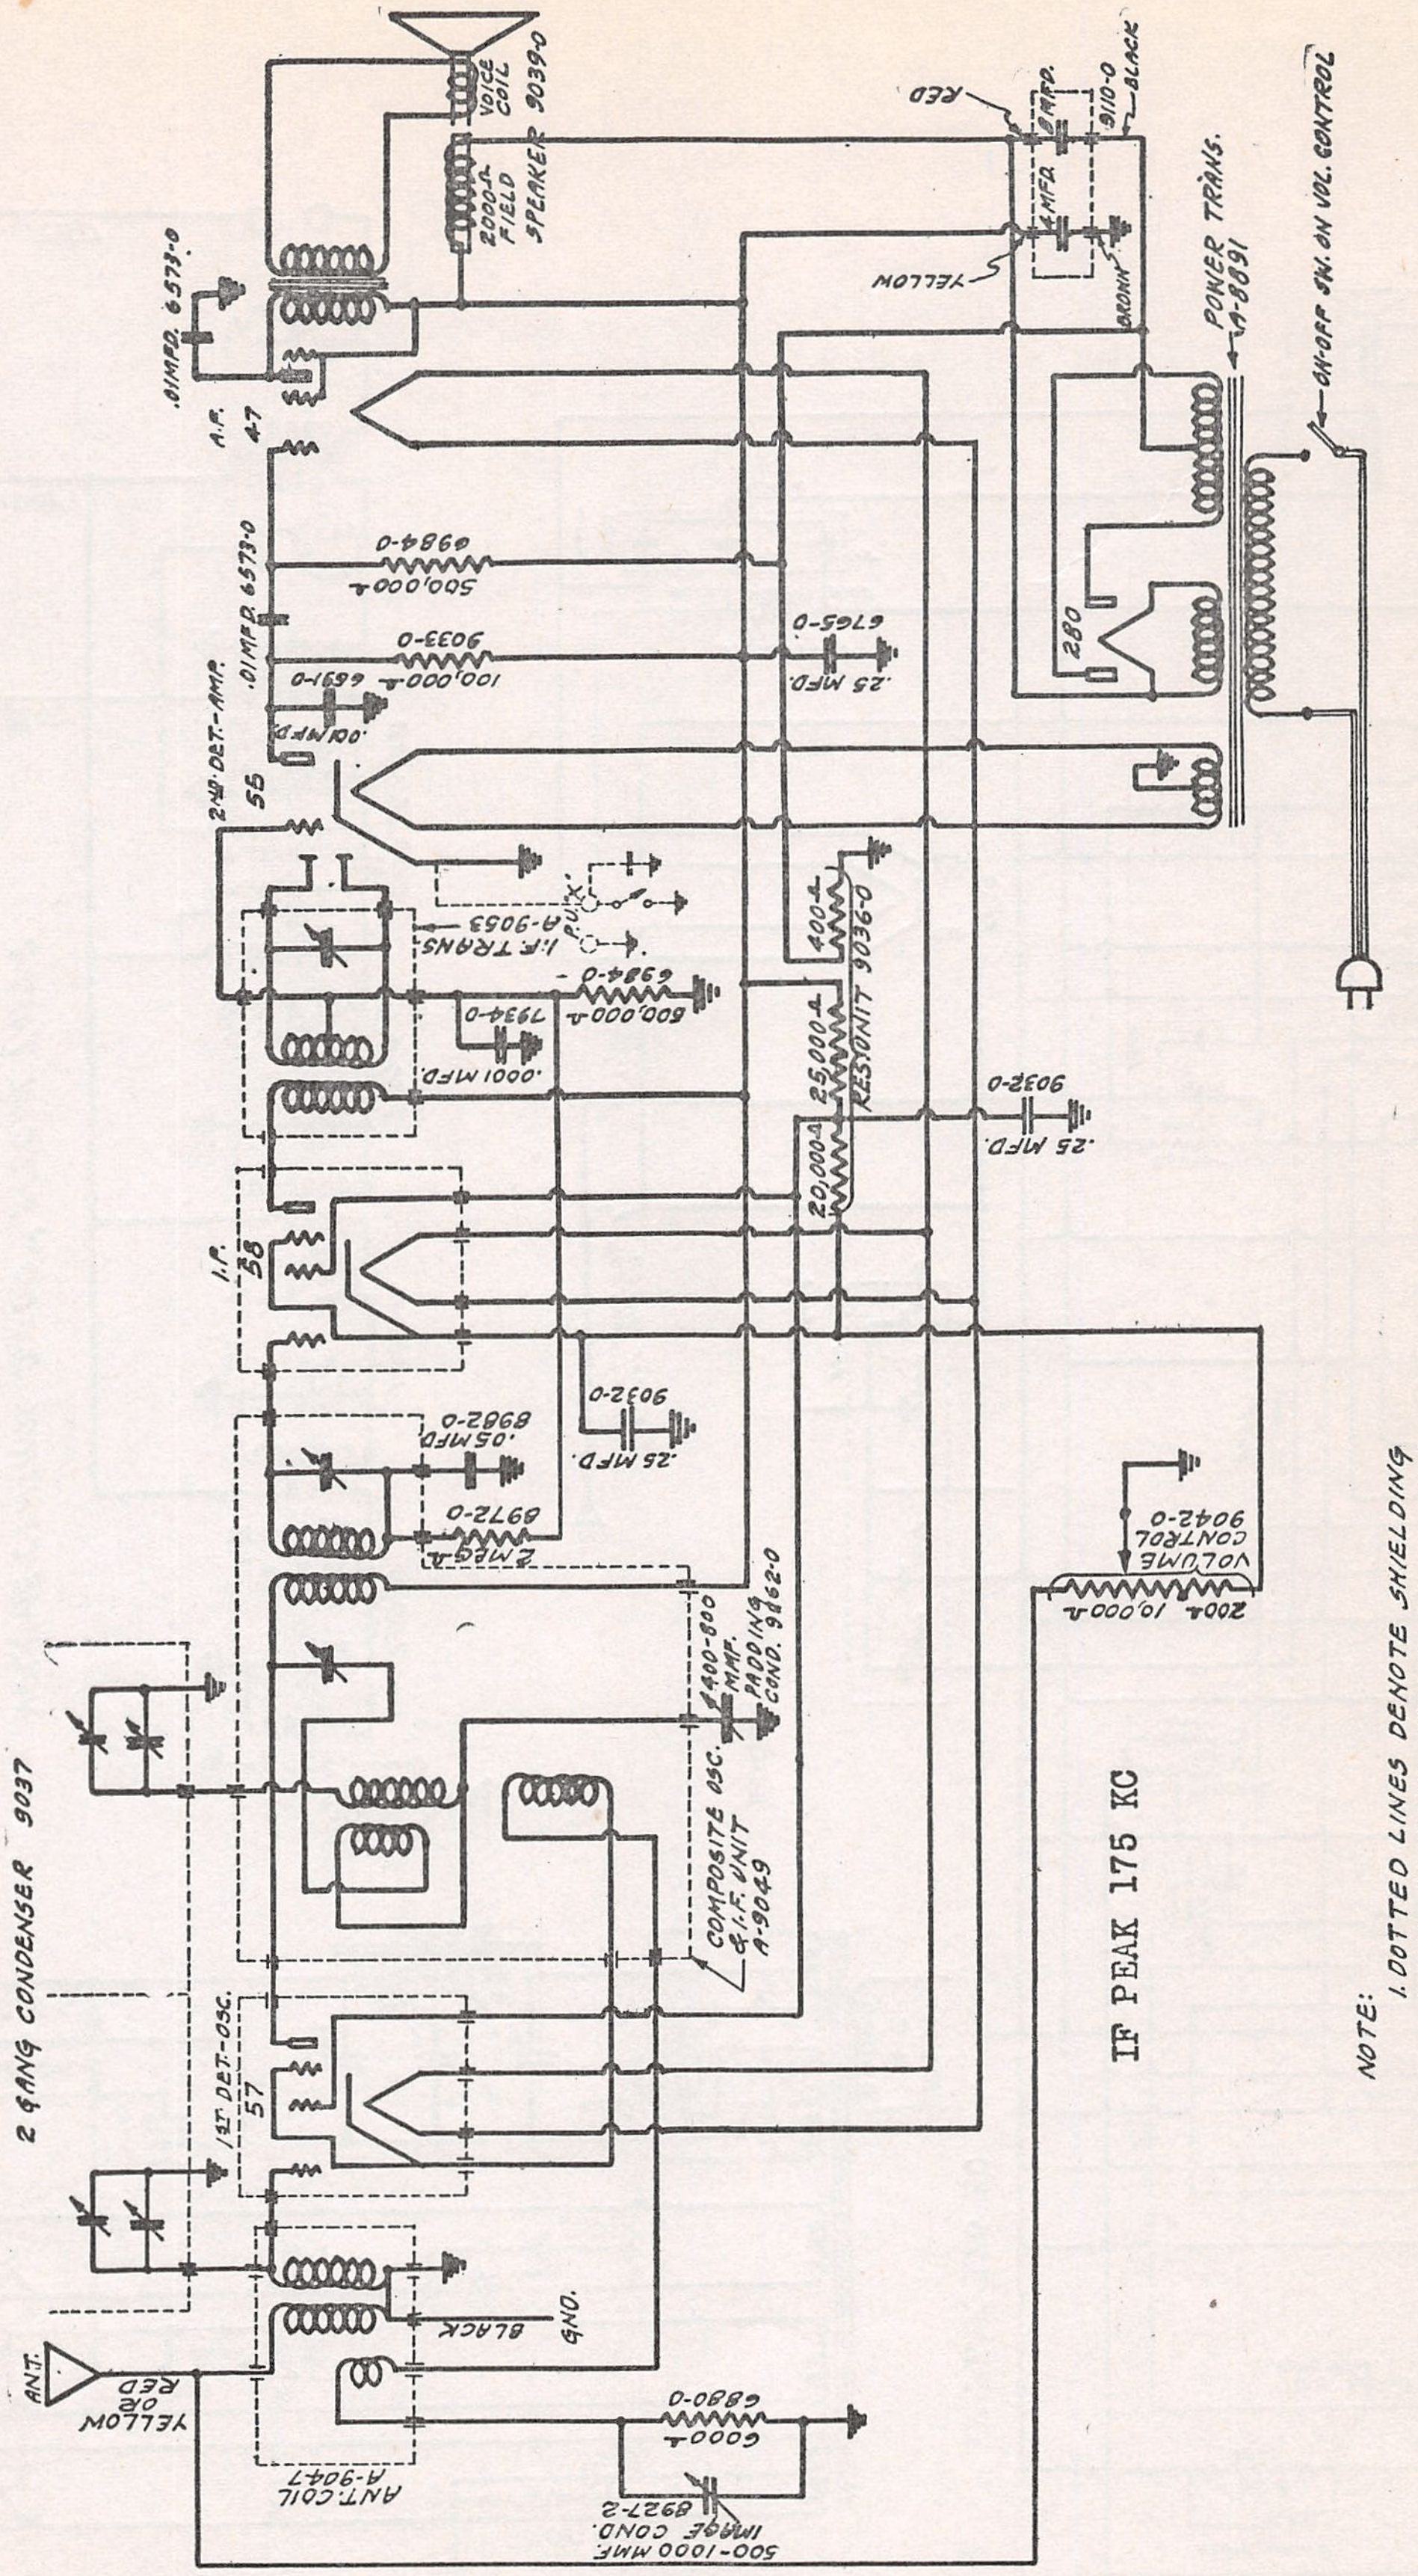
VOICE COIL
2000Ω FIELD
SPEAKER 9039-0
RED
8 MFD.
9110-0
BLACK
4 MFD.
YELLOW
BROWN
POWER TRANS. A-8891
ON-OFF SW. ON VOL. CONTROL
280
.01MFD. 6573-0
A.F. 47
500,000Ω 6984-0
.01MFD. 6573-0
100,000Ω 9033-0
.25 MFD. 6765-0
.001MFD. 6631-0
2ND DET.-AMP. 55
P.U. X
I.F. TRANS A-9053
500,000Ω 6984-0
.0001 MFD. 7934-0
400Ω
25,000Ω
20,000Ω
RESONIT 9036-0
.25 MFD. 9032-0
I.F. 58
.25 MFD. 9032-0
.05MFD. 8982-0
2 MEG. Ω 6972-0
400-800 MMF. PADDING COND. 9162-0
COMPOSITE OSC. & I.F. UNIT A-9049
VOLUME CONTROL 9042-0
200Ω 10,000Ω
2 GANG CONDENSER 9037
1ST DET.-OSC. 57
ANT.
YELLOW OR RED
BLACK
GND.
ANT. COIL A-9047
6000Ω 6880-0
500-1000 MMF. IMAGE COND. 8927-2

IF PEAK 175 KC

NOTE:

1. DOTTED LINES DENOTE SHIELDING
2. ALL NUMBERS SHOWN RELATIVE TO PARTS ARE OUR PART NOS.
3. NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
4. WHEN PHONO. JKS. ARE USED CATHODE OF 55 TUBE IS CONNECTED TO POINT MARKED "X"

MODEL 31,33
MODEL 550

SENTINEL RADIO CORP.

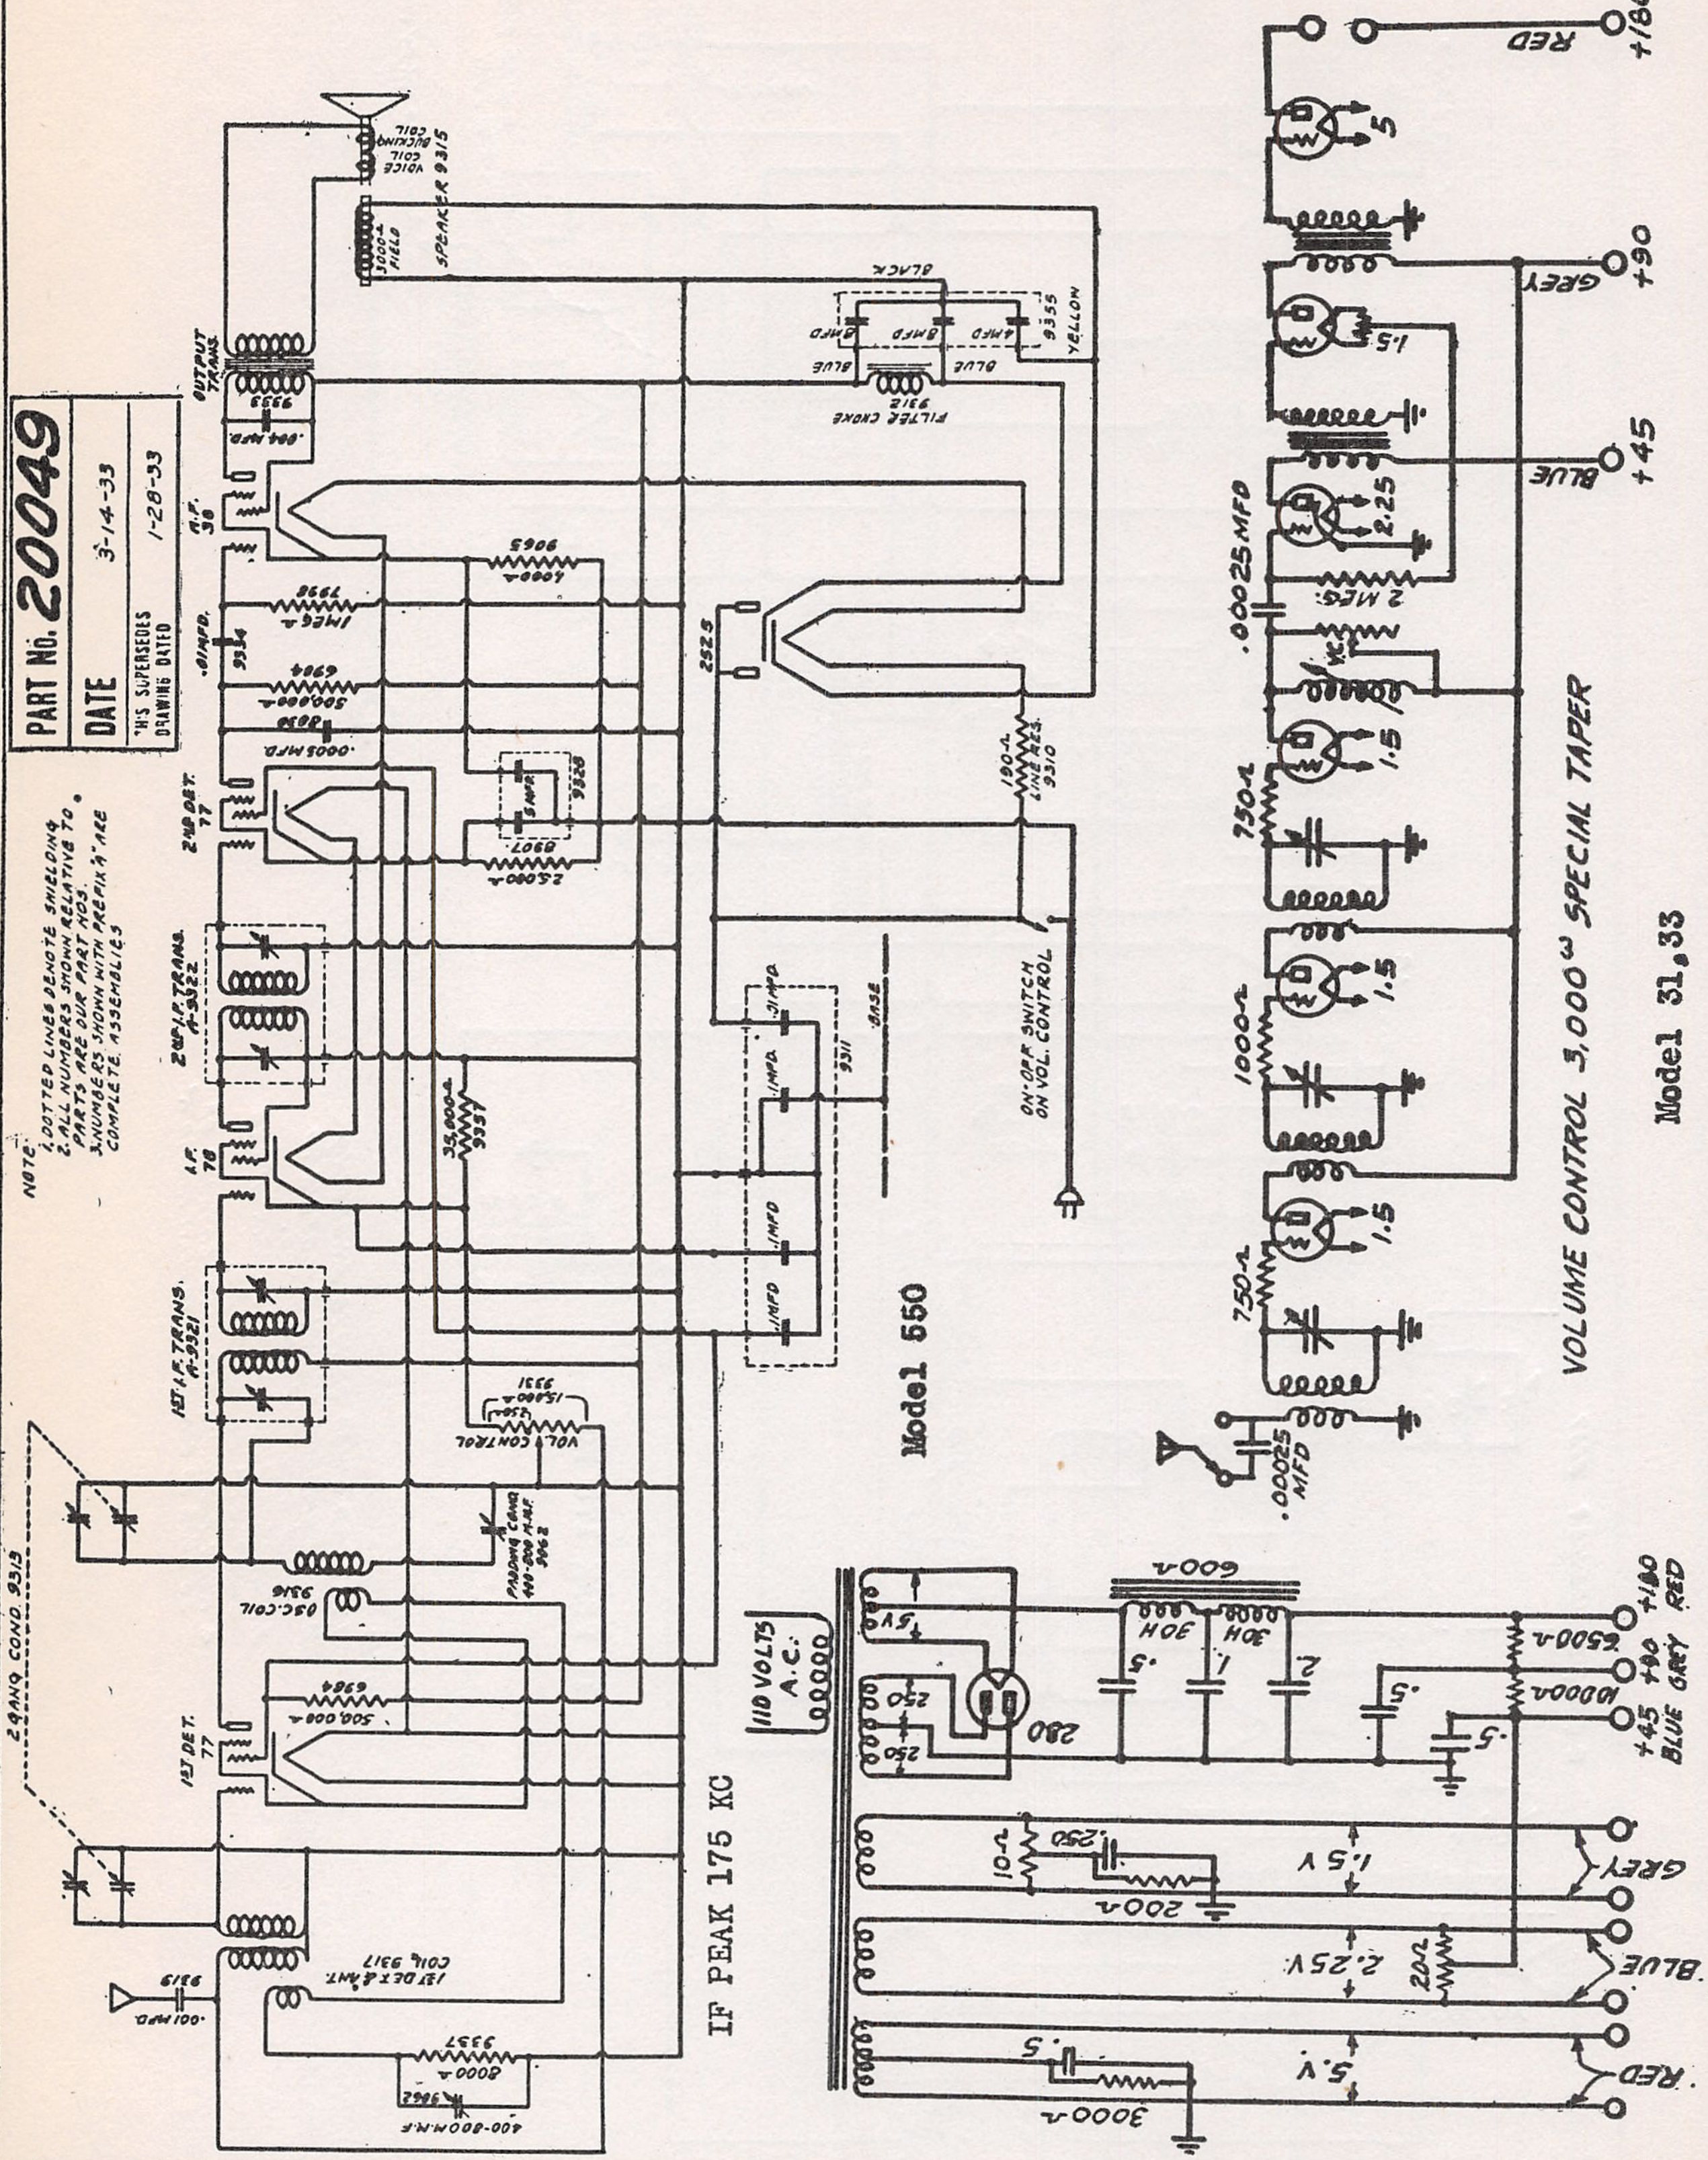
PART No. 20049
DATE 3-14-33
THIS SUPERSEDES DRAWING DATED 1-28-33
NOTE: 1. DOTTED LINES DENOTE SHIELDING. 2. ALL NUMBERS SHOWN RELATIVE TO PARTS ARE OUR PART NOS. 3. NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES
1ST DET. 77
1ST I.F. TRANS. A-9321
I.F. 78
2ND I.F. TRANS. A-9322
2ND DET. 77
A.F. 38
OUTPUT TRANS.
SPEAKER 9315
FIELD
VOICE COIL
BUCKING COIL
FILTER CHOKE 9312
BLACK
BLUE
YELLOW
8MFD
2525
ON-OFF SWITCH ON VOL. CONTROL
VOL. CONTROL
OSC. COIL 9316
1ST DET. & ANT. COIL 9317
2 GANG COND. 9313
PADDING COND.
BASE
IF PEAK 175 KC
Model 550
110 VOLTS A.C.
280
30H
600Ω
6500Ω
10000Ω
+45 BLUE
+90 GREY
+180 RED
1.5 V
2.25 V
5 V
GREY
BLUE
RED
200Ω
3000Ω
750Ω
1000Ω
2 MEG.
.00025 MFD
VOLUME CONTROL 3,000Ω SPECIAL TAPER
Model 31,33

SENTINEL RADIO CORP.

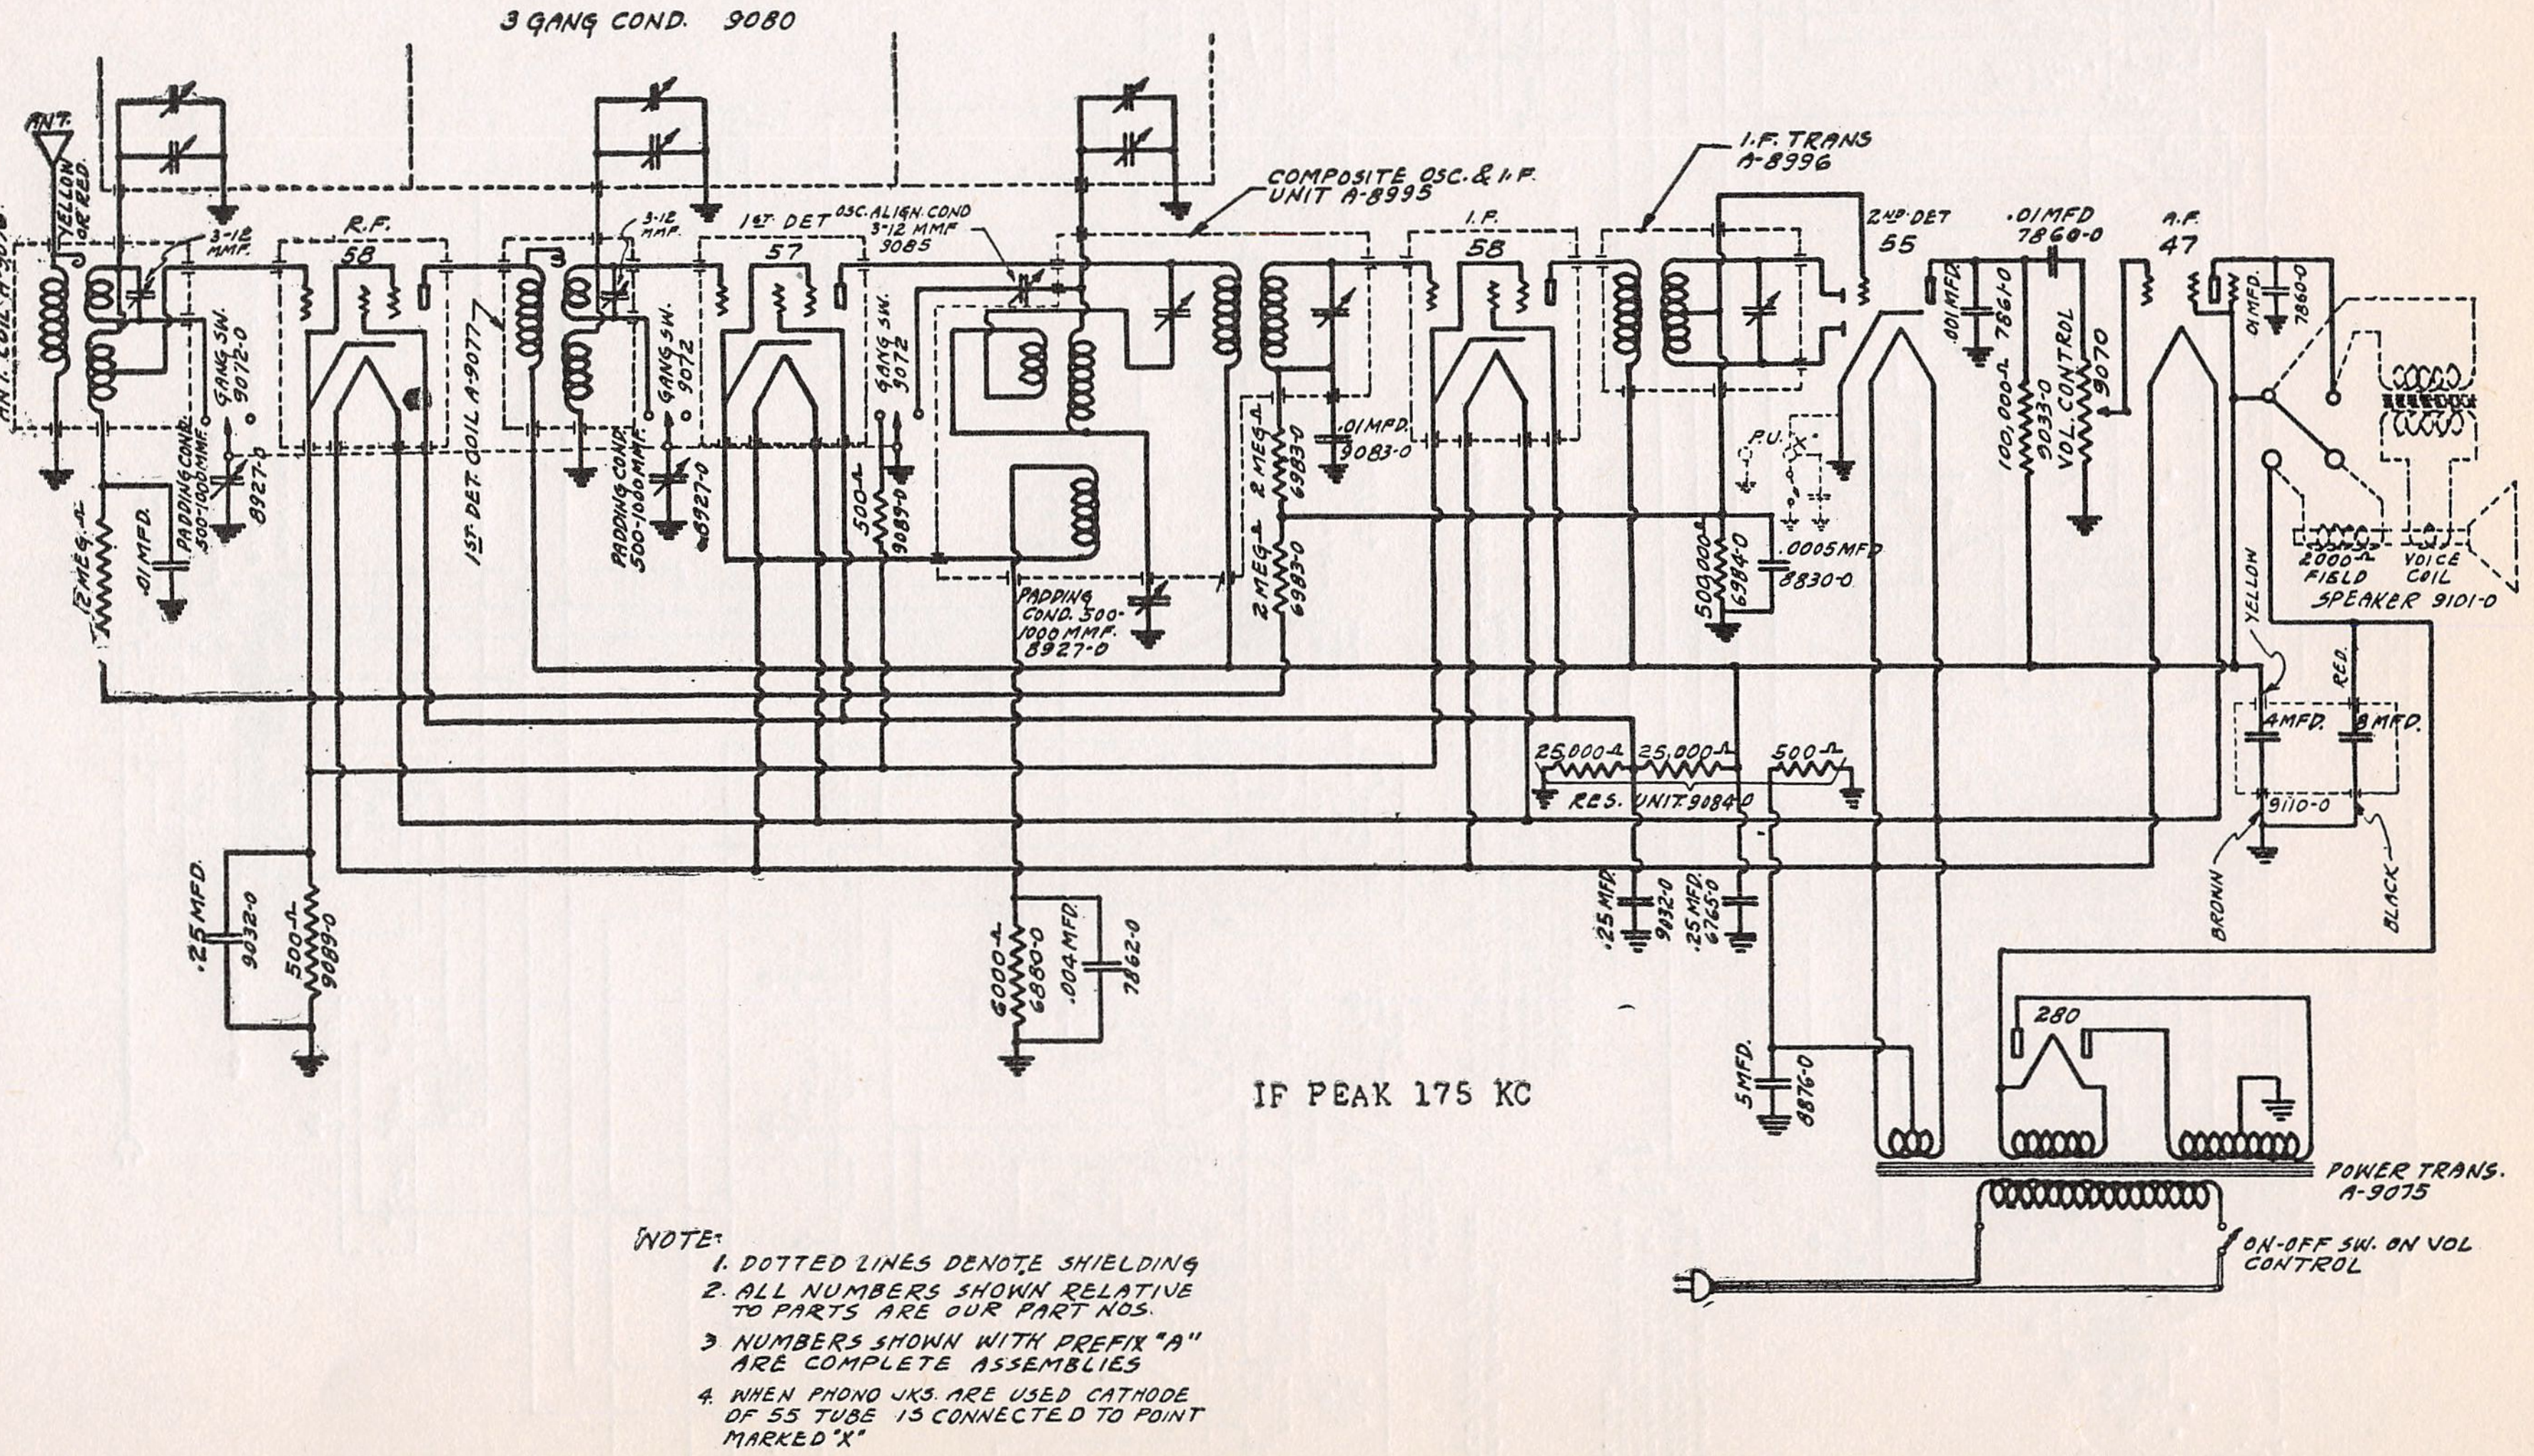
3 GANG COND. 9080
ANT.
YELLOW OR RED
ANT. COIL A-9076
3-12 MMF.
GANG SW. 9072-0
PADDING CONP. 500-1000 MMF.
8927-0
12 MEG.-Ω
.01 MFD.
R.F. 58
1ST DET. COIL A-9077
3-12 MMF.
GANG SW. 9072
PADDING CONP. 500-1000 MMF.
8927-0
1ST DET 57
OSC. ALIGN. COND 3-12 MMF 9085
GANG SW. 9072
500-Ω 9089-0
PADDING COND. 500-1000 MMF. 8927-0
COMPOSITE OSC. & I.F. UNIT A-8995
2 MEG-Ω 6983-0
2 MEG-Ω 6983-0
.01 MFD. 9083-0
I.F. 58
I.F. TRANS A-8996
2ND DET 55
P.U.
X
500,000-Ω 6984-0
.0005 MFD 8830-0
.001 MFD. 7861-0
.01 MFD 7860-0
100,000-Ω 9033-0
VOL. CONTROL 9070
A.F. 47
.01 MFD. 7860-0
2000-Ω FIELD
VOICE COIL
SPEAKER 9101-0
YELLOW
RED.
4 MFD.
8 MFD.
9110-0
BROWN
BLACK
25,000-Ω
25,000-Ω
RES. UNIT 9084-0
500-Ω
.25 MFD. 9032-0
.25 MFD. 6765-0
5 MFD. 8876-0
280
POWER TRANS. A-9075
ON-OFF SW. ON VOL CONTROL
.25 MFD. 9032-0
500-Ω 9089-0
6000-Ω 6880-0
.004 MFD. 7862-0

IF PEAK 175 KC

NOTE:
1. DOTTED LINES DENOTE SHIELDING
2. ALL NUMBERS SHOWN RELATIVE TO PARTS ARE OUR PART NOS.
3 NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES
4. WHEN PHONO JKS. ARE USED CATHODE OF 55 TUBE IS CONNECTED TO POINT MARKED "X"

SENTINEL RADIO CORP.

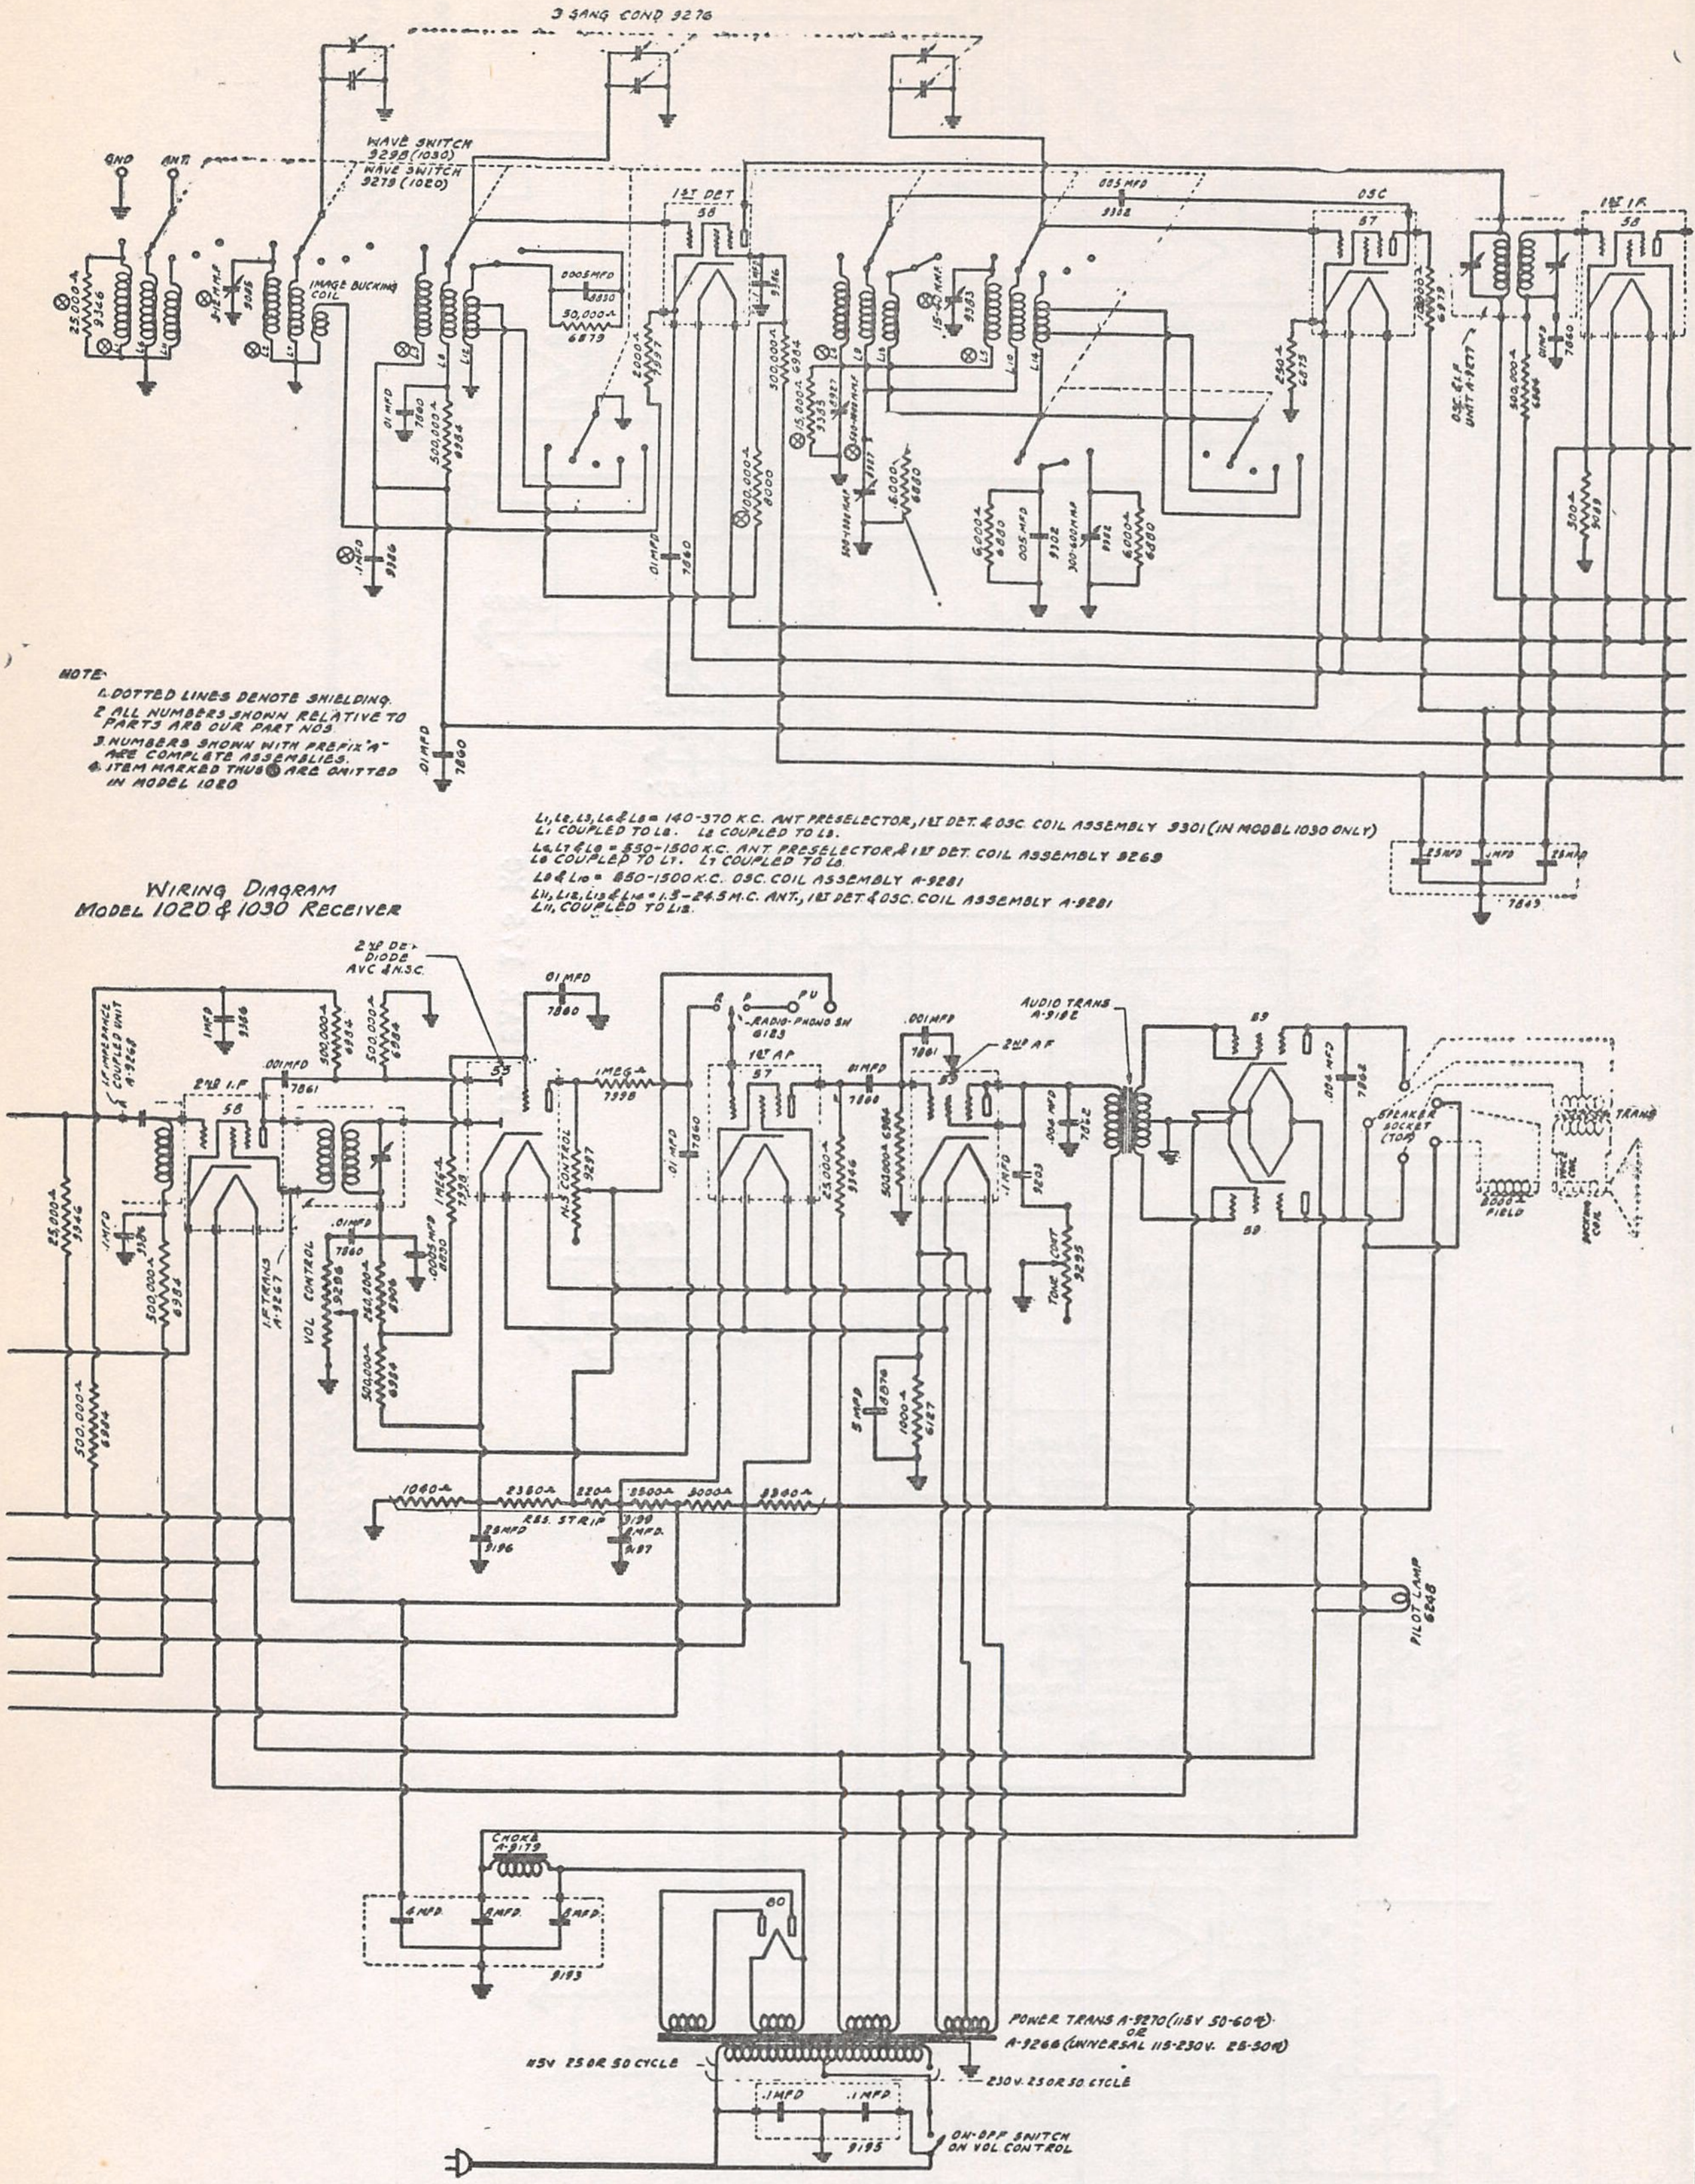
3 GANG COND 9276
GND
ANT.
WAVE SWITCH 9298 (1030)
WAVE SWITCH 9279 (1020)
IMAGE BUCKING COIL
1ST DET
58
OSC
57
1ST I.F.
58
2ND I.F.
58
2ND DET DIODE AVC & N.S.C.
55
1ST AF
57
2ND AF
56
AUDIO TRANS A-9182
89
89
RADIO-PHONO SW 6183
R
P
PU
SPEAKER SOCKET (TOP)
OUT. TRANS
8000 Ω FIELD
BUCKING COIL
PILOT LAMP 6208
I.F. IMPEDANCE COUPLED UNIT A-9268
I.F. TRANS A-9267
OSC. & I.F. UNIT A-9277
VOL CONTROL
N.S. CONTROL 9237
TONE CONT 9273
RES. STRIP
CHOKE A-9179
80
POWER TRANS A-9270 (115V 50-60~) OR A-9266 (UNIVERSAL 115-230V. 25-50~)
#54 25 OR 50 CYCLE
230V. 25 OR 50 CYCLE
ON-OFF SWITCH ON VOL CONTROL
4 MFD
8 MFD
8 MFD
9193
.1 MFD
.1 MFD
9195
.25 MFD
.1 MFD
.25 MFD
7869
1040 Ω
2360 Ω
220 Ω
2500 Ω
3000 Ω
3340 Ω
25 MFD 9196
20 MFD 9187
.01 MFD 7860
.001 MFD 7861
1 MFD 9386
500,000 Ω 6984
25,000 Ω 9346
1 MEG Ω 7998
5 MFD 9376
1000 Ω 6187
.005 MFD 9302
6,000 Ω 6880
300-600 MMF 9382
15,000 Ω 9353
250 Ω 6873
300 Ω 9171
50,000 Ω 6879
.0005 MFD 6880
2,500 Ω

NOTE:
1. DOTTED LINES DENOTE SHIELDING.
2. ALL NUMBERS SHOWN RELATIVE TO PARTS ARE OUR PART NOS.
3. NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.
4. ITEM MARKED THUS ⊗ ARE OMITTED IN MODEL 1020

L1, L2, L3, L4 & L5 = 140-370 K.C. ANT PRESELECTOR, 1ST DET. & OSC. COIL ASSEMBLY 9301 (IN MODEL 1030 ONLY)
L1 COUPLED TO L2. L2 COUPLED TO L3.
L6, L7 & L8 = 550-1500 K.C. ANT PRESELECTOR & 1ST DET. COIL ASSEMBLY 9269
L6 COUPLED TO L7. L7 COUPLED TO L8.
L9 & L10 = 550-1500 K.C. OSC. COIL ASSEMBLY A-9281
L11, L12, L13 & L14 = 1.5-24.5 M.C. ANT., 1ST DET. & OSC. COIL ASSEMBLY A-9281
L11 COUPLED TO L12.

WIRING DIAGRAM
MODEL 1020 & 1030 RECEIVER

MODEL 684

SILVER - MARSHALL, INC.

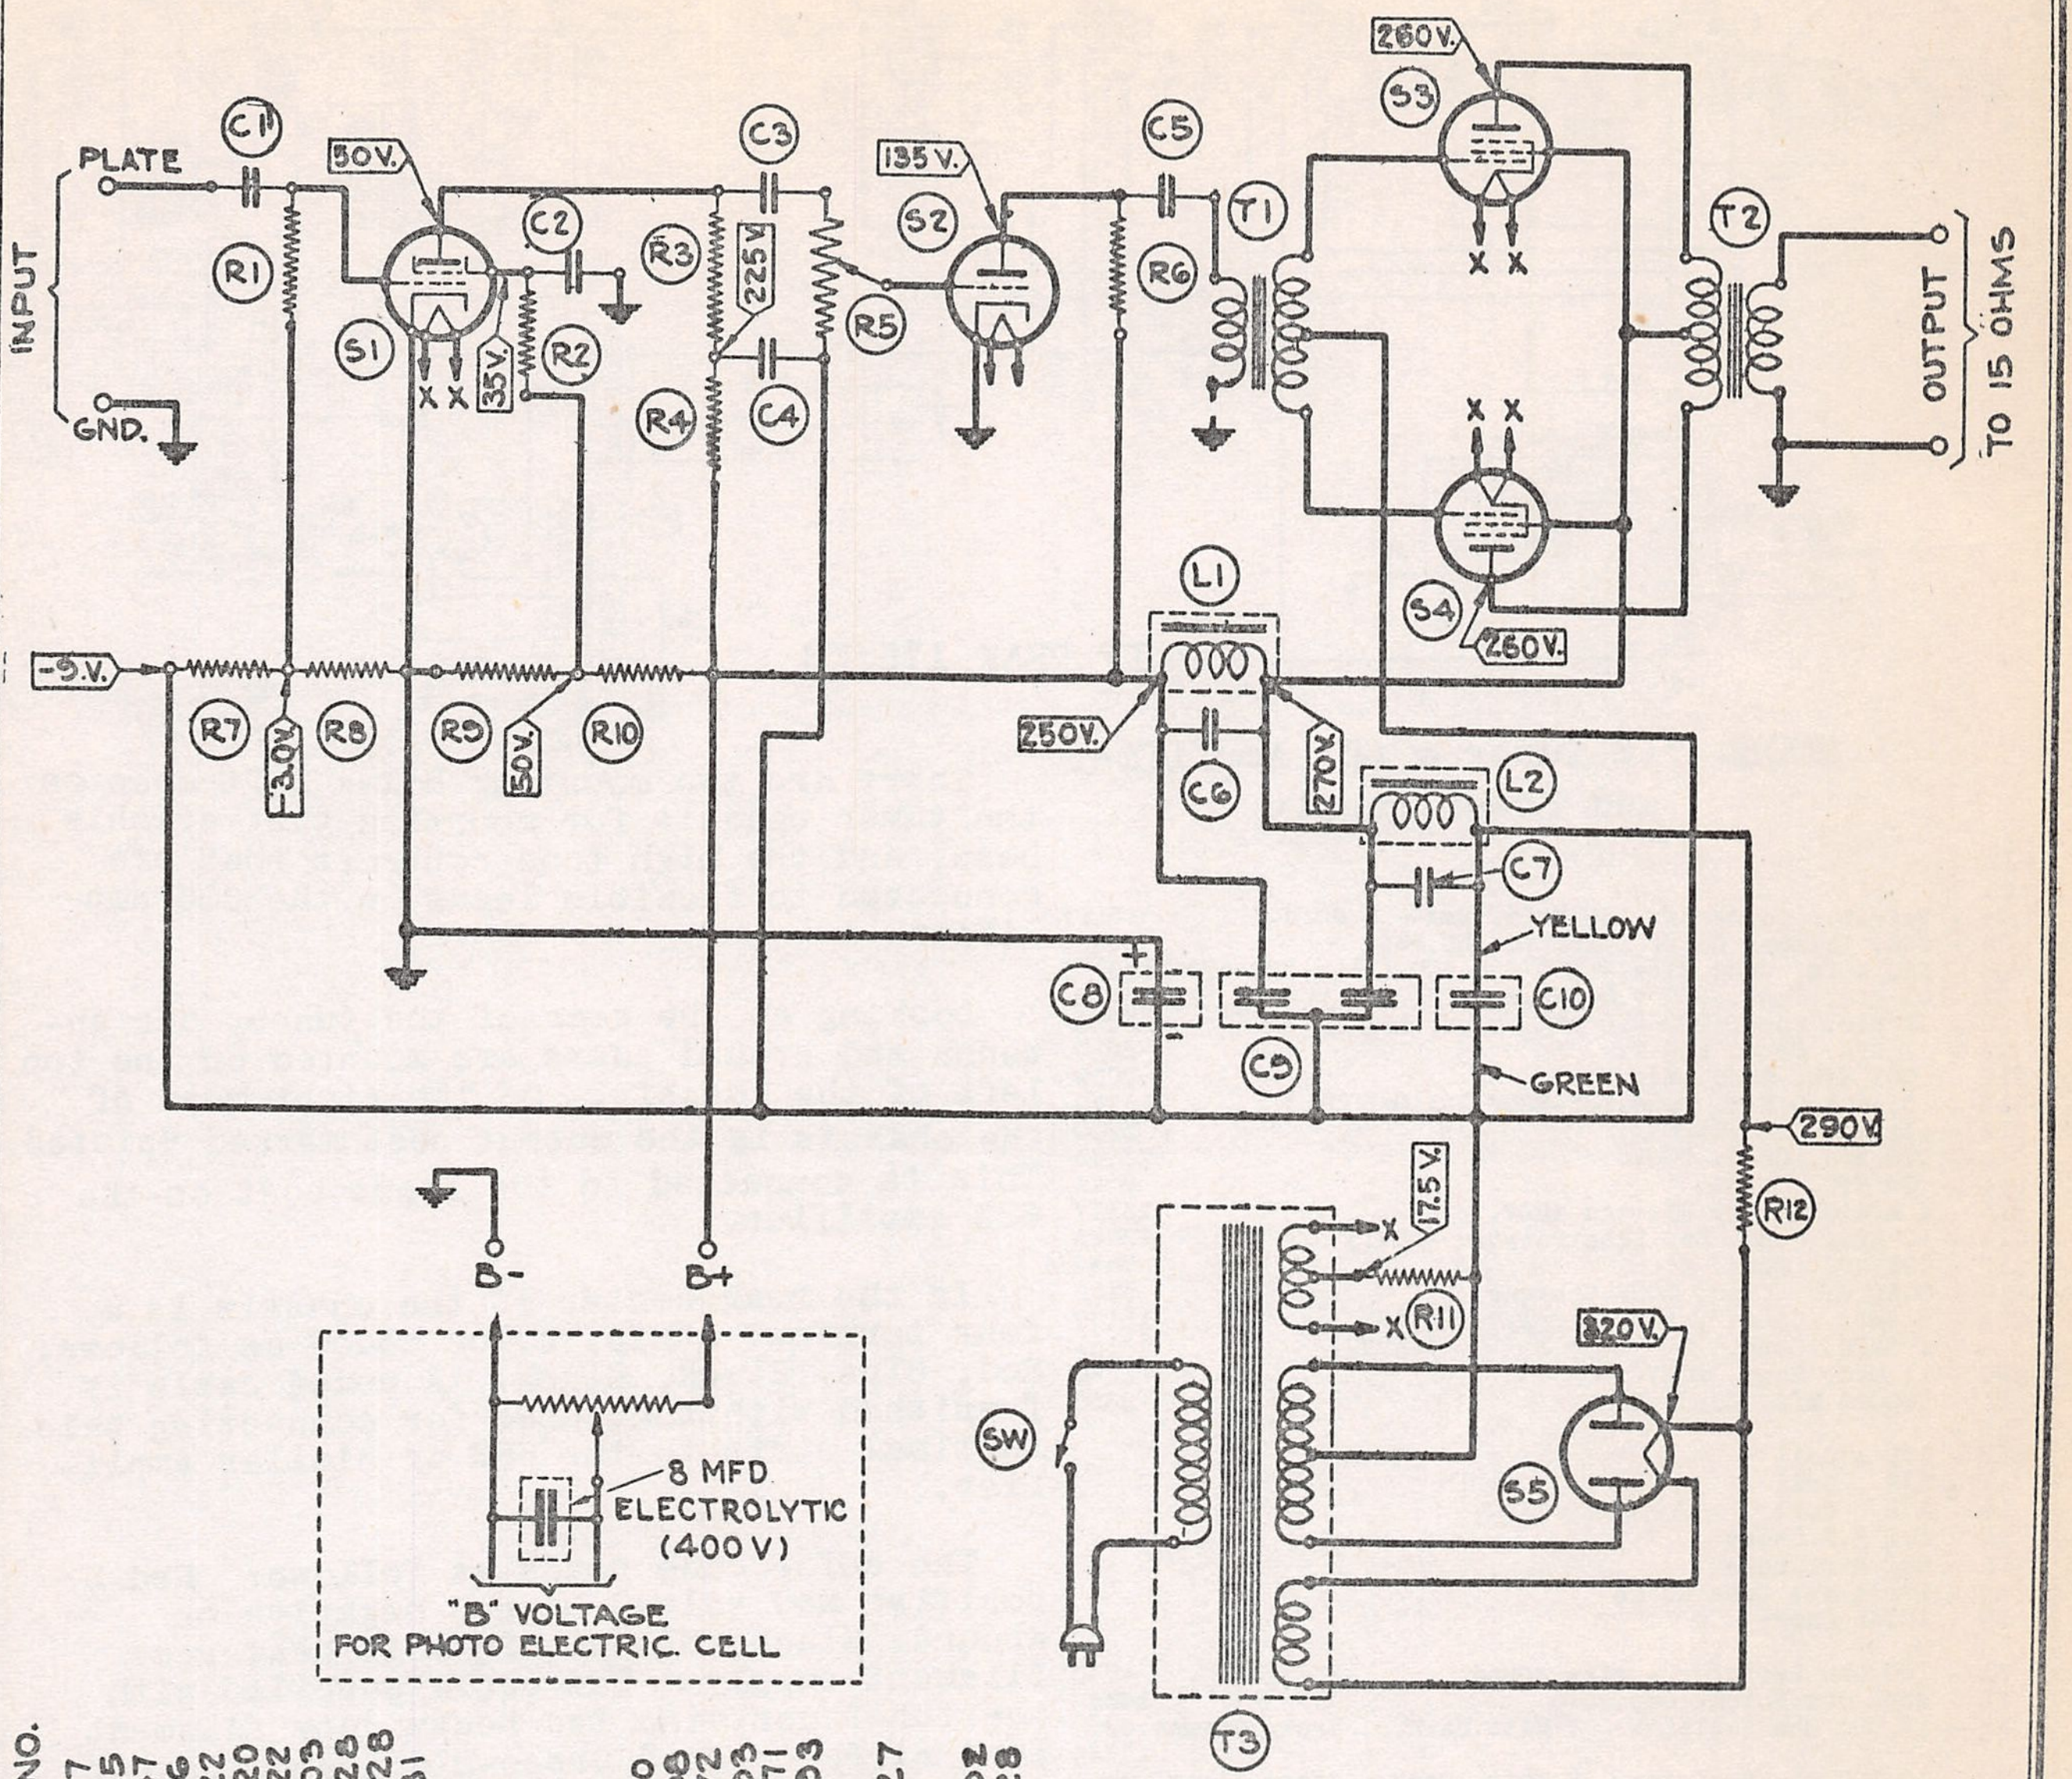
PLATE
INPUT
GND.
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
S1
S2
S3
S4
S5
T1
T2
T3
L1
L2
SW
50V.
35V.
225V.
135 V.
260V.
260V.
-5 V.
-3.0V.
50V.
250V.
270V.
290V.
17.5 V.
320V.
X X
YELLOW
GREEN
OUTPUT
TO 15 OHMS
B-
B+
8 MFD.
ELECTROLYTIC
(400 V)
"B" VOLTAGE
FOR PHOTO ELECTRIC. CELL

LEGEND

		P.P. NO.
C1 – .05 MFD.	SRAGUE (400 V.)	13127
C2 – 1.0 MFD.	(150V.)	3325
C3 – .01 MFD.	(MICA)	7047
C4 – 1.0 MFD.	(200 V.)	7116
C5 – .25 MFD.	SPRAGUE (750 V.)	3322
C6 – .1 MFD.	"	3220
C7 – .25 MFD.	"	3322
C8 – 10 MFD. ELECTROLYTIC (25 V.) DRY		13203
C9 – 2 MFD.(PAPER) (400 V.) 2 MFD.(PAPER)(400 V.)		3328 3328
C10 – 8 MFD. ELECTROLYTIC (450 V.) DRY		13181
L1 – 10145	CHOKE	
L2 – 339-U	CHOKE	
R1 – 2 MEGOHMS	1 WATT	4700
R2 – 60,000 OHMS	1 WATT	4698
R3 – ½ MEGOHM	1 WATT	4772
R4 – 30,000 OHMS	1 WATT	14693
R5 – 1 MEGOHM TAPERED VARIABLE RESISTOR		14371
R6 – 30,000 OHMS	1 WATT	14693
R7 – 250 OHMS R8 – 125 OHMS R9 – 2300 OHMS R10 – 11,300 OHMS	5 WATT	14727
R11 – 220 OHMS	2 WATT	14692
R12 – 300 OHMS	5 WATT	14728
S1 – '24		
S2 – '27		
S3 – '47		
S4 – '47		
S5 – '80		
SW – ON-OFF SWITCH		5485
T1 – 10159	INPUT TRANS.	
T2 – 10143	OUTPUT TRANS.	
T3 – 360-U	POWER TRANS	

SILVER - MARSHALL, INC.

MODEL 716
MODEL 683
Schematic, Data

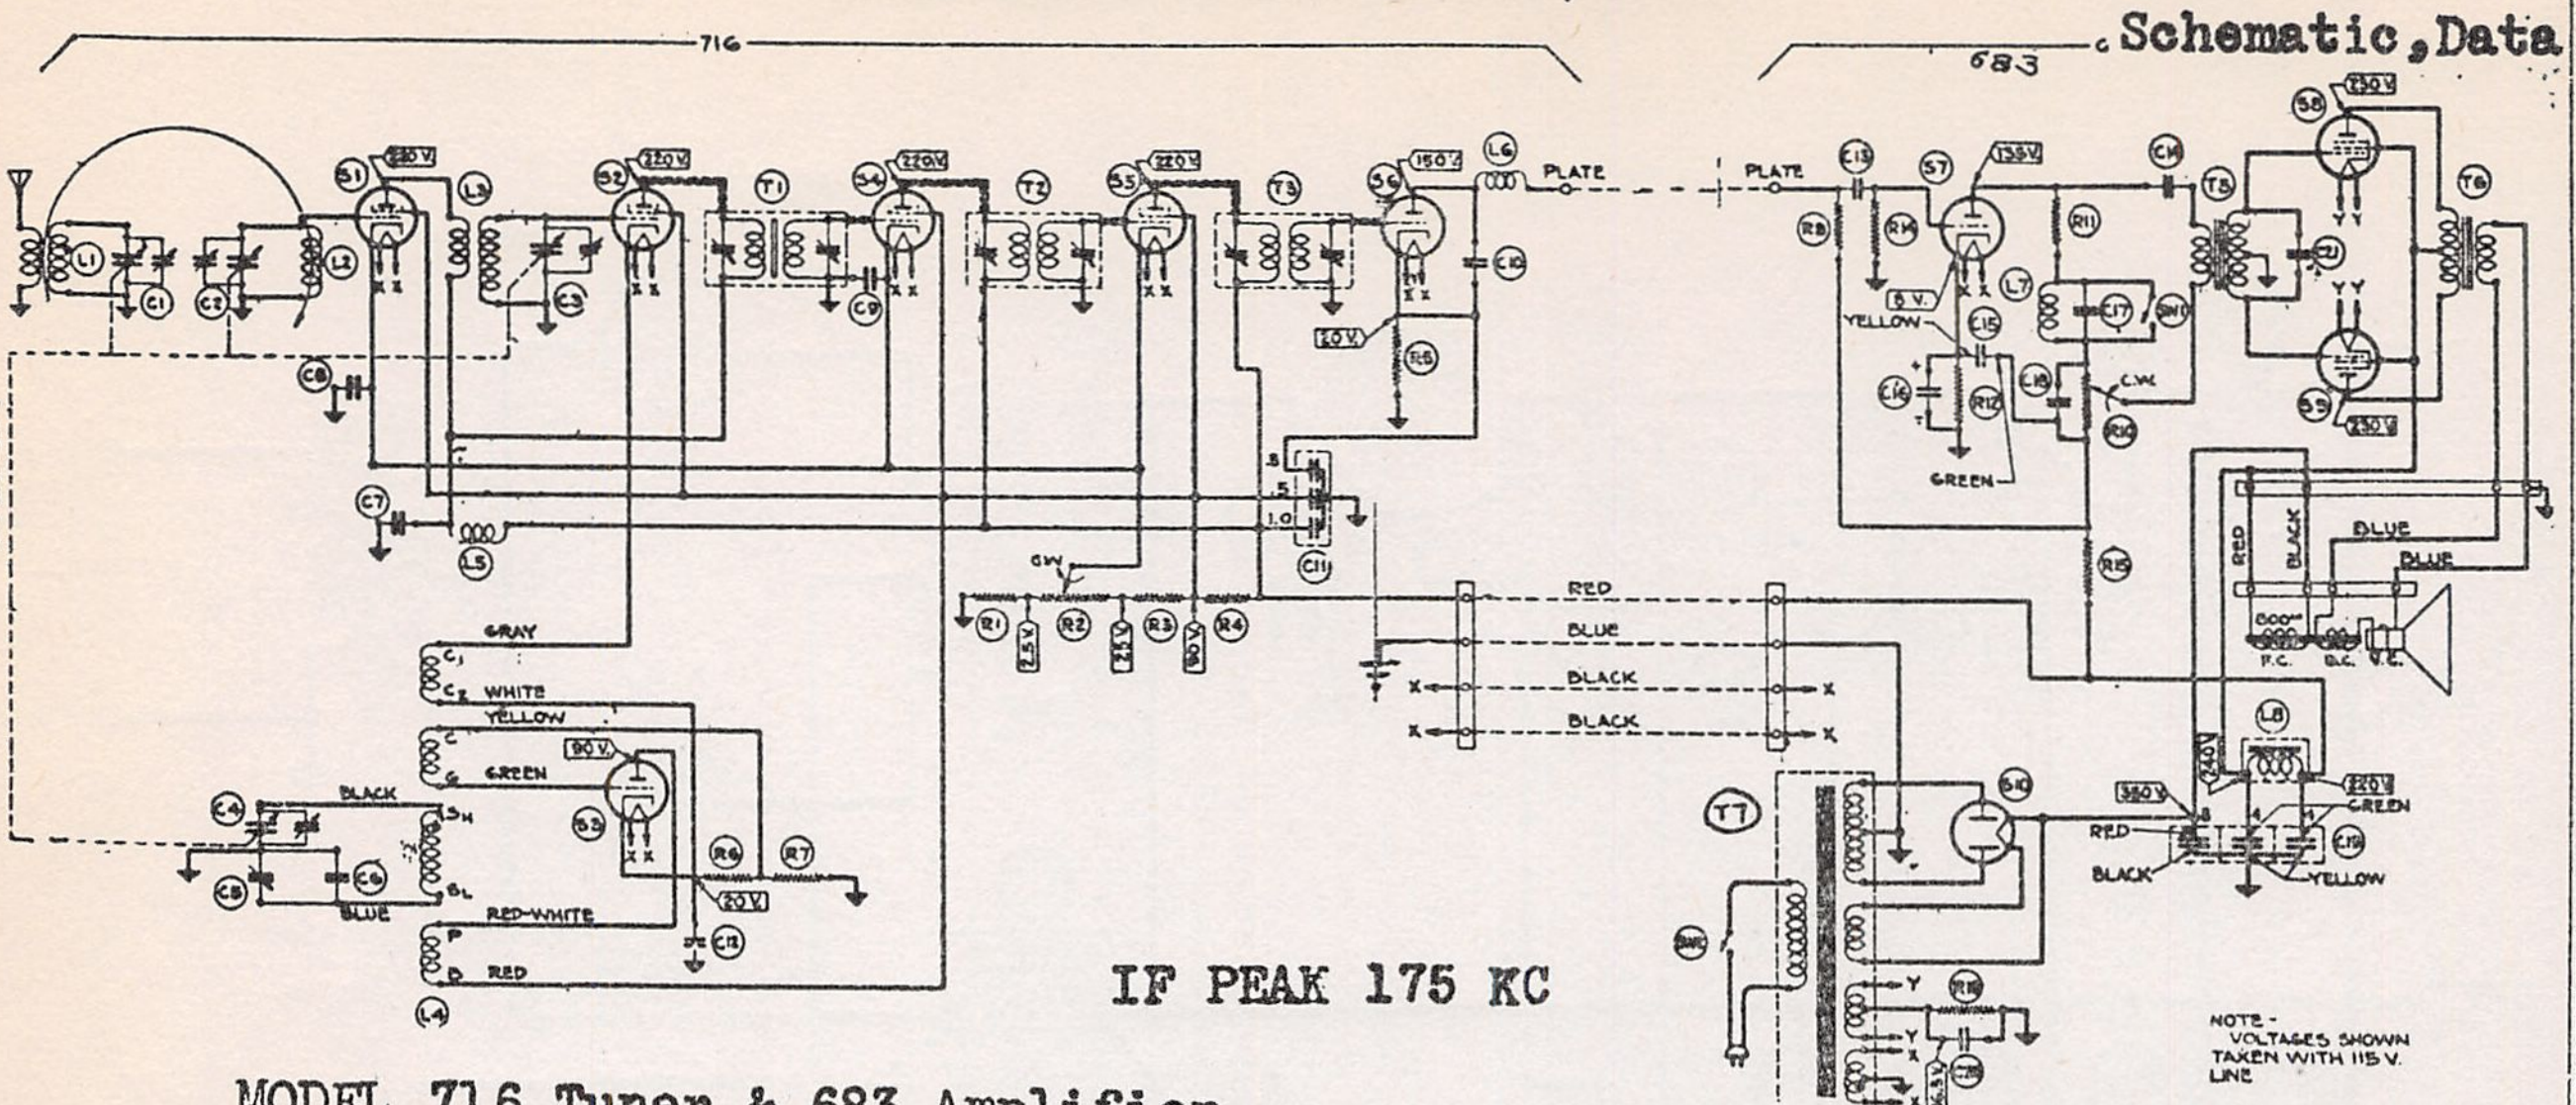

MODEL 716 Tuner & 683 Amplifier and Power Supply

C1 C2 C3 C4	Vairable Condenser 365 Mmfd. Max - 5 Mmfd.	13217
C5	Osc. Trimmer Cond. - 120 to 325 Mmf.	16035
C6	500 Mmfd. Cond.Mica - 10% 450-500 (Blue)500-550 (Red)	"
C7	.1 Mfd. Cond. 200 V.Sprague	3220
C8	.1 Mfd. Cond. 200 V. "	3220
C9	.1 Mfd. Cond. 200 V. "	3220
C10	.001 Mfd. Cond. Mica	7039
C11	.5,.5,1.0 Mfd. Cond.(.5-200V.)(1.0-300V.)	13140
C12	.1 Mfd. Cond. 200V.	3220
C13	.02 Mfd. Cond. 500V.	13195
C14	.04 Mfd. Cond.	7046
C15	4 Mfd.Cond.Dry Electro 450V.	13177
C16	10 Mfd. Cond. Dry Electrolytic (25V.)	13023
C17	.01 Mfd. Cond. Mica	7047
C18	0.25 Mfd. Cond. 500V.Sprague	3322
C19	2 4Mfd. Cond. Dry Electrolytic (450V.) 1 8Mfd. Cond. " " (450V.)	13177 13181
C20	.1 Mfd. Cond. 200V.	3220
C21	.00025 Mfd. Cond. Mica	3330
L1 L2	170 A Coil	
L3	178 Coil	
L4	179 Coil	
L5	281 R.F.Choke	
L6	281 R.F.Choke	
L7	10164 Air Cone Choke	
L8	10145 Choke	
R1	100 Ohm Resistor - wire wound	4743
R2	4500 Ohm Volume Control	14342
R3	13,000 Ohm Resistor - 1 Watt.Carbon, Brown,Orange,Or.	14694
R4	10,000 Ohm Resistor - 2 Watt. Carbon,Brown,Black, Or.	4726
R5	60,000 Ohm Resisto - 1 Watt. Carbon,Blue, Black, Or.	4698
R6 R7	100 Ohms 1700 Ohms } Wire wound tapped resistor No color	14723
R9	30,000 Ohm Resistor - 1 Watt.Carbon, Orange, Black,Or.	14693
R10	10,000 Potentiometer	4492
R11	720 Ohm Resistor - wire wound No color	4786
R12	2,600 Ohm Resistor - 1 watt Carbon Red,Blue,Red.	4770
R13	220 Ohm Resistor - 2 Watt.Ohmite (Red Devil)	14692
R14	300,000 Ohm Resistor 1 Watt.Carbon, Orange,Black,Yel.	4685
R15	10,000 Ohm Resistor 1 Watt.Carbon, Brown,Black,Orange	14696
S1-S4-S5	'51 Tubes	
S2	'24 "	
S3-S6-S7	'27 "	
S8-S9	'47 "	
S10	'80 "	
SW1	Tone Control Switch	5485
SW2	On-Off Switch (Combines with R2)	
T1	1st I.F.Transformer (G-1)	
T2	2nd I.F.Transformer (G-4) Same spacing as G-3	
T3	3rd I.F.Transformer (G-3)	
T5	10159 Input Transformer	
T6	10143 Output Transformer	
T7	3470 Power Transformer.	

List of Parts Used in 716 and 683.

There are two mounting holes left open on the tuner chassis for mounting the variable bass, and the high tone controls that are connected to flexible leads on the 683 amplifier.

Looking at the rear of the tuner, the antenna and ground posts are mounted on the top left of the chassis. On the right rear of the chassis is the output post marked "plate" This is connected to the input post on the 683 amplifier.

In the rear center of the chassis is a four terminal strip, color coded as follows: Red, Blue, Black, Black. A coded cable is furnished with the tuner for connecting this terminal strip to the 683 or similar amplifier.

The color code reads as follows: Red-B positive 240 volts, Blue-B negative or ground, Black, Black - 2½ volt heater or filament supply. The cable supplied with the tuner contains two heavy duty filament lead wires colored Green-Black and connect to the two Black terminals on this strip.

There are two sets of four terminal lugs on the back of the amplifier. Looking at the rear of the amplifier the set on the right are connections for the SM 855B speaker or similar type of speaker, Cable is furnished with the amplifier. This terminal strip is color coded as follows: red, black, blue, blue. The two blue leads connect to the speaker voice coil, the red and The SM 855B

Model 716 (Receiver) (1930)

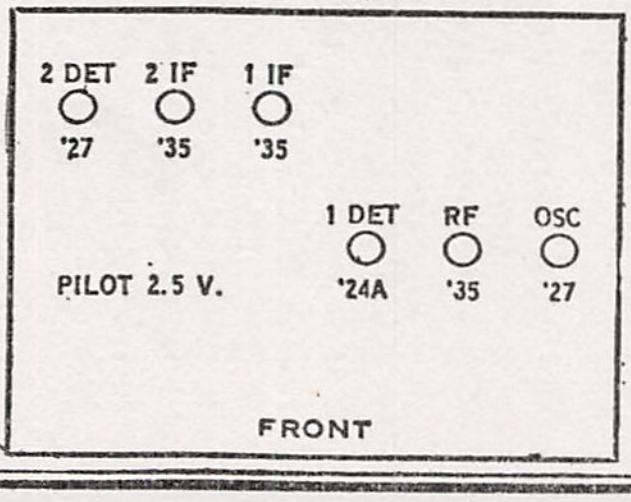

Model 683 (Amplifier) (1931)

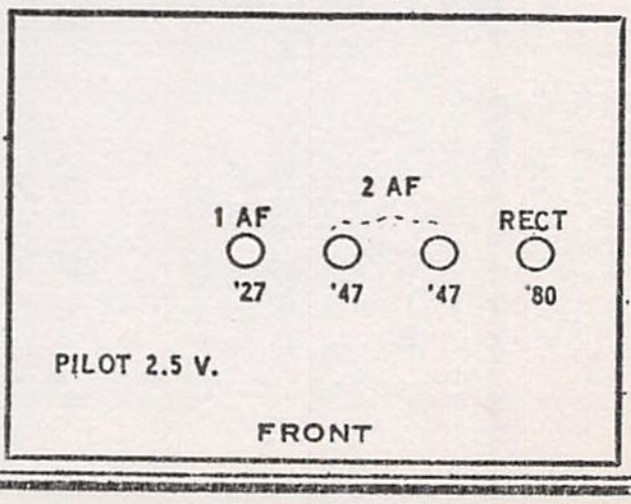

SILVER-MARSHALL. INC.

MODEL 727 SW - All Wave Parts List

C1-C2	2 Gang Variable Condenser-365 mmfd.Max.±5 mmfd. 0°-90°±1 mmfd. 90°-180°±½ of 1%	13372
C3	25 Mmfd. Trimmer Cond.	16249
C4	200 Mmfd. Variable trimmer condenser	13302
C5	0.1 Mfd. Condenser - Sprague 200 V.	3220
C6	0.1 Mfd. Condenser - Sprague 200 V.	3220
C7	0.1 Mfd. Condenser - Sprague 200 V.	3220
C8	0.1 Mfd. Condenser - Sprague 200V.	3220
C9	0.1 Mfd. Condenser - Sprague 200 V.	3220
C10	½ Mfd. Condenser - Polymet Waxtite 200 V.	13329
C11	.001 Mfd.Condenser - Mica	7039
C12	.001 Mfd.Condenser - Mica	7039
C13	.025 Mfd.Condenser - Sprague 200 V.	3333
C14	.025 Mfd.Condenser - Sprague 200 V.	3333
C15	.03 Mfd.Condenser - Sprague 700 V.	13331
C16	.00015 Mfd. Condenser - Mica	3313
C17	Oscillator Trimmer Condenser	16179
C18	0.1 Mfd. Condenser - Sprague 200 V.	3220
C19	0.1 Mfd. Condenser - Sprague 200 V.	3220
C20	0.15Mfd. Condenser - Sprague	13145
C21	.0005 Mfd. Condenser - Mica	7052
C22	0.1 Mfd. Condenser - Sprague 200 V.	3220
C23	1.0,.5,.5 Mfd. Condenser	13140
C24	8 Mfd. Dry Electrolytic Cond. 450 V.	13181
C25	12 Mfd. Dry Electrolytic Cond. 450 V.	3162
M	Tuning Meter - 15 M.A.	13923
P1	100,000 Ohm Pot. (Tone control)	14438
P2	250,000 Ohm Pot. (Volume control-Comb.with A.C.Switch)	4360
R1	100,000 Ohm Resistor - 1 watt carbon	14691
R2	250 Ohm Resistor - wire wound	4725
R3	60,000 Ohm Resistor - 1 watt carbon	4695
R4	25,000 ohm Resistor - 1 watt carbon	4697
R5	500,000 Ohm Resistor - 1 watt carbon	4772
R6	100,000 Ohm Resistor - 1 watt carbon	14691
R7	5,000 Ohm Resistor - 1 watt carbon	14765
R8	1 Megohn Resistor - 1 watt carbon	4759
R9	1 Megohn Resistor - 1 watt carbon	4759
R10	1 Megohn Resistor - 1 watt carbon	4759
R11	12,000 Ohm Resistor - 1 watt carbon	4746
R12	9,000 Ohm Resistor - 1 watt carbon	14746
R13	8,250 Ohm) 14,750 Ohm R.D.Ohmite - 3 watt	14781
R14	6,500 Ohm)	
R15	300,000 Ohm Resistor - 1 watt carbon	4685
R16	400 Ohm Resistor - wire wound	4701
R17	400 Ohm Resistor - wire wound	4701
R18	300,000 Ohm Resistor - 1 watt carbon	4685
R19	3,500 Ohm Resistor - 1 watt carbon	4804
R20	60,000 Ohm Resistor - 1 watt carbon	4695
SW1-SW2	Tandem change-over switch	15298
SW3	A.C.switch (Combination with volume control)	

L1 - 197 Broadcast Antenna Coil (550-1500 K.C.)
L2 - 302 Short Wave Antenna Coil (1.56-3.46 megacycles)
L3 - 201 Short Wave Antenna Coil (3.51-5.36 megacycles)
L4 - 200 Short Wave AntennaCoil (5.54-10.29 megacycles)
L5 - 199 Short Wave Antenna Coil (9.6-18.15)megacycles
L6 - 198 Oscillator Coil
L7 - 281 R.F.Choke
L8 - 283 R.F.Choke

T1 - Q-1 I.F.Transformer
T2 - Q-2 I.F.Transformer
T3 - Q-4 I.F.Transformer
T4 - 10208 Output Transformer
T5 - 10202 Power Transformer

S1 - '24 Tube
S4-S7-S8-S9 - '27 Tubes
S5-S6 - '47 Tubes
S2-S3 - '51 Tubes
S10 - '80 Tubes
S11 - Speaker Socket

MODEL 727 SW-All Wave Schematic, Data

SILVER-MARSHALL, INC.

INTERMEDIATE FREQUENCY 465 KC

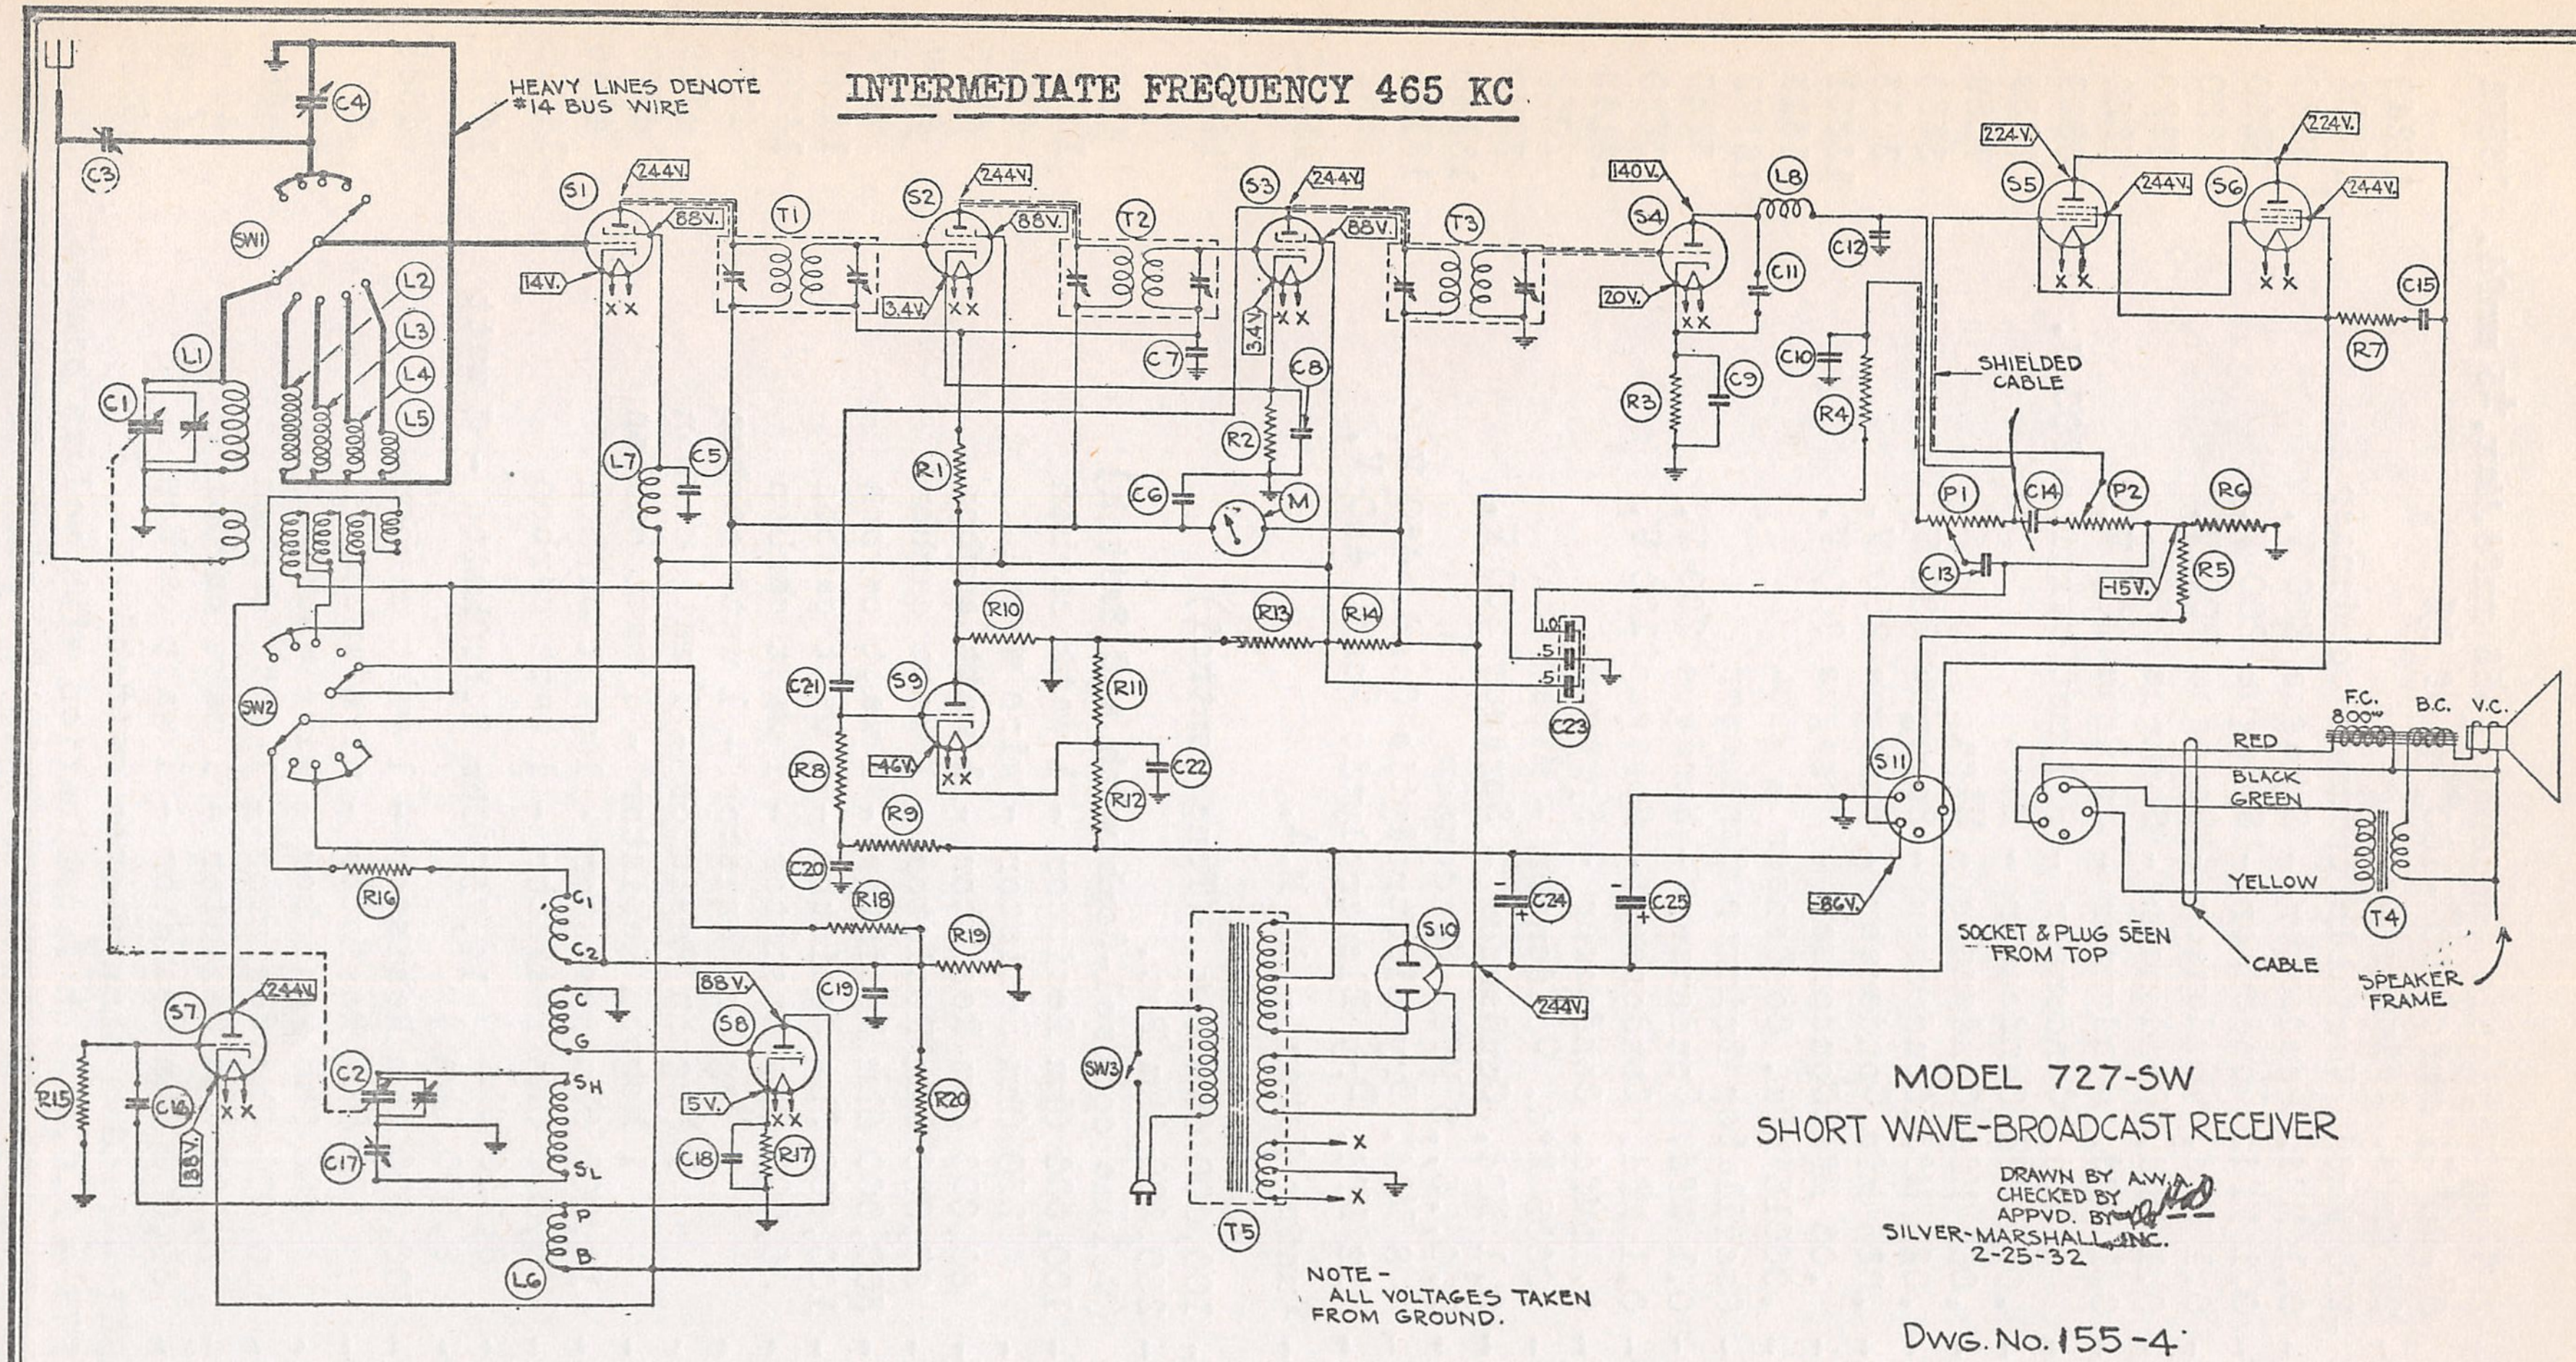
HEAVY LINES DENOTE #14 BUS WIRE
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21
C22
C23
C24
C25
L1
L2
L3
L4
L5
L6
L7
L8
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
S1
S2
S3
S4
S5
S6
S7
S8
S9
S10
S11
SW1
SW2
SW3
T1
T2
T3
T4
T5
P1
P2
M
244V.
88V.
14V.
3.4V.
140V.
20V.
224V.
-15V.
-46V.
-86V.
5V.
1.0
.5
.5
C1
C2
C
G
SH
SL
P
B
SHIELDED CABLE
F.C. 800Ω
B.C.
V.C.
RED
BLACK
GREEN
YELLOW
CABLE
SOCKET & PLUG SEEN FROM TOP
SPEAKER FRAME
X
X

NOTE - ALL VOLTAGES TAKEN FROM GROUND.

MODEL 727-SW
SHORT WAVE-BROADCAST RECEIVER

DRAWN BY A.W.A.
CHECKED BY
APPVD. BY
SILVER-MARSHALL, INC.
2-25-32

DWG. No. 155-4

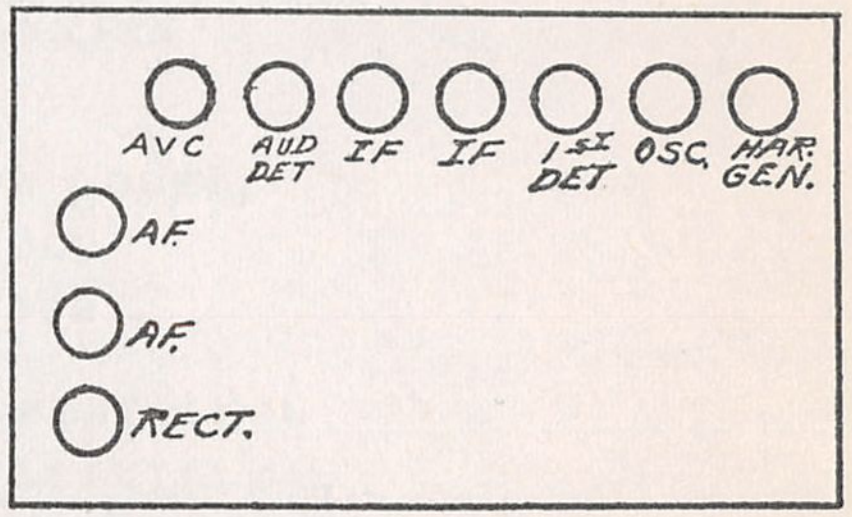
AVC
AUD DET
I.F.
I.F.
1ST DET
OSC.
HAR. GEN.
A.F.
A.F.
RECT.

The Clough scheme is to use only one oscillator in the set, which must tune from 16.5 to 550 meters, or 18,000 to 550 kc. This is impossible, for even the harmonics of the oscillator are too weak to be of direct use. The crux of the idea lies in the use of a tube directly coupled to the oscillator, which is so set as to tune over the broadcast band of 550 to 1500 kc., this tube acting as a harmonic generator and providing the necessary local frequencies to heterodyne signals in the 16 to 35, 35 to 65, 65 to 100 and 100 to 200 meter short wave bands. This system results in only one permanently connected and aligned oscillator circuit, the harmonic generator tube providing the required heterodyne voltages for the short wave bands. A single selector switch knob gives a choice of five separate coils to enable the first detector to cover the four short wave and broadcast bands. In the final embodiment, one dial tunes the broadcast band, this same dial plus an auxilliary trimmer tunes the short wave bands, and one five position switch selects the five bands at will!

MODEL 773
Broadcast-LongWave Set

SILVER - MARSHALL, INC.

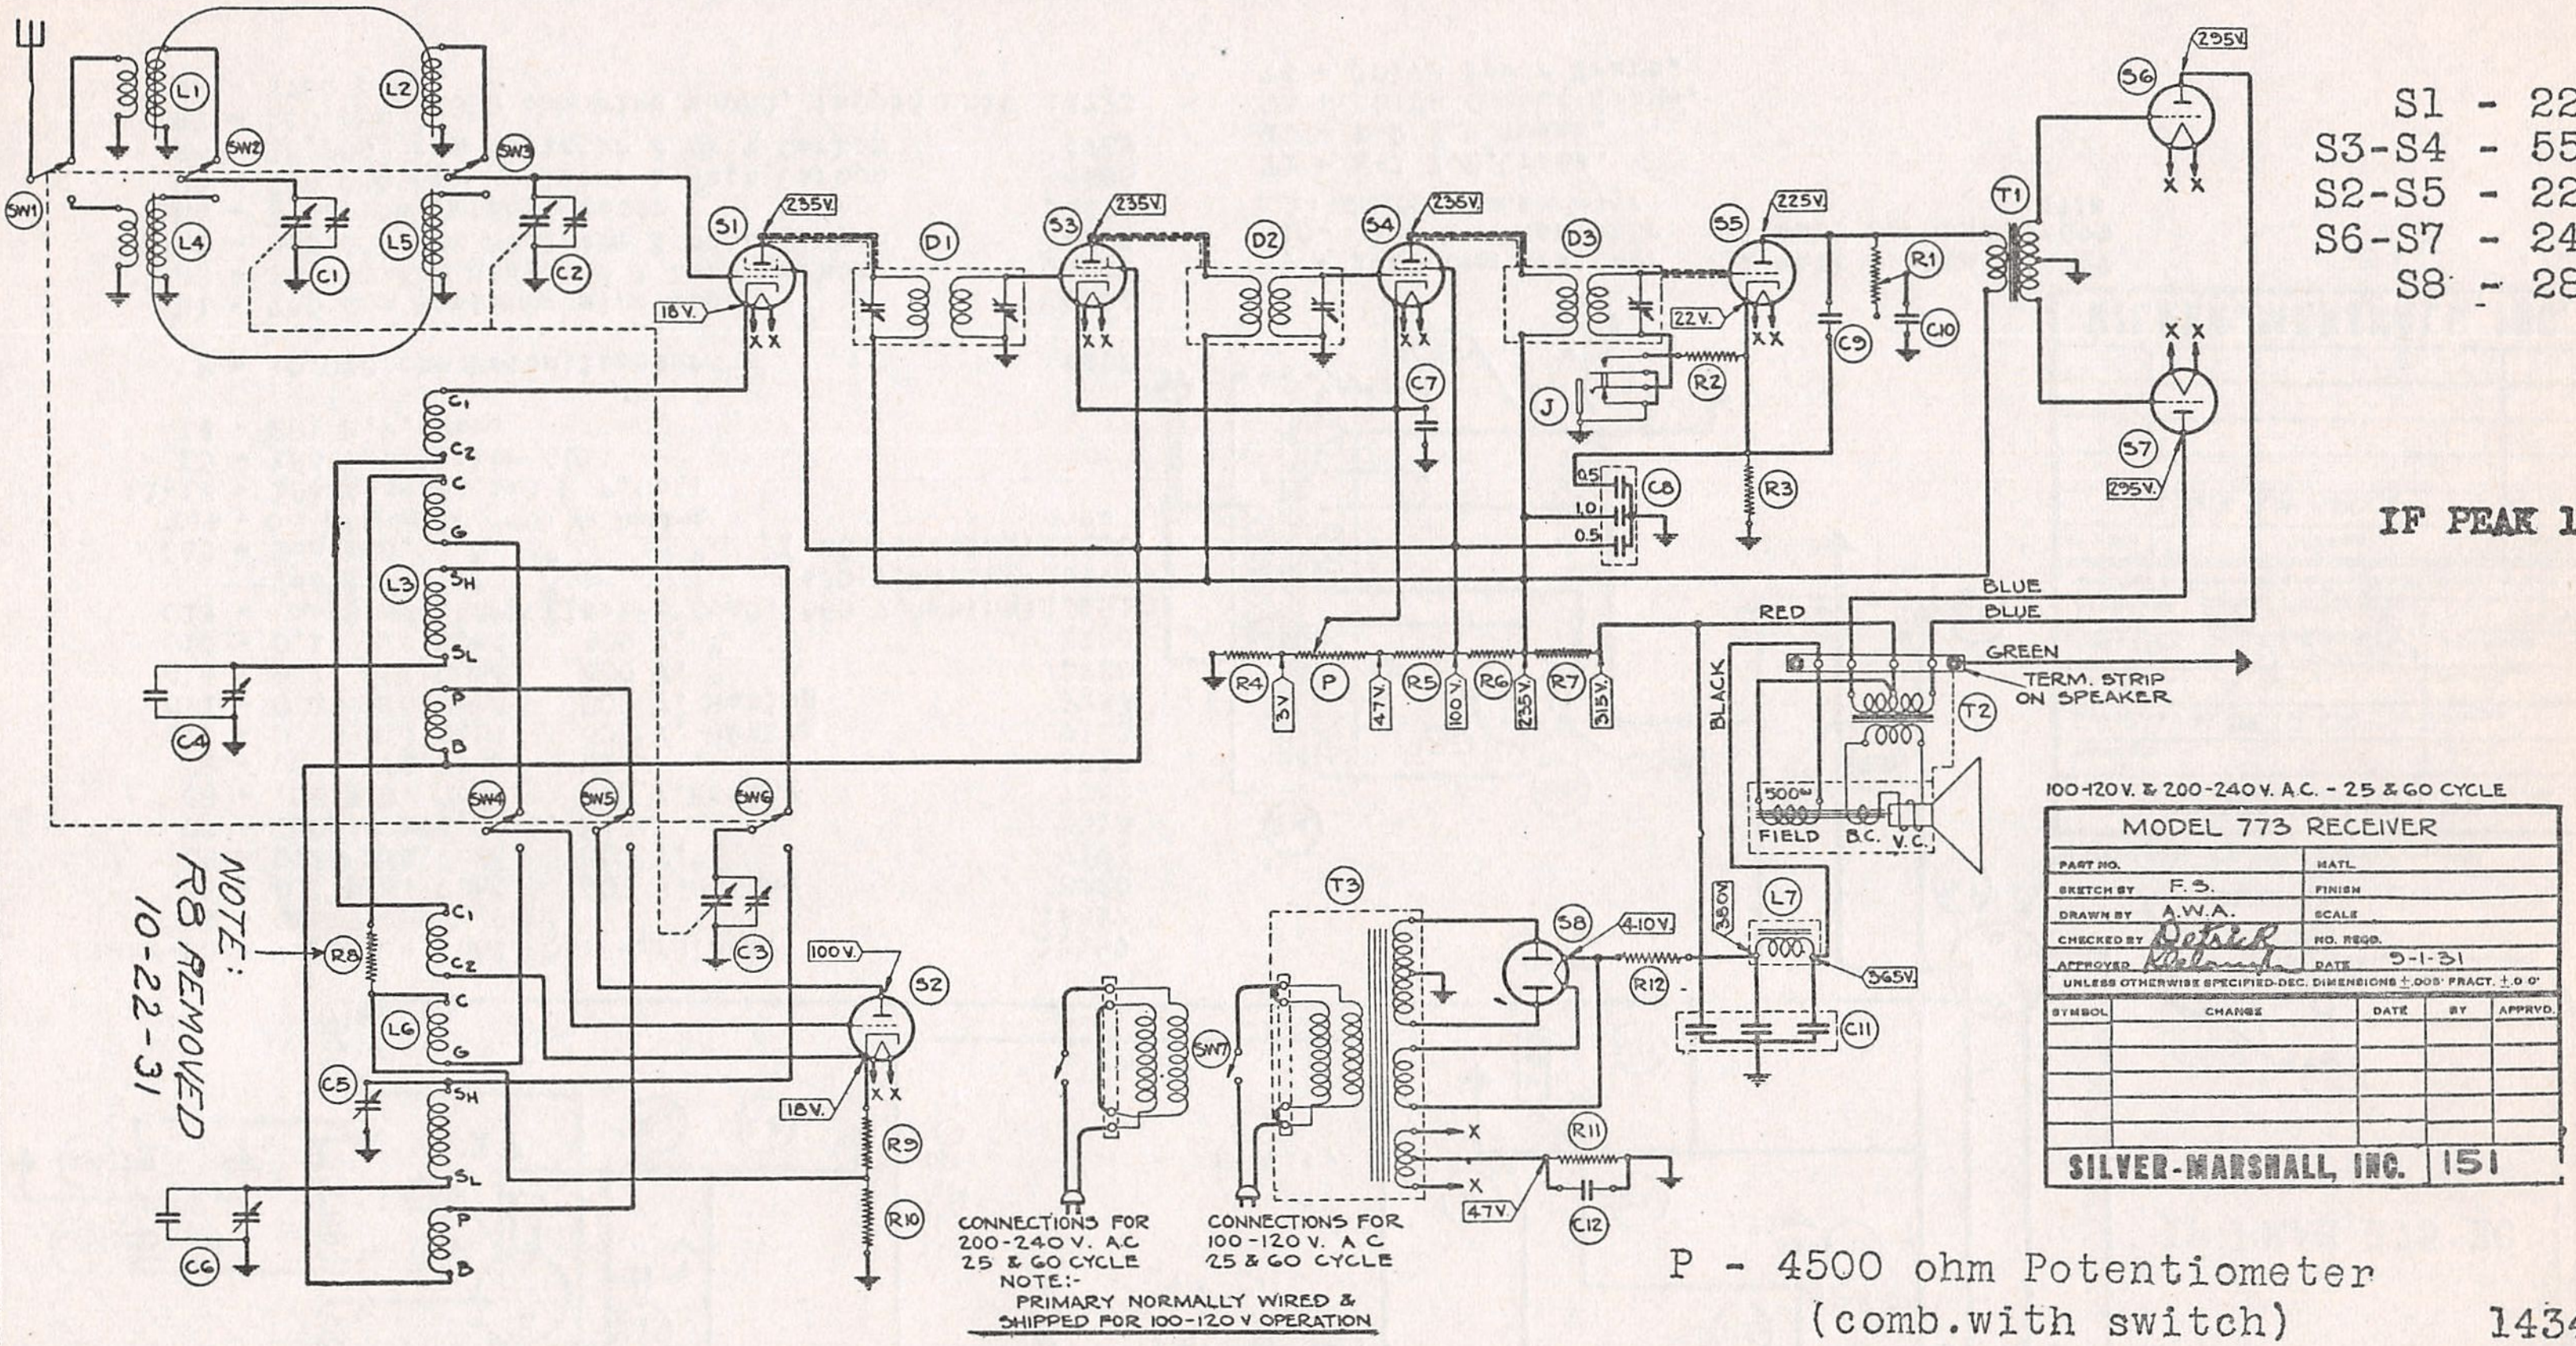
SW1
SW2
SW3
L1
L2
L4
L5
C1
C2
S1
235V.
18V.
D1
S3
235V.
D2
S4
235V.
D3
S5
225V.
22V.
R1
R2
R3
C6
C7
C8
C9
C10
J
.05
1.0
0.5
T1
S6
295V.
S7
295V.
X X
C1
C2
C
G
L3
SH
SL
P
B
C4
C5
C6
L6
R8
SW4
SW5
SW6
C3
S2
100V.
18V.
R9
R10
R4
3V.
P
47V.
R5
100V.
R6
235V.
R7
315V.
RED
BLACK
BLUE
BLUE
GREEN
TERM. STRIP ON SPEAKER
T2
500Ω FIELD
B.C.
V.C.
T3
SW7
S8
410V.
R12
L7
380V.
365V.
C11
R11
C12
47V.
X
NOTE: R8 REMOVED 10-22-31
CONNECTIONS FOR 200-240 V. AC 25 & 60 CYCLE
CONNECTIONS FOR 100-120 V. AC 25 & 60 CYCLE
NOTE:- PRIMARY NORMALLY WIRED & SHIPPED FOR 100-120 V OPERATION
100-120 V. & 200-240 V. A.C. - 25 & 60 CYCLE
MODEL 773 RECEIVER
PART NO.
MATL.
SKETCH BY F.S.
FINISH
DRAWN BY A.W.A.
SCALE
CHECKED BY Detsch
NO. REQD.
APPROVED
DATE 9-1-31
UNLESS OTHERWISE SPECIFIED-DEC. DIMENSIONS ±.005' FRACT. ±.0 0'
SYMBOL
CHANGE
DATE
BY
APPRVD.
SILVER-MARSHALL, INC.
151

S1 - 224 Tube
S3-S4 - 551 "
S2-S5 - 227 "
S6-S7 - 245 "
S8 - 280 "

IF PEAK 175 KC

P - 4500 ohm Potentiometer (comb.with switch) 14342

C1-C2-C3 -	Variable Cond. 407 Mmfd. Max.	3253
C4 -	Broadcast Osc. Trimmer Cond.	16058
C5 -	400 kc. Trimmer Cond.	16035
C6 -	Long Wave Osc. Trimmer Cond.	16059
C7 -	.25 Mfd. Cond. 200 V. Rating	3322
C8 -	1.0 Mfd. 300 V., 0.5 Mfd. 200 V.	13140
C9 -	.001 Mfd. Cond. (Mica)	7039
C10 -	.025 Mfd. Cond. 400 V. Rating	3333
C11 -	Electrolytic Filter Cond. Three 4 mfd.units 450 V.	13120
C12 -	0.1 Mfd. Cond. 200 V. Rating	3220

R1 -	1/2 Megohm Variable Resistor		4507
R2 -	3500 ohm Resistor	1 watt Carbon	4804
R3 -	60,000 " "	1 watt Carbon	14695
R4 -	100 " "	wire wound	4743
R5 -	6500 " "	1 watt Carbon	
R6 -	5000 " "	3 watt Carbon	
R7 -	2000 " "	3 watt Carbon	
R8 -	400 " "	wire wound	4701
R9 -	100 ohm) 1800 ohm	{ wire wound tapped unit }	14723
R10 -	1700 ohm)		
R11 -	800 ohm Resistor	3 watt Carbon	4686
R12 -	300 ohm "	3 watt Carbon	14745

SILVER - MARSHALL, INC.

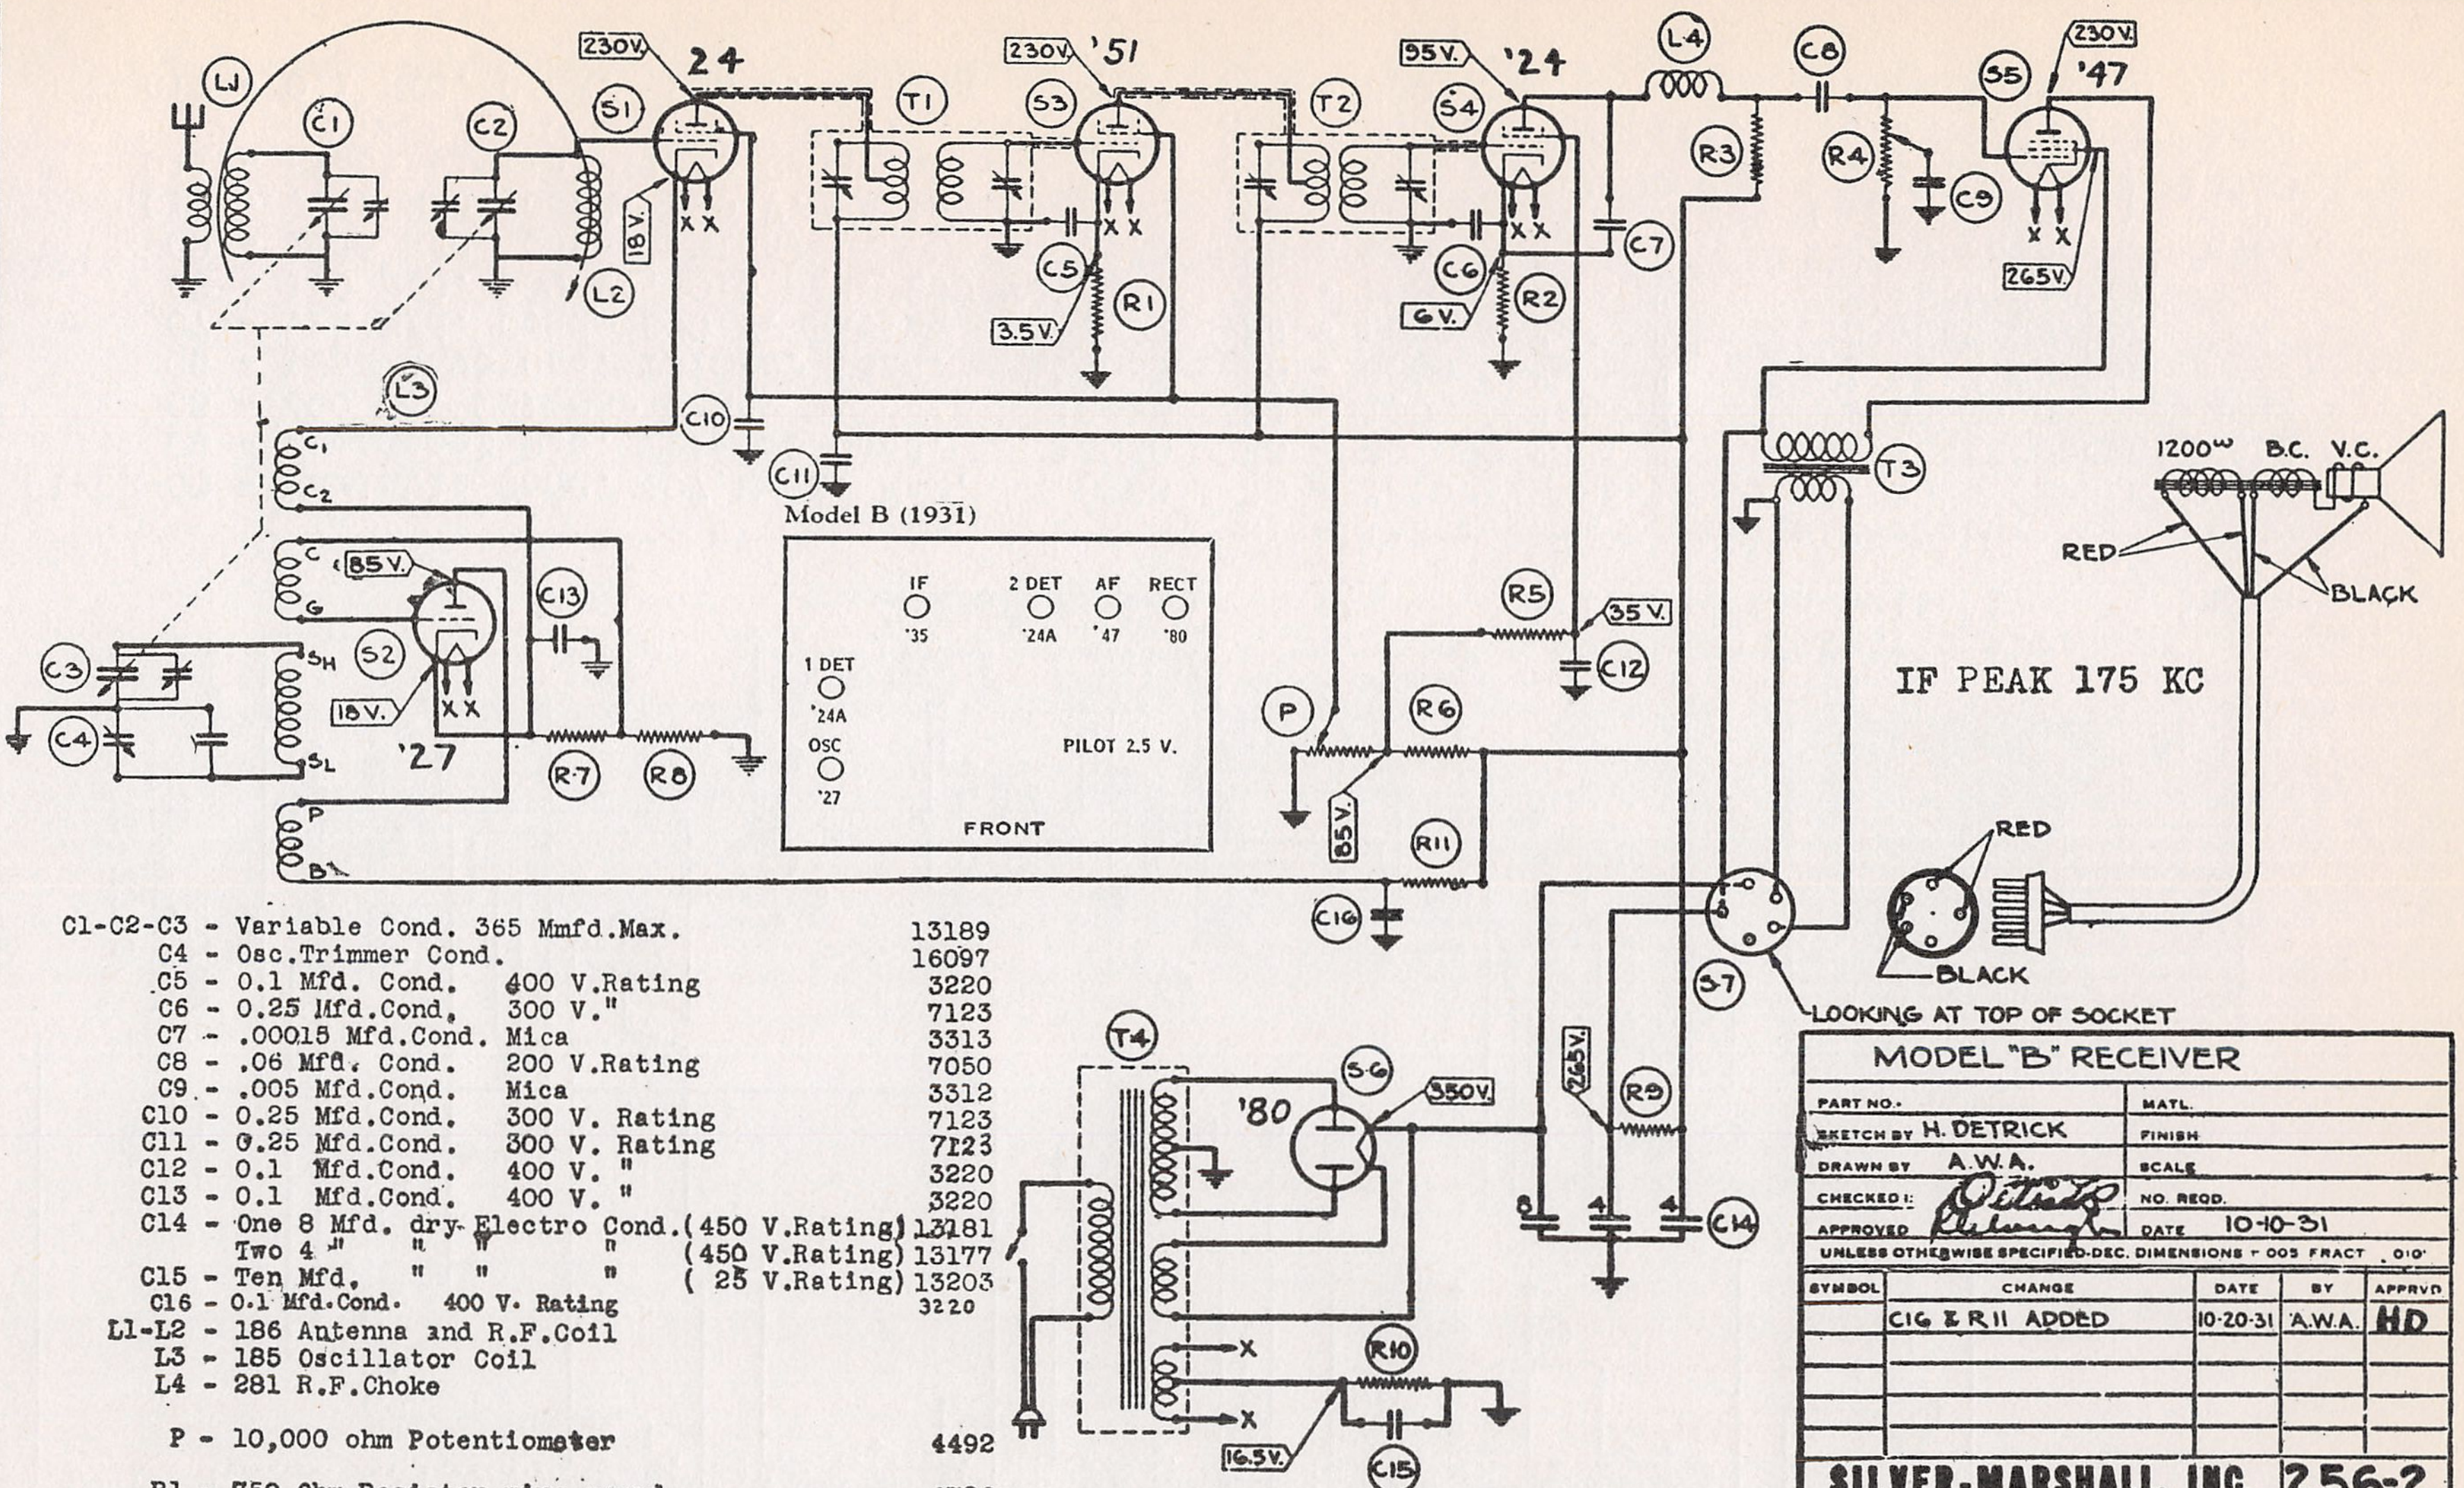
L1
C1
C2
S1
230V.
24
18V.
L2
L3
C10
C11
T1
S3
230V.
'51
C5
R1
3.5V.
T2
S4
95V.
'24
C6
R2
6V.
C7
L4
R3
C8
R4
C9
S5
230V.
'47
265V.
T3
1200 W
B.C.
V.C.
RED
BLACK
IF PEAK 175 KC
C1
C2
C
G
85V.
S2
18V.
'27
SH
SL
P
B
C3
C4
C13
R7
R8
R5
35V.
C12
P
R6
85V.
R11
C16
RED
BLACK
S7
LOOKING AT TOP OF SOCKET
T4
'80
S6
350V.
265V.
R9
8
4
4
C14
X
X
R10
16.5V.
C15
Model B (1931)
IF
'35
2 DET
'24A
AF
'47
RECT
'80
1 DET
'24A
OSC
'27
PILOT 2.5 V.
FRONT

MODEL "B" RECEIVER		
PART NO.		MATL.
SKETCH BY	H. DETRICK	FINISH
DRAWN BY	A.W.A.	SCALE
CHECKED I:	Oetinger	NO. REQD.
APPROVED		DATE 10-10-31
UNLESS OTHERWISE SPECIFIED-DEC. DIMENSIONS ± .005 FRACT .010'		

SYMBOL	CHANGE	DATE	BY	APPRVD
	C16 & R11 ADDED	10-20-31	A.W.A.	HD

SILVER-MARSHALL, INC. 256-2

C1-C2-C3 -	Variable Cond. 365 Mmfd.Max.	13189
C4 -	Osc.Trimmer Cond.	16097
C5 -	0.1 Mfd. Cond. 400 V.Rating	3220
C6 -	0.25 Mfd.Cond. 300 V."	7123
C7 -	.00015 Mfd.Cond. Mica	3313
C8 -	.06 Mfd. Cond. 200 V.Rating	7050
C9 -	.005 Mfd.Cond. Mica	3312
C10 -	0.25 Mfd.Cond. 300 V. Rating	7123
C11 -	0.25 Mfd.Cond. 300 V. Rating	7123
C12 -	0.1 Mfd.Cond. 400 V. "	3220
C13 -	0.1 Mfd.Cond. 400 V. "	3220
C14 -	One 8 Mfd. dry Electro Cond.(450 V.Rating)	13181
	Two 4 " " " " (450 V.Rating)	13177
C15 -	Ten Mfd. " " " (25 V.Rating)	13203
C16 -	0.1 Mfd.Cond. 400 V. Rating	3220
L1-L2 -	186 Antenna and R.F.Coil	
L3 -	185 Oscillator Coil	
L4 -	281 R.F.Choke	
P -	10,000 ohm Potentiometer	4492
R1 -	750 Ohm Resistor wire wound	4786
R2 -	30,000 ohm Resistor 1 Watt Carbon	14693
R3 -	300,000 ohm Resistor 1 Watt Carbon	4685
R4 -	½ Megohm Potentiometer	14403
R5 -	300,000 ohm Resistor 1 Watt Carbon	4685
R6 -	10,000 ohm Resistor 3 Watt Carbon	4789
R7 -	100 ohm) 1800 ohm wire wound, tapped unit	14723
R8 -	1700 ohm)	
R9 -	1750 ohm Resistor 1 Watt Carbon	14747
R10-	425 ohm Resistor 1 Watt Carbon	14699
R11-	20,000 ohm Resistor	4718
T1 -	E-1 I.F.Trans.	
T2 -	E-2 I.F.Trans.	
T3 -	10179 Output Trans.	
T4 -	10178 Power Trans.	

SILVER - MARSHALL, INC.

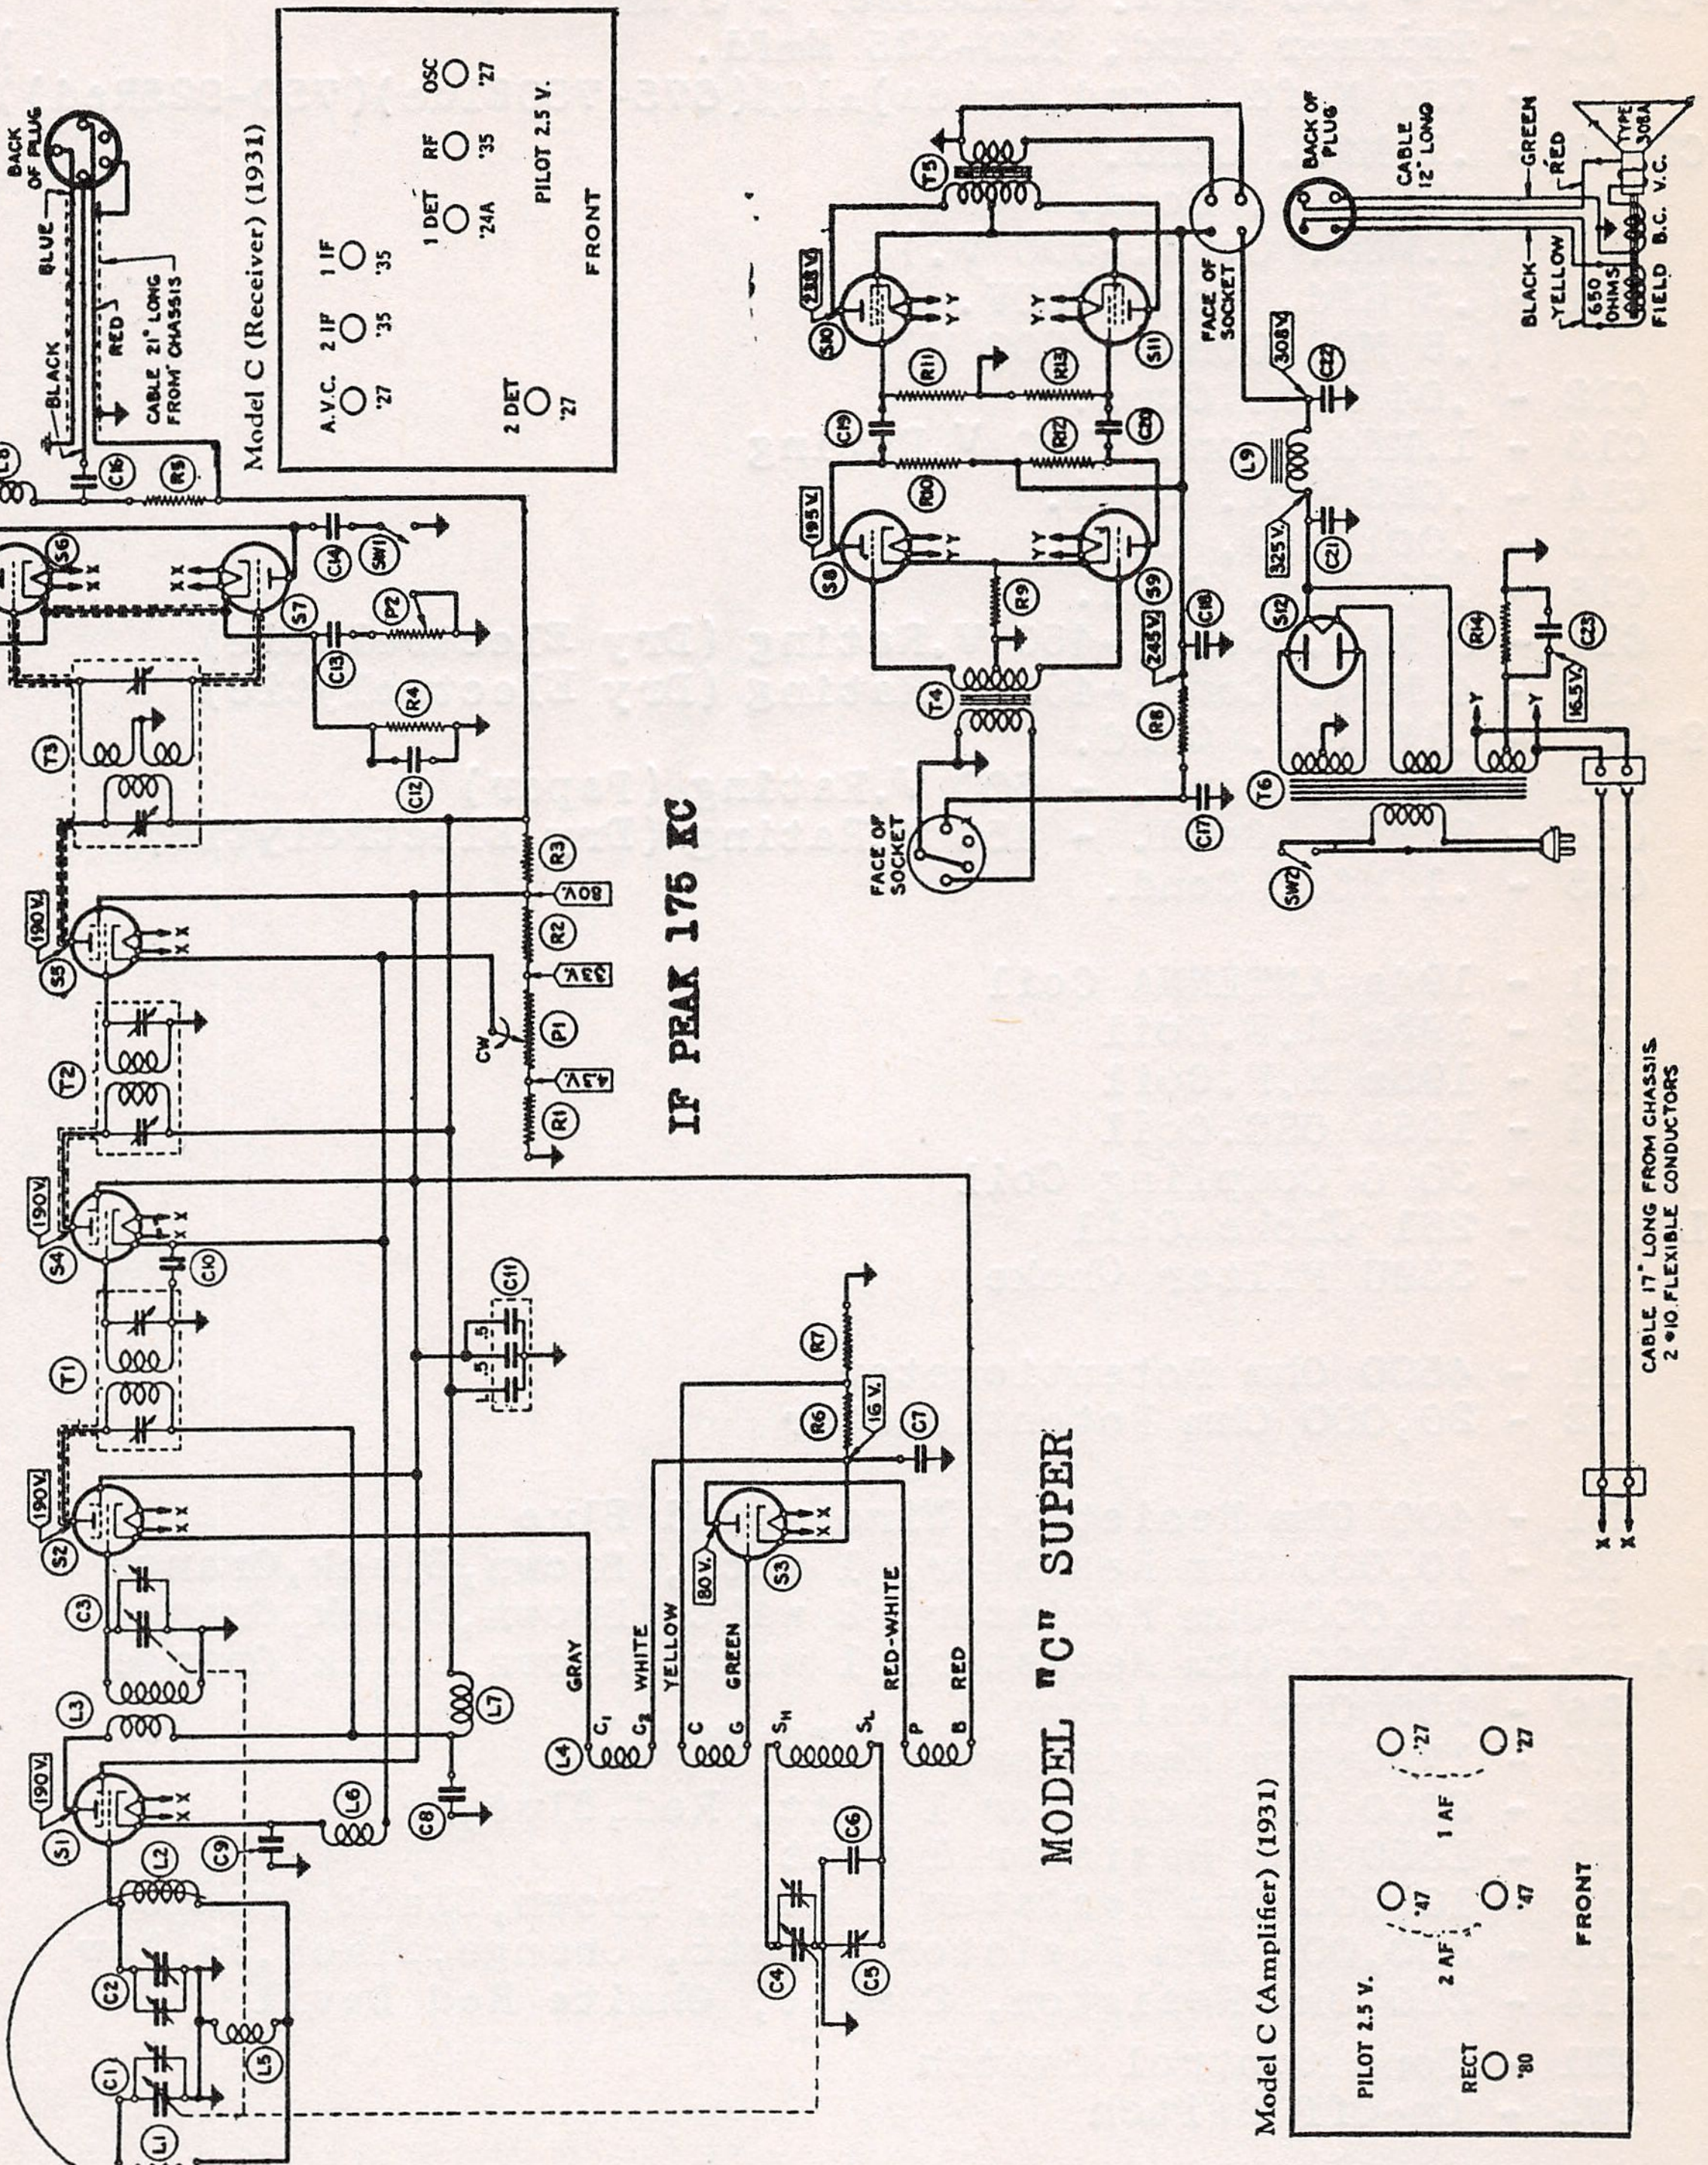
MODEL "C" SUPER
IF PEAK 175 KC
Model C (Receiver) (1931)
A.V.C. '27
2 IF '35
1 IF '35
1 DET '24A
RF '35
OSC '27
2 DET '27
PILOT 2.5 V.
FRONT
Model C (Amplifier) (1931)
PILOT 2.5 V.
RECT '80
2 AF '47
1 AF '27
FRONT
BACK OF PLUG
BLACK
BLUE
RED
CABLE 21" LONG FROM CHASSIS
BACK OF PLUG
CABLE 12" LONG
GREEN
RED
BLACK
YELLOW
650 OHMS
FIELD
B.C. V.C.
TYPE 108A
FACE OF SOCKET
FACE OF SOCKET
CABLE 17" LONG FROM CHASSIS 2 #10 FLEXIBLE CONDUCTORS
GRAY
WHITE
YELLOW
GREEN
RED-WHITE
RED
C₁ G₂ C G S_H S_L P B
190V
80V
33V
4.3V
16 V.
288 V.
195 V.
248 V.
308 V.
325 V.
16.5 V.
CW
S1 S2 S3 S4 S5 S6 S7 S8 S9 S10 S11 S12
L1 L2 L3 L4 L5 L6 L7 L8 L9
T1 T2 T3 T4 T5 T6
C1 C2 C3 C4 C5 C6 C7 C8 C9 C10 C11 C12 C13 C14 C15 C16 C17 C18 C19 C20 C21 C22 C23
R1 R2 R3 R4 R5 R6 R7 R8 R9 R10 R11 R12 R13 R14
P1 P2
SW1 SW2
.5 .5 .5

MODEL "C" SUPERHETERODYNE (60 ~)

C1-C2-C3-C4	-	365 Mmfd. Condenser ± 5 Mmfd. Max.	13217
C5	-	Trimmer Cond. 120-325 Mmfd.	16035
C6	-	750 Mmfd. Cond.(mica)±10%(675-750Blue)(750-825Red)	
C7-C8-C9	-	.1 Mfd. Cond.	3220
C10	-	.25 Mfd. Cond.	7114
C11	-	(1.Mfd. Cond.-300 V.) (.5 Mfd. Cond-200V.) (.5 Mfd.Cond - 200 V)	13140
C12	-	.04 Mfd. Cond.	7046
C13	-	1.Mfd. Cond. 150 V.Rating	3254
C14	-	.025 Mfd. Cond.	3333
C15	-	.001 Mfd. Cond.	7039
C16	-	.08 Mfd. Cond.	13288
C17	-	8 Mfd. Cond.-450 V.Rating (Dry Electrolytic)	13181
C18	-	4 Mfd. Cond.-450 V.Rating (Dry Electrolytic)	13177
C19-C20	-	.15 Mfd. Cond.	13145
C21	-	2 Mfd. Cond. - 600 V.Rating (Paper)	3328
C22	-	8 Mfd. Cond. - 450 V.Rating (Dry Electrolytic)	13181
C23	-	.1 Mfd. Cond.	3220
L1	-	194s ANTENNA Coil	
L2	-	193s R.F.Coil	
L3	-	195s R.F.Coil	
L4	-	196s OSC.Coil	
L5	-	30 C Coupling Coil	
L6-L7-L8	-	281 Choke Coil	
L9	-	339U Filter Choke	
P1	-	4500 Ohm Potentiometer	14419
P2	-	20,000 Ohm Potentiometer	14427
R1	-	400 Ohm Resistor, Wire wound Blue	4701
R2	-	10,000 Ohm Resistor, 1 watt, Brown,Black,Orange	14696
R3	-	10,000 Ohm Resistor, 2 watt, Brown,Black,Orange	4726
R4-R5	-	25,000 Ohm Resistor, 1 watt, Brown,Black,Orange	4697
R6	-	100 Ohm Resistor) wire wound	14723
R7	-	1700 Ohm Resistor)	
R8	-	2600 Ohm Resistor 1 watt, Red,Blue,Red	4770
R9	-	1350 Ohm Resistor 1 watt,	14767
R10-R12	-	10,000 Ohm Resistor 1 watt, Brown,Black,Orange	14696
R11-R13	-	300,000 Ohm Resistor 1 watt, Orange,Black,Yellow	4685
R14	-	220 Ohm Resistor, 2 watt, Ohmite Red Devil	14766
SW1	-	Tone Control Switch	5485
SW2	-	On-Off Switch	5199

MODEL G

SILVER-MARSHALL, INC.

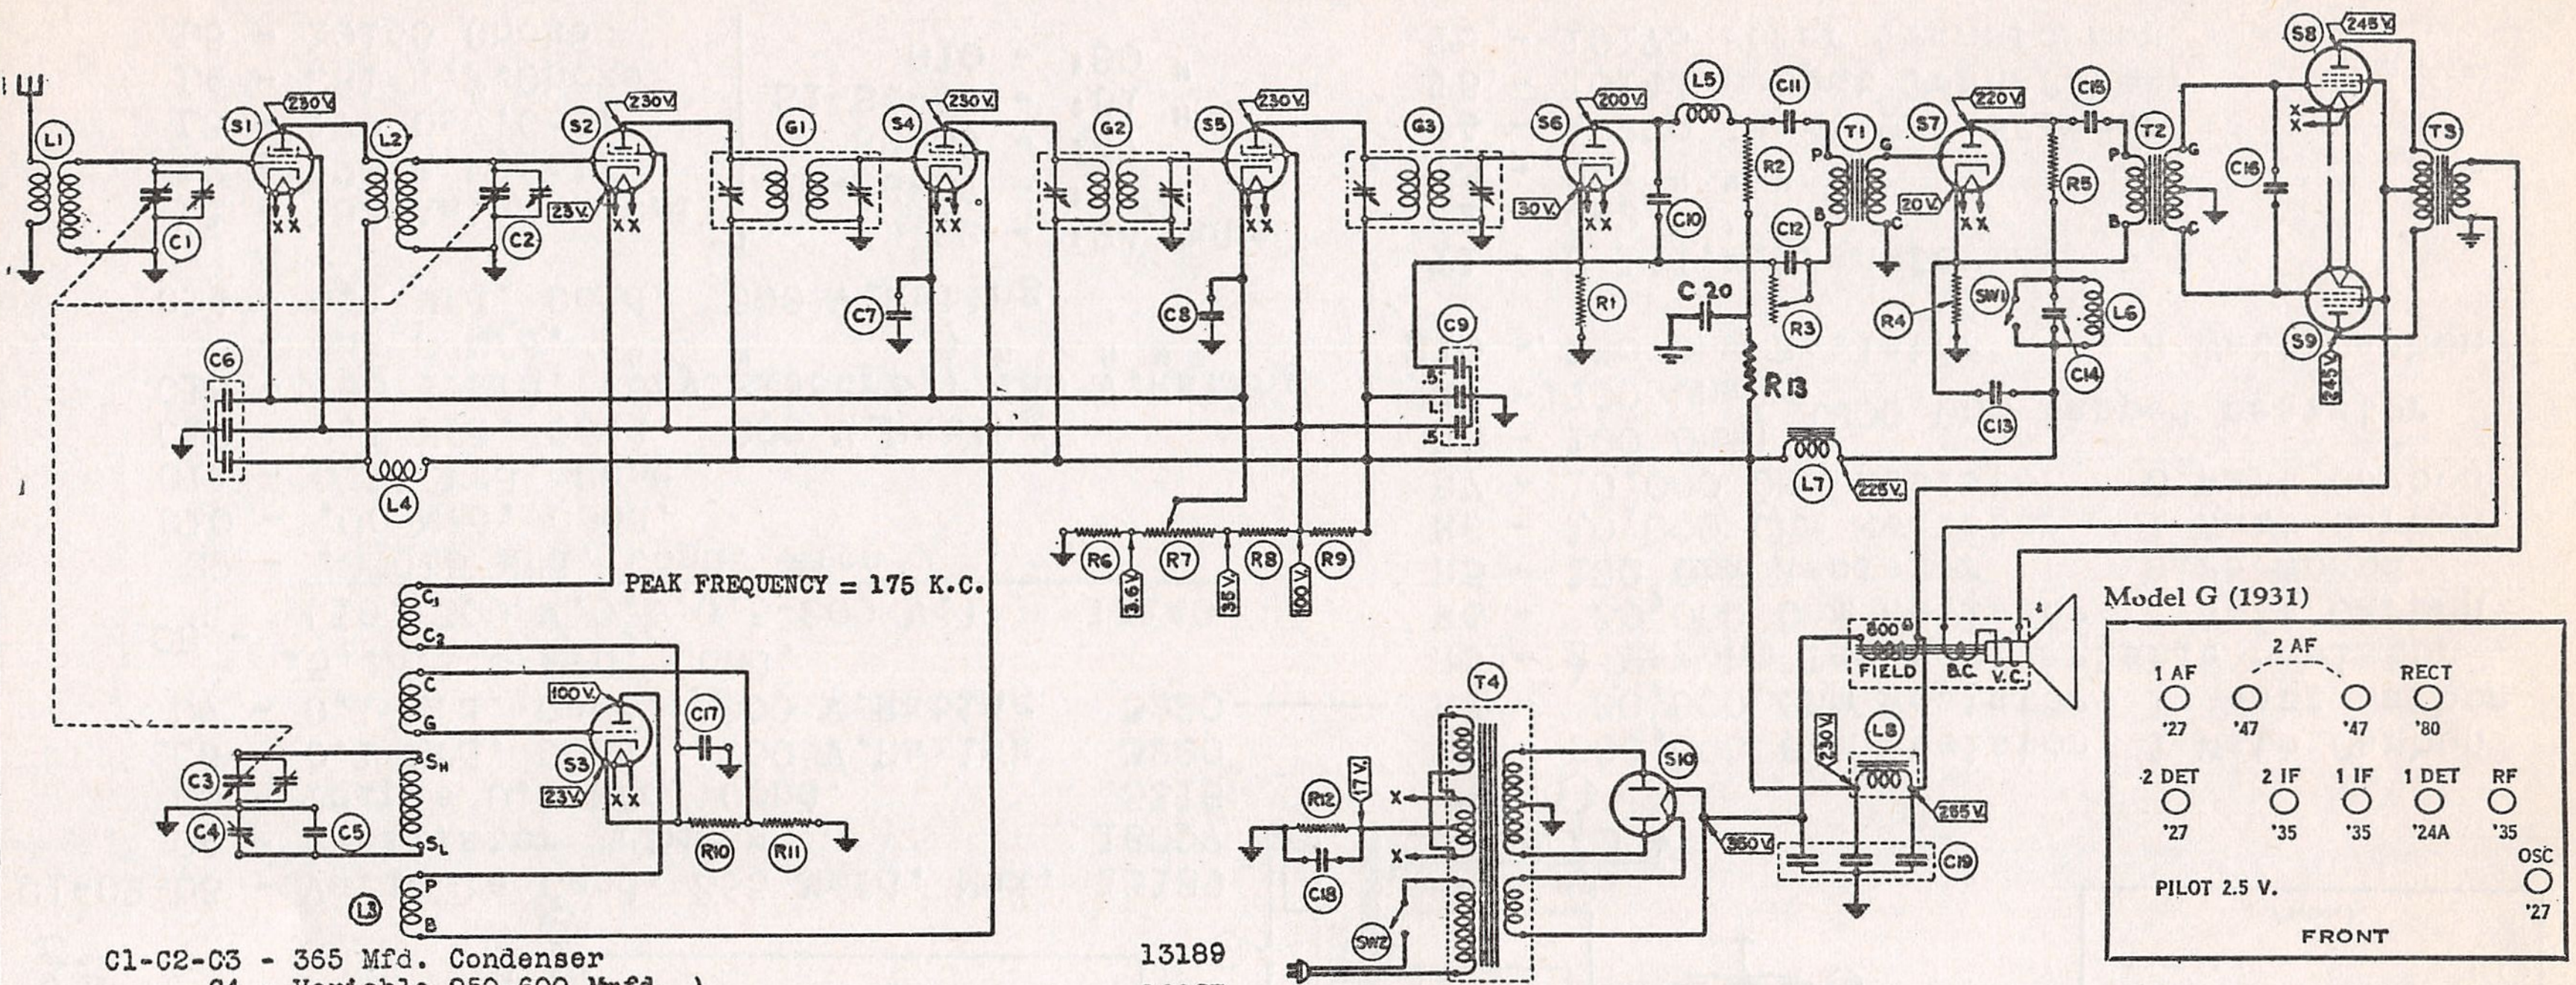
L1
C1
S1
230V
L2
C2
S2
230V
23V
G1
S4
230V
C7
G2
S5
230V
C8
G3
C9
.5
.5
1.
S6
200V
30V
R1
C10
L5
C11
R2
C12
R3
C 20
R13
T1
P
G
B
C
S7
220V
20V
R4
SW1
R5
C13
C14
L6
C15
T2
P
G
B
C
C16
S8
245V
S9
245V
T3
C6
L4
R6
3.6V
R7
35V
R8
R9
100V
L7
225V
PEAK FREQUENCY = 175 K.C.
C1
C2
C
G
SH
SL
P
B
L3
C3
C4
C5
S3
100V
23V
C17
R10
R11
T4
R12
17V
C18
SW2
S10
350V
L8
230V
255V
C19
600Ω
FIELD
B.C.
V.C.
Model G (1931)
1 AF
'27
2 AF
'47
'47
RECT
'80
2 DET
'27
2 IF
'35
1 IF
'35
1 DET
'24A
RF
'35
OSC
'27
PILOT 2.5 V.
FRONT

C1-C2-C3	365 Mfd. Condenser		13189
C4	Variable 250-600 Mmfd.)		16097
C5	500 Mmfd. Cond. (Mica))		
C6	Triple .1 Mfd. Cond.		3316
C7-C8	.1 Mfd. Cond. 200 V Rating		3220
C9	.5 - .5 - 1. Mfd. Cond.	(.5 - 200V rating (1.0- 300V rating	13140
C10	.001 Mfd. Cond. Mica		7039
C11	.02 Mfd. Cond.		13195
C12	.001 Mfd. Cond. Mica		7039
C13	4 Mfd. Cond. - 450V Rating		13177
C14	.01 Mfd. Cond.		7047
C15	.06 Mfd. Cond.		7050
C16	.00075 Mfd. Cond. Mica		7144
C17-C13	.1 Mfd. Cond. - 200V Rating		3220
C19	Three 4 Mfd. Units 450V Rating		13120
C20	4 Mfd. Cond.		13177
G1	1st I.F. Transformer		
G2	2nd I.F. Transformer		
G3	3rd I.F. Transformer		
C20-			
L1	182 Ant. Coil		
L2	178 R.F. Coil		
L3	179 Osc. Coil		
L4	281 Choke Coil		
L5	281 Choke Coil		
L6	10164 Choke Coil		
L7	10145 Choke		
L8	10145 Choke		

R1	60,000 ohm resistor	1 watt	4698
R2	30,000 ohm "	1 watt	14693
R3	1 Megohm variable resistor		14371
R4	2600 ohm resistor	1 watt	4770
R5	1000 ohm resistor	1 watt	14722
R6	300 ohm resistor	wire wound	14692
R7	4500 ohm potentiometer with on-off switch		14323
R8	13,500 ohm resistor	1 watt	14694
R9	10,000 ohm resistor	2 watt	4726
R10	100 ohm resistor)	wire wound	14723
R11	1700 ohm resistor)		
R12	210 ohm resistor	2 watt - carbon	4774
R13	10,000 Ohm		14696
S1	'51 Tube		
S2	'24 "		
S3	'27 "		
S4-S5	'51 "		
S6-S7	'27 "		
S8-S9	'47 "		
S10	'80 "		
T1	10149 Transformer (Specification 8-7-31)		
T2	10159 Transformer (" 8-7-31)		
T3	10143 Transformer		
T4	10177 Transformer 60 Cycle		
SW1	Tone Control Switch		5485
SW2	On-Off Switch (Combined with volume control)		

SILVER-MARSHALL, INC.

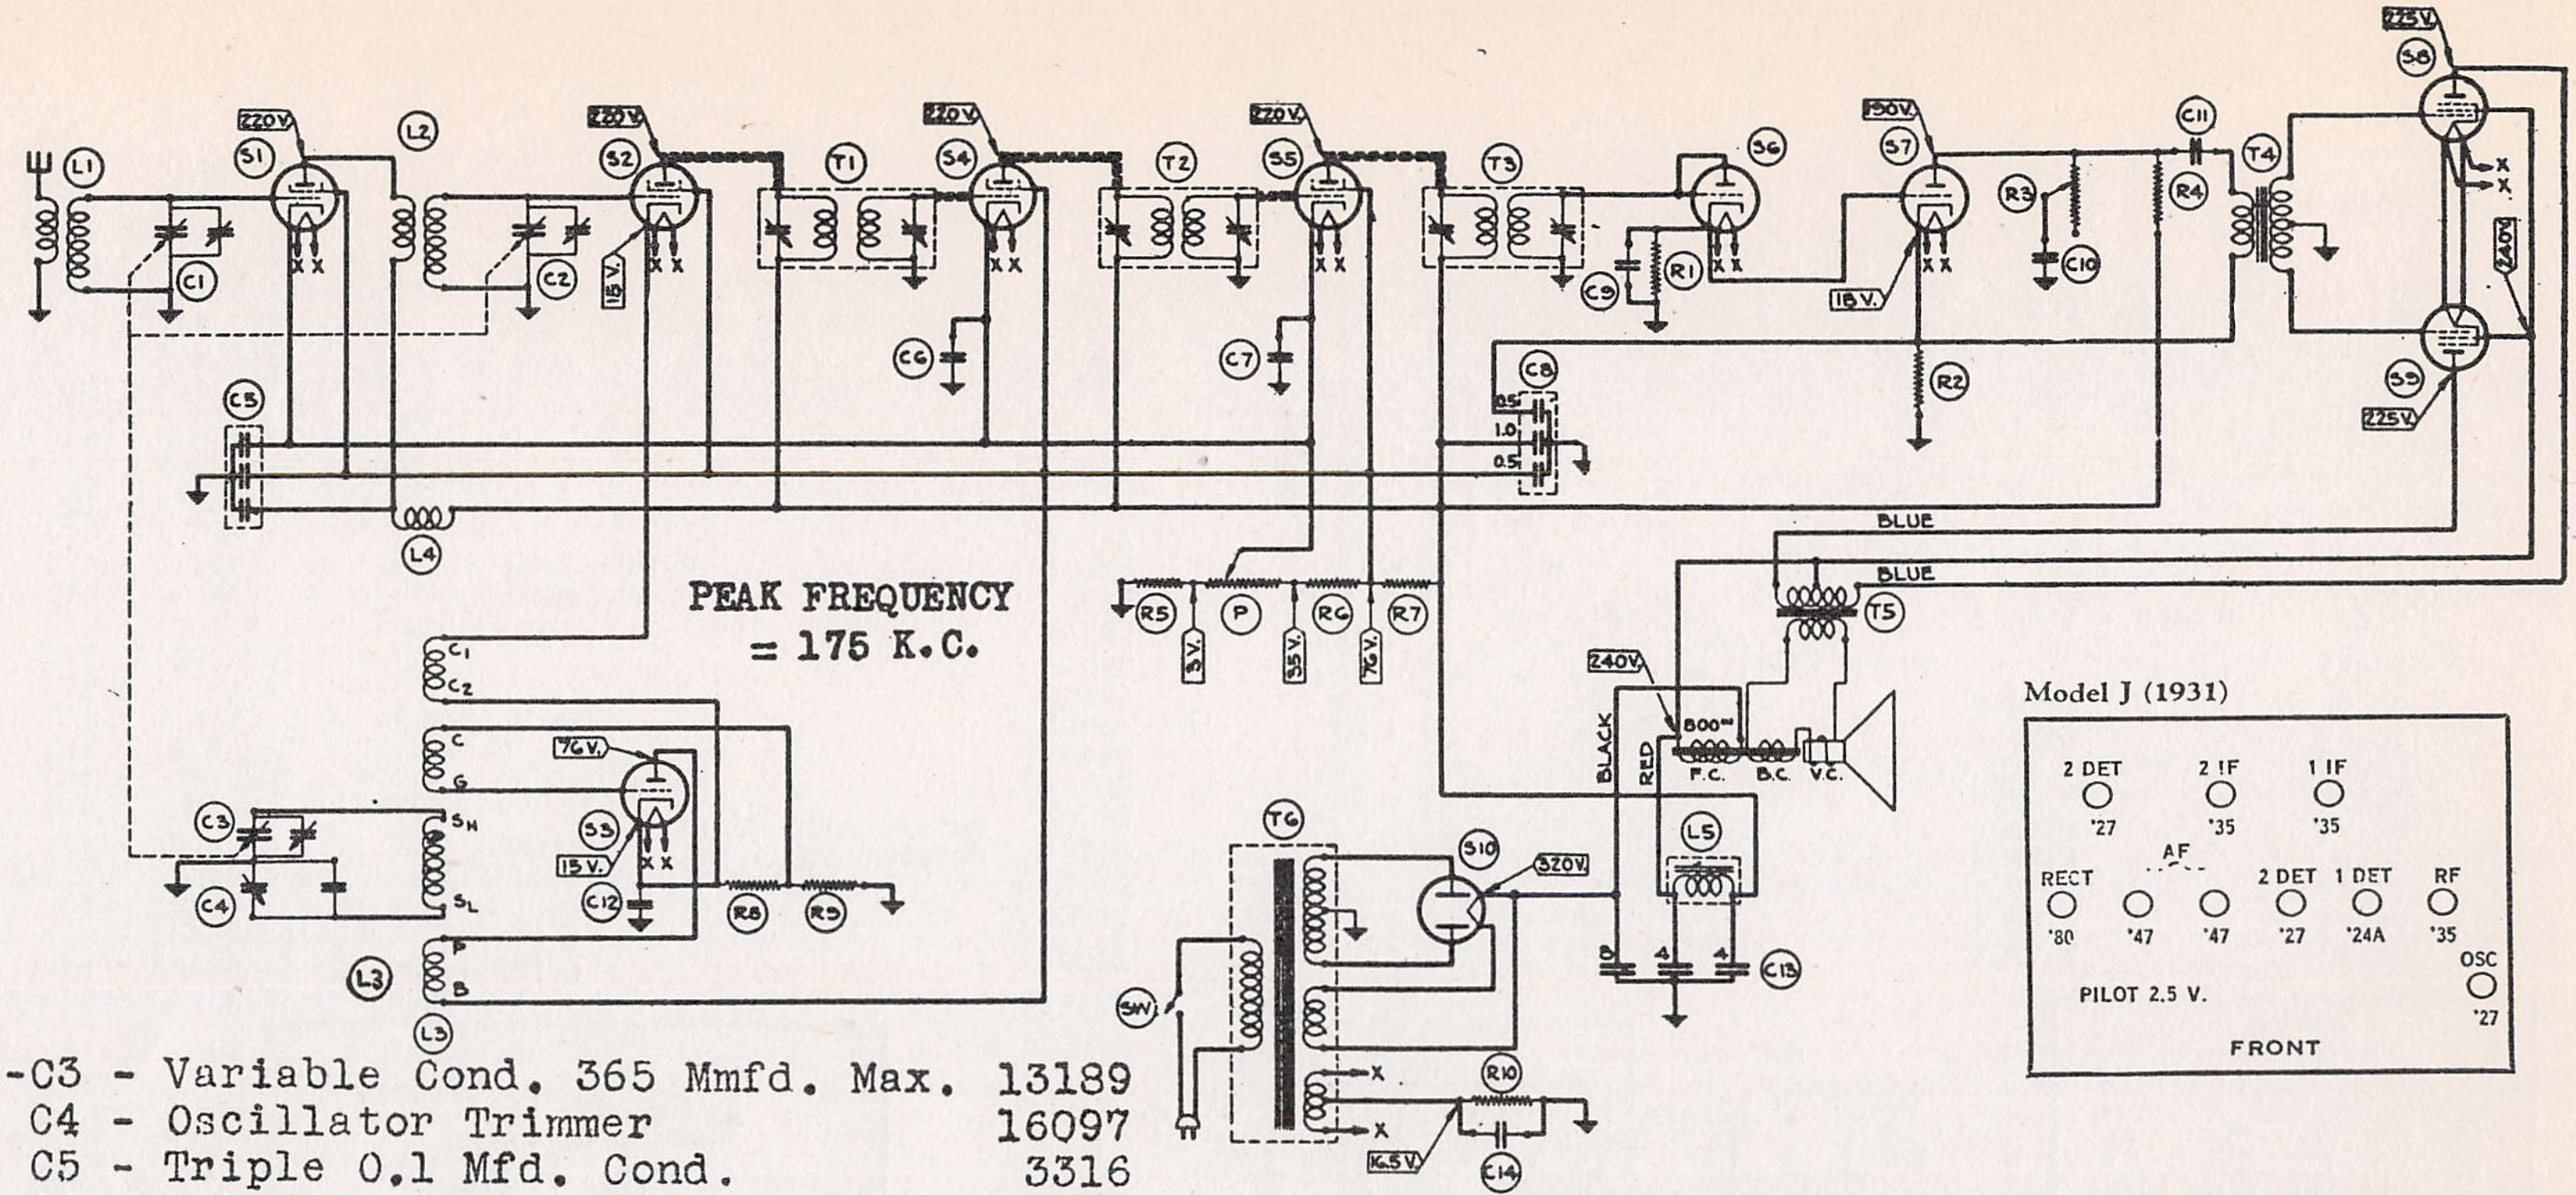
PEAK FREQUENCY
= 175 K.C.
L1
L2
L3
L4
L5
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
S1
S2
S3
S4
S5
S6
S7
S8
S9
S10
T1
T2
T3
T4
T5
T6
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
P
SW
220V.
15V.
76V.
15V.
5V.
35V.
76V.
150V.
15V.
225V.
225V.
240V.
240V.
320V.
16.5V.
0.5
1.0
0.5
BLUE
BLUE
BLACK
RED
800"
F.C.
B.C.
V.C.
C1
C2
C
G
SH
SL
P
B
X
Model J (1931)
2 DET
'27
2 IF
'35
1 IF
'35
RECT
'80
AF
'47
'47
2 DET
'27
1 DET
'24A
RF
'35
OSC
'27
PILOT 2.5 V.
FRONT

C1-C2-C3 - Variable Cond. 365 Mmfd. Max. 13189
C4 - Oscillator Trimmer 16097
C5 - Triple 0.1 Mfd. Cond. 3316
C6 - 0.1 Mfd. Cond. 200 V.Rating 3220
C7 - 0.1 Mfd. Cond. 200 V.Rating 3220
C8 - .5,.5,1.0 Mfd. Cond. (10. 300 V.0.5,0.5-200 V.) 13140
C9 - .00015 Mfd. Cond. Mica
C10 - .06 Mfd. Cond.
C11 - 0.15 Mfd. Cond.
C12 - 0.1 Mfd. Cond. 200 V.Rating
C13 - Two 4 Mfd. (Dry Electro.) 450 V.Rating
- One 8 Mfd. (" ") " " "
C14 - 0.1 Mfd. Cond. 200 V.Rating

L1 - 182 Antenna Coil
L2 - 178 R.F.Coil
L3 - 179 Osc.Coil
L4 - 281 R.F.Choke
L5 - 10145 Choke

S2 - '24 Tube
S3-S6-S7 - '27 "
S8-S9 - '47 "
S1-S4-S5 - '51 "
S10 - '80 "

R1 - 500,000 Ohm Resistor 1 Watt Carbon
R2 - 30,000 Ohm Resistor 1 Watt Carbon
R3 - ½ Megohm Tapered variable resistor
R4 - 30,000 Ohm Resistor 1 Watt Carbon
R5 - 120 Ohm Resistor Wire Wound
R6 - 10,000 Ohm Resistor 1 Watt Carbon
R7 - 10,000 Ohm Resistor 3 Watt Carbon
R8 - 100 Ohm) 1800 Ohm tapped resistor
R9 - 1700 Ohm)
R10 - 220 Ohm Resistor 2 Watt Carbon

T1 - C-1 I.F.Transformer
T2 - C-2 " " "
T3 - C-3 " " "
T4 - A-270 Input Transformer
T5 - 10143 Output Transformer
T6 - 10178 Power Transformer

P-4500 Ohm Potentiometer (Combination)
SW-On-Off A.C.Switch (Combined with Pot)

SILVER-MARSHALL, INC.

MODEL Q DeLuxe Parts List

C1	60-120 mmfd. antenna trimmer condenser	6182
C2	200 mmfd. variable trimmer condenser	3283
C3-C4	2 gang variable condenser - 365 mmfd.	3189
C5	.002 mfd. mica condenser	3311
C6	.1 mfd. condenser - Sprague 200 v.	3277
C7	.1 mfd. condenser - Sprague 400 v.	3278
C8	.25 mfd. condenser - Sprague 200 v.	3269
C9	.5 mfd. condenser - Sprague 200 v.	3266
C10	.1 mfd. condenser - Sprague 400 v.	3278
C11	.1 mfd. condenser - Sprague 400 v.	3278
C12	.0005 mfd. condenser - Sprague	7052
C13	.1 mfd. condenser - Sprague 200 v.	3277
C14	.5 mfd. condenser - Sprague 200 v.	3266
C15	.5 mfd. condenser - Sprague 200 v.	3266
C16	.0005 mfd. condenser - Sprague	7052
C17	.5 mfd. condenser - Sprague 400 v.	3273
C18	.025 mfd. condenser - Sprague 400 v.	3333
C19	.05 mfd. condenser - Sprague 400 v.	13127
C20	275-550 mmfd. osc. trimmer condenser	16179
C21	.05 mfd. condenser - Sprague 400 v.	13127
C22	.00025 mfd. condenser - Sprague	3330
C23	.25 mfd. condenser - Sprague 400 v.	3230
C24	8 mfd. dry electrolytic cond. - 75 v.	13326
C25	4 mfd. dry electrolytic cond. - 450 v.	13177
C26	.15 mfd. condenser - Sprague 400 v.	13145
C27	12 mfd. dry electrolytic cond. 450 v.	3162
C28	.1 mfd. condenser - Sprague 200 v.	3277

L1	209 Antenna choke coil
L2	208 Antenna coil
L3	517 short wave coil (4800- 1550 kilocycles)
L4	518 short wave coil(10,000- 3600 kilocycles)
L5	519 short wave coil(25,350- 9600 kilocycles)
L6	207 Broadcast oscillator coil
L7	516 Short wave oscillator coil
L8-L9-L10	283 choke coils
L11-L12	281 choke coils
L13	10238 Filter choke coil

M - Tuning meter - 20 ma.

P1	3000 ohm variable resistance	4430
P2	100,000 ohm tone control	14438
P3	375,000 ohm pot.	4360
P4	40 ohm hum balance	4445

R1	25,000 ohm Resistor - 1 watt carbon	4697
R2-R3	1,000 ohm Resistor - wire wound	4688
R4	1 megohm Resistor - 1 watt carbon	4759
R5	6,500 ohm Resistor - Ohmite Red Devil	14777
R6	200 ohm Resistor - wire wound	4722
R7-R8	1 megohm Resistor - 1 watt carbon	4759
R9	.5 megohm Resistor - 1 watt carbon	4772
R10	30,000 ohm Resistor - 1 watt carbon	14693
R11	25,000 ohm Resistor - 1 watt carbon	4697
R12	1405 ohms) Ohmite Red Devil Resistor	4752
R13	8720 ohms)	
R14	7315 ohms)	
R15	14,000 ohms)	
R16	2,000 ohms)	
R17	4,000 ohms)	

S1-S2-S3 - '58 tubes
S4-S5-S9-S10-S11 - '56 tubes
S6-S7-S8 - '45 tubes
S12 - '82 tubes.

SW1	Tandem Band Selector Switch	15348
SW2	Noise Control Switch	5121
SW3	A.C.Switch (combined with volume control)	

T1	V1 I.F.Transformer
T2	V2 I.F.Transformer
T3	V3 I.F.Transformer
T4	10268 Driver transformer
T5	Output transformer (10244 for Single speaker (10245 for Two speakers
T6	10231 Power transformer

MODEL Q DeLuxe

SILVER - MARSHALL, INC.

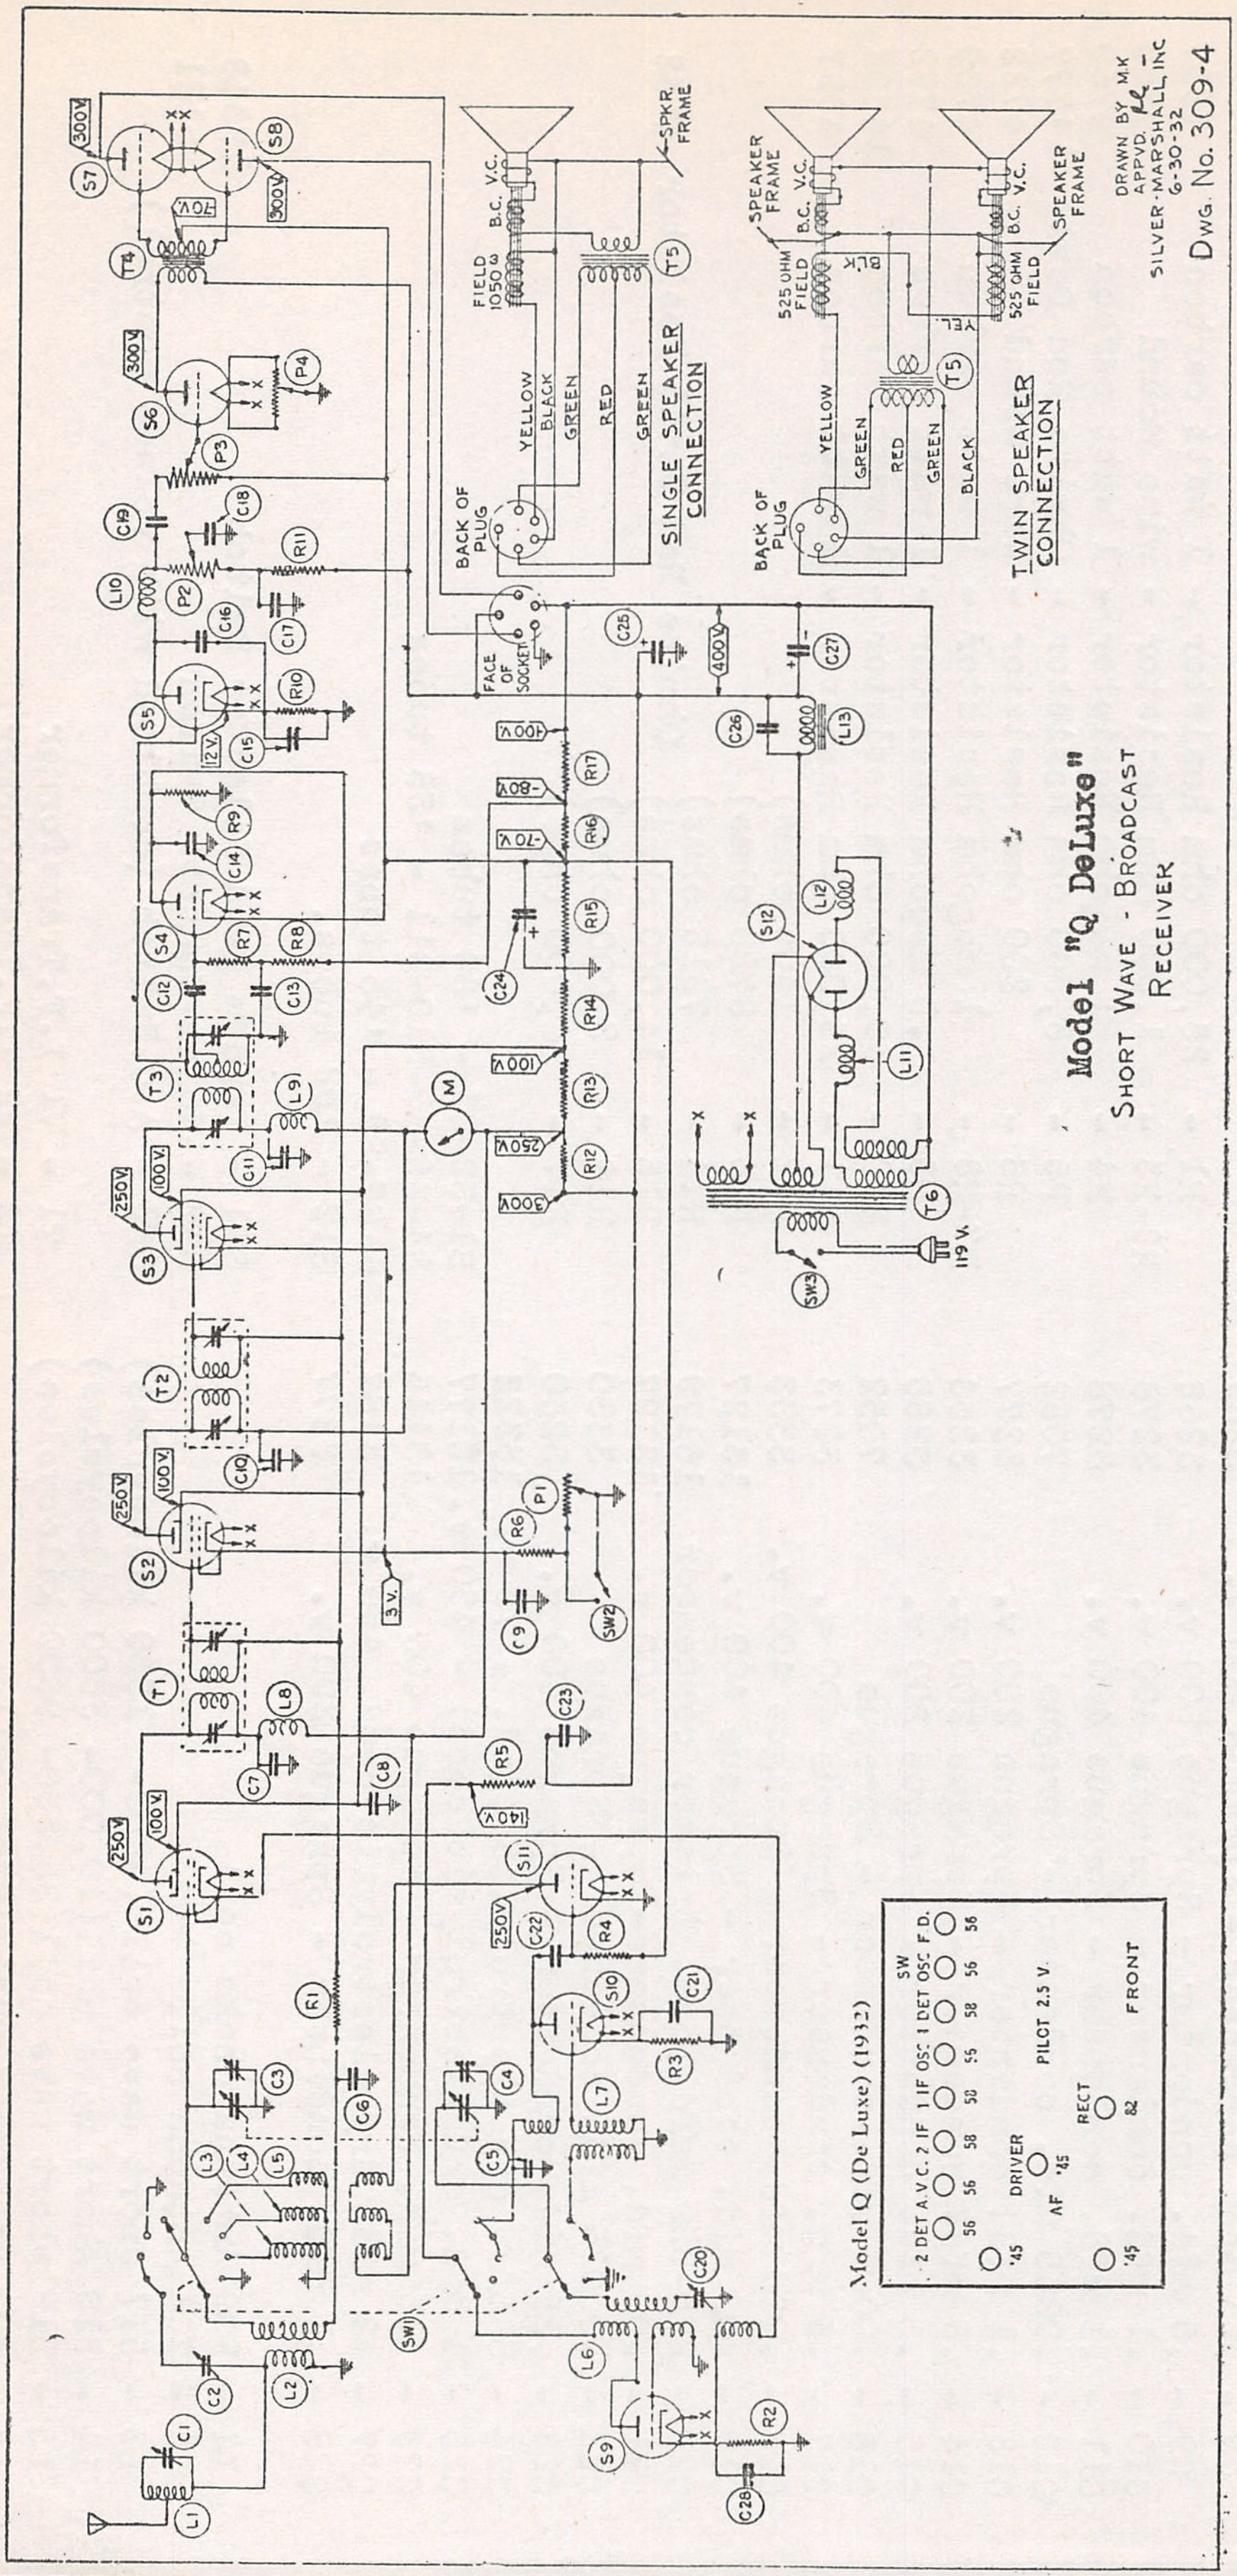
Model "Q DeLuxe"
Short Wave - Broadcast
Receiver
DRAWN BY M.K.
APPVD.
SILVER-MARSHALL, INC
6-30-32
Dwg. No. 309-4
SINGLE SPEAKER CONNECTION
TWIN SPEAKER CONNECTION
BACK OF PLUG
FACE OF SOCKET
FIELD 1050 Ω
B.C. V.C.
SPKR. FRAME
SPEAKER FRAME
525 OHM FIELD
YELLOW
BLACK
GREEN
RED
BLK
YEL.
119 V.
Model Q (De Luxe) (1932)
SW
2 DET A.V.C. 2 IF 1 IF OSC 1 DET OSC F.D.
DRIVER
AF
RECT
PILOT 2.5 V.
FRONT
'45
56
58
55
82
300V
250V
100V
70V
12V
3 V.
140V
400V
-80V
-70V
S1
S2
S3
S4
S5
S6
S7
S8
S9
S10
S11
S12
T1
T2
T3
T4
T5
T6
M
SW1
SW2
SW3
P1
P2
P3
P4
L1
L2
L3
L4
L5
L6
L7
L8
L9
L10
L11
L12
L13
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21
C22
C23
C24
C25
C26
C27
C28

MODEL "R" SUPERHETERODYNE

C1	48-112 mmfd. Trimmer Condenser	16275
C2-C3	2 gang variable Condenser - 365 mmfd. max.	13372
C4	4 mfd. Dry Electrolytic Condenser 450 V.	13177
C5	.1 Mfd. Condenser 200 V.	3220
C6	.1 Mfd. Condenser 400 V.	3173
C7	.1 mfd. Condenser 200 V.	3220
C8	.001 Mfd. Condenser - mica	7039
C9	.001 Mfd. Condenser - Mica	7039
C10	.025 Mfd. Condenser - Sprague 200 V.	3333
C11	½ Mfd. Condenser - Polymet Waxtite- 200 V.	13329
C12	.025 Mfd. Condenser - Sprague 200 V.	3333
C13	1 Mfd. Cond. (1,½,½, mfd. Unit)	13140
C14	.03 Mfd. Condenser - Sprague 700 V.	13331
C15	75-500 Mfd. Osc.Trimmer Condenser	16179
C16	.1 Mfd. Condenser - Sprague 200 V.	3220
C17	.1 Mfd. Condenser - Sprague 200 V.	3220
C18	.15 Mfd. Condenser - Sprague 200 V.	13145
C19	½ Mfd. Condenser - Polymet Waxtite 200 V.	13329
C20	.0005 Mfd. Condenser - Mica	7052
C21	.1 Mfd. Condenser - Sprague 200 V.	3220
C22	½ Mfd. Condenser (See C13)	
C23	½ Mfd. Condenser (See C13)	
C24	8 Mfd. Dry Electrolytic Condenser 450 V.	13181
C25	12 Mfd. Dry Electrolytic Condenser 450 V.	3162
M	Tuning Meter - 15 ma.	13923
P1	100,000 Ohm Pot. (Tone Control)	14438
P2	250,000 Ohm Pot. (Vol Control combined with A.C.Switch)	4360
R1	250 Ohm Resistor - wire wound	4725
R2	60,000 Ohm Resistor - 1 watt carbon	4695
R3	25,000 Ohm Resistor - 1 watt carbon	4697
R4	100,000 Ohm Resistor - 1 watt carbon	14691
R5	5,000 Ohm Resistor - 1 watt carbon	14765
R6	400 Ohm Resistor - wire wound	4701
R7	3,500 Ohm Resistor - 1 watt carbon	4804
R8	80,000 Ohm Resistor - 1 watt carbon	14778
R9	1 Megohn Resistor - 1 watt carbon	4759
R10	1 Megohn Resistor - 1 watt carbon	4759
R11	9,000 Ohm Resistor - 1 watt carbon	14746
R12	60,000 Ohm Resistor - 1 watt carbon	4695
R13	100,000 Ohm Resistor - 1 watt carbon	14691
R14	1 megohm Resistor - 1 watt carbon	4759
R15	8,250 Ohms) 14,750 Ohm R.D.Ohmite - 3 watt	14781
R16	6,500 ohms)	
R17	½ Megohm Resistor - 1 watt	4772
R18	12,000 Ohm Resistor - 1 watt	4746
SW1	Change-over Switch	15327
SW2	A.C.Switch (Combined with Vol.Control)	

MODEL R

SILVER-MARSHALL, INC.

T1 - Q-1 I.F. Transformer
T2 - Q-2 I.F. Transformer
T3 - Q-4 I.F. Transformer
T4 - 10202 Power Transformer
T5 - 10208 Output Transformer.

L1 - 203 Police Call Coil
L2 - 204 Antenna Coil
L3 - 205 Oscillator Coil
L4 - 283 R.F Choke

S1 - '24 Tube
S2-S3 - '51 Tubes
S4-S5-S8-S9 - '27 Tubes
S6-S7 - '47 Tubes
S10 - '80 Tube

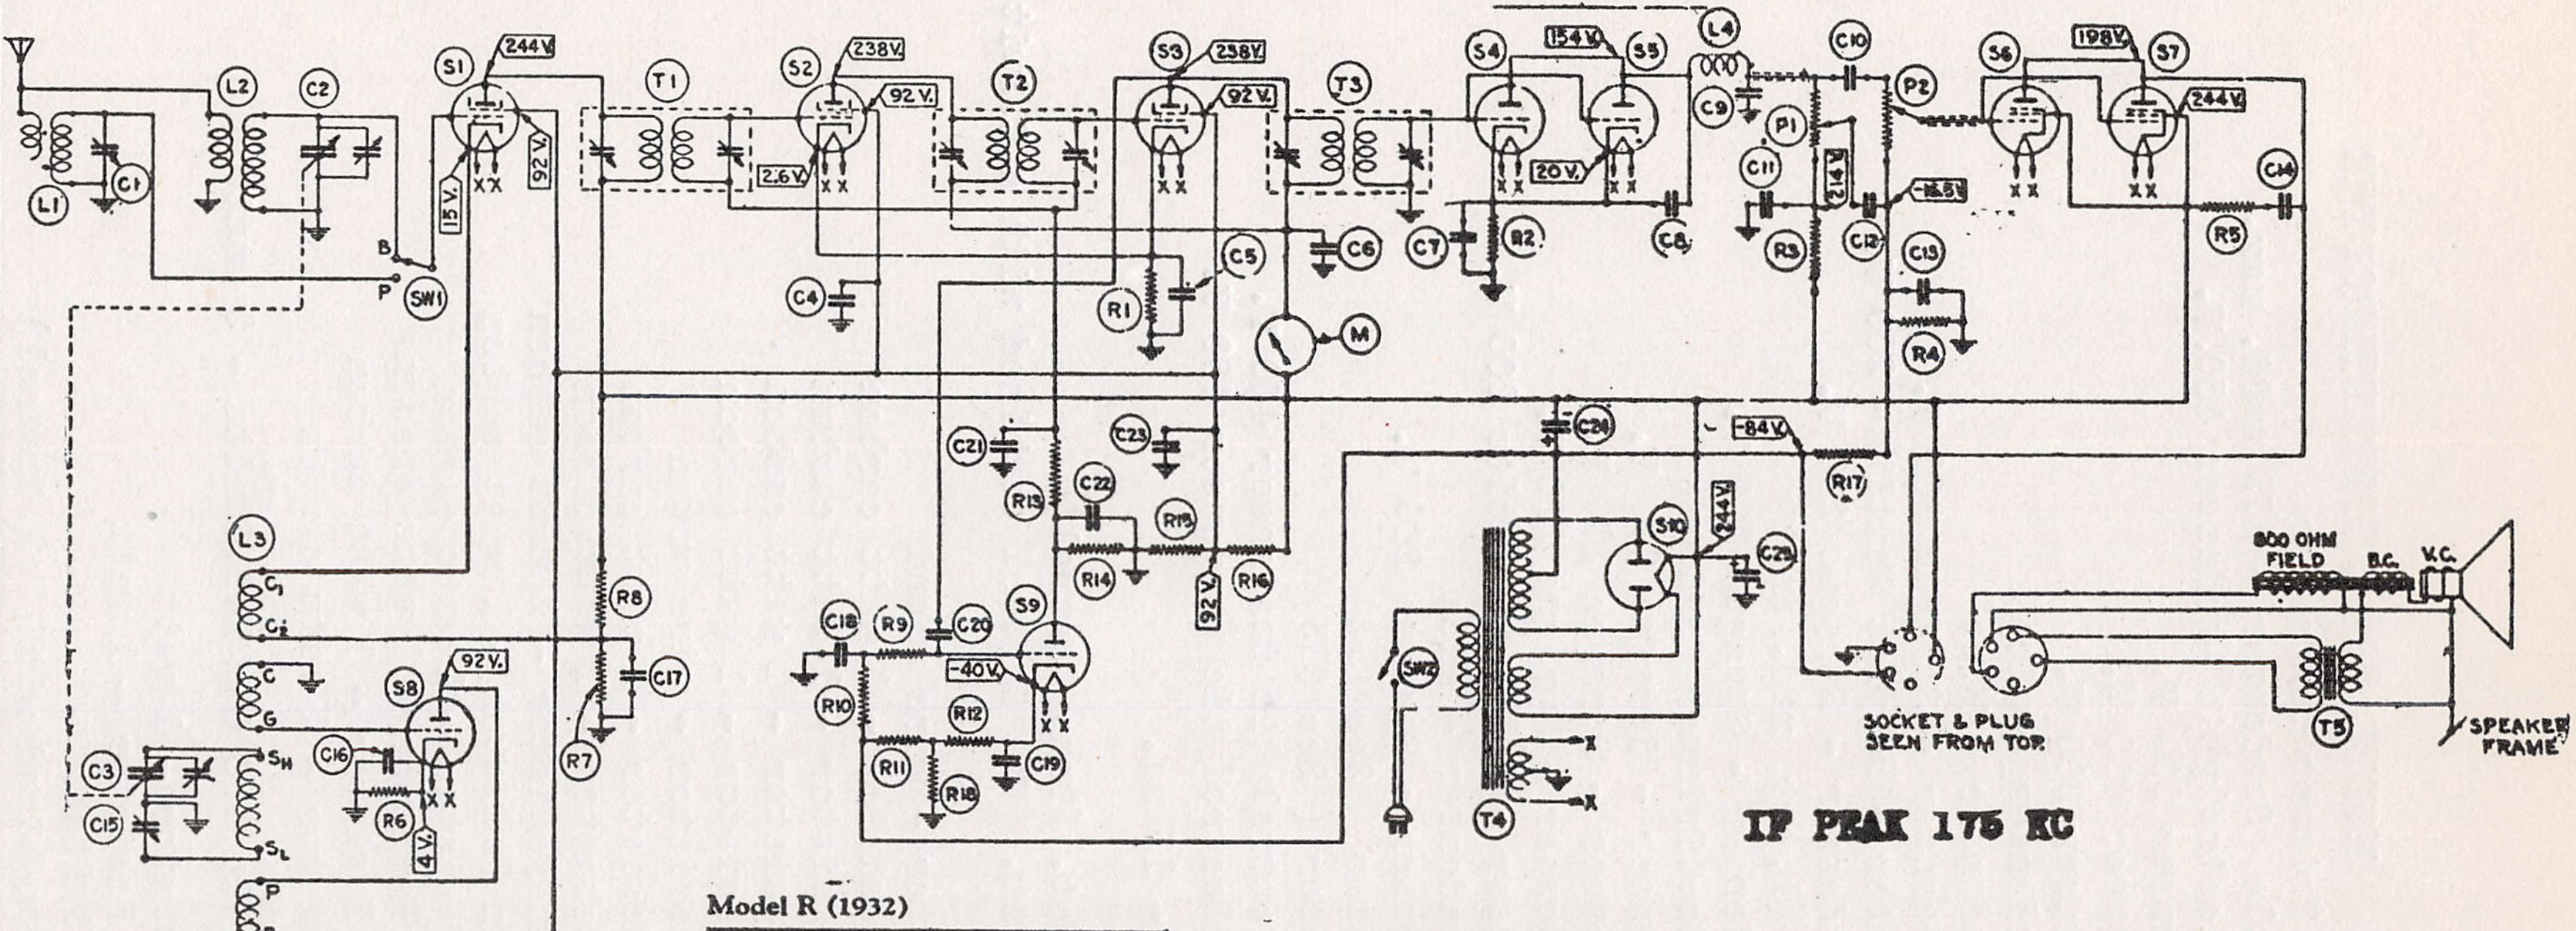
L1
C1
L2
C2
S1
244V
15 V.
92 V.
B
P
SW1
C3
C15
L3
C1
C2
C
G
SH
SL
P
B
S8
92V.
C16
R6
4V.
R8
C17
R7
T1
S2
238V
92 V.
2.6V
C4
T2
S3
238V
92V.
C5
R1
C6
M
T3
C7
R2
S4
154V
S5
20 V.
C8
L4
C9
C10
P1
P2
C11
R3
R 14.3
C12
-16.5V
C13
R4
S6
198V
S7
244V
C14
R5
C21
C23
C22
R13
R15
R14
92 V.
R16
C18
R9
C20
S9
-40V.
R10
R12
R11
R18
C19
C24
-84V.
R17
S10
244V.
C25
SW2
T4
X
X
SOCKET & PLUG
SEEN FROM TOP
800 OHM
FIELD
B.C.
V.C.
T5
SPEAKER
FRAME

IF PEAK 175 KC

NOTE-
ALL VOLTAGES MEASURED
FROM GROUND.

Model R (1932)

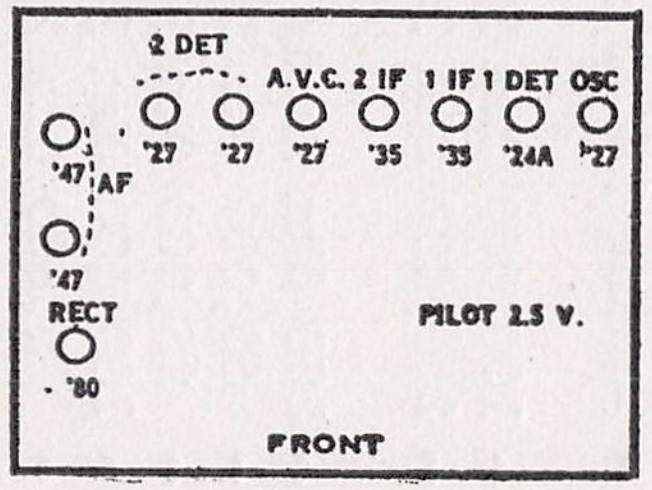
2 DET
A.V.C.
2 IF
1 IF
1 DET
OSC
'27
'27
'27
'35
'35
'24A
'27
'47
AF
'47
RECT
'80
PILOT 2.5 V.
FRONT

DRAWN BY M.K.
CHECKED BY ~~~~
APPVD. BY ~~~~
SILVER-MARSHALL, INC.
MARCH 3, 1932.

Dwg. No. 156

SIMPLEX RADIO CO.

MODEL N D.C.
MODEL R A.C.

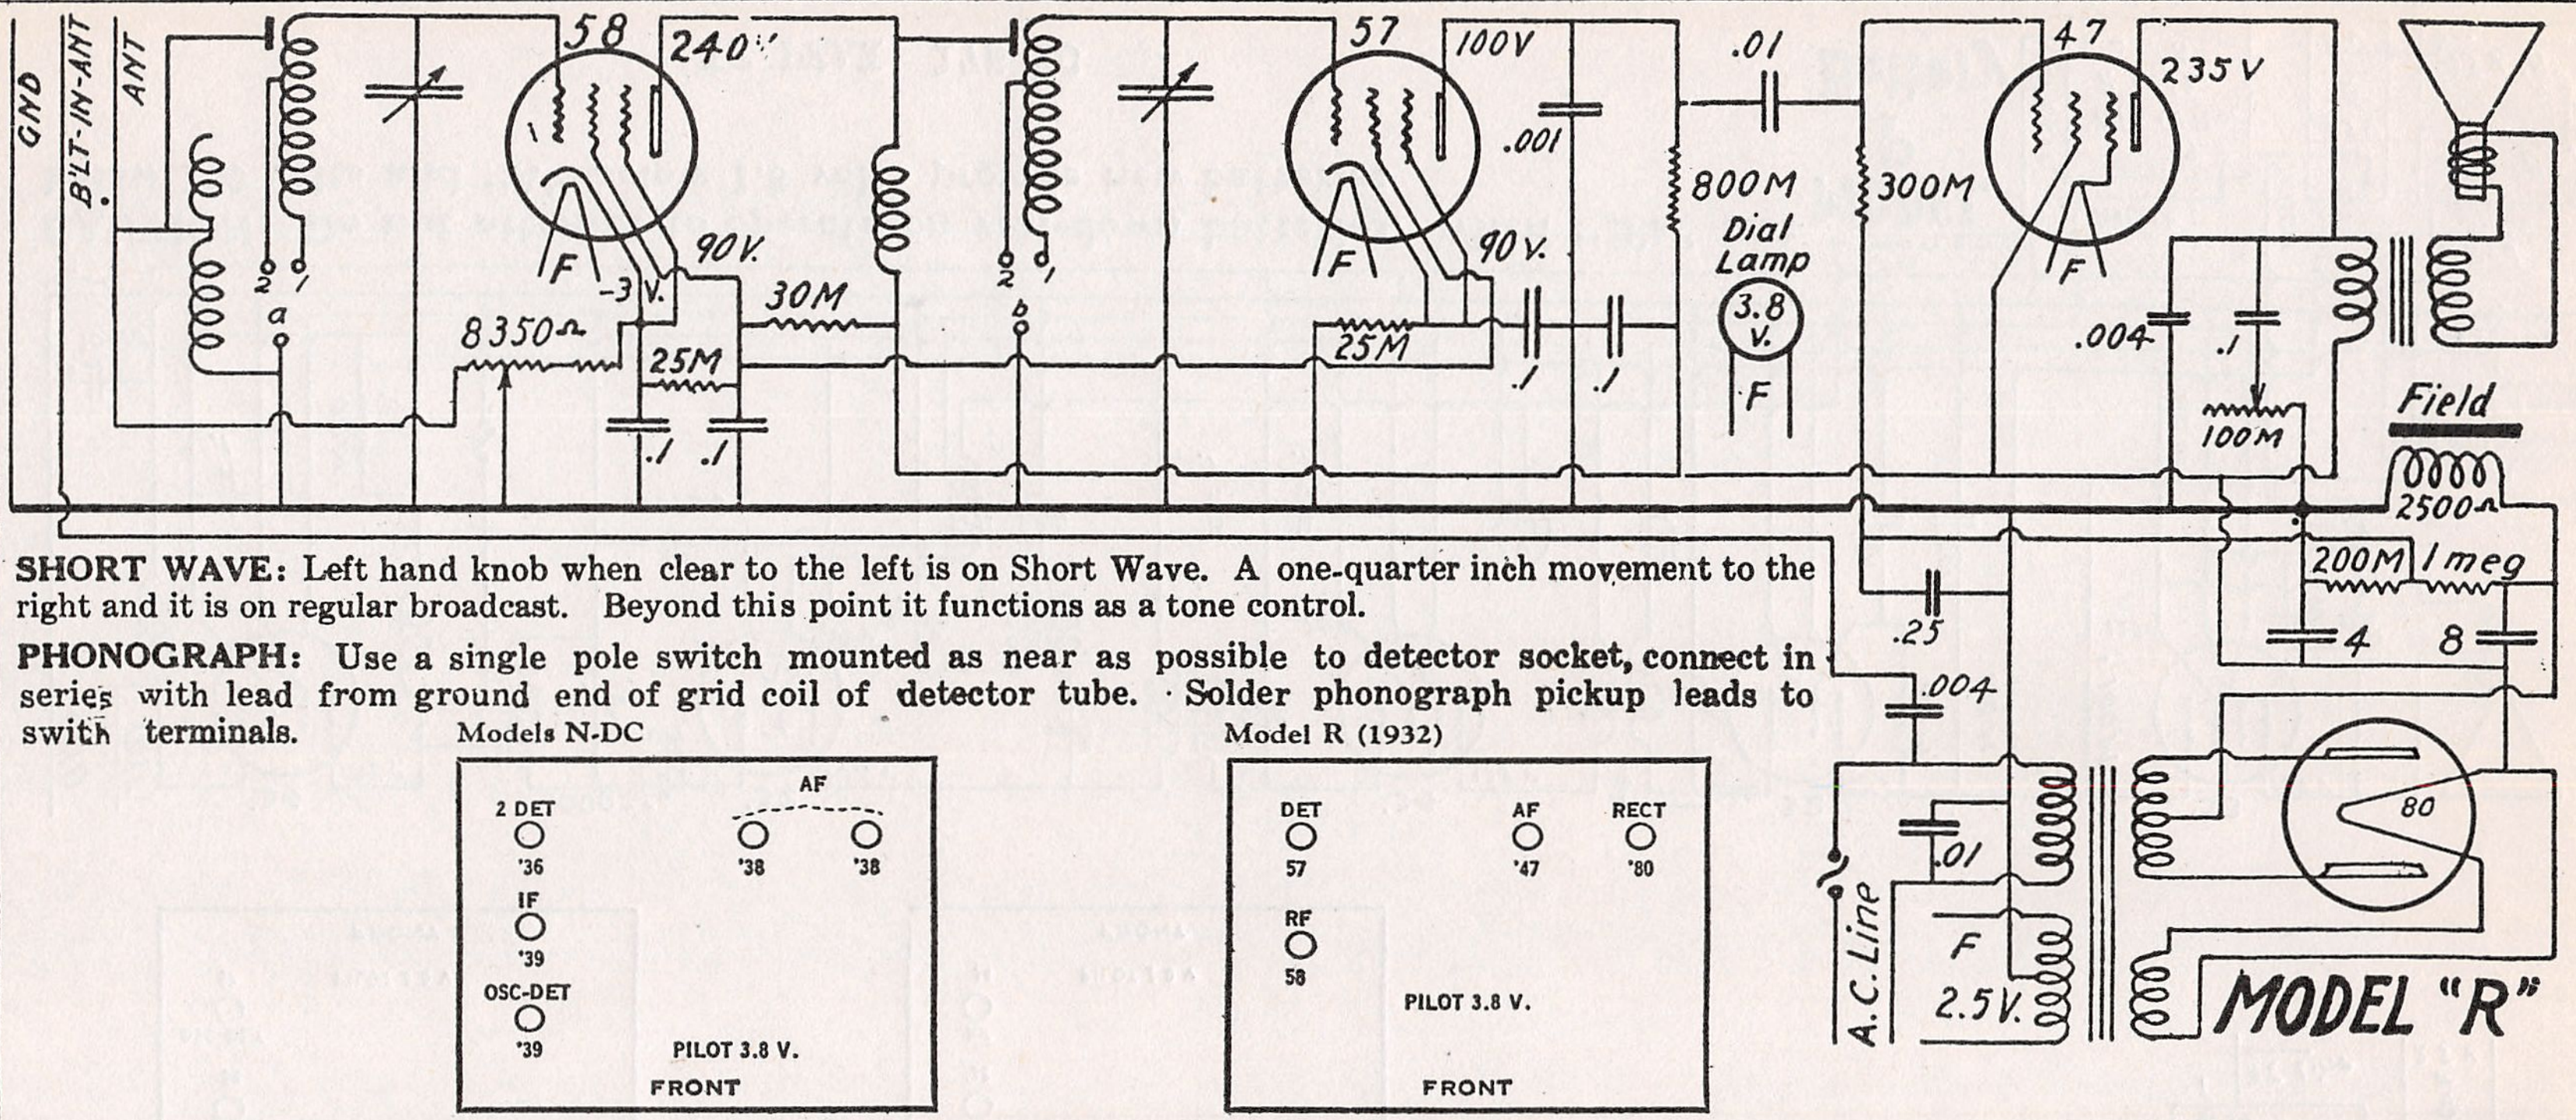
GND
B'LT-IN-ANT
ANT
58
240V
90V.
-3V.
F
8350Ω
30M
25M
.1
.1
57
100V
.001
90V.
F
25M
.1
.1
.01
800M
Dial Lamp
3.8 V.
F
300M
47
235V
F
.004
.1
100M
Field
2500Ω
200M
1 meg
4
8
.25
.004
.01
F
2.5V.
A.C. Line
80
MODEL "R"
Models N-DC
2 DET
'36
IF
'39
OSC-DET
'39
AF
'38
'38
PILOT 3.8 V.
FRONT
Model R (1932)
DET
57
RF
58
AF
'47
RECT
'80
PILOT 3.8 V.
FRONT

SHORT WAVE: Left hand knob when clear to the left is on Short Wave. A one-quarter inch movement to the right and it is on regular broadcast. Beyond this point it functions as a tone control.

PHONOGRAPH: Use a single pole switch mounted as near as possible to detector socket, connect in series with lead from ground end of grid coil of detector tube. Solder phonograph pickup leads to swith terminals.

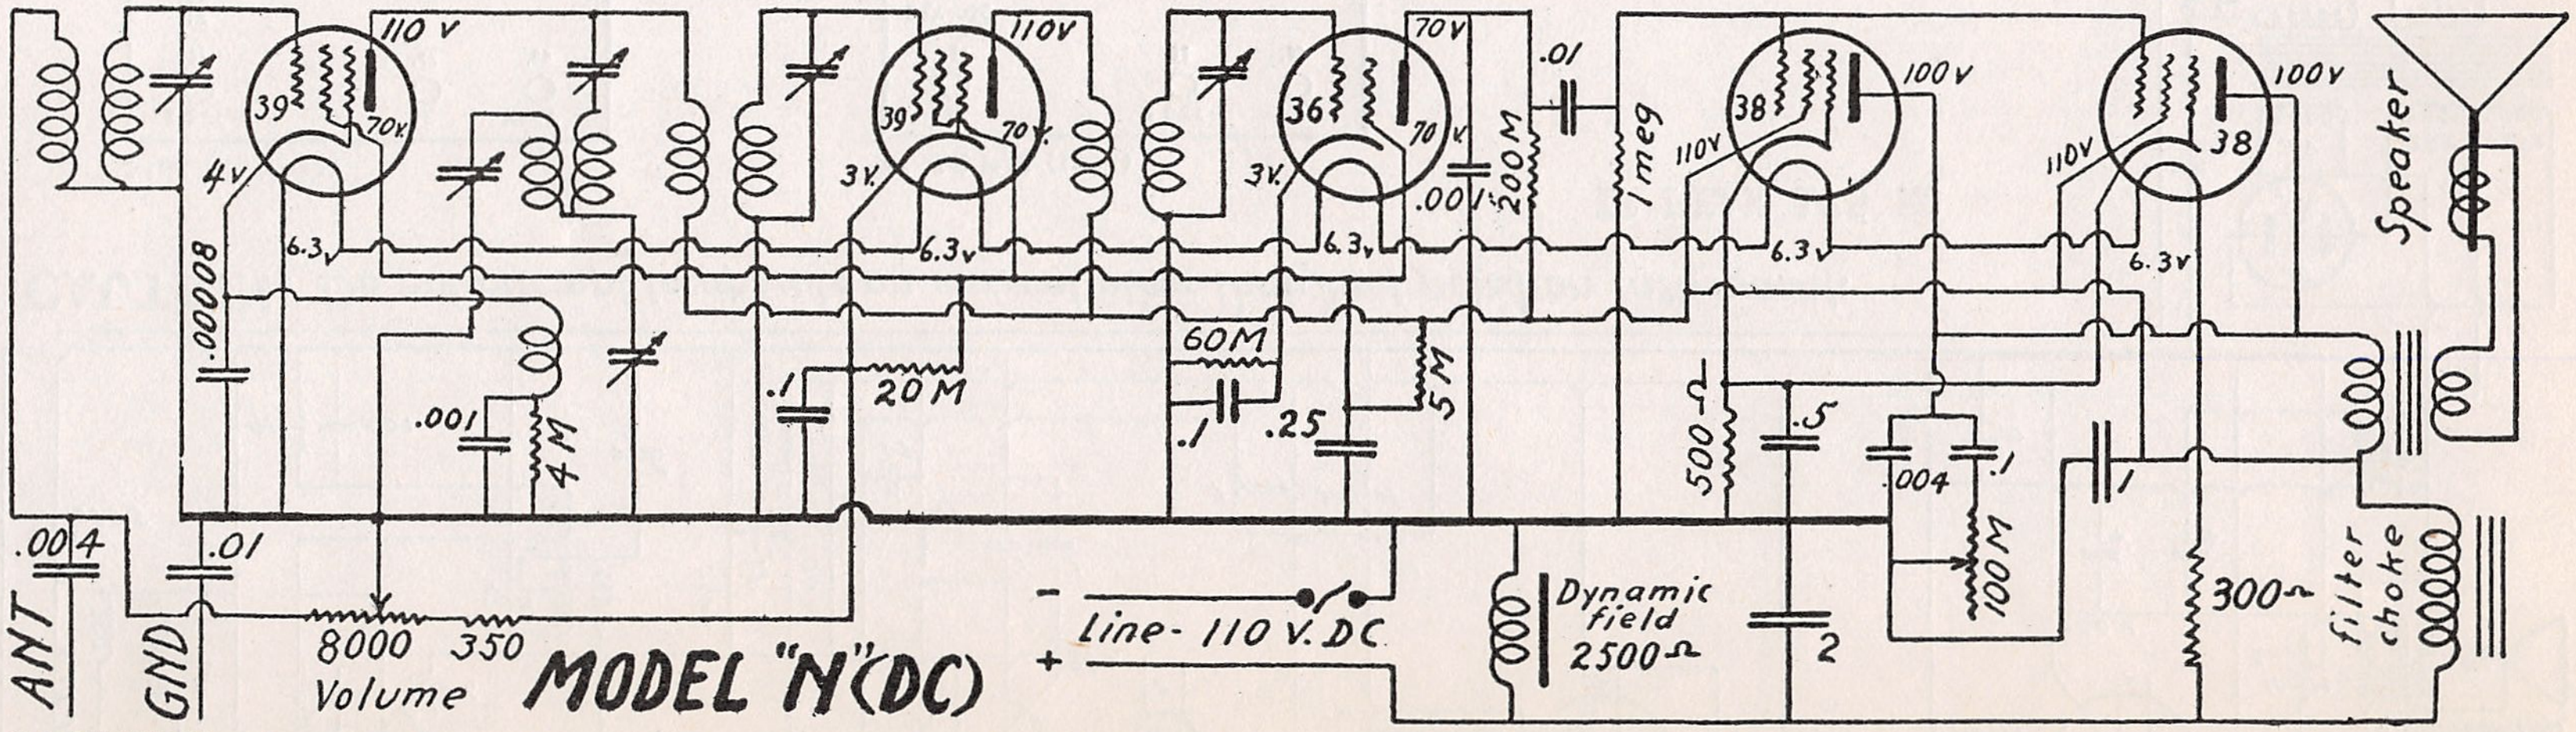
ANT
.004
GND
.01
.00008
39
110 V
70V.
4V
6.3V
.001
4M
8000
350
Volume
39
110V
70V.
3V.
6.3V
.1
20M
36
70V
70V.
3V.
6.3V
60M
.1
.25
5M
.001
200M
.01
1 meg
38
100V
110V
6.3V
500Ω
.5
.004
.1
100M
Dynamic field 2500Ω
2
38
100V
110V
6.3V
.1
300Ω
filter choke
Speaker
-
+
Line - 110 V. DC
MODEL "N"(DC)

CAUTION: *Do not attempt to operate on current other than that noted on instrument. Reverse attachment plug if set does not start operating in a few seconds after being turned on.*

BALANCING: The intermediate stage is carefully phased and sealed to 175 K. G. and should not be tampered with.

PHONOGRAPH: Use a single pole switch mounted as near as possible to the second detector socket, connect in series with lead from ground end of the grid coil of second detector tube. Solder phonograph pick-up leads to switch terminals

MODEL P
MODEL P Battery

SIMPLEX RADIO CO.

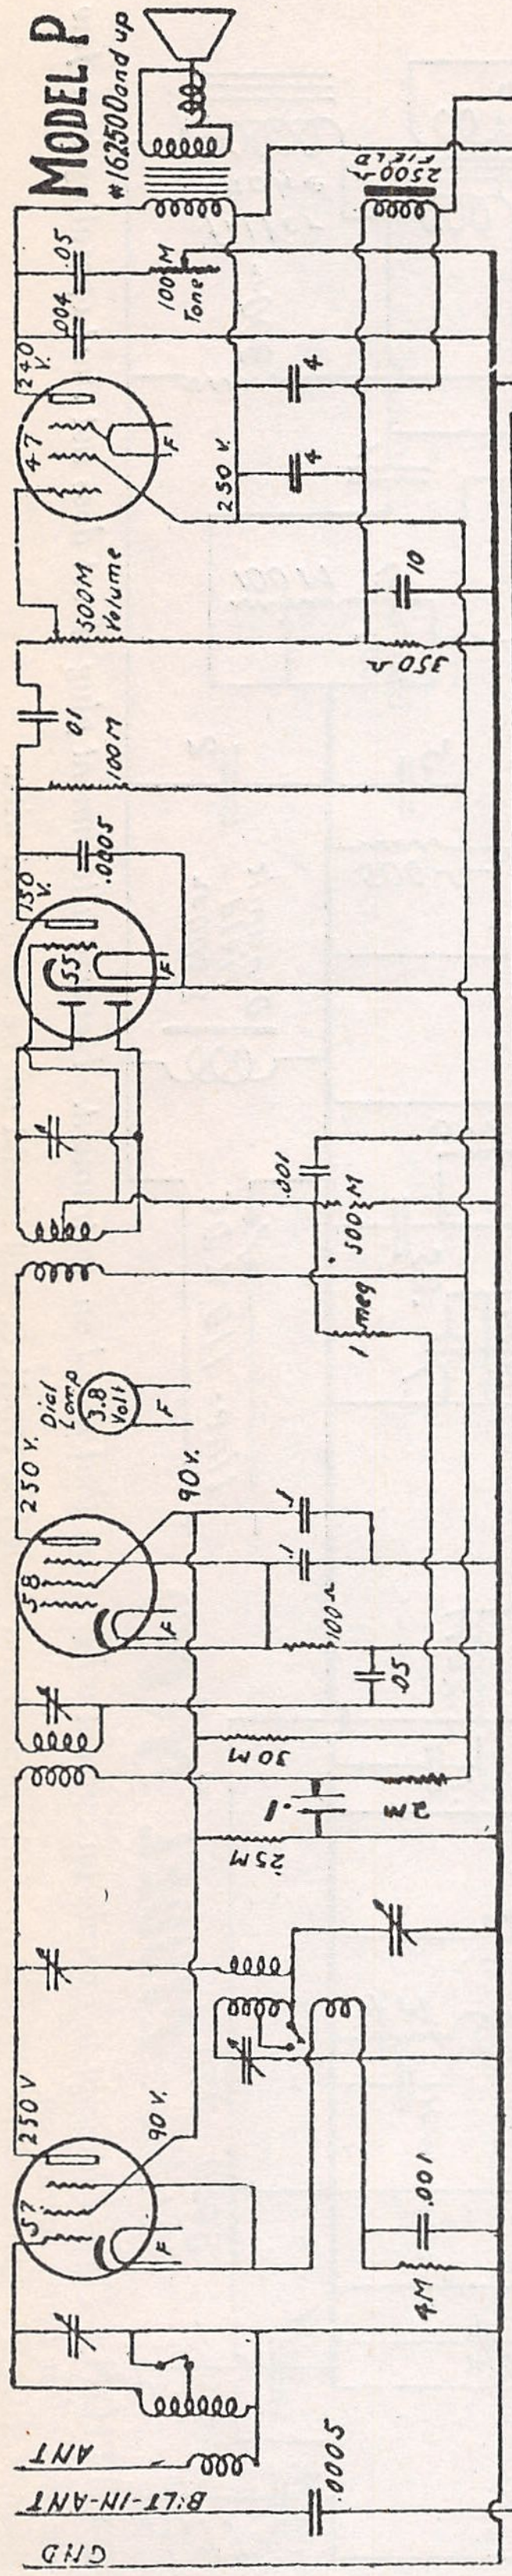
MODEL P
#162500 and up
2500 Ω Field
80
5V
325V
325V
2.5V
A.C. Line
Sw
.01
47
240 V.
250 V.
.004
.05
100 M Tone
4
4
10
350 Ω
500 M Volume
.01
100 M
55
130 V.
.0005
.001
500 M
1 meg
58
250 V.
90 V.
Dial Lamp 3.8 Volt
.1
.1
100 Ω
.05
30 M
.1
2 M
25 M
57
250 V
90 V.
.001
4 M
.0005
ANT
BLT-IN-ANT
GND

CAUTION: Do not attempt to operate on current other than that noted on instrument.

IF PEAK 175 KC

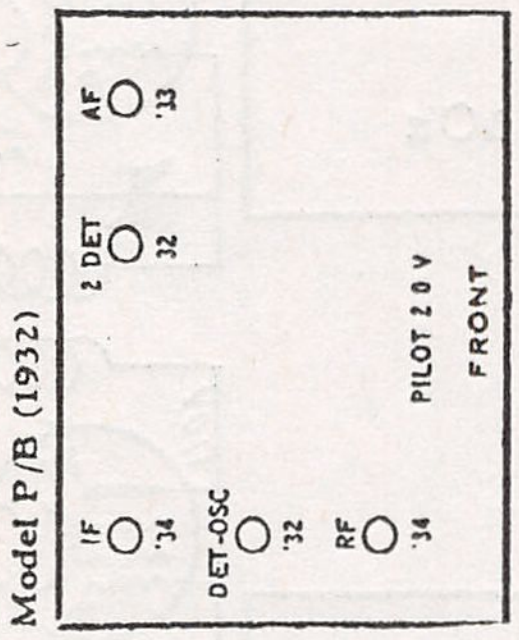
Model P/B (1932)
IF
'34
DET-OSC
'32
RF
'34
2 DET
32
AF
'33
PILOT 2.0 V
FRONT

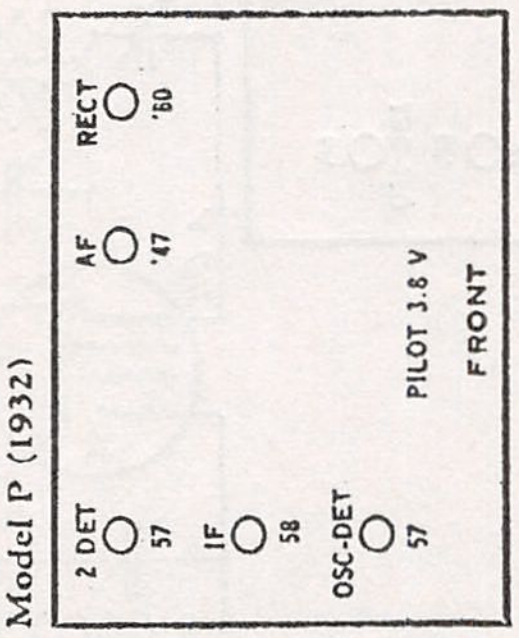
Model P (1932)
2 DET
57
IF
58
OSC-DET
57
AF
'47
RECT
'80
PILOT 3.8 V
FRONT

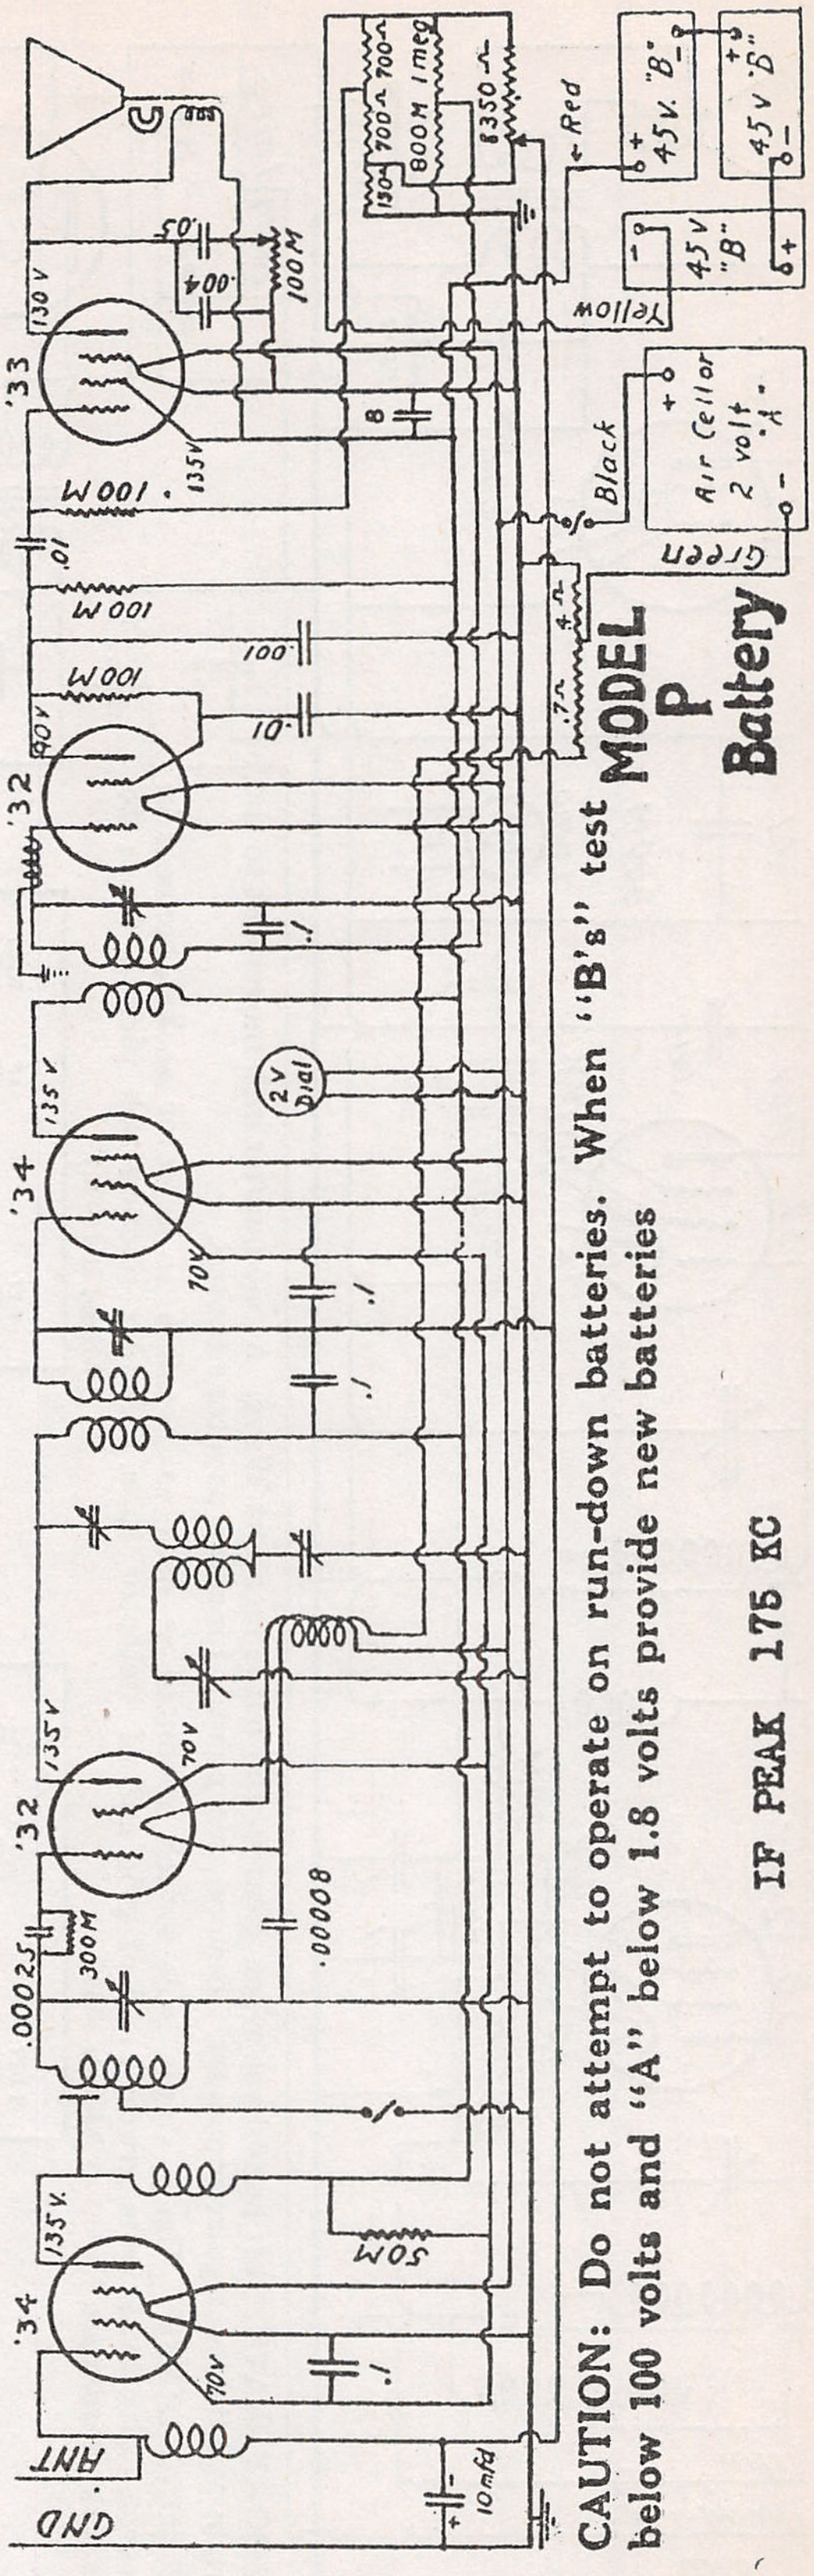
MODEL P Battery
'33
130 V
135V
.05
.004
100 M
100 M
.01
100 M
100
.01
8
130 Ω
700 Ω
700 Ω
800 M
1 meg
8350 Ω
Red
Yellow
Black
Green
+ 45 V. "B" -
+ 45 V "B" -
- 45 V "B" +
+ Air Cell or 2 volt "A" -
4 Ω
7 Ω
'32
90V
.1
2 V Dial
'34
135 V
70V
.1
.1
'32
135 V
70V
.00025
300 M
.00008
'34
135 V.
70V
50 M
.1
10 mfd
ANT
GND

CAUTION: Do not attempt to operate on run-down batteries. When "B's" test below 100 volts and "A" below 1.8 volts provide new batteries

IF PEAK 175 KC

MODEL P 1931
Schematic
MODEL Q 1931
Schematic

SIMPLEX RADIO CO.

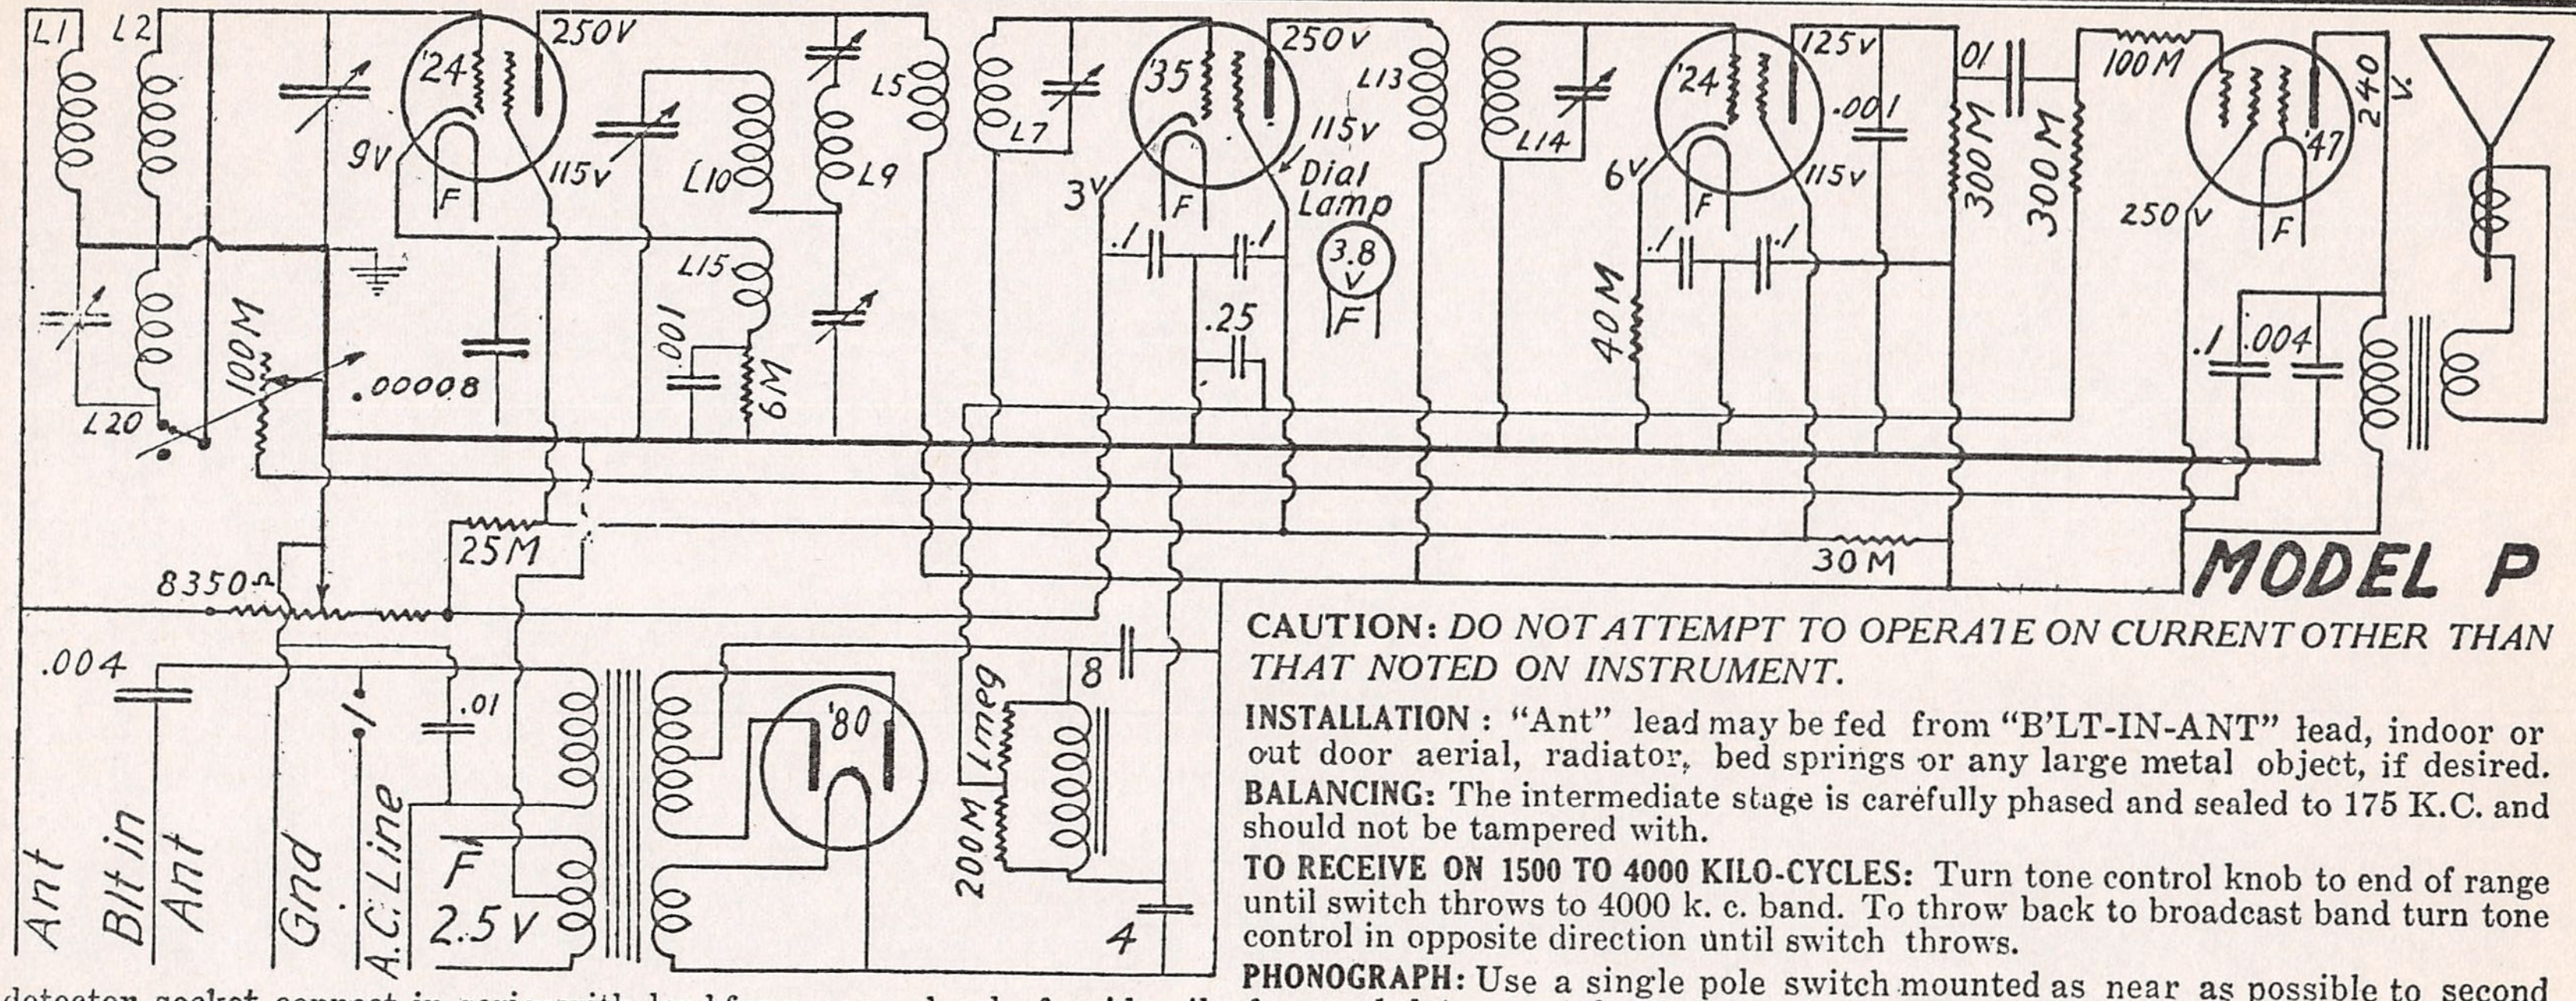
MODEL P
L1
L2
L20
100M
.00008
'24
250V
9V
115V
F
L10
L15
.001
6M
L5
L9
L7
'35
250V
L13
115V
3V
Dial Lamp
3.8 V
.1
.1
.25
L14
'24
125V
6V
.001
115V
.1
.1
40M
01
300M
300M
100M
'47
240 V
250 V
.1
.004
25M
30M
8350Ω
.004
.01
Ant
Blt in Ant
Gnd
A.C. Line
2.5 V
'80
200M
1 meg
8
4

CAUTION: *DO NOT ATTEMPT TO OPERATE ON CURRENT OTHER THAN THAT NOTED ON INSTRUMENT.*

INSTALLATION: "Ant" lead may be fed from "B'LT-IN-ANT" lead, indoor or out door aerial, radiator, bed springs or any large metal object, if desired.

BALANCING: The intermediate stage is carefully phased and sealed to 175 K.C. and should not be tampered with.

TO RECEIVE ON 1500 TO 4000 KILO-CYCLES: Turn tone control knob to end of range until switch throws to 4000 k. c. band. To throw back to broadcast band turn tone control in opposite direction until switch throws.

PHONOGRAPH: Use a single pole switch mounted as near as possible to second detector socket, connect in series with lead from ground end of grid coil of second detector tube. Solder phonograph pickup leads to switch terminals

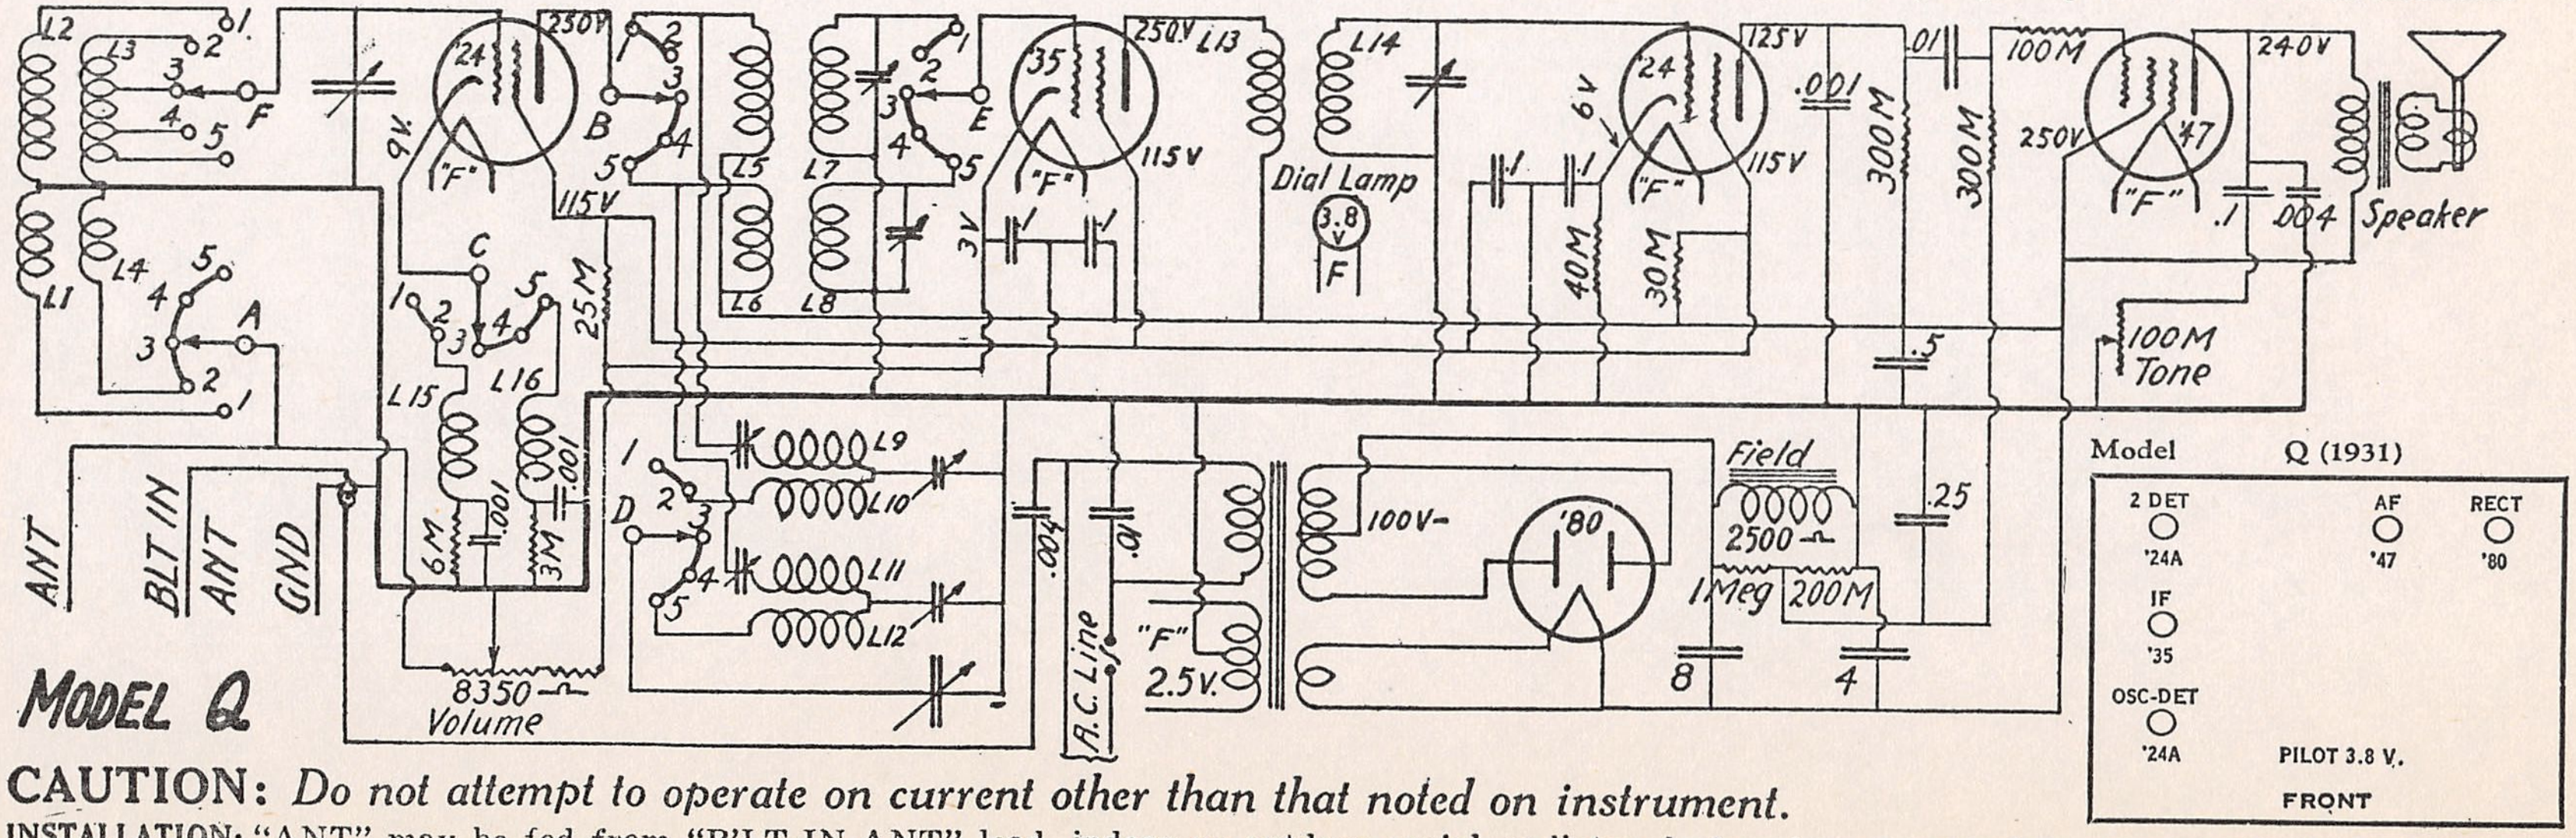
MODEL Q
L2
L3
L4
L1
F
A
1
2
3
4
5
'24
250V
9V
"F"
B
C
115V
25M
L15
L16
6M
.001
.001
3M
8350Ω
Volume
ANT
BLT IN ANT
GND
L5
L6
L7
L8
E
'35
250V
L13
115V
3V
D
L9
L10
L11
L12
.004
.01
A.C. Line
"F"
2.5V.
L14
Dial Lamp
3.8 V
F
'24
125V
6V
115V
.001
40M
30M
.01
300M
300M
100M
'47
240V
250V
.1
.004
Speaker
100M Tone
.5
.25
Field
2500Ω
1 Meg
200M
100V-
'80
8
4
Model Q (1931)
2 DET '24A
IF '35
OSC-DET '24A
AF '47
RECT '80
PILOT 3.8 V.
FRONT

CAUTION: *Do not attempt to operate on current other than that noted on instrument.*

INSTALLATION: "ANT" may be fed from "B'LT-IN-ANT" lead, indoor or outdoor aerial, radiator, bed springs, or any large metal object, if desired

BALANCING: The intermediate stage is carefully phased and sealed to 175 K. C. and should not be tampered with.

PHONOGRAPH: Use a single pole switch mounted as near as possible to the second detector socket, connect in series with lead from ground end of the grid coil of second detector tube. Solder phonograph pick-up leads to switch terminals.

SONORA

MODEL 71,72,73
Schematic

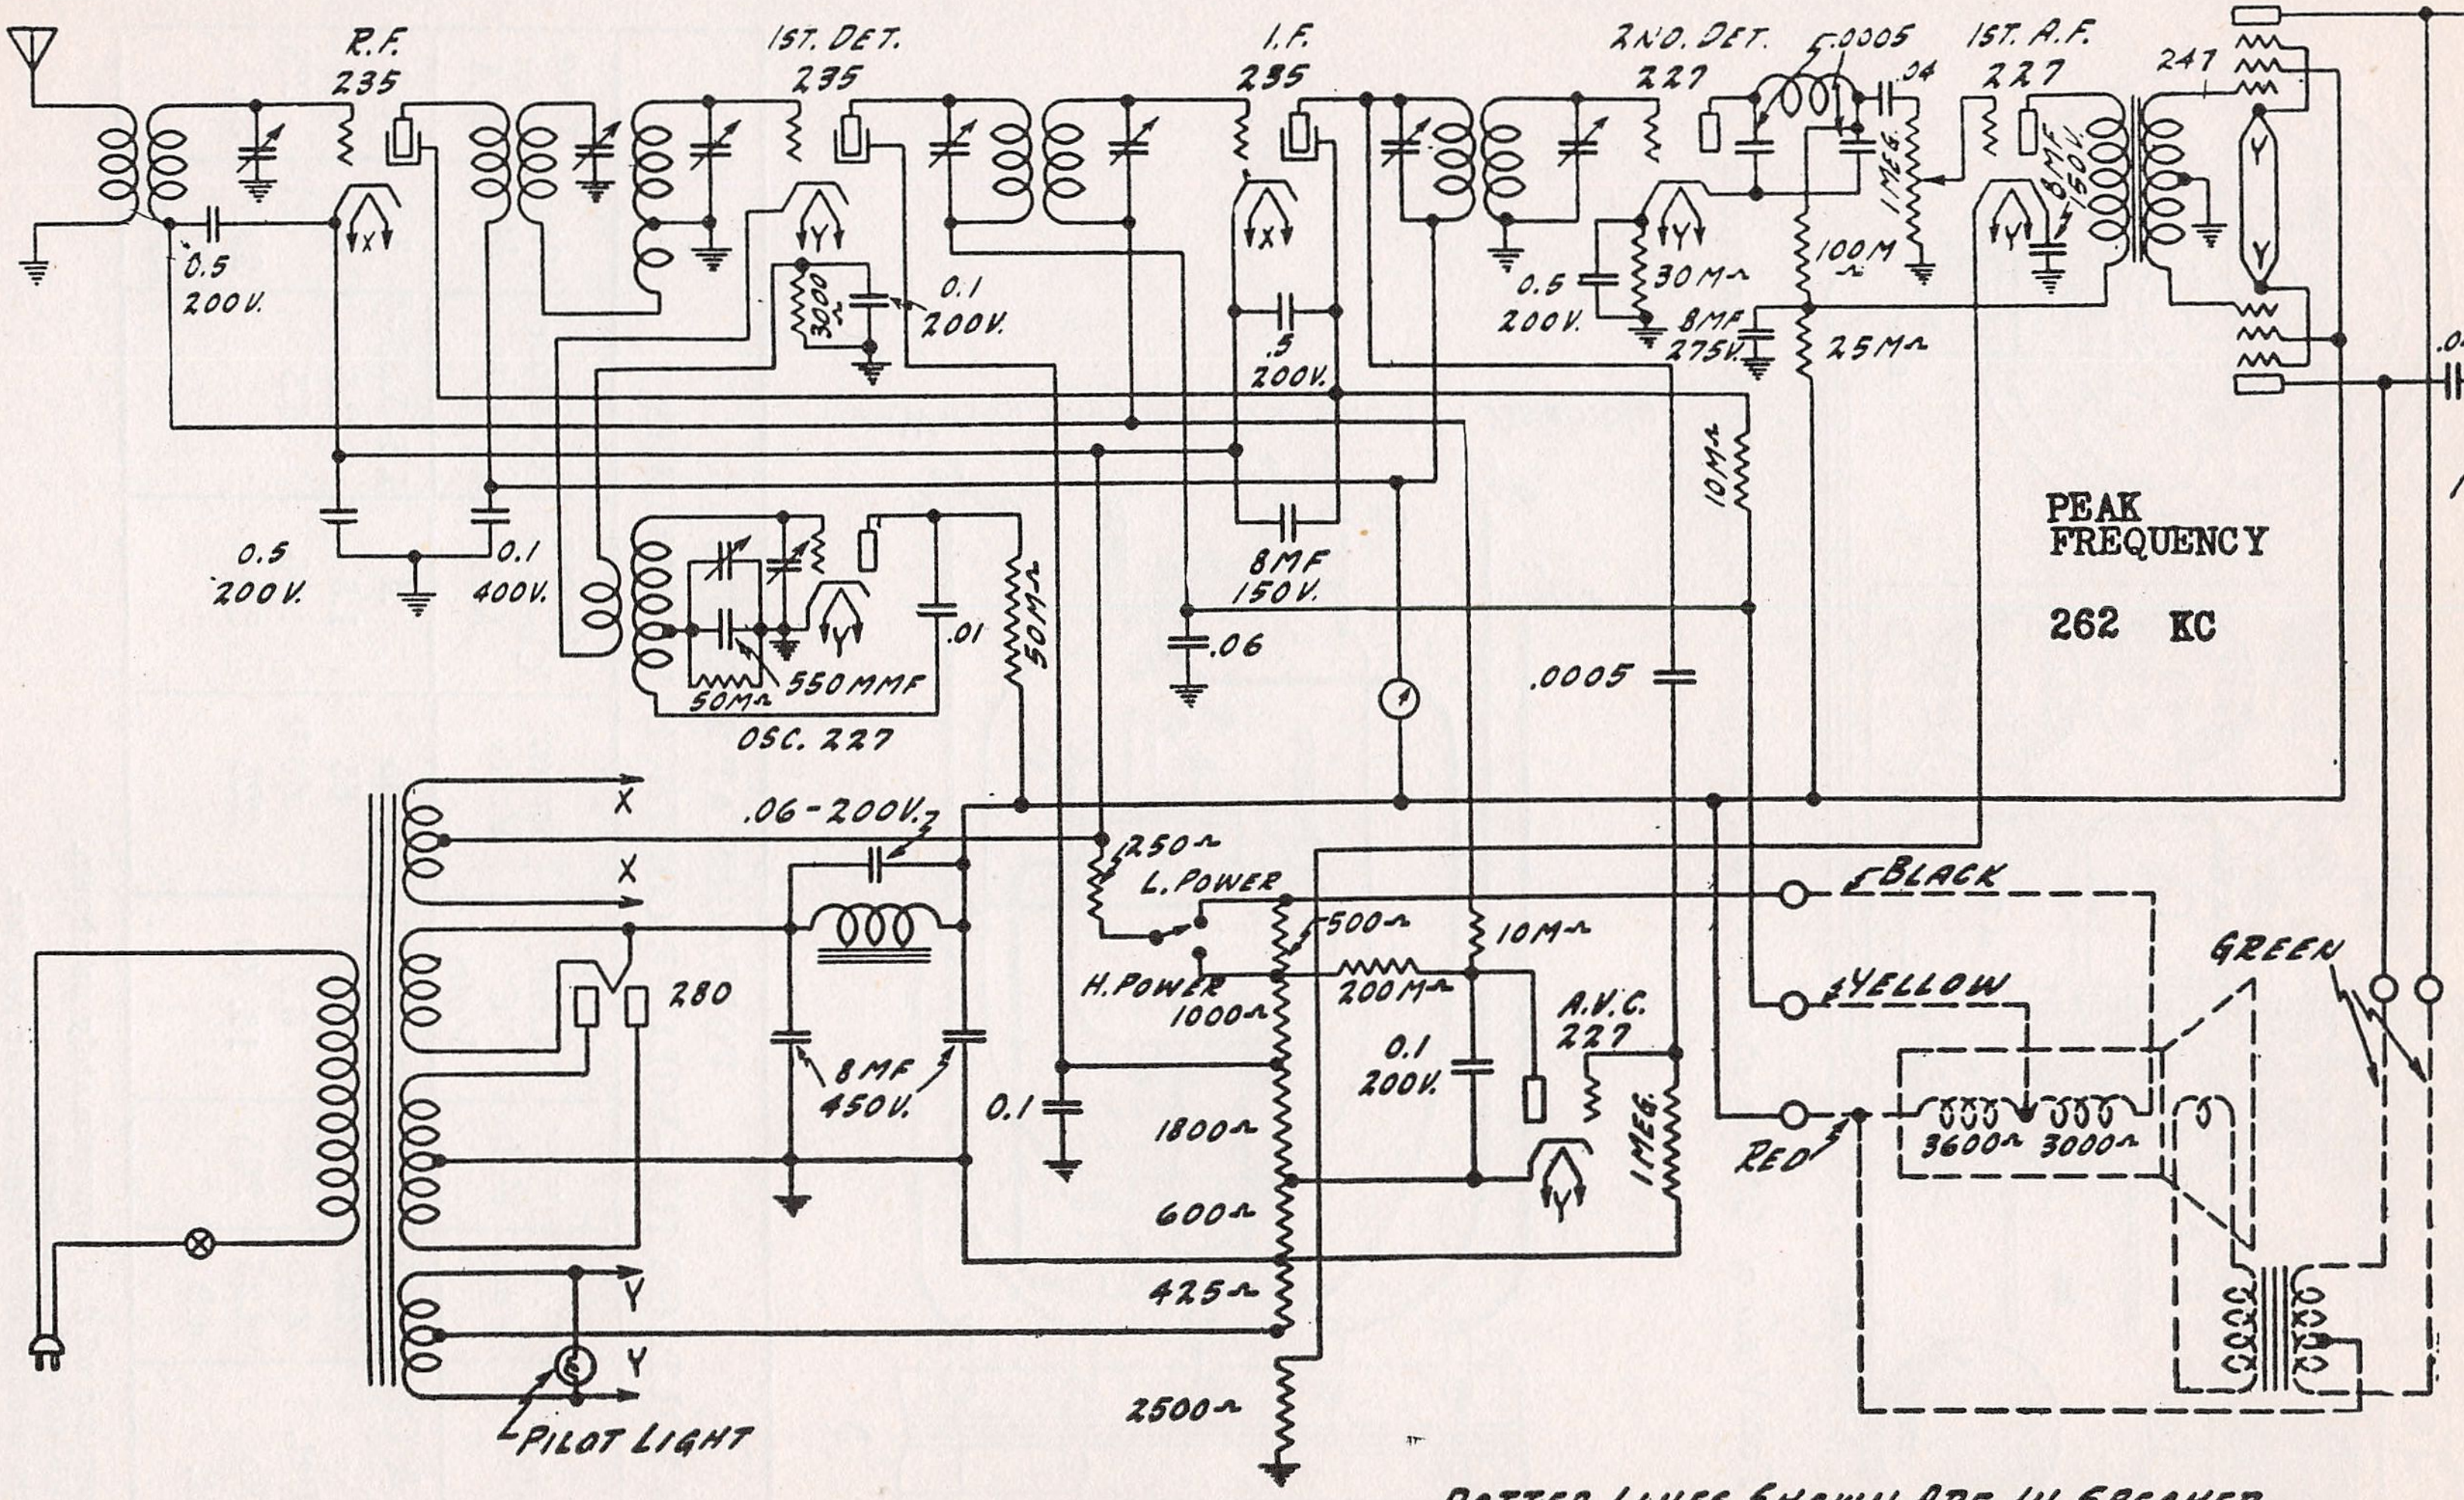
R.F.
235
0.5
200V.
1ST. DET.
235
3000
0.1
200V.
I.F.
235
.5
200V.
2ND. DET.
227
.0005
.04
1MEG.
100M
0.5
200V.
30M
8MF
275V.
25M
1ST. A.F.
227
8MF
150V.
247
.04
150M
0.5
200V.
0.1
400V.
550MMF
50M
OSC. 227
.01
50M
8MF
150V.
.06
10M
.0005
X
X
.06-200V.
250
L. POWER
H. POWER
280
8MF
450V.
0.1
1000
500
200M
10M
0.1
200V.
A.V.C.
227
1MEG.
1800
600
425
2500
Y
Y
PILOT LIGHT
BLACK
YELLOW
RED
GREEN
3600
3000

PEAK FREQUENCY 262 KC

DOTTED LINES SHOWN ARE IN SPEAKER

The 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. If there is excessive hum it will be necessary to secure a .06 Mfd. condenser, Part No. 2854, and connect it in the circuit across the filter choke. The reverse is not true, that is, the No. 10, 60 cycle receiver cannot be operated satisfactorily from a 25 cycle power supply.

Aligning R.F. and Oscillator Condensers—For adjusting the R.F. and oscillator condensers the signal input from the signal generator should be made to the antenna post.

MODEL 84,85
Socket
Voltage,Notes

SONORA

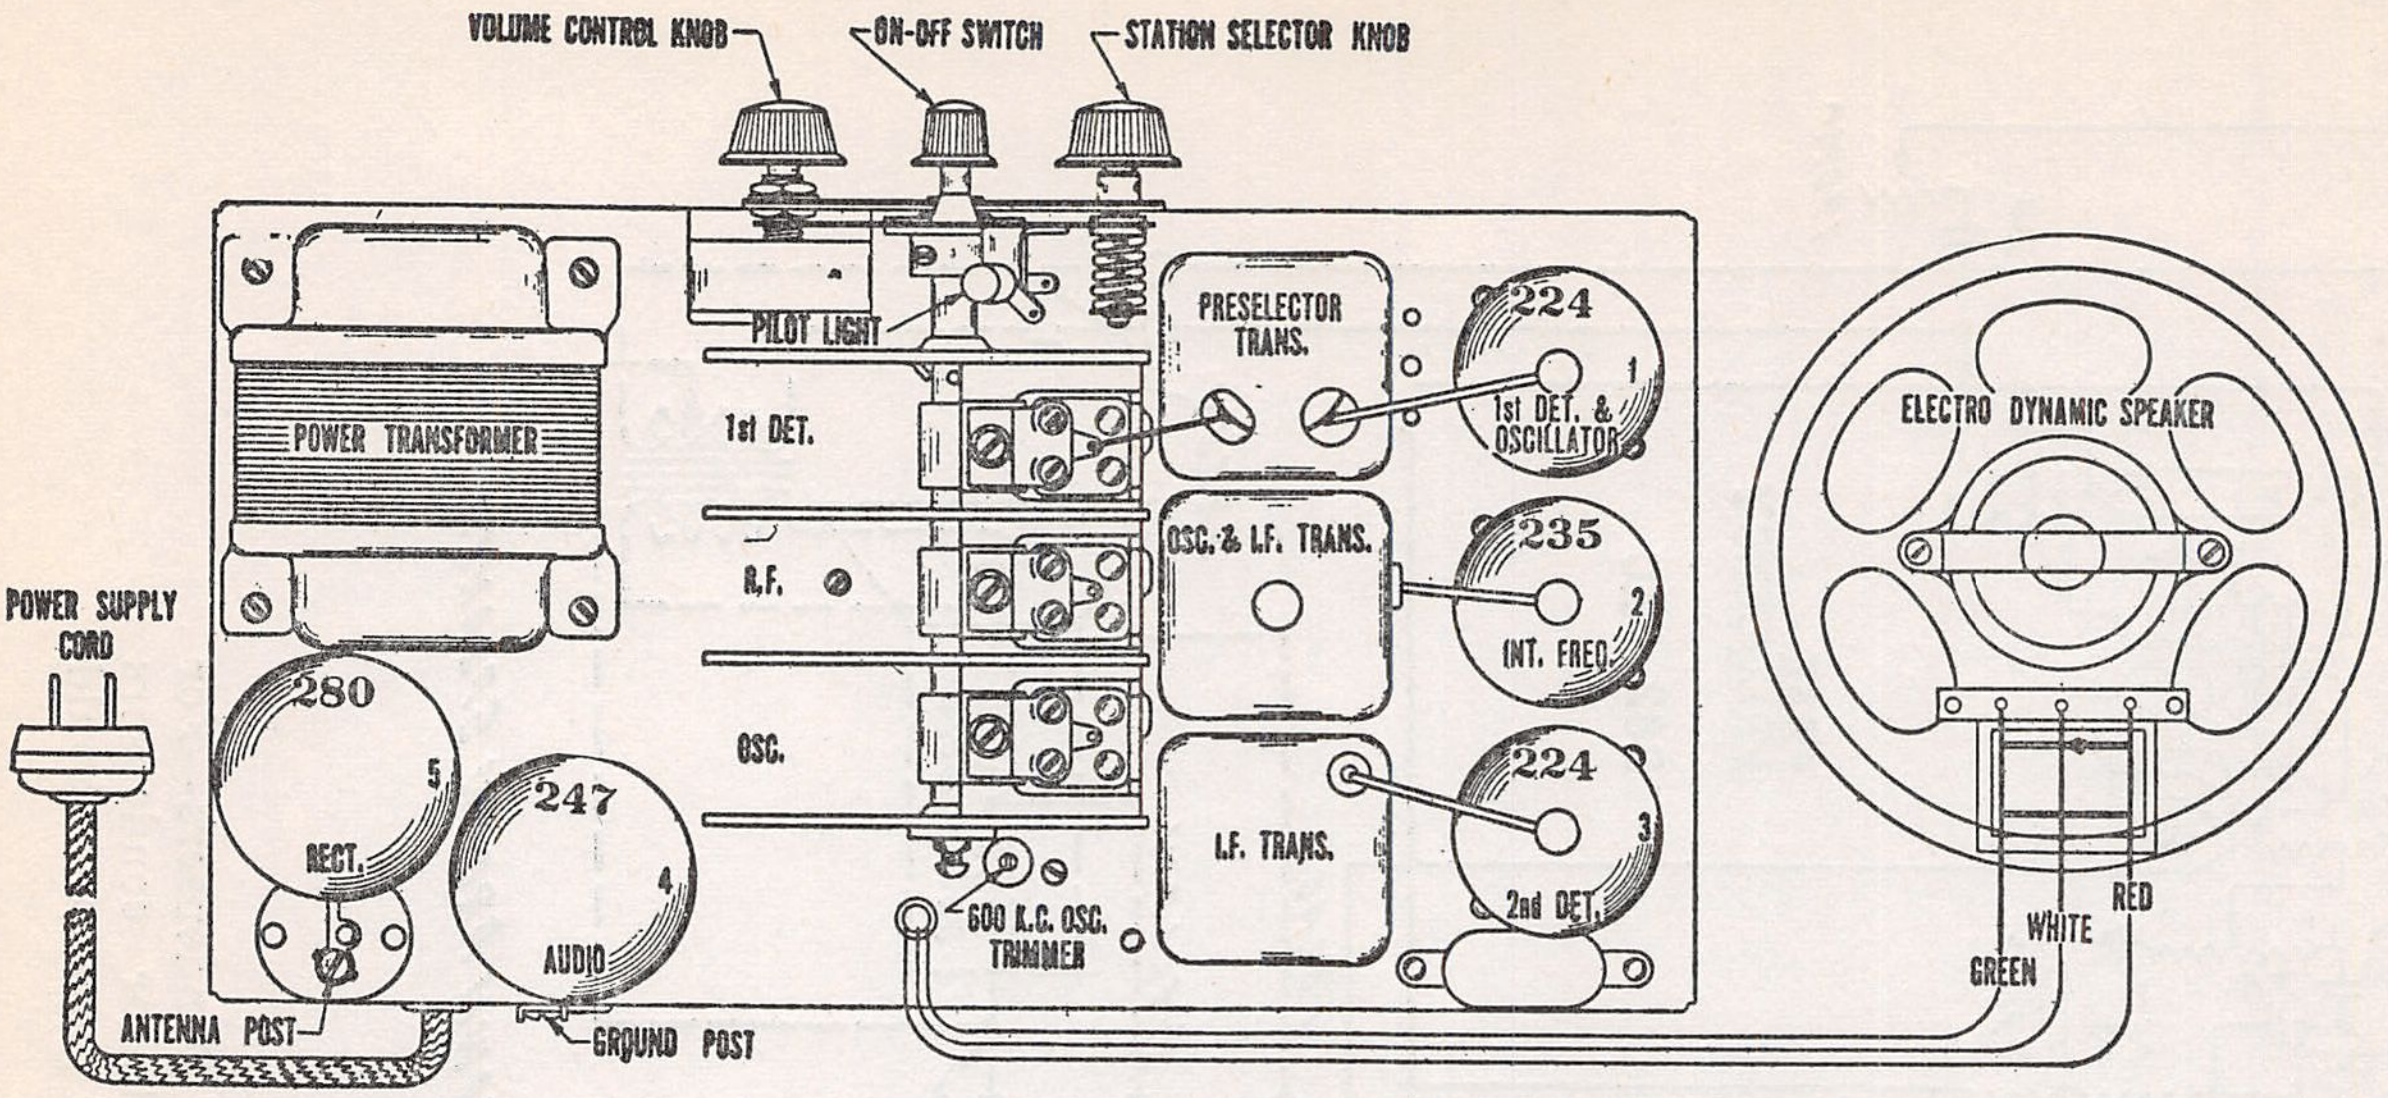
VOLUME CONTROL KNOB
ON-OFF SWITCH
STATION SELECTOR KNOB
PILOT LIGHT
POWER TRANSFORMER
1st DET.
R.F.
OSC.
PRESELECTOR TRANS.
OSC. & I.F. TRANS.
I.F. TRANS.
224
1st DET. & OSCILLATOR
1
235
INT. FREQ.
2
224
2nd DET.
3
ELECTRO DYNAMIC SPEAKER
WHITE
RED
GREEN
POWER SUPPLY CORD
280
RECT.
5
247
AUDIO
4
ANTENNA POST
GROUND POST
600 K.C. OSC. TRIMMER

Top View of Chassis showing Tube Sequence and Speaker Connections

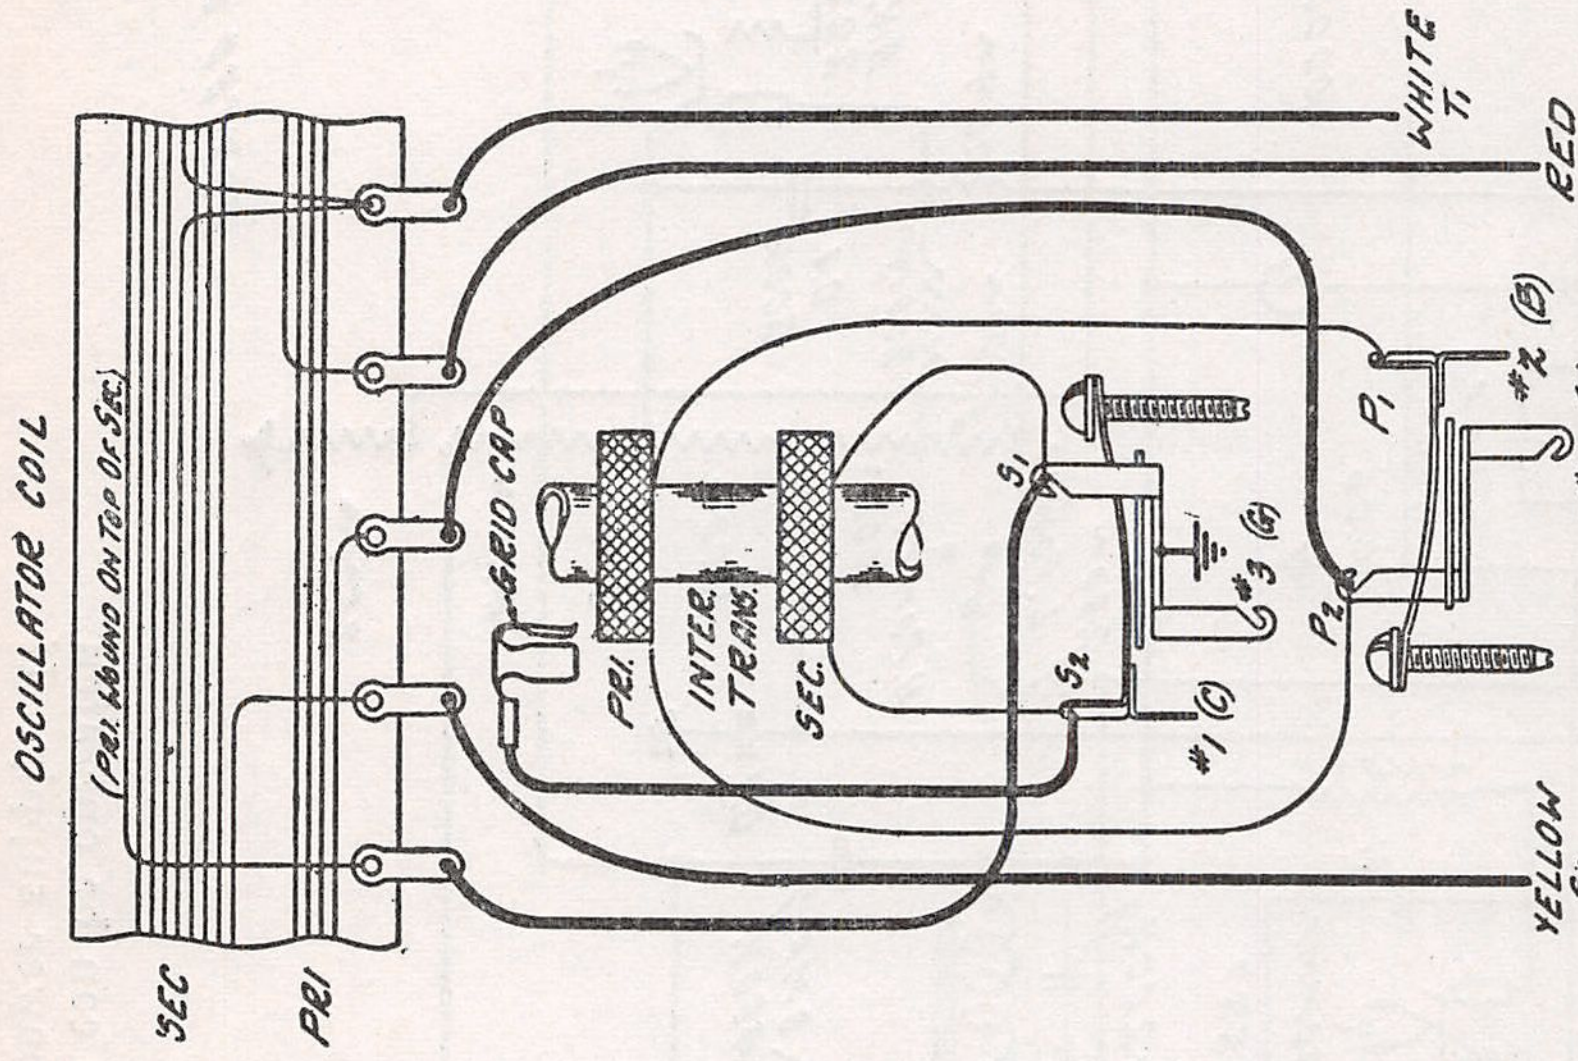
OSCILLATOR COIL
(PRI. WOUND ON TOP OF SEC.)
SEC.
PRI.
GRID CAP
PRI.
INTER TRANS.
SEC.
WHITE T1
RED P1
#2 (B)
#4 (P)
P1
S1
#3 (G)
P2
S2
#1 (C)
YELLOW S2

—Wiring Diagram. Osc and I.F. Assembly

VOLTAGES AT SOCKETS
LINE VOLTAGE 115—VOLUME CONTROL AT MAXIMUM

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
224	1	1st Det. & Osc.	2.25	165	4.5–5.25(1)	65	.4	4.5–5.25(1)	1.3	2.0
235	2	I.F.	2.25	165	2.5	65	1.5	2.5	6.4	7.4
224	3	2nd Det.	2.25	128	6.5	60(2)	.05	6.5	.22	.23
247	4	Audio	2.25	205	16. (3)	225	8.0		29.	33.
280	5	Rect.	4.9						27. Per Plate	

(1) Varies with frequency setting of dial approximately as shown.
(2) Voltage as measured with 600,000 ohm meter.
(3) Measured across 300 ohm section of voltage divider resistor.

SONORA

MODEL 84,85
Schematic

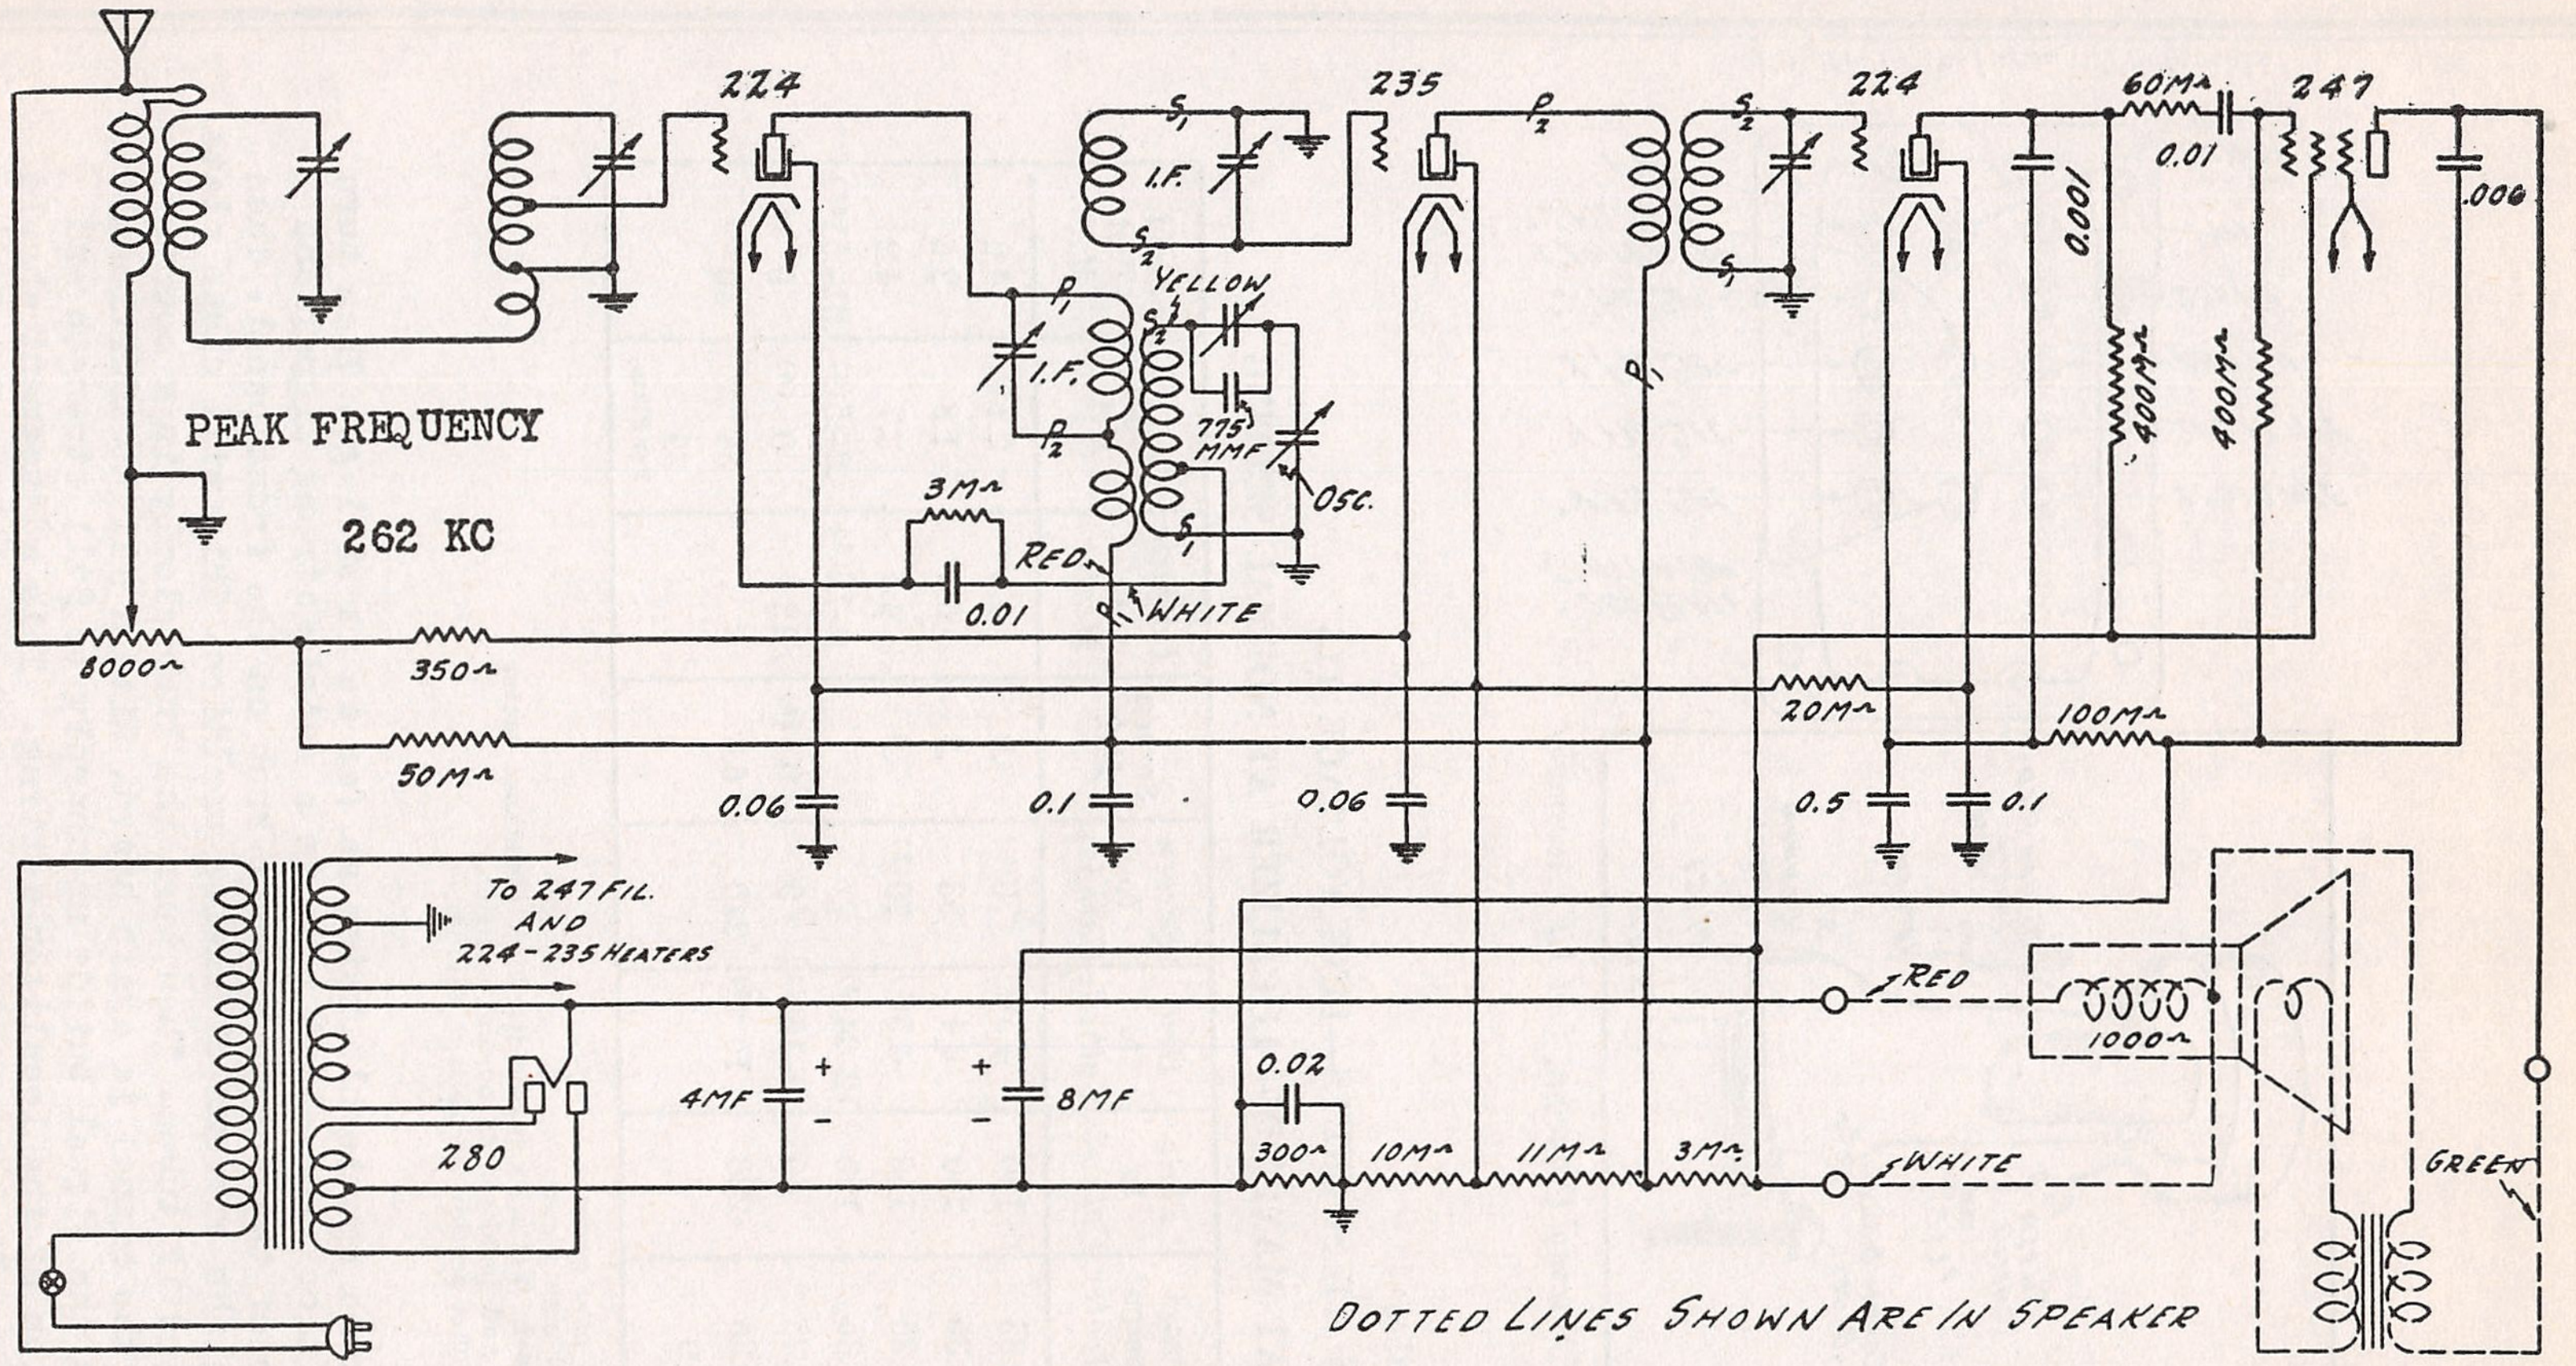
224
235
224
247
PEAK FREQUENCY
262 KC
S1
S2
1.F.
P1
P2
YELLOW
775 MMF
OSC.
3MΩ
RED
0.01
WHITE
8000Ω
350Ω
50MΩ
60MΩ
0.01
0.001
400MΩ
400MΩ
.006
20MΩ
100MΩ
0.06
0.1
0.06
0.5
0.1
TO 247 FIL. AND 224-235 HEATERS
4MF
8MF
280
0.02
300Ω
10MΩ
11MΩ
3MΩ
RED
1000Ω
WHITE
GREEN
DOTTED LINES SHOWN ARE IN SPEAKER

There are certain features to be noted in this receiver. The mixer is of the autodyne type, wherein it functions as a mixer (1st detector) and also as an oscillator. Also that the grid lead from the mixer tube joins the grid coil at a tap upon this winding. This tap is so apportioned that the circuit acts to suppress the tranmission of image frequency signals, in this case 524 KC higher than the frequency setting of the tuned circuit. The IF transformer is also of special structure combining the coupling transformer and also the oscillator system. The structure of this transformer-oscillator is illustrated upon the next page.

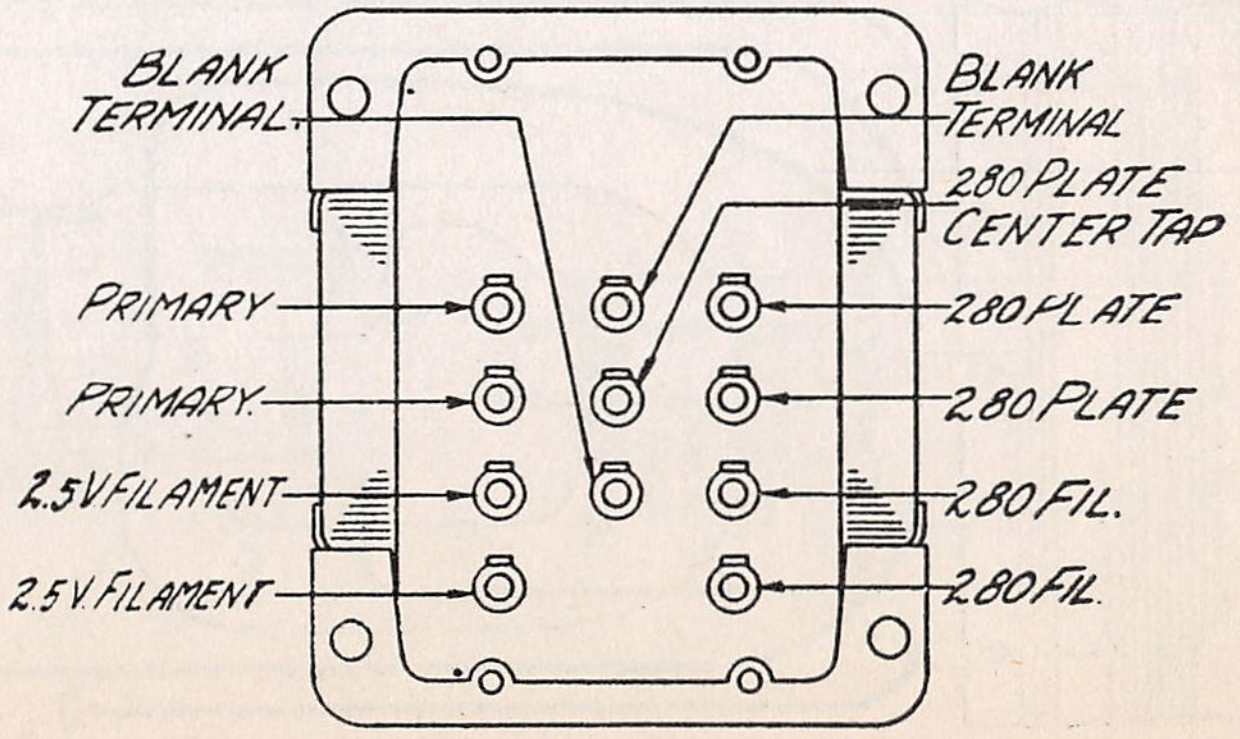
BLANK TERMINAL
BLANK TERMINAL
280 PLATE CENTER TAP
PRIMARY
280 PLATE
PRIMARY
280 PLATE
2.5V FILAMENT
280 FIL.
2.5V FILAMENT
280 FIL.

Power Transformer Terminals

MODEL 86,87
Voltage
Transformer
Notes

SONORA

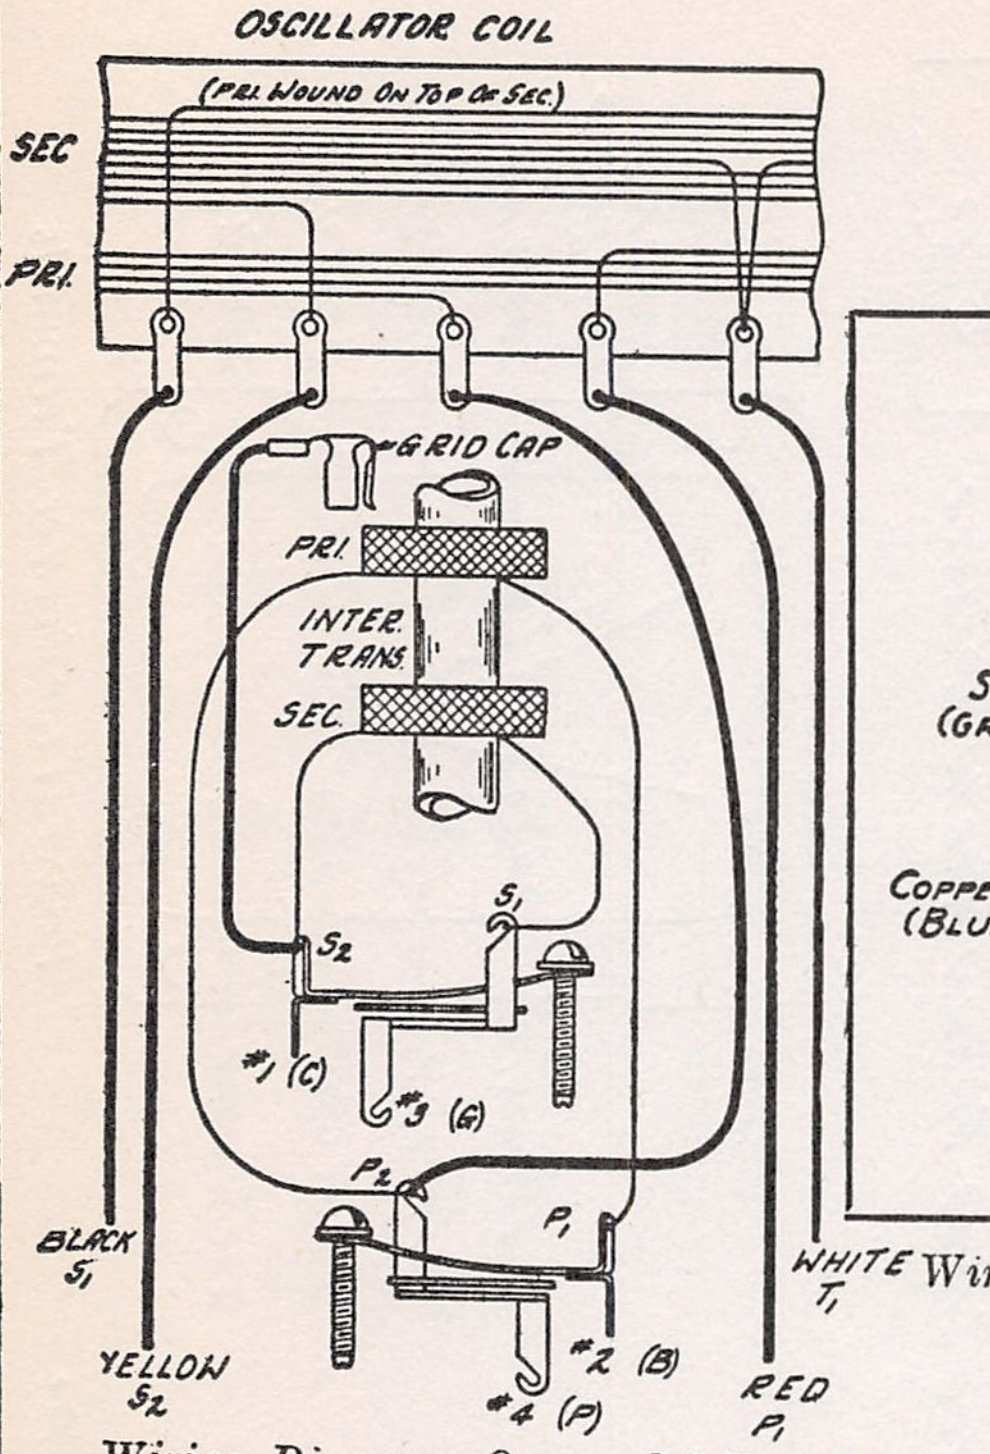
OSCILLATOR COIL
(PRI. WOUND ON TOP OF SEC.)
SEC
PRI.
GRID CAP
PRI.
INTER. TRANS.
SEC.
S1
S2
#1 (C)
#3 (G)
P2
P1
#2 (B)
#4 (P)
BLACK S1
YELLOW S2
WHITE T1
RED P1

-Wiring Diagram, Osc. and I.F. Assembly'

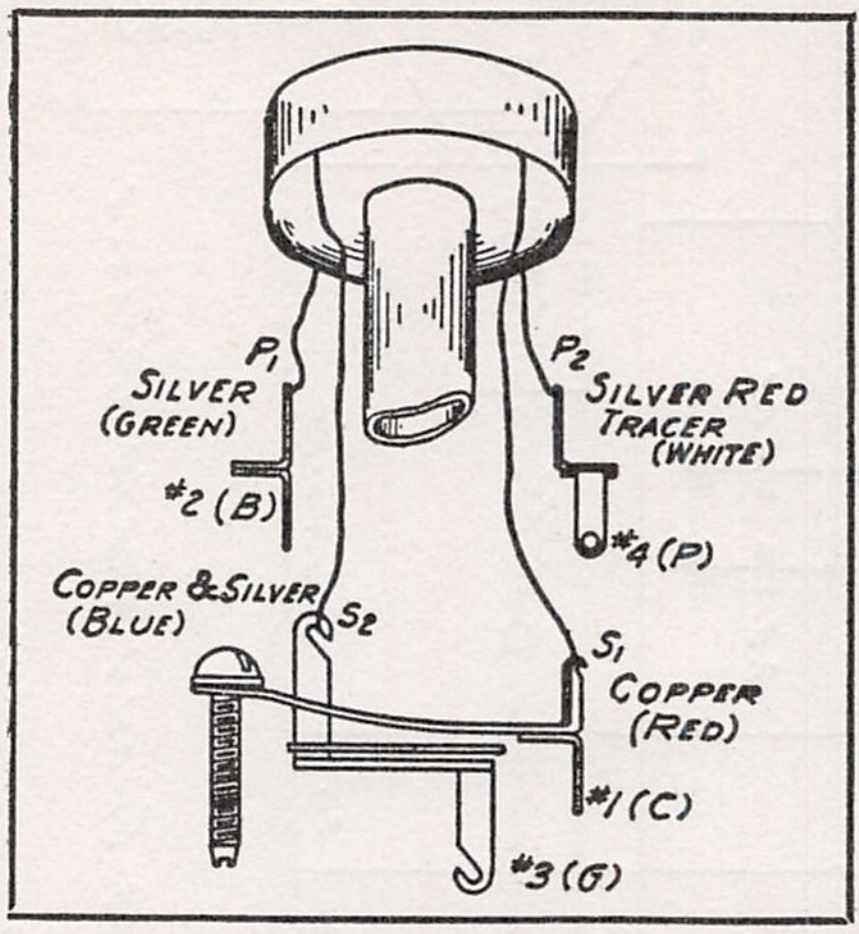
P1
SILVER (GREEN)
#2 (B)
P2
SILVER RED TRACER (WHITE)
#4 (P)
COPPER & SILVER (BLUE)
S2
S1
COPPER (RED)
#1 (C)
#3 (G)

Wiring Diagram, 2nd I.F Assembly

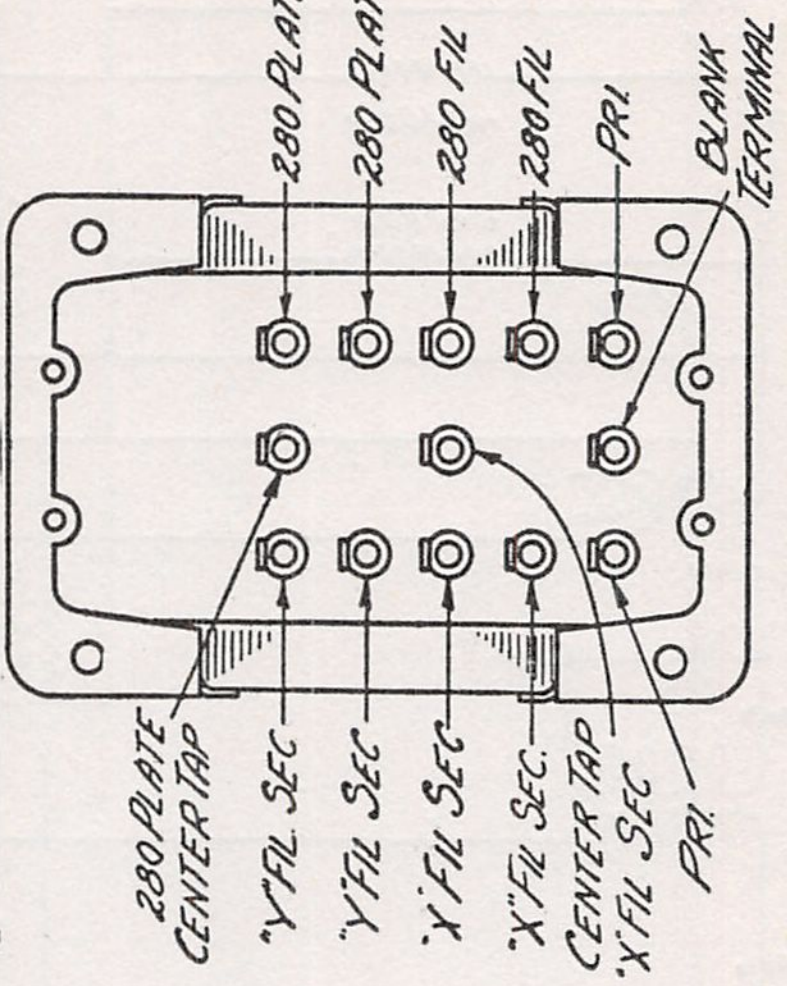
280 PLATE
280 PLATE
280 FIL
280 FIL
PRI.
BLANK TERMINAL
280 PLATE CENTER TAP
"Y" FIL SEC
"Y" FIL SEC
"X" FIL SEC
"X" FIL SEC. CENTER TAP
"X" FIL SEC
PRI.

-Power Transformer Terminals

VOLTAGES AT SOCKETS—LINE VOLTAGE 115

VOLUME CONTROL AT MAXIMUM—LOCALIZER AT NORMAL SETTING

Type of Tube	*Position of Tube*	*Function*	*Across Filament or Heater*	*Plate to Cathode*	*Grid to Cathode*	*Screen to Cathode*	*Screen MA*	*Cathode to Heater*	*Plate MA*	*Grid Test MA*
235	1	R.F	2.35	150	4.5(1)	70(2)	.9	4.5	2.7	4.2
224	2	1st Det. & Osc.	2.35	240	6.4	93	.3	6.4	1.8	2.6
235	3	I.F.	2.35	150	4.5(1)	70(2)	.9	4.5	2.7	4.2
227	4	2nd Det.	2.35	150	12–24(3)			0–10(3)	.2–.5(3)	.21–.51(3)
224	5	A.V.C.	2.35	60	0–15(3)	9	0 (4)	12	0 (4)	0 (4)
247	6	Power	2.35	220	16 (5)	240	6.4		34	40
280	7	Rect.	4.9						39 Per Plate	

(1) This voltage read across 800 ohm resistor.
(2) Voltage as read with 600,000 ohm meter.
(3) Varies with setting of localizer. Voltages read with high resistance meter
(4) Current zero with no signal and localizer at normal position.
(5) The voltage read across 200 ohm section of voltage divider.

SETTING THE LOCALIZER.

Turn the localizer knob cpunterclockwise as far as it will go. Then turn the knob one quarter turn clockwise. Next tune in a fairly strong signal and reduce the volume by means of the volume control knob on the front panel. Then turn the localizer knob to the extreme clockwise position. This will cause plate current cutoff in the RF and IF tubes. Then turn the knob slowly in a counterclockwise direction until the signal is again heard. With a slight additional turn in the same direction the signal builds up sharply to full strength and this is the correct position of the localizer setting. This adjustment should not be changed unless the set is reinstalled or the tubes are changed. Incorrect adjustment of this knob will control the action of the AVC tube in such fashion that the automatic action will commence too soon or too late.

SONORA

MODEL 86,87
Schematic
Socket

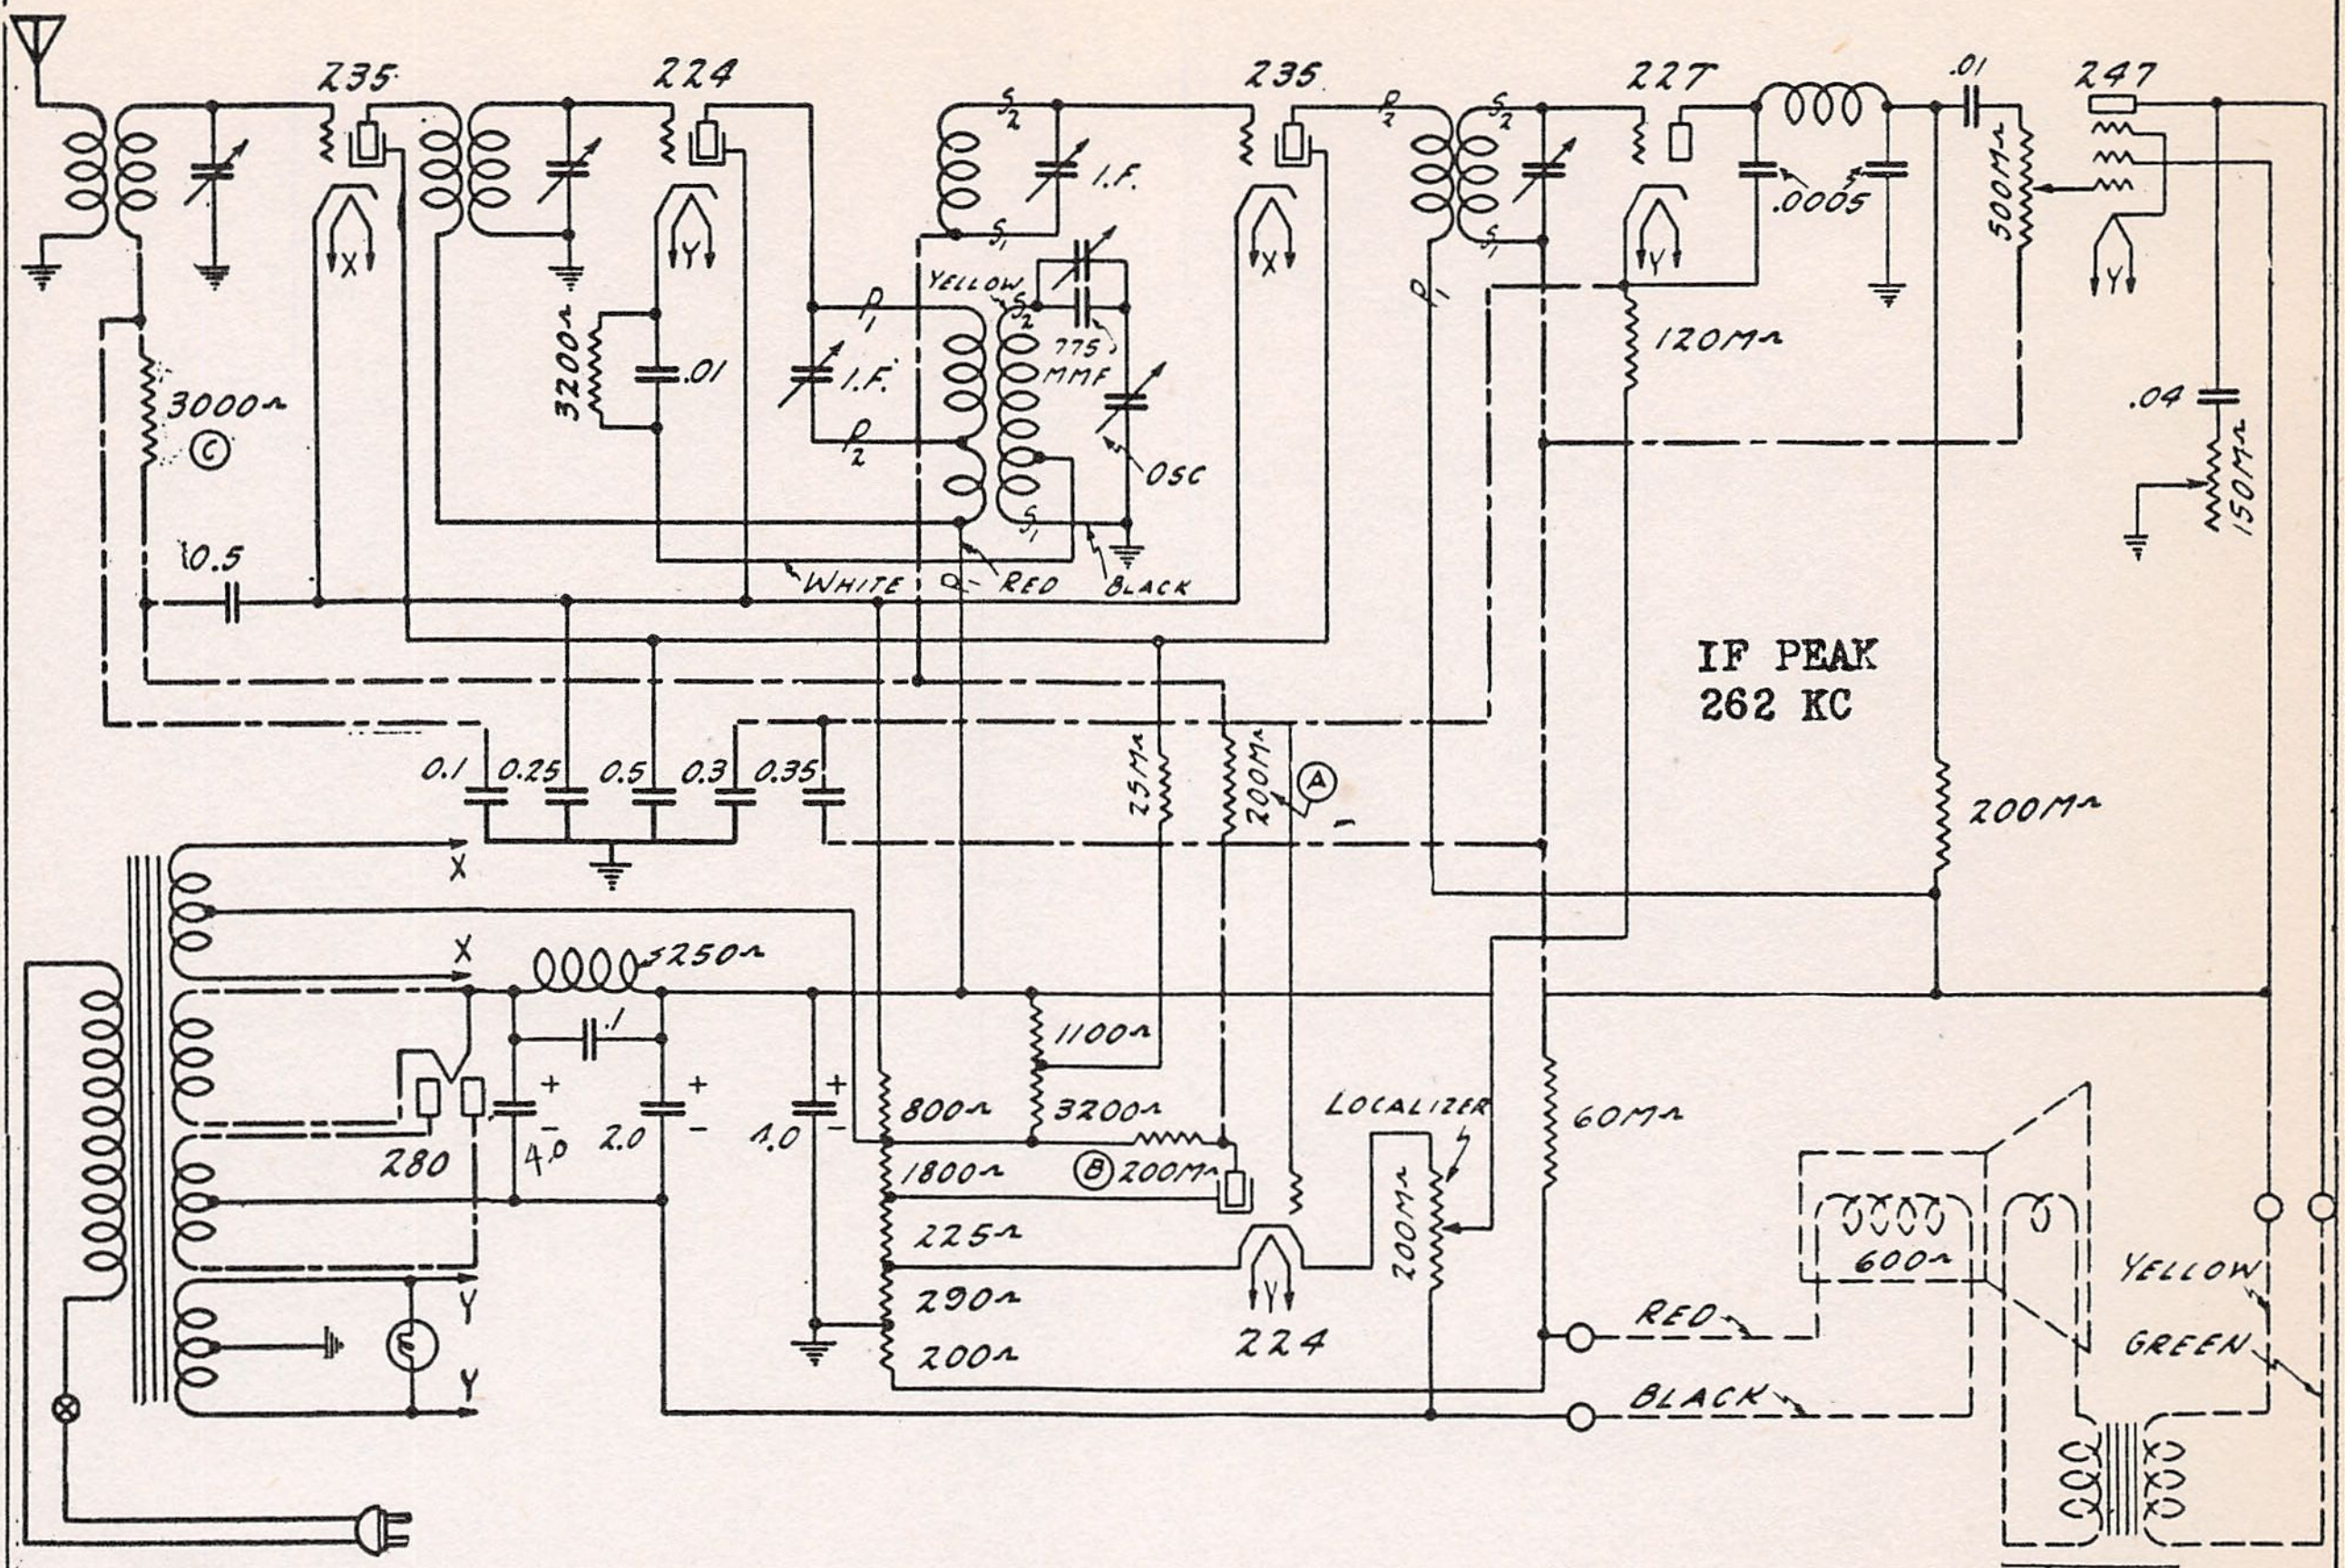
235
224
235
227
.01
247
1.F.
1.F.
775 MMF
OSC
YELLOW
WHITE
RED
BLACK
3200
.01
3000
©
.0005
500M
120M
.04
150M
10.5
IF PEAK
262 KC
0.1
0.25
0.5
0.3
0.35
25M
200M
Ⓐ
200M
X
X
250
.1
4.0
2.0
1.0
280
800
3200
1100
1800
Ⓑ200M
225
290
200
224
LOCALIZER
200M
60M
600
Y
Y
RED
BLACK
YELLOW
GREEN

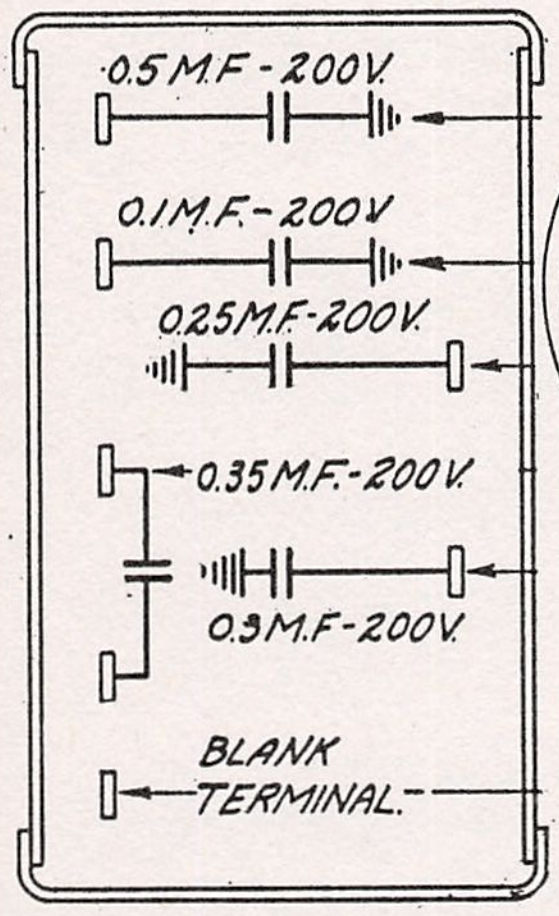
0.5M.F.-200V.
0.1M.F.-200V
0.25M.F-200V.
0.35M.F.-200V.
0.3M.F.-200V.
BLANK TERMINAL.

5 Section Condenser Internal Wiring

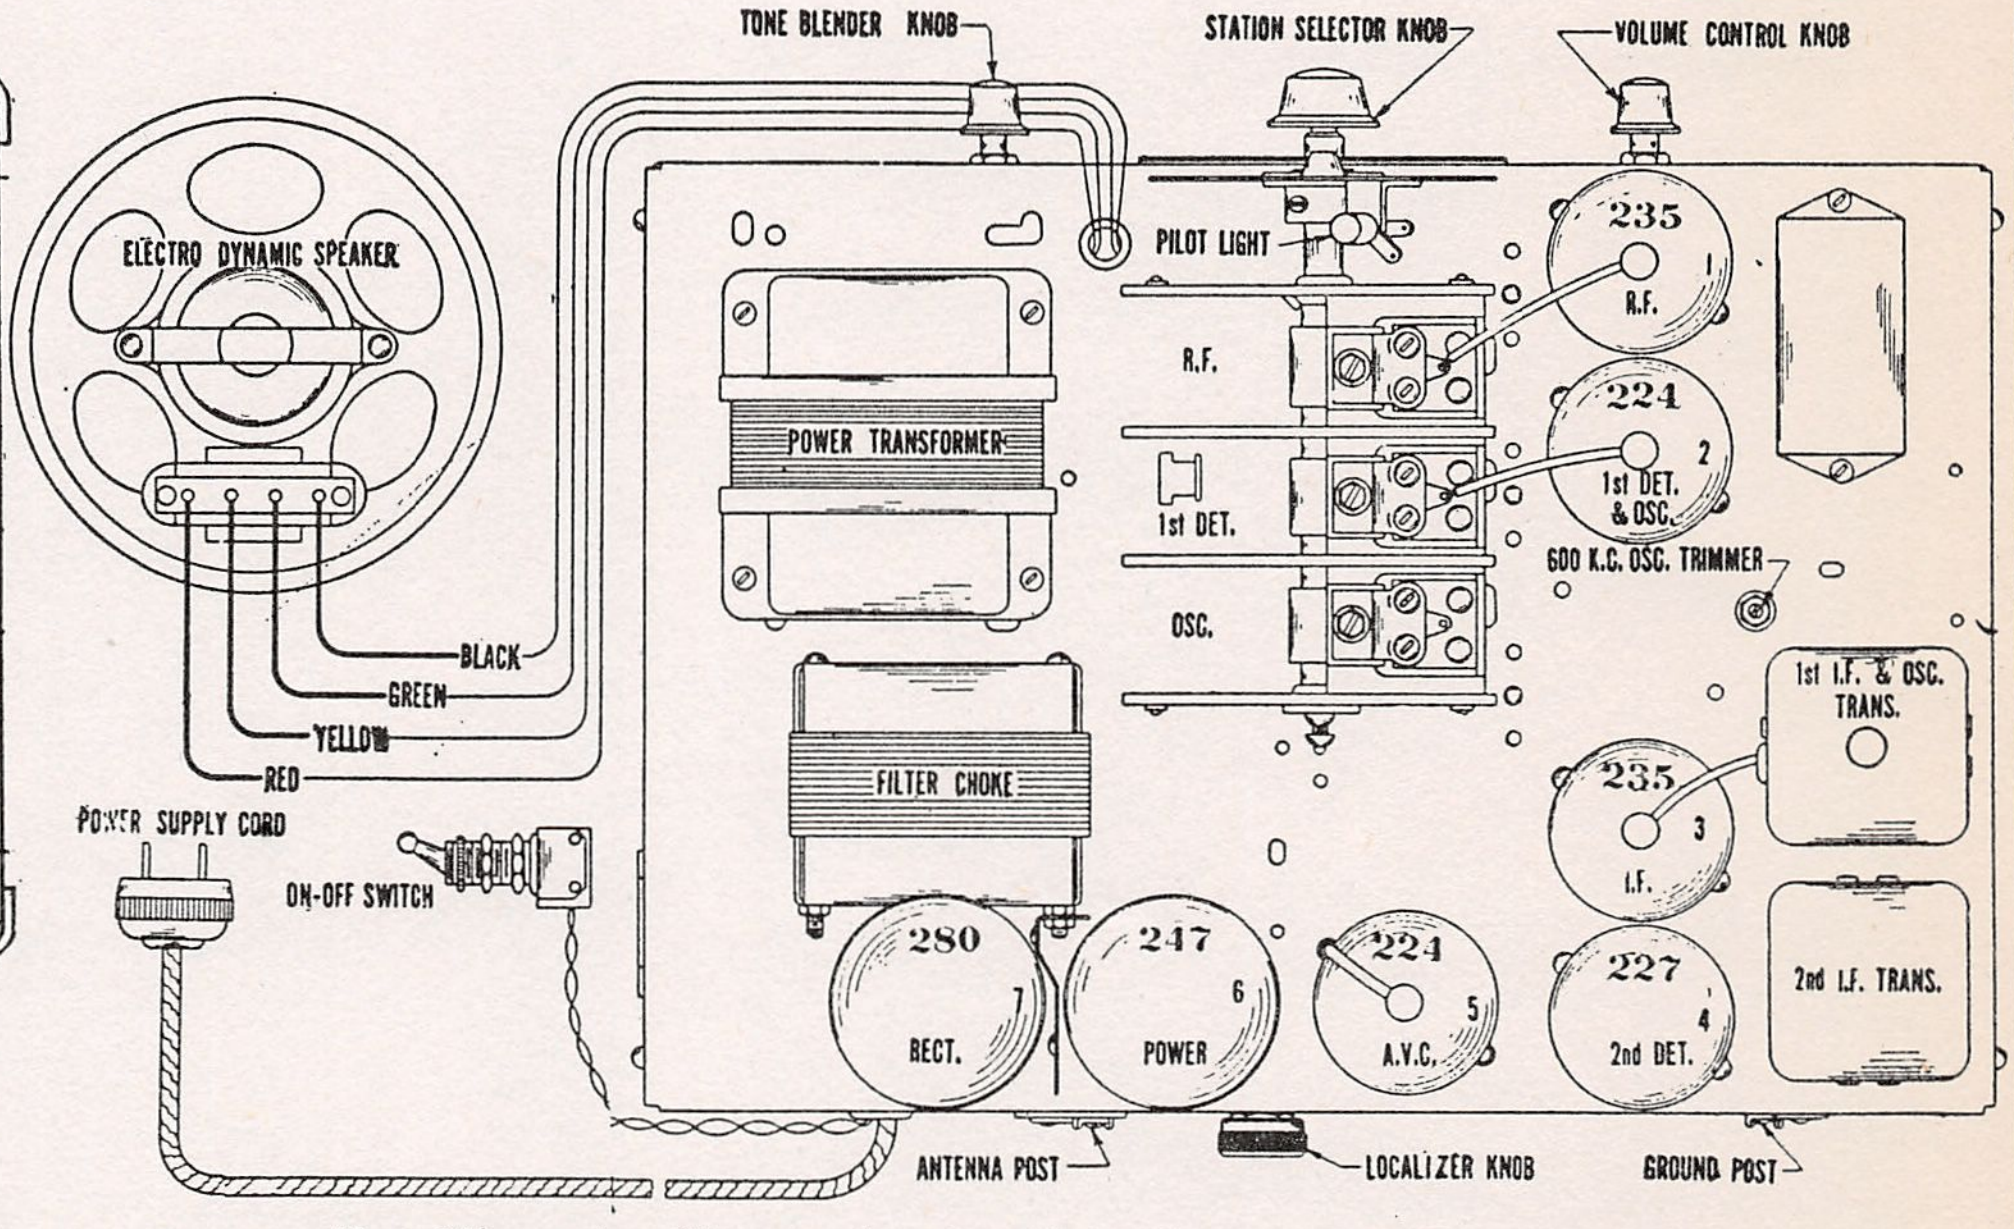
TONE BLENDER KNOB
STATION SELECTOR KNOB
VOLUME CONTROL KNOB
ELECTRO DYNAMIC SPEAKER
PILOT LIGHT
POWER TRANSFORMER
R.F.
1st DET.
OSC.
FILTER CHOKE
235
1
R.F.
224
2
1st DET. & OSC.
600 K.C. OSC. TRIMMER
1st I.F. & OSC. TRANS.
235
3
I.F.
2nd I.F. TRANS.
BLACK
GREEN
YELLOW
RED
POWER SUPPLY CORD
ON-OFF SWITCH
280
7
RECT.
247
6
POWER
224
5
A.V.C.
227
4
2nd DET.
ANTENNA POST
LOCALIZER KNOB
GROUND POST

—Top View of Chassis showing Tube Sequence and Speaker Connections

There are certain features to be noted in this receiver. The mixer tube is of the autodyne type, wherein it functions as the mixer (1st detector) and at the same time functions as the oscillator. The structure of the oscillator-IF transformer is shown elsewhere. The structure of the 2nd IF transformer is also shown upon the same page. Take note of the changes recorded upon the wiring diagram. See the footnotes concerning the significance of the numbers contained within the circles.

MODEL 5,9
Schematic
Chassis, Voltage

SPARKS WITHINGTON CO.

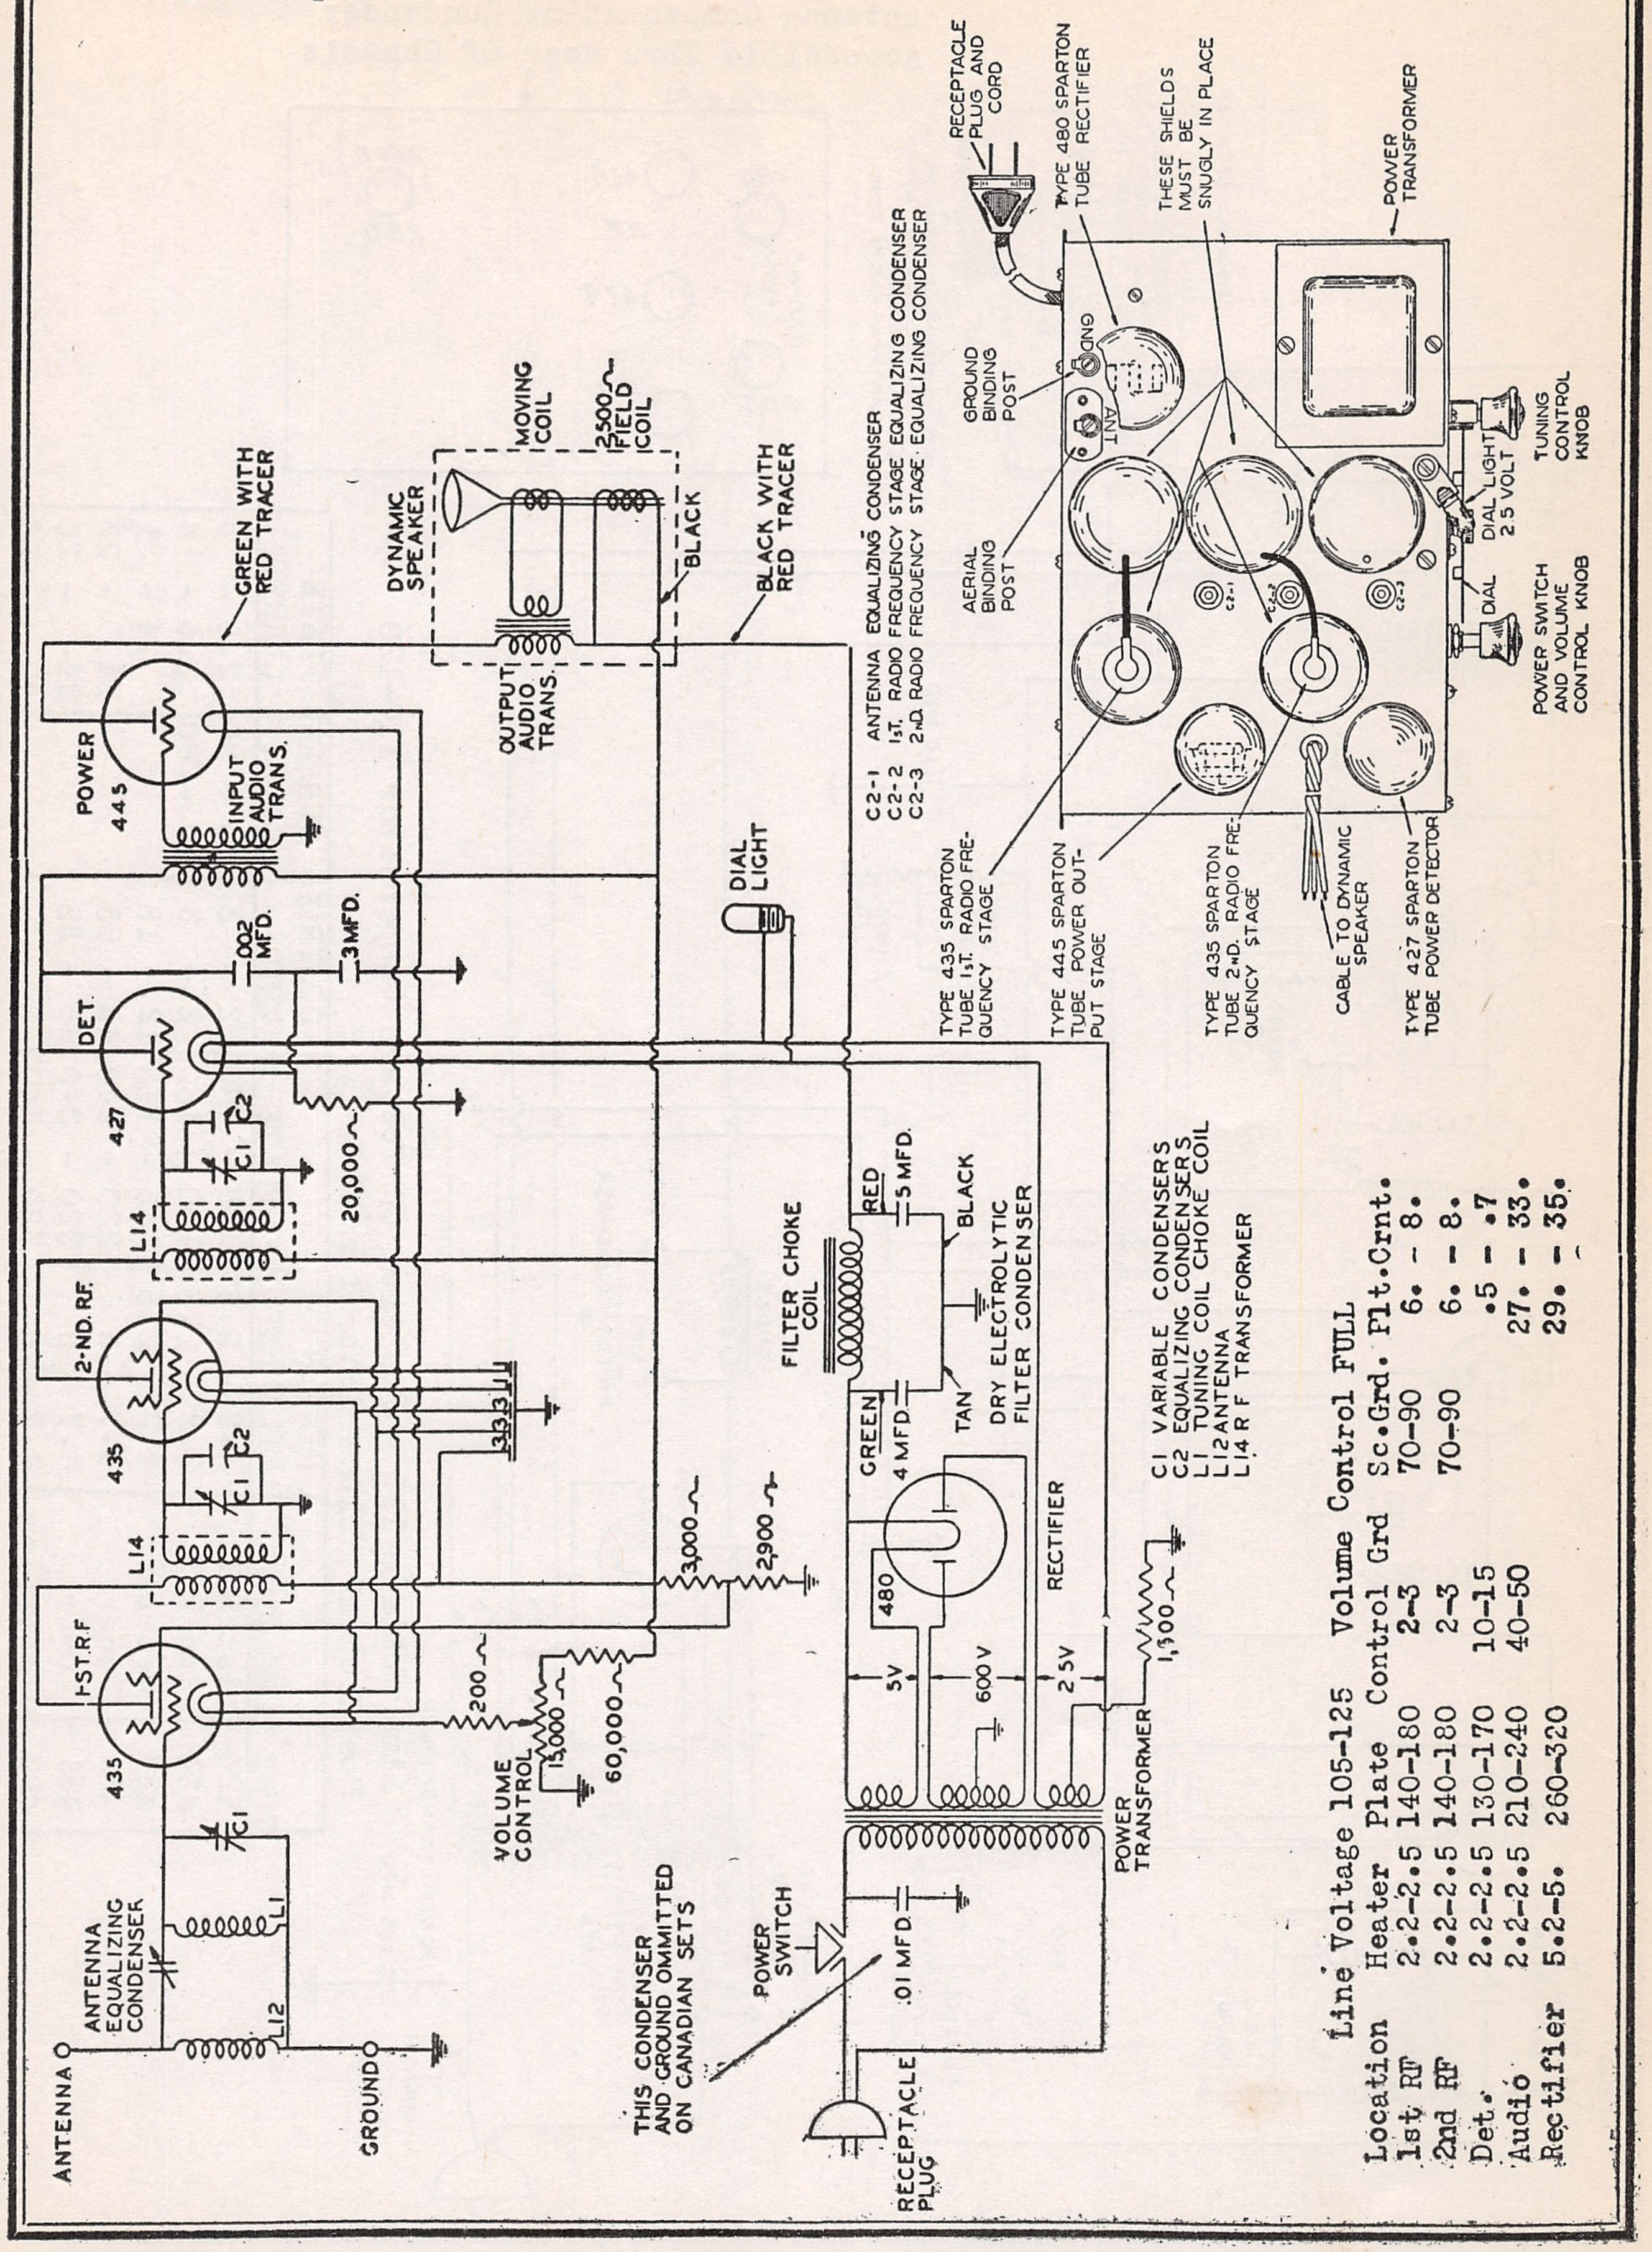
ANTENNA
GROUND
ANTENNA EQUALIZING CONDENSER
L12
L1
C1
435
1ST. R.F
L14
C2
2ND. R.F.
427
DET.
20,000 ∿
.002 MFD.
.3 MFD.
POWER
445
INPUT AUDIO TRANS.
GREEN WITH RED TRACER
DYNAMIC SPEAKER
MOVING COIL
2500 ∿ FIELD COIL
BLACK
OUTPUT AUDIO TRANS.
BLACK WITH RED TRACER
DIAL LIGHT
FILTER CHOKE COIL
RED
.5 MFD.
BLACK
GREEN
4 MFD.
TAN
DRY ELECTROLYTIC FILTER CONDENSER
480
RECTIFIER
5V
600 V
2.5V
1,300 ∿
POWER TRANSFORMER
.333
3,000 ∿
2,900 ∿
200 ∿
15,000 ∿
60,000 ∿
VOLUME CONTROL
POWER SWITCH
.01 MFD.
THIS CONDENSER AND GROUND OMMITTED ON CANADIAN SETS
RECEPTACLE PLUG
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COIL CHOKE COIL
L12 ANTENNA
L14 R F TRANSFORMER
C2-1 ANTENNA EQUALIZING CONDENSER
C2-2 1ST. RADIO FREQUENCY STAGE EQUALIZING CONDENSER
C2-3 2ND. RADIO FREQUENCY STAGE EQUALIZING CONDENSER
RECEPTACLE PLUG AND CORD
TYPE 480 SPARTON TUBE RECTIFIER
THESE SHIELDS MUST BE SNUGLY IN PLACE
POWER TRANSFORMER
GND
ANT
GROUND BINDING POST
AERIAL BINDING POST
TUNING CONTROL KNOB
DIAL LIGHT 2.5 VOLT
DIAL
POWER SWITCH AND VOLUME CONTROL KNOB
TYPE 435 SPARTON TUBE 1ST. RADIO FREQUENCY STAGE
TYPE 445 SPARTON TUBE POWER OUTPUT STAGE
TYPE 435 SPARTON TUBE 2ND. RADIO FREQUENCY STAGE
CABLE TO DYNAMIC SPEAKER
TYPE 427 SPARTON TUBE POWER DETECTOR

Line Voltage 105-125 Volume Control FULL

Location	Heater	Plate	Control Grd	Sc.Grd.	Plt.Crnt.
1st RF	2.2-2.5	140-180	2-3	70-90	6. - 8.
2nd RF	2.2-2.5	140-180	2-3	70-90	6. - 8.
Det.	2.2-2.5	130-170	10-15		.5 - .7
Audio	2.2-2.5	210-240	40-50		27. - 33.
Rectifier	5.2-5.	260-320			29. - 35.

SPARKS WITHINGTON CO.

MODEL 9-A
Schematic
Voltage

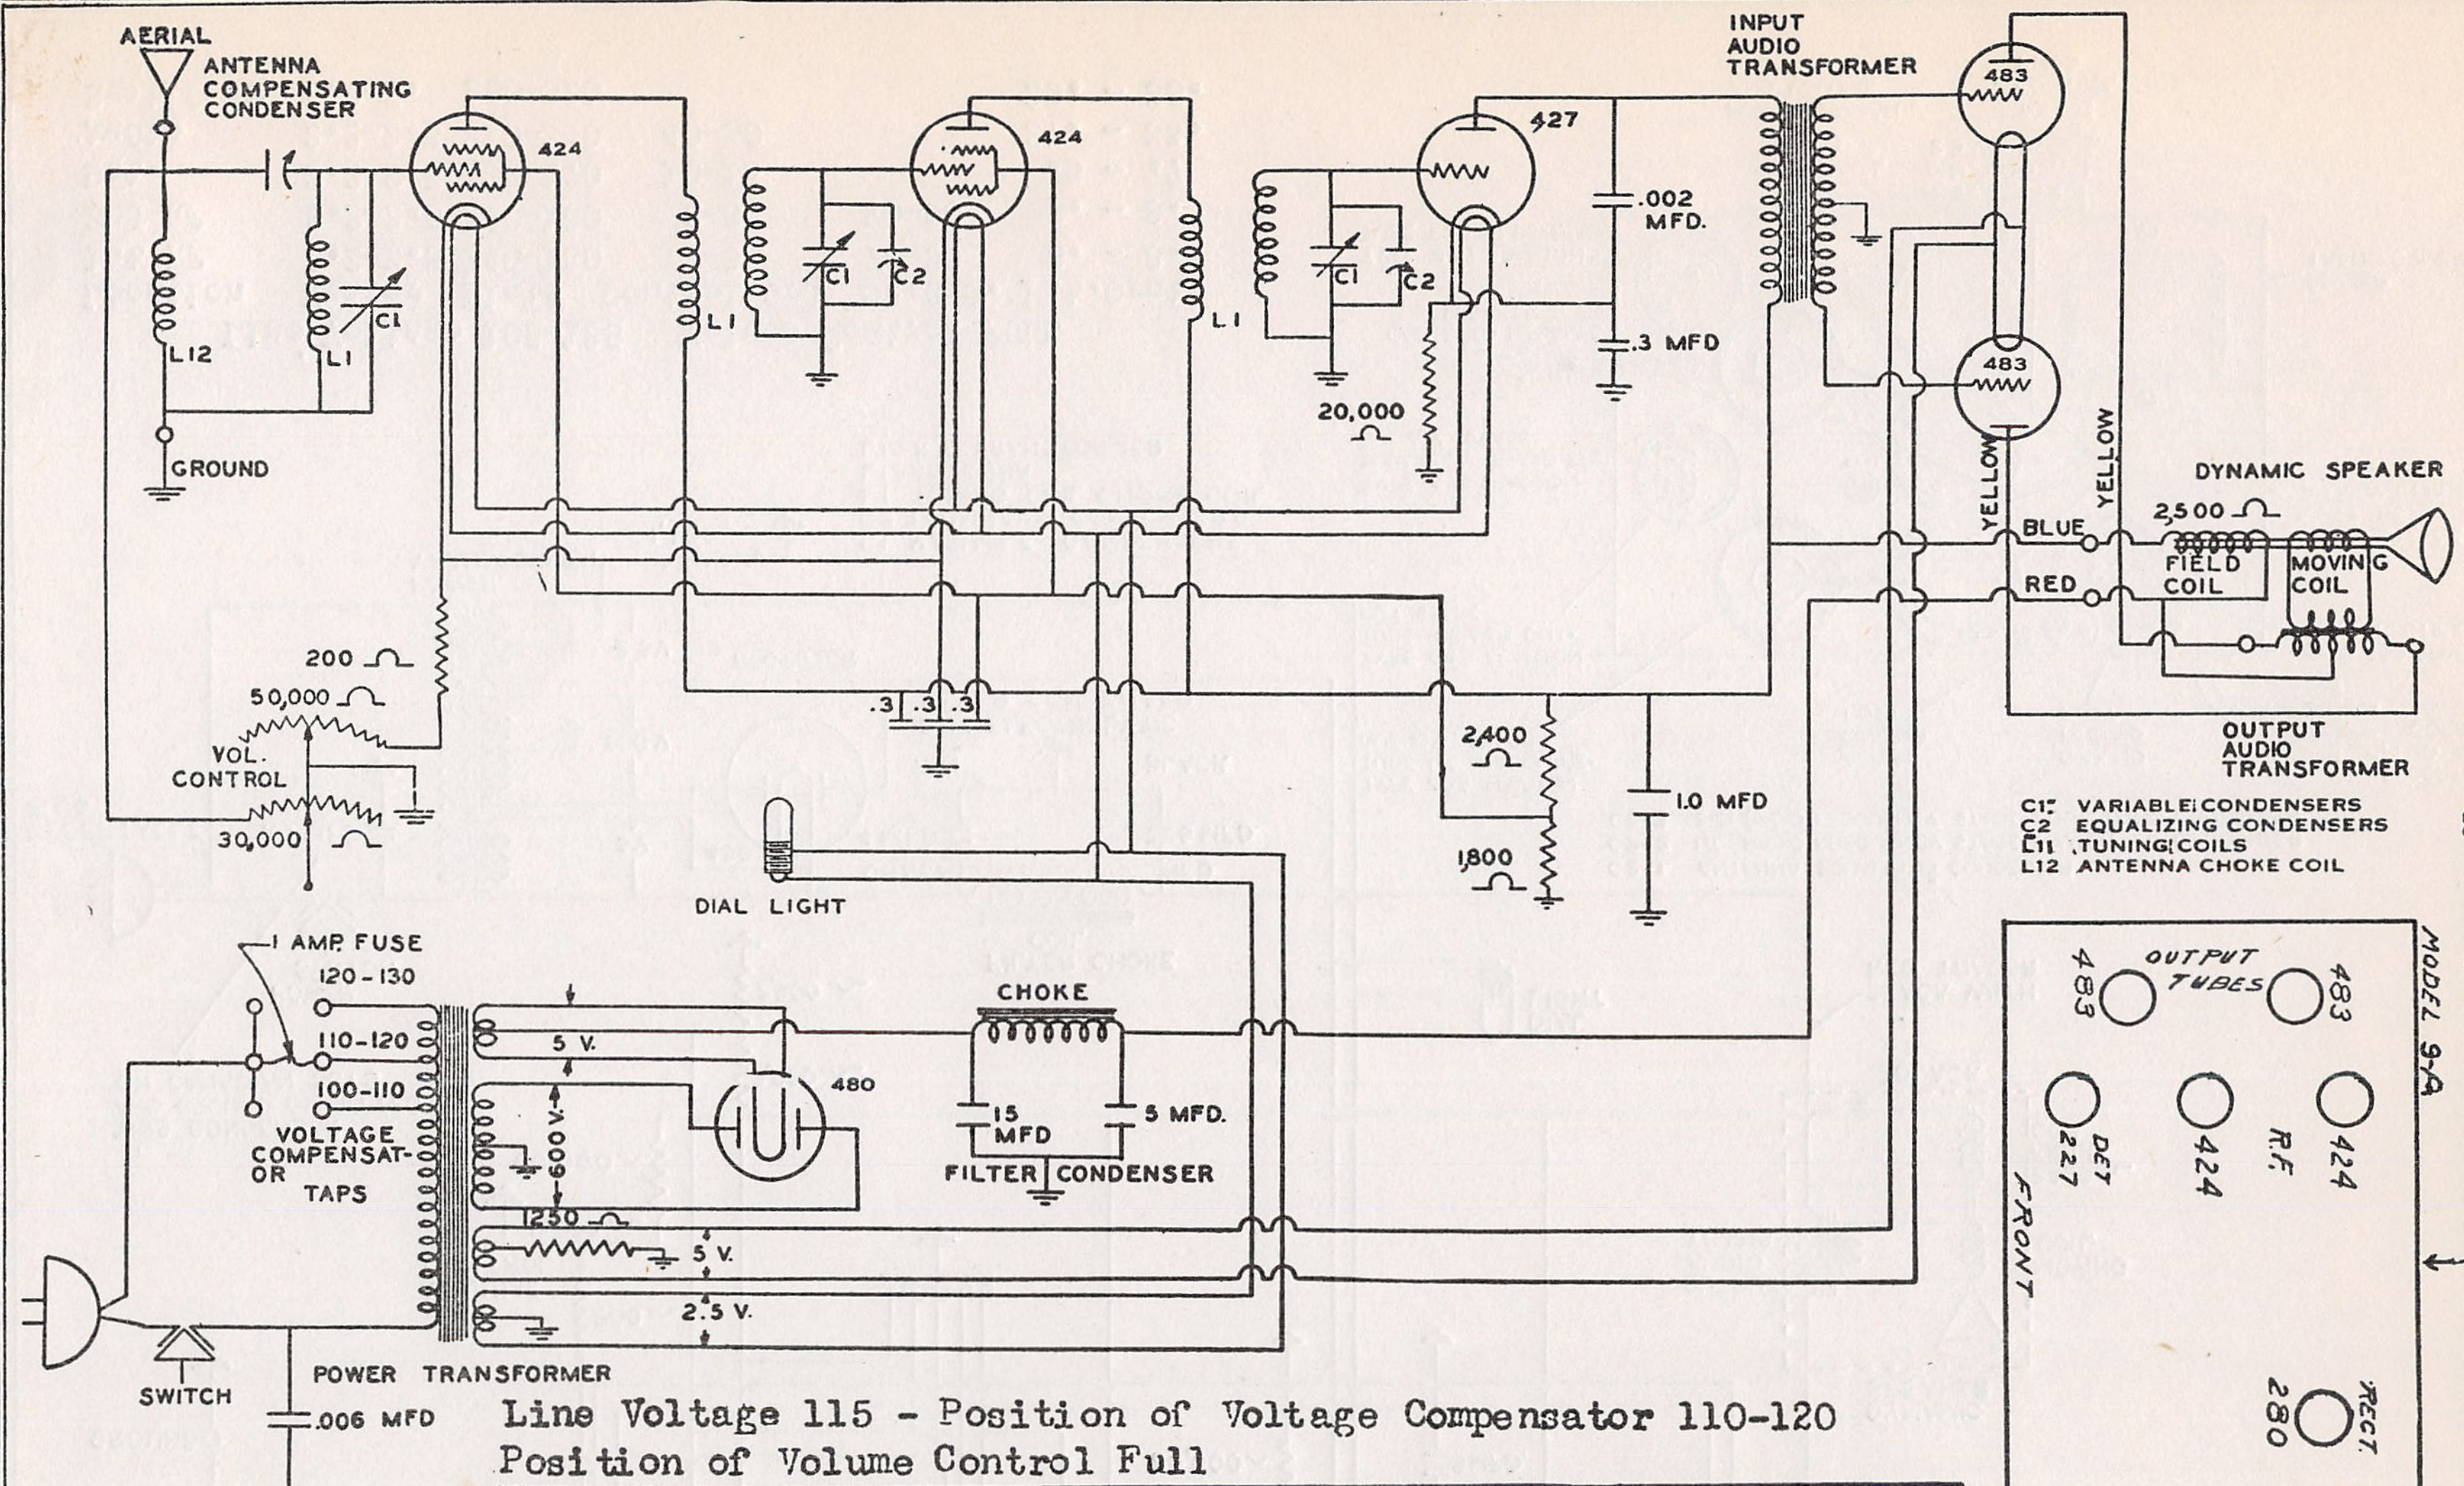
AERIAL
ANTENNA COMPENSATING CONDENSER
L12
L1
C1
GROUND
424
L1
C1
C2
424
L1
C1
C2
427
20,000
.002 MFD.
.3 MFD
INPUT AUDIO TRANSFORMER
483
483
YELLOW
YELLOW
BLUE
RED
DYNAMIC SPEAKER
2,500
FIELD COIL
MOVING COIL
OUTPUT AUDIO TRANSFORMER
200
50,000
VOL. CONTROL
30,000
.3 .3 .3
2,400
1,800
1.0 MFD
DIAL LIGHT
1 AMP. FUSE
120-130
110-120
100-110
VOLTAGE COMPENSAT-OR TAPS
5 V.
600 V.
1250
5 V.
2.5 V.
480
CHOKE
15 MFD
5 MFD.
FILTER CONDENSER
SWITCH
POWER TRANSFORMER
.006 MFD
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L11 TUNING COILS
L12 ANTENNA CHOKE COIL
MODEL 9-A
OUTPUT TUBES
483
483
424
R.F.
424
DET 227
RECT. 280
FRONT

Antenna Compensating Condenser
Accessible Thru Rear Of Chassis

Line Voltage 115 - Position of Voltage Compensator 110-120
Position of Volume Control Full

TUBE	LOCATION	HEATER OR FILAMENT	PLATE	CONTROL GRID--	SCREEN GRID+	PLATE CURRENT
424	1st R.F.	2.2 - 2.5	160 - 180	2 - 3	60 - 80	2.5 - 4
424	2nd R.F.	2.2 - 2.5	160 - 180	2 - 3	60 - 80	2.5 - 4
427	Detector	2.2 - 2.5	145 - 165	12 - 18		.4 - 1
483	Power	4.7 - 5	220 - 240	45 - 55		24. - 28
483	Power	4.7 - 5	220 - 240	45 - 55		24. - 28
480	Rectifier	4.7 - 5	320 - 340			40. - 55

SPARKS WITHINGTON CO.

MODEL 10
Chassis, Voltage

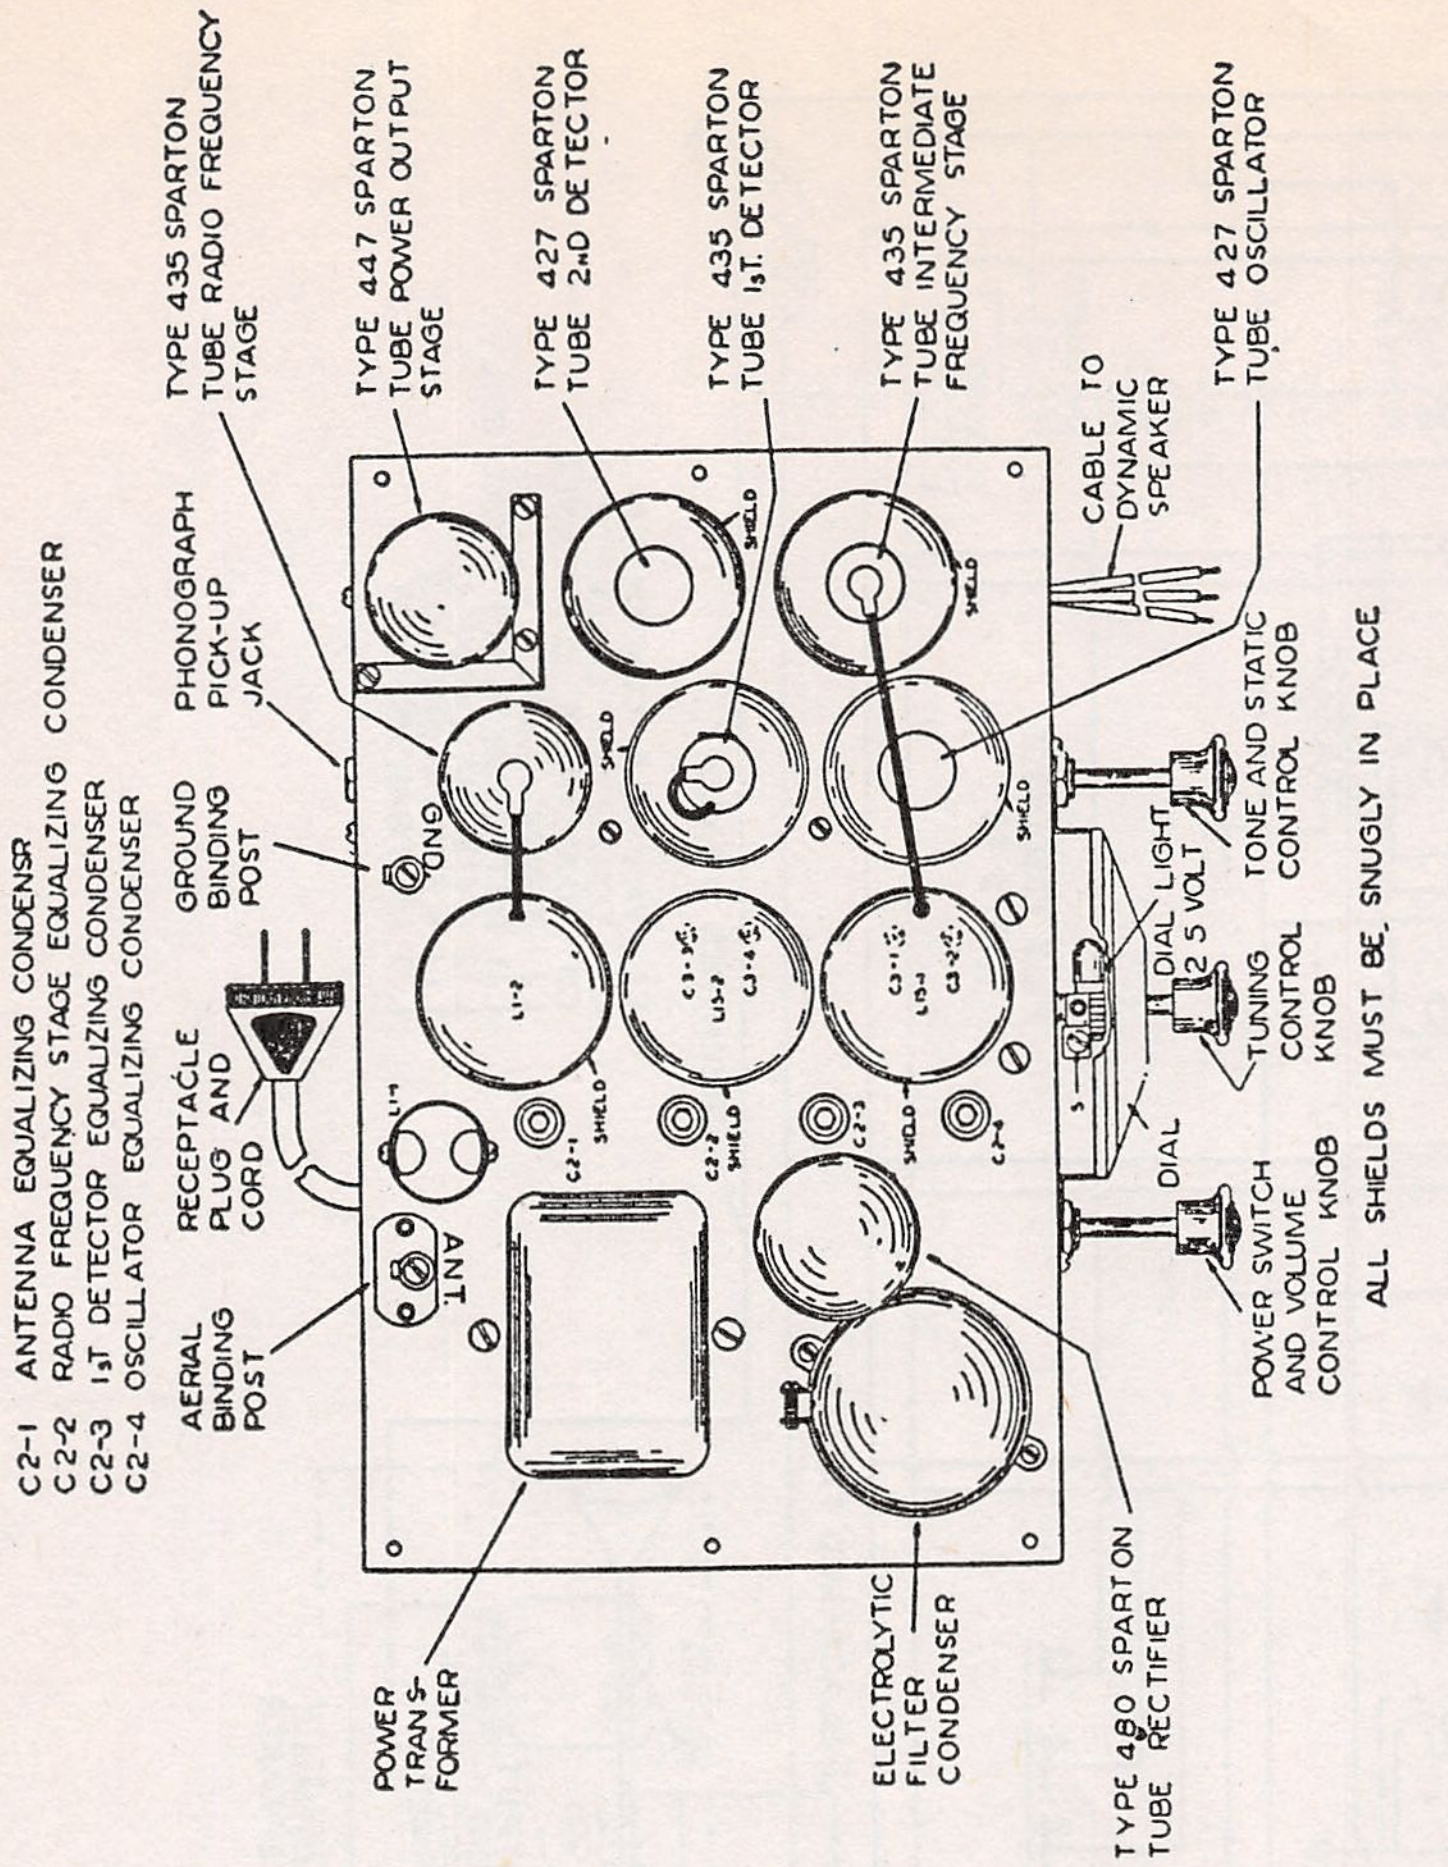
C2-1 ANTENNA EQUALIZING CONDENSER
C2-2 RADIO FREQUENCY STAGE EQUALIZING CONDENSER
C2-3 1ST DETECTOR EQUALIZING CONDENSER
C2-4 OSCILLATOR EQUALIZING CONDENSER
AERIAL BINDING POST
RECEPTACLE PLUG AND CORD
GROUND BINDING POST
PHONOGRAPH PICK-UP JACK
TYPE 435 SPARTON TUBE RADIO FREQUENCY STAGE
TYPE 447 SPARTON TUBE POWER OUTPUT STAGE
TYPE 427 SPARTON TUBE 2ND DETECTOR
TYPE 435 SPARTON TUBE 1ST DETECTOR
TYPE 435 SPARTON TUBE INTERMEDIATE FREQUENCY STAGE
CABLE TO DYNAMIC SPEAKER
TYPE 427 SPARTON TUBE OSCILLATOR
TONE AND STATIC CONTROL KNOB
DIAL LIGHT 2.5 VOLT
TUNING CONTROL KNOB
DIAL
POWER SWITCH AND VOLUME CONTROL KNOB
ALL SHIELDS MUST BE SNUGLY IN PLACE
TYPE 480 SPARTON TUBE RECTIFIER
ELECTROLYTIC FILTER CONDENSER
POWER TRANS-FORMER
ANT
GND
SHIELD
L1-1
L1-2
L15-1
L15-2
C3-1
C3-2
C3-3
C3-4
C2-1
C2-2
C2-3
C2-4

TOP VIEW MODEL 10 SUPERHETERODYNE CHASSIS

L1-1 First R. F. Tuning Coil

L1-2 Second R. F. Tuning Coil

L15-1 First I. F. Transformer (1st. Det. to I.F. Stage)

L15-2 Second I. F. Transformer (I.F. to 2nd. Det. Stage)

C3-1 I. F. Stage First Adjustable Condenser

C3-2 I. F. Stage Second Adjustable Condenser

C3-3 I. F. Stage Third Adjustable Condenser

C3-4 I. F. Stage Fourth Adjustable Condenser

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

		OPERATING VOLTAGES				
Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current Mills.
435	1st R. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 100	5 - 8
435	1st Det.	2.2 - 2.5	230 - 270	**4.5 - 7.5	85 - 110	**1.8 - 3.5
435	1st I. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 110	5 - 8
427	Oscillator	2.2 - 2.5	85 - 110	†	--------	‡
427	2nd Det.	2.2 - 2.5	*100 - 135	8 - 14	--------	4.0 - .7
447	Power	2.2 - 2.5	220 - 260	15 - 18	--------	30 - 36
480	Rectifier	4.2 - 5	360 - 420	--------	--------	40 - 55

*Use 300 volt scale.

**Remove Oscillator tube.

†Tube generates own bias when oscillating.

‡Test with plug in 2nd. Detector socket and tube in analyzer

MODEL 10
Schematic

SPARKS WITHINGTON CO.

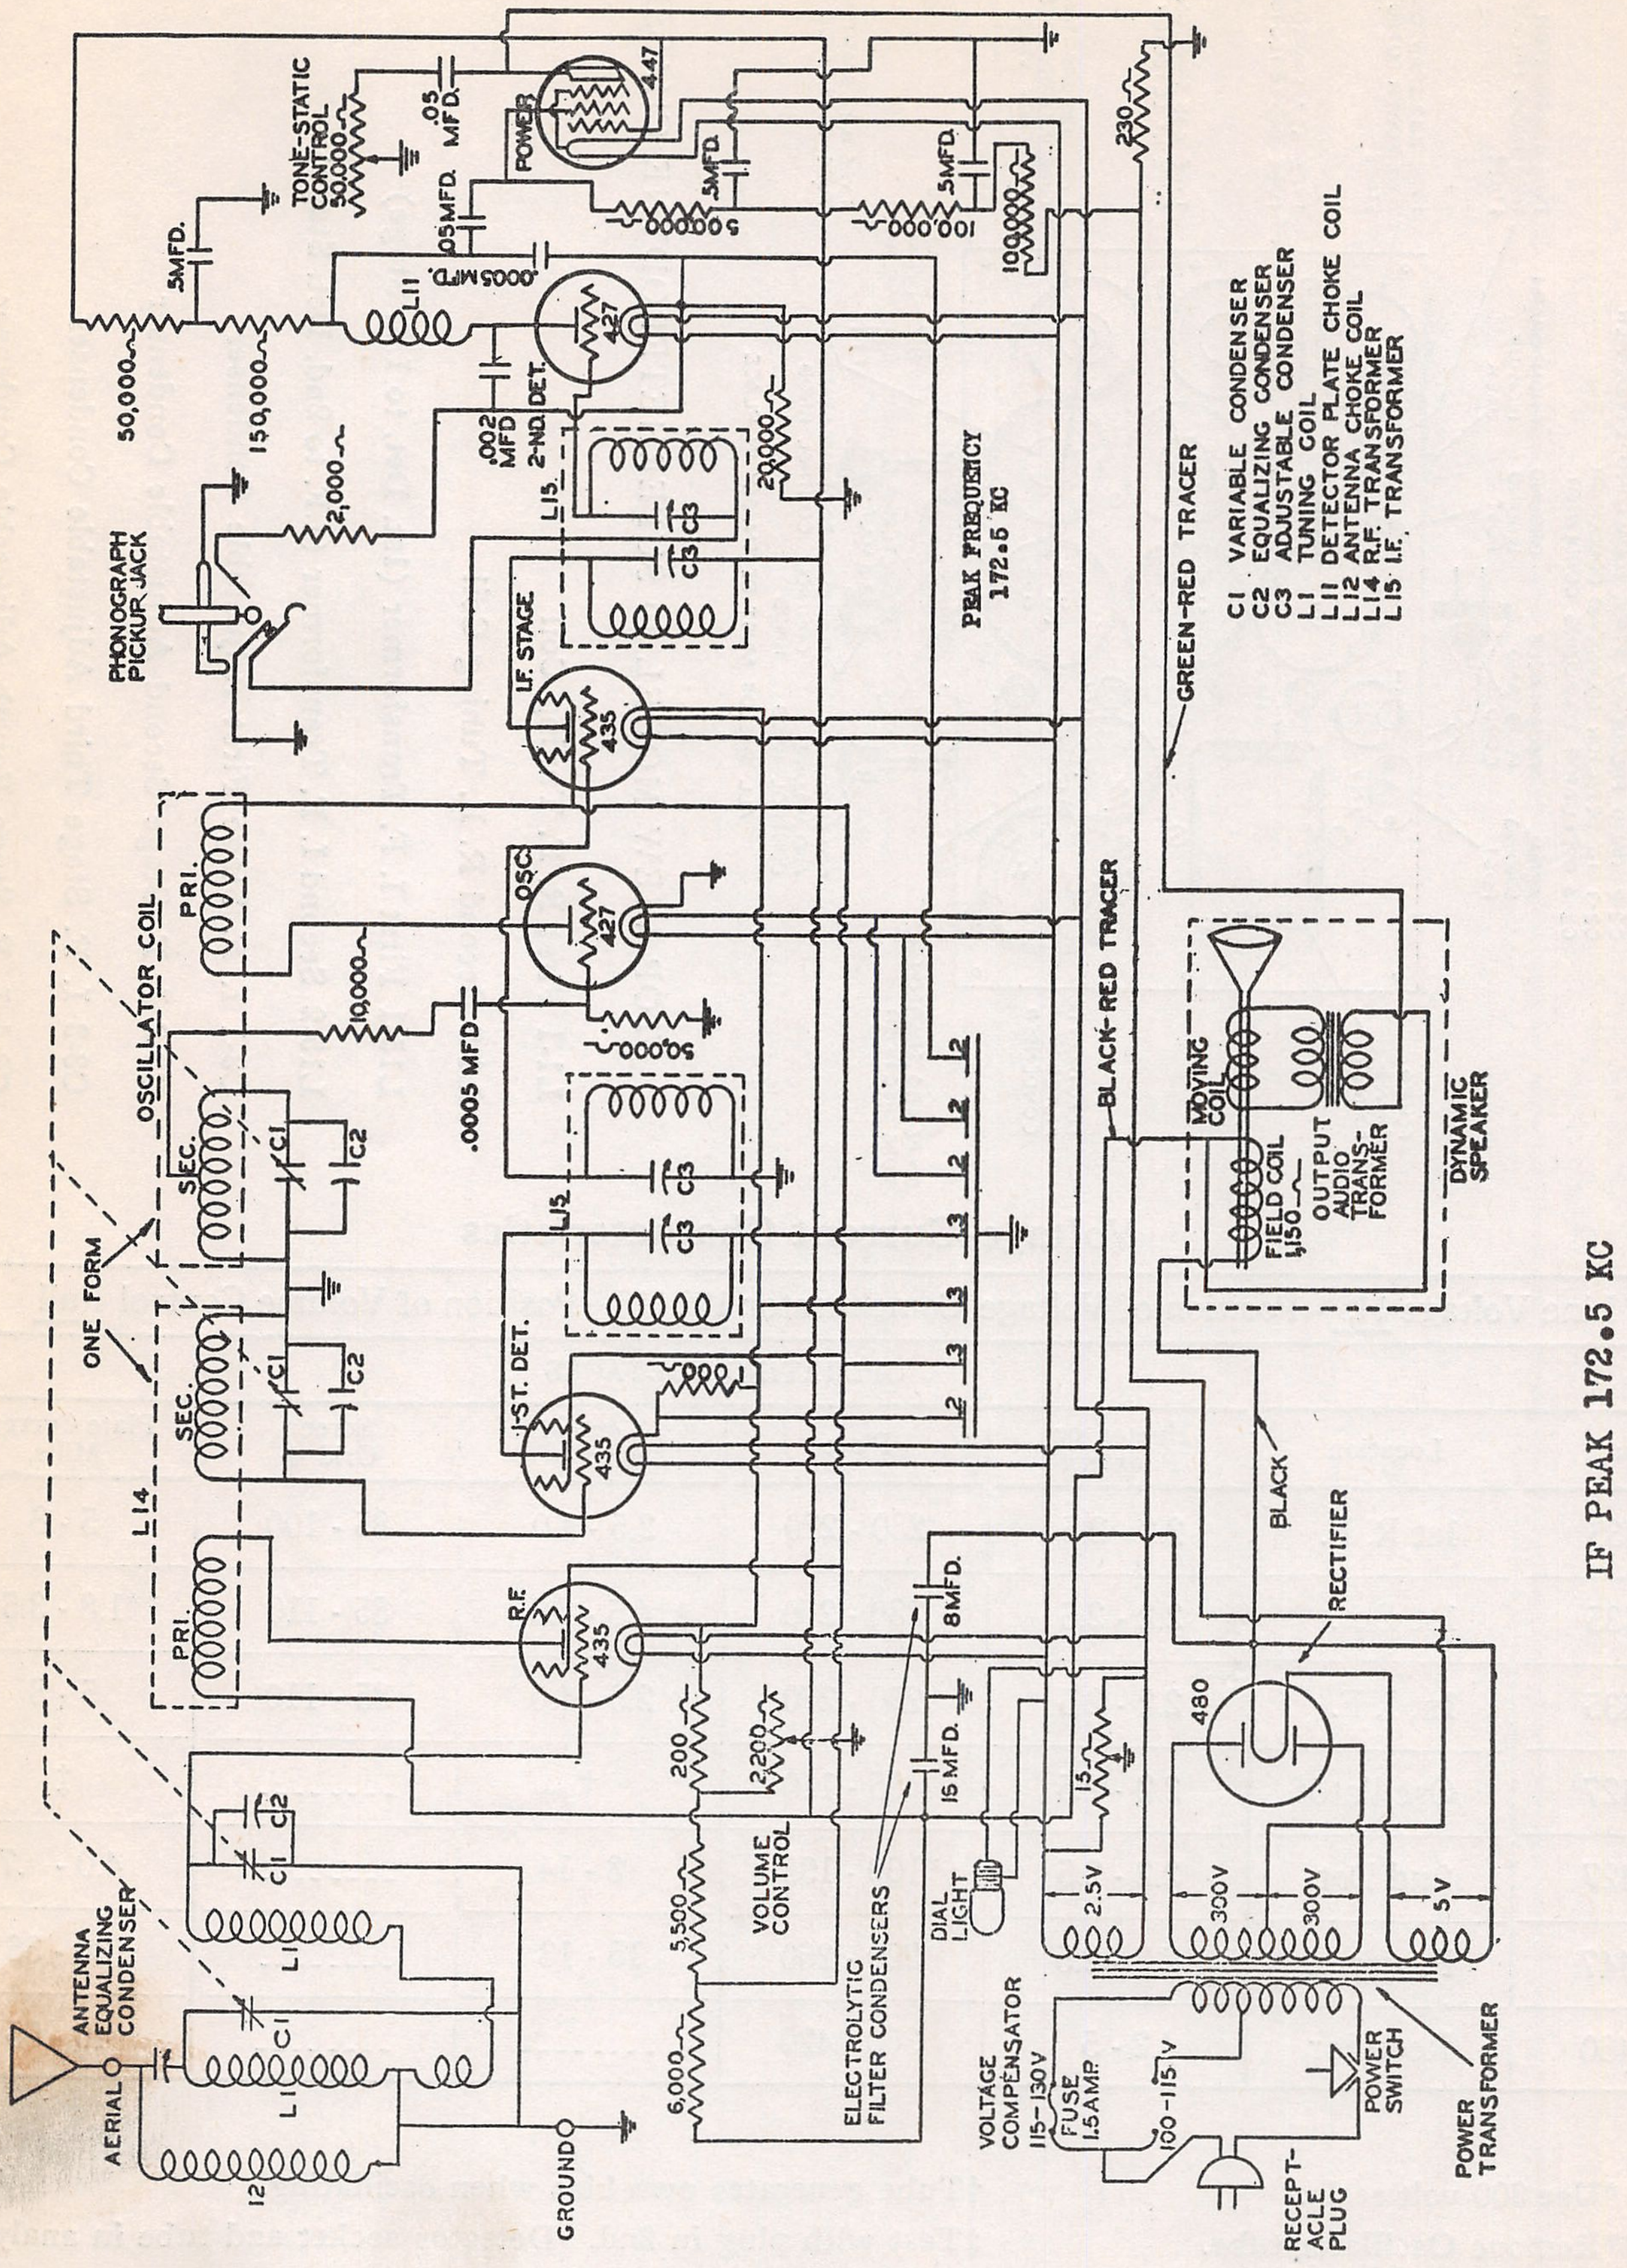
AERIAL
ANTENNA EQUALIZING CONDENSER
GROUND
L1
C1
C2
12
6,000
5,500
200
2,200
VOLUME CONTROL
ELECTROLYTIC FILTER CONDENSERS
8MFD.
16 MFD.
DIAL LIGHT
15
R.F.
435
PRI.
SEC.
L14
ONE FORM
OSCILLATOR COIL
1-ST. DET.
OSC.
427
I.F. STAGE
2-ND. DET.
L15
C3
10,000
.0005 MFD
50,000
2,000
.002 MFD
20,000
PHONOGRAPH PICKUP JACK
150,000
50,000
.5MFD.
TONE-STATIC CONTROL 50,000
.05 MFD.
.0005 MFD.
L11
.05MFD.
POWER
447
.5MFD.
500,000
100,000
100,000
230
PEAK FREQUENCY 172.5 KC
GREEN-RED TRACER
BLACK-RED TRACER
MOVING COIL
FIELD COIL 1150
OUTPUT AUDIO TRANSFORMER
DYNAMIC SPEAKER
BLACK
RECTIFIER
480
2.5V
300V
300V
5V
VOLTAGE COMPENSATOR 115-130V
FUSE 1.5AMP.
100-115V
RECEPTACLE PLUG
POWER SWITCH
POWER TRANSFORMER
1
2
3

C1 VARIABLE CONDENSER
C2 EQUALIZING CONDENSER
C3 ADJUSTABLE CONDENSER
L1 TUNING COIL
L11 DETECTOR PLATE CHOKE COIL
L12 ANTENNA CHOKE COIL
L14 R.F. TRANSFORMER
L15 I.F. TRANSFORMER

IF PEAK 172.5 KC

MODEL 12
Schematic
Chassis, Voltage

SPARKS WITHINGTON CO.

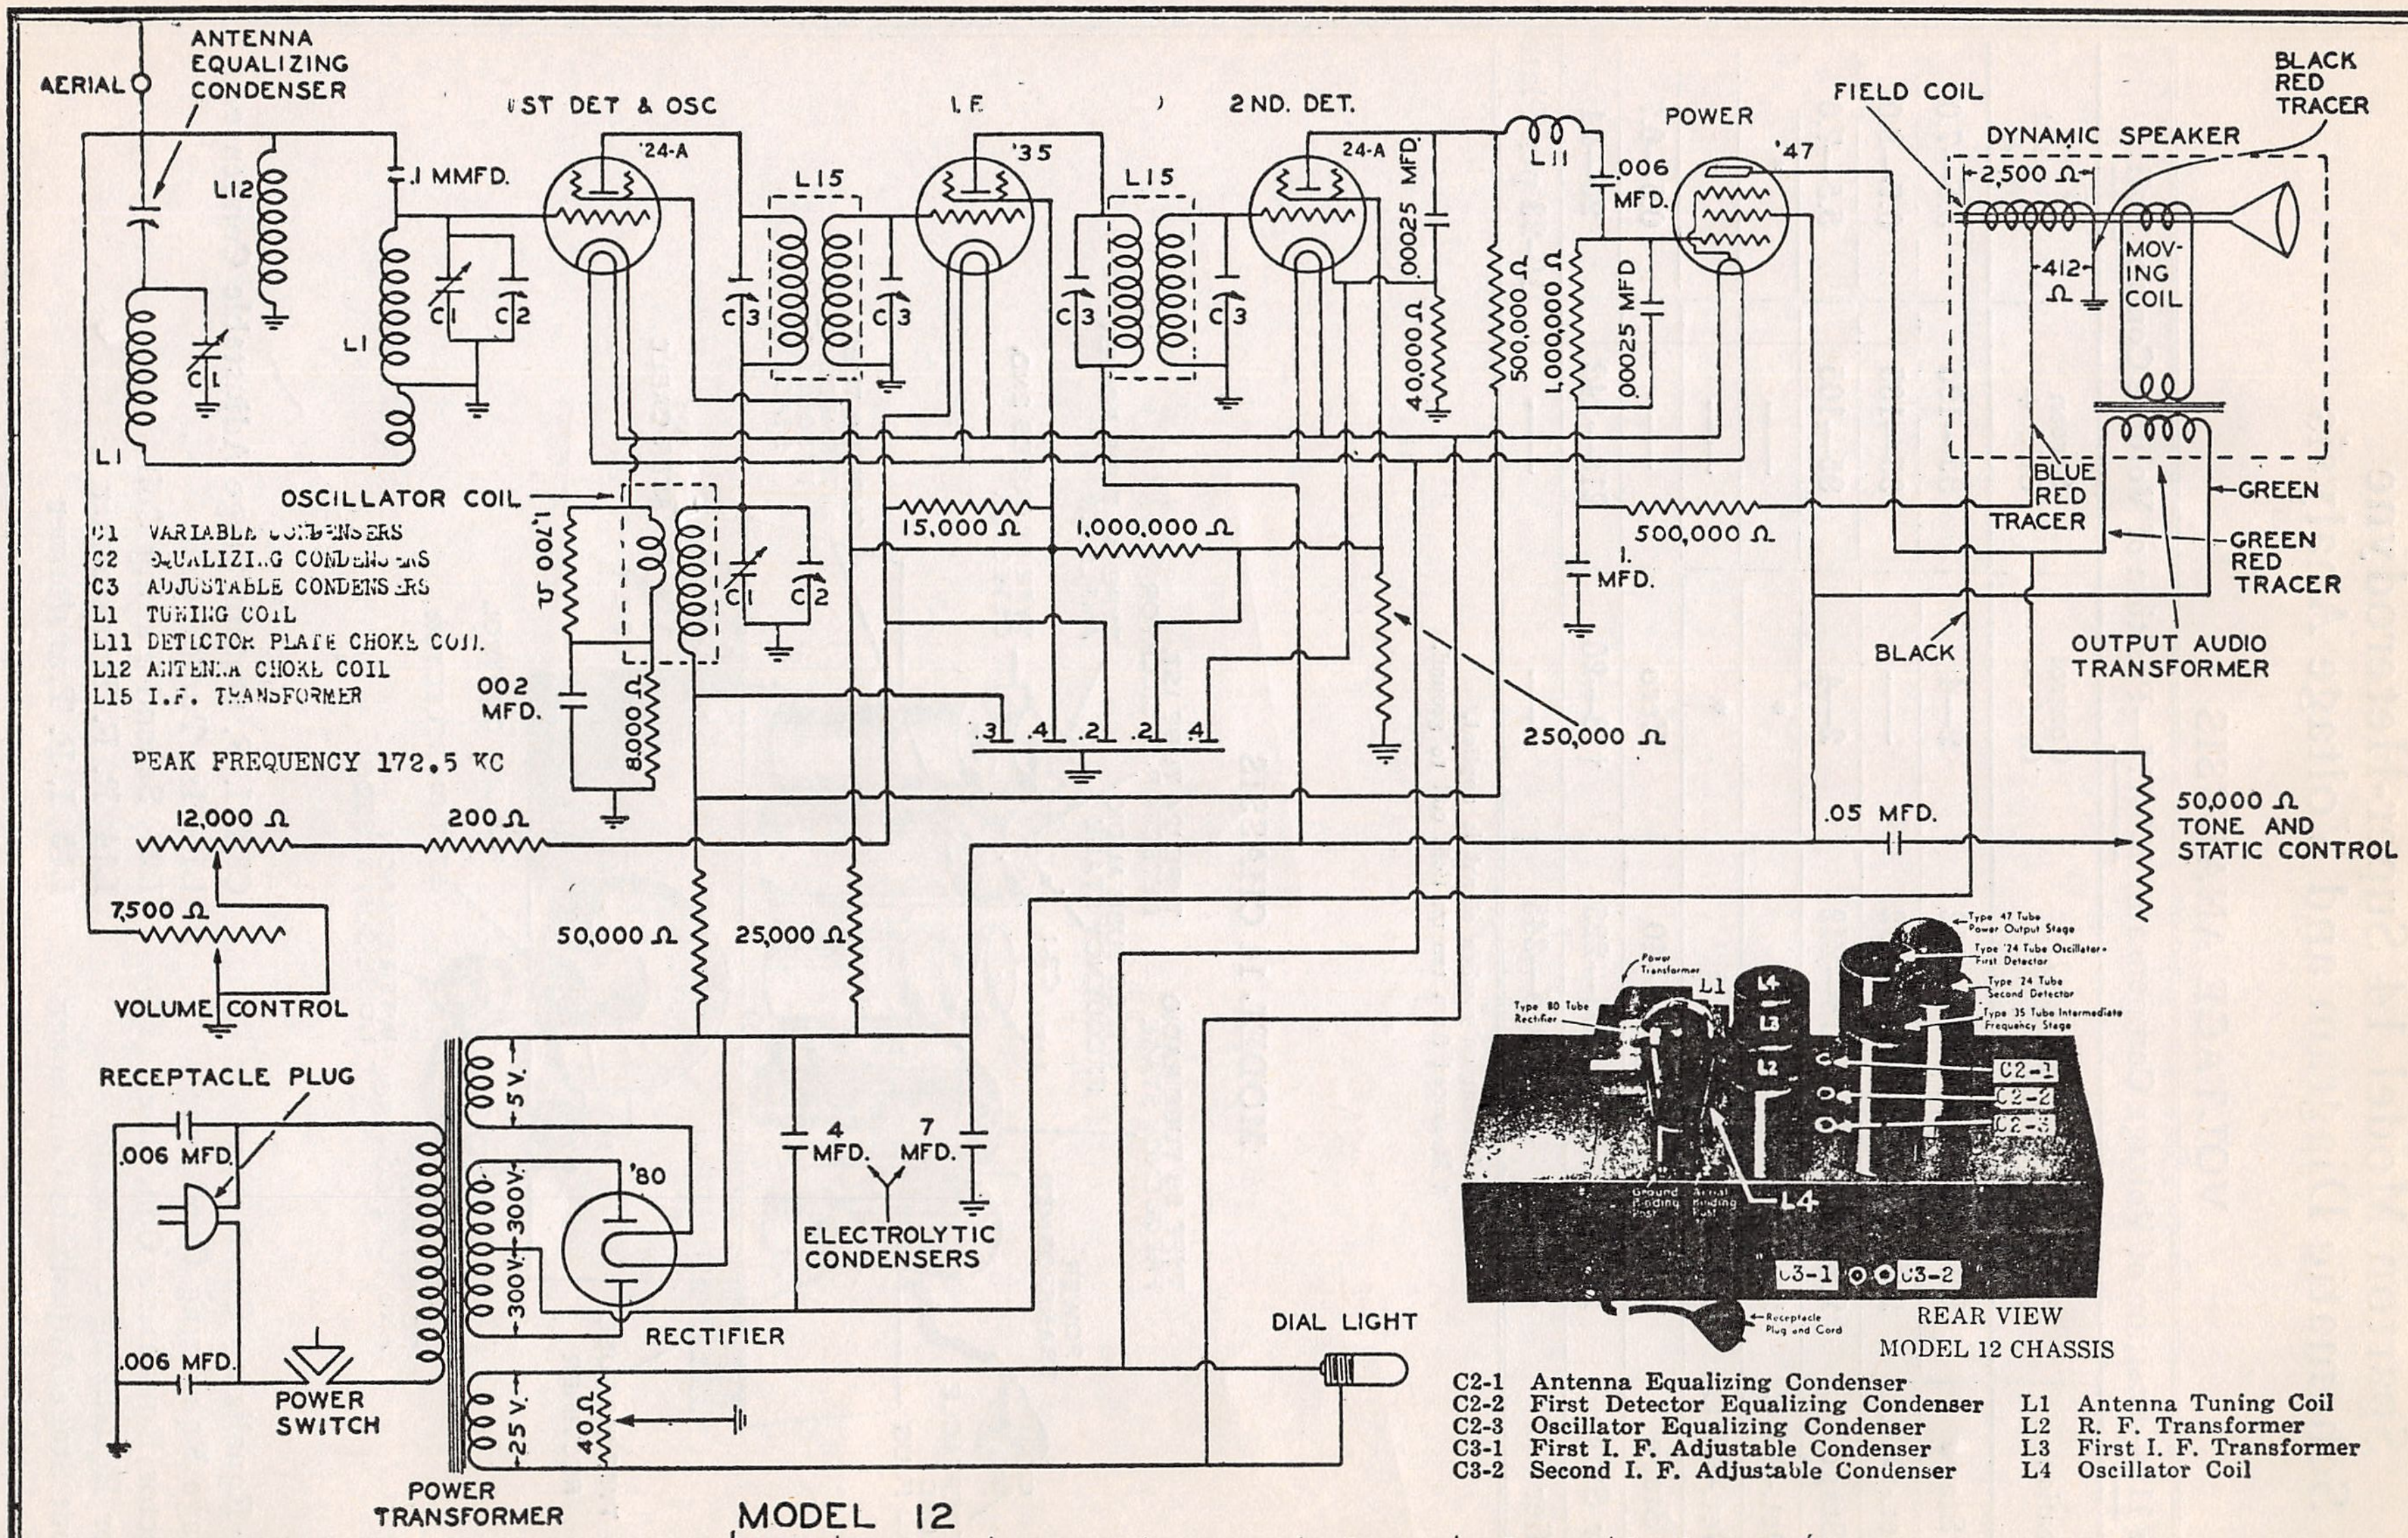
AERIAL
ANTENNA EQUALIZING CONDENSER
L12
L1
C1
C2
.1 MMFD.
1ST DET & OSC
'24-A
L15
C3
I. F.
'35
2ND. DET.
24-A
.00025 MFD
40,000 Ω
500,000 Ω
1,000,000 Ω
L11
.006 MFD.
POWER
'47
FIELD COIL
DYNAMIC SPEAKER
2,500 Ω
412 Ω
MOVING COIL
BLACK RED TRACER
BLUE RED TRACER
GREEN
GREEN RED TRACER
OUTPUT AUDIO TRANSFORMER
BLACK
OSCILLATOR COIL
1,700 Ω
.002 MFD.
8,000 Ω
15,000 Ω
1,000,000 Ω
.3
.4
.2
.2
.4
250,000 Ω
500,000 Ω
1. MFD.
.05 MFD.
50,000 Ω TONE AND STATIC CONTROL
12,000 Ω
200 Ω
7,500 Ω
VOLUME CONTROL
50,000 Ω
25,000 Ω
RECEPTACLE PLUG
.006 MFD.
.006 MFD.
POWER SWITCH
POWER TRANSFORMER
5 V.
300V
300V
25 V.
40 Ω
'80
RECTIFIER
4 MFD.
7 MFD.
ELECTROLYTIC CONDENSERS
DIAL LIGHT
Type 47 Tube Power Output Stage
Type '24 Tube Oscillator-First Detector
Type '24 Tube Second Detector
Type 35 Tube Intermediate Frequency Stage
Power Transformer
Type 80 Tube Rectifier
L1
L4
L3
L2
C2-1
C2-2
C2-3
C3-1
C3-2
Ground Binding Post
Aerial Binding Post
Receptacle Plug and Cord

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
C3 ADJUSTABLE CONDENSERS
L1 TUNING COIL
L11 DETECTOR PLATE CHOKE COIL
L12 ANTENNA CHOKE COIL
L15 I.F. TRANSFORMER

PEAK FREQUENCY 172.5 KC

REAR VIEW
MODEL 12 CHASSIS

C2-1 Antenna Equalizing Condenser
C2-2 First Detector Equalizing Condenser
C2-3 Oscillator Equalizing Condenser
C3-1 First I. F. Adjustable Condenser
C3-2 Second I. F. Adjustable Condenser

L1 Antenna Tuning Coil
L2 R. F. Transformer
L3 First I. F. Transformer
L4 Oscillator Coil

MODEL 12

Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current M. A.
'24-A	1st Det.-Osc.	2.2 - 2.5	149 - 171	9.2 - 10.8	58 - 70	.9 - 1.1
'24-A	2nd Det.	2.2 - 2.5	62 - 74	1.6 - 2.0	5.4 - 6.6	.17 - .20
'35	I. F.	2.2 - 2.5	227 - 253	3.2 - 3.8	58 - 70	6.9 - 8.1
'47	Power	2.2 - 2.5	221 - 247	11.0 - 13.0	237 - 263	21.5 - 25.3
'80	Rectifier	4.4 - 5.0	339 - 375	--------	--------	19 - 23

LINE VOLTAGE 115 POSITION OF VOLUME CONTROL FULL

IF PEAK 172.5 KC

SPARKS WITHINGTON CO.

Sparton Model 14 Super-Heterodyne Schematic Diagram and Voltage Analysis

VOLTAGE ANALYSIS

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current M. A
58	R. F. Stage	2.2—2.5	218—242	2—4	95—105	5.5—7.0
'24	1st Det.-Osc.	2.2—2.5	218—242	——	95—105	0.7—8.0
58	I. F. Stage	2.2—2.5	218—242	2—4	95—105	5.5—7.0
56	2nd Det.-AVC	2.2—2.5	*	*	——	*
56	2nd Det.-AVC	2.2—2.5	*	*	——	*
56	A. F. Stage	2.2—2.5	20—40	Zero	——	0.5—0.7
'47	Power Stage	2.2—2.5	205—225	†18—20	218—242	20—24
'80	Rectifier	4.5—5.0	315—345	——	——	19-23 per Plate

* Present only when signal is applied.
† Measured from tap on field coil to ground.

MODEL 14 CHASSIS

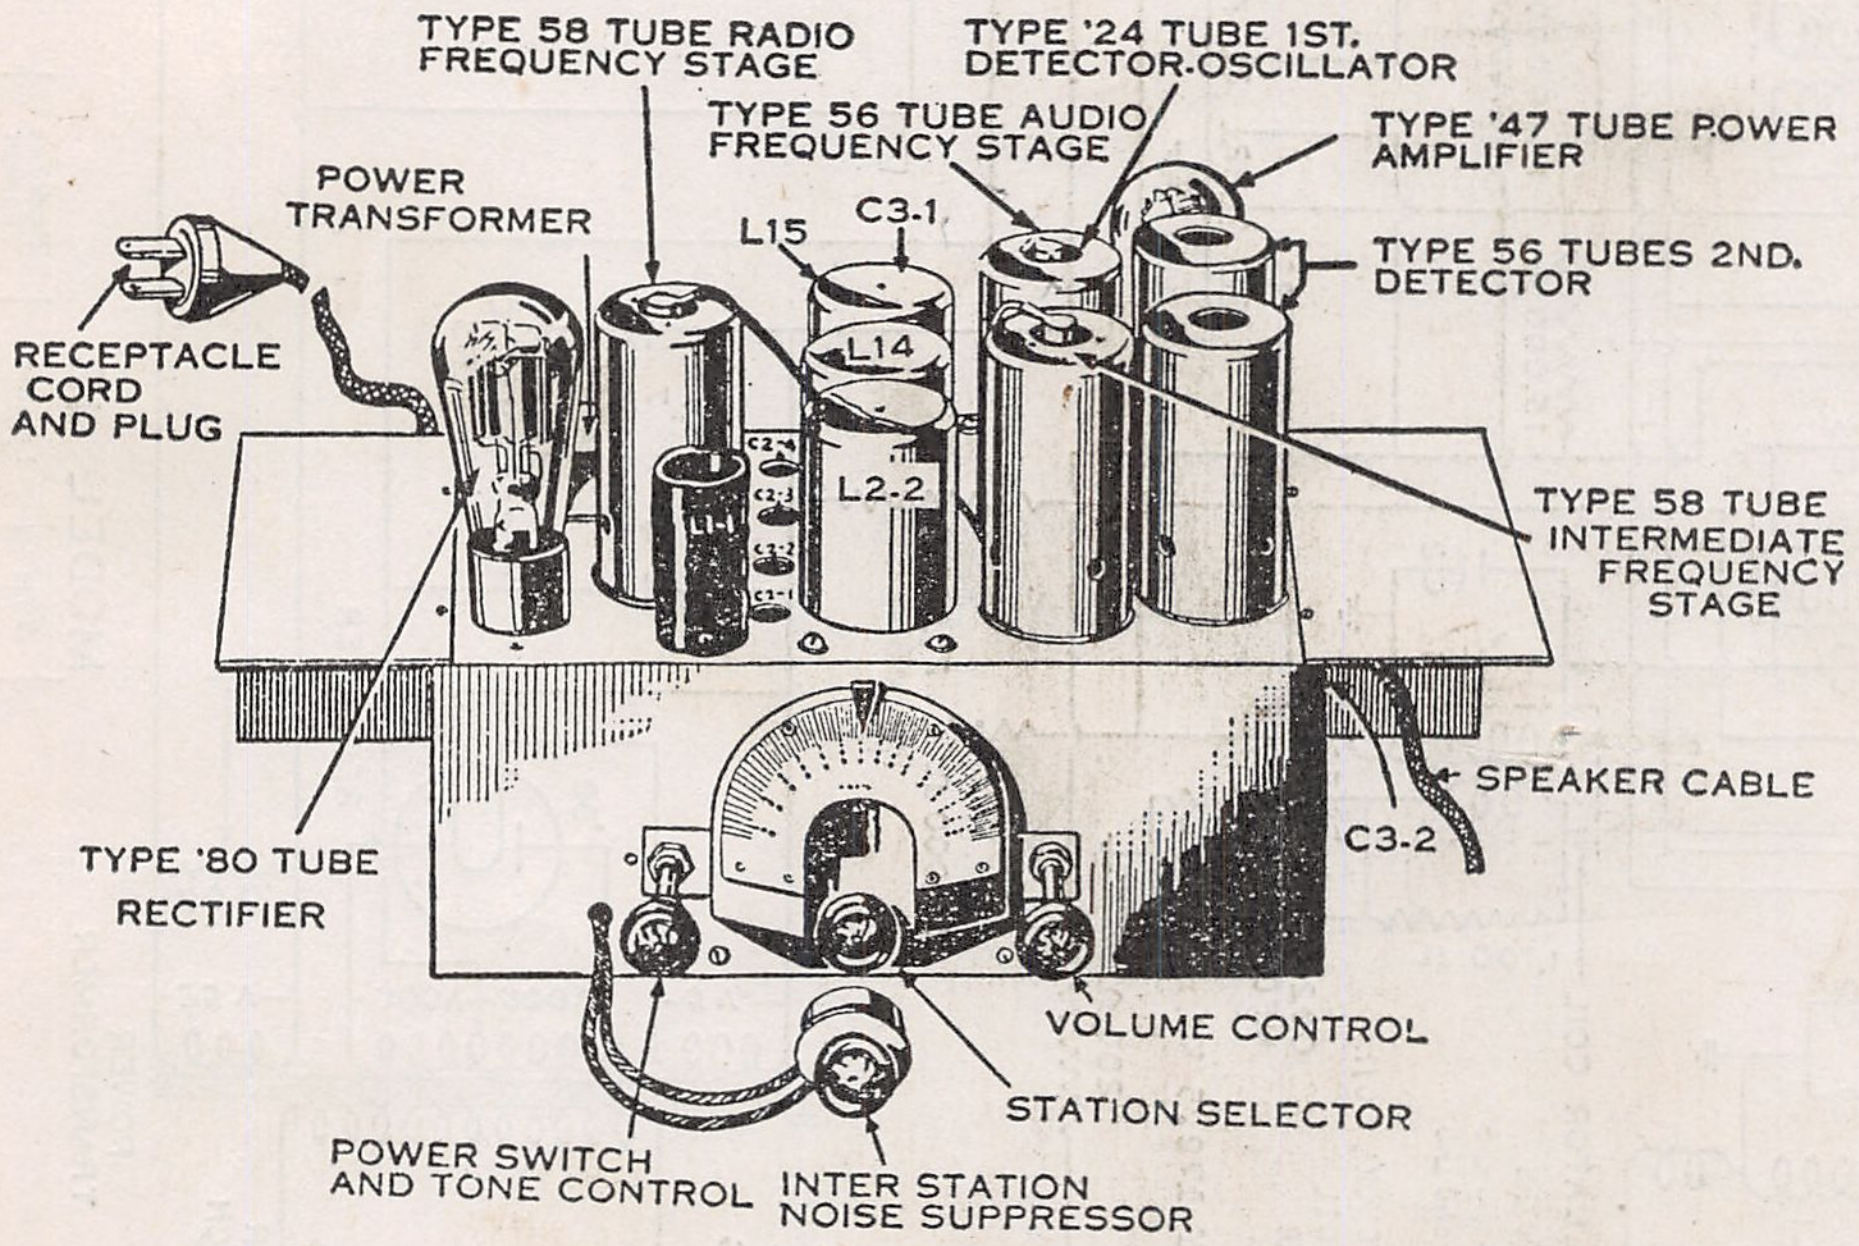
TYPE 58 TUBE RADIO FREQUENCY STAGE
TYPE '24 TUBE 1ST. DETECTOR-OSCILLATOR
TYPE 56 TUBE AUDIO FREQUENCY STAGE
TYPE '47 TUBE POWER AMPLIFIER
POWER TRANSFORMER
L15
C3-1
TYPE 56 TUBES 2ND. DETECTOR
L14
RECEPTACLE CORD AND PLUG
L2-2
C2-4
C2-3
C2-2
C2-1
TYPE 58 TUBE INTERMEDIATE FREQUENCY STAGE
SPEAKER CABLE
C3-2
TYPE '80 TUBE RECTIFIER
VOLUME CONTROL
STATION SELECTOR
POWER SWITCH AND TONE CONTROL
INTER STATION NOISE SUPPRESSOR

C2-1 Antenna Equalizing Condenser
C2-2 R. F. Stage Equalizing Condenser
C2-3 1st Detector Equalizing Condenser
C2-4 Oscillator Equalizing Condenser
C3-1 I. F. Input Stage Adjustable Condenser
C3-2 I. F. Output Stage Adjustable Condenser
L1 1st Tuning Coil
L2 Second Tuning Coil
L14 R. F. Transformer
L15 I. F. Transformer

SPARKS WITHINGTON CO.

MODEL 14
Schematic

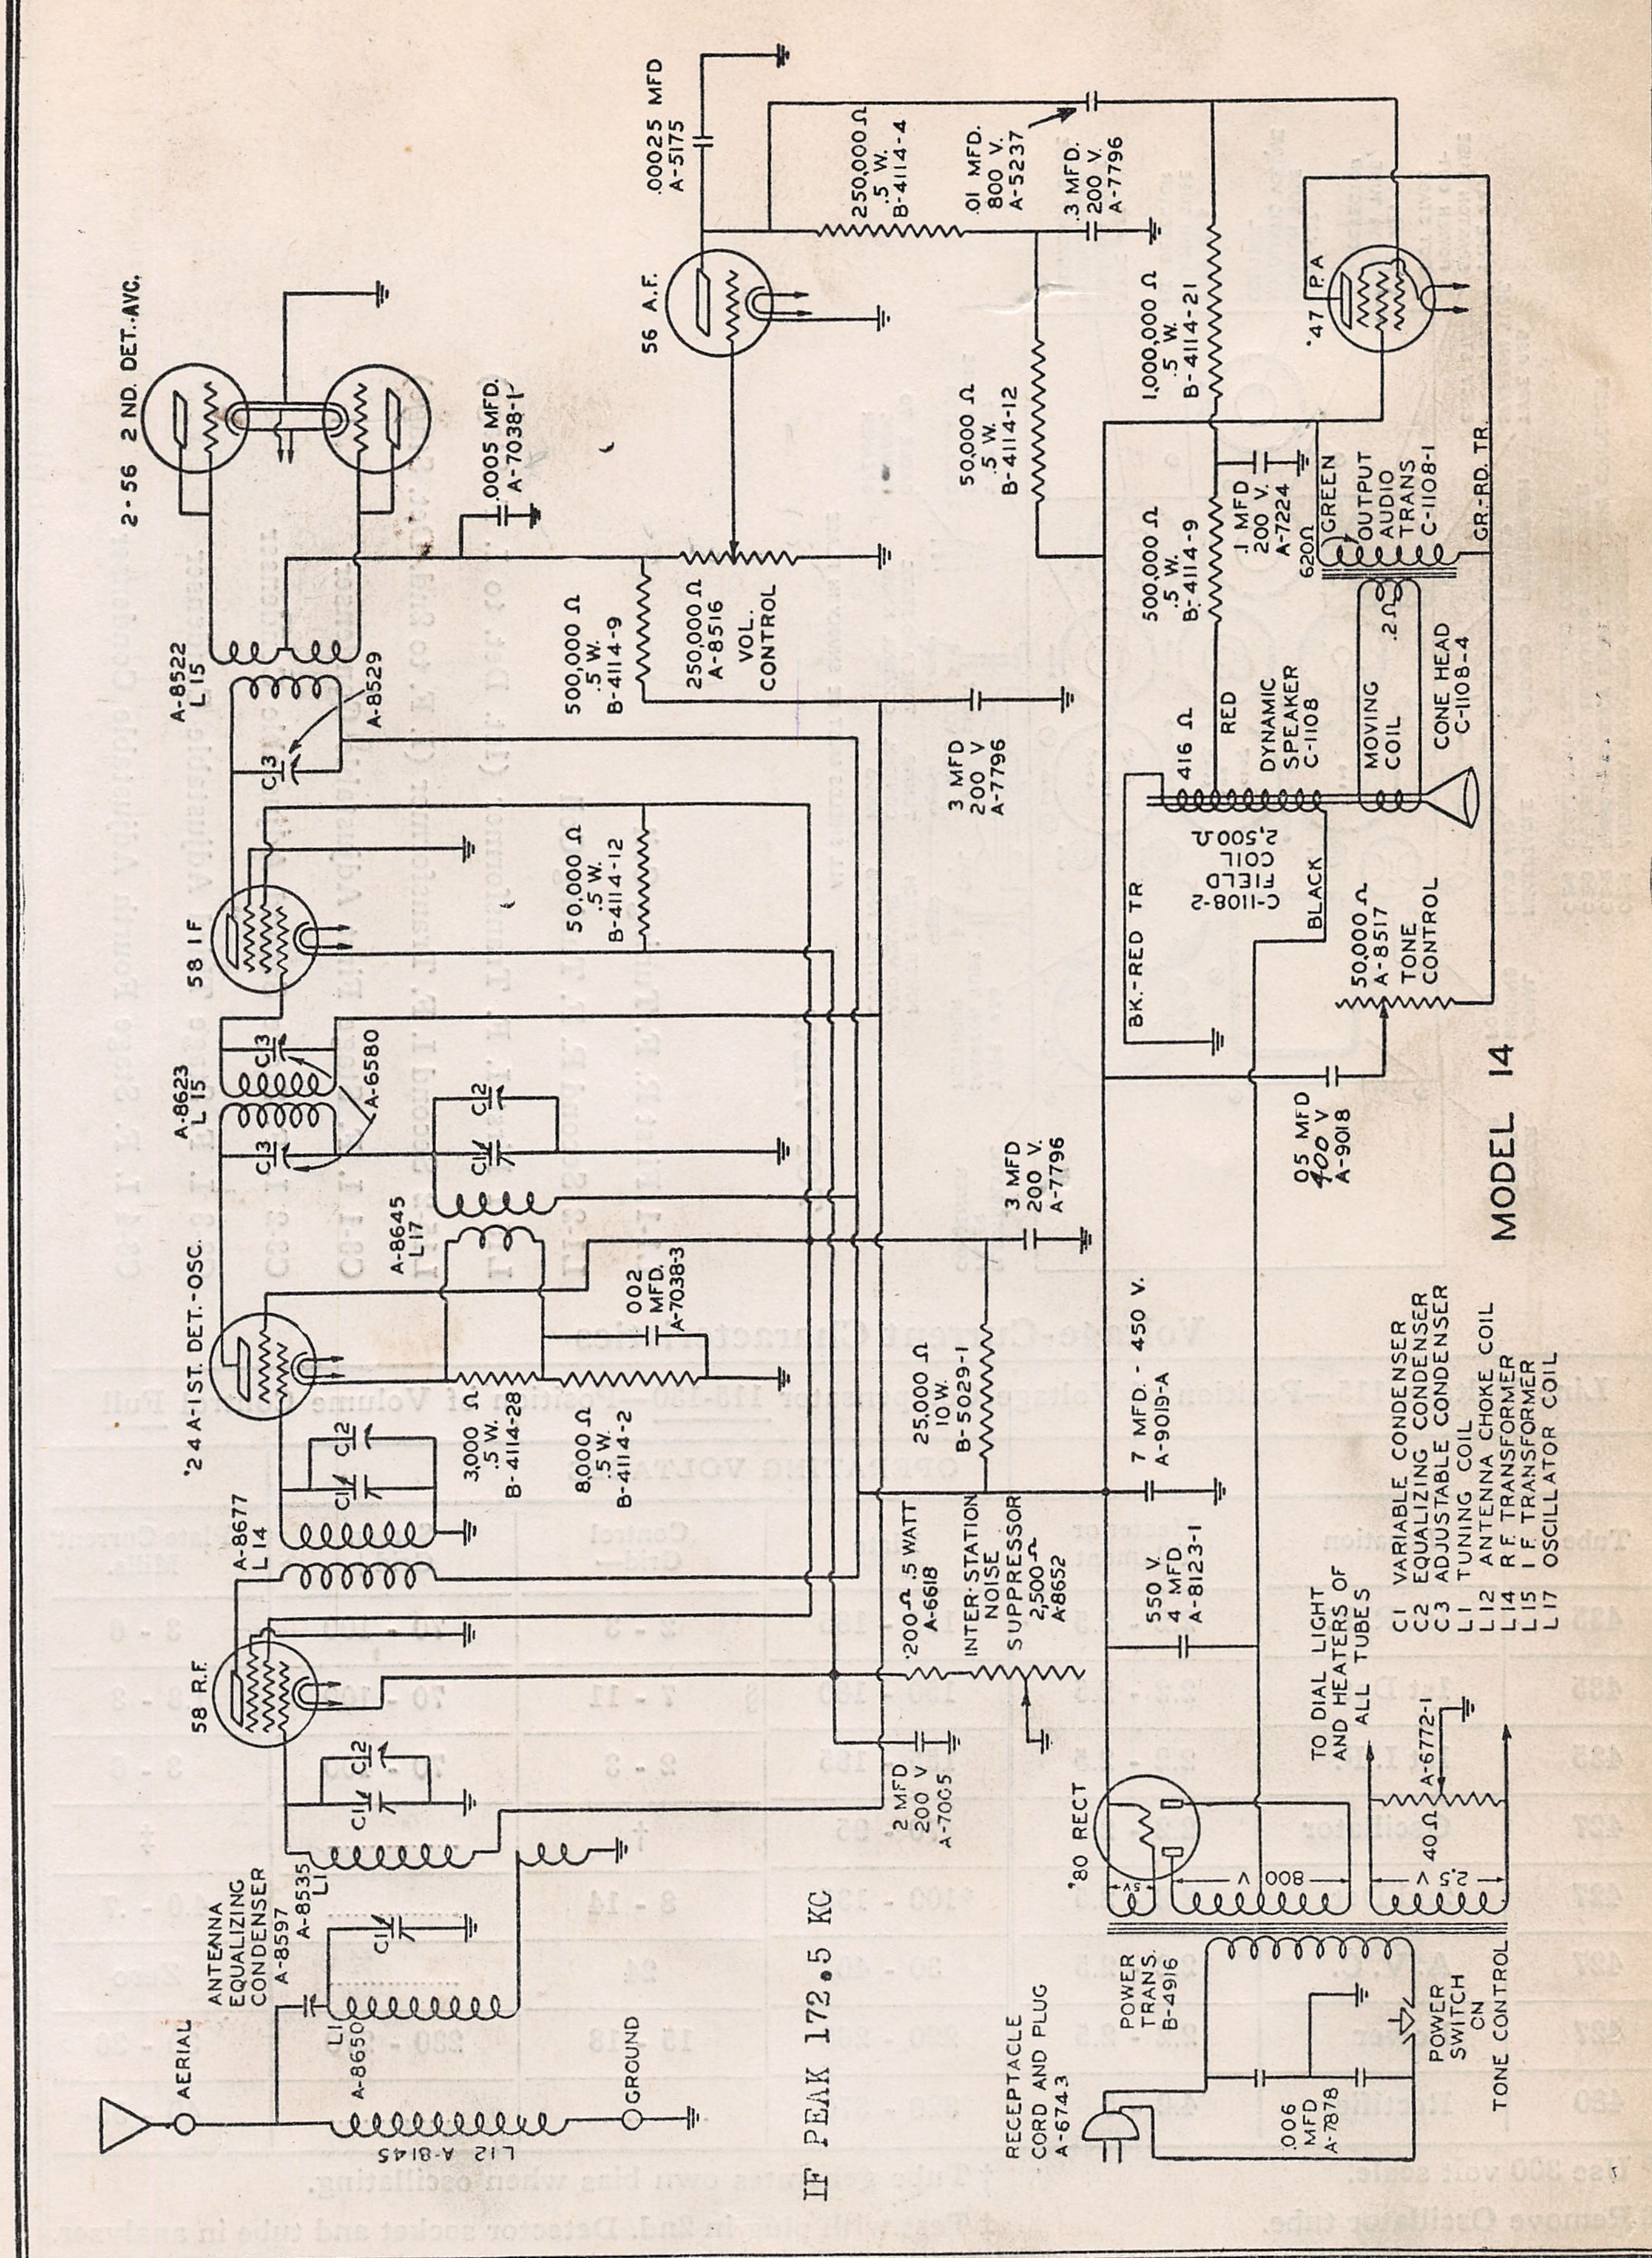
AERIAL
GROUND
L12 A-8145
L1 A-8650
ANTENNA EQUALIZING CONDENSER A-8597
A-8535 L1
C1 C2
58 R.F.
A-8677 L14
'24 A-1ST. DET.-OSC.
3,000 Ω .5 W. B-4114-28
8,000 Ω .5 W. B-4114-2
.002 MFD. A-7038-3
A-8645 L17
A-8623 L15
A-6580
C3
58 IF
50,000 Ω .5 W. B-4114-12
A-8522 L15
A-8529
2-56 2 ND. DET.-AVC.
.0005 MFD. A-7038-1
500,000 Ω .5 W. B-4114-9
250,000 Ω A-8516 VOL. CONTROL
3 MFD 200 V. A-7796
56 A.F.
.00025 MFD A-5175
250,000 Ω .5 W. B-4114-4
.01 MFD. 800 V. A-5237
3 MFD. 200 V. A-7796
50,000 Ω .5 W. B-4114-12
1,000,000 Ω .5 W. B-4114-21
'47 P.A.
500,000 Ω .5 W. B-4114-9
1 MFD 200 V. A-7224
620Ω
GREEN
OUTPUT AUDIO TRANS C-1108-1
GR.-RD. TR.
.2Ω
416 Ω
RED
DYNAMIC SPEAKER C-1108
MOVING COIL
CONE HEAD C-1108-4
2,500 Ω FIELD COIL C-1108-2
BLACK
BK.-RED TR
50,000 Ω A-8517 TONE CONTROL
.05 MFD 400 V A-9018
MODEL 14
3 MFD 200 V. A-7796
25,000 Ω 10 W. B-5029-1
7 MFD. - 450 V. A-9019-A
200 Ω .5 WATT A-6618
INTER-STATION NOISE SUPPRESSOR 2,500 Ω A-8652
2 MFD 200 V A-7005
550 V. 4 MFD A-8123-1
TO DIAL LIGHT AND HEATERS OF ALL TUBES
A-6772-1
40 Ω
'80 RECT
5 V.
800 V.
2.5 V.
POWER TRANS. B-4916
RECEPTACLE CORD AND PLUG A-6743
.006 MFD A-7878
POWER SWITCH ON TONE CONTROL
C1 VARIABLE CONDENSER
C2 EQUALIZING CONDENSER
C3 ADJUSTABLE CONDENSER
L1 TUNING COIL
L12 ANTENNA CHOKE COIL
L14 R.F. TRANSFORMER
L15 I.F. TRANSFORMER
L17 OSCILLATOR COIL
IF PEAK 172.5 KC

MODEL 15
Chassis, Voltage

SPARKS WITHINGTON CO.

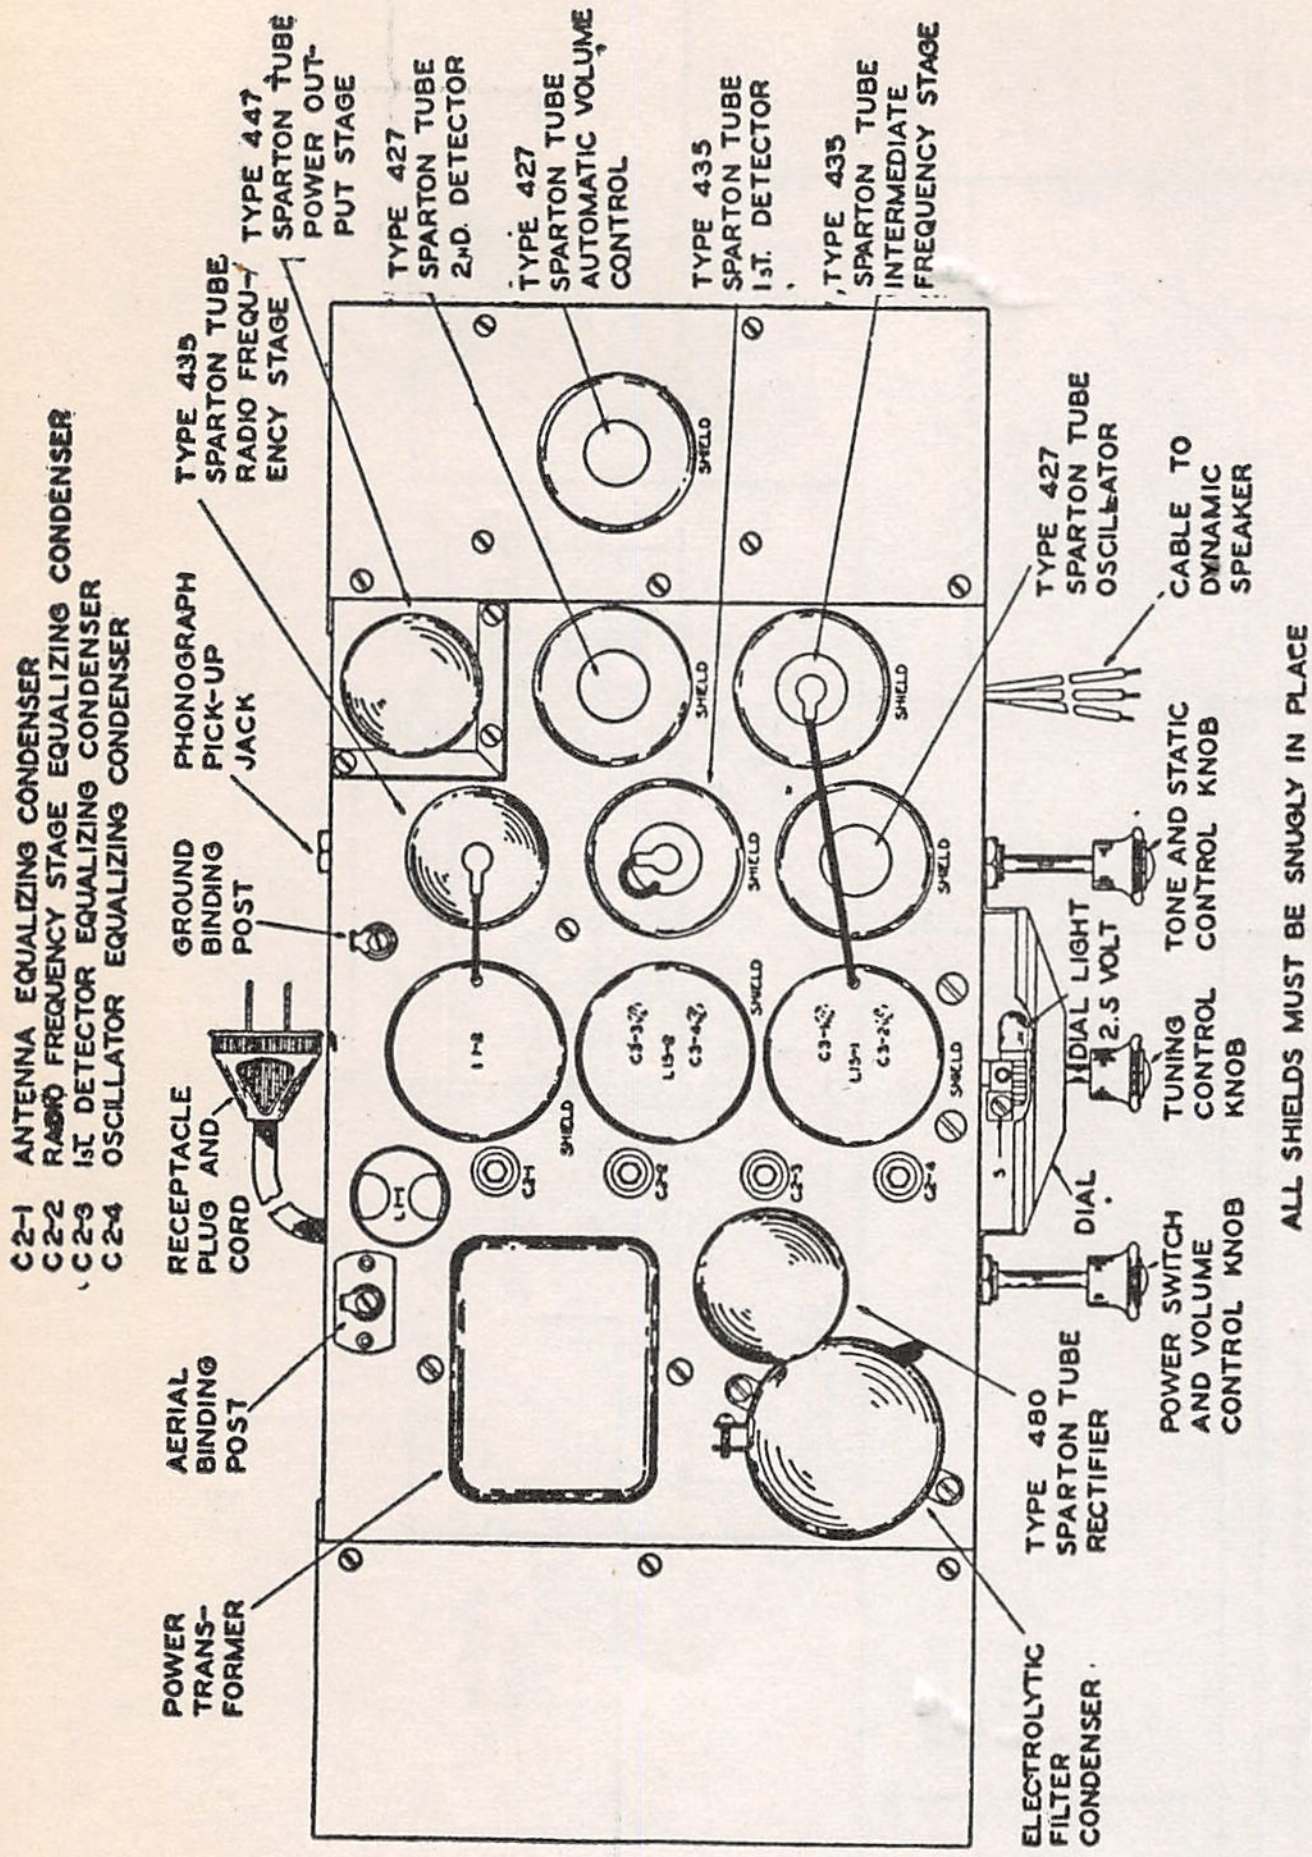
C 2-1 ANTENNA EQUALIZING CONDENSER
C 2-2 RADIO FREQUENCY STAGE EQUALIZING CONDENSER
C 2-3 1ST. DETECTOR EQUALIZING CONDENSER
C 2-4 OSCILLATOR EQUALIZING CONDENSER
POWER TRANSFORMER
AERIAL BINDING POST
RECEPTACLE PLUG AND CORD
GROUND BINDING POST
PHONOGRAPH PICK-UP JACK
TYPE 435 SPARTON TUBE RADIO FREQUENCY STAGE
TYPE 447 SPARTON TUBE POWER OUTPUT STAGE
TYPE 427 SPARTON TUBE 2ND. DETECTOR
TYPE 427 SPARTON TUBE AUTOMATIC VOLUME CONTROL
TYPE 435 SPARTON TUBE 1ST. DETECTOR
TYPE 435 SPARTON TUBE INTERMEDIATE FREQUENCY STAGE
TYPE 427 SPARTON TUBE OSCILLATOR
CABLE TO DYNAMIC SPEAKER
TONE AND STATIC CONTROL KNOB
DIAL LIGHT 2.5 VOLT
TUNING CONTROL KNOB
DIAL
POWER SWITCH AND VOLUME CONTROL KNOB
TYPE 480 SPARTON TUBE RECTIFIER
ELECTROLYTIC FILTER CONDENSER
SHIELD
L1-1
L1-2
L15-1
L15-2
C3-1
C3-2
C3-3
C3-4
C2-1
C2-2
C2-3
C2-4
ALL SHIELDS MUST BE SNUGLY IN PLACE

TOP VIEW

L1-1 First R. F. Tuning Coil
L1-2 Second R. F. Tuning Coil
L15-1 First I. F. Transformer (1st. Det. to I. F. Stage)
L15-2 Second I. F. Transformer (I. F. to 2nd. Det. Stage)
C3-1 I. F. Stage First Adjustable Condenser
C3-2 I. F. Stage Second Adjustable Condenser
C3-3 I. F. Stage Third Adjustable Condenser
C3-4 I. F. Stage Fourth Adjustable Condenser

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage. Compensator 115-130—Position of Volume Control Full

		OPERATING VOLTAGES				
Tube	Location	Heater or Filament	Plate	Control Grid—	Screen Grid+	Plate Current Mills.
435	1st R. F.	2.2 - 2.5	155 - 185	2 - 3	70 - 100	3 - 6
435	1st Det.	2.2 - 2.5	150 - 180	§ 7 - 11	70 - 100	§ 1.8 - 3
435	1st I. F.	2.2 - 2.5	155 - 185	2 - 3	70 - 100	3 - 6
427	Oscillator	2.2 - 2.5	70 - 95	†	....	‡
427	2nd Det.	2.2 - 2.5	*100 - 135	8 - 14	....	4.0 - .7
427	A. V. C.	2.2 - 2.5	30 - 40	24	....	Zero
427	Power	2.2 - 2.5	220 - 260	15 - 18	230 - 270	30 - 36
480	Rectifier	4.2 - 5	320 - 370	....	....	40 - 55

* Use 300 volt scale.
§ Remove Oscillator tube.
† Tube generates own bias when oscillating.
‡ Test with plug in 2nd. Detector socket and tube in analyzer.

SPARKS WITHINGTON CO.

MODEL 15
Schematic

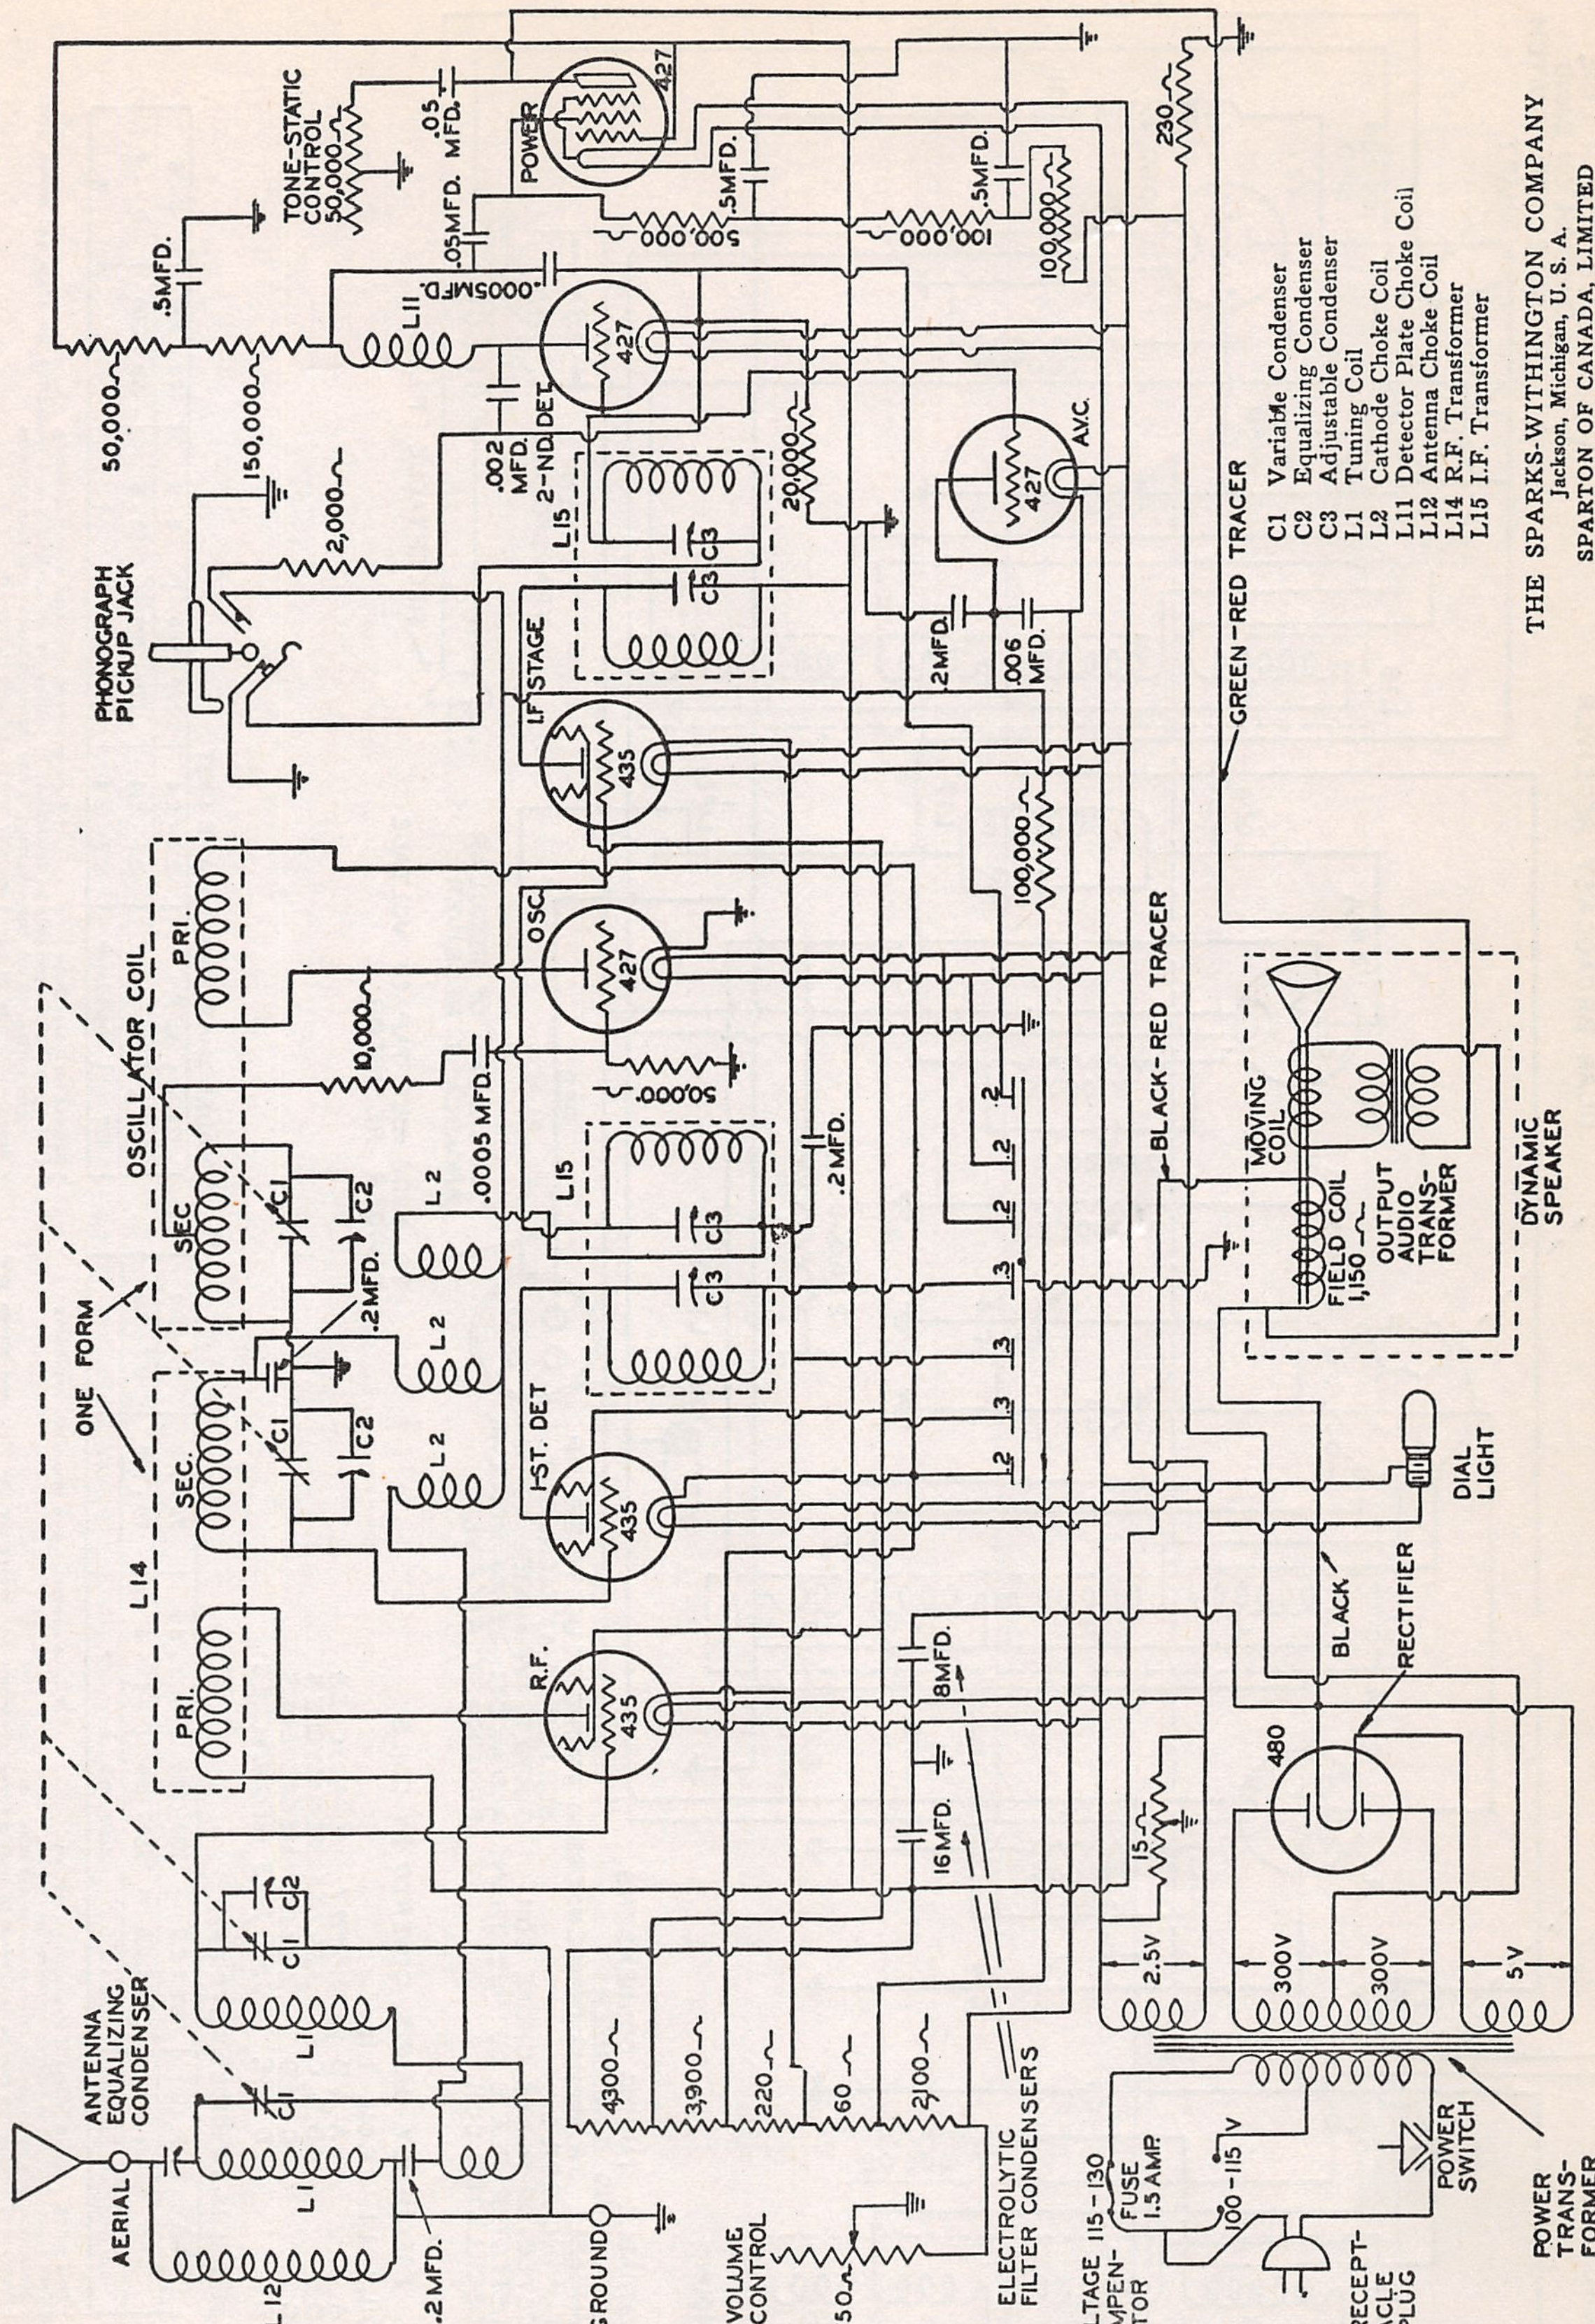
AERIAL
ANTENNA EQUALIZING CONDENSER
L 12
L 1
C1
C2
.2 MFD.
GROUND
VOLUME CONTROL
750
4300
3900
220
60
2100
ELECTROLYTIC FILTER CONDENSERS
16 MFD.
8 MFD.
15
VOLTAGE 115-130 COMPENSATOR
FUSE 1.5 AMP.
100-115 V
RECEPTACLE PLUG
POWER SWITCH
POWER TRANSFORMER
2.5V
300V
300V
5V
480
RECTIFIER
BLACK
DIAL LIGHT
R.F.
435
PRI.
SEC.
L 14
ONE FORM
L 2
.2 MFD.
1-ST. DET
OSCILLATOR COIL
.0005 MFD.
10,000
OSC
427
50,000
L 15
C3
.2 MFD.
1.2
1.3
BLACK-RED TRACER
MOVING COIL
FIELD COIL 1,150
OUTPUT AUDIO TRANSFORMER
DYNAMIC SPEAKER
I.F. STAGE
100,000
2 MFD.
.006 MFD.
A.V.C.
20,000
GREEN-RED TRACER
.002 MFD.
2-ND. DET
PHONOGRAPH PICKUP JACK
2,000
150,000
50,000
.5 MFD.
TONE-STATIC CONTROL 50,000
L 11
.0005 MFD.
.05 MFD.
500,000
.5 MFD.
POWER
100,000
.5 MFD.
230

C1 Variable Condenser
C2 Equalizing Condenser
C3 Adjustable Condenser
L1 Tuning Coil
L2 Cathode Choke Coil
L11 Detector Plate Choke Coil
L12 Antenna Choke Coil
L14 R.F. Transformer
L15 I.F. Transformer

THE SPARKS-WITHINGTON COMPANY
Jackson, Michigan, U. S. A.
SPARTON OF CANADA, LIMITED
London, Ontario, Canada

Sparton Model 15
Super-Heterodyne

IF PEAK 172.5 KC

MODEL 16-AW,26-AW
Short-Wave Receiver
Schematic,Voltage

SPARKS WITHINGTON CO.

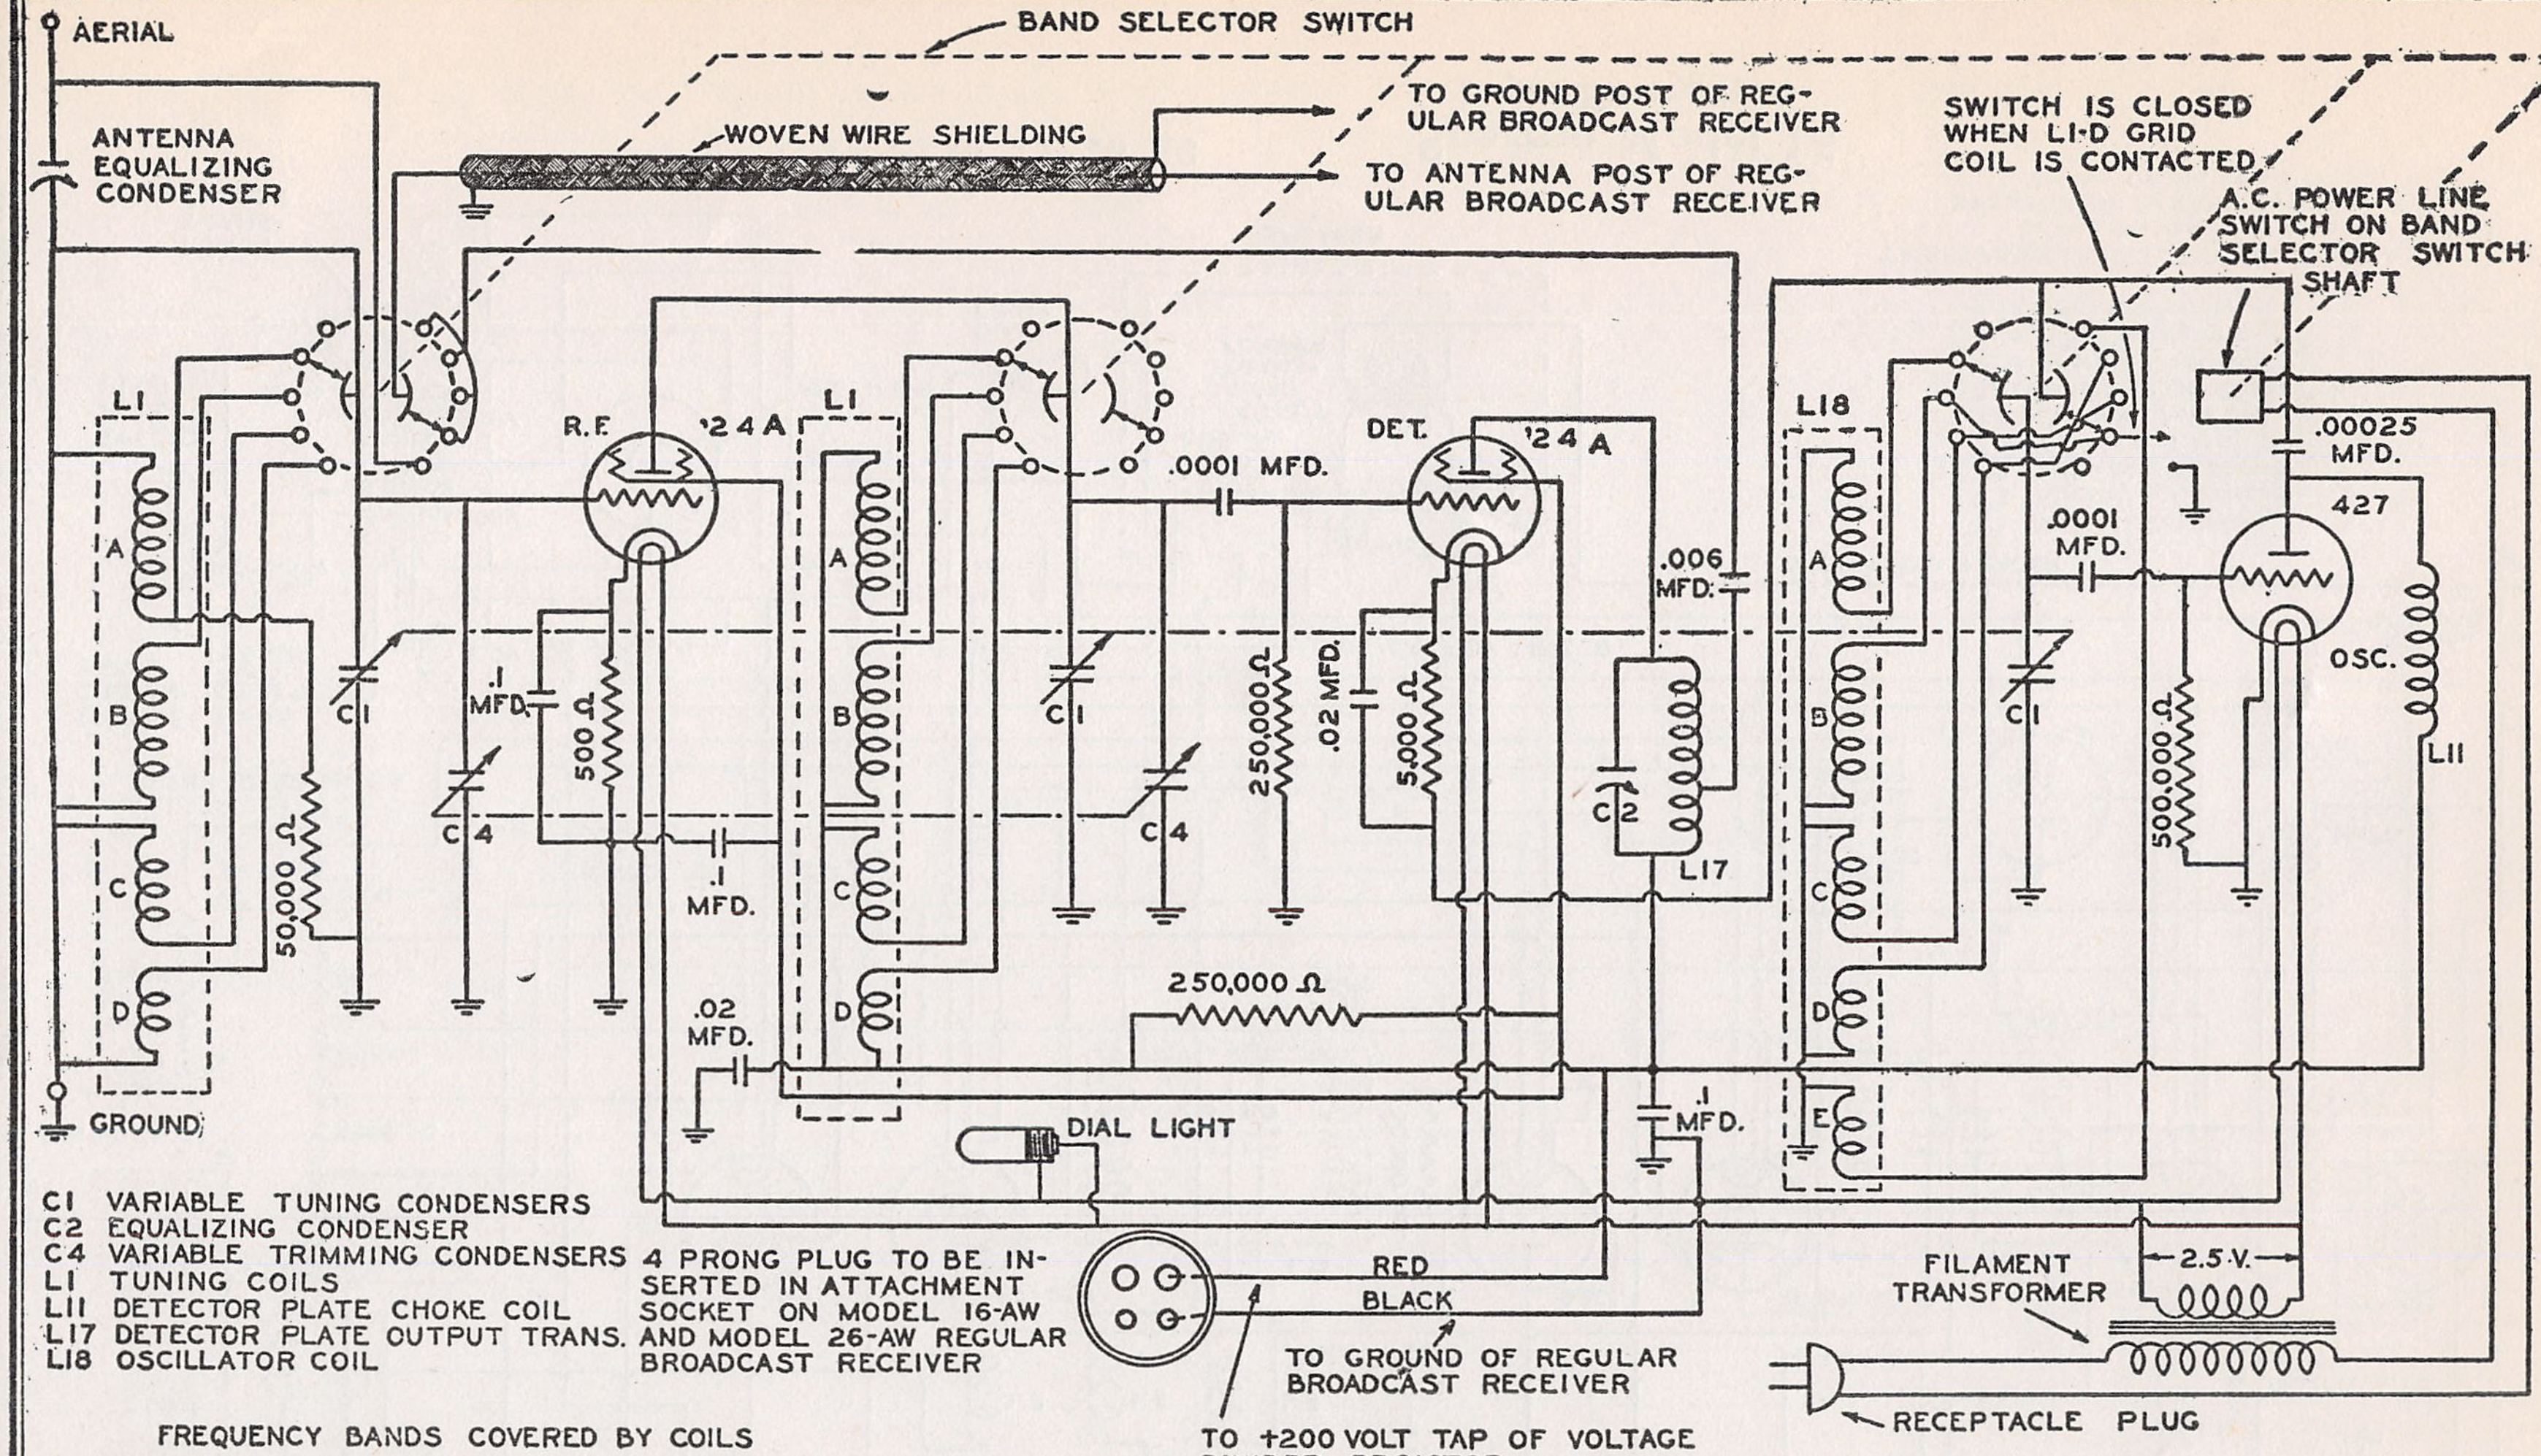
AERIAL
ANTENNA EQUALIZING CONDENSER
BAND SELECTOR SWITCH
WOVEN WIRE SHIELDING
TO GROUND POST OF REGULAR BROADCAST RECEIVER
TO ANTENNA POST OF REGULAR BROADCAST RECEIVER
SWITCH IS CLOSED WHEN L1-D GRID COIL IS CONTACTED
A.C. POWER LINE SWITCH ON BAND SELECTOR SWITCH SHAFT
L1
A
B
C
D
C1
C4
50,000 Ω
R.F.
'24 A
.1 MFD.
500 Ω
.02 MFD.
.0001 MFD.
250,000 Ω
.02 MFD.
5,000 Ω
DET.
'24 A
.006 MFD.
C2
L17
.1 MFD.
250,000 Ω
DIAL LIGHT
L18
E
.0001 MFD.
500,000 Ω
.00025 MFD.
427
OSC.
L11
GROUND
4 PRONG PLUG TO BE INSERTED IN ATTACHMENT SOCKET ON MODEL 16-AW AND MODEL 26-AW REGULAR BROADCAST RECEIVER
RED
BLACK
TO GROUND OF REGULAR BROADCAST RECEIVER
TO +200 VOLT TAP OF VOLTAGE DIVIDER RESISTOR
FILAMENT TRANSFORMER
2.5 V.
RECEPTACLE PLUG

C1 VARIABLE TUNING CONDENSERS
C2 EQUALIZING CONDENSER
C4 VARIABLE TRIMMING CONDENSERS
L1 TUNING COILS
L11 DETECTOR PLATE CHOKE COIL
L17 DETECTOR PLATE OUTPUT TRANS.
L18 OSCILLATOR COIL

FREQUENCY BANDS COVERED BY COILS

COILS L1	COIL L18	
A	A & B	1.5-3.7 MEGACYCLES
B	B & C	3.2-7.55 MEGACYCLES
C	C & D	7.2-15.5 MEGACYCLES
D	D & E	15.2-25.5 MEGACYCLES

MODEL 16-AW SHORT-WAVE UNIT

'24-A	R. F.	2.2 - 2.5	230 - 280	2 - 3	70 - 100	3.0 - 6.0
'24-A	Detector	2.2 - 2.5	230 - 280	‡5 - 6	70 - 100	0.2 1.0
427	Oscillator	2.2 - 2.5	230 - 280	†	- - ---	x

* True value. Amount is less if measured on test kit.

¶ True value. Amount is more if measured on test kit.

x Measure with plug in second detector socket and tube in test kit

‡ Presence of voltage can only be determined by testing circuit continuity and measuring the plate and screen grid current of this tube. Voltage is five thousand times current in amperes.

† Tube generates own bias when oscillating

MODEL 26-AW SHORT-WAVE UNIT

'24-A	R. F.	2.2 - 2.4	170 - 200	2 - 3	70 - 100	3 - 6
'24-A	Detector	2.2 - 2.4	170 - 200	¶5 - 6	70 - 100	0.2 - 1
427	Oscillator	2.2 - 2.4	170 - 200	†	--------	x

* Remove oscillator Tube

† Tube generates own bias when oscillating.

¶ Presence of voltage can only be determined by testing circuit continuity and measuring the plate and screen grid grid current of this tube. Voltage is five thousand times current in amperes

x Measure with plug in second detector socket and tube in test kit

‡ Test kit reading. True voltage is 125 volts.

§ Meter reading on 150 volt scale. True voltage 50-75. If lower scale voltmeter is used expect lower voltage

MODEL 16, 16-AW
Broadcast Receiver
Schematic, Voltage

SPARKS WITHINGTON CO.

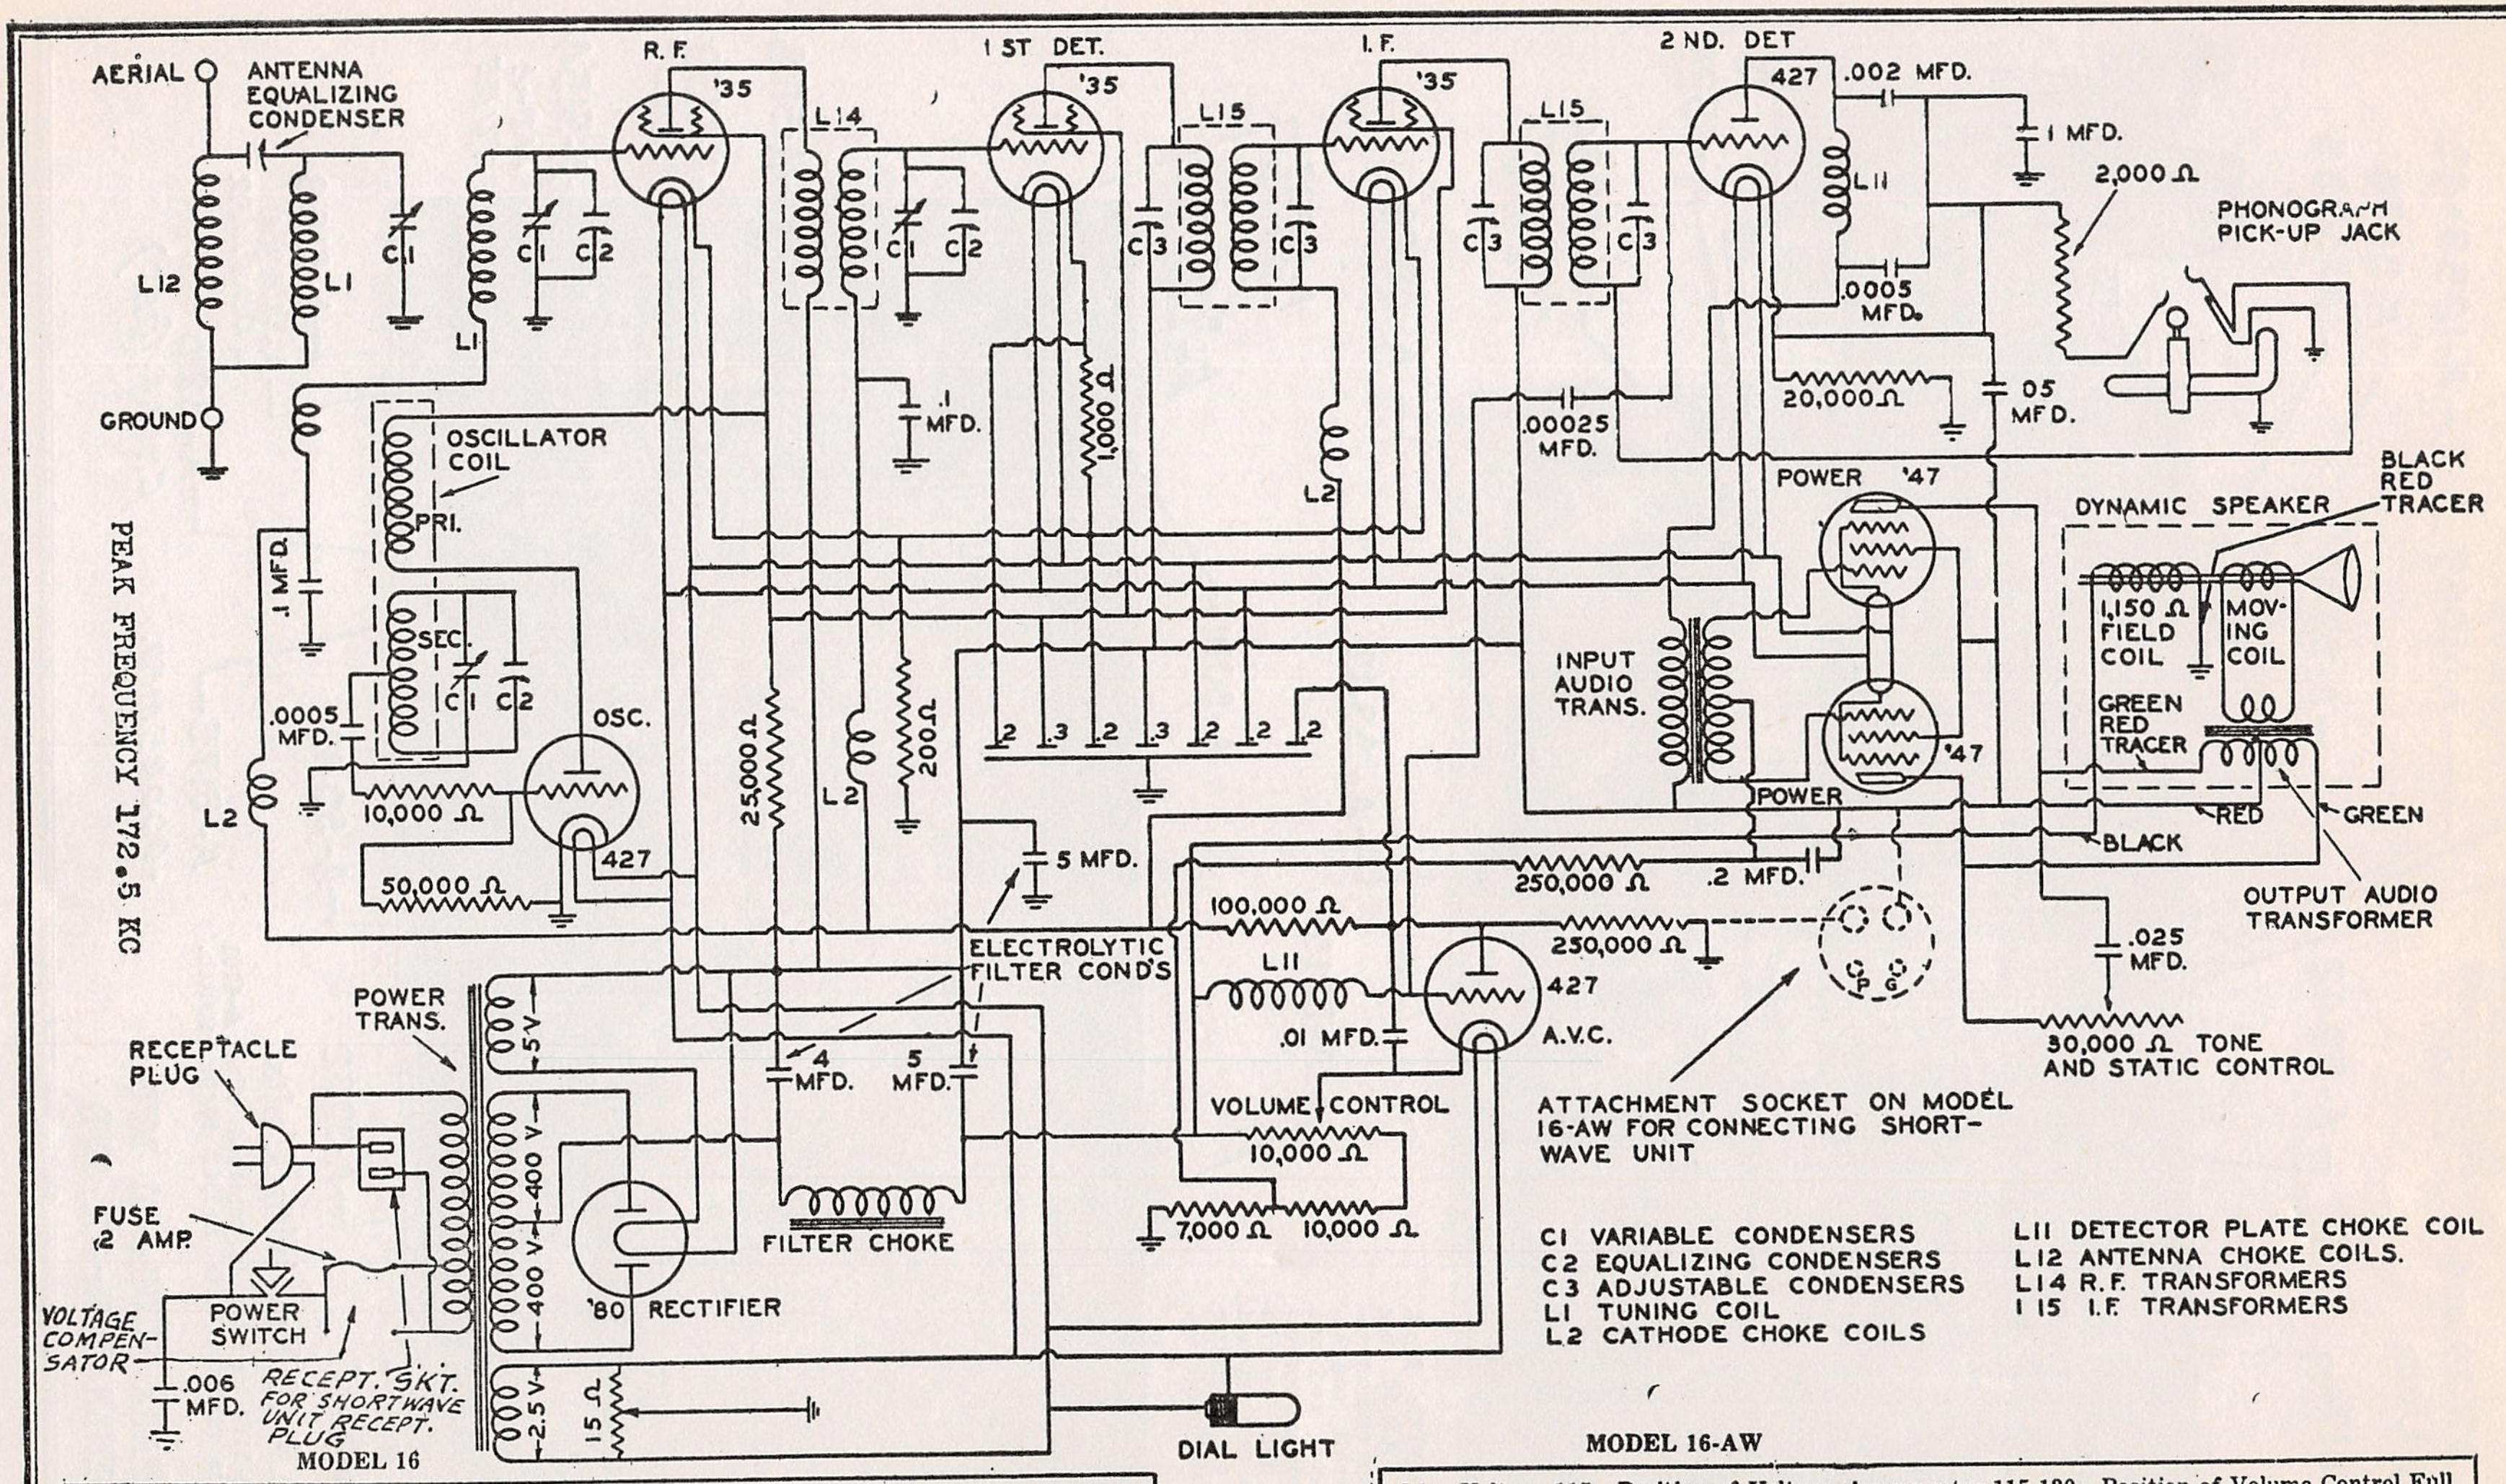
AERIAL
ANTENNA EQUALIZING CONDENSER
GROUND
L12
L1
C1
C2
C3
R.F. '35
1 ST DET. '35
I.F. '35
2 ND. DET 427
L14
L15
L11
L2
.002 MFD.
1 MFD.
2,000 Ω
PHONOGRAPH PICK-UP JACK
.0005 MFD.
20,000 Ω
.05 MFD.
.00025 MFD.
.1 MFD.
1,000 Ω
OSCILLATOR COIL
PRI.
SEC.
OSC. 427
.1 MFD.
.0005 MFD.
10,000 Ω
50,000 Ω
25,000 Ω
200 Ω
5 MFD.
ELECTROLYTIC FILTER COND'S
4 MFD.
5 MFD.
POWER '47
INPUT AUDIO TRANS.
DYNAMIC SPEAKER
BLACK RED TRACER
1,150 Ω FIELD COIL
MOVING COIL
GREEN RED TRACER
RED
GREEN
BLACK
OUTPUT AUDIO TRANSFORMER
250,000 Ω
.2 MFD.
100,000 Ω
250,000 Ω
.01 MFD.
427 A.V.C.
.025 MFD.
30,000 Ω TONE AND STATIC CONTROL
VOLUME CONTROL 10,000 Ω
7,000 Ω
10,000 Ω
ATTACHMENT SOCKET ON MODEL 16-AW FOR CONNECTING SHORT-WAVE UNIT
POWER TRANS.
5 V
400 V
400 V
2.5 V
15 Ω
FILTER CHOKE
'80 RECTIFIER
DIAL LIGHT
RECEPTACLE PLUG
FUSE 2 AMP.
POWER SWITCH
VOLTAGE COMPENSATOR
.006 MFD.
RECEPT. SKT. FOR SHORTWAVE UNIT RECEPT. PLUG
MODEL 16
PEAK FREQUENCY 172.5 KC

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
C3 ADJUSTABLE CONDENSERS
L1 TUNING COIL
L2 CATHODE CHOKE COILS

L11 DETECTOR PLATE CHOKE COIL
L12 ANTENNA CHOKE COILS.
L14 R.F. TRANSFORMERS
I 15 I.F. TRANSFORMERS

MODEL 16

Line Voltage 115—Position of Voltage Compensator 115-130—Position of Volume Control Full

Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current M. A.
'35	R. F.	2.2 - 2.5	255 - 285	2 - 3	80 - 100	3.5 - 6.0
'35	1st Det.	2.2 - 2.5	245 - 275	*4 - 6	80 - 100	2.7 - 3.1
'35	I. F.	2.2 - 2.5	255 - 285	2 - 3	80 - 100	3.5 - 6.0
427	Oscillator	2.2 - 2.5	70 - 100	†	--------	¶3.0 - 5.0
427	2nd Det.	2.2 - 2.5	235 - 265	18 - 23	--------	0.8 - 1.2
427	A. V. C.	2.2 - 2.5	25 - 35	27 - 35	--------	Zero
'47	Power	2.2 - 2.5	245 - 275	17 - 20	255 - 285	20 - 28
'47	Power	2.2 - 2.5	245 - 275	17 - 20	255 - 285	20 - 28
'80	Rectifier	4.4 - 5.0	360 - 410	--------	--------	35 - 45

MODEL 16-AW

Line Voltage 115—Position of Voltage Compensator 115-130—Position of Volume Control Full

Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current M. A.
'35	R. F.	2.2 - 2.5	250 - 280	2 - 3	80 - 100	3.5 - 6.0
'35	1st Det.	2.2 - 2.5	245 - 275	*4 - 6	80 - 100	2.7 - 3.1
'35	I. F.	2.2 - 2.5	250 - 280	2 - 3	80 - 100	3.5 - 6.0
427	Oscillator	2.2 - 2.5	70 - 100	†	--------	¶3.0 - 5.0
427	2nd Det.	2.2 - 2.5	230 - 260	18 - 23	--------	0.8 - 1.2
427	A. V. C.	2.2 - 2.5	25 - 35	27 - 35	--------	Zero
'47	Power	2.2 - 2.5	240 - 275	17 - 20	250 - 280	20 - 28
'47	Power	2.2 - 2.5	240 - 275	17 - 20	250 - 280	20 - 28
'80	Rectifier	4.4 - 5.0	360 - 410	--------	--------	38 - 48

MODEL AR-19
MODEL AR-50
Chassis

SPARKS WITHINGTON CO.

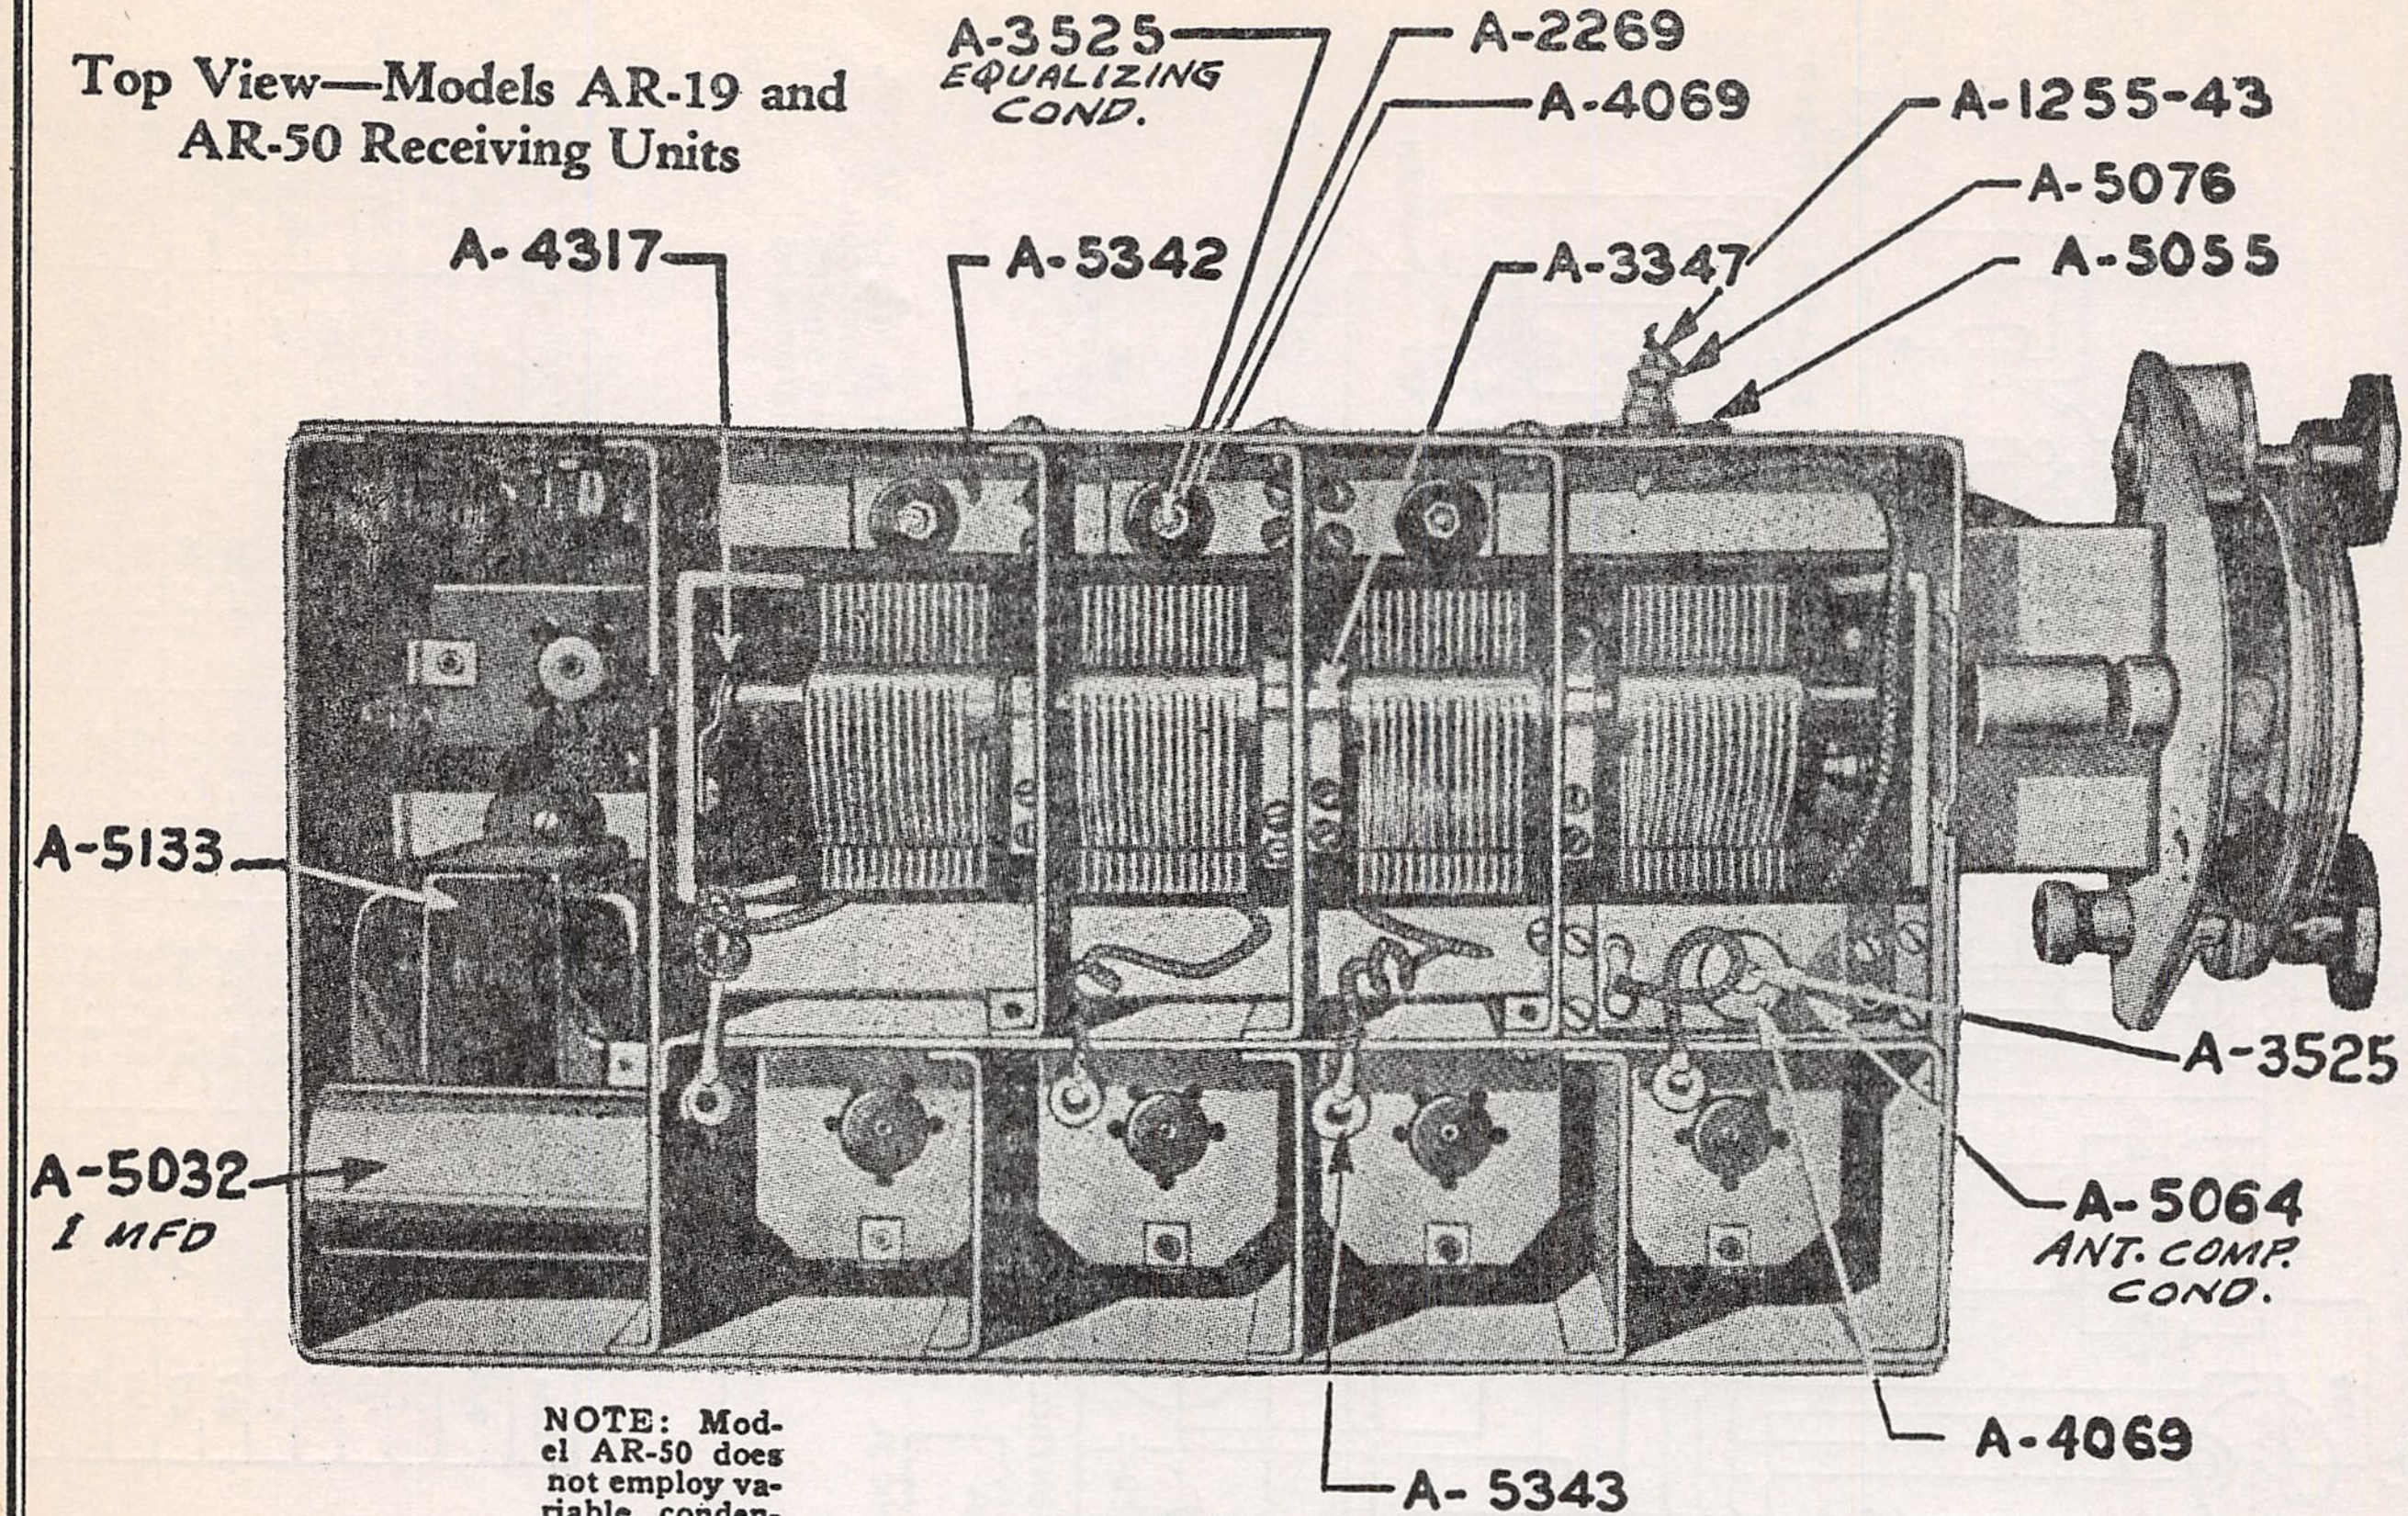
A-3525
EQUALIZING COND.
A-2269
A-4069
A-1255-43
A-5076
A-5055
A-4317
A-5342
A-3347
A-5133
A-3525
A-5032
1 MFD
A-5064
ANT. COMP. COND.
A-4069
A-5343

Top View—Models AR-19 and AR-50 Receiving Units

NOTE: Model AR-50 does not employ variable condensers, and the volume control and switch is mounted on steering column.

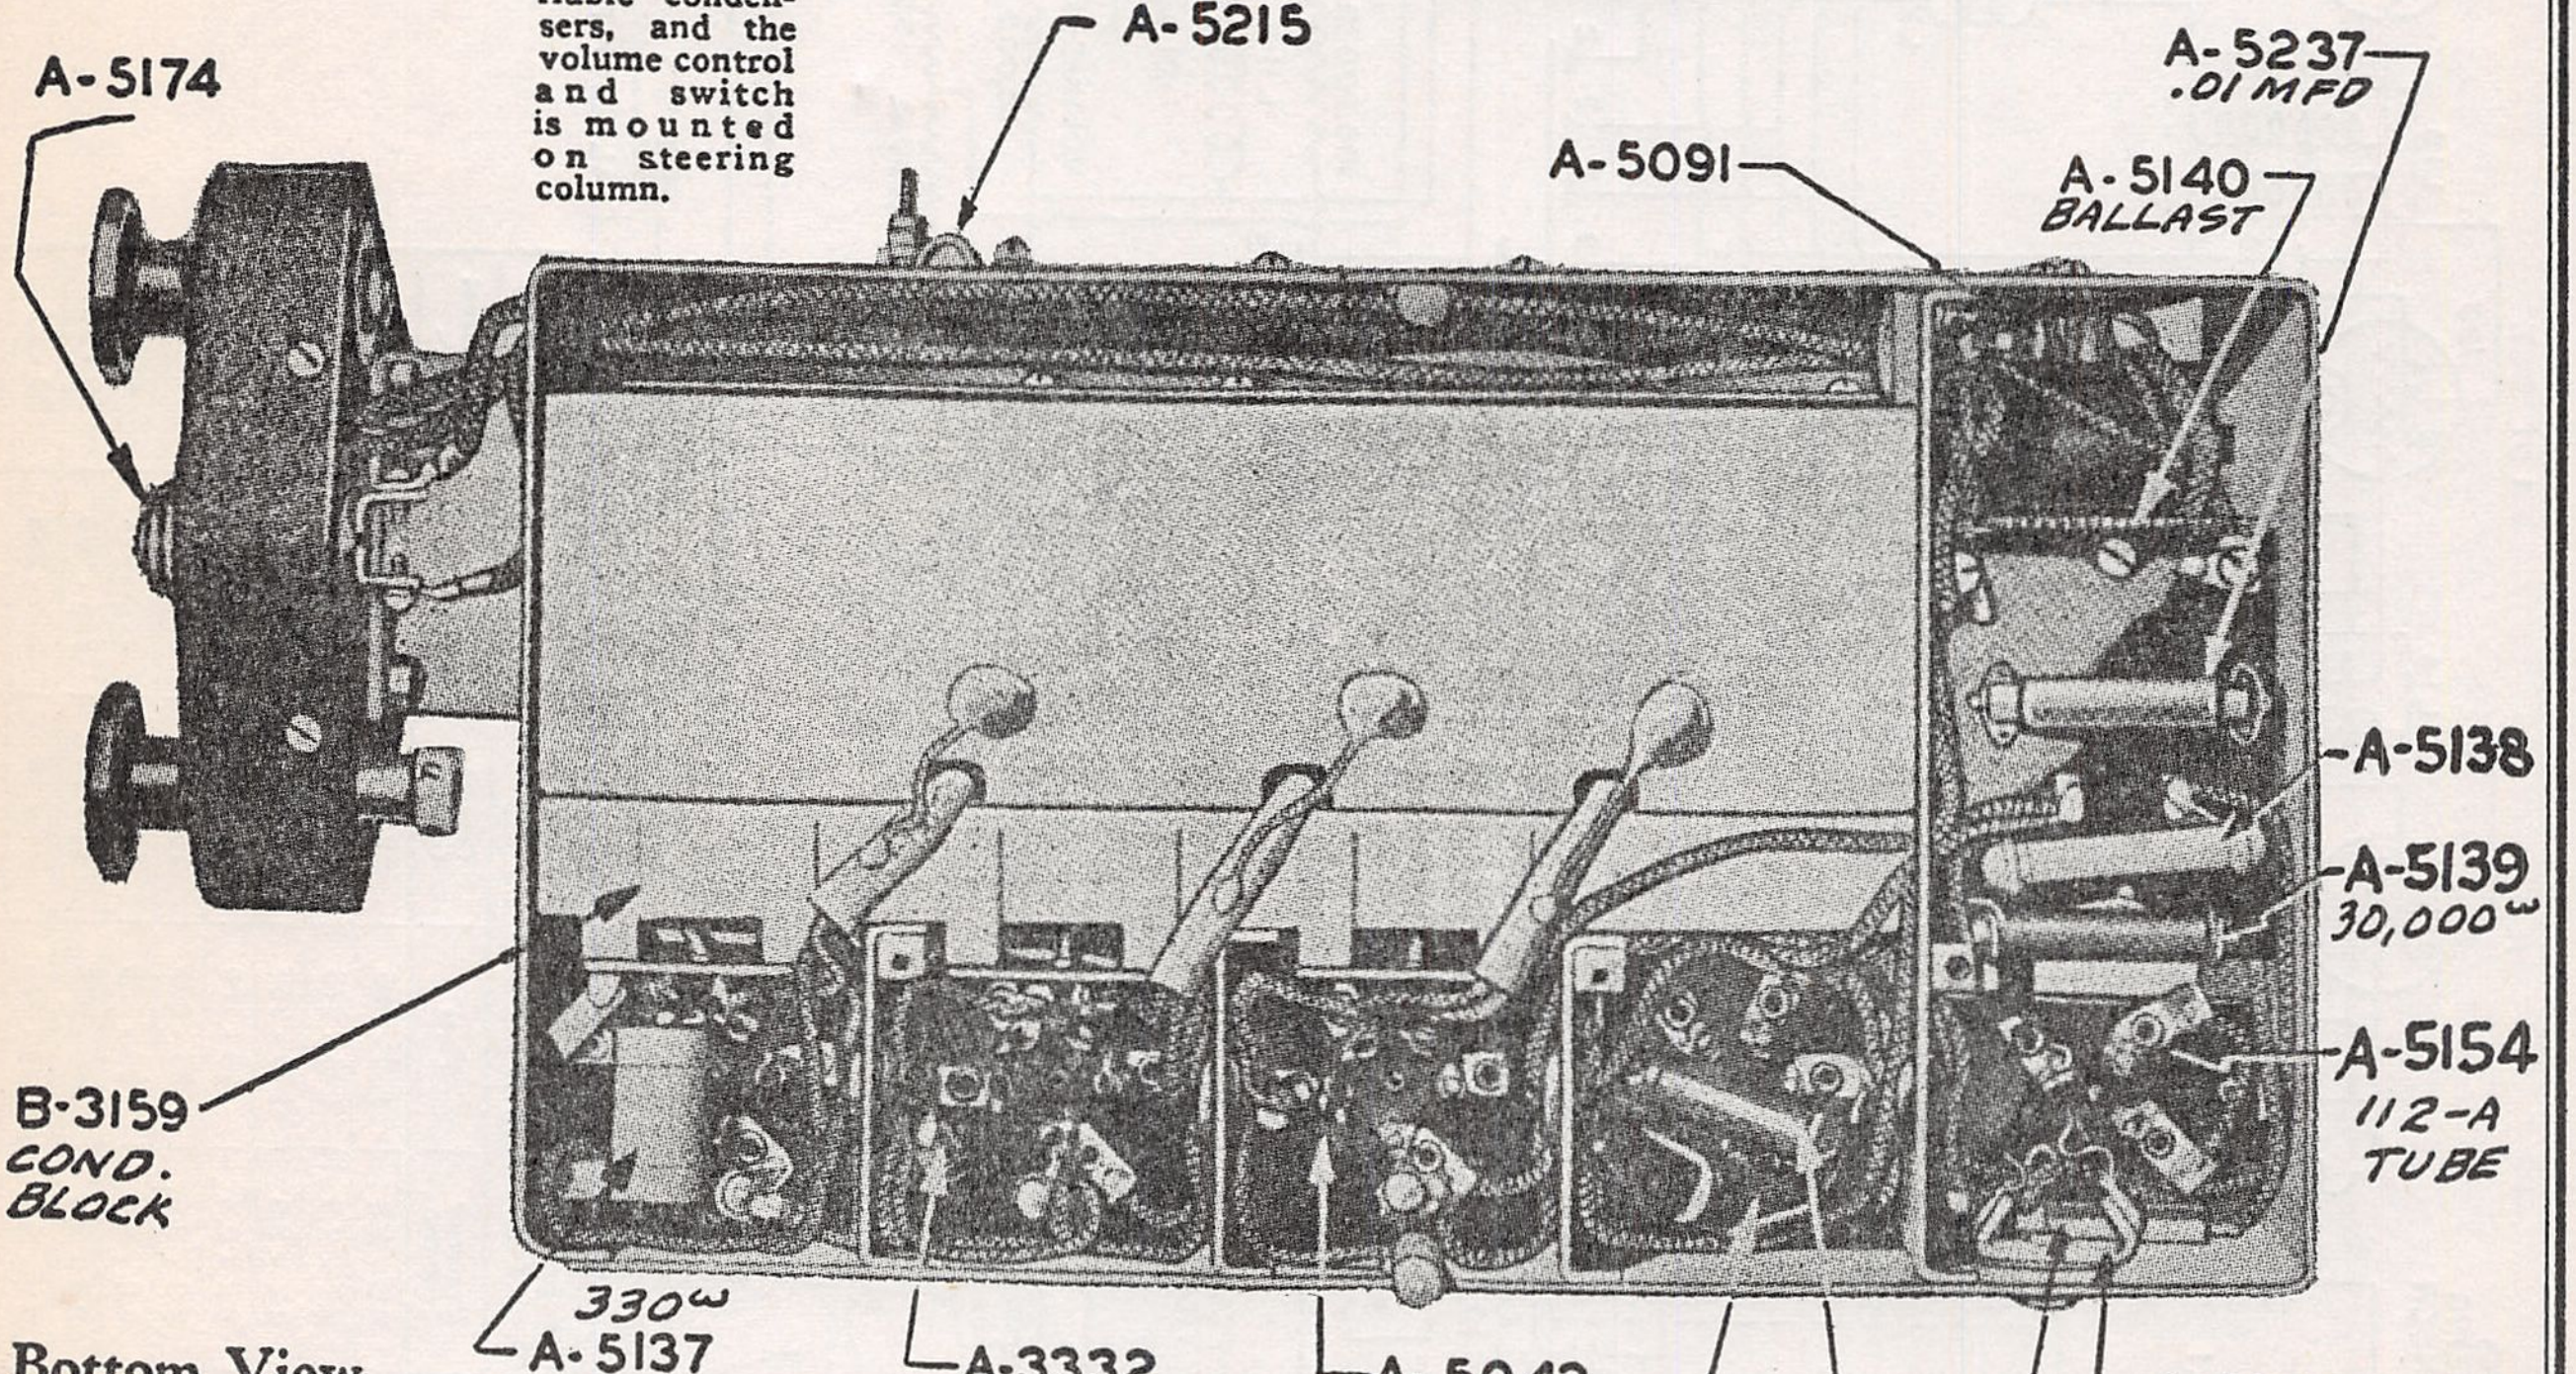
A-5215
A-5174
A-5091
A-5237
.01 MFD
A-5140
BALLAST
A-5138
A-5139
30,000 ω
A-5154
112-A TUBE
B-3159
COND. BLOCK
330 ω
A-5137
A-3332
A-5043
A-5158
A-4434
.006 MFD.
A-5175
.00025 MFD.
A-5210
CHOKE (DET.)

Bottom View
Models AR-19 and AR-50 Receiving Units

NOTE: In Model AR-50, A-5139 resistor is replaced with A-4261 resistor; A-5174 key switch is replaced with A-5903 toggle switch.

PART #A5217 FOR SPARK PLUG=.01 MFD
PART #A5238 FOR GENERATOR=.01 MFD

MODEL AR-19
MODEL AR-50
Schematic

SPARKS WITHINGTON CO.

MODEL A.R.-19

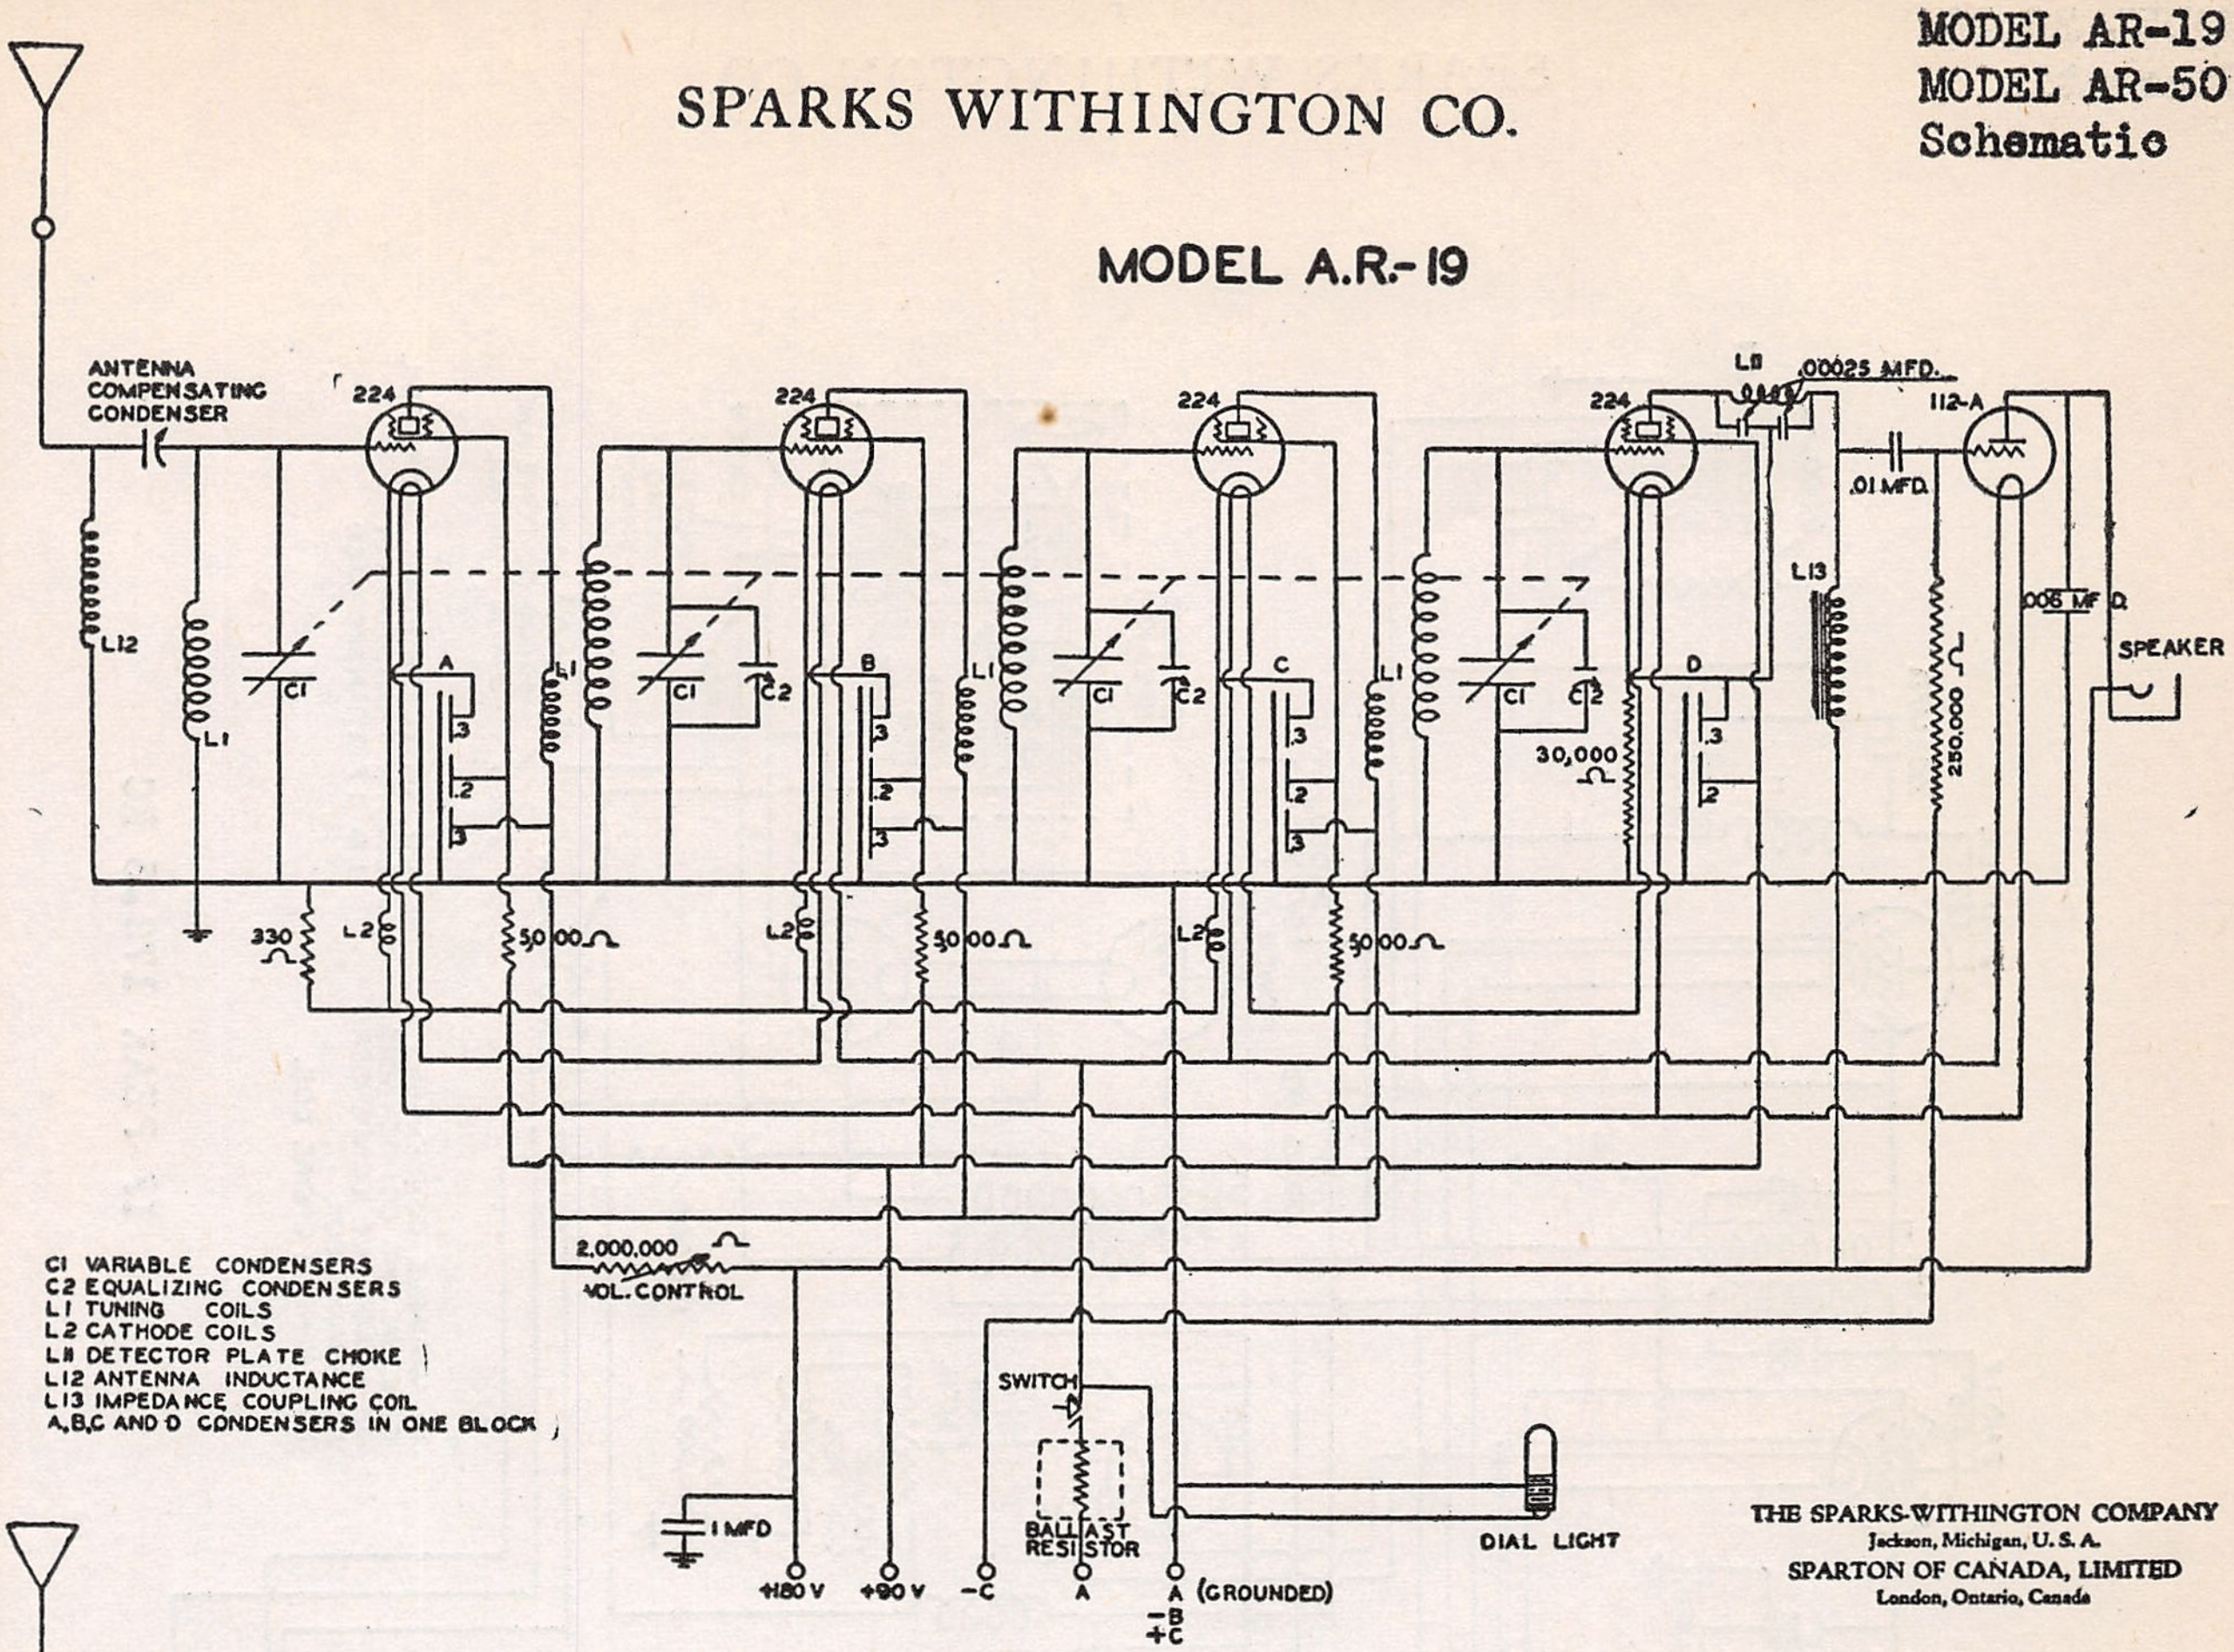
ANTENNA COMPENSATING CONDENSER
224
224
224
224
L11
.00025 MFD.
112-A
.01 MFD.
L13
.006 MFD.
SPEAKER
L12
L1
C1
C2
A
B
C
D
3
2
30,000 Ω
250,000 Ω
330 Ω
L2
50,00 Ω
2,000,000 Ω
VOL. CONTROL
SWITCH
BALLAST RESISTOR
1 MFD
DIAL LIGHT
+180 V
+90 V
-C
A
A (GROUNDED)
-B
+C

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COILS
L11 DETECTOR PLATE CHOKE
L12 ANTENNA INDUCTANCE
L13 IMPEDANCE COUPLING COIL
A, B, C AND D CONDENSERS IN ONE BLOCK

THE SPARKS-WITHINGTON COMPANY
Jackson, Michigan, U. S. A.
SPARTON OF CANADA, LIMITED
London, Ontario, Canada

MODEL AR-50

POLICE AUTOMOBILE RADIO

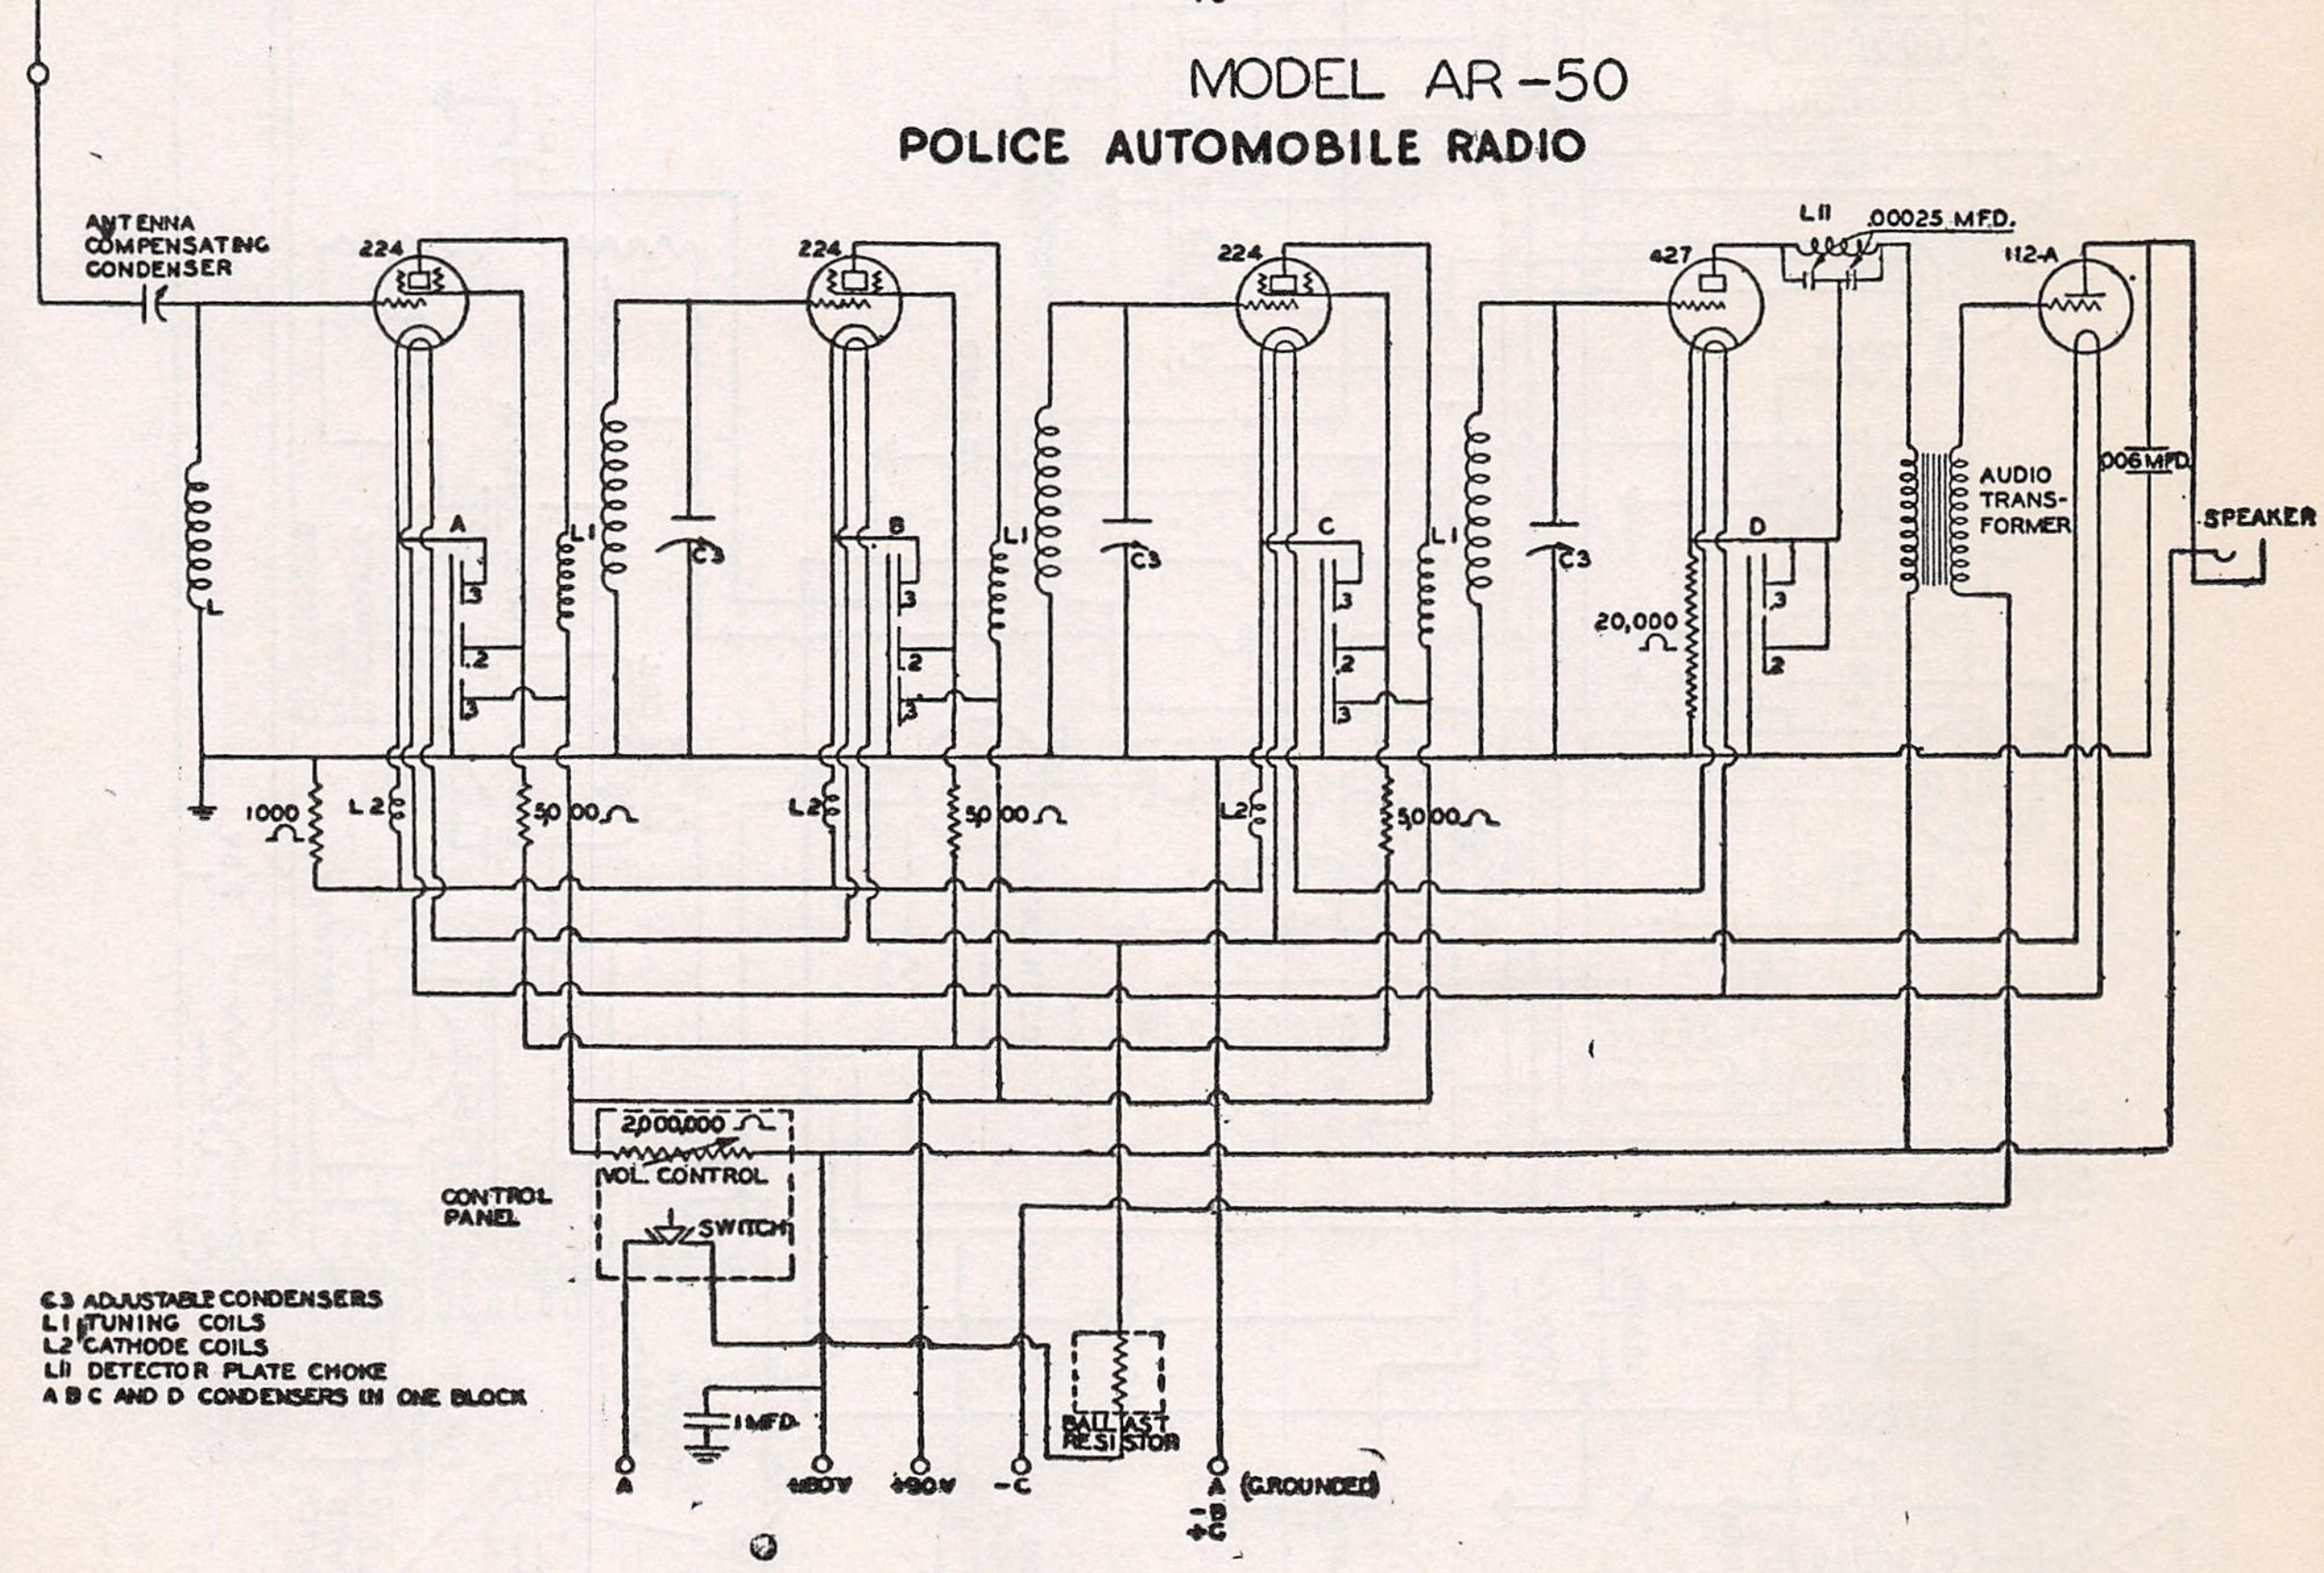
ANTENNA COMPENSATING CONDENSER
224
224
224
427
L11
.00025 MFD.
112-A
.006 MFD.
AUDIO TRANSFORMER
SPEAKER
L
L1
C3
A
B
C
D
3
2
20,000 Ω
1000 Ω
L2
50,00 Ω
2,000,000 Ω
VOL. CONTROL
SWITCH
CONTROL PANEL
1 MFD.
BALLAST RESISTOR
A
+180V
+90V
-C
A (GROUNDED)
-B
+C

C3 ADJUSTABLE CONDENSERS
L1 TUNING COILS
L2 CATHODE COILS
L11 DETECTOR PLATE CHOKE
A B C AND D CONDENSERS IN ONE BLOCK

MODEL 25,26
Schematic

SPARKS WITHINGTON CO.

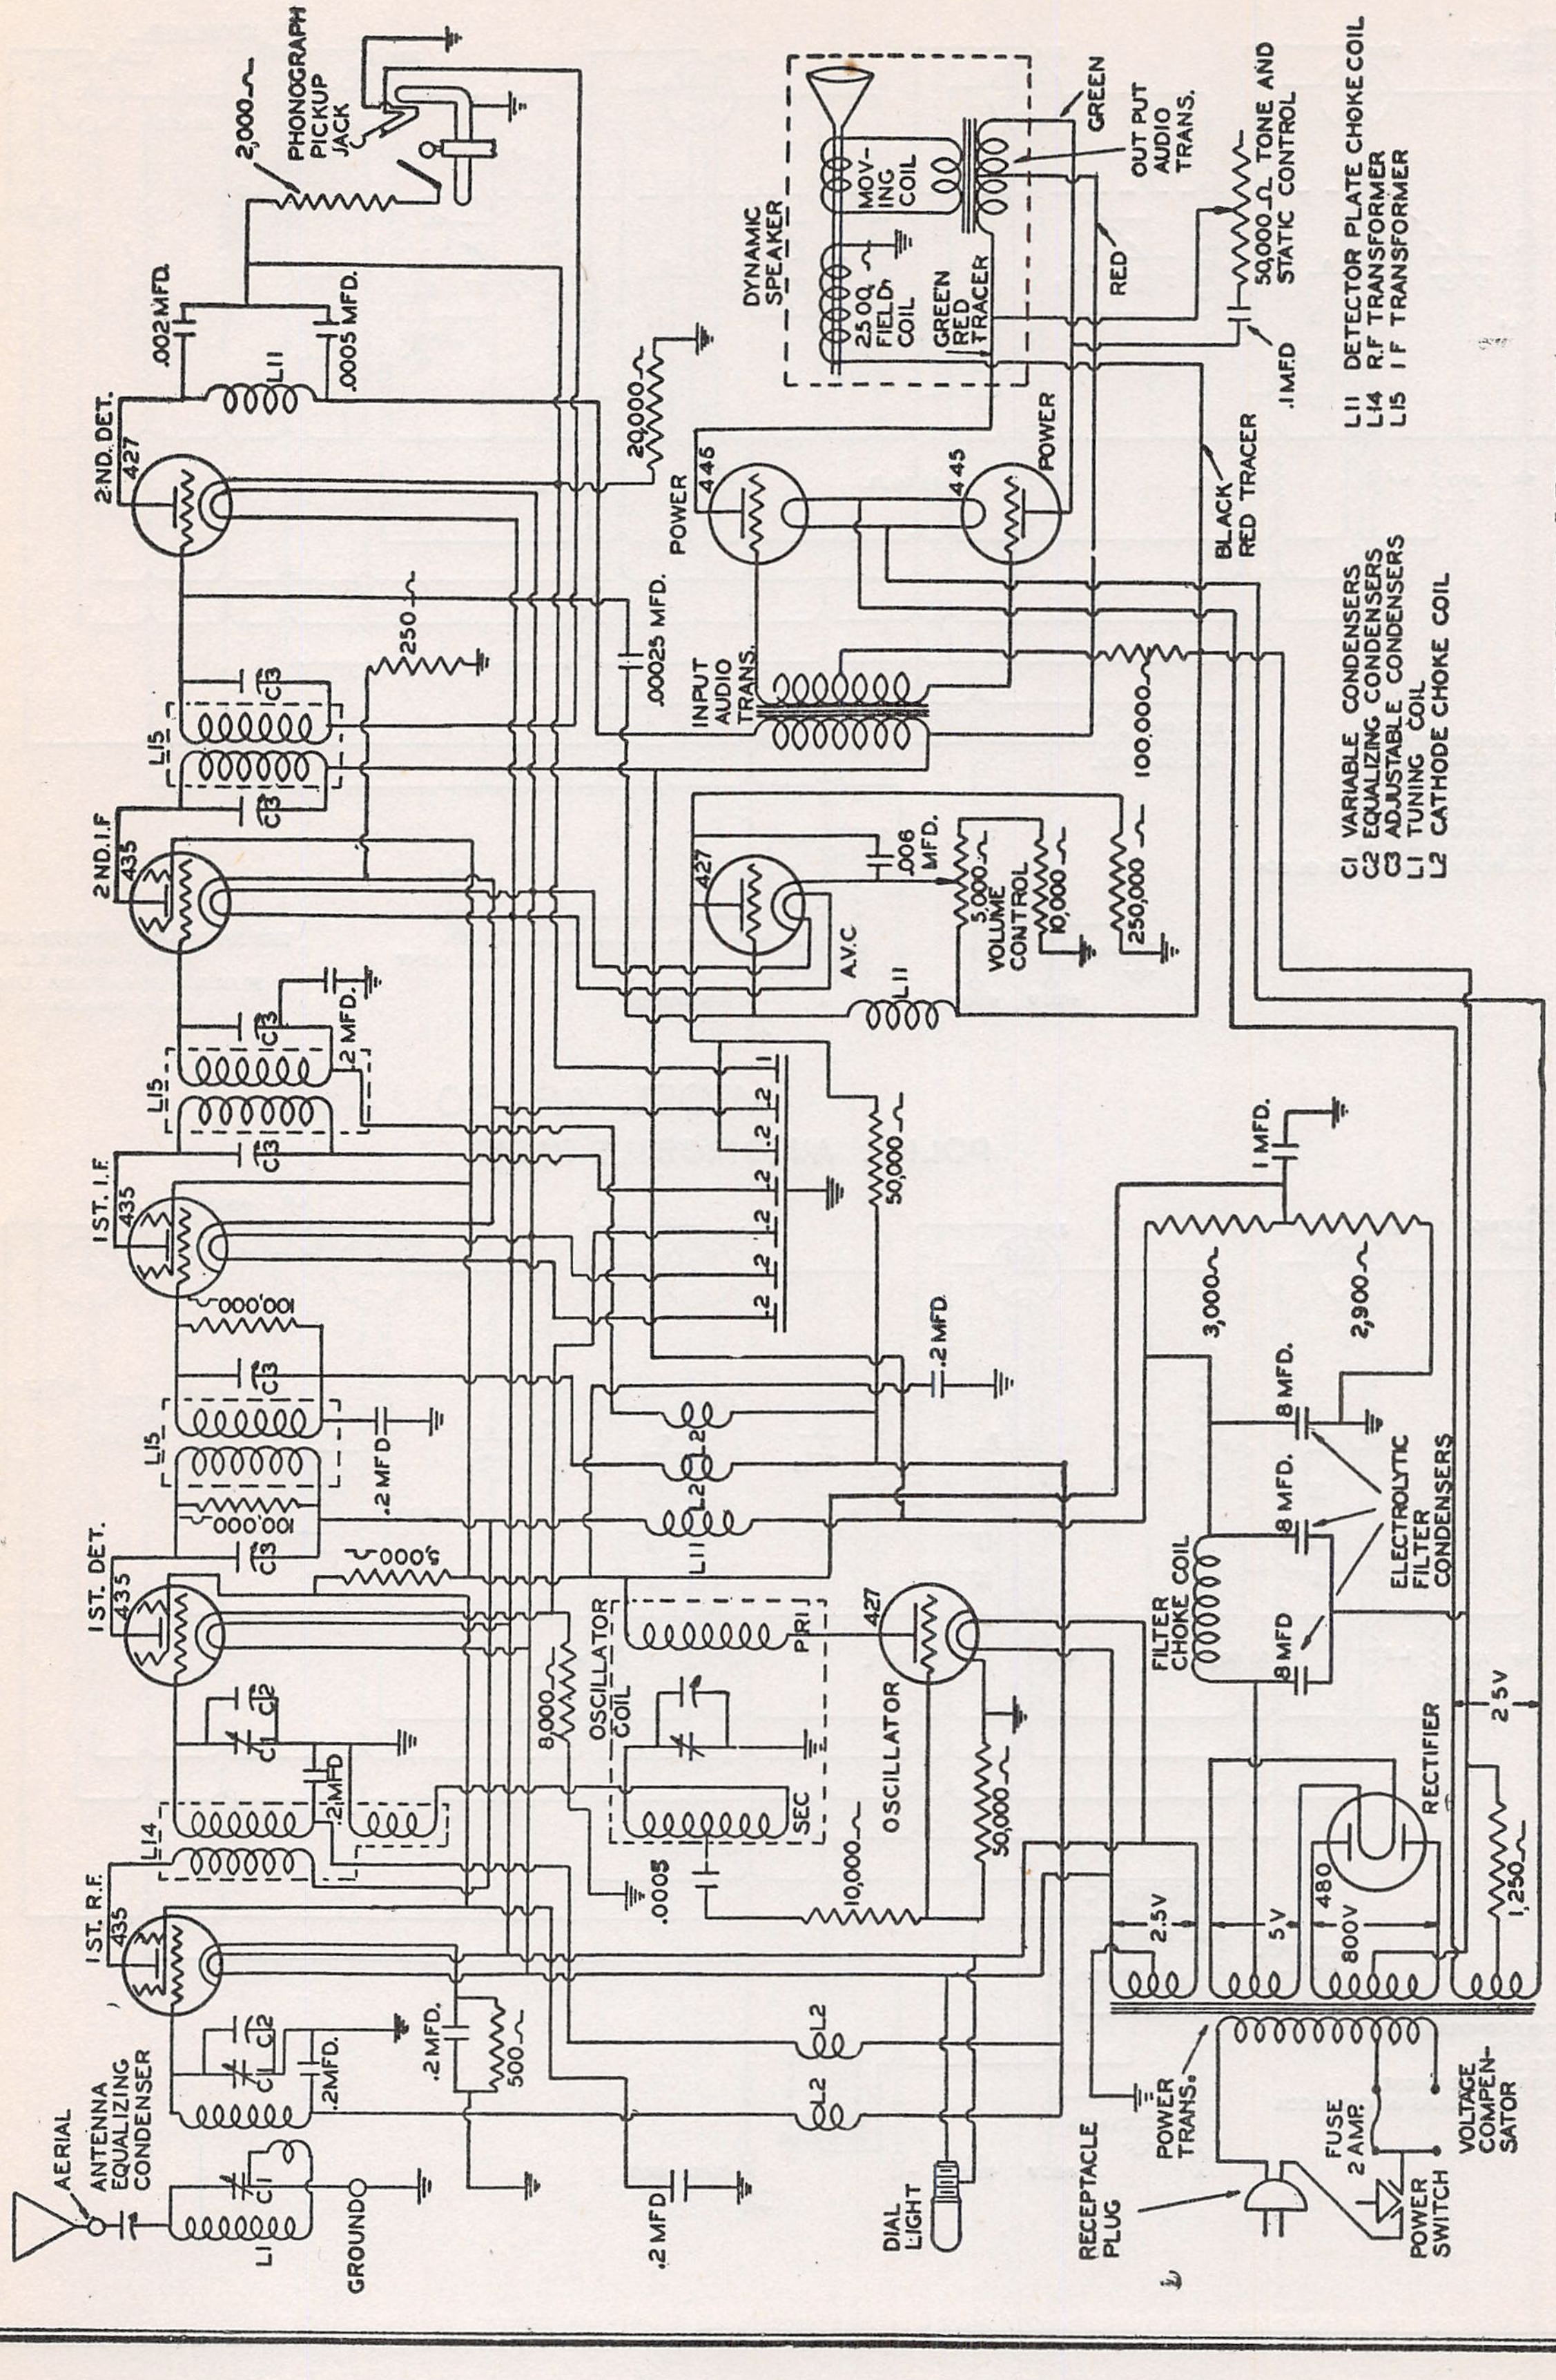
AERIAL
ANTENNA EQUALIZING CONDENSER
L1
C1
GROUND
C2
.2MFD.
.2 MFD.
500~
1ST. R.F. 435
L14
C1
C2
.2MFD
1ST. DET. 435
5,000~
C3
100,000~
L15
.2 MFD
1ST. I.F. 435
.2 MFD.
2ND. I.F. 435
250~
2ND. DET. 427
L11
.002 MFD.
.0005 MFD.
2,000~
PHONOGRAPH PICKUP JACK
20,000~
.00025 MFD.
POWER 445
POWER 445
INPUT AUDIO TRANS.
DYNAMIC SPEAKER
MOVING COIL
2500 FIELD COIL
GREEN RED TRACER
GREEN
OUT PUT AUDIO TRANS.
RED
50,000 ~ TONE AND STATIC CONTROL
.1MFD
BLACK RED TRACER
100,000~
427
A.V.C
.006 MFD.
5,000~ VOLUME CONTROL
10,000~
250,000~
.2
50,000~
.2 MFD
L2
8,000~
OSCILLATOR COIL
PRI
SEC
427
OSCILLATOR
.0005
10,000~
50,000~
1 MFD.
3,000~
2,900~
8 MFD.
8 MFD.
8 MFD
ELECTROLYTIC FILTER CONDENSERS
FILTER CHOKE COIL
RECTIFIER
2.5V
2.5V
5V
480
800V
1,250~
.2 MFD
DIAL LIGHT
RECEPTACLE PLUG
POWER TRANS.
FUSE 2 AMP
POWER SWITCH
VOLTAGE COMPENSATOR
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
C3 ADJUSTABLE CONDENSERS
L1 TUNING COIL
L2 CATHODE CHOKE COIL
L11 DETECTOR PLATE CHOKE COIL
L14 R.F TRANSFORMER
L15 I F TRANSFORMER

IF PEAK 172.5 KC

SPARKS WITHINGTON CO

MODEL 25,26
Chassis, Voltage

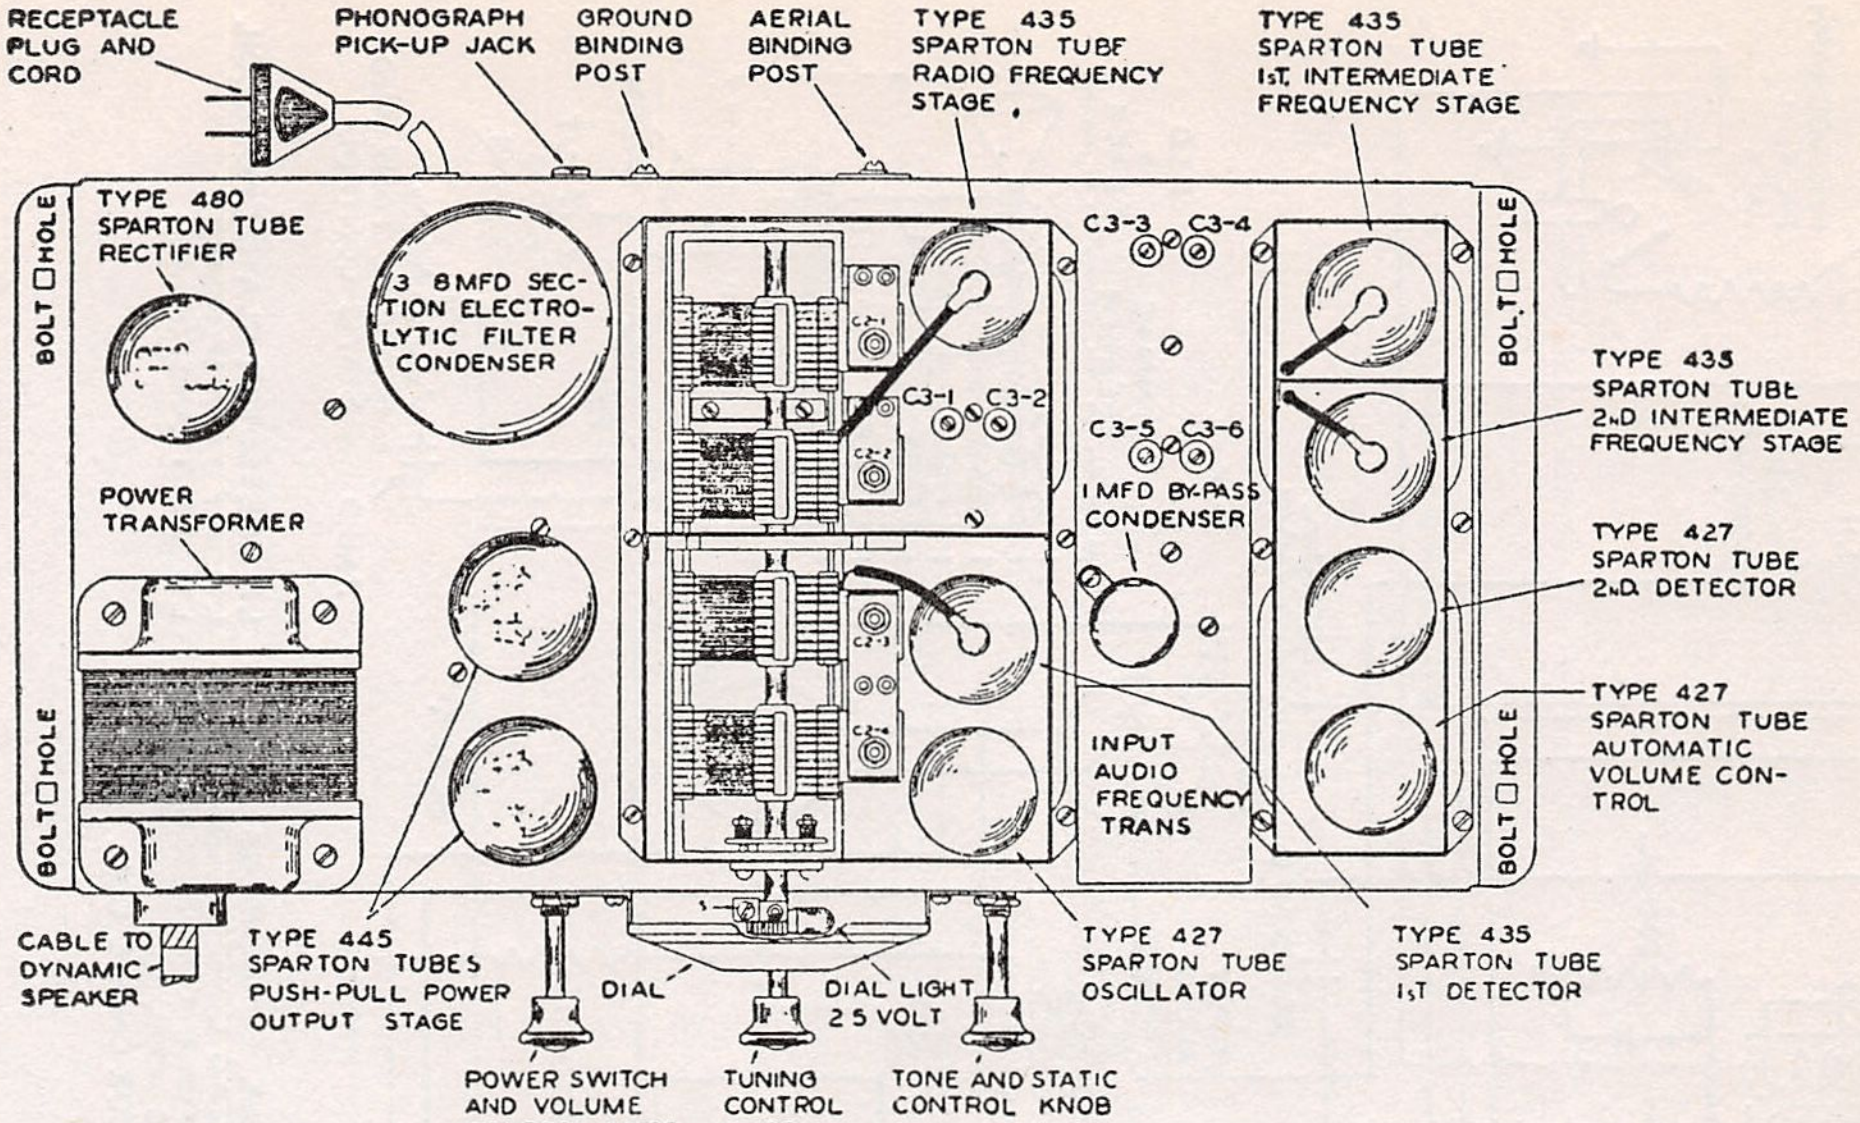
RECEPTACLE PLUG AND CORD
PHONOGRAPH PICK-UP JACK
GROUND BINDING POST
AERIAL BINDING POST
TYPE 435 SPARTON TUBE RADIO FREQUENCY STAGE
TYPE 435 SPARTON TUBE 1ST. INTERMEDIATE FREQUENCY STAGE
BOLT ☐ HOLE
TYPE 480 SPARTON TUBE RECTIFIER
3 8MFD SECTION ELECTROLYTIC FILTER CONDENSER
C3-3
C3-4
C3-1
C3-2
C3-5
C3-6
C2-1
C2-2
C2-3
C2-4
1MFD BY-PASS CONDENSER
TYPE 435 SPARTON TUBE 2ND INTERMEDIATE FREQUENCY STAGE
POWER TRANSFORMER
TYPE 427 SPARTON TUBE 2ND DETECTOR
TYPE 427 SPARTON TUBE AUTOMATIC VOLUME CONTROL
INPUT AUDIO FREQUENCY TRANS
CABLE TO DYNAMIC SPEAKER
TYPE 445 SPARTON TUBES PUSH-PULL POWER OUTPUT STAGE
DIAL
DIAL LIGHT 2.5 VOLT
TYPE 427 SPARTON TUBE OSCILLATOR
TYPE 435 SPARTON TUBE 1ST DETECTOR
POWER SWITCH AND VOLUME CONTROL KNOB
TUNING CONTROL KNOB
TONE AND STATIC CONTROL KNOB

C2-1 ANTENNA EQUALIZING CONDENSER
C2-2 RADIO FREQUENCY STAGE EQUALIZING CONDENSER
C2-3 1ST DETECTOR EQUALIZING CONDENSER
C2-4 OSCILLATOR EQUALIZING CONDENSER

C3-1 I. F. Stage First Adjustable Condenser
C3-2 I. F. Stage Second Adjustable Condenser
C3-3 I. F. Stage Third Adjustable Condenser
C3-4 I. F. Stage Fourth Adjustable Condenser
C3-5 I. F. Stage Fifth Adjustable Condenser
C3-6 I. F. Stage Sixth Adjustable Condenser

TOP VIEW OF MODEL 25 AND 26 CHASSIS

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

		OPERATING VOLTAGES				
Tube	Location	Heater or Filament	Plate	Control Grid—	Screen Grid+	Plate Current Mills.
435	1st R. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	1st Det.	2.2 - 2.5	180 - 220	*6.4 - 14	80 - 100	*.8 - 1.8
435	1st I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	2nd I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
427	Oscillator	2.2 - 2.5	80 - 100	†	....	‡
427	2nd Det.	2.2 - 2.5	170 - 205	14 - 20	....	.7 - 1.0
427	A. V. C.	2.2 - 2.5	§	30 - 50	....	Zero
445	Power	2.2 - 2.5	225 - 270	‖30 - 45	....	20 - 30
445	Power	2.2 - 2.5	225 - 270	‖30 - 45	....	20 - 30
480	Rectifier	4.2 - 5	360 - 440	....	....	48 - 58

* Remove oscillator tube.

† Tube generates own bias when oscillating.

‖ Meter reading use 150 volt scale—true voltage 50-75—if lower scale voltmeter is used expect lower voltages.

§ Test from grid prong to ground approx. 125 volts.

‡ Test with plug in 2nd. Detector socket and tube in Analyzer.

MODEL 26-AW
Circuit #2 (Revised)
Schematic

SPARKS WITHINGTON CO.

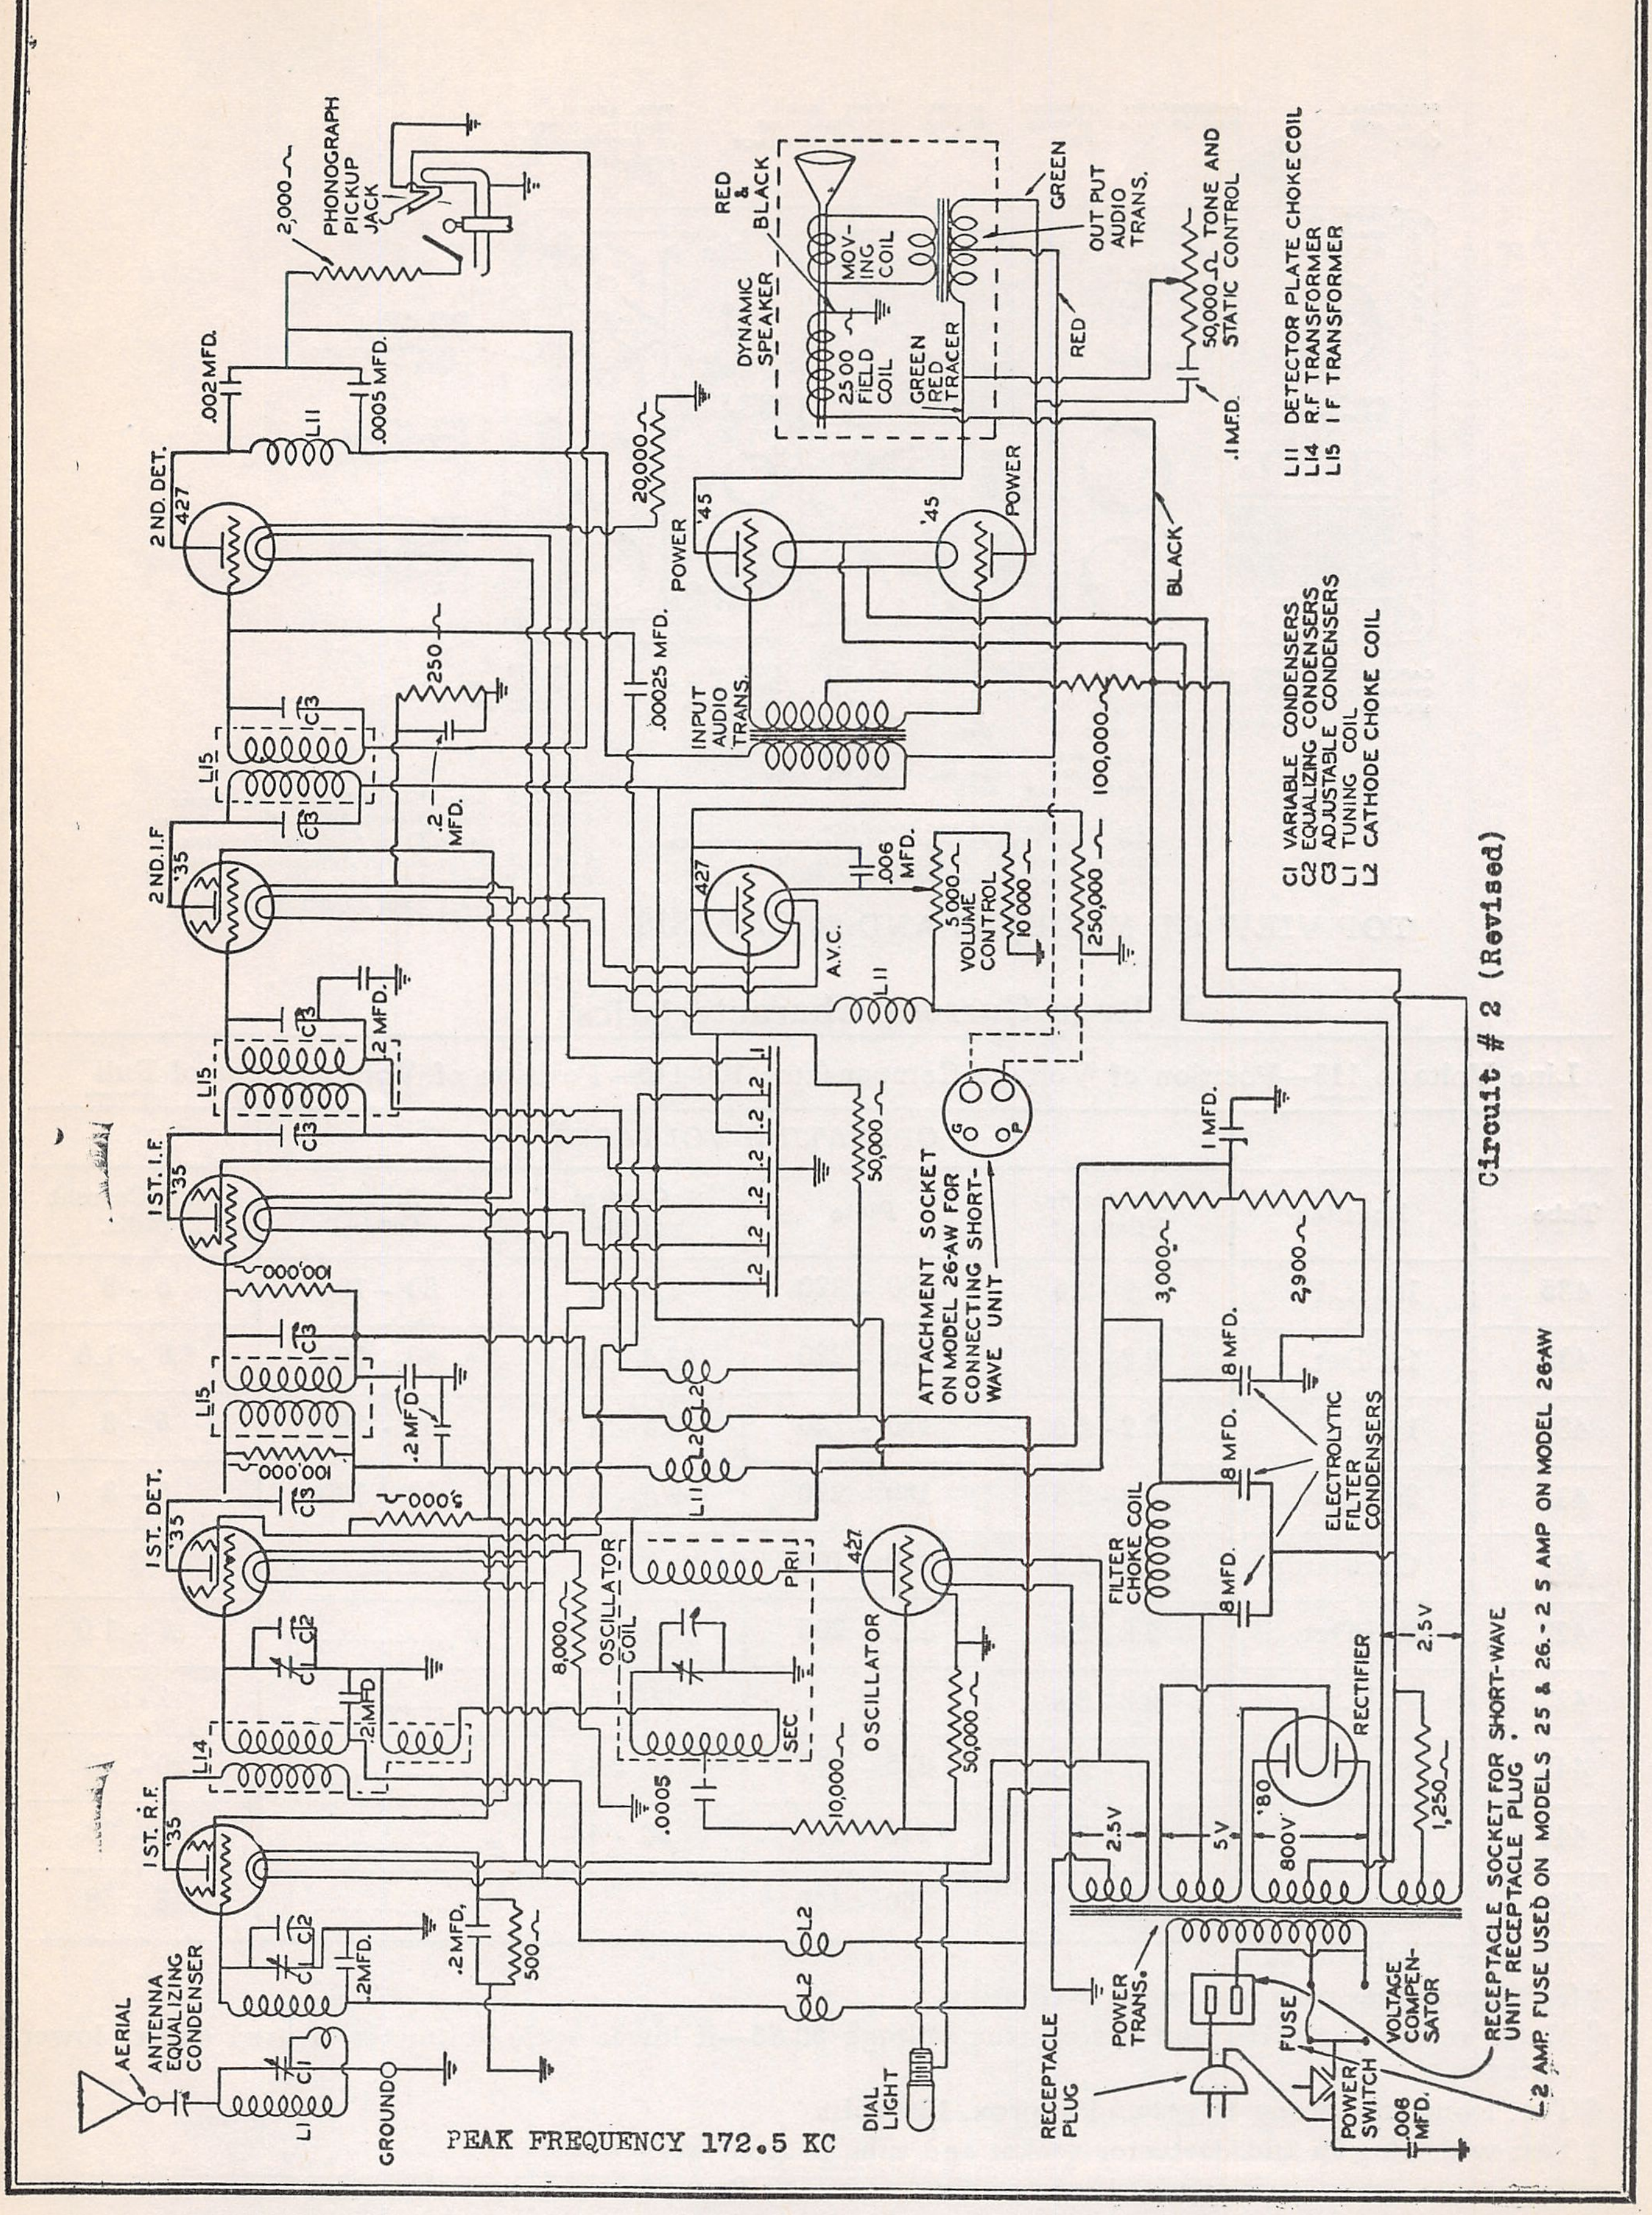
AERIAL
ANTENNA EQUALIZING CONDENSER
GROUND
L1
C1
C2
.2MFD.
1ST. R.F. '35
L14
.2MFD.
500
1ST. DET. '35
8,000
OSCILLATOR COIL
PRI
SEC
.0005
10,000
OSCILLATOR 427
50,000
L15
100,000
C3
.2 MFD
1ST. I.F. '35
2ND. I.F. '35
2ND. DET. 427
L11
.002 MFD.
.0005 MFD.
2,000
PHONOGRAPH PICKUP JACK
20,000
250
.00025 MFD.
INPUT AUDIO TRANS.
POWER '45
DYNAMIC SPEAKER
2500 FIELD COIL
MOVING COIL
RED & BLACK
GREEN RED TRACER
GREEN
RED
OUT PUT AUDIO TRANS.
50,000 Ω TONE AND STATIC CONTROL
.1 MFD.
BLACK
100,000
427
A.V.C.
.006 MFD.
5,000 VOLUME CONTROL
10,000
250,000
L11
L2
.2
50,000
ATTACHMENT SOCKET ON MODEL 26-AW FOR CONNECTING SHORT-WAVE UNIT
G
K
P
1 MFD.
3,000
2,900
8 MFD.
ELECTROLYTIC FILTER CONDENSERS
FILTER CHOKE COIL
RECTIFIER '80
2.5V
5V
800V
1,250
POWER TRANS.
DIAL LIGHT
RECEPTACLE PLUG
FUSE
POWER SWITCH
.006 MFD.
VOLTAGE COMPENSATOR
RECEPTACLE SOCKET FOR SHORT-WAVE UNIT RECEPTACLE PLUG

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
C3 ADJUSTABLE CONDENSERS
L1 TUNING COIL
L2 CATHODE CHOKE COIL

L11 DETECTOR PLATE CHOKE COIL
L14 R.F TRANSFORMER
L15 I F TRANSFORMER

2 AMP. FUSE USED ON MODELS 25 & 26.-2.5 AMP ON MODEL 26-AW

PEAK FREQUENCY 172.5 KC

Circuit # 2 (Revised)

SPARKS WITHINGTON CO.

MODEL 30
Chassis
Voltage

SPARTON MODEL 30
ENSEMBLE

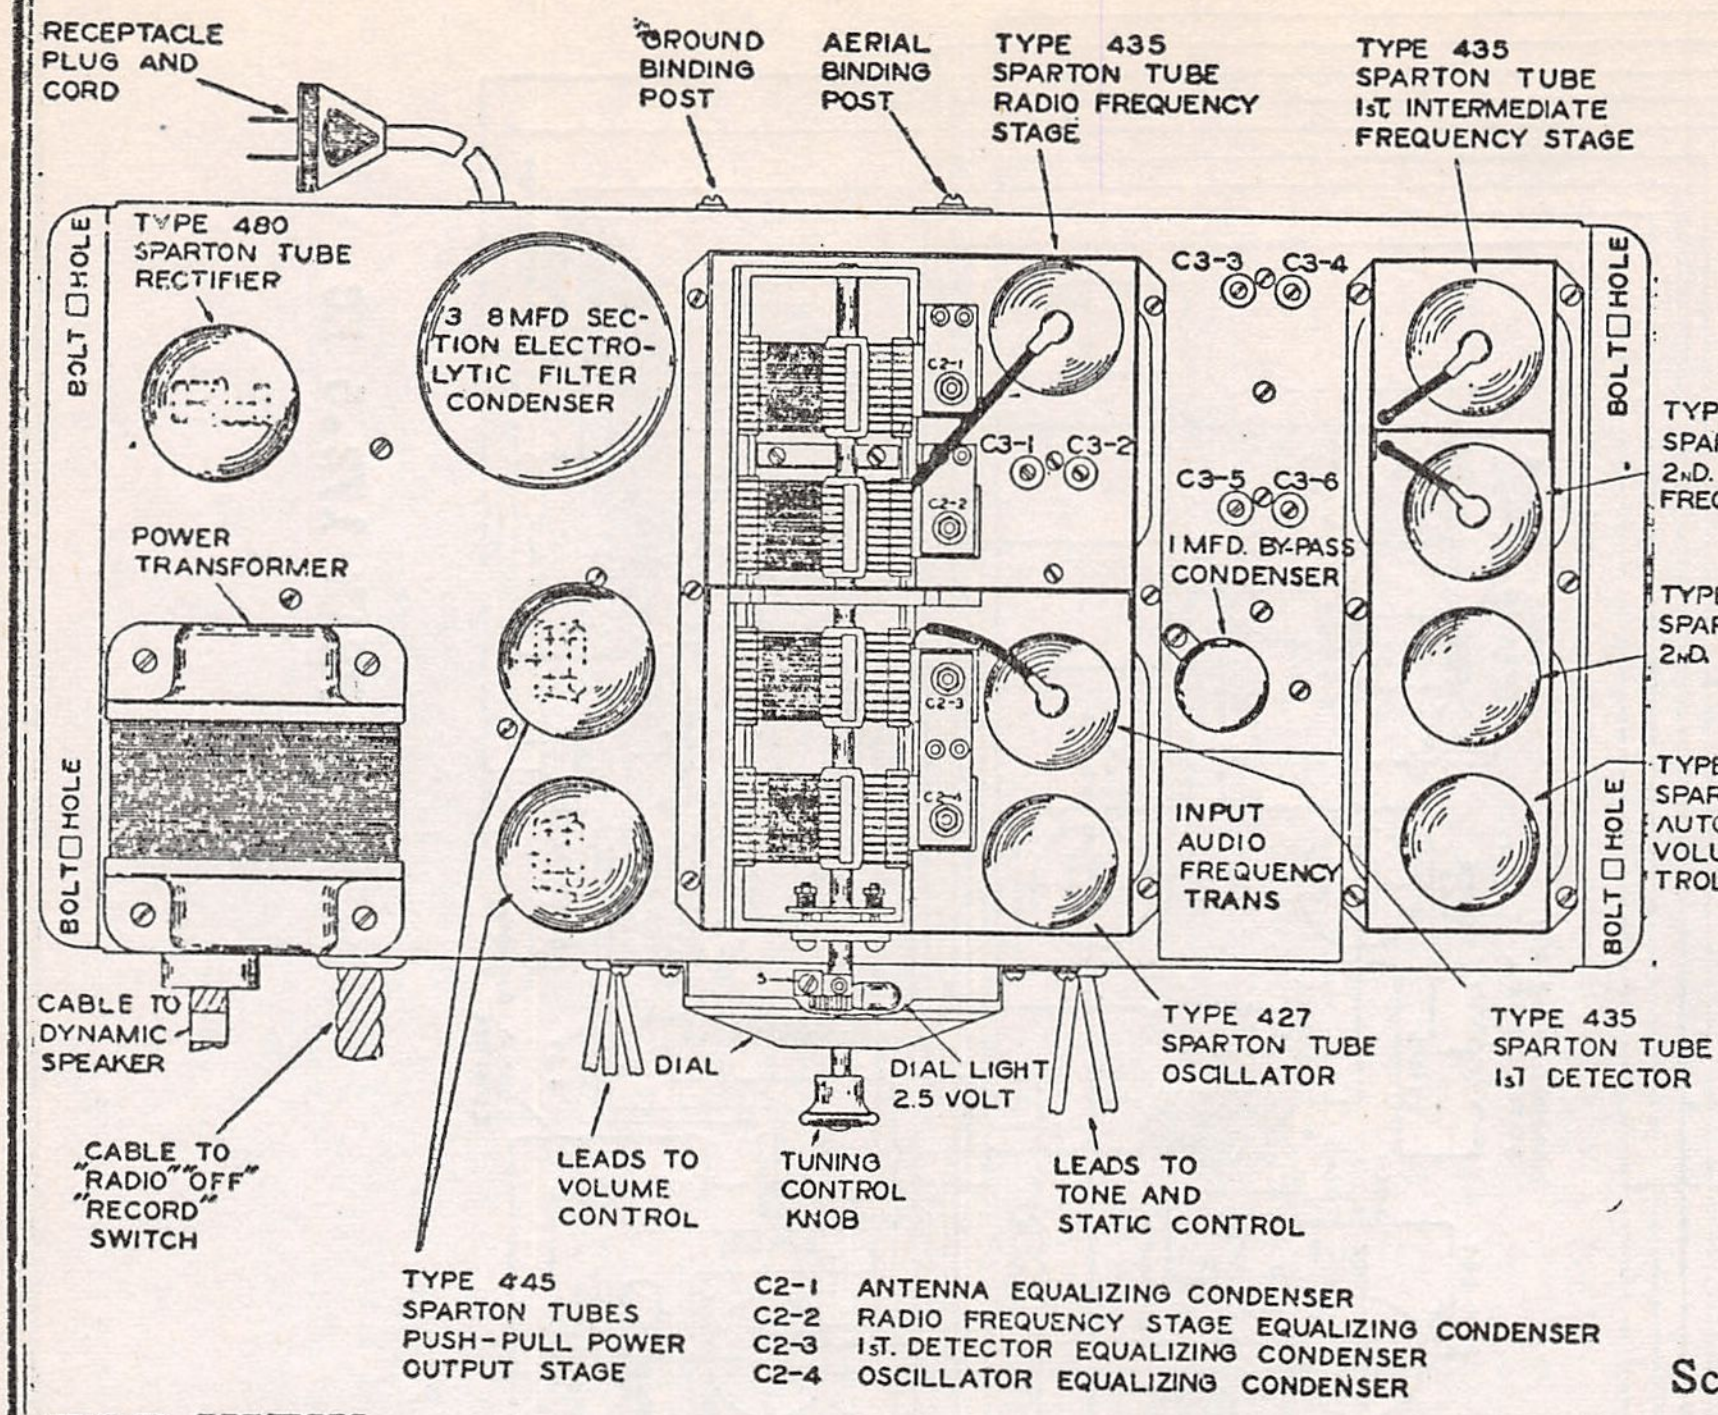
RECEPTACLE PLUG AND CORD
GROUND BINDING POST
AERIAL BINDING POST
TYPE 435 SPARTON TUBE RADIO FREQUENCY STAGE
TYPE 435 SPARTON TUBE 1ST. INTERMEDIATE FREQUENCY STAGE
TYPE 480 SPARTON TUBE RECTIFIER
3 8MFD SECTION ELECTROLYTIC FILTER CONDENSER
C3-3 C3-4
C2-1
C3-1 C3-2
C2-2
C3-5 C3-6
1 MFD. BY-PASS CONDENSER
TYPE 435 SPARTON TUBE 2ND. INTERMEDIATE FREQUENCY STAGE
TYPE 427 SPARTON TUBE 2ND. DETECTOR
TYPE 427 SPARTON TUBE AUTOMATIC VOLUME CONTROL
POWER TRANSFORMER
BOLT HOLE
BOLT HOLE
BOLT HOLE
BOLT HOLE
C2-3
C2-4
INPUT AUDIO FREQUENCY TRANS
CABLE TO DYNAMIC SPEAKER
CABLE TO "RADIO" "OFF" "RECORD" SWITCH
DIAL
DIAL LIGHT 2.5 VOLT
TYPE 427 SPARTON TUBE OSCILLATOR
TYPE 435 SPARTON TUBE 1ST DETECTOR
LEADS TO VOLUME CONTROL
TUNING CONTROL KNOB
LEADS TO TONE AND STATIC CONTROL
TYPE 445 SPARTON TUBES PUSH-PULL POWER OUTPUT STAGE
C2-1 ANTENNA EQUALIZING CONDENSER
C2-2 RADIO FREQUENCY STAGE EQUALIZING CONDENSER
C2-3 1ST. DETECTOR EQUALIZING CONDENSER
C2-4 OSCILLATOR EQUALIZING CONDENSER

TOP VIEW

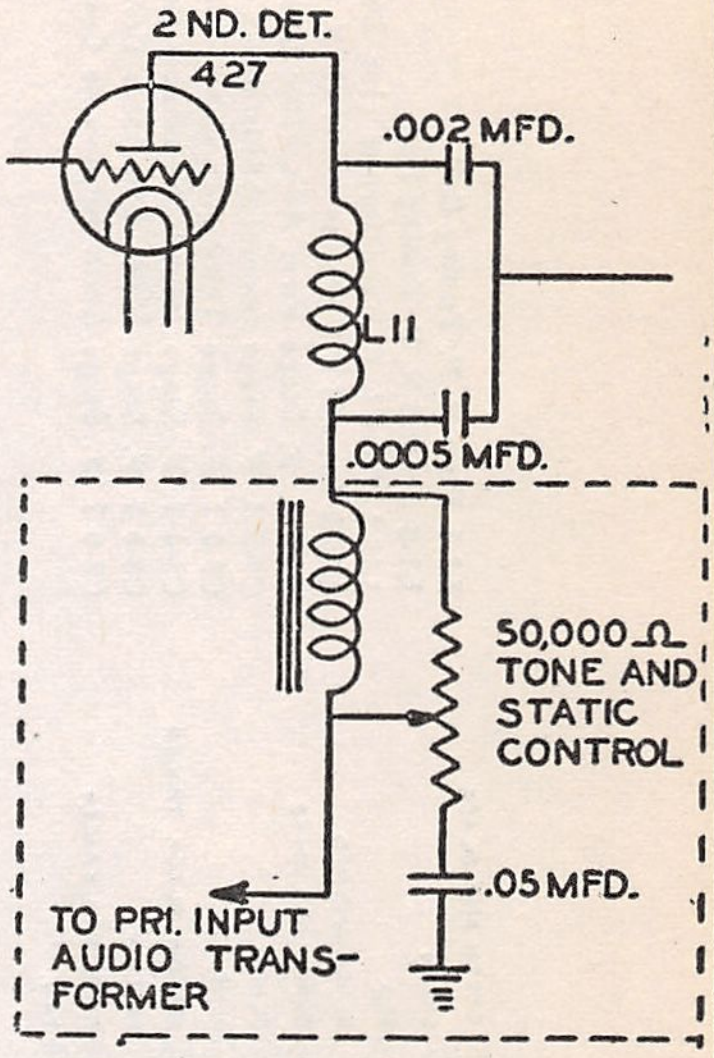
2 ND. DET.
427
.002 MFD.
L11
.0005 MFD.
50,000 Ω TONE AND STATIC CONTROL
.05 MFD.
TO PRI. INPUT AUDIO TRANSFORMER

Schematic Diagram of Tone Control System used on a few of the first SPARTON Model 30.

Voltage-Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

		OPERATING VOLTAGES				
Tube	Location	Heater or Filament	Plate	Control Grid—	Screen Grid+	Plate Current Mills.
435	1st R. F.	2.2 - 2.5	180 - 220	2.5 4	80 - 100	5 - 8
435	1st Det.	2.2 - 2.5	180 - 220	*6.4 - 14	80 - 100	*.8 - 1.8
435	1st I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	2nd I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
427	Oscillator	2.2 - 2.5	80 - 100	†	....	‡
427	2nd Det	2.2 - 2.5	170 - 205	14 - 20	....	.7 - 1.0
427	A. V. C.	2.2 - 2.5	§	30 - 50	....	Zero
445	Power	2.2 - 2.5	225 - 270	‖30 - 45	....	20 - 30
445	Power	2.2 - 2.5	225 - 270	‖30 - 45	....	20 - 30
480	Rectifier	4.2 - 5	360 - 440	....	....	48 - 58

* Remove oscillator tube.
† Tube generates own bias when oscillating.
‖ Meter reading use 150 volt scale—true voltage 50-75—If lower scale is used expect lower voltages.
§ Test from grid prong to ground approx. 125 volts.
‡ Test with plug in 2nd. Detector socket and tube in Analyzer.

MODEL 30
Schematic

SPARKS WITHINGTON CO.

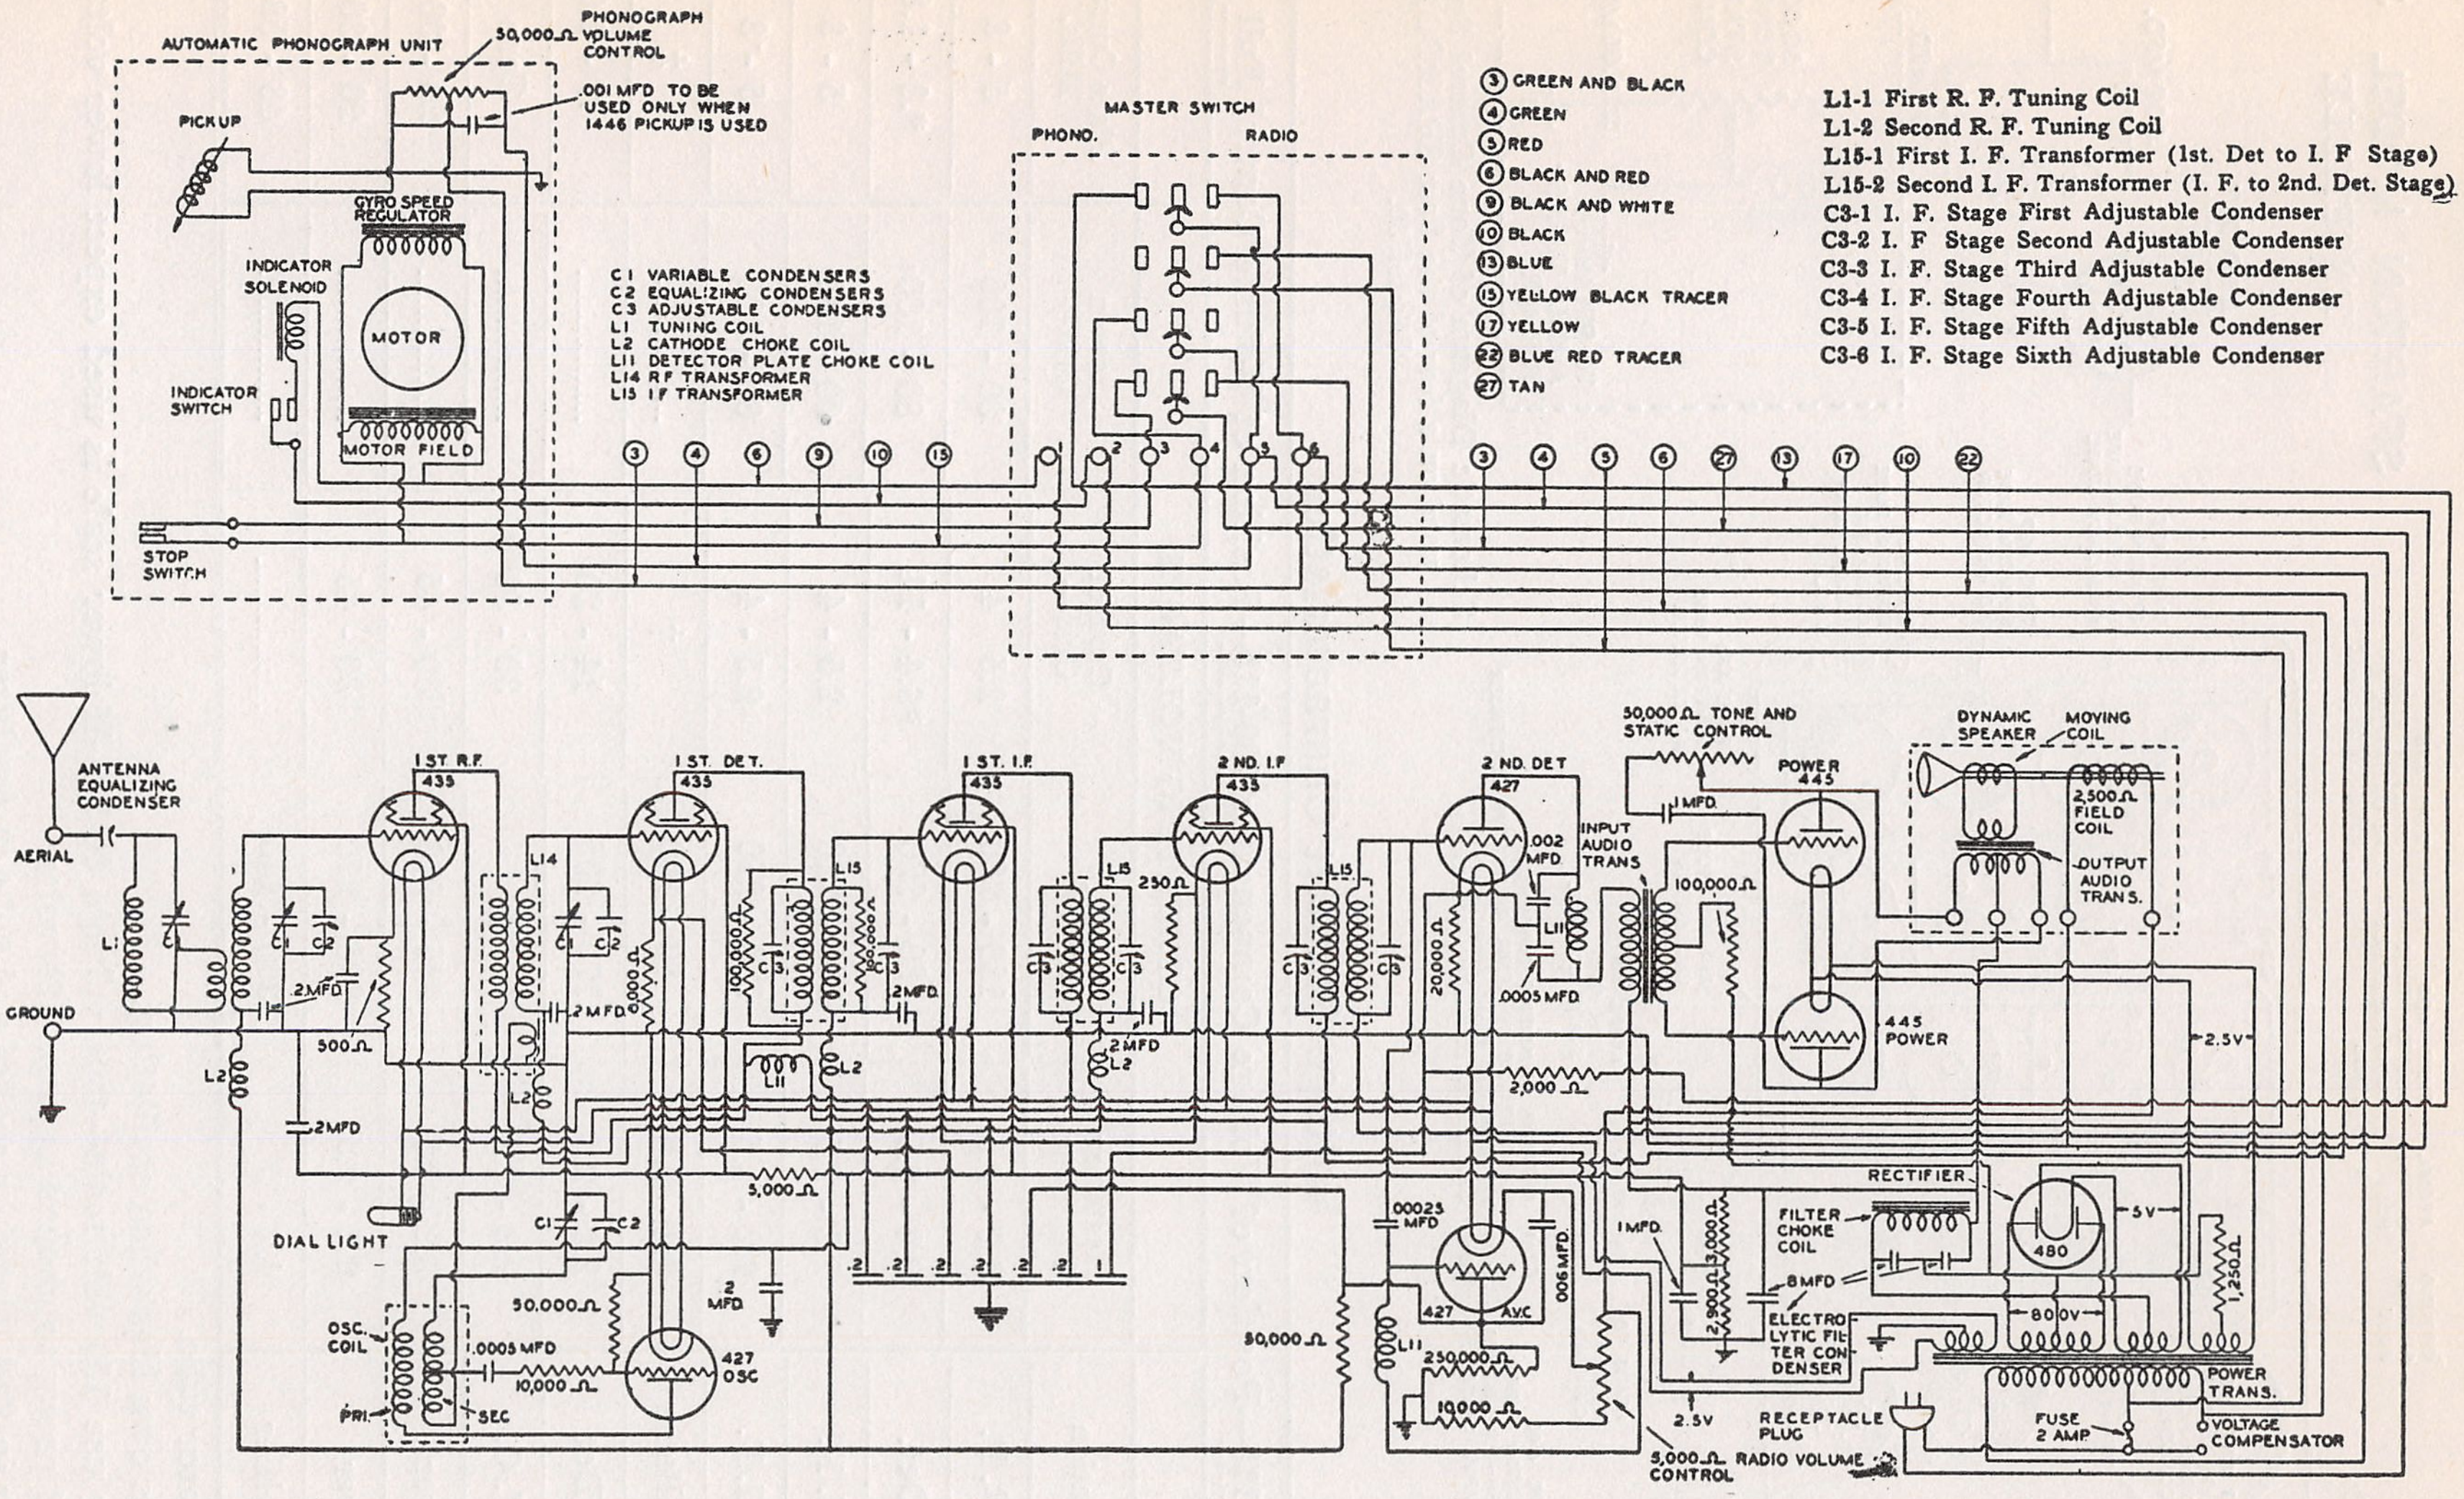

L1-1 First R. F. Tuning Coil
L1-2 Second R. F. Tuning Coil
L15-1 First I. F. Transformer (1st. Det to I. F Stage)
L15-2 Second I. F. Transformer (I. F. to 2nd. Det. Stage)
C3-1 I. F. Stage First Adjustable Condenser
C3-2 I. F Stage Second Adjustable Condenser
C3-3 I. F. Stage Third Adjustable Condenser
C3-4 I. F. Stage Fourth Adjustable Condenser
C3-5 I. F. Stage Fifth Adjustable Condenser
C3-6 I. F. Stage Sixth Adjustable Condenser

AUTOMATIC PHONOGRAPH UNIT
50,000 Ω PHONOGRAPH VOLUME CONTROL
.001 MFD TO BE USED ONLY WHEN 1446 PICKUP IS USED
PICKUP
GYRO SPEED REGULATOR
MOTOR
MOTOR FIELD
INDICATOR SOLENOID
INDICATOR SWITCH
STOP SWITCH
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
C3 ADJUSTABLE CONDENSERS
L1 TUNING COIL
L2 CATHODE CHOKE COIL
L11 DETECTOR PLATE CHOKE COIL
L14 RF TRANSFORMER
L15 IF TRANSFORMER
MASTER SWITCH
PHONO.
RADIO
③ GREEN AND BLACK
④ GREEN
⑤ RED
⑥ BLACK AND RED
⑨ BLACK AND WHITE
⑩ BLACK
⑬ BLUE
⑮ YELLOW BLACK TRACER
⑰ YELLOW
㉒ BLUE RED TRACER
㉗ TAN
ANTENNA EQUALIZING CONDENSER
AERIAL
GROUND
1ST R.F. 435
1ST DET. 435
1ST I.F. 435
2ND I.F 435
2ND DET 427
L1
L2
L11
L14
L15
C1
C2
C3
2 MFD
500 Ω
250 Ω
5,000 Ω
DIAL LIGHT
OSC. COIL
PRI
SEC
.0005 MFD
10,000 Ω
50,000 Ω
427 OSC
.2
.1
.002 MFD
.0005 MFD
20,000 Ω
INPUT AUDIO TRANS
50,000 Ω TONE AND STATIC CONTROL
1 MFD
100,000 Ω
POWER 445
445 POWER
2,000 Ω
DYNAMIC SPEAKER
MOVING COIL
2,500 Ω FIELD COIL
OUTPUT AUDIO TRANS.
2.5V
.00023 MFD
427
A.V.C
.006 MFD.
30,000 Ω
250,000 Ω
10,000 Ω
1 MFD.
2,900 Ω
3,000 Ω
8 MFD
ELECTROLYTIC FILTER CONDENSER
FILTER CHOKE COIL
RECTIFIER
480
5V
800V
1,250 Ω
POWER TRANS.
FUSE 2 AMP
VOLTAGE COMPENSATOR
RECEPTACLE PLUG
5,000 Ω RADIO VOLUME CONTROL

Sparton Model 30
Radio Phonograph Combination

IF PEAK 172.5 KC

Service Data for Sparton Ensemble Model 30 Automatic Phonograph Mechanism

The automatic phonograph mechanism of the Model 30 SPARTON Ensemble consists of three principal divisions: The Power Source, the Tripping mechanism, and the Discard-Indicating mechanism. A description of the construction and function of each division is outlined in the following paragraphs.

POWER SOURCE

The Power Source consists of (Fig. 1) Motor 1321 mounted between Top Plate C-623 and Bottom Plate C-619, which are held parallel by (Fig. 2) Spreader 1261 and together by (Fig. 1) eight screws 1365. A worm in the Motor Shaft meshes with the Worm Gear, on the Turntable Shaft and causes the Turntable Shaft to revolve. A portion of this shaft protrudes below the Worm Gear Chamber. On this portion of the shaft (Fig. 2) Pinion 1207 turns freely. It is held in position by Thrust Washers bearing on the end of (Fig. 1) Sleeve 1255, on which Clutch Spool 1206 is mounted and held by Pin 1351. This pin holds the Sleeve integral with the shaft, but allows the Clutch Spool to travel up and down. The pin works in the Slot on the Clutch Spool. The Clutch Spool always revolves with the Turntable Shaft. Raising the Clutch Spool causes one of its three teeth to mesh with one of the two teeth in (Fig. 2) Pinion 1207, causing Pinion to turn with the Turntable Shaft. The teeth of this pinion mesh with the teeth in the (Fig. 1) Compound Intermediate Gear A-6138 causing it to revolve, then the teeth in the Compound Intermediate Gear mesh with the teeth of (Fig. 2) Cam B-3715 and causes the cam to revolve in a clockwise direction. The Compound Intermediate Gear and Cam are held in position by Pivot Studs in The Top Plate, and (Fig. 2) Pivot Bearings, 1262 which are adjustable, and locked into The Bottom Plate by means of Nut 733. These Pivot Bearings should be adjusted so the shafts turn freely, but do not move up and down. Cam B-3715 is the "heart" of the mechanism. All motions and power are derived from it, except the Power for (Fig 3) Turntable C-617-A which is revolved by (Fig. 1) Rubber Washer 1321-1 acting against Metal Washer 1321-2 which is driven by a pin through the top of the Turntable Shaft. The thrust from the Turntable Shaft is taken by (Fig. 1) Thrust Screw 1256-A, which is locked in position by Nut 773.

TRIPPING MECHANISM

When a record has been reproduced the needle in (Fig. 1) Pickup Unit A-6126 travels into the center of the record by means of the eccentric groove or the spiral groove depending upon the type of record. This motion is transmitted through Pickup Arm C-621 which is pivoted to (Fig. 3) Bracket 1269 by (Fig. 2) pivot screws 1270. (Fig. 3) Bracket 1269 is pivoted between the Top and Bottom Plates, at the top by (Fig. 2) Pivot Stud 1263 which is held in position by Top Support 1342-A and at the bottom by Pivot Bearing 1262. The motion of (Fig. 1) Pickup Unit A-6126 causes (Fig. 3) Bracket 1269 to move on a vertical axis. In case of Spiral Groove records (Fig. 2) Pawl Arm 1234 attached to Bracket 1269 moves in and out, causing Spiral Pawl 1245 to raise Trip Lever 1233. In case of Eccentric Groove records Eccentric Pawl 1246 raises Trip Lever 1233. This causes Throw-Out Lever 1275 to be released, allowing it to travel downward and act on (Fig. 1) Clutch Lever 1277-A which pivots on Stud 1467. This allows the forked end to travel upward, which causes Clutch Spool 1206 to also travel upward, and its lugs engage with the lugs on (Fig. 2) Driving Pinion 1207, causing Pinion 1207 to turn which turns Cam B-3715 through (Fig. 1) Compound Intermediate Gear A-6138. When the cam (Fig. 2) B-3715 has nearly completed its cycle the Lug on it passes under the cam surface of Throw-out Lever 1275, causing it to rise and be held in position by allowing the notch in Trip Lever 1233 to engage under the projection step in Throw-out Lever 1275. The Lug also prevents (Fig. 1) Clutch Lever 1277-A from rising. This holds Clutch Spool 1206 in mesh with (Fig. 2) Drive Pinion 1207 placing a strain on Spring 1366. When the Lug passes over the end of (Fig. 1) Clutch Lever 1277-A, the end snaps up, the forked end snaps down, and causes Clutch Spool 1206 to dis-engage from (Fig. 2) Pinion 1207. This stops the cycle operation.

MOVEMENT OF PICKUP

The (Fig. 1) Pick-up Unit A-6126 is moved by means of (Fig. 3) Follow Arm 1271 attached to (Fig. 1) Pick-up Unit Arm C-621 by (Fig. 3) Screws 13830-7 and 13830-9. The Follow Arm is moved by a Pin on the end of it which travels in a groove on the top of (Fig. 2) Cam B-3715. One quarter of the way around the top of the Cam there are two grooves. When the Pin is in the inner groove, the needle in (Fig. 1) Pick-up Unit A-6126 will lower at the starting position for 10" records. When the Pin is in the outer groove the Pick-up Unit will lower at the starting position for 12" records. Cam Track Switch 1266 (not shown) changes this pin into groove required. This is done by (Fig. 3) Switch Cam 1297 being raised up by Shift Lever 1303-A, which is pulled forward by Piston A-6136 in Solenoid A-6135-A which is energized by the Indicator Switch described in a subsequent discussion. When Switch Cam 1297 which is pivoted on Bracket 1357-A, is in contact with Finger 1303-A it causes the inner side of (Fig. 2) Cam B-3715 to rise, making it engage on lower lug of Cam Track Switch 1266 (not shown). This changes the position of the Cam Track Switch, causing the necessary movement for the Pick-up Unit to lower to the starting position for 12" records.

DISCARD-INDICATING MECHANISM

(Fig. 3) Lift Lever 1302-A attached to Shift Lever 1303-A; is caused to rise at each revolution of the (Fig. 2) Cam B-3715 by a roller acting on a perpendicular surface inside of the cam. If (Fig 3) Shift Lever 1303-A is in the proper position to raise Cam 1297 it also will cause end of Lift Lever 1302-A to rise under the low part of (Fig. 2) Roller Arm 1471, causing Roller 1243 to rise on largest perpendicular cam surface on Cam B-3715. This causes (Fig. 1) Discarder B-3711-AA to be pulled back into the proper position to discard 12" records. If (Fig. 3) Shift Lever 1303-A is not in the forward position, Lift Lever 1302-A does not come up under the low part of (Fig. 2) Roller Arm 1471 and the Roller travels around on the smaller perpendicular surface of Cam B-3715 and the (Fig 1) Discarder B-3711-AA stays at the proper position to discard 10" records. These two discarder motions are accomplished by the fork in (Fig. 2) Roller Arm 1471 engaging in the fork of (Fig. 1) Yoke 1238 which is attached to the top and bottom plate by (Fig. 2) Links 1217 and (Fig 1) 1440 so the entire Discard Mechanism B-3711-AA can travel back and forth being controlled by (Fig. 2) Roller Arm 1471, which acts on either of the two perpendicular cam surfaces on Cam B-3715. To (Fig. 1) Link Yoke 1238, Links 1225 are attached. These Links are also attached to Discard Arm B-3711 and Shoe 1226. This gives a parallel motion to the Discard Arm up and down. This movement is accomplished by (Fig. 2) Lift Lever 1224 acting on (Fig. 1) Shoe 1226, when (Fig. 2) Lever 1224 is raised and lowered. Lever 1224 is raised and lowered by Lever 1279-A which is acted upon by the stud in it being in contact with the bottom surface of Cam B-3715. The inward motion of the Discarder is caused by the tension of Spring 1370 and is stopped by Stop Stud 1379. This relieves the pressure of Roller 1243 and allows Roller Arm 1471 to drop from the 12" record position to the 10" record position when the Roller is at the neutral part of cam surface. To prevent this roller from dropping down at any other time, (Fig. 1) Roller Arm Holdup 1452 is made use of, because (Fig. 2) Roller Arm 1471 is always over the vertical leg of (Fig. 1) Hold-up Arm 1452 when it is acting on the 12" cam surface. Repeat Lever 1377 is used when the continuous playing of one record is desired. This Lever when moved in, comes under Link 1225, making it impossible for Discard Arm B-3711 to Lower to the position to discard a record. (Fig. 3) Rest Hook 1349 is made use of when loading records. When Follow-Arm 1271 is placed on this hook, (Fig. 3) Discard Hold-up B-3712 is brought over (Fig. 2) Lever 1279-A, preventing it from acting to lower (Fig. 1) Discard Mechanism and remains in this position until it is pushed out by the Lug on (Fig. 2) Cam B-3715. This is why the Pick-up Unit can be brought to the center of the record and tripped without discarding the record, thus enabling the needle to start in the proper position, according to the record that is to be reproduced.

When (Fig. 1) pick-up Unit A-6126 causes mechanism to trip and begin a cycle of operation due to motion transmitted through it via the spiral or eccentric groove of the record, it is immediately swung away from the center of the record and poised above the edge of the turntable.

At the same instant the pick-up Unit has

SPARKS WITHINGTON CO.

MODEL 30
Service Data

SERVICE DATA FOR SPARTON ENSEMBLE MODEL 30 PHONOGRAPH MECHANISM

stopped in its travel away from the center of the record the Finger on (Fig. 2) Cam 1290 attached to the top of Cam B-3715 engages with indicator finger A-7639 attached to indicator unit shaft A-6002.

Cam B-3715 revolves further, exerts additional influence on the indicator finger causing the (Fig. 3) indicator C-620 and kick-off arm A-6117 attached to it to describe a half circle. Kick-off Arm A-6117-A pushes record to be discarded into the receiving compartment.

When the Kick-off Arm A-6117-A has swung through its arc of travel outward, Indicator Switch B-3710-AA rests on the top record of the group on the turn table. This switch reaches this position only when the arm has completed its arc of travel, and is not visible when the arm has reversed its direction of movement.

This is due to a sloping edge cut on the (Fig. 1) indicator shaft bushing A-6121 onto which the lower parallel arm of the indicator switch rides when the shaft turns as described.

When the roller of the indicator switch rides on a 10" record, the other roller attached to the other parallel arm, to which is also fastened another switch contact, does not rest on any surface and thus the switch remains unclosed.

When the switch sets on a 12" record both rollers rest on the record thus closing the switch. When this occurs, the closing of the switch energizes solenoid A-6135-A, which causes plunger A-6136 to be moved, which in turn actuates switch Cam 1297 attached to it.

The movement of switch Cam 1297 causes switch 1266 (not shown) to move the pin on the end of Follow Arm 1271 from the inner to the outer groove on (Fig. 2) Cam B-3715.

When this is done (Fig 1) Pick-up Unit A-6126 lowers at the position to start a 12" record.

Adjustments on the Model 30 Automatic Phonograph Mechanism

CAUTION—Be sure that you understand exactly what the trouble is with the mechanism before starting to repair it. Do not attempt to "doctor" or "experiment". Remember, the mechanism operated perfectly at the factory.

TO ADJUST MECHANISM SO (Fig. 1) PICK-UP UNIT A-6126 COMES DOWN IN THE PROPER PLACE, adjust (Fig. 3) Screws 13830-7 and 13830-8 in and out as required. Keep the front surface of Follow-Arm 1271 parallel.

TO MAKE (Fig. 3) STOP SWITCH 1412-AA CUT OFF AT THE PROPER PLACE which occurs when (Fig. 1) Pick-up Unit A-6126 drops to its lowest position with no record on the Turntable, adjust screws which hold (Fig. 3) Stop Switch 1412-AA by loosening or tightening the front screw and the holdout screw where the Stop Switch fastens to the top plate.

TO ADJUST MECHANISM SO NEEDLE TRIPS ON INNER CIRCLE OF COLUMBIA RECORDS adjust (Fig. 2) Pawl Arm 1234 by means of screws which attach it to Bracket 1269 so that Pawl Spiral 1245 trips on vertical part of Trip Lever 1233. Spiral Pawl 1245 should clear serrated surface on Trip Lever 1234 by about 1/32".

TO ADJUST (Fig. 1) CLUTCH LEVER 1277-A, loosen Stud 1467 which is in a slot on Bracket 1244, until upper end of Clutch Lever clears the Lug on Cam B-3715 by about 1/32" when Clutch Spool is up as far as it will go. If Clutch rattles or fails to operate properly, it is due to this adjustment. It is possible to change this adjustment by bending the lever, in cases where (Fig. 3) Stud 1467 is not in a slot.

TO ADJUST (Fig. 1) DISCARD ARM B-3711 FOR HEIGHT use set screw in (Fig. 2) Lever 1279-A. The discard arm should be adjusted so that 12" records just clear the top of (Fig. 1) Spindle A-6137-A when the Arm is in its highest upward position.

TO ADJUST (Fig. 3) DISCARD TONGUE A-6099-A, adjust screw A-1255-9. The proper distance for this adjustment is when Roller A-6082 rests on record, (Fig. 1) Discard Arm B-3711 is in the down position, and there is just room for the tongue to pass under a normal size record.

TO ADJUST (Fig. 1) DISCARD ARM B-3711 IN AND OUT adjust (Fig. 3) Discard Tongue A-6099-A so that it will just come down behind a record in its lowest position, using screws which hold Roller Bracket (Fig. 2) 1472-A to Roller Arm 1471.

IF MECHANISM TRIPS HARD, it is probably due to the fact that the notch in (Fig. 2) Trip Lever 1233 is not smooth or not machined at the correct angle. Also, it may be due to the fact that Spring 1366 has too much tension. Throw-out Lever 1275 should rise high enough when the Lug in Cam B-3715 is passing under it to allow the notch in Trip Lever 1233 to enter under the Lug on Lever 1275.

IF NEEDLE FAILS TO SLIDE FROM THE SMOOTH PART OF RECORD into the grooves it is probably due to the (Fig. 1) Pick-up Arm C-621 being tight or not properly adjusted. (Fig. 3) Bracket 1269 should be tilted toward the discard compartment at top, which gives a natural tendency for the (Fig. 1) Pick-up Unit A-6126 to swing toward the center of record. This can be effected by loosening screws which hold (Fig. 2) Top Bearing Plate 1342-A and moving the Plate to the proper position. If Pick-up Arm is then out of center with the hole, it can be readjusted by Pivot Screws 1270.

ADJUST POSITION OF (FIG. 1) KICK-OFF ARM A-6117-A.

When the Kick-off Arm is in a stationary position the finger on the end should clear a 12" record by about 1/8", when the record is being raised from the turntable as shown in Fig. 1.

The position of the Kick-off Arm is regulated by (Fig. 2) finger A-7639 bearing araginst Cam A-6122. This finger is adjusted by the adjusting screws in adjujsting block A-7637. The adjusting block is fastened to spindle A-6022 by set screw 1371.

HEIGHT OF (FIG. 1) GUIDE RAIL B-3709-A. The height is regulated by the position of nuts A-47-N.

ALWAYS BE SURE THAT THE TURNTABLE IS OPERATING AT 78 R.P.M. Often apparent trouble is due to improper speed that the turntable is set to run. If a speed indicator is not available, the speed of the turntable can be ascertained by placing a strip of paper underneath a record in playing position, so it will project just beyond the edge of the turntable. By placing the finger where the paper will strike it the number of revolutions per minute can be counted. Be sure to have the record playing, so the retarding action of the needle on the record will be taken into account while you are counting the revolutions. To regulate the speed of the motor, adjust the speed control lever which extends from beneath the record turntable. The movement of this control lever to the front will decrease the speed of the motor. Vary the setting of this lever until the paper touches the finger seventy-eight (78) times; while the second hand of a watch makes one complete revolution. The speed of the turntable has been properly adjusted at the factory for normal record reproduction, and under normal conditions should require no further adjustment.

BE SURE THAT ALL JOINTS OPERATE FREELY AND SMOOTHLY. A little oil in all joints and wearing surfaces will insure this condition.

BE SURE THAT ENSEMBLE IS STANDING REASONABLY LEVEL.

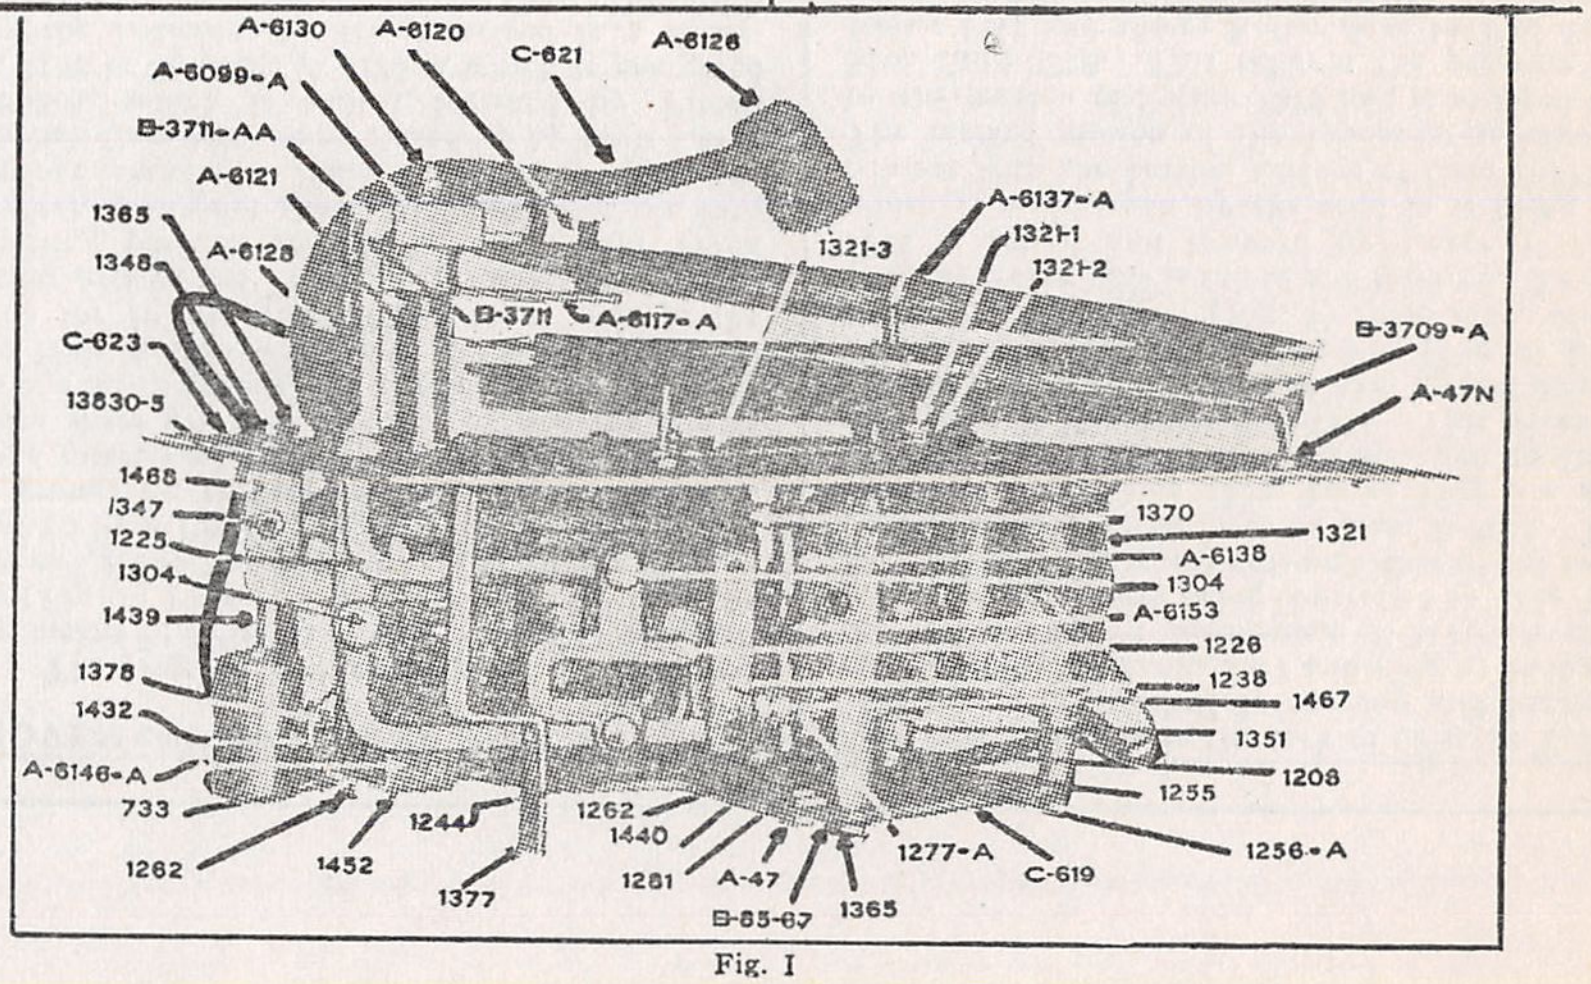

Fig. I

SPARTON ENSEMBLE MODEL 30

RECEIVING UNIT PARTS

Description	Part No.
Antenna Terminal and Insulation Assembly	A-6898
Body Complete—Amplifier	B-3627
Body Complete—Selector Assembly Top	B-3623
Bracket—Base Mounting	A-6718
Bracket—Dial Drive Support	B-4109
Bracket—2 Mfd. Condenser	A-7499
Bulb—Dial Light	A-5058
Chassis Less Tubes 25 Cycle	D-327
Chassis—Less Tubes 60 Cycle	D-326
Clamp—Cable 1/32" Radius	A-5215
Clamp—Cable 3/16" Radius	A-2251
Clip—Fuse	A-4983
Choke Coil—Cathode	A-7209
Choke Coil—Detector Plate	A-7297
Choke Coil—Filter	B-3429
Choke Coil—Tone Control	A-6862
Coil—Oscillator	A-6873
Coil—Tuning No. 1	A-6791
Coil—Tuning No. 2	A-6794
Condenser Frame and Anchor Plate Insulation	B-4021
Condenser—Double Equalizing	A-7054
Condenser—I. F. Adjustable and Bracket	A-7097
Condenser—Rotor Assembly	B-3648
Condenser—Single Equalizing	A-2053
Condenser Stator Assembly No. 1, 2, and 4	A-6582
Condenser Stator Assembly No. 3	A-6581
Condenser—.1 Mfd.	A-7475
Condenser—.2 Mfd. Cub	A-7005
Condenser—.2 Mfd. with Cap	A-4998
Condenser—.2 Mfd. Less Cap	A-7094
Condenser—.05 Mfd.	A-6927
Condenser—.002 Mfd.	A-7038-3
Condenser—.006 Mfd.	A-4434
Condenser—.0005 Mfd.	A-7038-1
Condenser—.00025 Mfd.	A-5175
Condenser—1 Mfd.	A-5032
Condenser—8 Mfd. Electrolytic	A-6884
Condenser—Block 7 Lead	B-4107
Contact—Rotor Shaft Center	A-5814
Contact—Rotor Shaft Front	A-5308
Contact—Rotor Shaft Rear	A-4317
Cotter Key—Drive Shaft	A-7130
Cover—Amplifier Body	B-3625
Cover—Bottom	B-4084
Cover—Electrolytic Condenser Assembly	A-6715
Cover—Selector Body	B-3621
Cushion—Rubber Mounting	A-6967
Dial Control Assembly	A-7070
Drive Disc and Light Shield Assembly	A-7166
Fuse—1½ Ampere	A-4980-4

RECEIVING UNIT PARTS (Continued)

Description	Part No.
Grommet—Rubber	A-5183
Insulation—Filter Condenser	A-7264-A
Insulation—Phonograph Volume Control	A-6970
Insulation—1st I. F. Transformer Shield	A-7445
Kilocycle Scale and Support	B-4120
Lug—I. F. Transformer Soldering	A-3737
Lug—Rivet Soldering	A-1866
Lug—Screw Soldering	A-1865
Nut—Equalizing Condenser	A-2269
Plate—Condenser Bearing	A-4226
Plate—Clamping	A-3799-A
Plate and Double Terminal	A-7051
Plate—Filter Condenser Mounting	A-6705
Plate—6 Point Resistor and Condenser	A-7055
Plate—Rotor Shaft Thrust	A-4310-A
Plate—Stator Clamping	A-5751
Pointer—Dial	A-7113
Receptacle Cord and Plug	A-6743
Resistor and Condenser Assembly	B-4259
Resistor—200 Ohm	B-4114-11
Resistor—250 Ohm	B-4114-3
Resistor—1250 Ohm	A-7018
Resistor—500 Ohm	B-4114-1
Resistor—2,000 Ohm	B-4114-6
Resistor—5,000 Ohm	B-4114-20
Resistor—8,000 Ohm	B-4114-2
Resistor—10,000 Ohm .5 Watt	B-4114-7
Resistor—10,000 Ohm 3 Watt	B-4114-5
Resistor—20,000 Ohm	B-4114-14
Resistor—50,000 Ohm	B-4114-12
Resistor—100,000 Ohm	B-4114-10
Resistor—2,900-3,000 Ohm	A-6619
Resistor—250,000 Ohm	B-4114-4
Screw—Aerial and Ground Binding Post	A-6575
Screw—Equalizing Condenser	A-3525
Screw—I. F. Adjustable Condenser	A-7692
Selector Assembly	C-687
Shaft—Drive and Spring	A-7165
Shaft—Drive and Washer	A-7058
Shield—Input Transformer	A-7680
Shield—Condenser Rear Stator	A-6767
Shield—Coil Copper Selector Assembly	B-3602
Shield—I. F. Adjustable Condensers	A-7211
Shield—I. F. Transformer Bottom	A-6600
Spacer Bushing—6 x 1⅞	A-6731
Spacer Bushing—¼ x 7/32	A-7040
Spacer Bushing—¼ x ⅝	A-3725
Spring—Drive	A-7112

MODEL 30
Chassis Views

SPARKS WITHINGTON CO.

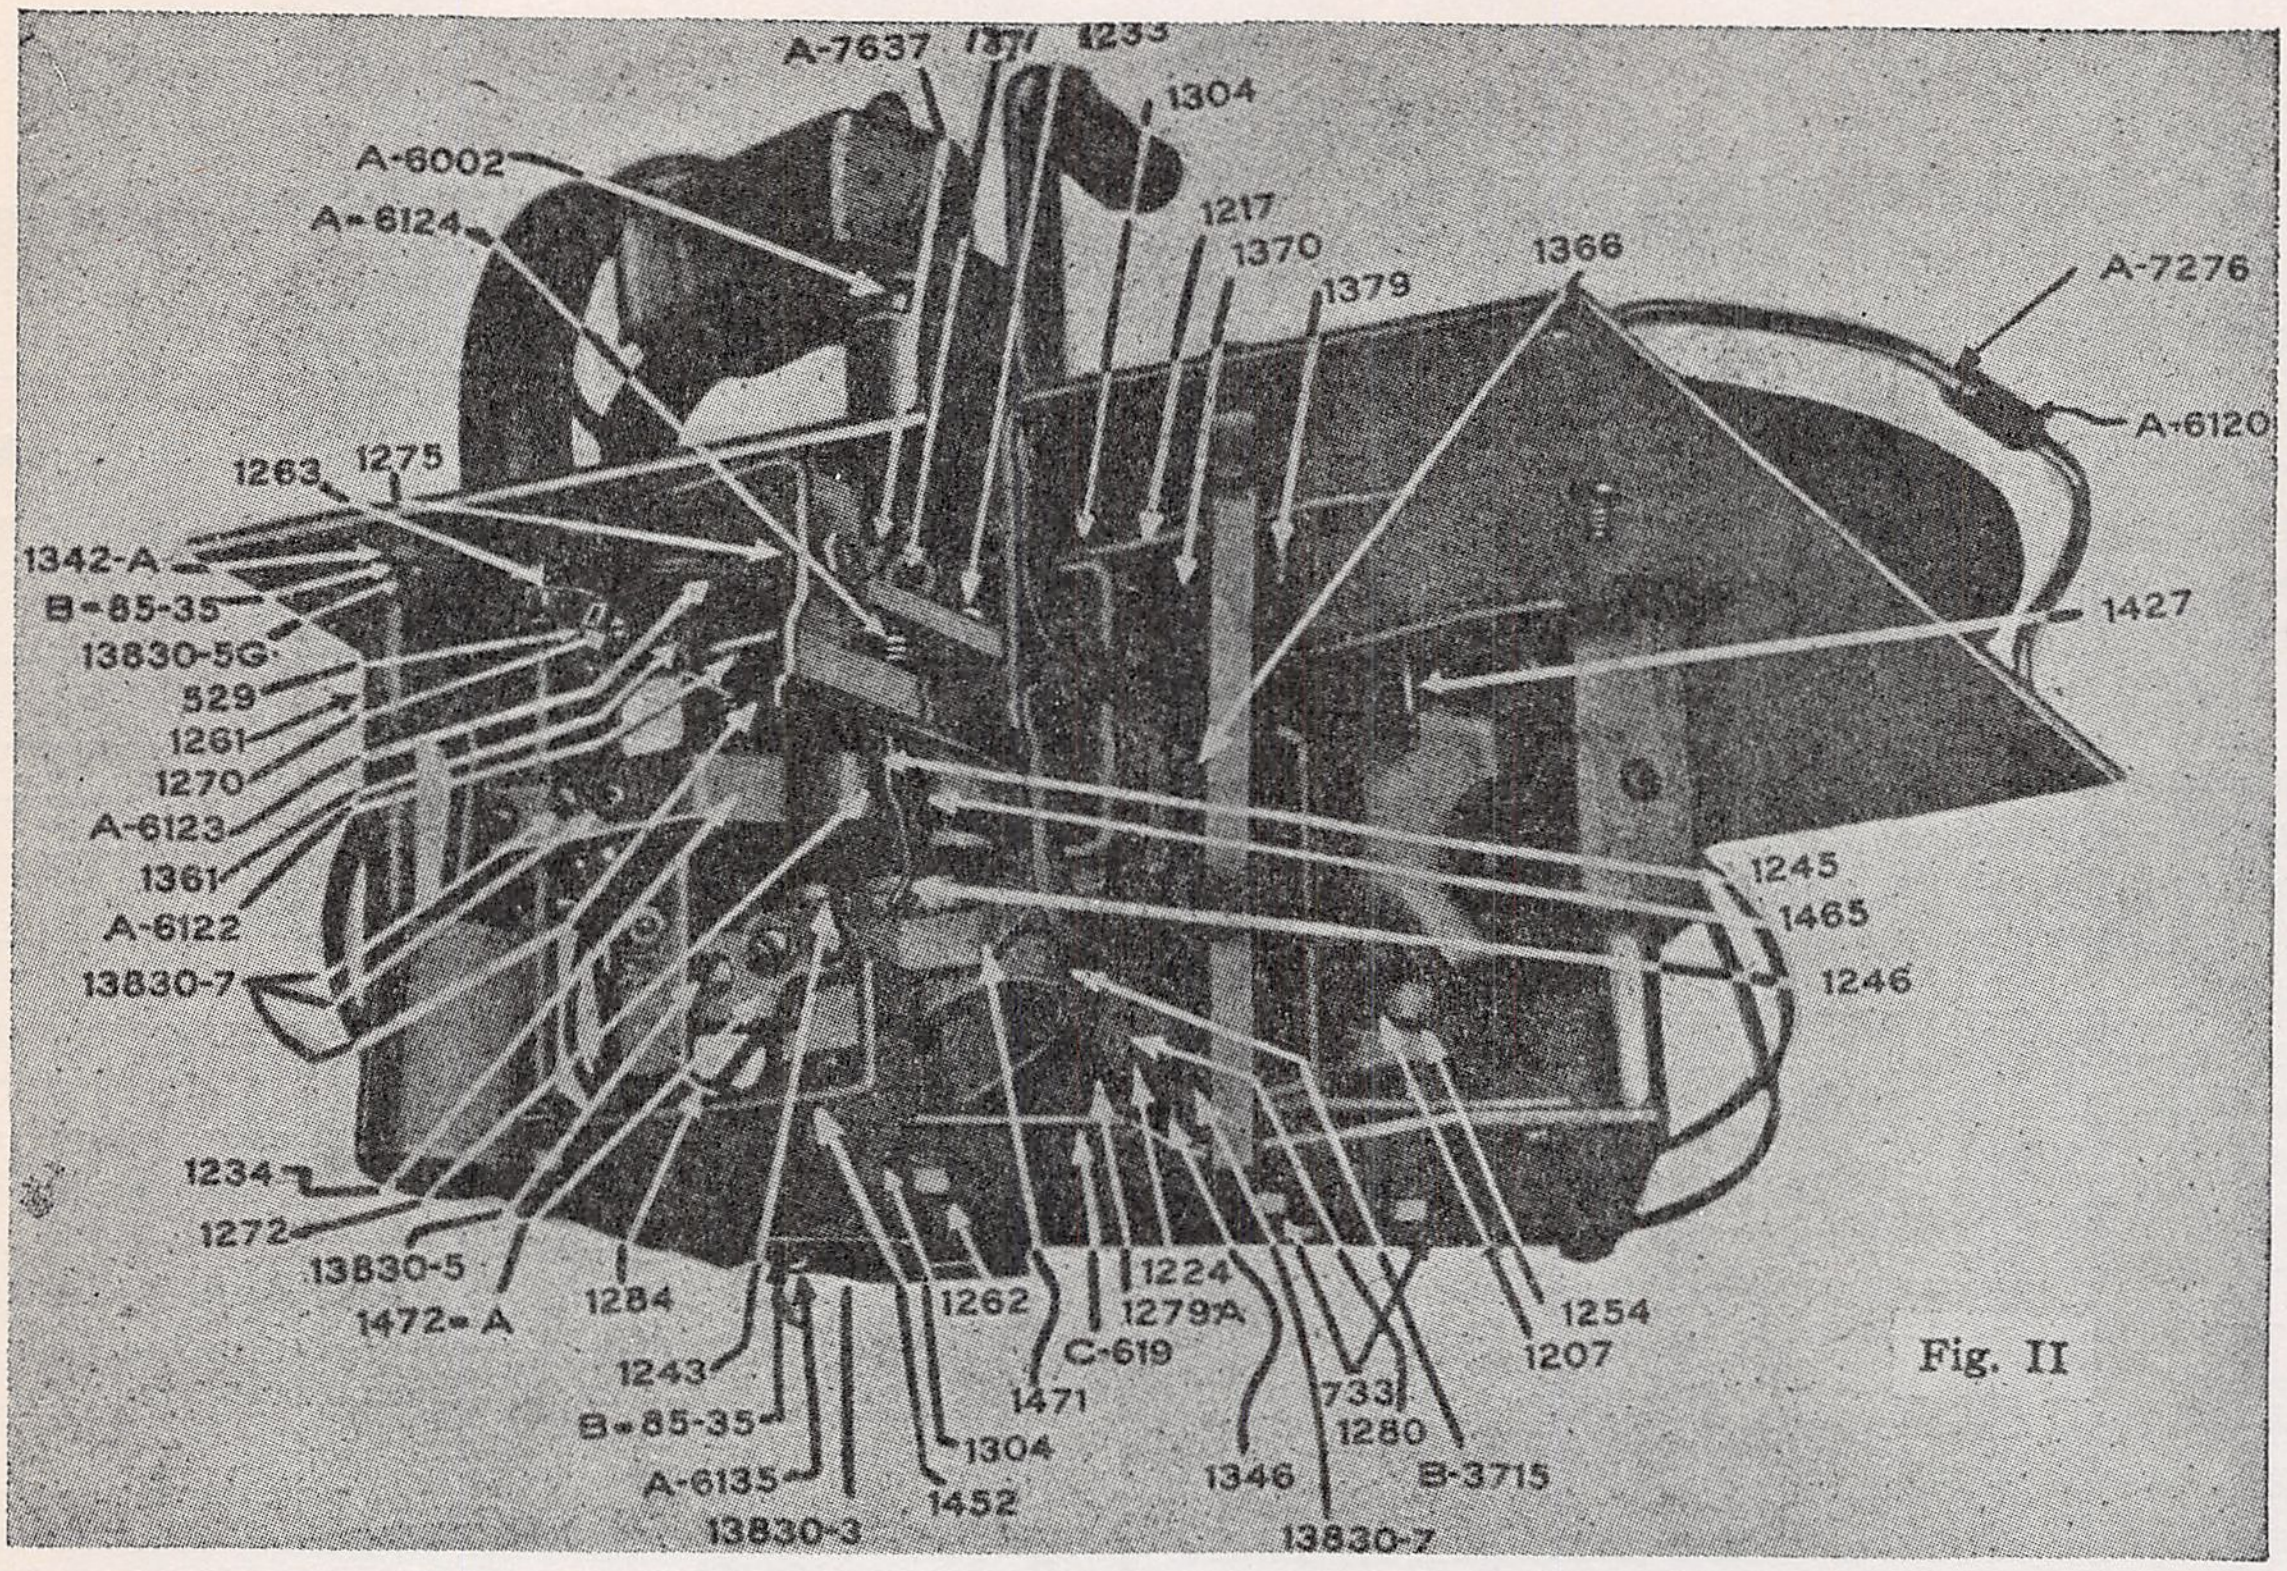
A-7637
1371
1233
1304
A-6002
A-6124
1217
1370
1379
1366
A-7276
A-6120
1263
1275
1342-A
B-85-35
13830-5G
529
1261
1270
A-6123
1361
A-6122
13830-7
1427
1245
1465
1246
1234
1272
13830-5
1472-A
1284
1243
B-85-35
A-6135
13830-3
1262
1304
1452
1224
1279A
C-619
1471
1346
733
1280
13830-7
B-3715
1254
1207

Fig. II

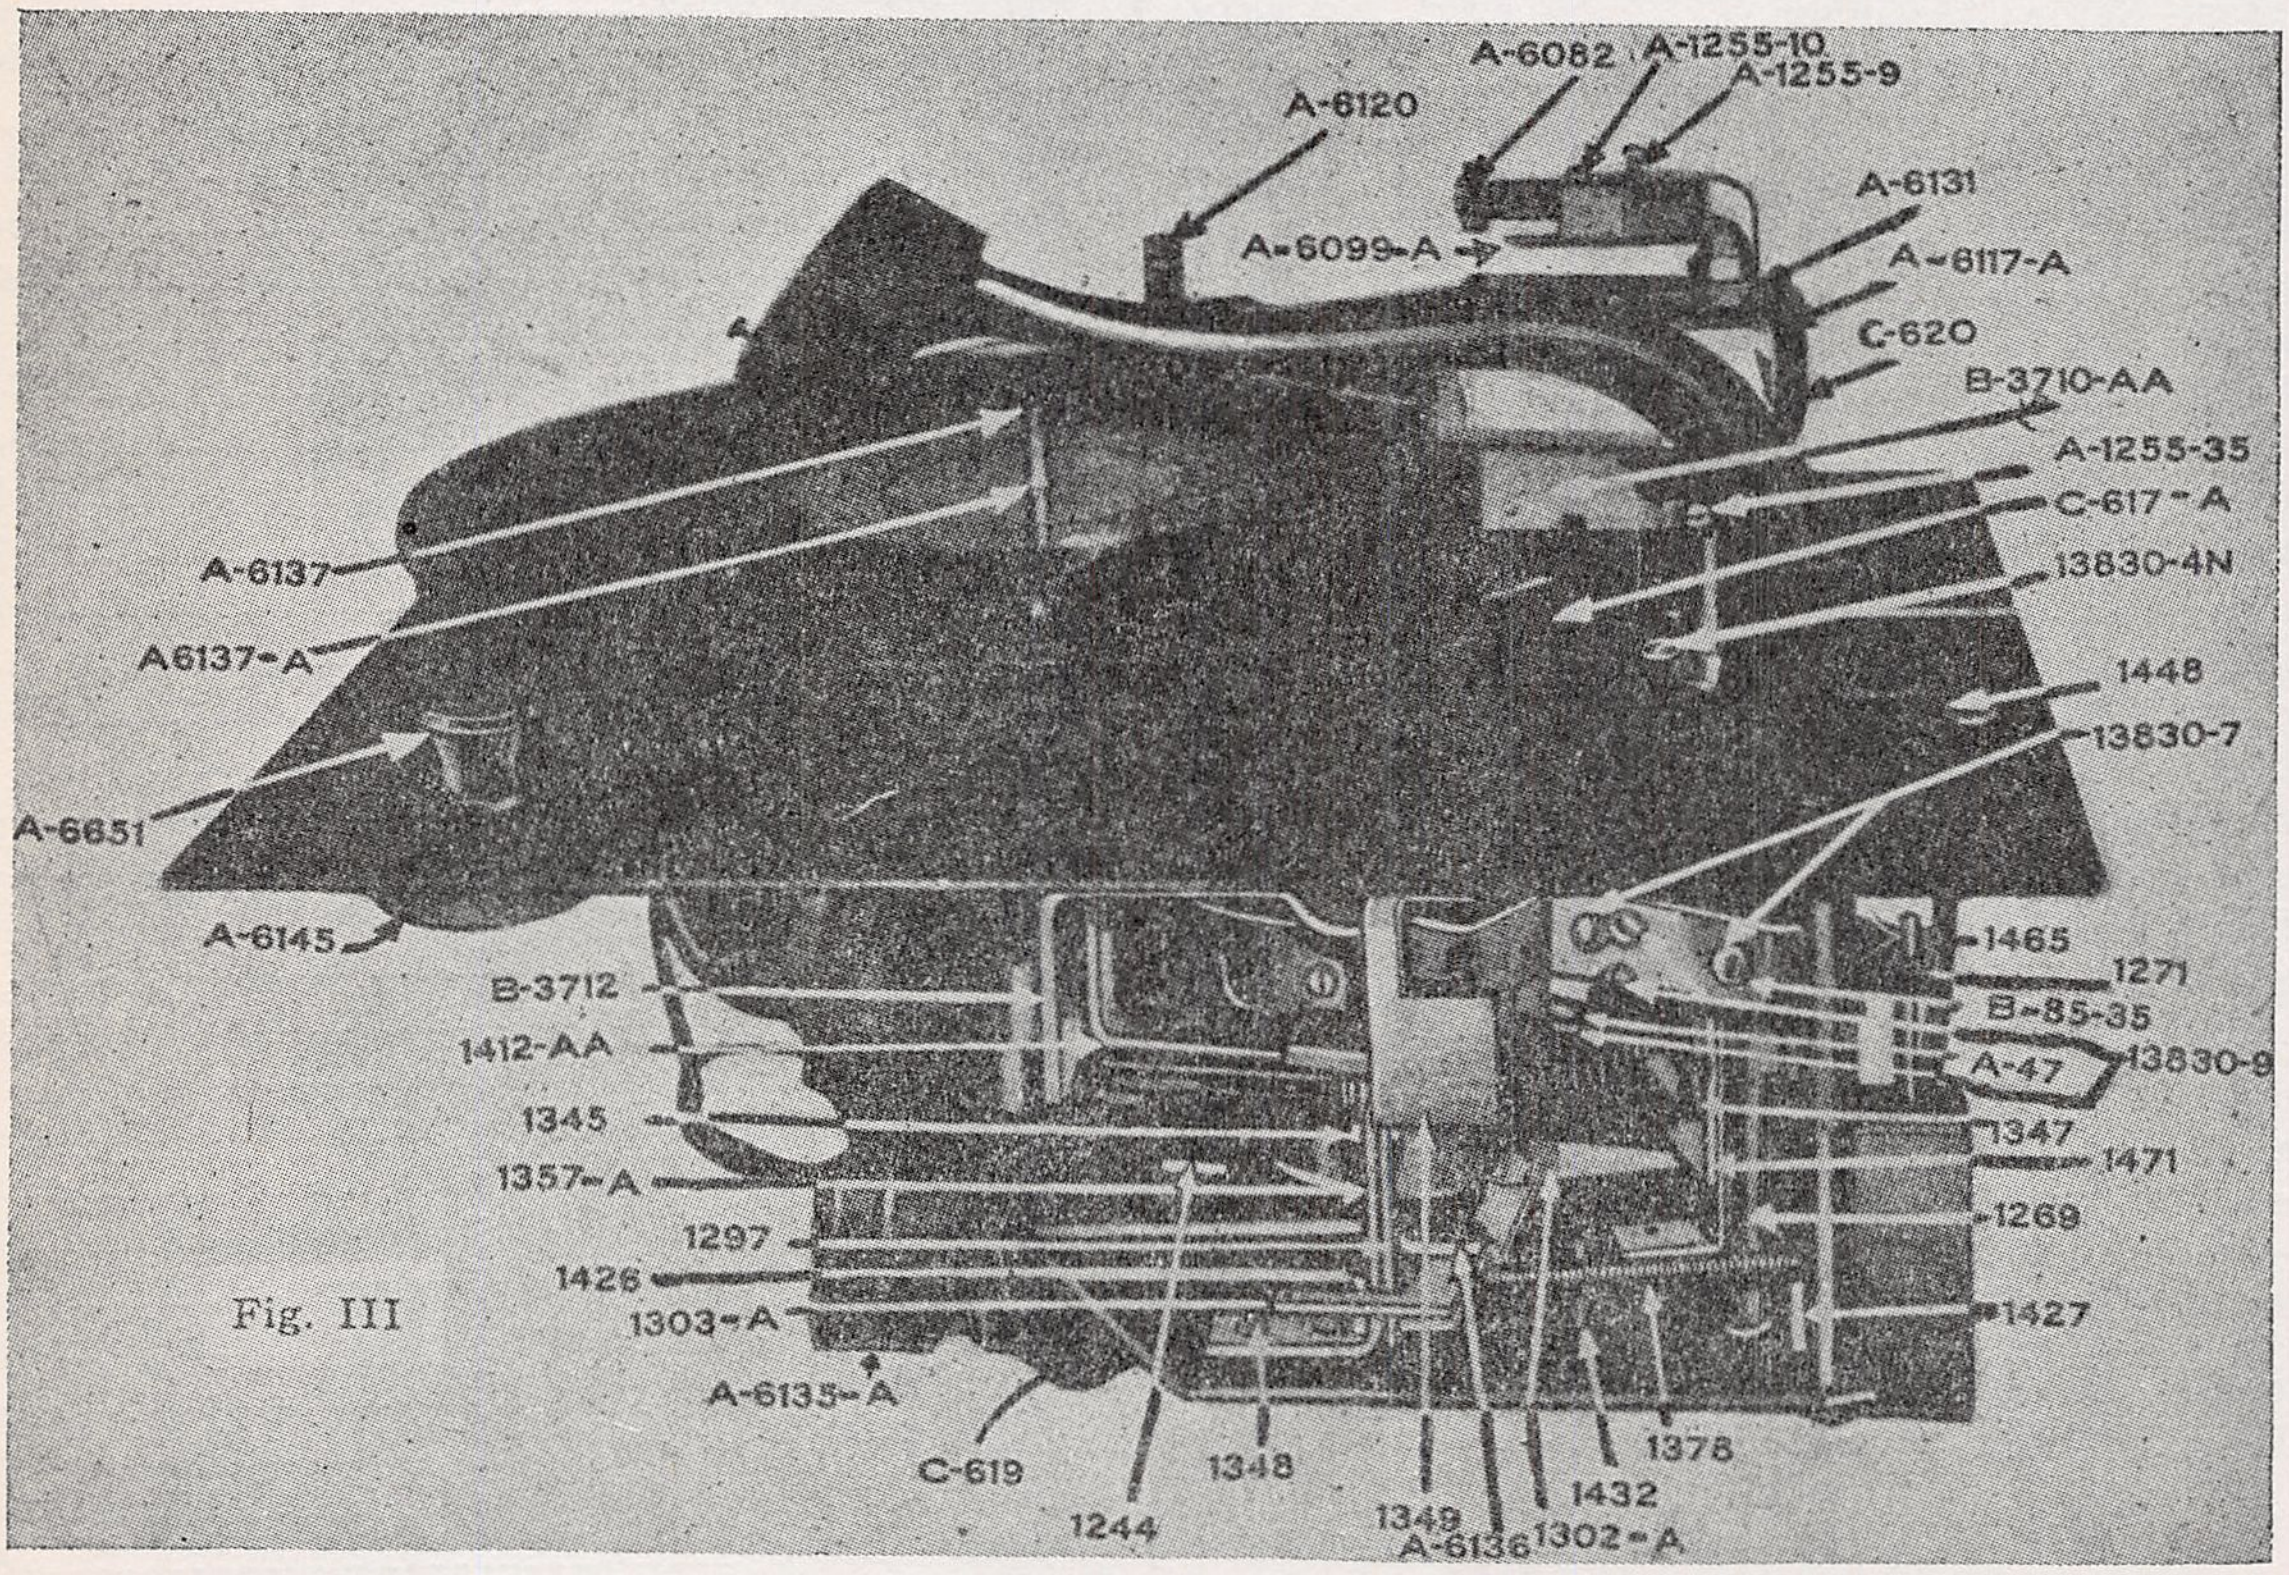
A-6082
A-1255-10
A-1255-9
A-6120
A-6099-A
A-6131
A-6117-A
C-620
B-3710-AA
A-1255-35
C-617-A
13830-4N
A-6137
A6137-A
1448
13830-7
A-6651
A-6145
1465
1271
B-85-35
A-47
13830-9
B-3712
1412-AA
1345
1357-A
1347
1471
1269
1297
1426
1303-A
1427
A-6135-A
C-619
1244
1348
1349
A-6136
1302-A
1432
1378

Fig. III

SPARKS WITHINGTON CO.

MODEL 31,32
Chassis Views

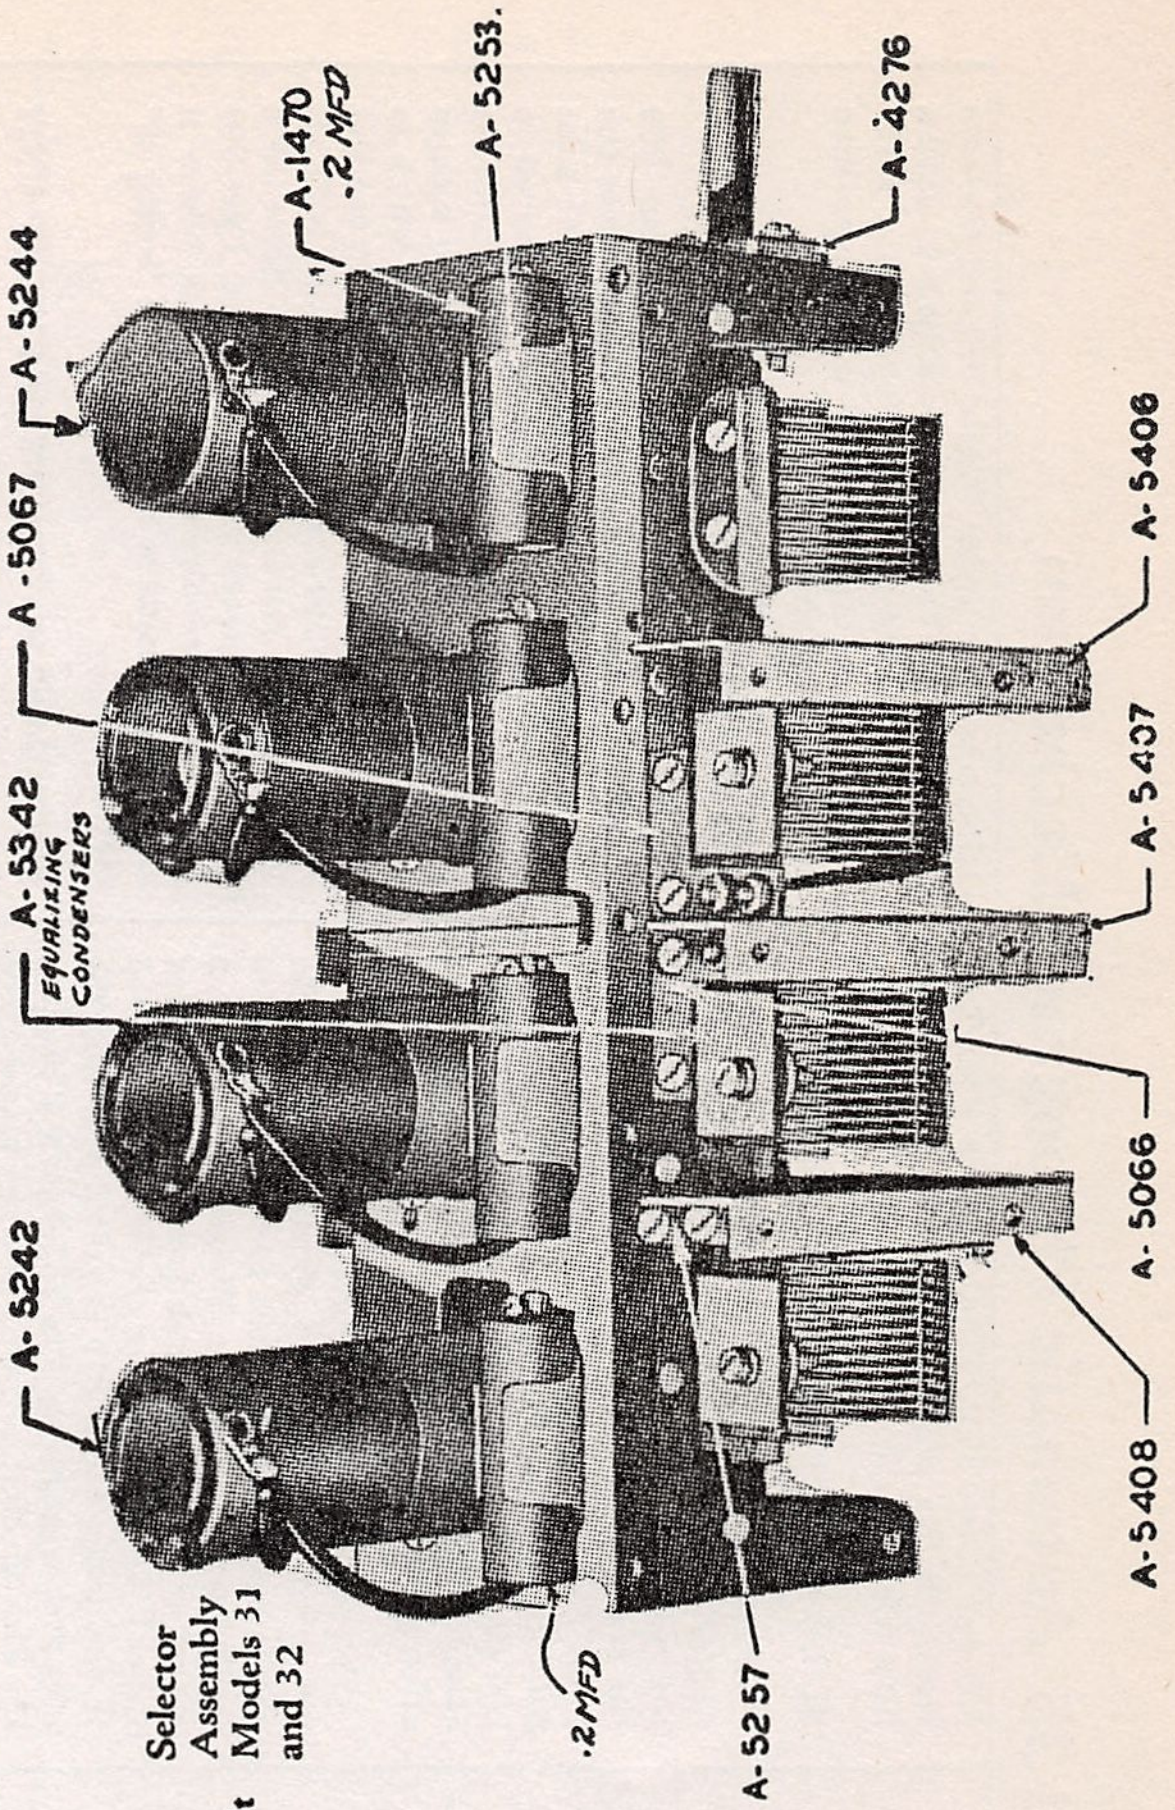
A-1470
.2 MFD
A-5253
A-4276
A-5244
A-5067
A-5342
EQUALIZING CONDENSERS
A-5406
A-5407
A-5066
A-5242
A-5408
.2 MFD
A-5257

Selector Assembly Models 31 and 32

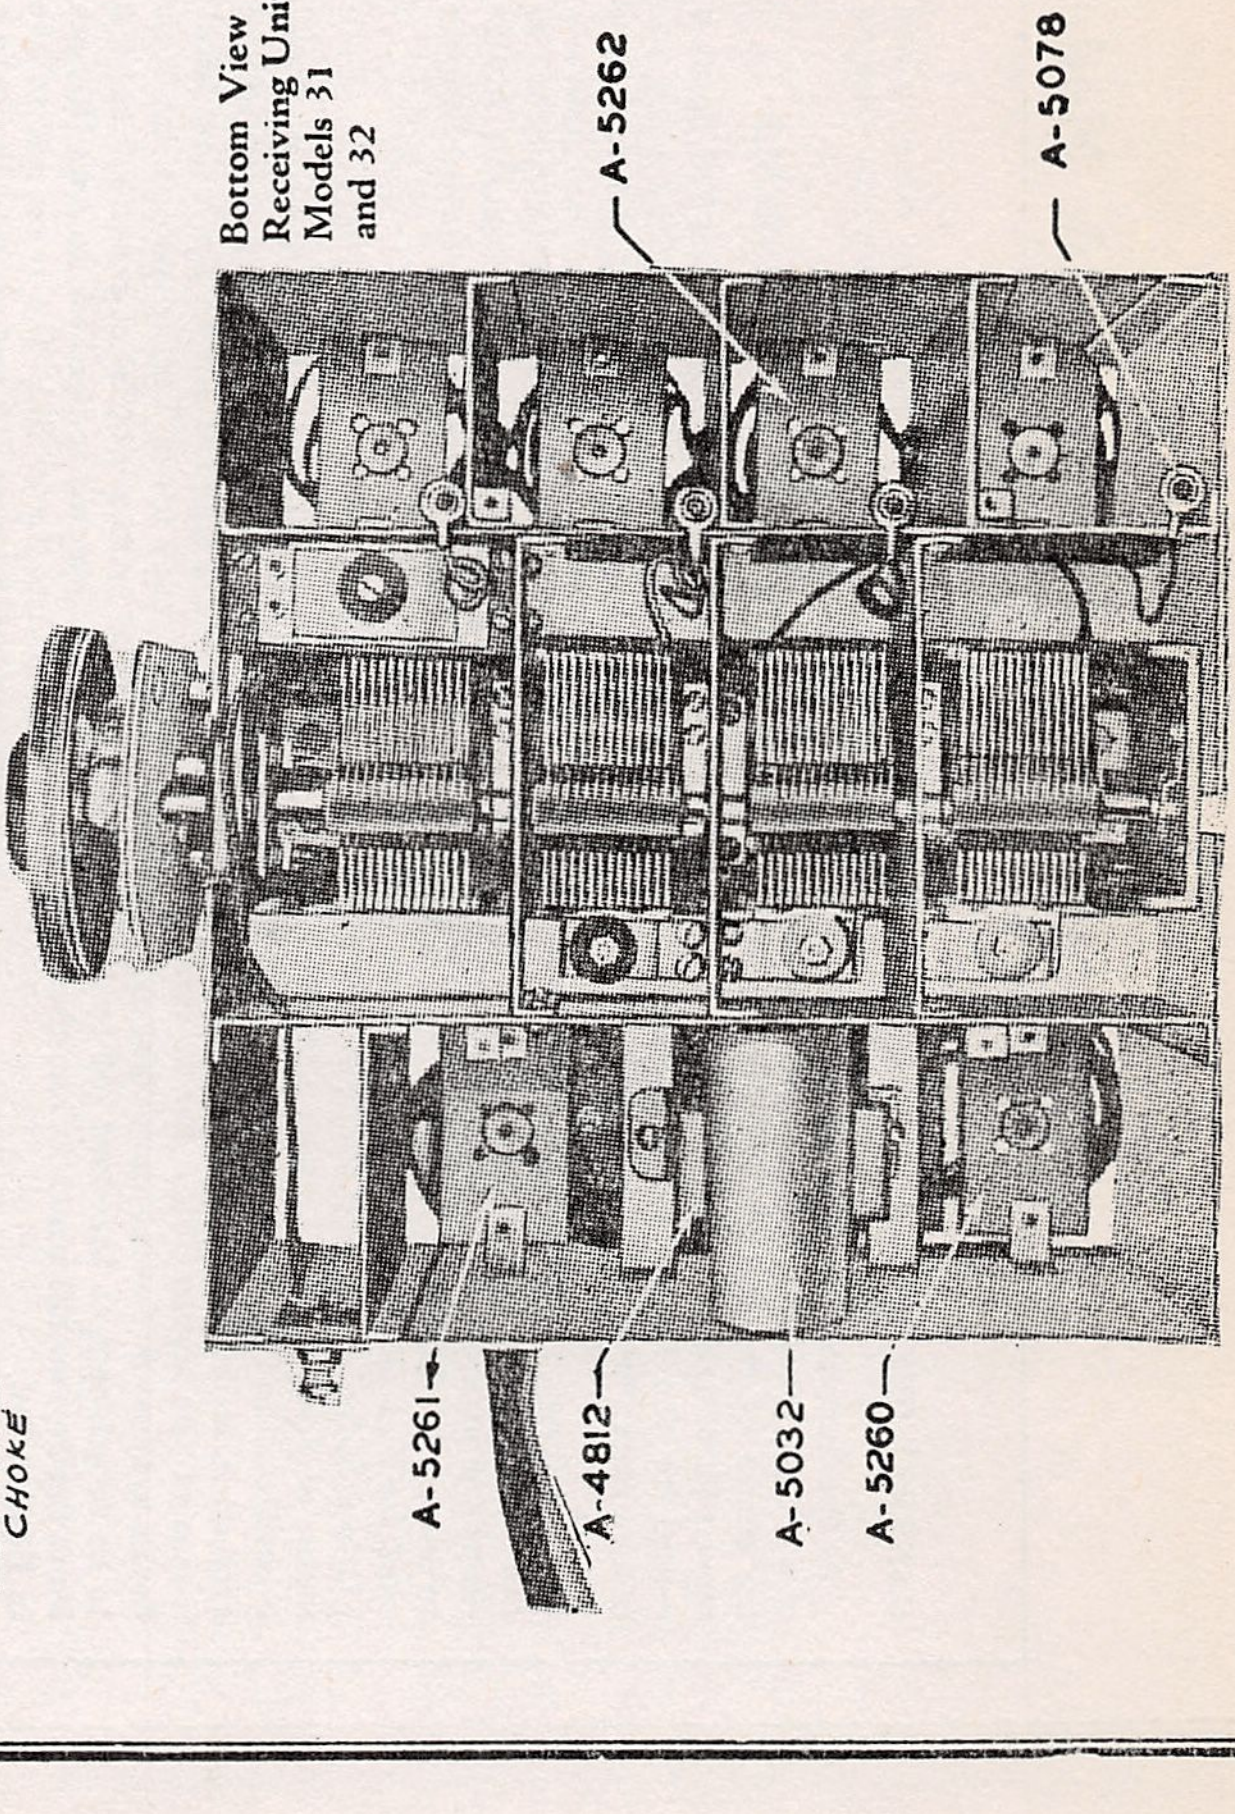
A-5262
A-5078
A-5261
A-4812
A-5032
A-5260

Bottom View Receiving Unit Models 31 and 32

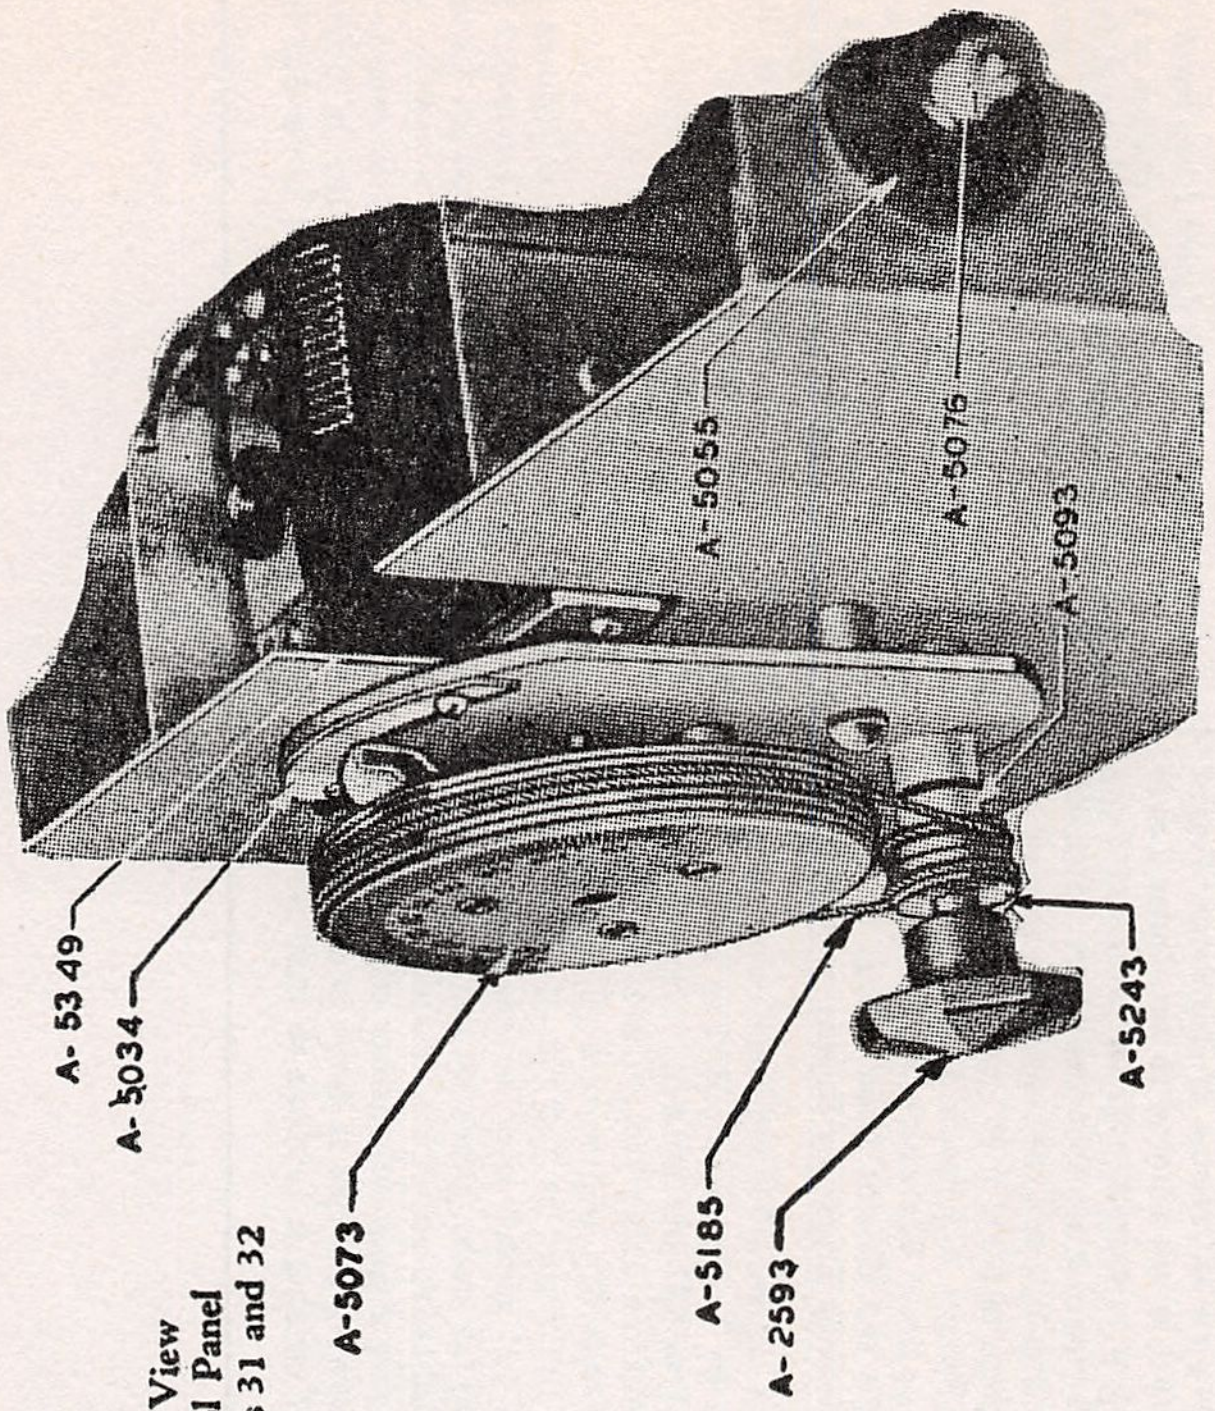
A-5055
A-5076
A-5093
A-5349
A-5034
A-5073
A-5185
A-2593
A-5243

Inside View Control Panel Models 31 and 32

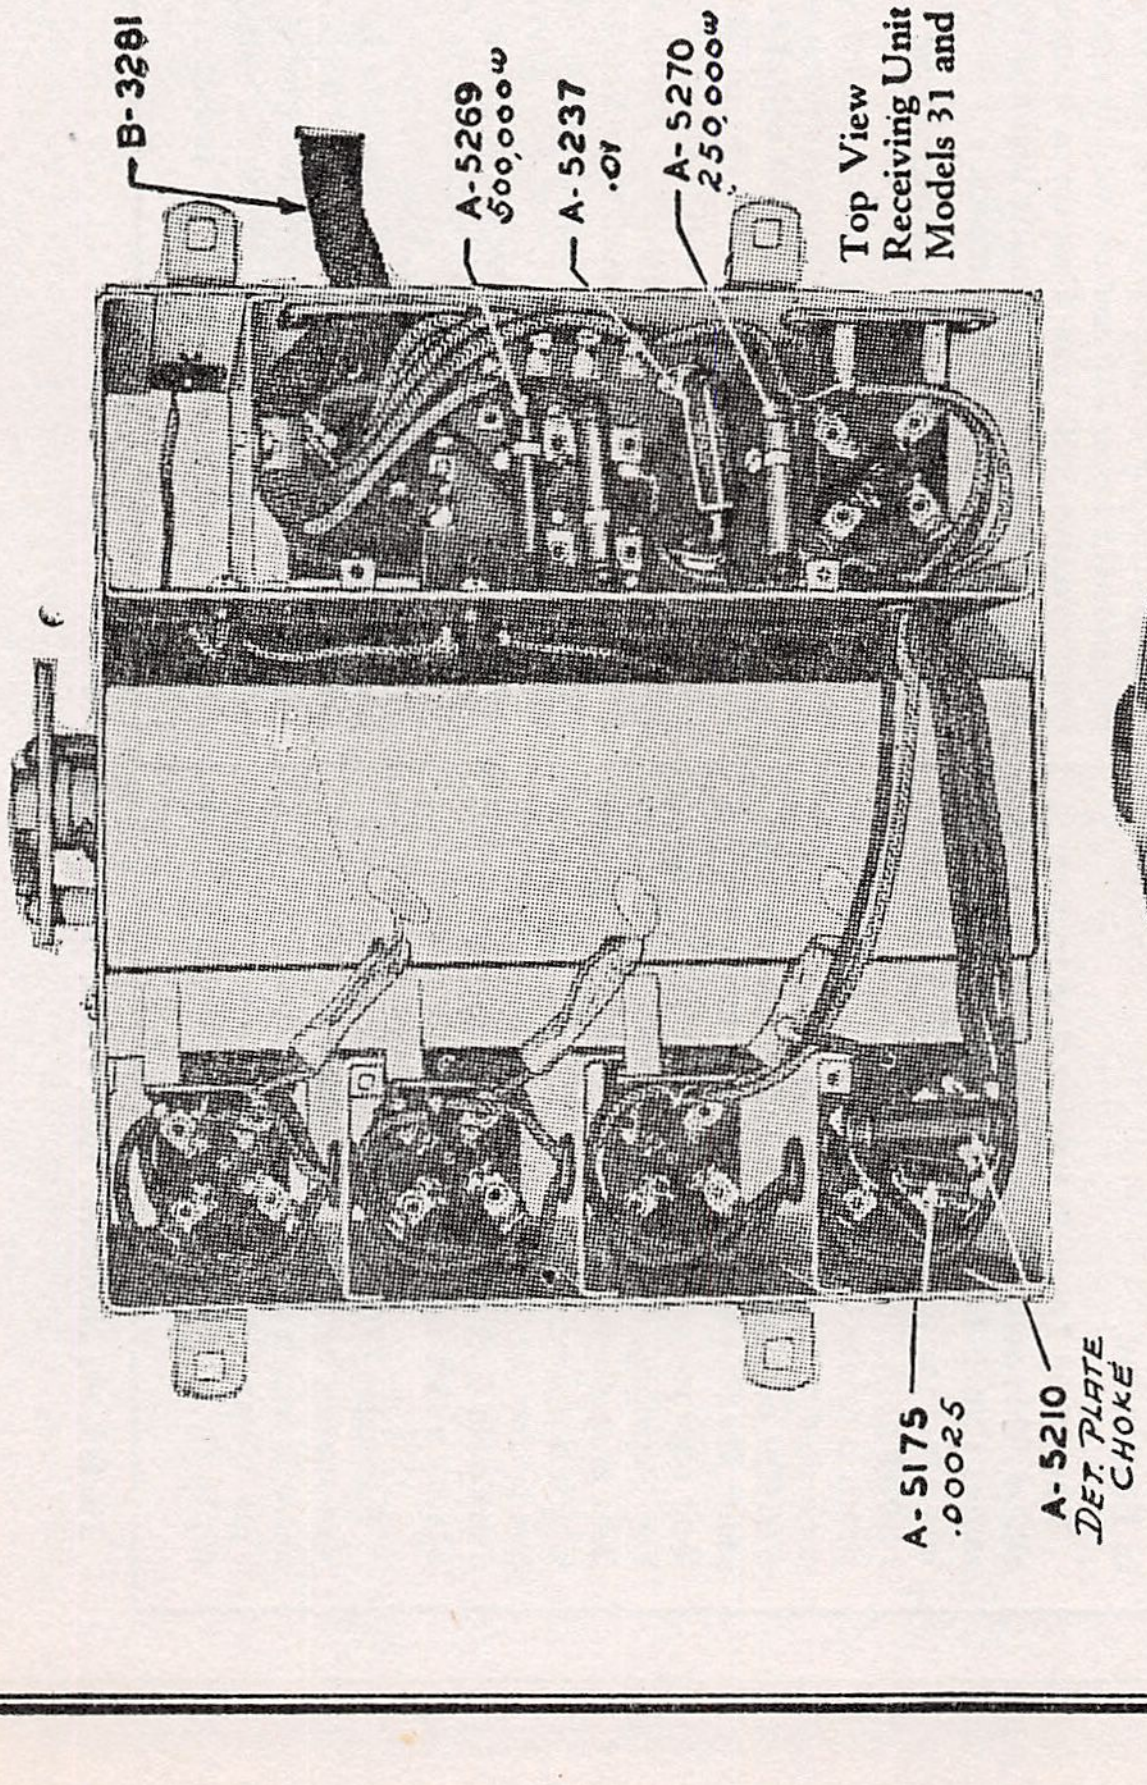
B-3281
A-5269
500,000Ω
A-5237
.01
A-5270
250,000Ω
A-5175
.00025
A-5210
DET. PLATE CHOKE

Top View Receiving Unit Models 31 and 32

Service Data for Sparton Ensemble Model 35 Automatic Phonograph Mechanism

GENERAL OPERATION

At the completion of the reproduction portion of a record, the needle moves into the groove in the center of the record. The first oscillatory movement of the needle on an eccentric groove record, or the feed-in movement on a spiral groove record trips Trip Lever 814, *figure 1*.

Dog 813 *figure 2* for eccentric groove records and Spiral Trip Dog 533 for spiral groove records is attached to Pick-up Arm Lever 811 by means of Adjusting Stud 860 and Adjustment for Pick-up Lever 812. Pick-up Arm Lever 811 is attached to Pick-up Unit 904 *figure 3* by means of Yoke 867 and Pick-up Arm 866 which is connected to Bracket 810 *figure 4*, onto which Pick-up Arm Lever 811 *figure 2* is attached by means of two screws 155 *figure 4*. This whole device is allowed to swing from right to left due to its attachment to Standard 788 by the Dog Point Set Screws 823 which fit into the Bearing in Bracket 810.

When Trip Lever 814 *figure 1* is tripped, it allows Throwout Lever 822 to drop, and this causes Clutch Lever 816-C to push Clutch 526 into the Pins of Clutch Collar 527-C which is revolving; acting through Worm Gear 514-C which is driven by the Worm in Drive Shaft 793 connected to Motor by means of Drive Spring 877. The connecting of this Clutch causes worm shaft 524-C[1] which is meshed with Cam Worm Gear 528[2] to cause Cam 789 to revolve and lower the Turntable to the "swing back" elevation. This is accomplished by Lift Lever 817 *figure 2* which is operated by Cam 789 *figure 1* acting on the bottom of Turntable Shaft 507-C, through Turntable Lift 516 *figure 2* and Adjustment 818 to which the Turntable Shaft is attached.

Turntable 510-C[3] *figure 1* is driven in a clockwise motion by means of Worm Gear 553-C (not shown), which is meshed with Drive Shaft 793. This Worm Gear is provided with inside lugs which fit into the grooves in Turntable Shaft 507-C[4] and allows the Shaft to raise up and down without interfering with its turning motion

DISCARD POSITION OF TURNTABLE

Returning to the action of Cam 789 *figure 1* as it rotates further, Turntable 510-C[3] drops to the discard position, allowing the record to come in contact with Discard Rubber 650 *figure 4*. This raises the record above Receiving Stud 508 *figure 3* and the rotation of Turntable 510-C[3] then causes the record to be discarded into the Receiving Compartment.

"SWING BACK" OF PICKUP UNIT

Before the Cam 789 *figure 1* allows the Turntable to be moved into the discard elevation, and while the Turntable is still in the "swing back" elevation, the Pick-up Unit is swung away from the record by means of Index Lever 815 *figure 2* which is connected to the Pick-up Arm through Pick-up Arm Lever 811. The inner end of the slot in Index Lever 815 acts on Pin 763 *figure 1* that revolves with the Cam in a clockwise motion. It is through this means that the Pick-up is swung away from the record.

SLIDE MOVEMENT FOR 10" RECORDS

When Cam 789 *figure 1* starts to revolve, Eject Arm 790 *figure 2* also starts to revolve as it is driven by Dog 522. Roller 552 attached to Eject Arm 790, travels in the slot in Drive Lever 550 and causes it to move from the left to right, which moves Eject Slide 835-C and brings the center of the record over Receiving Pin 508 *figure 3* in Turntable 510-C[3]. This motion is caused by Drive Lever 550 *figure 2* acting through Link 852 attached to Lever 865 which is pinned to Shaft 558 connected to Top Lever 853-C which acts on Transverse Lever 854-C through Link 856. The Transverse Lever is connected to the twelve inch record Regulating Lever 859 which is fastened to Eject Slide 835-C by means of the Stud in the "L" shaped slot. This Stud remains in the "L" end of Lever 859 and allows Slide 835-C to place a ten inch record in the proper position over Receiving Stud 508 *figure 3*

SLIDE MOVEMENT FOR 12" RECORDS

In case a twelve inch record is on the Slide, Centering Lever 850-C *figure 4* is pushed out by the record to a position where its tail end trips the twelve inch Regulating Lever 859 *figure 2*. Eject Slide 835-C moves forward, causing the Stud to leave the "L" end of the slot in Lever 859 allowing Eject Slide 835-C to travel just far enough to place a twelve inch record over Receiving Stud 508 *figure 3*.

Ten or twelve inch records can be used without discrimination. The engagement of the needle on ten or twelve inch records is controlled by Engaging Regulator Weight 872 *figure 4* acting on Cable 900 which is attached to Index Lever 815 *figure 2*. When the Weight is allowed to act, Index Lever 815 is pulled over and the long slot engages on Pin 763 *figure 1* causing the Pick-up Unit to swing into the proper place to engage on a 12" record. If Regulator Weight 872 *figure 4* is not allowed to act, Index Lever 815 *figure 2* is carried over by means of Drag Link 530 *figure 1* so that the short notch engages on Pin 763 and the needle engages at the proper place to start a 10" record. Whether or not the Weight 872 *figure 4* is allowed to act depends on Shaft 824 which, when under Weight 872, keeps the Weight from acting. Shaft 824 is controlled by Engaging Regulator Arm 787.

When a 12" record is fed out, Centering Lever 850-C *figure 4* is pushed out. The Finger on it carries Arm 787 out with it, swinging end of Shaft 824 from under Weight 872, allowing 872 to act. Shaft 824 will remain in this position until a 10" record is fed out of the Hopper. Thus, a 12" record may be repeated on the Turntable as many times as desired. When a 10" record is fed out of the Hopper, Eject Slide 835-C *figure 2* goes out farther over the Turntable, allowing Pin 887 to come in contact with Arm 787 causing it to move so that Shaft 824 takes a position under Weight 872 and prevents it from acting. This position will be held until a 12" record is fed out of the Hopper, thus, a 10" Record will continue to repeat until the position of Shaft 824 is changed.

RECEIVING POSITION OF TURNTABLE

Again returning to the motion of Cam 789 *figure 1* further rotation of this Cam causes the Turntable to rise to receiving elevation in time to receive the record which has been moved to the positions just described. The Turntable remains in this position while the Cam rotates further, allowing Roller 552 *figure 2* which is attached to Eject Arm 790, to travel in the slot in Drive Lever 550 and return Eject Slide 835-C to its original position. As soon as Eject Slide 835-C has returned to this position, Cam 789 *figure 1* has revolved to a position where it allows the Turntable to drop to the "swing in" elevation.

"SWING IN" MOVEMENT OF PICK-UP UNIT

At this time Pin 763 *figure 1* has revolved far enough to connect with either the ten or twelve inch notch in Index Lever 815 *figure 2*. Its further revolution causes the Pick-up to swing in over the record so the Needle rests on the smooth part of the record as the Turntable is raised to reproducing elevation by means of Cam 789 *figure 1*. Regulating Weight Lever 872 *figure 4* on Standard 788 now causes the Pick-up to move over from the smooth part of the record to the first reproducing groove. Reproduction of the record begins at once.

COCKING MECHANISM AND STOPPING CYCLE OF CAM

When the Pick-up Unit first swings away from the record, Pick-up Arm Lever 811 *figure 2* passes under the tail of Throwout Lever 822 *figure 1*, causing it to rise to a position where the notch in Trip Lever 814 is allowed to enter its proper place under the lug in Throw-out Lever 822, holding Throwout Lever 822 in this

Parts Lists Numbers: [1]524, [2]1026, [3]B-3700, [4]A-6000

(Continued)

position after the Pick-up Arm Lever 811 *figure 2* no longer supports it. When the Throwout Lever is raised to this position, a spring tension is created which pulls on Clutch Lever 816-C *figure 1* attempting to pull back and open Clutch 526 but Clutch Lever 816-C is held in the engaging position by means of Control Disc 864-C until the Cam has completed its entire revolution when a notch in the Control Disc allows the Clutch Lever to follow the urge of the spring and disengage the Clutch.

REPEATING

In case it is desired to play the same record over, the repeat Button *figure 5* is moved to the left. This moves Repeat Lever 809 *figure 2* causing it to press against Drive Dog 522 causing the Dog to recede and not catch on Eject Drive Arm 790. Eject Drive Arm 790 remains stationary and the Eject Slide does not move. The Cam revolves and the Turntable goes through all of the elevating positions except the discard elevation. Eject Arm 790 does not allow Roller 845 to drop to the discard elevation in Cam 789 *figure 1*, thus the record will be repeated until the Repeat Lever is moved to the right.

CONTROL OF RECORDS

When Eject Slide 835-C *figure 4* comes forward, the bottom record is caught between the "V" shaped plates 836 and 837 *figure 3* which brings the bottom record forward with the Slide. The other records slide over the top of these "V" shaped plates and remain in the Hopper. Only the bottom record is allowed to come out of the Hopper onto the Turntable. Other records are prevented from coming out by means of the two Admitters 819-C which are devised so they gauge themselves according to the thickness of the record. Thick, thin or warped records are fed out through the action of the admitters without injury to the records or mechanism. The admitters are held down against the record by means of springs and are adjusted by Screws 902. Back Stops 871 prevent records from sliding too far back in Hopper.

If a ten inch record is on the bottom and is not in the center, it is forced into the center by the two Centering Levers 850-C *figure 4* and 848-C *figure 3* which are held in position under tension by Springs 569 *figure 4* and 565 *figure 3*. These Springs are right and left hand and are attached to bushings in Studs, which have right and left hand threads and have a tendency to keep the spring from unscrewing the studs and nuts which hold them.

These Springs hold the Centering Lever against the Stop Pins which are set so that they hold the Centering Levers just the right distance to allow a 10" record to pass through with a slight amount of tension. In case a 12" record is on the bottom, these Springs are allowed to open up and the Centering Lever 850-C *figure 4* acts to trip the mechanism as described under the paragraph about Slide Movement for 12" records.

THE STARTING BUTTON

In starting or rejecting records, the Starting Button *figure 5* is pressed. When this Button is pressed slightly, it causes the contacts in switch 897-A *figure 2* to be spread apart which changes the fields in the motor from a series connection to a parallel connection for a greater starting torque. Pressing down further causes Lever 662 *figure 2* to act against Throwout Lever Trip 814 and trip mechanism which discards the record. This is the same action as though it were tripped with the Dogs 813 or 814.

THE CLUTCH SWITCH

Clutch Switch 896-A on Bracket 876 *figure 1* is operated by Clutch Lever 816-C by means of a fibre switch Opener, the purpose of this switch is to allow switch 898-A *figure 4* to be opened when the Clutch is engaged and the Cam is in motion. This carries the current whenever Clutch is in motion and the Pick-up Unit is not resting on a Record.

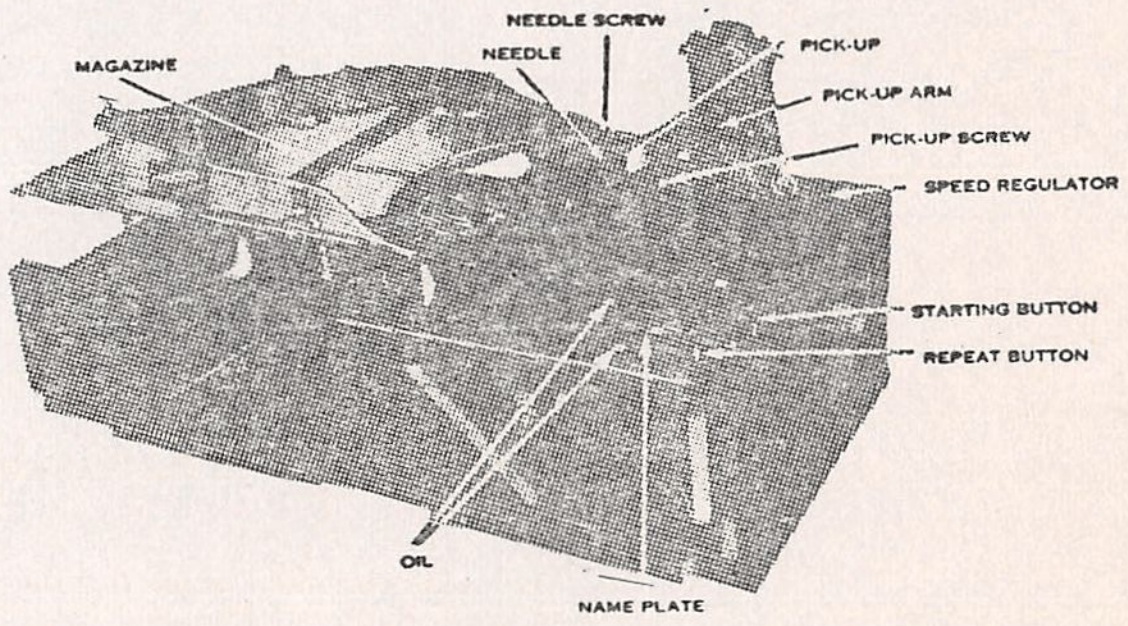

FIGURE 5

THE PICK-UP UNIT SWITCH

Pick-up Switch 898-A *figure 4* is attached to the back of Standard 788. When the Pick-up is not resting on a record, the Pick-up Arm drops down, swiveling at Trunnion Pin 641, *figure 3*. This allows the Brake Shoe on Pick-up Arm 866 to rise and press against Cork Insert 623 *figure 4* which is in the Brake Adjustment 585. This retards the Swinging action of the Pick-up and allows it to move only when forced by Index Lever 815 *figure 2*. This Brake Adjustment 585 can be regulated to bring the Pick-up to the height desired and is locked in place by a nut.

Through the center of Brake Adjustment 585 is a Fibre Rod 590 *figure 4* which also rests on Brake Shoe 974 and is raised whenever the Brake is closed. The upper end of this acts on the Contact Spring in Switch 898-A and causes it to open the Switch and break the entire circuit, acting the same as the Clutch Switch in parallel with it. With both of these switches open, the power supply is entirely cut off. Also, when this switch is open a contact is formed with the upper part of the Switch which cuts out Speed Regulating Rheostat No. 544 *figure 2* and allows the full power to be used while the Cam is in the operating cycle.

Lubrication on the Sparton Ensemble Model 35 Automatic Phonograph Mechanism

The Model 35 automatic phonograph mechanism is thoroughly lubricated at the factory when assembled and requires no oiling or greasing except as noted in this section.

THE ELECTRIC MOTOR ARMATURE SHAFT BEARINGS. Oil once every six months. Use nothing but light fine oil. Located on the upper side of the motor board *figure 5* are two (2) pipe plugs marked "OIL." Remove these plugs and inject a quantity of oil in the tubes under them. This lubricates both armature shaft bearings. The wick type oil wells used on the bearings keep the bearings well lubricated for a six (6) months period of normal operation.

KNUCKLES, JOINTS AND BEARINGS. Oil once every six (6) months. Use nothing but light fine oil.

AUTOMATIC MECHANISM GEARS AND BEARINGS. Grease once every year. Use nothing but a good grade of grease of about the consistency of vaseline, mixed with graphite if possible. In the main body casting, housing the turntable shaft and worm gears two (2) pipe (2) pipe plugs 687 *figure 4* marked "Grease." Remove these Plugs and inject a small quantity of grease in the openings.

Adjustments on the Sparton Ensemble Model 35 Automatic Phonograph Mechanism

ADMITTERS 819-C FIGURE 3. Use Adjusting Screw 902. Turning this screw in a clockwise direction raises the end of the admitter higher. The height of the admitter should be just enough to touch a record on the Eject Slide 835-C *figure* 2 when the slide is out.

ALIGNMENT OF MOTOR DRIVE SPRING 877, FIGURE 1 WITH DRIVE SHAFT 793. Two adjustments are provided for this purpose, one for aligning the spring if it is horizontally off center with the drive shaft and the other for alignment if the spring is vertically off center.

To align the spring if horizontally off center loosen the four collars (see 574-C, *figure 1*) on Screw Studs 797. This will then allow either side of Motor 895-C to be moved back or forth on the studs as the case demands. To align the spring if off center vertically, the Hex. nut on Stud 799 should be loosened or tightened depending upon whether the motor is to be tipped up or down.

PICKUP UNIT TO STRIKE AT PROPER PLACE ON RECORD. Use adjusting Screw 535 *figure 2*. The needle in the Pickup Unit should strike about ⅛ inch in from the outside edge of the record.

PICKUP UNIT TO TRIP MECHANISM ON SPIRAL GROOVE RECORD. Use adjusting Screw 812, *figure 2*. The mechanism should trip on a Columbia record with a 3⅝ inch diameter inner circle when the needle has followed the spiral groove to within 1/16 inch of the groove's maximum inward travel.

PICKUP UNIT TO TRIP MECHANISM ON ECCENTRIC GROOVE RECORD. Use Adjusting Screw 860, *figure 2*. The tip of eccentric trip Dog 813 should be 1/32 inch above trip lever 814 before it starts to travel in under this lever.

THE NEEDLE ENGAGING REGULATOR SHAFT 824. Loosen Set Screw in Arm 787, *figure 4*, and move Shaft 824 to the required position. When a 10" record is on the turn-table being reproduced, Shaft 824 should be under Weight 872.

THE HEIGHT OF NEEDLE ABOVE RECORD. Use Adjusting Screw 585, *figure 4*. This adjustment should be made immediately after the pickup unit has swung in and just before the turn-table rises. When the turn-table is in this position the needle should be ⅛ inch above the record.

THE HEIGHT OF THE TURN-TABLE. Use Adjusting Screws 818, *figure 2*. The height of the turn-table should be 2⅛ inches from top of motor board to top of turn-table when the turn-table is in the record receiving, or highest, position.

FORWARD STOP OF EJECT SLIDE. Use the screw in Top Lever 853-C, *figure 4*. The Eject Slide should carry out a 10 inch Victor record to a distance where the tip of Receiving Stud 508, *figure 3*, enters the hole in the record at the front side of the hole. If a 10" Columbia record is used to make this adjustment, the stud should enter the hole in the record at the rear side.

END PLAY IN CAM WORM SHAFT 524-C, FIGURE 1. Use Adjusting Screw 525-C. The end play in this shaft should be just enough to be detected when shaft is moved back and forth by hand. If end play is too great, the clutch will remain engaged and the mechanism will not automatically stop when the last record has been reproduced.

PICKUP SWITCH 898-A, FIGURE 4. This switch is adjusted by loosening the two screws turntable shaft and worm gears are located two by which it is fastened to standard 788, and moving it up or down so the contacts will close when the pickup unit is on a record in reproducing position.

CLUTCH SWITCH 896-A, FIGURE 1. This switch is adjusted by loosening the two screws which hold Bracket 876 to the body casting and moving the bracket one way or the other so the contacts will close when clutch 526 is in gear. Clutch 526 is placed in gear immediately after a record has been discarded automatically or manually.

END PLAY IN DRIVE SHAFT 793, FIGURE 1. Use Adjusting Screw 706-C, *figure 4*. The end play in this shaft should be just enough to be detected when shaft is moved back and forth by hand. If end play is too great, the reproduction of a record will have a wavering effect.

SPRING TENSION ON CENTERING LEVER 848-C and 850-C, FIGURE 4 and 3, RESPECTIVELY. Use Adjusting Screws 847 and 849, *figure 4*. The spring tension on these levers must be equal and sufficient to hold the center of a record in a line with Receiving Stud 508, *figure 3*. If the tension is insufficient or unequal, Eject Slide 835-C, *figure* 2, will not center the record over turn-table 510-C. Loosen these screws and turn them to the right or left to increase or decrease tension as the case demands.

(Continued)

SPARKS WITHINGTON CO.

MODEL 35
Chassis Views

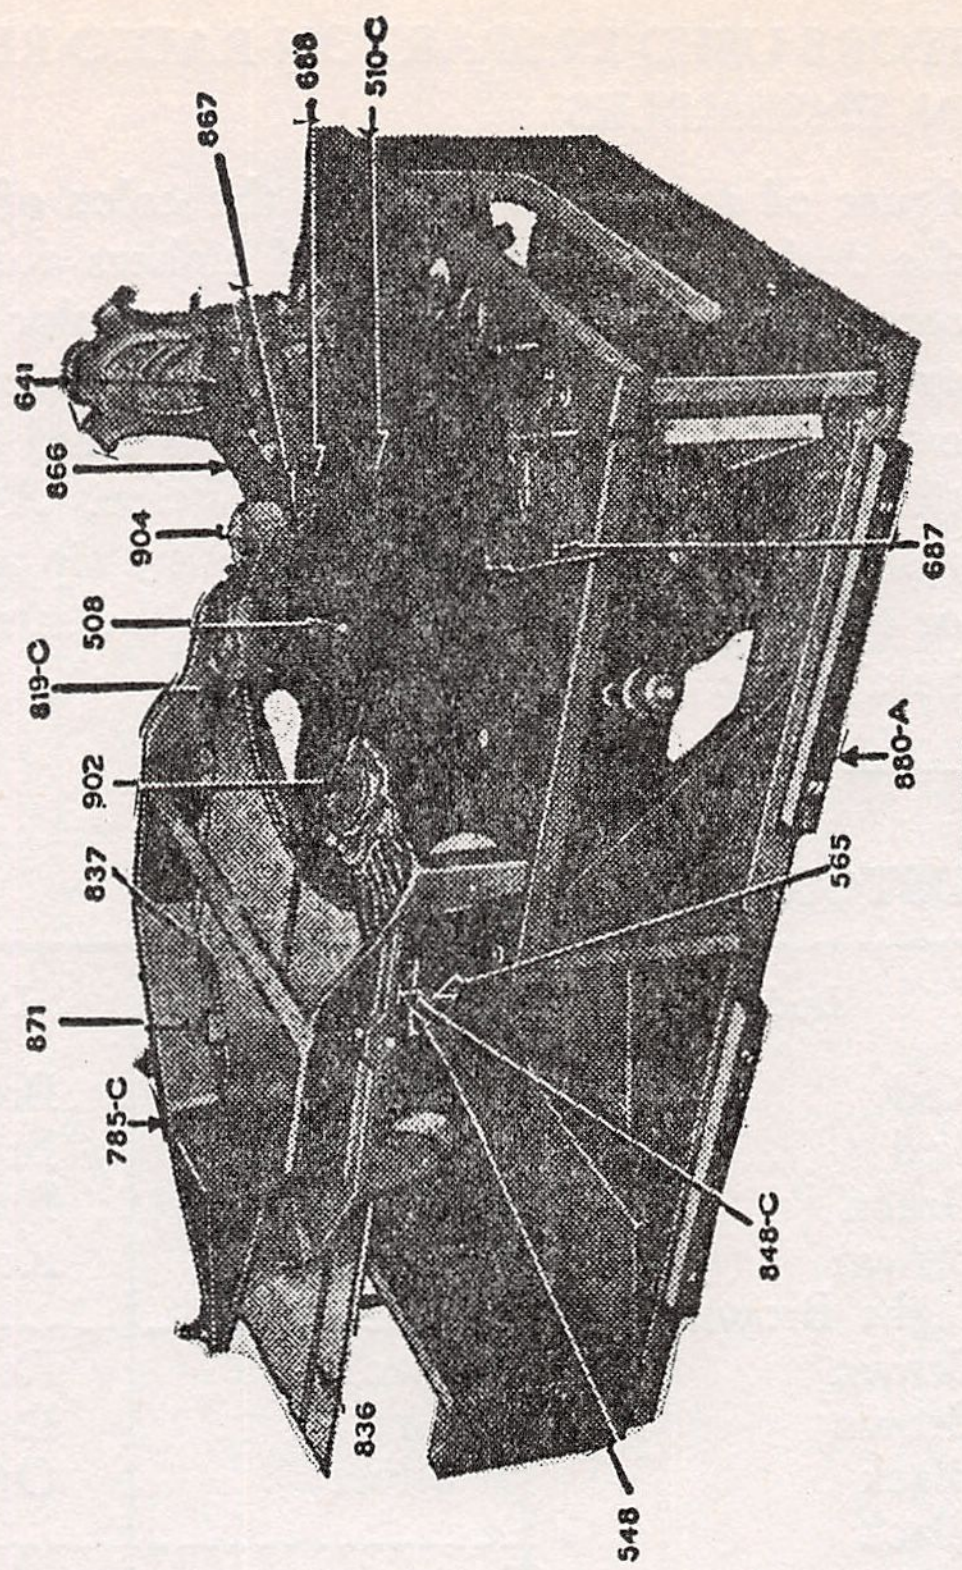
641
866
904
508
819-C
902
837
871
785-C
867
688
510-C
687
880-A
565
848-C
548
836

FIGURE 3

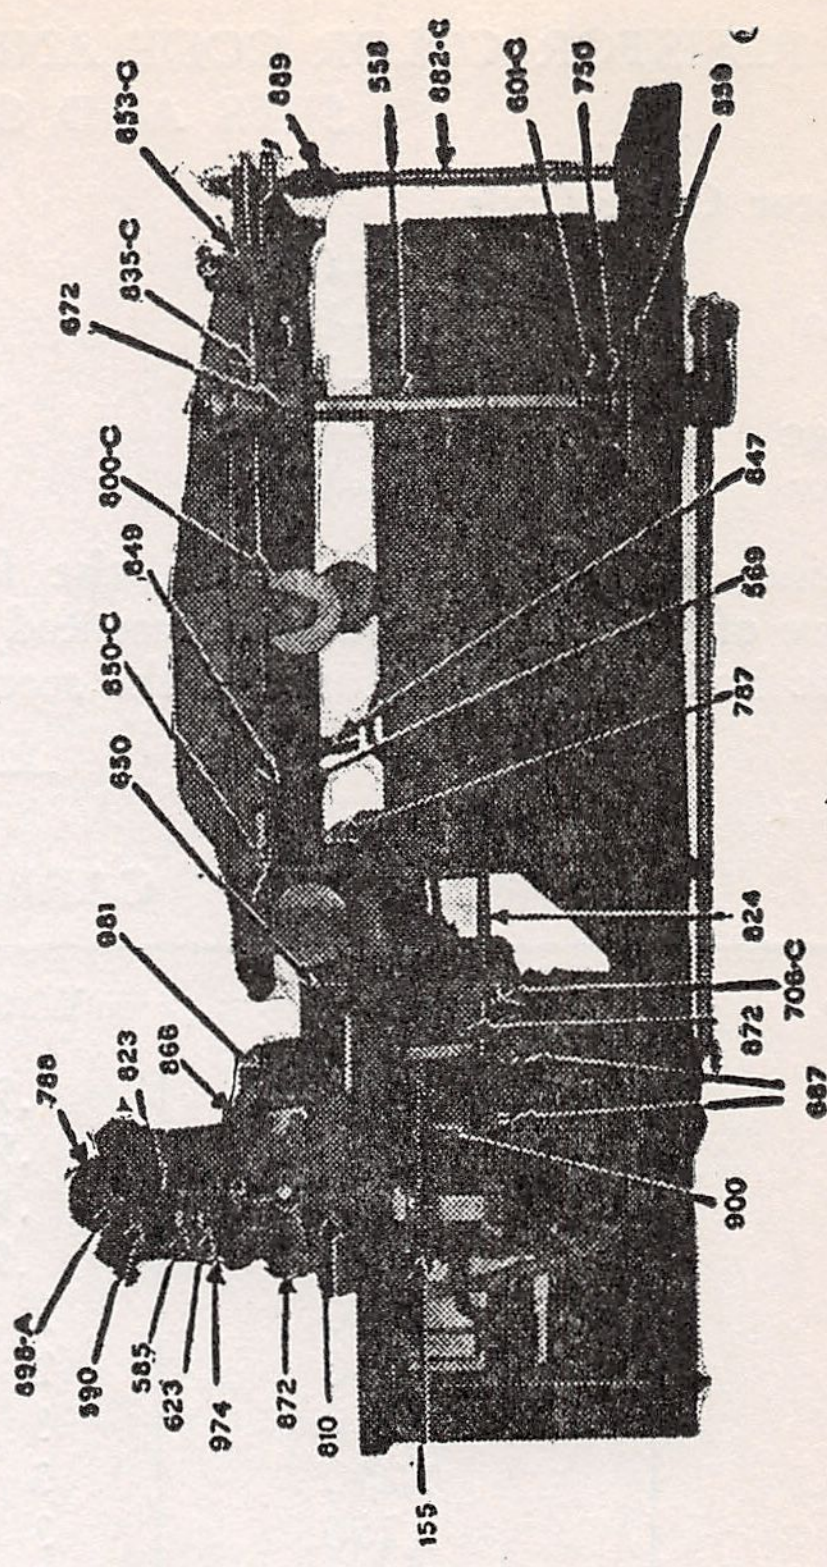
653-C
689
558
882-C
601-C
730
559
672
835-C
800-C
849
850-C
850
981
788
823
866
898-A
590
585
623
974
872
810
155
647
589
787
824
706-C
872
687
900

FIGURE 4

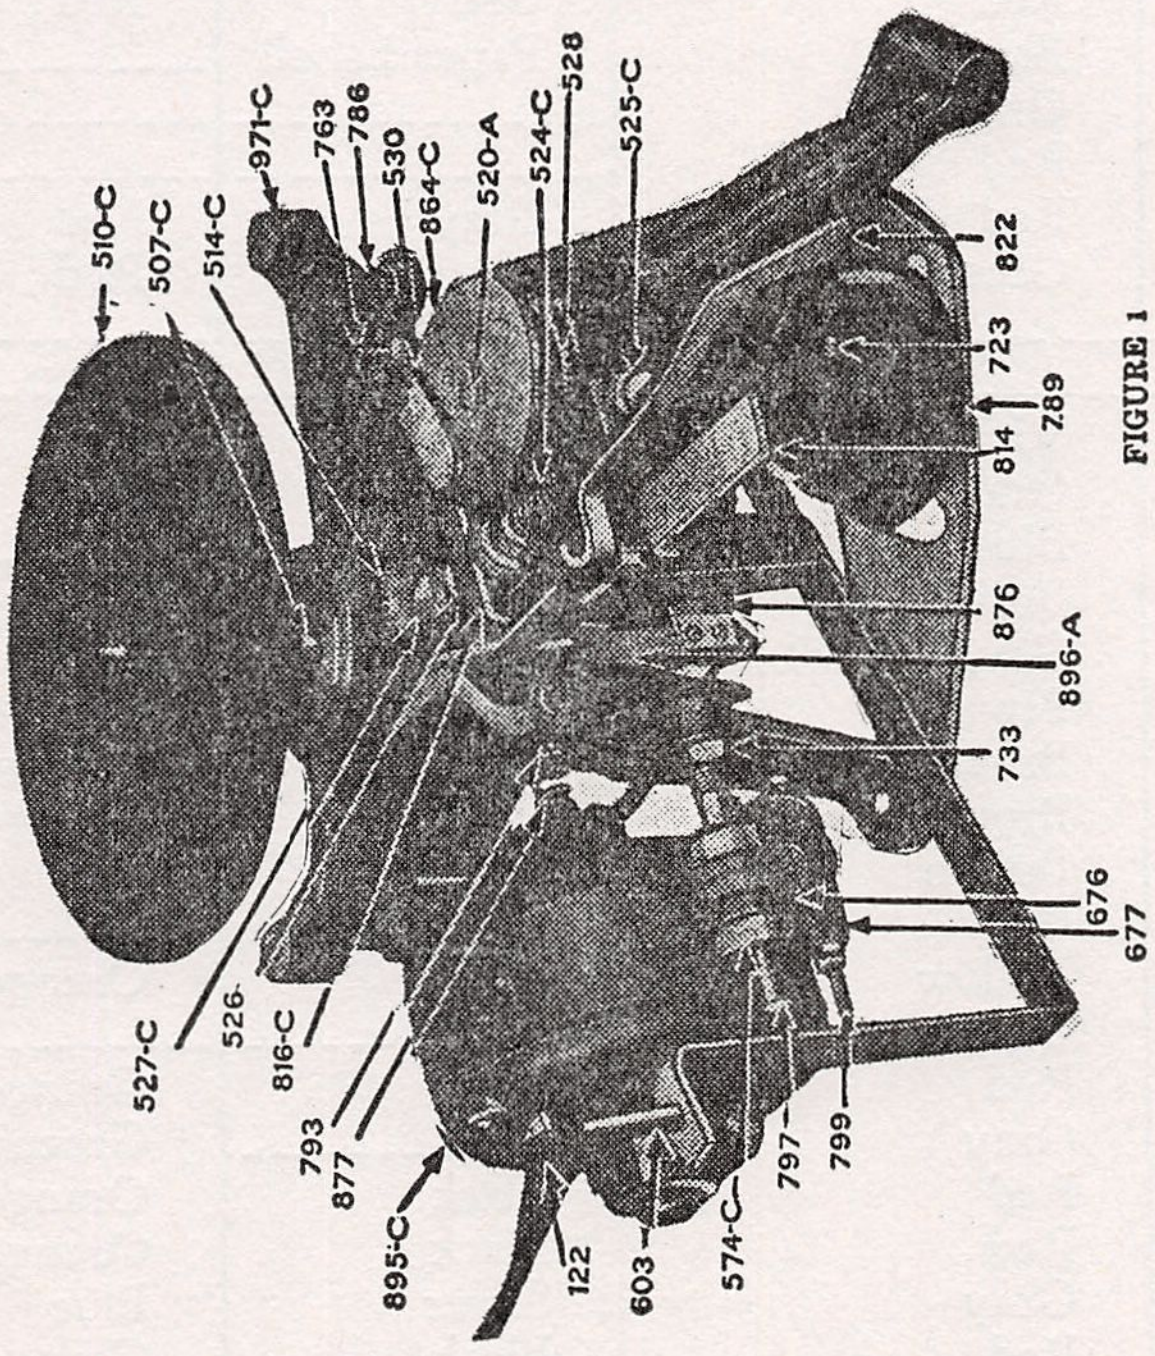
510-C
507-C
514-C
971-C
763
786
530
864-C
520-A
524-C
528
525-C
822
723
789
814
876
896-A
733
676
677
527-C
526
816-C
793
877
895-C
122
603
574-C
797
799

FIGURE 1

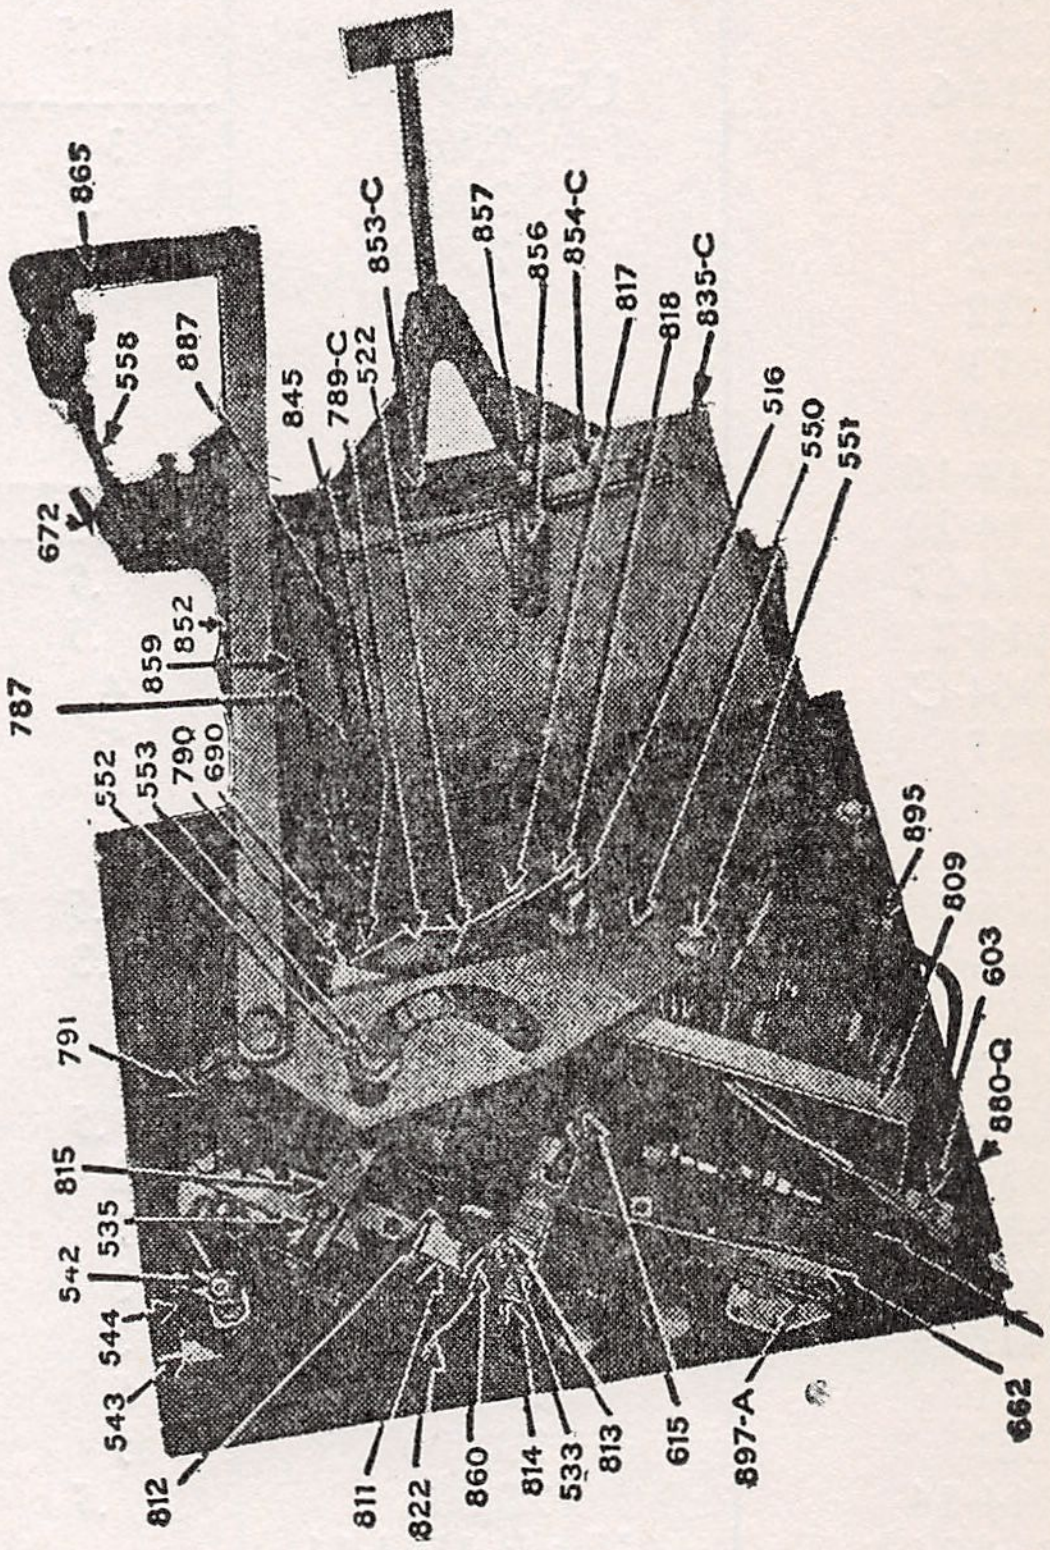
865
558
887
672
845
789-C
522
853-C
857
856
854-C
817
818
835-C
516
550
551
787
859
852
552
553
790
690
791
815
535
542
544
543
812
811
822
860
814
533
813
615
897-A
662
797
880-C
603
809
895

FIGURE 2

SPARKS WITHINGTON CO.

STANDARD RESISTOR COLOR CODE AND RESISTORS USED IN SPARTON RADIO RECEIVING SETS AND SPARTON ENSEMBLES

Standard Resistor Color Code

- 0—Black
- 1—Brown
- 2—Red
- 3—Orange
- 4—Yellow
- 5—Green
- 6—Blue
- 7—Violet
- 8—Gray
- 9—White

To determine the value of a resistor, the first significant figure of resistance value is represented by the color of the body of the resistor, and the second figure of resistance value by the color of the tip of the resistor. The number of ciphers following the second figure is determined by the color of the dot or stripe in the center of the body of the resistor. For example, a 20,000 ohm resistor has a red body, black tip, with orange dot or orange stripe. A 2,200 ohm resistor would be red body, with red tip and red dot, or red stripe, and as all colors are the same, it would be a single color resistor.

CARBON RESISTORS

Part No.	Ohms	Watts	Body	Tip	Dot Stripe
B-4114-11	200	.5	Red	Black	Brown
B-4114-3	250	.5	Red	Green	Brown
B-4114-1	500	.5	Green	Black	Brown
B-4114-13	1,000	.5	Brown	Black	Red
A-3397	1,000	2	Light Brown		
A-3397	1,000	2	Brown	Black	Red
A-3750	1,250	3	Brown	Orange	Red
A-3750	1,250	3	Black	Silver	Orange
A-3750	1,250	3	Black		
A-3750	1,250	3	Slate		
A-3325	1,700	2	Dark Brown		
A-3639	1,700	5	Gray	Silver	
A-4613	1,700	1	Brown	Violet	Red
A-5550	2,000	.5	Red	Black	Red
B-4114-6	Use A-5550				
A-5622	2,500	3	Red	Green	Red
A-3232	2,800	.5	Black	Paper Label	
A-4122	2,800	.5	Gray		
A-4122	2,800	.5	Red		
A-4653	2,800	.5	Red	Gray	Red
A-5180	5,000	.5	Green	Black	Red
B-4114-16	Use A-5180				
B-4114-20	Use A-5180				
B-4114-25	7,000	.5	Violet	Black	Red
B-4114-2	8,000	.5	Gray	Black	Red
A-3764-C	10,000	4	Blue		
A-3735	10,000	5	Brown	Black	Orange
A-3735	10,000	5	Gray	Silver	Blue
A-4614	10,000	1	Brown	Black	Orange
B-4114-7	10,000	.5	Brown	Black	Orange
B-4114-5	10,000	.3	Brown	Black	Orange
A-4107	15,000	5	Brown	Green	Orange
A-4107	15,000	5	Gray	Silver	
B-4114-23	15,000	.5	Yellow	Black	Orange
A-2934	20,000	2	Green		
A-2934	20,000	2	Red	Black	Orange
A-3422	20,000	3	Gray		Green
A-3422	20,000	3	Red	Black	Orange
A-4261	20,000	5	Red	Black	Orange
A-4261	20,000	5	Gray	Silver	Blue
B-4114-14	20,000	.5	Red	Black	Orange
B-4114-24	Use B-4114-14				
A-7111	25,000	4.5	Red	Green	Orange

SPARKS WITHINGTON CO.

CARBON RESISTORS—Continued

Part No.	Ohms	Watts	Body	Tip	Dot Stripe
B-4114-18	25,000	.5	Red	Green	Orange
A-5139	30,000	1	Orange	Black	
B-4114-19	30,000	.5	Orange	Black	Orange
B-4114-22	40,000	.5	Yellow	Black	Orange
A-3423	50,000	3	Gray		Red
A-3423	50,000	3	Green	Black	Orange
B-4114-12	50,000	.5	Green	Black	Orange
B-4114-15	60,000	.5	Blue	Black	Orange
A-5354	100,000	1	Brown	Black	Yellow
B-4114-10	100,000	.5	Brown	Black	Yellow
B-4114-8	150,000	.5	Brown	Green	Yellow
A-2702-5	200,000		Glass		
B-4114-17	200,000	.5	Red	Black	Yellow
A-1514	250,000		Glass		
A-4234	250,000	1	Red	Green	Yellow
A-5270	Use A-4234				
B-4114-4	250,000	.5	Red	Green	Yellow
A-2702-6	Use A-1514				
A-5269	500,000	1	Green	Black	Yellow
B-4114-9	500,000	.5	Green	Black	Yellow
A-5138	1,000,000	1	Brown	Black	Green
B-4114-21	1,000,000	.5	Brown	Black	Green
A-2702-11	1,000,000		Glass		
A-1515	3,000,000		Glass		
A-2702-13	Use A-1515		Glass		

WIRE WOUND RESISTORS

Part No.	Ohms	Watts	Color	Type	Part No.	Ohms	Watts	Color	Type
A-7411	.43			Special	A-7118	250	1	Blue	Wire Wound
A-6890	.54	2.5	5-23/32"	Wire	A-5137	330	1	Gray	Wire Wound
A-6889	.67	2.5	7-7/64"	Wire	A-3536	900	10	Black	Wire Wound
A-5863	2	5	Blue	Wire Wound	A-7119	1,050	7.5	Blue	Wire Wound
A-4363	7	20	Blue	Wire Wound	A-7018	1,250	4		Candohm
A-7509	8-9			Wire Wound	A-4974	1,250	5	Gray	Candohm
A-5140	(.11 ohms	per ft.	at 20° C.)	Wire	A-6617	1,500	2	Brown	Braided
A-5862	12	10	Blue	Wire Wound	A-3383	3,000	10	Black	Wire Wound
A-4364	12	30	Blue	Wire Wound	A-3535	7,000	10	Black	Wire Wound
A-5890	14	10	Blue	Wire Wound	A-4583	Use A-3535			
A-4366	15	50	Blue	Wire Wound	A-2043	10,000	6	Black	Wire Wound
A-7421	35	.25	Red	Braided	A-4356	20,000		Blue	Wire Wound
A-5889	54	175	Blue	Wire Wound	A-3811	30,000	.5	Black	Wire Wound
A-5861	57	175	Blue	Wire Wound	A-3642	(6.04 ohms	per ft.	at 20° C.)	Wire Wd. Tap.
A-4365	63	10	Blue	Wire Wound	A-4260	2,000-7,000	20	Black	Wire Wd. Tap.
A-3590	110	1	Black	Wire Wound	A-5426	1,800-2,400	8	Blue	Wire Wd. Tap.
A-4670	110	1	Black	Wire Wound	A-5870	Use A-5426			
A-4915	110	1	Black	Candohm	A-6619	2,900-3,000	15	Blue	Wire Wd. Tap.
A-7427	160	1	Blue	Wire Wound	A-7120	2,400-3,200	4.5	Blue	Wire Wd. Tap.
A-6618	200	.5	Red	Braided	A-7461	3,900-4,300		Blue	Wire Wd. Tap.
A-5502	200	1	Red	Candohm	A-6977	5,500-6,000	7	Blue	Wire Wd. Tap.
A-6976	230	3	Blue	Wire Wound	A-7462	60-220-2,100		Blue	Wire Wd. Tap.

MODEL 40
Schematic
Voltage

SPARKS WITHINGTON CO.

SPARTON MODEL 40 SCHEMATIC DIAGRAM

(AUTOMOBILE RECEIVER)

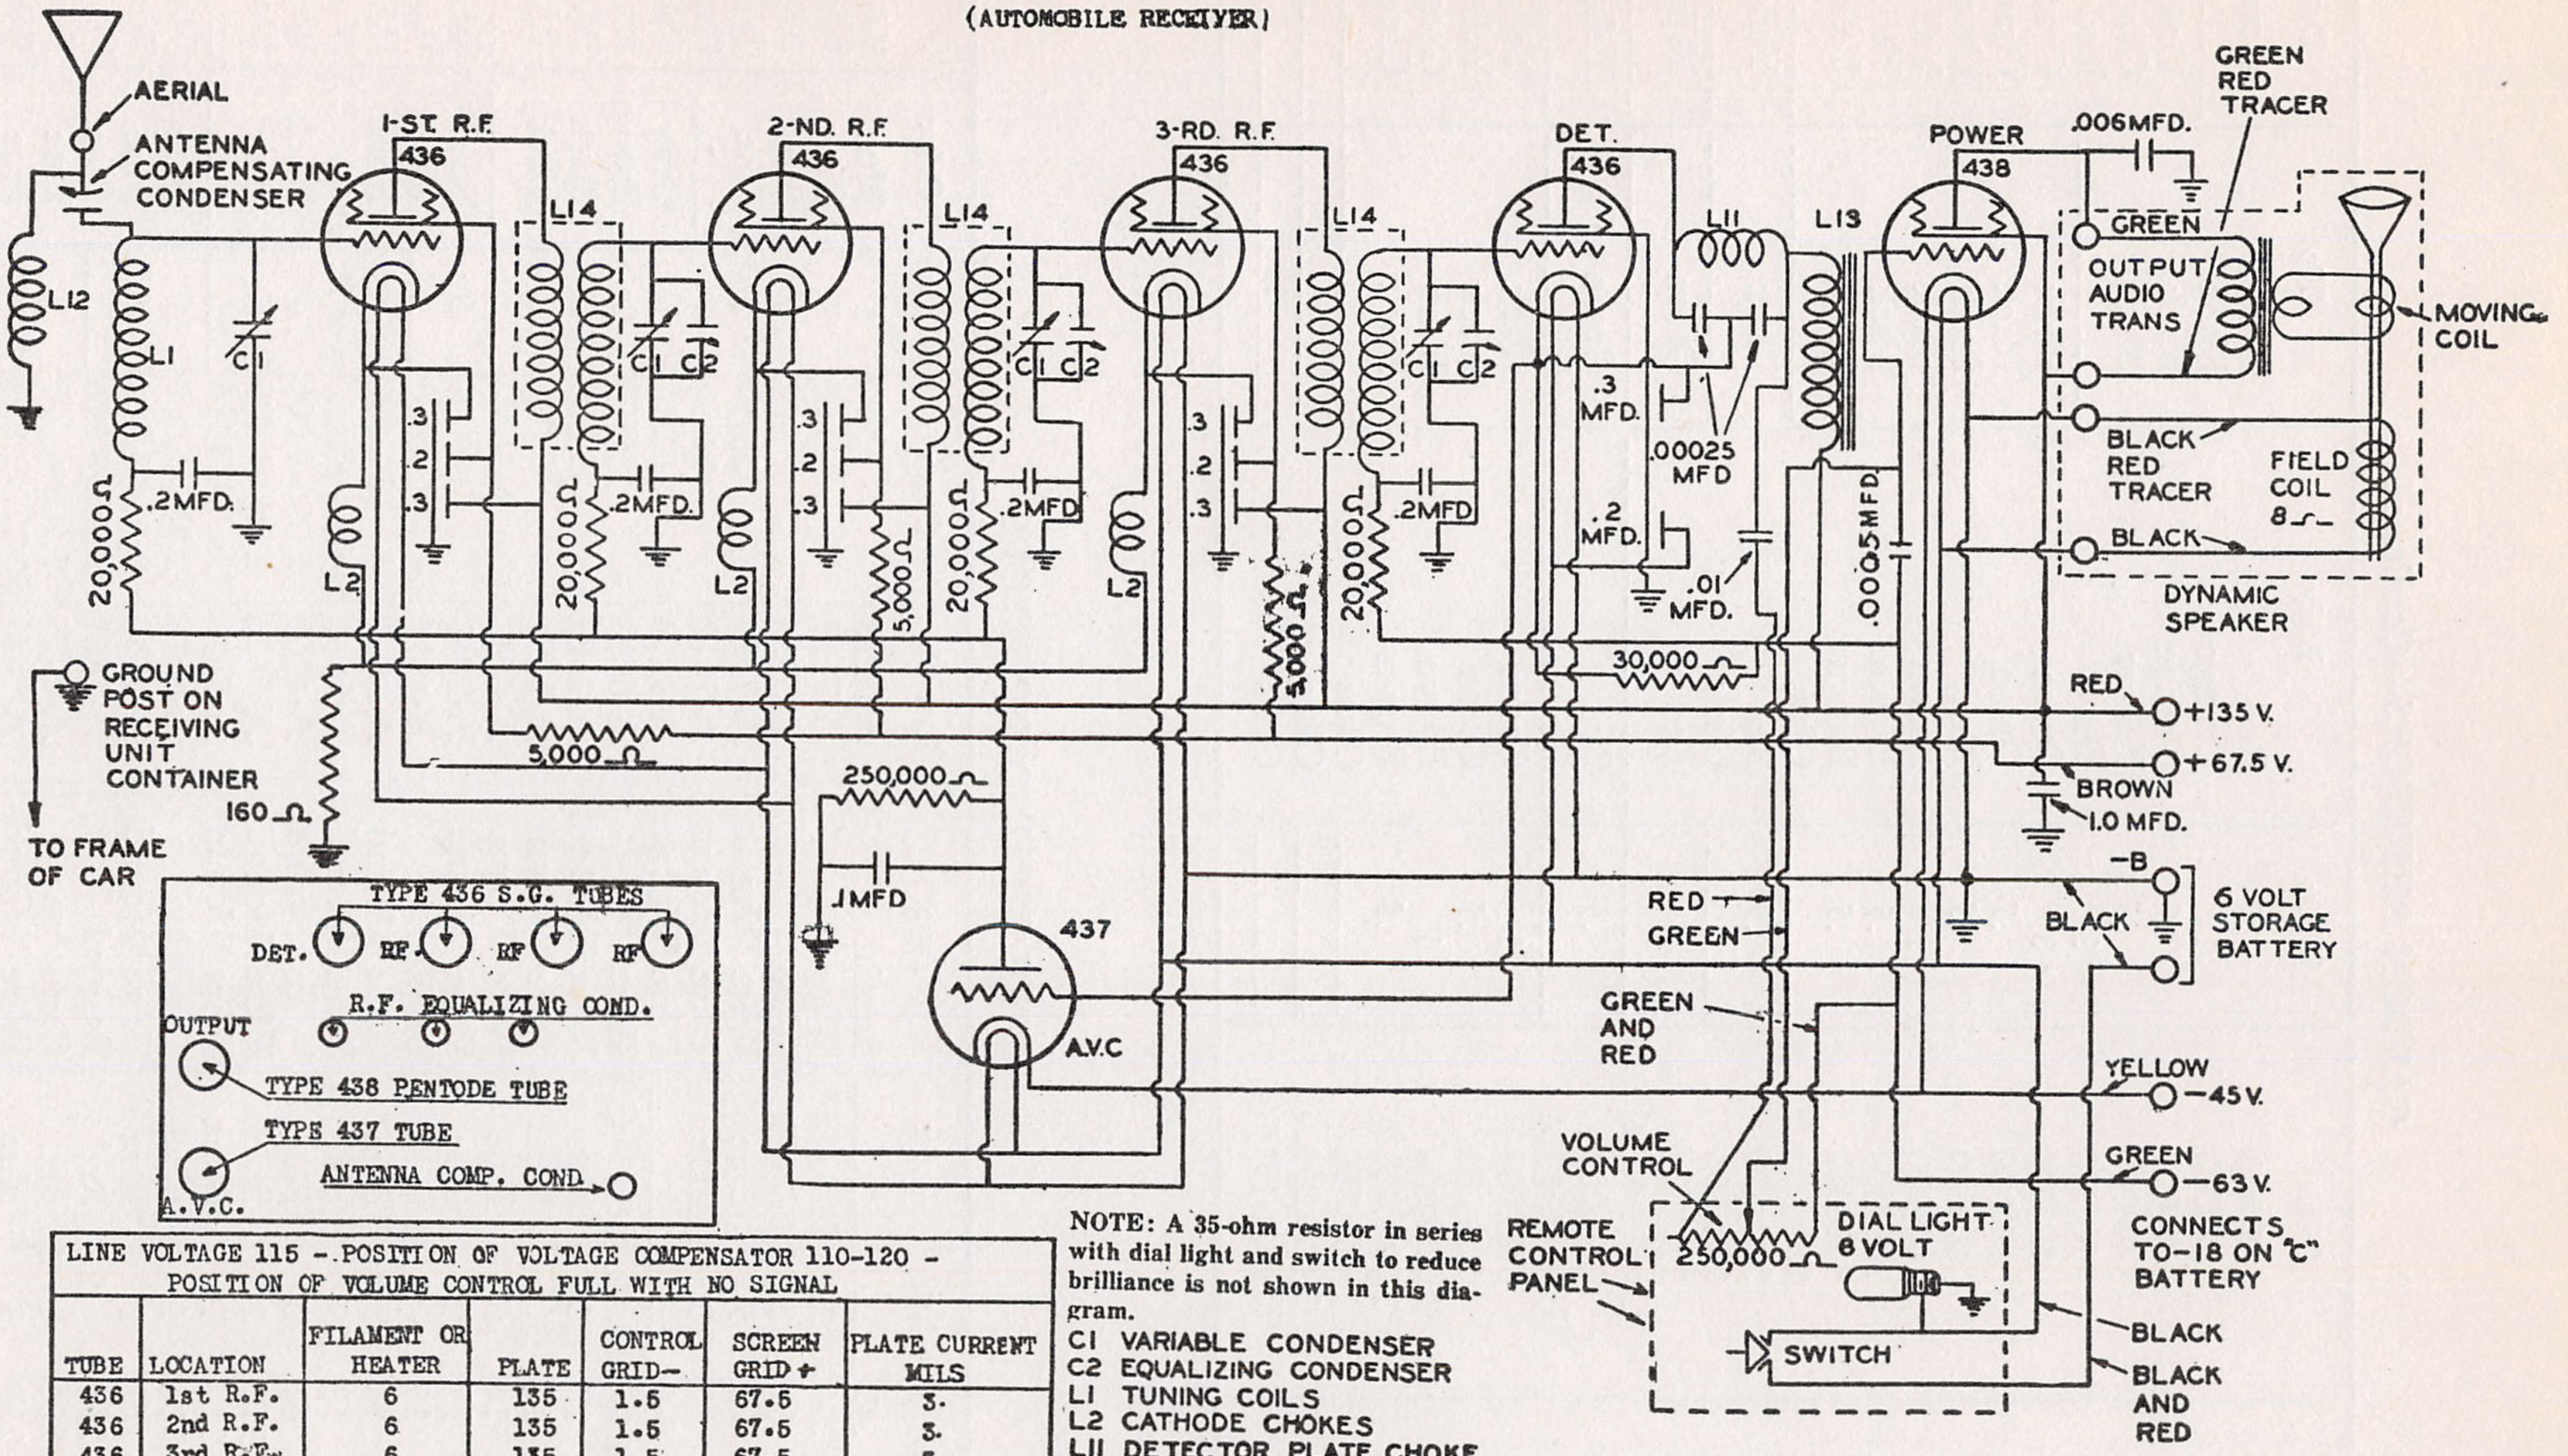
AERIAL
ANTENNA COMPENSATING CONDENSER
L12
L1
C1
.2MFD.
20,000Ω
1-ST. R.F.
436
L2
.3
.2
.3
L14
C1 C2
.2MFD.
20,000Ω
2-ND. R.F.
436
5,000Ω
3-RD. R.F.
436
DET.
436
L11
L13
.3 MFD.
.00025 MFD
.2 MFD.
.01 MFD.
.0005MFD
30,000Ω
POWER
438
.006MFD.
GREEN RED TRACER
GREEN
OUTPUT AUDIO TRANS
MOVING COIL
BLACK RED TRACER
FIELD COIL 8Ω
BLACK
DYNAMIC SPEAKER
RED
+135 V.
+67.5 V.
BROWN
1.0 MFD.
-B
BLACK
6 VOLT STORAGE BATTERY
RED
GREEN
GREEN AND RED
YELLOW
-45 V.
GREEN
-63 V.
CONNECTS TO-18 ON "C" BATTERY
VOLUME CONTROL
REMOTE CONTROL PANEL
250,000Ω
DIAL LIGHT 6 VOLT
SWITCH
BLACK
BLACK AND RED
GROUND POST ON RECEIVING UNIT CONTAINER
TO FRAME OF CAR
160Ω
5,000Ω
250,000Ω
.1MFD
437
A.V.C
TYPE 436 S.G. TUBES
DET.
RF
RF
RF
R.F. EQUALIZING COND.
OUTPUT
TYPE 438 PENTODE TUBE
TYPE 437 TUBE
ANTENNA COMP. COND.
A.V.C.

LINE VOLTAGE 115 - POSITION OF VOLTAGE COMPENSATOR 110-120 - POSITION OF VOLUME CONTROL FULL WITH NO SIGNAL

TUBE	LOCATION	FILAMENT OR HEATER	PLATE	CONTROL GRID-	SCREEN GRID +	PLATE CURRENT MILS
436	1st R.F.	6	135	1.5	67.5	3.
436	2nd R.F.	6	135	1.5	67.5	3.
436	3rd R.F.	6	135	1.5	67.5	3.
436	Detector	6	132	10.	67.5	.1
437	A. V. C.	6	---	18.	----	0.
438	Power	6	135	18.	135.	8.

NOTE: A 35-ohm resistor in series with dial light and switch to reduce brilliance is not shown in this diagram.

C1 VARIABLE CONDENSER
C2 EQUALIZING CONDENSER
L1 TUNING COILS
L2 CATHODE CHOKES
L11 DETECTOR PLATE CHOKE
L12 ANTENNA CHOKE COIL
L13 IMPEDANCE COUPLING COIL
L14 R.F. TRANSFORMER

MODEL 41
Schematic
Voltage

SPARKS WITHINGTON CO.

POLICE AUTO RECEIVER

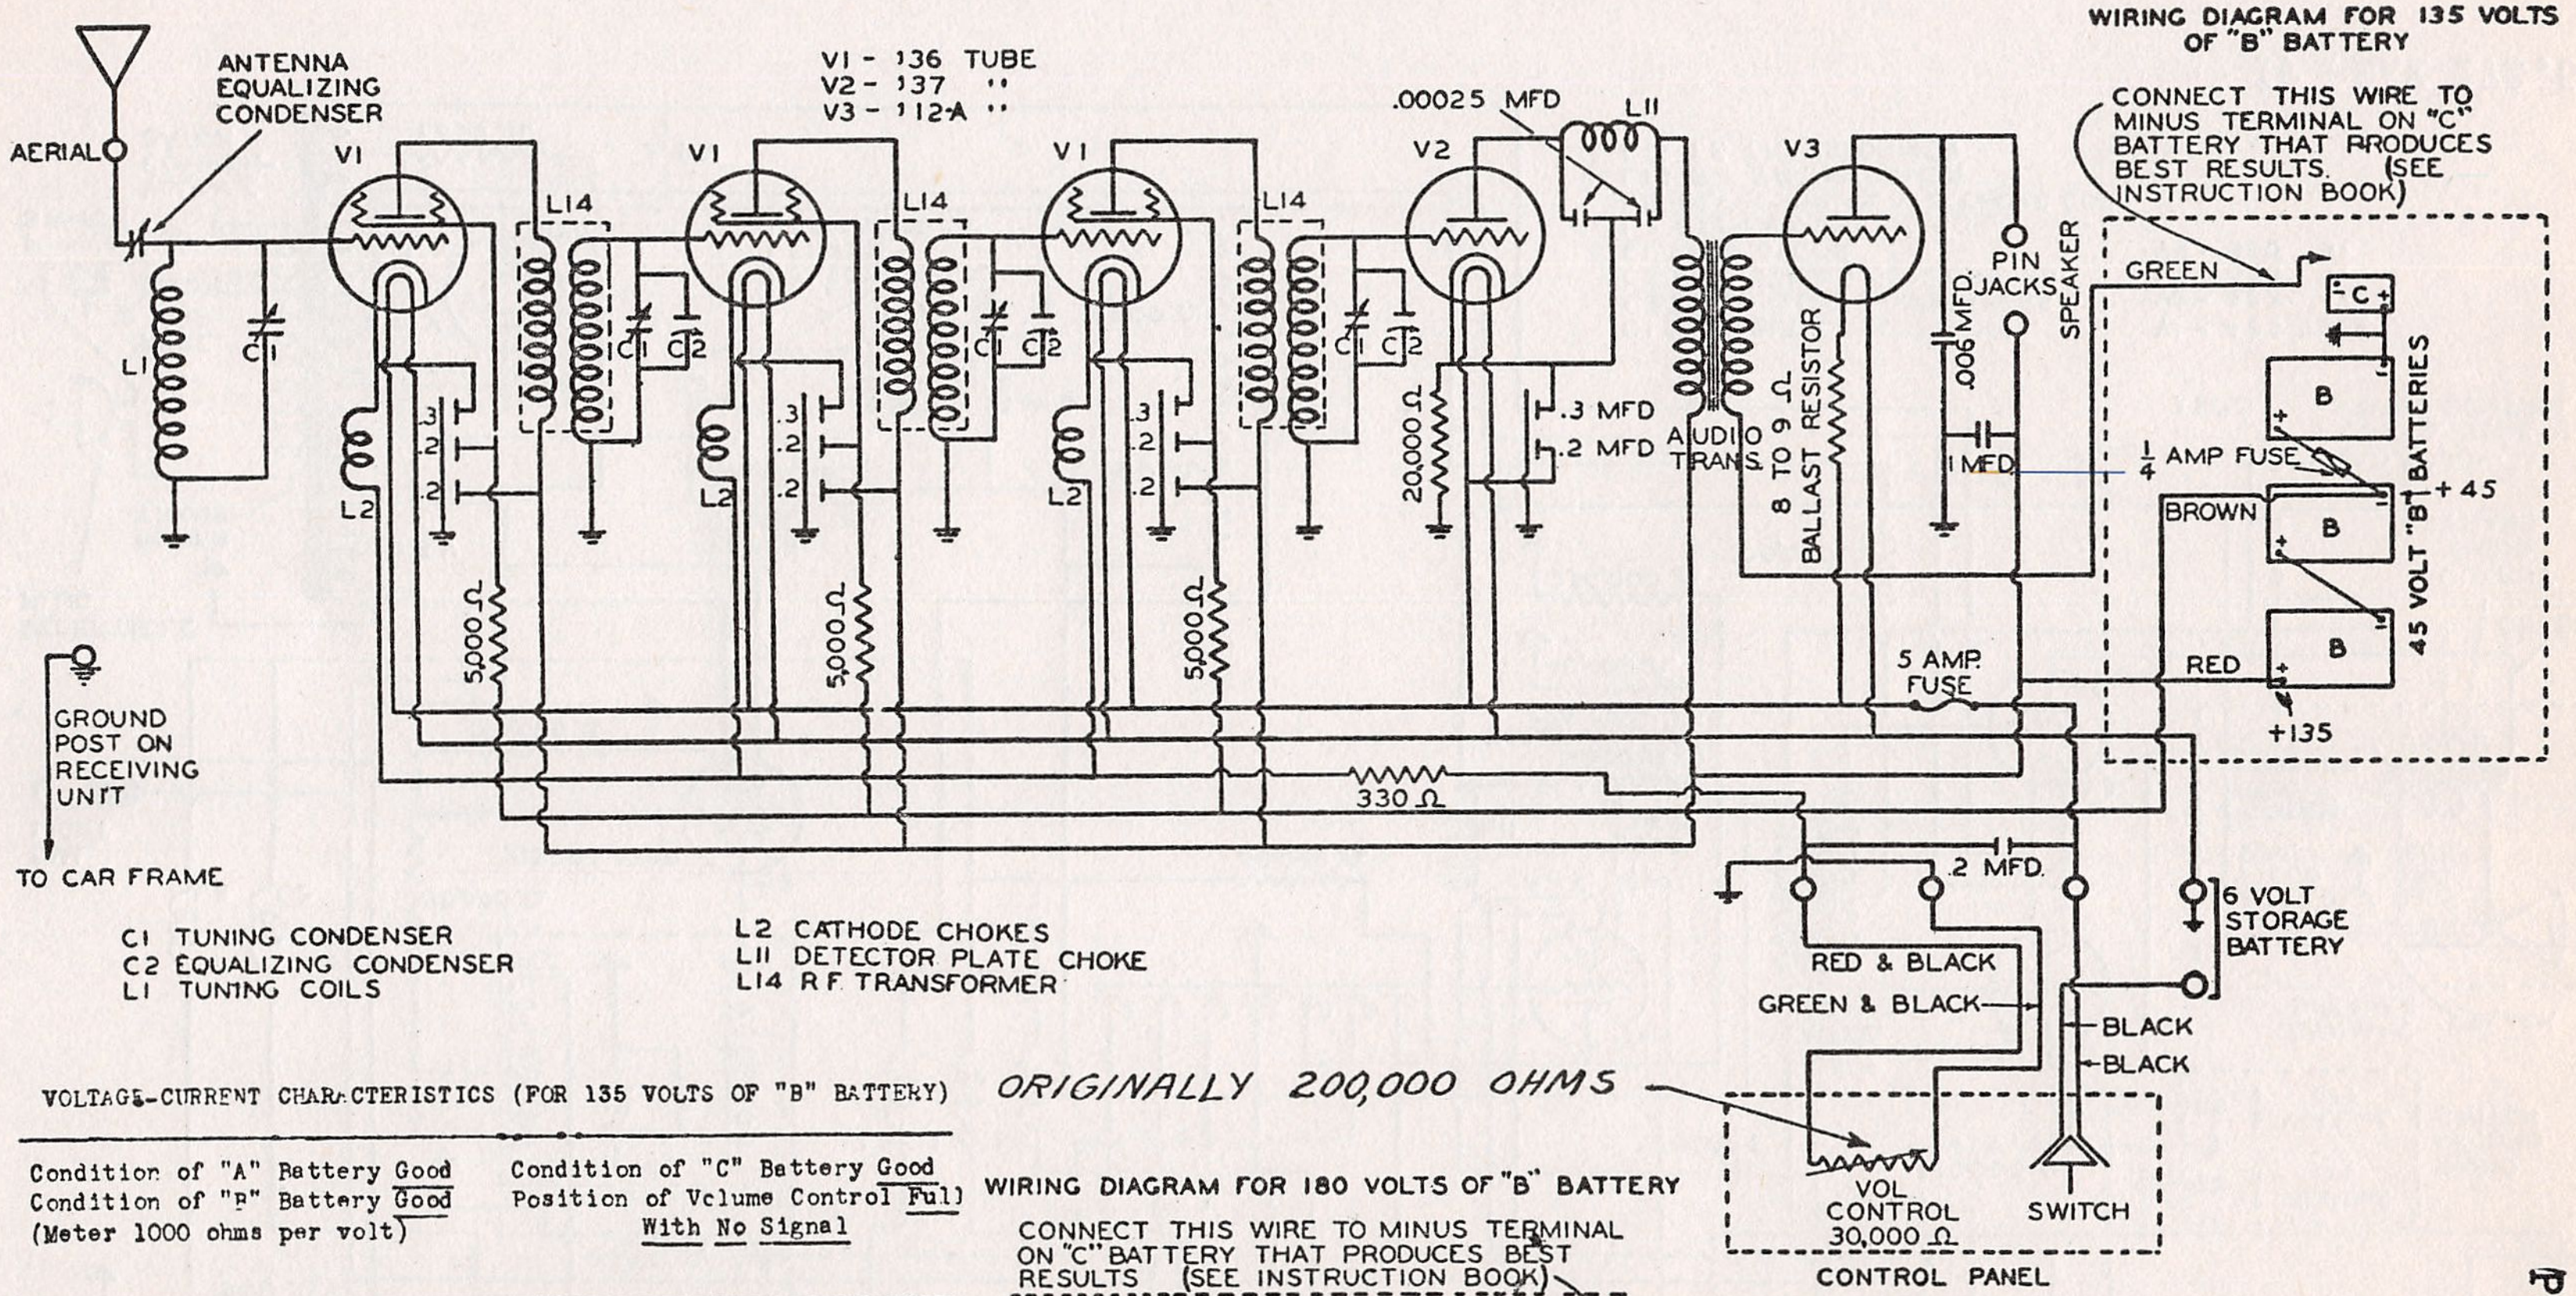
AERIAL
ANTENNA EQUALIZING CONDENSER
V1
V1
V1
V2
V3
L1
C1
C2
L2
L14
L11
.3
.2
.2
5,000 Ω
20,000 Ω
.3 MFD
.2 MFD
.00025 MFD
AUDIO TRANS.
8 TO 9 Ω BALLAST RESISTOR
.006 MFD.
1 MFD.
PIN JACKS
SPEAKER
5 AMP. FUSE
330 Ω
.2 MFD.
GROUND POST ON RECEIVING UNIT
TO CAR FRAME
V1 - 136 TUBE
V2 - 137 "
V3 - 112-A "
C1 TUNING CONDENSER
C2 EQUALIZING CONDENSER
L1 TUNING COILS
L2 CATHODE CHOKES
L11 DETECTOR PLATE CHOKE
L14 R.F. TRANSFORMER
WIRING DIAGRAM FOR 135 VOLTS OF "B" BATTERY
CONNECT THIS WIRE TO MINUS TERMINAL ON "C" BATTERY THAT PRODUCES BEST RESULTS. (SEE INSTRUCTION BOOK)
GREEN
C
B
1/4 AMP FUSE
BROWN
+45
45 VOLT "B" BATTERIES
RED
+135
6 VOLT STORAGE BATTERY
RED & BLACK
GREEN & BLACK
BLACK
BLACK
VOL. CONTROL 30,000 Ω
SWITCH
CONTROL PANEL
ORIGINALLY 200,000 OHMS

WIRING DIAGRAM FOR 180 VOLTS OF "B" BATTERY

CONNECT THIS WIRE TO MINUS TERMINAL ON "C" BATTERY THAT PRODUCES BEST RESULTS (SEE INSTRUCTION BOOK)

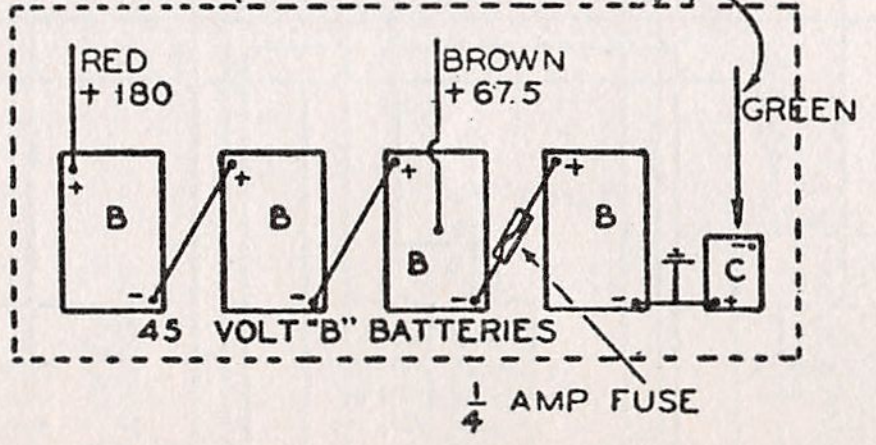
RED
+180
BROWN
+67.5
GREEN
B
C
45 VOLT "B" BATTERIES
1/4 AMP FUSE

MODEL 41

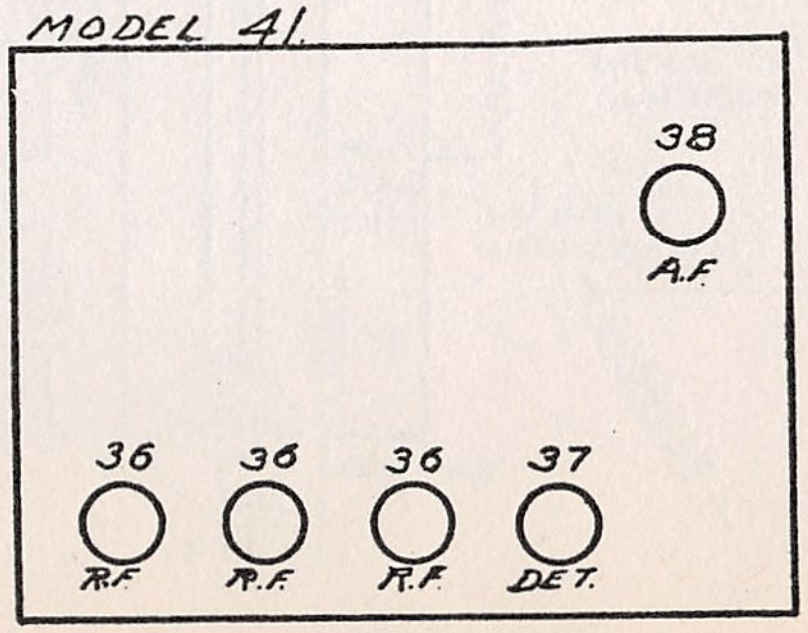
38
A.F.
36
R.F.
36
R.F.
36
R.F.
37
DET.

VOLTAGE-CURRENT CHARACTERISTICS (FOR 135 VOLTS OF "B" BATTERY)

Condition of "A" Battery Good
Condition of "B" Battery Good
(Meter 1000 ohms per volt)

Condition of "C" Battery Good
Position of Volume Control Full
With No Signal

Operation Voltages

Tube Type	Location	Filament or Heater	Plate	Control Grid	Screen Grid	Plate Current
'36	1st R.F.	6	135	1.5	67.5	1.5
'36	2nd R.F.	6	135	1.5	67.5	1.5
'36	3rd R.F.	6	135	1.5	67.5	1.5
'37	Detector	6	125	10	67.5	.5
'38	Power	4-5	135	18	135	6-8

MODEL 45
Schematic

SPARKS WITHINGTON CO.

PEAK FREQUENCY 172.5 KC

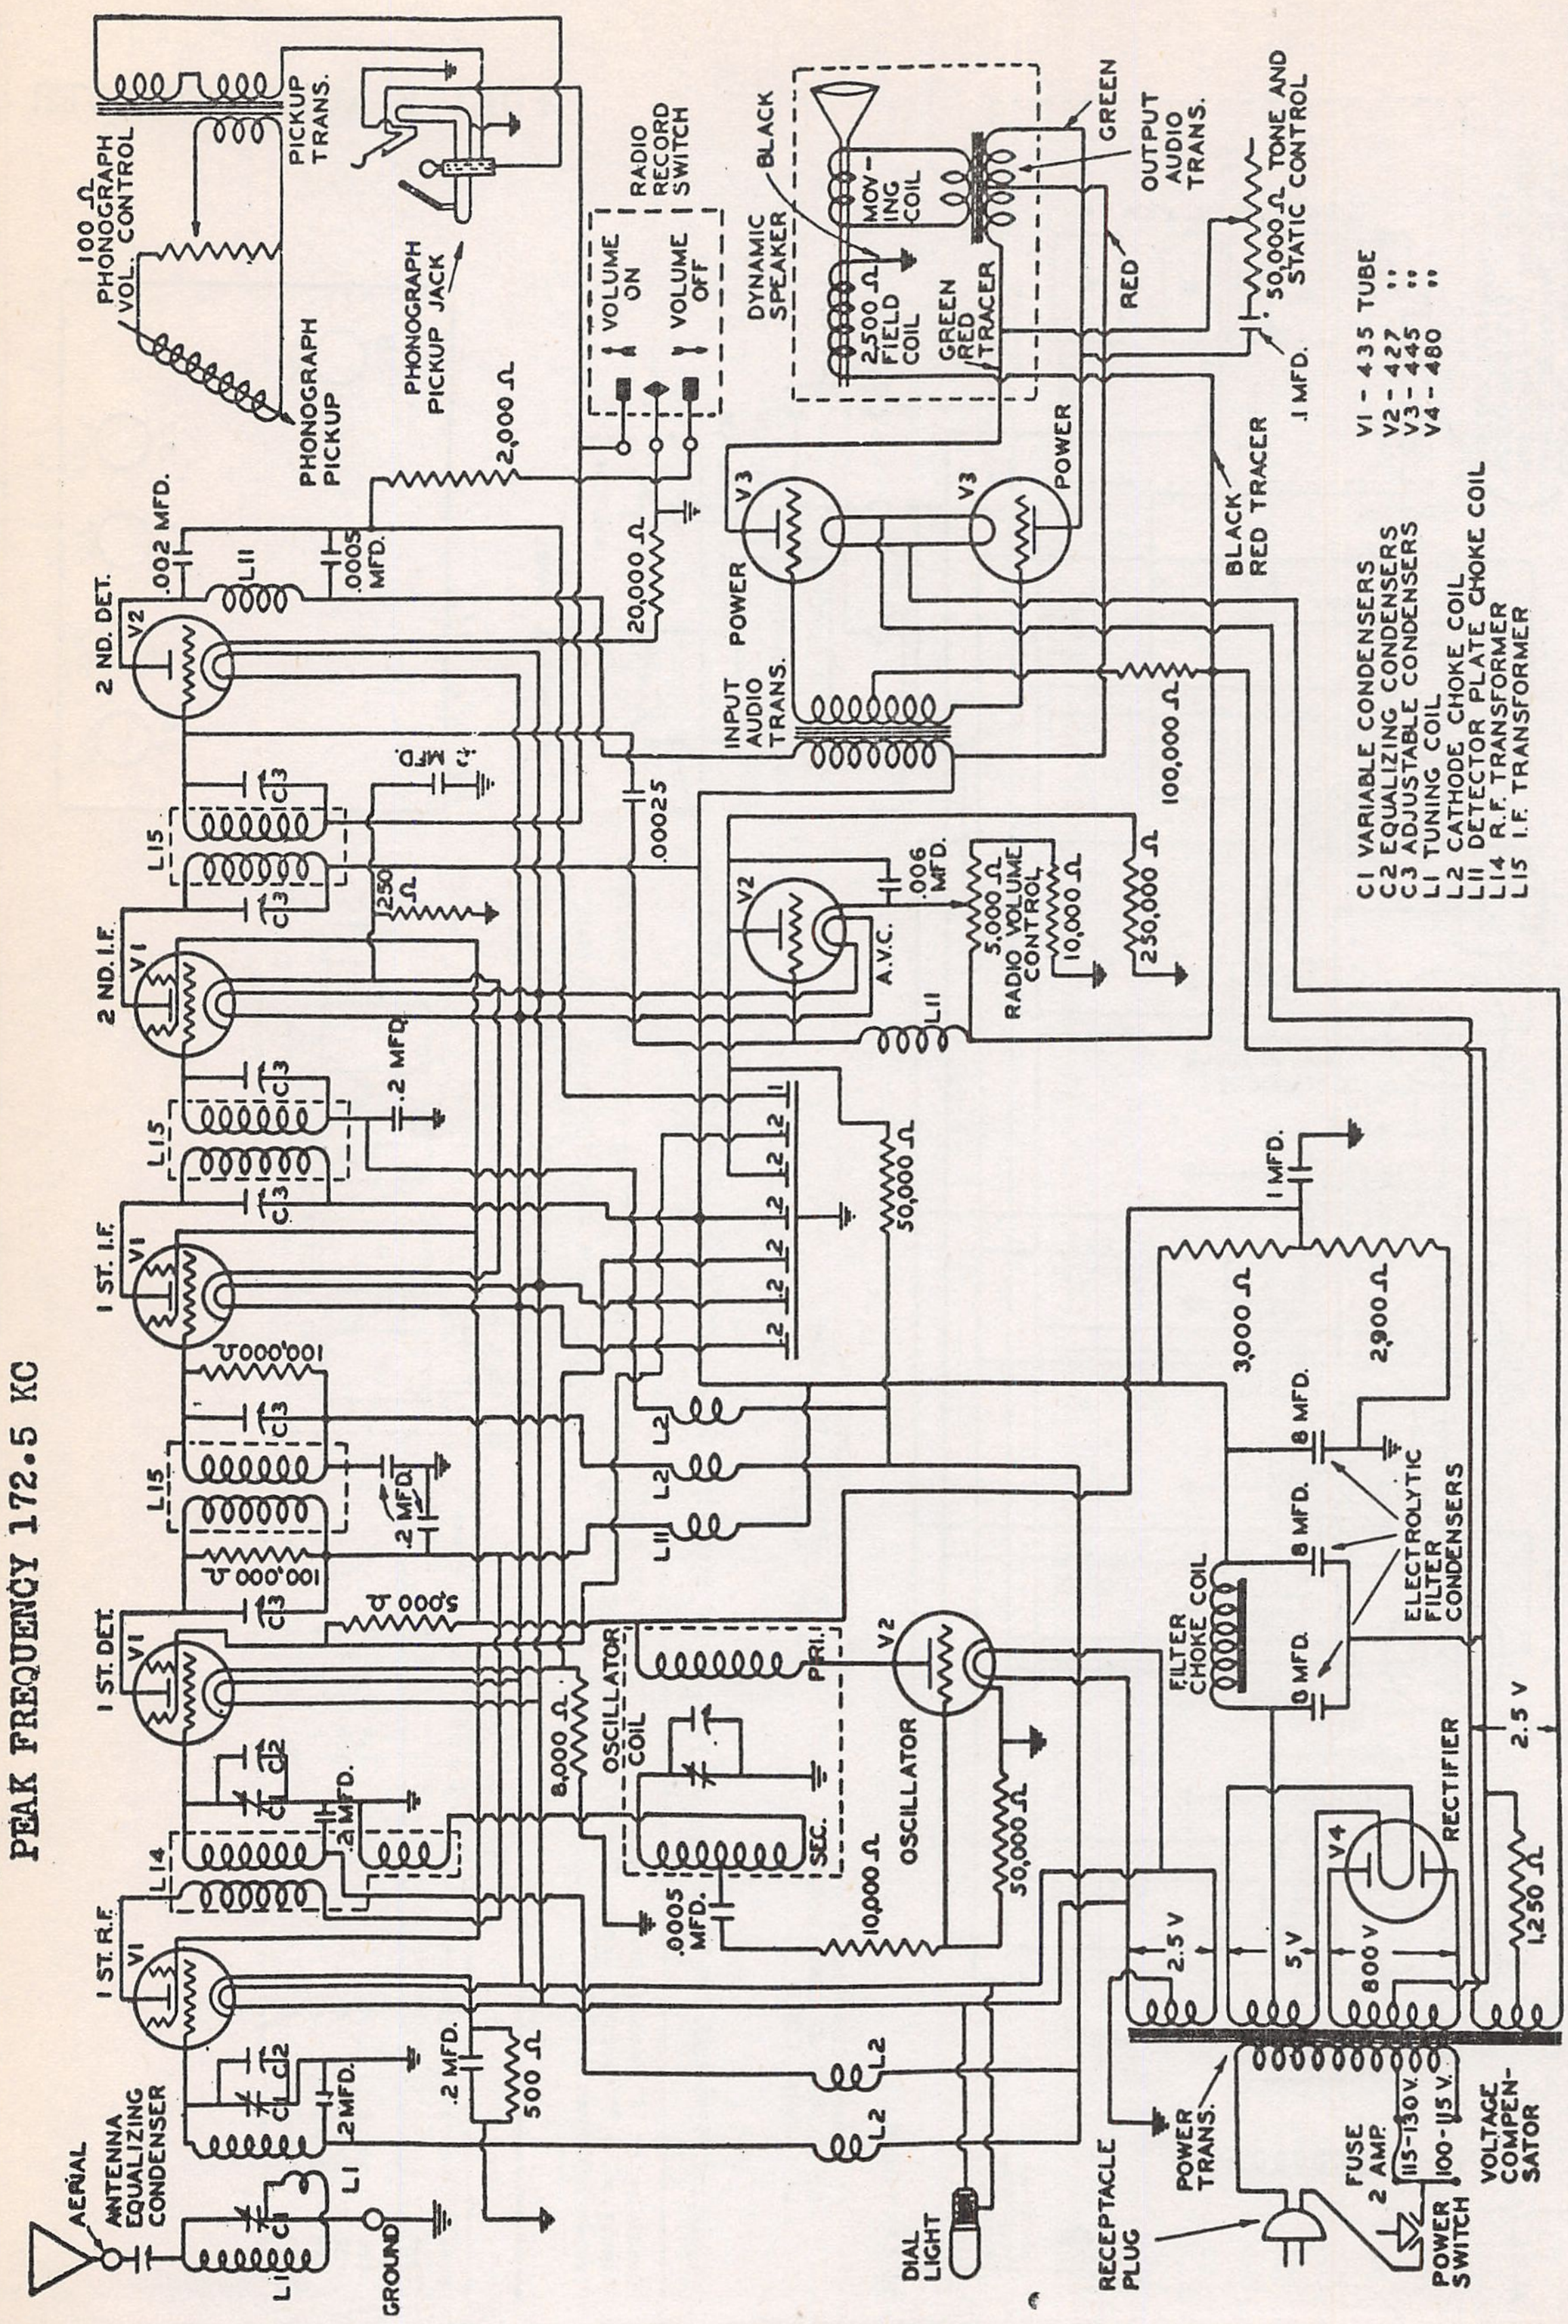
AERIAL
ANTENNA EQUALIZING CONDENSER
L1
C1
L1
GROUND
C2
C1
.2 MFD.
.2 MFD.
500 Ω
1 ST. R.F.
V1
L14
.2 MFD.
C1
C2
L2
L2
DIAL LIGHT
.0005 MFD.
10,000 Ω
OSCILLATOR
50,000 Ω
8,000 Ω
OSCILLATOR COIL
SEC.
PRI.
V2
1 ST. DET.
V1
5000 Ω
C3
L15
.2 MFD.
C3
100,000 Ω
L11
L2
L2
1 ST. I.F.
V1
L15
C3
C3
.2 MFD.
2 ND. I.F.
V1
250 Ω
L15
C3
C3
.2 MFD.
2 ND. DET.
V2
.002 MFD.
L11
.0005 MFD.
.00025
.2 .2 .2 .2 .2 .2 .2 .2
.1 .2
50,000 Ω
V2
.006 MFD.
A.V.C.
L11
5,000 Ω RADIO VOLUME CONTROL
10,000 Ω
250,000 Ω
100,000 Ω
2,000 Ω
20,000 Ω
100 Ω PHONOGRAPH VOL. CONTROL
PHONOGRAPH PICKUP
PICKUP TRANS.
PHONOGRAPH PICKUP JACK
VOLUME ON
VOLUME OFF
RADIO RECORD SWITCH
POWER
V3
V3
POWER
INPUT AUDIO TRANS.
DYNAMIC SPEAKER
BLACK
MOVING COIL
2,500 Ω FIELD COIL
GREEN
RED
TRACER
GREEN
OUTPUT AUDIO TRANS.
RED
BLACK
RED TRACER
.1 MFD.
50,000 Ω TONE AND STATIC CONTROL
1 MFD.
3,000 Ω
2,900 Ω
8 MFD.
8 MFD.
8 MFD.
ELECTROLYTIC FILTER CONDENSERS
FILTER CHOKE COIL
V4
RECTIFIER
2.5 V
2.5 V
5 V
800 V
1,250 Ω
RECEPTACLE PLUG
POWER TRANS.
FUSE 2 AMP.
115-130 V.
100-115 V.
POWER SWITCH
VOLTAGE COMPENSATOR

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
C3 ADJUSTABLE CONDENSERS
L1 TUNING COIL
L2 CATHODE CHOKE COIL
L11 DETECTOR PLATE CHOKE COIL
L14 R.F. TRANSFORMER
L15 I.F. TRANSFORMER

V1 - 435 TUBE
V2 - 427 "
V3 - 445 "
V4 - 480 "

IF PEAK 172.5 KC

SPARTON MODEL 45 (VISIONOLA) SUPERHETERODYNE

MODEL 45
Chassis
Voltage

SPARKS WITHINGTON CO.

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

Tube	Location	OPERATING VOLTAGES Heater or Filament	Plate	Control Grid—	Screen Grid+	Plate Current Mills.
435	1st R. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	1st Det.	2.2 - 2.5	180 - 220	*6.4 - 14	80 - 100	*.8 - 1.8
435	1st I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
435	2nd I. F.	2.2 - 2.5	180 - 220	2.5 - 4	80 - 100	5 - 8
427	Oscillator	2.2 - 2.5	80 - 100	†	....	‡
427	2nd Det.	2.2 - 2.5	170 - 205	14 - 20	....	.7 - 1.0
427	A. V. C.	2.2 - 2.5	§	30 - 50	....	Zero
445	Power	2.2 - 2.5	225 - 270	‖30 - 45	....	20 - 30
445	Power	2.2 - 2.5	225 - 270	‖30 - 45	....	20 - 30
480	Rectifier	4.2 - 5	360 - 440	....	....	48 - 58

(Measured with 1000 ohm per volt voltmeter)

* Remove oscillator tube.

† Tube generates own bias when oscillating.

‖ Meter reading use 150 volt scale—true voltage 50-75—if lower scale voltmeter is used expect lower voltages.

§ Test from grid prong to ground approx. 125 volts.

‡ Test with plug in 2nd. Detector socket and tube in Analyzer.

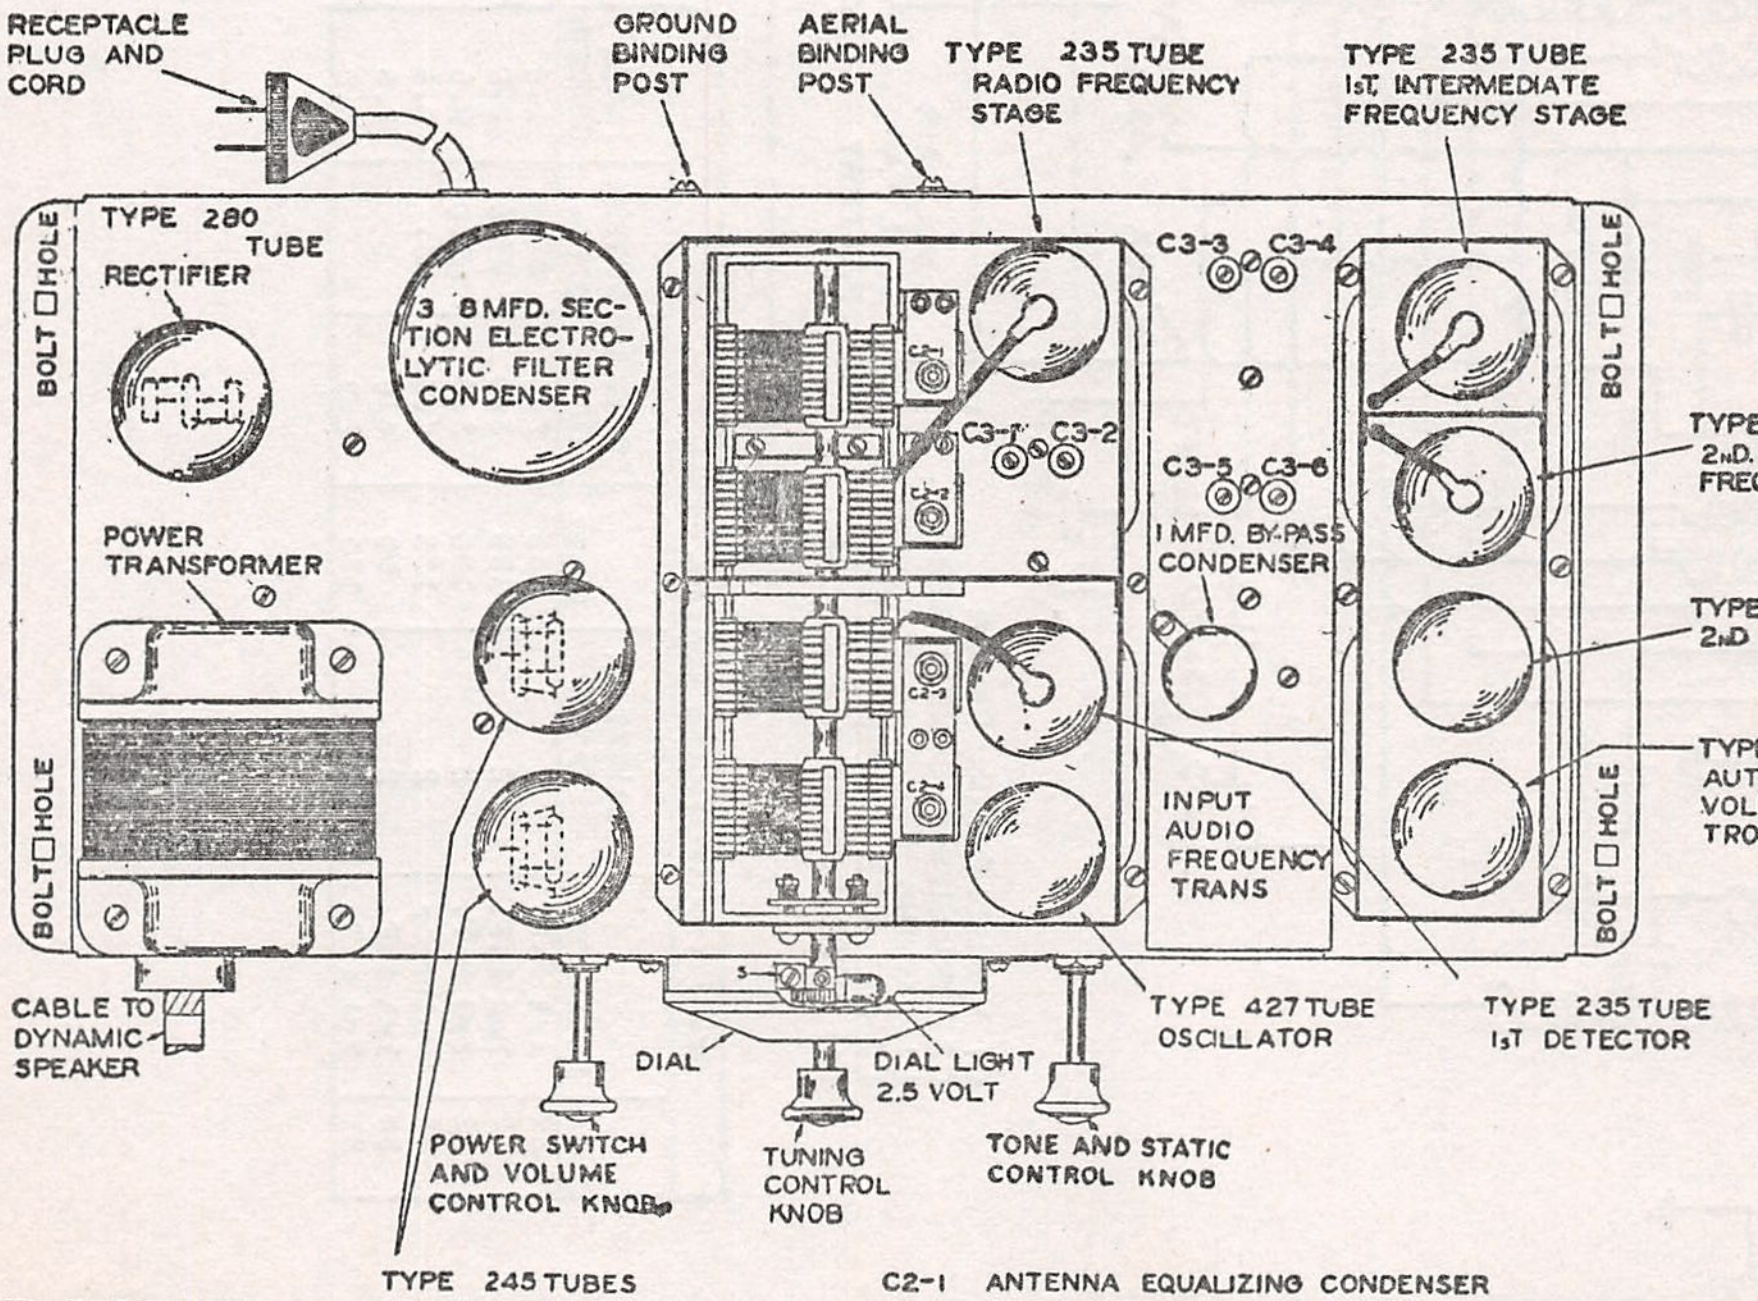
RECEPTACLE PLUG AND CORD
GROUND BINDING POST
AERIAL BINDING POST
TYPE 235 TUBE RADIO FREQUENCY STAGE
TYPE 235 TUBE 1ST INTERMEDIATE FREQUENCY STAGE
BOLT HOLE
TYPE 280 TUBE RECTIFIER
3 8 MFD. SECTION ELECTROLYTIC FILTER CONDENSER
C2-1
C2-2
C2-3
C2-4
C3-1
C3-2
C3-3
C3-4
C3-5
C3-6
1 MFD. BY-PASS CONDENSER
TYPE 235 TUBE 2ND. INTERMEDIATE FREQUENCY STAGE
POWER TRANSFORMER
TYPE 427 TUBE 2ND DETECTOR
TYPE 427 TUBE AUTOMATIC VOLUME CONTROL
INPUT AUDIO FREQUENCY TRANS
CABLE TO DYNAMIC SPEAKER
DIAL
DIAL LIGHT 2.5 VOLT
TYPE 427 TUBE OSCILLATOR
TYPE 235 TUBE 1ST DETECTOR
POWER SWITCH AND VOLUME CONTROL KNOB
TUNING CONTROL KNOB
TONE AND STATIC CONTROL KNOB
TYPE 245 TUBES PUSH-PULL POWER OUTPUT STAGE

TOP VIEW

C2-1 ANTENNA EQUALIZING CONDENSER
C2-2 RADIO FREQUENCY STAGE EQUALIZING CONDENSER
C2-3 1ST DETECTOR EQUALIZING CONDENSER
C2-4 OSCILLATOR EQUALIZING CONDENSER

C3-1 I. F. Stage First Adjustable Condenser
C3-2 I. F. Stage Second Adjustable Condenser
C3-3 I. F. Stage Third Adjustable Condenser
C3-4 I. F. Stage Fourth Adjustable Condenser
C3-5 I. F. Stage Fifth Adjustable Condenser
C3-6 I. F. Stage Sixth Adjustable Condenser

MODEL 51,52
Schematic
Voltage

SPARKS WITHINGTON CO.

Sparton Model 51 and 52 Schematic Diagram

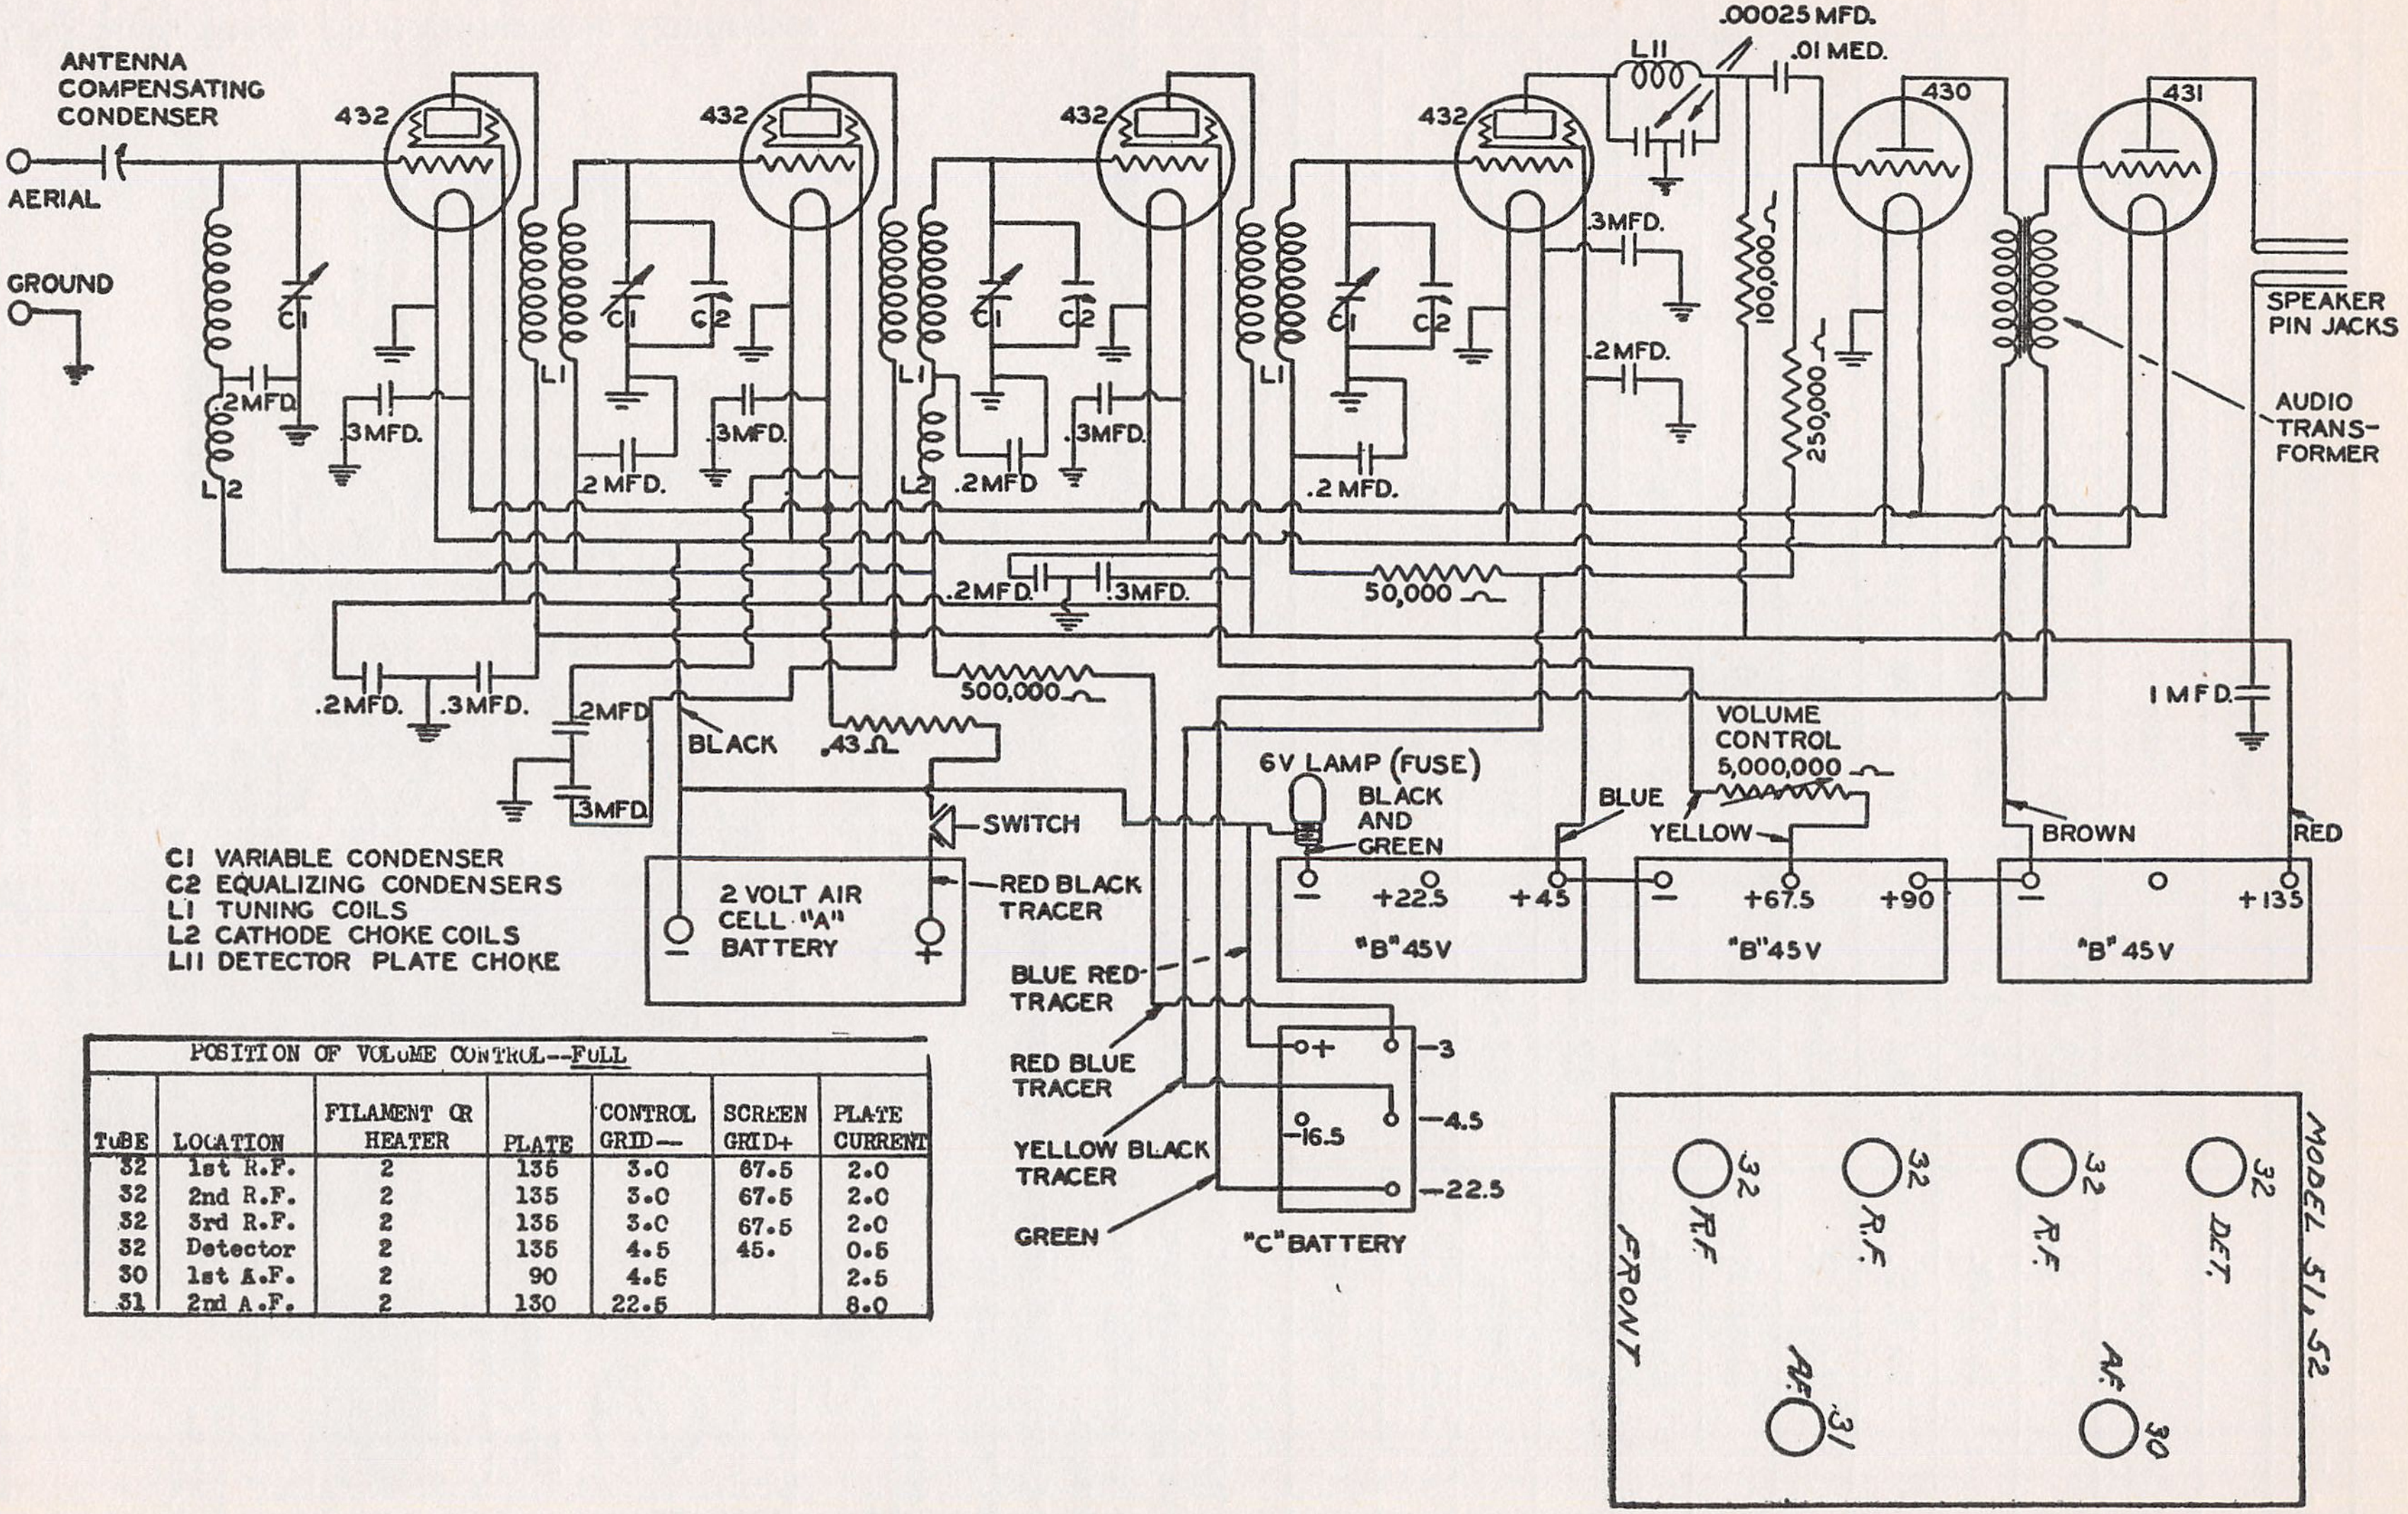
ANTENNA COMPENSATING CONDENSER
AERIAL
GROUND
432
432
432
432
430
431
C1
C2
L1
L2
L11
.00025 MFD.
.01 MED.
.2MFD.
.3MFD.
.2 MFD.
100,000
250,000
50,000
500,000
.43 Ω
1 MFD.
SPEAKER PIN JACKS
AUDIO TRANS-FORMER
BLACK
SWITCH
2 VOLT AIR CELL "A" BATTERY
RED BLACK TRACER
BLUE RED TRACER
RED BLUE TRACER
YELLOW BLACK TRACER
GREEN
6V LAMP (FUSE)
BLACK AND GREEN
BLUE
YELLOW
BROWN
RED
VOLUME CONTROL 5,000,000
+22.5
+45
+67.5
+90
+135
"B" 45V
"B" 45V
"B" 45V
-3
-4.5
-16.5
-22.5
"C" BATTERY
MODEL 51, 52
32 DET.
32 R.F.
32 R.F.
32 R.F.
30 A.F.
31 A.F.
FRONT

C1 VARIABLE CONDENSER
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE CHOKE COILS
L11 DETECTOR PLATE CHOKE

POSITION OF VOLUME CONTROL--FULL

TUBE	LOCATION	FILAMENT OR HEATER	PLATE	CONTROL GRID--	SCREEN GRID+	PLATE CURRENT
32	1st R.F.	2	135	3.0	67.5	2.0
32	2nd R.F.	2	135	3.0	67.5	2.0
32	3rd R.F.	2	135	3.0	67.5	2.0
32	Detector	2	135	4.5	45.	0.5
30	1st A.F.	2	90	4.5		2.5
31	2nd A.F.	2	130	22.5		8.0

SPARKS WITHINGTON CO.

MODEL 51,52
Tone Control
Speaker Cone
Data

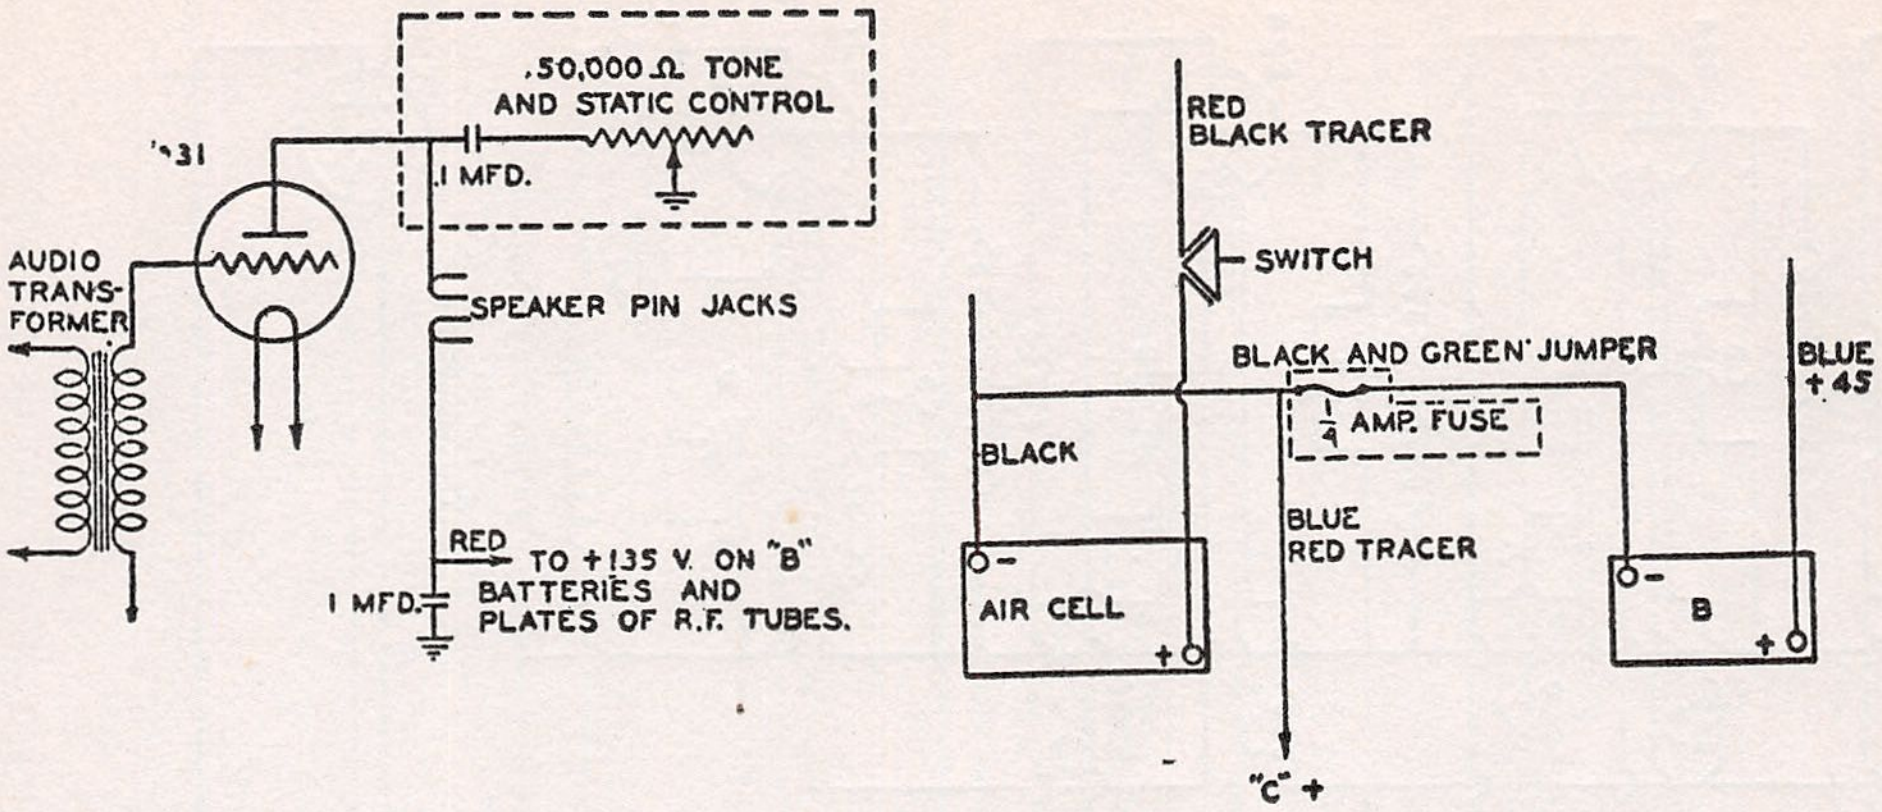
.50,000 Ω TONE AND STATIC CONTROL
.1 MFD.
*31
AUDIO TRANS-FORMER
SPEAKER PIN JACKS
RED
TO +135 V. ON "B" BATTERIES AND PLATES OF R.F. TUBES.
1 MFD.
RED BLACK TRACER
SWITCH
BLACK AND GREEN JUMPER
¼ AMP. FUSE
BLACK
BLUE RED TRACER
AIR CELL
BLUE +45
B
"C" +

SCHEMATIC DRAWING OF TONE AND STATIC CONTROL AND ¼ AMPERE "B" BATTERY FUSE USED ON MODLES 51 AND 52 SERIAL NOS. 345 AND 195 UP RESPECTIVELY

WIRING DIAGRAM FOR 180 VOLTS OF "B" BATTERY SPARTON MODEL 51 AND 52

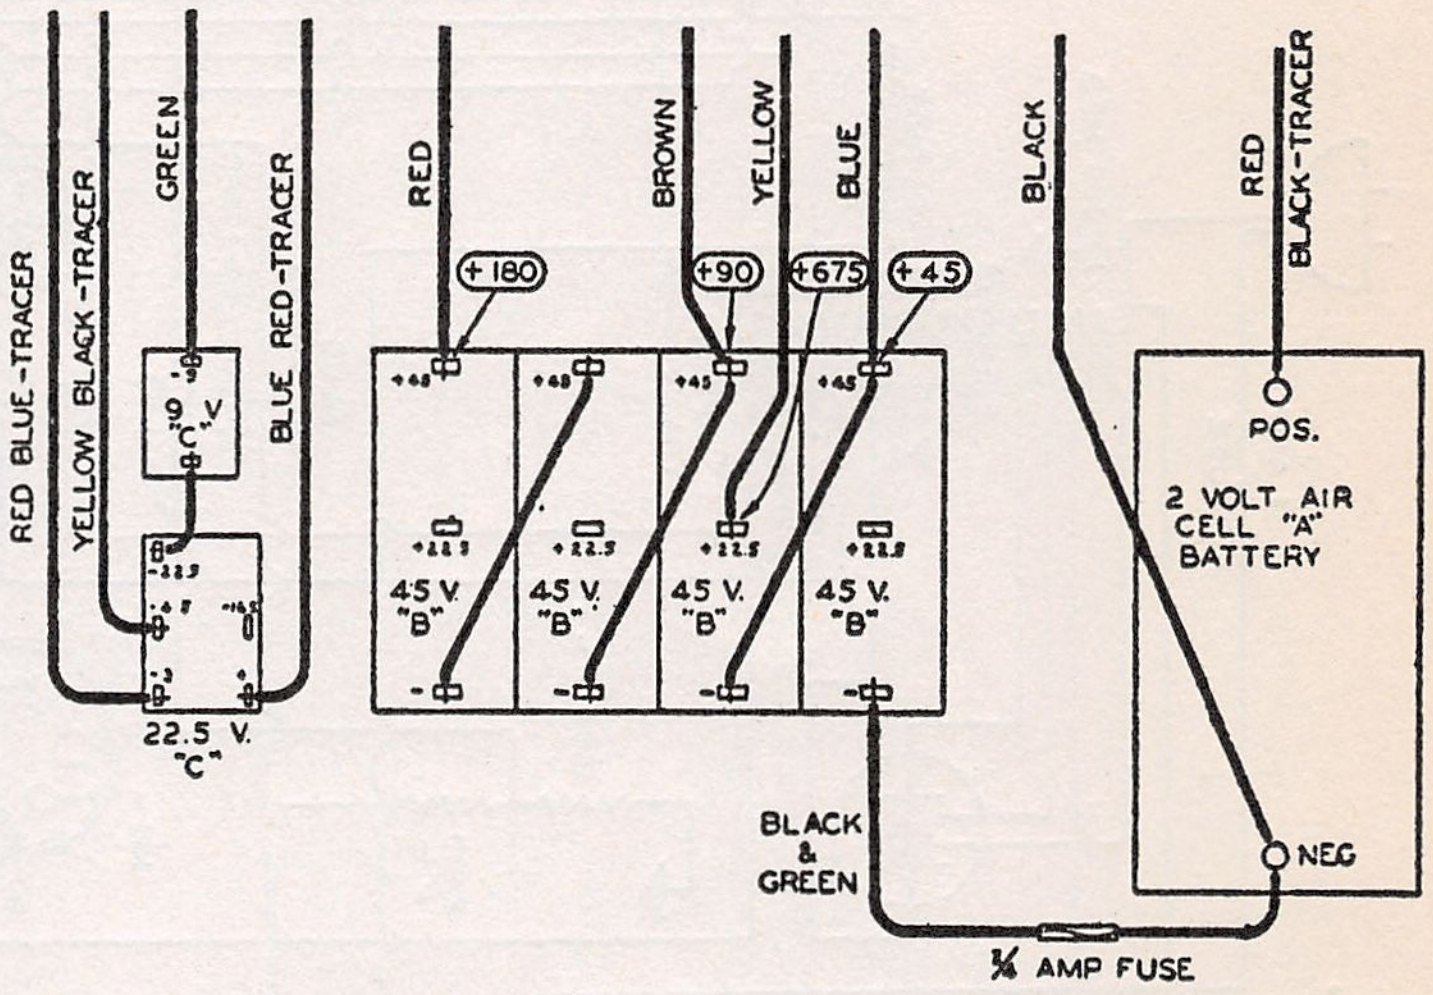
RED BLUE-TRACER
YELLOW BLACK-TRACER
GREEN
BLUE RED-TRACER
9 V "C"
22.5 V. "C"
RED
BROWN
YELLOW
BLUE
+180
+90
+67.5
+45
45 V. "B"
BLACK
RED BLACK-TRACER
POS.
2 VOLT AIR CELL "A" BATTERY
NEG
BLACK & GREEN
¼ AMP FUSE

How to Replace Cone Head in Magnetic Speaker in Model 51 and 52

First:

Remove the motor or speaker driving element by removing the four mounting screws, unsoldering the lead wires from the outside terminal lugs, and unsoldering the driving link from the diaphragm apex pin.

Second:

Remove the cone head and all paper rings from the speaker housing.

Third:

Coat the rim of the speaker housing where the paper ring on the diaphragm rests with an ample coating of cellulose cement (such as Du Pont's Household Cement or Ambroid).

Fourth:

Place the cone head (part No. B-3528) into position, set the speaker housing onto a flat surface with the opening of diaphragm down, place a weight on housing and leave until cement is dry.

Fifth:

Fasten the driving motor back into position with four mounting screws, making sure that the movable armature of the motor is in exact center between the pole pieces before mounting, and solder the lead wires to the terminal lugs.

Sixth:

Solder the diaphragm apex pin to the apex driving link, making sure not to exert any strain on the drive link which might put the motor armature out of center while soldering. The apex pin should be cut off before soldering, so that it will extend about ¼" along the drive link. Use ordinary soft solder.

Seventh:

Next cement the paper ring (part No. A-5847) and finally the paper ring (part No. A-5846) into position, using cellulose cement.

MODEL 55
Police Desk
Schematic

SPARKS WITHINGTON CO.
SPARTON OF CANADA LTD.

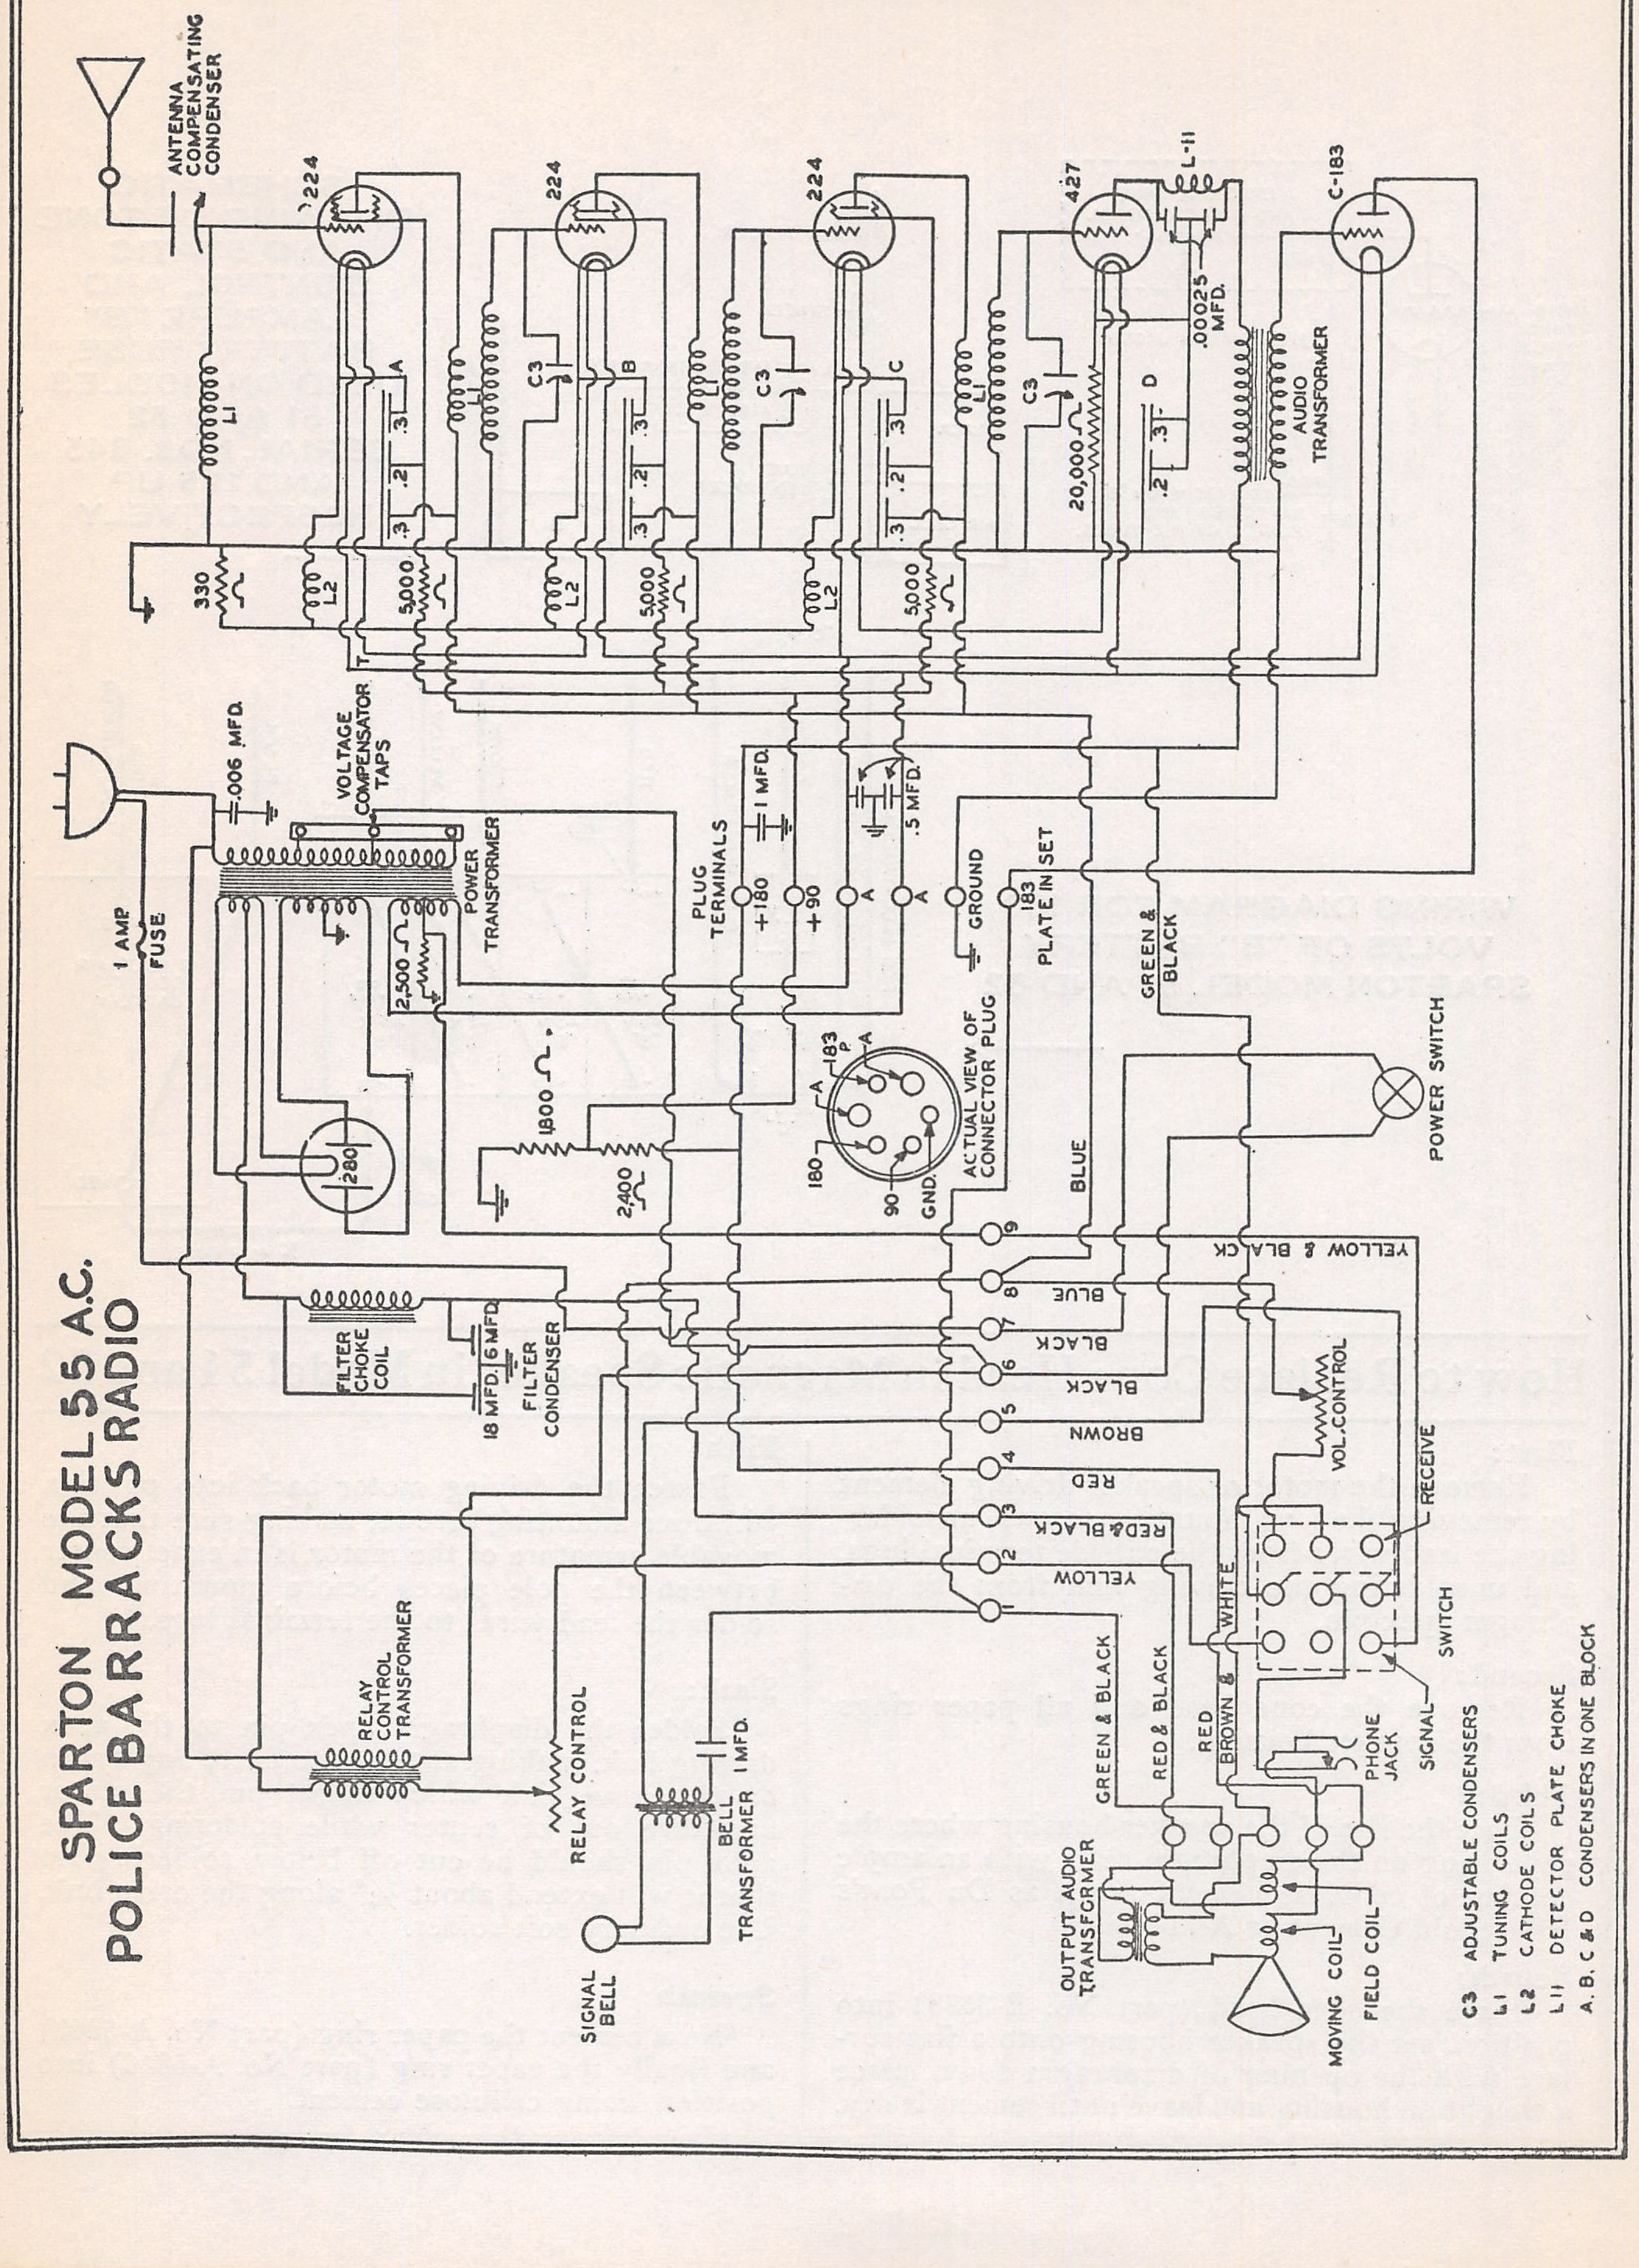

SPARTON MODEL 55 A.C. POLICE BARRACKS RADIO

ANTENNA COMPENSATING CONDENSER
224
224
224
427
L-11
C-183
.00025 MFD.
AUDIO TRANSFORMER
L1
C3
A
B
C
D
.3
.2
20,000
330
L2
5,000
T
.006 MFD.
VOLTAGE COMPENSATOR TAPS
POWER TRANSFORMER
1 AMP FUSE
2,500
280
1 MFD.
.5 MFD.
PLUG TERMINALS
+180
+90
A
A
GROUND
183 PLATE IN SET
GREEN & BLACK
ACTUAL VIEW OF CONNECTOR PLUG
183
P
A
180
90
GND.
1800
2400
BLUE
POWER SWITCH
FILTER CHOKE COIL
18 MFD.
6 MFD.
FILTER CONDENSER
1
2
3
4
5
6
7
8
9
YELLOW & BLACK
BLUE
BLACK
BLACK
BROWN
RED
RED & BLACK
YELLOW
VOL. CONTROL
RECEIVE
SWITCH
SIGNAL
WHITE
BROWN &
RED
RED & BLACK
GREEN & BLACK
PHONE JACK
RELAY CONTROL TRANSFORMER
RELAY CONTROL
1 MFD.
BELL TRANSFORMER
SIGNAL BELL
OUTPUT AUDIO TRANSFORMER
MOVING COIL
FIELD COIL
C3 ADJUSTABLE CONDENSERS
L1 TUNING COILS
L2 CATHODE COILS
L11 DETECTOR PLATE CHOKE
A. B. C & D CONDENSERS IN ONE BLOCK

SPARKS WITHINGTON CO.

MODEL 56
Schematic

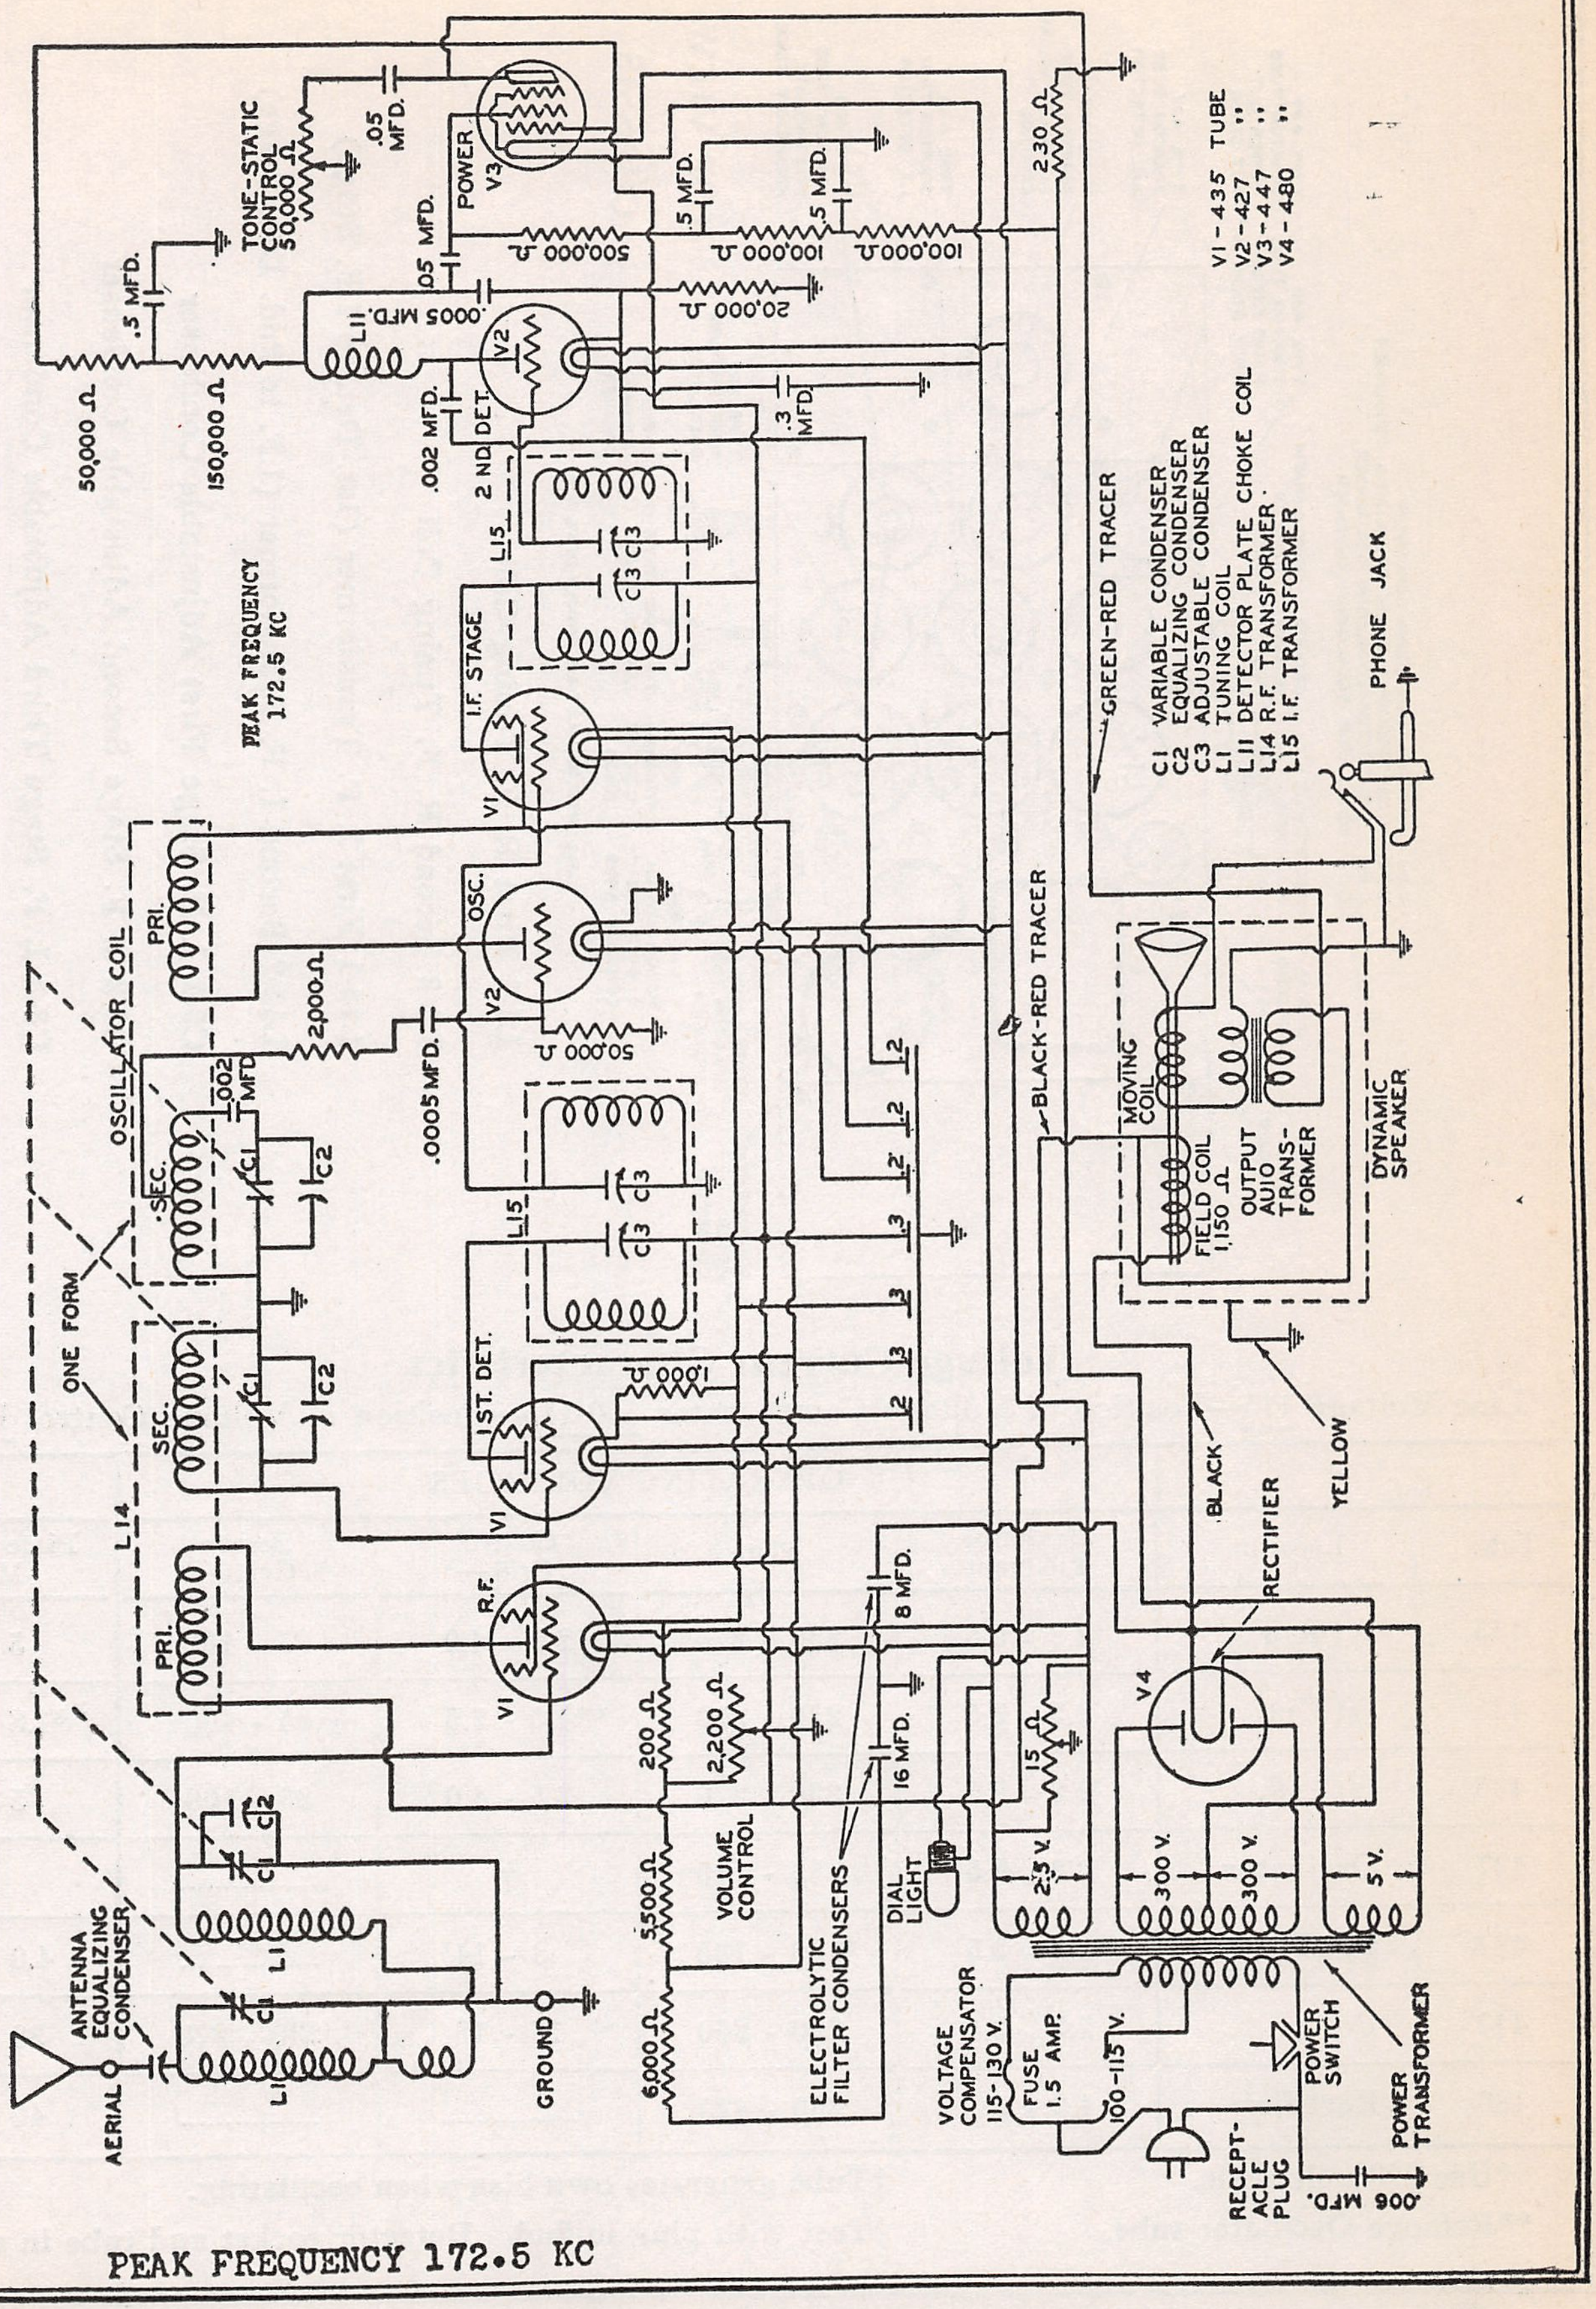
AERIAL
ANTENNA EQUALIZING CONDENSER
L1
C1
C2
GROUND
PRI.
SEC.
L14
ONE FORM
OSCILLATOR COIL
.002 MFD
2,000 Ω
C1
C2
R.F.
V1
1ST. DET.
1000 Ω
L15
C3
.0005 MFD.
V2
OSC.
50,000 Ω
I.F. STAGE
2 ND DET.
.002 MFD.
L11
.0005 MFD.
.05 MFD.
500,000 Ω
POWER V3
.05 MFD.
TONE-STATIC CONTROL 50,000 Ω
.5 MFD.
50,000 Ω
150,000 Ω
20,000 Ω
100,000 Ω
100,000 Ω
.5 MFD.
.5 MFD.
.3 MFD
230 Ω
PEAK FREQUENCY 172.5 KC
200 Ω
2,200 Ω
5,500 Ω
6,000 Ω
VOLUME CONTROL
16 MFD.
8 MFD.
ELECTROLYTIC FILTER CONDENSERS
15 Ω
DIAL LIGHT
2.5 V.
300 V.
300 V.
5 V.
V4
RECTIFIER
VOLTAGE COMPENSATOR
115-130 V.
FUSE 1.5 AMP.
100-115 V.
RECEPT-ACLE PLUG
POWER SWITCH
POWER TRANSFORMER
.006 MFD.
BLACK
YELLOW
BLACK-RED TRACER
GREEN-RED TRACER
FIELD COIL 1,150 Ω
MOVING COIL
OUTPUT AUIO TRANS-FORMER
DYNAMIC SPEAKER
PHONE JACK
C1 VARIABLE CONDENSER
C2 EQUALIZING CONDENSER
C3 ADJUSTABLE CONDENSER
L1 TUNING COIL
L11 DETECTOR PLATE CHOKE COIL
L14 R.F. TRANSFORMER
L15 I.F. TRANSFORMER
V1 - 435 TUBE
V2 - 427 "
V3 - 447 "
V4 - 480 "
2
3

PEAK FREQUENCY 172.5 KC

MODEL 56
Voltage
Socket
Trimmers

SPARKS WITHINGTON CO.

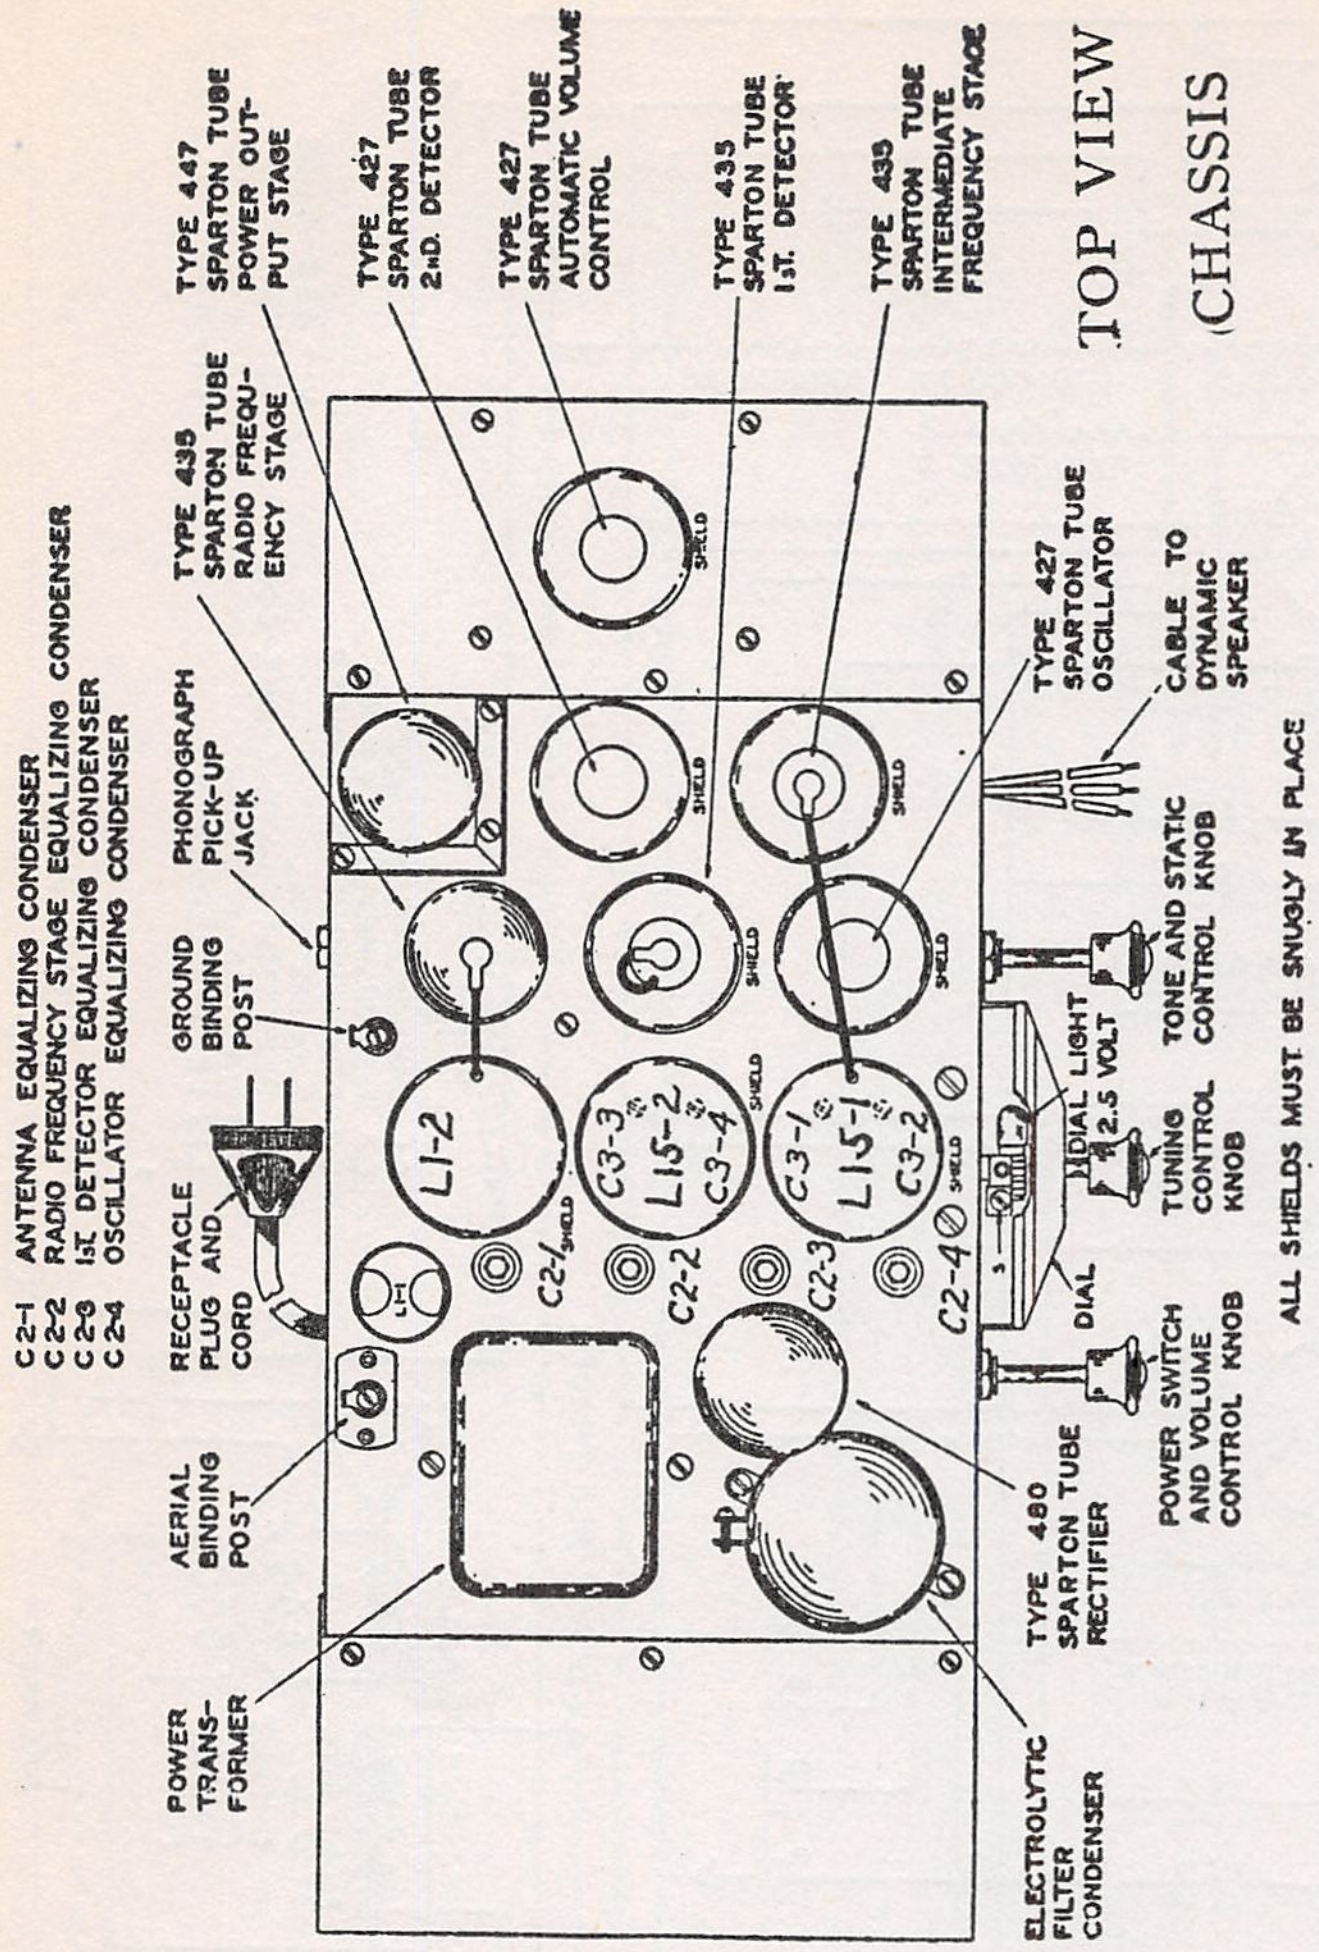
TOP VIEW
(CHASSIS
C2-1 ANTENNA EQUALIZING CONDENSER
C2-2 RADIO FREQUENCY STAGE EQUALIZING CONDENSER
C2-3 1ST. DETECTOR EQUALIZING CONDENSER
C2-4 OSCILLATOR EQUALIZING CONDENSER
TYPE 447 SPARTON TUBE POWER OUT-PUT STAGE
TYPE 427 SPARTON TUBE 2ND. DETECTOR
TYPE 427 SPARTON TUBE AUTOMATIC VOLUME CONTROL
TYPE 435 SPARTON TUBE 1ST. DETECTOR
TYPE 435 SPARTON TUBE INTERMEDIATE FREQUENCY STAGE
TYPE 435 SPARTON TUBE RADIO FREQU-ENCY STAGE
PHONOGRAPH PICK-UP JACK
GROUND BINDING POST
RECEPTACLE PLUG AND CORD
AERIAL BINDING POST
POWER TRANS-FORMER
ELECTROLYTIC FILTER CONDENSER
TYPE 480 SPARTON TUBE RECTIFIER
TYPE 427 SPARTON TUBE OSCILLATOR
CABLE TO DYNAMIC SPEAKER
TONE AND STATIC CONTROL KNOB
DIAL LIGHT 2.5 VOLT
TUNING CONTROL KNOB
DIAL
POWER SWITCH AND VOLUME CONTROL KNOB
ALL SHIELDS MUST BE SNUGLY IN PLACE
SHIELD
L1-2
C3-3
L15-2
C3-4
C3-1
L15-1
C3-2
C2-1
C2-2
C2-3
C2-4

L1-1 First R. F. Tuning Coil
L1-2 Second R. F. Tuning Coil
L15-1 First I. F. Transformer (1st. Det. to I.F. Stage)
L15-2 Second I. F. Transformer (I.F. to 2nd. Det. Stage)
C3-1 I. F. Stage First Adjustable Condenser
C3-2 I. F. Stage Second Adjustable Condenser
C3-3 I. F. Stage Third Adjustable Condenser
C3-4 I. F. Stage Fourth Adjustable Condenser

Voltage Current Characteristics

Line Voltage 115—Position of Voltage Compensator 100-115—Position of Volume Control Full

		OPERATING VOLTAGES				
Tube	Location	Heater or Filament	Plate	Control Grid —	Screen Grid +	Plate Current Mills.
435	1st R. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 100	5 - 8
435	1st Det.	2.2 - 2.5	230 - 270	**4.5 - 7.5	85 - 100	**1.8 - 3.5
435	1st I. F.	2.2 - 2.5	230 - 270	2.5 - 4.0	85 - 100	5 - 8
427	Oscillator	2.2 - 2.5	85 - 110	†	....	‡
427	2nd Det.	2.2 - 2.5	*100 - 135	8 - 14	....	4.0 - .7
447	Power	2.2 - 2.5	220 - 260	15 - 18	230 - 270	30 - 36
480	Rectifier	4.2 - 5	360 - 420	....	....	40 - 55

***Use 300 volt scale.**
****Remove Oscillator tube.**
†Tube generates own bias when oscillating.
‡Test with plug in 2nd. Detector socket and tube in analyzer

SPARKS WITHINGTON CO.

MODEL 60
Short Wave
Converter

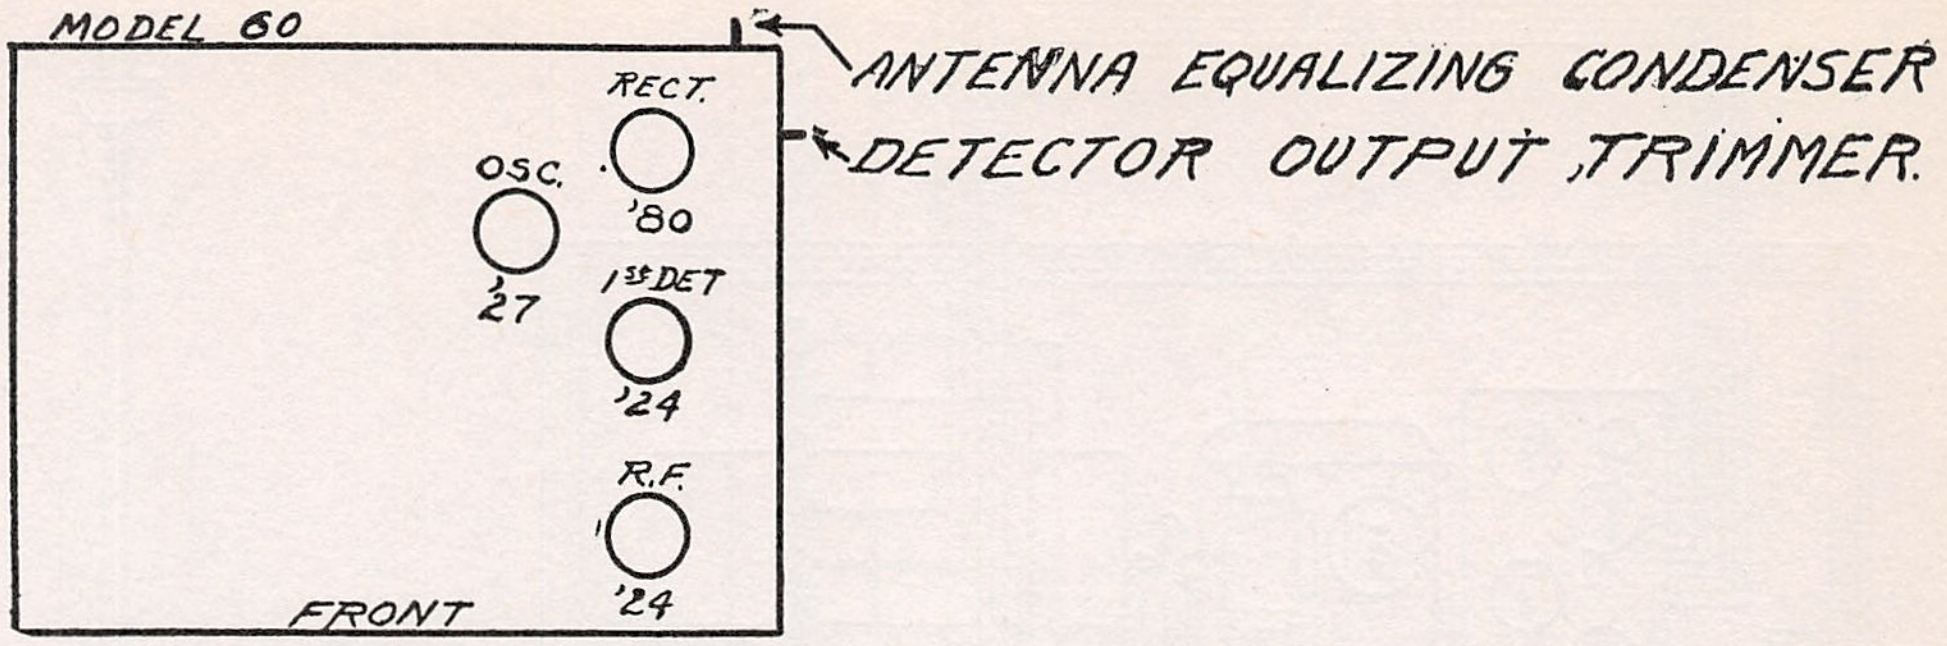
MODEL 60
ANTENNA EQUALIZING CONDENSER
DETECTOR OUTPUT TRIMMER
RECT.
'80
OSC.
27
1st DET
'24
R.F.
'24
FRONT

MODEL 60 SHORT-WAVE CONVERTER

Tube	Location	Filament Heater or	Plate	Control Grid —	Screen Grid +	Plate Current M. A.
'24-A	R. F.	2.2 - 2.5	180 - 230	2 - 3	70 - 100	3 - 6
'24-A	Detector	2.2 - 2.5	180 - 230	*5 - 6	70 - 100	.2 - 1
427	Oscillator	2.2 - 2.5	180 - 230	†	--------	§
'80	Rectifier	4.4 - 5.0	230 - 260	--------	--------	7 - 10

LINE VOLTAGE 115 POSITION OF VOLUME CONTROL FULL

† Tube generates own bias when oscillating.

* Presence of voltage can only be determined by testing circuit continuity and measuring the plate and screen grid current of this tube. Voltage is five thousand times current in amperes.

§ Measure with plug in the second detector socket and tube in test kit.

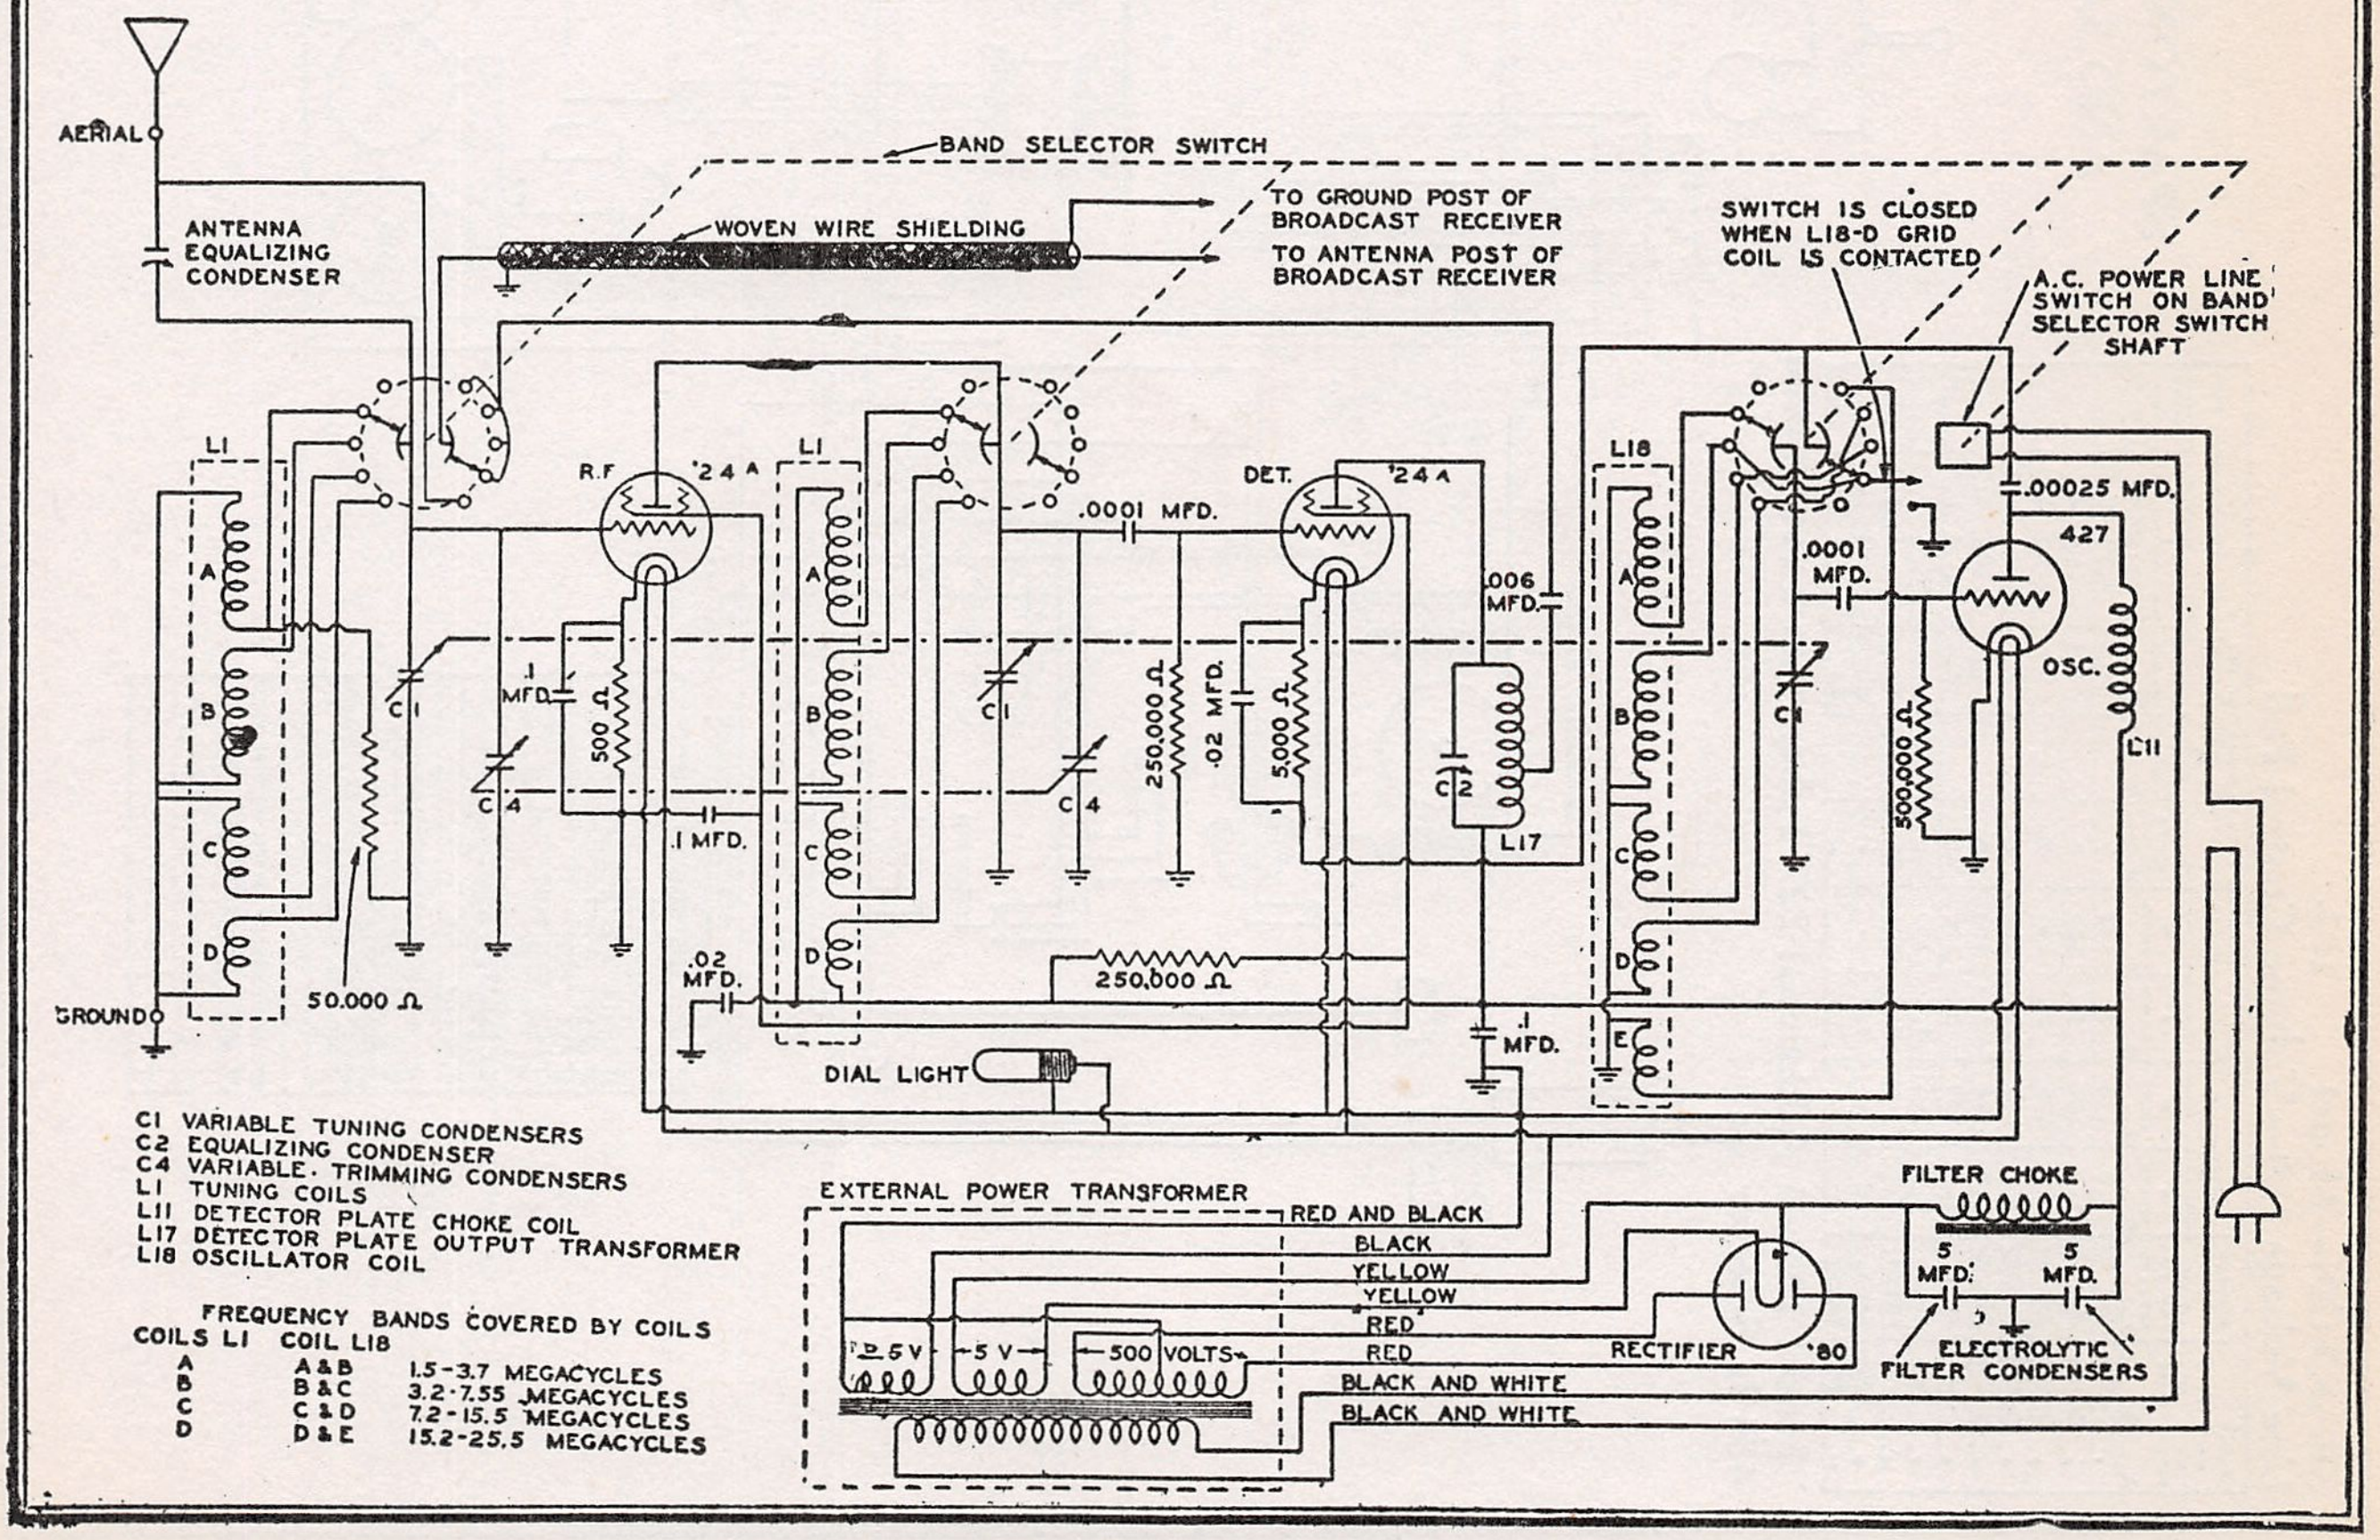
AERIAL
BAND SELECTOR SWITCH
ANTENNA EQUALIZING CONDENSER
WOVEN WIRE SHIELDING
TO GROUND POST OF BROADCAST RECEIVER
TO ANTENNA POST OF BROADCAST RECEIVER
SWITCH IS CLOSED WHEN L18-D GRID COIL IS CONTACTED
A.C. POWER LINE SWITCH ON BAND SELECTOR SWITCH SHAFT
L1
A
B
C
D
R.F.
'24 A
C1
C4
.1 MFD.
500 Ω
.1 MFD.
.0001 MFD.
C1
C4
250,000 Ω
.02 MFD.
DET.
'24 A
5,000 Ω
.006 MFD.
C2
L17
L18
A
B
C
D
E
.0001 MFD.
C1
500,000 Ω
.00025 MFD.
427
OSC.
L11
GROUND
50.000 Ω
.02 MFD.
250,000 Ω
.1 MFD.
DIAL LIGHT
EXTERNAL POWER TRANSFORMER
2.5 V
5 V
500 VOLTS
RED AND BLACK
BLACK
YELLOW
YELLOW
RED
RED
BLACK AND WHITE
BLACK AND WHITE
RECTIFIER
'80
FILTER CHOKE
5 MFD.
5 MFD.
ELECTROLYTIC FILTER CONDENSERS

C1 VARIABLE TUNING CONDENSERS
C2 EQUALIZING CONDENSER
C4 VARIABLE. TRIMMING CONDENSERS
L1 TUNING COILS
L11 DETECTOR PLATE CHOKE COIL
L17 DETECTOR PLATE OUTPUT TRANSFORMER
L18 OSCILLATOR COIL

FREQUENCY BANDS COVERED BY COILS

COILS L1	COIL L18	
A	A & B	1.5-3.7 MEGACYCLES
B	B & C	3.2-7.55 MEGACYCLES
C	C & D	7.2-15.5 MEGACYCLES
D	D & E	15.2-25.5 MEGACYCLES

MODEL 103,578.
Assembly Wiring
Voltage

SPARKS WITHINGTON CO.

SPARTON—Model 103.
Line Voltage 120—Volume Control Full

TUBE NO. IN ORDER ①	TYPE OF TUBE ②	POSITION OF TUBE 1ST. R.F DET., ETC. ③	READINGS. PLUG IN SOCKET OF SET									
			TUBE OUT		TUBE IN TESTER							
			A VOLTS ④	B VOLTS ⑤	A VOLTS ⑥	B VOLTS ⑦	C VOLTS (CONTROL GRID) ⑧	CATHODE - HEATER ⑨ VOLTS	NORMAL PLATE ⑩ M.A.	PLATE M.A GRID ⑪ TEST	PLATE CHANGE ⑫ M.A.	SCREEN GRID ⑬ VOLTS
1	C-484	1st RF	3.2	125	3	120	9		4.3	7.3	3.0	
2	C-484	2nd RF	3.2	126	3	122	8		6.5	11.4	4.9	
3	C-484	3rd RF	3.2	125	3	122	8		8	9.5	1.5	
4	D-484	4th RF	3.2	125	3	122	8		6.5	11.2	4.7	
5	C-484	5th RF	3.2	128	3	120	8		6.3	11.0	4.7	
6	C-484	Det.	3.2	240	3	185	32		3.8	6.	2.2	
7	585	Audio	7.9	345	7.7	340	65		55	60	5	
8	585	Audio	7.9	345	7.7	340	65		55	60	5	
9	281	Rect.	8	-	7.7	-	-		68	-	-	
10	281	Rect.	8	-	7.7	-	-		68	-	-	

Model 103—1 Additional 227 Tube, Also 1 Additional 484 in Selector

SPARTON ENSEMBLE MODEL 103 AND 578 WIRING ASSEMBLY

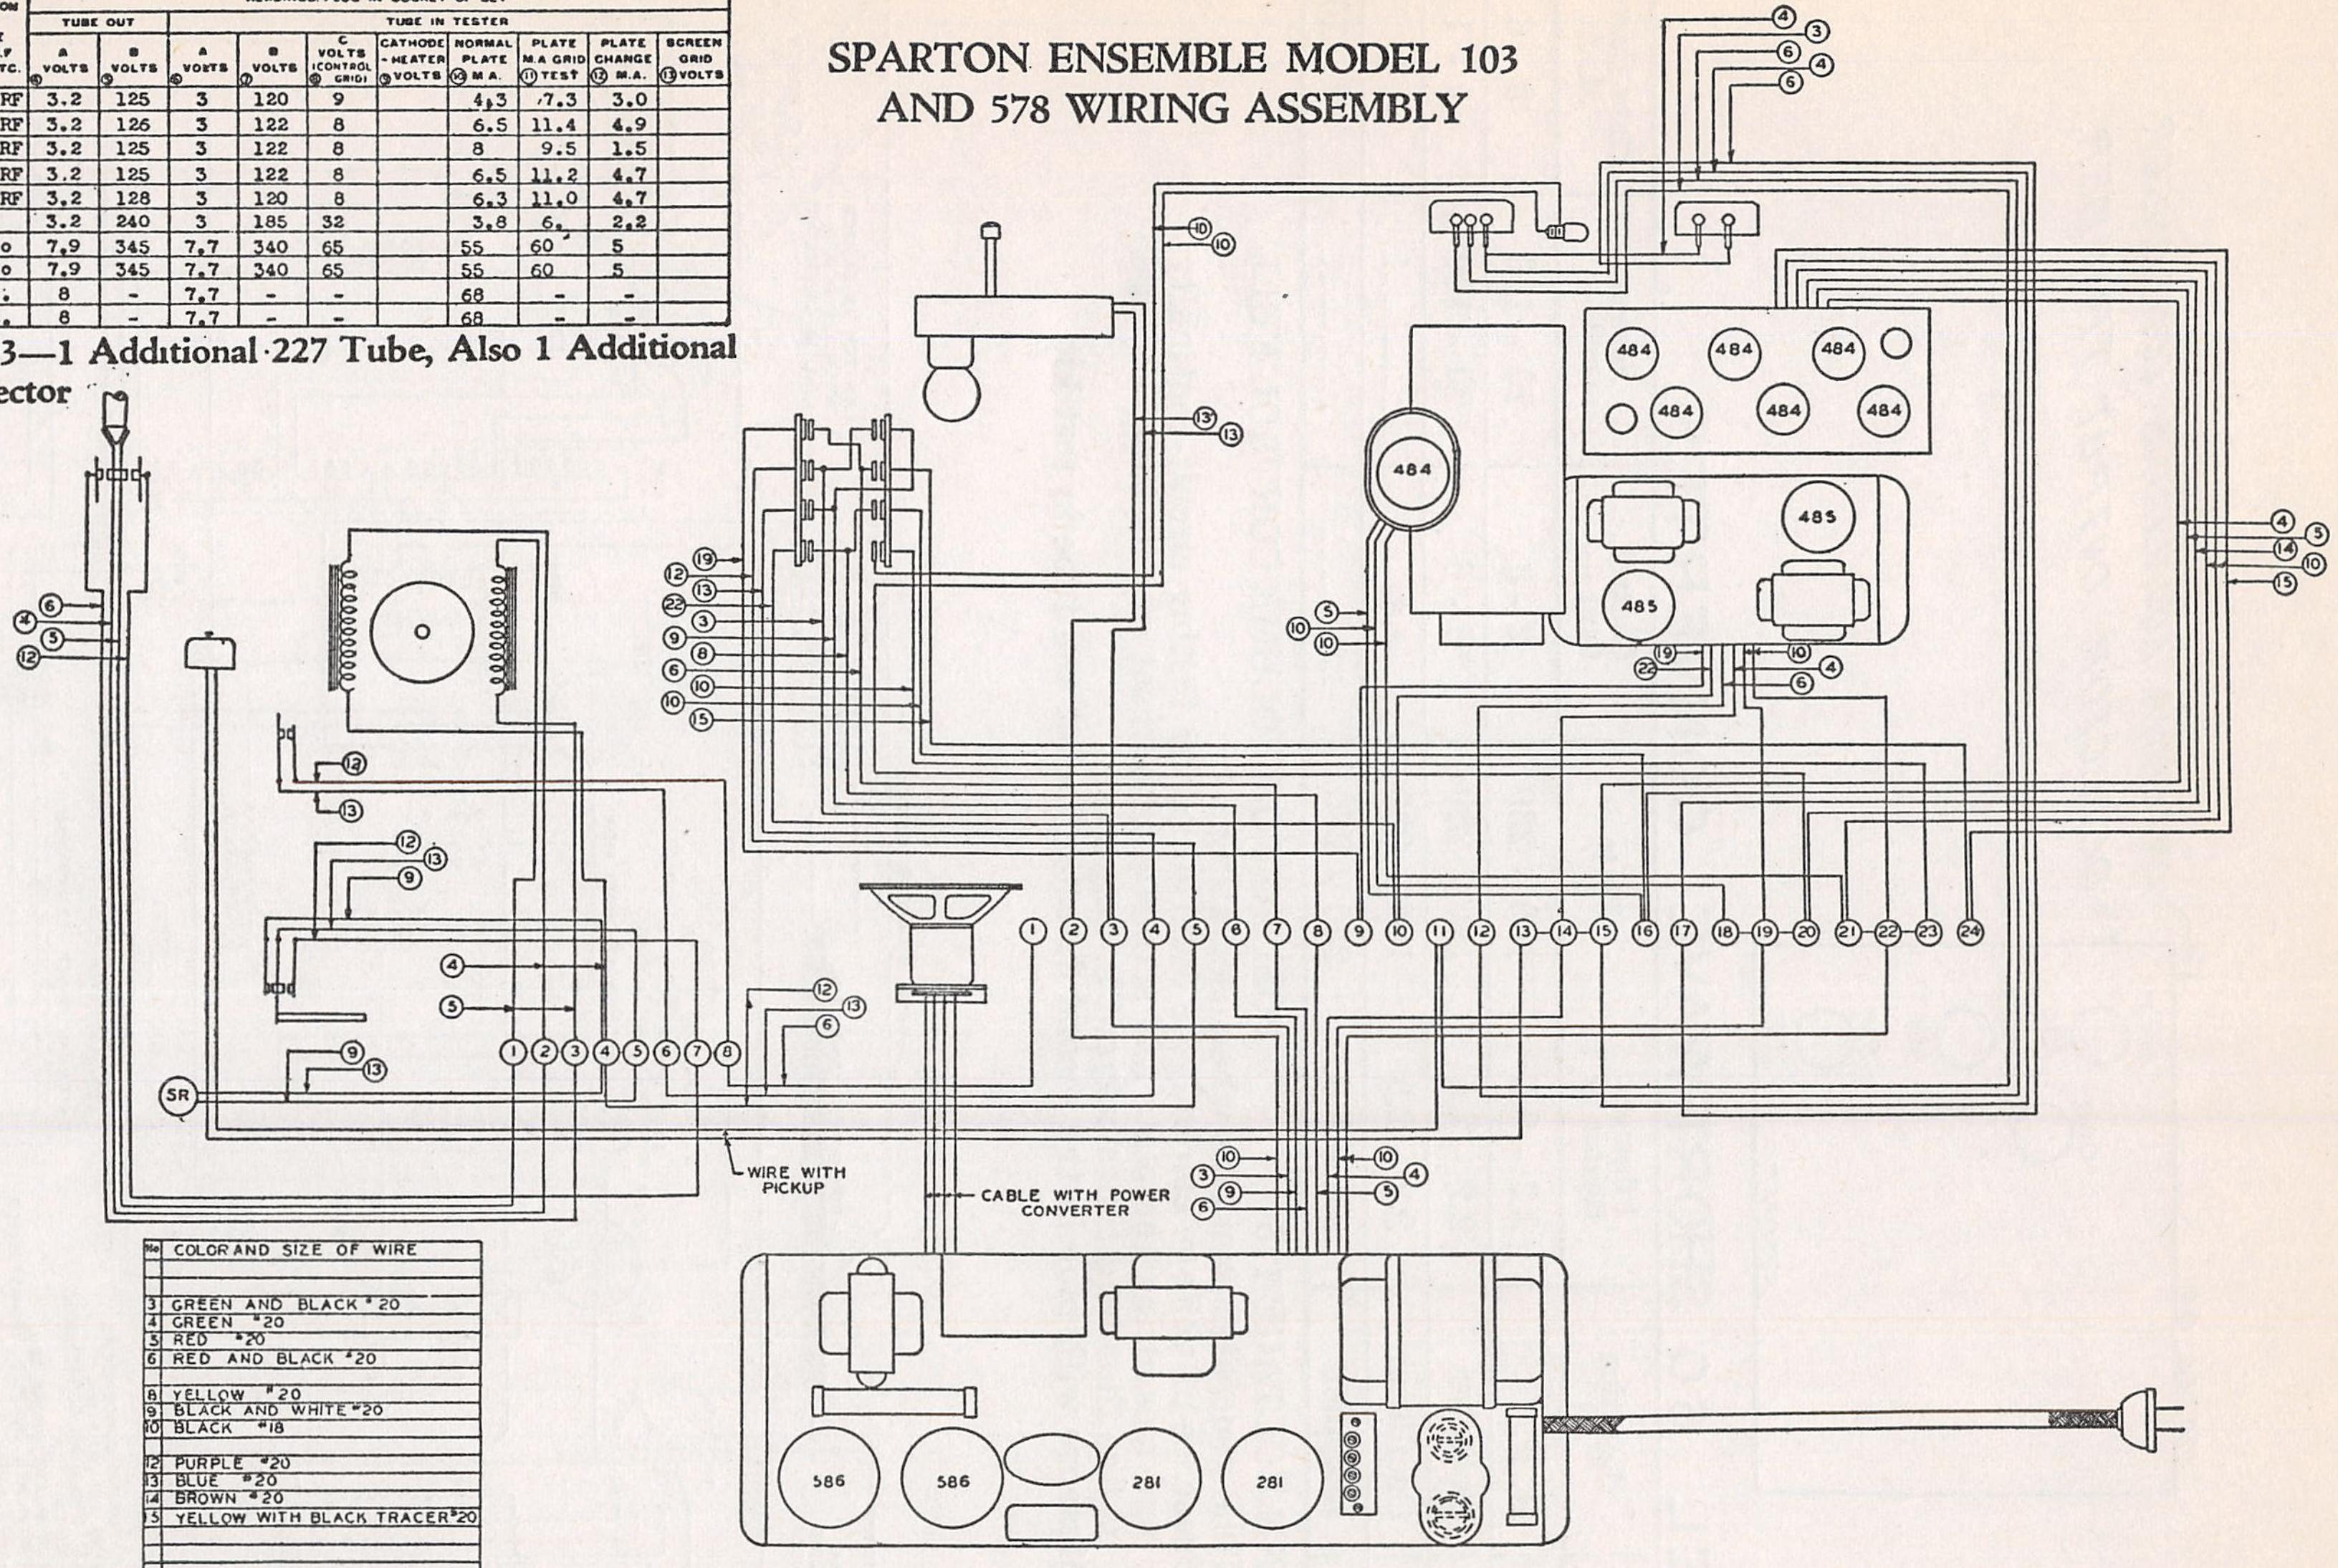

No	COLOR AND SIZE OF WIRE
3	GREEN AND BLACK #20
4	GREEN #20
5	RED #20
6	RED AND BLACK #20
8	YELLOW #20
9	BLACK AND WHITE #20
10	BLACK #18
12	PURPLE #20
13	BLUE #20
14	BROWN #20
15	YELLOW WITH BLACK TRACER #20
19	TAN WITH BLUE PIN TRACER #20
20	BLACK TWISTED PAIR #14
22	BLUE WITH RED TRACER #20

SPARKS-WITHINGTON CO.

MODEL 103,578
Schematic.

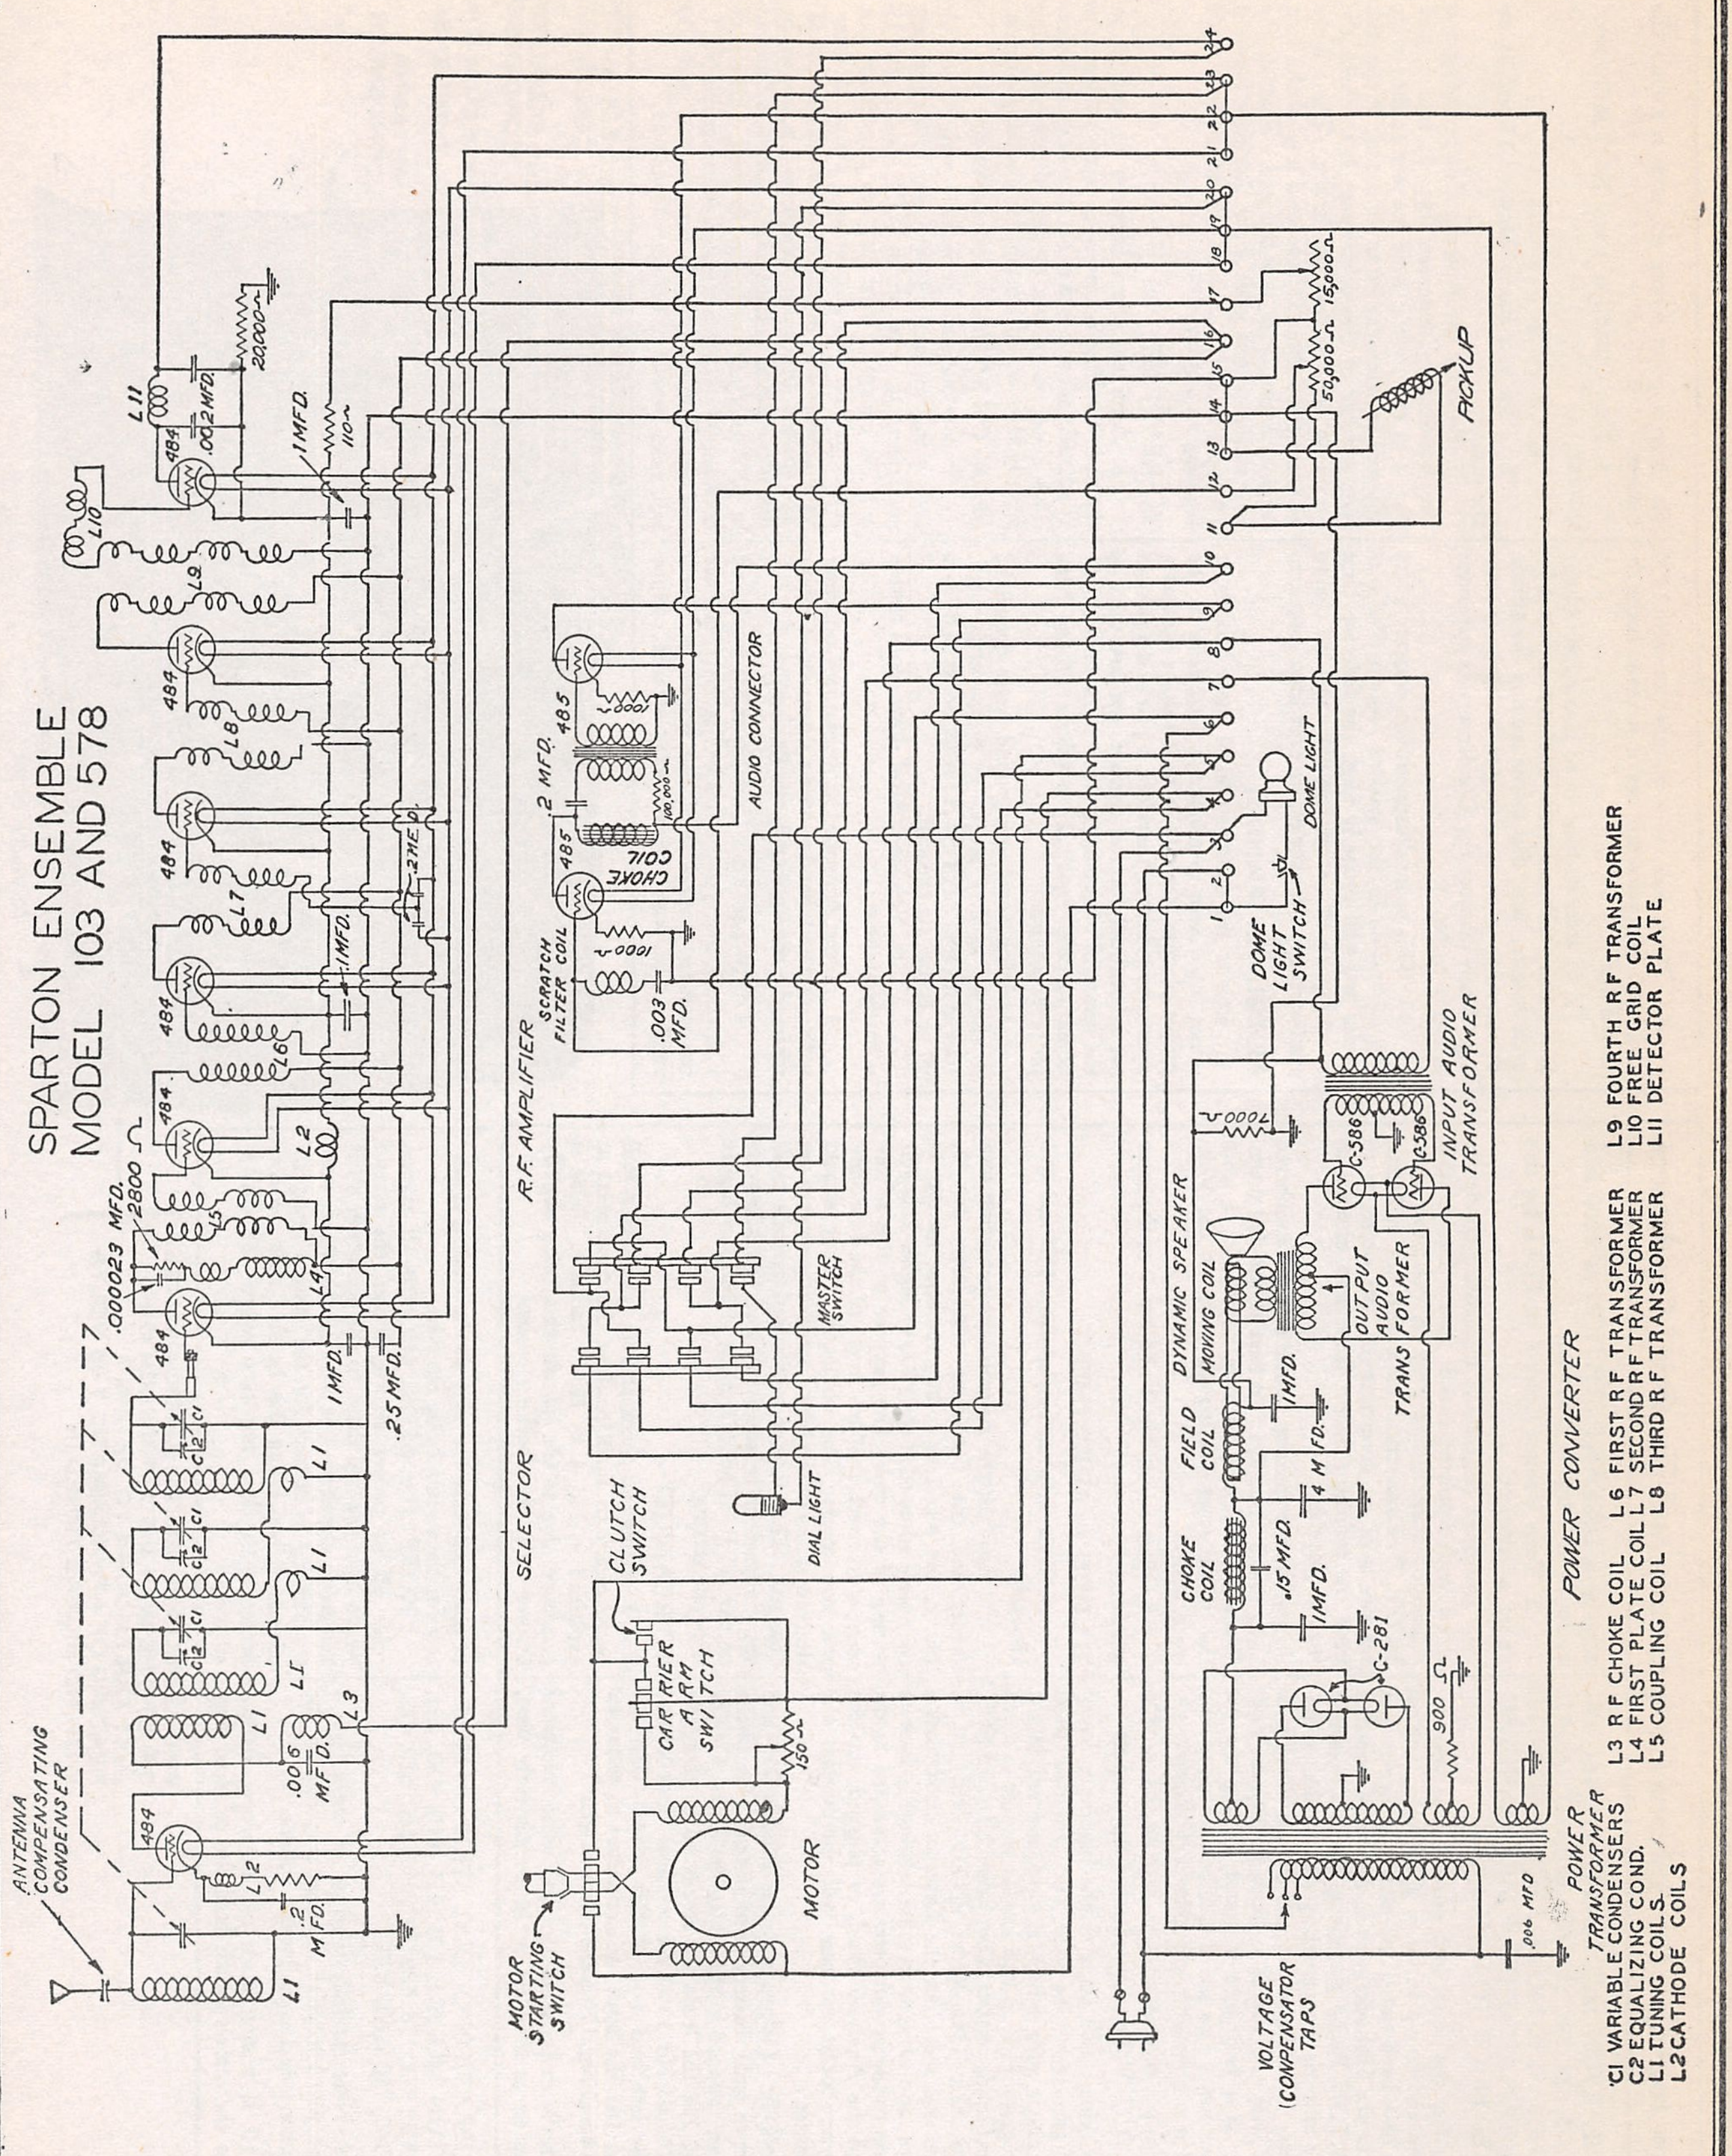
SPARTON ENSEMBLE
MODEL 103 AND 578
ANTENNA COMPENSATING CONDENSER
484
L1
L2
.2 MFD.
.006 MFD.
L3
C1
C2
L4
L5
.000023 MFD.
2800
1 MFD.
.25 MFD.
L6
L7
L8
L9
L10
L11
.1 MFD.
.2 MFD.
.002 MFD.
20,000 Ω
110 Ω
SELECTOR
R.F. AMPLIFIER
SCRATCH FILTER COIL
.003 MFD.
485
1000 Ω
CHOKE COIL
2 MFD.
100,000 Ω
AUDIO CONNECTOR
MASTER SWITCH
DIAL LIGHT
CLUTCH SWITCH
CARRIER ARM SWITCH
150 Ω
MOTOR
MOTOR STARTING SWITCH
DOME LIGHT SWITCH
DOME LIGHT
PICKUP
50,000 Ω
15,000 Ω
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
DYNAMIC SPEAKER
MOVING COIL
FIELD COIL
OUTPUT AUDIO TRANSFORMER
1 MFD.
4 MFD.
.15 MFD.
CHOKE COIL
7000 Ω
C-586
INPUT AUDIO TRANSFORMER
C-281
900 Ω
POWER CONVERTER
POWER TRANSFORMER
.006 MFD
VOLTAGE COMPENSATOR TAPS
C1 VARIABLE CONDENSERS
C2 EQUALIZING COND.
L1 TUNING COILS.
L2 CATHODE COILS
L3 R F CHOKE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
L6 FIRST R F TRANSFORMER
L7 SECOND R F TRANSFORMER
L8 THIRD R F TRANSFORMER
L9 FOURTH R F TRANSFORMER
L10 FREE GRID COIL
L11 DETECTOR PLATE

Antenna Trimmer
Service Notes

SPARKS WITHINGTON CO.

How to Adjust the Antenna Compensating and Equalizing Condensers

SPARTON MODELS 103, 235, 564, 570, 574, 578, 589, 591, 593, 600, 610, 620, 740, 750 AND 870, ALSO MODELS EQUIPPED WITH PHONOGRAPH PICKUP JACK MANUFACTURED PRIOR TO JUNE 1, 1930.

After the aerial and ground have been inspected and found to be in good order, and all tubes have been tested and placed in their proper sockets, the final operation in the installation of a SPARTON Radio Receiving Set is adjustment of the antenna compensating and equalizing condensers. This adjustment should ALWAYS be made with the use of a High Resistance Voltmeter as a resonance indicator. Using the ear as a resonance indicator should be resorted to only when it is impossible to employ a Voltmeter.

Any 1,000 ohm per volt 0-60, 75 or 100 scale D. C. Voltmeter will serve the purpose.

Connect two leads to the binding posts of the Voltmeter to be used, and terminate them in a phone plug which is then inserted in the Phonograph Pick-up Jack just far enough to touch the first inside contact. (See figure 2.) (DO NOT PLUG ALL THE WAY INTO THE JACK, as this will short out the Detector tube biasing resistor, and cause inaccurate readings.) Be sure that no Analyzer Adapters are connected to the end of the Analyzer Cord, or plugged into the Analyzer Socket, as this will short-circuit the Voltmeter.

NOTE: (When aligning Models 235 and 103, two small battery clips instead of a phone plug are fastened to the Voltmeter leads. On the Model 235 the leads are connected to terminals No. 11 and No. 13 of the terminal block located on the left-hand side of the cabinet. On the Model 103 the leads are connected to terminals No. 14 and No. 17 on the terminal strip.)

1. With aerial and ground wires connected to the set as they are to be permanently used, tune in a DISTANT STATION at 1200 kilocycles or at a higher frequency.

2. Turn Volume Control on FULL for this entire adjustment.

3. Adjust Antenna Compensating condenser screw with insulated handle Screw Driver until indicator reaches highest point on Voltmeter scale. NOTE: The numerical value that the indicator reaches is of no consequence. The object is to have the indicator deflect from zero upward as high as possible.

4. The equalizing condensers are numbered 1, 2, and 3. Number 3 is next to the dial drum. With the adjusting wrench, adjust No. 3 until the indicator reaches highest point on the Voltmeter scale.

5. Next adjust No. 1 and No. 2 in the same manner.

TO CHECK ADJUSTMENT

6. Tune in a station between 550 and 650 kilocycles.

7. Readjust the Antenna compensating condenser and the Equalizing condensers No. 3, No. 1, and No. 2 in exactly the same manner as they were adjusted at the 1200 or higher kilocycle setting of the dial. The purpose of this adjustment is to check the "tracking" of the four variable condensers. The voltmeter reading should decrease if any of the four original adjustments are changed. That is, the four tuned circuits must show alignment between 550 and 650 kilocycles on the ADJUSTMENT made at 1200 or higher kilocycle setting.

TO READJUST

8. After the check at 550 kilocycles it will be necessary to again readjust the condensers as explained in No. 1 to No. 5 inclusive. This is necessary, due to the adjustments being slightly thrown off in the checking process.

CALIBRATION OF DIAL STRIP ON SPARTON MODELS 103, 235, 410, 420, 564, 570, 574, 578, 589, 591, 593, 600, 610, 620, 740, 750 AND 870.

9. Note carefully whether or not a station around 600 kilocycles indicates correctly on the dial when tuned to the loudest volume.

10. If station reads off its proper setting, loosen the screws which hold the celluloid strip in place and slide the strip so the reading is correct for the station being received.

NOTE: (On Models 410, 420—If station reads off its proper setting, loosen the screws which hold the dial drum to the condenser shaft and move the drum one way or the other, until the reading is correct for the station being received. When doing this be sure that the condenser shaft does not turn when the dial is moved.)

11. Next, tune in a station between 1100 and 1300 kilocycles and see if it reads correctly on the dial.

12. If stations tune in to maximum volume at a setting different from station's correct kilocycle reading, turn dial to the reading the station should come in on according to its log-book reading. Then readjust the Condensers as explained in No. 1 to No. 5.

13. This final adjustment will scarcely affect the calibration of the stations around 600 kilocycles and will properly align the Selector Unit to its highest efficiency, and will cause the dial to read correctly over the entire broadcast spectrum.

MODELS AR-19 AND 31

Due to the construction of these Models, it is not convenient to connect a Voltmeter at the proper place in the circuit so it can be used as a resonance indicator, therefore, a pair of ear phones are substituted for the speaker and are used as the means of determining when the antenna compensating and equalizing condensers have been properly adjusted.

1. With aerial and ground wires connected to the set as they are to be permanently used, tune in a DISTANT STATION between 80 and 90 or higher on the dial.

2. Turn Volume control down until station is barely audible.

3. Adjust Antenna Compensating Condenser with insulated handle screw driver to a point where the station sounds the loudest.

4. The Equalizing Condensers are numbered 1, 2, and 3, from front to back of receiver. Reduce the volume control until the station is barely audible and with the adjusting wrench, adjust No. 3 to a point where the station sounds the loudest.

5. Next adjust No. 1 and No. 2 in the same manner.

TO CHECK ADJUSTMENT

6. Tune in a station between 15 and 25 on the dial.

7. Readjust the Antenna Compensating and the Equalizing Condensers No. 3, No. 1, and No. 2 in exactly the same manner as they were adjusted between the 80 to 90 setting of the dial. The purpose of this adjustment is to check the "tracking" of the four condensers. The volume of the station should decrease if any of the four original adjustments are changed. That is, the four tuned circuits must show alignment between 15 and 25 on the dial on the adjustment made between 80 and 90.

TO READJUST

8. After the check between 15 and 25 on the dial, it will be necessary to again readjust the condensers as explained in No. 1 to No. 5 inclusive. This is necessary due to the adjustments being slightly thrown off during the checking process.

SPARTON MODELS 410 AND 420

Follow the same procedure outlined for adjusting the antenna compensating and equalizing condensers for the SPARTON Models AR-19 and 31, except in this case ear phones are not substituted for the speaker as a means of determining when the condensers are properly adjusted. The speaker serves this purpose as it is, and as the dial is calibrated in kilocycles a station is tuned in at 1200 kilocycles or higher frequency instead of between 80 and 90 as specified in paragraph No. 1, and the re-check is made between 500 and 600 kilocycles instead of between 15 and 25.

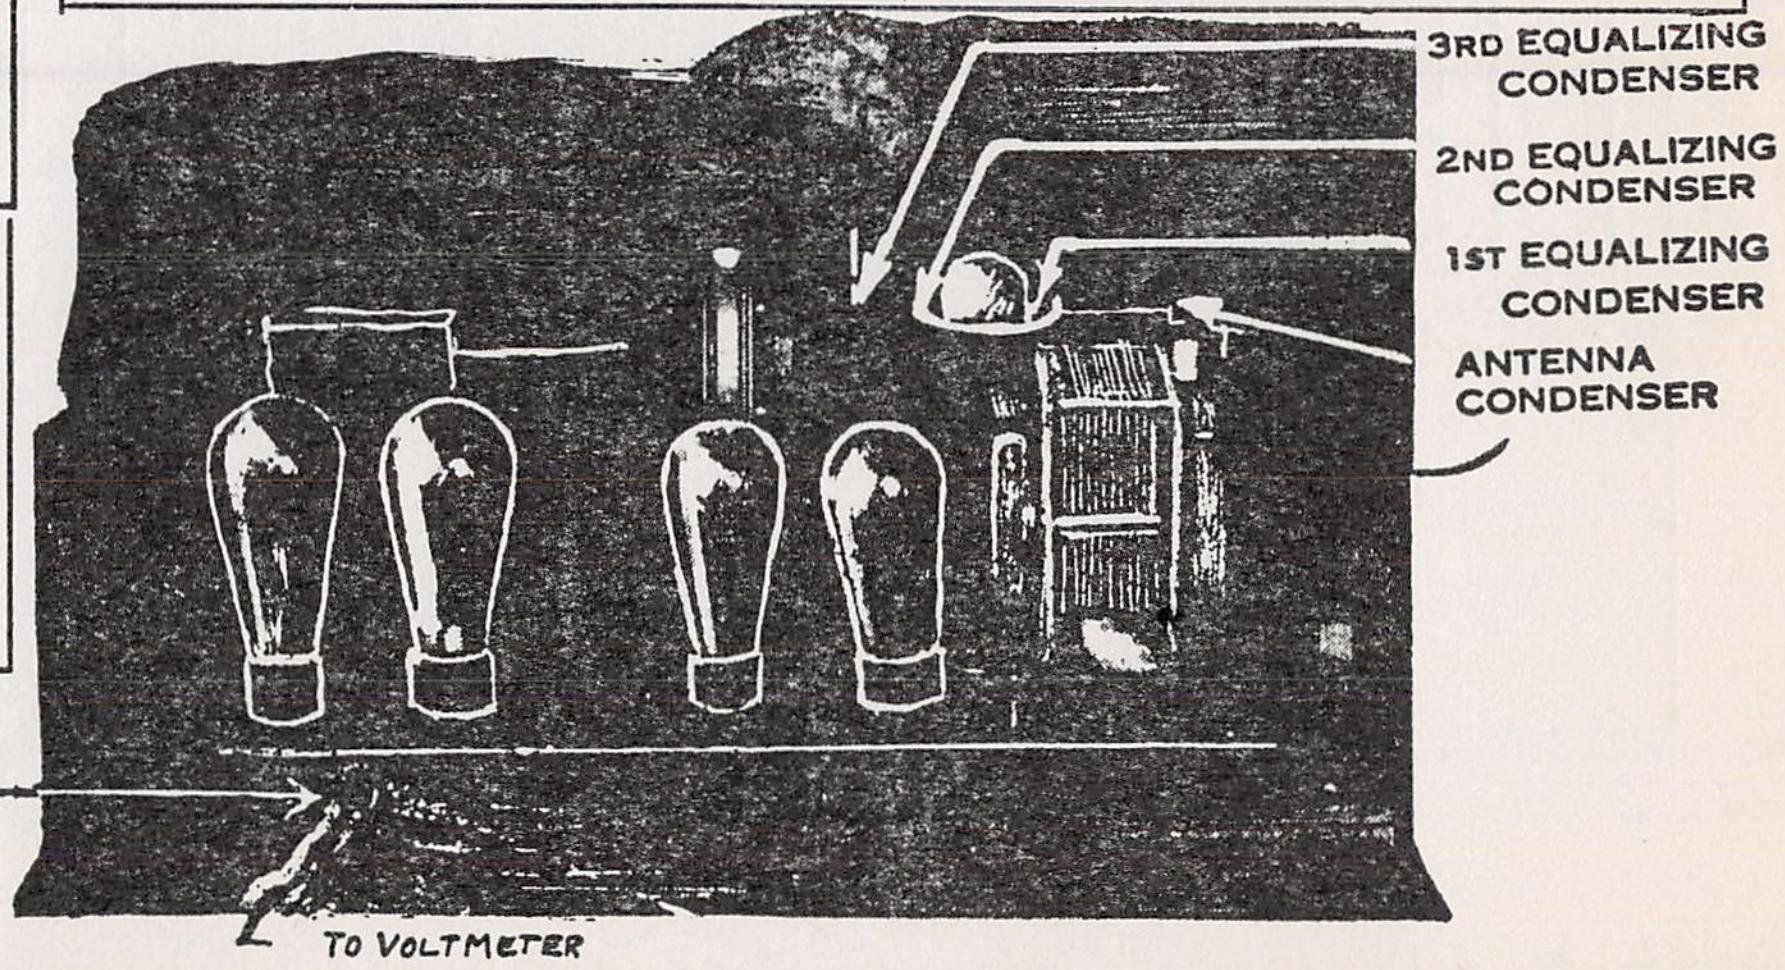
3RD EQUALIZING CONDENSER
2ND EQUALIZING CONDENSER
1ST EQUALIZING CONDENSER
ANTENNA CONDENSER
PHONE PLUG INSERTED APPROXIMATELY 3/4 OF THE WAY INTO THE JACK OR JUST FAR ENOUGH TO OBTAIN A READING OF APPROXIMATELY 15 VOLTS WITH NO SIGNAL TUNED IN
TO VOLTMETER

SPARKS WITHINGTON CO.

MODEL 111-A,574,870
Schematic

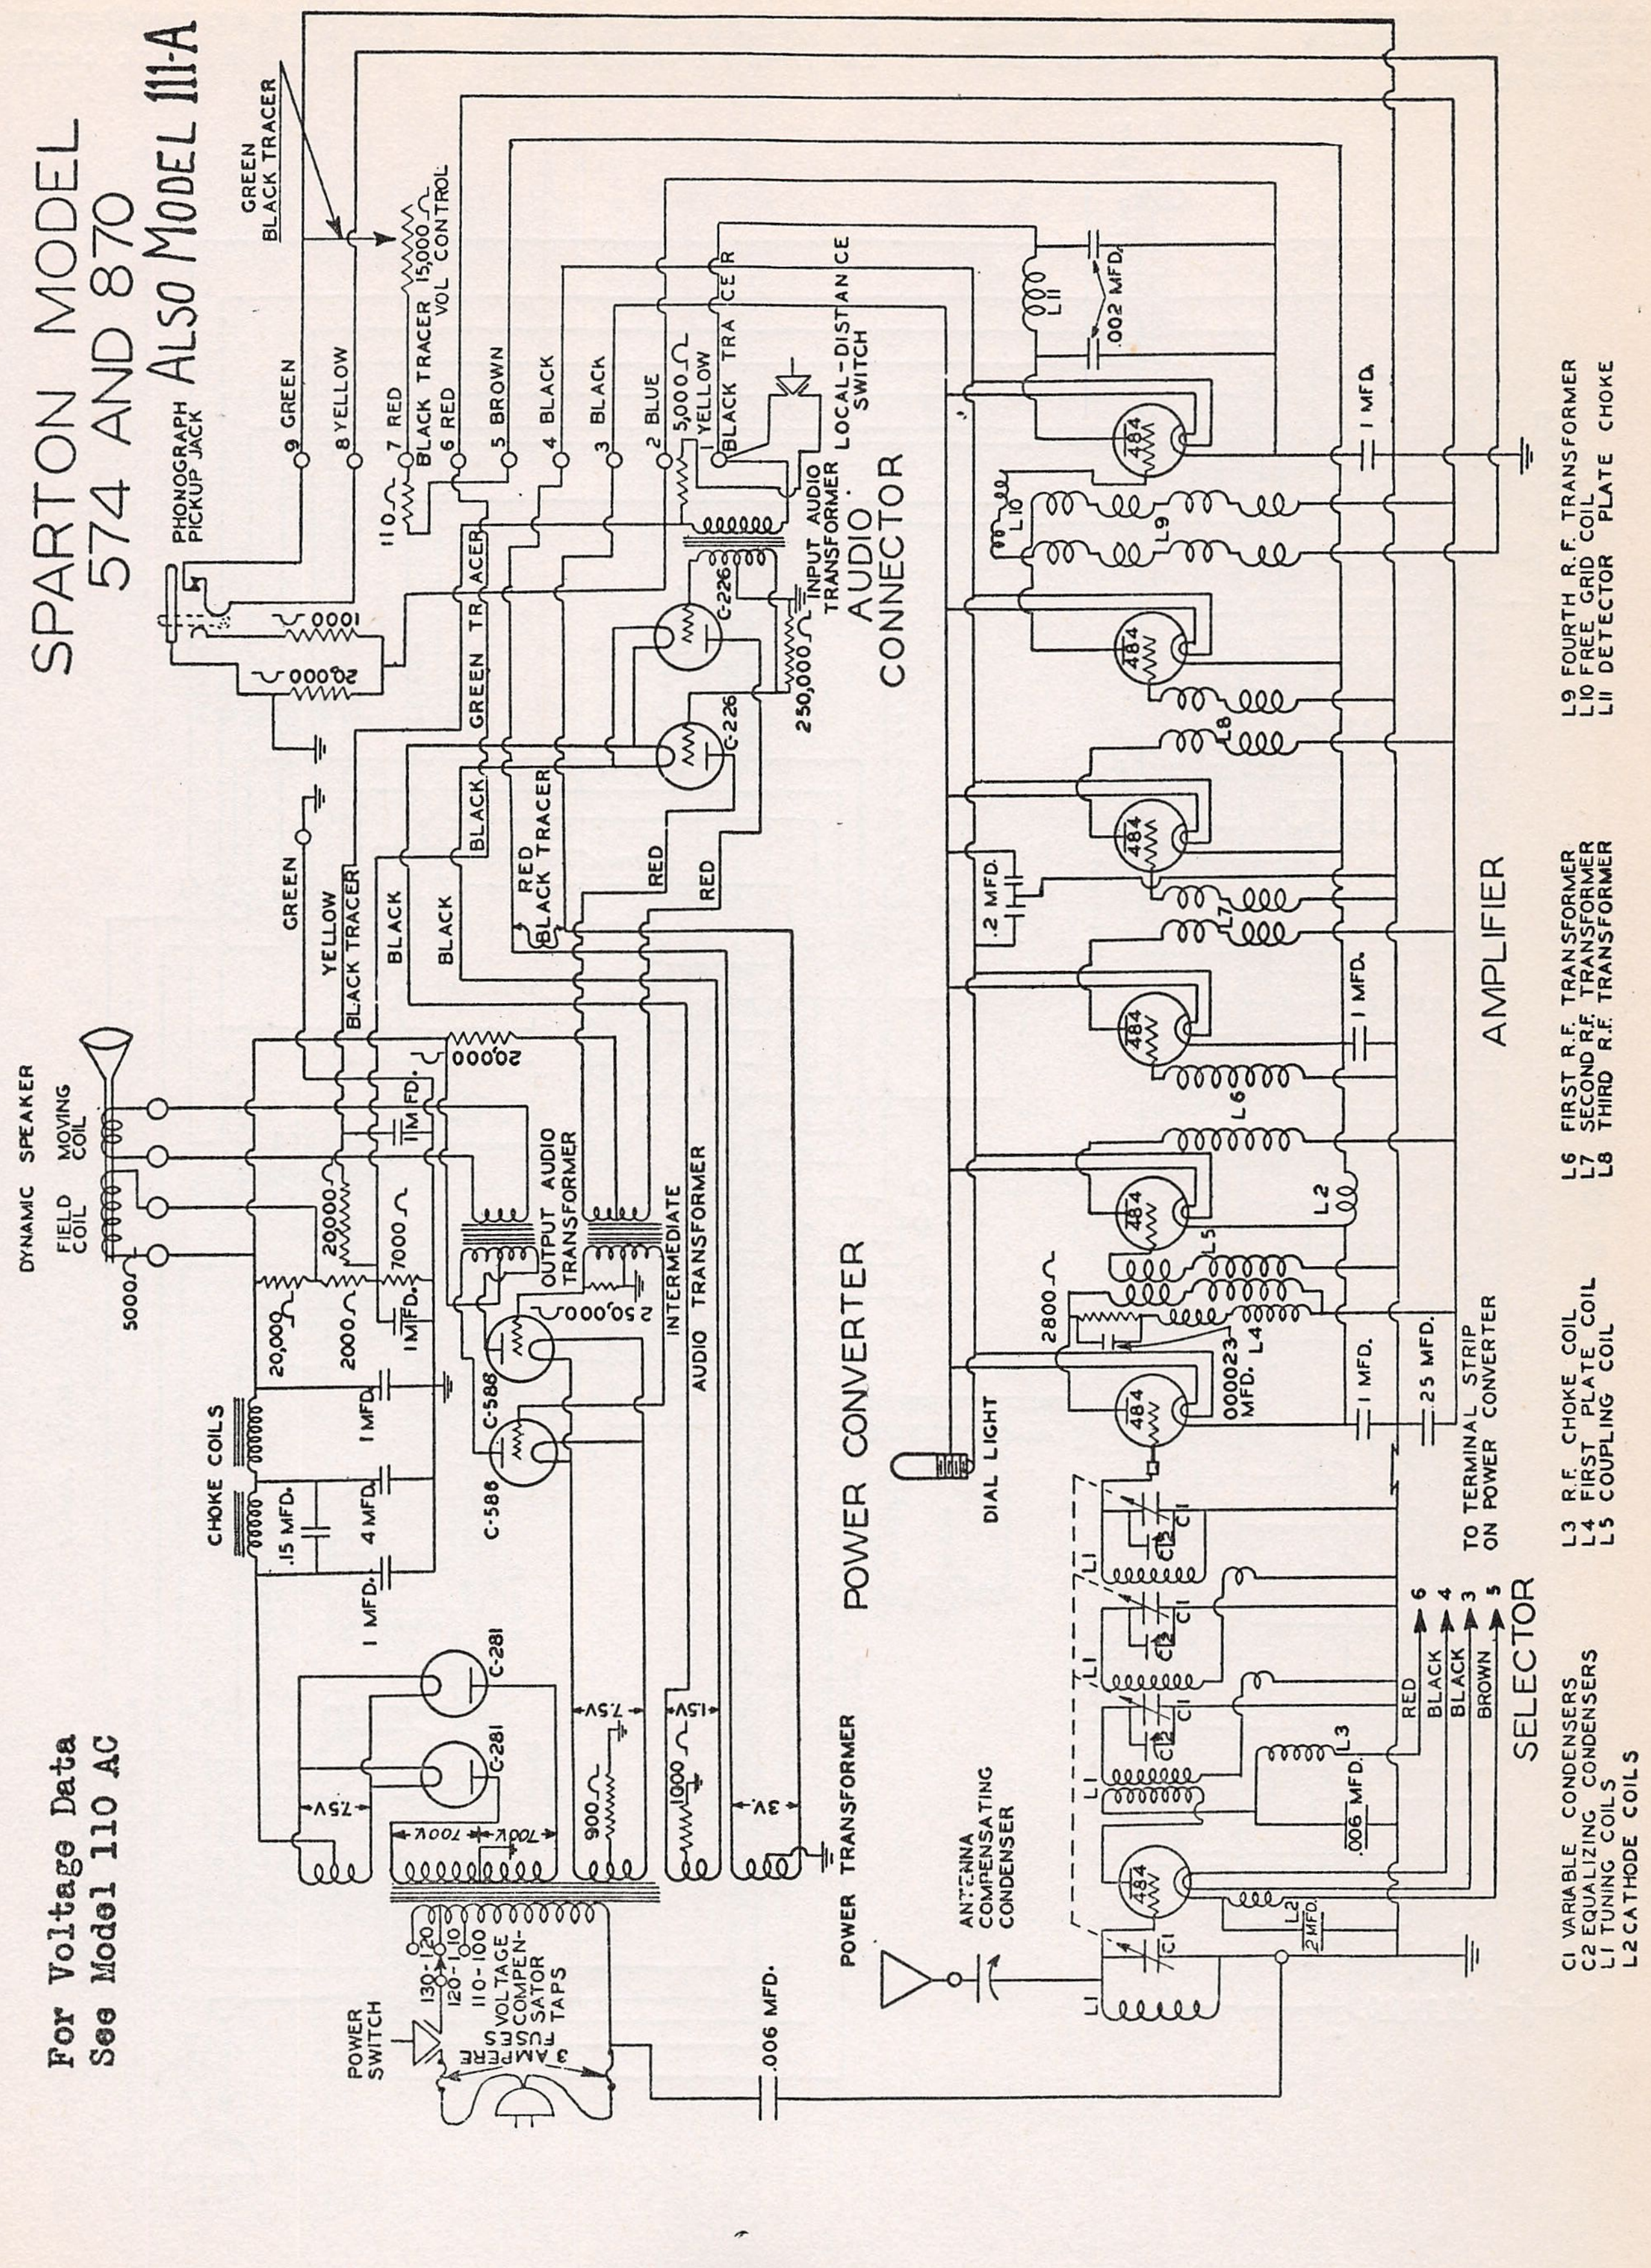
SPARTON MODEL 574 AND 870 Also MODEL 111-A

For Voltage Data
See Model 110 AC

PHONOGRAPH PICKUP JACK
GREEN BLACK TRACER
15,000 Ω VOL CONTROL
9 GREEN
8 YELLOW
7 RED
BLACK TRACER
6 RED
5 BROWN
4 BLACK
3 BLACK
2 BLUE
5,000 Ω
YELLOW
BLACK TRACER
LOCAL-DISTANCE SWITCH
INPUT AUDIO TRANSFORMER
AUDIO CONNECTOR
110 Ω
1000 Ω
20,000 Ω
250,000 Ω
C-226
C-226
L11
.002 MFD.
1 MFD.
484
L10
L9
L8
L7
L6
L5
L4
L3
L2
L1
GREEN
YELLOW
BLACK TRACER
BLACK
BLACK
GREEN TRACER
BLACK
RED BLACK TRACER
RED
RED
.2 MFD.
1 MFD.
AMPLIFIER
DYNAMIC SPEAKER
FIELD COIL
MOVING COIL
5000 Ω
20,000 Ω
7000 Ω
2000 Ω
1 MFD.
OUTPUT AUDIO TRANSFORMER
INTERMEDIATE AUDIO TRANSFORMER
250,000 Ω
C-586
C-586
POWER CONVERTER
DIAL LIGHT
2800 Ω
.000023 MFD.
1 MFD.
.25 MFD.
TO TERMINAL STRIP ON POWER CONVERTER
CHOKE COILS
.15 MFD.
4 MFD.
1 MFD.
1 MFD.
C-281
C-281
7.5V
7.5V
15V
3V
700V
700V
900 Ω
1000 Ω
POWER TRANSFORMER
130-120
120-110
110-100
VOLTAGE COMPENSATOR TAPS
3 AMPERE FUSES
POWER SWITCH
.006 MFD.
ANTENNA COMPENSATING CONDENSER
C1
C2
.006 MFD.
2 MFD.
RED
BLACK
BLACK
BROWN
6
4
3
5
SELECTOR
L9 FOURTH R.F. TRANSFORMER
L10 FREE GRID COIL
L11 DETECTOR PLATE CHOKE
L6 FIRST R.F. TRANSFORMER
L7 SECOND R.F. TRANSFORMER
L8 THIRD R.F. TRANSFORMER
L3 R.F. CHOKE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COILS

MODEL 235
Schematic

SPARKS WITHINGTON CO.

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COIL
L3 R.F. CHOKE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
L6 FIRST R.F. TRANSFORMER
L7 SECOND R.F. TRANSFORMER
L8 THIRD R.F. TRANSFORMER
L9 FOURTH R.F. TRANSFORMER
L10 GRID COIL
L11 DETECTOR PLATE CHOKE

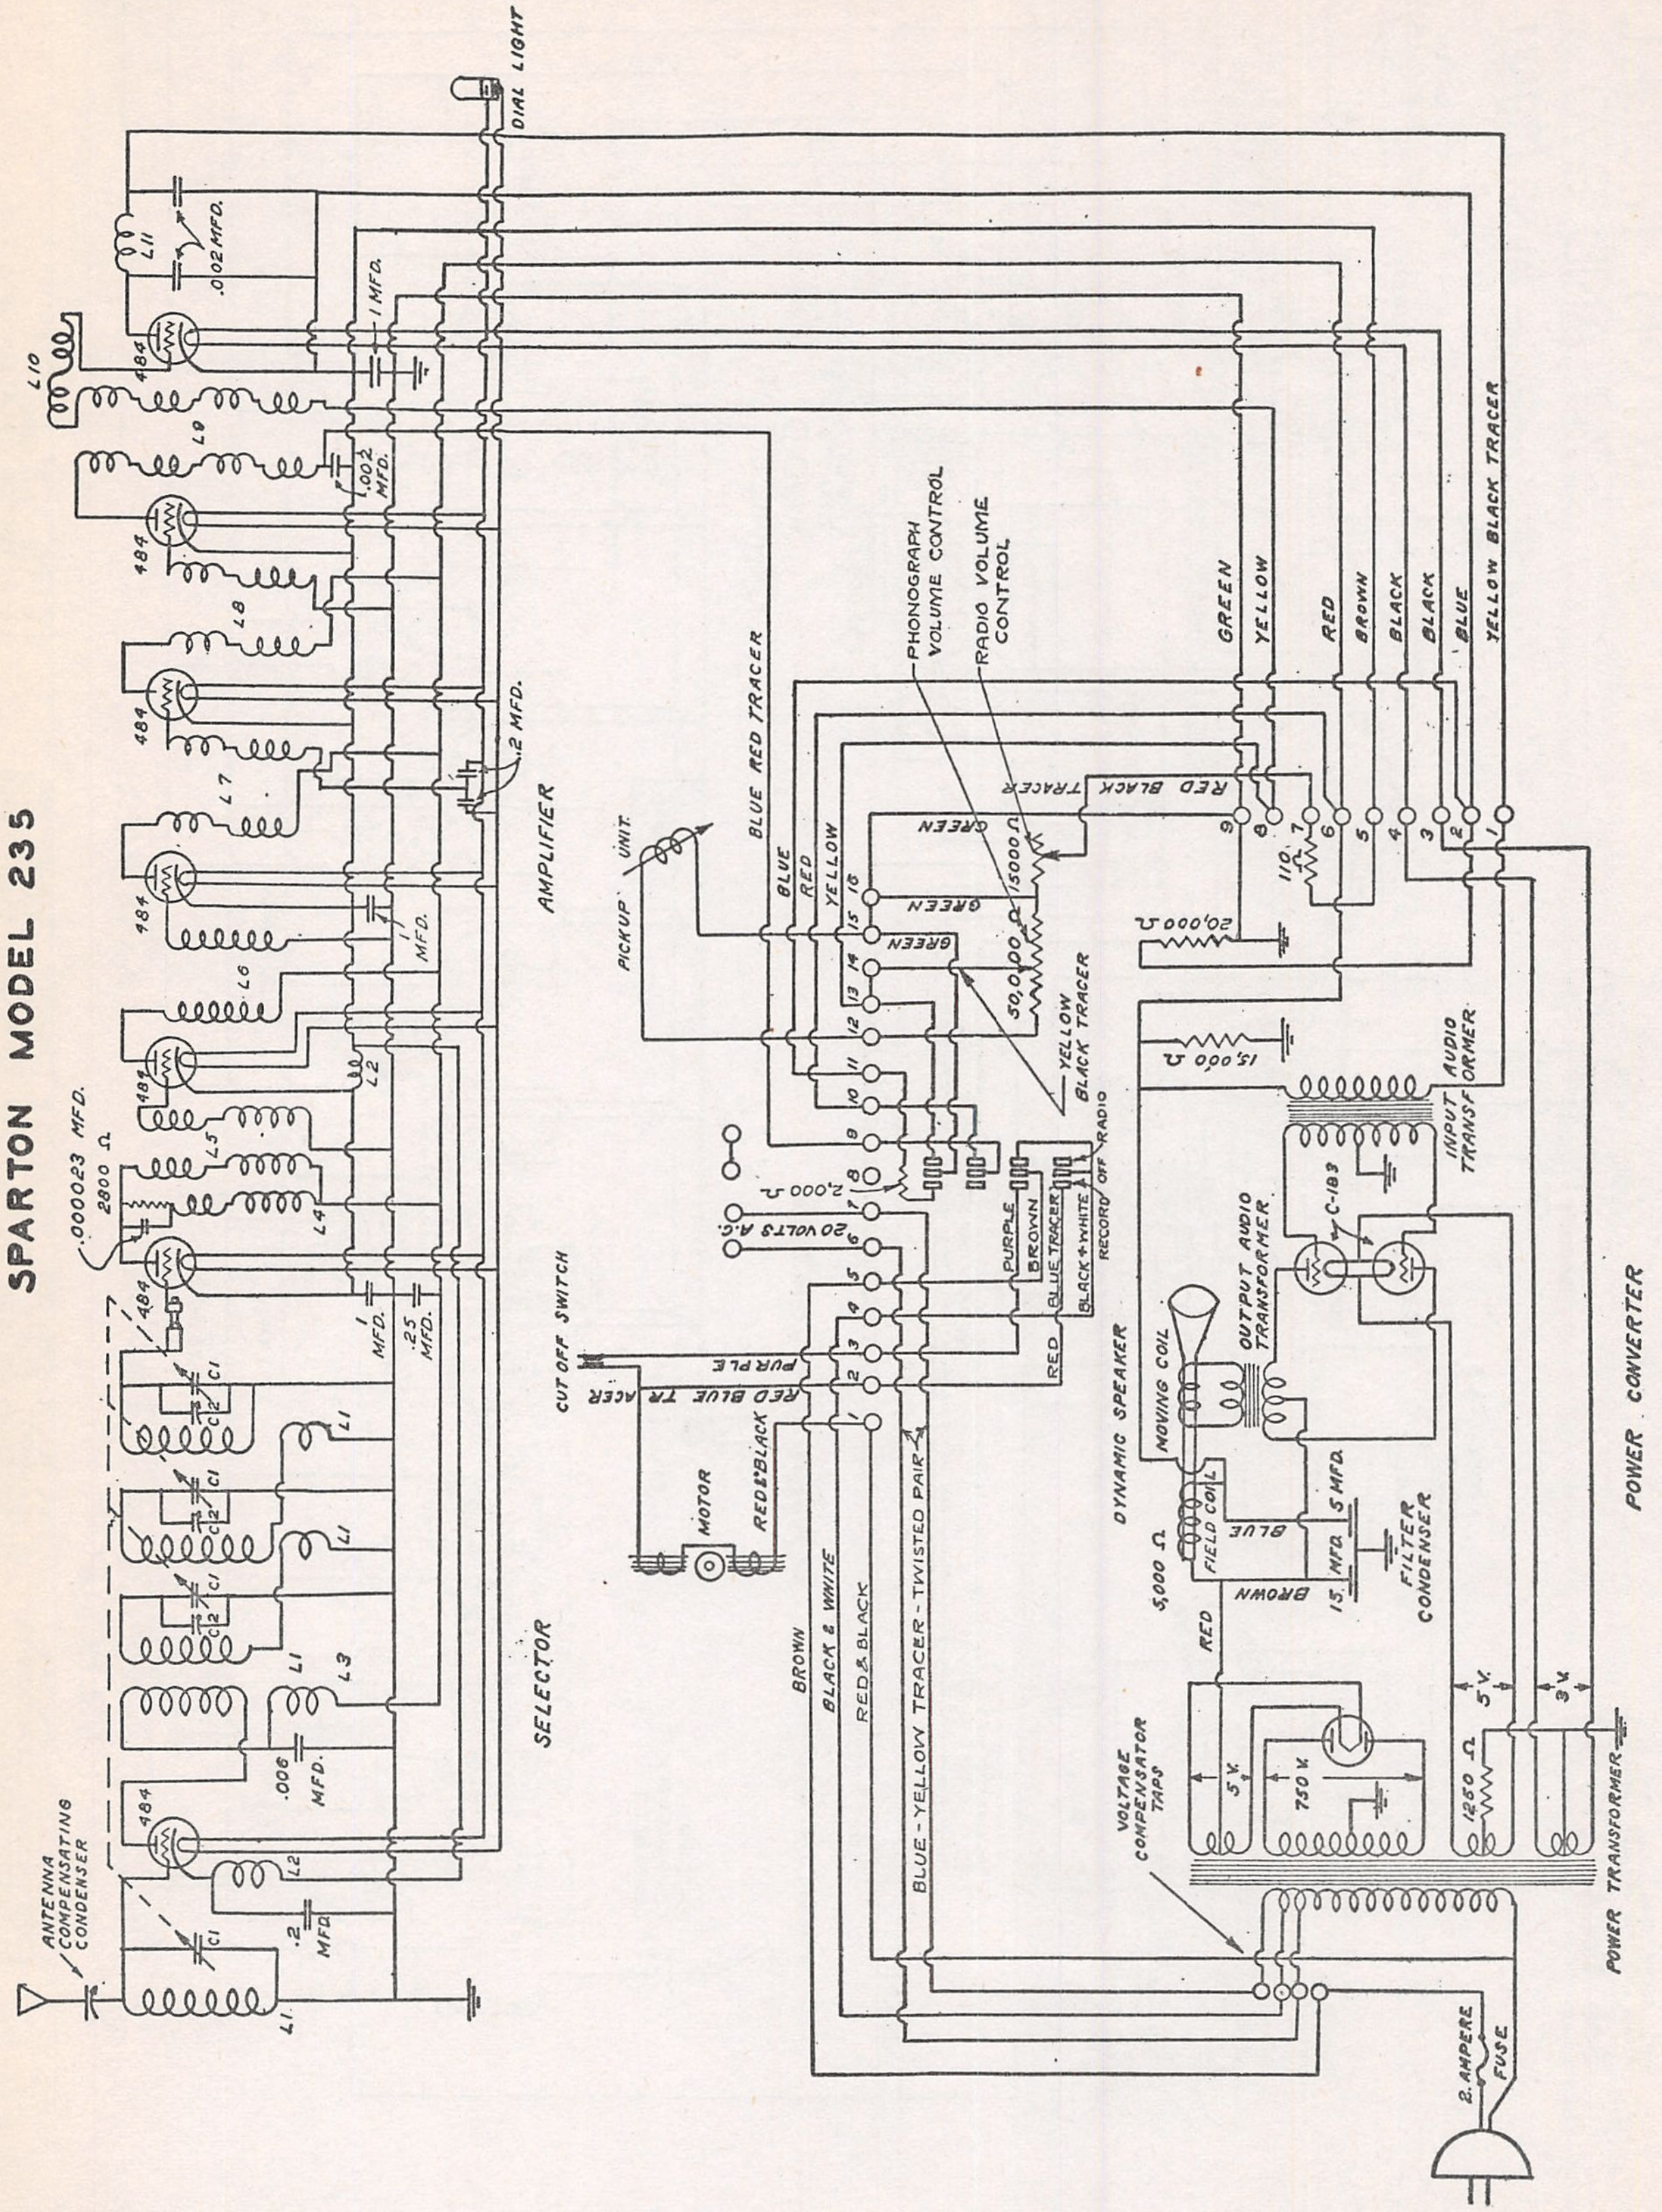
SPARTON MODEL 235
DIAL LIGHT
ANTENNA COMPENSATING CONDENSER
SELECTOR
AMPLIFIER
484
L1
L2
L3
L4
L5
L6
L7
L8
L9
L10
L11
C1
C2
.002 MFD.
1 MFD.
.2 MFD.
.006 MFD.
.25 MFD.
.000023 MFD.
2800 Ω
PICKUP UNIT
BLUE RED TRACER
BLUE
RED
YELLOW
GREEN
RED BLACK TRACER
PHONOGRAPH VOLUME CONTROL
RADIO VOLUME CONTROL
5000 Ω
50,000 Ω
YELLOW BLACK TRACER
20,000 Ω
15,000 Ω
110
2,000 Ω
20 VOLTS A.C.
PURPLE
BROWN
BLUE TRACER
BLACK & WHITE
RECORD
OFF
RADIO
CUT OFF SWITCH
RED BLUE TRACER
MOTOR
RED & BLACK
BLACK & WHITE
BLUE-YELLOW TRACER-TWISTED PAIR
INPUT AUDIO TRANSFORMER
C-183
OUTPUT AUDIO TRANSFORMER
DYNAMIC SPEAKER
MOVING COIL
FIELD COIL
5,000 Ω
5 MFD.
15 MFD.
FILTER CONDENSER
POWER CONVERTER
VOLTAGE COMPENSATOR TAPS
5 V.
750 V.
1250 Ω
3 V.
POWER TRANSFORMER
2 AMPERE FUSE
GREEN
YELLOW
RED
BROWN
BLACK
BLACK
BLUE
YELLOW BLACK TRACER
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

MODEL 301 DC

SPARKS WITHINGTON CO.

Voltage Readings:

	(Across terminals)
115 volt line with switch set at "Lo".	
182 plate volts—115.	
182 "C" voltage 22.5	
182 filament volts 4 to 4.5.	
484 volts—18 volts (voltage across 6 tubes in series)	3 - 4
Detector plate volts (volume on) 100 to 108 volts	1 - 2
R. F. plate volt (volum on) 105 to 112 volts	5 - 6
Detector "C" volt 8 to 10 volt	2 - 9
R. F. "C" volts (volume on) 2 to 3 v.	5 - 9

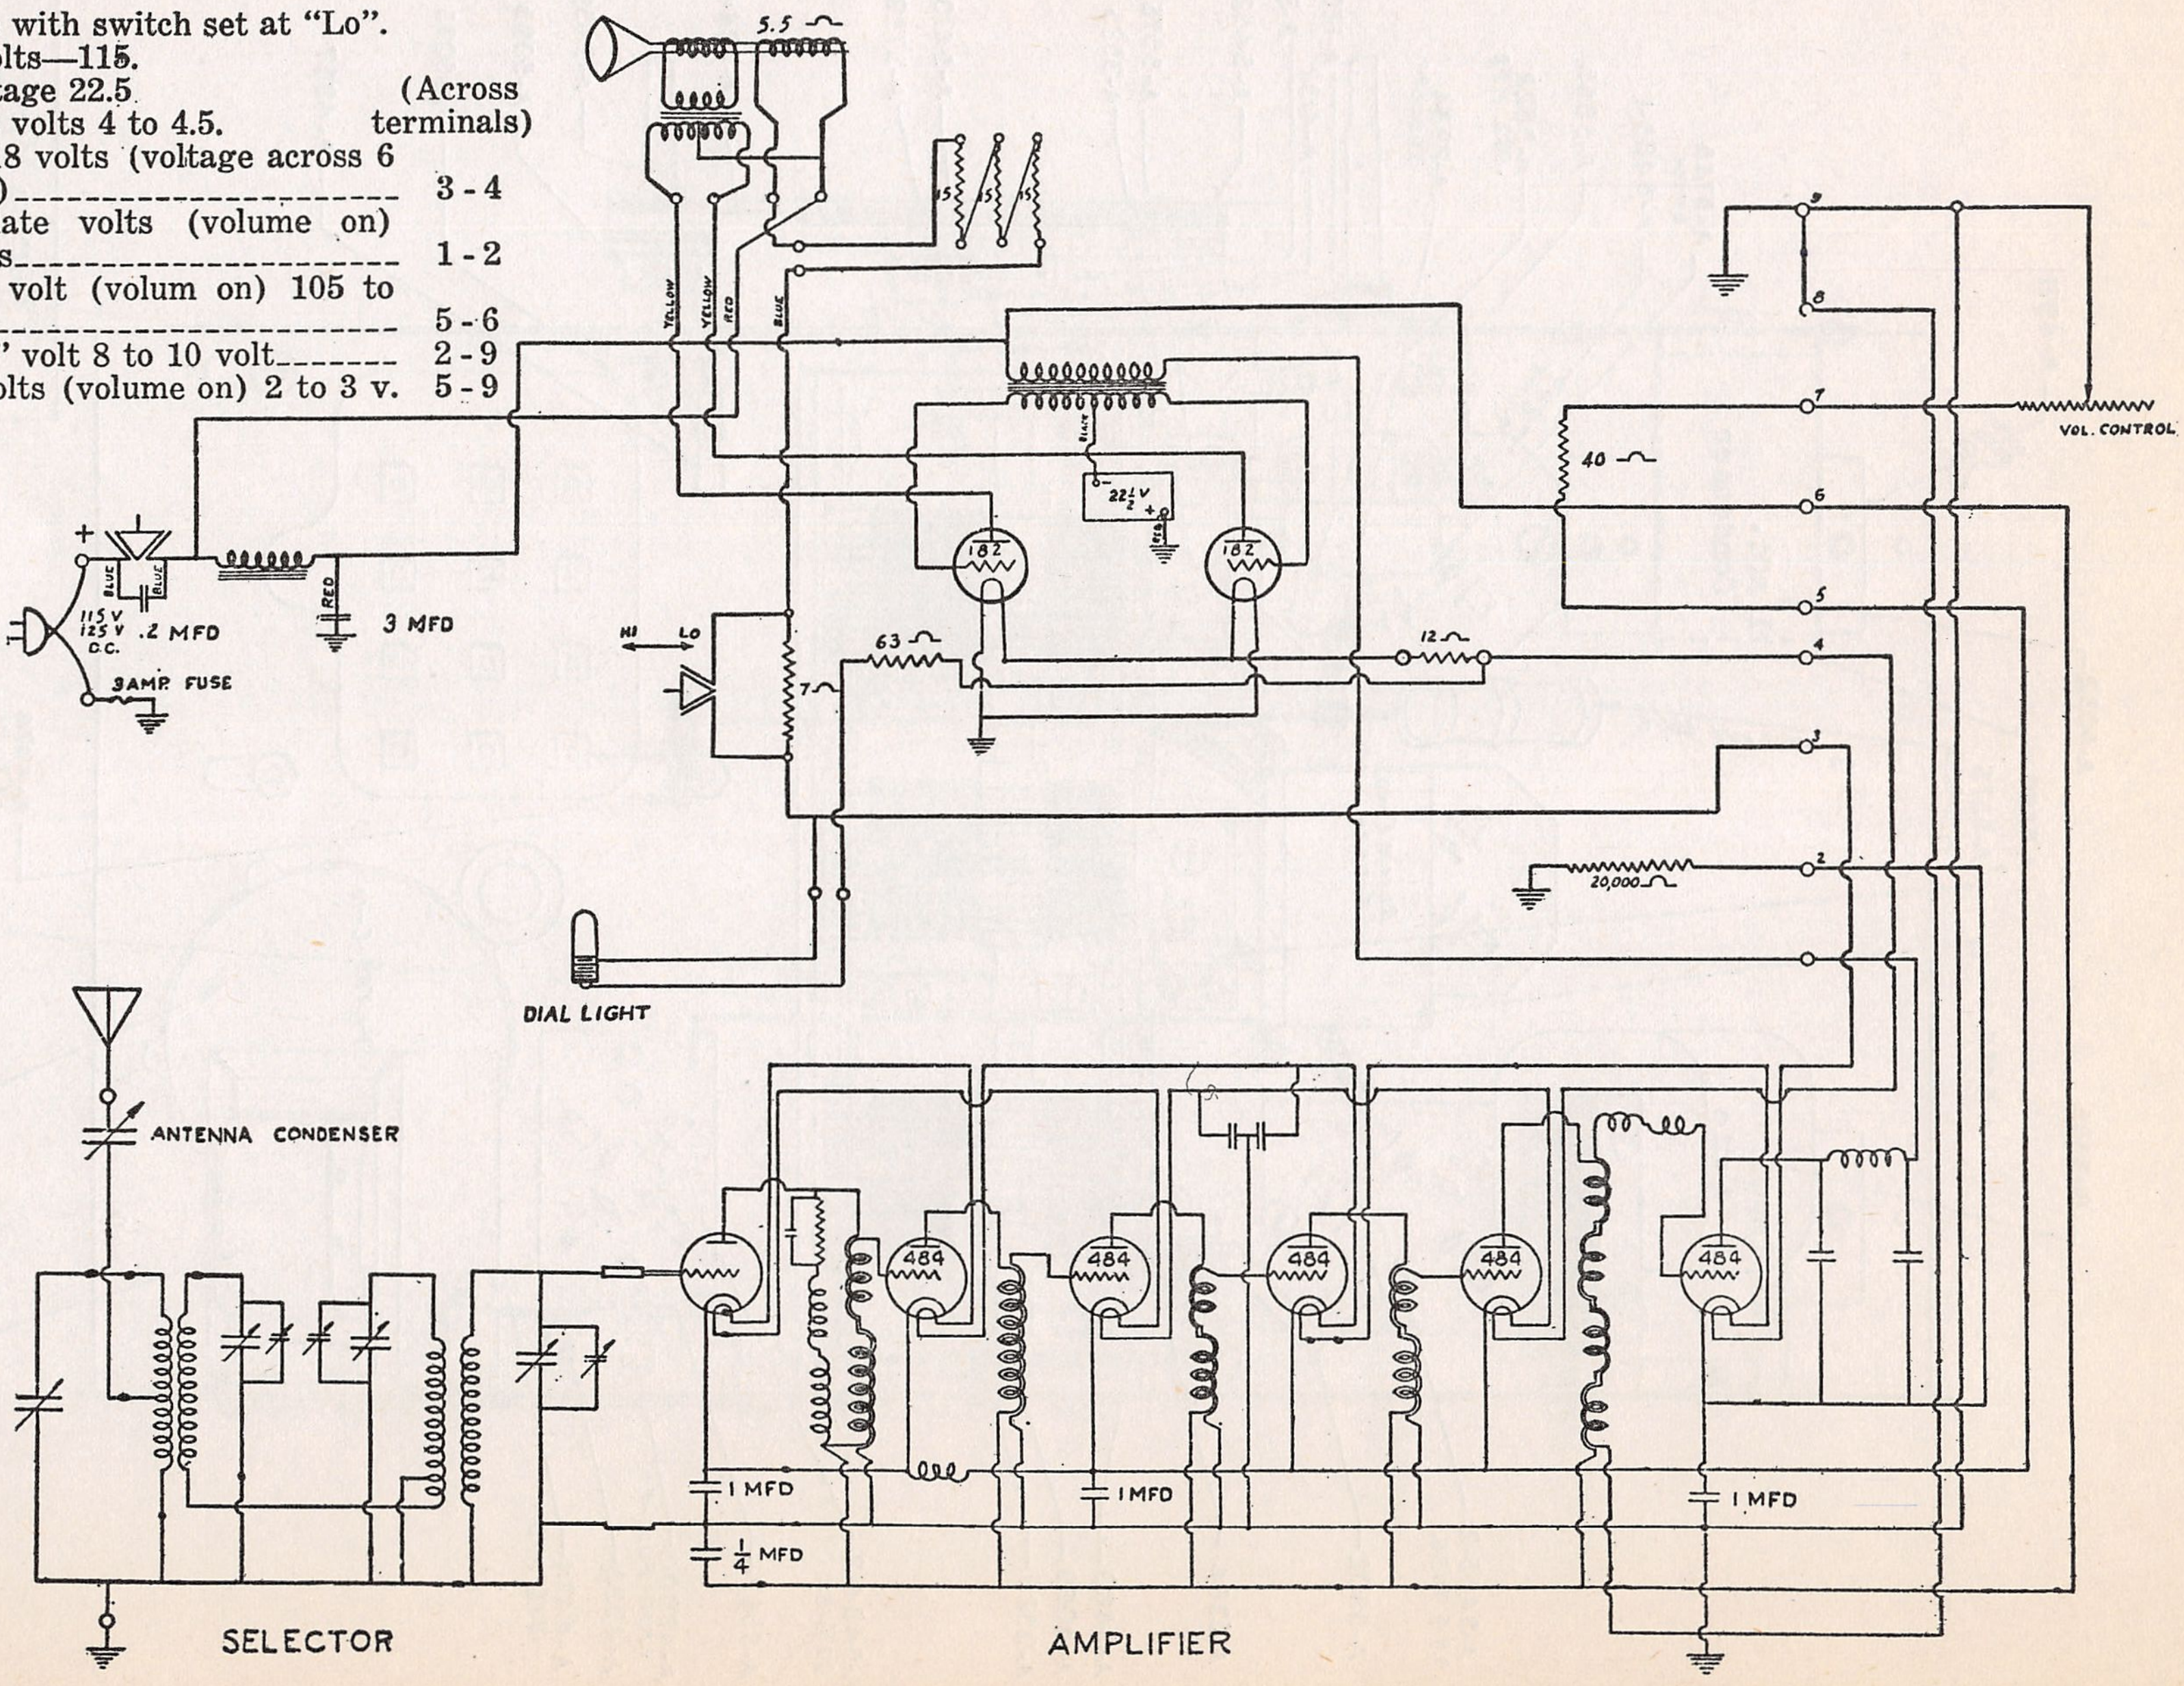
5.5
15
15
15
YELLOW
YELLOW
RED
BLUE
BLACK
22½ V
RED
182
182
9
8
7
6
5
4
3
2
VOL. CONTROL
40
12
63
7
HI
LO
+
BLUE
BLUE
115 V
125 V
D.C.
.2 MFD
3 AMP. FUSE
RED
3 MFD
DIAL LIGHT
20,000
ANTENNA CONDENSER
484
484
484
484
484
1 MFD
1 MFD
1 MFD
¼ MFD
SELECTOR
AMPLIFIER

MODEL 420 AC
Chassis

SPARKS WITHINGTON CO.

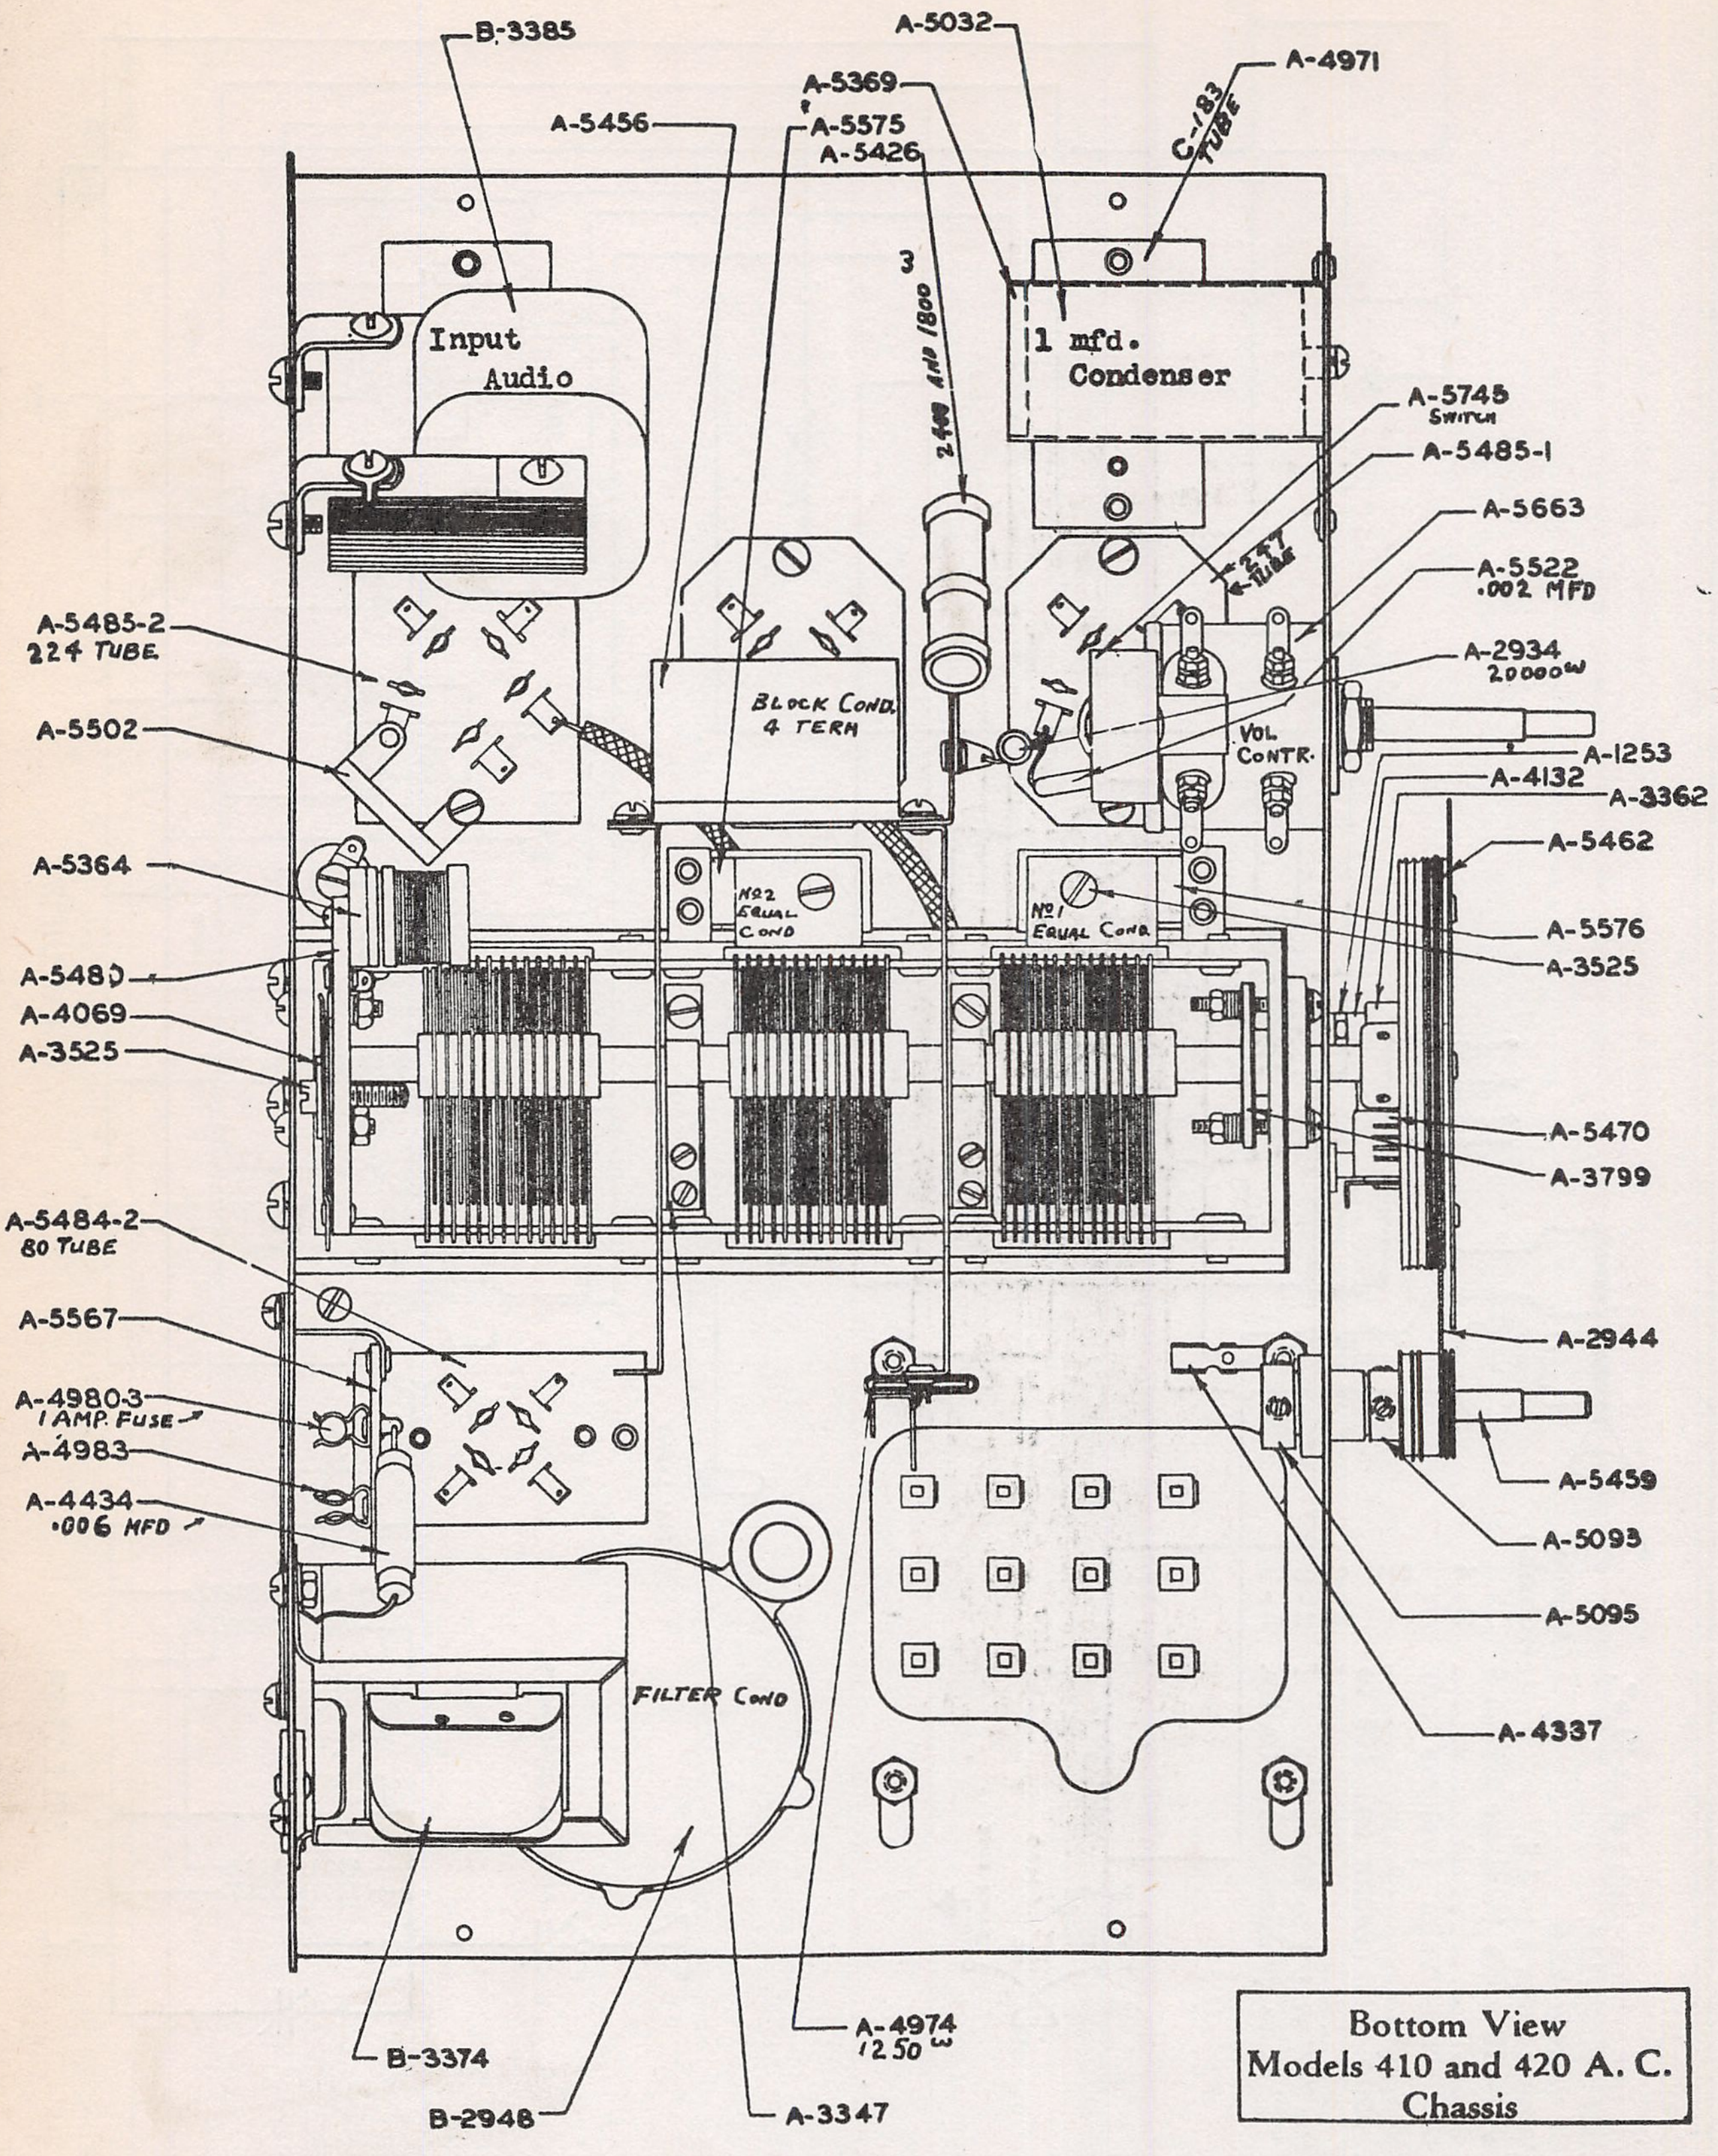
B-3385
A-5032
A-5369
A-4971
C-183 TUBE
A-5456
A-5575
A-5426
3
2400 AND 1800
Input Audio
1 mfd. Condenser
A-5745 SWITCH
A-5485-1
227 TUBE
A-5663
A-5522 .002 MFD
A-5485-2 224 TUBE
A-2934 20000 w
BLOCK COND. 4 TERM
VOL. CONTR.
A-5502
A-1253
A-4132
A-3362
A-5462
A-5364
No2 EQUAL COND
No1 EQUAL COND
A-5576
A-3525
A-5480
A-4069
A-3525
A-5470
A-3799
A-5484-2 80 TUBE
A-2944
A-5567
A-4980-3 1 AMP. FUSE
A-4983
A-5459
A-4434 .006 MFD
A-5093
A-5095
FILTER COND
A-4337
A-4974 1250 w
B-3374
B-2948
A-3347

Bottom View
Models 410 and 420 A. C.
Chassis

SPARKS WITHINGTON CO.

MODEL 420 AC
Schematic

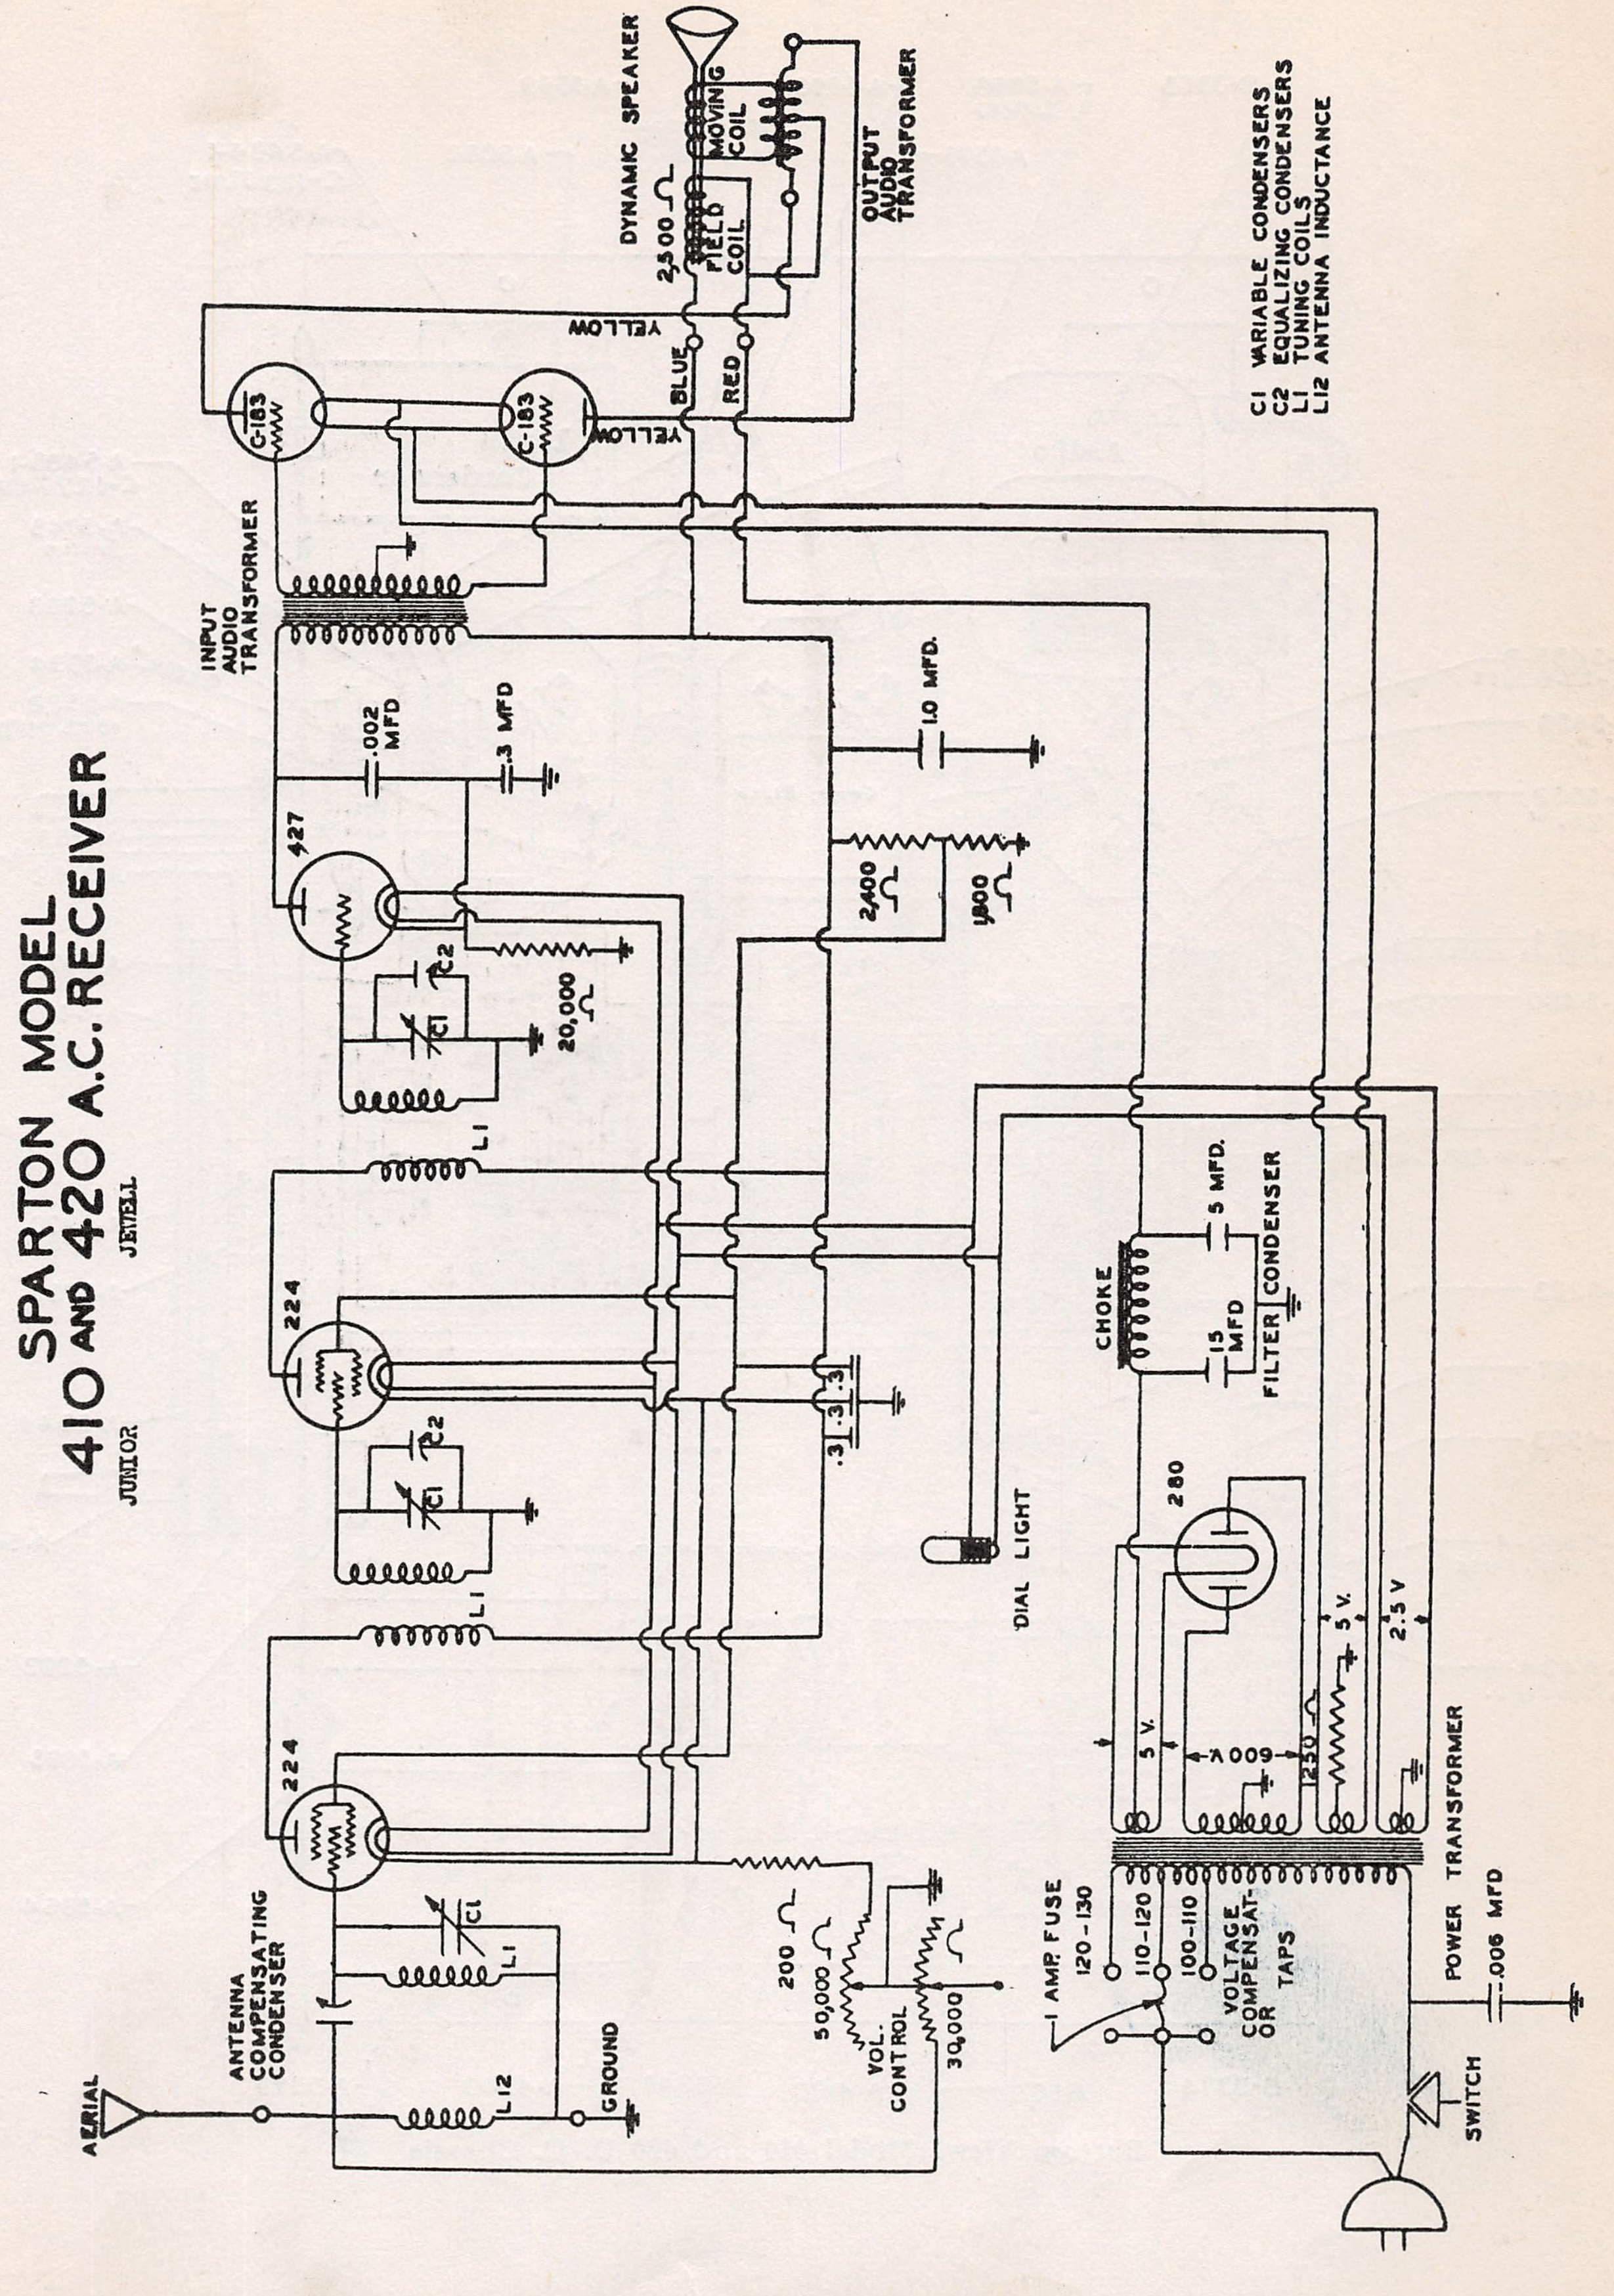

SPARTON MODEL 410 AND 420 A.C. RECEIVER

JUNIOR JEWELL

DYNAMIC SPEAKER
2,500 Ω
FIELD COIL
MOVING COIL
OUTPUT AUDIO TRANSFORMER
YELLOW
BLUE
RED
YELLOW
C-183
C-183
INPUT AUDIO TRANSFORMER
.002 MFD
.3 MFD
1.0 MFD.
427
C2
C1
20,000 Ω
2,400 Ω
1800 Ω
L1
224
C2
C1
.3
.3
.3
L1
224
ANTENNA COMPENSATING CONDENSER
C1
L1
L12
AERIAL
GROUND
200 Ω
50,000 Ω
VOL. CONTROL
30,000 Ω
CHOKE
5 MFD.
15 MFD
FILTER CONDENSER
DIAL LIGHT
280
5 V.
600 V.
250 Ω
5 V.
2.5 V
1 AMP. FUSE
120-130
110-120
100-110
VOLTAGE COMPENSATOR TAPS
POWER TRANSFORMER
.006 MFD
SWITCH
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L12 ANTENNA INDUCTANCE

SPARKS WITHINGTON CO.

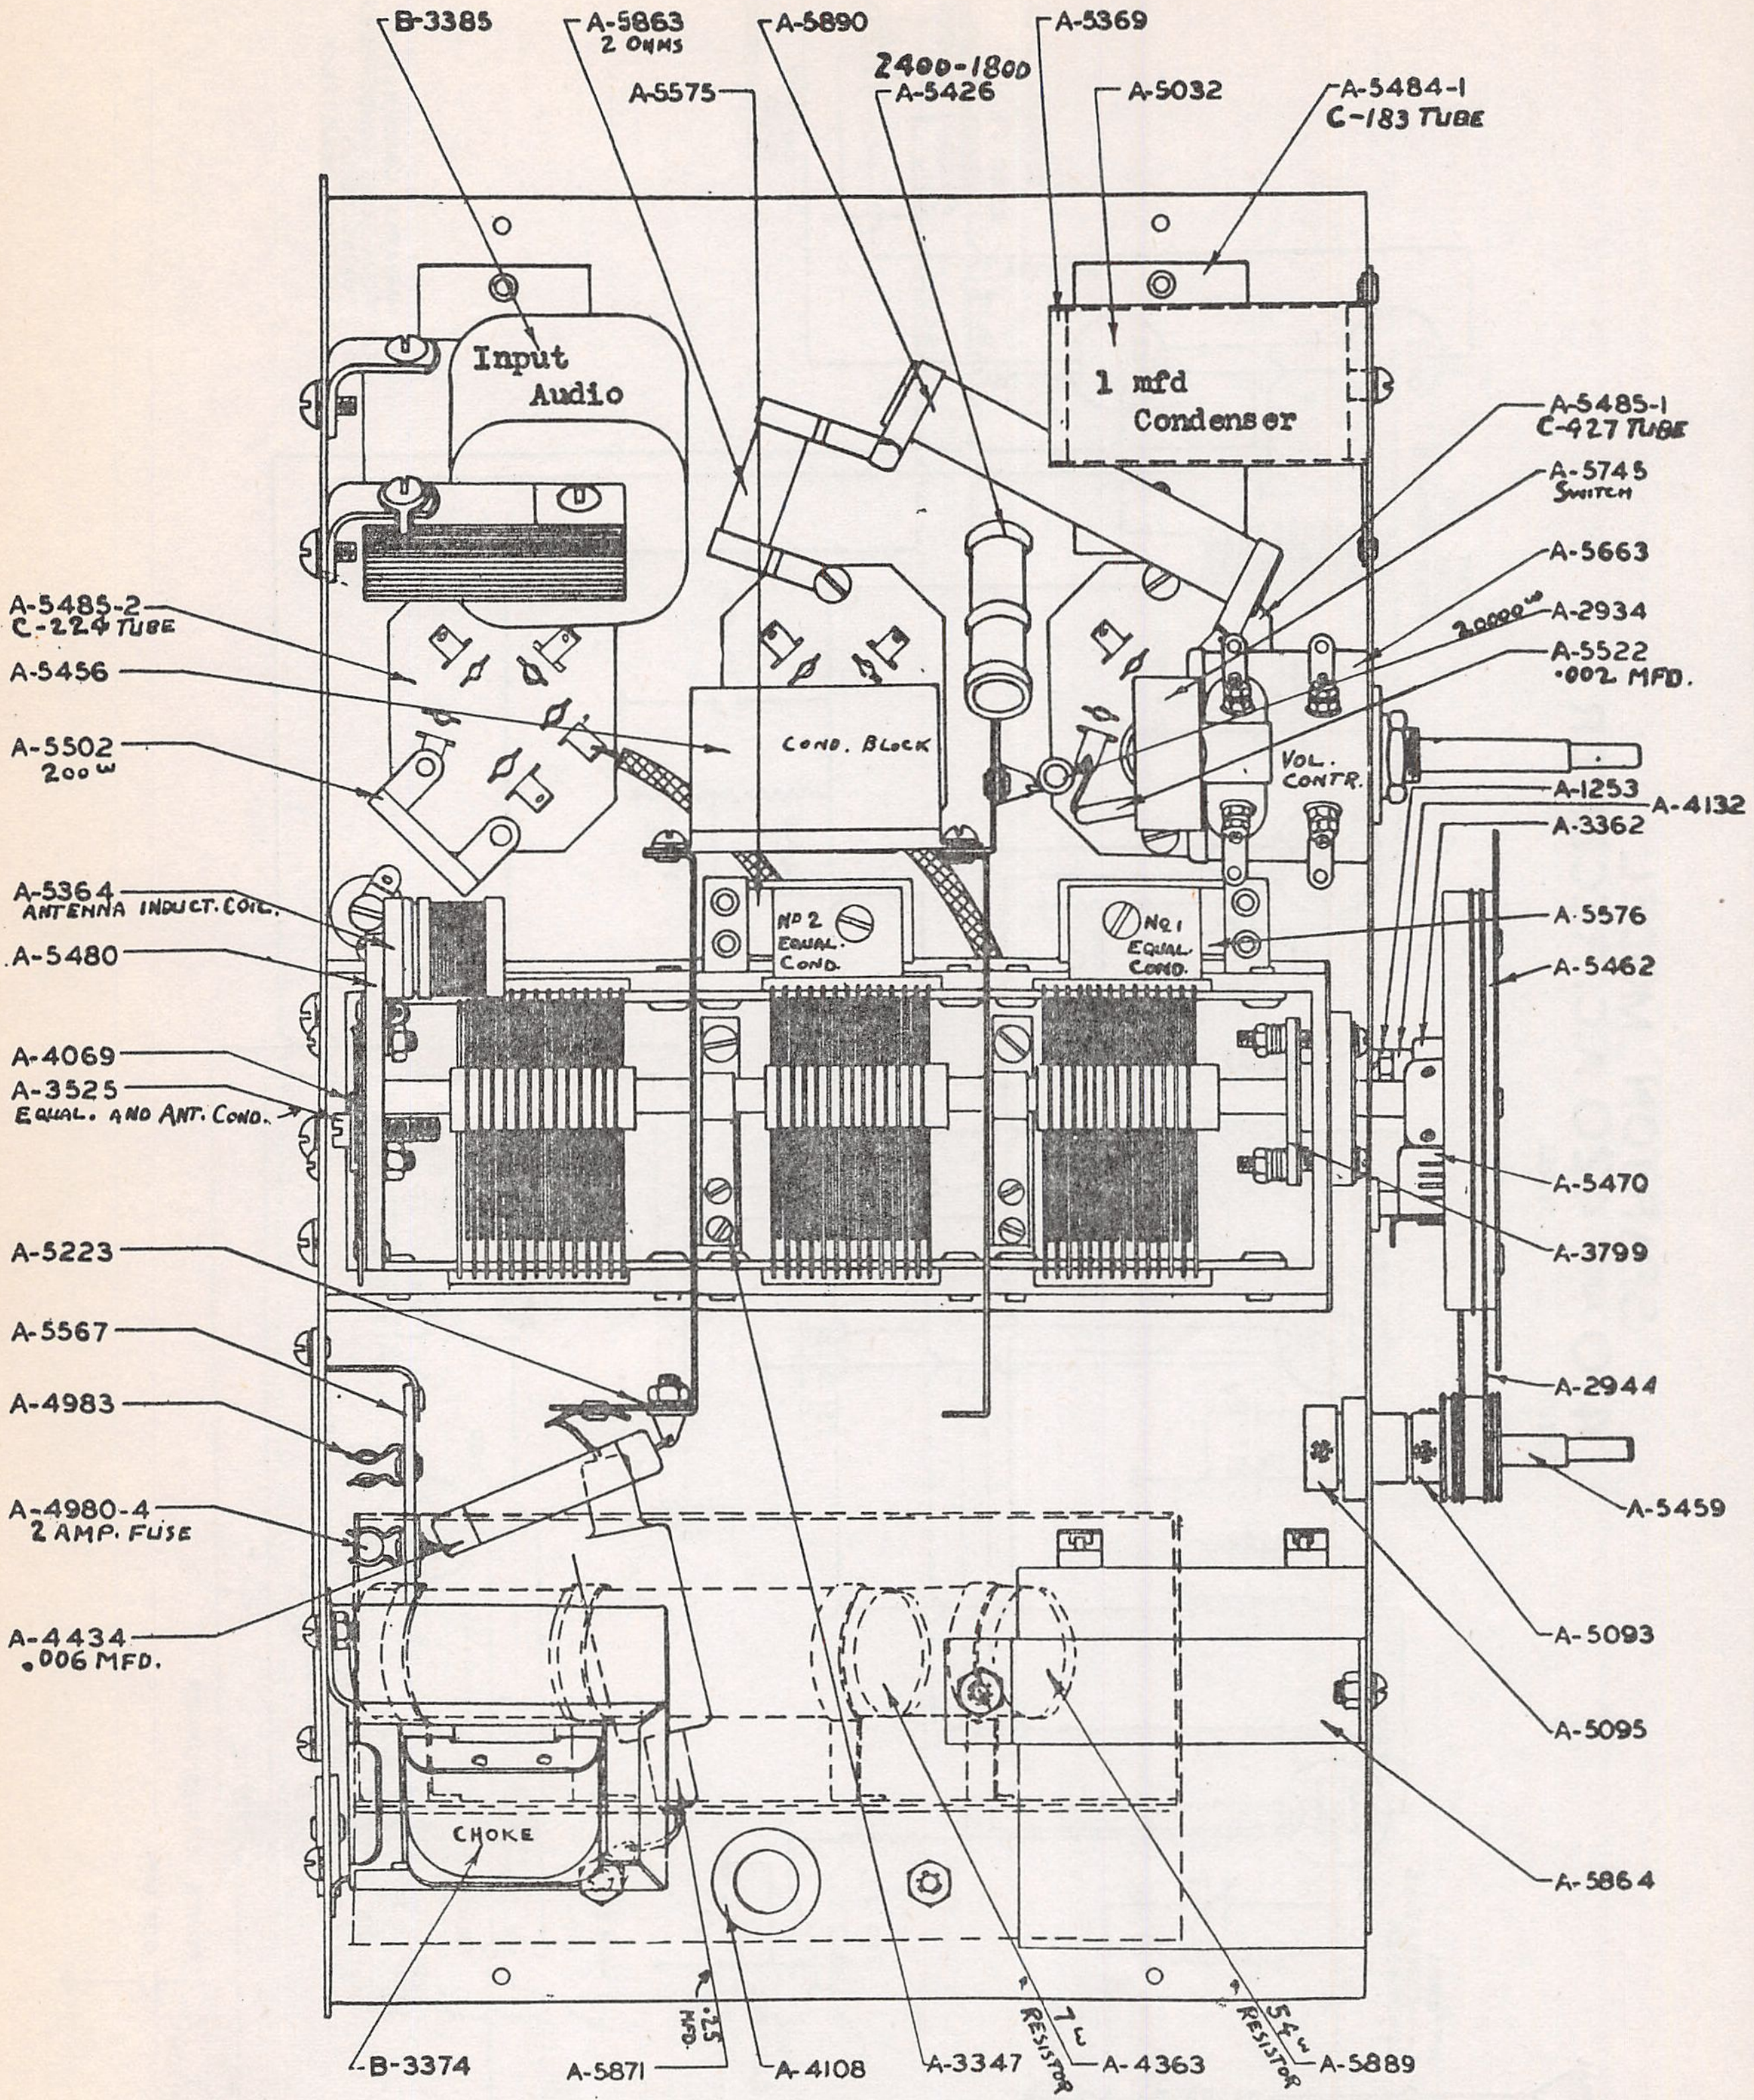
B-3385
A-5863
2 OHMS
A-5890
A-5369
A-5575
2400-1800
A-5426
A-5032
A-5484-1
C-183 TUBE
Input
Audio
1 mfd
Condenser
A-5485-1
C-427 TUBE
A-5745
SWITCH
A-5663
20000 w
A-2934
A-5522
.002 MFD.
A-5485-2
C-224 TUBE
A-5456
COND. BLOCK
A-5502
200 w
VOL. CONTR.
A-1253
A-4132
A-3362
A-5364
ANTENNA INDUCT. COIL.
No 2
EQUAL. COND.
No 1
EQUAL. COND.
A-5576
A-5480
A-5462
A-4069
A-3525
EQUAL. AND ANT. COND.
A-5470
A-3799
A-5223
A-5567
A-2944
A-4983
A-5459
A-4980-4
2 AMP. FUSE
A-5093
A-4434
.006 MFD.
A-5095
A-5864
CHOKE
B-3374
.25 MFD.
A-5871
A-4108
A-3347
7 w
RESISTOR
A-4363
54 w
RESISTOR
A-5889

Bottom View—Model 410 and 420 D. C. Chassis

SPARKS WITHINGTON CO.

MODEL 420 DC
Schematic

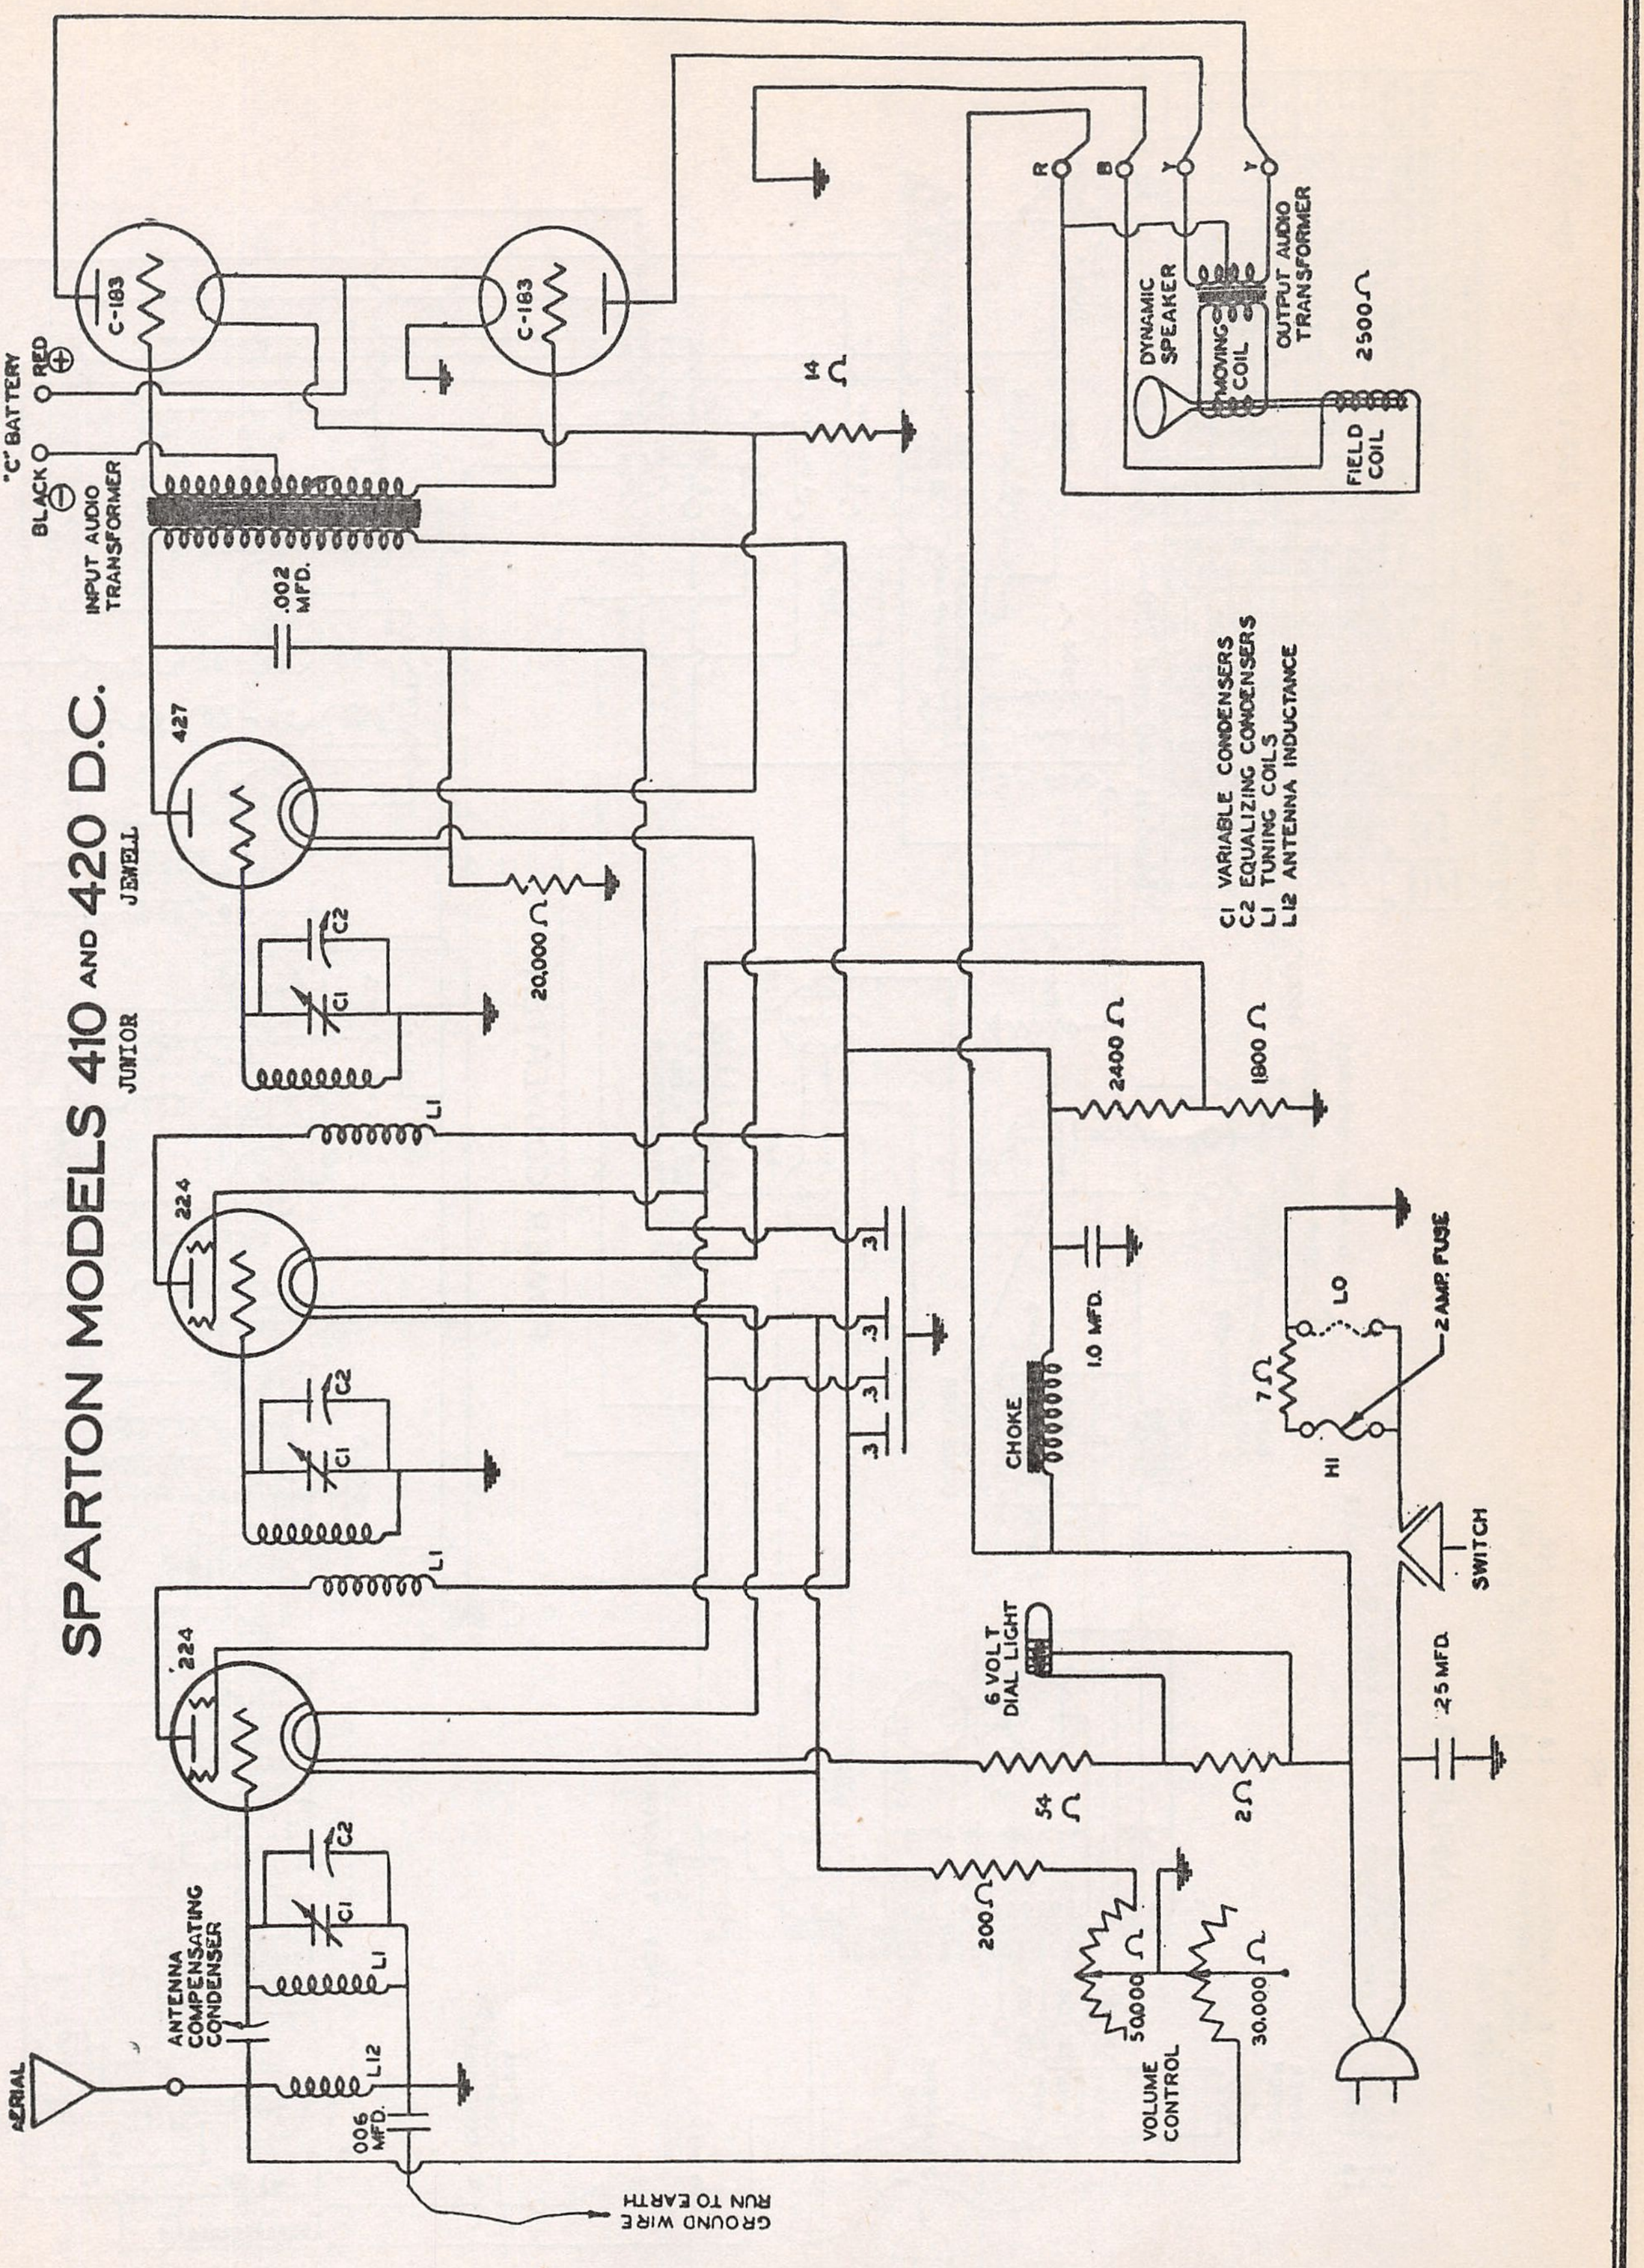
SPARTON MODELS 410 AND 420 D.C.
JUNIOR
JEWELL
C-183
C-183
18 V. "C" BATTERY
RED
BLACK
INPUT AUDIO TRANSFORMER
.002 MFD.
427
20,000 Ω
C1
C2
L1
224
224
.3
.3
.3
.3
CHOKE
1.0 MFD.
2400 Ω
1800 Ω
14 Ω
R
B
Y
Y
DYNAMIC SPEAKER
MOVING COIL
OUTPUT AUDIO TRANSFORMER
2500 Ω
FIELD COIL
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L12 ANTENNA INDUCTANCE
2 AMP. FUSE
LO
HI
7 Ω
SWITCH
.25 MFD.
6 VOLT DIAL LIGHT
54 Ω
2 Ω
200 Ω
50,000 Ω
30,000 Ω
VOLUME CONTROL
AERIAL
ANTENNA COMPENSATING CONDENSER
L12
.006 MFD.
GROUND WIRE RUN TO EARTH

MODEL 564, 570,
740, 750 AC

SPARKS WITHINGTON CO.

SPARTON—Model
Line Voltage 120—Set on 120-130 Volt Tap—Volume Control Position Max
*250 or 585 types tubes.

Tube No. in Order ①	Type of Tube ②	Position of Tube 1st. R.F. Det., Etc. ③	Readings, Plug in Socket of Set: Tube Out: A Volts ④	B Volts ⑤	Tube in Tester: A Volts ⑥	B Volts ⑦	C Volts (Control Grid) ⑧	Cathode-Heater Volts ⑨	Normal Plate M.A ⑩	Plate M.A. Grid Test ⑪	Plate Change M.A. ⑫	Screen Grid Volts ⑬
1	484	1st RF	3	130	2.9	-120	4.5	-	7.5	13	5.5	-
2	484	2nd RF	3	130	2.9	120	4.5	-	7.5	13	5.5	-
3	484	3rd RF	3	130	2.9	120	4.5	-	7.5	13	5.5	-
4	484	4th RF	3	130	2.9	120	4.5	-	7.5	13	5.5	-
5	484	5th RF	3	130	2.9	120	4.5	-	7.5	13	5.5	-
6	484	Det.	3	120	2.9	110	10	-	1	3.5	2.5	-
7	*250	1st A	7.5	360	7.25	350	70	-	40	45	5	-
8	*250	2nd A	7.5	360	7.25	350	70	-	40	45	5	-
9	281	Rect.	7.5	-	7.25	-	-	-	65	-	-	-
10	281	Rect.	7.5	-	7.25	-	-	-	65	-	-	-

*Models 740 and 750—1 Additional 484 Tube in Selector

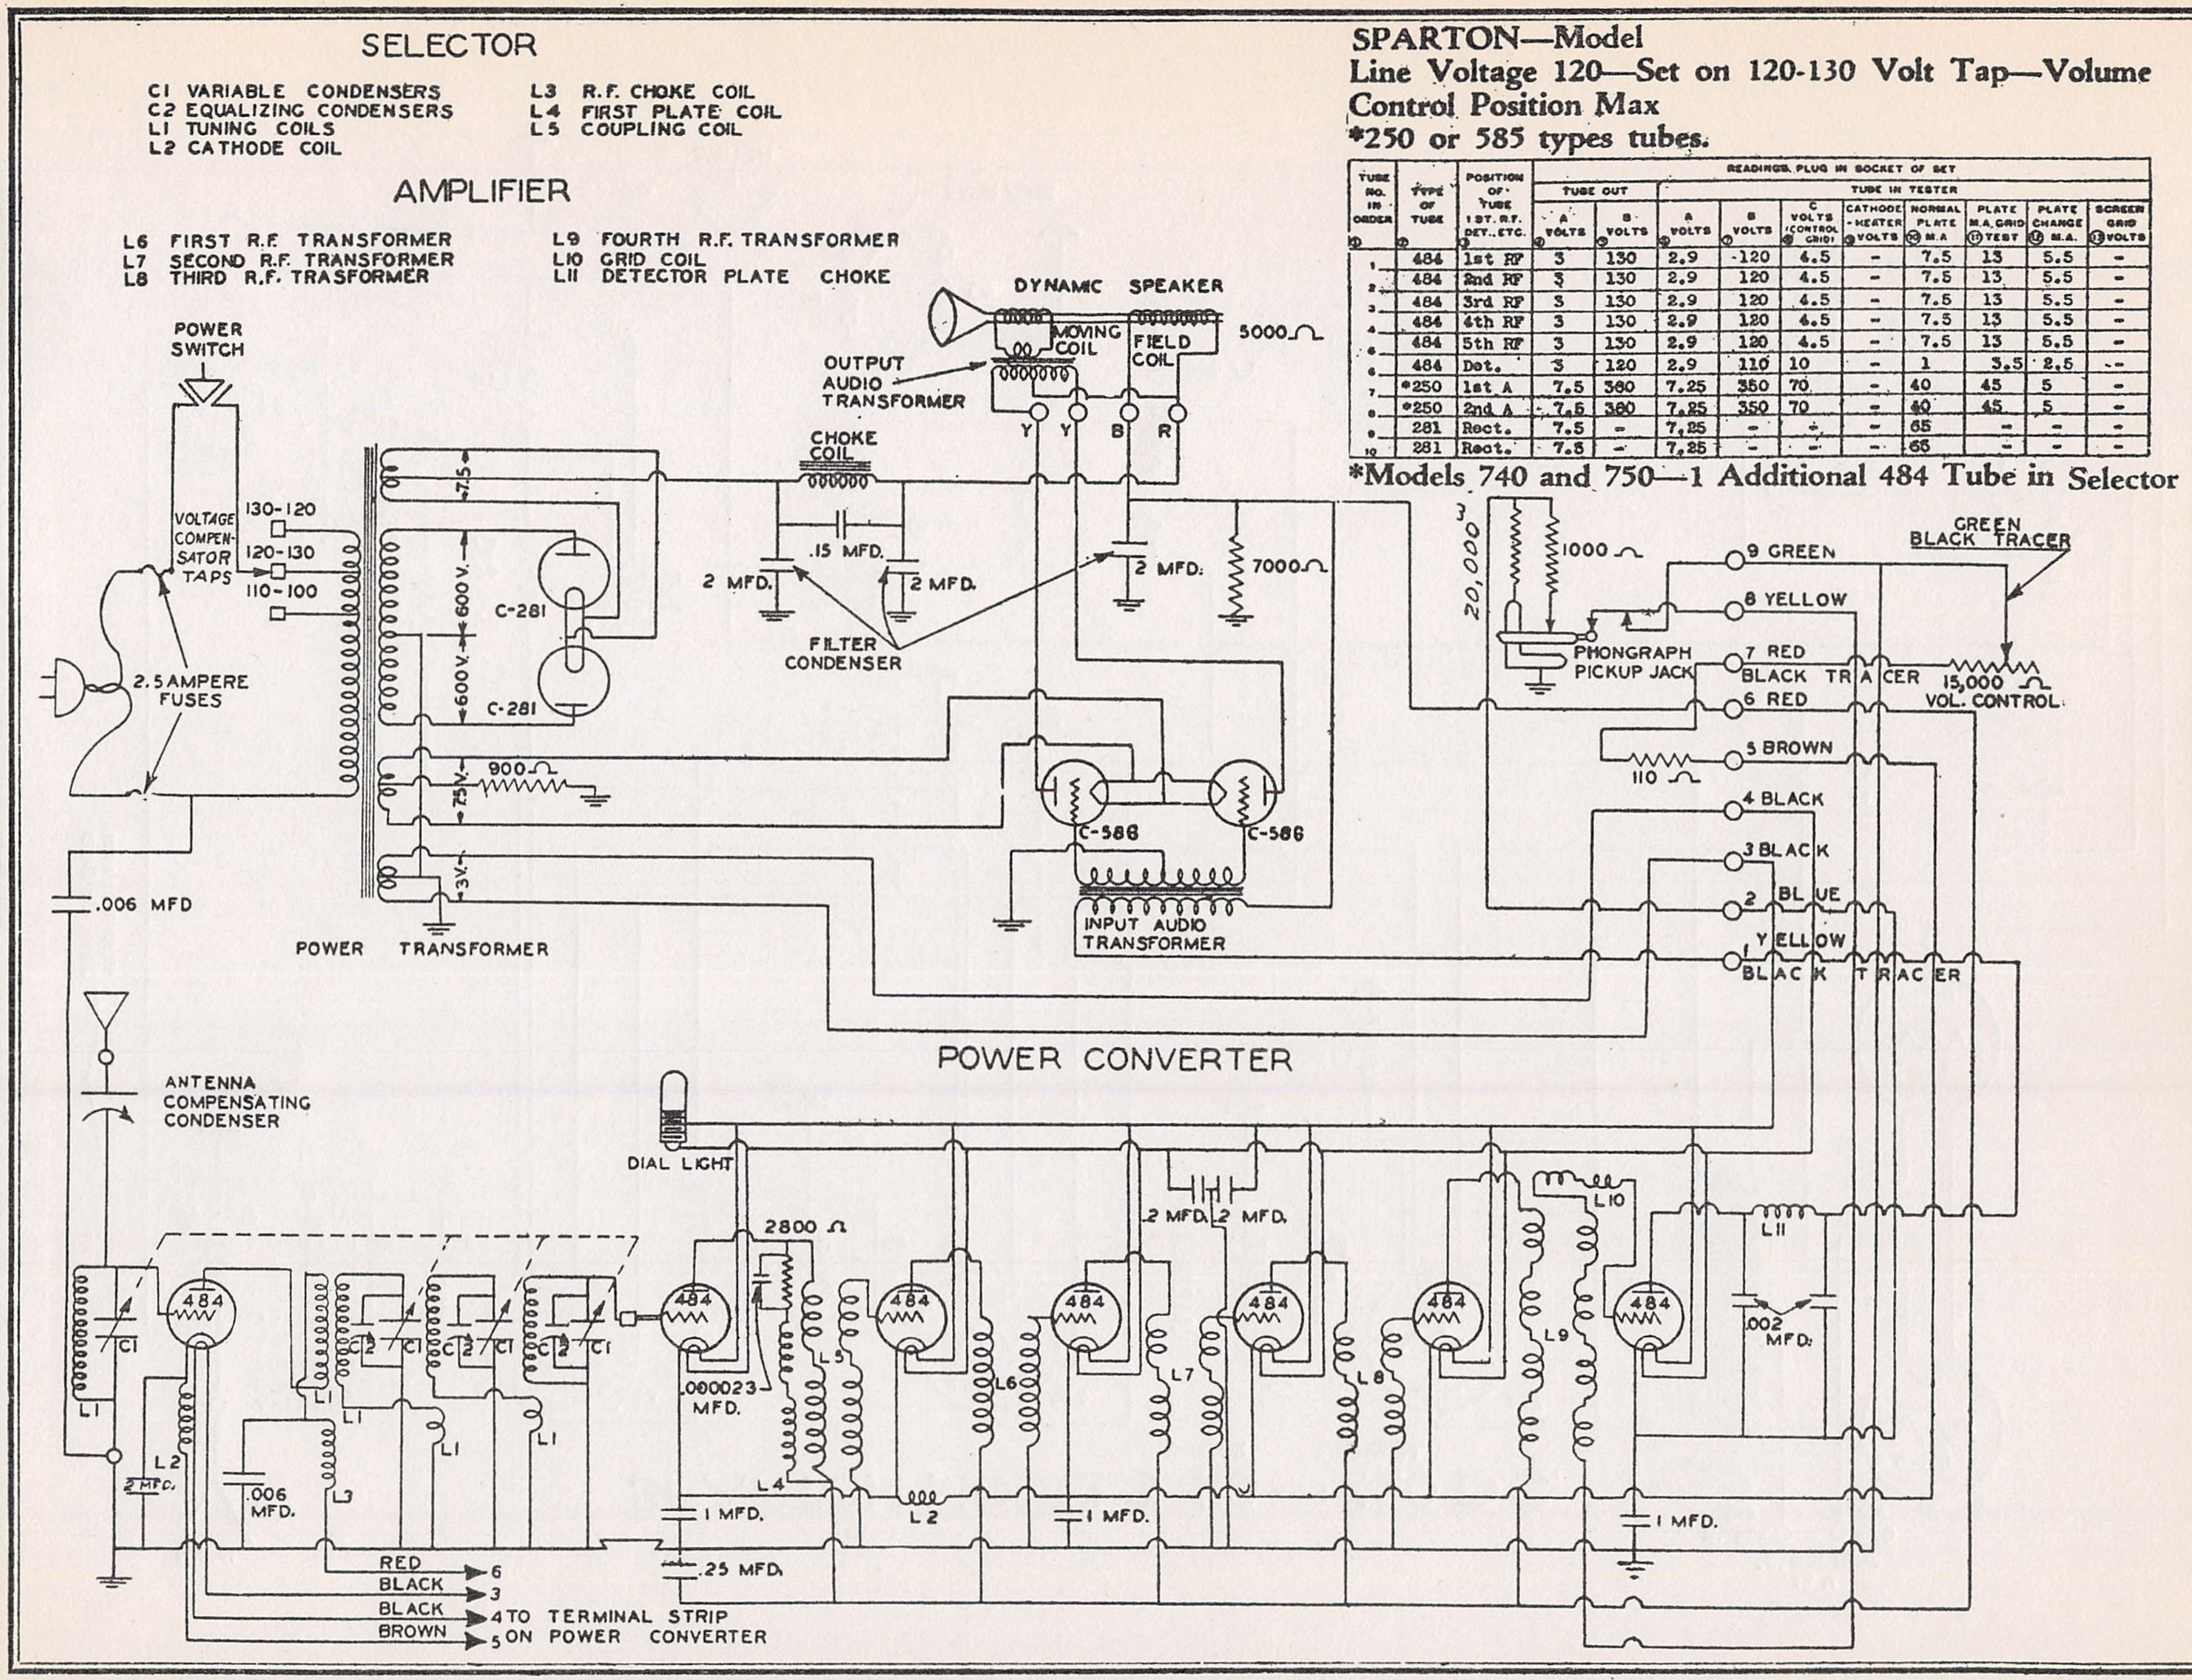
SELECTOR
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COIL
L3 R.F. CHOKE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
AMPLIFIER
L6 FIRST R.F. TRANSFORMER
L7 SECOND R.F. TRANSFORMER
L8 THIRD R.F. TRASFORMER
L9 FOURTH R.F. TRANSFORMER
L10 GRID COIL
L11 DETECTOR PLATE CHOKE
POWER SWITCH
VOLTAGE COMPENSATOR TAPS
130-120
120-130
110-100
2.5 AMPERE FUSES
7.5
600 V.
600 V.
7.5V
3V
C-281
C-281
900 Ω
POWER TRANSFORMER
.006 MFD
CHOKE COIL
.15 MFD.
2 MFD.
2 MFD.
FILTER CONDENSER
2 MFD.
7000 Ω
OUTPUT AUDIO TRANSFORMER
DYNAMIC SPEAKER
MOVING COIL
FIELD COIL
5000 Ω
Y
Y
B
R
C-586
C-586
INPUT AUDIO TRANSFORMER
20,000 Ω
1000 Ω
PHONGRAPH PICKUP JACK
9 GREEN
8 YELLOW
7 RED
BLACK TRACER
6 RED
5 BROWN
110 Ω
4 BLACK
3 BLACK
2 BLUE
1 YELLOW
BLACK TRACER
GREEN BLACK TRACER
15,000 Ω
VOL. CONTROL
POWER CONVERTER
ANTENNA COMPENSATING CONDENSER
DIAL LIGHT
2800 Ω
.2 MFD.
.2 MFD.
484
484
484
484
484
484
484
C1
C2
L1
L2
2 MFD.
.006 MFD.
L3
L4
L5
L6
L7
L8
L9
L10
L11
.000023 MFD.
1 MFD.
1 MFD.
1 MFD.
.25 MFD.
.002 MFD.
RED
BLACK
BLACK
BROWN
6
3
4 TO TERMINAL STRIP
5 ON POWER CONVERTER

Standard Resistor Color Code and Resistors Used In Sparton Radio Receiving Sets and Sparton Ensembles

STANDARD RESISTOR COLOR CODE

0—Black
1—Brown
2—Red
3—Orange
4—Yellow
5—Green
6—Blue
7—Violet
8—Gray
9—White

To determine the value of a resistor, the first significant figure of resistance value is represented by the color of the body of the resistor, and the second figure of resistance value by the color of the tip of the resistor. The number of ciphers following the second figure is determined by the color of the dot or stripe in the center of the body of the resistor. For example, a 20,000 ohm resistor has a red body, black tip, with orange dot or orange stripe. A 2,200 ohm resistor would be red body, with red tip and red dot, or red stripe, and as all colors are the same, it would be a single color resistor.

SPARTON PART NO.	RESISTANCE, OHMS	SIZE, WATTS	OLD COLOR	STANDARD RESISTOR COLOR CODE		
				BODY	TIP	DOT OR STRIPE
A-2934	20,000	2	Green	Red	Black	Orange
A-3397	1,000	2	Tan	Brown	Black	Red
A-3397-X	1,000	0.5	Tan	Brown	Black	Red
A-3423	50,000	2	Red	Green	Black	Orange
*A-3750	1,250	3	Black, Silver Ends	Brown	Orange	Red
A-4107	15,000	5	Black, Silver Ends	Brown	Green	Orange
A-4234	250,000	5	Brown, Blue Ends	Red	Green	Yellow
A-4261	20,000	1	Green	Red	Black	Orange
A-4353	2,800	0.5	Gray	Red	Gray	Red
A-4613	1,700	1	Brown	Brown	Violet	Red
A-4614	10,000	1	Blue	Brown	Black	Orange
A-5139	30,000	1	Red	Orange	Black	Orange
A-5180	5,000	15	Green	Green	Black	Red
A-5269	500,000	1	Green	Black	Black	Yellow
A-5270	250,000	1		Red	Green	Yellow
A-5354	100,000	1		Brown	Black	Yellow

*1250 ohm resistors same color scheme as 1300 ohm resistors.

Standard Resistor Color Code Is Not Applied to Vitreous Enamel Resistors

SPARTON PART NO.	RESISTANCE OHMS	SIZE WATTS	COLOR
A-4363	7	20	Blue
A-4364	12	30	Blue
A-4365	63	10	Blue
A-5889	54	175	Blue
A-4365	15	50	Blue
A-5177	160	1	Blue
A-5426	2,400-1,800	8	Blue
A-5990	14	6	Blue

Standard Color Code Is Not Applied to Wire Wound Resistors

SPARTON PART NO.	RESISTANCE OHMS	SIZE, WATTS	COLOR
A-3383	3,000	10	Black
A-3535	7,000	10	Black
A-3536	900	10	Black
A-3811	30,000	0.5	Black
A-4260	7,000-2,000	20	Black
A-4363	7	20	Black
A-4583	7,000	10	Black
A-4670	110	1	Black
A-4915	110	1	Black
A-4974	1,250	5	Gray
A-5137	330	1	Gray
A-5502	200	1	Red
A-5861	57	175	Blue
A-5862	12	10	Blue
A-5863	2	5	Blue

MODEL 591, 593 AC

SPARKS WITHINGTON CO.

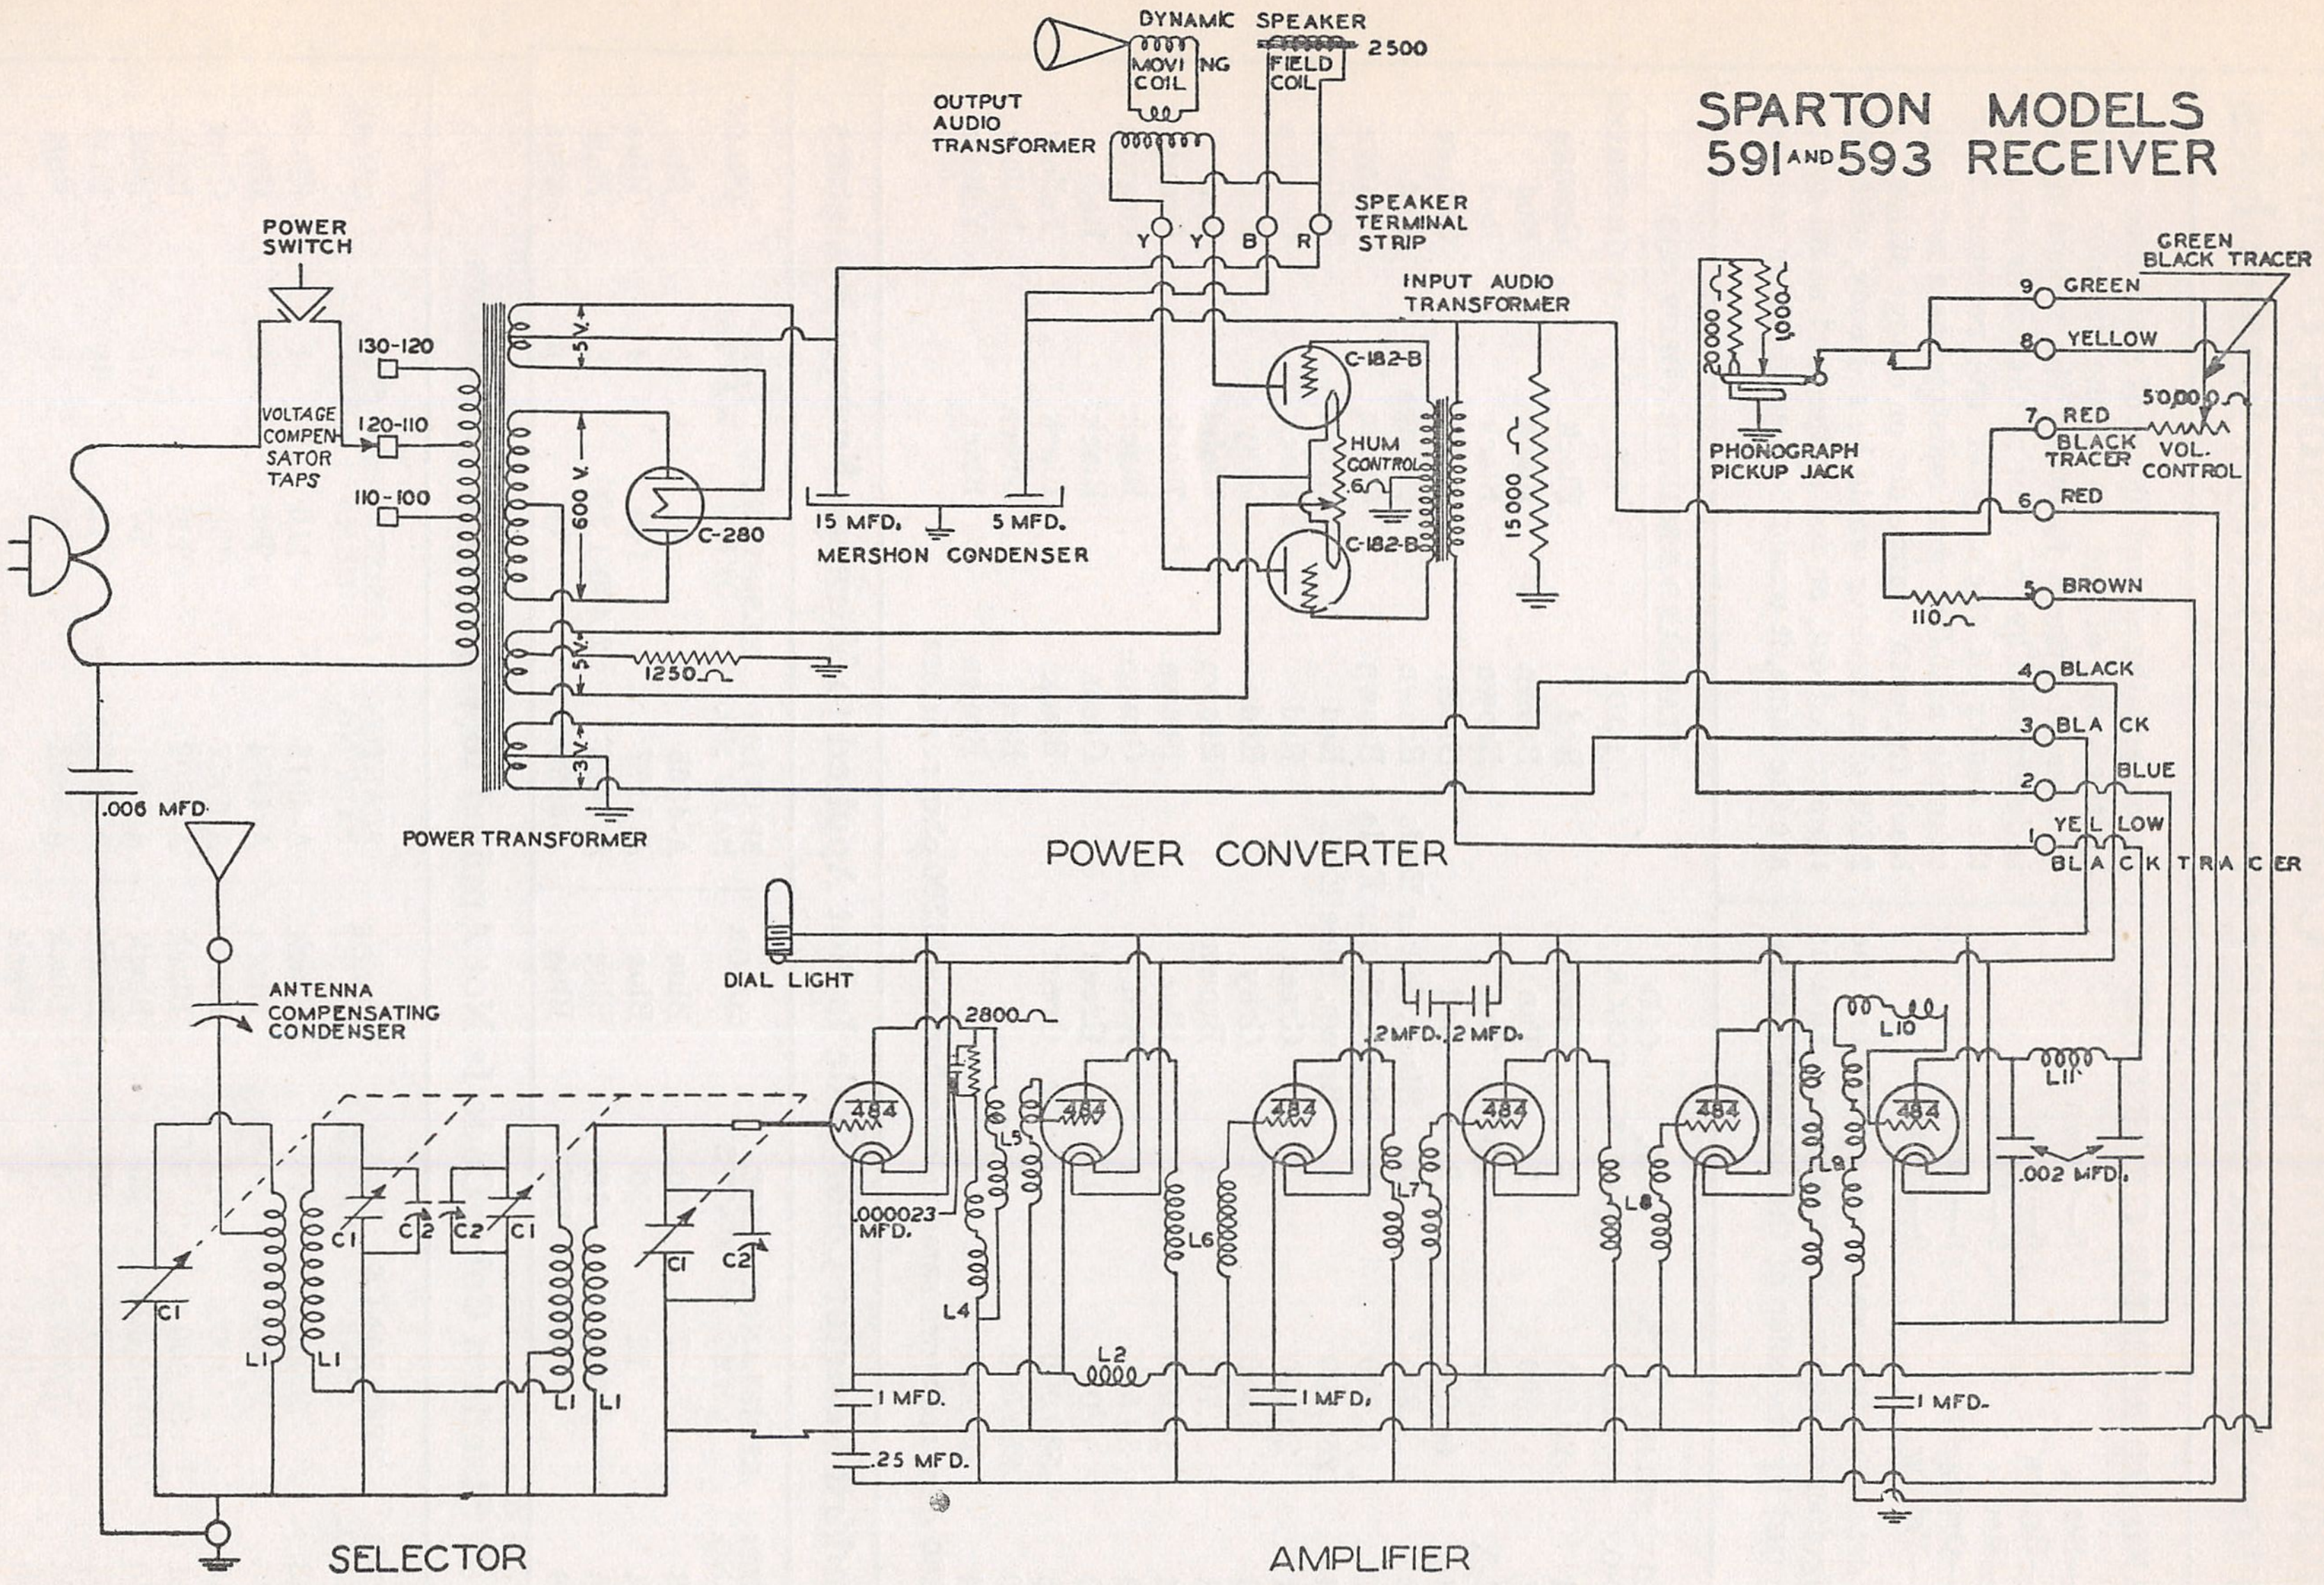
SPARTON MODELS
591 AND 593 RECEIVER
DYNAMIC SPEAKER
MOVING COIL
FIELD COIL
2500
OUTPUT AUDIO TRANSFORMER
SPEAKER TERMINAL STRIP
Y Y B R
POWER SWITCH
130-120
120-110
110-100
VOLTAGE COMPENSATOR TAPS
5 V.
600 V.
3 V.
C-280
1250
15 MFD.
5 MFD.
MERSHON CONDENSER
C-182-B
HUM CONTROL
6
INPUT AUDIO TRANSFORMER
15000
PHONOGRAPH PICKUP JACK
1000
20000
GREEN BLACK TRACER
9 GREEN
8 YELLOW
50,000
7 RED
BLACK TRACER
VOL. CONTROL
6 RED
5 BROWN
110
4 BLACK
3 BLACK
2 BLUE
1 YELLOW
BLACK TRACER
.006 MFD.
POWER TRANSFORMER
POWER CONVERTER
DIAL LIGHT
ANTENNA COMPENSATING CONDENSER
2800
484
.000023 MFD.
C1
C2
L1
L2
L4
L5
L6
L7
L8
L9
L10
L11
.2 MFD.
.2 MFD.
.002 MFD.
1 MFD.
.25 MFD.
SELECTOR
AMPLIFIER

For Voltage Data See Model 589

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
L6 FIRST R.F TRANSFORMER
L7 SECOND R.F. TRANSFORMER
L8 THIRD R.F TRANSFORMER
L9 FOURTH R.F TRANSFORMER
L10 FREE GRID COIL
L11 DETECTOR PLATE CHOKE

SPARKS WITHINGTON CO.

MODEL DC 564,570
600,610,620,
740,750

SPARTON MODELS
600, 610, 620, 740 and 750 D. C.
Also 564-570

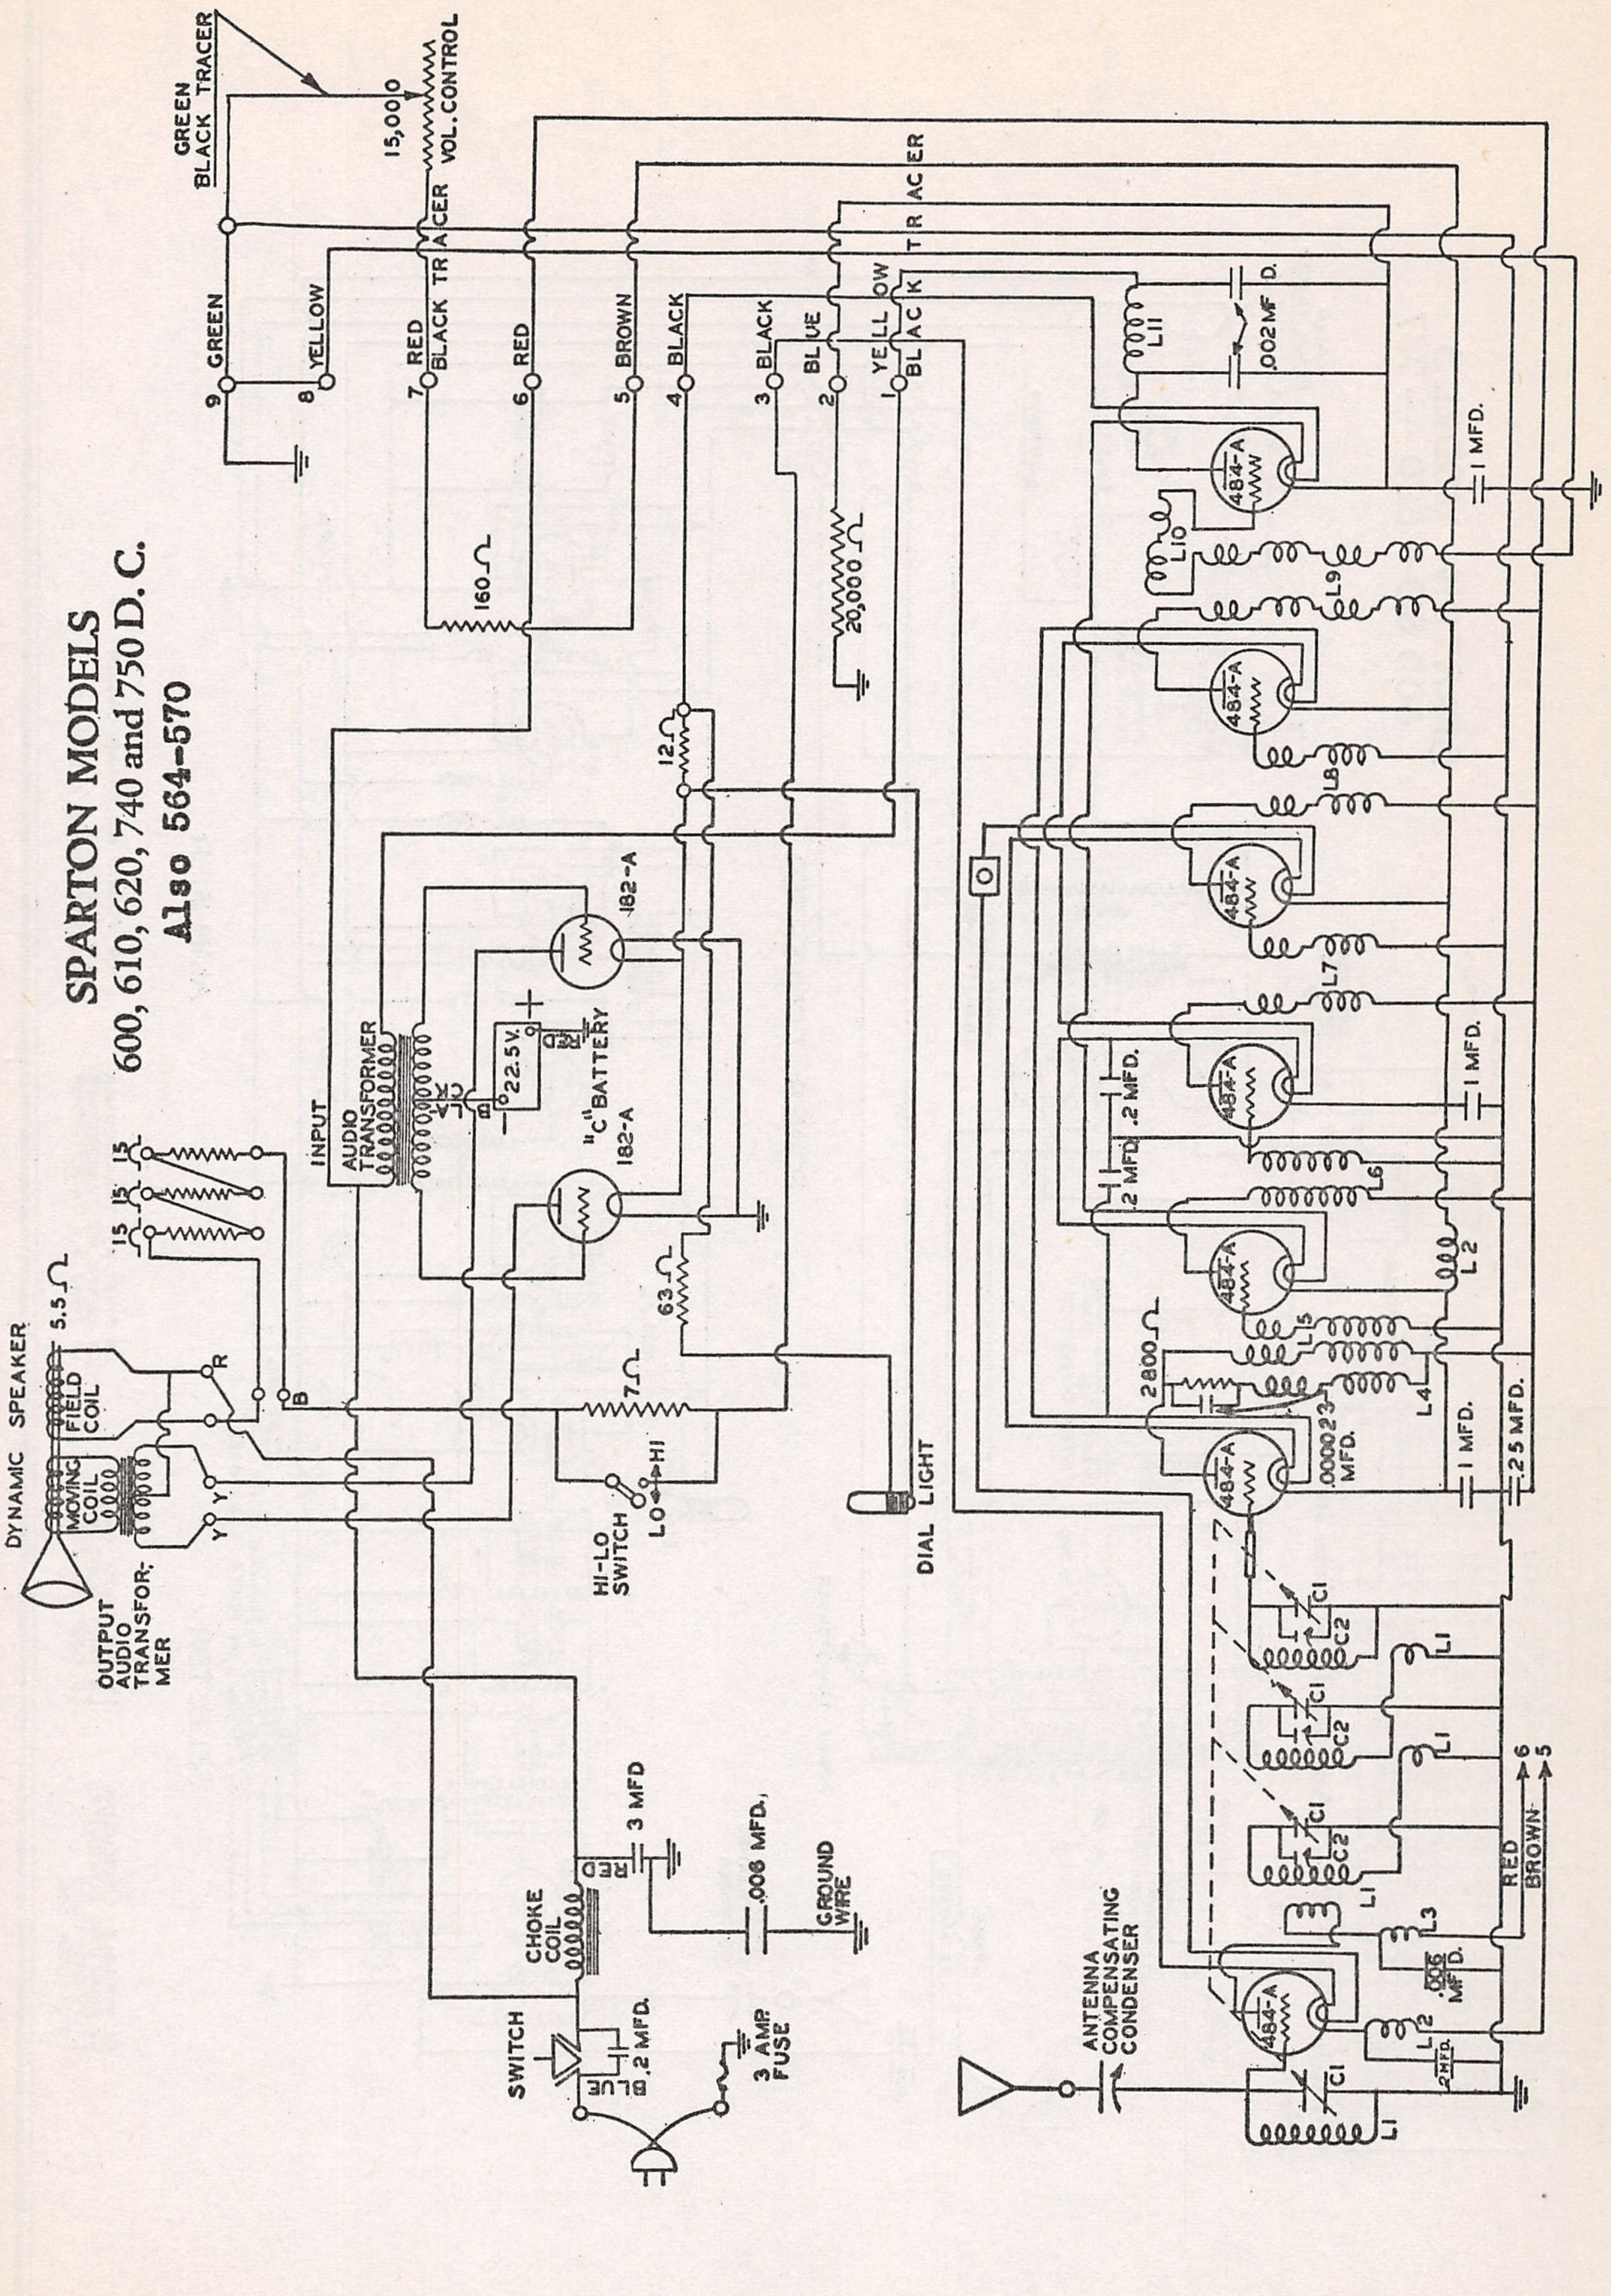
GREEN
BLACK TRACER
15,000
VOL. CONTROL
9 GREEN
8 YELLOW
7 RED BLACK TRACER
6 RED
5 BROWN
4 BLACK
3 BLACK
2 BLUE
1 YELLOW BLACK TRACER
160
20,000
12
.002 MF D.
L11
L10
L9
L8
L7
L6
L5
L4
L3
L2
L1
C1
C2
484-A
182-A
I MFD.
.2 MFD.
2800
.000023 MFD.
.25 MFD.
.006 MFD.
2 MFD.
INPUT AUDIO TRANSFORMER
22.5 V.
"C" BATTERY
DYNAMIC SPEAKER
5.5
FIELD COIL
MOVING COIL
OUTPUT AUDIO TRANSFORMER
15
R
B
Y
7
63
HI-LO SWITCH
LO
HI
DIAL LIGHT
3 MFD
RED
.006 MFD.
GROUND WIRE
CHOKE COIL
SWITCH
BLUE
.2 MFD.
3 AMP FUSE
ANTENNA COMPENSATING CONDENSER
RED
BROWN
6
5

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COILS
L3 R.F. CHOKE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
L6 FIRST R.F. TRANSFORMER
L7 SECOND R.F. TRANSFORMER
L8 THIRD R.F. TRANSFORMER
L9 FOURTH R.F. TRANSFORMER
L10 GRID COIL
L11 DETECTOR PLATE CHOKE

MODEL 600,610,620,
737 AC.
737 Below # 6502

SPARKS WITHINGTON CO.

SPARTON—Model 610-620*
Line Voltage 120—Set on 120-130 Volt Tap—Volume Control Position Max

Tube No. in Order ①	Type of Tube ②	Position of Tube 1st RF Det etc ③	Readings, Plug in Socket of Set: Tube Out: A Volts ④	B Volts ⑤	Tube in Tester: A Volts ⑥	B Volts ⑦	C Volts (Control Grid) ⑧	Cathode-Heater Volts ⑨	Normal Plate M.A. ⑩	Plate M.A. Grid Test ⑪	Plate Change M.A. ⑫	Screen Grid Volts ⑬
1	484	1st RF	3	130	2.9	120	4.5	-	7.5	13	5.5	
2	484	2nd RF	3	130	2.9	120	4.5	-	7.5	13	5.5	
3	484	3rd RF	3	130	2.9	120	4.5	-	7.5	13	5.5	
4	484	4th RF	3	130	2.9	120	4.5	-	7.5	13	5.5	
5	484	5th RF	3	130	2.9	120	4.5	-	7.5	13	5.5	
6	484	Det.	3	120	2.9	110	10	-	1	3.5	2.5	
7	182	1st A	5.5	280	4.9	270	35	-	20	25	5	
8	182	2nd A	5.5	280	4.9	270	35	-	20	25	5	
9	280	Rect.	5.5		5				85			
10												

***Models 600-610-620—1 Additional 484 Tube in Selector**

SPARTON MODELS
600 610 AND 620 ALSO 737

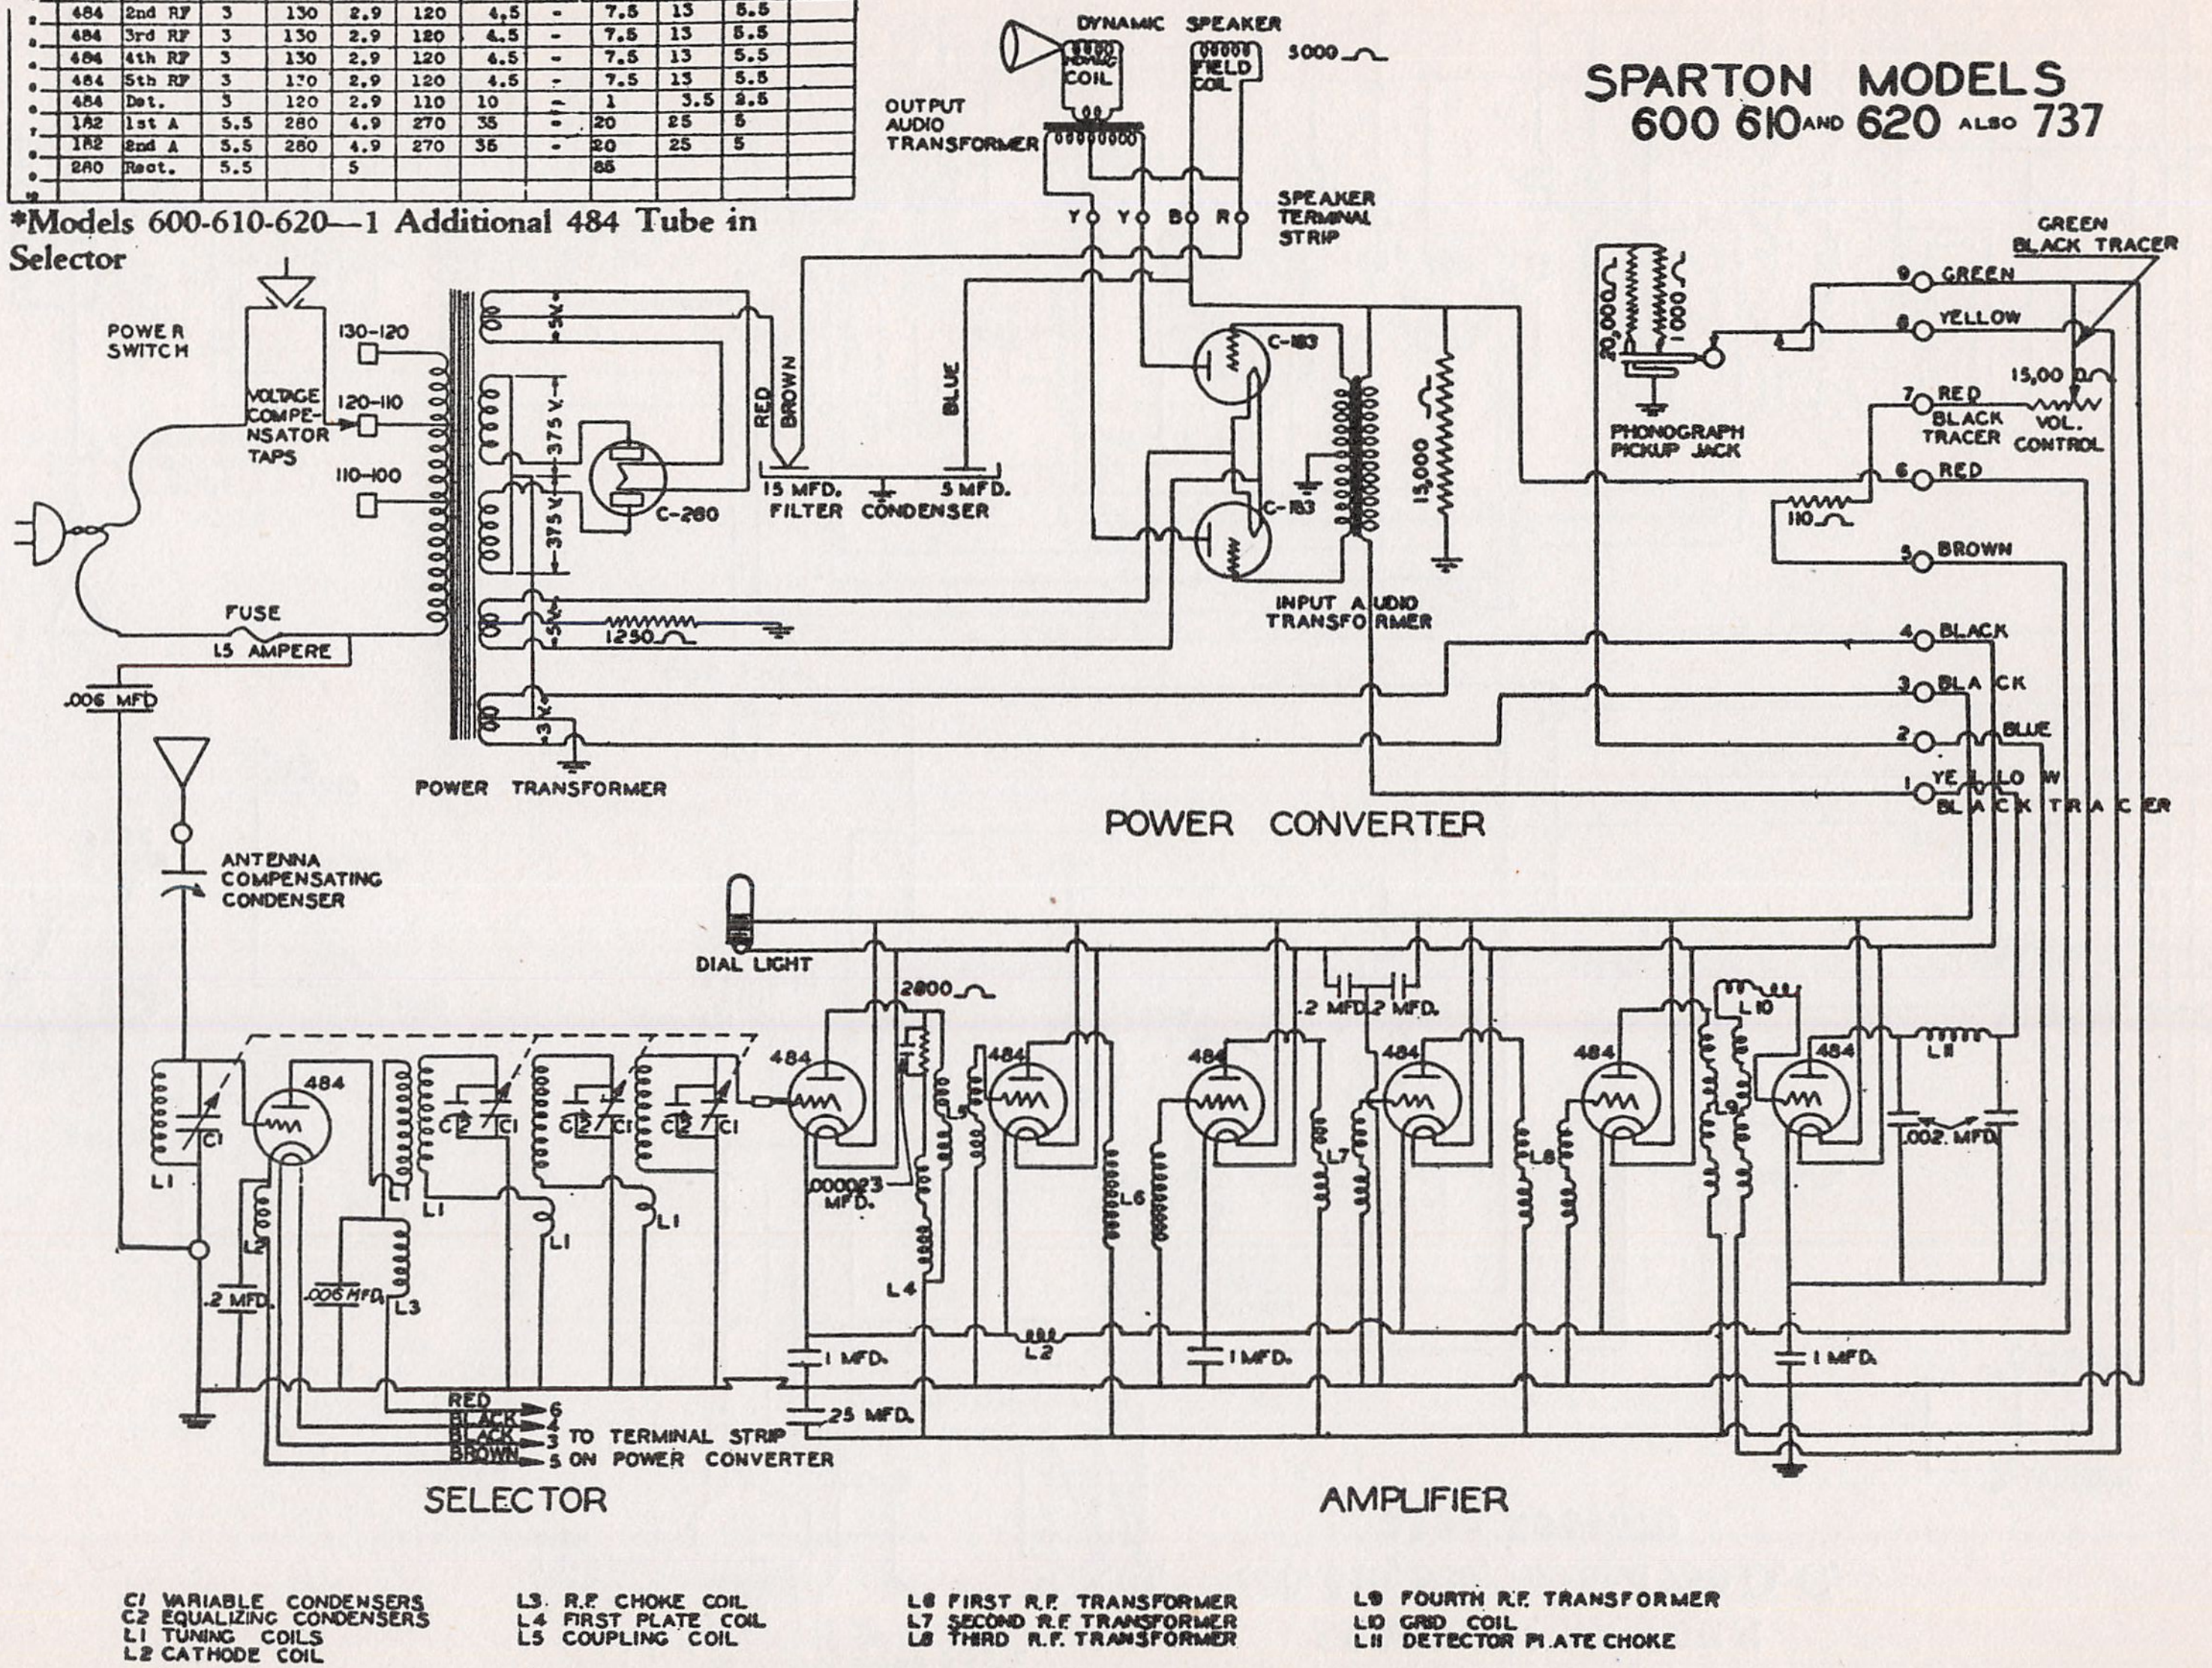
DYNAMIC SPEAKER
VOICE COIL
FIELD COIL
5000
OUTPUT AUDIO TRANSFORMER
Y Y B R
SPEAKER TERMINAL STRIP
POWER SWITCH
VOLTAGE COMPENSATOR TAPS
130-120
120-110
110-100
FUSE
1.5 AMPERE
.006 MFD
5V
375 V
375 V
5V
3V
C-280
RED
BROWN
BLUE
15 MFD. FILTER
5 MFD. CONDENSER
1250
POWER TRANSFORMER
C-182
C-182
INPUT AUDIO TRANSFORMER
15,000
20,000
1000
PHONOGRAPH PICKUP JACK
GREEN BLACK TRACER
9 GREEN
8 YELLOW
15,000
VOL. CONTROL
7 RED BLACK TRACER
6 RED
110
5 BROWN
4 BLACK
3 BLACK
2 BLUE
1 YELLOW BLACK TRACER
POWER CONVERTER
ANTENNA COMPENSATING CONDENSER
DIAL LIGHT
2800
.2 MFD
.2 MFD.
484
484
484
484
484
484
484
C1
C2
L1
L2
L3
L4
L6
L7
L8
L10
L11
.00023 MFD.
.002 MFD.
.2 MFD.
.006 MFD.
1 MFD.
1 MFD.
1 MFD.
.25 MFD.
RED 6
BLACK 4
BLACK 3
BROWN 5
TO TERMINAL STRIP ON POWER CONVERTER
SELECTOR
AMPLIFIER

C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COIL
L3 R.F. CHOKE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
L6 FIRST R.F. TRANSFORMER
L7 SECOND R.F. TRANSFORMER
L8 THIRD R.F. TRANSFORMER
L9 FOURTH R.F. TRANSFORMER
L10 GRID COIL
L11 DETECTOR PLATE CHOKE

SPARKS WITHINGTON CO.

MODEL 737 AC
Above # 6502

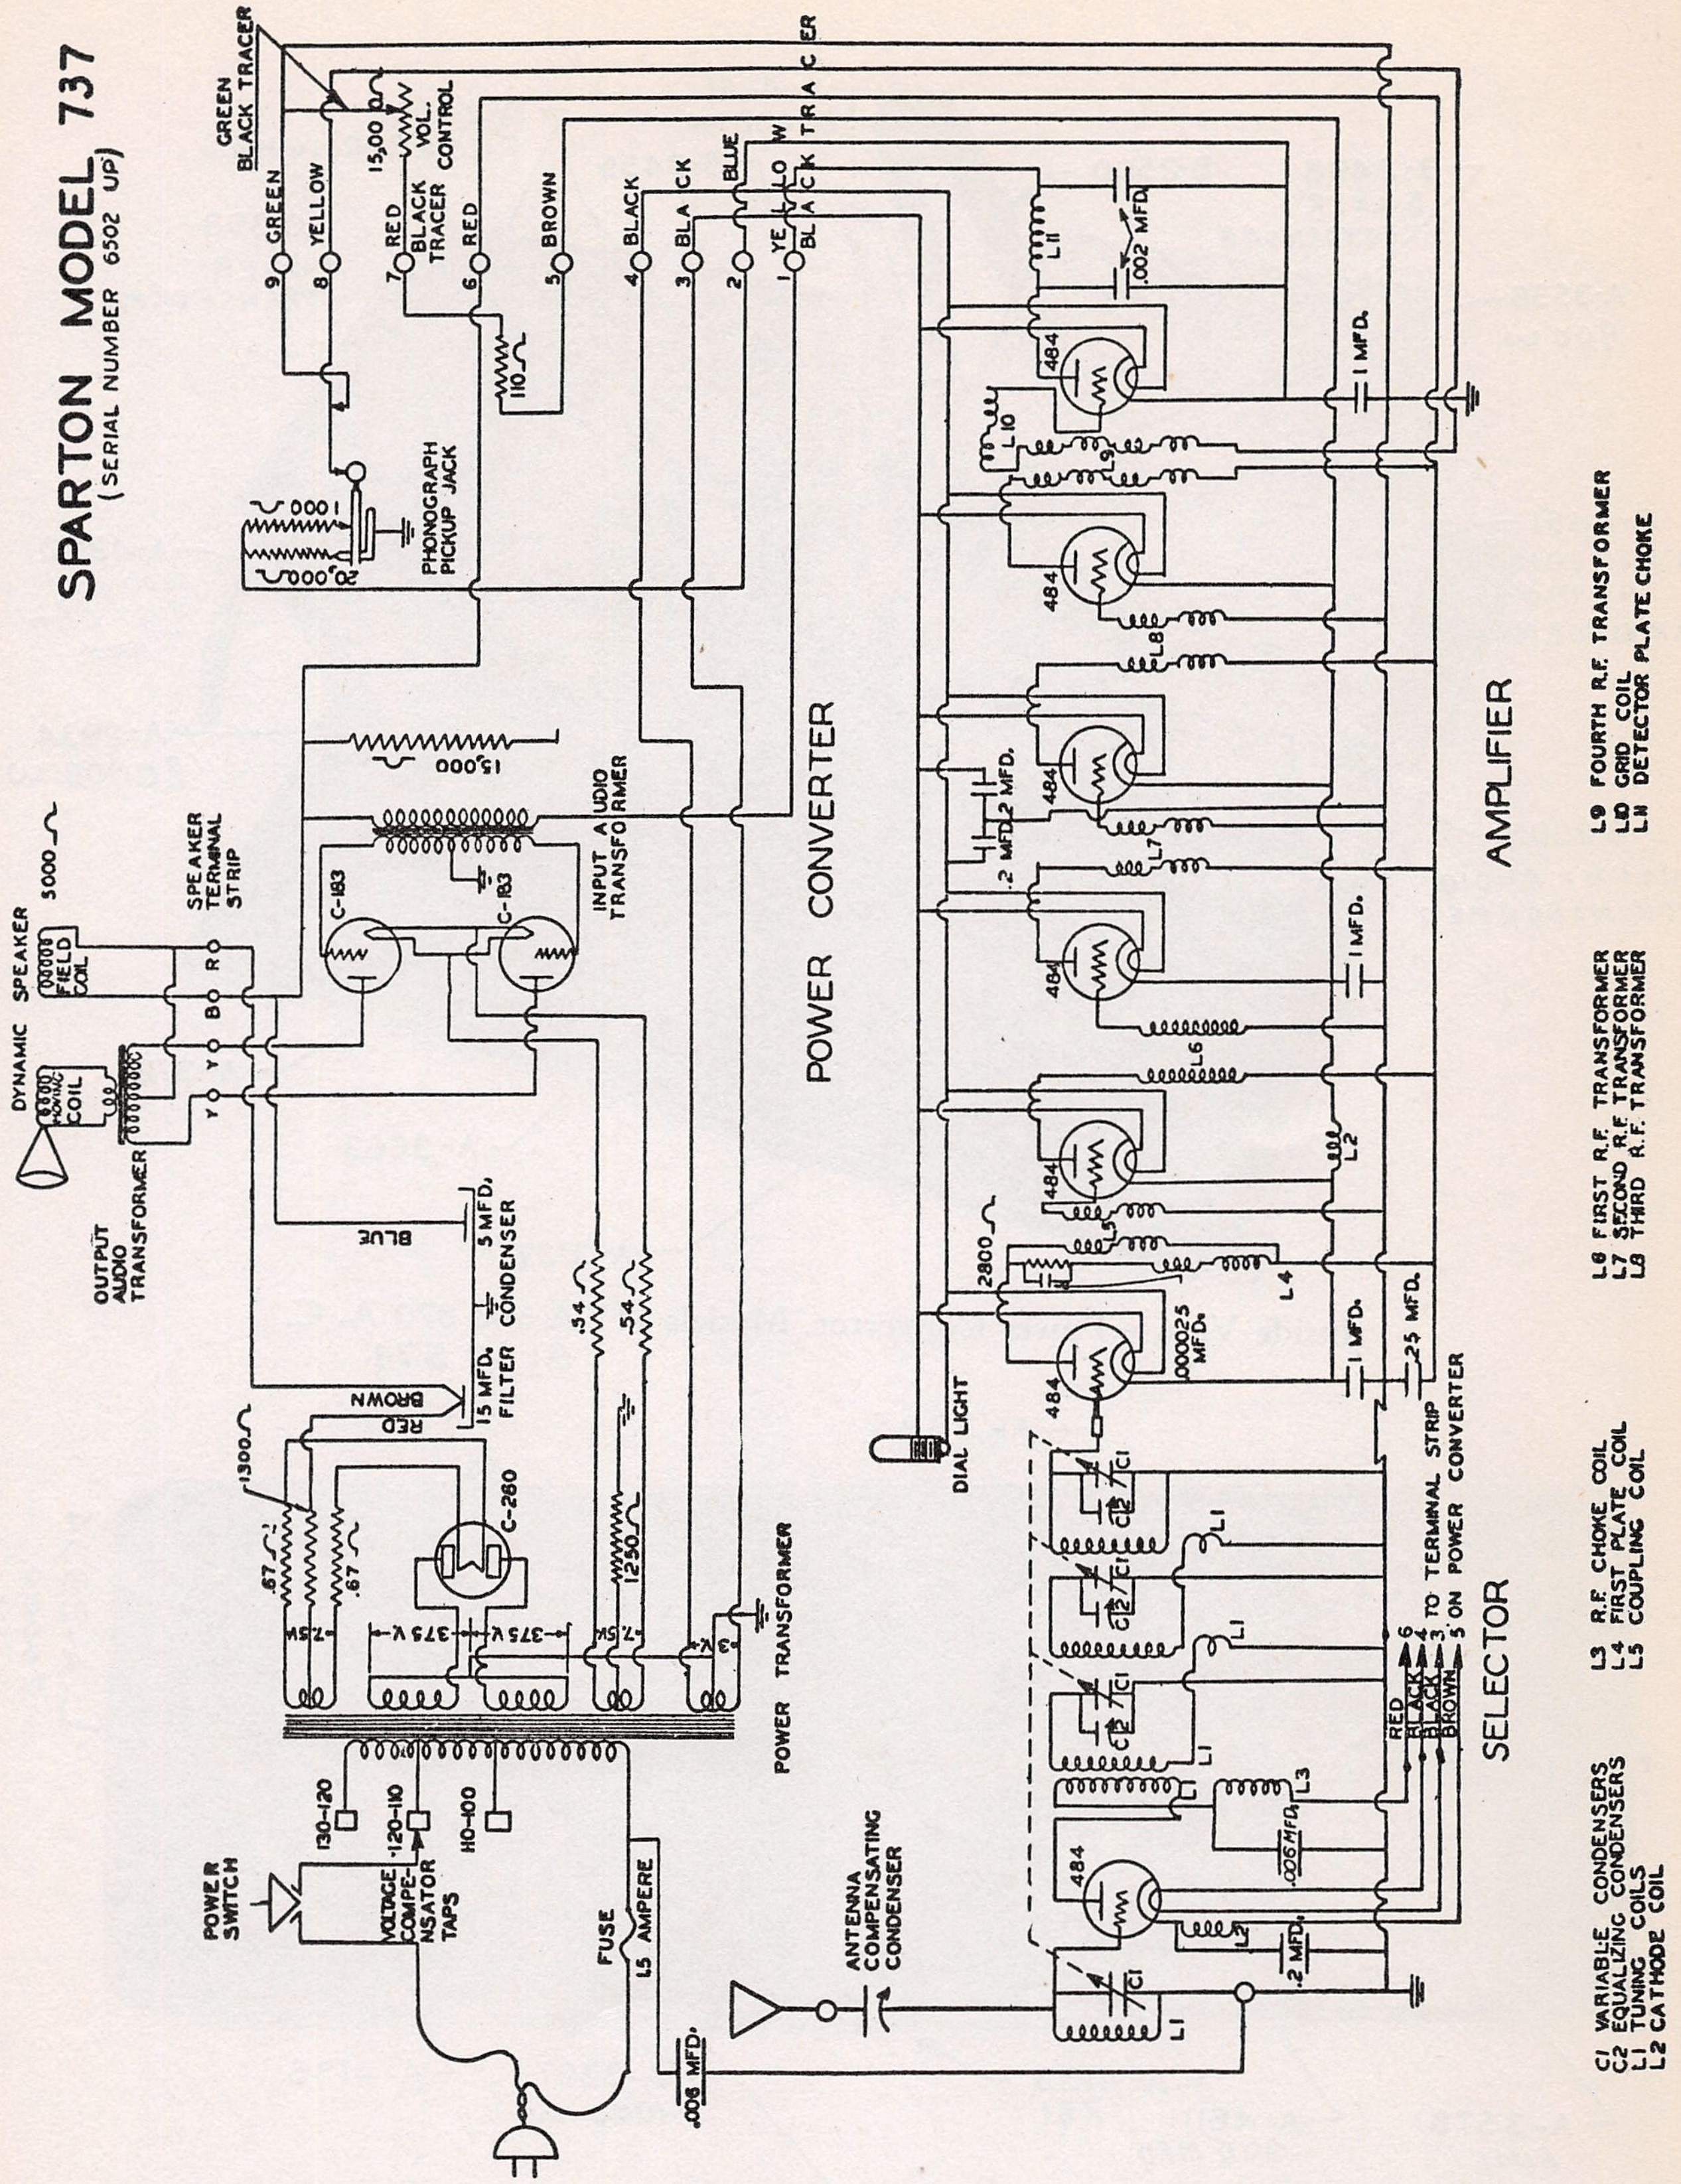
SPARTON MODEL 737
(SERIAL NUMBER 6502 UP)
GREEN
BLACK TRACER
9 GREEN
8 YELLOW
15,000
VOL. CONTROL
7 RED
BLACK TRACER
6 RED
5 BROWN
4 BLACK
3 BLACK
BLUE
2
1 YELLOW
BLACK TRACER
110
1000
20,000
PHONOGRAPH PICKUP JACK
15,000
INPUT AUDIO TRANSFORMER
C-183
C-183
SPEAKER TERMINAL STRIP
3000
DYNAMIC SPEAKER
FIELD COIL
MOVING COIL
OUTPUT AUDIO TRANSFORMER
R
BO
Y
Y
BLUE
5 MFD. CONDENSER
15 MFD. FILTER CONDENSER
RED
BROWN
.54
.54
1300
.67
.67
C-280
1250
7.5V
375 V
375 V
2.5V
7.5V
POWER TRANSFORMER
130-120
120-110
110-100
POWER SWITCH
VOLTAGE COMPENSATOR TAPS
FUSE
1.5 AMPERE
.008 MFD.
POWER CONVERTER
ANTENNA COMPENSATING CONDENSER
DIAL LIGHT
484
484
484
484
484
484
L11
.002 MFD.
1 MFD.
L10
L9
L8
.2 MFD.
.2 MFD.
L7
1 MFD.
L6
L2
2800
L3
L4
1 MFD.
.25 MFD.
.000025 MFD.
C1
C2
L1
L1
L1
L1
L3
.025 MFD.
L2
.2 MFD.
RED
BLACK
BLACK
BROWN
6
4
3
5
TO TERMINAL STRIP ON POWER CONVERTER
AMPLIFIER
SELECTOR
C1 VARIABLE CONDENSERS
C2 EQUALIZING CONDENSERS
L1 TUNING COILS
L2 CATHODE COIL
L3 R.F. CHOKE COIL
L4 FIRST PLATE COIL
L5 COUPLING COIL
L6 FIRST R.F. TRANSFORMER
L7 SECOND R.F. TRANSFORMER
L8 THIRD R.F. TRANSFORMER
L9 FOURTH R.F. TRANSFORMER
L10 GRID COIL
L11 DETECTOR PLATE CHOKE

Power Converter

SPARKS WITHINGTON CO.

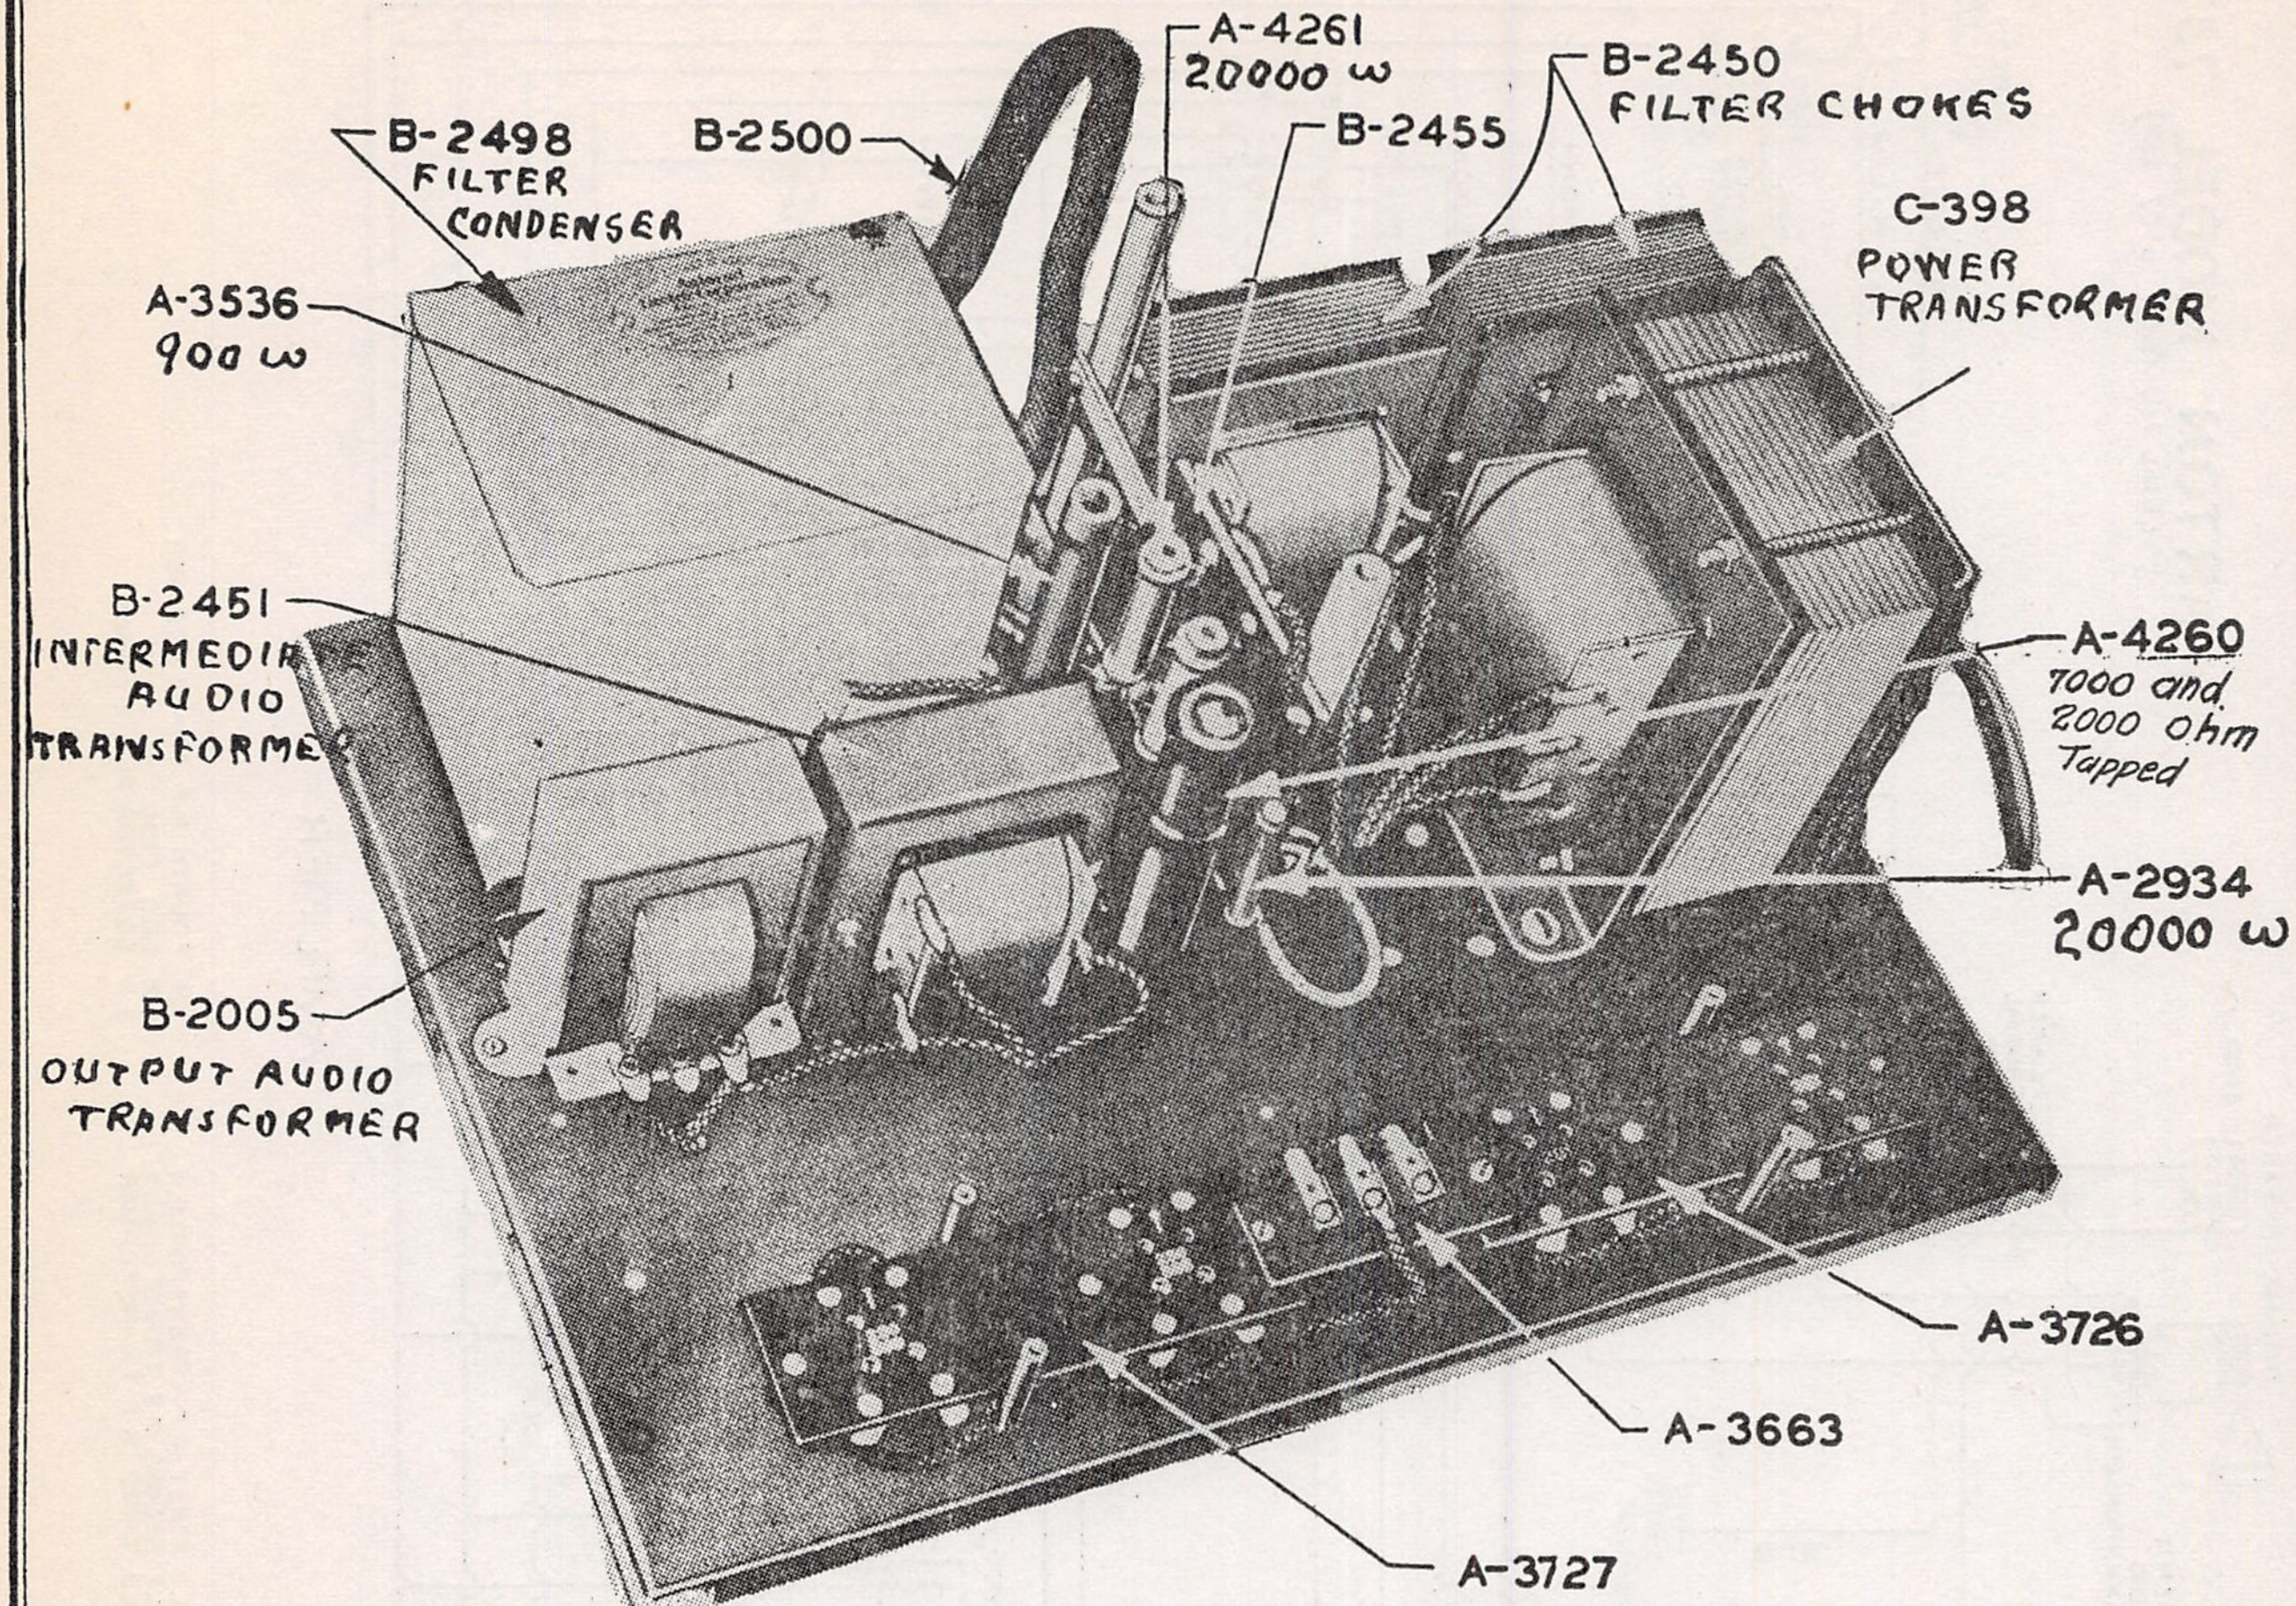
A-4261
20000 ω
B-2450
FILTER CHOKES
B-2498
FILTER
CONDENSER
B-2500
B-2455
C-398
POWER
TRANSFORMER
A-3536
900 ω
B-2451
INTERMEDIA
AUDIO
TRANSFORME
A-4260
7000 and
2000 ohm
Tapped
A-2934
20000 ω
B-2005
OUTPUT AUDIO
TRANSFORMER
A-3726
A-3663
A-3727

Inside View—Power Convertor, Models 111-A and 870 A. C.
ALSO 574

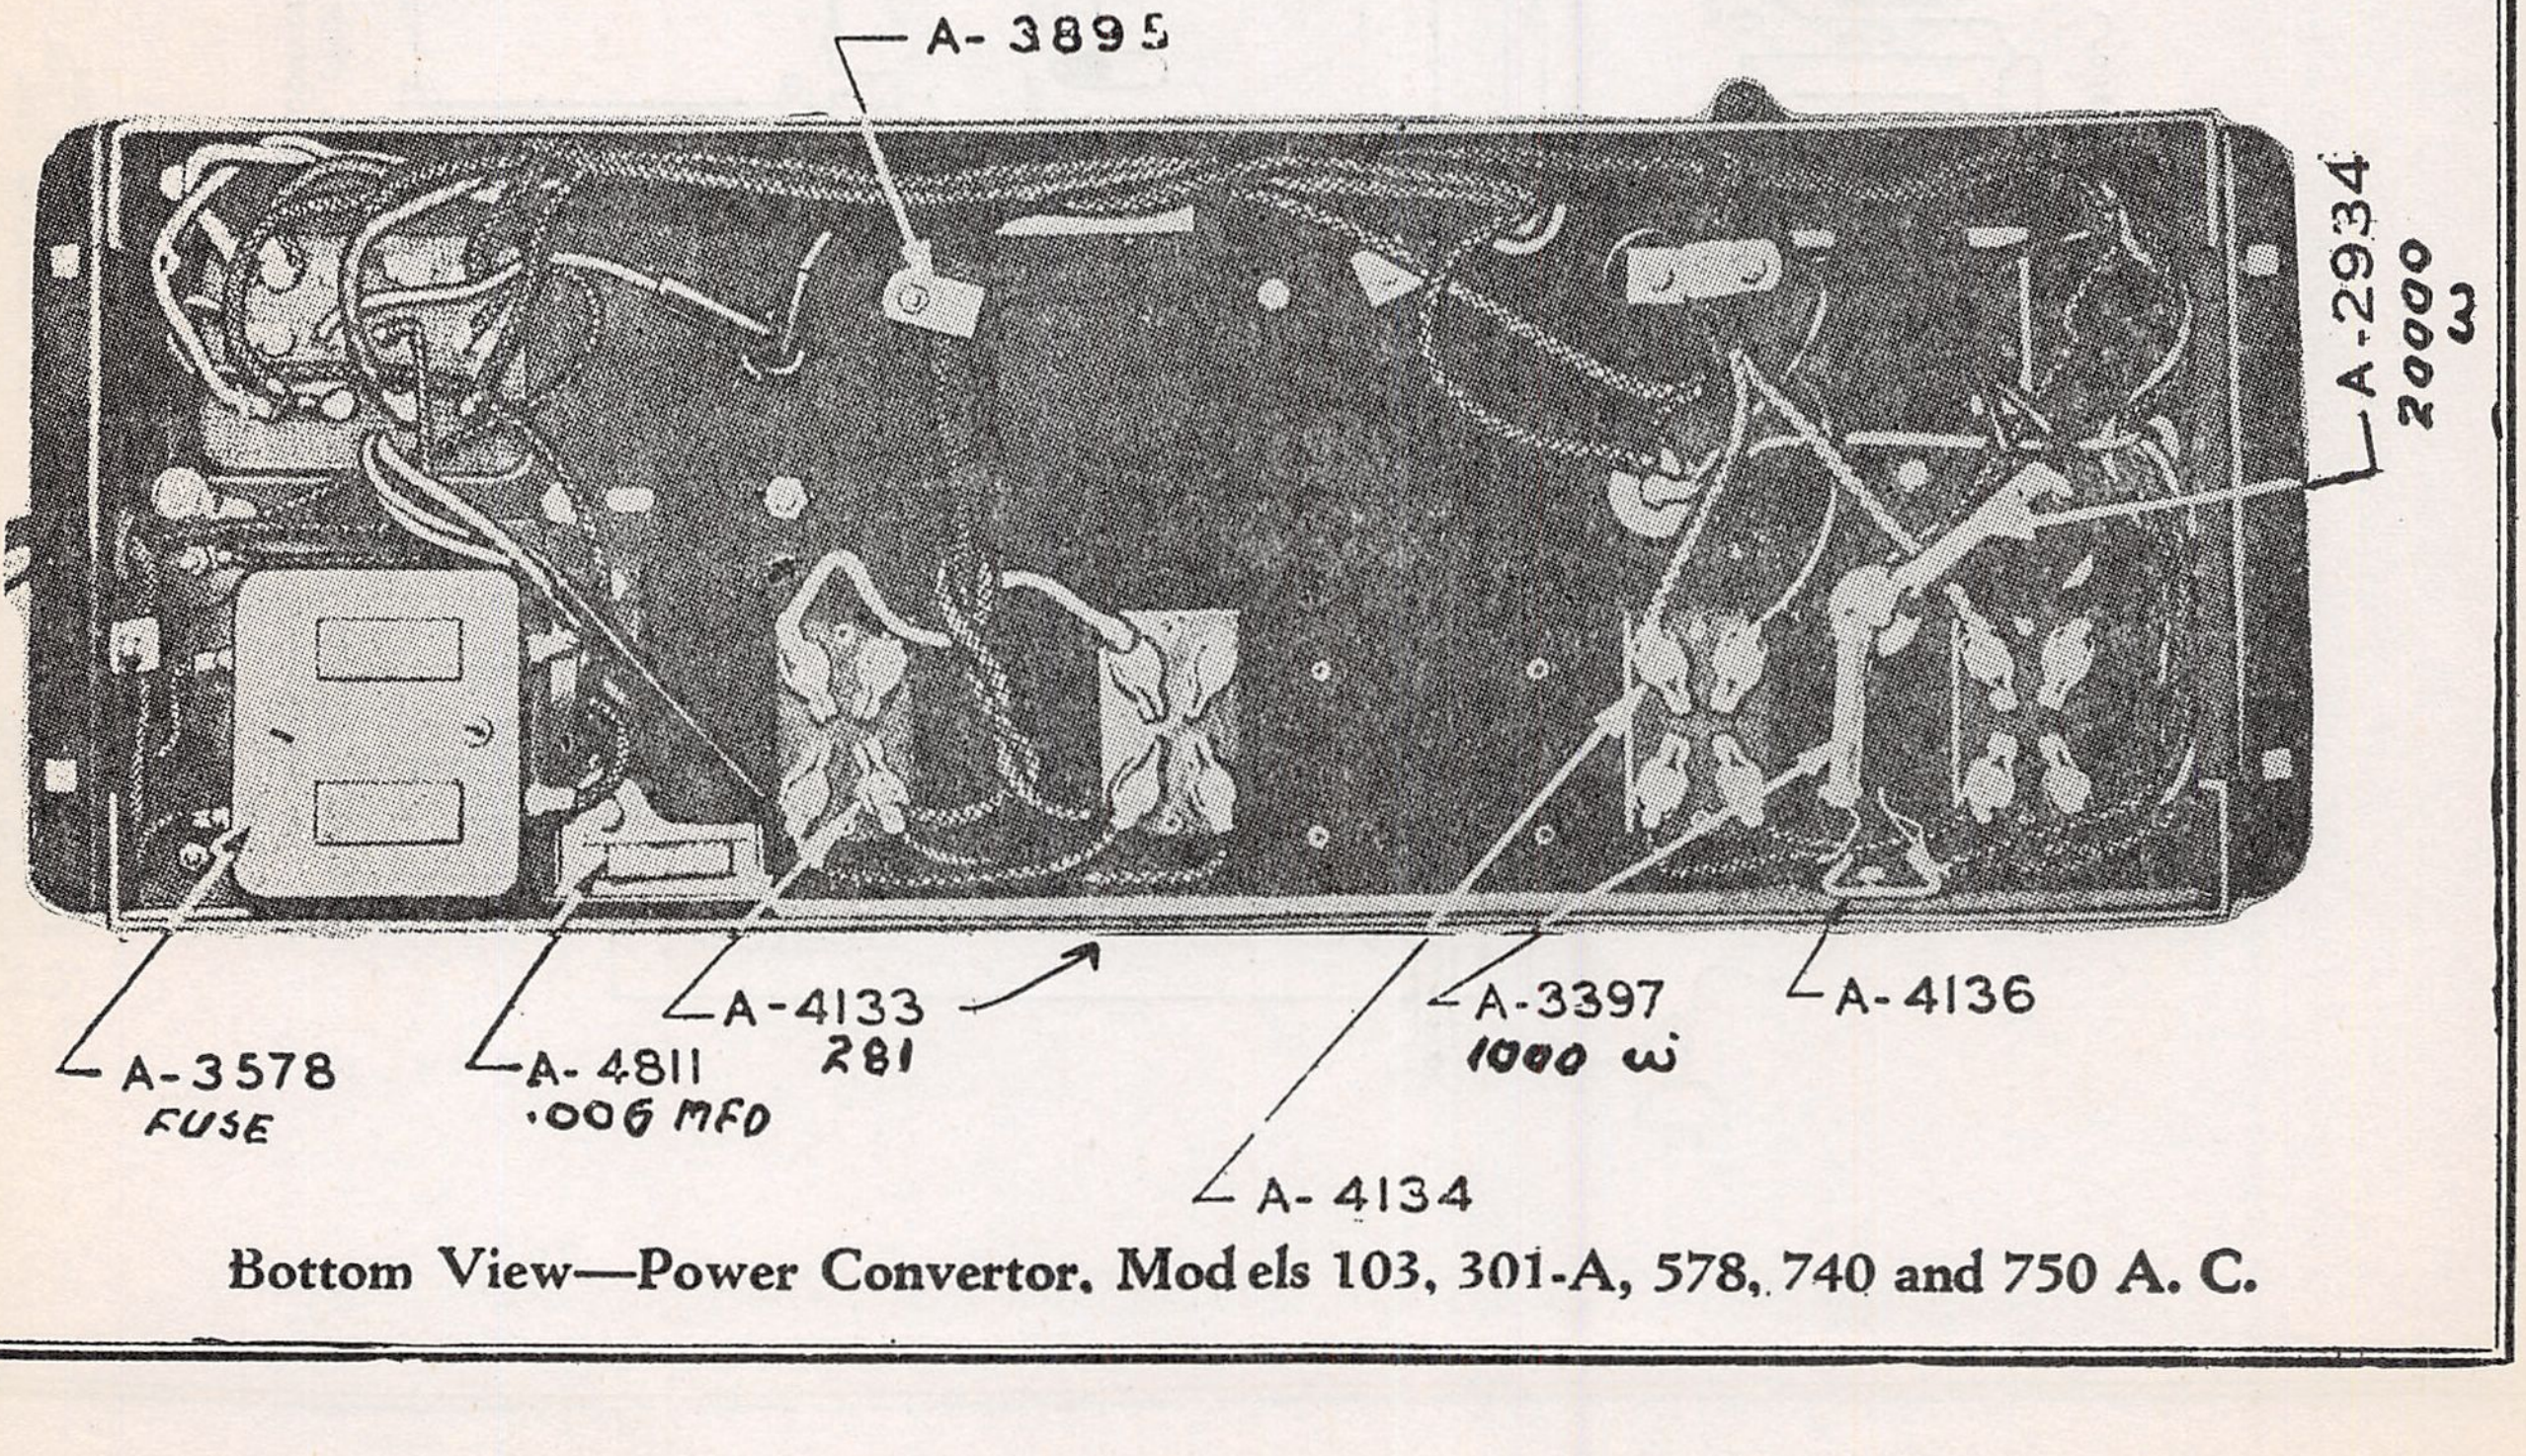
A- 3895
A-2934
20000
ω
A-4133
281
A-3397
1000 ω
A-4136
A-3578
FUSE
A- 4811
.006 MFD
A- 4134

Bottom View—Power Convertor. Models 103, 301-A, 578, 740 and 750 A. C.

SPARKS WITHINGTON CO.

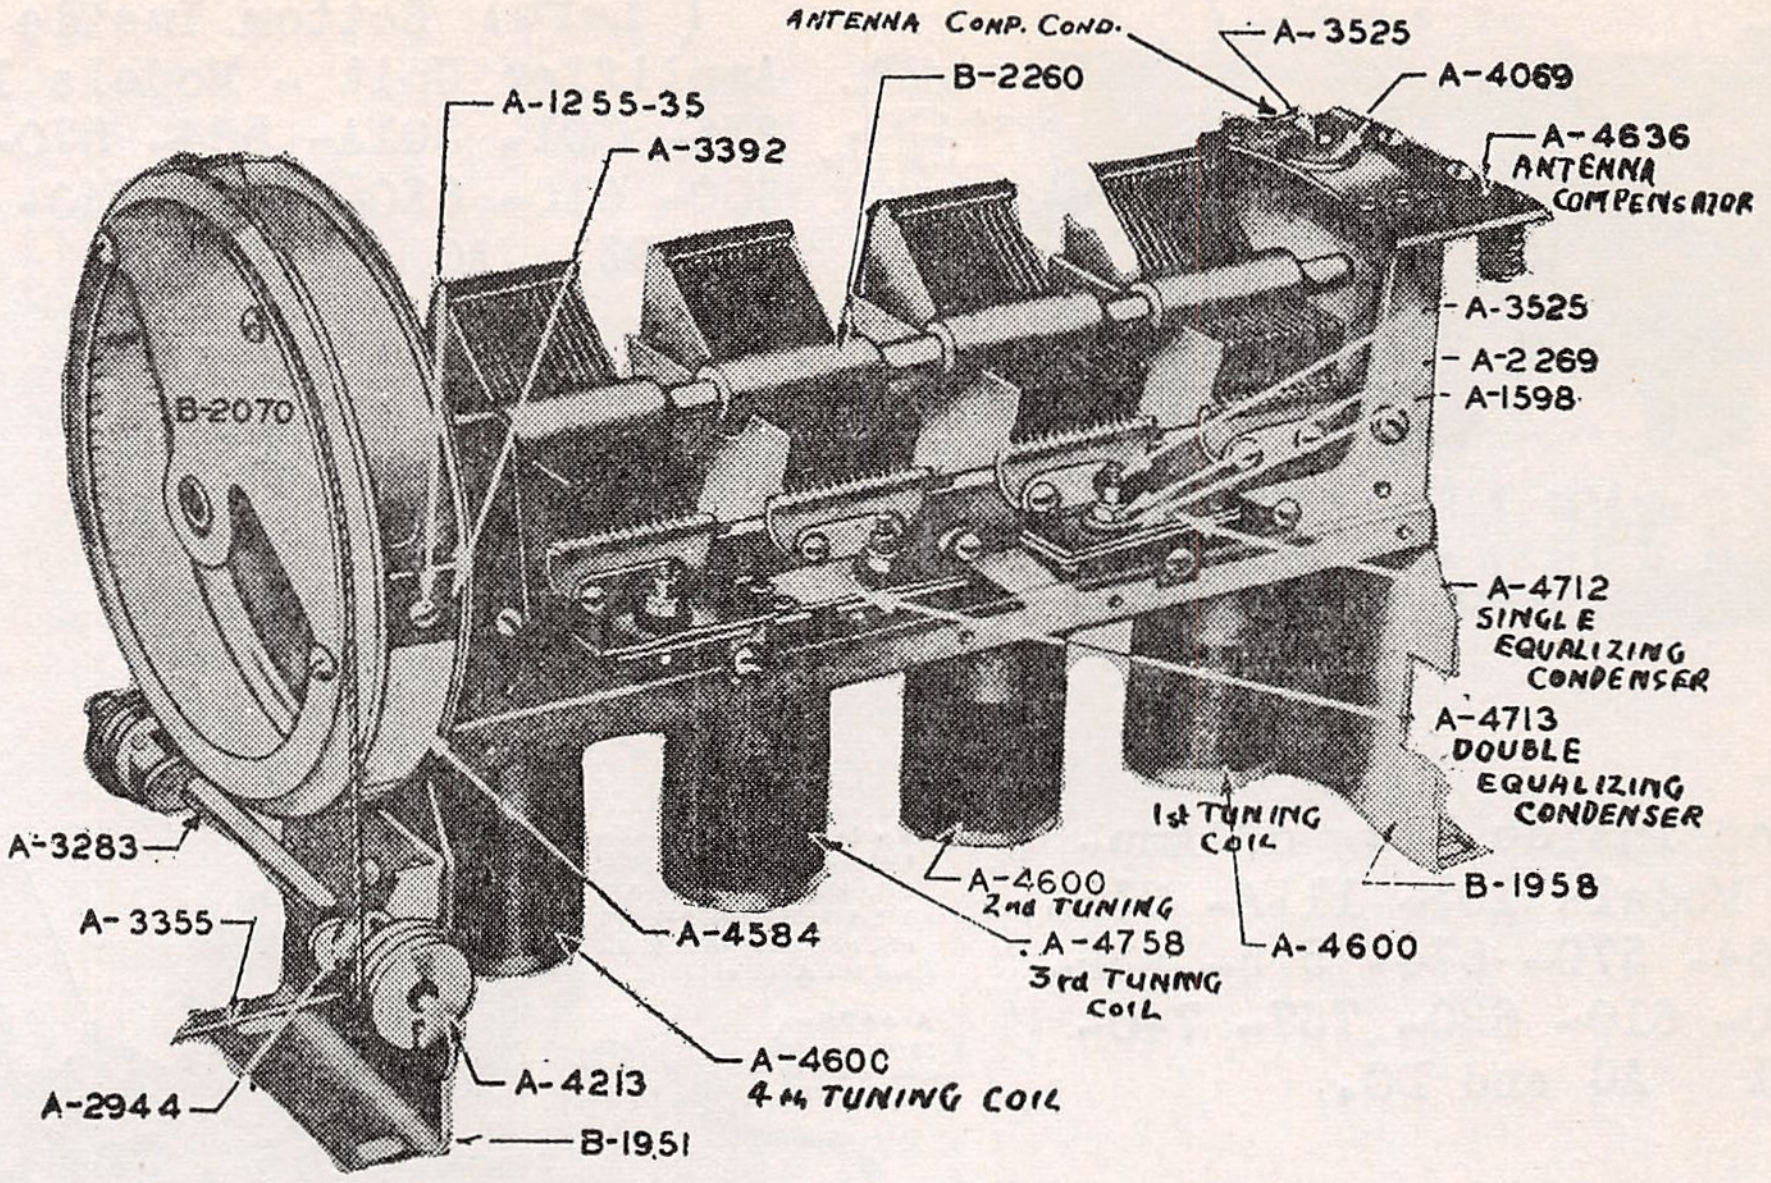
ANTENNA COMP. COND.
A-3525
A-4069
A-1255-35
B-2260
A-3392
A-4636
ANTENNA COMPENSATOR
B-2070
A-3525
A-2269
A-1598
A-4712
SINGLE EQUALIZING CONDENSER
A-4713
DOUBLE EQUALIZING CONDENSER
1st TUNING COIL
A-3283
B-1958
A-3355
A-4600
2nd TUNING
A-4584
A-4758
3rd TUNING COIL
A-4600
A-4213
A-4600
4th TUNING COIL
A-2944
B-1951

Inside View—Selector Unit Models 301, 591, 593 and 931 A. C. and D. C.

Note: D. C. Models use A-4388 Antenna Compensating Condenser.

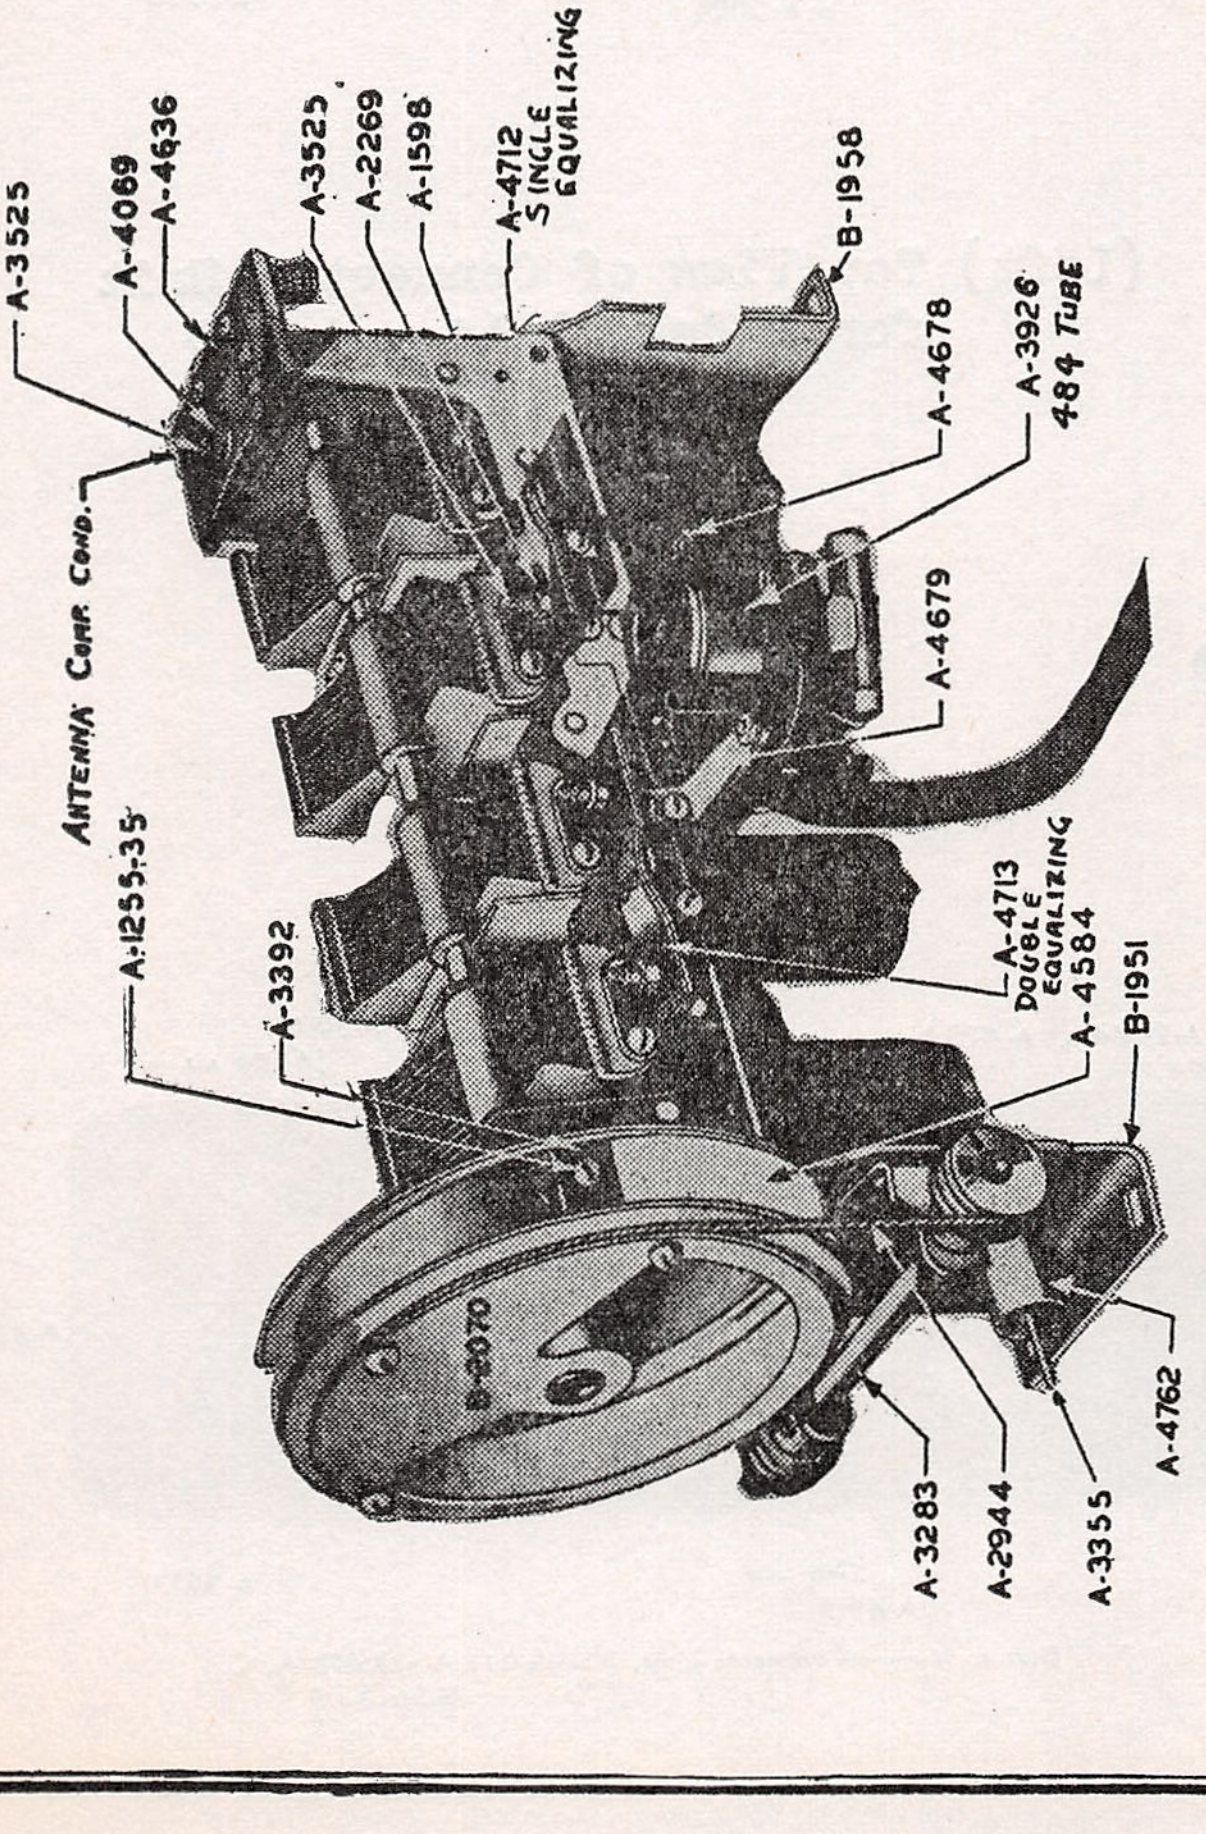
A-3525
A-4069
A-4636
A-3525
A-2269
A-1598
A-4712
SINGLE EQUALIZING
B-1958
ANTENNA COMP. COND.
A-4678
A-3926
484 TUBE
A-1255-35
A-4679
A-3392
B-2070
A-4713
DOUBLE EQUALIZING
A-4584
B-1951
A-4762
A-3283
A-2944
A-3355

Top View—Selector Unit, Models 103, 111-A, 235, 301-A, 564, 570, 574, 578, 589, 600, 610, 620, 737, 740, 750 and 870 A. C. and D. C.

Note: D. C. Models use A-5276 Antenna Compensating Condenser.

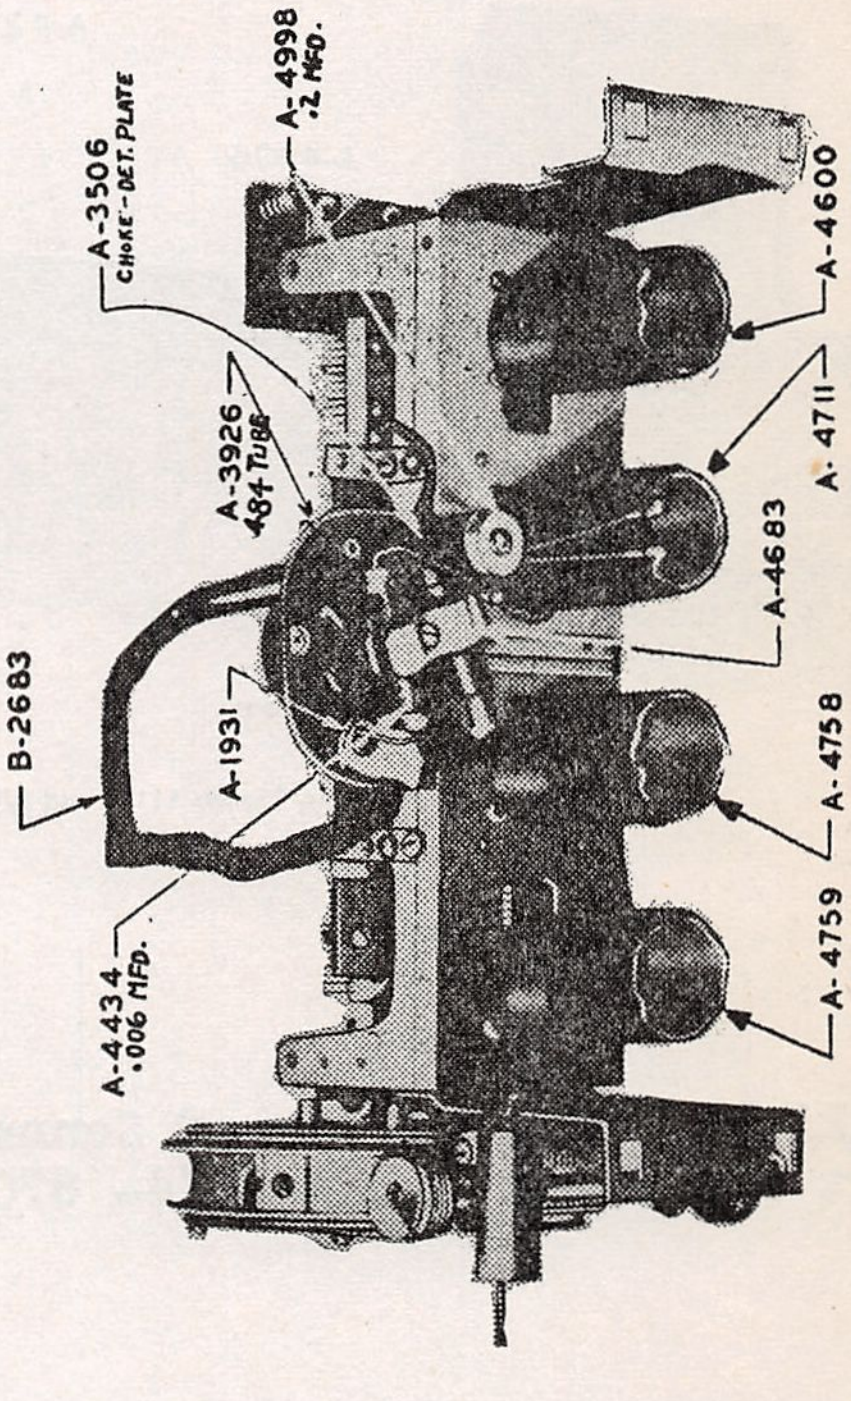
A-3506
CHOKE-DET. PLATE
A-4998
.2 MFD.
B-2683
A-3926
484 TUBE
A-1931
A-4434
.006 MFD.
A-4600
A-4711
A-4683
A-4758
A-4759

Bottom View—Selector Unit Models 103, 235, 301-A, 564, 570, 574, 578, 589, 600, 610, 620, 737, 740 750 and 870 A. C. and D. C

Amplifier Unit
Connector Unit

SPARKS WITHINGTON CO.

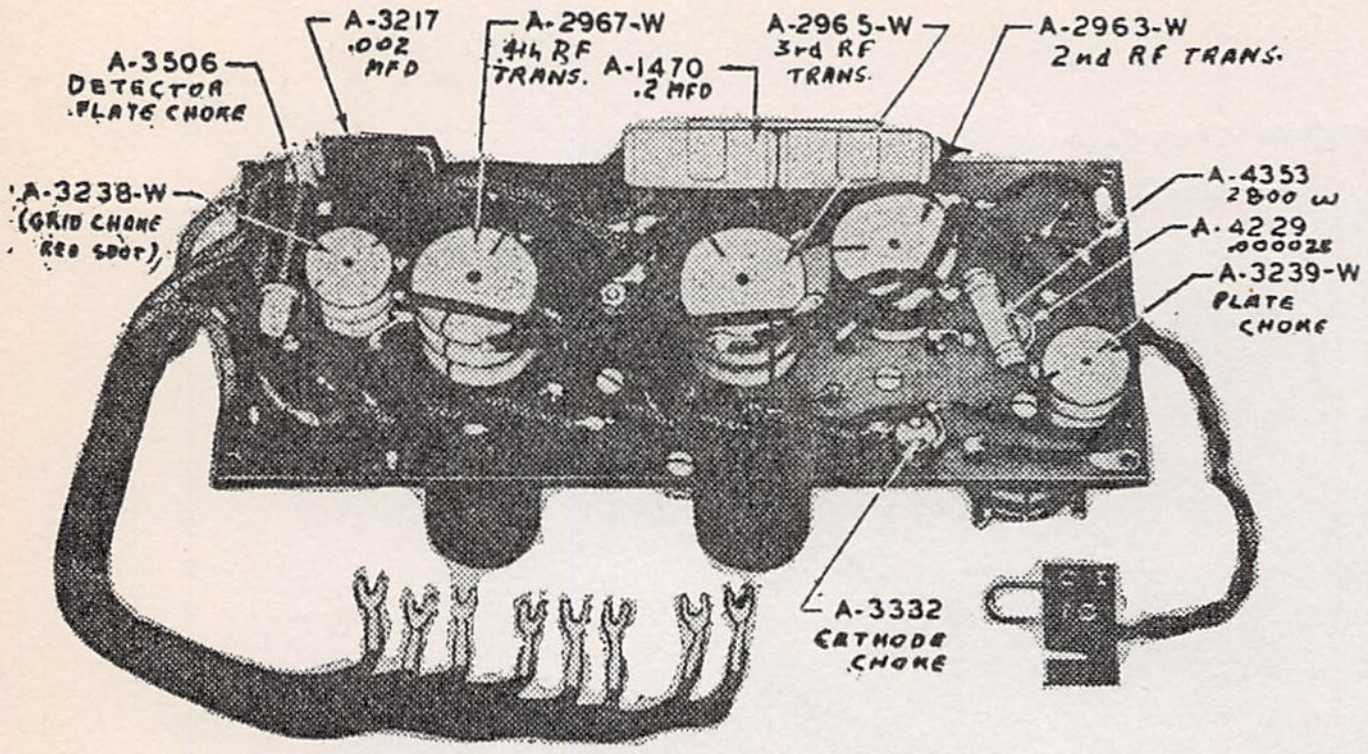
A-3506
DETECTOR
PLATE CHOKE
A-3217
.002
MFD
A-2967-W
4th RF
TRANS.
A-1470
.2 MFD
A-2965-W
3rd RF
TRANS.
A-2963-W
2nd RF TRANS.
A-3238-W
(GRID CHOKE
RED SPOT)
A-4353
2800 ω
A-4229
.00002E
A-3239-W
PLATE
CHOKE
A-3332
CATHODE
CHOKE

(Left) Bottom Inside View of Amplifier Unit - Models 103 - 111A- 235- 301- 301A- 564- 570- 578- 589- 600- 610- 650- 737- 740- 750- 870- and 931 AC and DC.

(Right) Top Inside View of Amplifier Unit- Models 103- 111A- 235- 301- 301A- 564- 570- 574- 578- 589- 591- 593- 600- 610- 620- 737- 740- 750- 870- 931 AC and DC.

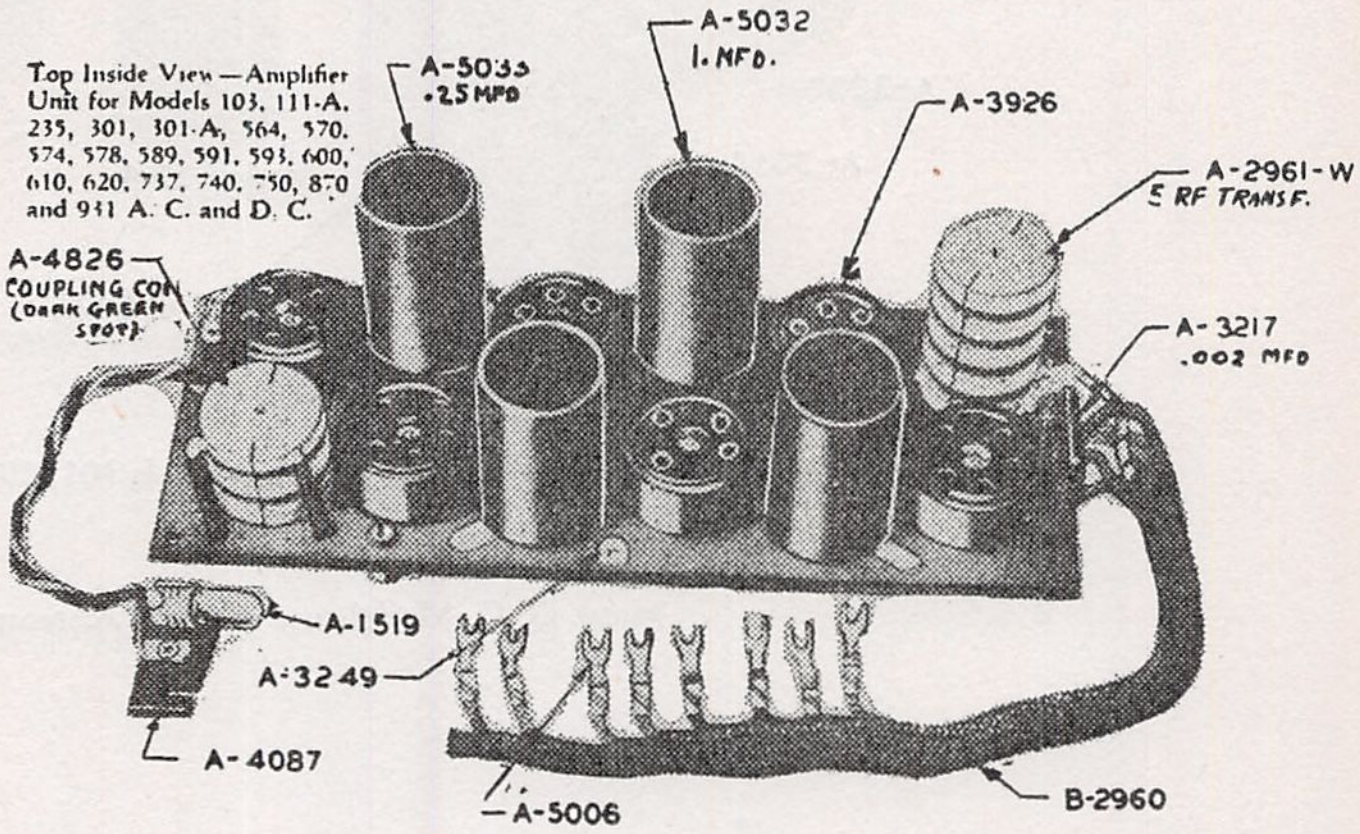
Top Inside View—Amplifier Unit for Models 103, 111-A, 235, 301, 301-A, 564, 570, 574, 578, 589, 591, 593, 600, 610, 620, 737, 740, 750, 870 and 931 A. C. and D. C.
A-5032
1. MFD.
A-5033
.25 MFD
A-3926
A-2961-W
5 RF TRANSF.
A-4826
COUPLING CON
(DARK GREEN
SPOT)
A-3217
.002 MFD
A-1519
A-3249
A-4087
A-5006
B-2960

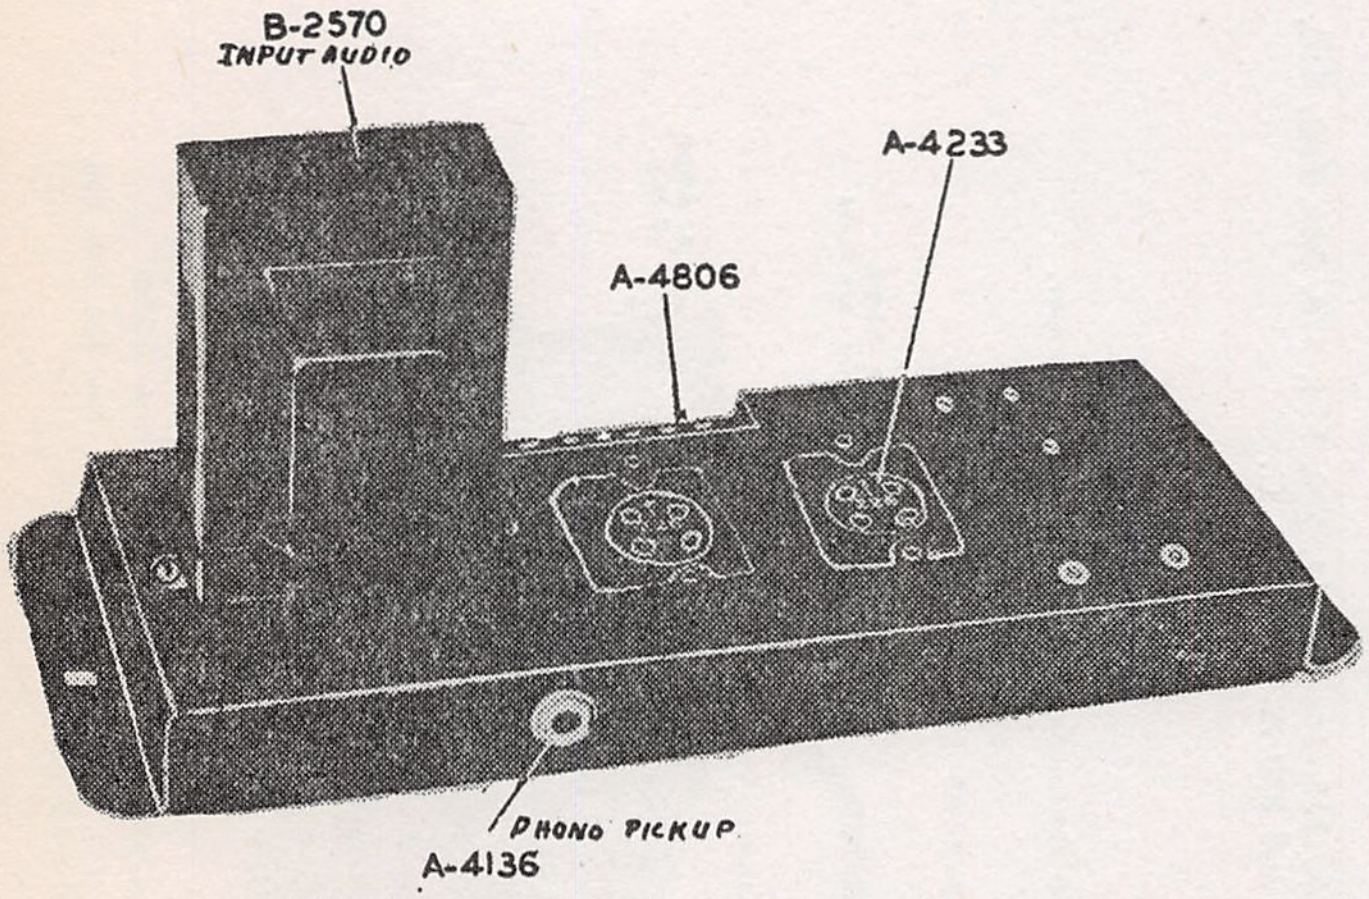
B-2570
INPUT AUDIO
A-4233
A-4806
PHONO PICKUP
A-4136
Top View—Connector Unit, Models 111-A and 870 A. C.

(Left) Top View of Connector Unit for Models 111A and 870 AC

(Right) Bottom View of Connector Unit for Models 111A- 574- 870 AC

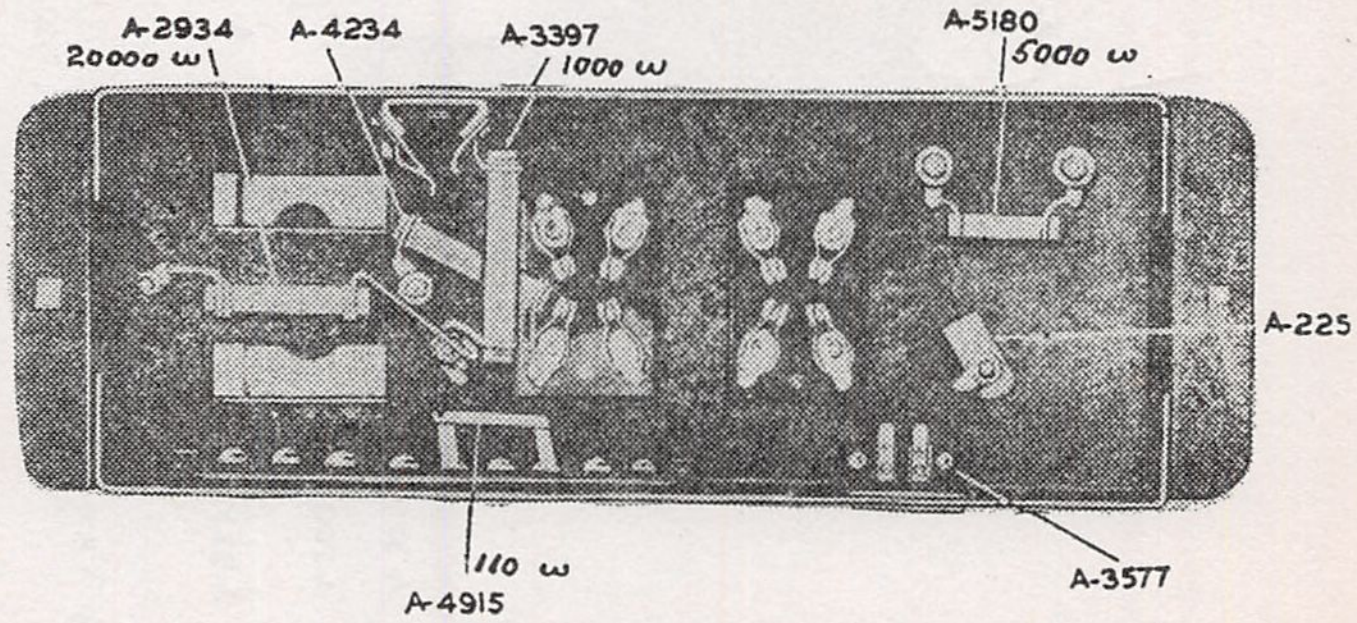
A-2934
20000 ω
A-4234
A-3397
1000 ω
A-5180
5000 ω
A-225
110 ω
A-4915
A-3577
Bottom View—Connector Unit, Models 111-A and 870 A. C.
ALSO 574

SPARKS WITHINGTON CO.

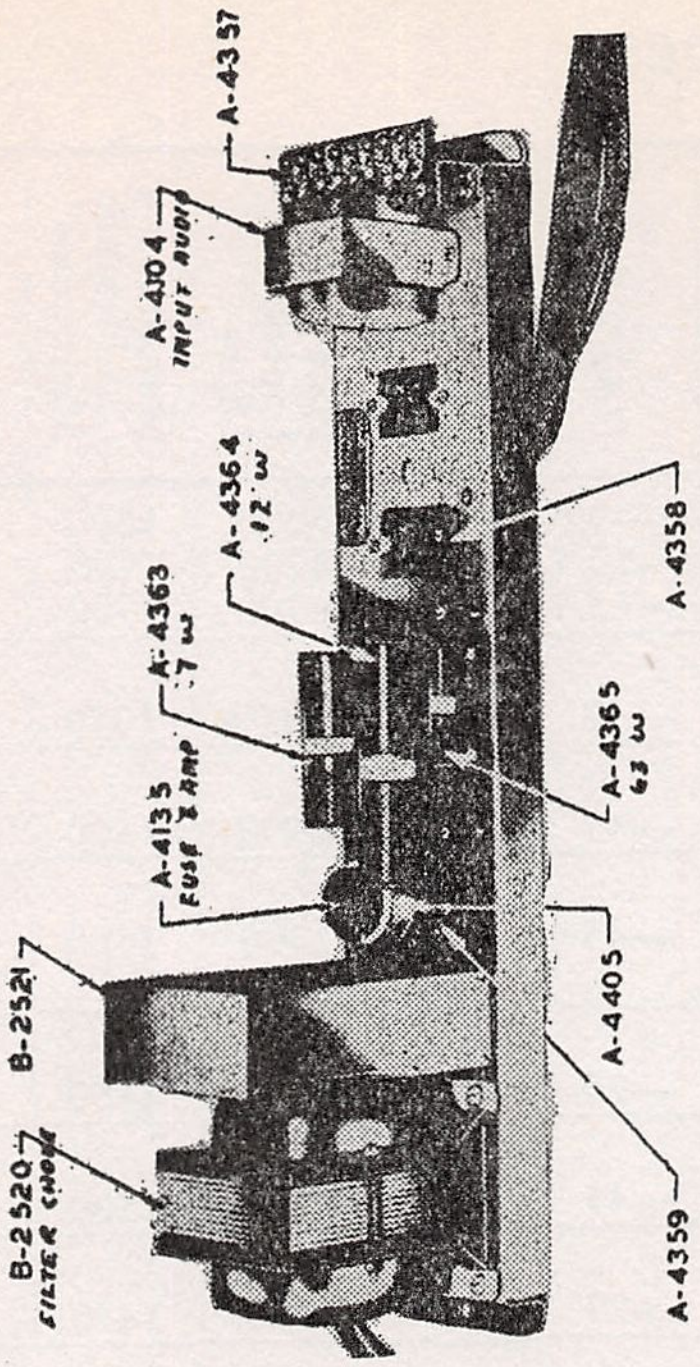
A-4337
A-4104 INPUT AUDIO
A-4364 12 W
A-4363 7 W
A-4133 FUSE 8 AMP
A-4365 63 W
B-2521
B-2520 FILTER CHOKE
A-4358
A-4405
A-4359

Top View—Power Convertor, Models 235, 600, 610, 620, 737, 740, 750 D. C.

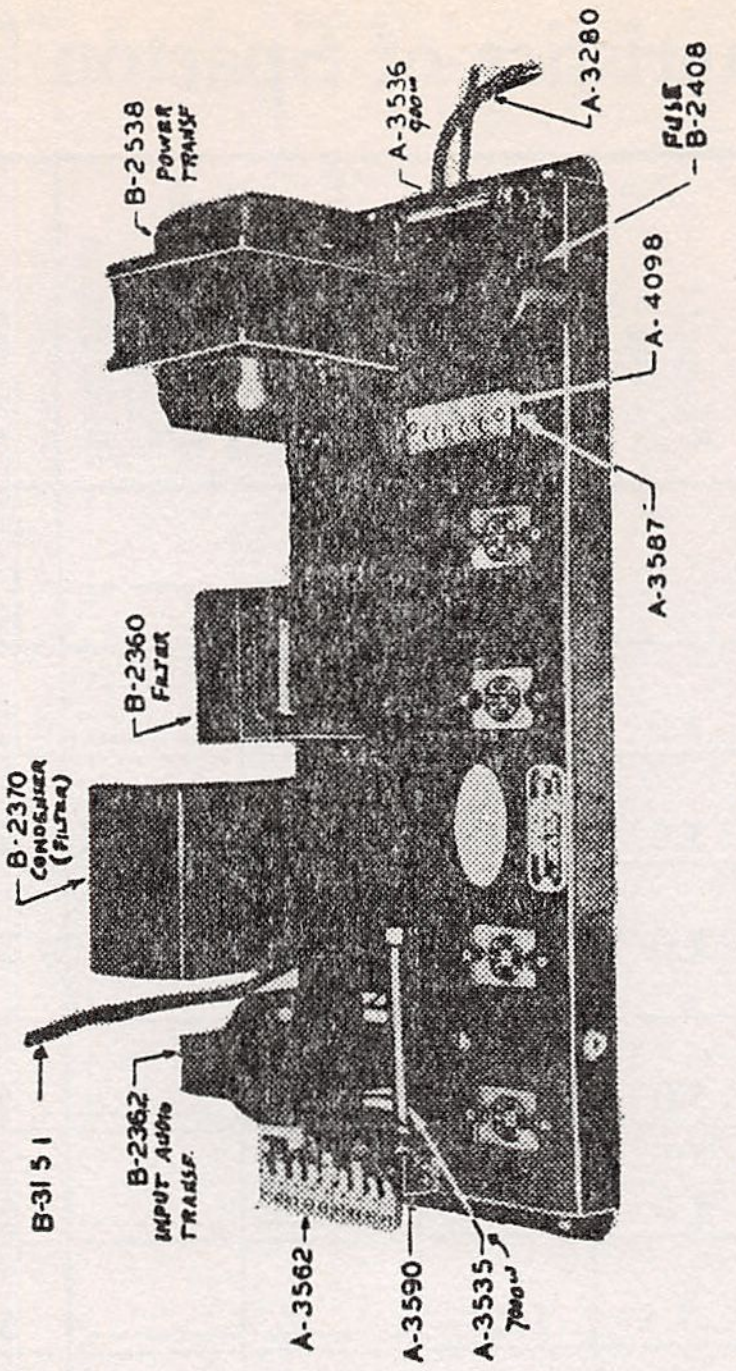
A-3280
A-3536 GROM.
B-2538 POWER TRANSF
FUSE B-2408
A-4098
A-3587
B-2360 FILTER
B-2370 CONDENSER (FILTER)
B-3151
B-2362 INPUT AUDIO TRANSF.
A-3562
A-3590
A-3535 700 W

Top View—Power Convertor—Models 103, 301-A, 578, 740 and 750 A. C.

Note: Models 103 and 578 use 302-121B cable instead of B-3151, and B-2320 Filter Condenser instead of B-2370. A-3562 Terminal Block, and A-3590 Terminal Block Brackets are not used

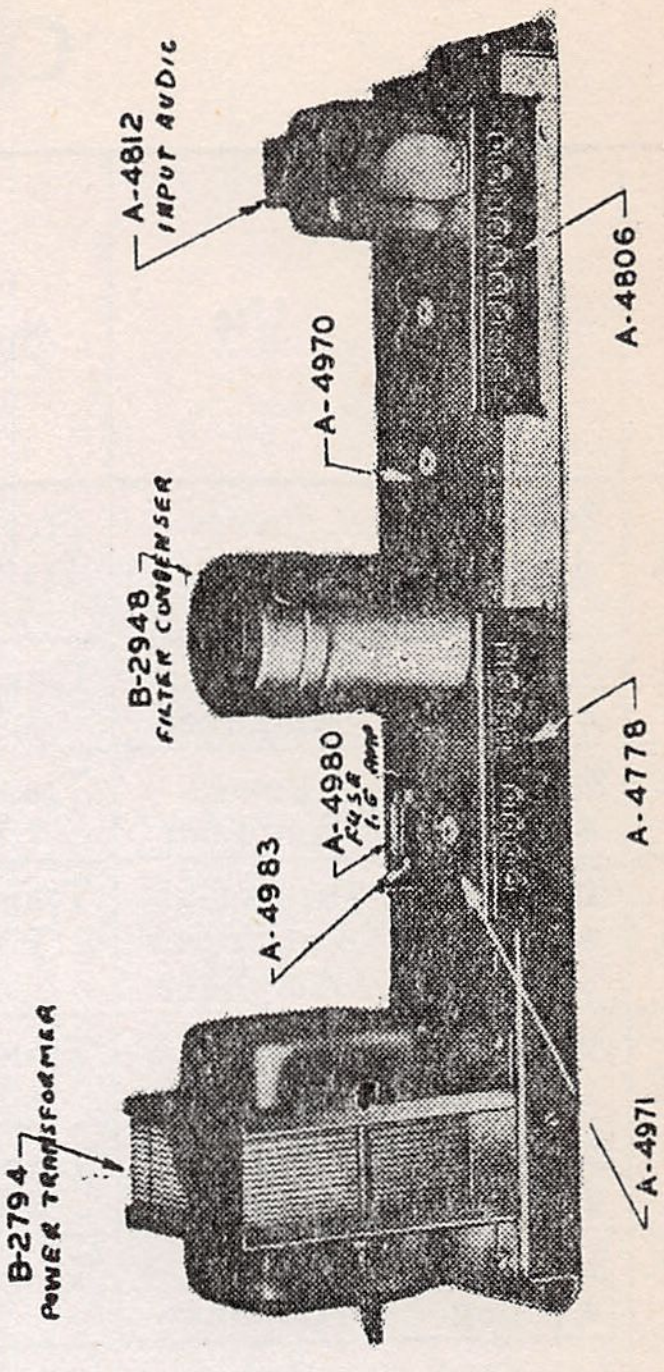
A-4812 INPUT AUDIO
A-4806
A-4970
B-2948 FILTER CONDENSER
A-4778
A-4980 FUSE 1.6 AMP
A-4983
B-2794 POWER TRANSFORMER
A-4971

Top View—Power Convertor Unit, Models 235, 600, 610, 620 and 737 A. C

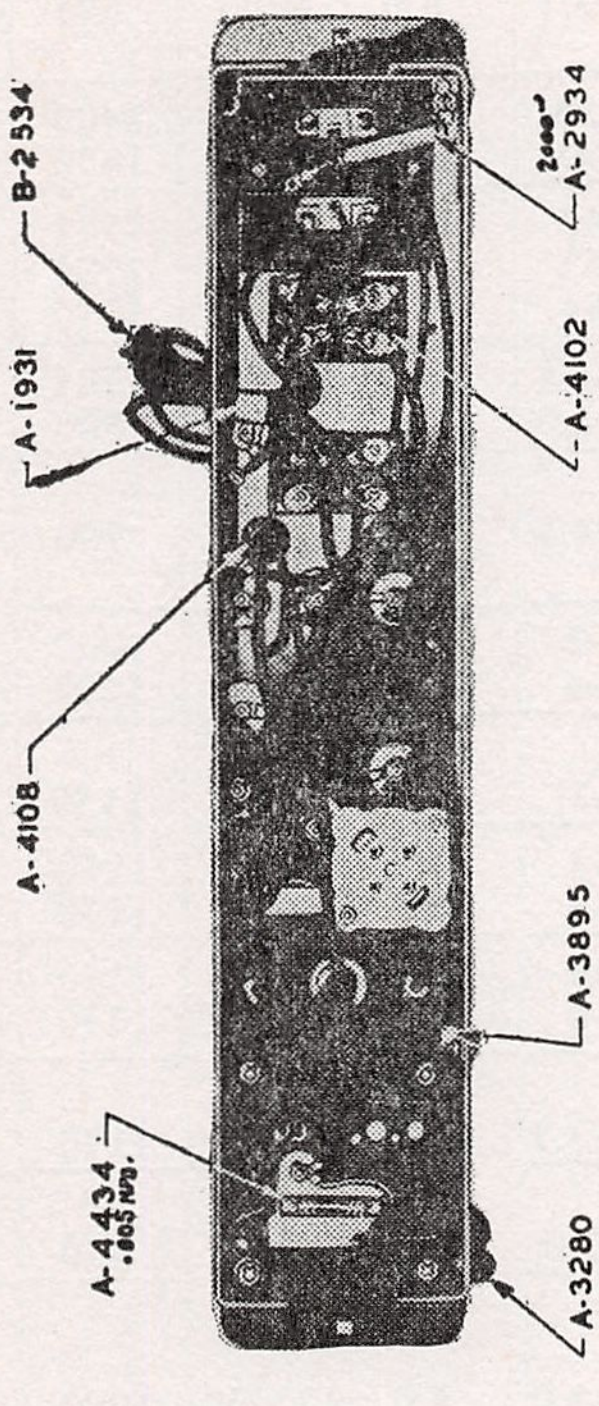
B-2534
A-1931
A-2934 2000 W
A-4102
A-4108
A-3895
A-4434 .005 MFD.
A-3280

Bottom View—Power Convertor, Models 235, 600, 610, 620, 737, 740 and 750 D. C.

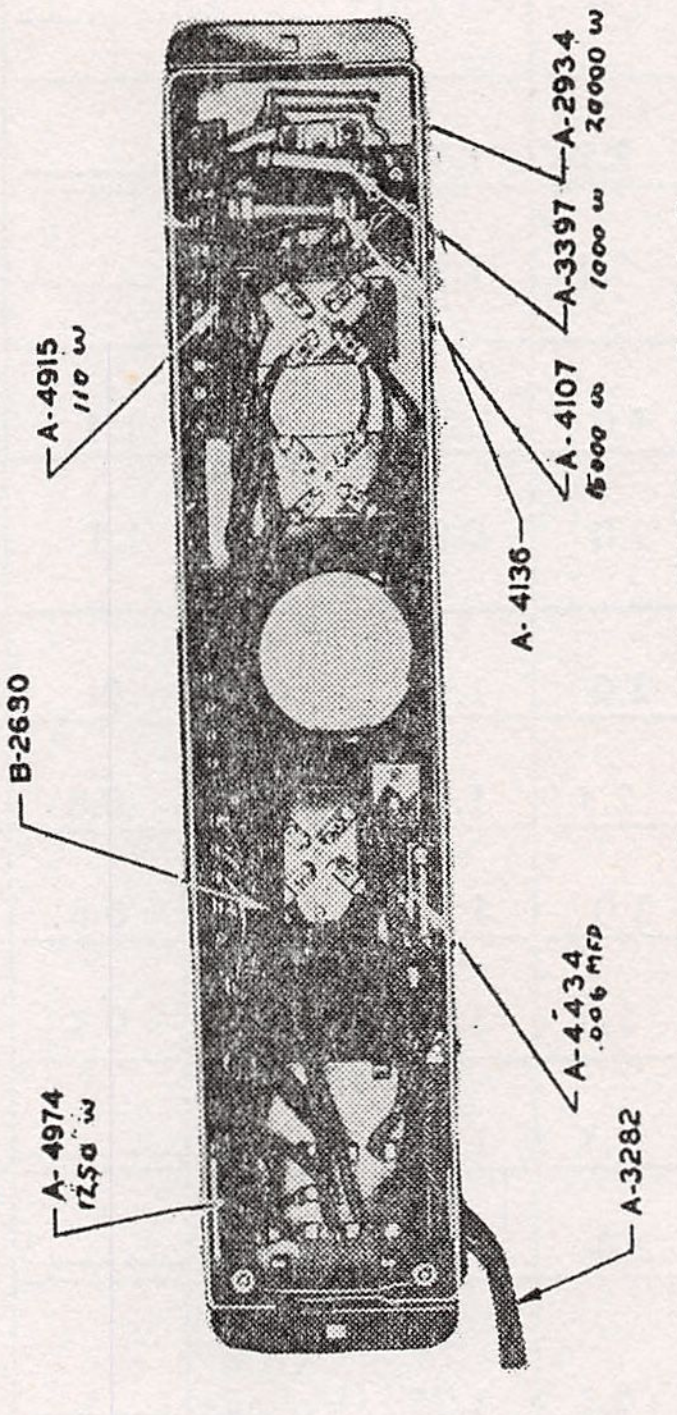
A-2934 20000 W
A-3397 1000 W
A-4915 110 W
A-4107 15000 W
A-4136
B-2630
A-4434 .006 MFD
A-4974 1250 W
A-3282

Bottom View—Power Convertor, Models 235, 600, 610 and 620 A. C.

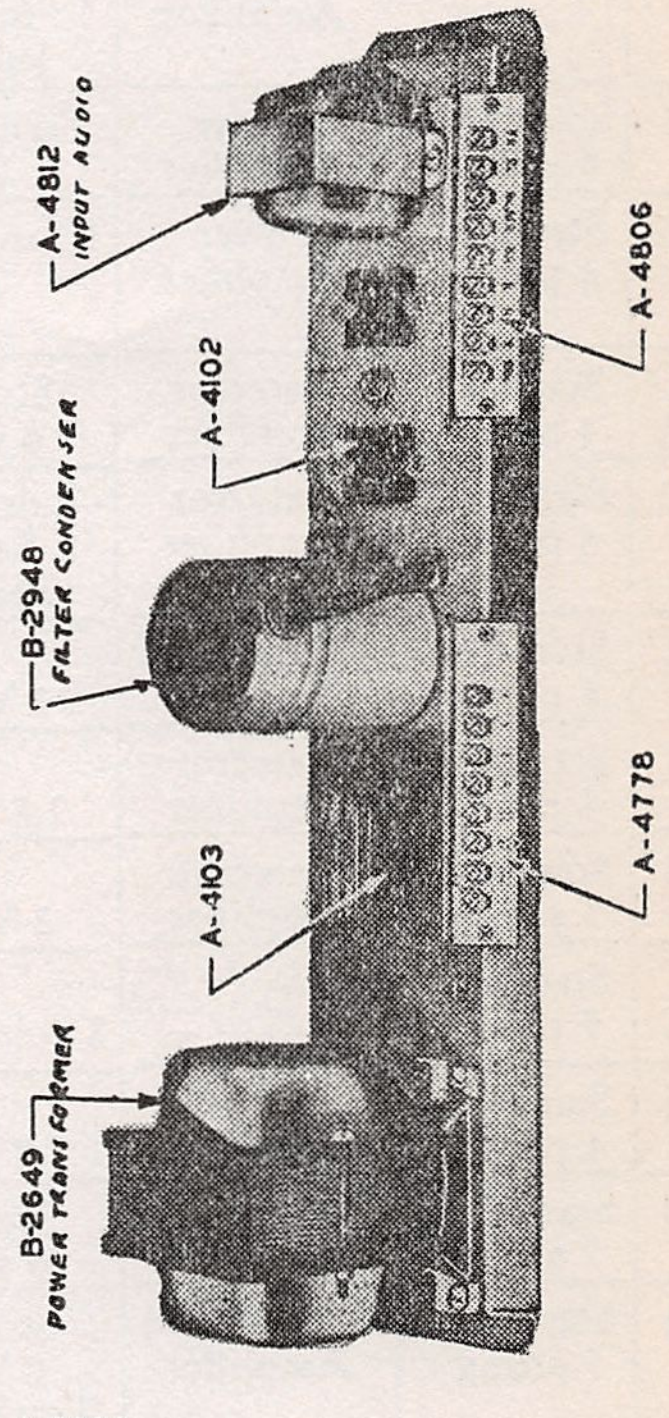
A-4812 INPUT AUDIO
A-4806
A-4102
B-2948 FILTER CONDENSER
A-4778
A-4103
B-2649 POWER TRANSFORMER

Top View—Power Converter, Models 589, 591, 593 and 931 A. C.

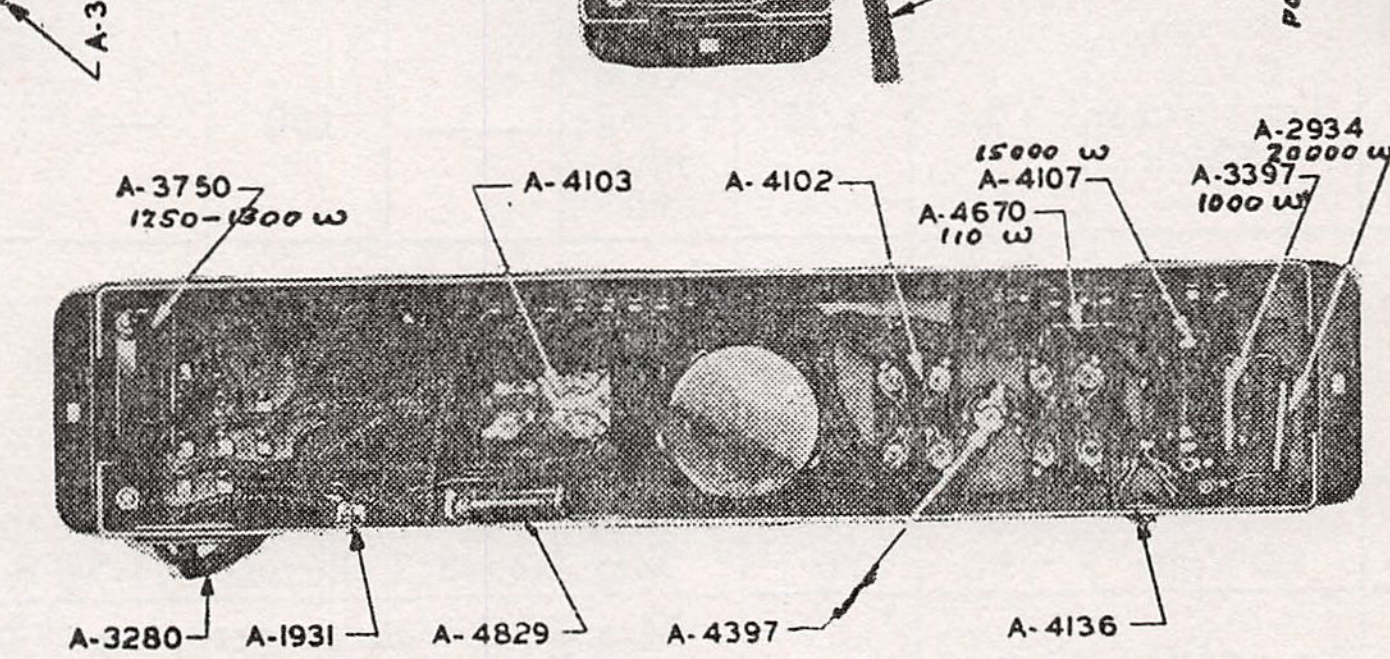
A-3750 1250-1300 W
A-4103
A-4102
15000 W A-4107
A-4670 110 W
A-2934 20000 W
A-3397 1000 W
A-3280
A-1931
A-4829
A-4397
A-4136

Bottom View—Power Convertor, Models 589, 591, 593 and 931 A. C.

Sparton Tube Data

SPARKS WITHINGTON CO.

Characteristics of Sparton Tubes

Type	Base	Use	"A" Supply	Filament Voltage	Filament Current Amperes	Detector Plate Voltage	Detector Plate Current Milli-Amps	Amplifier Plate Voltage	Grid Voltage	Amplifier Plate Current Milli-amps	Plate Impedance Ohms	Mutual Conductance Micromhos	Amplification Factor
C-112-A	Standard 4 prong	Power Amplifier	Stor. 6 volt Transformer 5 volts	5.0	0.25	-------	-------	135 157.5 180	—9.0 —10.5 —13.5	7.0 9.5 7.8	5000 4700 4700	1600 1700 1700	8.0
C-181	Side Pin 4 prong	Power Amplifier	Transformer 3 Volts	3.0	1.3	-------	-------	200	—40	16	2850	1050	3.0
C-182	Standard 4 prong	Power Amplifier	Transformer 5 Volts	5.0	0.9	-------	-------	200	—45	18	2000	1500	3.0
C-182-A	Standard 4 prong	Direct Current Power Amplifier	Transformer 5 Volts	5.0	0.8	-------	-------	200	—45	18	2000	1500	3.0
C-182-B	Standard 4 prong	Power Amplifier	Transformer 5 Volts	5.0	1.25	-------	-------	200	—29	18	3330	1500	5.0
C-183	Standard 4 prong	Power Amplifier	Transformer 5 Volts	5.0	1.25	-------	-------	200	—45	20	2000	1500	3.0
C-210	Standard 4 prong	Power Amplifier	Transformer 7.5	7.5	1.25	-------	-------	350	—27	20	5500	1450	8.0
C-231	Standard 4 prong	Power Amplifier	6 dry cells Series Parallel	2.0	0.150	-------	-------	135	—22.5	8.0	4000	875	3.5
C-245	Standard 4 prong	Power Amplifier	Transformer 2.5	2.5	1.5	-------	-------	180 250	—33 —50	26 32	1460 2250	2400 1450	3.5
C-586	Standard 4 prong	Power Amplifier	Transformer 7.5	7.5	1.25	-------	-------	250 350 450	—45 —63 —84	28 45 55	2150 2000 1950	1575 1700 1750	3.4
C-201-A	Standard 4 prong	Detector Amplifier	Storage 6 volts	5.0	.25	45	1.5	90 135	—4.5 —9.0	2.5 3.0	11000 10000	725 800	8.0
C-230	Standard 4 prong	Detector Amplifier	6 dry cells Series Parallel	2.0	0.060	45	1.5	90	—4.5	2.0	12500	700	8.8
C-401	Side Pin 4 prong	Detector Amplifier	3 Volts	3.0	1.3	45	2	90 120	—3 —4	5.0 6.0	9500 7000	1000 1200	9.5 8.7
C-427	Standard 5 prong	Detector Amplifier	2.5 Volts	2.5	1.75	180	0.8	90	—3	5.0	10800 9300	1150	12.5
C-484	Standard 5 prong	Detector Amplifier	3 Volts	3.0	1.3	135	0.8	90 120	—3 —4	5.0 6.0	10800 9300	1150 1350	12.5
C-484-A	Standard 5 prong	Direct Current Detector Amplifier	3 volts D. C.	3.0	1.6	100	0.5	90 120	—3 —4	5.0 6.0	9300	1150 1350	12.5
C-226	Standard 4 prong	Amplifier	1.5 Volts	1.5	1.05	-------	-------	180	—13.5	6.0	7000	1170	8.2
C-686	Standard 5 prong	Amplifier	Storage 6 volts	3.0	.25	-------	-------	90	—3.0	3.0	28000	450	12.5
C-224	Standard 5 prong	Screen Grid Amplifier	Storage 6 Volt Transformer 2.5 Volt	2.5	1.75	Screen Grid Voltage Plus 90	-------	180	—3.0	4.0	400000	1000	400
C-232	Standard 4 prong	Screen Grid Amplifier	6 dry cells Series Parallel	2.0	0.060	Screen Grid Voltage Plus 67.5	-------	135	—3.0	1.5	800000	550	440
C-280	Standard 4 prong	Full Wave Rectifier	5.0 Volts	5.0	2.0	Max. A. C. Voltage per plate 350 Volts R. M. S. Max. Rectified Current 125 M. A.							
C-281	Standard 4 prong	Half Wave Rectifier	7.5 Volts	7.5	1.25	Max. A. C. Voltage per plate 700 R. M. S. Max. Rectified Current 85 M. A.							

STEINITE RADIO CO.

MODEL 203,600,605,
630,635,642,643
(Chassis 22)

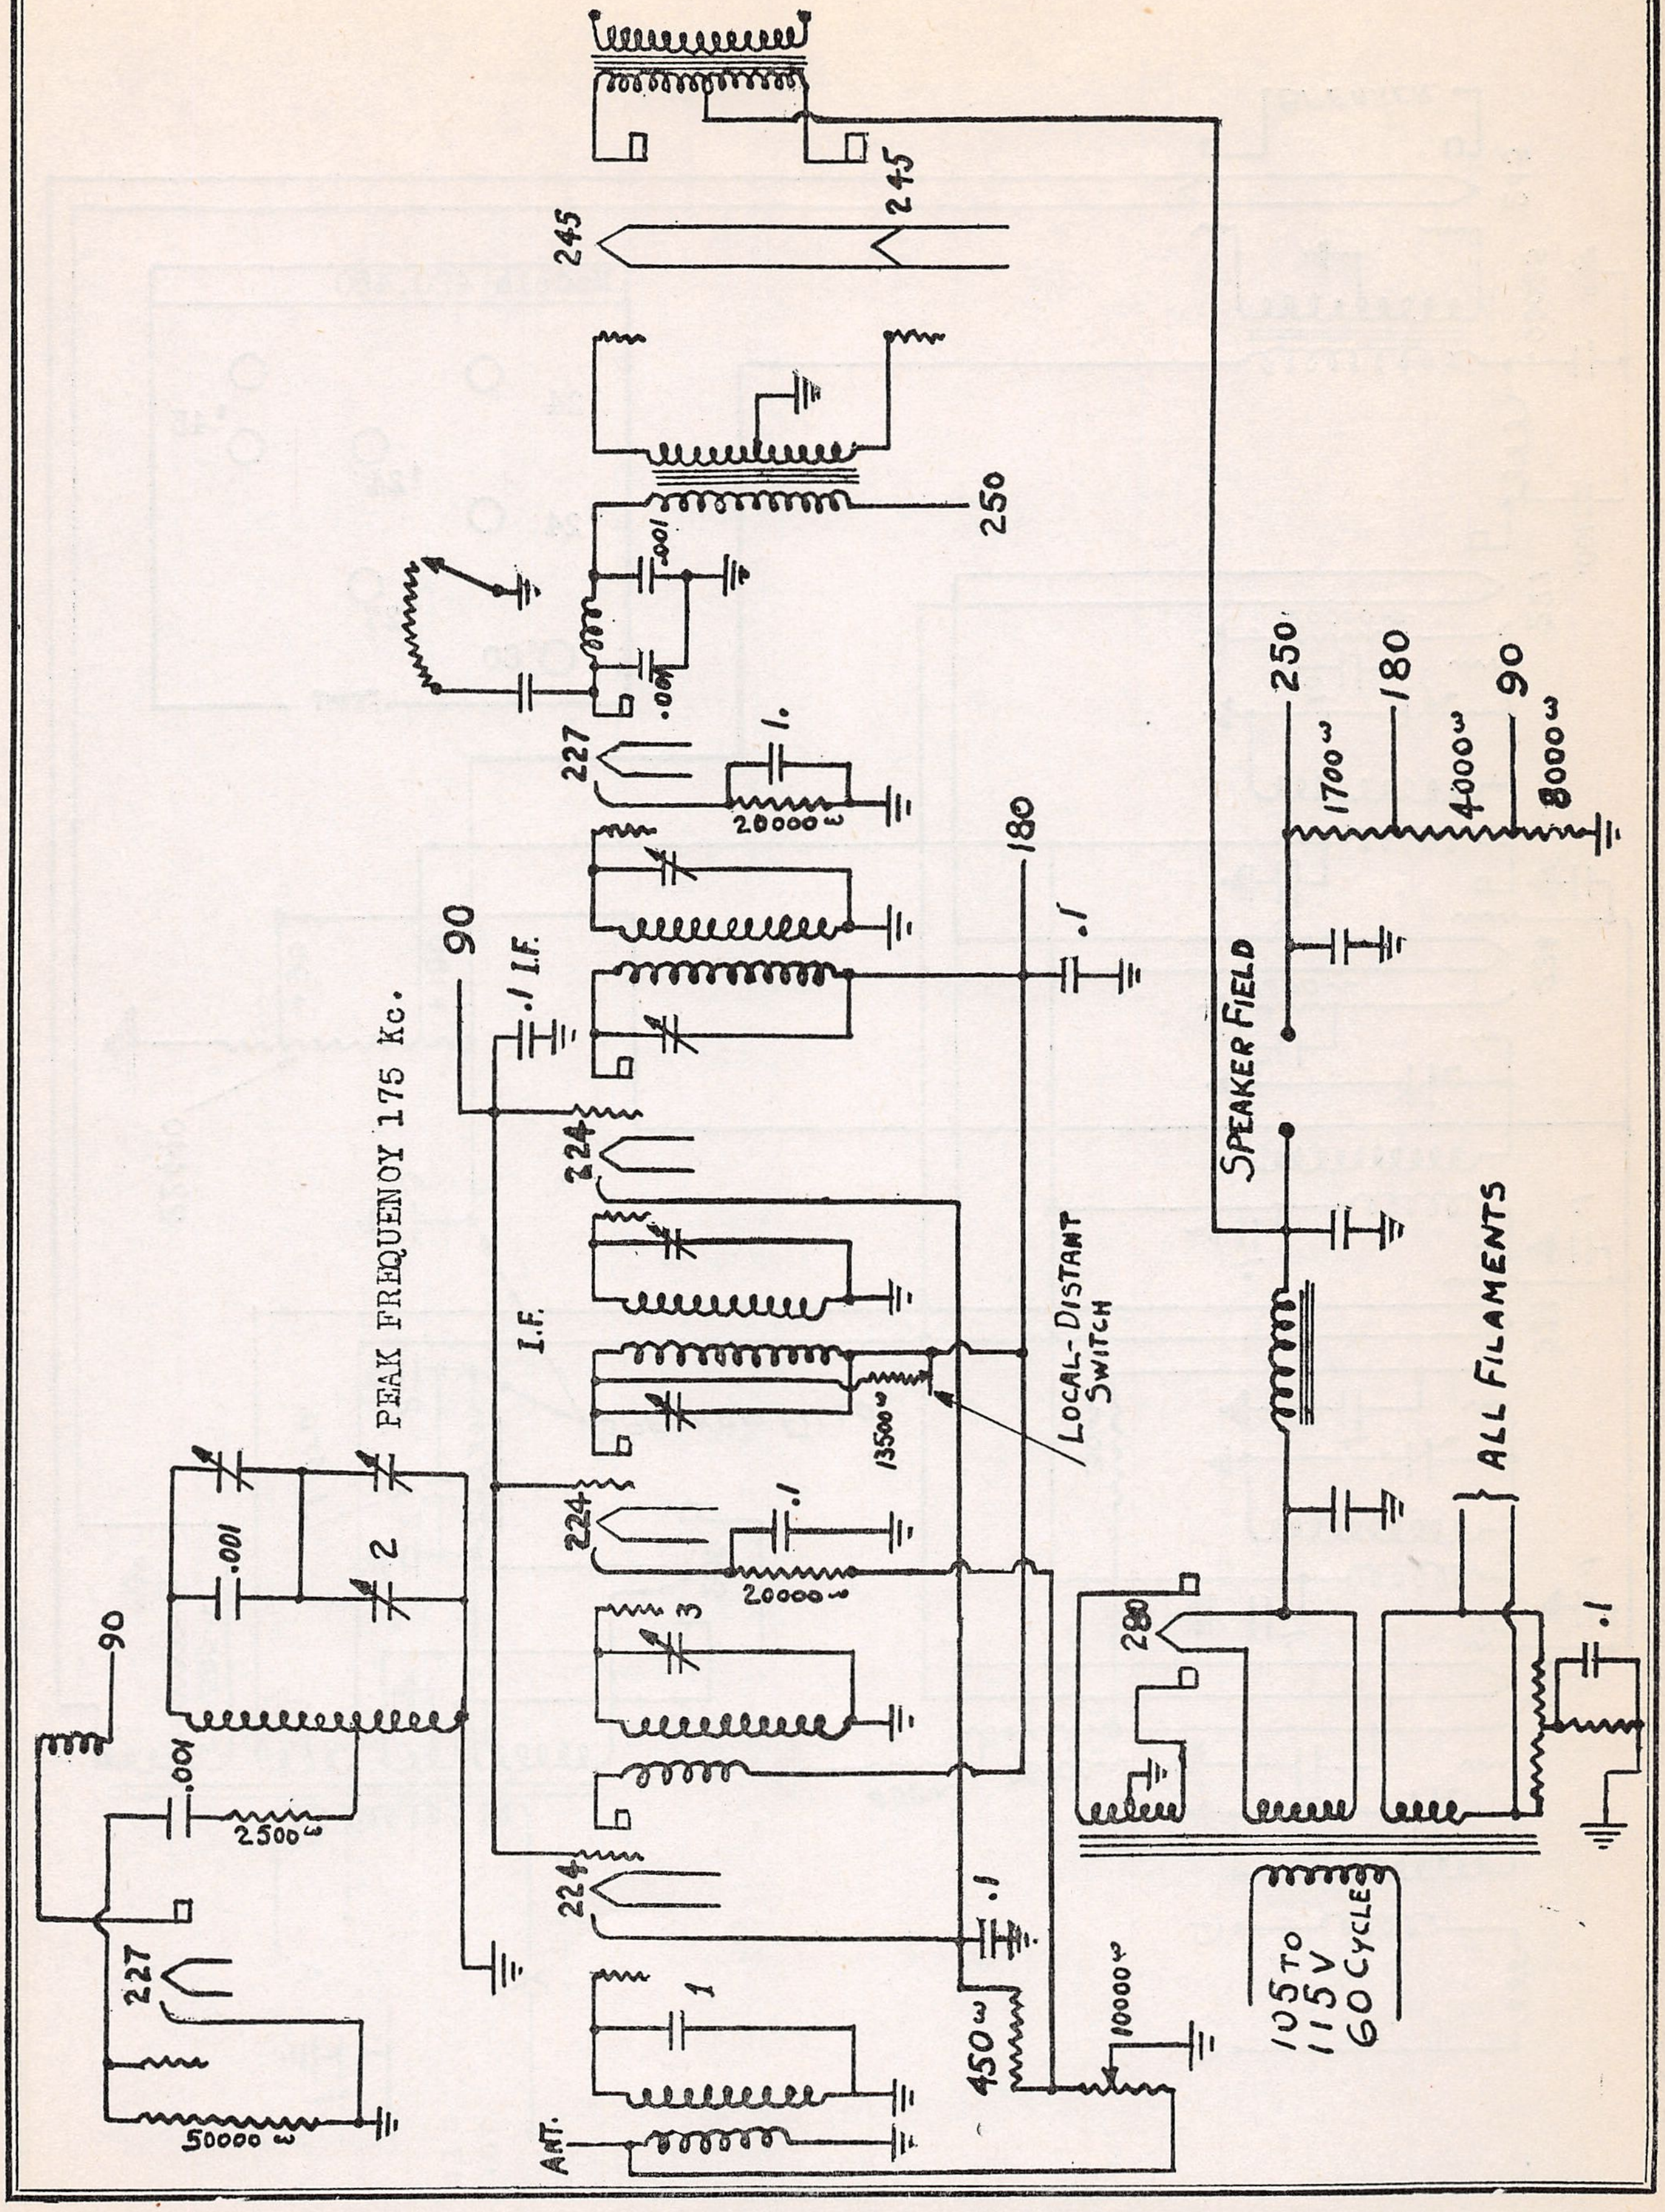
245
245
250
.001
.001
227
1.
20000ω
180
.1
90
.1 I.F.
224
I.F.
PEAK FREQUENCY 175 Kc.
13500ω
LOCAL-DISTANT SWITCH
.001
2
3
.1
20000ω
224
90
.001
2500ω
227
50000ω
224
.1
1
450ω
10000ω
ANT.
105 TO 115 V 60 CYCLE
280
.1
ALL FILAMENTS
SPEAKER FIELD
250
180
90
1700ω
4000ω
8000ω

MODEL 420,450
(Chassis 17)
Schematic

STEINITE RADIO CO.

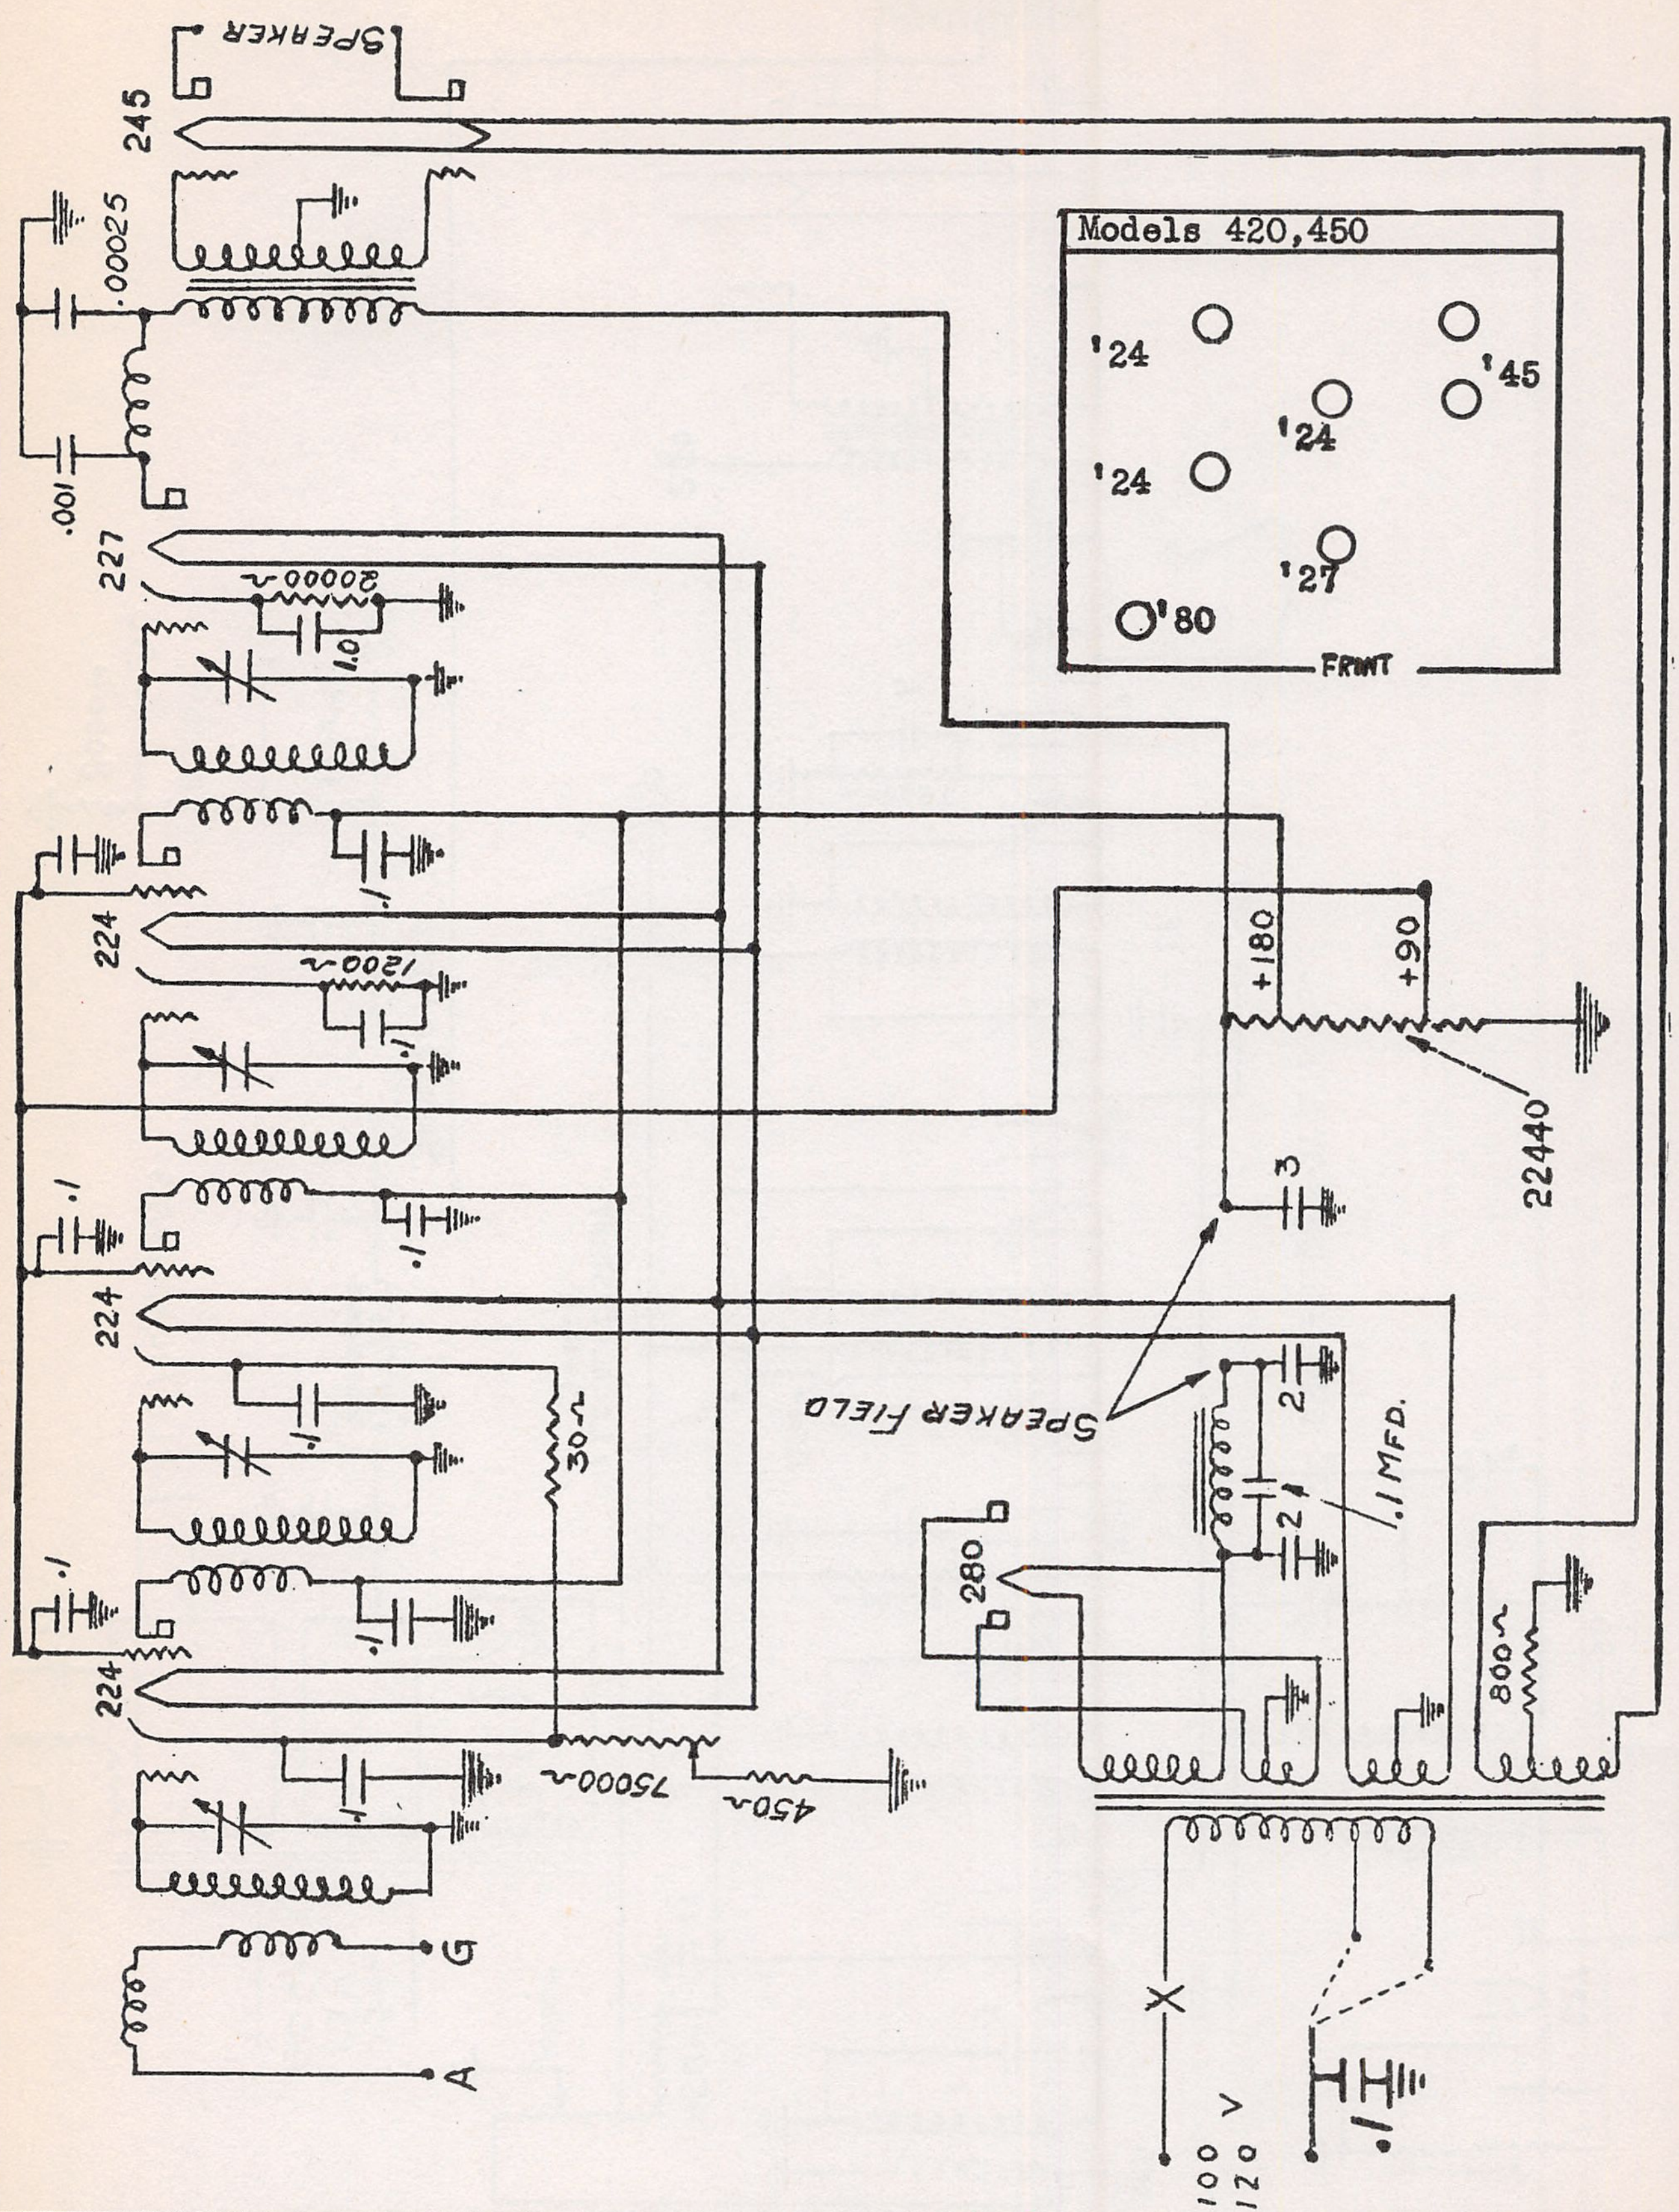
SPEAKER
245
.00025
.001
227
20000Ω
1.0
224
.1
1200Ω
.1
224
.1
30Ω
.1
224
.1
75000Ω
450Ω
G
A
Models 420,450
'24
'24
'24
'45
'27
'80
FRONT
+180
+90
22440
3
SPEAKER FIELD
2
2
.1 MFD.
280
800Ω
X
100
120
V
.1

STEINITE RADIO CO.

MODEL 420,450
(Chassis 15)
Schematic

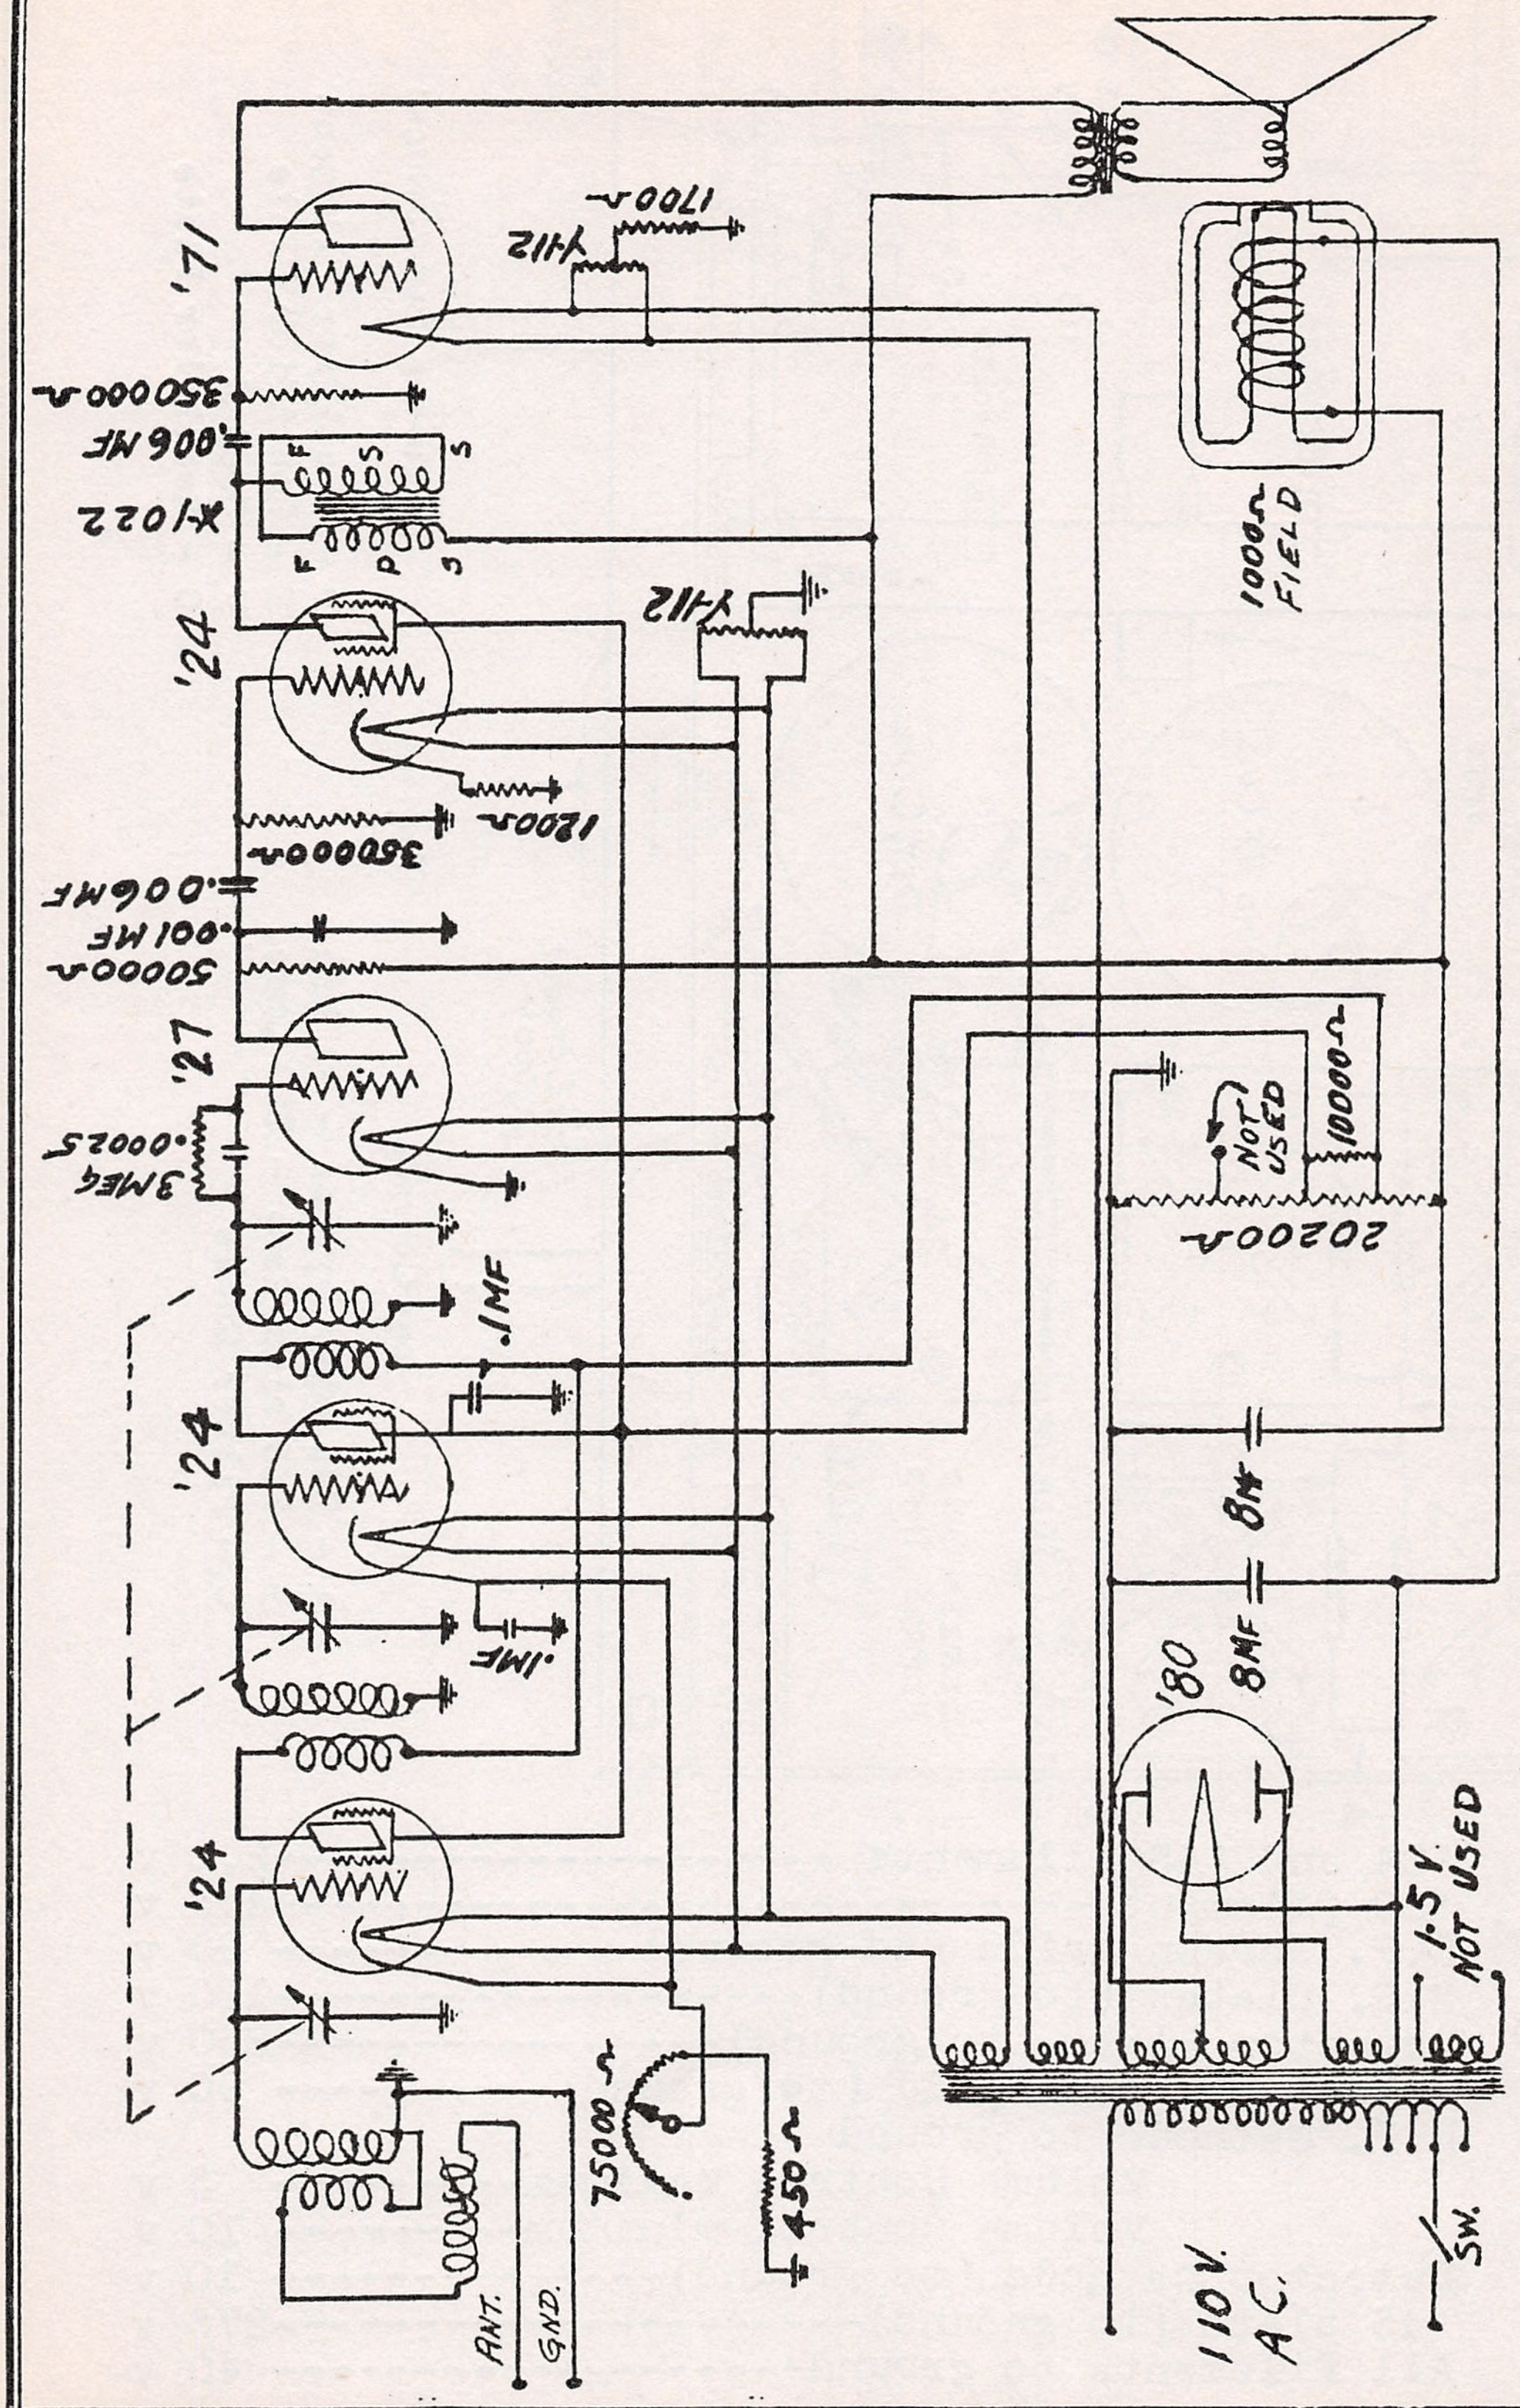
'71
1700Ω
Y-112
350000Ω
.006MF
X-1022
F S S
F P S
'24
Y-112
1200Ω
350000Ω
.006MF
.001MF
50000Ω
'27
.00025
3MEG
.1MF
'24
.1MF
'24
75000Ω
450Ω
ANT.
GND.
1000Ω FIELD
10000Ω
NOT USED
20200Ω
8MF
8MF
'80
1.5V. NOT USED
110V. AC.
SW.

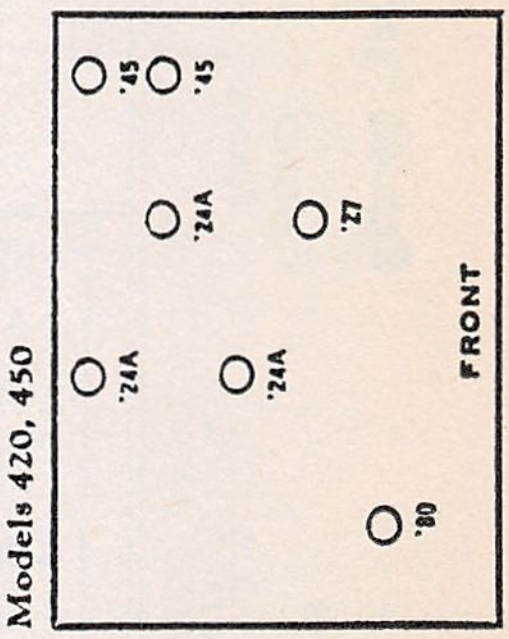
'45
'45
'24A
'27
'24A
'24A
'80
FRONT

Models 420, 450

MODEL 421,425
(Chassis 21)
Voltage,Chassis

STEINITE RADIO CO.

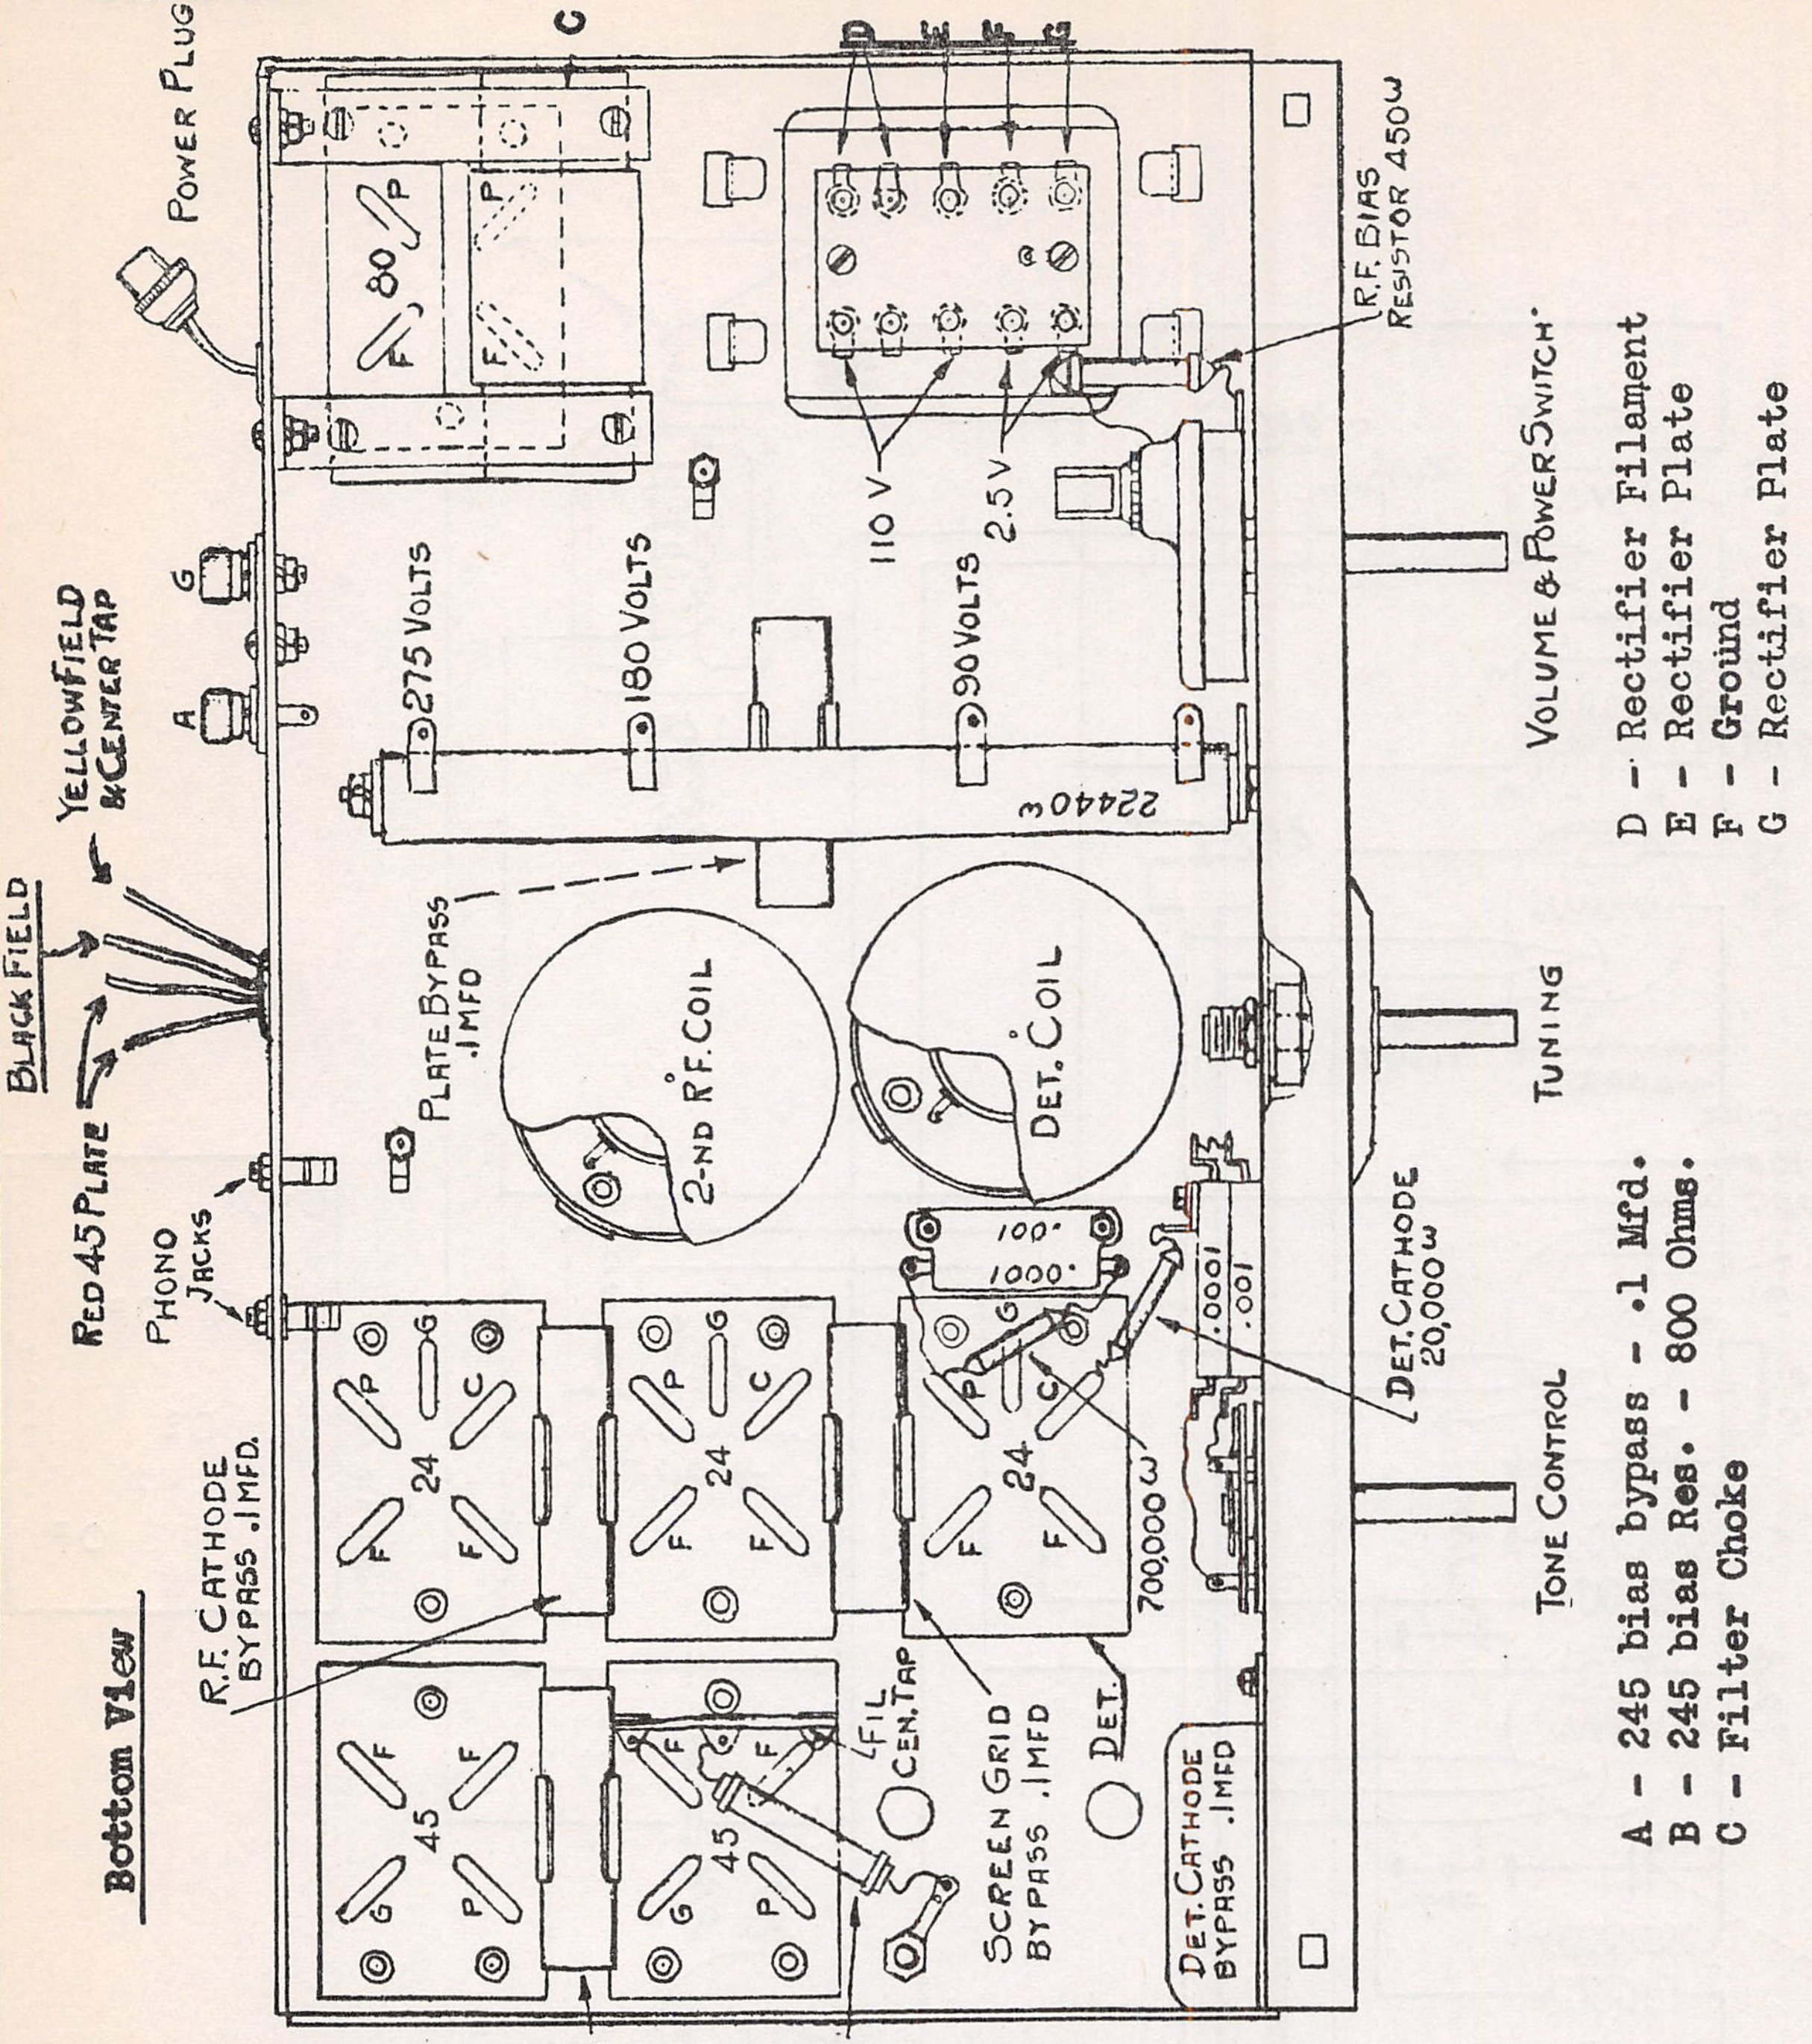
Power Plug
C
D
E
F
G
80
P
F
R.F. Bias Resistor 450ω
110 V
2.5 V
Volume & Power Switch
Yellow Field & Center Tap
G
A
275 Volts
180 Volts
90 Volts
22400ω
Black Field
Red 45 Plate
Phono Jacks
Plate Bypass .1 MFD
2-nd R.F. Coil
Det. Coil
Tuning
100'
1000'
.0001
.001
Det. Cathode 20,000ω
Tone Control
24
700,000ω
R.F. Cathode Bypass .1 MFD
Bottom View
45
Fil Cen. Tap
Screen Grid Bypass .1 MFD
Det.
Det. Cathode Bypass .1 MFD
A
B

D - Rectifier Filament
E - Rectifier Plate
F - Ground
G - Rectifier Plate

A - 245 bias bypass - .1 Mfd.
B - 245 bias Res. - 800 Ohms.
C - Filter Choke

Readings obtained with Line Volt. = 110 Vol. Cont. Max.

'24 and '45 filaments ---------------------2.2 v
'80 filament -----------------------------4.5 v
R.F. screen grids (to ground)------------ 90 v
R.F. plates (to ground)------------------180 v
Detector Plate (to ground)---------------250 v
Detector screen grid (to ground)--------- 90 v
R.F. Cathode to ground
Volume Control Maximum--------- 3 v
Volume Control minimum--------- 10 v
Detector Cathode (to ground)------------ 10 v
'45 plate (to ground)--------------------275 v
All filaments to ground----------------- 40 v

STEINITE RADIO CO.

MODEL 421,425
(Chassis 21)
Schematic

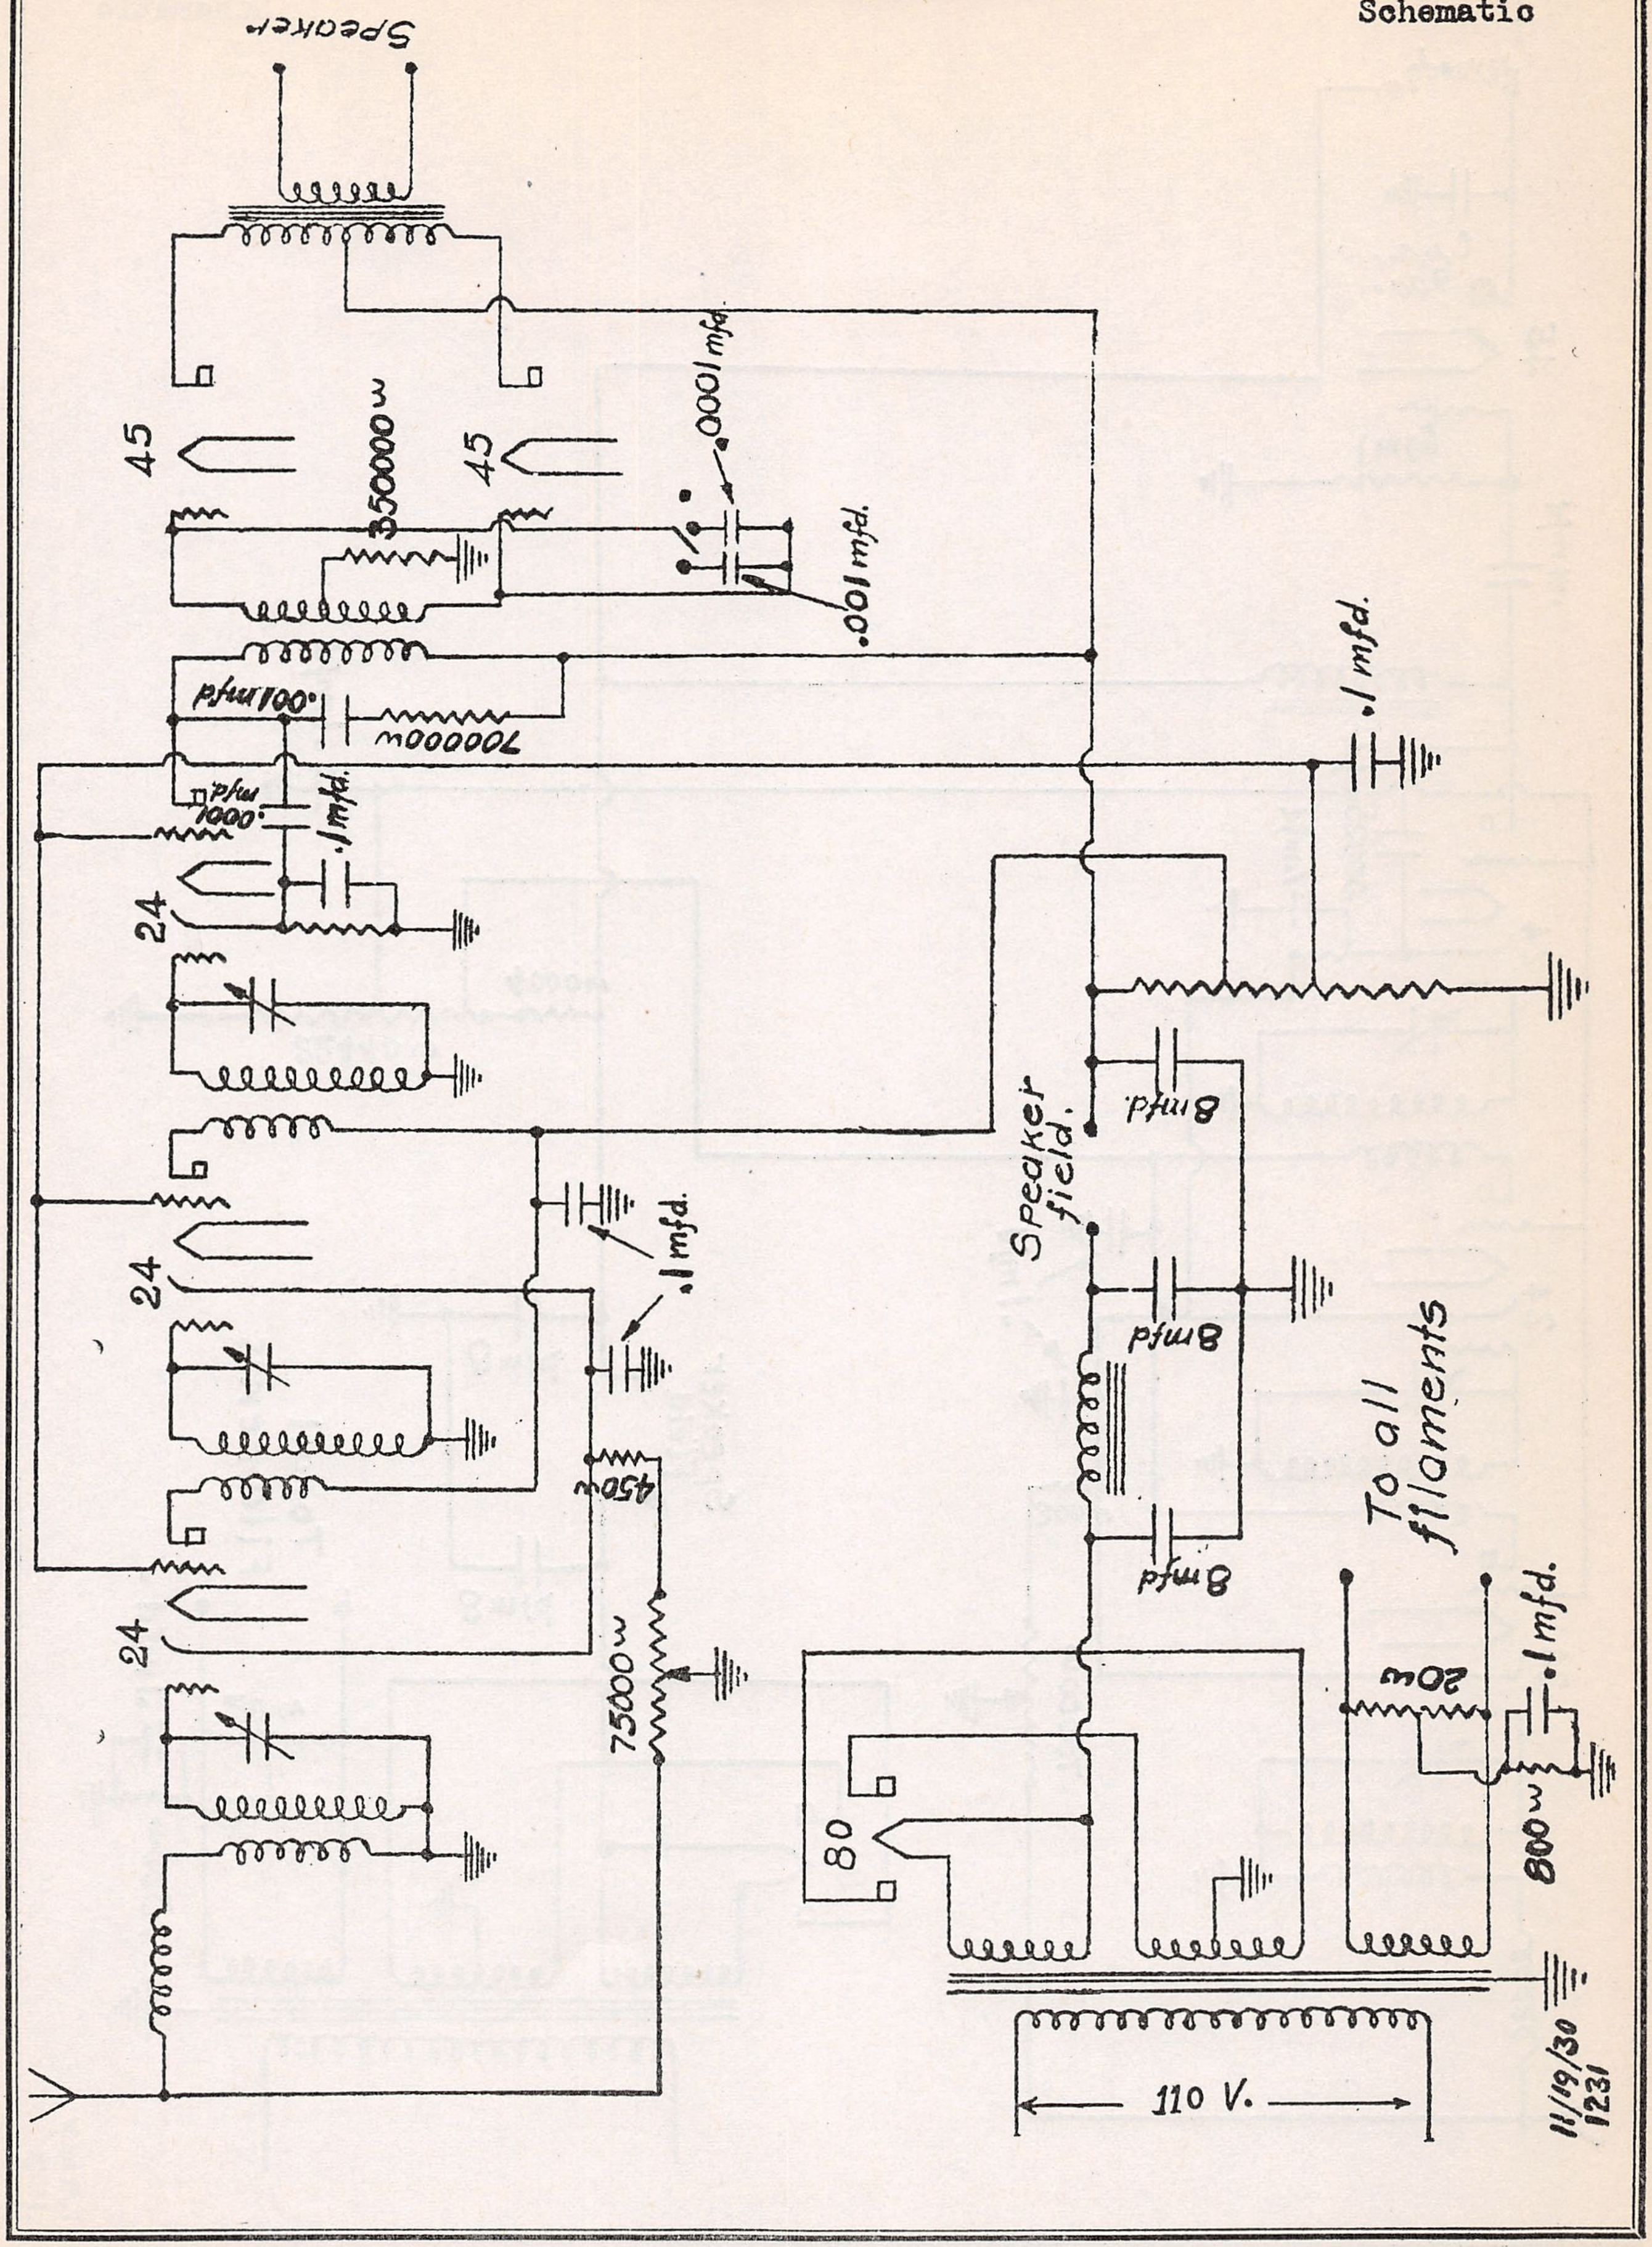
Speaker
45
350000w
45
.0001 mfd.
.001 mfd.
.001 mfd.
700000w
.0001 mfd.
.1 mfd.
.1 mfd.
24
Speaker field.
8 mfd.
.1 mfd.
24
.1 mfd.
8 mfd.
450w
To all filaments
8 mfd.
24
75000w
20w
.1 mfd.
80
800w
110 V.
11/19/30
1231

STEINITE RADIO CO.

MODEL 423
(Chassis 23)
Schematic

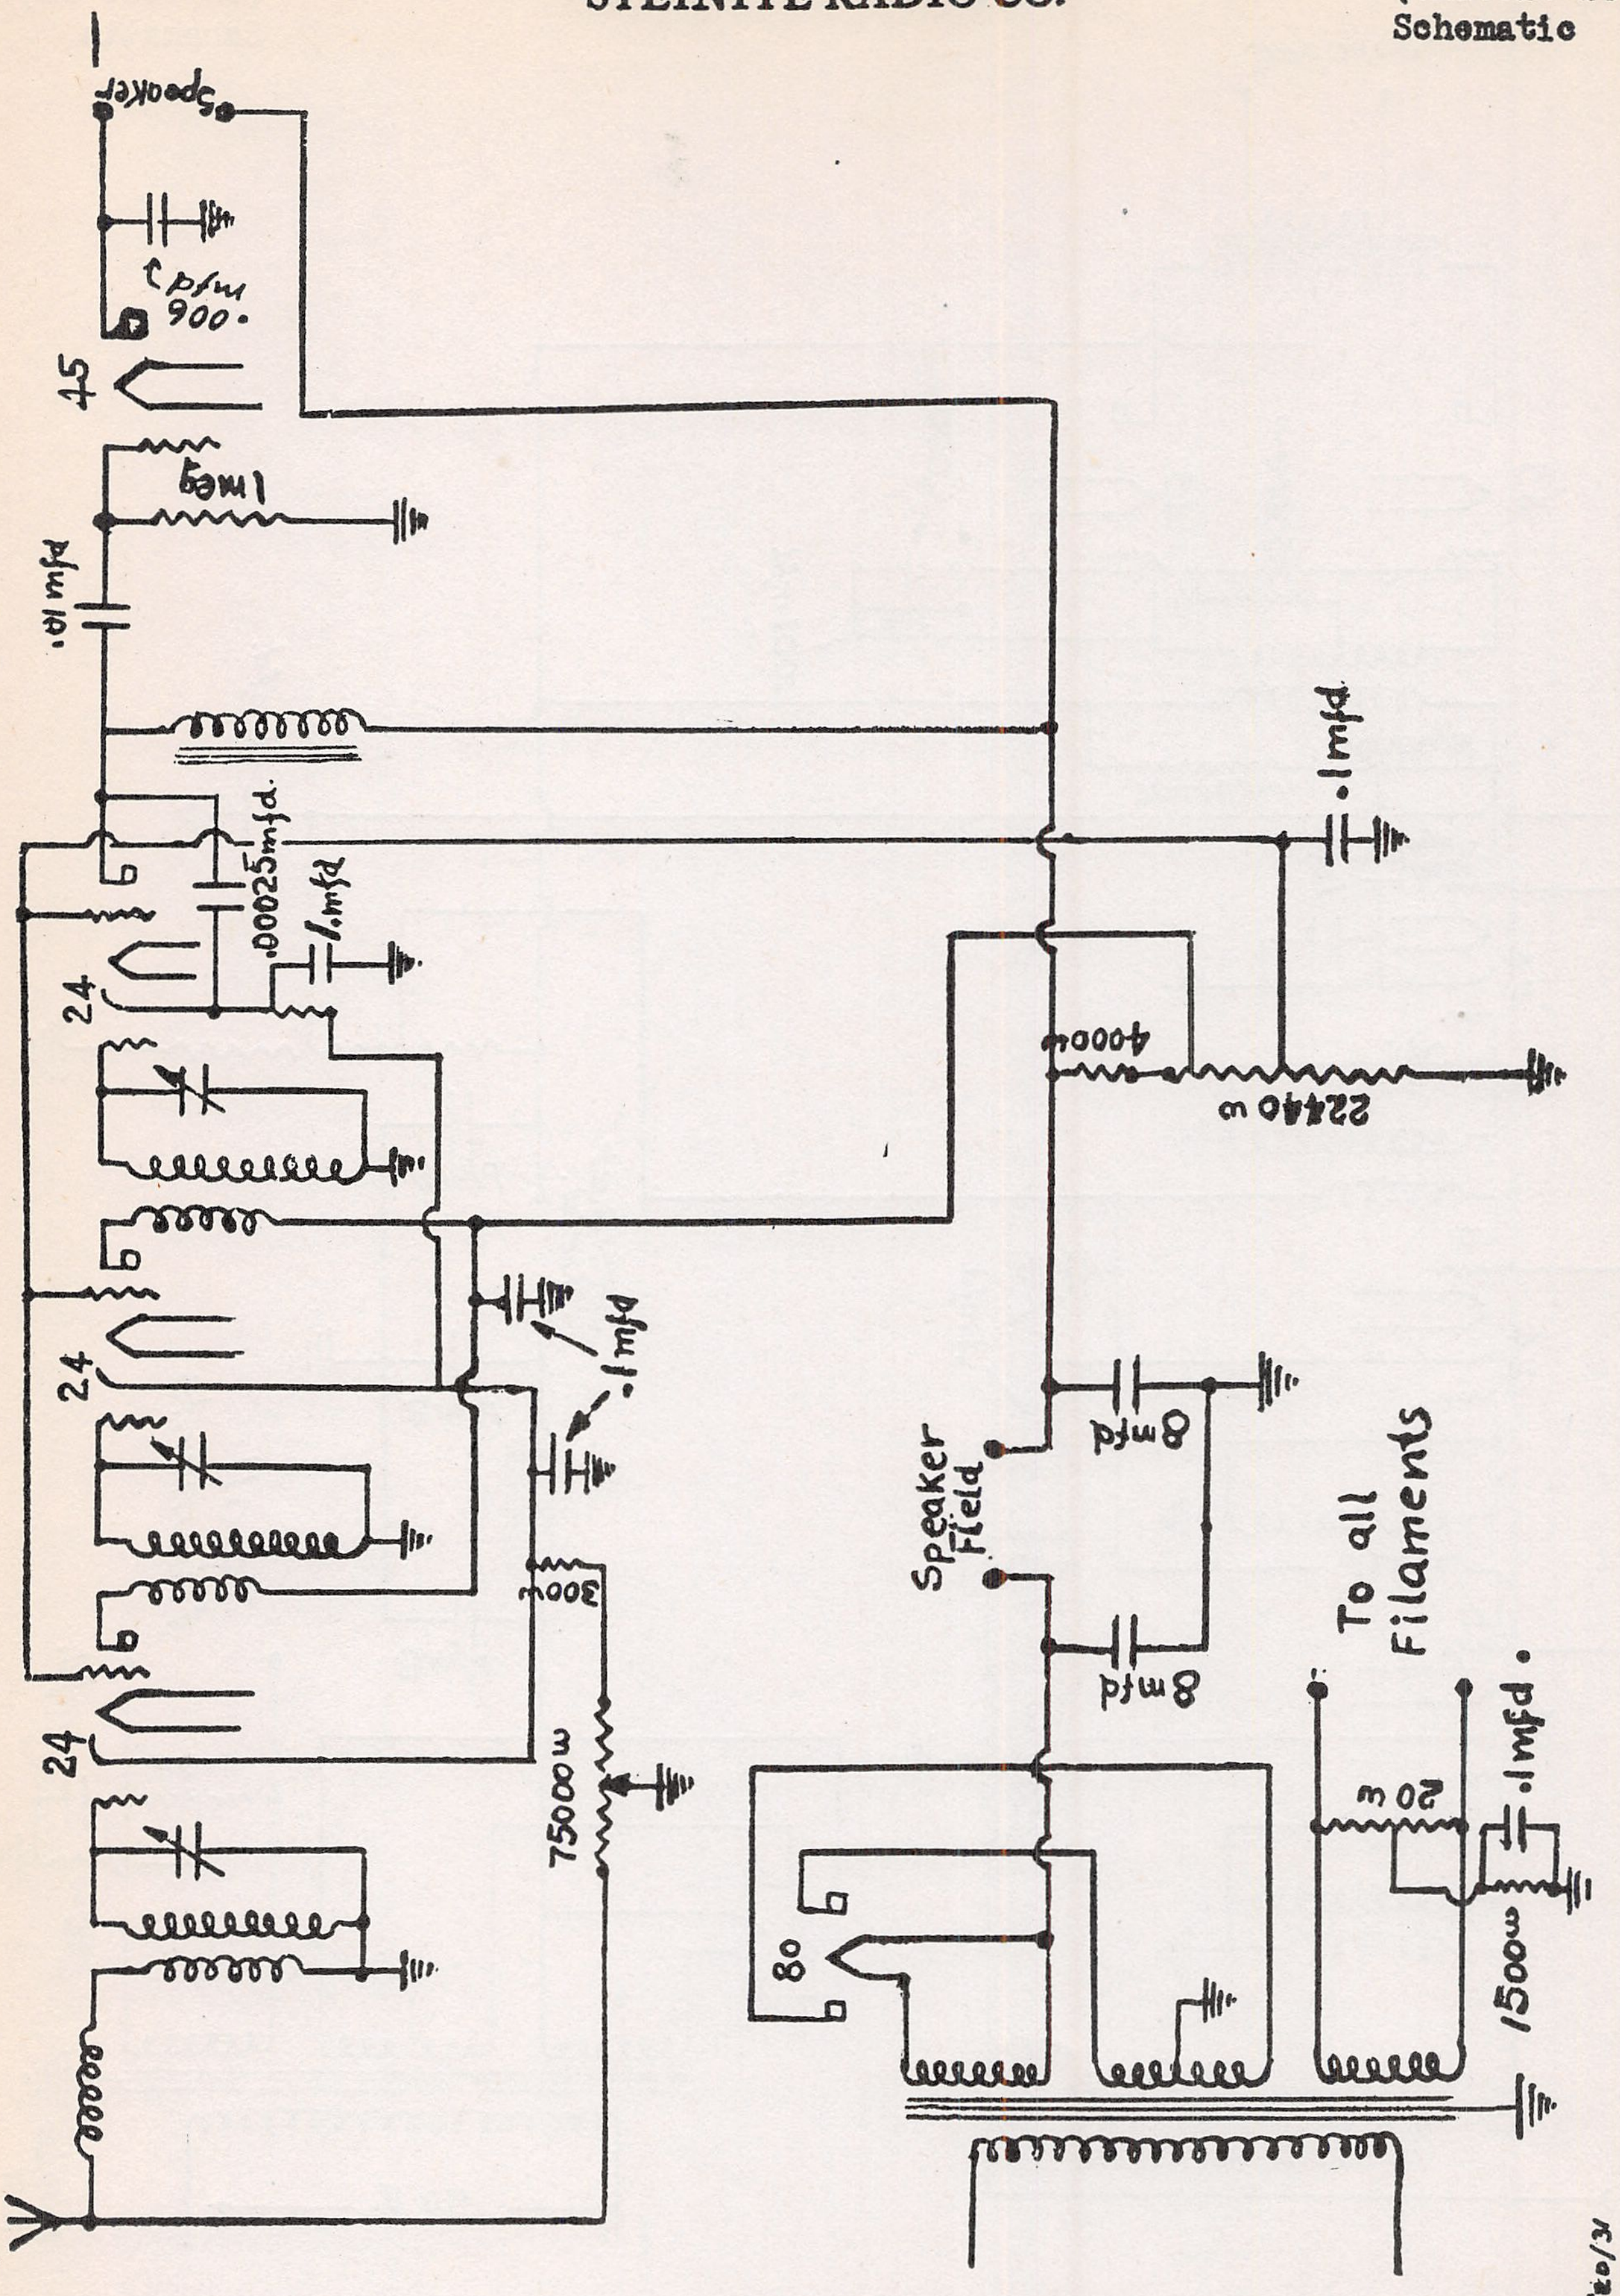
Speaker
.006 mfd
45
1meg
.01mfd
.00025mfd.
.1mfd
24
4000ω
22440ω
.1mfd
24
.1mfd
8mfd
Speaker Field
8mfd
To all Filaments
300ω
75000ω
24
20ω
.1mfd
1500ω
80

2/20/31
1273

STEINITE RADIO CO.

MODELS 700,705
706,725,642-B
(Chassis 26)
Schematic

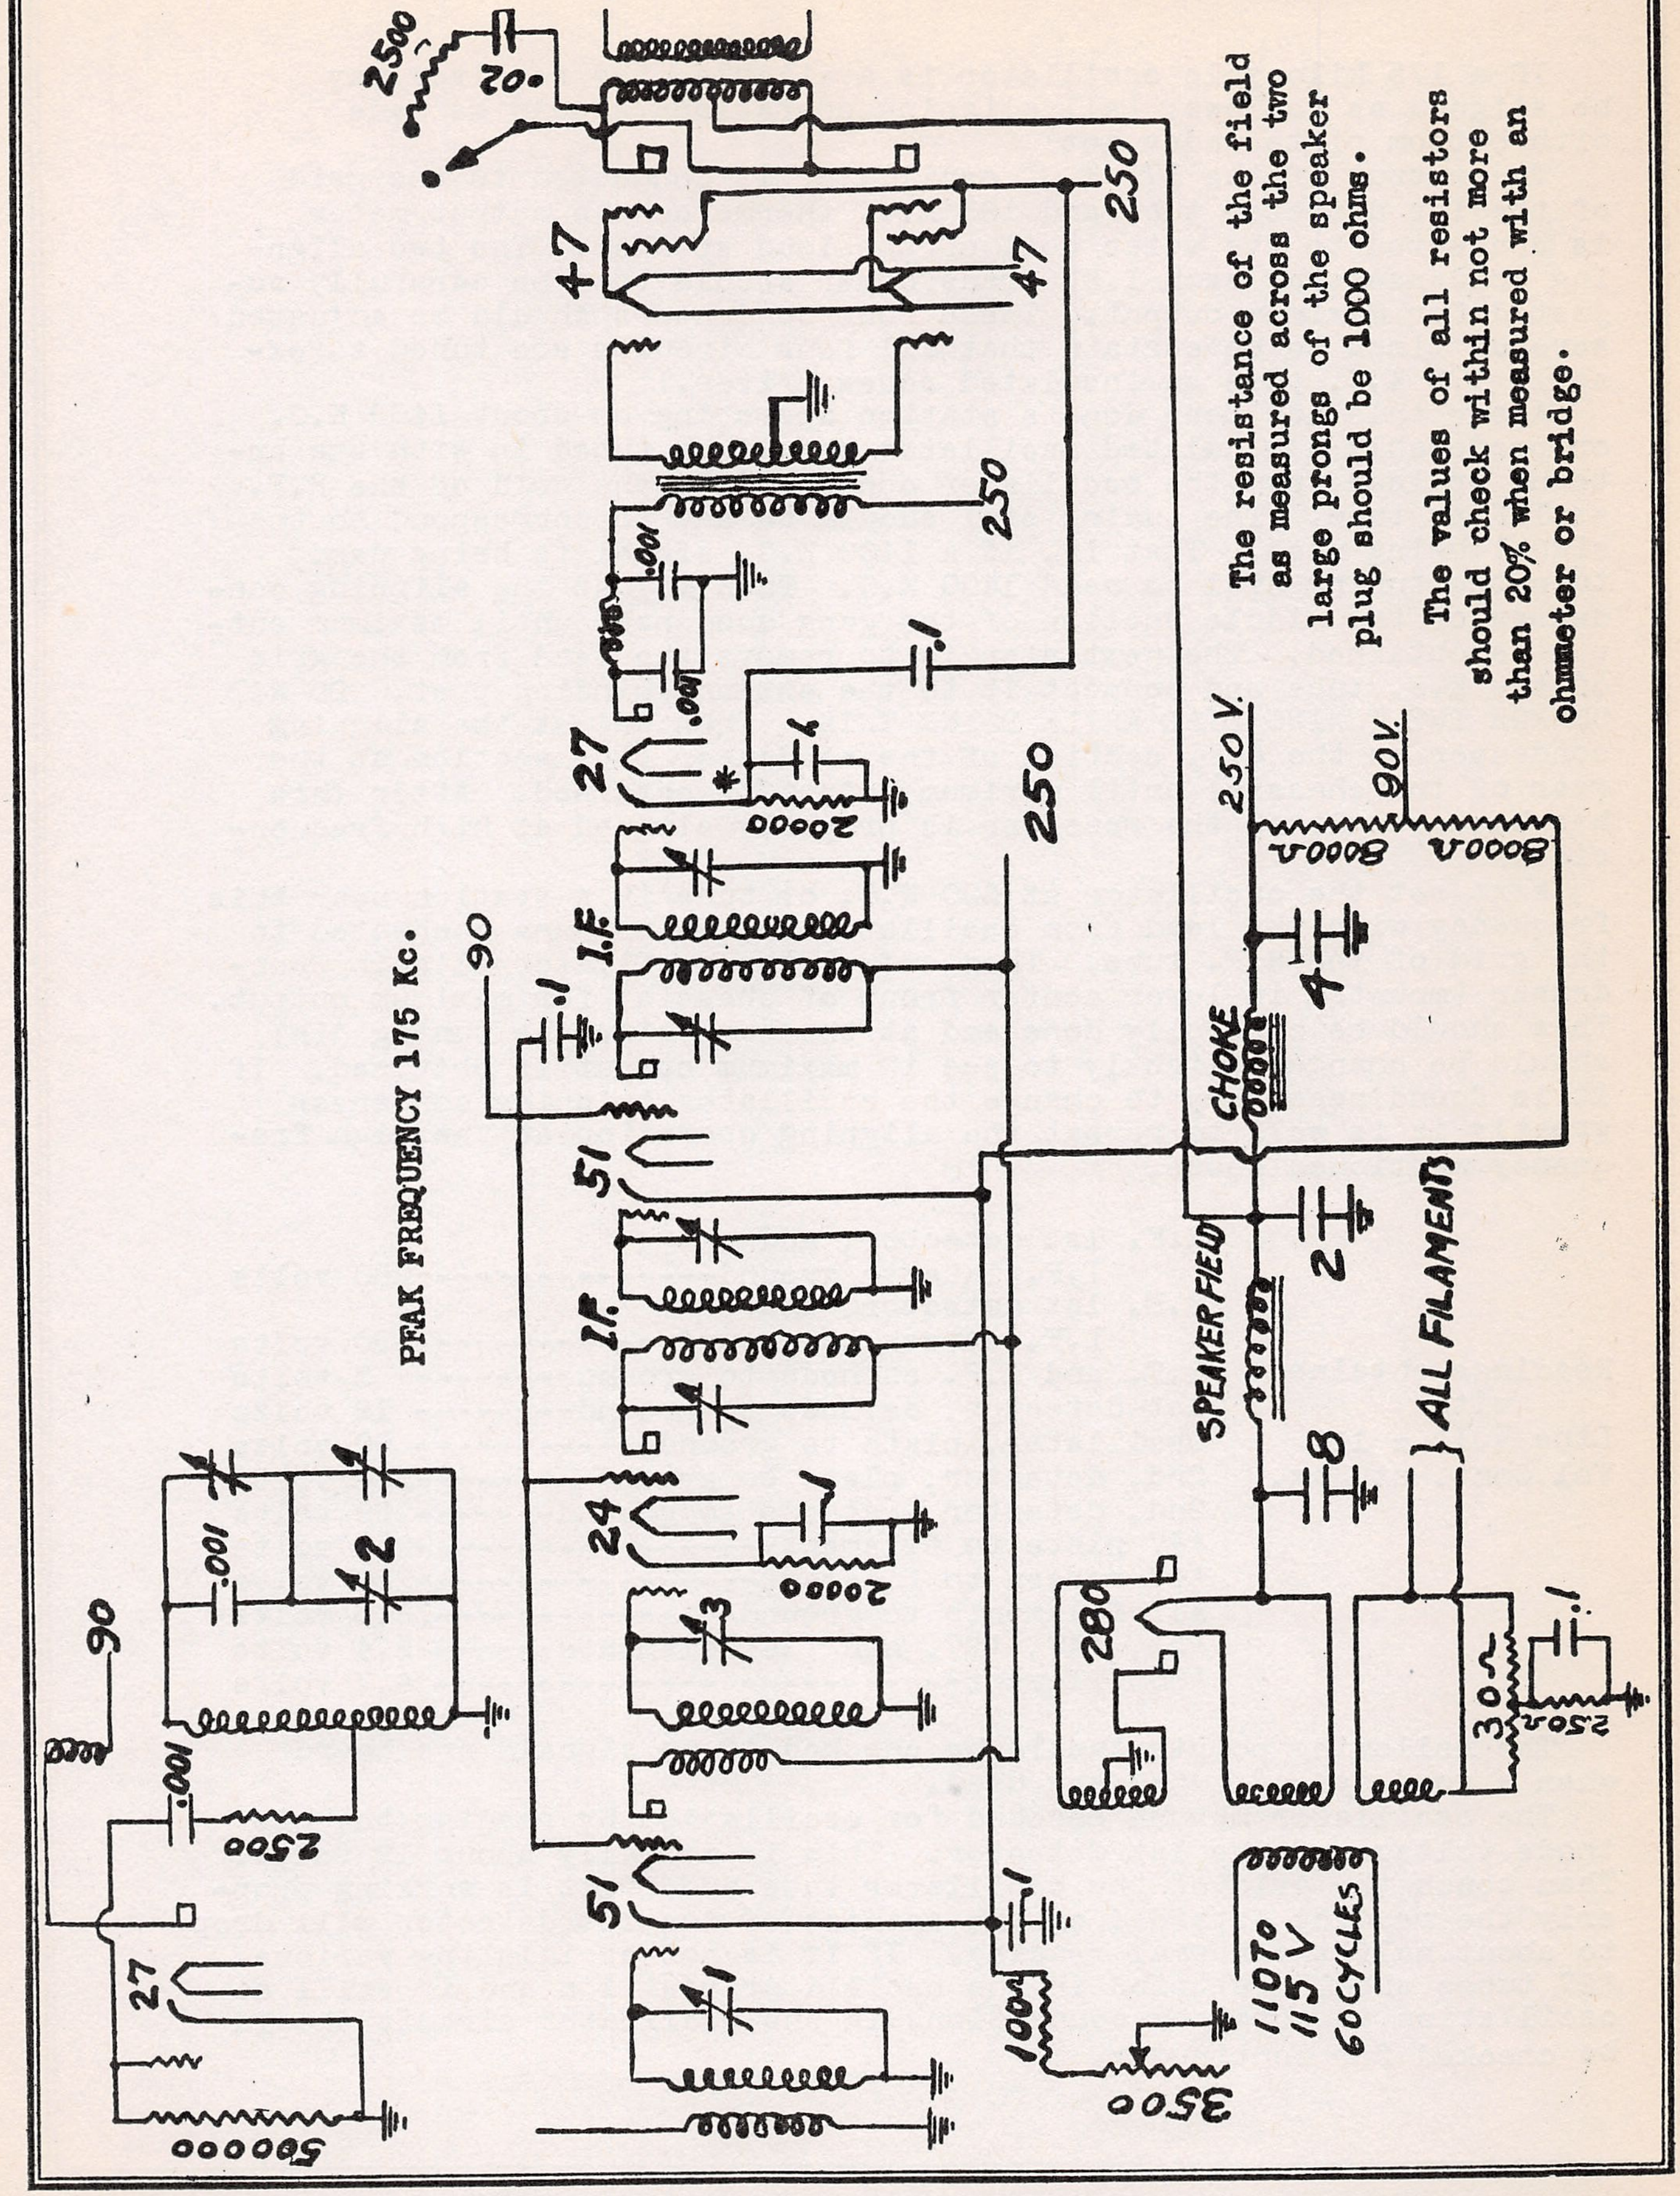
PEAK FREQUENCY 175 Kc.
27
500000
2500
.001
90
.001
2
51
1
.1
3
24
20000
1
I.F.
51
90
.1
I.F.
250
27
20000
1
.1
.001
.001
250
47
47
250
2500
70
250 V.
90V.
8000Ω
8000Ω
4
CHOKE
2
SPEAKER FIELD
8
ALL FILAMENTS
280
30Ω
250Ω
.1
100Ω
3500
110 TO 115 V 60 CYCLES

The resistance of the field as measured across the two large prongs of the speaker plug should be 1000 ohms.

The values of all resistors should check within not more than 20% when measured with an ohmmeter or bridge.

MODELS 700,705
706,725,642-B
(Chassis 26)
Voltage, Data

STEINITE RADIO CO.

If a 175 kilocycle oscillator is available, the receiver may be aligned as follows: (all aligning operations should be made with bottom plate under act)

The output of the 175 K.C. oscillator is connected to the grid of the ist detector tube and 125 m.a. thermo couple output meter is connected to the voice coil of the loud speaker. The two aligning condensers of each I.F. transformer should then be carefully adjusted for maximum output. These four condensers should be adjusted several times to be certain that all four circuits are tuned to exactly 175 K.C. (Use an insulated screw driver.)

After this has been done a station operating on about 1400 K.C. or preferably a modulated oscillator should be tuned in with the antenna or lead from the oscillator connected to the grid of the R.F. amplifier tube. The tuning dial should be set to correspond to the signal being used. That is, if a 1400 K.C. signal is being used, turn the tuning dial to read 1400 K.C. Then adjust the aligning condenser of the middle section of the gang condenser until maximum output is obtained. The next step is to remove the lead from the grid of the R.F. tube and connect it to the antenna binding post. DO NOT CHANGE THE TUNING DIAL WHILE DOING THIS. Then adjust the aligning condenser on the R.F. section of the condenser (the section at the rear of the chassis) until maximum output is obtained. After this has been completed the receiver is properly aligned at high frequencies.

Next set the oscillator at 600 K.C. or tune in a station near this frequency with the lead from oscillator or the antenna connected to the grid of the R.F. tube. Then adjust the oscillator aligning condenser (mounted in lower center front of chassis) for maximum output. This should be carefully done and at the same time the tuning dial should be changed slightly to see if maximum output is obtained. If it is found necessary to change the oscillator trinning condenser greatly it is well to repeat the aligning operation at the high freqnency mentioned above.

Readings obtained with Line Volt.= 110 Vol.Cont. at Max.		
	R.F. 1st detector, and I.F.plate to ground	250 volts
	R.F. 1st detector, and L.F. screen to ground	90 volts
	R.F. and I.F. cathode to ground	3 volts
	1st detector, cathode to ground	12 volts
	Oscillator, plate to ground	90 volts
	2nd, detector, plate to ground	250 volts
	2nd, detector, cathode to ground	22 volts
	'47 plate to filament	250 volts
	'47 screen to filament	250 volts
	All filaments to ground	16.5 volts
	'51, '47, '27, and '24 filaments	2.4 volts
	'80 filament	4.7 volts

The following points should be checked if no signald are heard when a good set of tubes are used.

The oscillator may be checked for oscillation by reading the cathode voltage of the 1st detector. This is normally about 12 volts. Then touch the grid of the oscillator tube and if it is working properly the reading obtained on the cathode of the 1st detector will drop to about half the normal reading. If it is not oscillating various '27 tubes should be tried in the oscillator position and if still no oscillation is obtained connections in the oscillator circuit should be checked for continuity.

MODEL 700,701
(Chassis 28)
Schematic
Voltage

STEINITE RADIO CO.

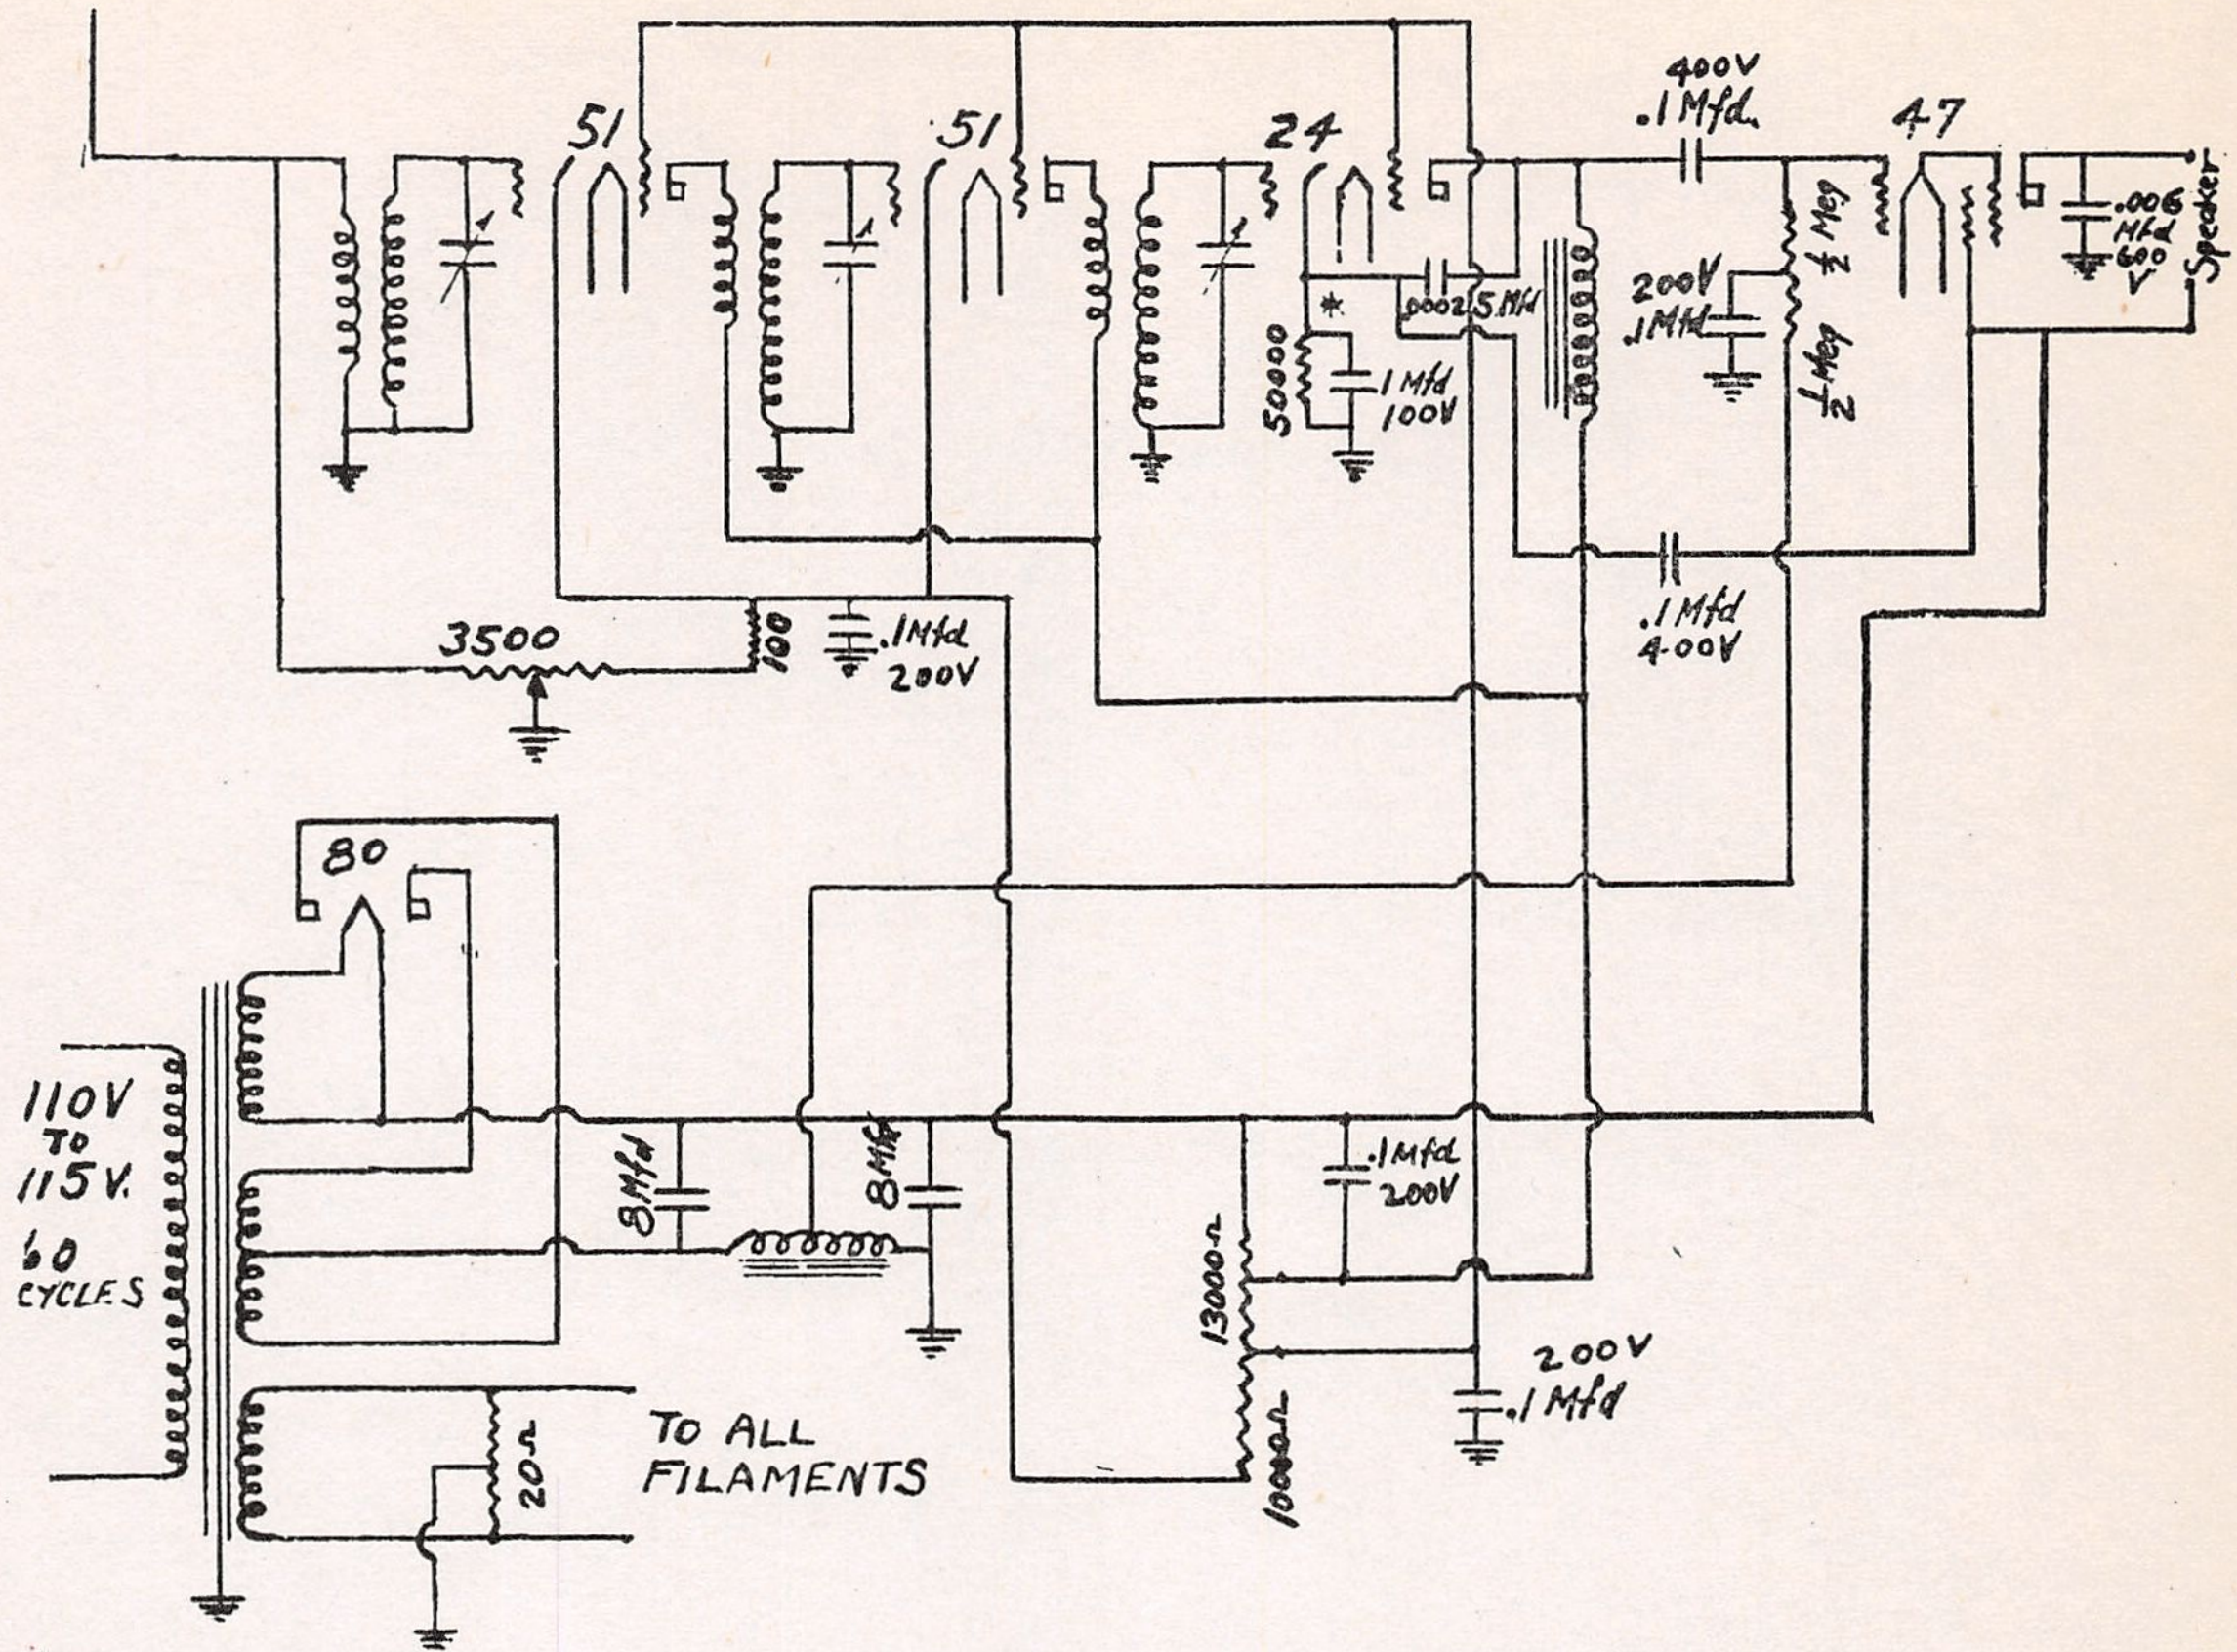
51
51
24
47
400V
.1 Mfd.
.0002
.5 Mh
50000
.1 Mfd
100V
200V
.1 Mfd
1/2 Meg
1/2 Meg
.006 Mfd
600 V
Speaker
3500
100
.1 Mfd
200V
.1 Mfd
400V
80
110V
TO
115V.
60
CYCLES
8 Mfd
8 Mfd
.1 Mfd
200V
13000Ω
1000Ω
200V
.1 Mfd
20Ω
TO ALL
FILAMENTS

7/2/31
1323

It will be seen from the wiring diagram that a special impendence coupling is used from the power detector to the power pentode. If the set "motor boats", check opens in this circuit or short circuit in the coupling condenser.

All filaments except that of the type 80 tube are taken from one winding of the power transformer. Bias voltage for '47's is obtained from the drop across a portion of the speaker field. This maintains the grid at a 16.5 potential relative to ground. The grid is connected through two 1/2 meg. resistors, by-passed at center by a .1 mfd. condenser. Should this condenser become open, a very pronounced hum will result. In case of excessive hum or poor quality, check these connections.

Readings obtained with Line Volt.= 110 Vol. Cont. st Max.

'24 and '45 filaments	2.3
'80 filament	4.7
R.F. screen grids (to ground)	90
R.F. plates (to ground)	250
Detector plate (to ground)	250
Detector screen grid (to ground)	90
R.F. Cathode (to ground)	
Volume Control Maximum	3v
Volume Control Minimum	35
Detector Cathode (to ground)	10
'47 plate (to ground)	250v
'47 Screen (to ground)	250v
All filaments (to ground)	0v
Pentode Bias (at speaker field tap)---------( )	16.5v

STERLING MFG. CO.

MODEL R-100MV, R-403, R-404, R-402, R-406, R-407

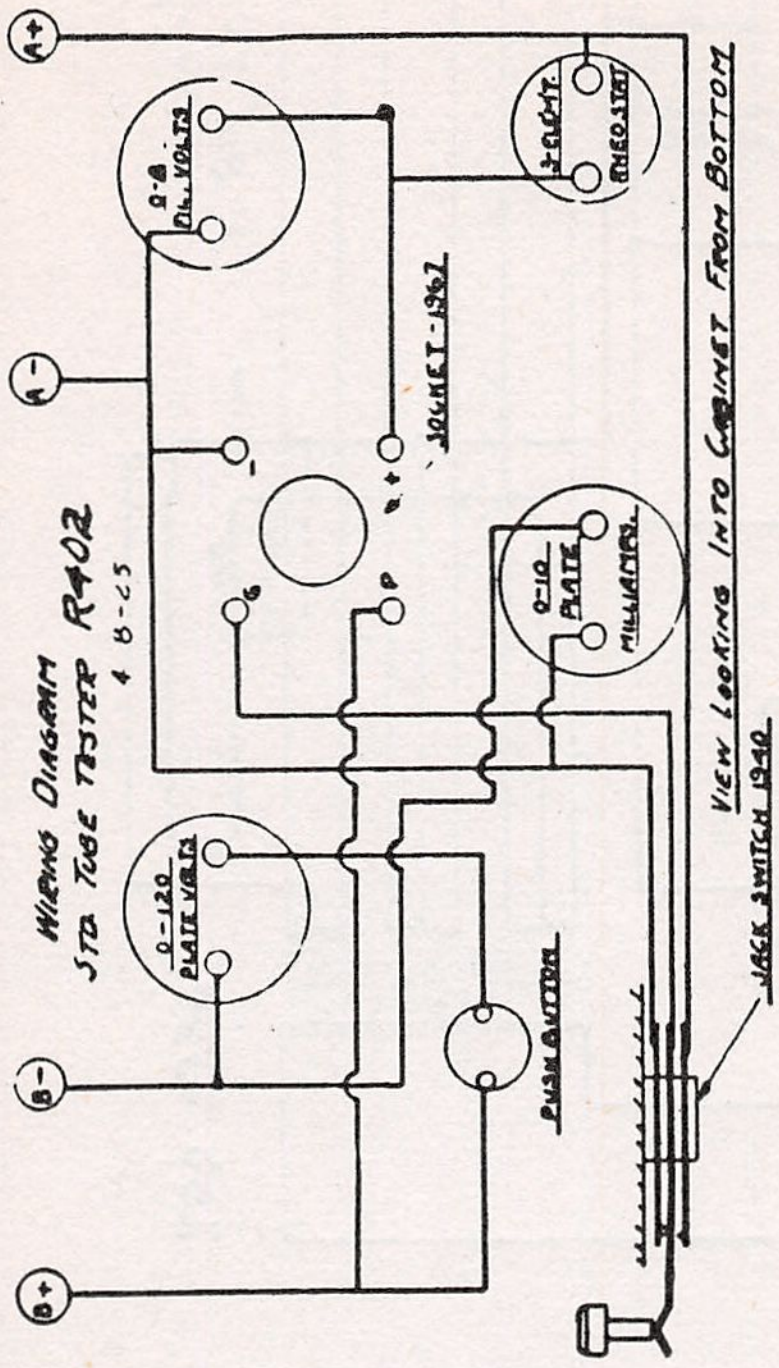
Wiring Diagram
Std Tube Tester R402
4 8-25

A+
A−
B−
B+
0-8 Fil. Volts
3-Elemt. Rheostat
Socket-1967
G
P
+
0-10 Plate Milliamps.
0-120 Plate Volts
Push Button
View Looking Into Cabinet From Bottom
Jack Switch 1940

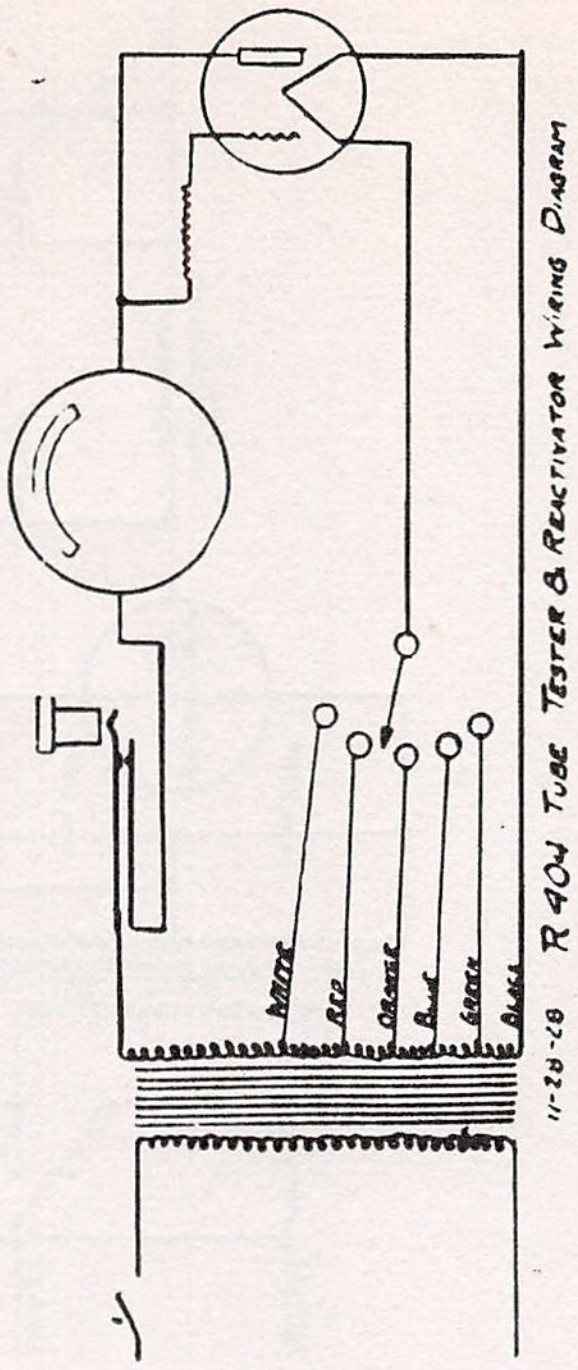
R404 Tube Tester & Reactivator Wiring Diagram
11-28-28

Jack Switch 1940
White
Red
Orange
Blue
Green
Black

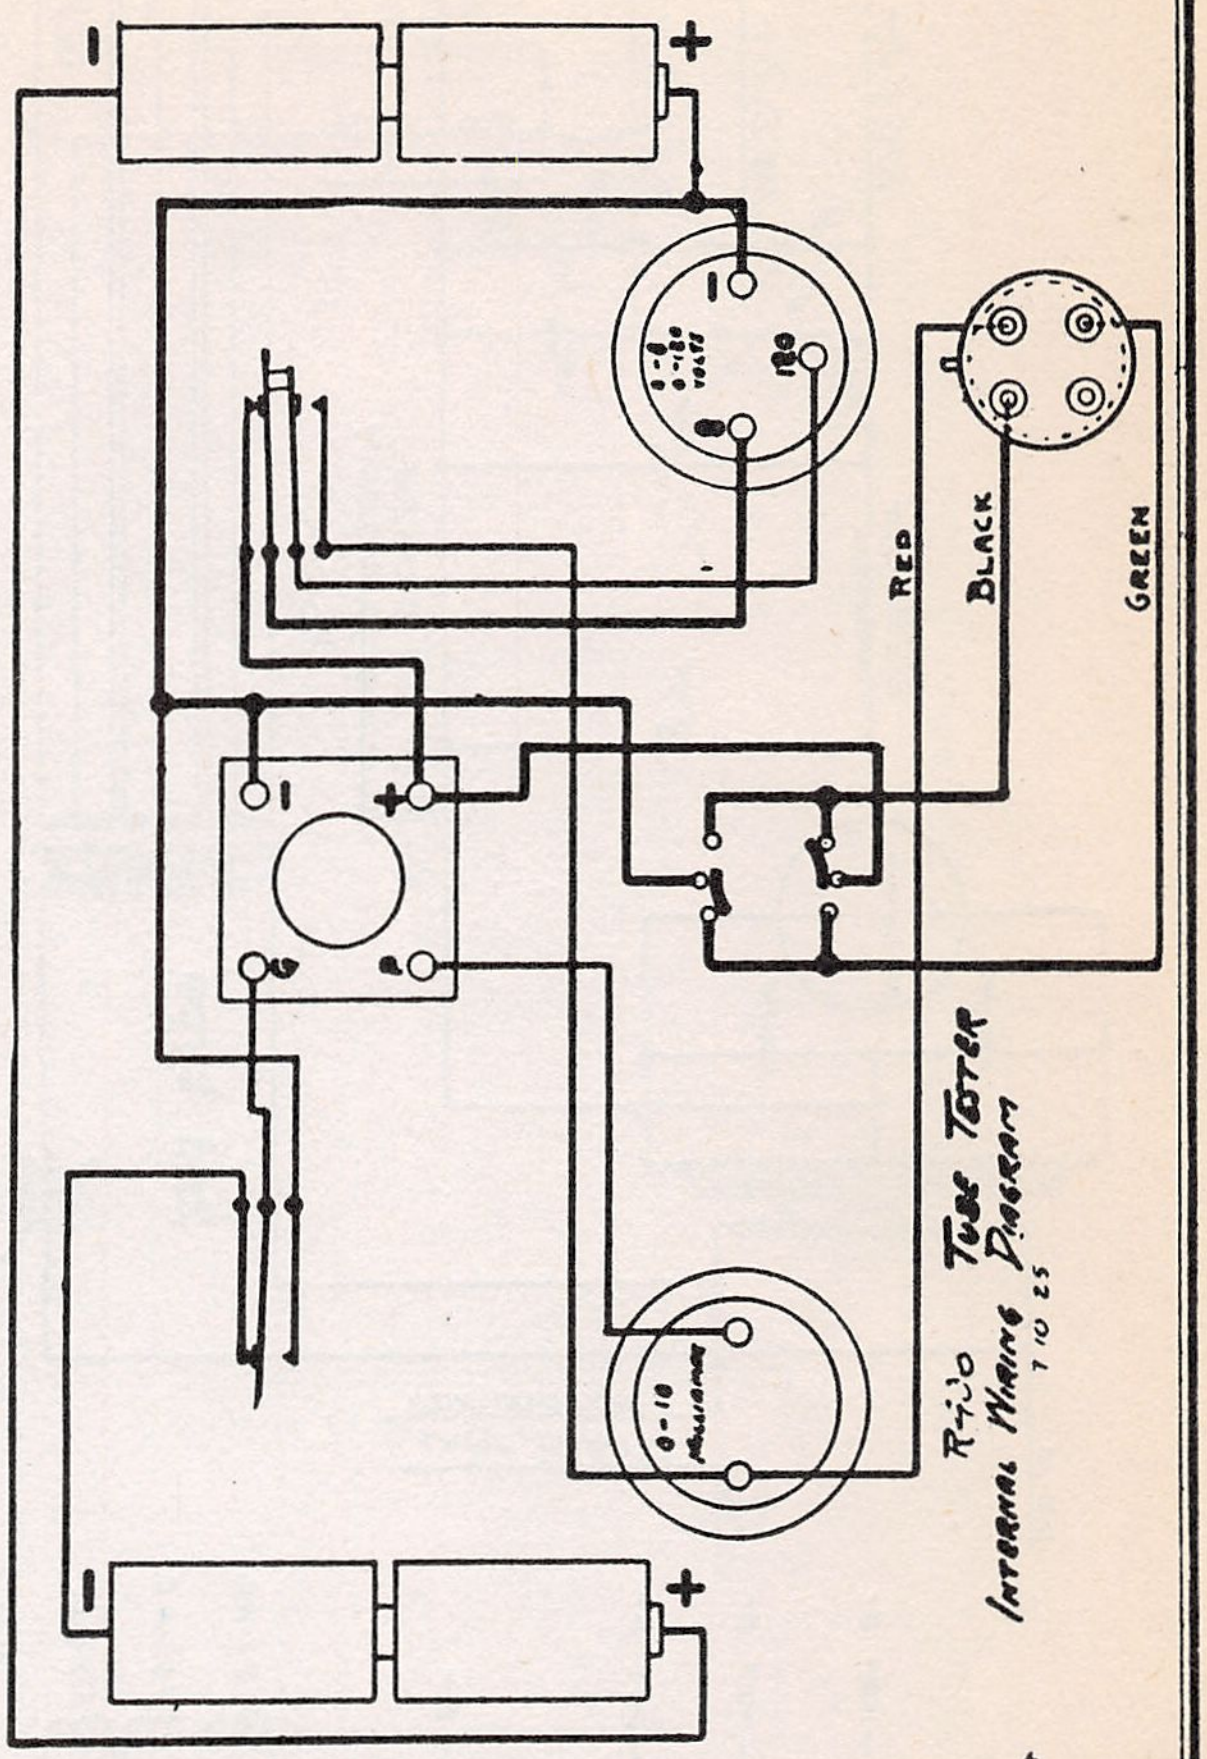
R400 Tube Tester
Internal Wiring Diagram
7 10 25

−
+
0-8 0-150 Volts
150
Red
Black
Green
0-10 Milliamps

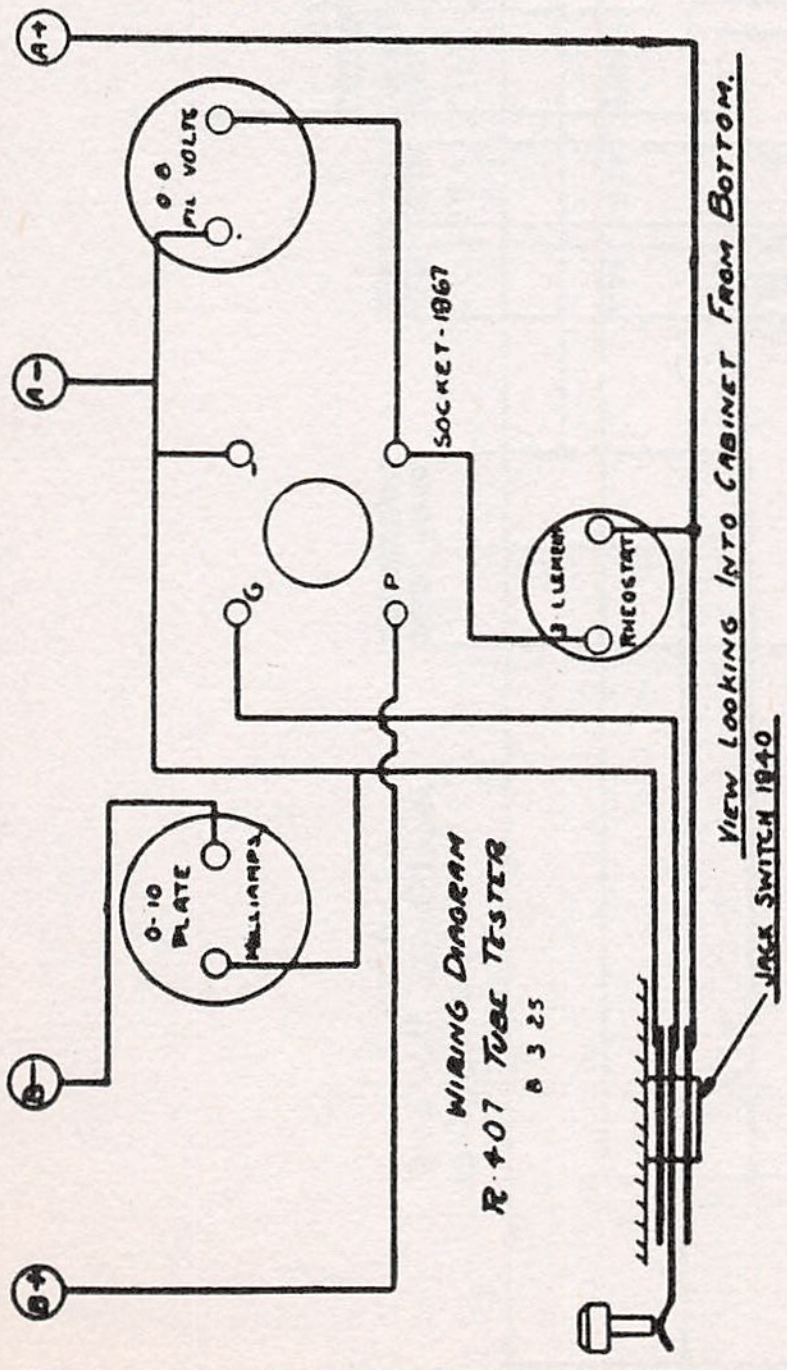
Wiring Diagram
R-407 Tube Tester
8 3 25

A+
A−
B−
B+
0-8 Fil Volts
Socket-1867
G
P
3 Element Rheostat
0-10 Plate Milliamps
View Looking Into Cabinet From Bottom.
Jack Switch 1840

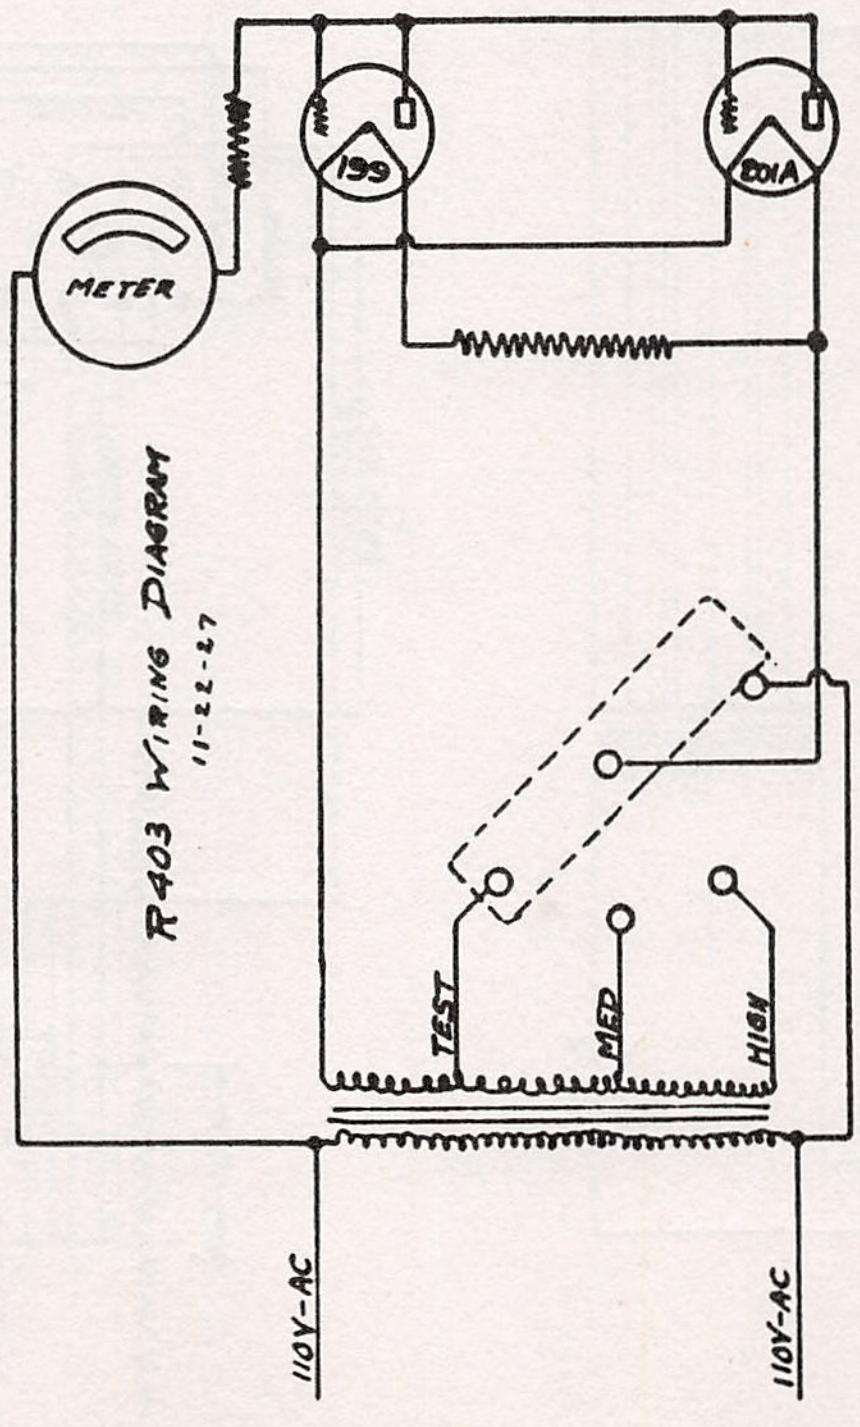
R403 Wiring Diagram
11-22-27

Meter
199
201A
Test
Med
High
110V-AC
110V-AC

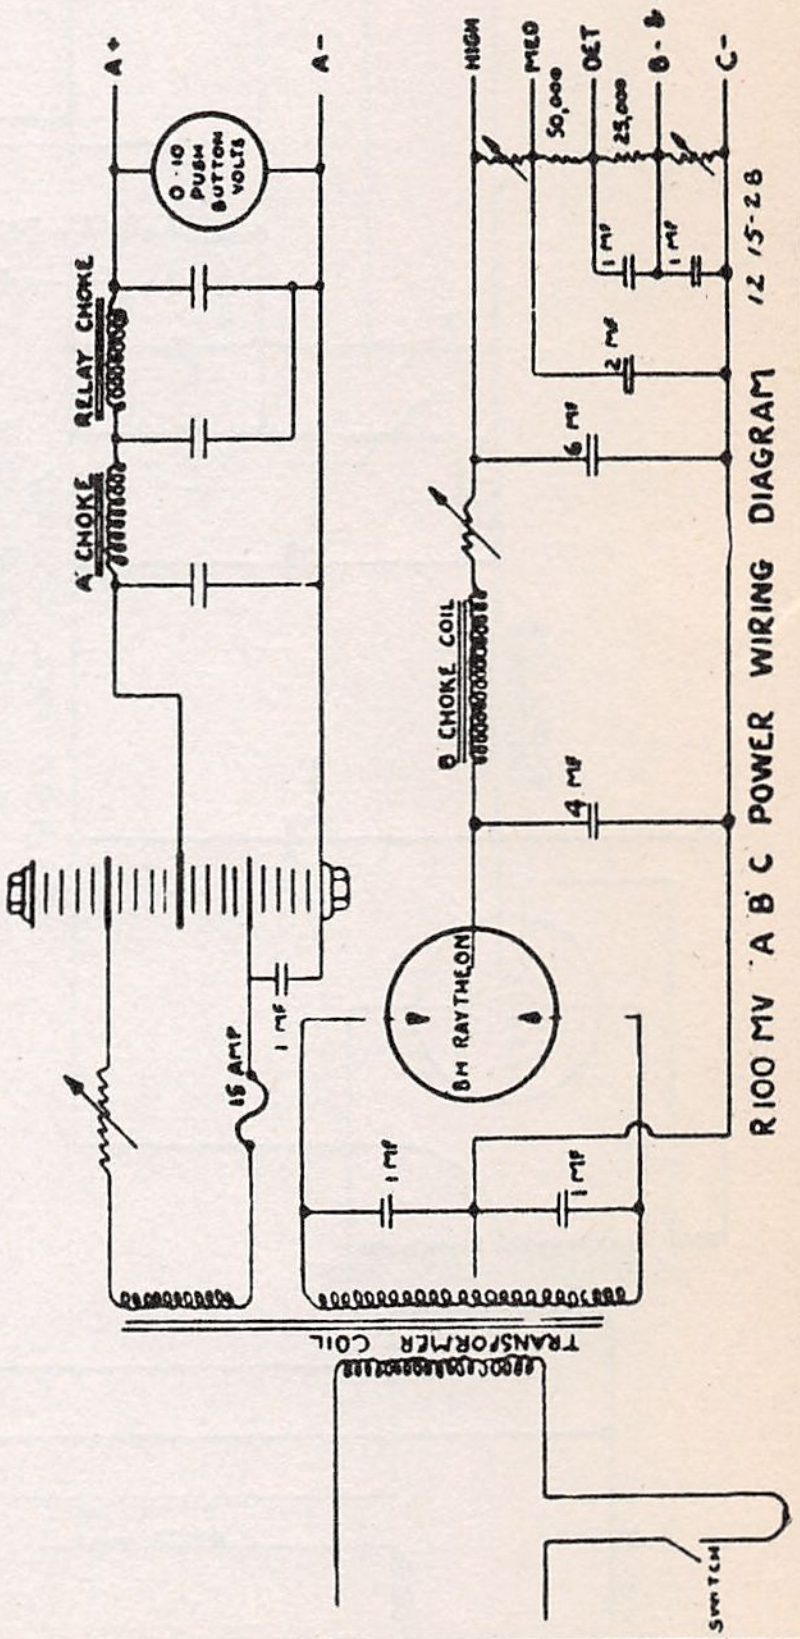
R100 MV 'A' 'B' C POWER WIRING DIAGRAM 12 15-28

A+
A−
0-10 Push Button Volts
Relay Choke
'A' Choke
15 Amp
1 MF
High
Med
50,000
Det
25,000
B- & C+
C−
1 MF
1 MF
2 MF
6 MF
B Choke Coil
4 MF
BH Raytheon
1 MF
1 MF
Transformer Coil
Switch

MODEL R-807A, R-810
(1st Type), R-810
(2nd Type), R-880.

STERLING MFG. CO.

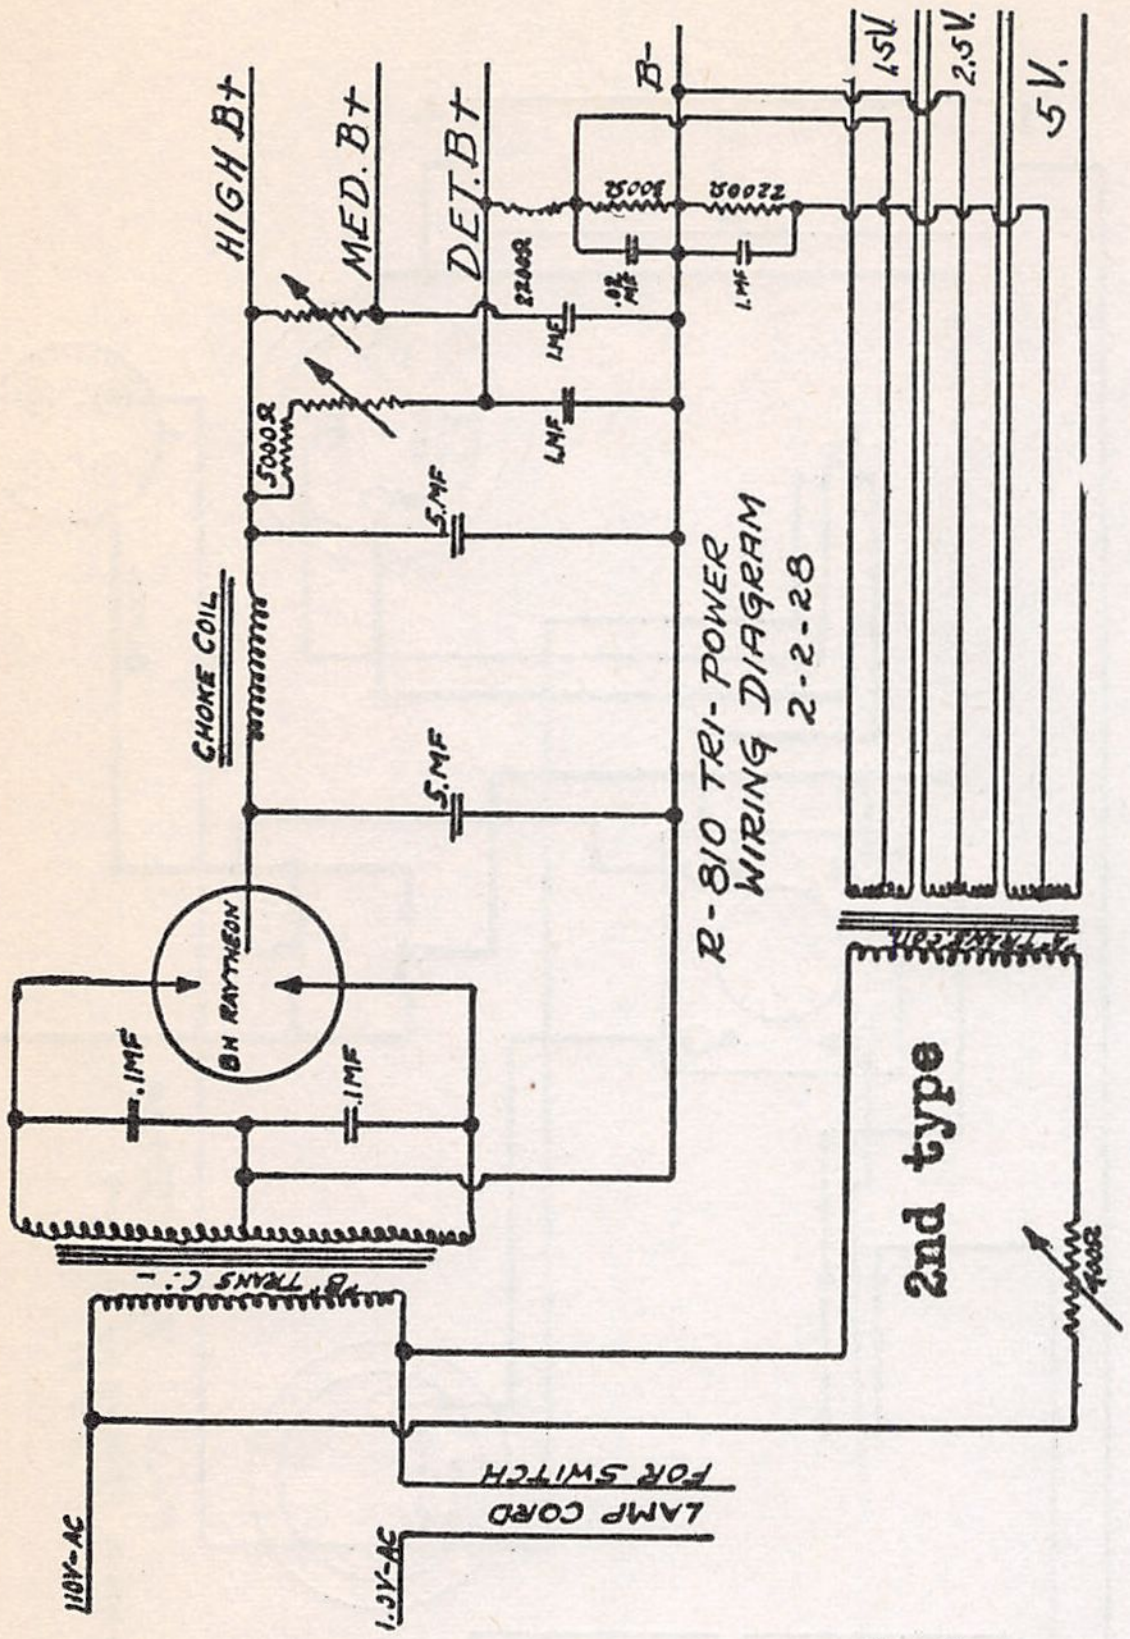
HIGH B+
MED. B+
DET. B+
B-
1.5V.
2.5V.
5V.
CHOKE COIL
.5MF
.5MF
1MF
1MF
.1MF
.1MF
BH RAYTHEON
"B" TRANS C.
"A" TRANS. COIL
LAMP CORD
FOR SWITCH
110V-AC
1.1V-AC

R-810 TRI-POWER WIRING DIAGRAM 2-2-28

2nd type

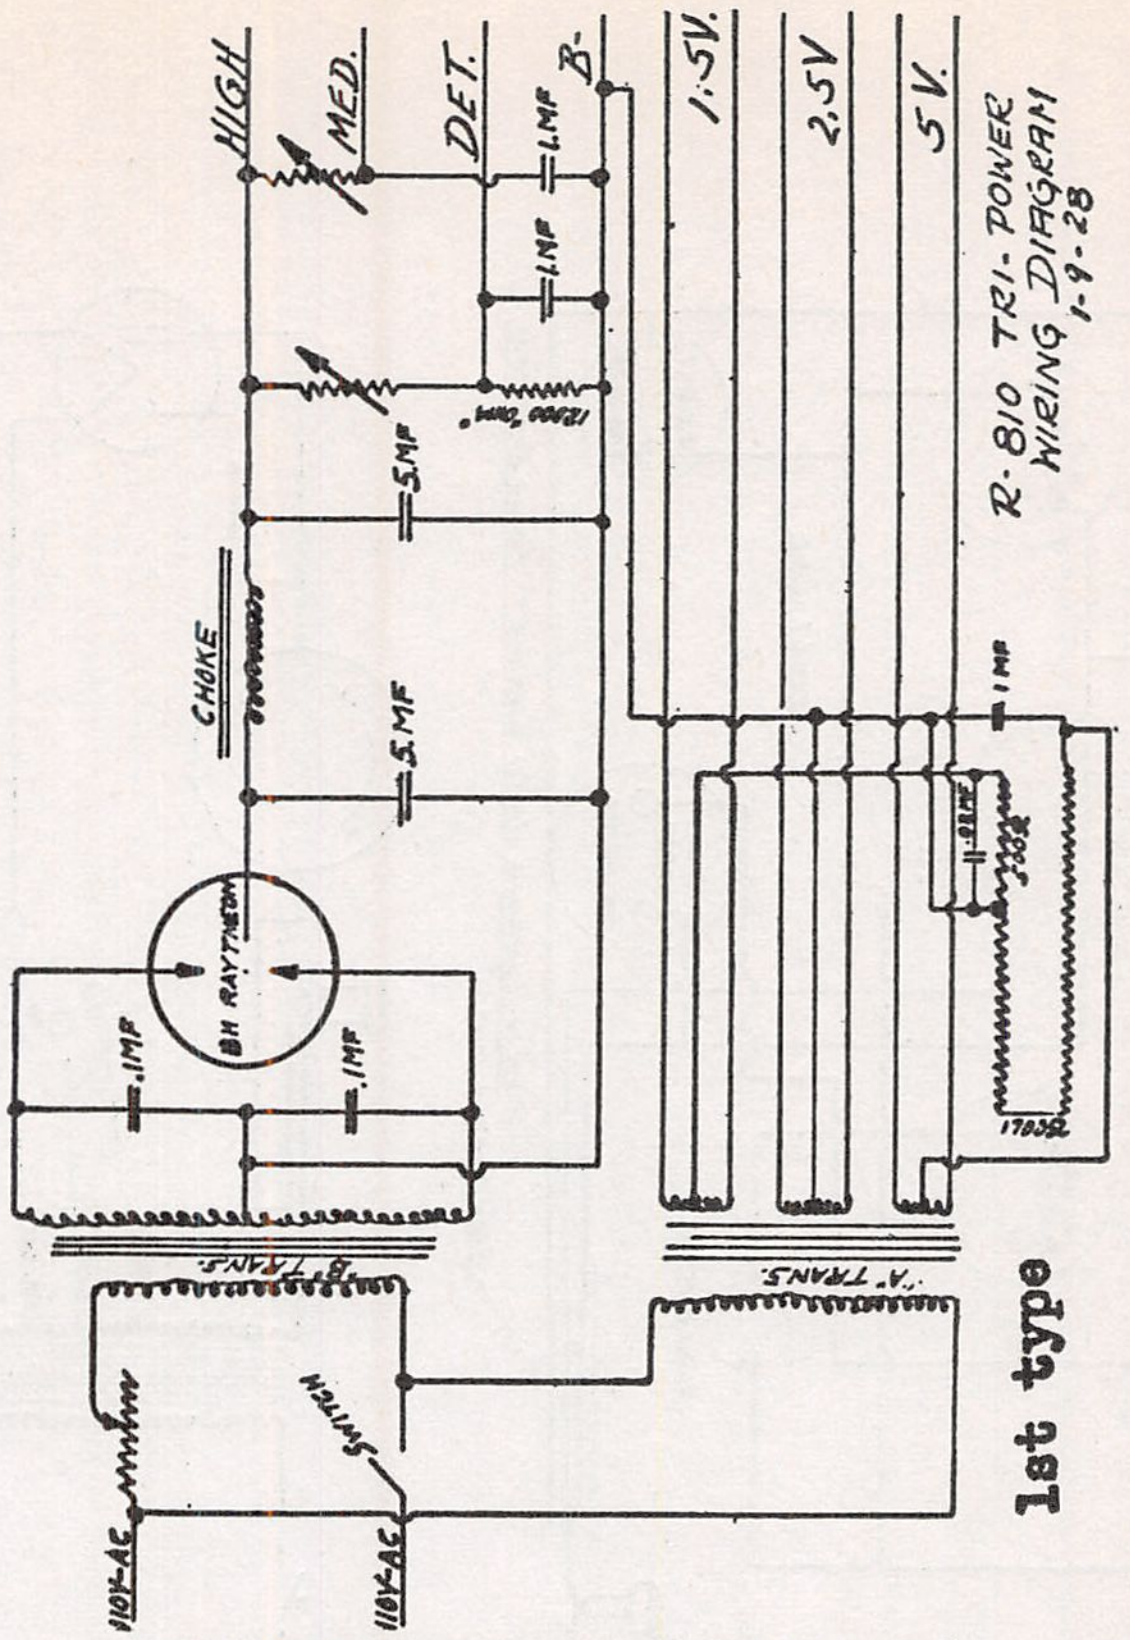
HIGH
MED.
DET.
B-
1.5V.
2.5V.
5V.
1.MF
1.MF
.5MF
.5MF
CHOKE
BH RAYTHEON
.1MF
.1MF
"B" TRANS.
"A" TRANS.
SWITCH
110V-AC
110V-AC
1MF

R-810 TRI-POWER WIRING DIAGRAM 1-9-28

1st type

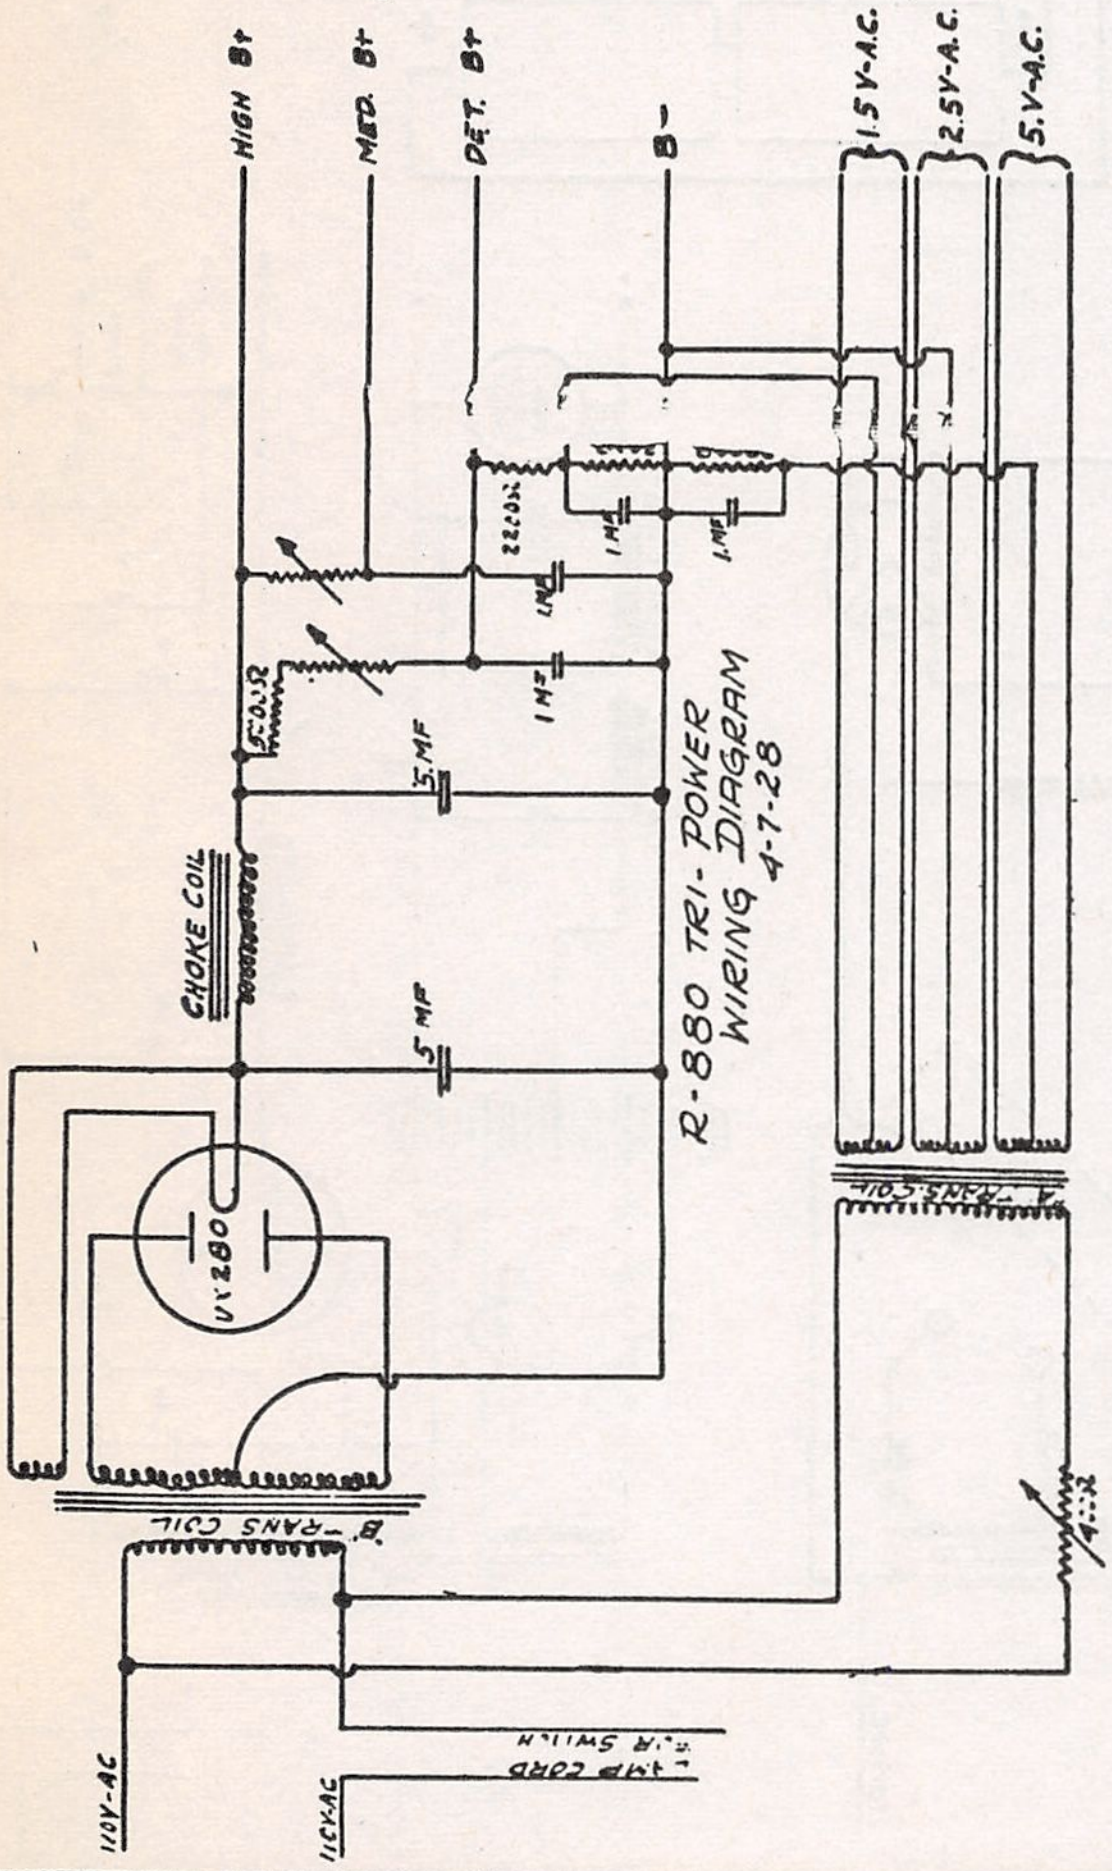
HIGH B+
MED. B+
DET. B+
B-
1.5V-A.C.
2.5V-A.C.
5.V-A.C.
CHOKE COIL
.5MF
5 MF
1 MF
1 MF
1MF
1MF
UX280
"A" TRANS. COIL
"B" TRANS COIL
LAMP CORD
FOR SWITCH
110V-AC
11CV-AC

R-880 TRI-POWER WIRING DIAGRAM 4-7-28

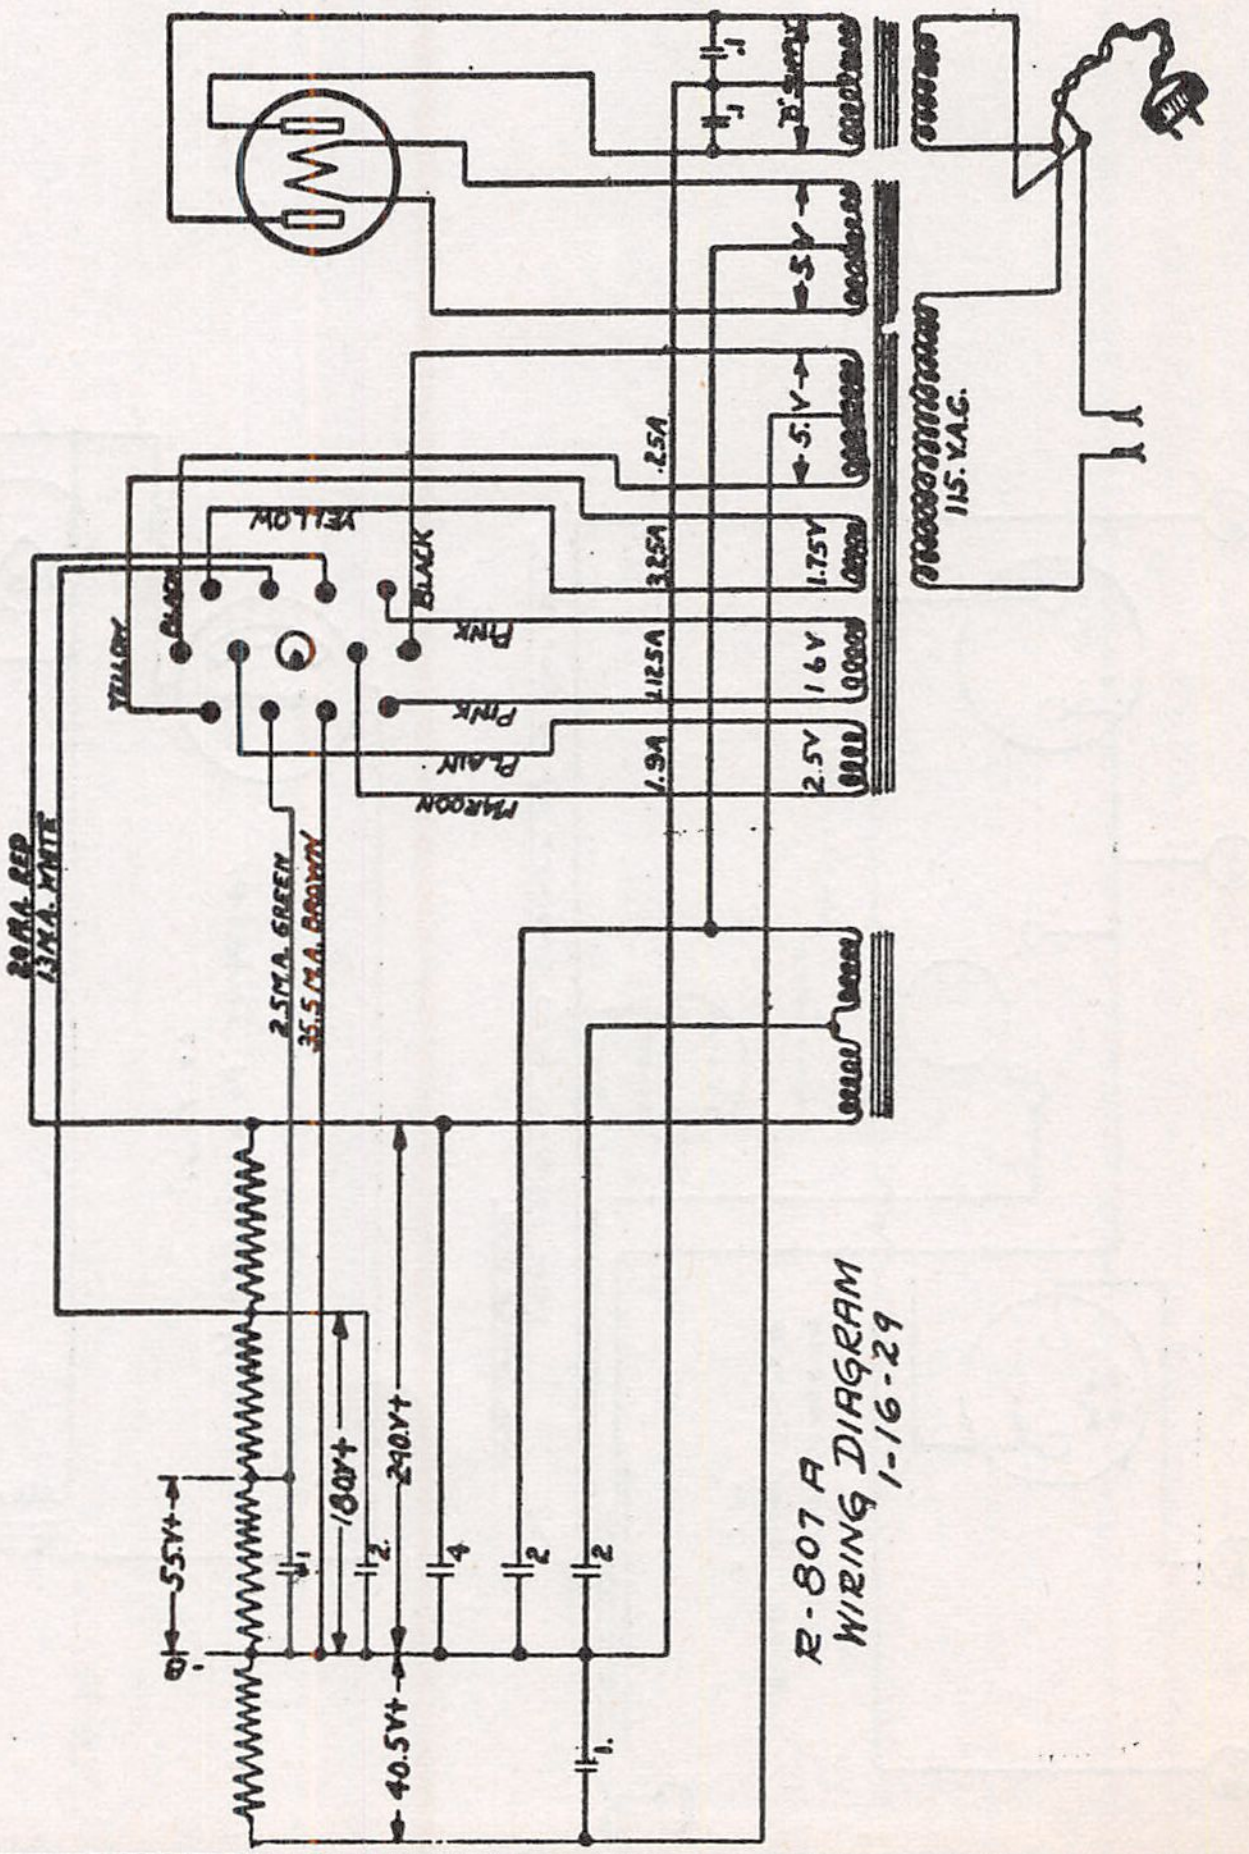
MOTTSA
YELLOW
PLATE
BLACK
PINK
PINK
PLAIN
MAROON
2.5A
3.25A
1.75V
1.12SA
1.6V
1.9A
2.5V
5V
5V
115.V.A.C.
20 MA. RED
13 MA. WHITE
2.5 MA. GREEN
35.5 MA. BROWN
55V+
180V+
290V+
40.5V+
B-
1
2
4
2
2
1
.1
.1

R-807 A WIRING DIAGRAM 1-16-29

STERLING MFG. CO.

MODEL R-409, R-410, R-411,
R-412, R-509, R-510

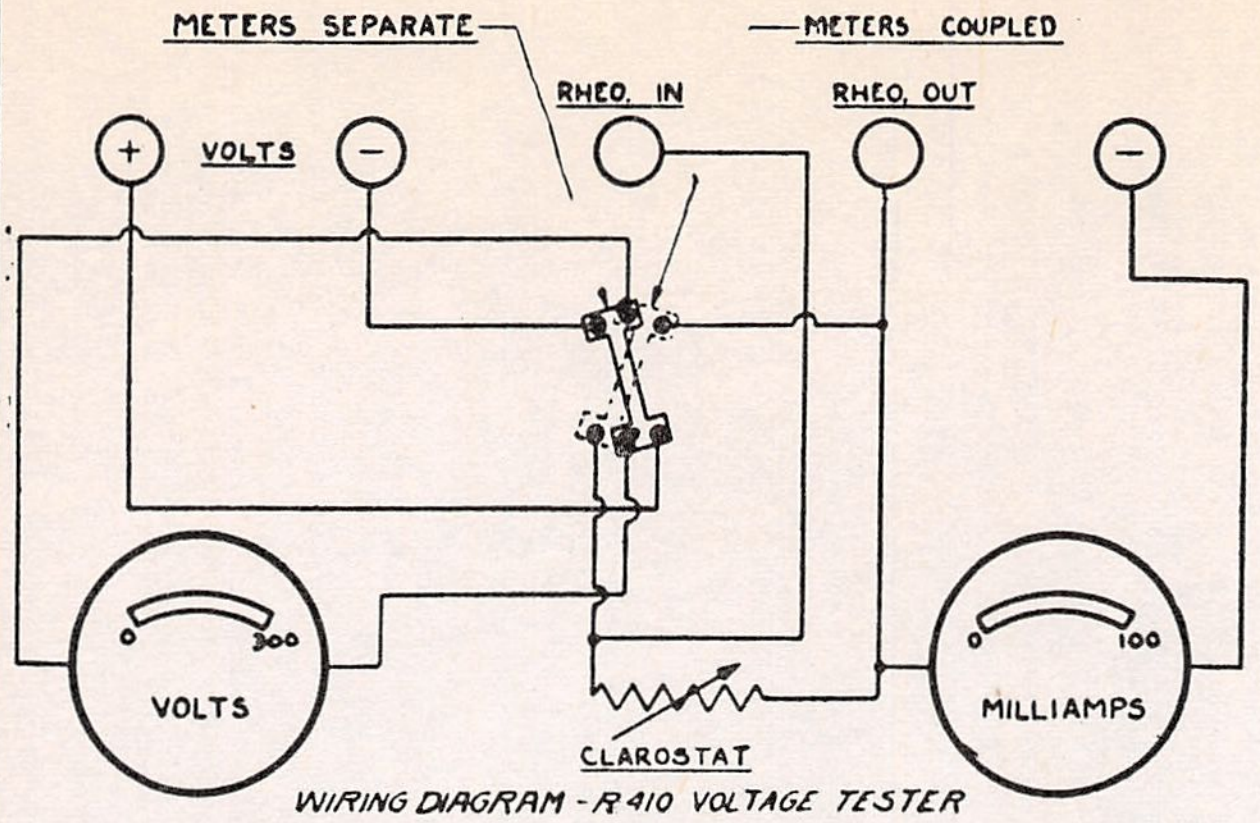
METERS SEPARATE
METERS COUPLED
RHEO. IN
RHEO. OUT
VOLTS
+
−
0
300
VOLTS
100
MILLIAMPS
CLAROSTAT

WIRING DIAGRAM - R410 VOLTAGE TESTER
3-2-29

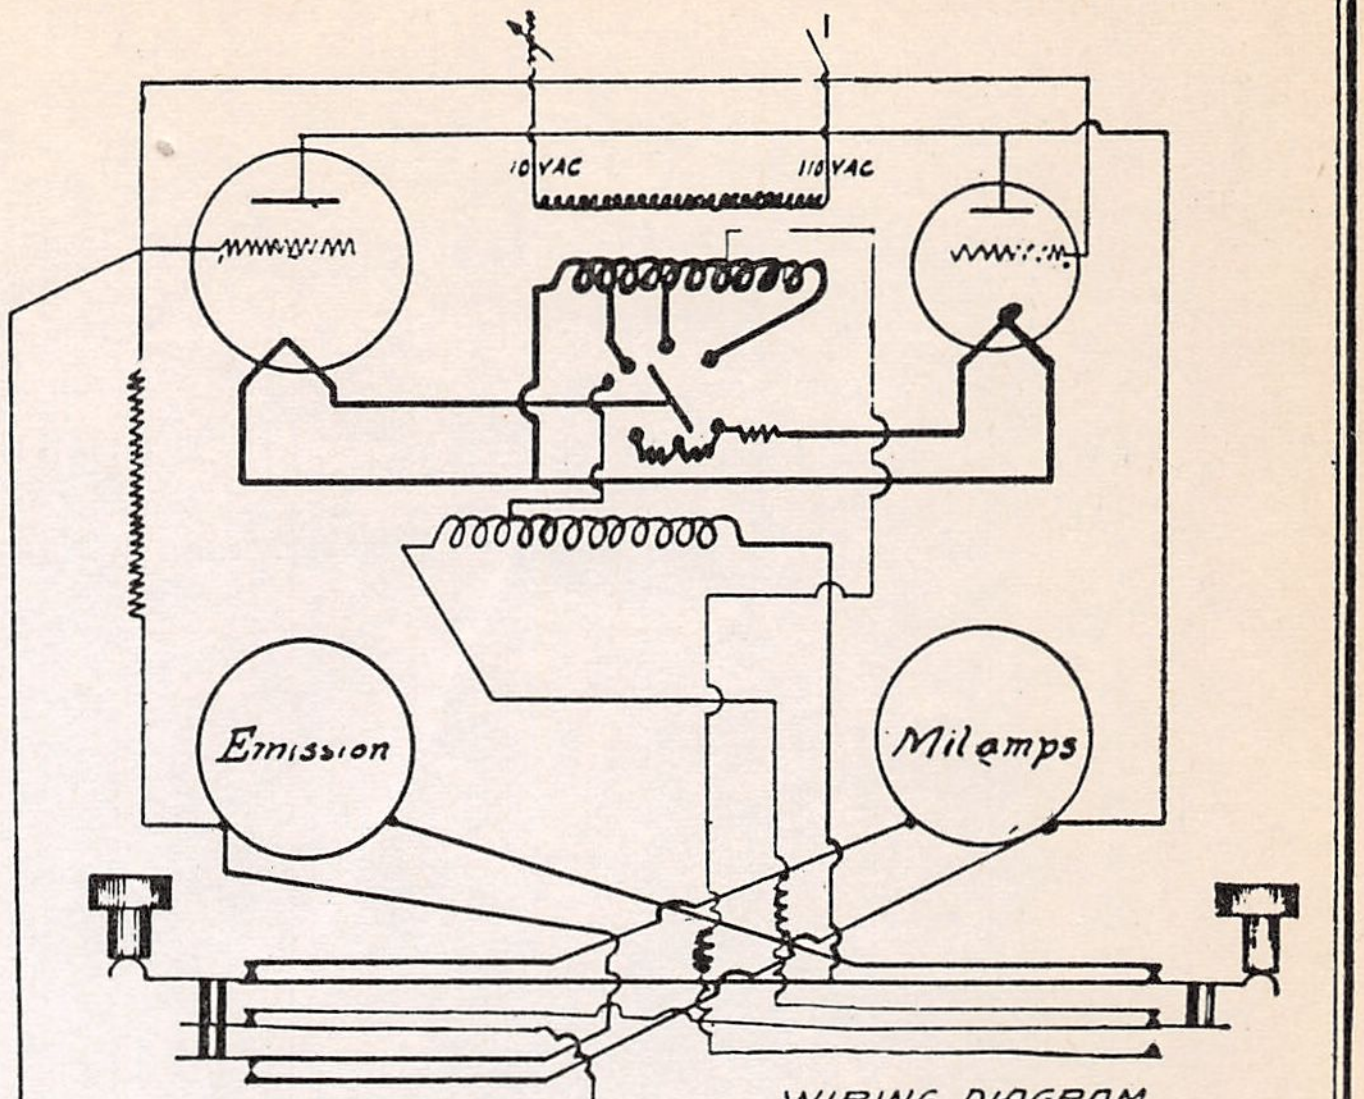
110 VAC
110 VAC
Emission
Milamps

WIRING DIAGRAM
R409 TUBE TESTER BY A.C.
12-2-27

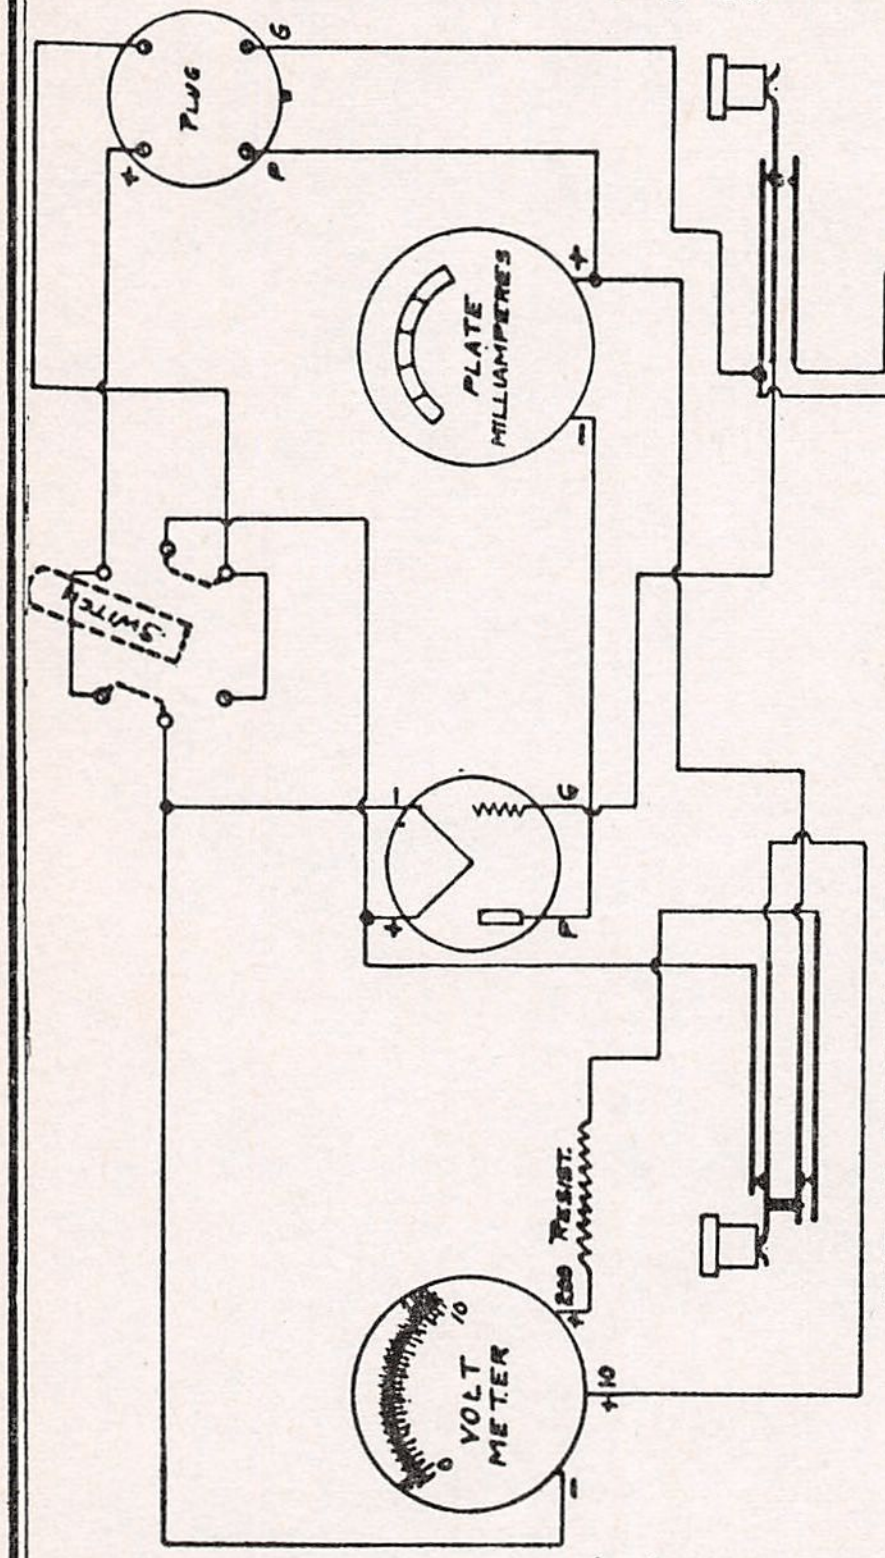
PLUG
G
P
+
PLATE MILLIAMPERES
6 VOLTS
SWITCH
G
P
RESIST.
220
VOLT METER
10
+10

WIRING DIAGRAM - R412 TUBE TESTER
12-2-27

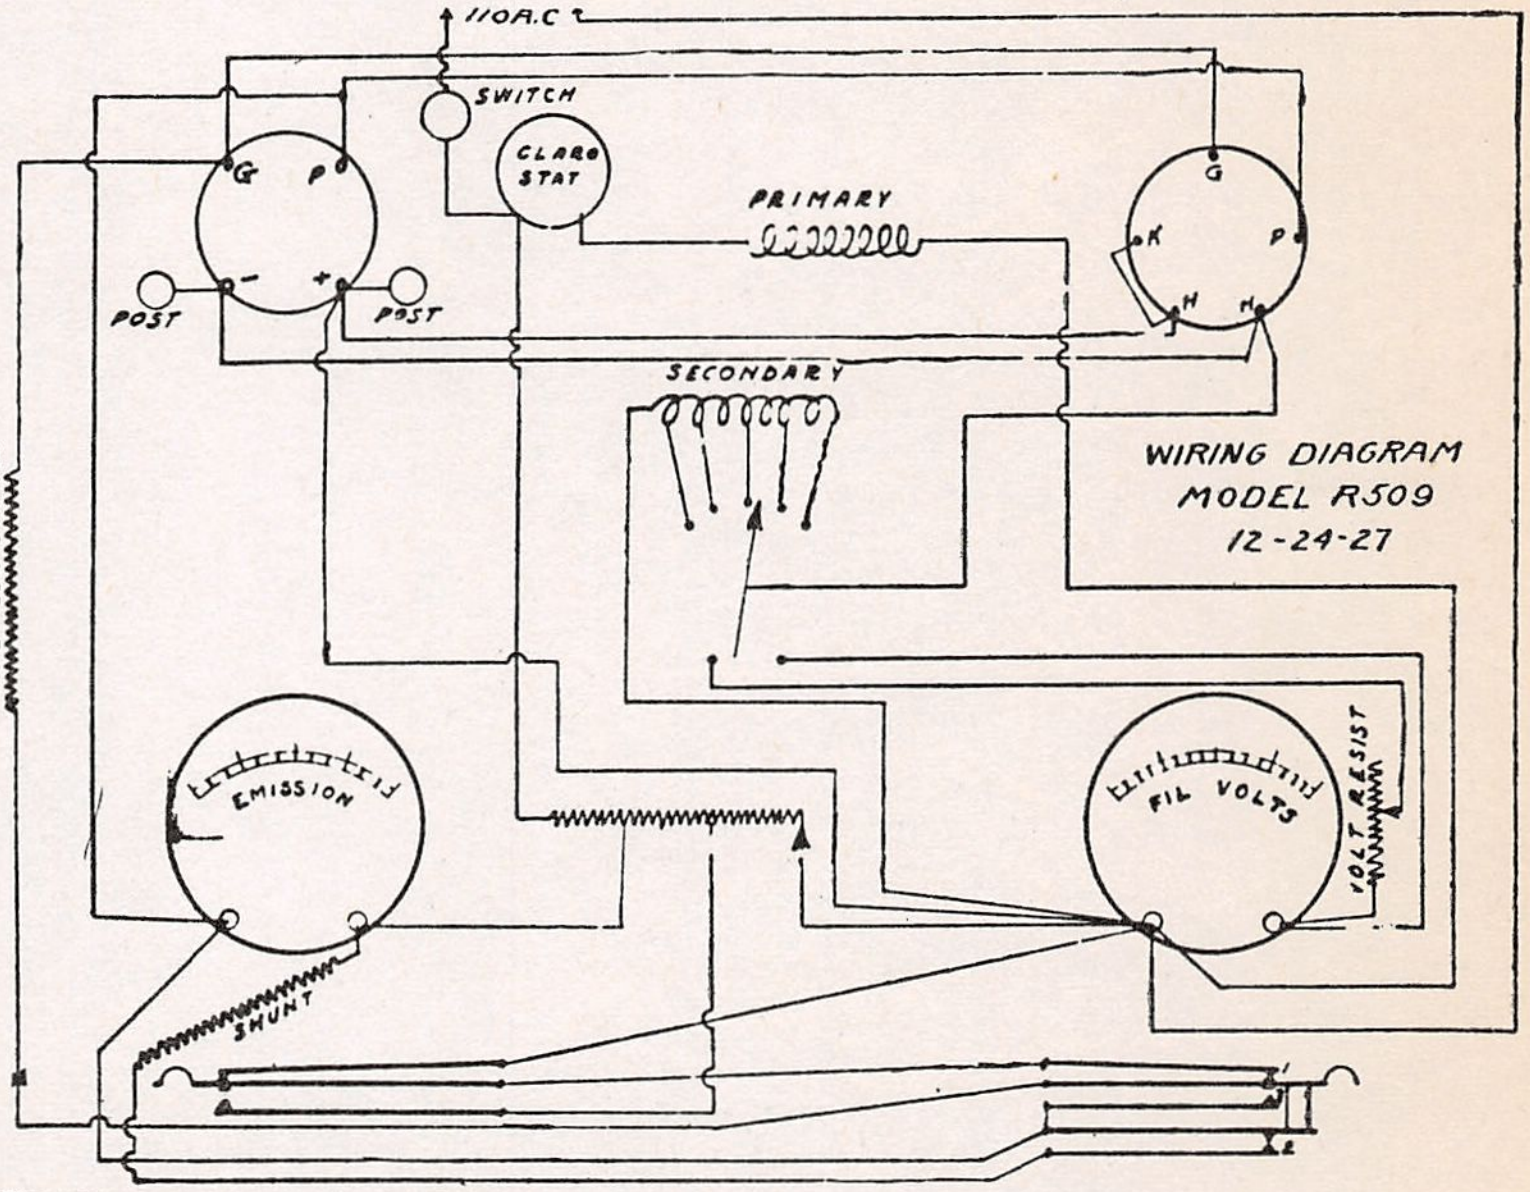
110 A.C.
SWITCH
CLARO STAT
PRIMARY
G
P
K
H
POST
POST
SECONDARY
GRID RESISTANCE
EMISSION
FIL VOLTS
VOLT RESIST
SHUNT

WIRING DIAGRAM
MODEL R509
12-24-27

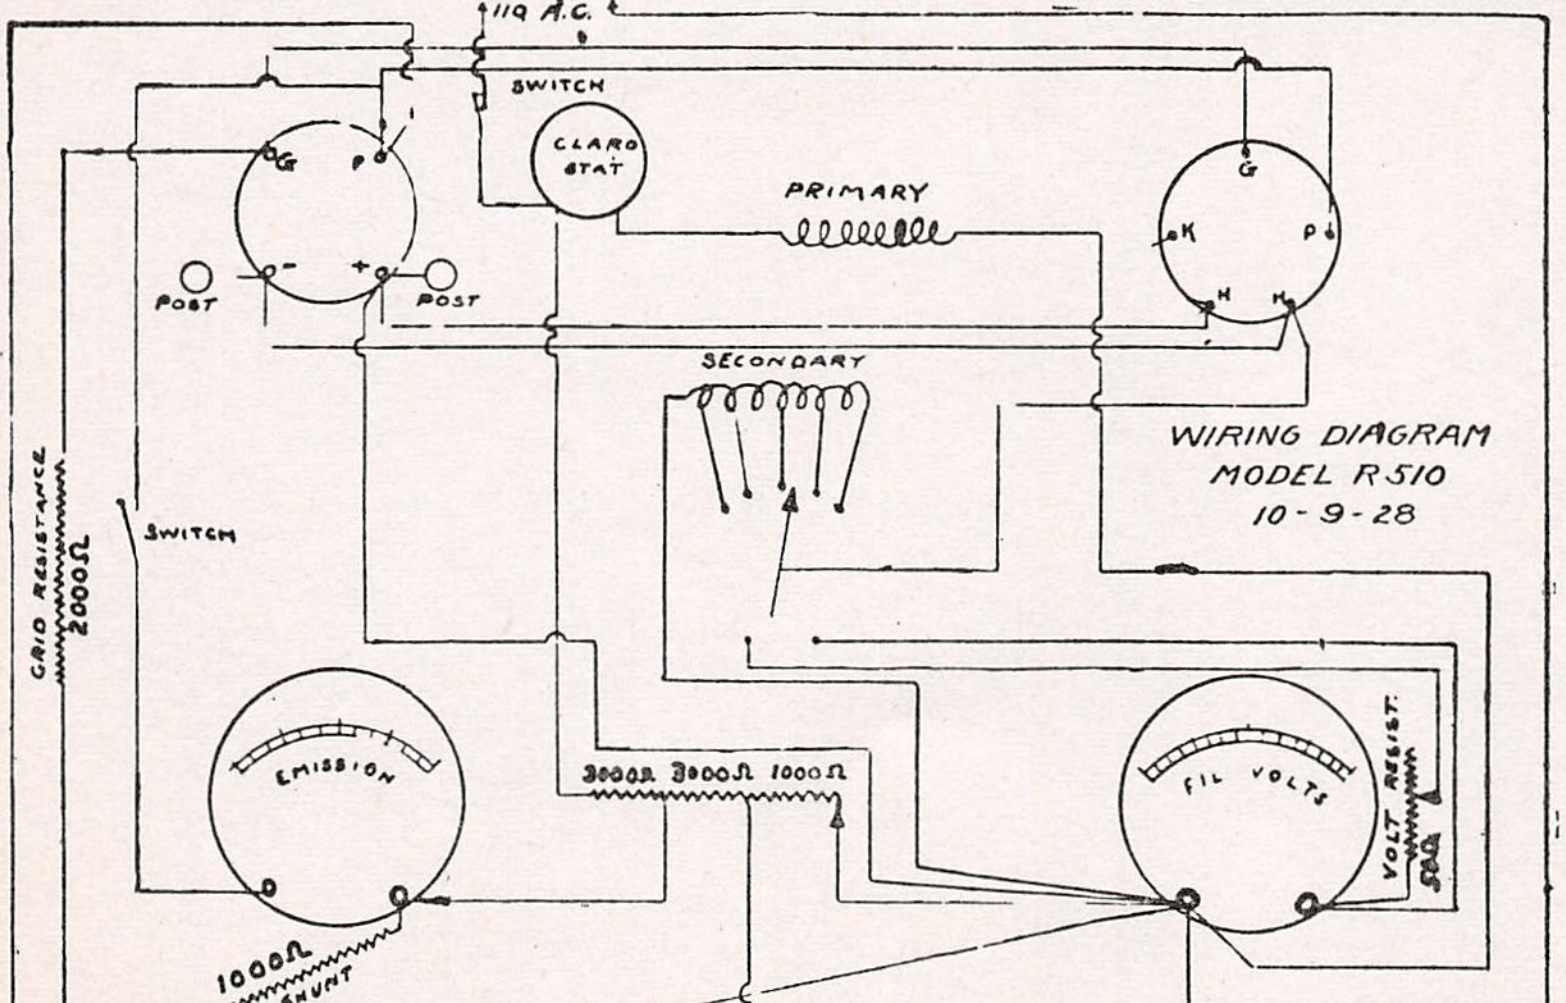
110 A.C.
SWITCH
CLARO STAT
PRIMARY
G
P
K
H
POST
POST
SECONDARY
GRID RESISTANCE 2000Ω
SWITCH
EMISSION
3000Ω 3000Ω 1000Ω
FIL VOLTS
VOLT RESIST. 30Ω
1000Ω SHUNT

WIRING DIAGRAM
MODEL R510
10-9-28

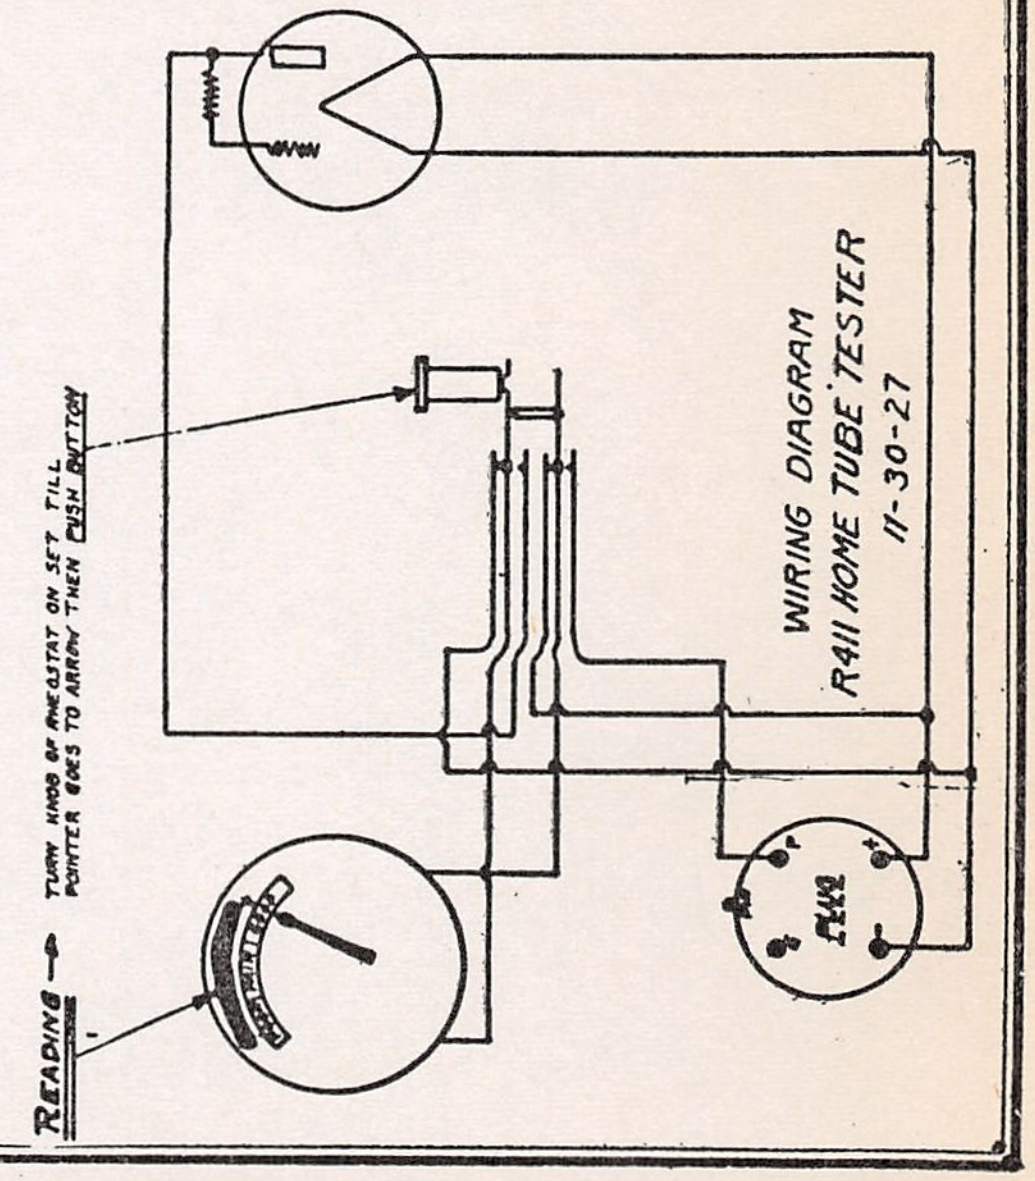
PLUG
READING
TURN KNOB OF RHEOSTAT ON SET TILL POINTER GOES TO ARROW THEN PUSH BUTTON

WIRING DIAGRAM
R411 HOME TUBE TESTER
11-30-27

STEWART-WARNER CORP.

MODEL R-101-A
R-101-B
Schematic, Voltage

Model R-101-A and R-101-B Radio Receiver

("Metropolitan" Midget)

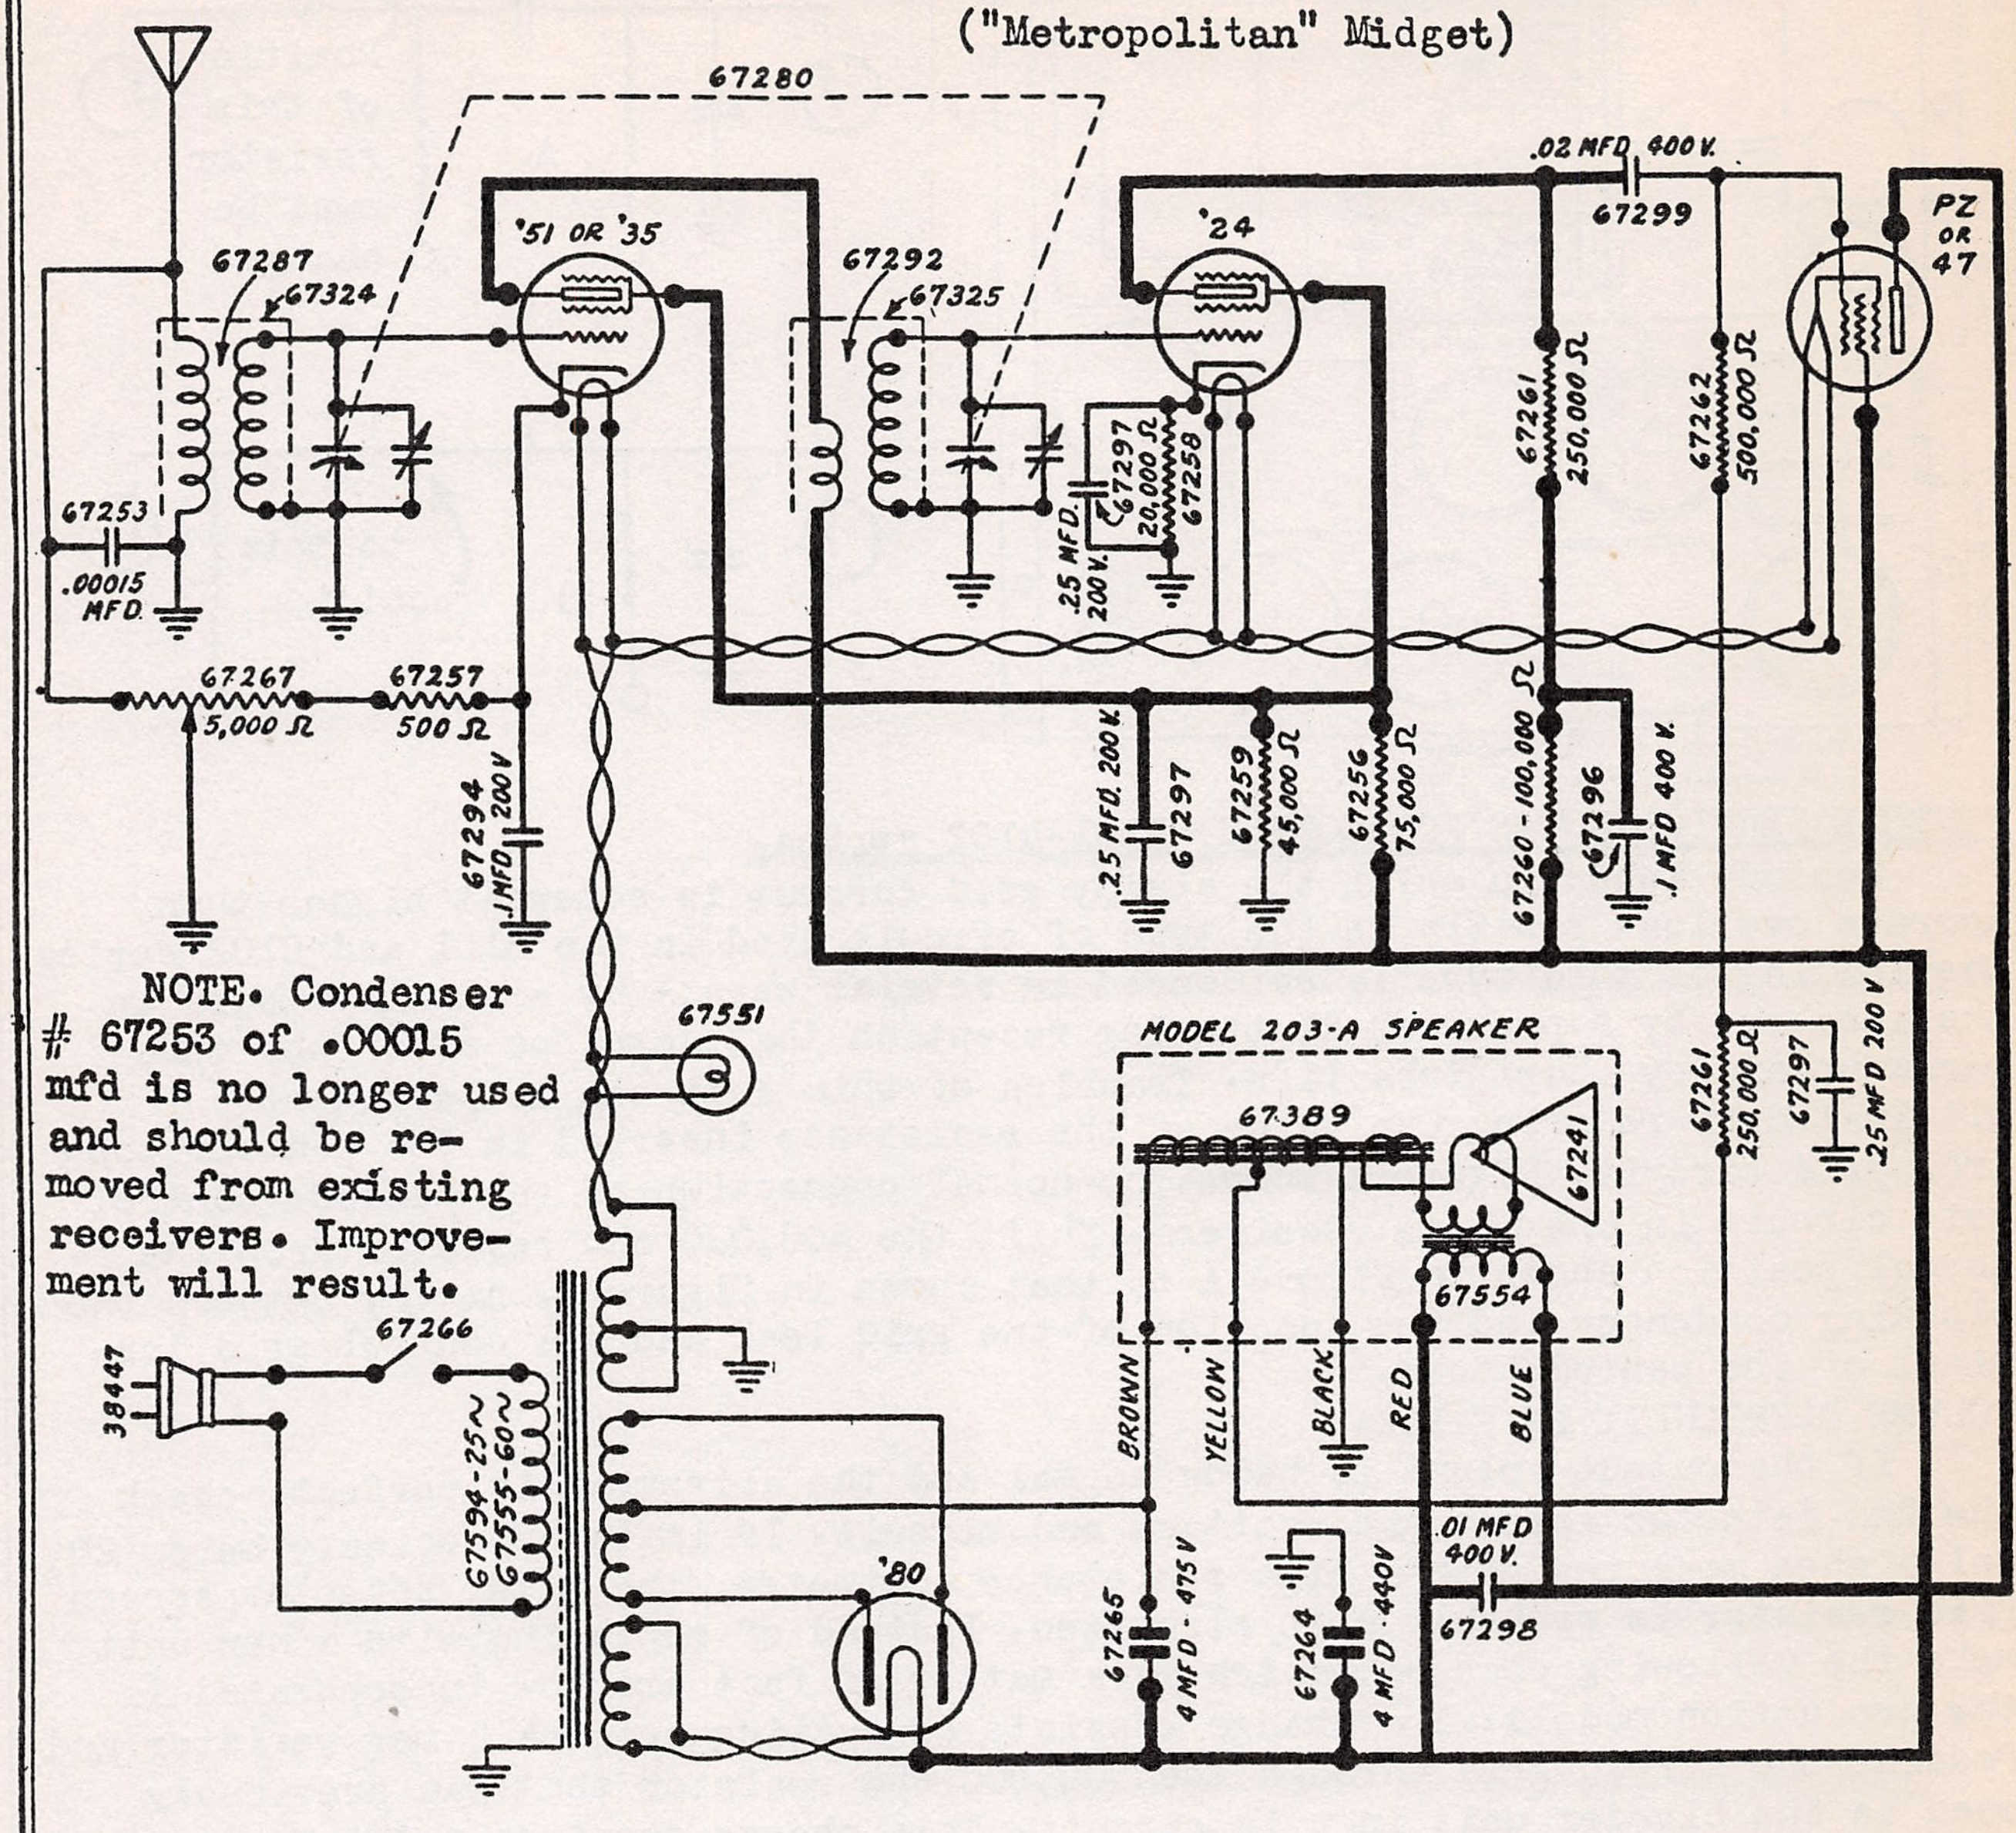
67280
'51 OR '35
'24
PZ OR 47
67287
67324
67292
67325
.02 MFD 400 V.
67299
67253
.00015 MFD.
.25 MFD. 200 V.
67297
20,000 Ω
67258
67261
250,000 Ω
67262
500,000 Ω
67267
5,000 Ω
67257
500 Ω
67294
.1 MFD 200 V
.25 MFD 200 V.
67297
67259
45,000 Ω
67256
75,000 Ω
67260 - 100,000 Ω
67296
.1 MFD 400 V.
67551
MODEL 203-A SPEAKER
67389
67241
67554
67261
250,000 Ω
67297
.25 MFD 200 V
67266
38447
67594-25~
67555-60~
'80
BROWN
YELLOW
BLACK
RED
BLUE
.01 MFD 400 V.
67298
67265
4 MFD - 475 V
67264
4 MFD - 440 V

NOTE. Condenser # 67253 of .00015 mfd is no longer used and should be removed from existing receivers. Improvement will result.

Type of Tube	Tube Circuit	Filament Voltage	Plate Voltage	Screen Grid Voltage	Bias Voltage
'51	R.F.	2.4	243	68	2.75
'24	Det.	2.4	80	68	6
PZ or '47	Output	2.4	228	243	16 *
'80	Rect.	4.8			

* This reading obtained between ground and yellow speaker lead. Direct reading from grid to ground or reading taken with a set tester will show low voltage because of high resistance in grid circuit.

All D.C. voltages are taken between socket terminals and ground with high resistance voltmeters having resistances of 1000 ohms per volt.
Line Voltage—115.
Volume Control full on.

FRONT OF SET

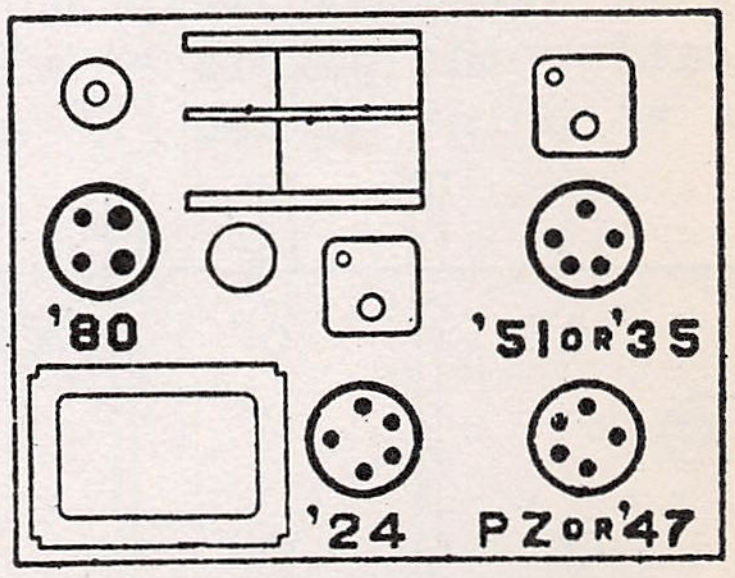
'80
'51 OR '35
'24
PZ OR '47

TUBE LOCATIONS

MODEL R-101,R-102
Service Notes

STEWART - WARNER CORP.

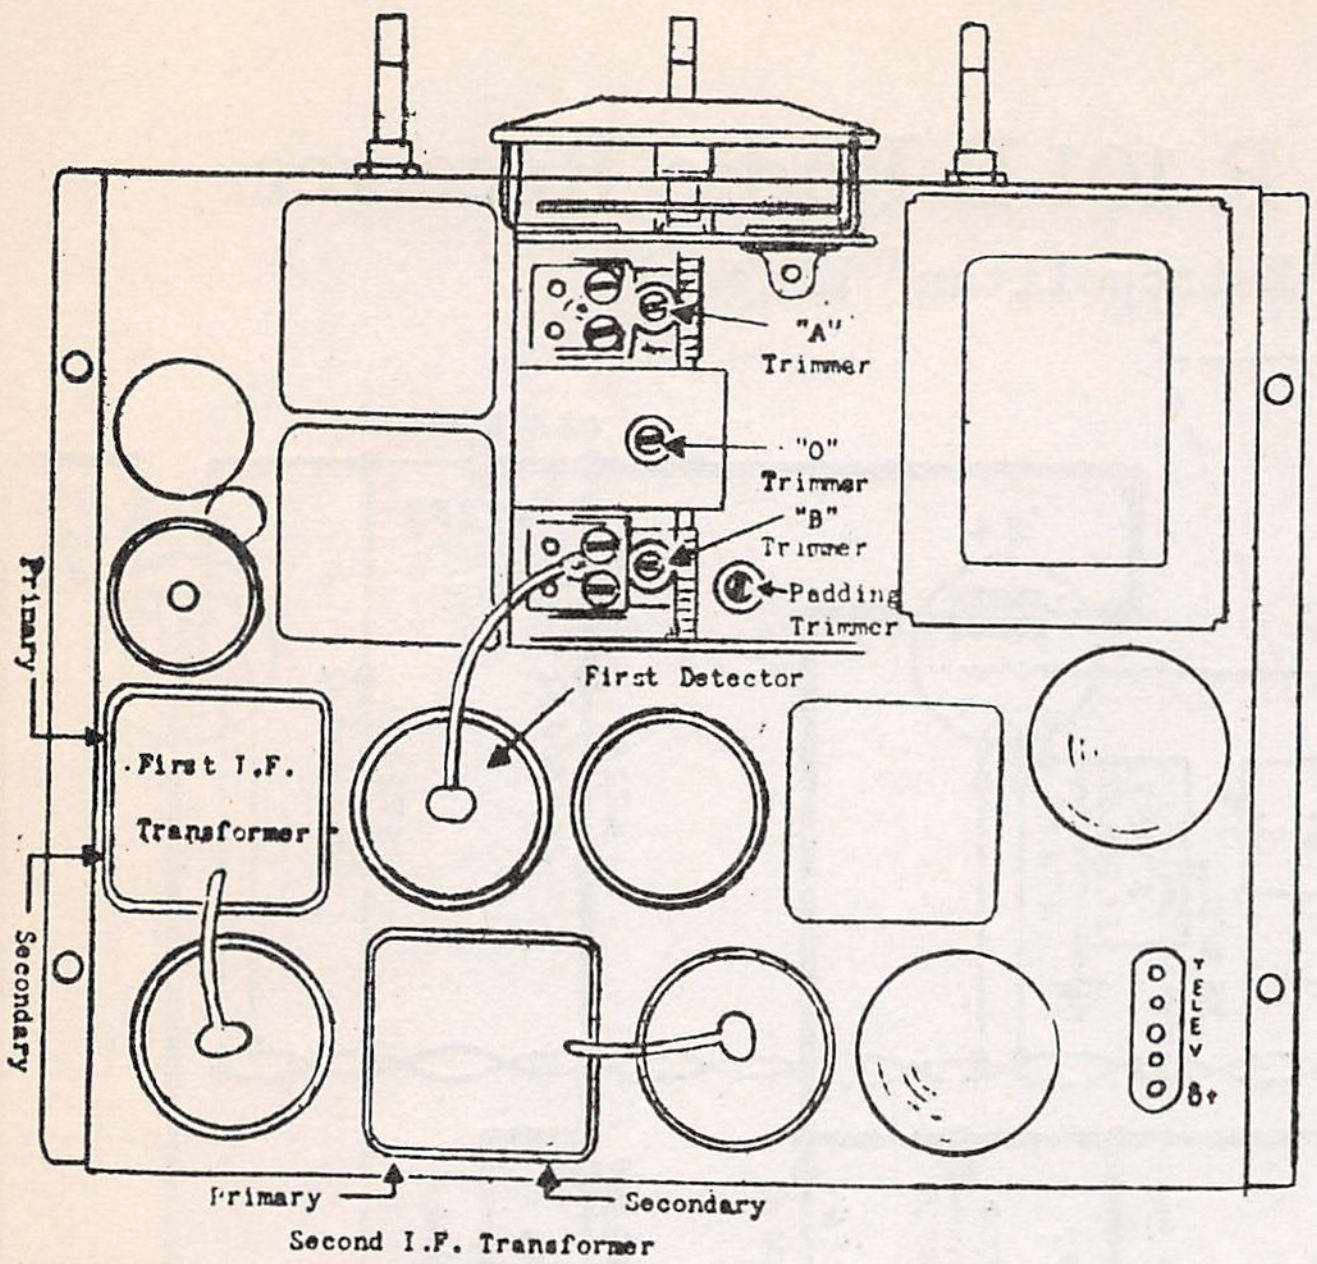
"A" Trimmer
"O" Trimmer
"B" Trimmer
Padding Trimmer
First Detector
Primary
First I.F. Transformer
Secondary
TELEV B+
Primary
Secondary
Second I.F. Transformer

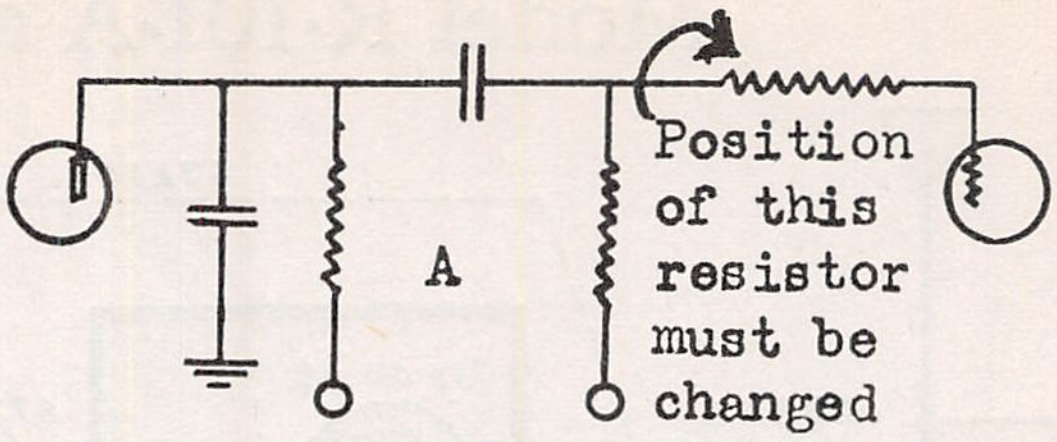
A
Position of this resistor must be changed

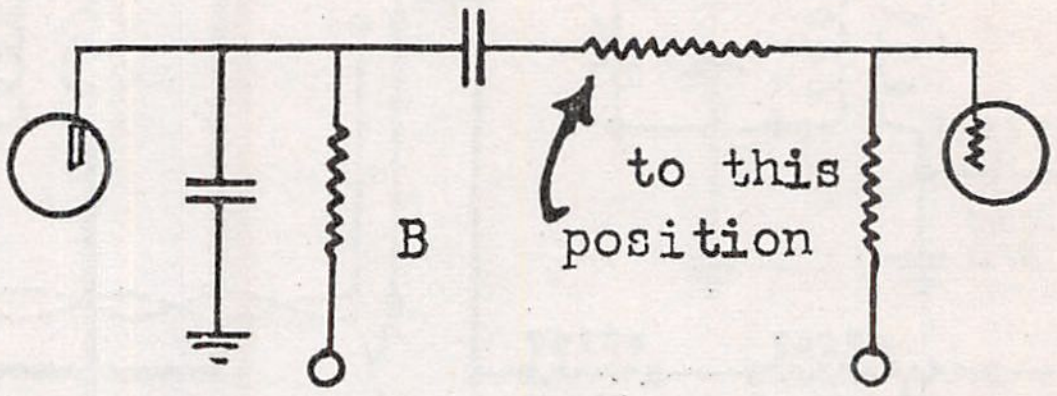
B
to this position

PENTODE SERVICE NOTES FOR MODELS R101-R102 series.

Pentode tubes in which the steady grid current is somewhat higher than average overload readily in the type of circuit used in the R101 and R102 series. Overloading of this type is evidenced in several ways;- by a distinct buzz in the speaker, by a peculiar fluttering reception that develops after the tube warms up and by short tube life. Troubles of this sort can be permanently eliminated by reducing the value of the resistance inserted in the pentode control grid circuit. Figure A shows the normal connection of the pentode control grid circuit in the above receivers. Shift the 500,000 ohm resistor from the normal position shown in figure A to that shown in figure B, namely between the blocking condenser and the junction of the grid leak and the control grid terminal of the pentode tube.

VOLUME DIFFICULTY IN R 102A.

If the output volume is below normal and the alignment is perfect, check the 2nd detector screen grid voltage and circuit. If it is appreciably below 20 volts when measured with a high resistance voltmeter, the 2 meg detector screen grid resistor is probably open circuited. Instead of replacing with a new unit, make the following changes, which as a matter of fact are now incorporated in the production models. The change consists of cutting out the 2 meg resistor and feeding the screen grid through the 500,000 ohm resistor that was previously used as the bleeder unit in this circuit. This change requires nothing more than the cutting of two wires and the soldering of two connections. This change will raise the screen grid voltage to about 30 volts. The diagrams below show the resistor terminal strip and the screen and plate circuits of the 2nd detector indicating the points at which the wires are cut and the new lead inserted. Cut wires at point marked "X" and make changes shown.

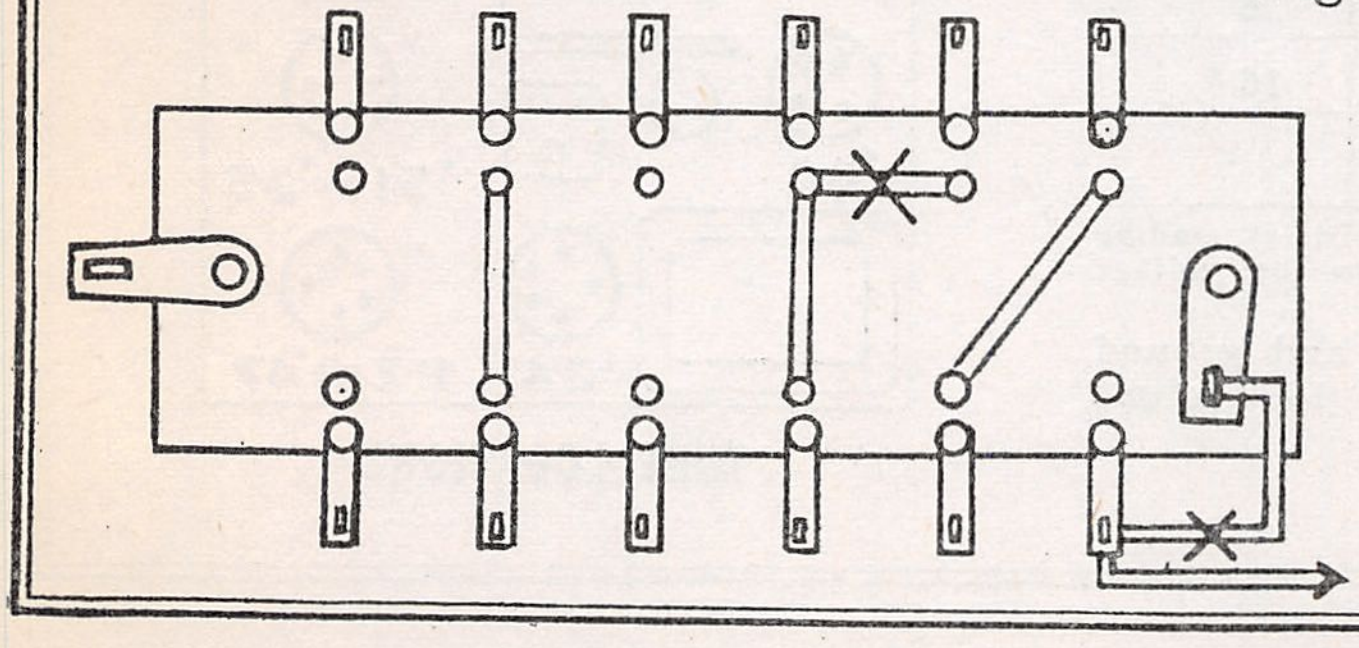

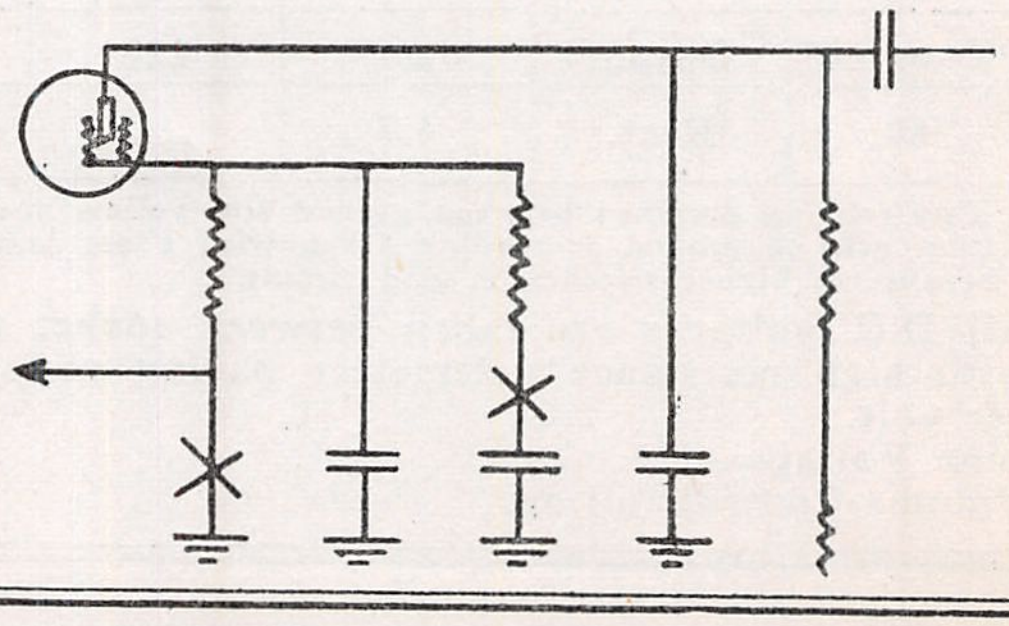

STEWART-WARNER CORP.

MODEL R-101, R-102
Service Notes

ADDITIONAL SERVICE NOTES FOR MODELS R101 and R102 Series

The following applies to oscillation troubles in the R102 series of receivers when the volume control is in an intermediate position. Tighten down all coil shields, then carefully realign the tuned circuits. This applies if the regeneration although excessive is not violently so. If the trouble is very pronounced, the aforementioned operations may not be of complete aid. In such cases the 2000 ohm suppressor resistor in the grid circuit of the oscillator tube should be cut out and shifted to the cathode circuit where it acts both as a suppressor and as a bias resistor. This resistor is the small red unit with the black end, that connects direct from the grid of the '27 oscillator tube to the oscillator coil. After disconnecting the resistor, resolder the open leads. Then remove the short bare wire from the cathode of the oscillator to the grounded lug on the padding trimmer condenser and connect the resistor between these two points.

Parasitic oscillation of the oscillator tube, evidenced by a continuous whistle, particularly upon the high frequency end of the dial is eliminated by the aforementioned change.

The phasing tool required to adjust the trimmers is part # T 70583 and is available at a cost of $.25. To align the tuned circuits it is necessary to remove the chassis. Remove the control knobs and the four hex head screws which hold the chassis in place. The speaker can be left in the cabinet since the leads are of sufficient length. The various trimmers are shown upon the chassis layout illustrated upon page 588-H. The IF transformers are of the tuned primary and tuned secondary type, each tuned by a separate trimmer. The IF trimmer adjusting screws can be reached thru small holes at the base of each shield, the primary in each case being at the left and the secondary at the right. If a commercial output meter is used it can be plugged into the television terminals, but a series condenser must be in one of the output meter leads. The test signal is fed into the 1st detector tube, the "A" lead of the oscillator being connected to the control grid, after the regular control lead has been removed. The IF peak frequency is 177.5 KC.

The RF and oscillator circuits require that the signal be fed to the receiver through the regular aerial and ground posts. Replace the control grid lead to the 1st detector. Ground the set and oscillator. Adjust the oscillator to 1400 KC. Tune the receiver to maximum output. Then reduce oscillator output until output meter reads half scale. Then tune "A" trimmer for maximum meter indication. If the output eter goes beyond full scale, REDUCE THE OSCILLATOR OUTPUT AND DO NOT CHANGE THE RECEIVER VOLUME CONTROL. Then adjast "B" and "O" trimmers for maximum output. The "O" trimmer adjustment is very critical. Then shift test oscillator frequency to 600 KC and tune receiver for maximum output. Then adjust receiver oscillator padding condenser for maximum output, RETUNING the set after each change in adjustment. Then increase test oscillator frequency to 1400 KC and carefully tune the set to this frequency. Then carefully adjust the "A", "B" and "O" trimmers for maximum output.

The following should be of interest in connection with the Models 203 and 204 speakers used in the present line of receivers. A high temperature developed by the field coil is not a sign of a defect. This is true even if the housing becomes too hot to touch, providing of course that the speaker is functioning in normal manner. This design is deliberate and proper porvision has been made to safeguard against injury of the windings.

RADIO SERVICE NOTES (R-101 & 102)

REPLACING POWER TRANSFORMERS

When replacing power transformers in Model 101 or 102 Radio Receivers, the following precautions must be observed, or the transformer is almost certain to hum badly.

After mounting the transformer but prior to clamping it tightly in place, paint the edges of the steel core of the transformer with a liberal quantity of shellac or medium thick clear lacquer to act as a binder and prevent the individual laminations from rattling. Allow the shellac to dry for several minutes and then using a heavy screw driver, tighten down the bolts with as much force as you can exert. A light screw driver will not enable you to tighten the bolts sufficiently. Do not omit the lock-washers under the screw-heads. Do not turn on the set until the binder has had a chance to dry, otherwise hum may not be eliminated.

When servicing a radio receiver in which the transformer hums, remove the two bolts holding it in position, thus loosening the transformer. It is not necessary to unsolder the leads. Drive in the fibre wedge which you will find on one side of the center leg of the core between the core and coil. This tightens the center portion of the core and prevents it from vibrating. Now paint the transformer core liberally with shellac, insulating varnish, or medium thick clear lacquer, and replace as directed above.

For humming filament transformers in Model 301 receivers, remove the two screws holding the transformer to the set and pry off the U shaped metal clamp from about the steel core, taking care that you do not bend it out of shape. Paint the edges, with particular attention to the top I section, with a liberal quantity of shellac or lacquer as in the case of power transformers and replace the U shaped clamp. If necessary, bend in the side flaps of the clamp so that they press the individual laminations together more firmly.

REPAIRING SHORT WAVE CONVERTERS HAVING POOR VOLUME

Occasionally a short wave converter may be found which is very insensitive even though all circuits check perfectly and the tubes are in good condition.

Converters of this type may frequently be made to operate satisfactorily by RESOLDERING EVERY SOLDERED CONNECTION IN THE CONVERTER, even though these connections may appear to be entirely satisfactory.

A poorly soldered connection may have sufficiently high resistance to materially affect performance on short waves, yet not high enough to show up on a simple continuity test.

MODEL 102-A,B & E
Schematic,Voltage
1st Type

STEWART-WARNER CORP.

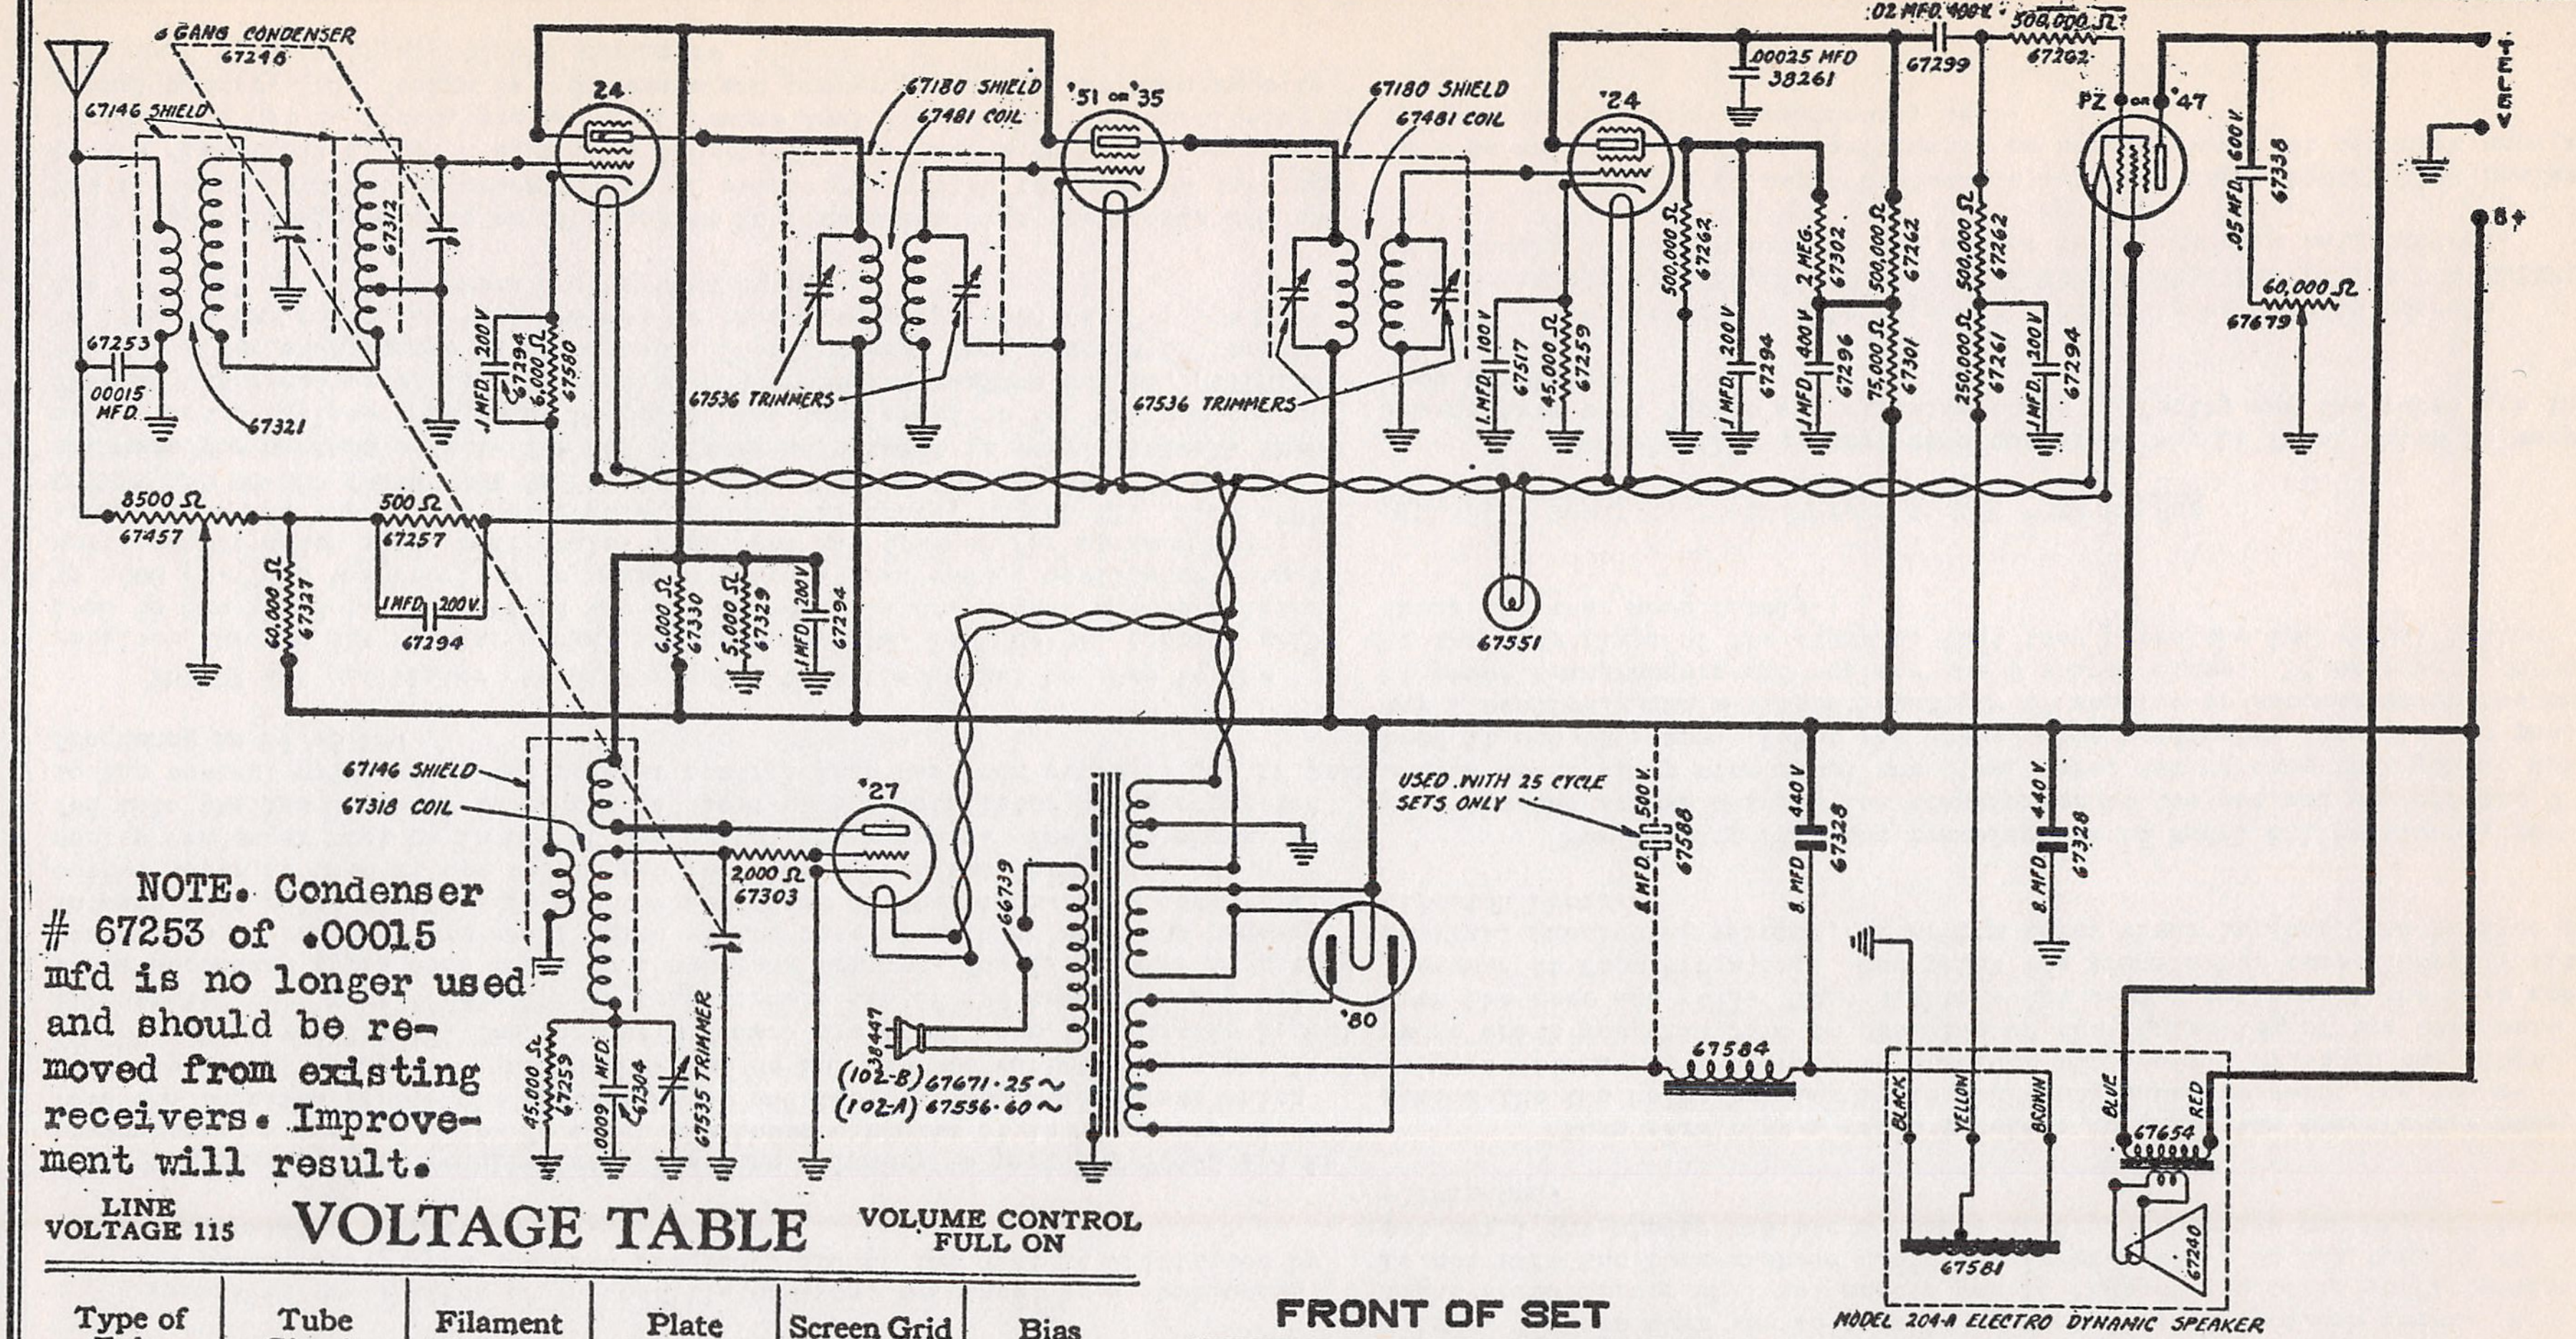
6 GANG CONDENSER 67248
67146 SHIELD
67253
.00015 MFD.
67321
67312
24
.1 MFD. 200V 67294
6,000 Ω 67580
8500 Ω 67457
500 Ω 67257
60,000 Ω 67327
.1 MFD. 200V. 67294
67180 SHIELD
67481 COIL
'51 or '35
67536 TRIMMERS
6,000 Ω 67330
5,000 Ω 67329
.1 MFD. 200V 67294
67146 SHIELD
67318 COIL
'27
2,000 Ω 67303
45,000 Ω 67259
.0009 MFD. 67304
67535 TRIMMER
66739
38447
(102-B) 67671 · 25 ~
(102-A) 67556 · 60 ~
'80
'24
.1 MFD. 100V 67517
45,000 Ω 67259
67551
.00025 MFD 38261
500,000 Ω 67262
.1 MFD. 200V 67294
2 MEG. 67302
.1 MFD. 400V 67296
500,000 Ω 67262
75,000 Ω 67301
.02 MFD. 400V. 67299
500,000 Ω 67262
250,000 Ω 67261
.1 MFD. 200V 67294
PZ or '47
.05 MFD. 600V 67338
60,000 Ω 67679
B+
USED WITH 25 CYCLE SETS ONLY
.1 MFD. 500V. 67588
.8 MFD. 440V 67328
.8 MFD. 440V 67328
67584
BLACK
YELLOW
BROWN
BLUE
RED
67654
67581
67240
MODEL 204-A ELECTRO DYNAMIC SPEAKER

NOTE. Condenser # 67253 of .00015 mfd is no longer used and should be removed from existing receivers. Improvement will result.

LINE VOLTAGE 115

VOLTAGE TABLE

VOLUME CONTROL FULL ON

Type of Tube	Tube Circuit	Filament Voltage	Plate Voltage	Screen Grid Voltage	Bias Voltage
'24	1st Det.	2.4	245	90	6.7
'27	Osc.	2.4	90		0
'51	I. F.	2.4	245	90	3
'24	2nd Det.	2.4	100	20	3
P. Z. or '47	Output	2.4	220	245	15*
'80	Rect.	4.8			

* This reading obtained between ground and yellow speaker lead. Direct reading from grid to ground or reading taken with a set tester will show low voltage because of high resistance in grid circuit.

FRONT OF SET

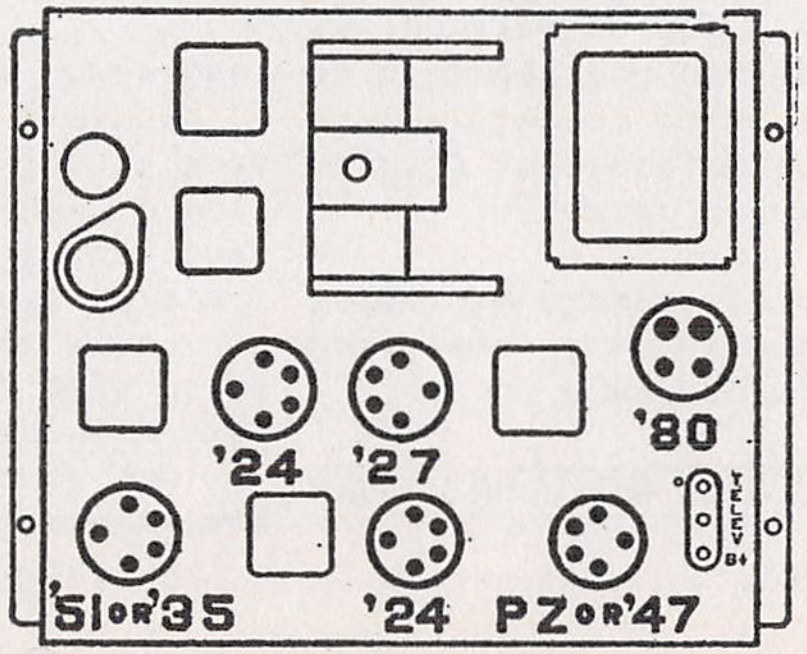
'24
'27
'80
'51 or '35
'24
PZ or '47

TUBE LOCATIONS

INTERMEDIATE FREQUENCY TRANSFORMERS TUNED TO 177.5 K. C.

Voltage data accurate at sockets

Models 102A, B & E.

STEWART-WARNER CORP.

MODEL R-102-A,B & E
Revised Schematic
Voltage.

Circuit Data of Stewart-Warner Models R-102-A, B & E.*

REVISED DIAGRAM

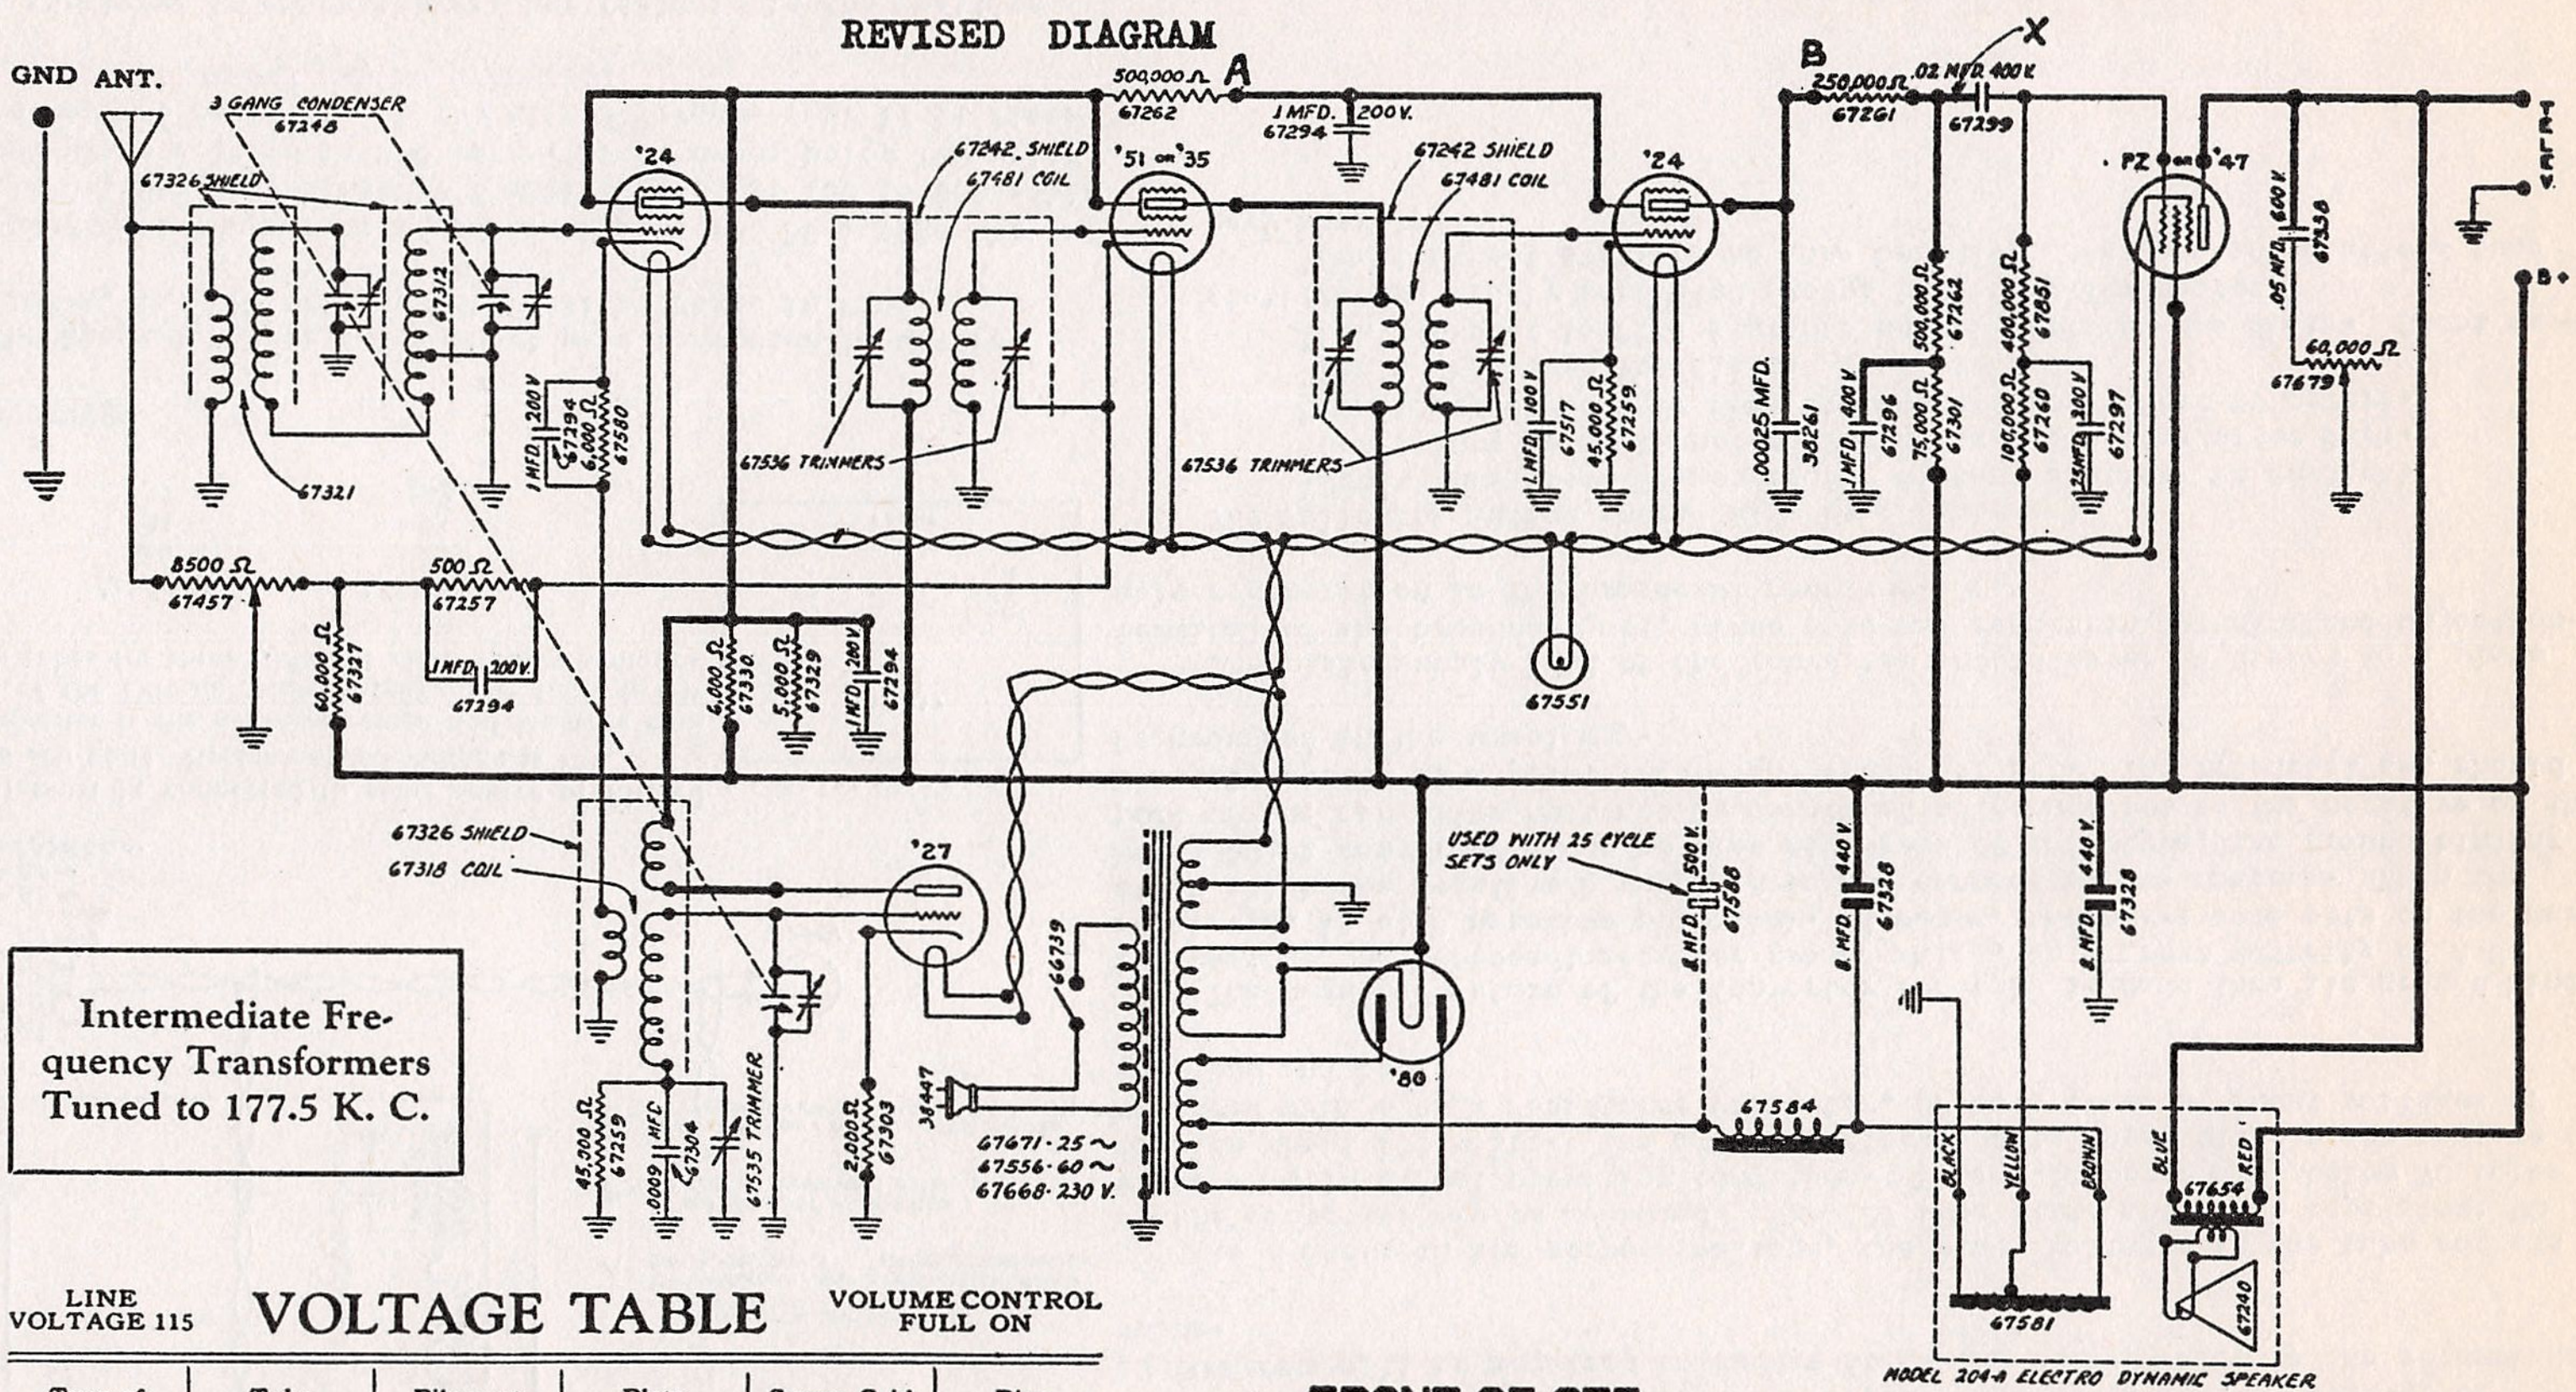
GND
ANT.
3 GANG CONDENSER
67248
67326 SHIELD
67321
67312
1 MFD. 200 V
67294
6,000 Ω
67580
'24
8500 Ω
67457
60,000 Ω
67327
500 Ω
67257
1 MFD. 200 V.
67294
6,000 Ω
67330
5,000 Ω
67329
1 MFD. 200 V
67294
500,000 Ω
67262
A
1 MFD. 200 V.
67294
67242 SHIELD
67481 COIL
'51 or '35
67536 TRIMMERS
67242 SHIELD
67481 COIL
67536 TRIMMERS
'24
1 MFD. 100 V
67517
45,000 Ω
67259
67551
B
250,000 Ω
67261
.02 MFD. 400 V.
X
67299
.00025 MFD.
38261
1 MFD. 400 V
67296
500,000 Ω
67262
75,000 Ω
67301
400,000 Ω
67861
100,000 Ω
67260
25 MFD. 200 V
67297
PZ or '47
.05 MFD. 600 V
67338
60,000 Ω
67679
B+
67326 SHIELD
67318 COIL
'27
45,000 Ω
67259
.0009 MFD
67304
67535 TRIMMER
2,000 Ω
67303
38447
66739
67671 - 25 ~
67556 - 60 ~
67668 - 230 V.
'80
USED WITH 25 CYCLE SETS ONLY
8 MFD. 500 V.
67588
8 MFD. 440 V
67328
8 MFD. 440 V
67328
67584
BLACK
YELLOW
BROWN
BLUE
RED
67654
67581
67240
MODEL 204-A ELECTRO DYNAMIC SPEAKER

Intermediate Frequency Transformers Tuned to 177.5 K. C.

LINE VOLTAGE 115

VOLTAGE TABLE

VOLUME CONTROL FULL ON

Type of Tube	Tube Circuit	Filament Voltage	Plate Voltage	Screen Grid Voltage	Bias Voltage
'24	1st Det.	2.45	250	95	6.5
'27	Osc.	2.45	95		9
'51	I. F.	2.40	250	95	3
'24	2nd Det.	2.45	70	30	7
P. Z. or '47	Output	2.45	230	250	15 ‡
'80	Rect.	4.8	170		

All D. C. voltages measured with respect to ground, using high resistance voltmeter of 1000 ohms per volt. Readings will vary, depending upon voltage range of meter, being higher for higher range instruments. This variation is most marked for second detector screen grid and plate voltages.

‡ This reading obtained between ground and yellow speaker lead. Direct reading from grid to ground or reading taken with a set tester will show about 3 volts because of high resistance in grid circuit.

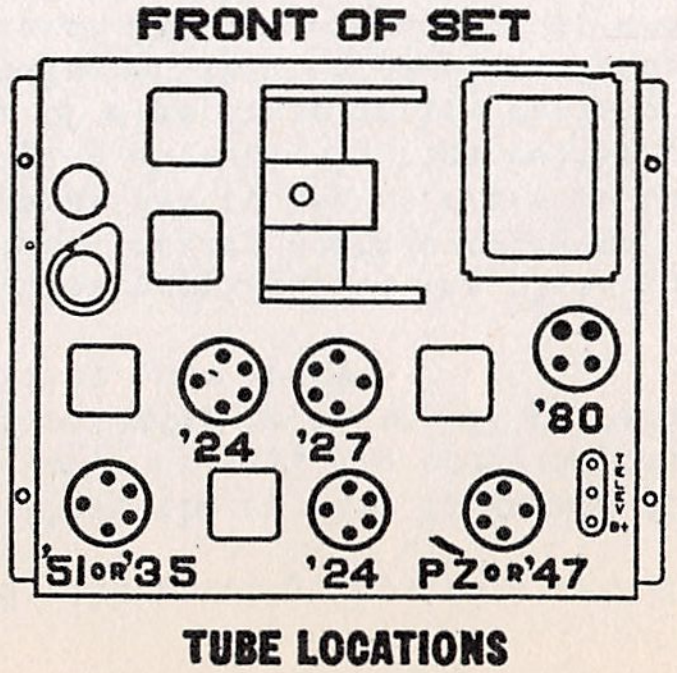
FRONT OF SET
'24
'27
'80
'51 or '35
'24
PZ or '47

TUBE LOCATIONS

*This data sheet applies to the following serial numbers only:

Model 102-A, 34,000 upwards
Model 102-B, 10,500 upwards
Model 102-E, 10,200 upwards

CHANGES IN MODELS 102 A,B,E

A. 500,000-ohm resistor changed to 1,000,000 ohms.
B. 250,000-ohm resistor omitted. 100,000-ohm resistor inserted at X
When phonograph is used, a 6000-ohm resistor is shunted across the 45,000-ohm detector bias resistor. A radio-phonograph switch has been added to the volume control, connecting the pickup when volume of set is turned off.

STEWART-WARNER CORP.

MODEL R301-A,B and E
SW Converter
Service Notes

Stewart-Warner Short Wave Converter R301-A, B, and E

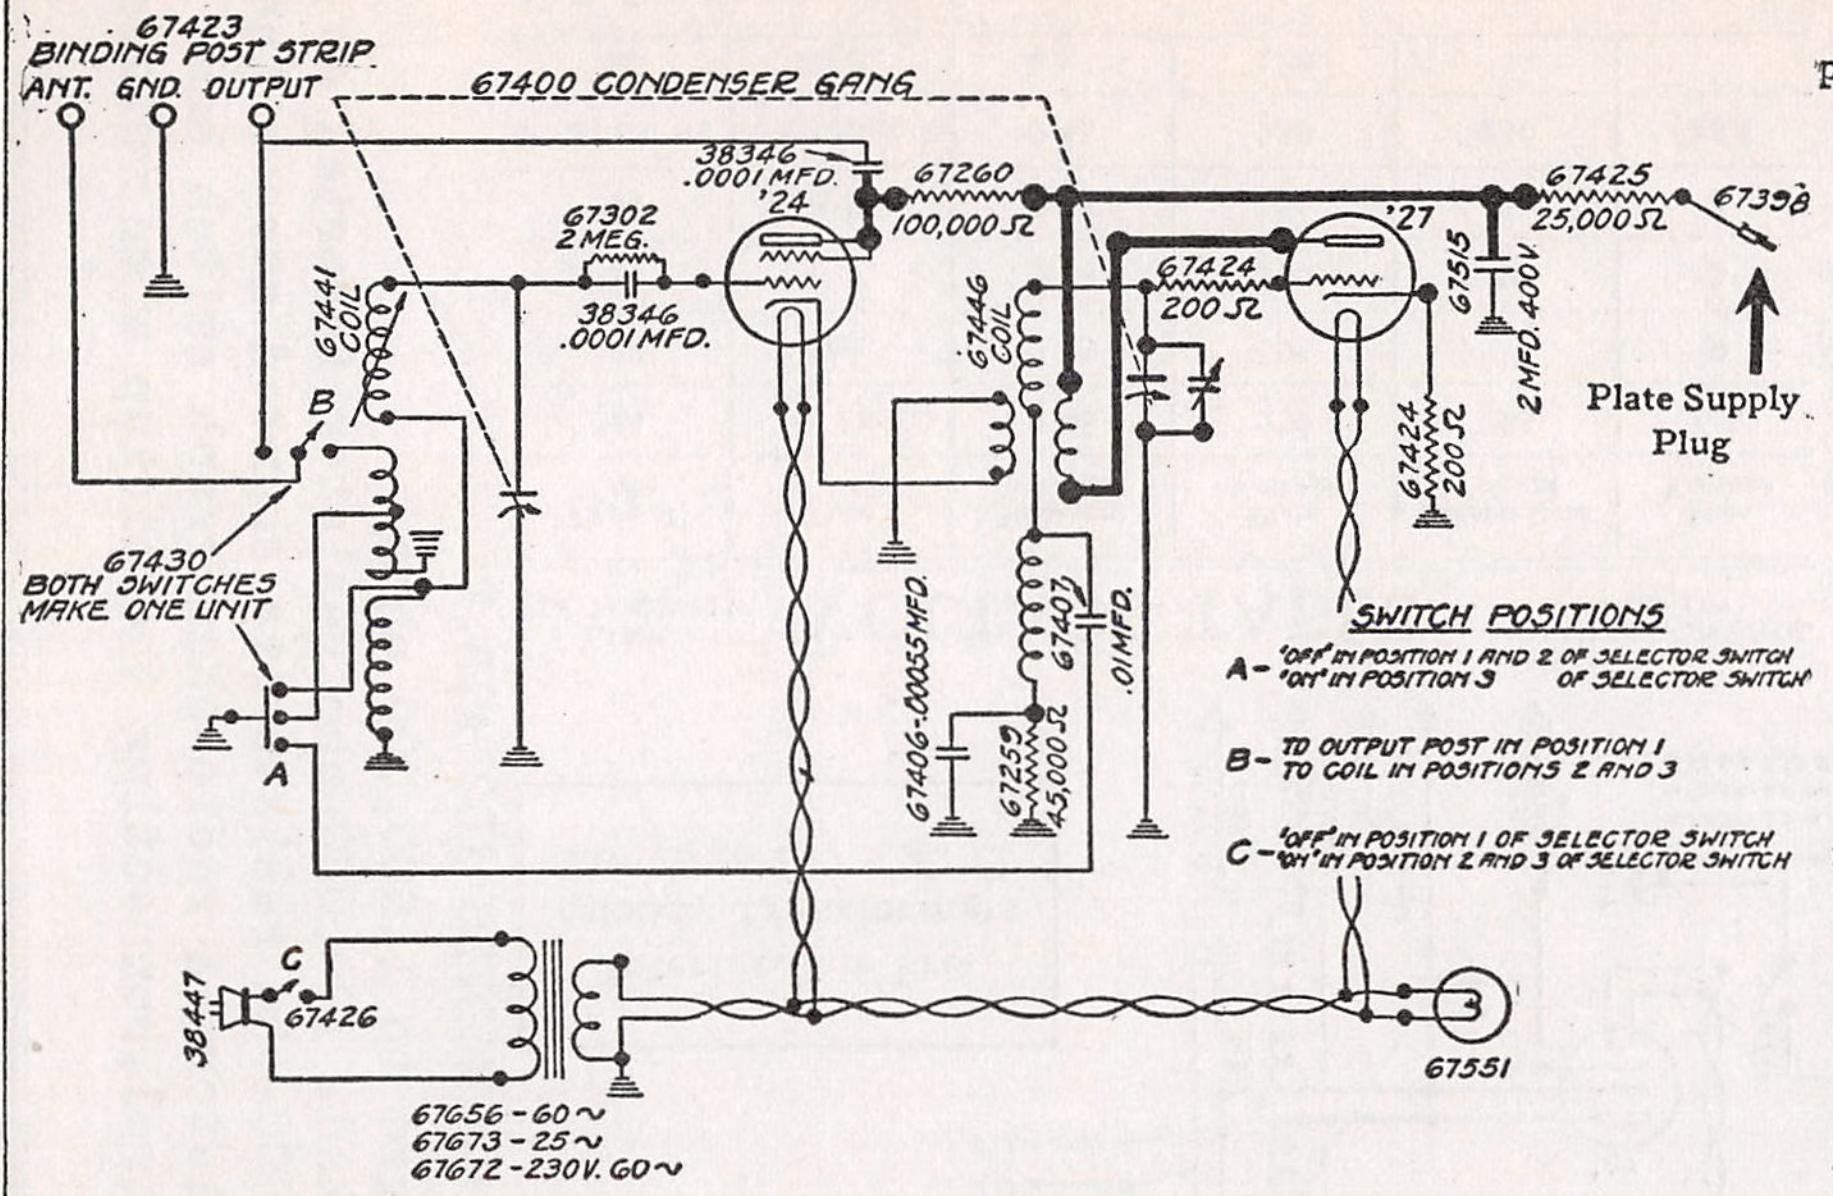
67423
BINDING POST STRIP
ANT. GND. OUTPUT
67400 CONDENSER GANG
38346 .0001 MFD.
67260 100,000 Ω
'24
67302 2 MEG.
38346 .0001 MFD.
67441 COIL
B
67430 BOTH SWITCHES MAKE ONE UNIT
A
67446 COIL
67406-.00055 MFD.
67259 45,000 Ω
67407
.01 MFD.
67424 200 Ω
'27
67515
2 MFD. 400 V
67425 25,000 Ω
67398
Plate Supply Plug
67424 200 Ω
SWITCH POSITIONS
A - 'OFF' IN POSITION 1 AND 2 OF SELECTOR SWITCH
'ON' IN POSITION 3 OF SELECTOR SWITCH
B - TO OUTPUT POST IN POSITION 1
TO COIL IN POSITIONS 2 AND 3
C - 'OFF' IN POSITION 1 OF SELECTOR SWITCH
'ON' IN POSITION 2 AND 3 OF SELECTOR SWITCH
C
38447
67426
67656 - 60~
67673 - 25~
67672 - 230V. 60~
67551

Plate supply plug (#67398) must be connected to some source of filtered D.C. at a potential of 180 to 280 volts. **Recommended voltage is 250.** The Ground Post of the converter is the negative return and must be connected to the negative side of the external plate supply. The table below gives plate voltages at both tubes for three different plate supply voltages.

Plate Supply Voltage	'24 Plate	'27 Plate
180	26	70
250	34	93
280	37	102

Models R301A-B-E, R302A-B-E (1931-32)

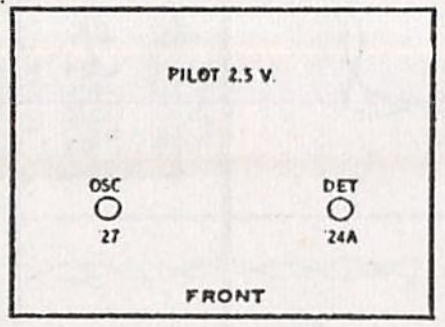
PILOT 2.5 V.
OSC
27
DET
24A
FRONT

NOTES ON SHORT WAVE CONVERTER

When connecting the Stewart Warner 301 A short wave converter to any receiver other than the 102-A, the following points must be borne in mind.

The plate supply plug must connect to a source of filtered DC inside the radio receiver that will deliver approximately 6 milliamperes at 180 to 280 volts although the recommended plate voltage is 250 volts. If it drops below 180 volts the '27 oscillator tube may not oscillate at the higher frequencies. If it rises above 280 volts parasitic oscillations may be produced.

In this broadcast receivers in which the speaker field is in the positive side of the plate supply, a connection to the high voltage side of the speaker field will usually prpvide a satisfactory source of plate potential.

Where the speaker field and filter choke are in the negative side of the plate power supply, the correct positive potential for the short wave converter can frequently be taken off conveniently at the filament terminal of the 280 rectifier tube socket.

When tapping into the plate supply of any broadcast set, make certain that no resistors are being overloaded by the added drain of the converter. It is always safest to tap as close to the output of the filter as possible. Should this give excessively high voltage, it may be cut down to the correct value by means of a separate series resistor, capable of carrying 6 milliamperes safely. The value of this external resistor will be roughly 175 ohms for every volt in excess of 250. For example, if the B supply voltage is 350, a resistor of 17,500 ohms will be required to reduce it to 250 volts, which is the recommended value.

As a check on the correct voltage, the plate voltages at the tube sockets of the converter may be measured. The '27 tube plate should be kept about 90 volts when in normal operating condition. It should never drop below 70 volts or rise about 105 volts. The attached circuit data sheet gives plate voltage as measured with a high resistance voltmeter, of both tubes at input voltages of 180, 250 and 280.

The negative return of the Converter B supply is made thru its ground binding post to the broadcast receiver ground which, in a great majority of A.C. receivers, is at B negative potential. However, there are some sets on the market in which the negative B supply does not connect to the chassis. When the Model 301-A converter is to be used with sets of this type, the ground binding post of the converter must not be connected to ground but to the negative of the B supply system at a point inside the broadcast set. The broadcast set should be grounded in the usual way.

The plate supply lead of the converter should never go direct to a plate terminal of the broadcast set, since this may result in detuning and objectionable regeneration in the broadcast receiver.

The following advice should also be of interest:

"Don't tune above 33 meters for distant stations in daylight.
"Don't tune below 25 meters for distant stations after dark.
"Don't expect to hear many distant stations above 50 meters.
"Don't skim over the dials. Tune slowly.
"Don't expect to find stations on all parts of the dials. Short wave stations are widely separated except in a very few places.
"Don't expect stations to tune broadly. Most distant stations tune very sharply.

MODEL 10-11
Resistance Data

STROMBERG - CARLSON TEL. MFG. CO.

All tubes out of socket and AC plug removed from power supply line. Speaker plug removed from speaker socket. Phone switch in radio position

From Chassis To	Correct		Incorrect
Aerial	Condenser		
1 RF Control Grid to Input Tuning Condenser Stator	9.2	ohms	Coupling condenser
1 RF Control Grid	900-1100	ohms	Volume Control BC- 500 ohm unit-Y TC- 1 rf Cg-Y
1 RF Cathode	0	ohm	
1 RF Screen Grid	5,900	ohms	BC- 1 rf Sg-Y (.3 mfd)
1 RF Plate	11, 610	ohms	BC-1 rf Tr-Y (.3 mfd) BC- VD 80 P wdg BC- 2 rf P-Y (.3 mfd) BC- 3 rf P-Y (.3 mfd)
2 RF Control Grid	100,530	ohms	BC- 2 rf Cg wdg-Y See 1 RF Control Grid
2 RF Cathode	0	ohm	
2 RF Screen	6,500	ohms	BC- 2 rf Sg-Y (.3 mfd) BC- 1 rf Sg-Y (.3 mfd)
2 RF Screen to 3 RF Screen	0	ohm	
2 RF Plate	9,661	ohms	BC- 2 rf P wdg-P (.3 mfd) BC- 600 ohm unit-Y(.3mfd) See 1 RF Plate
2 RF Plate to 3 RF Plate	22	ohms	
Detector Control Grid	5,100,000	ohms	TC-Y Grid condenser BLC- rf grid wdg-Y(.04mfd)
Detector Cathode	20,000	ohms	BC- DK-Y (.6 mfd -1. mfd)
Detector Screen Grid	16,500	ohms	BC-D Sg-Y (.3 mfd
Detector Plate to '80 Fil	51,078	ohms	
Detector Plate	64,653	ohms	BC- DP-Y (.0001 mfd) BC- AF Tr-Y (1 mfd) FC- '80 F -'80 P wdg BC- VD-Y FC- Filter chk-80 p wdg
3 RF Control Grid	942	ohms	BC-500 ohm unit-Y (3.mfd) TC- 3 rf Cg-Y
3 RF Cathode	0	ohms	
3 RF Screen Grid	6,500	ohms	See 2 RF Screen
3 RF Plate	9,661	ohms	See 2 RF Plate See 1 RF Plate

'45 Control Grid	6,400	ohms	
'45 Control Grid to Control Grid	11,400	ohms	Shunt Condenser
'45 Control Grid to '45 Fil	6,650	ohms	
'45 Plate to '45 Plate	406	ohms	Halves of windings are not equally divided
'45 Plate to '80 Fil	350-700	ohms	
'80 Fil to '80 P	15,185	ohms	See Detector Plate

Output Transformer Secondary only	1.6ohms
RF and Detector Filament to Ground	0 resistance
Input winding only	4.6ohms
Secondary winding	4.6ohms
Broad Band Transformer Primary winding	1,960 ohms
Broad Band Transformer Secondary winding	81 ohms
2nd RF Plate Winding only	11 ohms
Secondary of second bi-resonant circuit	4.6ohms
3 RF Grid Winding only	4.6ohms
Input AF Transformer primary alone	11,090 ohms
Resistance across input AF transformer primary	250,000 ohms

STROMBERG-CARLSON--Models 10 and 11
Line Voltage 120—Voltage Tap High

Tube No. in Order Tested	Type of Tube	Position of Tube in Set	Meter Readings with Jewell Test Plug in Socket of Set									
			Operating Voltages					Milliamperes				
			Filament or Heater	Plate or Anode	Control Grid-Space	Normal Grid-Screen	Cathode to Heater	Screen	Plate	Tube Test	Plate Current Change	
1	224	1 R.F.	2.4	135	2.5	80						
2	224	2 R.F.	2.4	135	2.5	80						
3	224	3 R.F.	2.4	135	2.6	80						
4	224	Det.	2.4	200	-	75						
5	245	PP-AF	2.4	235	-	45						
6	245	PP-AF	2.4	235	-	45						
7	280	Rect.	4.8	-	-	-						
8												
9												
10												

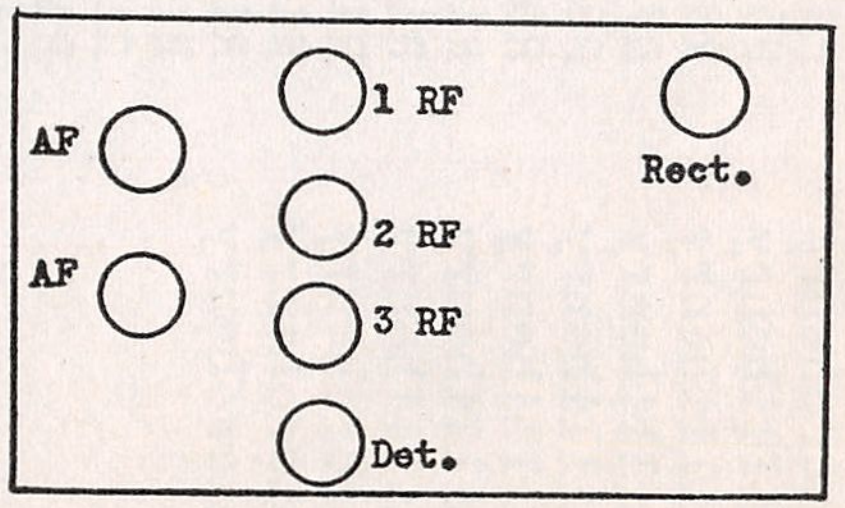

MODEL 19,20 AC
Voltage
Electrical Values

STROMBERG - CARLSON TEL. MFG CO.

INDUCTANCES

L1	.9	millihenry
L2	215.	microhenry
L3	215.	microhenry
L4	5.5	millihenry
L5	215.	microhenry
L6	5.5	millihenry
L7	5.5	millihenry
L8	5.5	millihenry
L9	5.5	millihenry
L10	5.5	millihenry
L11	5.5	millihenry
L12	5.5	millihenry
L19	15.	microhenry
L20	5.5	microhenry
L21	172.	microhenry

RESISTANCES

No.	Value	Body	Tip	Dot
R1	500	Green	Blk	Brn
R2	600	Blue	Blk	Brn
R3	600	Blue	Blk	Brn
R4	3	(Wire wound)		
R5	10 megs	Brn	Blk	Blue
R6	100,000	Brn	Blk	Green
R7	750	(Wire wound)		
R8	10	(Wire wound)		
R9	500	Green	Blk	Brn
R10	6,500	Blue	Green	Red
R11	6,500	Blue	Green	Red
R12	60,000	Blue	Blk	Orange
R13	1,575	(Wire wound)		
R14	900	(Wire wound)		
R15	1,000	(Wire wound)		
R16	60	(Wire wound)		
R17	30,000	Orange	Blk	Orange
R18	400	(Wire wound)		
R19	100,000	Carbon potentiometer		

CONDENSERS

C2	.0004	mfd	max.
C3	.0004	mfd	max.
C4	.04	mfd	
C5	.000001	mfd	app.
C6	.3	mfd	
C7	.3	mfd	
C8	.0004	mfd	max.
C11	.3	mfd	
C12	.3	mfd	
C15	.3	mfd	
C16	.3	mfd	
C17	.00025	mfd	
C18	.001	mfd	
C20	.002	mfd	
C21	.6	mfd	
C22	.2	mfd	
C23	.04	mfd	
C24	.001	mfd	
C26	.0004	mfd	max.
C28	.3	mfd	
C29	.001	mfd	
C30	.01	mfd	
C31	.01	mfd	
C32	2.	mfd	
C33	2.	mfd	
C34	3.	mfd	
C35	3.	mfd	
C36	1.	mfd	
C36	4.	mfd	(25 cy.)
C37	1.	mfd	
C38	1.	mfd	

TABLE 4.

Normal Voltage Readings

(Be sure to make these readings with the Meter and Scale indicated, otherwise the results will not agree with those tabulated. Alternating voltages are indicated by italics)

Voltage	Meter	Scale	Where Measured	Approx. Value in Volts
Heater Voltage Nos. 227 & 235 Tubes	A.C.	0-4	Across Heater Terminals of Sockets	*2.4*
Filament Voltage No. 245 Tubes	A.C.	0-4	Across Filament Terminals of Audio Output Sockets	*2.4*
Filament Voltage No. 280 Tube	A.C.	0-6	Across Filament Terminals of Rectifier Socket	*4.8*
Plate Voltage Radio Amplifiers	D.C.	0-250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (−)	150-170
Plate Voltage Mixer Tube	D.C.	0-250	Between Plate Terminal Mixer Tube Socket (+) and Chassis Base (−)	150-170
Plate Voltage Oscillator	D.C.	0-250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (−)	85-90
Plate Voltage I.F. Tubes	D.C.	0-250	Between Plate Terminals of I. F. Amplifier Sockets (+) and Chassis Base (−)	150-170
Plate Voltage Demodulator	D.C.	0-250	Between Plate Terminal of Demodulator Socket (+) and Chassis Base (−)	190-215
Plate Voltage Audio Output Tubes	D.C.	0-250	Between Plate Terminals Audio Output Socket (+) and 10 ohm Mid Tap Resistor R_6(−)	250
Control Grid Voltage R.F Amplifier	D.C.	0-10	Between Control Grid Clip of R. F. Amplifier Tube (−) and Cathode (+) of R. F. Amplifier Tube	3
Control Grid Voltage Mixer Tube	D.C.	0-250	Between Control Grid Clip Mixer Tube (−) and Cathode (+) of Mixer Tube	10-12
Control Grid Voltage 1st I.F. Amplifier	D.C.	0-10	Between Control Grid Clip 1st I. F. Tube (−) to Cathode (+) of 1st I. F. Tube	3
Control Grid Voltage 2nd I.F. Tube	D.C.	0-10	Between Control Grid Clip 2nd I. F. Tube (−) to Cathode (+) of 2nd I. F. Tube	3
Grid Voltage Oscillator	D.C.	0-250	Across 6500 ohm Resistor R_{10}	10-15
Grid Voltage Demodulator	D.C.	0-250	Across 30,000 ohm Resistor R_{17}	20-25
Grid Voltage Audio Tubes	D.C.	0-250	Between Grids of Audio Tubes (−) to Mid Tap 10 ohm Resistor R_6 (+)	45-50*
Screen Voltage Radio Amplifier Mixer 1st & 2nd I.F. Tubes	D.C.	0-250	Between Screen Terminals of Tubes (+) to Chassis Base (−)	80-90*
B Voltage R.F. Amplifier and Mixer Tube	D.C.	0-250	Between Tube Side of 600 ohm Resistor R_2 and Chassis Base	150-170*
B Voltage 1st & 2nd I.F. and Mixer Tubes	D.C.	0-250	Between "High" Side of Voltage Divider and Chassis Base	150-170*
B Voltage Audio Tubes	D.C.	0-250	Between Mid Tap of Audio Output Transformer (+) and Chassis Base (−	300
C Voltage Audio Output Tubes	D.C.	0-250	Across 750 ohm Biasing Resistor R_7	50
Speaker Field Voltage	D.C.	0-250	Across Small Pins of Speaker Connecter Socket	160-170
Plate Voltage A.C. Pere Anode No. 280 Rectifier	A.C.	See Remarks	Between P Terminals No. 280 Rectifier Socket and Chassis Base	*325-350*†

*These voltage vary with dial setting and position of volume control.

Cannot be measured on Weston Model 528 Meter unless multiplier is used.

MODEL 19,20 AC
Resistance Data

STROMBERG - CARLSON TEL. MFG. CO.

All tubes removed from sockets and AC plug disconnected from power supply. Speaker plug removed from speaker socket. Volume control maximum unless otherwise stated. See Notes.

From Chassis To	Correct		Incorrect
RF Control Grid	504.9	ohms	BC- rf Cg wdg-Y
RF Cathode (V.C.Max)	60	ohms	BC- if K-Y (.3 mfd)
RF Cathode (V.C.Min)	1,060	ohms	
RF Screen Grid	2,560	ohms	BC- rf Sg-Y (.3 mfd) BC- if Sg-Y (.3 mfd)
RF Plate	4,179	ohms	BC- rf P-Y (.3 mfd) BC- if P wdg-Y (.3 mfd) FC- if P wdg-Y (1. mfd)
Mixer Tube Control Grid	4.9	ohms	TC- Mixer Cg-Y
Mixer Cathode	6,560	ohms	BC-Osc Coupling Coil-Y See RF Cathode
Mixer Screen Grid	2,560	ohms	See RF Screen
Mixer Plate	4,179	ohms	See RF Plate TC- if Tr Primary
Mixer Plate to RF Plate	88	ohms	
1 IF Control Grid	42.3	ohms	TC- 1 if Cg-Y
1 IF Cathode	60	ohms	See RF Cathode
1 IF Screen Grid	1,960	ohms	See RF Screen
1 IF Plate	3,579	ohms	BC- 1 if P wdg-Y See Mixer Plate
1 IF Plate to 2 IF Plate	90.5	ohms	
2 IF Control Grid	45.3	ohms	TC- 2 if Cg-Y
2 IF Cathode	60	ohms	BC- 2 if K-Y (.3 mfd)
2 IF Screen	1,960	ohms	See RF Screen
2 IF Plate	3,580	ohms	See 1 IF Plate
Demodulator Control Grid	10,100,000	ohms	TC- grid condenser-Y BC- grid wdg-Y (.001 mfd)
Demodulator Cathode	30,000	ohms	BC- Dem K-Y (2 mfd)
Demodulator Plate to 80 Fil	51,040	ohms	
Demodulator Plate to Chassis	0	ohm	BC- AF Tr wdg-Y (2 mfd) FC- Filter chk-Y (3 mfd) BC- AF Tr wdg- Dem K BC- Dem P- Dem K-
'45 Control Grid	4,340-5,350	ohms	Split windings do not have equal resistance
'45 Control Grid to '45 Fil	5,100-6,000	ohms	
'45 Plate to Plate	425	ohms	Tone Control condenser
'45 Plate to 80 Fil	500-525	ohms	
Output Transformer secondary only	1.4	ohms	
Oscillator Control Grid	502	ohms	Oscillator winding is tapped
Oscillator Cathode	6,500	ohms	BC- Osc K-Y (.001 mfd)
Oscillator Plate to RF Screen	1.2	ohms	
RF Mixer- IF and Demodulator Filament to chassis	0	ohm	
Across AC plug (LO)	4.1	ohms	
Across AC plug (HI)	4.5	ohms	
AC plug to chassis	0	ohm	FC- across primary

MODEL 22,22-A
Chassis Wiring

STROMBERG-CARLSON TEL. MFG. CO.

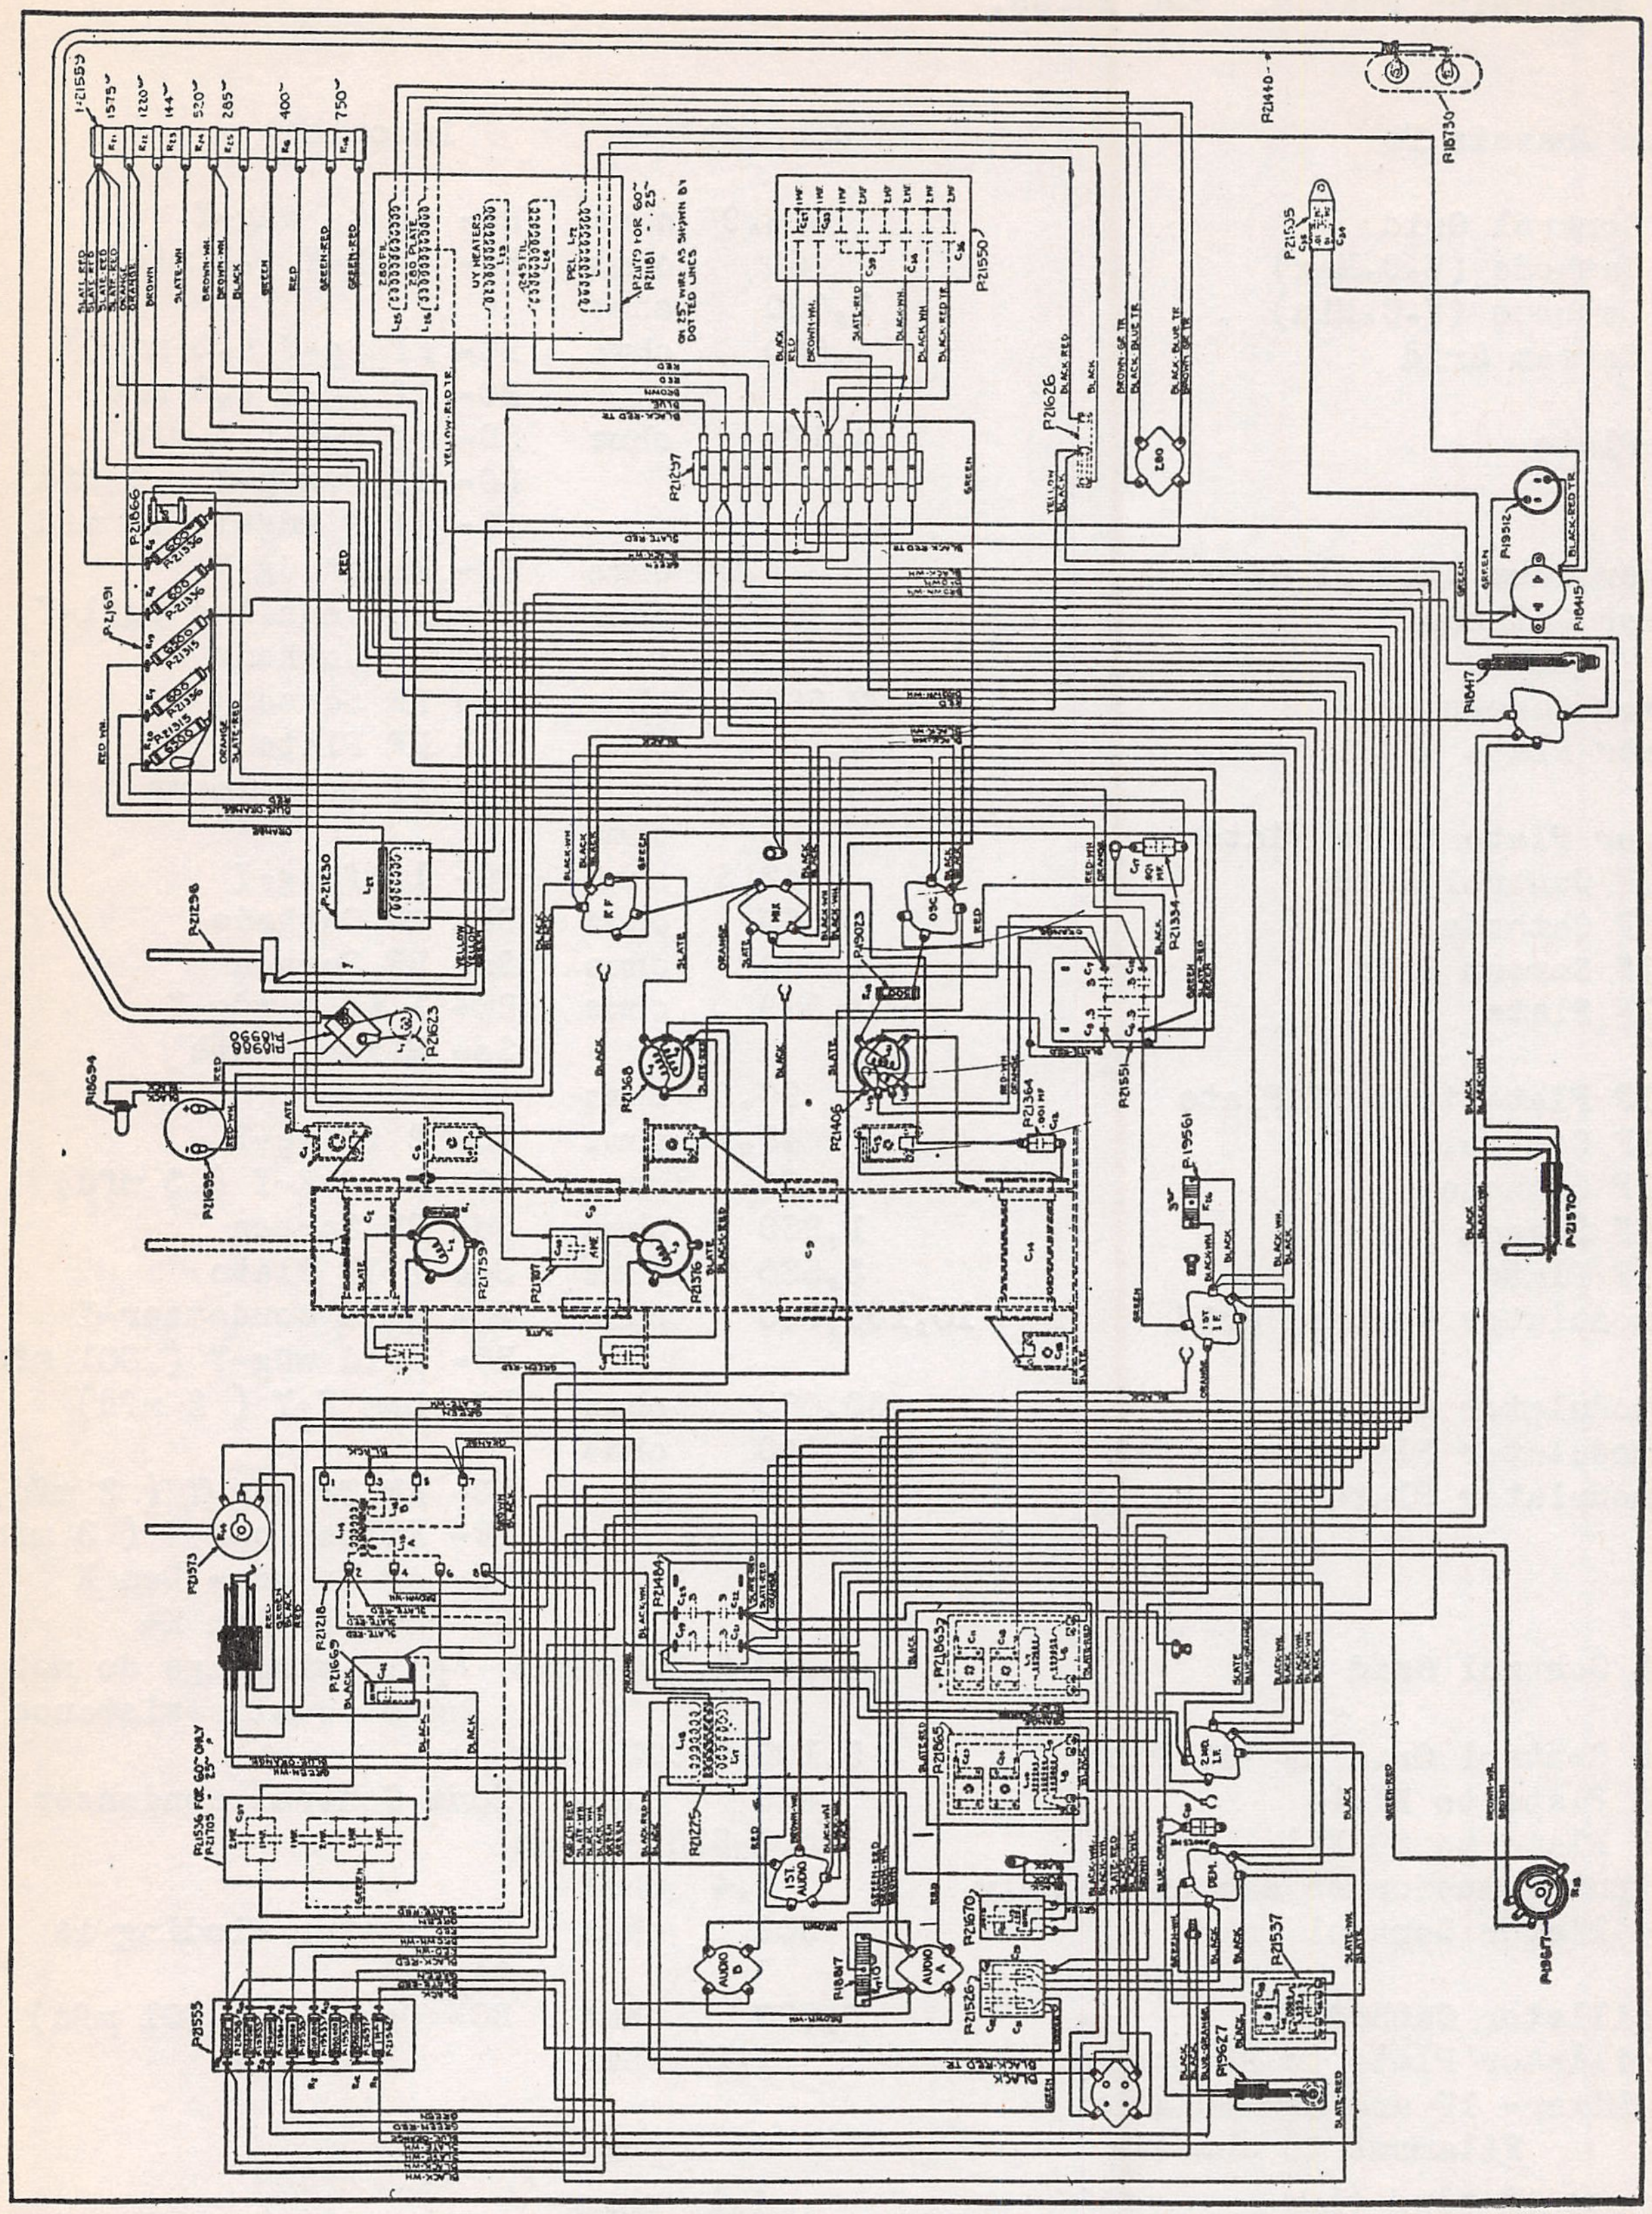
R.F.
MIX
OSC
1ST I.F.
2ND I.F.
1ST AUDIO
AUDIO A
AUDIO B
DET.
GREEN
BLACK
RED
SLATE
ORANGE
BROWN
YELLOW
P21559
P21550
P21626
P21535
P21440
P18730
P19512
P18645
P18647
P21666
P21691
P21296
P21230
P21623
P18694
P21695
P21368
P21406
P21384
P21551
P19561
P21570
P21759
P21573
P21669
P21484
P21275
P21670
P21537
P21553
P19627
P18187

MODEL 22,22-A
Schematic

STROMBERG - CARLSON TEL. MFG. CO.

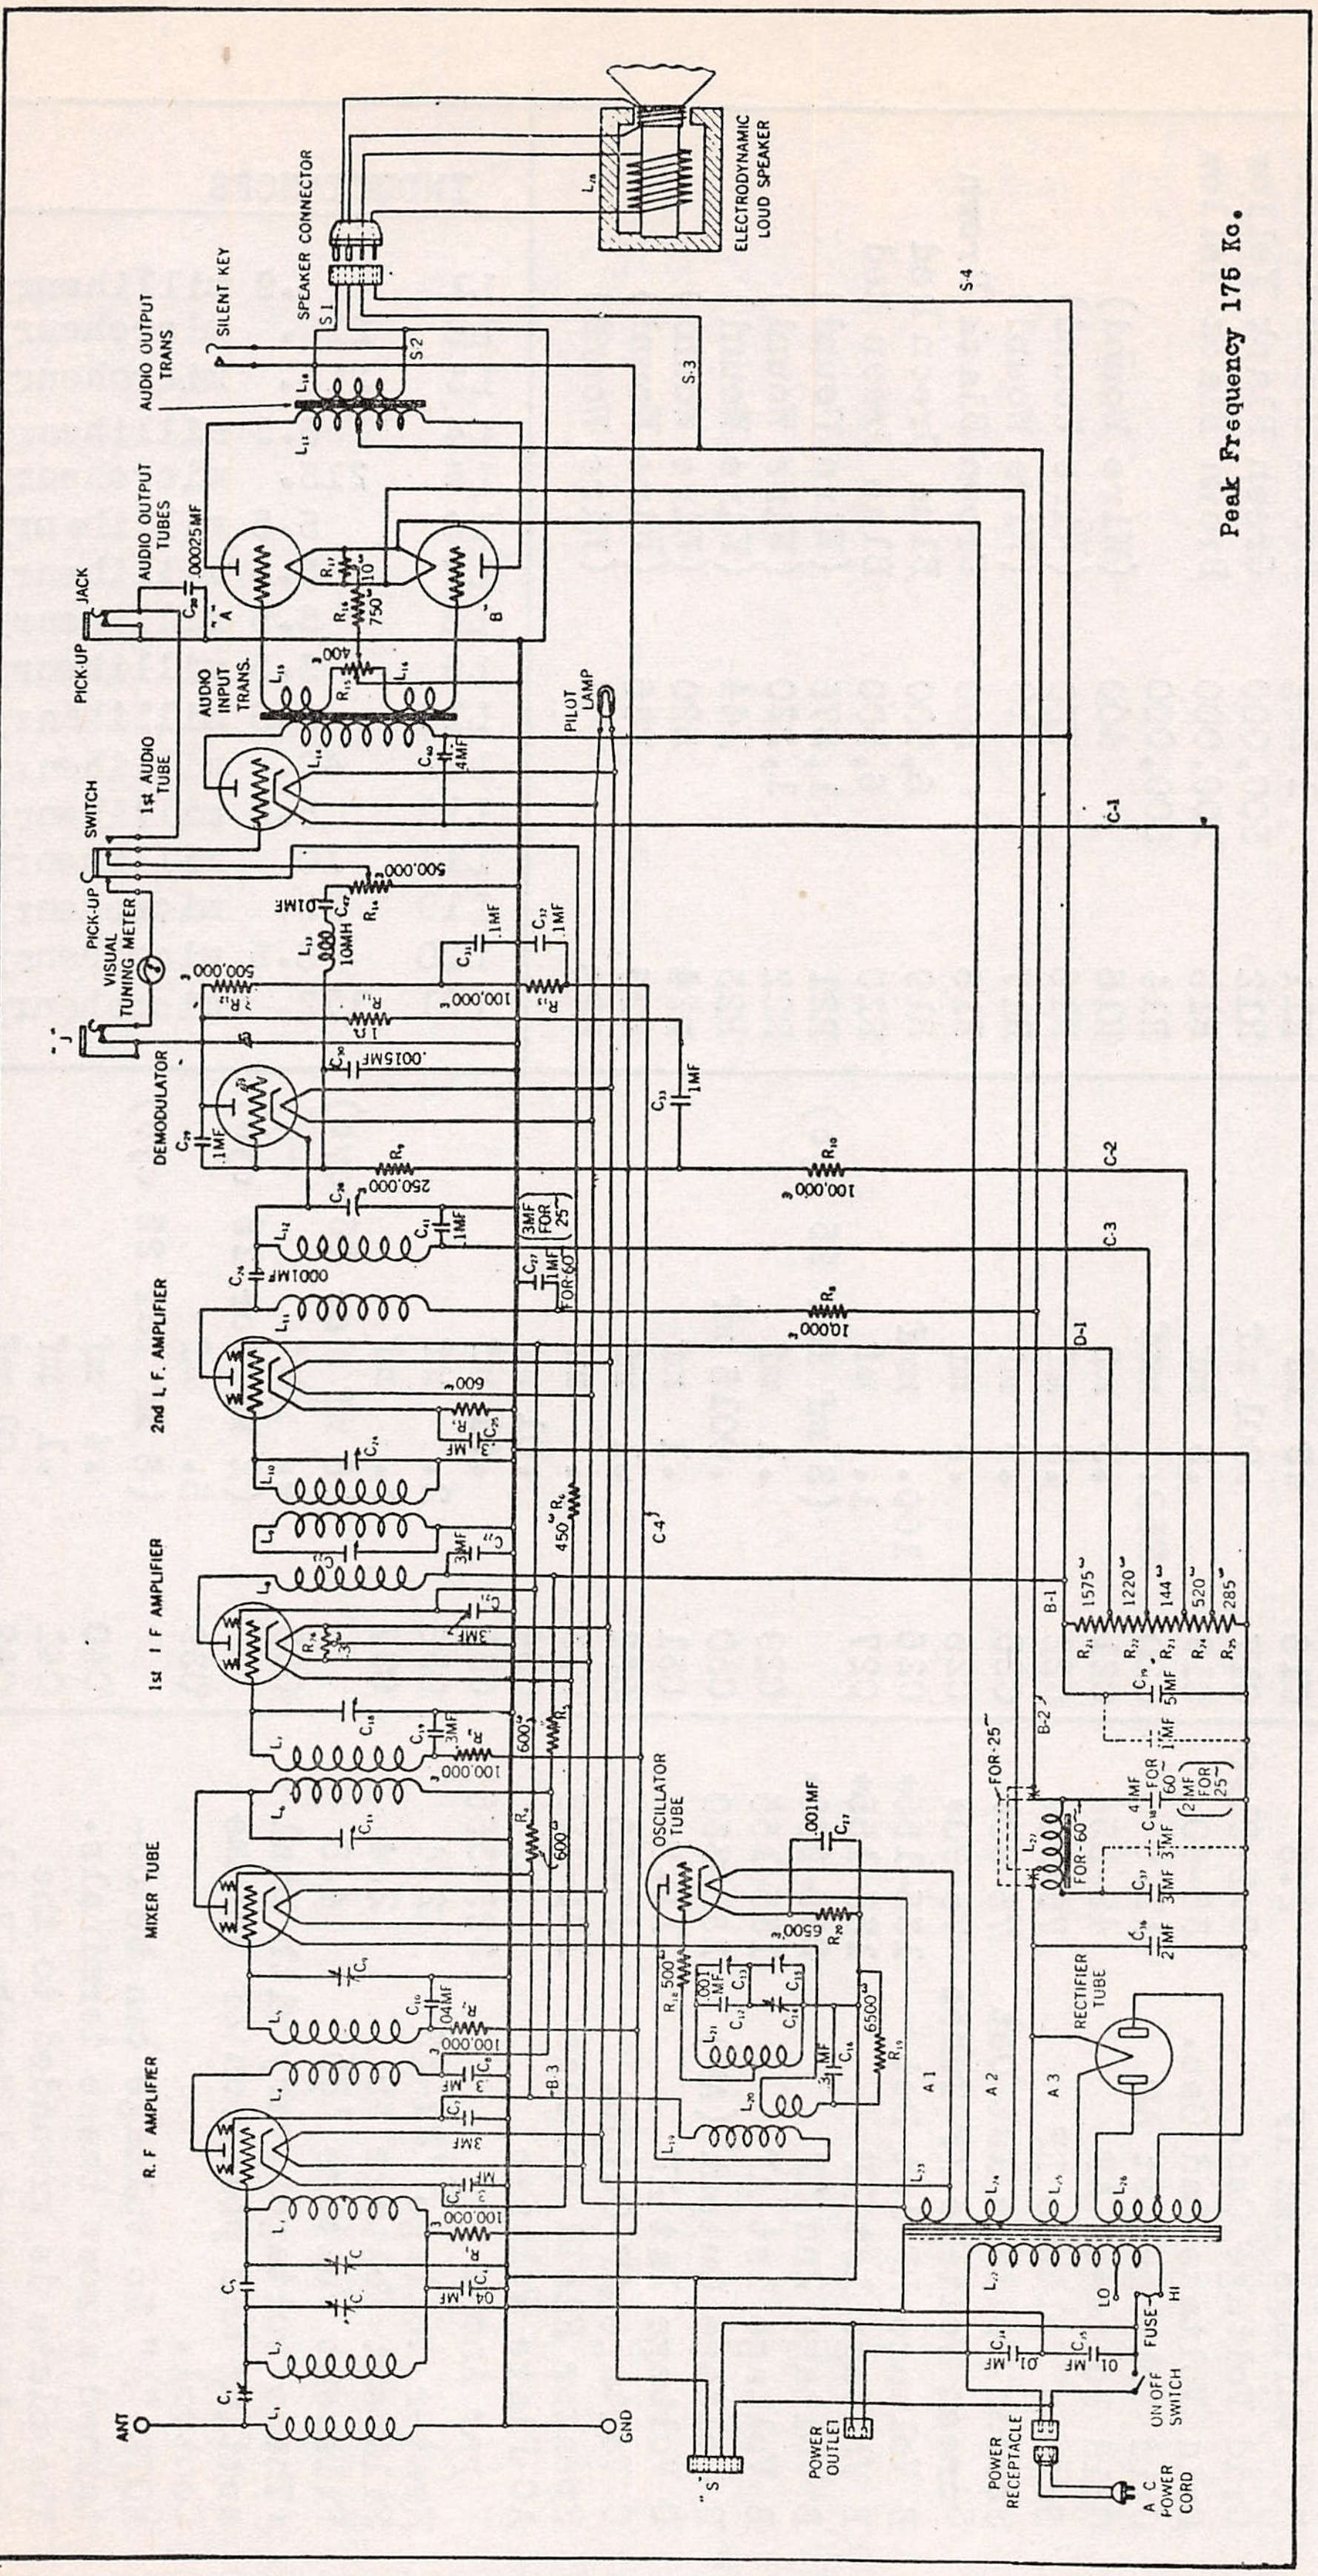
ANT
GND
R.F AMPLIFIER
MIXER TUBE
OSCILLATOR TUBE
1st I F AMPLIFIER
2nd I.F. AMPLIFIER
DEMODULATOR
VISUAL TUNING METER
PICK-UP SWITCH
1st AUDIO TUBE
AUDIO INPUT TRANS.
PICK-UP JACK
AUDIO OUTPUT TUBES
AUDIO OUTPUT TRANS
SILENT KEY
SPEAKER CONNECTOR
ELECTRODYNAMIC LOUD SPEAKER
PILOT LAMP
RECTIFIER TUBE
POWER OUTLET
POWER RECEPTACLE
A C POWER CORD
ON OFF SWITCH
FUSE
LO
HI
FOR 25~
FOR 60~
Peak Frequency 175 Kc.

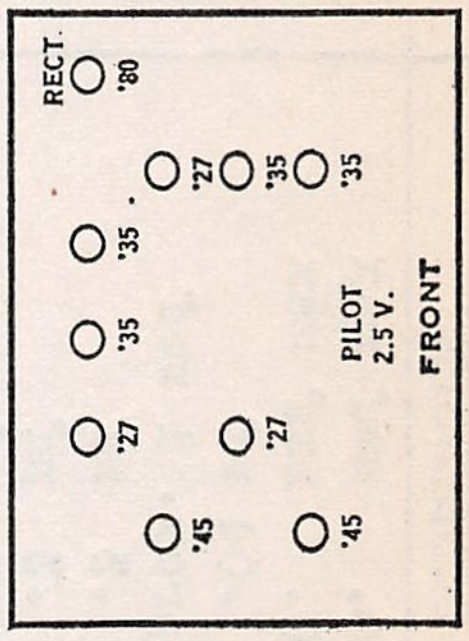
RECT.
'80
'27
'35
'35
'35
'35
'27
'27
'45
'45
PILOT 2.5 V.
FRONT

Model 22 (1931)

The 1st and 2nd IF transformers have two tuning adjustments. The 3rd, has but one tuning adjustment. Three windings are used in the 2nd IF transformer. The tuning condensers are accessible through holes through the top of the IF transformer containers.

MODEL 22,22-A
Voltage
Electrical Values

STROMBERG - CARLSON TEL. MFG. CO.

TUBE	APPROX. VOLTS
Plate Voltage RF	135-155
Plate Voltage 1st Det.	135-155
Plate Voltage Osc.	75-90
Plate Voltage 1st I.F.	135-155
Plate Voltage 2nd I.F.	220-245
Plate Voltage 2nd Det.	Note A
Plate Voltage 1st AF	135-155
Plate Voltage AF Output	230-260
"C" Voltage RF	4.0
"C" Voltage 1st Det.	9.4
"C" Voltage 1st IF	4.1
"C" Voltage 2nd IF	2.8
Grid Voltage Osc.	18.5-21.0
Grid Voltage 2nd Osc.	35-40
Grid Voltage 1st AF	11.6
Grid Voltages AF	45-55*
Screen Voltage RF	75-90*
Screen Voltage 1st Det	75-90*
Screen Voltage IF Tubes	75-90*
B Voltage RF 1st Det	135-155*
B Voltage 1st IF	135-155*
B Voltage 2nd IF	225-250*
B Voltage 1st AF	135-155
B Voltage Output (AF)	285-330
C Voltage 1st AF	11.5
C Voltage AF Output	45-55
Speaker Field Voltage	135-155
AC Plate Voltage per Anode	325-355
Heater Voltage '27-35	2.4
Filament Voltage '45	2.4
Filament Voltage '80	4.8

*These voltages vary with Dial setting and position of Volume Control.

NOTE "A" No voltage can be obtained across these terminals. The plate is grounded to the Chassis through 1 Megohm R 11.

CONDENSERS	
C2	400. mmf max
C3	400. mmf max
C4	.04 mf
C5	Approx. 1 mmf
C6	.3 mf
C7	.3 mf
C8	.3 mf
C9	400. mmf max.
C10	.04 mf
C12	.001 mf
C14	400. mmf max.
C16	.3 mf
C17	.001 mf
C19	.3 mf
C20	250. mmf
C21	.3 mf
C22	.3 mf
C25	.3 mf
C25	.3 mf
C26	100. mmf
C27	1. mf (3 mf for 25 cyc)
C29	.1 mf
C30	.0015 mf
C31	.1 mf
C32	.1 mf
C33	1. mf
C34	.01 mf
C35	.01 mf
C36	2. mf
C37	3. mf (6 mf for 25 cyc)
C38	4. mf (2 mf for 25 cyc)
C39	5. mf (6 mf for 25 cyc)
C40	.4 mf
C41	.1 mf
C42	.01 mf

RESISTANCES

No.	Value	Body
R1	100,000	Brown Black Yellow
R2	100,000	Brown Black Yellow
R3	100,000	Brown Black Yellow
R4	600	Blue Black Brown
R5	600	Blue Black Brown
R6	450	(Wire Wound)
R7	600	Blue Black Brown
R8	10,000	Brown Black Orange
R9	250,000	Red Green Yellow
R10	100,000	Brown Black Yellow
R11	1 meg	Brown Black Green
R12	500,000	Green Black Yellow
R13	100,000	Brown Black Yellow
R14	500,000	
R15	400	(Wire Wound)
R16	750	(Wire Wound)
R17	10	(Wire Wound)
R18	500	Green Black Brown
R19	6,500	Blue Green Red
R20	6,500	Blue Green Red
R21	1,575	(Wire Wound)
R22	1,220	(Wire Wound)
R23	144	(Wire Wound)
R24	520	(Wire Wound)
R25	285	(Wire Wound)
R26	3	(Wire Wound)

INDUCTANCES

L1	.9	millihenry
L2	215.	microhenry
L3	215.	microhenry
L4	5.5	millihenry
L5	215.	microhenry
L6	5.5	millihenry
L7	5.5	millihenry
L8	5.5	millihenry
L9	5.5	millihenry
L10	5.5	millihenry
L11	40.	millihenry
L12	5.5	millihenry
L13	10.	millihenry
L19	15.	microhenry
L20	5.5	microhenry
L21	172.	microhenry

STROMBERG - CARLSON TEL. MFG. CO.

MODEL 22,22-A
Chassis Views

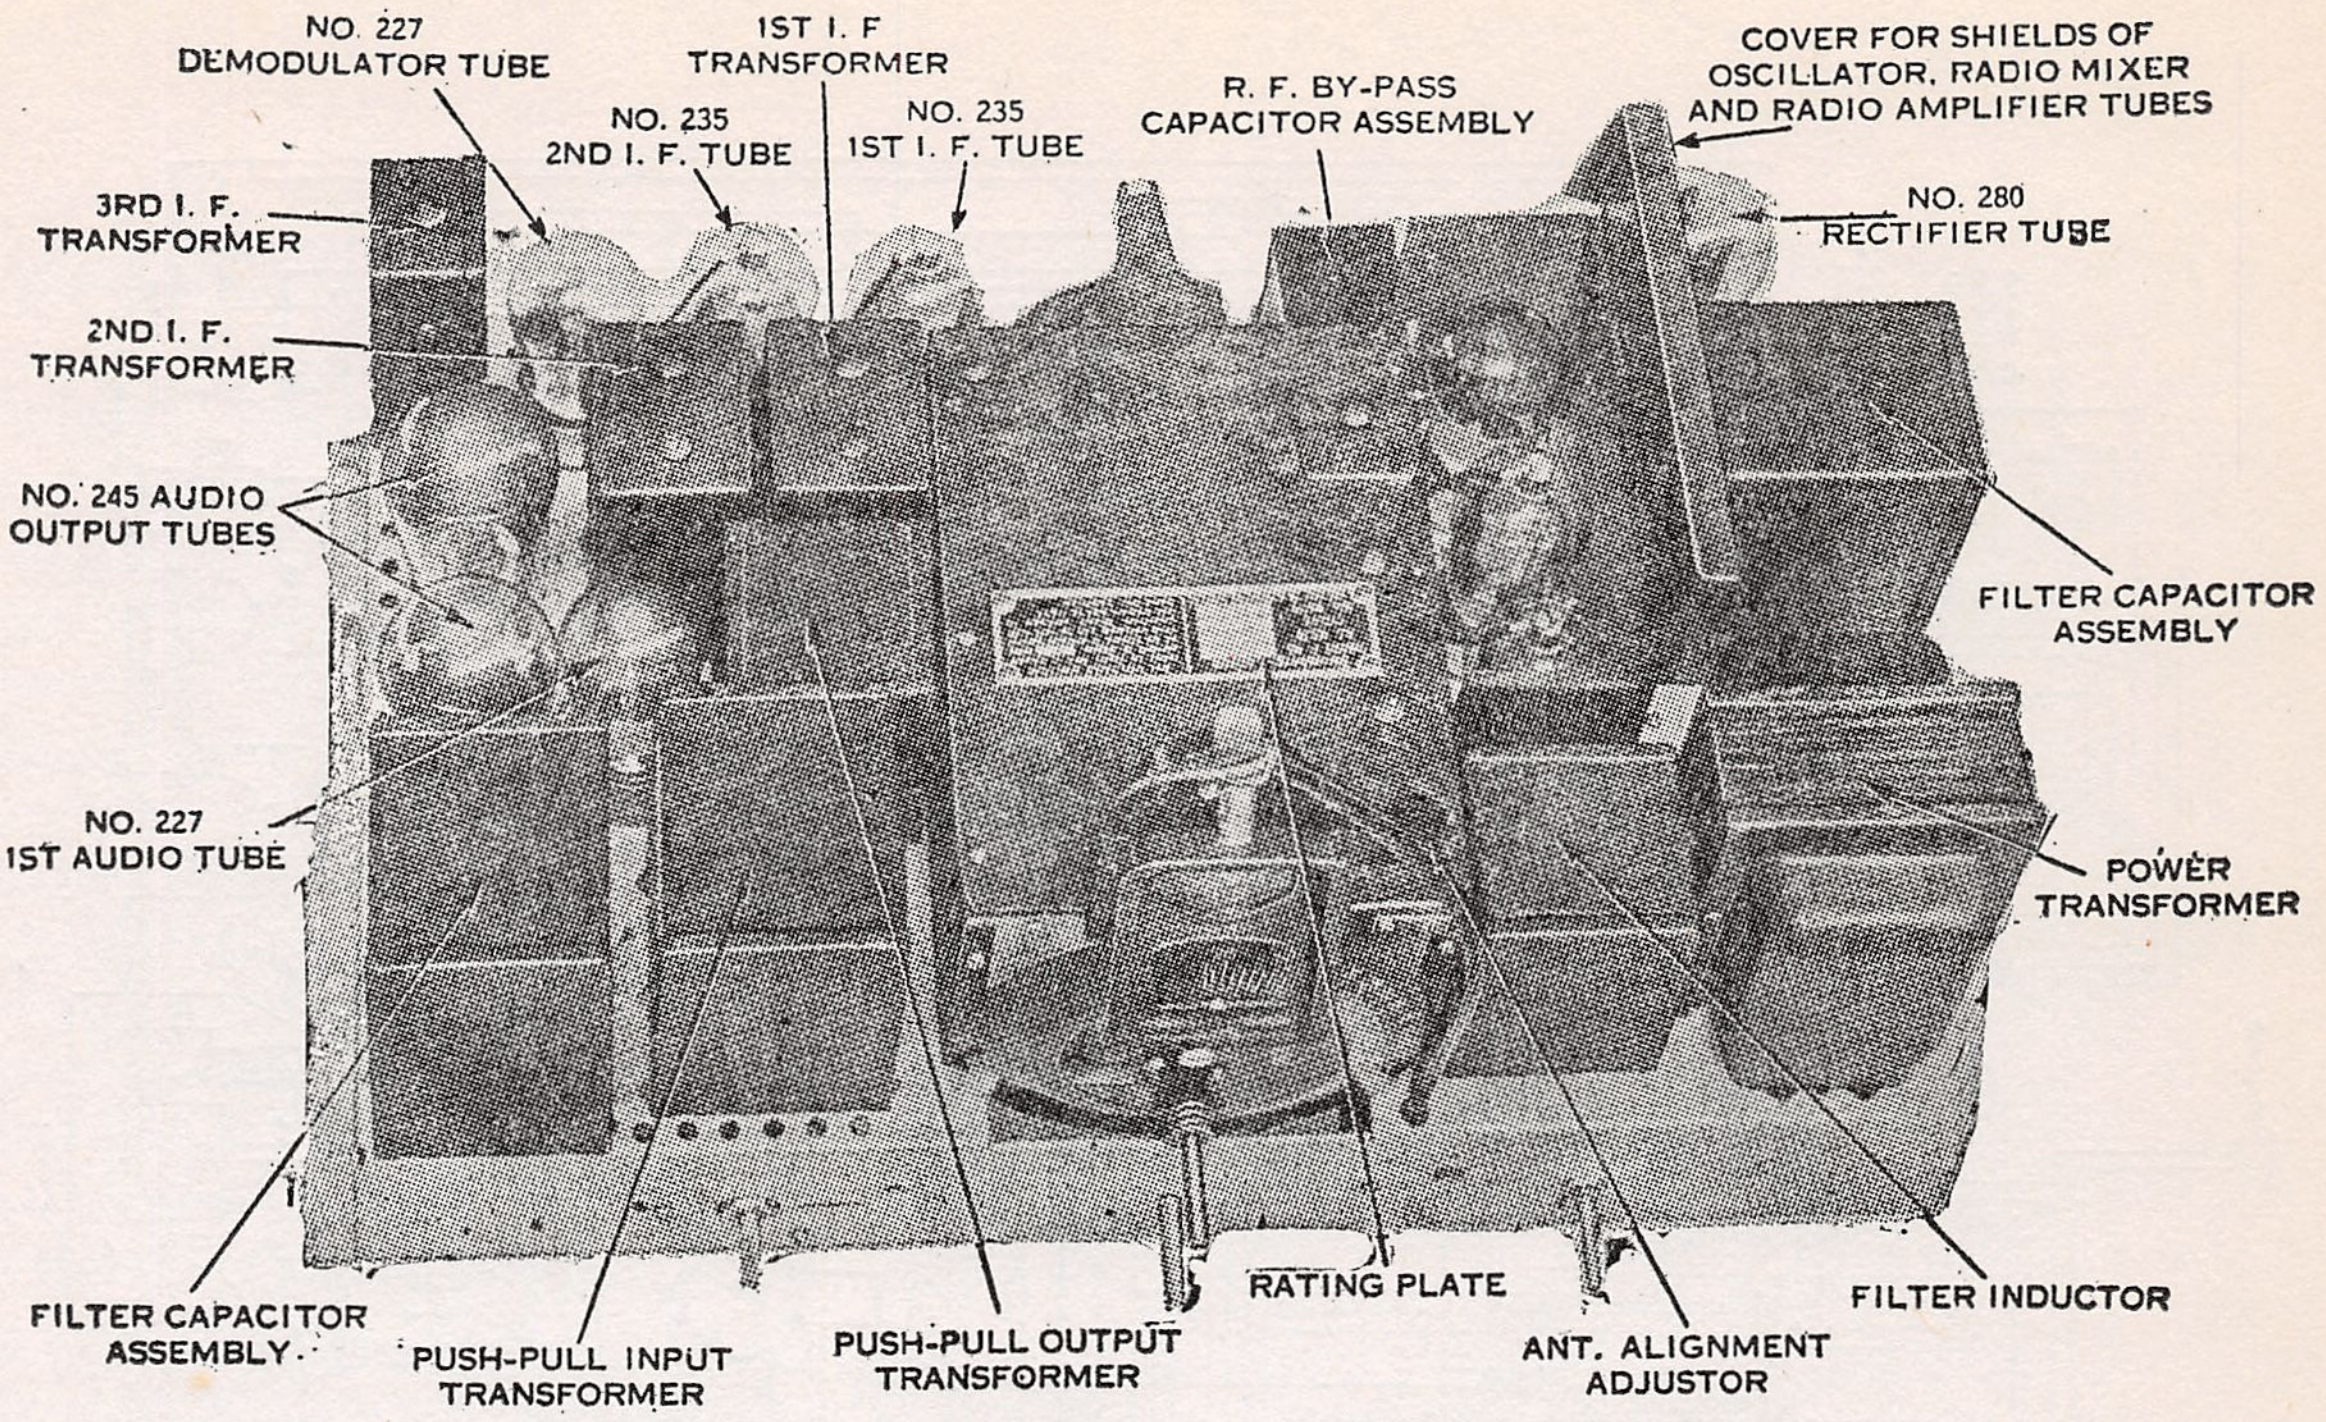
NO. 227 DEMODULATOR TUBE
1ST I. F TRANSFORMER
NO. 235 2ND I. F. TUBE
NO. 235 1ST I. F. TUBE
R. F. BY-PASS CAPACITOR ASSEMBLY
COVER FOR SHIELDS OF OSCILLATOR, RADIO MIXER AND RADIO AMPLIFIER TUBES
NO. 280 RECTIFIER TUBE
3RD I. F. TRANSFORMER
2ND I. F. TRANSFORMER
NO. 245 AUDIO OUTPUT TUBES
FILTER CAPACITOR ASSEMBLY
NO. 227 1ST AUDIO TUBE
POWER TRANSFORMER
FILTER INDUCTOR
RATING PLATE
FILTER CAPACITOR ASSEMBLY
PUSH-PULL INPUT TRANSFORMER
PUSH-PULL OUTPUT TRANSFORMER
ANT. ALIGNMENT ADJUSTOR

Top View of Chassis with Tube Shields Removed.

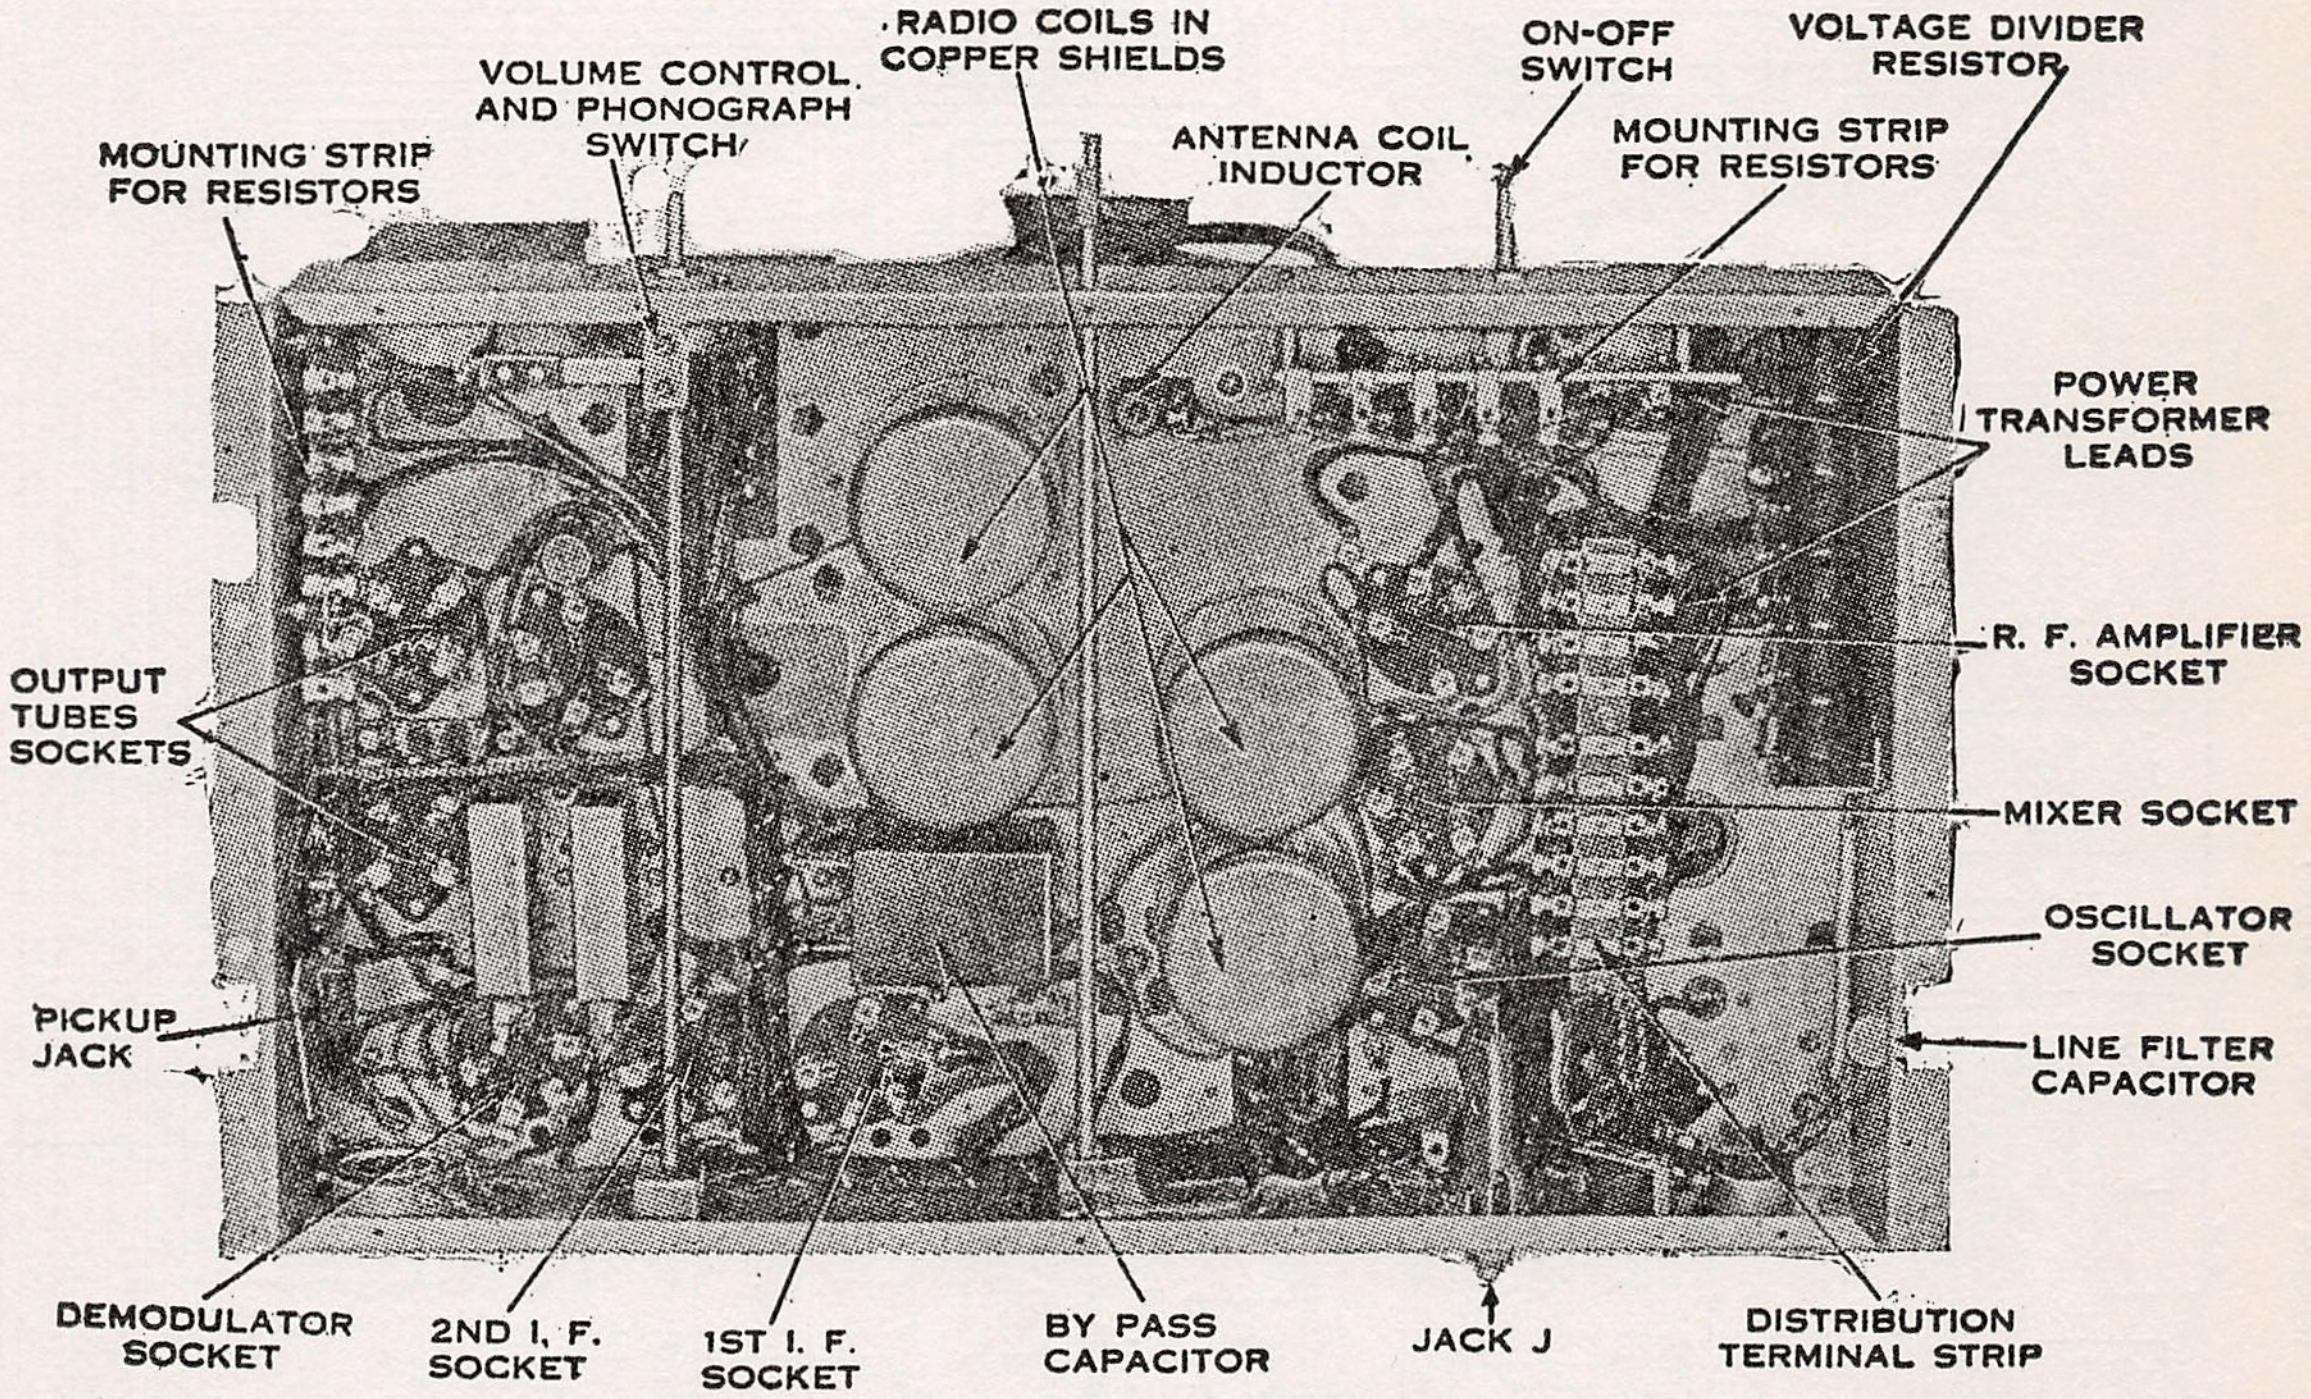
RADIO COILS IN COPPER SHIELDS
VOLUME CONTROL AND PHONOGRAPH SWITCH
ON-OFF SWITCH
VOLTAGE DIVIDER RESISTOR
MOUNTING STRIP FOR RESISTORS
ANTENNA COIL INDUCTOR
MOUNTING STRIP FOR RESISTORS
POWER TRANSFORMER LEADS
R. F. AMPLIFIER SOCKET
OUTPUT TUBES SOCKETS
MIXER SOCKET
OSCILLATOR SOCKET
PICKUP JACK
LINE FILTER CAPACITOR
DEMODULATOR SOCKET
2ND I. F. SOCKET
1ST I. F. SOCKET
BY PASS CAPACITOR
JACK J
DISTRIBUTION TERMINAL STRIP

Bottom View of Chassis (Bottom Shield Removed).

The hum adjuster is located at the rear of the chassis under the third IF transformer. The fuse box is to the front of the rectifier tube socket looking at the chassis from the front. The two outlets near the rectifier tube socket are the power input and power output. The pickup jack is to the rear of the audio output tubes, next to the speaker connector recepticle.

MODEL 25,26 AC
Chassis Wiring

STROMBERG - CARLSON TEL. MFG. CO.

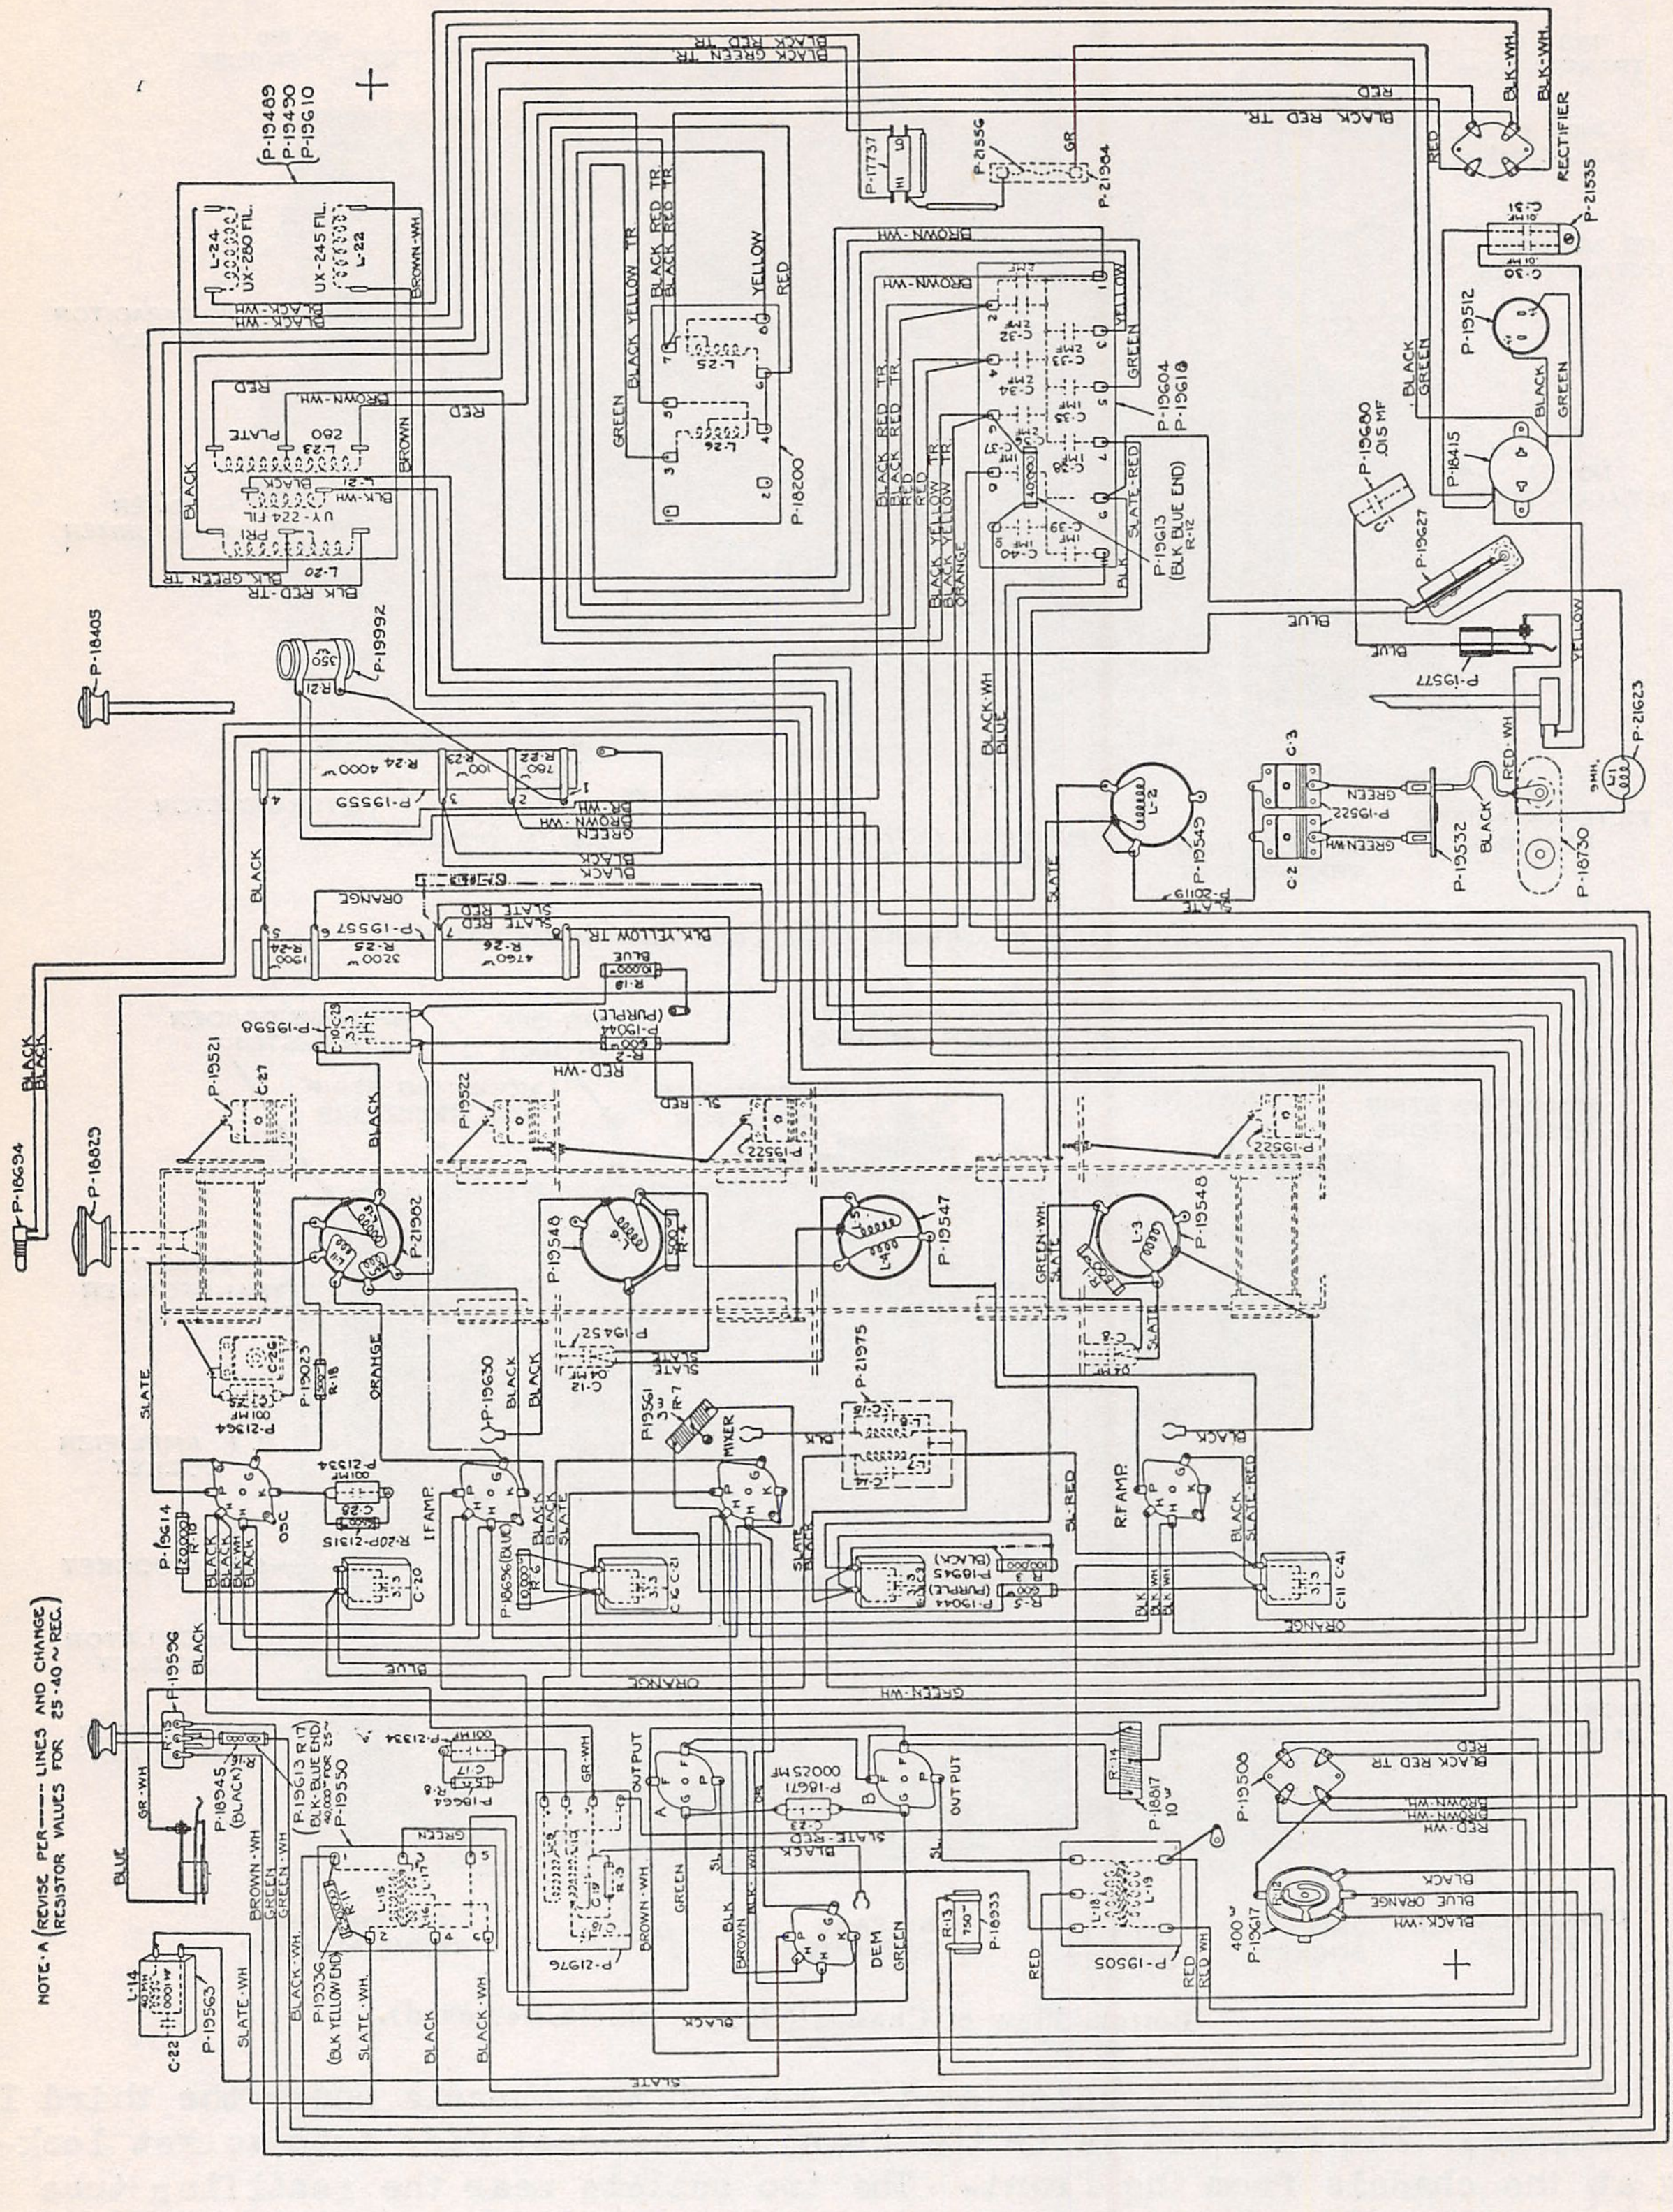
NOTE-A (REVISE, PER ---- LINES AND CHANGE RESISTOR VALUES FOR 25-40~ REC.)
RECTIFIER
BLK-WH.
RED
BLACK RED TR.
BLACK RED TR
BLACK GREEN TR
P-17737
P-2556
P-21904
P-21535
C-30
P-19512
P-18415
P-19680 .015 MF
C-1
P-19627
P-19577
P-21623
P-16730
P-19532
P-19522
C-3
C-2
L-2
P-19549
P-19489
P-19490
P-19610
L-24
UX-280 FIL.
UX-245 FIL.
L-22
L-23
PLATE 280
UY-224 FIL.
L-21
L-20
BLK RED-TR
BLK GREEN TR
BROWN-WH
L-25
L-26
P-18200
C-32
C-33
C-34
C-35
C-39
C-40
P-19604
P-19618
P-19613 (BLK BLUE END) R-12
P-19992
P-18405
P-19555
R-24 4000
R-23 100
R-22 750
P-19557
R-26 4760
R-25 3200
R-18
P-19044 (PURPLE)
P-19598
P-19521
C-27
P-19522
P-18694
P-18629
P-21902
P-19548
L-6
P-19547
L-5
L-4
L-3
P-19548
P-19452
C-12
P-21975
P-19630
P-19561 R-7
MIXER
P-19023 R-18
P-21364
P-21334
C-28
R-20P-21315
OSC
IFAMP.
RFAMP.
P-19614
C-20
P-18656 (BLUE)
C-21
P-18645 (BLACK)
C-41
P-19556
P-18945
P-19613 R-17 (BLK-BLUE END)
P-19550
P-19644
C-17
P-18671 .00025 MF
C-23
OUTPUT
DEM
P-21976
P-19536 (BLK YELLOW END)
L-15
L-14
C-22
P-19563
R-13 750
P-16933
R-14
P-18817 10
P-19508
P-19505
L-18
L-19
P-19617 400
BLACK
SLATE
GREEN
ORANGE
BLUE
YELLOW
SLATE-WH.
GREEN-WH.
RED-WH
BLACK-WH.
BLK. YELLOW TR.
SLATE RED
BROWN ORANGE
BLACK-WH

MODEL 25,26 AC
Schematic

STROMBERG - CARLSON TEL. MFG. CO.

Models 25, 26 (1931)

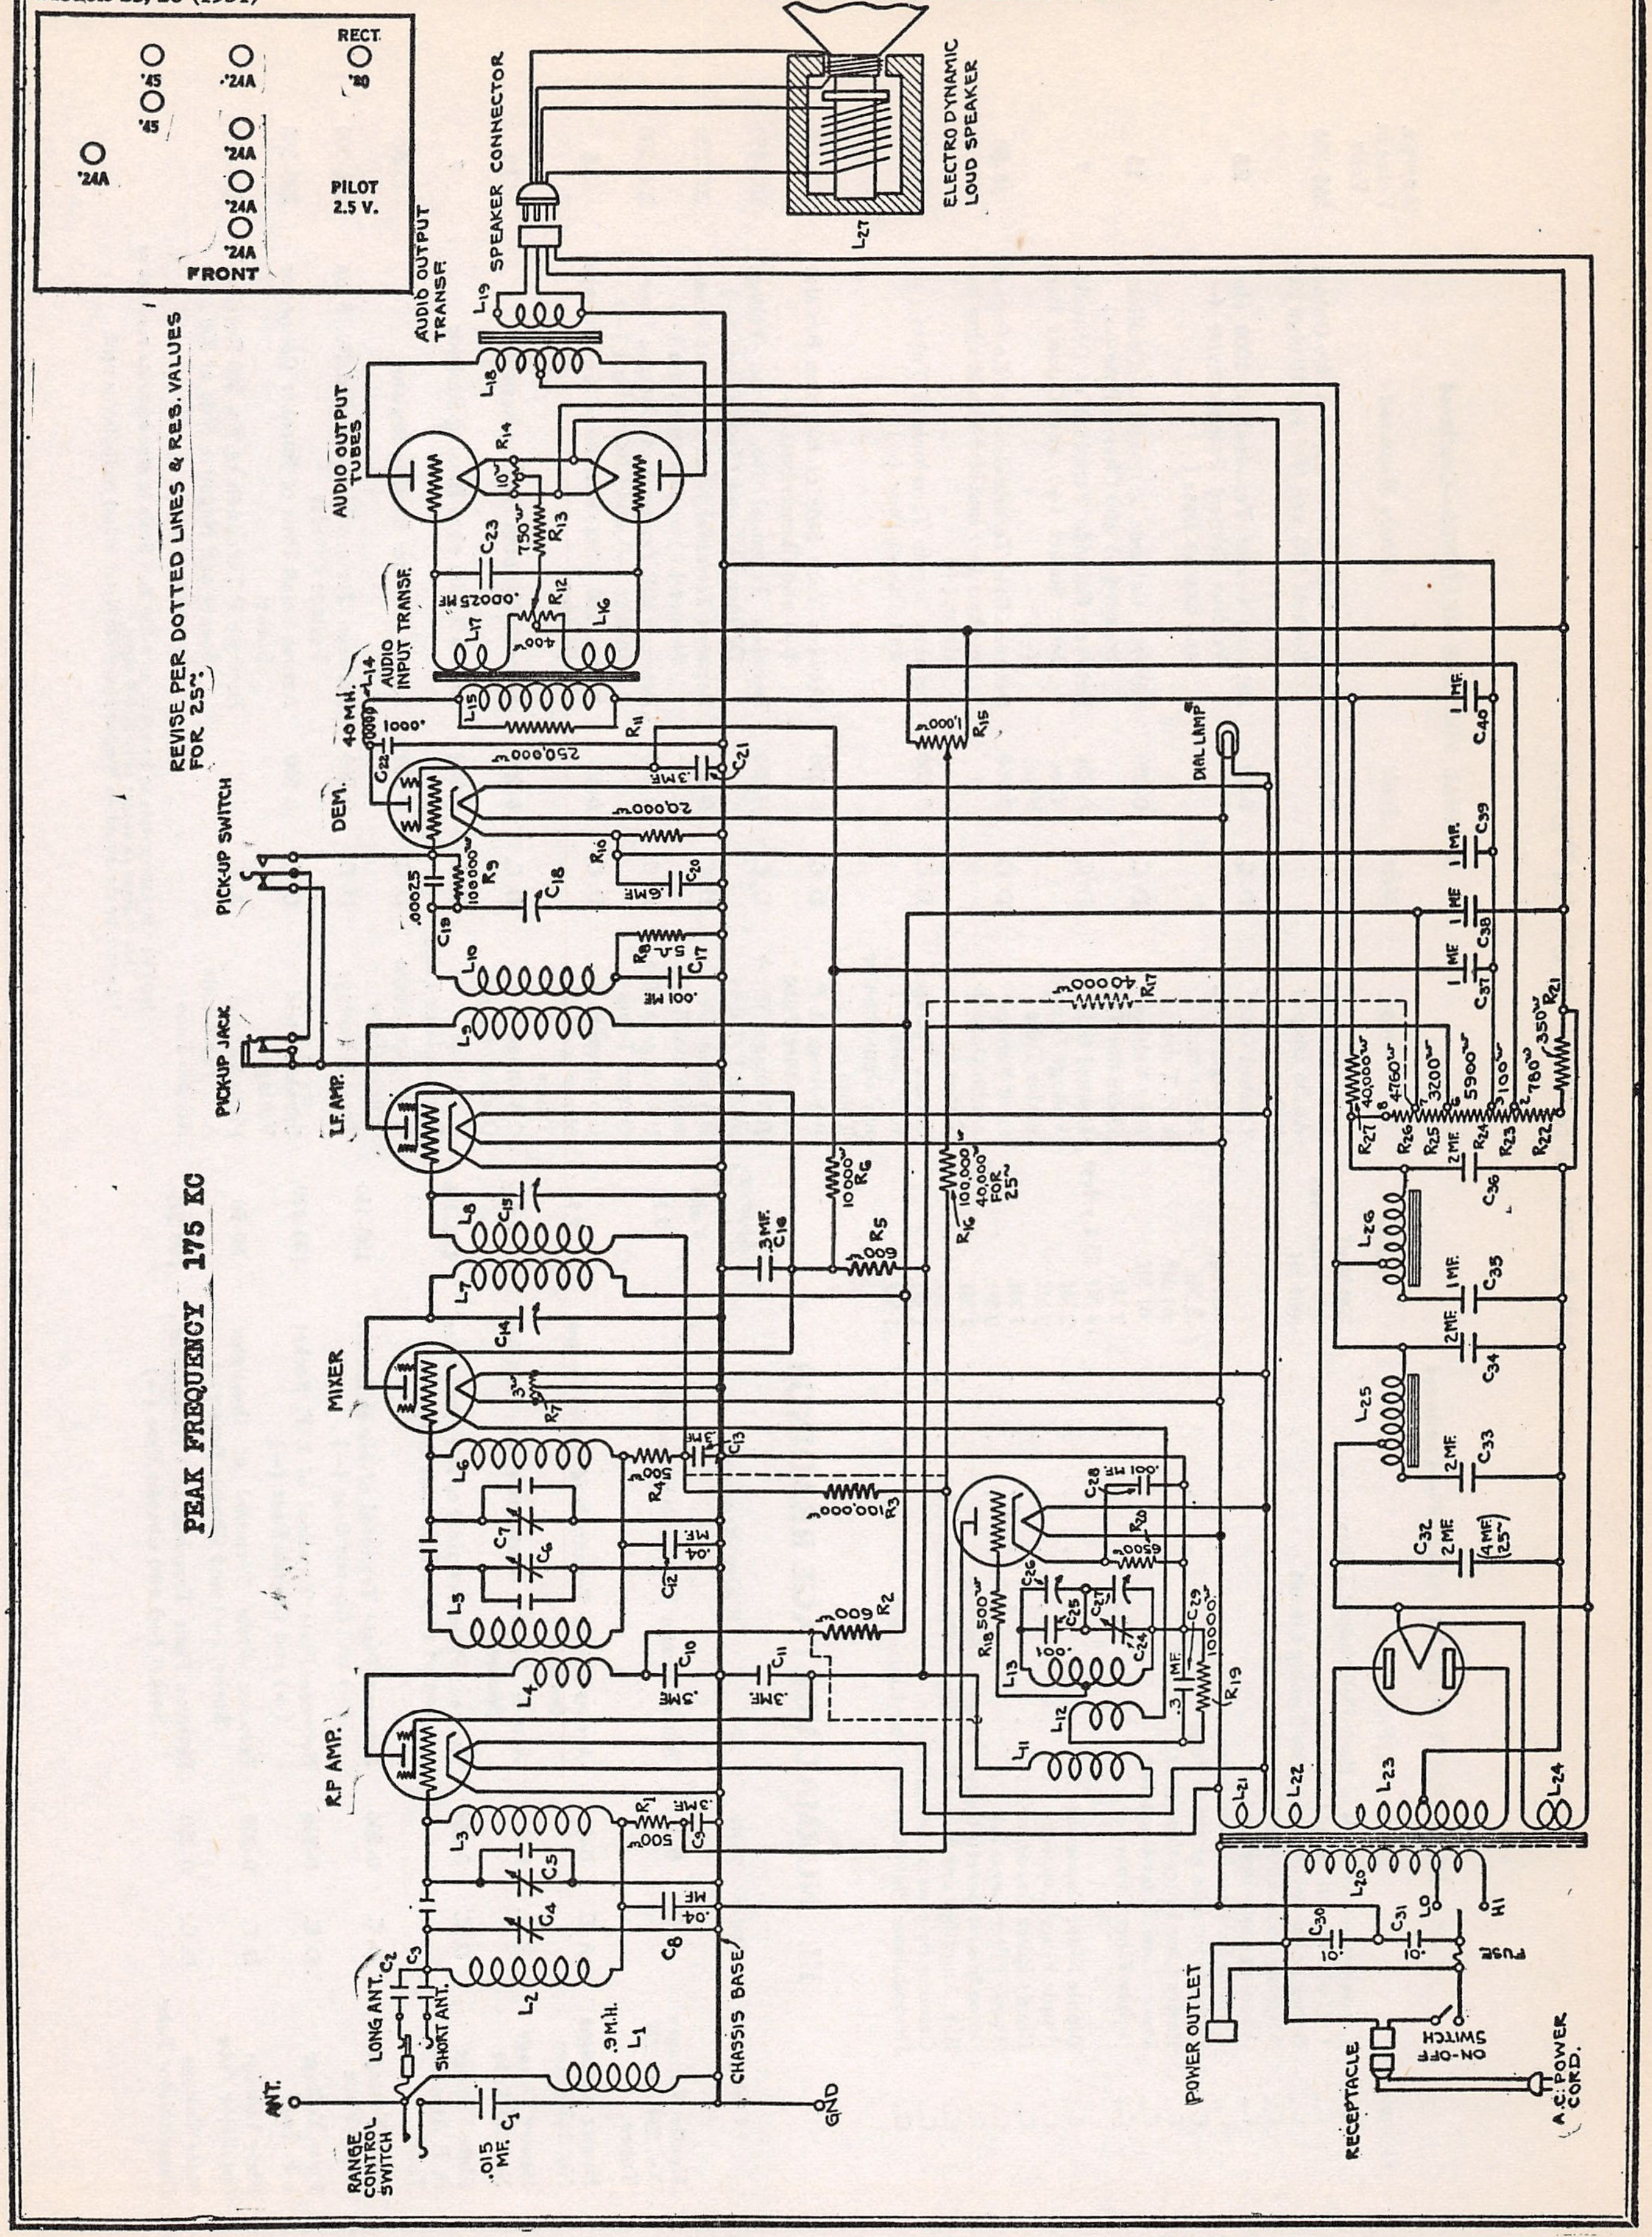
RECT.
'80
'45
'24A
'24A
'24A
'24A
'24A
'45
PILOT
2.5 V.
FRONT
REVISE PER DOTTED LINES & RES. VALUES FOR 25"
PEAK FREQUENCY 175 KC
ELECTRO DYNAMIC LOUD SPEAKER
L27
SPEAKER CONNECTOR
AUDIO OUTPUT TRANSF.
L19
L18
AUDIO OUTPUT TUBES
R14
10Ω
R13
750Ω
C23
.00025 MF
R12
400Ω
L17
L16
AUDIO INPUT TRANSF.
40 M.H.
L14
L15
R11
1000°
C22
250,000Ω
.3 MF
C21
DEM.
20,000Ω
R10
R9
100,000Ω
.00025
C19
C18
.6 MF
C20
PICK-UP SWITCH
PICK-UP JACK
L10
R8
5.4Ω
C17
100 MF
L9
I.F. AMP.
L8
C15
.3 MF
C16
RG
10000Ω
R5
600Ω
L7
C14
MIXER
R7
3Ω
L6
R4
500Ω
.3 MF
C13
R3
1,000,000Ω
C7
C6
.04 MF
C12
L5
R2
600Ω
L4
C10
.3 MF
C11
.3 MF
R.F. AMP.
C28
100 MF
R20
6500Ω
C26
C27
C25
C24
C29
10000Ω
R18
500Ω
100°
L13
.3 MF
R19
L12
L11
L3
C5
R1
500Ω
.3 MF
C9
C4
.04 MF
C8
LONG ANT.
C2
C3
SHORT ANT.
L2
.9 M.H.
L1
CHASSIS BASE
ANT.
RANGE CONTROL SWITCH
C1
.015 MF.
GND
R15
1,000Ω
R17
40000Ω
R16
100,000Ω
40,000Ω FOR 25"
DIAL LAMP
1 MF
C40
1 MF
C39
1 MF
C38
1 MF
C37
R27
40,000Ω
R26
4760Ω
R25
3200Ω
R24
5900Ω
R23
100Ω
R22
780Ω
R21
350Ω
2 MF
C36
L26
1 MF
C35
2 MF
C34
L25
2 MF
C33
C32
2 MF
4 MF (25")
L21
L22
L23
L24
L20
LO
HI
C30
10°
C31
10°
FUSE
POWER OUTLET
ON-OFF SWITCH
RECEPTACLE
A.C. POWER CORD.

STROMBERG-CARLSON TEL. MFG. CO.

NOS. 25 AND 26 RECEIVERS

TABLE III. CAPACITOR IDENTIFICATION—Continued

Designation	*Function*	*Value*
C_{23}	Capacitor across Grids of Push-Pull Output Tubes	250 Mmf.
C_{24}	Unit of Variable Gang Capacitor	400 Mmf. Max.
C_{25}	Series Capacitor for Oscillator Tuning Circuit	.001 Mf.
C_{26}	Aligning Capacitor for C_{23}	
C_{27}	Aligning Capacitor for C_{24}	
C_{28}	Cathode By-pass of Oscillator	.001 Mf.
C_{29}	Cathode By-pass of Mixer Tube	.3 Mf.
C_{30}	Power Line Filter Capacitor	.01 Mf.
C_{31}	Power Line Filter Capacitor	.01 Mf.
C_{32}	Ripple Filter Capacitor	2 Mf. (4 Mf. 25 Cycles)
C_{33}	Ripple Filter Capacitor	2 Mf.
C_{34}	Ripple Filter Capacitor	2 Mf.
C_{35}	Ripple Filter Capacitor	1 Mf.
C_{36}	Ripple Filter Capacitor	2 Mf.
C_{37}	Demodulator Screen Circuit Filter Capacitor	1 Mf.
C_{38}	R. F. Amplifier and Mixer Plate Circuit Filter Capacitor	1 Mf.
C_{39}	Cathode By-pass of Demodulator	1 Mf.
C_{40}	Demodulator Plate Circuit Filter Capacitor	1 Mf.

III. NORMAL VOLTAGE READINGS

Voltage	*Meter*	*Scale*	*Where Measured*	*Approx. Value in Volts*
Heater Voltages No. 224 and 227 Tubes	A. C.	0–4	Across Heater Terminals of Sockets	2.4
Heater Voltages No. 245 Tubes	A. C.	0–4	Across Heater Terminals of Audio Output Sockets	2.4
Heater Voltage No. 280 Tube	A. C.	0–8	Across Heater Terminals of Rectifier Socket	4.8
Plate Voltage R. F. Amplifier Tube	D. C.	0–250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (−)	135–150
Plate Voltage Mixer Tube	D. C.	0–250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (−)	135–150
Plate Voltage I. F. Tube	D. C.	0–250	Between Plate Terminal of I. F. Socket (+) and Chassis Base (−)	135–150
Plate Voltage Oscillator Tube	D. C.	0–250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (−)	80–90
Plate Voltage Demodulator Tube	D. C.	0–250	Between Plate Terminal of Demodulator Socket (+) and Chassis Base (−)	190–213

NORMAL VOLTAGE READINGS—Continued

Voltage	*Meter*	*Scale*	*Where Measured*	*Approx. Value in Volts*
Plate Voltages Audio Output Tubes	D. C.	0–250	Between Plate Terminals of Audio Output Sockets (+) and Mid Tap 10 ohm Resistor (−)	225–255
Control Grid Voltage, R. F., Mixer and I. F. Tubes	D. C.	0–10	Between Center Terminal of 1000 ohm Volume Control Potentiometer (−) and Chassis Base (+)	2.5
Grid Voltage Oscillator Tube	D. C.	0–250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (−)	13
Control Grid Voltage Demodulator Tube	D. C.	0–250 (See Note)	Between Cathode Terminal of Demodulator Socket (+) and Chassis Base (−)	7
Grid Voltage Audio Output Tubes	D. C.	0–250	Between Grid Terminals of Audio Output Sockets (−) and Mid Tap 10 ohm Resistor (+)	40–50
Screen Voltages R. F., Mixer, I. F. and Demodulator Tubes	D. C.	0–250	Between Screen Terminals of Tubes (+) and Chassis Base (−)	130–150
B Voltage R. F. Amplifier Tube	D. C.	0–250	Between Tube Side of 600 ohm Resistor (+) and Chassis Base (−)	135–150
B Voltages Mixer and I. F. Tubes	D. C.	0–250	Between Terminal No. 6 on Voltage Divider (+) and Chassis Base (−)	135–150
B Voltage Demodulator Tube	D. C.	0–250	Between Terminal No. 1 on Input Transformer (+) and Chassis Base (−)	200–230
B Voltage Audio Output Tubes	D. C.	0–250	Between Mid Tap on Audio Output Transformer (+) and Chassis Base (−)	250–290
C Voltage R. F., Mixer and I. F. Tubes	D. C.	0–10	Across 100 ohm Resistance on Voltage Divider	2.5
C Voltage Oscillator Tube	D. C.	0–250	Across 6,500 ohm Biasing Resistor	12
C Voltage Demodulator Tube	D. C.	0–250	Across 20,000 ohm Biasing Resistor	7
C Voltage Audio Output Tube	D. C.	0–250	Across 750 ohm Biasing Resistor	40–50
Total B Voltage	D. C.	0–500	Between Terminals No. 1 and No. 8 on Voltage Divider	260–300
Speaker Field Voltage	D. C.	0–500	Across Small Pins of Speaker Connector Socket	300–335
Plate Voltage A. C. Per Anode No. 280 Tube	A. C.		Between P Terminals of No. 280 Rectifier Socket and Negative Side of 350 ohm Resistor	320–350*

NOTE: Measurements to be taken on 0–250 Volt Scale to give accurate readings as this voltage is across only 20,000 ohms.

* Cannot be measured on Weston Model 528 Meter unless multiplier is used.

MODEL 25,26 AC
Condenser-Resistor
Values

STROMBERG-CARLSON TEL. MFG. CO.

NOS. 25 AND 26 RECEIVERS

II. COMPONENT IDENTIFICATION TABLES

TABLE 1. INDUCTOR IDENTIFICATION

Designation	*Function*	*Value*
L_1	Antenna Inductor	.9 Millihenry
L_2	First Coil Preselector Bi-resonator	195 Microhenrys
L_3	Second Coil Preselector Bi-resonator	195 Microhenrys
L_4	Primary of Radio Transformer	
L_5	First Coil of Second Bi-resonator	195 Microhenrys
L_6	Second Coil of Second Bi-resonator	195 Microhenrys
L_7	Primary of First I. F. Transformer	10 Millihenrys
L_8	Secondary of First I. F. Transformer	10 Millihenrys
L_9	Primary of Second I. F. Transformer	10 Millihenrys
L_{10}	Secondary of Second I. F. Transformer	10 Millihenrys
L_{11}	Plate Inductor of Oscillator	15 Microhenrys
L_{12}	Cathode Coupling Inductor of Mixer Tube	5.5 Microhenrys
L_{13}	Grid Inductor of Oscillator	158 Microhenrys
L_{14}	Demodulator Plate Radio Frequency Choke	40 Millihenrys
L_{15}	Primary of Push-Pull Input Transformer	
L_{16}	Secondary of Push-Pull Input Transformer	
L_{17}	Secondary of Push-Pull Input Transformer	
L_{18}	Primary of Push-Pull Output Transformer	
L_{19}	Secondary of Push-Pull Output Transformer	
L_{20}	Primary of Power Transformer	
L_{21}	Secondary of Power Transformer for Heaters	
L_{22}	Secondary of Power Transformer for Output Tube Filaments	
L_{23}	Secondary of Power Transformer for Plates of Rectifier Tube	
L_{24}	Secondary of Power Transformer for Rectifier Filament	
L_{25}	First Ripple Filter Inductor	
L_{26}	Second Ripple Filter Inductor	
L_{27}	Speaker Field Winding	

TABLE II. RESISTOR IDENTIFICATION

Designation	*Function*	*Value*
R_1	Grid Bias Feeder of Radio Amplifier	500 Ohms
R_2	Filter Resistor Plate Circuit of Radio Amplifier	600 Ohms
R_3	Grid Bias Feeder for Mixer of I. F. Amplifier	100,000 Ohms
R_4	Grid Bias Feeder for Mixer Tube	500 Ohms
R_5	Filter Resistor for Screen Circuits of Mixer and I. F. Amplifier	600 Ohms
R_6	Filter Resistor for Demodulator Screen Circuit	10,000 Ohms
R_7	Mid-tap Resistor Heater Circuit (at Mixer Tube)	3 Ohms
R_8	Grid Bias Feeder for Demodulator	5 Megohms
R_9	Grid Bias Feeder for Demodulator	100,000 Ohms
R_{10}	Cathode Resistor of Demodulator Tube	20,000 Ohms

TABLE II. RESISTOR IDENTIFICATION—Continued

Designation	*Function*	*Value*
R_{11}	Shunt Resistor for Primary of Push-Pull Input Transformer	250,000 Ohms
R_{12}	Hum Balancer Potentiometer	400 Ohms
R_{13}	Grid Biasing Resistor at Power Output Tube	750 Ohms
R_{14}	Mid-Tap Resistor of Filament Circuit of Output Tube	10 Ohms
R_{15}	Volume Control Potentiometer	1,000 Ohms
R_{16}	Filter Resistor for Grid Bias Circuits	100,000 Ohms (40,000 Ohms 25 Cycles)
R_{17}	Filter Resistor of Screen Circuits, 25 Cycles Only	40,000 Ohms
R_{18}	Series Grid Resistor of Oscillator	500 Ohms
R_{19}	Cathode Resistor of Mixer Tube	10,000 Ohms
R_{20}	Cathode Resistor of Oscillator Tube	6,500 Ohms
R_{21}	Auxiliary Voltage Divider Resistor	350 Ohms
R_{22}	Section of Voltage Divider Resistor	780 Ohms
R_{23}	Section of Voltage Divider Resistor	.100 Ohms
R_{24}	Section of Voltage Divider Resistor	5,900 Ohms
R_{25}	Section of Voltage Divider Resistor	3,200 Ohms
R_{26}	Section of Voltage Divider Resistor	4,760 Ohms
R_{27}	Filter Resistor of Demodulator Plate Circuit	40,000 Ohms

TABLE III. CAPACITOR IDENTIFICATION

Designation	*Function*	*Value*
C_1	Range Control Capacitor	.015 Mf.
C_2	"Long Antenna" Aligning Capacitor	
C_3	"Short Antenna" Aligning Capacitor	
C_4	Unit of Variable Gang Capacitor	400 Mmf. Max.
C_5	Unit of Variable Gang Capacitor	400 Mmf. Max.
C_6	Unit of Variable Gang Capacitor	400 Mmf. Max.
C_7	Unit of Variable Gang Capacitor	400 Mmf. Max.
C_8	First Bi-resonator Main Coupling Capacitor	.04 Mf.
C_9	Grid Circuit By-pass of Radio Amplifier	.3 Mf.
C_{10}	Plate Circuit By-pass of Radio Amplifier	.3 Mf.
C_{11}	Screen Circuit By-pass of Radio Amplifier	.3 Mf.
C_{12}	Second Bi-resonator Main Coupling Capacitor	.04 Mf.
C_{13}	Grid Circuit By-pass of Mixer and I. F. Amplifier	.3 Mf.
C_{14}	Aligning Capacitor for Primary of First I. F. Transformer	
C_{15}	Aligning Capacitor for Secondary of First I. F. Transformer	
C_{16}	Screen Circuits By-pass for Mixer and I. F. Amplifier	.3 Mf.
C_{17}	Grid Circuit By-pass of Demodulator	.001 Mf.
C_{18}	Aligning Capacitor for Secondary of Second I. F. Transformer	
C_{19}	"Grid Capacitor" of Demodulator	250 Mmf.
C_{20}	Cathode By-pass of Demodulator	.6 Mf.
C_{21}	Screen Circuit By-pass of Demodulator	.3 Mf.
C_{22}	Demodulator Plate Filter Capacitor	100 Mmf.

MODEL 27 AC
Chassis Wiring

STROMBERG - CARLSON TEL. MFG. CO.

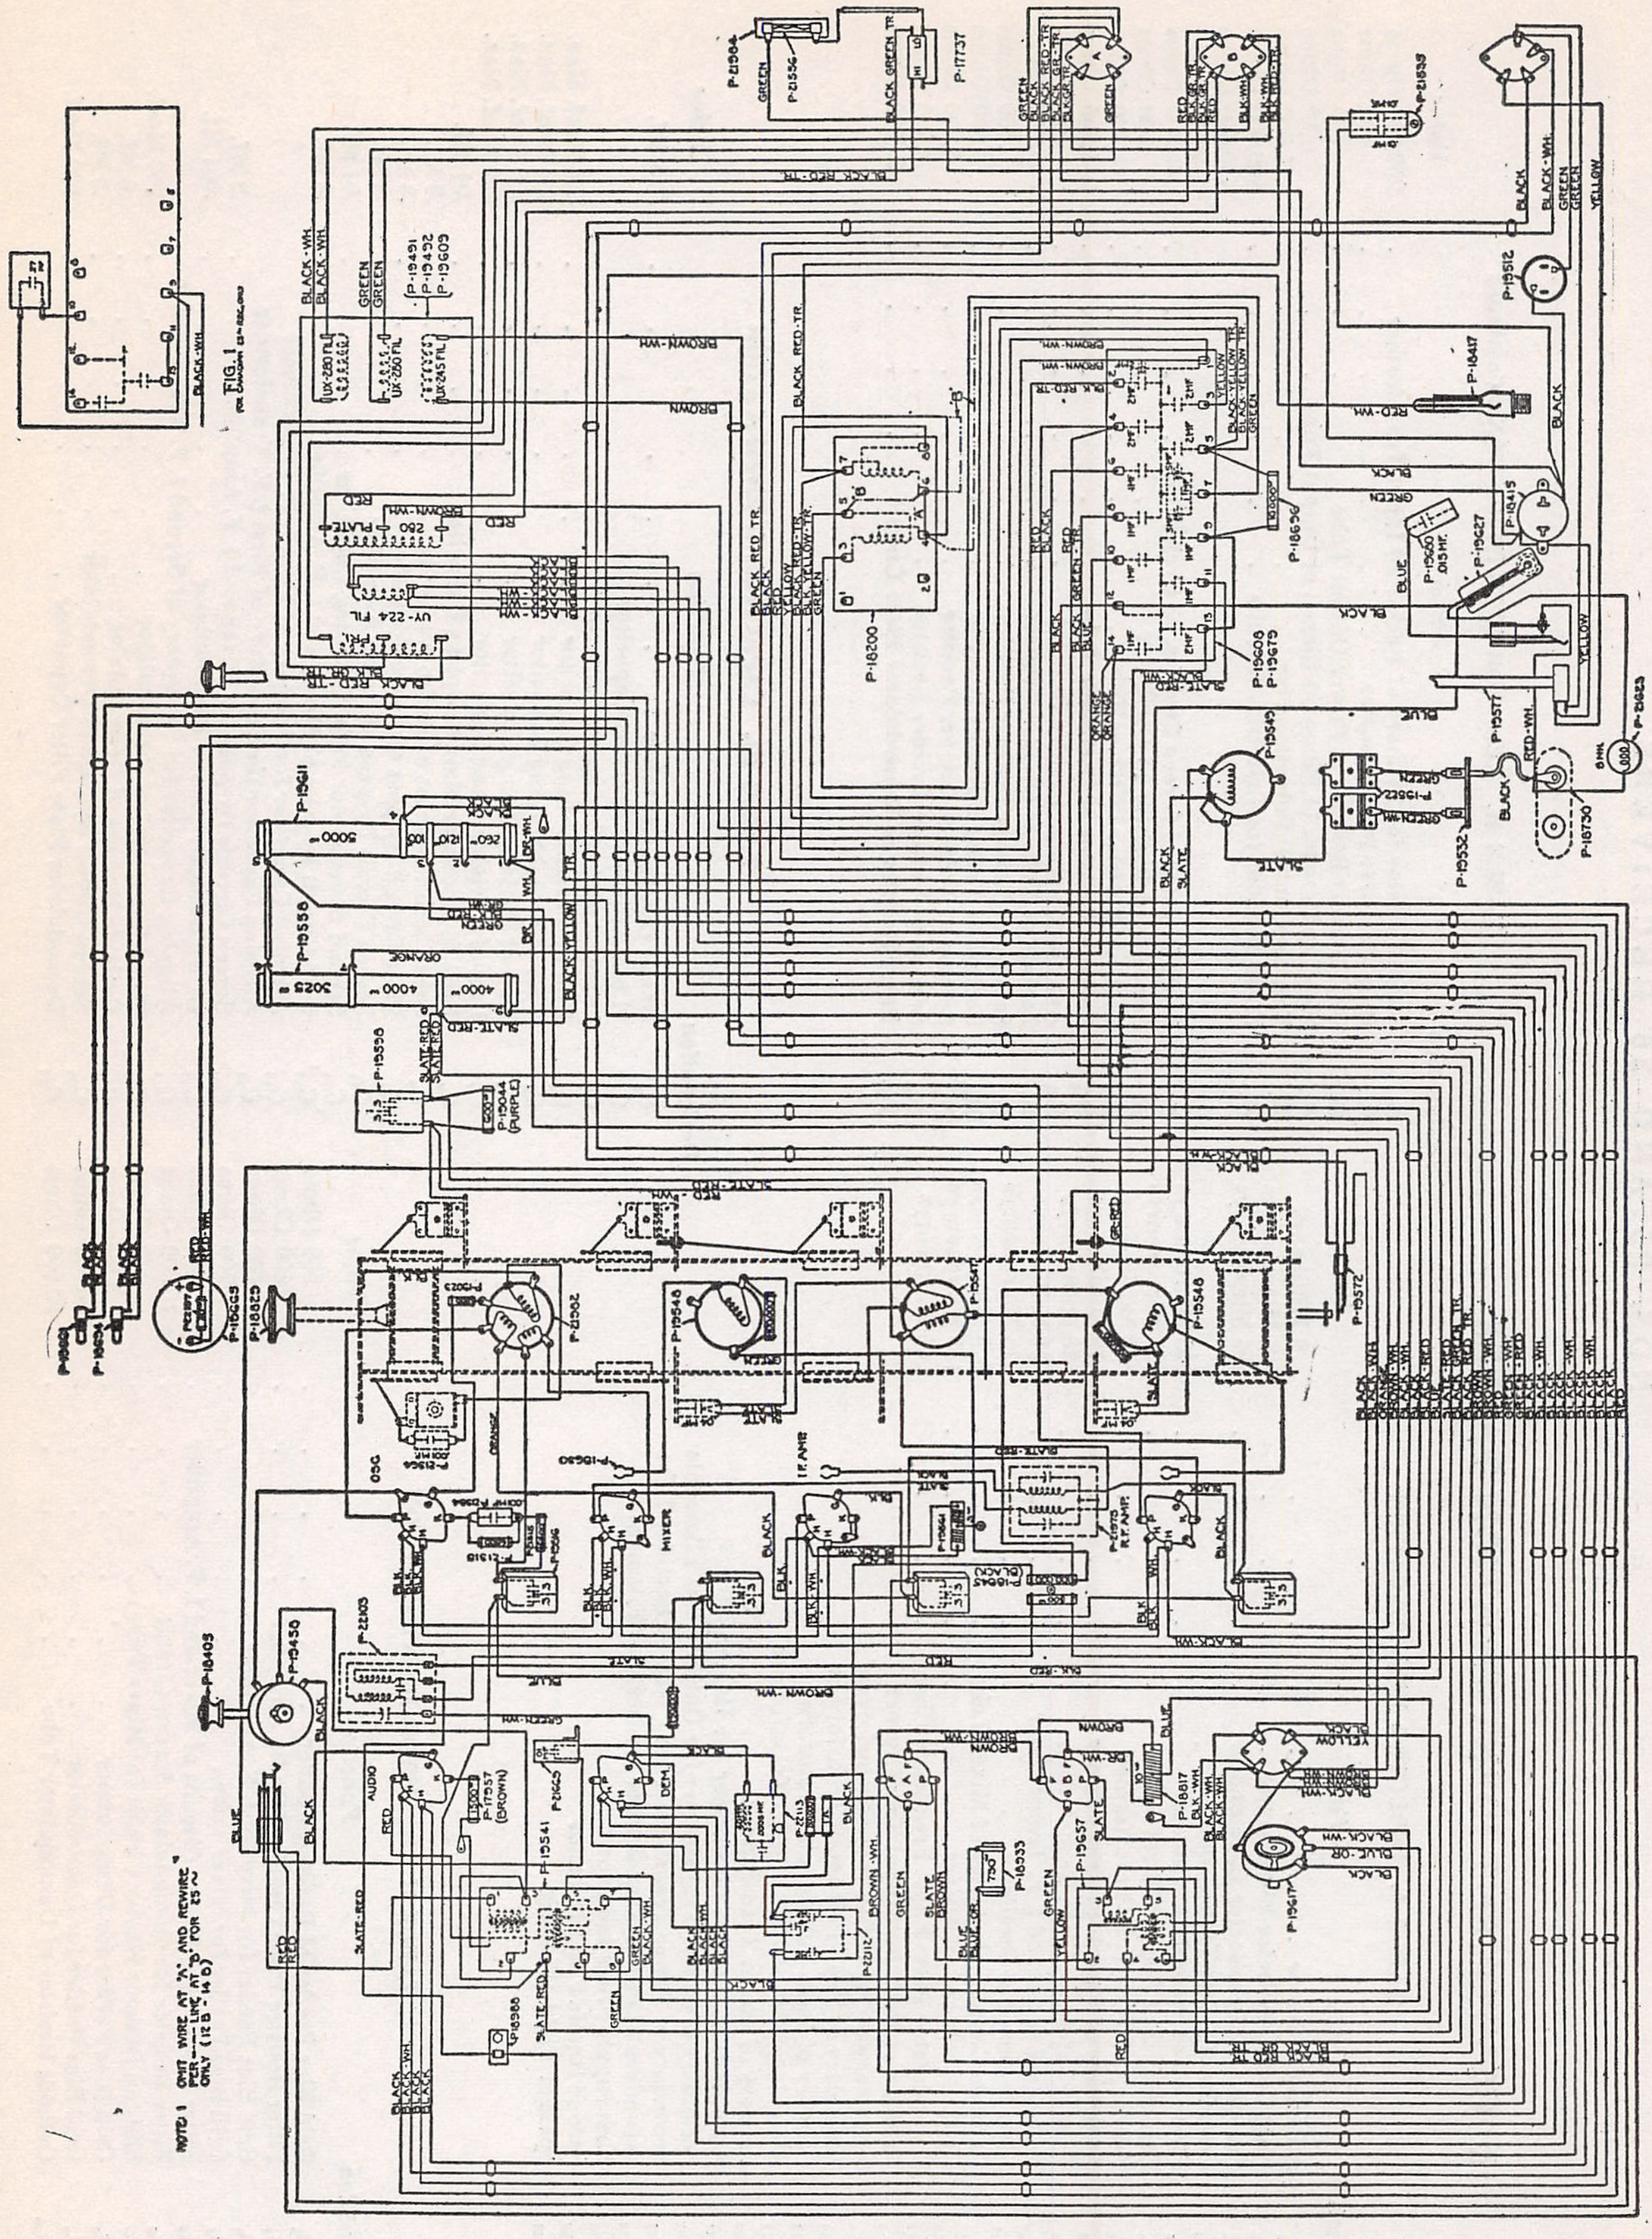
FIG. 1
OSC
MIXER
I.F. AMP.
R.F. AMP.
DEM.
AUDIO
UX-280 FIL
UX-250 FIL
UX-245 FIL
UY-224 FIL
250 PLATE
P-18200
P-15611
P-15558
P-15559
P-18403
P-15450
P-21502
P-15546
P-15547
P-15548
P-15572
P-15549
P-15532
P-18730
P-18415
P-15512
P-18417
P-18630
P-15608
P-15679
P-21564
P-17737
P-21535
P-15541
P-15657
P-18617
P-18933
P-15617

NOTE 1 OMIT WIRE AT "A" AND REWIRE PER --- LINE AT "B" FOR 25~ ONLY (12 B - 14 B)

MODEL 27 AC
Schematic

STROMBERG - CARLSON TEL. MFG. CO.

Schematic Circuit of No. 27 Superheterodyne Receiver

PEAK FREQUENCY 175 KC

NOTE: FOR 25-40~ REC. OMIT WIRES AT "A" AND WIRE PER ----- LINES

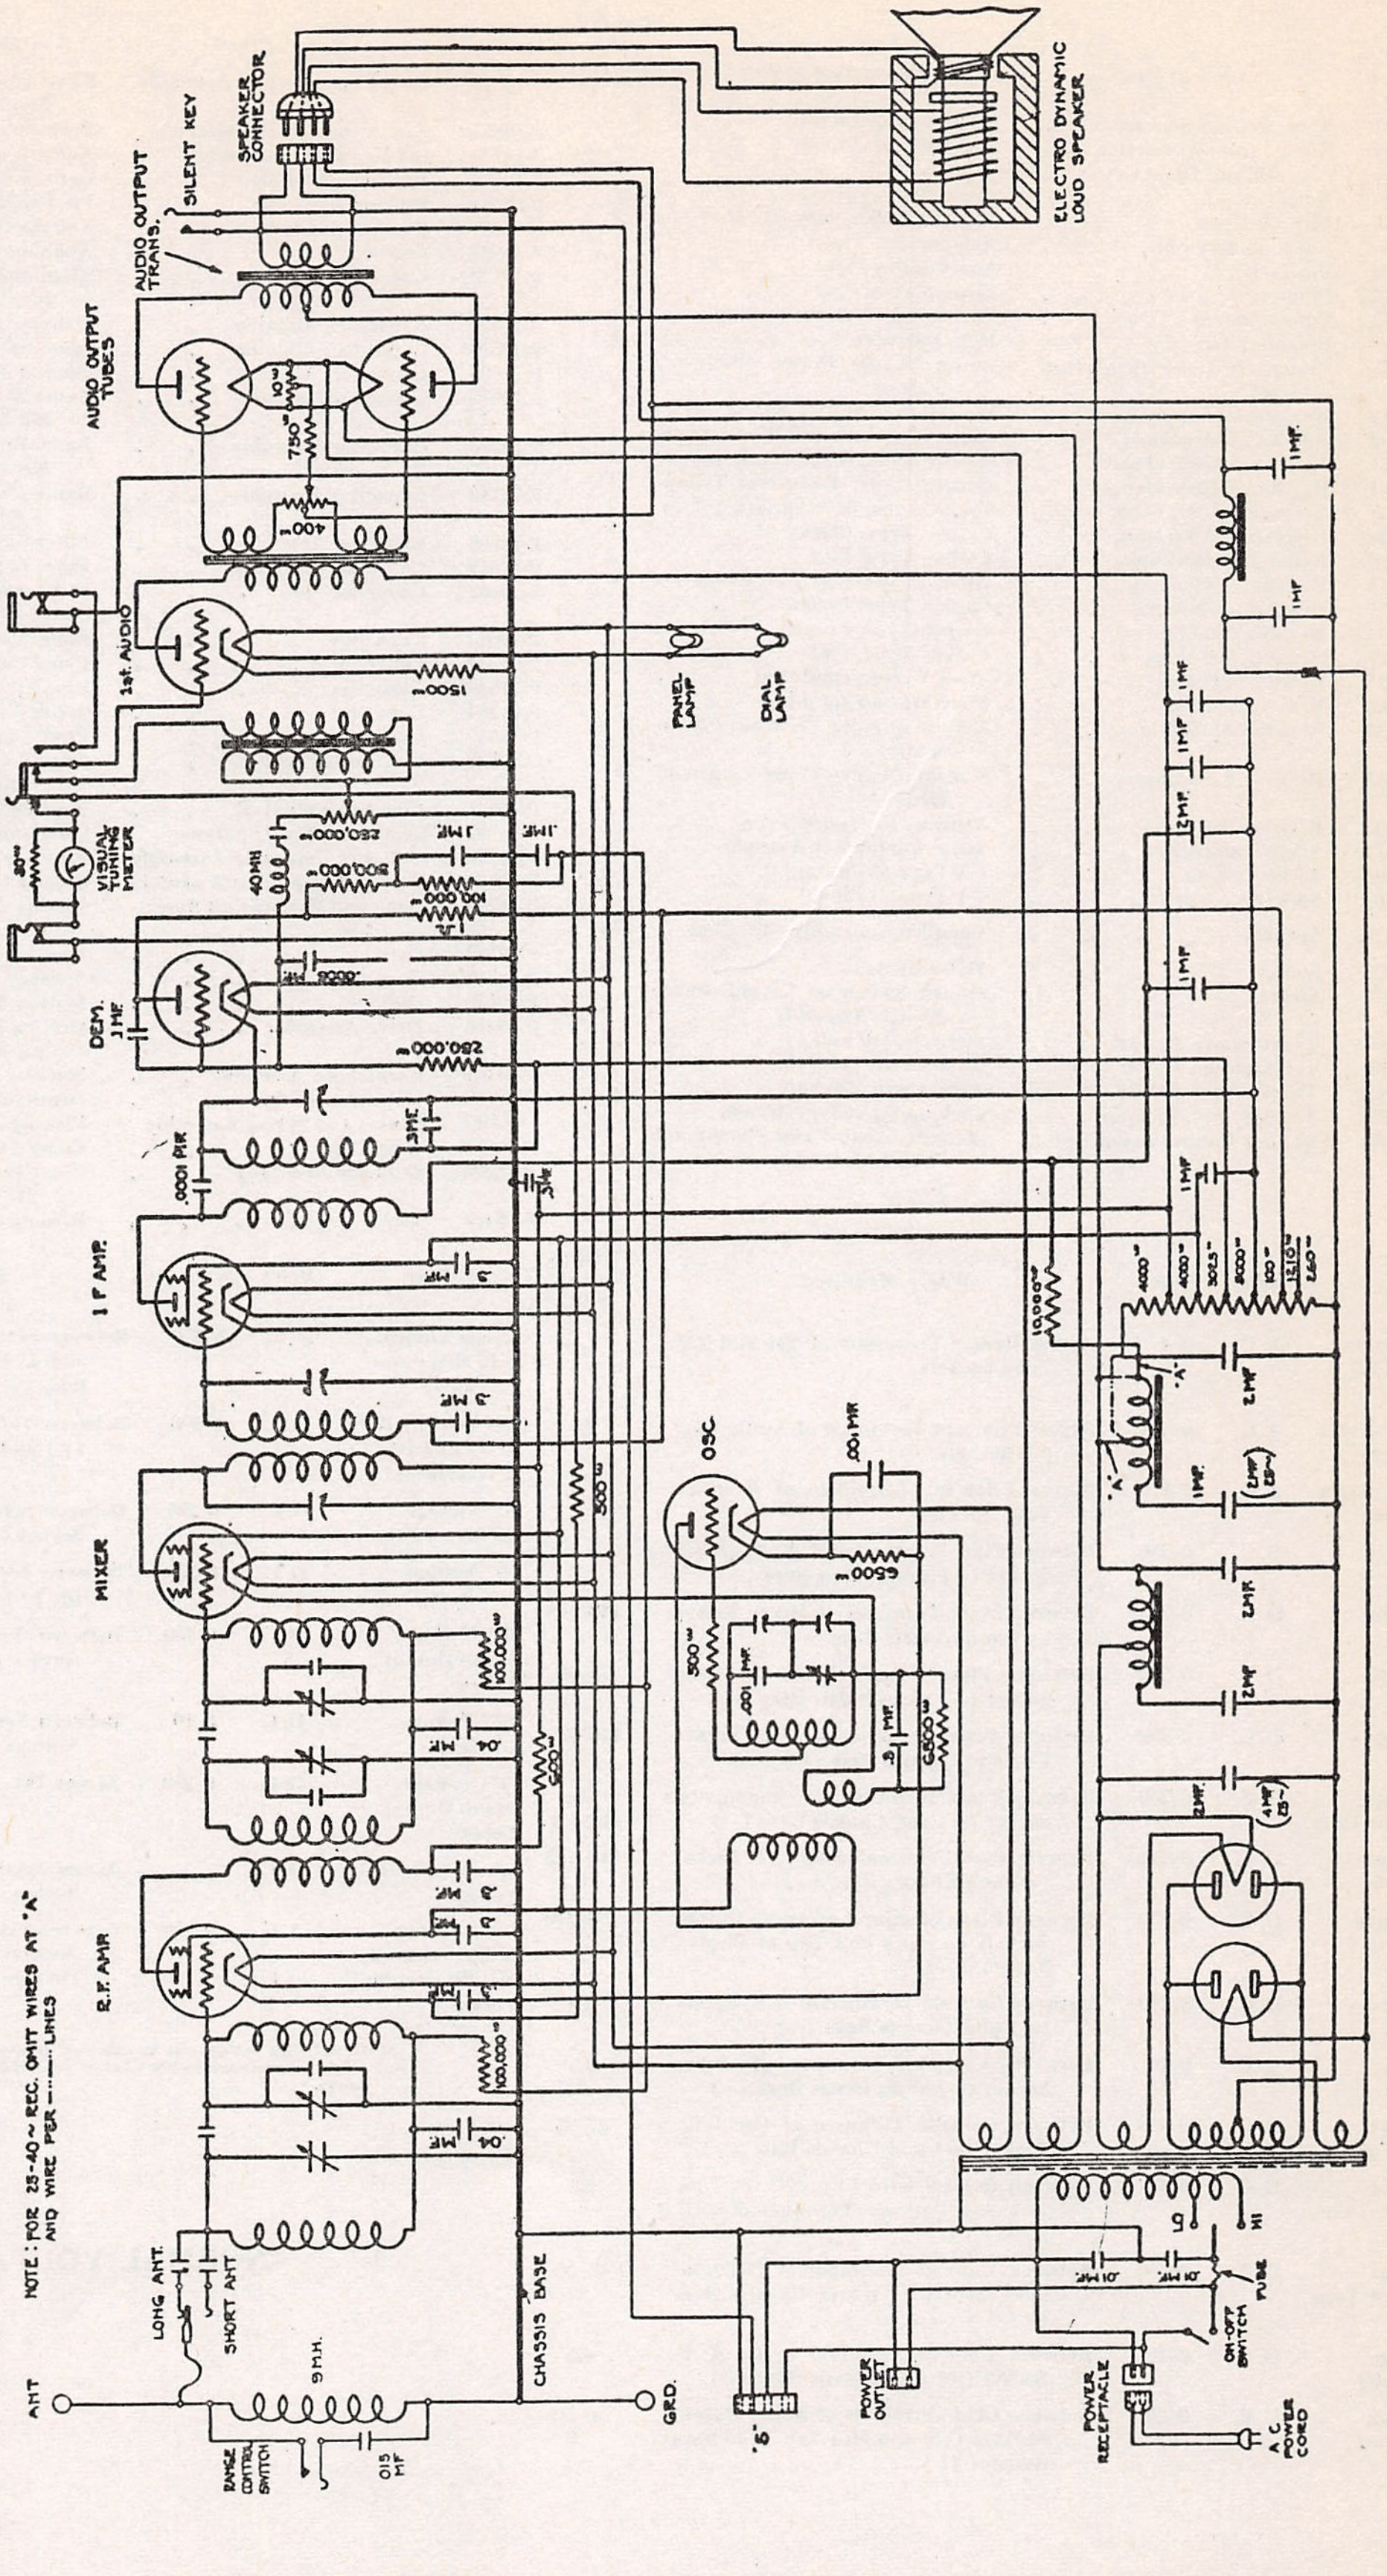
SPEAKER CONNECTOR
SILENT KEY
AUDIO OUTPUT TRANS.
ELECTRO DYNAMIC LOUD SPEAKER
AUDIO OUTPUT TUBES
10~
750~
400~
PICK-UP JACK
1st. AUDIO
1500~
PANEL LAMP
DIAL LAMP
PICK-UP SWITCH
VISUAL TUNING METER
30~
"J"
250,000~
.1MF
500,000~
100,000~
40MH
.0005 MF
DEM.
.1MF
250,000~
.3MF
.0001 MF
I F AMP.
.5 MF
MIXER
100,000~
.04 MF
500~
OSC
.001 MF
6500~
300~
.001 MF
6500~
R.F. AMP.
100,000~
.04 MF
LONG ANT.
SHORT ANT.
ANT
9 MH.
.015 MF
RANGE CONTROL SWITCH
CHASSIS BASE
GRD.
"S"
POWER OUTLET
POWER RECEPTACLE
A C POWER CORD
ON-OFF SWITCH
FUSE
1MF
2MF
4MF
"A"
10,000~
HI
LO

STROMBERG - CARLSON TEL. MFG. CO.

MODEL 27
Voltage
Parts List

Piece Number	Name of Part	Description of Part	Required per Receiver
P-18429	Knob, Station Selector	Large Moulded Knob	1
P-18405	Knob, Volume Control, On-Off and Silent Key	Small Moulded Knob	3
P-19665	Meter	Visual Tuning Meter	1
P-19735	Pick-up Head	Low Impedance Magnetic Pick-up	1
P-19656	Pin Plug Assembly	Antenna Pin Tip	1
P-19532	Pin Jack	Antenna Pin Jacks	1
List 3027	Plug	Pick-up Cord Plug	1
P-19673	Potentiometer	Phonograph Volume Control	1
P-19617	Potentiometer	Hum Balancer	1
P-18415	Receptacle, Convenience Outlet	Power Supply Outlet — Rear of Chassis	1
P-19512	Receptacle, Supply Cord	Input Power Supply Receptacle	1
P-21562	Resistor, 1 Megohm	Carbon Type, Brown-Black-Green	1
P-21697	Resistor, 500,000 ohms	Carbon Type, Green-Black-Yellow	1
P-21561	Resistor, 250,000 ohms	Carbon Type, Red-Green-Yellow	1
P-19533	Resistor, 100,000 ohms	Carbon Type, Brown-Black-Yellow	2
P-18945	Resistor, 100,000 ohms	Carbon Type, Black	1
P-18696	Resistor, 10,000 ohms	Carbon Type, Blue	1
P-21315	Resistor, 6,500 ohms	Carbon Type, Blue-Green-Red	2
P-17957	Resistor, 1,500 ohms	Carbon Type, Brown	1
P-19044	Resistor, 600 ohms	Carbon Type, Purple	1
P-19023	Resistor, 500 ohms	Carbon Type, Pink	2
P-18817	Resistor, 10 ohms	Wire Wound (mid-tap)	1
P-19561	Resistor, 3 ohms	Wire Wound (mid-tap)	1
P-19558	Resistor, 11,025 ohms	Voltage Divider (Vitreous Enameled)	1
P-19611	Resistor, 6,570 ohms	Voltage Divider (Vitreous Enameled)	1
P-18933	Resistor, 750 ohms	Vitreous Enameled Type	1
P-19572	Silent Tuning Key	Silent Tuning Key Assembly	1
P-19508	Socket	UX Type (4 Prong)	5
P-19507	Socket	UY Type (5 Prong)	7
P-19410	Speaker	Complete Assembly—10″ Cone	1
P-17737	Switch	Hi-Lo Switch	1
P-19577	Switch	On-Off Switch on Local-Distance Switch Assembly	1
P-19491	Transformer, Power	60 Cycle, 110 Volt	1
P-19492	Transformer, Power	25-60 Cycle, 110 Volt	1
P-19609	Transformer, Power	25-60 Cycle, 220 Volt	1
P-18957	Transformer, Pick-up	Pick-up Input Transformer	1
P-19458	Volume Control Assembly	Volume Control and Phonograph Switch Assembly	1
P-19541	Audio Transformer Assembly	First Audio and Push-Pull Input Transformer	1
P-19657	Audio Output Transformer	Push-Pull Output Transformer	1
P-18730	Binding Post Assembly	Antenna and Ground Binding Post	1
P-19504	Bracket Assembly	Carbon Resistor Mounting	4
P-18964	Bracket Assembly	Pilot Lamp Socket Mounting	1
P-18691	Bracket Assembly	Voltage Divider Mounting	2
P-18937	Cap	Aligning Capacitor Covers	8
P-19522	Capacitor, Aligning	Aligning Capacitor for Bi-Resonator Circuits	3
P-19521	Capacitor, Aligning	Detector Stage Aligning Capacitor	1
P-19520	Capacitor, Aligning	Antenna Aligning Capacitor	2
P-21964	Capacitor, Aligning	Oscillator Series Tuning Capacitor	1
P-19516	Capacitor Assembly	Radio Bi-Pass Capacitors—Two .3 MF Units	4
P-19598	Capacitor Assembly	Radio Bi-Pass Capacitors—Two .3 MF Units	1
P-22112	Capacitor Assembly	Radio Bi-Pass Capacitors—Three .1 MF Units	1
P-19608	Capacitor Assembly	Filter Capacitor Block—60 Cycle	1
P-19679	Capacitor Assembly	Filter Capacitor Block—25 Cycle	1
P-19452	Capacitor	Bi-Resonator Coupling Capacitor —.04 MF	1
P-19680	Capacitor	Range Control Capacitor—.015 MF	1
P-21334	Capacitor	Fixed Capacitor—.001 MF	1
P-21535	Capacitor	Line Filter Across A. C. Input	1
P-21364	Capacitor	Series Tuning Oscillator Tuning	1
P-19549	Coil Assembly R. F.	First Coil of First Bi-Resonator	1
P-19548	Coil Assembly R. F.	Second Coil of First and Second Bi-Resonators	2
P-19547	Coil Assembly R. F.	First Coil of Second Bi-Resonator	1
P-21982	Coil Assembly, Oscillator	Oscillator Tuning Inductor	1
P-21975	Coil and Capacitor Assembly	First I. F. Transformer	1
P-22103	Coil and Capacitor Assembly	Second I. F. Transformer	1
P-18746	Cone and Moving Coil Assembly	Moving Element of P-19410 Dynamic Speaker	1
P-19502	Cord	Power Supply Cord to Chassis	1
P-19415	Cord	Speaker Connector Cord	1
P-19629	Dial	Station Selector Dial	1
P-19486	Drive Assembly	Driving Unit for Gang Tuning Capacitor Assembly	1
P-18701	Escutcheon Assembly	Selector Dial Escutcheon	1
P-22113	Filter Assembly	Demodulator Plate Filter	1
P-19627	Frame and Spring Assembly	Pick-up Jack	1
P-19630	Grid Clip	Control Grid Clips for Tetrodes	3
P-18200	Inductor Assembly	Filter Inductor Assembly—Double "B" Choke	1
P-18417	Jack	Remote Control Jack	1

Voltage	Meter	Scale	Where Measured	Approx. Value in Volts
Heater Voltages No. 224 and 227 Tubes	A. C.	0–4	Across Heater Terminals of 224 and 227 Tube Sockets	2.4
Filament Voltages No. 245 Tubes	A. C.	0–4	Across Filament Terminals of Audio Output Sockets	2.4
Filament Voltages No. 280 Tubes	A. C.	0–8	Across Filament Terminals of Rectifier Tube Sockets	4.8
Plate Voltage R. F. Tube	D. C.	0–250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (–)	140–165
Plate Voltage Mixer Tube	D. C.	0–250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (–)	140–165
Plate Voltage Oscillator Tube	D. C.	0–250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (–)	75–90
Plate Voltage I. F. Tube	D. C.	0–250	Between Plate Terminal of I. F. Socket (+) and Chassis Base (–)	210–230
Plate Voltage Demodulator Tube	D. C.	0–250	Between Plate Terminal of Demodulator Socket (+) and Chassis Base (–)	See Note A
Plate Voltage 1st A. F. Tube	D. C.	0–250	Between Plate Terminal of 1st A. F. Socket (+) and Chassis Base (–)	110–125
Plate Voltages Audio Output Tubes	D. C.	6–750	Between Plate Terminals of Audio Output Sockets (+) and Mid Tap of 10 ohm Resistor (–)	250–270
"C" Voltage R. F. Tube	D. C.	6–110	Between Cathode Terminal of R. F. Socket (+) and Chassis Base (–)	2.4
"C" Voltage Mixer Tube	D. C.	0–10	Between Cathode Terminal of Mixer Socket (+) and Chassis Base (–)	6.5
Grid Voltage Oscillator Tube	D. C.	0–250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (–)	27–35
Control Grid Voltage I. F. Tube	D. C.	0–10	Between Control Grid Clip of I. F. Tube (–) and Cathode Terminal of I. F. Socket (+)	2.8
Grid Voltage Demodulator Tube	D. C.	0–250	Between Cathode Terminal of Demodulator Socket (+) and Chassis Base (–)	45–55
Grid Voltage 1st A. F. Tube	D. C.	0–10	Between Cathode Terminal of 1st A. F. Socket (+) and Chassis Base (–)	6.5
Grid Voltage Audio Output Tube	D. C.	0–250	Between Grid Terminals of Audio Output Sockets (–) and Mid Tap of 10 ohm Resistor (+)	40–50
Screen Voltages R. F. Mixer and I. F. Tubes	D. C.	0-250	Between Screen Terminals of R. F., Mixer and I. F. Sockets (+) and Chassis Base (–)	75-90
"B" Voltages R. F. Mixer and 1st A. F. Tubes	D. C.	0-250	Between Terminal 8 on Voltage Divider (+) and Chassis Base (–)	140-165
"B" Voltage Oscillator Tube	D. C.	0-250	Between Screen Terminal of Mixer Tube Socket (+) and Chassis Base (–)	75-90
"B" Voltage I. F. Tube	D. C.	0-250	Between Terminal 9 on Capacitor Assembly (+) and Chassis Base (–)	210-230
"B" Voltage Audio Output Tubes	D. C.	0-750	Between Terminal 4 on Output Transformer (+) and Chassis Base (–)	248-268
"C" Voltage I. F. Tube	D. C.	0-10	Between Terminals 3 (–) and 4 (+) on Voltage Divider	2.9
"C" Voltage Audio Output Tubes	D. C.	0-250	Across 750 ohm Biasing Resistor	45-55
Speaker Field Voltage	D. C.		Across Small Pins on Speaker Connector Socket	335-365
Plate Voltage A. C. Per Anode No. 280 Rectifier Tubes	A. C.	0-150	Between Plate Terminals of Rectifier Tube Sockets and Terminal 1 on Voltage Divider	330-360

NOTE "A"—No voltage can be obtained across these terminals as the Demodulator Plate is connected to the Chassis Base through 1 megohm and 100 ohm resistances.

NORMAL VOLTAGE READINGS

MODEL 29
Chassis Wiring

STROMBERG - CARLSON TEL. MFG. CO.

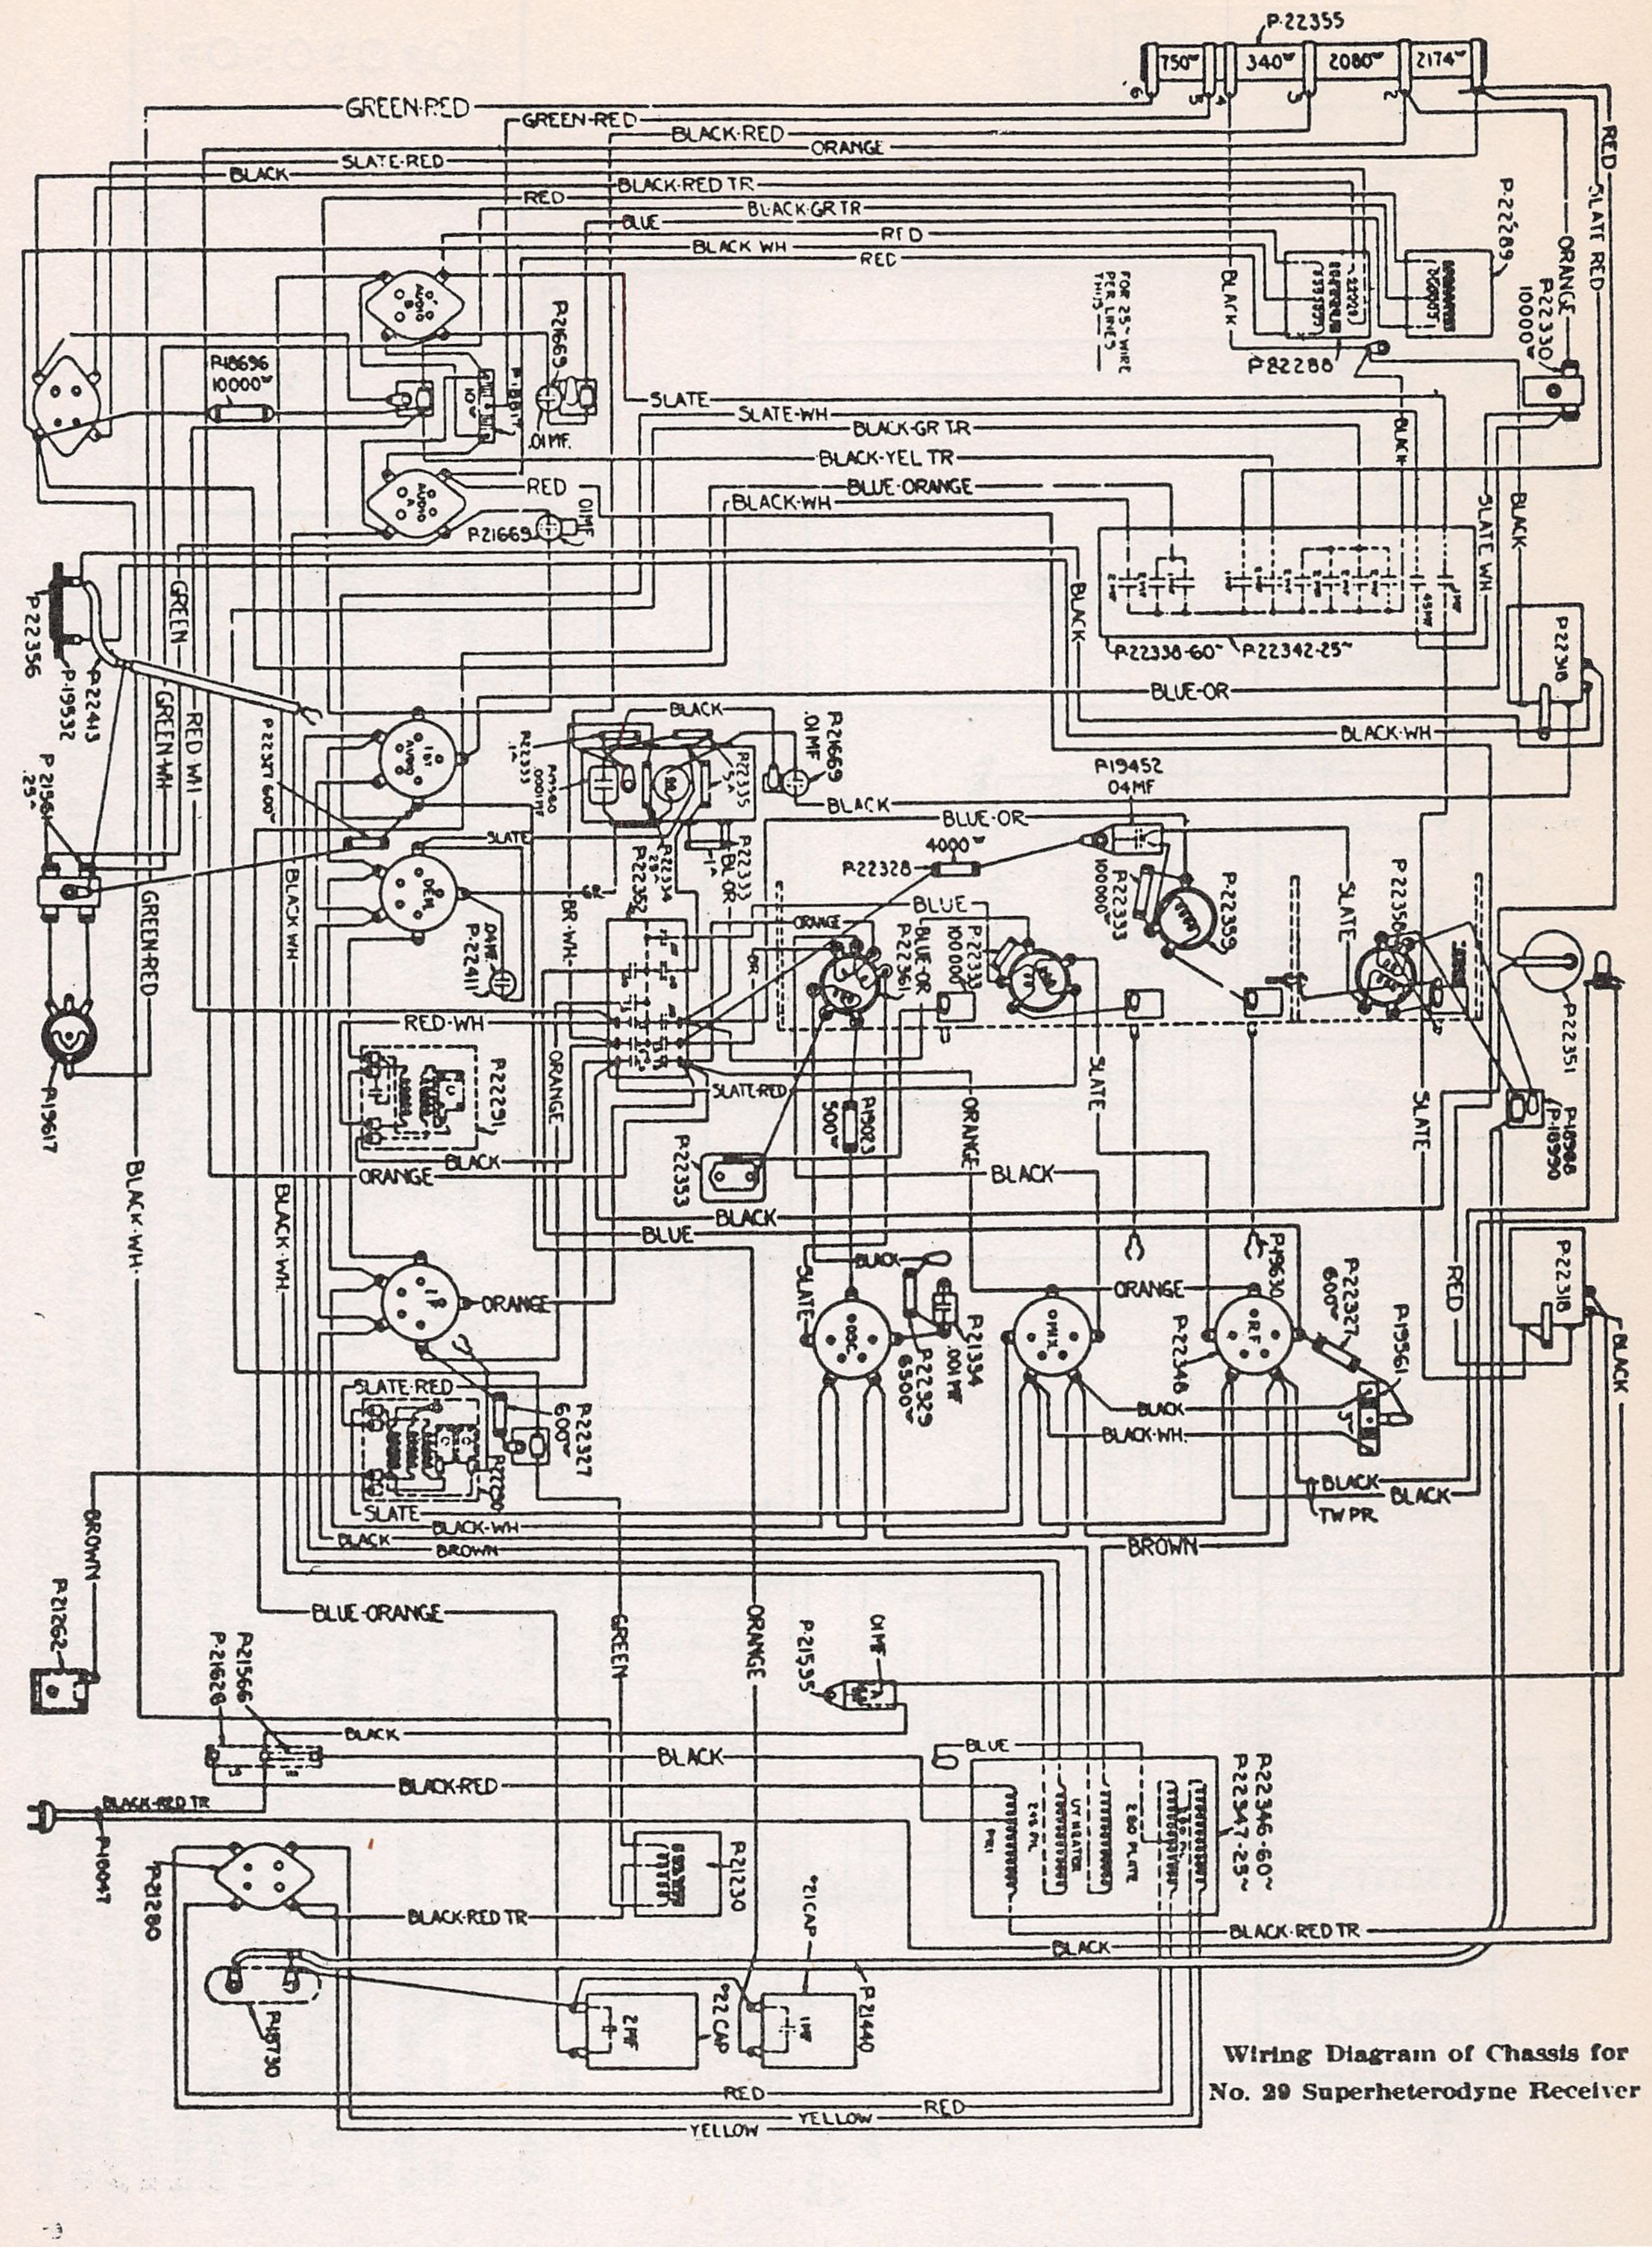
P-22355
750Ω
340Ω
2080Ω
2174Ω
GREEN-RED
BLACK-RED
ORANGE
BLACK
SLATE-RED
BLACK-RED TR
RED
BLUE
BLACK-GR TR
BLACK WH
RED
P-22289
P-22330 10000Ω
P22288
FOR 25~ WIRE PER LINES THUS
SLATE RED
R18696 10000Ω
P-21665
.01 MF.
P-21669
SLATE
SLATE-WH
BLACK-GR TR
BLACK-YEL TR
BLACK-WH
BLUE-ORANGE
P-22338-60~
P-22342-25~
BLUE-OR
BLACK-WH
P-22356
P-19532
P-22413
P-22327 600Ω
P-21561 .25~
GREEN
GREEN-WH
RED-WH
BLACK-WH
GREEN-RED
P-19617
P-22335
P-22411
P19452 .04MF
P-22328
4000Ω
P-22333 100000Ω
P-22359
P-22358
P-22351
P-22333 100000Ω
P-22361
P-22352
P-22334
P-22331
P-22353
P19023 500Ω
P-18988
P-18990
P-22318
RED-WH
ORANGE
SLATE-RED
BLACK
BLUE
P-21334 .001 MF
P-22329 6500Ω
P-19630
P-22346
P-22327 600Ω
P-19561
TW PR
BROWN
SLATE-RED
SLATE
P-22327 600Ω
BLACK-WH
BLUE-ORANGE
GREEN
ORANGE
P-21262
P-21535
.01 MF
P-21566
P-21626
BLACK
BLACK-RED
BLACK-RED TR
P-10047
P-22280
P-21230
P-22346-60~
P-22347-25~
BLACK-RED TR
BLACK
P-18730
2 MF
P-22 CAP
P-21 CAP
1 MF
P-21440
RED
YELLOW

Wiring Diagram of Chassis for No. 29 Superheterodyne Receiver

MODEL 29
Schematic

STROMBERG - CARLSON TEL. MFG. CO.

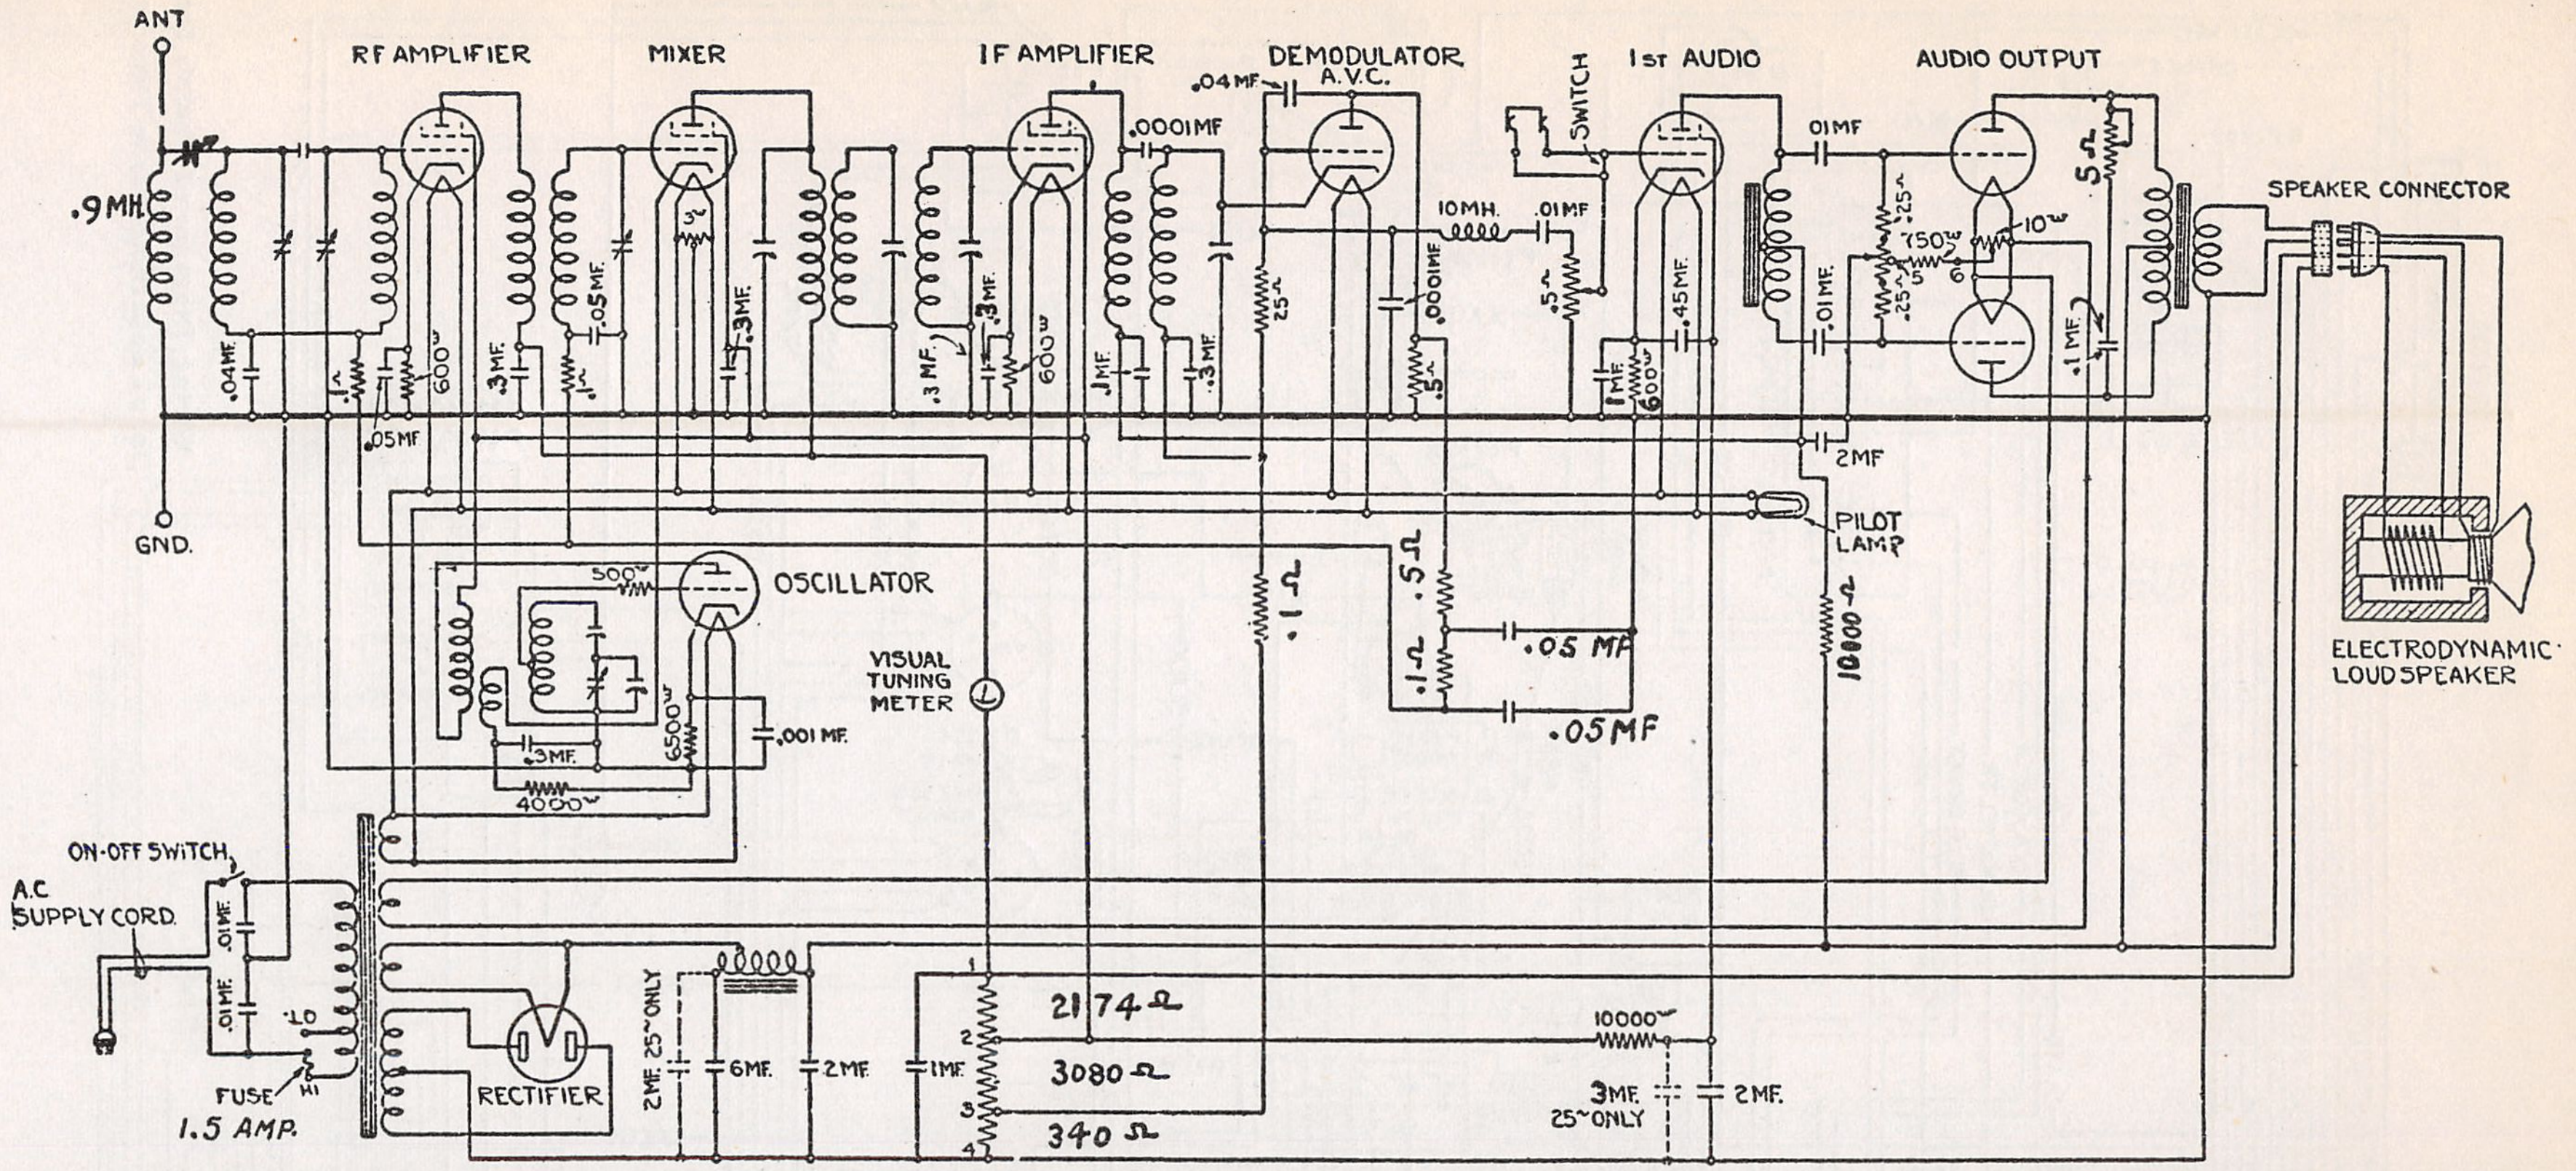
ANT
GND.
.9MH.
RF AMPLIFIER
MIXER
IF AMPLIFIER
DEMODULATOR A.V.C.
SWITCH
1st AUDIO
AUDIO OUTPUT
SPEAKER CONNECTOR
ELECTRODYNAMIC LOUDSPEAKER
.04MF.
.1^
.05MF
600^
.3MF.
.05MF.
3^
.0001MF
600^
.04MF
25^
10MH.
.01MF
.5^
.0001MF
.45MF.
1MF.
600^
01MF
.01MF.
.25^
750^
10^
6
5^
.1MF.
2MF
PILOT LAMP
10000^
.1^
.5^
.1^
.05MF
.05MF
OSCILLATOR
500^
VISUAL TUNING METER
6500^
.3MF.
4000^
.001 MF.
ON-OFF SWITCH
A.C. SUPPLY CORD.
.01MF.
.01MF.
LO
HI
FUSE
1.5 AMP.
RECTIFIER
2MF. 25~ONLY
6MF.
2MF.
1MF.
1
2
3
4
2174^
3080^
340^
10000^
3MF. 25~ONLY
2MF.

The Stromberg-Carlson No. 29 Radio Receiver is a Superheterodyne employing nine tubes. An improved Automatic Volume Control circuit with Visual Tuning Meter is incorporated.

Four No. 235 tubes are used as R. F. Amplifier, Mixer, I. F. Amplifier, and First Audio Amplifier. Two No. 227 tubes are used as Oscillator and Demodulator-AVC. Two No. 245 tubes are used in the push-pull output stage. A No. 280 Rectifier is used in the power supply.

A Bi-resonator is used to couple the antenna to the R. F. amplifier to prevent any cross modulation. The R. F. amplifier is coupled to the mixer by an ordinary tuned R. F. transformer. This gives three tuning circuits (four gang tuning capacitor) for R. F. selectivity ahead of the mixer, thus the image response ratio is exceedingly high. The oscillator is coupled to the cathode circuit of the mixer tube in the regular manner. The I. F. output of the mixer tube is fed into a Tri-resonator (three tuned circuit transformer) and thence to the I. F. amplifier tube. This tube is coupled to the duo-diode demodulator-AVC tube by a choke-tuned circuit arrangement. The audio output of the duo-diode is fed through a radio frequency filter to the resistor unit of the Manual Volume Control which acts as a coupling resistor to the audio amplifier. The A. V. C. voltages from the other diode circuit are led back to the control grids of the first two tubes. A No. 235 screen grid tube is used in the first audio stage to obtain high amplification without distortion.

Model 29 (1932)

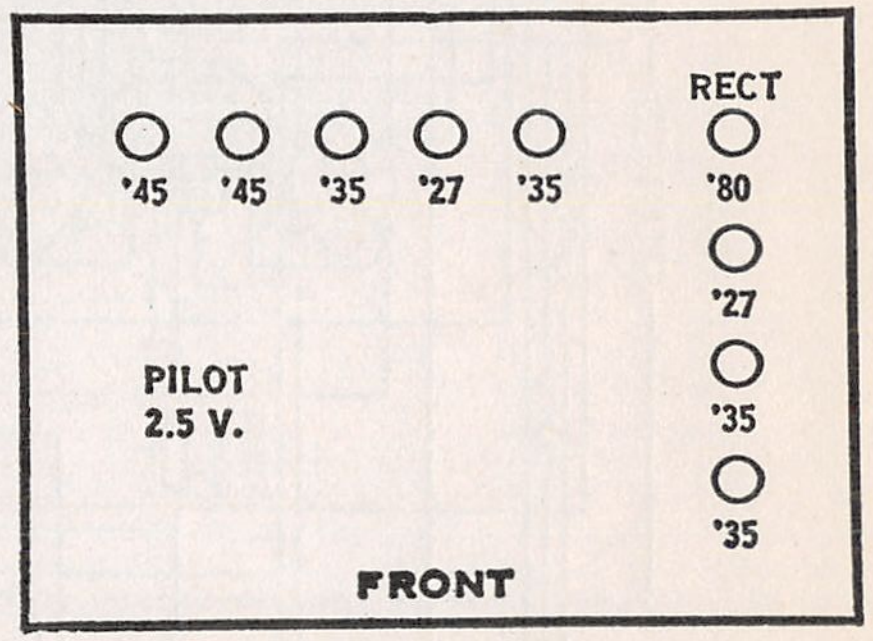
'45
'45
'35
'27
'35
RECT
'80
'27
'35
'35
PILOT 2.5 V.
FRONT

MODEL 29
Parts List
Voltage

STROMBERG-CARLSON TEL. MFG. CO.

REPLACEMENT PARTS

(See Chassis Assembly on Page 4 and Wiring Diagram on Page 2)

Piece Number	Part	Description of Part	Required per Receiver
P-22288	Audio Transformer	Audio Output Transformer	1
P-22289	Audio Transformer	Push-Pull Transformer	1
P-21663	Bracket Assembly	Voltage Divider Mounting	1
P-22352	Capacitor	By-Pass Capacitor	1
P-22353	Capacitor, Aligning	Oscillator "Series Aligner"	1
P-21334	Capacitor	.001 Mfd.	1
P-21535	Capacitor	.01 Mfd.	1
P-21669	Capacitor	.01 Mfd.	3
Code No. 21	Capacitor	1 Mfd. Filter Capacitor	1
Code No. 22	Capacitor	2 Mfd. Filter Capacitor	1
P-19452	Capacitor	Bi-Resonator Coupling Capacitor .04 Mfd.	1
P-22411	Capacitor	.04 Mfd.	1
P-21262	Capacitor, Aligning	Aligner for First I. F. Transformer	1
P-22338	Capacitor Assembly	Filter Capacitor (60 Cycle)	1
P-22342	Capacitor Assembly	Filter Capacitor (25 Cycle)	1
P-22290	Coil and Capacitor Assembly	First I. F. Transformer	1
P-22291	Coil and Capacitor Assembly	Second I. F. Transformer	1
P-22358	Coil Assembly	First Coil of Bi-Resonator	1
P-22359	Coil Assembly	Second Coil of Bi-Resonator	1
P-22360	Coil Assembly	R. F. Transformer	1
P-22361	Coil Assembly	Oscillator Coil	1
P-21623	Coil Assembly	Antenna Inductor	1
P-21566	Fuse	1½ Amperes	1
P-19630	Grid Clip		4
P-21704	Grid Clip Assembly		2
P-21230	Inductor Assembly	Filter Inductor—"B" Choke	1
P-21277	Knob	Antenna Aligner	1
P-22390	Knob	Selector Knob	1
P-22391	Knob	Volume Control and Clarifier-Switch	2
P-22351	Meter	Visual Tuning Meter	1
P-19617	Potentiometer	Hum Adjuster	1
P-22318	Potentiometer and Switch	Volume Control and Phonograph Switch and Clarifier and "On-Off" Switch	2
P-19561	Resistor, 3-Ohms	Resistor across Heater of Mixer Tube	1
P-18817	Resistor, 10-Ohms	Resistor across Filament of Output Tubes	1
P-19023	Resistor, 500-Ohms, "C" Type	Carbon Resistor, Green, Black, and Brown	1
P-22327	Resistor, 600-Ohms, "C" Type	Carbon Resistor, Blue, Black, and Brown	3
P-22328	Resistor, 4,000-Ohms, "C" Type	Carbon Resistor, Yellow, Black, and Red	1
P-22329	Resistor, 6,500-Ohms, "C" Type	Carbon Resistor, Blue, Green, and Red	1
P-22355	Resistor, 7,344-Ohms,	Voltage Divider	1
P-18696	Resistor, 10,000-Ohms, "B" Type	Carbon Resistor, Brown, Black, and Orange	1
P-22330	Resistor, 10,000-Ohms, "C" Type	Carbon Resistor, Brown, Black, and Orange	1
P-22333	Resistor, 100,000-Ohms, "D" Type	Carbon Resistor, Brown, Black and Yellow	4
P-21561	Resistor, 250,000-Ohms, "C" Type	Carbon Resistor, Red, Green, and Yellow	2
P-22334	Resistor, 250,000-Ohms, "D" Type	Carbon Resistor, Red, Green, and Yellow	1
P-22335	Resistor, 500,000-Ohms, "D" Type	Carbon Resistor, Green, Black, and Yellow	2
P-22344	Resistor and Coil Assembly	Demodulator Plate Filter	1
P-22346	Transformer	Power, 60 Cycle, 110 Volts	1
P-22347	Transformer	Power, 25-60 Cycle, 110 Volts	1

NORMAL VOLTAGE READINGS

These voltage readings correspond to a line voltage at 120 volts with the fuse in the "HI" position or 110 volts in the "LO" position. The fuse should be set in the proper position for the line voltage obtained before making measurements. When voltages are measured proper allowance should be made for a difference in line voltage above or below 110 or 120 volts. Be sure to make these readings with the Meter and Scale indicated, otherwise the results will not agree with those tabulated. Alternating voltages are indicated by italics.

Voltage	Meter	Scale	Where Measured	Approx. Value in Volts
Heater Voltages No. 227 and No. 235 Tubes	A. C.	0-4	Across Heater Terminals of Sockets	*2.48*
Filament Voltage No. 245 Tubes	A. C.	0-4	Across Filament of Audio Output Socket	*2.48*
Plate Voltage Radio Amplifiers	D. C.	0-250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base	170
Plate Voltage Mixer Tube	D. C.	0-250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (—)	170
Plate Voltage Oscillator Tube	D. C.	0-250	Between Plate Terminal of Oscillator Tube Socket (+) and Chassis Base (—)	87
Plate Voltage I. F. Tube	D. C.	0-250	Between Plate Terminal of First I. F. Socket (+) and Chassis Base (—)	220
Plate Voltage First Audio Tube	D. C.	0-250	Between Plate Terminal of First Audio Socket (+) and Chassis Base (—)	192
Plate Voltage Audio Output Tubes	D. C.	0-750	Between Plate Terminals of Audio Output Sockets (+) and Midtap 10-Ohm Resistor Midtap (—)	250
"C" Voltage R. F. Amplifier	D. C.	0-10	Between Cathode Terminal of R. F. Amplifier Socket (+) and Chassis Base (—)	3
"C" Voltage Mixer Tube	D. C.	0-10	Between Cathode Terminal of Mixer Socket (+) and Chassis Base (—)	3
"C" Voltage I. F. Amplifier	D. C.	0-10	Between Cathode Terminal I. F. Socket (+) and Chassis Base (—)	3
Grid Voltage Oscillator Tube	D. C.	0-250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (—)	14-18
Plate Voltage Demodulator Tube	D. C.	0-250	Between Voltage Divider Terminal No. 3 (+) and Chassis Base (—)	12.5
Screen Voltages of R. F. Amplifier, Mixer, and I. F. Amplifier	D. C.	0-250	Between Screen Terminals on Sockets (+) and Chassis Base (—)	87
"B" Voltage R. F. Amplifier	D. C.	0-250	Between High Side Voltage Divider (+) and Chassis Base (—)	175
"B" Voltage I. F. Amplifier and First Audio Tube	D. C.	0-250	Between Midtap First Audio Transformer (+) and Chassis Base (—)	225
"B" Voltage Output Tubes	D. C.	0-750	Between Midtap on Output Transformer (+) and Chassis Base (—)	365
"C" Voltage First A. F. Tube	D. C.	0-10	Between Cathode of First A. F. Tube (+) and Chassis Base (—)	3
"C" Voltages Output Tubes	D. C.	0-250	Across 750-Ohm Biasing Resistor	50
Speaker Field Voltage	D. C.	0-250	Across Small Pins on Speaker Connector Socket	127.5
Plate Voltage A. C. Per Anode No. 280 Rectifier Tube	A. C.		Between Plate Terminals of No. 280 Rectifier Socket and Chassis Base	*340*
Filament Voltage No. 230 Rectifier Tube	A. C.	0-6	Between Filament Terminals of No. 280 Rectifier Socket	*4.9*

MODEL 38, 39, 40
1st Type
Schematic

STROMBERG - CARLSON TEL. MFG. CO.

ELECTRICAL SPECIFICATIONS

Type of Circuit	Superheterodyne
Type and Number of Tubes	4 No. 58, 2 No. 56, 2 No. 45, 1 No. 80
Voltage Rating	105–125 volts
Frequency Rating	60 cycles and 25-60 cycles
Power Consumption	110 watts
Undistorted Electrical Power Output of Chassis	3.2 watts

CIRCUIT DESCRIPTION

The four No. 58 triple-grid tubes are used as R. F. Amplifier, Mixer, I. F. Amplifier, and Demodulator-AVC. The two No. 56 tubes are used as Oscillator and First Audio Amplifier. The two No. 45 tubes are used in the push-pull output stage. The No. 80 is used as the rectifier in the power supply.

A Bi-resonator is used to couple the antenna to the R. F. amplifier to prevent any cross modulation. The R. F. amplifier is coupled to the mixer by an ordinary tuned R. F. transformer. This gives three tuning circuits (four gang tuning capacitor) for R. F. selectivity ahead of the mixer, thus the image response ratio is exceedingly high. The oscillator is coupled to the cathode circuit of the mixer tube in the regular manner. The I. F. output of the mixer tube is fed into a Tri-resonator (three tuned circuit transformer) and thence to the I. F. amplifier tube. This tube is coupled to the diode-triode demodulator-AVC tube by a single tuned circuit transformer.

The load resistor of the diode portion of the diode-triode forms the resistor unit of the first potentiometer of the dual volume control. The AVC voltage and the rectified audio signal are built up across this resistor. The AVC voltage is fed back to the grids of the first two tubes through a suitable filter. The audio voltage is applied to the control grid of the triode portion of this system through the movable contact of the potentiometer. The screen of the tube acts as the plate of the triode portion of the system, thus forming the triode audio amplifier in conjunction with the diode rectifier.

The output of this "plate" circuit is coupled to the second unit of the dual volume control which feeds the grid of the first audio tube. The output of this first audio stage is coupled to the push-pull output triodes. The Adjustable Automatic Clarifier system is connected across the primary of the push-pull input transformer. The output transformer feeds the signal from the power triodes to the high quality electro-dynamic speaker.

The power supply system employs two stages of filter; the first being of the resistance type, and the second using the field of the speaker as a choke. The plate supply for the output tubes is tapped off between these filter sections, while the remainder of the voltages are supplied from the voltage divider resistor.

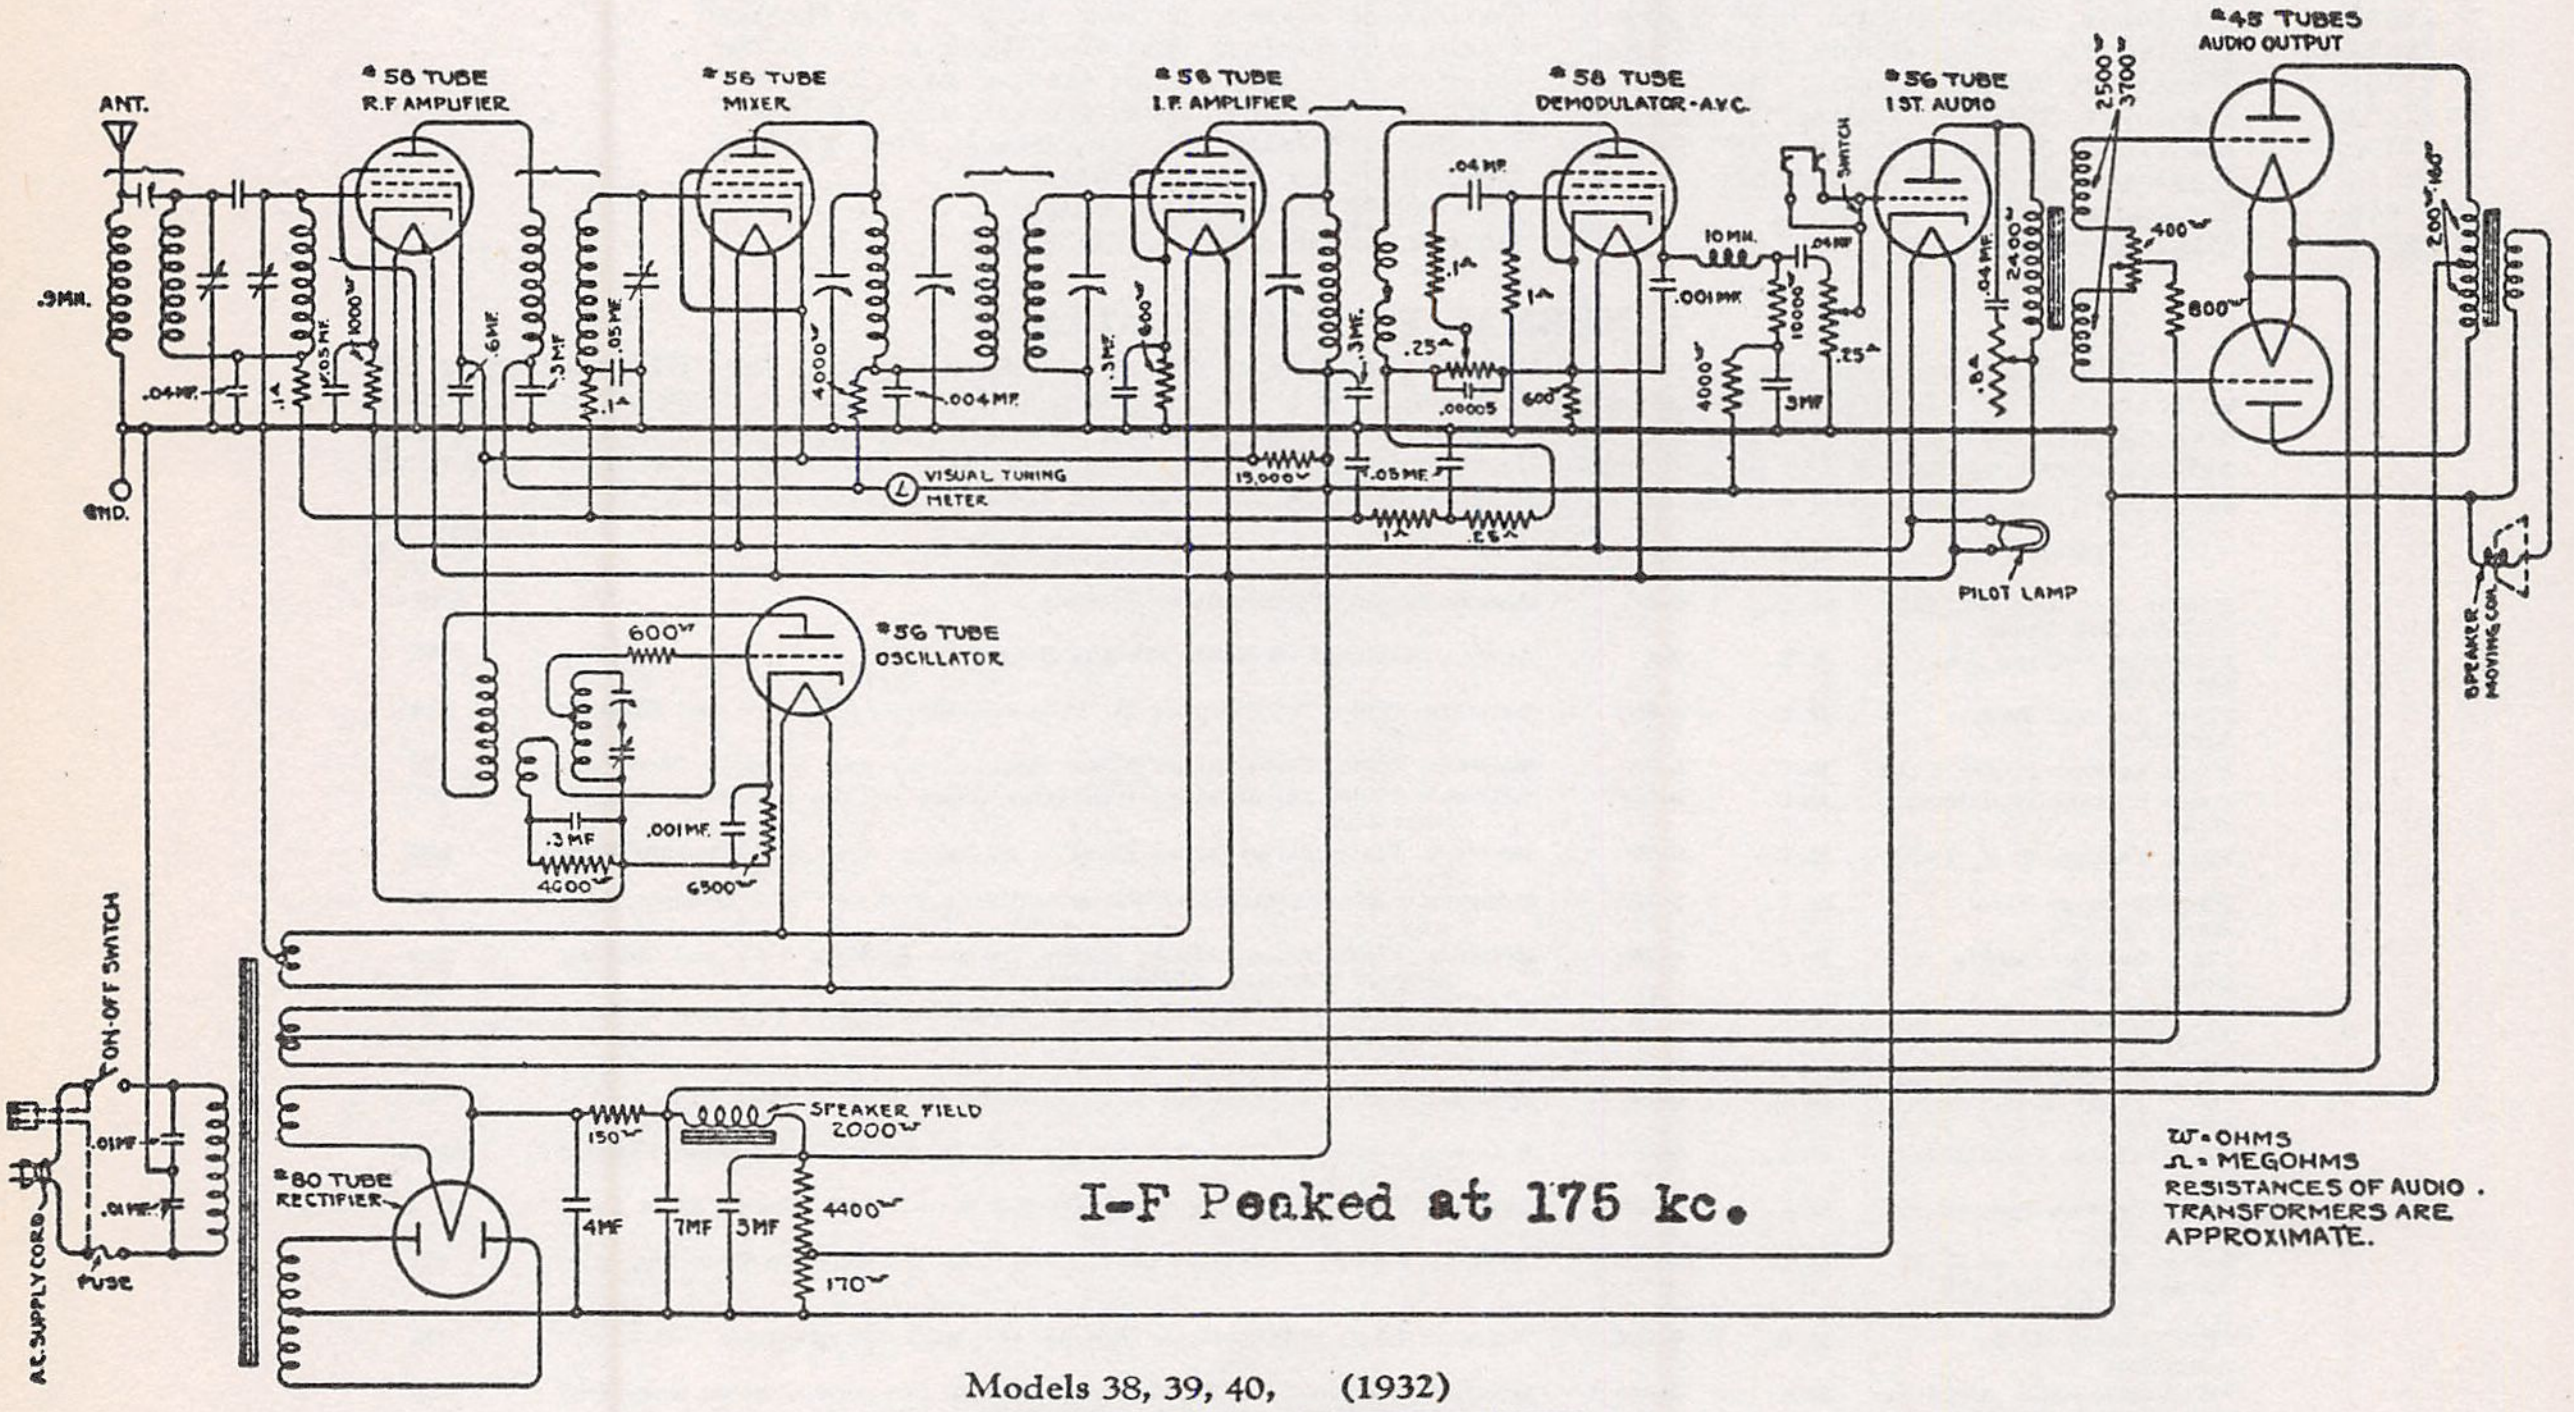
#58 TUBE R.F AMPLIFIER
#58 TUBE MIXER
#58 TUBE I.F. AMPLIFIER
#58 TUBE DEMODULATOR-AVC
#56 TUBE 1ST. AUDIO
#45 TUBES AUDIO OUTPUT
#56 TUBE OSCILLATOR
#80 TUBE RECTIFIER
ANT.
GND.
.9MH.
.04MF.
VISUAL TUNING METER
PILOT LAMP
SWITCH
10MH.
.001MF.
.004MF.
.00005
15,000Ω
.05MF.
600Ω
4000Ω
2500Ω
3700Ω
2400Ω
400Ω
800Ω
4600Ω
6500Ω
.3MF
.001MF.
SPEAKER MOVING COIL
ON-OFF SWITCH
A.C. SUPPLY CORD
FUSE
.01MF
SPEAKER FIELD 2000Ω
150Ω
4MF
1MF
3MF
4400Ω
170Ω
I-F Peaked at 175 kc.
Ω = OHMS
Ω = MEGOHMS
RESISTANCES OF AUDIO TRANSFORMERS ARE APPROXIMATE.

Models 38, 39, 40, (1932)

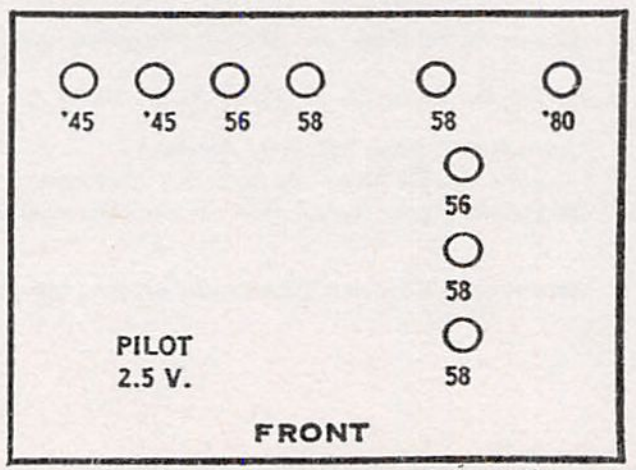
'45
'45
56
58
58
'80
56
58
58
PILOT 2.5 V.
FRONT

STROMBERG - CARLSON TEL. MFG. CO.

MODEL 38,39,40
1st Type
Chassis Wiring

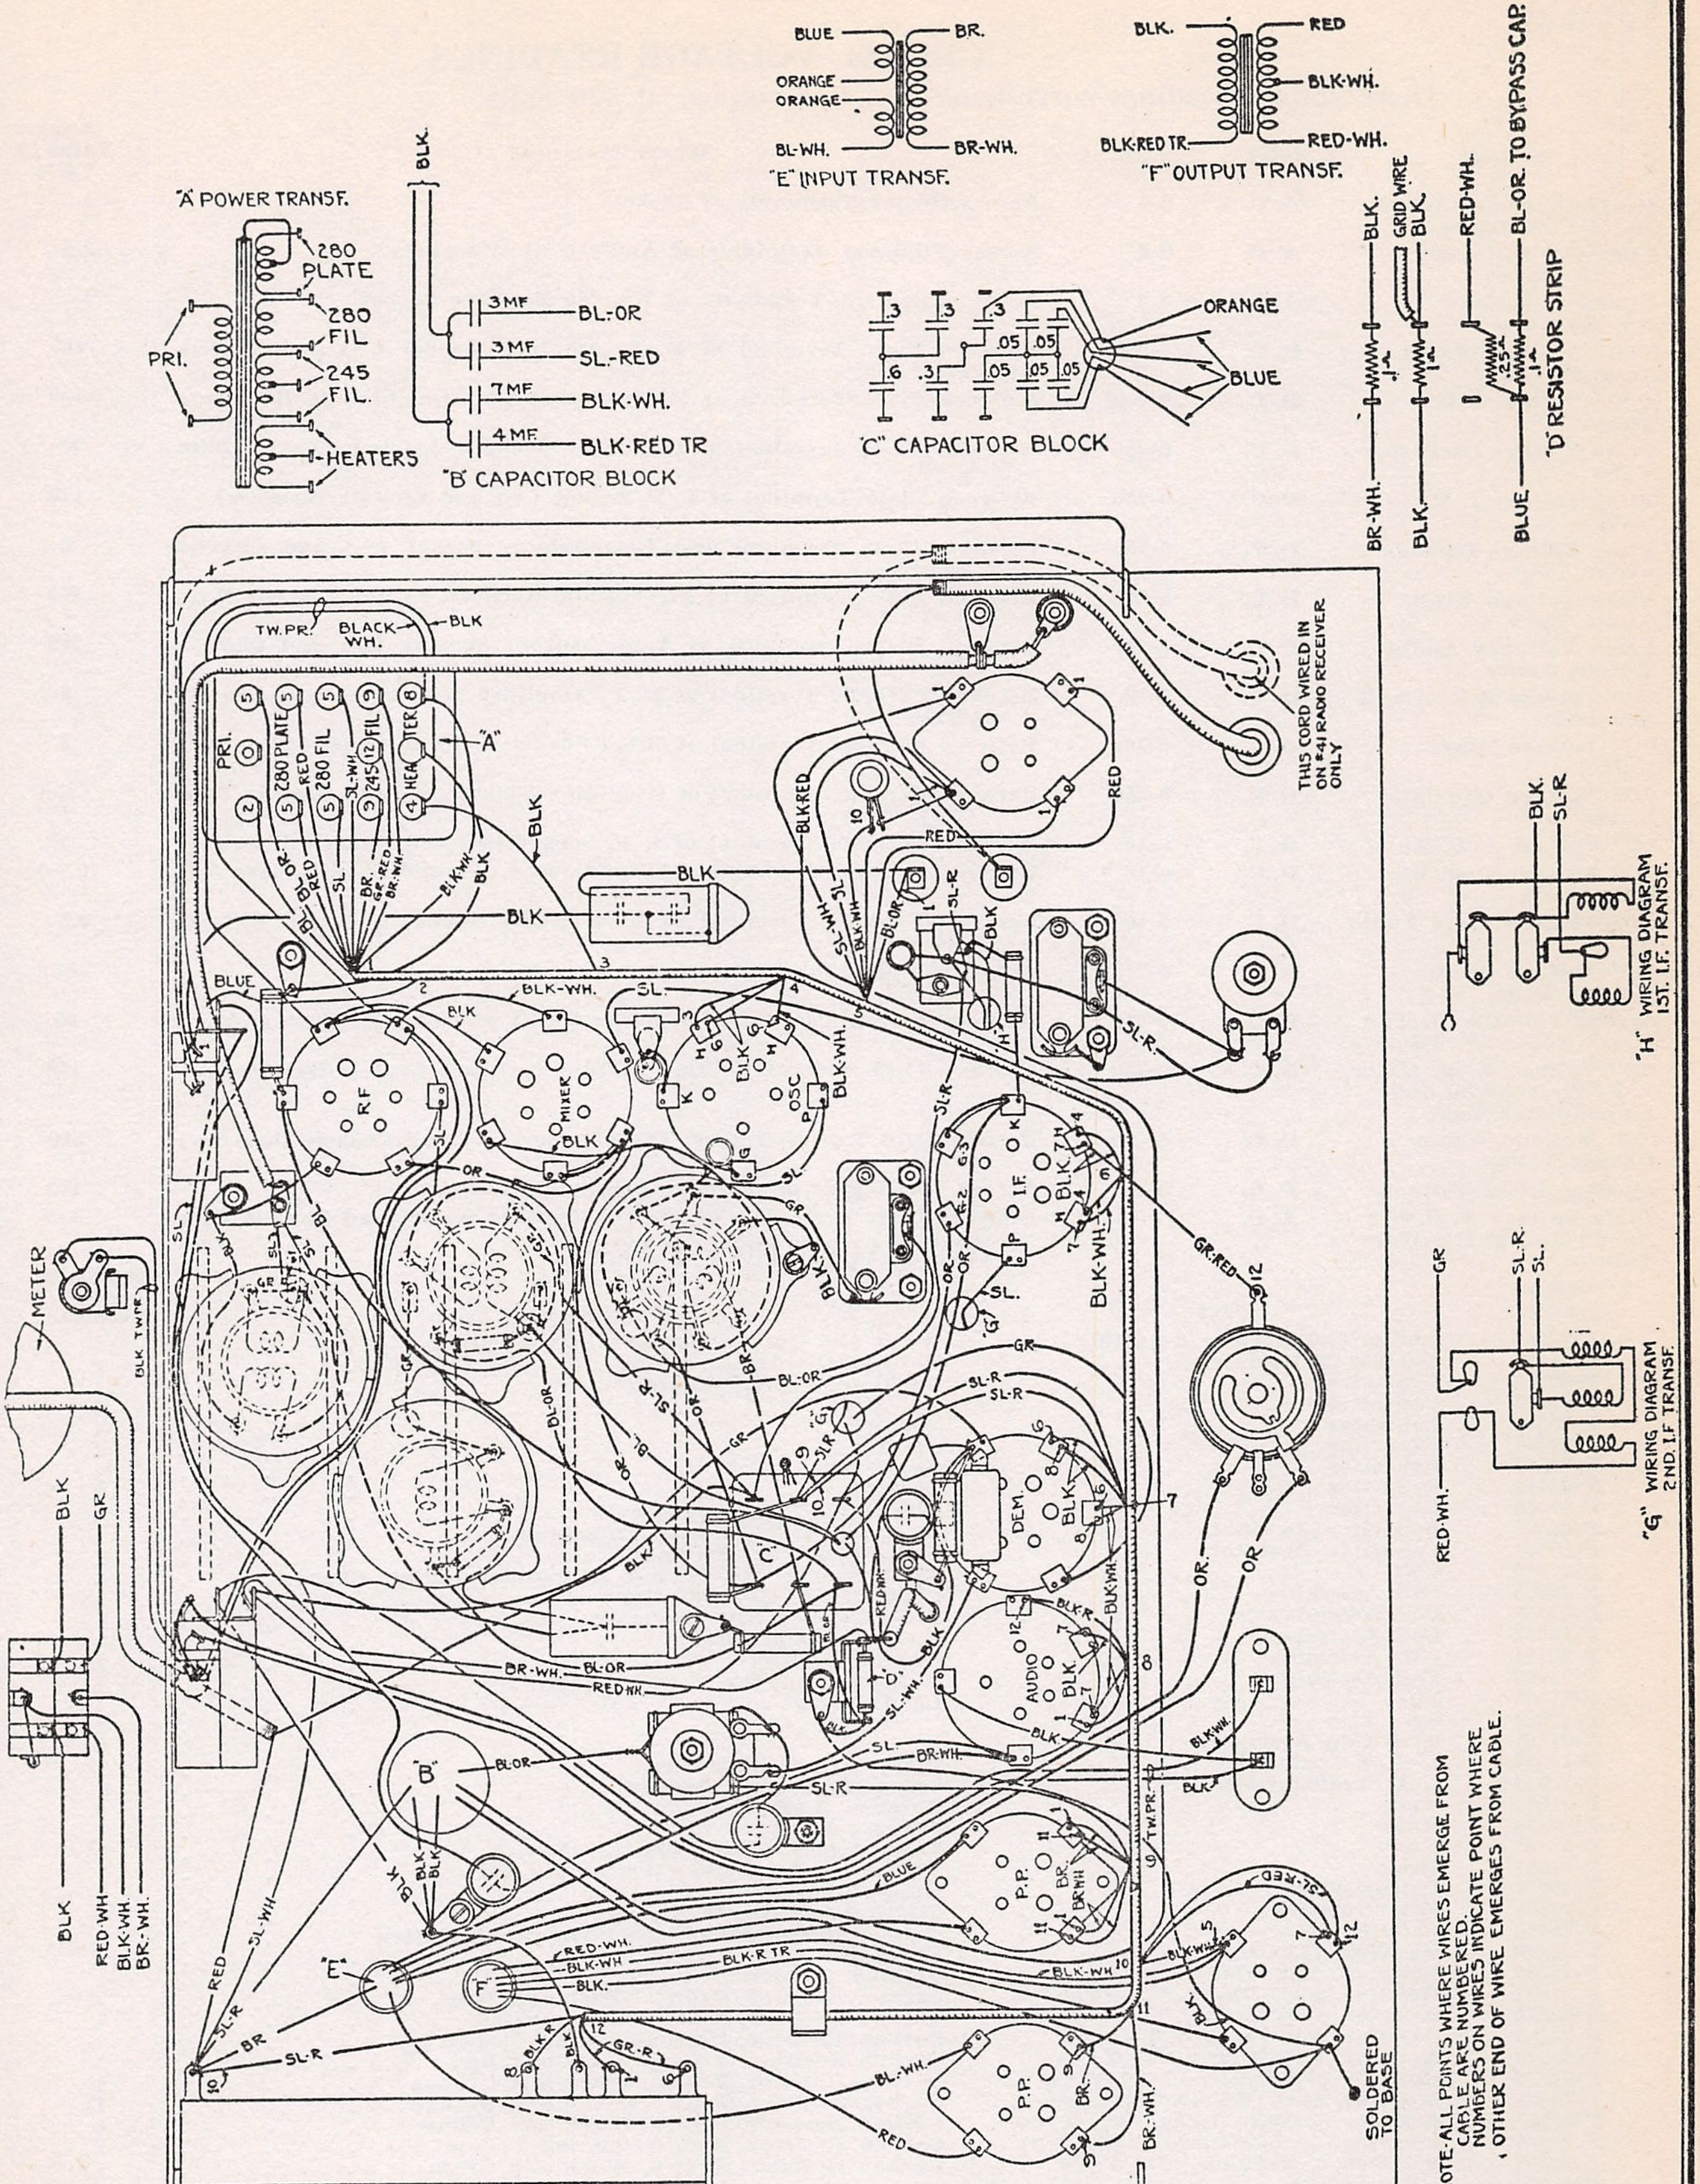
"A" POWER TRANSF.
PRI.
280 PLATE
280 FIL
245 FIL.
HEATERS
"B" CAPACITOR BLOCK
3 MF
3 MF
7 MF
4 MF
BL.-OR
SL.-RED
BLK-WH.
BLK-RED TR
BLK.
"E" INPUT TRANSF.
BLUE
BR.
ORANGE
ORANGE
BL-WH.
BR-WH.
"F" OUTPUT TRANSF.
BLK.
RED
BLK-WH.
BLK-RED TR.
RED-WH.
"C" CAPACITOR BLOCK
.3
.3
.3
.6
.3
.05
.05
.05
.05
.05
ORANGE
BLUE
"D" RESISTOR STRIP
BLK.
GRID WIRE BLK.
RED-WH.
BL-OR. TO BYPASS CAP.
BR-WH.
BLK.
BLUE
"H" WIRING DIAGRAM 1ST. I.F. TRANSF.
BLK.
SL-R
"G" WIRING DIAGRAM 2ND. I.F. TRANSF.
GR
SL-R.
SL.
RED-WH.
THIS CORD WIRED IN ON #41 RADIO RECEIVER ONLY
TW. PR.
BLACK WH.
BLK
"A"
PRI.
280 PLATE
280 FIL
245 FIL
HEATER
RED
SL-WH.
RF
MIXER
OSC
I.F.
DEM.
AUDIO
P.P.
P.P.
"B"
"C"
"D"
"E"
"F"
METER
BLK TWPR
BLK
GR
BLK
RED-WH.
BLK-WH.
BR-WH.
BLUE
BLK-WH.
SL.
SL-R
GR:RED
BLK-WH.
BL-OR
BR-WH.
RED WH.
OR.
OR
GR
SL-R
BLK-R TR
RED-WH.
BLK-WH.
BLK.
GR-R
BL-WH.
RED
BR.
BR-WH.
SOLDERED TO BASE

NOTE: ALL POINTS WHERE WIRES EMERGE FROM CABLE ARE NUMBERED. NUMBERS ON WIRES INDICATE POINT WHERE OTHER END OF WIRE EMERGES FROM CABLE.

MODEL 38,39,40
1st Type
Parts List
Voltage

STROMBERG - CARLSON TEL. MFG. CO.

NORMAL VOLTAGE READINGS

These voltage readings correspond to a line voltage at 120 volts.

Voltage	Meter	Scale	Where Measured	Appro. Value in Volts
Heater Voltages No. 56 and No. 58 Tubes	A. C.	0–4	Across Heater Terminals of Sockets	2.5
Filament Voltages No. 245 Tubes	A. C.	0–4	Across Filament Terminals of Audio Output Sockets	2.5
Filament Voltage No. 280 Tube	A. C.	0–8	Across Filament Terminals of No. 280 Rectifier Socket	5.
Plate Voltage Radio Amplifier Tube	D. C.	0–250	Between Plate Terminal of R. F. Amplifier Socket (+) and Chassis Base (—)	165
Plate Voltage Mixer Tube	D. C.	0–250	Between Plate Terminal of Mixer Socket (+) and Chassis Base (—)	150
Plate Voltage Oscillator Tube	D. C.	0–250	Between Plate Terminal of Oscillator Socket (+) and Chassis Base (—)	80
Plate Voltage I. F. Tube	D. C.	0–250	Between Plate Terminal of I. F. Socket (+) and Chassis Base (—)	170
Plate Voltage Demodulator Tube	D. C.	0–250	Between Plate Terminal and Demodulator Socket (+) and Chassis Base (—)	0
Plate Voltage First Audio Tube	D. C.	0–250	Between Plate Terminal of First Audio Socket (+) and Chassis Base (—)	160
Plate Voltages Audio Output Tubes	D. C.	0–250	Between Plate Terminals of Audio Output Sockets (+) and Chassis Base (—)	285
"C" Voltage R.F. Amplifier Tube	D. C.	0–10	Between Cathode Terminal of R. F. Amplifier Socket (+) and Chassis Base (—)	6
"C" Voltage Mixer Tube	D. C.	0–10	Between Cathode Terminal of Mixer Socket (+) and Chassis Base (—)	8
"C" Voltage Oscillator Tube	D. C.	0–250	Between Cathode Terminal of Oscillator Socket (+) and Chassis Base (—)	25
"C" Voltage I. F. Tube	D. C.	0–10	Between Cathode Terminal of I. F. Socket (+) and Chassis Base (—)	3
"C" Voltage Demodulator Tube	D. C.	0–10	Between Cathode Terminal of Demodulator (+) and Chassis Base (—)	2.5–3
"C" Voltage First Audio Tube	D. C.	0–10	Between Cathode Terminal of First Audio Socket (+) and Chassis Base (—)	6.5
"C" Voltage Audio Output Tube	D. C.	0–250	Across 750 ohm Biasing Resistor	47
Screen Voltages R. F. Mixer and I. F. Tubes	D. C.	0–250	Between Screen Terminals on Sockets (+) and Chassis Base (—)	85
"B" Voltage R. F. Mixer, I. F. First Audio and Demodulator Tube	D. C.	0–250	Between High Side of Voltage Divider (+) and Chassis Base (—)	160
"B" Voltage Audio Output Tubes	D. C.	0–750	Between Mid-Tap of Output Transformer (+) and Chassis Base (—)	300
Speaker Field Volts	D. C.	0–250	Across Small Pins on Speaker Connector Socket	125
Plate Voltage A. C. per Anode No. 280 Rectifier Tube	A. C.		Between Plate Terminals of No. 280 Rectifier Socket and Chassis Base	340

REPLACEMENT PARTS

Piece Number	Part	Description of Part	Required per Receiver
P-22540	Audio Transformer Assembly	Input and Output Push-Pull Transformer	1
P-21663	Bracket Assembly	Voltage Divider Mounting	1
P-22353	Capacitor	Oscillator "Series Aligner"	1
P-21334	Capacitor	.001 Mfd.	2
P-22557	Capacitor	.004 Mfd.	1
P-19597	Capacitor	.04 Mfd.	1
P-21535	Capacitor	2—.01 Mfd.	1
P-22411	Capacitor	.04 Mfd.	2
P-22556	Capacitor	Aligner in Tri-Resonator	1
P-22565	Capacitor Assembly	R. F. and I. F. By-Pass Capacitors	1
P-22544	Capacitor Assembly	Filter Capacitor Assembly	1
P-22549	Coil	Tri-Resonator Circuit and Demodulator Plate Circuit	2
P-22358	Coil Assembly	First Coil of Bi-Resonator	1
P-22359	Coil Assembly	Second Coil of Bi-Resonator	1
P-22360	Coil Assembly	R. F. Transformer	1
P-22361	Coil Assembly	Oscillator Coil	1
P-21623	Coil Assembly	Antenna Inductor	1
P-21566	Fuse	1.5 Amperes	1
P-19630	Grid Clip		1
P-21704	Grid Clip Assembly		2
P-22532	I. F. Transformer	First I. F. Transformer	1
P-22533	I. F. Transformer	Second I. F. Transformer	1
P-21277	Knob	Antenna Aligner	1
P-22390	Knob	Selector Knob	1
P-22391	Knob	Volume Control and Clarifier Switch	2
P-22351	Meter	Visual Tuning Meter (Weston No. 654)	1
P-19617	Potentiometer	Hum Adjuster	1
P-22593	Potentiometer	Clarifier and On-Off Switch	1
P-22546	Potentiometer	Dual Volume Control and Phonograph Switch	1
P-22550	Resistor, 150 Ohms	Filter Resistor	1
P-22596	Resistor, 5370 Ohms	Voltage Divider	1
P-21621	Resistor, 1,000 Ohms, "C" Type	Carbon Resistor, Brown, Black and Red	1
P-22329	Resistor, 6,500 Ohms, "C" Type	Carbon Resistor, Blue, Green and Red	1
P-22327	Resistor, 600 Ohms, "C" Type	Carbon Resistor, Blue, Black and Brown	3
P-22328	Resistor, 4.000 Ohms, "C" Type	Carbon Resistor, Yellow, Black and Red	3
P-22330	Resistor, 10,000 Ohms, "C" Type	Carbon Resistor, Brown, Black and Orange	1
P-22331	Resistor, 15,000 Ohms, "C" Type	Carbon Resistor, Brown, Green and Orange	1
P-22333	Resistor, 100,000 Ohms, "D" Type	Carbon Resistor, Brown, Black and Yellow	4
P-22334	Resistor, 250,000 Ohms, "D" Type	Carbon Resistor, Red, Green and Yellow	1
P-22561	Resistor, 1 Megohm, "D" Type	Carbon Resistor, Brown, Black and Green	1
P-21280	4 Pin Socket		4
P-22570	5 Pin Socket		2
P-22571	6 Pin Socket		4
P-22529	Transformer	Power, 60 Cycle, 110 Volts	1
P-22530	Transformer	Power, 25-60 Cycles, 110 Volts	1

MODEL 641
Resistance Data

STROMBERG - CARLSON TEL. MFG. CO.

All tubes removed from sockets and AC plug removed from power supply lead. Speaker field disconnected. Volume control maximum unless otherwise stated. Pickup disconnected

From Chassis To	Correct		Incorrect
Aerial (V.C.Max)	17	ohms	
Aerial (V.C. Varied)	0-5000	ohms*	*Antenna volume control is 20,000 ohms
1 RF Control Grid	3.8	ohms	TC- 1 rf Cg-Y
1 RF Cathode	164	ohms	BC- 1 rfK-Y (.3 mfd)
1 RF Screen	3,781	ohms	BC- 1 rf Sg-Y (.3 mfd)
1 RF Plate	8,297	ohms	BC- 1 rf P-Y (.3 mfd) BC- VD-Y (1. mfd) BC- 2 rf P-Y (.3 mfd) BC- 3 rf P-Y (.3 mfd)
1 RF Plate to 2 RF Plate	34	ohms	
2 RF Control Grid	3.5	ohms	TC- 2 rf Cg-Y
2 RF Cathode	164	ohms	See 1 RF Cathode
2 RF Screen	3,781	ohms	See 1 RF Screen
2 RF Plate	8,297	ohms	See 1 RF Plate
2 RF Plate to 1 RF Plate	34	ohms	
3 RF Control Grid	3.5	ohms	TC- 3 rf K-Y
3 RF Cathode	390	ohms	BC- 3 rf K-Y (.3 mfd)
3 RF Screen	3,781	ohms	See 1 RF Screen
3 RF Plate	8,297	ohms	See 1 RF Plate
Detector Control Grid	2,000,000	ohms	Also 3.5 ohms grid winding Grid condenser
Detector Cathode	15,000	ohms	BC- DK-Y (1.mfd)
Detector Plate	28,000	ohms	BC-DP-Y BC- AF Tr-Y (1 mfd) See RF Screen FC- Filter chk-Y
Detector Plate to '80 Fil	12,720	ohms	FC- Filter chk-Y See Detector Plate
'45 Control Grid	9,570	ohms	
'45 Fil to chassis	1,452	ohms	
'45 Plate to 80 Fil	1,403	ohms	BC- across tone filter. (2-.01 mfd) FC- Filter chk-Y
Across Speaker Terminals	1.7	ohms	
80 Fil to chassis	16,881	ohms	See Detector Plate FC- Tuned Filter chk-Y

641,

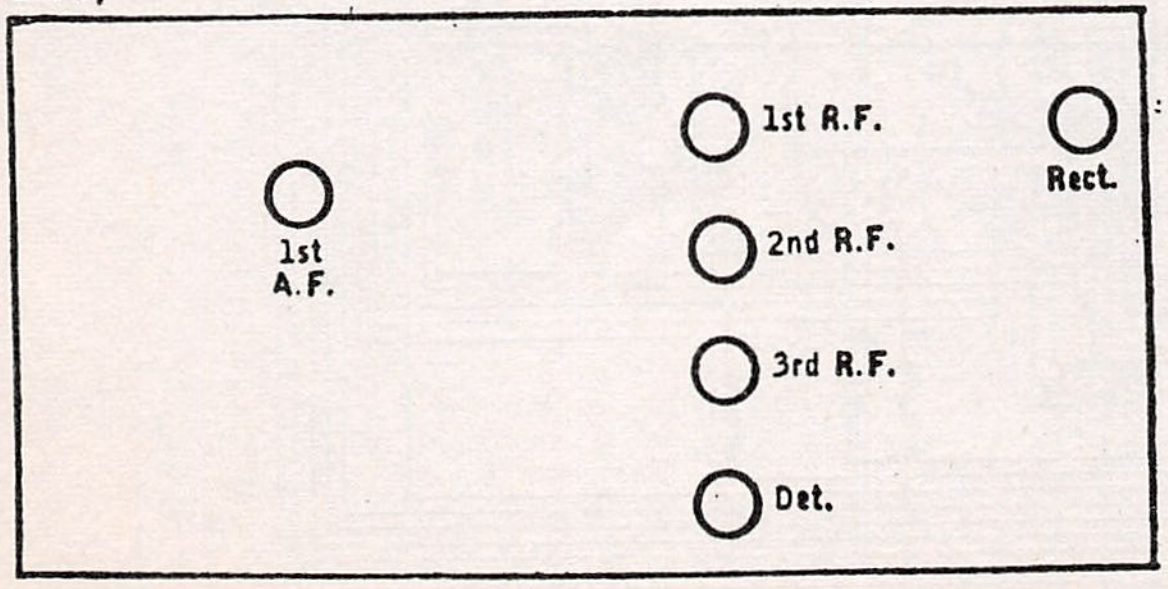

STROMBERG-CARLSON—Model 641
Line Voltage 114—Set on High Volt Tap—Volume Control Position Max

Tube No. in Order ①	Type of Tube ②	Position of Tube 1st RF Det Etc ③	Readings Plug in Socket of Set									
			Tube Out		Tube in Tester							
			A Volts ④	B Volts ⑤	A Volts ⑥	B Volts ⑦	C Volts Control Grid ⑧	Cathode-Heater Volts ⑨	Normal Plate MA ⑩	Plate MA Grid Test ⑪	Plate Change MA ⑫	Screen Grid Volts ⑬
1	224	1st RF	2.45	140	2.24	136	3.5	3.5	1.5	4	2.5	56
2	224	2nd RF	2.45	140	2.24	136	3.5	3.5	1.5	4	2.5	55
3	224	3rd RF	2.45	140	2.24	136	3.5	3.5	1.5	4	2.5	56
4	227	Det.	2.45	278	2.24	248	3	3	1.8	-	-	-
5	245	Amp.	2.45	355	2.24	238	35		30	32	2	-

MODEL 645 DC
Chassis Wiring

STROMBERG-CARLSON TEL. MFG. CO.

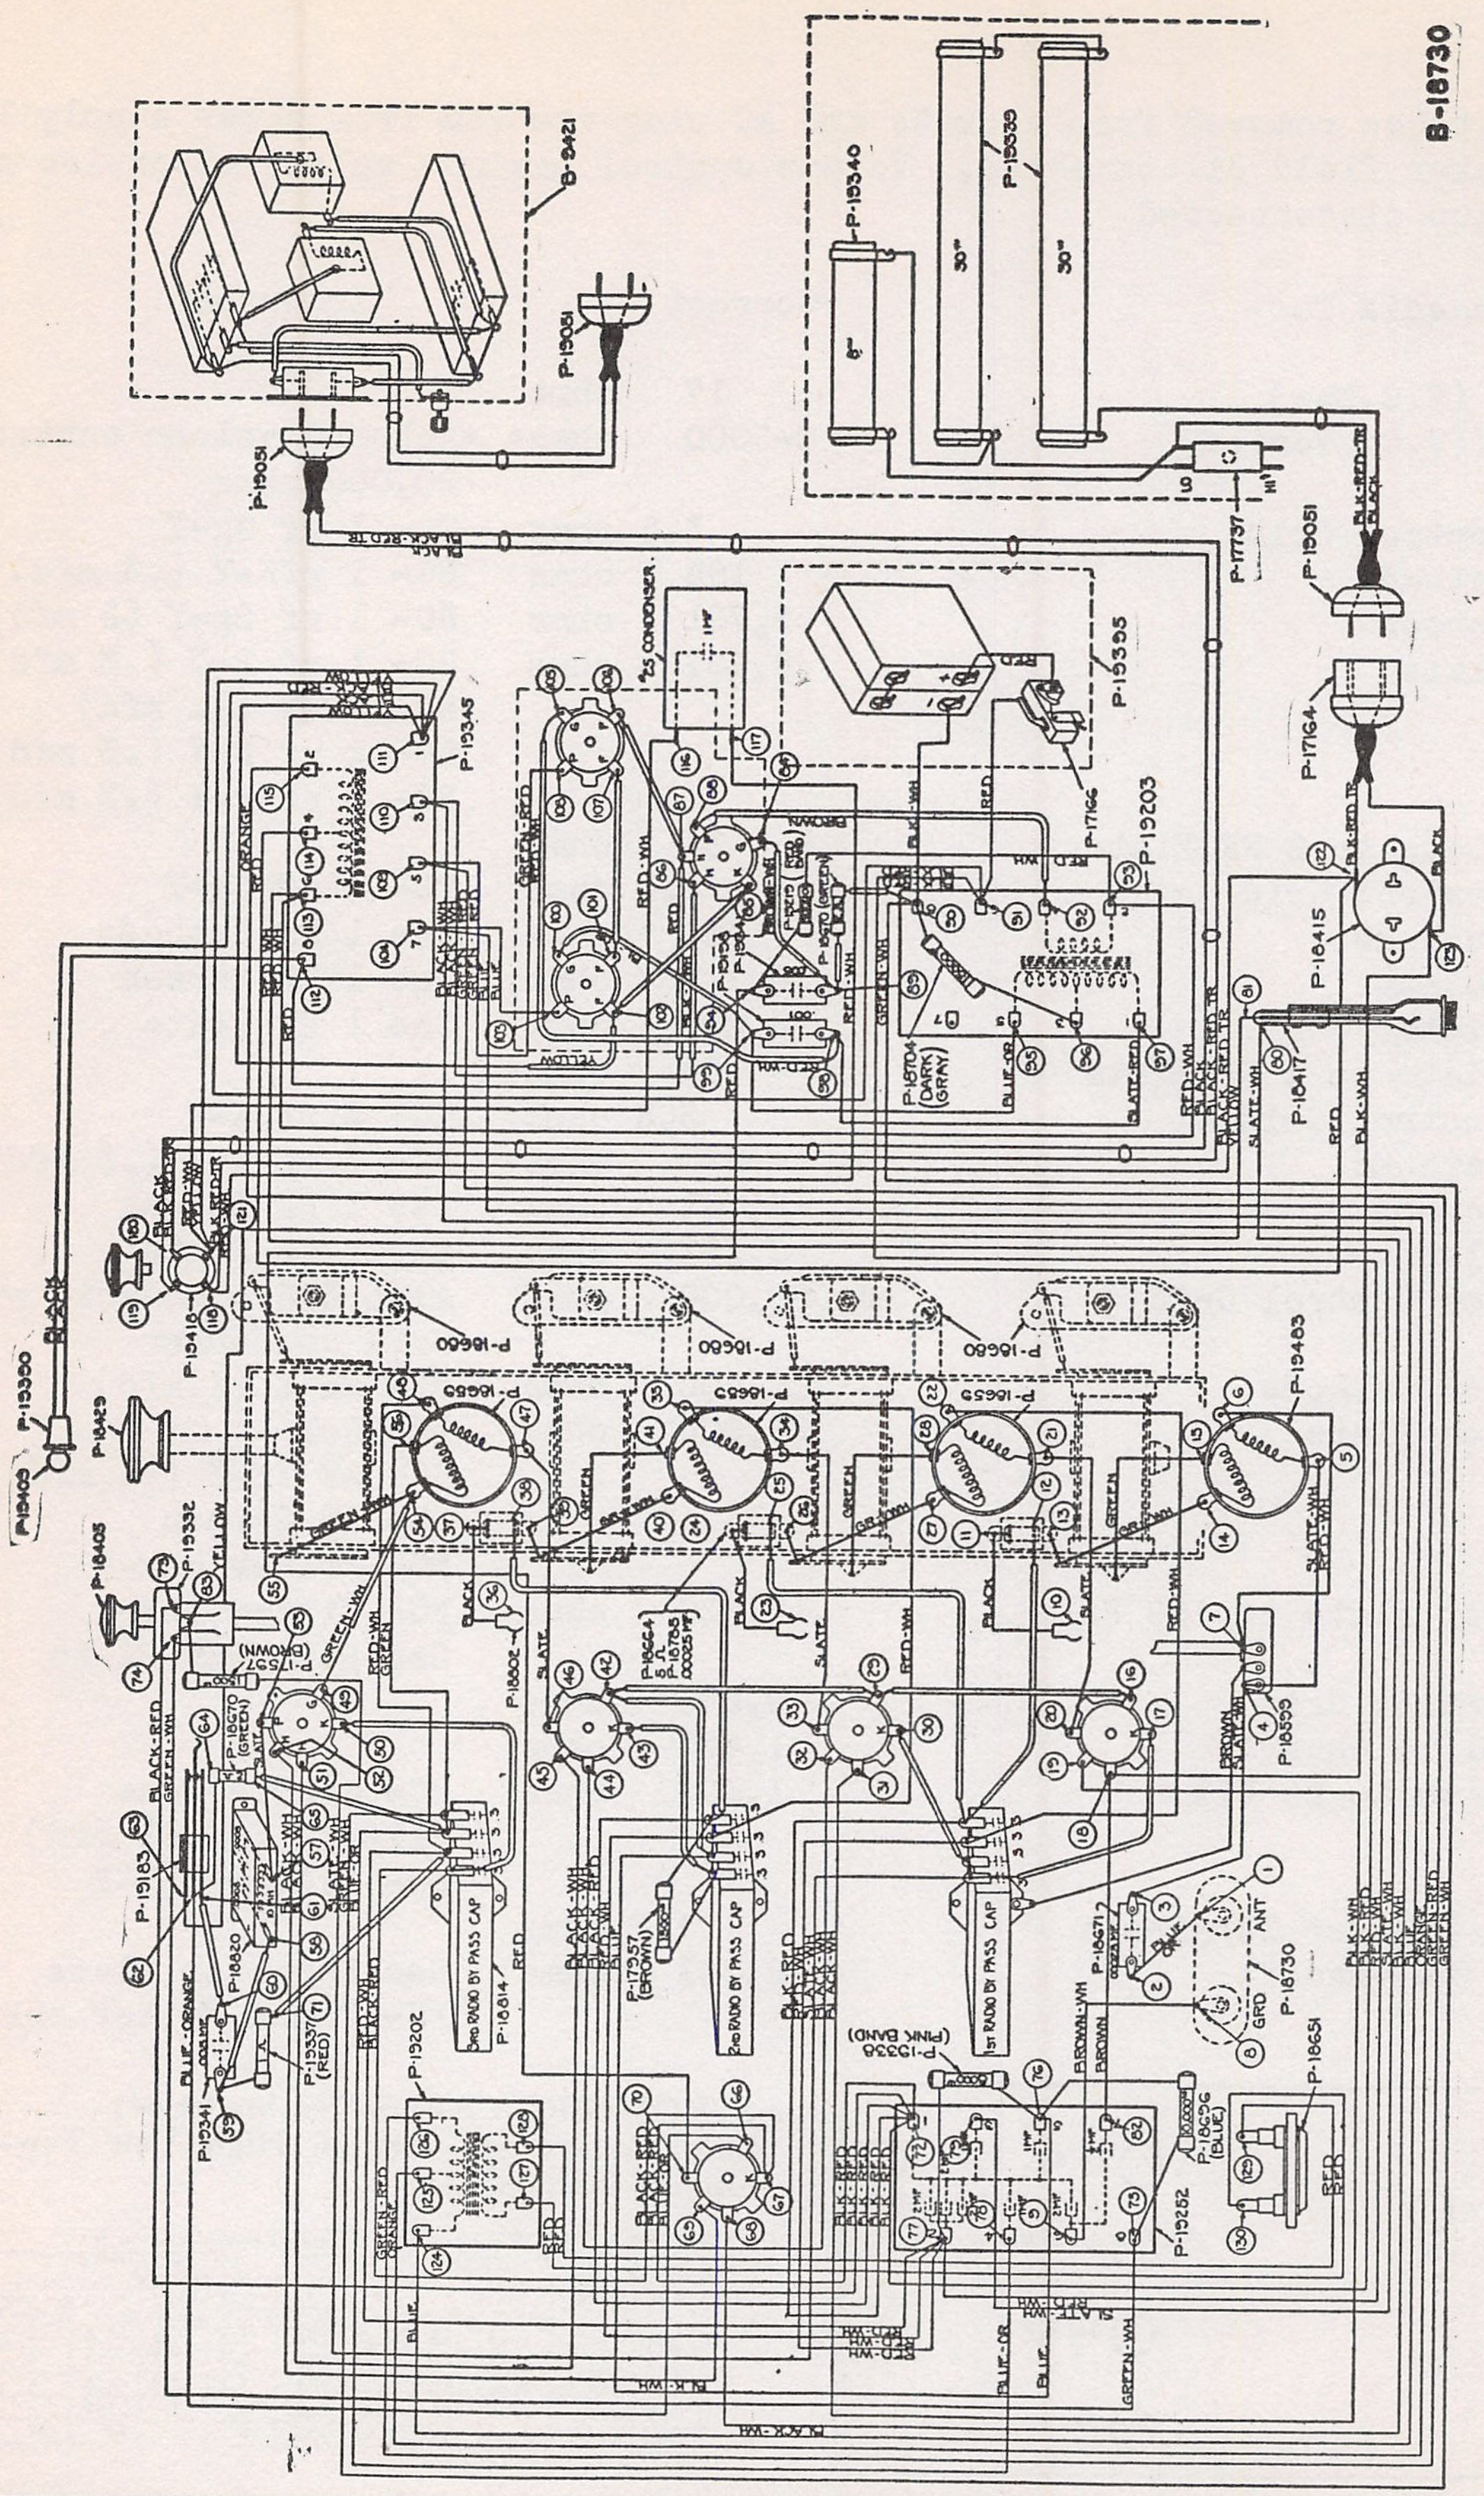
B-18730
B-2421
P-19051
P-19340
P-19339
30"
30"
6"
P-17737
BLK-RED-TR
BLACK
P-17164
P-18415
P-18417
P-19345
P-19355
P-17166
P-19203
.25 CONDENSER
P-18704 (DARK) (GRAY)
P-19416
P-19390
P-18429
P-18405
P-19332
P-17537 (BROWN)
P-18670 (GREEN)
P-18680
P-18655
P-19483
P-18599
P-18602
P-18664
P-18671
P-18730
ANT
GRD
P-19338 (PINK BAND)
1ST RADIO BY PASS CAP
2ND RADIO BY PASS CAP
3RD RADIO BY PASS CAP
P-18614
P-17357 (BROWN)
P-19183
P-18820
P-19341
P-19337 (RED)
P-19202
P-19252
P-18606 (BLUE)
P-18651
BLACK
YELLOW
GREEN-WH
RED-WH
BLACK-RED
SLATE
BROWN
BLUE-ORANGE
BLACK-WH

STROMBERG-CARLSON TEL. MFG. CO.

MODEL 846
Resistance Data

STROMBERG-CARLSON 846

All tubes removed from receiver and AC power plug disconnected from supply circuit. Pickup switch in radio position.

From Chassis To	Correct	Incorrect
Aerial (V.C.Min)	10 ohms	
Aerial (V.C.Max)	20 ohms	
Aerial (V.C. Halfway)	5,000 ohms approx	Variable antenna V.C. has a value of 20,000 ohms
1 RF Tuning Condenser Stator	3.8 ohms	TC-Y
1 RF Control Grid	5,200,000 ohms	BLC- 1 rf Cg-grid wdg BC- 5 meg unit-Y BLC- AVC P-Y (.5 mfd)
1 RF Cathode	390 ohms	BC- 1 rf K-Y (.3 mfd)
1 RF Screen	4,350 ohms	BC- 1 rf Sg-Y(.3 mfd) BC- 2 rf Sg-Y(.3 mfd) BC- 3 rf Sg-Y(.3 mfd)
1 RF Plate	10,367 ohms	BC- 1 rf P-Y (.3 mfd) BC- 2 rf P-Y (.3 mfd) BC- 3 rf P-Y (.3 mfd) FC- V D-Y (1.mfd)
2 RF Tuning Condenser Stator	3.5 ohms	TC-Y
2 RF Control Grid	5,100,000 ohms	BLC- 2 rf Cg-grid wdg BC- 5 meg unit-Y BLC- AVC P-Y (.5 mfd) See 1 RF Screen
2 RF Cathode	390 ohms*	*DC Resistance of visual tuning meter must be added BC- 2 rf K-Y (.3 mfd)
2 RF Screen	4,380 ohms	See 1 RF Screen
2 RF Plate	10,367 ohms	See 1 RF Plate
3 RF Tuning Condenser Stator	3.5 ohms	TC-Y
3 RF Control Grid	5,000,000 ohms	BLC- 3 rf Cg-grid wdg
3 RF Cathode	600 ohms	BC- 3 rf K-Y (.3 mfd)
3 RF Screen	4,350 ohms	See 1 RF Screen
3 RF Plate	10,367 ohms	See 1 RF Plate
Detector Control Grid	2,033 ohms	TC- D Cg
Detector Cg to Det F	6 ohms	
Detector Cg to Det Cathode	15,003 ohms	BC across bias unit (1 mfd)
Detector Cathode	17,030 ohms	
Detector Plate	27,830 ohms	BC D P-Y FC- AF Tr-'80 P wdg FC- 10,000 ohm unit-80 P wdg FC- Tuned Filter chk FC- 80 F-80 P wdg
1 AF Control Grid (V.C.Max)	4,913 ohms	250,000 ohm V.C.
1 AF Cathode	1,500 ohms	
1 AF Plate	13,730 ohms	BC- AF Tr-Y (1 mfd)
2 AF Control Grid	20,840 or 11,920 ohms*	*Two windings of transformer do not have like resistance. One half has 9890 ohms and other half

846 Cont'd

From Chassis To	Correct	Incorrect
		has 14,810 ohms
2 AF Control Grid to Control Grid	24,700 ohms	
2 AF Filament	2,755 ohms	BC-across 725 ohm unit
2 AF Plate to Plate	886 ohms	
2 AF Plate to 80 Fil	825-900- ohms	FC-Tuned Filter chk- FC-Filter chk-
Across speaker terminals only	1.77ohms	
AVC Control Grid	2,002,030 ohms	BC- 2 meg unit-Y CC- AVC Cg- 3 rf P
AVC Cathode	1,700 ohms	BC- AVC K-Y
AVC Plate	200,000 ohms	BC- AVC P-Y (.5 mfd)
'80 Filament	14,200-14,300 ohms	FC
'80 Filament to 80 Anode	16,340-16,440 ohms	FC

Note* Speaker power supply checked separately

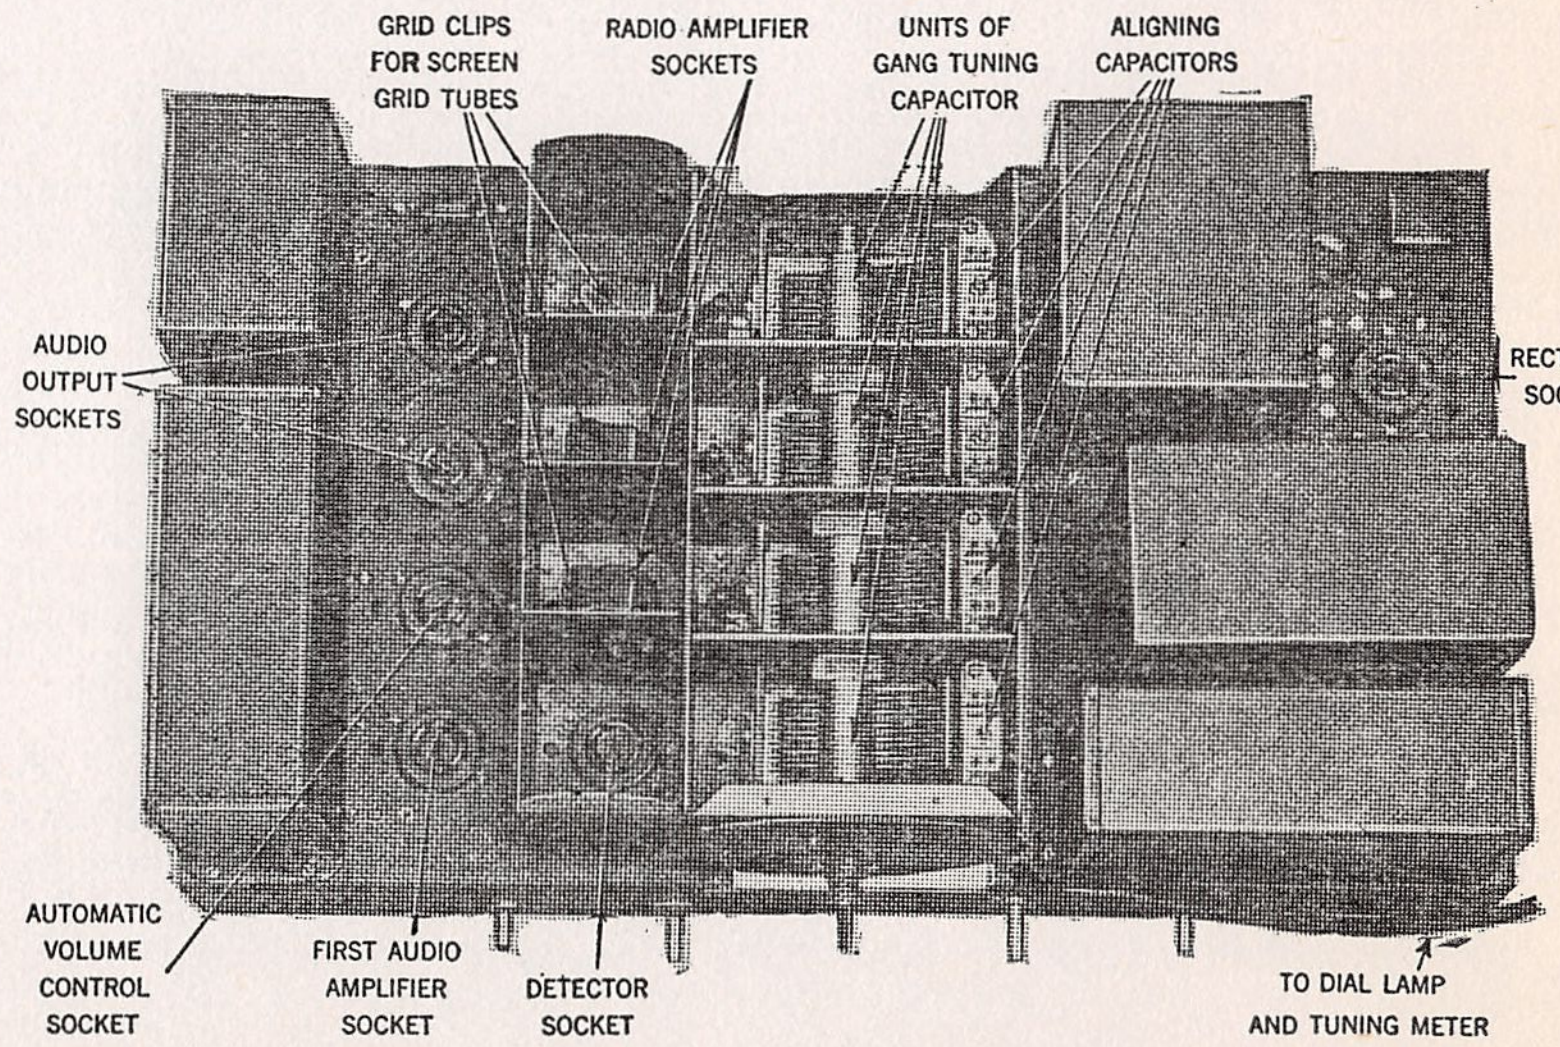
GRID CLIPS FOR SCREEN GRID TUBES
RADIO AMPLIFIER SOCKETS
UNITS OF GANG TUNING CAPACITOR
ALIGNING CAPACITORS
AUDIO OUTPUT SOCKETS
RECTIFIER SOCKET
AUTOMATIC VOLUME CONTROL SOCKET
FIRST AUDIO AMPLIFIER SOCKET
DETECTOR SOCKET
TO DIAL LAMP AND TUNING METER

*A very slight deflection of the meter only. Readings given are for either of the 2 tubes used in Push Pull

TUBE NO. IN ORDER ①	TYPE OF TUBE ②	POSITION OF TUBE 1ST R.F. DET., ETC. ③	READINGS PLUG IN SOCKET OF SET									
			TUBE OUT		TUBE IN TESTER							
			A VOLTS ④	B VOLTS ⑤	A VOLTS ⑥	B VOLTS ⑦	C VOLTS (CONTROL GRID) ⑧	CATHODE -HEATER ⑨ VOLTS	NORMAL PLATE ⑩ M.A.	PLATE M.A GRID ⑪ TEST	PLATE CHANGE ⑫ M.A.	SCREEN GRID ⑬ VOLTS
1	224	1 R.F.	2.60	155	2.3	145	.5	.6	2.2	2.5	.3	60
2	224	2 R.F.	2.60	155	2.3	145	.5	.6	2.2	2.5	.3	60
3	224	3 R.F.	2.60	155	2.3	145	.5	.6	2.2	2.5	.3	54
4	227	Det.	2.60	265	2.3	225	27.0	2.9	2.0	2.1	.1	
5	227	1 A.F.	2.60	160	2.3	120	7.75	7.75	5.5	7.0	1.5	
6	227	V.C.T.	2.60	2	2.3	14	5.0	4.1	*	-	-	
7	245	P. P.	2.55	280	2.3	240	45.0	-	30	38	8.0	
8	245	P. P.	2.55	280	2.3	240	45.0	-	30	-	8.0	
9	280	Rect.	5.20	-	4.60	-	-	-	48	-		
10	280	Rect.	5.20	-	4.60	-	-	-	48	-		

SUPREME INSTRUMENTS CORP.

MODEL 400-B
#4 Series
Diagnometer

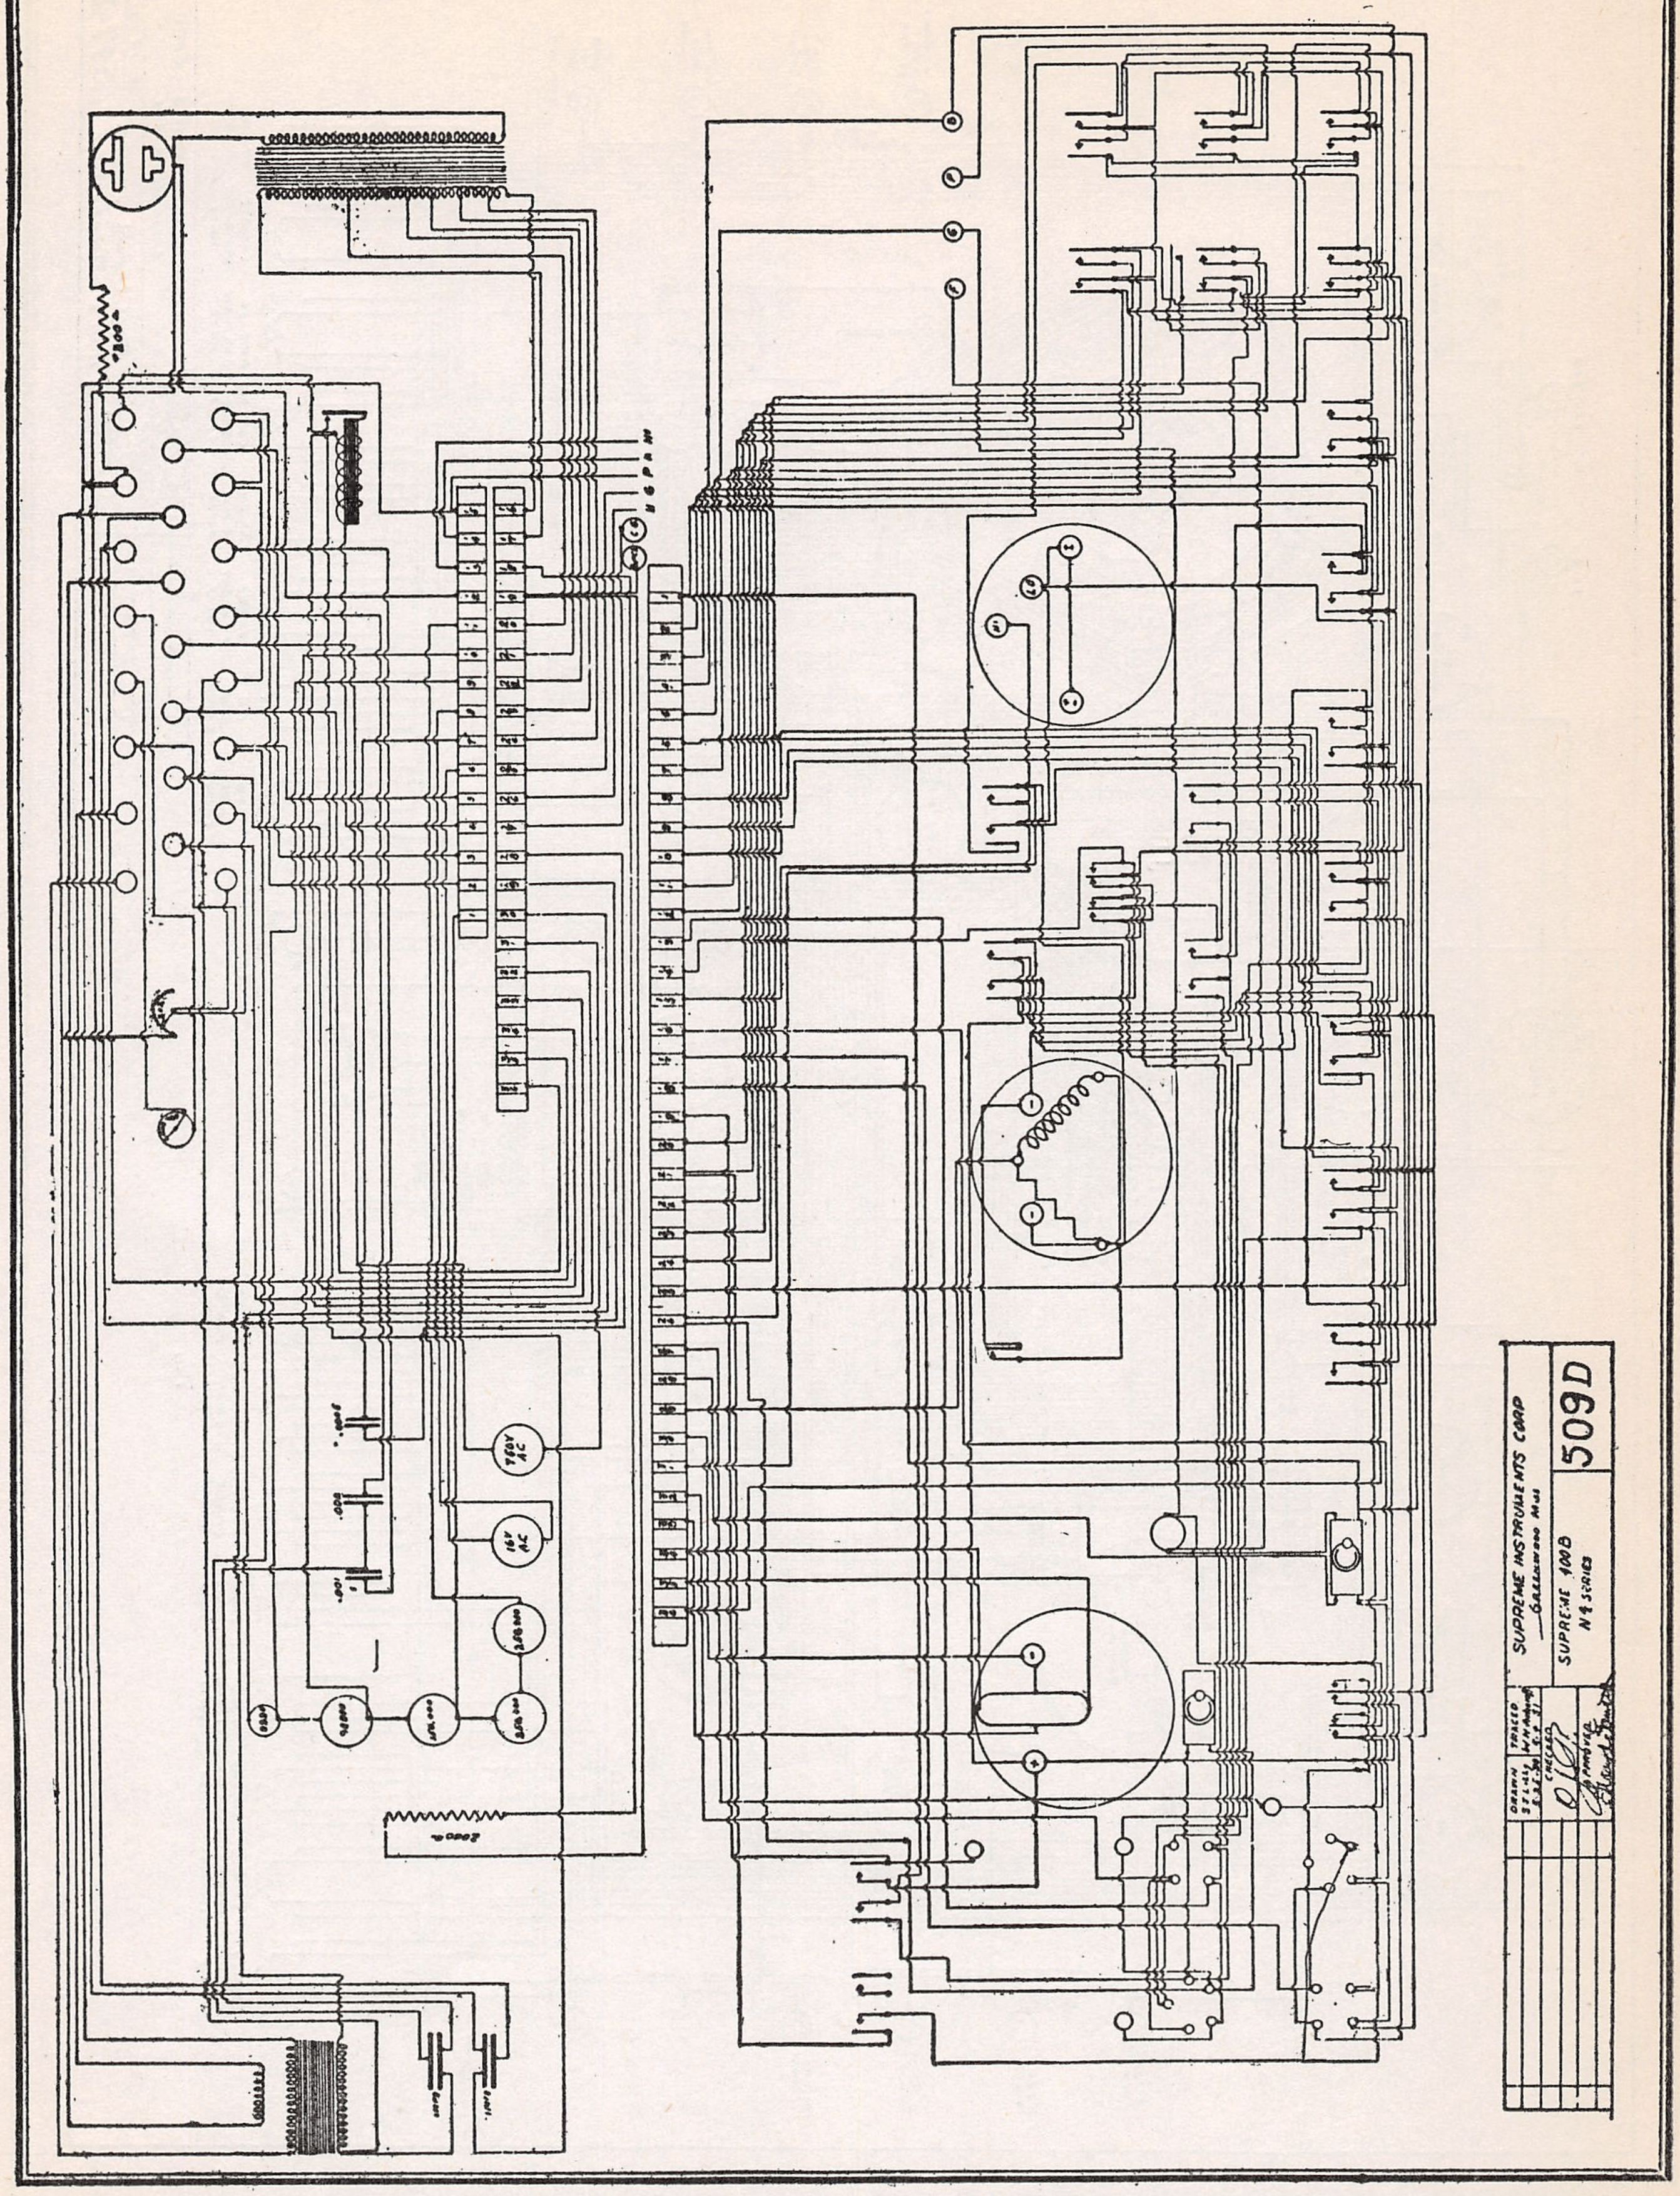
2000Ω
.0005
.005
.001
750V AC
15V AC
2000Ω
SUPREME INSTRUMENTS CORP
GREENWOOD MISS
509D
SUPREME 400B
N4 SERIES
DRAWN
TRACED
CHECKED
APPROVED

MODEL AAA-1
(8-14-31)
Diagnometer

SUPREME INSTRUMENTS CORP.

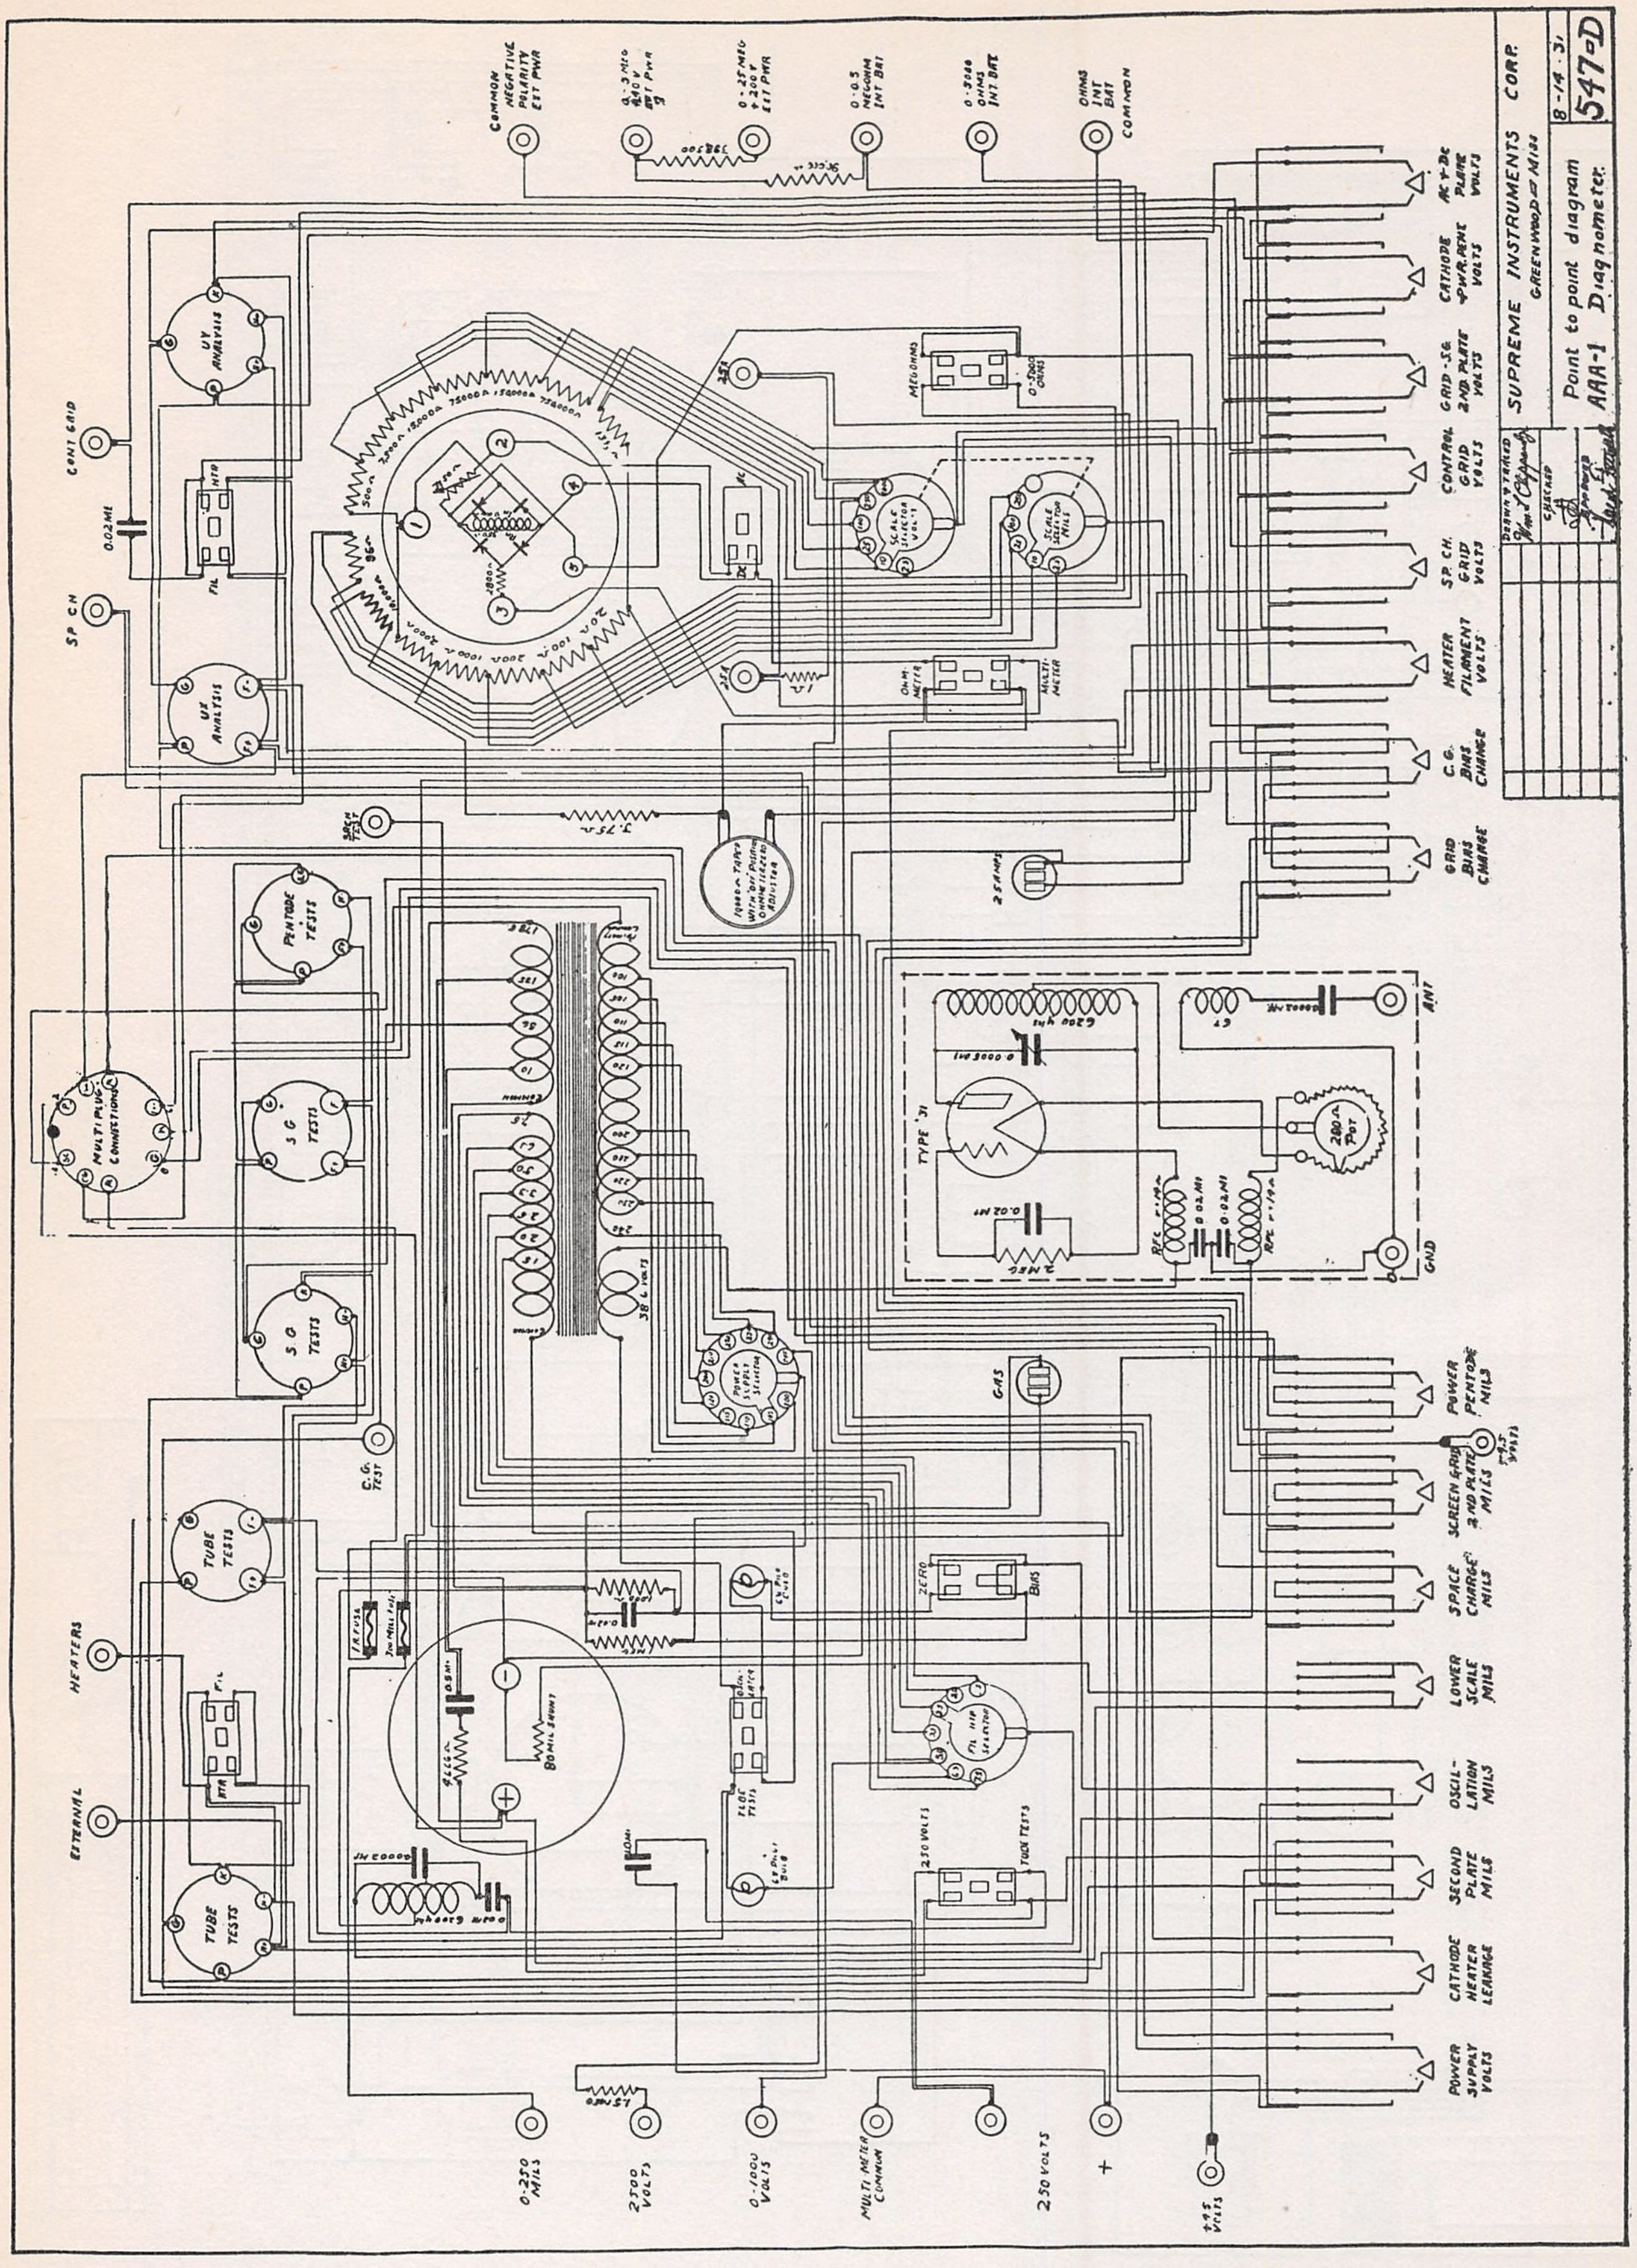
COMMON NEGATIVE POLARITY EXT PWR
0-3 MEG 400 V EXT PWR
0-25 MEG +200 V EXT PWR
398500
0-0.5 MEGOHM INT BAT
0-5000 OHMS INT BAT
OHMS INT BAT COMMON
UY ANALYSIS
CONT GRID
0.02 MF
HTR
FIL
SP CH
UY ANALYSIS
MEGOHMS
0-5000 OHMS
SCALE SELECTOR VOLTS
SCALE SELECTOR MILS
OHM METER
MULTI METER
3.75Ω
SP CH TEST
25 AMPS
PENTODE TESTS
MULTI-PLUG CONNECTIONS
S.G. TESTS
S.G. TESTS
POWER SUPPLY SELECTOR
38 L VOLTS
C.G. TEST
GAS
6200 MH
MF 3000
TYPE '31
280Ω POT
0.02 MF
2 MEG
RFC
ANT
GND
TUBE TESTS
FIL
HTR
HEATERS
EXTERNAL
TUBE TESTS
80 MIL SHUNT
ZERO
BIAS
FIL HTR SELECTOR
250 VOLTS
TUCK TESTS
AC & DC PLATE VOLTS
CATHODE PWR PENT VOLTS
GRID-SG 2ND PLATE VOLTS
CONTROL GRID VOLTS
SP CH GRID VOLTS
HEATER FILAMENT VOLTS
C.G. BIAS CHANGE
GRID BIAS CHANGE
POWER PENTODE MILS
SCREEN GRID 2ND PLATE MILS
+4.5 VOLTS
SPACE CHARGE MILS
LOWER SCALE MILS
OSCIL-LATION MILS
SECOND PLATE MILS
CATHODE HEATER LEAKAGE
POWER SUPPLY VOLTS
0-250 MILS
2500 VOLTS
0-1000 VOLTS
MULTI-METER COMMON
250 VOLTS
+
+4.5 VOLTS
DRAWN & TRACED
CHECKED
APPROVED
SUPREME INSTRUMENTS CORP.
GREENWOOD, MISS
8-14-31
547-D
Point to point diagram AAA-1 Diagnometer.

SUPREME INSTRUMENTS CORP.

MODEL 56 Analyzer
Weston Metered
MODEL 90 Analyzer
Weston Metered 6-J

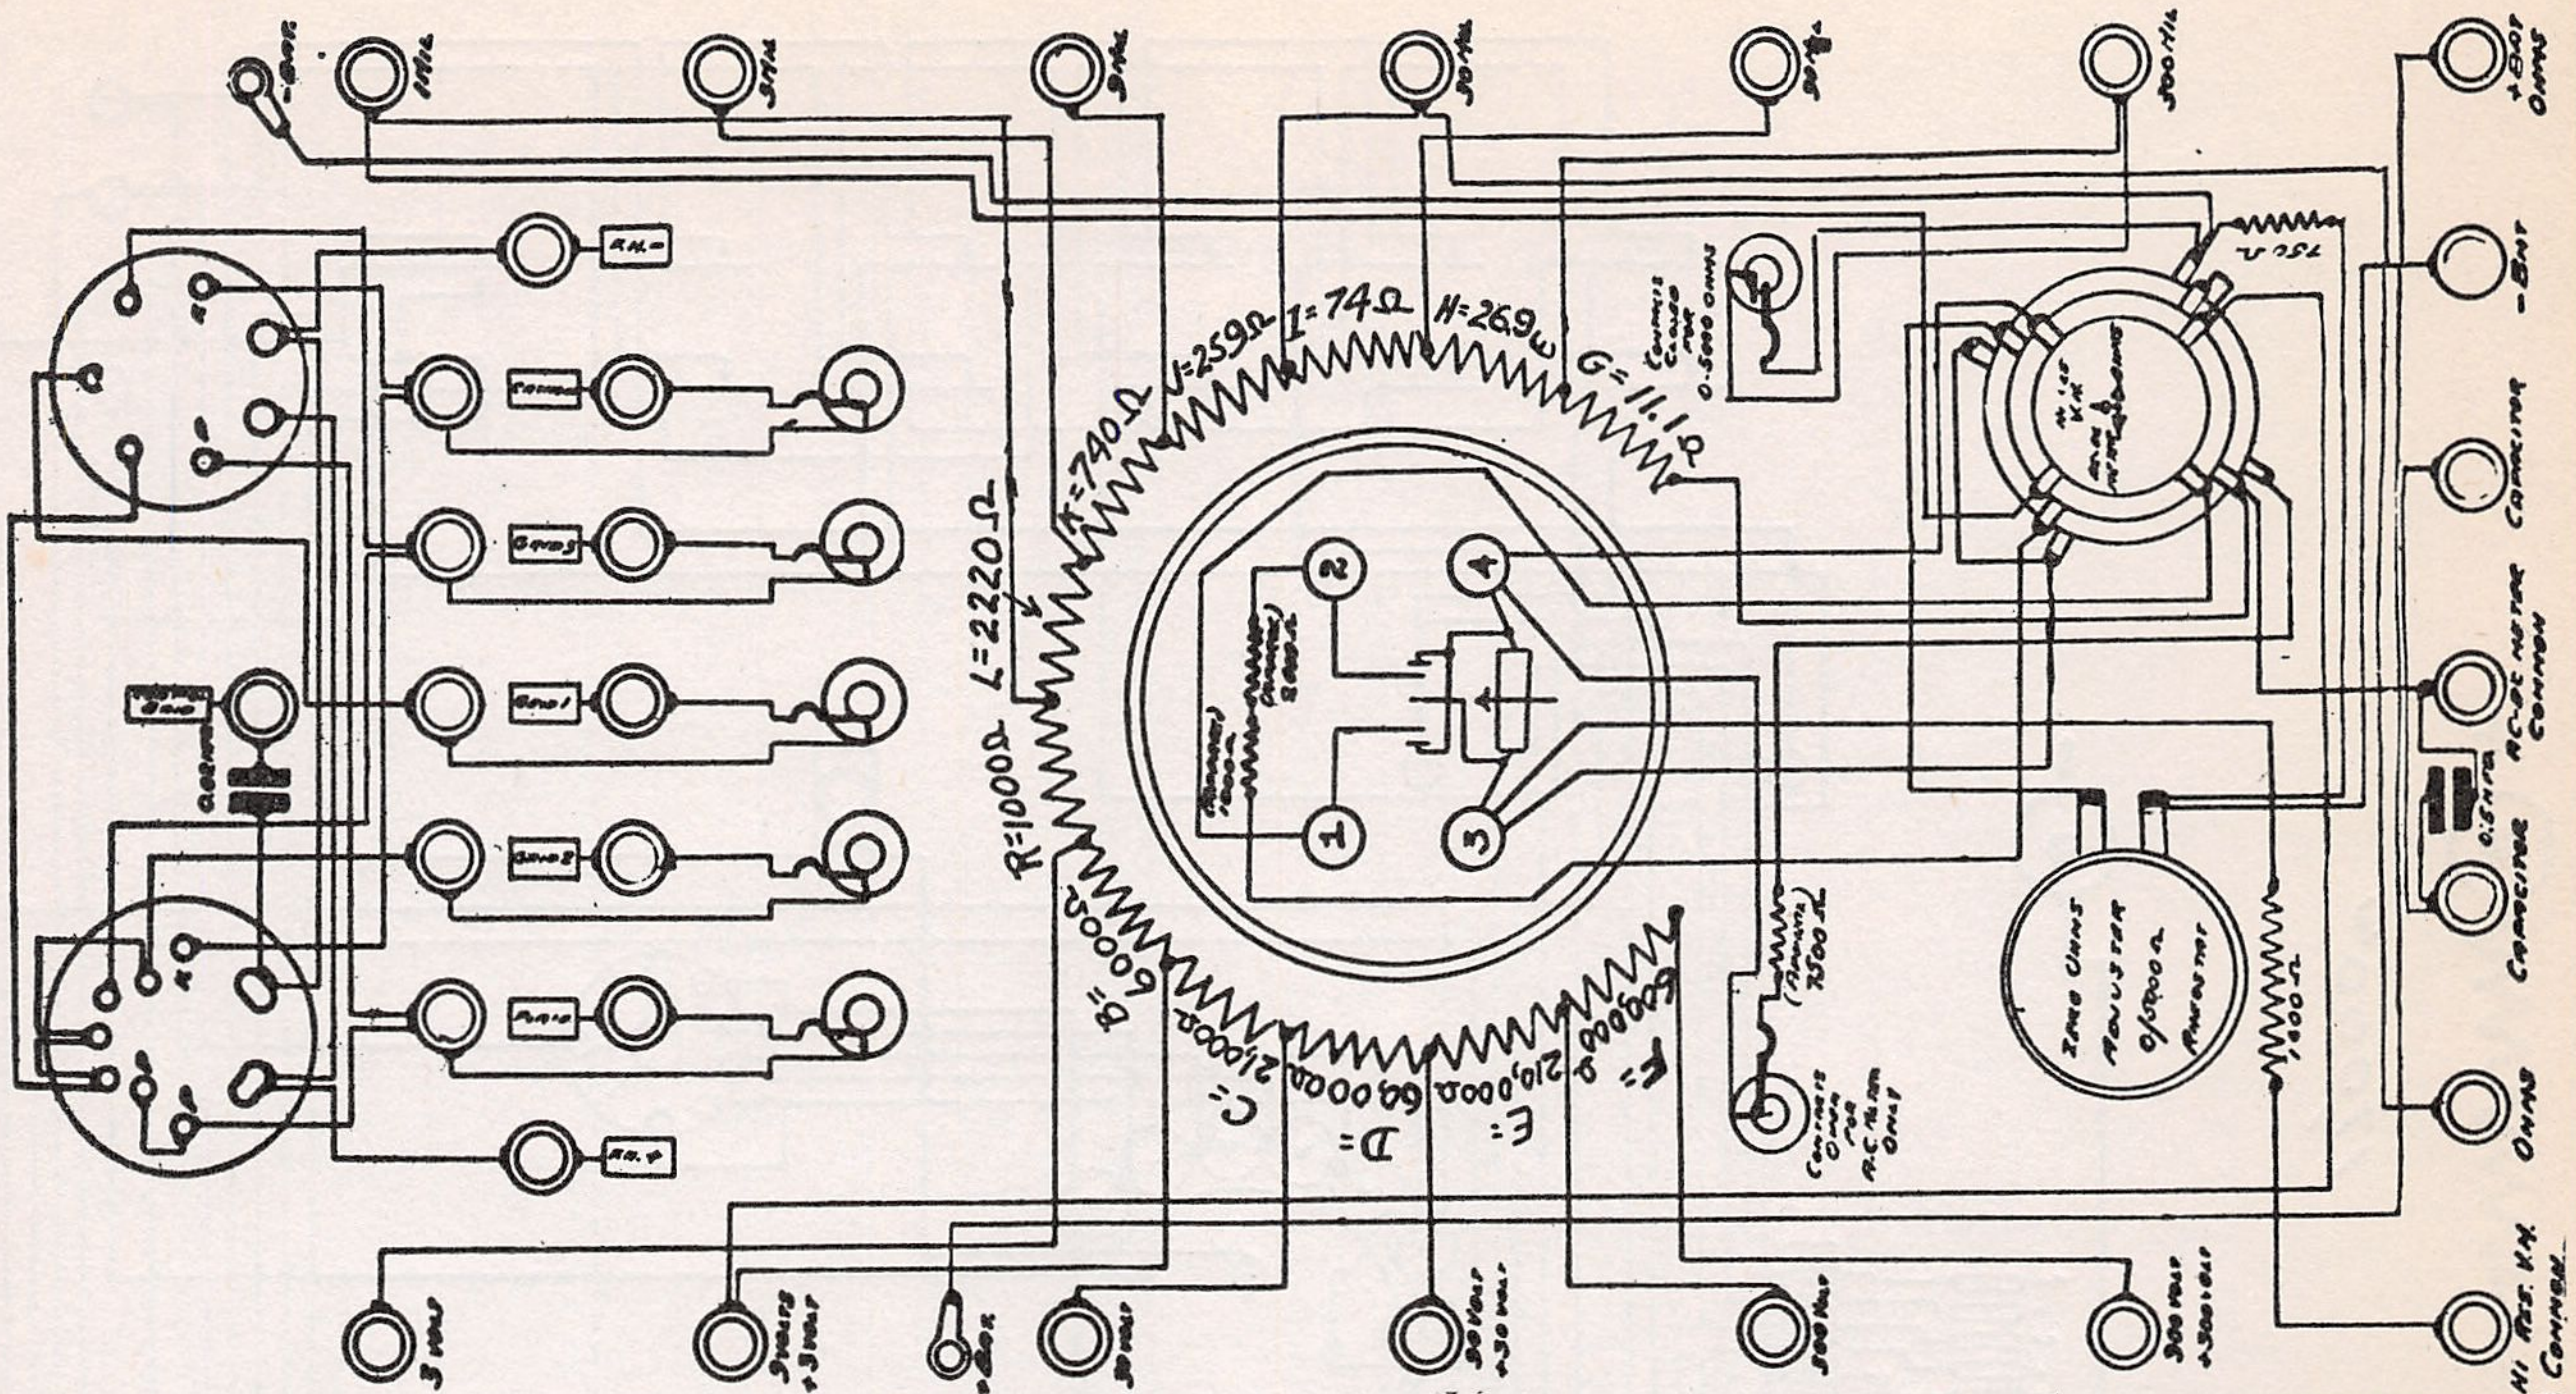
I=74Ω
H=26.9Ω
G=11.1Ω
J=259Ω
K=740Ω
L=2220Ω
R=1000Ω
B=6000Ω
C=21000Ω
D=64000Ω
E=210,000Ω
F=600,000Ω
3 Volt
30 Volt
300 Volt
Hi Res. V.M. Common
Ohms
Capacitor
AC-DC Meter Common
Capacitor
Zero Ohms Adjuster 0/5000Ω Rheostat
1500Ω

Note:
All Plugs Thus: ▭ Indicate Leads Through Analyzer Cable to Analyzer Plug.

			Drawn & Traced Carl P. Doust	SUPREME INSTRUMENTS CORP. GREENWOOD, MISS.	
			Checked	Point to Point Diagram of	Date:- 11/5/32
			Approved	Weston Metered Model 56 Analyzer	639-B

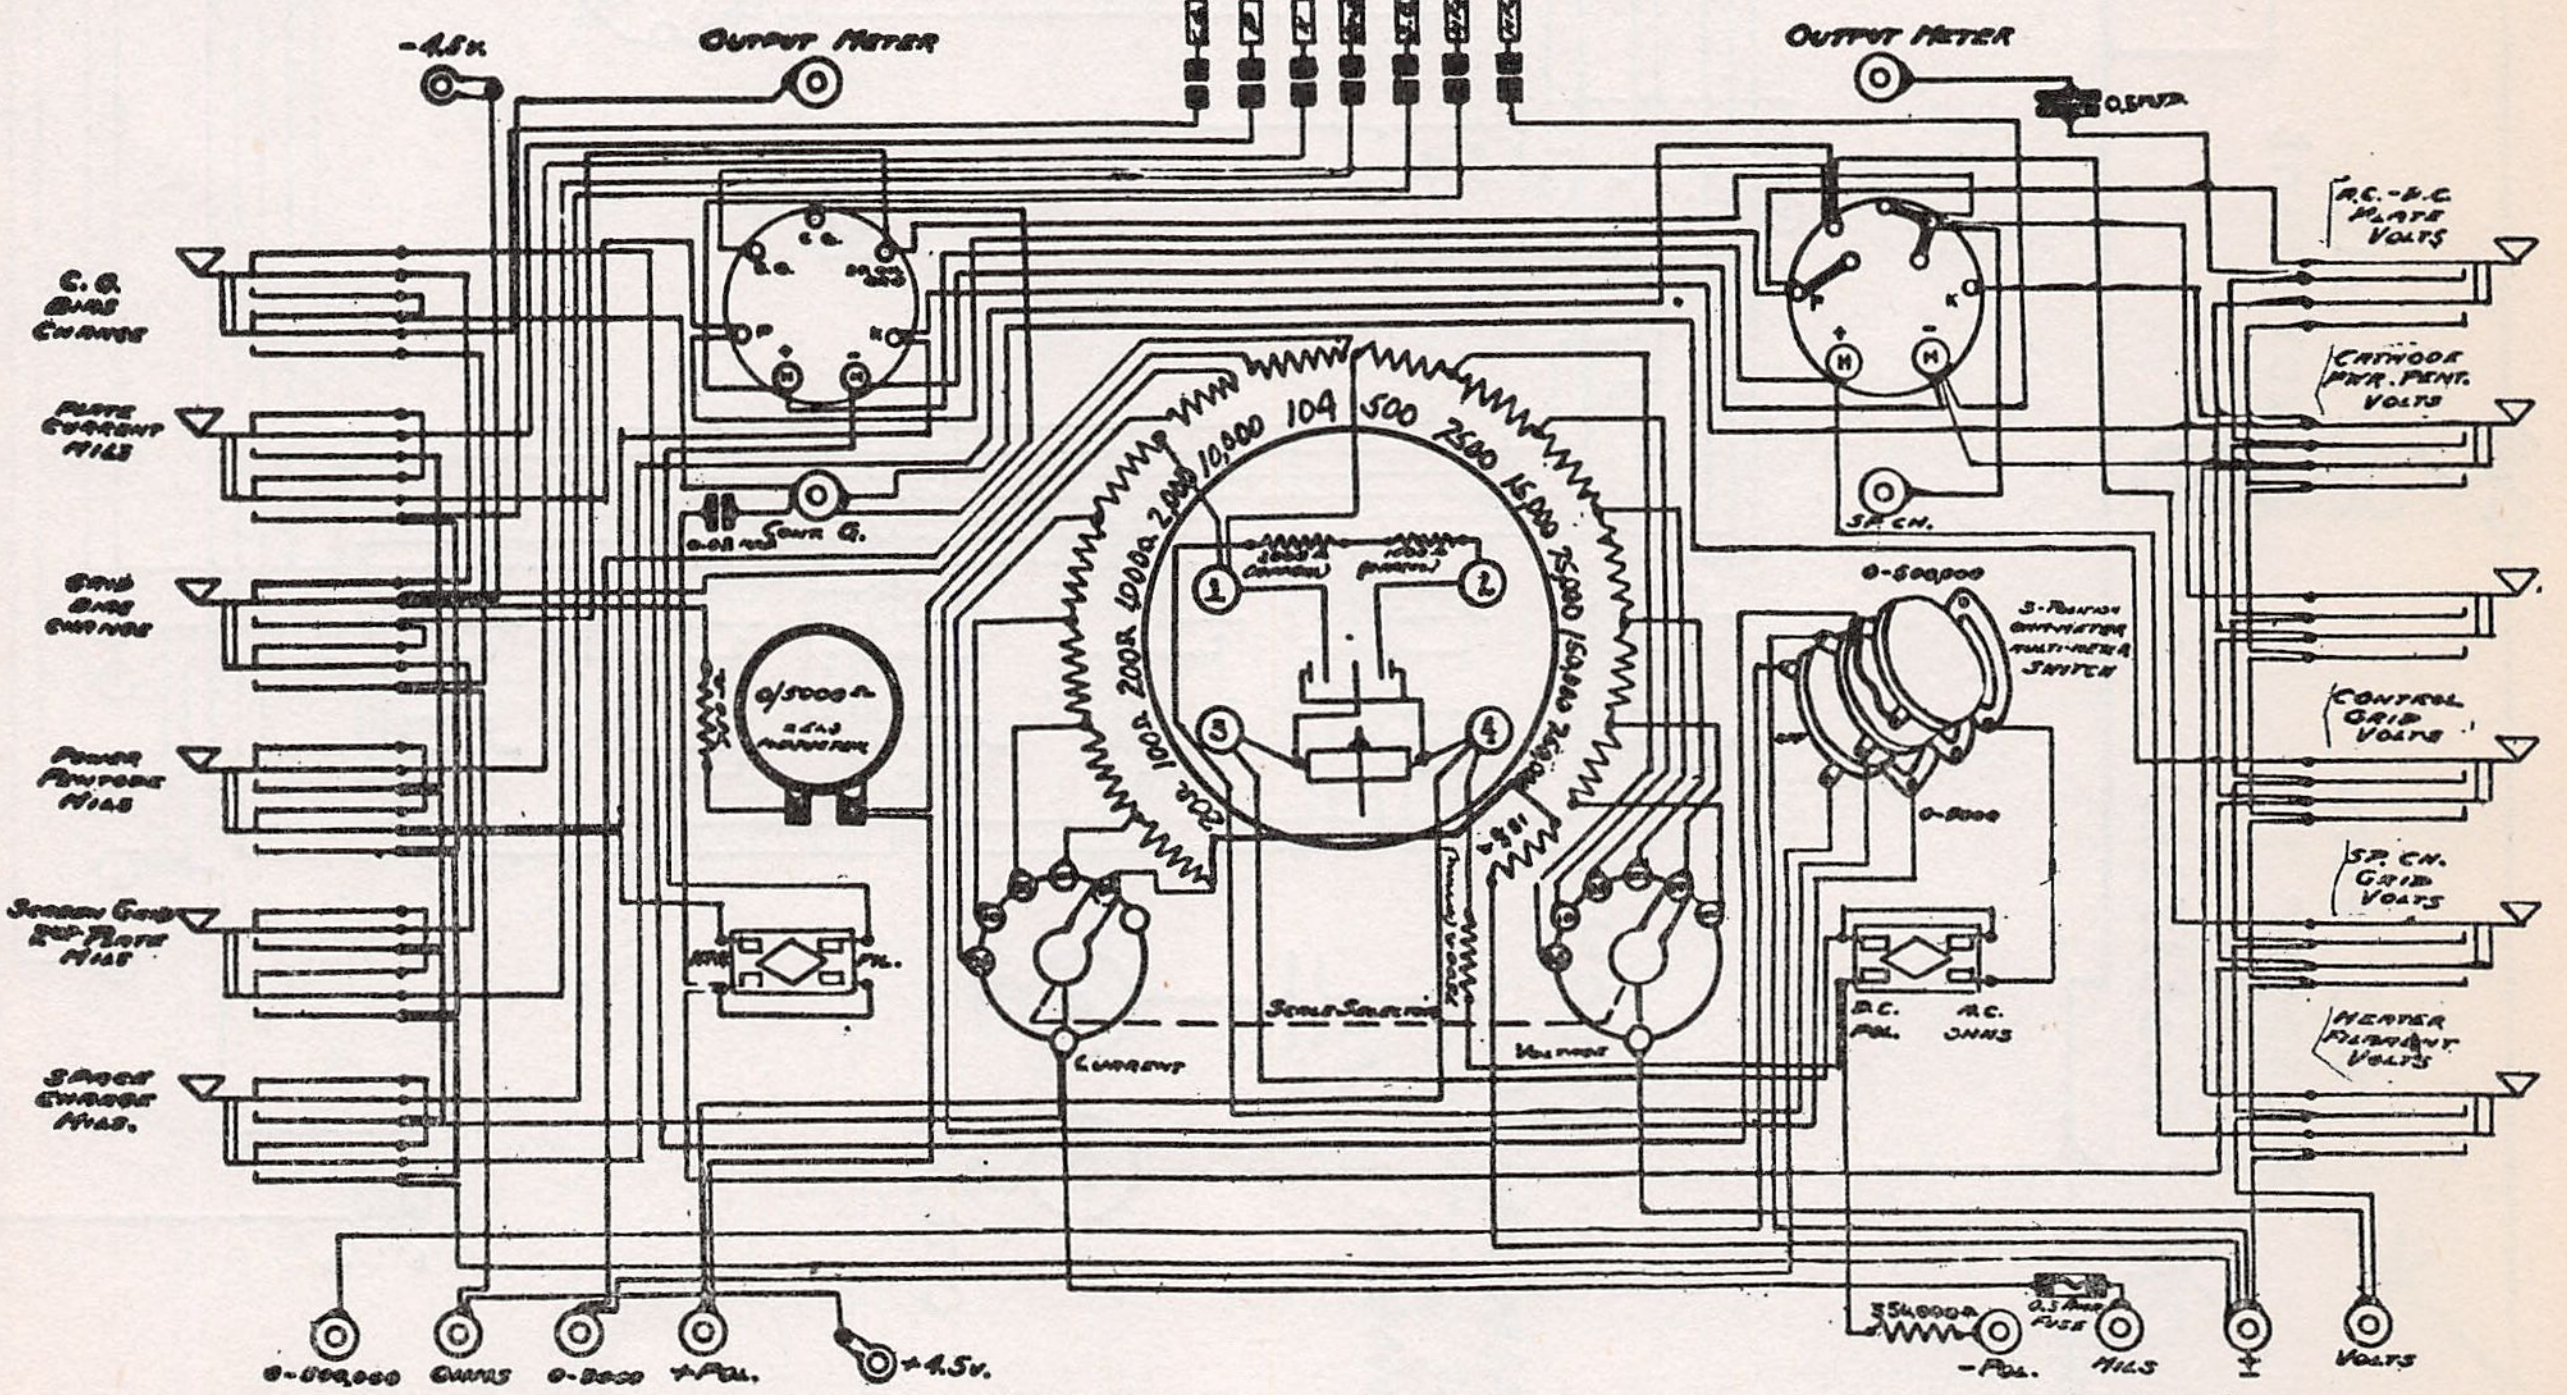
-4.5v.
Output Meter
Output Meter
0.5 MFD.
C.G. Bias Change
Plate Current Mils
Grid Bias Change
Power Pentode Mils
Screen Grid and Plate Mils
Space Charge Mils
A.C.-D.C. Plate Volts
Cathode Pwr. Pent. Volts
Control Grid Volts
Sp. Ch. Grid Volts
Heater Filament Volts
Cont. G.
Sp. Ch.
0/5000Ω Rheostat
0-500,000
0-5000
Current
Scale Selector
Voltage
D.C. Pol.
A.C. Ohms
354000Ω
0.5 Amp Fuse
0-500,000
Ohms
0-5000
+Pol.
+4.5v.
-Pol.
Mils
Volts
104
500
2500
15000

			Drawn & Traced Carl P. Doust	SUPREME INSTRUMENTS CORP. GREENWOOD, MISS.	
			Checked	Point to Point Diagram of Weston Metered	Date 10/11/32
			Approved	Model 90 Analyzer-Series 6-J	641-B

MODEL 90 Analyzer
MODEL Output Meter

SUPREME INSTRUMENTS CORP.

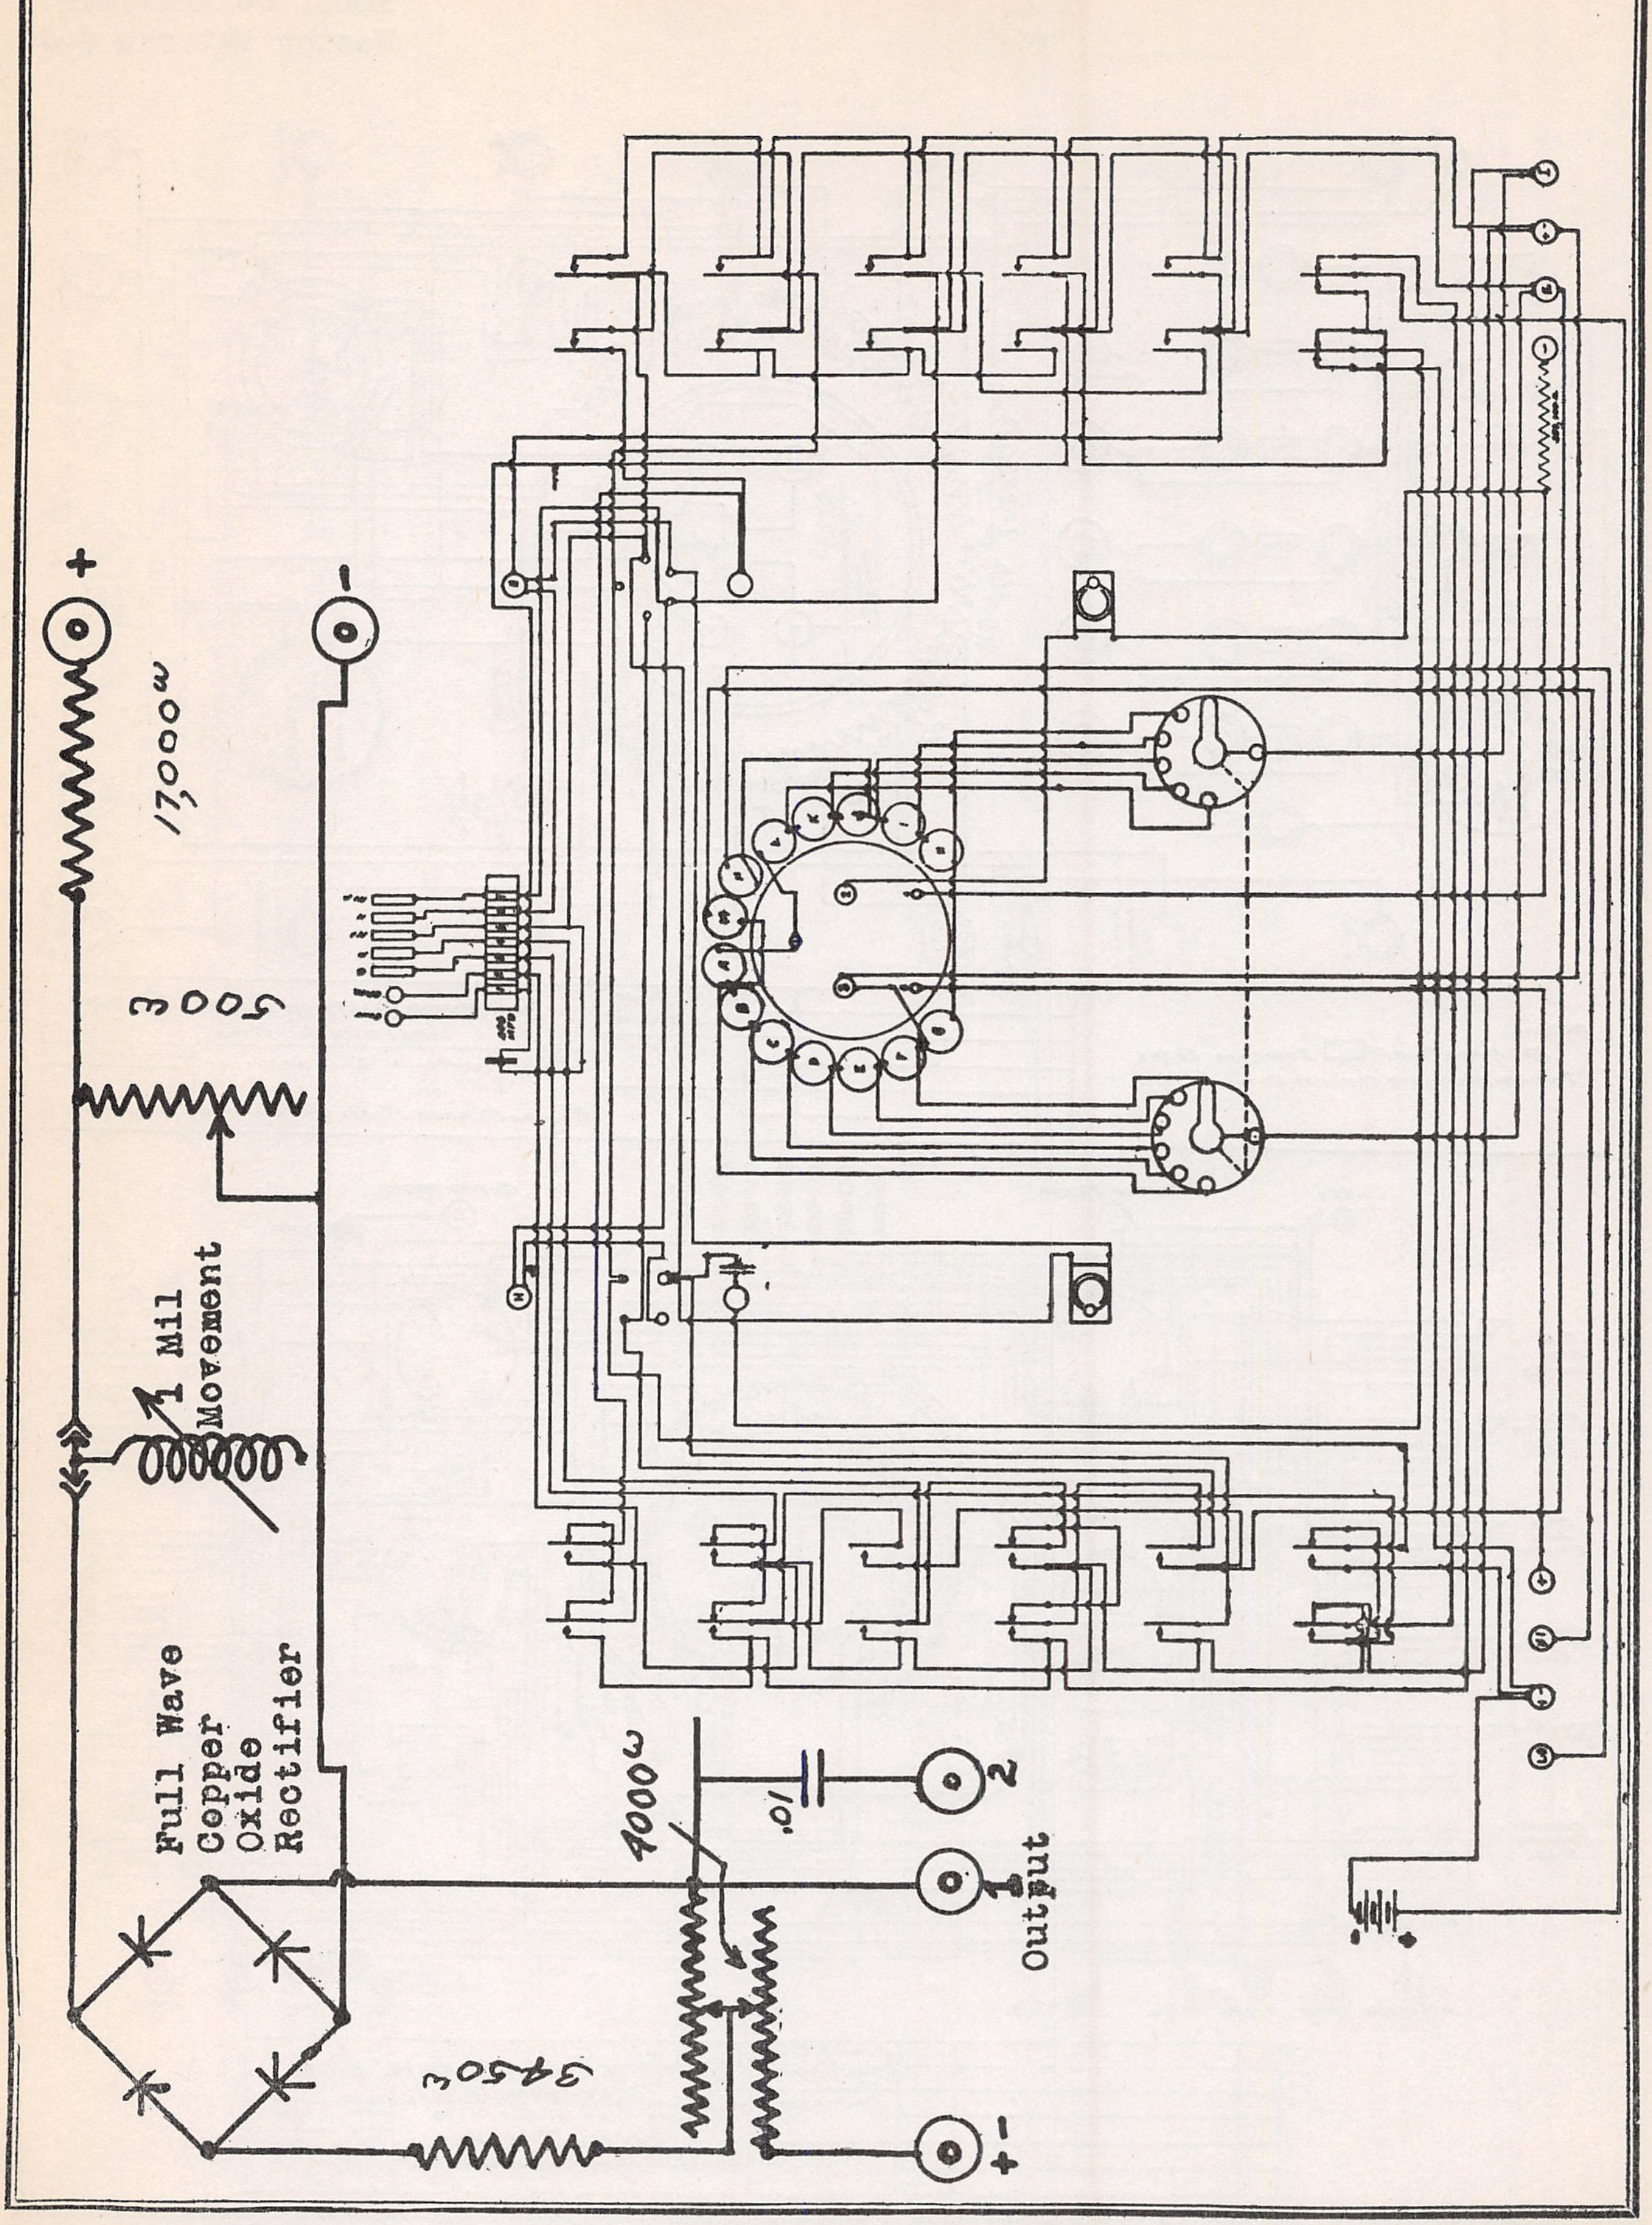
+
-
17,000ω
500ω
1 Mil Movement
Full Wave Copper Oxide Rectifier
3450ω
4000ω
.01
2
Output
-
+

TRANSFORMER CORP. OF AMERICA

MODEL AC84,85
Schematic
Voltage

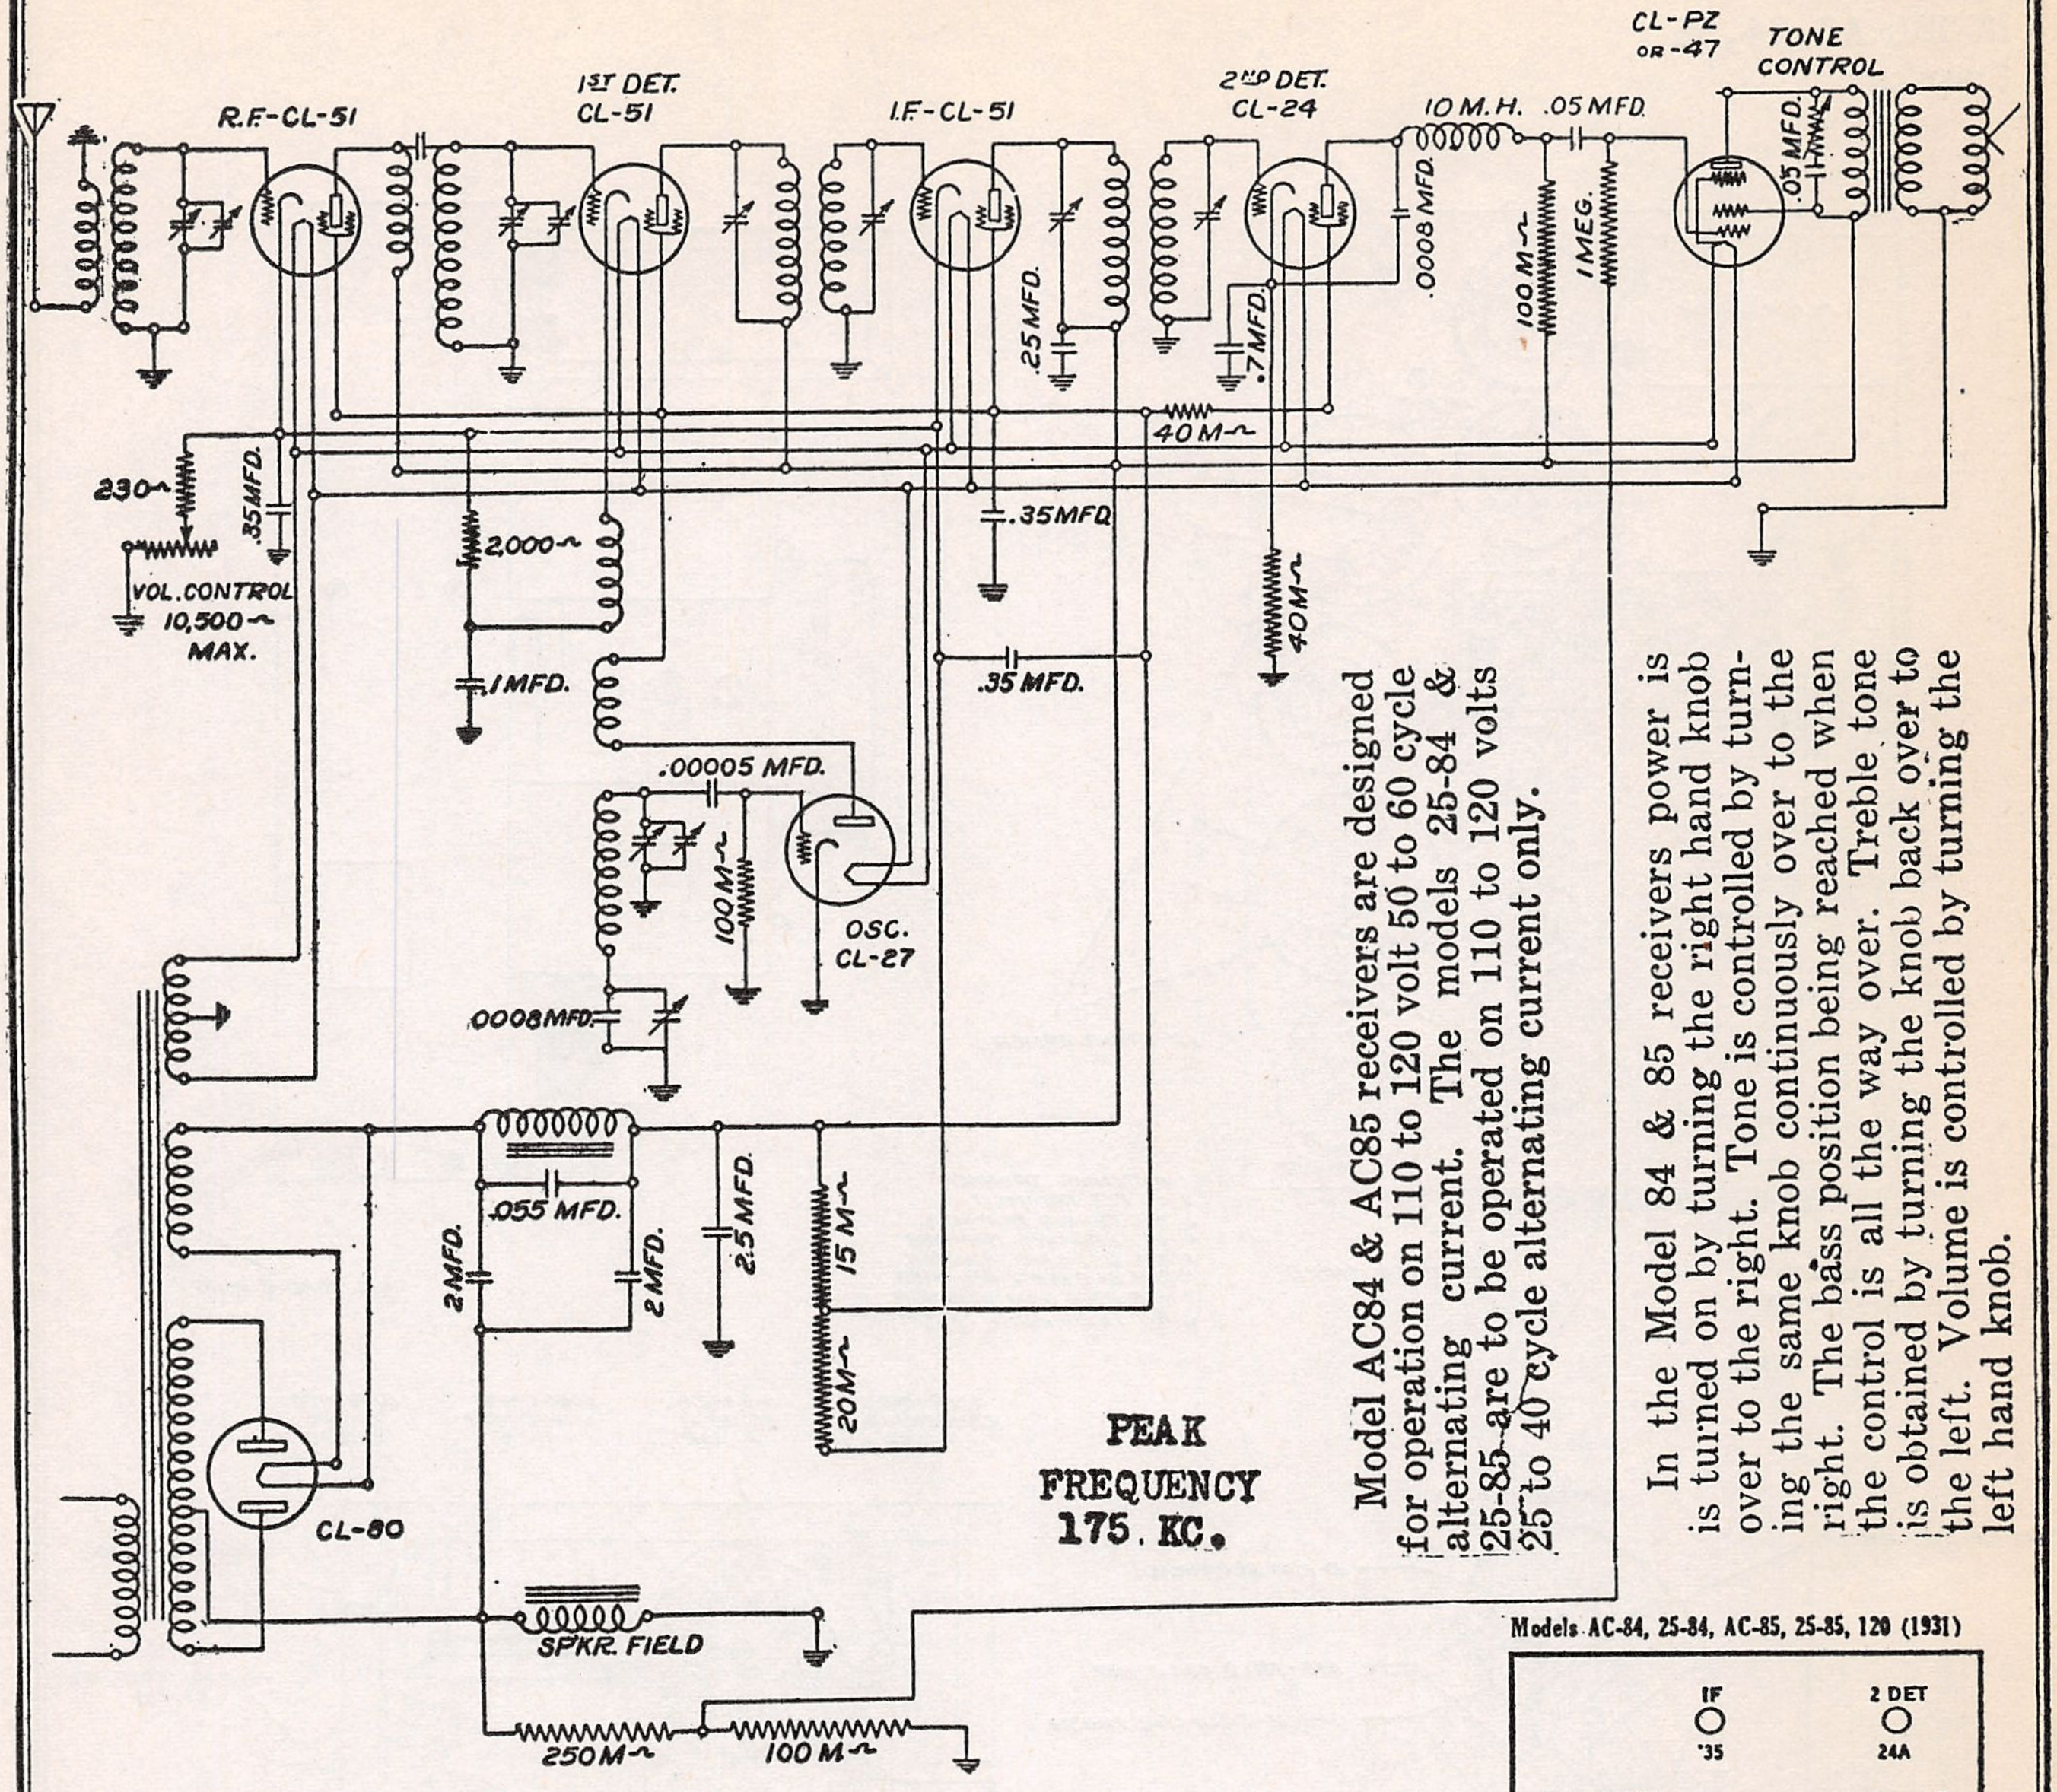
R.F.-CL-51
1ST DET. CL-51
I.F.-CL-51
2ND DET. CL-24
CL-PZ OR -47
TONE CONTROL
10 M.H.
.05 MFD.
.05 MFD.
.0008 MFD.
100 M~
1 MEG.
.25 MFD.
.7 MFD.
40 M~
230~
.35 MFD.
VOL. CONTROL 10,500~ MAX.
2,000~
.1 MFD.
.35 MFD.
40 M~
.35 MFD.
.00005 MFD.
100 M~
OSC. CL-27
.0008 MFD.
.055 MFD.
2 MFD.
2 MFD.
2.5 MFD.
15 M~
20 M~
CL-80
SPKR. FIELD
250 M~
100 M~

Model AC84 & AC85 receivers are designed for operation on 110 to 120 volt 50 to 60 cycle alternating current. The models 25-84 & 25-85 are to be operated on 110 to 120 volts 25 to 40 cycle alternating current only.

In the Model 84 & 85 receivers power is is turned on by turning the right hand knob over to the right. Tone is controlled by turning the same knob continuously over to the right. The bass position being reached when the control is all the way over. Treble tone is obtained by turning the knob back over to the left. Volume is controlled by turning the left hand knob.

PEAK FREQUENCY 175. KC.

Models AC-84, 25-84, AC-85, 25-85, 120 (1931)

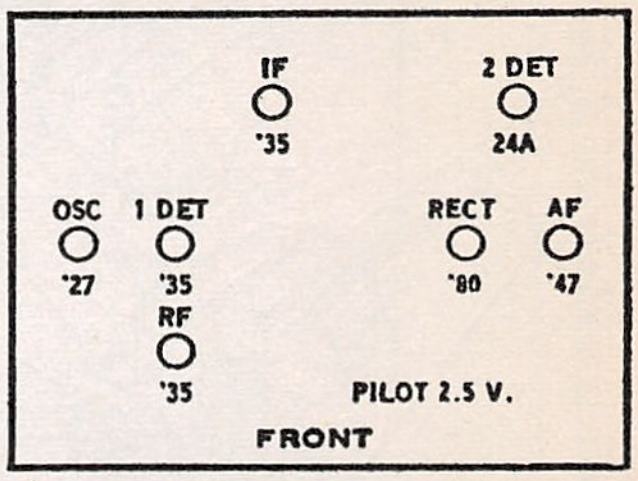
IF
'35
2 DET
24A
OSC
'27
1 DET
'35
RF
'35
RECT
'80
AF
'47
PILOT 2.5 V.
FRONT

READINGS TAKEN WITH WESTON MODEL 565 ANALYSER

No.	Stage	Type Tube	A Volts	B Volts	Cont. Grid Volts	Cath. Volts	Ip Norm.	SG Volts
1	r. f.	51	2.1	255	3.5	3.5	3.5	78
2	1st Det.	51	2.1	240	10.	10.	2	108
3	Osc.	27	2.1	135	0	0	6.	0
4	I. F.	51	2.1	250	3.5	3.5	3.5	77
5	2nd det.	24	2.2	190	6.0	6.0	.2	68
6	Output	47	2.2	228	14.	0	25	255
7	Rect.	80	4.4		0	0		0

Volume control position **Full** Line Voltage **115**

Note: Since resistance tolerances in the sets are plus or minus 10%, and tubes may vary over 20%, your readings may disagree with the above by plus or minus 30%.

MODEL AC 84,85
Chassis Views
Speaker
MODEL AC 94,95
Speaker

TRANSFORMER CORP. OF AMERICA

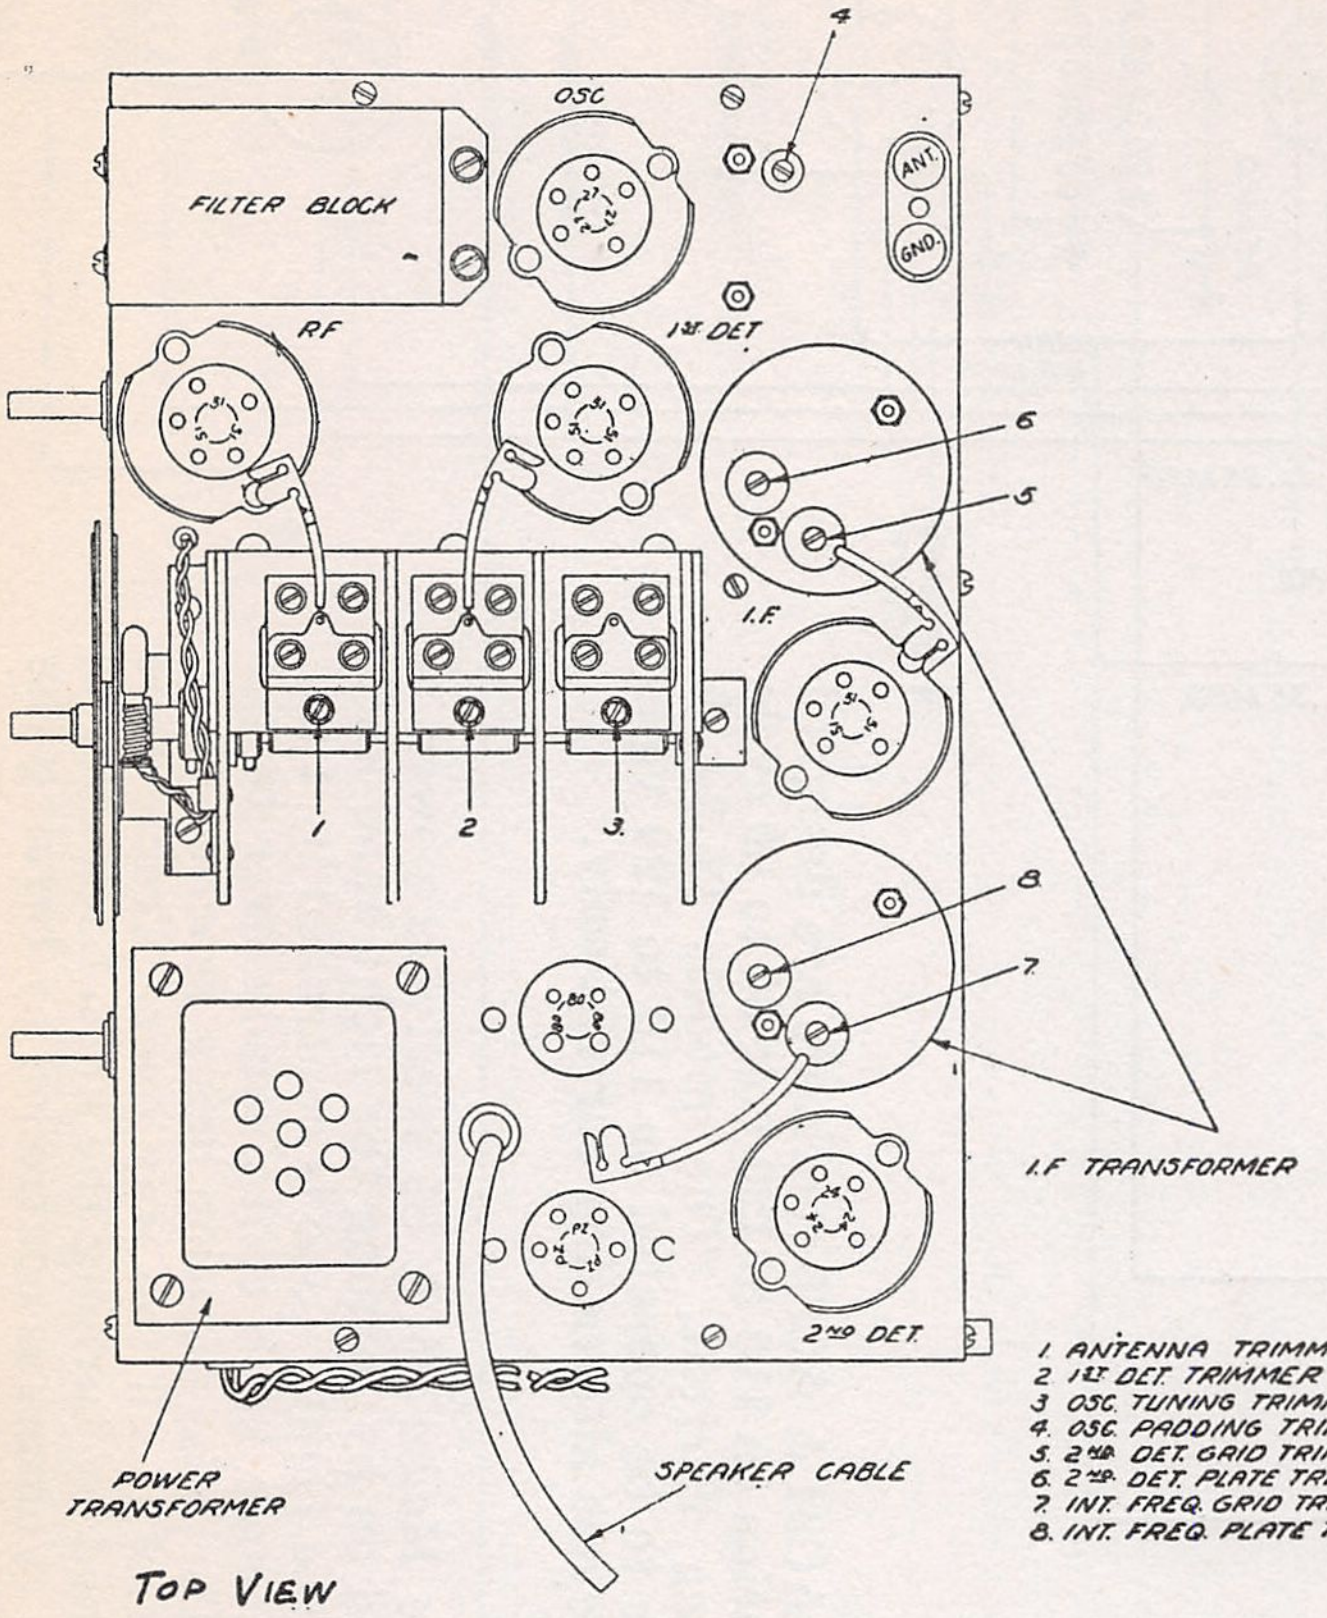
4
OSC
FILTER BLOCK
ANT.
GND.
RF
1ST DET
6
5
I.F.
1
2
3.
8
7
POWER TRANSFORMER
SPEAKER CABLE
I.F TRANSFORMER
2ND DET.

TOP VIEW

1. ANTENNA TRIMMER
2. 1ST DET. TRIMMER
3. OSC. TUNING TRIMMER
4. OSC. PADDING TRIMMER
5. 2ND DET. GRID TRIMMER
6. 2ND DET. PLATE TRIMMER.
7. INT. FREQ. GRID TRIMMER.
8. INT. FREQ. PLATE TRIMMER

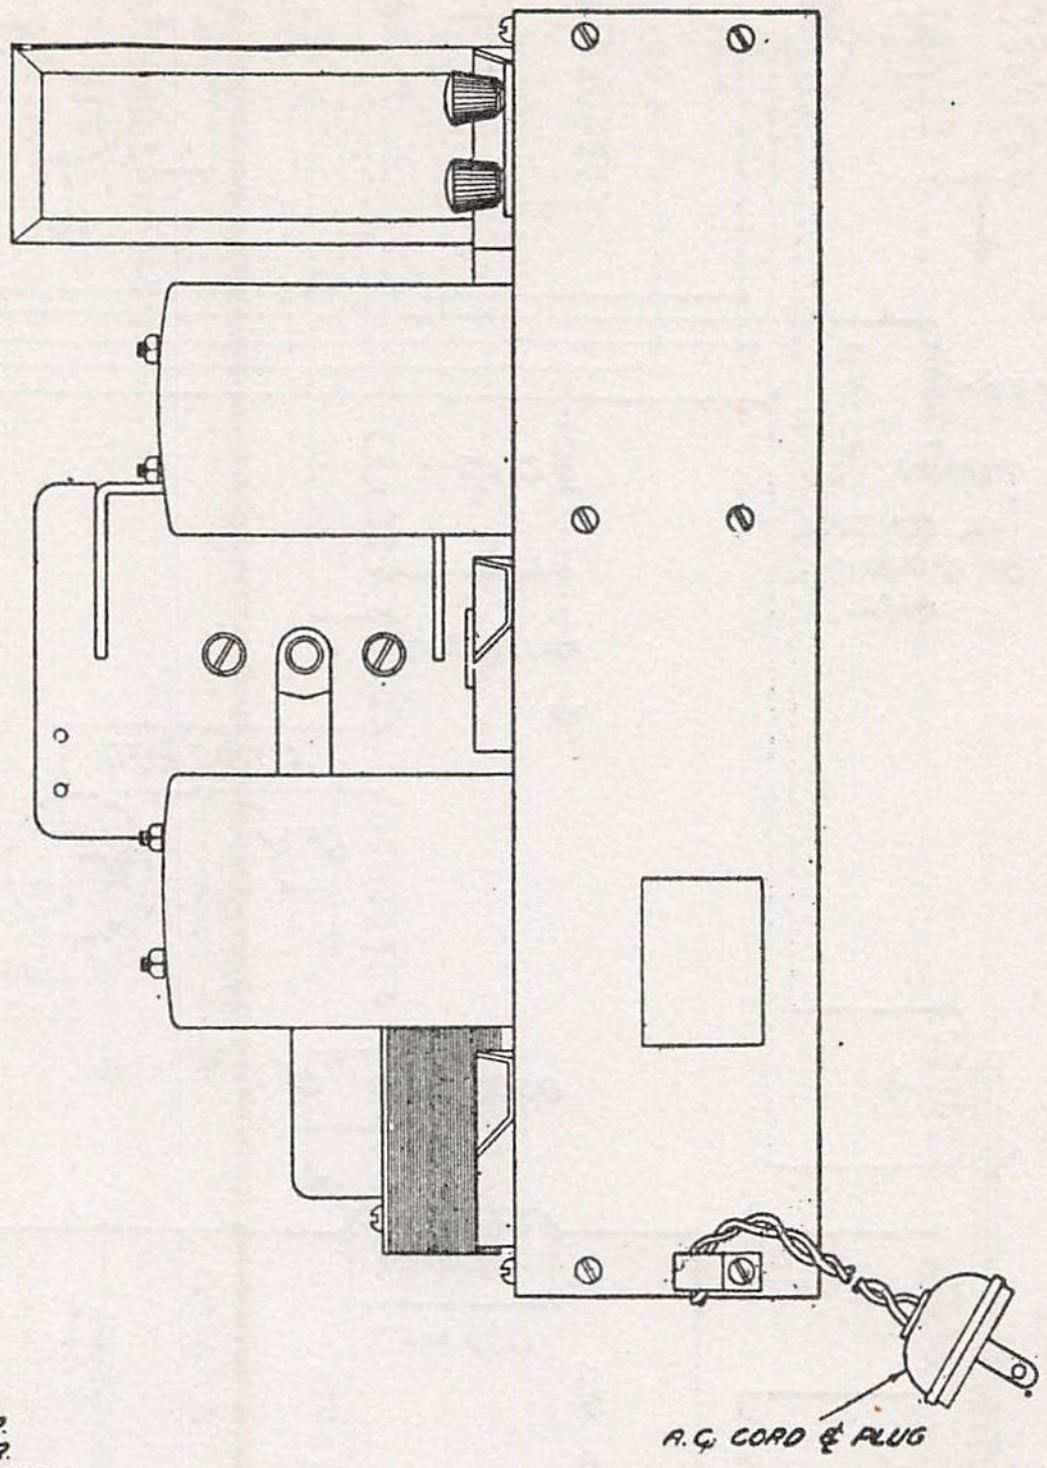
A.C. CORD & PLUG

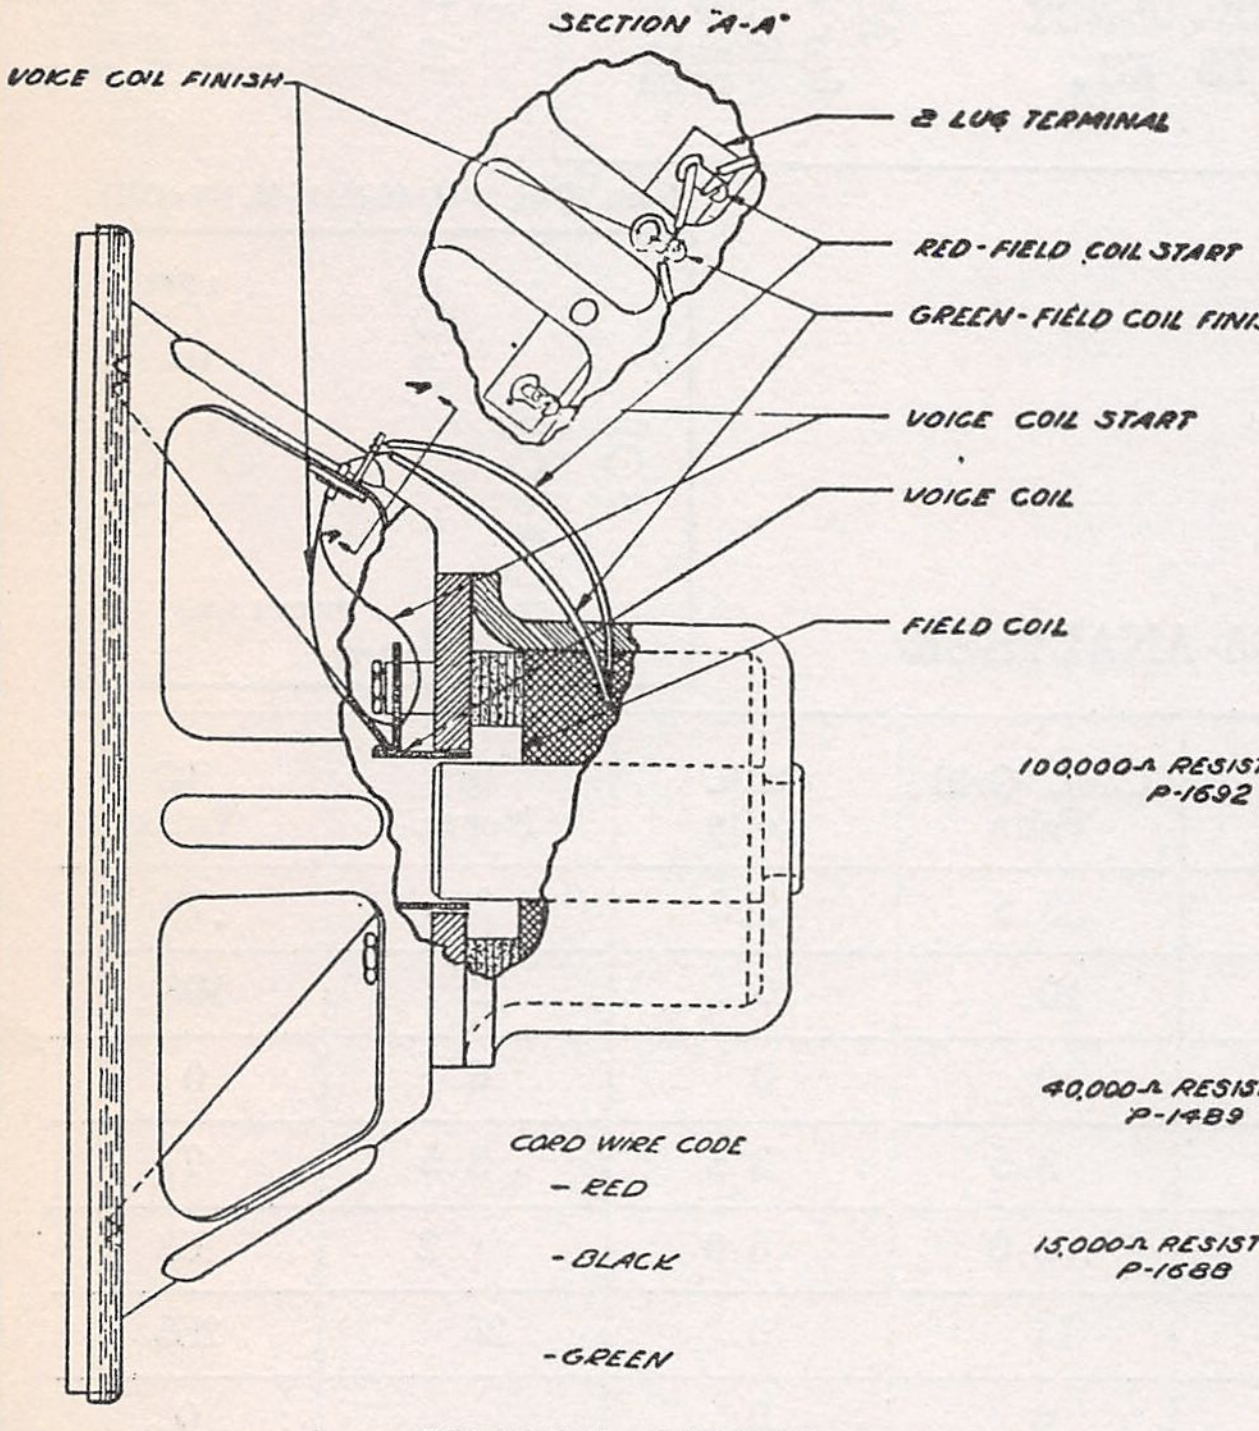
SECTION "A-A"
VOICE COIL FINISH
2 LUG TERMINAL
RED-FIELD COIL START
GREEN-FIELD COIL FINISH
VOICE COIL START
VOICE COIL
FIELD COIL
CORD WIRE CODE
- RED
- BLACK
- GREEN

DYNAMIC SPEAKER
MODELS 84 & 85 AND 94 & 25-94

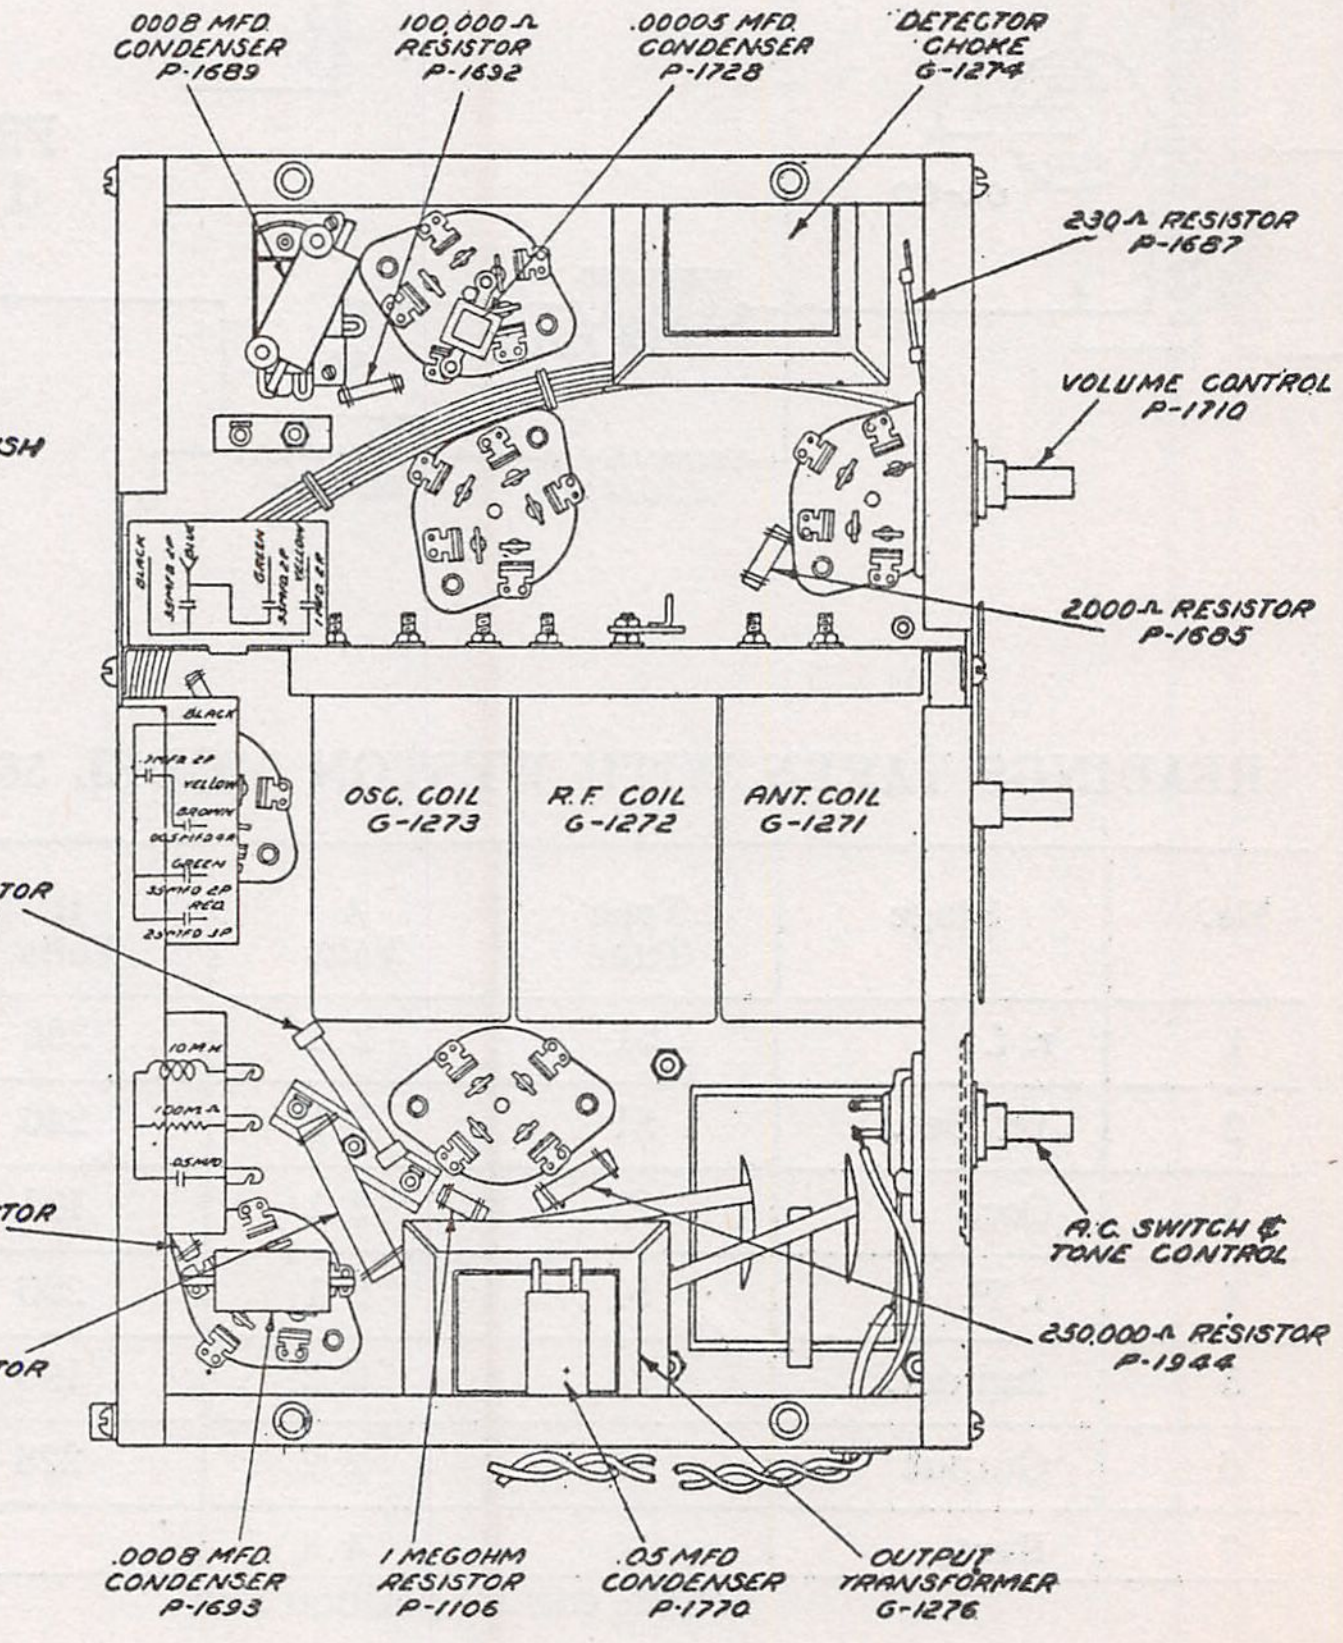
.0008 MFD. CONDENSER P-1689
100,000 Ω RESISTOR P-1692
.00005 MFD. CONDENSER P-1728
DETECTOR CHOKE G-1274
230 Ω RESISTOR P-1687
VOLUME CONTROL P-1710
2000 Ω RESISTOR P-1685
OSC. COIL G-1273
R.F. COIL G-1272
ANT. COIL G-1271
100,000 Ω RESISTOR P-1692
40,000 Ω RESISTOR P-1489
15,000 Ω RESISTOR P-1688
A.C. SWITCH & TONE CONTROL
250,000 Ω RESISTOR P-1944
.0008 MFD. CONDENSER P-1693
1 MEGOHM RESISTOR P-1106
.05 MFD CONDENSER P-1770
OUTPUT TRANSFORMER G-1276
BLACK
YELLOW
BROWN
GREEN
RED

G-83 CHASSIS
BOTTOM VIEW

CLARION
MODELS 84 & 85
MODELS 94 & 25-94

READJUSTING TRIMMERS

To readjust the trimmers on these superheterodyne receivers it will be necessary that a good design of 175 k.c. oscillator be employed and that a dependable broadcast test oscillator be on hand so that stages handling intermediate frequency and those handling radio frequency can be thoroughly checked. It is advisable to use a bakelite screw driver when making any of these adjustments.

First, connect the 175 k.c. oscillator output leads from the control grid cap of the first detector tube to ground. Do not remove any of the tubes from the sockets, and it is not necessary to disconnect the grid cap clip from the first detector tube. Reset trimmers No. 5, No. 6, No. 7 and No. 8 for maximum output. While this test oscillator is working into the intermediate frequency stages, no adjustment of the tuning condenser on the receiver will have any effect, inasmuch as the intermediate frequency stage is fixed tuned.

If your test oscillator is properly designed, it will supply exactly 175 k.c., and when trimmers No. 5. No. 6. No. 7 and No. 8 are set and turned for maximum output, they will be correctly adjusted.

Next, disconnect the 175 k.c. test oscillator and connect to the antenna binding post of the receiver, the output lead from your broadcast test oscillator or tune in a broadcast signal around 1400 k.c., then reset trimmer No. 2 and No. 1, respectively, for maximum output. This adjustment will track the first detector and r. f. stages.

To check calibration of the receiver, whether it be high or low, trimmer No. 3 (oscillator) should be reset until a station of known high frequency is brought in at the correct dial marking with peak volume. If your broadcast test oscillator is accurately calibrated, it might be used in place of the broadcasting station signal. In this adjustment, a broadcast station or test oscillator signal at about 1400 k.c. should be chosen. The setting of the trimmer at 1400 k.c. is more critical than it would be at 600 k.c.

The next adjustment is important and not easily explained in writing, so pay close attention to the following instructions. We will now balance the oscillator to the r. f. and first detector stages.

Tune the external broadcast test oscillator and the receiver both to 600 k.c., then slowly increase or decrease the capacity of No. 4 (oscillator padding trimmer), at the same time and continuously tuning back and forth across the signal with the receiver tuning condenser gang. The output meter needle will now be swinging up and down in step with the variation in tuning. Watch the peak of this swinging closely and readjust No. 4 trimmer until the swinging needle reaches its highest peak.

Retune the receiver and broadcast test oscillator to 1400 k.c. and re-check trimmer No. 3 to make sure that the adjustment of No. 4 has not thrown the receiver out of calibration. If it has, then readjust No. 3 until the calibration is correct, (as previously explained), and check on trimmers No. 2 and No. 1, to make sure that the adjustment of No. 4 has not reduced the sensitivity.

CONTINUITY TESTS

(Applicable to completely and partially inoperative sets and circuits)

A **175 k.c. test oscillator** should be connected to the grid cap of the first detector tube so that the modulated signal can be reproduced in the loud speaker. This indicates that the first detector and intermediate frequency stages are operating. To determine if the oscillator is working, **a broadcast test oscillator** should be connected to the grid cap of the first detector tube. No signal will come through unless the oscillator tube and stage are functioning correctly. The r. f. tube, of course, can be checked lastly by connecting the broadcast test oscillator to the antenna and ground binding posts of the receiver.

MODEL AC 84,85
Parts List
MODEL 120-139
Parts List

TRANSFORMER CORP. OF AMERICA

MODELS 84-85 (Also Series 120-139)

P-1038	Pilot lamp	.35
P-1049	Grip cap clip	.05
P-1096	A. C. cable clip	.05
P-1106	1,000,000 ohm resistor	.35
P-1354	Chassis mounting screws	2.50 C
P-1459	Tube shield base	.20
P-1472	Tube shield	.10
P-1488	20,000 ohm resistor	.35
P-1499	40,000 ohm resistor	.30
P-1593	24 socket	.20
P-1595	80 socket	.20
P-1597	27 socket	.20
P-1634	Ant. ground binding post	.25
P-1637	Escutcheon plate	.55
P-1680	Osc. padding cond.	.45
P-1682	51 socket	.20
P-1683	47 socket	.20
P-1685	2000 ohm resistor	.35
P-1687	230 ohm resistor	.20
P-1688	15,000 ohm resistor	.55
P-1689	.0008 mfd. cond., red dot	.30
P-1692	100,000 ohm resistor, R. F.	.35
P-1693	.0008 mfd. condenser	.25
P-1700	Chassis mounting strap	.15
P-1704	Knobs	.30
P-1707	Escutcheon screws	.75 C
P-1710	Volume control	1.75
P-1728	.00005 mfd. condenser	.30
P-1770	.05 tone control cond.	.25
†P-1883	10″ speaker for model 84	12.50
P-1931	10″ diaphragm for G-1370 speaker	.75
P-1944	250,000 ohm resistor	.35
P-1955	Tone cont. on-off switch	1.90
P-1990	10″ diaphragm for P-1883 speaker	.75
P-1991	Voice coil and spider for P-1883 speaker	.65
P-3050	8″ diaphragm for G-1260 speaker	.55
G-3019	Voice coil and spider for G-1260 speaker	.65
G-1220	Dial drive inc. pilot lamp socket	$ 1.50
G-1236	I. F. transformer	2.60
G-1255	Power trans., 60 cycle	4.00
G-1255A	Power trans., 25 cycle	5.85
G-1255B	Power trans., 220 volt	5.85
†G-1260	8″ Speaker for model 85	12.50
G-1271	Antenna coil	1.25
G-1272	R. F. coil	1.25
G-1273	Osc. coil	1.00
G-1274	Filter choke	1.65
G-1276	Output transformer	2.00
G-1277	Detector plate choke	1.50
G-1350	Filter pack, 60 cycles	5.00
G-1350A	Filter pack, 25 cycles	6.50
G-1351	R. F. bypass cond.	1.00
G-1352	A. F. bypass cond.	1.25
G-1357	Voice coil for G-1360 and G-1370 speakers	.65
*G-1360	8″ Speaker for model 85	12.50
*G-1370	10″ Speaker for model 84	12.50

*Speaker number stamped on field coil pot.

†Blank—no number stamped on field coil pot.

(Be Sure to Specify As Above if Ordering Speakers or Parts of Same)

SERIES 120-139

P-4033—Escutcheon Plate (replacing P-1637)	$0.55
P-4037—Large Knobs (replacing P-1704)	.30
P-4047—Small Knobs (replacing P-1704)	.25
P-4075—Tone Control (replacing P-1955)	1.90
P-4080—Volume Control (replacing P-1710)	1.75
G-1363—Oscillator Padding Condenser (replacing P-1680)	.75
G-1379—Dial and Scale Assembly (replacing G-1220)	1.50
G-1402—I. F. Transformer (replacing G-1236)	1.75

For complete parts data refer to parts list of models 84-85 above.

TRANSFORMER CORP. OF AMERICA

MODEL AC-94, 25-94
Schematic - Voltage

CLARION MODELS AC 94 & 25-94

Peak Frequency
175 KC

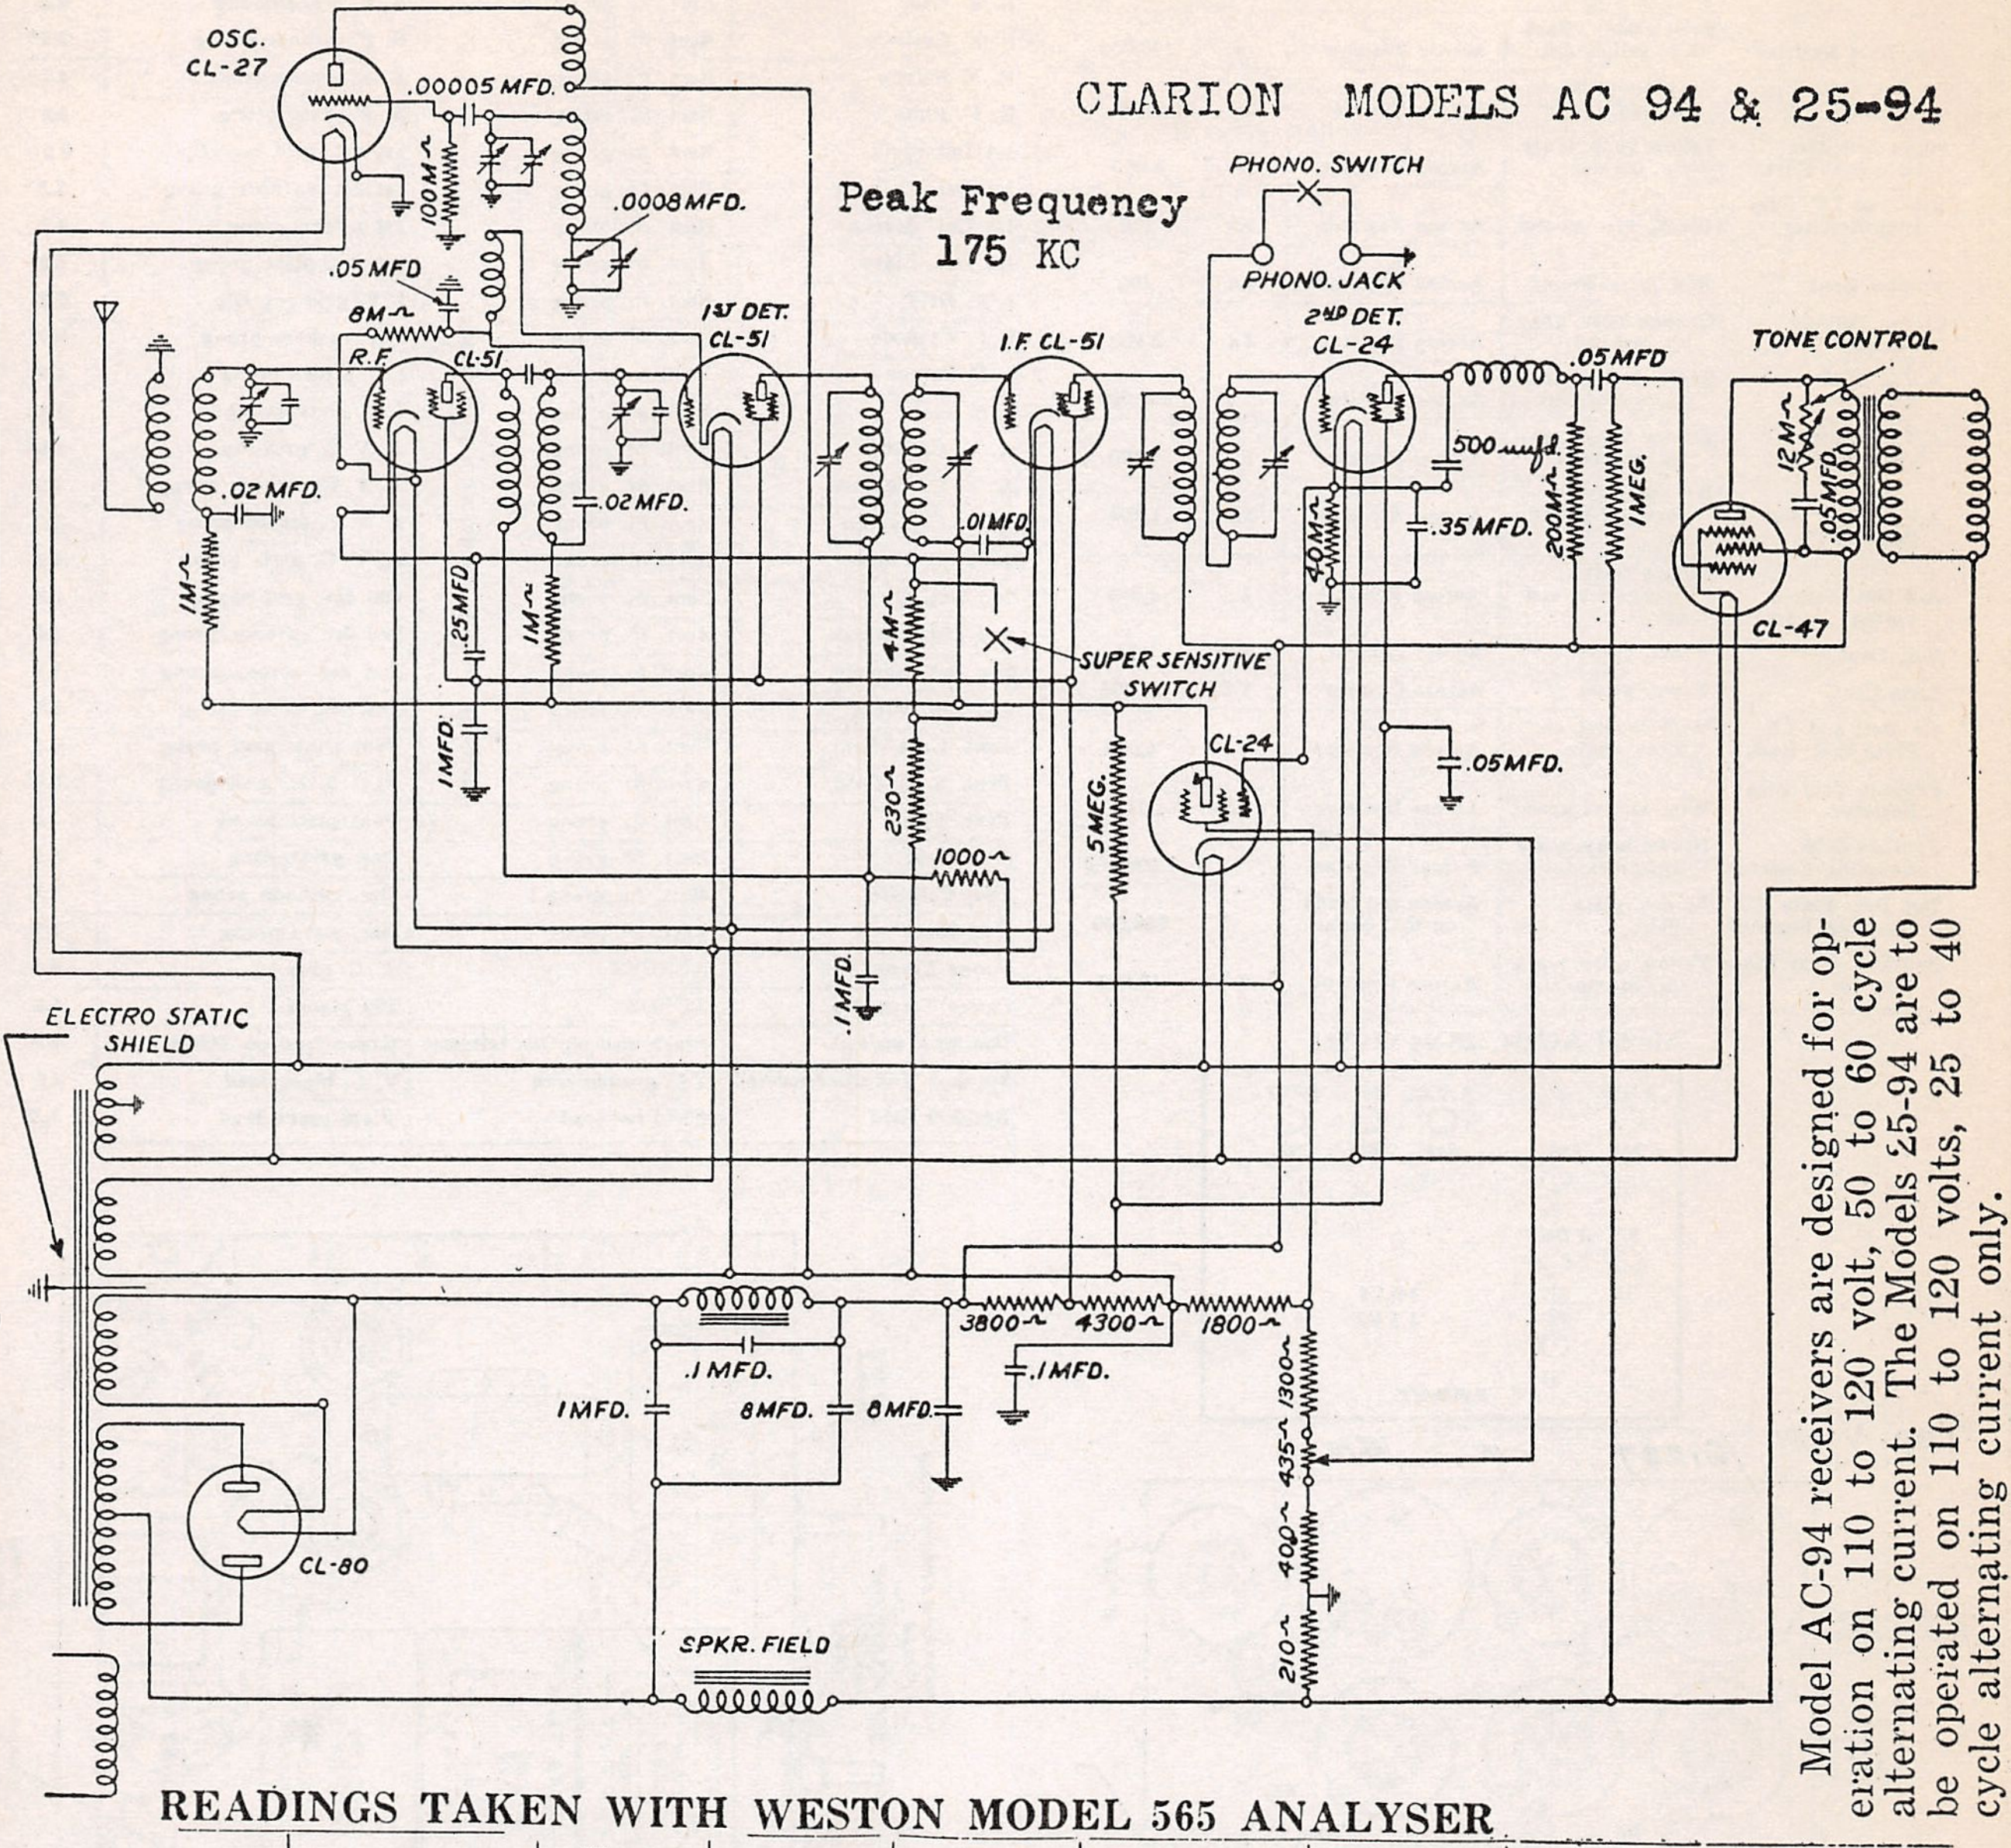
OSC.
CL-27
.00005 MFD.
100 M~
.0008 MFD.
.05 MFD
8M~
R.F.
CL-51
1ST DET.
CL-51
I.F. CL-51
PHONO. SWITCH
PHONO. JACK
2ND DET.
CL-24
.05 MFD
TONE CONTROL
.02 MFD.
1M~
.02 MFD.
.25 MFD.
1M~
1 MFD.
4M~
.01 MFD.
SUPER SENSITIVE SWITCH
230~
1000~
.1 MFD.
5 MEG.
CL-24
.05 MFD.
500 μμfd
40M~
.35 MFD.
200M~
1 MEG.
12M~
.05 MFD.
CL-47
ELECTRO STATIC SHIELD
.1 MFD.
1 MFD.
8 MFD.
8 MFD.
3800~
4300~
1800~
.1 MFD.
1300~
435~
400~
210~
CL-80
SPKR. FIELD

Model AC-94 receivers are designed for operation on 110 to 120 volt, 50 to 60 cycle alternating current. The Models 25-94 are to be operated on 110 to 120 volts, 25 to 40 cycle alternating current only.

READINGS TAKEN WITH WESTON MODEL 565 ANALYSER

No.	Stage	Type Tube	A Volts	B Volts	Cont. Grid Volts	Cath. Volts	Ip' Norm.	SG Volts
1	r. f	51	2.1	178	1.5	2.5	4.5	82
2	1st det.	51	2.1	160	9.5	10.	1.2	75.
3	Osc.	27	2.05	120	0	0	10	0
4	I. F.	51	2.05	180	.6	3.	3	82.
5	2nd det.	24	2.05	220	8.	8.	.25	85.
6	A.V.C.	24	2.05	50	12.	20	0	37
7	A.F.	47	2.1	260	16.5		40	275.
8	Rect.	80	4.6	160			40	

Volume control position Full. Line Voltage 115-60 cycle.

NOTE: Filaments and cathodes of R.F., I.F., and first detector are 95 volts positive with respect to ground.

NOTE: Since resistance tolerances in the sets are plus or minus 10%, and tubes may vary over 20%, your readings may disagree with the above by plus or minus 30%.

MODEL AC94,25-94
Chassis Views
Test Data

TRANSFORMER CORP. OF AMERICA

RESISTANCE TABLE

(Using 6 volt scale, 1,000 ohms per volt; meter and 6 volt battery

Item Tested	Description Color—Code	From To	Reads	Ohms Resistance
Osc. Grid Resistor	Brown body, black tip, yellow dot	Across Resistor	.6	100,000
1st Det. Grid Bias Resistor	Gray body, black tip, red dot	Across Resistor	3.4	8,000
Super-Sensitive Grid Bias Rest.	Yellow body, black tip, red dot	Across Resistor	4.4	4 000
R.F. and I.F. Grid Bias Resistor	Black, wire wound	Across Resistor	5.9	230
Volume Cont.	Red, wire wound	Across Resistor	5.8	400
Screen Voltage Resistor	Orange body, gray tip, red dot	Across Resistor	4.4	3,800
A.V.C. Plate Resistor	Green body, black tip, yellow dot	Across Resistor	.1	500,000
A.V.C. Screen Voltage Resist.	Brown body, gray tip, red dot	Across Resistor	5.2	1,800
A.V.C. Grid Bias Resistor	Brown body, orange tip, red dot	Across Resistor	5.3	1,300
2nd Det. Screen Voltage Resistor	Yellow body, orange tip, red dot	Across Resistor	4.2	4,300
Vol. Cont.	Front panel	Across Control	5.8	485
Tone Cont.	Front panel	Across Control	2.6	12,000
1st Det. and I.F. Plate Volt. Rest.	Wire wound on filter choke	Across Resistor	5.5	1,000
Pentode Grid Bias Resistor	Wire wound green	Across Resistor	5.9	210
Pentode Grid Coupling Resistor	Brown body, black tip, green dot	Across Resistor	.1	1,000,000
2nd Det. Plate Coupling Resistor	In det. plate choke	Across red leads on det. choke	.3	200,000
2nd Det. Grid Bias Resistor	Yellow body, black tip, orange dot	Across Resistor	1.3	40,000

ONTINUITY TEST TABLES

Circuit	From	To	Reading
Antenna Coil Pri.	Antenna post	Ground	6.0
R. F. Grid	Rect. fil. prong	R. F. grid cap clip	0.2
R. F Cathode	Rect. fil. prong	R. F. cathode prong	2.7°
R. F. Screen	Rect. fil. prong	R. F. screen prong	4.2
R. F. Plate	Rect. fil. prong	R. F. plate prong	5.3
1st Det. Grid	Rect. fil. prong	1st det. grid cap clip	0.2
1st Det. Cathode	Rect. fil. prong	1st det. cathode prong	2.3
1st Det. Screen	Rect. fil. prong	1st screen prong	4.2
1st Det. Plate	Rect. fil. prong	1st det. plate prong	5.3
I. F. Grid	Rect. fil. prong	I. F. grid cap clip	0.2
I. F. Cathode	Rect. fil. prong	I. F. cathode prong	2.7°
I. F. Screen	Rect. fil. prong	I. F. screen prong	4.2
I. F. Plate	Rect. fil. prong	I. F. plate prong	5.8
A. V. C. Grid	Rect. fil. prong	A. V. C. grid clip	1.0
A. V. C. Cathode	Rect. fil. prong	A. V. C. cathode prong	2,9
A. V. C. Screen	Rect. fil. prong	A. V. C. screen prong	3.0
A. V. C. Plate	Rect. fil. prong	A. V. C. plate prong	0.2
2nd Det. Grid	Rect. fil. prong	2nd det. grid prong	3.8
2nd Det. Cathode	Rect. fil. prong	2nd det. cathode prong	1.0
2nd Det. Screen	Rect. fil. prong	2nd det. screen prong	3.3
2nd Det. Plate	Rect. fil. prong	2nd det. plate prong	0.3
Pent. Cont. Grid	Rect. fil. prong	Pent cont. grid prong	0.1
Pent. S. C. Grid	Rect. fil. prong	Pent S. C. grid prong	5.8
Pent. Plate	Rect. fil. prong	Pent plate prong	5.6
Osc. Grid	Rect. fil. prong	Osc. grid prong	0.5
Osc. Cathode	Rect. fil. prong	Osc. cathode prong	2.8
Osc. Plate	Rect. fil. prong	Osc. plate prong	8.2
Power Trans. Pri.	ACROSS	A. C. plug	6.0
Power Trans. Sec.	ACROSS	280 plates	5.8
Osc. pick up coil	Black lead on Osc. trimmer	Green lead on .00005 cond.	6.0
Speaker V.C. disconnected	V.C. ground lead	V. C. black lead	6.0
Speaker field	Field red lead	Field green lead	5.6

Supersensitive Switch in "Normal" Position.

Model AC-94, 25-94 (1931)

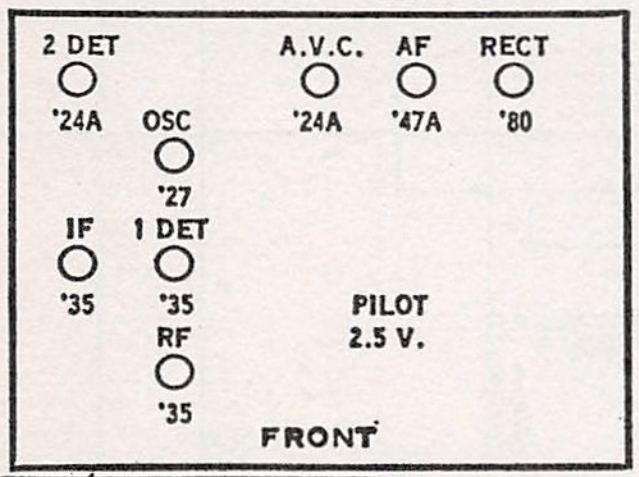
2 DET
'24A
OSC
'27
A.V.C.
'24A
AF
'47A
RECT
'80
IF
'35
1 DET
'35
RF
'35
PILOT
2.5 V.
FRONT

Top View

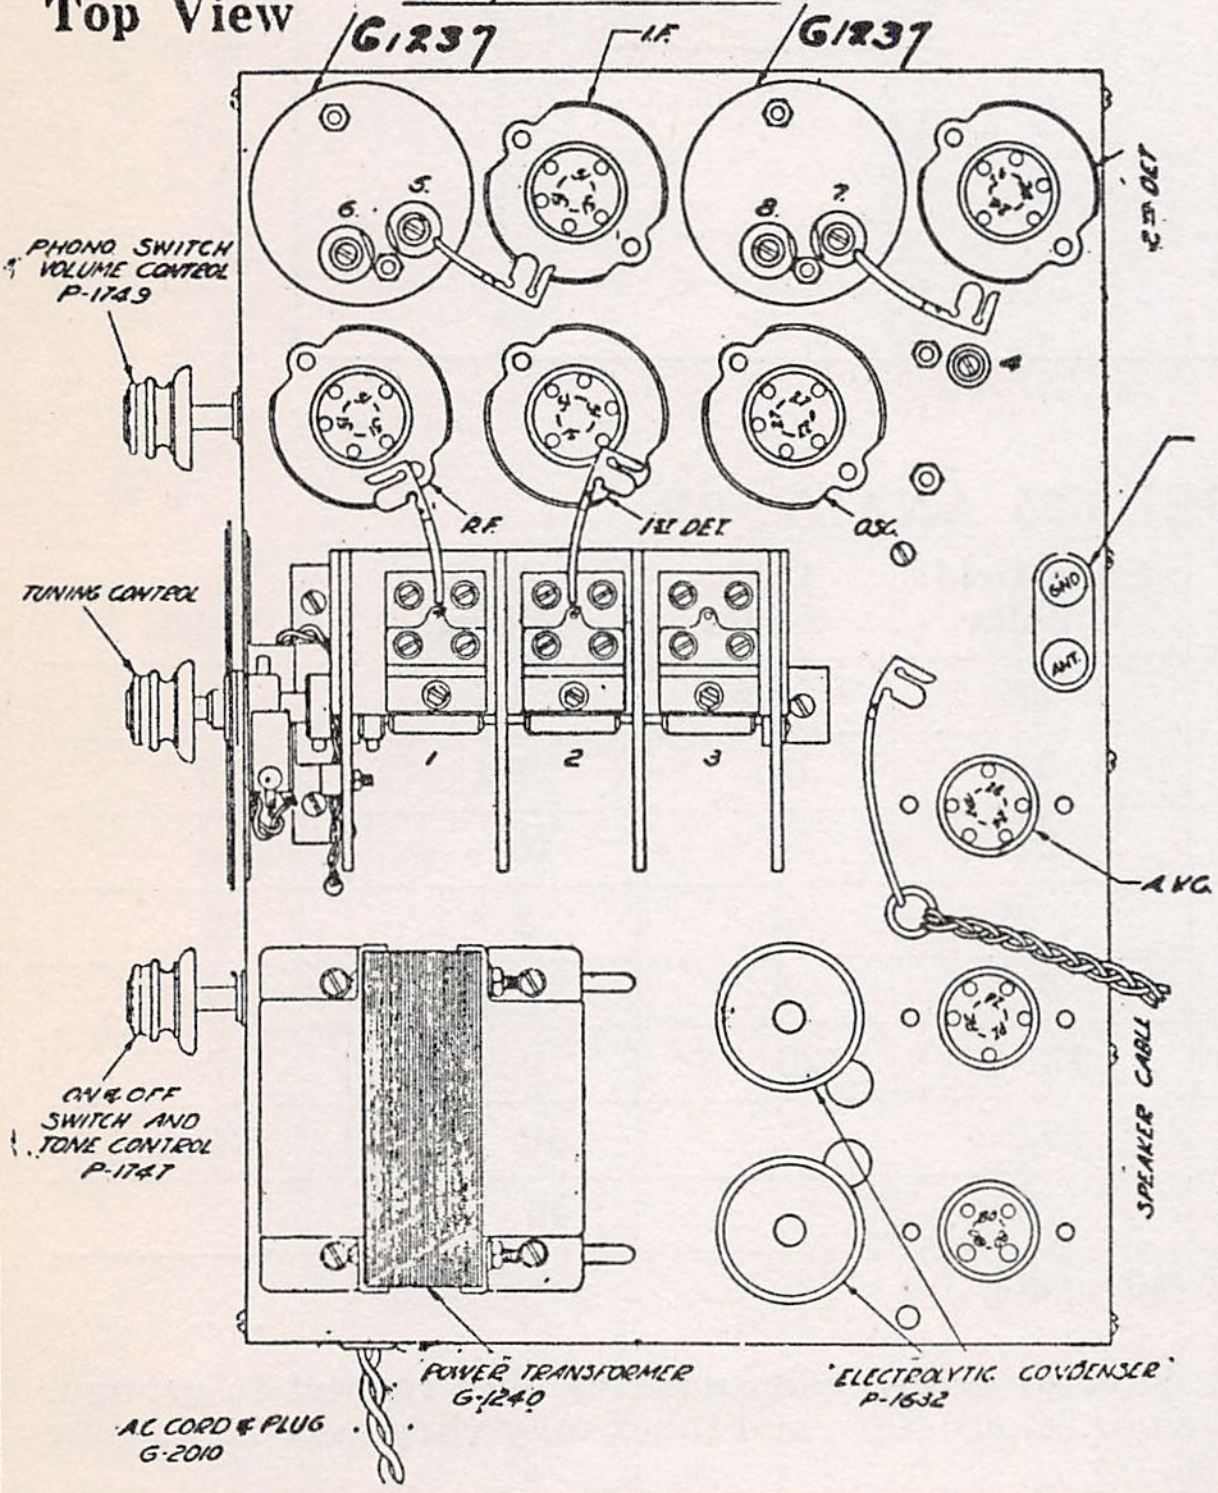
G1237
I.F.
G1237
6.
5.
8.
7.
2ND DET
PHONO SWITCH
VOLUME CONTROL
P-1749
R.F.
1ST DET.
OSC.
TUNING CONTROL
1
2
3
GND
ANT.
A.V.C.
SPEAKER CABLE
ON & OFF
SWITCH AND
TONE CONTROL
P-1747
POWER TRANSFORMER
G-1240
ELECTROLYTIC CONDENSER
P-1632
A.C. CORD & PLUG
G-2010

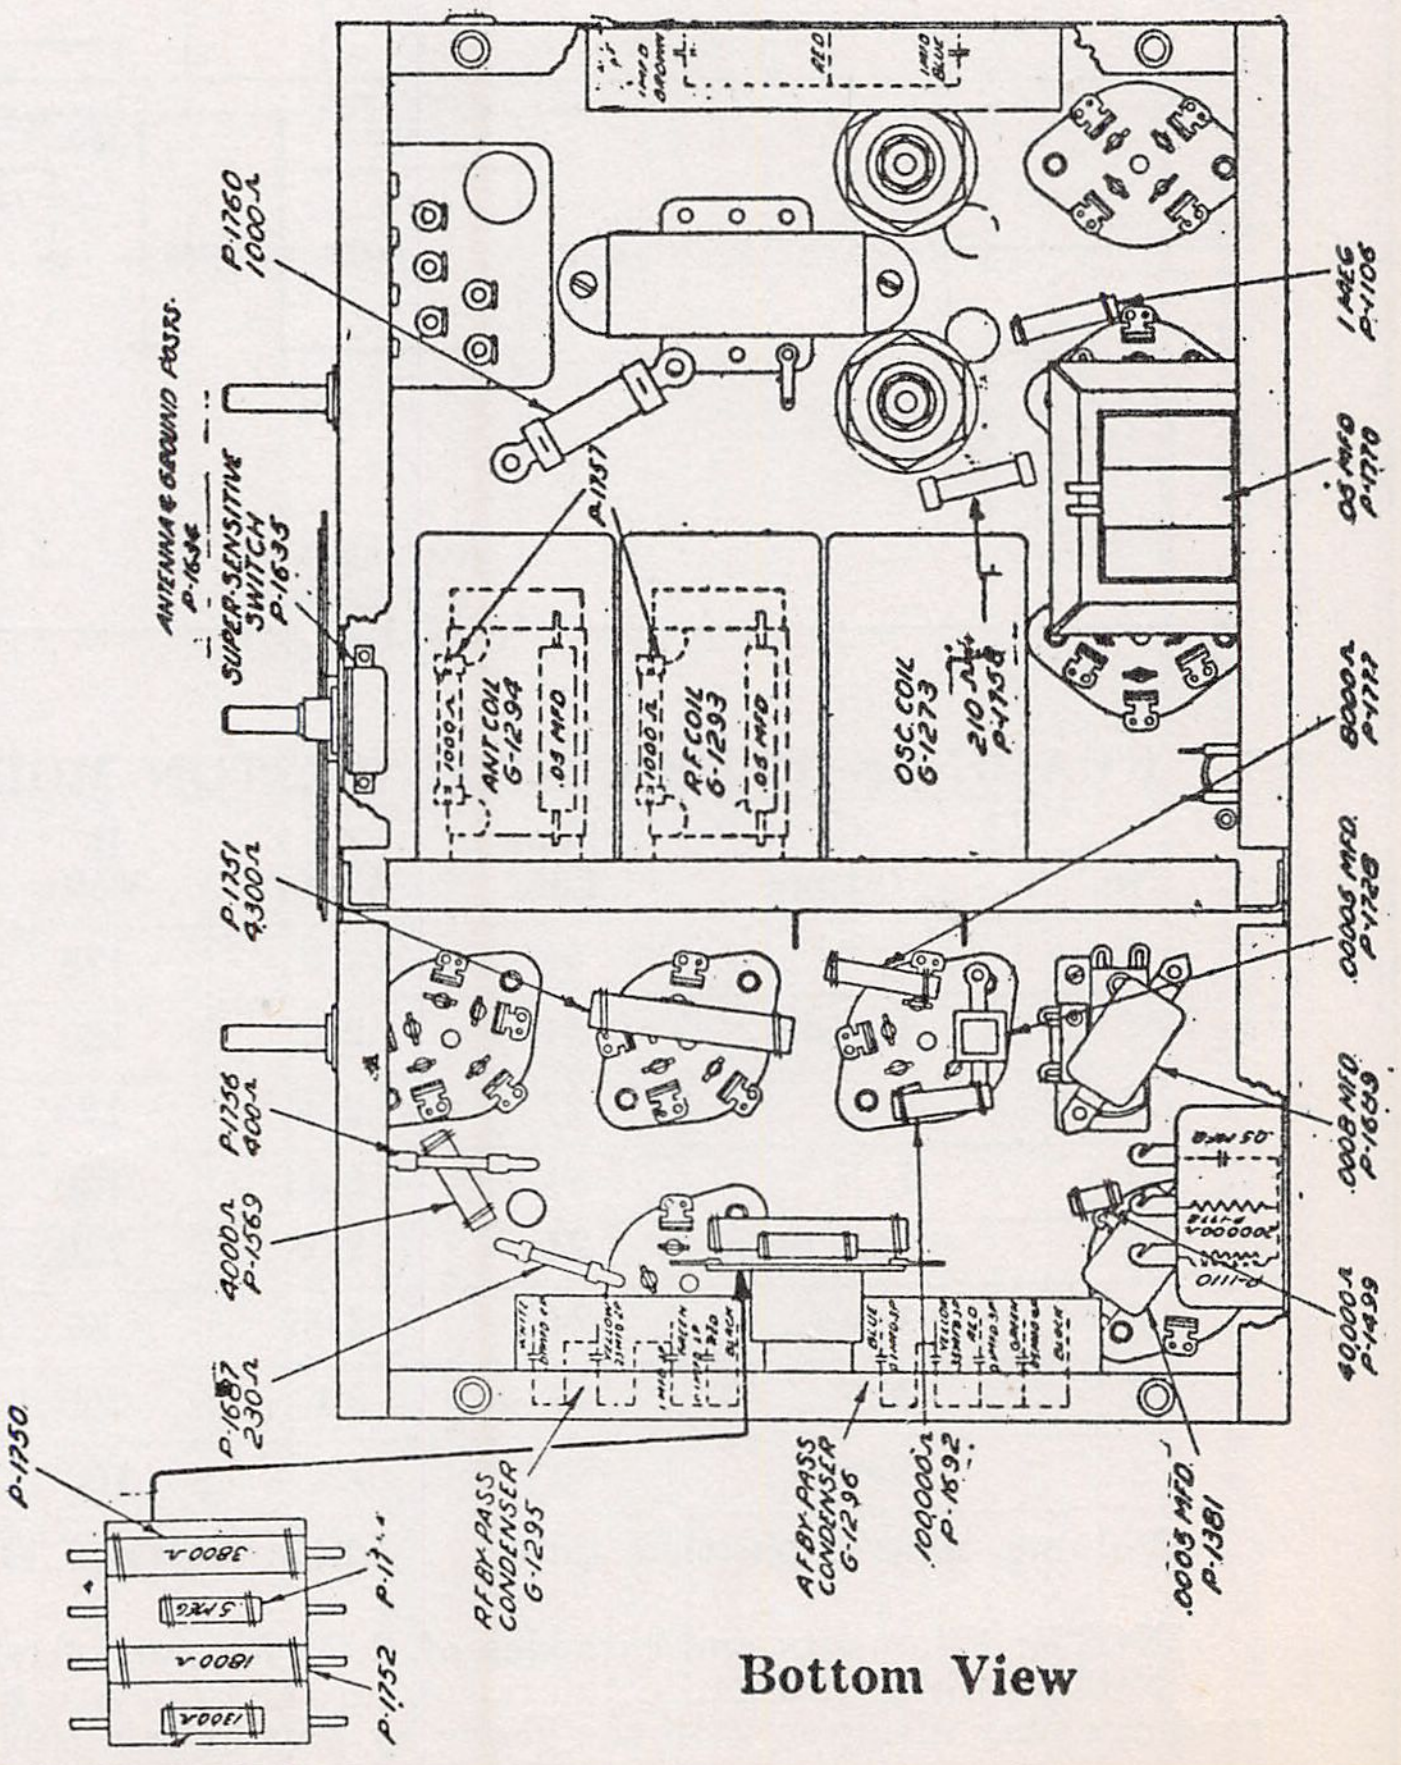
P-1760
1000Ω
ANTENNA & GROUND POSTS
P-1636
SUPER-SENSITIVE
SWITCH
P-1635
P-1757
1000Ω
ANT COIL
G-1294
.05 MFD
R.F. COIL
G-1293
OSC. COIL
G-1273
210Ω
P-1758
1 MEG
P-1106
.05 MFD
P-1770
8000Ω
P-1777
P-1751
4300Ω
.00005 MFD.
P-1728
.0008 MFD.
P-1659
P-1758
400Ω
4000Ω
P-1569
P-1687
230Ω
40,000Ω
P-1499
P-1750
3800Ω
.5 MEG
1800Ω
1300Ω
P-1752
R.F. BY-PASS
CONDENSER
G-1295
A.F. BY-PASS
CONDENSER
G-1296
100,000Ω
P-1692
.0005 MFD.
P-1381
RED
1 MFD
BLUE
1 MFD
BROWN

Bottom View

MODEL AC 100 Series
Schematic - Voltage

TRANSFORMER CORP. OF AMERICA

CLARION SERIES 100 SUPERHETERODYNE

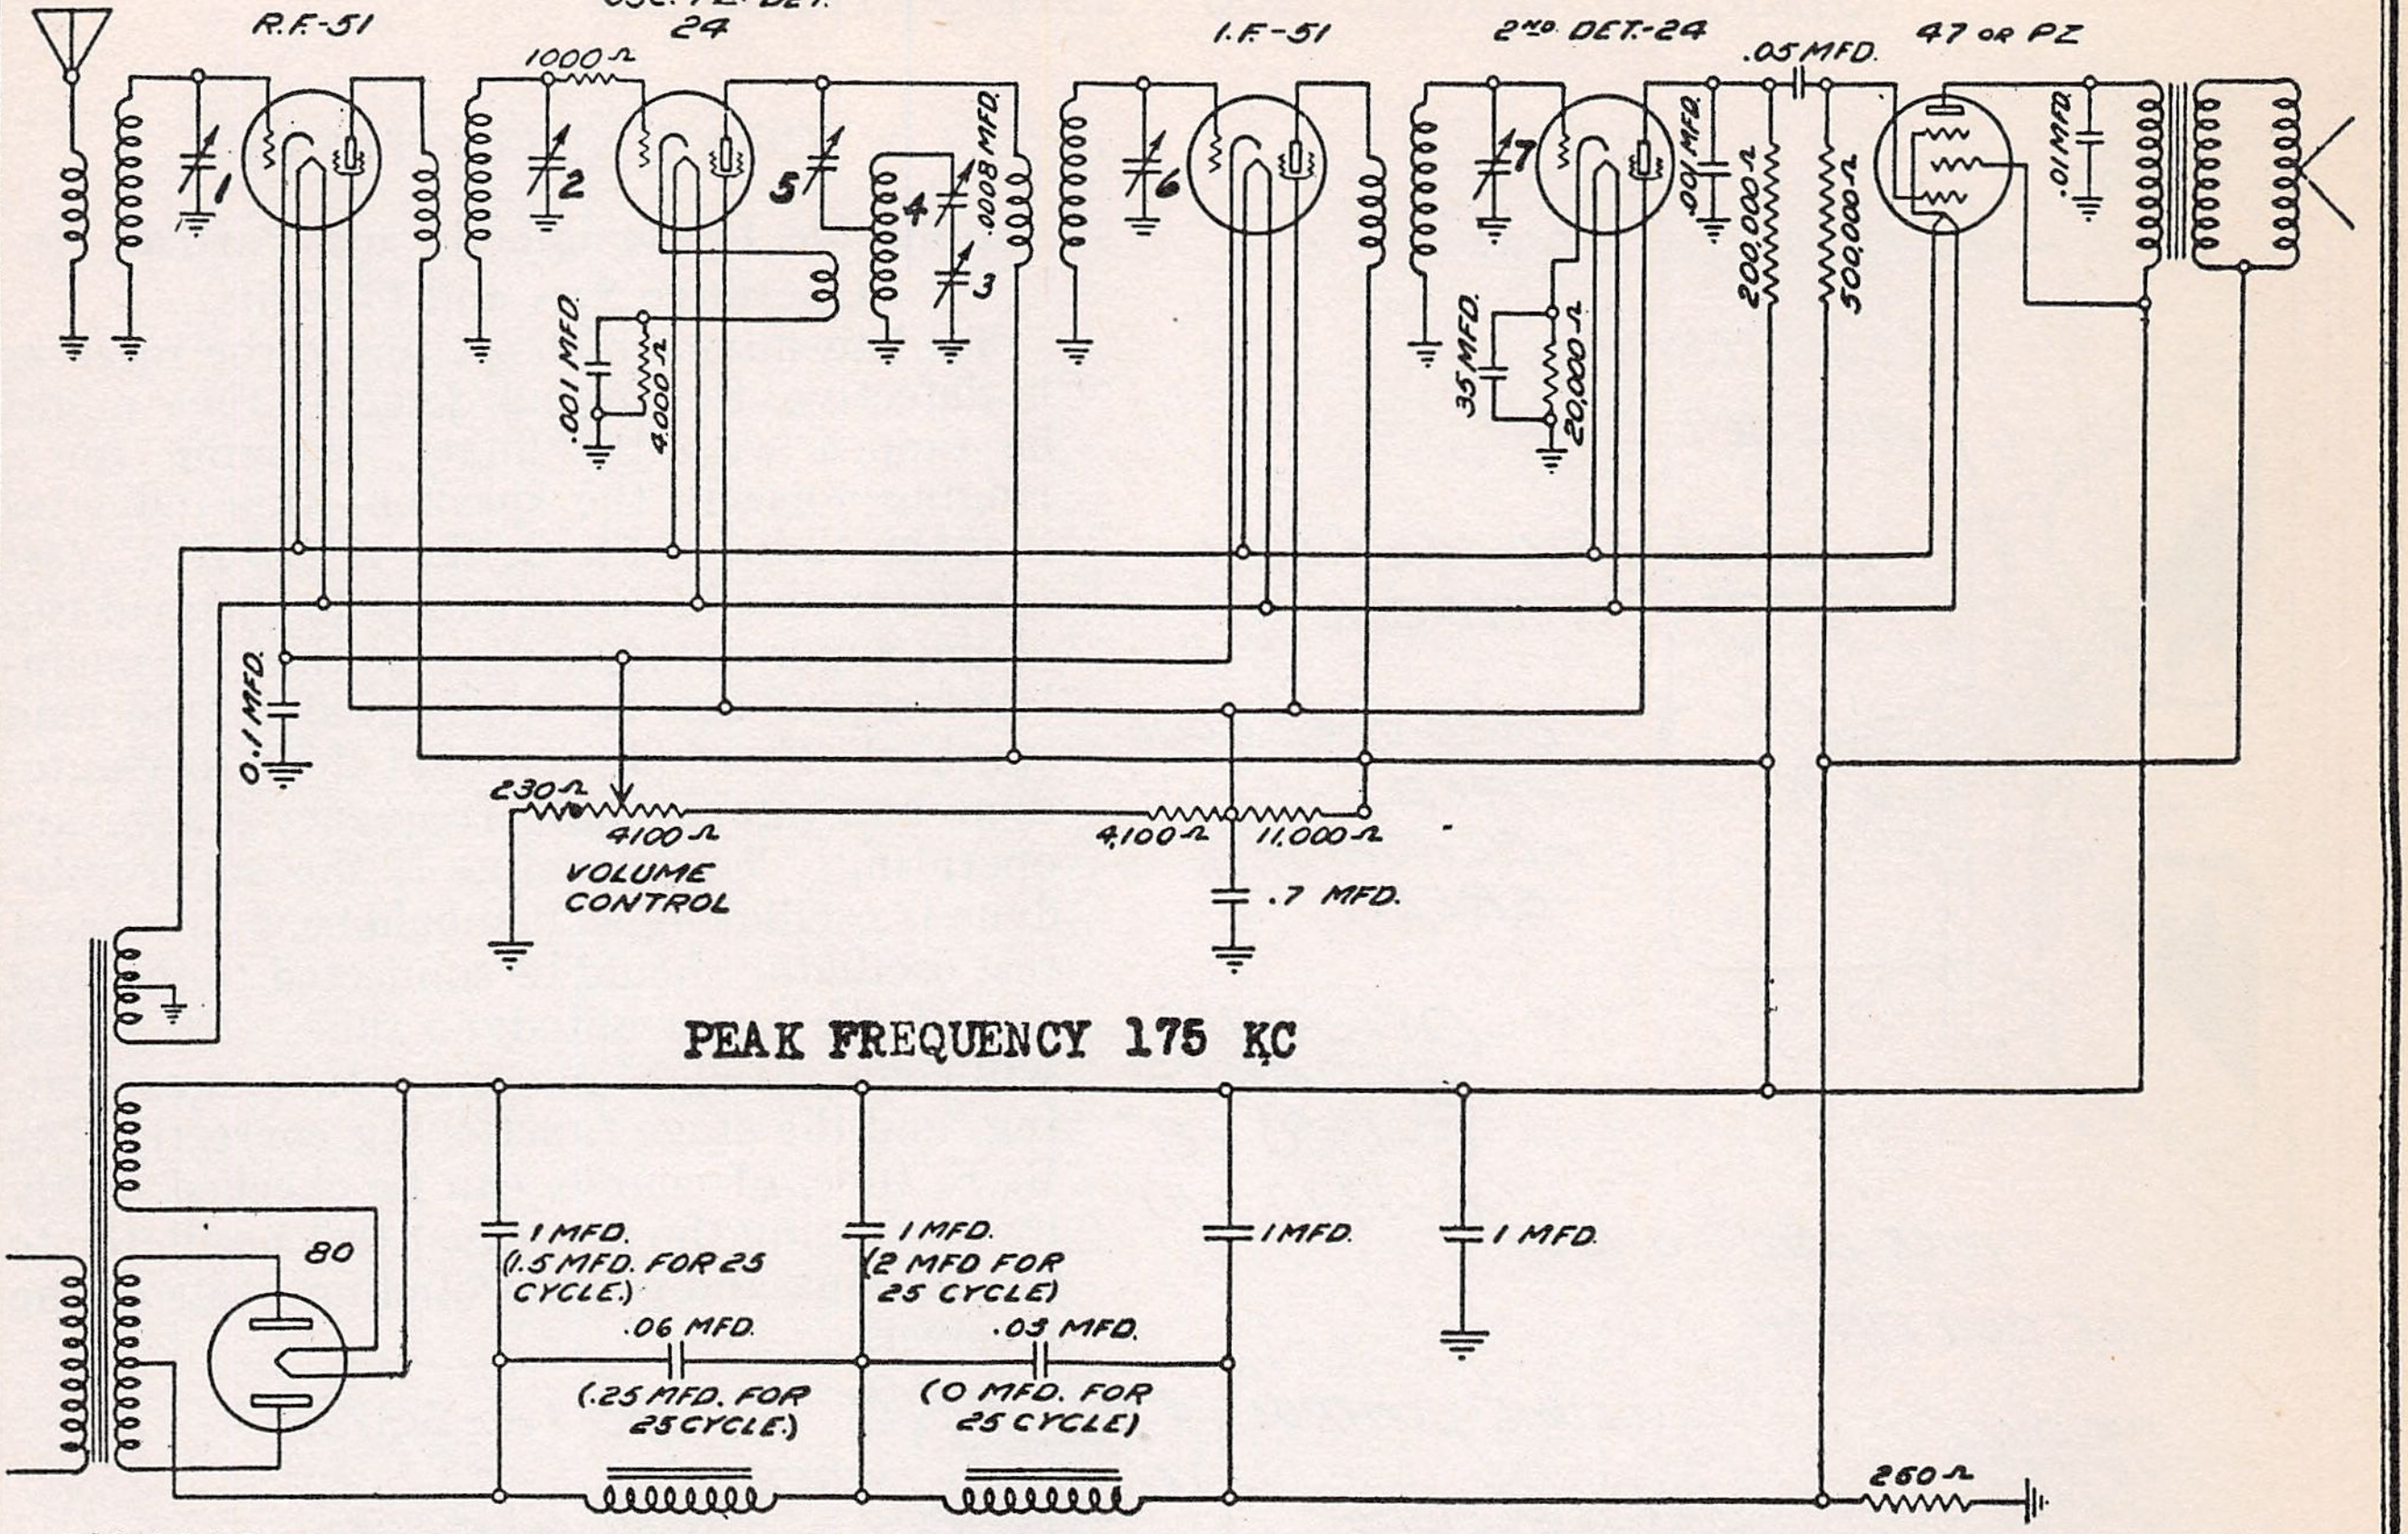
R.F.-51
OSC. 1ST DET. 24
1000 Ω
I.F.-51
2ND DET.-24
.05 MFD.
47 OR PZ
1
2
5
4
3
.0008 MFD.
6
7
.001 MFD.
200,000 Ω
500,000 Ω
.01 MFD.
.001 MFD.
4000 Ω
.35 MFD.
20,000 Ω
0.1 MFD.
230 Ω
4100 Ω
VOLUME CONTROL
4100 Ω
11,000 Ω
.7 MFD.
PEAK FREQUENCY 175 KC
80
1 MFD. (1.5 MFD. FOR 25 CYCLE.)
1 MFD. (2 MFD FOR 25 CYCLE)
1 MFD.
1 MFD.
.06 MFD. (.25 MFD. FOR 25 CYCLE.)
.03 MFD. (0 MFD. FOR 25 CYCLE)
260 Ω

Model AC-100, 25-100 (1931)

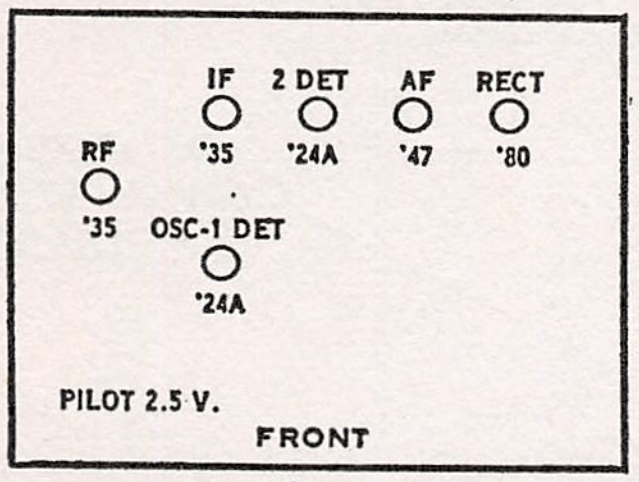
IF
'35
2 DET
'24A
AF
'47
RECT
'80
RF
'35
OSC-1 DET
'24A
PILOT 2.5 V.
FRONT

SCHEMATIC DIAGRAM
FOR
CLARION
MODEL-100

READING TAKEN WITH WESTON MODEL 565 ANALYZER

MODEL No. CUSTOMER BY

No.	Stage	Type Tube	"A" Volts	"B" Volts	Cont. Grid Volt	Cath. Volts	S. G. Volts	Ip Norm.
1	R. F.	51	2.15	235	2.4	2.5	80.	5.0
2	Autodyne	24	2.15	225	5.0	6.0	75.	3.0
3	I. F.	51	2.15	230	2.4	2.5	75.	4.0
4	2nd Det.	24	2.15	104	10.	15.	65.	0.6
5	Audio	47	2.25	250	16	0	260	30.
6	Rect.	80	4.4					57.5

Line Voltage 115. Order of Test: 1 Rect., 2 Power, 3 Det., Etc.
Volume Control Position, Full On.

NOTE: Since resistance tolerances in the sets are plus or minus 10% and tubes may vary over 20%, your readings may disagree with the above by plus or minus 30%.

TRANSFORMER CORP. OF AMERICA

CLARION SERIES 100 SUPERHETERODYNE

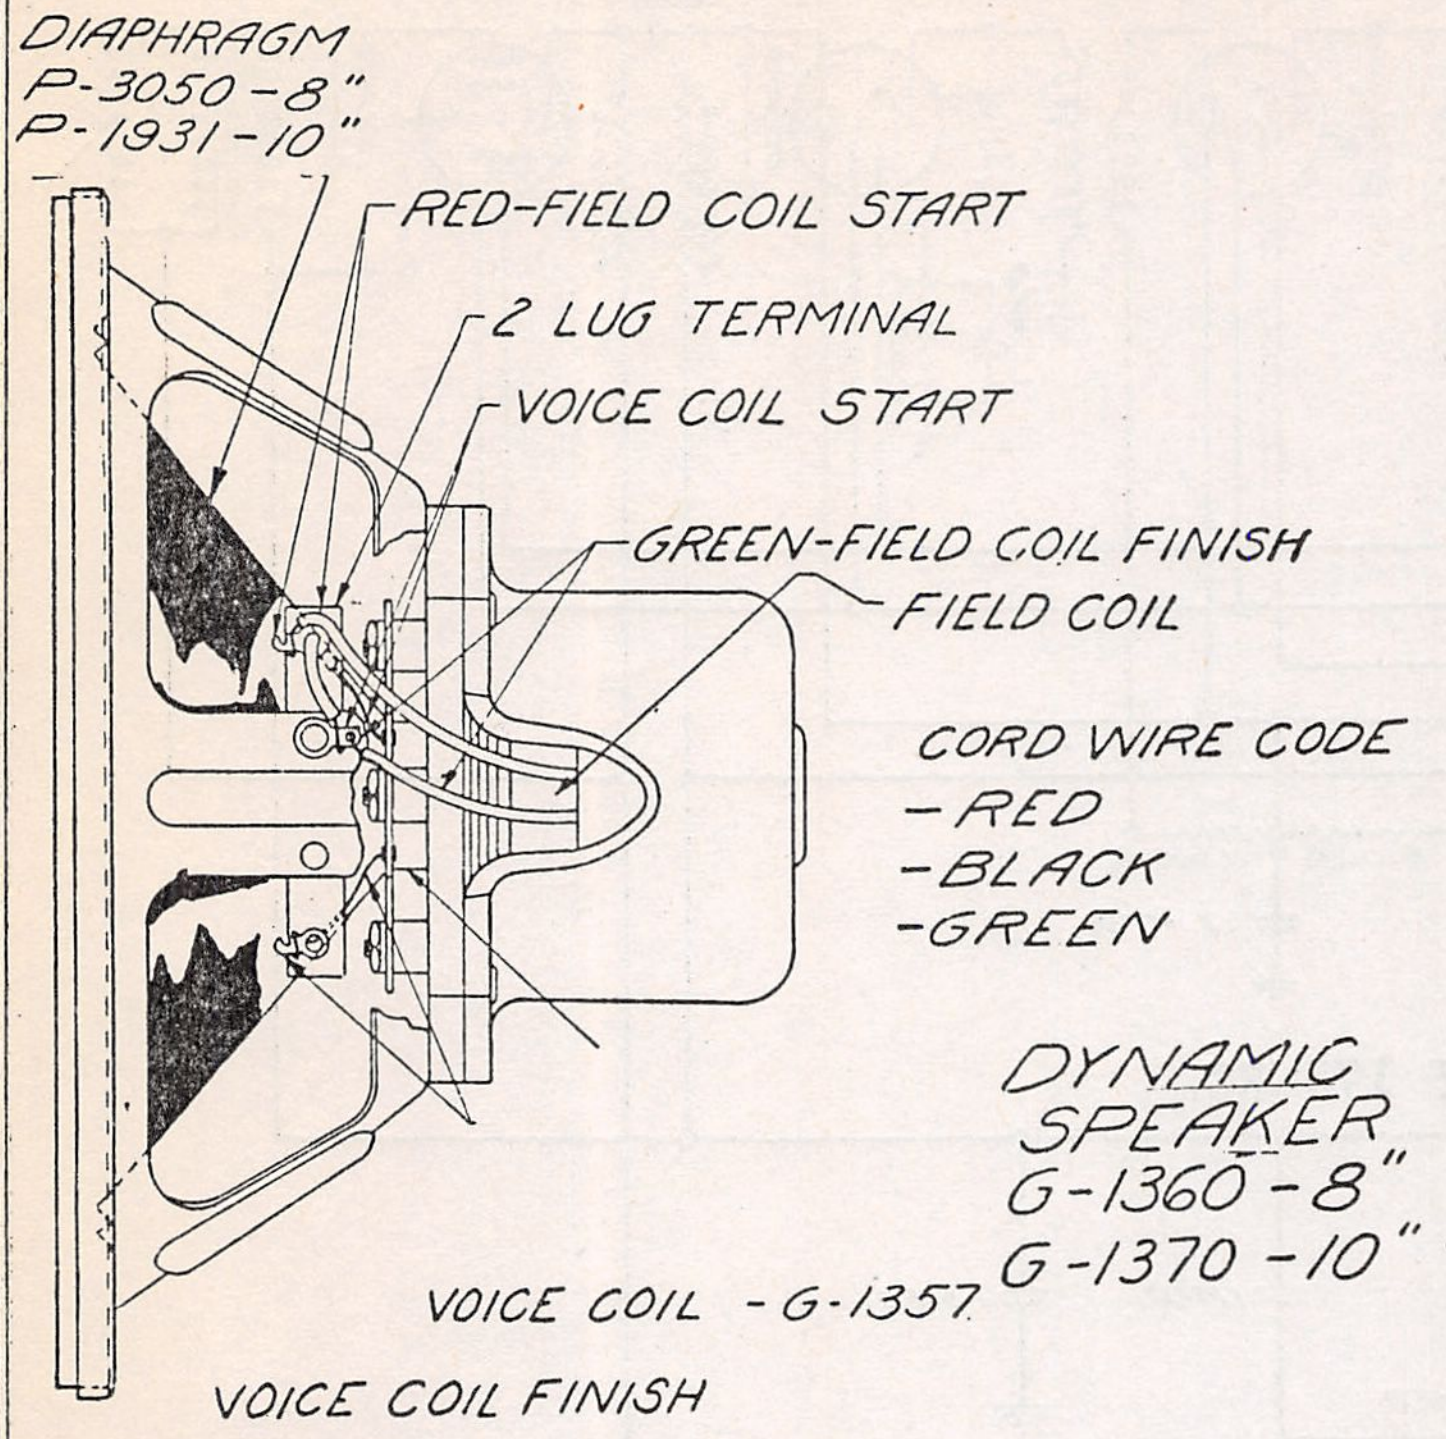
DIAPHRAGM
P-3050-8"
P-1931-10"
RED-FIELD COIL START
2 LUG TERMINAL
VOICE COIL START
GREEN-FIELD COIL FINISH
FIELD COIL
CORD WIRE CODE
-RED
-BLACK
-GREEN
VOICE COIL - G-1357
VOICE COIL FINISH

DYNAMIC SPEAKER
G-1360-8"
G-1370-10"

CONTINUITY TESTS

Applicable to Completely and Partially In-Operative Sets and Circuits)

To determine which section of the receiver is defective, the second detector tube might be tapped with the finger, listening for a ringing noise in the speaker—this indicates that the audio end is O. K. *A 175 K. C. test oscillator* should be connected to the grid cap of the Super-autodyne tube so that the modulated signal can be reproduced in the loud speaker. This indicates that the Super-autodyne and intermediate frequency stages are operating. To determine if the super-autodyne is oscillating as it should be, a broadcast test oscillator should be connected to the grid cap of the super-autodyne tube. No signal will come through unless the tube is oscillating, and the stage functioning correctly. The R. F. tube, of course, can be checked, lastly by connecting the broadcast test oscillator to the antenna and ground binding posts of the receiver.

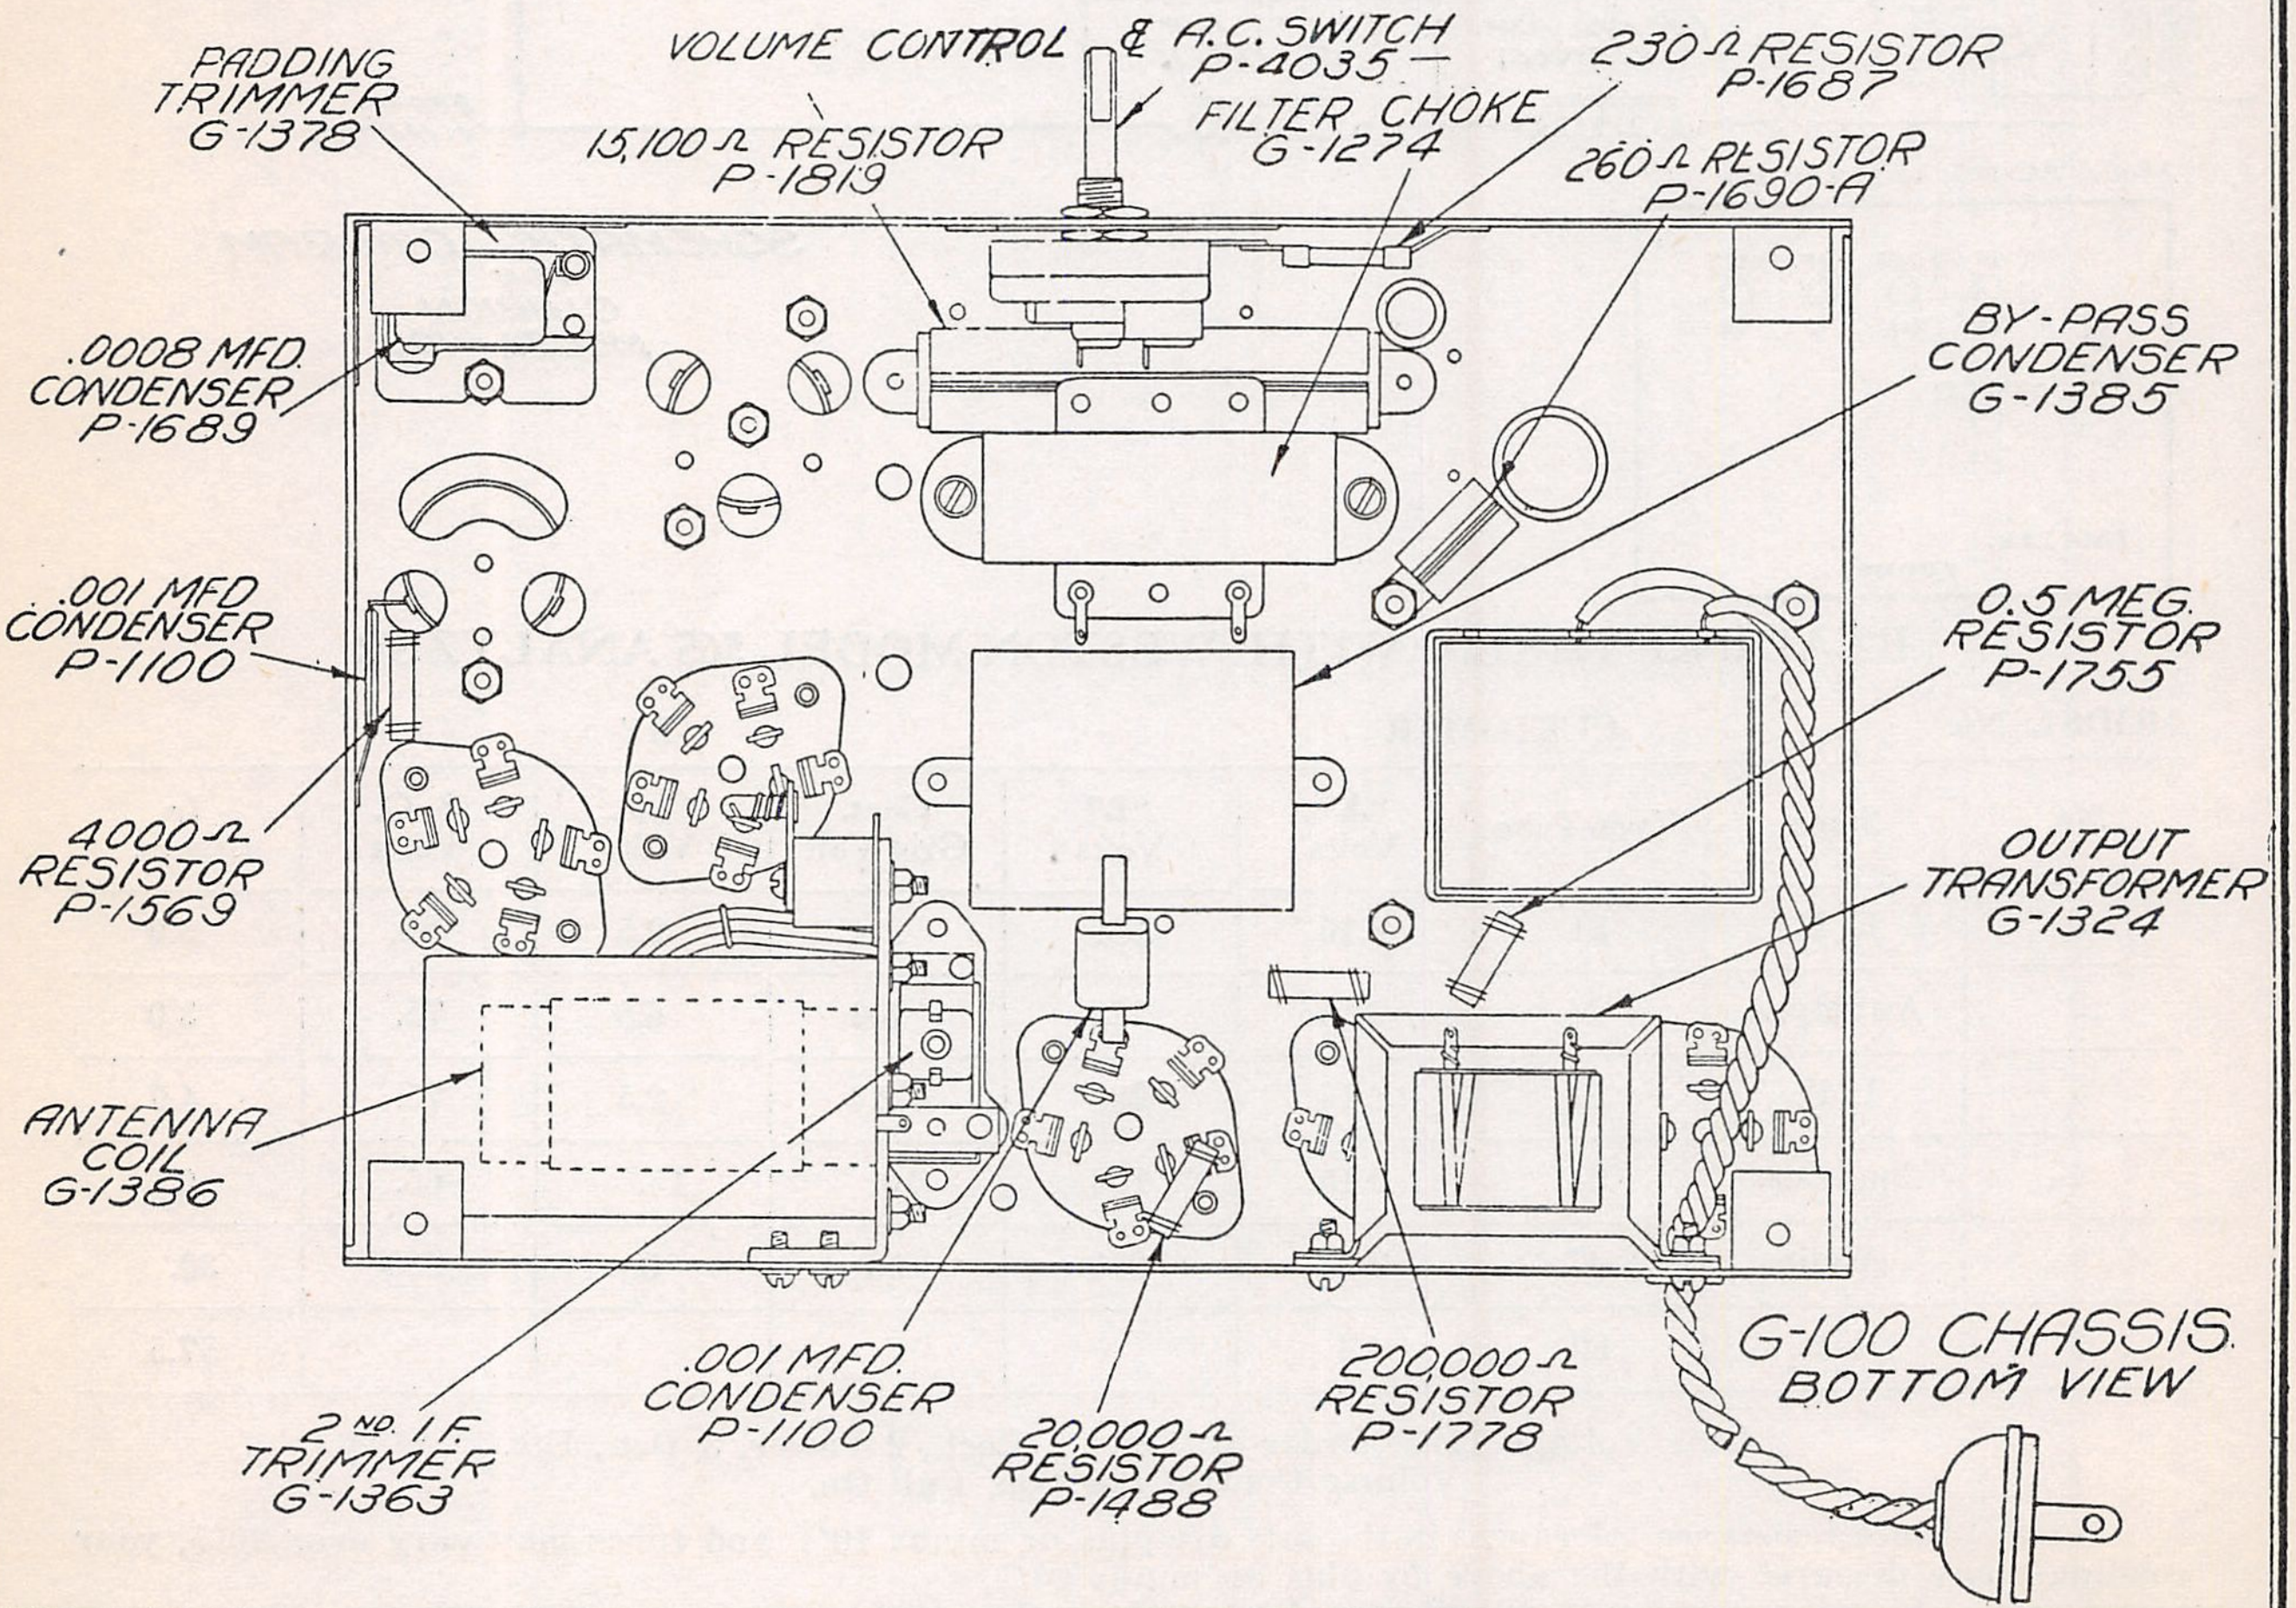
PADDING TRIMMER G-1378
VOLUME CONTROL & A.C. SWITCH P-4035
15,100 Ω RESISTOR P-1819
FILTER CHOKE G-1274
230 Ω RESISTOR P-1687
260 Ω RESISTOR P-1690-A
.0008 MFD. CONDENSER P-1689
BY-PASS CONDENSER G-1385
.001 MFD CONDENSER P-1100
0.5 MEG. RESISTOR P-1755
4000 Ω RESISTOR P-1569
OUTPUT TRANSFORMER G-1324
ANTENNA COIL G-1386
2 NO. 1 F. TRIMMER G-1363
.001 MFD. CONDENSER P-1100
20,000 Ω RESISTOR P-1488
200,000 Ω RESISTOR P-1778

G-100 CHASSIS BOTTOM VIEW

CLARION SERIES 100 SUPERHETERODYNE

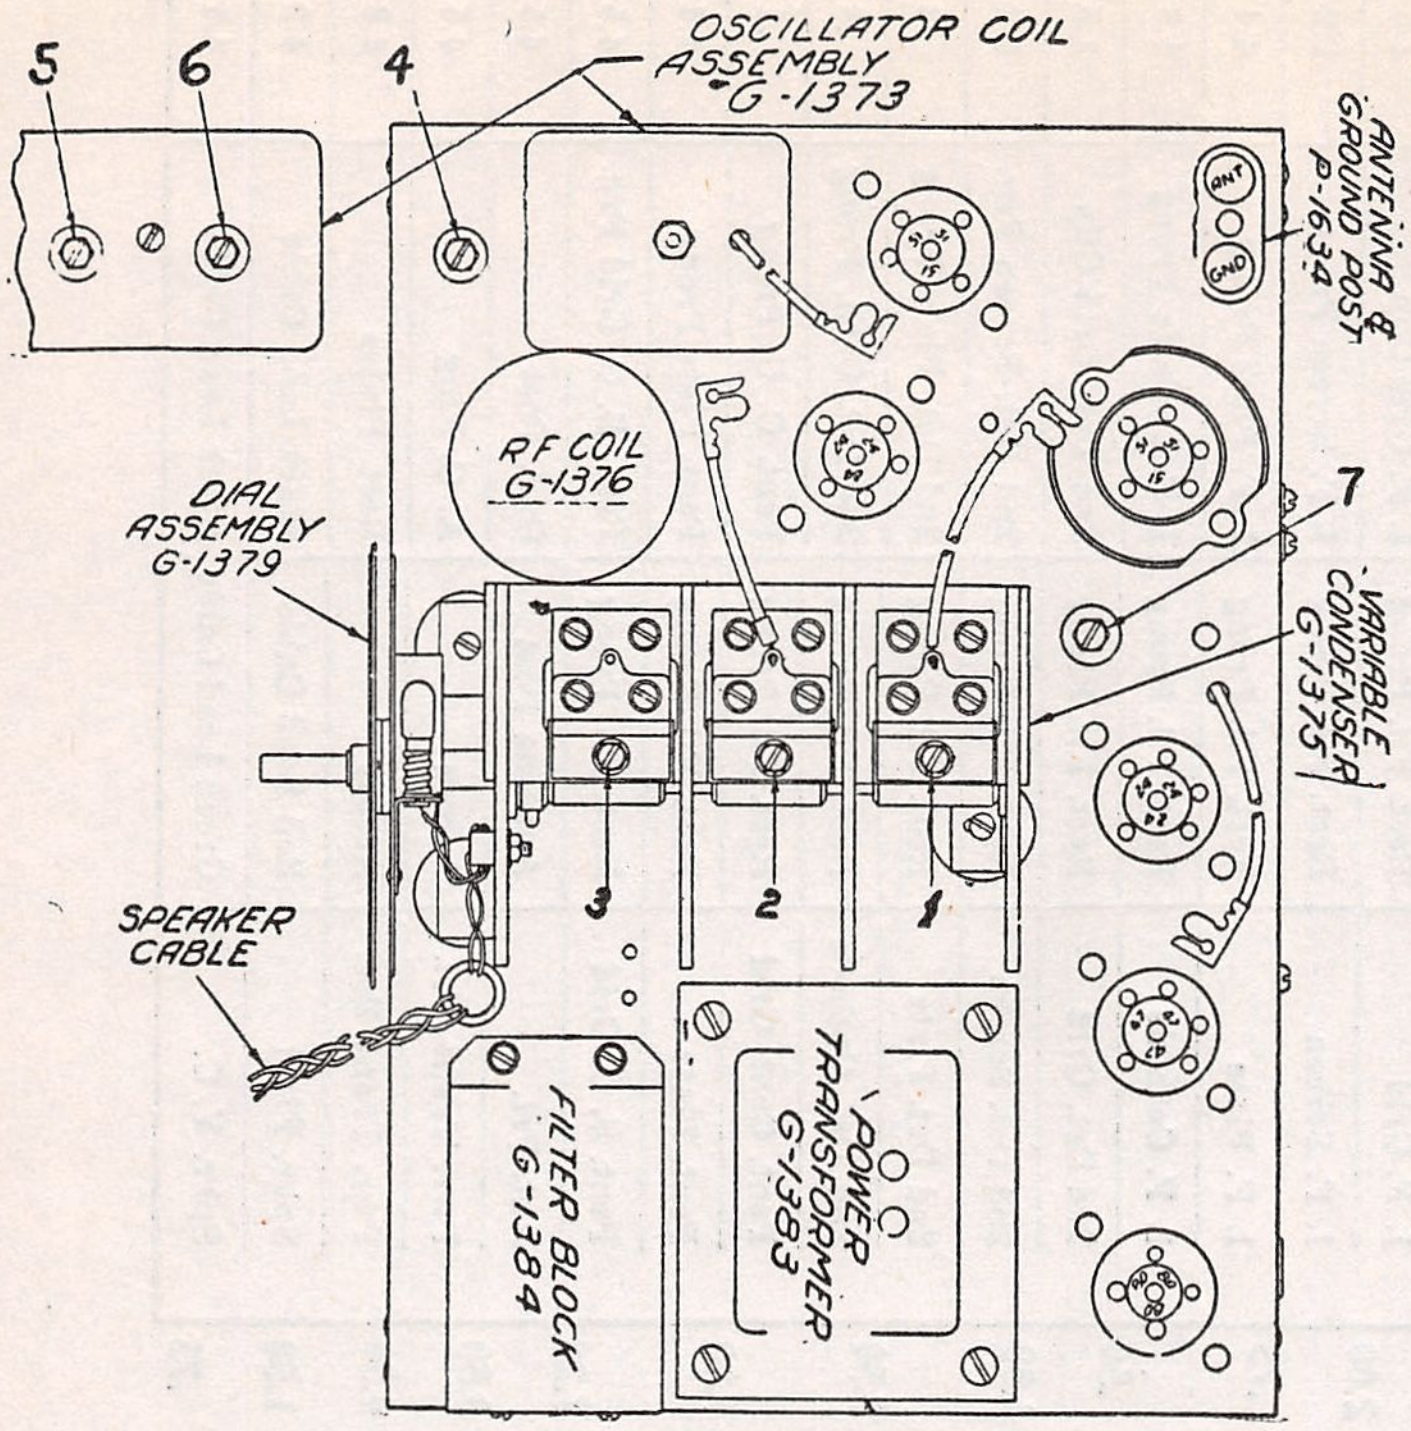

READJUSTING TRIMMERS

Number 1 is the antenna trimmer.

Number 2 is the gang condenser trimmer tuning the grid of the Super-autodyne.

Number 3 is the gang condenser trimmer tuning the plate (or oscillator of the super-autodyne).

Number 4 is the oscillator padding trimmer.

Number 5 is the Super-autodyne plate trimmer.

Number 6 is the I. F grid trimmer.

Number 7 is the second detector grid trimmer.

To readjust the trimmer, it will be necessary that a good design of 175 k. c. oscillator be employed, and that a dependable broadcast test oscillator be on hand so that stages handling intermediate frequency, and those handling radio frequency can be thoroughly checked. It is advisable to use a bakelite screwdriver when making any of these adjustments.

First, connect the 175 k. c. oscillator output leads from the control grid cap of the super-autodyne tube to ground. Do not remove any of the tubes from the sockets, and it is not necessary to disconnect the grid cap clip from the tube. Reset trimmers numbers 5, 6 and 7 for maximum output. While this test oscillator is working into the intermediate frequency stages, no adjustment of the tuning condenser on the receiver will have any effect, inasmuch as the intermediate frequency stage is fixed tuned.

If your test oscillator is properly designed, it will supply exactly 175 k. c., and when trimmers number 5, 6 and 7 are set for maximum output, they will be correctly adjusted and should be sealed.

Next, disconnect the 175 k. c. test oscillator and connect to the antenna binding post of the receiver, the output lead from your broadcast test oscillator, or tune in a broadcast signal around 1400 k. c., then reset trimmers numbers 2 and 1 respectively for maximum output. This adjustment will track the super-autodyne grid circuit of the R. F. stage.

To check the calibration of the receiver, whether it be high or low, trimmer number 3 should be reset until a station of known nigh frequency is brought in on the correct dial marking with peak volume. If your broadcast test oscillator is accurately calibrated, it might be used in place of the broadcasting station signal. In this adjustment, a broadcast station or test oscillator signal at about 1400 k. c. should be chosen. The setting of the trimmer at 1400 k. c. is more critical than it would be at 600 k. c.; calibration, therefore more accurate.

The next adjustment is important and not easily explained in writing, so pay close attention to the following instruction. We will now balance the oscillator to the r. f. and first detector stages.

Tune the external broadcast test oscillator and the receiver both to 600 k.c., then slowly increase or decrease the capacity of No. 4 (oscillator padding trimmer), at the same time and continuously tuning back and forth across the signal with the receiver tuning condenser gang. The output meter needle will now be swinging up and down in step with the variation in tuning. Watch the peak of this swinging closely and readjust No. 4 trimmer until the swinging needle reaches its highest peak.

Retune the receiver and broadcast test oscillator to 1400 k.c. and re-check trimmer No. 3 to make sure that the adjustment of No. 4 has not thrown the receiver out of calibration. If it has, then readjust No. 3 until the calibration is correct, (as previously explained), and check on trimmers No. 2 and No. 1, to make sure that the adjustment of No. 4 has not reduced the sensitivity.

MODEL AC 100 Series
Parts List
Continuity Test

TRANSFORMER CORP. OF AMERICA

P-1038	Dial light	$ 0.35
P-1049	Grid cap clip	.05
P-1100	Autodyne Cath. cond. .008	.25
P-1459	Tube shield base	.10
P-1472	Tube shield	.10
P-1569	Autodyne Cath. resistor 4000 ohms	.55
P-1593	Type 24 socket	.20
P-1595	Type 80 socket	.20
P-1634	Ant. ground binding post	.25
P-1682	Type 51 socket	.20
P-1683	Type 47 socket	.20
P-1689	Autodyne trimmer cond. .008	.30
P-1690A	260 ohm wire wound resistor	.25
P-1755	Pentode cont. grid resistor, 500,000 ohms	.35
P-1778	2nd det. plate resistor, 200,000 ohms	.30
P-1819	Voltage dividing resistor	.75
P-3050	Speaker diaphragm	.55
P-4033	Escutcheon plate	.55
P-4035	Vol. cont. and on-off switch	2.00
P-4037	Large knobs	.30
P-4045	I. F. coil (unshielded)	.60
P-4047	Small knobs	.25
P-4088	2nd det. cathode Resistor 20,000 ohms	25
G-1274	Filter choke	1.75
G-1324	Output transformer	1.50
G-1357	Voice coil and spider assembly	.75
G-1360	Speaker complete	12.50
G-1363	Trimmer condenser	.45
G-1372	Antenna and R. F. coil shield	.25
G-1373	Autodyne coil	2.00
G-1376	R. F. coil, less shield	.75
G-1378	Autodyne trimmer cond. (insulated)	.50
G-1379	Dial and scale assembly	1.50
G-1383	Power transformer 110 v. 60 cycle	3.50
G-1383A	Power transformer 110 v. 25 cycle	7.20
G-1383B	Power transformer 220 v. 60 cycle	7.20
G-1384	Filter pack, 60 cycle	3.50
G-1384A	Filter pack, 25 cycle	4.50
G-1385	By-pass condenser pack	1.50
G-1386	Antenna coil	.75

CONTINUITY TEST TABLES

Using 10 Volt Scale 1000 Ohm Per Volt Meter and 4½ Volt Battery

Circuit Tested	From	To	Readings
R. F. Grid	Rect. Fil. Prong	R. F. Grid Clip	1.5
R. F. Screen	Rect. Fil. Prong	R. F. Screen Prong	2.2
R. F. Plate	Rect. Fil. Prong	R. F. Plate Prong	4.4
R. F. Cathode	Rect. Fil. Prong	R. F. Cathode Prong	1.5
Autodyne Grid	Rect. Fil. Prong	Autodyne Grid Clip	1.5
Autodyne Screen	Rect. Fil. Prong	Autodyne Screen Prg.	2.2
Autodyne Plate	Rect. Fil. Prong	Autodyne Plate Prg.	4.5
Autodyne Cathode	Rect. Fil. Prong	Autodyne Cath. Prg.	1.3
I. F. Grid	Rect. Fil. Prong	I. F. Grid Clip	1.5
I. F. Screen	Rect. Fil. Prong	I. F. Screen Prong	2.2
I. F. Plate	Rect. Fil. Prong	I. F. Plate Prong	4.4
I. F. Cathode	Rect. Fil. Prong	I. F. Cathode Prong	1.5
2nd Det. Grid	Rect. Fil. Prong	2nd Det. Grid Clip	1.5
2nd Det. Screen	Rect. Fil. Prong	2nd Det. Screen Prg.	2.2
2nd Det. Plate	Rect. Fil. Prong	2nd Det. Plate Prong	.2
2nd Det. Cathode	Rect. Fil. Prong	2nd Det. Cath. Prong	.8
Pent. Cont. Grid	Rect. Fil. Prong	Pent. C. G. Prong	.1
Pent. Plate	Rect. Fil. Prong	Pent. Plate Prong	4.4
Pent. S. C. Grid	Rect. Fil. Prong	Pent. S. C. Grid Prg.	4.5
Ant. Pri.	Antenna Post	Gnd. Post	4.5
Pwr. Trans. Pri.	Across	A. C. Plug	4.5
Pwr. Trans. Sec.	Across	Rect. Plates	4.3
Spkr. Field	Red Lead Cable	Black Lead Cable	4.2
Spkr. V. C.	Green Lead Cable	Black Lead Cable	4.5

TRANSFORMER CORP. OF AMERICA

MODELS 120-139
(See models 84,85)

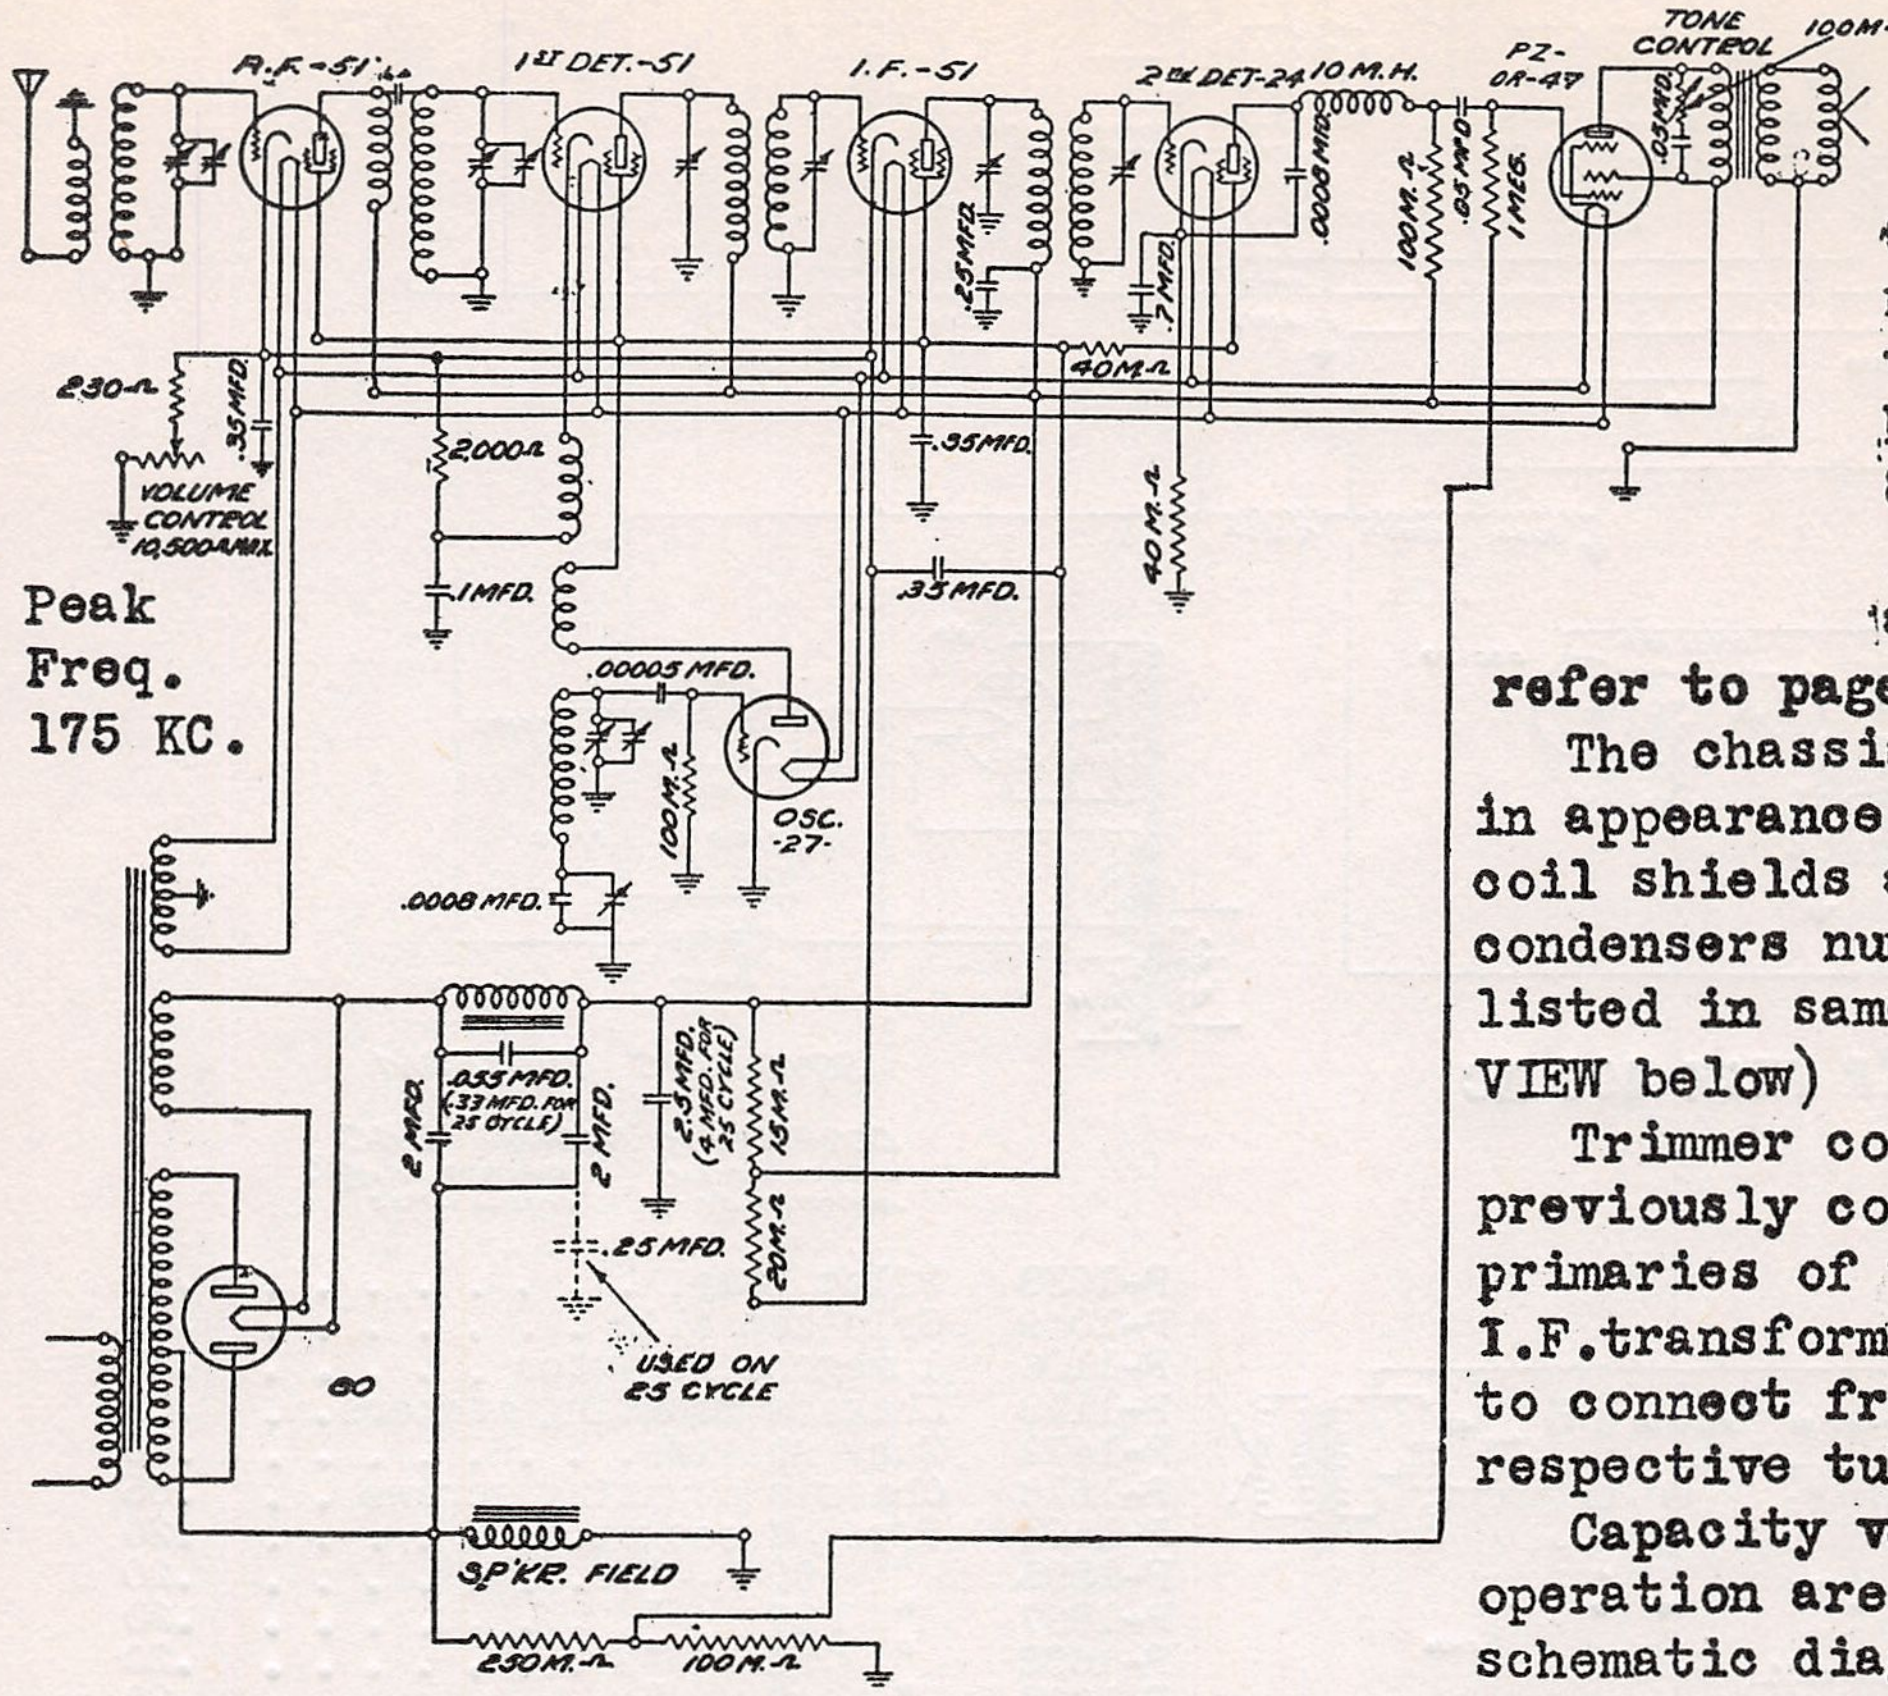
R.F.-51
1ST DET.-51
I.F.-51
2ND DET-24
10 M.H.
PZ-OR-47
TONE CONTROL
100M-
230-Ω
.35 MFD.
VOLUME CONTROL 10,500 AMAX.
2000Ω
1 MFD.
.35 MFD.
40 M.Ω
.25 MFD.
.7 MFD.
.0008 MFD.
100 M.Ω
.05 MFD.
1 MEG.
.05 MFD.
.00005 MFD.
100 M.Ω
OSC. '27
.0008 MFD.
.035 MFD. (.33 MFD. FOR 25 CYCLE)
2 MFD.
2 MFD.
2.5 MFD. (4 MFD. FOR 25 CYCLE)
15 M.Ω
20 M.Ω
.25 MFD.
USED ON 25 CYCLE
80
SP'KR. FIELD
230 M.Ω
100 M.Ω

Peak
Freq.
175 KC.

The SERIES 120-139 CHASSIS is a continuance of the previous 7 tube Superhet. chassis, Models 84 & 85.

For service data and voltage table **refer to pages on models 84,85**

The chassis remains the same in appearance except that I.F. coil shields are square. Trimmer condensers numbered 1 to 8 are listed in same order. (See TOP VIEW below)

Trimmer condensers which were previously connected across the primaries of the first and second I.F. transformers have been changed to connect from the plates of the respective tubes to ground.

Capacity values for 25 cycle operation are also shown on the schematic diagram.

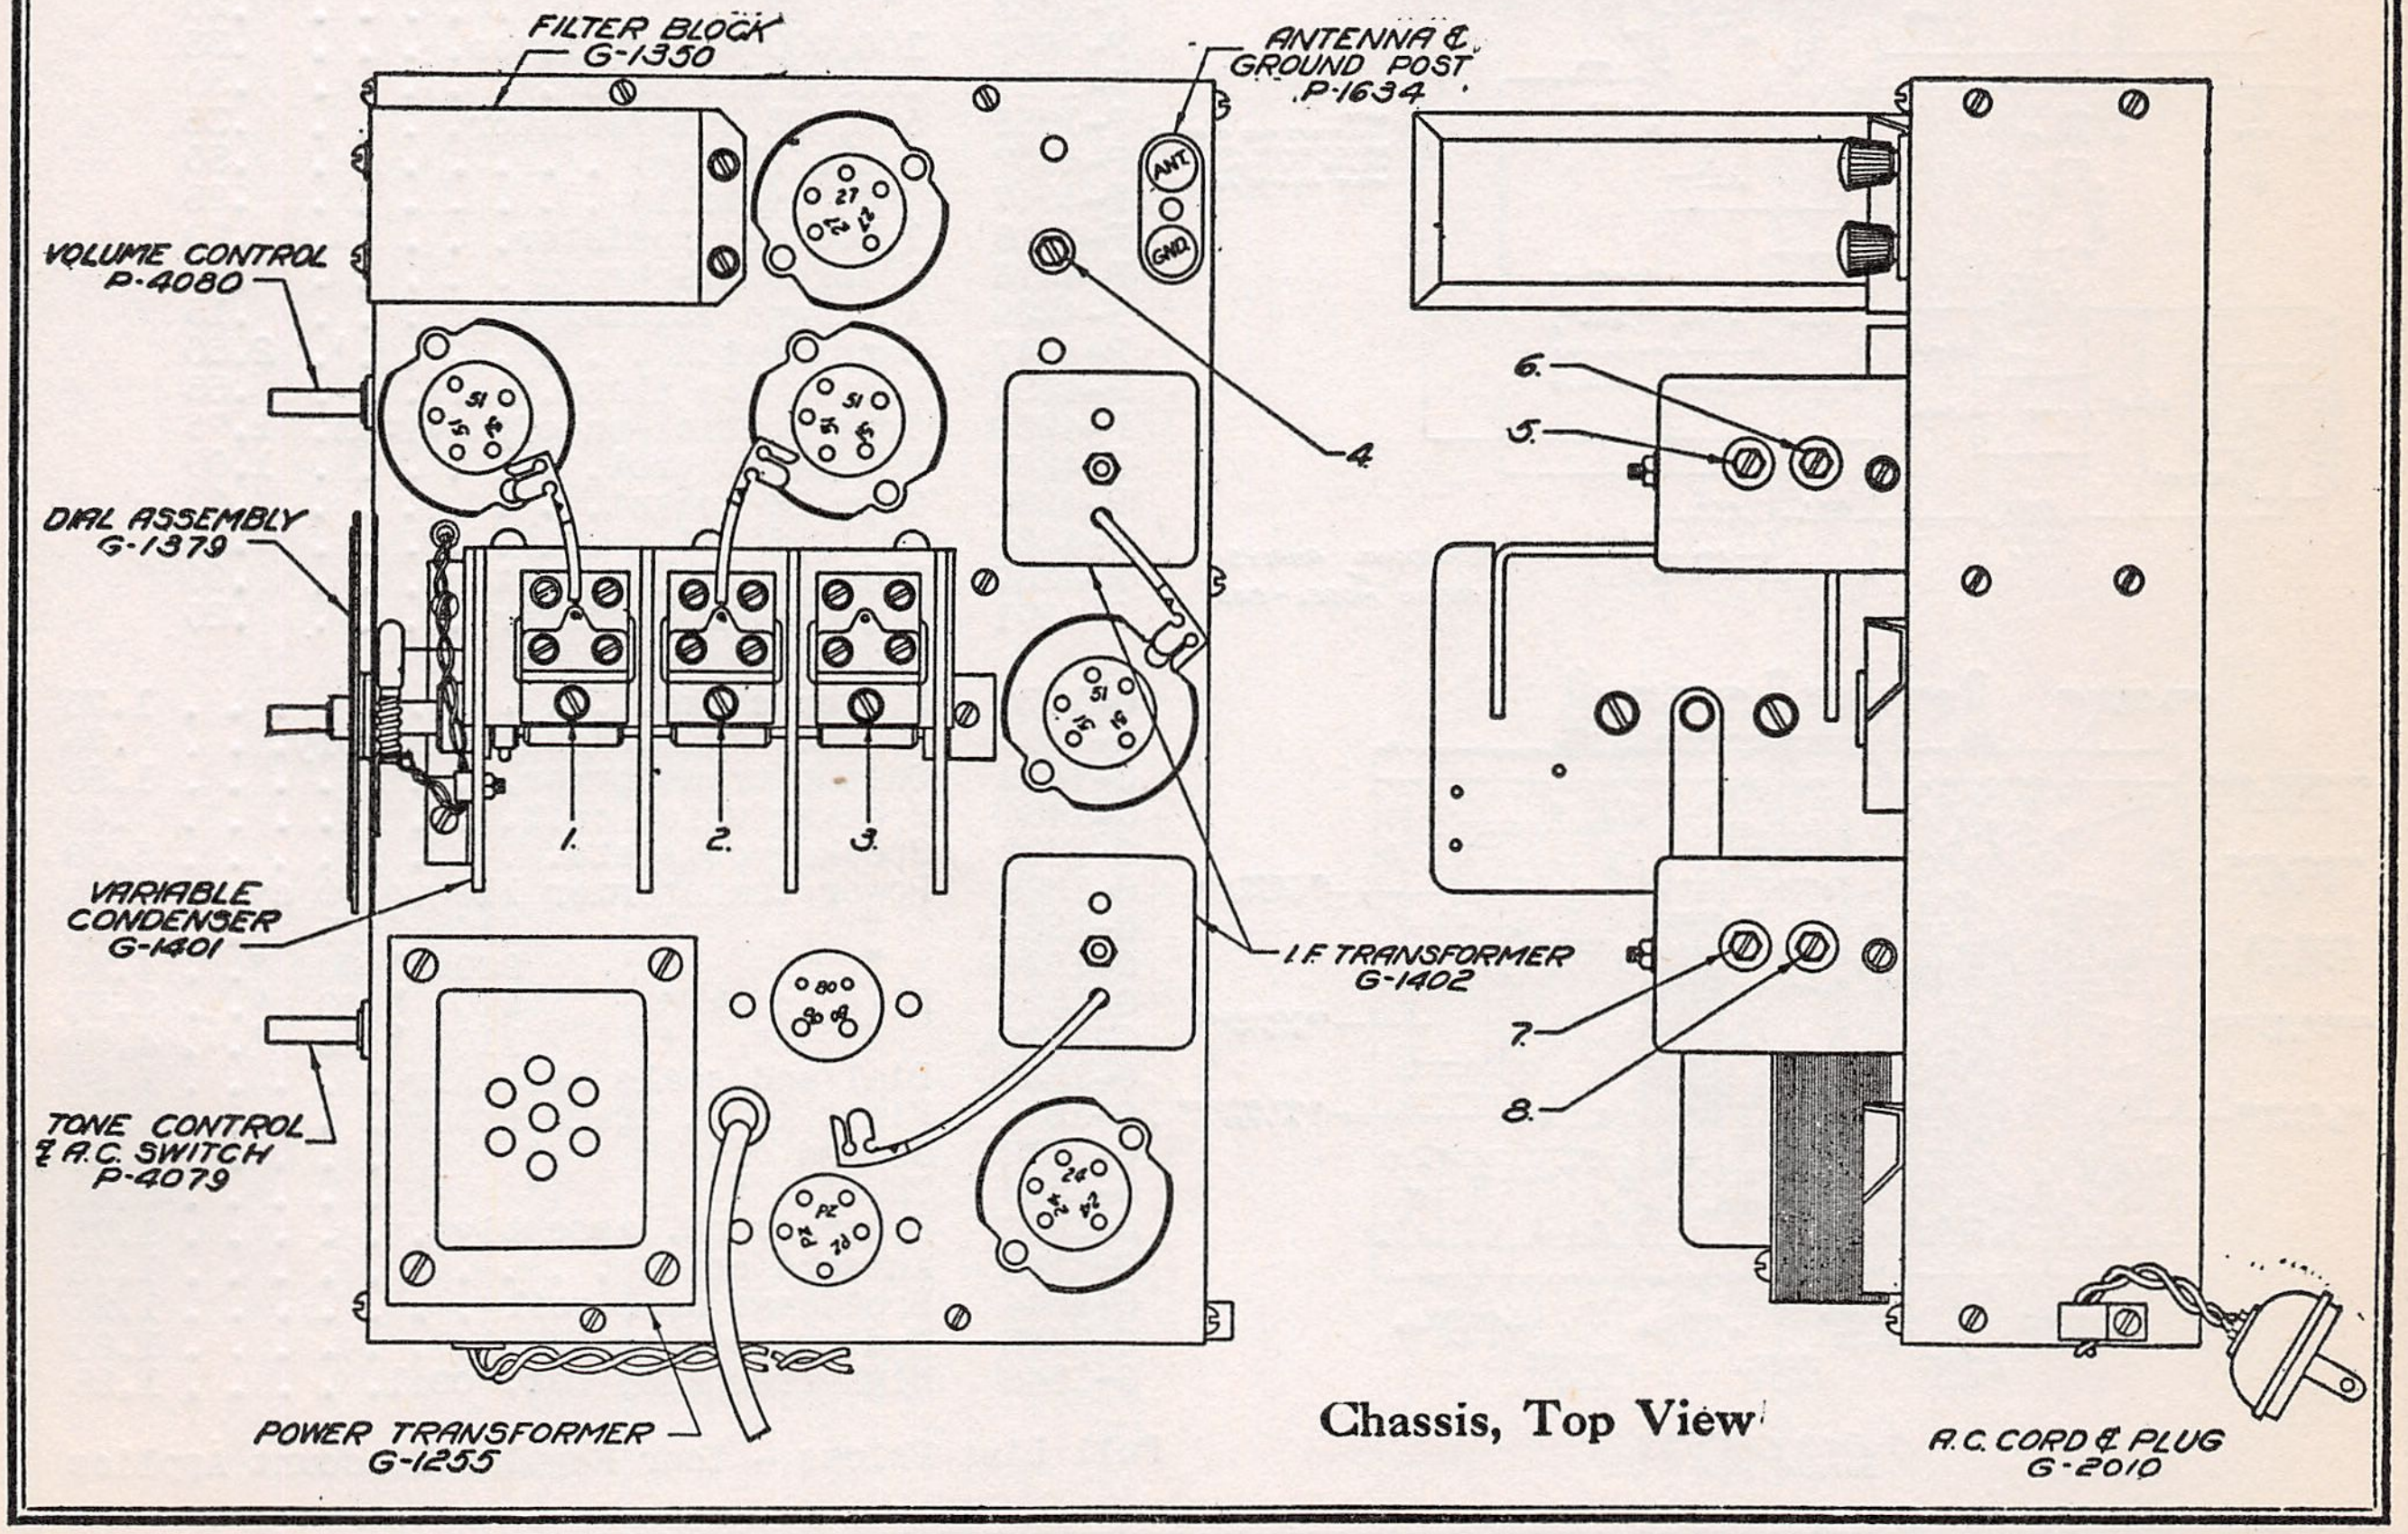
FILTER BLOCK G-1350
ANTENNA & GROUND POST P-1634
ANT.
GND.
VOLUME CONTROL P-4080
DIAL ASSEMBLY G-1379
VARIABLE CONDENSER G-1401
TONE CONTROL & A.C. SWITCH P-4079
POWER TRANSFORMER G-1255
I.F. TRANSFORMER G-1402
A.C. CORD & PLUG G-2010
27
51
51
51
80
PZ
24
1.
2.
3.
4.
5.
6.
7.
8.

Chassis, Top View

MODEL AC 240
Schematic
Chassis View
Breakdown
Parts List

TRANSFORMER CORP. OF AMERICA

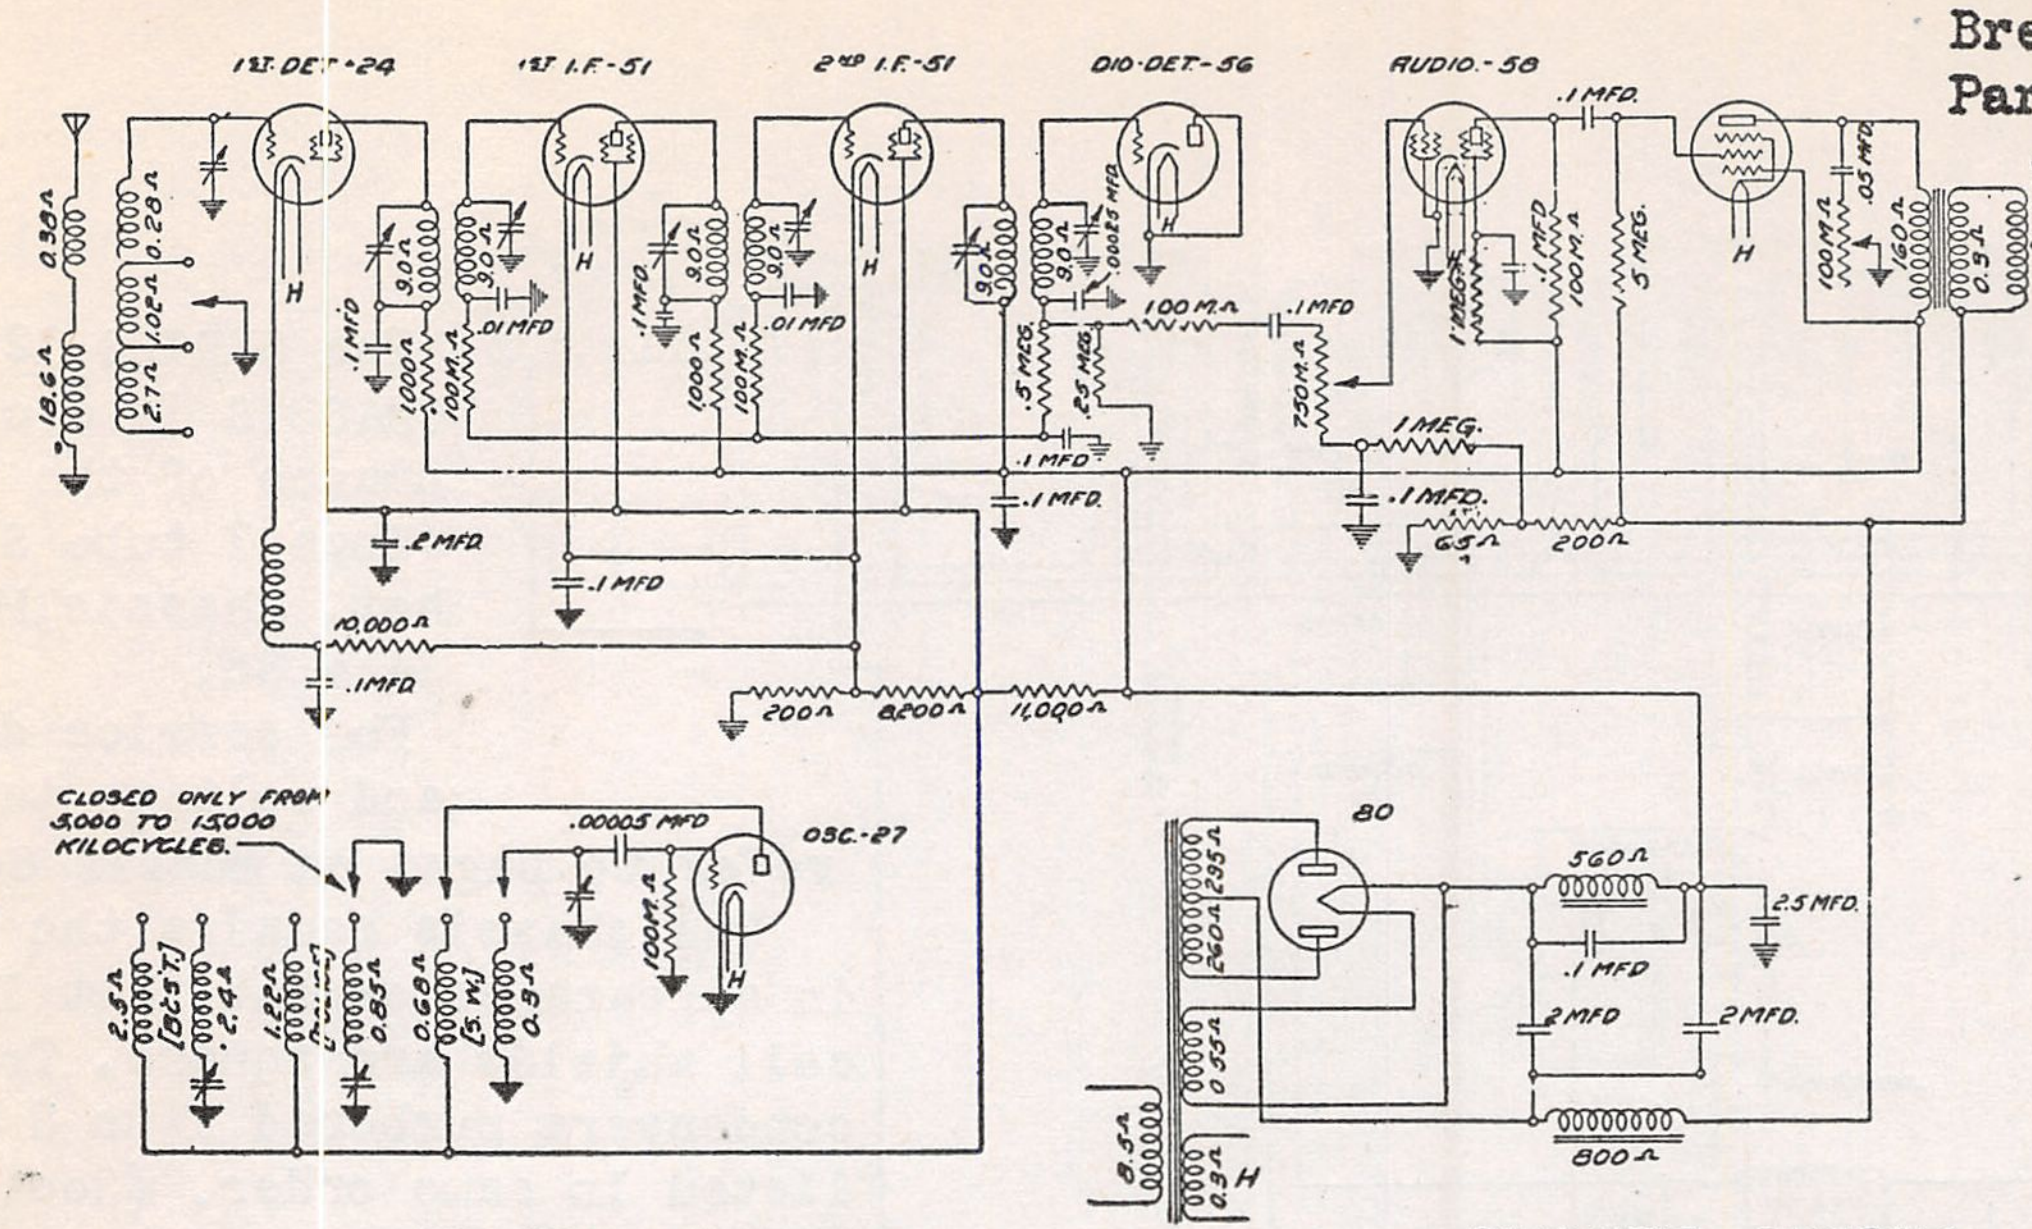
1ST DET.-24
1ST I.F.-51
2ND I.F.-51
DIO-DET.-56
AUDIO.-58
80
OSC.-27
CLOSED ONLY FROM 5,000 TO 15,000 KILOCYCLES.
.00005 MFD
.1 MFD
.01 MFD
.2 MFD
2.5 MFD.
2 MFD
2 MFD.
10,000 Ω
200 Ω
8,200 Ω
11,000 Ω
560 Ω
800 Ω
1 MEG.
750 M.Ω
100 M.Ω
65 Ω
200 Ω

IF PEAK 490 KC

SCHEMATIC DIAGRAM
OF
CLARION ~ MODEL 240
DRAWN BY - L.J   CHECKED BY -
APPROVED BY -   DATE: 5-17-32

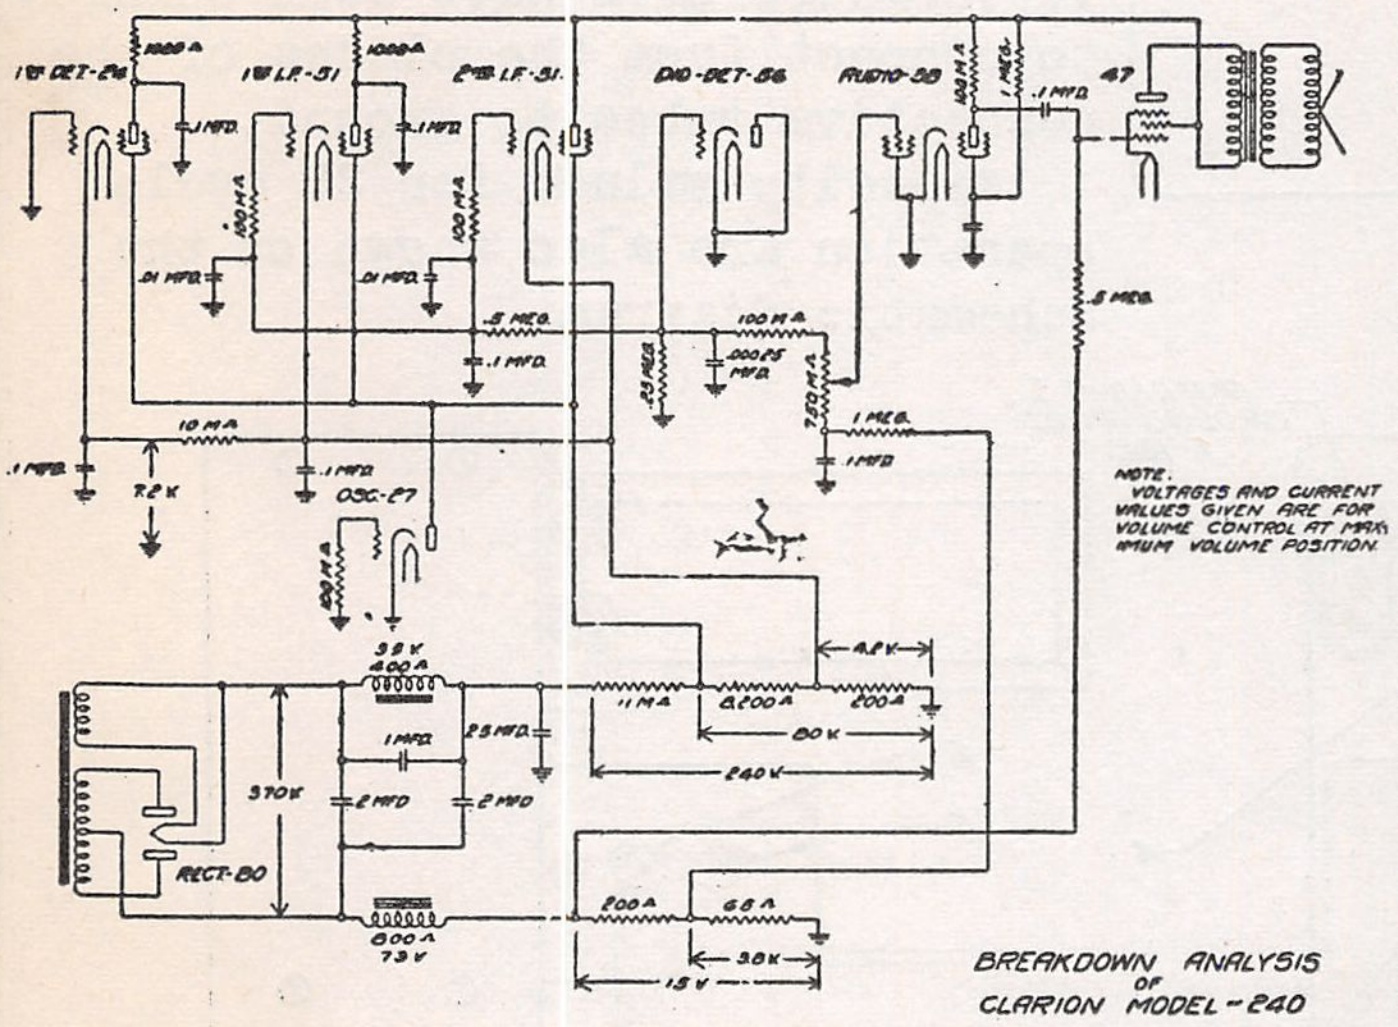
1ST DET.-24
1ST I.F.-51
2ND I.F.-51
DIO-DET.-56
AUDIO-58
47
OSC.-27
RECT.-80
370V
240V
80V
15V
NOTE. VOLTAGES AND CURRENT VALUES GIVEN ARE FOR VOLUME CONTROL AT MAXIMUM VOLUME POSITION

BREAKDOWN ANALYSIS
OF
CLARION MODEL - 240

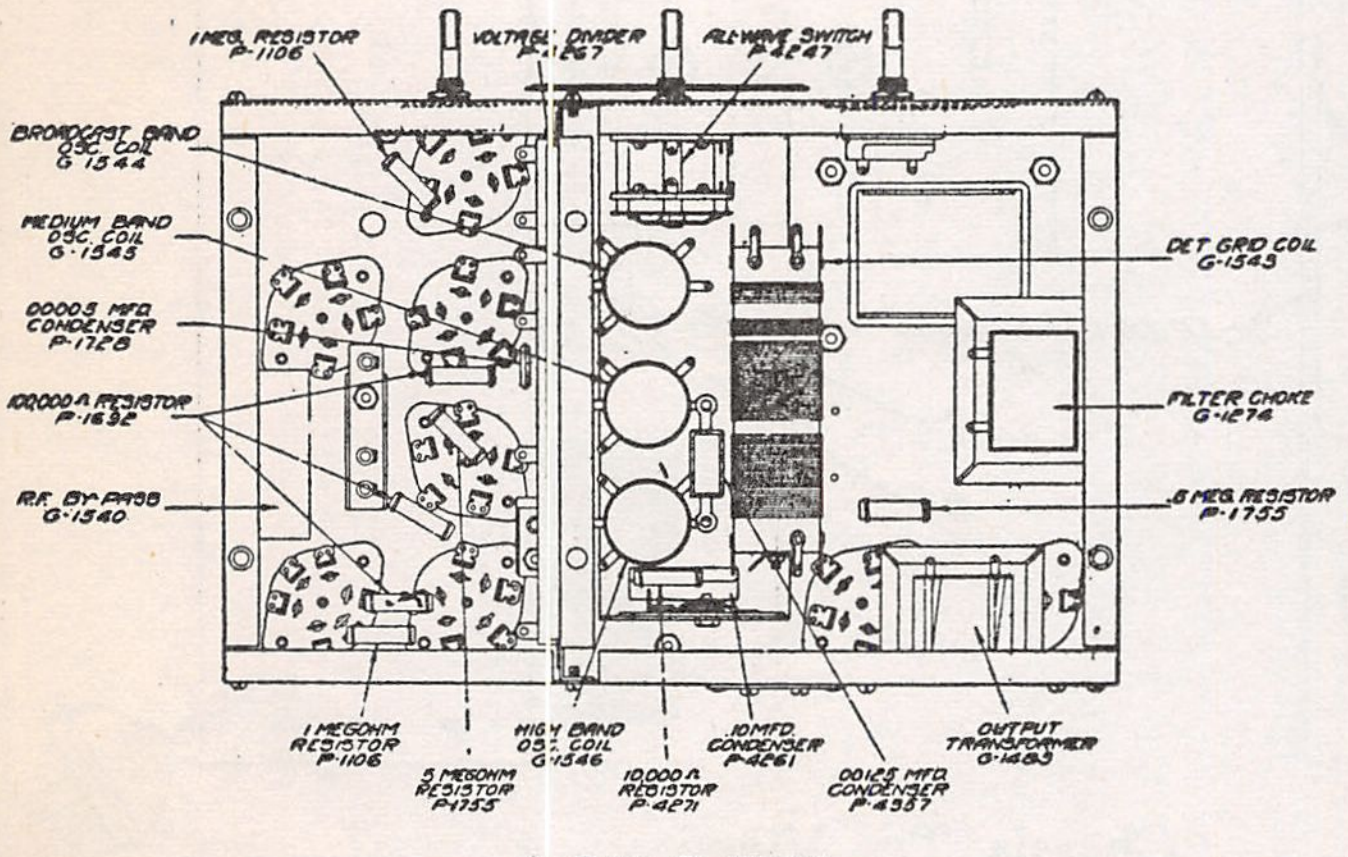
1 MEG. RESISTOR P-1106
VOLTAGE DIVIDER P-4267
ALL-WAVE SWITCH P-4247
BROADCAST BAND OSC. COIL G-1544
MEDIUM BAND OSC. COIL G-1545
.00005 MFD. CONDENSER P-1728
100,000 Ω RESISTOR P-1692
R.F. BY-PASS G-1540
DET. GRID COIL G-1543
FILTER CHOKE G-1274
.5 MEG. RESISTOR P-1755
1 MEGOHM RESISTOR P-1106
.5 MEGOHM RESISTOR P-1755
HIGH BAND OSC. COIL G-1546
10,000 Ω RESISTOR P-4271
10 MFD. CONDENSER P-4261
.001 MFD. CONDENSER P-4337
OUTPUT TRANSFORMER G-1483

G-240 CHASSIS
BOTTOM VIEW

P-1038	Pilot lamp.	$ .35
P-1049	Grid cap clip	.05
P-1106	1 megohm resistor	.35
P-1118	Chassis mounting washers. .	.03
P-1472	Tube shields.	.10
P-1518	Chassis mounting screws . .	.05
P-1593	Type 24 socket.	.20
P-1595	" 80 "	.20
P-1597	" 27 "	.20
P-1682	" 51 "	.20
P-1683	" 47 "	.20
P-1692	100,000 ohm resistor. . . .	.35
P-1728	.00005 mfd cond	.30
P-1755	500,000 ohm resistor. . . .	.35
P-4037	Knobs (large)	.30
P-4047	" (small)	.25
P-4118	1,000 ohm resistor.	.20
P-4216	Speaker diaphragm	.50
P-4229	Ant. gnd bilding post . . .	.15
P-4247	Band switch	2.50
P-4256	Escutcheon plate.	.55
P-4259	Tone control-on-off switch.	1.75
P-4260	Volume control.	1.00
P-4262	Type 56 socket.	.20
P-4264	" 58 "	.20
P-4267	Voltage div. resistor . . .	.90
P-4271	10,000 ohm resistor	.20
G-1274	Filter choke.	1.75
G-1364	Trimmer and bracket assembly. . .	.75
G-1483	Output transformer.	1.50
G-1484	Speaker voice coil.	.40
G-1502	Speaker complete.	5.00
G-1528	Power transformer 110 vo.60 cy. .	3.75
G-1528A	" " 110 " 25 " . .	5.25
G-1528B	" " 220 " 60 " . .	4.50
G-1529	Filt. pack " 110 " 60 " . .	3.50
G-1529A	" " " 110 " 25 " . .	4.50
G-1530	Dial and scale assembly	1.50
G-1531	First I. F. transformer	2.50
G-1532	Second " "	2.50
G-1533	Third " "	2.50
G-1540	Bypass cond. assembly	1.75
G-1543	Antenna coil.	1.75
G-1544	Broadcast osc. coil	1.25
G-1545	Medium osc. coil.	1.25
G-1546	High frequency osc. coil.	1.25

Full List Prices - Your Regular Discount Applies

U. S. RADIO & TELEVISION CORP.

MODEL 7
Schematic

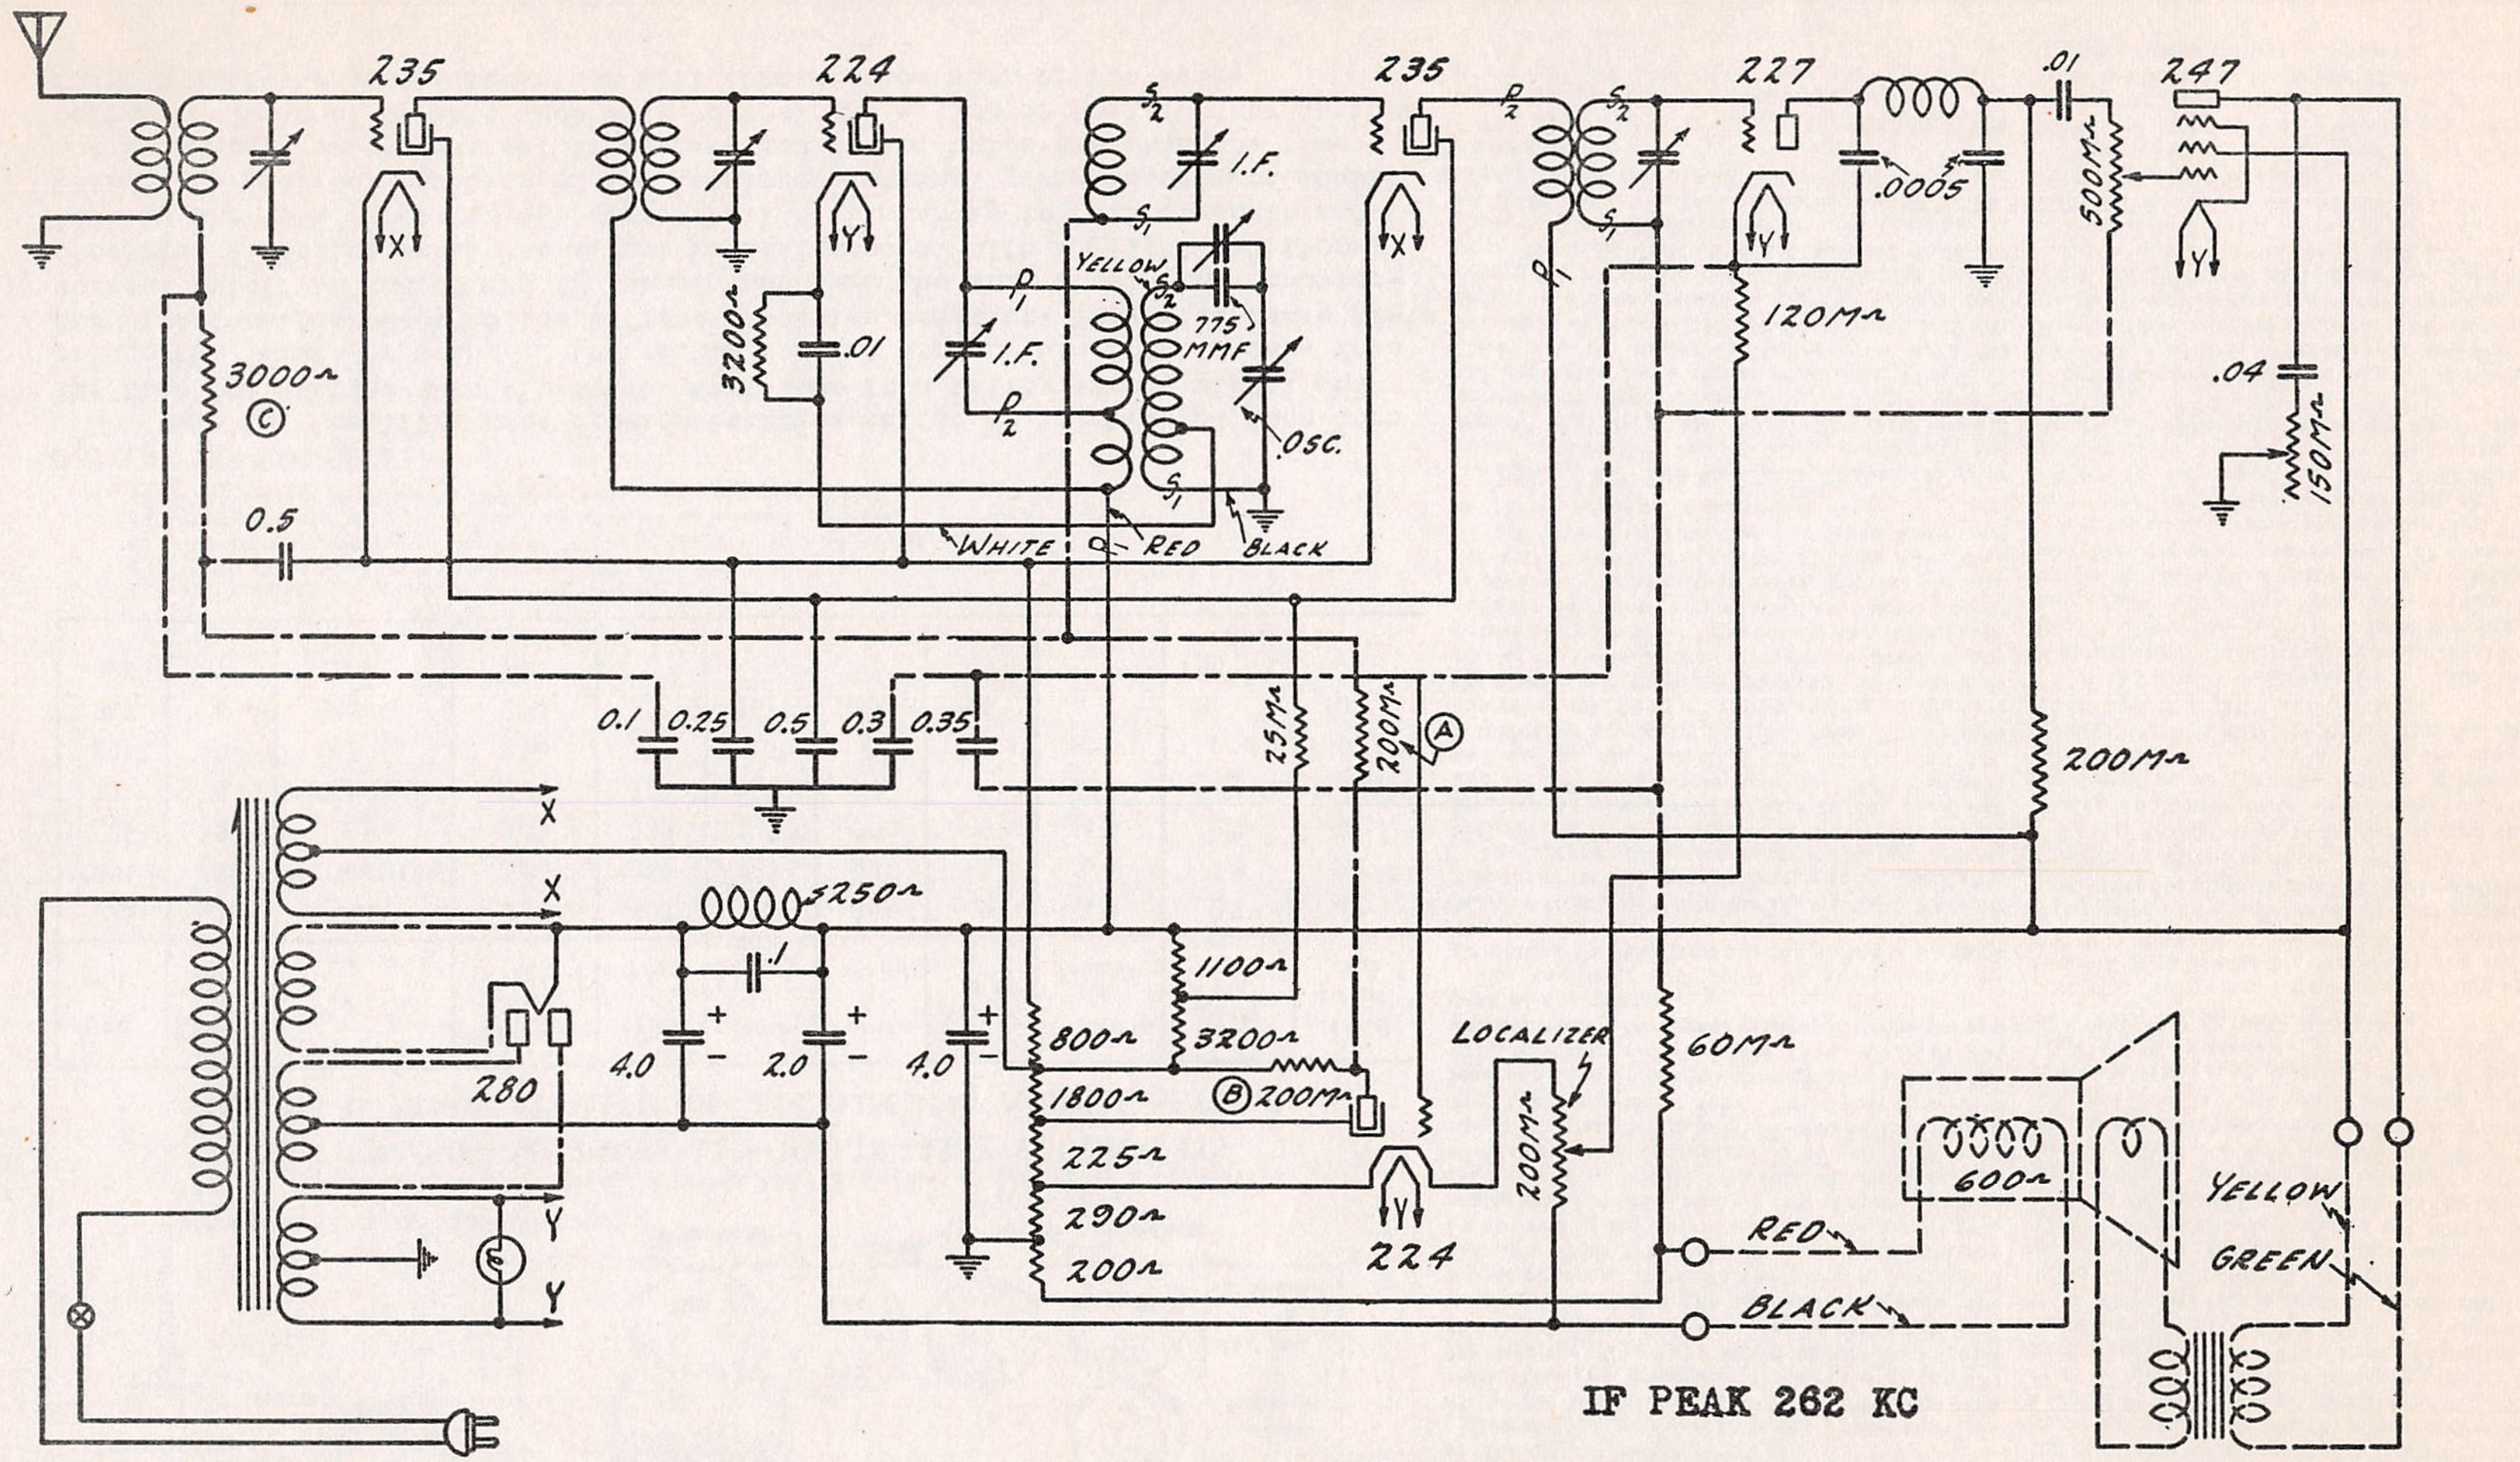
235
224
235
227
.01
247
3000Ω
Ⓒ
0.5
3200Ω
.01
I.F.
YELLOW
775 MMF
OSC.
WHITE
RED
BLACK
P1
P2
S1
S2
X
Y
.0005
500MΩ
120MΩ
.04
150MΩ
0.1
0.25
0.5
0.3
0.35
25MΩ
200MΩ
Ⓐ
200MΩ
5250Ω
.1
4.0
2.0
4.0
280
1100Ω
800Ω
3200Ω
1800Ω
Ⓑ 200MΩ
225Ω
290Ω
200Ω
LOCALIZER
200MΩ
60MΩ
224
600Ω
RED
BLACK
YELLOW
GREEN

IF PEAK 262 KC

——·—— RUBBER COVERED WIRE

Ⓐ AFTER SERIAL Nº 1,062,700 RESISTOR WILL BE OMITED.
Ⓑ AFTER SERIAL Nº 1,062,700 RESISTOR WILL BE 300MΩ
Ⓒ AFTER SERIAL Nº 1,070,000 RESISTOR CHANGED TO 5 μh. CHOKE.

Models 7A, 7B (1931)

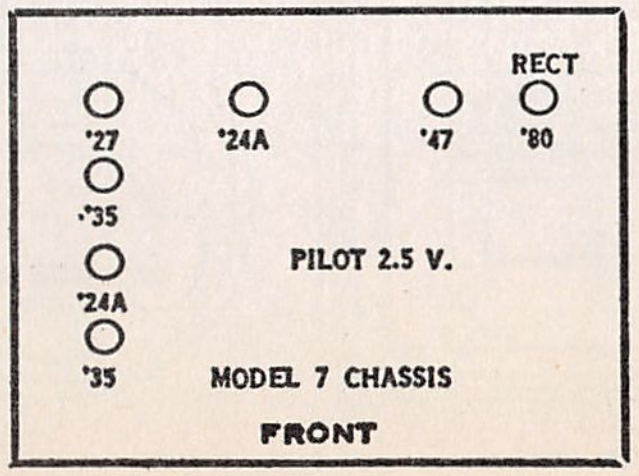
RECT
'27
'24A
'47
'80
'35
'24A
'35
PILOT 2.5 V.
MODEL 7 CHASSIS
FRONT

Note
There are certain features to be noted in this receiver.
The mixer tube is of the auto-dyne type, wherein it functions as the mixer (1st detector) and at the same time functions as the oscillator.

MODEL 7
Alignment
Voltage
Data

U. S. RADIO & TELEVISION CORP.

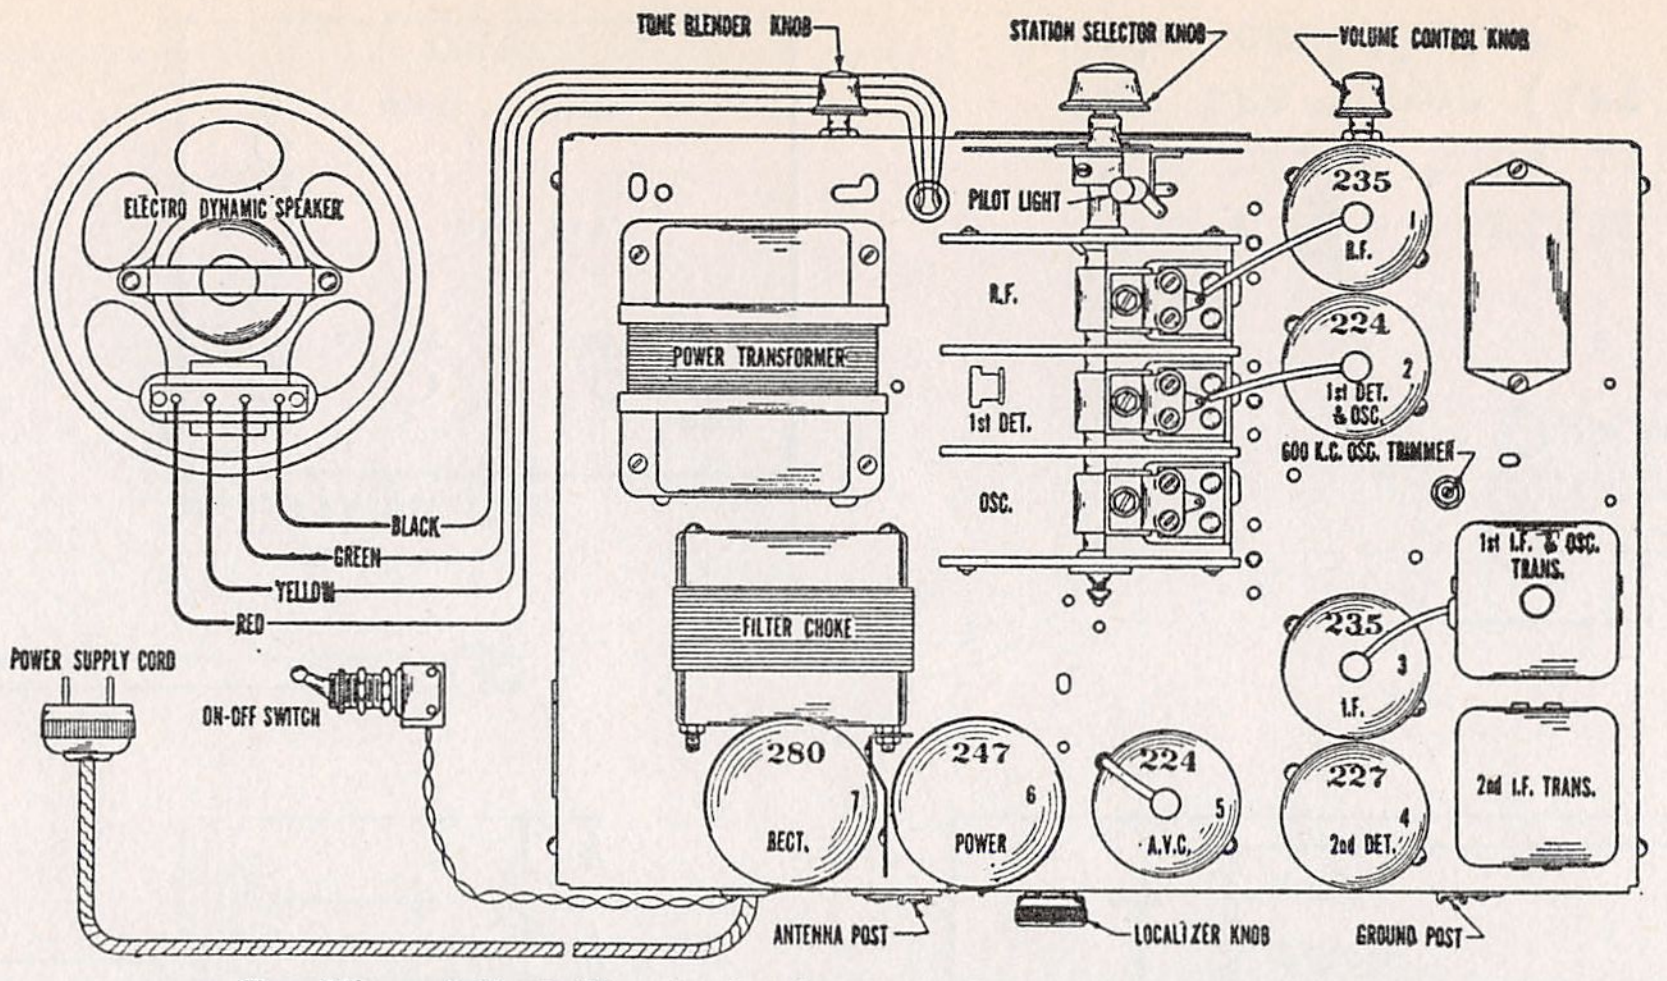

—*Top View of No. 7 Chassis showing Tube Sequence and Speaker Connections*

No. 7 CHASSIS—VOLTAGES AT SOCKETS—LINE VOLTAGE 115

VOLUME CONTROL AT MAXIMUM—LOCALIZER AT NORMAL SETTING

Type of Tube	*Position of Tube*	*Function*	*Across Filament or Heater*	*Plate to Cathode*	*Grid to Cathode*	*Screen to Cathode*	*Screen MA*	*Cathode to Heater*	*Plate MA*	*Grid Test MA*
235	1	R.F.	2.35	150	4.5 (1)	70 (2)	.9	4.5	2.7	4.2
224	2	1st Det. & Osc.	2.35	240	6.4	93	.3	6.4	1.8	2.6
235	3	I.F.	2.35	150	4.5 (1)	70 (2)	.9	4.5	2.7	4.2
227	4	2nd Det.	2.35	150	12–24 (3)			0–10 (3)	.2–.5 (3)	.21–.51 (3)
224	5	A.V.C.	2.35	60	0–15 (3)	9	0 (4)	12	0 (4)	0 (4)
247	6	Power	2.35	220	16 (5)	240	6.4		34	40
280	7	Rect.	4.9						39 Per Plate	

(1) This voltage read across 800 ohm resistor.
(2) Voltage as read with 600,000 ohm meter.
(3) Varies with setting of localizer. Voltages read with high resistance meter.
(4) Current zero with no signal and localizer at normal position.
(5) The voltage read across 200 ohm section of voltage divider.

SETTING THE LOCALIZER.

Turn the localizer knob cpunterclockwise as far as it will go. Then turn the knob one quarter turn clockwise. Next tume in a fairly strong signal and reduce the volume by means of the volume control knob on the front panel. Then turn the localizer knob to the extreme clockwise position. This will cause plate current cutoff in the RF and IF tubes. Then turn the knob slowly in a counter-clockwise direction until the signal is again heard. With a slight additional turn in the same direction the signal builds up sharply to full strength and this is the correct position of the localizer setting. This adjustment should not be changed unless the set is reinstalled or the tubes are changed. Incorrect adjustment of this knob will control the action of the AVC tube in such fashion that the automatic action will commence too soon or too late.

Condenser Alignment

Aligning Intermediate Condensers—First align the intermediate condensers. A non-metallic screw driver is preferable for this. Adjust the signal generator for a signal of 262 K.C. The Localizer knob should be at the normal position as explained in the section on this control or else it may be turned to the extreme counter-clockwise position. One of the best ways of reading the output is by means of a rectifier type meter. This meter, if of low range, is connected across the secondary of the output transformer in the speaker. If it is of a high range, it may be connected across the primary of the transformer in series with a large condenser to prevent the flow of D.C. plate current through the meter. In either method of connection, opening the voice coil of the speaker will give a better deflection on the output meter.

Remove the grid cap from the grid connection of the 224 1st detector tube and connect the lead from the signal generator to the grid of the 224 1st detector. The tube shield should be on and the chassis grounded. One way to make this connection is to bring the antenna lead from the signal generator through the place in the shield through which the grid wire passes. A grid cap on the end of the antenna lead of the signal generator will facilitate making this connection. This lead, of course, should be insulated. Another way of making this connection is to cut a hole of about 1" diameter in a No. 7 chassis tube shield over the 1st detector tube. The signal generator lead can then be passed through this hole to the grid connection of the 224 tube. Connect the ground lead of the signal generator to the ground post of the chassis.

The oscillator coil must be shorted out by grounding the lead from the tap on the secondary. This can be done conveniently by connecting a jumper from ground to the lug on the 3,200 ohm resistor at the end which connects to the oscillator.

The intermediate condenser adjusting screws are reached from the bottom of the chassis. There are two on the porcelain base of the oscillator and 1st I.F. transformer assembly, Part No. 3571 and one on the porcelain base of the 2nd I.F. transformer assembly, Part No. 3644. The volume control should be at maximum setting. Attenuate the signal from the signal generator until the output is 75 volts or less in order to prevent any action of the A.V.C. Then adjust the three intermediate condenser screws until maximum output is obtained on the output meter, keeping the output at 75 volts or less. After all three have been adjusted the first time, go over them again and check the setting for maximum output.

Aligning R.F. and Oscillator Condensers—For adjusting the R.F. and oscillator condensers the signal input from the signal generator should be made to the antenna post. Adjust the signal generator for a signal of exactly 1400 K.C. Then turn the tuning condenser rotor until the pointer is at exactly 1400 on the dial scale. Then adjust the three trimmers on the tuning condenser for maximum output adjusting the oscillator trimmer first (trimmer nearest back of chassis). Turn the screws up or down until greatest deflection on output indicating meter is obtained. Keep the output below 75 volts as explained above.

The next step is to adjust the oscillator 600 K.C. trimmer condenser. The adjusting screw for this condenser is reached from the top of the chassis and is located just in front and to the side of the 1st I.F. and oscillator assembly. Adjust the signal generator for a signal of 600 K.C. and turn the tuning condenser rotor until the output is at maximum. To correctly adjust this oscillator 600 K.C. trimmer it will be necessary to turn the screw to several different positions, using a nonmetallic screw driver preferably. At every position of this adjusting screw turn the tuning condenser rotor until maximum output is obtained. For each position of the adjusting screw there will be a maximum output and the correct position of the adjusting screw is the setting at which the deflection on output indicating meter is the greatest.

Next set the signal generator again for a 1400 K.C. signal and check the adjustment of the tuning condenser trimmers at this frequency for maximum output. Then set the signal generator for a signal of 1000 K.C. and turn the tuning condenser rotor until the output indicating meter shows maximum deflection. Then bend the slotted rotor plate sections of the R.F. tuning condenser sections which are last in mesh, in or out until maximum output is obtained. In some instances it may be necessary to bend the oscillator condenser rotor plate sections also in order to get maximum output but this should be done only as the last resort as it tends to throw the dial calibration off. Tune in a signal at 750 K.C. and then at 600 K.C. and follow the same procedure bending the rotor plate sections last in mesh until maximum output is obtained. Do not change the setting of the oscillator 600 K.C. trimmer in any way after it has once been set as indicated above.

NOTE—In the No. 7 Receivers, starting approximately with Serial No. 1,074,054 the oscillator 600 K.C. trimmer is replaced by a condenser of fixed value and a different dial chart is used. The procedure for aligning the R.F. and oscillator condensers of these receivers is as follows:

Loosen the drive plate set screws and turn the tuning condenser rotor counterclockwise as far as it will go so that the rotor is completely in mesh. Turn the drive plate until the lowest frequency mark is directly under the dial pointer. Then lightly tighten one set screw.

Set the signal generator for a signal of 1400 K.C. and turn the drive plate until the 1400 K.C. mark is under the pointer. Adjust the three trimmer condensers at this frequency until maximum output is obtained, adjusting the oscillator trimmer first (trimmer nearest back of chassis).

Set the signal generator for a signal of 600 K.C. and tune the receiver exactly to this signal. Loosen the drive plate set screw and adjust dial pointer until it is at the 600 K.C mark on the drive scale. Then tighten the drive plate set screw lightly.

Set the signal generator again for a signal of 1400 K.C. and tune the receiver to this frequency. Readjust the trimmer condensers if necessary until the signal is received with maximum volume when the pointer is at 1400 on the dial chart.

Recheck the calibration at 600 K.C. for maximum output and if it is correct tighten both drive plate set screws firmly, care being taken that the rotor shaft does not slip.

Then set the signal generator for signals of 1,000, 750 and 600 K.C. and check the two R.F. condensers for resonance. Bend the slotted rotor plate sections last in mesh of these two banks until maximum output is obtained.

U. S. RADIO & TELEVISION CORP.

MODEL 7
Transformer
Data 25 cycle.

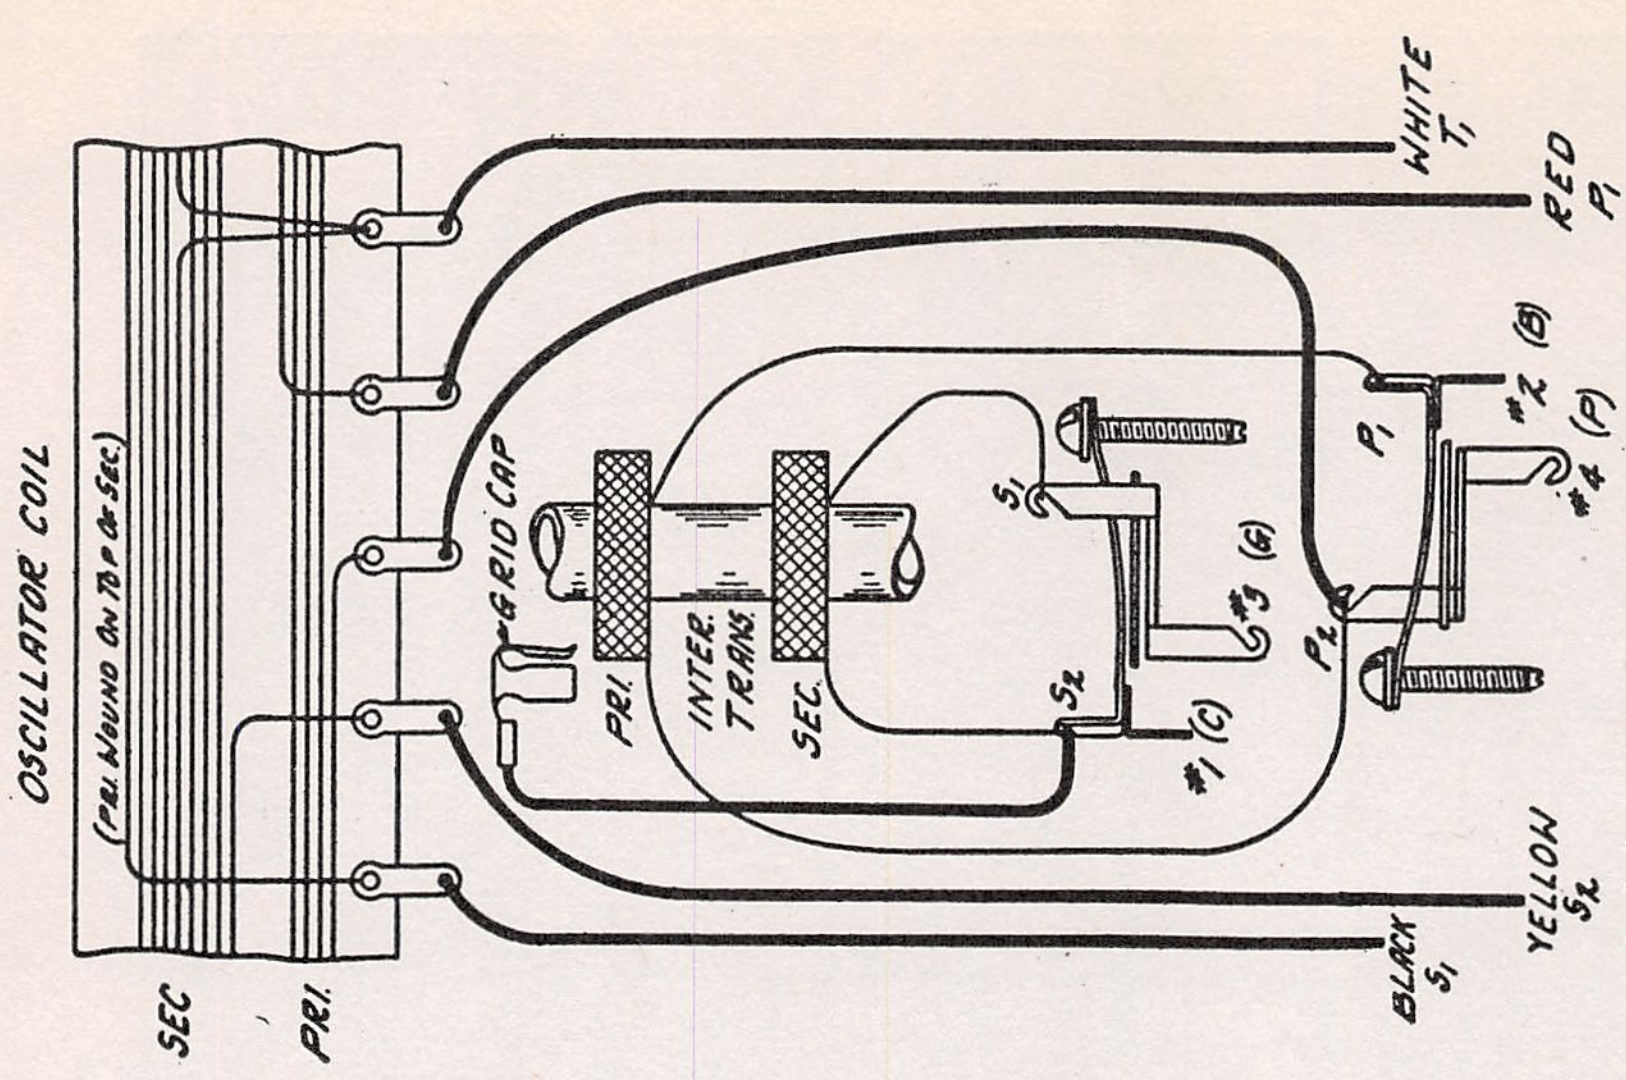
OSCILLATOR COIL
(PRI. WOUND ON TOP OF SEC.)
SEC
PRI.
GRID CAP
PRI.
INTER. TRANS.
SEC.
S1
S2
P1
P2
#1 (C)
#3 (G)
#2 (B)
#4 (P)
WHITE T1
RED P
YELLOW S2
BLACK S1

-Wiring Diagram, Osc. and I.F. Assembly

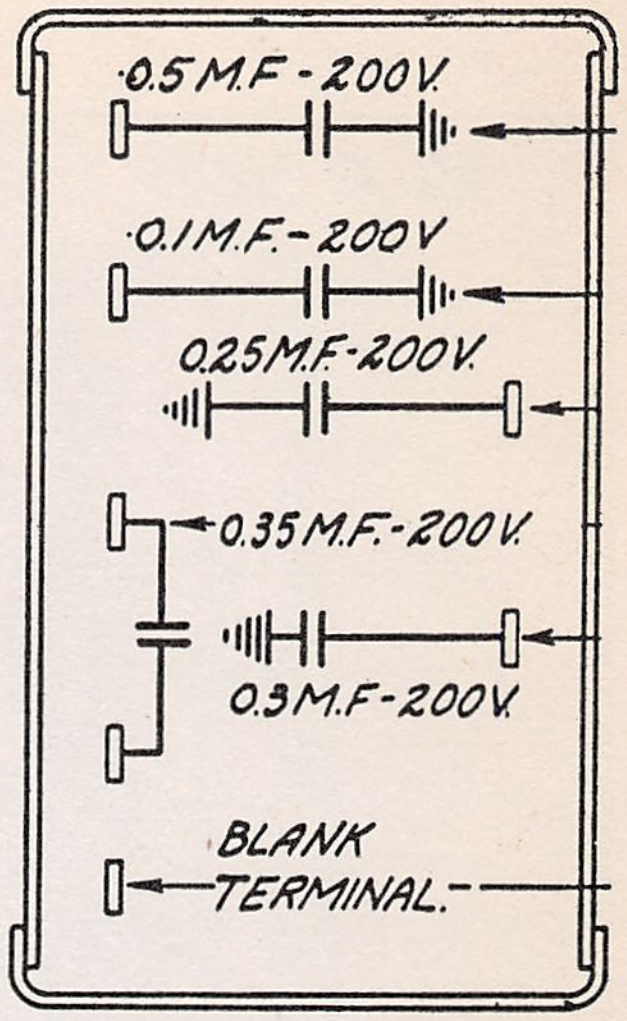
0.5 M.F.-200V.
0.1 M.F.-200V
0.25 M.F.-200V.
0.35 M.F.-200V.
0.3 M.F.-200V.
BLANK TERMINAL.

5 Section Condenser Internal Wiring

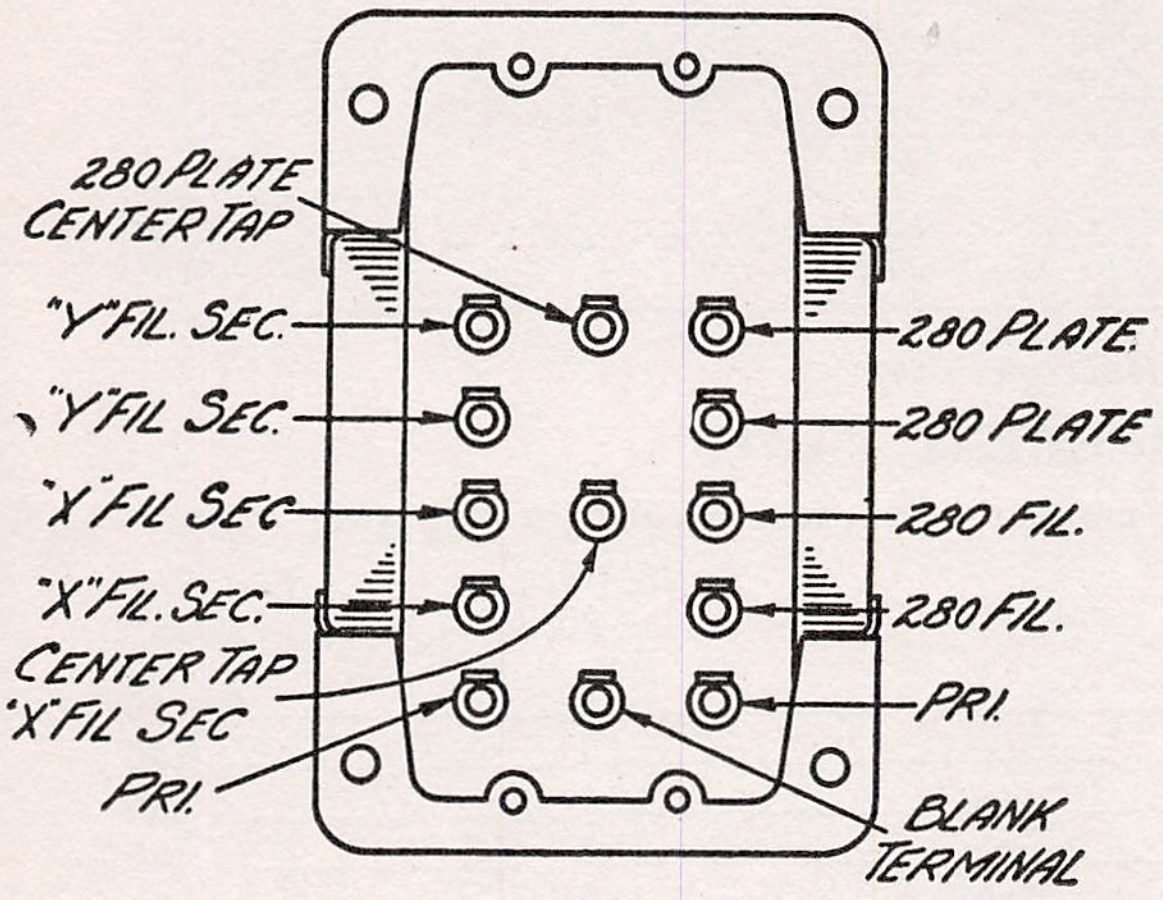
280 PLATE CENTER TAP
"Y" FIL. SEC.
"Y" FIL SEC.
"X" FIL SEC
"X" FIL. SEC. CENTER TAP
"X" FIL SEC
PRI.
280 PLATE
280 PLATE
280 FIL.
280 FIL.
PRI.
BLANK TERMINAL

-Power Transformer Terminals

No. 7X Chassis—25 Cycle, 115 Volt

Chassis No. 7X is almost identical in construction with chassis No. 7, except that it is designed for 25 cycle, 115 volt operation. All parts as used in the No. 7 chassis are used in the No. 7X chassis with the exception of the power transformer, .1 Mfd. choke tuning condenser and 2 Mfd. electrolytic filter condenser. These items are replaced by a 25 cycle power transformer, .35 Mfd. choke tuning condenser and a 4 Mfd. electrolytic filter condenser. All of these items for the 25 cycle receiver are shown in the parts list.

The description and testing as covered in the No. 7 Service Notes also applies to the No. 7X.

Referring to Fig. 1 it will be noted that in the 60 cycle, No. 7 chassis the filter choke is tuned with a .1 Mfd. condenser. The purpose of this condenser is to tune the choke so as to offer maximum opposition to the 120 cycle ripple component. In the No. 7X chassis a .35 Mfd. condenser is used to tune the choke so as to offer maximum opposition to the 50 cycle ripple component which is present when 25 cycle power is used. Also in the No. 7X chassis there are three 4 Mfd. filter condensers used, while the No. 7, 60 cycle chassis uses two 4 Mfd. units and one 2 Mfd. unit.

The No. 7X, 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. If there is excessive hum it will be necessary to remove the .35 choke condenser and replace it with a .1 Mfd. choke condenser, Part No. 2927. The reverse is not true, that is, the No. 7, 60 cycle receiver cannot be operated satisfactorily from a 25 cycle power supply.

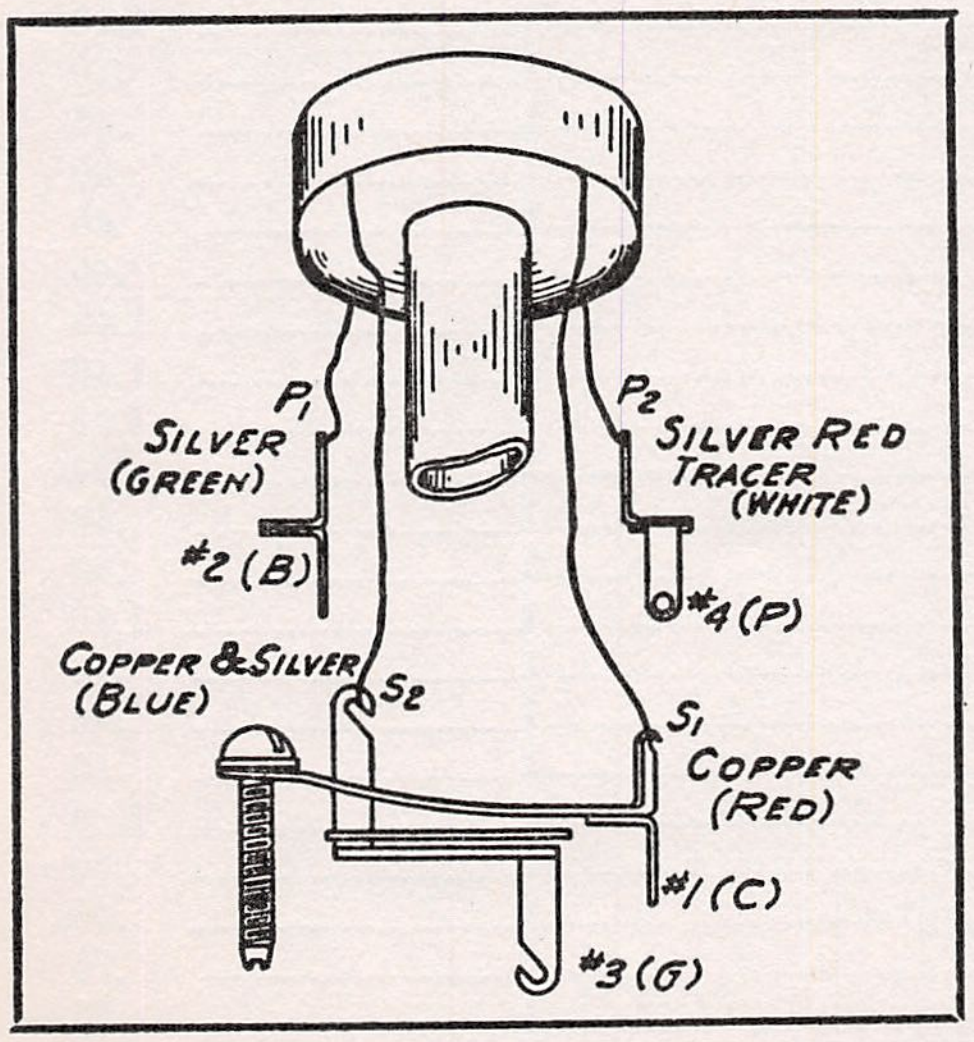
P1
SILVER (GREEN)
#2 (B)
P2
SILVER RED TRACER (WHITE)
#4 (P)
COPPER & SILVER (BLUE)
S2
S1
COPPER (RED)
#1 (C)
#3 (G)

-Wiring Diagram, 2nd I.F. Assembly

MODEL 7
Chassis View
Parts List

U. S. RADIO & TELEVISION CORP.

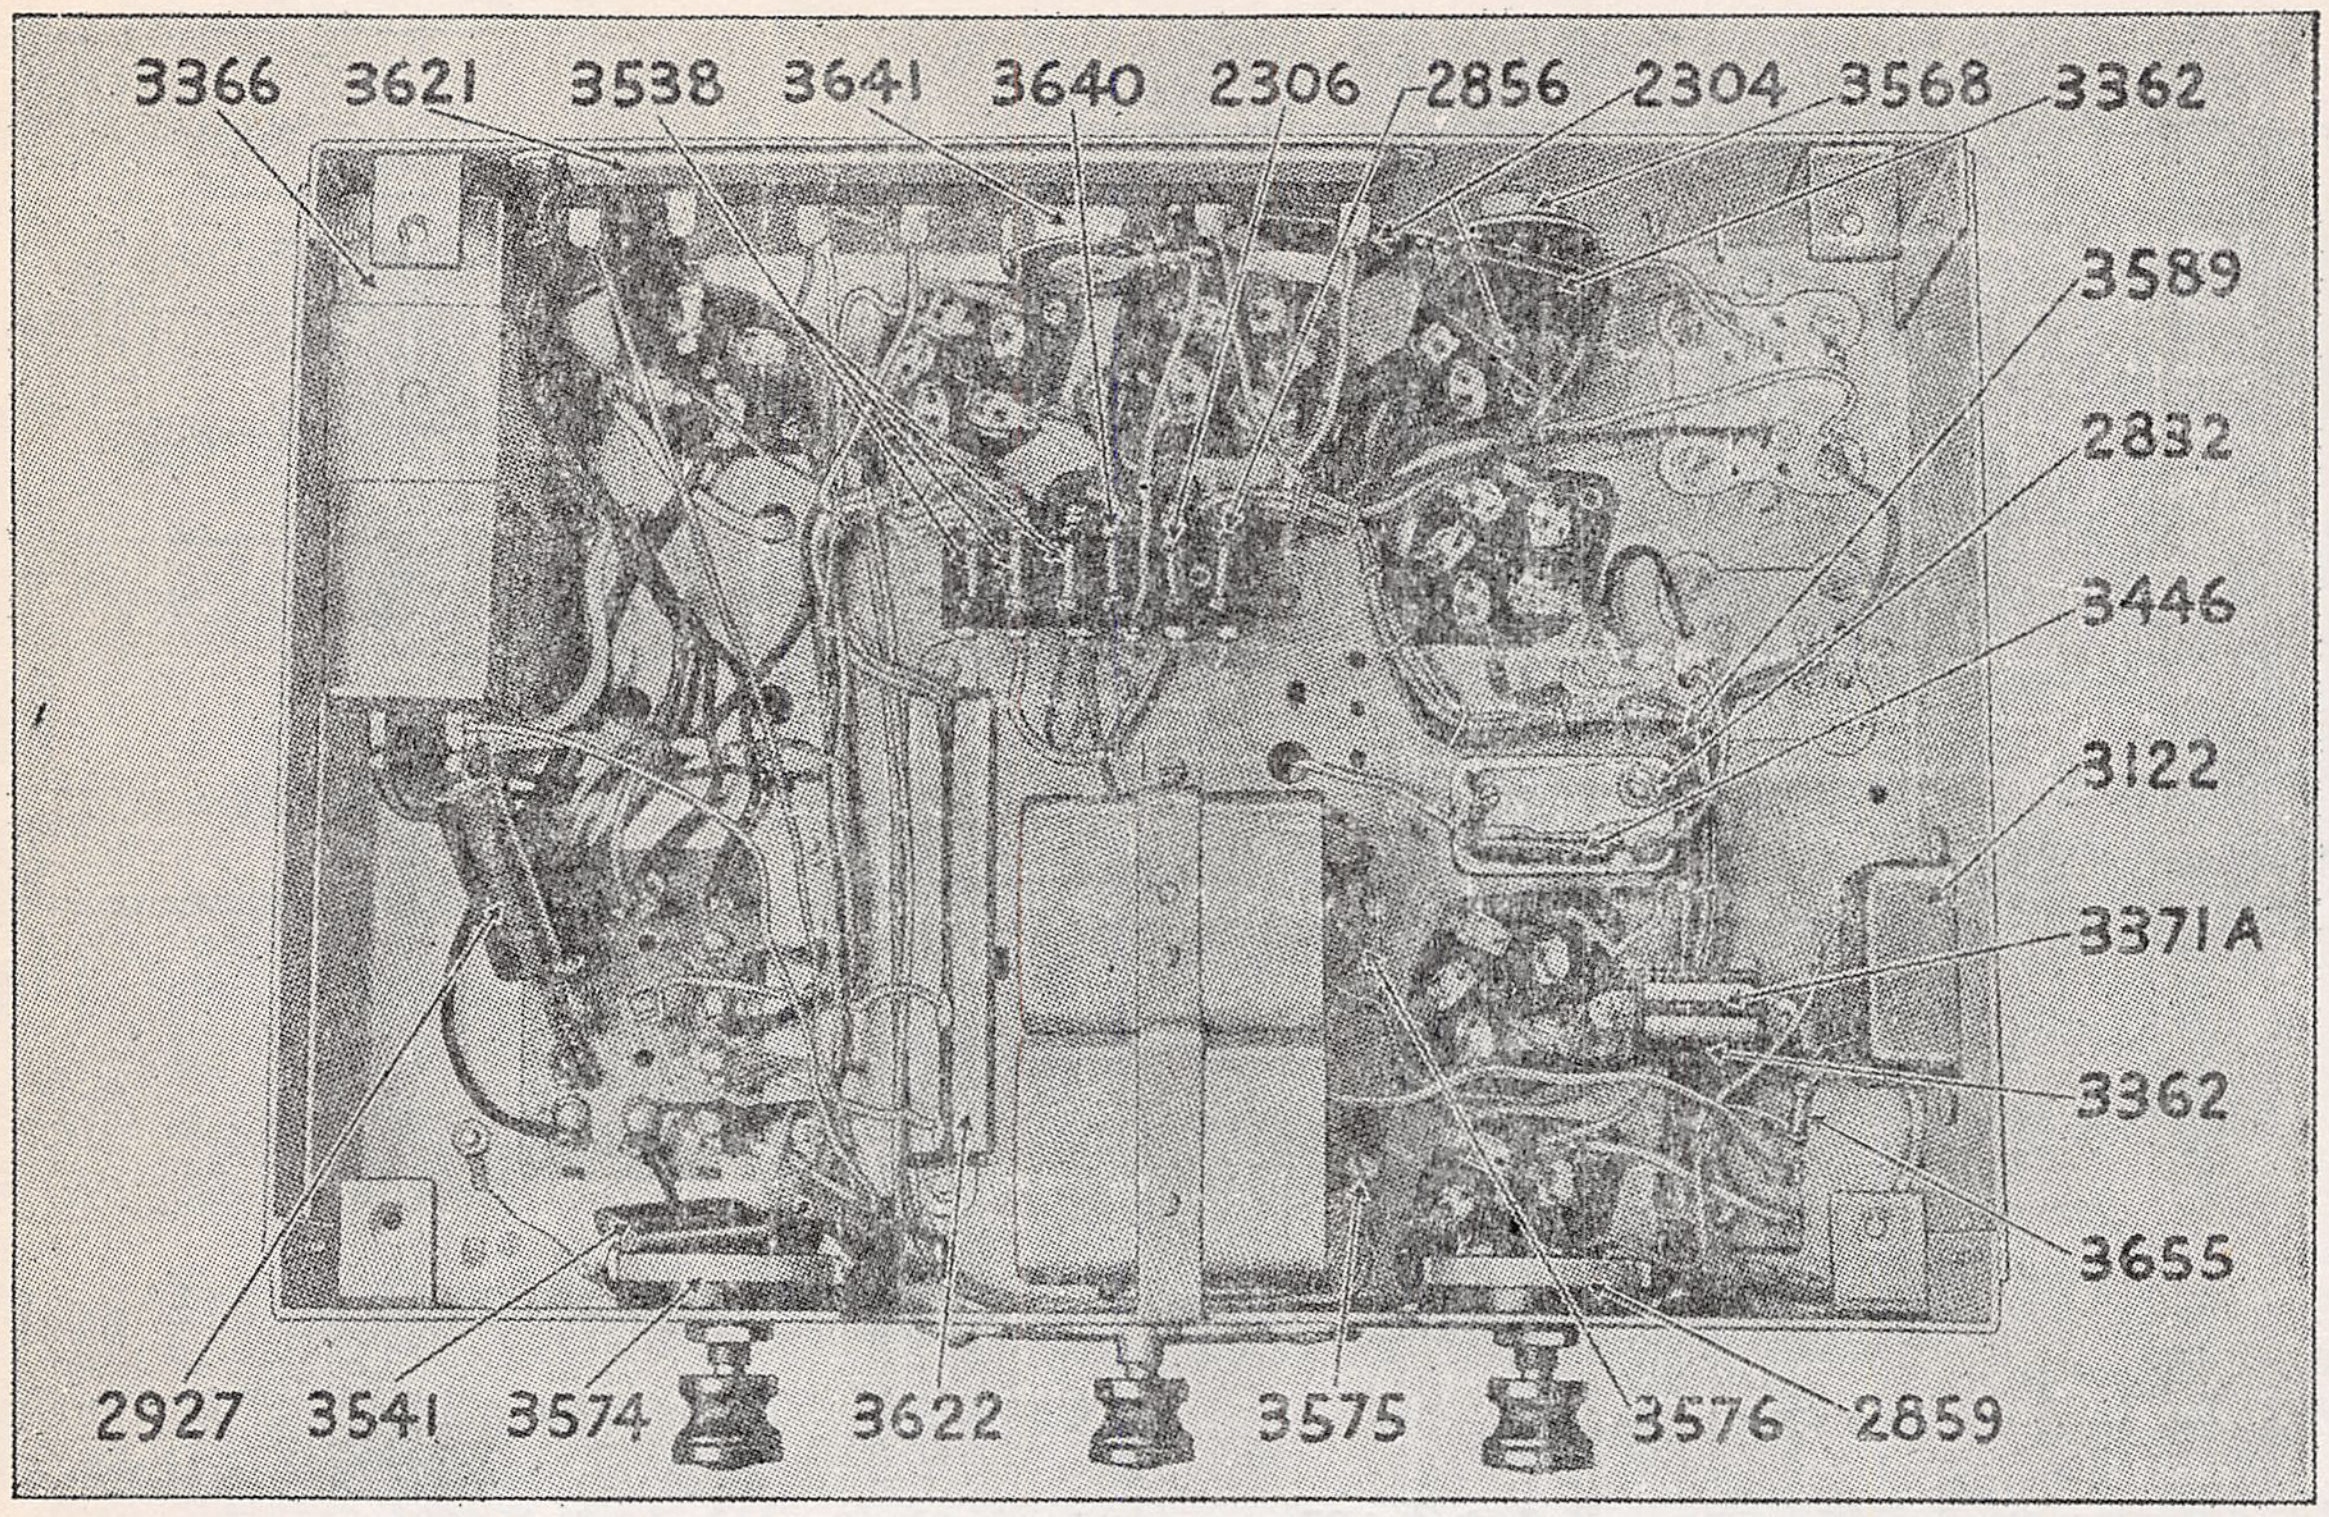

-No. 7 Chassis, Bottom View

No. 7 CHASSIS REPLACEMENT PARTS

Parts orders must be accompanied by serial number and model number of chassis. Order through your distributor.

Part No.	*Description*	*No. Used in Set*	*List Price Each*
2304	.0005 Mfd. By-pass Condensers	2	$ .40
2832	Oscillator 600 K.C. Trimmer Condenser	1	.40
2927	.1 Mfd. Choke Condenser for 60 Cycle	1	.40
3683	.35 Mfd. Choke Condenser for 25 Cycle	1	.55
3122	.5 Mfd. By-pass Condenser	1	.70
3362	.01 Mfd. Coupling and By-pass Condensers	2	.30
3366	4 Mfd. Electrolytic Condenser Unit, 450 Volt	2	1.40
3529	2 Mfd. Electrolytic Condenser Unit, 450 Volt	1	1.10
3559	Clamp for Electrolytic Condenser Unit	1	.10
3446	775 Mmf. Oscillator Condenser	1	.45
3541	.04 Mfd. Tone Blender Condenser	1	.30
2306	60,000 Ohm Series Resistor, Carbon	1	.45
2856	25,000 Ohm Series Resistor, Carbon	1	.45
2859	Volume Control 0—500,000 Ohm	1	1.40
3574	Tone Blender 0—150,000 Ohm	1	1.40
3641	Localizer Resistor 0—200,000 Ohm	1	1.20
3371A	3,200 Ohm Biasing Resistor, Wire Wound	1	.40
3537	300,000 Ohm Plate Resistor, Carbon	1	.40
3538	200,000 Ohm Plate and Series Resistors, Carbon	3	.40
3621	3315 Ohm Voltage Divider Resistor, Wire Wound	1	1.10
3622	4300 Ohm Voltage Divider Resistor, Wire Wound	1	.70
3640	120,000 Ohm Bias Resistor, Carbon	1	.40
3655	3,000 Ohm R.F. Resistor, Carbon	1	.40
3575	Antenna Transformer { Sold in matched sets of two }	1	1.00
3576	1st Detector Transformer	1	.60
3562	Can for Antenna and 1st Detector Transformer	1	.65
E.P.	Escutcheon Plate (Specify Model No. of Receiver)	1	.75
3568	Detector Plate Choke Assembly complete	1	.60
3680	R.F. Choke Coil, 5 uh	1	.10
3589	Harness Cable	1	1.00

MODEL 8 Series
Schematic

U.S. RADIO & TELEVISION CORP.

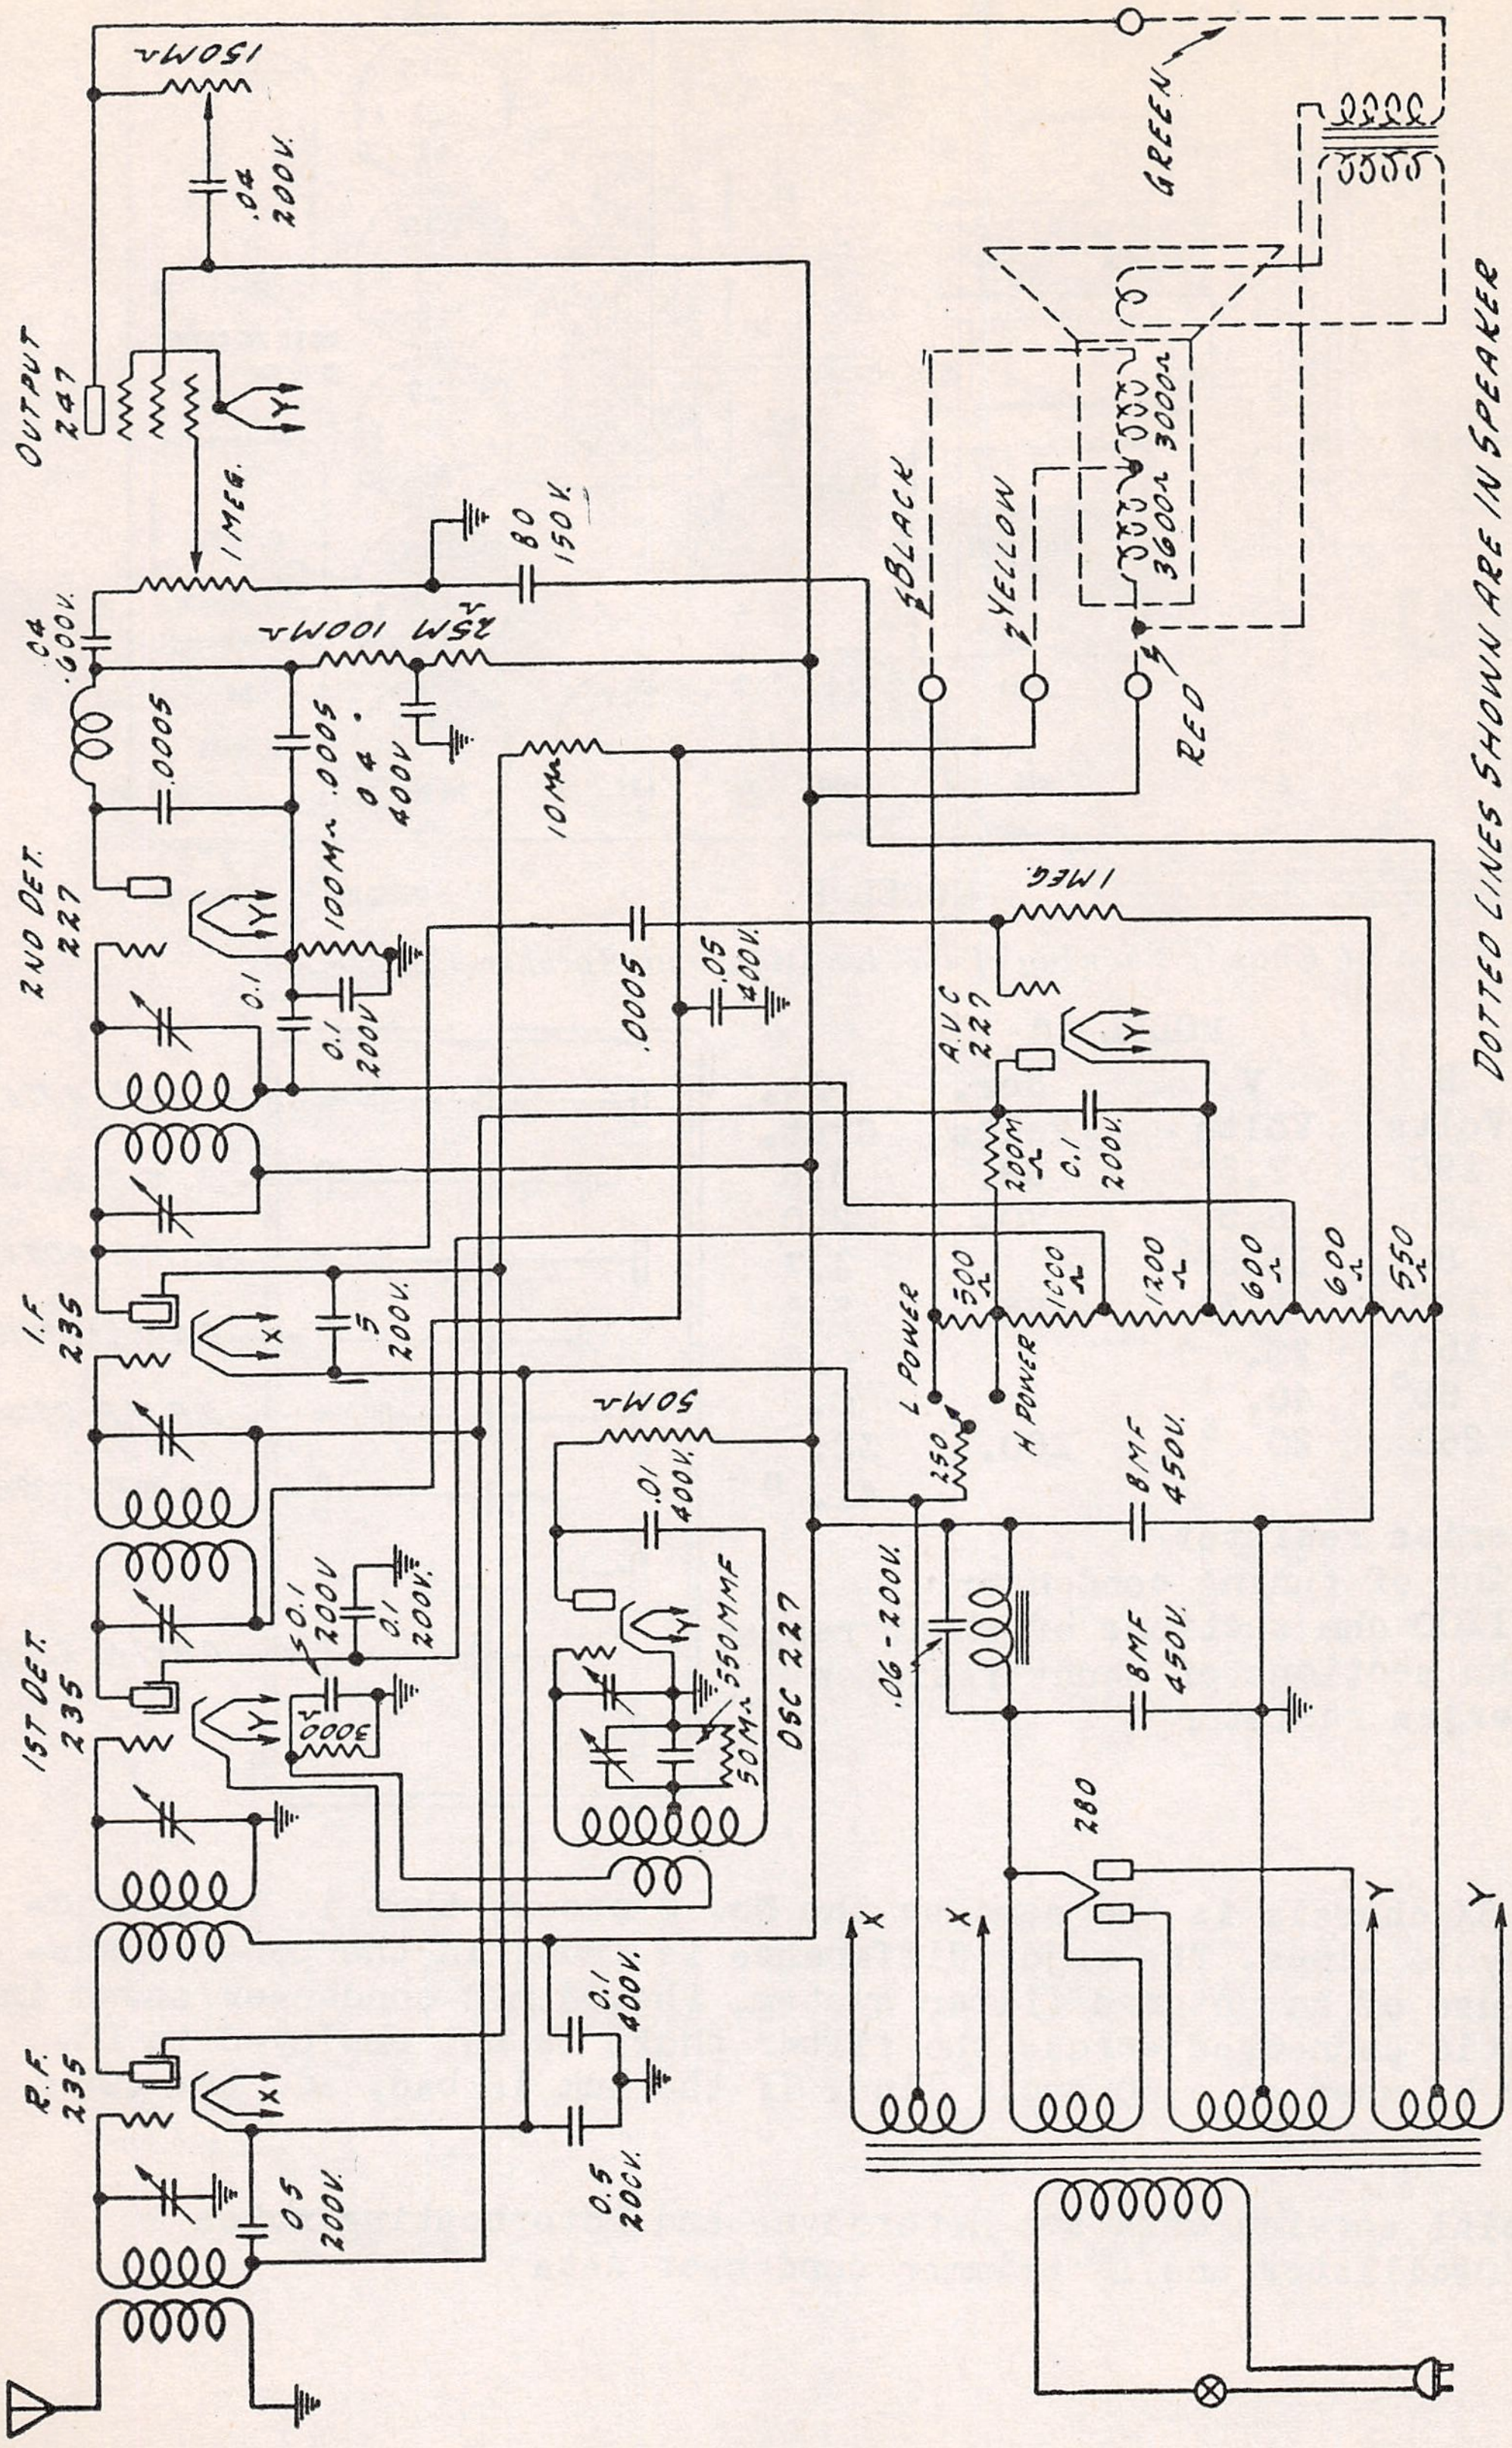
150MA
.04 200V.
OUTPUT 247
1 MEG.
.04 600V.
25M
100MA
80 150V.
.0005
.0005
100MA
.04 400V
2ND DET. 227
0.1
0.1 200V
10MA
.0005
.05 400V.
I.F. 235
.5 200V.
50MA
.01 400V.
1ST DET. 235
0.1 200V
0.1 200V.
3000
550MMF
50MA
OSC 227
R.F. 235
.05 200V.
0.1 400V.
0.5 200V.
GREEN
BLACK
YELLOW
RED
3600Ω
3000Ω
DOTTED LINES SHOWN ARE IN SPEAKER
1 MEG.
AVC 227
200M Ω
0.1 200V.
500Ω
1000Ω
1200Ω
600Ω
600Ω
550Ω
L POWER
H POWER
250Ω
8 MF 450V.
8 MF 450V.
.06-200V.
280
X
X
Y
Y

IF PEAK 262 KC

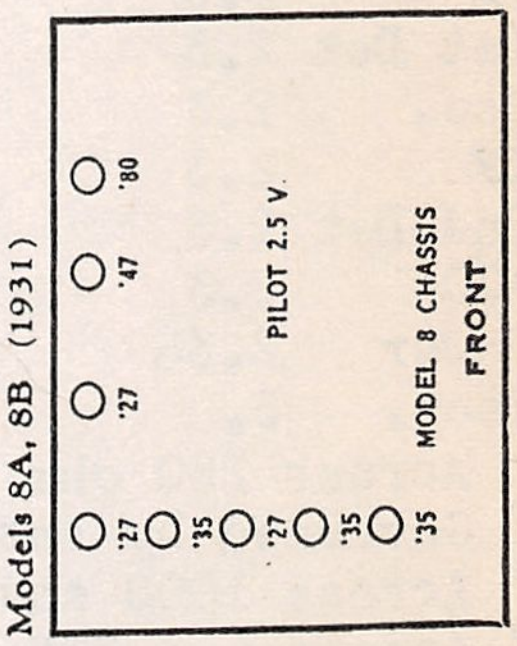
Models 8A, 8B (1931)
'27
'35
'27
'35
'27
'35
'27
'47
'80
PILOT 2.5 V.
MODEL 8 CHASSIS
FRONT

MODEL 8 Series
Socket - Voltage
Condenser Data

U. S. RADIO & TELEVISION CORP.

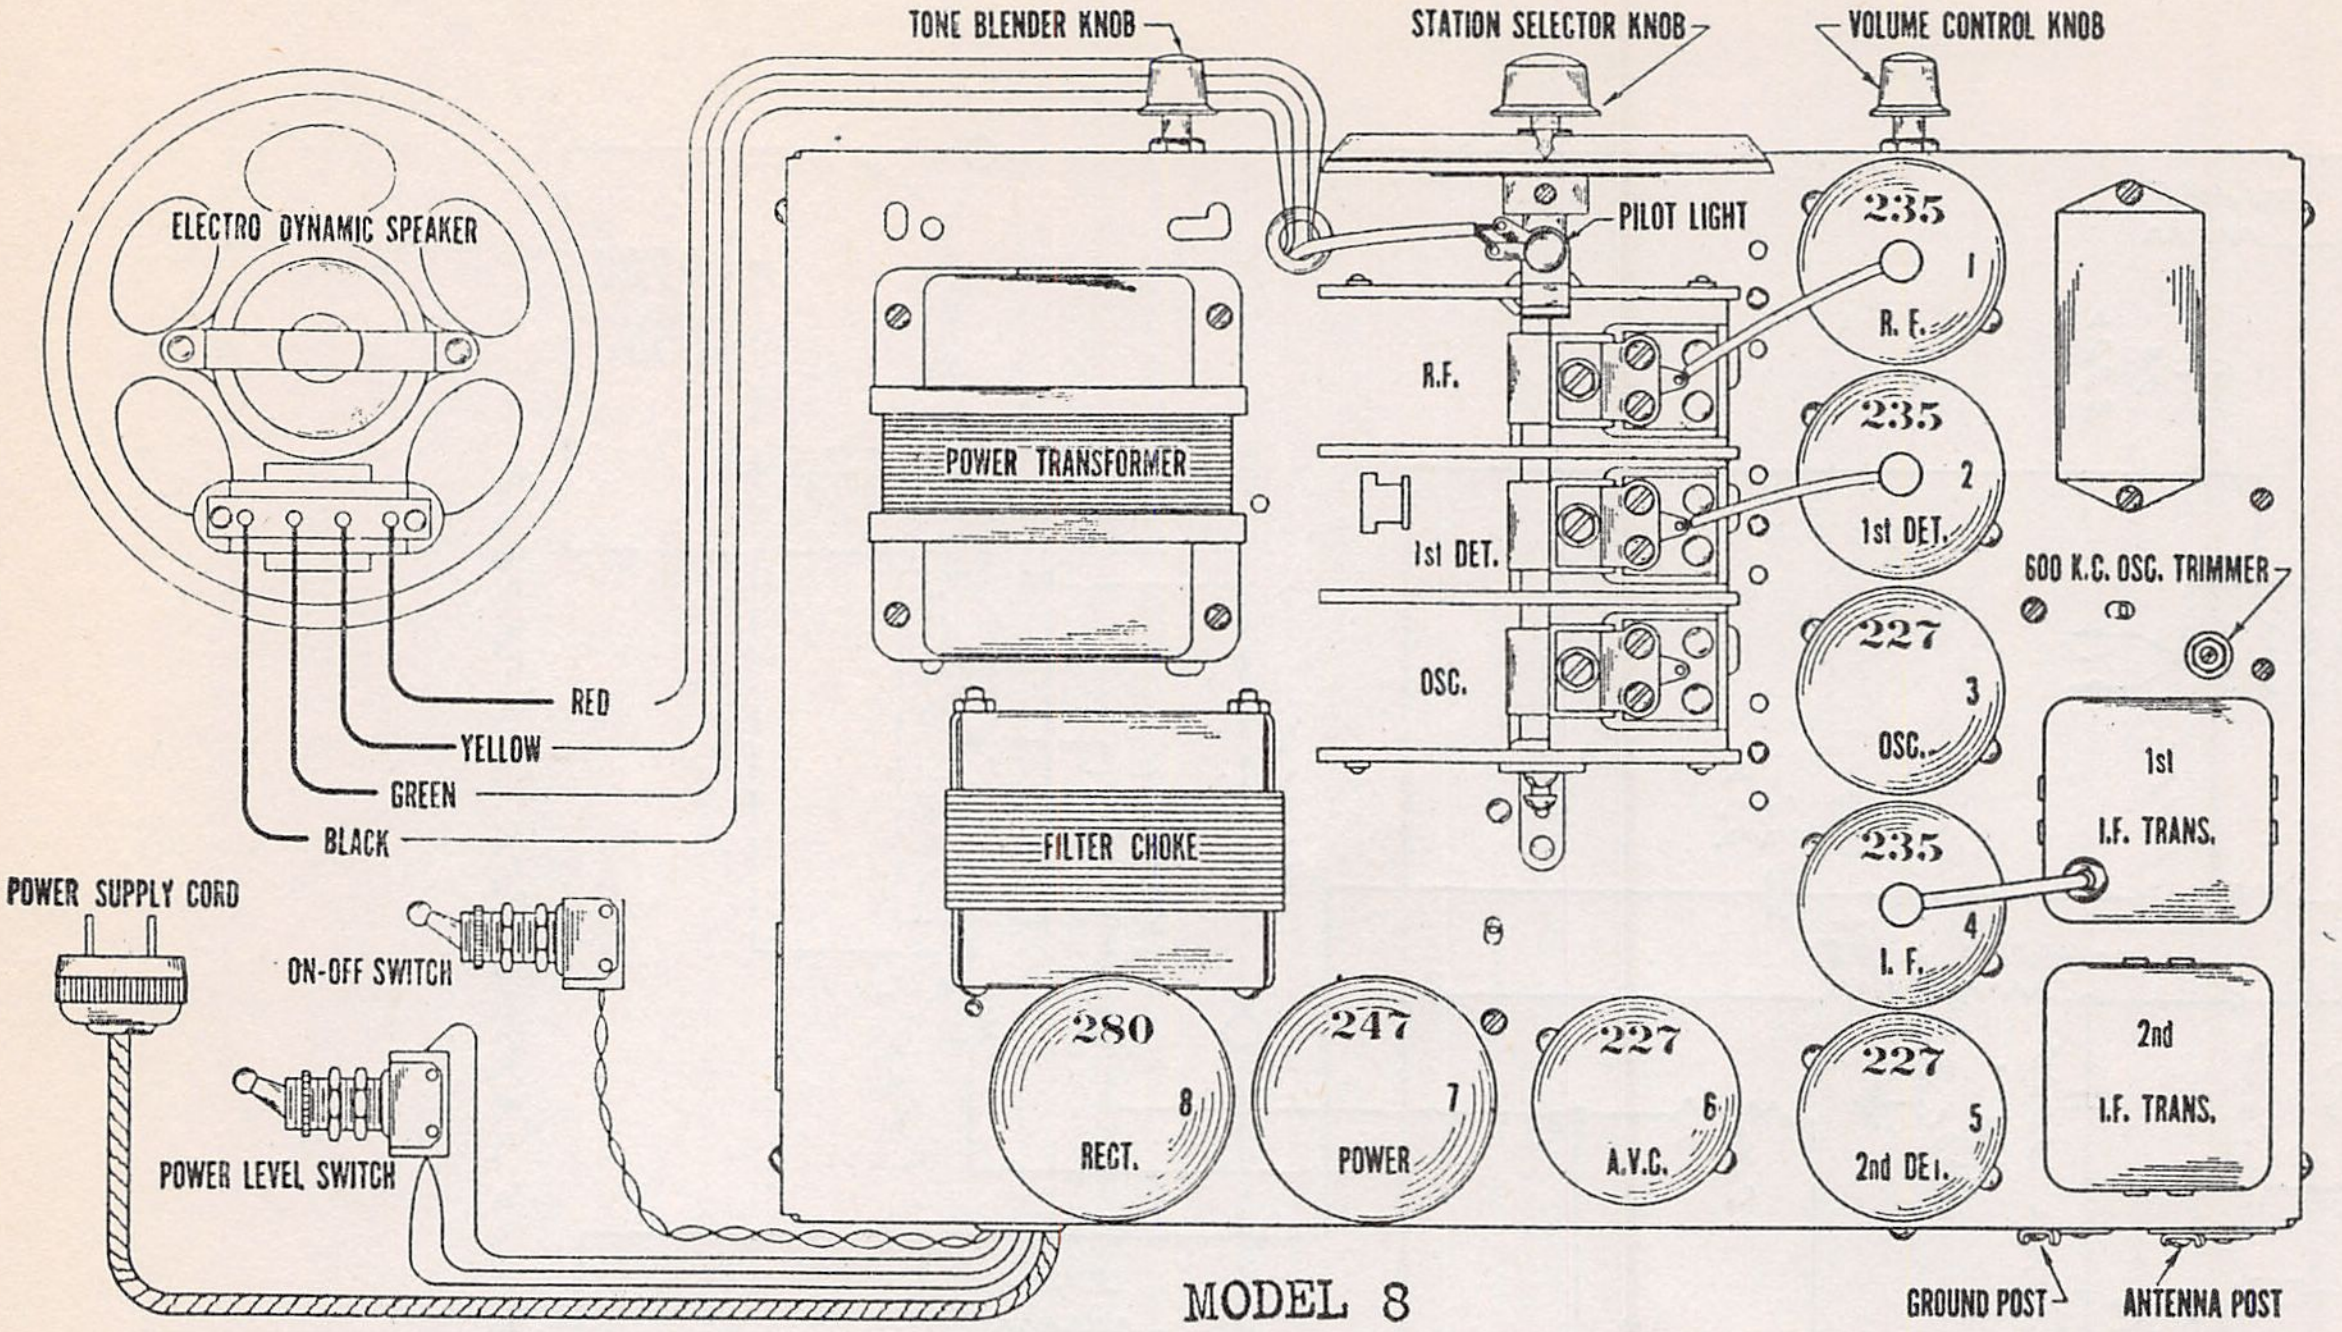
TONE BLENDER KNOB
STATION SELECTOR KNOB
VOLUME CONTROL KNOB
ELECTRO DYNAMIC SPEAKER
PILOT LIGHT
235
1
R. F.
R.F.
POWER TRANSFORMER
235
2
1st DET.
1st DET.
600 K.C. OSC. TRIMMER
227
3
OSC.
OSC.
RED
YELLOW
GREEN
BLACK
1st
I.F. TRANS.
FILTER CHOKE
235
4
I. F.
POWER SUPPLY CORD
ON-OFF SWITCH
280
8
RECT.
247
7
POWER
227
6
A.V.C.
227
5
2nd DET.
2nd
I.F. TRANS.
POWER LEVEL SWITCH
GROUND POST
ANTENNA POST

MODEL 8

Top View of Chassis Showing Tube Location and Speaker Connections

MODEL 8

Tube	A Volts	B Volts	V Volts	Scr. Volts	Plt. Crnt.
RF	2.3	190	2.3[1]	68.	3.8
1st Det	2.3	190	6.5	70.	2.0
Osc.	2.3	80	15-50[2]		4.7
IF	2.3	190	2.3[1]	68.	3.6
2nd Det	2.3	150	20.		.4
AVC	2.3	65[3]	40.[1]		0.
Power	2.35	260	20[5]	280.	32.
Rect.	5.				41.[6]

[1] Across 250 ohm series resistor
[2] Governed by setting of tuning condenser
[3] Across 1000 and 1200 ohm sections of shunt resist
[4] Across two 600 ohm sections of shunt resistor
[5] Across 550 ohm series resistor
[6] Per Anode.

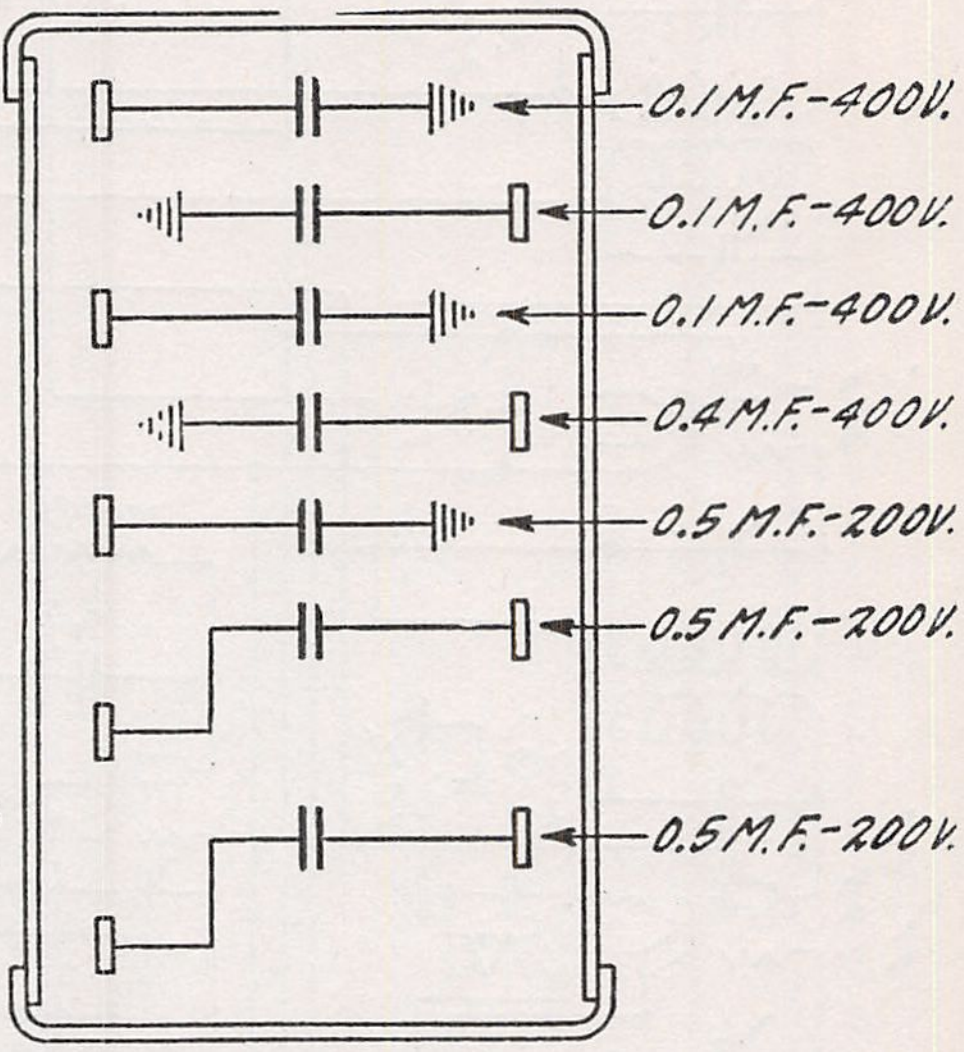
0.1 M.F.-400V.
0.1 M.F.-400V.
0.1 M.F.-400V.
0.4 M.F.-400V.
0.5 M.F.-200V.
0.5 M.F.-200V.
0.5 M.F.-200V.

The No. 8X chassis is the same as the No. 8 except that it is intended for use on 25 cycle lines. The major difference is found in the power transformer and in the use of an untuned filter system. The .06 mfd condenser shown in the model 8 schematic connected across the filter choke is not employed in 8X. The 8X chassis may be used on a 60 cycle line. If the hum is bad, add the .06 mfd condenser.

For special service data see Heterodyne and Motorboating notes and RF, Oscillator and IF trimmer condenser data

U. S. RADIO & TELEVISION CORP.

MODEL 8 Series
Chassis View
Parts List

NO. 8 CHASSIS. REPLACEMENT PARTS

Part No.	Description
929	50,000 Ohm Bias and Series Resistors, Carbon
1348	100,000 Ohm Bias and Series Resistors, Carbon
1751	200,000 Ohm Series Resistor, Carbon
1754	250 Ohm Bias Resistor, Wire Wound
2811	4450 Ohm Voltage Divider Resistor
2856	25,000 Ohm Series Resistor, Carbon
2857	10,000 Ohm Series Resistor, Carbon
2858	1 Megohm Grid Resistor, Carbon
2861	Tone Blender 0—150,000 Ohm
2962	Volume Control 0—1 Megohm
3087	3,000 Ohm Bias Resistor, Wire Wound
2304	.0005 Mfd. Coupling and By-Pass Condensers
2716	.01 Mfd. Oscillator Condenser
2803	8 Mfd. Electrolytic Condenser Unit, 450 Volts
2810	Clamp for 2803 Electrolytic Condenser Units
2852	8 Mfd. Electrolytic Condenser Unit, 150 Volts
2849	Clamp for 2852 Electrolytic Condenser Unit
2808	7-Section Condenser Block
2832	Oscillator 600 K.C. Trimmer Condenser
2851	.04 Mfd. Coupling and By-pass Condensers
2853	550 Mfd. Oscillator Condenser
2854	.06 Mfd. Choke and By-Pass Condensers
2923	3-Gang Variable Condenser Assembly Complete Less Drive
2927	.1 Mfd. By-pass Condensers
115	Pilot Light Lamp, 2.5 Volts
2946	Pilot Light Bracket with Leads
861	Attachment Cord and Plug
678	Ground Binding Post
2333	Antenna Binding Post Assembly
701	Tube Socket—280
703	Tube Socket—227
2757	Tube Socket—247
2805	Tube Socket—235
1312	Terminal Insulator
1436	On-Off Escutcheon Plate
2948	Power Level Escutcheon Plate
2881	Escutcheon Plate
2813	Antenna Transformer } Sold In Matched Sets of Three
2814	1st Detector Transformer
2815	Oscillator Transformer
2809	R.F. Transformer Shield Can
2824	Tube Shield
2879	Tube Shield Wing Nuts
2783	Power Transformer, 60 Cycle, 115 Volt
3084	Power Transformer, 25 Cycle, 115 Volt
2830	1st Intermediate Assembly Complete with Can
2831	2nd Intermediate Assembly Complete with Can
2842	Adjusting Screw for Intermediate Condenser
2850	Special Hex Nut for Intermediate Condenser
2392	On-Off Switch and Leads
2936	Power Level Switch and Leads
2883	Drive Assembly Complete with Dial Chart
2902	Dial Chart Assembly
2895	Pointer Tension Spring for Drive
2847	Chassis End Plates

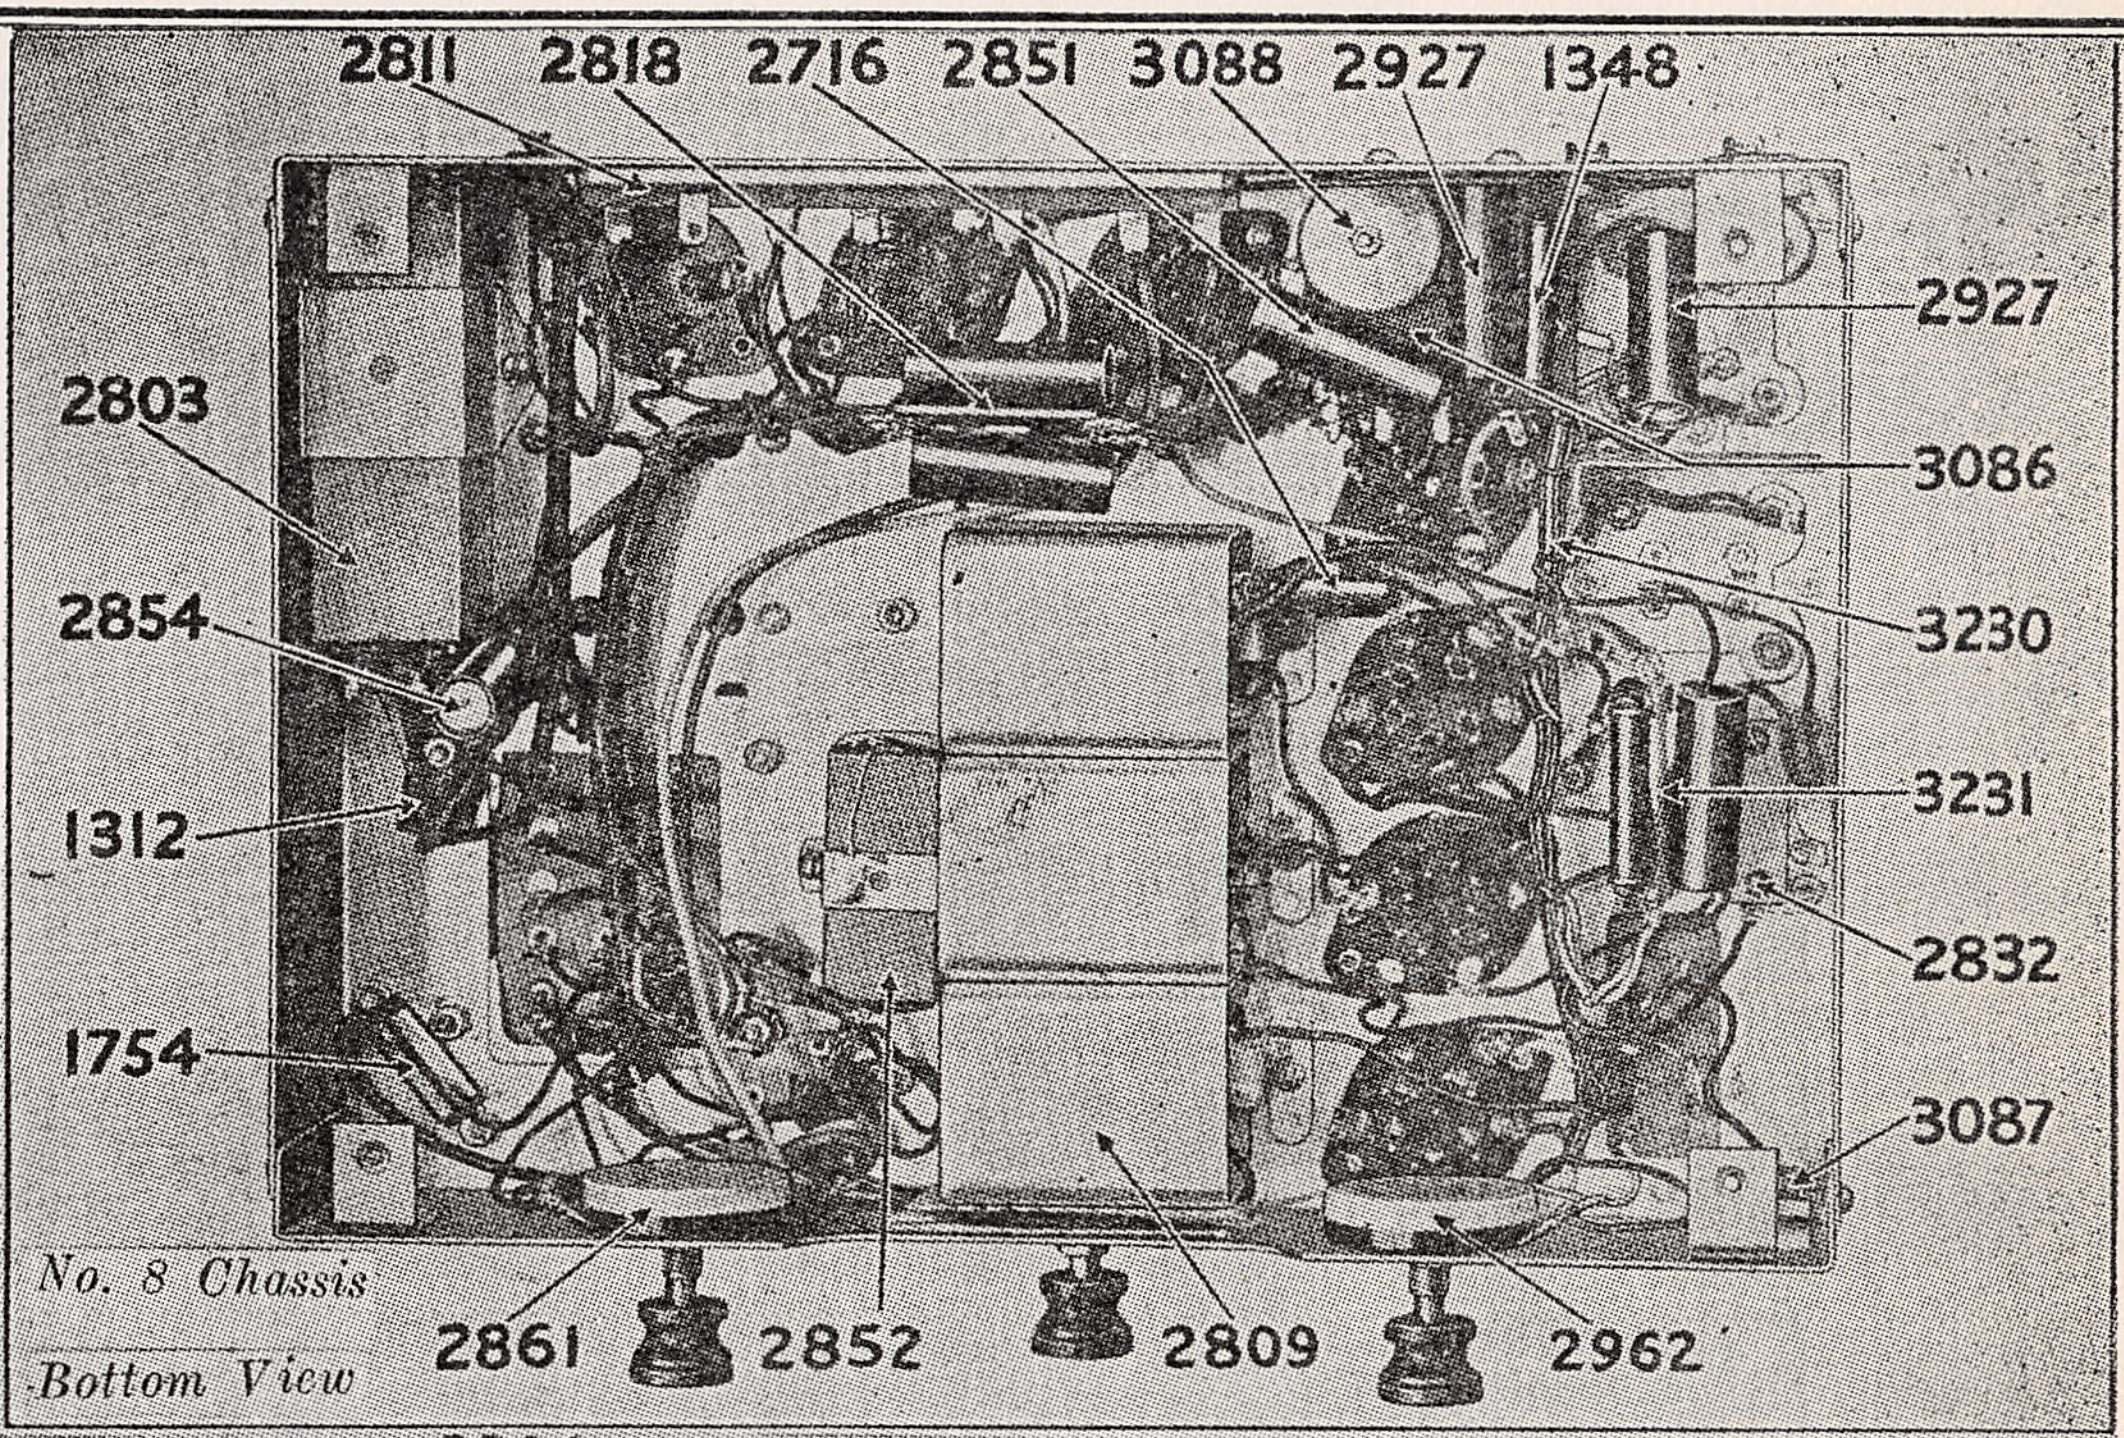

No. 8 Chassis
Bottom View

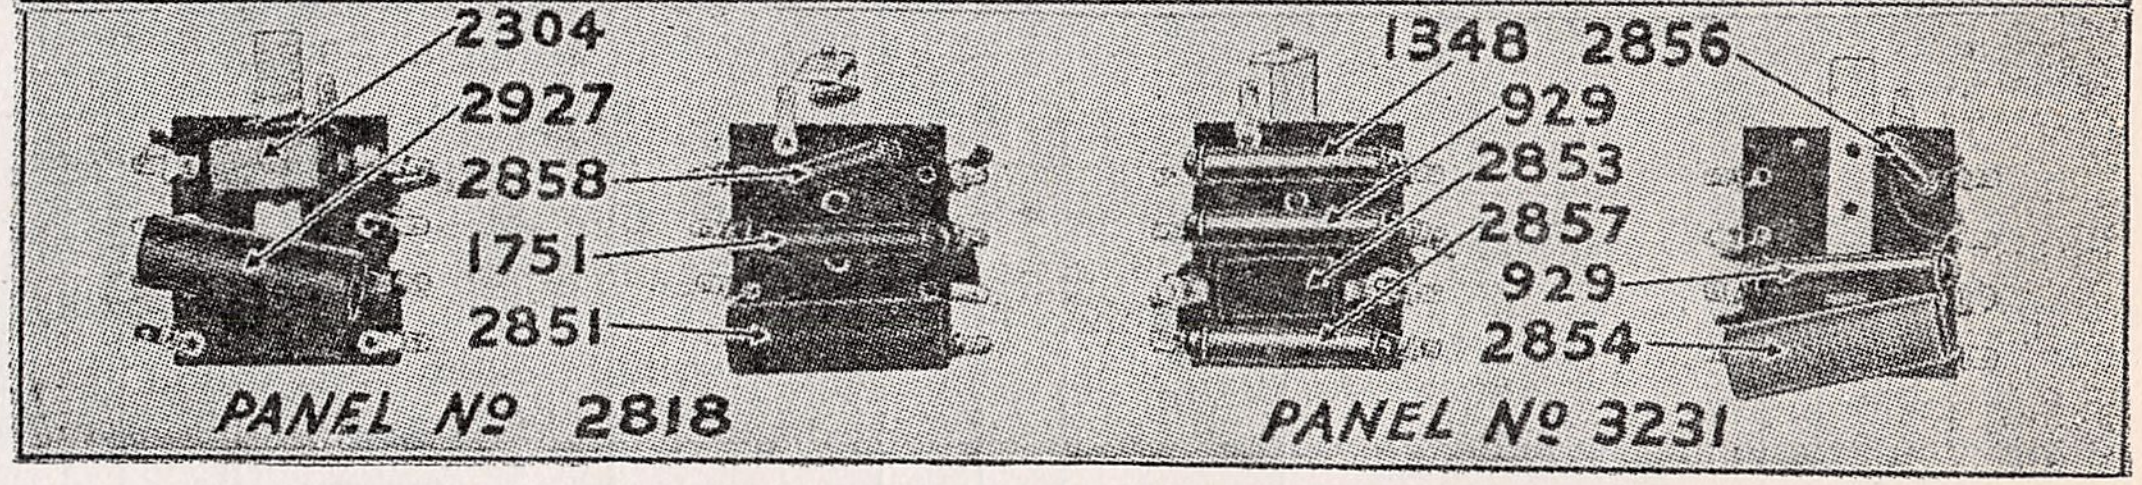

Resistor and Condenser Panels No. 8 Chassis

2932	Filter Choke Assembly
2818	Resistor and Condenser Panel Assembly Complete
3231	Resistor and Condenser Panel Assembly Complete
3086	2nd Detector Panel Assembly Complete with Socket
1766	Detector Plate Choke Coil
3088	Shield Can for Detector Plate Choke Coil
2801	8" D.C. Electrodynamic Speaker for No. 8 Chassis
3294	Field Coil for Speaker
3298	Transformer for Speaker
2608	Terminal Strip for Speaker
3295	Terminal Strip Cover for Speaker
3296	Head Assembly Complete including Cone, Housing, Voice Coil, Spider and Pot Magnet Front Piece for Speaker
3297	Pot Magnet Back Piece for Speaker

MODEL 10
Schematic

U. S. RADIO & TELEVISION CORP.

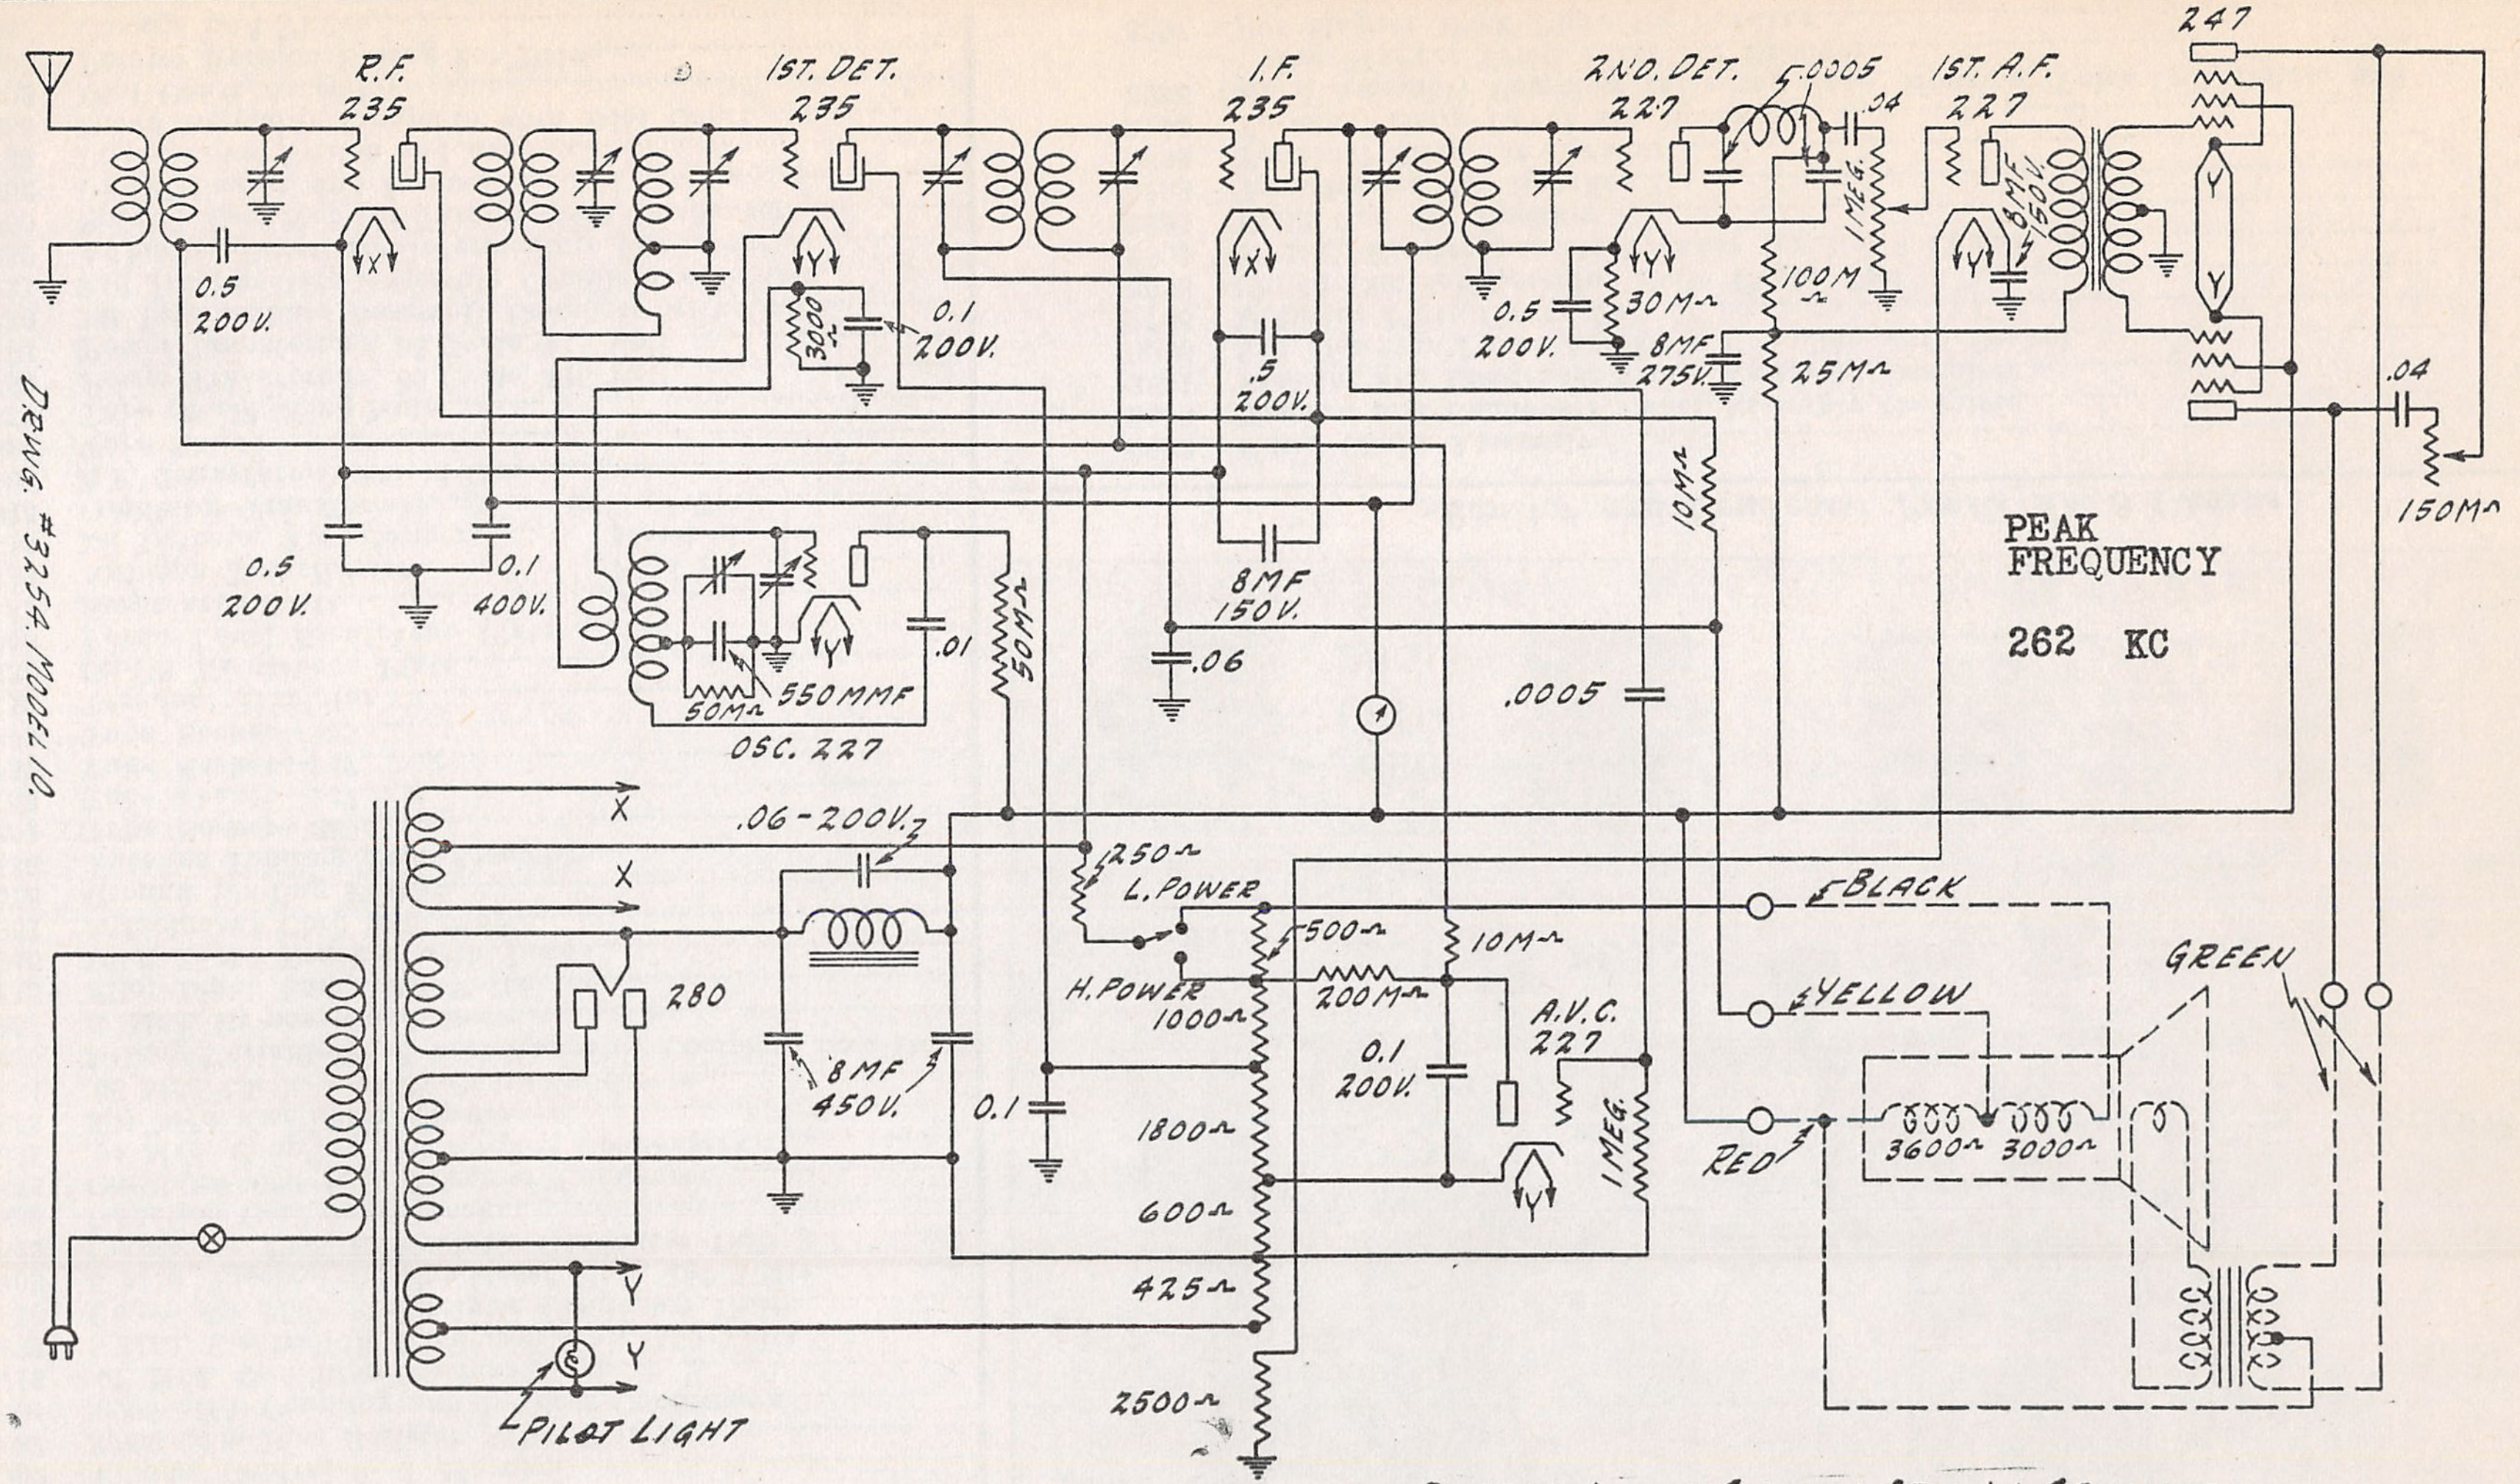
R.F. 235
1ST. DET. 235
I.F. 235
2ND. DET. 227
1ST. A.F. 227
247
.0005
.04
0.5 200V.
0.1 200V.
3000
.5 200V.
8MF 150V.
.06
0.5 200V.
30M
8MF 275V.
1MEG.
100M
25M
10M
8MF 150V.
.04
150M
0.5 200V.
0.1 400V.
.01
50M
550MMF
50M
OSC. 227
.0005
X
X
.06-200V.
280
8MF 450V.
0.1
250
L. POWER
H. POWER
1000
1800
600
425
2500
500
200M
10M
0.1 200V.
A.V.C. 227
1MEG.
BLACK
YELLOW
RED
GREEN
3600
3000
Y
Y
PILOT LIGHT

PEAK FREQUENCY

262 KC

DRWG. #3254. MODEL 10.

DOTTED LINES SHOWN ARE IN SPEAKER

Chassis No. 10X is almost identical in construction with chassis No. 10, except that it is designed for 25 cycle, 115 volt operation. All parts as used in the No. 10 chassis are used in the No. 10X with the exception of the power transformer and .06 Mfd. choke tuning condenser. The correct power transformer for the No. 10X chassis is shown in the parts price list.

The No. 10X, 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. If there is excessive hum it will be necessary to secure a .06 Mfd. condenser, Part No. 2854, and connect it in the circuit across the filter choke. The reverse is not true, that is, the No. 10, 60 cycle receiver cannot be operated satisfactorily from a 25 cycle power supply.

No. 10 Series Super-Heterodyne

U. S. RADIO & TELEVISION CORP.

MODEL 10
Voltage
Socket

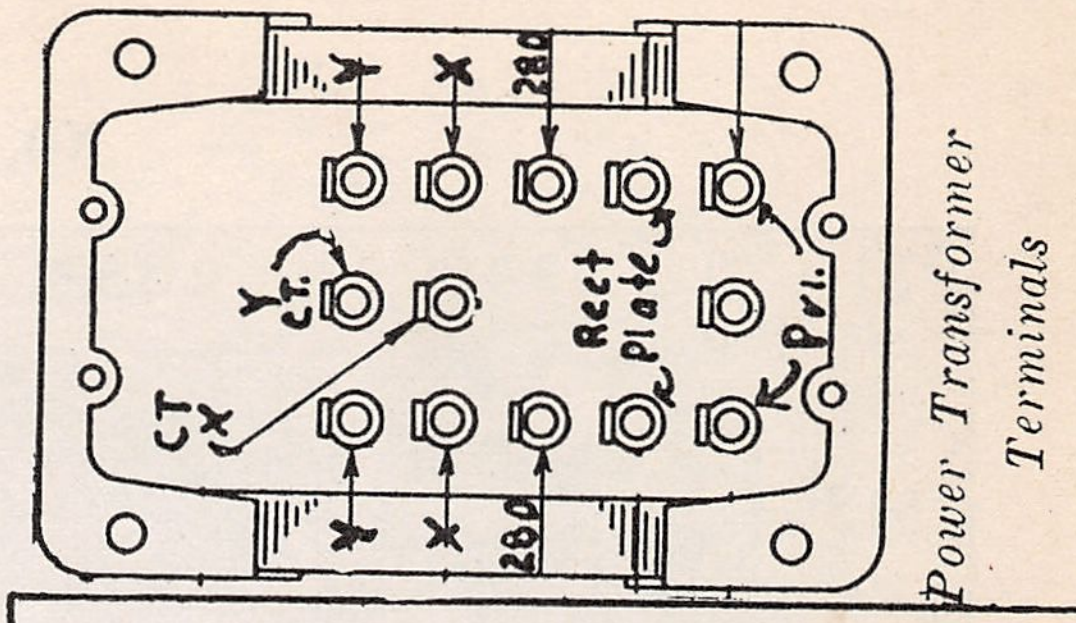
Y
X
280
Y
CT
CT
X
Rect
Plate
Pri.
Y
X
280

Power Transformer Terminals

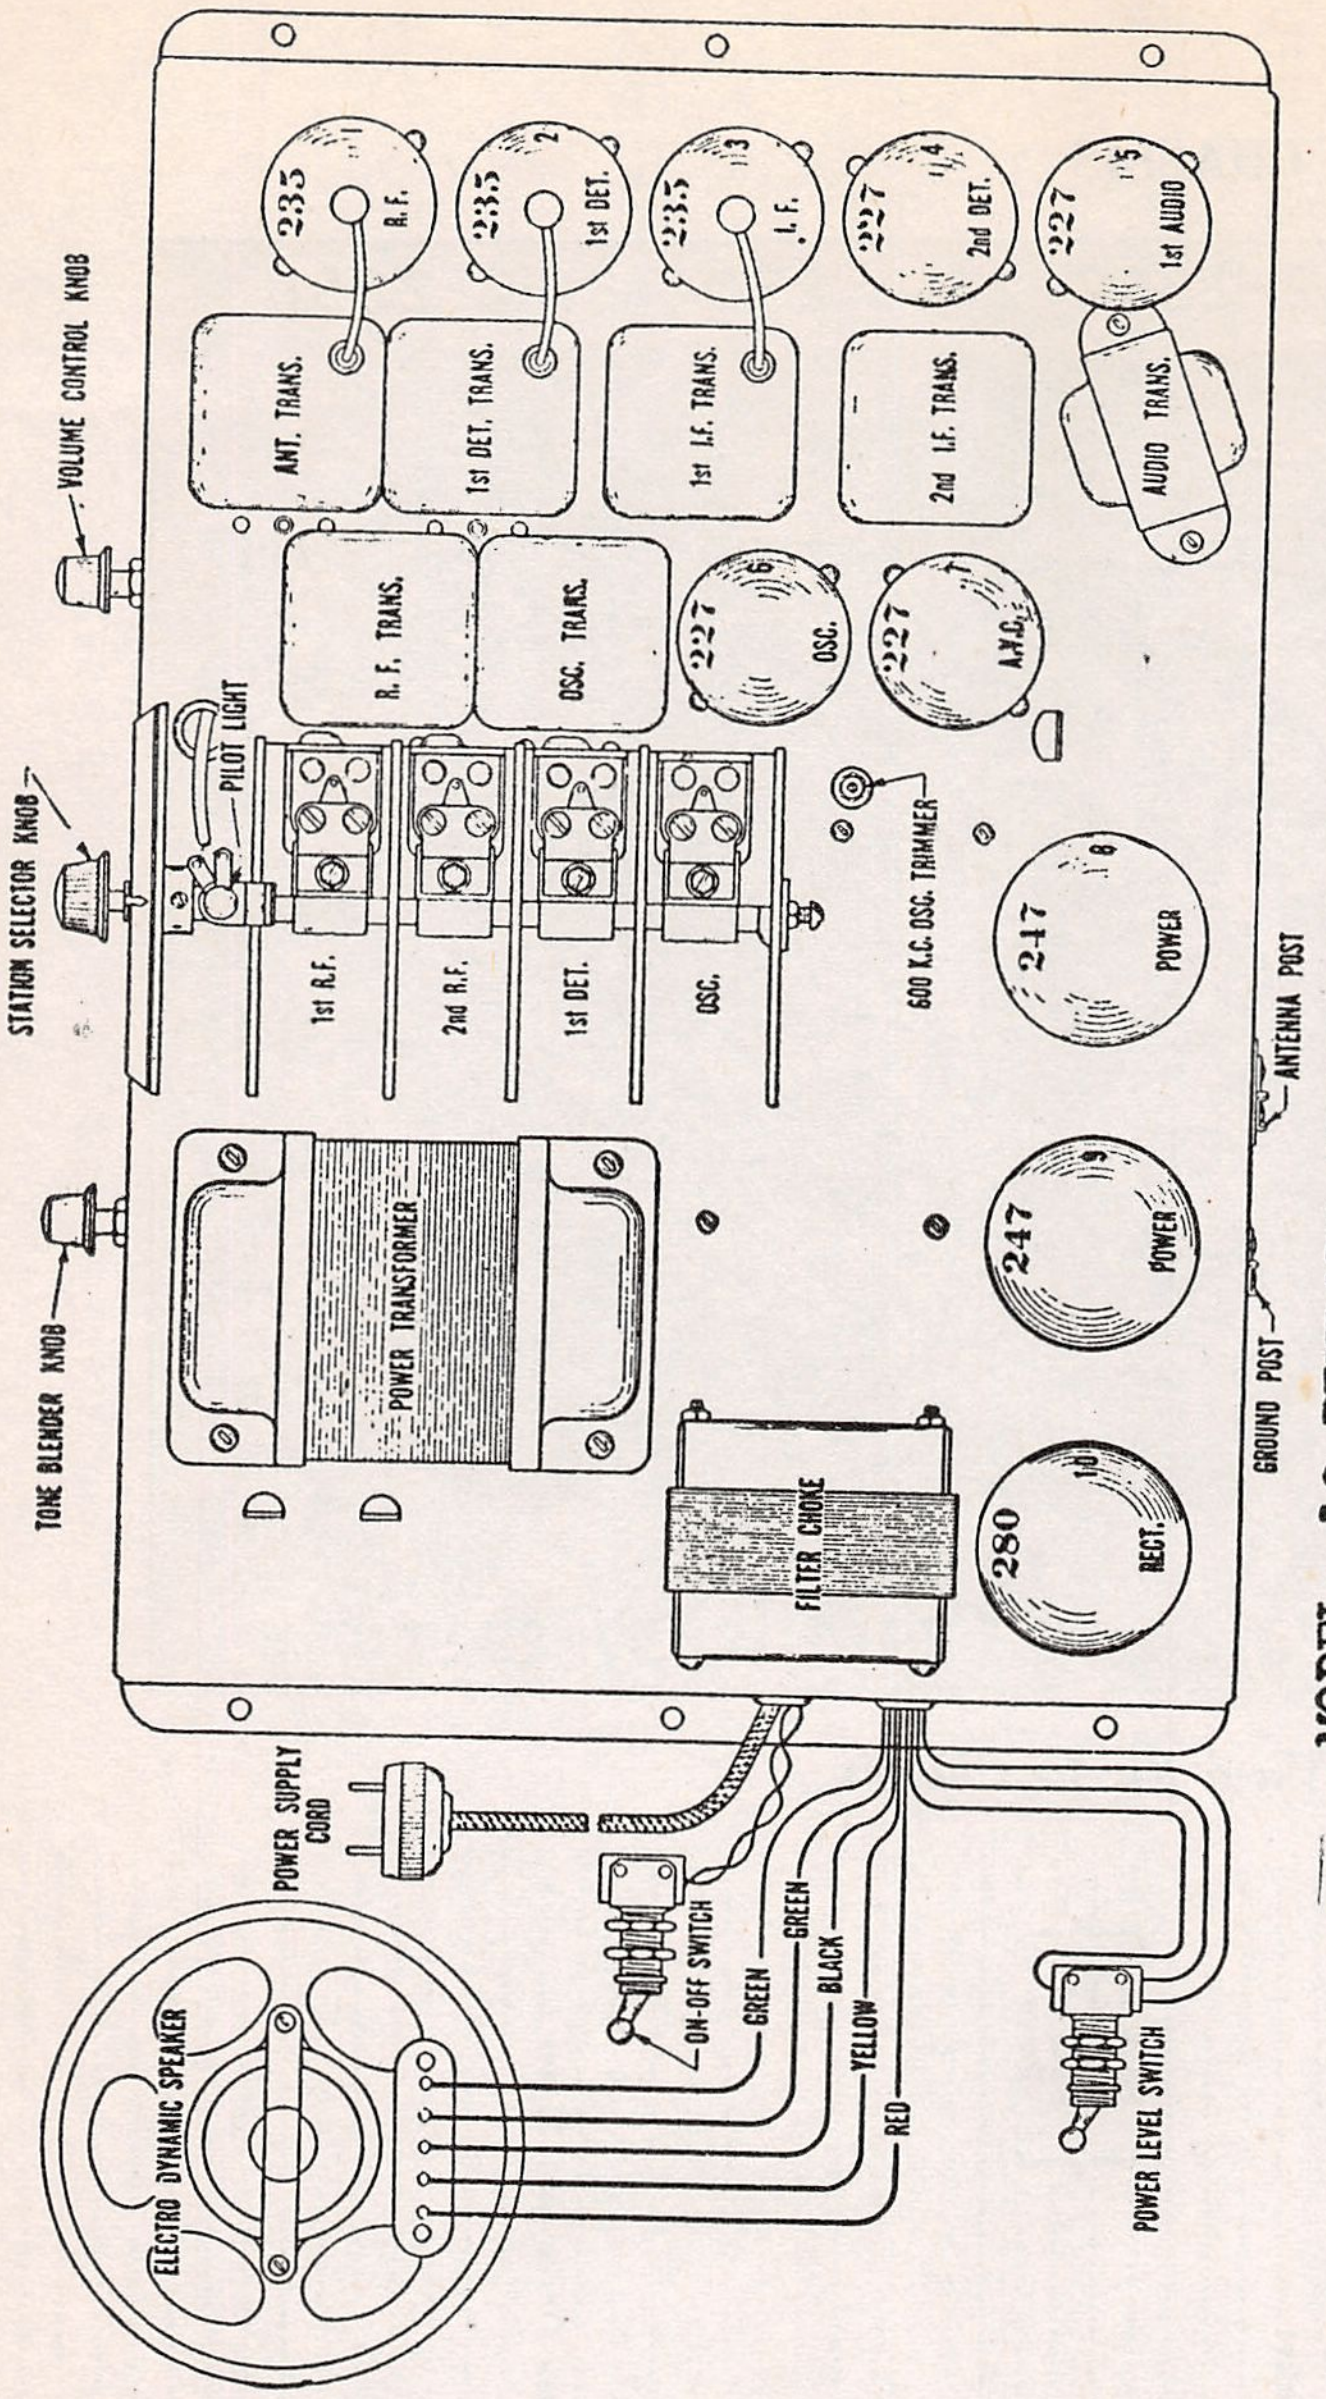
235
R.F.
235
1st DET.
235
I.F.
227
2nd DET.
227
1st AUDIO
ANT. TRANS.
1st DET. TRANS.
1st I.F. TRANS.
2nd I.F. TRANS.
AUDIO TRANS.
R. F. TRANS.
OSC. TRANS.
227
OSC.
227
A.V.C.
VOLUME CONTROL KNOB
PILOT LIGHT
STATION SELECTOR KNOB
1st R.F.
2nd R.F.
1st DET.
OSC.
600 K.C. OSC. TRIMMER
247
POWER
ANTENNA POST
POWER TRANSFORMER
247
POWER
TONE BLENDER KNOB
GROUND POST
FILTER CHOKE
280
RECT.
POWER SUPPLY CORD
ON-OFF SWITCH
GREEN
GREEN
BLACK
YELLOW
RED
ELECTRO DYNAMIC SPEAKER
POWER LEVEL SWITCH

MODEL 10 PENTODE SUPERHETERODYNE

Tube	A Volts	B Volts	C Volts	Scr. Volts	Plt. Crnt.
RF	2.3	175.	2.3[1]	65	4.0
1st Det	2.3	185.	7.0	69	2.0
IF	2.3	175	2.3[1]	65	4.0
2nd Det	2.3	115	12.		.4
1st AF	2.3	145	11.[2]		4.6
Osc.	2.3	83	15-35[3]		4.2
AVC	2.3	89[4]	20.[5]		0.
Power	2.35	255	18.5	265	21.
Power	2.35	255	18.5	265	21.
Rect.	4.9				45.[6]

1 Across 250 ohm series resistor
2 Across 2500 ohm series resistor
3 Governed by setting of tuning condenser
4 Across 1000 and 1800 ohm sections of shunt resistor.
5 Across 600 ohm section of shunt resistor
6 Per Anode.

Heterodyne Whistle

A heterodyne whistle in the Super-heterodyne Receiver may be caused by a beat between a harmonic of the I.F. signal and an R.F. signal.

A whistle can be brought about at 786 K.C., 1048 K.C. or 1310 K.C. if the 2nd detector filter choke is shorted or if the antenna lead is under this choke. The above mentioned frequencies are harmonics of the intermediate frequency of 262 K.C. and as they fall within the broadcast band can cause an audible beat with an R.F. signal.

A whistle can also be brought about between 540 and 600 K.C. if the I.F. tuning condensers are adjusted at too high a frequency rather than at 262 K.C. If they are adjusted, for example, at 280 K.C. the second harmonic is 560 K.C. which falls within the broadcast band and can beat with an R.F. signal.

Blocking or Motorboating

Blocking or motorboating in the No. 10 chassis may be due to an open grid in the 1st detector or I.F. stage. Check these circuits if motorboating is experienced. Motorboating may also be caused if the 10,000 ohm series resistor in the I.F. and R.F. screen line is shorted.

If the A.V.C. tube is not operating properly motorboating may result. Try out a new tube and check the A.V.C. circuit. Blocking or motorboating may also be due to open R.F. and I.F. screen by-pass condenser and to various other defective filter and by-pass condensers.

MODEL 10
Chassis View
Parts List

U. S. RADIO & TELEVISION CORP.

NO. 10 CHASSIS

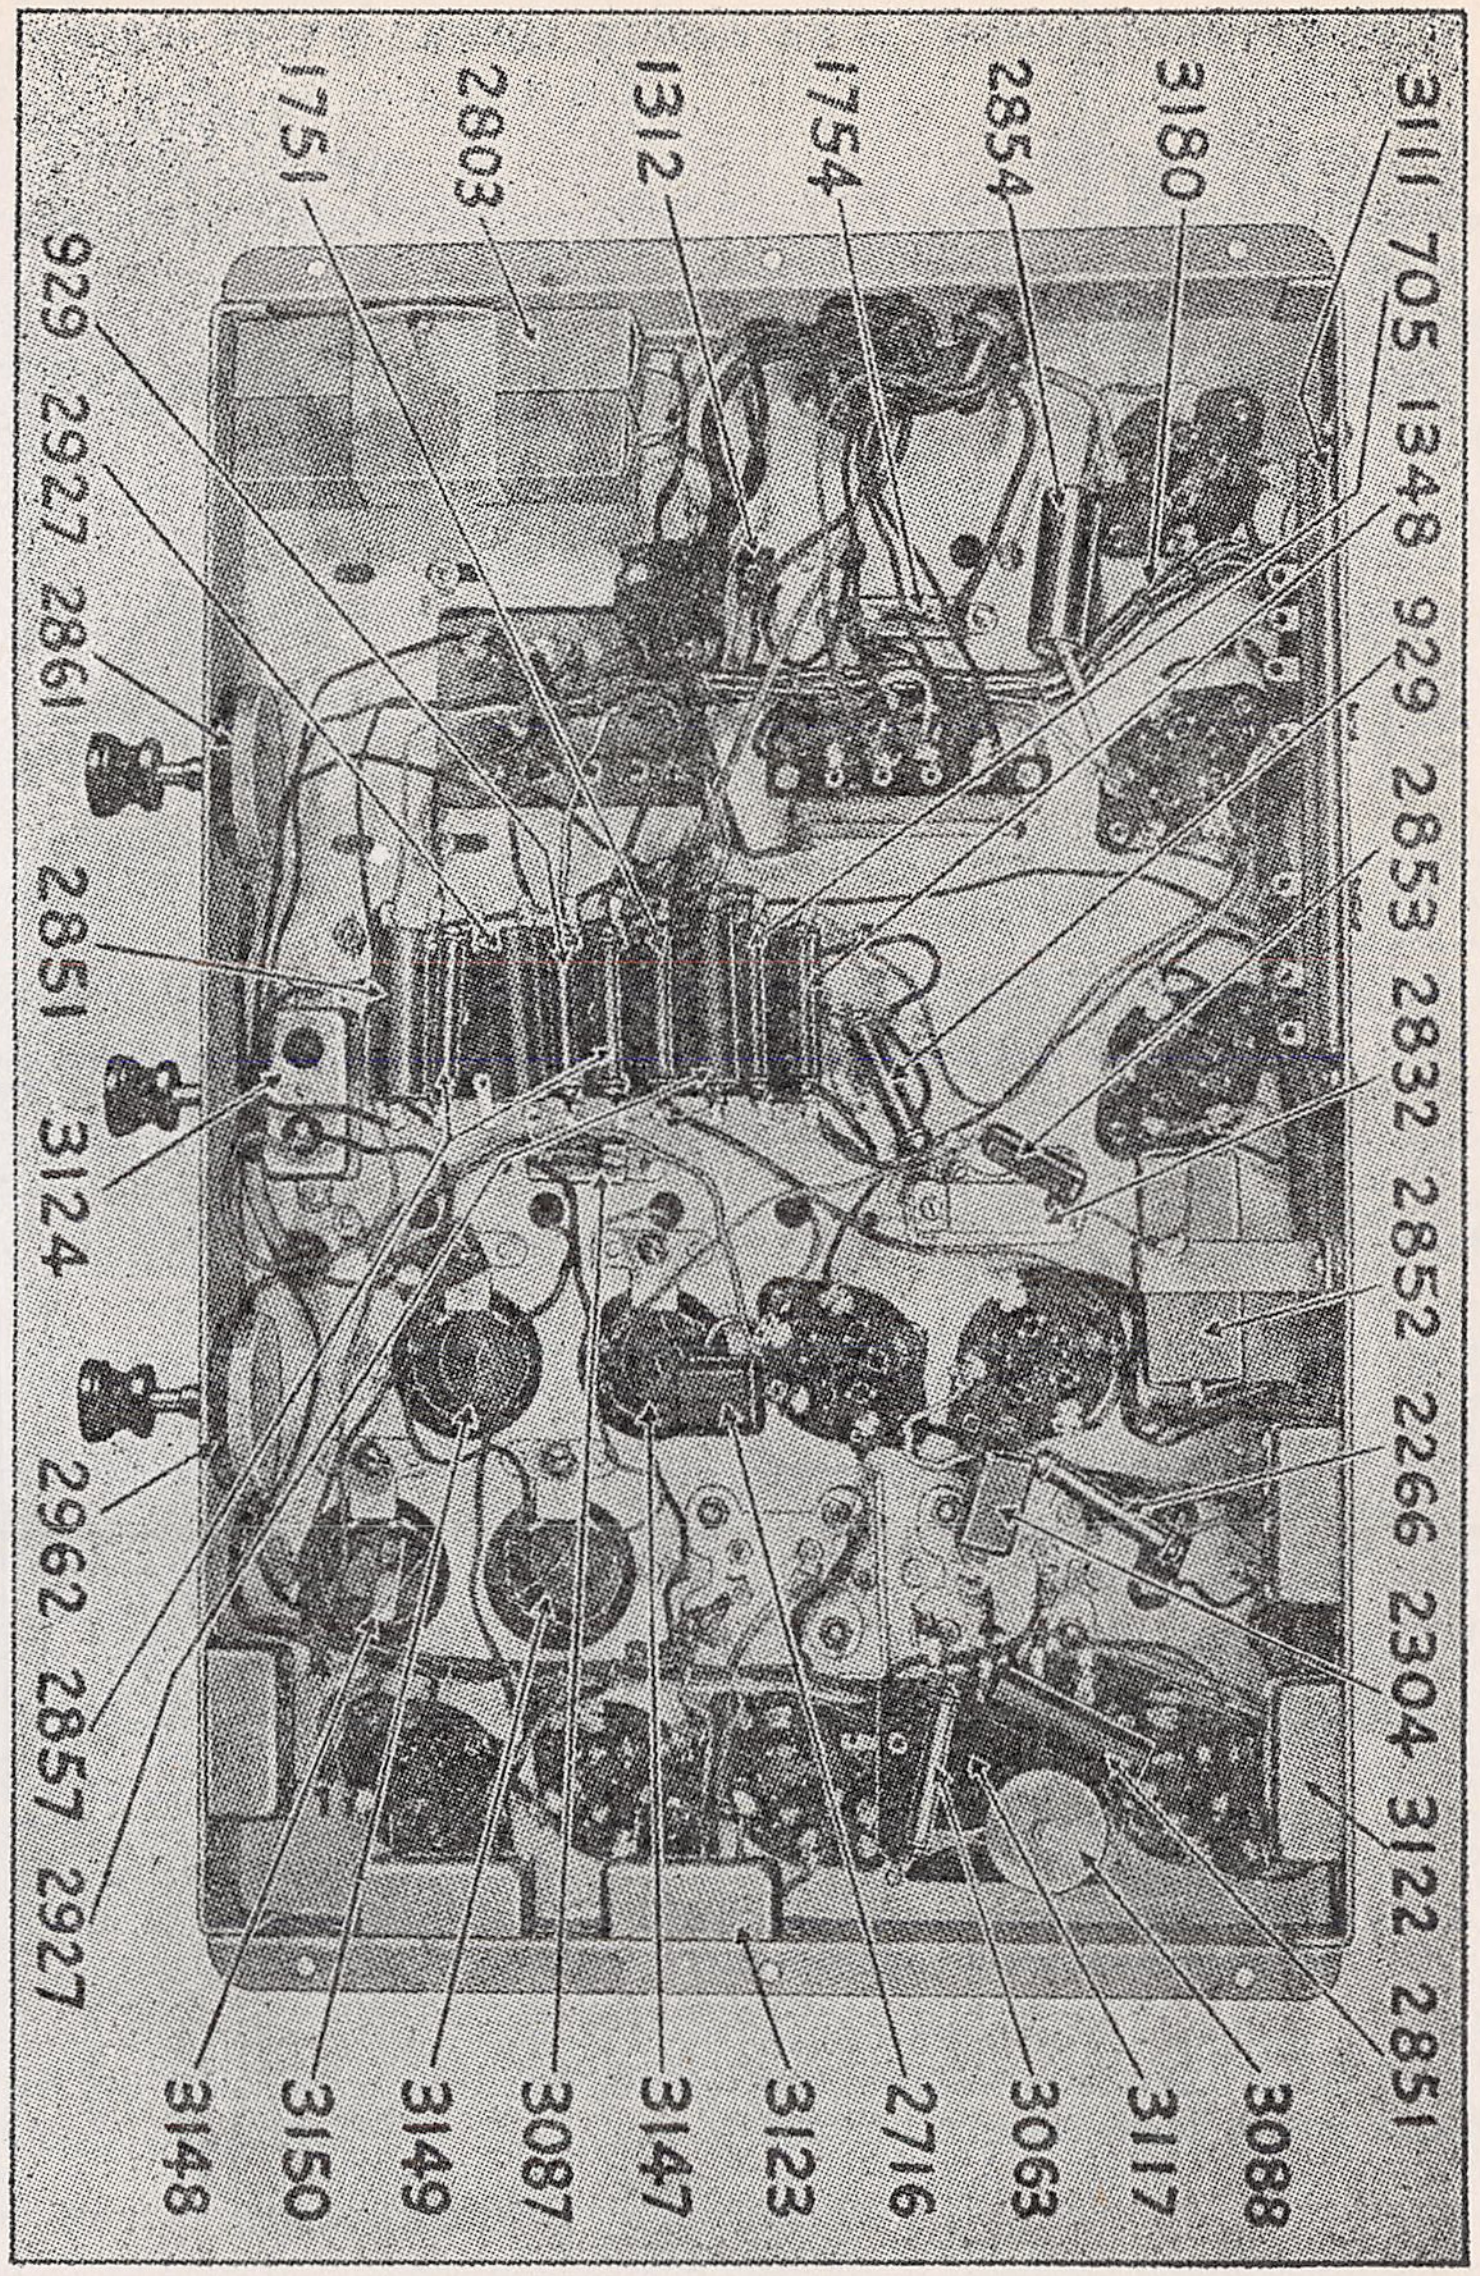

Bottom View No. 10 Chassis

No. 10 Chassis

Part No.	*Description*	
705	25,000 Ohm Series Resistor, Carbon	
929	50,000 Ohm Bias and Series Resistors, Carbon	
1348	100,000 Ohm Series Resistor, Carbon	
1751	200,000 Ohm Series Resistor, Carbon	
1754	250 Ohm Bias Resistor, Wire Wound	
2266	1 Megohm Resistor	
2857	10,000 Ohm Series Resistors, Carbon	
2861	Tone Blender 0—150,000 Ohm	
2962	Volume Control 0—1 Megohm	
3063	30,000 Ohm Bias Resistor, Carbon	
3087	3,000 Ohm Bias Resistor, Wire Wound	
3111	6825 Ohm Voltage Divider Resistor	
2304	.0005 Mfd. Coupling and By-Pass Condensers	
2716	.01 Mfd. Oscillator Condenser	
2719	8 Mfd. Electrolytic Condenser Unit, 275 Volt	
2803	8 Mfd. Electrolytic Condenser Unit, 450 Volt	
3112	Clamp for 2803 Electrolytic Condenser Units	
2852	8 Mfd. Electrolytic Condenser Unit, 150 Volt	
3113	Clamp for 2852 Electrolytic Condenser Unit	
3190	Auxiliary Bracket for 2852 Electrolytic Condenser Unit	
2832	Oscillator 600 K.C. Trimmer Condenser	
2851	.04 Mfd. Coupling and Filter Condensers	
2853	550 Mmfd. Oscillator Condenser	
2854	.06 Mfd. Choke Condenser	
2927	.1 Mfd. By-Pass Condensers, 200 Volts	
3122	.5 Mfd. By-Pass Condensers, 200 Volts	
3123	Dual .1—.05 Mfd. Condenser, 200 Volt	
3124	.1 Mfd. By-Pass Condenser, 400 Volt	
3114	Resistor and Condenser Panel Assembly, Complete	
1766	Detector Plate Choke Coil	
3088	Shield Can for Detector Plate Choke Coil	
3117	2nd Detector Panel Assembly, Complete with Socket	
678	Ground Binding Post	
2333	Antenna Binding Post Assembly	
1312	Terminal Insulators	
3148	Antenna Transformer	**Sold in Matched Sets of Four**
3150	R.F. Transformer	
3149	1st Detector Transformer	
3147	Oscillator Transformer	
3180	Chassis Harness	
701	Tube Socket—280	
703	Tube Socket—227	
2757	Tube Socket—247	
2805	Tube Socket—235	
861	Attachment Cord and Plug	
1436	On-Off Escutcheon Plate	
2948	Power Level Escutcheon Plate	
2882	Escutcheon Plate	
2876	Walnut Knobs	
2392	On-Off Switch and Leads	
2936	Power Level Switch and Leads	
3175	4-Gang Variable Condenser Assembly Complete less Drive and Meter	
3121	Variable Condenser Shield	
2883	Drive Assembly Complete with Dial Chart	
2902	Dial Chart Assembly	
2895	Pointer Tension Spring for Drive	
2911	Tuning Meter	
3081	Bracket for Tuning Meter	
3181	Grid Cap Assembly	
2830	1st Intermediate Assembly Complete with Can	
2831	2nd Intermediate Assembly Complete with Can	
2842	Adjusting Screw for Intermediate Condensers	
2850	Special Hex Nuts for Intermediate Condensers	
2912	Power Transformer, 60 Cycles, 115 Volt	
3169	Power Transformer, 25 Cycles, 115 Volt	
2932	Filter Choke Assembly	
3100	Audio Transformer	

U. S. RADIO & TELEVISION CORP.

MODEL 10-C
Chassis 1000-1001
Schematic
Socket -Speaker

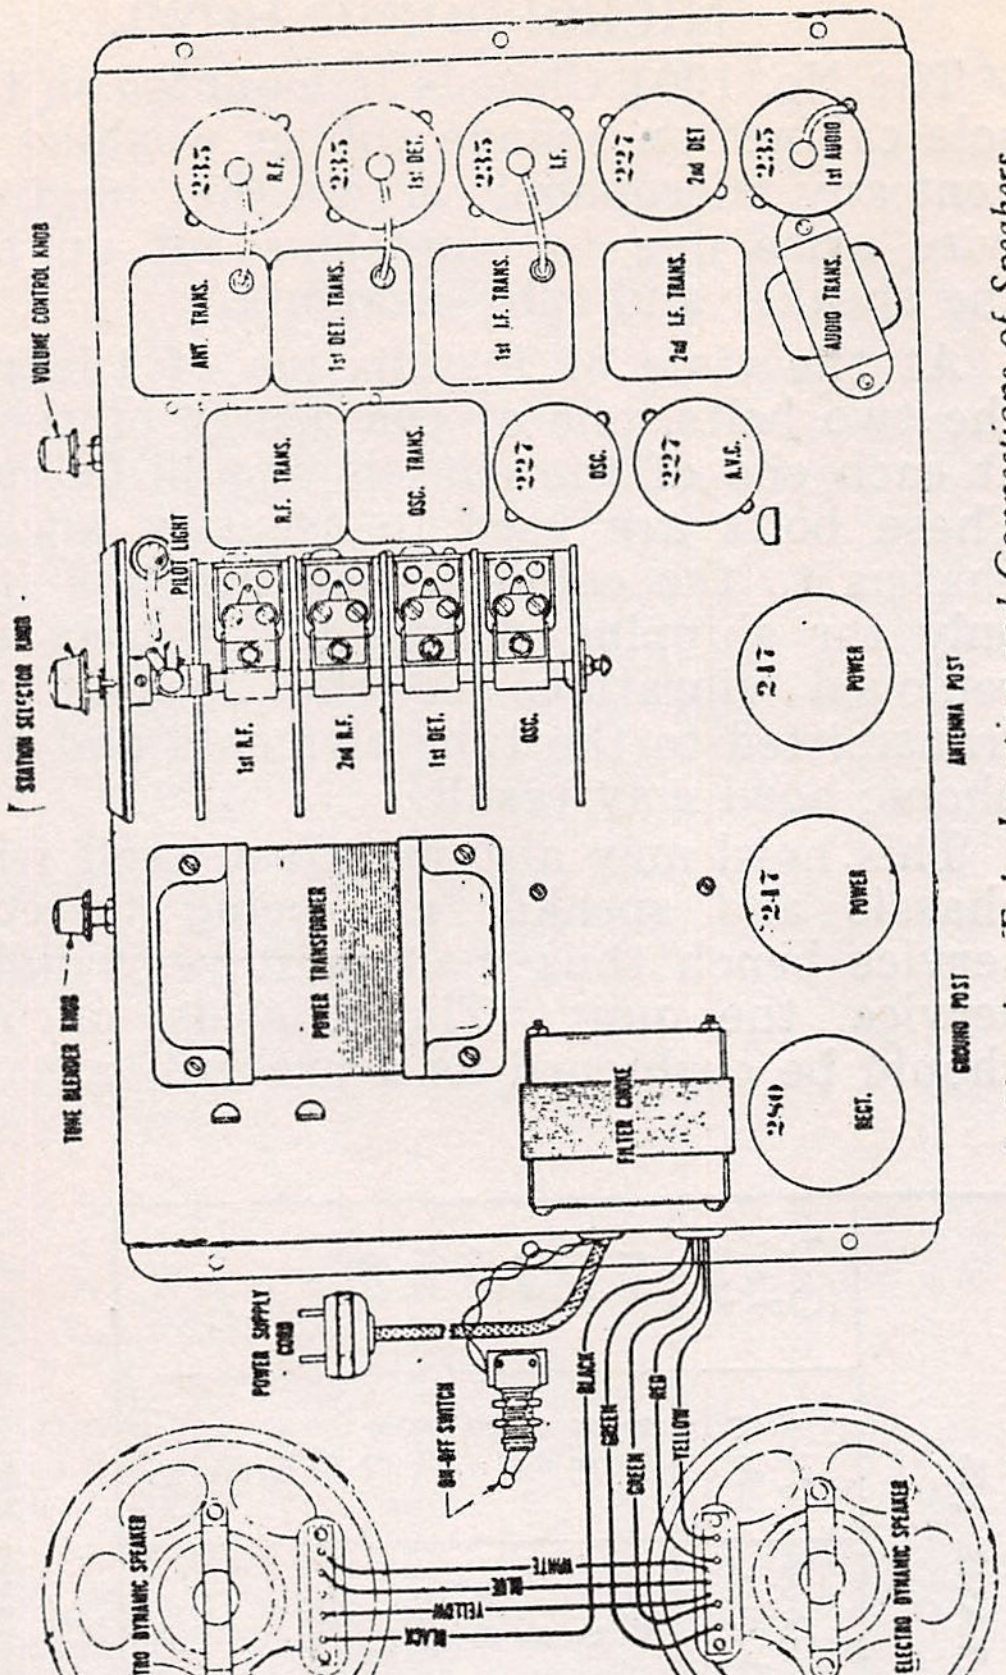
235 R.F.
235 1st Det.
235 I.F.
227 2nd Det.
235 1st Audio
Ant. Trans.
1st Det. Trans.
1st I.F. Trans.
2nd I.F. Trans.
Audio Trans.
R.F. Trans.
Osc. Trans.
227 Osc.
227 A.V.C.
Volume Control Knob
Pilot Light
Station Selector Knob
1st R.F.
2nd R.F.
1st Det.
Osc.
247 Power
247 Power
280 Rect.
Antenna Post
Ground Post
Tone Blender Knob
Power Transformer
Filter Choke
Power Supply Cord
On-Off Switch
Black
Green
Red
Yellow
White
Blue
Yellow
Black
Electro Dynamic Speaker
Electro Dynamic Speaker

Top View of Chassis Showing Tube Location and Connections of Speakers

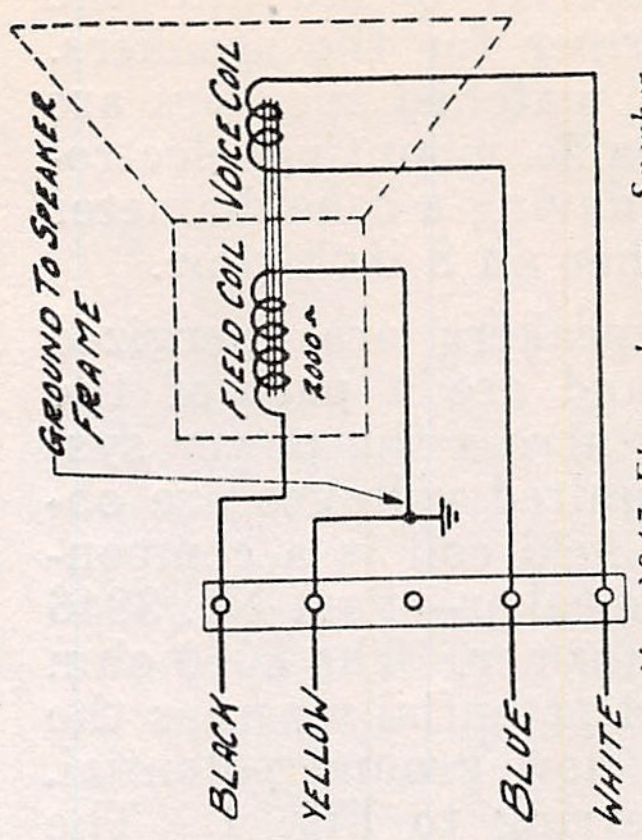
Ground to Speaker Frame
Field Coil
Voice Coil
2000Ω
Black
Yellow
Blue
White

No. 3847 Electrodynamic Speaker and Connections

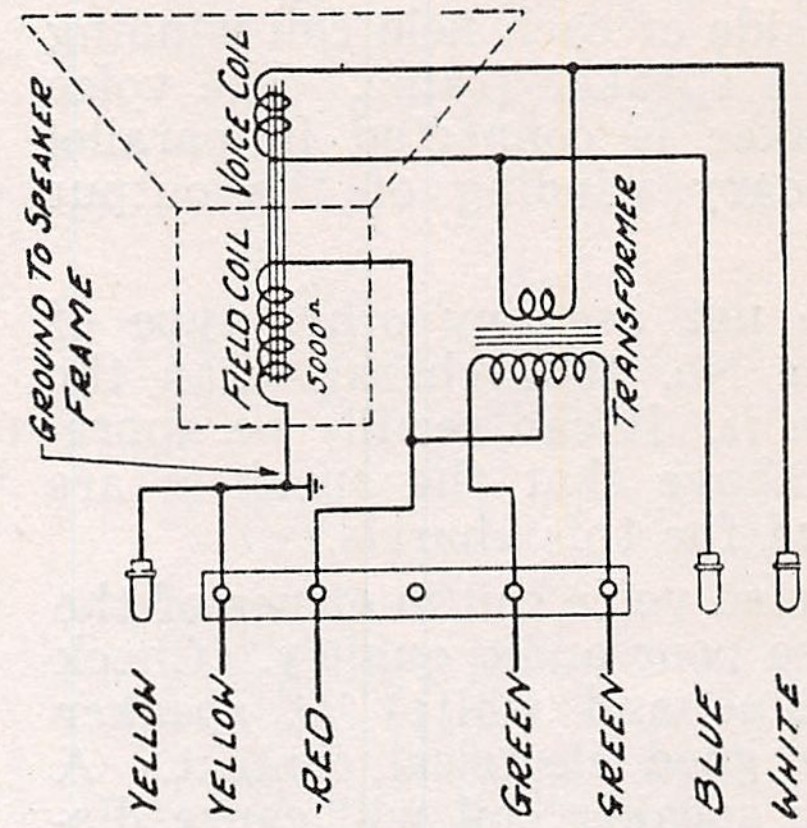
Ground to Speaker Frame
Field Coil
Voice Coil
5000Ω
Transformer
Yellow
Yellow
Red
Green
Green
Blue
White

No. 3846 Electrodynamic Speaker and Connections

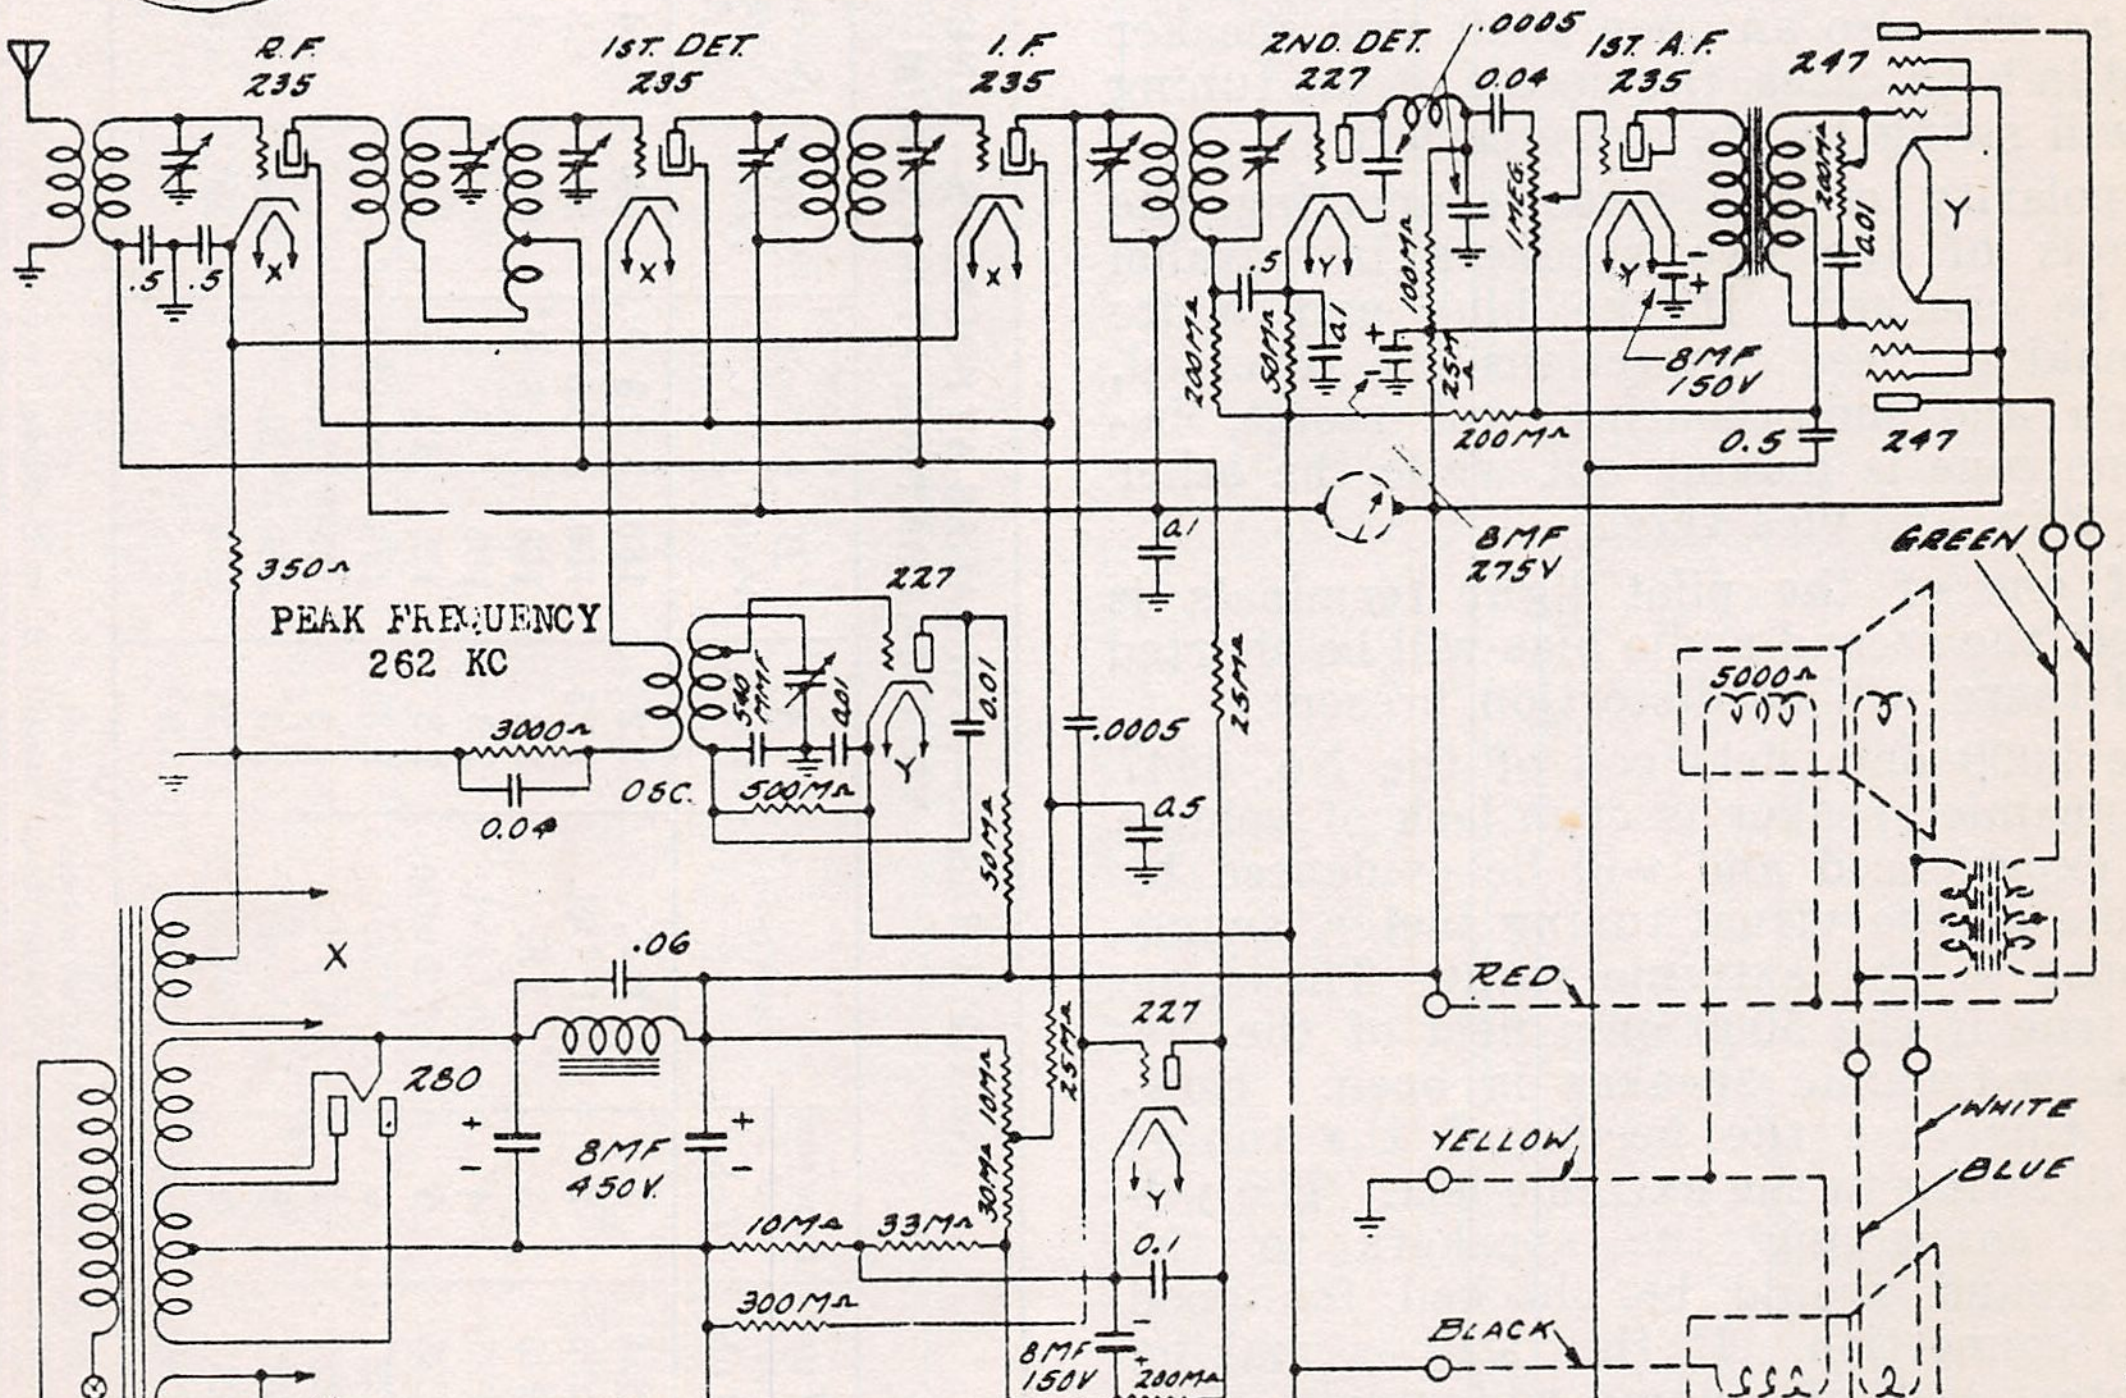
R.F. 235
1st Det. 235
I.F. 235
2nd Det. 227
.0005
0.04
1st A.F. 235
247
.5
.5
X
200MΩ
50MΩ
.1
100MΩ
25MΩ
1 Meg.
8MF 150V
2000Ω
.01
200MΩ
0.5
247
8MF 275V
.1
350Ω
PEAK FREQUENCY 262 KC
227
340 MMF
.01
.01
3000Ω
0.04
Osc.
500MΩ
.0005
25MΩ
30MΩ
.5
Green
5000Ω
X
.06
280
8MF 450V
10MΩ
10MΩ
25MΩ
227
Y
10MΩ
33MΩ
30MΩ
0.1
300MΩ
8MF 150V
200MΩ
425Ω
3000Ω
Y
Red
Yellow
White
Blue
Black
2000Ω
Pilot Light
(4002)

No 1001 Supa Heterodyne Chassis

Drwg No 4000

Dotted Lines Shown Are In Speakers

MODEL 10-C
Chassis 1000,1001
Voltage
Notes

U. S. RADIO & TELEVISION CORP.

SPEAKERS

The output of the receiver is fed into the primary of the transformer for the speakers. In the chassis No. 1001 matched speakers are used. Both are D.C. baffle mounting electrodynamic speakers—one having a cone diameter of 10 inches and the other an 8 inch cone.

The fields of both speakers are energized by the power system and are a part of the total resistance shunted across the power system from which the required voltages are obtained. The 5000 ohm field coil is a component part of the 10 inch speaker—Part No. 3846—as is the output transformer. The 5000 ohm field coil is above ground potential whereas the 2000 ohm field coil is below ground potential, as can be seen by referring to Fig. 1. The ground potential side of each field coil winding is grounded to the speaker frame. The voice coil of each speaker is connected in parallel across the secondary winding of the output transformer.

CAUTION—Do not use any other type of speakers with the No. 1001 chassis than the two supplied with it. It can readily be appreciated from the above that the speakers are especially designed for this chassis.

An open or shorted voice coil in either of the speakers will cause poor audio quality. Check voice coil tips (blue and white) at speaker terminal strip for good electrical contact. A shorted 2000 ohm speaker coil will cause distortion as will also an open 5000 ohm speaker coil, and in both cases, the needle of the tuning meter will swing to the extreme left.

The polarity of the leads connecting the voice coils of the two speakers in parallel should be checked. If the blue and white wires making these connections are reversed, distortion and motorboating will result, because one cone is moving out while the other is moving in, and vice versa.

ual. If one of the pilot light terminals is grounded, the second audio bias will be shorted out and there will be distortion present.

If the 2000 ohm field coil of the No. 3847 electrodynamic speaker is open lack of volume will be experienced and will be evidenced by the needle of the visual tuning meter, swinging almost to the extreme right. The same will be true if the 5000 ohm field of the No. 3846 electrodynamic speaker is open. However, in this case the needle of the tuning meter will swing to the extreme left. The yellow wire connecting the speakers to the chassis ground should be checked for good electrical connection. If this lead is making poor contact loss of volume will result. The tuning meter will register approximately a 50% reduction in swing at no signal.

MICROPHONIC HOWL

The No. 1001 Chassis is mounted in the console cabinet on sponge rubber washers to prevent any microphonic action that might otherwise arise due to vibrations set up between the speaker and tube elements.

At the time of installation of the receiver the two bolts, one at the center of the flange at each end of the chassis should be removed. These bolts are used to securely anchor the chassis to the cabinet shelf and are intended only for shipping purposes. If they are not removed vibrations of the speaker will be transmitted to the tube elements and a microphonic howl may result.

This howl may also manifest itself when the chassis and speaker are being tested on a service bench thus making it very difficult to service the unit. The chassis or speaker should be cushioned as a preventive.

No. 1001 CHASSIS—VOLTAGES AT SOCKETS—LINE VOLTAGE 115 VOLUME CONTROL AT MAXIMUM

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
235	1	R.F.	2.2	160	2.8 (1)	60	.4	0.	2.7	6.1
235	2	1st Det.	2.25	160	6.5	55	.3	7.	1.8	2.4
235	3	I.F.	2.2	160	2.8 (1)	60	.4	0.	2.7	6.1
227	4	2nd Det.	2.3	105	6.			5.5	.2	.3
235	5	1st Audio	2.3	125	13. (2)			7.	2.8	3.0
227	6	Osc.	2.35	110	11-28 (3)			21.	3.4	3.5
227	7	A.V.C.	2.3	55 (4)	21. (5)			1.5	0.	0.
247	8	Power	2.3	250	20. (6)	258	4.6		20.	26.
247	9	Power	2.35	250	20. (6)	258	4.6		20.	26.
280	10	Rect.	5.0						50. Per Plate	

(1) Measured across 350 ohm bias resistor.
(2) Measured across 3000 ohm bias resistor. B- to Cathode.
(3) Measured across 500 M ohm osc. bias resistor. Bias voltage varies from 11 to 28 between 1500 and 550 K.C. settings of tuning condenser.
(4) Measured from B- to A.V.C. plate.
(5) Measured from B- to A.V.C. Cathode.
(6) Measured across 425 ohm bias resistor. B- to "Y" filament.

MODEL 10-C
Chassis 1000,1001
Bottom View
Notes

U. S. RADIO & TELEVISION CORP.

No. 1000X AND No. 1001X CHASSIS

Chassis No. 1000X and No. 1001X are almost identical in construction with chassis No. 1000 and No. 1001 except that they are designed for 25 cycle, 115 volt A.C. operation. The parts used in the 60 cycle chassis are also used in those chassis designed for 25 cycle operation with the exception of the power transformer and .06 Mfd. filter choke tuning condenser. The correct power transformer for the 25 cycle chassis as well as the correct filter choke tuning condenser are shown in the Parts Price List.

The description and testing as covered in the service notes for the 60 cycle chassis also applies to the 25 cycle chassis.

The 25 cycle chassis can be operated satisfactorily from a 60 cycle power supply. However, there may be excessive hum in which case it will be necessary to change the No. 1375 .45 Mfd. choke condenser to a No. 2854 .06 Mfd. condenser. The reverse is not true, that is, the 60 cycle chassis cannot be operated satisfactorily from a 25 cycle power supply.

SUPPLEMENTARY NOTES FOR No. 1000 CHASSIS

The No. 1000 and No. 1001 Chassis are identically alike as regards the schematic circuit and the electrical constants. Referring to the schematic wiring diagram it will be noted the visual tuning meter is not drawn in solid lines but instead dotted lines are used. The significance of the dotted lines is to illustrate that the tuning meter is a component part of chassis No. 1001 whereas in chassis No. 1000 the meter is omitted the electrical circuit being completed by the joining of the two leads ordinarily connected to the meter leads on the 1001 chassis.

The electrical constants of the dual speakers used with each chassis are alike, however, the 1001 chassis has one 8 inch and one 10 inch electrodynamic speaker whereas the No. 1000 chassis utilizes two 8 inch speakers. The speakers for their respective chassis carry entirely different part numbers and these dissimilarities including other changes in a few of the parts for each chassis are enumerated in the parts list to follow.

It will be noted a number of the speaker parts for the No. 1001 chassis are interchangeable with the component parts of the speakers for the No. 1000 chassis and therefore it has not been thought necessary to make a repetition of these parts numbers in the accompanying list of the changes in parts for the No. 1000 chassis.

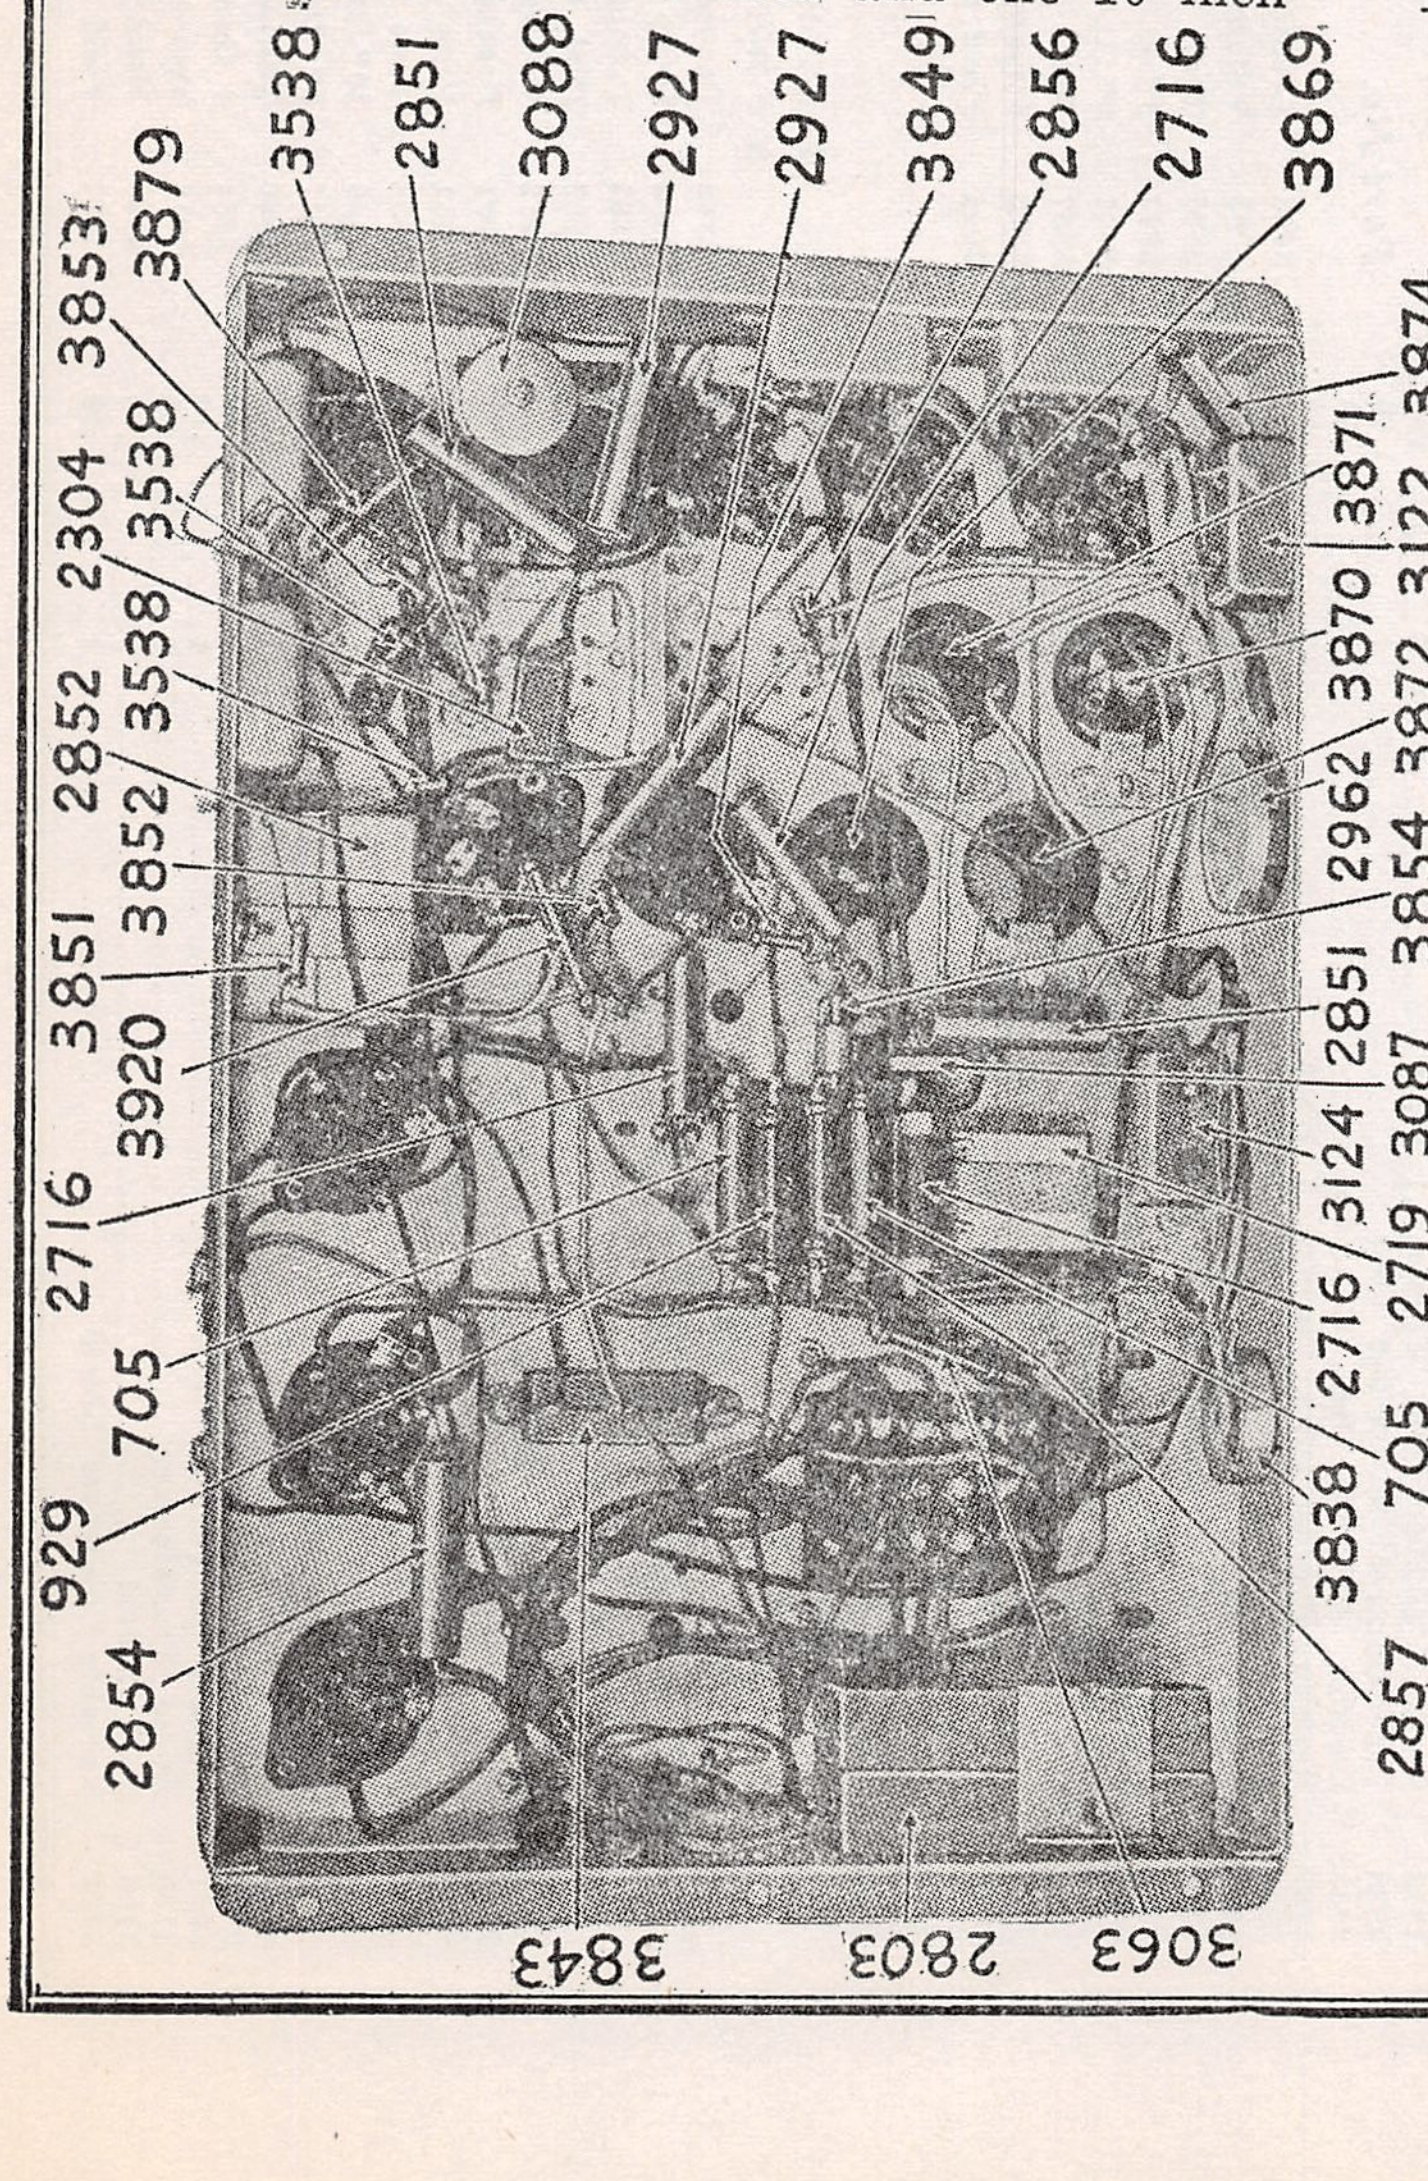
3538
2851
3088
2927
2927
3849
2856
2716
3869
3879
3853
3538
2304
3538
3538
2852
3852
3851
3920
2716
705
929
2854
3843
2803
3063
3874
3871
3122
3870
3872
2962
3854
2851
3087
3124
2719
2716
705
3838
2857

Bottom View No. 1001 Chassis

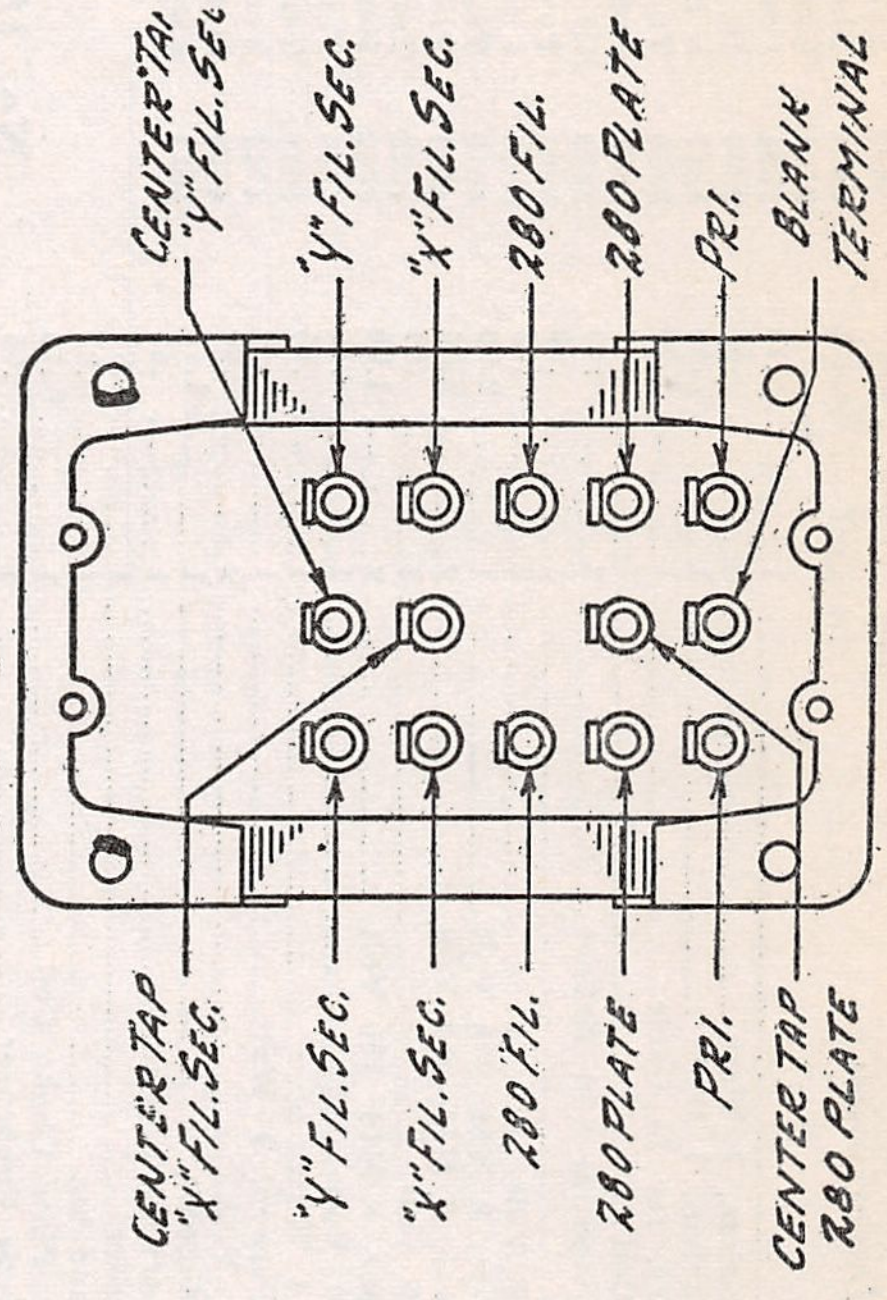
CENTER TAP "Y" FIL. SEC.
"Y" FIL. SEC.
"X" FIL. SEC.
280 FIL.
280 PLATE
PRI.
BLANK TERMINAL
CENTER TAP "X" FIL. SEC.
"Y" FIL. SEC.
"X" FIL. SEC.
280 FIL.
280 PLATE
PRI.
CENTER TAP 280 PLATE

Power Transformer Terminals

MODEL 10-C
Chassis 1000,1001
Parts List

U. S. RADIO & TELEVISION CORP.

No. 1001 CHASSIS REPLACEMENT PARTS

Part No.	*Description*	*No. Used in Set*	*List Price Each*
678	Ground Binding Post	1	.15
705	Resistor, 25,000 Ohm, Carbon, 1 Watt	2	.50
929	Resistor, 50,000 Ohm, Carbon, 1 Watt	1	.45
1375	Choke Condenser .45 Mfd, for 25 Cycle	1	1.00
1766	Detector Plate Choke Coil	1	.60
2304	Condenser, .0005 Mfd Coupling and Bypass	3	.40
2333	Antenna Binding Post	1	.20
2716	Condenser, .01 Mfd, 400 Volt	2	.45
2719	Dry Electrolytic Condenser, 8 Mfd. 275 Volt	1	2.00
2803	Dry Electrolytic Condenser, 8 Mfd. 450 Volt	2	2.00
2851	Condenser, .04 Mfd. 400 Volt	2	.40
2852	Dry Electrolytic Condenser, 8 Mfd. 150 Volt	2	1.00
2854	Condenser, .06 Mfd, 400 Volt	1	.40
2856	Resistor, 25,000 Ohm, .1 Watt	1	.45
2857	Resistor, 10,000 Ohm, Carbon, 1 Watt	1	.45
2927	Condenser, .1 Mfd, 200 Volt	2	.40
2962	Volume Control, 0—1 Megohm	1	1.40
3063	Resistor, 30,000 Ohm, Carbon, 1 Watt	1	.45
3080	Bracket for 3854 Condenser	1	.05
3087	Resistor, 3000 Ohm, Candohm	1	.35
3088	Shield Can for Detector Plate Choke Coil	1	.15
3112	Clamp for 2803 Electrolytic Condenser	1	.05
3113	Clamp for 2852 Electrolytic Condensers	1	.05
3119	Intermediate Frequency Shield	1	.05
3122	Condenser, .5 Mfd, 200 Volts	5	.70
3124	Condenser, .1 Mfd, 400 Volts	1	.65
3358	Bakelite Terminal Insulator	3	.05
3538	Resistor, 200,000 Ohm, Carbon, .1 Watt	3	.40
3838	Tone Control, 0—200,000 Ohm	1	1.40
3843	Resistor, 425-3000 Ohm, Candohm	1	.50
3849	Resistor, 500,000 Ohm, Carbon, .1 Watt	1	.40
3851	Resistor, 33,000 Ohm, Carbon, .1 Watt	1	.40
3852	Resistor, 10,000 Ohm, Carbon, .1 Watt	1	.40
3853	Resistor, 50,000 Ohm, Carbon, .1 Watt	1	.40
3854	Condenser, 540 Mmfd	1	.50
3866A	Resistor and Condenser Panel Assembly	1	2.50
3865	2nd Detector Panel Assembly Complete with Socket	1	2.50
3869	Oscillator Transformer } SOLD IN MATCHED SETS OF FOUR	1	.60
3870	Antenna Transformer	1	1.00
3871	1st Detector Transformer	1	.60
3872	R.F. Transformer	1	.60
3874	Resistor, 350 Ohm, Candohm	1	.30
3879	Resistor, 100,000 Ohm, .1 Watt	1	.40
3920	Resistor, 300,000 Ohm, .1 Watt	1	.40
115	Pilot Light Lamp	1	.25
701	Tube Socket—280	1	.35
703	Tube Socket—227	3	.35
861	Attachment Cord and Plug	1	1.00
1436	On-Off Escutcheon Plate	1	.10
2392	On-Off Switch with Leads	1	1.00
2757	Tube Socket—247	2	.35
2805	Tube Socket—235	4	.35
2830	1st Intermediate Transformer Assembly Complete with Can	1	1.80
2831	2nd Intermediate Transformer Assembly Complete with Can	1	1.80
2842	Adjusting Screw for Intermediate Condensers	4	.01
2850	Special Hex Nuts for Intermediate Condensers	4	.03
2876	Walnut Knobs	3	.30
2882	Escutcheon Plate, U.S. APEX	1	.75
2883	Drive Assembly Complete with Dial Chart	1	1.20
2895	Pointer Tension Spring for Drive	1	.15
2902	Dial Chart Assembly	1	.20
2932	Filter Choke Assembly	1	2.70
3081	Bracket for Tuning Meter	1	.10
3100	Audio Transformer	1	3.00
3108	Tube Shield	1	.80
3121	Variable Condenser Shield	1	.40
3151	Pilot Light Bracket with Leads	1	.30
3178	Shield Can for R.F. and 1st Detector Transformer	1	.75
3179	Shield Can for Oscillator and R.F. Transformer	1	.75
3181	Grid Cap with Lead	2	.05
3834	Power Transformer, 60 Cycle, 115 Volt	1	9.00
3846	10 inch D.C. Electrodynamic Speaker with Input Transformer	1	10.00
3847	8 inch D.C. Electrodynamic Speaker less Input Transformer	1	6.00
3860	Tuning Meter	1	3.50
3862	Speaker Cable	1	.65
3873	Grid Cap with Lead for 1st Audio 235	1	.05
3881	Power Transformer, 25 Cycle, 115 Volt	1	11.00
3884	4 Gang Variable Condenser Complete less Drive and Meter	1	10.00
4010	Transformer for 3846 and 3844 Speakers	1	3.00
4011	Field Coil for 3846 and 3844 Speakers—5000 Ohm	1	3.00
4012	Terminal Strip for 3846 and 3844 Speakers	1	.50
4013	Head Assembly for 3847, 3844 and 3845 Speakers	1	3.50
4015	Terminal Strip for 3847 and 3845 Speakers	1	.50
4016	Terminal Strip Cover for 3846 Speaker	1	.50
4017	Terminal Strip Cover for 3847, 3844 and 3845 Speakers	1	.50
4020	Head Assembly for 3846 Speaker	1	3.75
4021	Field Coil for 3847 Speaker, 2000 Ohm	1	2.75

No. 1000 CHASSIS REPLACEMENT PARTS (SUPPLEMENTING No. 1001 PARTS LIST)

The following parts are used in addition to the parts listed for the No. 1001 Chassis:

Part No.	*Description*	*No. Used in Set*	*List Price Each*
3408	Escutcheon Plate, U. S. APEX	1	.75
3789	Volume Control, 0—1 Megohm	1	1.40
3837	Tone Blender Rheostat, 0—200,000 Ohm	1	1.40
3844	8″ D.C. Electrodynamic Speaker with Input Transformer	1	8.50
3845	8″ D.C. Electrodynamic Speaker less Input Transformer	1	6.00
3867	Drive Assembly Complete with Dial Chart less Pilot Light	1	1.20
3873	4 Gang Variable Condenser Assembly	1	10.00
4014	Field Coil for 3845 Speaker—2,000 Ohm	1	3.00

The following parts listed for the No. 1001 Chassis are not used in the No. 1000 Chassis:

2882	Escutcheon Plate, U. S. APEX	1	.75
2883	Drive Assembly Complete with Dial Chart	1	1.20
2895	Pointer Tension Spring for Drive	1	.15
2902	Dial Chart Assembly	1	.20
2962	Volume Control, 0—1 Megohm	1	1.40
3081	Bracket for Tuning Meter	1	.10
3151	Pilot Light Bracket with Leads	1	.30
3838	Tone Blender Rheostat, 0—200,000 Ohm	1	1.40
3846	10″ D.C. Electrodynamic Speaker with Input Transformer	1	10.00
3847	8″ D.C. Electrodynamic Speaker less Input Transformer	1	6.00
3860	Tuning Meter	1	3.50
3884	4 Gang Variable Condenser Assembly Complete less Drive and Meter		10.00
4016	Terminal Strip Cover for 3846 Speaker	1	.50
4020	Head Assembly Complete for 3846 Speaker	1	3.75
4021	Field Coil for 3847 Speaker—2,000 Ohm	1	2.75

U. S. RADIO & TELEVISION CORP.

No. 20 CHASSIS—VOLTAGES AT SOCKETS—VOLUME CONTROL AT MAXIMUM LINE VOLTAGE. 115—PLUG IN SOCKET OF RECEIVER—TUBE IN TEST SET

Type of Tube	*Position of Tube*	*Function*	*"A" Volts*	*"B" Volts*	*Control Grid "C" Volts*	*Screen Volts*	*Screen Current MA*	*Cathode Volts*	*Plate MA*	*Grid Test MA*
224	1	1st Radio	2.5	196	2.2	85	1.4	2.2	5.	7.1
224	2	Detector	2.5	95(1)	2.3(2)	17(3)	.015		.1	.2
171A	3	1st Audio	5.1	191	43. (4)				18.	20.
280	4	Rectifier	5.1						23. Per Plate	

(1) (3) Computed value. Reading with volmeter will be lower.
(2) This voltage read across 55 ohm section of shunt resistor.
(4) This voltage read across 935 ohm section of speaker field and 55 ohm section of shunt resistor.

Tuning Condenser Alignment

The tuning condensers are aligned at the factory with oscillators and output meters and the receiver will not normally lose its alignment unless mishandled or tampered with. When the condenser is out of alignment one or more of the stages are not in resonance and the receiver may tune broadly, lack volume at certain parts of the broadcast band, or tune in a signal at two or more points of the dial.

The chassis should be grounded but the antenna disconnected. In case a strong enough signal is not being received from the oscillator, connect a five or six foot length of wire to the antenna post and run it over towards the oscillator.

First set the oscillator for a signal of 1,400 K.C. Then carefully tune to resonance by turning the tuning condenser rotor slowly back and forth until maximum output is obtained. Now adjust the trimmer condensers to resonance. Adjust the volume control until the pointer of the output meter is at about half scale. The oscillator signal should not be too great in intensity as distortion will be introduced. The trimmer condensers are adjusted by raising or lowering the center screw. Turn the screws down until the volume starts to drop. Then adjust the trimmers to resonance, raising or lowering the screws until maximum deflection is obtained. Adjustment may be made with a metal screw driver as the rotor is at ground potential.

An important point to remember in adjusting the trimmer condenser is that the screws should not be turned completely down. If they are screwed in too tightly the capacity of the trimmer condenser which is added to the capacity of the tuning condenser will be so high that the receiver cannot be tuned to a high frequency signal.

After the trimmer condensers have been adjusted at 1,400 K.C., they should not be changed in any way when aligning the tuning condensers at different frequencies as explained below.

Next set the oscillator for a signal of 1,000 K.C. Then turn the tuning condenser rotor carefully until maximum deflection is obtained on output meter. The second slotted section of the rotor will be approximately half way in mesh with the stator as shown in Fig. 3. Bend this section of the two end rotor plates of the first section of the tuning condenser in or out until maximum reading is obtained on the output meter. Follow the same procedure with section two of the tuning condenser. The corresponding slotted section on both ends of any rotor section should be bent in or out about the same amount for each adjustment.

After each material adjustment of a slotted rotor plate section, the tuning or setting of rotor for resonance should be checked. In other words, after every bending turn the tuning knob back and forth until maximum deflection of output meter is obtained before proceeding to make the next adjustment.

Next tune in a signal at 750 K.C. Follow the same procedure. Lastly, tune in a signal at 600 K.C. and again follow the same procedure. The condenser will then be properly aligned.

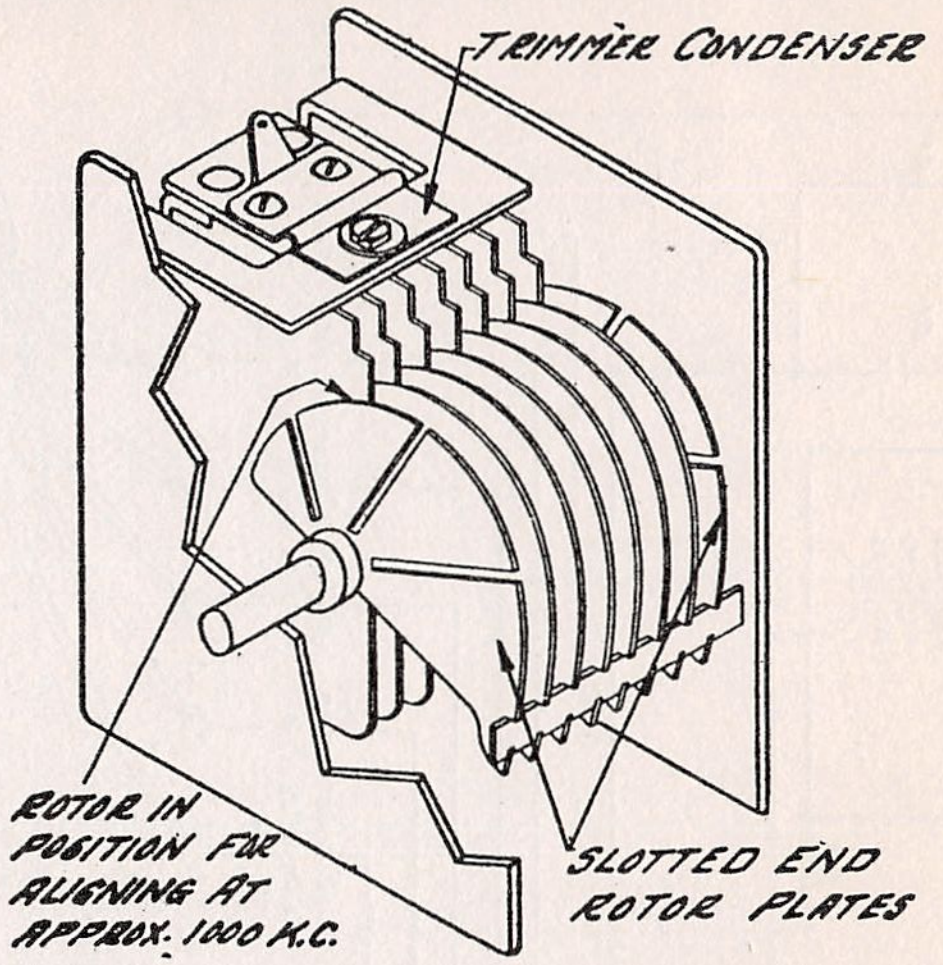

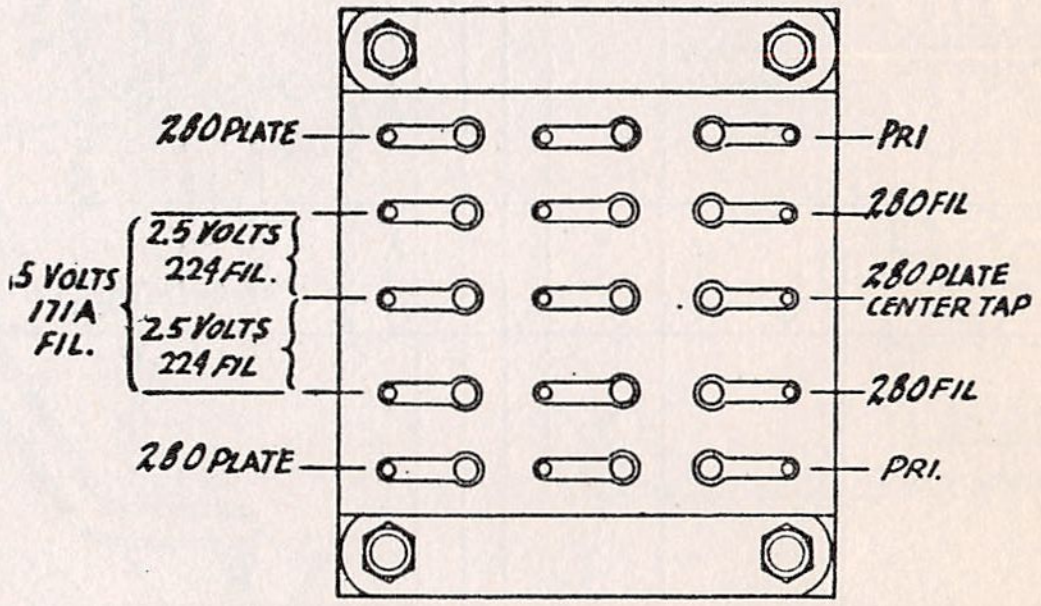

CENTER ROW OF LUGS USED AS WIRING TERMINALS ONLY

Power Transformer Terminals

Electrodynamic Speaker

An especially designed electrodynamic speaker is supplied with the No. 20 chassis. The field of this speaker is energized by the power system of the chassis and is a part of the power system. For that reason no other speaker should be used with the No. 20 chassis than the one supplied with it.

Care should be taken in servicing the No. 20 receiver not to reverse the leads to one of the field sections as the fields will then "buck" and low signal strength will result. The field winding also acts as a filter choke.

MODEL 30 Auto Radio

U. S. RADIO & TELEVISION CORP.

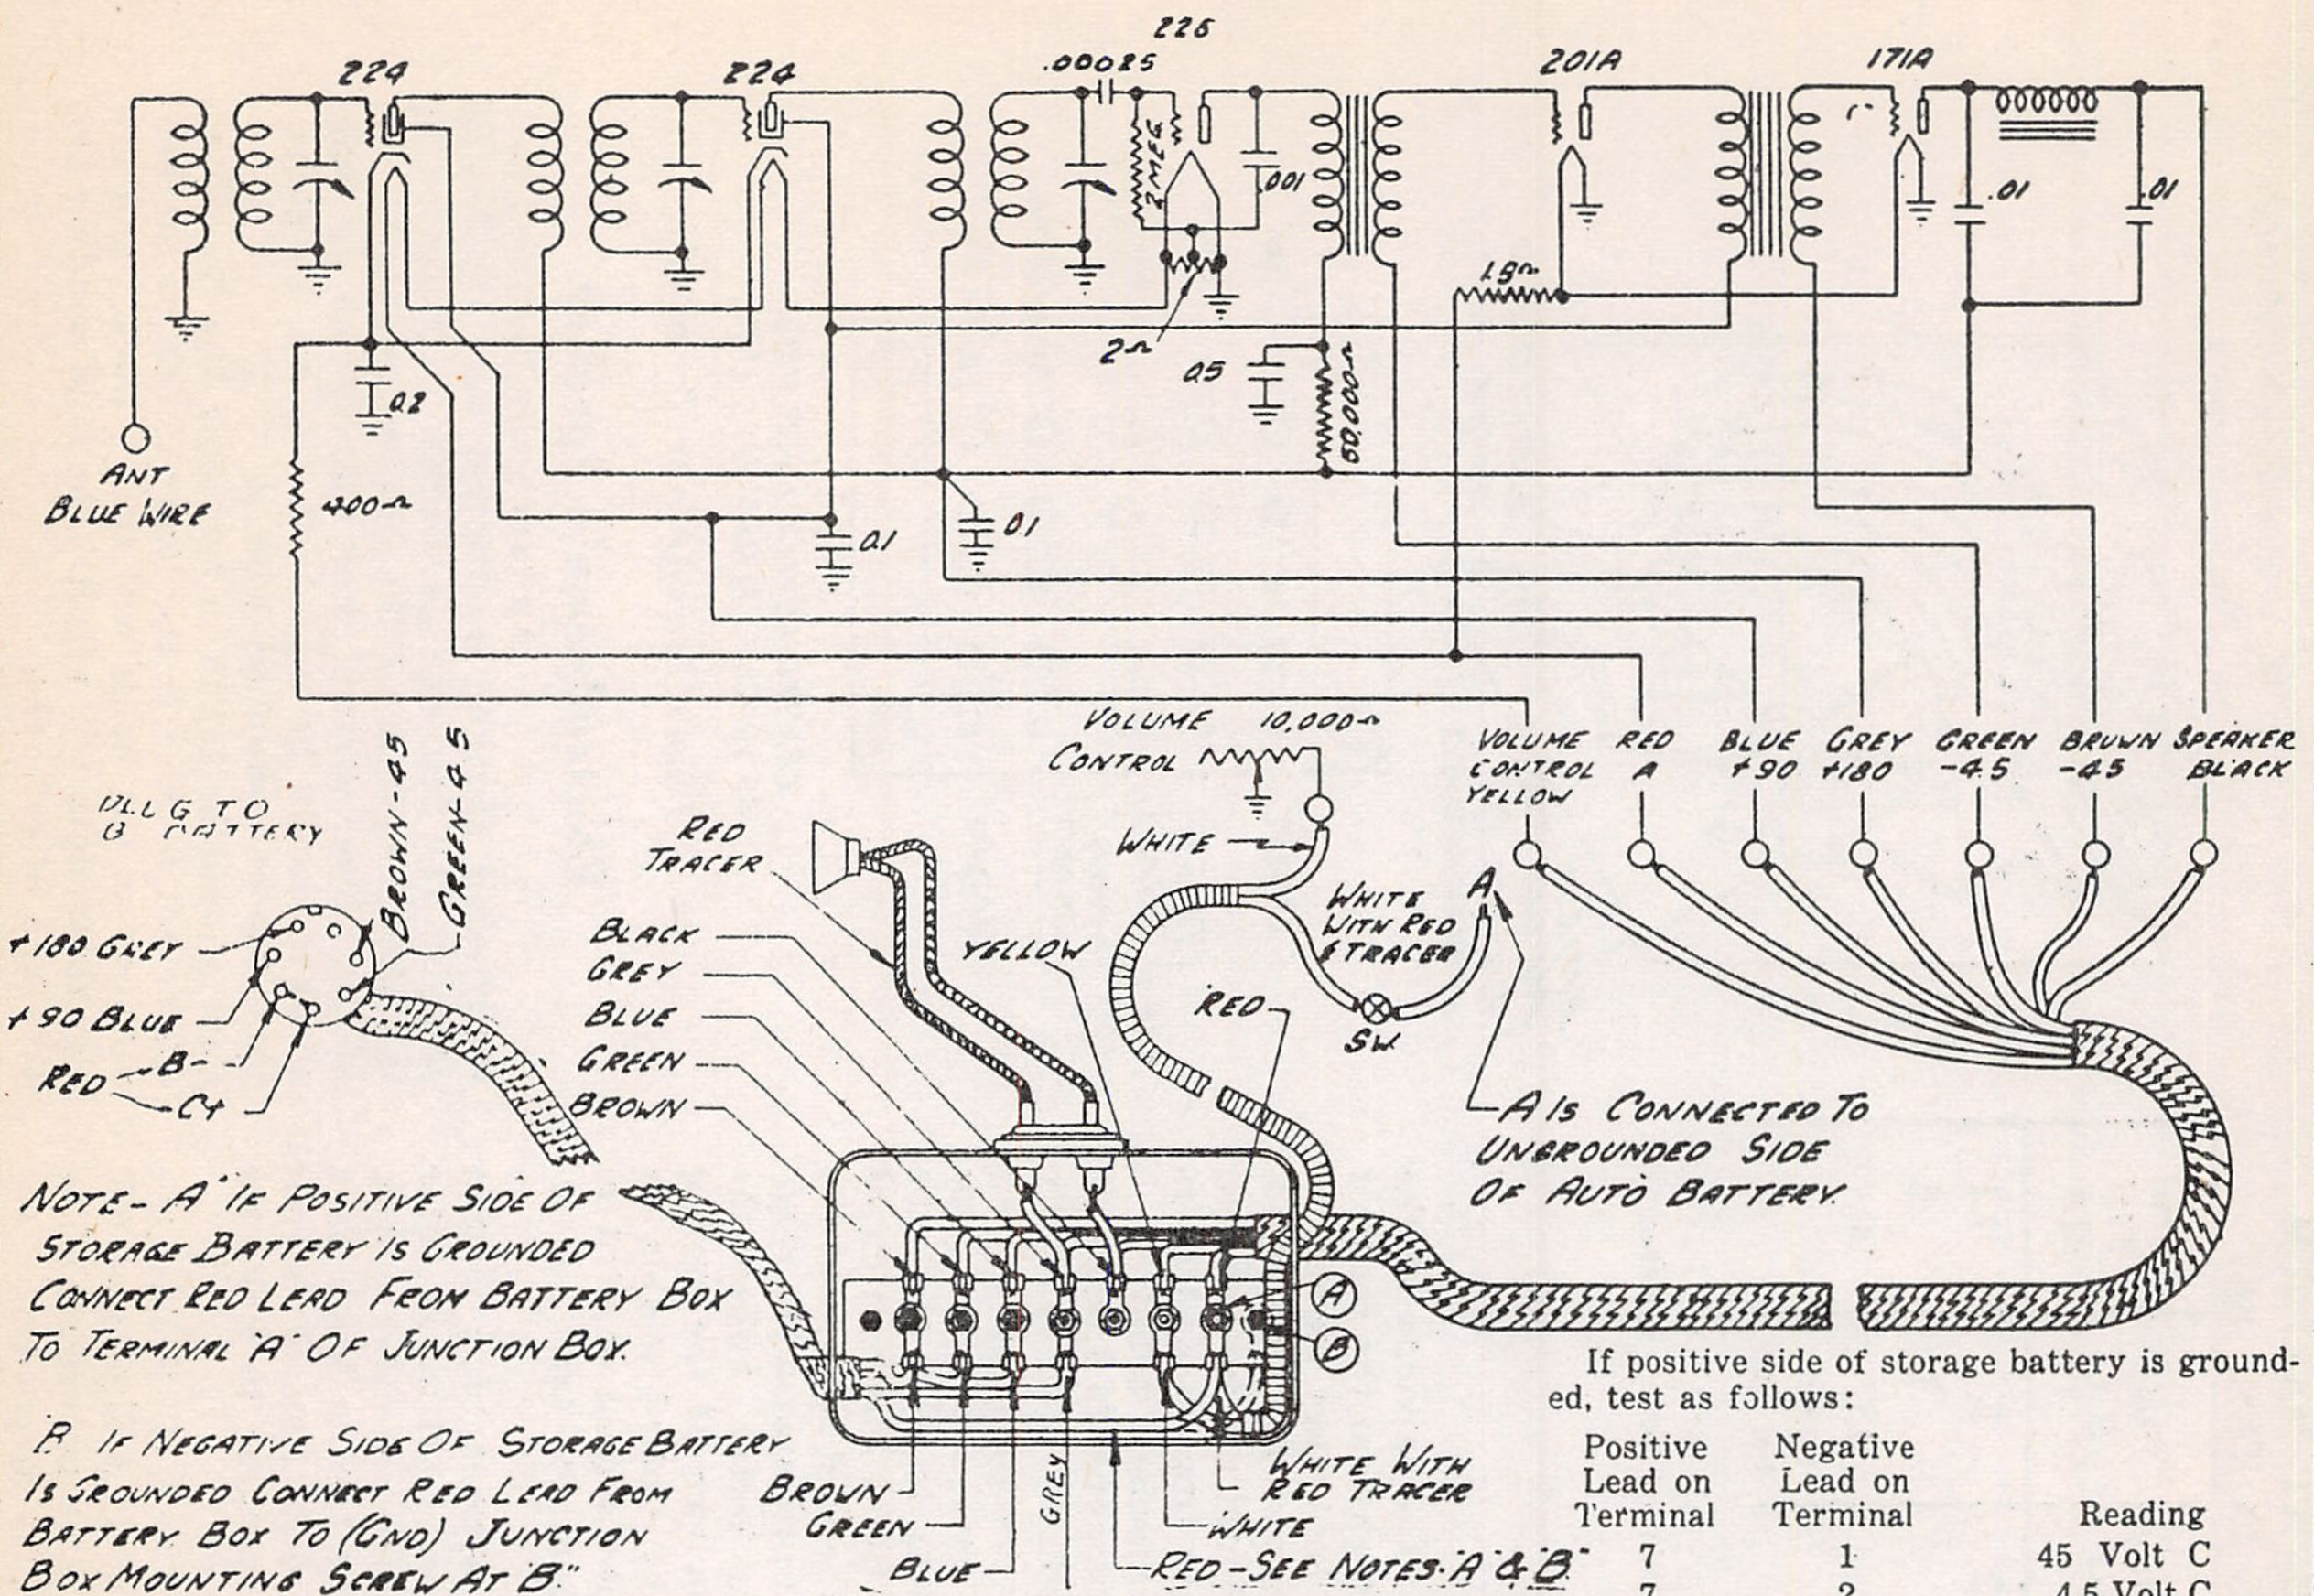
224
224
226
.00025
2 MEG
.001
201A
171A
.01
.01
1.8Ω
2Ω
.05
50,000Ω
.02
ANT
BLUE WIRE
400Ω
.01
.01
VOLUME 10,000Ω
CONTROL
VOLUME CONTROL YELLOW
RED A
BLUE +90
GREY +180
GREEN -4.5
BROWN -45
SPEAKER BLACK
PLUG TO B BATTERY
BROWN -45
GREEN -4.5
+180 GREY
+90 BLUE
RED
B-
C+
RED TRACER
BLACK
GREY
BLUE
GREEN
BROWN
YELLOW
WHITE
WHITE WITH RED TRACER
A
SW.
RED
A IS CONNECTED TO UNGROUNDED SIDE OF AUTO BATTERY.
A
B
BROWN
GREEN
GREY
BLUE
WHITE WITH RED TRACER
WHITE
RED-SEE NOTES "A" & "B"

NOTE- "A" IF POSITIVE SIDE OF STORAGE BATTERY IS GROUNDED CONNECT RED LEAD FROM BATTERY BOX TO TERMINAL "A" OF JUNCTION BOX.

"B" IF NEGATIVE SIDE OF STORAGE BATTERY IS GROUNDED CONNECT RED LEAD FROM BATTERY BOX TO (GND) JUNCTION BOX MOUNTING SCREW AT "B".

If negative side of battery is grounded, test as follows:

Positive Lead on Terminal	Negative Lead on Terminal	Reading
Ground	1	45 Volt C
Ground	2	4.5 Volt C
3	Ground	90 Volt B
4	Ground	180 Volt B
7	Ground	6 Volt A

If any reading is below the lower limits as shown on the following list, a new battery box unit will be required.

Regular Rating	Lower Limit
180 Volt B	140 Volt
90 Volt B	70 Volt
45 Volt C	35 Volt
4.5 Volt C	3.5 Volt

If the "A" battery reading is low, the car storage battery is run down and must be recharged.

If positive side of storage battery is grounded, test as follows:

Positive Lead on Terminal	Negative Lead on Terminal	Reading
7	1	45 Volt C
7	2	4.5 Volt C
3	7	90 Volt B
4	7	180 Volt B
Ground	7	6 Volt A

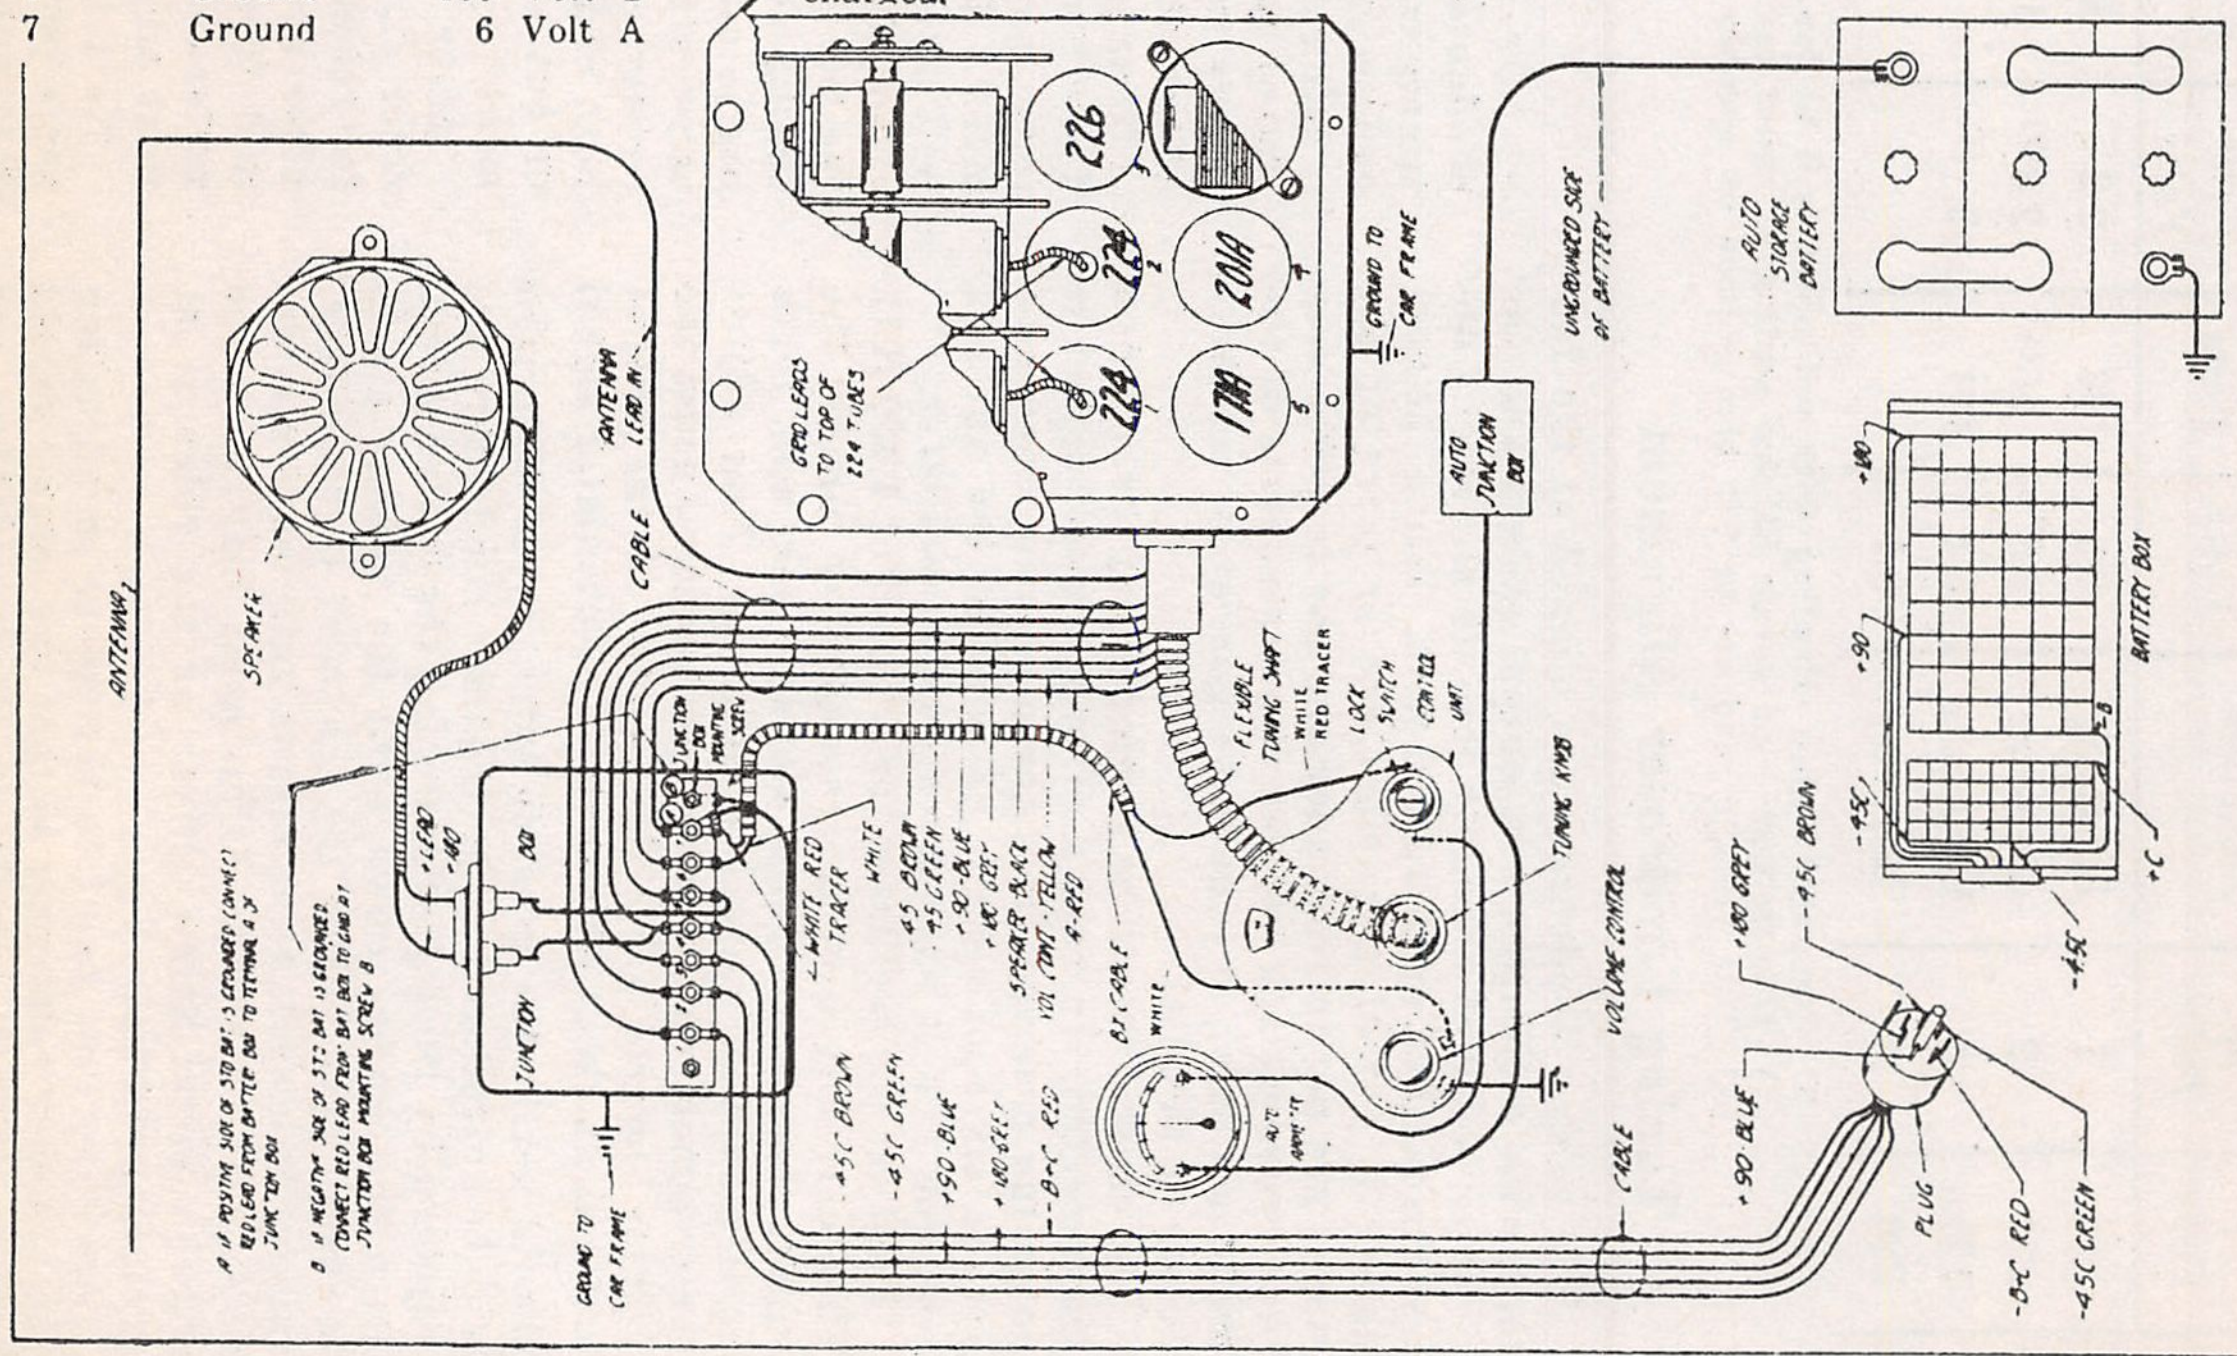
226
224
224
201A
171A
GRID LEADS TO TOP OF 224 TUBES
GROUND TO CAR FRAME
ANTENNA LEAD IN
UNGROUNDED SIDE OF BATTERY
AUTO STORAGE BATTERY
AUTO JUNCTION BOX
SPEAKER
ANTENNA
CABLE
FLEXIBLE TUNING SHAFT
WHITE
RED TRACER
LOCK
SWITCH
CONTROL UNIT
TUNING KNOB
VOLUME CONTROL
AUTO AMMETER
JUNCTION BOX MOUNTING SCREW
+LEAD
-180
BOX
JUNCTION
A IF POSITIVE SIDE OF STO BAT IS GROUNDED CONNECT RED LEAD FROM BATTERY BOX TO TERMINAL A OF JUNCTION BOX
B IF NEGATIVE SIDE OF STO BAT IS GROUNDED CONNECT RED LEAD FROM BAT BOX TO GND AT JUNCTION BOX MOUNTING SCREW B
GROUND TO CAR FRAME
WHITE RED TRACER
WHITE
-4.5 BROWN
-4.5 GREEN
+90 BLUE
+180 GREY
SPEAKER BLACK
VOL CONT - YELLOW
A-RED
BX CABLE
WHITE
-45C BROWN
-4.5C GREEN
+90 BLUE
+180 GREY
-B+C RED
CABLE
+180
+90
B
BATTERY BOX
-45C
+C
-4.5C
+180 GREY
-45C BROWN
+90 BLUE
PLUG
-B+C RED
-4.5C GREEN
DWG 16A

Complete Wiring Diagram U. S. Radio Model 30 Automobile Receiver.

Models 99A, 99B (1931)

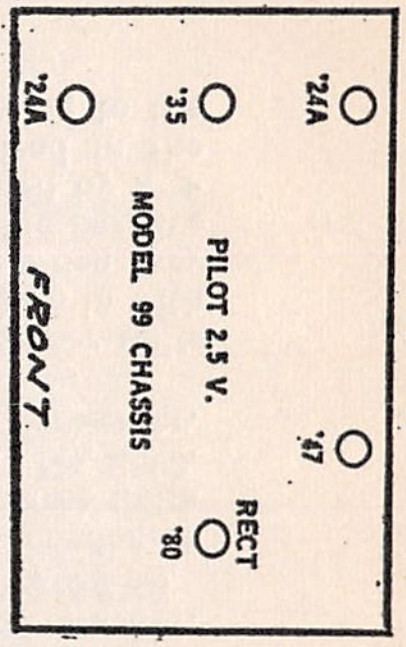
'24A
'47
RECT
'80
'35
PILOT 2.5 V.
MODEL 99 CHASSIS
'24A
FRONT

U. S. RADIO & TELEVISION CORP.

MODEL 99 Series
Schematic

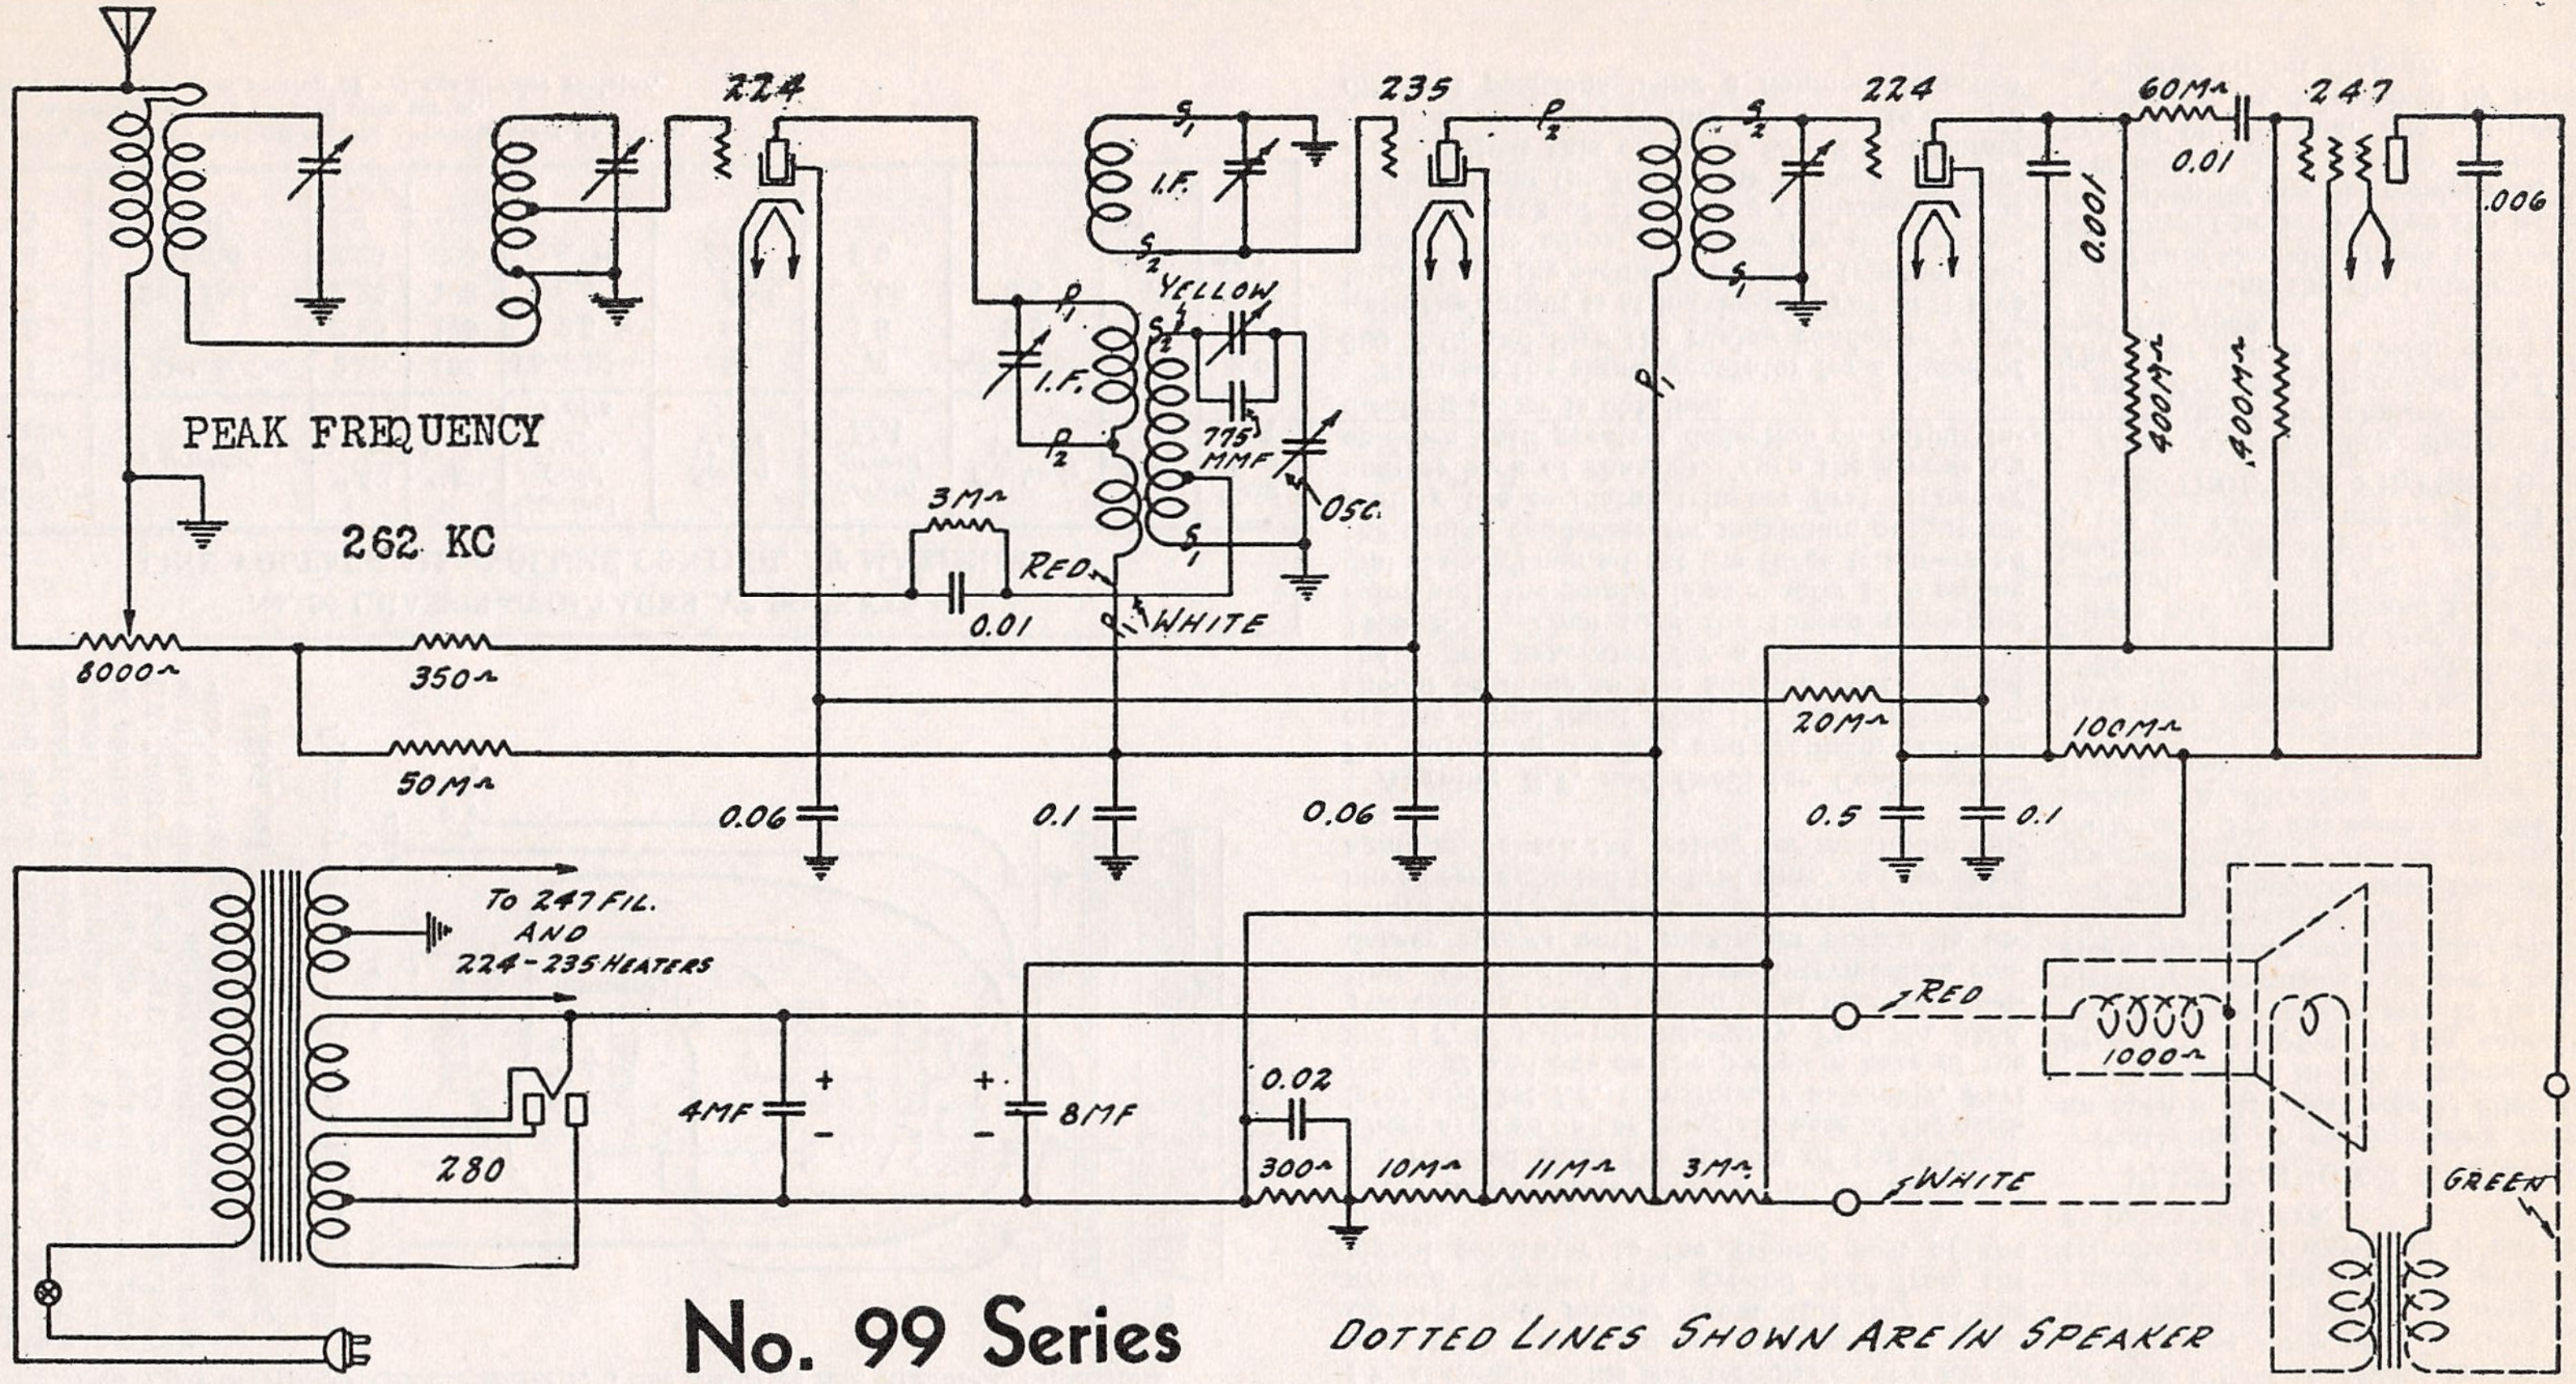
224
235
224
247
PEAK FREQUENCY
262 KC
8000Ω
350Ω
50MΩ
I.F.
I.F.
P1
P2
S1
S2
YELLOW
775 MMF
OSC.
3MΩ
0.01
RED
WHITE
0.06
0.1
0.06
0.5
0.1
20MΩ
100MΩ
60MΩ
0.01
0.001
400MΩ
400MΩ
.006
To 247 FIL. AND 224-235 HEATERS
280
4MF
8MF
0.02
300Ω
10MΩ
11MΩ
3MΩ
RED
WHITE
1000Ω
GREEN
DOTTED LINES SHOWN ARE IN SPEAKER

No. 99 Series

There are certain features to be noted in this receiver. The mixer is of the autodyne type, wherein it functions as a mixer (1st detector) and also as an oscillator. Also that the grid lead from the mixer tube joins the grid coil at a tap upon this winding. This tap is so apportioned that the circuit acts to suppress the tranmission of image frequency signals, in this case 524 KC higher than the frequency setting of the tuned circuit. The IF transformer is also of special structure combining the coupling transformer and also the oscillator system. The structure of this transformer-oscillator is illustrated upon the next page.

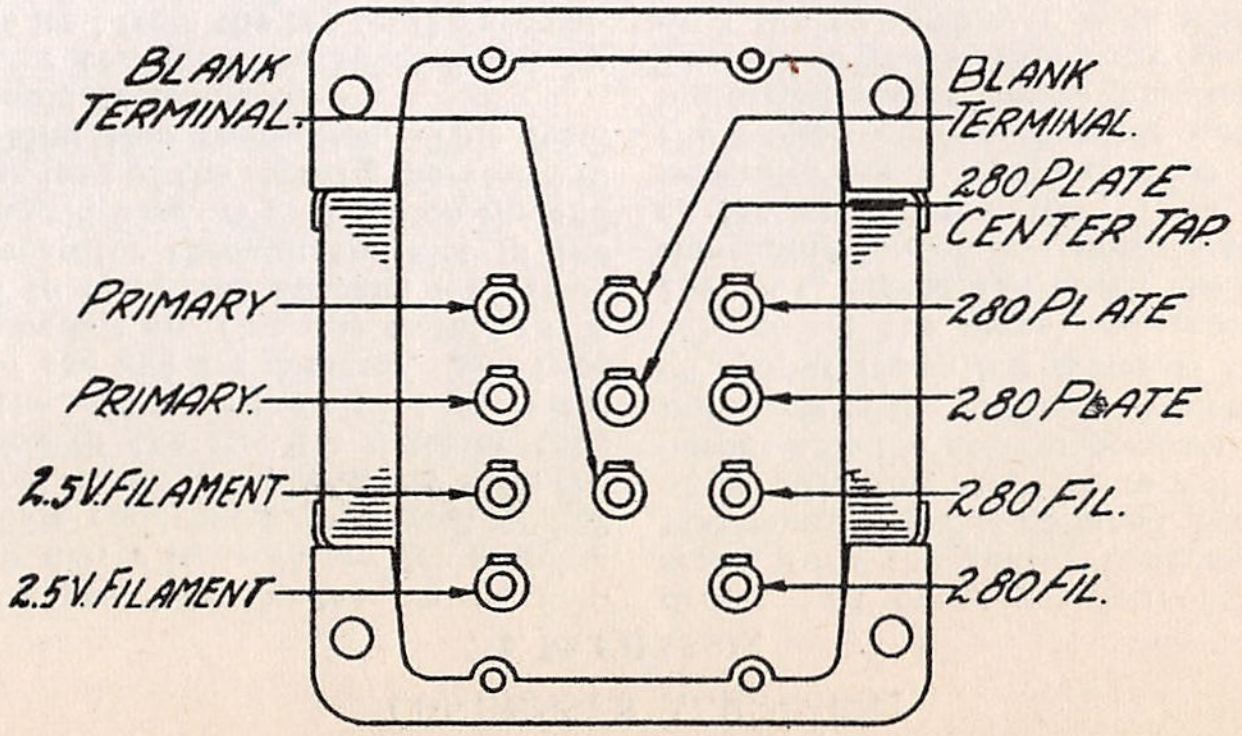
BLANK TERMINAL
PRIMARY
PRIMARY
2.5V. FILAMENT
2.5V. FILAMENT
BLANK TERMINAL
280 PLATE CENTER TAP
280 PLATE
280 PLATE
280 FIL.
280 FIL.

Power Transformer Terminals

MODEL 99 Series
Alignment
Voltage - Socket

U. S. RADIO & TELEVISION CORP.

CONDENSER ALIGNMENT

No. 99 CHASSIS

Aligning Intermediate Condensers—A nonmetallic screw driver is necessary for aligning the intermediate condensers. A signal of 262 K.C. is required. Remove the grid cap from the grid connection of the 224 1st detector tube and connect the lead from the signal generator to the grid of the 224 1st detector. The tube shield should be left on. One way to make this connection is to bring the antenna lead from the signal generator through the slot in the shield for the grid wire. A grid cap on the end of the antenna lead of the signal generator will facilitate making this connection. This lead, of course, should be insulated.

The oscillator coil must be shorted out by grounding the lead from the tap on the secondary. This is the white lead which comes through the porcelain base of the oscillator and I.F. assembly. This lead terminates at a lug on a vertically mounted bakelite terminal strip. Connect the jumper from this lug to the ground Connect the ground lead from the signal generator to the ground post of the chassis.

The intermediate condenser adjusting screws are reached from the bottom of the chassis. There are two on the porcelain base of the oscillator and 1st I.F. transformer assembly, Part No. 3382 and one on the porcelain base of the 2nd I.F. transformer assembly, Part No. 3388. The volume control should be at maximum setting. Then adjust the three intermediate condenser screws until maximum output is obtained on the output meter. After all three have been adjusted the first time, go over them again and check the setting for maximum output.

Aligning R.F. and Oscillator Condensers—For adjusting the R.F. and oscillator condensers the signal input from the signal generator should be made to the antenna post. Adjust the signal generator for a signal of exactly 1400 K.C. Then turn the tuning condenser rotor until the pointer is at exactly 1400 on the dial scale. Then adjust the three trimmers on the tuning condenser for maximum output adjusting the oscillator trimmer first (trimmer nearest back of chassis). Turn the screws up or down until greatest deflection on output indicating meter is obtained.

Then set the signal generator for a signal of 600 K.C. and turn the tuning condenser rotor until the output is at maximum. The next step is to adjust the oscillator 600 K.C. trimmer condenser. The adjusting screw for this condenser is in back of the tuning condenser and is reached from the top of the chassis. To correctly adjust this oscillator 600 K.C. trimmer it will be necessary to turn the screw to several different positions using a nonmetallic screw driver. At every position of this adjusting screw turn the tuning condenser rotor until maximum output is obtained. For each position of the adjusting screw there will be a maximum output and the correct position of the adjusting screw is the setting at which the deflection on output indicating meter is the greatest.

Next set the signal generator again for a 1400 K.C. signal and check the adjustment of the tuning condenser trimmers at this frequency for maximum output. Then set the signal generator for a signal of 1000 K.C. and turn the tuning condenser rotor until the output indicating meter shows maximum deflection. Then bend the slotted rotor plate sections of each tuning condenser bank which are last in mesh, in or out until maximum output is obtained. Tune in a signal at 750 K.C. and then at 600 K.C. and follow the same procedure bending the rotor plate sections last in mesh until maximum output is obtained. Do not change the setting of the oscillator 600 K.C. trimmer in any way after it has once been set as indicated above.

FLUTTERING OR MOTORBOATING

Fluttering or motorboating may be due to an open 8 Mfd. electrolytic filter condenser or to low capacity in this condenser. It may also be due to an open or low capacity .06 Mfd. screen by-pass condenser. If the 4 and 8 Mfd. electrolytic condenser units are reversed in position fluttering may result. The correct position of these two units is shown in Fig. 1.

A 224 1st detector with characteristics varying considerably from the standard may cause fluttering. Try out some new 224 tubes in this socket. A defective oscillator and 1st I.F transformer assembly may also be responsible for this type of disturbance. If, after the tubes have been changed and the other possibilities suggested in this article have been investigated, fluttering persists, it may be advisable to secure a new oscillator and 1st I.F. transformer assembly and try it out in the receiver. Motorboating may be due to a poor grid connection to the 235 I.F. tube and to the 224 2nd detector.

ELECTROLYTIC FILTER CONDENSERS

There are two dry electrolytic condenser units in the No. 99 chassis. One of these units is an 8 Mfd., 450 volt condenser, Part No. 2803. The other unit is a 4 Mfd., 450 volt condenser, Part No. 3366.

In replacing the electrolytic condenser units great care should be taken to wire them in with the correct polarity. Tag the leads when they are taken off the old condensers. The positive terminal of the condenser is identified by a + symbol on the box. The positive lead in the chassis can be determined by referring to the schematic circuit diagram.

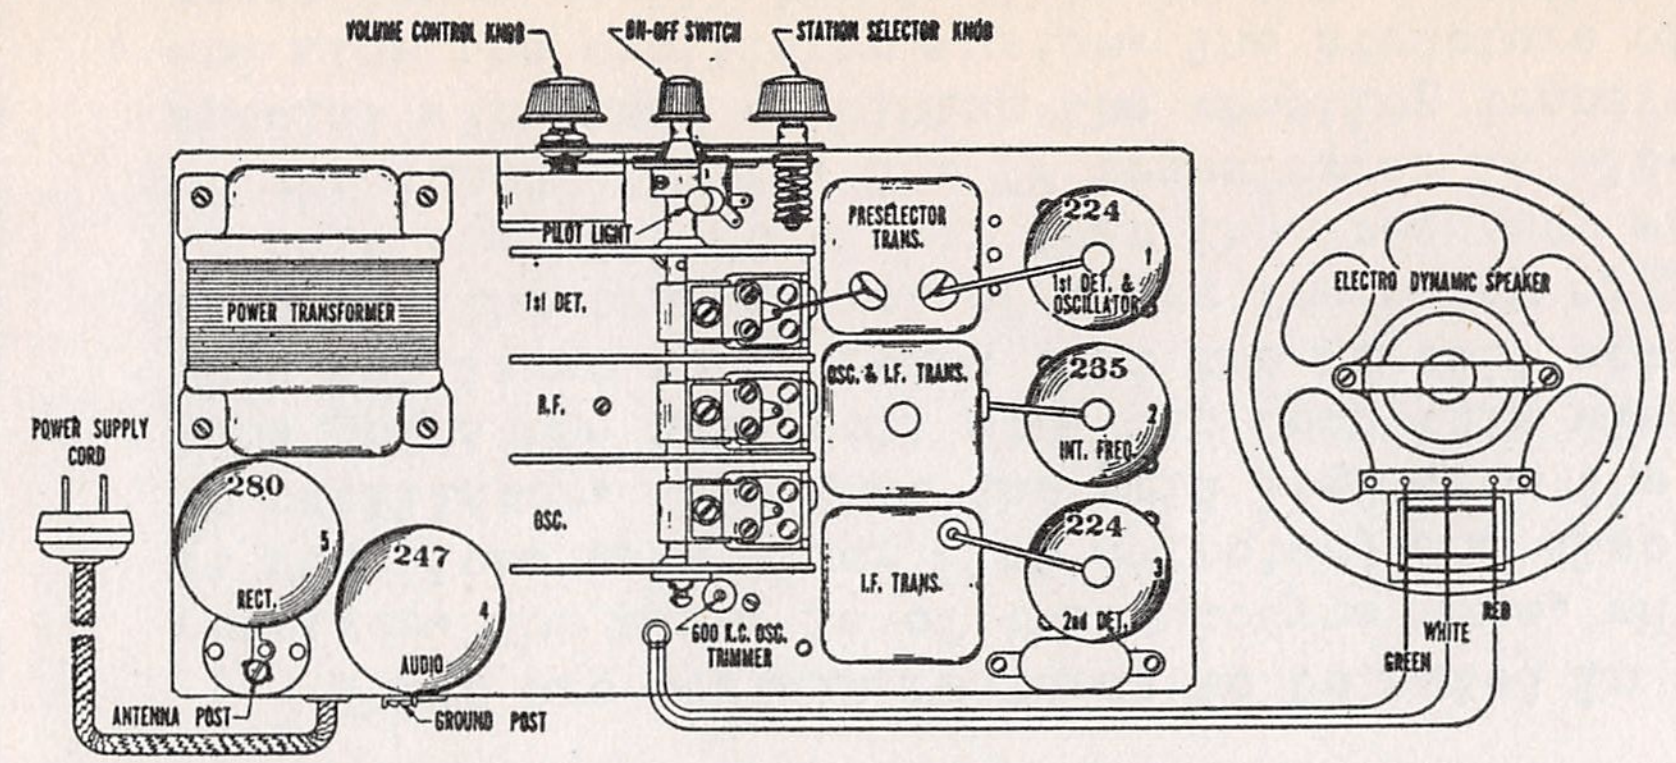

Top View of No. 99 Chassis showing Tube Sequence and Speaker Connections.

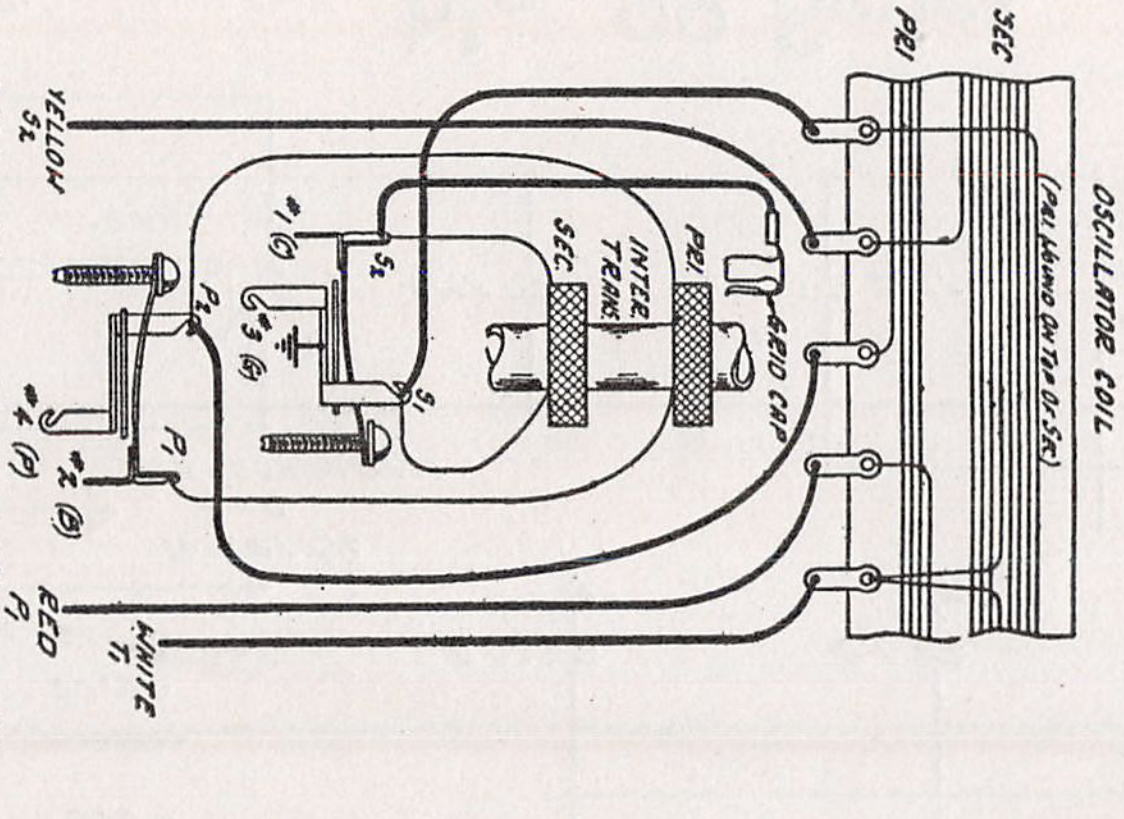

—Wiring Diagram, Osc. and I.F. Assembly

No. 99X CHASSIS—25 CYCLE, 115 VOLT

Chassis No. 99X is almost identical in construction with chassis No. 99, except that it is designed for 25 cycle, 115 volt operation. All parts as used in the No. 99 chassis are used in the No. 99X with the exception of the power transformer. The correct power transformer for the No. 99X chassis is shown in the parts price list.

The description and testing as covered in the No. 99 Service Notes also applies to the No. 99X chassis

No. 99 CHASSIS—VOLTAGES AT SOCKETS
LINE VOLTAGE 115—VOLUME CONTROL AT MAXIMUM

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Volts	Screen Current MA	Cathode Volts	Plate MA	Grid Test MA
224	1	1st Det. & Osc.	2.25	165	4.5-5.25(1)	65	.4	4.5-5.25(1)	1.3	2.0
235	2	I.F.	2.25	165	2.5	65	1.5	2.5	6.4	7.4
224	3	2nd Det.	2.25	128	6.5	60(2)	.05	6.5	.22	.23
247	4	Audio	2.25	205	16. (3)	225	8.0		29.	33.*
280	5	Rect.	4.9						27. Per Plate	

(1) Varies with frequency setting of dial approximately as shown.
(2) Voltage as measured with 600,000 ohm meter.
(3) Measured across 300 ohm section of voltage divider resistor.

MODEL 20-J,20-K,
20-L
Schematic, Voltage

UNITED AMERICAN BOSCH CORP.

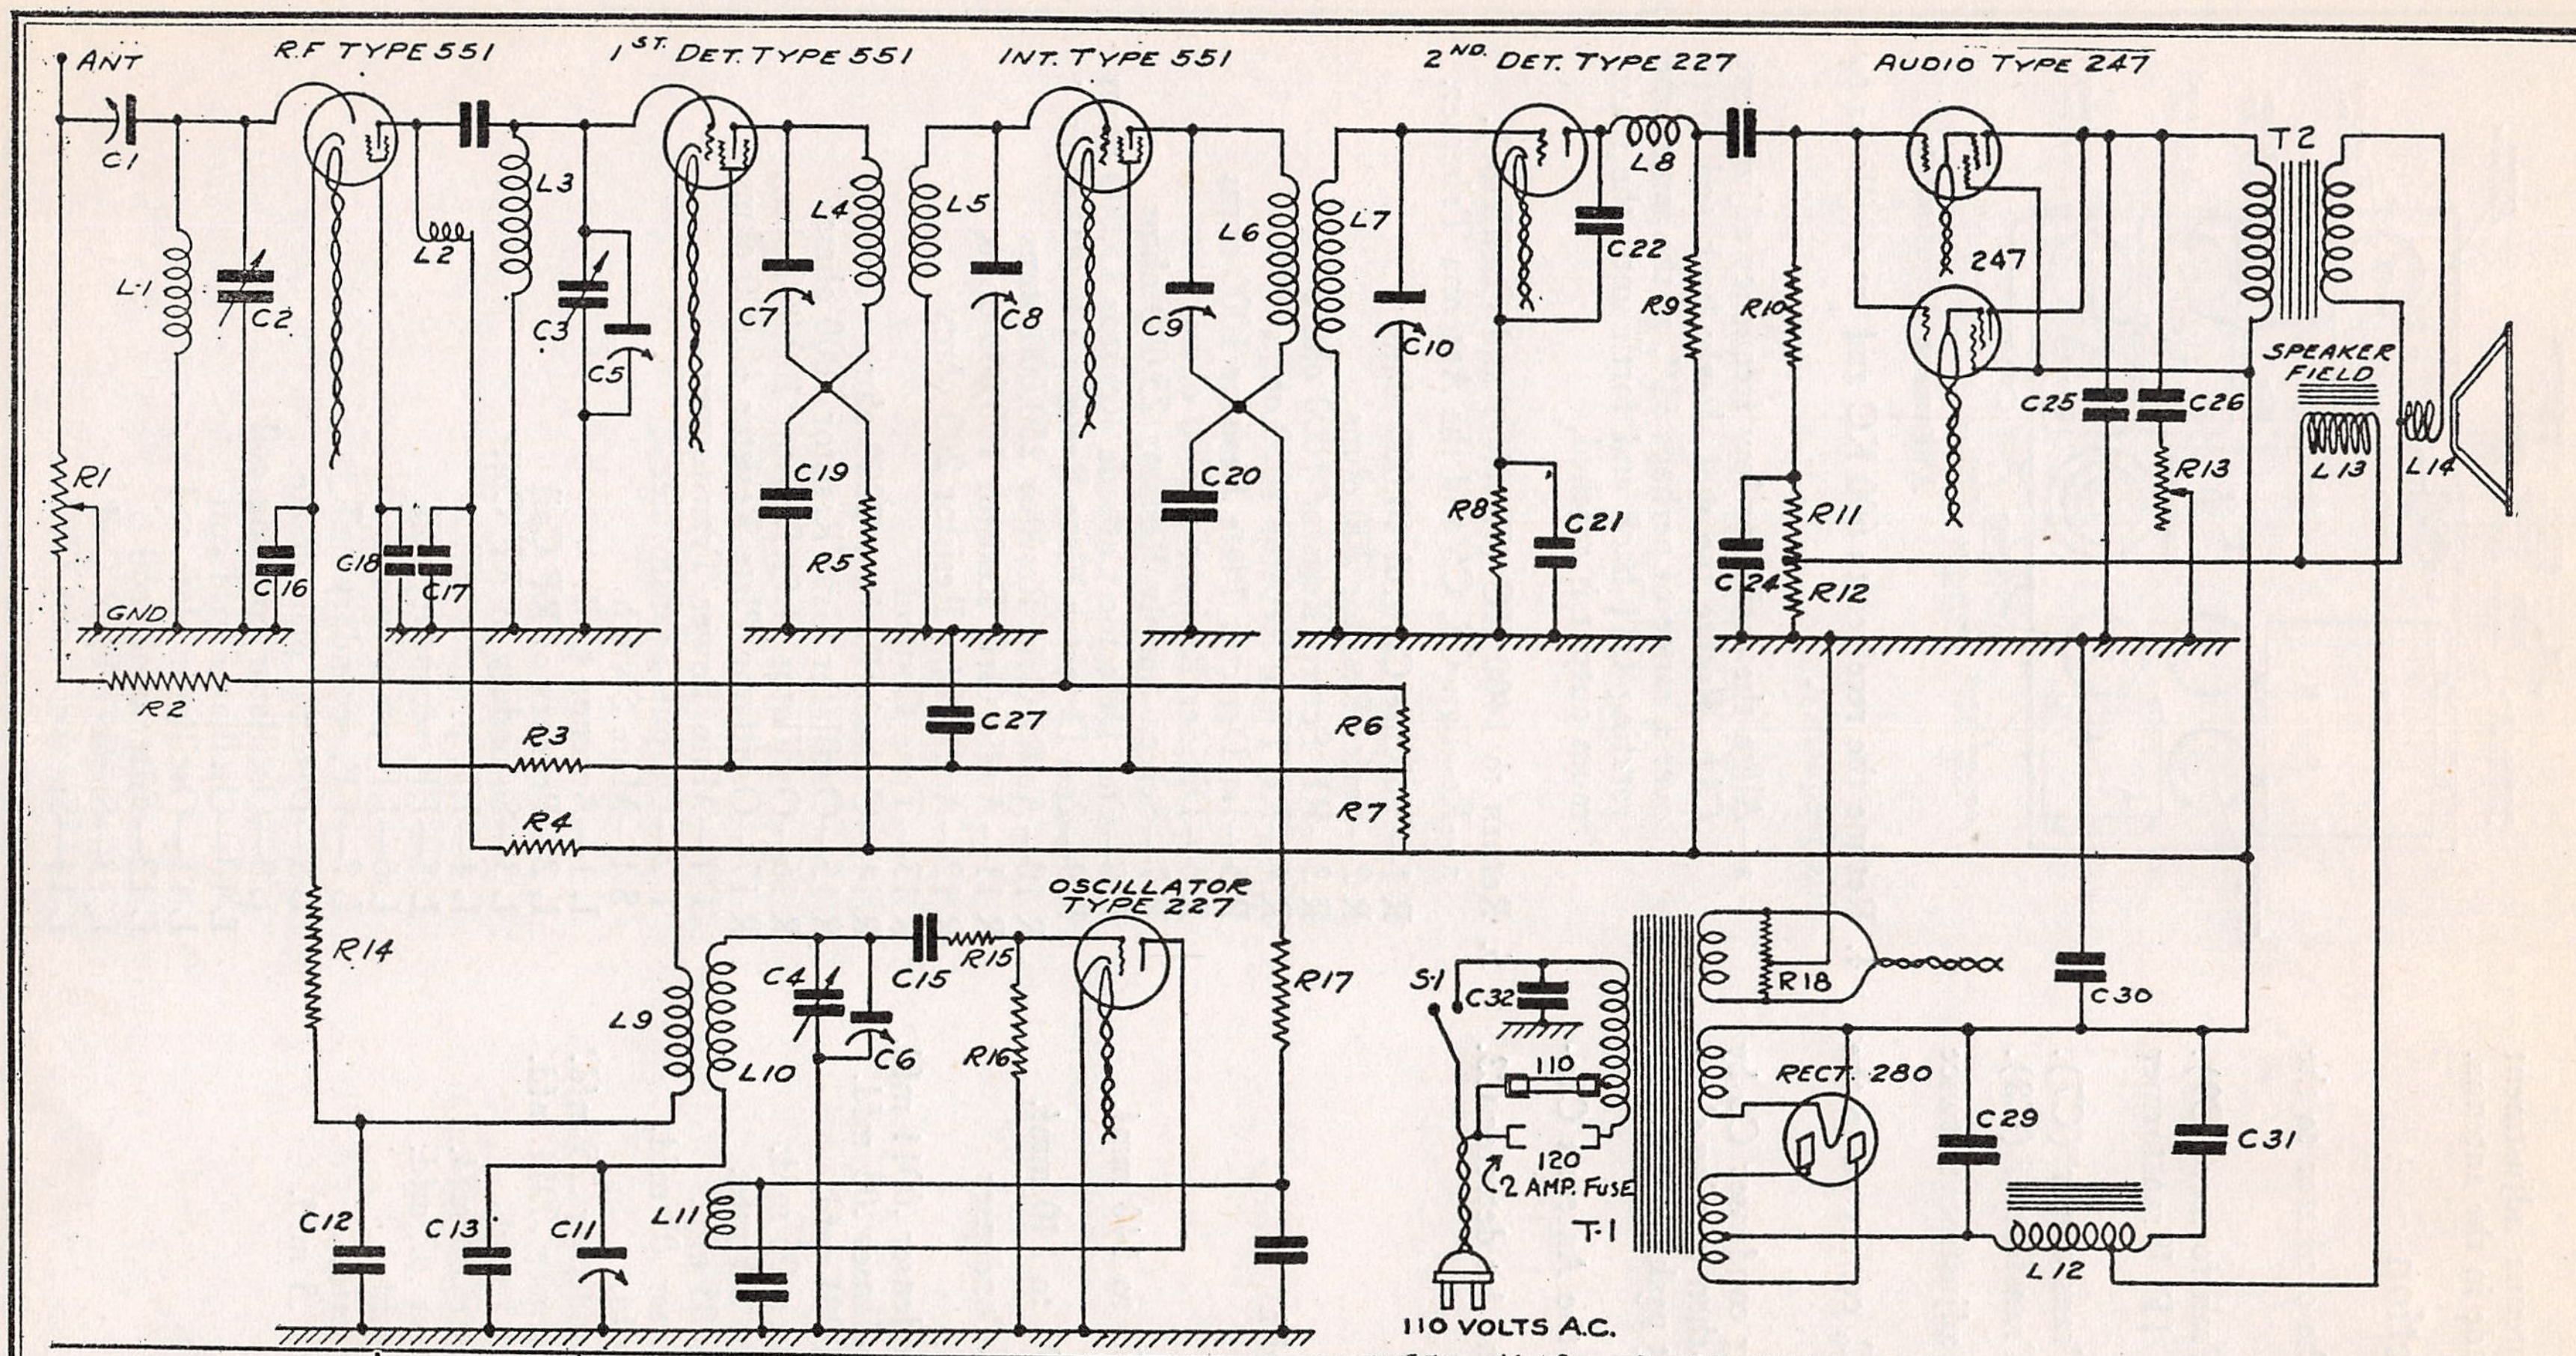
ANT
C1
L-1
C2
R1
GND
R2
R.F TYPE 551
C16
L2
C18
C17
L3
C3
C5
1ST. DET. TYPE 551
C7
L4
C19
R5
INT. TYPE 551
L5
C8
C27
L6
C9
C20
2ND. DET. TYPE 227
L7
C10
C22
L8
R8
C21
R9
R10
C24
R11
R12
AUDIO TYPE 247
247
C25
C26
R13
T2
SPEAKER FIELD
L13
L14
R3
R4
R6
R7
R14
L9
L10
C4
C15
R15
C6
R16
OSCILLATOR TYPE 227
R17
C12
C13
C11
L11
S1
C32
110
120
2 AMP. FUSE
T-1
110 VOLTS A.C.
R18
RECT. 280
C29
C30
C31
L12

Stage	Tube	Plate	Screen	Cathode	Grid	Fil.	Plate	Current
RF	551	225	90	18	3	2.2	3.5	MA
Oscillator	227	60	......	0	0	2.2	5	MA
1st Det.	551	225	80	8	7	2.2	2	MA
I.F.	551	240	80	4	3	2.2	4	MA
2nd Det.	227	130	......	0	15	2.2	1	MA
Audio	247	240	240	......	16	2.2	30	MA
Audio	247	240	240	......	16	2.2	30	MA
Rectifier	280	......	......	......	......	5	38	MA

IF PEAK 175 KC

Model 20 (1931)

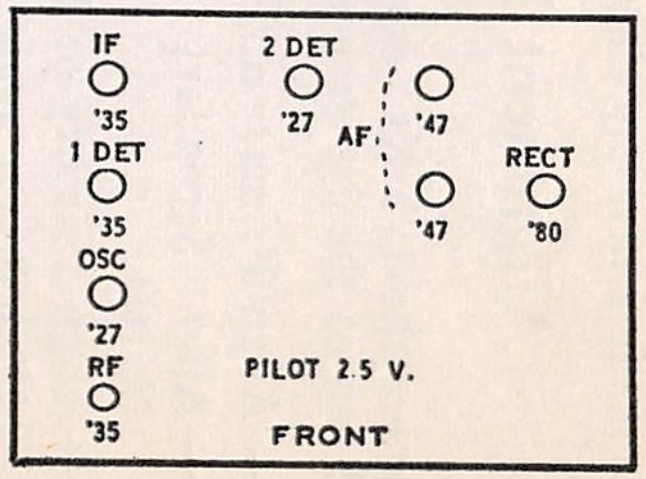
IF
'35
1 DET
'35
OSC
'27
RF
'35
2 DET
'27
AF
'47
'47
RECT
'80
PILOT 2.5 V.
FRONT

MODEL 20-J, 20-K, 20-L
Electrical Values
Notes

UNITED AMERICAN BOSCH CORP.

Antenna Adjustment—The antenna adjustment must be made when any change is made in the antenna.

Alignment Instruction

1. Connect the 175 KC output of the oscillator to the grid cap of the 1st detector.
   - a—Align Primary of 2nd IF Transformer (C9).
   - b—Align Secondary of 2nd IF Transformer (C10).
   - c—Align Primary of 1st IF Transformer (C7).
   - d—Align Secondary of 1st IF Transformer (C8).

(It is advisable to go over these adjustments twice to insure accuracy).

2. Reset the Oscillator for 1400 KC, connected to the 1st detector grid as before.
   - a—Align the Oscillator tuning condenser C6 by unscrewing two full turns, then turning slowly to the right until the first peak is reached.
3. Connect the 1400 KC output to the Antenna Connection of the set.
   - a—Align Antenna Trimmer and 1st detector C3.

C 1—Antenna Trimmer
C 2
C 3
C 4 Tuning Condenser Gang with trimmer condensers
C 5
C 6
C 7
C 8 Variable Condenser Unit 75 to 140 mmf.
C 9
C 10 Variable Condenser Unit 75 to 140 mmf.
C 11—Oscillator Series Trimming Condenser
C 12—By-pass Condenser—.05 mfd.
C 13—Oscillator Series Tuning Condenser .0011 mfd.
C 14—Oscillator Plate By-pass Condenser .05 mfd.
C 15—Oscillator Grid Condenser .0001 mfd.
C 16—RF Cathode By-pass Condenser .05 mfd.
C 17—RF Screen By-pass Condenser .05 mfd.
C 18—RF Plate By-pass Condenser .05 mfd.
C 19—1st Detector Blocking Condenser .05 mfd.
C 20—IF Blocking Condenser .05 mfd.
C 21—Detector Cathode By-pass Condenser .25 mfd.
C 22—Detector Plate By-pass Condenser .0011 mfd.
C 23—Audio Coupling Condenser .05 mfd.
C 24—Audio Grid By-pass Condenser .05 mfd.
C 25—Audio Plate By-pass Condenser .02 mfd.
C 26—Tone Selector Condenser .1 mfd.
C 27—Screen By-pass Condenser .5 mfd.
C 28—Oscillator By-pass Condenser .5 mfd.
C 29—Filter Condenser 1.8 mfd.
C 30—Filter Condenser 3.5 mfd.
C 31—Filter Condenser 1.8 mfd.
C 32—Buffer Condenser .05 mfd.

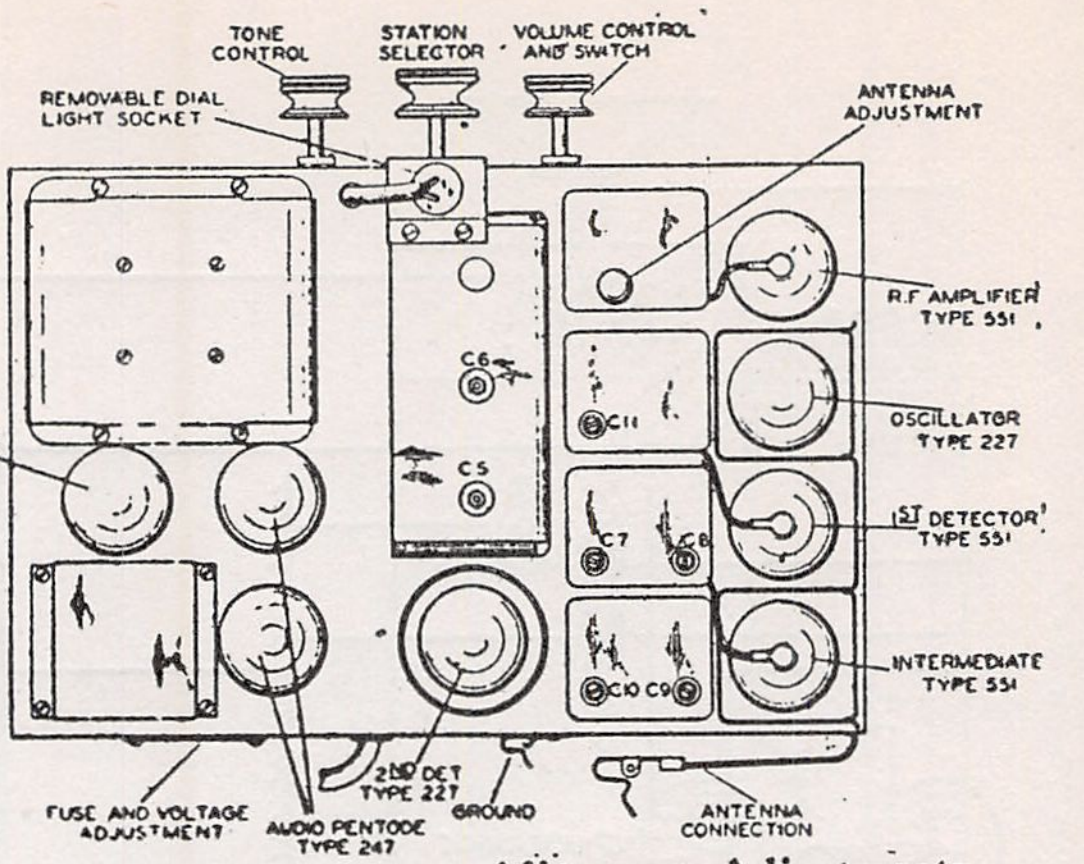

Alignment Adjustments

4. Retune the receiver to 600 KC and set oscillator to this frequency.
   - a—Align the oscillator low frequency adjustment C11. Rotate the dial slowly back and forth over a range of perhaps ¼″, at the same time rotating C11 back and forth until the maximum output is reached.
5. Return to 1400 KC (Receiver and Oscillator).
   - a—Re-align C3, C6 and the Antenna Trimmer.

R 1—Volume Control 10,000 ohms
R 2—Series Resistor 200 ohms
R 3—RF Screen Resistor 1000 ohms
R 4—RF Plate Resistor 1000 ohms
R 5—1st Detector Plate Resistor 1000 ohms
R 6—Divider Resistor 20,000 ohms
R 7—Screen Supply Resistor 25,000 ohms
R 8—2nd Detector Cathode Resistor 15,000 ohms
R 9—2nd Detector Plate Resistor 100,000 ohms
R 10—Audio Grid Resistor 250,000 ohms
R 11—Audio Grid Resistor 100,000 ohms
R 12—Audio Bias Resistor 200 ohms
R 13—Tone Control
R 14—Cathode Resistor 2000 ohms
R 15—Oscillator Grid Resistor 5000 ohms
R 16—Oscillator Grid Resistor 100,000 ohms
R 17—Oscillator Plate Resistor 40,000 ohms
T 1—Main Power Transformer
T 2—Output Transformer
S 1—Main Switch.
L 1—Antenna Coil
L 2—Primary of RF Coil
L 3—Secondary of RF Coil
L 4—I.F. primary coil
L 5—I.F. secondary coil
L 6—I.F. primary coil
L 7—I.F. secondary coil
L 8—Detector plate choke
L 9—Oscillator coupling coil
L 10—Oscillator grid coil
L 11—Oscillator plate coil
L 12—Filter choke coil
L 13—Speaker Field Coil
L 14—Speaker Voice Coil

UNITED AMERICAN BOSCH CORP.

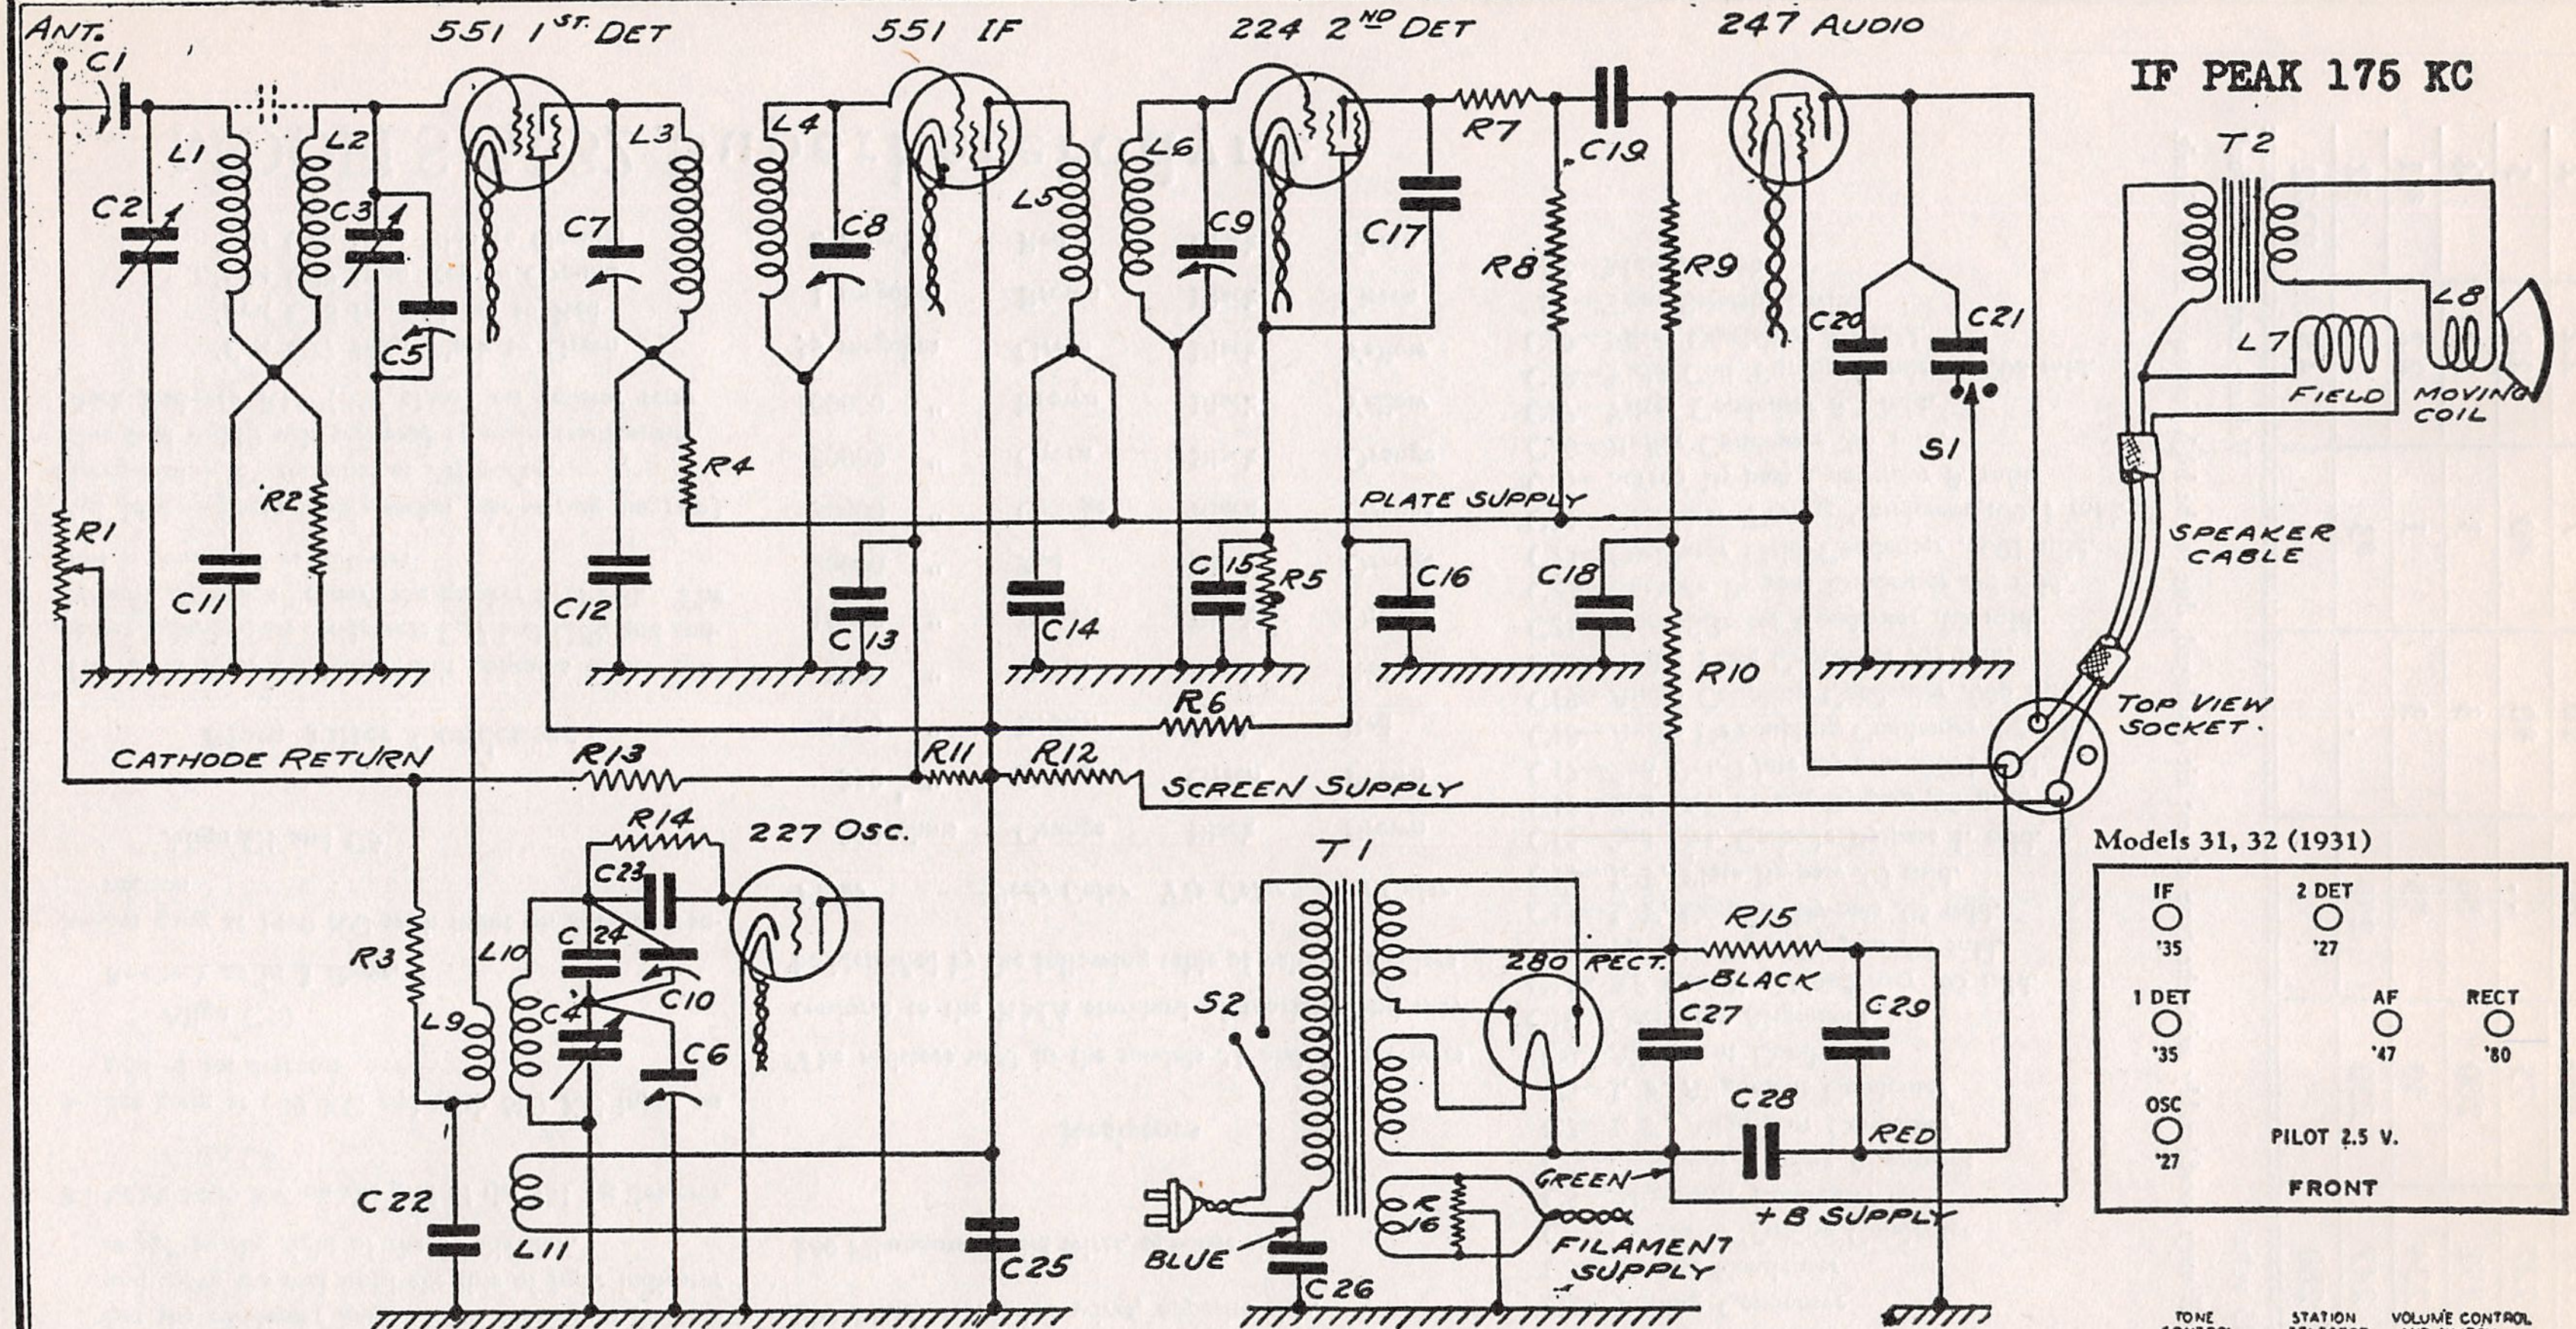
IF PEAK 175 KC
ANT.
C1
C2
L1
L2
C3
C5
R1
R2
C11
551 1ST DET
L3
C7
R4
C12
551 IF
L4
C8
C13
L5
C14
224 2ND DET
L6
C9
C15
R5
C16
C17
R6
R7
C19
R8
R9
C18
R10
PLATE SUPPLY
247 AUDIO
C20
C21
S1
T2
L7
FIELD
L8
MOVING COIL
SPEAKER CABLE
TOP VIEW SOCKET
CATHODE RETURN
R13
R11
R12
SCREEN SUPPLY
R14
C23
227 OSC.
C24
C10
C4
C6
R3
L10
L9
C22
L11
C25
T1
S2
BLUE
C26
280 RECT.
R15
BLACK
C27
C29
C28
RED
GREEN
R16
FILAMENT SUPPLY
+B SUPPLY
Models 31, 32 (1931)
IF '35
2 DET '27
1 DET '35
AF '47
RECT '80
OSC '27
PILOT 2.5 V.
FRONT

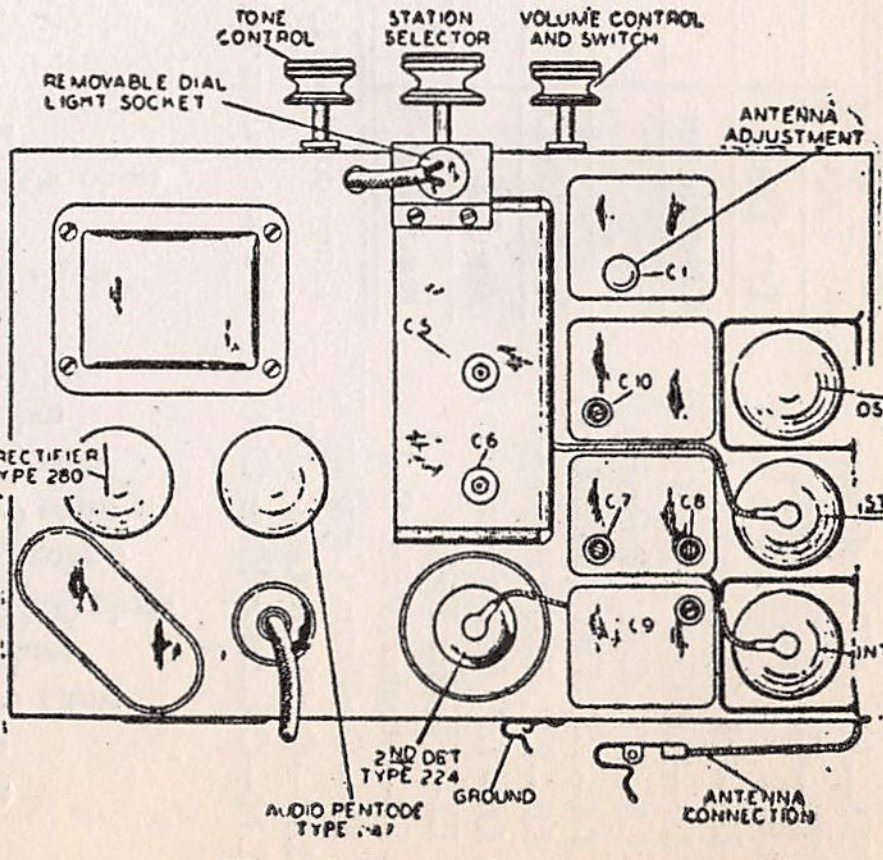
TONE CONTROL
STATION SELECTOR
VOLUME CONTROL AND SWITCH
REMOVABLE DIAL LIGHT SOCKET
ANTENNA ADJUSTMENT
C1
C2
C6
C10
C7
C8
C9
OSCILLATOR TYPE 227
1ST DETECTOR TYPE 551
INTERMEDIATE TYPE 551
RECTIFIER TYPE 280
2ND DET TYPE 224
AUDIO PENTODE TYPE 247
GROUND
ANTENNA CONNECTION

Top View of Model 31 Chassis

Antenna Adjustment—The antenna knob, located as shown on the drawing (figure 1) is for the purpose of obtaining the most efficient adjustment of the receiver to the antenna. Simply tune in a semi-distant broadcast station at reduced volume and turn the adjustment knob until the point of loudest reception is found. Select if possible a station received near 140 on the dial. The adjustment is permanent, and need not be disturbed unles the antenna is changed.

Line Voltage—The model 31 receiver is designed for use on 50 to 60 cycle alternating current, 105 to 120 volts. The model 32 is designed for 25 to 50 cycle, 105 to 120 volt alternating current. If excessive line voltage is encountered, some type of series resistance or "voltage regulator" should be employed.

Tone Control—The tone is varied from treble to bass by means of a two-position snap switch operated by the right hand knob. The range of motion of this switch has been reduced from that found on previous models, and care should be taken not to force the switch beyond the stop position.

MODELS 31-32
Superheterodyne

MODEL 31,32 AC
Electrical Values
Voltage

UNITED AMERICAN BOSCH CORP.

T1—Power Transformer
T2—Output Transformer

L1—RF Coil
L2—RF Coil
L3—I.F. Coil (Primary)
L4—I.F. Coil (Secondary)
L5—I.F. Coil (Primary)
L6—I.F. Coil (Secondary)
L7—Speaker Field
L8—Speaker Voice Coil
L9—Oscillator Coupling Coil
L10—Oscillator Grid Coil
L11—Oscillator Plate Coil

SOCKET VOLTAGES

Stage	Tube	Plate	Screen	Cathode	Grid	Fil.	Plate MA
1st Det.	551	260	80	10	7	2.2	2
Oscillator	227	75	..	*0	*0	2.2	5
I.F.	551	260	80	3	3	2.2	4
2nd Det.	224	50	*5	3	1	2.2	*.1
Audio	247	250	250	..	*3	2.2	32
Rectifier	280					4.8	22-22

Line voltage—115 volts

Volume control fully "on"

* These values will vary considerably with the type of test kit employed, due to the high resistance in the circuit.

ALIGNMENT

The following instructions for the alignment of the condensers in the models 31 and 32 describe the operation as done with any type of special oscillator designed for the adjustment of superheterodyne receivers. Such an oscillator is essential for anyone who handles more than a small amount of service work. Such oscillators are designed to provide ordinary broadcast frequencies, and in addition, a 175 kilocycle for the alignment of the intermediate frequency (I. F.) stages.

Alignment Instructions:

1—With 175 KC on the grid of the 551 IF tube
Align C9

2—With 175 KC on the grid of the 551 1st detector
Align C7, C8 and re-check C9

Set the condenser gang at the maximum position and move the dial until the line of light indicator is ¼" to the right of the 55 division.

3—With 1400 KC on the grid of the 551 1st detector
Align C6

4—Set gang at 600 KC and with 600 KC input on grid of 1st detector

Align C10

Re-check as in 3 above.

5—Set gang at 1400 KC with input on antenna connection

Align C1 and C5

Main Filter Condenser

The main filter condenser unit contains buffer condenser C26, by-pass condensers C27 and C29, and condenser C28 which "tunes" the speaker field coil. The unit is connected as follows:

Red lead —Speaker plug socket (see wiring diagram)
Green lead—"F" terminal of 280 socket
Blue lead —110 volt terminal at main transformer
Black lead—to R15 (350 ohms) on resistor strip

Test C27 from Black to Green
Test C28 from Green to Red
Test C29 from Red to Ground
Test C26 from Blue to Ground

Main Power Transformer

The various transformer windings may be identified for testing purposes as follows: Four leads are brought out on the terminal strip side and five on the opposite side.

Primary Winding—two terminal strip terminals nearest rear of set.

551, 224, 227 Filaments—heavy wires, terminal strip side.

Plate Center Tap—terminal nearest front of set.

280 Plates—stranded wires, opposite side.

280 Filaments—solid wires, opposite side.

Resistors

The resistors used in the models 31 and 32 receivers conform to the RMA standard of marking and may be identified by the following table of value and colors

Value	*Body Color*	*Tip Color*	*Dot Color*
300 ohms	Orange	Black	Brown
350 "	Orange	Green	Brown
1000 "	Brown	Black	Red
5000 "	Green	Black	Red
10000 "	Brown	Black	Orange
20000 "	Red	Black	Orange
30000 "	Orange	Black	Orange
50000 "	Green	Black	Orange
100000 "	Brown	Black	Yellow
½ megohm	Green	Black	Yellow
1 megohm	Brown	Black	Green
2 megohm	Red	Black	Green

R1—Volume Control—10,000 ohms
R2—Coupling Resistor—1000 ohms
R3—1st Det. Cathode Resistor 5000 ohms
R4—1st. Det. Plate Resistor 1000 ohms
R5—2nd Det. Cathode Resistor—50,000 ohms
R6—2nd Det. Screen Resistor—2 megohms
R7—2nd Det. Plate Resistor—10,000 ohms
R8—2nd Det. Plate Desistor—1 megohm
R9—Audio Grid Resistor—½ megohm
R10—Audio Grid Resistor—100,000 ohms
R11—Divider Resistor—20,000 ohms
R12—Screen Supply Resistor—30,000 ohms
R13—Cathode Resistor—300 ohms
R14—Oscillator Grid Resistor—100,000 ohms
R15—Audio Bias Resistor—350 ohms
R16—Mid Tap Resistor
C1—Antenna Trimmer
C2—Tuning Condenser
C3—Tuning Condenser
C4—Oscillator Tuning Condenser
C5—Alignment Condenser
C6—Oscillator Tuning Alignment
C7—I. F. Alignment Condenser
C8—I. F. Alignment Condenser
C9—Alignment Condenser
C10—Oscillator Alignment
C11—RF Coupling Condenser .05 mfd.
C12—1st Det. Plate By-pass .05 mfd.
C13—I. F. Cathode By-pass .05 mfd.
C14—I. F. Plate By-pass .05 mfd.
C15—2nd Det. Cathode By-pass 1. mfd.
C16—2nd Det. Screen By-pass .25 mfd.
C17—2nd Det. Plate By-pass .0001 mfd.
C18—Audio De-coupling Condenser .02 mfd.
C19—Audio Coupling Condenser .006 mfd.
C20—Audio Plate Condenser .05 mfd.
C21—Tone Selector Condenser .05 mfd.
C22—Cathode By-pass Condenser .05 mfd.
C23—Oscillator Grid Condenser .0001 mfd.
C24—Oscillator Tuning Condenser .0011 mfd.
C25—Screen By-pass Condenser 8. mfd.
C26—Buffer Condenser .08 mfd.
C27—Filter Condenser 3.5 mfd.
C28—Field Coil Tuning Condenser .08 mfd.
C29—Filter Condenser 3.5 mfd.
S1—Tone Selector Switch
S2—Main Switch

MODELS 31-32 Superheterodyne

Capacitor Plate:

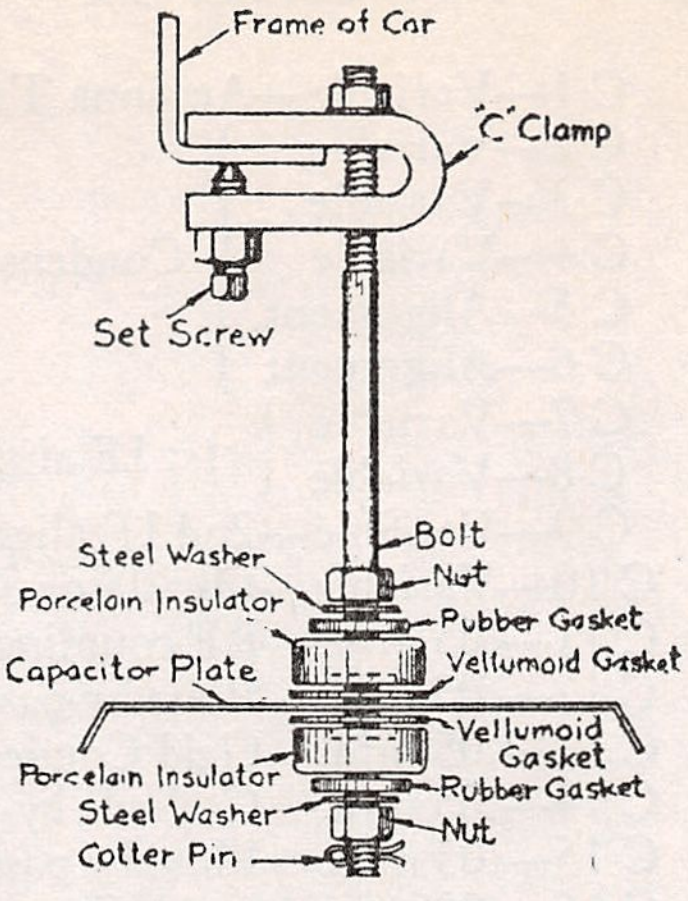

Fig. 5—Capacitor Plate.

In Figure 5 is shown the means by which this plate is supported underneath the chassis of the automobile. The insulation has been very carefully considered and is so designed that it is unaffected by mud, water, or dust. A location on either side of the car frame or one across the rear, parallel to the axle, will be satisfactory. The plate is adjustable and it is desirable that it be lengthened as much as is possible without interfering with the mechanism of the car. Do not, however, bring the plate too near the motor compartment. Make sure that the clamping nut of the capacitor plate supporting bolt is tightened before fastening the clamp in place on the car frame with the pointed screw. The clamping nut, besides locking the supporting bolt, also serves to reinforce the "C" clamp against any tendency to open. Complete the installation by tightening the set screw and lock nut. The capacitor plate must be mounted as low as possible without interfering with the road clearance, and not too closely to large metal objects, such as "B" battery box, muffler, or car frame.

Chassis:

The chassis mounting is a rigid frame "D" having two adjustable brackets, "C" to support it against the dash board. Refer to Figure 2. In the installation of the set these brackets are assembled and the frame work used as a template to locate the holes in the dash board for the holding bolts. The bracket must be so located that clearance will be obtained for all obstructions. On the engine side, care should be taken to avoid interference with the vacuum tank or other devices mounted there. In using this bracket as a template, do not fail to use the radio set as a guide to obtain clearance for the projection of the set and for the control shaft and the battery cable. Drill the holes as located, using a 5/16" diameter drill in order that unavoidable irregularities in the location of the holes may be taken care of when the set is screwed in place. Next, mount the chassis on its rubber cushions and secure the entire assembly in position. Drive the holding bolts from the front and pull the set securely in place. In some cases, where the dashboard is free of all obstructions, it is possible to dispense with the brackets "C" and bolt the mounting frame directly against the engine bulkhead. This type of installation provides slightly more leg room. The frame is used as a template for laying out the mounting holes as before.

Capacitor Coupler:

This unit must be mounted at the nearest convenient point to the capacitor plate. The mounting bracket is permanently fastened to the coupler and it is only necessary to bolt the bracket to the car frame. See Figure 6.

The coupler is provided with two connecting leads. The red lead should be cut to a length just sufficient to reach the capacitor plate and the spade terminal (which is shipped loosely clipped to the wire) soldered to the end. Connection is made at the capacitor plate by means of a terminal screw and clip.

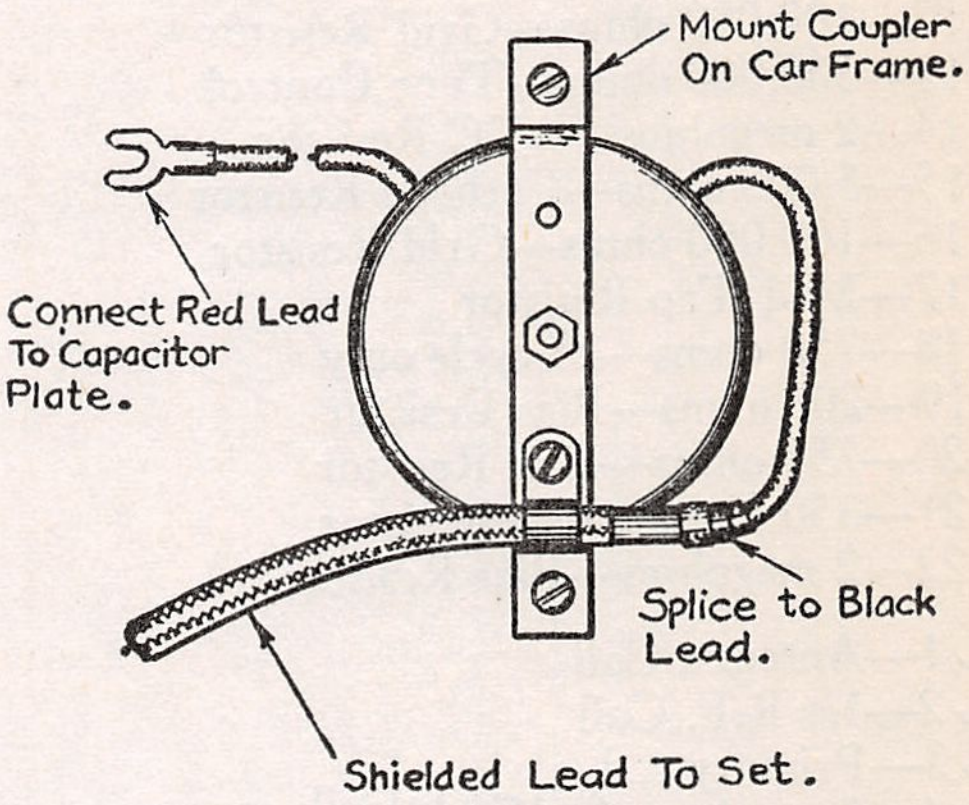

Fig. 6—Coupler.

The shielded lead from the receiver must be tightly clamped in the cable clamp provided on the coupler unit. Connect the wire in the shielded lead to the black wire from the coupler and carefully solder and tape the joint. Be careful that the woven shielding is effectively grounded through the clamp provided on the coupler, and is kept back from the joint in order to prevent a short circuit.

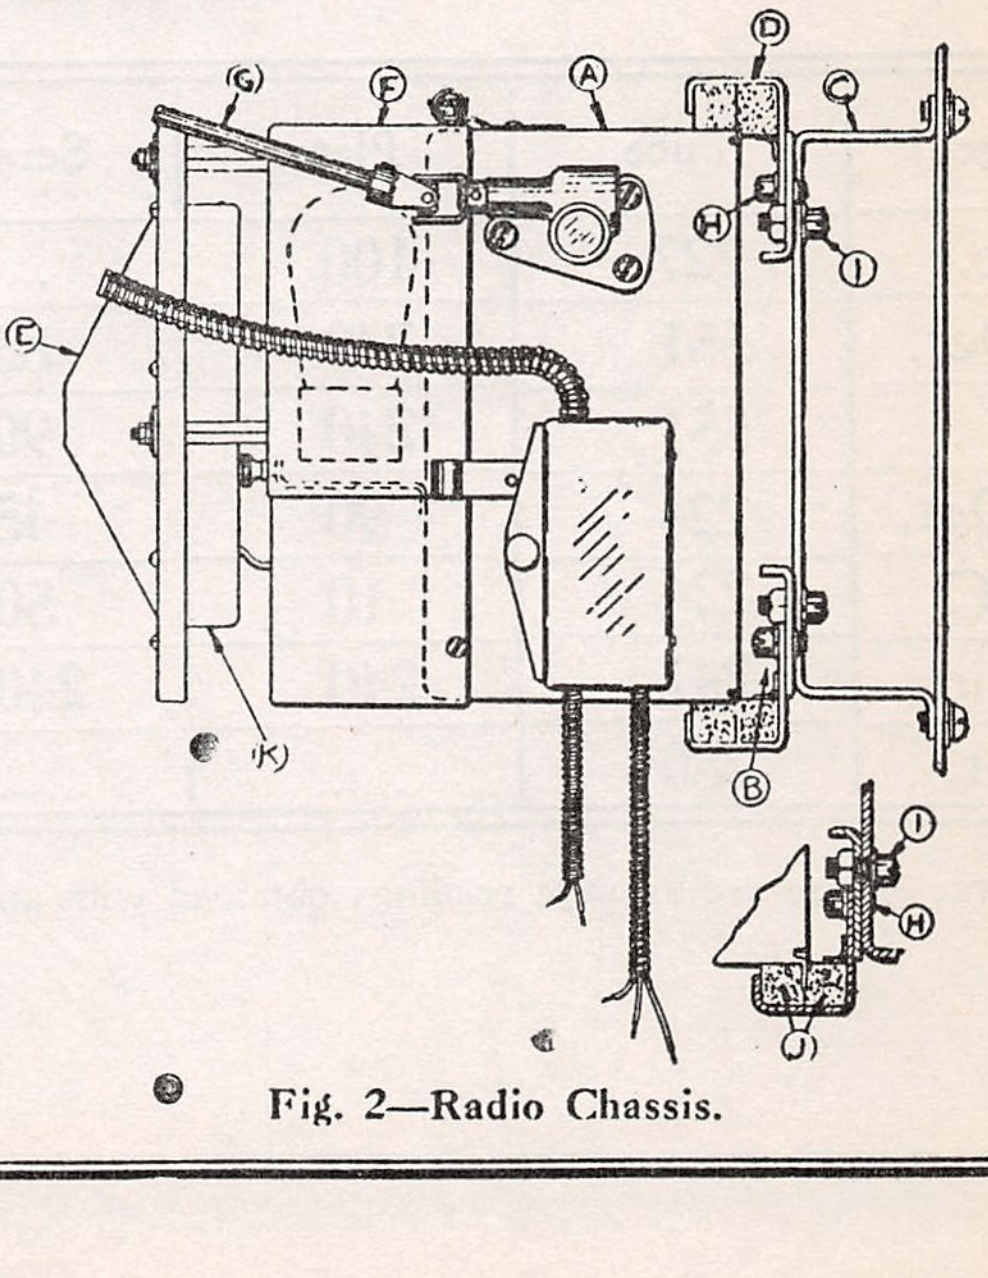

Fig. 2—Radio Chassis.

NOMENCLATURE — MODEL 91

R 1—500,000 ohms—Grid Resistor
R 2—10,000 ohms—Grid Resistor
R 3—1,000 ohms—Plate Resistor
R 4—300 ohms—Cathode Divider Resistor
R 5—20,000 ohms—Cathode Divider Resistor
R 6—15,000 ohms—Screen Supply Resistor
R 7—20,000 ohms—Screen Resistor
R 8—25,000 ohms—Cathode Resistor
R 9—50,000 ohms—Screen Resistor
R 10—500,000 ohms—Plate Resistor
R 11—500,000 ohms—Volume Control
R 12—100,000 ohms—Grid Resistor
R 13—500,000 ohms—Tone Control
R 14—2 megohms—AVC Resistor
R 15—5,000 ohms—Cathode Resistor
R 16—100,000 ohms—Grid Resistor
R 17—Mid Tap Resistor
R 18—750 ohms—25 cycle only
R 19—200 ohms—Bias Resistor
R 20—750 ohms—Bias Resistor
R 21—350 ohms—Bias Resistor
R 22—2 megohms—Bias Resistor

L 1—Antenna Coil
L 2—1st R.F. Coil
L 3—Primary }
L 4—Secondary } 1st IF Coil
L 5—Primary }
L 6—Secondary } 2nd IF Coil
L 7—Cathode Winding }
L 8—Plate Winding } Oscillator Coil
L 9—Grid Winding }
L 10—Primary }
L 11—Secondary } Output Transformer T 2
L 12—Field Coil }
L 13—Voice Coil } Loud Speaker

C 1—Variable—Antenna Trimmer
C 2—Variable }
C 3—Variable }
C 4—Variable } Condenser Gang
C 5—Alignment }
C 6—Alignment }
C 7—Variable }
C 8—Variable } 1st IF alignment condenser
C 9—Variable—2nd IF alignment condenser
C 10—Variable—Oscillator Series Condenser
C 11—.05 mfd.—RF coupling condenser
C 12—.05 mfd.—Plate by-pass condenser
C 13—.05 mfd.—Grid Condenser
C 14—.05 mfd.—Cathode by-pass condenser
C 15—.05 mfd.—Plate by pass condenser
C 16—.0001 mfd.—AVC condenser
C 17—.5 mfd.—Cathode by-pass
C 18—.25 mfd.—Screen by-pass
C 19—.00025 mfd.—Plate by-pass
C 20—.006 mfd.—Audio coupling condenser
C 21—.25 mfd.—Grid by-pass
C 22—.01 mfd.—Plate by-pass
C 23—.05 mfd.—Tone Control Condenser
C 24—.05 mfd.—Grid condenser
C 25—.05 mfd.—Cathode by-pass
C 26—.0011 mfd.—Oscillator series condenser
C 27—.0001 mfd.—Oscillator grid condenser
C 28—8 mfd.—Screen by-pass
C 29—.01 mfd.—Buffer condenser
C 30—16 mfd.—Filter condenser
C 31—4 mfd.—Filter condenser
C 32—.01 mfd.—Field shunt condenser

SOCKET VOLTAGES

Stage	Tube	Plate	Screen	Cathode	Grid	Fil.	Plate MA
Osc.	227	100	....	0	5	2.2	4
1st Det.	551	240	85	0	3.5	2.2	.1
IF	551	240	90	3	.5	2.2	2
2nd Det.	224	90	45	5	4	2.2	.1
AVC	224	10	50	60	.5	2.2	.1
Audio	247	240	240	....	16	2.2	30
Rect.	280	......	......	....	....	4.8	25

Note: These are average readings obtained with an ordinary set analyzer.

MODEL 91,92
Schematic

UNITED AMERICAN BOSCH CORP.

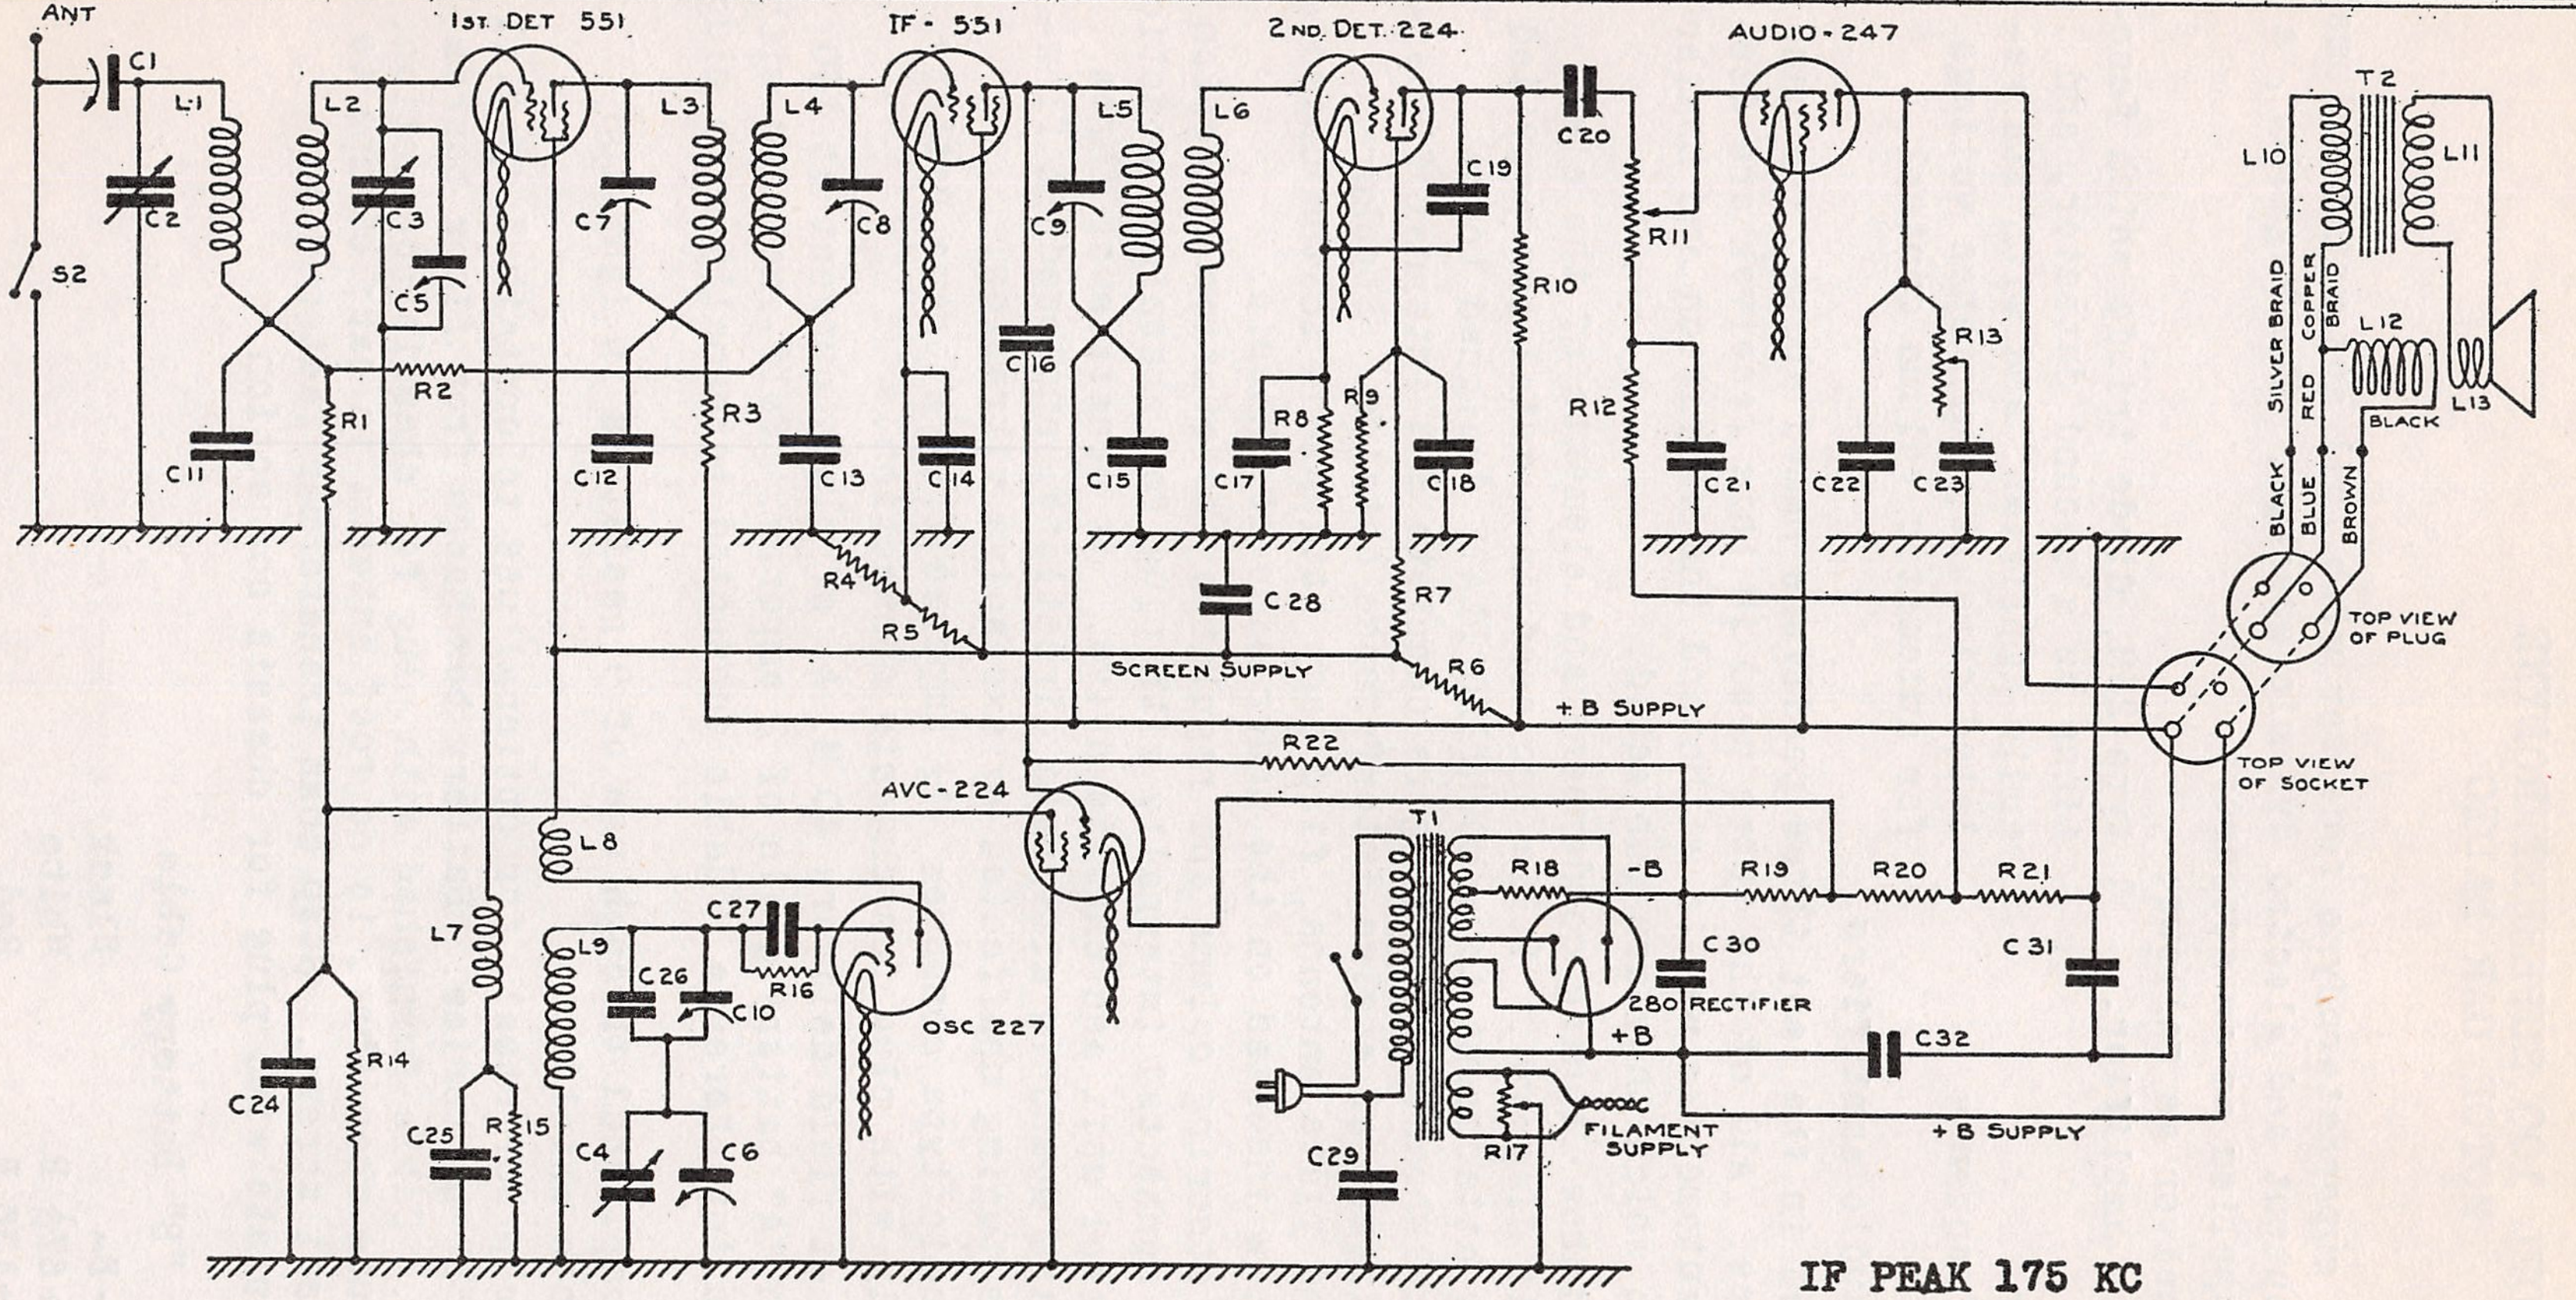
ANT
C1
C2
L1
S2
L2
C3
C5
1st. DET 551
R1
R2
C11
C24
R14
L3
C7
R3
C12
L4
C8
C13
IF - 551
C14
R4
R5
L5
C9
C16
C15
L6
2 nd. DET. 224
C19
R8
R9
C17
C18
C28
R7
R6
R10
SCREEN SUPPLY
+ B SUPPLY
C20
R11
R12
C21
AUDIO - 247
R13
C22
C23
R22
AVC - 224
L8
L7
L9
C27
C26
R16
C10
OSC 227
C25
R15
C4
C6
T1
R18
-B
R19
R20
R21
C30
C31
280 RECTIFIER
+B
C32
R17
FILAMENT SUPPLY
+ B SUPPLY
C29
T2
L10
L11
L12
L13
SILVER BRAID
RED
COPPER BRAID
BLACK
BLACK
BLUE
BROWN
TOP VIEW OF PLUG
TOP VIEW OF SOCKET

IF PEAK 175 KC

Fig. 2—Schematic Diagram — Model 91

LOCATION OF PARTS

R 9, R 11, R 13, R 17, C 11, C 19, C 22, C 23, C 28, C 32 on Chassis Base.
R 3, R 4, R 5, R 6, R 15, R 16, C 14, C 25, C 27 on Resistor Strip.
R 7, R 8, R 10, R 12, C 17, C 18, C 20, C 21 on Resistor Strip.
R 1, R 14, R 19, R 20, R 21, C 24, C 29 on Resistor Strip.
C 10, C 26, L 7, L 8, L 9 on Oscillator Coil Assembly.
R 2, C 7, C 8, C 12, C 13, L 3, L 4 on 1st IF Coil Assembly.
R 22, C 9, C 15, C 16, L 5, L 6 on 2nd IF Coil Assembly.
C 30, C 31 in Housed Filter Assembly.
C 1, C 2, C 3, C 4, C 5, C 6 on Main Tuning Condenser Gang.

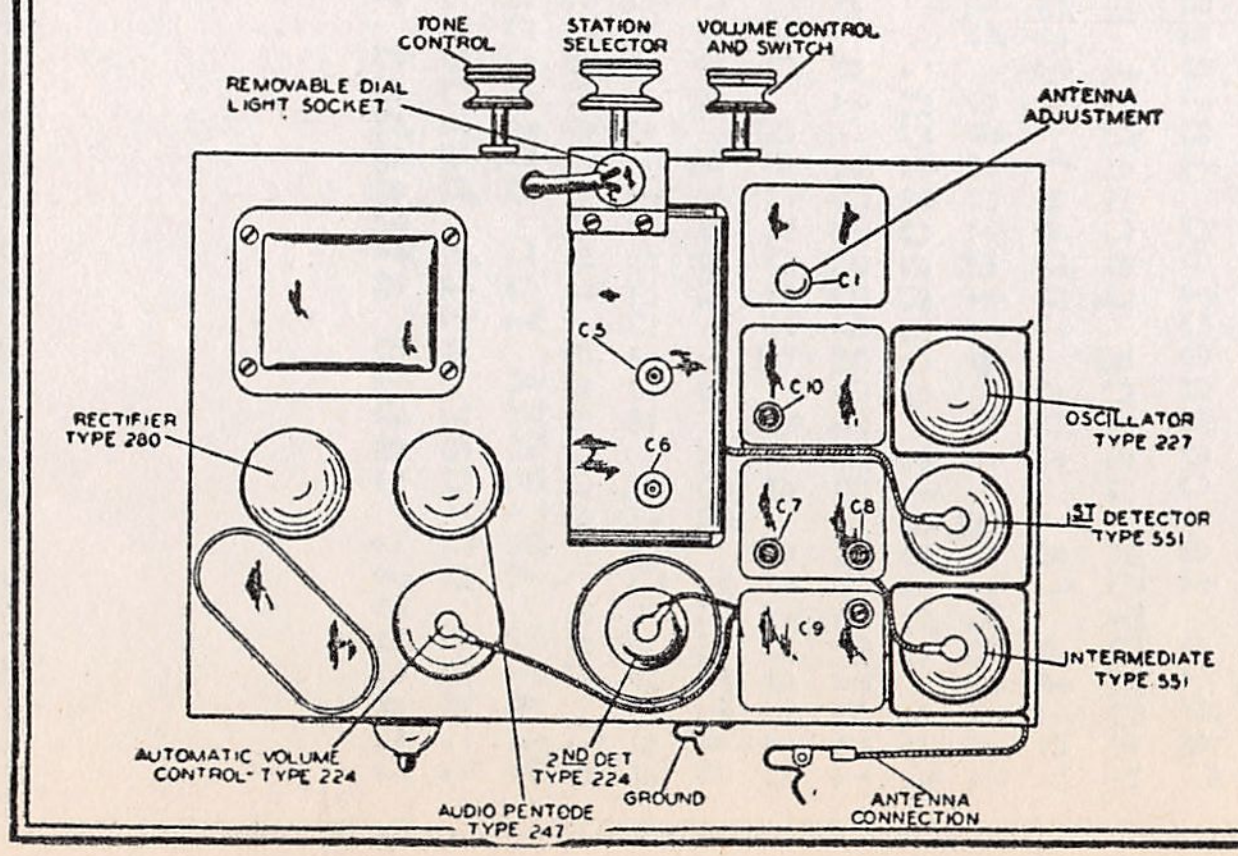
TONE CONTROL
STATION SELECTOR
VOLUME CONTROL AND SWITCH
REMOVABLE DIAL LIGHT SOCKET
ANTENNA ADJUSTMENT
C1
C5
C6
C10
C7
C8
C9
RECTIFIER TYPE 280
OSCILLATOR TYPE 227
1ST DETECTOR TYPE 551
INTERMEDIATE TYPE 551
AUTOMATIC VOLUME CONTROL- TYPE 224
2ND DET TYPE 224
AUDIO PENTODE TYPE 247
GROUND
ANTENNA CONNECTION

Models 91, 92 (1932)

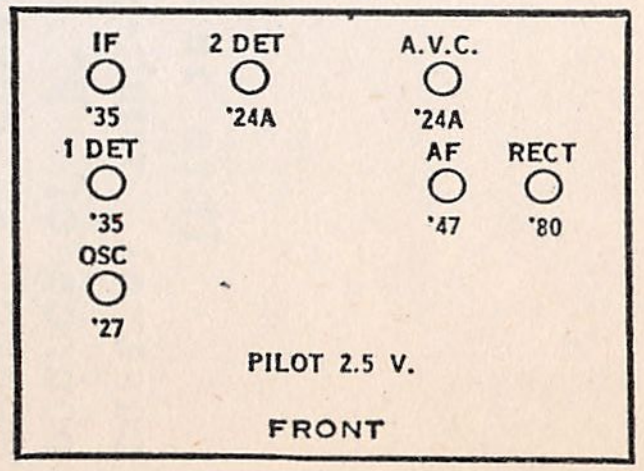
IF
'35
2 DET
'24A
A.V.C.
'24A
1 DET
'35
AF
'47
RECT
'80
OSC
'27
PILOT 2.5 V.
FRONT

MODEL 100 Auto
Advertised 9-20
Data

UNITED AMERICAN BOSCH CORP.

MODEL 100 SUPERHETERODYNE
MOTOR CAR RADIO

This is a seven tube, superheterodyne receiver with full automatic volume control, push-pull pentode output and electro dynamic speaker. The Magmotor, a source of "B" current, is supplied as an accessory.

TUBES are furnished with receiver as follows:

- 1 type 236, radio frequency amplifier.
- 1 type 237, oscillator.
- 1 type 236, first detector.
- 1 type 236, intermediate frequency amplifier.
- 2 type 238, as push-pull audio amplifiers.
- 1 type 238, diode triode which functions as a second detector, and audio-amplifier, and with its related circuit, furnishes voltage for automatic volume control.

The type 238 tubes used in the last three positions named above, are pentode power output tubes. All of the tubes used in this receiver are designed especially for automobile use to withstand the vibration and heater voltage fluctuation to which they are subjected.

CHASSIS contains the tubes, tuning condensers and elements of the electrical circuit. (See circuit diagram). It is enclosed in a metal box provided with mounting hooks for easy attachment to a MOUNTING PLATE designed to be mounted either side of the bulkhead. Shielding is complete and internal filtering is so arranged that a minimum of engine interference obtains. Speaker, battery box, control head and plate antenna, find easy attachment to the chassis through cable plug connections inserted on the under side of chassis.

CONTROL UNIT fastens to the steering column and regulates the station selection and volume level. Cable is connected internally with plug for chassis connection.

FLEXIBLE SHAFT connects control unit and chassis drive. It consists of three layers of five strands of wire wound in alternate directions, enclosed in flexible tube: provides accurate tuning unaffected by excessive vibration.

LOUD SPEAKER of electro dynamic type consumes 1¼ amperes from storage battery. Cable is connected internally with plug for chassis connection.

MAGMOTOR using permanet magnet field delivers 40 M. A. of plate current at 160 volts (at the tubes) with an "A" battery drain of 2 amperes. Self-enclosed with filtering to eliminate brush interference. Cable connected internally with plug for chassis connection.

IGNITION SUPPRESSION is accomplished through use of 9 resistors in ignition circuits and grouning of cable shields.

BATTERY BOX of heavy weather proof steel, for optional use to contain 3 special Heavy Duty automobile type "B" batteries. Battery box hangs from floor boards of car, access from the top. Cable furnished with plug for chassis connection.

PLATE ANTENNA for optional use when there is no roof antenna in car: clamps to frame of car with hardened set screws. Step down transformer fastened to bracket; cable attached to plate with plug for chassis connection.

"B" Battery Cable

- B-	Black
+67½ B	White
+135 B	Red

UNITED AMERICAN BOSCH CORP

MODEL 100 Auto
Advertised 9-20
Schematic
Values

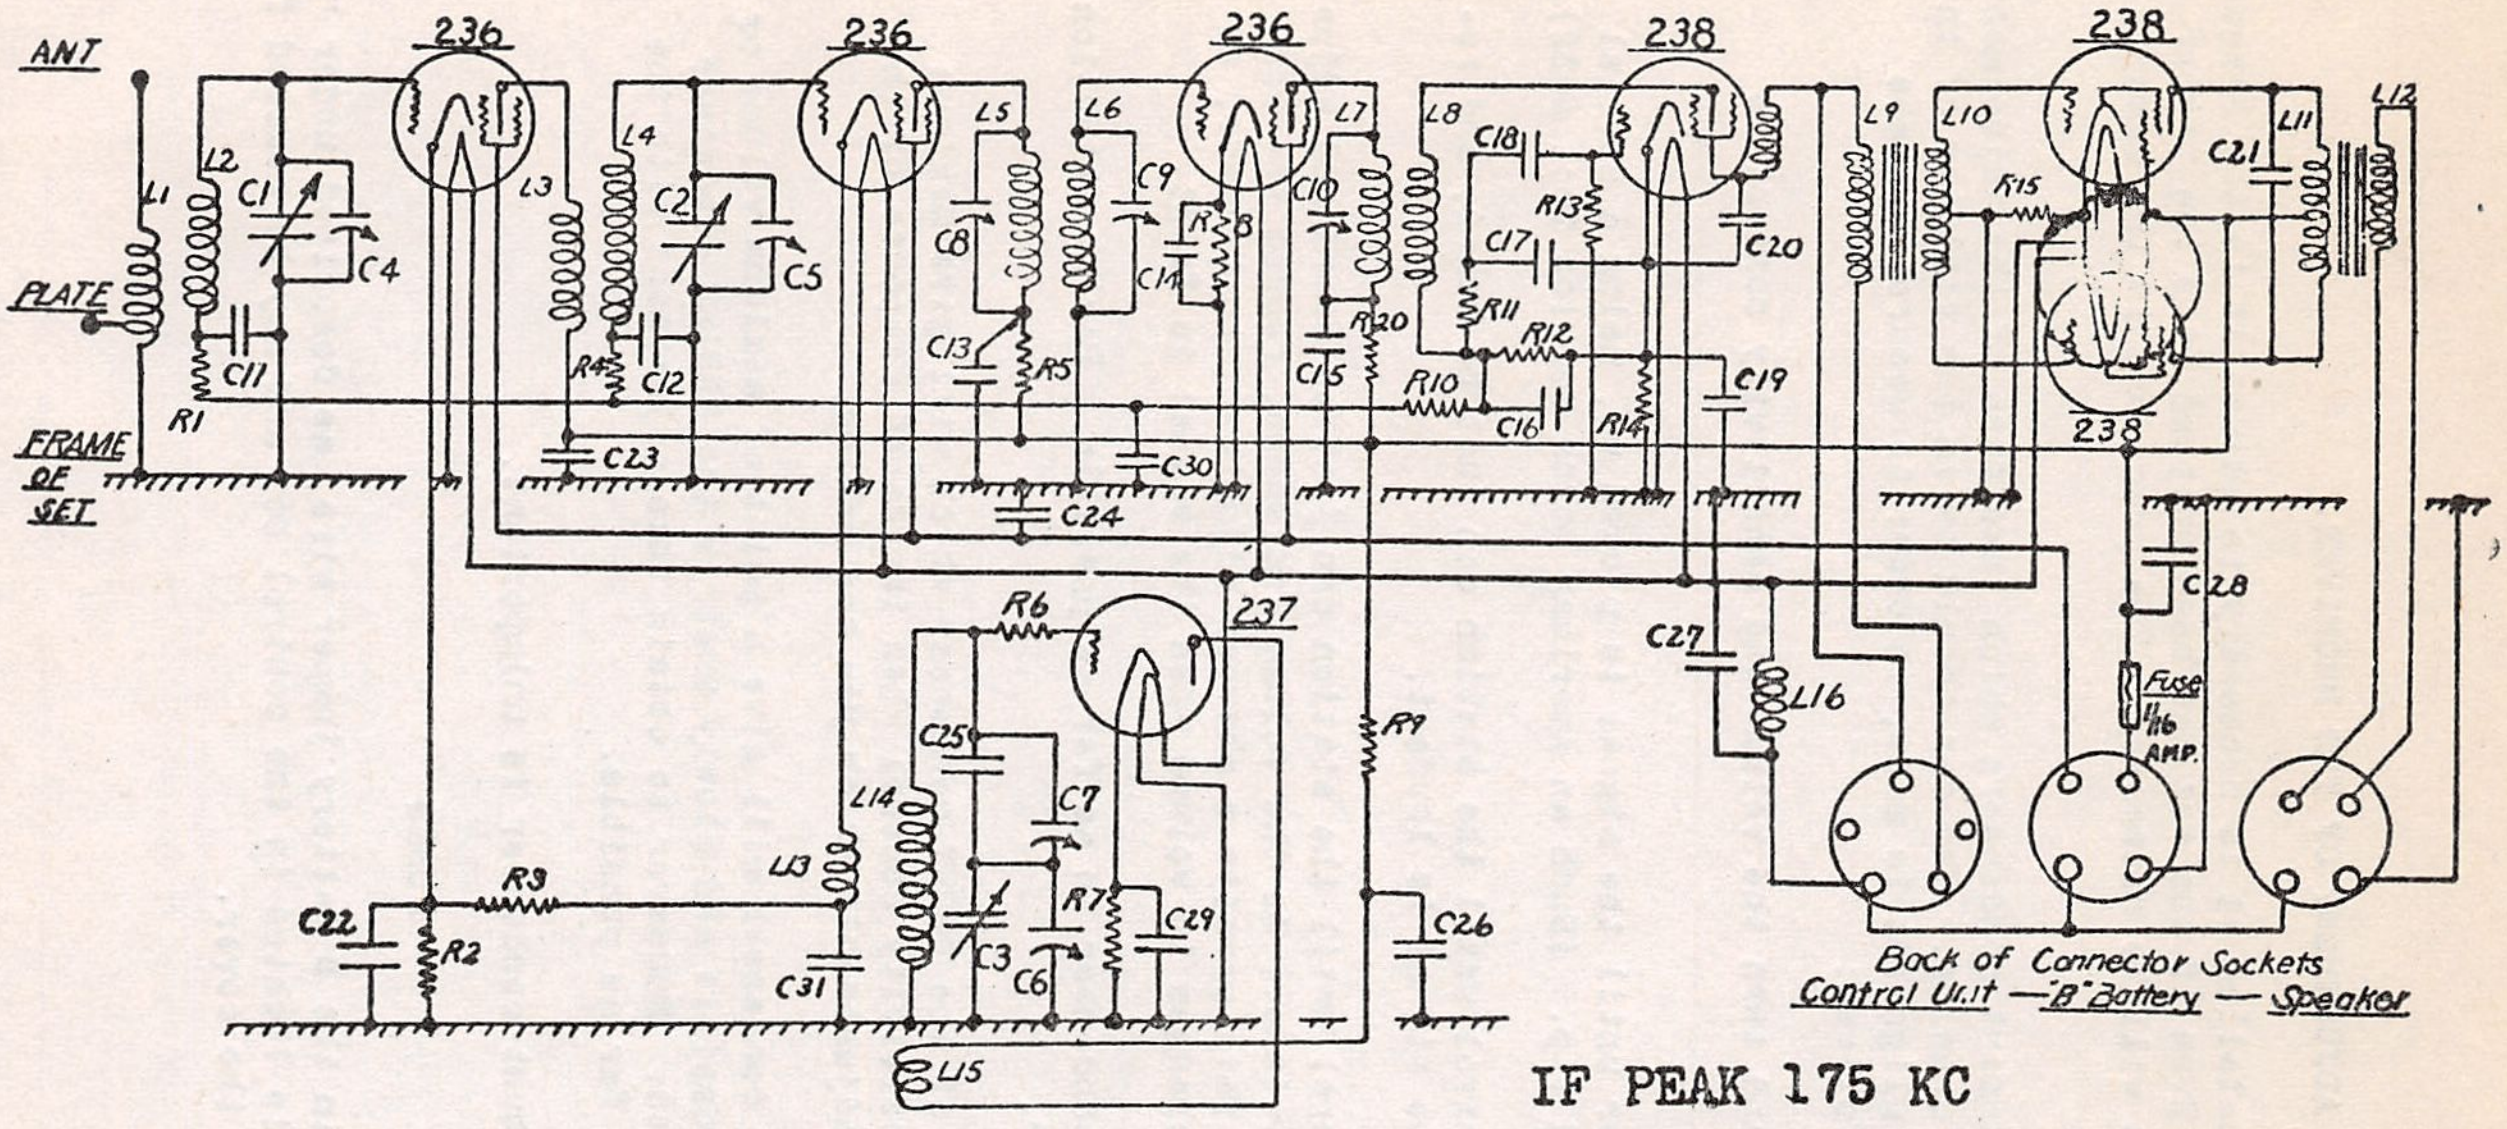
ANT
PLATE
FRAME OF SET
236
236
236
238
238
238
237
L1 L2 L3 L4 L5 L6 L7 L8 L9 L10 L11 L12 L13 L14 L15 L16
C1 C2 C3 C4 C5 C6 C7 C8 C9 C10 C11 C12 C13 C14 C15 C16 C17 C18 C19 C20 C21 C22 C23 C24 C25 C26 C27 C28 C29 C30 C31
R1 R2 R3 R4 R5 R6 R7 R8 R9 R10 R11 R12 R13 R14 R15
Fuse 1/16 AMP.
Back of Connector Sockets
Control Unit — "B" Battery — Speaker

IF PEAK 175 KC

Model 100 (Motor Car) (1932)

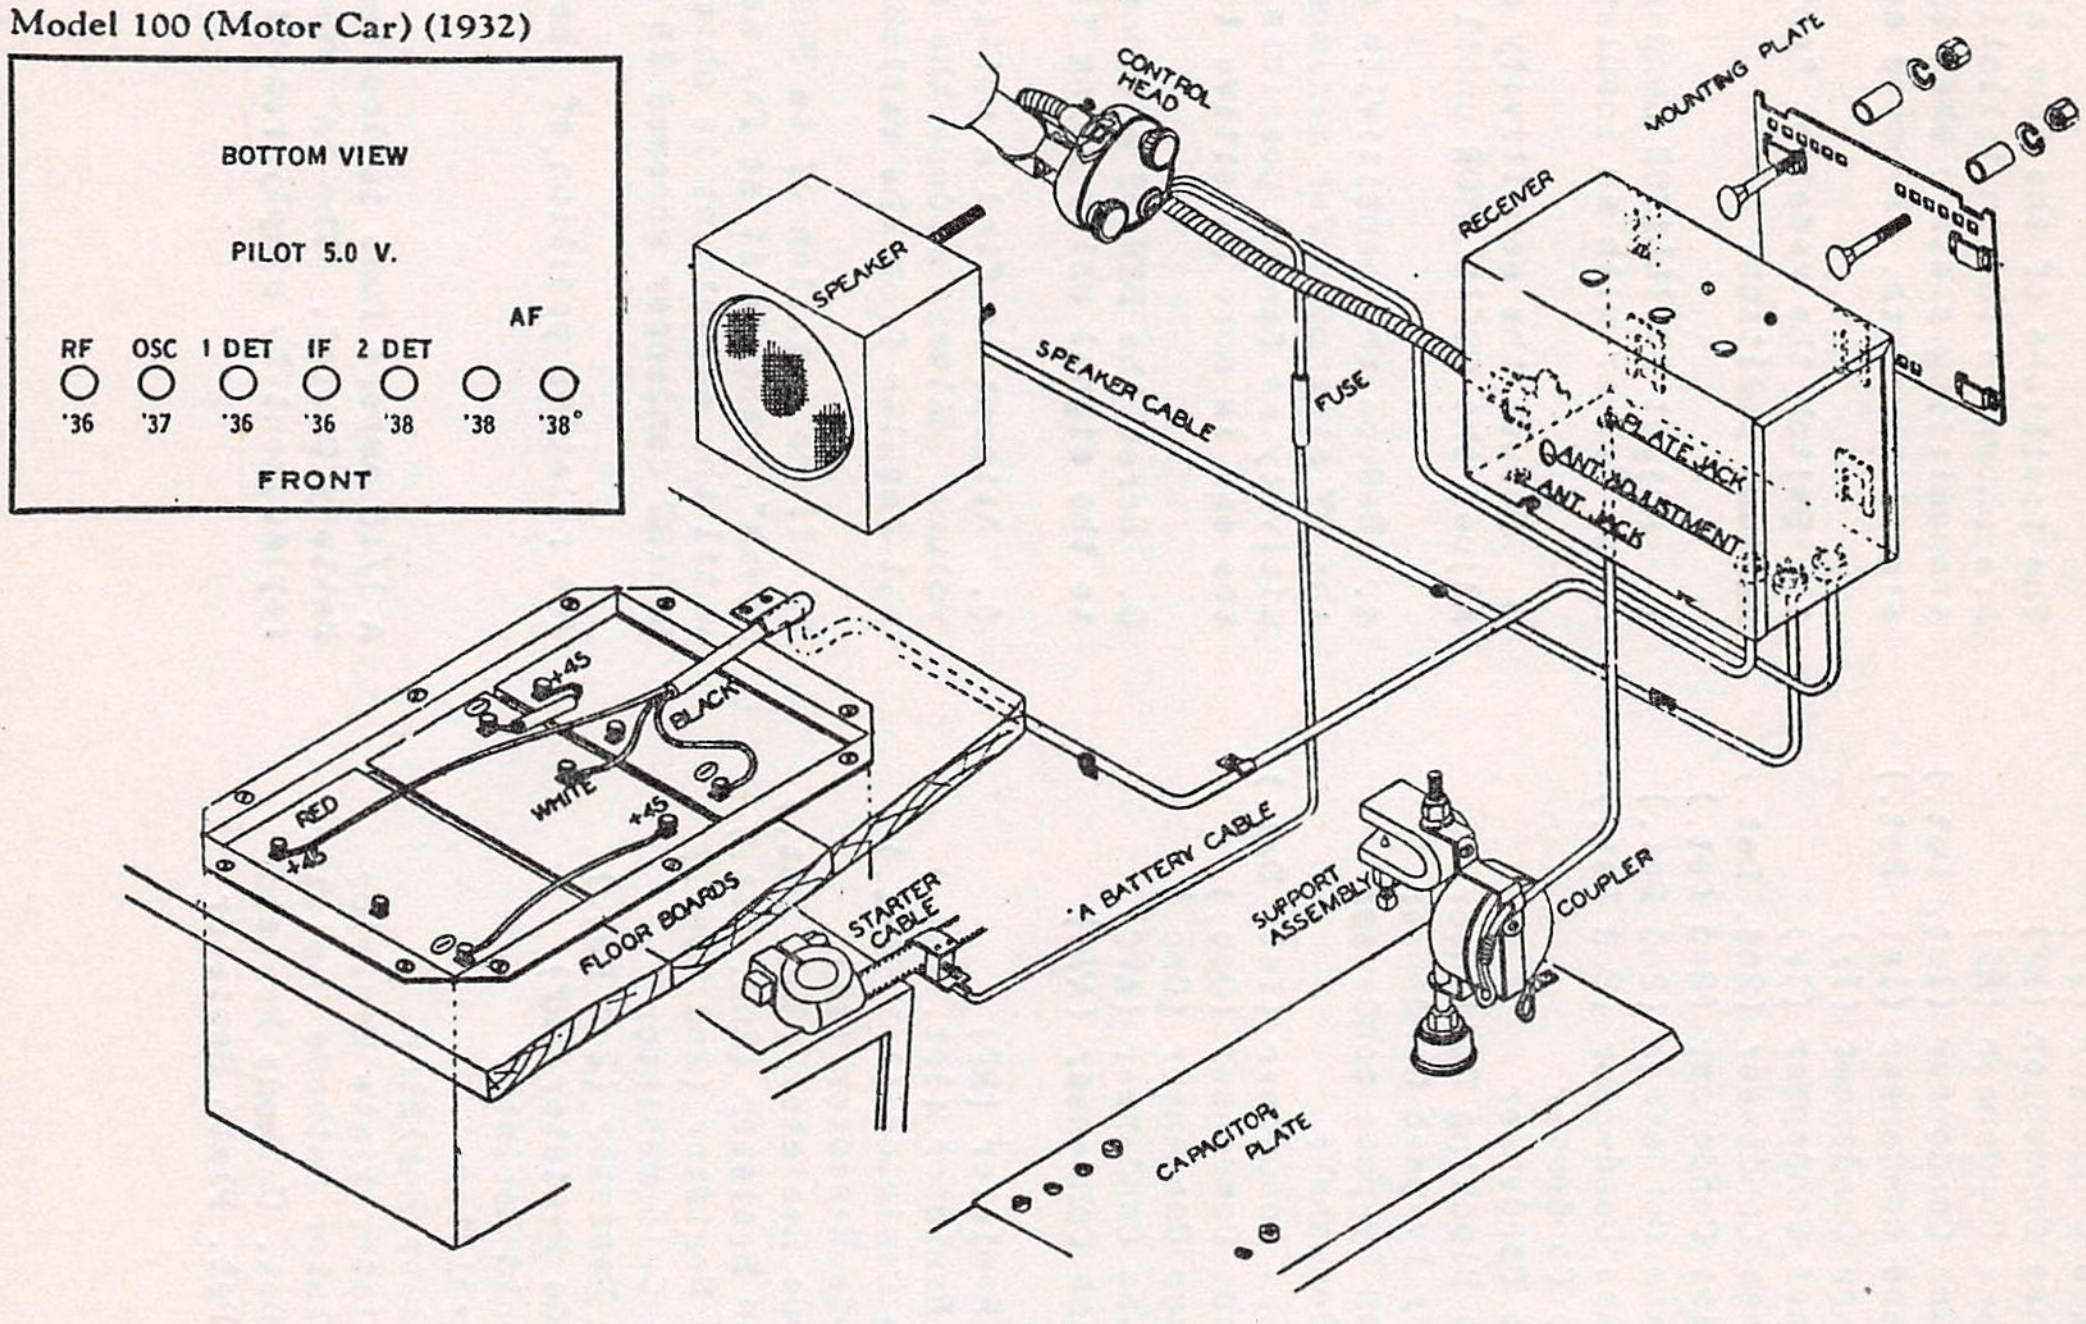
BOTTOM VIEW
PILOT 5.0 V.
RF
OSC
1 DET
IF
2 DET
AF
'36
'37
'36
'36
'38
'38
'38
FRONT

CONTROL HEAD
MOUNTING PLATE
SPEAKER
RECEIVER
SPEAKER CABLE
FUSE
PLATE JACK
ANT. ADJUSTMENT
ANT. JACK
+45
BLACK
RED
WHITE
+45
+45
FLOOR BOARDS
STARTER CABLE
"A" BATTERY CABLE
SUPPORT ASSEMBLY
COUPLER
CAPACITOR PLATE

Stage	Tube	Fil.	Cathode	Grid	Screen	Plate	MA
RF	236	5.8	5	10	60	130	1
Osc.	237	5.8	30	80	—	130	3
1st Det	236	5.8	90	5	55	120	1
IF	236	5.8	2.0	25	60	130	1.5
2nd Det	238	5.8	50	1	120	*1	*6
Audio	238	5.8	12	12	135	130	10
Audio	238	5.8	12	12	135	130	10

Note: The values in the table are only approximate, due to unavoidable differences in tube

Symbols and Electrical Values

R1 —10,000 ohms
R2 — 3,000 ohms
R3 — 5,000 ohms
R4 —10,000 ohms
R5 — 1,000 ohms
R6 — 1,000 ohms
R7 — 3,000 ohms
R8 — 1,500 ohms
R9 — 5,000 ohms
R10—.5 megohm
R11—100,000 ohms
R12— .5 megohm
R13— .1 megohm
R14— 2,000 ohms
R15— 1,500 ohms
R16— 1,000 ohms
C1, C2, C3, C4, C5, C6 } Condenser Gang with Alignment Condensers
C7 —100 to 200 mmf.
C8 — 75 to 140 mmf.
C9 — 75 to 140 mmf.
C10— 75 to 140 mmf.
C11— .05 mfd.
C12— .05 mfd.
C13— .05 mfd.
C14— .05 mfd.
C15— .05 mfd.
C16— .00025 mfd.
C17— .0001 mfd.
C18— .01 mfd.
C19— .5 mfd.
C20— .0011 mfd.
C21— .004 mfd.
C22— .05 mfd.
C23— .05 mfd.
C24— .25 mfd.
C25—1100 mmf.
C26— .05 mfd.
C27— .25 mfd.
C28— .25 mfd.
C29— .05 mfd.
C30— .25 mfd.
C31— .05 mfd.
L1, L2 } Antenna Coil
L3, L4 } Radio Frequency Coil
L5, L6 } Intermediate Coil
L7, L8 } Intermediate Coil
L9, L10 } Audio Input Transformer
L11, L12 } Audio Output Transformer
L13, L14, L15 } Oscillator Coil
L16—Filter

MODEL 108
Police Auto
Data

UNITED AMERICAN BOSCH CORP.

C1	75 to 140 mmf	Antenna Series Condenser
C2	7 to 70 mmf	Antenna Shunt Condenser
C3	75 to 140 mmf	Tuning Condenser (1st. Det.)
C4	75 to 140 mmf	Tuning Condenser (I.F.)
C5	75 to 140 mmf	Tuning Condenser (I.F.)
C6	75 to 140 mmf	Tuning Condenser (2nd Det.)
C7	100 to 280 mmf	Oscillator Tuning Condenser
C8	.05 mfd	By-pass Condenser (RF)
C9	.05 mfd	By-pass Condenser (RF)
C10	.05 mfd	By-pass Condenser (RF)
C11	.05 mfd	By-pass Condenser (1st. Det.)
C12	.05 mfd	By-pass condenser (1st. Det.)
C13	.05 mfd	By-pass Condenser (IF)
C14	.05 mfd	By-pass Condenser (IF)
C15	.25 mfd	By-pass Condenser (2nd. Det.)
C16	.25 mfd	By-pass Condenser (2nd Det.)
C17	.00025 mfd	By-pass Condenser (2nd Det.)
C18	.00025 mfd	By-pass Condenser (2nd Det.)
C19	.006 mfd	Audio Condenser
C20	.05 mfd	Audio Condenser
C21	.5 mfd	Audio Blocking Condenser
C22	.25 mfd	Heater By-pass Condenser
C23	.25 mfd	Screen By-pass condenser
C24	.0001 mfd	AVC Condenser
C25	.05 mfd	By-pass Condenser (1st. Det.)
C26	.05 mfd	By-pass Condenser (Osc.)
C27	.05 mfd	By-pass Condenser (Osc.)
C28	.25 mfd	By-pass Condenser (AVC)
C29	.25 mfd	By-pass Condenser (AVC)
R1	10,000 ohms	Grid Resistor (RF)
R2	10,000 ohms	Grid Resistor (1st. Det.)
R3	1,000 ohms	Plate Resistor (1st. Det.)
R4	1,000 ohms	Cathode Resistor (IF)
R5	1 megohm	Cathode Resistor (2nd. Det.)
R6	500,000 ohms	Screen Resistor (2nd. Det.)
R7	500,000 ohms	Plate Resistor (2nd. Det.)
R8	1 megohm	Audio Grid Resistor
R9	100,000 ohms	Plate Resistor (2nd Det.)
R10	1,000 ohms	Cathode Resistor (RF)
R11	2 megohm	AVC Grid Resistor
R12	100,000 ohms	AVC Resistor
R13	500,000 ohms	AVC Plate Resistor
R14	1,000 ohms	Oscillator Plate Resistor
R15	2,000 ohms	Oscillator Cathode Resistor
R16	20,000 ohms	1st. Det. Cathode Resistor
R17	10,000 ohms	2nd. Det. Plate Resistor

ADJUSTMENT OF THE RECEIVER.

After the receiver has been installed it is necessary to adjust it to the frequency of the transmitting station. Even if the set has been shipped with the proper setting, a slight readjustment will be necessary. The procedure is the same in both cases.

The positions of the four alignment condensers which take care of the adjustment are shown on the installation drawing. The car should be in the vicinity of th transmitting station when the alignment is made, in order to assure adequate signal strength. Proceed as follows:

1. Switch the receiver "on" and turn the volume and sensitivity control to maximum position.

2. Adjust OSCILLATOR condenser until the signal is picked up, using a special screw driver with an insulated tip. (Such an American Bosch Service Tool #432).

3. Reduce the sensitivity control until the station can just be heard, and re-adjust the OSCILLATOR until the signal is loudest.

4. Reduce the sensitivity conrol until the station can just be heard and adjust the RF alignment for maximum volume. As the volume increases, reduce the sensitivity as far as possible. This permits a sharper adjustment to be made, as the ear is more sensitive to changes in volume when the signal is faint.

5. Screw the SERIES antenna condenser in as far as possible. Pay no attention to the signal while doing this.

6. Attempt to find a poition of the SHUNT condenser which will give maximum volume Always reduce the sensitivity control when increased response of the set results from the various adjustments which you are making.

7. If no position of te SHUNT condenser will give a point of maximum volume or "peak", unscrew it as far as possible and slowly unscrew the SERIES condenser until the adjustment is obtained. Endeavor to obtain this adjustment with the SERIES condenser screwed IN as far as possible.

The relative position of the shunt condenser is unimportant.

FUSES

A 1/16 ampere fuse is located in the B Battery jumper wire, as described under "B" Battery Cable". The "A" fuse is located in the control box and may be reached for replacement by simply removing the cover.

UNITED AMERICAN BOSCH CORP.

MODEL 108
Police Auto
Schematic

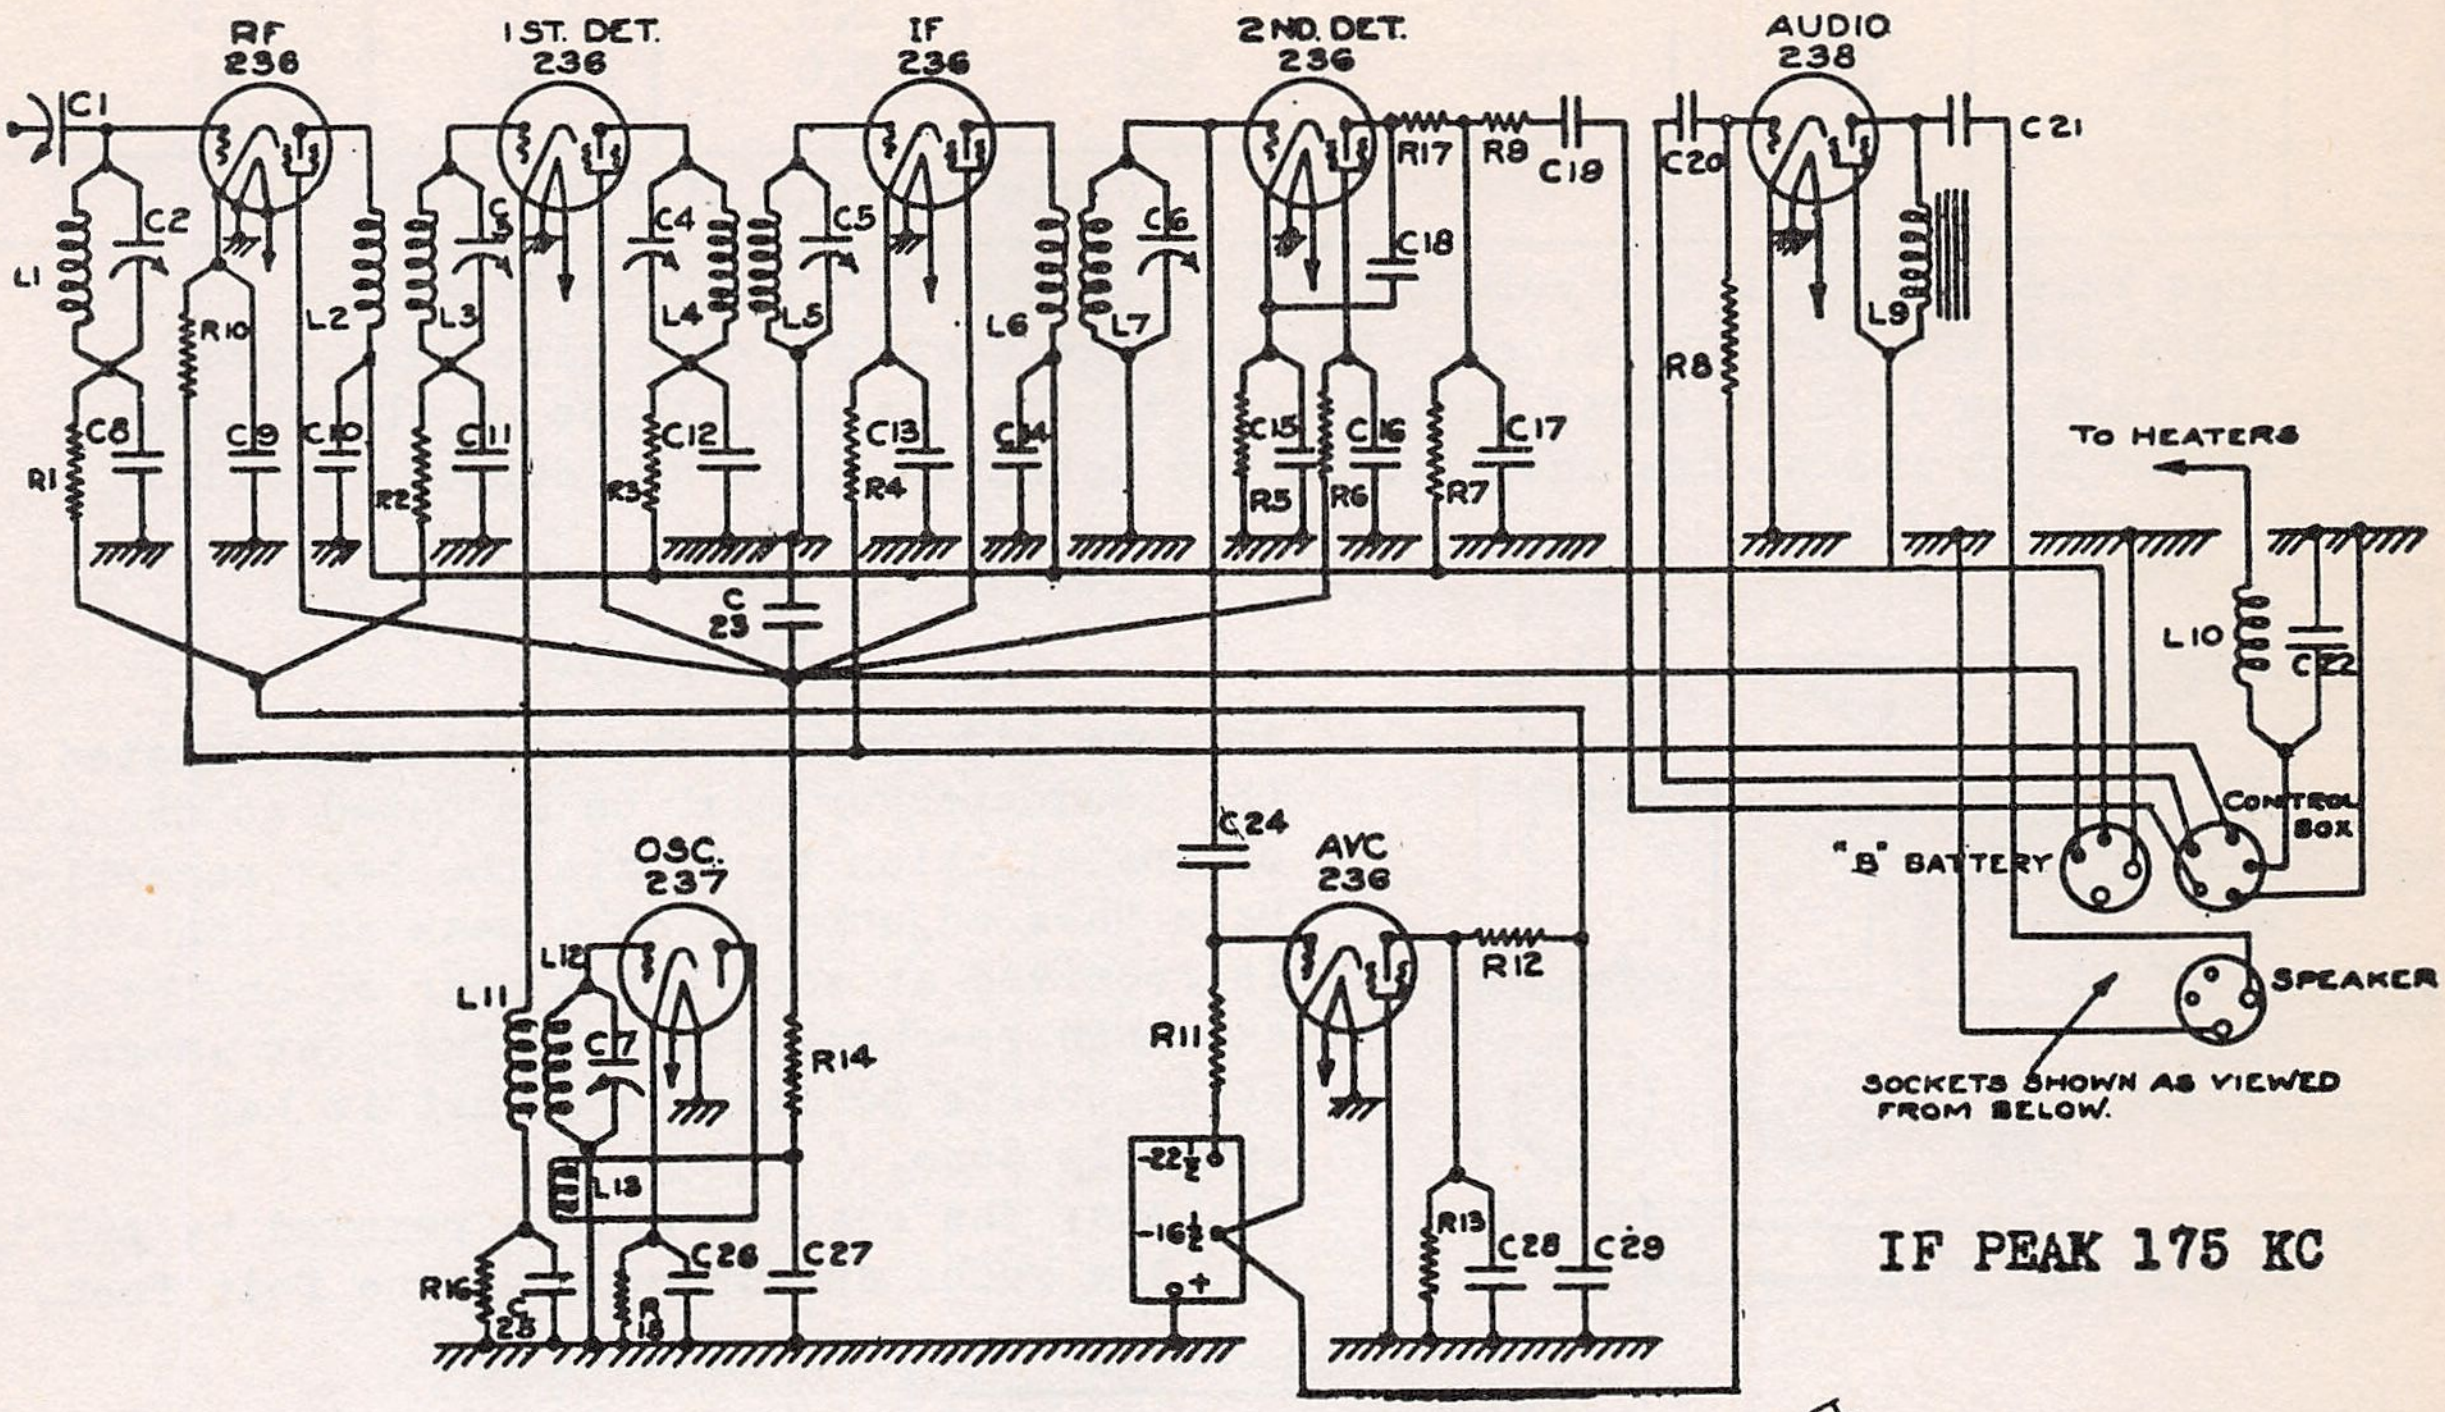
RF 236
1ST. DET. 236
IF 236
2ND. DET. 236
AUDIO 238
OSC. 237
AVC 236
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21
C22
C 23
C24
C 25
C26
C27
C28
C29
L1
L2
L3
L4
L5
L6
L7
L9
L10
L11
L12
L13
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R16
R 18
R17
-22½
-16½
+
TO HEATERS
"B" BATTERY
CONTROL BOX
SPEAKER
SOCKETS SHOWN AS VIEWED FROM BELOW.

IF PEAK 175 KC

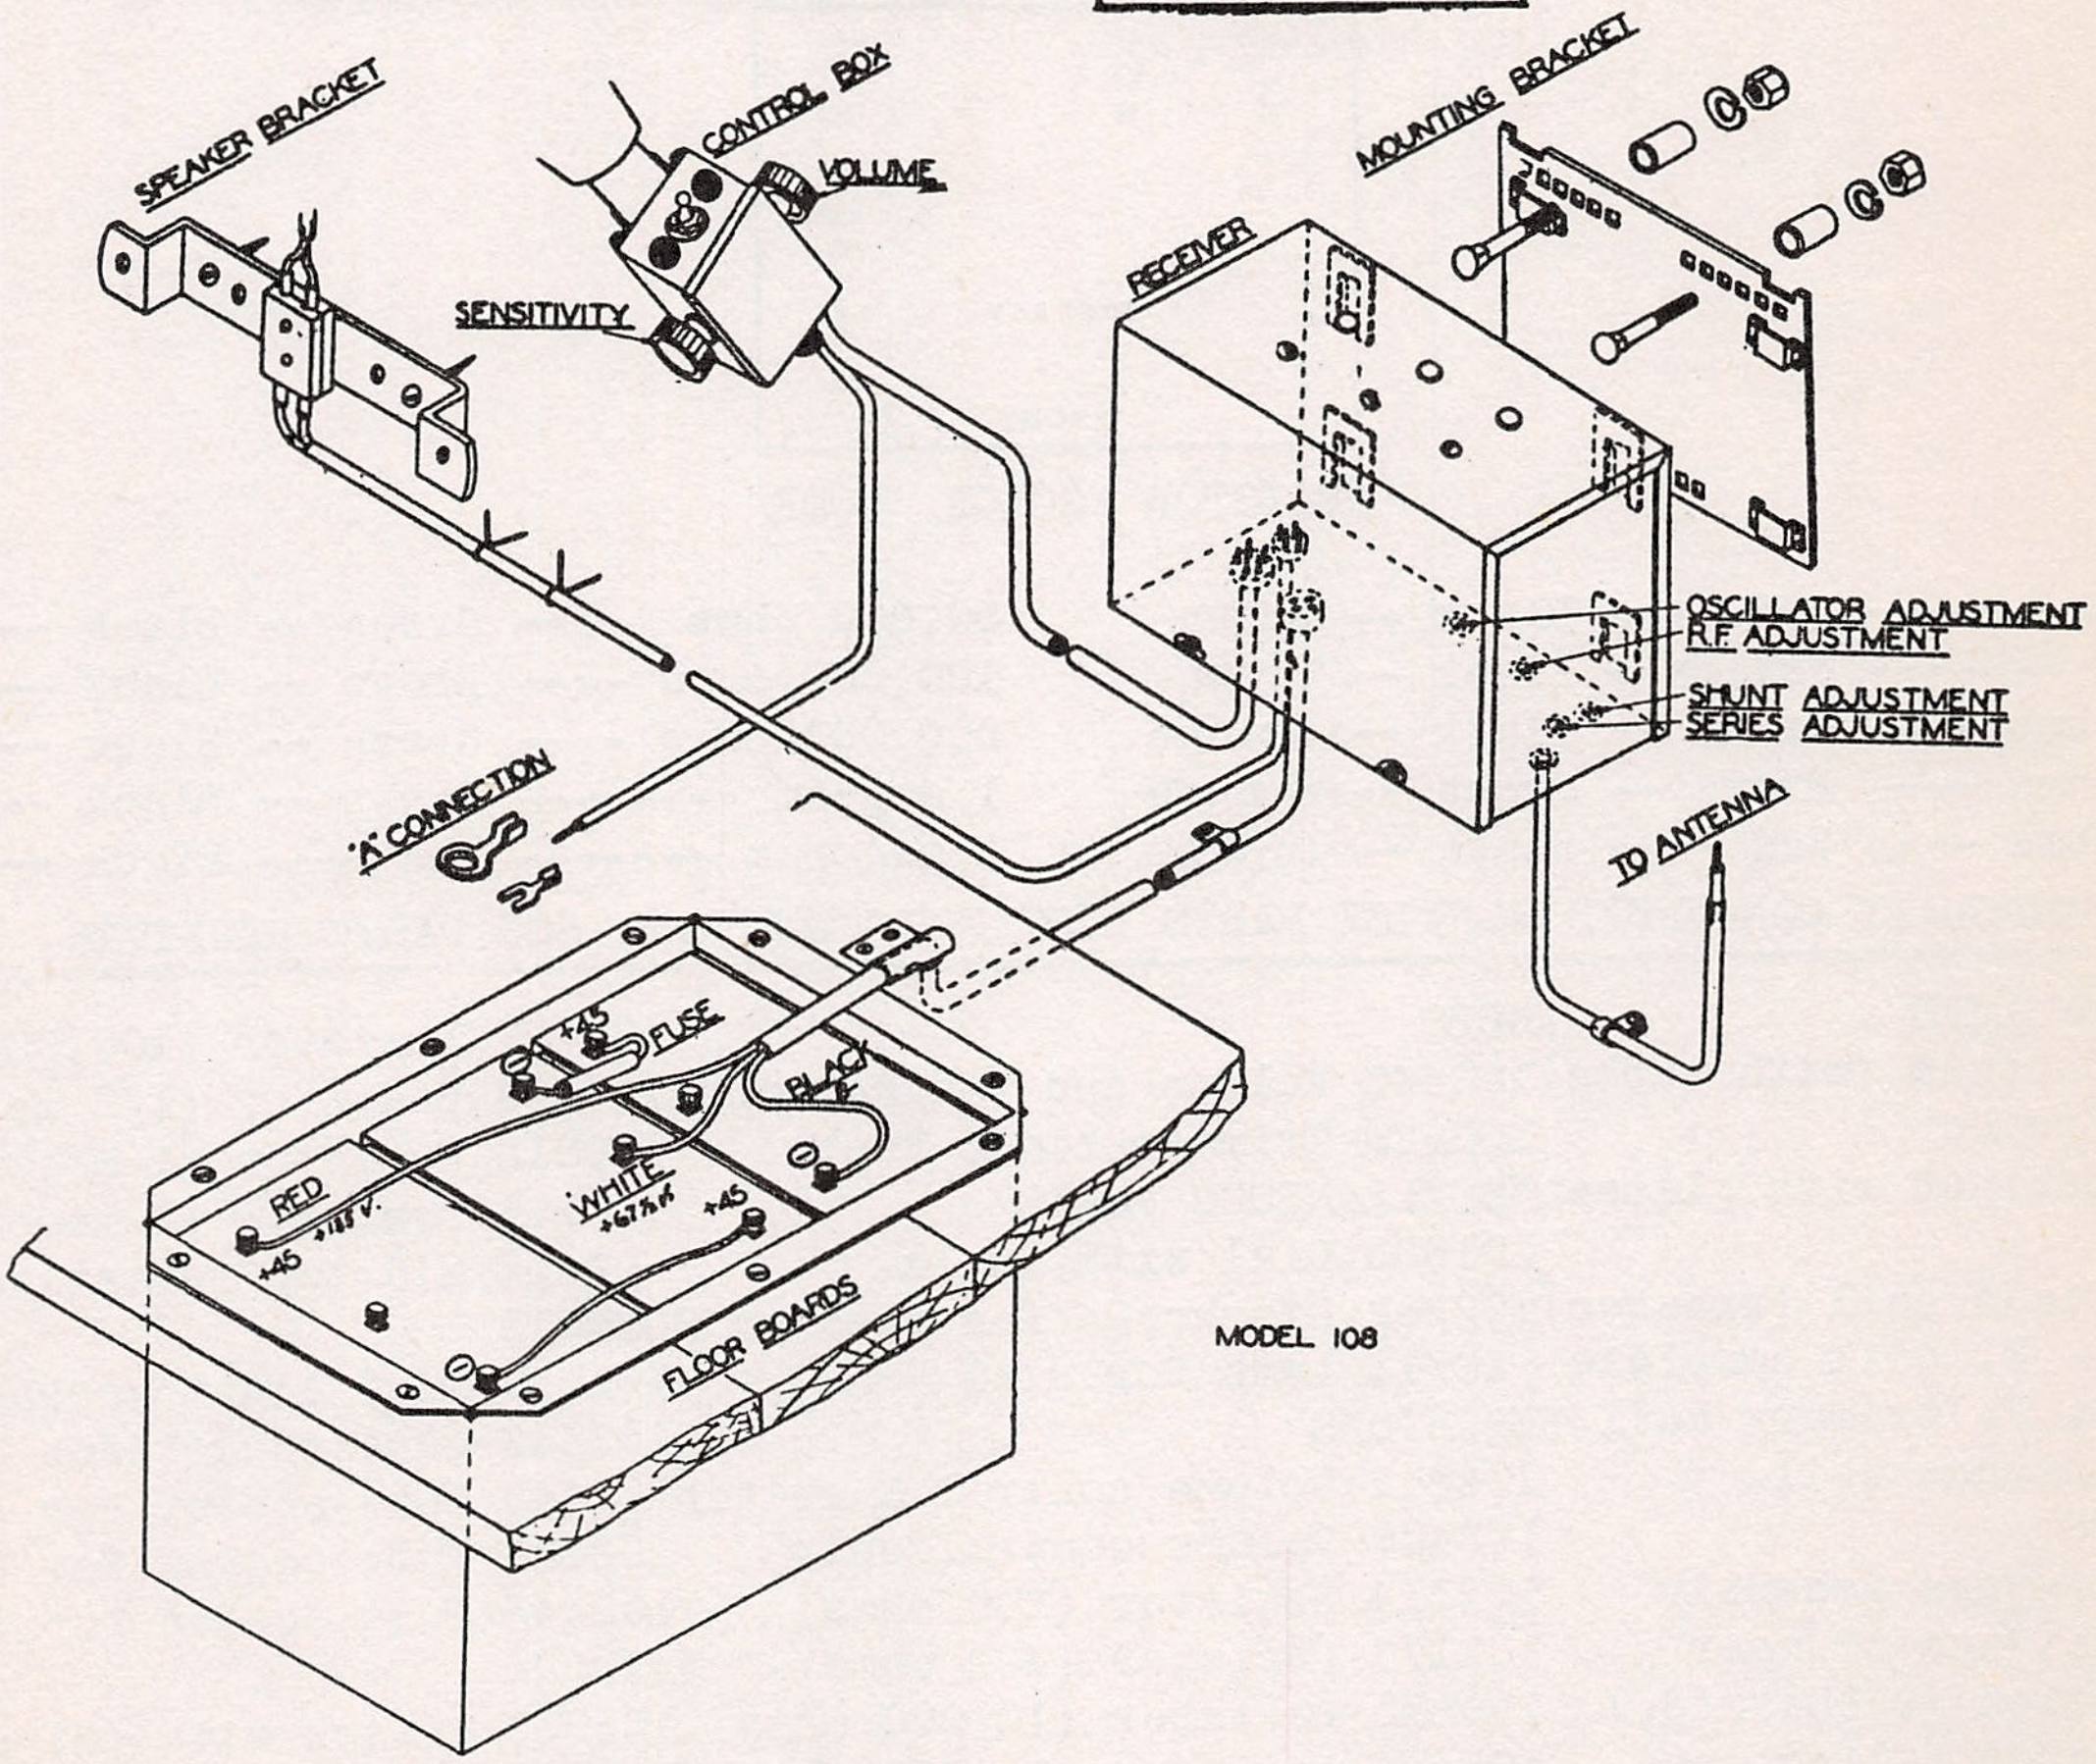
SPEAKER BRACKET
CONTROL BOX
VOLUME
SENSITIVITY
MOUNTING BRACKET
RECEIVER
OSCILLATOR ADJUSTMENT
R.F. ADJUSTMENT
SHUNT ADJUSTMENT
SERIES ADJUSTMENT
TO ANTENNA
"A" CONNECTION
+45
FUSE
BLACK
RED
+45 +135 V.
WHITE
+67½
+45
FLOOR BOARDS

MODEL 108

MODEL 205,206,5-A
205-A

UNITED AMERICAN BOSCH CORP.

Voltage - Data

SOCKET VOLTAGES

STAGE	TUBE	FIL.	PLATE	SCREEN	CATHODE	GRID	PLATE MA.
1st RF	551	2.3	250	90	2.5	3.0	4.5
2nd RF	551	2.3	250	90	2.5	3.0	4.5
Det.	224	2.3	*150	*20	3.0	1.5	.5
Andio	247	2.3	250	250	--	*16	*32
Rect.	280	4.8		Plate current of each plate · 20			

The readings were made with the volume control in the full "on" position.

*These voltages are the correct values. The average test kit will give much lower readings, (as low as 1/10 of these values) due to the low resistance of the meters compared to the high resistance included in the detector plate and screen circuits and the audio grid circuit.

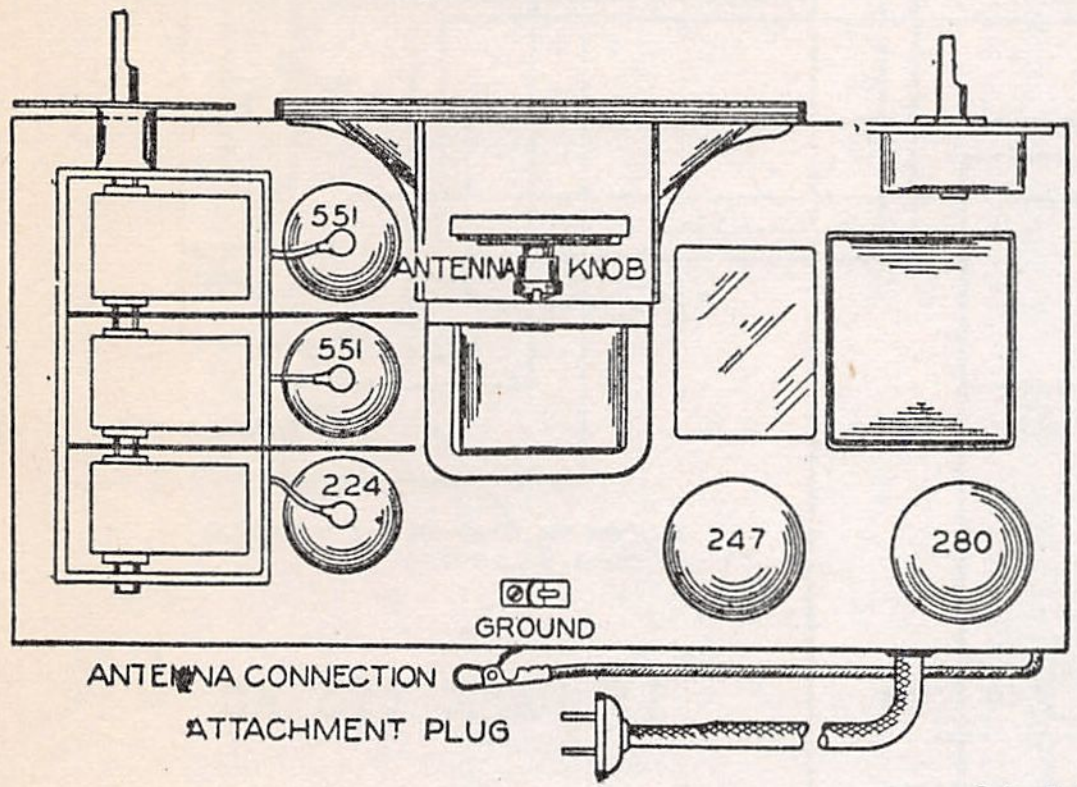

IMPORTANT

Antenna Adjustment: The small knob located on the loud speaker must be adjusted at the time of installation to obtain the best reception. Make this adjustment on a weak station which is received at some point near 30 on the dial and then re-check the adjustment at several other points to make sure that it has been accurately done.

Chassis: The chassis may be removed by pulling off the knobs and unscrewing the felt feet.

Model 5A, Edition 2 (1931)

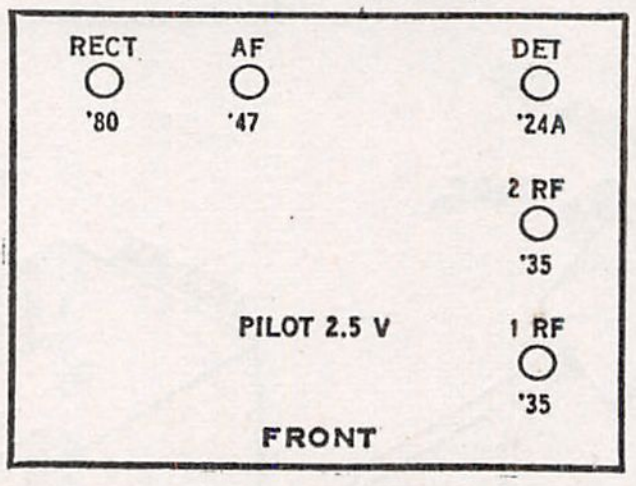

RESISTOR COLOR CODE

200 ohms	Red	Black	Brown	50,000 ohms	Green	Black	Orange
400 ohms	Yellow	Black	Brown	100,000 ohms	Brown	Black	Yellow
10,000 ohms	Brown	Black	Orange	500,000 ohms	Green	Black	Yellow
15,000 ohms	Brown	Green	Orange	1 megohm	Brown	Black	Green
20,000 ohms	Red	Black	Orange	2 megohms	Red	Black	Green

TEMPORARY CONDENSED SERVICE PARTS LIST FOR TYPE R.S. 205 RADIO RECEIVER

MAIN ASSEMBLIES
103655 Chassis (with tubes)
102280 Speaker
103878 Cabinet with plates
COILS
101858 Field coil (speaker)
102438 R. F. coil complete
102243 R. F. primary coil
102439 Antenna coil
CONDENSERS
102178 By-pass assembly
102022 Antenna trimmer
101143 Fixed (.0001 mfd.)
101881 Large filter cond.
103695 Cond. (.01 mfd-4ply)
100705 Cond. (.006 mfd.)

KNOBS
102445 Volume and tuning knobs
100929 Trimmer cond. knob
MISCELLANEOUS PARTS
101895 Dial with scale
102282 Diaphragn for speaker
98713 Lamp for dial
RESISTORS
102342 Volume control & switch
102437 Volume control only
102314 Resistor (200 ohms)
102177 Resistor (400 ohms)
100825 Resistor (10,000 ohms)
101404 Resistor (15,000 ohms)
100813 Resistor (20,000 ohms)
100512 Resistor (50,000 ohms)

100727 Resistor (100,000 ohms)
100194 Resistor (1/2 megohm)
100815 Resistor (1 megohm)
100196 Resistor (2 megohms)
99412 Mid tap resistance
SOCKETS
101890 Dial light socket
102447 Tube socket for '24 tube
102449 Tube socket for '80 tube
102446 Tube socket for '47 tube
102448 Tube socket for '51 tube
SWITCH
101930 Switch with (2) nuts
TRANSFORMER
102551 Output transformer
101939 Power transformer

UNITED AMERICAN BOSCH CORP.

MODEL 205, 206, 5-A
205-A
Schematic - Data

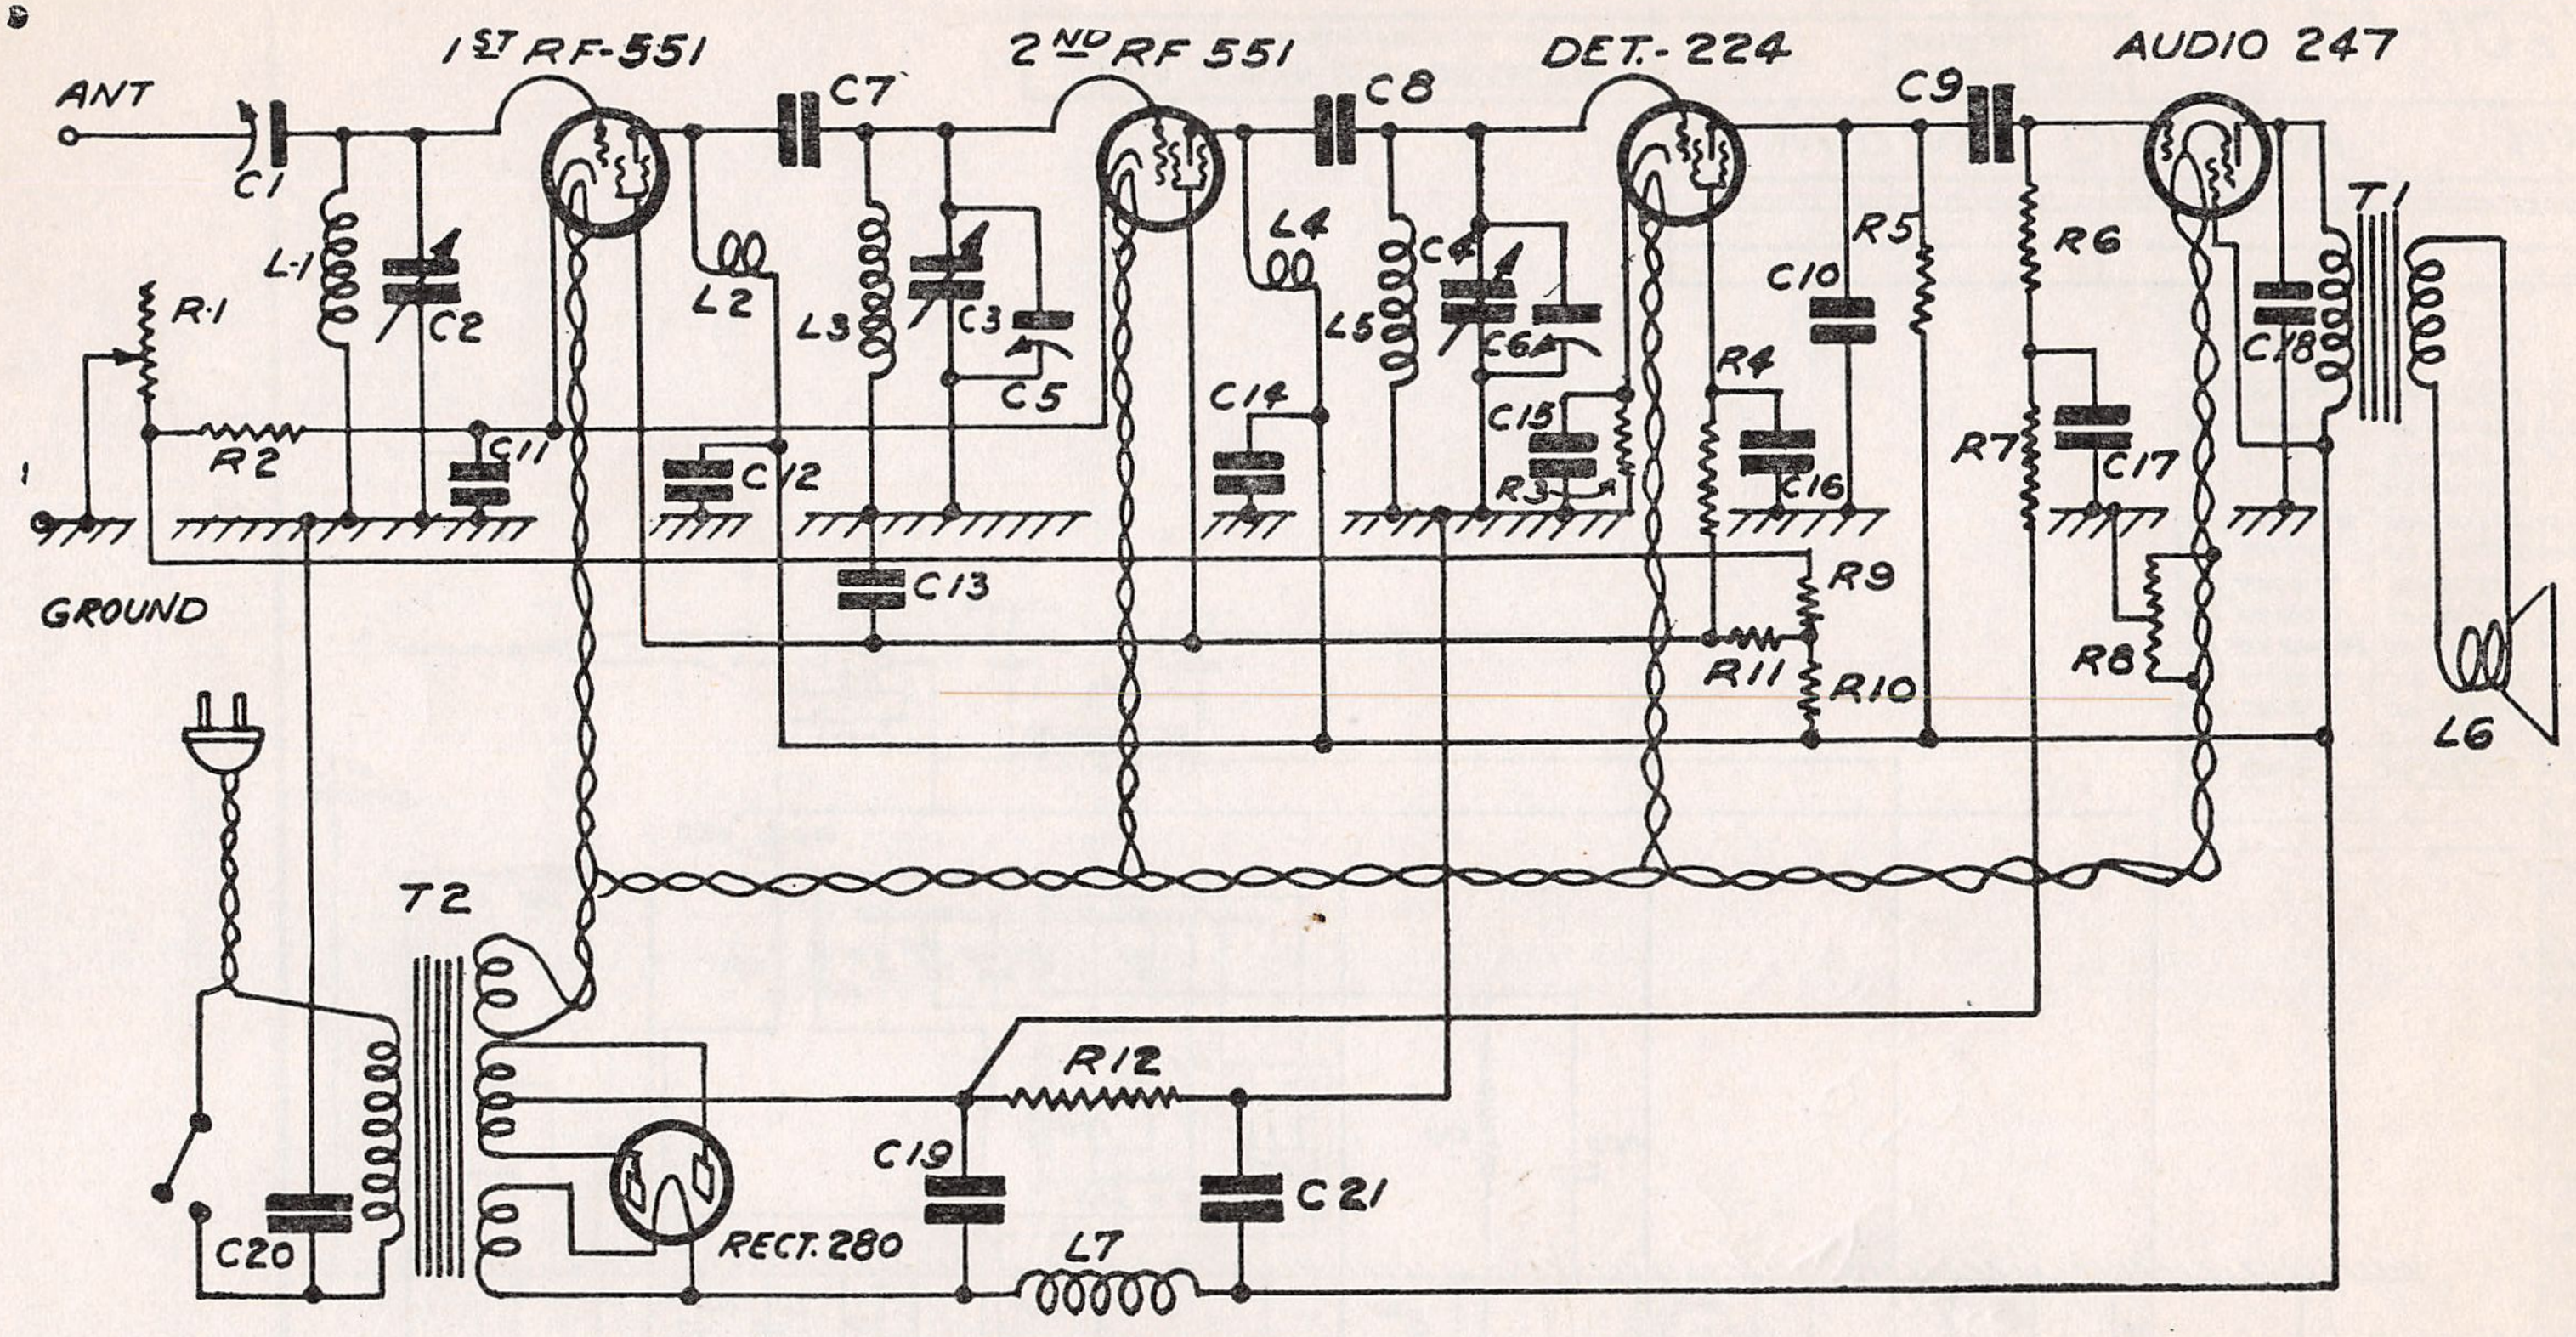
ANT
C1
GROUND
R-1
R2
L-1
C2
C11
1ST RF-551
C7
L2
L3
C3
C5
C12
C13
2ND RF 551
C8
L4
L5
C4
C6A
C14
C15
R3
DET.-224
C9
R4
R5
C10
C16
R9
R11
R10
R6
R7
C17
R8
AUDIO 247
T1
C18
L6
T2
R12
C19
C21
L7
RECT. 280
C20

ELECTRICAL VALUES

R1 - 10,000 ohms
R2 - 200 ohms
R3 - 50,000 ohms
R4 - 2 megohms
R5 - 1 megohm
R6 - 500,000 ohms
R7 - 100,000 ohms
R8 - Center Tap
R9 - 20,000 ohms
R10 - 15,000 ohms

R11 - 10,000 ohms
R12 - 400 ohms
C1 - Trimmer
C2 - Tuning
C3 - Tuning
C4 - Tuning
C5 - Alignment
C6 - Alignment
C7 - Coupling
C8 - Coupling

C9 - .006 mfd.
C10 - .0001 mfd.
C11 - .05 mfd.
C12 - .05 mfd.
C13 - .25 mfd.
C14 - .01 mfd.
C15 - 1. mfd.
C16 - .25 mfd.
C17 - .05 mfd.
C18 - .01 mfd.

C19 - 8. mfd.
C20 - .01 mfd.
C21 - 4 mfd.
L1 - Ant. Coil
L2 - Primary
L3 - Secondary
L4 - Primary
L5 - Secondary
L6 - Voice Coil
L7 - Field Coil

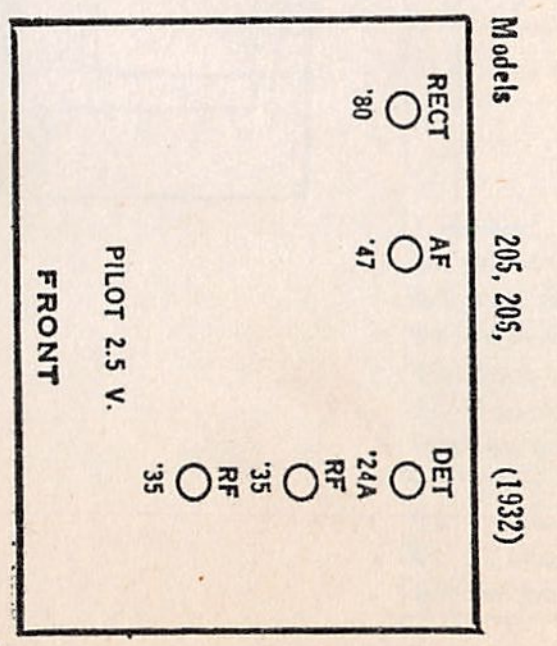
Models
205, 206,
(1932)
RECT
'80
AF
'47
DET
'24A
RF
'35
RF
'35
PILOT 2.5 V.
FRONT

Note: Electrolytic filter condensers C19 and C21 are a single assembly. Condensers C11 to C18 inclusive are also a single assembly contained in the square can underneath the base plate.

UNITED AMERICAN BOSCH

RECORD OF CHANGES

②CHANGED SA-99,581 (1,500 Ω) TO SA-103,836 (3,000 Ω) CR-7800 ED. 2 7-21-33

③CHG'D. (C-34) SA-99,781 FROM .0025 TO .00025 (TO CORRECT ERROR) ED. 3 9-27-33

④CHG'D. R22 (1)-SA-103,937 TO (1) - SA-101,210 ADDED (R-23) SA-102,314 (C-35) SA-103,937 CR-7711 ED. 4 10-10-33

IMPORTANT UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS - INCHES. - MUST BE ACCURATE WITHIN $\pm\frac{0.25}{0.25}$ MM. - $\pm\frac{.010"}{.010"}$ - WORK TO DIMENSIONS - DO NOT SCALE DRAWING THREADS TO BE FINGER FIT TO THREAD GAUGE - FINISH WHERE INDICATED - NO BURRS.

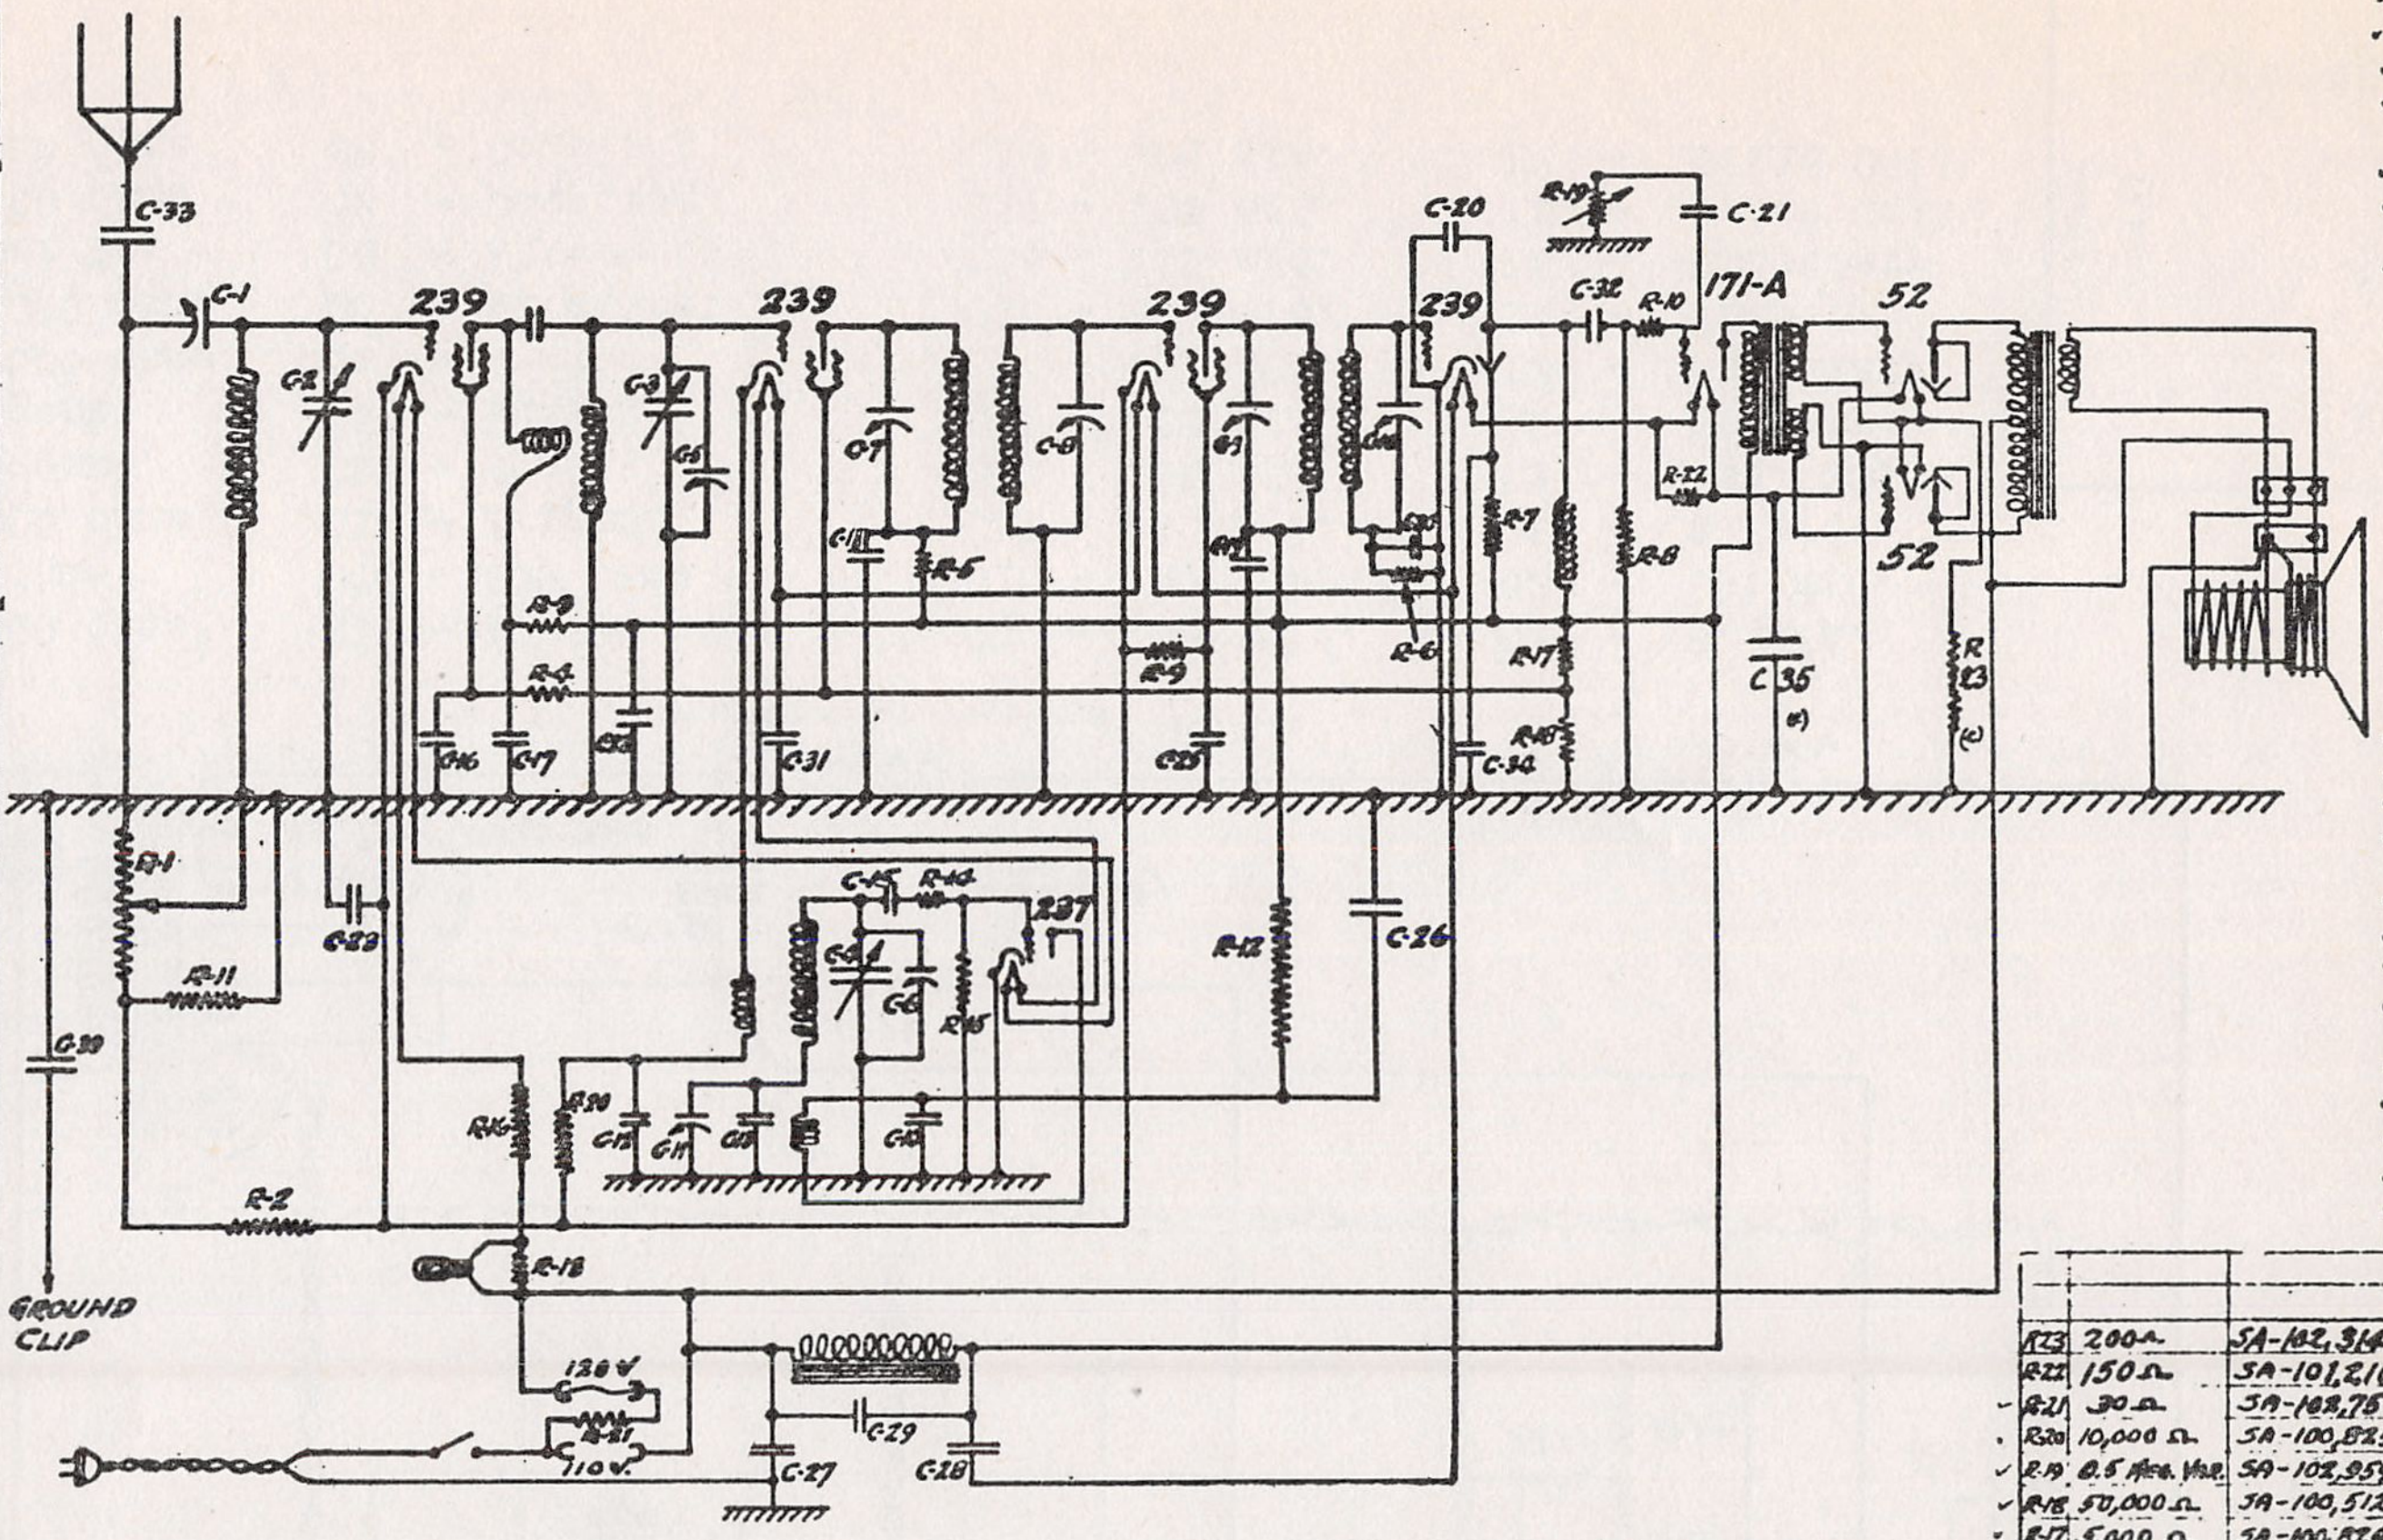
C-33
C-1
C-2
C-3
C-4
C-5
C-6
C-7
C-8
C-9
C-10
C-11
C-12
C-13
C-14
C-15
C-16
C-17
C-18
C-19
C-20
C-21
C-22
C-23
C-25
C-26
C-27
C-28
C-29
C-30
C-31
C-32
C-34
C 35
239
239
239
239
171-A
52
52
237
R-1
R-2
R-5
R-6
R-7
R-8
R-9
R-10
R-11
R-12
R-13
R-14
R-15
R-16
R-17
R-18
R-19
R-20
R-21
R-22
R 23
128 V
110 V
GROUND CLIP

R-10	100,000 Ω	SA-100,727
R-9	15,000 Ω	SA-101,404
R-8	100,000 Ω	SA-100,727
R-7	50,000 Ω	SA-100,512
R-6	500,000 Ω	SA-101,404
R-5	1,000 Ω	SA-100,729
R-4	1,000 Ω	SA-100,729
R-3	1,000 Ω	SA-100,729
R-2	150 Ω	SA-101,210
R-1	10,000 Ω VAR	SA-102,552

C-36	.25 MFD.	SA-104,487
C-35	.5 MFD.	SA-102,499
C-33	.006 MFD.	SA-100,705
C-32	.05 MFD.	SA-102,493
C-31	.05 MFD.	SA-102,498
C-30	.08 MFD.	SA-102,380
C-29	.01 MFD.	
C-28	3 MFD.	
C-27	3 MFD.	
C-26	.5 MFD.	SA-102,499
C-25	.5 MFD.	SA-102,499
C-34	.00025 MFD.	SA-99,781
C-23	.05 MFD.	SA-102,492
C-22	.25 MFD.	SA-102,497
C-21	.002 MFD.	SA-102,852
C-20	.002 MFD.	SA-100,198
C-19	.05 MFD.	SA-102,302
C-18	.05 MFD.	SA-102,308
C-17	.05 MFD.	SA-102,492
C-16	.05 MFD.	SA-102,492
C-15	.0001 MFD.	SA-101,123
C-14	.05 MFD.	SA-101,666
C-13	.0011 MFD.	SA-102,349
C-12	.05 MFD.	SA-101,666
C-11	100 TO 280	SA-102,252
C-10	75 TO 140	SA-102,253
C-9	75 TO 140	SA-102,253
C-8	75 TO 140	SA-102,253
C-7	75 TO 140	SA-102,253
C-6	VARIABLE CONDENSER WITH TRIMMERS	SA-102,220
C-5		
C-4		
C-3		
C-2		
C-1	ANT. TRIMMER	SA-102,294

R23	200 Ω	SA-102,314
R22	150 Ω	SA-101,210
R21	30 Ω	SA-102,751
R20	10,000 Ω	SA-100,825
R-19	0.5 MEG. VAR.	SA-102,959
R-18	50,000 Ω	SA-100,512
R-17	5,000 Ω	SA-100,824
R-16	200 Ω	SA-102,752
R-15	100,000 Ω	SA-100,727
R-14	5,000 Ω	SA-100,824
R-13	21 Ω	SA-102,378
R-12	2,000 Ω	SA-100,823
R-11	3,000 Ω	SA-103,836

MATERIAL AND SPECIFICATION	LENGTH PER 1000 PCS.	WEIGHT PER 1000 PCS.	FIRST MADE FOR

WIRING DIAGRAM MODEL 224

UNITED AMERICAN BOSCH CORPORATION
FACTORY: SPRINGFIELD, MASS.

SCALE

THE SERVICE STAGE FOR THIS PART IS
SERVICE No....

DI-103,939

MODEL 226

UNITED AMERICAN BOSCH

IMPORTANT UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS INCHES. — MUST BE ACCURATE WITHIN $^{+0.25}_{-0.25}$ MM — $^{+.010"}_{-.010"}$ — WORK TO DIMENSIONS · DO NOT SCALE DRAWING THREADS TO BE FINGER FIT TO THREAD GAUGE · FINISH WHERE INDICATED · NO BURRS.

RECORD OF CHANGES

ADDED C26-.05 MF. 2 PLY COND. SA102493 ALSO LOCAL AND DISTANCE SWITCH. CR7725
SB 10-6-32 P ED.3

CHGD 1ST R.F. TUBE FROM 232 TO 234. CR8005
JB 10-13-32 P ED.4

c) CHGD. R22-FROM (25,000 Ω) SA-100,197 TO (50,000 Ω) SA-100,512 — CR-7984
SB 10-24-32 Ed.5

d) ADDED C27-.002 MF.-4P COND. SA-103,852 - CHGD. 1ST R.F. TUBE FROM 234 TO 232 AND I.F. TUBE FROM 232 TO 234. CR8145
SN 11-30-32 Ed.6

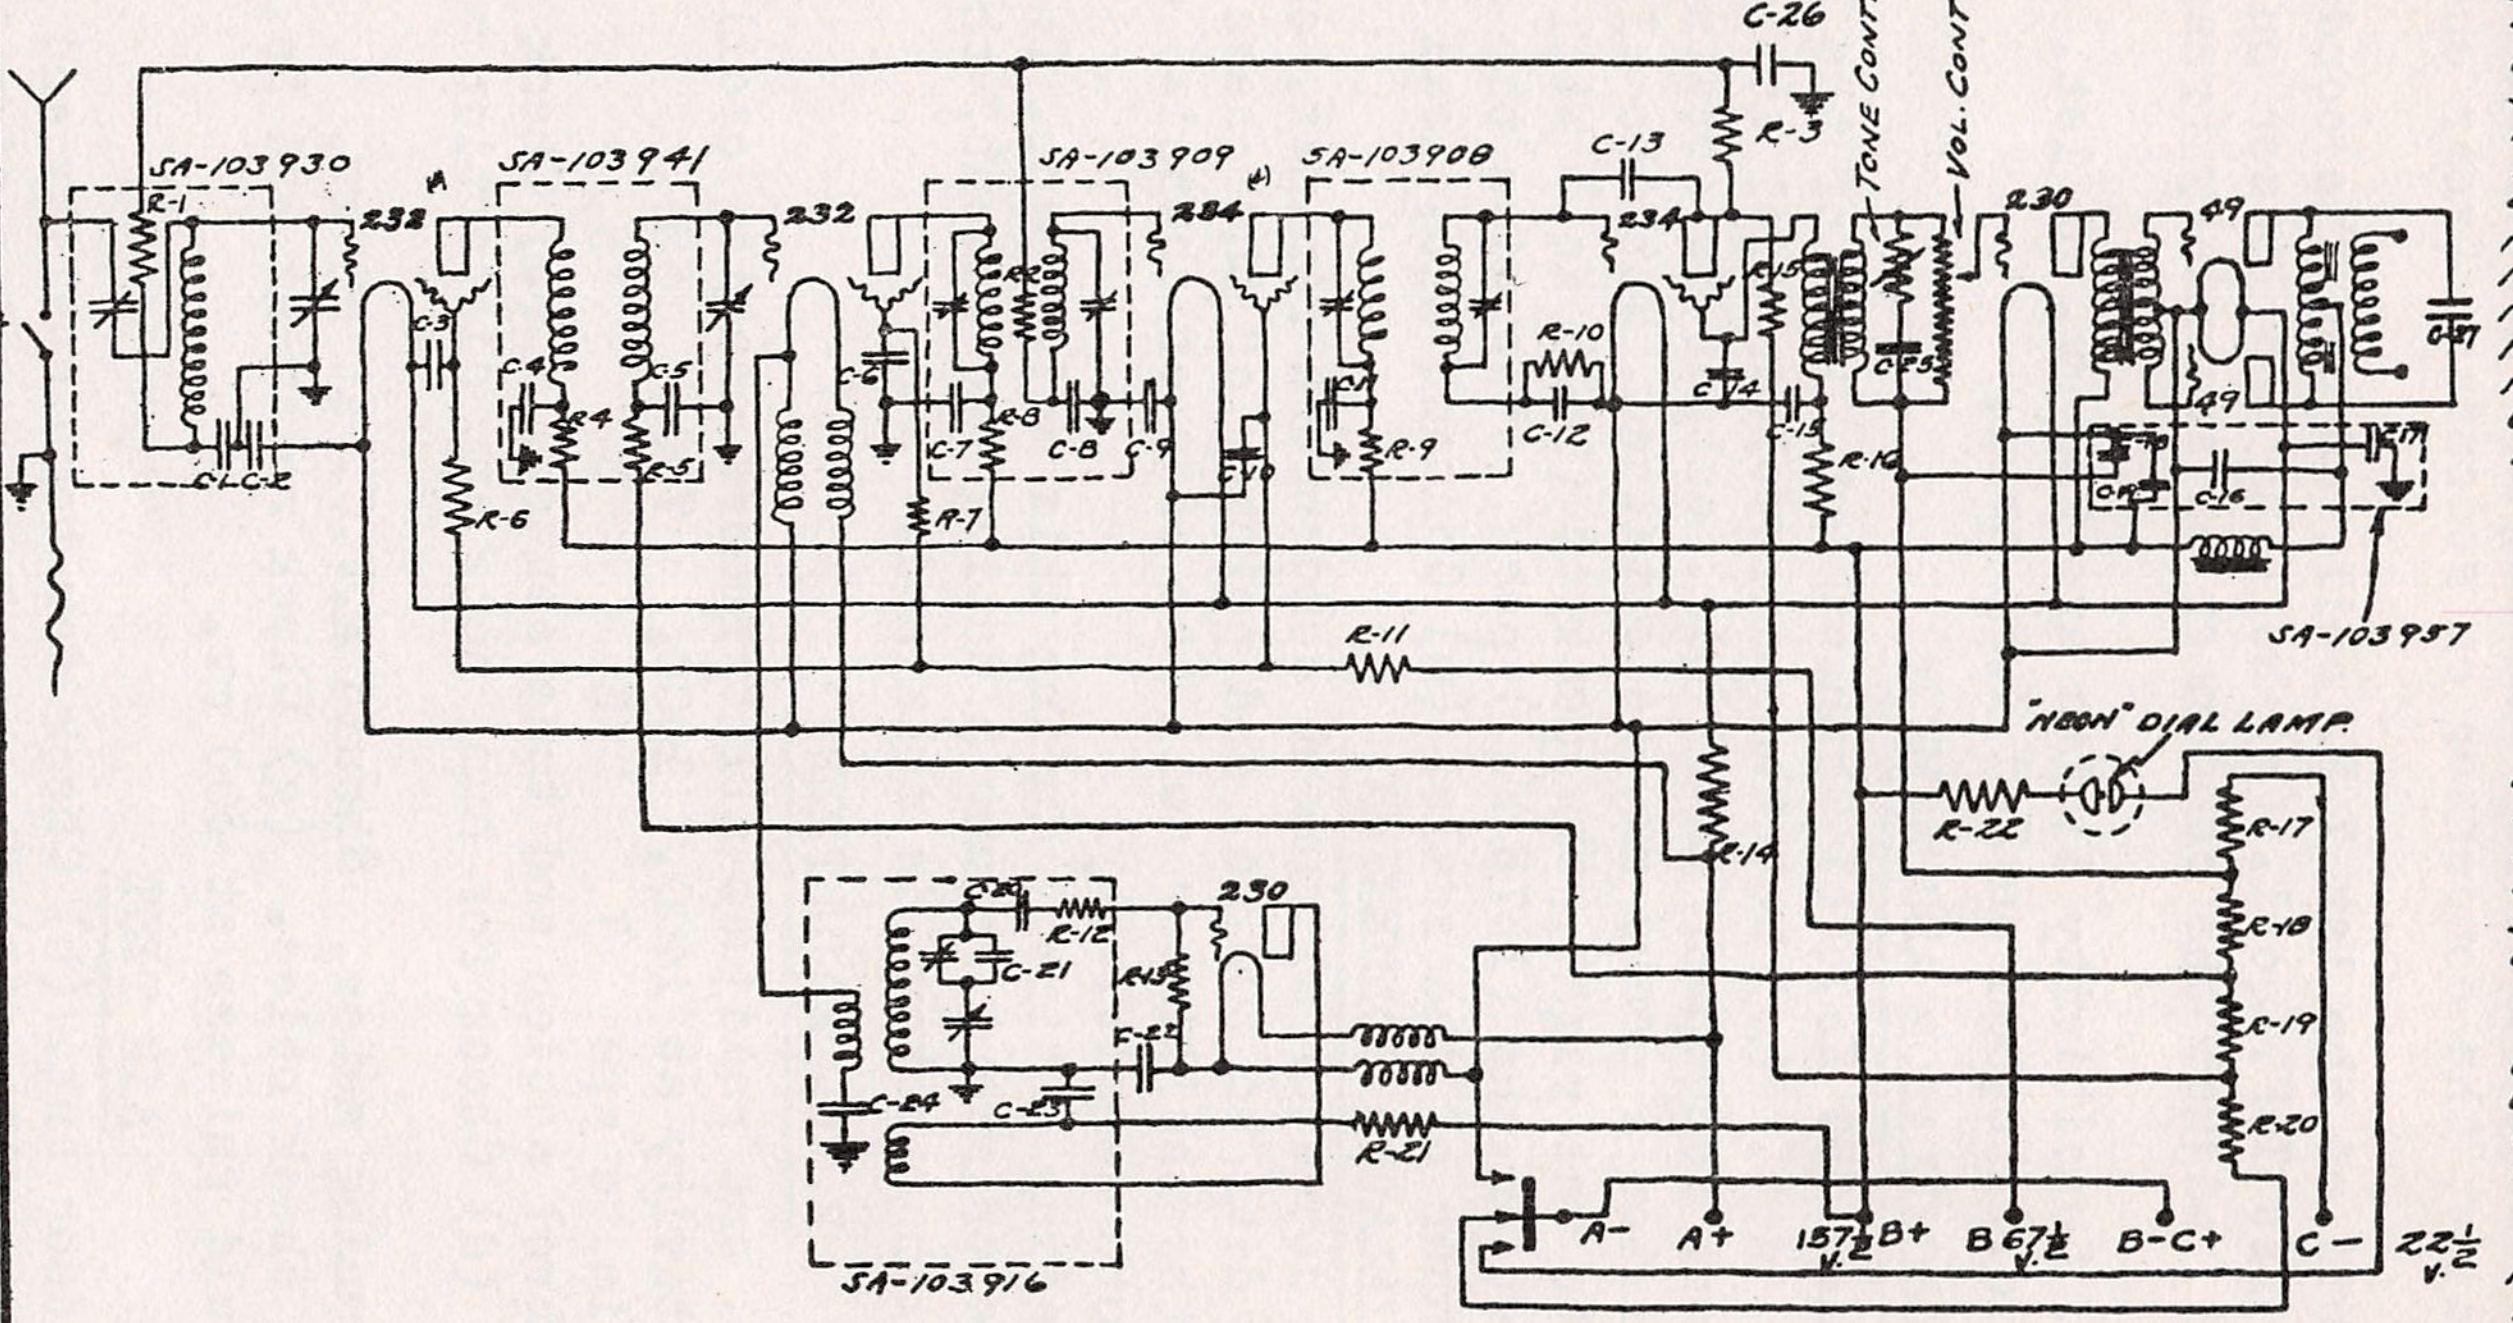
SA-103930
R-1
C-1
C-2
232
SA-103941
C-3
C-4
C-5
R-4
R-5
R-6
232
C-6
C-7
R-7
R-8
SA-103909
R-2
C-8
C-9
234
C-10
SA-103908
R-9
C-11
C-12
R-10
C-13
234
R-3
C-26
C-14
R-15
C-15
R-16
TONE CONTROL RES.
VOL. CONTROL RES.
230
49
49
C-16
C-17
C-18
C-19
C-27
SA-103957
R-11
R-14
"NEON" DIAL LAMP.
R-22
R-17
R-18
R-19
R-20
230
R-12
R-13
C-20
C-21
C-22
C-23
C-24
C-25
R-21
SA-103916
A-
A+
157½ V.
B+
B 67½ V.
B-C+
C-
22½ V.

1 { CHASSIS ASSY — SA-103,990
CHASSIS ASSY — SA-103,991
CHASSIS ASSY — SA-103,964 }
2 — CONDENSER (HOUSED) — SA-103957
3 — R.F. COIL ASSY. — SA-103941
4 — ANTENNA COIL ASSY. — SA-103930
5 — OSCILLATOR COIL ASSY. — SA-103916
6 — 2ND. INTERMEDIATE COIL ASSY. — SA-103908
7 — 1ST. INTERMEDIATE COIL ASSY. — SA-103909
8 — INSULATION PLATE ASSY. — SA-103899
9 — INSULATION PLATE ASSY. — SA-103900
10 — INSULATION PLATE ASSY. — SA-103898

4	R1	500,000 Ω	SA-100194
7	R2	500,000 Ω	SA-100194
9	R3	500,000 Ω	SA-100194
3	R4	5000 Ω	SA-100824
3	R5	10,000 Ω	SA-100825
8	R6	1000 Ω	SA-100729
1	R7	1000 Ω	SA-100729
7	R8	5000 Ω	SA-100824
6	R9	5000 Ω	SA-100824
9	R10	250,000 Ω	SA-100195
8	R11	5000 Ω	SA-100824
5	R12	3000 Ω	SA-102821
1	R13	100,000 Ω	SA-100727
1	R14	0.6 Ω WIRE WOUND	SA-103985
9	R15	1 MEG.	SA-100815
10	R16	20,000 Ω	SA-100813
10	R17	750 Ω	SA-101668
10	R18	300 Ω	SA-101181
10	R19	300 Ω	SA-101181
10	R20	300 Ω	SA-101181
8	R21	20,000 Ω	SA-100813
1	R22	50,000 Ω	SA-100512
	R23		
	R24		
	R25		
4	C1	.05 MF. 2-P	SA-102493
4	C2	.05 MF. 2-P	SA-102493
8	C3	.05 MF. 2-P	SA-102493
3	C4	.05 MF. 3-P	SA-102492
3	C5	.05 MF. 2-P	SA-102493
8	C6	.05 MF. 2-P	SA-102493
7	C7	.05 MF. 3-P	SA-102492
7	C8	.05 MF. 2-P	SA-102493
8	C9	.05 MF. 2-P	SA-102493
8	C10	.05 MF. 2-P	SA-102493
6	C11	.05 MF. 3-P	SA-102492
9	C12	.00025 MF. MICA	SA-99781
7	C13	.00025 MF. MICA	SA-99781
9	C14	.002 MF. 4-P	SA-103852
10	C15	.25 MF. 3-P	SA-102496
2	C16	3.5 MF. 3-P	CD-101876
2	C17	.25 MF. 2-P	CD-101883
2	C18	.25 MF. 2-P	CD-101883
2	C19	1.8 MF. 3-P	CD-101877
5	C20	.00025 MF. MICA	SA-99781
5	C21	.001200 MF. MICA	SA-103914
8	C22	.05 MF. 2-P	SA-102493
5	C23	.05 MF. 3-P	SA-102492
5	C24	.05 MF. 2-P	SA-102493
1	C25	.002 MF. MICA	SA-100198
1	C26	.05 MF. 2-P	SA-102493
1	C27	.002 MF. 4-P	SA-103852

MATERIAL AND SPECIFICATION	LENGTH PER 1000 PCS.	WEIGHT PER 1000 PCS.	FIRST MADE FOR
			SA-103964 MOD. 226

WIRING DIAGRAM

UNITED AMERICAN BOSCH CORPORATION
FACTORY: SPRINGFIELD, MASS.

SCALE

THE SERVICE STAGE FOR THIS PART IS
SERVICE No.

D1-103,982

UNITED AMERICAN BOSCH CORP.

TEST OF SENSITIVITY ON MODEL #312

NOTE While making adjustments on chassis make sure that the signal does not overload any of the tubes, otherwise incorrect adjustment will result.

I. F. ADJUSTMENT

a. Set volume control on max. tone control on treble and ground antenna lead.
b. Connect the 175 Kc. I.F. signal generator to the grid of the 1st. det.
c. Align secondary of 3rd I.F. transformer for max. output.
d. With the losser on the grid of the 2nd I.F. tube, adjust condenser on primary (front one) of 2nd I.F. coil. (e) Holding the losser on the plate side of 2nd I.F. coil, adjust the condenser on secondary (rear one) of 2nd I.F. coil.
f. With the losser on the grid of the 1st I.F. coil, adjust the condenser on secondary (front one) of 1st I.F. coil. (g) Holding the losser on the plate side of the 1st I.F. coil, adjust the condenser on secondary (rear one) of 1st. I.F. coil.
h. Check sensitivity of I.F. Sensitivity limits are 200 mv. on 1st. det. grid. 700 - 312 on 1st I.F. grid. 18,000 on 2nd I.F. grid.

OSCILLATOR ADJUSTMENT

a. Adjust pointer to mark past 550 Kc. (b) Connect ant. lead of the R.F. signal generator to grid of 1st. det. (c) Set the microvolter dial at 1400 Kc.
d. Adjust oscillator alignment condenser until max. output is obtained.

NOTE When adjusting the oscillator 2 peaks may be obtained. Set the align. condenser down tight; turn to the right, one peak at (1575 Kc.) will be noted about ½ of a turn out. Set on the (1575 Kc.) peak, otherwise the oscillator will not track in the center of the scale. (e) Connect ant. lead to microvolter. DO NOT TOUCH OSCILLATOR CONDENSER.

f. Adjust antenna, R.F. and detector alignment condensers for max. output.
g. Set the signal generator dial to 600 Kc. and pointer of the chassis to 600.
h. Adjust the condenser on the oscillator coil (on side of chassis) until max. output is obtained and note sensitivity.

NOTE Disregard the pointer reading entirely during this adjustment. This is best obtained by adjusting the trimmer, retune & noting the output, then readjust & retuning until maximum output is obtained.

R. F. ADJUSTMENT

a. Set the dials at 1400 Kc. and readjust all trimmers peaking oscillator condenser first; note sensitivity at 1400, 1000, 700, 550.
limits are 7 3 3 5.
b. Check switch, volume control action and tone control. (c) Check power output. Should be 5 volts. (d) Check for hum, note any distortion while making tests.
e. Check A.V.C. action by tuning meter. Should A.V.C. at 40 mv.
f. Tap the 2nd. det. tube & check noise. (g) Check relay at 954 Kc. with control at maximum. It should release at 300 mv.

AIR TEST

a. Connect ant. lead to outdoor ant. (b) Check for tone quality and carrier hum
c. Check for selectivity & stability. (d) Check vol. control action & switch. (e) Check for power output. Should be ___ volts 10 watts. (f) Check for noise with ant. grounded.

WARE MANUFACTURING CORP.

MODEL T
MODEL 4 Tube
MODEL 7 Tube

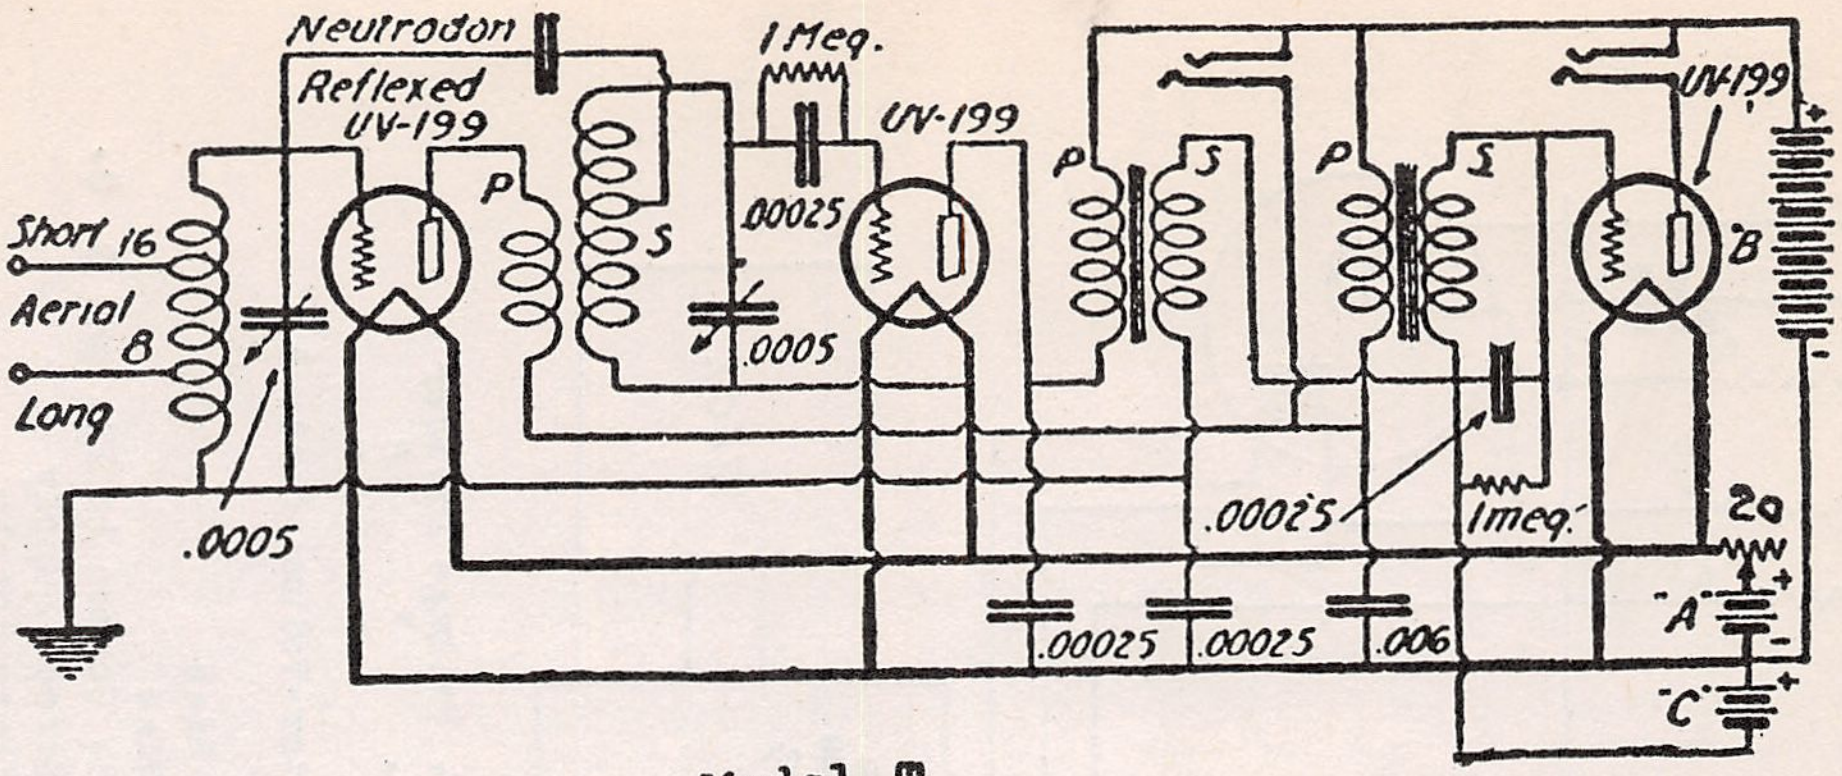
Neutrodon
Reflexed UV-199
1 Meg.
UV-199
Short 16
Aerial 8
Long
P
S
.00025
.0005
.0005
P
S
P
S
UV-199
B
.00025
Imeg.
20
A
C
.00025
.00025
.006

Model T

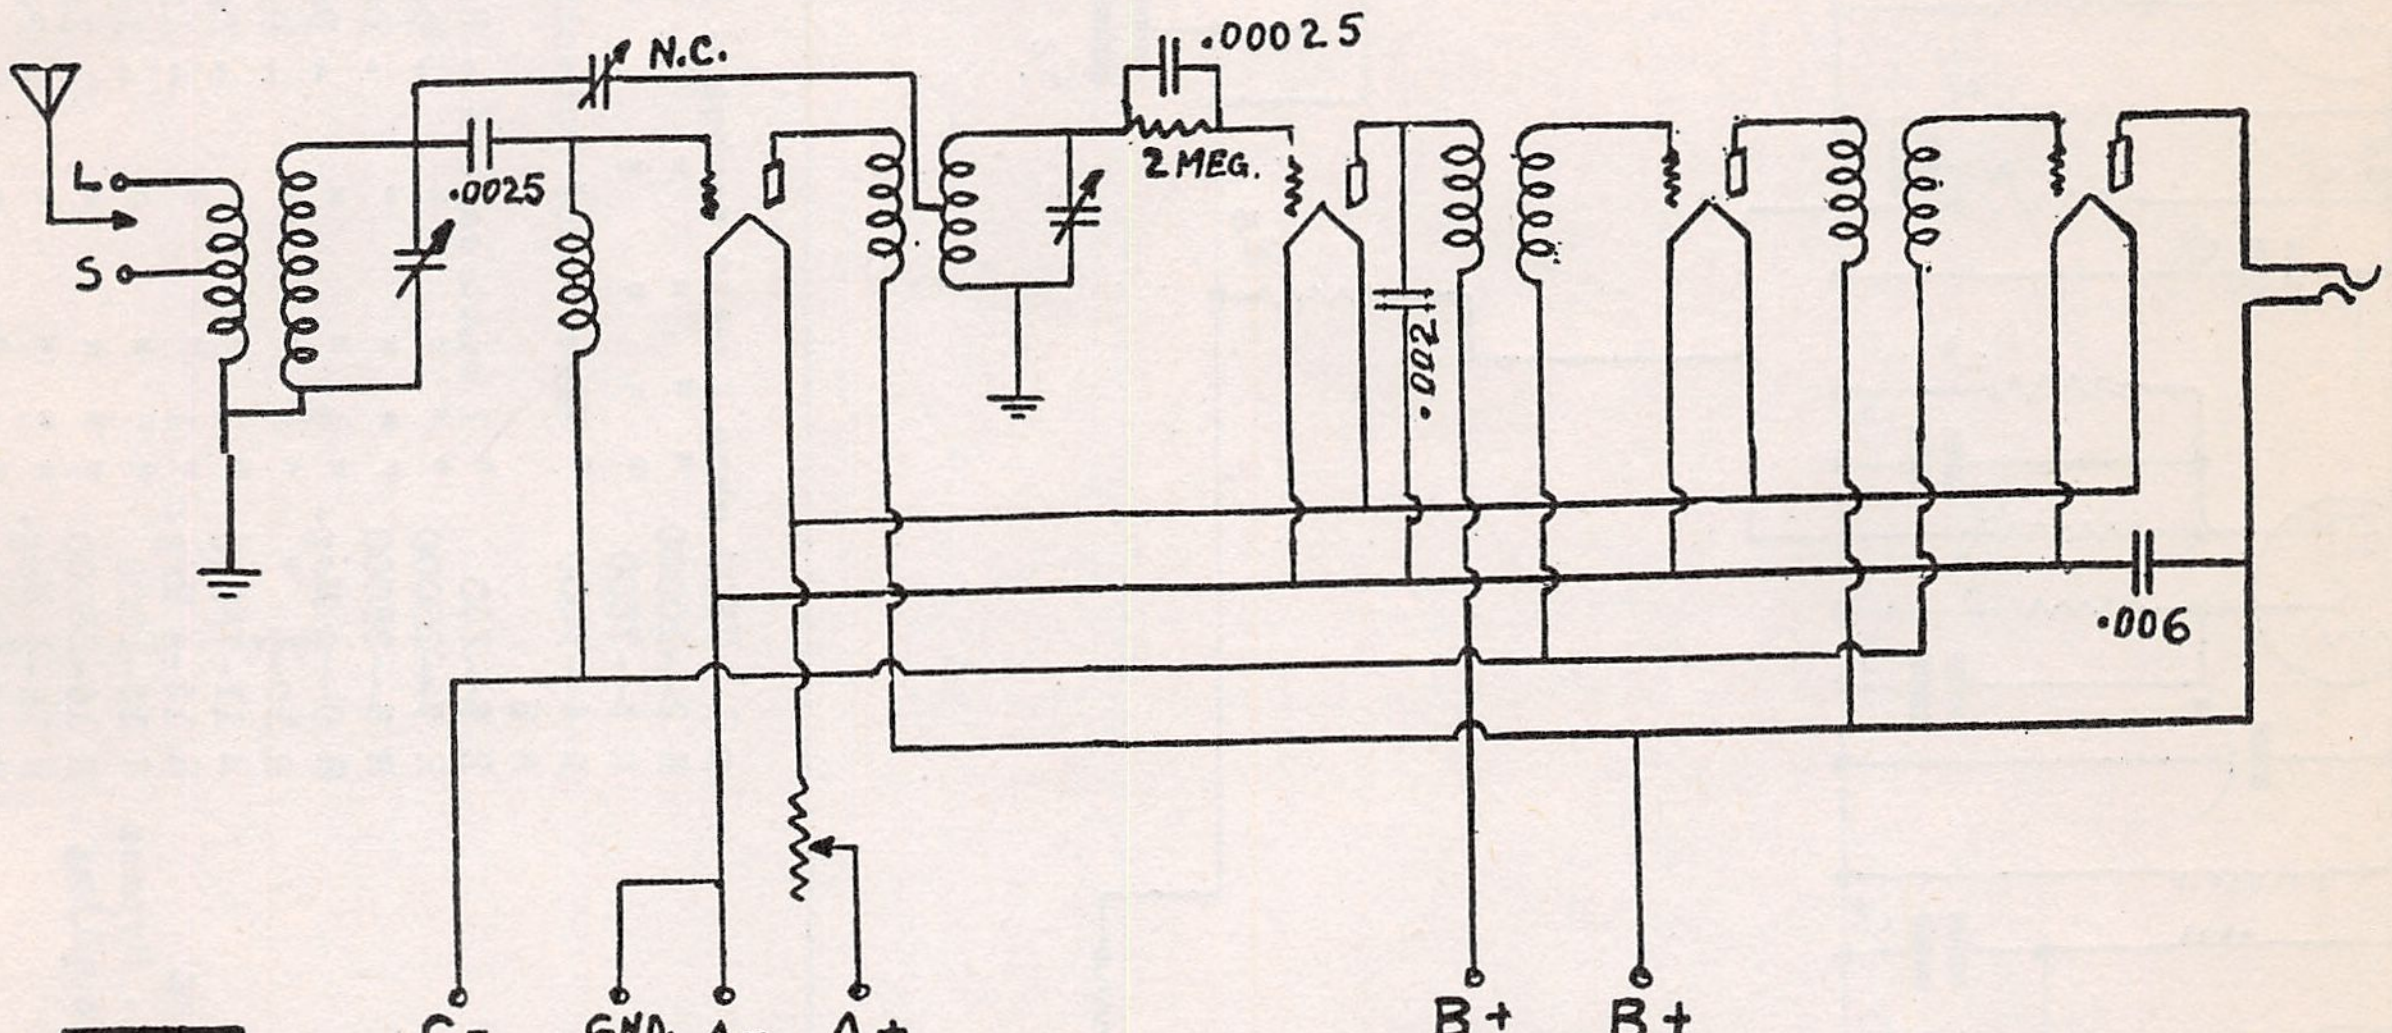
L
S
N.C.
.0025
.00025
2 MEG.
.002
.006
C-
GND.
A- B- C+
A+
B+ DET.
B+ 90 V.

Model 4 Tube "Music Master"

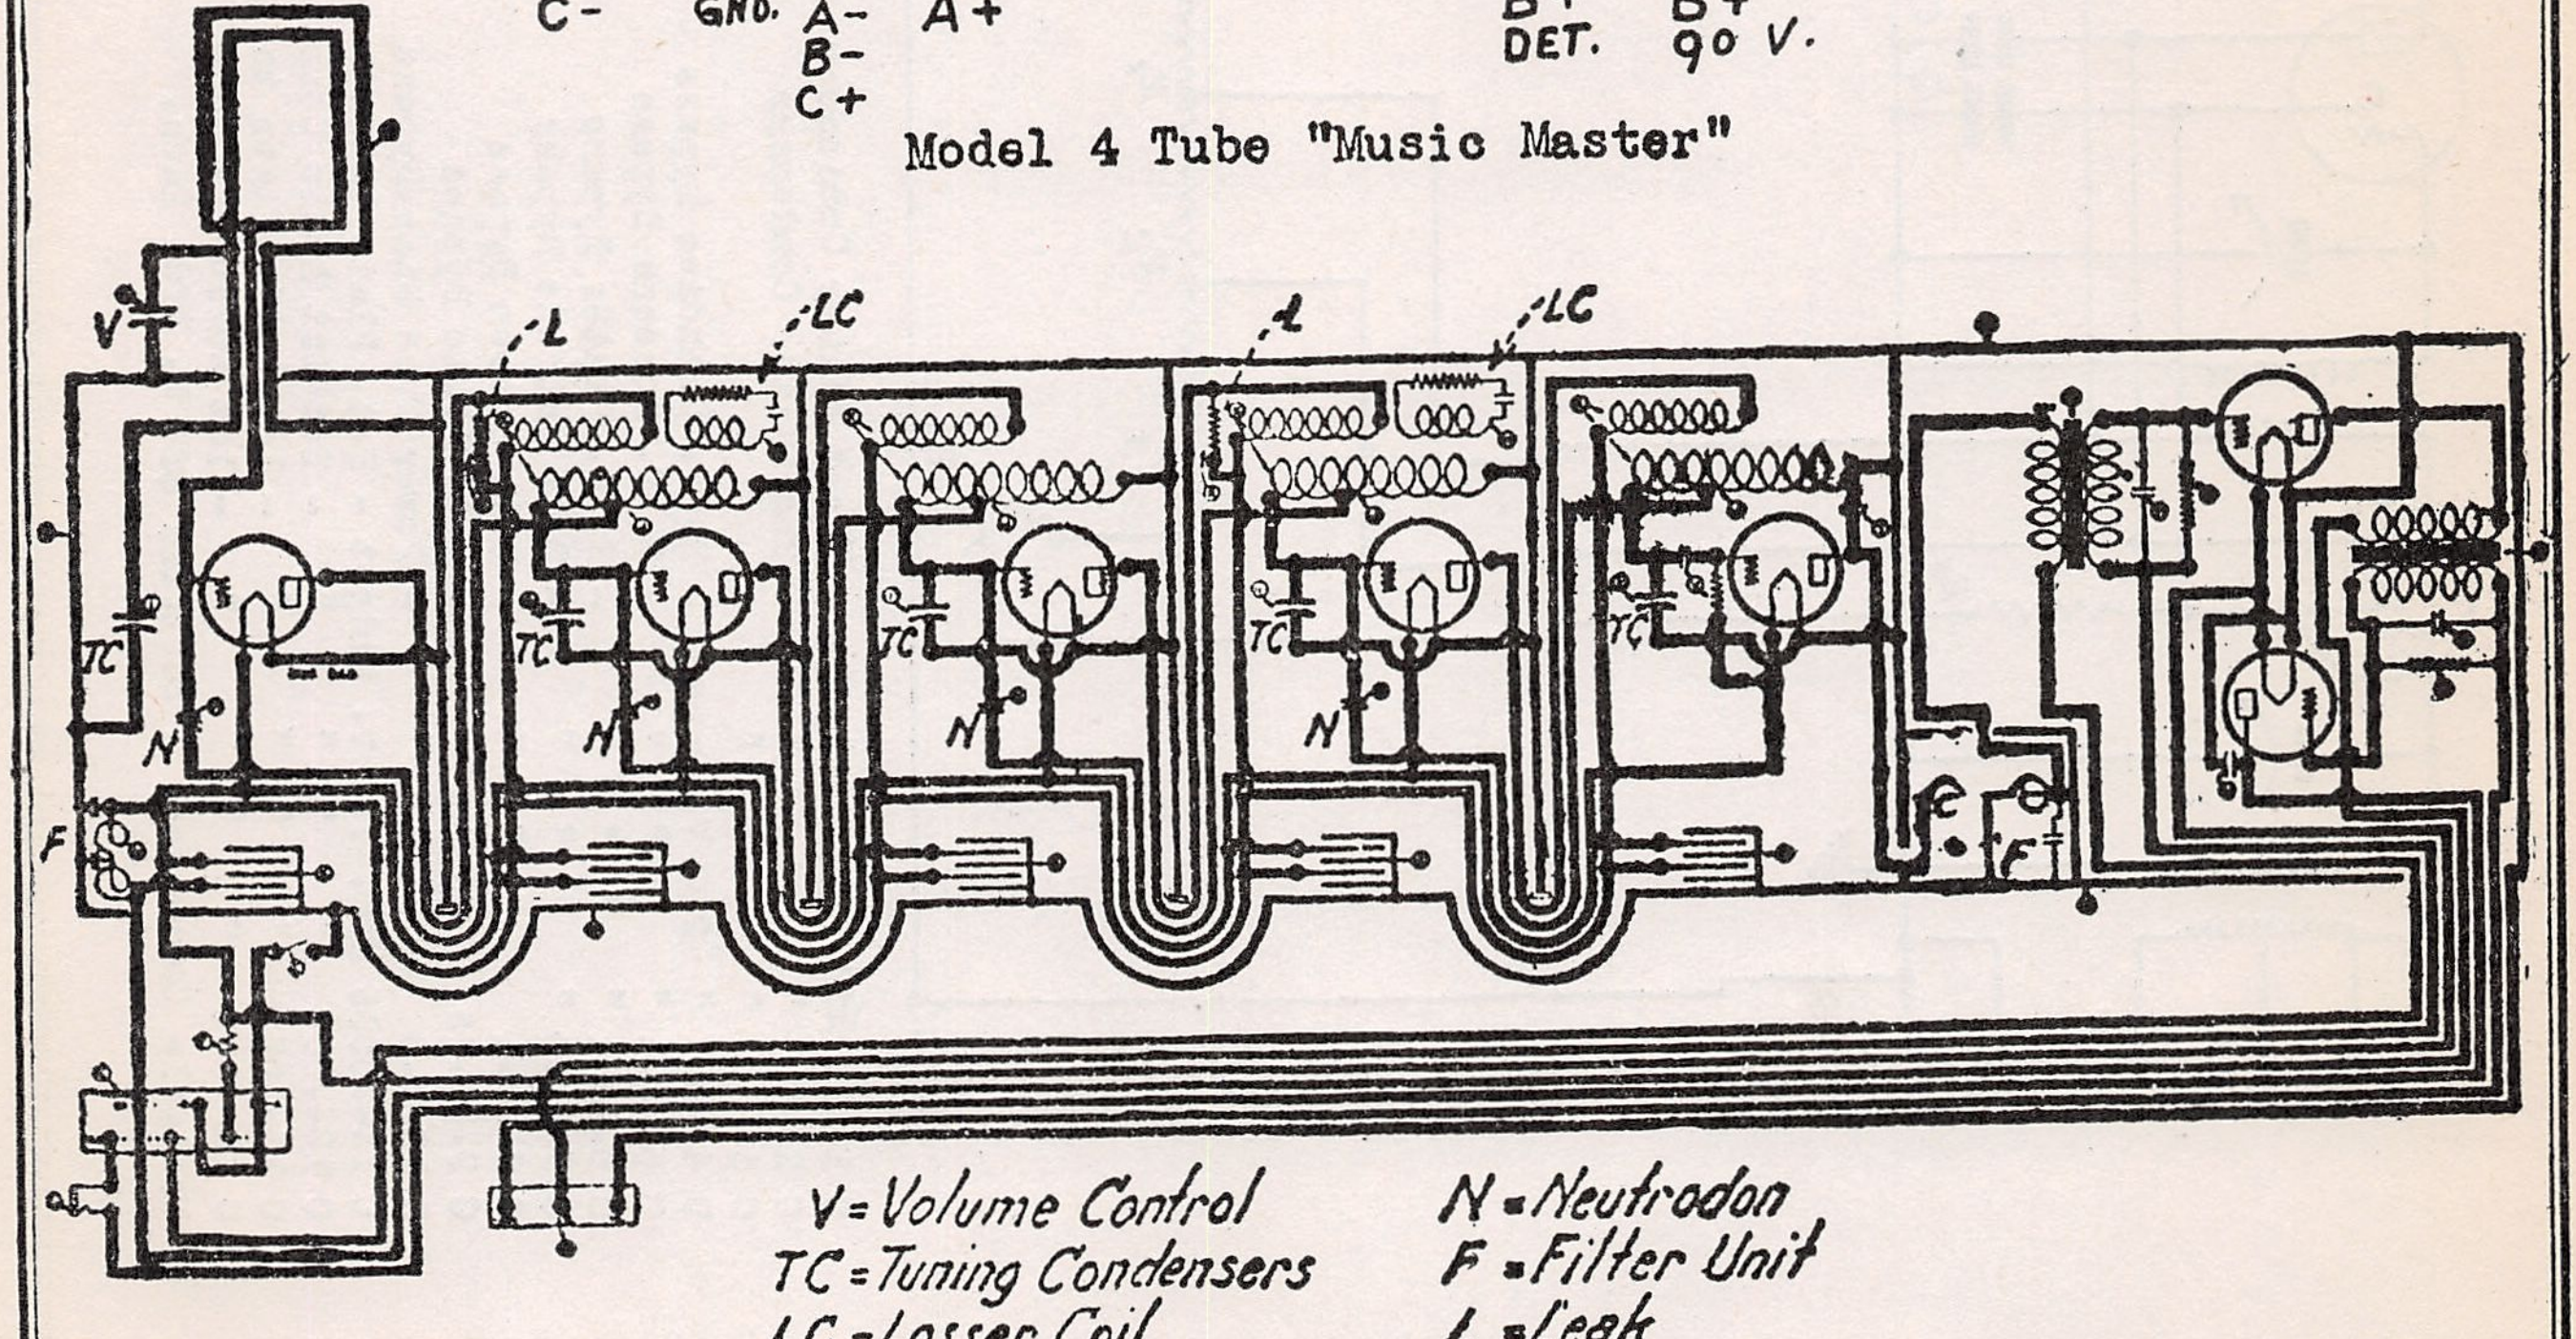
V
L
LC
L
LC
TC
TC
TC
TC
TC
N
N
N
N
F
F

V = Volume Control
TC = Tuning Condensers
LC = Losser Coil
N = Neutrodon
F = Filter Unit
L = Leak

Model 7 Tube Music Master

MODEL B-1,B-2 Bantam

WARE MANUFACTURING CORP.

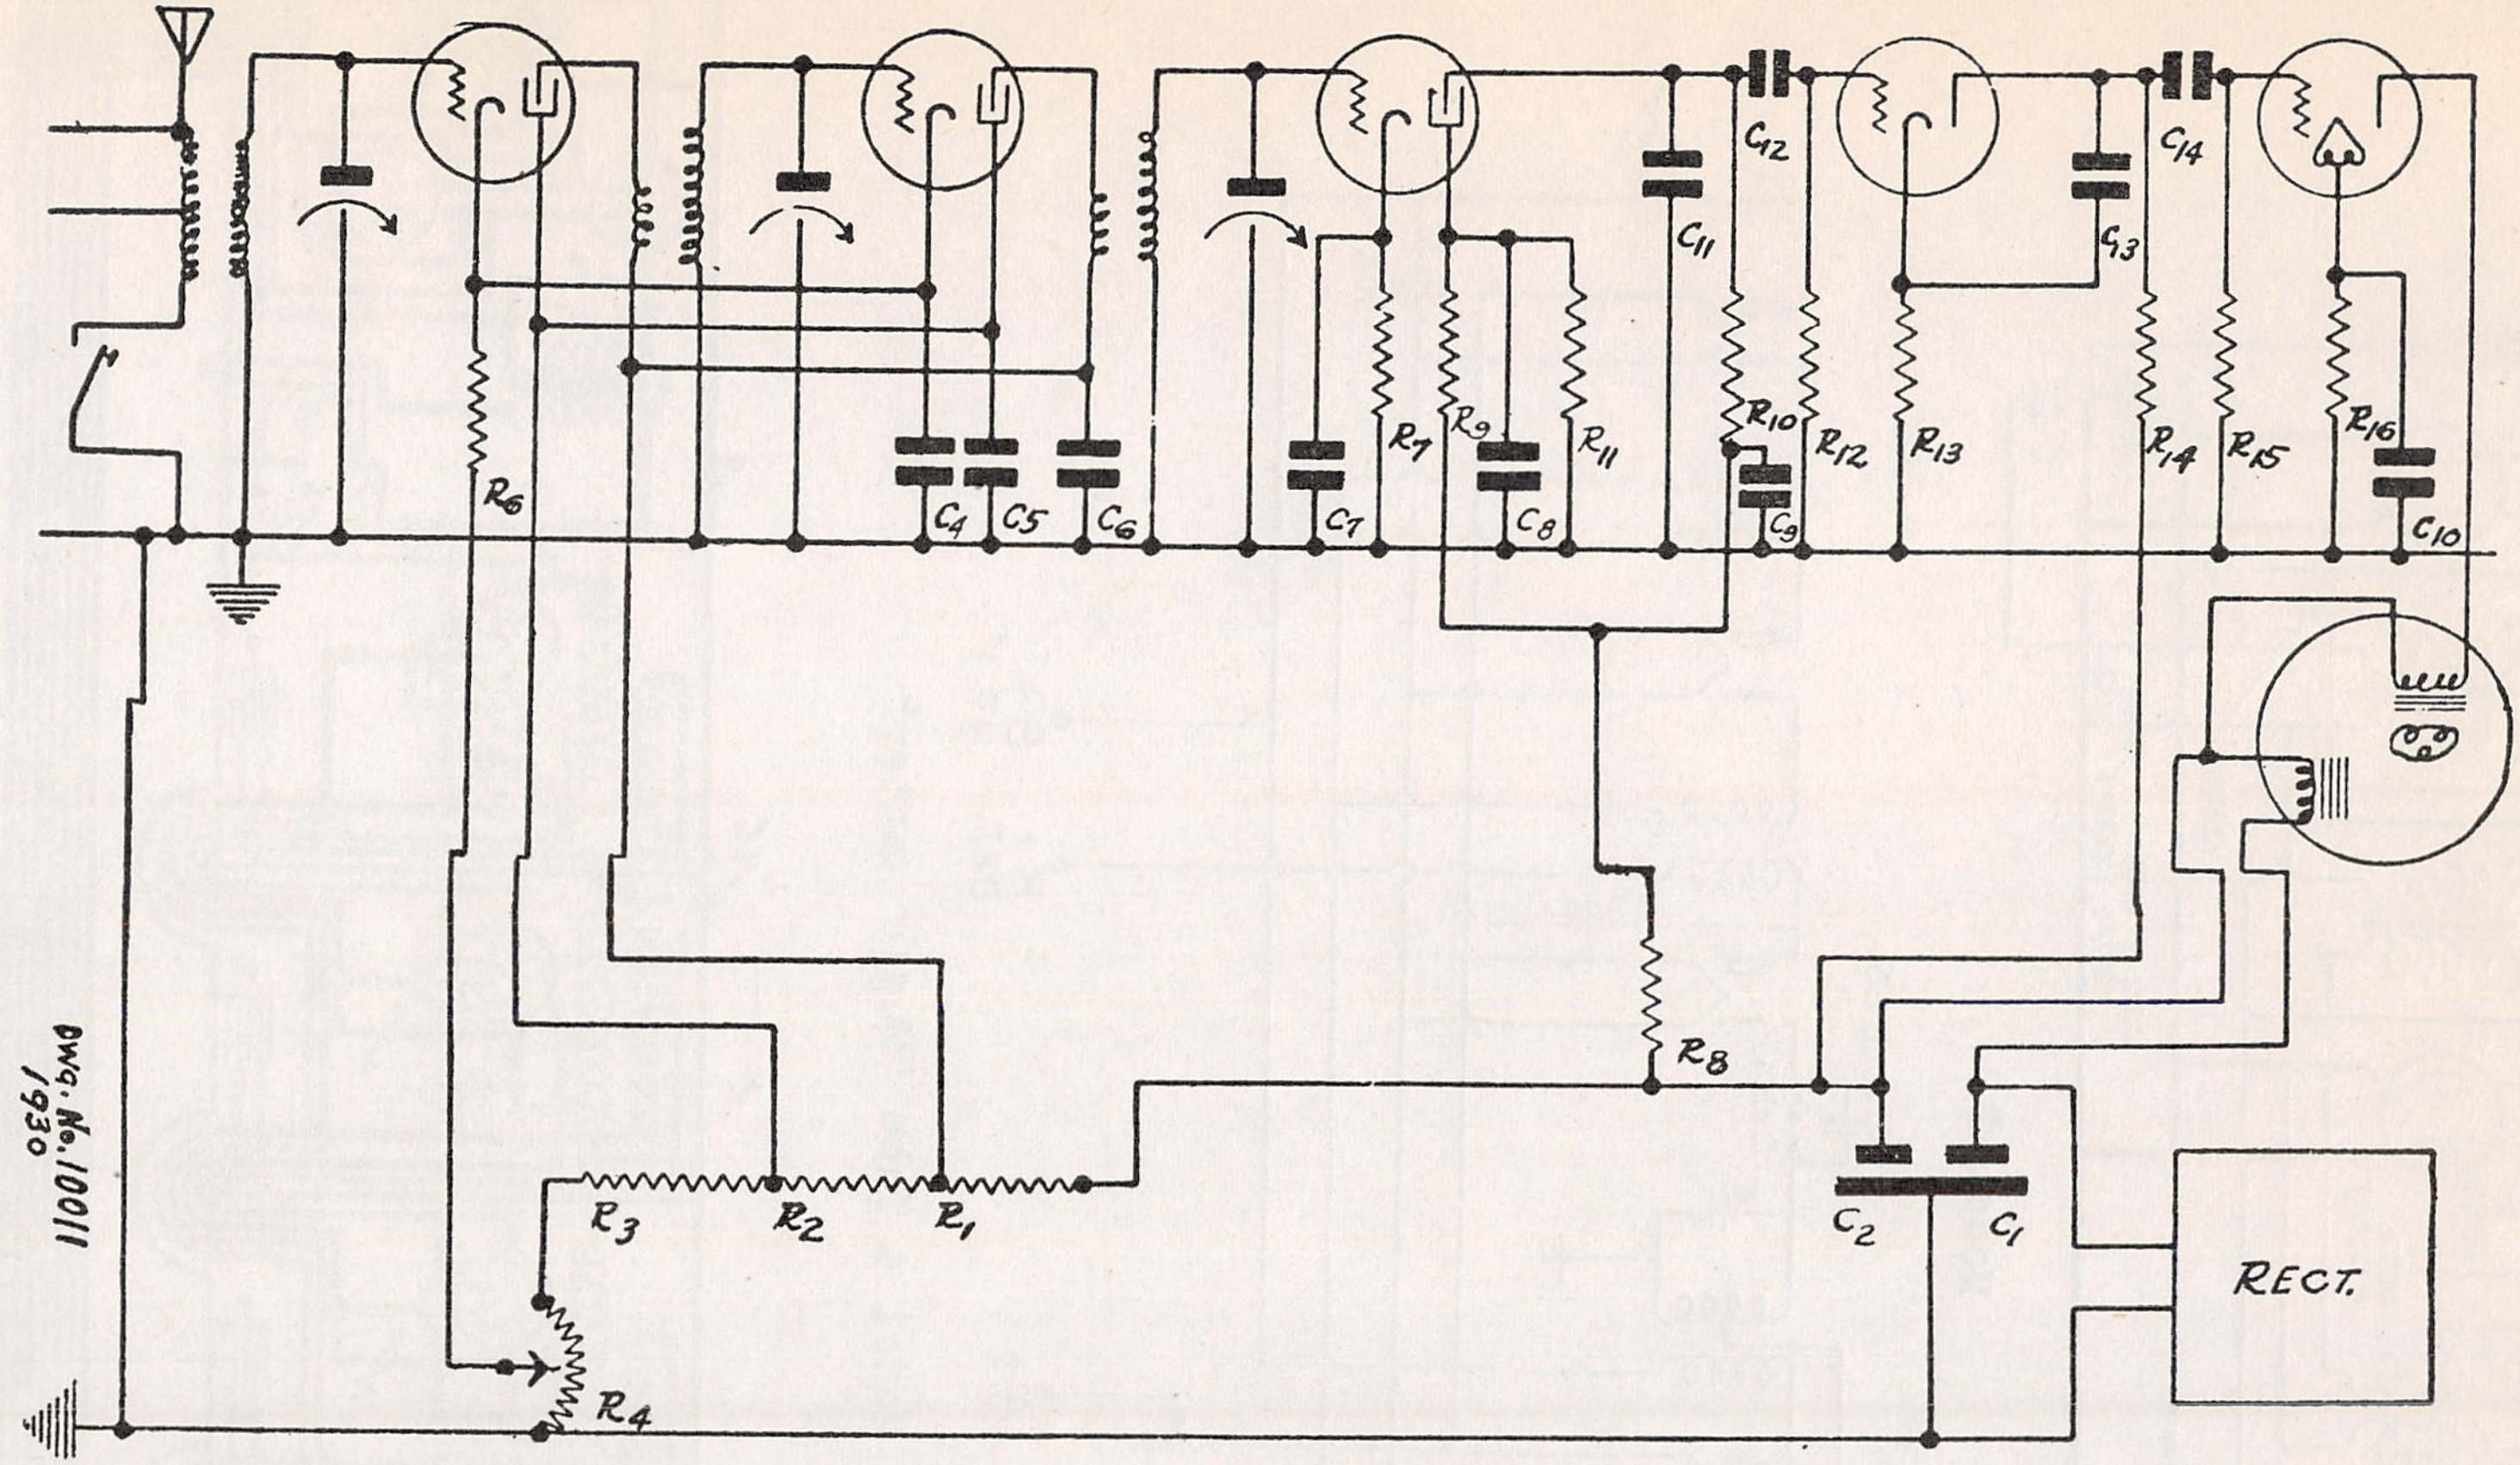

C 1--14 Mfd. Electrolytic - First Filter Condenser
C 2--2 " " - 2nd Filter Condenser
C 3-- " " -
C 4--0.1 " 200 V. Paper - R. F. Cathodes Bypass
C 5--0.1 " " " " - R. F. Screens Bypass
C 6--0.1 " " " " - R. F. Plates Bypass
C 7--1.0 " " " " - Det. Cathode Bypass
C 8--0.1 " " " - Det. Screen Bypass
C 9--0.25 " " " - Det. Plate Bypass
C 10-1.0 " " " - Power Tube Bias Bypass
C 11-.0005 Mfd. 350 V. Midget - Det. Plate to Gnd.
C 12-.006 " " " " - Det-1st Audio Coupling
C 13-.02 " " " " - 1st Audio Plate to K. Bypass
C 14-.006 " " " " - 1st Audio-Pr. Tube Coupling
Variable Condenser, 3 Sections 367 M. Mfd. Each.

R 1--7500 ohms 1 watt carbon - R. F. Voltage Divider
R 2--10000 " " " " - R. F. " "
R 3--7500 " " " " " " " "
R 4--1000 " Wire Wound Potentiometer-Volume Control
R 5
R 6--280 " 1 watt carbon - R. F. Bias
R 7--25000 " " " " - Det. Bias
R 8--25000 " " " " - Det. B. Common to Pl. and S. G.
R 9--$\frac{1}{2}$ Meg. " $\frac{1}{2}$ " " - Det. Screen Supply
R 10-$\frac{1}{4}$ " " " " " - Det. Plate Supply
R 11-75000 " 1 " " - Det. Screen Shunt
R 12-$\frac{1}{2}$ Meg. " 1 " " - 1st Audio Grid to Ground
R 13-1000 " " " " - 1st Audio Bias
R 14-25000 " " " " - 1st Audio Plate Supply
R 15-$\frac{1}{2}$ Meg. " " " " - P.T. Grid to Ground
R 16-1300 " 2 " " - P. T. Bias

"BANTAM" CHASSIS TYPE B-1 AND B-2

MODEL SB-45

WARE MANUFACTURING CORP.

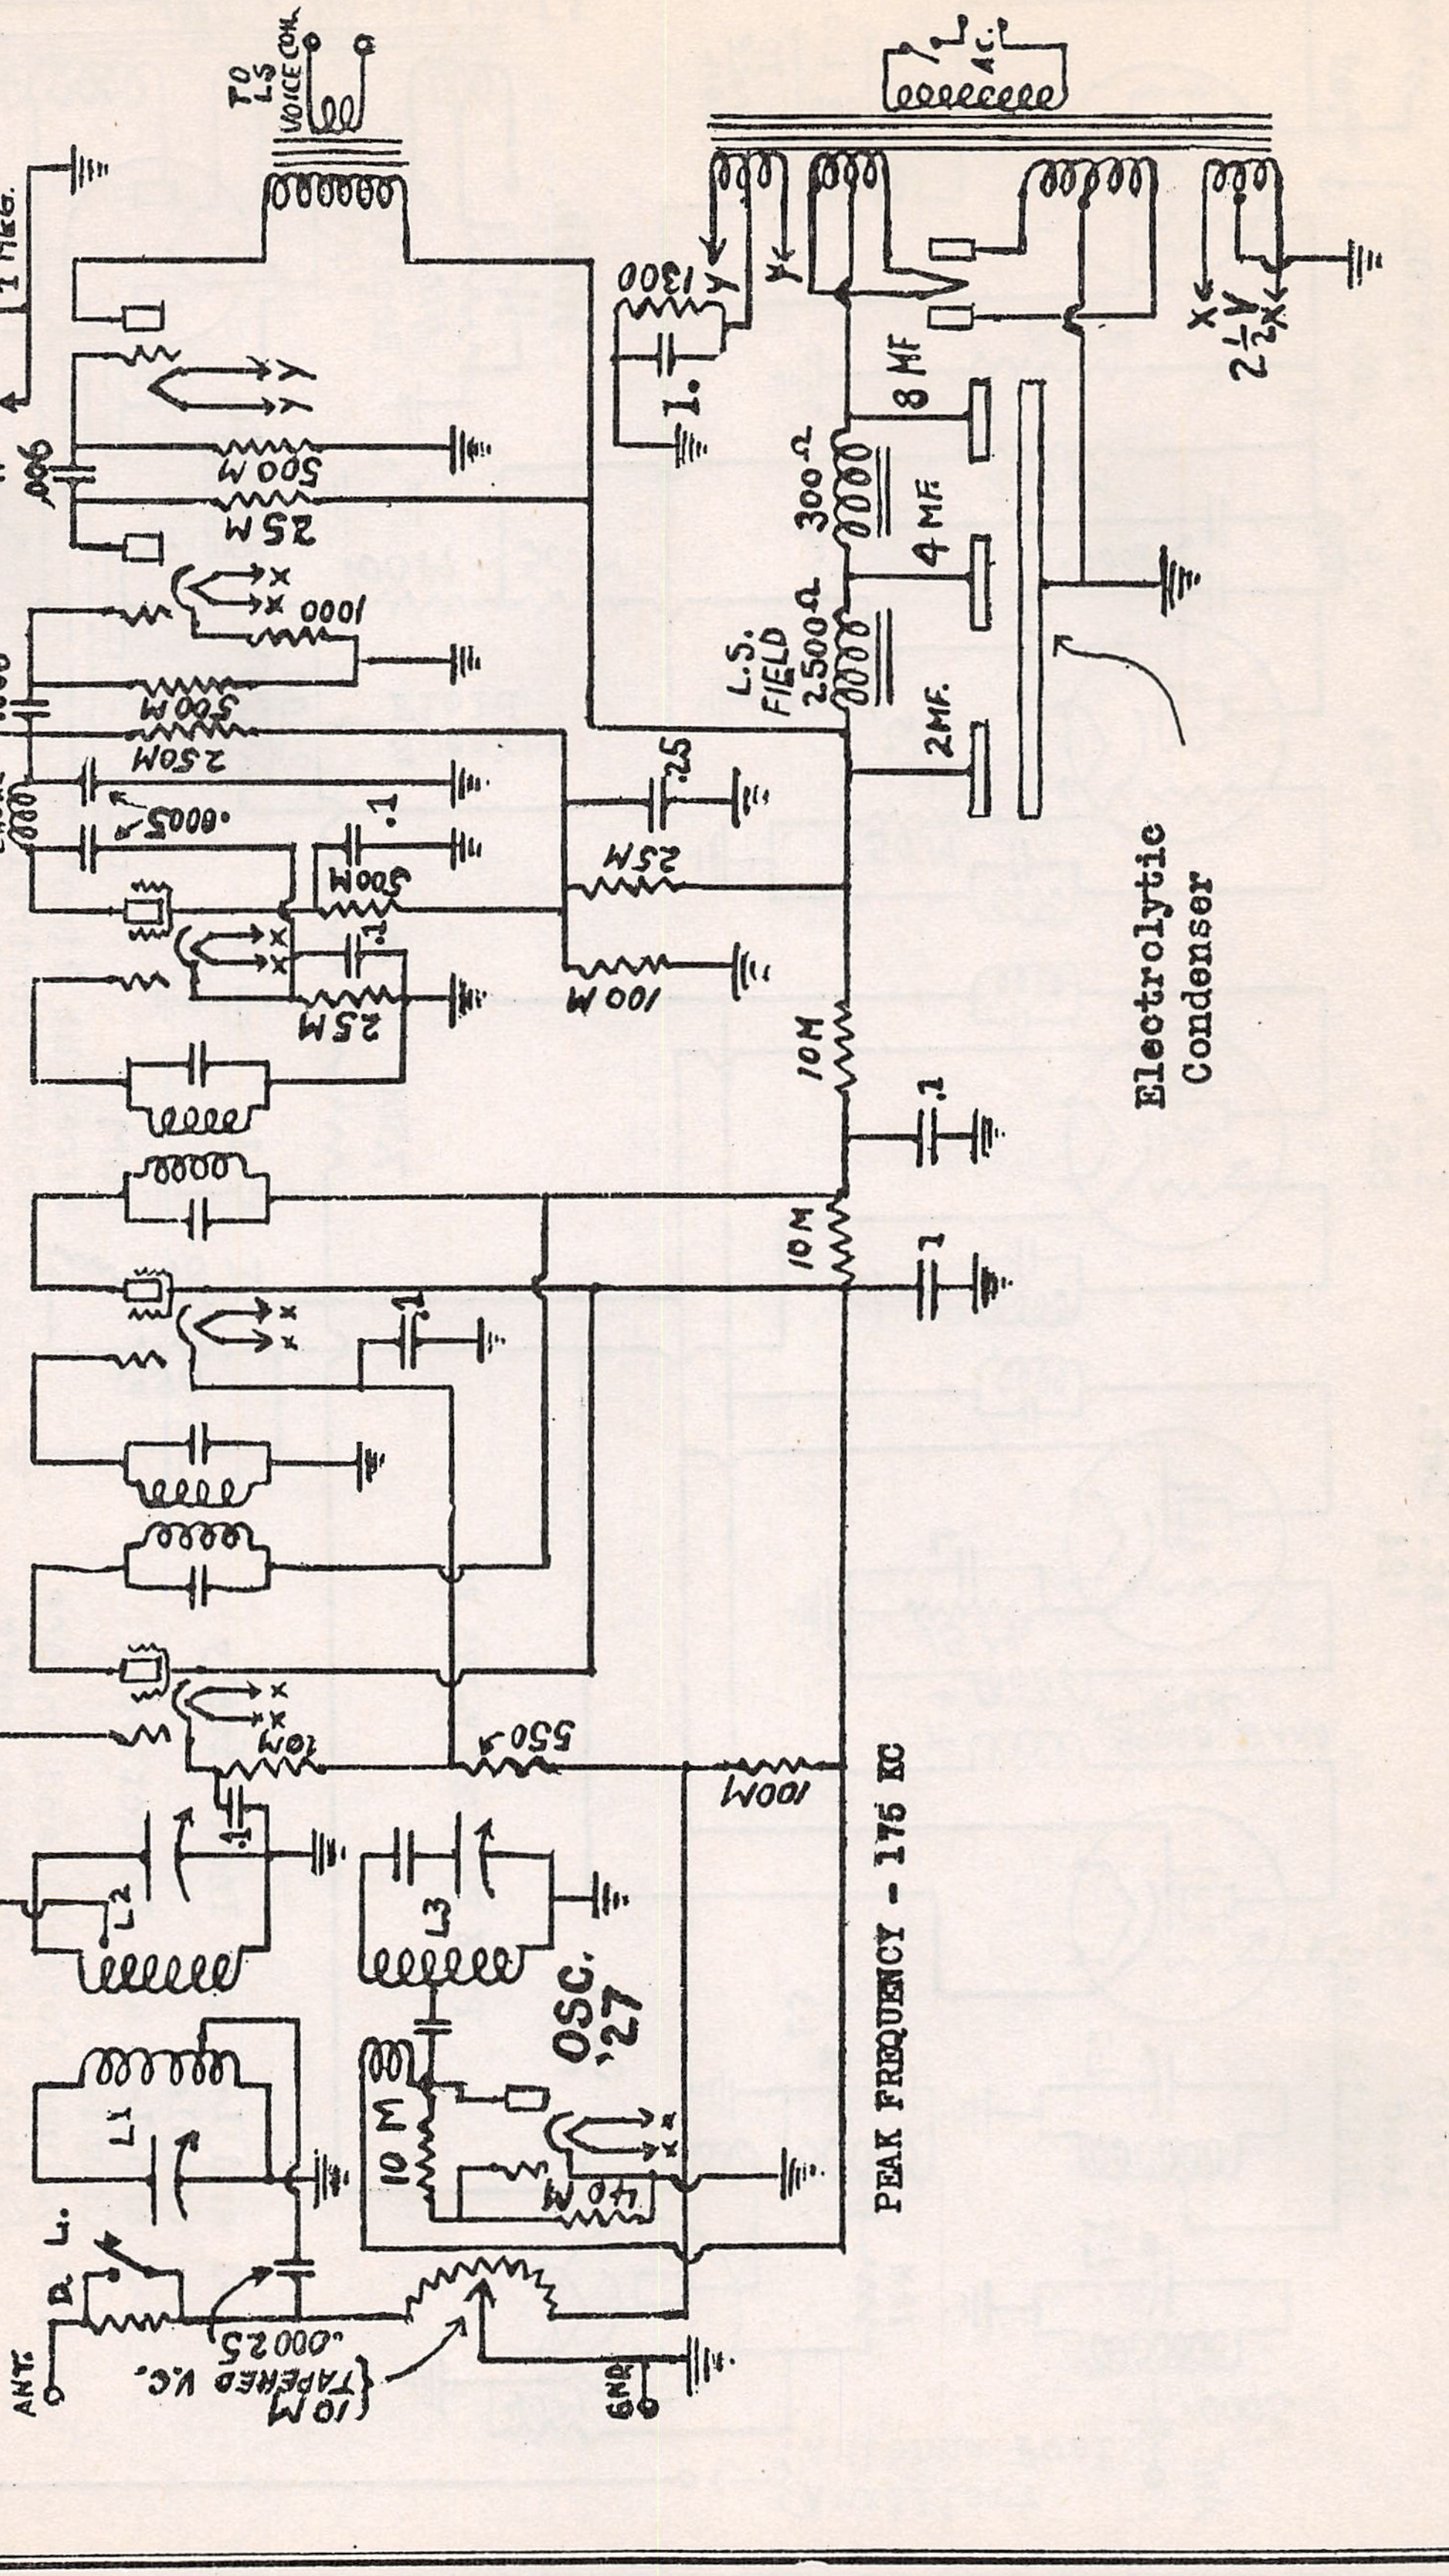
LAST A.F. -45
TONE CONTROL 1 MEG.
TO L.S. VOICE COIL
.01
.006
500M
25M
Y Y
1ST. A.F. -27
X X
1000
.006
500M
250M
2ND. DET. -24
R.F. CHOKE
.0005
.1
300M
.1
25M
25M
100M
.5
L.S. FIELD 2500Ω
2MF.
300Ω
4MF.
8MF
1300
1.
Y
Y
A.C.
X
2½V
X
Electrolytic Condenser
10M
.1
10M
.1
I.F. -24
.1
1ST. DET. -24
10M
550
100M
PEAK FREQUENCY - 175 KC
L2
.1
L3
OSC. '27
10M
40M
L1
D.L.
ANT.
.00025
10M TAPERED V.C.
GND.

On-off switch is located on volume control shaft.
Coils L1 and L3 are inductively coupled to L2.

MODEL SBA

WARE MANUFACTURING CORP.

TYPE S.B.A. SUPERHETERODYNE

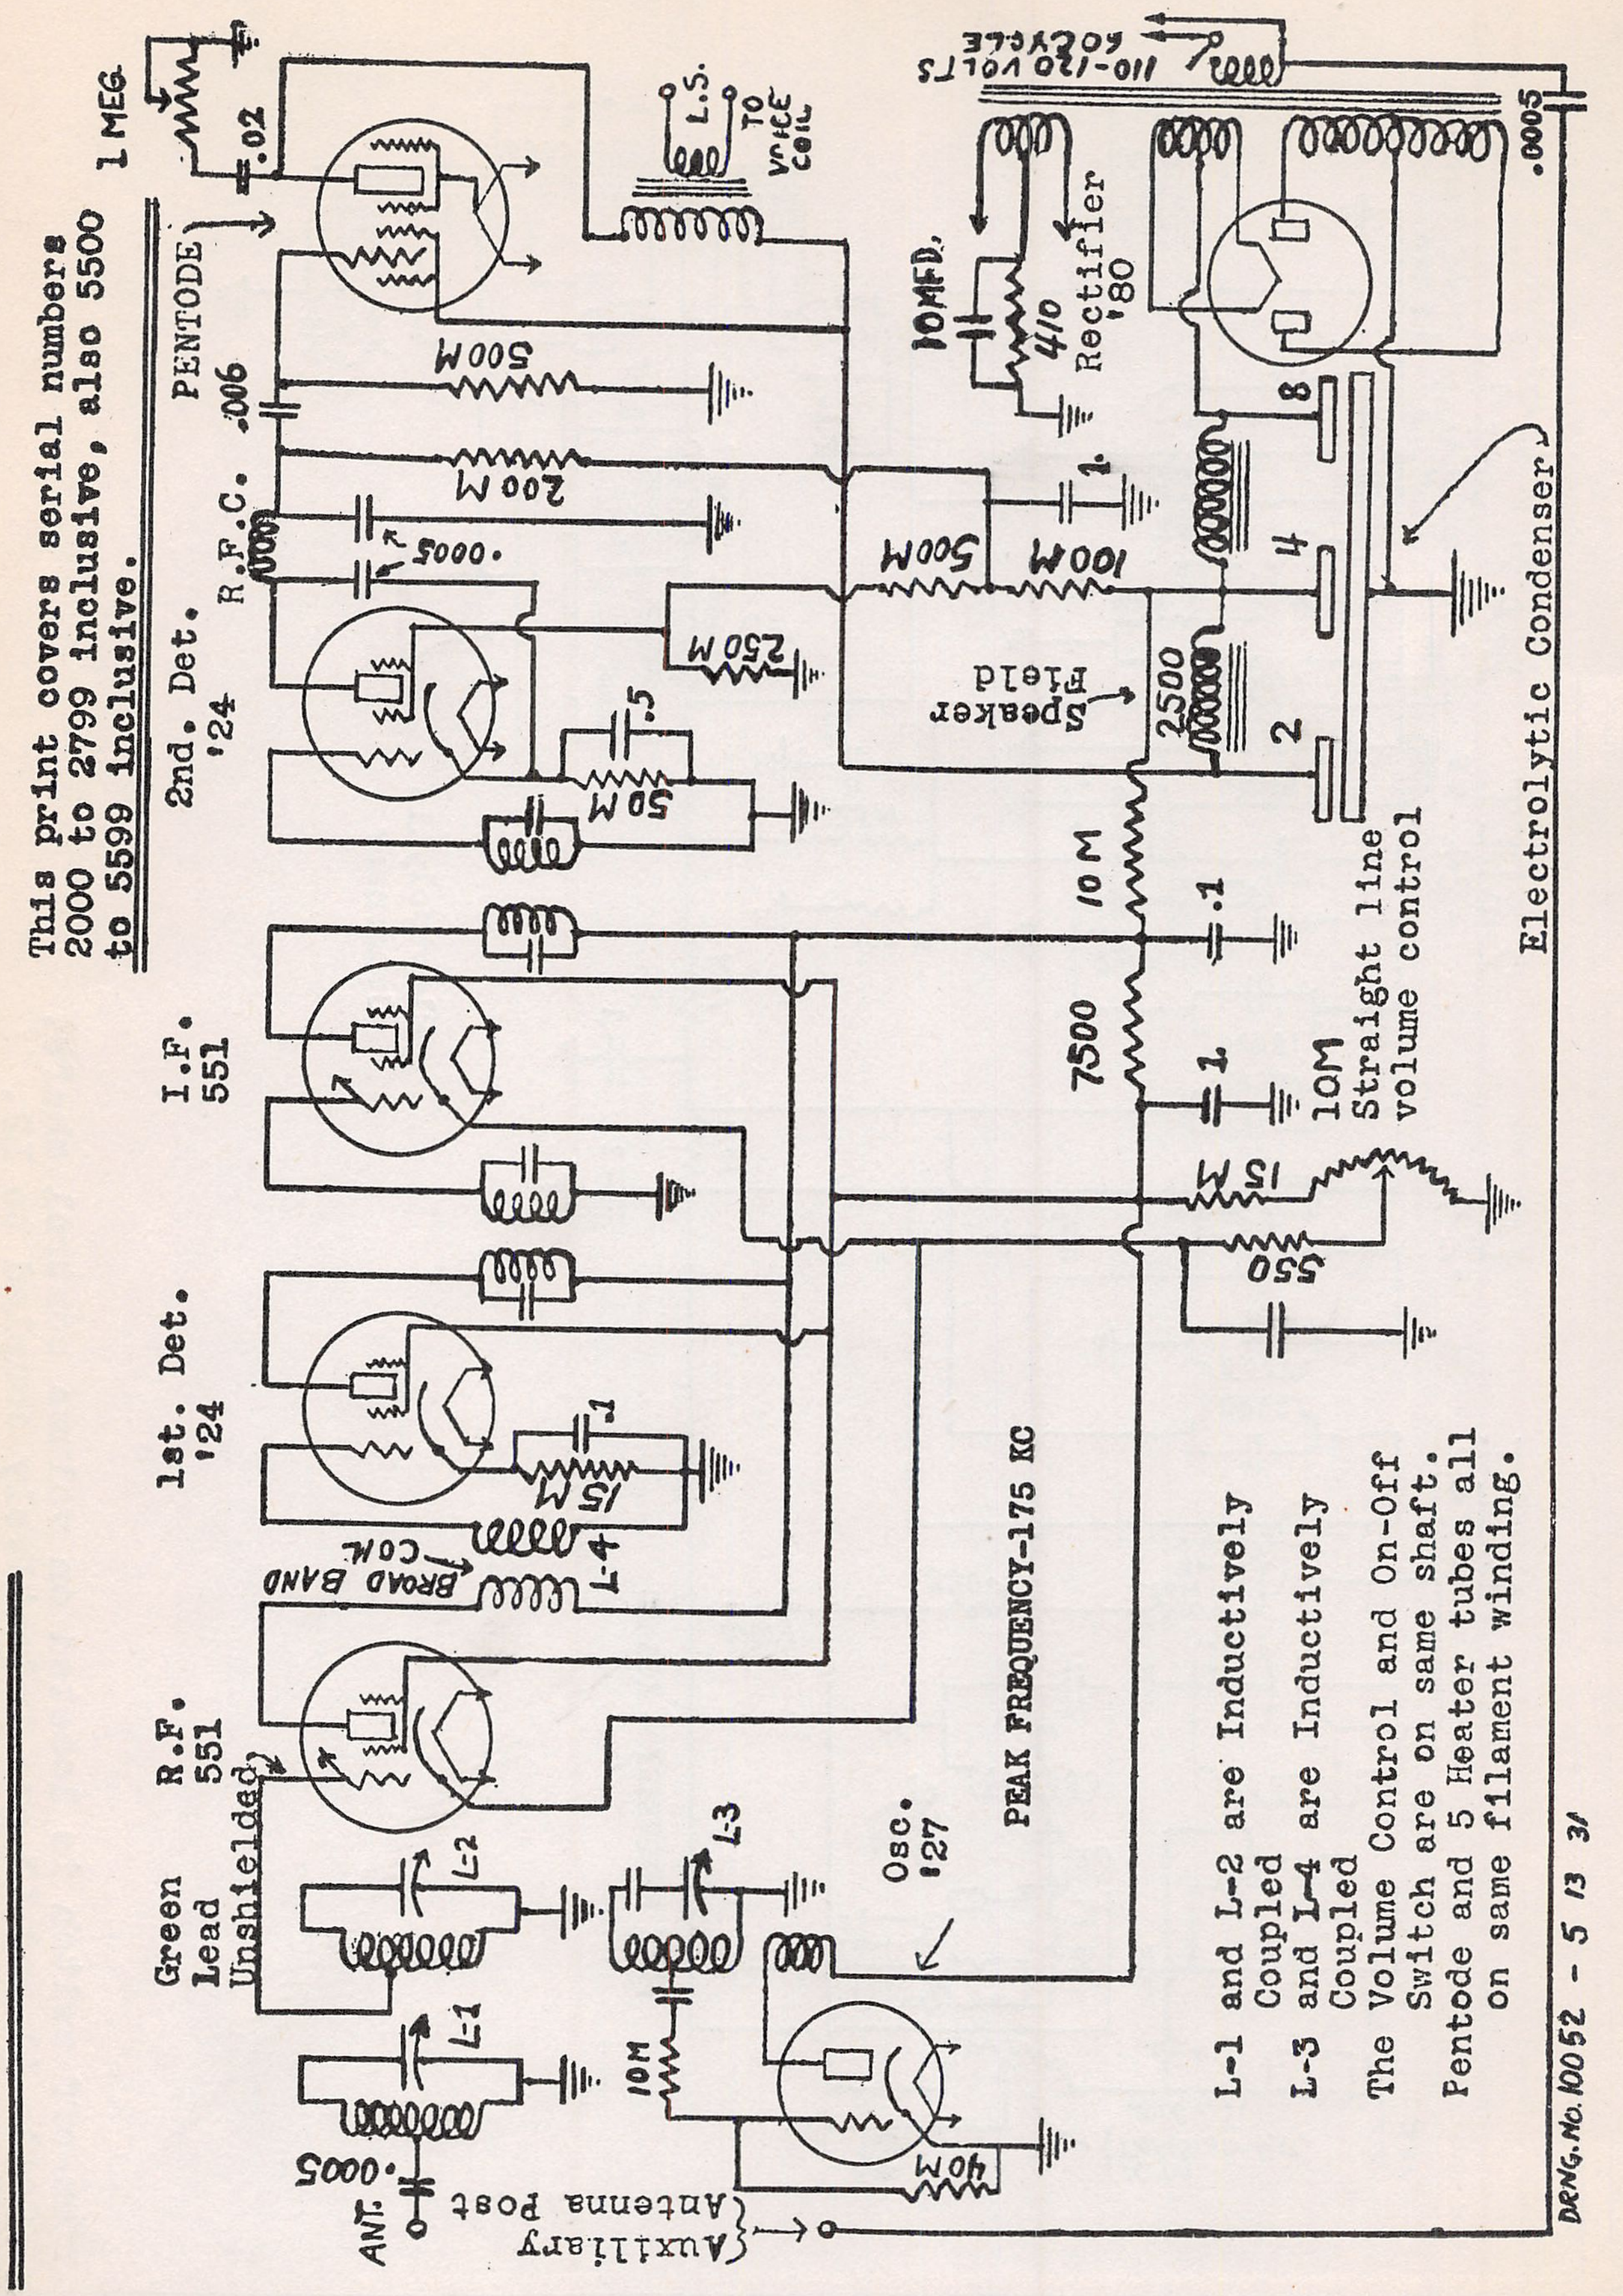
ANT.
.0005
L-1
Auxiliary Antenna Post
Green Lead Unshielded
R.F. 551
L-2
10M
L3
Osc. '27
40M
BROAD BAND COIL
L-4
1st. Det. '24
15M
.1
I.F. 551
2nd. Det. '24
50M
.5
250M
R.F.C.
.0005
200M
.006
500M
PENTODE
.02
1 MEG.
L.S.
TO VOICE COIL
110-120 VOLTS 60 CYCLE
.0005
10MFD.
410
Rectifier '80
8
1
500M
100M
4
2500
Speaker Field
2
Electrolytic Condenser
10M
.1
7500
1
10M
Straight line volume control
15M
550

This print covers serial numbers 2000 to 2799 inclusive, also 5500 to 5599 inclusive.

PEAK FREQUENCY-175 KC

L-1 and L-2 are Inductively Coupled

L-3 and L-4 are Inductively Coupled

The Volume Control and On-Off Switch are on same shaft.

Pentode and 5 Heater tubes all on same filament winding.

DRNG. NO. 10052 - 5 13 31

MODEL S-1
MODEL SBF

WARE MANUFACTURING CORP.

TYPE S-1 SUPERHETERODYNE

PEAK FREQUENCY - 175 KC

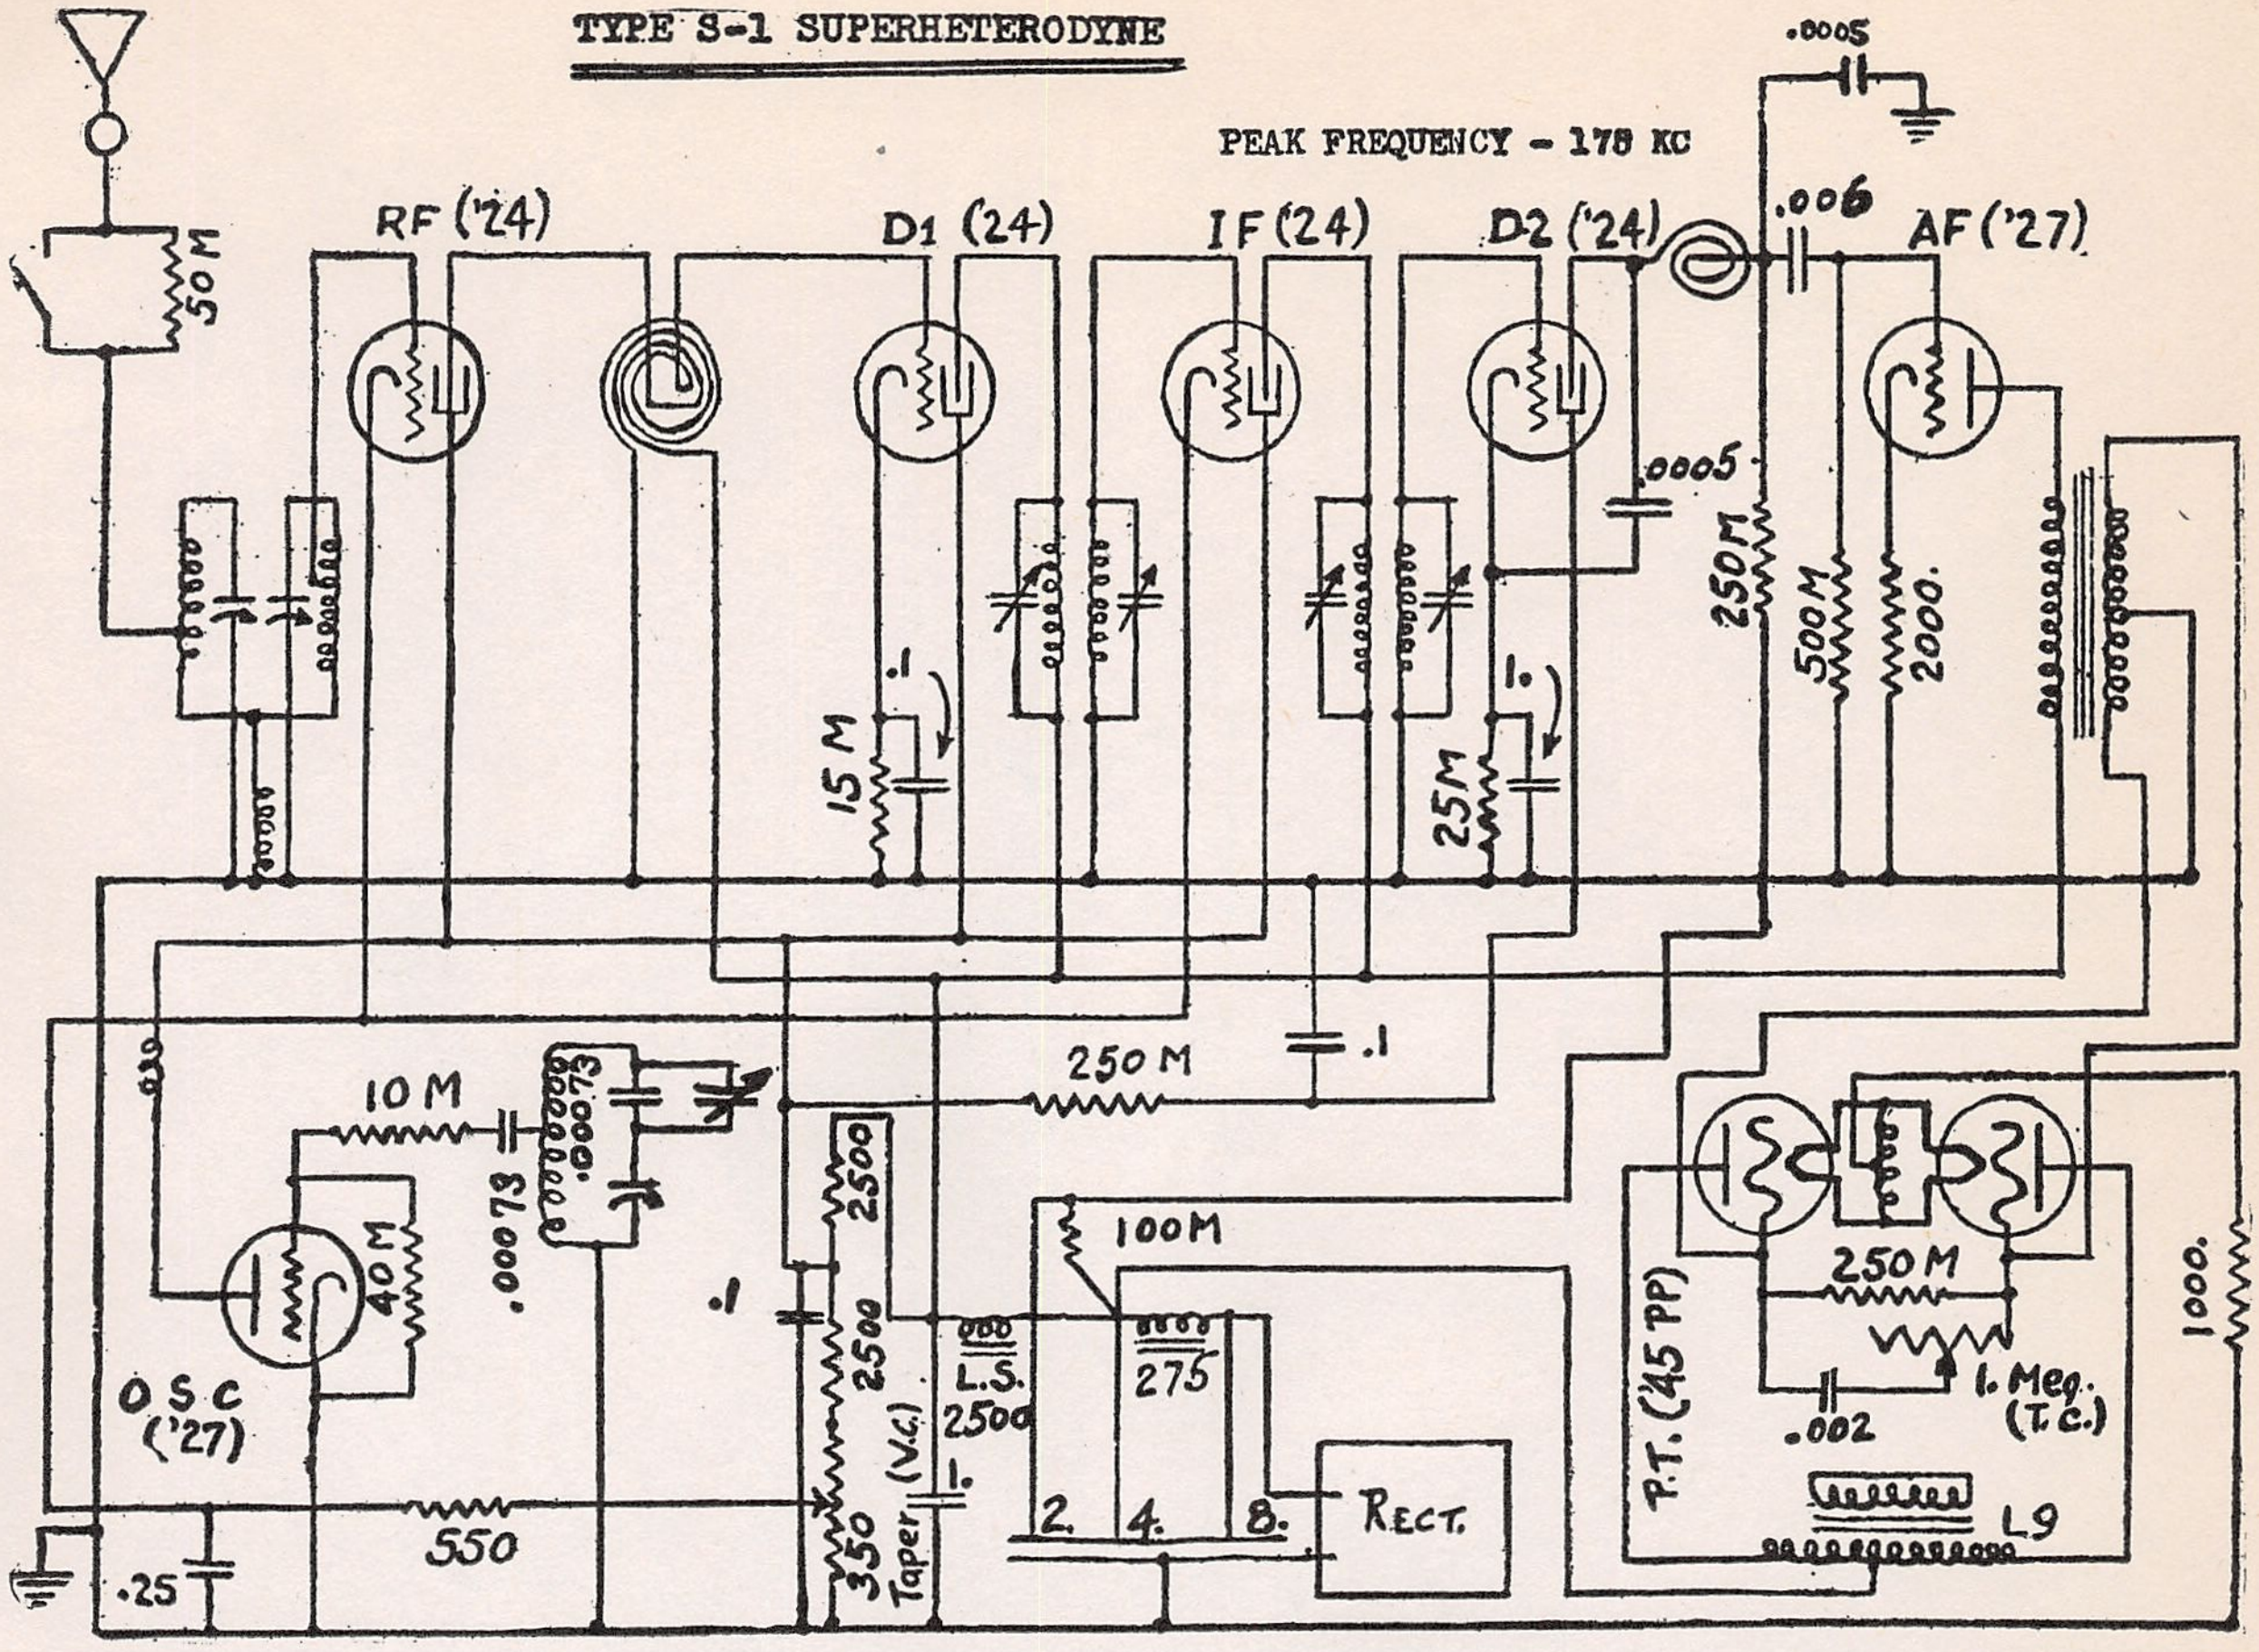
.0005
RF ('24)
D1 (24)
IF (24)
D2 ('24)
.006
AF ('27)
50 M
.0005
250 M
500 M
2000.
15 M
1.
25 M
1.
.1
250 M
10 M
.00073
.00073
40 M
OSC ('27)
.1
2500
100 M
2500
L.S. 2500
275
Taper (V.C.)
1.
350
550
.25
2.
4.
8.
RECT.
P.T. ('45 PP)
250 M
.002
1. Meg. (T.C.)
1000.
L9

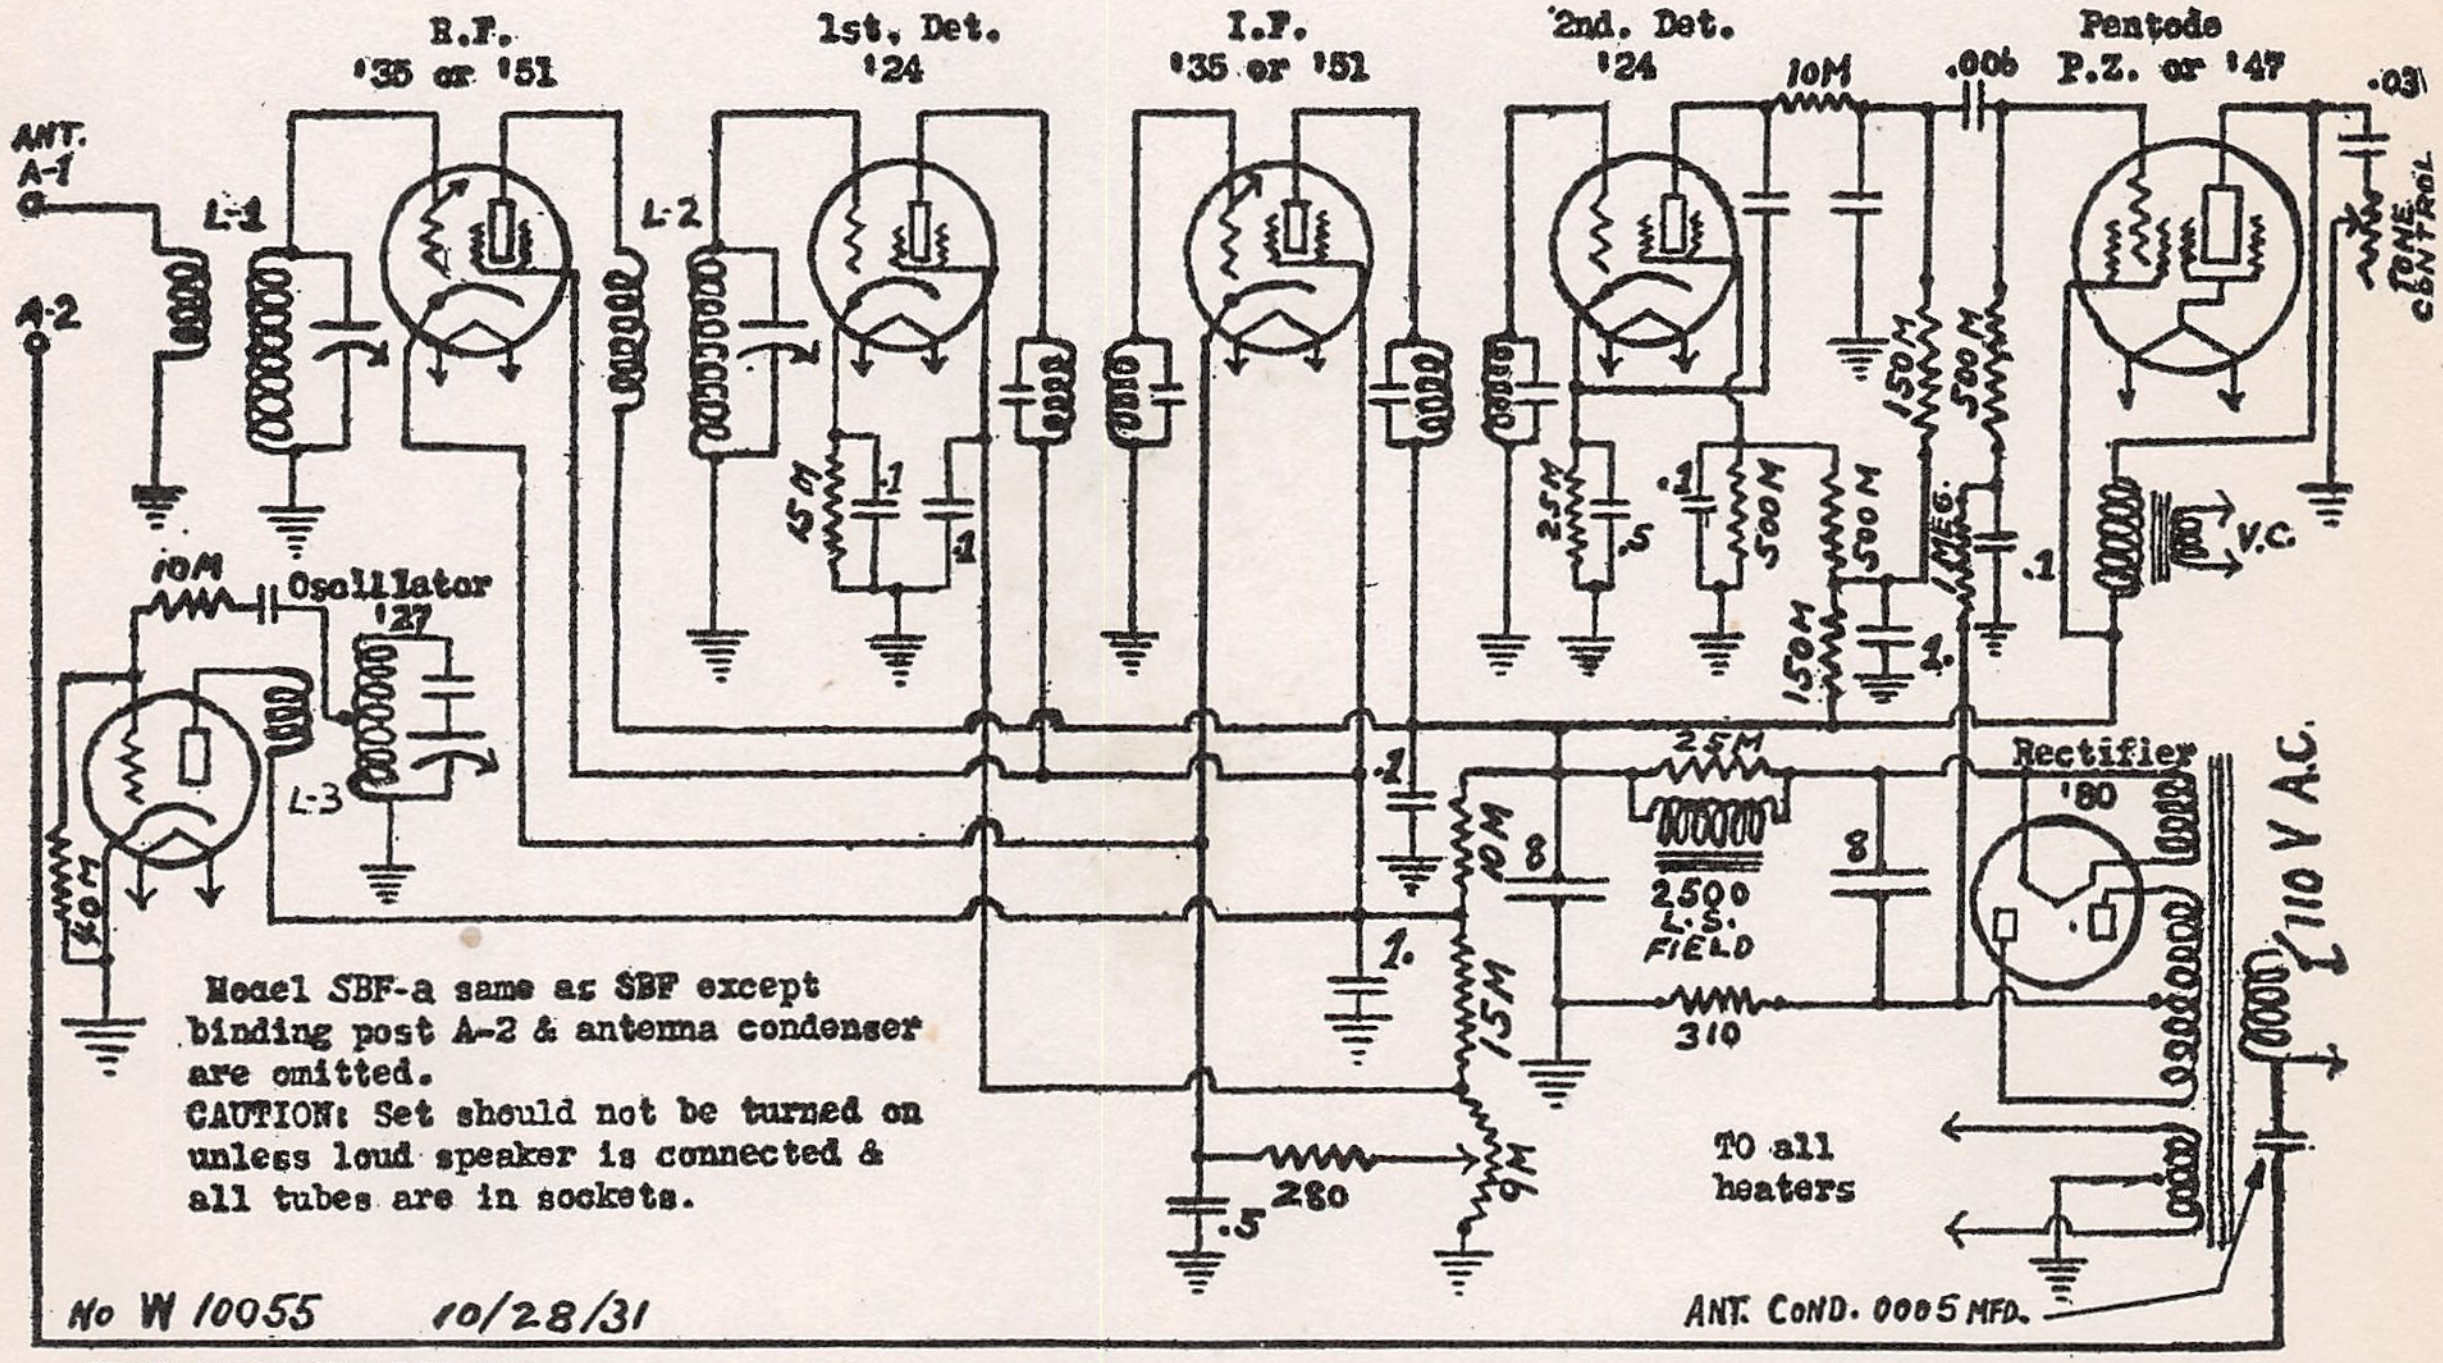
R.F. '35 or '51
1st. Det. '24
I.F. '35 or '51
2nd. Det. '24
10M
.006
Pentode P.Z. or '47
.03
TONE CONTROL
ANT. A-1
A-2
L-1
L-2
15M
.1
.1
25M
.5
.1
500M
500M
150M
500M
1 MEG.
.1
150M
1.
V.C.
10M
Oscillator '27
L-3
30M
.1
10M
8
25M
2500 L.S. FIELD
8
Rectifier '80
110 V A.C.
1.
15M
310
280
.5
9M
TO all heaters

Model SBF-a same as SBF except binding post A-2 & antenna condenser are omitted.
CAUTION: Set should not be turned on unless loud speaker is connected & all tubes are in sockets.

No W 10055 10/28/31

ANT. COND. .0005 MFD.

PEAK FREQUENCY-175 KC

TYPE S.B.F. SUPERHETERODYNE

WELLS - GARDNER & CO.

MODEL 052 Series
Schematic
Voltage

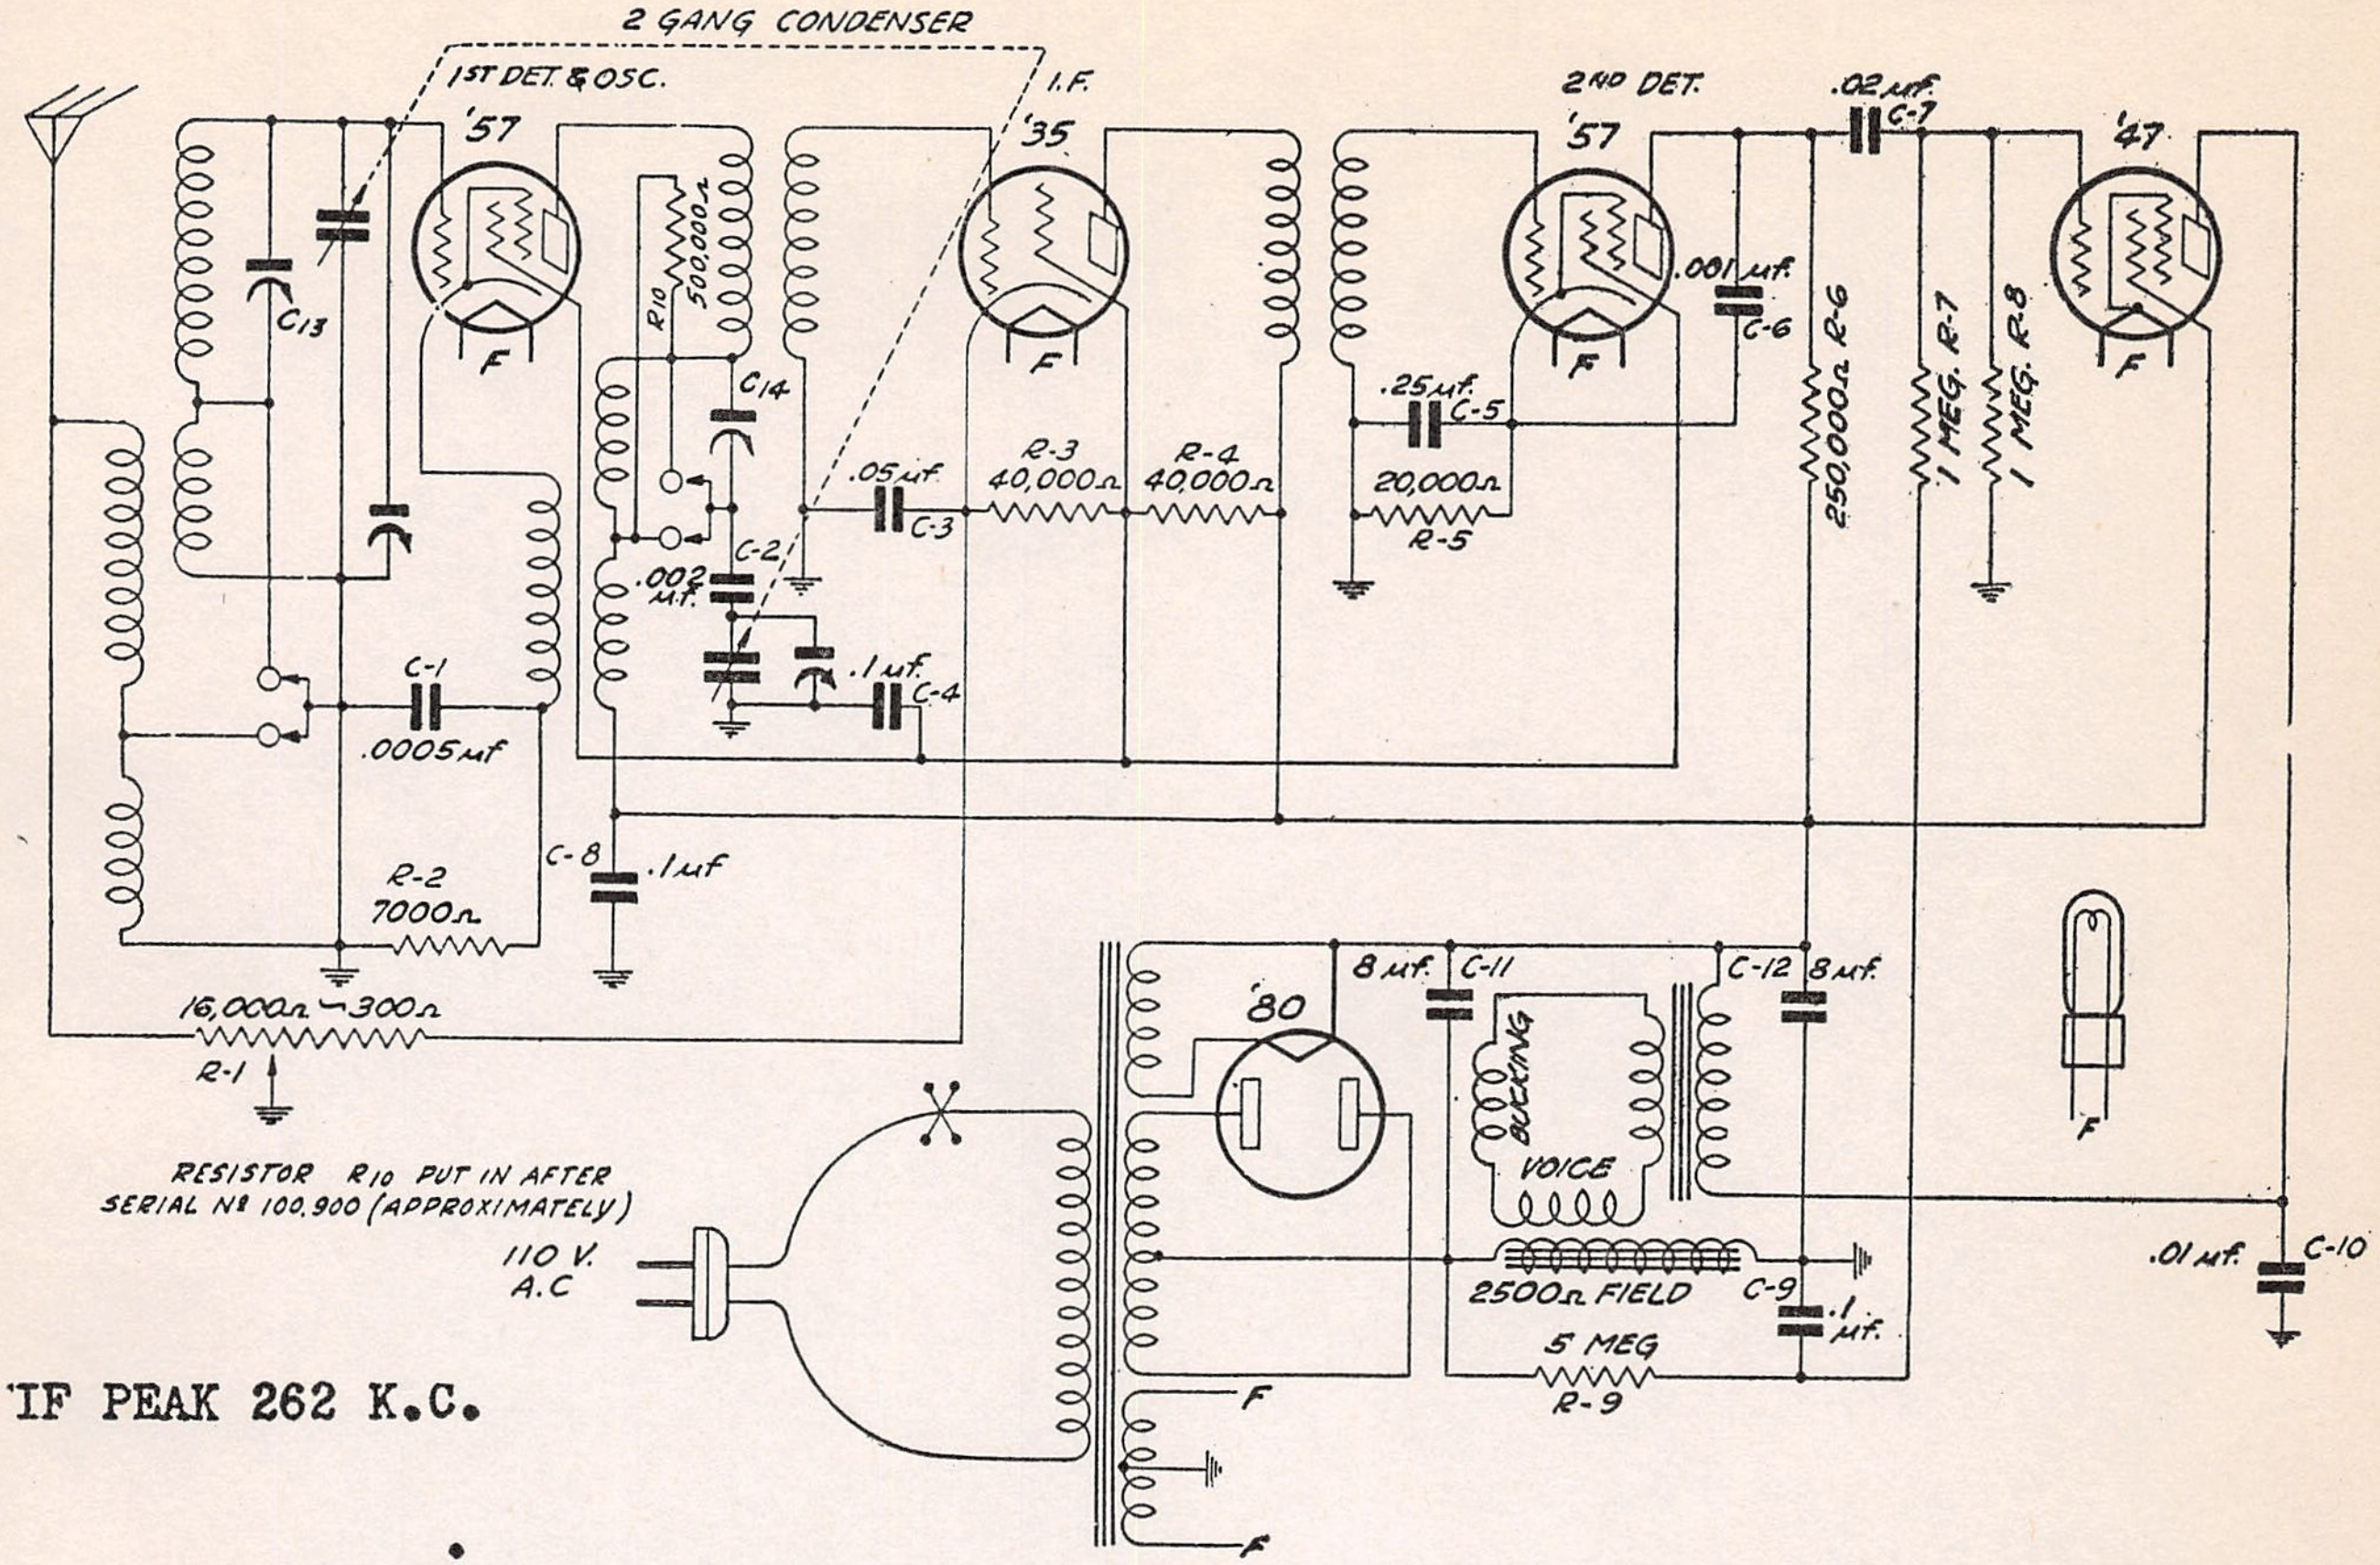
2 GANG CONDENSER
1ST DET. & OSC.
'57
I.F.
'35
2ND DET.
'57
.02 µf. C-7
'47
F
C13
R10 500,000 Ω
C14
C-2
.002 M.F.
.1 µf. C-4
.05 µf. C-3
R-3 40,000 Ω
R-4 40,000 Ω
.25 µf. C-5
20,000 Ω R-5
.001 µf. C-6
250,000 Ω R-6
1 MEG. R-7
1 MEG. R-8
C-1 .0005 µf
C-8 .1 µf
R-2 7000 Ω
16,000 Ω - 300 Ω
R-1
8 µf. C-11
'80
C-12 8 µf.
BUCKING
VOICE
2500 Ω FIELD
C-9 .1 µf.
5 MEG R-9
.01 µf. C-10
110 V. A.C
F
F

RESISTOR R10 PUT IN AFTER SERIAL No 100,900 (APPROXIMATELY)

IF PEAK 262 K.C.

Tube	Fil.	Plate to Cathode	Screen to Cathode	Grid to Cathode	Plate Crnt.
1st Det	2.15	225	90	4.	.5
IF Amp	2.15	230	90	3.2*	6.2
2nd Det	2.15	170	90	4.3	.2
Audio	2.15	225	240	14.**	23.
Rect.	4.75	620 volts AC from plate to plate			

* When read with cord and plug, ground the control grid.
** High resistance interferes with correct reading.

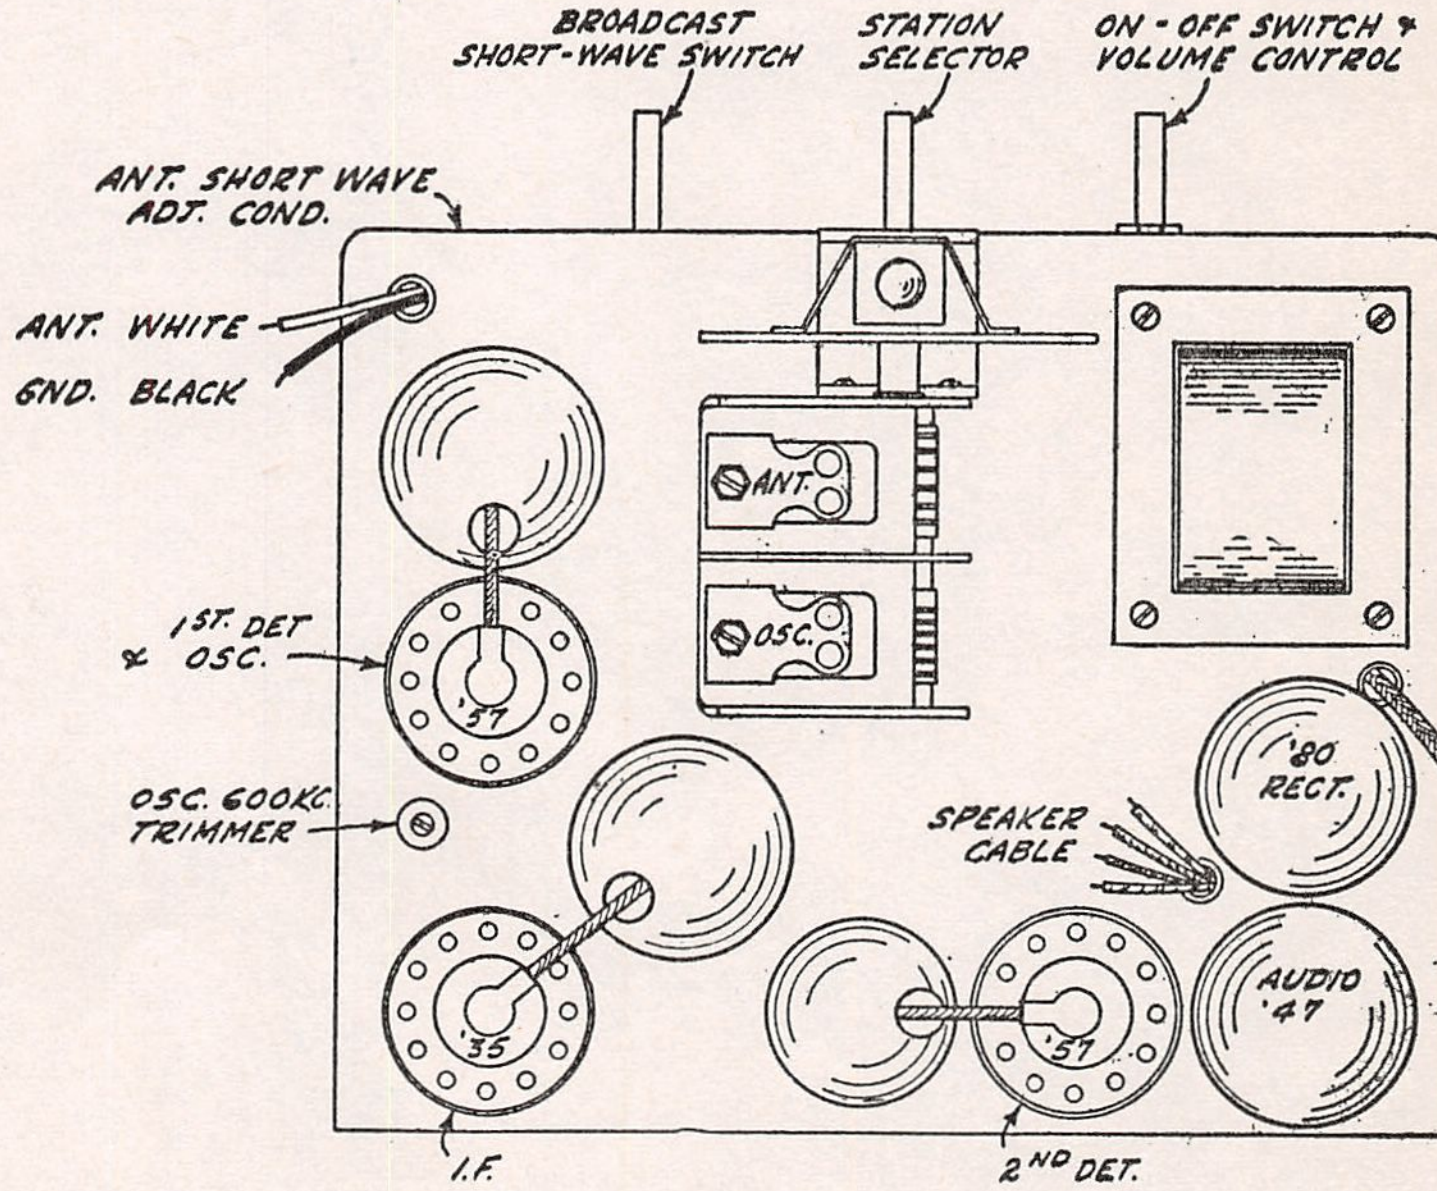
BROADCAST SHORT-WAVE SWITCH
STATION SELECTOR
ON - OFF SWITCH & VOLUME CONTROL
ANT. SHORT WAVE ADJ. COND.
ANT. WHITE
GND. BLACK
ANT.
OSC.
1ST. DET & OSC.
'57
OSC. 600KC. TRIMMER
'80 RECT.
A.C. SUPPLY CORD
SPEAKER CABLE
AUDIO '47
'35
I.F.
'57
2ND DET.

MODEL Jewell
198,199
2nd Type
MODEL Jewell 209

WESTON ELECTRICAL INSTRUM'T CORP.

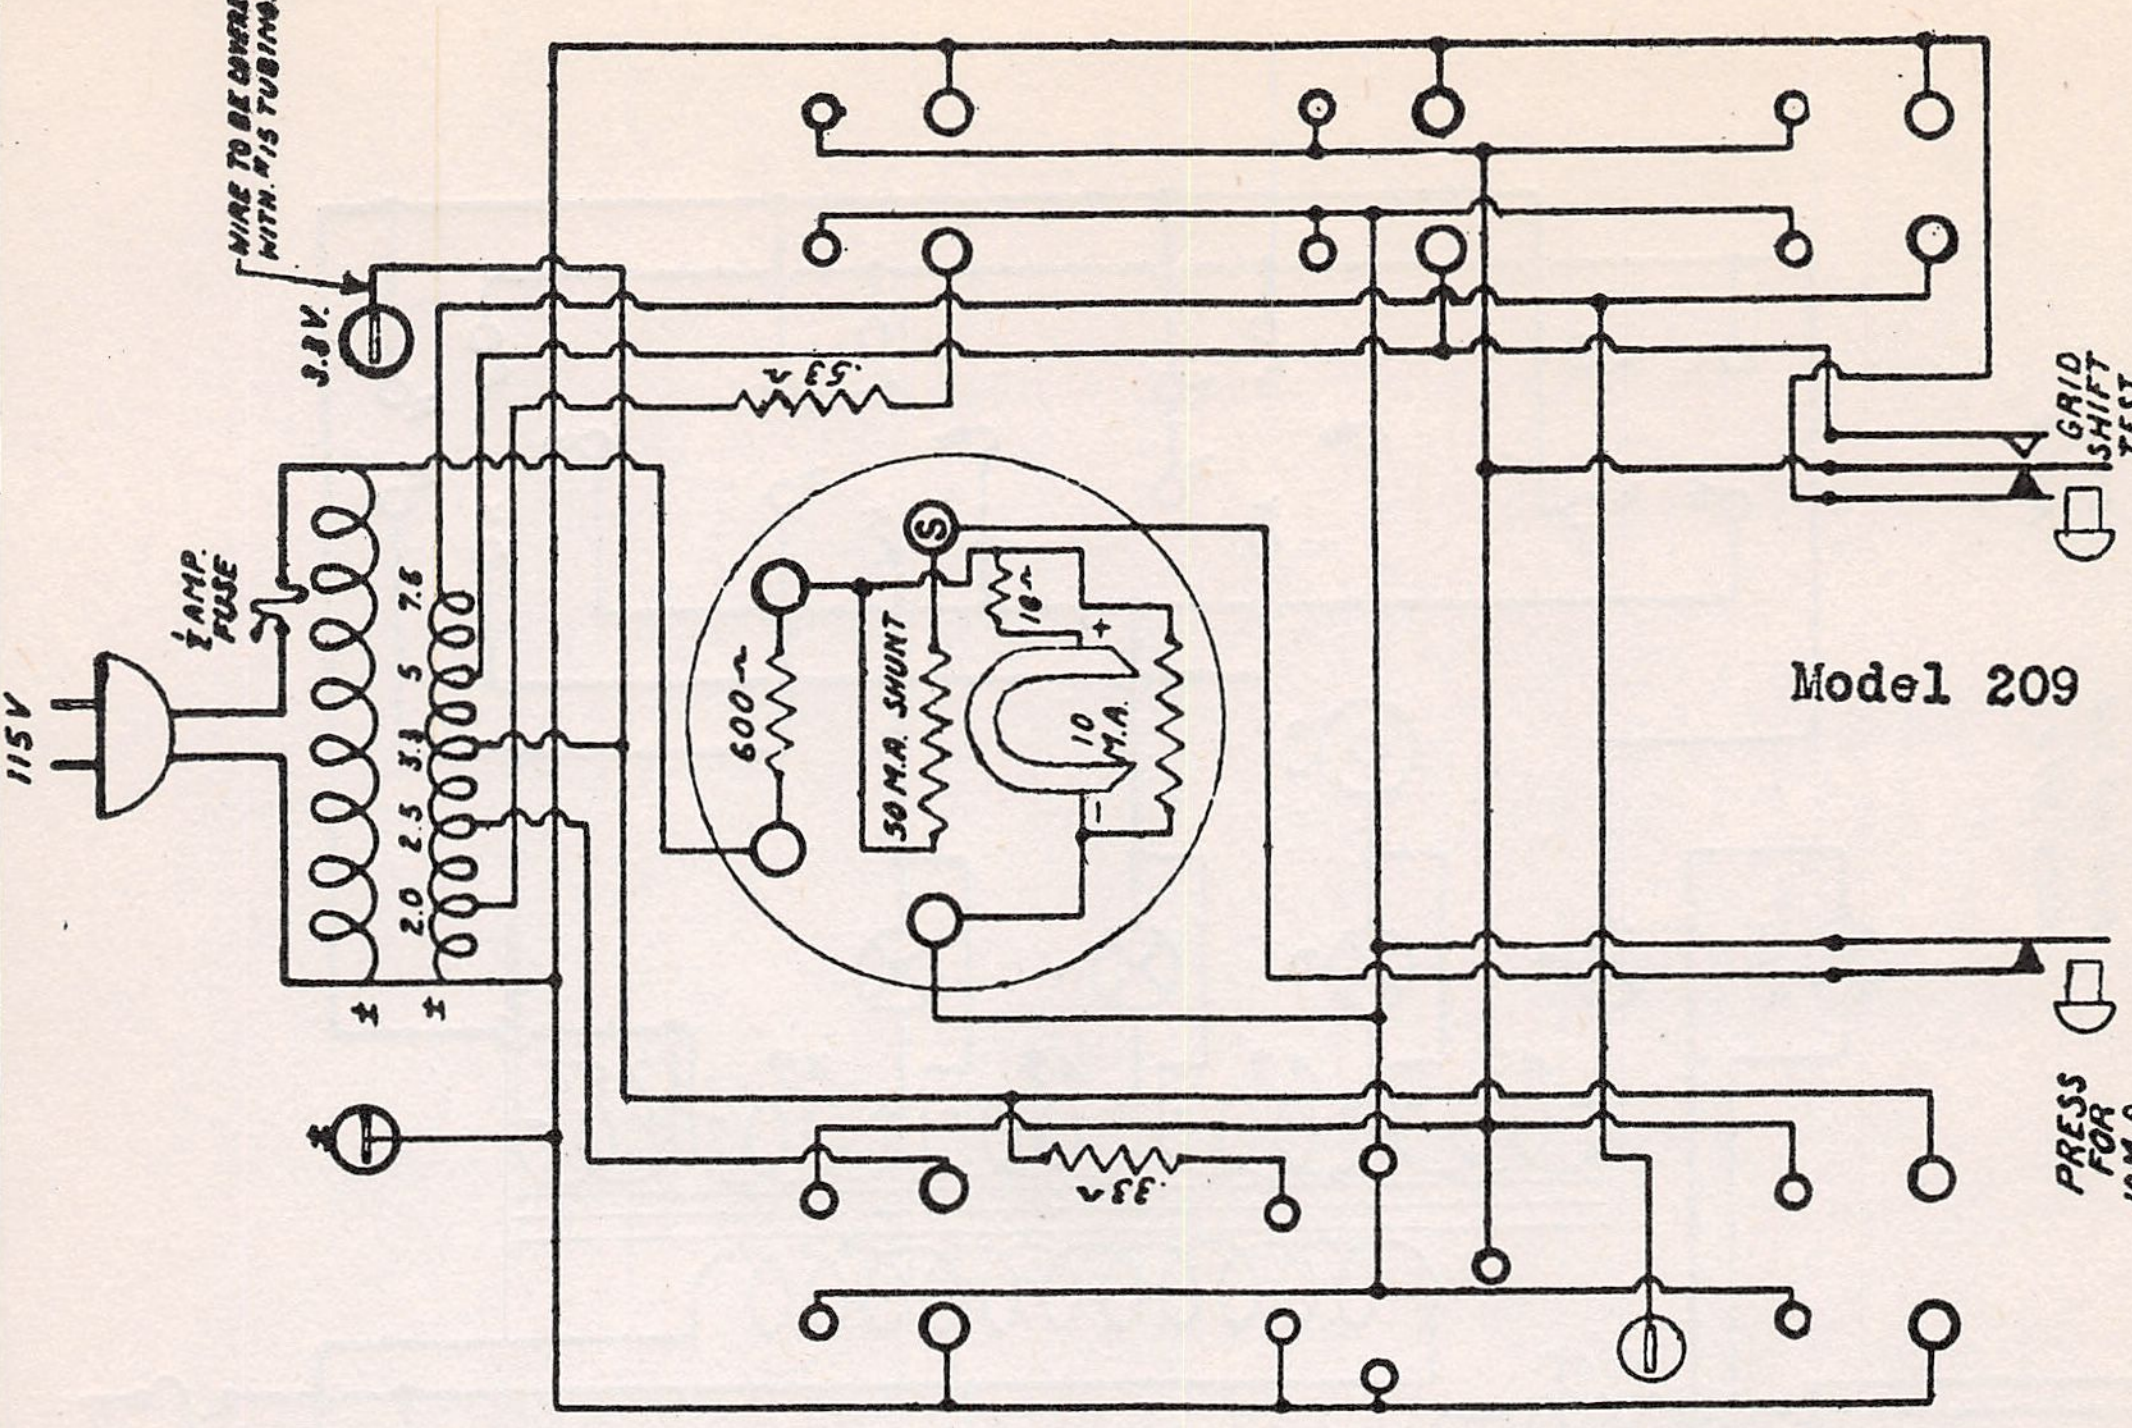
WIRE TO BE COVERED WITH #15 TUBING.
3.8V.
53 Ω
¼ AMP. FUSE
115 V
7.5
5
3.3
2.5
2.0
#
#
S
600 Ω
50 M.A. SHUNT
18 Ω
+
-
10 M.A.
33 Ω
GRID SHIFT TEST
PRESS FOR 10 M.A.

Model 209

SCHEMATIC

LOOKING AT BACK OF CASE

THIS DIAGRAM APPLIES TO ALL PAT. 209 WITH SERIAL No 6371 AND OVER
FOR PAT. 209 WITH SERIAL No 4972 TO SERIAL No. 6371 SEE W.D. 209 ISSUE 7.
FOR PAT. 209 WITH SERIAL No. UNDER 4972 SEE W.D. 209 ISSUE 5.

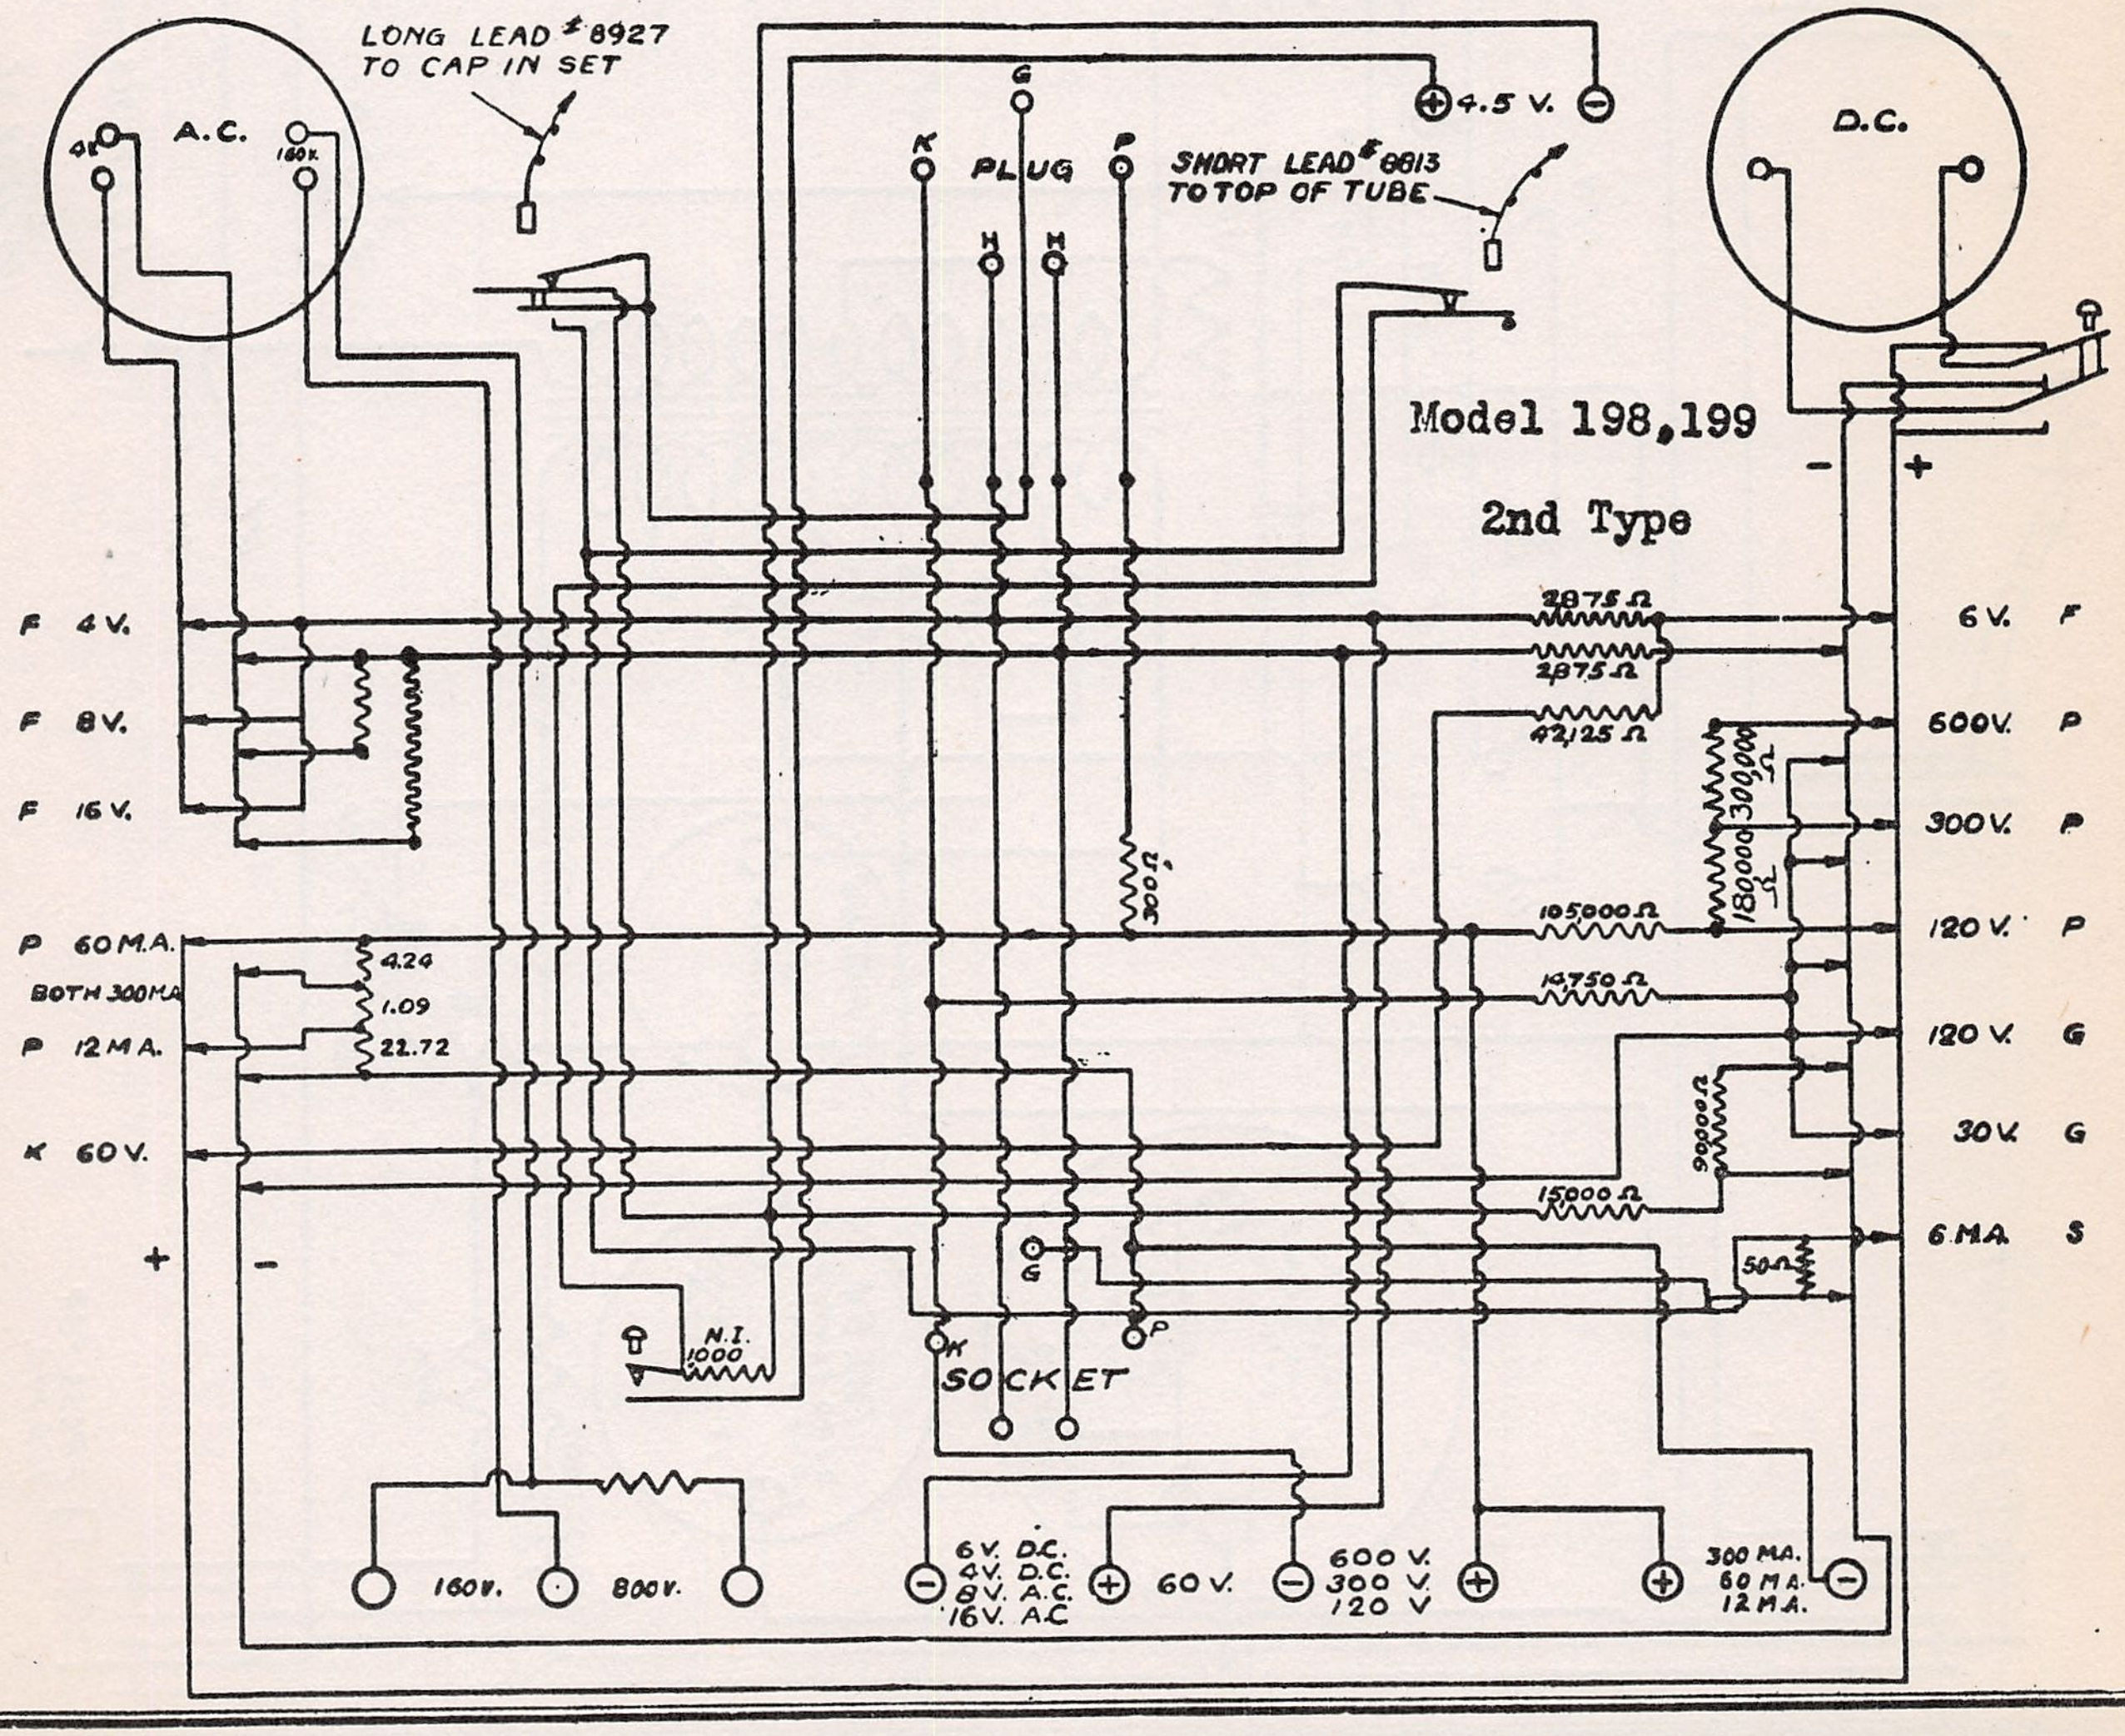
A.C.
4V.
160V.
LONG LEAD #8927 TO CAP IN SET
K
G
P
PLUG
H
H
+ 4.5 V. -
SHORT LEAD #8813 TO TOP OF TUBE
D.C.
-
+
F 4V.
F 8V.
F 16V.
P 60 M.A.
BOTH 300 MA
P 12 M.A.
K 60V.
+
-
4.24
1.09
22.72
300 Ω
2875 Ω
2875 Ω
42,125 Ω
300,000 Ω
180000 Ω
105,000 Ω
14,750 Ω
90000 Ω
15,000 Ω
50 Ω
6 V. F
600V. P
300V. P
120 V. P
120 V. G
30V. G
6 MA. S
N.I. 1000
G
K
P
SOCKET
160V.
800V.
6V. D.C.
4V. D.C.
8V. A.C.
16V. A.C.
60 V.
600 V.
300 V.
120 V
300 MA.
60 MA.
12 MA.

Model 198,199

2nd Type

MODEL Jewell 214

WESTON ELECTRICAL INSTRUM'T CORP.

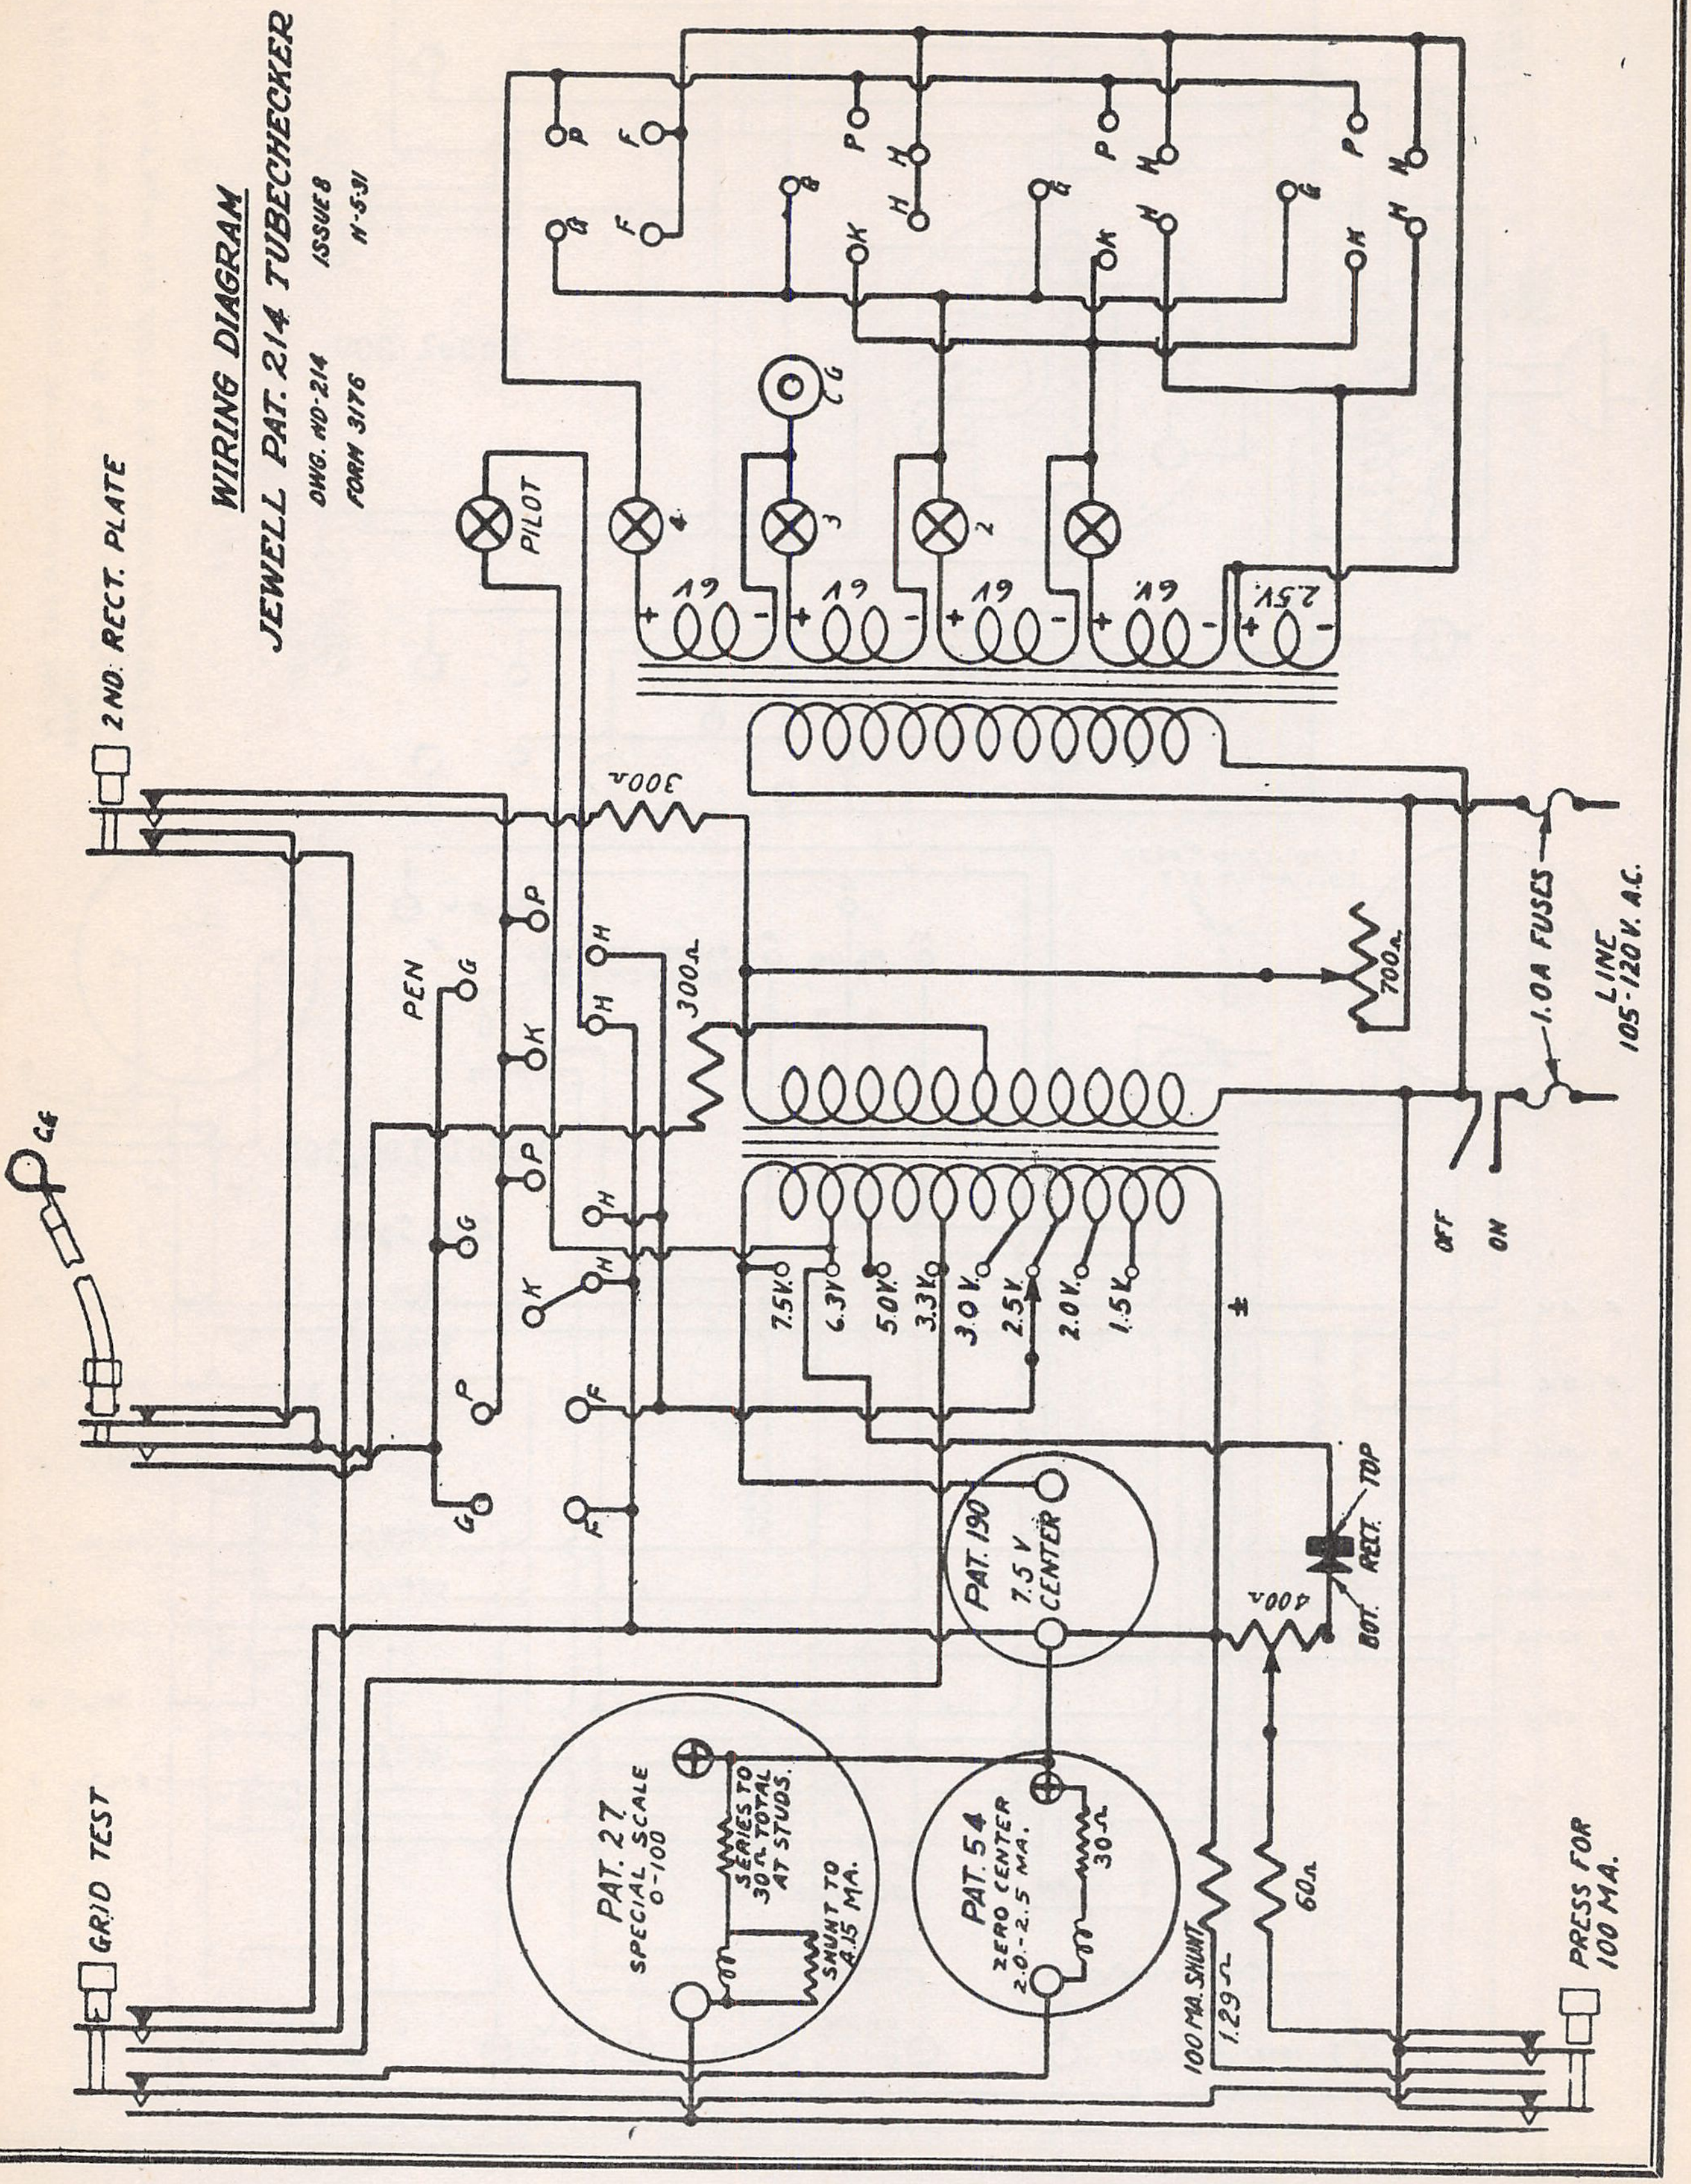

WIRING DIAGRAM
JEWELL PAT. 214 TUBECHECKER
DWG. ND-214 ISSUE 8
FORM 3176 N-5-31

2 ND. RECT. PLATE
PILOT
C.G.
4
3
2
1
6V.
6V.
6V.
6V.
2.5V.
300Ω
300Ω
700Ω
1.0A FUSES
LINE 105-120 V. A.C.
OFF
ON
PEN
P
K
G
H
F
7.5V.
6.3V.
5.0V.
3.3V.
3.0V.
2.5V.
2.0V.
1.5V.
PAT. 190 7.5 V CENTER
TOP
RECT.
BOT.
400Ω
PAT. 27 SPECIAL SCALE 0-100
SERIES TO 30Ω. TOTAL AT STUDS.
SHUNT TO 4.15 MA.
PAT. 54 ZERO CENTER 2.0-2.5 MA.
30Ω
100 MA. SHUNT 1.29Ω
60Ω
GRID TEST
PRESS FOR 100 MA.

MODEL Jewell 444

WESTON ELECTRICAL INSTRUM'T CORP.

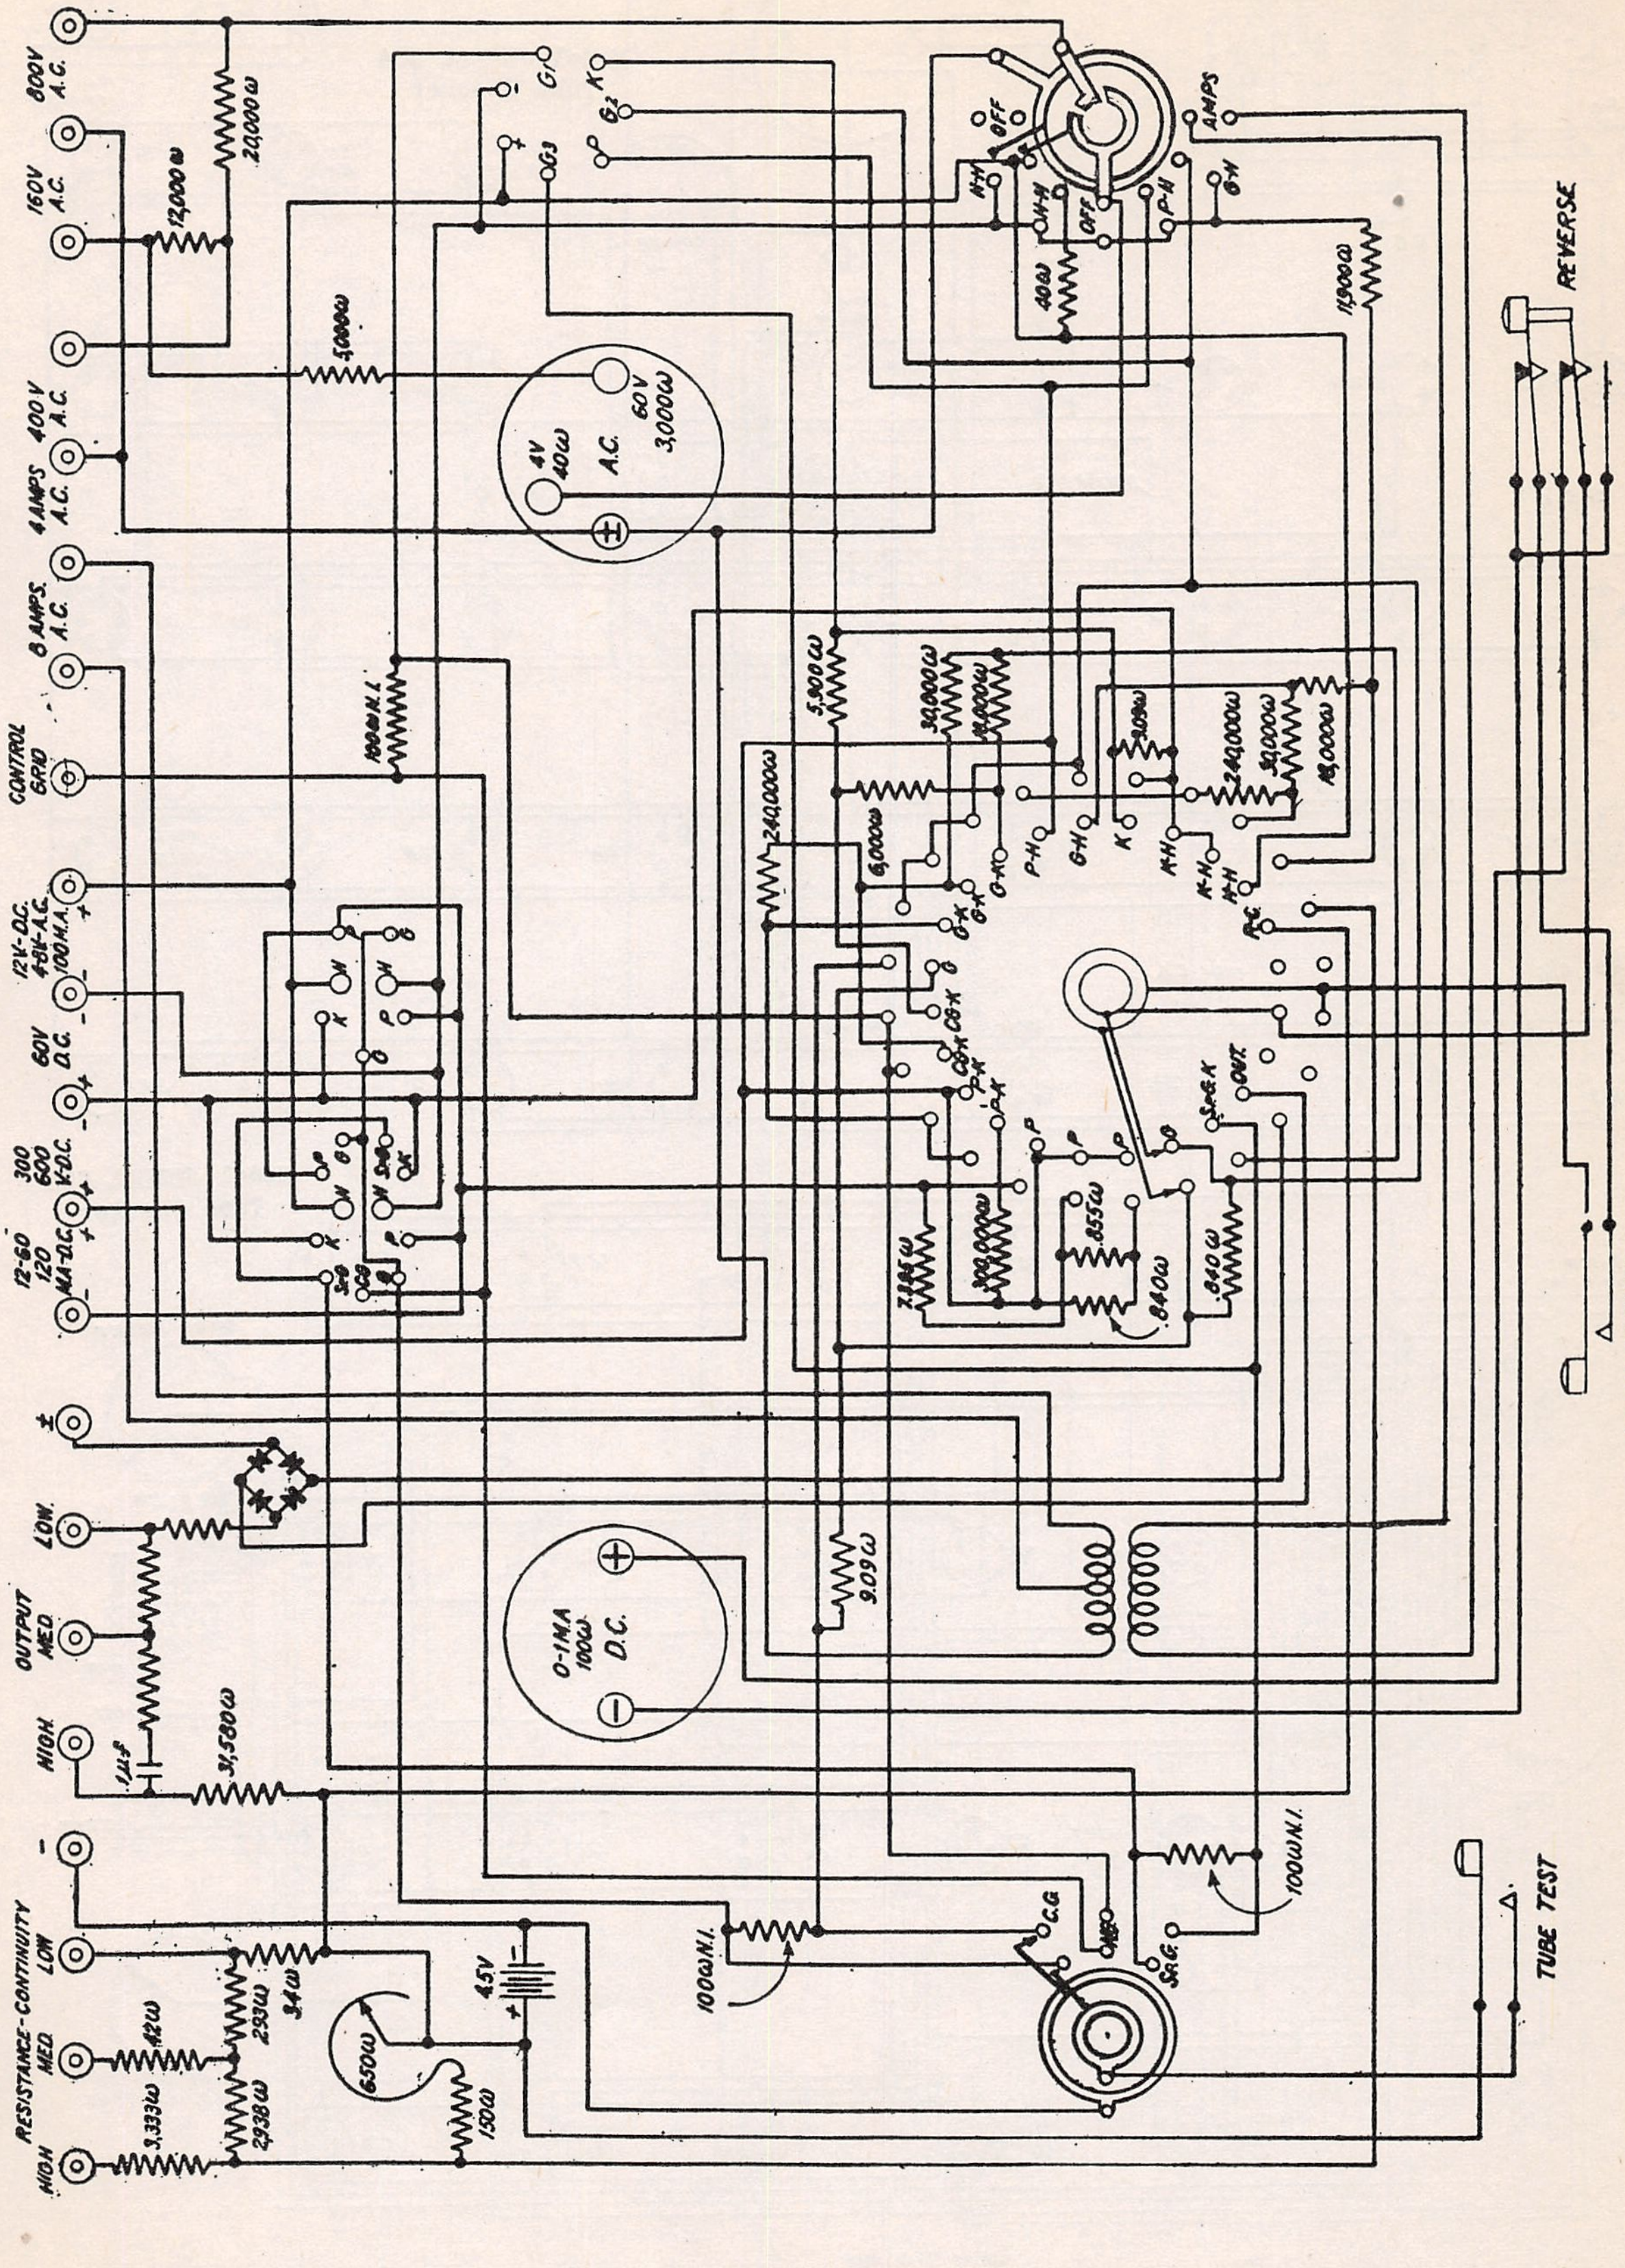
800V A.C.
160V A.C.
400V A.C.
4 AMPS. A.C.
8 AMPS. A.C.
CONTROL GRID
12V-D.C. 48V-A.C. 100 M.A. +
60V D.C.
300 600 V-D.C.
12-60 120 MA-D.C.
±
LOW
OUTPUT MED
HIGH
–
RESISTANCE-CONTINUITY LOW MED HIGH
20,000Ω
12,000Ω
5,000Ω
4V 40Ω A.C. 60V 3,000Ω
100Ω N.I.
G1
G3
G2
K
P
AMPS
OFF
H-H
P-H
G-H
40Ω
11,900Ω
REVERSE
5,900Ω
30,000Ω
18,000Ω
3.09Ω
240,000Ω
30,000Ω
18,000Ω
6,000Ω
G-K
G-H
P-H
K
H-H
P-K
CG-K
SG-K
OUT
7.85Ω
300,000Ω
.855Ω
.84Ω
.840Ω
PRESS TO READ
9.09Ω
0-1 MA 100Ω D.C.
31,580Ω
1μf
100Ω N.I.
C.G.
S.G.
4.5V
650Ω
150Ω
3,333Ω
42Ω
293Ω
34Ω
2938Ω
TUBE TEST

WESTON ELECTRICAL INSTRUM'T CORP.

MODEL Jewell 533
MODEL Jewell 534

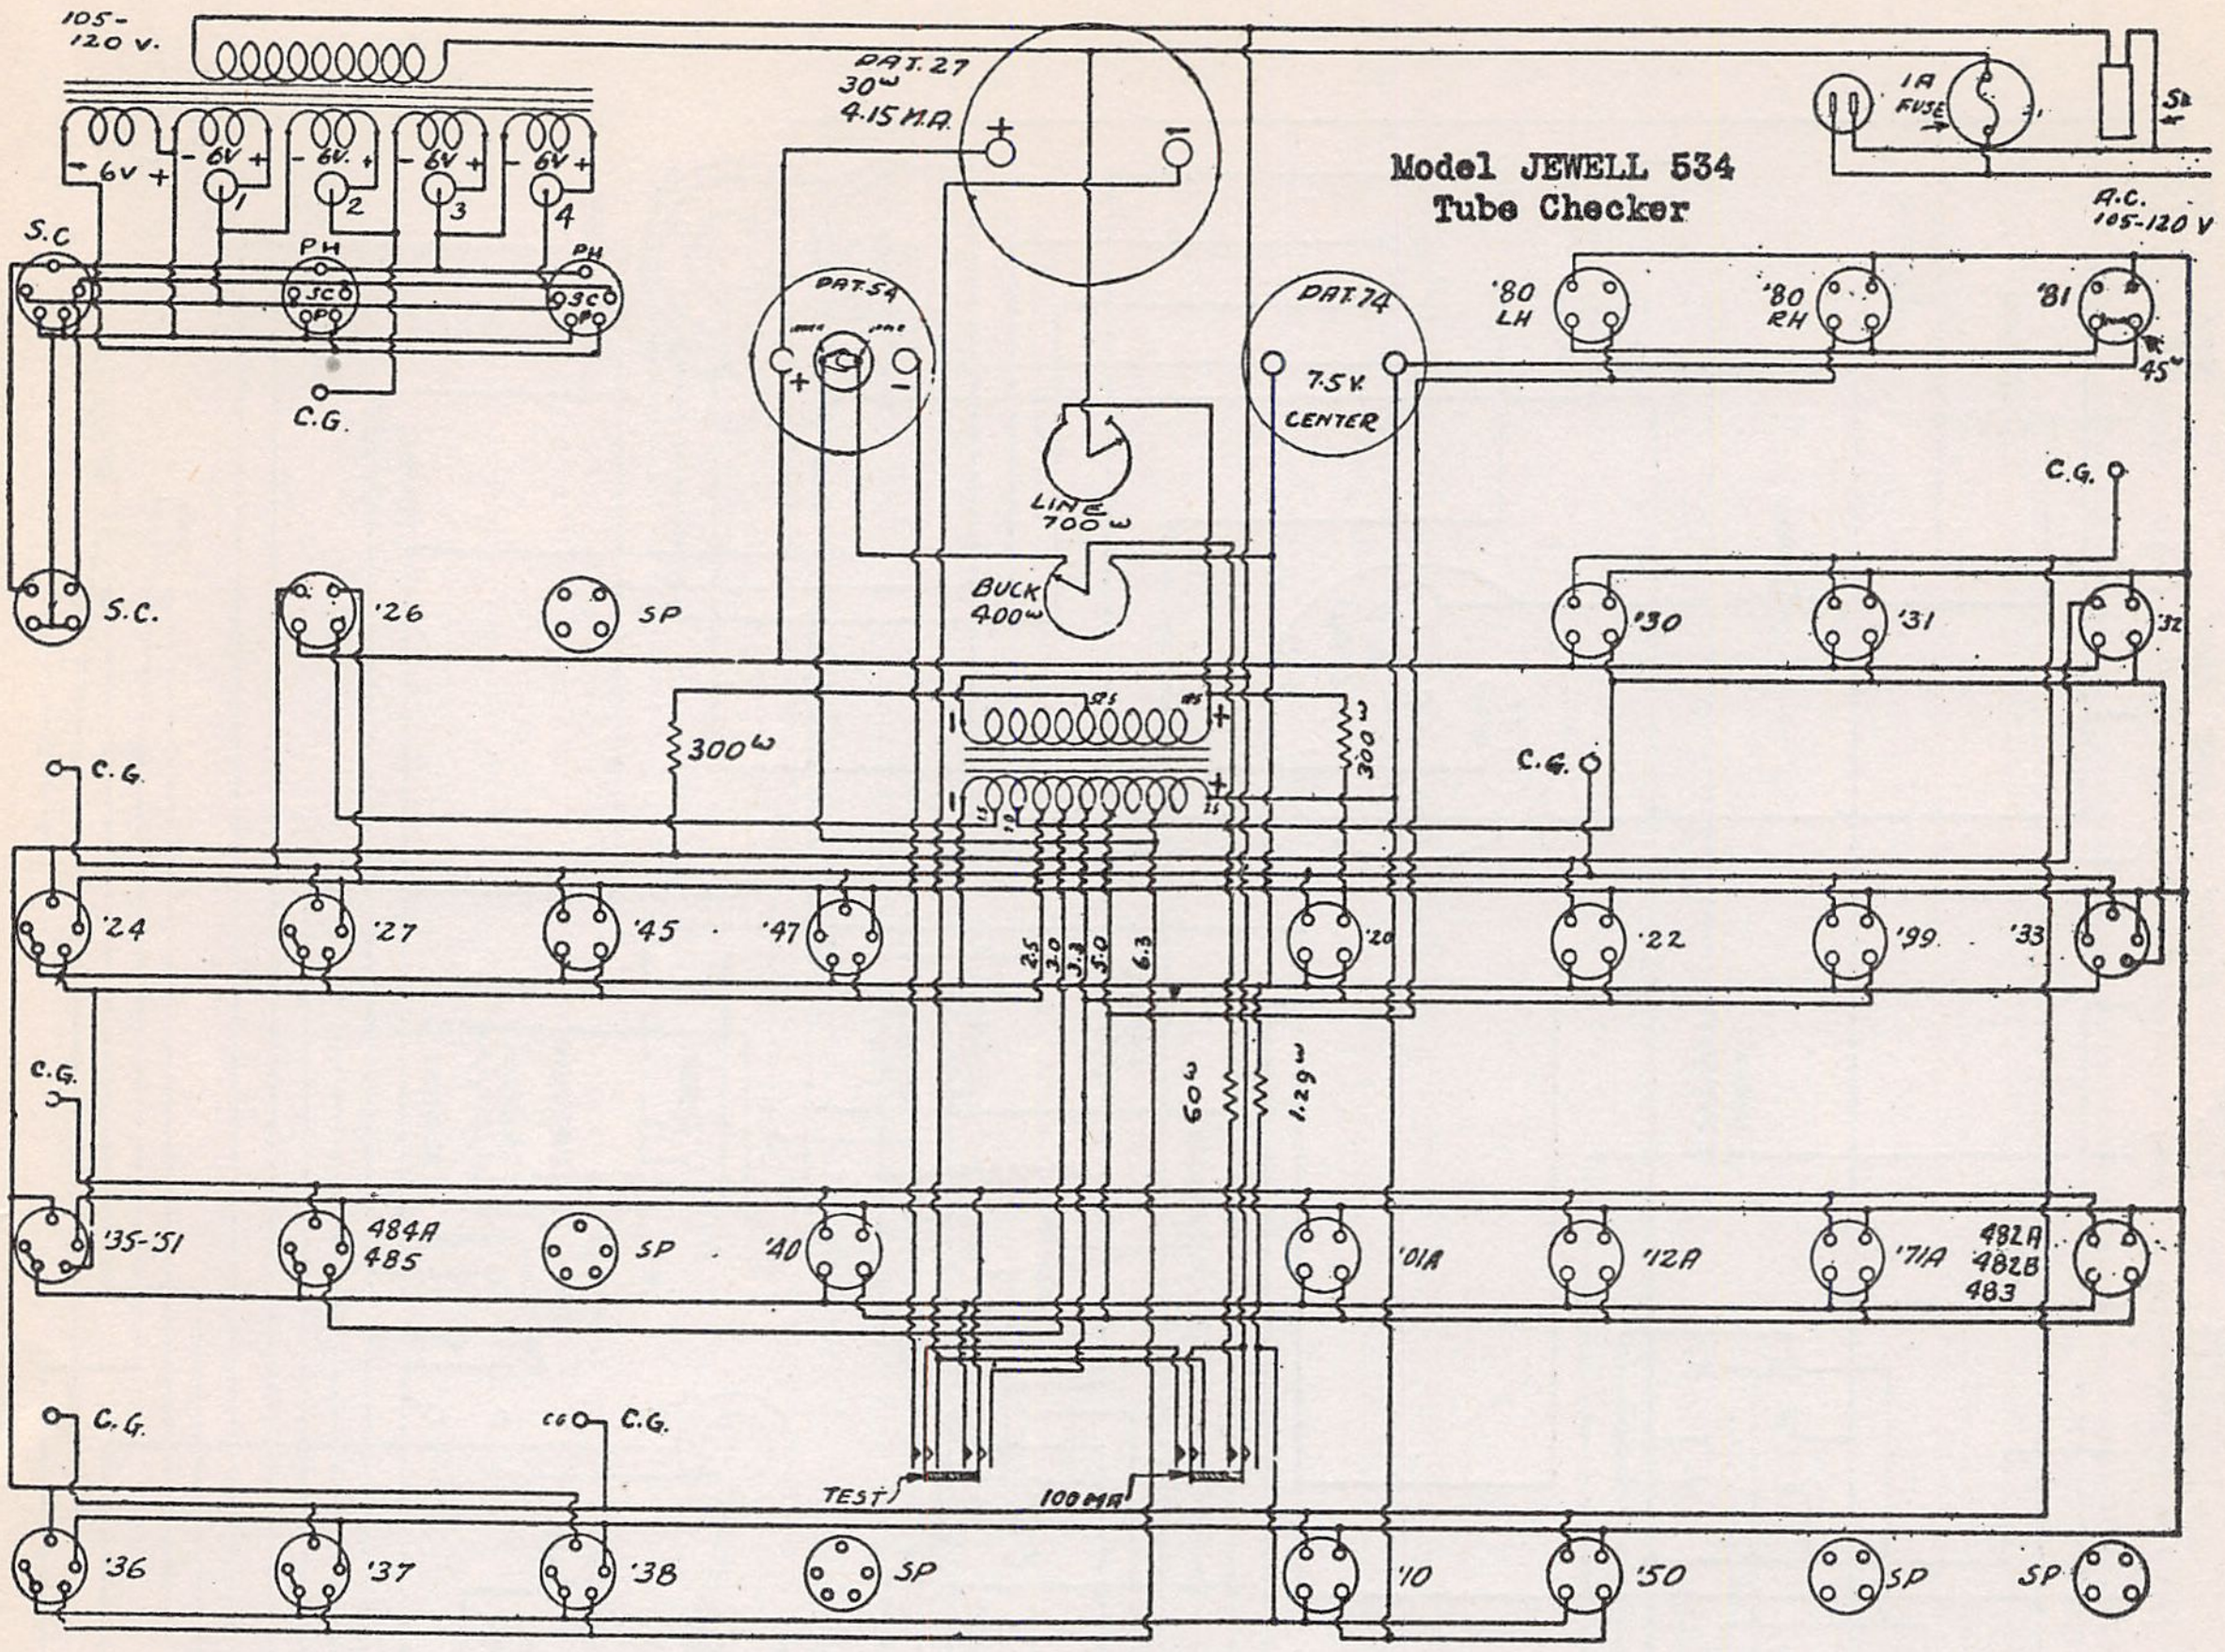

Model JEWELL 534 Tube Checker

105-120 V.
-6V+
-6V+
1
-6V+
2
-6V+
3
-6V+
4
S.C
PH
JC
OPO
PH
93C
OPO
C.G.
PAT. 27
30ω
4.15 M.A.
+
PAT. 54
+
-
PAT. 74
7.5 V.
CENTER
LINE 700ω
BUCK 400ω
1A FUSE
S2
A.C. 105-120 V
'80 LH
'80 RH
'81
45ω
C.G.
S.C.
'26
SP
'30
'31
'32
300ω
300ω
C.G.
C.G.
'24
'27
'45
'47
2.5
3.0
3.3
5.0
6.3
'20
'22
'99
'33
C.G.
60ω
1.29ω
'35-'51
484A
485
SP
'40
'01A
'12A
'71A
482A
482B
483
C.G.
C.G.
C.G.
TEST
100 MA
'36
'37
'38
SP
'10
'50
SP
SP

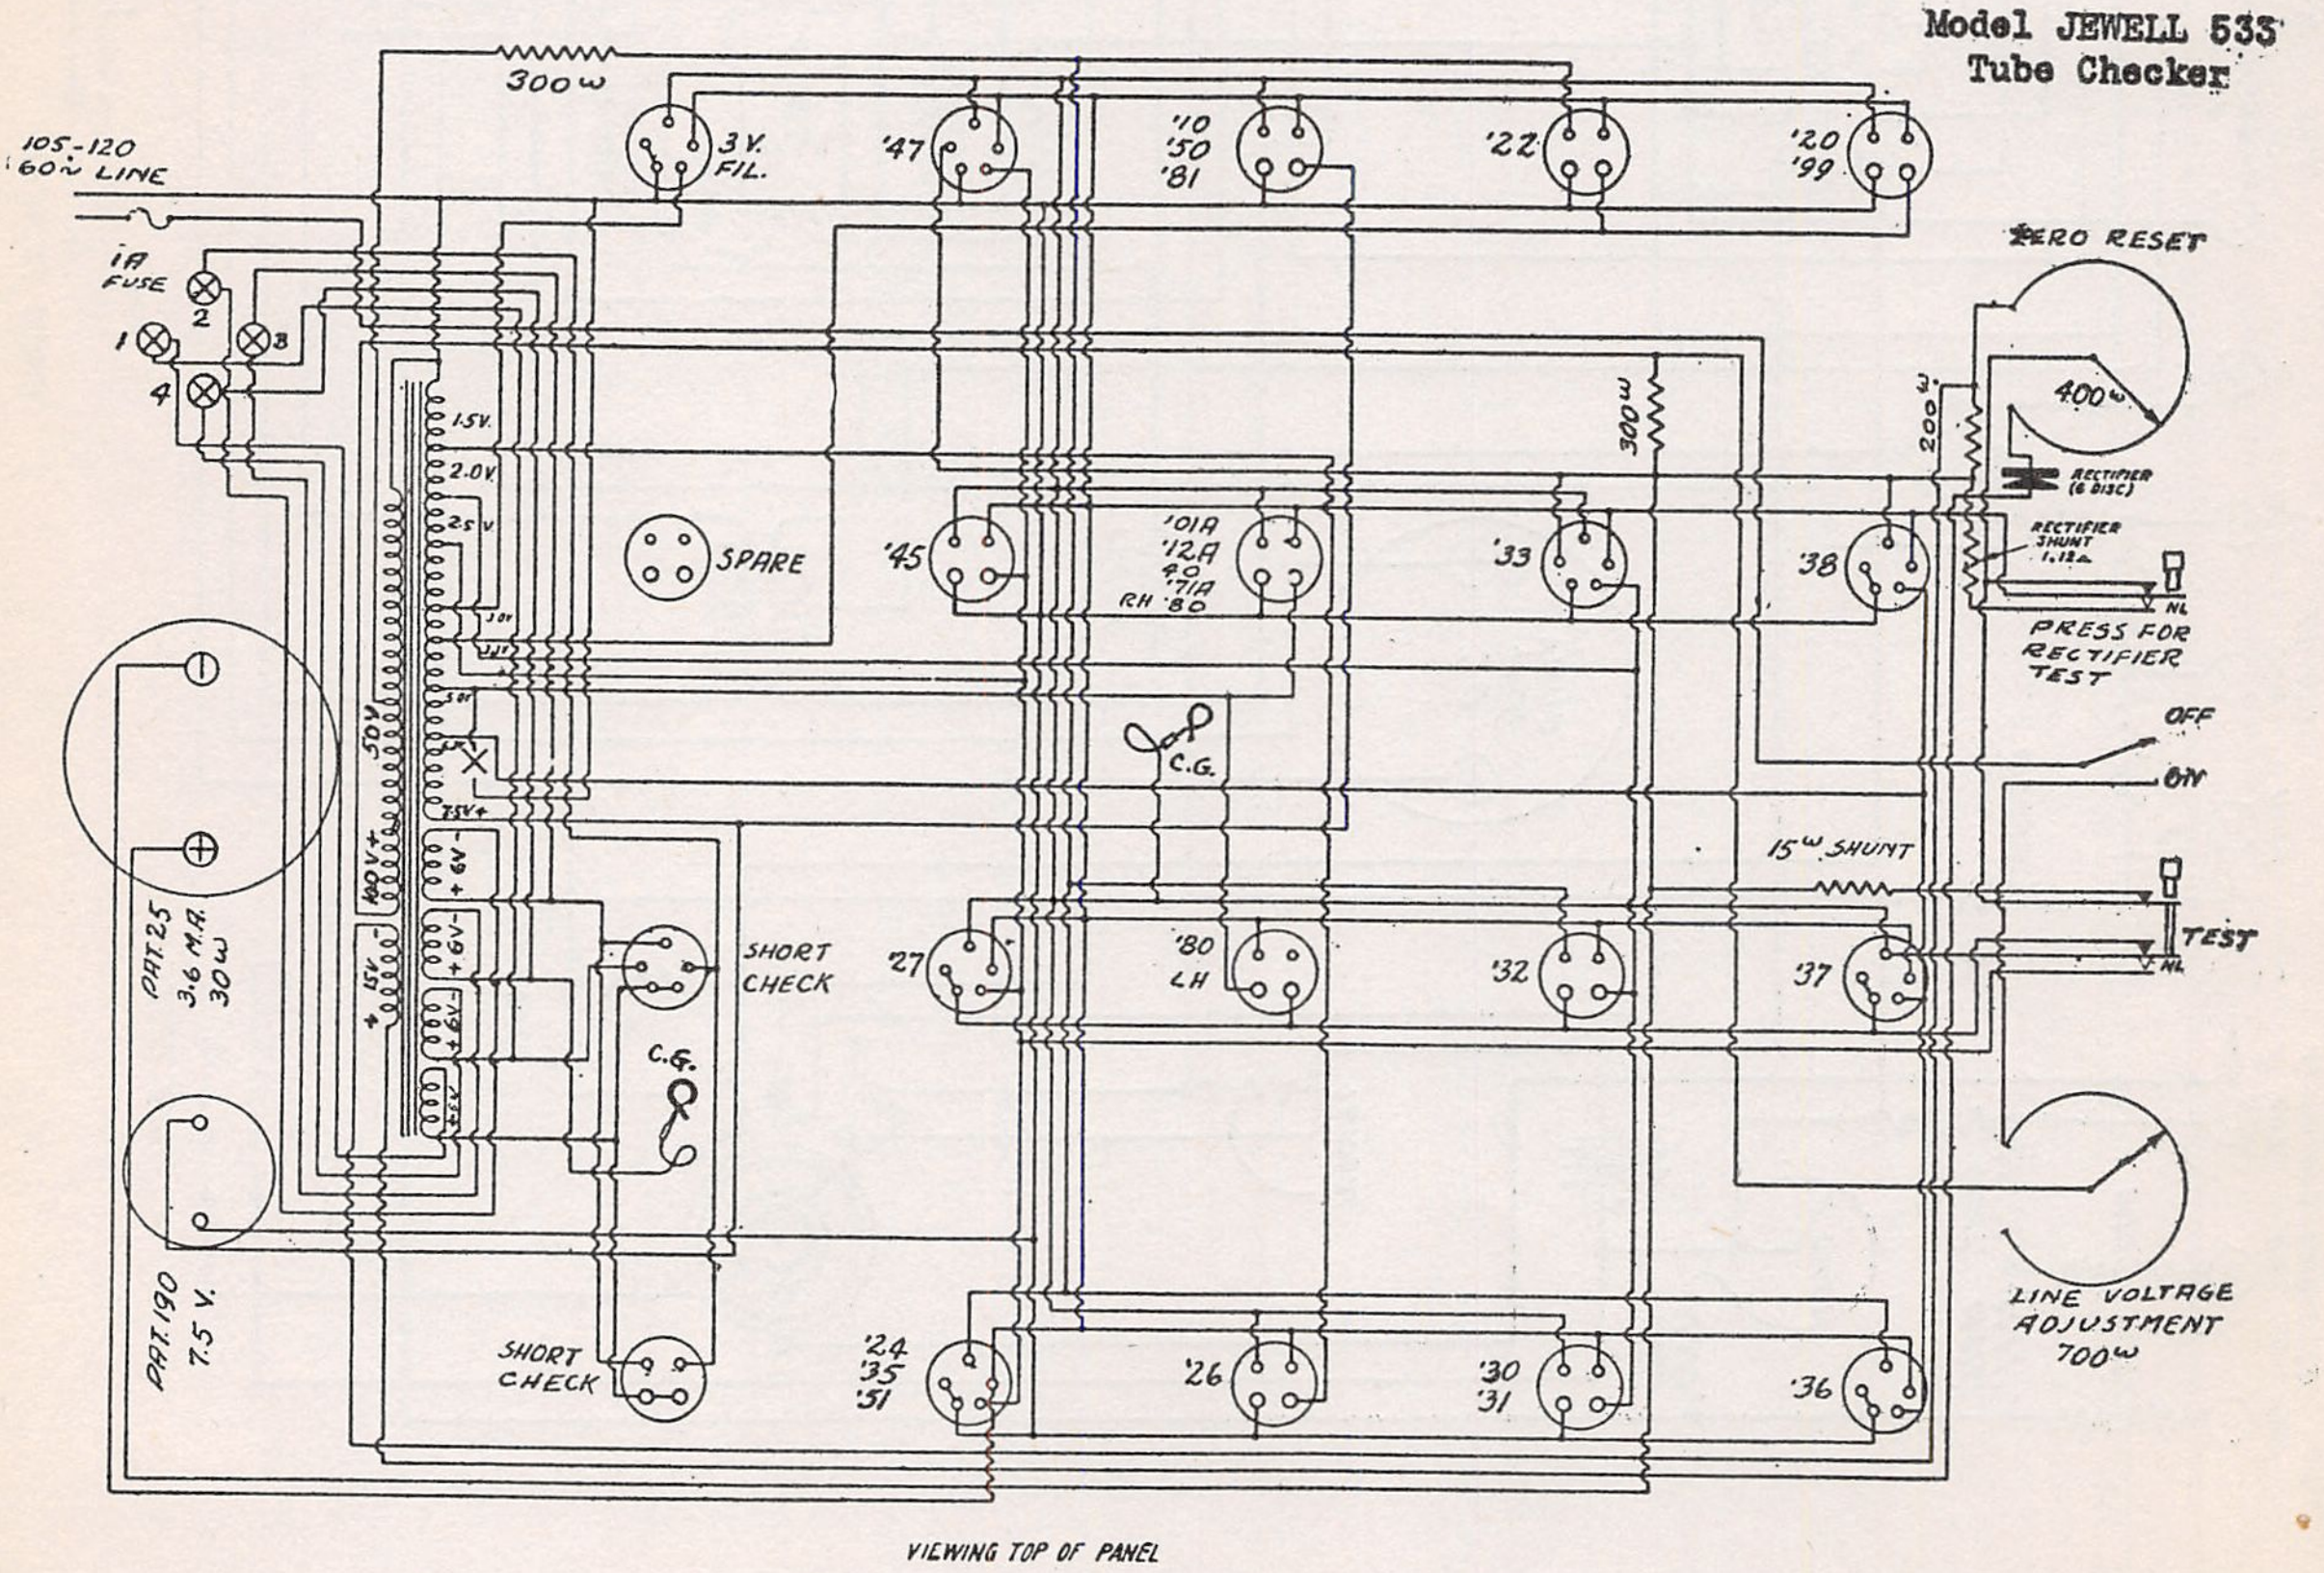

Model JEWELL 533 Tube Checker

300ω
105-120 60~ LINE
1A FUSE
1
2
3
4
3V. FIL.
'47
'10
'50
'81
'22
'20
'99
ZERO RESET
400ω
300ω
200ω
RECTIFIER (6 DISC)
RECTIFIER SHUNT 1.12Ω
1.5V.
2.0V.
2.5V.
SPARE
'45
'01A
'12A
4.0
'71A
RH '80
'33
'38
NL
PRESS FOR RECTIFIER TEST
50V
C.G.
OFF
ON
15ω SHUNT
TEST
NL
PAT. 25
3.6 M.A.
30ω
15V
+6V
SHORT CHECK
'27
'80 LH
'32
'37
C.G.
LINE VOLTAGE ADJUSTMENT 700ω
PAT. 190
7.5 V.
SHORT CHECK
'24
'35
'51
'26
'30
'31
'36
VIEWING TOP OF PANEL

WESTON ELECTRICAL INSTRUM'T CORP.

MODEL Jewell
538

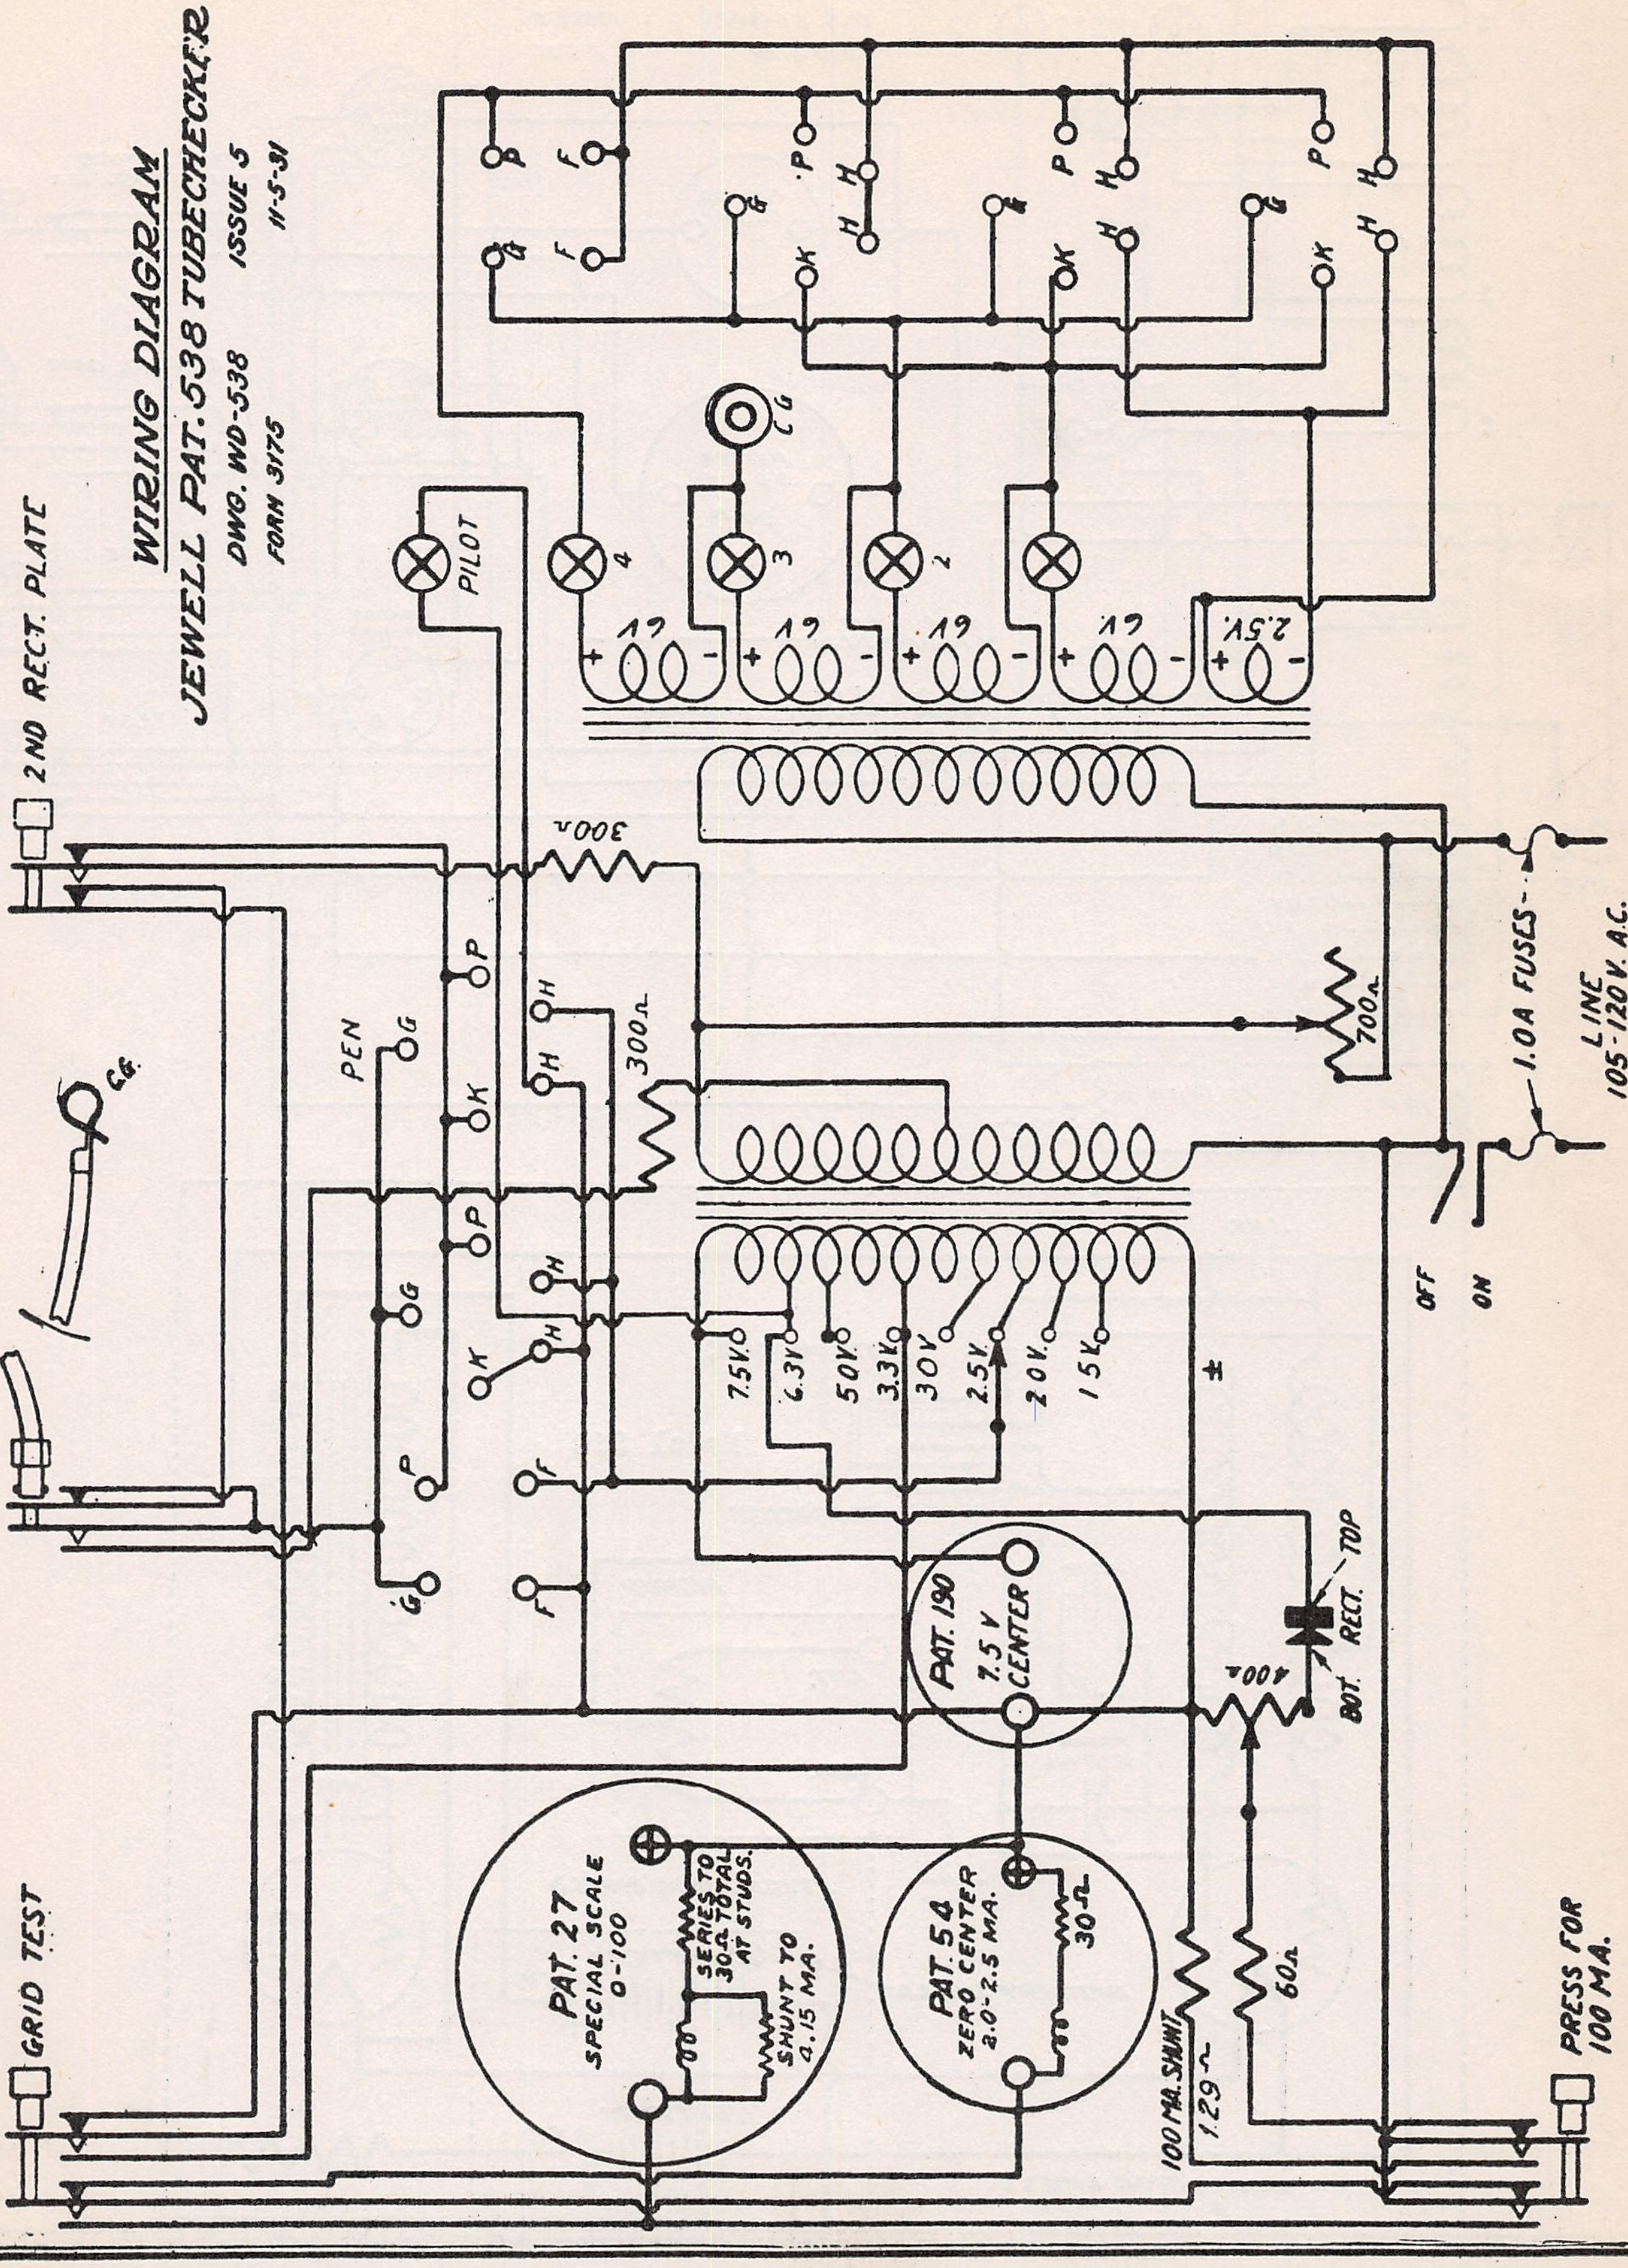

WIRING DIAGRAM
JEWELL PAT. 538 TUBECHECKER
DWG. WD-538 ISSUE 5 11-5-31
FORM 3175

2 ND RECT. PLATE
C.G.
GRID TEST
PEN
G
P
K
H
F
PILOT
4
3
2
1
C.G.
6V
2.5V
300Ω
300Ω
700Ω
1.0A FUSES
LINE
105-120 V. A.C.
OFF
ON
7.5V
6.3V
5.0V
3.3V
3.0V
2.5V
2.0V
1.5V
±
PAT. 190
7.5 V
CENTER
TOP
RECT.
BOT.
400Ω
60Ω
100 MA. SHUNT
1.29Ω
PAT. 27
SPECIAL SCALE
0-100
SERIES TO 30Ω TOTAL AT STUDS.
SHUNT TO 0.15 MA.
PAT. 54
ZERO CENTER
2.0-2.5 MA.
30Ω
PRESS FOR
100 MA.

WESTON ELECTRICAL INSTRUM'T CORP.

MODEL Jewell
540
MODEL Jewell
560

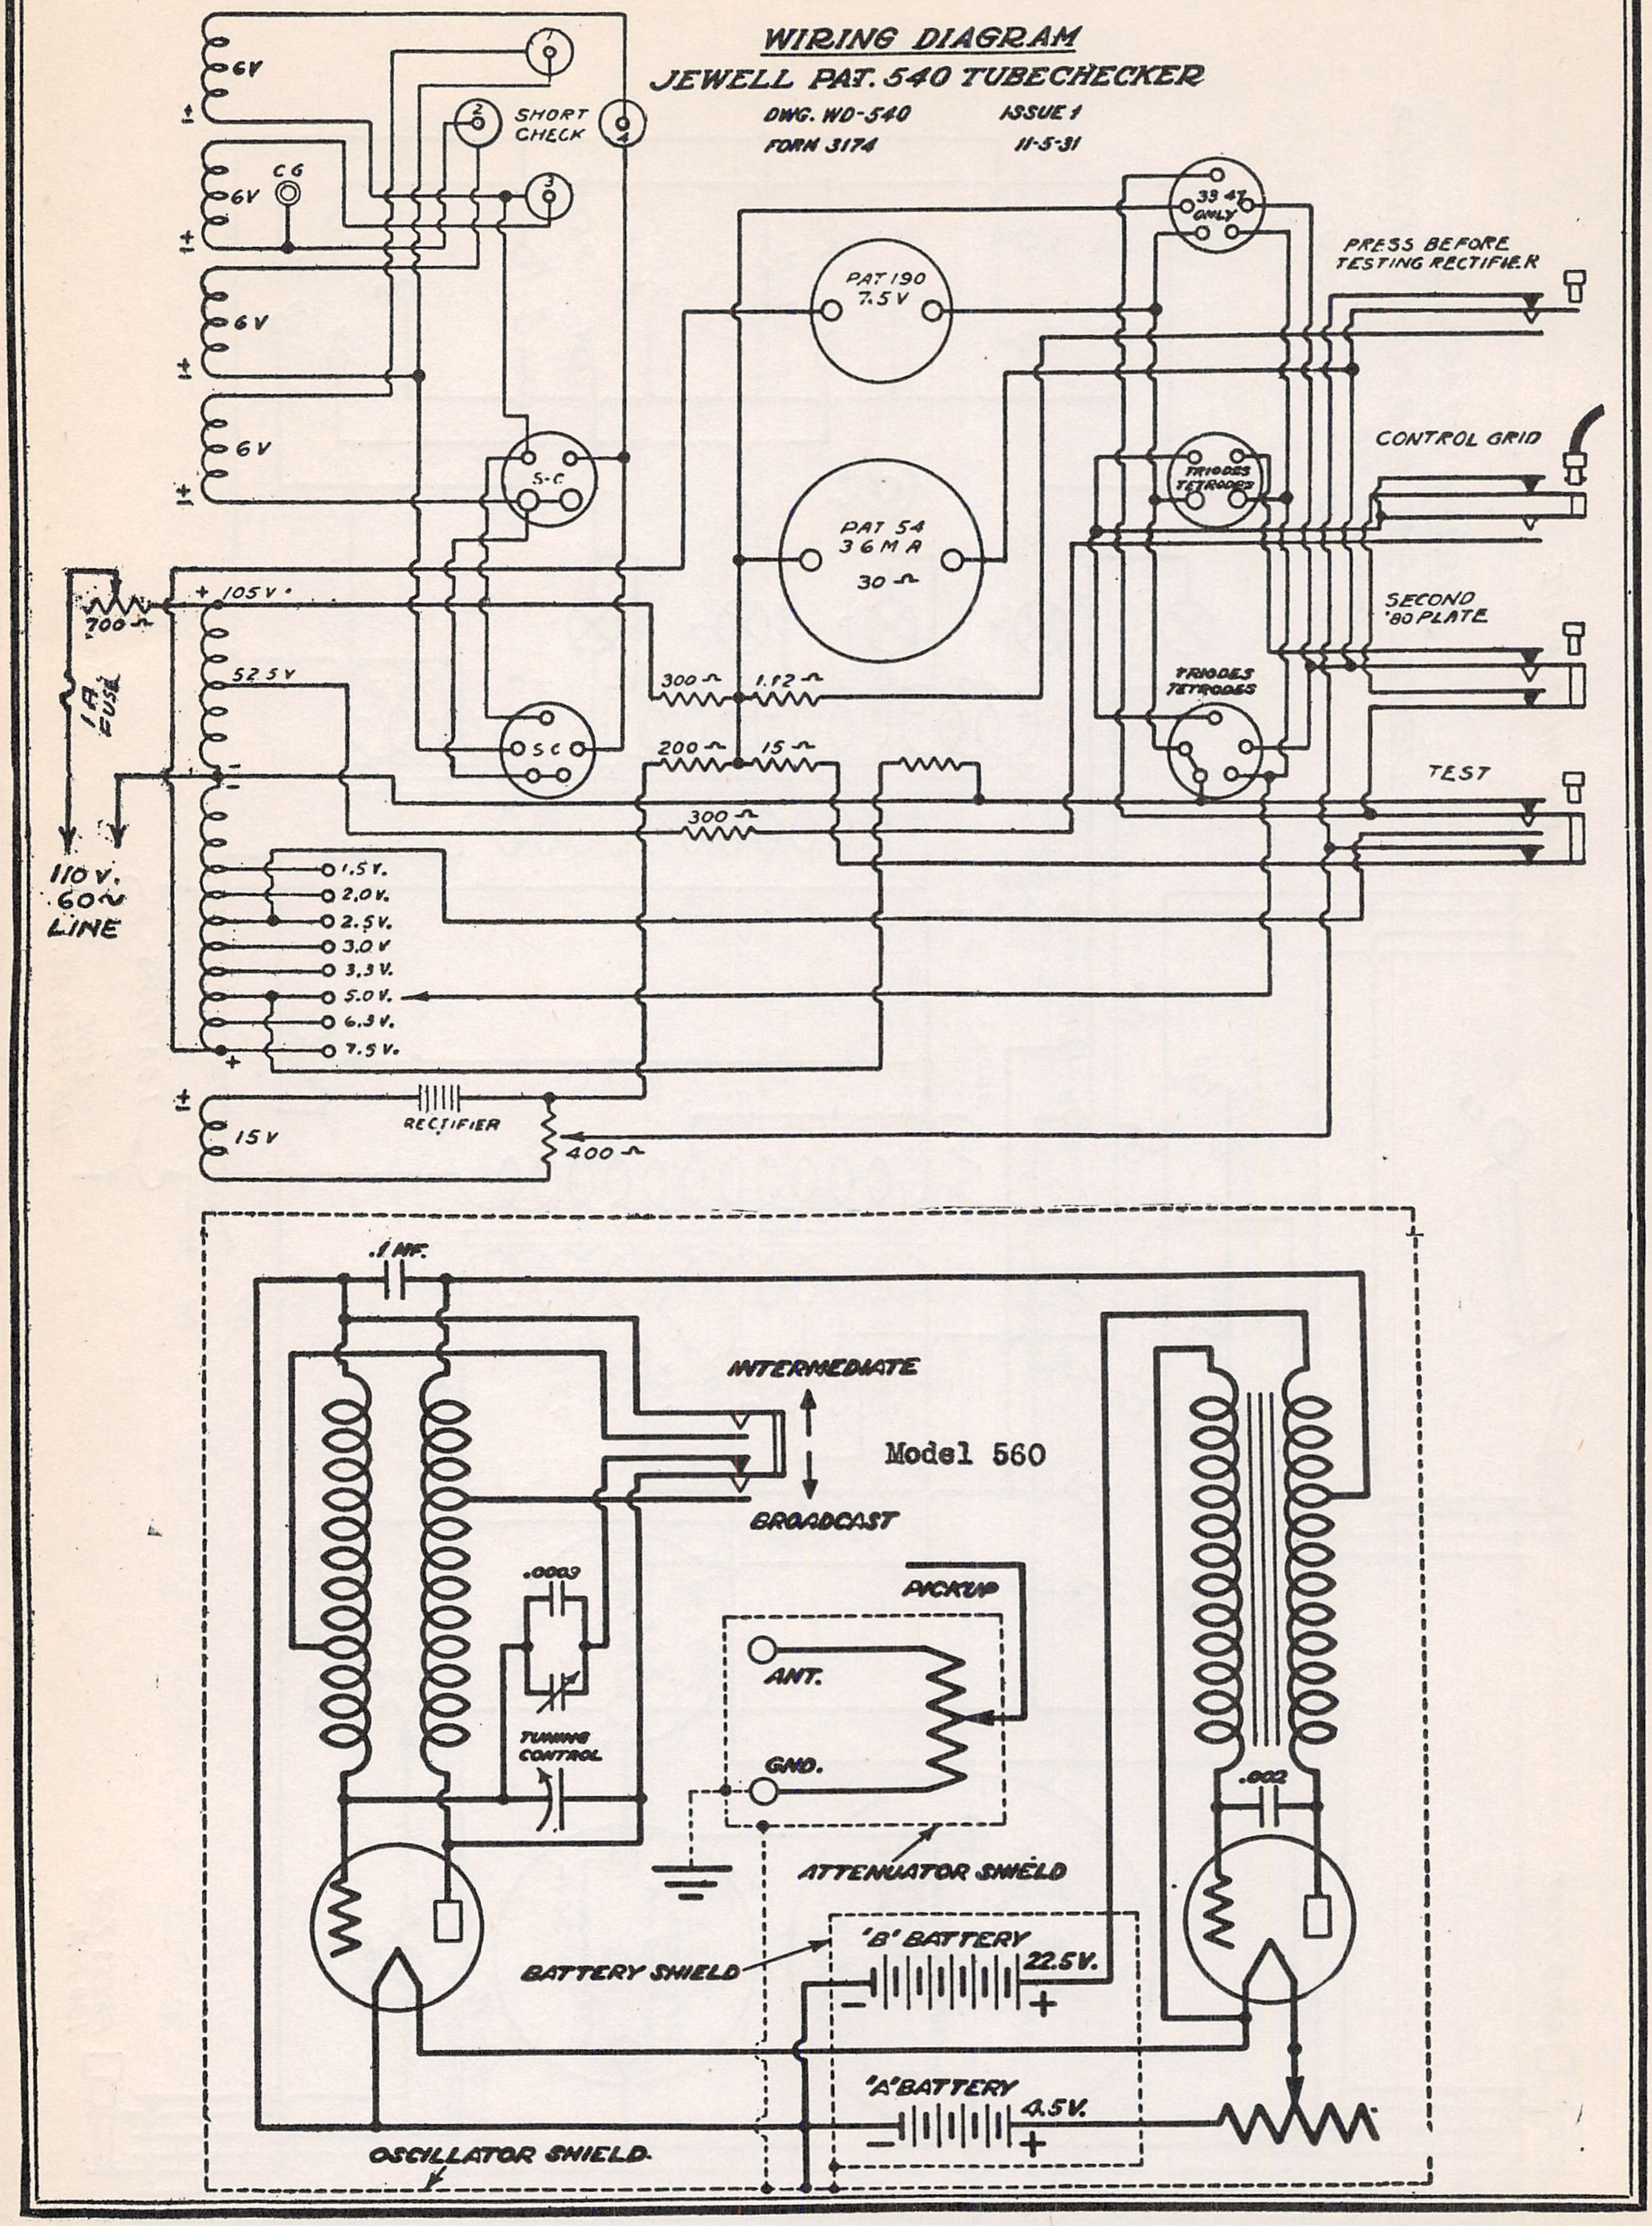
WIRING DIAGRAM
JEWELL PAT. 540 TUBECHECKER
DWG. WD-540
FORM 3174
ISSUE 1
11-5-31
6V
6V
6V
6V
C6
SHORT CHECK
1
2
3
4
S-C
S C
PAT 190
7.5 V
PAT 54
36 MA
30 Ω
33 47 ONLY
PRESS BEFORE TESTING RECTIFIER
CONTROL GRID
TRIODES TETRODES
SECOND '80 PLATE
TEST
+ 105 V
700 Ω
52.5 V
1A FUSE
110 V. 60~ LINE
300 Ω
1.12 Ω
200 Ω
15 Ω
300 Ω
1.5 V.
2.0 V.
2.5 V.
3.0 V
3.3 V.
5.0 V.
6.3 V.
7.5 V.
15 V
RECTIFIER
400 Ω
.1 MF.
INTERMEDIATE
Model 560
BROADCAST
.0003
TUNING CONTROL
PICKUP
ANT.
GND.
ATTENUATOR SHIELD
.002
BATTERY SHIELD
'B' BATTERY
22.5V.
"A" BATTERY
4.5V.
OSCILLATOR SHIELD.

MODEL Weston 676

WESTON ELECTRICAL INSTRUM'T CORP.

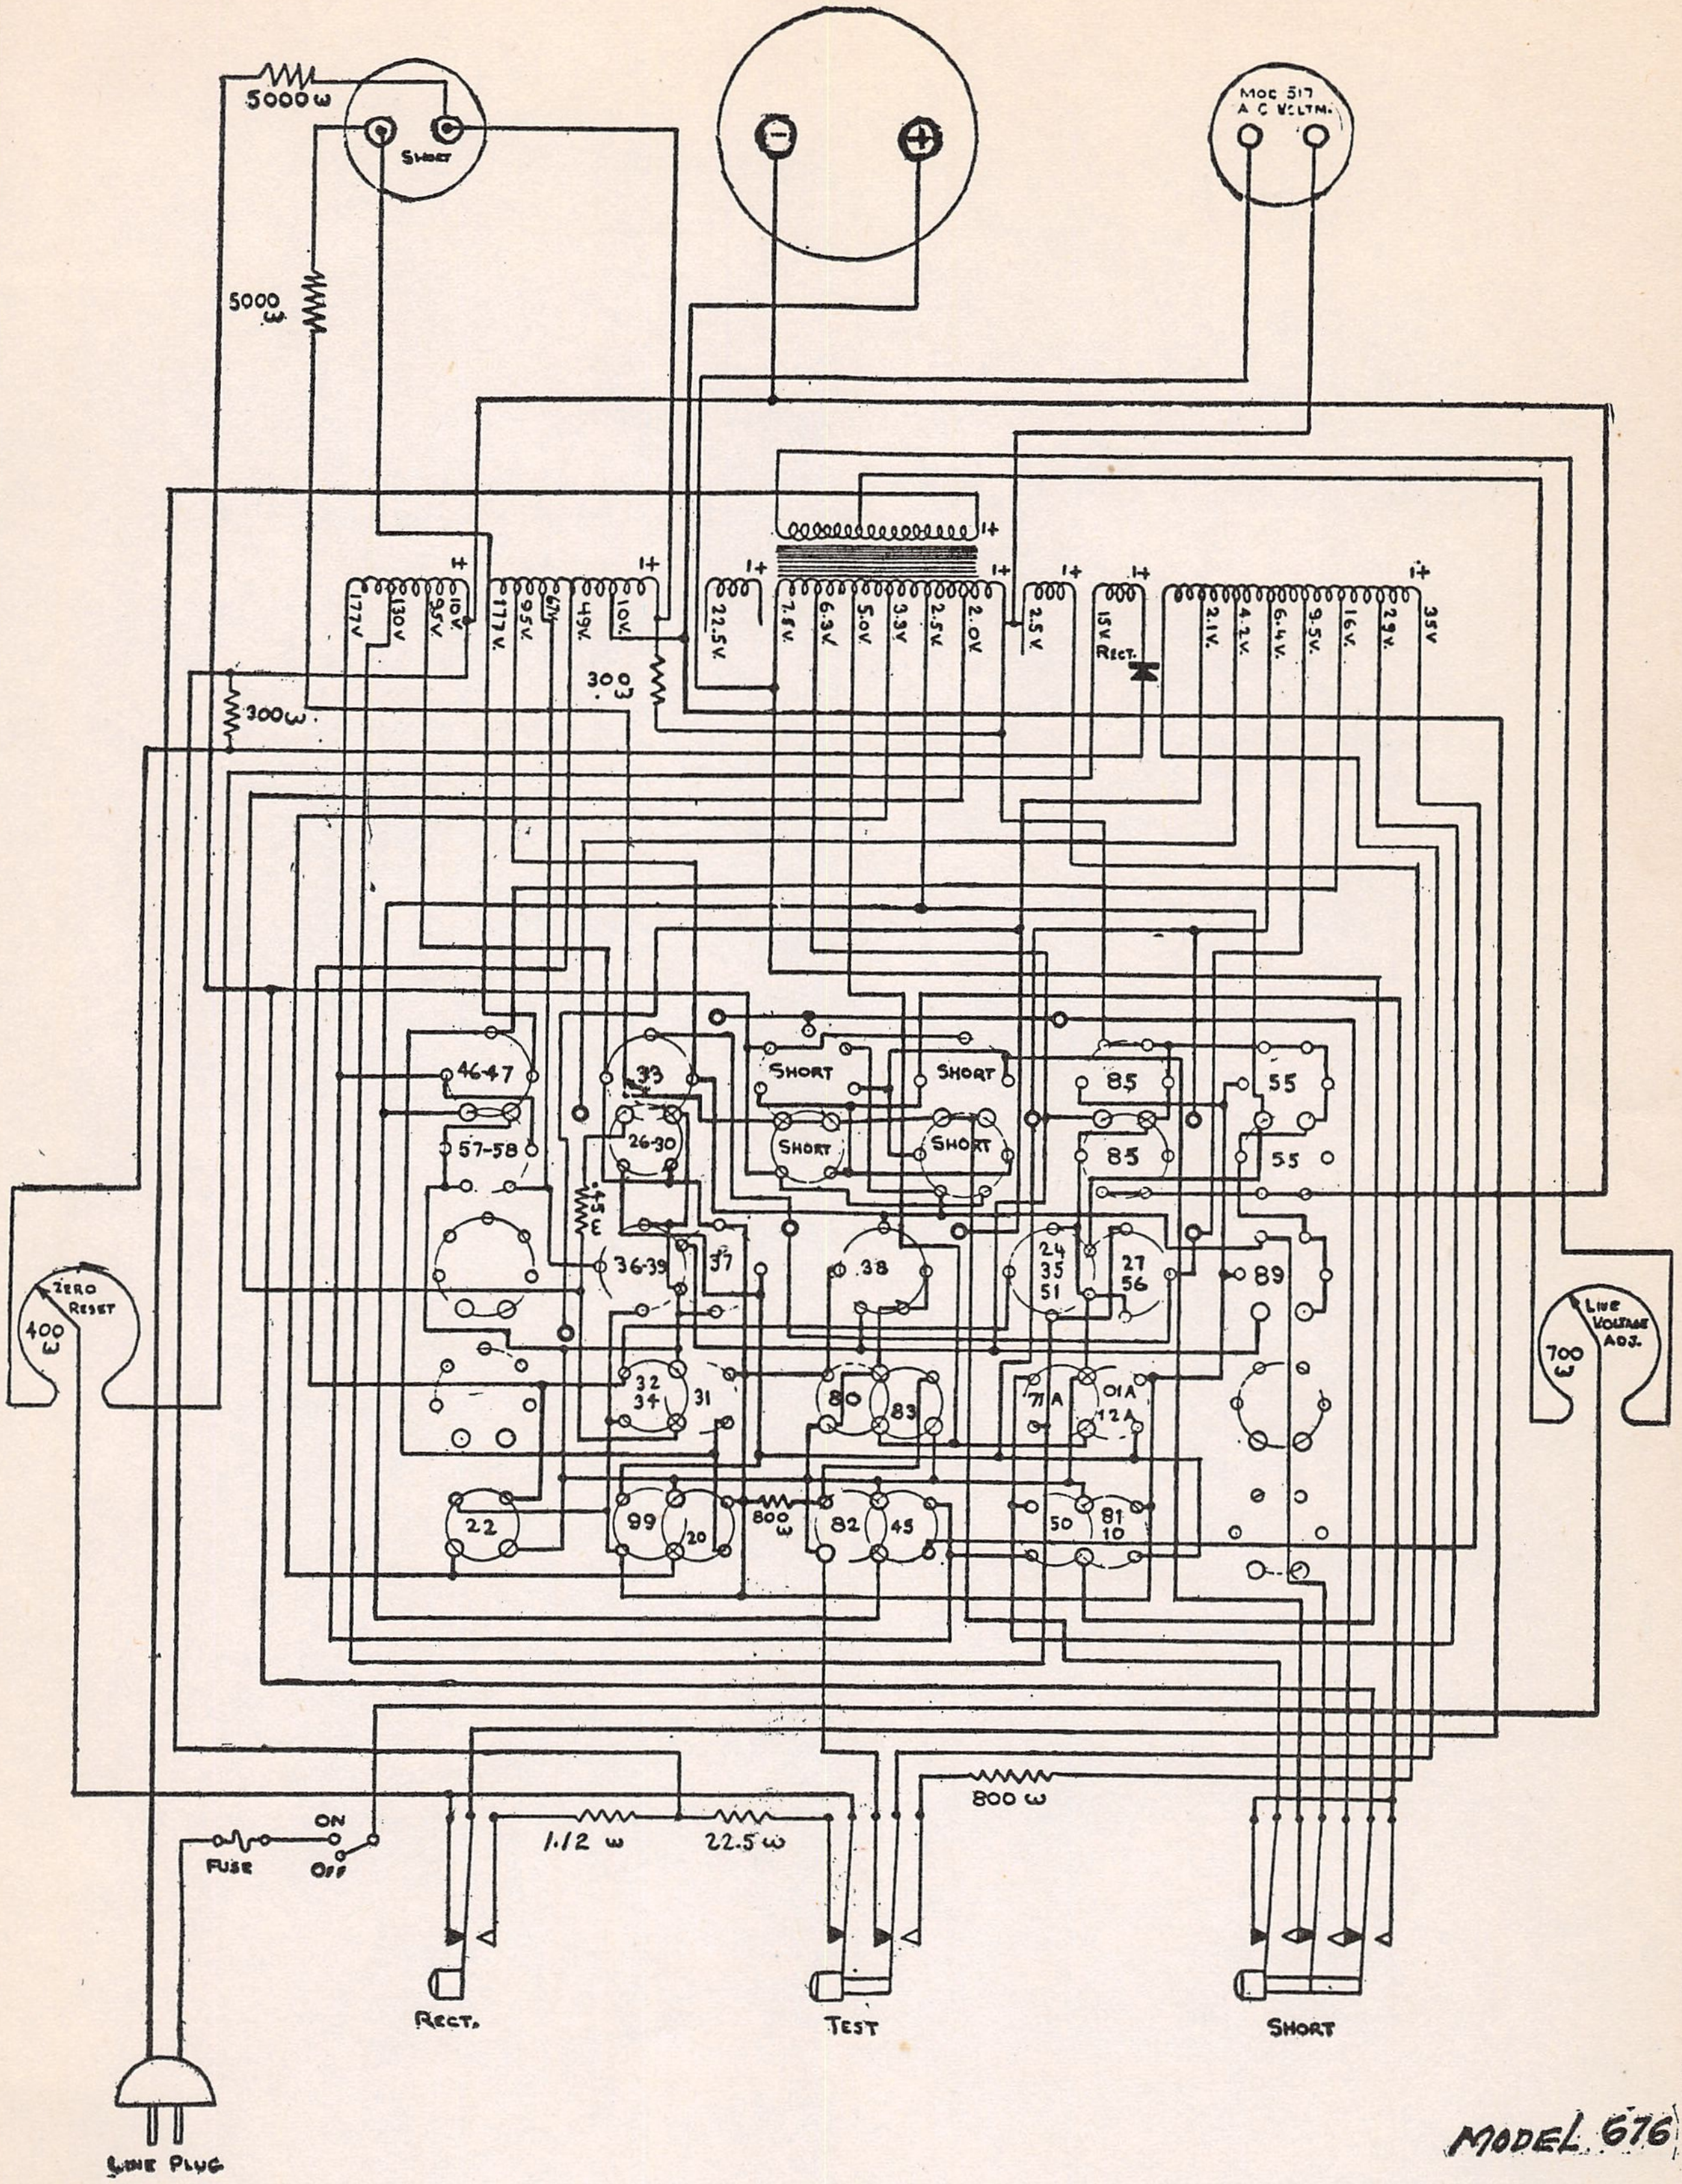
5000 ω
Short
Mod 517 A C Voltm.
5000 ω
1+
177V
130V
9.5V
101V
117V
95V
67V
49V
10V
22.5V
7.8V
6.3V
5.0V
3.3V
2.5V
2.0V
2.5V
15V
Rect.
2.1V
4.2V
6.4V
9.5V
16V
29V
35V
300 ω
300 ω
46-47
57-58
33
26-30
Short
Short
Short
Short
85
85
55
55
4.5 ω
36-39
37
38
24 35 51
27 56
89
Zero Reset
400 ω
Line Voltage Adj.
700 ω
32 34
31
80
83
71A
01A 12A
22
99
20
800 ω
82
45
50
81 10
800 ω
On
Fuse
Off
1.12 ω
22.5 ω
Rect.
Test
Short
Line Plug

MODEL 676

MODEL B Unit 3095
MODEL B Unit 3310,
4310
MODEL B Unit 4095

WILLARD STORAGE BATTERY CO.

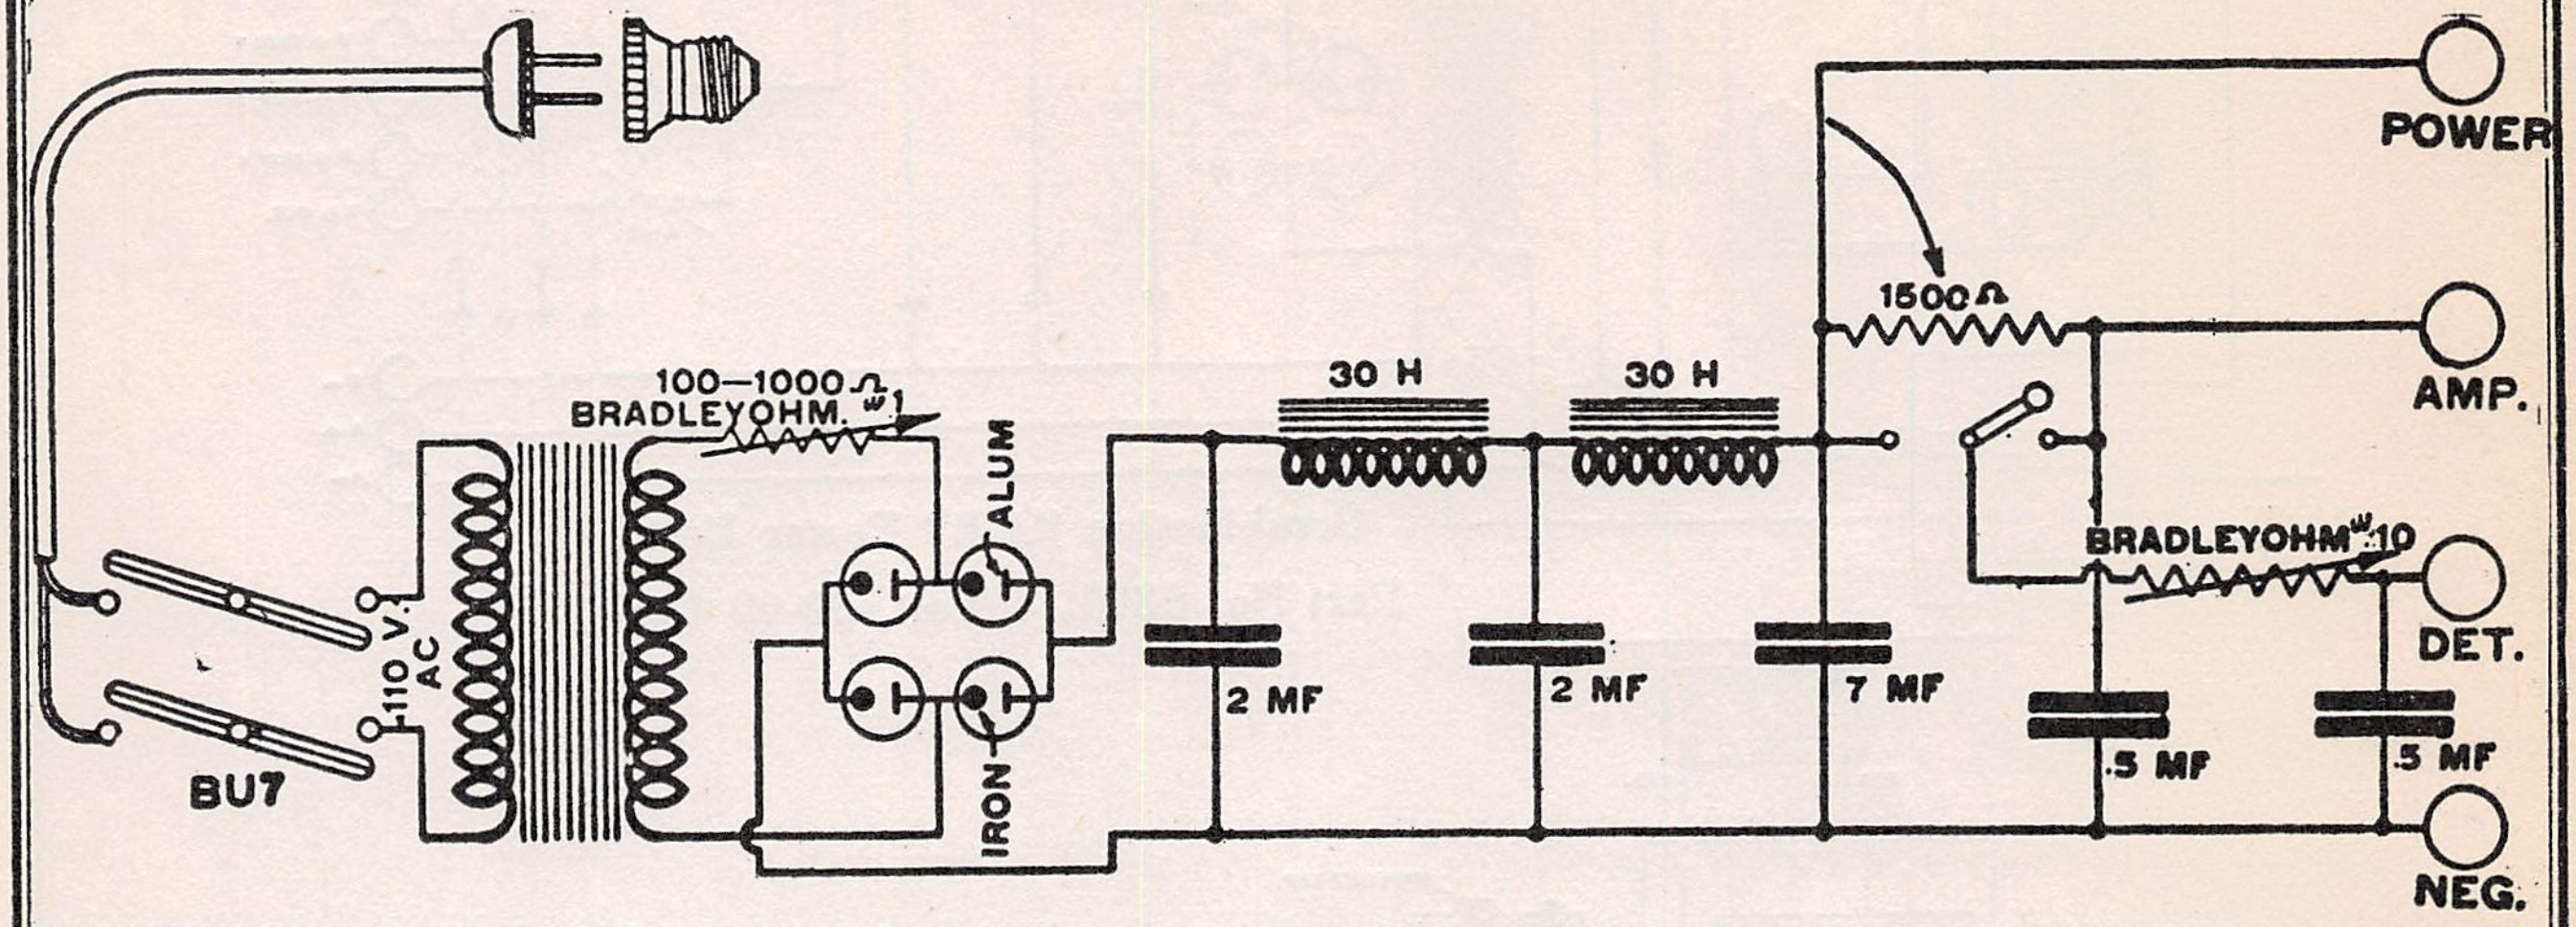
100—1000 Ω
BRADLEYOHM. #1
ALUM
IRON
110 V. AC
BU7
30 H
30 H
2 MF
2 MF
7 MF
1500 Ω
POWER
AMP.
BRADLEYOHM #10
DET.
.5 MF
.5 MF
NEG.

Standard "B" Power Unit, Part No. 3095, 50-60 Cycle

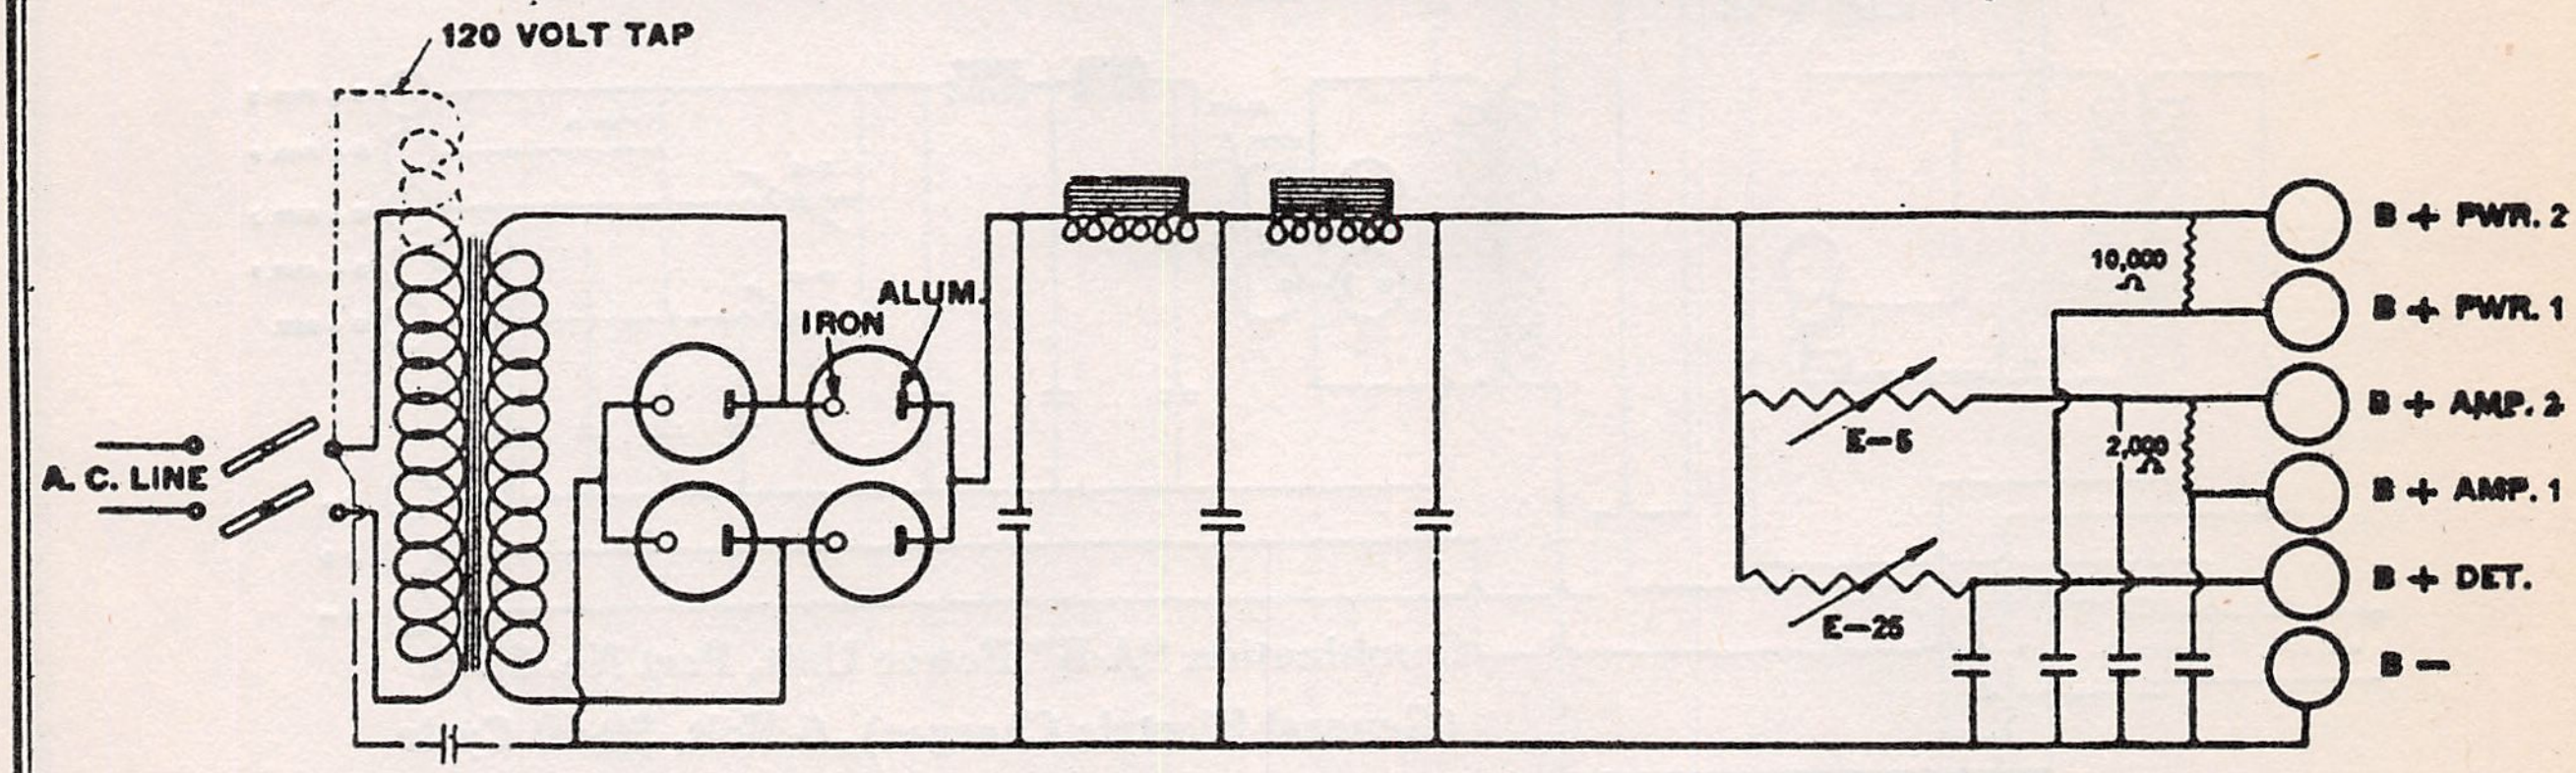
120 VOLT TAP
A. C. LINE
IRON
ALUM.
10,000 Ω
2,000 Ω
E—5
E—25
B + PWR. 2
B + PWR. 1
B + AMP. 2
B + AMP. 1
B + DET.
B —

THIS CONDENSER ON UNIT. PT. NO. 3410 ONLY

Super "B" Power Units, Part Nos. 3310 and 4310
25-40 and 50-60 Cycle

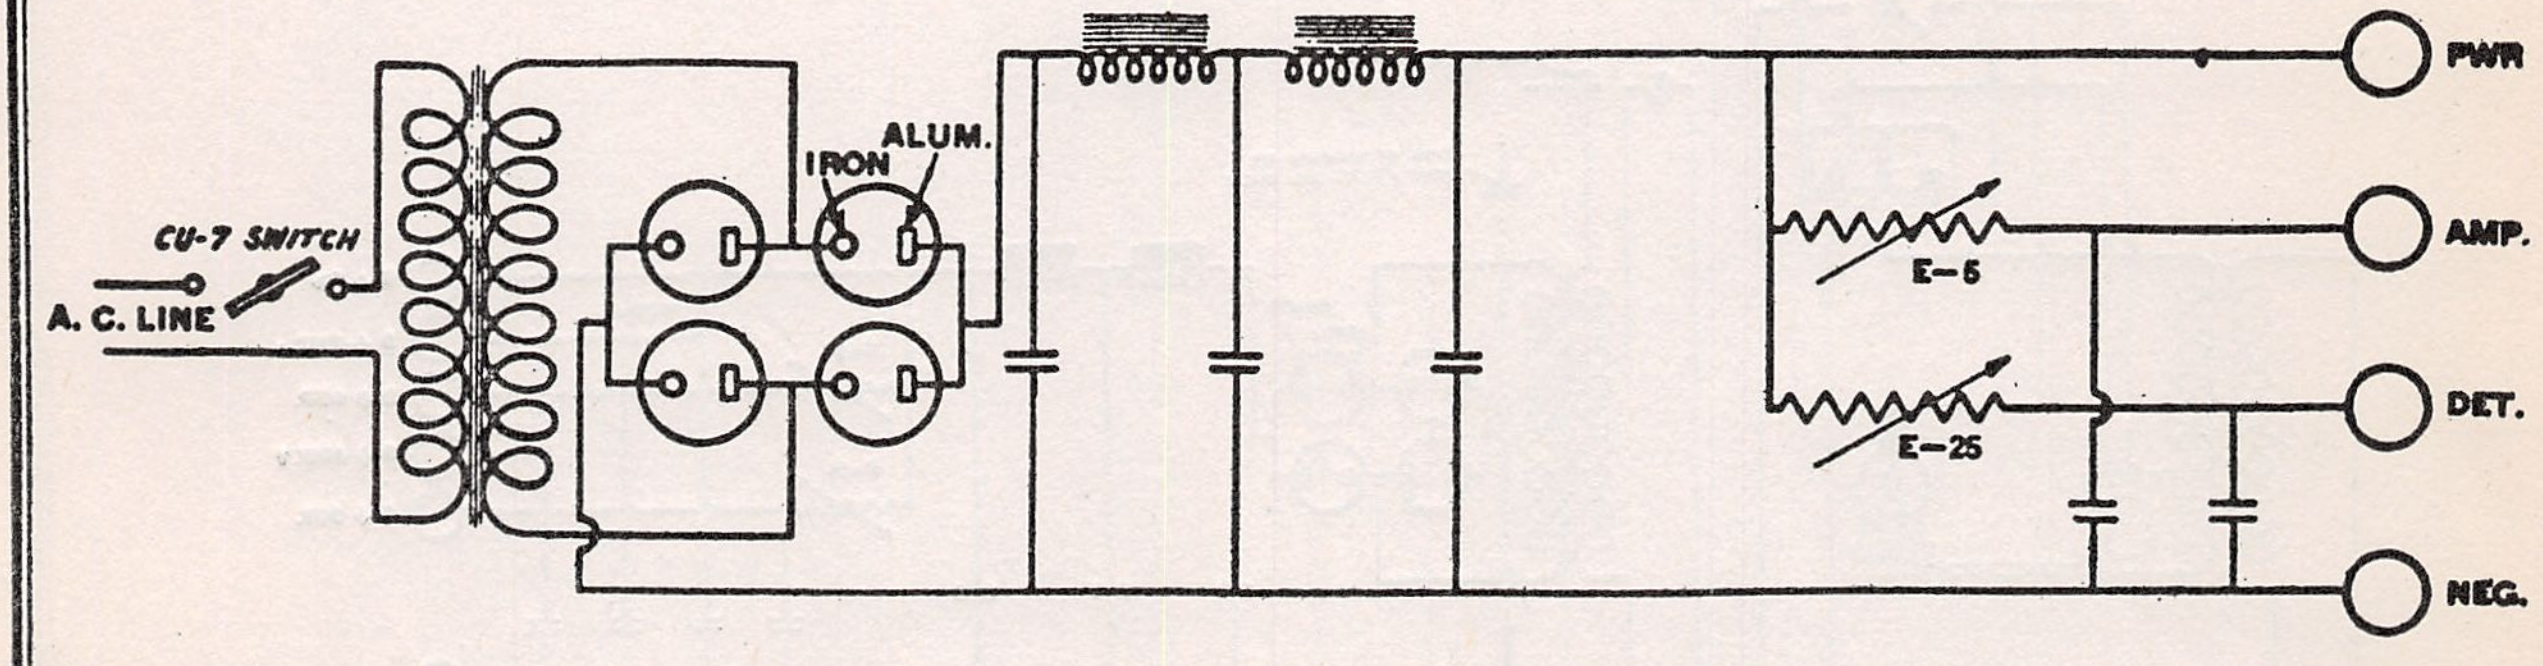
CU-7 SWITCH
A. C. LINE
IRON
ALUM.
E—5
E—25
PWR
AMP.
DET.
NEG.

Standard "B" Power Unit, Part No. 4095, 50-60 Cycle

MODEL AB 6301
MODEL AB 3301
G.E.Charger
MODEL AB 3301
Westinghouse

WILLARD STORAGE BATTERY CO.

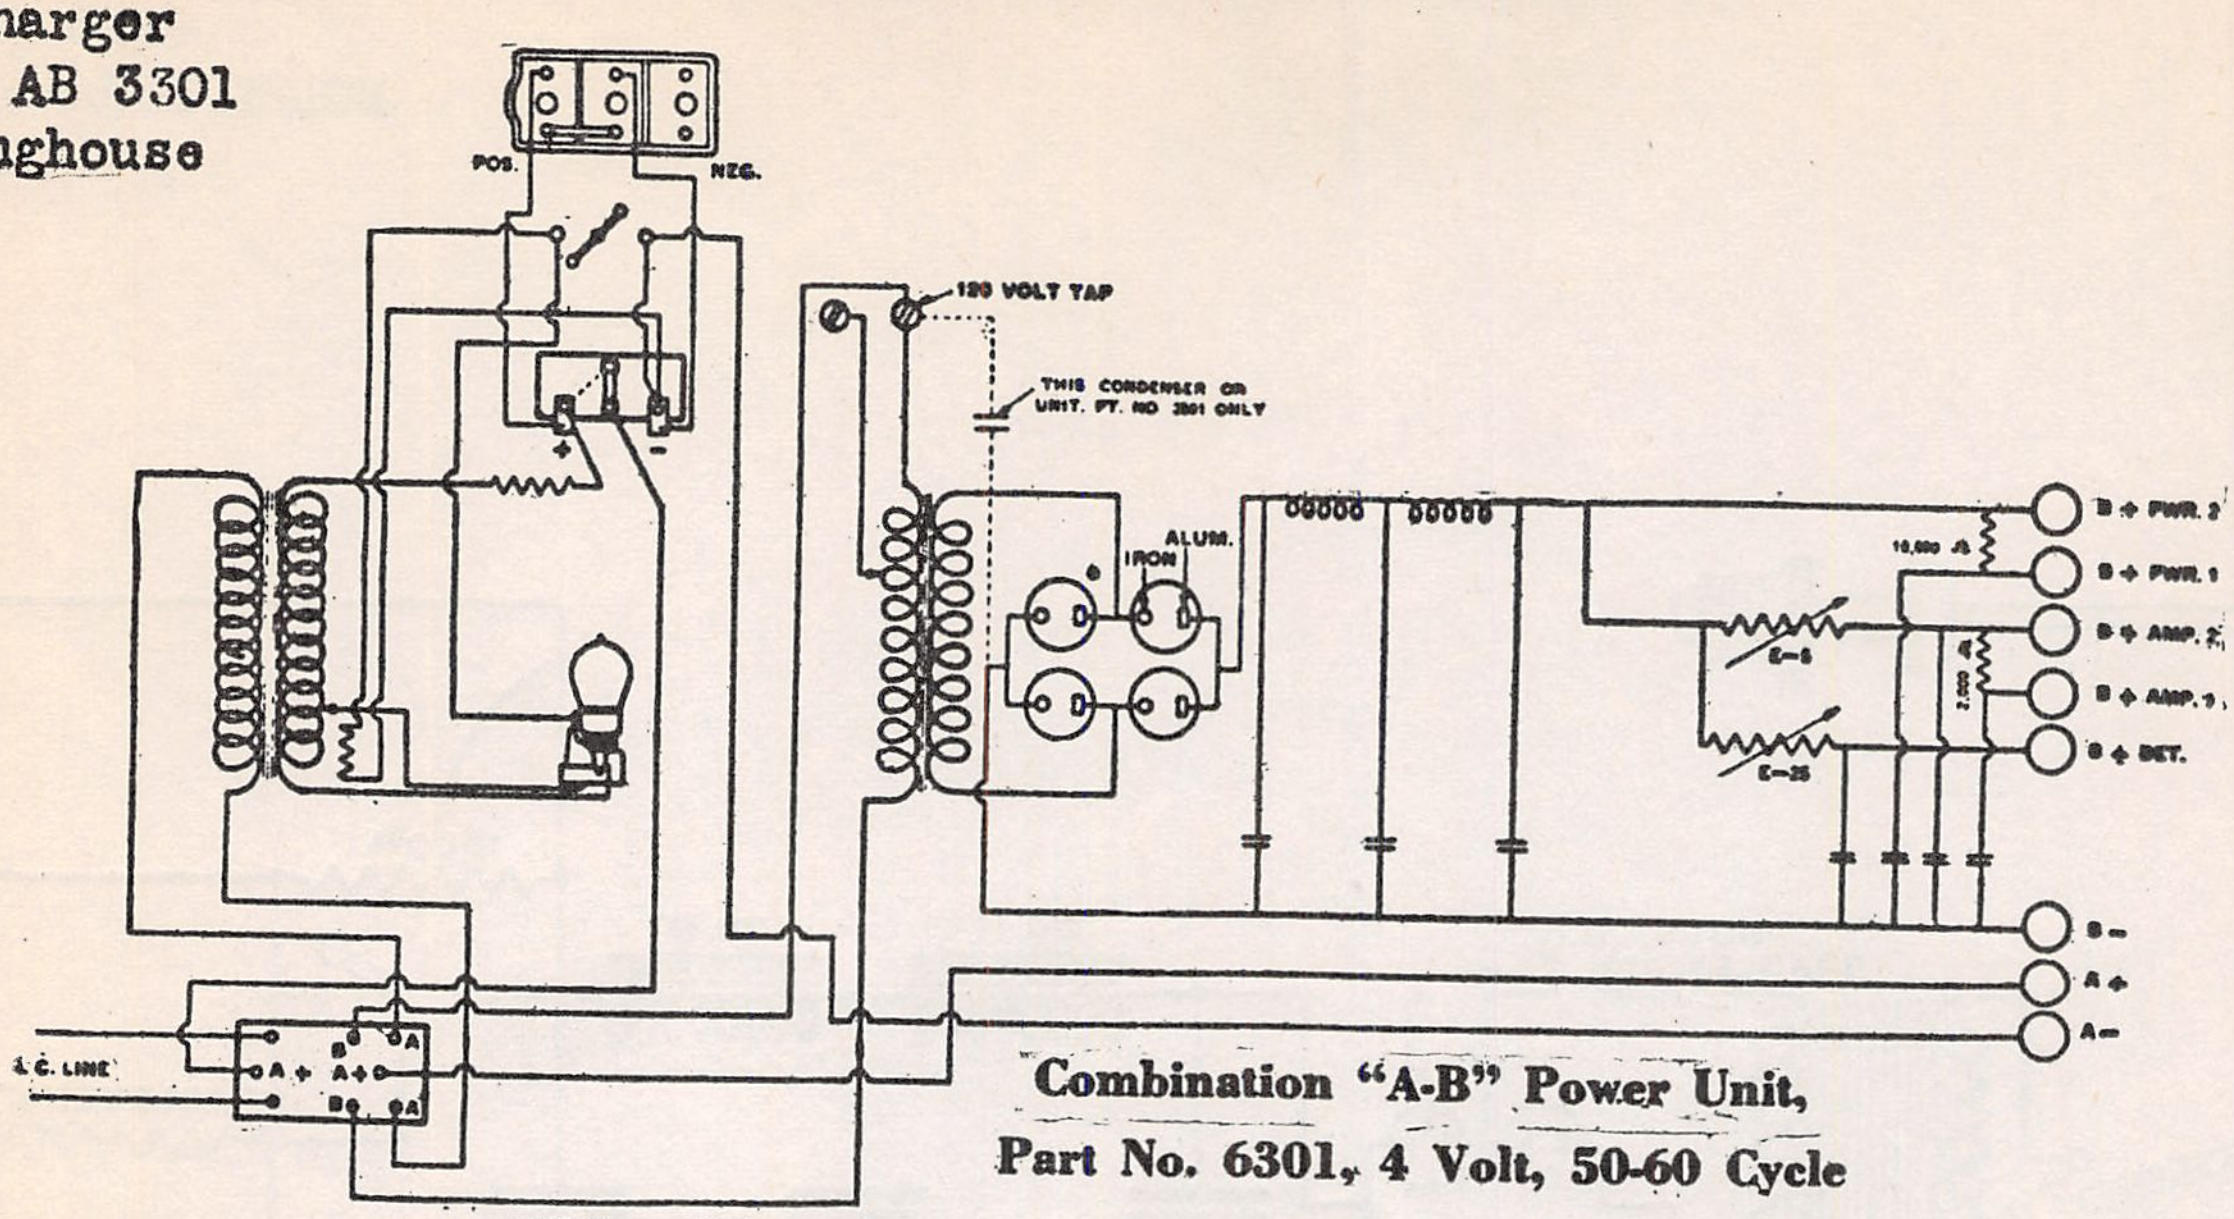
POS.
NEG.
+
−
120 VOLT TAP
THIS CONDENSER ON UNIT PT. NO. 3301 ONLY
ALUM.
IRON
10,000 Ω
2,000 Ω
E-6
E-25
B + PWR. 2
B + PWR. 1
B + AMP. 2
B + AMP. 1
B + DET.
B −
A +
A −
A.C. LINE
A +
B
A +
A
B
A

Combination "A-B" Power Unit, Part No. 6301, 4 Volt, 50-60 Cycle

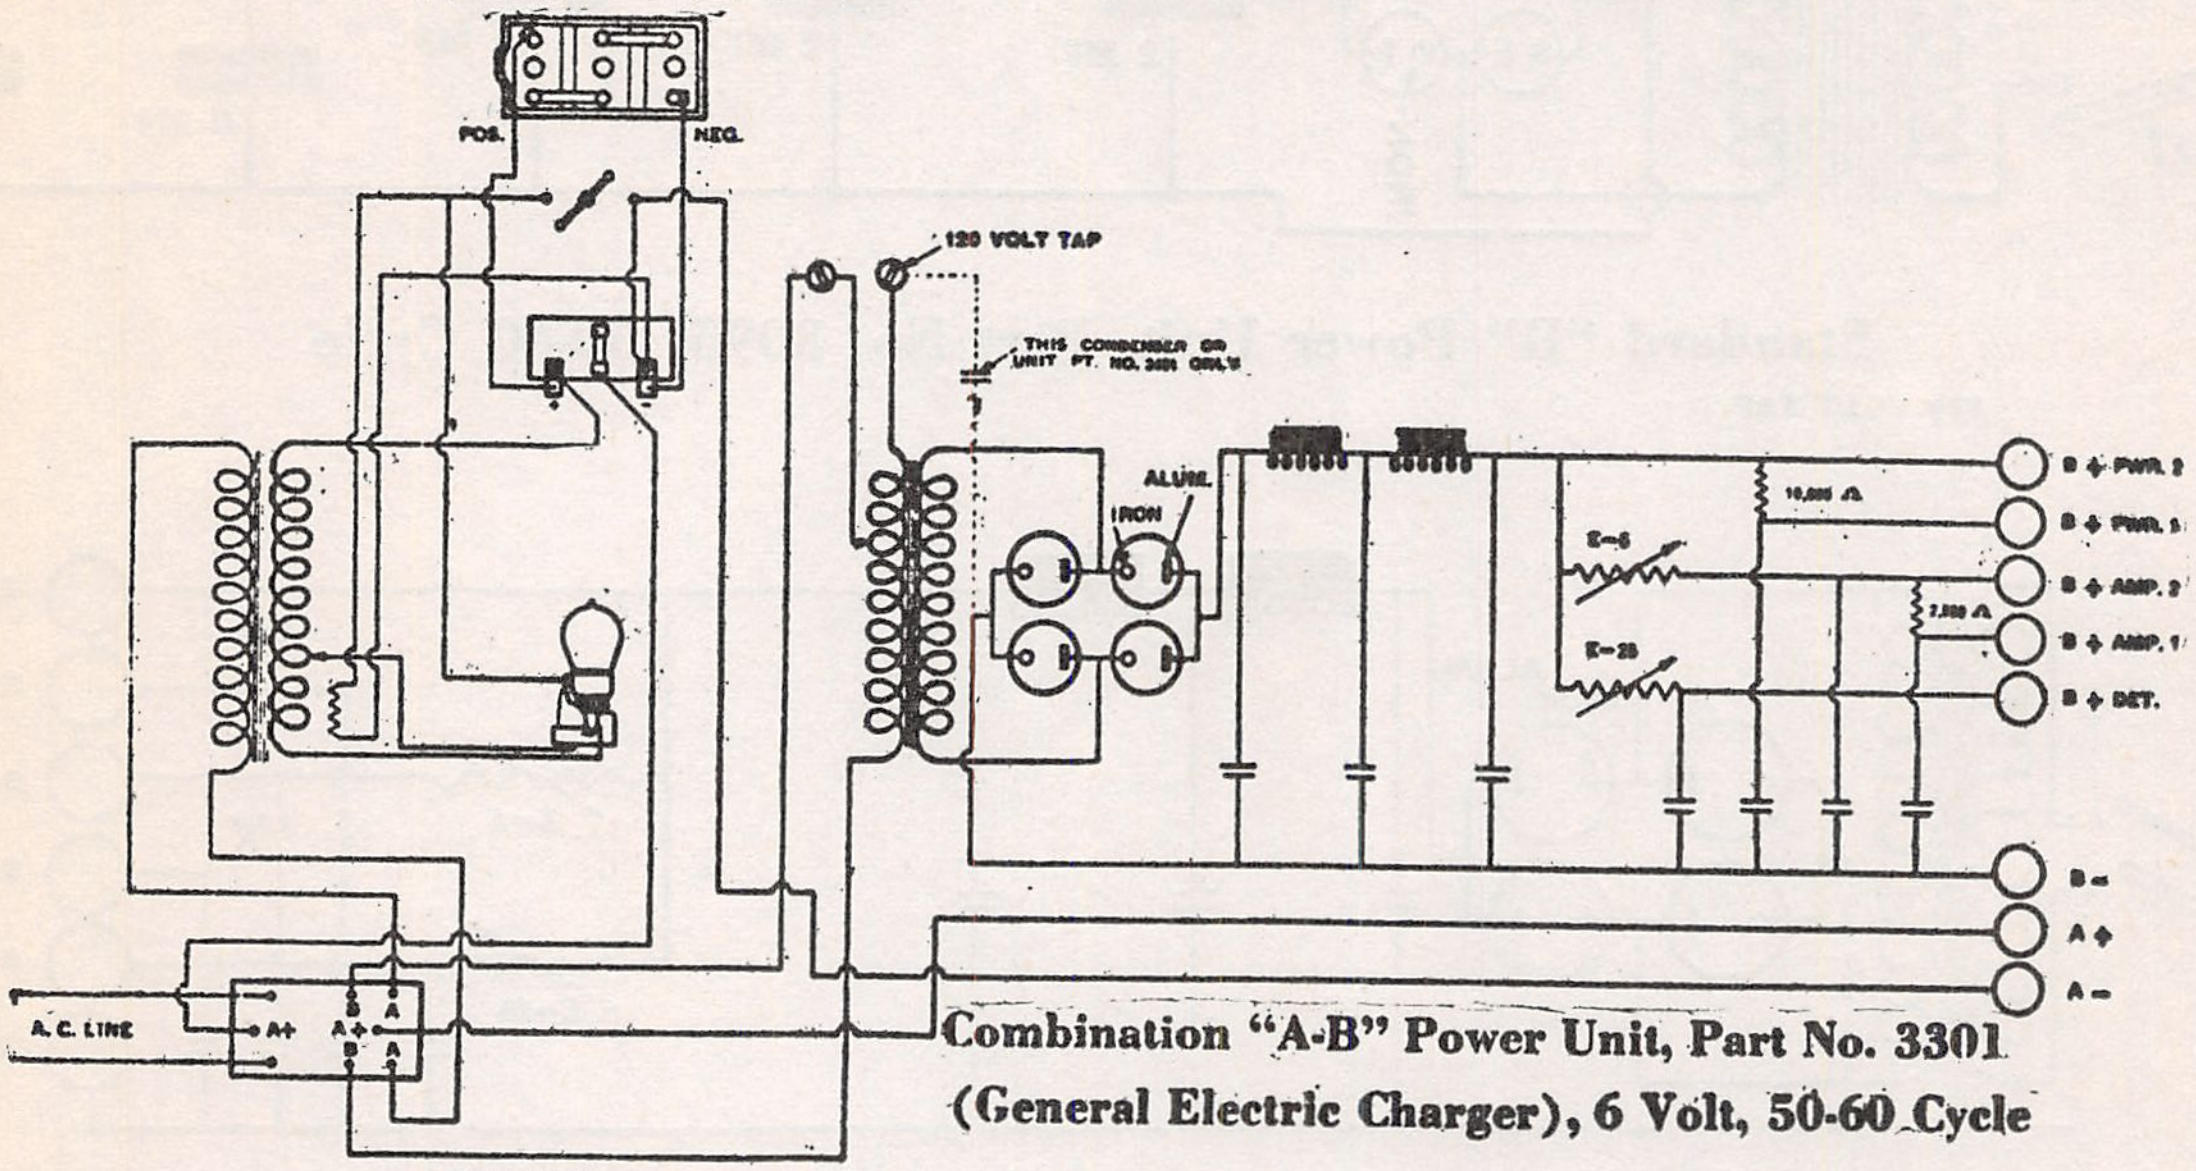
POS.
NEG.
120 VOLT TAP
THIS CONDENSER ON UNIT PT. NO. 3301 ONLY
ALUM.
IRON
10,000 Ω
7,000 Ω
E-6
E-25
B + PWR. 2
B + PWR. 1
B + AMP. 2
B + AMP. 1
B + DET.
B −
A +
A −
A.C. LINE
A+
A+
B
A
B
A

Combination "A-B" Power Unit, Part No. 3301 (General Electric Charger), 6 Volt, 50-60 Cycle

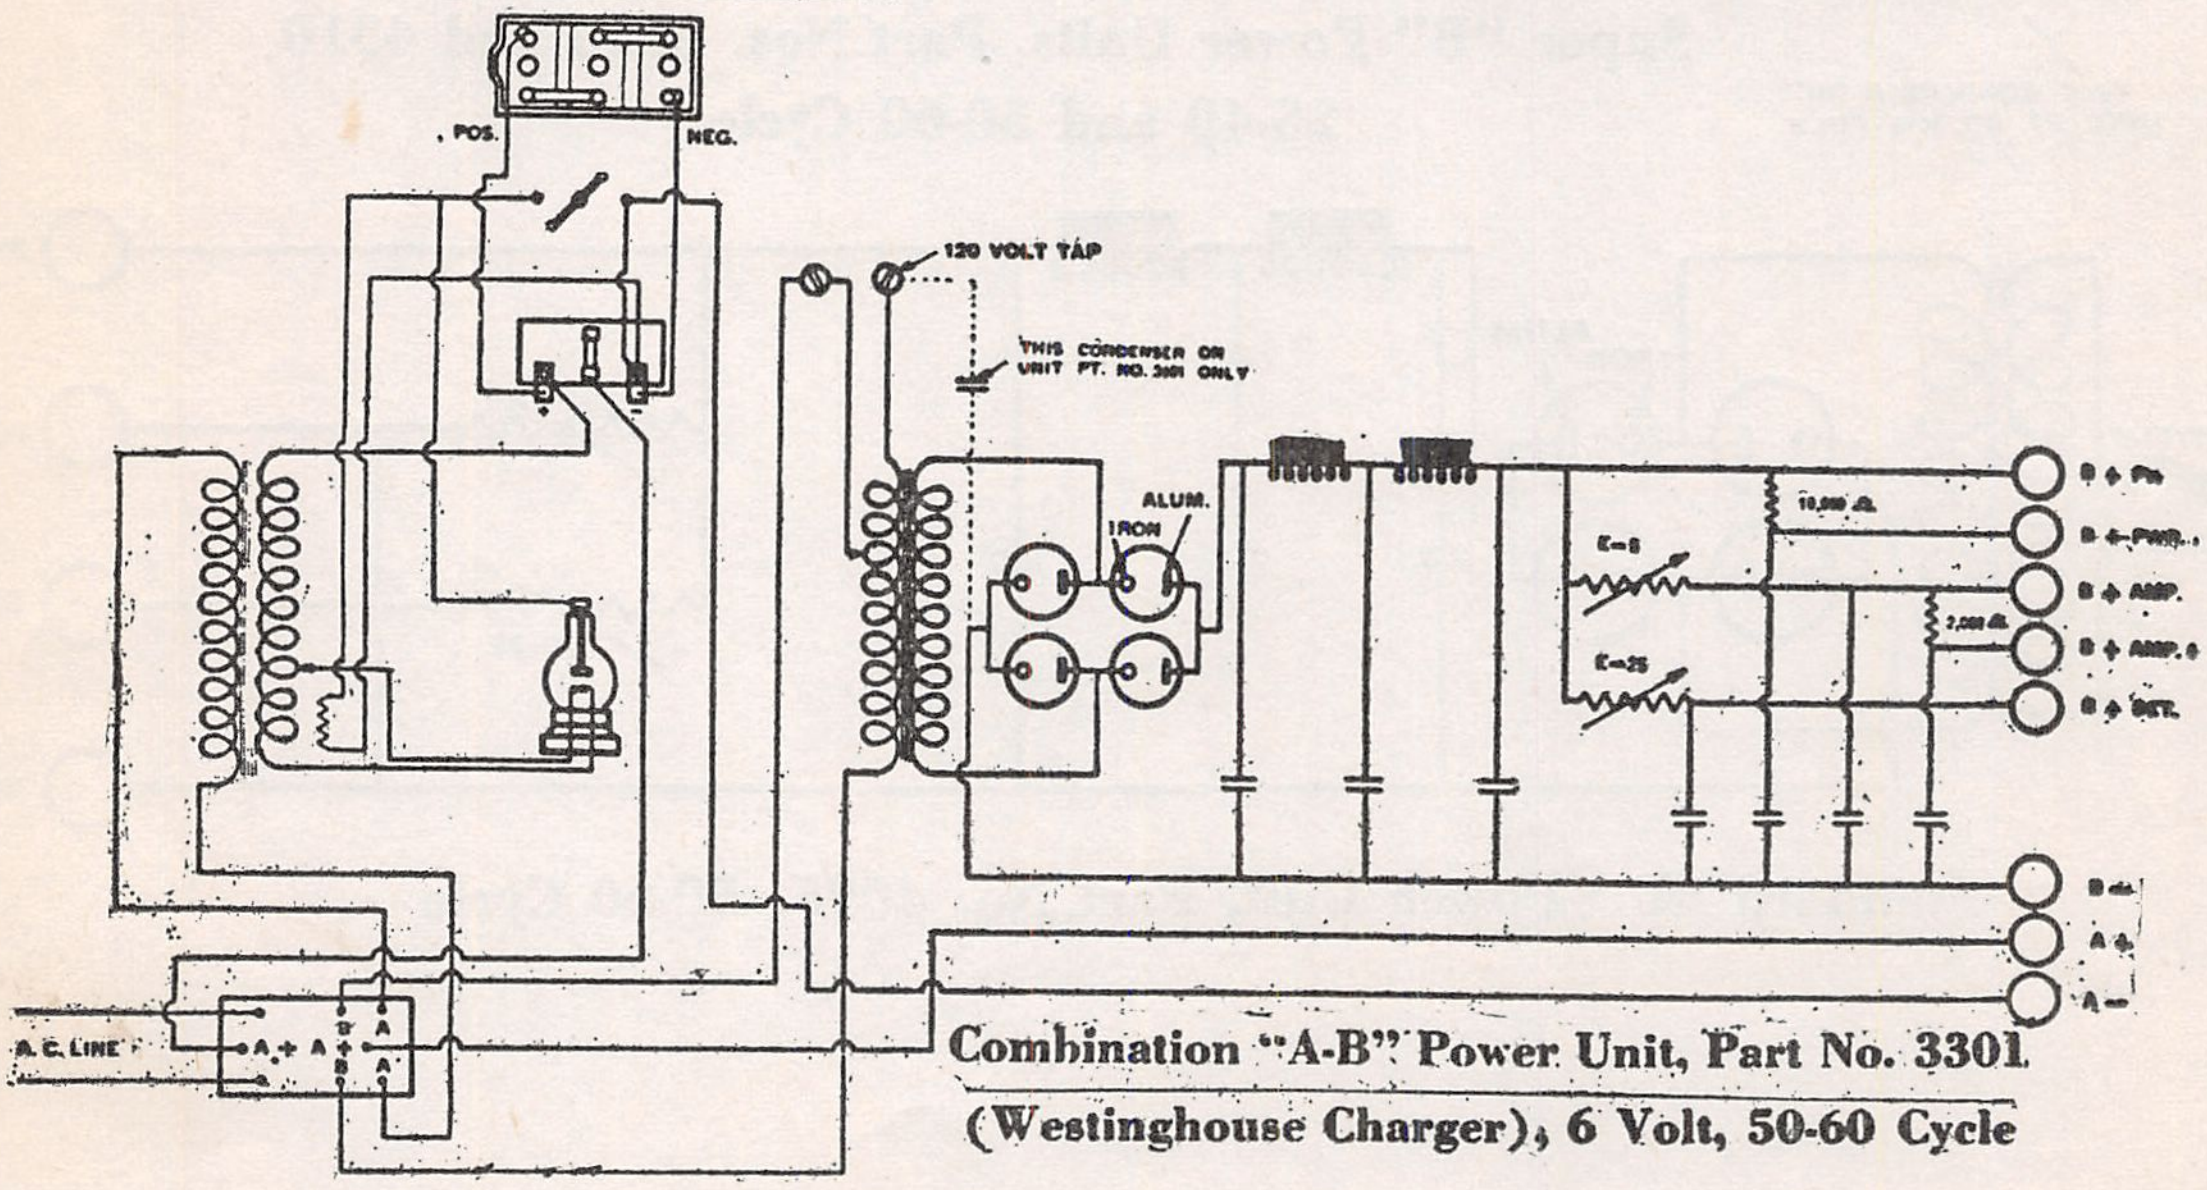
POS.
NEG.
120 VOLT TAP
THIS CONDENSER ON UNIT PT. NO. 3301 ONLY
ALUM.
IRON
10,000 Ω
7,000 Ω
E-6
E-25
B + PWR.
B + PWR.
B + AMP.
B + AMP.
B + DET.
B −
A +
A −
A.C. LINE
A +
A +
B
A
B
A

Combination "A-B" Power Unit, Part No. 3301 (Westinghouse Charger), 6 Volt, 50-60 Cycle

ZENITH RADIO CORP.

MODEL ZE-3
MODEL ZE-4
MODEL ZE-6

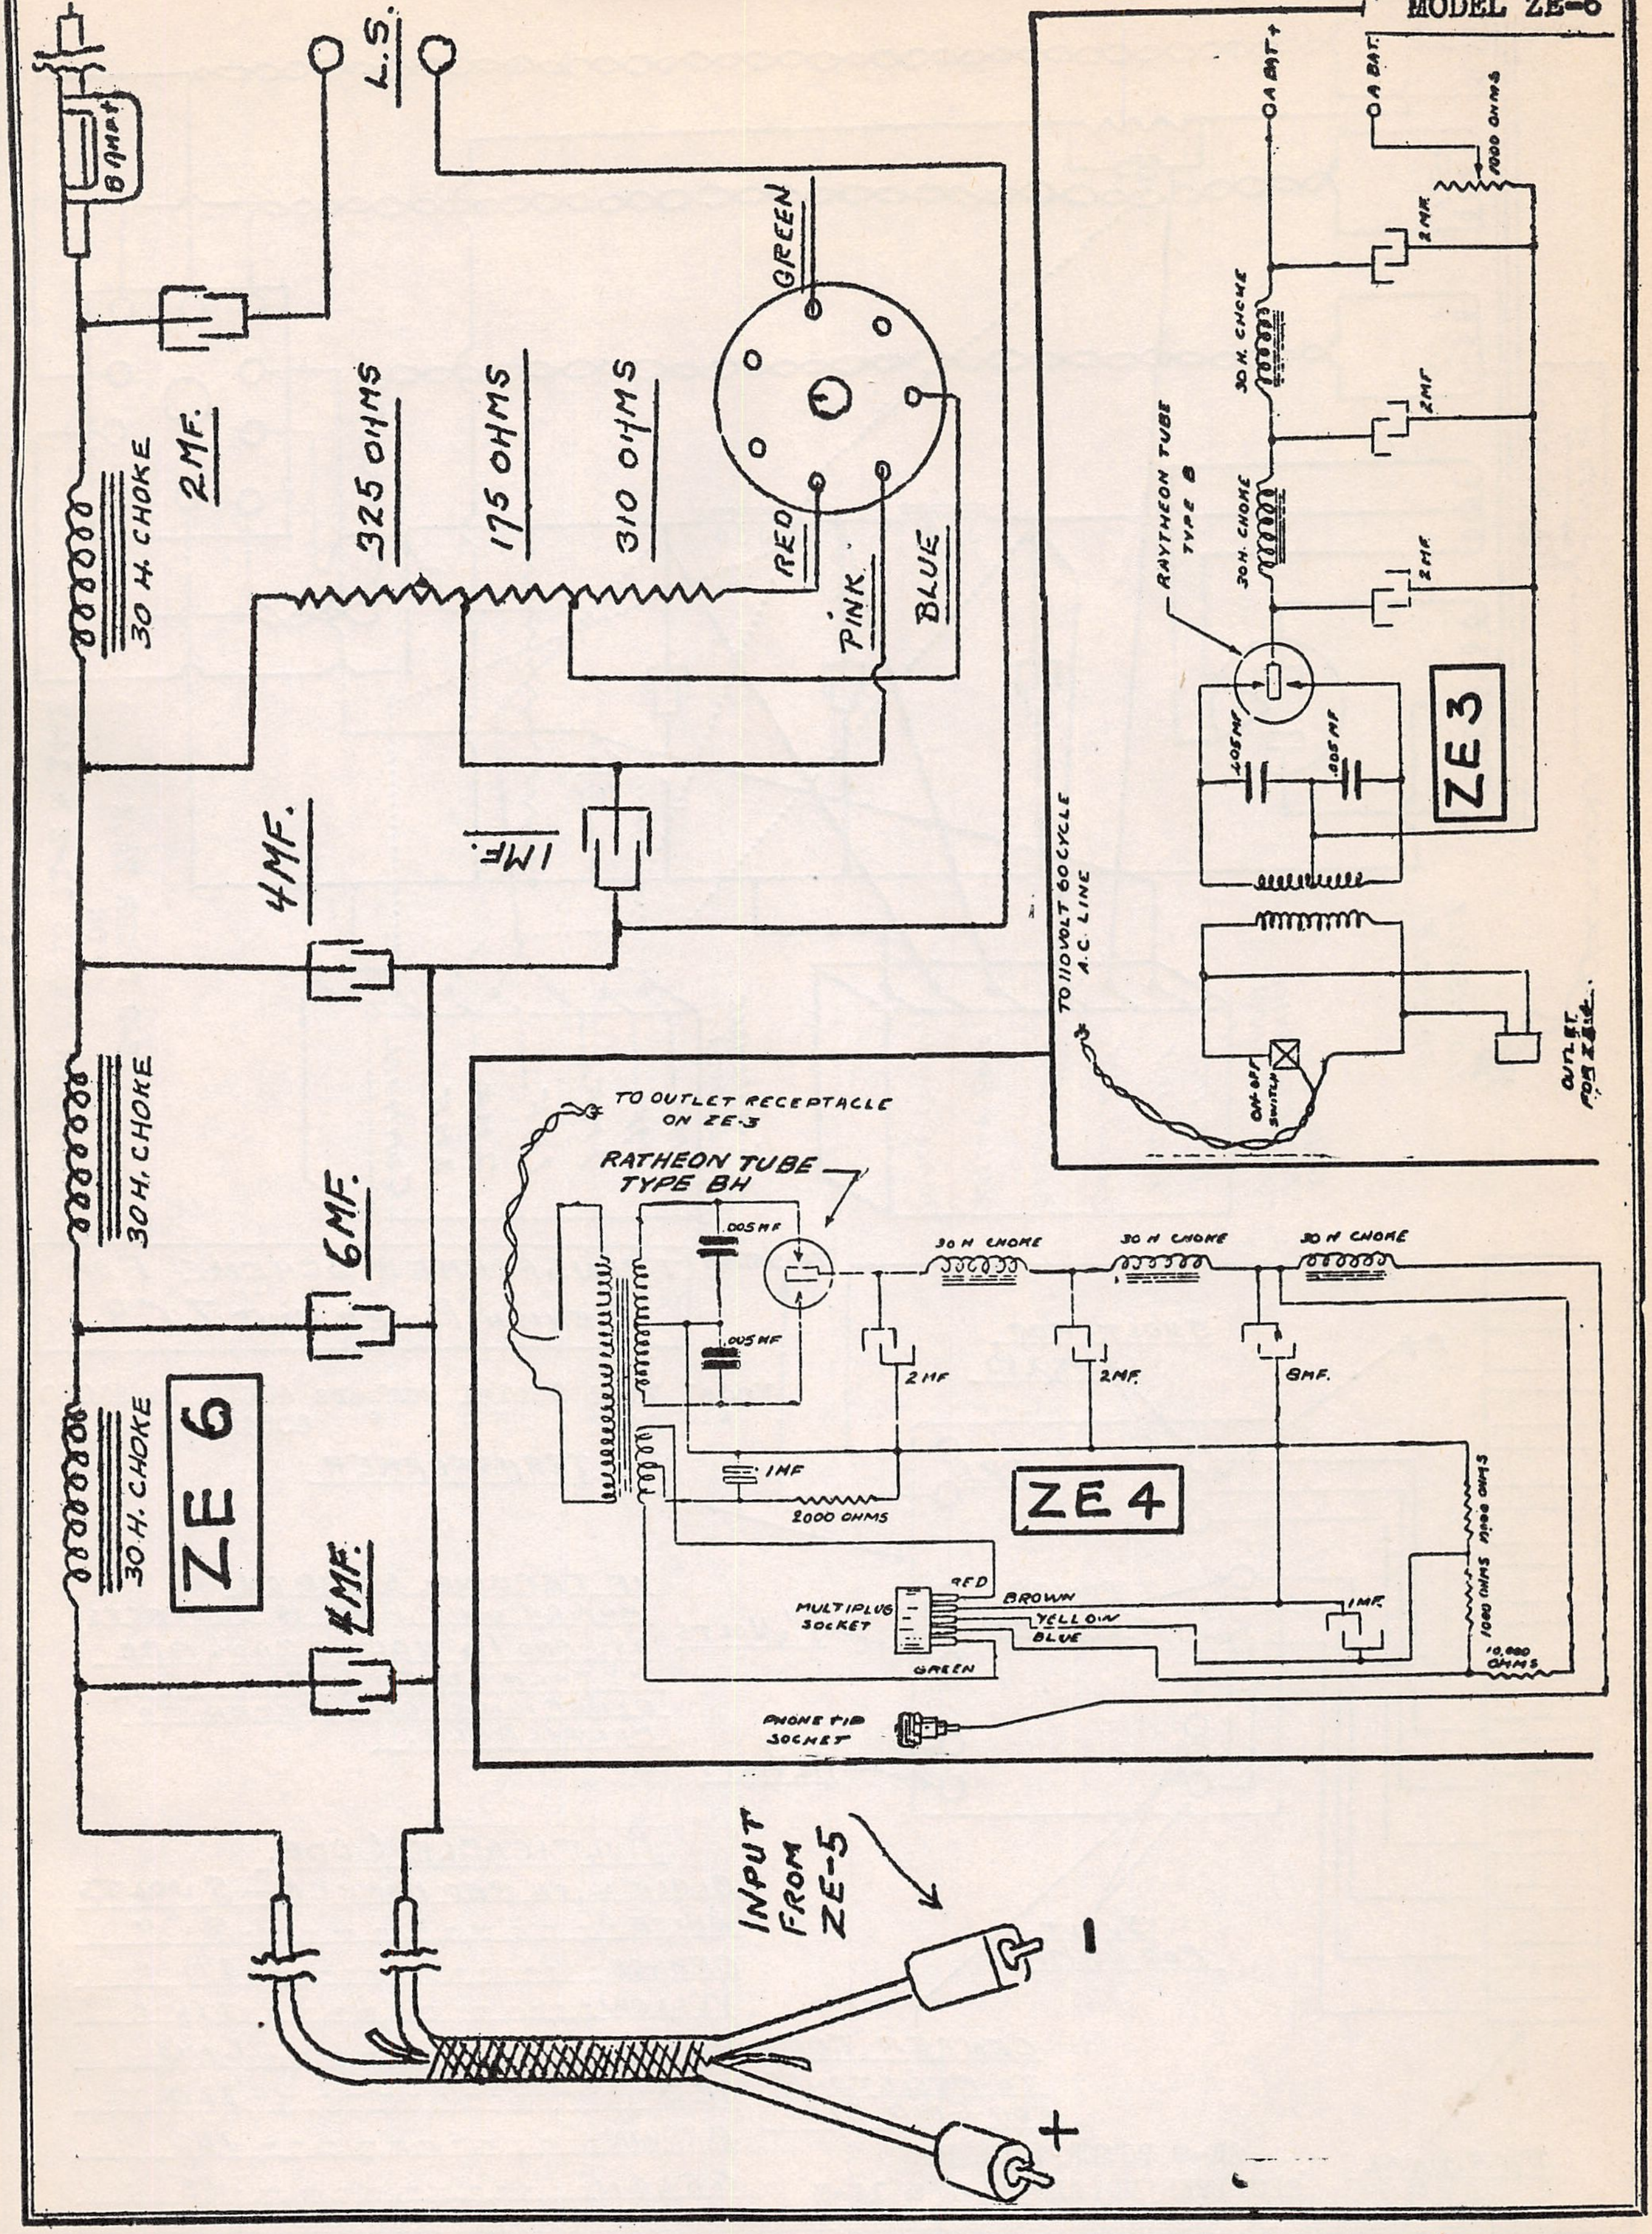
B AMP +
L.S.
GREEN
2MF.
30 H. CHOKE
325 OHMS
175 OHMS
310 OHMS
RED
PINK
BLUE
4MF.
1MF.
30 H. CHOKE
6MF.
30 H. CHOKE
ZE 6
4MF.
INPUT FROM ZE-5
-
+
A BAT +
A BAT.
1000 OHMS
2 MF.
30 H. CHOKE
2 MF
RAYTHEON TUBE TYPE B
30 H. CHOKE
2 MF
.005 MF
.005 MF
ZE 3
TO 110 VOLT 60 CYCLE A.C. LINE
ON-OFF SWITCH
OUTLET FOR ZE-4
TO OUTLET RECEPTACLE ON ZE-3
RATHEON TUBE TYPE BH
.005 MF
.005 MF
30 H CHOKE
30 H CHOKE
30 H CHOKE
2 MF
2 MF.
8 MF.
1 MF
2000 OHMS
ZE 4
1000 OHMS
1000 OHMS
10,000 OHMS
RED
BROWN
YELLOW
BLUE
GREEN
MULTIPLUG SOCKET
1 MF.
PHONE TIP SOCKET

MODEL ZE-9
for Models 11-E,14-E

ZENITH RADIO CORP.

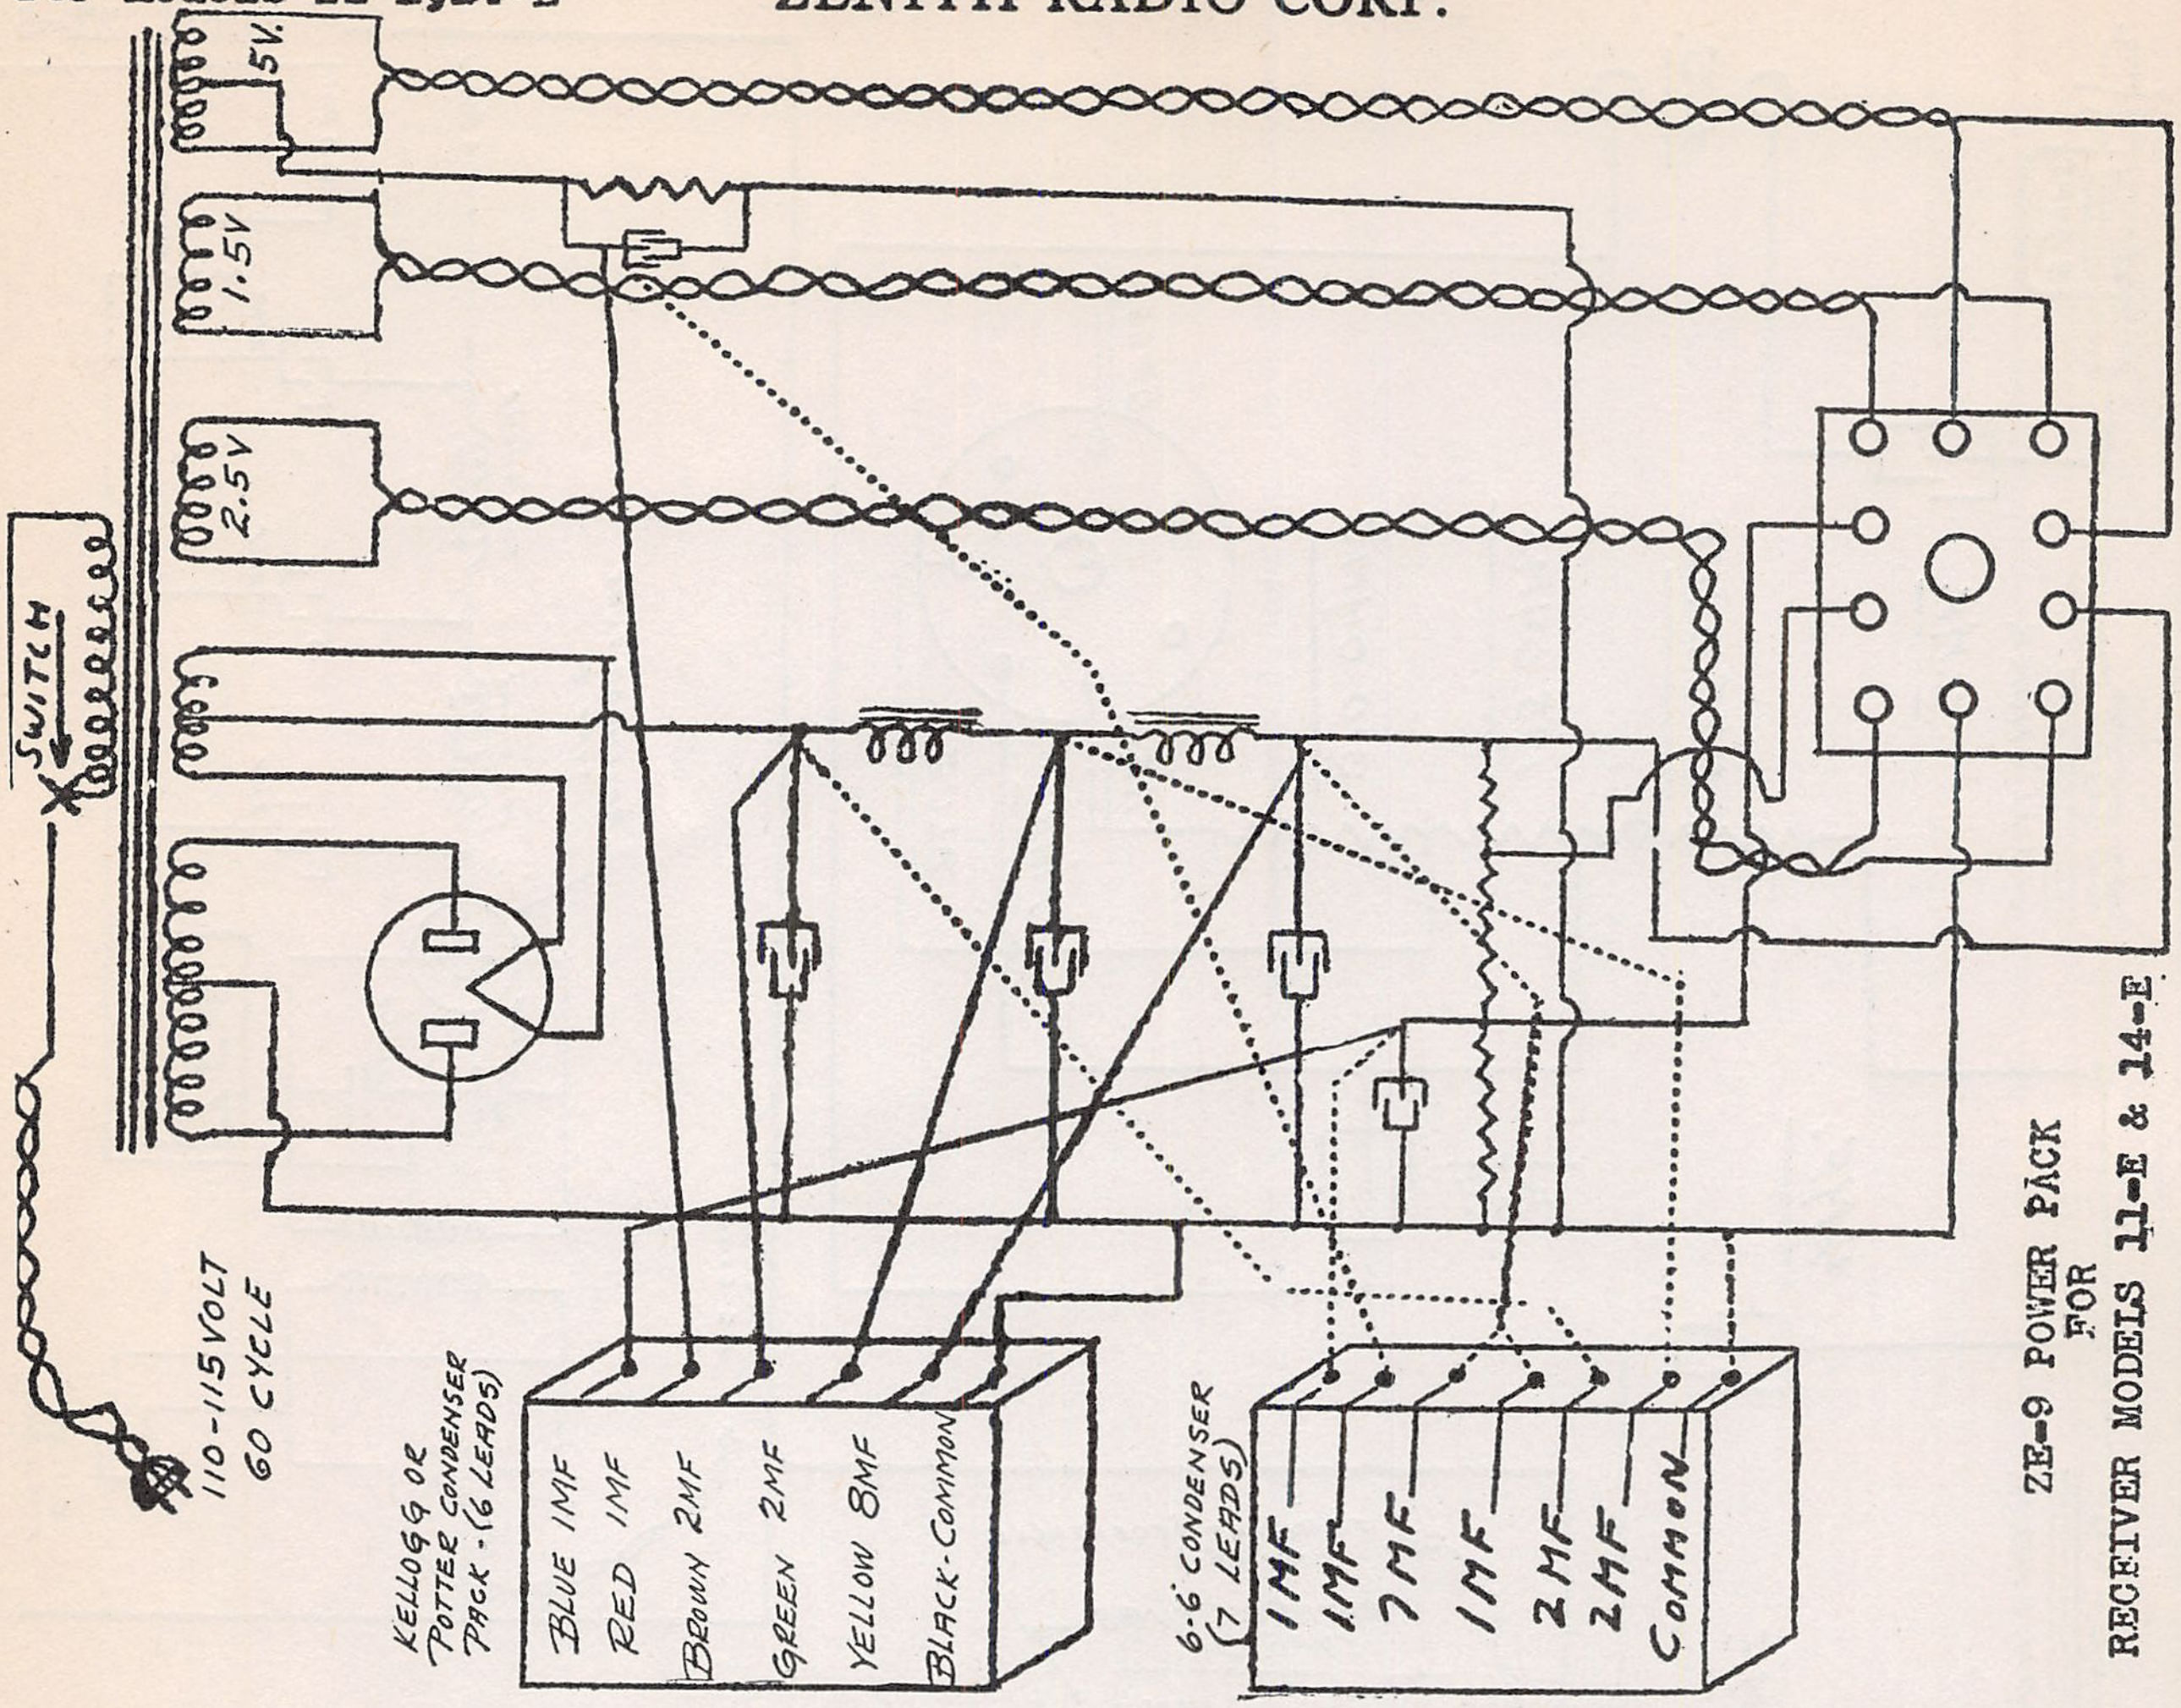
5V.
1.5V
2.5V
SWITCH
110-115 VOLT
60 CYCLE
KELLOGG OR POTTER CONDENSER PACK - (6 LEADS)
BLUE 1MF
RED 1MF
BROWN 2MF
GREEN 2MF
YELLOW 8MF
BLACK-COMMON
6-6 CONDENSER (7 LEADS)
1MF
1MF
7MF
1MF
2MF
2MF
COMMON

ZE-9 POWER PACK FOR RECEIVER MODELS 11-E & 14-E

TRANSFORMER SCHEME FOR ZENITH POWER UNIT ZE9.

Model 11-E Serial Numbers 48657 To 51050
" 14-E " " 605420 " 607147

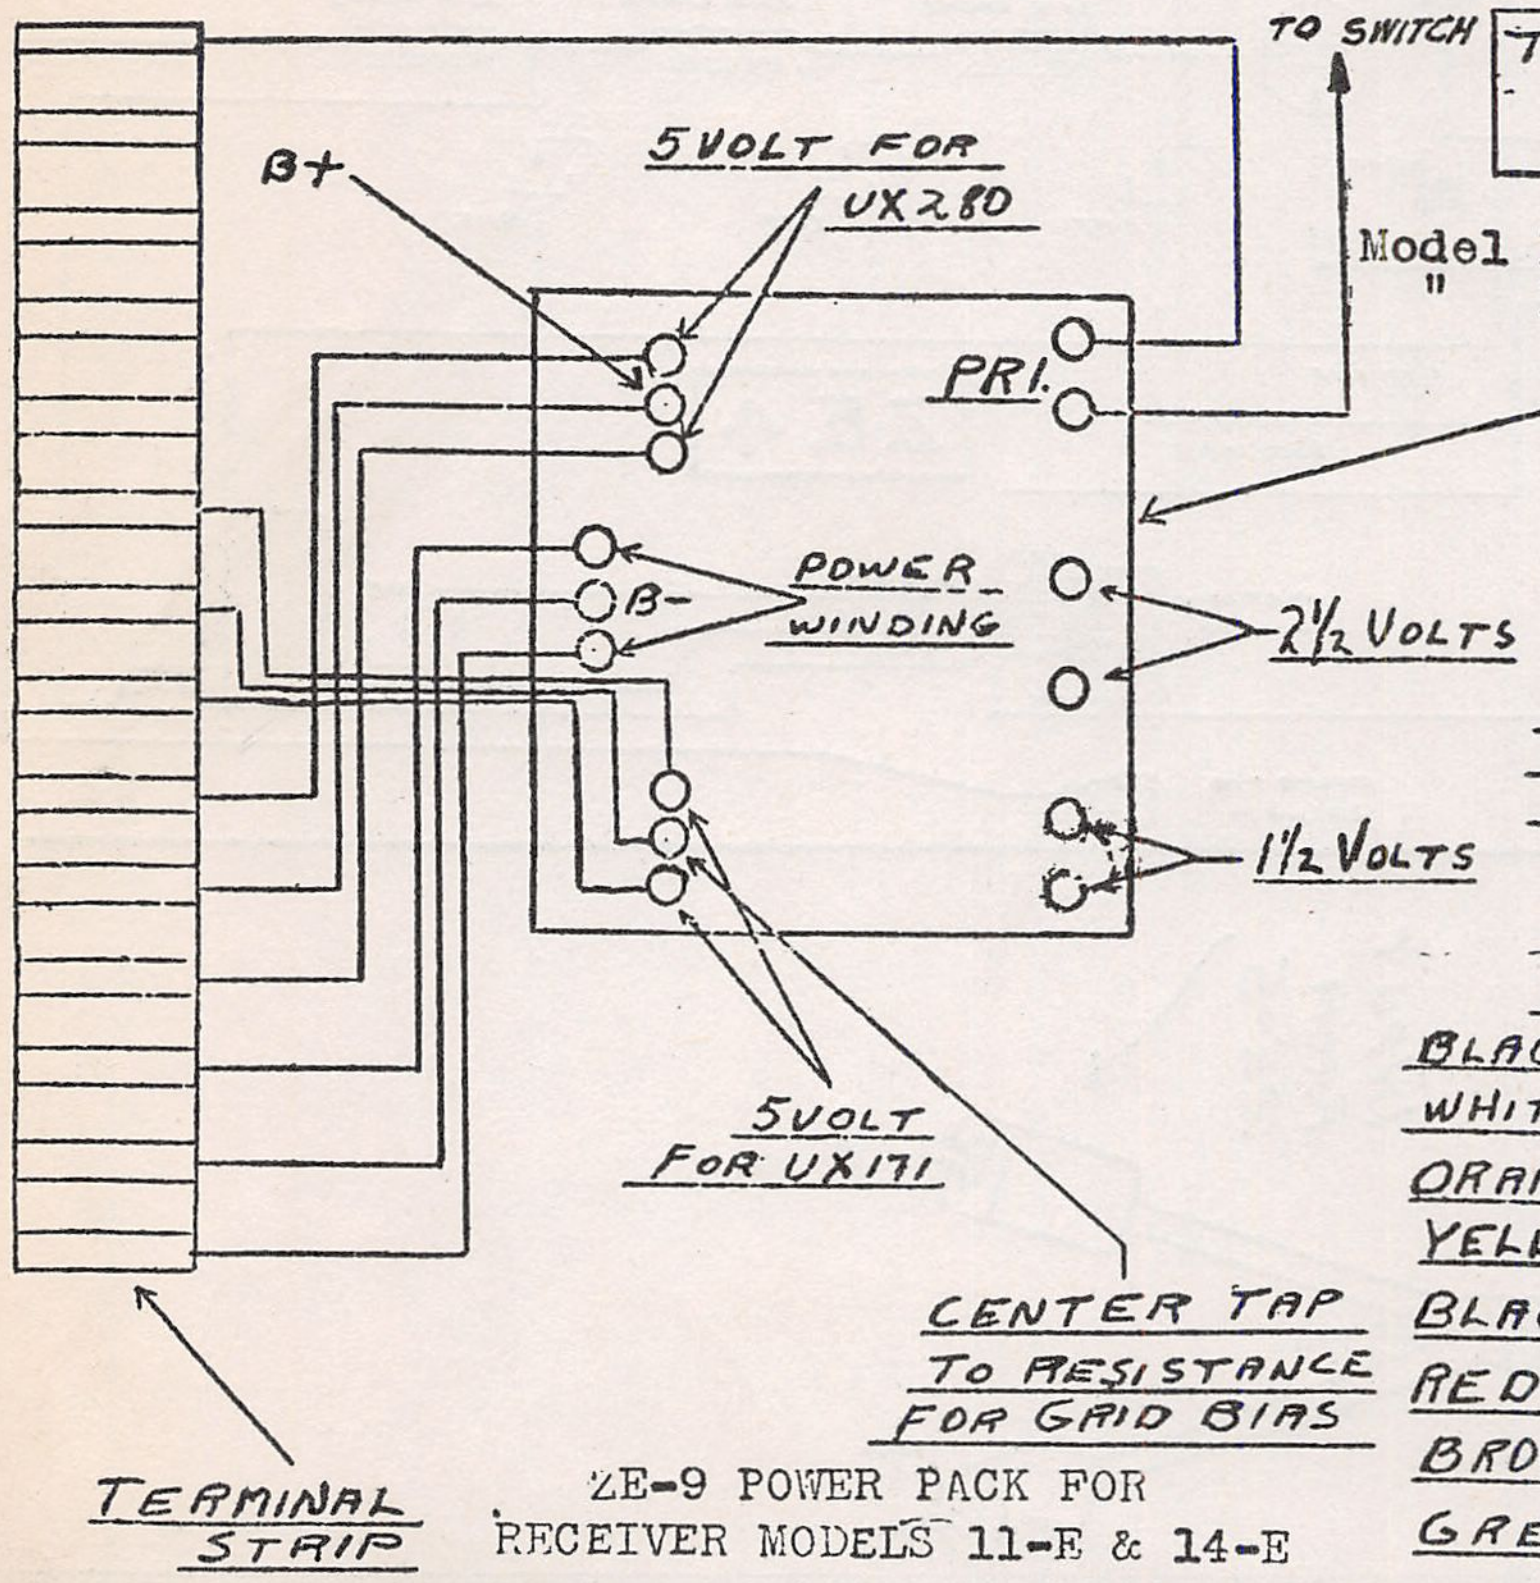
TO SWITCH
B+
5 VOLT FOR UX280
PRI.
TRANSFORMER
B-
POWER WINDING
2½ VOLTS
1½ VOLTS
5 VOLT FOR UX171
CENTER TAP TO RESISTANCE FOR GRID BIAS
TERMINAL STRIP

IF TERMINAL STRIP ON POWER UNIT HAS 18 CONTACTS 2½ AND 1½ VOLT LEADS ARE ATTACHED TO STRIP. OTHERWISE CONNECTED TO MULTICABLE.

MULTICABLE CODE.

BLACK WITH RED MARKER	5 VOLTS
WHITE	5 "
ORANGE	2½ "
YELLOW	1½ "
BLACK	GND
RED	220 "
BROWN	100 "
GREEN	45 "

ZE-9 POWER PACK FOR RECEIVER MODELS 11-E & 14-E

ZENITH RADIO CORP.

MODEL 91,92
Schematic
Original Circuit

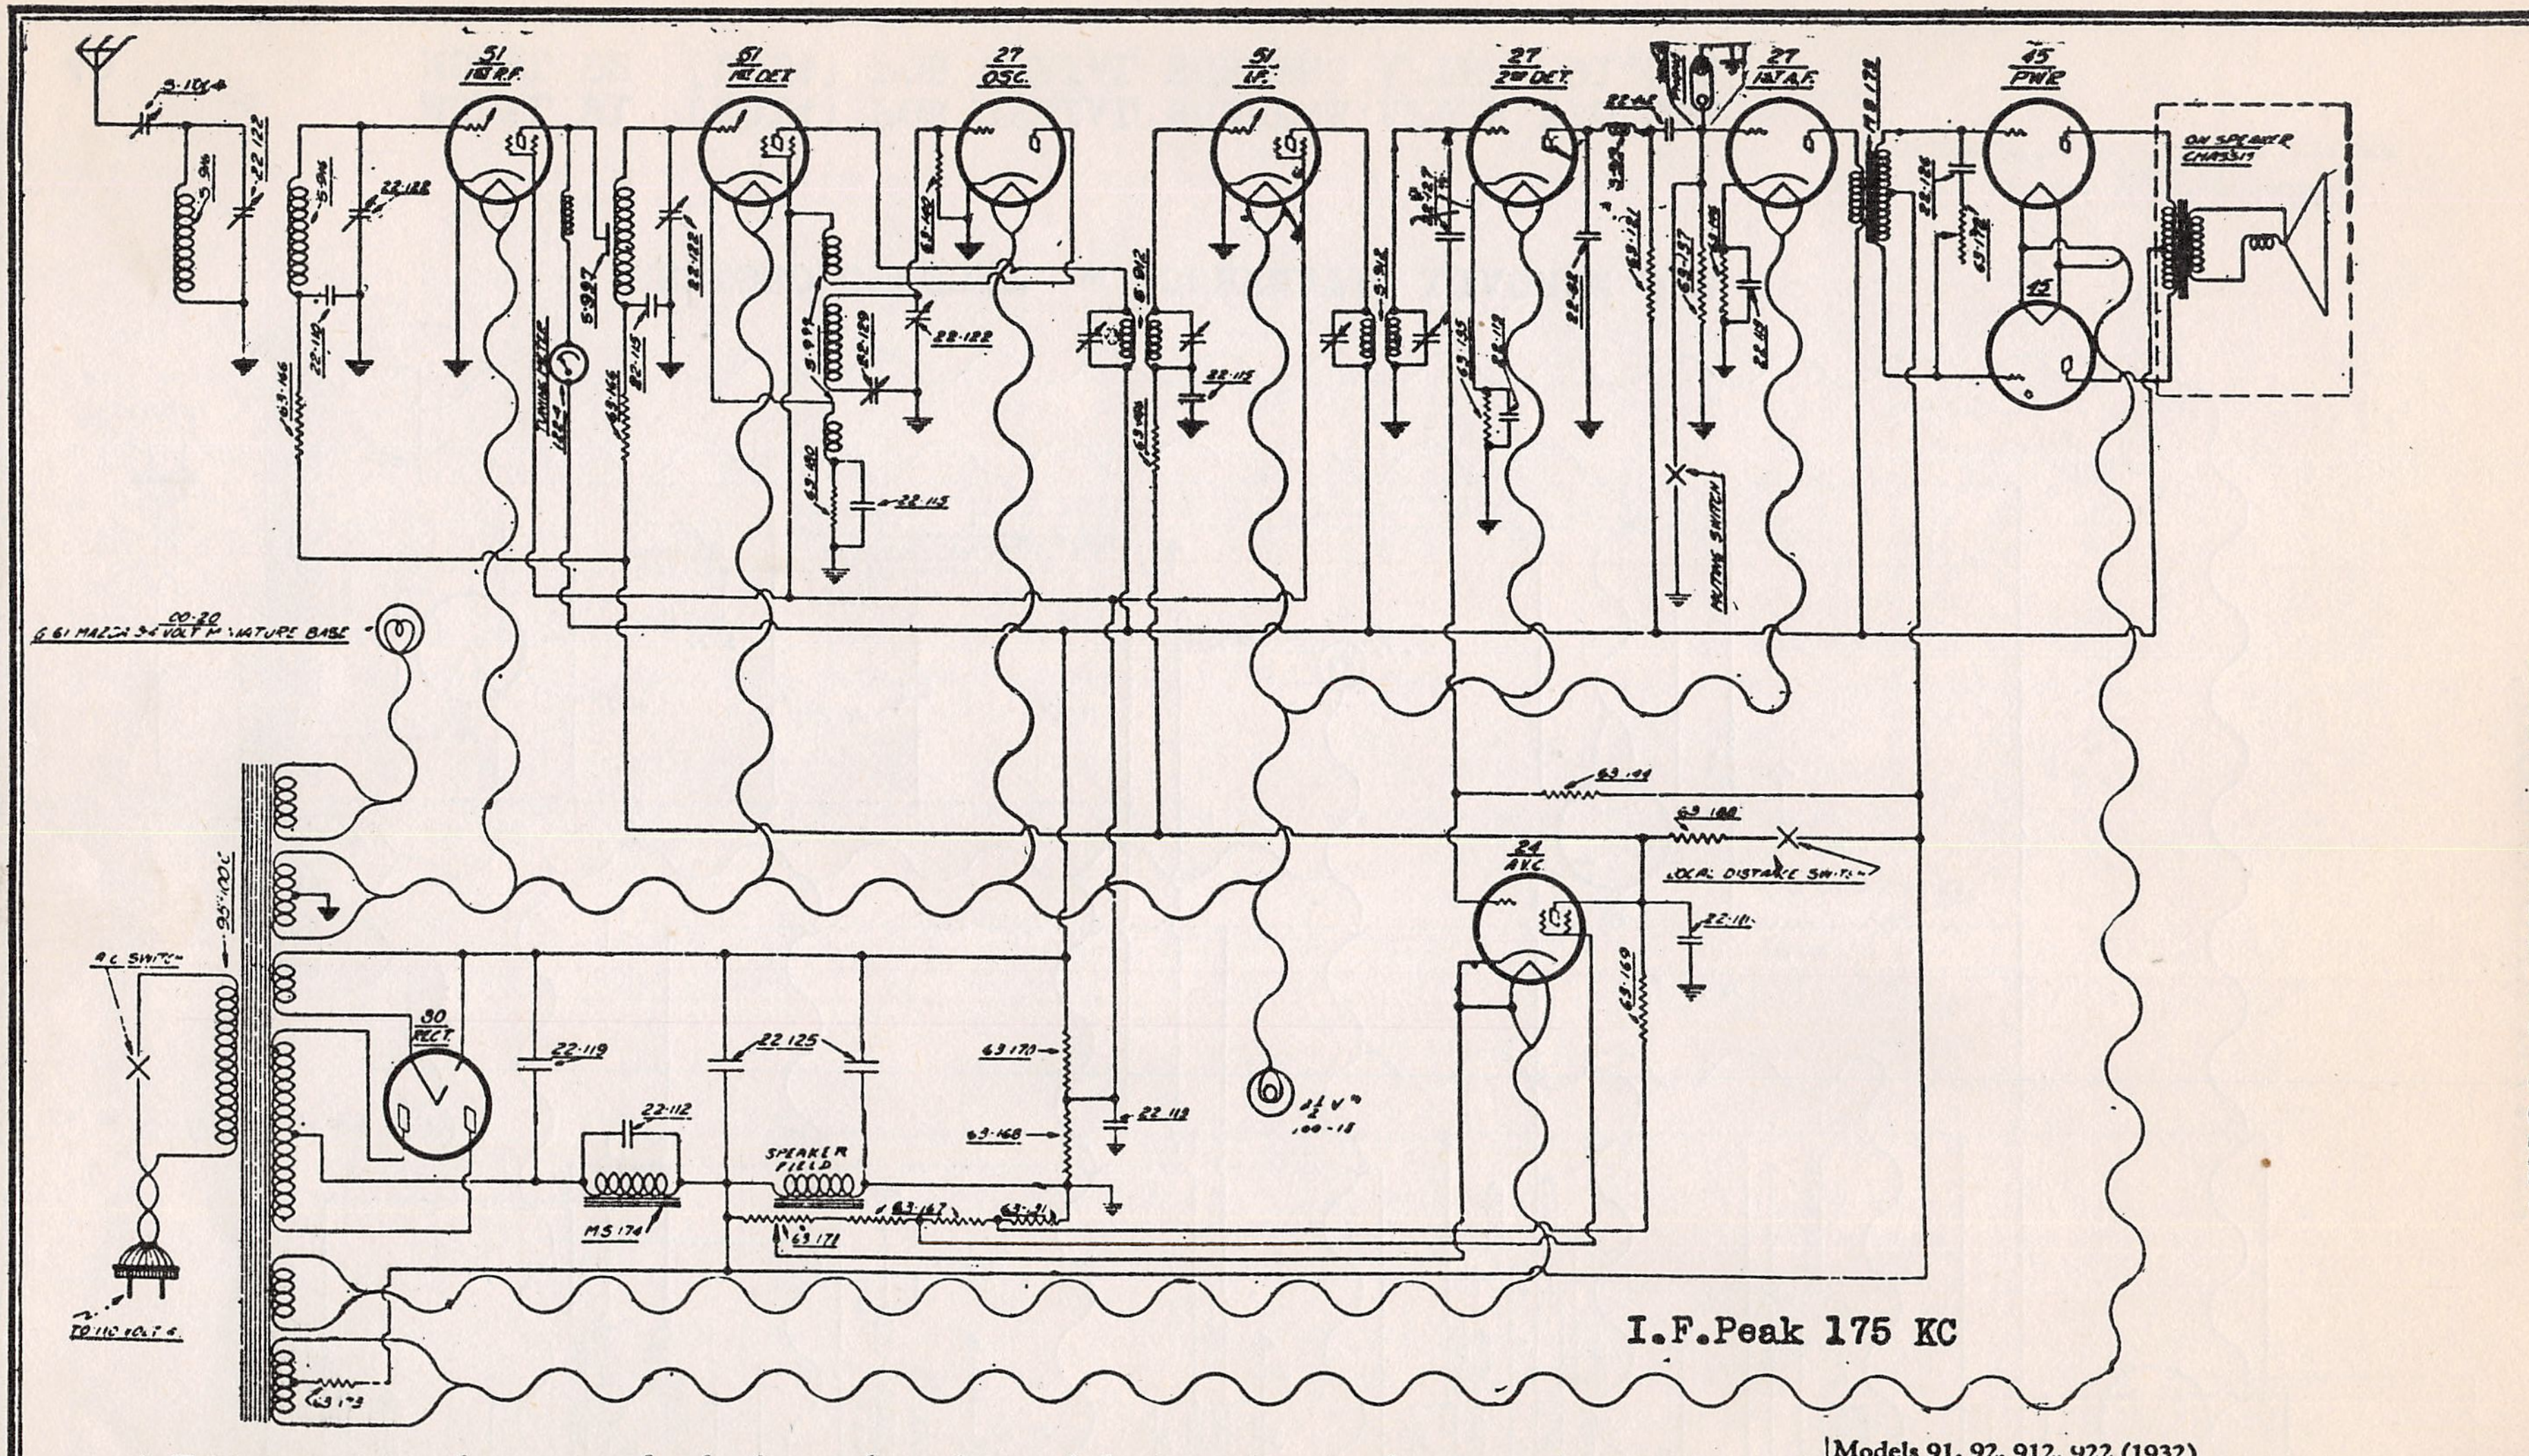
51 1st R.F.
51 1st DET
27 OSC.
51 I.F.
27 2nd DET.
27 1st A.F.
45 PWR
45
ON SPEAKER CHASSIS
30 RECT
24 AVC
SPEAKER FIELD
MUTING SWITCH
LOCAL DISTANCE SWITCH
TUNING METER
A.C. SWITCH
TO 110 VOLT A.C.
95-100C
G 61 MAZDA 3-4 VOLT MINIATURE BASE
OO-20
2½ V
S-106-A
S-916
22-122
22-110
63-166
5-997
22-115
63-180
S-994
22-129
S-912
22-127
63-135
22-112
22-82
63-137
MB-178
22-126
63-178
63-99
63-188
22-111
63-169
63-170
63-168
22-119
22-125
MS-174
63-167
63-171
I.F.Peak 175 KC

A Z-24 automatic volume control tube keeps the volume of the incoming signal constant by varying the grid bias voltage on the 1st R. F., 1st detector, and I. F. stages, in relation to the change of R. F. energy amplified before the 2nd detector. The three grid returns mentioned are coupled to the plate of the automatic volume control tube through three limiting resistors, while the 2nd detector grid couples to the volume control tube grid through a small fixed condenser. Any variation in signal strength on the 2nd detector grid is transferred to the automatic volume control tube which, proportionately varies the voltage drop across the volume control tube plate resistor which changes the bias of the three tubes mentioned.

The local distance switch simply shunts a resistor from plate to cathode of the automatic volume control tube when in the local position, thereby placing a constant bias on the three R. F. stages.

Models 91, 92, 912, 922 (1932)

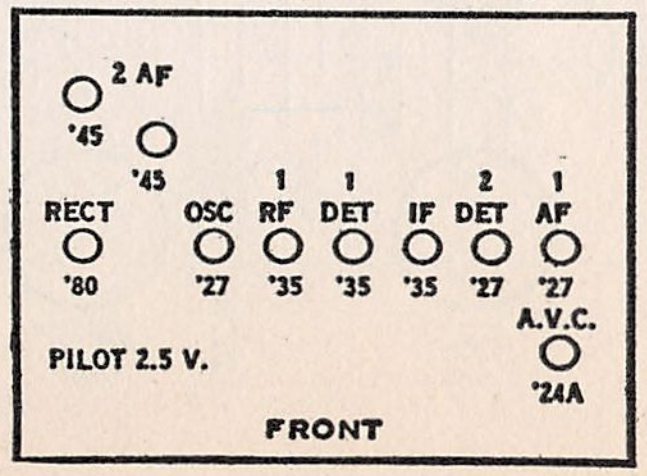
2 AF
'45
'45
RECT
'80
OSC
'27
1
RF
'35
1
DET
'35
IF
'35
2
DET
'27
1
AF
'27
A.V.C.
'24A
PILOT 2.5 V.
FRONT

MODEL 91, 92
Schematic #2

ZENITH RADIO CORP.

PEAK FREQUENCY 175 KC

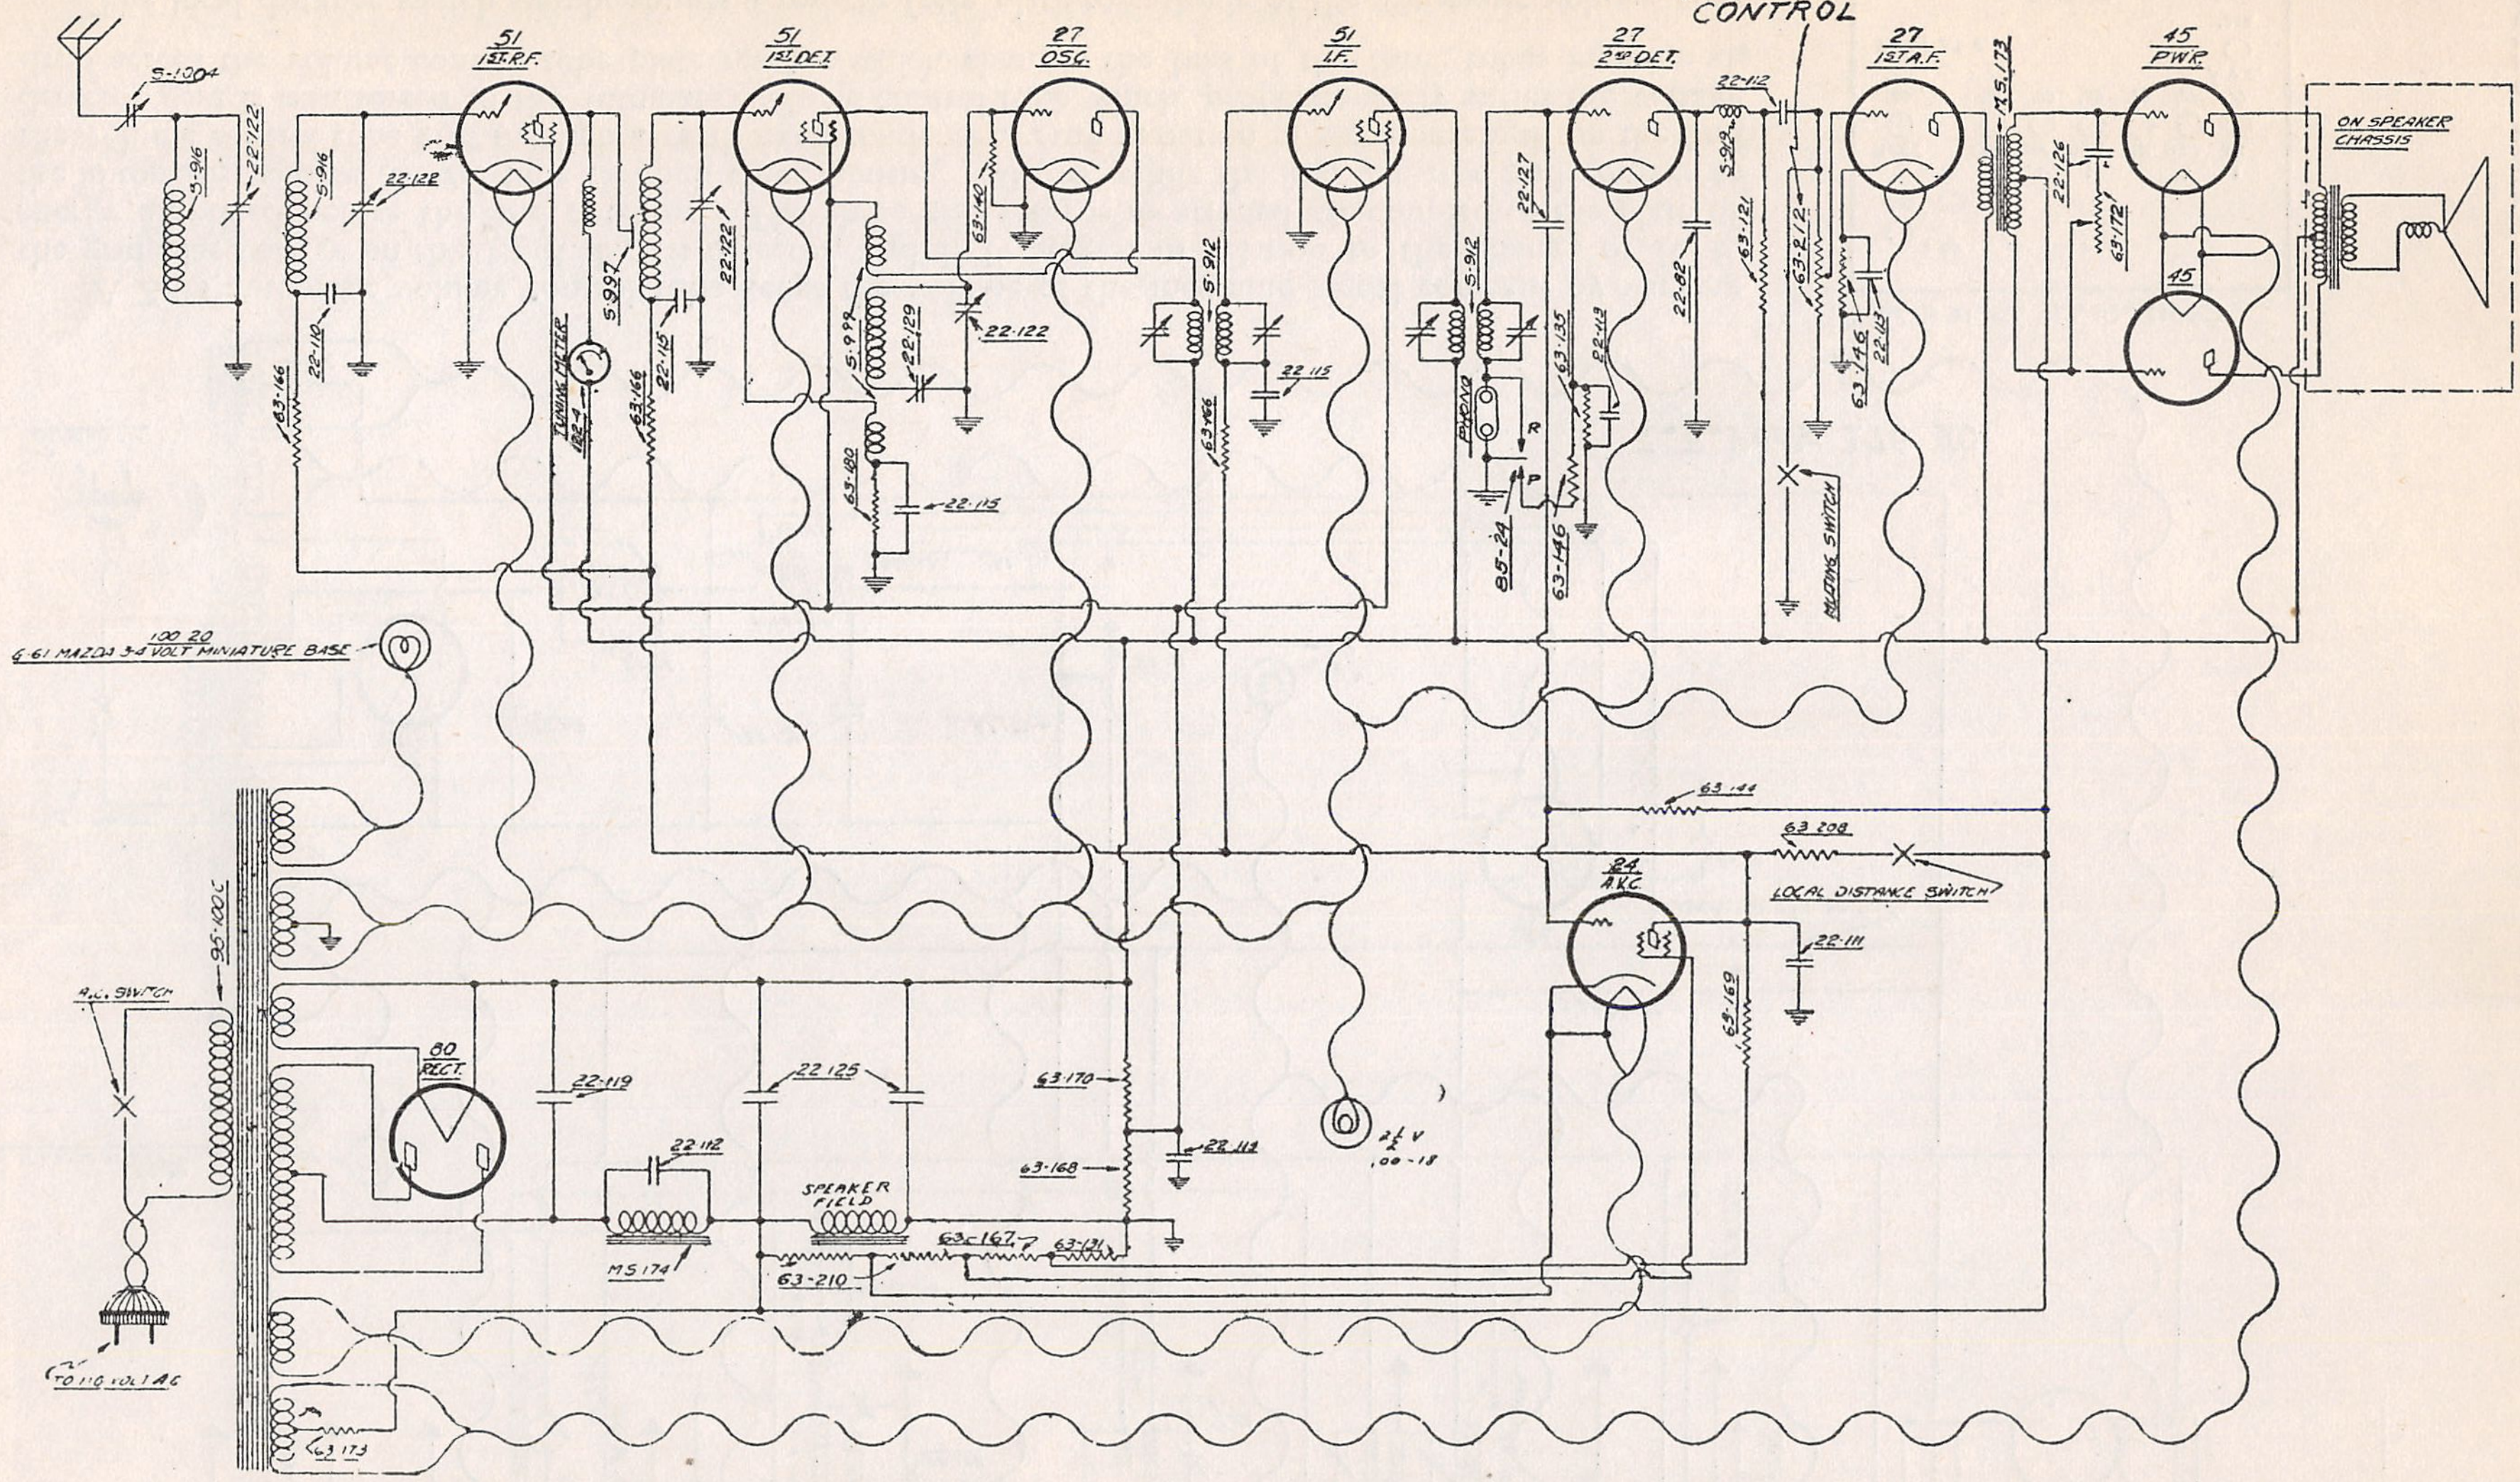
S-1004
S-916
22-122
S-916
22-122
22-110
63-166
51
1ST R.F.
TUNING METER
182-4
S-997
63-166
22-115
22-122
51
1ST DET.
S-999
22-129
22-122
63-180
22-115
27
OSC.
63-140
S-912
63-166
22 115
51
I.F.
S-912
PHONO
R
P
85-24
63-135
63-146
22-113
22-127
27
2ND DET.
22-82
22-112
S-919
63-121
VOLUME
CONTROL
63-212
MUTING SWITCH
63-146
22-113
27
1ST A.F.
M.S. 173
22-126
63-172
45
PWR.
45
ON SPEAKER
CHASSIS
100 20
G-61 MAZDA 3-4 VOLT MINIATURE BASE
95-100C
A.C. SWITCH
TO 110 VOLT AC
63 173
80
RECT.
22-119
22 112
MS 174
22 125
SPEAKER
FIELD
63-210
63-167
63-121
63-170
63-168
22 114
2½ V
100-18
63-144
63 208
LOCAL DISTANCE SWITCH
24
A.V.C.
22-111
63-169

REVISED CIRCUIT - SCHEMATIC DIAGRAM # 2

ZENITH RADIO CORP.
CHICAGO, ILL.
MODEL 2014 10 TUBE SUPERHETERODYNE. A.W.M. 6-18-31.

MODEL 91 (2014) FOR SERIAL NUMBERS AFTER 373,334
MODEL 92 (2014) FOR SERIAL NUMBERS AFTER 301,394

ZENITH RADIO CORP.

MODEL 91, 92
Schematic #3

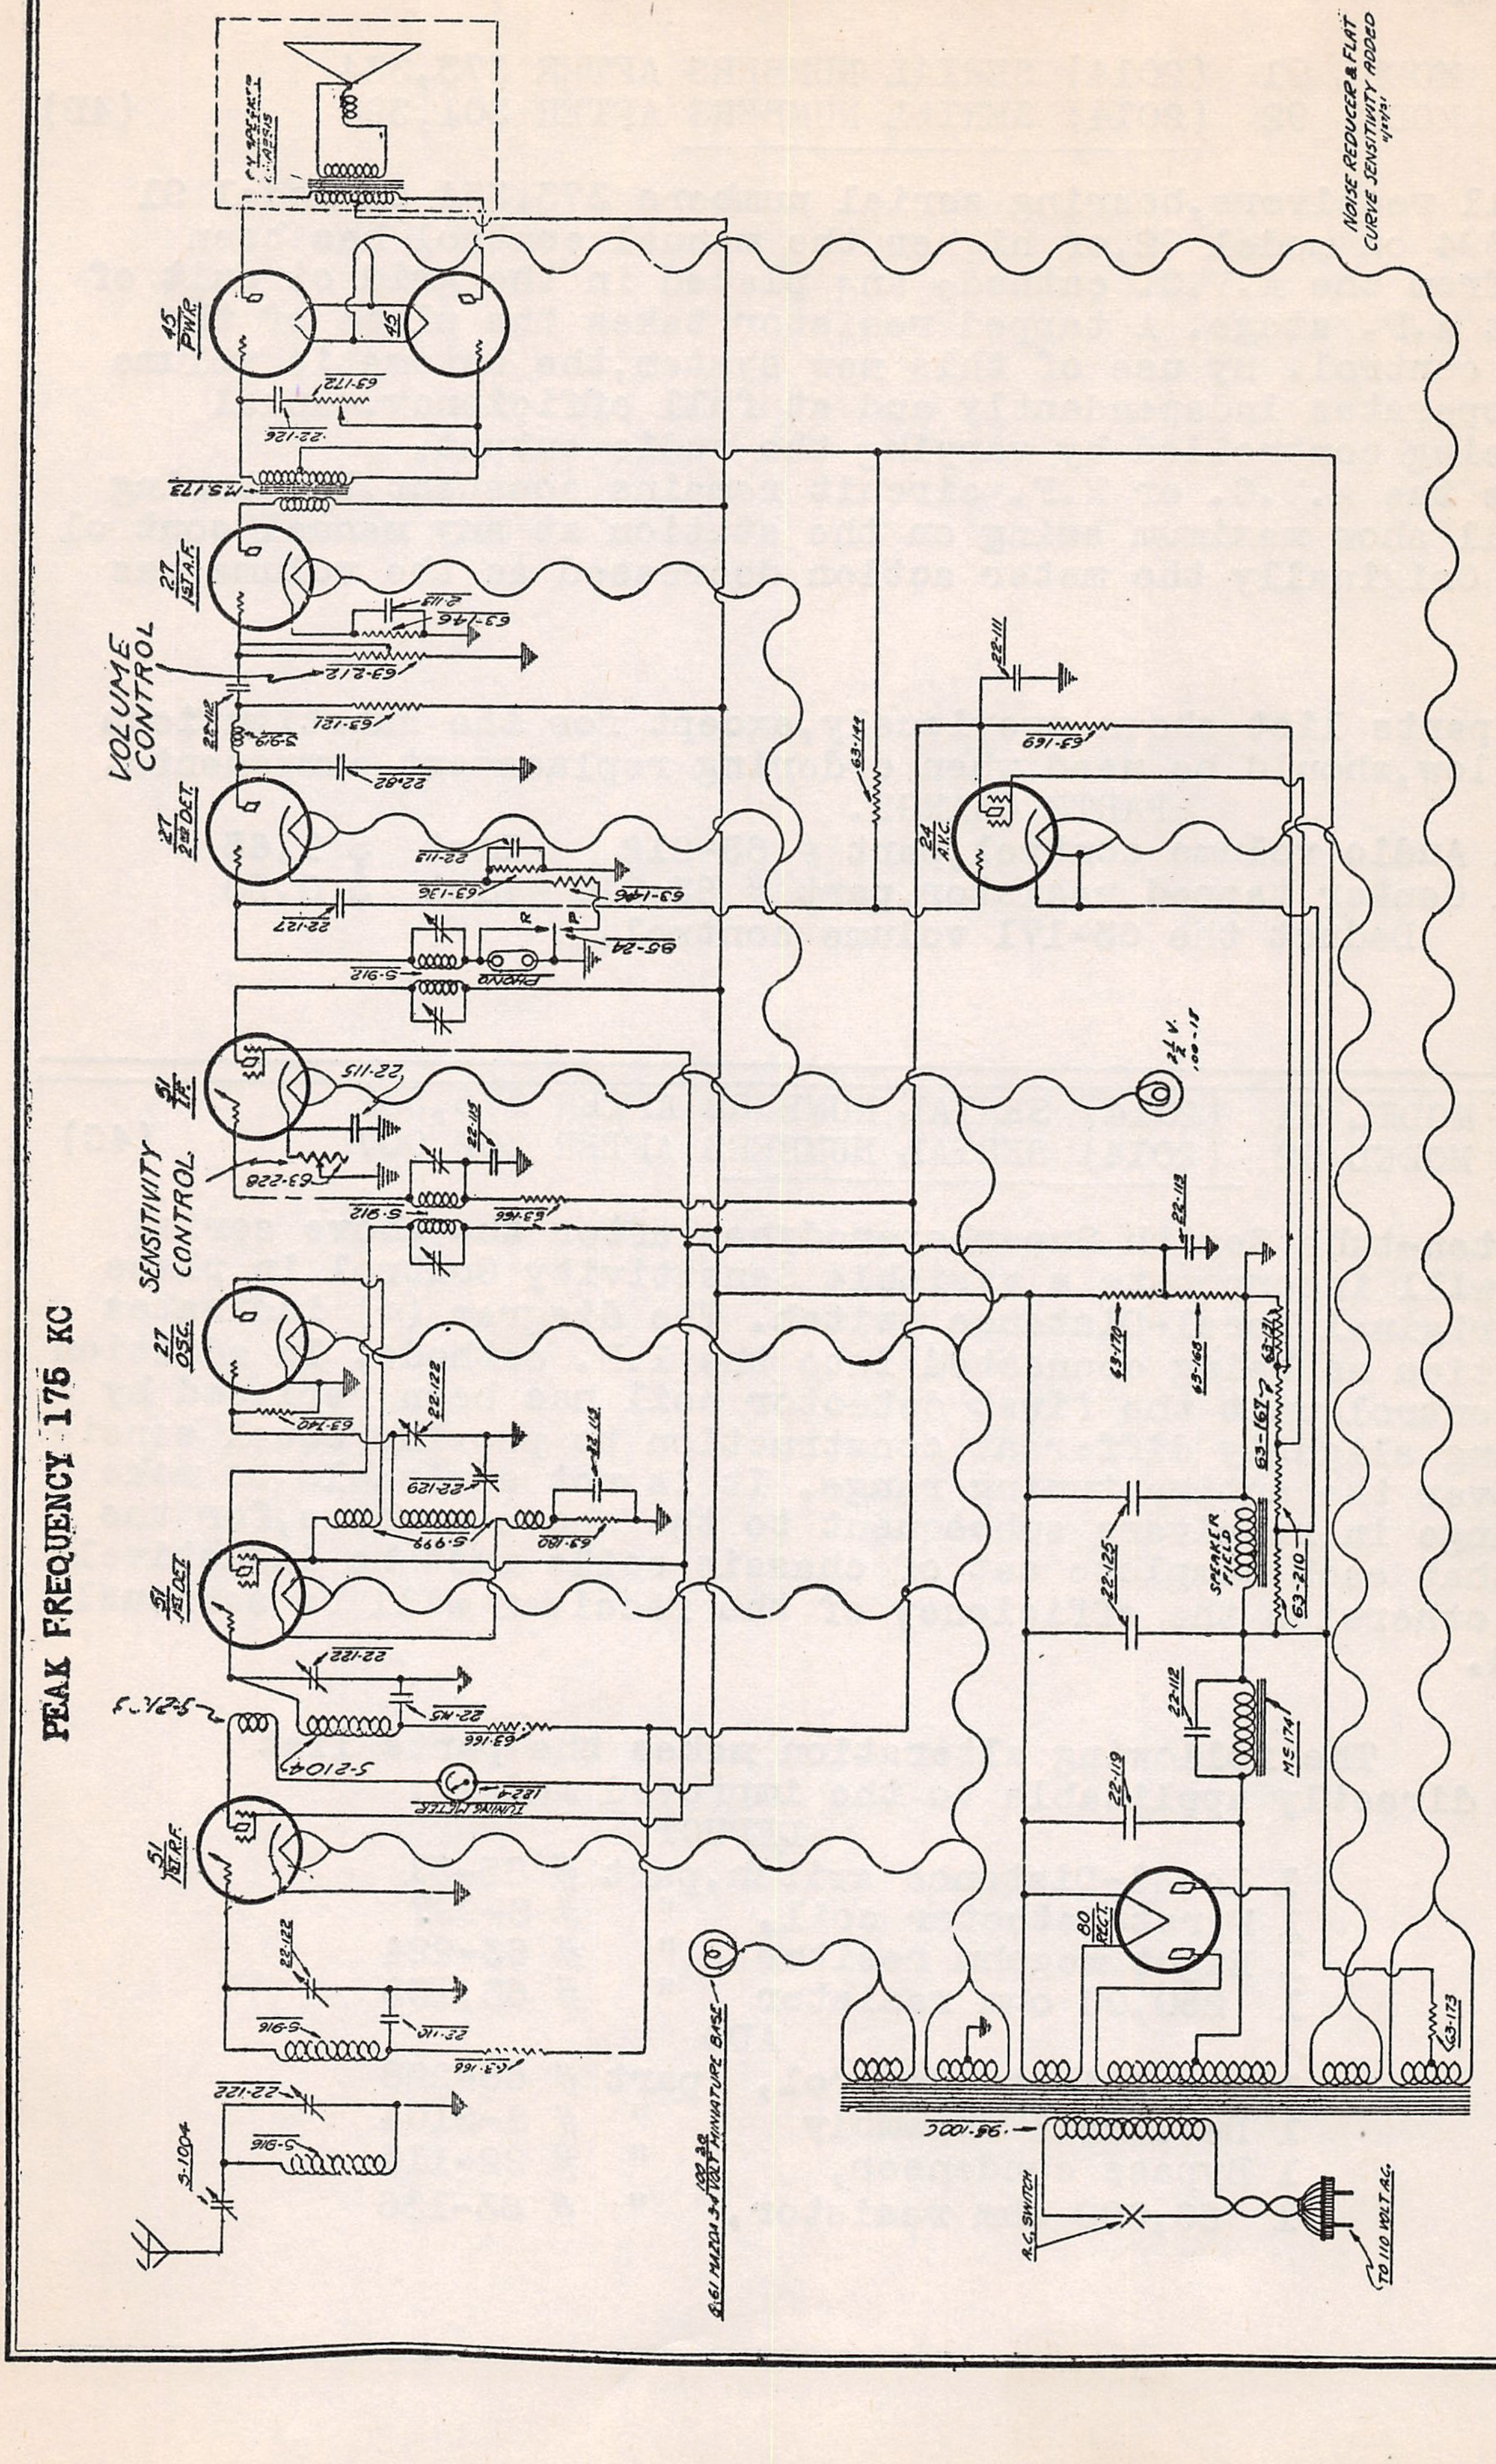
PEAK FREQUENCY 175 KC
45 PWR
45
27 1st A.F.
VOLUME CONTROL
27 2nd DET.
24 A.V.C.
51 I.F.
SENSITIVITY CONTROL
27 OSC.
51 1st DET.
51 1st R.F.
80 RECT.
SPEAKER FIELD
TUNING METER
PHONO
2½ V.
R.C. SWITCH
TO 110 VOLT A.C.
6.61 MAZDA 3.4 VOLT MINIATURE BASE
NOISE REDUCER & FLAT CURVE SENSITIVITY ADDED
ZENITH RADIO CORP.
CHICAGO, ILL.
MODEL 2014 10 TUBE SUPERHETERODYNE

REVISED CIRCUIT - SCHEMATIC DIAGRAM # 3

MODEL 91 (2014) FOR SERIAL NUMBERS AFTER 375,532
MODEL 92 (2014) FOR SERIAL NUMBERS AFTER 302,007

ZENITH RADIO CORP.

* MODEL 91 (2014) SERIAL NUMBERS AFTER 373,334
* MODEL 92 (2014) SERIAL NUMBERS AFTER 301,394 (4B)

In all receivers,bearing serial numbers 373,334 on model 91 and 301,394 on model 92,or higher,the manual control has been removed from the A.V.C. cathode and placed in the grid circuit of the first A.F. stage. A tapped resistor takes the place of the original control. By use of this new system,the automatic volume control operates independently and at full efficiency,manual volume being controlled by varying the audio output.

Since the A.V.C. or R.F. circuit remains constant,the tuning meter will show maximum swing on the station at any manual control setting. Originally the meter action decreased as the volume was lowered.

The parts list shown previously,except for the substitutions given below,should be used when ordering replacement components.

PARTS CHANGE.

1 Audio volume control,part # 63-212	List	$ 1.65
1 Center tapped resistor,part # 63-210	List	$ 0.50

Deduct the 63-171 volume control.

---

* MODEL 91 (2014) SERIAL NUMBERS AFTER 375,532
* MODEL 92 (2014) SERIAL NUMBERS AFTER 302,007 (4C)

All ten-tube Zenith Superheterodynes after the above serial numbers will incorporate a variable Sensitivity Control in place of the original Local-Distance switch. The diagram (*) indicates its position as being connected into the I.F. cathode. In addition to the control unit the first detector coil has been replaced by one having slightly different construction to provide equal sensitivity over the entire tuning range. It is not advisable to make this change in receivers subsequent to the above numbers,for the reason that each complete set of chassis coils must be inductively matched,otherwise the efficiency of the receiver will be seriously affected.

The following alteration makes the parts list directly applicable to the improved models:

DEDUCT

1 Local-Distance switch,part	# 85-31
1 First detector coil, "	# S-997
1 Eight megohm resitor "	# 63-224
1 250,00 ohm resistor "	# 63,135

ADD

1 Sensitivity Control, part	# 63-228
1 Det. coil assembly "	# S-2104
1 Bypass condenser, "	# 22-115
1 50,000 ohm resistor, "	# 63-136

ZENITH RADIO CORP.

MODEL 91, 92
Balancing Notes

Balancing Chassis

Every Zenith Superheterodyne Receiver is carefully balanced on laboratory equipment before leaving the factory and should not require further attention in this respect. However, in the event that some part of the R. F circuit has been changed, or the adjustments shifted by mishandling, the chassis may be rebalanced as follows:

If an oscillator is available more accurate results will be obtained It should be accurately calibrated from 1500 to 550 kilocycles and should also have provision for generating a 175 kilocycle signal. In cases where an oscillator is not available a fairly good result may be had by listening to stations which operate as nearly as possible to the extreme ends of the dial. Although an output meter will give most accurate results, satisfactory adjustments can be made simply by listening to the speaker.

The chassis should be removed from the cabinet so that all adjustments are easily accessible. Next place the test oscillator in operation and connect it direct to the antenna and ground posts of the receiver. It should then be set to 1500 kilocycles and the receiver tuned to the same reading on the dial. If the oscillator is not accurate the stations will not be received on their proper calibration. If a station is used for this purpose, the dial pointer should first be set to the exact frequency of the station being received. Beginning with the variable condenser tuning section at the extreme left, which tunes the oscillator circuit, the trimmer should be regulated for maximum response, in either the loud speaker or output meter. It will be noticed that the second section does not employ a vernier adjustment. This stage is resonated by adjusting the antenna compensator knob as explained in the instruction card. The third, or 1st R. F. trimmer, is adjusted in the same manner as the oscillator. If at any time the volume reaches a very high level, so that it is not possible to determine slight changes, it should be reduced by means of the volume control knob so as to be barely audible. The fourth, or 1st detector section, is next in order and its trimmer should also be adjusted for resonance.

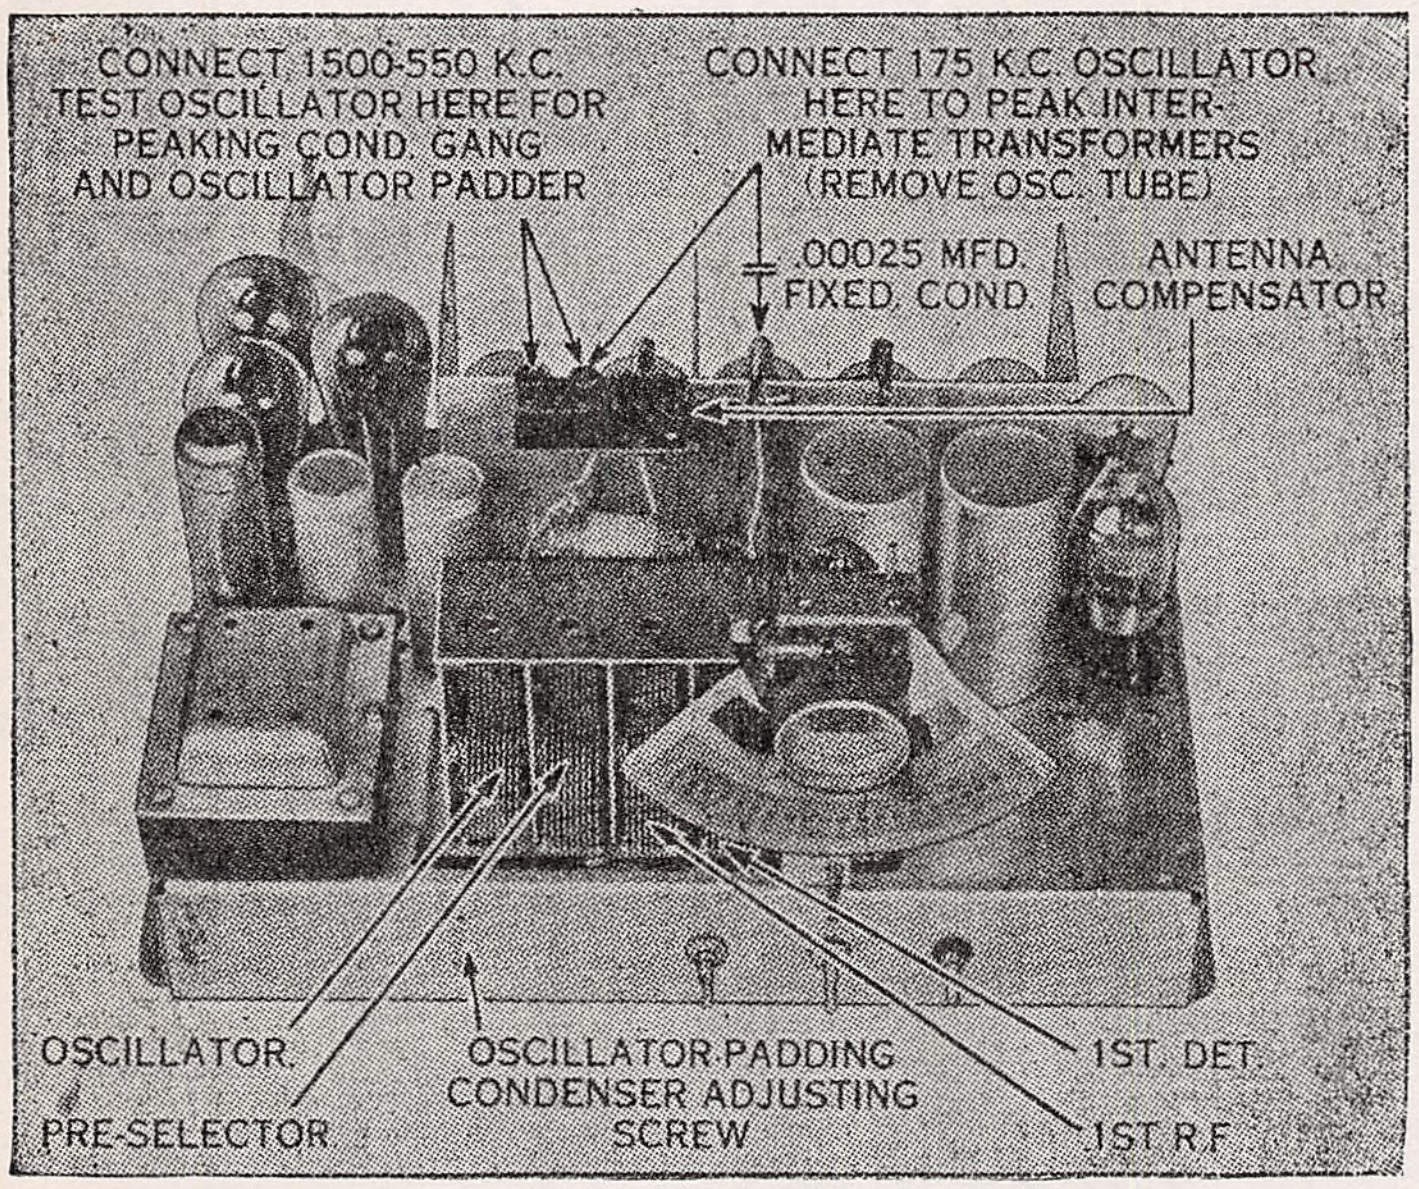
CONNECT 1500-550 K.C. TEST OSCILLATOR HERE FOR PEAKING COND. GANG AND OSCILLATOR PADDER
CONNECT 175 K.C. OSCILLATOR HERE TO PEAK INTERMEDIATE TRANSFORMERS (REMOVE OSC. TUBE)
.00025 MFD. FIXED COND.
ANTENNA COMPENSATOR
OSCILLATOR
PRE-SELECTOR
OSCILLATOR PADDING CONDENSER ADJUSTING SCREW
1ST. DET.
1ST R.F.

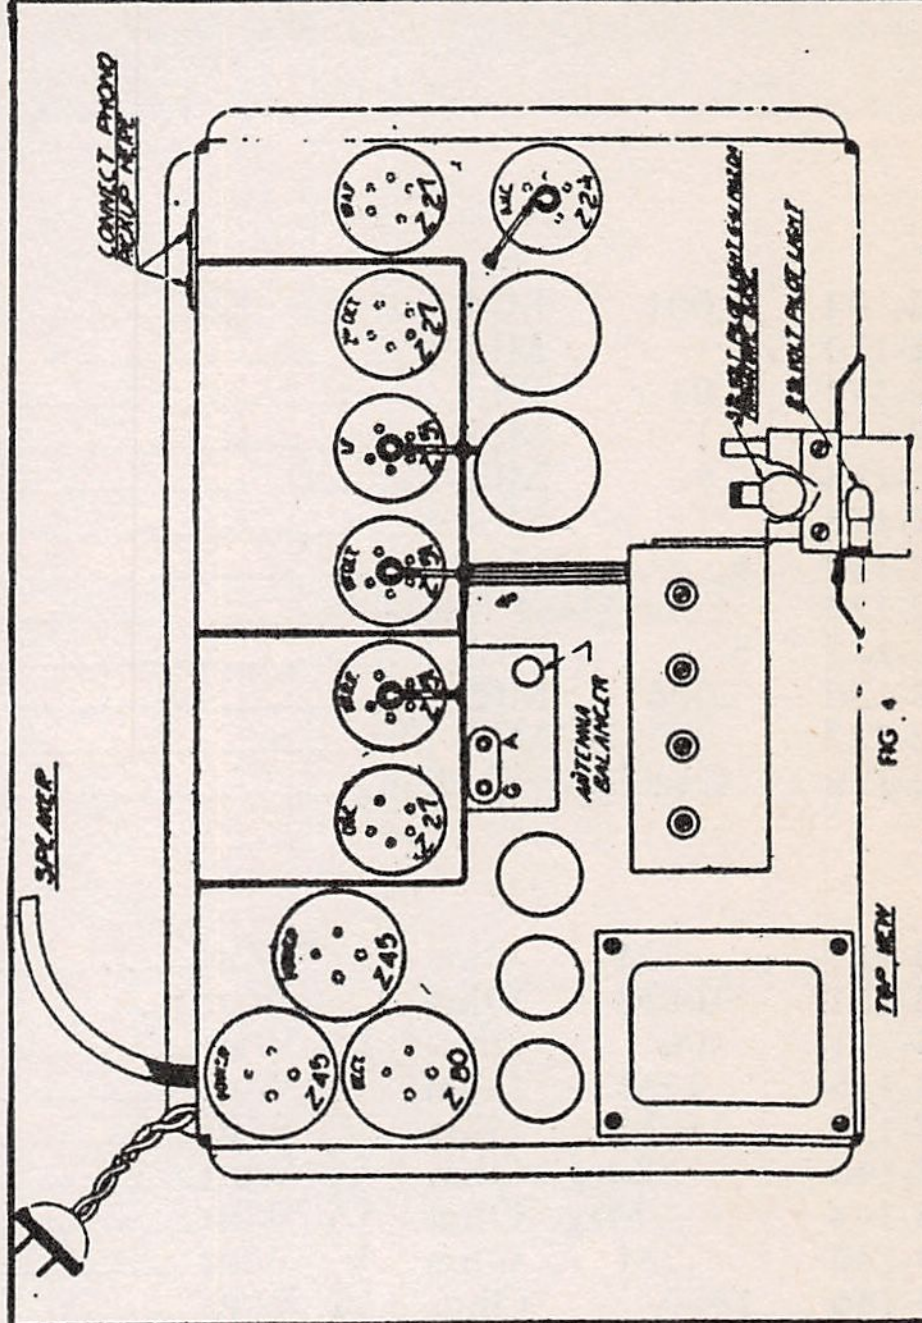

FIG. 4

TUBE LAYOUT - Showing Position and Circuit Function of each.

After the vernier adjustments have been completed the test oscillator should be set at 550 kilocycles and the dial of the receiver turned until the oscillator signal is tuned in. Now the oscillator padding condenser (see fig. 3) should be very carefully adjusted with a screw driver for maximum output of the receiver, while rocking the tuning condenser back and forth over the signal. This padding adjustment brings the oscillating circuit of the receiver in resonance with the remaining tuned circuits and, thereby, enables it to tract accurately over the entire scale. The receiver will now operate at full efficiency and all stations will be received at their proper calibration. If this is not found to be entirely so, the entire balancing operation should be repeated.

The intermediate transformers used in the ten tube Superheterodyne have been accurately peaked at 175 kilocycles on a temperature controlled crystal oscillator before leaving the factory. It is not recommended that their adjustments be tampered with unless an oscillator is available which is very accurately calibrated at 175 kilocycles, or unless the serviceman is absolutely certain the trouble lies in their adjustment. However, if it is necessary to check the adjustments, the 175 K. C. test oscillator may be connected to the grid terminal of the 1st detector through a .00025 fixed condenser. The ground lead of the test oscillator is connected to the ground post of the receiver. The oscillator tube must be removed from the chassis while this operation is being performed. Four adjusting screws are provided under the chassis directly beneath the intermediate transformers, which tune the plate circuit of the 1st detector, grid and plate circuits of the I. F. stage, and grid circuit of the second detector. (See wiring diagram.) Beginning with the 2nd detector grid vernier, each adjusting screw should, in turn, be set for maximum signal output from the speaker or output meter. For best results the verniers should be gone over twice in the same rotation always keeping the output from the test oscillator at the weakest possible strength in order to determine slight variations in volume.

MODEL 91,92
Parts List

ZENITH RADIO CORP.

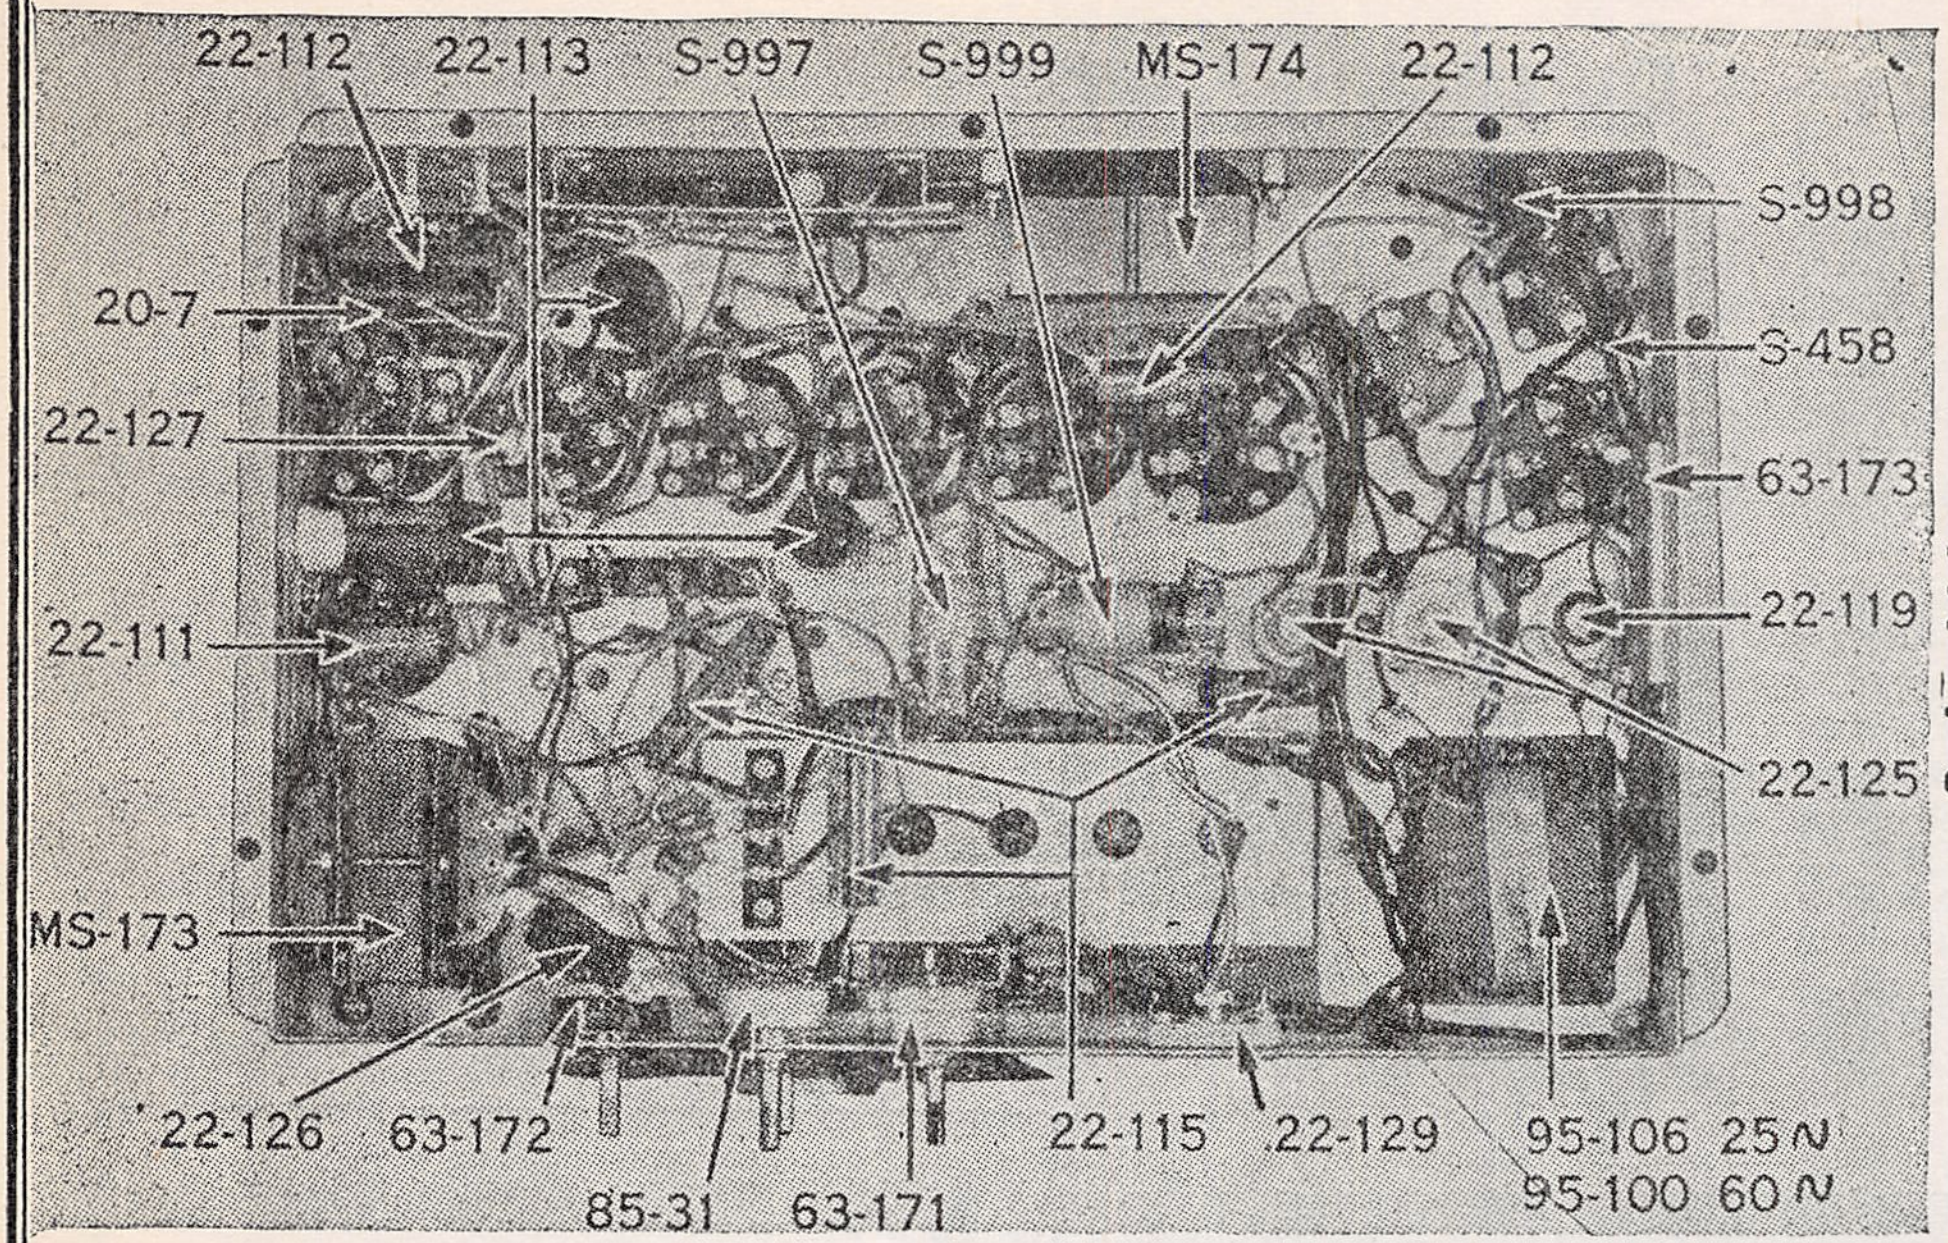

Socket Voltages

Type	Position	Fil Volts	Plate Volts	Control Grid Volts	Cathode Volts	Plate M A	S C Volts
Z-51	1st R. F.	2.25	175	2	0	2	100
Z-51	1st. Det.	2.25	175	3.5	4	3.5	90
Z-27	Osc.	2.2	70	0	0	8.5	0
Z-51	I F	2.2	200	4	0	2.5	115
Z-27	2nd Det.	2.2	115	0	9.	5	0
Z-27	1st Aud.	2.2	145	0	13.	6.5	0
Z-45	P P	2.2	275	54.	0	30	0
Z-45	P P	2.2	275	54.	0	30.	0
Z-24	A. V. C.	2.2	35	4	0	0	54
Z-80	Rect.	4.8	355	0	0	76	0

Voltage readings taken with a Weston type 565 tester. Manual volume control in maximum position and antenna and ground disconnected. Line voltage 112

CONDENSERS

22- 82	.001 Mfd.	(2nd Det. Plate)		$ .30
22-110	.1 Mfd.	(R. F.)		.50
22-111	.03 Mfd.	(A.V.C. Plate)		.30
22-112	.1 Mfd.	(2 Used. See Footnote)		.35
22-113	.5 Mfd.	(3 Used. See Footnote)		.50
22-115	.1 Mfd.	(3 Used. See Footnote)		.30
22-119	6. Mfd.	(High Voltage Electrolytic)		1.50
22-122	Four Gang Variable			7.00
22-125	8. Mfd.	(Low Voltage Electrolytic. 2 Used)		1.50
22-126	.006 Mfd.	(Tone Control)		.55
22-127	.000025 Mfd.	(A.V.C. Coupling)		.35
22-129	Oscillator, Padding			.75

RESISTORS

63-111	2M Ohm 1 Watt	(1st A. F. Cathode)	$ .30
63-121	100M Ohm 1 Watt	(2nd Det. Plate)	.30
63-131	400 Ohm ½ Watt	(A.V.C. Voltage Divider)	.30
63-135	25M Ohm ½ Watt	(2nd Detector Cathode)	.30
63-137	250M Ohm ½ Watt	(1st A. F. Grid)	.30
63-140	1 Meg. Ohm ½ Watt	(Oscillator Grid)	.30
63-144	3 Meg. Ohm ½ Watt	(A.V.C. Grid)	.30
63-146	2M Ohm ½ Watt	(1st A. F. Cathode)	.30
63-166	1400 Ohm ¼ Watt	(3 Used. See Footnote)	.30
63-167	8M Ohm 1 Watt	(A.V.C. Divider)	.30
63-168	3600 Ohm 2 Watt	(Plate Voltage Divider)	.50
63-169	400M Ohm ½ Watt	(A.V.C. Plate)	.30
63-170	2800 Ohm 2 Watt	(Plate Voltage Divider)	.50
63-171	Manual Volume Control and Switch Assembly		1.65
63-172	Tone Control		1.00
63-173	750 Ohm Metal Mounting	(Power Tube Bias)	.40
63-180	1M Ohm ½ Watt	(1st Detector Cathode)	.30
63-188	4½ Meg. Ohm ½ Watt	(A.V.C. Plate)	.30

Note: All resistors employed in this receiver are marked in accordance with R. M. A. standards. Color code charts may be obtained by writing direct to the Erie Resistor Corp., Erie, Pa.

S-912	Intermediate Transformer Complete (2 Used) (Specify with or without grid lead)	$2.50
S-916	Antenna and 1st R. F. Coils	.75
S-997	1st Detector Complete	1.25
S-999	Oscillator Coil Complete	1.25

Note: 22-112 Filter Choke By-pass and 1st Audio Coupling Condensers
22-113 1st R. F., 1st Det. and I. F. Screen. 2nd Det. and A. F. Cathode.
22-115 2nd Det. and I. F. Grid Return. 1st Det. Cathode.
63-166 1st R. F., 1st Det. and I. F. Grid Return Resistor.

ZENITH RADIO CORP.

MODEL 10,11,12,102,112,122
Schematic,Parts List.

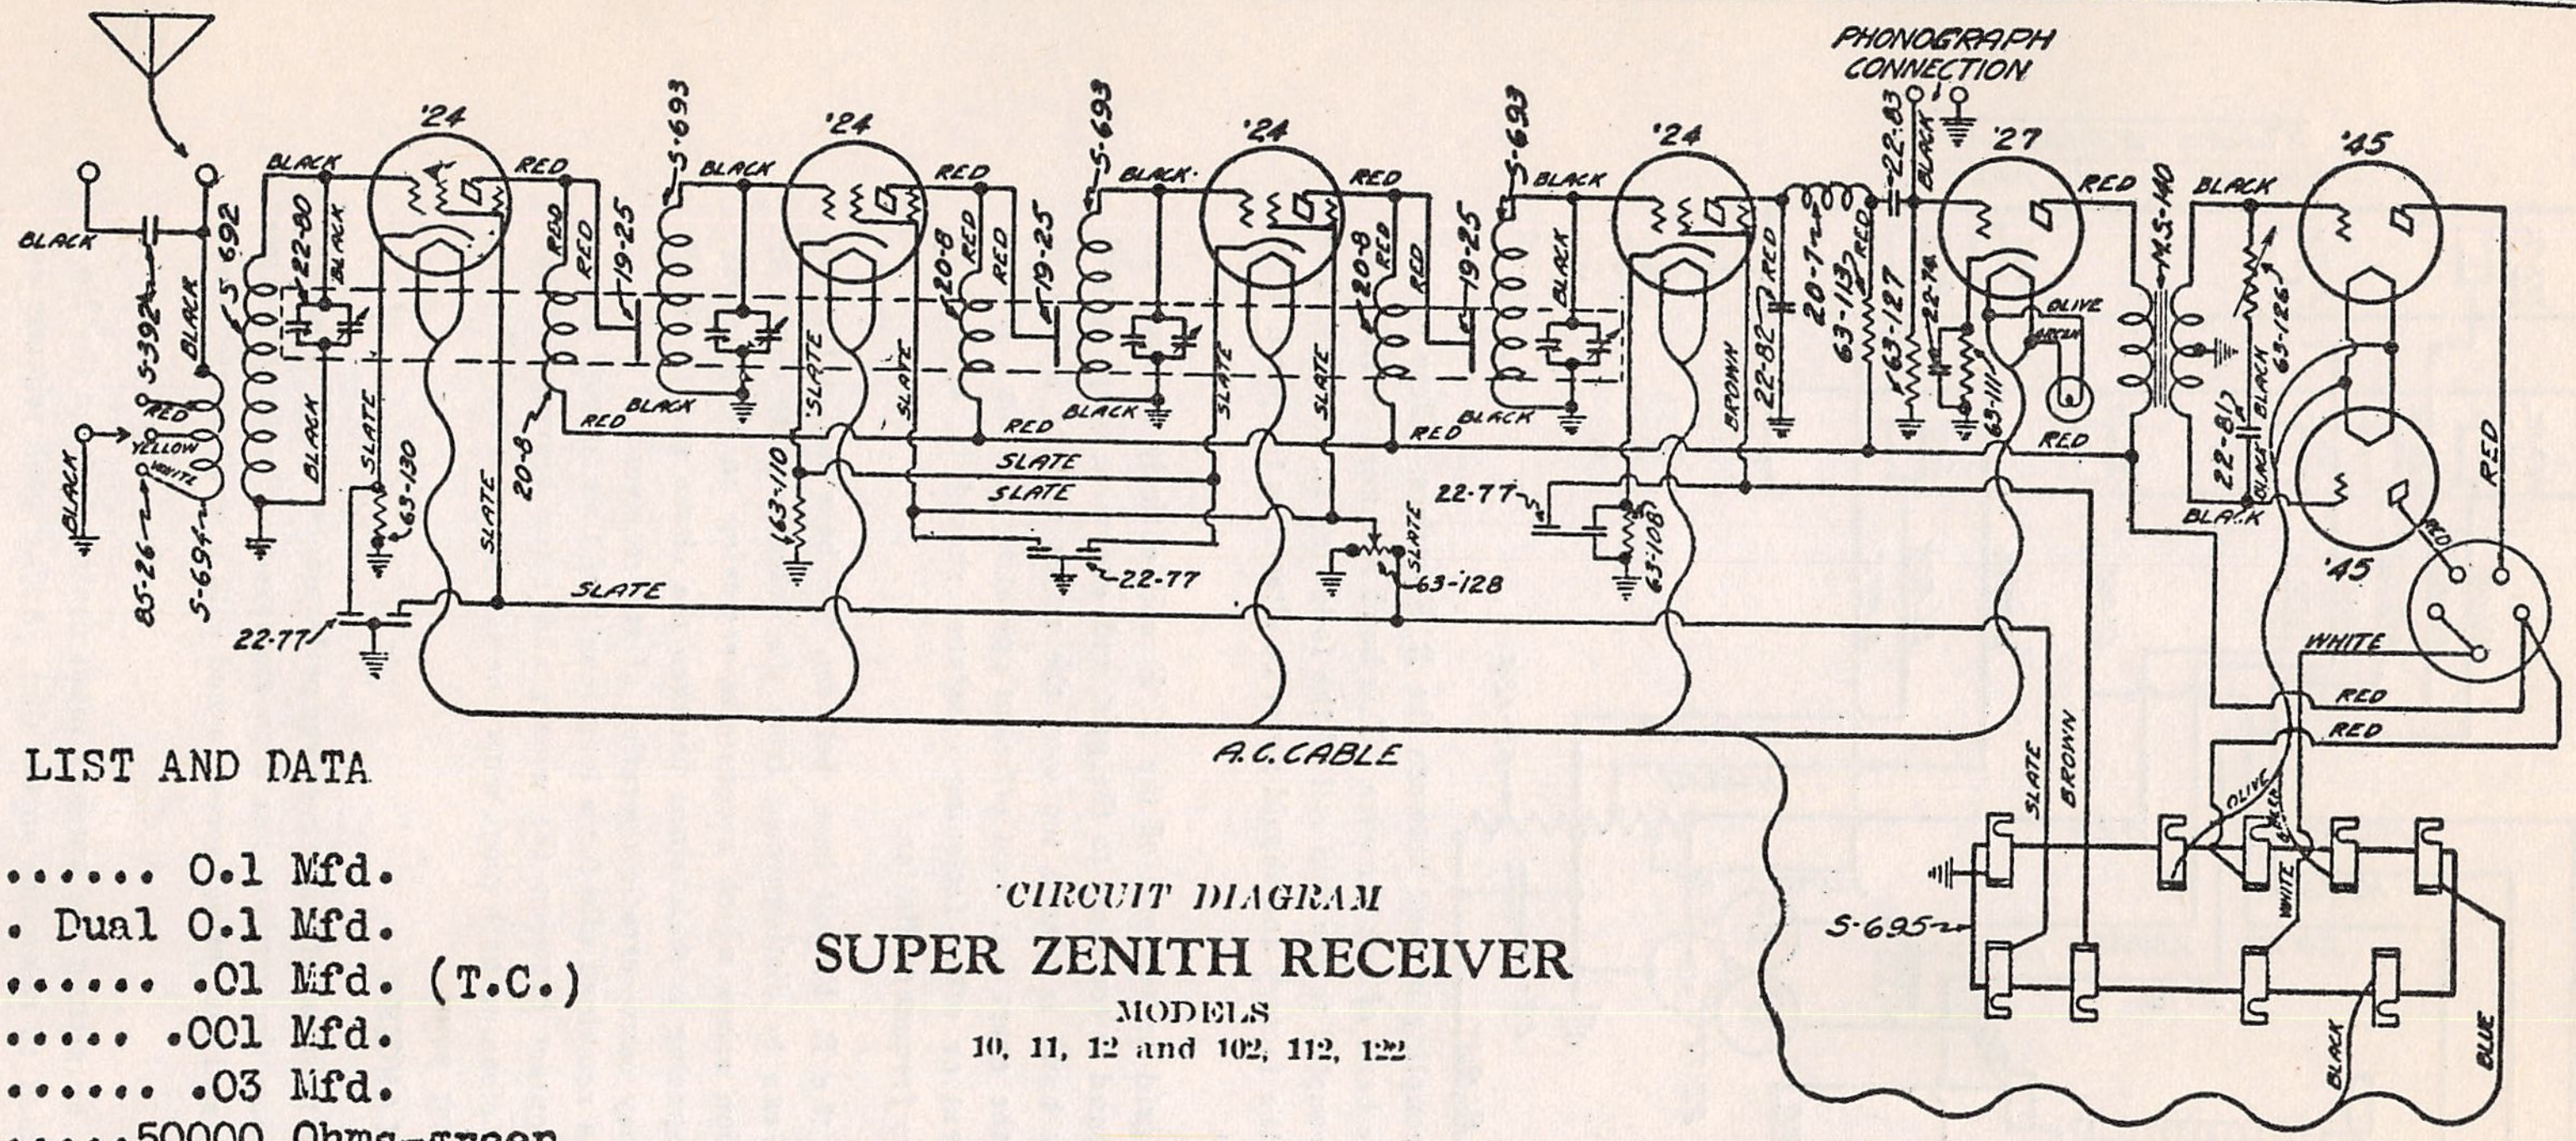
PHONOGRAPH CONNECTION
'24
'24
'24
'24
'27
'45
'45
BLACK
RED
SLATE
BROWN
OLIVE
WHITE
YELLOW
BLUE
5-392
S 692
22-80
63-130
22-77
85-26
S-694
20-8
19-25
S-693
63-110
22-77
63-128
63-108
22-82
20-7
63-113
63-127
22-74
22-83
63-111
M.S-140
22-81
63-126
S-695
A.C.CABLE

CIRCUIT DIAGRAM

SUPER ZENITH RECEIVER

MODELS
10, 11, 12 and 102, 112, 122

PARTS LIST AND DATA

22-74......... 0.1 Mfd.
22-77.... Dual 0.1 Mfd.
22-81.......... .01 Mfd. (T.C.)
22-82......... .001 Mfd.
22-83.......... .03 Mfd.
63-108.......50000 Ohms-green
63-110........ 400 Ohms-yellow
63-111....... 2000 Ohms-black
63-113......250000 Ohms-white
63-127........... 1 Meg.-brown
63-128.......50000 Ohms (V.C.)
63-130..........800 Ohms-bl-yel.

POWER UNITS
MODELS 10, 11, 12

22-71......... 1.0 Mfd.
22-72......... 8.0 Mfd.(Elect)
63-114........ 10 Ohm (C.T.)
63-124...... 10450 Ohm V. Div.
95-83... Power Transformer
95-84... Power Transformer for models 102, 112, 122, 25 cycle sets.

VOLTAGE READINGS AT SOCKETS USING WESTON 547 ANALYZER
Line Voltage 115. Fuse in 120 Volt Clips. Vol. Contr. in Max. Pos'n.

TYPE	POSITION	FIL. VOLTS	PLATE VOLTS	GRID VOLTS	SCREEN VOLTS	NORMAL PLATE M.A.	GRID TEST M. A.
224	1st R. F.	2.3	185	3.25	90	4	7
224	2nd R. F.	2.3	185	3.4	90	4	7.5
224	3rd R. F.	2.3	185	3.3	90	4	7.5
224	Det.	2.3	90	3	30	.25	.75
227	1st A. F.	2.3	170	12	—	6	7
245	P. P.	2.3	245	50	—	28	37
245	P. P.	2.3	245	50	—	28	37

MODEL 10,11,12,102,112,122
Power Unit

ZENITH RADIO CORP.

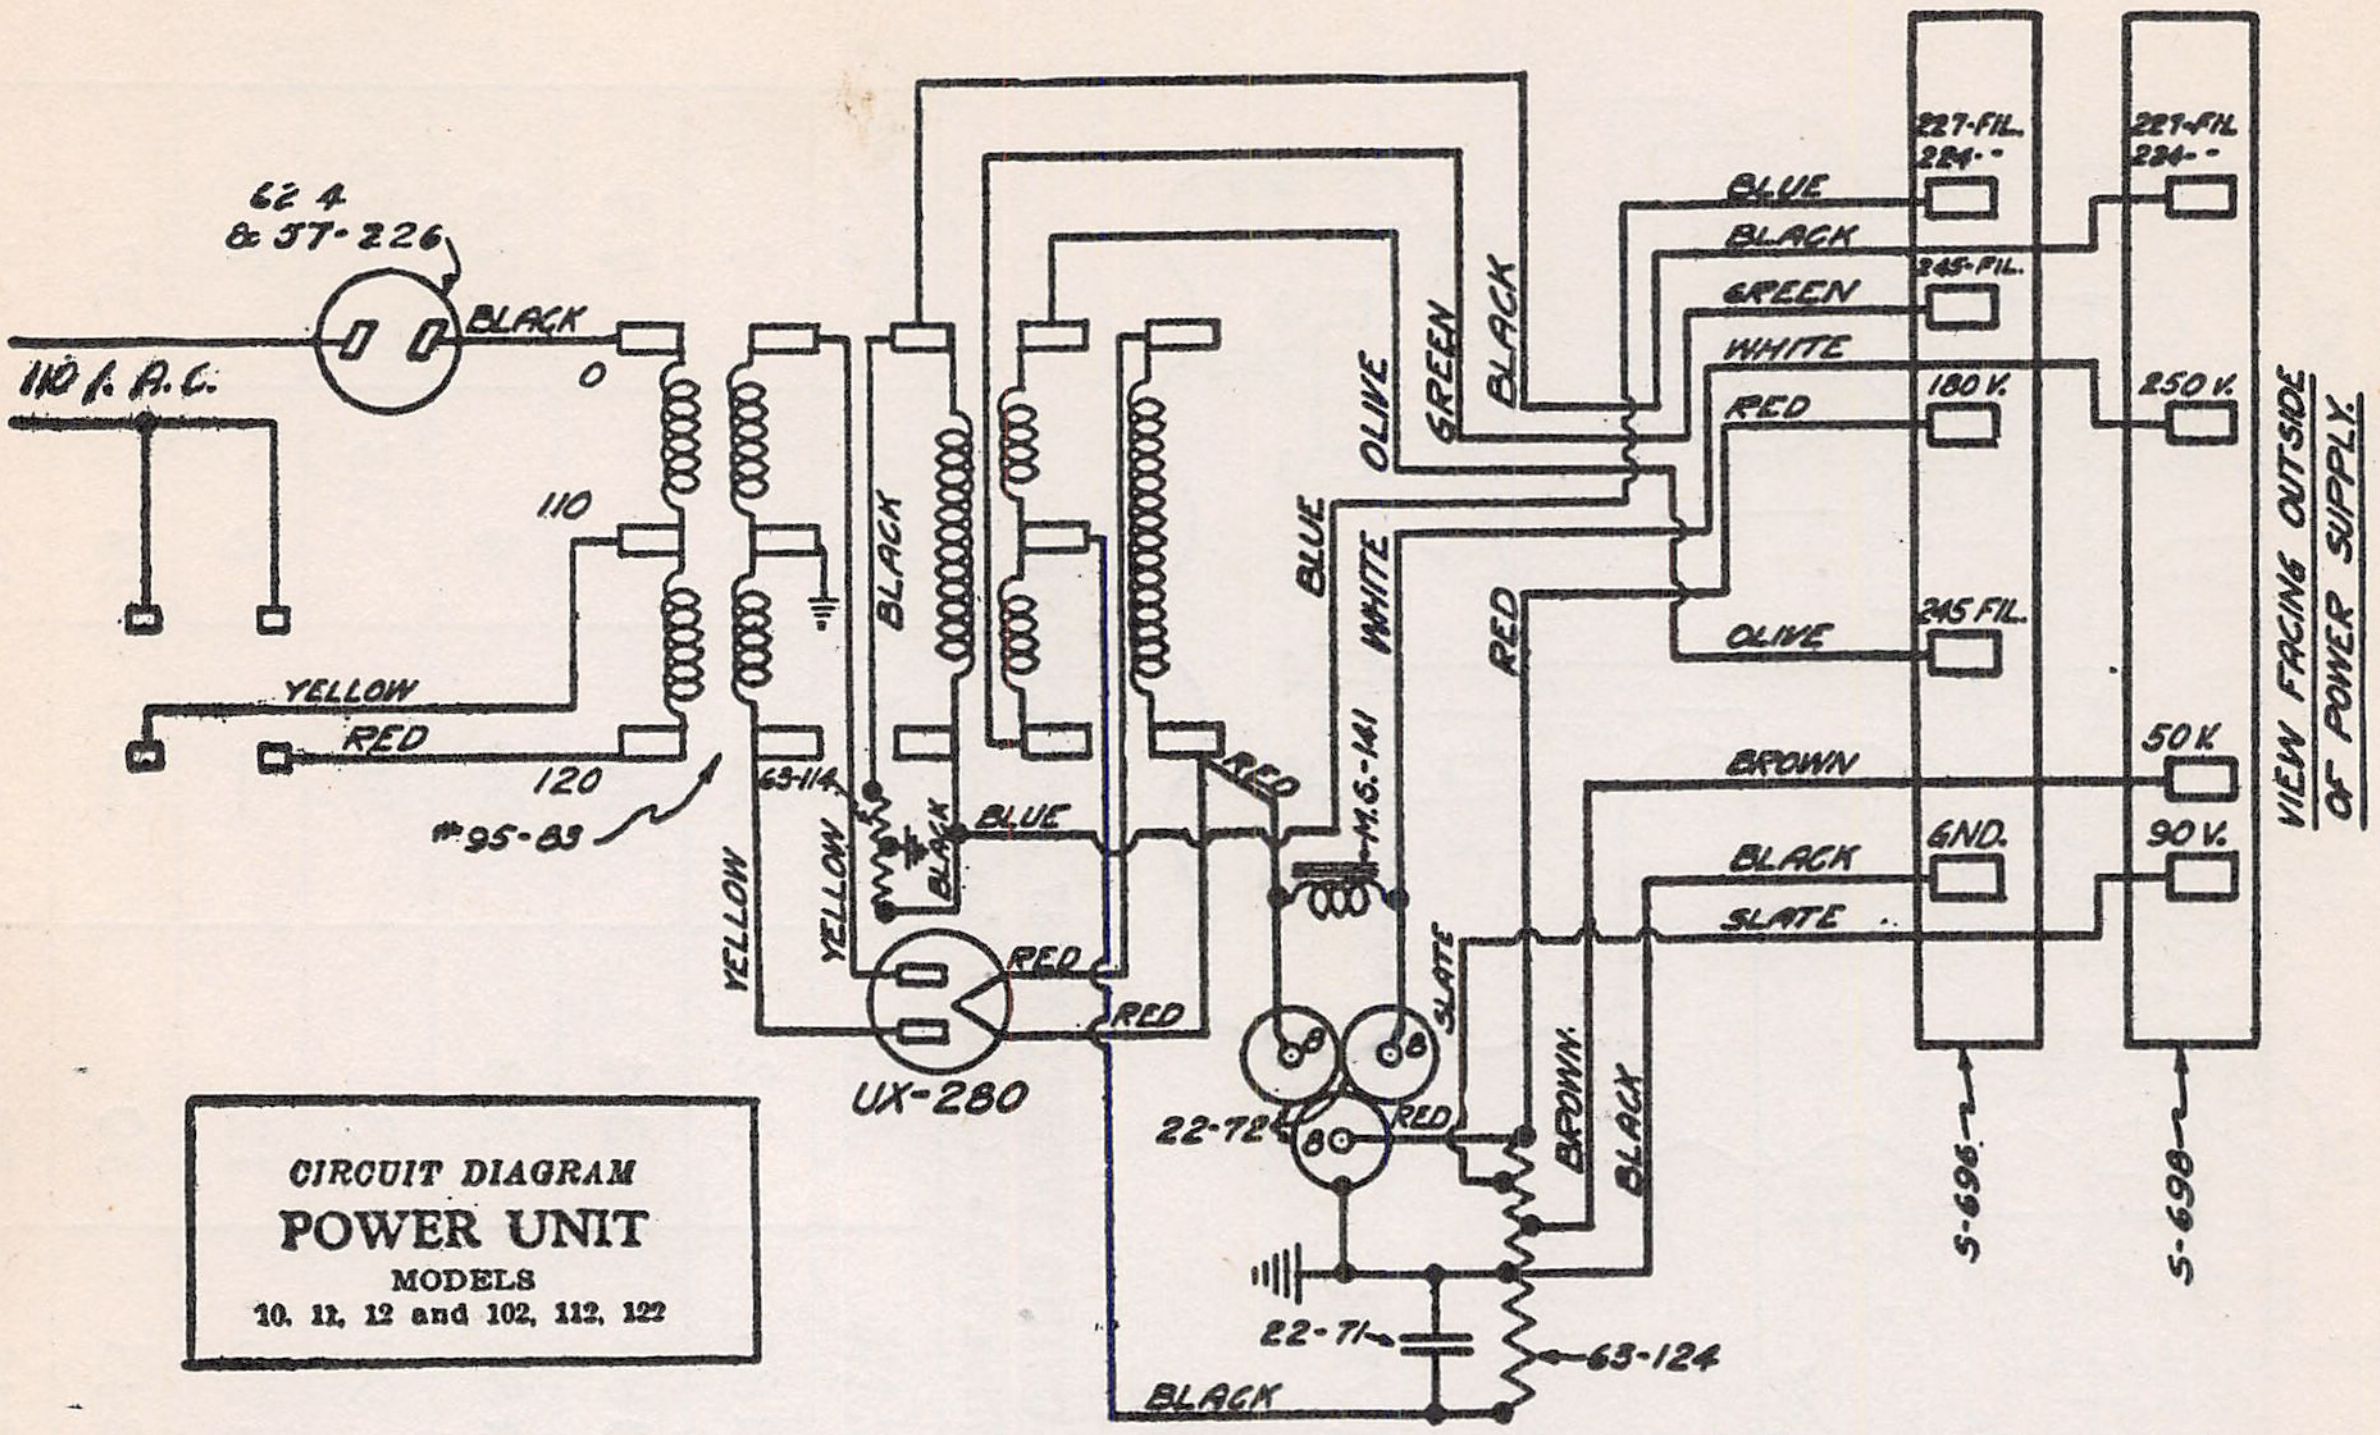
62 4
& 37-226
BLACK
110 V. A.C.
0
110
120
YELLOW
RED
#95-83
65-114
YELLOW
YELLOW
BLACK
BLACK
BLUE
RED
RED
RED
UX-280
BLUE
WHITE
OLIVE
GREEN
BLACK
RED
M.S.-141
SLATE
RED
22-724
22-71
63-124
BLACK
BROWN
BLACK
BLUE
BLACK
GREEN
WHITE
RED
OLIVE
BROWN
BLACK
SLATE
227-FIL.
224-
245-FIL.
180 V.
245 FIL.
GND.
227-FIL
224-
250 V.
50 V.
90 V.
S-696
S-698
VIEW FACING OUTSIDE OF POWER SUPPLY.

CIRCUIT DIAGRAM
POWER UNIT
MODELS
10, 11, 12 and 102, 112, 122

A new development in the form of capacity coupling is used between the R. F. stages. Close examination will reveal the fact that it comprises a single band of bus-bar wire. This band is connected from the plate terminal of the preceding R. F. stage and coupled to the grid coil of the following R. F. stage. The position of this band is permanently adjusted at the factory and should never be altered or tampered with unless the available line voltage is extremely low.

The distance from the coupling band to the grid or top end of the R. F coil entirely governs the stage coupling and efficiency of the set. If this band is too close to the grid end, excessive coupling will result, causing a decided lack of selectivity. If the band is placed too low, the result will be a lack of sensitivity. Midway between the coil winding is the exact and most efficient operating position. If it is found necessary to reset this band, insulating cement or other fastening substance should be applied to hold it in position, since loose vibration would cause frequency flutter.

The R. F. plate chokes are concealed beneath the R. F. coil base, between the base and sub-panel. These chokes have an inductance of 6.75 M. H. and can be distinguished from the detector plate choke by the fact that they have 150 less turns. If an occasion arises which necessitates removing an R. F. choke, the serviceman should make certain that the 1/8" spacing is maintained between the choke and the R. F coil base. To neglect this important adjustment may cause erratic operation of the receiver

Occasionally, and especially if the receiver has remained idle for a long length of time, it may have a tendency to oscillate. This is always due to poor contact between the wipers and rotor bearings of the variable condenser gang. It may be overcome by cleaning both parts with fine sandpaper or by revolving the dial several times to remove oxidization at that point

BALANCING

When resonating the variable condenser system for most efficient receiver performance, it will be noticed that an entirely new and fool-proof system of locking the verniers has been employed. The large locking nut may be loosened with a No. 6 Spintite wrench and the vernier screw turned with a small pointed screw driver

Proper method of balancing is accomplished by setting the antenna input control first on the No. 1 position. A station of low wavelength should be tuned to resonance on the dial. Adjust each trimmer condenser to exact resonance or so that it is set to peak volume. After this has been done, the input control should be set to the No. 2 position and the antenna section trimmer readjusted.

Upon completion, make certain that the wavelength of the station chosen corresponds to the proper wavelength reading on the drum dial.

ZENITH RADIO CORP.

MODEL BH (2021)
Schematic
Parts List

Resistors

63-135	25M ohm	(See Footnote)
63-139	500M "	(Pentode Bias)
63-140	1meg"	(Oscillator Grid)
63-160	100M "	(See Footnote)...
63-181	Volume Control and Switch	
63-195	12M ohm	(Voltage Divider)
63-196	6M "	(Voltage Divider)
63-197	17M "	(R.F. & I.F. Screen)
63-198	30M "	(1st Detector Screen)
63-199	150 " Wire Wound	(R.F. & I.F. Cathode)
63-200	Tone Control	

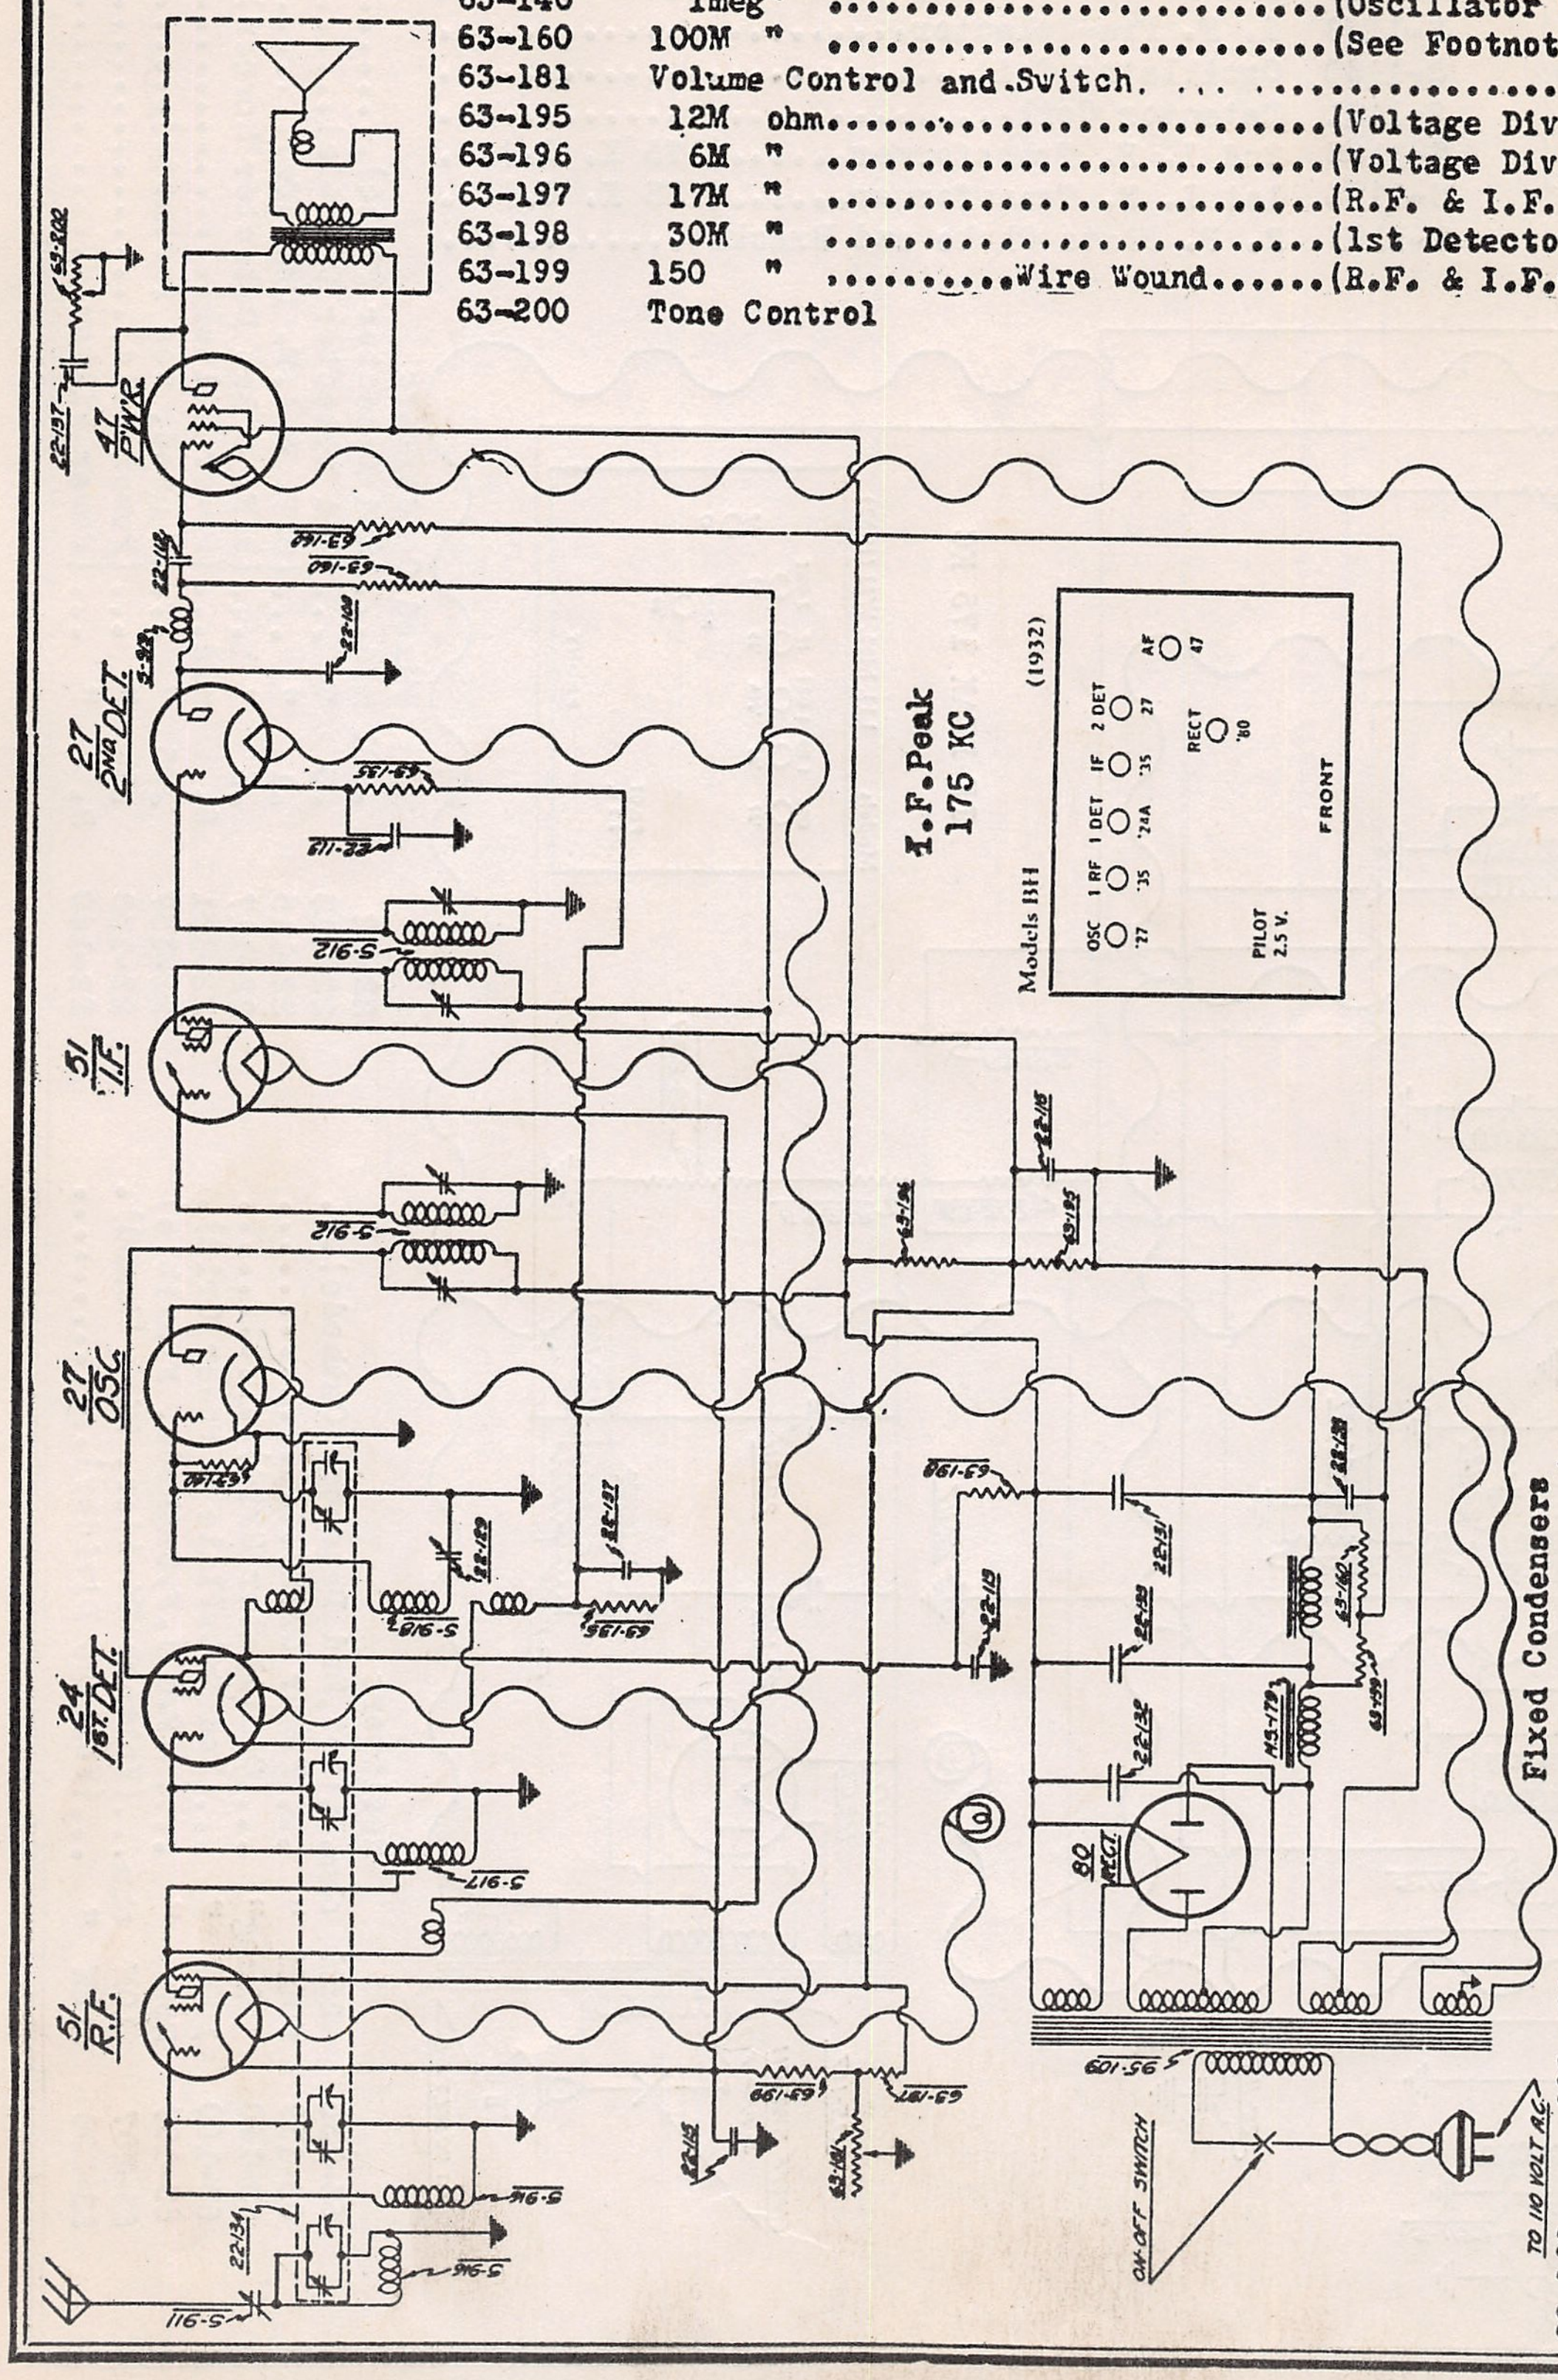
47 PWR
22-137
63-200
63-160
63-160
22-118
22-108
S-919
27 2ND DET.
63-135
22-112
S-912
51 I.F.
S-912
22-115
63-196
63-195
27 OSC
63-140
22-129
22-127
S-918
63-139
63-198
22-113
24 1ST DET.
22-130
22-131
63-161
63-199
45-1723
22-132
S-917
80 RECT
51 R.F.
63-199
63-197
22-115
63-181
95-109
ON-OFF SWITCH
TO 110 VOLT A.C.
S-916
S-916
22-134
S-911
I.F. Peak
175 KC
Models BH
(1932)
OSC '27
1 RF '35
1 DET '24A
IF '35
2 DET '27
AF 47
RECT '80
PILOT 2.5 V.
FRONT

Fixed Condensers

22-108	.002 mfd.		(2nd Detector Plate)
22-112	.1 "		(Audio Coupling)
22-113	.5 "		(See Footnote)
22-115	.1 "		(See Footnote)
22-129	Padder Condenser		(Variable)
22-132	4. mfd.	450 Volt	(Filter)
22-133	2. "	450 Volt	(Filter)
22-137	.05 "		(See Footnote)
22-138	.2 "		(Pentode Grid)

Coils

S-916	Pre-Selector or 1st R. F.
S-917	1st Detector Coil Complete with Choke and Band
S-918	Oscillator Coil Complete
S-912	Intermediate Transformer (Specify with or without Grid Lead)
S-919	2nd Detector Plate Choke

MODELS LH,WH,MH (2022)
7 Tube Superhet
Schematic

ZENITH RADIO CORP.

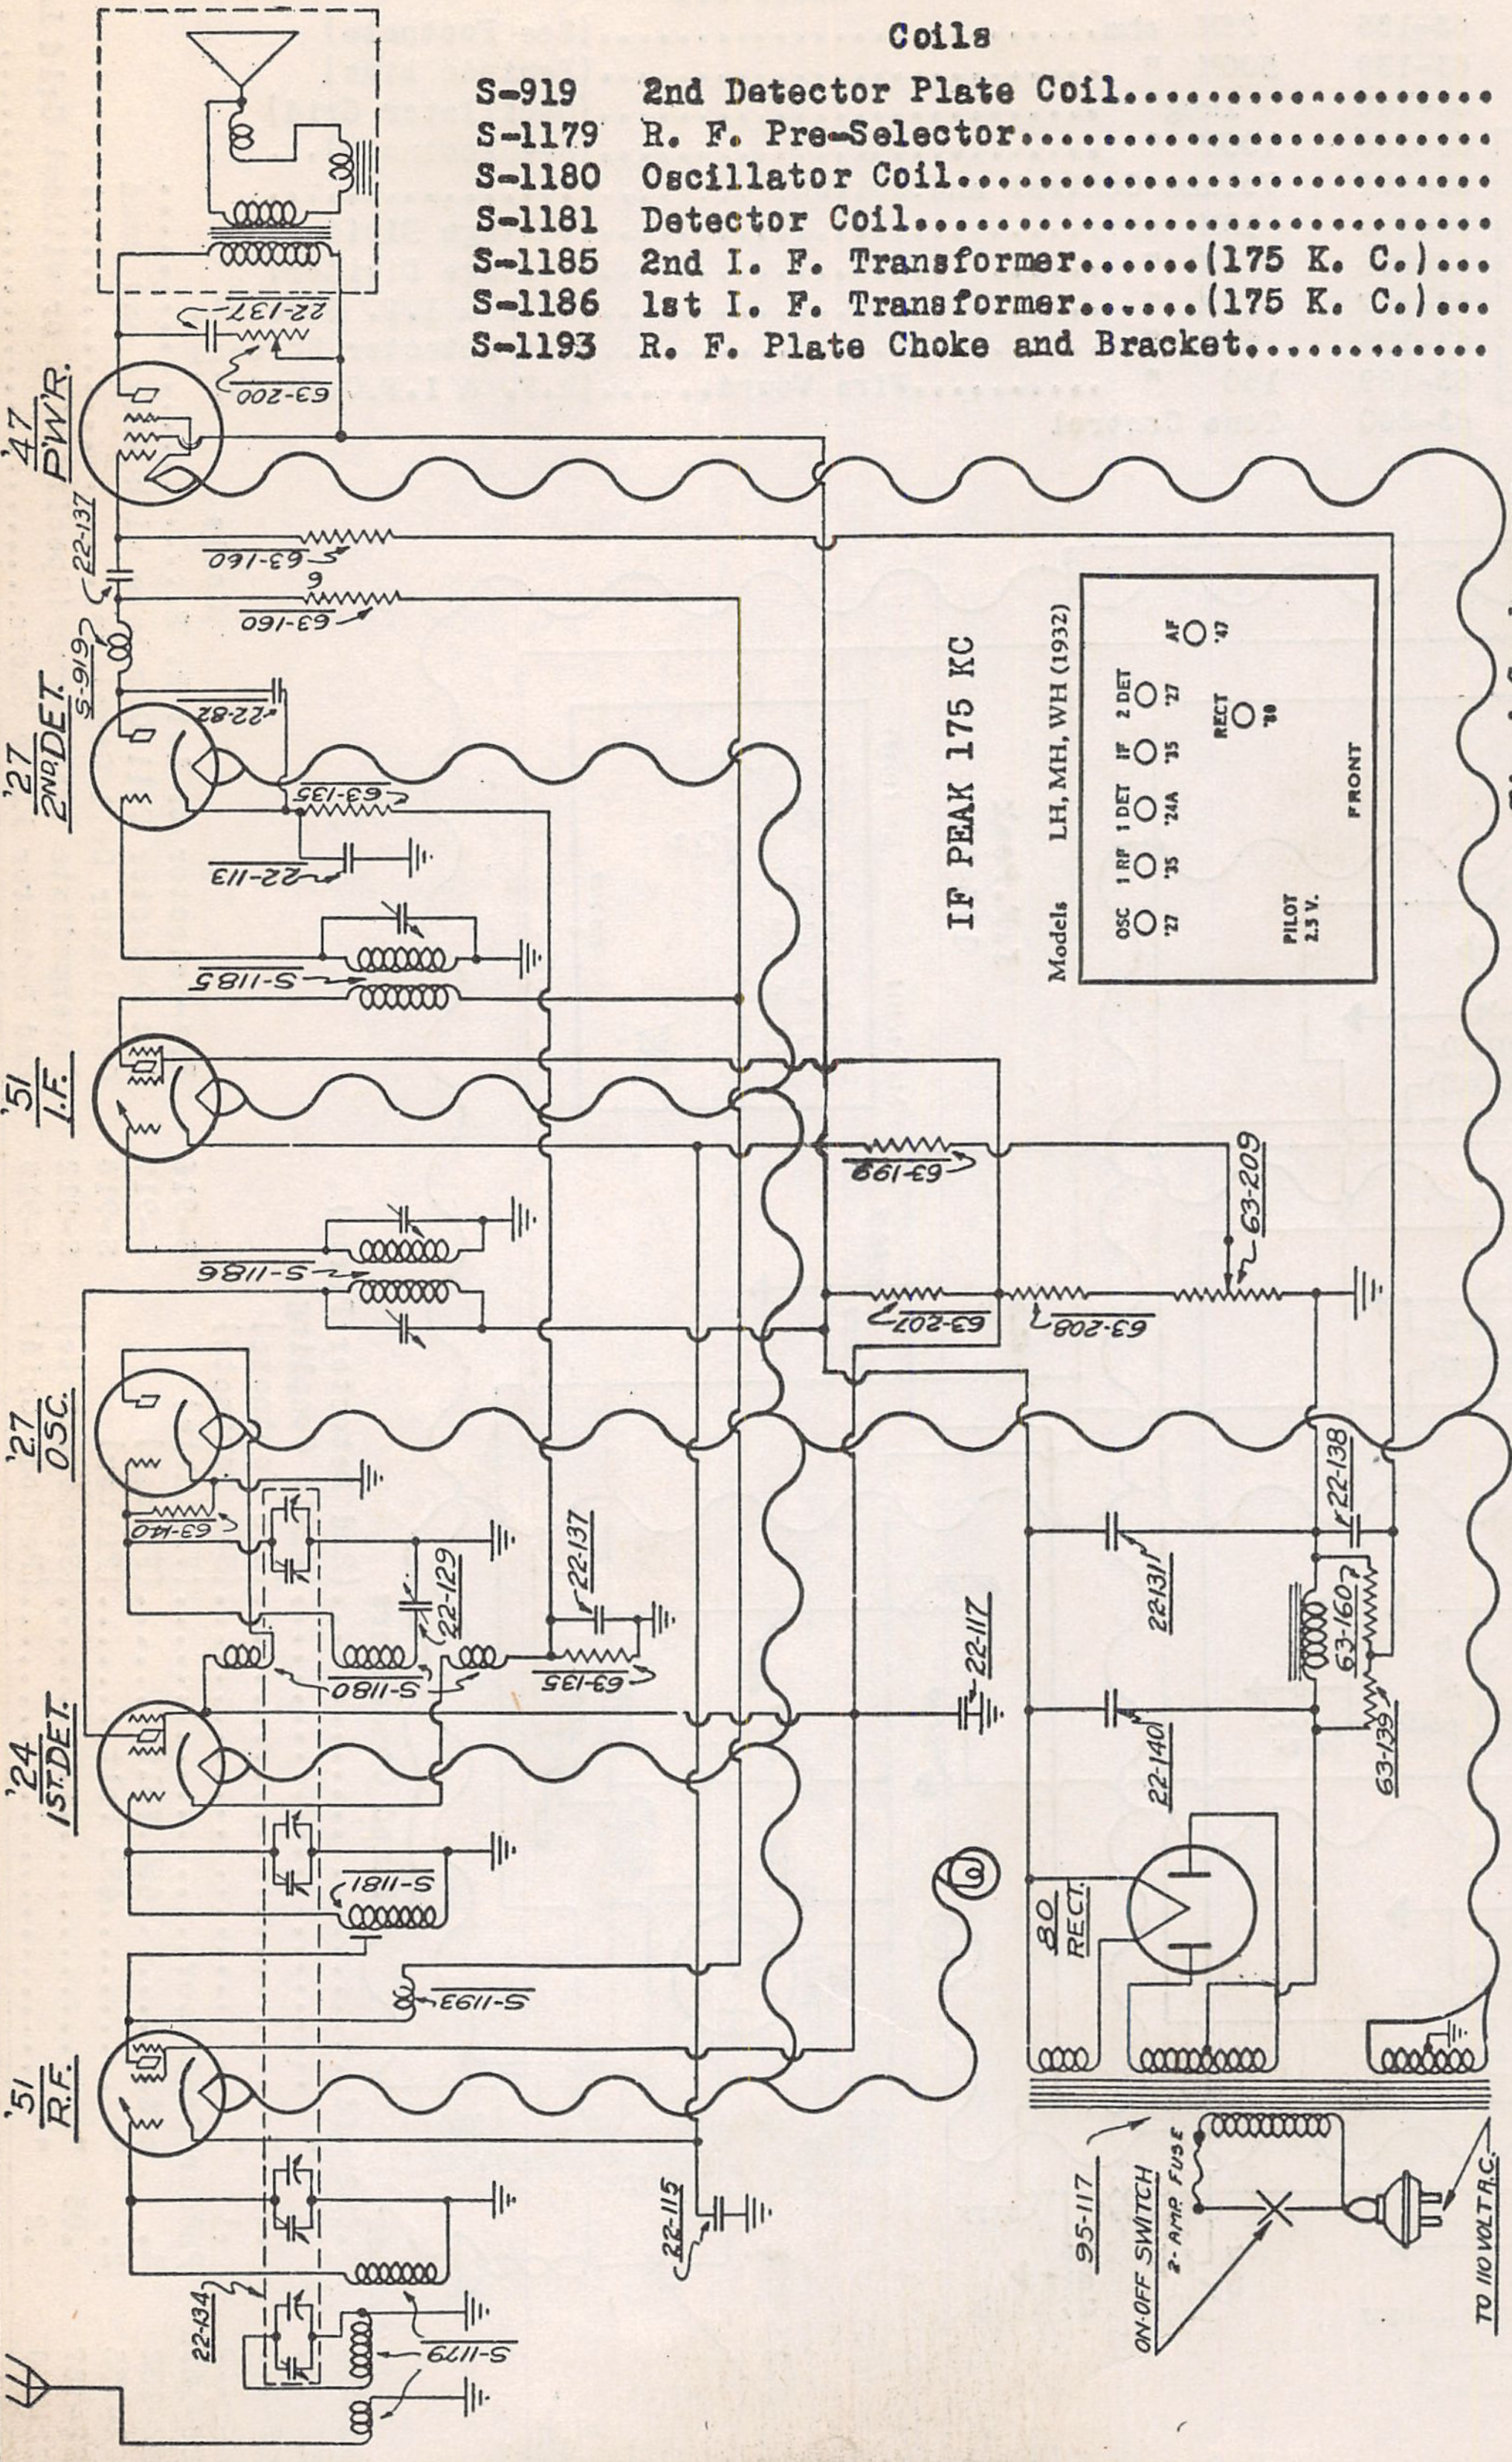
'47 PWR.
22-137
63-200
63-160
6
63-160
22-137
'27 2ND DET.
S-919
22-82
63-135
22-113
S-1185
'51 I.F.
63-199
63-209
S-1186
63-207
63-208
'27 OSC.
63-140
22-129
22-137
S-1180
63-135
22-117
22-131
22-138
63-160
63-139
22-140
'24 1ST. DET.
S-1181
S-1193
'80 RECT.
'51 R.F.
22-115
22-134
S-1179
95-117
ON-OFF SWITCH
2-AMP FUSE
TO 110 VOLT A.C.
IF PEAK 175 KC
Models LH, MH, WH (1932)
OSC '27
1 RF '35
1 DET '24A
IF '35
2 DET '27
AF '47
RECT '80
PILOT 2.5 V.
FRONT

Coils

S-919	2nd Detector Plate Coil................
S-1179	R. F. Pre-Selector........................
S-1180	Oscillator Coil...........................
S-1181	Detector Coil.............................
S-1185	2nd I. F. Transformer......(175 K. C.)...
S-1186	1st I. F. Transformer......(175 K. C.)...
S-1193	R. F. Plate Choke and Bracket..........

Fixed Condensers

22-82	.001	mfd...	(2nd Detector Plate).........
22-113	.5	" ...	(2nd Detector Cathode)........
22-115	.1	" ...	(R.F. & I.F. Cathode).........
22-117	.5	" ...	(R.F. & 1st Detector Screen).
22-131	6.	mfd...	(Power Filter)...............
22-137	.05	" ...	(3 used, see footnote)........
22-138	.2	" ...	(Power Grid).................
22-140	8.	" ...	(Power Filter)...............

Resistors

63-135	25M	ohm...	(1st,2nd Detector Cathode)...
63-139	500M	" ...	(Power Grid).................
63-140	1meg"	...	(Oscillator Grid)............
63-160	100M	" ...	(2nd Det.Plate & Power Grid).
63-199	250	" ...	(R.F.& I.F.Cathode, Flexible)
63-207	10M	ohm...	(Voltage Divider, Wire Wound).
63-208	12M	" ...	(Voltage Divider)............

ZENITH RADIO CORP.

MODEL LP
Schematic
Parts List

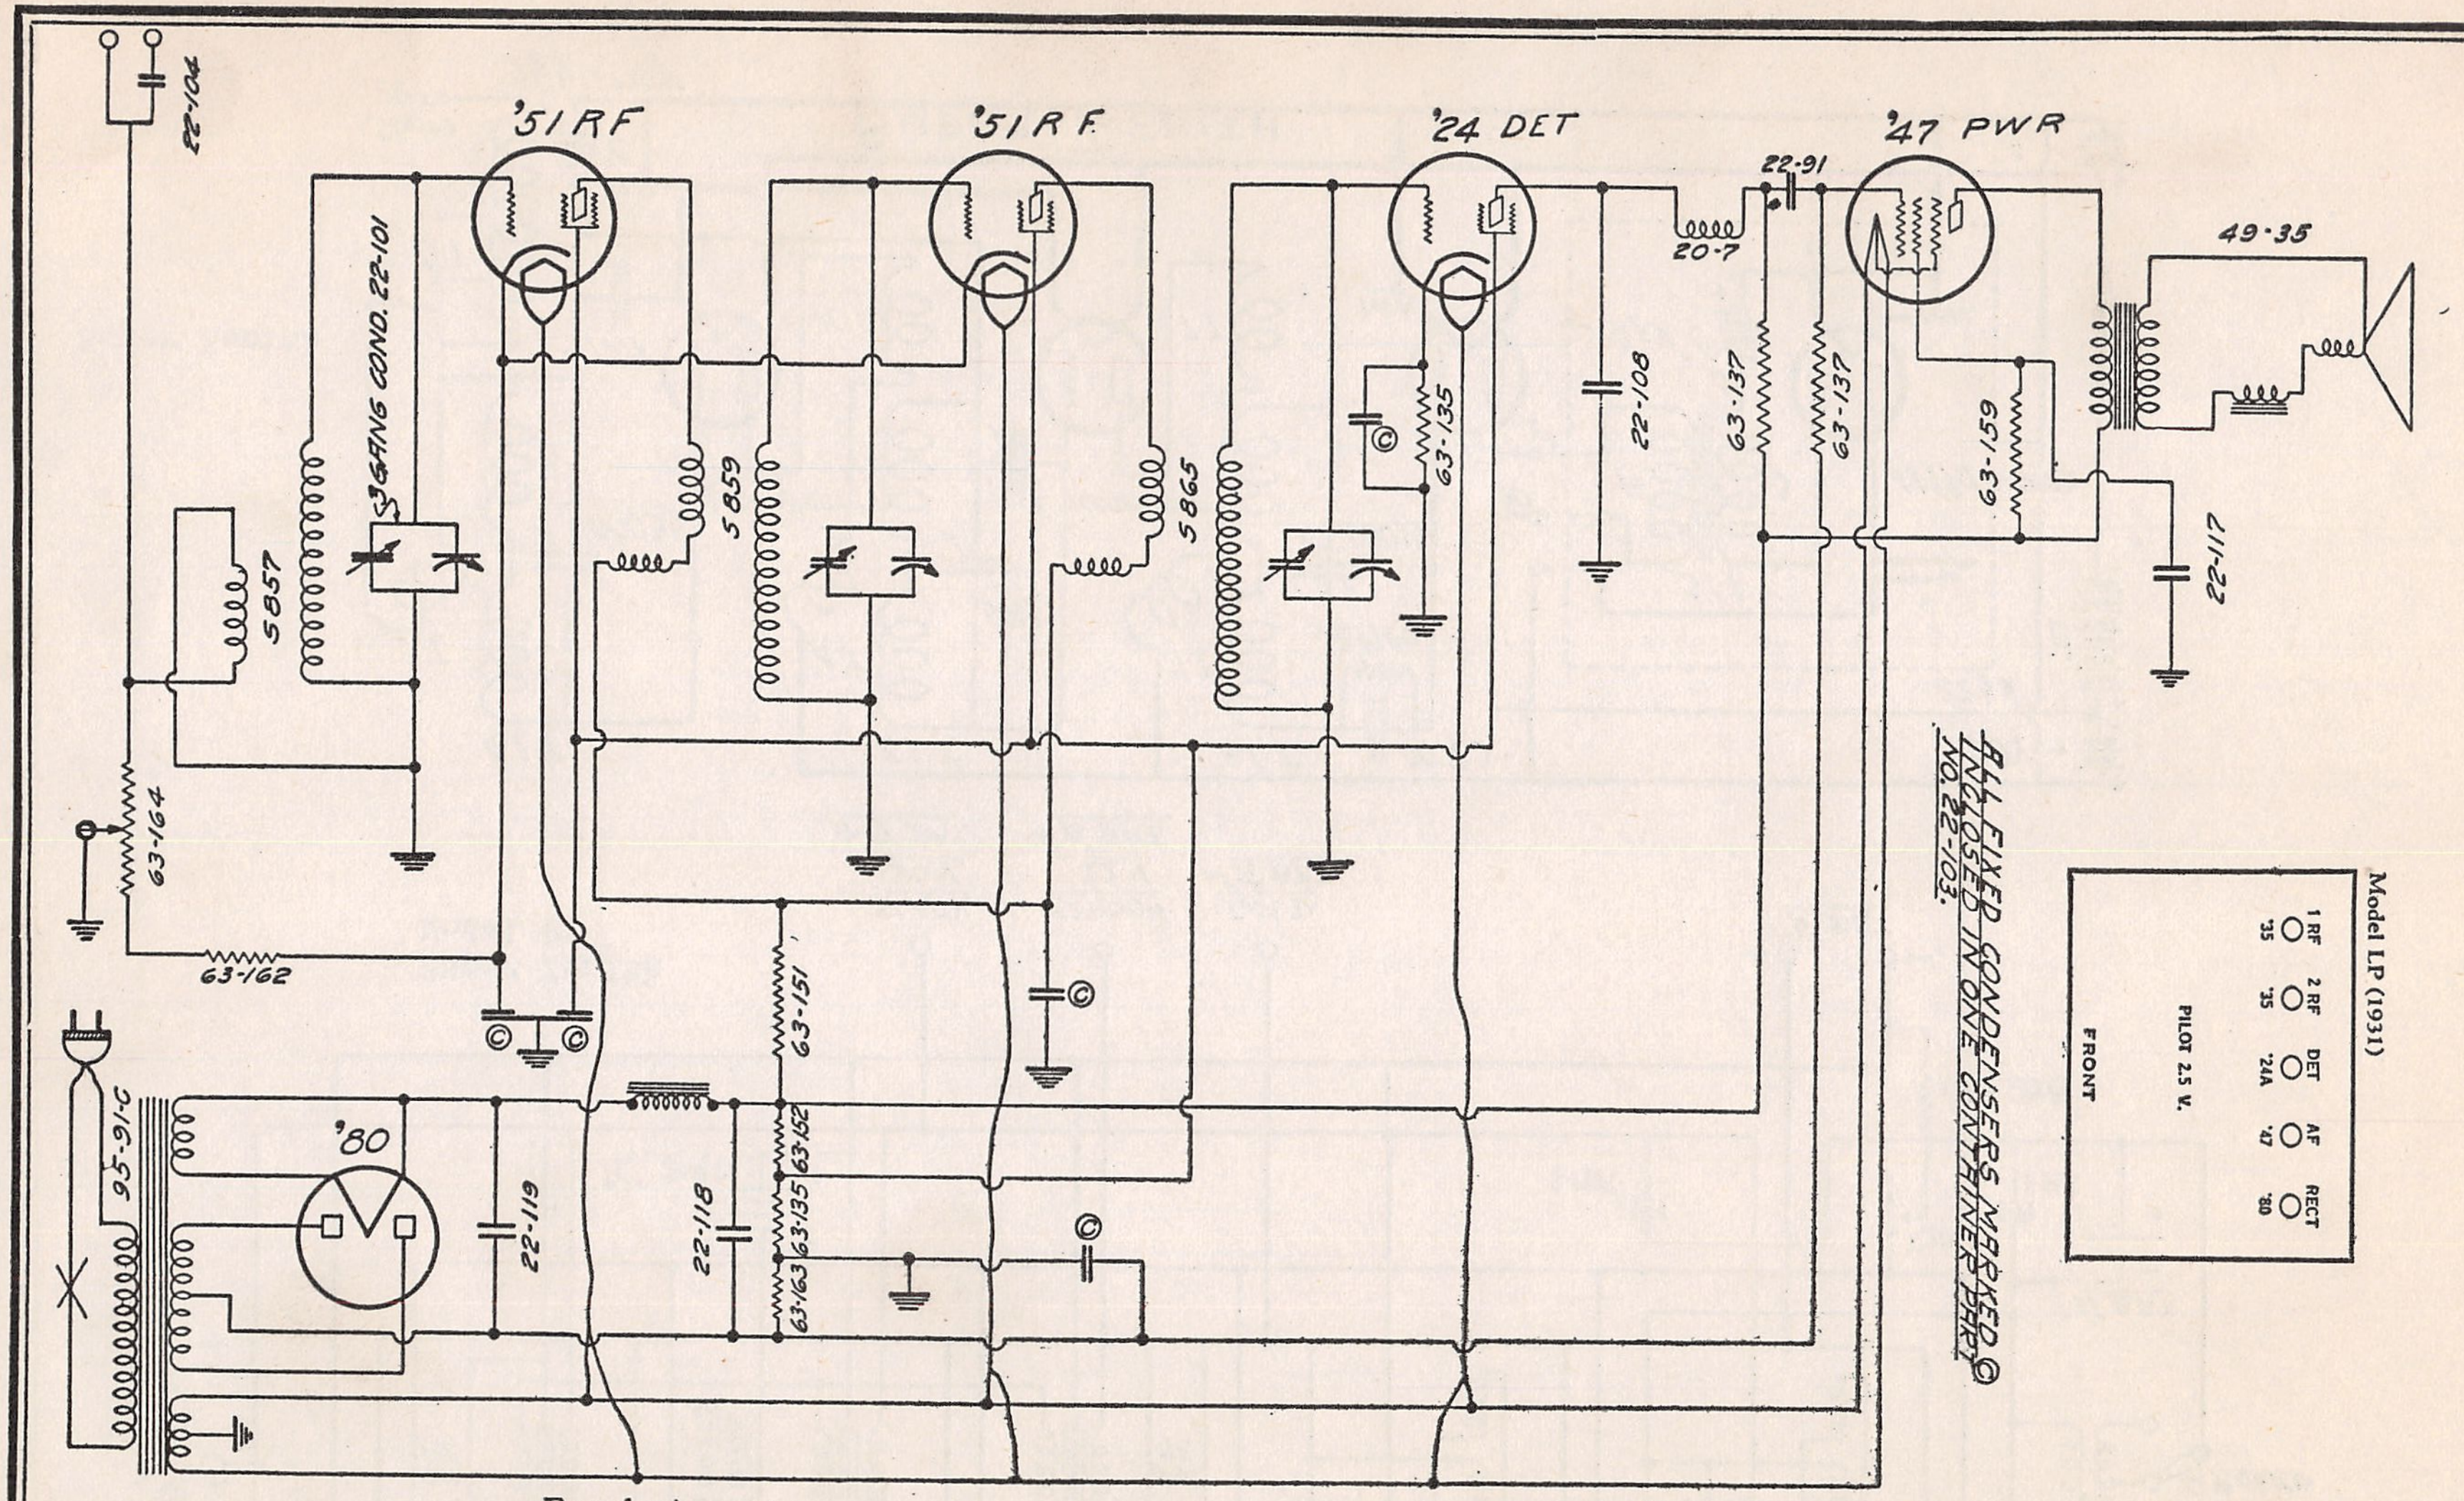
'51 RF
'51 R.F.
'24 DET
'47 PWR
'80
22-104
3 GANG COND. 22-101
5857
5859
5865
63-164
63-162
63-151
63-152
63-135
63-163
63-137
63-137
63-159
63-135
22-118
22-119
22-108
22-91
22-117
20-7
49-35
95-91-C
©
Model LP (1931)
1 RF '35
2 RF '35
DET '24A
AF '47
RECT '80
PILOT 2.5 V.
FRONT

ALL FIXED CONDENSERS MARKED © INCLOSED IN ONE CONTAINER PART NO. 22-103.

Resistors

63-135	25M	ohm resistor	(Red, Green end, Or ange Dot)
63-137	250M	" "	(" " " Yellow ")
63-151	15M	" "	(Brown " Orange ")
63-152	43M	" "	(Yellow Orange " ")
63-159	4M	" "	(" Black end Red ")
63-162	100	" "	(Flat wire wound black ")
63-163	320	" "	" " " Red ")

Fixed Condensers

22-91	.03 mfd. condenser
S-392	Antenna series condenser
22-103	Five section bypass condenser
22-108	.002 mfd. condenser
22-117	.5 " (bypass)
22-118	6. " (electrolytic low voltage)
22-119	6. " (" high ")

MODEL 27
Super Zenith
MODEL Super Zenith

ZENITH RADIO CORP.

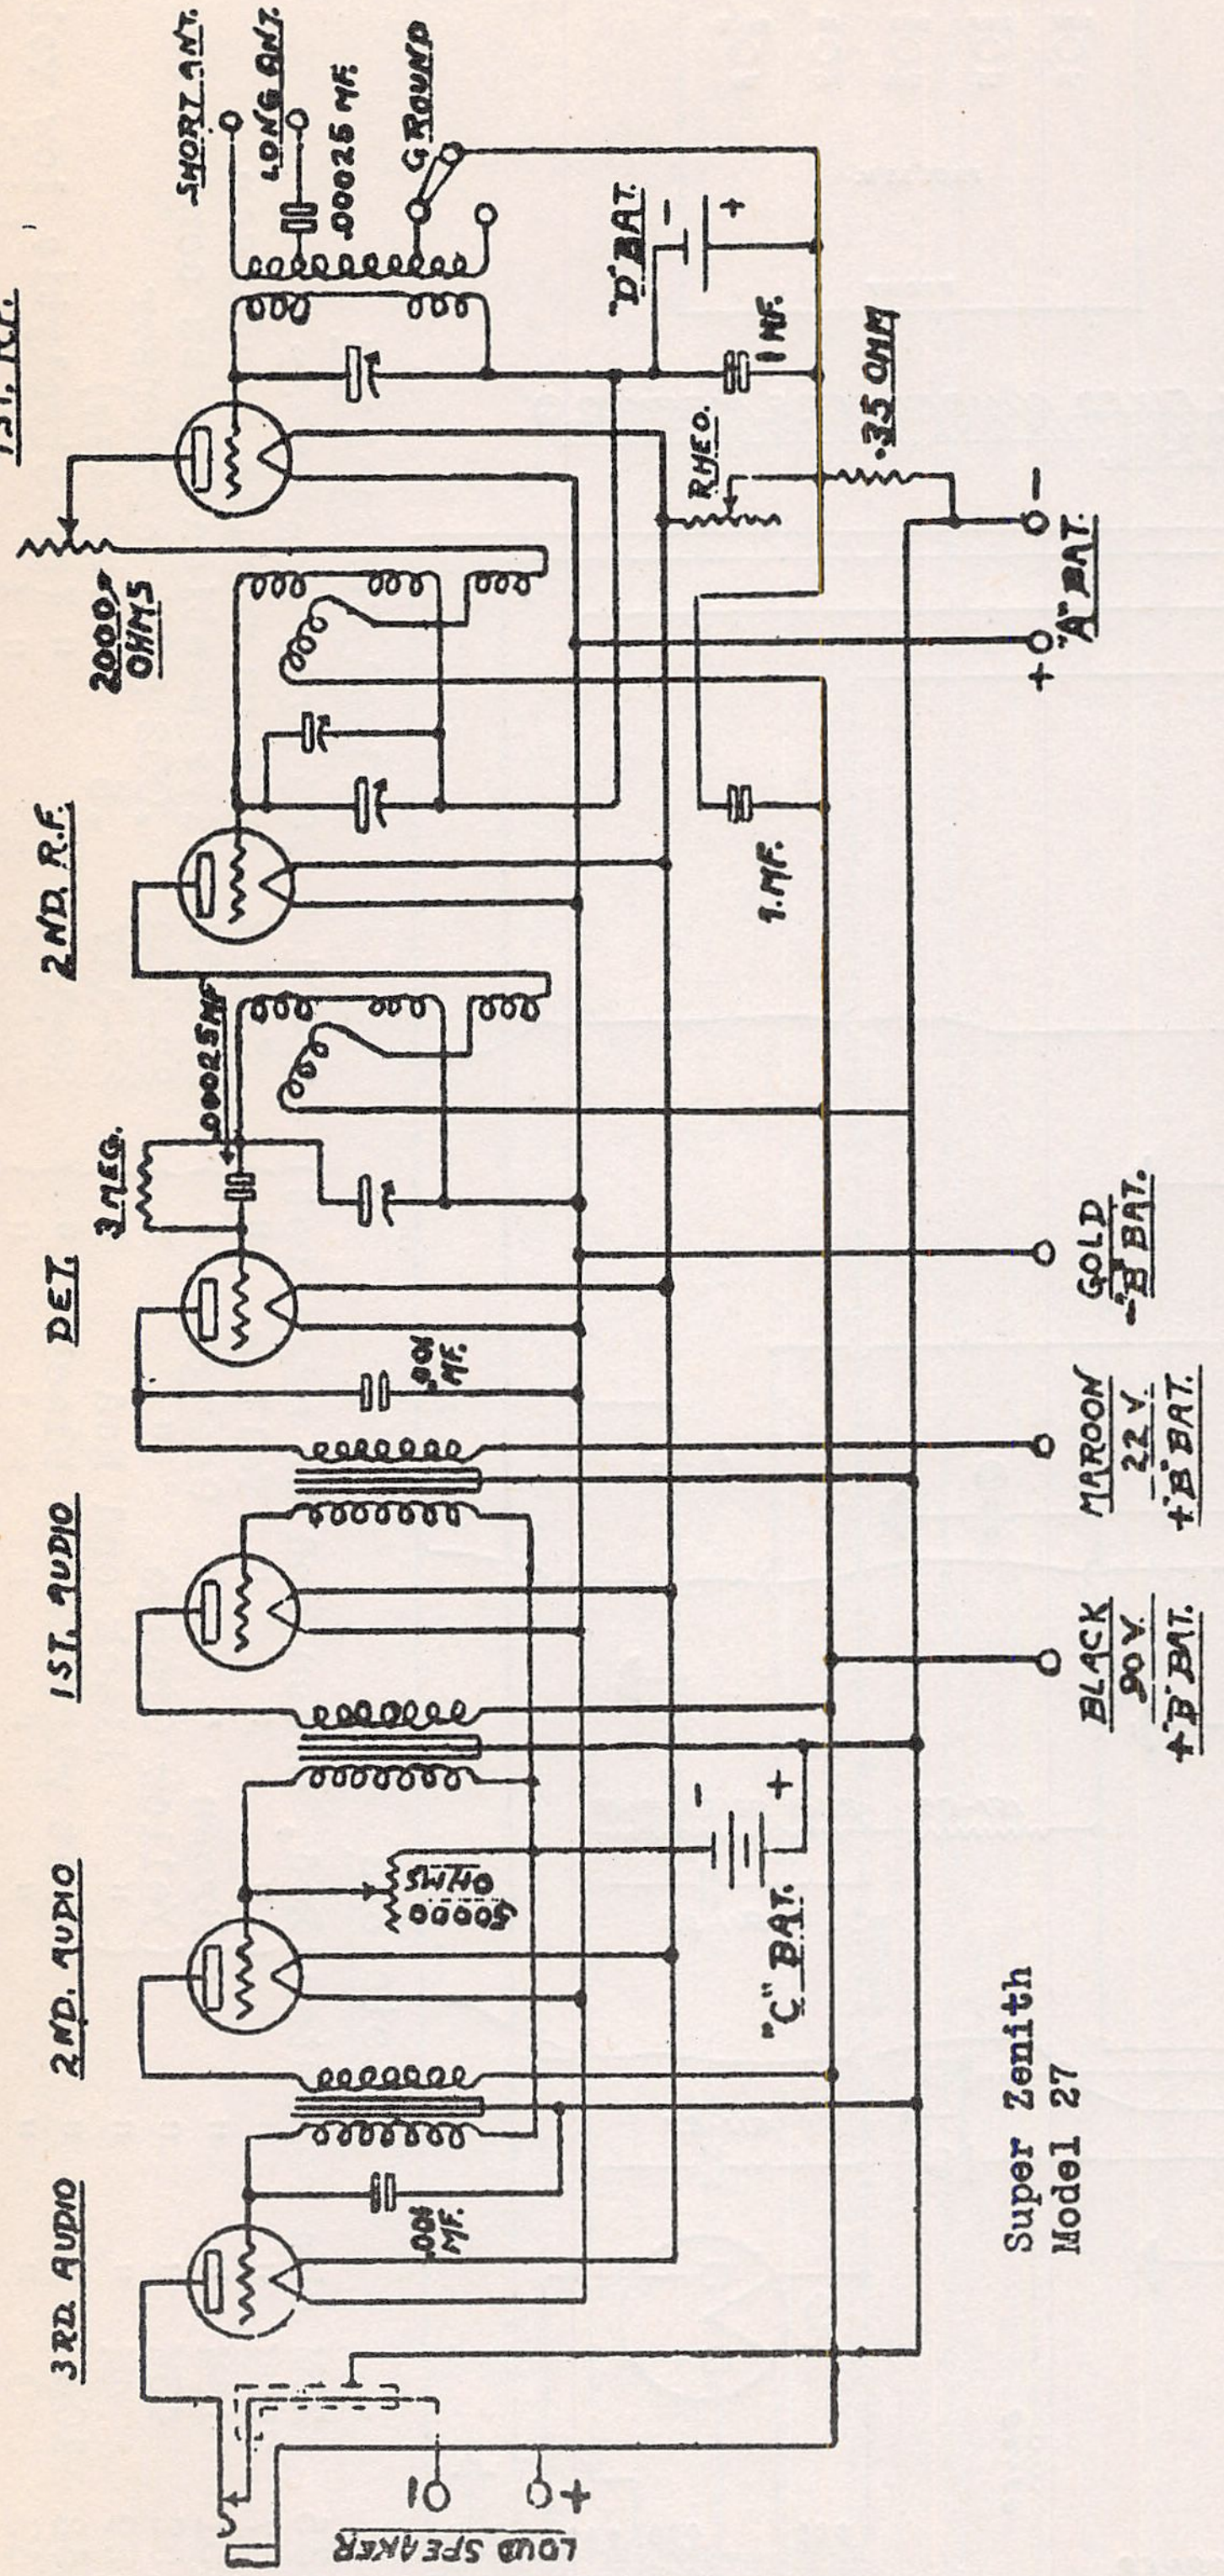
1ST. R.F.
SHORT ANT.
LONG ANT.
.00025 MF.
GROUND
"D" BAT.
1 MF.
.35 OHM
RHEO.
2000 OHMS
- "A" BAT. +
2ND. R.F.
1. MF.
.00025 MF
3 MEG.
DET.
.001 MF.
GOLD -"B" BAT.
MAROON 22 V. +"B" BAT.
BLACK 90 V. +"B" BAT.
1ST. AUDIO
2ND. AUDIO
50000 OHMS
"C" BAT.
3RD. AUDIO
.001 MF.
LOUD SPEAKER

Super Zenith
Model 27

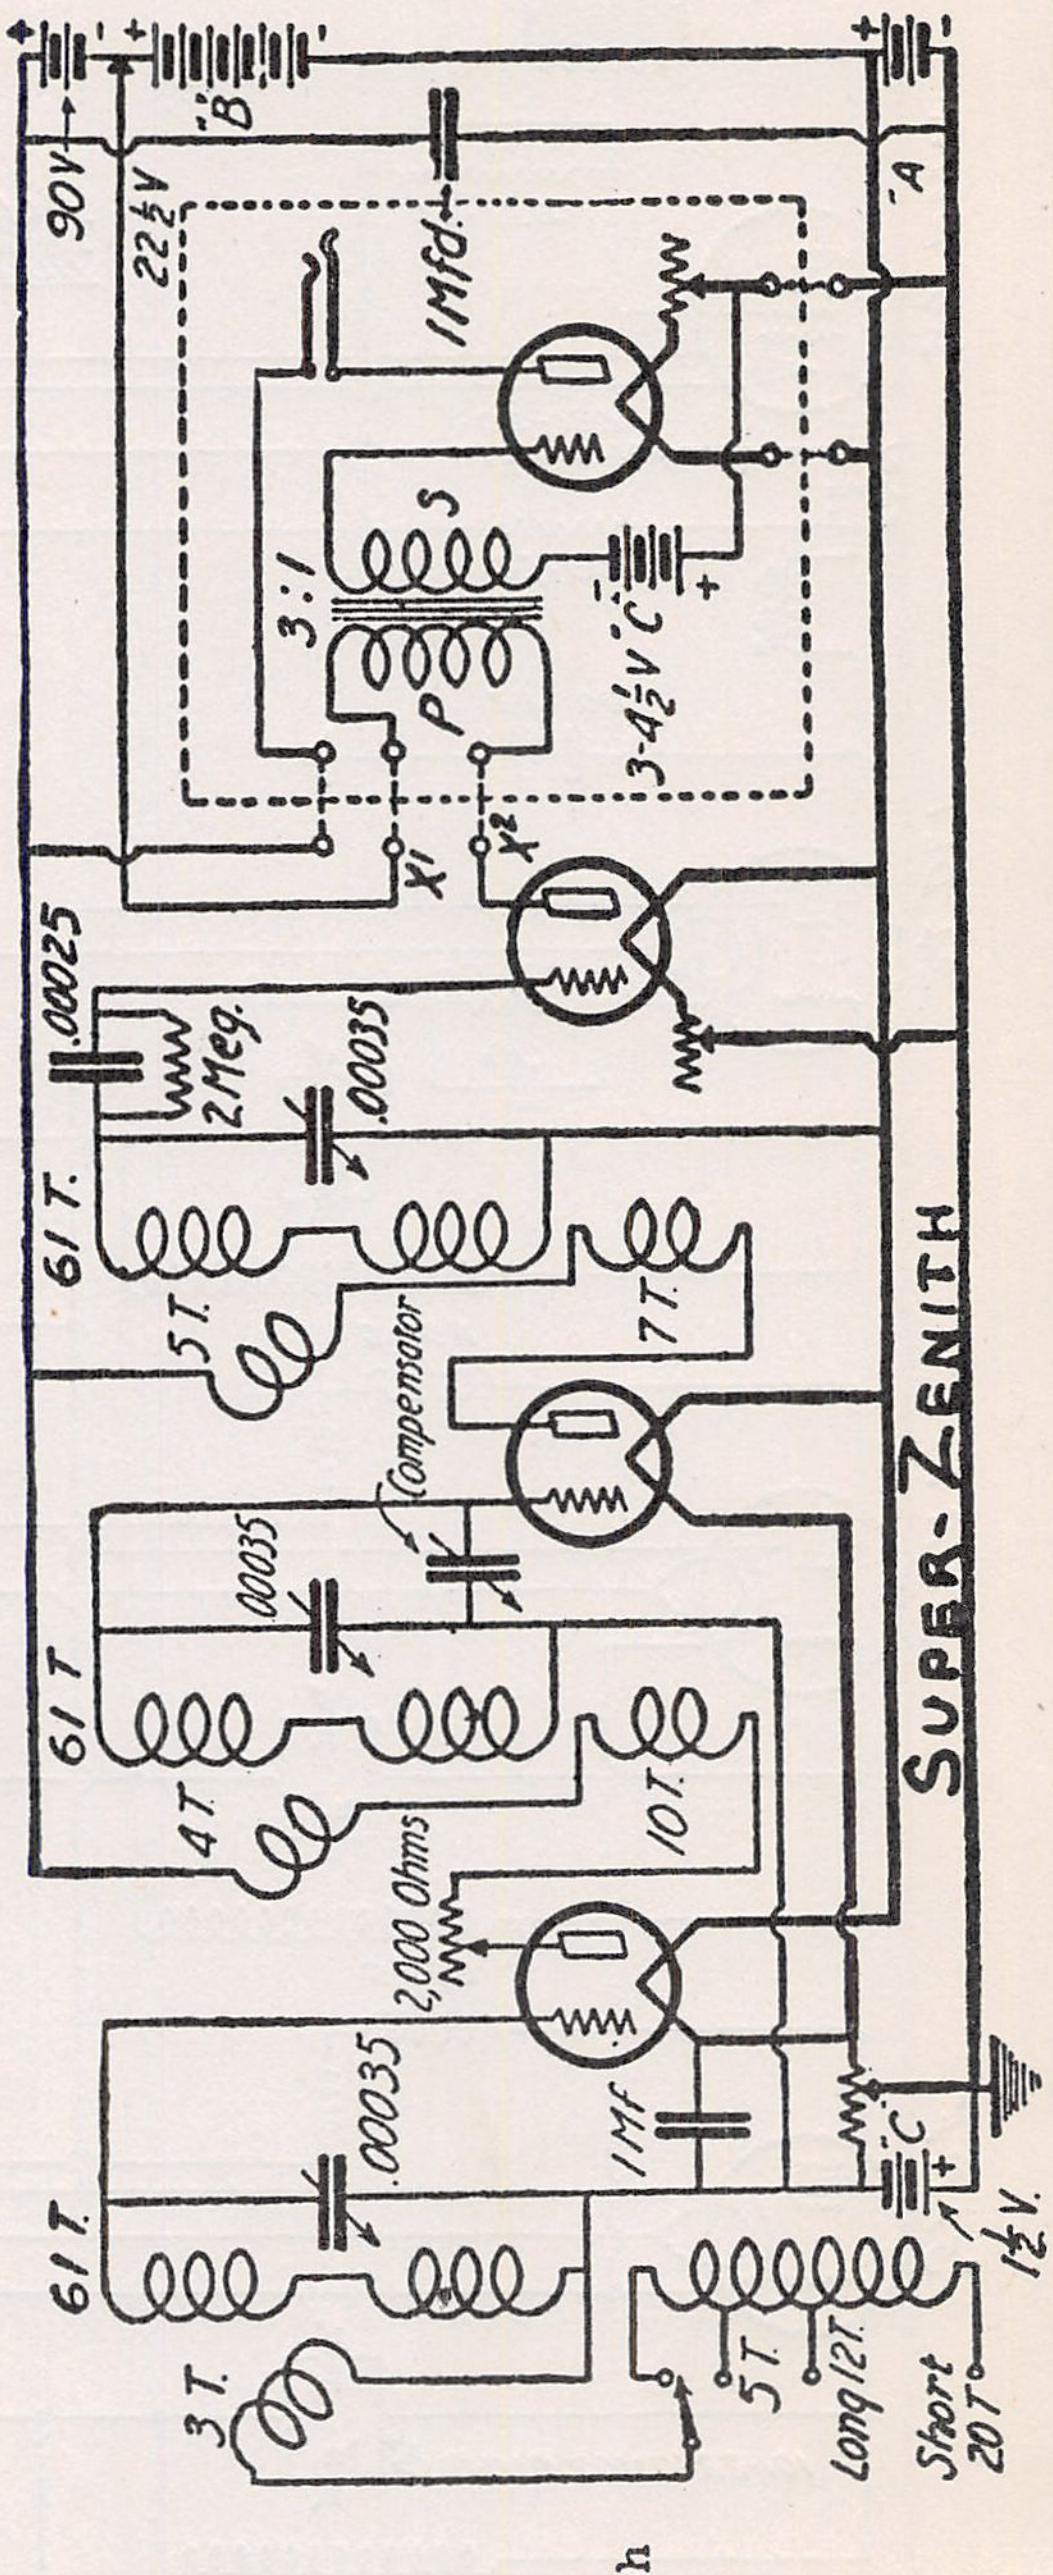
90V
22½V
"B"
'A'
1Mfd
3:1
S
P
3-4½V 'C'
X1
X2
.00025
2 Meg.
.00035
61 T.
5 T.
7 T.
Compensator
SUPER-ZENITH
.00035
61 T
4 T.
10 T.
2,000 Ohms
.00035
1Mf
C
1½V.
61 T.
3 T.
5 T.
Long 12T.
Short 20T.

Super Zenith

ZENITH RADIO CORP.

MODEL 103
Chassis 2017
Above Serial # 450,451
Schematic

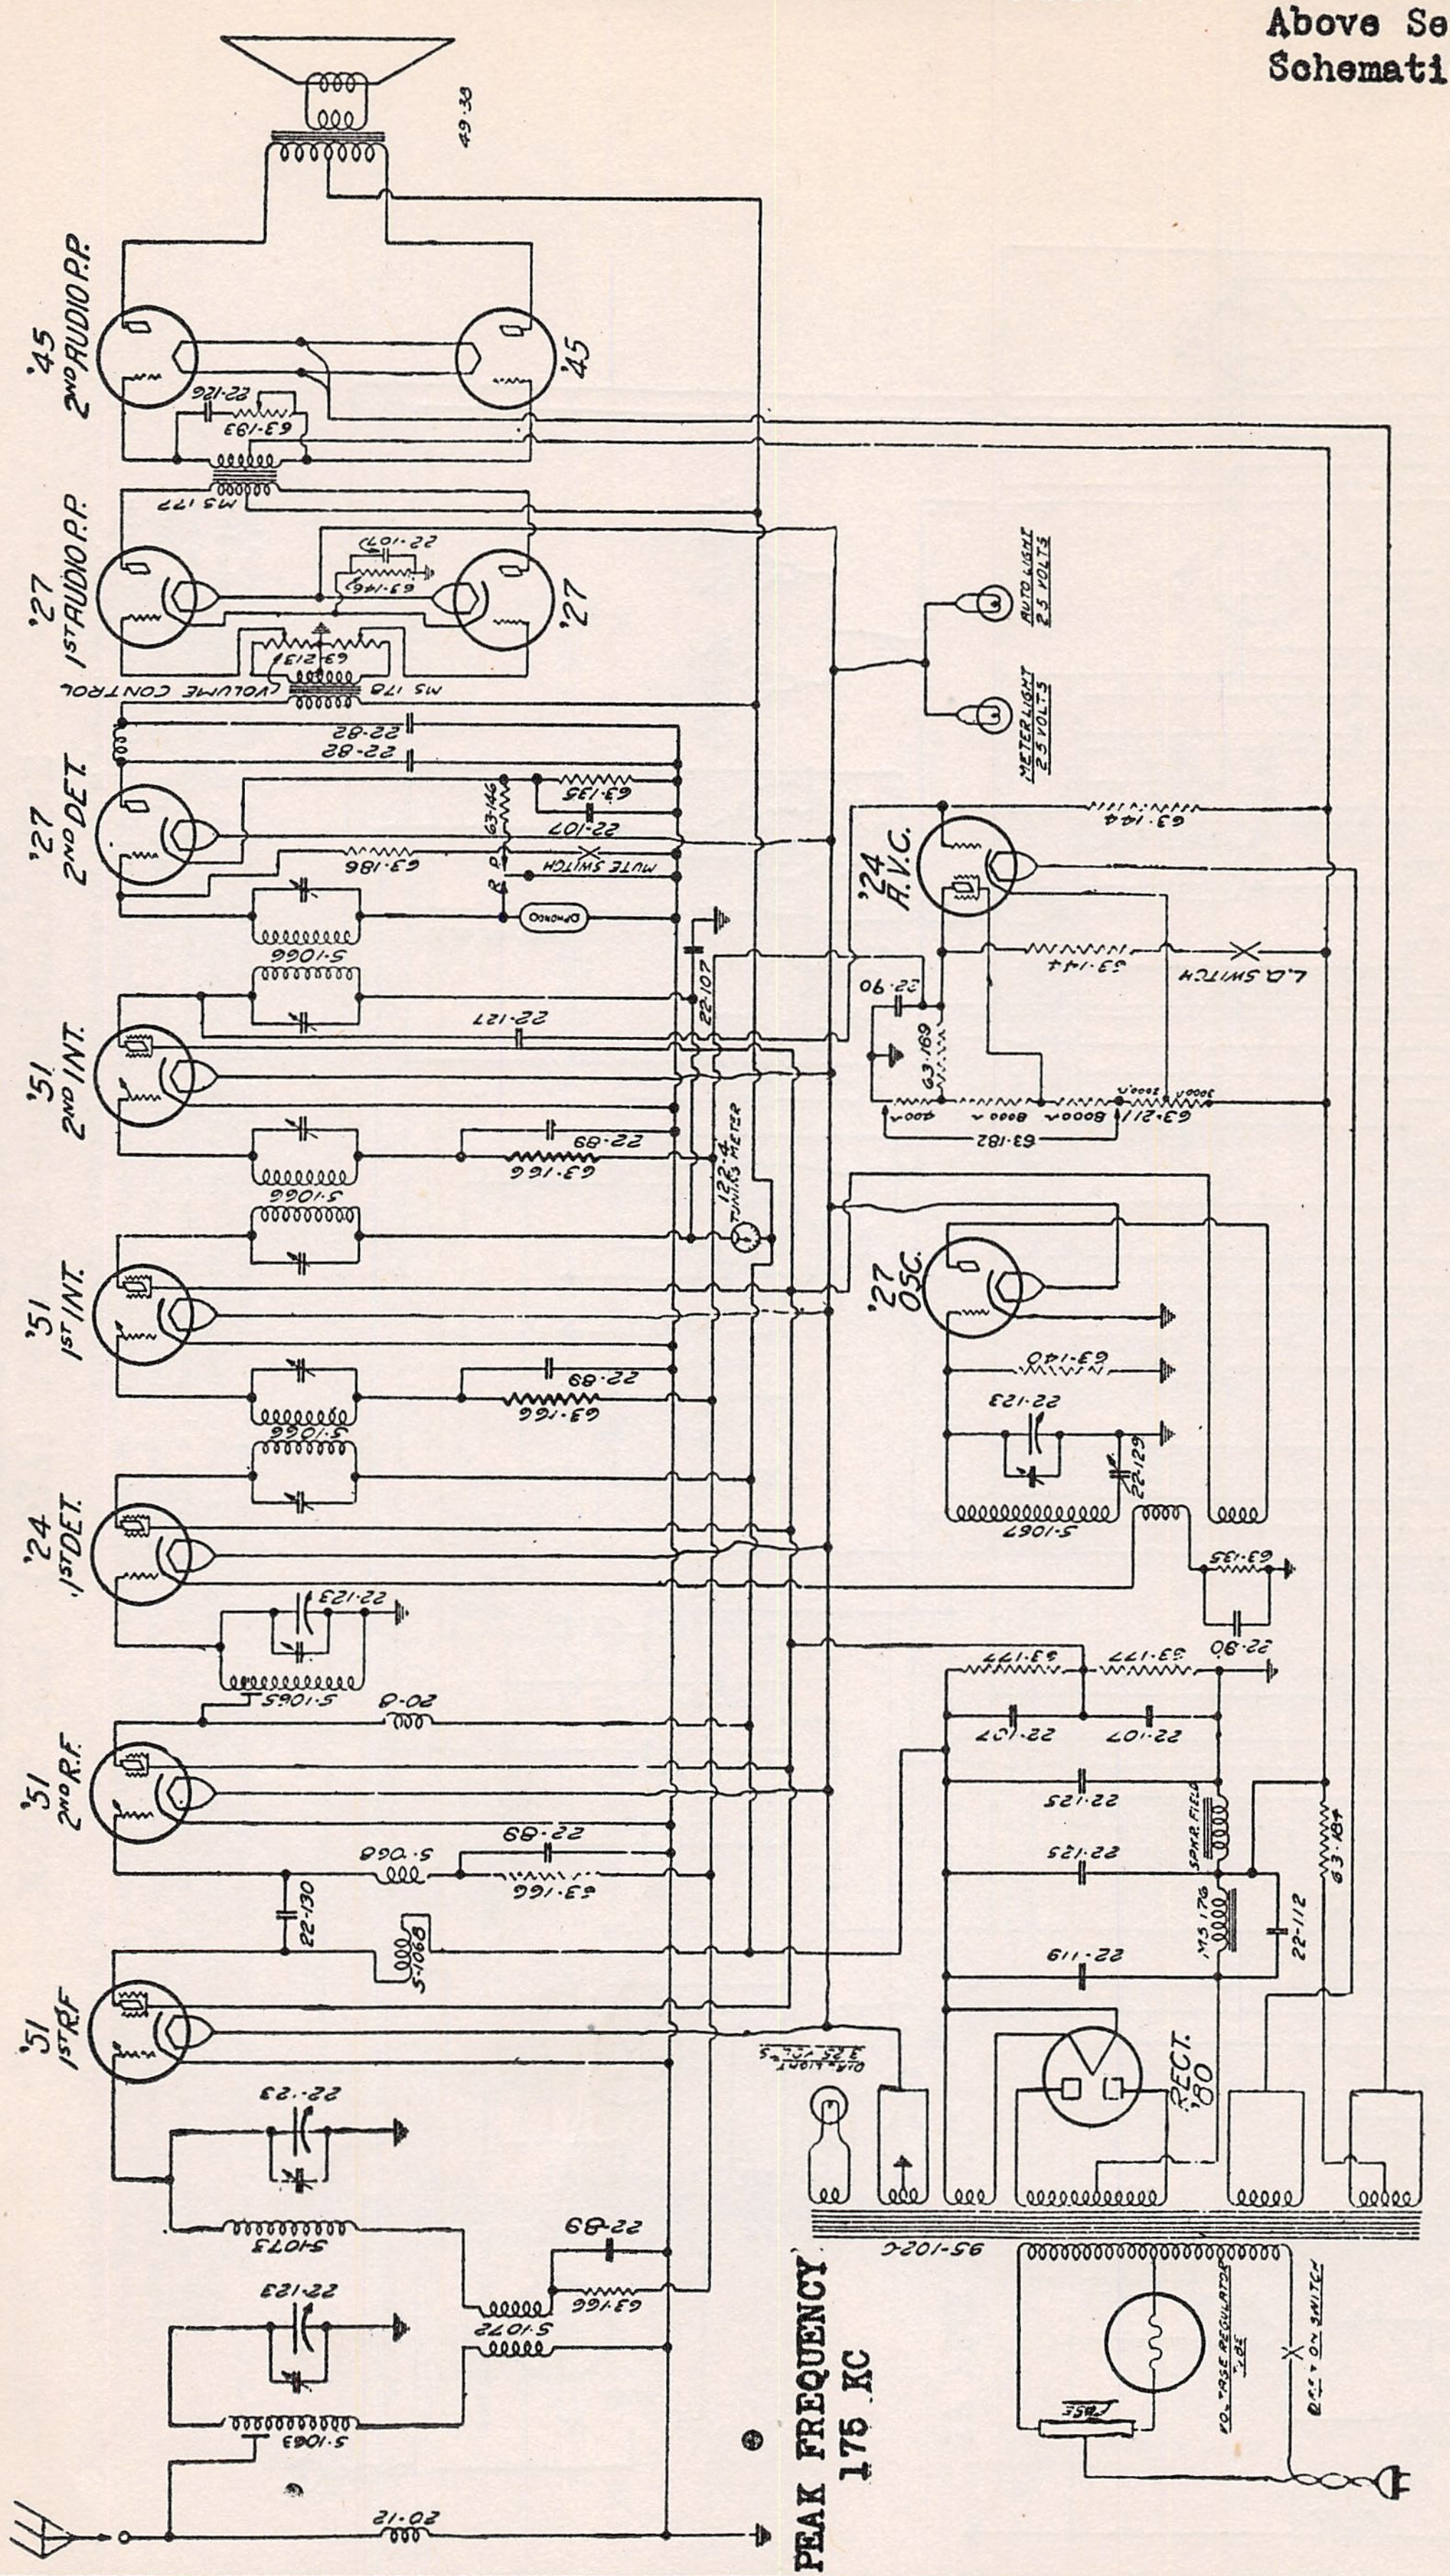
49-38
'45 2ND AUDIO P.P.
'45
22-126
63-193
MS 177
'27 1ST AUDIO P.P.
22-101
63-146
'27
63-213
MS 178
VOLUME CONTROL
22-82
22-82
'27 2ND DET.
63-135
63-146
22-107
63-186
MUTE SWITCH
R
P
PHONO
5-1066
22-127
'51 2ND INT.
22-89
63-166
5-1066
122-4 TUNING METER
22-107
'51 1ST INT.
22-89
63-166
5-1066
'24 1ST DET.
22-123
5-1065
20-8
'51 2ND R.F.
22-89
5-1068
63-166
22-130
5-1069
'51 1ST R.F.
22-23
5-1073
22-89
63-166
5-1072
22-123
5-1063
20-12
DIAL LIGHT 2.5 VOLTS
95-102-C
RECT. '80
63-177
63-177
22-90
22-107
22-107
22-125
22-125
SPKR FIELD
MS 176
22-112
63-184
22-119
'27 OSC.
63-140
22-123
22-129
5-1067
63-135
22-90
63-169
63-182
63-211
400Ω
8000Ω
8000Ω
2000Ω
3000Ω
63-144
L.D. SWITCH
'24 A.V.C.
63-144
METER LIGHT 2.5 VOLTS
AUTO LIGHT 2.5 VOLTS
FUSE
VOLTAGE REGULATOR
OFF & ON SWITCH

PEAK FREQUENCY 175 KC

MODEL 103 (2017) SERIAL NUMBERS AFTER 450,451 ONLY.

MODEL 103
Chassis 2017
Serials 450,001-450,450
Schematic.Notes

ZENITH RADIO CORP.

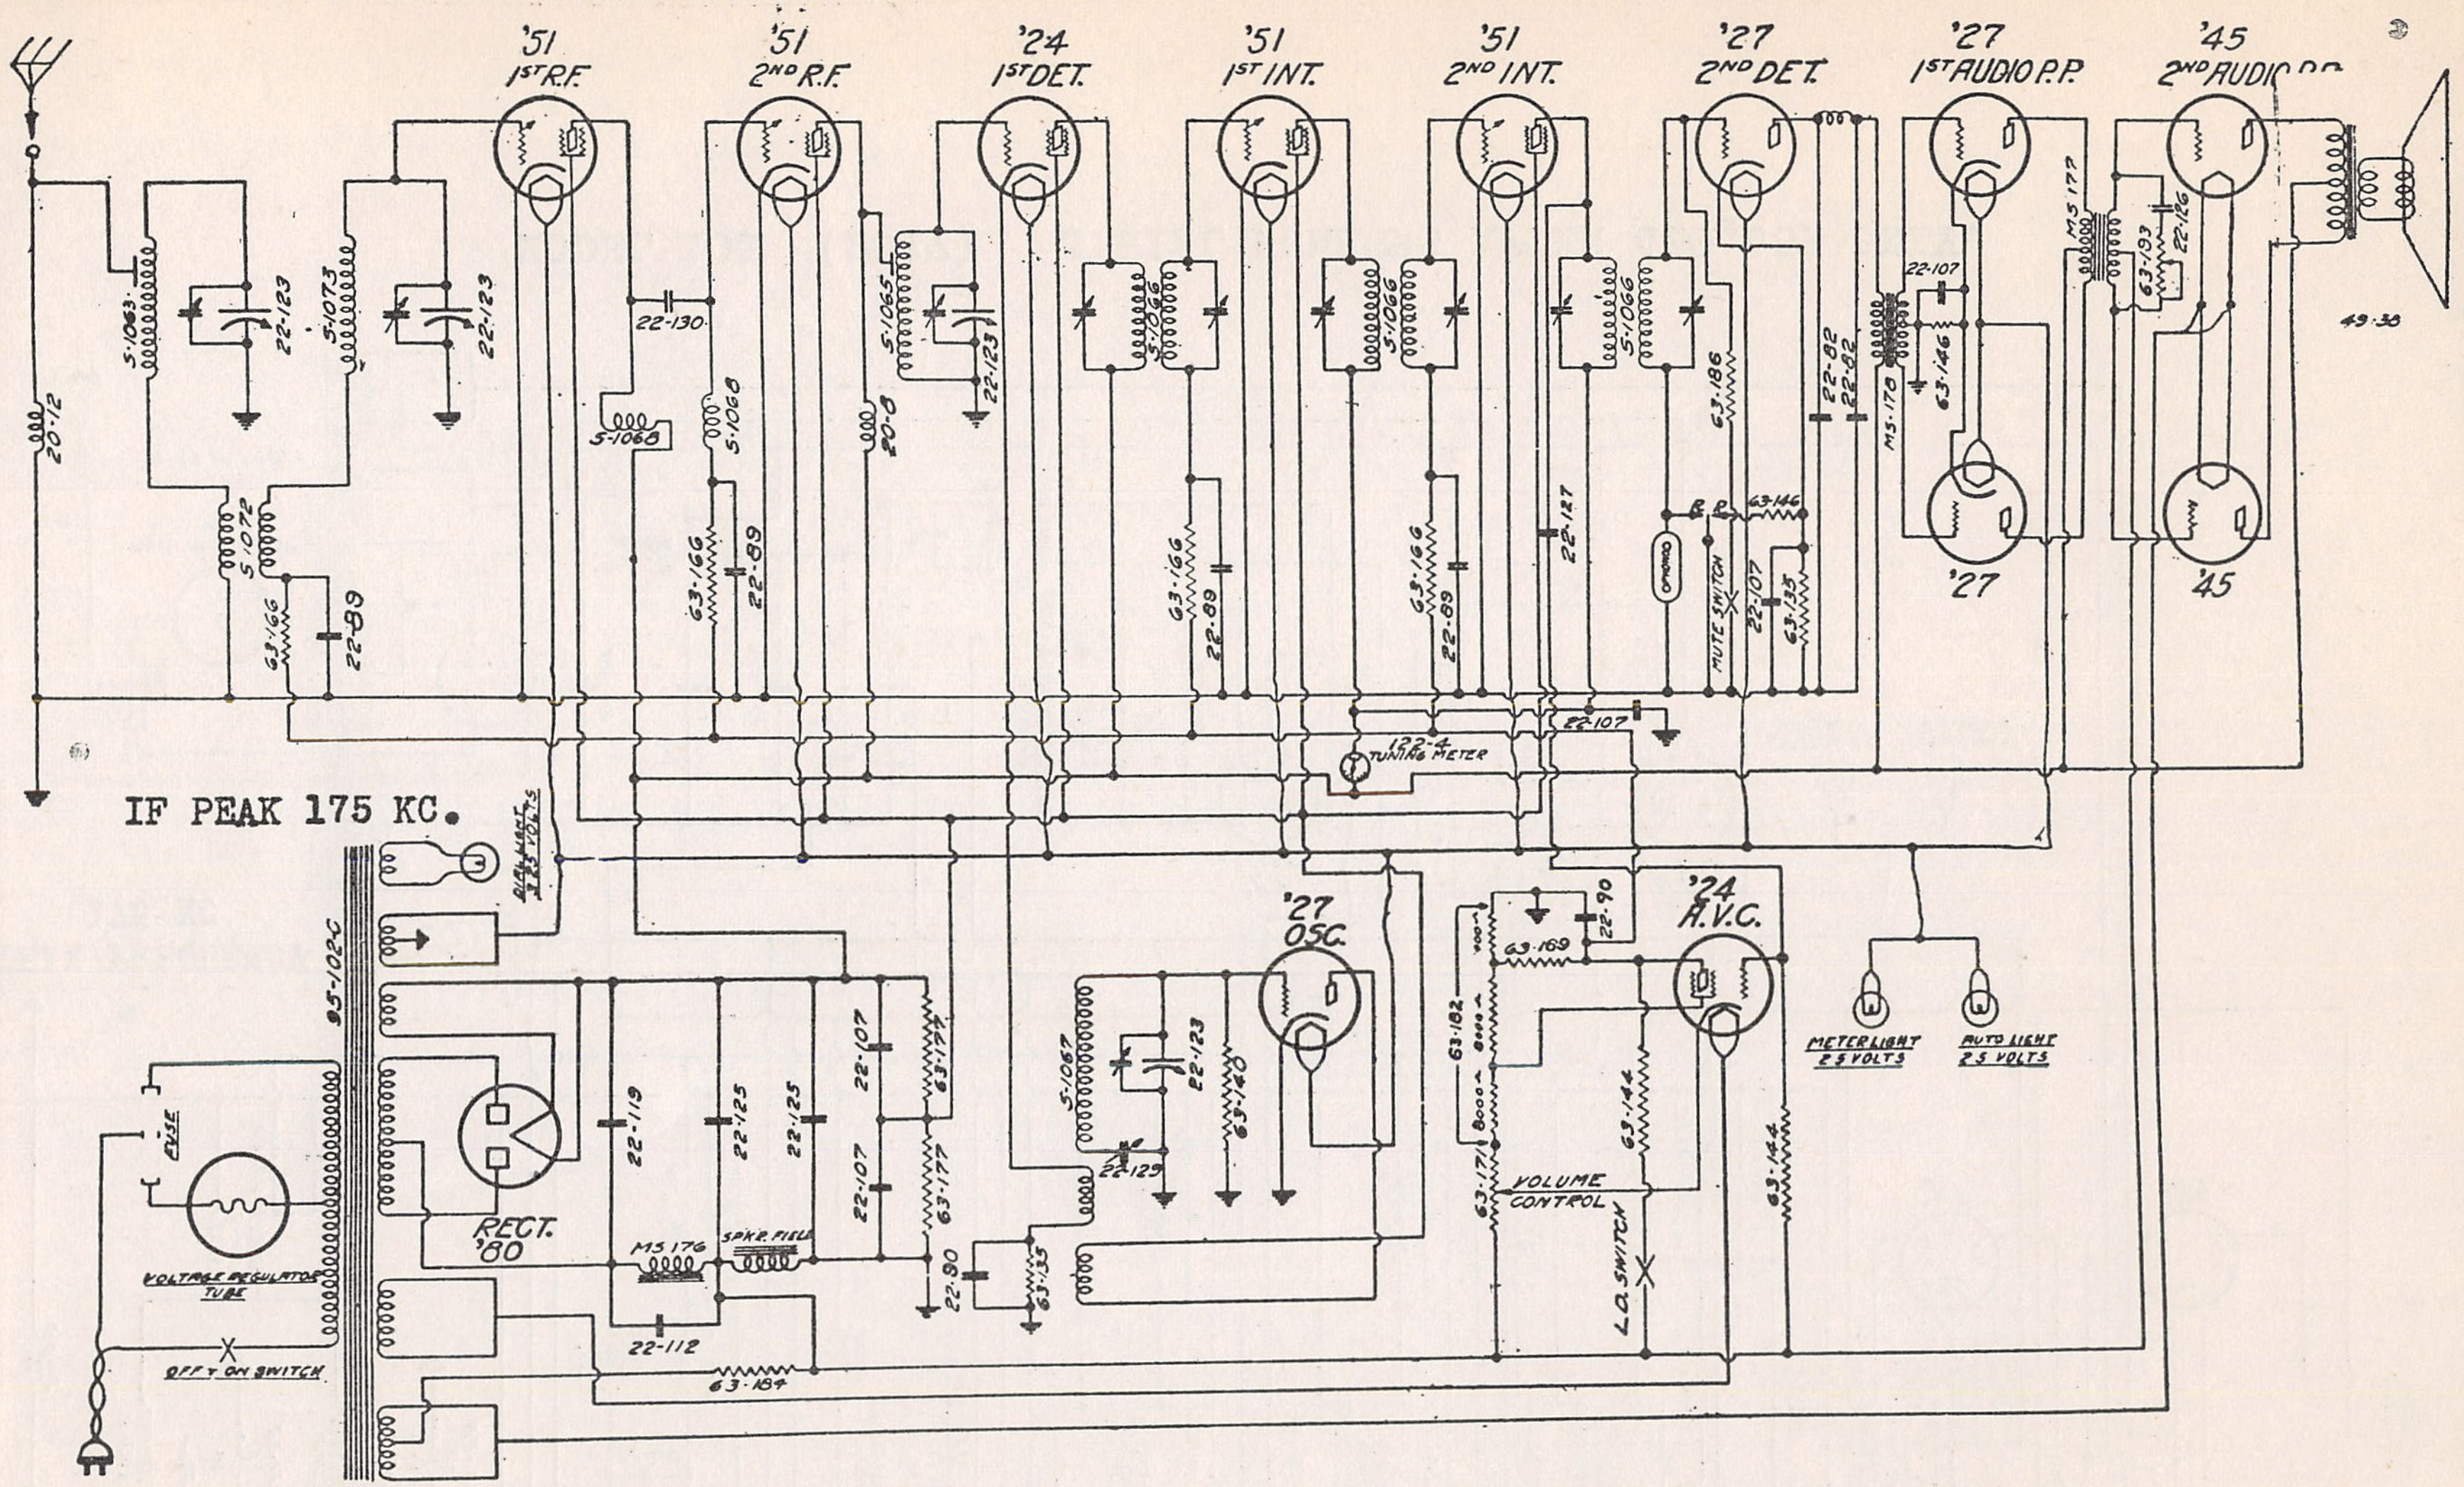
'51 1ST R.F.
'51 2ND R.F.
'24 1ST DET.
'51 1ST INT.
'51 2ND INT.
'27 2ND DET.
'27 1ST AUDIO P.P.
'45 2ND AUDIO P.P.
'27
'45
49-30
20-12
S-1063
22-123
S-1073
S-1072
63-166
22-89
22-130
S-1068
20-8
S-1065
S-1066
22-127
63-186
22-82
22-107
63-146
63-135
B.R.
PHONO
MUTE SWITCH
MS-178
MS 177
63-193
22-126
122-4 TUNING METER
IF PEAK 175 KC.
DIAL LIGHT 2.5 VOLTS
95-102-C
FUSE
VOLTAGE REGULATOR TUBE
OFF & ON SWITCH
RECT. '80
22-119
22-125
22-107
63-177
MS 176
SPKR. FIELD
22-112
63-184
22-90
63-135
S-1067
22-129
63-140
'27 OSC.
63-182
63-169
63-171
VOLUME CONTROL
63-144
L.D. SWITCH
'24 A.V.C.
METER LIGHT 2.5 VOLTS
AUTO LIGHT 2.5 VOLTS

It should be noted that the phonograph pick-up switch and jacks are connected in the grid return circuit of the second detector, consequently a howl will be heard if the phono switch is thrown to the phono position without a phono pick-up having been attached. Be sure this action is taken into consideration when servicing the receiver or if there is a complaint of very weak reception accompanied by a very peculiar howl.

It should be noted that the line fuse provided in the rear of the chassis has two positions. The fuse should normally be used in the "Regulator Tube In" position. If the regulator tube becomes defective and a replacement is not immediately available, the fuse may be placed in the "Regulator Tube Out" clips. Do not leave the voltage regulator tube out permanently since line fluctuation or high voltage may cause damage to the tubes or power transformer.

MODEL 103 (2017) 14 TUBE SUPERHETERODYNE
SERIAL NUMBERS 450,001 TO 450,450

ZENITH RADIO CORP.

MODEL 103
Chassis Layout
Parts List

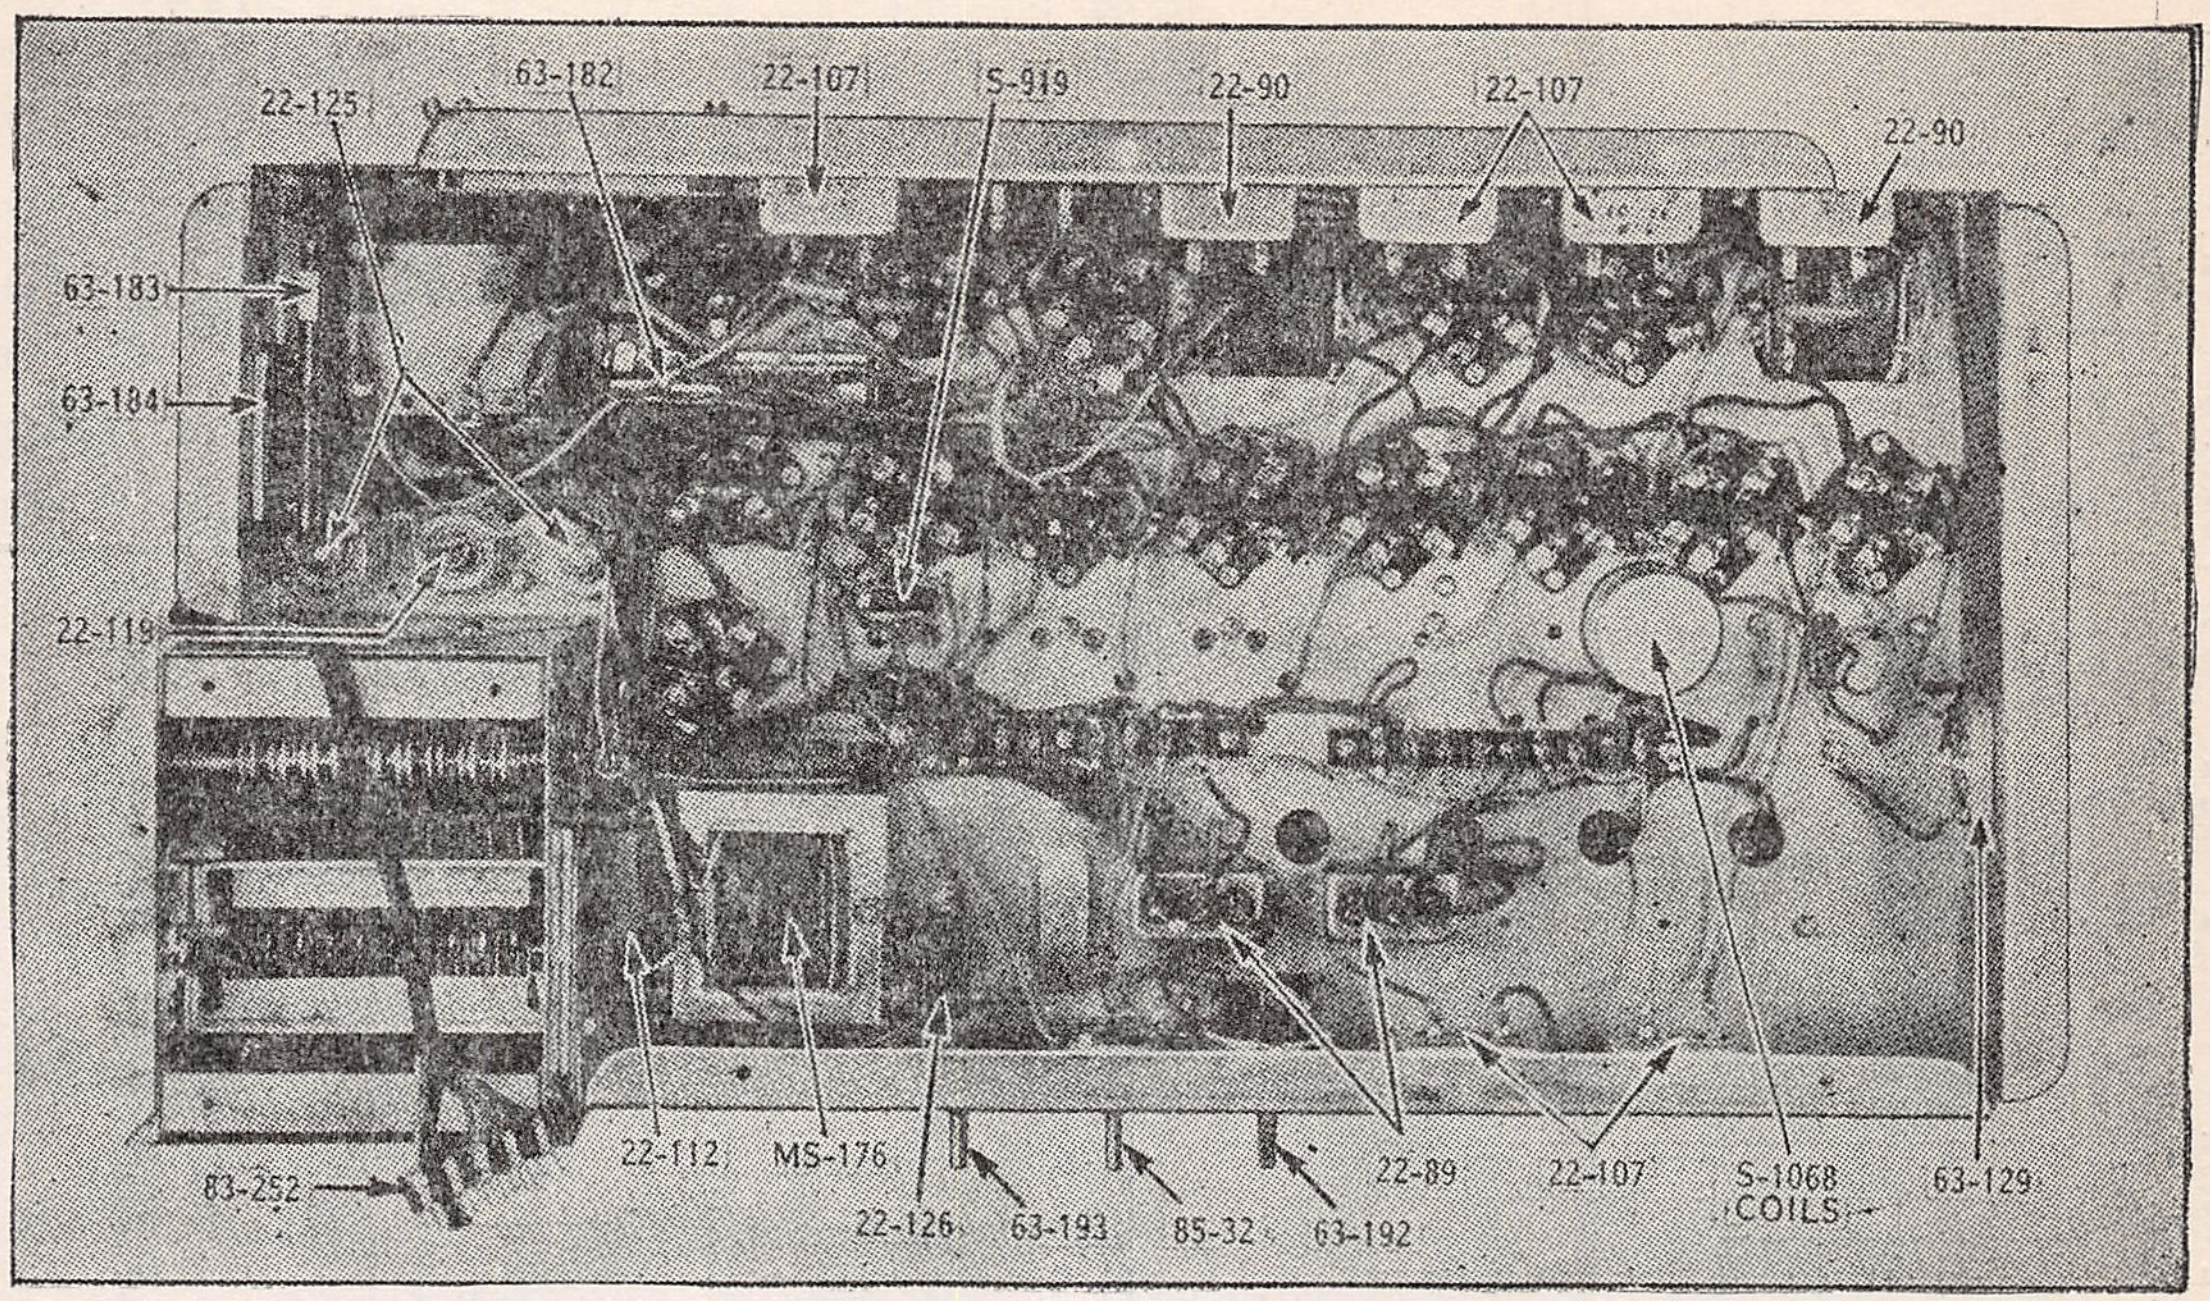

MISCELLANEOUS

19-21	Grid Clip	.02
44-4	Phono Jack Base Assembly	.30
46-49	Tuning Knob	.25
46-55	Control Knob (3 used)	.20
49-38	Dynamic Speaker	25.00
52-25	Speaker Multicord	.45
57-308	Dial Escutcheon Plate	.80
57-309	Meter Escutcheon Plate	.35
73-8	Small Set Screw for Auto Coupling	.01
78-36	Z-51 Socket	.20
78-37	Z-27 Socket	.20
78-38	Z-24 Socket	.20
78-40	Z-80 Socket	.20
78-41	Z-45 Socket	.20
78-42	Amperite Socket	.15
83-252	Speaker Multicord Terminal Strip	.20
85-24	Phono Switch	.75
85-32	Local Distance and Mute Switch	1.00
93-147	Electrolytic Condenser Insulating Washer	.02
95-102	110 volt 60 cycle Power Transformer	8.00
95-116	110 volt 25 cycle Power Transformer	13.50
114-6	Large Set Screw for Auto Coupling	.05
136-2	2 amp Fuse	.10
143-11	Auto Coupling Collar	.85
S-1037	Auto Control Shaft Assembly	.90
MS-176	Power Choke	4.00
MS-177	Audio Transformer (Six Lead)	5.50
MS-178	Audio Transformer (Five Lead)	5.50

CONDENSERS

22-82	.001	Mfd. ...(2nd Detector Plate)	$ .30
22-89	.1	Mfd. ...(2 used, see footnote)	.85
22-90	.1	Mfd. ...(2 used, see footnote)	.55
22-107	.1	Mfd. ...(5 used, see footnote)	.85
22-112	.1	Mfd. ...(Choke Bypass)	.35
22-119	6.	Mfd. ...(Electrolytic)	2.50
22-123		Four Gang Variable	10.00
22-125	8.	Mfd. ...(Electrolytic)	1.50
22-126	.006	Mfd. ...(Tone Control)	.55
22-127	.000025	Mfd. ...(A. V. C. Coupling)	.35
22-129		Padder	.75
22-130	.0001	Mfd. ...(R. F. Coupling)	.20

COILS

20-8	2nd R. F. Plate Choke	.50
20-12	Antenna Choke	.50
S-919	2nd Detector Plate Choke and Bracket	.60
S-1063	Pre-Selector (Coil Only)	2.00
S-1073	1st R. F. (Coil Only)	.90
S-1065	1st Detector (Coil Only)	1.80
S-1066	I. F. Transformer (Specify with or without Grid Lead)	2.85
S-1067	Oscillator (Coil Only)	1.65
S-1068	2nd R. F. Untuned Transformer	2.00
S-1072	Coupling Coil	.90

RESISTORS

63-135	25M	Ohm...(1st, 2nd Detector Cathode)	.30
63-140	1 Meg	Ohm...(Oscillator Grid)	.30
63-146	2M	Ohm...(2nd Detector and A. F.)	.30
63-166	1400	Ohm...(R. F. and I. F. Grid Return)	.30
63-169	400M	Ohm...(A. V. C. Plate)	.30
63-182	16400	Ohm...(A. V. C. Divider, Metal Mtg.)	.75
63-183	6M	Ohm...(Voltage Divider, see footnote)	.65
63-184	750	Ohm...(Power Bias)	.30
63-186	5M	Ohm...(2nd Detector Grid)	.30
63-192		Volume Control and Switch Assembly	1.75
63-193		Tone Control	1.00
63-144	3 Meg	Ohm...(A. V. C. Grid)	.30

DIAL ASSEMBLY

S-1003	Dial Light Socket and Clip (less lamp)	$ .60
S-1009	Tuning Shaft and Bracket Assembly	1.50
S-1010	Drum Gear and Cam	.85
S-1106	Dial Pointer and Reflector Plate	1.50
S-1110	Dial Strip and Bracket	.85
6-14	Pointer Arm Bearing	.20
15-12	Dial Light Clip	.35
76-110	Dial Elevator Shaft	.10
80-72	Pointer Arm Tension Spring	.08
94-119	Roller Bearings	.08
100-18	2½ volt Meter Lamp	.25
100-20	3¼ volt Dial Lamp	.60
122-4	Tuning Meter and Cord	2.25
148-3	Dial Elevator Arm	.35

Note: 22-89 1st, 2nd, R. F. and 1st, 2nd, I. F. Grids.
22-90 1st Detector Cathode and A. V. C. Plate.
22-107 2nd Detector Cathode, 1st A. F. Bias, I. F. Plate and Voltage Divider.
63-183 Specify—Porcelain or Metal Mounted Type.

IMPORTANT: GIVE SERIAL NUMBER OF RECEIVER ON ALL PARTS ORDERS.
ALL PRICES ARE SUBJECT TO REGULAR DISCOUNT AND CHANGE WITHOUT NOTICE.

MODEL 103
Chassis 2017
Above Serial # 451,260
Schematic

ZENITH RADIO CORP.

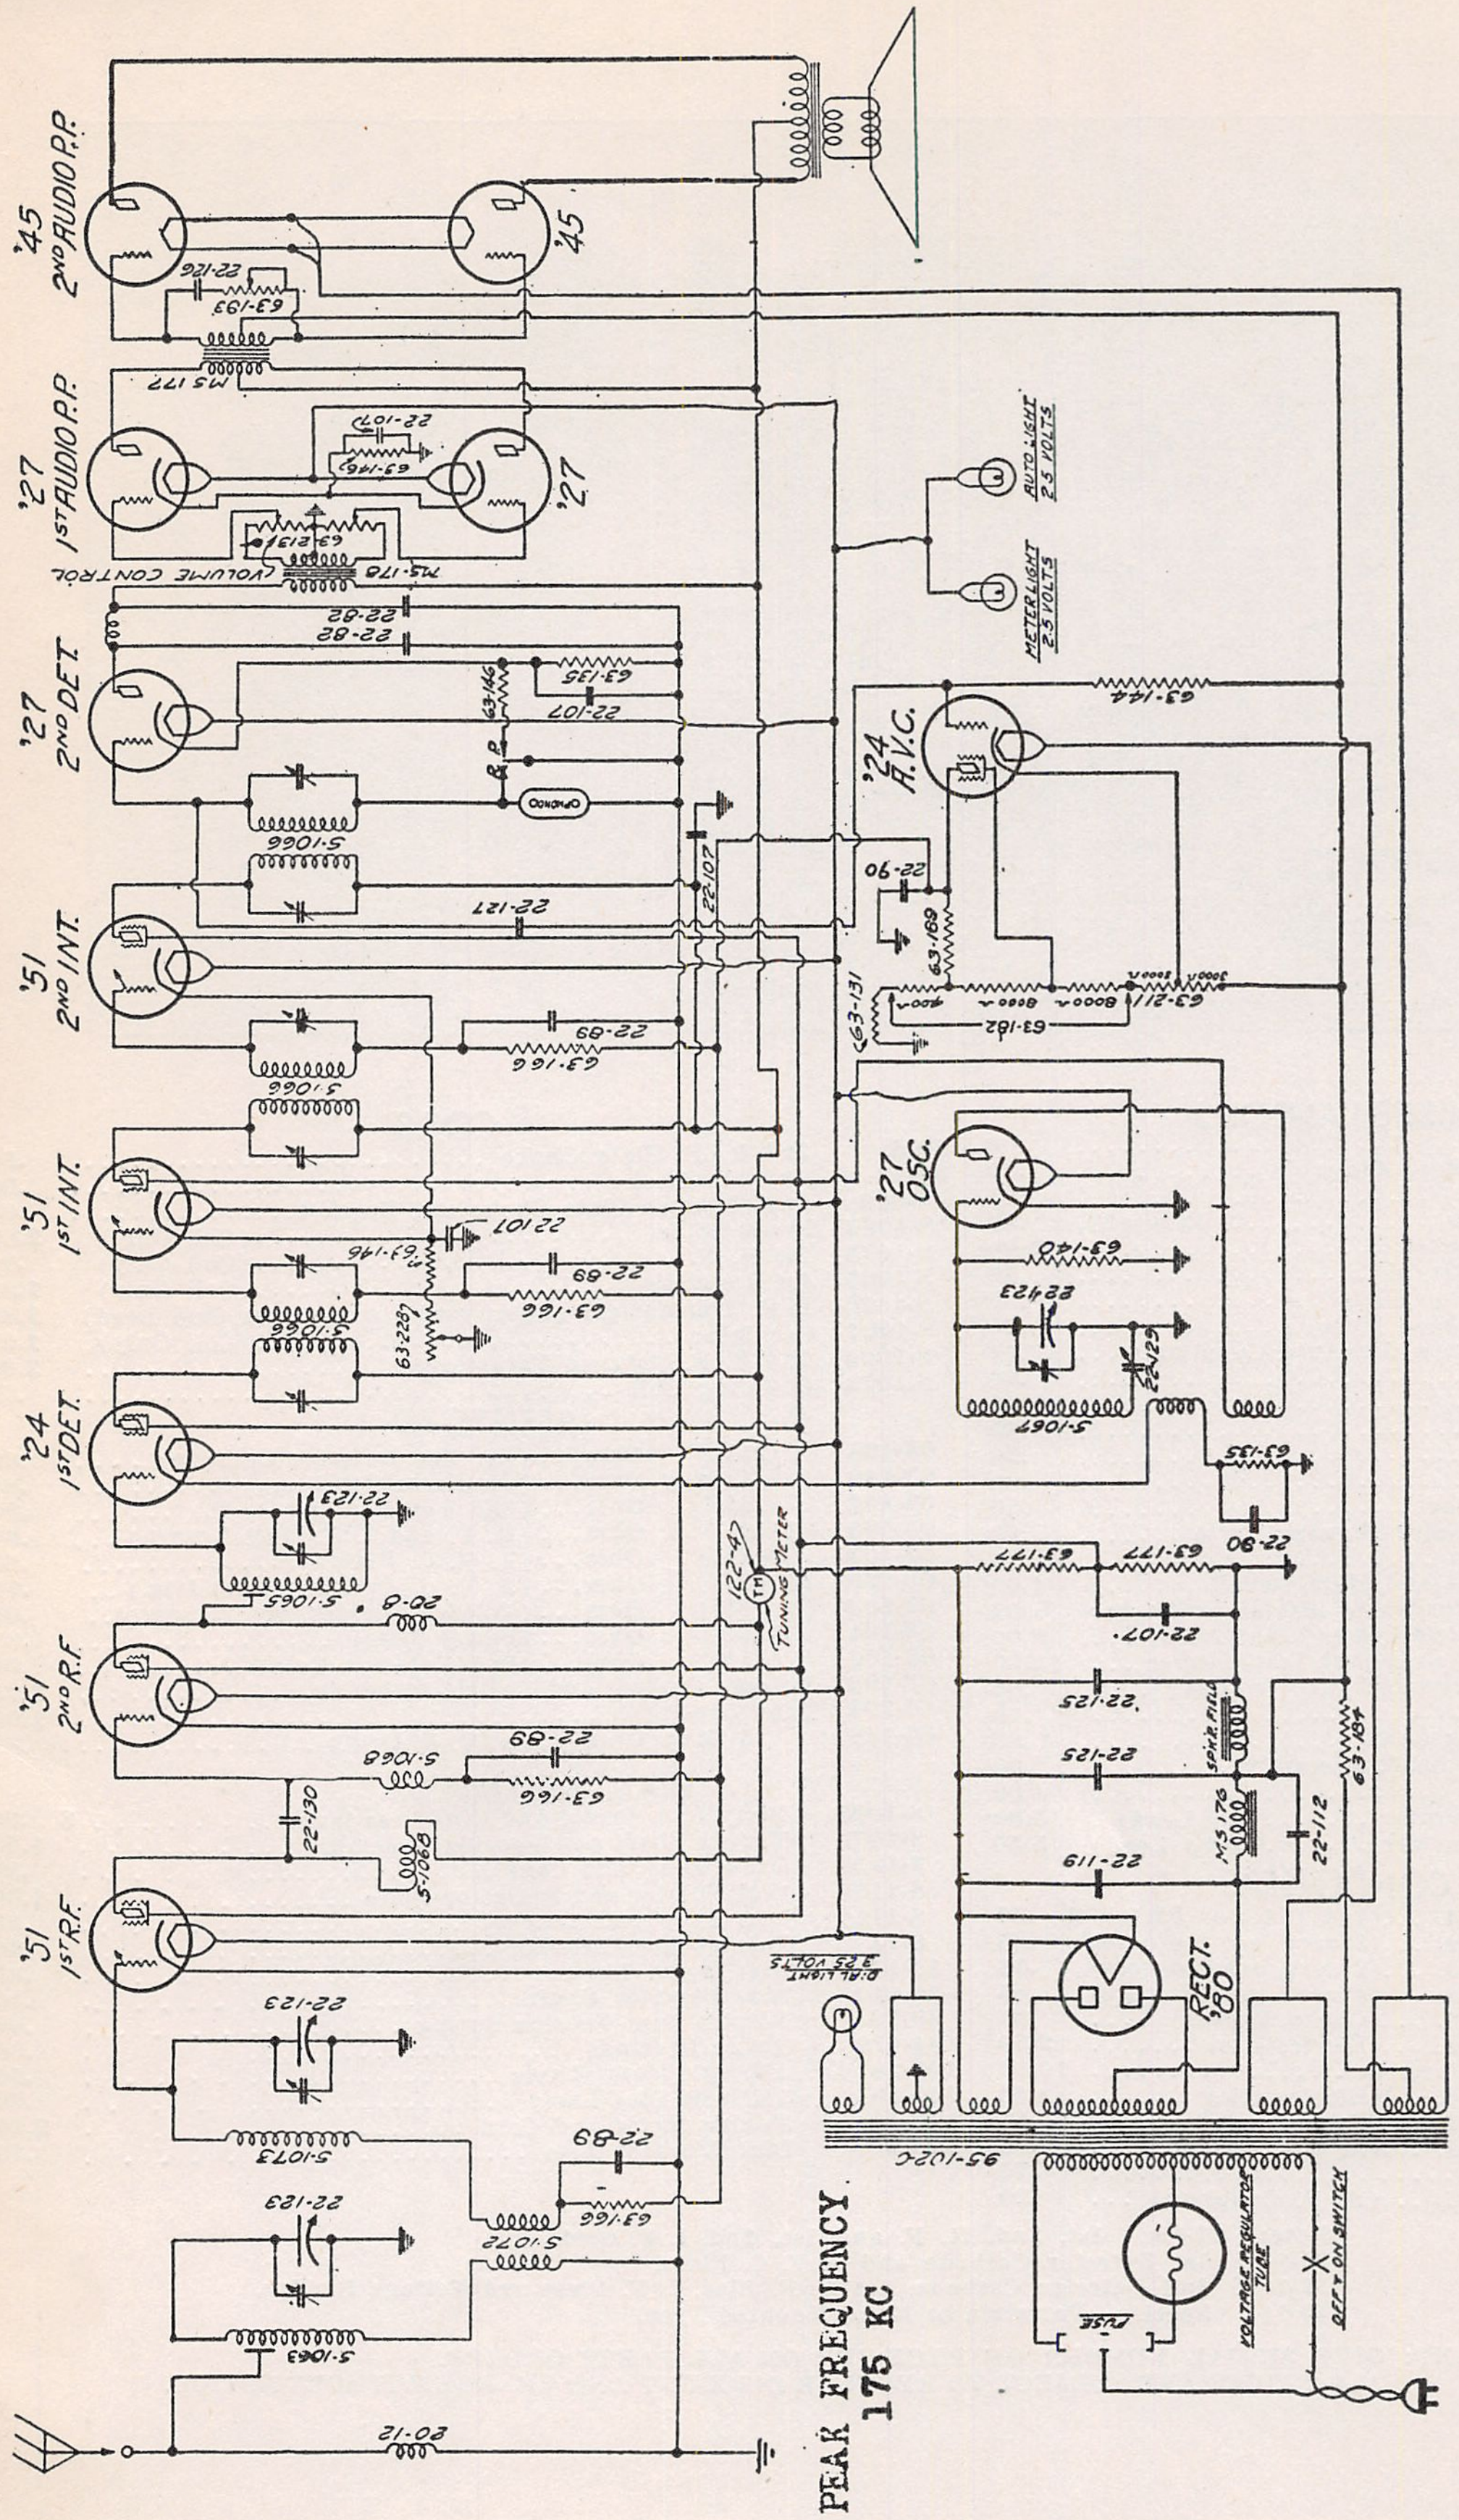
'45 2ND AUDIO P.P.
'45
'27 1ST AUDIO P.P.
'27
VOLUME CONTROL
'27 2ND DET
'51 2ND INT.
'51 1ST INT.
'24 1ST DET.
'51 2ND R.F.
'51 1ST R.F.
'24 A.V.C.
'27 OSC.
RECT. '80
AUTO LIGHT 2.5 VOLTS
METER LIGHT 2.5 VOLTS
(22-4) TUNING METER
DIAL LIGHT 2.5 VOLTS
PHONO
R.P.
SPKR. FIELD
FUSE
VOLTAGE REGULATOR TUBE
OFF-ON SWITCH
MS 172
MS-178
MS-176
95-102-C
22-126
63-193
22-107
63-146
63-213
22-82
63-135
S-1066
22-127
22-89
63-166
63-226
22-123
S-1065
20-8
22-130
S-1068
S-1073
S-1072
S-1063
20-12
22-90
63-169
63-131
63-182
63-211
63-144
63-140
22-125
22-119
22-112
63-184
63-177
22-80
S-1067
22-129

PEAK FREQUENCY
175 KC

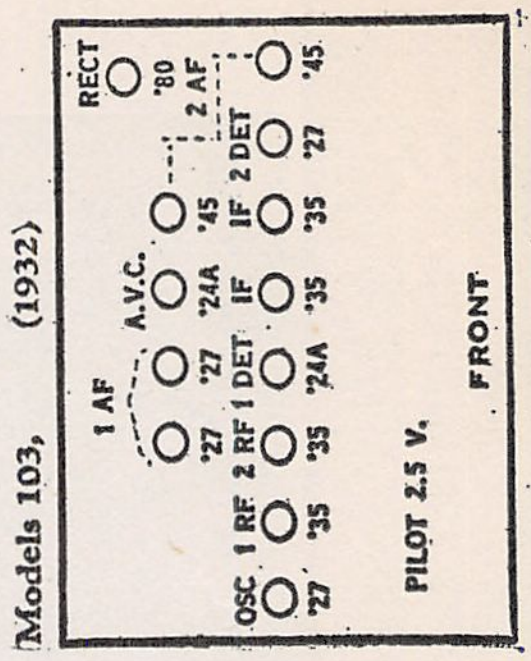
Models 103, (1932)
RECT
'80
1 AF
A.V.C.
2 AF
OSC
'27
1 RF
'35
2 RF
'35
1 DET
'24A
IF
'35
2 DET
'27
'27
'27
'24A
'45
'45
PILOT 2.5 V.
FRONT

MODEL 103 (2017) SERIAL NUMBERS AFTER 451,260

MODEL 103
Chassis Layout
Voltage

ZENITH RADIO CORP.

Socket Voltages

Type	Position	Fil. Volts	Plate Volts	Control Grid Volts	Cathode Volts	Plate M. A.	S. G. Volts
Z-51	Ist. R. F.	2.2	185	— 9.	0.	2.5	80
Z-51	2nd. R. F.	2.2	200	— 3.9	0.	3.	84
Z-24	1st Det.	2.2	185	0.	+ 7.	.25	70
Z-27	Osc.	2.2	80	0.	0.	7.	0
Z-51	I. F.	2.2	185	— 4.	0.	3.	90
Z-51	I. F.	2.2	185	— 4.	0.	2.	90
Z-27	2nd. Det.	2.2	185	0.	+17.5	.5	0
Z-27	1st. P. P.	2.2	165	0.	+12.5	3.	0
Z-27	1st. P. P.	2.2	165	0.	+12.5	3.	0
Z-45	2nd. P. P.	2.3	240	—48.	0.	36.	0
Z-45	2nd. P. P.	2.3	240	—48.	0.	36.	0
Z-24	A. V. C.	2.3	30	— .4	0.	0.	45
Z-80	Rect.	5	350	0.	0.	70.	0
	Vol. Reg.	Con-	tin-	uity	test	only.	

Voltage readings taken with a Weston model 566 type 3 tester. Manual volume control in maximum position and antenna and ground disconnected. Line voltage 112

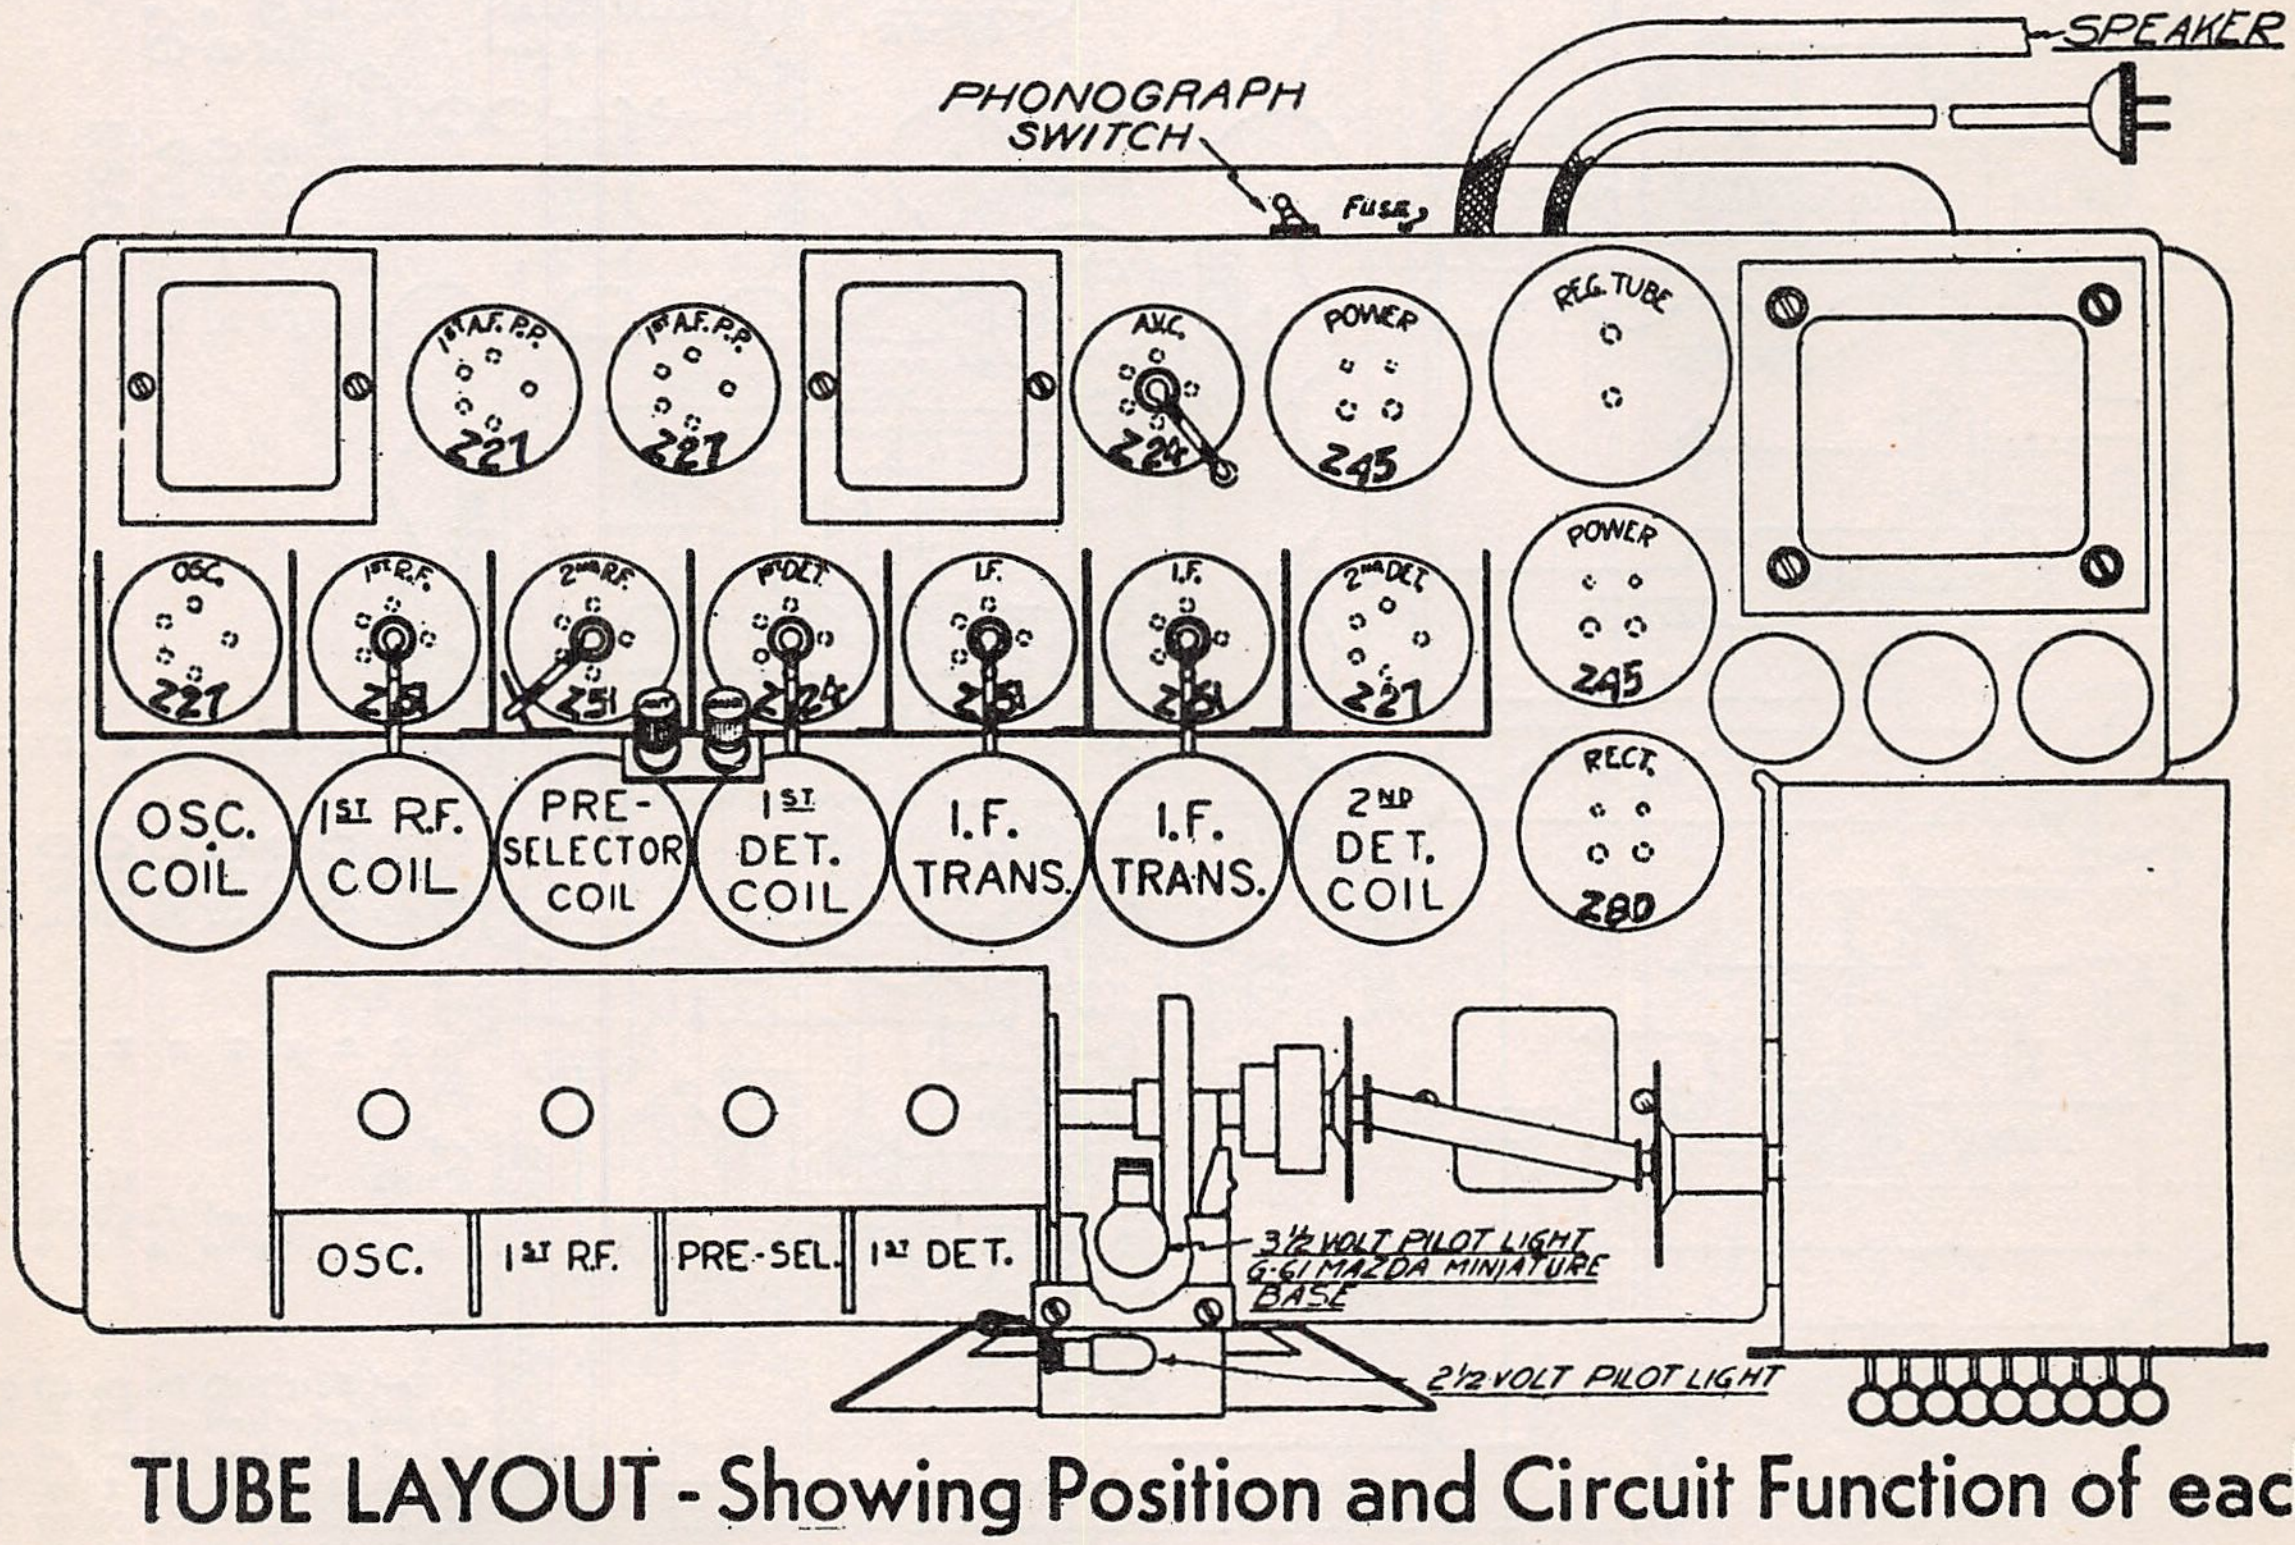
SPEAKER
PHONOGRAPH SWITCH
FUSE
1ST A.F. P.P.
Z27
1ST A.F. P.P.
Z27
A.V.C.
Z24
POWER
Z45
REG. TUBE
OSC.
Z27
1ST R.F.
Z51
2ND R.F.
Z51
1ST DET.
Z24
I.F.
Z51
I.F.
Z51
2ND DET.
Z27
POWER
Z45
RECT.
Z80
OSC. COIL
1ST R.F. COIL
PRE-SELECTOR COIL
1ST DET. COIL
I.F. TRANS.
I.F. TRANS.
2ND DET. COIL
OSC.
1ST R.F.
PRE-SEL.
1ST DET.
3½ VOLT PILOT LIGHT G-61 MAZDA MINIATURE BASE
2½ VOLT PILOT LIGHT

TUBE LAYOUT - Showing Position and Circuit Function of each.

ZENITH RADIO CORP.

MODEL 250,260,272
Chassis 2031
Schematic

Coils - Chokes

S-919	2nd Detector Plate Choke
S-1193	S.W.Detector Plate Choke
S-2117	2nd I.F.Coil Assembly...
S-2118	1st I.F.Coil Assembly...
S-2161	Detector S.W. Coil......
S-2162	Oscillator S.W. Coil....
S-2167	1st R.F.Coil Assembly...
S-2169	Oscillator Coil L.W.....
S-2171	1st Detector Coil L.W...

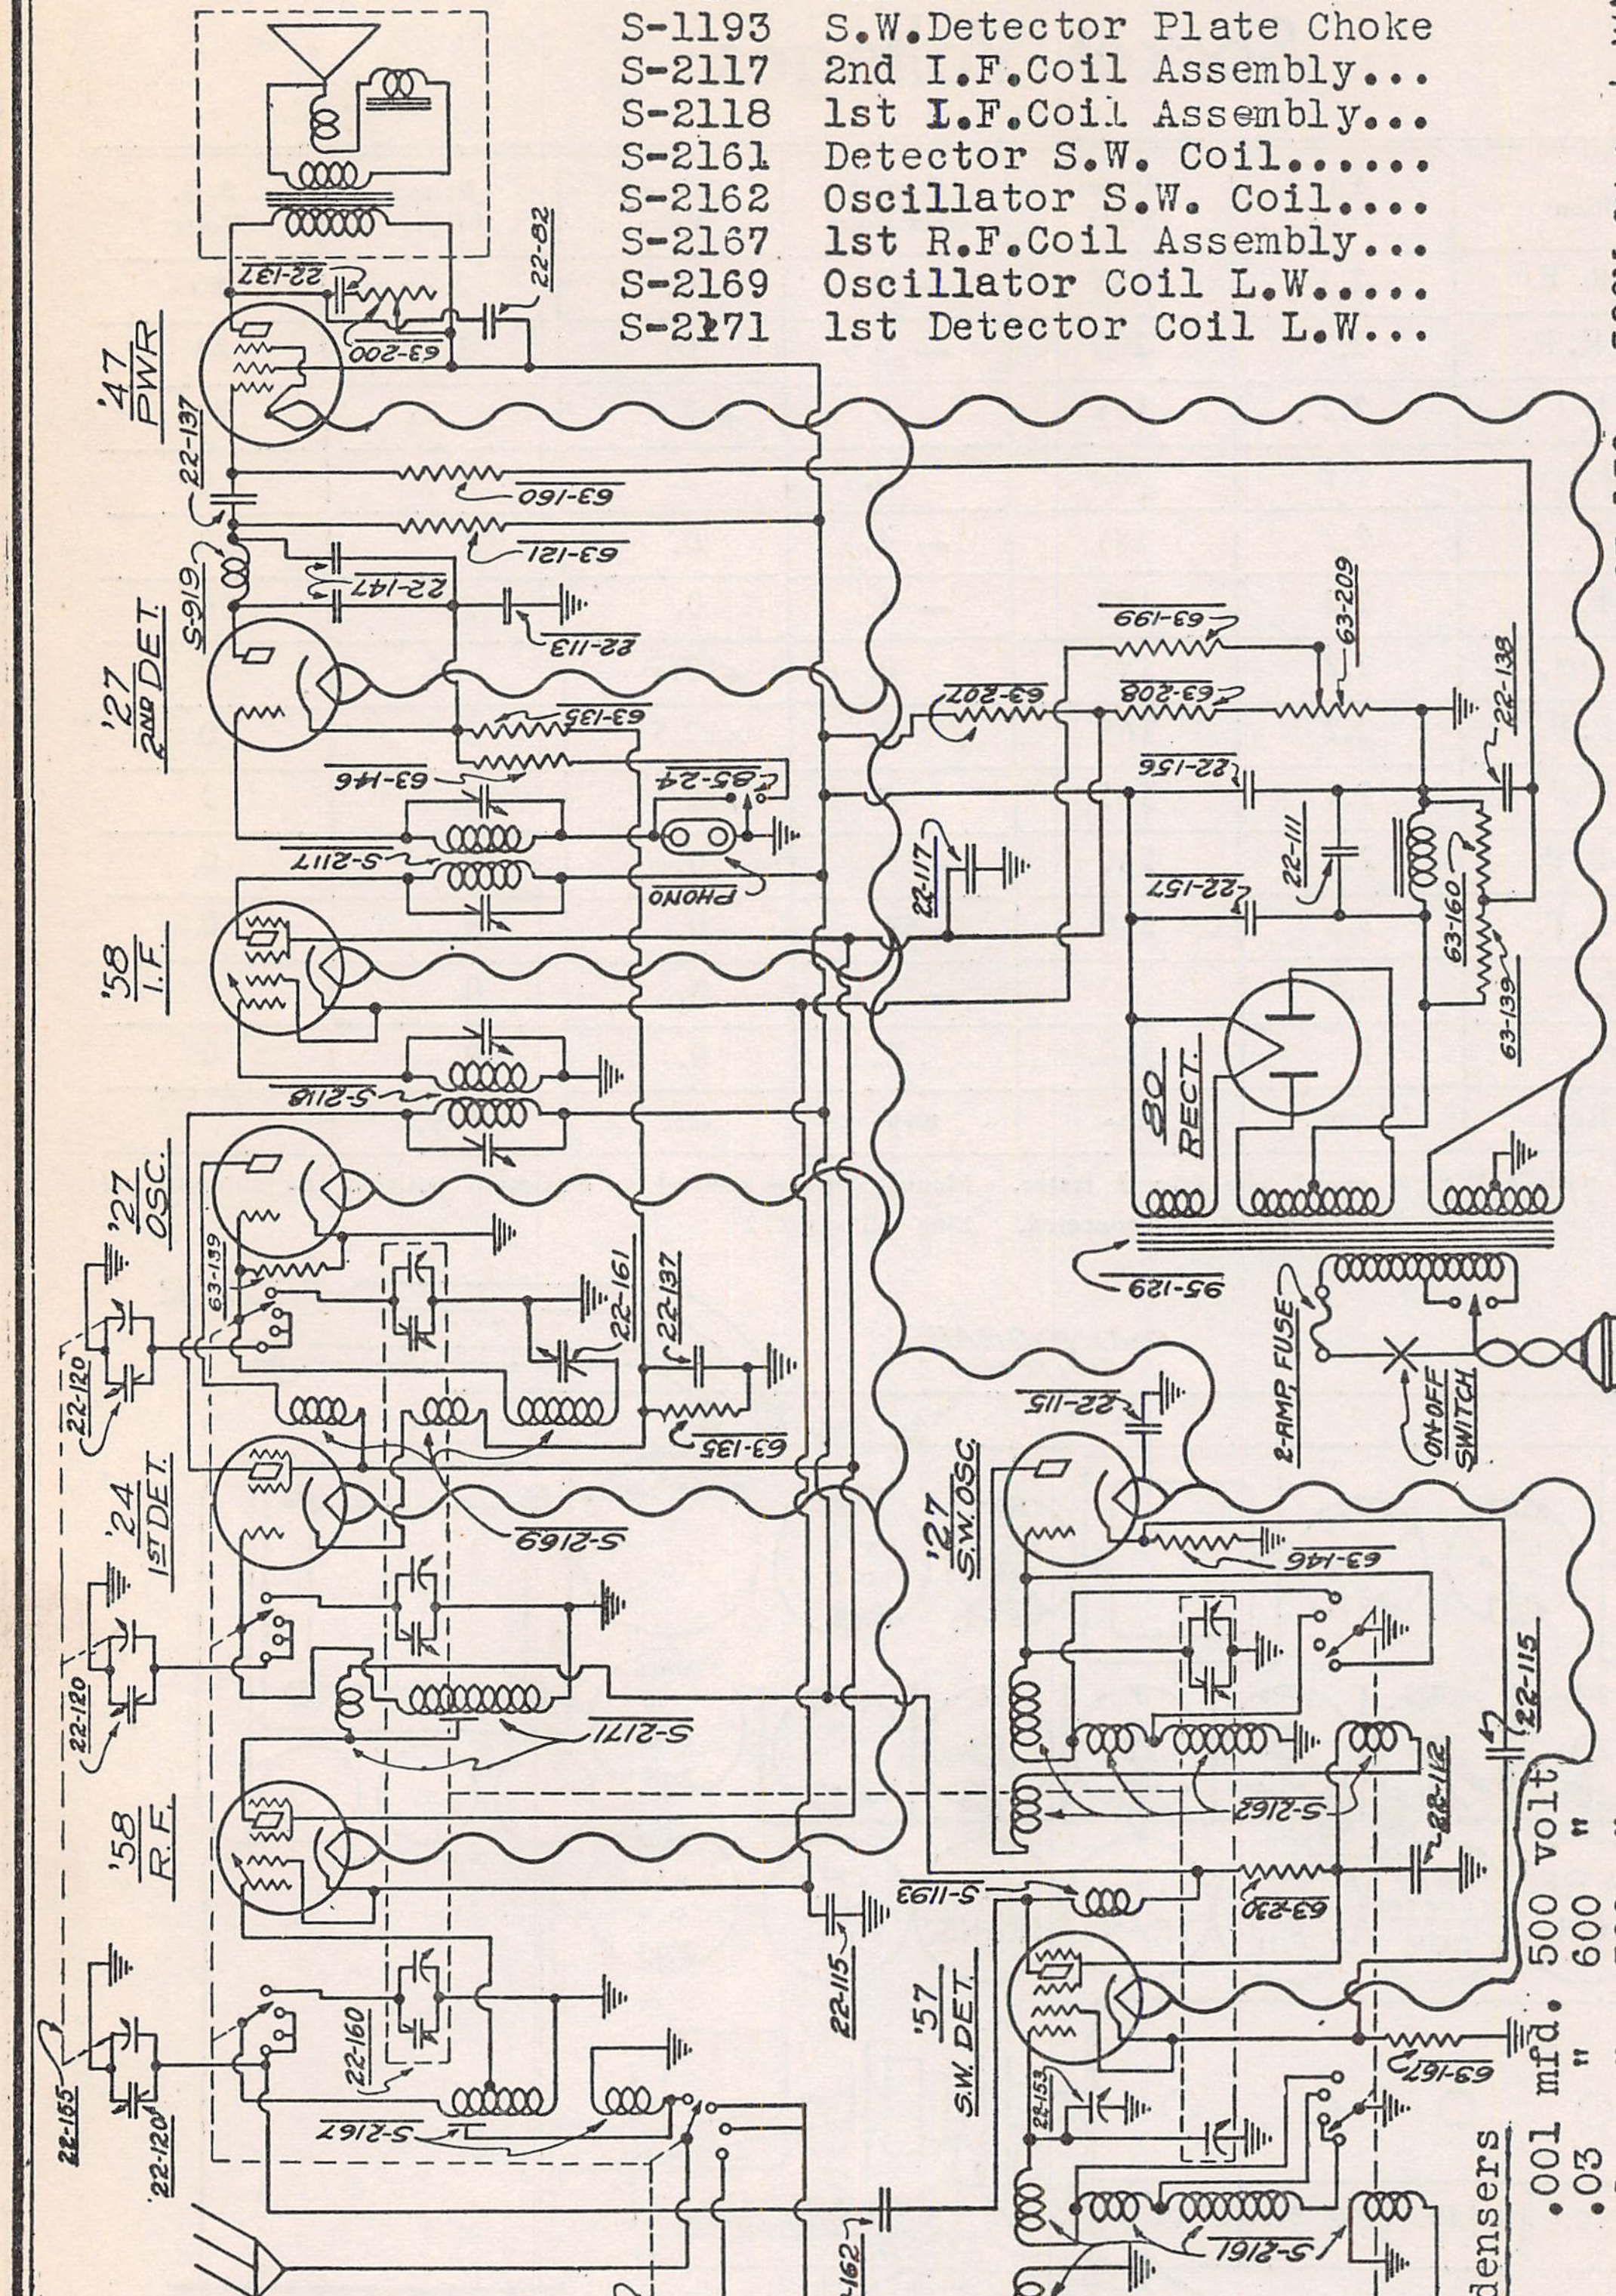
'47 PWR
'27 2ND DET.
'58 I.F.
'27 OSC.
'24 1ST DET.
'58 R.F.
'57 S.W. DET.
'27 S.W. OSC.
80 RECT.
PHONO
2-AMP. FUSE
ON-OFF SWITCH
TO 115 OR 230 VOLTS A.C.
22-82
22-137
63-200
63-160
63-121
S-919
22-147
22-113
63-135
63-146
85-24
S-2117
S-2118
63-139
22-120
22-161
22-137
63-135
S-2169
S-2171
22-160
22-155
S-2167
85-36
22-162
22-115
S-1193
63-230
S-2162
22-112
22-115
63-161
22-153
S-2161
63-146
22-115
63-199
63-209
63-207
63-208
22-138
22-156
22-117
22-111
22-157
63-160
63-139
95-129

Condensers

22-82	.001 mfd.	500	volt
22-111	.03 "	600	"
22-112	.1 "	300	"
22-113	.5 "	200	"
22-115	.1 "	200	"
22-117	.5 "	300	"
22-137	.05 "	400	"
22-138	.2 "	200	"
22-147	.0005 "	600	"
22-153	Short Wave Variable Trimmer		
22-155	Three Gang Variable Trimmer		
22-156	6. mfd. Electrolytic		
22-157	8. " Electrolytic		
22-162	.0001 mfd. 600 volt		

Resistors

63-121	100M ohm	1 watt	
63-135	25M "	½ "	
63-139	500M OHM	½ WATT	
63-146	2M "	½ "	
63-160	100M "	½ "	
63-167	3M "	½ "	
63-199	150 "	1	
63-207	10M ohm	½ watt	
63-208	12M "		
63-230	15M ohm.		

ZENITH RADIO CORP.

MODELS 500,501,503,514,
515,516,600,604,
606,610,616,618
Chassis 2037
Parts List

Resistors

63-121	100M ohm,	1 Watt	(2nd Detector Plate)	....
63-135	25M "	½ "	(2nd Detector Cathode)	.....
63-137	250M "	½ "	(Oscillator & Power Grid)	..
63-140	1 meg"	½ "	(A.V.C. Screen)	....
63-160	100M "	½ "	(A.V.C.Plate)	....
63-169	400M "	½ "	(A.V.C. Grid)	....
63-239	24M ohm	1 Watt	(Oscillator Plate)	.....
63-244	500 "	¼ "	(1st Detector Cathode).	
63-251	Voltage Divider		(six tap)	....
63-252	Voltage Divider		(five tap)	....

Coils and Chokes

20-30	Antenna Coil...........................
20-31	Oscillator Coil........................
20-35	Detector Coil..........................
95-133	1st & 2nd I. F. Transformer............

Condensers

22-112	.1 mfd	300 volt	(2nd Detector Screen & Power Grid)............
22-113	.5 "	....	(R.F.1st Detector & I.F.Grid Return)..........
*22-115	.1 "	200 volt	(Four used, see below)........................
22-117	.5 "	....	(R.F.1st Detector, & I.F. Screen).............
22-137	.05 "	400 volt	(Oscillator Plate)............................
22-147	.0005	600 volt	(2nd Detector Plate & A.V.C.Screen)...........
22-170	.1 mfd	400 volt	(R.F.& 1st Detector Plate,2nd Detector Plate)..
22-171	.05 "	600 volt	(Tone Control)................................
22-172	2. "	450 volt	(Filter)......................................
22-173	8. "	500 volt	(Filter)......................................

Socket Voltages

Tube Type	Position	Fil. Volt.	Plate Volt.	Cath. Volt.	Screen Volt.	Supp. Volt.	Plate Current
Z-58	R.F.	2.4	190	0	95	0	7.
Z-58	1st Det.	2.4	190	2.3	95	2.3	4.
Z-56	Osc.	2.4	100	0	-	-	4.
Z-58	I.F.	2.4	190	0	90	0	2.
Z-57	2nd Det.	2.4	90	-60	70	-60	.2
Z-57	A.V.C.	2.4	-10	-65	-2	-65	0
Z-59	Power	2.4	175	-70	165	-70	25
Z-80	Rect.	5.	*350	-	-	-	*36

Line 115 Volts

All Controls Maximum

All readings, with exception of heaters, taken from socket connections to ground. Use 1,000 ohm per volt D. C. meter.)

BALANCE I.F. frequency at 175 K.C. Condenser gang at 1500 K.C. and oscillator padder at 600 K.C.

MODELS 500,501,503,514,
515,516,600,604,
606,610,616,618
Chassis 2037
Schematic

ZENITH RADIO CORP.

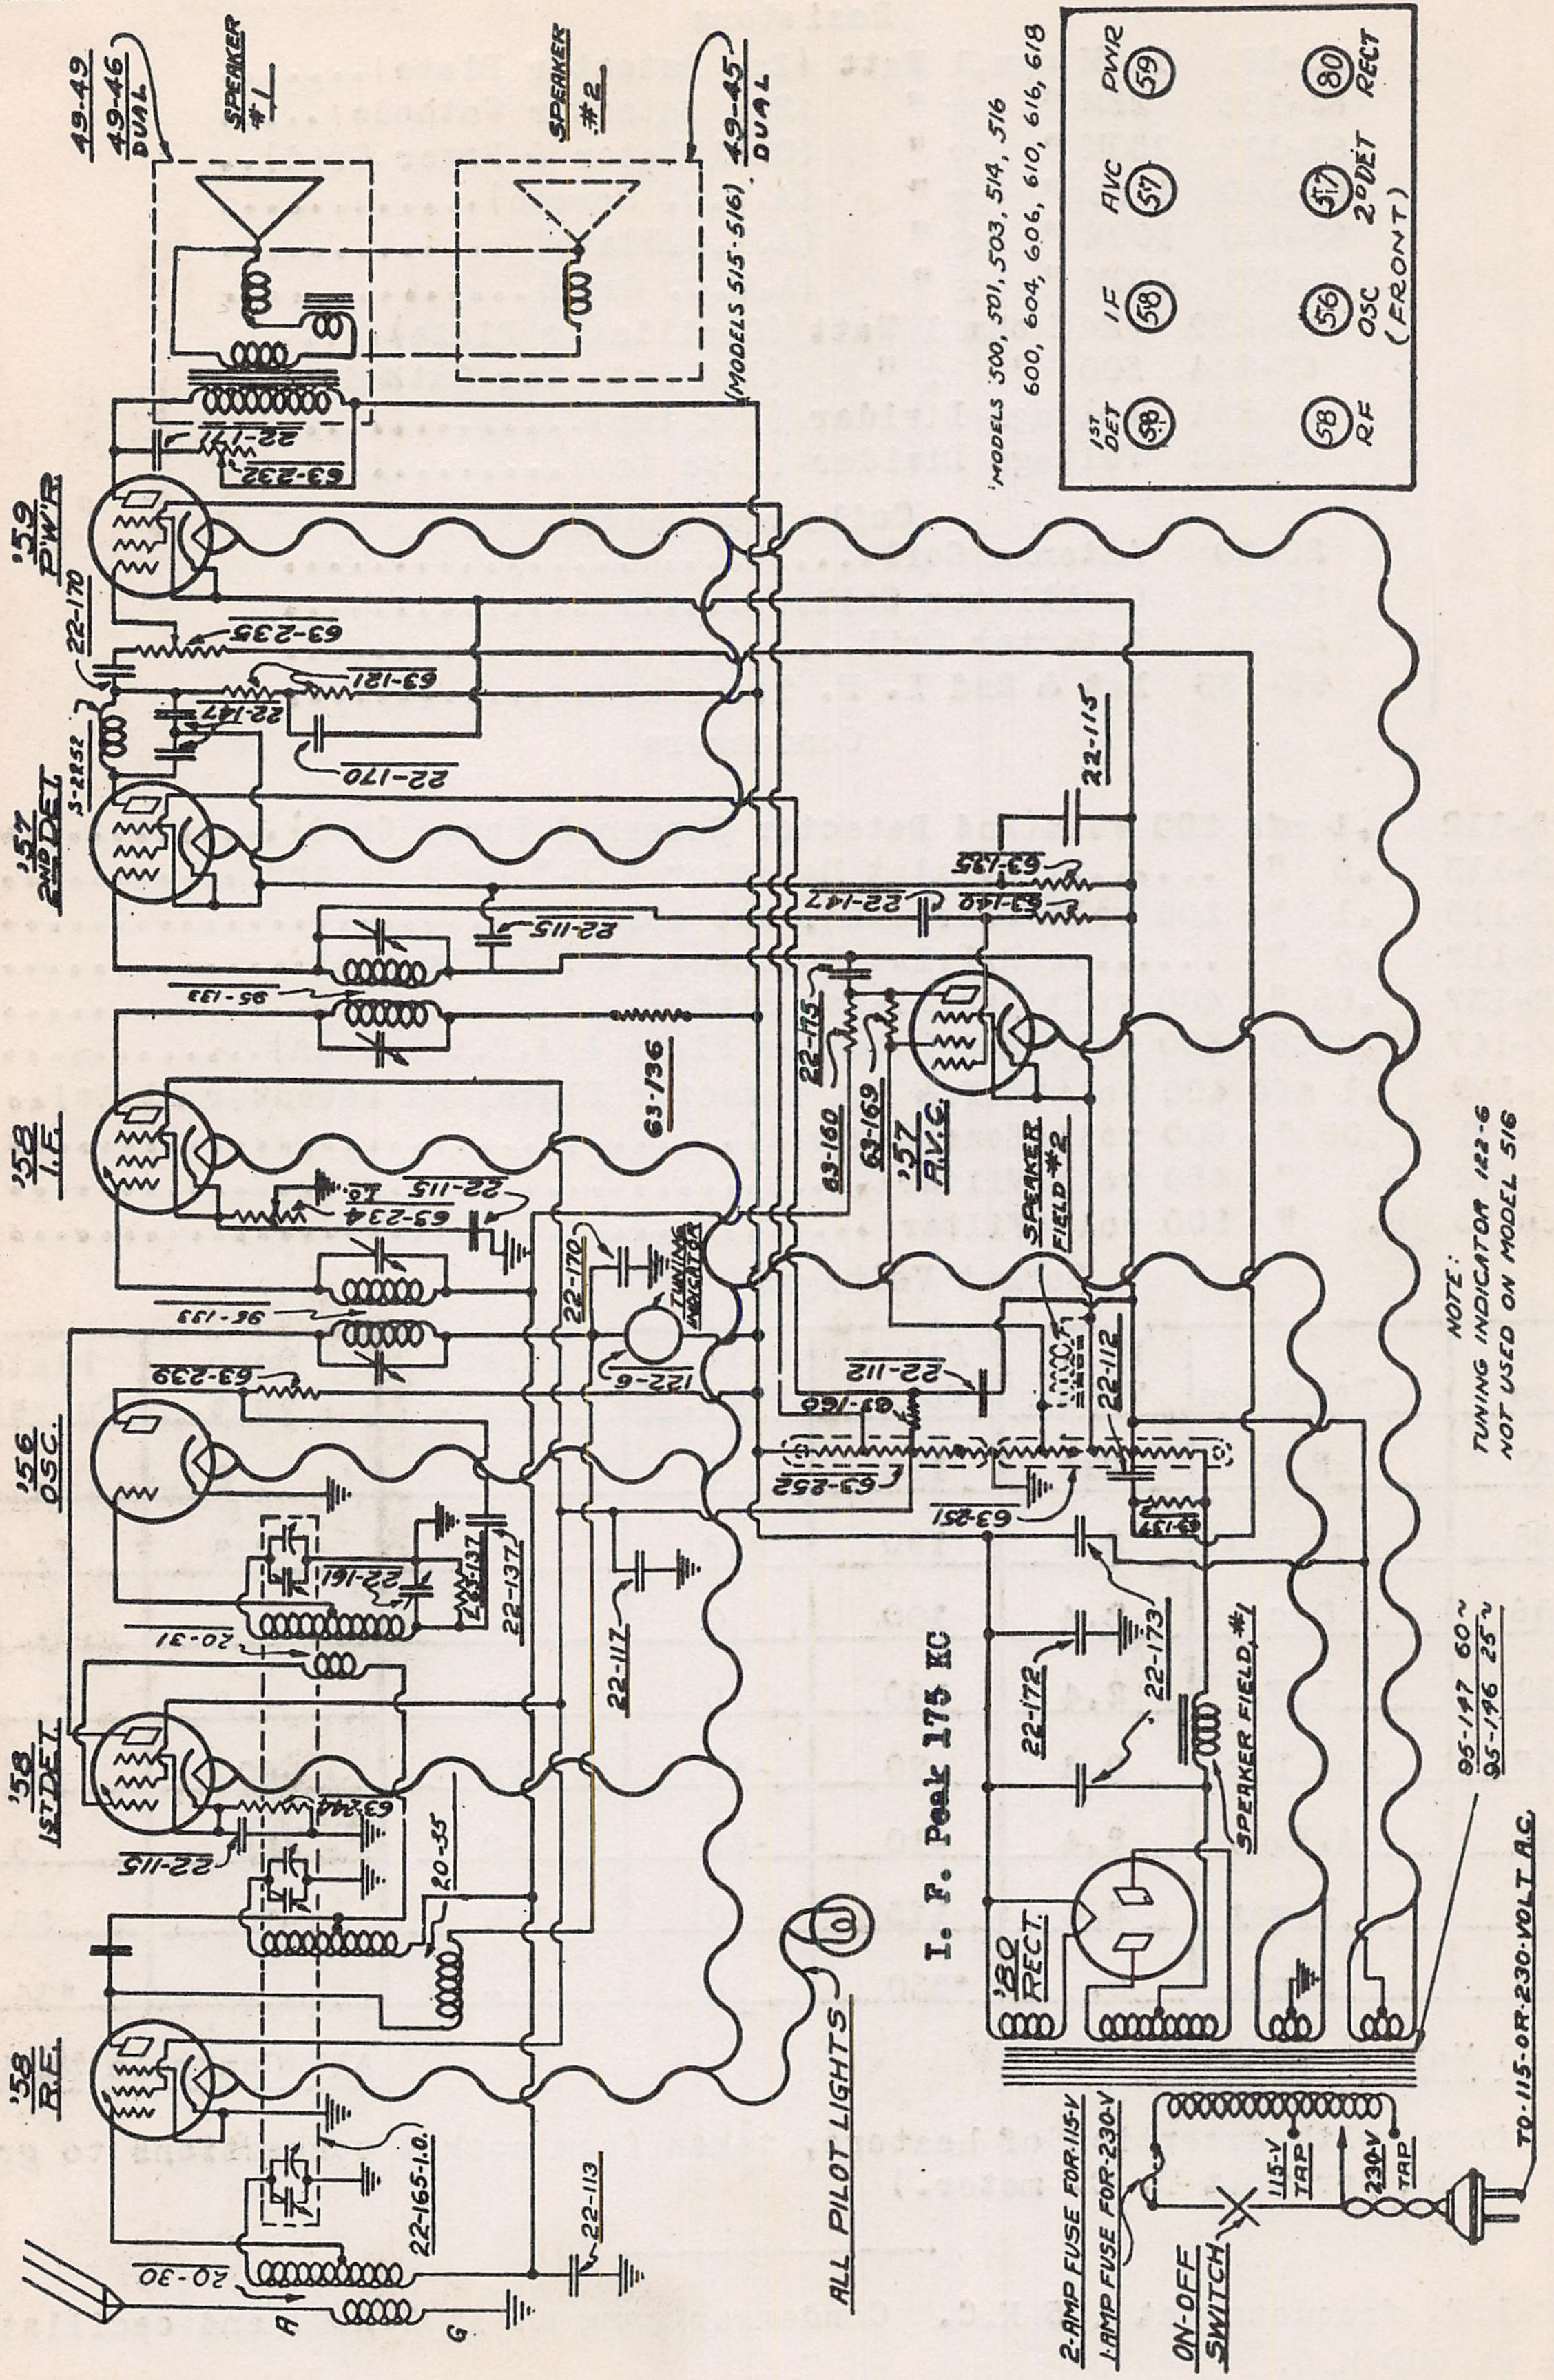
49-49
49-46 DUAL
SPEAKER #1
SPEAKER #2
49-45 DUAL
(MODELS 515-516)
MODELS 500, 501, 503, 514, 516
600, 604, 606, 610, 616, 618
PWR 59
AVC 57
2ND DET 57
RECT 80
IF 58
OSC 56
(FRONT)
1ST DET 58
RF 58
22-171
63-232
'59 PW'R
22-170
63-235
63-121
22-147
5-2852
'57 2ND DET
22-170
22-115
63-135
22-147
63-140
22-115
95-133
63-136
22-175
63-160
63-169
'57 A.V.C.
SPEAKER FIELD #2
'58 I.F.
22-115
63-234
22-170
TUNING INDICATOR
122-6
96-133
22-112
63-166
22-112
63-239
63-252
63-251
63-237
'56 OSC.
22-161
63-137
22-137
20-31
22-117
I. F. Peak 175 KC
22-172
22-173
SPEAKER FIELD #1
'58 1ST DET
63-244
22-115
20-35
'80 RECT.
ALL PILOT LIGHTS
'58 R.F.
22-165-1.0
22-113
20-30
A
G
2-AMP FUSE FOR 115-V
1-AMP FUSE FOR 230-V
ON-OFF SWITCH
115-V TAP
230-V TAP
95-147 60~
95-196 25~
TO 115-OR-230-VOLT A.C.
NOTE: TUNING INDICATOR 122-6 NOT USED ON MODEL 516